

SERVICE MANUAL

COMPACT DISC
STEREO CASSETTE RECORDER

BASIC CD MECHANISM : DA11T3
BASIC TAPE MECHANISM : TN-21ZVC-2000

This Service Manual is the "Revision Publishing" and replaces "Simple Manual"
(S/M Code No. 09-002-430-0T1).

SPECIFICATIONS

Tuner section

Frequency range, antenna — FM: 87.5 - 108.0 MHz Rod antenna,
AM: 530 - 1,710 kHz Ferrite bar antenna

Deck section

Track format — 4 tracks, 2 channels / Frequency range — Normal tape:
50 - 12,500 Hz (EIAJ) / Recording system — AC bias / Erasing system
— Magnet erase / Heads — Recording/playback head (1), Erasure head
(1)

CD player section

Disc — Compact disc / Scanning method — Non-contact optical
scanner (semiconductor laser)

General

Speaker — 100 mm cone type (2) / Output — Headphones jack
(stereo mini-jack) / Power output — CSD-A220: 2.5 W + 2.5 W (EIAJ 7
ohms, T.H.D. 10%), 1.9 W + 1.9 W (DIN 1% Rated Power), CSD-
A280: 4.5 W + 4.5 W (EIAJ 3.2 ohms, T.H.D. 10%), 3.3 W + 3.3 W
(DIN 1% Rated Power) / Power requirements — DC 12 V using eight
size C (R14) batteries, AC 110 - 120 V/220 - 240 V switchable, 50/60
Hz / Power consumption — CSD-A220: 16 W, CSD-A280: 22 W /
Dimensions — 445 (W) × 184 (H) × 277 (D) mm / Weight — CSD-
A220: 3.7 kg, CSD-A280: 3.9 kg (excluding batteries)

- Design and specifications are subject to change without notice.

ACCESSORIES/PACKAGE LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


REF. NO	PART NO.	KANRI NO.	DESCRIPTION
	1 8A-CD9-902-010		IB, LH(ESP)B
▲	2 87-A80-036-010		AC CORD SET ASSY, E W/FLTR VOL
	3 8Z-CDK-962-010		RC UNIT, RC-ZAT02(VS)
	4 8Z-CD5-634-010		COVER, AC SOCKET
▲	5 87-A90-312-010		PLUG, CONVERSION WTN-1157R1

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

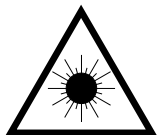

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

WARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.


The CLASS 1 LASER PRODUCT label is located on the rear exterior.

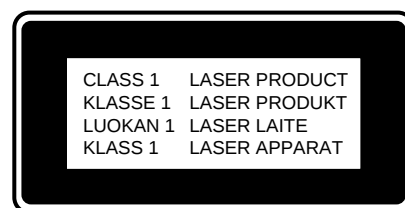

Precaution to replace Optical block (SF-P101NR)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in the right figure.

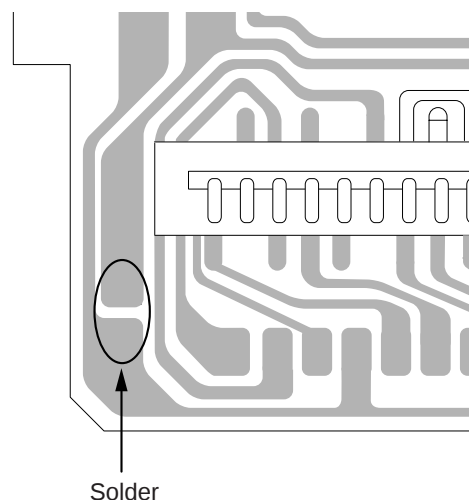

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
IC				C811	87-010-178-080		CHIP CAP 1000P
	87-A20-955-010	IC, LA1828		C812	87-010-178-080		CHIP CAP 1000P
	87-A21-090-010	IC, LA4600		C816	87-010-180-080		C-CER 1500P
	87-A21-520-040	C-IC, M61509FP		C817	87-010-180-080		C-CER 1500P
	87-A20-446-010	C-IC, LA9241ML		C821	87-010-401-080		CAP, ELECT 1-50V
	87-A20-459-010	C-IC, LC78622ED		C822	87-010-401-080		CAP, ELECT 1-50V
	87-A21-093-010	IC, LA6541D		C823	87-010-178-080		CHIP CAP 1000P
	8A-CD9-610-010	C-IC, LC865516A-5916		C824	87-010-178-080		CHIP CAP 1000P
	87-A20-650-010	IC, RPM6938-V11		C829	87-010-178-080		CHIP CAP 1000P
	87-A21-431-010	IC, BA4560N		C830	87-010-178-080		CHIP CAP 1000P
TRANSISTOR				C833	87-018-195-080		CAP, CER 1200P-16V
	89-327-143-080	TR, 2SC2714 (0.1W)		C834	87-010-248-080		CAP, ELECT 220-10V
	89-327-125-080	CHIP TR, 2SC2712GR		C835	87-010-322-080		C-CAP, S 100P-50 CH
	87-026-230-080	CHIP-TR, DTA114YK		C836	87-010-322-080		C-CAP, S 100P-50 CH
	87-026-213-080	CHIP-TR, DTC114YK		C843	87-010-197-080		CAP, CHIP 0.01 DM
	89-318-154-080	TR, 2SC1815Y		C844	87-018-124-080		CAP, CER 270P-50V
	89-112-965-080	TR, 2SA1296 (0.75W)		C845	87-010-178-080		CHIP CAP 1000P
	87-026-463-080	TR, 2SA933S (0.3W)		C846	87-010-263-080		CAP, ELECT 100-10V
	87-026-291-080	TR, DTC124XS		C851	87-010-186-080		CAP, CHIP 4700P
	89-213-702-080	TR, 2SB1370E		C852	87-010-178-080		CHIP CAP 1000P
	87-026-462-080	TR, 2SC1740 S(RS 0.3W)		C853	87-A11-145-080		CAP, TC U 0.01-50 Z F
	89-109-332-380	TR, 2SA933RS		CN201	87-099-018-010		CONN, 16P
	89-113-187-080	TR, 2SA1318TU		CN801	87-A60-110-010		CONN, 4P V S2M-4W
	87-026-295-080	TR, DTC144TK		CNA302	8A-CD9-629-010		CONN ASSY, 6P MA-TU
	87-026-237-080	CHIP-TR, DTC124XK		L801	87-007-342-010		COIL, OSC 85K BIAS
	89-317-403-080	TR, 2SC1740S		SP904	87-CD6-213-010		SPR-C, BATT (-)
	87-026-464-010	TR, DTC114TS		SW801	8Z-CD9-609-010		SW, SL 1-6-2 PS62D01
	87-026-464-080	TR, DTC114TS (0.3W)		CD C.B			
DIODE				C30	87-010-260-080		CAP, ELECT 47-25V
	87-020-465-080	DIODE, 1SS133 (110MA)		C251	87-010-404-080		CAP, E 4.7-50 M 11L SME
	87-027-607-080	ZENER, HZ7B3L		C263	87-010-178-080		CHIP CAP 1000P
	87-070-345-080	DIODE, 1N4148		C264	87-010-178-080		CHIP CAP 1000P
	87-A40-648-080	ZENER, MTZJ8.2A		C266	87-010-545-080		CAP, ELECT 0.22-50V
	87-A40-234-080	ZENER, MTZJ5.6A		C267	87-010-545-080		CAP, ELECT 0.22-50V
	87-017-978-080	DIODE, 1N4003		C271	87-010-237-080		CAP, ELECT 1000-16V
	87-027-702-080	DIODE, ZENER HZ6C2L (200MA)		C272	87-010-237-080		CAP, ELECT 1000-16V
	87-A40-465-010	DIODE, FR202		C277	87-010-404-080		CAP, ELECT 4.7-50V
				C278	87-010-263-080		CAP, ELECT 100-10V
MAIN C.B				C279	87-010-263-080		CAP, ELECT 100-10V
C211	87-010-805-080	C-CAP, S 0.15-50 M F		C301	87-016-495-000		CAP, E 3300-25 M SMG
C212	87-010-805-080	C-CAP, S 0.15-50 M F		C302	87-010-265-080		CAP, E 33-16 M 11L SME
C215	87-016-460-080	C-CAP, S 0.22-16 B		C306	87-010-404-080		CAP, ELECT 4.7-50V
C216	87-016-460-080	C-CAP, S 0.22-16 B		C307	87-010-401-080		CAP, ELECT 1-50V
C231	87-010-213-080	C-CAP, S 0.015-50 B		C308	87-010-221-080		CAP, ELECT 470-10V
C232	87-010-213-080	C-CAP, S 0.015-50 B		C311	87-010-374-080		CAP, ELECT 47-10V
C233	87-A10-201-080	C-CAP, S0.33-16 KB		C312	87-010-385-080		CAP, ELECT 220-25V
C234	87-A10-201-080	C-CAP, S0.33-16 KB		C321	87-010-197-080		CAP, CHIP 0.01 DM
C235	87-016-669-080	C-CAP, S 0.1-25 K B		C322	87-010-263-080		CAP, ELECT 100-10V
C236	87-016-669-080	C-CAP, S 0.1-25 K B		C325	87-010-405-080		CAP, ELECT 10-50V
C237	87-010-408-080	CAP, E 470-6.3 M SME		C401	87-010-403-080		CAP, ELECT 3.3-50V
C239	87-010-197-080	CAP, CHIP 0.01 DM		C402	87-010-197-080		CAP, CHIP 0.01 DM
C240	87-010-197-080	CAP, CHIP 0.01 DM		C403	87-010-263-080		CAP, ELECT 100-10V
C247	87-010-401-080	CAP, E 1-50 M 11L SME		C404	87-010-248-080		CAP, ELECT 220-10V
C248	87-010-401-080	CAP, E 1-50 M 11L SME		C405	87-010-197-080		CAP, CHIP 0.01 DM
C310	87-010-248-080	CAP, ELECT 220-10V		C406	87-010-374-080		CAP, ELECT 47-10V
C316	87-010-263-080	CAP, E 100-10 M 11L SME		C407	87-010-178-080		CHIP CAP 1000P
C317	87-015-819-080	C-CAP, 0.01-50 K B C3216		C408	87-010-198-080		CAP, CHIP 0.022
C801	87-010-248-080	CAP, ELECT 220-10V		C409	87-010-248-080		CAP, ELECT 220-10V
C805	87-012-365-080	C-CAP, S 0.027-25VBK		C410	87-010-263-080		CAP, ELECT 100-10V
C806	87-012-365-080	C-CAP, S 0.027-25VBK		C411	87-A11-177-080		C-CAP, S 0.15-16 K B
C807	87-010-405-080	CAP, ELECT 10-50V		C412	87-010-401-080		CAP, ELECT 1-50V
C808	87-010-405-080	CAP, ELECT 10-50V		C413	87-016-369-080		C-CAP, S 0.033-25 B K
C809	87-010-405-080	CAP, ELECT 1-50V		C414	87-010-405-080		CAP, ELECT 10-50V
C810	87-010-405-080	CAP, ELECT 1-50V		C416	87-010-545-080		CAP, ELECT 0.22-50V
				C417	87-012-157-080		C-CAP, S 330P-50 CH
				C418	87-010-213-080		C-CAP, S 0.015-50 B
				C419	87-A11-608-080		C-CAP, S 0.33-25 K B
				C420	87-016-369-080		C-CAP, S 0.033-25 B K

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C421	87-A11-177-080		C-CAP,S 0.15-16 K B	CN403	87-099-201-010		CONN,8P 6216 H
C422	87-010-184-080		CHIP CAPACITOR 3300P(K)	CN802	8A-CH4-687-010		CONN,4P V 2.5
C423	87-010-992-080		C-CAP,S 0.047-25 B	CNA402	8A-CD9-625-010		CONN ASSY,6P CD-ME
C424	87-016-460-080		C-CAP,S 0.22-16 B	L401	87-003-102-080		COIL, 10UH
C425	87-010-176-080		C-CAP,S 680P-50 SL	L404	87-003-152-080		COIL, 100UH
C426	87-A11-608-080		C-CAP,S 0.33-25 K B	R840	87-029-124-010		RES,FUSE 2.2-1/4
C428	87-010-197-080		CAP, CHIP 0.01 DM	SFR430	87-024-437-080		SFR100K,RH063EC
C429	87-010-186-080		CAP,CHIP 4700P	X401	8Z-CD5-633-010		VIB, CER16.93MHZ FCR16.93M2
C430	87-012-156-080		C-CAP,S 220P-50 CH				
C431	87-010-545-080		CAP, ELECT 0.22-50V				
C432	87-010-374-080		CAP, ELECT 47-10V				
C433	87-010-401-080		CAP, ELECT 1-50V				
C434	87-010-184-080		CHIP CAPACITOR 3300P(K)	C601	87-010-313-080		CAP, CHIP 18P
C435	87-010-197-080		CAP, CHIP 0.01 DM	C602	87-010-315-080		C-CAP,S 27P-50 CH
C436	87-010-374-080		CAP, ELECT 47-10V	C603	87-010-319-080		C-CAP,S 56P-50 CH
C437	87-010-404-080		CAP, ELECT 4.7-50V	C604	87-010-317-010		CHIP CAP,S 39P CH
C438	87-016-669-080		C-CAP,S 0.1-25 K B	C605	87-010-264-040		CAP,E 100-10 5L
C439	87-010-178-080		CHIP CAP 1000P	C606	87-010-805-080		CAP, S 1-16
C440	87-010-145-080		C-CAP,S 1P-50 C CH GRM	C607	87-010-452-080		CAPACITOR,1-16
C441	87-010-197-080		CAP, CHIP 0.01 DM	C608	87-010-405-080		CAP, ELECT 10-50V
C442	87-010-313-080		CAP, CHIP 18P	C609	87-010-400-080		CAP, ELECT 0.47-50V
C445	87-012-368-080		C-CAP,S 0.1-50 F	C610	87-010-178-010		CAP, S 1000P-50
C446	87-012-368-080		C-CAP,S 0.1-50 F	C611	87-A10-189-040		CAP,E 220-10
C447	87-012-368-080		C-CAP,S 0.1-50 F	C612	87-010-405-080		CAP, ELECT 10-50V
C448	87-010-315-080		C-CAP,S 27P-50 CH	C613	87-012-368-080		C-CAP,S 0.1-50 F
C450	87-012-140-080		CAP 470P	C614	87-010-312-080		C-CAP,S 15P-50 CH
C451	87-012-156-080		C-CAP,S 220P-50 CH	C615	87-010-805-080		CAP, S 1-16
C455	87-010-247-080		CAP, ELECT 100-50V	C616	87-010-805-080		CAP, S 1-16
C457	87-010-312-080		C-CAP,S 15P-50 CH	C619	87-010-401-080		CAP,ELECT 1-50V
C458	87-010-312-080		C-CAP,S 15P-50 CH	C635	87-018-211-080		CAP,TC U 0.01-50 Z F SA
C459	87-010-263-080		CAP, ELECT 100-10V	CN601	87-099-033-010		16P 6216 H
C460	87-015-819-080		CAPACITOR,0.01	CN602	87-099-201-010		CONN,8P 6216 H
C461	87-010-197-080		CAP, CHIP 0.01 DM	CN604	8A-CD9-623-010		CONN ASSY,4P KEY
C462	87-010-248-080		CAP, ELECT 220-10V	JW132	87-003-098-080		COIL,2.2UH
C463	87-010-197-080		CAP, CHIP 0.01 DM	JW133	87-003-098-080		COIL,2.2UH
C465	87-010-404-080		CAP, ELECT 4.7-50V	L603	87-003-098-080		COIL,2.2UH
C466	87-012-368-080		C-CAP,S 0.1-50 F	L604	87-003-098-080		COIL,2.2UH
C467	87-010-263-080		CAP, ELECT 100-10V	L605	87-003-098-080		COIL,2.2UH
C469	87-012-154-080		C-CAP,S 150P-50 CH	L606	87-003-098-080		COIL,2.2UH
C470	87-010-544-080		CAP, ELECT 0.1-50V	L607	87-003-098-080		COIL,2.2UH
C471	87-015-785-080		CHIP CAPACITOR, 0.1FZ-25Z	L608	87-003-098-080		COIL,2.2UH
C472	87-015-785-080		CHIP CAPACITOR, 0.1FZ-25Z	L609	87-003-098-080		COIL,2.2UH
C473	87-015-785-080		CHIP CAPACITOR, 0.1FZ-25Z	LED602	88-CD6-630-010		LED,934ID RED
C474	87-015-785-080		CHIP CAPACITOR, 0.1FZ-25Z	LED603	88-CD6-630-010		LED,934ID RED
C475	87-010-197-080		CAP, CHIP 0.01 DM	LED606	88-CD6-630-010		LED,934ID RED
C476	87-010-236-080		CAP,E 1000-10 SME	LED607	88-CD6-630-010		LED,934ID RED
C477	87-010-197-080		CAP, CHIP 0.01 DM	LED608	88-CD6-630-010		LED,934ID RED
C478	87-010-263-080		CAP, ELECT 100-10V	LED610	88-CD6-631-010		LED,934GD GRN
C479	87-010-197-080		CAP, CHIP 0.01 DM	LED611	87-CD8-616-010		LED,SA36-11 HWA-11.0
C480	87-010-221-080		CAP, ELECT 470-10V	S601	87-A91-704-080		SW,TACT EVQ 214 05R
C481	87-010-405-080		CAP, ELECT 10-50V	S602	87-A91-704-080		SW,TACT EVQ 214 05R
C482	87-010-405-080		CAP, ELECT 10-50V	S603	87-A91-704-080		SW,TACT EVQ 214 05R
C489	87-012-368-080		C-CAP,S 0.1-50 F	S604	87-A91-704-080		SW,TACT EVQ 214 05R
C490	87-012-368-080		C-CAP,S 0.1-50 F	S605	87-A91-704-080		SW,TACT EVQ 214 05R
C491	87-010-197-080		CAP, CHIP 0.01 DM	S609	87-A91-704-080		SW,TACT EVQ 214 05R
C492	87-010-221-080		CAP, ELECT 470-10V	S611	87-A91-704-080		SW,TACT EVQ 214 05R
C493	87-010-180-080		C-CAP,S 1500P-50 K B C2012	X601	87-030-273-010		VIB,XTAL 32.768K5PPM
C494	87-010-197-080		CAP, CHIP 0.01 DM				
C501	87-012-368-080		C-CAP,S 0.1-50 F				
C502	87-010-322-080		C-CAP,S 100P-50 CH				
C503	87-010-322-080		C-CAP,S 100P-50 CH				
C504	87-010-322-080		C-CAP,S 100P-50 CH				
C505	87-010-322-080		C-CAP,S 100P-50 CH				
C506	87-010-322-080		C-CAP,S 100P-50 CH				
C510	87-016-669-080		C-CAP,S 0.1-25 K B				
C831	87-010-198-080		CAP, CHIP 0.022				
CN202	8A-CH4-689-010		CONN,3P V 2.5	C6	87-010-378-080		CAP, ELECT 10-16V
CN205	87-A60-109-010		CONN,2P V S2M-2W	C7	87-018-208-080		CAP 0.047-50F
CN301	8A-CH4-689-010		CONN,3P V 2.5	C8	87-010-197-080		CAP, CHIP 0.01 DM
CN401	87-A60-424-010		CONN,16P V TOC-B	C9	87-010-154-080		CAP CHIP 10P
				C10	87-010-197-080		CAP, CHIP 0.01 DM

FRONT C.B

TUNER C.B

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C11	87-010-154-080		CAP CHIP 10P
C12	87-010-314-080		C-CAP,S 22P-50V
C13	87-010-148-080		C-CAP,S 4P-50 C CH GRM
C14	87-012-141-080		0.01-25 K B C2012
C15	87-010-197-080		C-CAP,S0.01-25 K B C 2012
C16	87-010-178-080		CHIP CAP 1000P
C17	87-016-669-080		C-CAP,S 0.1-25 K B
C18	87-010-197-080		CAP, CHIP 0.01 DM
C19	87-010-196-080		CHIP CAPACITOR,0.1-25
C20	87-010-400-080		CAP, ELECT 0.47-50V
C21	87-010-403-080		CAP, ELECT 3.3-50V
C22	87-010-197-080		CAP, CHIP 0.01 DM
C24	87-010-197-080		CAP, CHIP 0.01 DM
C25	87-010-197-080		CAP, CHIP 0.01 DM
C26	87-012-141-080		CHIP-CAPACITOR,0.22-16F
C27	87-012-141-080		CHIP-CAPACITOR,0.22-16F
C28	87-010-992-080		C-CAP,S 0.047-25 B
C29	87-010-992-080		C-CAP,S 0.047-25 B
C30	87-010-248-080		CAP, ELECT 220-10V
C31	87-010-379-080		CAP, ELECT 22-16V
C32	87-010-197-080		CAP, CHIP 0.01 DM
C33	87-010-197-080		CAP, CHIP 0.01 DM
C34	87-010-197-080		CAP, CHIP 0.01 DM
C35	87-010-197-080		CAP, CHIP 0.01 DM
C36	87-010-263-080		CAP,ELECT 100-10V
C37	87-012-155-080		C-CAP 180P-50CH
C39	87-010-197-080		CAP, CHIP 0.01 DM
C51	87-010-197-080		CAP, CHIP 0.01 DM
C56	87-010-152-080		C-CAP,S 8P-50 CH
CF1	87-A90-128-010		FLTR,AM IF CFAL-455
CF2	87-008-261-010		FILTER, SFE10.7MA5-A
CF3	87-008-261-010		FILTER, SFE10.7MA5-A
CN2	87-A60-116-010		CONN,6P HS2M-6WR
D13	87-A40-128-080		C-VARI-CAP,HVU202A
L2	87-A50-346-010		COIL,FM BPF D
L3	87-A50-350-010		COIL,BAR ANT AMN (COI)
L4	87-A50-345-010		COIL,FM RF EX
L5	87-A50-342-010		COIL,FM OSC D
L6	87-A50-337-010		COIL,AM OSC (TOKO)
L7	87-A50-336-010		COIL,AM IFT (TOKO)
L8	87-A50-335-010		COIL,FM IFT (TOKO)
L9	87-A50-334-010		COIL,FM DET (TOKO)
L10	87-005-849-080		COIL,10UH(CECS)
PVC1	87-A91-315-010		TUN-CAP,40P-140P D(TWD)
SW1	87-A91-548-010		SW,SL-2-3 SK23E01G06

HP C.B

CN204	87-A60-685-010		CONN,4P H WHT EH
CN605	87-A60-114-010		CONN,4P H S2M-4WR
CNA203	8A-CD9-628-010		CONN ASSY,3P MA-HP
J251	87-A60-569-010		JACK,HTJ-035-18
S606	87-A91-704-080		SW,TACT EVQ 214 05R
S607	87-A91-704-080		SW,TACT EVQ 214 05R
S608	87-A91-704-080		SW,TACT EVQ 214 05R
S614	87-A91-704-080		SW,TACT EVQ 214 05R
S615	87-A91-704-080		SW,TACT EVQ 214 05R

POWER C.B

C901	87-010-192-080		C-CAP,S 0.022-50 F
C902	87-010-192-080		C-CAP,S 0.022-50 F
C903	87-010-192-080		C-CAP,S 0.022-50 F
C904	87-010-192-080		C-CAP,S 0.022-50 F
CNA901	8A-CD9-627-010		CONN ASSY,3P PWR
△PR901	87-A90-092-080		PROTECTOR,2.5A 491 60V

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
BATT C.B			
VOLTAGE C.B			
△SW901	87-036-389-010		SW,PUSH 1-1-1 R8120125
MOTOR C.B			
M2	9X-262-576-910		MOTOR GEAR ASSY
PIN3	91-564-722-110		CONNECTOR 6P
SW1	91-572-085-120		LEAF SW

- Regarding connectors, they are not stocked as they are not the initial order items.
The connectors are available after they are supplied from connector manufacturers upon the order is received.

○チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち

Chip Resistor Part Coding



A
抵抗部品コード
Resistor Code

桁表示
Figure

抵抗値
Value of resistor

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm)				抵抗コード : A Resistor Code : A
				外形／Form	L	W	t	
1/16W	1005	± 5%	CJ		1.0	0.5	0.35	104
1/16W	1608	± 5%	CJ		1.6	0.8	0.45	108
1/10W	2125	± 5%	CJ		2	1.25	0.45	118
1/8W	3216	± 5%	CJ		3.2	1.6	0.55	128

 
TRANSISTOR ILLUSTRATION




ECB
2SA1296
2SA1318
2SC1815



ECB
2SA933S
2SC1740S
DTC114TS
DTC124XS




BCE
2SB1370

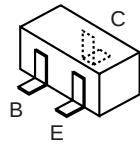


BEC
2SC2714
DTC114TK
DTC114YK
DTC114YS
DTC144EK

IC BLOCK DIAGRAM


IC, LA1828

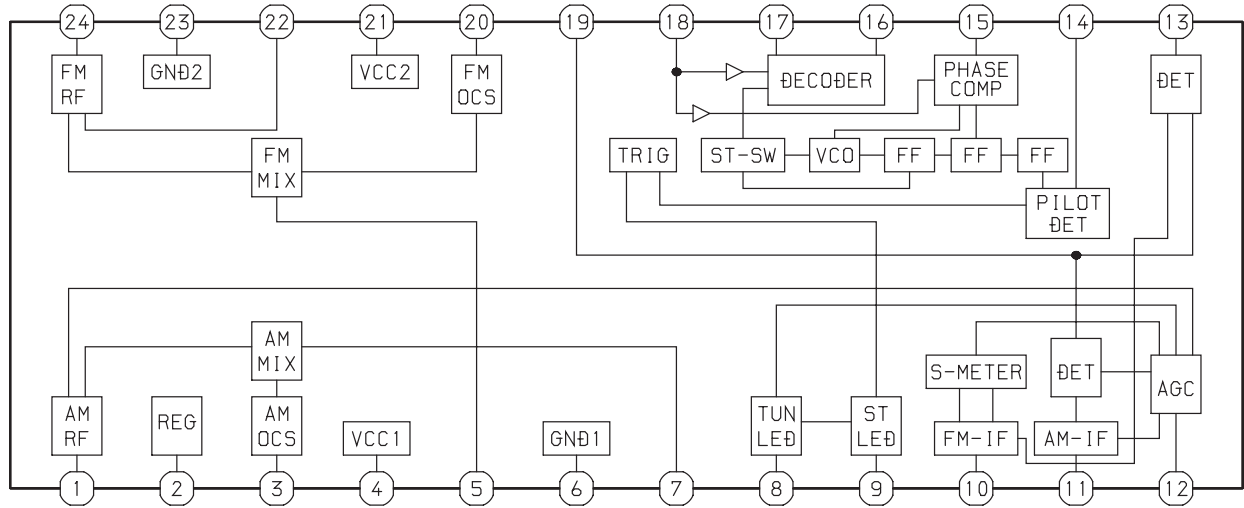

IC, M61509FP

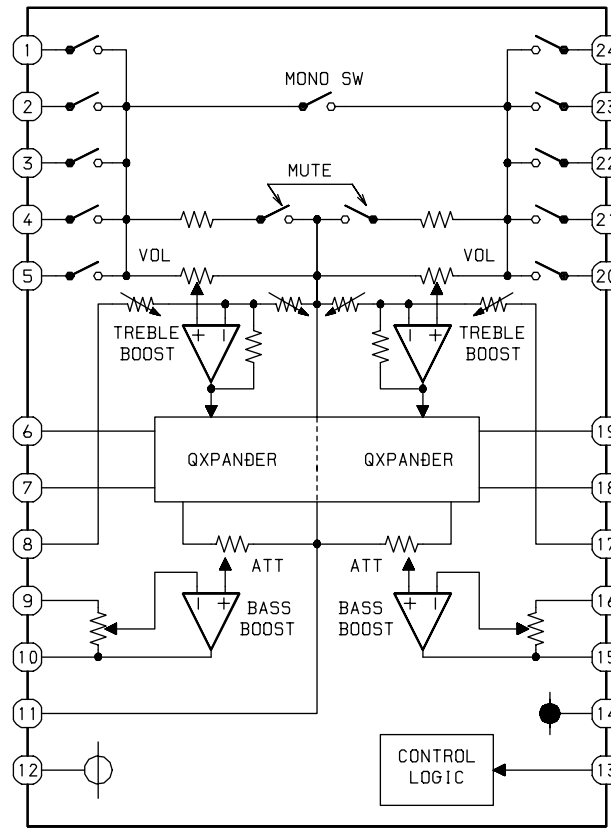



IC, LA6541D

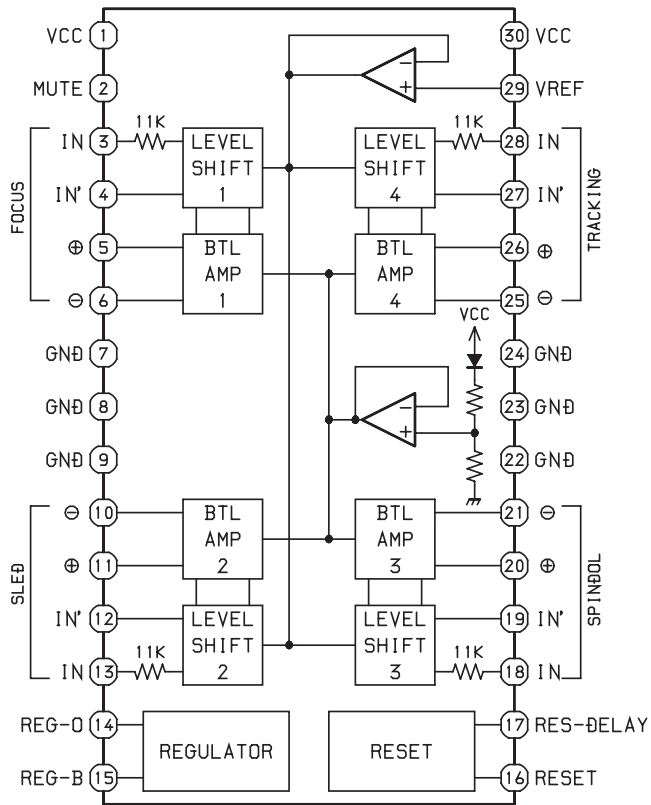





SCHEMATIC DIAGRAM-1 (MAIN/CD 1/2/H.P./POWER)

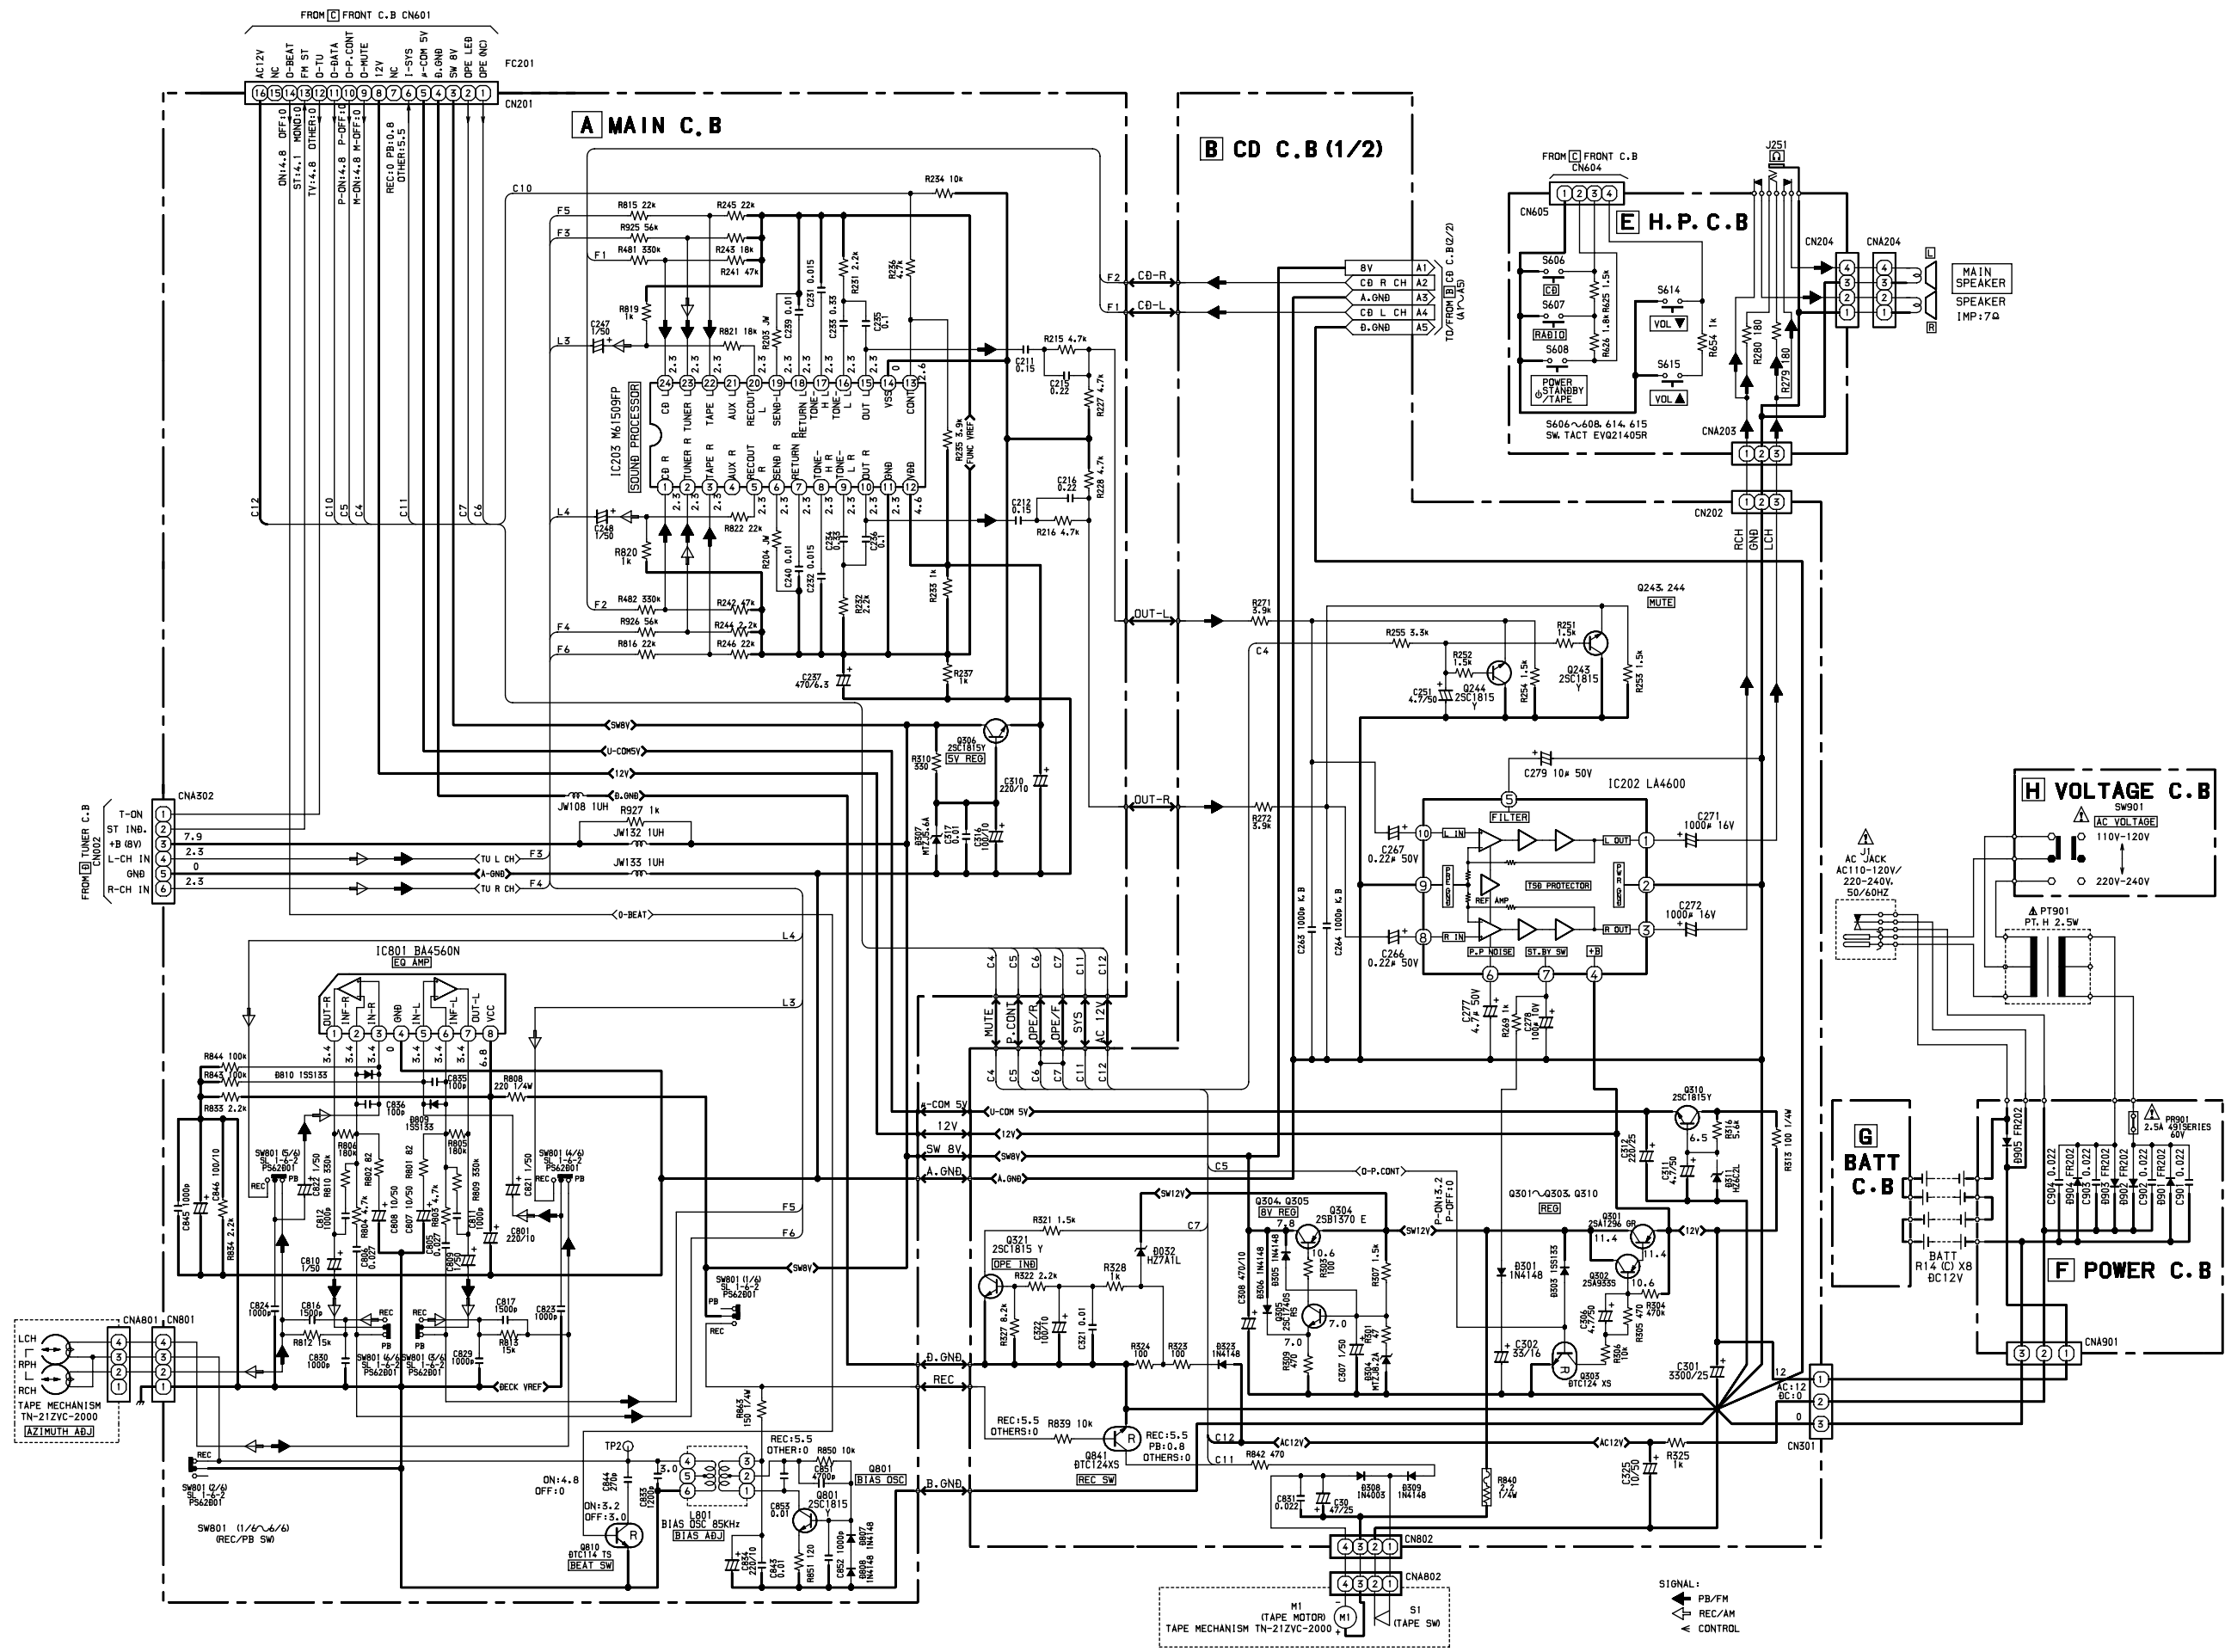

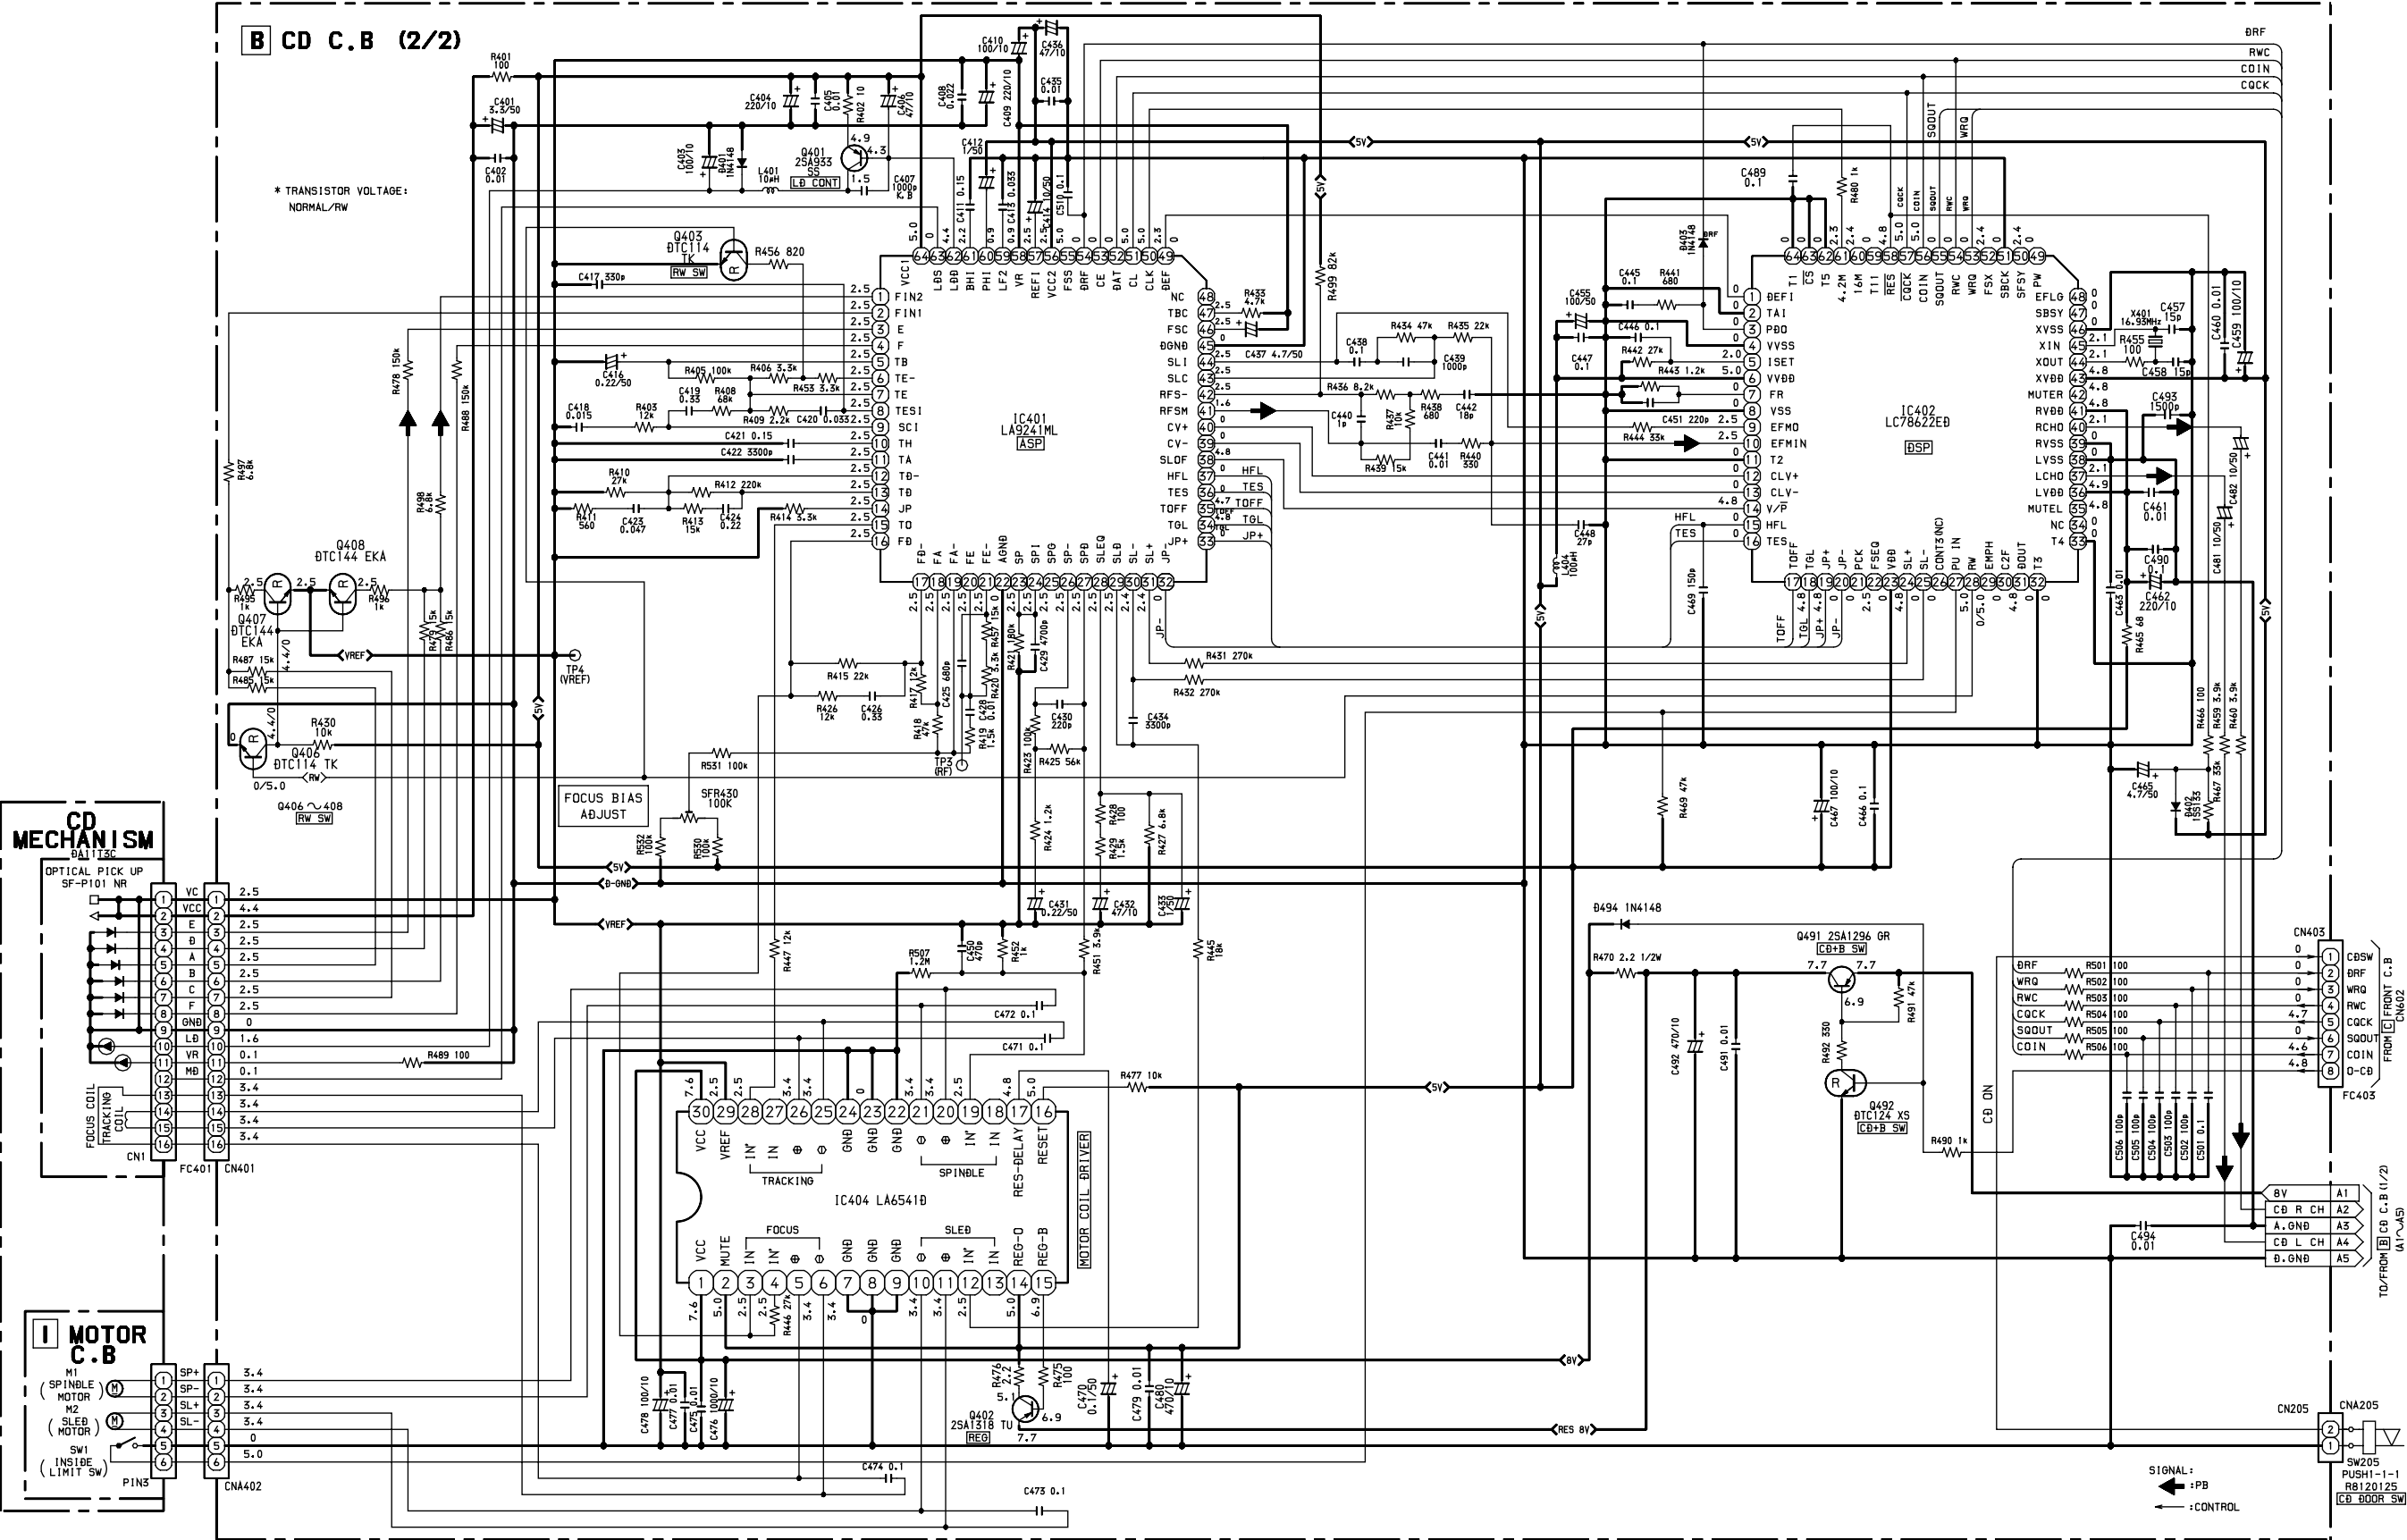

SCHEMATIC DIAGRAM-3 (FRONT)

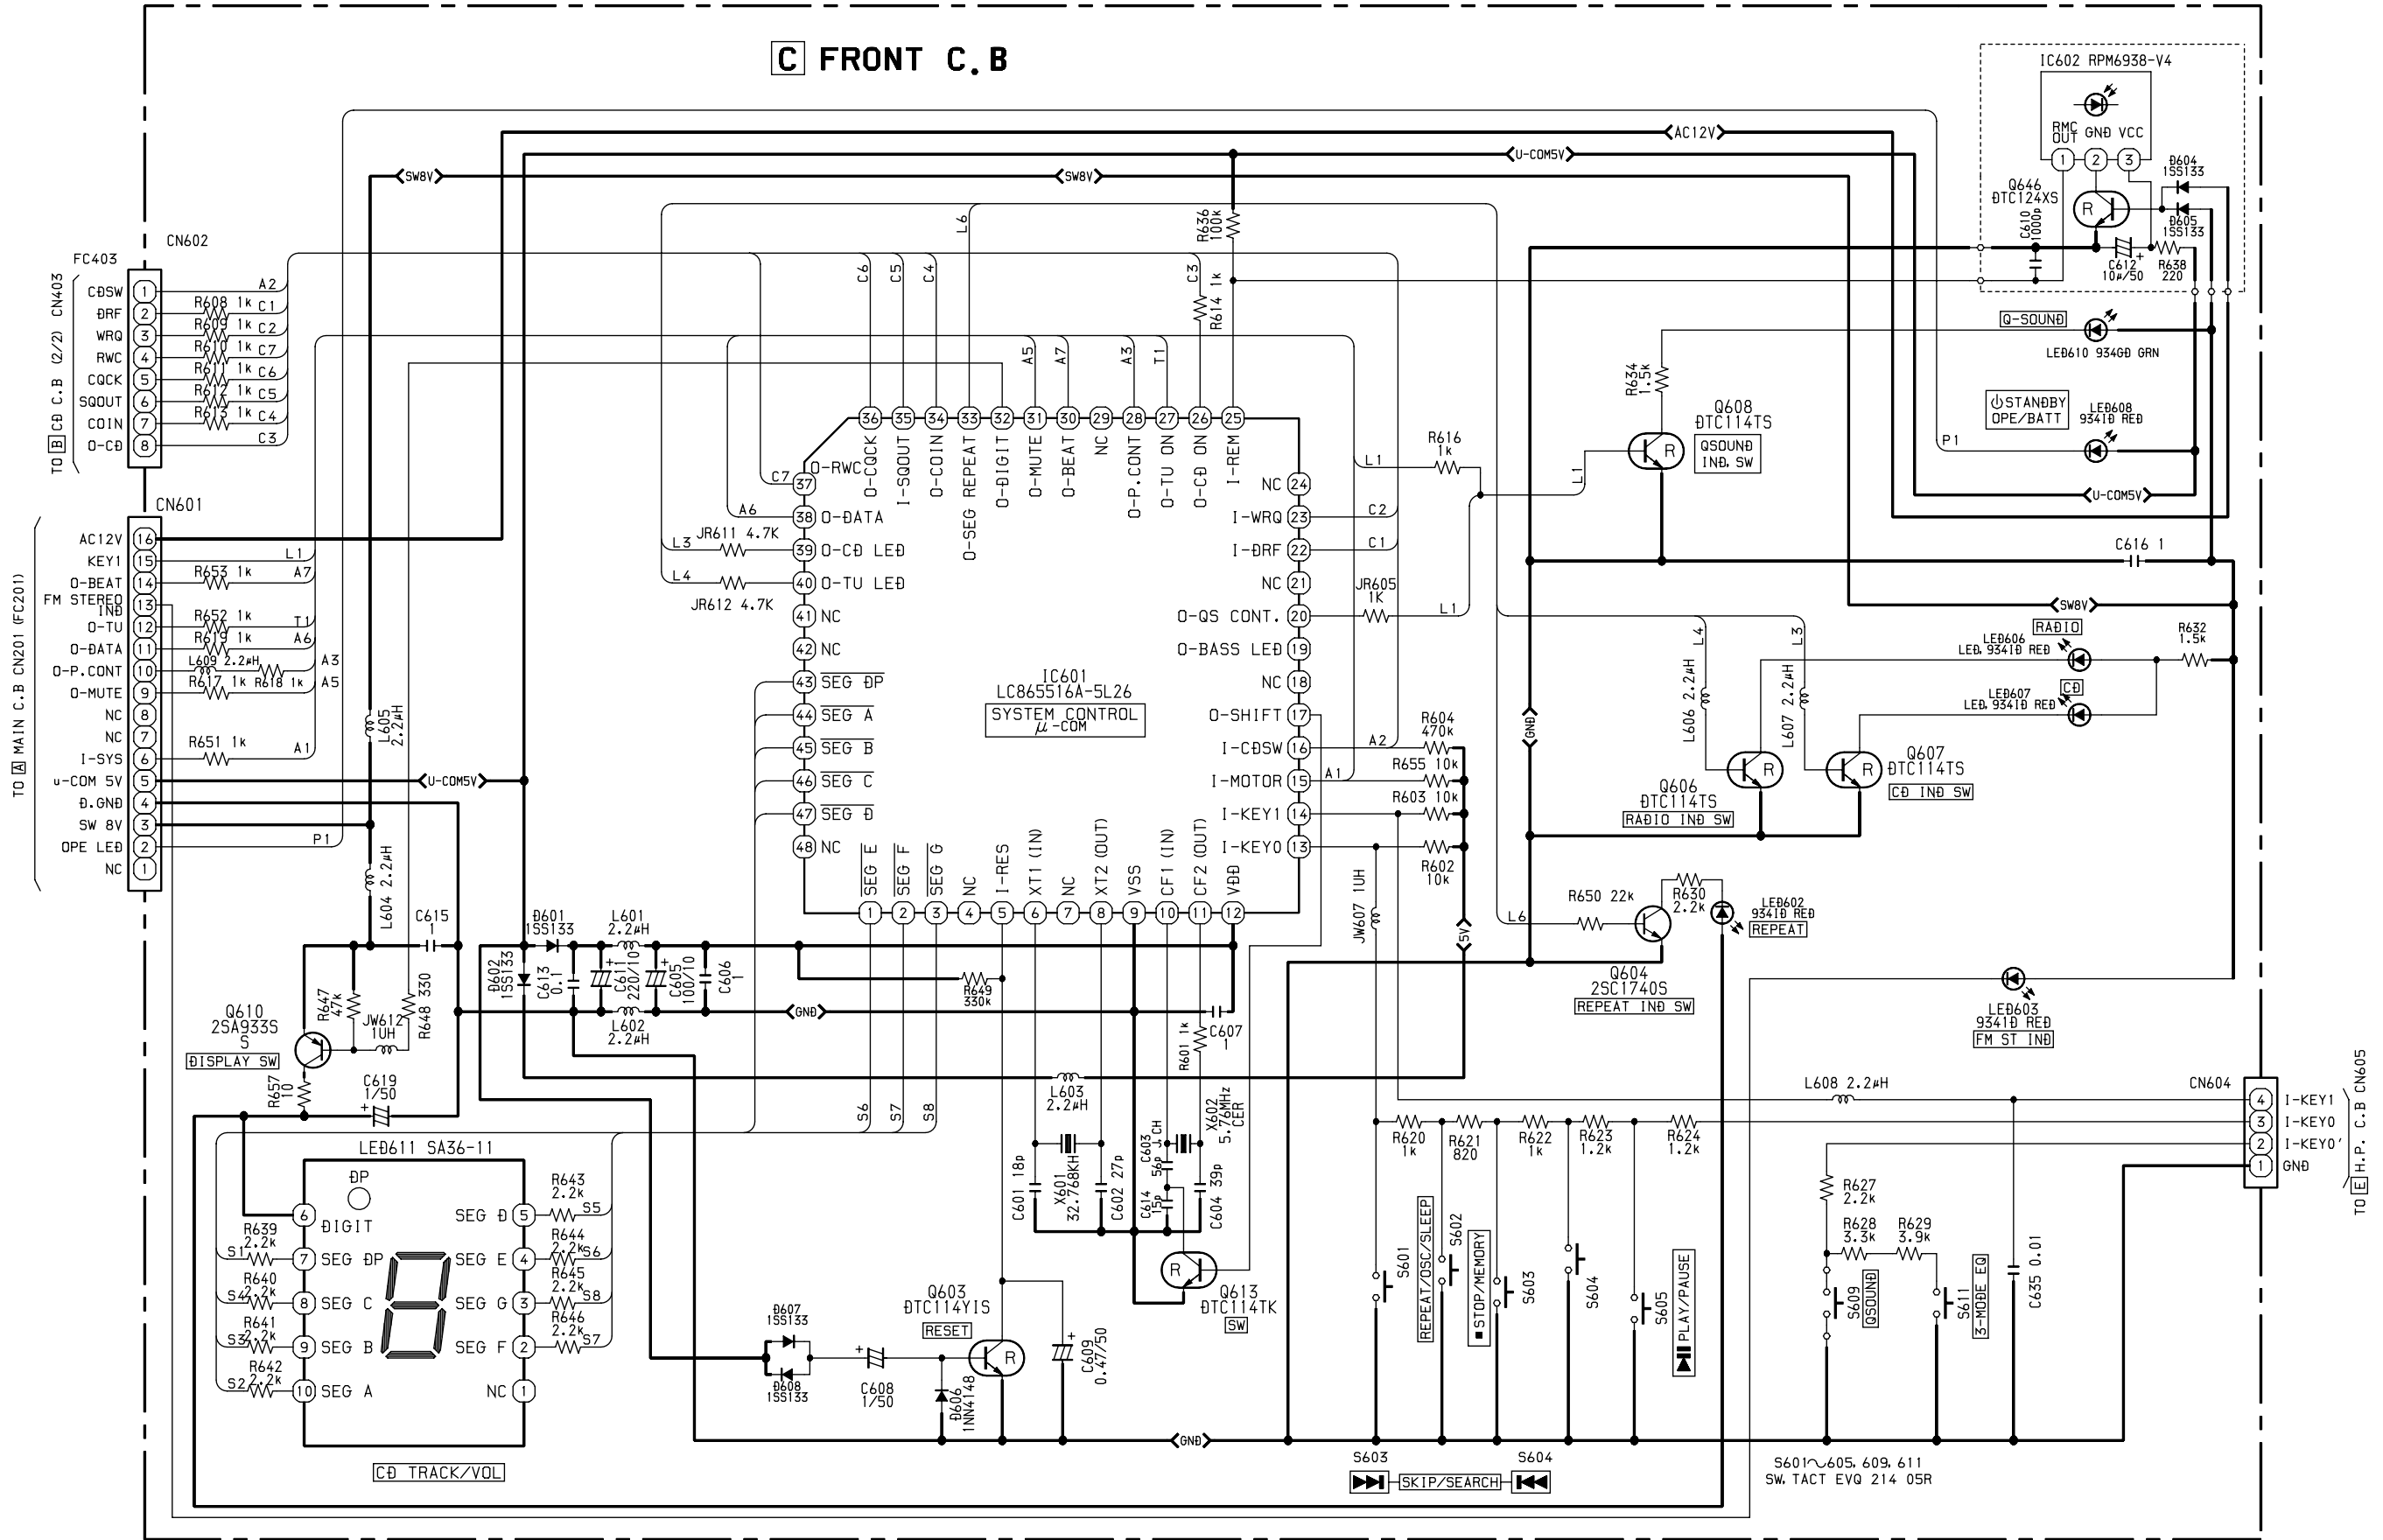

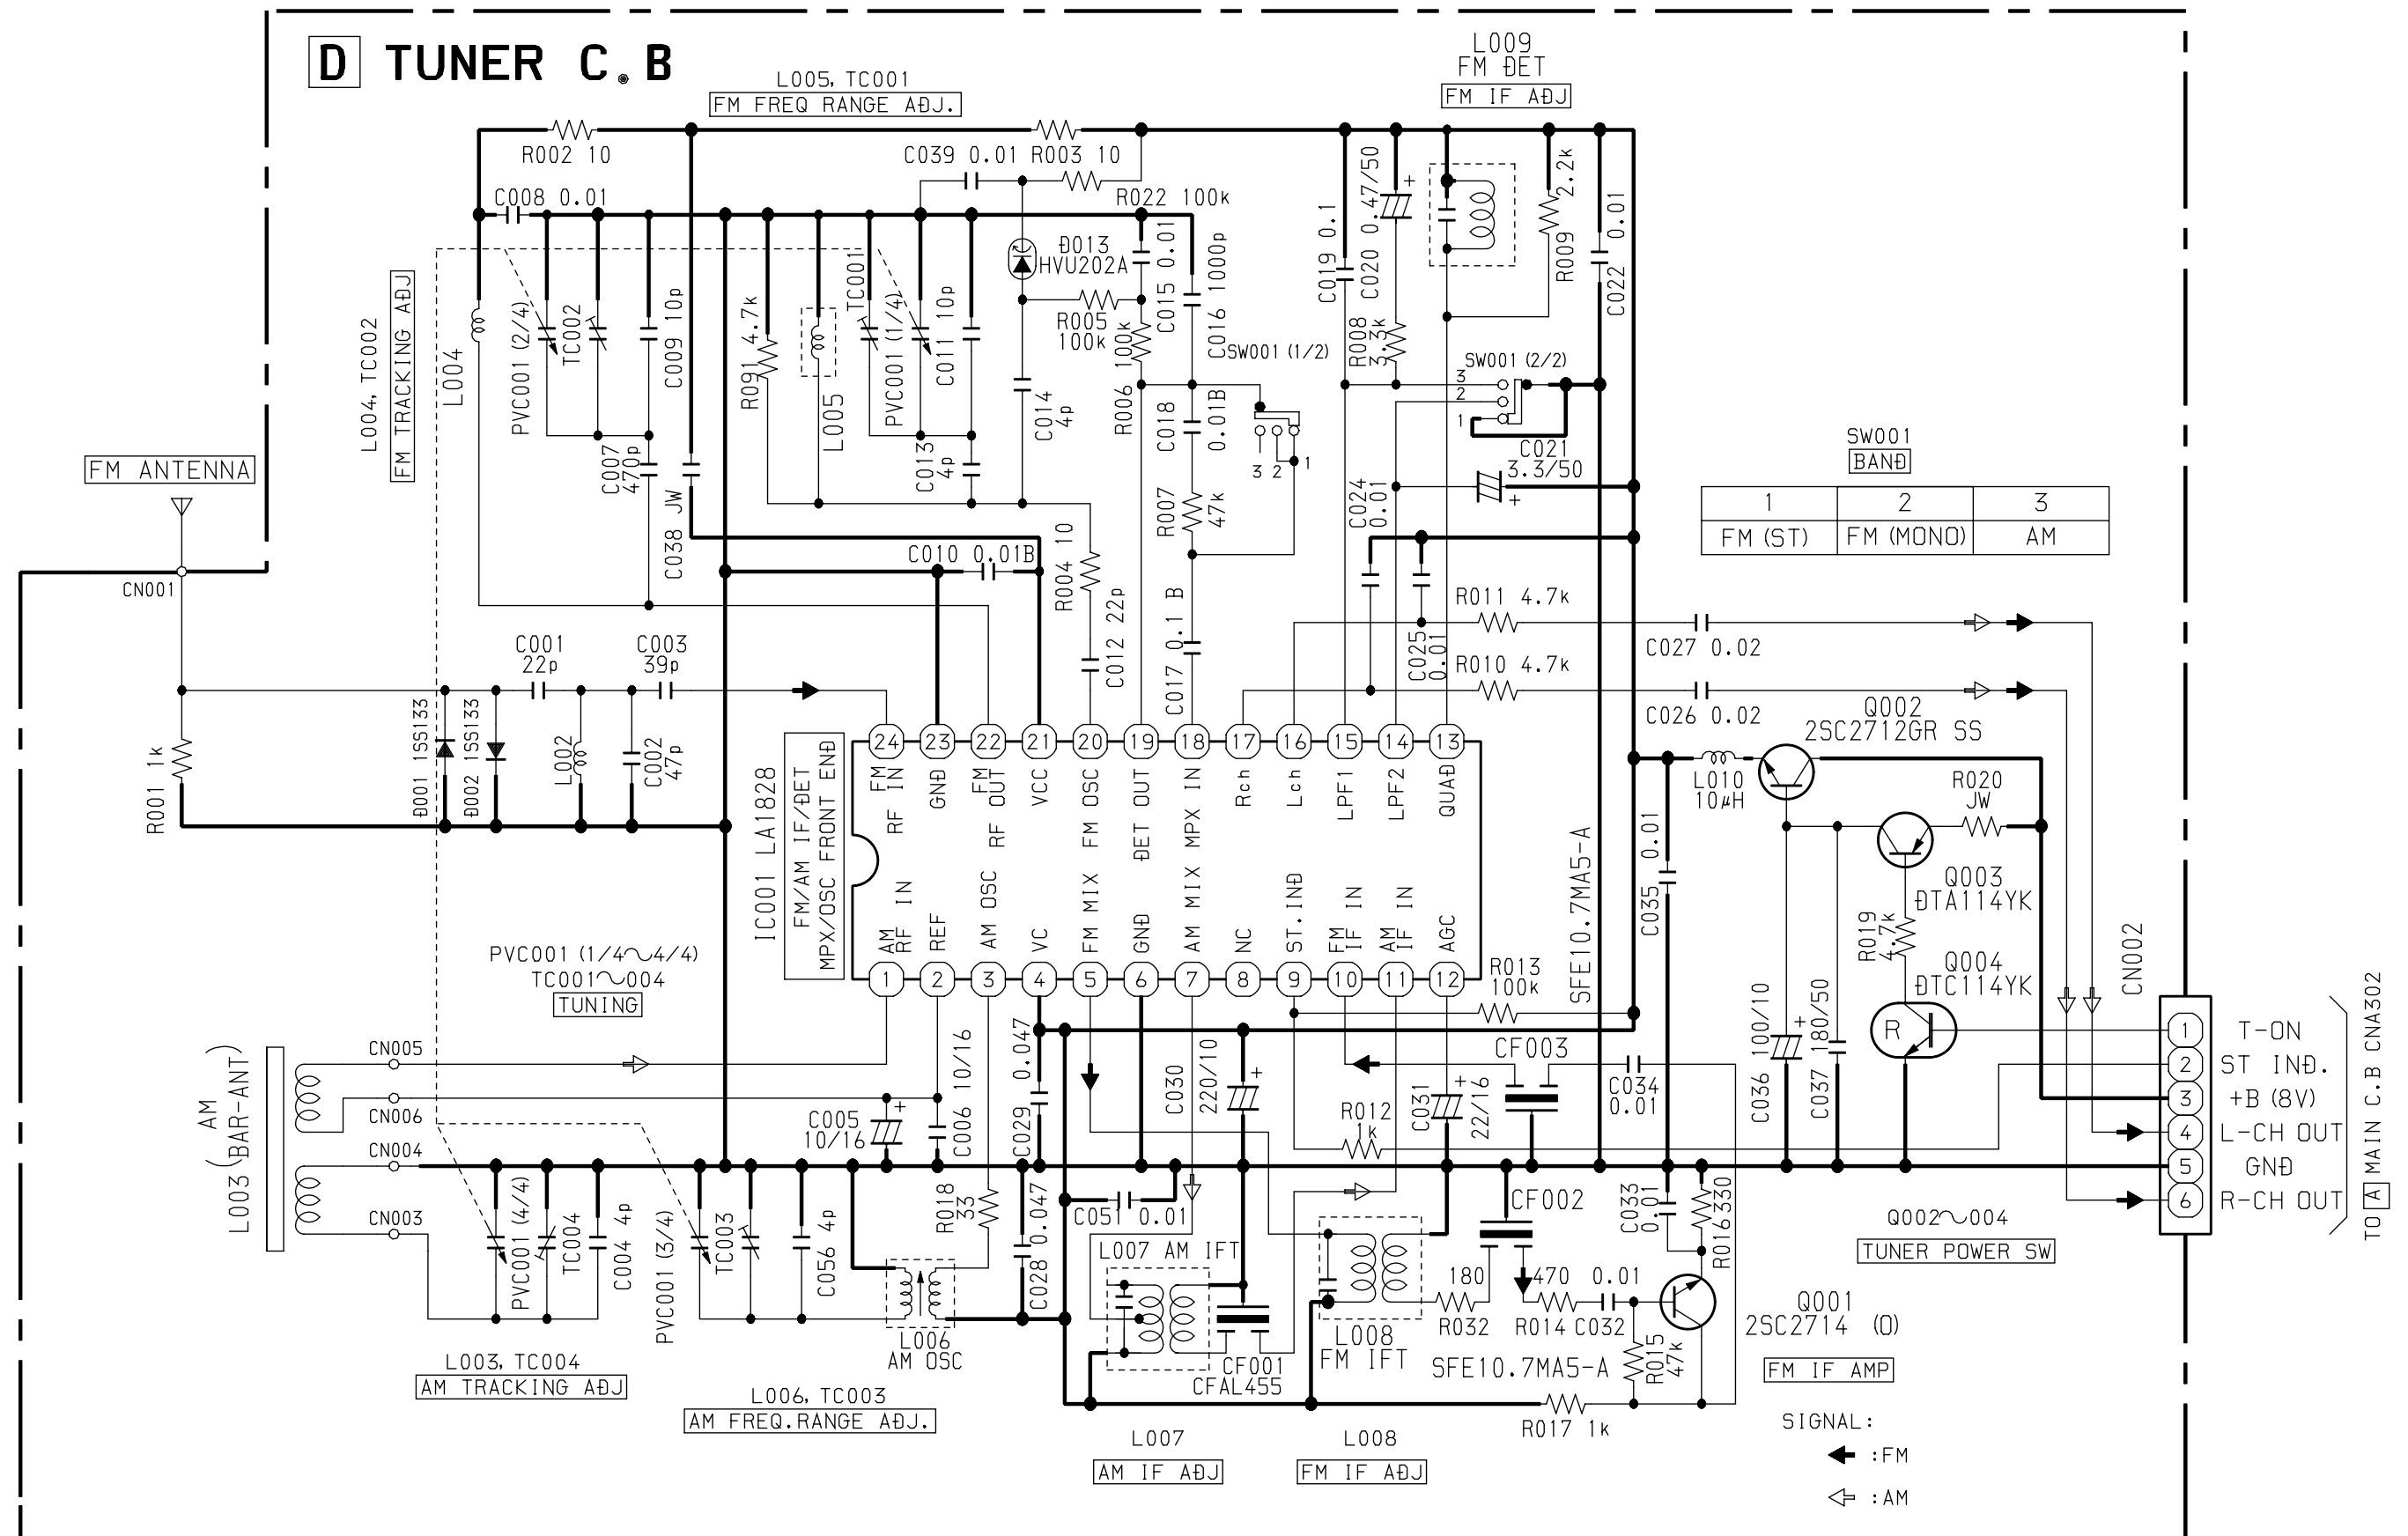

TO [A] MAIN C.B.
CNA302

TO CN002

SW001
BAND

AM ↔ FM (MONO) ↔ FM (ST)

TP6 (R-CH)
TP5 (L-CH)

CN002

SW001

2/2
1/2

CF002 R014 C032
Q001
C051
C033
L007
C030
C035
C006
C001
C002
C003
C004
C005
C007
C008
C009
C010
C011
C012
C013
C014
C015
C016
C017
C018
C019
C020
C021
C022
C023
C024
C025
C026
C027
C028
C029
C030
C031
C032
C033
C034
C035
C036
C037
C038
C039
C040
C041
C042
C043
C044
C045
C046
C047
C048
C049
C050
C051
C052
C053
C054
C055
C056
C057
C058
C059
C060
C061
C062
C063
C064
C065
C066
C067
C068
C069
C070
C071
C072
C073
C074
C075
C076
C077
C078
C079
C080
C081
C082
C083
C084
C085
C086
C087
C088
C089
C090
C091
C092
C093
C094
C095
C096
C097
C098
C099
C100
C101
C102
C103
C104
C105
C106
C107
C108
C109
C110
C111
C112
C113
C114
C115
C116
C117
C118
C119
C120
C121
C122
C123
C124
C125
C126
C127
C128
C129
C130
C131
C132
C133
C134
C135
C136
C137
C138
C139
C140
C141
C142
C143
C144
C145
C146
C147
C148
C149
C150
C151
C152
C153
C154
C155
C156
C157
C158
C159
C160
C161
C162
C163
C164
C165
C166
C167
C168
C169
C170
C171
C172
C173
C174
C175
C176
C177
C178
C179
C180
C181
C182
C183
C184
C185
C186
C187
C188
C189
C190
C191
C192
C193
C194
C195
C196
C197
C198
C199
C200
C201
C202
C203
C204
C205
C206
C207
C208
C209
C210
C211
C212
C213
C214
C215
C216
C217
C218
C219
C220
C221
C222
C223
C224
C225
C226
C227
C228
C229
C230
C231
C232
C233
C234
C235
C236
C237
C238
C239
C240
C241
C242
C243
C244
C245
C246
C247
C248
C249
C250
C251
C252
C253
C254
C255
C256
C257
C258
C259
C260
C261
C262
C263
C264
C265
C266
C267
C268
C269
C270
C271
C272
C273
C274
C275
C276
C277
C278
C279
C280
C281
C282
C283
C284
C285
C286
C287
C288
C289
C290
C291
C292
C293
C294
C295
C296
C297
C298
C299
C300
C301
C302
C303
C304
C305
C306
C307
C308
C309
C310
C311
C312
C313
C314
C315
C316
C317
C318
C319
C320
C321
C322
C323
C324
C325
C326
C327
C328
C329
C330
C331
C332
C333
C334
C335
C336
C337
C338
C339
C340
C341
C342
C343
C344
C345
C346
C347
C348
C349
C350
C351
C352
C353
C354
C355
C356
C357
C358
C359
C360
C361
C362
C363
C364
C365
C366
C367
C368
C369
C370
C371
C372
C373
C374
C375
C376
C377
C378
C379
C380
C381
C382
C383
C384
C385
C386
C387
C388
C389
C390
C391
C392
C393
C394
C395
C396
C397
C398
C399
C400
C401
C402
C403
C404
C405
C406
C407
C408
C409
C410
C411
C412
C413
C414
C415
C416
C417
C418
C419
C420
C421
C422
C423
C424
C425
C426
C427
C428
C429
C430
C431
C432
C433
C434
C435
C436
C437
C438
C439
C440
C441
C442
C443
C444
C445
C446
C447
C448
C449
C450
C451
C452
C453
C454
C455
C456
C457
C458
C459
C460
C461
C462
C463
C464
C465
C466
C467
C468
C469
C470
C471
C472
C473
C474
C475
C476
C477
C478
C479
C480
C481
C482
C483
C484
C485
C486
C487
C488
C489
C490
C491
C492
C493
C494
C495
C496
C497
C498
C499
C500
C501
C502
C503
C504
C505
C506
C507
C508
C509
C510
C511
C512
C513
C514
C515
C516
C517
C518
C519
C520
C521
C522
C523
C524
C525
C526
C527
C528
C529
C530
C531
C532
C533
C534
C535
C536
C537
C538
C539
C540
C541
C542
C543
C544
C545
C546
C547
C548
C549
C550
C551
C552
C553
C554
C555
C556
C557
C558
C559
C560
C561
C562
C563
C564
C565
C566
C567
C568
C569
C570
C571
C572
C573
C574
C575
C576
C577
C578
C579
C580
C581
C582
C583
C584
C585
C586
C587
C588
C589
C590
C591
C592
C593
C594
C595
C596
C597
C598
C599
C600
C601
C602
C603
C604
C605
C606
C607
C608
C609
C610

Pin No.	Pin Name	I/O	Description
1	DEFI	I	Defect detection signal (DEF) input.
2	TAI	I	Test input. A pull-down resistor is built in. Must be connected to 0V.
3	PDO	O	External VCO control phase comparator output.
4	VVSS	—	Internal VCO ground. Must be connected to 0V.
5	ISET	O	PDO output current adjustment resistor connection.
6	VVDD	—	Internal VCO power supply.
7	FR	I	VCO frequency range adjustment.
8	VSS	—	Digital system ground. Must be connected to 0V.
9	EFMO	O	Slice level control; EFM signal output.
10	EFMIN	I	Slice level control; EFM signal input.
11	T2	I	Test input. A pull-down resistor is built in. Must be connected to 0V.
12	CLV+	O	Disc motor control output.
13	CLK-		Three-value ouput is also possible when specified by microprocessor command.
14	V/P	O	Rough servo/phase control automatic switching monitor output. Outputs a high level during rough servo and a low level during phase control.
15	HFL	I	Track detection signal input. This is a Schmitt input.
16	TES	I	Tracking error signal input. This is a Schmitt input.
17	TOFF	O	Tracking off output.
18	TGL	O	Tracking gain switching output. Increase the gain when low.
19	JP+	O	Track jump output.
20	JP-		Three-value output is also possible when specified by microprocessor command.
21	PCK	O	EFM data playback clock monitor. Outputs 4.3218 MHz when the phase is locked. (Not used)
22	FSEQ	O	Synchronization signal detection ouput. Outputs a high level when the synchronization signal detected from the EFM signal and the internally generated synchronization signal agree. (Not used)
23	VDD	—	Digital system power supply.
24	SL+	O	Serial data command sled signal output terminal from microprocessor.
25	SL-		
26	CONT3	—	Not used.
27	PUIN	I	CD pickup inside limit switch.
28	RW	O	Serial data command sled output terminal from microprocessor.
29	EMPH	O	De-emphasis monitor pin. A high level indicates playback of a de-emphasis disk. (Not used)
30	C2F	O	C2 flag output. (Not used)
31	DOUT	O	Digital output (EIAJ format). (Not used)
32, 33	T3, T4	I	Test input. A pull-down resistor is built in. Must be connected to 0V.
34	N.C.	—	34Unused. Must be left open.
35	MUTEL	O	Left channel one-bit D/A converter mute output. (Not used)
36	LVDD	—	Left channel one-bit D/A converter power supply.
37	LCHO	O	Left channel one-bit D/A converter output.

Pin No.	Pin Name	I/O	Description
38	LVSS	—	Left channel one-bit D/A converter ground. Must be connected to 0V.
39	RVSS	—	Right channel one-bit D/A converter ground. (Must be connected to 0V.)
40	RCHO	O	Right channel one-bit D/A converter output.
41	RVDD	—	Right channel one-bit D/A converter power supply.
42	MUTER	O	Right channel one-bit D/A converter mute output. (Not used)
43	XVDD	—	Crystal oscillator power supply.
44	XOUT	O	Connections for a 16.9344 MHz crystal oscillator element.
45	XIN	I	
46	XVSS	—	Crystal oscillator ground. (Must be connected to 0V.)
47	SBSY	O	Subcode clock synchronization signal output. (Not used)
48	EFLG	O	C1, C2, single and double error correction monitor. (Not used)
49	PW	O	Subcode P, Q, R, S, T, U and W output. (Not used)
50	SFSY	O	Subcode frame synchronization signal output. This signal falls when the subcode are in standby state. (Not used)
51	SBCK	I	Subcode readout clock input. This is a Schmitt input.
52	FSX	O	Output pin for the 7.35 kHz synchronization signal divided from the crystal oscillator. (Not used)
53	WRQ	O	Subcode Q output standby output.
54	RWC	I	Read/write control input. This is a Schmitt input.
55	SQOUT	O	Subcode Q output.
56	COIN	I	Command input pin from control microprocessor.
57	$\overline{\text{CQCK}}$	I	Input for both the command input acquisition clock and the SQOUT pin subcode readout clock input pin. This is Schmitt input.
58	$\overline{\text{RES}}$	I	Reset input. This pin must be set low briefly after power is first applied.
59	T11	O	Test output. Leave open. (Normally output a low level). (Not used)
60	16M	O	16.9344 MHz output. (Not used)
61	4.2M	O	4.2336 MHz output.
62	T5	I	Test input. A pull-down resistor is built-in. (Must be connected to 0V.)
63	$\overline{\text{CS}}$	I	Chip select input. A pull-down resistor is built-in. (Must be connected to 0V if not controlled.)
64	T1	I	Test input. No pull-down resistor. (Must be connected to 0V.)

IC, LA9241ML

Pin No.	Pin Name	I/O	Description
1	FIN2	O	For the connection of the pickup photodiode. Addition to the FIN1 pin creates an RF signal and subtraction from it create an EF signal.
2	FIN1	O	For the connection of the pickup photodiode.
3	E	O	For the connection of the pickup photodiode. Subtraction from the F pin creates a TE signal.
4	F	O	For the connection of the pickup photodiode.
5	TB	I	Inputs the DC components in the TE signal.
6	TE–	O	For the connection of a resistor which sets the gain of the TE signal between this pin and the TE pin.
7	TE	O	TE signal output.
8	TESI	I	TES (track error sense) comparator input.The TE signal is passed through a BPF.
9	SCI	I	Shock detection input.
10	TH	I	Sets the time constant for the tracking gain.
11	TA	O	TA amp output.
12	TD–	I	Composes the tracking phase compensation constant between the TD and VR pins.
13	TD	O	Sets the tracking phase compensation.
14	JP	I	Sets the amplitude of the tracking jump signal (kick pulses).
15	TO	O	Tracking control signal output.
16	FD	O	Focusing control signal output.
17	FD–	I	Composes the focusing phase compensation constant between the FD and FA pins.
18	FA	O	Composes the focusing phase compensation constant between the FD- and FA- pins.
19	FA–	I	Composes the focusing phase compensation constant between the FA and FE pins.
20	FE	O	FE signal output.
21	FE–	I	For the connection of a resistor which sets the gain of the FE signal between this pin and the TE pin.
22	AGND	O	Ground of analog signals.
23	SP	O	Single-ended output of the signals input to the CV+ and CV- pins.
24	SPI	I	Spindle amp input.
25	SPG	I	For the connection of a resistor which sets the gain in the spindle 12cm mode.
26	SP–	I	For the connection of the spindle phase compensation constant with the SPD pin.
27	SPD	O	Spindle control signal output.
28	SLEQ	I	For the connection of sled phase compensation constant.
29	SLD	O	Sled control signal output.
30, 31	SL–, SL+	I	Sled feed signal input from the microprocessor.
32, 33	JP–, JP+	I	Tracking signal input from the DSP.
34	TGL	I	Tracking gain control signal input from the DSP. Low gain when TGL is “H”.
35	TOFF	I	Tracking off control signal input from the DSP. Off when TOFF is “H”.
36	TES	O	TES signal output to the DSP.
37	HFL	O	The HFL (high frequency level) signal is used to judge whether the main beam is positioned on the pit or on the mirror.
38	SLOF	I	Sled servo off control input.


Pin No.	Pin Name	I/O	Description
39, 40	CV–, CV+	I	CLV error signal input from the DSP.
41	RFSM	O	RF output.
42	RFS–	O	Sets the RF gain and the EFM signal's 3T compensation constant together with the RFSM pin.
43	SLC	O	The SLC (slice level control) signal is output to control the DSP's data slice level of the RF waveform.
44	SLI	I	Input to control the DSP's data slice level.
45	DGND	—	Ground of digital signals.
46	FSC	O	Output for the focus search smoothing capacitor.
47	TBC	I	The TBC (tracking balance control) signal sets the EF balance variation range.
48	NC	—	Not connected.
49	DEF	O	Disc defect detection output.
50	CLK	I	Reference clock input. 4.23 MHz is input from the DSP.
51	CL	I	Microprocessor command clock input.
52	DAT	I	Microprocessor command data input.
53	CE	I	Microprocessor chip enable input.
54	DRF	O	DRF (detect RF) is an output to detect the RF level.
55	FSS	I	The FSS (focus search select) signal switches the focus search modes (+/-search / +search with respect to the reference voltage).
56	VCC2	—	VCC of servo and digital circuits.
57	REFI	—	For the connection of bypass capacitor for the reference voltage.
58	VR	O	Reference voltage output.
59	LF2	—	Sets the time constant for disc defect detection.
60	PH1	—	For the connection of a capacitor to hold the RF signal peak.
61	BH1	—	For the connection of a capacitor to hold the RF signal bottom.
62	LDD	O	APC circuit output.
63	LDS	I	APC circuit input.
64	VCC1	—	VCC of RF signal circuits.

IC, LC865516A-5L26

Pin No.	Pin Name	I/O	Description
1	SEG E	O	SEG E control.
2	SEG F	O	SEG F control.
3	SEG G	O	SEG G control.
4	NC	—	Not connected.
5	I-RES	I	Microprocessor reset input.
6	XT1 (IN)	I	Connected to an external 32.768 kHz crystal oscillator.
7	NC	—	Not connected.
8	XT2 (OUT)	O	Connected to an external 32.768 kHz crystal oscillator.
9	VSS	—	GND.
10	CF1 (IN)	I	Connected to an external 5.76 MHz ceramic filter.
11	CF2 (OUT)	O	Connected to an external 5.76 MHz ceramic filter.
12	VDD	—	Microprocessor power supply (+5 V).
13	I-KEY0	I	Key AD input. (AD)
14	I-KEY1	I	Key AD input. (AD)
15	I-MOTOR	I	Deck status input. (AD)
16	I-CDSW	I	CD door switch status input.
17	O-SHIFT	O	Main clock shift output.
18	NC	—	Not connected.
19	O-BASS LED	O	BASS LED ON/OFF control output. (Not used)
20	O-QS CONT	O	Q sound LED ON/OFF control output.
21	O-SFT LED	—	Not used.
22	I-DRF	I	CD RF level detection input.
23	I-WRQ	I	CD subcode Q standby input.
24	NC	—	Not connected.
25	I-REM	I	Remote control input.
26	O-CD ON	O	CD power control output.
27	O-TU ON	O	TU power control output.
28	O-P.CONT	O	The main power supply control output.
29	NC	—	Not connected.
30	O-BEAT	O	Beat sw control output.
31	O-MUTE	O	Main mute output.
32	O-DIGIT	O	7-segment LED power supply control output.
33	O-SEG REPEAT	O	REPEAT LED ON/OFF control output.
34	O-COIN	O	CD command output.
35	I-SQOUT	I	CD subcode Q input.
36	O-CQCK	O	CD command/CLK for subcode.
37	O-RWC	O	CD read/write control output.
38	O-DATA	O	Data output to M61509FP.
39	O-CD LED	O	LED ON/OFF control output for the CD function.
40	O-TU LED	O	LED ON/OFF control output for the TU function.
41	O-TA LED	O	LED ON/OFF control output for the TA function. (Not used)

Pin No.	Pin Name	I/O	Description
42	NC	—	Not connected.
43	SEG DP	O	SEG DP control.
44	SEG A	O	SEG A control.
45	SEG B	O	SEG B control.
46	SEG C	O	SEG C control.
47	SEG D	O	SEG D control.
48	NC	—	Not connected.

D

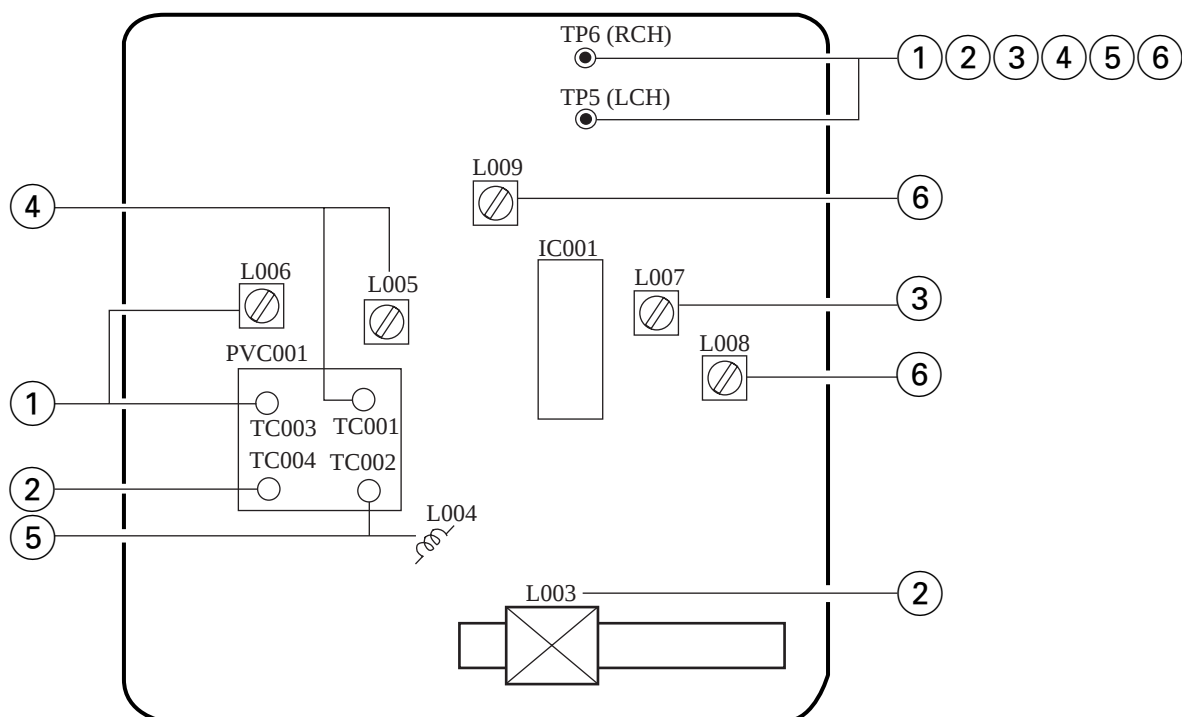 TUNER C.B


< RADIO SECTION >

1. AM Frequency Range Adjustment

Settings: • Test Point: TP5 (LCH), TP6 (RCH)
• Adjustment location: L006, TC003

L006 517kHz
TC003 1750kHz

2. AM Tracking Adjustment

Settings: • Test Point: TP5 (LCH), TP6 (RCH)
• Adjustment location: L003, TC004

L003 600kHz
TC004 1400kHz

3. AM IF Adjustment

Settings: • Test Point: TP5 (LCH), TP6 (RCH)
• Adjustment location: L007

L007 455kHz

4. FM Frequency Range Adjustment

Settings: • Test Point: TP5 (LCH), TP6 (RCH)
• Adjustment location: L005, TC001

L005 87MHz
TC001 109MHz

5. FM Tracking Adjustment


Settings: • Test Point: TP5 (LCH), TP6 (RCH)
• Adjustment location: L004, TC002

L004 88MHz
TC002 108MHz

6. FM IF Adjustment


Settings: • Test Point: TP5 (LCH), TP6 (RCH)
• Adjustment location: L008, L009

L008, L009 10.7MHz

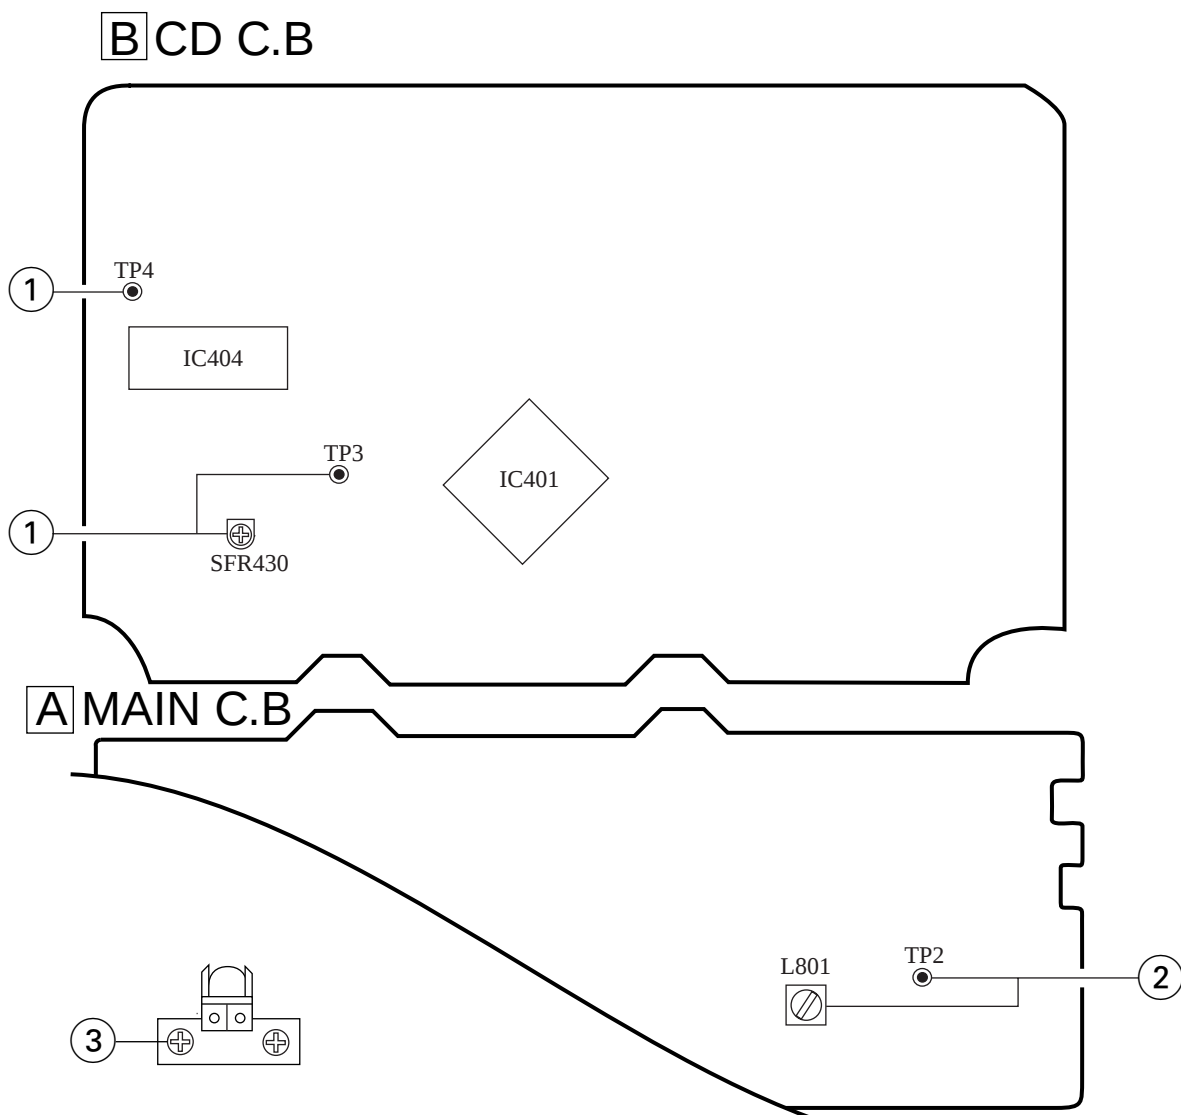


< CD SECTION >

1. Focus Bias Adjustment
Make the focus bias adjustment when replacing and repairing the optical block.

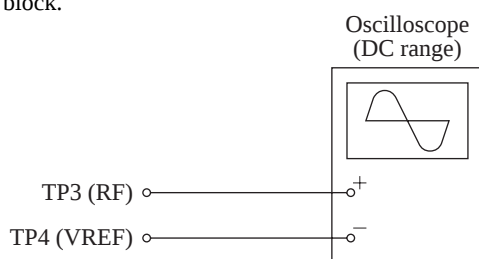

- 1) Connect an oscilloscope to the test point TP3 (RF) and TP4 (VREF).
- 2) Turn on the power switch.
- 3) Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- 4) Adjust SFR430 so that RF signal of the test point TP3 (RF) is MAX and CLEAREST.

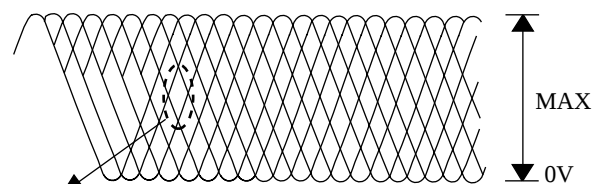

EYE PATTERN

must be CLEAR and MAX

VOLT / DIV: 200mV

TIME / DIV: 0.5 s

< TAPE RECORDER SECTION >

2. Bias Adjustment
Settings:
 - Test tape: TTA-630
 - Test Point: TP2
 - Adjustment location: L801

L801 85kHz±2kHz
3. Azimuth Adjustment
Condition:
 - Test tape: TTA-320
 - Test point: PHONE JACK
 - Adjustment location: Azimuth adjustment screw

Method: Play back the test tape and adjust the screw so that the output is maximum.


MECHANICAL PARTS LIST 1/1


DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	87-B00-010-010		BADGE, AIWA 30.5-5.2 S 2.5L	41	8Z-CD5-634-010		COVER, AC SOCKET
2	8A-CD9-009-010		WINDOW, CASS	42	87-A60-178-010		JACK, AC E W/SW
3	8A-CD9-232-010		SPR-T, CASS	43	8A-CD9-012-010		HANDL, GRIP
4	8A-CD9-008-010		BOX, CASS	44	8A-CD9-011-010		HANDL, ARM
5	8A-CDK-001-010		WINDOW, LED RC	45	8Z-CH4-640-010		ANT, ROD
6	84-CD5-216-010		BRACKET	46	8A-CD9-027-010		KNOB, SL BAND
7	84-CD5-215-010		GEAR	47	8A-CD9-004-010		CABI, REAR B1
8	8A-CD9-062-010		CABI, FR B1 ASSY	48	8A-CD9-010-010		LID, BATT
9	88-CD5-602-010		SPKR 4'3.2	49	8A-CD9-221-010		HLDR, ANT
10	8A-CD9-222-010		HLDR, SPEAKER	50	87-CD6-213-010		SPR-C, BATT (-)
11	8A-CD9-026-010		KNOB, RTRY TU	51	8A-CD9-211-010		HLDR, PWB L
12	8A-CD9-034-010		WINDOW, TU U	52	8A-CD9-212-010		HLDR, PWB R
13	8A-CD9-022-010		LENS, LED	53	8A-CD9-223-010		SPR-P, REC TN21
14	8A-CD9-020-010		BTN, REPEAT	54	8A-CD9-024-010		KEY, CASS TN21
15	8A-CD9-017-010		BTN, QSOUND	55	86-CT4-218-010		CUSHION, FOOT/PORON
16	8A-CD9-021-010		BTN, EQ	56	8A-CD9-201-010		HLDR, DISPLAY
17	8A-CD9-203-010		GUIDE, VOL	57	8A-CD9-620-010		FF-CABLE, 16P FR-MAIN
18	8A-CD9-014-010		BTN, VOL	58	8A-CD9-621-010		FF-CABLE, 16P CD-RF
19	8A-CD9-013-010		PANEL, VOL	59	8A-CD9-660-010		BAR, ANT MW 2B-AC0
20	8A-CD9-622-010		FF-CABLE, 8P CD-FR	60	87-A91-369-010		SW, AC SL 2 2 2 SDKGA41700
21	8Z-CH4-212-010		RING, CHUCK	61	8A-CD9-018-010		CAP, CD A
22	8Z-CH4-211-010		BASE, CHUCK	62	8A-CD9-019-010		CAP, CD B
23	87-036-368-010		MAGNET	63	8A-CH4-211-010		COVER, HLDR PT
24	84-CD5-217-010		PLATE, MAGNET	A	87-B10-242-010		UT2+3-30 W/O CR
25	8Z-CH4-225-010		HLDR, CHUCK A(S)	B	87-741-096-410		UT2+3-10
26	8A-CD9-007-010		WINDOW, CD	C	87-B10-239-010		QT2+3-8 W/O CR
27	8A-CDK-003-010		BOX, CD K-LH	D	87-661-097-410		TAPPING SCREW, VFT1+3-12
28	8A-CD9-231-010		SPR-T, CD	E	87-751-094-410		VT2+3-6 W10SL0T
29	8A-CD9-005-010		CHAS, CD A	F	87-067-566-010		TAPPING SCREW, VFTT+3-6
30	87-036-389-010		SW, PUSH LOCK	G	87-571-033-410		TAPPING SCREW, VIT+2-4
31	8Z-CDB-169-010		PANEL, CD SANYO	H	87-255-096-410		U+3-10 NI
32	8A-CD9-202-010		GUIDE, LED	I	87-342-074-010		UT2+2.6-8
33	8A-CD9-023-010		POINTER, TU	J	87-B10-269-010		UT2+3-12 W/O CR
34	8A-CD9-207-010		GEAR, TU B	K	87-352-075-210		VT2+2.6-10
35	8A-CD9-206-010		GEAR, TU A	L	87-WA5-253-010		W, 3.3-10-0.8
36	8A-CD9-208-010		DRUM, TU	M	87-661-095-410		VFT1+3-8
37	8A-CD9-209-010		LEVER, BAND A	N	87-251-073-410		SCREW, U+2.6-6
38	8A-CD9-205-010		GUIDE, GEAR				
39	8A-CH4-209-010		HLDR, PT				
40	8A-CD9-604-010		PT, H 4.5WT04541A				

COLOR NAME TABLE

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange	GM	Metallic Green
YM	Metallic Yellow	DM	Metallic Orange	PT	Transparent Pink

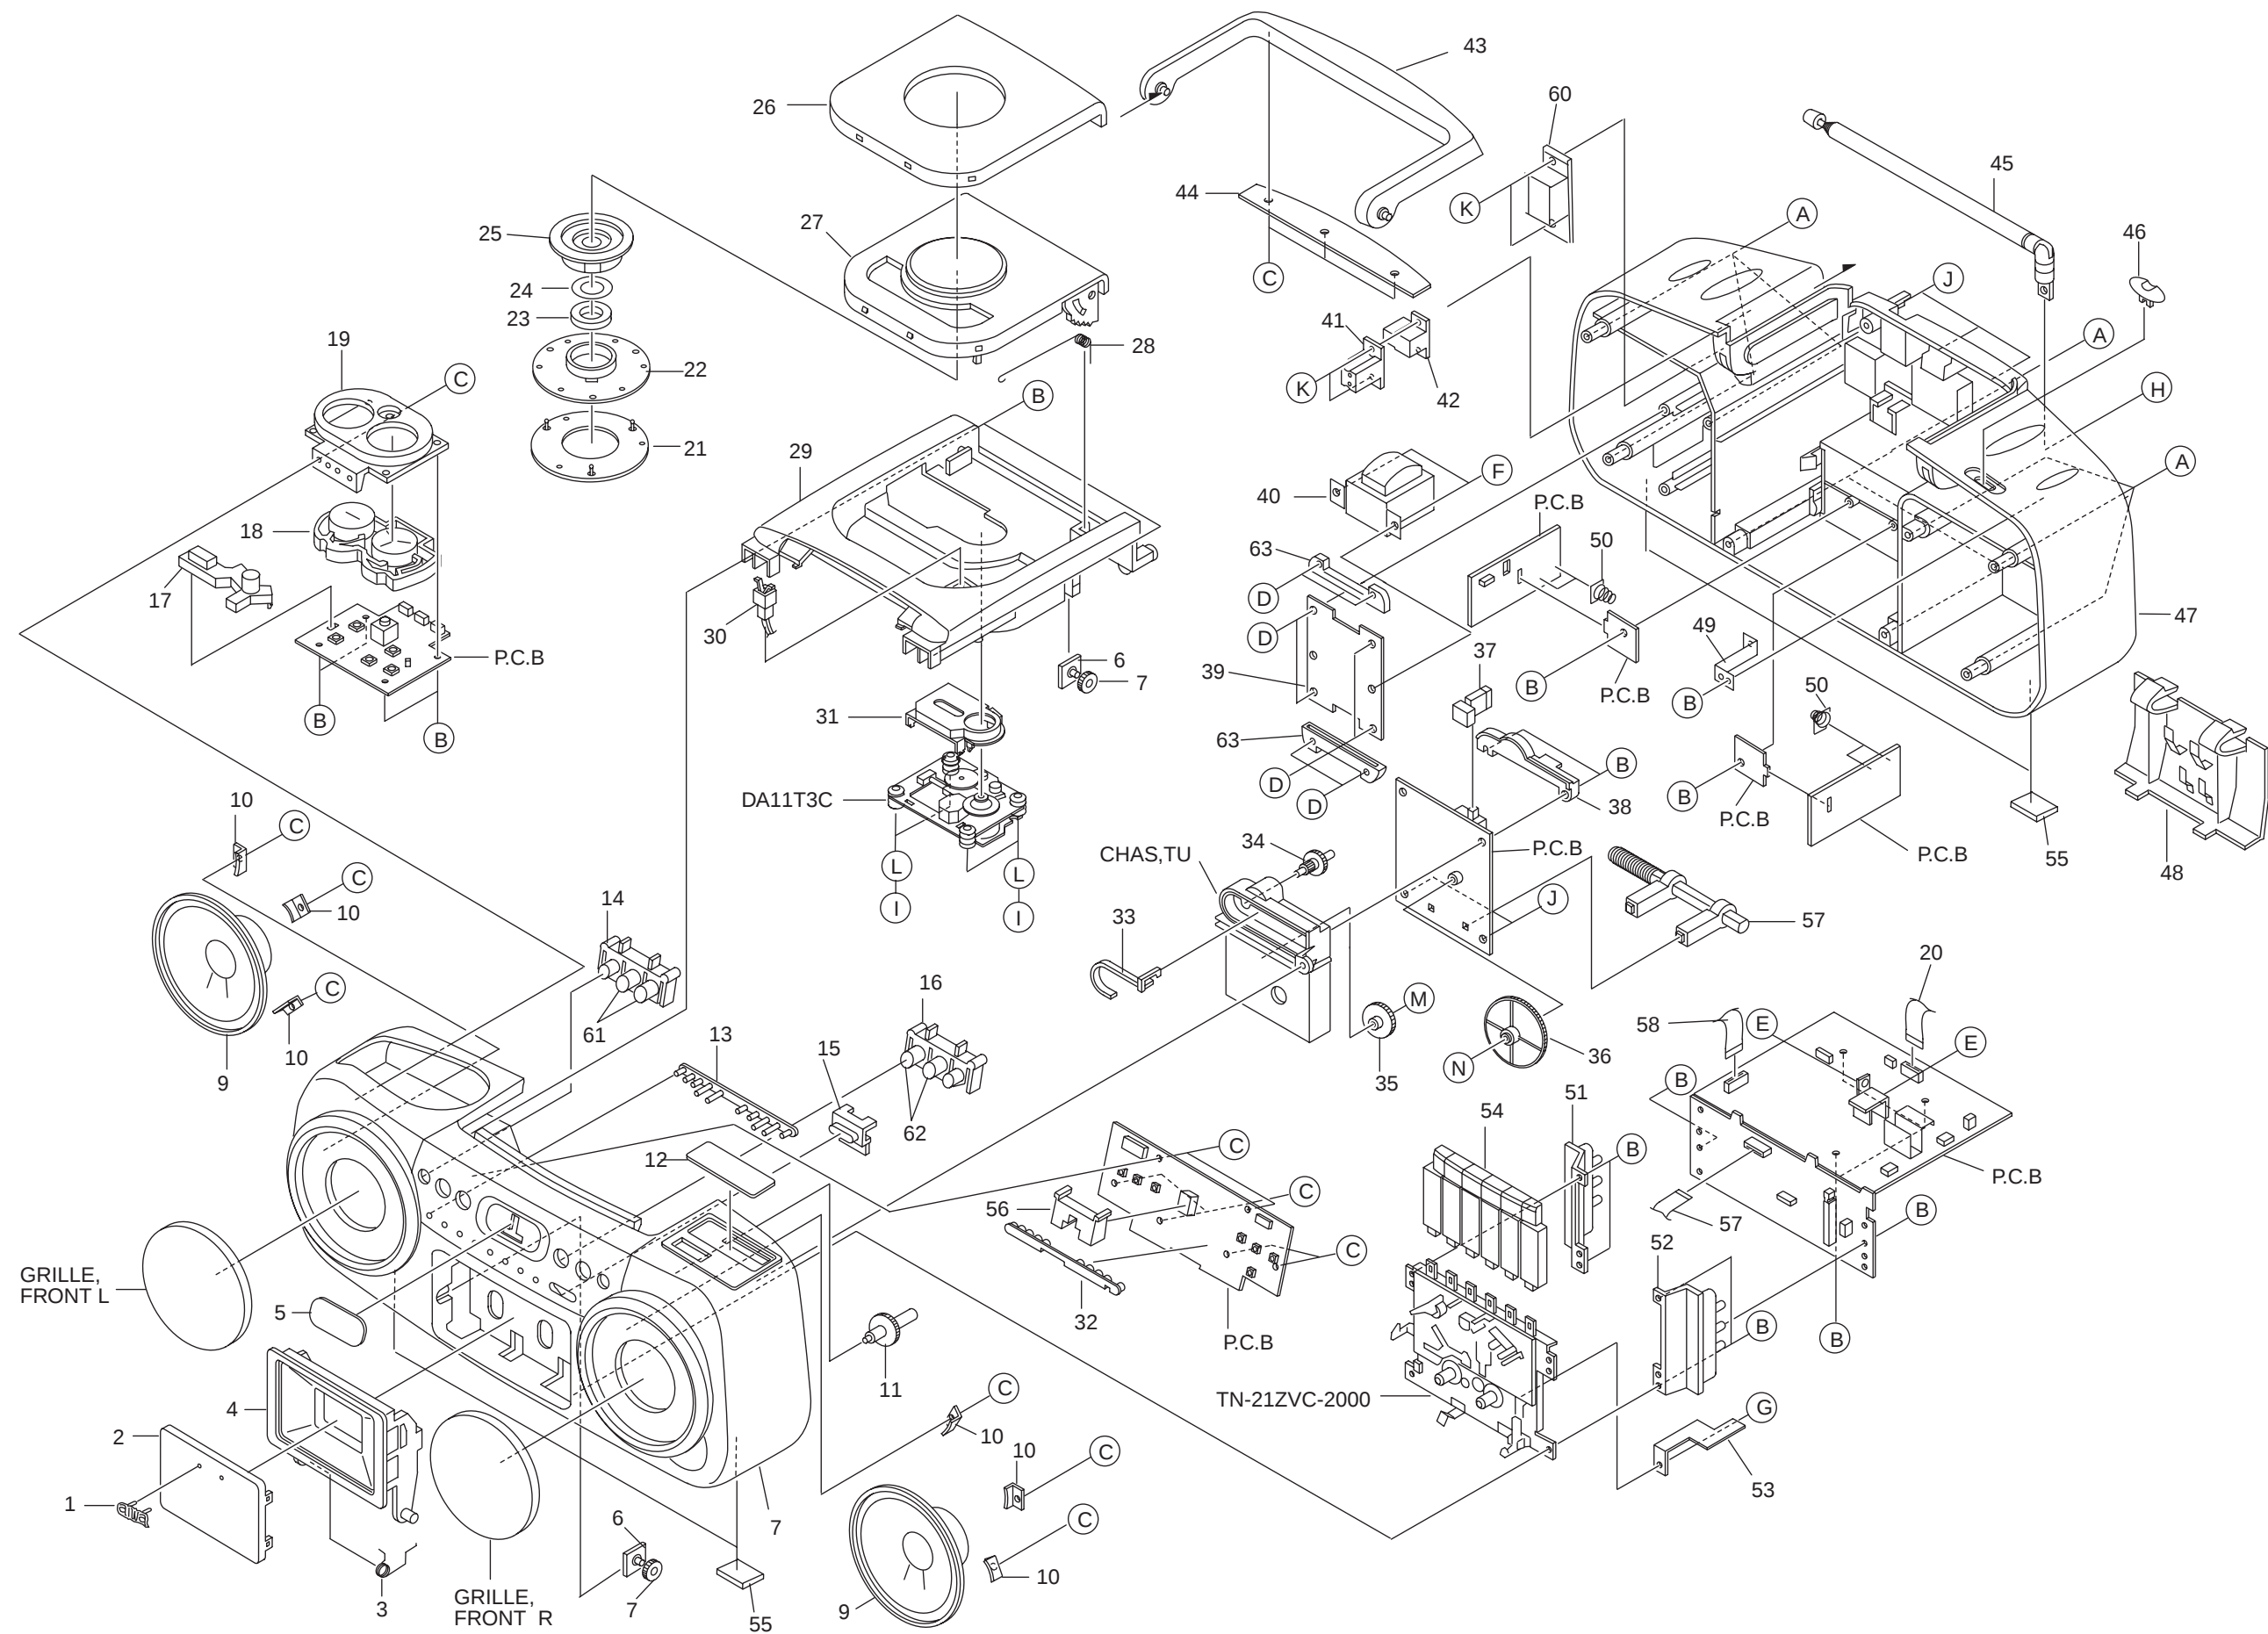

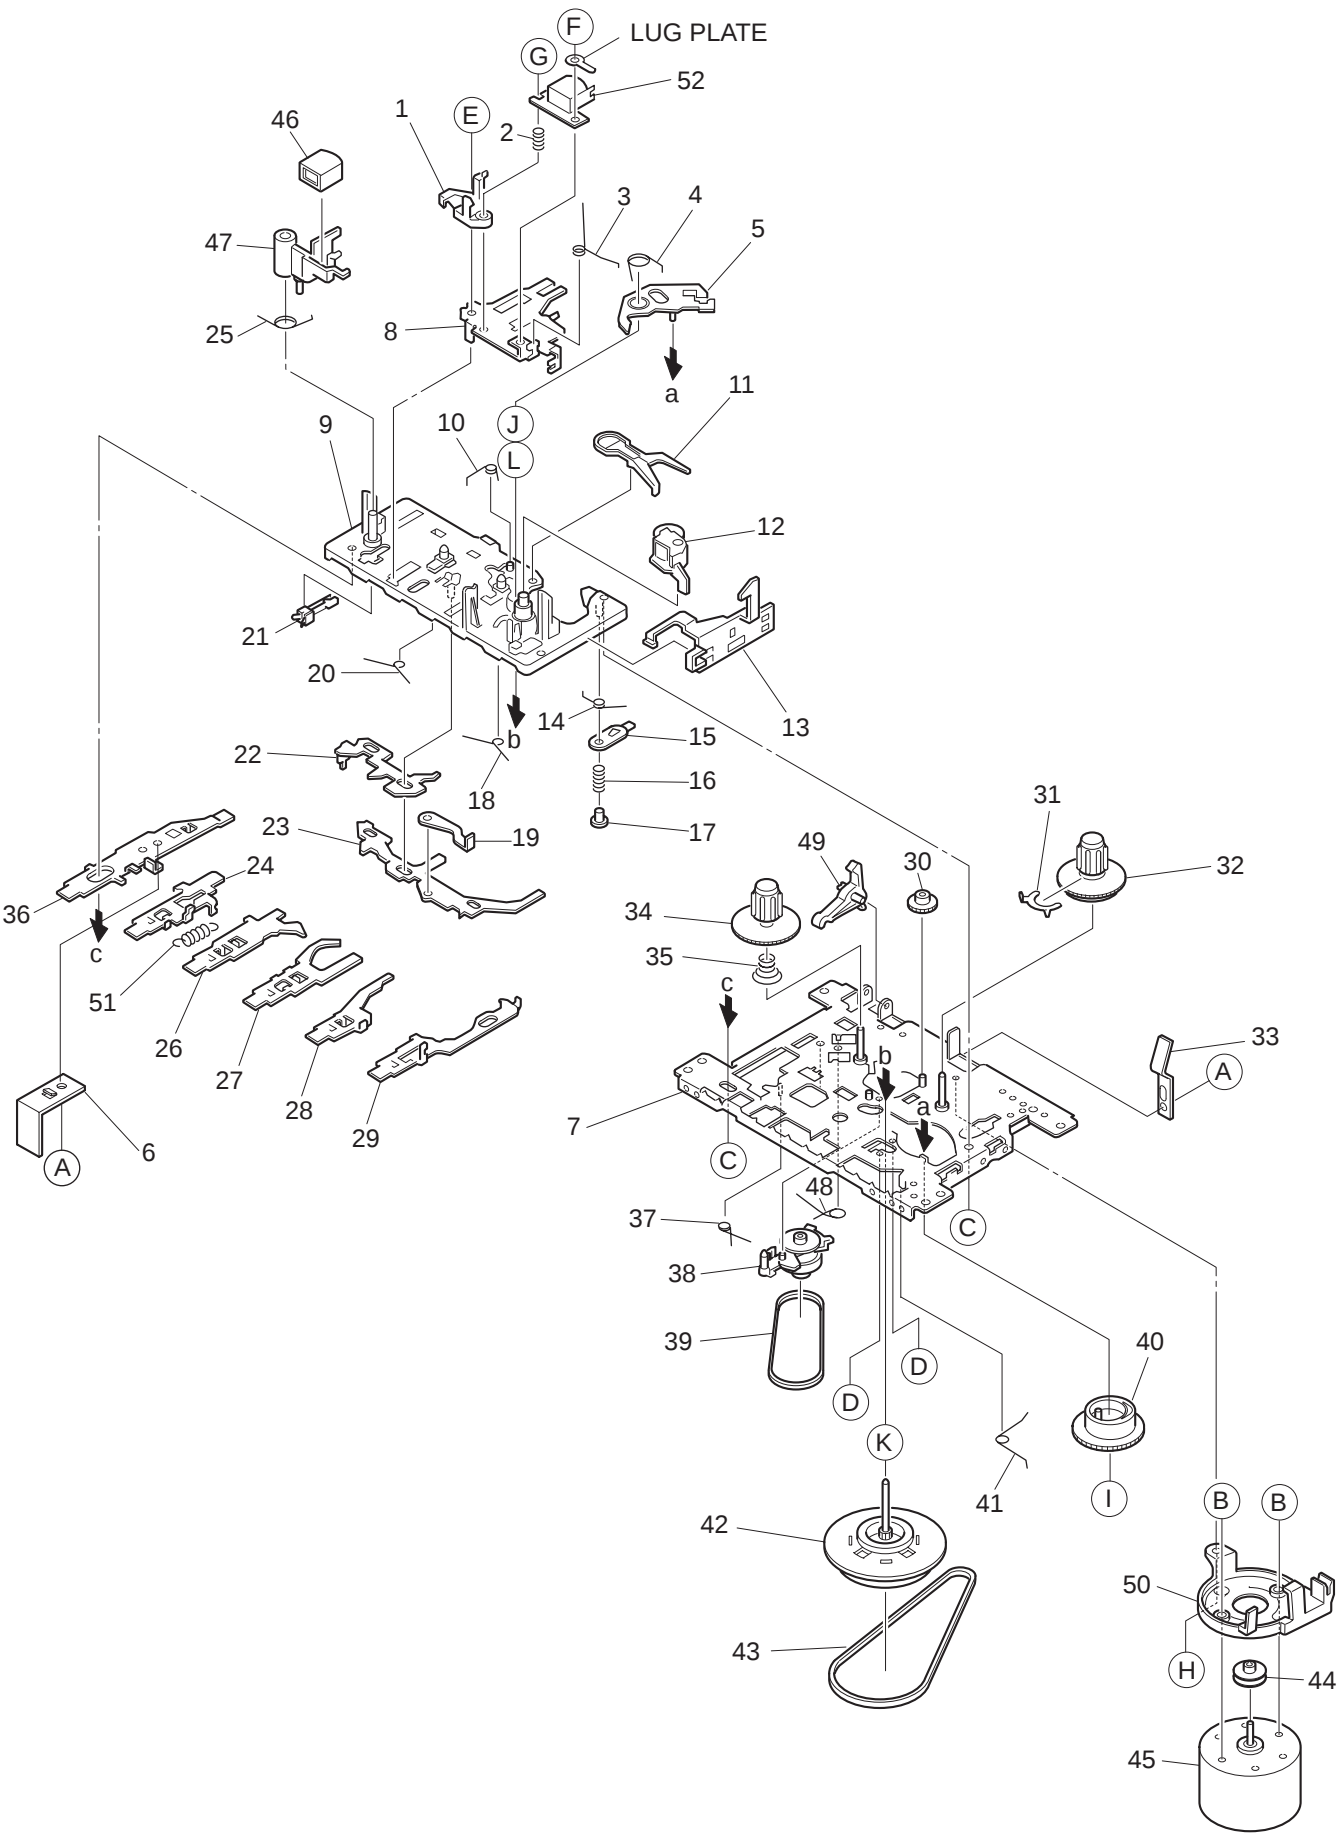


TAPE MECHANISM PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	S1-921-030-4A0		HEAD BASE	36	S1-921-140-030		REC BUTTON LEVER
2	S1-821-030-070		AZIMUTH SPRING	37	S1-921-140-170		P.S.LEVER SPRING
3	S1-921-030-090		PANEL P SPRING	38	S1-921-073-040		RF CLUTCH ASSY
4	S1-921-260-050		GEAR PLATE SPRING	39	S1-921-070-030		RF BELT
5	S1-921-265-020		GEAR PLATE ASSY	40	S1-921-260-020		CAM GEAR
6	S1-510-020-020		REC SPRING PLATE	41	S1-921-140-160		E ACTUATOR SPRING
7	S1-921-015-010		CHASSIS ASSY	42	S1-921-093-210		FLYWHEEL ASSY
8	S1-921-030-110		HEAD PANEL	43	S1-921-090-380		MAIN BELT
9	S1-921-143-160		BASE ASSY	44	S1-921-120-590		MOTOR PULLEY
10	S1-921-141-8A0		M CONTROL SPRING	45	S6-002-030-220		MOTOR EG530AD-2B
11	S1-921-260-4A0		SENSING LEVER	46	S6-209-100-100		E HEAD PH-K380-MS1
12	S1-921-043-100		PINCH ROLLER ARM ASSY	47	S1-921-030-050		MG ARM
13	S1-921-130-010		EJECT SLIDE LEVER	48	S1-921-140-210		REC BUTTON LEVER SPRING
14	S1-921-141-3A0		P CONTROL SPRING	49	S1-821-100-690		RECORD SAFETY LEVER
15	S1-921-140-550		PAUSE LEVER(E)	50	S1-821-128-9A0		MOTOR BRACKET
16	S1-921-140-120		PAUSE LEVER SPRING	51	S1-821-010-500		PLAY BUTTON LEVER SPRING
17	S1-921-140-110		PAUSE STOPPER	52	S6-201-011-110		HEAD, RP7442ES-0951
18	S1-921-140-150		BUTTON LEVER SPRING(B)	A	S9-P04-200-310		C TAPPING SCREW 2-3
19	S1-821-011-590		E KICK LEVER	B	S1-921-120-020		MOTOR COLLER SCREW
20	S1-921-141-070		BUTTON LEVER SPRING(A)	C	S9-B10-200-510		P TAPPING BIND SCREW M2-5
21	S6-401-011-490		LEAF SW MSW-1541T	D	S9-C07-204-510		SCREW, TAPPING (CAMERA) M2-4.5
22	S1-921-140-090		SWITCH ACTUATOR	E	S9-P01-200-610		SCREW, M2-6
23	S1-921-140-080		PUSH BUTTON ACTUATOR	F	S9-B01-200-310		(+) BIND SCREW M2-3
24	S1-921-140-190		PLAY BUTTON LEVER	G	S9-F08-200-710		AZIMUTH SCREW M2-7
25	S1-921-030-100		MG ARM SPRING	H	S1-921-120-030		MB SCREW
26	S1-921-140-040		REW BUTTON LEVER	I	S9-W02-300-100		P WASHER CUT 1.2-3.8-0.3
27	S1-921-140-050		FF, BUTTON REVER	J	S9-W02-500-100		P WASHER CUT 1.45-3.8-0.5
28	S1-921-140-060		STOP BUTTON LEVER	K	S9-W01-400-100		P WASHER 2-3.5-0.4
29	S1-921-140-600		PAUSE BUTTON LEVER	L	S9-W01-130-200		P WASHER 2.1-4-0.13
30	S1-821-100-700		FF GEAR				
31	S1-921-050-060		SENDER				
32	S1-921-053-100		TAKE UP REEL ASSY				
33	S1-829-100-010		PACK SPRING				
34	S1-921-050-150		S REEL HUB				
35	S1-921-050-220		BACK TENSION SPRING				

CD MECHANISM EXPLODED VIEW 1/1

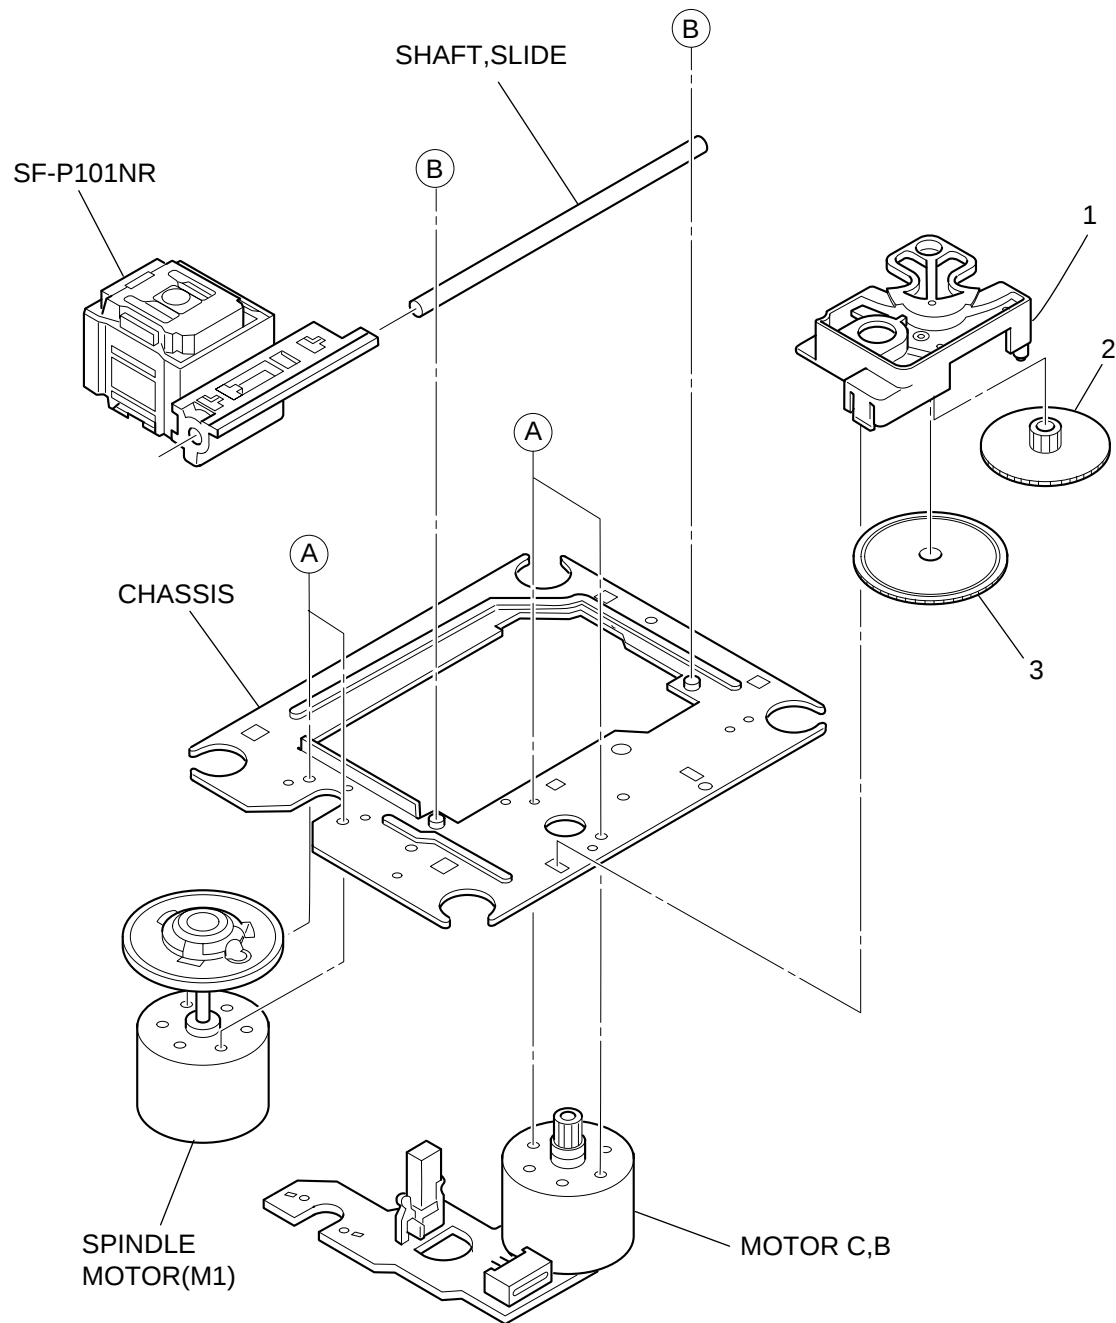

CD MECHANISM PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	S2-121-A28-400		COVER GEAR
2	S2-511-A21-000		GEAR MIDDLE
3	S2-511-A21-100		GEAR, DRIVE
A	S1-PN2-03R-0SE		SCR PAN PCS 2-3
B	87-261-073-410		SCR S-TPG FLT 2.6-6
ALL	M8-ZZK-E90-070	DA11T3C	



アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111
