

SERVICE MANUAL

CD STEREO SYSTEM

BASIC TAPE MECHANISM : 6ZM-3 PR4NM (HRSM, HR7SM)
BASIC TAPE MECHANISM : 6ZM-3 YPR4NC (HRSC, HRJSC)
BASIC CD MECHANISM : BZG-2 MVSD5GNM (HRSM, HR7SM)
BASIC CD MECHANISM : BZG-2 MVSD5GNC (HRSC, HRJSC)

SYSTEM	CD CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX-RV35	CX-SNRV35	SX-SNR30	RC-CAS13(VS)

Replace this Service Manual with "Revision Publishing" when it is issued.

aiwa

S/M Code No. 09-024-359-9T1

SIMPLE

DATA

ELECTRICAL PARTS LIST

! = ⚠ SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
ELECTRICAL	!	O PT	0001 8C-NH8-601-010	PT,HR CNH-8	a	b	c	d
ELECTRICAL	!	O W	0001 87-A80-092-010	AC CORD ASSY,E BLK SUN FAI	a	.	c	.
ELECTRICAL	!	O W	0001 87-A80-157-010	AC CORD ASSY,E BLK CC	.	b	.	d
FUNC/E.VR		O C	0301 87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0302 87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0303 87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0304 87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0305 87-A10-039-080	C-CAP,U 470P-50 J CH	a	b	c	d
FUNC/E.VR		O C	0310 87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0363 87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
FUNC/E.VR		O C	0451 87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
FUNC/E.VR		O C	0452 87-010-406-080	CAP,E 22-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0452 87-A12-092-080	CAP,E 22-50 SMG	.	b	.	d
FUNC/E.VR		O C	0453 87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0454 87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0455 87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0456 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
FUNC/E.VR		O C	0457 87-A12-361-080	CAP,M 5600P-100 J CP	a	b	c	d
FUNC/E.VR		O C	0458 87-012-278-080	C-CAP,U 2200P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0459 87-012-271-080	C-CAP,U 560P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0460 87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d
FUNC/E.VR		O C	0461 87-012-158-080	C-CAP,S 390P-50 J CH GRM	a	b	c	d
FUNC/E.VR		O C	0462 87-012-158-080	C-CAP,S 390P-50 J CH GRM	a	b	c	d
FUNC/E.VR		O C	0463 87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
FUNC/E.VR		O C	0464 87-012-278-080	C-CAP,U 2200P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0601 87-012-188-080	C-CAP,U 47P-50 J CH GRM	a	b	c	d
FUNC/E.VR		O C	0602 87-012-188-080	C-CAP,U 47P-50 J CH GRM	a	b	c	d
FUNC/E.VR		O C	0603 87-010-263-080	CAP,E 100-10 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0603 87-A12-062-080	CAP,E 100-10 SMG	.	b	.	d
FUNC/E.VR		O C	0604 87-010-263-080	CAP,E 100-10 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0604 87-A12-062-080	CAP,E 100-10 SMG	.	b	.	d
FUNC/E.VR		O C	0605 87-A12-362-080	CAP,M 6800P-100 J CP	a	b	c	d
FUNC/E.VR		O C	0606 87-A12-362-080	CAP,M 6800P-100 J CP	a	b	c	d
FUNC/E.VR		O C	0607 87-A10-039-080	C-CAP,U 470P-50 J CH	a	b	c	d
FUNC/E.VR		O C	0608 87-A10-039-080	C-CAP,U 470P-50 J CH	a	b	c	d
FUNC/E.VR		O C	0609 87-010-401-080	CAP,E 1-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0609 87-A12-087-080	CAP,E 1-50 SMG	.	b	.	d
FUNC/E.VR		O C	0610 87-010-401-080	CAP,E 1-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0610 87-A12-087-080	CAP,E 1-50 SMG	.	b	.	d
FUNC/E.VR		O C	0611 87-A12-348-080	C-CAP,U 560P-25 J CH	a	b	c	d
FUNC/E.VR		O C	0612 87-A12-348-080	C-CAP,U 560P-25 J CH	a	b	c	d
FUNC/E.VR		O C	0613 87-012-280-080	C-CAP,U 3300P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0614 87-012-280-080	C-CAP,U 3300P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0615 87-010-545-080	CAP,E 0.22-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0615 87-A12-084-080	CAP,E 0.22-50 SMG	.	b	.	d
FUNC/E.VR		O C	0616 87-010-545-080	CAP,E 0.22-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0616 87-A12-084-080	CAP,E 0.22-50 SMG	.	b	.	d
FUNC/E.VR		O C	0617 87-010-545-080	CAP,E 0.22-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0617 87-A12-084-080	CAP,E 0.22-50 SMG	.	b	.	d
FUNC/E.VR		O C	0618 87-010-545-080	CAP,E 0.22-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0618 87-A12-084-080	CAP,E 0.22-50 SMG	.	b	.	d
FUNC/E.VR		O C	0625 87-012-198-080	C-CAP,U 180P-50 J CH GRM	a	b	c	d
FUNC/E.VR		O C	0626 87-012-198-080	C-CAP,U 180P-50 J CH GRM	a	b	c	d
FUNC/E.VR		O C	0627 87-012-284-080	C-CAP,U 6800P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0628 87-012-284-080	C-CAP,U 6800P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0629 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
FUNC/E.VR		O C	0630 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
FUNC/E.VR		O C	0631 87-012-278-080	C-CAP,U 2200P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0632 87-012-278-080	C-CAP,U 2200P-50 K B GRM	a	b	c	d
FUNC/E.VR		O C	0641 87-010-401-080	CAP,E 1-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0641 87-A12-087-080	CAP,E 1-50 SMG	.	b	.	d
FUNC/E.VR		O C	0642 87-010-401-080	CAP,E 1-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0642 87-A12-087-080	CAP,E 1-50 SMG	.	b	.	d
FUNC/E.VR		O C	0651 87-010-248-080	CAP,E 220-10 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0651 87-A12-063-080	CAP,E 220-10 SMG	.	b	.	d
FUNC/E.VR		O C	0652 87-010-260-080	CAP,E 47-25 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0652 87-A12-071-080	CAP,E 47-25 SMG	.	b	.	d
FUNC/E.VR		O C	0655 87-010-404-080	CAP,E 4.7-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0655 87-A12-090-080	CAP,E 4.7-50 SMG	.	b	.	d
FUNC/E.VR		O C	0656 87-010-784-080	C-CAP,U 0.012-25 K B GRM	a	b	c	d
FUNC/E.VR		O C	0663 87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
FUNC/E.VR		O C	0664 87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
FUNC/E.VR		O C	0665 87-A10-504-080	C-CAP,U 0.047-16 K B	a	b	c	d
FUNC/E.VR		O C	0666 87-A10-504-080	C-CAP,U 0.047-16 K B	a	b	c	d
FUNC/E.VR		O C	0677 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
FUNC/E.VR		O C	0681 87-A10-504-080	C-CAP,U 0.047-16 K B	a	b	c	d
FUNC/E.VR		O C	0682 87-010-787-080	C-CAP,U 0.022-25 K B GRM	a	b	c	d
FUNC/E.VR		O C	0683 87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
FUNC/E.VR		O C	0684 87-010-405-080	CAP,E 10-50 M 11L SME	a	.	c	.
FUNC/E.VR		O C	0684 87-A12-091-080	CAP,E 10-50 SMG	.	b	.	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35	CX-SNRV35	CX-SNRV35	CX-SNRV35
					HRJSC	HR7SM	HRSC	HRSM
FUNC/E.VR	O C	0685	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
FUNC/E.VR	O C	0686	87-010-405-080	CAP,E 10-50 M 11L SME	a	.	c	.
FUNC/E.VR	O C	0686	87-A12-091-080	CAP,E 10-50 SMG	.	b	.	d
FUNC/E.VR	O C	0687	87-A11-058-080	C-CAP,U 0.22-10 K B	a	b	c	d
FUNC/E.VR	O C	0688	87-A11-058-080	C-CAP,U 0.22-10 K B	a	b	c	d
FUNC/E.VR	O C	0689	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
FUNC/E.VR	O C	0690	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
FUNC/E.VR	X	CLP0303	87-A60-884-010	PIN,DIAL COATING-SHS	a	b	c	d
FUNC/E.VR	X	CLP0304	87-A60-884-010	PIN,DIAL COATING-SHS	a	b	c	d
FUNC/E.VR	! O CN	0301	87-A60-620-010	CONN,3P V 2MM JMT	a	b	c	d
FUNC/E.VR	! O CN	0302	87-A60-625-010	CONN,8P V 2MM JMT	a	b	c	d
FUNC/E.VR	! O CN	0601	87-099-719-010	CONN,30P H BLK TYK-B(X)	a	b	c	d
FUNC/E.VR	! O CN	0603	87-099-667-010	CONN,8P V TUC-P08P-B1	a	b	c	d
FUNC/E.VR	! O CN	0604	87-099-196-010	CONN,8P V BLK 6216	a	b	c	d
FUNC/E.VR	O CN	0681	87-A61-747-010	CONN,8P H GRY TUC-P08X-C1	a	b	c	d
FUNC/E.VR	S D	0301	87-A40-269-080	C-DIODE,MC2836	a	b	c	d
FUNC/E.VR	S D	0661	87-A40-438-080	ZENER,MTZJ4.7A	a	b	c	d
FUNC/E.VR	S D	0662	87-A40-438-080	ZENER,MTZJ4.7A	a	b	c	d
FUNC/E.VR	X FB	0601	88-118-000-080	C-JUMPER, 7A	a	b	c	d
FUNC/E.VR	X FB	0602	88-118-000-080	C-JUMPER, S	a	b	c	d
					CX-SNRV35	CX-SNRV35	CX-SNRV35	CX-SNRV35
					HRJSC	HR7SM	HRSC	HRSM
FUNC/E.VR	O FB	0603	87-008-372-080	FLTR,EMI BL01 RN1	a	b	c	d
FUNC/E.VR	S IC	0601	87-A22-236-040	C-IC,BD3881FV	a	b	c	d
FUNC/E.VR	S IC	0681	87-A21-419-040	C-IC,NJM14558MD-TE2	a	b	c	d
FUNC/E.VR	S IC	0682	87-017-726-040	C-IC,BU4052BCF	a	b	c	d
FUNC/E.VR	! O J	0602	87-A60-881-010	JACK,PIN 2P MSP 242V05 PPSN	a	b	c	d
FUNC/E.VR	X JR	0301	88-108-000-080	C-JUMPER, U	a	b	c	d
FUNC/E.VR	X JR	0302	88-108-000-080	C-JUMPER, U	a	b	c	d
FUNC/E.VR	X JR	0303	88-108-000-080	C-JUMPER, U	a	b	c	d
FUNC/E.VR	X JR	0304	88-129-000-080	C-JUMPER, 3216	a	b	c	d
FUNC/E.VR	X JR	0305	88-108-000-080	C-JUMPER, U	a	b	c	d
FUNC/E.VR	X JR	0401	88-129-000-080	C-JUMPER, 3216	a	b	c	d
FUNC/E.VR	X JR	0402	88-129-000-080	C-JUMPER, 3216	a	b	c	d
FUNC/E.VR	X JR	0403	88-108-000-080	C-JUMPER, U	a	b	c	d
FUNC/E.VR	X JR	0602	88-108-000-080	C-JUMPER, U	a	b	c	d
FUNC/E.VR	X JR	0603	88-108-000-080	C-JUMPER, U	a	b	c	d
FUNC/E.VR	X JR	0604	88-129-000-080	C-JUMPER, 3216	a	b	c	d
FUNC/E.VR	X JR	0605	88-108-000-080	C-JUMPER, U	a	b	c	d
FUNC/E.VR	X JW	0401	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0402	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0403	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35	CX-SNRV35	CX-SNRV35	CX-SNRV35
					HRJSC	HR7SM	HRSC	HRSM
FUNC/E.VR	X JW	0501	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0601	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0602	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0603	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0604	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0605	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0606	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0607	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0608	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0609	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0610	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0611	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0612	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0613	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0614	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0615	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0616	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0617	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0618	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0619	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35	CX-SNRV35	CX-SNRV35	CX-SNRV35
					HRJSC	HR7SM	HRSC	HRSM
FUNC/E.VR	X JW	0620	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0621	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0622	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0623	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0624	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0625	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0626	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0627	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0628	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0629	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0630	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0631	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0632	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0633	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0634	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0635	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0636	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0637	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0638	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X JW	0639	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
FUNC/E.VR	X	JW	0640 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	X	JW	0641 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/E.VR	O	L	0451 87-007-342-010	COIL,OSC 85KHZ BIAS	a	b	c	d
FUNC/E.VR	S	Q	0301 87-A30-091-080	FET,2SJ460	a	b	c	d
FUNC/E.VR	S	Q	0302 87-A30-091-080	FET,2SJ460	a	b	c	d
FUNC/E.VR	S	Q	0303 87-A30-090-080	FET,2SK2541	a	b	c	d
FUNC/E.VR	S	Q	0304 87-A30-090-080	FET,2SK2541	a	b	c	d
FUNC/E.VR	S	Q	0305 87-A30-091-080	FET,2SJ460	a	b	c	d
FUNC/E.VR	S	Q	0306 87-A30-091-080	FET,2SJ460	a	b	c	d
FUNC/E.VR	S	Q	0307 87-A30-090-080	FET,2SK2541	a	b	c	d
FUNC/E.VR	S	Q	0308 87-A30-090-080	FET,2SK2541	a	b	c	d
FUNC/E.VR	S	Q	0309 87-A30-090-080	FET,2SK2541	a	b	c	d
FUNC/E.VR	S	Q	0451 87-A30-630-080	TR,2SC5343GL	a	b	c	d
FUNC/E.VR	S	Q	0452 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
FUNC/E.VR	S	Q	0453 89-333-317-880	TR,2SC3331(T/U)	a	b	c	d
FUNC/E.VR	S	Q	0454 89-333-317-880	TR,2SC3331(T/U)	a	b	c	d
FUNC/E.VR	S	Q	0601 87-A30-538-040	C-TR,SRA2202S	a	b	c	d
FUNC/E.VR	S	Q	0651 87-A30-087-080	C-FET,2SK2158	a	b	c	d
FUNC/E.VR	S	Q	0652 87-A30-087-080	C-FET,2SK2158	a	b	c	d
FUNC/E.VR	S	Q	0653 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
FUNC/E.VR	X	R	0301 88-108-393-080	C-RES,U 39K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0302 88-108-393-080	C-RES,U 39K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0303 88-108-823-080	C-RES,U 82K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0304 88-108-823-080	C-RES,U 82K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0305 88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0451 88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0453 88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0454 88-121-829-080	RES,8.2-1/8W J	a	b	c	d
FUNC/E.VR	X	R	0455 88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0456 88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0457 88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0458 88-108-563-080	C-RES,U 56K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0459 88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0469 88-108-150-080	C-RES,U 15-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0601 88-108-680-080	C-RES,U 68-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0602 88-108-680-080	C-RES,U 68-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0603 88-108-394-080	C-RES,U 390K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0604 88-108-394-080	C-RES,U 390K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0605 88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0606 88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0607 88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0608 88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0613 88-108-273-080	C-RES,U 27K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0614 88-108-273-080	C-RES,U 27K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0615 88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0616 88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0617 88-108-153-080	C-RES,U 15K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0619 88-108-153-080	C-RES,U 15K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0621 88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0622 88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0623 88-108-272-080	C-RES,U 2.7K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0624 88-108-272-080	C-RES,U 2.7K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0625 88-108-682-080	C-RES,U 6.8K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0626 88-108-682-080	C-RES,U 6.8K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0627 88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0628 88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0629 88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0630 88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0631 88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0632 88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0633 88-108-272-080	C-RES,U 2.7K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0634 88-108-272-080	C-RES,U 2.7K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0635 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0636 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0637 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0638 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0639 88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0640 88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0641 88-121-223-080	RES,22K-1/8W J	a	b	c	d
FUNC/E.VR	X	R	0642 88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0643 88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0644 88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0645 88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0646 88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0649 88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0650 88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0651 88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
FUNC/E.VR	O	R	0652 88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
FUNC/E.VR	X	R	0656 88-121-394-080	RES,390K-1/8W J	a	b	c	d
FUNC/E.VR	X	R	0657 88-108-274-080	C-RES,U 270K-1/16W J	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
FUNC/E.VR	X R	0658	88-108-274-080	C-RES,U 270K-1/16W J	a	b	c	d
FUNC/E.VR	X R	0659	88-108-394-080	C-RES,U 390K-1/16W J	a	b	c	d
FUNC/E.VR	X R	0660	88-108-274-080	C-RES,U 270K-1/16W J	a	b	c	d
FUNC/E.VR	X R	0661	88-108-392-080	C-RES,U 3.9K-1/16W J	a	b	c	d
FUNC/E.VR	X R	0662	88-108-392-080	C-RES,U 3.9K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0669	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0670	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0672	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	X R	0673	88-108-392-080	C-RES,U 3.9K-1/16W J	a	b	c	d
FUNC/E.VR	X R	0674	88-108-273-080	C-RES,U 27K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0676	88-108-563-080	C-RES,U 56K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0677	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0678	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0681	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0682	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0683	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0684	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0685	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0686	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0687	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0688	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0689	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
FUNC/E.VR	O R	0690	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
FUNC/E.VR	X R	0691	88-108-105-080	C-RES,U 1M-1/16W J	a	b	c	d
FUNC/E.VR	X R	0692	88-108-105-080	C-RES,U 1M-1/16W J	a	b	c	d
FUNC/E.VR	O	SFR0451	87-024-435-080	SFR, 33K H RH063MC	a	b	c	d
FUNC/E.VR	O	SFR0452	87-024-435-080	SFR, 33K H RH063MC	a	b	c	d
MIC	O C	0401	87-012-282-080	C-CAP,U 4700P-50 K B GRM	a	.	c	d
MIC	O C	0402	87-010-112-040	CAP,E 100-16 M 11L SME	a	.	c	.
MIC	O C	0402	87-A10-918-040	CAP,E 100-16 SMG	.	b	.	d
MIC	O C	0403	87-010-545-040	CAP,E 0.22-50 M 11L SME	a	.	c	.
MIC	O C	0403	87-A12-084-040	CAP,E 0.22-50 SMG	.	b	.	d
MIC	O C	0404	87-012-191-080	C-CAP,U 68P-50 J CH GRM	a	.	c	d
MIC	O C	0405	87-010-545-040	CAP,E 0.22-50 M 11L SME	a	.	c	.
MIC	O C	0405	87-A12-084-040	CAP,E 0.22-50 SMG	.	b	.	d
MIC	O C	0406	87-010-545-040	CAP,E 0.22-50 M 11L SME	a	.	c	.
MIC	O C	0406	87-A12-084-040	CAP,E 0.22-50 SMG	.	b	.	d
MIC	O C	0407	87-010-405-040	CAP,E 10-50 M 11L SME	a	.	c	.
MIC	O C	0407	87-A12-091-040	CAP,E 10-50 SMG	.	b	.	d
MIC	O C	0408	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MIC	O C	0409	87-010-265-040	CAP,E 33-16 M 11L SME	a	.	c	.
MIC	O C	0409	87-A12-065-040	CAP,E 33-16 SMG	.	b	.	d
MIC	O C	0410	87-010-829-080	C-CAP,U 0.047-16 Z F CM/CB	a	b	c	d
MIC	O C	0413	87-010-177-080	C-CAP,S 820P-50 J SL C2012	a	b	c	d
MIC	O	FB 0401	87-008-372-080	FL/TR,EMI BL01 RN1	a	b	c	d
MIC	O J	0401	87-A61-243-010	JACK,6.3 BLK MONO W/SW V MSC	a	b	c	d
MIC	X JR	0402	88-108-000-080	C-JUMPER,U	a	b	c	d
MIC	X JR	0403	88-108-000-080	C-JUMPER,U	a	b	c	d
MIC	X JR	0404	88-108-000-080	C-JUMPER,U	a	b	c	d
MIC	X JR	0405	88-108-000-080	C-JUMPER,U	a	b	c	d
MIC	X JW	0401	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0402	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0403	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0404	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0405	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0406	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0408	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0409	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0410	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0411	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0412	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0413	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	X JW	0414	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MIC	S Q	0401	87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MIC	S Q	0402	87-A30-075-080	C-TR,2SA1235F	a	b	c	d
MIC	S Q	0403	87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MIC	S Q	0404	87-A30-075-080	C-TR,2SA1235F	a	b	c	d
MIC	S Q	0405	87-A30-087-080	C-FET,2SK2158	a	b	c	d
MIC	S Q	0406	87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MIC	X R	0401	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
MIC	X R	0402	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MIC	X R	0403	88-128-101-080	C-RES, 100-1/8W J	a	b	c	d
MIC	X R	0404	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
MIC	O R	0405	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
MIC	X R	0406	88-108-334-080	C-RES,U 330K-1/16W J	a	b	c	d
MIC	X R	0407	88-108-333-080	C-RES,U 33K-1/16W J	a	b	c	d
MIC	O R	0408	88-108-562-080	C-RES,U 5.6K-1/16W J	a	b	c	d
MIC	O R	0409	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
MIC	O R	0410	88-108-153-080	C-RES,U 15K-1/16W J	a	b	c	d
MIC	X R	0411	88-108-561-080	C-RES,U 560-1/16W J	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MIC	X R	0412	88-108-274-080	C-RES,U 270K-1/16W J	a	b	c	d
MIC	O R	0413	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
MIC	O R	0414	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
MIC	X R	0415	88-108-000-080	C-JUMPER,U	a	b	c	d
MIC	O R	0416	88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d
MIC	X R	0417	88-108-334-080	C-RES,U 330K-1/16W J	a	b	c	d
MIC	X R	0418	88-108-154-080	C-RES,U 150K-1/16W J	a	b	c	d
MIC	O R	0720	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
MIC	O VR	0401	86-NFA-607-010	VR,RTRY 10K15AX1 1 V XV0121PVN	a	b	c	d
MICON	X *		8C-NF8-620-110	PWB,COMB FRONT CNF-8	a	b	c	d
MICON	X *		8C-NF8-621-110	PWB,FRONT	a	b	c	d
MICON	X *		8C-NF8-623-110	PWB,HLDR WIRE	a	b	c	d
MICON	X *		8C-NF8-622-110	PWB,MIC	a	b	c	d
MICON	O C	0108	87-010-785-080	C-CAP,U 0.015-25 K B GRM	a	b	c	d
MICON	O C	0153	87-010-787-080	C-CAP,U 0.022-25 K B GRM	a	b	c	d
MICON	O C	0154	87-010-246-040	CAP,E 47-35 M 11L SME	a	.	c	.
MICON	O C	0154	87-A12-078-040	CAP,E 47-35 SMG	.	b	c	d
MICON	O C	0155	87-010-404-040	CAP,E 4.7-50 M 11L SME	a	.	c	.
MICON	O C	0155	87-A12-090-040	CAP,E 4.7-50 SMG	.	b	c	d
MICON	O C	0156	87-010-404-040	CAP,E 4.7-50 M 11L SME	a	.	c	.
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	O C	0156	87-A12-090-040	CAP,E 4.7-50 SMG	.	b	c	d
MICON	O C	0301	87-012-278-080	C-CAP,U 2200P-50 K B GRM	a	b	c	d
MICON	O C	0351	87-A10-353-080	C-CAP,U 0.22-10 K B	a	b	c	d
MICON	O C	0361	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
MICON	O C	0362	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
MICON	O C	0371	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
MICON	O C	0372	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
MICON	X C	0451	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON	O C	0601	87-010-382-040	CAP,E 22-25 M 11L SME	a	.	c	.
MICON	O C	0601	87-A12-069-040	CAP,E 22-25 SMG	.	b	c	d
MICON	O C	0801	87-A10-353-080	C-CAP,U 0.22-10 K B	a	b	c	d
MICON	O C	0803	87-012-280-080	C-CAP,U 3300P-50 K B GRM	a	b	c	d
MICON	O C	0804	87-A10-592-080	C-CAP,S 0.015-50 J B	a	b	c	d
MICON	O C	0806	87-012-273-080	C-CAP,U 820P-50 K B GRM	a	b	c	d
MICON	O C	0808	87-010-544-040	CAP,E 0.1-50 M 11L SME	a	.	c	.
MICON	O C	0808	87-A12-083-040	CAP,E 0.1-50 SMG	.	b	c	d
MICON	O C	0809	87-010-404-040	CAP,E 4.7-50 M 11L SME	a	.	c	.
MICON	O C	0809	87-A12-090-040	CAP,E 4.7-50 SMG	.	b	c	d
MICON	O C	0810	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
MICON	O C	0811	87-A12-052-080	C-CAP,S 0.033-25 J B	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	O C	0812	87-012-285-080	C-CAP,U 8200P-50 K B GRM	a	b	c	d
MICON	O C	0901	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0902	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0903	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0904	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0905	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0906	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0907	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0908	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0909	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0910	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0911	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
MICON	O C	0912	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
MICON	O C	0913	87-A10-189-040	CAP,E 220-10 M SL	a	b	c	d
MICON	O C	0915	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
MICON	O C	0916	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
MICON	O C	0917	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
MICON	O C	0919	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
MICON	O C	0920	87-010-829-080	C-CAP,U 0.047-16 Z F CM/CB	a	b	c	d
MICON	O C	0921	87-012-282-080	C-CAP,U 4700P-50 K B GRM	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	O C	0922	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0923	87-010-785-080	C-CAP,U 0.015-25 K B GRM	a	b	c	d
MICON	O C	0924	87-010-785-080	C-CAP,U 0.015-25 K B GRM	a	b	c	d
MICON	O C	0925	87-010-785-080	C-CAP,U 0.015-25 K B GRM	a	b	c	d
MICON	O C	0931	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0932	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0933	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
MICON	O C	0951	87-012-172-080	C-CAP,U 10P-50 D CH GRM	a	b	c	d
MICON	O C	0952	87-010-854-080	C-CAP,S 560P-50 J CH CMC	a	b	c	d
MICON	O C	0953	87-012-349-080	C-CAP,S 1000P-50 J CH GRM	a	b	c	d
MICON	O C	0961	87-010-391-040	CAP,E 10-35 M 11L SME	a	.	c	.
MICON	O C	0961	87-A12-075-040	CAP,E 10-35 SMG	.	b	c	d
MICON	O C	0962	87-012-336-080	C-CAP,U 330P-50 J SL GRM	a	b	c	d
MICON	O C	0963	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
MICON	! O CN	0103	87-099-013-010	CONN,11P V BLK 6216	a	b	c	d
MICON	! O CN	0701	87-099-720-010	CONN,30P BLK TYK-B(P)	a	b	c	d
MICON	! O CN	0731	87-099-196-010	CONN,8P V BLK 6216	a	b	c	d
MICON	S D	0103	87-020-465-080	DIODE,1SS133	a	b	c	d
MICON	S D	0104	87-020-465-080	DIODE,1SS133	a	b	c	d
MICON	S D	0301	87-A40-234-080	ZENER,MTZJ5.6A	a	b	c	d

! = ⚠SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON		S D 0302	87-020-465-080	DIODE,1SS133	a	b	c	d
MICON		S D 0601	87-A40-269-080	C-DIODE,MC2836	a	b	c	d
MICON		S D 0801	87-020-465-080	DIODE,1SS133	a	b	c	d
MICON		S D 0984	87-020-465-080	DIODE,1SS133	a	b	c	d
MICON		S D 0987	87-020-465-080	DIODE,1SS133	a	b	c	d
MICON		O FL 0201	8C-NF8-615-010	FL,CNF-8 FL-BJ867GNK	a	b	c	d
MICON		S IC 0901	8C-NH8-610-030	C-IC,UPD780228GF-092-3BA	a	b	c	d
MICON		S IC 0961	87-A21-218-110	IC,NJL64H380A	a	b	c	d
MICON		X JR 0101	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0202	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0204	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0206	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0208	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0210	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0218	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0219	88-129-000-080	C-JUMPER, 3216	a	b	c	d
MICON		X JR 0220	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0221	88-129-000-080	C-JUMPER, 3216	a	b	c	d
MICON		X JR 0222	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0224	88-108-000-080	C-JUMPER,U	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON		X JR 0226	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0621	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0901	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0902	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0903	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0904	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0905	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JR 0964	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X JW 0101	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0103	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0104	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0105	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0106	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0107	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0108	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0109	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0110	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0151	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0152	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0201	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON		X JW 0209	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0301	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0302	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0303	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0304	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0305	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0306	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0307	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0308	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0309	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0310	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0311	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0312	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0313	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0314	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0315	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0316	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0317	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0318	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0319	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON		X JW 0320	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0321	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0322	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0323	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0324	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0325	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0326	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0327	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0328	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0329	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0330	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0331	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0415	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0601	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0602	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0603	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0604	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0605	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0606	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW 0607	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	X	JW 0609	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0610	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0611	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0612	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0614	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0616	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0617	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0618	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0619	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0620	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0701	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0703	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0704	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0705	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0706	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0707	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0709	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0710	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0711	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0712	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	X	JW 0713	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0731	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0732	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0801	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0803	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0804	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0805	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0806	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0807	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0808	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0809	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0901	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0902	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0903	88-121-102-080	RES,1K-1/8W J	a	b	c	d
MICON	X	JW 0904	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0905	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0906	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0907	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0908	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0909	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	X	JW 0910	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0912	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0913	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0914	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0915	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0916	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0917	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0918	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0919	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0920	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0921	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0922	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0923	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0925	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0926	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0927	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0928	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0929	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0930	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0931	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	X	JW 0932	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0933	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0934	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0935	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0936	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0937	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0938	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0939	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0940	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0941	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0942	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0943	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0944	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0945	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0946	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0947	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0948	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0949	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0950	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON	X	JW 0951	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON		X JW	0952 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0953 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0954 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0956 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0957 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0958 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0959 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0960 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0961 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0962 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X JW	0963 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		O L	0951 87-A50-655-010	COIL,CLK 4.19MHZ (TOKO) 7KLY	a	b	c	d
MICON		O LED0201	87-A41-062-040	LED,LTL-1CHEE-012A RED	a	b	c	d
MICON		S Q	0102 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MICON		S Q	0104 87-A30-538-040	C-TR,SRA2202S	a	b	c	d
MICON		S Q	0301 87-A30-494-080	TR,2SA1980G	a	b	c	d
MICON		S Q	0302 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MICON		S Q	0303 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MICON		S Q	0451 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MICON		S Q	0601 87-A30-495-080	TR,2SA1981Y	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON		S Q	0602 87-A30-495-080	TR,2SA1981Y	a	b	c	d
MICON		S Q	0603 87-A30-200-080	TR,2SA1585SR	a	b	c	d
MICON		S Q	0801 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MICON		S Q	0802 87-A30-075-080	C-TR,2SA1235F	a	b	c	d
MICON		S Q	0803 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MICON		S Q	0804 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MICON		S Q	0805 87-A30-076-080	C-TR,2SC3052F	a	b	c	d
MICON		S Q	0901 87-A30-538-040	C-TR,SRA2202S	a	b	c	d
MICON		O R	0109 88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d
MICON		O R	0110 88-108-153-080	C-RES,U 15K-1/16W J	a	b	c	d
MICON		X R	0111 88-108-333-080	C-RES,U 33K-1/16W J	a	b	c	d
MICON		O R	0112 88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d
MICON		O R	0114 88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON		X R	0115 88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X R	0116 88-108-124-080	C-RES,U 120K-1/16W J	a	b	c	d
MICON		X R	0151 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X R	0152 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
MICON		X R	0153 88-128-821-080	C-RES, 820-1/8W J	a	b	c	d
MICON		X R	0154 88-128-821-080	C-RES, 820-1/8W J	a	b	c	d
MICON		O R	0155 88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON		O R	0156 88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
MICON		X R	0161 88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X R	0162 88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X R	0163 88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X R	0164 88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X R	0165 88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X R	0166 88-108-000-080	C-JUMPER,U	a	b	c	d
MICON		X R	0208 88-128-102-080	C-RES, 1K-1/8W J	a	b	c	d
MICON		X R	0301 88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON		X R	0302 88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
MICON		O R	0303 88-108-153-080	C-RES,U 15K-1/16W J	a	b	c	d
MICON		O R	0304 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
MICON		X R	0306 88-108-471-080	C-RES,U 470-1/16W J	a	b	c	d
MICON		O R	0321 88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON		O R	0322 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
MICON		X R	0323 88-108-821-080	C-RES,U 820-1/16W J	a	b	c	d
MICON		O R	0324 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
MICON		X R	0325 88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d
MICON		X R	0326 88-121-122-080	RES,1.2K-1/8W J	a	b	c	d
MICON		X R	0327 88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON		X R	0328 88-121-182-080	RES,1.8K-1/8W J	a	b	c	d
MICON		O R	0329 88-108-272-080	C-RES,U 2.7K-1/16W J	a	b	c	d
MICON		O R	0330 88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
MICON		X R	0331 88-121-472-080	RES,4.7K-1/8W J	a	b	c	d
MICON		X R	0332 88-108-682-080	C-RES,U 6.8K-1/16W J	a	b	c	d
MICON		O R	0333 88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON		X R	0334 88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
MICON		O R	0335 88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
MICON		O R	0341 88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON		O R	0342 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
MICON		X R	0343 88-108-821-080	C-RES,U 820-1/16W J	a	b	c	d
MICON		O R	0344 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
MICON		X R	0345 88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d
MICON		X R	0346 88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d
MICON		X R	0347 88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d
MICON		X R	0348 88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d
MICON		O R	0349 88-108-272-080	C-RES,U 2.7K-1/16W J	a	b	c	d
MICON		O R	0350 88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
MICON		X R	0351 88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
MICON		X R	0352 88-121-682-080	RES,6.8K-1/8W J	a	b	c	d

! = Δ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM	
MICON	O R	0361	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
MICON	O R	0362	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
MICON	X R	0363	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	
MICON	X R	0364	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	
MICON	O R	0371	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
MICON	O R	0372	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
MICON	X R	0373	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	
MICON	X R	0374	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	
MICON	O R	0451	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
MICON	X R	0452	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0453	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0454	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	O R	0601	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
MICON	X R	0602	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d	
MICON	O R	0603	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
MICON	X R	0604	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d	
MICON	O R	0605	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
MICON	O R	0606	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	X R	0607	88-108-000-080	C-JUMPER,U	a	b	c	d	
MICON	O R	0611	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM	
MICON	O R	0612	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	
MICON	O R	0613	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	
MICON	O R	0614	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	
MICON	O R	0615	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	
MICON	O R	0617	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	
MICON	X R	0618	88-128-473-080	C-RES, 47K-1/8W J	a	b	c	d	
MICON	O R	0704	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	O R	0705	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	O R	0706	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	O R	0707	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	X R	0708	88-121-102-080	RES,1K-1/8W J	a	b	c	d	
MICON	O R	0709	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	
MICON	X R	0710	88-128-101-080	C-RES, 100-1/8W J	a	b	c	d	
MICON	O R	0711	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	
MICON	O R	0712	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	
MICON	O R	0713	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	
MICON	X R	0719	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	
MICON	O R	0721	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
MICON	O R	0730	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	O R	0732	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM	
MICON	O R	0733	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	
MICON	O R	0734	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	O R	0735	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	O R	0740	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	O R	0741	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	O R	0742	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	X R	0743	88-108-474-080	C-RES,U 470K-1/16W J	a	b	c	d	
MICON	O R	0744	88-108-823-080	C-RES,U 82K-1/16W J	a	b	c	d	
MICON	X R	0745	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0749	88-108-474-080	C-RES,U 470K-1/16W J	a	b	c	d	
MICON	O R	0803	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	O R	0804	88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d	
MICON	X R	0805	88-108-273-080	C-RES,U 27K-1/16W J	a	b	c	d	
MICON	O R	0806	88-108-562-080	C-RES,U 5.6K-1/16W J	a	b	c	d	
MICON	X R	0807	88-108-000-080	C-JUMPER,U	a	b	c	d	
MICON	X R	0808	88-121-101-080	RES,100-1/8W J	a	b	c	d	
MICON	O R	0809	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
MICON	X R	0810	88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d	
MICON	O R	0811	88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d	
MICON	O R	0813	88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d	
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM	
MICON	O R	0815	88-108-272-080	C-RES,U 2.7K-1/16W J	a	b	c	d	
MICON	X R	0816	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	O R	0818	88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d	
MICON	X R	0819	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d	
MICON	O R	0820	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	
MICON	X R	0821	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	O R	0822	88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d	
MICON	X R	0823	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	
MICON	X R	0824	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	
MICON	X R	0825	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	
MICON	X R	0826	88-108-000-080	C-JUMPER,U	a	b	c	d	
MICON	O R	0827	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	
MICON	X R	0901	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0902	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0903	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0904	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0905	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0906	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0907	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
MICON	X R	0908	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C		REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
						CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	X	R	0909	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0910	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0911	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0912	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0913	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	O	R	0914	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
MICON	X	R	0915	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0916	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0917	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0918	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0919	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0920	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0921	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0922	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0923	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0924	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0925	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0926	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0927	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0928	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
						CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	X	R	0929	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0930	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0931	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0932	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0933	88-121-104-080	RES,100K-1/8W J	a	b	c	d
MICON	X	R	0934	88-108-683-080	C-RES,U 68K-1/16W J	a	b	c	d
MICON	X	R	0935	88-108-683-080	C-RES,U 68K-1/16W J	a	b	c	d
MICON	X	R	0936	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0937	88-128-472-080	C-RES, 4.7K-1/8W J	a	b	c	d
MICON	X	R	0938	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
MICON	X	R	0939	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
MICON	X	R	0940	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0941	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	O	R	0942	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	X	R	0943	88-121-472-080	RES,4.7K-1/8W J	a	b	c	d
MICON	X	R	0946	88-108-000-080	C-JUMPER,U	a	b	c	d
MICON	X	R	0947	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	O	R	0951	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
MICON	X	R	0955	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	X	R	0956	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
						CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	X	R	0957	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
MICON	O	R	0958	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	O	R	0959	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	O	R	0960	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	X	R	0961	88-121-181-080	RES,180-1/8W J	a	b	c	d
MICON	O	R	0962	88-108-563-080	C-RES,U 56K-1/16W J	a	b	c	d
MICON	O	R	0969	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	O	R	0981	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	O	R	0982	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	O	R	0983	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	O	R	0984	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	X	R	0985	88-121-103-080	RES,10K-1/8W J	a	b	c	d
MICON	X	R	0986	88-121-103-080	RES,10K-1/8W J	a	b	c	d
MICON	O	R	0987	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	O	R	0988	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	O	R	0989	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
MICON	O	S	0321	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0322	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0323	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0324	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
						CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
MICON	O	S	0325	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0326	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0327	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0328	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0329	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0330	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0331	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0332	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0333	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0334	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0335	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0341	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0342	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0343	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0344	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0345	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0346	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0347	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0348	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d
MICON	O	S	0349	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	!	C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL					
						CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM		
MICON		O	S	0350	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d	
MICON		O	S	0351	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d	
MICON		O	S	0352	87-A91-024-180	SW,TACT KSHG611BT	a	b	c	d	
MICON		O	S	0361	87-A92-359-010	SW,RTRY EC12E24604-30MM	a	b	c	d	
MICON		O	S	0371	87-A92-273-010	SW,RTRY EC12E12204 30MM	a	b	c	d	
POWER AMP		O	C	0101	87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d	
POWER AMP		O	C	0102	87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d	
POWER AMP		O	C	0103	87-010-546-080	CAP,E 0.33-50 M 11L SME	a	.	c	.	
POWER AMP		O	C	0103	87-A12-085-080	CAP,E 0.33-50 SMG	.	b	.	d	
POWER AMP		O	C	0104	87-010-546-080	CAP,E 0.33-50 M 11L SME	a	.	c	.	
POWER AMP		O	C	0104	87-A12-085-080	CAP,E 0.33-50 SMG	.	b	.	d	
POWER AMP		O	C	0107	87-010-405-080	CAP,E 10-50 M 11L SME	a	.	c	.	
POWER AMP		O	C	0107	87-A12-091-080	CAP,E 10-50 SMG	.	b	.	d	
POWER AMP		O	C	0108	87-010-405-080	CAP,E 10-50 M 11L SME	a	.	c	.	
POWER AMP		O	C	0108	87-A12-091-080	CAP,E 10-50 SMG	.	b	.	d	
POWER AMP		O	C	0111	87-010-407-080	CAP,E 33-50 M 11L SME	a	.	c	.	
POWER AMP		O	C	0111	87-A12-093-080	CAP,E 33-50 SMG	.	b	.	d	
POWER AMP		O	C	0112	87-010-407-080	CAP,E 33-50 M 11L SME	a	.	c	.	
POWER AMP		O	C	0112	87-A12-093-080	CAP,E 33-50 SMG	.	b	.	d	
POWER AMP		O	C	0113	87-A10-596-080	C-CAP,S 100P-100 J CH	a	b	c	d	
						CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM		
POWER AMP		O	C	0114	87-A10-596-080	C-CAP,S 100P-100 J CH	a	b	c	d	
POWER AMP		O	C	0117	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d	
POWER AMP		O	C	0118	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d	
POWER AMP		O	C	0119	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d	
POWER AMP		O	C	0120	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d	
POWER AMP		O	C	0121	87-010-401-080	CAP,E 1-50 M 11L SME	a	.	c	.	
POWER AMP		O	C	0121	87-A12-087-080	CAP,E 1-50 SMG	.	b	.	d	
POWER AMP		O	C	0122	87-010-401-080	CAP,E 1-50 M 11L SME	a	.	c	.	
POWER AMP		O	C	0122	87-A12-087-080	CAP,E 1-50 SMG	.	b	.	d	
POWER AMP		O	C	0123	87-010-177-080	C-CAP,S 820P-50 J SL C2012	a	b	c	d	
POWER AMP		O	C	0124	87-010-177-080	C-CAP,S 820P-50 J SL C2012	a	b	c	d	
POWER AMP		O	C	0125	87-A10-596-080	C-CAP,S 100P-100 J CH	a	b	c	d	
POWER AMP		O	C	0126	87-A10-596-080	C-CAP,S 100P-100 J CH	a	b	c	d	
POWER AMP		O	C	0133	87-012-282-080	C-CAP,U 4700P-50 K B GRM	a	b	c	d	
POWER AMP		O	C	0140	87-012-278-080	C-CAP,U 2200P-50 K B GRM	a	b	c	d	
POWER AMP		O	C	0145	87-012-282-080	C-CAP,U 4700P-50 K B GRM	a	b	c	d	
POWER AMP		O	C	0146	87-012-282-080	C-CAP,U 4700P-50 K B GRM	a	b	c	d	
POWER AMP		O	C	0186	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d	
POWER AMP		O	C	0187	87-010-866-080	CAP,E 10-63 M VX	a	b	c	d	
POWER AMP		O	C	0188	87-010-866-080	CAP,E 10-63 M VX	a	b	c	d	
						CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM		
POWER AMP		O	C	0201	87-A10-260-080	C-CAP,U 0.1-16 K B	a	b	c	d	
POWER AMP		O	C	0225	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d	
POWER AMP		O	C	0226	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d	
POWER AMP		O	C	0227	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d	
POWER AMP		O	C	0228	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d	
POWER AMP		O	C	0241	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d	
POWER AMP		X	CLP0230	87-A60-884-010	PIN,DIAL COATING-SHS	a	b	c	d		
POWER AMP		S	D	0101	87-A40-269-080	C-DIODE,MC2836	a	b	c	d	
POWER AMP		S	D	0103	87-020-465-080	DIODE,1SS133	a	b	c	d	
POWER AMP		S	D	0104	87-020-465-080	DIODE,1SS133	a	b	c	d	
POWER AMP		S	D	0105	87-A40-269-080	C-DIODE,MC2836	a	b	c	d	
POWER AMP		S	D	0106	87-A40-269-080	C-DIODE,MC2836	a	b	c	d	
POWER AMP		S	D	0107	87-A40-270-080	C-DIODE,MC2838	a	b	c	d	
POWER AMP		S	D	0108	87-A40-270-080	C-DIODE,MC2838	a	b	c	d	
POWER AMP		S	D	0109	87-A40-488-080	DIODE,1SS244	a	b	c	d	
POWER AMP		S	D	0110	87-A40-488-080	DIODE,1SS244	a	b	c	d	
POWER AMP		S	D	0150	87-A40-270-080	C-DIODE,MC2838	a	b	c	d	
POWER AMP		S	D	0160	87-A40-270-080	C-DIODE,MC2838	a	b	c	d	
POWER AMP		S	D	0185	87-A40-393-090	DIODE,1N5402GW (F20)	a	b	c	d	
POWER AMP		S	D	0186	87-A40-393-090	DIODE,1N5402GW (F20)	a	b	c	d	
						CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM		
POWER AMP		S	D	0187	87-A40-871-080	ZENER,MTZJ5.6C	a	b	c	d	
POWER AMP		S	D	0188	87-017-931-080	ZENER,MTZJ5.6B	a	b	c	d	
POWER AMP		S	D	0189	87-A40-270-080	C-DIODE,MC2838	a	b	c	d	
POWER AMP		S	D	0190	87-A40-269-080	C-DIODE,MC2836	a	b	c	d	
POWER AMP		S	D	0191	87-A40-345-080	ZENER,MTZJ10C	a	b	c	d	
POWER AMP		S	D	0192	87-020-465-080	DIODE,1SS133	a	b	c	d	
POWER AMP		S	D	0193	87-020-465-080	DIODE,1SS133	a	b	c	d	
POWER AMP		S	D	0280	87-A40-269-080	C-DIODE,MC2836	a	b	c	d	
POWER AMP		S	D	0281	87-A40-270-080	C-DIODE,MC2838	a	b	c	d	
POWER AMP	!	O	J	0203	87-A60-238-010	TERMINAL,SP 4P (MSC)	a	b	c	d	
POWER AMP		!	O	J	0230	87-A60-420-010	JACK,3.5 ST (MSC)	a	b	c	d
POWER AMP		X	JR	0101	88-108-000-080	C-JUMPER,U	a	b	c	d	
POWER AMP		X	JR	0102	88-108-000-080	C-JUMPER,U	a	b	c	d	
POWER AMP		X	JR	0103	88-108-000-080	C-JUMPER,U	a	b	c	d	
POWER AMP		X	JR	0104	88-108-000-080	C-JUMPER,U	a	b	c	d	
POWER AMP		X	JR	0109	88-108-000-080	C-JUMPER,U	a	b	c	d	
POWER AMP		X	JW	0101	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	
POWER AMP		X	JW	0102	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	
POWER AMP		X	JW	0103	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	
POWER AMP		X	JW	0104	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
POWER AMP	X	JW 0107	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0108	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0109	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0110	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0111	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0112	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0113	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0114	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0115	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0116	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0117	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0118	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0119	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0120	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0121	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0122	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0123	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0124	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0125	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0126	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0127	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0128	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0129	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0130	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0131	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0132	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0133	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0134	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0135	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0136	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0137	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0138	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0139	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0201	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0202	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0204	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0205	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0206	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0207	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0211	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0212	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0213	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0214	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0215	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0216	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0217	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0218	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0219	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0220	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0221	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0223	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0235	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0236	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0237	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0238	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0240	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0241	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0242	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	X	JW 0249	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
POWER AMP	O L	0201	87-A50-610-010	COIL, 1UH K(MDEC)	a	b	c	d
POWER AMP	O L	0202	87-A50-610-010	COIL, 1UH K(MDEC)	a	b	c	d
POWER AMP	S Q	0101	87-A30-675-040	C-TR, 2SD1306NE07TL	a	b	c	d
POWER AMP	S Q	0102	87-A30-675-040	C-TR, 2SD1306NE07TL	a	b	c	d
POWER AMP	S Q	0103	87-A30-663-040	C-TR, 2SB792A(RS)	a	b	c	d
POWER AMP	S Q	0104	87-A30-663-040	C-TR, 2SB792A(RS)	a	b	c	d
POWER AMP	S Q	0105	87-A30-663-040	C-TR, 2SB792A(RS)	a	b	c	d
POWER AMP	S Q	0106	87-A30-663-040	C-TR, 2SB792A(RS)	a	b	c	d
POWER AMP	S Q	0107	87-A30-076-080	C-TR, 2SC3052F	a	b	c	d
POWER AMP	S Q	0108	87-A30-076-080	C-TR, 2SC3052F	a	b	c	d
POWER AMP	S Q	0109	87-A30-076-080	C-TR, 2SC3052F	a	b	c	d
POWER AMP	S Q	0110	87-A30-076-080	C-TR, 2SC3052F	a	b	c	d
POWER AMP	S Q	0111	87-A30-672-080	TR, 2N5551C	a	b	c	d
POWER AMP	S Q	0112	87-A30-672-080	TR, 2N5551C	a	b	c	d
POWER AMP	S Q	0113	87-A30-076-080	C-TR, 2SC3052F	a	b	c	d
POWER AMP	S Q	0114	87-A30-076-080	C-TR, 2SC3052F	a	b	c	d
POWER AMP	S Q	0115	87-A30-662-040	C-TR, 2SD814A(RS)	a	b	c	d
POWER AMP	S Q	0116	87-A30-662-040	C-TR, 2SD814A(RS)	a	b	c	d
POWER AMP	S Q	0117	87-A30-528-010	TR, 2SB1686	a	b	c	d
POWER AMP	S Q	0118	87-A30-528-010	TR, 2SB1686	a	b	c	d
POWER AMP	S Q	0119	87-A30-529-010	TR, 2SD2642	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
POWER AMP	S Q	0120	87-A30-529-010	TR,2SD2642	a	b	c	d
POWER AMP	S Q	0123	87-A30-663-040	C-TR,2SB792A(RS)	a	b	c	d
POWER AMP	S Q	0124	87-A30-663-040	C-TR,2SB792A(RS)	a	b	c	d
POWER AMP	S Q	0126	87-A30-663-040	C-TR,2SB792A(RS)	a	b	c	d
POWER AMP	S Q	0127	87-A30-076-080	C-TR,2SC3052F	a	b	c	d
POWER AMP	S Q	0128	87-A30-076-080	C-TR,2SC3052F	a	b	c	d
POWER AMP	S Q	0130	87-A30-662-040	C-TR,2SD814A(RS)	a	b	c	d
POWER AMP	S Q	0183	87-A30-186-010	FET,2SK3053	a	b	c	d
POWER AMP	S Q	0184	87-A30-186-010	FET,2SK3053	a	b	c	d
POWER AMP	S Q	0185	87-A30-076-080	C-TR,2SC3052F	a	b	c	d
POWER AMP	S Q	0186	87-A30-075-080	C-TR,2SA1235F	a	b	c	d
POWER AMP	S Q	0187	87-A30-075-080	C-TR,2SA1235F	a	b	c	d
POWER AMP	S Q	0235	87-A30-075-080	C-TR,2SA1235F	a	b	c	d
POWER AMP	S Q	0280	87-A30-538-040	C-TR,SRA2202S	a	b	c	d
POWER AMP	S Q	0281	87-A30-663-040	C-TR,2SB792A(RS)	a	b	c	d
POWER AMP	O R	0103	88-108-153-080	C-RES,U 15K-1/16W J	a	b	c	d
POWER AMP	O R	0104	88-108-153-080	C-RES,U 15K-1/16W J	a	b	c	d
POWER AMP	X R	0105	88-108-273-080	C-RES,U 27K-1/16W J	a	b	c	d
POWER AMP	X R	0106	88-108-273-080	C-RES,U 27K-1/16W J	a	b	c	d
POWER AMP	O R	0107	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
POWER AMP	O R	0108	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
POWER AMP	X R	0111	88-118-821-080	C-RES,S 820-1/10W J	a	b	c	d
POWER AMP	X R	0112	88-118-821-080	C-RES,S 820-1/10W J	a	b	c	d
POWER AMP	X R	0113	88-118-273-080	C-RES,S 27K-1/10W J	a	b	c	d
POWER AMP	X R	0114	88-118-273-080	C-RES,S 27K-1/10W J	a	b	c	d
POWER AMP	X R	0115	88-128-222-080	C-RES, 2.2K-1/8W J	a	b	c	d
POWER AMP	X R	0116	88-128-222-080	C-RES, 2.2K-1/8W J	a	b	c	d
POWER AMP	O R	0117	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
POWER AMP	O R	0118	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
POWER AMP	X R	0119	88-118-101-080	C-RES,S 100-1/10W J	a	b	c	d
POWER AMP	X R	0120	88-118-101-080	C-RES,S 100-1/10W J	a	b	c	d
POWER AMP	X R	0121	88-118-101-080	C-RES,S 100-1/10W J	a	b	c	d
POWER AMP	X R	0122	88-118-101-080	C-RES,S 100-1/10W J	a	b	c	d
POWER AMP	X R	0123	88-128-222-080	C-RES, 2.2K-1/8W J	a	b	c	d
POWER AMP	X R	0124	88-128-222-080	C-RES, 2.2K-1/8W J	a	b	c	d
POWER AMP	X R	0125	88-128-102-080	C-RES, 1K-1/8W J	a	b	c	d
POWER AMP	X R	0126	88-128-102-080	C-RES, 1K-1/8W J	a	b	c	d
POWER AMP	X R	0127	88-118-390-080	C-RES,S 39-1/10W J	a	b	c	d
POWER AMP	X R	0128	88-118-390-080	C-RES,S 39-1/10W J	a	b	c	d
POWER AMP	O R	0129	87-A00-262-080	RES,M/F 0.15-2W J	a	b	c	d
POWER AMP	O R	0130	87-A00-262-080	RES,M/F 0.15-2W J	a	b	c	d
POWER AMP	O R	0131	87-A00-262-080	RES,M/F 0.15-2W J	a	b	c	d
POWER AMP	O R	0132	87-A00-262-080	RES,M/F 0.15-2W J	a	b	c	d
POWER AMP	X R	0133	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
POWER AMP	X R	0134	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
POWER AMP	X R	0135	88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d
POWER AMP	X R	0136	88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d
POWER AMP	O R	0137	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
POWER AMP	O R	0138	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
POWER AMP	X R	0141	88-118-102-080	C-RES,S 1K-1/10W J	a	b	c	d
POWER AMP	X R	0142	88-118-102-080	C-RES,S 1K-1/10W J	a	b	c	d
POWER AMP	X R	0143	88-108-392-080	C-RES,U 3.9K-1/16W J	a	b	c	d
POWER AMP	O R	0145	88-108-123-080	C-RES,U 12K-1/16W J	a	b	c	d
POWER AMP	O R	0146	88-108-123-080	C-RES,U 12K-1/16W J	a	b	c	d
POWER AMP	X R	0149	88-108-392-080	C-RES,U 3.9K-1/16W J	a	b	c	d
POWER AMP	O R	0151	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
POWER AMP	O R	0152	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
POWER AMP	X R	0153	88-128-272-080	C-RES, 2.7K-1/8W J	a	b	c	d
POWER AMP	O R	0155	88-108-822-080	C-RES,U 8.2K-1/16W J	a	b	c	d
POWER AMP	O R	0156	88-108-822-080	C-RES,U 8.2K-1/16W J	a	b	c	d
POWER AMP	X R	0157	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
POWER AMP	X R	0158	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
POWER AMP	O R	0159	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
POWER AMP	X R	0160	88-121-103-080	RES,10K-1/8W J	a	b	c	d
POWER AMP	X R	0161	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
POWER AMP	X R	0162	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
POWER AMP	X R	0163	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
POWER AMP	X R	0164	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
POWER AMP	X R	0165	88-118-152-080	C-RES,S 1.5K-1/10W J	a	b	c	d
POWER AMP	X R	0166	88-118-152-080	C-RES,S 1.5K-1/10W J	a	b	c	d
POWER AMP	O R	0167	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
POWER AMP	X R	0168	88-118-473-080	C-RES,S 47K-1/10W J	a	b	c	d
POWER AMP	X R	0171	88-118-222-080	C-RES,S 2.2K-1/10W J	a	b	c	d
POWER AMP	X R	0172	88-118-222-080	C-RES,S 2.2K-1/10W J	a	b	c	d
POWER AMP	X R	0173	88-118-182-080	C-RES,S 1.8K-1/10W J	a	b	c	d
POWER AMP	X R	0174	88-118-182-080	C-RES,S 1.8K-1/10W J	a	b	c	d
POWER AMP	X R	0175	88-118-331-080	C-RES,S 330-1/10W J	a	b	c	d
POWER AMP	X R	0176	88-118-331-080	C-RES,S 330-1/10W J	a	b	c	d
POWER AMP	X R	0177	88-128-222-080	C-RES, 2.2K-1/8W J	a	b	c	d
POWER AMP	X R	0178	88-118-103-080	C-RES,S 10K-1/10W J	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
POWER AMP	O R	0179	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
POWER AMP	O R	0180	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
POWER AMP	X R	0181	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
POWER AMP	X R	0182	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
POWER AMP	X R	0184	88-118-102-080	C-RES,S 1K-1/10W J	a	b	c	d
POWER AMP	O R	0185	88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
POWER AMP	X R	0186	88-118-102-080	C-RES,S 1K-1/10W J	a	b	c	d
POWER AMP	X R	0187	88-118-103-080	C-RES,S 10K-1/10W J	a	b	c	d
POWER AMP	X R	0188	88-118-222-080	C-RES,S 2.2K-1/10W J	a	b	c	d
POWER AMP	X R	0189	88-128-272-080	C-RES, 2.7K-1/8W J	a	b	c	d
POWER AMP	X R	0190	88-128-272-080	C-RES, 2.7K-1/8W J	a	b	c	d
POWER AMP	X R	0192	88-128-222-080	C-RES, 2.2K-1/8W J	a	b	c	d
POWER AMP	O R	0193	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
POWER AMP	O R	0194	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
POWER AMP	O R	0195	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
POWER AMP	O R	0196	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
POWER AMP	O R	0197	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
POWER AMP	O R	0198	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
POWER AMP	X R	0199	88-108-225-080	C-RES,U 2.2M-1/16W J	a	b	c	d
POWER AMP	X R	0217	88-108-683-080	C-RES,U 68K-1/16W J	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
POWER AMP	X R	0218	88-108-105-080	C-RES,U 1M-1/16W J	a	b	c	d
POWER AMP	X R	0219	88-108-000-080	C-JUMPER,U	a	b	c	d
POWER AMP	O R	0230	87-A01-001-050	RES,220-1/2W J BLT2J	a	b	c	d
POWER AMP	O R	0231	87-A01-001-050	RES,220-1/2W J BLT2J	a	b	c	d
POWER AMP	O R	0232	87-A01-001-050	RES,220-1/2W J BLT2J	a	b	c	d
POWER AMP	O R	0233	87-A01-001-050	RES,220-1/2W J BLT2J	a	b	c	d
POWER AMP	X R	0234	88-128-222-080	C-RES, 2.2K-1/8W J	a	b	c	d
POWER AMP	X R	0235	88-128-222-080	C-RES, 2.2K-1/8W J	a	b	c	d
POWER AMP	X R	0247	88-130-100-080	RES,10-1/4W J	a	b	c	d
POWER AMP	X R	0248	88-130-100-080	RES,10-1/4W J	a	b	c	d
POWER AMP	X R	0249	88-128-100-080	C-RES, 10-1/8W J	a	b	c	d
POWER AMP	X R	0250	88-128-100-080	C-RES, 10-1/8W J	a	b	c	d
POWER AMP	O R	0280	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
POWER AMP	X R	0281	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
POWER AMP	O R	0282	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
POWER AMP	O R	0283	88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d
POWER AMP	O R	0284	88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d
POWER AMP	O R	0285	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
POWER AMP	O R	0286	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
POWER AMP	O R	0287	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
POWER AMP	O TH	0101	87-A91-042-080	C-THMS,100K 55001	a	b	c	d
POWER AMP	O TH	0102	87-A91-042-080	C-THMS,100K 55001	a	b	c	d
POWER AMP	! O W	0101	8B-NF1-640-010	F-CABLE,5P 2.5 250MM	a	b	c	d
POWER AMP	! O WH	0101	87-A90-459-010	HLD R,WIRE 2.5-5P	a	b	c	d
POWER AMP	! O WH	0230	87-A90-459-010	HLD R,WIRE 2.5-5P	a	b	c	d
P-SUPPLY/PWB/FAN	X *		8C-NF8-630-110	PWB,COMB MAIN U/LH/HR/V	a	b	c	d
P-SUPPLY/PWB/FAN	X *		8C-NF8-638-110	PWB,HP (FOR MIC MODEL) U/LH/HR/	a	b	c	d
P-SUPPLY/PWB/FAN	X *		8C-NF8-631-110	PWB,MAIN U/LH/HR/V	a	b	c	d
P-SUPPLY/PWB/FAN	X *		8C-NF8-637-110	PWB,VF U/LH/HR/V	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0003	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0004	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0005	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0006	87-012-368-080	C-CAP,S 0.1-50 Z F GRM	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0009	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0010	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0011	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0012	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0013	87-012-282-080	C-CAP,U 4700P-50 K B GRM	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0014	87-010-260-080	CAP,E 47-25 M 11L SME	a	.	c	.
P-SUPPLY/PWB/FAN	O C	0014	87-A12-071-080	CAP,E 47-25 SMG	.	b	.	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
P-SUPPLY/PWB/FAN	O C	0016	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0019	87-A12-832-000	CAP,E 3300-56 M 85 GS	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0020	87-A12-832-000	CAP,E 3300-56 M 85 GS	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0021	87-A12-826-000	CAP,E 3300-35 M 85 GS	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0022	87-A12-826-000	CAP,E 3300-35 M 85 GS	a	b	c	d
P-SUPPLY/PWB/FAN	O C	0031	87-010-263-080	CAP,E 100-10 M 11L SME	a	.	c	.
P-SUPPLY/PWB/FAN	O C	0031	87-A12-062-080	CAP,E 100-10 SMG	.	b	.	d
P-SUPPLY/PWB/FAN	O C	0034	87-010-260-080	CAP,E 47-25 M 11L SME	a	.	c	.
P-SUPPLY/PWB/FAN	O C	0034	87-A12-071-080	CAP,E 47-25 SMG	.	b	.	d
P-SUPPLY/PWB/FAN	O C	0035	87-010-405-080	CAP,E 10-50 M 11L SME	a	.	c	.
P-SUPPLY/PWB/FAN	O C	0035	87-A12-091-080	CAP,E 10-50 SMG	.	b	.	d
P-SUPPLY/PWB/FAN	O C	0036	87-010-260-080	CAP,E 47-25 M 11L SME	a	.	c	.
P-SUPPLY/PWB/FAN	O C	0036	87-A12-071-080	CAP,E 47-25 SMG	.	b	.	d
P-SUPPLY/PWB/FAN	O C	0060	87-010-403-080	CAP,E 3.3-50 M 11L SME	a	.	c	.
P-SUPPLY/PWB/FAN	O C	0060	87-A12-089-080	CAP,E 3.3-50 SMG	a	b	.	d
P-SUPPLY/PWB/FAN	O C	0061	87-010-260-080	CAP,E 47-25 M 11L SME	a	.	c	.
P-SUPPLY/PWB/FAN	O C	0061	87-A12-071-080	CAP,E 47-25 SMG	.	b	.	d
P-SUPPLY/PWB/FAN	O C	0083	87-010-387-080	CAP,E 470-25 M SME	a	.	c	.
P-SUPPLY/PWB/FAN	O C	0083	87-A12-074-080	CAP,E 470-25 SMG	.	b	.	d
P-SUPPLY/PWB/FAN	O C	0097	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
P-SUPPLY/PWB/FAN	!	O	CNA0001	8A-NF8-653-010 CONN ASSY, 9P TID-A (480)	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0001 87-A40-393-090 DIODE, 1N5402GW (F20)	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0002 87-A40-393-090 DIODE, 1N5402GW (F20)	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0003 87-A40-393-090 DIODE, 1N5402GW (F20)	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0004 87-A40-393-090 DIODE, 1N5402GW (F20)	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0005 87-A40-393-090 DIODE, 1N5402GW (F20)	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0006 87-A40-393-090 DIODE, 1N5402GW (F20)	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0007 87-A40-393-090 DIODE, 1N5402GW (F20)	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0008 87-A40-393-090 DIODE, 1N5402GW (F20)	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0011 87-A40-270-080 C-DIODE, MC2838	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0021 87-A40-345-080 ZENER, MTZJ10C	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0029 87-A40-336-080 ZENER, MTZJ27D T-72	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0030 87-020-465-080 DIODE, 1SS133	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0032 87-020-465-080 DIODE, 1SS133	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0041 87-A40-270-080 C-DIODE, MC2838	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0042 87-A40-269-080 C-DIODE, MC2836	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0060 87-020-465-080 DIODE, 1SS133	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0063 87-A40-270-080 C-DIODE, MC2838	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0064 87-A40-269-080 C-DIODE, MC2836	a	b	c	d
P-SUPPLY/PWB/FAN		S	D	0076 87-A40-269-080 C-DIODE, MC2836	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
P-SUPPLY/PWB/FAN		S	D	0077 87-A40-270-080 C-DIODE, MC2838	a	b	c	d
P-SUPPLY/PWB/FAN		S	IC	0001 87-A21-365-010 IC, NJM7808FA (A)	a	b	c	d
P-SUPPLY/PWB/FAN		X	JR	0001 88-108-000-080 C-JUMPER, U	a	b	c	d
P-SUPPLY/PWB/FAN		X	JR	0002 88-108-000-080 C-JUMPER, U	a	b	c	d
P-SUPPLY/PWB/FAN		X	JR	0003 88-108-000-080 C-JUMPER, U	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0003 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0006 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		O	JW	0007 87-008-372-080 FLTR, EMI BL01 RN1	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0008 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0009 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0010 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0011 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0012 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0013 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0014 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0015 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0016 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0017 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0018 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0019 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
P-SUPPLY/PWB/FAN		X	JW	0020 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0021 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0022 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0024 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0025 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0026 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0027 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0028 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0029 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0030 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0031 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0032 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0033 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0034 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0035 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0036 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0037 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0038 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0039 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0040 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
P-SUPPLY/PWB/FAN		X	JW	0041 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0042 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0043 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0044 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0045 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0046 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0047 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0048 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0049 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0050 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0051 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0052 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0053 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0054 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0055 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0056 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0057 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0058 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0060 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN		X	JW	0061 88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
P-SUPPLY/PWB/FAN	X	JW	0062	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	JW	0063	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	JW	0064	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	JW	0065	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	JW	0066	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	JW	0067	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	JW	0068	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	JW	0069	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	JW	0079	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	JW	0085	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0001	87-A30-494-080 TR,2SA1980G	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0002	87-A30-494-080 TR,2SA1980G	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0003	87-A30-076-080 C-TR,2SC3052F	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0006	87-A30-076-080 C-TR,2SC3052F	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0009	87-A30-494-080 TR,2SA1980G	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0010	87-A30-076-080 C-TR,2SC3052F	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0011	89-213-702-010 TR,2SB1370E	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0012	87-A30-630-080 TR,2SC5343GL	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0014	87-A30-075-080 C-TR,2SA1235F	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0060	87-A30-076-080 C-TR,2SC3052F	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0061	87-A30-075-080 C-TR,2SA1235F	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0062	87-A30-076-080 C-TR,2SC3052F	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0063	87-A30-075-080 C-TR,2SA1235F	a	b	c	d
P-SUPPLY/PWB/FAN	S	Q	0064	87-A30-076-080 C-TR,2SC3052F	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0001	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0005	88-100-000-010 PLATING-JW, 0.58 SN95	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0009	88-108-223-080 C-RES,U 22K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0010	88-108-223-080 C-RES,U 22K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0011	88-118-472-080 C-RES,S 4.7K-1/10W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0012	88-118-472-080 C-RES,S 4.7K-1/10W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0013	88-108-472-080 C-RES,U 4.7K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0014	88-118-100-080 C-RES,S 10-1/10W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0015	88-121-104-080 RES,100K-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0024	88-118-103-080 C-RES,S 10K-1/10W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0026	88-108-472-080 C-RES,U 4.7K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0027	88-118-000-080 C-JUMPER,S	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0028	88-108-221-080 C-RES,U 220-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0029	88-108-333-080 C-RES,U 33K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0031	88-121-154-080 RES,150K-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0032	88-108-472-080 C-RES,U 4.7K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0035	88-108-123-080 C-RES,U 12K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0037	88-118-102-080 C-RES,S 1K-1/10W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0038	88-118-102-080 C-RES,S 1K-1/10W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0042	88-121-331-080 RES,330-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0043	88-121-331-080 RES,330-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0044	88-121-331-080 RES,330-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0045	88-121-331-080 RES,330-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0046	88-121-471-080 RES,470-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0050	88-108-183-080 C-RES,U 18K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0051	88-108-102-080 C-RES,U 1K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0052	88-108-102-080 C-RES,U 1K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0053	88-108-473-080 C-RES,U 47K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0054	88-118-562-080 C-RES,S 5.6K-1/10W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0055	88-121-152-080 RES,1.5K-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0056	88-118-680-080 C-RES,S 68-1/10W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0057	88-108-472-080 C-RES,U 4.7K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0058	88-118-103-080 C-RES,S 10K-1/10W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0059	88-108-221-080 C-RES,U 220-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0060	88-108-471-080 C-RES,U 470-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0061	88-108-103-080 C-RES,U 10K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0062	88-108-223-080 C-RES,U 22K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0063	88-108-223-080 C-RES,U 22K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0064	88-108-103-080 C-RES,U 10K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0065	88-108-123-080 C-RES,U 12K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0066	88-108-104-080 C-RES,U 100K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0067	88-108-103-080 C-RES,U 10K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0068	88-128-152-080 C-RES, 1.5K-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0069	88-128-152-080 C-RES, 1.5K-1/8W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0076	88-108-103-080 C-RES,U 10K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0078	88-108-393-080 C-RES,U 39K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0079	88-108-822-080 C-RES,U 8.2K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0081	88-108-101-080 C-RES,U 100-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0085	88-108-103-080 C-RES,U 10K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0093	88-108-823-080 C-RES,U 82K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	X	R	0094	88-108-393-080 C-RES,U 39K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0095	88-108-822-080 C-RES,U 8.2K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	O	R	0096	88-108-823-080 C-RES,U 82K-1/16W J	a	b	c	d
P-SUPPLY/PWB/FAN	! O	WH	0001	87-A90-510-010 HLD,R,WIRE 2.5-9P	a	b	c	d
PT	X	*		8C-NH8-670-010 PWB,PT 66 2M HR	a	b	c	d
PT	O	C	0003	87-A11-132-080 CAP,TC U 0.01-50 K B	a	b	c	d

! = ⚠SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
PT	!	O CN	0002 87-A61-110-010	CONN,9P V TID-A	a	b	c	d
PT		S D	0002 87-020-465-080	DIODE,1SS133	a	b	c	d
PT		S D	0003 87-020-465-080	DIODE,1SS133	a	b	c	d
PT		S D	0004 87-020-465-080	DIODE,1SS133	a	b	c	d
PT		S D	0005 87-020-465-080	DIODE,1SS133	a	b	c	d
PT		X JW	0001 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
PT		X JW	0008 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
PT		X JW	0009 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
PT		X JW	0010 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
PT		X JW	0011 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
PT		X JW	0012 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
PT		X JW	0013 88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
PT	!	O PT	0002 8C-NH8-605-010	PT,H YKP02032 CNH-8 SUB	a	.	c	.
PT	!	O PT	0002 8C-NF5-672-010	PT,SUB CNF HR (VRK)	.	b	.	d
PT	!	O RY	0001 87-A91-418-010	RELAY,AC 12V G5PA-1-M	a	b	c	d
PT	!	O S	0001 87-A90-234-010	SW,SL 1-2-2 SWS2201	a	b	c	d
PT		O T	0001 87-A60-317-010	TERMINAL, 1P MSC	a	b	c	d
PT		O T	0002 87-A60-317-010	TERMINAL, 1P MSC	a	b	c	d
TUNER (FM FE)		O C	0901 87-012-169-080	C-CAP,U 7P-50 D CH GRM	a	b	c	d
TUNER (FM FE)		X C	0906 88-108-000-080	C-JUMPER,U	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (FM FE)		O C	0909 87-A10-915-080	C-CAP,U 1000P-25 J CH	a	b	c	d
TUNER (FM FE)		O C	0911 87-012-167-080	C-CAP,U 5P-50 C CH GRM	a	b	c	d
TUNER (FM FE)		O C	0912 87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
TUNER (FM FE)		O C	0914 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (FM FE)		O C	0915 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (FM FE)		O C	0917 87-012-164-080	C-CAP,U 2P-50 C CH GRM	a	b	c	d
TUNER (FM FE)		O C	0920 87-012-180-080	C-CAP,U 22P-50 J CH GRM	a	b	c	d
TUNER (FM FE)		O C	0921 87-012-186-080	C-CAP,U 39P-50 J CH GRM	a	b	c	d
TUNER (FM FE)		O C	0922 87-012-174-080	C-CAP,U 12P-50 J CH GRM	a	b	c	d
TUNER (FM FE)		O C	0923 87-A10-039-080	C-CAP,U 470P-50 J CH	a	b	c	d
TUNER (FM FE)		O C	0924 87-012-162-080	C-CAP,U 1P-50 C CH GRM	a	b	c	d
TUNER (FM FE)		O C	0926 87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
TUNER (FM FE)		O C	0931 87-A12-319-080	C-CAP,U 0.1-25 K B	a	b	c	d
TUNER (FM FE)		O D	0902 87-A40-916-040	C-VARI-CAP,HVC202A	a	b	c	d
TUNER (FM FE)		O D	0903 87-A40-916-040	C-VARI-CAP,HVC202A	a	b	c	d
TUNER (FM FE)		X JR	0902 88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (FM FE)		X JR	0904 88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (FM FE)		X JR	0906 88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (FM FE)		X JR	0907 88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (FM FE)		O L	0901 87-A50-110-010	COIL,FM BPF EX	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (FM FE)		O L	0903 86-ZA1-624-010	COIL,FM RF-1	a	b	c	d
TUNER (FM FE)		O L	0904 86-ZA1-622-010	COIL,FM ANT/RF-U	a	b	c	d
TUNER (FM FE)		O L	0906 87-005-847-080	COIL,2.2UH K CECS	a	b	c	d
TUNER (FM FE)		O L	0907 86-ZA1-627-010	COIL,FM OSC-U	a	b	c	d
TUNER (FM FE)		O L	0908 88-ZA1-624-010	COIL,FM IFT 7-6.2 (COILS)	a	b	c	d
TUNER (FM FE)		S Q	0901 89-503-602-080	C-FET,2SK360E	a	b	c	d
TUNER (FM FE)		S Q	0902 87-A30-664-080	C-TR,2SC2620B	a	b	c	d
TUNER (FM FE)		S Q	0904 87-A30-699-040	C-TR,2SC5477-T22	a	b	c	d
TUNER (FM FE)		X R	0903 88-108-221-080	C-RES,U 220-1/16W J	a	b	c	d
TUNER (FM FE)		O R	0904 88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
TUNER (FM FE)		O R	0905 88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
TUNER (FM FE)		X R	0906 88-108-564-080	C-RES,U 560K-1/16W J	a	b	c	d
TUNER (FM FE)		X R	0908 88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (FM FE)		X R	0911 88-108-121-080	C-RES,U 120-1/16W J	a	b	c	d
TUNER (FM FE)		O R	0912 88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
TUNER (FM FE)		X R	0913 88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
TUNER (FM FE)		X R	0914 88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
TUNER (FM FE)		X R	0918 88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (FM FE)		X SH	0901 8B-ZA3-619-010	SHLD-CASE,BZA-3 EZ	a	b	c	d
TUNER (IF)		O C	0771 87-010-263-080	CAP,E 100-10 M 11L SME	a	.	c	.
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (IF)		O C	0771 87-A12-062-080	CAP,E 100-10 SMG	.	b	.	d
TUNER (IF)		O C	0772 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)		X C	0781 88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)		O C	0782 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)		O C	0783 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)		O C	0784 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)		O C	0785 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)		O C	0786 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)		O C	0788 87-012-167-080	C-CAP,U 5P-50 C CH GRM	a	b	c	d
TUNER (IF)		O C	0789 87-016-117-080	C-CAP,U 0.018-25 J B	a	b	c	d
TUNER (IF)		O C	0790 87-016-117-080	C-CAP,U 0.018-25 J B	a	b	c	d
TUNER (IF)		O C	0791 87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
TUNER (IF)		O C	0792 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)		O C	0793 87-010-404-080	CAP,E 4.7-50 M 11L SME	a	.	c	.
TUNER (IF)		O C	0793 87-A12-090-080	CAP,E 4.7-50 SMG	.	b	.	d
TUNER (IF)		O C	0795 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)		O C	0796 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)		O C	0797 87-010-405-080	CAP,E 10-50 M 11L SME	a	.	c	.
TUNER (IF)		O C	0797 87-A12-091-080	CAP,E 10-50 SMG	.	b	.	d
TUNER (IF)		O C	0798 87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (IF)	O C	0799	87-010-265-080	CAP,E 33-16 M 11L SME	a	.	c	.
TUNER (IF)	O C	0799	87-A12-065-080	CAP,E 33-16 SMG	.	b	.	d
TUNER (IF)	O C	0800	87-010-829-080	C-CAP,U 0.047-16 Z F CM/CB	a	b	c	d
TUNER (IF)	O C	0801	87-010-403-080	CAP,E 3.3-50 M 11L SME	a	.	c	.
TUNER (IF)	O C	0801	87-A12-089-080	CAP,E 3.3-50 SMG	.	b	.	d
TUNER (IF)	O C	0802	87-010-829-080	C-CAP,U 0.047-16 Z F CM/CB	a	b	c	d
TUNER (IF)	O C	0803	87-010-787-080	C-CAP,U 0.022-25 K B GRM	a	b	c	d
TUNER (IF)	O C	0804	87-010-263-080	CAP,E 100-10 M 11L SME	a	.	c	.
TUNER (IF)	O C	0804	87-A12-062-080	CAP,E 100-10 SMG	.	b	.	d
TUNER (IF)	O C	0807	87-010-400-080	CAP,E 0.47-50 M 11L SME	a	.	c	.
TUNER (IF)	O C	0807	87-A12-086-080	CAP,E 0.47-50 SMG	.	b	.	d
TUNER (IF)	O C	0808	87-010-401-080	CAP,E 1-50 M 11L SME	a	.	c	.
TUNER (IF)	O C	0808	87-A12-087-080	CAP,E 1-50 SMG	.	b	.	d
TUNER (IF)	O C	0809	87-010-401-080	CAP,E 1-50 M 11L SME	a	.	c	.
TUNER (IF)	O C	0809	87-A12-087-080	CAP,E 1-50 SMG	.	b	.	d
TUNER (IF)	O C	0810	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
TUNER (IF)	O C	0814	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)	O C	0815	87-010-400-080	CAP,E 0.47-50 M 11L SME	a	.	c	.
TUNER (IF)	O C	0815	87-A12-086-080	CAP,E 0.47-50 SMG	.	b	.	d
TUNER (IF)	O C	0816	87-010-400-080	CAP,E 0.47-50 M 11L SME	a	.	c	.
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (IF)	O C	0816	87-A12-086-080	CAP,E 0.47-50 SMG	.	b	.	d
TUNER (IF)	O C	0821	87-010-405-080	CAP,E 10-50 M 11L SME	a	.	c	.
TUNER (IF)	O C	0821	87-A12-091-080	CAP,E 10-50 SMG	.	b	.	d
TUNER (IF)	X C	0822	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)	O C	0823	87-010-177-080	C-CAP,S 820P-50 J SL C2012	a	b	c	d
TUNER (IF)	O C	0824	87-010-404-080	CAP,E 4.7-50 M 11L SME	a	.	c	.
TUNER (IF)	O C	0824	87-A12-090-080	CAP,E 4.7-50 SMG	.	b	.	d
TUNER (IF)	O C	0825	87-010-596-080	C-CAP,S 0.047-16 K R C2012	a	b	c	d
TUNER (IF)	X D	0801	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	S D	0803	87-020-465-080	DIODE,1SS133	a	b	c	d
TUNER (IF)	S IC	0801	87-A22-060-010	IC,LA1845N-A	a	b	c	d
TUNER (IF)	X JR	0781	88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (IF)	X JR	0785	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)	X JR	0786	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)	X JR	0801	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)	X JR	0802	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)	X JR	0803	88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (IF)	X JR	0804	88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (IF)	X JW	0780	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0781	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (IF)	X JW	0782	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0783	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0784	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0786	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0787	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0788	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0789	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0790	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0791	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0793	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0794	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0795	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0796	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0797	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0798	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0799	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0801	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0802	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0811	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0812	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (IF)	X JW	0835	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	X JW	0864	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (IF)	O L	0801	87-A50-608-010	COIL,FM DET-N(TOK)	a	b	c	d
TUNER (IF)	O L	0802	87-A91-552-010	FLTR,CFMT-450AL (TOK)	a	b	c	d
TUNER (IF)	O L	0811	87-005-847-080	COIL,2.2UH K CECS	a	b	c	d
TUNER (IF)	O R	0789	88-108-123-080	C-RES,U 12K-1/16W J	a	b	c	d
TUNER (IF)	O R	0790	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (IF)	O R	0791	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
TUNER (IF)	X R	0793	88-108-221-080	C-RES,U 220-1/16W J	a	b	c	d
TUNER (IF)	X R	0795	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)	O R	0801	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
TUNER (IF)	O R	0802	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
TUNER (IF)	X R	0803	88-128-183-080	C-RES, 18K-1/8W J	a	b	c	d
TUNER (IF)	X R	0804	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)	O R	0805	88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
TUNER (IF)	X R	0806	88-108-682-080	C-RES,U 6.8K-1/16W J	a	b	c	d
TUNER (IF)	O R	0809	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
TUNER (IF)	O R	0810	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
TUNER (IF)	X R	0811	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)	X R	0812	88-108-000-080	C-JUMPER,U	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (IF)	O R	0813	88-108-224-080	C-RES,U 220K-1/16W J	a	b	c	d
TUNER (IF)	X R	0814	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
TUNER (IF)	X R	0815	88-121-682-080	RES,6.8K-1/8W J	a	b	c	d
TUNER (IF)	O R	0818	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
TUNER (IF)	X R	0821	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (IF)	X R	0823	88-108-333-080	C-RES,U 33K-1/16W J	a	b	c	d
TUNER (IF)	O R	0826	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d
TUNER (PLL)	O C	0971	87-010-381-080	CAP,E 330-16 M SME	.	.	.	.
TUNER (PLL)	O C	0971	87-A12-067-080	CAP,E 330-16 SMG	.	b	c	d
TUNER (PLL)	O C	0972	87-010-404-080	CAP,E 4.7-50 M 11L SME	a	.	c	.
TUNER (PLL)	O C	0972	87-A12-090-080	CAP,E 4.7-50 SMG	.	b	.	d
TUNER (PLL)	O C	0973	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (PLL)	O C	0974	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (PLL)	O C	0979	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
TUNER (PLL)	O C	0981	87-010-260-080	CAP,E 47-25 M 11L SME	a	.	c	.
TUNER (PLL)	O C	0981	87-A12-071-080	CAP,E 47-25 SMG	.	b	.	d
TUNER (PLL)	O C	0982	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
TUNER (PLL)	O C	0983	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (PLL)	O C	0984	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (PLL)	O C	0987	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (PLL)	O C	0988	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (PLL)	O C	0989	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (PLL)	O C	0991	87-012-176-080	C-CAP,U 15P-50 J CH GRM	a	b	c	d
TUNER (PLL)	O C	0992	87-012-176-080	C-CAP,U 15P-50 J CH GRM	a	b	c	d
TUNER (PLL)	O C	0993	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
TUNER (PLL)	O C	0995	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
TUNER (PLL)	O C	0997	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
TUNER (PLL)	O C	0998	87-010-260-080	CAP,E 47-25 M 11L SME	a	.	c	.
TUNER (PLL)	O C	0998	87-A12-071-080	CAP,E 47-25 SMG	.	b	.	d
TUNER (PLL)	O C	0999	87-A11-155-080	CAP,TC U 0.01-16 Z F	a	b	c	d
TUNER (PLL)	S D	0991	87-017-149-080	ZENER,HZS6A2L	a	b	c	d
TUNER (PLL)	S D	0994	87-020-465-080	DIODE,1SS133	a	b	c	d
TUNER (PLL)	S IC	0991	87-A21-928-010	IC,LC72131D-N	a	b	c	d
TUNER (PLL)	X JR	0971	88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (PLL)	X JR	0972	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (PLL)	X JR	0973	88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (PLL)	X JR	0974	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (PLL)	X JR	0976	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (PLL)	X JR	0977	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (PLL)	X JR	0991	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (PLL)	X JW	0973	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0974	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0975	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0977	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0978	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0979	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0980	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0981	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0982	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0987	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	X JW	0989	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (PLL)	S Q	0981	87-A30-494-080	TR,2SA1980G	a	b	c	d
TUNER (PLL)	S Q	0982	87-A30-076-080	C-TR,2SC3052F	a	b	c	d
TUNER (PLL)	S Q	0983	87-A30-076-080	C-TR,2SC3052F	a	b	c	d
TUNER (PLL)	O R	0968	88-108-822-080	C-RES,U 8.2K-1/16W J	a	b	c	d
TUNER (PLL)	O R	0973	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
TUNER (PLL)	O R	0975	88-108-562-080	C-RES,U 5.6K-1/16W J	a	b	c	d
TUNER (PLL)	O R	0976	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
TUNER (PLL)	O R	0977	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
TUNER (PLL)	X R	0978	88-108-681-080	C-RES,U 680-1/16W J	a	b	c	d
TUNER (PLL)	O R	0979	88-108-123-080	C-RES,U 12K-1/16W J	a	b	c	d
TUNER (PLL)	X R	0980	88-108-684-080	C-RES,U 680K-1/16W J	a	b	c	d
TUNER (PLL)	X R	0981	88-121-471-080	RES,470-1/8W J	a	b	c	d
TUNER (PLL)	X R	0982	88-108-682-080	C-RES,U 6.8K-1/16W J	a	b	c	d
TUNER (PLL)	X R	0983	88-108-392-080	C-RES,U 3.9K-1/16W J	a	b	c	d
TUNER (PLL)	O R	0984	88-108-562-080	C-RES,U 5.6K-1/16W J	a	b	c	d
TUNER (PLL)	X R	0985	88-121-471-080	RES,470-1/8W J	a	b	c	d
TUNER (PLL)	X R	0986	88-121-221-080	RES,220-1/8W J	a	b	c	d
TUNER (PLL)	X R	0987	88-121-472-080	RES,4.7K-1/8W J	a	b	c	d
TUNER (PLL)	O R	0988	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
TUNER (PLL)	X R	0989	88-121-102-080	RES,1K-1/8W J	a	b	c	d
TUNER (PLL)	O R	0990	88-108-563-080	C-RES,U 56K-1/16W J	a	b	c	d
TUNER (PLL)	O R	0991	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
TUNER (PLL)	O R	0992	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
TUNER (PLL)	O R	0993	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
TUNER (PLL)	O R	0994	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
TUNER (PLL)	O R	0995	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
TUNER (PLL)	O R	0996	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
TUNER (PLL)	X R	0997	88-108-154-080	C-RES,U 150K-1/16W J	a	b	c	d
TUNER (PLL)	O R	0998	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (PLL)	O R	0999	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
TUNER (PLL)	O X	0992	87-A70-306-010	VIB,XTAL 4.500MHZ CSA-309ST	a	b	c	d
TUNER (RF)	O C	0842	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0843	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0844	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0845	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0846	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	X C	0847	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X C	0848	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	O C	0849	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0850	87-010-260-080	CAP,E 47-25 M 11L SME	a	.	c	.
TUNER (RF)	O C	0850	87-A12-071-080	CAP,E 47-25 SMG	.	b	.	d
TUNER (RF)	O C	0851	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0852	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0853	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0860	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0940	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0941	87-012-180-080	C-CAP,U 22P-50 J CH GRM	a	b	c	d
TUNER (RF)	O C	0943	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0945	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (RF)	O C	0946	87-010-971-080	C-CAP,S 4700P-50 J B GRM	a	b	c	d
TUNER (RF)	O C	0947	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0948	87-012-162-080	C-CAP,U 1P-50 C CH GRM	a	b	c	d
TUNER (RF)	O C	0952	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0953	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
TUNER (RF)	O C	0954	87-010-400-080	CAP,E 0.47-50 M 11L SME	a	.	c	.
TUNER (RF)	O C	0954	87-A12-086-080	CAP,E 0.47-50 SMG	.	b	.	d
TUNER (RF)	O C	0956	87-010-263-080	CAP,E 100-10 M 11L SME	a	.	c	.
TUNER (RF)	O C	0956	87-A12-062-080	CAP,E 100-10 SMG	.	b	.	d
TUNER (RF)	O C	0959	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
TUNER (RF)	O C	0962	87-010-401-080	CAP,E 1-50 M 11L SME	a	.	c	.
TUNER (RF)	O C	0962	87-A12-087-080	CAP,E 1-50 SMG	.	b	.	d
TUNER (RF)	O C	0963	87-A12-319-080	C-CAP,U 0.1-25 K B	a	b	c	d
TUNER (RF)	O C	0964	87-010-854-080	C-CAP,S 560P-50 J CH CMC	a	b	c	d
TUNER (RF)	O C	0969	87-012-182-080	C-CAP,U 27P-50 J CH GRM	a	b	c	d
TUNER (RF)	O CF	0831	87-008-261-010	FLTR,CF SFE10.7MA5	a	b	c	d
TUNER (RF)	O CF	0832	87-008-261-010	FLTR,CF SFE10.7MA5	a	b	c	d
TUNER (RF)	S D	0941	87-020-465-080	DIODE,1SS133	a	b	c	d
TUNER (RF)	X D	0944	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	O D	0951	87-A41-065-040	C-VARI-CAP,SVC347	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (RF)	! O J	0831	87-A60-202-010	TERMINAL,ANT 4P MSP-154V-02	a	b	c	d
TUNER (RF)	! O J	0940	87-A60-633-010	CONN,2P H 2.5MM JMT	a	b	c	d
TUNER (RF)	X JR	0835	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X JR	0940	88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (RF)	X JR	0941	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X JR	0942	88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (RF)	X JR	0946	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X JR	0950	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X JR	0952	88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (RF)	X JR	0954	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X JR	0955	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X JR	0957	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X JR	0962	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X JR	0963	88-108-000-080	C-JUMPER,U	a	b	c	d
TUNER (RF)	X JR	0964	88-129-000-080	C-JUMPER, 3216	a	b	c	d
TUNER (RF)	X JW	0831	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0834	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0851	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0903	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0909	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (RF)	X JW	0943	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0949	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0951	88-121-331-080	RES,330-1/8W J	a	b	c	d
TUNER (RF)	X JW	0954	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0955	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0956	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0961	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0962	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0964	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	X JW	0965	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
TUNER (RF)	O L	0832	87-005-847-080	COIL,2.2UH K CECS	a	b	c	d
TUNER (RF)	O L	0941	87-A50-022-010	COIL,ANT SW (COI) 7.96MHZ	a	b	c	d
TUNER (RF)	O L	0942	87-A50-550-010	COIL,OSC SW-2N (COI)	a	b	c	d
TUNER (RF)	O L	0943	87-A50-522-080	COIL,1MH K CEC	a	b	c	d
TUNER (RF)	O L	0944	87-A50-159-010	COIL,10MH K C2B	a	b	c	d
TUNER (RF)	O L	0952	87-A50-430-010	COIL,ANT MW(3BSW)	a	b	c	d
TUNER (RF)	O L	0953	87-A50-431-010	COIL,OSC MW(3BSW)	a	b	c	d
TUNER (RF)	S Q	0835	87-A30-521-080	C-TR,2SC5345SF/S(O)	a	b	c	d
TUNER (RF)	S Q	0836	87-A30-677-040	C-TR,SRA2207S	a	b	c	d
TUNER (RF)	S Q	0837	87-A30-677-040	C-TR,SRA2207S	a	b	c	d

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

 
However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.


Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME		!	C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
							CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (RF)	S	Q	0941	87-A30-538-040	C-TR,SRA2202S	a	b	c	d	
TUNER (RF)	S	Q	0942	87-A30-075-080	C-TR,2SA1235F	a	b	c	d	
TUNER (RF)	S	Q	0943	87-A30-075-080	C-TR,2SA1235F	a	b	c	d	
TUNER (RF)	S	Q	0944	87-A30-076-080	C-TR,2SC3052F	a	b	c	d	
TUNER (RF)	S	Q	0945	87-A30-076-080	C-TR,2SC3052F	a	b	c	d	
TUNER (RF)	S	Q	0946	87-A30-675-040	C-TR,2SD1306NE07TL	a	b	c	d	
TUNER (RF)	S	Q	0948	87-A30-675-040	C-TR,2SD1306NE07TL	a	b	c	d	
TUNER (RF)	S	Q	0949	87-A30-076-080	C-TR,2SC3052F	a	b	c	d	
TUNER (RF)	S	Q	0950	87-A30-675-040	C-TR,2SD1306NE07TL	a	b	c	d	
TUNER (RF)	S	Q	0951	87-A30-538-040	C-TR,SRA2202S	a	b	c	d	
TUNER (RF)	S	Q	0953	89-503-602-080	C-FET,2SK360E	a	b	c	d	
TUNER (RF)	X	R	0832	88-108-391-080	C-RES,U 390-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0840	88-108-221-080	C-RES,U 220-1/16W J	a	b	c	d	
TUNER (RF)	O	R	0850	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0851	88-118-000-080	C-JUMPER,S	a	b	c	d	
TUNER (RF)	O	R	0853	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0854	88-108-331-080	C-RES,U 330-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0855	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d	
TUNER (RF)	O	R	0856	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0857	88-108-181-080	C-RES,U 180-1/16W J	a	b	c	d	
							CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (RF)	O	R	0858	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	
TUNER (RF)	O	R	0860	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0941	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0943	88-108-392-080	C-RES,U 3.9K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0945	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0946	88-108-335-080	C-RES,U 3.3M-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0947	88-108-000-080	C-JUMPER,U	a	b	c	d	
TUNER (RF)	X	R	0949	88-108-335-080	C-RES,U 3.3M-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0950	88-108-392-080	C-RES,U 3.9K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0951	88-108-335-080	C-RES,U 3.3M-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0952	88-108-000-080	C-JUMPER,U	a	b	c	d	
TUNER (RF)	X	R	0953	88-108-335-080	C-RES,U 3.3M-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0955	88-108-220-080	C-RES,U 22-1/16W J	a	b	c	d	
TUNER (RF)	O	R	0956	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0957	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0958	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0960	88-128-103-080	C-RES, 10K-1/8W J	a	b	c	d	
TUNER (RF)	X	R	0961	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d	
TUNER (RF)	X	R	0962	88-121-102-080	RES,1K-1/8W J	a	b	c	d	
TUNER (RF)	X	R	0963	88-108-000-080	C-JUMPER,U	a	b	c	d	
							CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
TUNER (RF)	X	R	0965	88-108-474-080	C-RES,U 470K-1/16W J	a	b	c	d	
TUNER (RF)	O	R	0970	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	
TUNER (RF)	X	SH	0831	87-A90-023-010	SHLD-PLATE,ANT	a	b	c	d	
TUNER (RF)	O	TC	0941	87-A91-773-080	TRIMMER,PLY 20P 6.8X5.4 CDYL	a	b	c	d	
TUNER (RF)	O	TC	0943	87-A91-774-080	TRIMMER,PLY 30P 6.8X5.4 CDYL	a	b	c	d	


SCHEMATIC DIAGRAM-1 (MAIN)

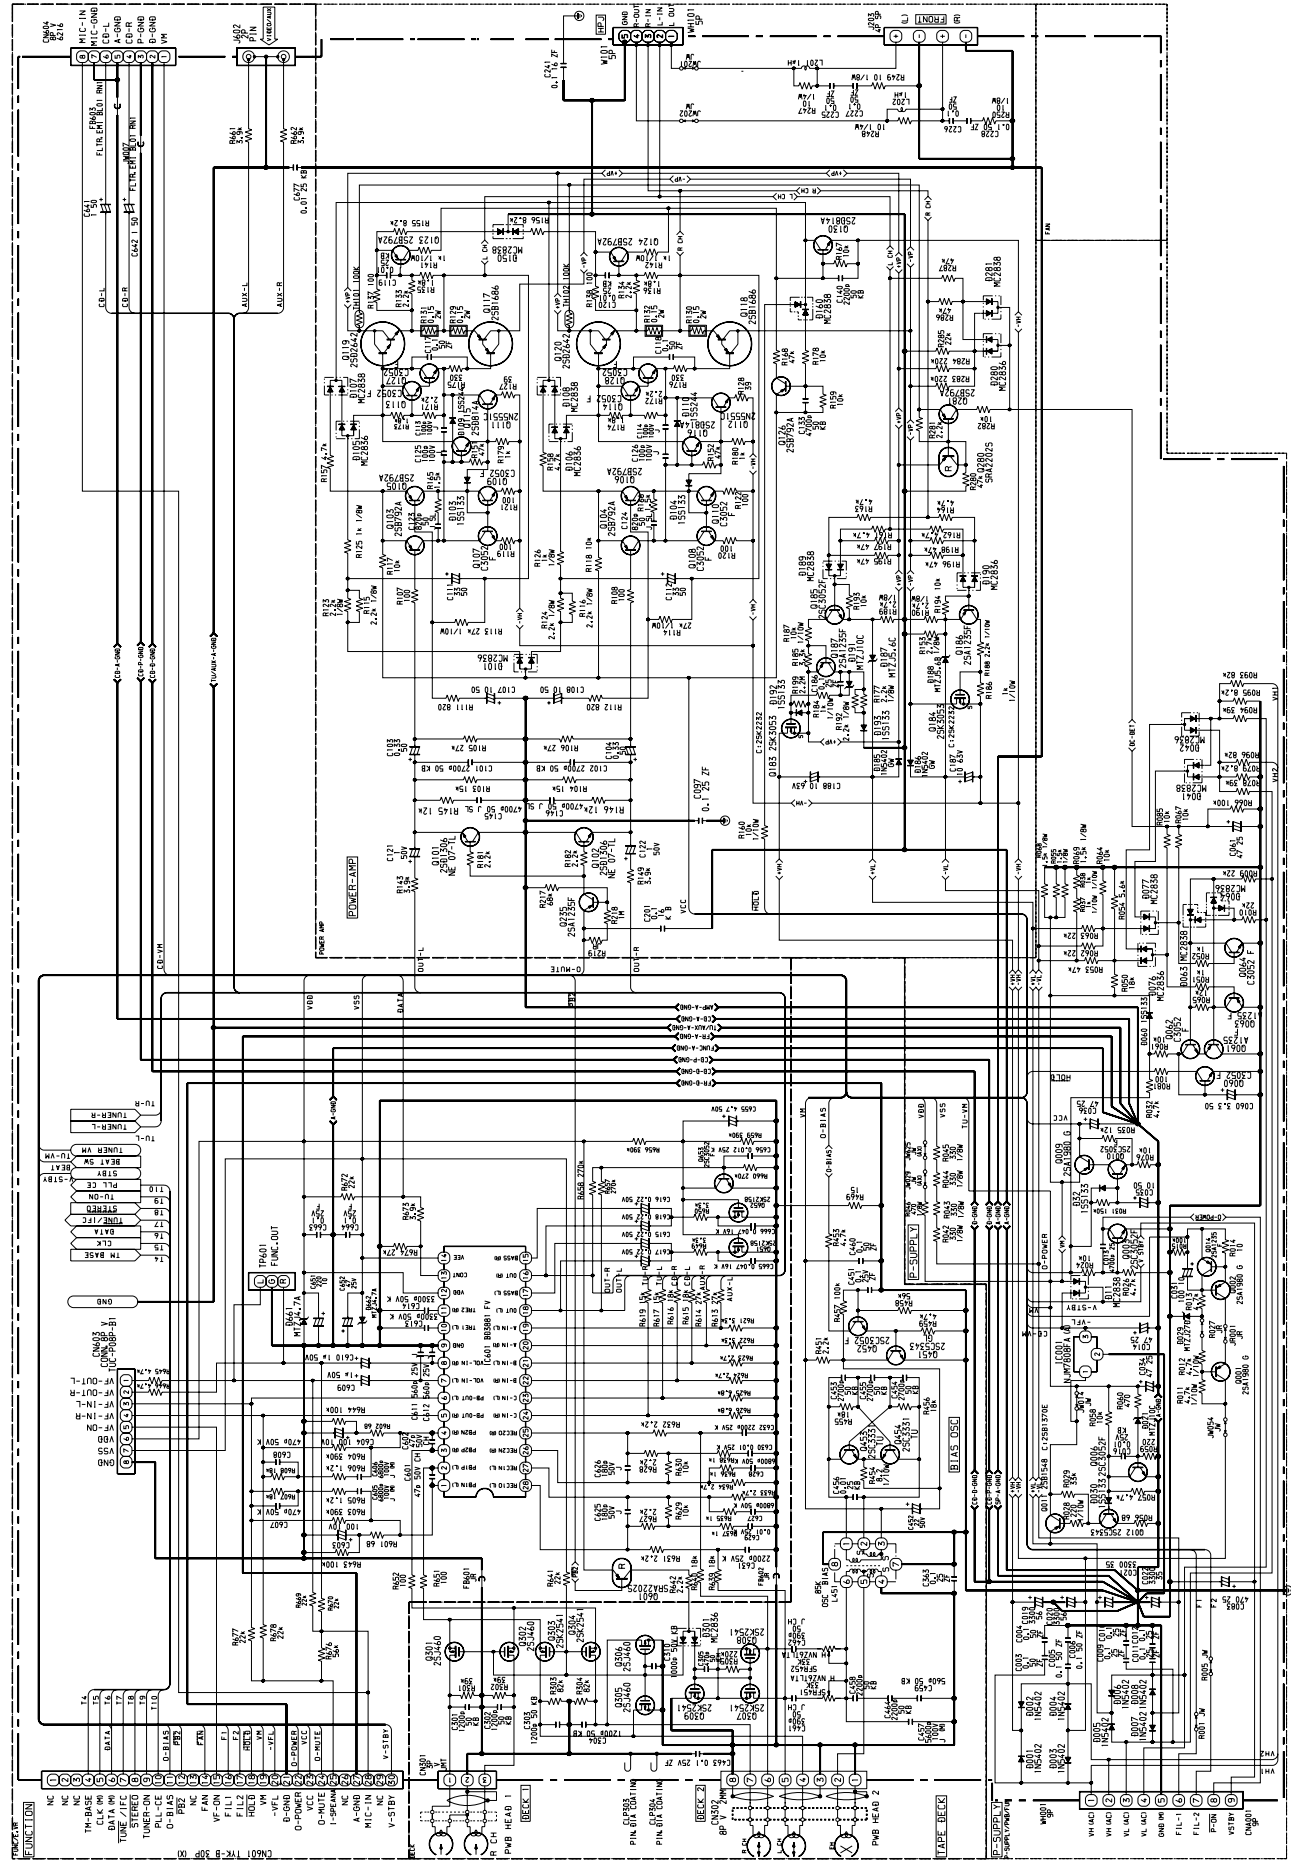


SCHEMATIC DIAGRAM-2 (TUNER)

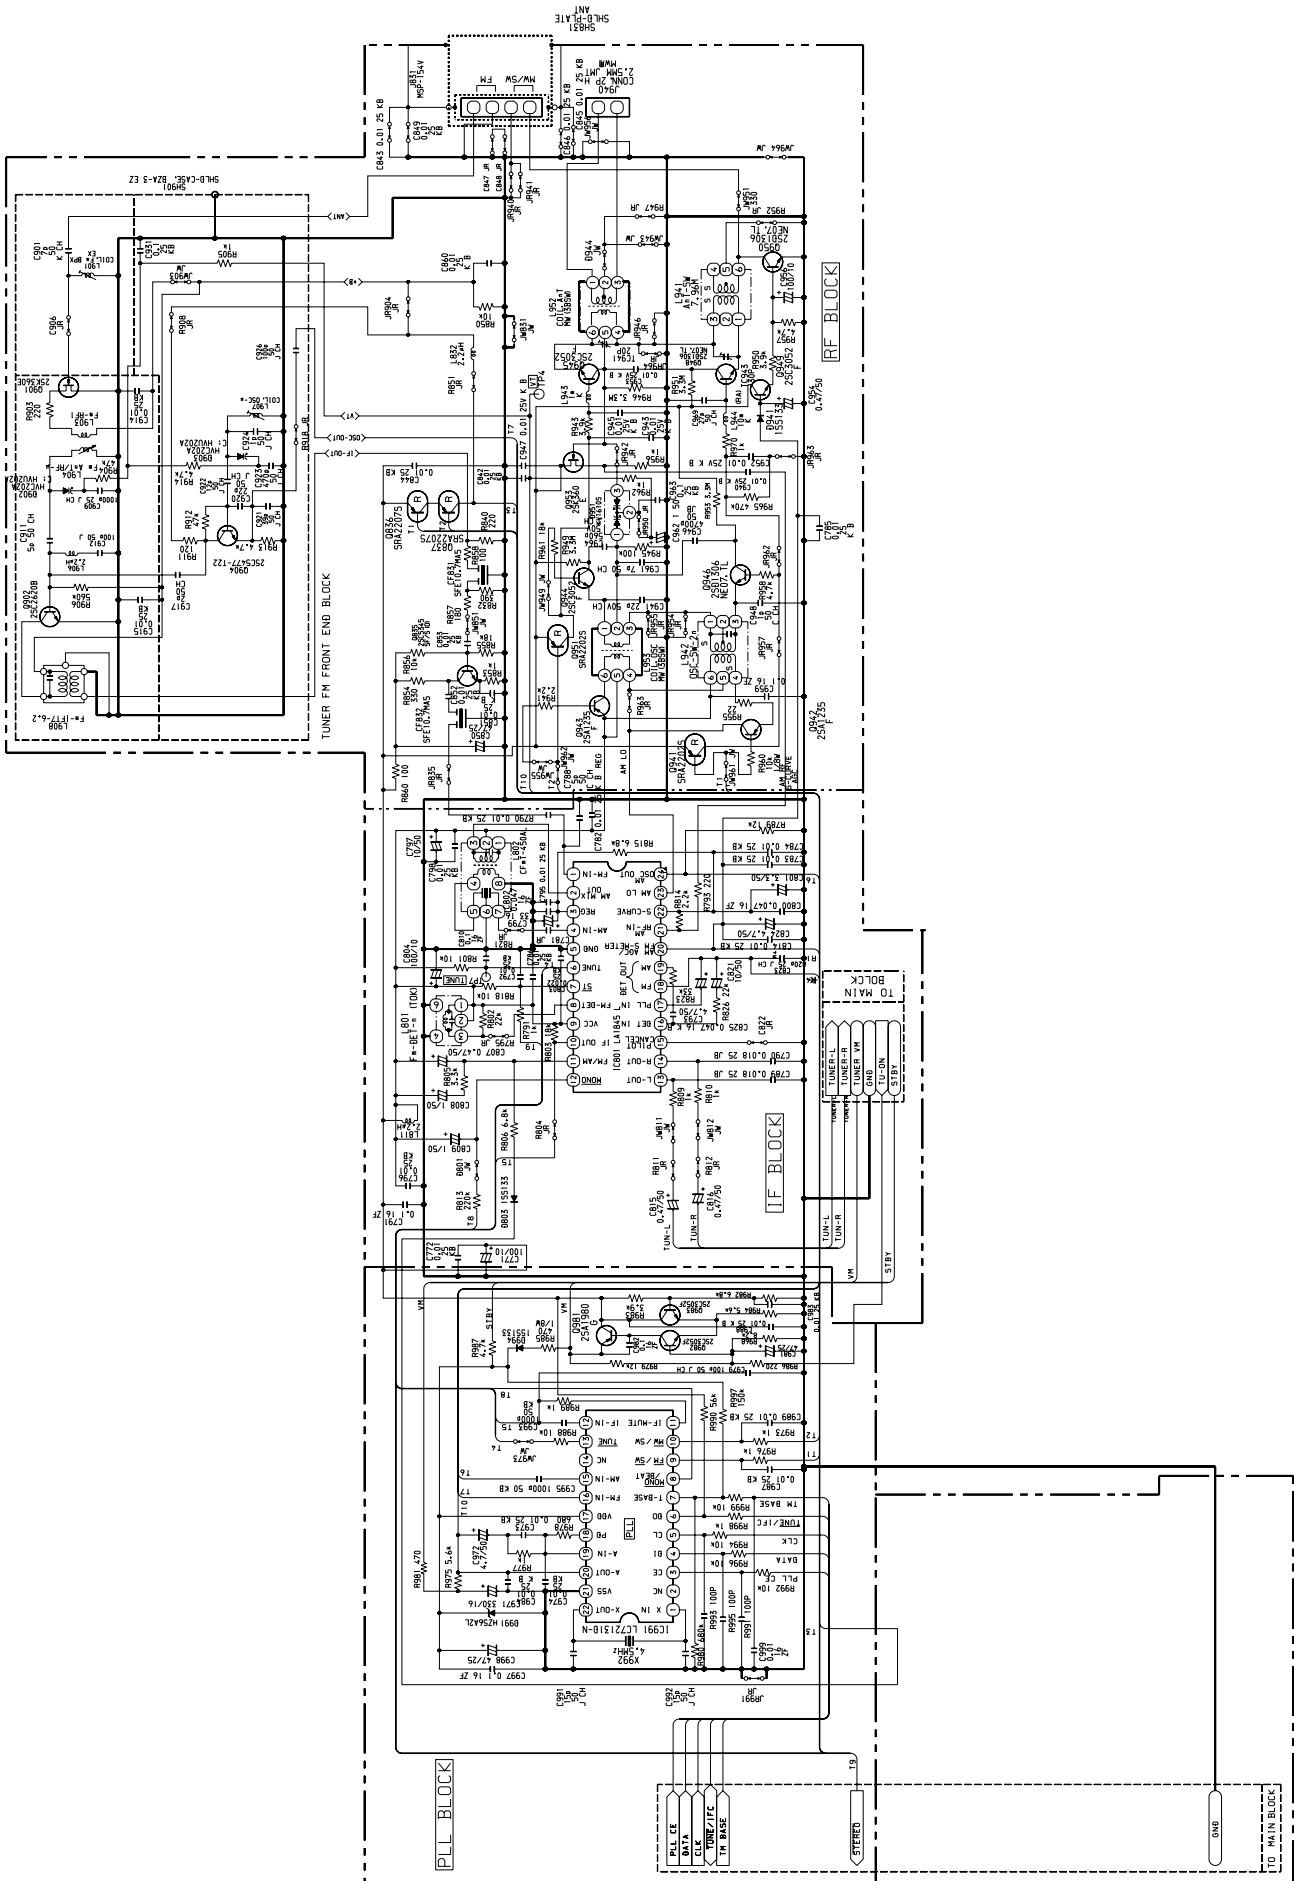 


SCHEMATIC DIAGRAM-3 (VF)

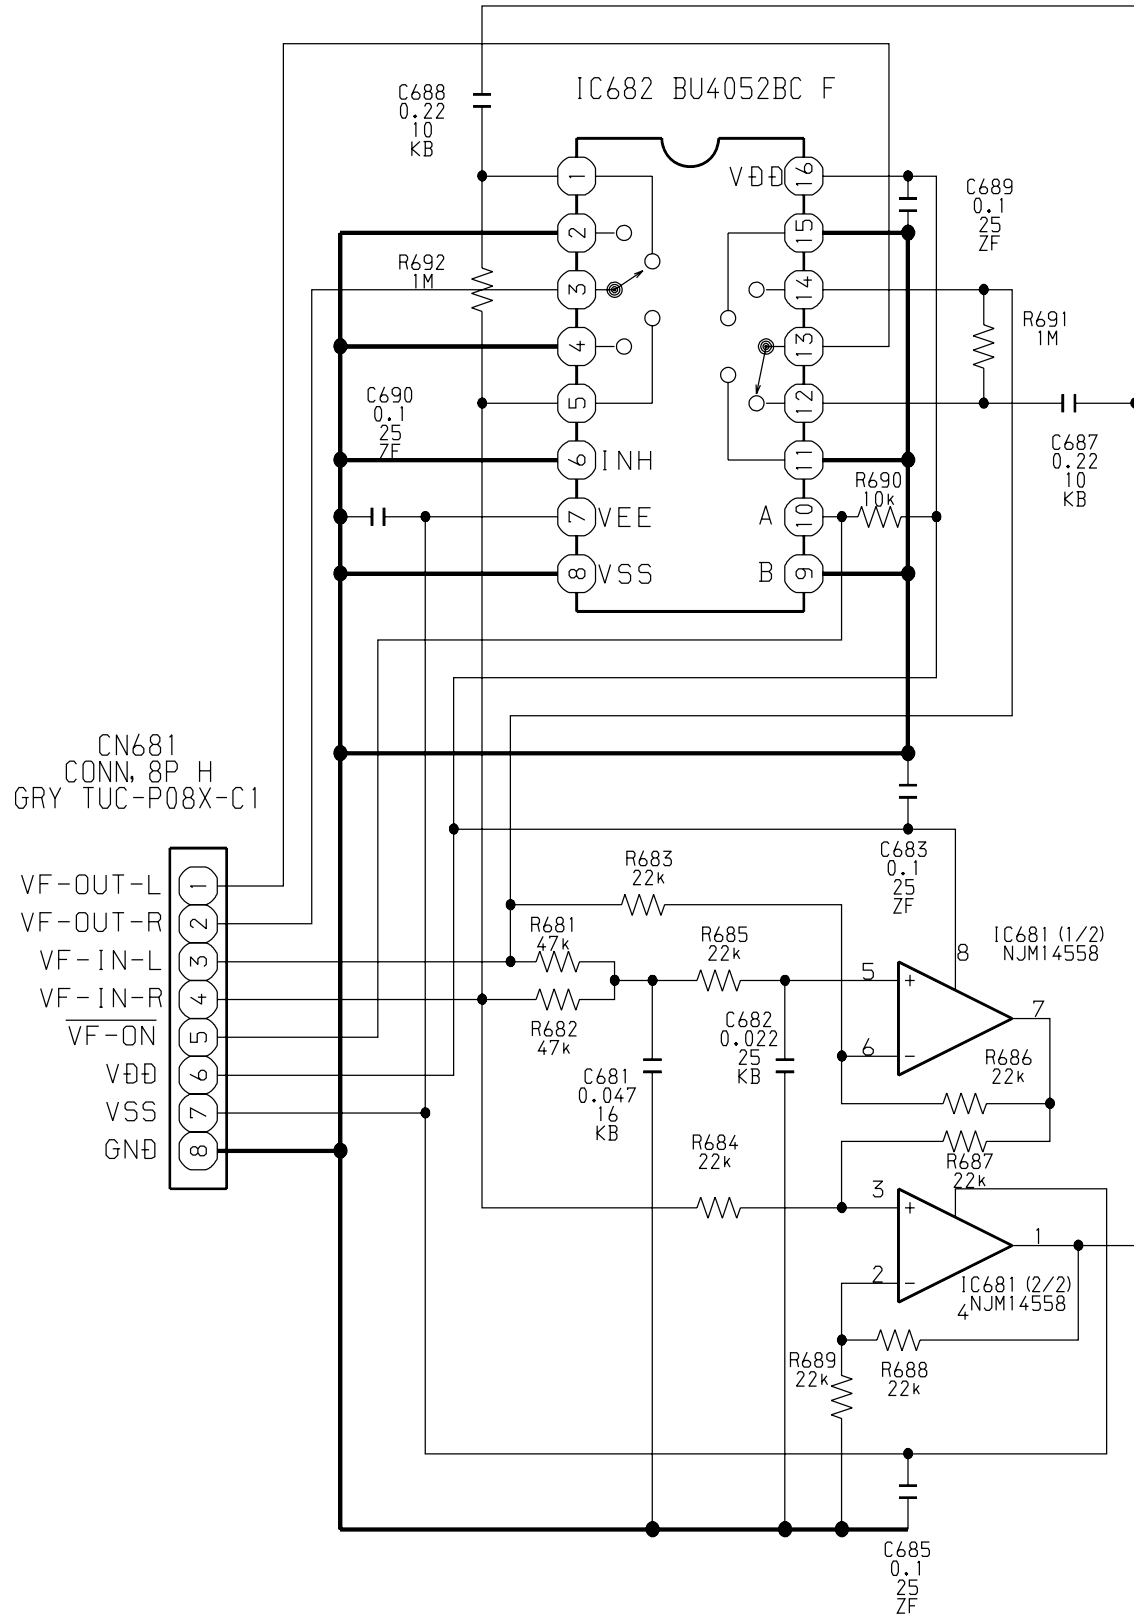 


SCHEMATIC DIAGRAM-4 (FRONT)

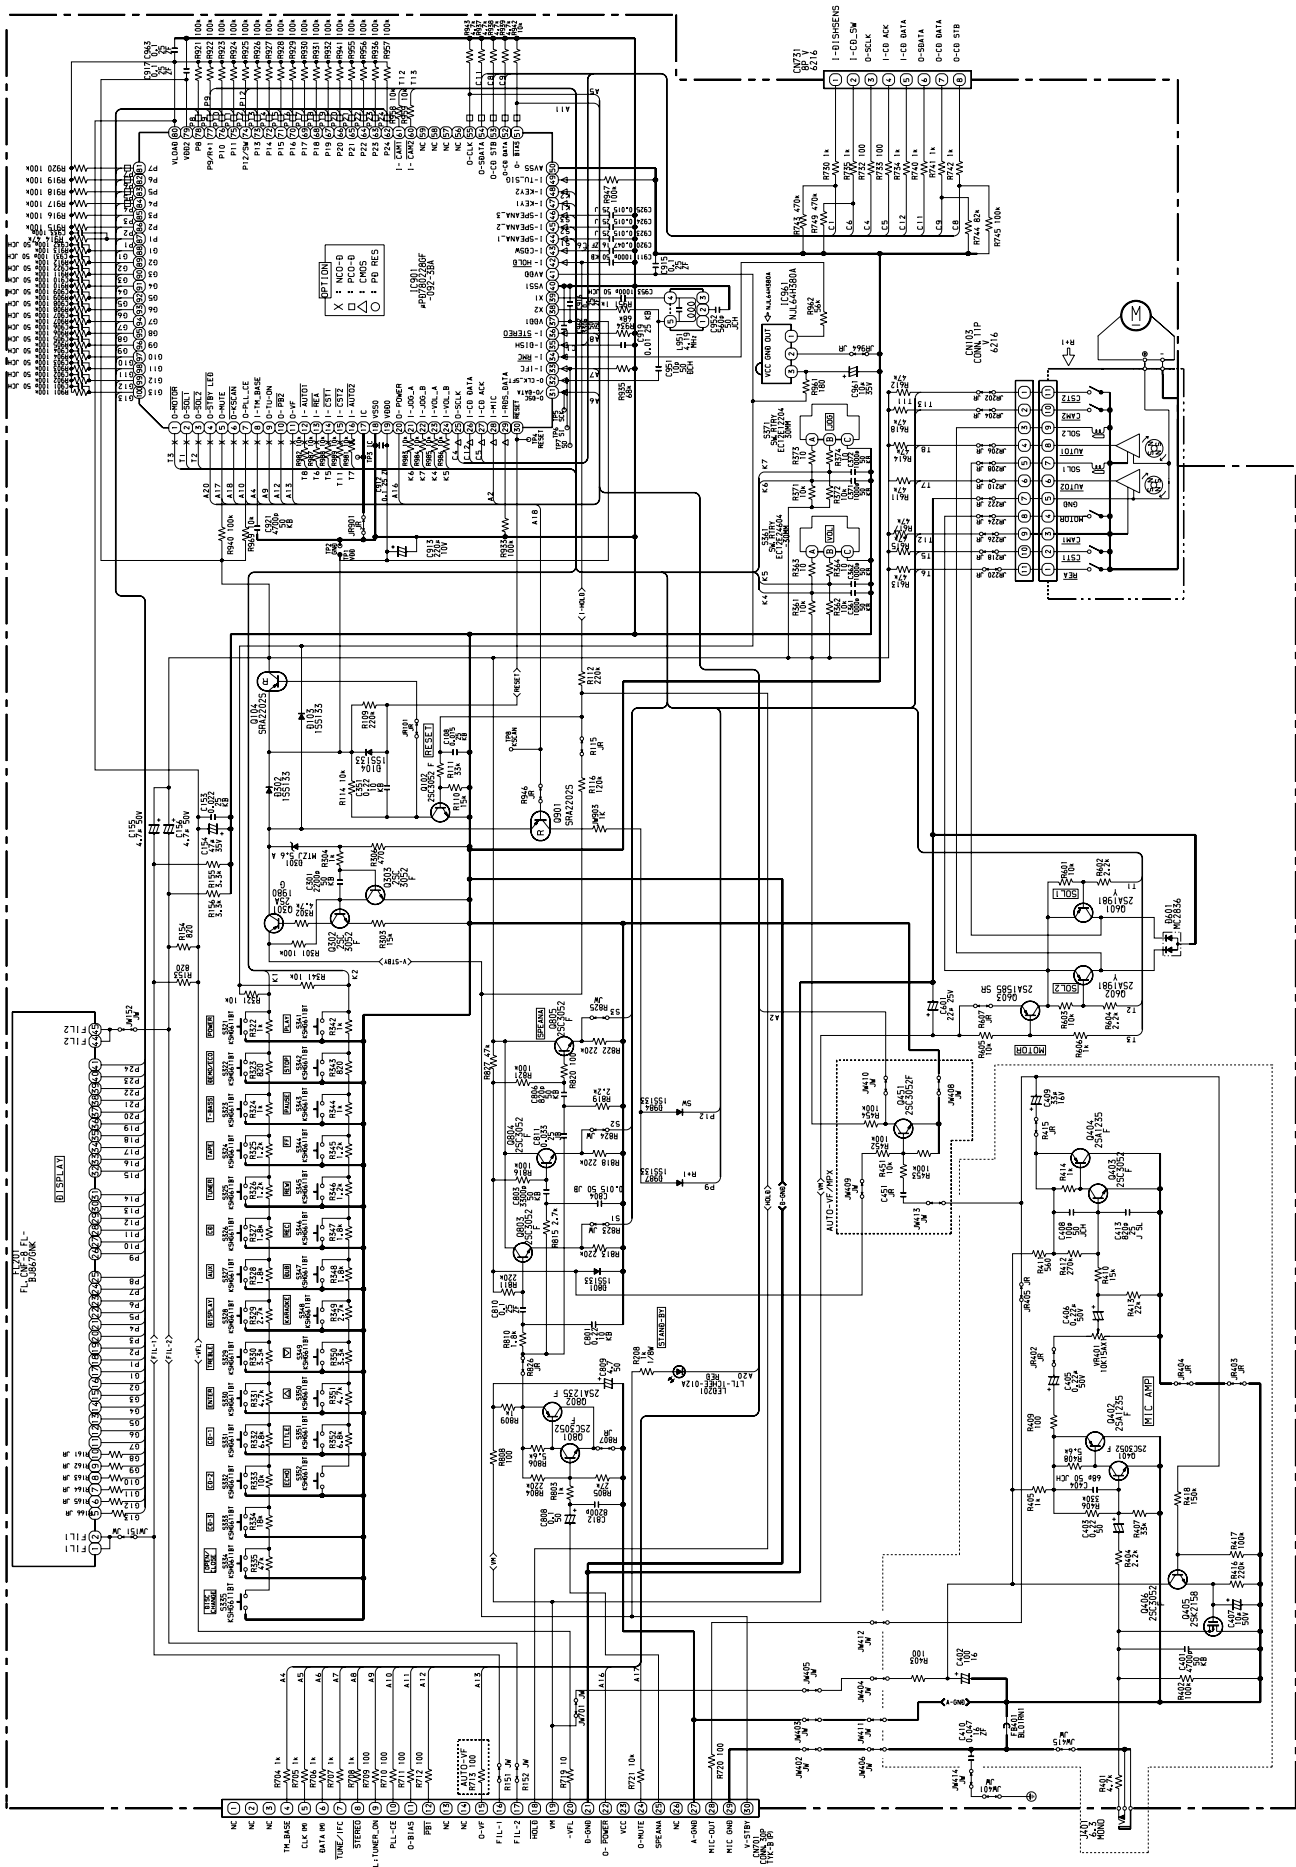 

SCHEMATIC DIAGRAM-5 (PT)

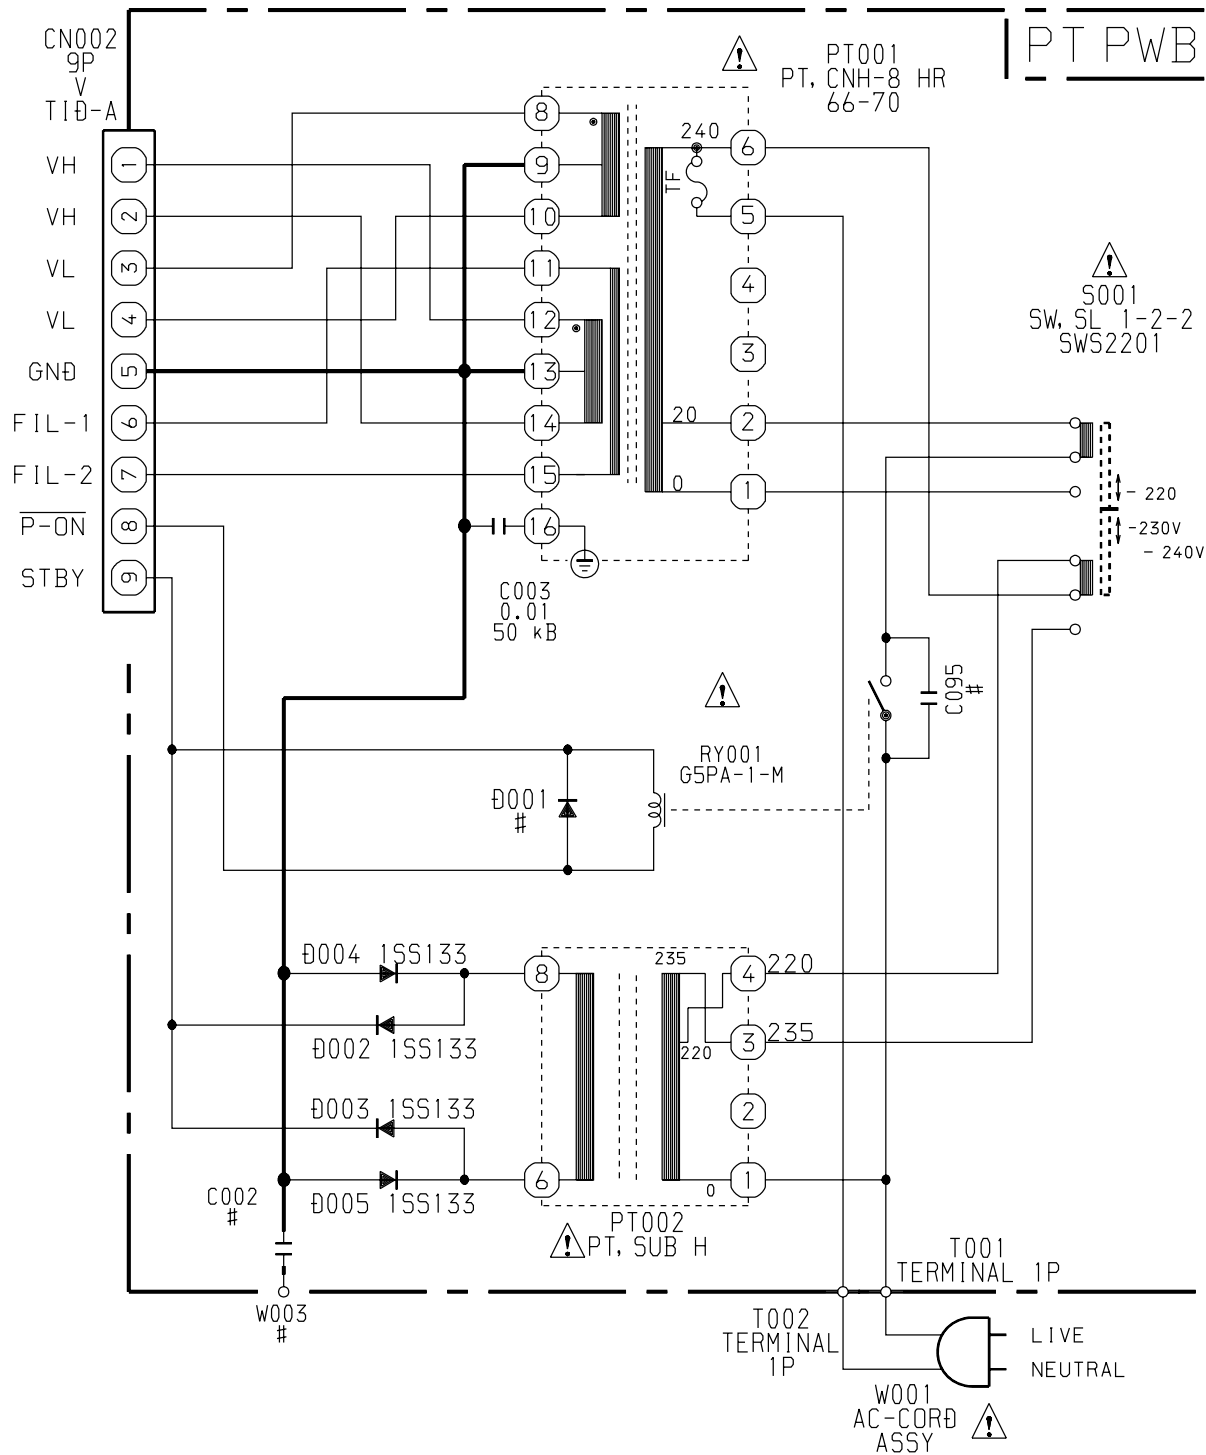 

SCHEMATIC DIAGRAM-6 (HP)

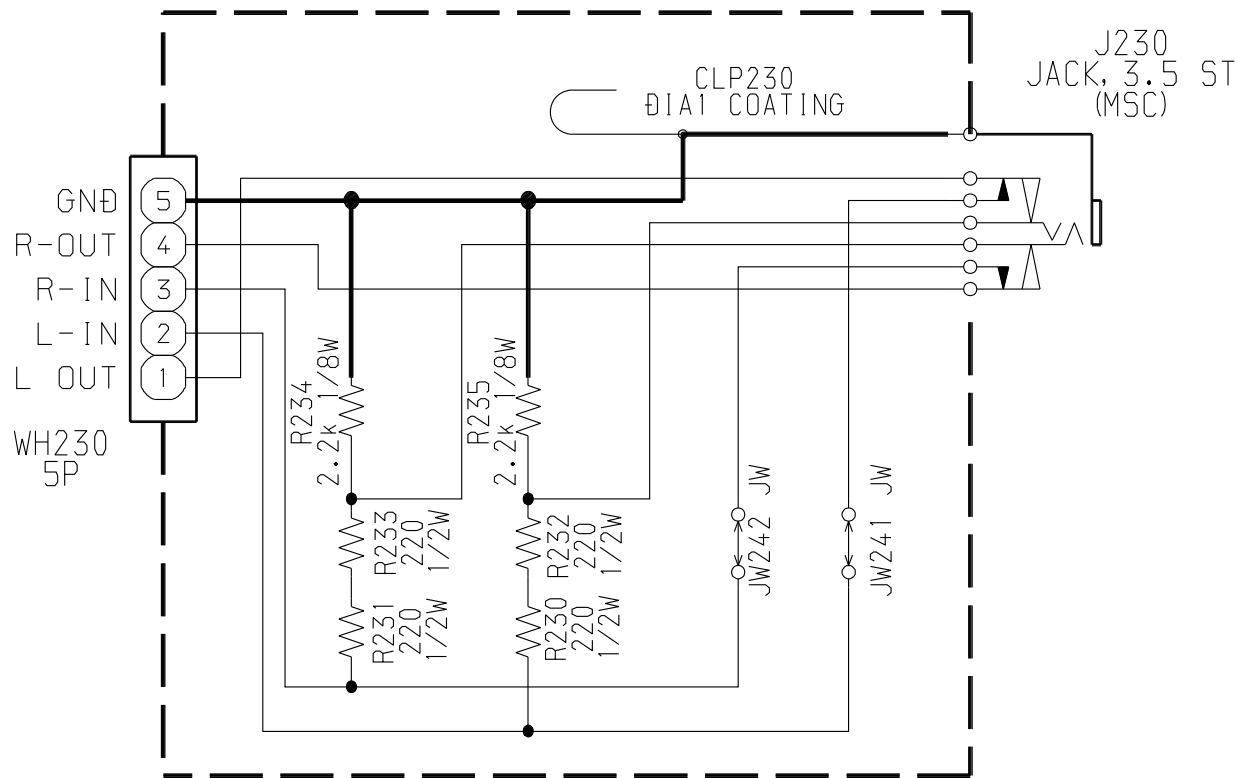 

MECHANICAL PARTS LIST

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL			
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
	O	MC1001	87-B00-002-010	BADGE,AIWA 30 ABS SIL	a	.	c	.
	O	MC1002	87-CE3-023-010	BADGE,AIWA 30N SILV	.	b	.	d
	O	MC1003	8C-NF8-005-010	WINDOW,CASS 1	a	b	c	d
	O	MC1004	8C-NF8-006-010	WINDOW,CASS 2	a	b	c	d
	O	MC1005	8C-NFA-031-010	PANEL,LEFT	a	b	c	d
	O	MC1006	8C-NFA-032-010	PANEL,RIGHT	a	b	c	d
	O	MC1007	8C-NFA-033-010	PANEL, TOP	a	b	c	d
	O	MC1008	8C-NH8-002-010	BOX,CASS 1 R	a	b	c	d
	O	MC1009	8C-NH8-003-010	BOX,CASS 2	a	b	c	d
	O	MC1010	8C-NH8-004-010	PANEL,TRAY VCD	a	b	c	d
	O	MC1011	8C-NH8-006-010	WINDOW,DISP H	a	b	c	d
	O	MC1012	8C-NH8-007-010	KEY,POWER VCD	a	b	c	d
	O	MC1013	8C-NH8-010-010	CABI,ASSY FR RV35	a	b	c	d
	O	MC1014	8C-NH8-011-010	CABI,REAR HRJSC	a	.	.	.
	O	MC1015	8C-NH8-012-010	CABI,REAR HR7SM	.	b	.	d
	O	MC1016	8C-NH8-013-010	CABI,REAR HRSC	.	.	c	.
	X	MC1017	8C-NH8-014-010	CABI,FR HR	a	b	c	d
	X	MC1018	8C-NHA-002-010	PANEL,FR VCD RV15	a	b	c	d
	O	MC1019	8B-NF1-020-010	KEY,RDS	a	b	c	d
	O	MC1020	8B-NF1-027-010	REFLECTOR,ECO	.	b	.	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
	O	MC1021	8C-NF5-006-010	KEY,OPE LH	.	b	.	d
	O	MC1022	8C-NF5-010-010	KEY,REC EZ	.	b	.	d
	O	MC1023	8C-NF8-010-010	KEY,CD	a	b	c	d
	O	MC1024	8C-NF8-011-010	KEY,ENTER	a	b	c	d
	O	MC1025	8C-NF8-014-010	REFLECTOR,ECO	a	.	c	.
	O	MC1026	8C-NF8-020-010	KNOB,RTRY VOL	a	b	c	d
	O	MC1027	8C-NF8-027-010	KNOB,RTRY JOG	a	b	c	d
	O	MC1028	8C-NF8-029-010	KEY,REC EZ	a	.	c	.
	O	MC1029	8C-NF8-046-010	KEY,OPE R	a	.	c	.
	O	MC1030	8C-NFA-019-010	KNOB,RTRY MIC	a	b	c	d
	O	MC1031	8C-NFA-020-010	PLATE,MIC	a	b	c	d
	X	MC1032	87-057-961-010	LBL,CAUTION TRIANGLE	a	b	c	d
	X	MC1033	87-057-995-010	LBL,CAUTION EFSD	a	b	c	d
	X	MC1034	87-059-032-010	LBL, SIRIM	.	b	.	.
	X	MC1035	87-059-033-010	LBL, JBE	.	b	.	.
	X	MC1036	87-B40-281-010	LBL,BAR-CODE A 35X8	a	b	c	d
	X	MC1037	8C-NF8-045-010	SH,FL	a	b	c	d
	X	MC1038	8C-NH8-016-010	LBL,CPA RV35	a	.	c	d
	X	MC1039	M8-BZG-29M-070	BZG-2 MVSD5GNC	a	.	c	.
	X	MC1040	M8-BZG-29P-030	BZG-2 MVSD5GNM	.	b	.	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
	X	MC1041	M8-6ZM-39C-130	6ZM-3 PR4NM	.	b	.	d
	X	MC1042	M8-6ZM-39E-170	6ZM-3 YPR4NC	a	.	c	.
	O	MC1043	8A-NFA-208-010	GUIDE,FL 100-25 ANFA	a	.	c	d
	O	MC1044	82-NF5-229-010	PLATE,LOCK(*)	a	b	c	d
	O	MC1045	86-NF9-224-010	SPR-C,LOCK	a	b	c	d
	X	MC1046	87-063-173-010	CLOTH, N9295B BLK 30-10-0.35	a	b	c	d
	O	MC1047	87-064-185-010	HLDR,WIRE PVC 0.5	a	b	c	d
	O	MC1048	87-NF4-216-010	HLDR,LOCK 1	a	b	c	d
	O	MC1049	87-NF4-217-110	HLDR,LOCK 2	a	b	c	d
	O	MC1050	8A-NF8-206-010	HLDR,PWB M	a	b	c	d
	X	MC1051	8A-NF8-217-010	PLATE,EARTH MECHA C	a	.	c	.
	O	MC1052	8A-NF8-281-010	SPR-T,EJECT 1	a	b	c	d
	O	MC1053	8A-NF8-282-010	SPR-T,EJECT 2	a	b	c	d
	O	MC1054	8B-NF8-251-010	HLDR,PWB PT F8	a	b	c	d
	X	MC1055	8B-NF9-204-010	CUSH, 11-8.5-2	a	b	c	d
	X	MC1056	8C-NF7-203-010	HT-SINK,FIN C	a	b	c	d
	X	MC1057	8C-NF7-206-010	HT-SINK,ASSYC	a	b	c	d
	X	MC1058	8C-NF7-207-010	HT-SINK,MAINC	a	b	c	d
	X	MC1059	8C-NF8-202-110	HLDR,TR	a	b	c	d
	X	MC1060	8C-NF8-206-010	PLATE,EARTH MIC	a	b	c	d
					CX-SNRV35 HRJSC	CX-SNRV35 HR7SM	CX-SNRV35 HRSC	CX-SNRV35 HRSM
	X	MC1061	8C-NF8-207-110	HT-SINK,SUB	a	b	c	d
	X	MC1062	8C-NF8-213-010	HT-SINK,FIN C	a	b	c	d
	X	MC1063	8C-NH8-201-010	PLATE,SHLD REAR	a	b	c	d
	X	MC1064	8Z-NB8-212-010	PLATE,EARTH MECH	.	b	.	d
	O	MC1065	8Z-NF6-210-010	DMPR,150 N	a	b	c	d
	O	MC1066	87-067-689-010	BVT1+3-8	a	b	c	d
	O	MC1067	87-067-703-010	BVT2+3-10 W/O SLOT	a	b	c	d
	O	MC1068	87-078-200-010	S-SCREW,ITC+4-8 R	a	b	c	d
	O	MC1069	87-721-096-410	QT2+3-10 W/O SLOT	a	b	c	d
	O	MC1070	87-B10-091-010	UTT2+3-10 W/O SLOT BLK	a	b	c	d
	O	MC1071	87-B10-315-010	BVT3B+3-8 R W/O	a	b	c	d
	O	MC1072	87-NF4-224-010	S-SCREW,IT3B+3-8 CU	a	b	c	d
	O	MC1073	88-AR1-217-010	S-SCREW,BFT2+3-8	a	b	c	d
	O	MC1074	87-069-033-010	CABLE,TIE	a	b	c	d
	O	MC1075	87-085-185-010	BUSHING,AC CORD(E) CM-22B	a	b	c	d
	O	MC1076	88-908-301-110	FF-CABLE, 8P 1.25 300MM	a	b	c	d
	O	MC1077	88-908-341-110	FF-CABLE, 8P 1.25 340MM	a	b	c	d
	O	MC1078	88-911-101-110	FF-CABLE, 11P 1.25 100MM	a	b	c	d
	X	MC1079	8C-NF8-232-010	CHAS,MAIN CC 66-70	a	b	c	d

SPEAKER PARTS LIST

! = ⚠SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL	
					SX-SNR30 YJSN	SX-SNR30 YJS1N
	O	SP1001	88-NSK-610-010	SPKR, CERAMIC ASSY	a	b
	O	SP1002	8A-NSJ-006-010	BADGE,AIWA S35	a	b
	O	SP1003	8B-NSH-612-010	CORD,SPKR	a	b
	O	SP1004	8B-NSK-604-010	SPKR, T 60	a	b
	O	SP1005	8C-NS6-003-010	PROTECTOR, W	a	b
	O	SP1006	8C-NS7-602-010	SPKR, W 160 30/4	a	b
	O	SP1007	8C-NS8-003-010	PANEL,BA L	a	b
	O	SP1008	8C-NS8-004-010	PANEL,BA R	a	b
	X	SP1009	8C-NS8-013-010	LBL,SPEC YJ	a	b
	O	SP1010	8C-NS8-014-010	CABI,S	a	b
	O	SP1011	8C-NS8-015-010	PANEL,FR L S	a	b
	O	SP1012	8C-NS8-016-010	PANEL,FR R S	a	b
	O	SP1013	8Z-NS3-026-010	CORD,BUSH L	a	b
	X	SP1014	8C-NS8-851-010	CUSHION,ASSY TTC	a	.
	X	SP1015	8C-NS8-853-010	CUSHION,ASSY TTT	.	b

! = SAFETY PARTS
C = Components marked

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.



アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110-8710, JAPAN TEL:03 (3827) 3111

0251431