

CENTER SPEAKER SELECTOR



STEREO SPEAKER SELECTOR



CONTOUR



RUMBLE FILTER



TREBLE



BASS



LOUDNESS



BALANCE



MODE

monophonic
stereo
reverse



FUNCTION

phono-hi
phono-lo
tape-lo
tuner
aux
tape-hi



Fullman Hardman

Bellad

RIGHT
LEFT

LEFT CHANNEL
LOW LEVEL
INPUT

FUNCTION SWITCH M.3
SHOWN IN No 1
POSITION
1. PHONO LOW - TAPE LOW
2. PHONO HI
3. TUNER
4. AUX-TAPE HI

PHONO HI

TUNER


AUX TAPE

RIGHT CHANNEL
LOW LEVEL
INPUT

PHONO HI

TUNER

AUX TAPE

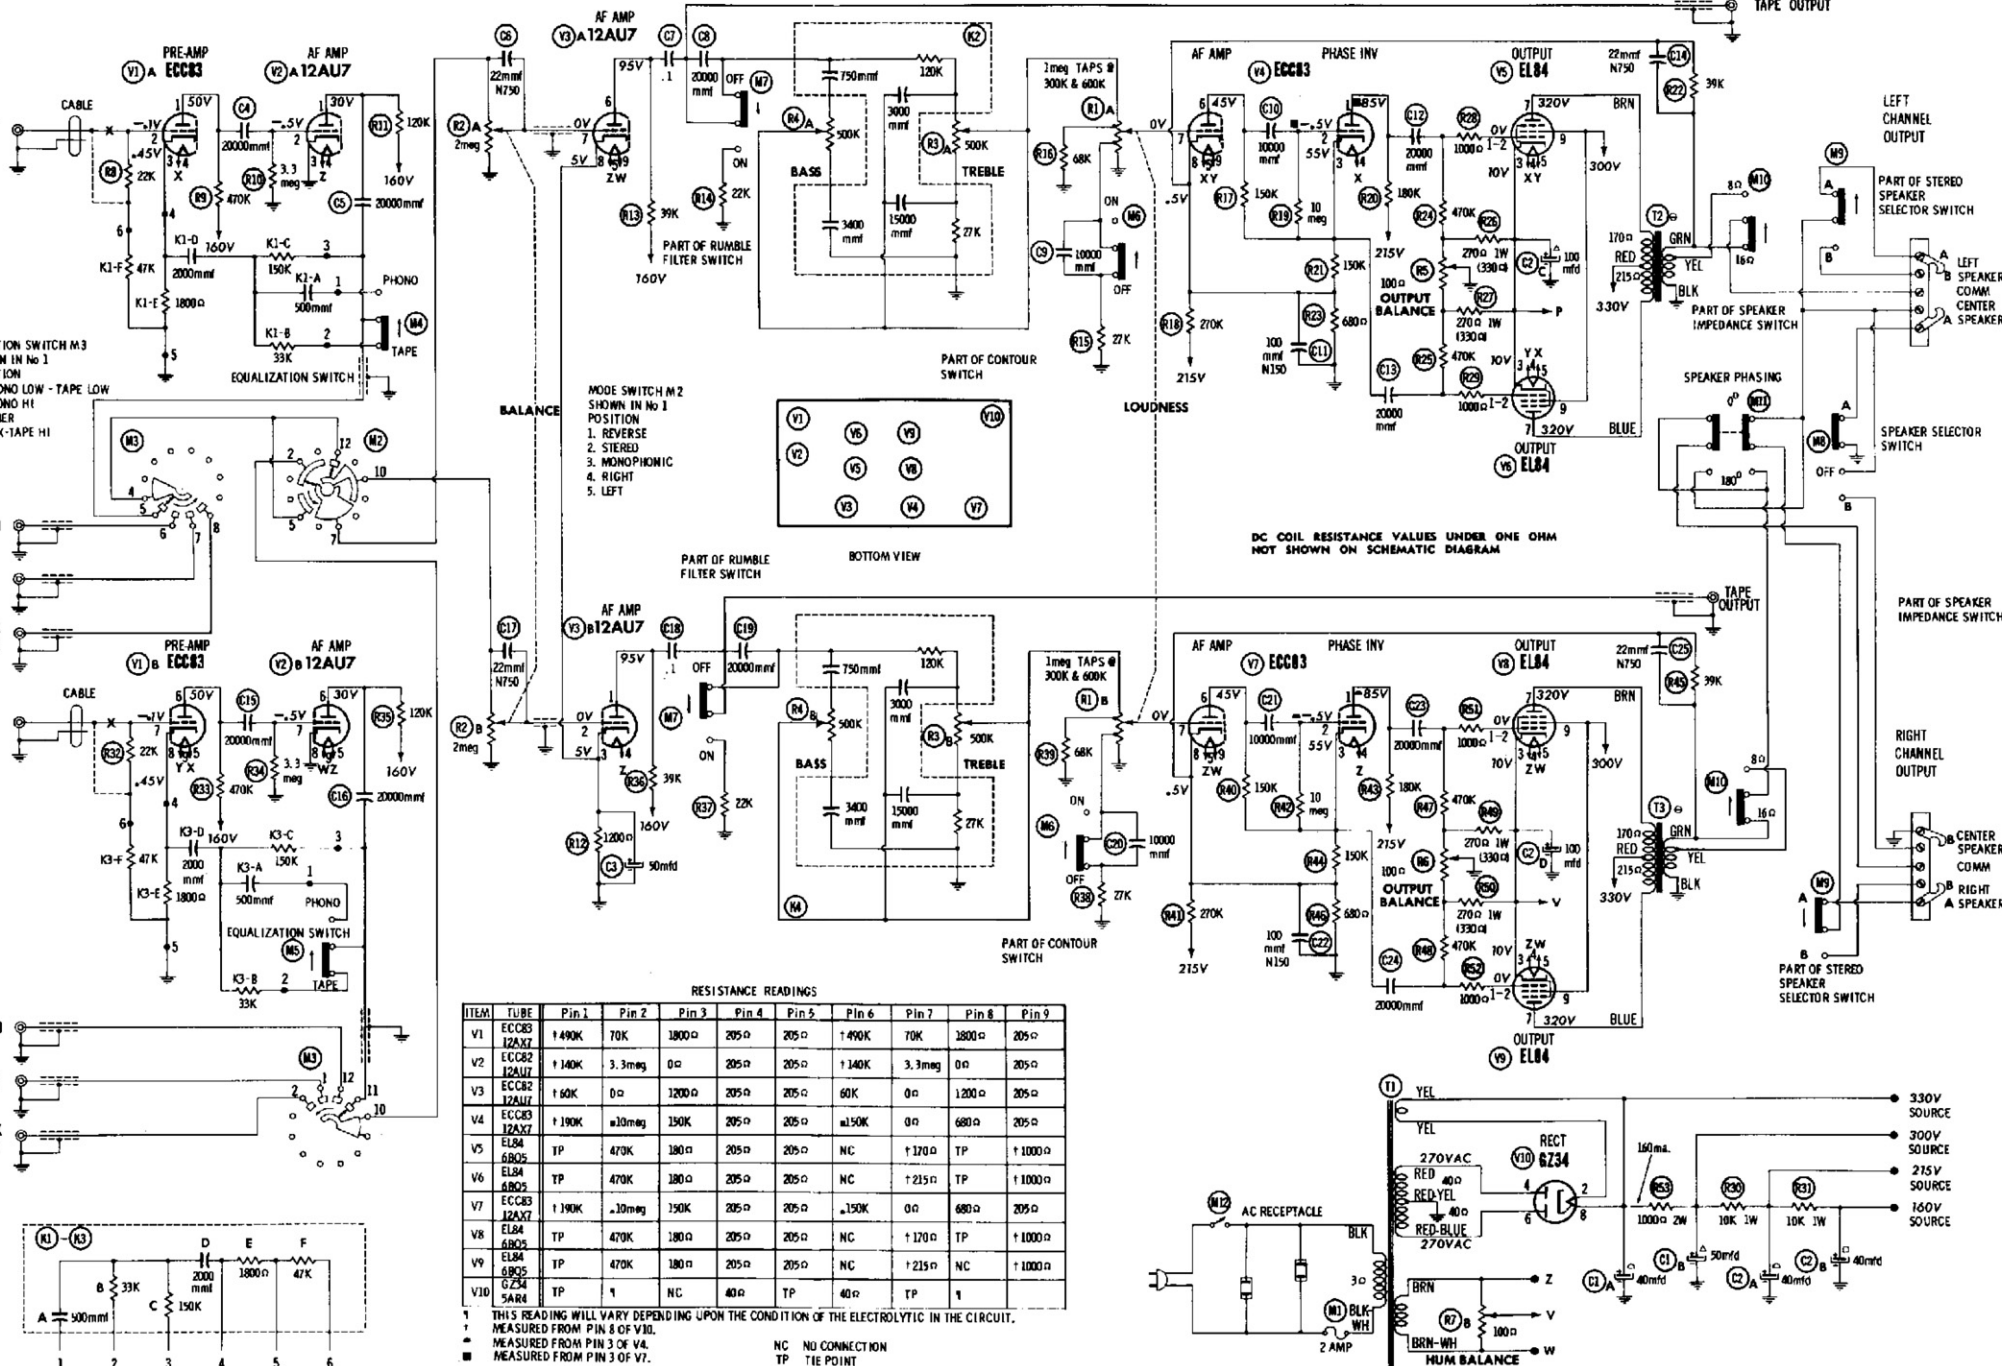

LEFT CHANNEL
OUTPUT

PART OF STEREO
SPEAKER
SELECTOR SWITCH

LEFT SPEAKER
COMM.
CENTER
SPEAKER

PART OF SPEAKER
IMPEDANCE SWITCH

SPEAKER PHASING

180°

PART OF SPEAKER
IMPEDANCE SWITCH

RIGHT CHANNEL
OUTPUT

CENTER
SPEAKER
COMM.

RIGHT SPEAKER

PART OF STEREO
SPEAKER
SELECTOR SWITCH

330V SOURCE

300V SOURCE

215V SOURCE

160V SOURCE

AC RECEPTACLE

BLK

BRN-WH

HUM BALANCE

MI LEVEL

GRN-WH