


The Harman Kardon Model DC5700 DUAL CASSETTE DECK

Manual 179A

DC5700

Technical Manual

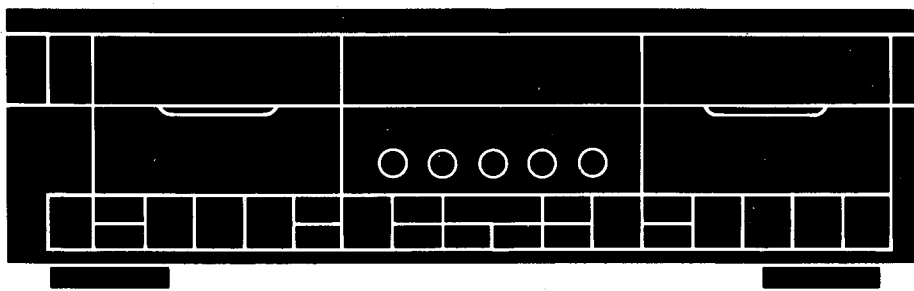

The following marks found in the parts list of this manual identify the models as follows.

- BK** : North America area model Black version
- IB** : International model Black version

CONTENTS

SPECIFICATIONS	2	GENERAL UNIT	10
LEAKAGE TEST	2	GENERAL UNIT PARTS LIST	11
CONTROLS AND FUNCTIONS	3	CASSETTE TAPE RECORDER	
DISASSEMBLY PROCEDURES	4	MECHANISM, PARTS LIST	11
POWER CORD REPLACEMENT	4	WIRING DIAGRAM	12
CIRCUIT DESCRIPTION	4	P. C. BOARD	13
TIMING CHART	5	ELECTRICAL PARTS LIST	15
ALIGNMENT PROCEDURES	6	IC BLOCK DIAGRAM	24
LEAD WIRES STYLING DIAGRAM	9	SCHEMATIC DIAGRAM	27
BLOCK DIAGRAM	9		

harman/kardon

Parts and Service Office
240 Crossways Park West, Woodbury, N.Y. 11797
1112-0030A152 P-129109 2000 Printed in Japan

SPECIFICATIONS

		Nominal	Limit			Nominal	Limit
Track Configuration		4-track 2 Channel Stereo Cassette Deck		Dolby C NR		LN CrO ₂ Metal	66 dB 70 dB 70 dB
• MECHANICAL SECTION				Channel Separation Crosstalk			66 dB 66 dB 35 dB
Record/Playback Tape Speed				Record/Playback Distortion (Input 1 kHz)			60 dB
Drift 4.75 cm/sec.		0.2% ≤ 2.0%				LN	0.7%
Heads (Primary/Secondary)		2/2				CrO ₂	0.8%
Wow and Flutter		NAB 0.05% ≤ 0.1%				Metal	0.9%
		CCIR 0.08%		MPX Filter Attenuation			2.0%
Take Up Torque		50 gr.cm					3.0%
Back Tension		2 gr.cm					2.0%
F. FWD Torque		100 gr.cm		at 15 kHz			1 dB
Rew. Torque		100 gr.cm		at 19 kHz			30 dB
F. FWD/Rew Time (C-60 Tape)		85 sec.		Erase Ratio (Input 80 Hz)			
		≤ 100 sec.				LN	70 dB
						Metal	60 dB
							56 dB
• AMPLIFIER SECTION				Input Sensitivity (Input 1 kHz) at Line Input			43 mV
Record/Playback Frequency				Input Impedance (Input 1 kHz) at Line Input			30 – 80 mV
Response (at -3 dB)		LN	20 – 18 kHz				23 kΩ
		CrO ₂	20 – 18 kHz				15 – 25 kΩ
		Metal	20 – 18 kHz				
Copy Mode Frequency				• DIMENSIONS (WxHxD)			17-3/8" x 5" x 12-5/8"
Response		LN	40 – 16 kHz				(443 x 134 x 342) mm
		CrO ₂	40 – 16 kHz				
		Metal	40 – 16 kHz	• WEIGHT			17.2 lbs (7.8 kg)
Bias Frequency			105 kHz ±5 kHz				
Playback Output			700 mV ±1.5 dB	• POWER SUPPLY			
Signal-to-Noise Ratio (at Line Input)				U.S.A and Canada models			AC120V, 60 Hz
(Input 1 kHz, 100 mV)				International model			AC230V/240V, 50/60 Hz
IHF-A WTD (at Dolby level)				• POWER CONSUMPTION			
Dolby NR off		LN	51 dB	U.S.A. and Canada models			29 W
		CrO ₂	54 dB	International model			31 W
		Metal	54 dB				
Dolby B NR		LN	61 dB				
		CrO ₂	64 dB				
		Metal	64 dB				


These specifications are service target specs.
Specifications and components are subject to change without notice.
Overall performance will be maintained or improved.

LEAKAGE TEST (FOR SERVICE ENGINEERS IN THE U.S.A)




Before returning the unit to the user, perform the following safety checks:

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the unit.
2. Replace all protective devices such as nonmetallic control knobs, insulating fishpapers, cabinet backs, or shields, isolation resistor/capacitor networks, mechanical insulators, etc.
3. Be sure that no shock hazard exists; check for leakage current using Simpson Model 229 Leakage Tester, standard equipment item No. 21641, RCA Model WT540A or use alternate method as follows:
Plug the AC line cord directly into a 120-volt AC receptacle (do not use an Isolation Transformer for this test). Using two clip leads, connect a 1500 ohm, 10-watt resistor paralleled by a 0.15mF capacitor, in series with all exposed metal cabinet parts and a known earth ground, such as a water pipe or conduit. Use a VTVM or VOM with 1000 ohms per volt, or higher sensitivity to measure the AC voltage drop across the resistor. (See Diagram.) Move the resistor connection to each exposed metal part having a return path to the chassis (antenna, metal, cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor. (This test should be performed with the power switch in both the On and Off positions.)

A reading of 0.35 volt RMS or more is excessive and indicates a potential shock hazard which must be corrected before returning the unit to the owner.

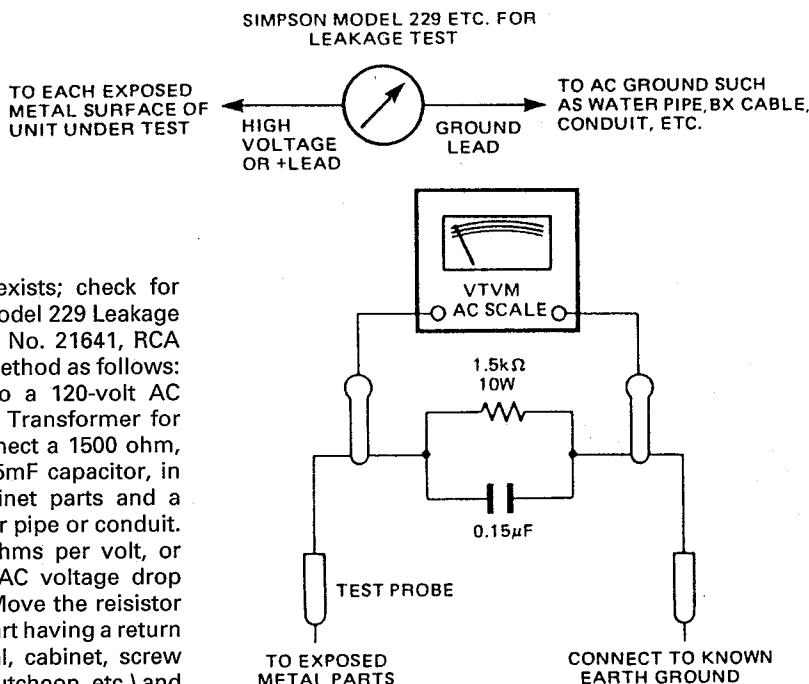

CONTROLS AND FUNCTIONS

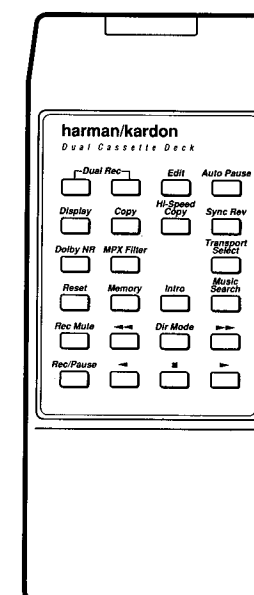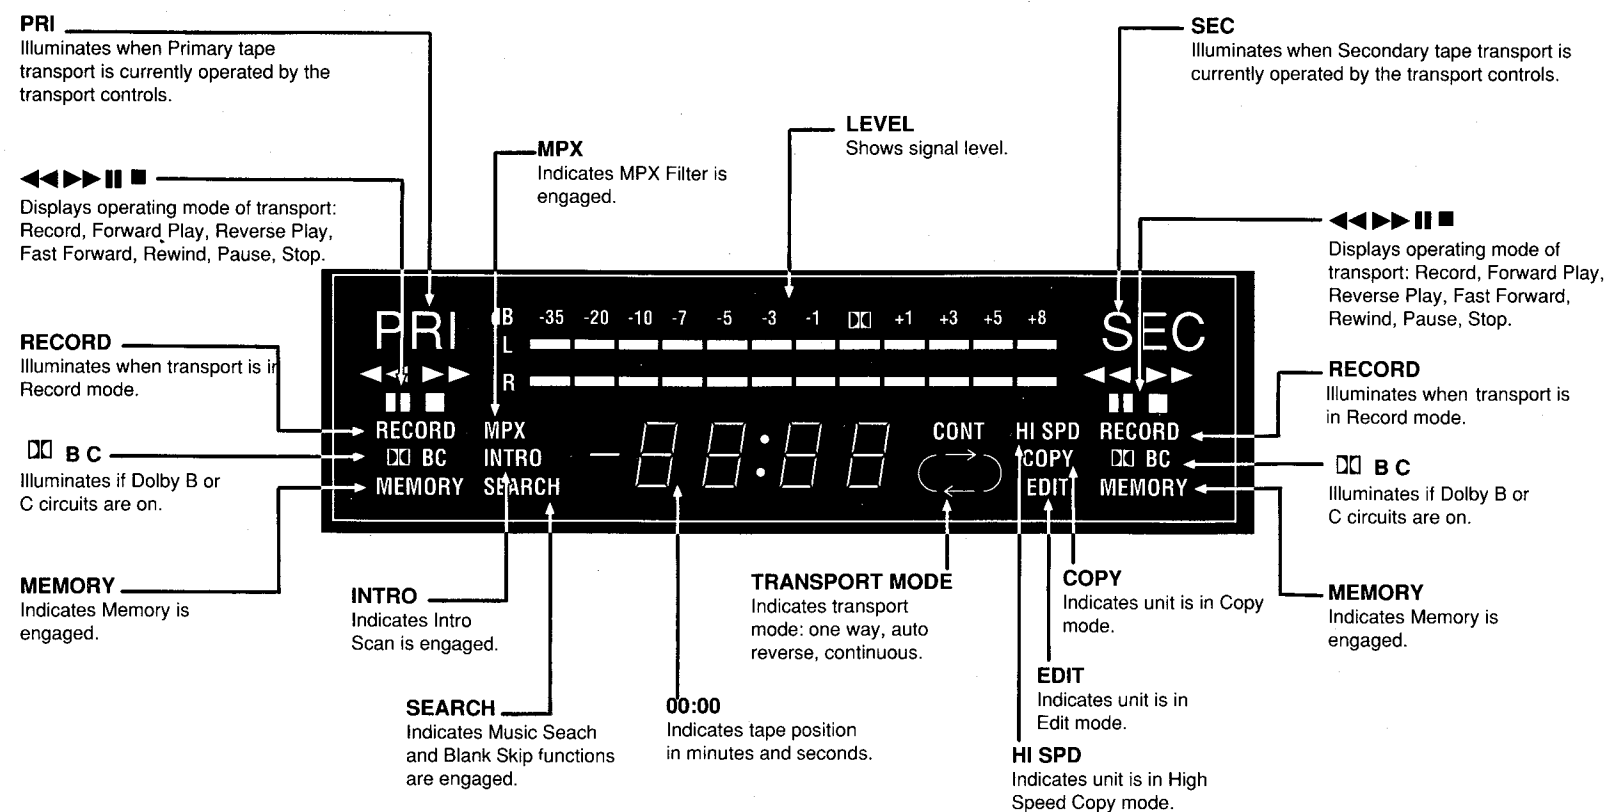
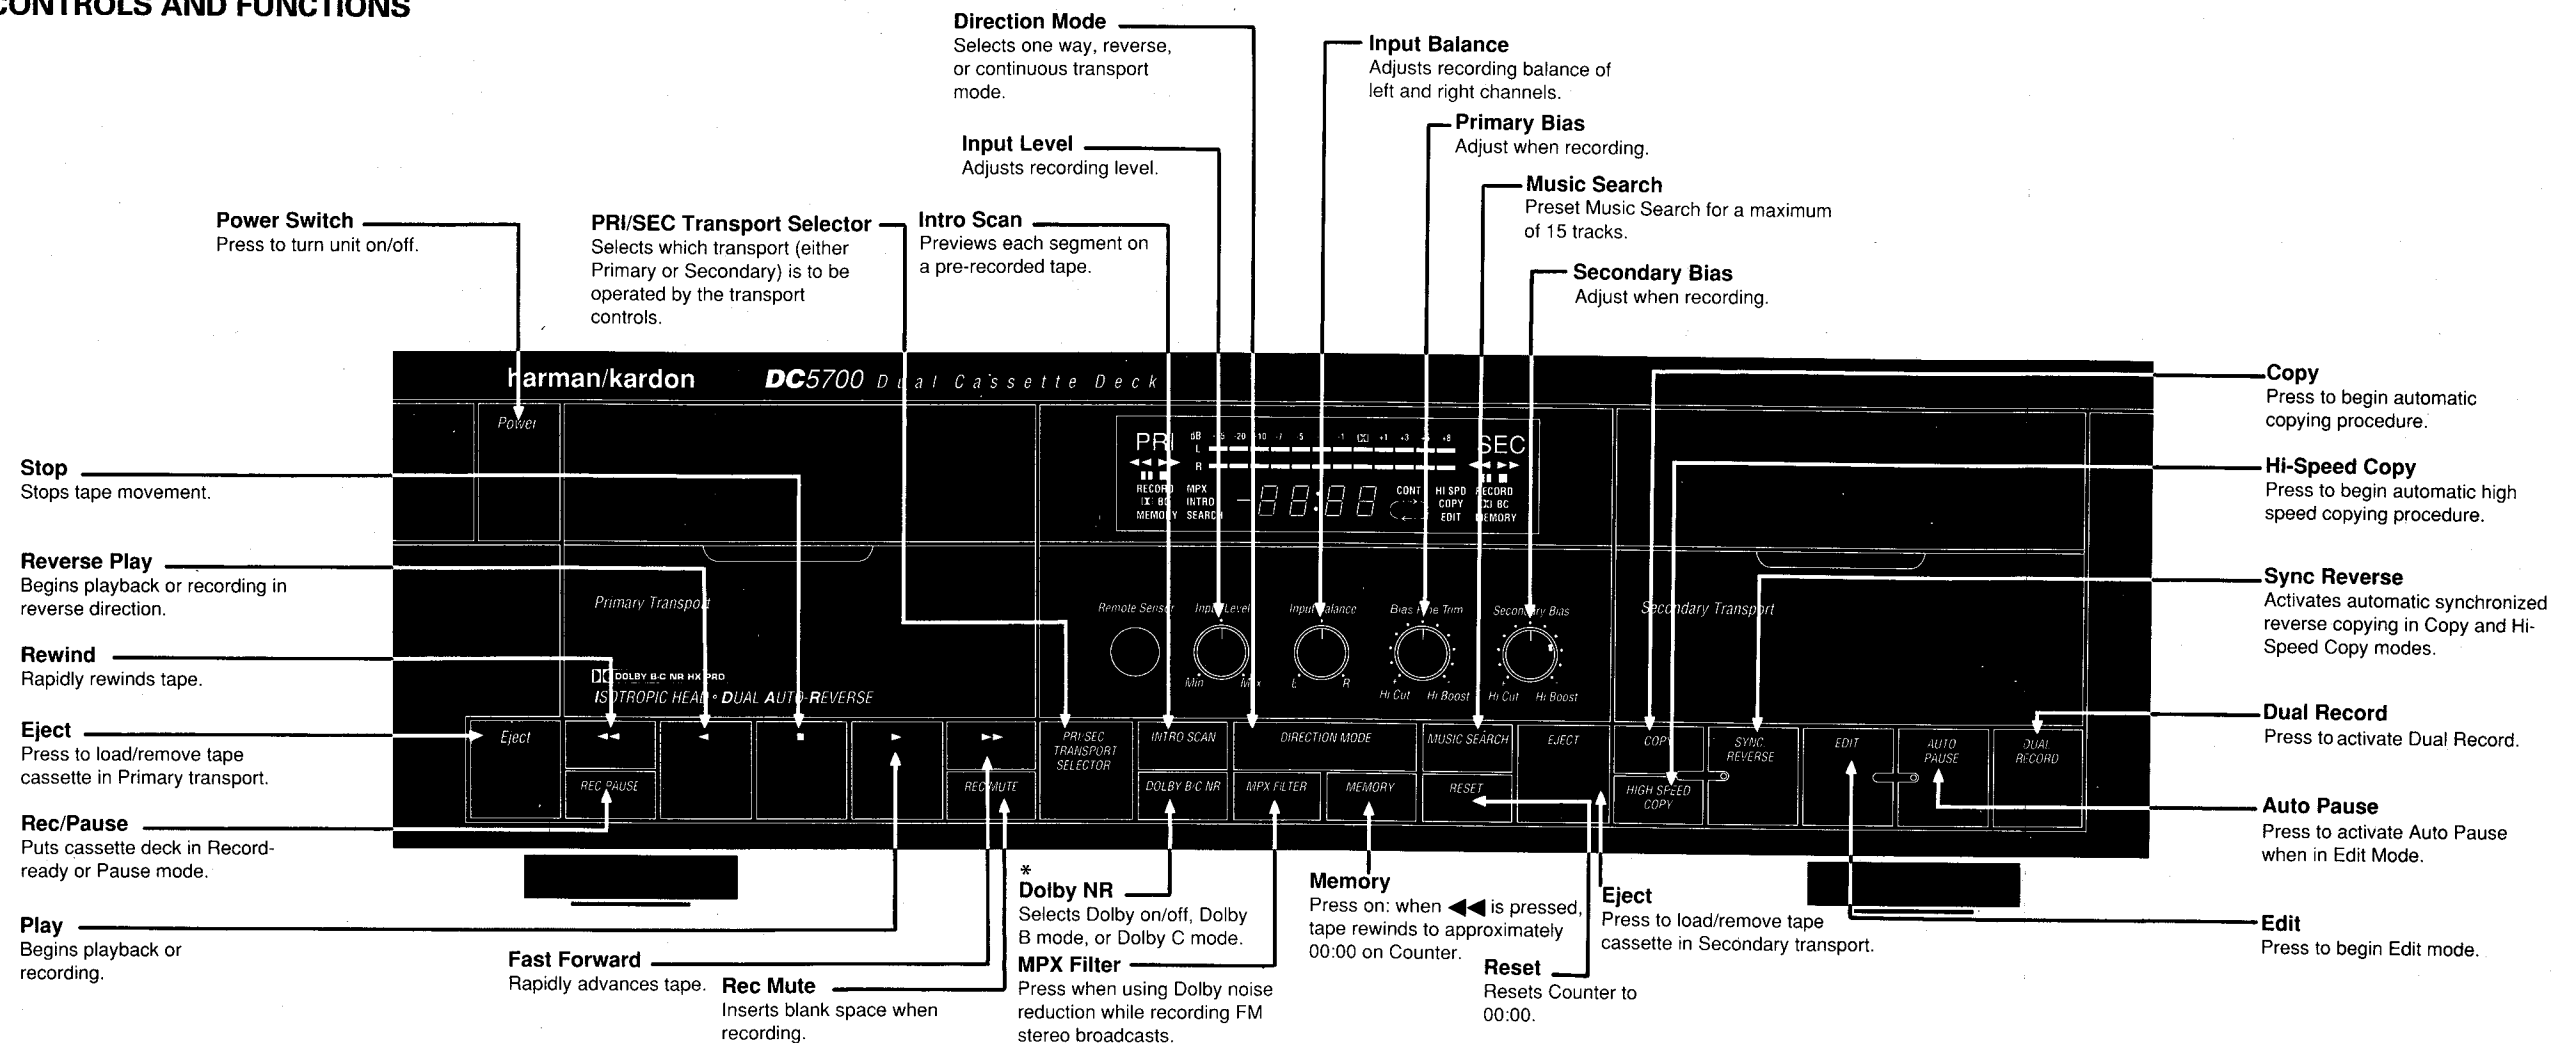




The control unit includes buttons that function the same way as the corresponding keys on the cassette deck.

* NOTE

Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen. "DOLBY" and the double-D symbol and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

  CONTROLS AND FUNCTIONS

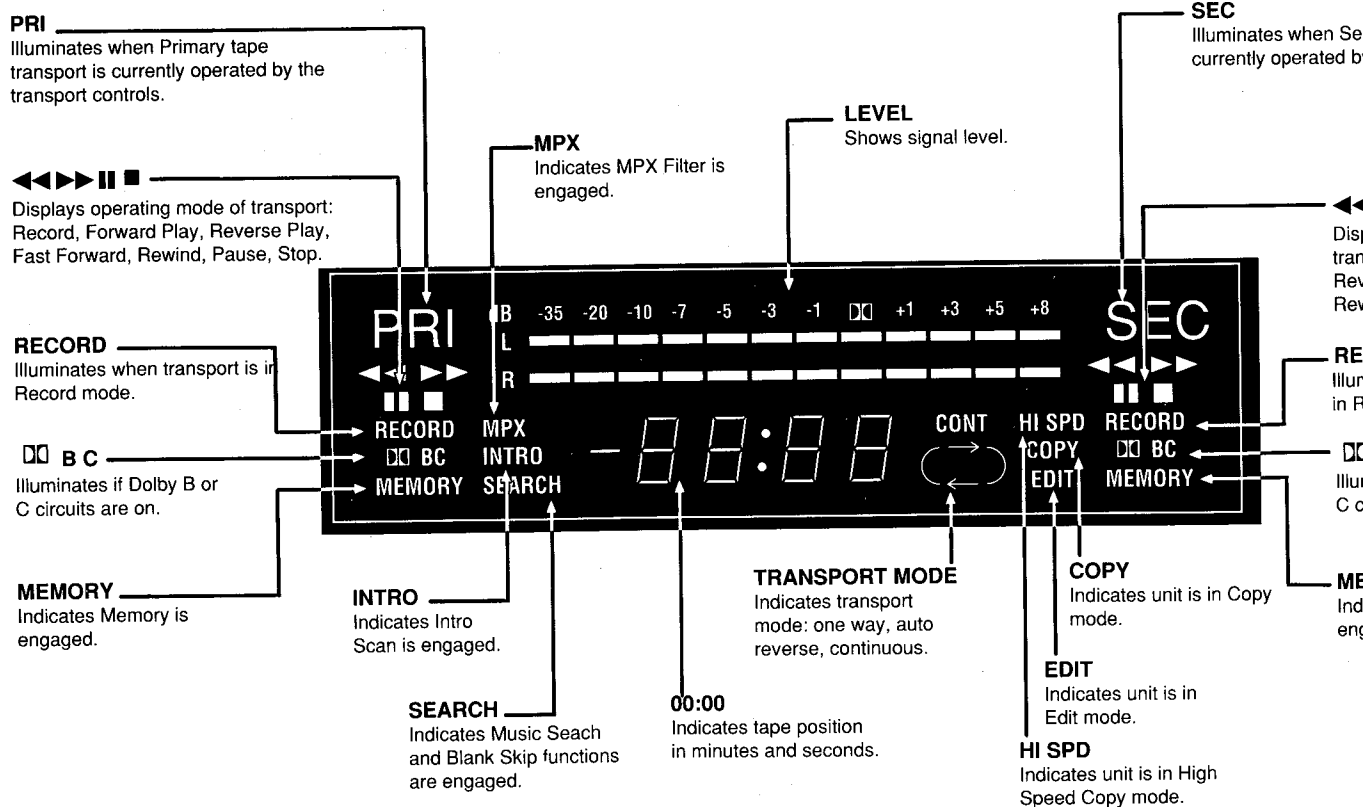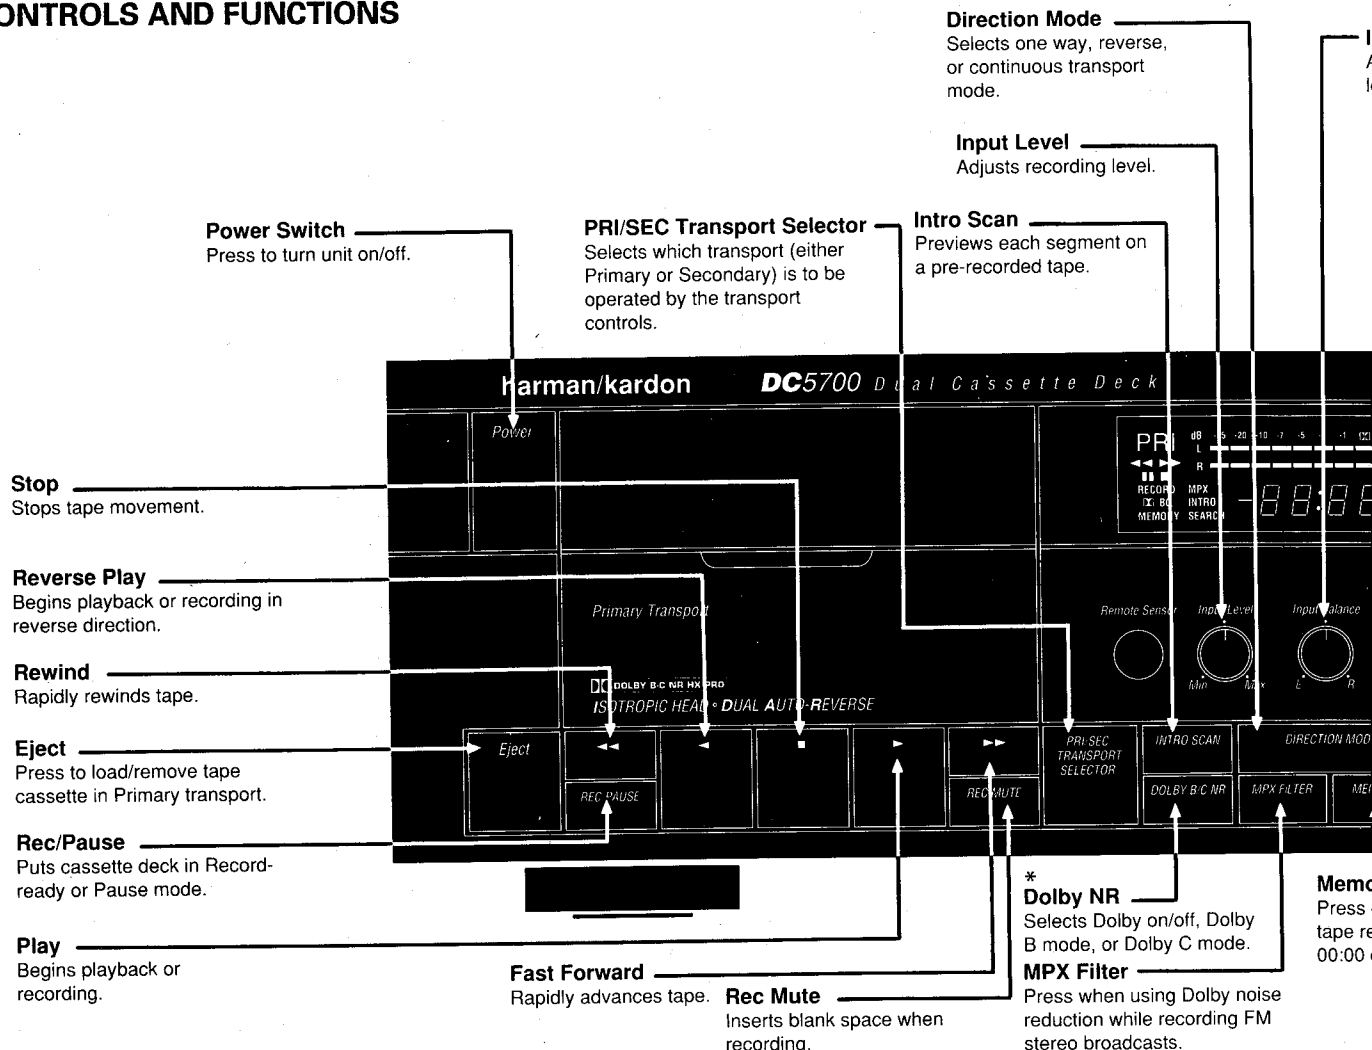



Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen. "DOLBY" and the double-D symbol  and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

DISASSEMBLY PROCEDURES (REFER TO PAGES 10, 11 and 12)**1 TOP COVER (133) REMOVAL**

Remove 4 screws (A) and 2 screws (B), and then remove the Top Cover (133).

2 FRONT PANEL ASSEMBLY (AA) REMOVAL

1. Remove the Top Cover (133).
2. Disconnect 1 connector (JL901) from 1 connector (CN904) on the Main P. C. Board (PCB-1).
3. Remove 6 screws (C) and 3 screws (D), and then remove the Front Panel Assembly (AA).
4. If necessary, unsolder the lead wires.

3 PRIMARY CASSETTE TAPE RECORDER MECHANISM ASSEMBLY (103) REMOVAL

1. Remove the Front Panel Assembly (AA). (Refer to Step 2.)
2. Disconnect 4 connectors (LCN101/351, LCN801, LCN802 and LCN803) on the Primary Transport P. C. Board (103).
3. Remove 4 screws (E), and then the Cassette Tape Recorder Mechanism Assembly (103).

4 SECONDARY CASSETTE TAPE RECORDER MECHANISM ASSEMBLY (103) REMOVAL

1. Remove the Front Panel Assembly (AA). (Refer to Step 2.)
2. Disconnect 4 connectors (LCN304/1101, LCN804, LCN805 and LCN806) on the Secondary Transport P. C. Board (103).
3. Remove 4 screws (F), and then the Cassette Tape Recorder Mechanism Assembly (103).

5 MAIN P. C. BOARD (PCB-1) REMOVAL

1. Remove the Front Panel Assembly (AA). (Refer to step 2).

2. Disconnect 4 connectors (LCN101/351, LCN801, LCN802 and LCN803) on the Primary Transport P. C. Board (103).
3. Disconnect 4 connectors (LCN304/1101, LCN804, LCN805 and LCN806) on the Secondary Transport P. C. Board (103).
4. Disconnect 5 Jumper Leads (JL1, JL2, JL3, JL4 and JL5) from 5 connectors (CN805, CN804, CN803, CN802 and CN801) on the Power P. C. Board (PCB-4).
5. Remove 9 screws (G), 1 screw (H) and 2 screws (I) and then remove the Main P. C. Board (PCB-1).

6 POWER P. C. BOARD (PCB-4) REMOVAL


1. Remove the Front Panel Assembly (AA). (Refer to step 2).
2. Disconnect 5 Jumper Leads (JL1, JL2, JL3, JL4 and JL5) on the Power P. C. Board (PCB-4).
3. Disconnect 3 connectors (LCN801, LCN802 and LCN803) on the Primary Transport P. C. Board.
4. Remove 5 screws (J) and 4 screws (K), and then remove the Power P. C. Board (PCB-4).

7 OTHER P.C. BOARDS REMOVAL

1. Remove the Front Panel Assembly (AA). (Refer to step 2).
2. Remove 4 screws (L), and then remove the Cont SW-L P. C. Board (PCB-6).
3. Remove 4 screws (M), and then remove the Cont SW-R P. C. Board (PCB-7).
4. Remove 4 Rotary Knobs (146) and 3 screws (N), and then remove the Volume P. C. Board (PCB-2).
5. Remove 7 screws (O), and then remove the Front P. C. Board (PCB-5).

POWER CORD REPLACEMENT (FOR SERVICE ENGINEERS OTHER THAN NORTH AMERICA)

In order to prevent fire shock hazard when replacing the power cord, follow the Procedure below to replace the part with the standard supply parts.

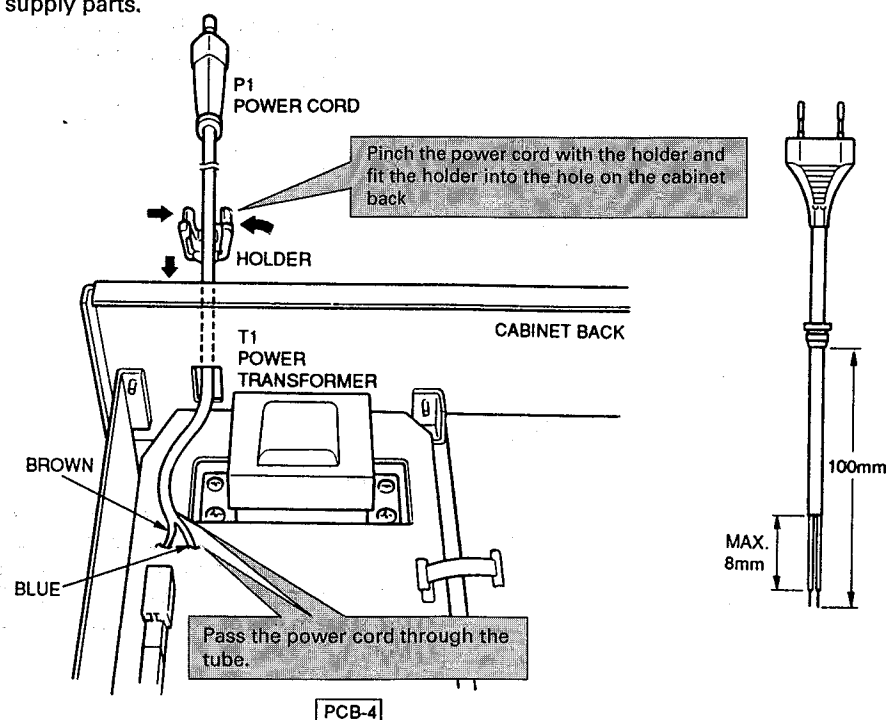**CIRCUIT DESCRIPTION****PLAYBACK SIGNAL**

The signal from the playback head (Primary Transport) is amplified by the playback amplifier Q101, Q103 and Q105 (L ch.), and is applied to the pin 29 (L ch.) and 2 (R ch.) of the Dolby NR IC501 (B/C type). Switching of the playback signal from the record mode (external input signal) to the playback mode is performed inside IC501. IC501 is usually switched to the playback mode. However, the control signal transmitted to the pin 5 of IC501 from IC751 through Q505 and Q506 switches IC501 from the record mode to the playback mode. The input signal to IC501 is output from the pins 25 (L ch.) and 6 (R ch.) and applied to the OUTPUT Jack (J1).

Use the same signal for both the secondary transport and the primary transport.

RECORD SIGNAL**[PRIMARY SIDE]**

The signal from the INPUT jack is controlled by the INPUT LEVEL control. It is applied to the pins 30 (L ch.) and 1 (R ch.) of the Dolby NR IC501 (B/C type). Switching of the record signal from the playback mode to the record mode is performed inside IC501. The control signal transmitted to the pin 5 of IC501 from IC751 through Q505 and Q506 switches IC501 from the playback mode to the record mode.

The input signal to the Dolby NR IC is output from the pins 28 (L ch.) and 3 (R ch.) of IC501. Then it is input to the pins 27 (L ch.) and 4 (R ch.) and is output from the pins 24 (L ch.) and 7 (R ch.). The encoded signal is input to the pins 23 (L ch.) and 8 (R ch.) and then it is output from the pins 18 (L ch.) and 13 (R ch.). The signal output from IC501 passes through the record equalizer circuit and is amplified by the record amplifier of IC201. The amplified signal is then applied to the recording head after being synthesized by a bias signal.

[SECONDARY SIDE]

The signal from the INPUT jack is controlled by the INPUT LEVEL control. It is applied to the pins 30 (L ch.) and 1 (R ch.) of the Dolby NR IC551 (B/C type). Switching of the record signal from the playback mode to the record mode is performed inside IC551. The control signal transmitted to the pin 5 of IC551 from IC751 through Q531 and Q532 switches IC551 from the playback mode to the record mode.

The input signal to the Dolby NR IC is output from the pins 28 (L ch.) and 3 (R ch.) of IC551. Then it is input to the pins 27 (L ch.) and 4 (R ch.) and is output from the pins 24 (L ch.) and 7 (R ch.). The encoded signal is input to the pins 23 (L ch.) and 8 (R ch.) and then it is output from the pins 18 (L ch.) and 13 (R ch.). The signal output from IC551 passes through the record equalizer circuit and is amplified by the record amplifier of IC201. The amplified signal is then applied to the recording head after being synthesized by a bias signal.

MUTING OPERATION

The signal that mutes the sound produced at switching to recording or playback is applied from IC751 of the logic control block.

When the "STOP" button is pressed, the mute signal output from the pin 22 of IC751 turns ON Q709 (L ch.) and Q710 (R ch.) to short-circuit the output signals of the Dolby out for muting. For the purpose of preventing generation of noise at power ON/OFF, the mute signal is output from Q51. The muting is done by short circuiting the output signal with Q709 (L ch.) and Q710 (R ch.) turned ON.

LOGIC FOR RECORD MODE**[PRIMARY SIDE]**

When the "REC" button is pressed, the pin 11 and 13 of IC751 becomes high level and Q109 (L ch.) and Q110 (R ch.) turn ON. The input to the Dolby NR IC is muted. Also Q712 and Q713 turn ON and Q711 turns OFF. Therefore Q701, Q703 (L ch.) and Q702, Q704 (R ch.) turn OFF to release the muting of the outputs from the record amplifiers.

Also, Q505 turns ON and Q506 turns OFF to make the pin 5 of IC501 high level. Therefore the mode is switched to the record mode.

[SECONDARY SIDE]

When the "REC" button is pressed, the pin 7 and 9 of IC751 becomes high level and Q1109 (L ch.) and Q1110 (R ch.) turn ON. The input to the Dolby NR IC is muted. Also Q1712 and Q1713 turn ON and Q1711 turns OFF. Therefore Q1701, Q1703 (L ch.) and Q1702, Q1704 (R ch.) turn OFF to release the muting of the outputs from the record amplifiers.

Also, Q531 turns ON and Q532 turns OFF to make the pin 5 of IC551 high level. Therefore the mode is switched to the record mode.

LOGIC FOR RECORD TO PLAYBACK MODE

When the "STOP" button is pressed, the pin 12 of IC751 becomes high level. Q731 turns ON and Q213 (L ch.), Q214 (R ch.) turn ON to mute the inputs to the record amplifiers. Also, Q712 and Q713 turn OFF and Q711 turns ON to turn ON Q701, Q703 (L ch.) and Q702, Q704 (R ch.). Therefore the outputs from the record amplifiers are muted.

Also, Q505 turns OFF and Q506 turns ON to make the pin 5 of IC501 low level. Therefore the mode is switched to the playback mode.

CIRCUIT DESCRIPTION

PLAYBACK SIGNAL

The signal from the playback head (Primary Transport) is amplified by the playback amplifier Q101, Q103 and Q105 (L ch.), and is applied to the pin 29 (L ch.) and 2 (R ch.) of the Dolby NR IC501 (B/C type). Switching of the playback signal from the record mode (external input signal) to the playback mode is performed inside IC501. IC501 is usually switched to the playback mode. However, the control signal transmitted to the pin 5 of IC501 from IC751 through Q505 and Q506 switches IC501 from the record mode to the playback mode. The input signal to IC501 is output from the pins 25 (L ch.) and 6 (R ch.) and applied to the OUTPUT Jack (J1).

Use the same signal for both the secondary transport and the primary transport.

RECORD SIGNAL

[PRIMARY SIDE]

The signal from the INPUT jack is controlled by the INPUT LEVEL control. It is applied to the pins 30 (L ch.) and 1 (R ch.) of the Dolby NR IC501 (B/C type). Switching of the record signal from the playback mode to the record mode is performed inside IC501. The control signal transmitted to the pin 5 of IC501 from IC751 through Q505 and Q506 switches IC501 from the playback mode to the record mode.

The input signal to the Dolby NR IC is output from the pins 28 (L ch.) and 3 (R ch.) of IC501. Then it is input to the pins 27 (L ch.) and 4 (R ch.) and is output from the pins 24 (L ch.) and 7 (R ch.). The encoded signal is input to the pins 23 (L ch.) and 8 (R ch.) and then it is output from the pins 18 (L ch.) and 13 (R ch.). The signal output from IC501 passes through the record equalizer circuit and is amplified by the record amplifier of IC201. The amplified signal is then applied to the recording head after being synthesized by a bias signal.

[SECONDARY SIDE]

The signal from the INPUT jack is controlled by the INPUT LEVEL control. It is applied to the pins 30 (L ch.) and 1 (R ch.) of the Dolby NR IC551 (B/C type). Switching of the record signal from the playback mode to the record mode is performed inside IC551. The control signal transmitted to the pin 5 of IC551 from IC751 through Q531 and Q532 switches IC551 from the playback mode to the record mode.

The input signal to the Dolby NR IC is output from the pins 28 (L ch.) and 3 (R ch.) of IC551. Then it is input to the pins 27 (L ch.) and 4 (R ch.) and is output from the pins 24 (L ch.) and 7 (R ch.). The encoded signal is input to the pins 23 (L ch.) and 8 (R ch.) and then it is output from the pins 18 (L ch.) and 13 (R ch.). The signal output from IC551 passes through the record equalizer circuit and is amplified by the record amplifier of IC201. The amplified signal is then applied to the recording head after being synthesized by a bias signal.

MUTING OPERATION

The signal that mutes the sound produced at switching to recording or playback is applied from IC751 of the logic control block.

When the "STOP" button is pressed, the mute signal output from the pin 22 of IC751 turns ON Q709 (L ch.) and Q710 (R ch.) to short-circuit the output signals of the Dolby out for muting. For the purpose of preventing generation of noise at power ON/OFF, the mute signal is output from Q51. The muting is done by short circuiting the output signal with Q709 (L ch.) and Q710 (R ch.) turned ON.

LOGIC FOR RECORD MODE

[PRIMARY SIDE]

When the "REC" button is pressed, the pin 11 and 13 of IC751 becomes high level and Q109 (L ch.) and Q110 (R ch.) turn ON. The input to the Dolby NR IC is muted. Also Q712 and Q713 turn ON and Q711 turns OFF. Therefore Q701, Q703 (L ch.) and Q702, Q704 (R ch.) turn OFF to release the muting of the outputs from the record amplifiers.

Also, Q505 turns ON and Q506 turns OFF to make the pin 5 of IC501 high level. Therefore the mode is switched to the record mode.

[SECONDARY SIDE]

When the "REC" button is pressed, the pin 7 and 9 of IC751 becomes high level and Q1109 (L ch.) and Q1110 (R ch.) turn ON. The input to the Dolby NR IC is muted. Also Q1712 and Q1713 turn ON and Q1711 turns OFF. Therefore Q1701, Q1703 (L ch.) and Q1702, Q1704 (R ch.) turn OFF to release the muting of the outputs from the record amplifiers.

Also, Q531 turns ON and Q532 turns OFF to make the pin 5 of IC551 high level. Therefore the mode is switched to the record mode.

LOGIC FOR RECORD TO PLAYBACK MODE

When the "STOP" button is pressed, the pin 12 of IC751 becomes high level. Q731 turns ON and Q213 (L ch.), Q214 (R ch.) turn ON to mute the inputs to the record amplifiers. Also, Q712 and Q713 turn OFF and Q711 turns ON to turn ON Q701, Q703 (L ch.) and Q702, Q704 (R ch.). Therefore the outputs from the record amplifiers are muted.

Also, Q505 turns OFF and Q506 turns ON to make the pin 5 of IC501 low level. Therefore the mode is switched to the playback mode.

DISASSEMBLY PROCEDURES (REFER TO PAGES 10, 11 and 12)**1 TOP COVER (133) REMOVAL**

Remove 4 screws (A) and 2 screws (B), and then remove the Top Cover (133).

2 FRONT PANEL ASSEMBLY (AA) REMOVAL

1. Remove the Top Cover (133).
2. Disconnect 1 connector (JL901) from 1 connector (CN904) on the Main P. C. Board (PCB-1).
3. Remove 6 screws (C) and 3 screws (D), and then remove the Front Panel Assembly (AA).
4. If necessary, unsolder the lead wires.

3 PRIMARY CASSETTE TAPE RECORDER MECHANISM ASSEMBLY (103) REMOVAL

1. Remove the Front Panel Assembly (AA). (Refer to Step 2.)
2. Disconnect 4 connectors (LCN101/351, LCN801, LCN802 and LCN803) on the Primary Transport P. C. Board (103).
3. Remove 4 screws (E), and then the Cassette Tape Recorder Mechanism Assembly (103).

4 SECONDARY CASSETTE TAPE RECORDER MECHANISM ASSEMBLY (103) REMOVAL

1. Remove the Front Panel Assembly (AA). (Refer to Step 2.)
2. Disconnect 4 connectors (LCN304/1101, LCN804, LCN805 and LCN806) on the Secondary Transport P. C. Board (103).
3. Remove 4 screws (F), and then the Cassette Tape Recorder Mechanism Assembly (103).

5 MAIN P. C. BOARD (PCB-1) REMOVAL

1. Remove the Front Panel Assembly (AA). (Refer to step 2).

2. Disconnect 4 connectors (LCN101/351, LCN801, LCN802 and LCN803) on the Primary Transport P. C. Board (103).
3. Disconnect 4 connectors (LCN304/1101, LCN804, LCN805 and LCN806) on the Secondary Transport P. C. Board (103).
4. Disconnect 5 Jumper Leads (JL1, JL2, JL3, JL4 and JL5) from 5 connectors (CN805, CN804, CN803, CN802 and CN801) on the Power P. C. Board (PCB-4).
5. Remove 9 screws (G), 1 screw (H) and 2 screws (I) and then remove the Main P. C. Board (PCB-1).

6 POWER P. C. BOARD (PCB-4) REMOVAL


1. Remove the Front Panel Assembly (AA). (Refer to step 2).
2. Disconnect 5 Jumper Leads (JL1, JL2, JL3, JL4 and JL5) on the Power P. C. Board (PCB-4).
3. Disconnect 3 connectors (LCN801, LCN802 and LCN803) on the Primary Transport P. C. Board.
4. Remove 5 screws (J) and 4 screws (K), and then remove the Power P. C. Board (PCB-4).

7 OTHER P.C. BOARDS REMOVAL

1. Remove the Front Panel Assembly (AA). (Refer to step 2).
2. Remove 4 screws (L), and then remove the Cont SW-L P. C. Board (PCB-6).
3. Remove 4 screws (M), and then remove the Cont SW-R P. C. Board (PCB-7).
4. Remove 4 Rotary Knobs (146) and 3 screws (N), and then remove the Volume P. C. Board (PCB-2).
5. Remove 7 screws (O), and then remove the Front P. C. Board (PCB-5).

POWER CORD REPLACEMENT (FOR SERVICE ENGINEERS OTHER THAN NORTH AMERICA)

In order to prevent fire shock hazard when replacing the power cord, follow the Procedure below to replace the part with the standard supply parts.

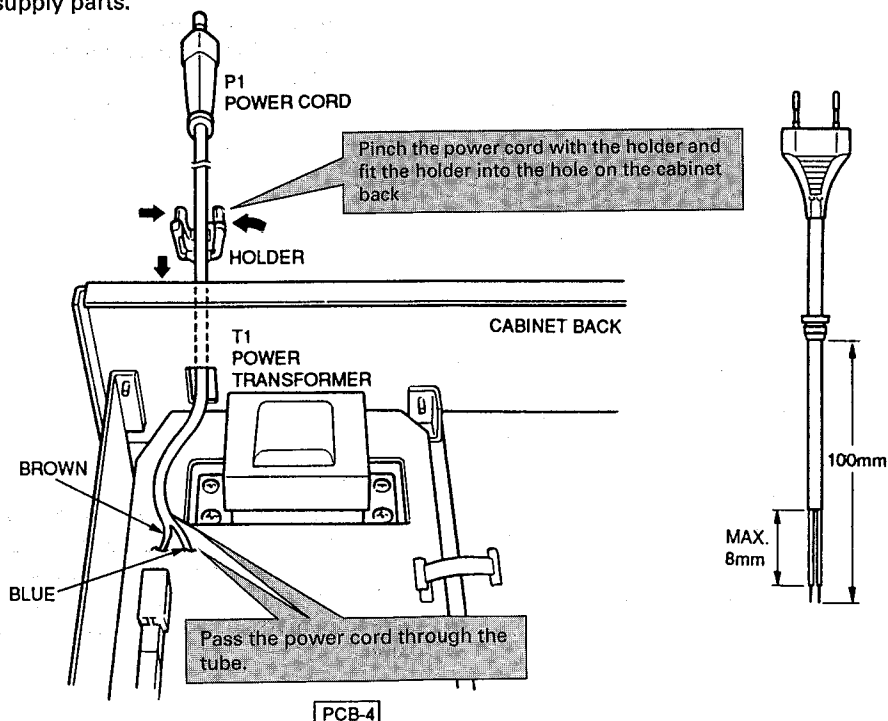

The image displays three sets of timing diagrams for a video cassette recorder, showing the relationship between various control signals and timing parameters across different operational modes.




Top Left Diagram: Shows the initial sequence of operations. The signals include KEYIN, SOL, CPM, MMS, RM1, RM2, RPC, SOLP, INH, BIAS, REC, LINE MUTE, PB MUTE, and REC MUTE. The modes are STOP, REV.PLAY, STOP, FF, STOP, FWD.PLAY, and STOP. Timing values are indicated for various intervals, such as 100, 50, 180, 200, 400, 200, 600, 740, 50, and 20.



Top Right Diagram: Shows the sequence of operations for recording and playback. The signals are the same as the top left. The modes are REC.PAUSE, FWD.REC, REV.REC, STOP, REV.PLAY, and FWD.PLAY. Timing values are indicated for various intervals, such as 100, 50, 300, 200, 180, 230, 500, 180, 500, 200, 50, and 200.

Middle Diagram: Shows a sequence of operations including forward and reverse search. The signals are the same as the top left. The modes are FWD.PLAY, F.F.SEARCH, FWD.PLAY, STOP, REV.PLAY, FWD.REV.SEARCH, REV.PLAY, REV.FWD.SEARCH, and STOP. Timing values are indicated for various intervals, such as 100, 50, 400, 200, 180, 50, 600, 740, 50, 200, 180, 120, 180, 150, 740, 600, 50, and 200.

Bottom Diagram: Shows the sequence of operations for high-speed forward and reverse recording. The signals are the same as the top left. The modes are STOP, HI-SPEED FWD.REC, HI-SPEED REV.REC, and STOP. Timing values are indicated for various intervals, such as 100, 50, 300, 400, 180, 200, 600, 740, 50, 200, 50, and 200.

TIMING CHART

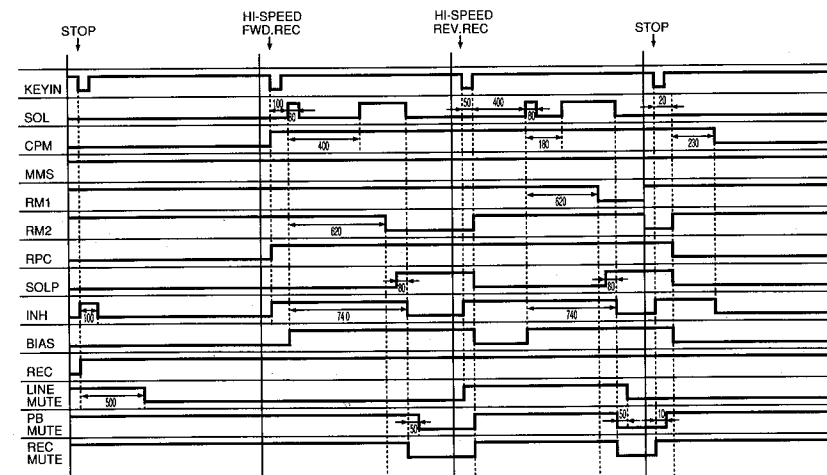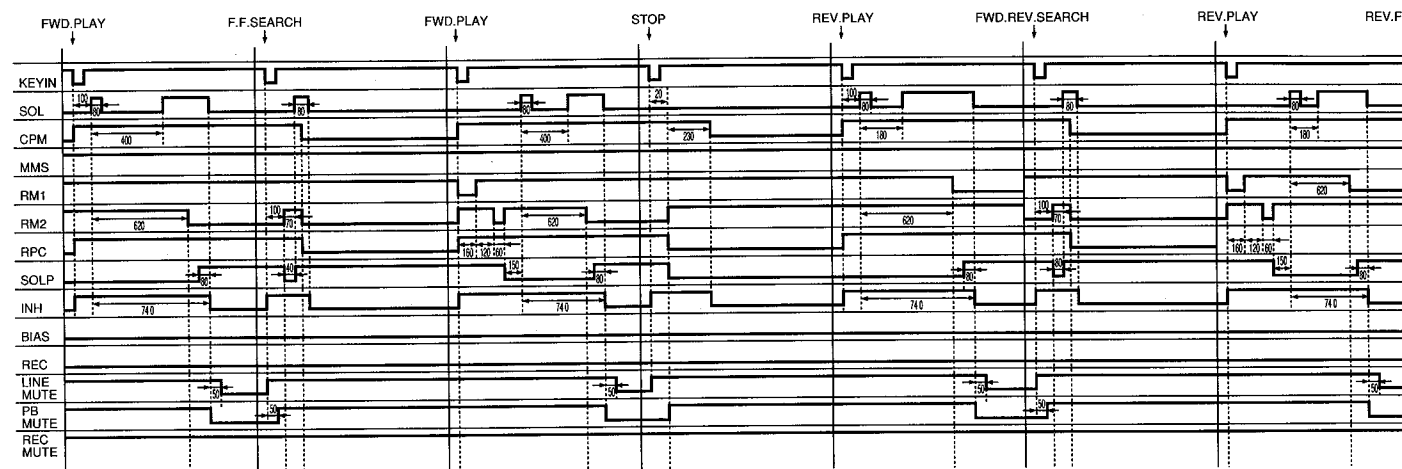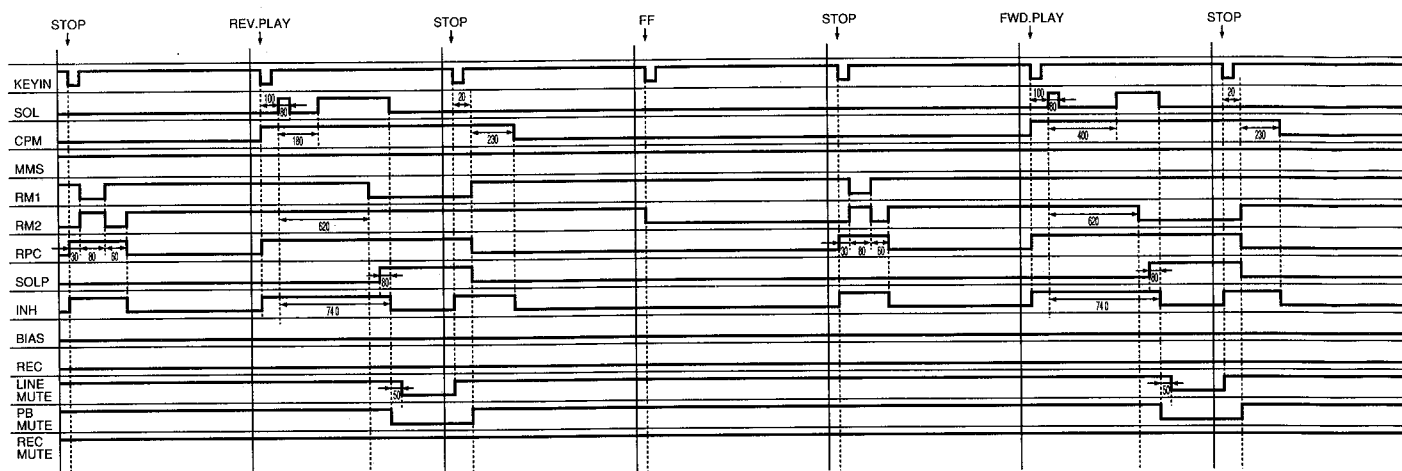

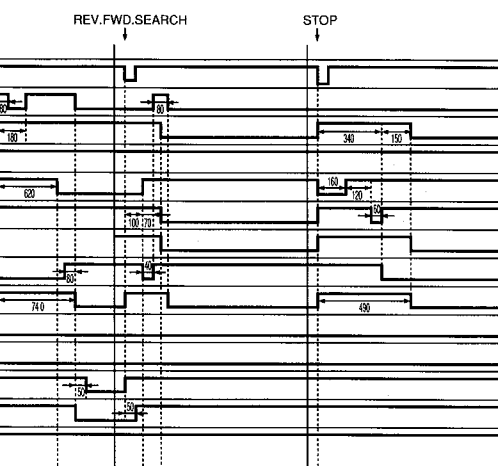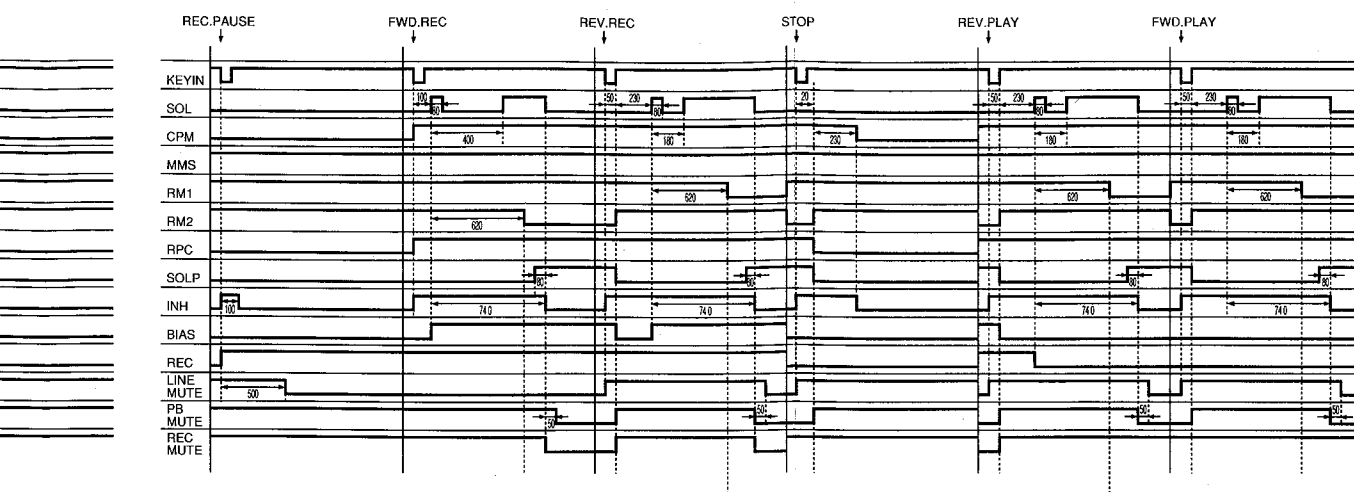

ALIGNMENT PROCEDURES (REFER TO PAGES 13, 14, 27 through and 31)

CASSETTE MECHANISM CONFIRMATION

Make sure to confirm conditons of the cassette mecha-
nism as follows before adjustment.

1. Confirmation of erase prevention function
 - The switch should turn ON when a tape with erro-
neous erase preventive pawl is inserted. (Use a
tape which is 0.2 mm smaller than the minimum
size of 62.9 mm or a MAZ-0184-C gauge one.)
 - When the switch arm is moved back gradually from
the ON position, the switch turn OFF.
2. Confirmation of cassette pack detection function
 - The switch should turn ON when a tape is inserted.
(Use a tape whose minimum size is 63.5 mm or a
MAZ-0184-C gauge one.)
 - When the switch arm is moved back gradually from
the ON position, the switch should turn OFF.
3. Confirmation of eject function
 - The cassette compartment opens smoothly and no
abnormal noise should be heard while opening and
closing.
 - The eject lever opens smoothly without contacting
the chassis and damper.
 - The eject button can not be pressed during play-
back.
4. Confirmation of playback, fast forward and rewind
functions
 - The torque used in each of the playback, fast for-
ward and rewind modes should be within specifica-
tion.

Playback35 gr.cm – 70 gr.cm
Fast Forward70 gr.cm – 150 gr.cm
Rewind70 gr.cm – 150 gr.cm
 - No abnormal noise should be heard during opera-
tion in any mode. The solenoid switching sound
should not be considered as a noise.

5. Confirmation of positions of record/playback heads
 - Head height
 - Set the M-300 head gauge.
 - Set the unit in the playback mode and place the
adjustment chip on the head gauge as shown in
the Fig. 1.
 - The adjustment chip should not contact the tape
guide of both record/playback heads.

- Head position
 - Set the M-300 head gauge.
 - Set the unit in the playback mode and place the
adjustment chip on the head gauge as shown in
the Fig. 2.
 - With both record/playback heads the adjustment
chip should be between MIN and MAX of the
M-300 head gauge.

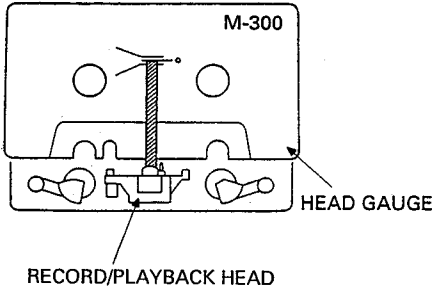


Fig. 2

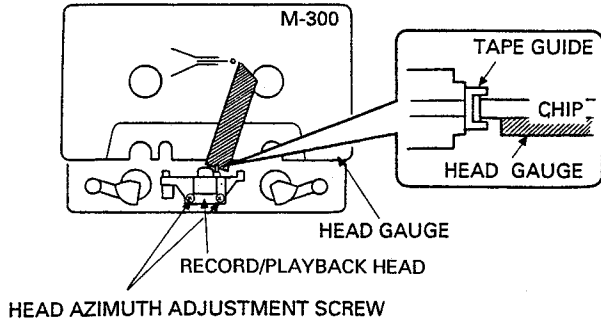


Fig. 1

ELECTRICAL ADJUSTMENT AND CONFIRMATION

1. Before adjustment
 - Before electrical adjustment, make sure that confir-
mations of the cassette mechanism are all com-
pleted.
 - After the power switch is pushed on, wait for 10
minutes before measuring to be sure of the most
stable operation.
 - Since head magnetization, dust accumulations, etc.
are likely to introduce errors in the various charac-
teristics, it is very important that the heads are
properly demagnetized and cleaned before com-
mencing any adjustment, particularly frequency
response and head azimuth adjustment.
2. Instruments required
 - Low frequency oscillator
 - AC VTVM or dual channel AC VTVM
 - Oscilloscope
 - Wow/flutter meter
 - Frequency counter
 - Distortion meter
3. Test tapes
 - Azimuth adjustmentTCC-153
 - Tape speed adjustmentMTT-111DN
 - Playback output level adjustment.....TCC-130
 - Music search adjustmentSCC-1425
 - Playback frequency characteristic confirmation
.....TCC-1216 or TCC-162C and TCC-262C
 - Reference tapes
 - LNSCC-502
 - CrO2SCC-1360
 - METALSCC-565

Note:
C-90 differs with C-60 in the thickness and bias is of
unequal, so adjust with the tape whose bias in of
Specified Value.

4. General conditions (unless otherwise noted)

Controls and Switches	Settings
Dolby NR	Off
Input Level	Maximum
MPX Filter	Off
Bias Fine Trim	Center
Input Balance	Center

- Azimuth Adjustment
- When the maximum level point of R channel does not
equal that L channel, connect the oscilloscope as shown
in Fig. 3 and proceed with azimuth adjustment so that
L and R channels are in phase.
- a) Connect L channel tape out to "X (or V)" and R
channel to "Y (or H)". Observe the lissajous wave-
form.
- b) Set L and R channels to monaural. Adjust vertical
and horizontal gain so that the waveform becomes
45 degree.
- c) Adjust azimuth so that the measurement of "a"
becomes maximum and the measurement of "b"
becomes minimum against the 45 degree line.


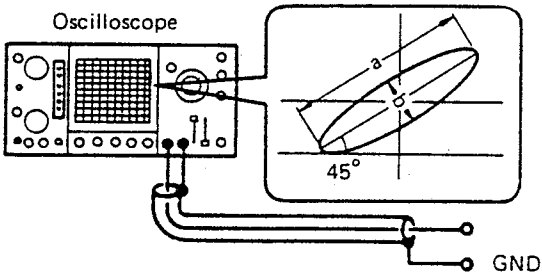


Fig. 3

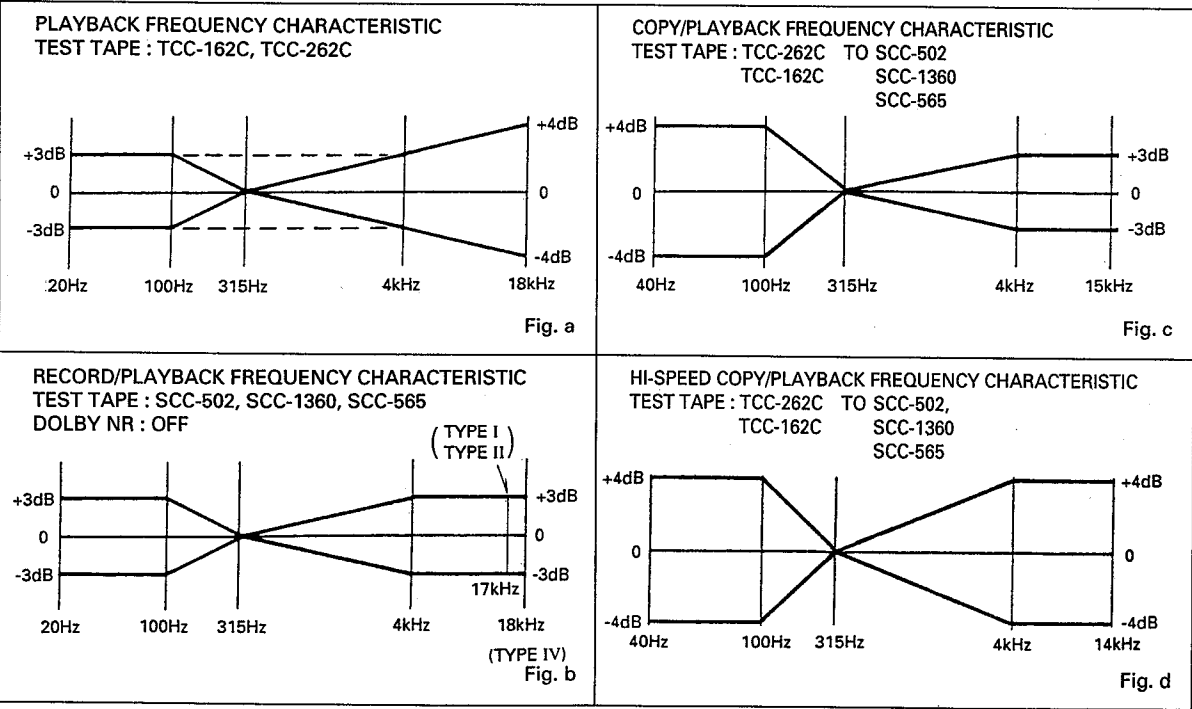

ALIGNMENT PROCEDURES (REFER TO PAGES 13, 14, 27 through and 31)

CASSETTE MECHANISM CONFIRMATION

Make sure to confirm conditions of the cassette mechanism as follows before adjustment.

1. Confirmation of erase prevention function

- The switch should turn ON when a tape with erroneous erase preventive pawl is inserted. (Use a tape which is 0.2 mm smaller than the minimum size of 62.9 mm or a MAZ-0184-C gauge one.)
- When the switch arm is moved back gradually from the ON position, the switch turn OFF.

2. Confirmation of cassette pack detection function

- The switch should turn ON when a tape is inserted. (Use a tape whose minimum size is 63.5 mm or a MAZ-0184-C gauge one.)
- When the switch arm is moved back gradually from the ON position, the switch should turn OFF.

3. Confirmation of eject function

- The cassette compartment opens smoothly and no abnormal noise should be heard while opening and closing.
- The eject lever opens smoothly without contacting the chassis and damper.
- The eject button can not be pressed during playback.

4. Confirmation of playback, fast forward and rewind functions

- The torque used in each of the playback, fast forward and rewind modes should be within specification.

Playback 35 gr.cm – 70 gr.cm

Fast Forward 70 gr.cm – 150 gr.cm

Rewind 70 gr.cm – 150 gr.cm

- No abnormal noise should be heard during operation in any mode. The solenoid switching sound should not be considered as a noise.

5. Confirmation of positions of record/playback heads

- Head height
 - a) Set the M-300 head gauge.
 - b) Set the unit in the playback mode and place the adjustment chip on the head gauge as shown in the Fig. 1.
 - c) The adjustment chip should not contact the tape guide of both record/playback heads.

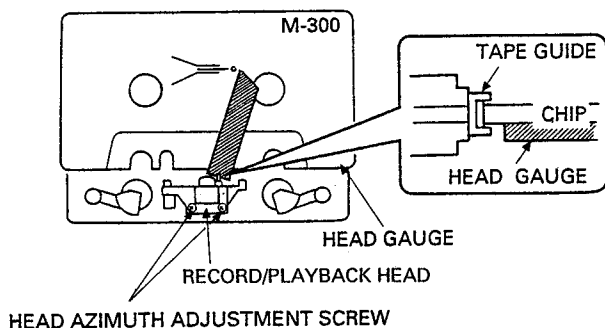


Fig. 1

• Head position

- a) Set the M-300 head gauge.
- b) Set the unit in the playback mode and place the adjustment chip on the head gauge as shown in the Fig. 2.
- c) With both record/playback heads the adjustment chip should be between MIN and MAX of the M-300 head gauge.

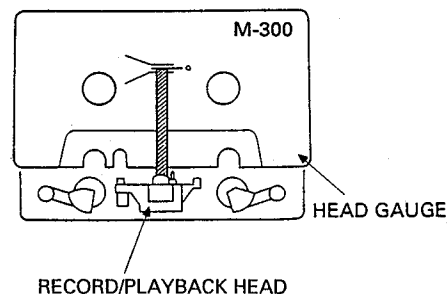


Fig. 2

ELECTRICAL ADJUSTMENT AND CONFIRMATION

1. Before adjustment

- Before electrical adjustment, make sure that confirmations of the cassette mechanism are all completed.
- After the power switch is pushed on, wait for 10 minutes before measuring to be sure of the most stable operation.
- Since head magnetization, dust accumulations, etc. are likely to introduce errors in the various characteristics, it is very important that the heads are properly demagnetized and cleaned before commencing any adjustment, particularly frequency response and head azimuth adjustment.

2. Instruments required

- Low frequency oscillator
- AC VTVM or dual channel AC VTVM
- Oscilloscope
- Wow/flutter meter
- Frequency counter
- Distortion meter

3. Test tapes

- Azimuth adjustment TCC-153
- Tape speed adjustment MTT-111DN
- Playback output level adjustment TCC-130
- Music search adjustment SCC-1425
- Playback frequency characteristic confirmation TCC-1216 or TCC-162C and TCC-262C
- Reference tapes
 - LN SCC-502
 - CrO₂ SCC-1360
 - METAL SCC-565

Note:

C-90 differs with C-60 in the thickness and bias is of unequal, so adjust with the tape whose bias in of Specified Value.

4. General conditions (unless otherwise noted)

Controls and Switches	Settings
Dolby NR	Off
Input Level	Maximum
MPX Filter	Off
Bias Fine Trim	Center
Input Balance	Center

Azimuth Adjustment

When the maximum level point of R channel does not equal that L channel, connect the oscilloscope as shown in Fig. 3 and proceed with azimuth adjustment so that L and R channels are in phase.

- Connect L channel tape out to "X (or V)" and R channel to "Y (or H)". Observe the lissajous waveform.
- Set L and R channels to monaural. Adjust vertical and horizontal gain so that the waveform becomes 45 degree.
- Adjust azimuth so that the measurement of "a" becomes maximum and the measurement of "b" becomes minimum against the 45 degree line.




 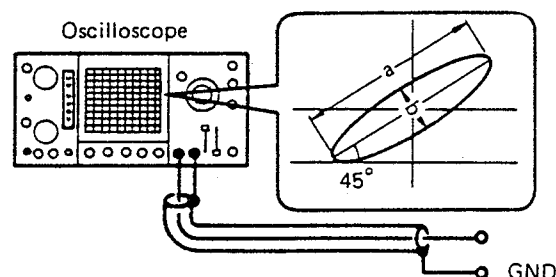


Fig. 3

 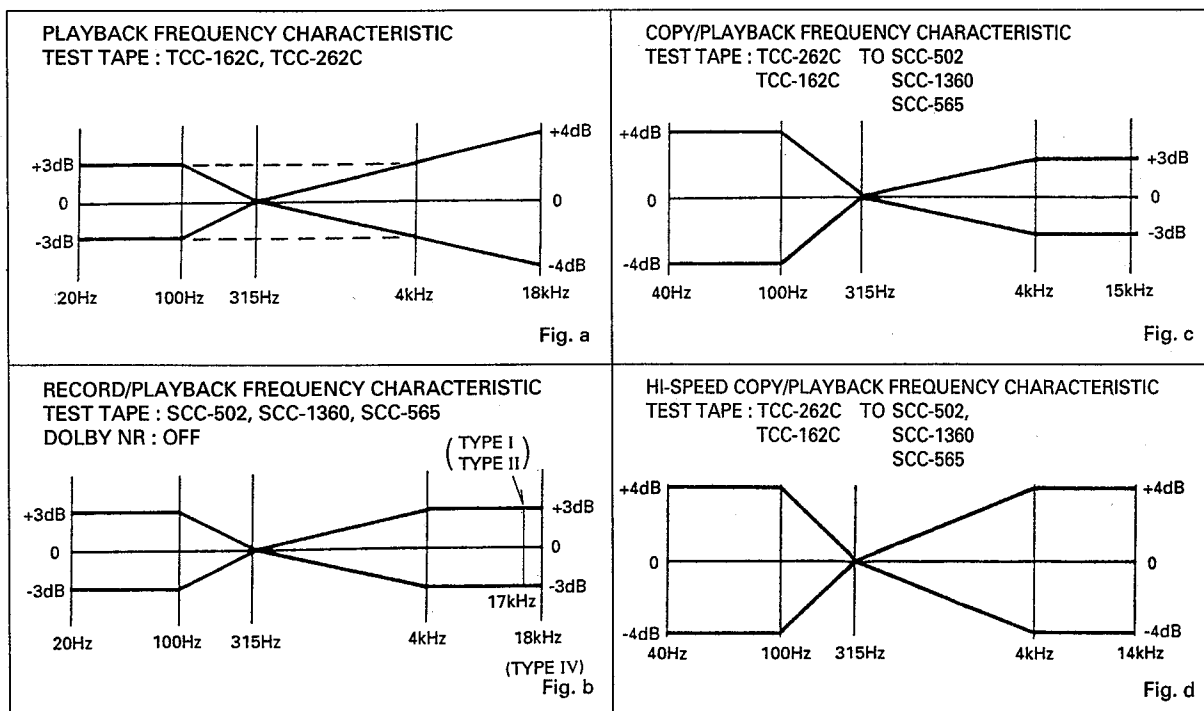


1. PRIMARY DECK SECTION

Step	Alignment	Instrument Required	Input Signal	Mode	Test Point	Adjustment	For
1	Quick sensor	VTVM Black tape (SCC-502)		PB	TP809	VR803	Adjust VR803 so the voltage at the test point is 0.62V or higher when the leader tape is running and 200 mV or less in the middle of tape.
2	Azimuth	VTVM Oscilloscope Test tape (TCC-153)		PB	TP501 (L ch), GND TP502 (R ch), GND	Azimuth screw	Maximum output Refer to "Azimuth Adjustment" on page 6.
3	Tape speed (Hi-speed)	Frequency counter Test tape (MTT-111DN)		PB	TP501 (L ch), GND TP502 (R ch), GND	VR801	6020 Hz $\pm$ 20 Hz (TP806 : GND connection) Adjust at the center of test tape.
4	Tape speed (Normal speed)	Frequency counter Test tape (MTT-111DN)		PB	TP501 (L ch), GND TP502 (R ch), GND	VR802	3010 Hz $\pm$ 10 Hz Adjust at the center of test tape.
5	Playback output level	VTVM Test tape (TCC-130)		PB	TP501 (L ch), GND TP502 (R ch), GND	VR101 (L ch) VR102 (R ch)	775 mV Tape selector is Normal position. Adjust at Dolby NR off.
6	Playback frequency characteristic confirmation	VTVM Test tape (TCC-1216 or TCC-162C and TCC-262C)		PB	TP501 (L ch), GND TP502 (R ch), GND	VR103 VR104	Adjust VR103 and VR104 so the playback frequency response (1 kHz/18 kHz) is $\pm$ 0.6 ~ 0.7 dB. Refer to Fig. a.
7	Music Search	Oscilloscope Test tape (SCC-1425)		FORWARD SEARCH	TP601, GND	VR602	3.0 $\pm$ 0.05V To be adjusted at the beginning of tape winding. 
8	Blank Search	Oscilloscope Test tape (SCC-1425)		SEARCH PLAYBACK	TP601, GND	VR601	1.0V or higher To be measured at the low level part of SCC-1425 tape. 
9	Bias frequency confirmation	Frequency counter Blank tape (SCC-565)		DUAL REC	TP101 (L ch), GND TP102 (R ch), GND	T301	105 kHz $\pm$ 2 kHz Use METAL tape.
10	Bias trans.	Blank tape (SCC-565)		REC/PB	TP306, GND TP301, GND (L ch) TP302, GND (R ch)	T302 L301 L302	Connect the oscilloscope to TP306 and GND and adjust T302 so that the waveform is maximum. Connect the oscilloscope to TP301 and GND, TP302 and GND and adjust L301, L302 so that the DC voltage is minimum.
11	Bias trap	VTVM Blank tape (SCC-565)		REC/PB	TP201 (L ch), GND TP202 (R ch), GND	LC201 LC202	Minimum output. Use METAL tape. INPUT VR. minimum
12	Bias level (pre-adjustment)	VTVM Blank tapes METAL SCC-565 CrO ₂ SCC-1360 Normal SCC-502		REC/PB	TP101 (L ch), GND TP102 (R ch), GND	VR301 VR302	35 mV Test tape is METAL blank tape. Short-circuit R708 and JP699, R707 and JP700.
						VR305 VR306	20 mV Test tape is CrO ₂ blank tape. Short-circuit R708 and JP699, R707 and JP700.
						VR303 VR304	15 mV Test tape is Normal blank tape. Short-circuit R708 and JP699, R707 and JP700.
13	Record level (pre-adjustment)	VTVM Blank tapes METAL SCC-565 CrO ₂ SCC-1360 Normal SCC-502	Apply 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775 mV in REC-PAUSE mode.	REC/PB	TP501 (L ch), GND TP502 (R ch), GND	VR201, VR202 VR301 VR302	775 mV Test tape is METAL tape. Adjust variable resistors so that the distortion becomes 0.9% ~ 1.2%. (Mini. distortion)
						VR305 VR306 (CrO ₂)	775 mV Adjust variable resistors so that the distortion becomes 0.9% (CrO ₂). Adjust variable resistors so that the distortion becomes 0.8% (Normal). This confirmation should be at each tape selector position.
						VR303 VR304 (Normal)	
14	Record/playback frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502	Apply 1 kHz signal to INPUT jack. The output at TP501 and TP502 are Dolby level -25dB. Then adjust with a 20 Hz to 30 kHz sweep signal.	REC/PB	OUTPUT jack	VR305, VR306 LC201, LC202 (VR301, VR302)	So that the record/playback frequency response is flat (at least within the range in Fig. b.) Test tape is CrO ₂ tape.
						VR301 VR302	So that the record/playback frequency response is flat (at least within the range in Fig. b.) Test tape is METAL tape.
						VR303, VR304 LC201, LC202 (VR301, VR302)	So that the record/playback frequency response is flat (at least within the range in Fig. b.) Test tape is Normal tape.
15	Record level	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502	Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775 mV (1 kHz) in REC-PAUSE mode.	REC/PB	TP501 (L ch), GND TP502 (R ch), GND	VR201 VR202	775 mV Perform adjustment using CrO ₂ . Perform checking only for Normal and METAL tapes.
16	Copy level	Test tape TCC-130 (Secondary) Blank tape SCC-1360 (Primary)		EDIT	OUTPUT	VR551 VR552	Perform edit copy and adjust VR551 and VR552 so that the copy output (PLAY output) of PRI DECK is 775 mV.
17	High speed copy frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502 Test tape TCC-185C		High Speed Copy Play	OUTPUT	L203, L204	Load TCC-185C in SEC DECK and SCC-565 in PRI DECK and execute high-speed copying, then play the tape in the PRI DECK. Check that the frequency response of the 14 kHz signal is within $\pm$ 3 dB of that of the 1 kHz signal. If this specification cannot be satisfied, adjust L203 and L204. After adjustment is confirmed, also use the SCC-502 and SCC-1360 tapes to check.
18	High speed copy frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502 Test tape TCC-285C		High Speed Copy Play	OUTPUT	L203, L204	Load TCC-285C in SEC DECK and SCC-565 in PRI DECK and execute high-speed copying, then play the tape in the PRI DECK. Check that the frequency response of the 14 kHz signal is within $\pm$ 3 dB of that of the 1 kHz signal. If this specification cannot be satisfied, adjust L203 and L204. After adjustment is confirmed, also use the SCC-502 and SCC-1360 tapes to check.
19	Meter level	VTVM	Apply 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 1.5 dB below 775 mV.	REC/PAUSE	PEAK LEVEL METER	VR401 VR402	Adjust so the -1 dB segments light.
20	MPX filter characteristic confirmation	VTVM	Apply 19 kHz, 15 kHz and 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775mV.	REC/PAUSE MPX filter ON	TP501 (L ch), GND TP502 (R ch), GND	LC501 LC502	Adjust for -0.3 dB at 15 kHz and $>$ 35 dB at 19 kHz.

1. PRIMARY DECK SECTION

Step	Alignment	Instrument Required	Input Signal	Mode	Test Point
1	Quick sensor	VTVM Black tape (SCC-502)		PB	TP809
2	Azimuth	VTVM Oscilloscope Test tape (TCC-153)		PB	TP501 (L ch) TP502 (R ch)
3	Tape speed (Hi-speed)	Frequency counter Test tape (MTT-111DN)		PB	TP501 (L ch) TP502 (R ch)
4	Tape speed (Normal speed)	Frequency counter Test tape (MTT-111DN)		PB	TP501 (L ch) TP502 (R ch)
5	Playback output level	VTVM Test tape (TCC-130)		PB	TP501 (L ch) TP502 (R ch)
6	Playback frequency characteristic confirmation	VTVM Test tape (TCC-1216 or TCC-162C and TCC-262C)		PB	TP501 (L ch) TP502 (R ch)
7	Music Search	Oscilloscope Test tape (SCC-1425)		FORWARD SEARCH	TP601, GND
8	Blank Search	Oscilloscope Test tape (SCC-1425)		SEARCH PLAYBACK	TP601, GND
9	Bias frequency confirmation	Frequency counter Blank tape (SCC-565)		DUAL REC	TP101 (L ch) TP102 (R ch)
10	Bias trans.	Blank tape (SCC-565)		REC/PB	TP306, GND TP301, GND TP302, GND
11	Bias trap	VTVM Blank tape (SCC-565)		REC/PB	TP201 (L ch) TP202 (R ch)
12	Bias level (pre-adjustment)	VTVM Blank tapes METAL SCC-565 CrO ₂ SCC-1360 Normal SCC-502		REC/PB	TP101 (L ch) TP102 (R ch)
13	Record level (pre-adjustment)	VTVM Blank tapes METAL SCC-565 CrO ₂ SCC-1360 Normal SCC-502	Apply 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775 mV in REC-PAUSE mode.	REC/PB	TP501 (L ch) TP502 (R ch)
14	Record/playback frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502	Apply 1 kHz signal to INPUT jack. The output at TP501 and TP502 are Dolby level -25dB. Then adjust with a 20 Hz to 30 kHz sweep signal.	REC/PB	OUTPUT jack
15	Record level	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502	Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775 mV (1 kHz) in REC-PAUSE mode.	REC/PB	TP501 (L ch) TP502 (R ch)
16	Copy level	Test tape TCC-130 (Secondary) Blank tape SCC-1360 (Primary)		EDIT	OUTPUT
17	High speed copy frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502 Test tape TCC-185C		High Speed Copy Play	OUTPUT
18	High speed copy frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502 Test tape TCC-285C		High Speed Copy Play	OUTPUT
19	Meter level	VTVM	Apply 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 1.5 dB below 775 mV.	REC/PAUSE	PEAK LEVEL METER
20	MPX filter characteristic confirmation	VTVM	Apply 19 kHz, 15 kHz and 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775mV.	REC/PAUSE MPX filter ON	TP501 (L ch) TP502 (R ch)


 
	Test Point	Adjustment	For
	TP809	VR803	Adjust VR803 so the voltage at the test point is 0.62V or higher when the leader tape is running and 200 mV or less in the middle of tape.
	TP501 (L ch), GND TP502 (R ch), GND	Azimuth screw	Maximum output Refer to "Azimuth Adjustment" on page 6.
	TP501 (L ch), GND TP502 (R ch), GND	VR801	6020 Hz ± 20 Hz (TP806 : GND connection) Adjust at the center of test tape.
	TP501 (L ch), GND TP502 (R ch), GND	VR802	3010 Hz ± 10 Hz Adjust at the center of test tape.
	TP501 (L ch), GND TP502 (R ch), GND	VR101 (L ch) VR102 (R ch)	775 mV Tape selector is Normal position. Adjust at Dolby NR off.
	TP501 (L ch), GND TP502 (R ch), GND	VR103 VR104	Adjust VR103 and VR104 so the playback frequency response (1 kHz/18 kHz) is +0.6 ~ 0.7 dB. Refer to Fig. a.
RD H	TP601, GND	VR602	3.0 $\pm$ 0.05V To be adjusted at the beginning of tape winding. 
H ACK	TP601, GND	VR601	1.0V or higher To be measured at the low level part of SCC-1425 tape. 
	TP101 (L ch), GND TP102 (R ch), GND	T301	105 kHz ± 2 kHz Use METAL tape.
	TP306, GND TP301, GND (L ch) TP302, GND (R ch)	T302 L301 L302	Connect the oscilloscope to TP306 and GND and adjust T302 so that the waveform is maximum. Connect the oscilloscope to TP301 and GND, TP302 and GND and adjust L301, L302 so that the DC voltage is minimum.
	TP201 (L ch), GND TP202 (R ch), GND	LC201 LC202	Minimum output. Use METAL tape. INPUT VR. minimum
	TP101 (L ch), GND TP102 (R ch), GND	VR301 VR302	35 mV Test tape is METAL blank tape. Short-circuit R708 and JP699, R707 and JP700.
		VR305 VR306	20 mV Test tape is CrO ₂ blank tape. Short-circuit R708 and JP699, R707 and JP700.
		VR303 VR304	15 mV Test tape is Normal blank tape. Short-circuit R708 and JP699, R707 and JP700.
	TP501 (L ch), GND TP502 (R ch), GND	VR201, VR202 VR301 VR302	775 mV Test tape is METAL tape. Adjust variable resistors so that the distortion becomes 0.9% - 1.2%. (Mini. distortion)
		VR305 VR306 (CrO ₂)	775 mV Adjust variable resistors so that the distortion becomes 0.9% (CrO ₂).
		VR303 VR304 (Normal)	Adjust variable resistors so that the distortion becomes 0.8% (Normal). This confirmation should be at each tape selector position.
		VR305, VR306 LC201, LC202 (VR301, VR302)	So that the record/playback frequency response is flat (at least within the range in Fig. b.) Test tape is CrO ₂ tape.
	OUTPUT jack	VR301 VR302	So that the record/playback frequency response is flat (at least within the range in Fig. b.) Test tape is METAL tape.
		VR303, VR304 LC201, LC202 (VR301, VR302)	So that the record/playback frequency response is flat (at least within the range in Fig. b.) Test tape is Normal tape.
	TP501 (L ch), GND TP502 (R ch), GND	VR201 VR202	775 mV Perform adjustment using CrO ₂ . Perform checking only for Normal and METAL tapes.
	OUTPUT	VR551 VR552	Perform edit copy and adjust VR551 and VR552 so that the copy output (PLAY output) of PRI DECK is 775 mV.
peed lay	OUTPUT	L203, L204	Load TCC-185C in SEC DECK and SCC-565 in PRI DECK and execute high-speed copying, then play the tape in the PRI DECK. Check that the frequency response of the 14 kHz signal is within ± 3 dB of that of the 1 kHz signal. If this specification cannot be satisfied, adjust L203 and L204. After adjustment is confirmed, also use the SCC-502 and SCC-1360 tapes to check.
peed lay	OUTPUT	L203, L204	Load TCC-285C in SEC DECK and SCC-565 in PRI DECK and execute high-speed copying, then play the tape in the PRI DECK. Check that the frequency response of the 14 kHz signal is within ± 3 dB of that of the 1 kHz signal. If this specification cannot be satisfied, adjust L203 and L204. After adjustment is confirmed, also use the SCC-502 and SCC-1360 tapes to check.
AUSE	PEAK LEVEL METER	VR401 VR402	Adjust so the -1 dB segments light.
AUSE ter	TP501 (L ch), GND TP502 (R ch), GND	LC501 LC502	Adjust for -0.3 dB at 15 kHz and > 35 dB at 19 kHz.

2. SECONDARY DECK SECTION


Step	Alignment	Instrument Required	Input Signal	Mode	Test Point	Adjustment	For
1	Quick sensor	VTVM Black tape (SCC-502)		PB	TP859	VR853	Adjust VR853 so the voltage at the test point is 0.62V or higher when the leader tape is running and 200 mV or less in the middle of tape.
2	Azimuth	VTVM Oscilloscope Test tape (TCC-153)		PB	TP501 (L ch), GND TP502 (R ch), GND	Azimuth screw	Maximum output Refer to "Azimuth Adjustment" on page 6.
3	Tape speed (Hi-speed)	Frequency counter Test tape (MTT-111DN)		PB	TP501 (L ch), GND TP502 (R ch), GND	VR851	6020 Hz $\pm$ 20 Hz (TP856 : GND connection) Adjust at the center of test tape.
4	Tape speed (Normal speed)	Frequency counter Test tape (MTT-111DN)		PB	TP501 (L ch), GND TP502 (R ch), GND	VR852	3010 Hz $\pm$ 10 Hz Adjust at the center of test tape.
5	Playback output level	VTVM Test tape (TCC-130)		PB	TP501 (L ch), GND TP502 (R ch), GND	VR1101 (L ch) VR1102 (R ch)	775 mV Tape selector is Normal position. Adjust at Dolby NR off.
6	Playback frequency characteristic confirmation	VTVM Test tape (TCC-1216 or TCC-162C and TCC-262C)		PB	TP501 (L ch), GND TP502 (R ch), GND	VR1103 VR1104	Adjust VR1103 and VR1104 so the playback frequency response (1 kHz/18 kHz) is +0.6 ~ 0.7 dB. Refer to Fig. a.
7	Music Search	Oscilloscope Test tape (SCC-1425)		FORWARD SEARCH	TP601, GND	VR602	3.0 $\pm$ 0.05V To be adjusted at the beginning of tape winding.
8	Blank Search	Oscilloscope Test tape (SCC-1425)		SEARCH PLAYBACK	TP601, GND	VR601	1.0V or higher To be measured at the low level part of SCC-1425 tape.
9	Bias frequency confirmation	Frequency counter Blank tape (SCC-565)		DUAL REC	TP101 (L ch), GND TP102 (R ch), GND	T301	105 kHz $\pm$ 2 kHz Use METAL tape.
10	Bias trans.	Blank tape (SCC-565)		REC/PB	TP305, GND TP303, GND (L ch) TP304, GND (R ch)	T303 L303 L304	Connect the oscilloscope to TP305 and GND and adjust T303 so that the waveform is maximum. Connect the oscilloscope to TP303 and GND, TP304 and GND and adjust L303, L304 so that the DC voltage is minimum.
11	Bias trap	VTVM Blank tape (SCC-565)		REC/PB	TP203 (L ch), GND TP204 (R ch), GND	LC1201 LC1202	Minimum output. Use METAL tape. INPUT VR. minimum
12	Bias level (pre-adjustment)	VTVM Blank tapes METAL SCC-565 CrO ₂ SCC-1360 Normal SCC-502		REC/PB	TP1101 (L ch), GND TP1102 (R ch), GND	VR311 VR312	35 mV Test tape is METAL blank tape. Short-circuit R708 and JP699, R707 and JP700.
						VR315 VR316	20 mV Test tape is CrO ₂ blank tape. Short-circuit R708 and JP699, R707 and JP700.
						VR313 VR314	15 mV Test tape is Normal blank tape. Short-circuit R708 and JP699, R707 and JP700.
13	Record level (pre-adjustment)	VTVM Blank tapes METAL SCC-565 CrO ₂ SCC-1360 Normal SCC-502	Apply 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775 mV in REC-PAUSE mode.	REC/PB	TP501 (L ch), GND TP502 (R ch), GND	VR1201, VR1202 VR311 VR312	775 mV Test tape is METAL tape. Adjust variable resistors so that the distortion becomes 0.9% - 1.2%. (Mini. distortion)
						VR315 VR316 (CrO ₂) VR313 VR314 (Normal)	775 mV Adjust variable resistors so that the distortion becomes 0.9% (CrO ₂). Adjust variable resistors so that the distortion becomes 0.8% (Normal). This confirmation should be at each tape selector position.
						VR315, VR316 LC1201, LC1202 (VR311, VR312)	So that the record/playback frequency resportion is flat (at least within the range in Fig. b.) Test tape is CrO ₂ tape.
14	Record/playback frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502	Apply 1 kHz signal to INPUT jack. The output at TP501 and TP502 are Dolby level -25dB. Then adjust with a 20 Hz to 30 kHz sweep signal.	REC/PB	OUTPUT jack	VR311 VR312	So that the record/playback frequency resportion is flat (at least within the range in Fig. b.) Test tape is METAL tape.
						VR313, VR314 LC1201, LC1202 (VR311, VR312)	So that the record/playback frequency resportion is flat (at least within the range in Fig. b.) Test tape is Normal tape.
15	Record level	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502	Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775 mV (1 kHz) in REC-PAUSE mode.	REC/PB	TP501 (L ch), GND TP502 (R ch), GND	VR1201 VR1202	775 mV Perform adjustment using CrO ₂ . Perform checking only for Normal and METAL tapes.
16	Copy level	Test tape TCC-130 (Secondary) Blank tape SCC-1360 (Primary)		EDIT	OUTPUT	VR551 VR552	Perform edit copy and adjust VR551 and VR552 so that the copy output (PLAY output) of PRI DECK is 775 mV.
17	High speed copy frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502 Test tape TCC-185C		High Speed Copy Play	OUTPUT	L203, L204	Load TCC-185C in SEC DECK and SCC-565 in PRI DECK and execute high-speed copying, then play the tape in the PRI DECK. Check that the frequency response of the 14 kHz signal is within $\pm$ 3 dB of that of the 1 kHz signal. If this specification cannot be satisfied, adjust L203 and L204. After adjustment is confirmed, also use the SCC-502 and SCC-1360 tapes to check.
18	High speed copy frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502 Test tape TCC-285C		High Speed Copy Play	OUTPUT	L203, L204	Load TCC-285C in SEC DECK and SCC-565 in PRI DECK and execute high-speed copying, then play the tape in the PRI DECK. Check that the frequency response of the 14 kHz signal is within $\pm$ 3 dB of that of the 1 kHz signal. If this specification cannot be satisfied, adjust L203 and L204. After adjustment is confirmed, also use the SCC-502 and SCC-1360 tapes to check.
19	Meter level	VTVM	Apply 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 1.5 dB below 775 mV.	REC/PAUSE	PEAK LEVEL METER	VR401 VR402	Adjust so the -1 dB segments light.
20	MPX filter characteristic confirmation	VTVM	Apply 19 kHz, 15 kHz and 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775mV.	REC/PAUSE MPX filter ON	TP501 (L ch), GND TP502 (R ch), GND	LC501 LC502	Adjust for -0.3 dB at 15 kHz and > 35 dB at 19 kHz.

2. SECONDARY DECK SECTION


Step	Alignment	Instrument Required	Input Signal	Mode	Test Point
1	Quick sensor	VTVM Black tape (SCC-502)		PB	TP859
2	Azimuth	VTVM Oscilloscope Test tape (TCC-153)		PB	TP501 TP502
3	Tape speed (Hi-speed)	Frequency counter Test tape (MTT-111DN)		PB	TP501 TP502
4	Tape speed (Normal speed)	Frequency counter Test tape (MTT-111DN)		PB	TP501 TP502
5	Playback output level	VTVM Test tape (TCC-130)		PB	TP501 TP502
6	Playback frequency characteristic confirmation	VTVM Test tape (TCC-1216 or TCC-162C and TCC-262C)		PB	TP501 TP502
7	Music Search	Oscilloscope Test tape (SCC-1425)		FORWARD SEARCH	TP601
8	Blank Search	Oscilloscope Test tape (SCC-1425)		SEARCH PLAYBACK	TP601
9	Bias frequency confirmation	Frequency counter Blank tape (SCC-565)		DUAL REC	TP101 TP102
10	Bias trans.	Blank tape (SCC-565)		REC/PB	TP305 TP303 TP304
11	Bias trap	VTVM Blank tape (SCC-565)		REC/PB	TP203 TP204
12	Bias level (pre-adjustment)	VTVM Blank tapes METAL SCC-565 CrO ₂ SCC-1360 Normal SCC-502		REC/PB	TP110 TP110
13	Record level (pre-adjustment)	VTVM Blank tapes METAL SCC-565 CrO ₂ SCC-1360 Normal SCC-502	Apply 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775 mV in REC-PAUSE mode.	REC/PB	TP501 TP502
14	Record/playback frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502	Apply 1 kHz signal to INPUT jack. The output at TP501 and TP502 are Dolby level -25dB. Then adjust with a 20 Hz to 30 kHz sweep signal.	REC/PB	OUTP
15	Record level	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502	Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775 mV (1 kHz) in REC-PAUSE mode.	REC/PB	TP501 TP502
16	Copy level	Test tape TCC-130 (Secondary) Blank tape SCC-1360 (Primary)		EDIT	OUTP
17	High speed copy frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502 Test tape TCC-185C		High Speed Copy Play	OUTP
18	High speed copy frequency characteristic	VTVM Blank tapes CrO ₂ SCC-1360 METAL SCC-565 Normal SCC-502 Test tape TCC-285C		High Speed Copy Play	OUTP
19	Meter level	VTVM	Apply 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 1.5 dB below 775 mV.	REC/PAUSE	PEAK METER
20	MPX filter characteristic confirmation	VTVM	Apply 19 kHz, 15 kHz and 1 kHz signal to INPUT jack. Set INPUT LEVEL knob so that TP501 and TP502 to GND voltage is 775mV.	REC/PAUSE MPX filter ON	TP501 TP502

  Mode	Test Point	Adjustment	For
PB	TP859	VR853	Adjust VR853 so the voltage at the test point is 0.62V or higher when the leader tape is running and 200 mV or less in the middle of tape.
PB	TP501 (L ch), GND TP502 (R ch), GND	Azimuth screw	Maximum output Refer to "Azimuth Adjustment" on page 6.
PB	TP501 (L ch), GND TP502 (R ch), GND	VR851	6020 Hz ± 20 Hz (TP856 : GND connection) Adjust at the center of test tape.
PB	TP501 (L ch), GND TP502 (R ch), GND	VR852	3010 Hz ± 10 Hz Adjust at the center of test tape.
PB	TP501 (L ch), GND TP502 (R ch), GND	VR1101 (L ch) VR1102 (R ch)	775 mV Tape selector is Normal position. Adjust at Dolby NR off.
PB	TP501 (L ch), GND TP502 (R ch), GND	VR1103 VR1104	Adjust VR1103 and VR1104 so the playback frequency response (1 kHz/18 kHz) is $+0.6 \sim 0.7$ dB. Refer to Fig. a.
FORWARD SEARCH	TP601, GND	VR602	3.0 ± 0.05 V To be adjusted at the beginning of tape winding. 
SEARCH PLAYBACK	TP601, GND	VR601	1.0V or higher To be measured at the low level part of SCC-1425 tape. 
DUAL REC	TP101 (L ch), GND TP102 (R ch), GND	T301	105 kHz ± 2 kHz Use METAL tape.
REC/PB	TP305, GND TP303, GND (L ch) TP304, GND (R ch)	T303 L303 L304	Connect the oscilloscope to TP305 and GND and adjust T303 so that the waveform is maximum. Connect the oscilloscope to TP303 and GND, TP304 and GND and adjust L303, L304 so that the DC voltage is minimum.
REC/PB	TP203 (L ch), GND TP204 (R ch), GND	LC1201 LC1202	Minimum output. Use METAL tape. INPUT VR. minimum
REC/PB	TP1101 (L ch), GND TP1102 (R ch), GND	VR311 VR312	35 mV Test tape is METAL blank tape. Short-circuit R708 and JP699, R707 and JP700.
		VR315 VR316	20 mV Test tape is CrO ₂ blank tape. Short-circuit R708 and JP699, R707 and JP700.
		VR313 VR314	15 mV Test tape is Normal blank tape. Short-circuit R708 and JP699, R707 and JP700.
REC/PB	TP501 (L ch), GND TP502 (R ch), GND	VR1201, VR1202 VR311 VR312	775 mV Test tape is METAL tape. Adjust variable resistors so that the distortion becomes 0.9% - 1.2%. (Mini. distortion)
		VR315 VR316 (CrO ₂)	775 mV Adjust variable resistors so that the distortion becomes 0.9% (CrO ₂).
		VR313 VR314 (Normal)	Adjust variable resistors so that the distortion becomes 0.8% (Normal). This confirmation should be at each tape selector position.
REC/PB	OUTPUT jack	VR315, VR316 LC1201, LC1202 (VR311, VR312)	So that the record/playback frequency response is flat (at least within the range in Fig. b.) Test tape is CrO ₂ tape.
		VR311 VR312	So that the record/playback frequency response is flat (at least within the range in Fig. b.) Test tape is METAL tape.
		VR313, VR314 LC1201, LC1202 (VR311, VR312)	So that the record/playback frequency response is flat (at least within the range in Fig. b.) Test tape is Normal tape.
REC/PB	TP501 (L ch), GND TP502 (R ch), GND	VR1201 VR1202	775 mV Perform adjustment using CrO ₂ . Perform checking only for Normal and METAL tapes.
EDIT	OUTPUT	VR551 VR552	Perform edit copy and adjust VR551 and VR552 so that the copy output (PLAY output) of PRI DECK is 775 mV.
High Speed Copy Play	OUTPUT	L203, L204	Load TCC-185C in SEC DECK and SCC-565 in PRI DECK and execute high-speed copying, then play the tape in the PRI DECK. Check that the frequency response of the 14 kHz signal is within ± 3 dB of that of the 1 kHz signal. If this specification cannot be satisfied, adjust L203 and L204. After adjustment is confirmed, also use the SCC-502 and SCC-1360 tapes to check.
High Speed Copy Play	OUTPUT	L203, L204	Load TCC-285C in SEC DECK and SCC-565 in PRI DECK and execute high-speed copying, then play the tape in the PRI DECK. Check that the frequency response of the 14 kHz signal is within ± 3 dB of that of the 1 kHz signal. If this specification cannot be satisfied, adjust L203 and L204. After adjustment is confirmed, also use the SCC-502 and SCC-1360 tapes to check.
REC/PAUSE	PEAK LEVEL METER	VR401 VR402	Adjust so the -1 dB segments light.
REC/PAUSE MPX filter ON	TP501 (L ch), GND TP502 (R ch), GND	LC501 LC502	Adjust for -0.3 dB at 15 kHz and > 35 dB at 19 kHz.


LEAD WIRES STYLING DIAGRAM

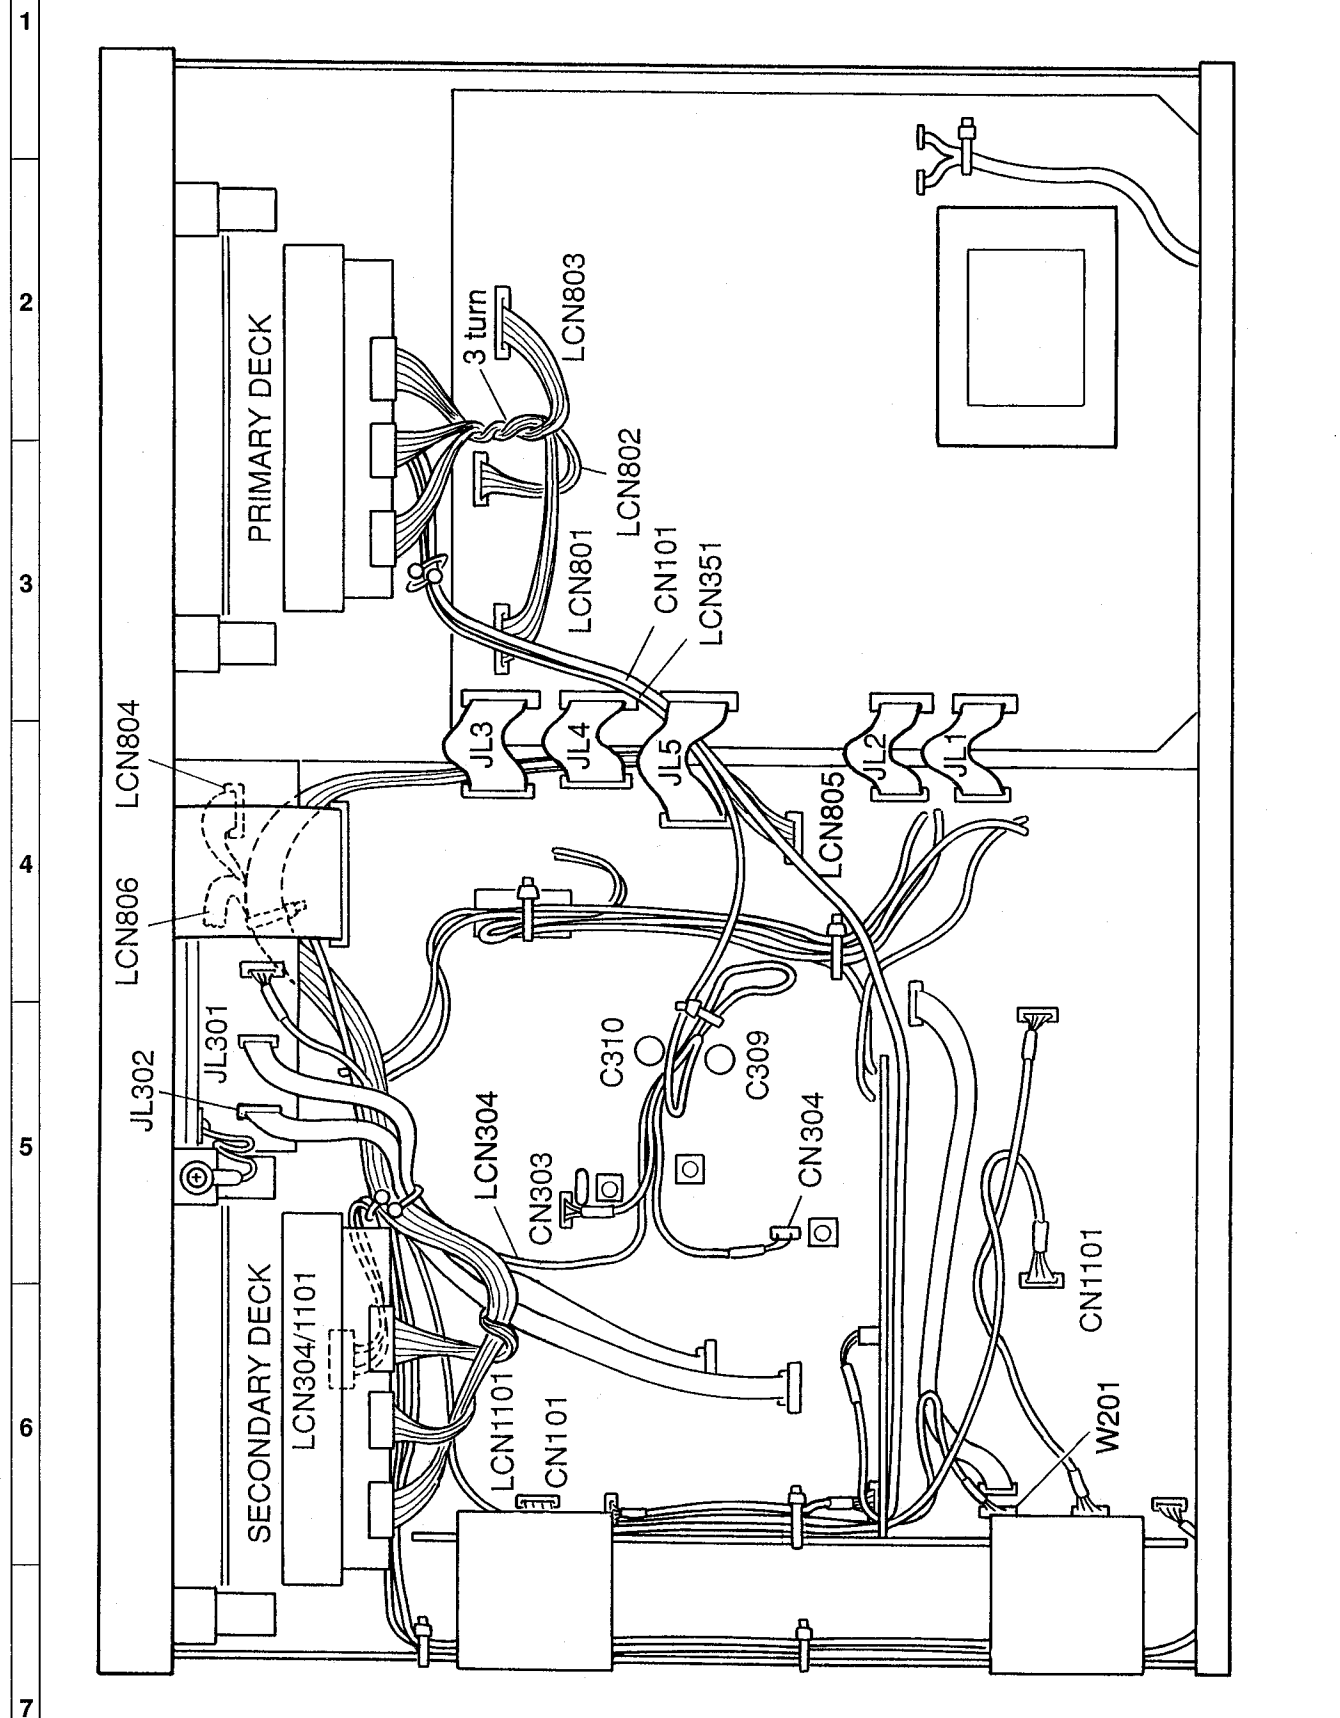


BLOCK DIAGRAM

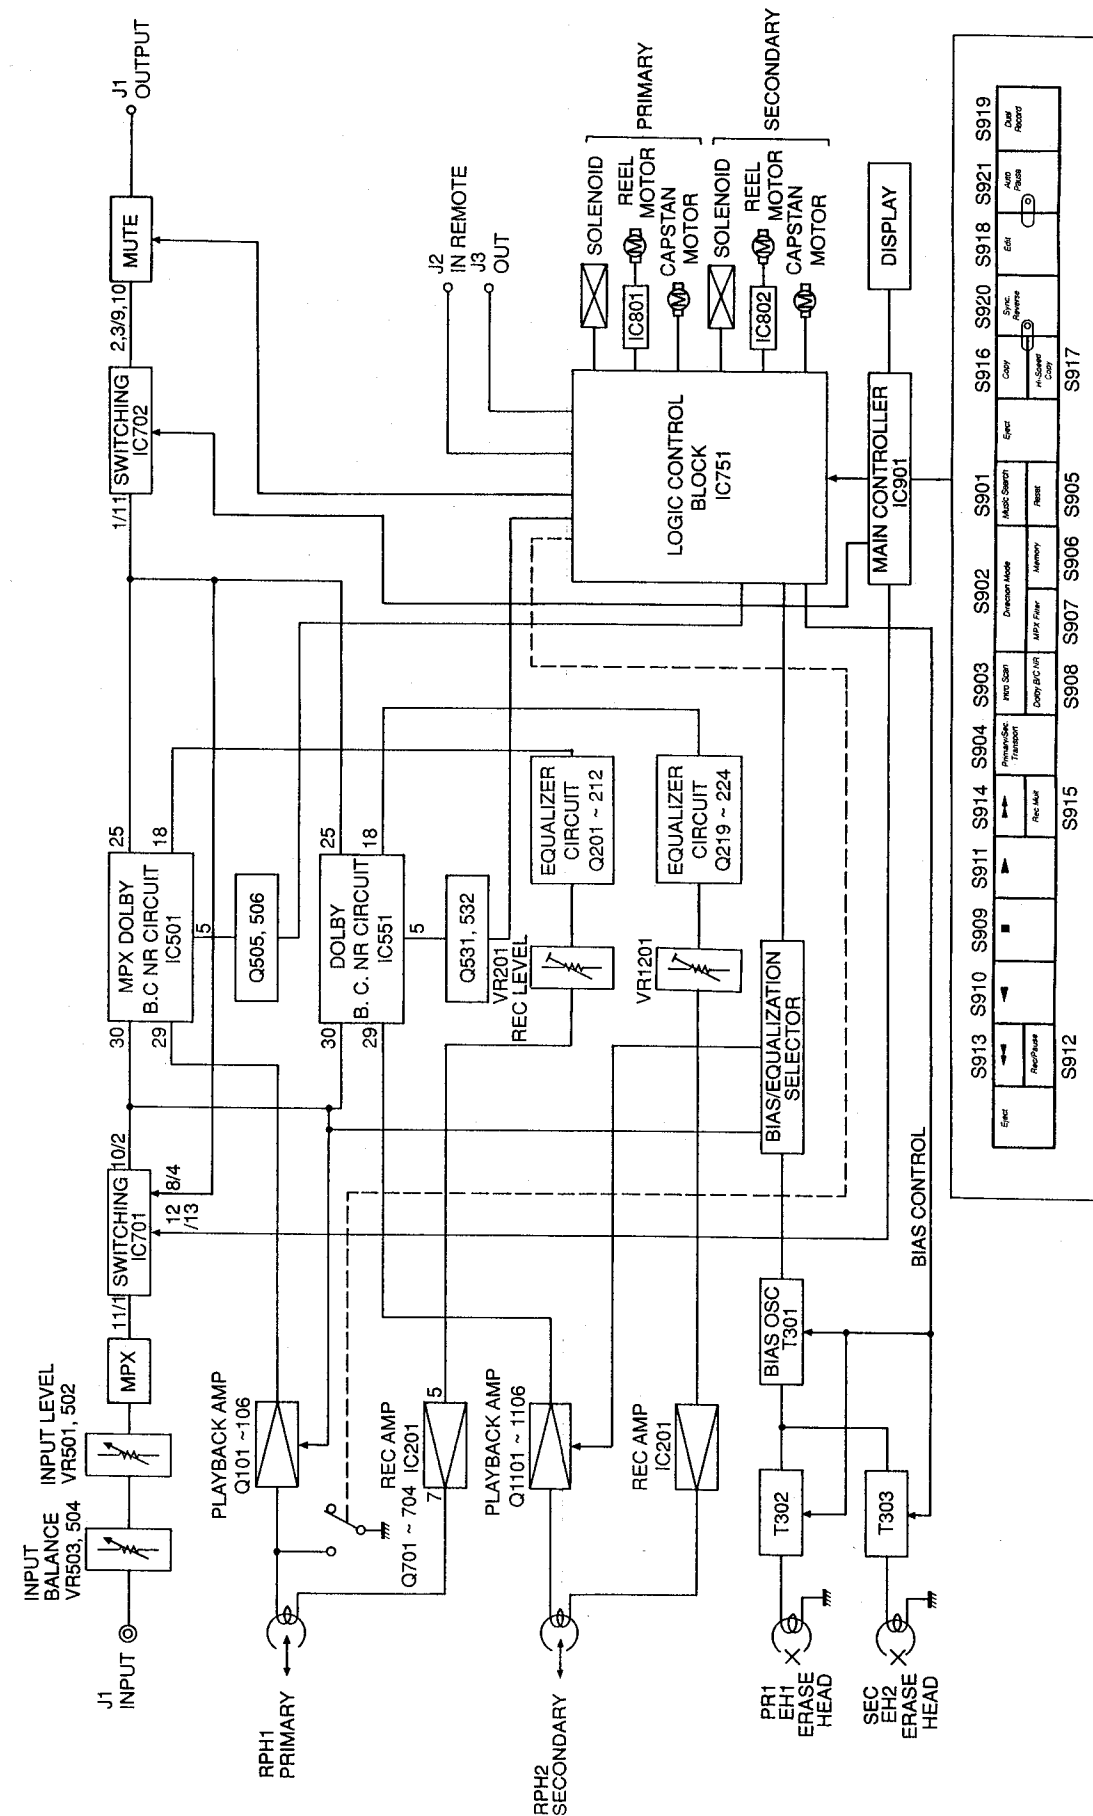


LEAD WIRES STYLING DIAGRAM

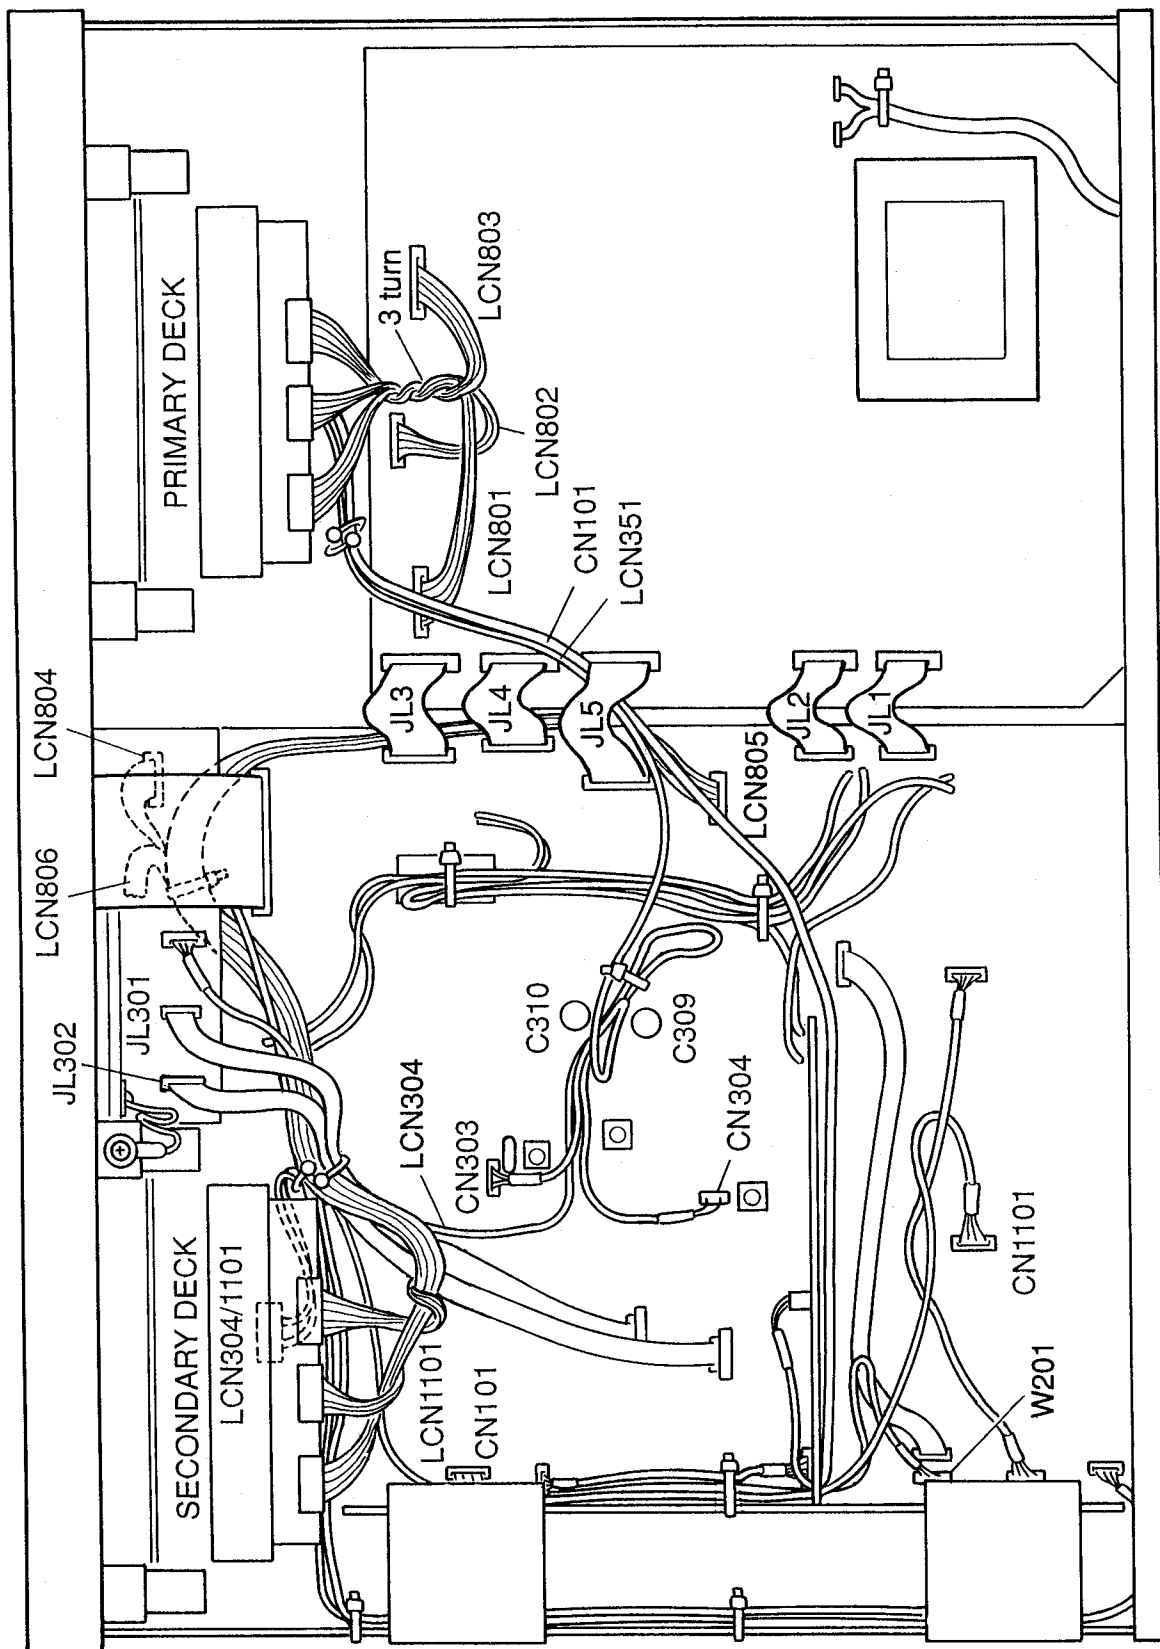

BLOCK DIAGRAM

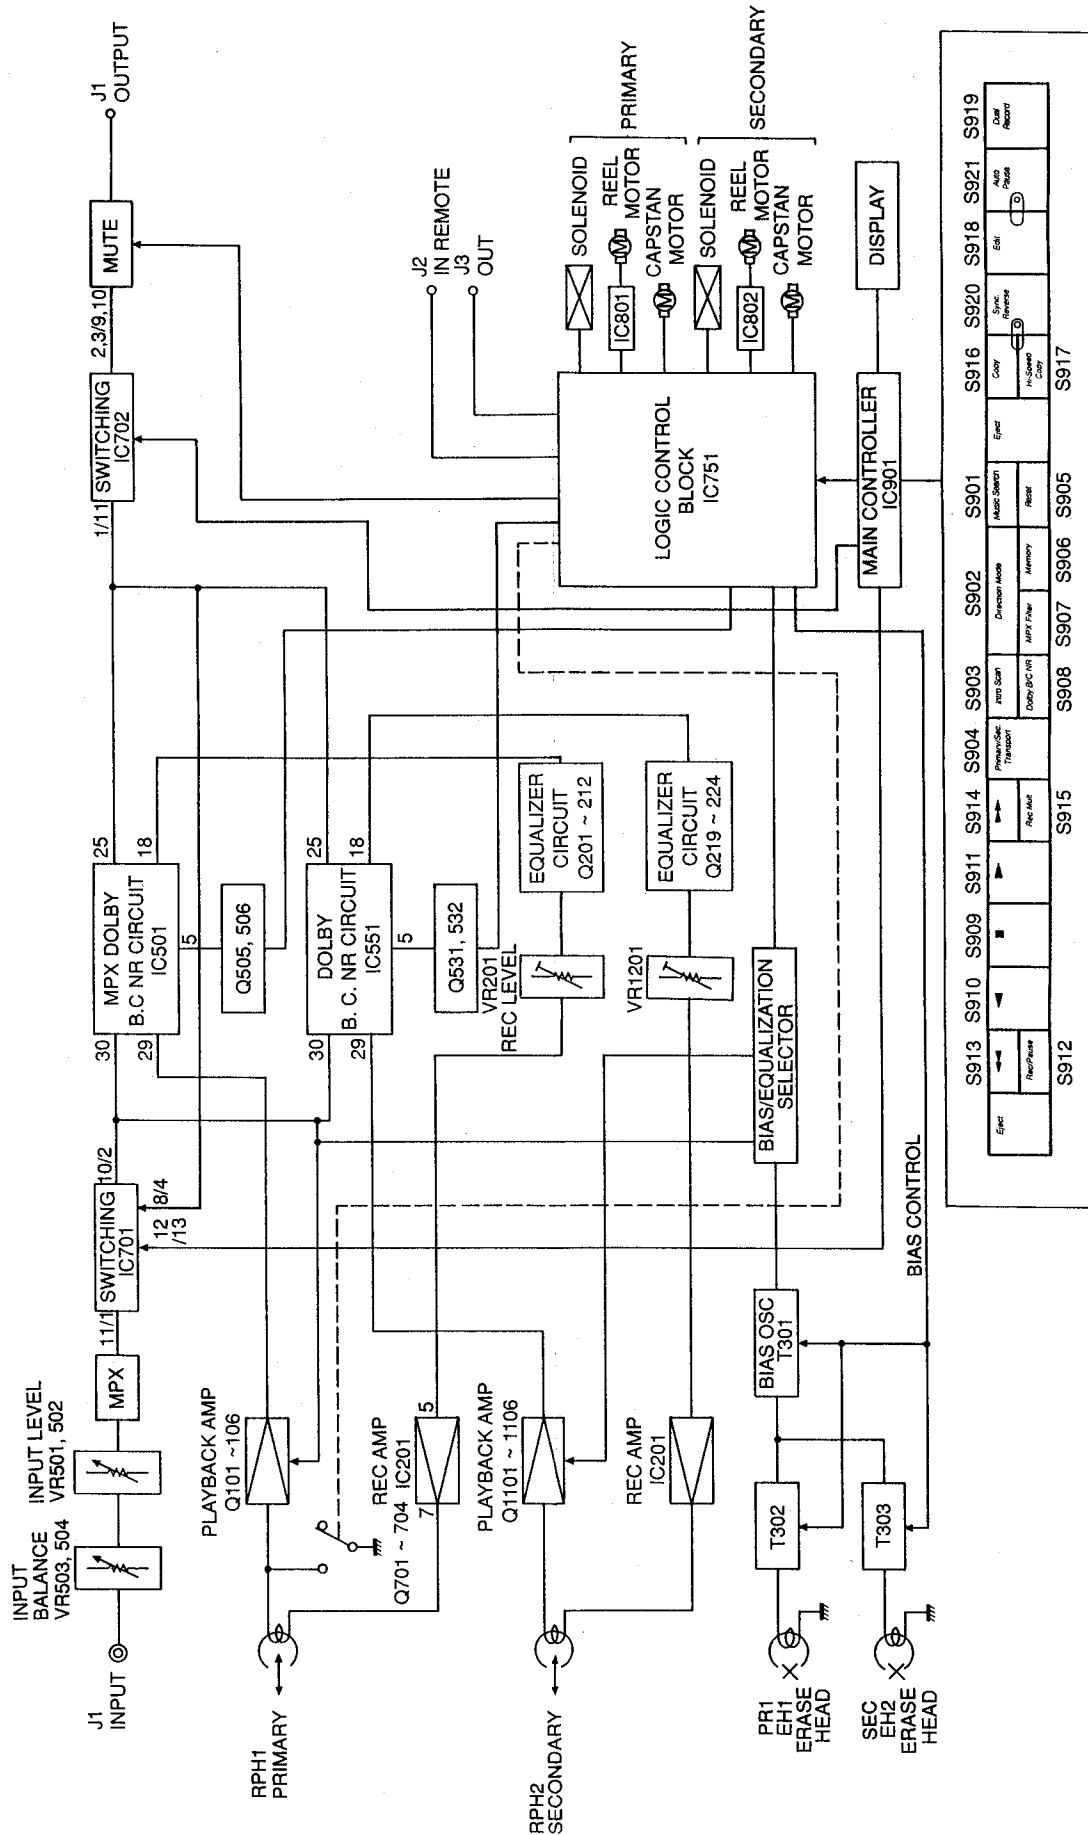

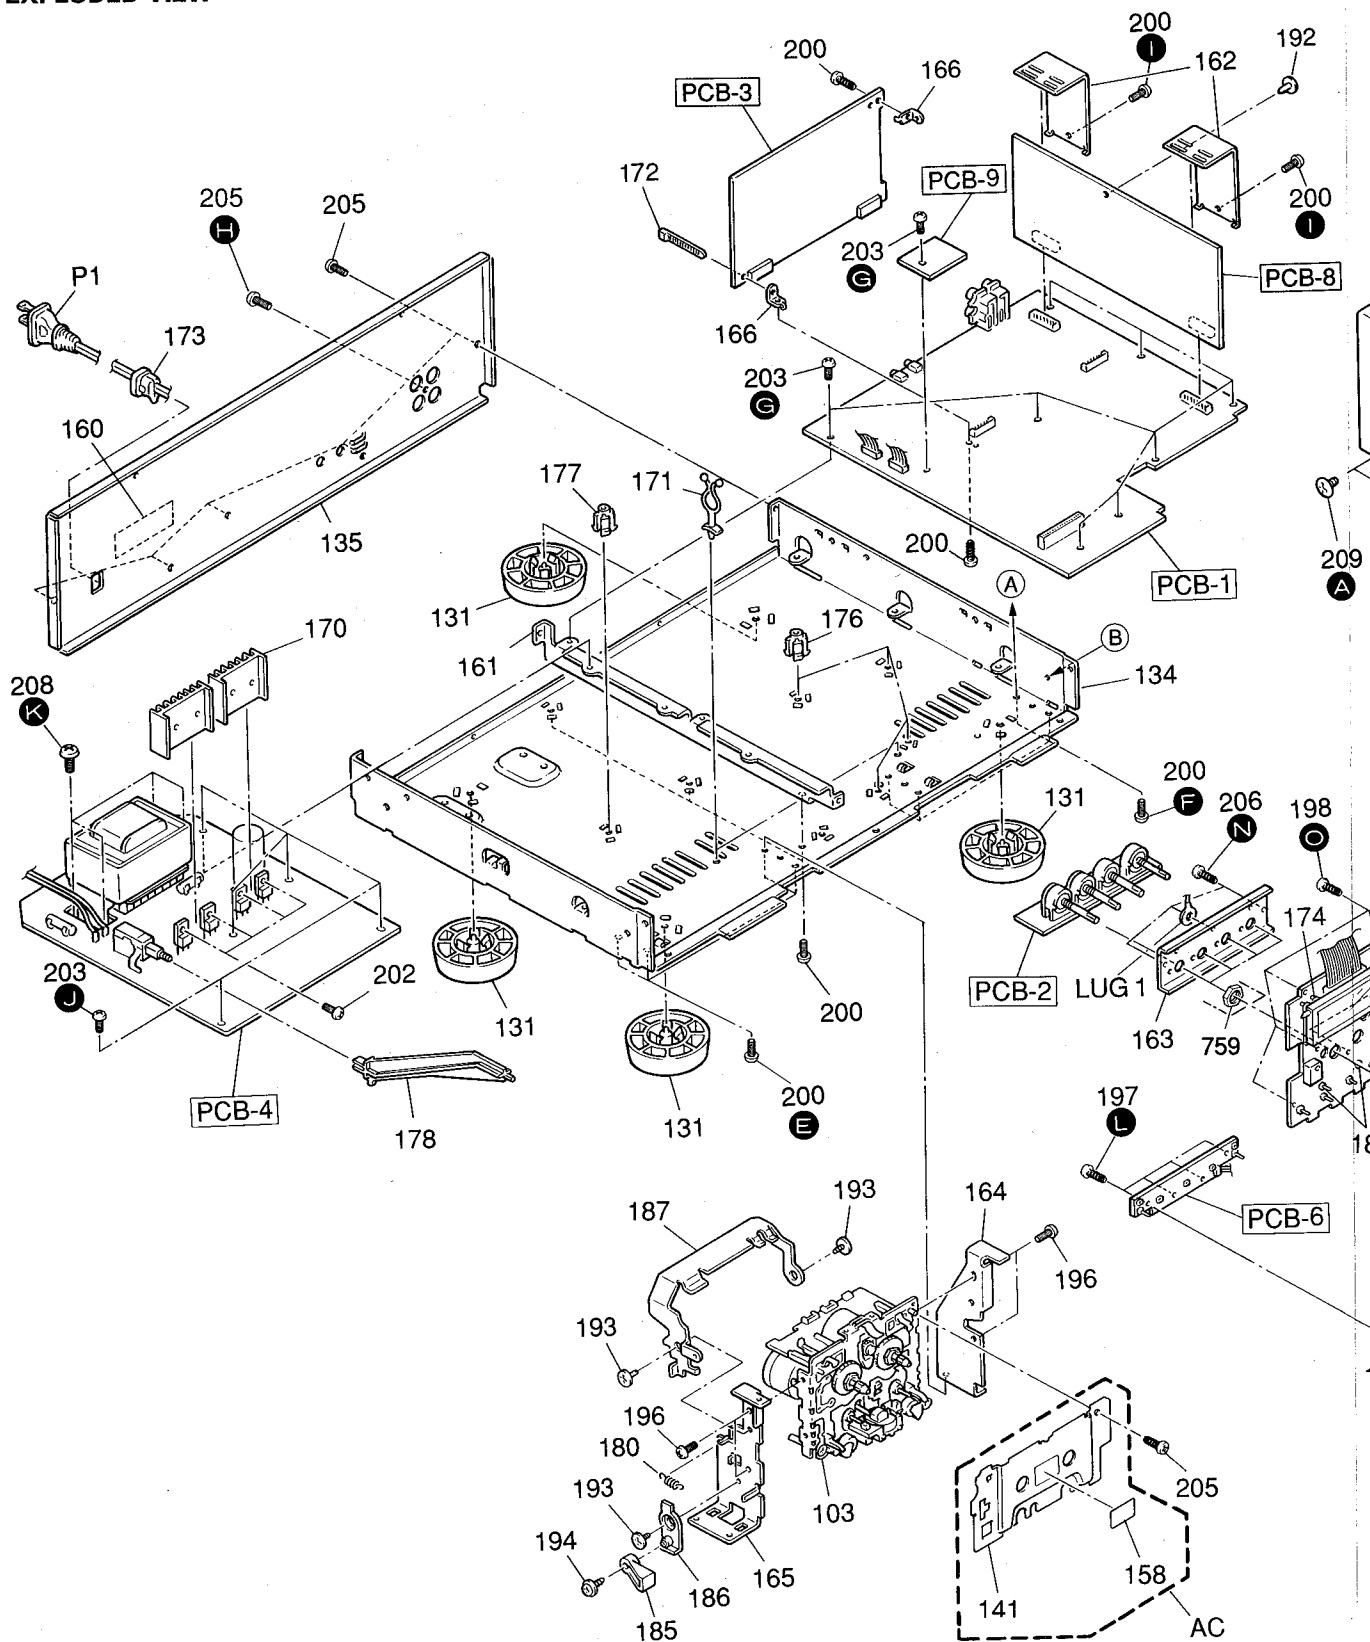**GENERAL UNIT
EXPLODED VIEW**


F

G

H

I

J

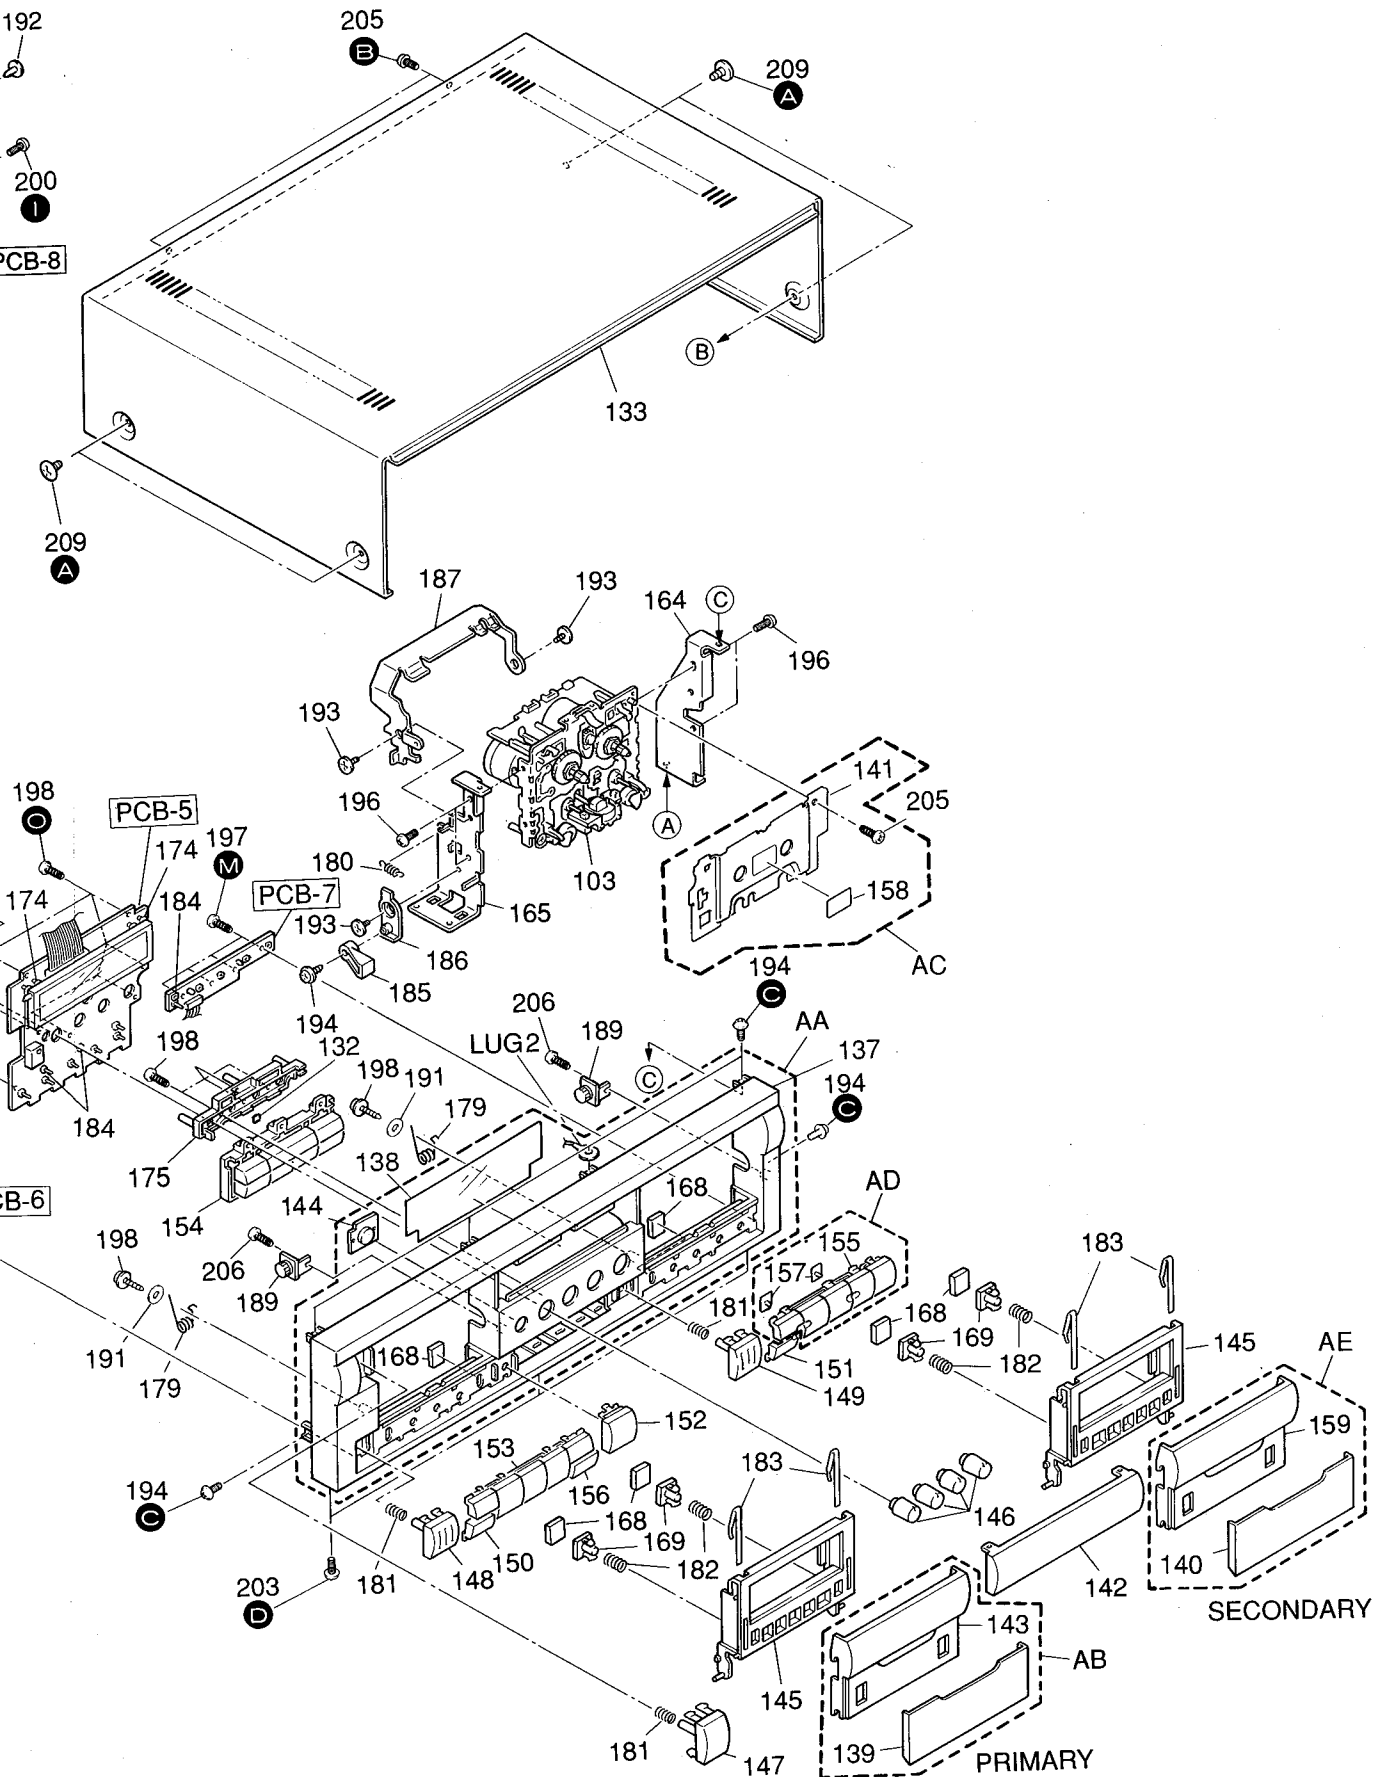


GENERAL UNIT PARTS LIST

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
AA	A442-DC5700B	FRONT PANEL ASSEMBLY	165	2219-8326	METAL FITTG, MECHA L (x2)
AB	A532-DC5700B	WINDOW ASSEMBLY (PRI)	166	2219-8345	METAL FITTG, DOLBY PCB (x2)
AC	A514-DC5700A	PLATE ASSEMBLY, MECHA	168	2114-87143	BUSHING (x6)
AD	A662-DC5700B	PUSH BUTTON ASSEMBLY	169	2240-7371	HOLDER (x4)
AE	A532-DC5700E	WINDOW ASSEMBLY (SEC)	170	2222-7281	HEAT SINK (x2)
103	3112-15905	MECHA ASSEMBLY, PRI AND SEC (REC/PLAY) (x2)	171	2240-7050	HOLDER (x2)
131	1319-03301	LEG (x4)	172	2240-R0101	HOLDER (x9)
132	1751-19702	LABEL	173	2240-364	HOLDER, AC CORD
133	1414-16701	TOP COVER	174	2240-7387	HOLDER, FL (x2)
134	1424-34201	CABINET BOTTOM	175	2240-7391	HOLDER, VR HOLD
135	1424-34303	CABI BACK (BK)	176	2360-7022	BOSS, SPE (x4)
135	1424-34306	CABI BACK (IB)	177	2360-7063	BOSS, SPE
137	1442-26803	PANEL, FRONT	178	2601-7199	SHAFT
138	1511-22101	PANEL, DISPLAY	179	2651-059	SPRING, LID EJECT (x2)
139	1512-07507	PLATE, CASS. LID (PRI)	180	2651-11212	SPRING, LEVER (x2)
140	1512-07502	PLATE, CASS. LID (SEC)	181	2651-2101732	SPRING (x3)
141	1514-23501	PLATE, MECHA (x2)	182	2651-2101735	SPRING (x4)
142	1532-20901	WINDOW, DISPLAY	183	2652-105	LEAF SPRING (x4)
143	1532-21001	WINDOW, CASS. LID (PRI)	184	2132-413	SPACER (x3)
144	1532-21101	WINDOW, REMOTE	185	2672-7051	LEVER (x2)
145	1612-07801	CASS LID (x2)	186	2672-7052	LEVER (x2)
146	1632-20401	ROTARY KNOB (x4)	187	2672-7053	LEVER (x2)
147	1662-58401	PUSH BUTTON, POWER	189	2692-015	DAMPER (x2)
148	1662-65001	PUSH BUTTON, EJECT L	191	2401-0216	WASHER, METAL (x2)
149	1662-65101	PUSH BUTTON, EJECT R	192	2459-3004511	RIVET, PLASTIC
150	1662-65201	PUSH BUTTON, REC/PAUSE	193	2320-044	SCREW, SPE+ (x6)
151	1662-65301	PUSH BUTTON, HIGH SPEED COPY	194	2340-7009	SCREW, SPE T+ (x8)
152	1662-65401	PUSH BUTTON, TRANSPORT	196	2347-260527	SCREW, BND T+ (2.6x5mm) (x8)
153	1662-65501	PUSH BUTTON, CASS. L	197	2347-260626	SCREW, BND T+ (2.6x6mm) (x8)
154	1662-65801	PUSH BUTTON, CENTER	198	2347-R0126122	SCREW, BND T+ (2.6x12mm) (x13)
155	1662-66001	PUSH BUTTON, CASS. R	200	2347-R0130062	SCREW, BND T+ (3x6mm) (x15)
156	1662-66301	PUSH BUTTON, REC MUTE	202	2347-R0130082	SCREW, BND T+ (3x8mm) (x4)
157	1732-08201	INDICATOR (x2)	203	2347-R0130082	SCREW, BND T+ (3x8mm) (x17)
158	1741-01601	ORNAMENT (x2)	205	2347-R0130084	SCREW, BND T+ (3x8mm) (x10)
159	1532-21001	WINDOW, CASS. LID (SEC)	206	2347-R0130122	SCREW, BND T+ (3x12mm) (x5)
160	1756-CSA	LABEL (BK)	208	2347-R0140062	SCREW, BND T+ (4x6mm) (x4)
161	2219-8293	METAL FITTG, CENTER PCB	209	2347-R0140064	SCREW, BND T+ (4x6mm) (x4)
162	2219-8323	METAL FITTG, DOLBY PCB (x2)	759	2440-62	SPECIAL NUT (x4)
163	2219-8324	METAL FITTG, VR HOLD	△ P1	4161-71151	CORD W/PLUG (BK)
164	2219-8325	METAL FITTG, MECHA R (x2)	△ P1	4161-7256	CORD W/PLUG (IB)

NOTE:

△ SAFETY RELATED COMPONENT. USE ONLY EXACT REPLACEMENT PART AS SPECIFIED.

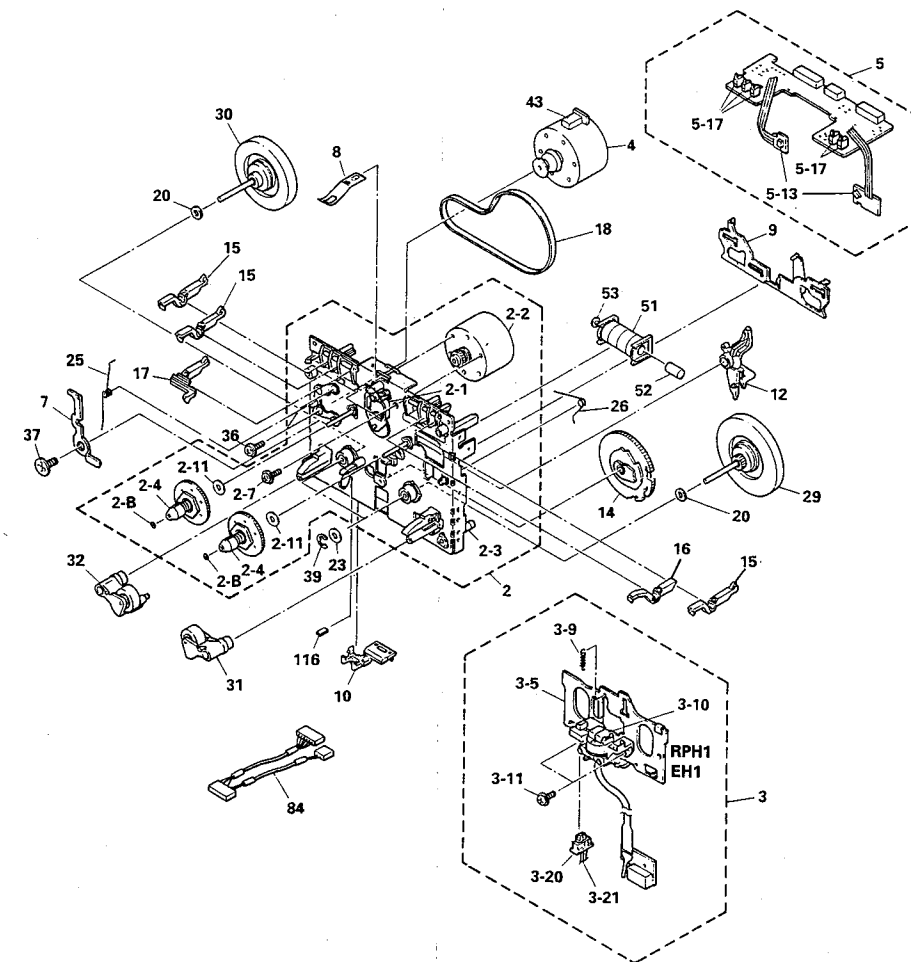CASSETTE TAPE RECORDER MECHANISM
EXPLODED VIEW

PARTS LIST

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
2	F511-496	XPORT CHASSIS (EXCL HEAD)	12	FD45G-12	PLAY ARM
2-1	F517-049	IDLER BLK	14	FD45B-15	CAM GEAR (3R)
2-2	F564-280	MTR REEL BLK	15	FD44T-14	SWITCH ARM, REC
2-3	F612-168	CHASSIS BASE BLK	16	FD44Y-12	SWITCH ARM(R), PACK
2-4	F623-037	REEL BASE BLK	17	FD44V-12	SWITCH ARM(L), METAL
2-7	FG156-11A	SCREW 2.6x6.4 ZN	18	FF17G-21, 31	MAIN BELT
2-8	FJ111-17	WASHER 1.7x0.25	20	FJ111-30	WASHER 2.6x0.25
2-11	UJ12V-11	WASHER 2.1x0.25T	23	FJ111-14	WASHER 2.6x0.5
3	F513-538	PLATE HD BLK	25	FK28M-15	EJECT PREVENTION SPRING (L)
3-5	FC52E-36	HEAD BASE	26	FK28R-11	SLIDE SPRING
3-9	FK26N-14	HB SP	29	FR23B-11	FLYWHEEL ASS'Y (ZDC)
3-10	FU18D-61	HADKH5725B R/P HEAD	30	FR22K-13	FLYWHEEL ASS'Y (RVS)
3-11	UG19D-11	SCREW TT 2.0x5 ZN	31	FR20L-21A	PINCH ROLLER ASS'Y(R)
3-20	AZ13P-00	SPI-320BC	32	FR20M-22	PINCH ROLLER ASS'Y(L)
3-21	WG50M-03A	QS LEAD WIRE	36	FG114-14	SCREW 2.6x5 ZN
4	F525-256	MTR MAIN BLK	37	UG15S-11A	SCREW
5	F567-404	PCB CONTROL BLK	39	UG13U-15	E RING
5-1	F743-085	PCB BASE BLK	43	FF17C-12	HOLDER CUSHION(L)
5-13	AZ15S-00	GP2S04B	51	F765-263	SOLENOID BLK
5-17	UE16E-11	PUSH SWITCH	52	FL39H-12A	FIXED BAR
7	FC39L-70	EJECT PREVENTION ARM(L)	53	FL39K-12	PLANGER
8	FC52H-12	SPRING CASSETTE	84	WH52P-66	WIRE CONNECTOR (R/P)
9	FC52F-15	SLIDE PLATE	116	UT11R-11	REFLECTION PLATE
10	FD45H-15	LEAD HOLDER			

GENERAL UNIT PARTS LIST


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
AA	A442-DC5700B	FRONT PANEL ASSEMBLY	165	2219-8326	METAL FITTG, MECHA L (x2)
AB	A532-DC5700B	WINDOW ASSEMBLY (PRI)	166	2219-8345	METAL FITTG, DOLBY PCB (x2)
AC	A514-DC5700A	PLATE ASSEMBLY, MECHA	168	2114-87143	BUSHING (x6)
AD	A662-DC5700B	PUSH BUTTON ASSEMBLY	169	2240-7371	HOLDER (x4)
AE	A532-DC5700E	WINDOW ASSEMBLY (SEC)	170	2222-7281	HEAT SINK (x2)
103	3112-15905	MECHA ASSEMBLY, PRI AND SEC (REC/PLAY) (x2)	171	2240-7050	HOLDER (x2)
131	1319-03301	LEG (x4)	172	2240-R0101	HOLDER (x9)
132	1751-19702	LABEL	173	2240-364	HOLDER, AC CORD
133	1414-16701	TOP COVER	174	2240-7387	HOLDER, FL (x2)
134	1424-34201	CABINET BOTTOM	175	2240-7391	HOLDER, VR HOLD
135	1424-34303	CABI BACK BK	176	2360-7022	BOSS, SPE (x4)
135	1424-34306	CABI BACK IB	177	2360-7063	BOSS, SPE
137	1442-26803	PANEL, FRONT	178	2601-7199	SHAFT
138	1511-22101	PANEL, DISPLAY	179	2651-059	SPRING, LID EJECT (x2)
139	1512-07507	PLATE, CASS. LID (PRI)	180	2651-11212	SPRING, LEVER (x2)
140	1512-07502	PLATE, CASS. LID (SEC)	181	2651-2101732	SPRING (x3)
141	1514-23501	PLATE, MECHA (x2)	182	2651-2101735	SPRING (x4)
142	1532-20901	WINDOW, DISPLAY	183	2652-105	LEAF SPRING (x4)
143	1532-21001	WINDOW, CASS. LID (PRI)	184	2132-413	SPACER (x3)
144	1532-21101	WINDOW, REMOTE	185	2672-7051	LEVER (x2)
145	1612-07801	CASS LID (x2)	186	2672-7052	LEVER (x2)
146	1632-20401	ROTARY KNOB (x4)	187	2672-7053	LEVER (x2)
147	1662-58401	PUSH BUTTON, POWER	189	2692-015	DAMPER (x2)
148	1662-65001	PUSH BUTTON, EJECT L	191	2401-0216	WASHER, METAL (x2)
149	1662-65101	PUSH BUTTON, EJECT R	192	2459-3004511	RIVET, PLASTIC
150	1662-65201	PUSH BUTTON, REC/PAUSE	193	2320-044	SCREW, SPE+ (x6)
151	1662-65301	PUSH BUTTON, HIGH SPEED COPY	194	2340-7009	SCREW, SPE T+ (x8)
152	1662-65401	PUSH BUTTON, TRANSPORT	196	2347-260527	SCREW, BND T+ (2.6x5mm) (x8)
153	1662-65501	PUSH BUTTON, CASS. L	197	2347-260626	SCREW, BND T+ (2.6x6mm) (x8)
154	1662-65801	PUSH BUTTON, CENTER	198	2347-R0126122	SCREW, BND T+ (2.6x12mm) (x13)
155	1662-66001	PUSH BUTTON, CASS. R	200	2347-R0130062	SCREW, BND T+ (3x6mm) (x15)
156	1662-66301	PUSH BUTTON, REC MUTE	202	2347-R0130082	SCREW, BND T+ (3x8mm) (x4)
157	1732-08201	INDICATOR (x2)	203	2347-R0130082	SCREW, BND T+ (3x8mm) (x17)
158	1741-01601	ORNAMENT (x2)	205	2347-R0130084	SCREW, BND T+ (3x8mm) (x10)
159	1532-21001	WINDOW, CASS. LID (SEC)	206	2347-R0130122	SCREW, BND T+ (3x12mm) (x5)
160	1756-CSA	LABEL BK	208	2347-R0140062	SCREW, BND T+ (4x6mm) (x4)
161	2219-8293	METAL FITTG, CENTER PCB	209	2347-R0140064	SCREW, BND T+ (4x6mm) (x4)
162	2219-8323	METAL FITTG, DOLBY PCB (x2)	759	2440-62	SPECIAL NUT (x4)
163	2219-8324	METAL FITTG, VR HOLD	△ P1	4161-71151	CORD W/PLUG BK
164	2219-8325	METAL FITTG, MECHA R (x2)	△ P1	4161-7256	CORD W/PLUG IB

NOTE:




SAFETY RELATED COMPONENT. USE ONLY EXACT REPLACEMENT PART AS SPECIFIED.

CASSETTE TAPE RECORDER MECHANISM **EXPLODED VIEW**

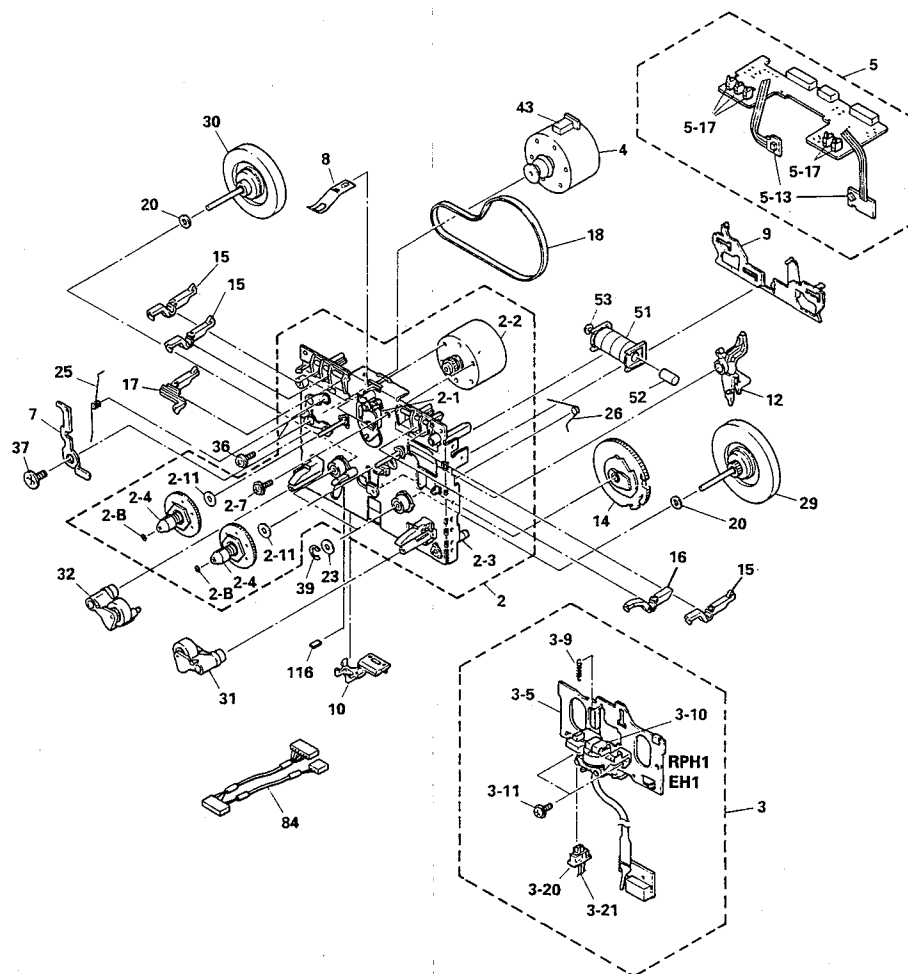

PARTS LIST

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
2	F511-496	XPORT CHASSIS (EXCL HEAD)	12	FD45G-12	PLAY ARM
2-1	F517-049	IDLER BLK	14	FD45B-15	CAM GEAR (3R)
2-2	F564-280	MTR REEL BLK	15	FD44T-14	SWITCH ARM, REC
2-3	F612-168	CHASSIS BASE BLK	16	FD44Y-12	SWITCH ARM(R), PACK
2-4	F623-037	REEL BASE BLK	17	FD44V-12	SWITCH ARM(L), METAL
2-7	FG156-11A	SCREW 2.6x6.4 ZN	18	FF17G-21, 31	MAIN BELT
2-8	FJ111-17	WASHER 1.7x0.25	20	FJ111-30	WASHER 2.6x0.25
2-11	UJ12V-11	WASHER 2.1x0.25T	23	FJ111-14	WASHER 2.6x0.5
3	F513-538	PLATE HD BLK	25	FK28M-15	EJECT PREVENTION SPRING (L)
3-5	FC52E-36	HEAD BASE	26	FK28R-11	SLIDE SPRING
3-9	FK26N-14	HB SP	29	FR23B-11	FLYWHEEL ASS'Y (ZDC)
3-10	FU18D-61	HADKH5725B R/P HEAD	30	FR22K-13	FLYWHEEL ASS'Y (RVS)
3-11	UG19D-11	SCREW TT 2.0x5 ZN	31	FR20L-21A	PINCH ROLLER ASS'Y(R)
3-20	AZ13P-00	SPI-320BC	32	FR20M-22	PINCH ROLLER ASS'Y(L)
3-21	WG50M-03A	QS LEAD WIRE	36	FG114-14	SCREW 2.6x5 ZN
4	F525-256	MTR MAIN BLK	37	UG15S-11A	SCREW
5	F567-404	PCB CONTROL BLK	39	UG13U-15	E RING
5-1	F743-085	PCB BASE BLK	43	FF17C-12	HOLDER CUSHION(L)
5-13	AZ15S-00	GP2S04B	51	F765-263	SOLENOID BLK
5-17	UE16E-11	PUSH SWITCH	52	FL39H-12A	FIXED BAR
7	FC39L-70	EJECT PREVENTION ARM(L)	53	FL39K-12	PLANGER
8	FC52H-12	SPRING CASSETTE	84	WH52P-66	WIRE CONNECTOR (R/P)
9	FC52F-15	SLIDE PLATE	116	UT11R-11	REFLECTION PLATE
10	FD45H-15	LEAD HOLDER			

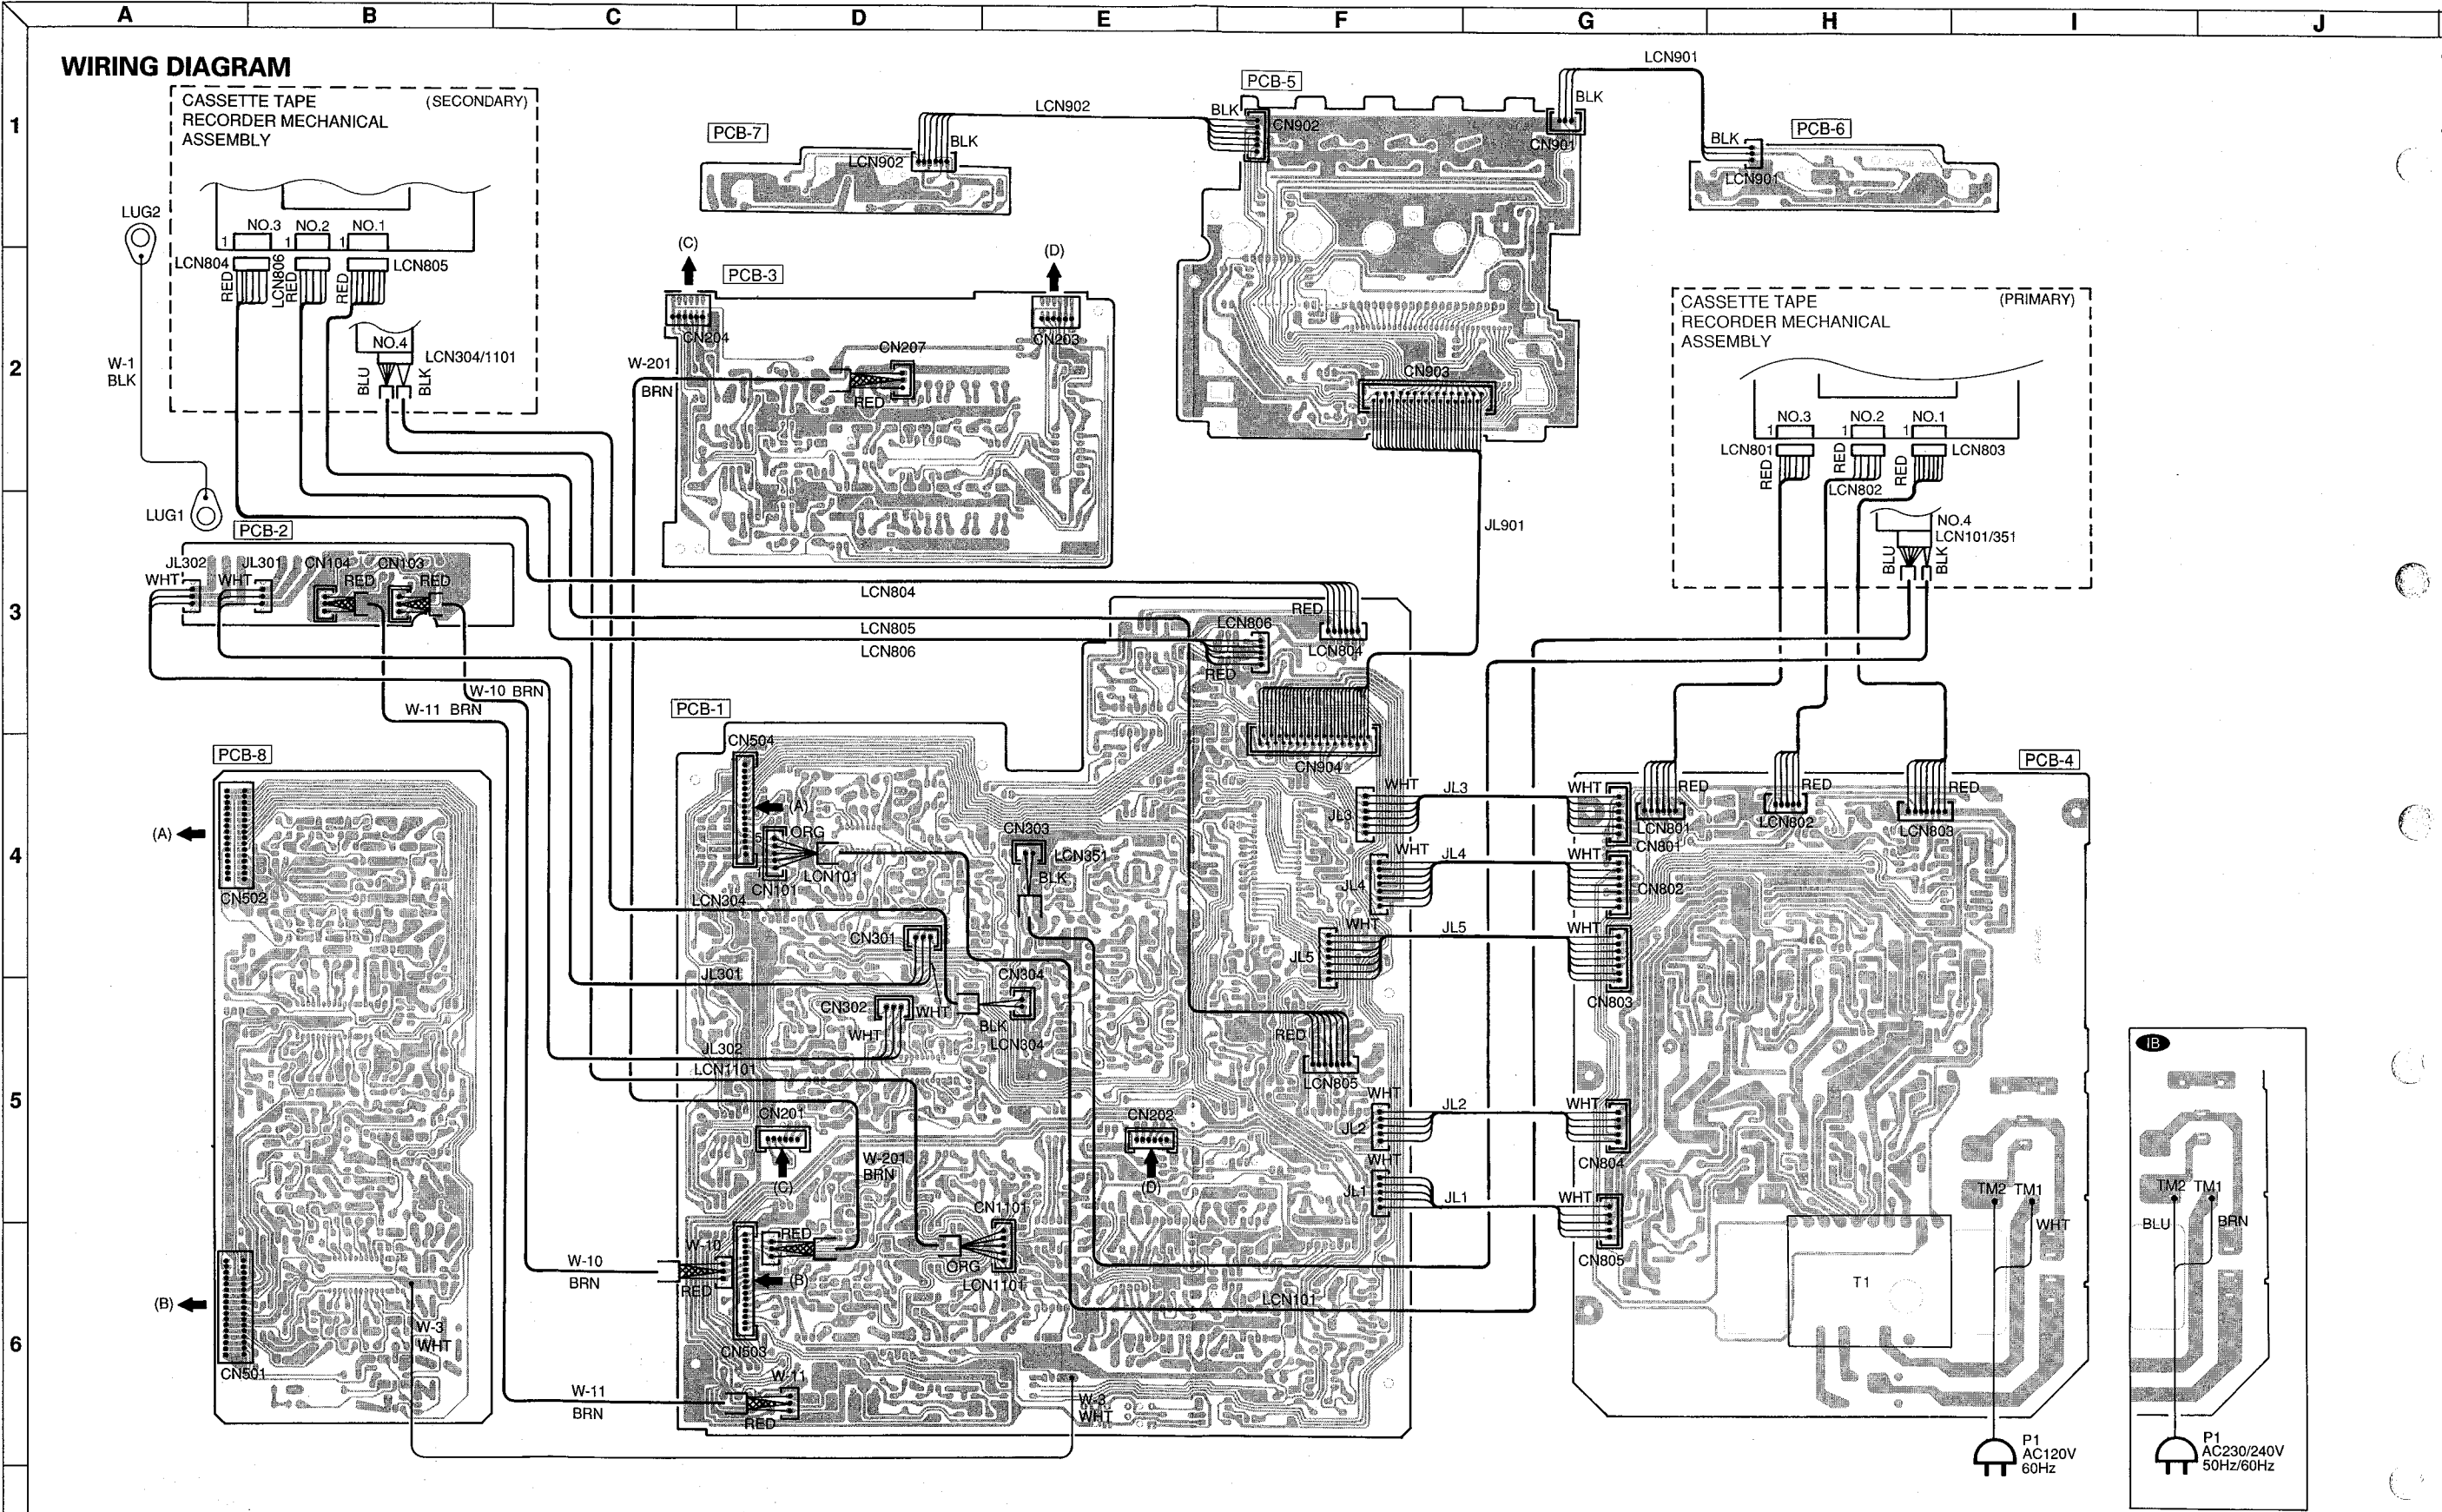



WIRE COLOR ABBREVIATIONS

REC : Red	YEL : Yellow
ORG : Orange	PUP : Purple
BLU : Blue	PIK : Pink
WHT : White	BRN : Brown
BLK : Black	

WIRING DIAGRAM

CASSETTE TAPE
RECORDER MECHANICAL
ASSEMBLY (SECONDARY)

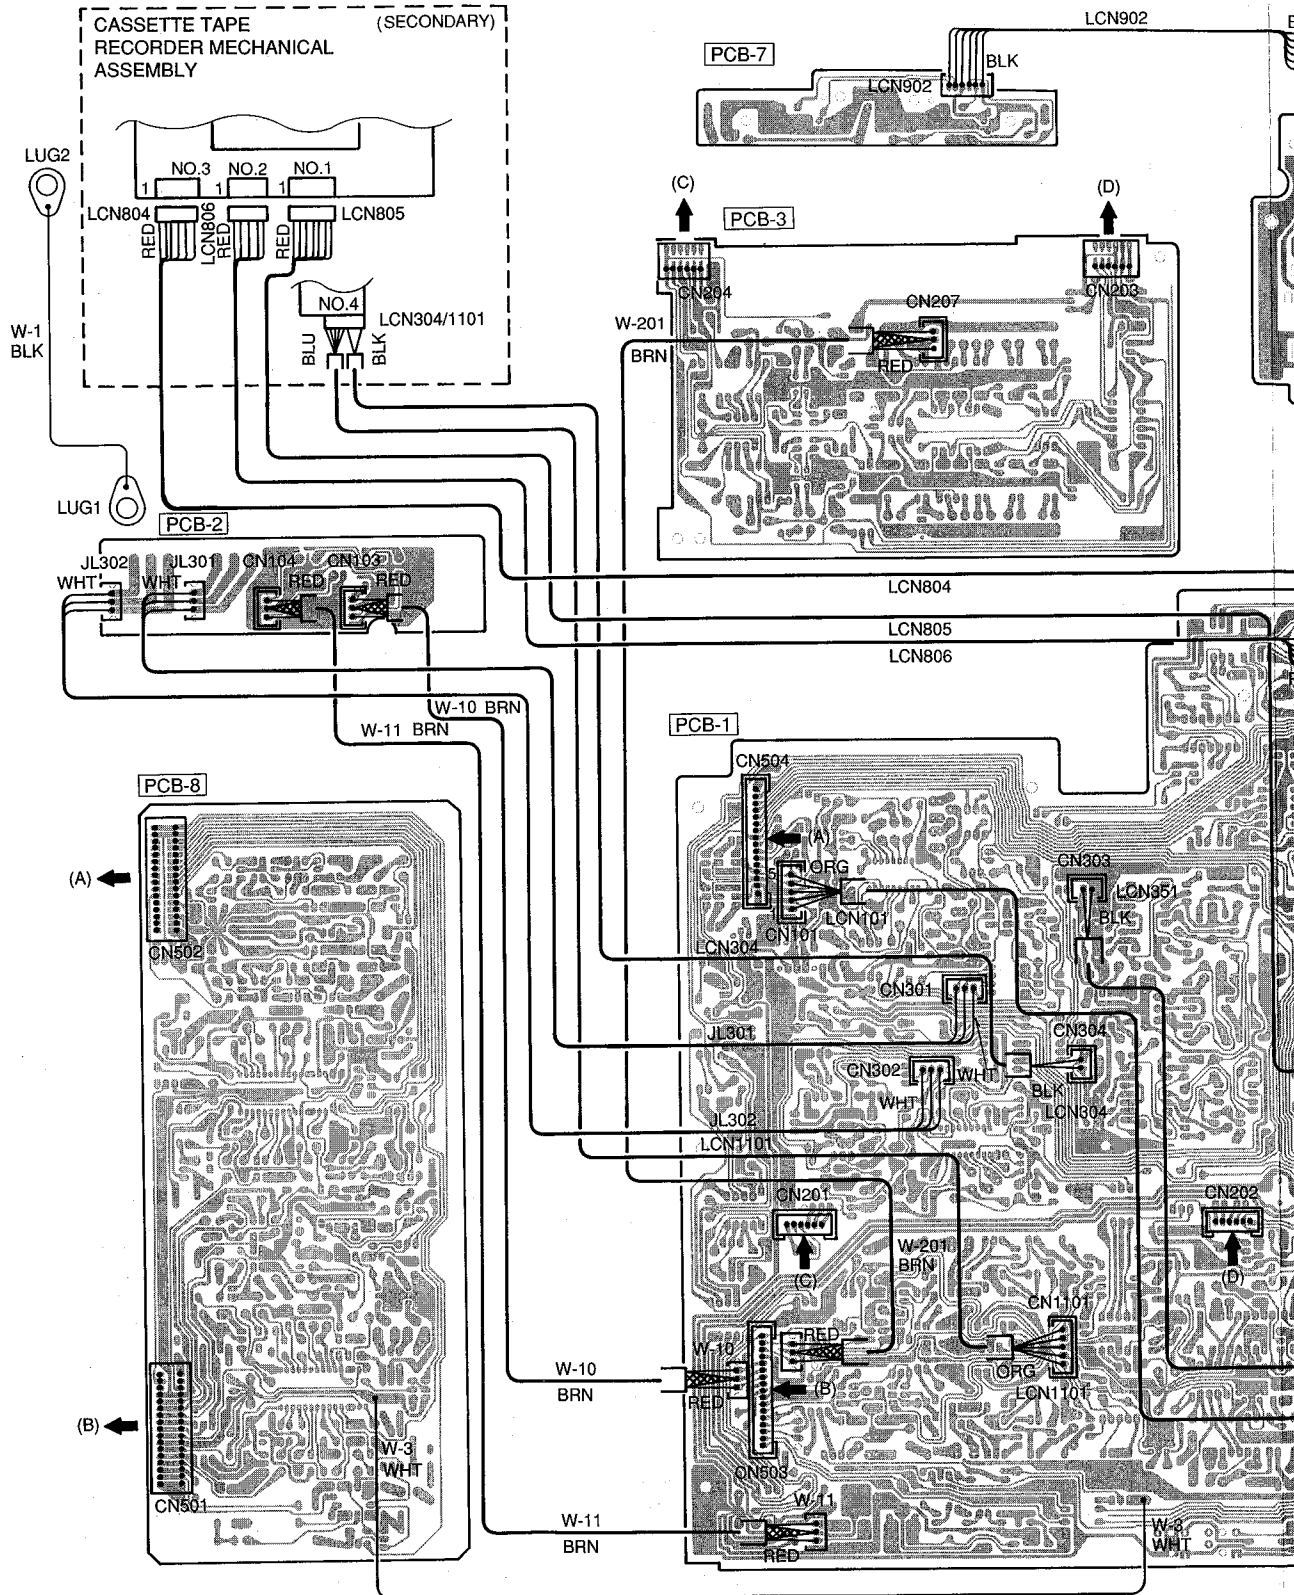


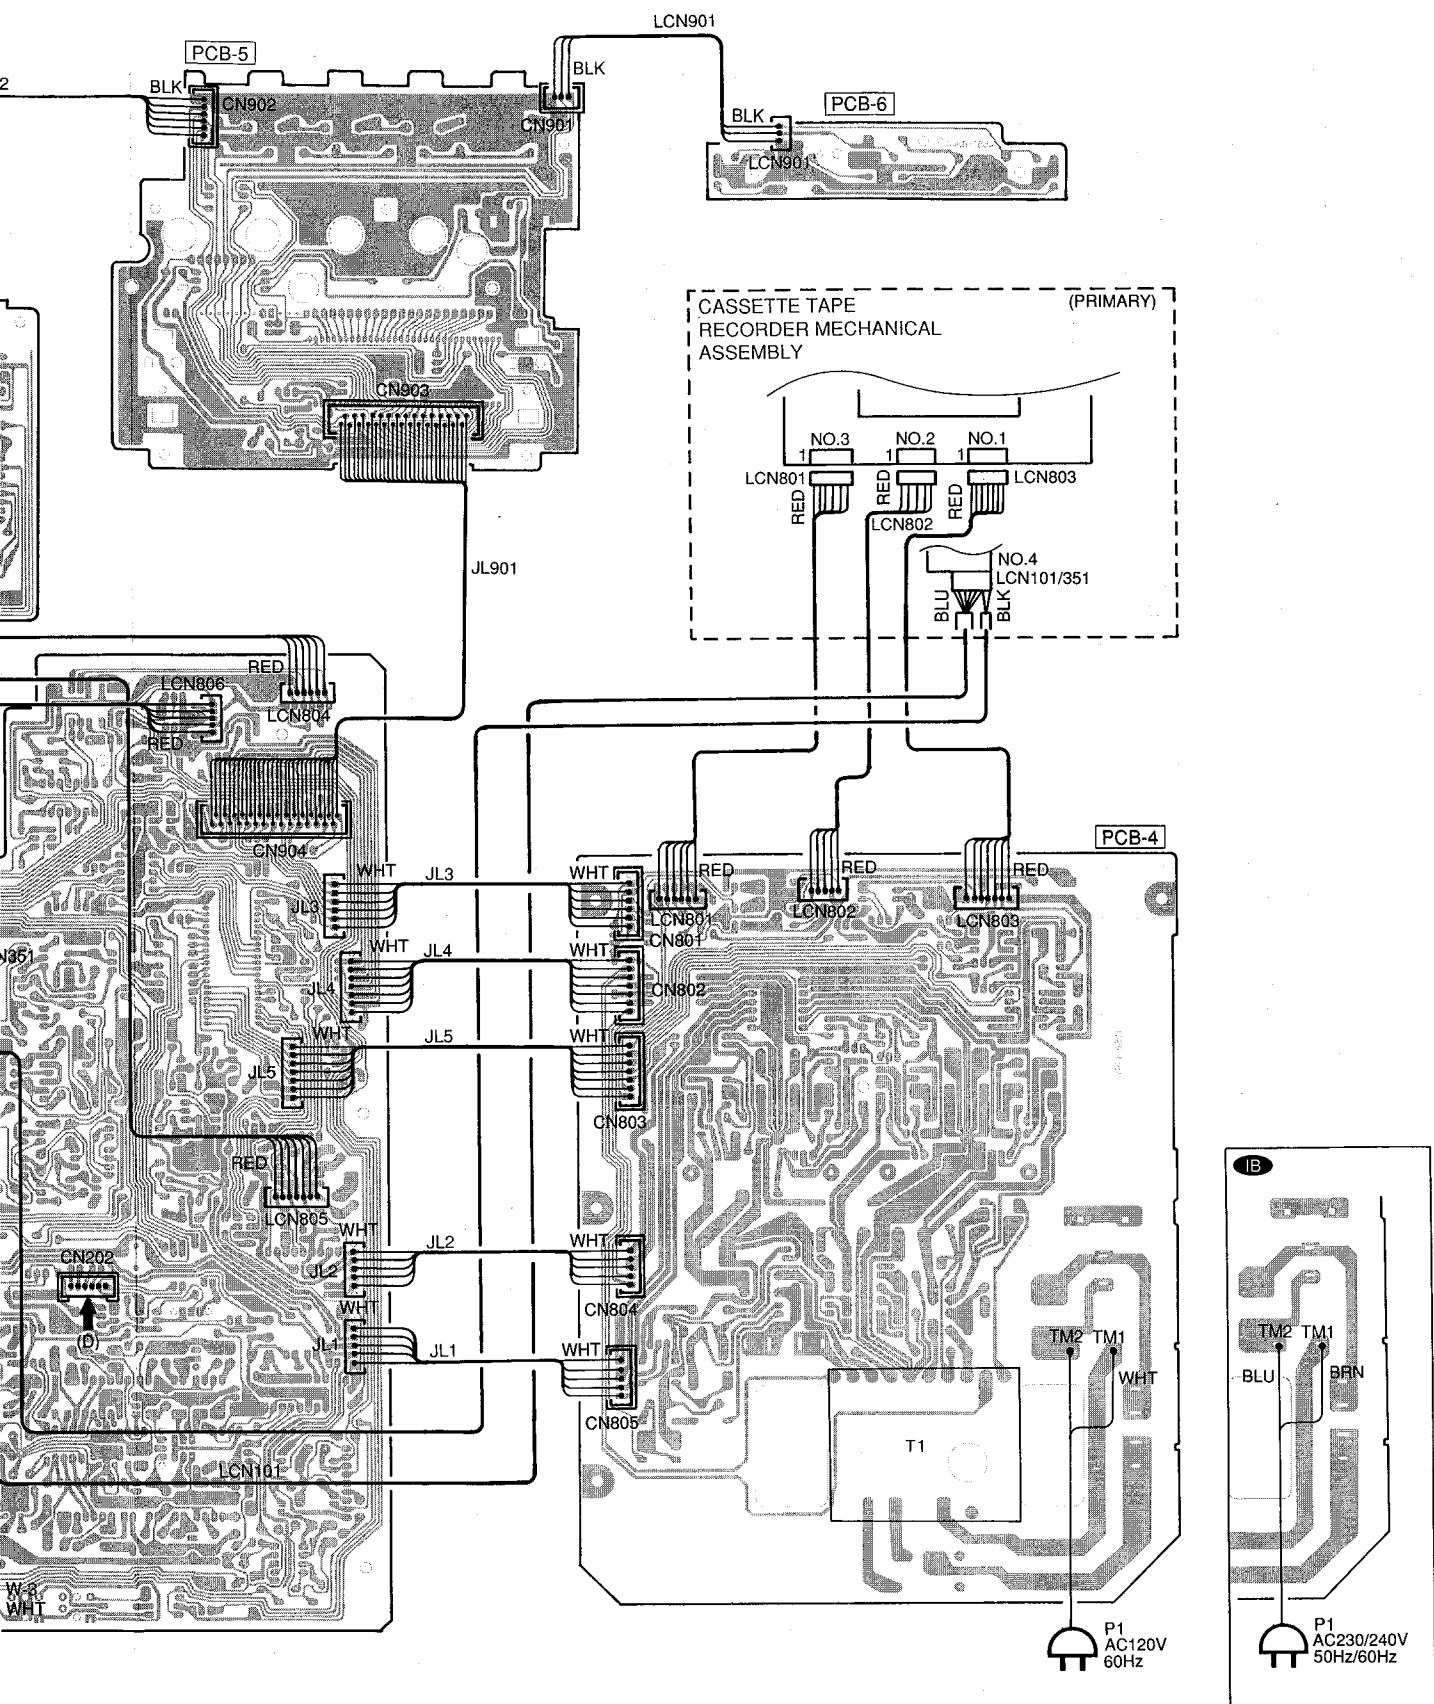

WIRE COLOR ABBREVIATIONS


REC : Red	YEL : Yellow
ORG : Orange	PUP : Purple
BLU : Blue	PIK : Pink
WHT : White	BRN : Brown
BLK : Black	

P. C. BOARD (1)

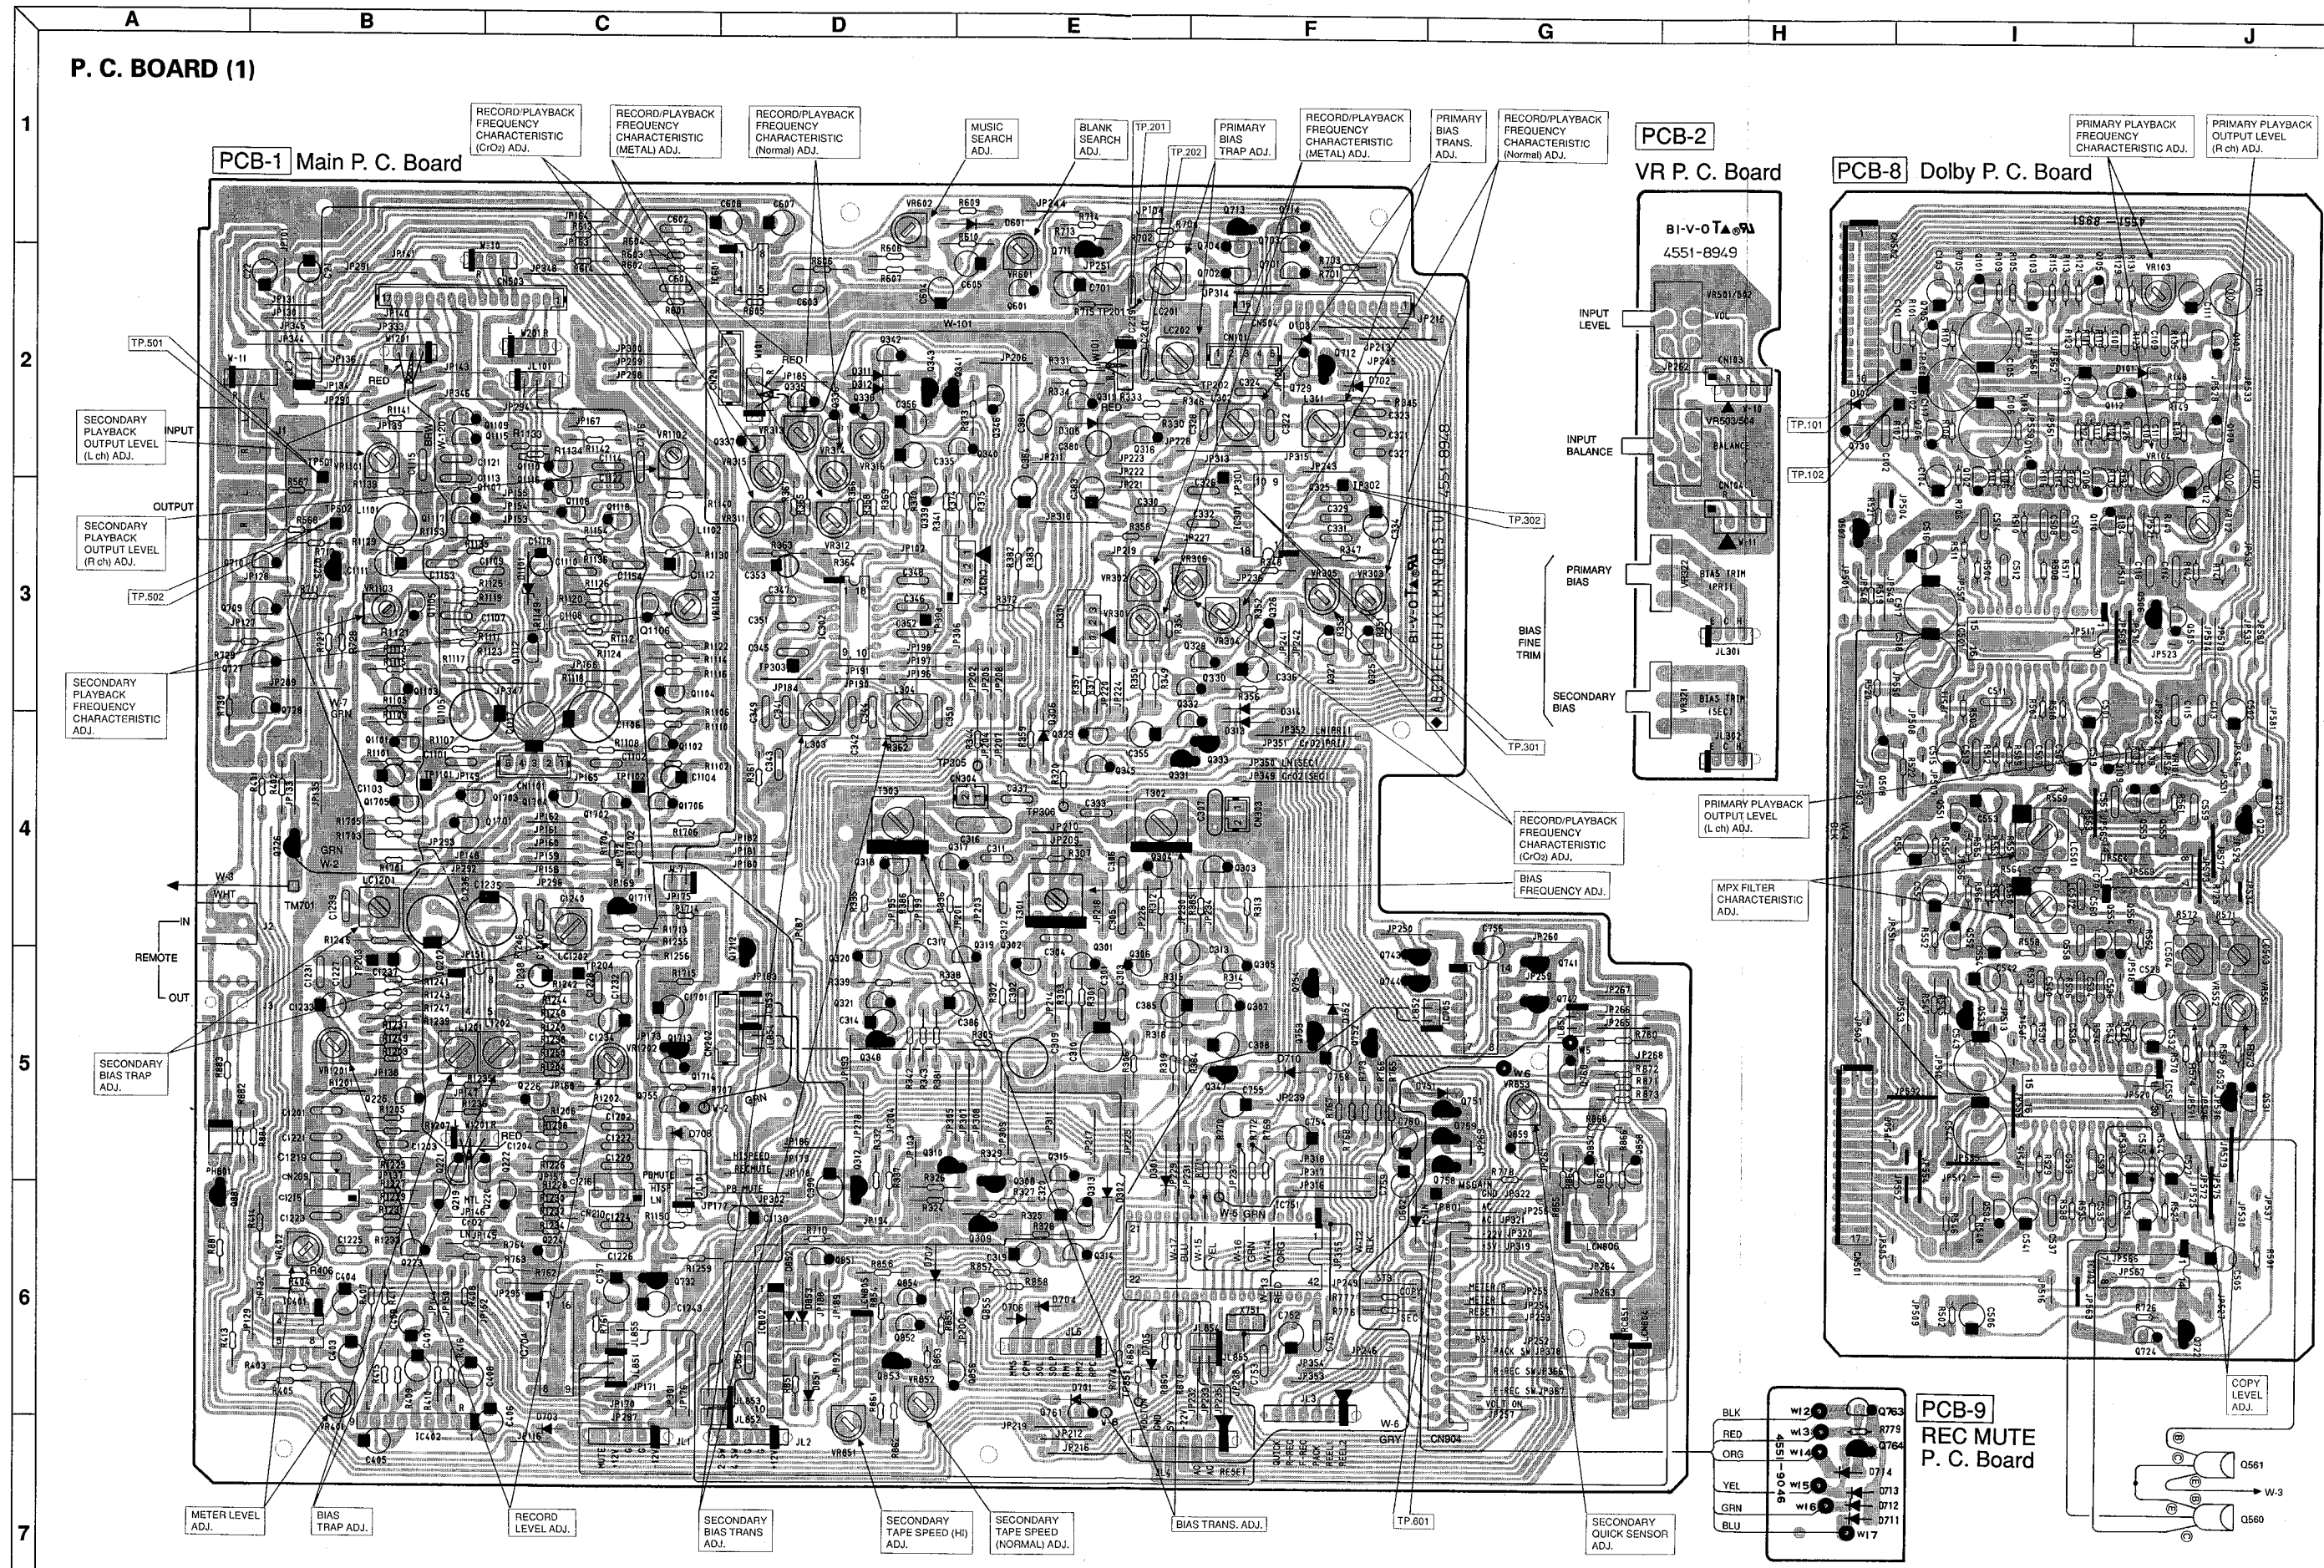

P. C. BOARD (1)


PCB-1 Main P. C. Board

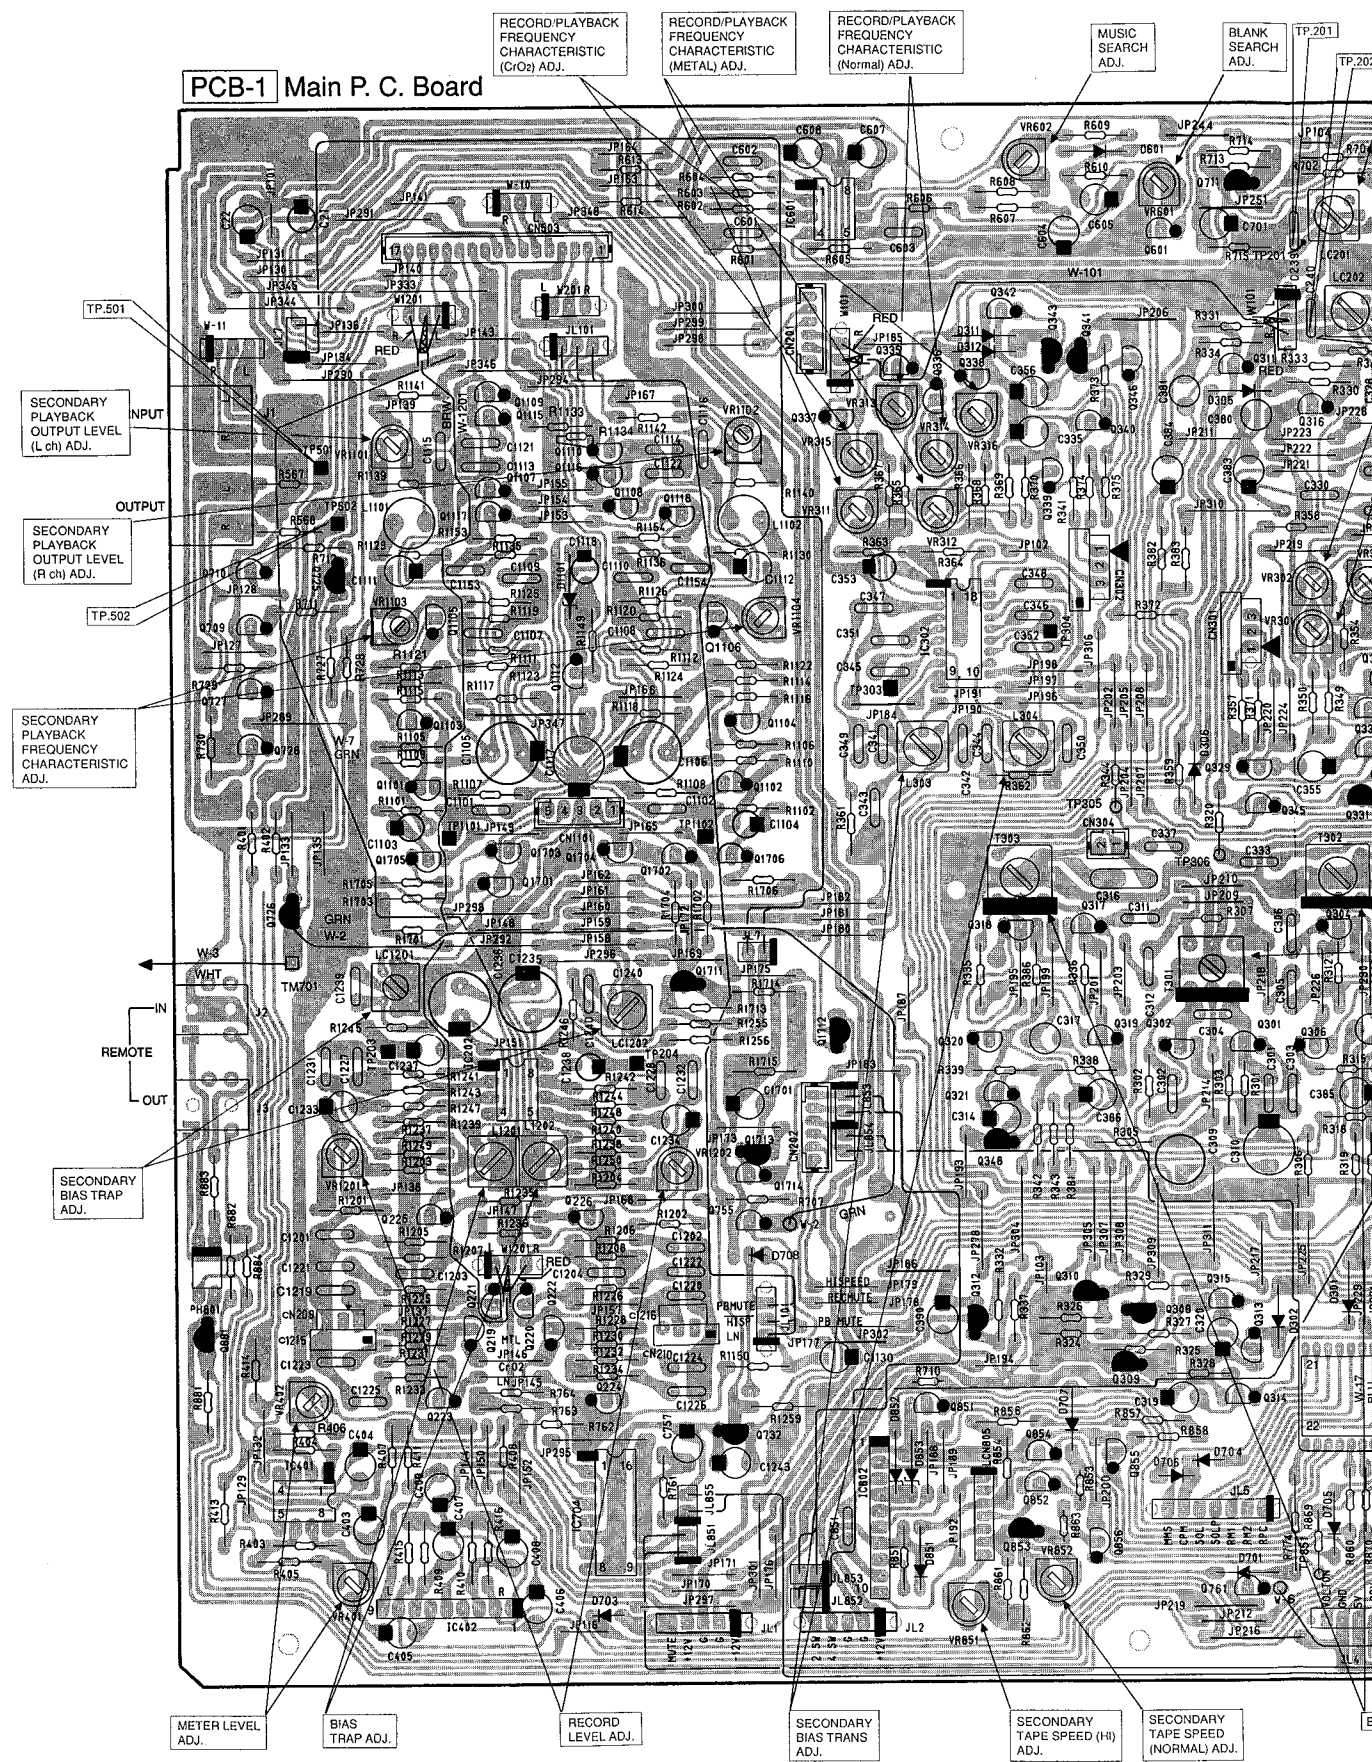




P. C. BOARD (2)


PCB-6 CONT SW-L P. C. Board

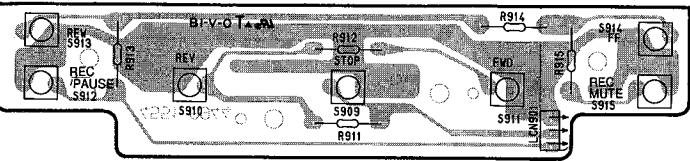


PCB-7 CONT SW-R P. C. Board

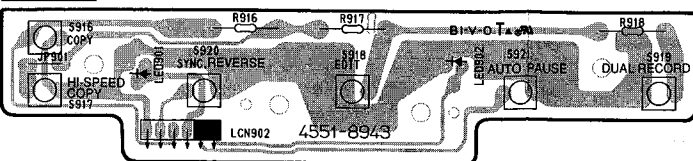


PCB-5 FRONT P. C. Board

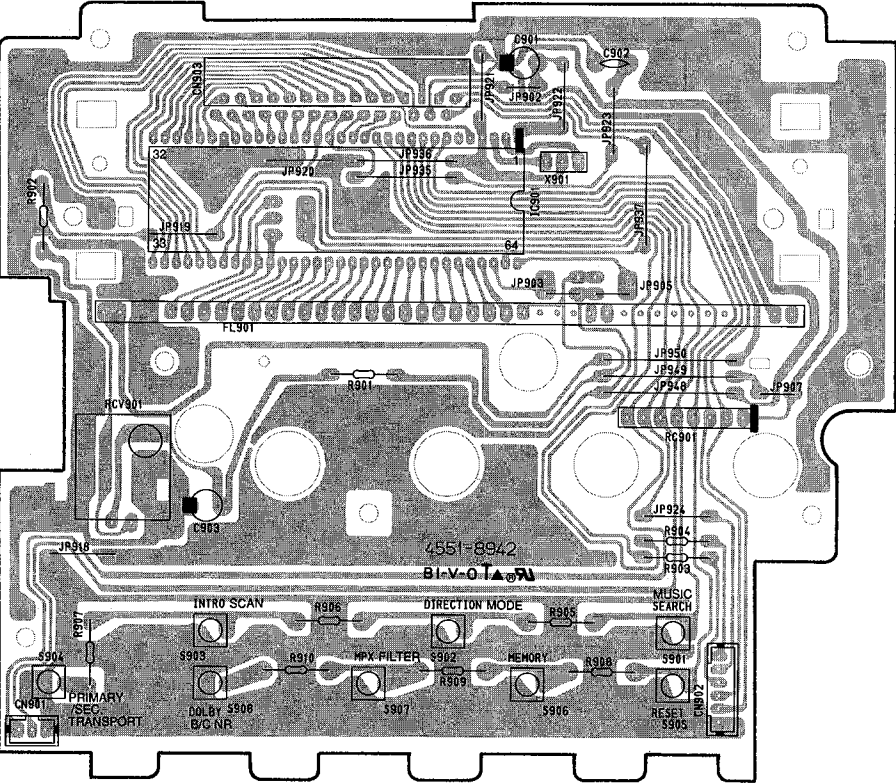

PCB-4 Power P. C. Board

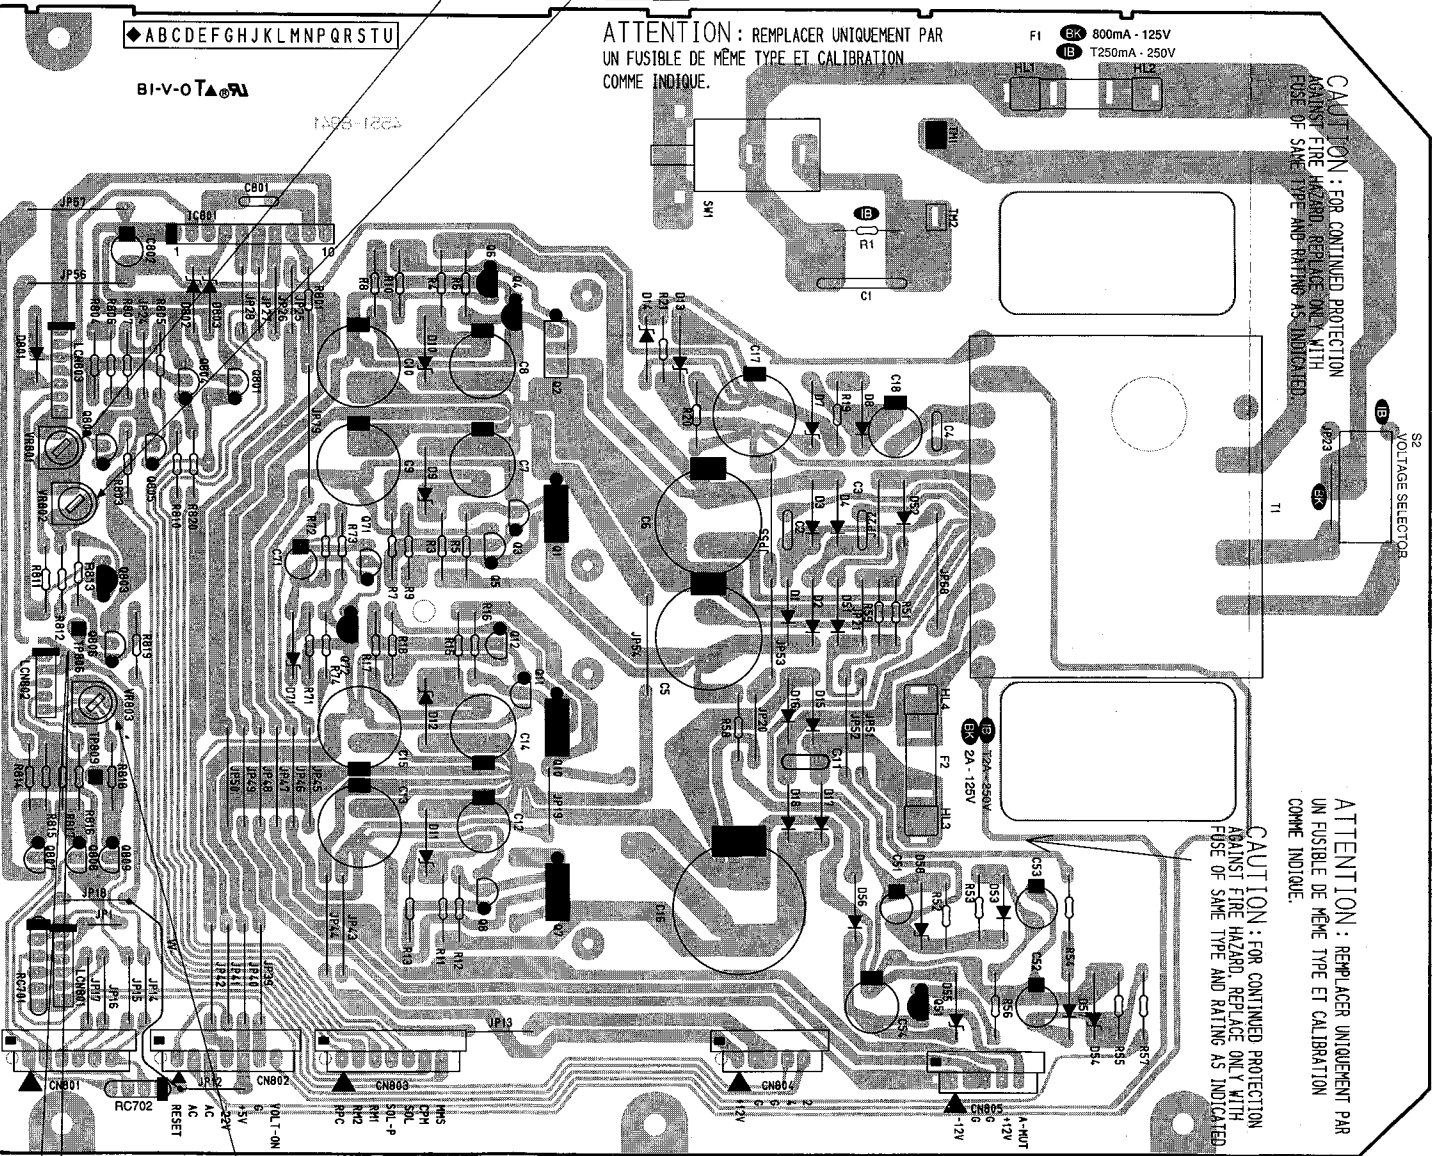


PCB-3 REC EQ P. C. Board

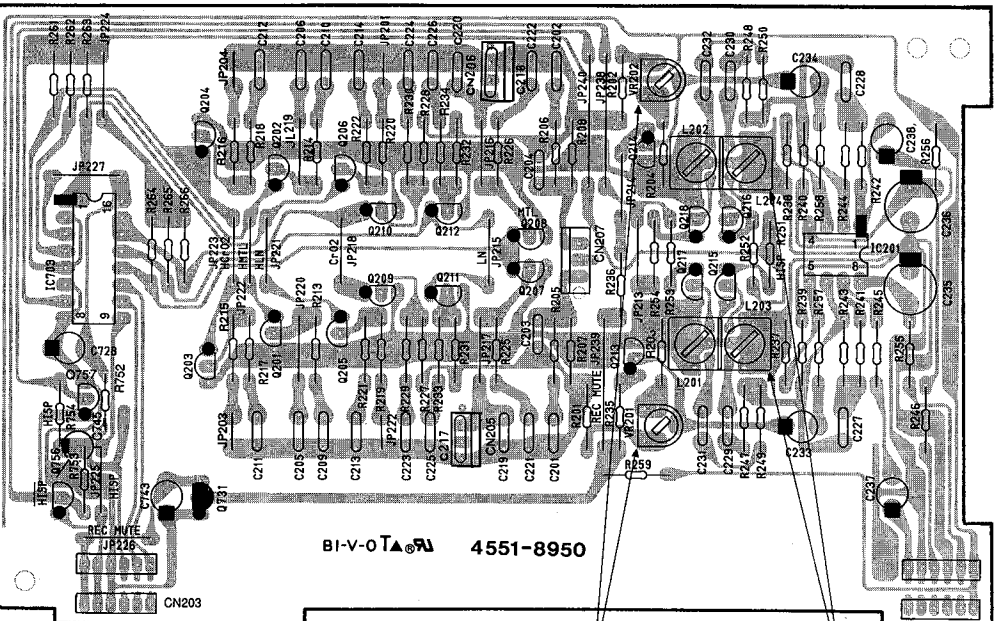


P. C. BOARD (2)


PCB-6 CONT SW-L P. C. Board

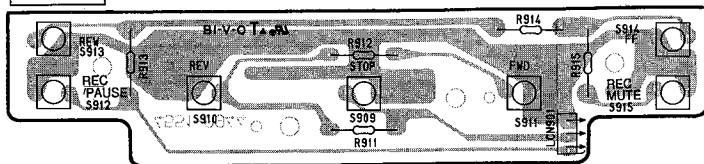


PCB-7 CONT SW-R P. C. Board

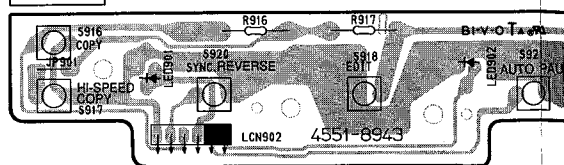

PCB-4 Power P. C. Board

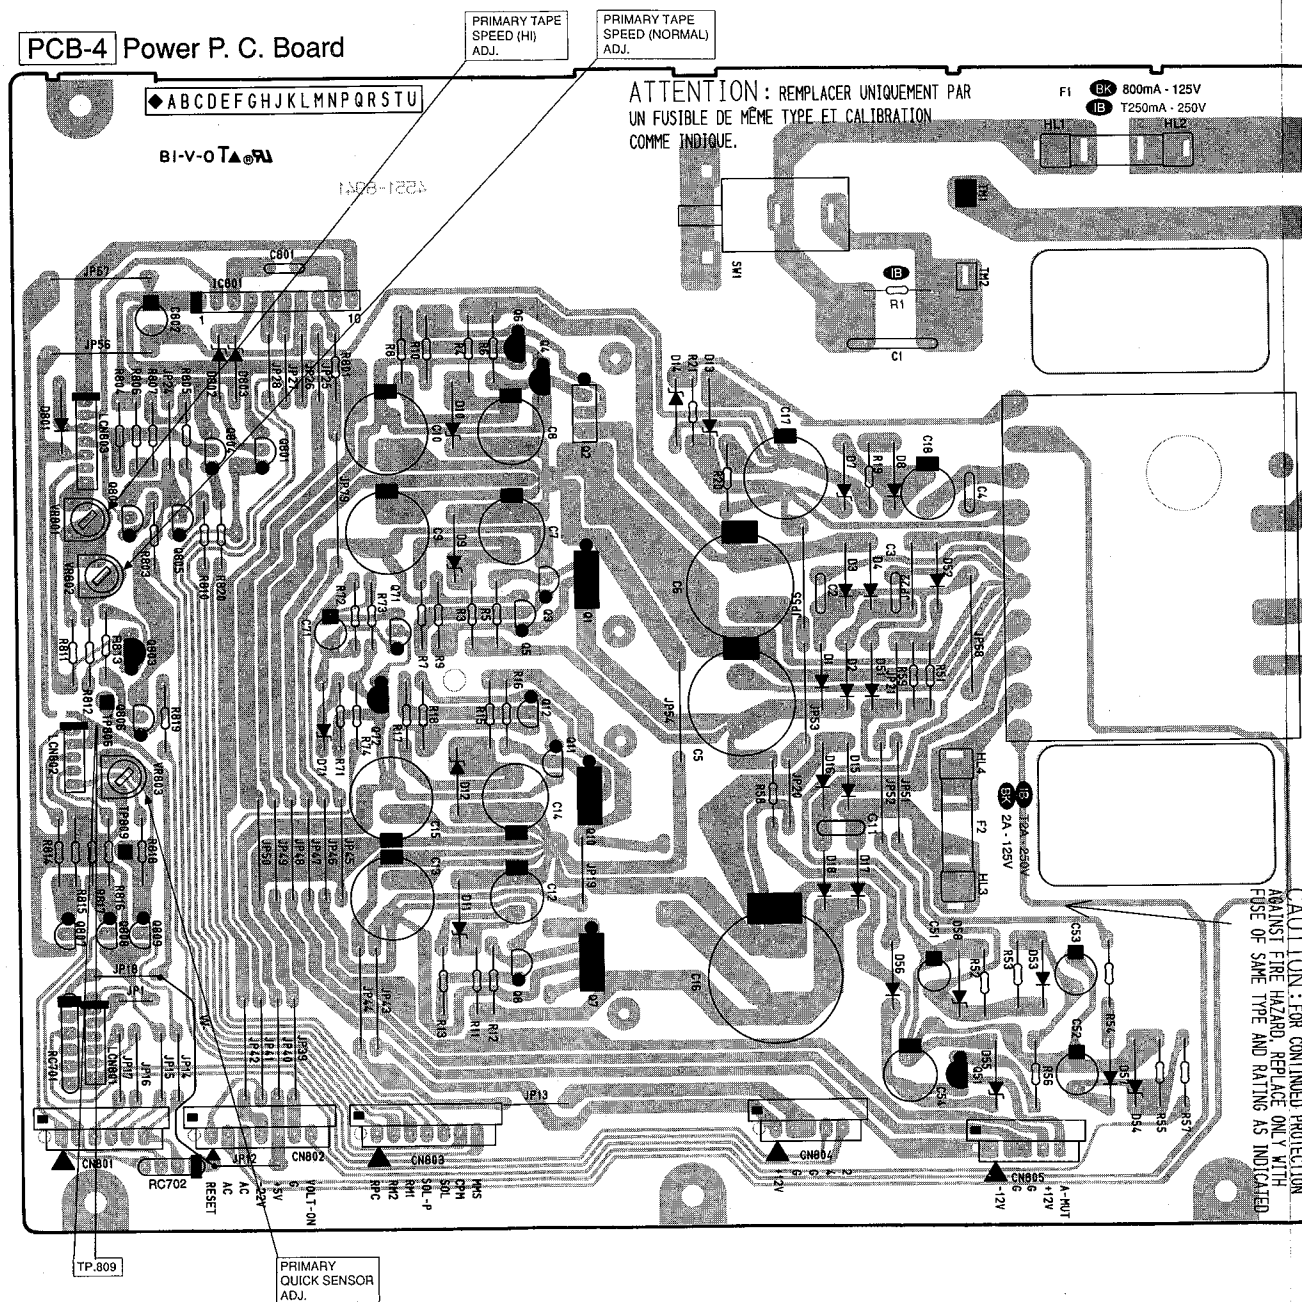

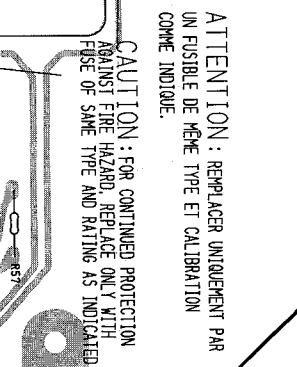

Ser. No.	Ref. No.	Part No.	Description	Ser. No.	Ref. No.	Part No.	Description
520	R307	5135-103522	RES, CBN 1/2P 10K	746	R415	5135-223522	RES, CBN 1/2P 22K
519	R312	5135-474522	RES, CBN 1/2P 470K	746	R416	5135-223522	RES, CBN 1/2P 22K
519	R313	5135-474522	RES, CBN 1/2P 470K	660	R567	5135-102522	RES, CBN 1/2P 1K
520	R314	5135-103522	RES, CBN 1/2P 10K	660	R568	5135-102522	RES, CBN 1/2P 1K
520	R315	5135-103522	RES, CBN 1/2P 10K	969	R601	5135-563522	RES, CBN 1/2P 56K
520	R318	5135-103522	RES, CBN 1/2P 10K	963	R602	5135-104522	RES, CBN 1/2P 100K
524	R319	5135-100522	RES, CBN 1/2P 10	965	R603	5135-331522	RES, CBN 1/2P 330
525	R320	5135-104522	RES, CBN 1/2P 100K	963	R604	5135-104522	RES, CBN 1/2P 100K
535	R324	5135-222522	RES, CBN 1/2P 2.2K	966	R605	5135-822522	RES, CBN 1/2P 8.2K
533	R325	5135-223522	RES, CBN 1/2P 22K	967	R606	5135-102522	RES, CBN 1/2P 1K
533	R326	5135-223522	RES, CBN 1/2P 22K	967	R607	5135-102522	RES, CBN 1/2P 1K
520	R327	5135-103522	RES, CBN 1/2P 10K	968	R608	5135-103522	RES, CBN 1/2P 10K
520	R328	5135-103522	RES, CBN 1/2P 10K	964	R609	5135-332522	RES, CBN 1/2P 3.3K
520	R329	5135-103522	RES, CBN 1/2P 10K	963	R610	5135-104522	RES, CBN 1/2P 100K
537	R330	5135-472522	RES, CBN 1/2P 4.7K	965	R613	5135-331522	RES, CBN 1/2P 330
537	R331	5135-472522	RES, CBN 1/2P 4.7K	965	R614	5135-331522	RES, CBN 1/2P 330
537	R332	5135-472522	RES, CBN 1/2P 4.7K	704	R701	5135-103522	RES, CBN 1/2P 10K
538	R333	5135-822522	RES, CBN 1/2P 8.2K	704	R702	5135-103522	RES, CBN 1/2P 10K
538	R334	5135-822522	RES, CBN 1/2P 8.2K	701	R703	5135-392522	RES, CBN 1/2P 3.9K
519	R335	5135-474522	RES, CBN 1/2P 470K	701	R704	5135-392522	RES, CBN 1/2P 3.9K
519	R336	5135-474522	RES, CBN 1/2P 470K	708	R707	5135-472522	RES, CBN 1/2P 4.7K
538	R337	5135-822522	RES, CBN 1/2P 8.2K	707	R710	5232-183J16P	RES, CBN 1/6P 18K
520	R338	5135-103522	RES, CBN 1/2P 10K	702	R711	5135-222522	RES, CBN 1/2P 2.2K
520	R339	5135-103522	RES, CBN 1/2P 10K	702	R712	5135-222522	RES, CBN 1/2P 2.2K
531	R341	5135-471522	RES, CBN 1/2P 470	702	R713	5135-222522	RES, CBN 1/2P 2.2K
520	R342	5135-103522	RES, CBN 1/2P 10K	704	R714	5135-103522	RES, CBN 1/2P 10K
524	R343	5135-100522	RES, CBN 1/2P 10	704	R715	5135-103522	RES, CBN 1/2P 10K
525	R344	5135-104522	RES, CBN 1/2P 100K	706	R727	5135-394522	RES, CBN 1/2P 390K
526	R345	5135-154522	RES, CBN 1/2P 150K	706	R728	5135-394522	RES, CBN 1/2P 390K
526	R346	5135-154522	RES, CBN 1/2P 150K	715	R729	5135-102522	RES, CBN 1/2P 1K
527	R347	5135-333522	RES, CBN 1/2P 33K	715	R730	5135-102522	RES, CBN 1/2P 1K
527	R348	5135-333522	RES, CBN 1/2P 33K	711	R760	5135-562522	RES, CBN 1/2P 5.6K
528	R349	5135-102522	RES, CBN 1/2P 1K	712	R761	5135-221522	RES, CBN 1/2P 220
528	R350	5135-102522	RES, CBN 1/2P 1K	713	R762	5135-273522	RES, CBN 1/2P 27K
529	R351	5135-121522	RES, CBN 1/2P 120	714	R763	5135-473522	RES, CBN 1/2P 47K
529	R352	5135-121522	RES, CBN 1/2P 120	714	R764	5135-473522	RES, CBN 1/2P 47K
534	R353	5135-152522	RES, CBN 1/2P 1.5K	715	R765	5135-102522	RES, CBN 1/2P 1K
534	R354	5135-152522	RES, CBN 1/2P 1.5K	715	R766	5135-102522	RES, CBN 1/2P 1K
532	R356	5135-123522	RES, CBN 1/2P 12K	715	R767	5135-102522	RES, CBN 1/2P 1K
532	R357	5135-123522	RES, CBN 1/2P 12K	715	R768	5135-102522	RES, CBN 1/2P 1K
527	R358	5135-333522	RES, CBN 1/2P 33K	719	R769	5232-102J16P	RES, CBN 1/6P 1K
533	R359	5135-223522	RES, CBN 1/2P 22K	715	R770	5135-102522	RES, CBN 1/2P 1K
526	R361	5135-154522	RES, CBN 1/2P 150K	719	R771	5232-102J16P	RES, CBN 1/6P 1K
526	R362	5135-154522	RES, CBN 1/2P 150K	715	R772	5135-102522	RES, CBN 1/2P 1K
527	R363	5135-333522	RES, CBN 1/2P 33K	715	R773	5135-102522	RES, CBN 1/2P 1K
527	R364	5135-333522	RES, CBN 1/2P 33K	719	R774	5232-102J16P	RES, CBN 1/6P 1K
529	R365	5135-121522	RES, CBN 1/2P 120	715	R776	5135-102522	RES, CBN 1/2P 1K
530	R366	5232-121J16P	RES, CBN 1/6P 120	715	R777	5135-102522	RES, CBN 1/2P 1K
534	R367	5135-152522	RES, CBN 1/2P 1.5K	702	R778	5135-222522	RES, CBN 1/2P 2.2K
540	R368	5232-152J16P	RES, CBN 1/6P 1.5K	923	△ R851	5102-1005116	RES, FUSE 10
523	R369	5232-102J16P	RES, CBN 1/6P 1K	935	R853	5232-103J16P	RES, CBN 1/6P 10K
528	R370	5135-102522	RES, CBN 1/2P 1K	926	R854	5135-150522	RES, CBN 1/2P 15
531	R371	5135-471522	RES, CBN 1/2P 470	926	R856	5135-150522	RES, CBN 1/2P 15
533	R372	5135-223522	RES, CBN 1/2P 22K	926	R857	5135-150522	RES, CBN 1/2P 15
532	R373	5135-123522	RES, CBN 1/2P 12K	926	R858	5135-150522	RES, CBN 1/2P 15
532	R374	5135-123522	RES, CBN 1/2P 12K	925	R860	5135-103522	RES, CBN 1/2P 10K
527	R375	5135-333522	RES, CBN 1/2P 33K	931	R861	5174-S010F243	RES, MTL 1/4P 24K
524	R381	5135-100522	RES, CBN 1/2P 10	929	R862	5174-S010F113	RES, MTL 1/4P 11K
539	R382	5135-220522	RES, CBN 1/2P 22	934	R863	5135-224522	RES, CBN 1/2P 220K
539	R383	5135-220522	RES, CBN 1/2P 22	924	R864	5135-222522	RES, CBN 1/2P 2.2K
524	R384	5135-100522	RES, CBN 1/2P 10	927	R865	5135-223522	RES, CBN 1/2P 22K
522	R385	5135-150522	RES, CBN 1/2P 15	924	R866	5135-222522	RES, CBN 1/2P 2.2K
522	R386	5135-150522	RES, CBN 1/2P 15	927	R867	5135-223522	RES, CBN 1/2P 22K
740	R401	5135-103522	RES, CBN 1/2P 10K	922	R868	5135-471522	RES, CBN 1/2P 470
740	R402	5135-103522	RES, CBN 1/2P 10K	936	R869	5135-103522	RES, CBN 1/2P 10K
741	R403	5135-222522	RES, CBN 1/2P 2.2K	925	R870	5135-103522	RES, CBN 1/2P 10K
741	R404	5135-222522	RES, CBN 1/2P 2.2K	930	R871	5135-273522	RES, CBN 1/2P 27K
742	R405	5135-102522	RES, CBN 1/2P 1K	930	R872	5135-273522	RES, CBN 1/2P 27K
742	R406	5135-102522	RES, CBN 1/2P 1K	930	R873	5135-273522	RES, CBN 1/2P 27K
743	R407	5135-331522	RES, CBN 1/2P 330	895	R881	5135-392522	RES, CBN 1/2P 3.9K
743	R408	5135-331522	RES, CBN 1/2P 330	897	R882	5135-470522	RES, CBN 1/2P 47
744	R409	5135-334522	RES, CBN 1/2P 330K	896	R883	5135-271522	RES, CBN 1/2P 270
744	R410	5135-334522	RES, CBN 1/2P 330K	898	R884	5135-473522	RES, CBN 1/2P 47K
743	R411	5135-331522	RES, CBN 1/2P 330	325	R1101	5135-470522	RES, CBN 1/2P 47
745	R413	5135-104522	RES, CBN 1/2P 100K	325	R1102	5135-470522	RES, CBN 1/2P 47
745	R414	5135-104522	RES, CBN 1/2P 100K	326	R1105	5174-S010F223	RES, MTL 1/4P 22K

Ser. No.	Ref. No.	Part No.	Description	Ser. No.	Ref. No.	Part No.	Description
326	R1106	5174-S010F223	RES, MTL 1/4P 22K	704	R1705	5135-103522	RES, CBN 1/2P 10K
327	R1107	5174-S010F331	RES, MTL 1/4P 330	704	R1706	5135-103522	RES, CBN 1/2P 10K
327	R1108	5174-S010F331	RES, MTL 1/4P 330	702	R1713	5135-222522	RES, CBN 1/2P 2.2K
328	R1109	5135-224522	RES, CBN 1/2P 220K	705	R1714	5135-103522	RES, CBN 1/2P 10K
328	R1110	5135-224522	RES, CBN 1/2P 220K	705	R1715	5135-103522	RES, CBN 1/2P 10K
329	R1111	5135-332522	RES, CBN 1/2P 3.3K	INTEGRATED CIRCUITS			
329	R1112	5135-332522	RES, CBN 1/2P 3.3K	441	IC202	5653-UPC4570C	IC, LINEAR
330	R1113	5135-562522	RES, CBN 1/2P 5.6K	481	IC301	5653-U1297CA	IC, LINEAR
330	R1114	5135-562522	RES, CBN 1/2P 5.6K	481	IC302	5653-U1297CA	IC, LINEAR
331	R1115	5135-470522	RES, CBN 1/2P 47	721	IC401	5652-NJM4558D	IC, MONO
331	R1116	5135-470522	RES, CBN 1/2P 47	722	IC402	5653-BA6138	IC, LINEAR
332	R1117	5135-681522	RES, CBN 1/2P 680	941	IC601	5652-NJM4558D	IC, MONO
332	R1118	5135-681522	RES, CBN 1/2P 680	665	IC704	5654-TC4052BP	IC, DIGITAL
333	R1119	5135-684522	RES, CBN 1/2P 680K	662	IC705	5654-TC4011BP	IC, DIGITAL
333	R1120	5135-684522	RES, CBN 1/2P 680K	871	IC751	5654-MN15542	IC, DIGITAL
334	R1121	5135-101522	RES, CBN 1/2P 100	874	IC802	5653-BA6229	IC, LINEAR
334	R1122	5135-101522	RES, CBN 1/2P 100	TRANSISTORS			
335	R1123	5135-102522	RES, CBN 1/2P 1K	442	Q219	5613-C114YS	XISTOR, NPN R
335	R1124	5135-102522	RES, CBN 1/2P 1K	442	Q220	5613-C114YS	XISTOR, NPN R
336	R1125	5232-822J16P	RES, CBN 1/6P 8.2K	442	Q221	5613-C114YS	XISTOR, NPN R
336	R1126	5232-822J16P	RES, CBN 1/6P 8.2K	442	Q222	5613-C114YS	XISTOR, NPN R
339	R1129	5135-101522	RES, CBN 1/2P 100	442	Q223	5613-C114YS	XISTOR, NPN R
339	R1130	5135-101522	RES, CBN 1/2P 100	442	Q224	5613-C114YS	XISTOR, NPN R
329	R1133	5135-332522	RES, CBN 1/2P 3.3K	443	Q225	5613-2878(B)	XISTOR, NPN R
338	R1134	5232-332J16P	RES, CBN 1/6P 3.3K	443	Q226	5613-2878(B)	XISTOR, NPN R
341	R1135	5135-392522	RES, CBN 1/2P 3.9K	482	Q301	5613-2320(F)	XISTOR, NPN R
341	R1136	5135-392522	RES, CBN 1/2P 3.9K	482	Q302	5613-2320(F)	XISTOR, NPN R
340	R1139	5135-103522	RES, CBN 1/2P 10K	482	Q303	5613-2320(F)	XISTOR, NPN R
340	R1140	5135-103522	RES, CBN 1/2P 10K	482	Q304	5613-2320(F)	XISTOR, NPN R
342	R1141	5135-104522	RES, CBN 1/2P 100K	482	Q305	5613-2320(F)	XISTOR, NPN R
324	R1142	5232-104J16P	RES, CBN 1/6P 100K	482	Q306	5613-2320(F)	XISTOR, NPN R
344	R1149	5135-102522	RES, CBN 1/2P 1K	483	Q307	5613-C114YS	XISTOR, NPN R
343	R1150	5135-222522	RES, CBN 1/2P 2.2K	484	Q308	5611-950(Y)	XISTOR, PNP R
337	R1153	5135-331522	RES, CBN 1/2P 330	484	Q309	5611-950(Y)	XISTOR, PNP R
337	R1154	5135-331522	RES, CBN 1/2P 330	484	Q310	5611-950(Y)	XISTOR, PNP R
461	R1201	5135-222522	RES, CBN 1/2P 2.2K	486	Q311	5613-2120(Y)	XISTOR, NPN R
461	R1202	5135-222522	RES, CBN 1/2P 2.2K	484	Q312	5611-950(Y)	XISTOR, PNP R
462	R1203	5135-272522	RES, CBN 1/2P 2.7K	485	Q313	5613-C114YS	XISTOR, NPN R
462	R1204	5135-272522	RES, CBN 1/2P 2.7K	485	Q314	5613-C114YS	XISTOR, NPN R
463	R1205	5135-393522	RES, CBN 1/2P 39K	485	Q315	5613-C114YS	XISTOR, NPN R
463	R1206	5135-393522	RES, CBN 1/2P 39K	486	Q316	5613-2120(Y)	XISTOR, NPN R
464	R1207	5135-103522	RES, CBN 1/2P 10K	482	Q317	5613-2320(F)	XISTOR, NPN R
464	R1208	5135-103522	RES, CBN 1/2P 10K	482	Q318	5613-2320(F)	XISTOR, NPN R
466	R1225	5135-683522	RES, CBN 1/2P 68K	482	Q319	5613-2320(F)	XISTOR, NPN R
466	R1226	5135-683522	RES, CBN 1/2P 68K	482	Q320	5613-2320(F)	XISTOR, NPN R
467	R1227	5135-563522	RES, CBN 1/2P 56K	483	Q321	5613-C114YS	XISTOR, NPN R
467	R1228	5135-563522	RES, CBN 1/2P 56K	487	Q325	5613-C114YS	XISTOR, NPN R
468	R1229	5135-153522	RES, CBN 1/2P 15K	487	Q326	5613-C114YS	XISTOR, NPN R
468	R1230	5135-153522	RES, CBN 1/2P 15K	487	Q327	5613-C114YS	XISTOR, NPN R
464	R1231	5135-103522	RES, CBN 1/2P 10K	487	Q328	5613-C114YS	XISTOR, NPN R
464	R1232	5135-103522	RES, CBN 1/2P 10K	488	Q329	5613-2320(F)	XISTOR, NPN R
469	R1233	5135-472522	RES, CBN 1/2P 4.7K	488	Q330	5613-2320(F)	XISTOR, NPN R
469	R1234	5135-472522	RES, CBN 1/2P 4.7K	490	Q331	5611-A143ES	XISTOR, PNP R
469	R1235	5135-472522	RES, CBN 1/2P 4.7K	485	Q332	5613-C114YS	XISTOR, NPN R
469	R1236	5135-472522	RES, CBN 1/2P 4.7K	491	Q333	5611-A114YS	XISTOR, PNP R
470	R1237	5135-104522	RES, CBN 1/2P 100K	487	Q335	5613-C114YS	XISTOR, NPN R
470	R1238	5135-104522	RES, CBN 1/2P 100K	487	Q336	5613-C114YS	XISTOR, NPN R
461	R1239	5135-222522	RES, CBN 1/2P 2.2K	487	Q337	5613-C114YS	XISTOR, NPN R
461	R1240	5135-222522	RES, CBN 1/2P 2.2K	487	Q338	5613-C114YS	XISTOR, NPN R
465	R1241	5135-273522	RES, CBN 1/2P 27K	48	Q339	5613-2320(F)	XISTOR, NPN R
465	R1242	5135-273522	RES, CBN 1/2P 27K	488	Q340	5613-2320(F)	XISTOR, NPN R
467	R1243	5135-563522	RES, CBN 1/2P 56K	490	Q341	5611-A143ES	XISTOR, PNP R
467	R1244	5135-563522	RES, CBN 1/2P 56K	485	Q342	5613-C114YS	XISTOR, NPN R
464	R1245	5135-103522	RES, CBN 1/2P 10K	491	Q343	5611-A114YS	XISTOR, PNP R
464	R1246	5135-103522	RES, CBN 1/2P 10K	487	Q345	5613-C114YS	XISTOR, NPN R
473	R1247	5135-221522	RES, CBN 1/2P 220	487	Q346	5613-C114YS	XISTOR, NPN R
473	R1248	5135-221522	RES, CBN 1/2P 220	491	Q347	5611-A114YS	XISTOR, PNP R
471	R1249	5135-121522	RES, CBN 1/2P 120	491	Q348	5611-A114YS	XISTOR, PNP R
471	R1250	5135-121522	RES, CBN 1/2P 120	943	Q601	5613-C114YS	XISTOR, NPN R
472	R1255	5135-331522	RES, CBN 1/2P 330	672	Q701	5613-2240(BL)	XISTOR, NPN R
472	R1256	5135-331522	RES, CBN 1/2P 330	672	Q702	5613-2240(BL)	XISTOR, NPN R
470	R1259	5135-104522	RES, CBN 1/2P 100K	672	Q703	5613-2240(BL)	XISTOR, NPN R
704	R1701	5135-103522	RES, CBN 1/2P 10K	672	Q704	5613-2240(BL)	XISTOR, NPN R
704	R1702	5135-103522	RES, CBN 1/2P 10K	674	Q709	5613-2878(B)	XISTOR, NPN R
701	R1703	5135-392522	RES, CBN 1/2P 3.9K				
701	R1704	5135-392522	RES, CBN 1/2P 3.9K				

Ser. No.	Ref. No.	Part No.	Description	Ser. No.	Ref. No.	Part No.	Description
818	JL851	4132-R0202231	CORD, 2C	437	C229	5359-3025851	CAP, PPP 3000P
818	JL852	4132-R0202231	CORD, 2C	437	C230	5359-3025851	CAP, PPP 3000P
817	JL853	4132-R0202101	CORD, 2C	409	C231	5359-S010J103	CAP, PPP .01μ
824	JL854	4132-R0200151	CORD, 2C	409	C232	5359-S010J103	CAP, PPP .01μ
824	JL855	4132-R0200151	CORD, 2C	410	C233	5345-105F0951	CAP, MINI ELE 1μ/50V
396	LC201	5214-13801	LC COMPOSITE	410	C234	5345-105F0951	CAP, MINI ELE 1μ/50V
396	LC202	5214-13801	LC COMPOSITE	413	C235	5345-227C041	CAP, MINI ELE 220μ/16V
445	LC1201	5214-13801	LC COMPOSITE	413	C236	5345-227C041	CAP, MINI ELE 220μ/16V
445	LC1202	5214-13801	LC COMPOSITE	411	C237	5345-225F0951	CAP, MINI ELE 2.2μ/50V
807	LCN804	4163-S0206201	CONNECTOR W/W	411	C238	5345-225F0951	CAP, MINI ELE 2.2μ/50V
808	LCN805	4163-S0207351	CONNECTOR W/W	416	C728	5345-106E041	CAP, MINI ELE 10μ/35V
806	LCN806	4163-S0205201	CONNECTOR W/W	412	C743	5345-107B041	CAP, MINI ELE 100μ/10V
894	PH801	5624-PC817	PHOTO COUPLER	417	C745	5345-477B041	CAP, MINI ELE 470μ/10V
911	RC851	5212-S0305273	R COMPOSITE				
781	TM701	4214-132	TERMINAL				
781	TP203	4214-132	TERMINAL				
781	TP204	4214-132	TERMINAL				
781	TP301	4214-132	TERMINAL				
781	TP302	4214-132	TERMINAL				
781	TP303	4214-132	TERMINAL				
781	TP304	4214-132	TERMINAL				
781	TP305	4214-132	TERMINAL				
781	TP306	4214-132	TERMINAL				
781	TP501	4214-132	TERMINAL				
781	TP502	4214-132	TERMINAL				
781	TP601	4214-132	TERMINAL				
801	TP859	4214-132	TERMINAL				
781	TP1101	4214-132	TERMINAL				
781	TP1102	4214-132	TERMINAL				
909	X751	5693-CST4MGW	OSC, CER				

PCB-2 VR P. C. BOARD**CONTROLS**

762	VR321	5113-S1104502	RES, V CBN 16 5K
762	VR322	5113-S1104502	RES, V CBN 16 5K
758	VR501/502	5113-S1102503	RES, V CBN 16 50K
760	VR503/504	5113-S1103104	RES, V CBN 16 100K

MISCELLANEOUS

792	CN103	4443-030185	CONNECTOR
792	CN104	4443-030185	CONNECTOR
815	JL301	4242-R0503221	JUMPER LEAD
815	JL302	4242-R0503221	JUMPER LEAD

PCB-3 REC. EQ P. C. BOARD**CAPACITORS**

408	C201	5359-S010J332	CAP, PPP 3300P
408	C202	5359-S010J332	CAP, PPP 3300P
414	C203	5359-S010J182	CAP, PPP 1800P
414	C204	5359-S010J182	CAP, PPP 1800P
400	C205	5359-S010J272	CAP, PPP 2700P
400	C206	5359-S010J272	CAP, PPP 2700P
398	C209	5359-S010J472	CAP, PPP 4700P
398	C210	5359-S010J472	CAP, PPP 4700P
399	C211	5359-S010J682	CAP, PPP 6800P
399	C212	5359-S010J682	CAP, PPP 6800P
401	C213	5359-S010J153	CAP, PPP .015μ
401	C214	5359-S010J153	CAP, PPP .015μ
405	C215	5359-S010J222	CAP, PPP 2200P
405	C216	5359-S010J222	CAP, PPP 2200P
403	C217	5359-S010J821	CAP, PPP 820P(ADJUST)
403	C218	5359-S010J821	CAP, PPP 820P(ADJUST)
404	C219	5359-S010J392	CAP, PPP 3900P
404	C220	5359-S010J392	CAP, PPP 3900P
414	C221	5359-S010J182	CAP, PPP 1800P
414	C222	5359-S010J182	CAP, PPP 1800P
405	C223	5359-S010J222	CAP, PPP 2200P
405	C224	5359-S010J222	CAP, PPP 2200P
406	C225	5359-S010J123	CAP, PPP .012μ
406	C226	5359-S010J123	CAP, PPP .012μ
407	C227	5354-124593	CAP, MYL .12μ
407	C228	5354-124593	CAP, MYL .12μ

RESISTORS

418	R201	5135-222522	RES, CBN 1/2P 2.2K
418	R202	5135-222522	RES, CBN 1/2P 2.2K
419	R203	5135-272522	RES, CBN 1/2P 2.7K
419	R204	5135-272522	RES, CBN 1/2P 2.7K
420	R205	5135-393522	RES, CBN 1/2P 39K
420	R206	5135-393522	RES, CBN 1/2P 39K
421	R207	5135-103522	RES, CBN 1/2P 10K
421	R208	5135-103522	RES, CBN 1/2P 10K
429	R213	5135-472522	RES, CBN 1/2P 4.7K
429	R214	5135-472522	RES, CBN 1/2P 4.7K
426	R215	5135-393522	RES, CBN 1/2P 39K
426	R216	5135-393522	RES, CBN 1/2P 39K
422	R217	5135-332522	RES, CBN 1/2P 3.3K
422	R218	5135-332522	RES, CBN 1/2P 3.3K
424	R219	5135-822522	RES, CBN 1/2P 8.2K
424	R220	5135-822522	RES, CBN 1/2P 8.2K
425	R221	5135-152522	RES, CBN 1/2P 1.5K
425	R222	5135-152522	RES, CBN 1/2P 1.5K
420	R225	5135-393522	RES, CBN 1/2P 39K
420	R226	5135-393522	RES, CBN 1/2P 39K
427	R227	5135-563522	RES, CBN 1/2P 56K
427	R228	5135-563522	RES, CBN 1/2P 56K
428	R229	5135-153522	RES, CBN 1/2P 15K
428	R230	5135-153522	RES, CBN 1/2P 15K
421	R231	5135-103522	RES, CBN 1/2P 10K
421	R232	5135-103522	RES, CBN 1/2P 10K
429	R233	5135-472522	RES, CBN 1/2P 4.7K
429	R234	5135-472522	RES, CBN 1/2P 4.7K
429	R235	5135-472522	RES, CBN 1/2P 4.7K
429	R236	5135-472522	RES, CBN 1/2P 4.7K
430	R237	5135-104522	RES, CBN 1/2P 100K
430	R238	5135-104522	RES, CBN 1/2P 100K
418	R239	5135-222522	RES, CBN 1/2P 2.2K
418	R240	5135-222522	RES, CBN 1/2P 2.2K
423	R241	5135-273522	RES, CBN 1/2P 27K
423	R242	5135-273522	RES, CBN 1/2P 27K
427	R243	5135-563522	RES, CBN 1/2P 56K
427	R244	5135-563522	RES, CBN 1/2P 56K
421	R245	5135-103522	RES, CBN 1/2P 10K
421	R246	5135-103522	RES, CBN 1/2P 10K
433	R247	5135-102522	RES, CBN 1/2P 1K
433	R248	5135-102522	RES, CBN 1/2P 1K
431	R249	5135-121522	RES, CBN 1/2P 120
431	R250	5135-121522	RES, CBN 1/2P 120
418	R251	5135-222522	RES, CBN 1/2P 2.2K
418	R252	5135-222522	RES, CBN 1/2P 2.2K
418	R253	5135-222522	RES, CBN 1/2P 2.2K
418	R254	5135-222522	RES, CBN 1/2P 2.2K
432	R255	5135-331522	RES, CBN 1/2P 330
432	R256	5135-331522	RES, CBN 1/2P 330
435	R257	5135-221522	RES, CBN 1/2P 220
435	R258	5135-221522	RES, CBN 1/2P 220
430	R259	5135-104522	RES, CBN 1/2P 100K
436	R261	5135-473522	RES, CBN 1/2P 47K
436	R262	5135-473522	RES, CBN 1/2P 47K
436	R263	5135-473522	RES, CBN 1/2P 47K
436	R264	5135-473522	RES, CBN 1/2P 47K
436	R265	5135-473522	RES, CBN 1/2P 47K
436	R266	5135-473522	RES, CBN 1/2P 47K
709	R752	5135-221522	RES, CBN 1/2P 220
710	R753	5135-472522	RES, CBN 1/2P 4.7K

Ser. No.	Ref. No.	Part No.	Description
710	R754	5135-472522	RES, CBN 1/2P 4.7K

INTEGRATED CIRCUITS

391	IC201	5653-UPC4570C	IC, LINEAR
664	IC703	5654-TC4051BP	IC, DIGITAL

TRANSISTORS

393	Q201	5613-C114YS	XISTOR, NPN R
393	Q202	5613-C114YS	XISTOR, NPN R
393	Q203	5613-C114YS	XISTOR, NPN R
393	Q204	5613-C114YS	XISTOR, NPN R
393	Q205	5613-C114YS	XISTOR, NPN R
393	Q206	5613-C114YS	XISTOR, NPN R
393	Q207	5613-C114YS	XISTOR, NPN R
393	Q208	5613-C114YS	XISTOR, NPN R
393	Q209	5613-C114YS	XISTOR, NPN R
393	Q210	5613-C114YS	XISTOR, NPN R
393	Q211	5613-C114YS	XISTOR, NPN R
393	Q212	5613-C114YS	XISTOR, NPN R
394	Q213	5613-2878(B)	XISTOR, NPN R
394	Q214	5613-2878(B)	XISTOR, NPN R
392	Q215	5613-C114TS	XISTOR, NPN R
392	Q216	5613-C114TS	XISTOR, NPN R
392	Q217	5613-C114TS	XISTOR, NPN R
392	Q218	5613-C114TS	XISTOR, NPN R
681	Q731	5611-A124ES	XISTOR, PNP R
683	Q756	5613-C114YS	XISTOR, NPN R
678	Q757	5613-C114TS	XISTOR, NPN R

COILS

395	L201	5932-11501	COIL CASE, 7
395	L202	5932-11501	COIL CASE, 7
395	L203	5932-11501	COIL CASE, 7
395	L204	5932-11501	COIL CASE, 7

CONTROLS

397	VR201	5101-S0801502	RES, SEMI FIX 5K
397	VR202	5101-S0801502	RES, SEMI FIX 5K

MISCELLANEOUS

835	CN203	4443-01701006	CONNECTOR
835	CN204	4443-01701006	CONNECTOR
799	CN205	4443-030185	CONNECTOR
799	CN206	4443-030185	CONNECTOR
799	CN207	4443-030185	CONNECTOR
783	TP201	4214-132	TERMINAL
783	TP202	4214-132	TERMINAL

PCB-4 POWER P. C. BOARD**CAPACITORS**

605	△ C1	5352-S010M103	CAP, MTL .01μ
606	C2	5352-S060K104	CAP, MTL .1μ
606	C3	5352-S060K104	CAP, MTL .1μ
606	C4	5352-S060K104	CAP, MTL .1μ
593	C5	5345-228D041	CAP, MINI ELE 2200μ/25V
593	C6	5345-228D041	CAP, MINI ELE 2200μ/25V
594	C7	5345-477C041	CAP, MINI ELE 470μ/16V
594	C8	5345-477C041	CAP, MINI ELE 470μ/16V
595	C9	5345-108C041	CAP, MINI ELE 1000μ/16V
595	C10	5345-108C041	CAP, MINI ELE 1000μ/16V
606	C11	5352-S060K104	CAP, MTL .1μ
597	C12	5345-477C041	CAP, MINI ELE 470μ/16V
595	C13	5345-108C041	CAP, MINI ELE 1000μ/16V
594	C14	5345-477C041	CAP, MINI ELE 470μ/16V
598	C15	5345-108C041	CAP, MINI ELE 1000μ/16V
596	C16	5341-109D0958	CAP, ELE 10000μ/25V
599	C17	5345-477E041	CAP, MINI ELE 470μ/35V
600	C18	5345-226F041	CAP, MINI ELE 22μ/50V
600	C51	5345-226F041	CAP, MINI ELE 22μ/50V
601	C52	5345-106F041	CAP, MINI ELE 10μ/50V
601	C53	5345-106F041	CAP, MINI ELE 10μ/50V
602	C54	5345-337C041	CAP, MINI ELE 330μ/16V
603	C71	5345-107B041	CAP, MINI ELE 100μ/10V
901	C801	5359-S010J103	CAP, PPP .01μ
906	C802	5345-106E041	CAP, MINI ELE 10μ/35V

Ser. No.	Ref. No.	Part No.	Description
----------	----------	----------	-------------

RESISTORS

042B	△ R1	5135-335522	RES, CBN 1/2P 3.3M
607	R3	5135-152522	RES, CBN 1/2P 1.5K
607	R4	5135-152522	RES, CBN 1/2P 1.5K
608	R5	5135-471522	RES, CBN 1/2P 470
608	R6	5135-471522	RES, CBN 1/2P 470
609	R7	5135-101522	RES, CBN 1/2P 100
609	R8	5135-101522	RES, CBN 1/2P 100
610	R9	5135-2R7522	RES, CBN 1/2P 2.7
610	R10	5135-2R7522	RES, CBN 1/2P 2.7
607	R11	5135-152522	RES, CBN 1/2P 1.5K
608	R12	5135-471522	RES, CBN 1/2P 470
609	R13	5135-101522	RES, CBN 1/2P 100
607	R15	5135-152522	RES, CBN 1/2P 1.5K
608	R16	5135-471522	RES, CBN 1/2P 470
609	R17	5135-101522	RES, CBN 1/2P 100
610	R18	5135-2R7522	RES, CBN 1/2P 2.7
611	R19	5135-221522	RES, CBN 1/2P 220
612	R20	5135-223522	RES, CBN 1/2P 22K
612	R21	5135-223522	RES, CBN 1/2P 22K
618	R51	5135-331522	RES, CBN 1/2P 330
619	R52	5135-562522	RES, CBN 1/2P 5.6K
620	R53	5135-564522	RES, CBN 1/2P 560K
621	R54	5135-102522	RES, CBN 1/2P 1K
621	R55	5135-102522	RES, CBN 1/2P 1K
622	R56	5135-104522	RES, CBN 1/2P 100K
623	R57	5135-103522	RES, CBN 1/2P 10K
624	R58	5135-182522	RES, CBN 1/2P 1.8K
618	R59	5135-331522	RES, CBN 1/2P 330
621	R71	5135-102522	RES, CBN 1/2P 1K
625	R72	5135-471522	RES, CBN 1/2P 470
623	R73	5135-103522	RES, CBN 1/2P 10K
621	R74	5135-102522	RES, CBN 1/2P 1K
916	△ R801	5102-1005116	RES, FUSE 10
918	R803	5135-103522	RES, CBN 1/2P 10K
919	R804	5135-150522	RES, CBN 1/2P 15
919	R805	5135-150522	RES, CBN 1/2P 15
919	R806	5135-150522	RES, CBN 1/2P 15
919	R807	5135-150522	RES, CBN 1/2P 15
918	R810	5135-103522	RES, CBN 1/2P 10K
932	R811	5174-S010F243	RES, MTL 1/4P 24K
928	R812	5174-S010F113	RES, MTL 1/4P 11K
917	R814	5135-222522	RES, CBN 1/2P 2.2K
920	R815	5135-223522	RES, CBN 1/2P 22K
917	R816	5135-222522	RES, CBN 1/2P 2.2K
920	R817	5135-223522	RES, CBN 1/2P 22K
921	R818	5135-471522	RES, CBN 1/2P 470
918	R819	5135-103522	RES, CBN 1/2P 10K
918	R820	5135-103522	RES, CBN 1/2P 10K
933	R821	5135-224522	RES, CBN 1/2P 220K

INTEGRATED CIRCUIT

873	IC801	5653-BA6229	IC, LINEAR
-----	-------	-------------	------------

TRANSISTORS

571	Q1	5612-1375	XISTOR, PNP A
572	Q2	5614-2012	XISTOR, NPN A
574	Q3	5613-2320(F)	XISTOR, NPN R
573	Q4	5611-999(F)	XISTOR, PNP R
574	Q5	5613-2320(F)	XISTOR, NPN R
573	Q6	5611-999(F)	XISTOR, PNP R
571	Q7	5612-1375	XISTOR, PNP A
574	Q8	5613-2320(F)	XISTOR, NPN R
571	Q10	5612-1375	XISTOR, PNP A
574	Q11	5613-2320(F)	XISTOR, NPN R
574	Q12	5613-2320(F)	XISTOR, NPN R
575	Q51	5611-999(F)	XISTOR, PNP R
576	Q71	5613-2320(F)	XISTOR, NPN R
577	Q72	5611-A124ES	XISTOR, PNP R
881	Q801	5613-C114YS	XISTOR, NPN R
879	Q802	5613-2925(T)	XISTOR, NPN R
876	Q803	5611-999(F)	XISTOR, PNP R
879	Q804	5613-2925(T)	XISTOR, NPN R
879	Q805	5613-2925(T)	XISTOR, NPN R
884	Q806	5613-1740S(S)	XISTOR, NPN R
886	Q807	5613-2320(F)	XISTOR, NPN R

Ser. No.	Ref. No.	Part No.	Description	Ser. No.	Ref. No.	Part No.	Description
886	Q808	5613-2320(F)	XISTOR, NPN R	858	R903	5135-221522	RES, CBN 1/2P 220
886	Q809	5613-2320(F)	XISTOR, NPN R	858	R904	5135-221522	RES, CBN 1/2P 220
DIODES				859	R905	5135-472522	RES, CBN 1/2P 4.7K
579	△ D1	5632-S5566B	DIODE, RECT	860	R906	5135-682522	RES, CBN 1/2P 6.8K
579	△ D2	5632-S5566B	DIODE, RECT	861	R907	5135-183522	RES, CBN 1/2P 18K
579	△ D3	5632-S5566B	DIODE, RECT	859	R908	5135-472522	RES, CBN 1/2P 4.7K
579	△ D4	5632-S5566B	DIODE, RECT	860	R909	5135-682522	RES, CBN 1/2P 6.8K
579	△ D7	5632-S5566B	DIODE, RECT	861	R910	5135-183522	RES, CBN 1/2P 18K
579	△ D8	5632-S5566B	DIODE, RECT	INTEGRATED CIRCUIT			
581	D9	5635-HZ12B2L	DIODE, ZENER	841	IC901	5654-MN187167	IC, DIGITAL
581	D10	5635-HZ12B2L	DIODE, ZENER	MISCELLANEOUS			
581	D11	5635-HZ12B2L	DIODE, ZENER	787	CN901	4443-0301140	CONNECTOR
582	D12	5635-HZ6B2L	DIODE, ZENER	788	CN902	4443-0601140	CONNECTOR
583	D13	5635-HZ22-2L	DIODE, ZENER	793	CN903	4443-05401030	CONNECTOR
584	D14	5635-RD5R1EB3	DIODE, ZENER	765	FL901	5722-058	TUBE DISPLAY
579	△ D15	5632-S5566B	DIODE, RECT	855	RC901	5212-S0307123	R COMPOSITE
579	△ D16	5632-S5566B	DIODE, RECT	845	RCV901	6143-00802	RECEIVE BLOCK
579	△ D17	5632-S5566B	DIODE, RECT	752	S901	4437-00704	SWITCH, PU-TC
579	△ D18	5632-S5566B	DIODE, RECT	752	S902	4437-00704	SWITCH, PU-TC
700	△ D51	5632-S5566B	DIODE, RECT	752	S903	4437-00704	SWITCH, PU-TC
700	△ D52	5632-S5566B	DIODE, RECT	752	S904	4437-00704	SWITCH, PU-TC
685	D53	5631-1S2473	DIODE, DET	752	S905	4437-00704	SWITCH, PU-TC
689	D54	5635-RD5R1EB2	DIODE, ZENER	752	S906	4437-00704	SWITCH, PU-TC
688	D55	5635-HZ11A2L	DIODE, ZENER	752	S907	4437-00704	SWITCH, PU-TC
700	D56	5632-S5566B	DIODE, RECT	752	S908	4437-00704	SWITCH, PU-TC
700	D57	5632-S5566B	DIODE, RECT	847	X901	5693-CST4MGW	OSC, CER
686	D58	5635-HZ16-2L	DIODE, ZENER	PCB-6 CONT SW-L P. C. BOARD			
687	D71	5635-HZ3B2	DIODE, ZENER	RESISTORS			
892	D801	5632-S5566B	DIODE, RECT	863	R911	5135-472522	RES, CBN 1/2P 4.7K
890	D802	5635-HZ5C2	DIODE, ZENER	864	R912	5135-682522	RES, CBN 1/2P 6.8K
888	D803	5635-HZ7C3	DIODE, ZENER	863	R913	5135-472522	RES, CBN 1/2P 4.7K
TRANSFORMERS				864	R914	5135-682522	RES, CBN 1/2P 6.8K
591	△ T1	5584-S9401	XFORMER, POWER BK	865	R915	5135-183522	RES, CBN 1/2P 18K
591B	△ T1	5584-S9402	XFORMER, POWER IB	MISCELLANEOUS			
CONTROLS				809	LCN901	4163-S0103500	CONNECTOR W/W
914	VR801	5101-S0801103	RES, SEMI FIX 10K	753	S909	4437-01301	SWITCH, PU-TC
914	VR802	5101-S0801103	RES, SEMI FIX 10K	753	S910	4437-01301	SWITCH, PU-TC
912	VR803	5101-S0801502	RES, SEMI FIX 5K	753	S911	4437-01301	SWITCH, PU-TC
MISCELLANEOUS				754	S912	4437-00704	SWITCH, PU-TC
797	CN801	4443-060185	CONNECTOR	753	S913	4437-01301	SWITCH, PU-TC
798	CN802	4443-070185	CONNECTOR	753	S914	4437-01301	SWITCH, PU-TC
798	CN803	4443-070185	CONNECTOR	754	S915	4437-00704	SWITCH, PU-TC
796	CN804	4443-050185	CONNECTOR	PCB-7 CONT SW-R P. C. BOARD			
796	CN805	4443-050185	CONNECTOR	RESISTORS			
614	△ F1	5732-801031	FUSE BK	867	R916	5135-472522	RES, CBN 1/2P 4.7K
614B	△ F1	5732-251030	FUSE IB	868	R917	5135-682522	RES, CBN 1/2P 6.8K
615	△ F2	5732-202031	FUSE BK	869	R918	5135-183522	RES, CBN 1/2P 18K
615B	△ F2	5732-202030	FUSE IB	MISCELLANEOUS			
613	△ HL1	4472-04501	HOLDER, FUSE	810	LCN902	4163-S0106800	CONNECTOR W/W
613	△ HL2	4472-04501	HOLDER, FUSE	843	LED901	5637-SEL2410E	LED
613	△ HL3	4472-04501	HOLDER, FUSE	843	LED902	5637-SEL2410E	LED
613	△ HL4	4472-04501	HOLDER, FUSE	755	S916	4437-01301	SWITCH, PU-TC
804	LCN801	4163-S0206101	CONNECTOR W/W	756	S917	4437-00704	SWITCH, PU-TC
803	LCN802	4163-S0205101	CONNECTOR W/W	755	S918	4437-01301	SWITCH, PU-TC
805	LCN803	4163-S0207101	CONNECTOR W/W	755	S919	4437-01301	SWITCH, PU-TC
908	RC701	5212-S0305273	R COMPOSITE	755	S920	4437-01301	SWITCH, PU-TC
907	RC702	5212-S0303273	R COMPOSITE	755	S921	4437-01301	SWITCH, PU-TC
751	△ SW1	4433-01301	SWITCH, PU-PW	PCB-5 FRONT P. C. BOARD			
041B	△ SW2	4411-00501102	SWITCH, ROTARY IB	CAPACITORS			
786	TM1	4214-122	TERMINAL	849	C901	5345-106D0356	CAP, MINI ELE 10μ/25V
786	TM2	4214-122	TERMINAL	852	C902	5359-S010J103	CAP, PPP .01μ
PCB-5 FRONT P. C. BOARD				850	C903	5345-476C0356	CAP, MINI ELE 47μ/16V
CAPACITORS				RESISTORS			
862	R901	5135-101522	RES, CBN 1/2P 100	862	R901	5135-101522	RES, CBN 1/2P 100
866	R902	5135-102522	RES, CBN 1/2P 1K	866	R902	5135-102522	RES, CBN 1/2P 1K
PCB-8 DOLBY P. C. BOARD				CAPACITORS			
361	C101	5353-101534	CAP, MCA 100P	361	C101	5353-101534	CAP, MCA 100P
361	C102	5353-101534	CAP, MCA 100P	357	C103	5345-106C0951	CAP, MINI ELE 10μ/16V
357	C103	5345-106C0951	CAP, MINI ELE 10μ/16V	357	C104	5345-106C0951	CAP, MINI ELE 10μ/16V
357	C104	5345-106C0951	CAP, MINI ELE 10μ/16V	358	C105	5345-227B0952	CAP, MINI ELE 220μ/10V
358	C105	5345-227B0952	CAP, MINI ELE 220μ/10V	358	C106	5345-227B0952	CAP, MINI ELE 220μ/10V
358	C106	5345-227B0952	CAP, MINI ELE 220μ/10V	362	C107	5359-6825851	CAP, PPP 6800P
362	C107	5359-6825851	CAP, PPP 6800P				

Ser. No.	Ref. No.	Part No.	Description	Ser. No.	Ref. No.	Part No.	Description
362	C108	5359-6825851	CAP, PPP 6800P	378	R124	5232-102J16P	RES, CBN 1/6P 1K
362	C109	5359-6825851	CAP, PPP 6800P	379	R125	5232-822J16P	RES, CBN 1/6P 8.2K
362	C110	5359-6825851	CAP, PPP 6800P	379	R126	5232-822J16P	RES, CBN 1/6P 8.2K
357	C111	5345-106C0951	CAP, MINI ELE 10μ/16V	382	R129	5232-101J16P	RES, CBN 1/6P 100
357	C112	5345-106C0951	CAP, MINI ELE 10μ/16V	382	R130	5232-101J16P	RES, CBN 1/6P 100
365	C113	5359-S010J123	CAP, PPP .012μ	381	R131	5232-561J16P	RES, CBN 1/6P 560
365	C114	5359-S010J123	CAP, PPP .012μ	381	R132	5232-561J16P	RES, CBN 1/6P 560
366	C115	5359-S010J272	CAP, PPP 2700P	383	R133	5232-103J16P	RES, CBN 1/6P 10K
366	C116	5359-S010J272	CAP, PPP 2700P	383	R134	5232-103J16P	RES, CBN 1/6P 10K
360	C117	5345-477C041	CAP, MINI ELE 470μ/16V	384	R135	5232-392J16P	RES, CBN 1/6P 3.9K
359	C118	5345-336C041	CAP, MINI ELE 33μ/16V	384	R136	5232-392J16P	RES, CBN 1/6P 3.9K
640	C501	5345-106C0951	CAP, MINI ELE 10μ/16V	383	R139	5232-103J16P	RES, CBN 1/6P 10K
640	C502	5345-106C0951	CAP, MINI ELE 10μ/16V	383	R140	5232-103J16P	RES, CBN 1/6P 10K
640	C505	5345-106C0951	CAP, MINI ELE 10μ/16V	385	R141	5232-104J16P	RES, CBN 1/6P 100K
640	C506	5345-106C0951	CAP, MINI ELE 10μ/16V	385	R142	5232-104J16P	RES, CBN 1/6P 100K
644	C507	5359-S010J222	CAP, PPP 2200P	386	R148	5135-4R7522	RES, CBN 1/2P 4.7
644	C508	5359-S010J222	CAP, PPP 2200P	387	R149	5135-102522	RES, CBN 1/2P 1K
644	C509	5359-S010J222	CAP, PPP 2200P	654	R501	5232-221J16P	RES, CBN 1/6P 220
644	C510	5359-S010J222	CAP, PPP 2200P	654	R502	5232-221J16P	RES, CBN 1/6P 220
642	C511	5354-564593	CAP, MYL .56μ	654	R503	5232-221J16P	RES, CBN 1/6P 220
642	C512	5354-564593	CAP, MYL .56μ	654	R504	5232-221J16P	RES, CBN 1/6P 220
643	C513	5354-334593	CAP, MYL .33μ	649	R507	5232-243J16P	RES, CBN 1/6P 24K
643	C514	5354-334593	CAP, MYL .33μ	649	R508	5232-243J16P	RES, CBN 1/6P 24K
640	C515	5345-106C0951	CAP, MINI ELE 10μ/16V	650	R509	5232-561J16P	RES, CBN 1/6P 560
640	C516	5345-106C0951	CAP, MINI ELE 10μ/16V	650	R510	5232-561J16P	RES, CBN 1/6P 560
641	C517	5345-227B041	CAP, MINI ELE 220μ/10V	651	R511	5232-273J16P	RES, CBN 1/6P 27K
641	C518	5345-227B041	CAP, MINI ELE 220μ/10V	657	R512	5232-102J16P	RES, CBN 1/6P 1K
667	C519	5345-476D041	CAP, MINI ELE 47μ/25V	655	R517	5232-223J16P	RES, CBN 1/6P 22K
639	C527	5345-106C0951	CAP, MINI ELE 10μ/16V	652	R518	5232-123J16P	RES, CBN 1/6P 12K
639	C528	5345-106C0951	CAP, MINI ELE 10μ/16V	648	R519	5135-682522	RES, CBN 1/2P 6.8K
640	C531	5345-106C0951	CAP, MINI ELE 10μ/16V	648	R520	5135-682522	RES, CBN 1/2P 6.8K
640	C532	5345-106C0951	CAP, MINI ELE 10μ/16V	647	R521	5135-392522	RES, CBN 1/2P 3.9K
644	C533	5359-S010J222	CAP, PPP 2200P	647	R522	5135-392522	RES, CBN 1/2P 3.9K
644	C534	5359-S010J222	CAP, PPP 2200P	654	R527	5232-221J16P	RES, CBN 1/6P 220
644	C535	5359-S010J222	CAP, PPP 2200P	654	R528	5232-221J16P	RES, CBN 1/6P 220
644	C536	5359-S010J222	CAP, PPP 2200P	654	R529	5232-221J16P	RES, CBN 1/6P 220
642	C537	5354-564593	CAP, MYL .56μ	654	R530	5232-221J16P	RES, CBN 1/6P 220
642	C538	5354-564593	CAP, MYL .56μ	649	R533	5232-243J16P	RES, CBN 1/6P 24K
643	C539	5354-334593	CAP, MYL .33μ	649	R534	5232-243J16P	RES, CBN 1/6P 24K
643	C540	5354-334593	CAP, MYL .33μ	650	R535	5232-561J16P	RES, CBN 1/6P 560
640	C541	5345-106C0951	CAP, MINI ELE 10μ/16V	650	R536	5232-561J16P	RES, CBN 1/6P 560
640	C542	5345-106C0951	CAP, MINI ELE 10μ/16V	651	R537	5232-273J16P	RES, CBN 1/6P 27K
641	C543	5345-227B041	CAP, MINI ELE 220μ/10V	657	R538	5232-102J16P	RES, CBN 1/6P 1K
641	C544	5345-227B041	CAP, MINI ELE 220μ/10V	655	R543	5232-223J16P	RES, CBN 1/6P 22K
667	C545	5345-476D041	CAP, MINI ELE 47μ/25V	652	R544	5232-123J16P	RES, CBN 1/6P 12K
639	C551	5345-106C0951	CAP, MINI ELE 10μ/16V	648	R545	5135-682522	RES, CBN 1/2P 6.8K
639	C552	5345-106C0951	CAP, MINI ELE 10μ/16V	648	R546	5135-682522	RES, CBN 1/2P 6.8K
639	C553	5345-106C0951	CAP, MINI ELE 10μ/16V	647	R547	5135-392522	RES, CBN 1/2P 3.9K
639	C554	5345-106C0951	CAP, MINI ELE 10μ/16V	647	R548	5135-392522	RES, CBN 1/2P 3.9K
645	C557	5359-S010J182	CAP, PPP 1800P	657	R551	5232-102J16P	RES, CBN 1/6P 1K
645	C558	5359-S010J182	CAP, PPP 1800P	657	R552	5232-102J16P	RES, CBN 1/6P 1K
644	C559	5359-S010J222	CAP, PPP 2200P	657	R553	5232-102J16P	RES, CBN 1/6P 1K
644	C560	5359-S010J222	CAP, PPP 2200P	657	R554	5232-102J16P	RES, CBN 1/6P 1K
RESISTORS				653	R557	5232-332J16P	RES, CBN 1/6P 3.3K
368	R101	5232-470J16P	RES, CBN 1/6P 47	653	R558	5232-332J16P	RES, CBN 1/6P 3.3K
368	R102	5232-470J16P	RES, CBN 1/6P 47	656	R559	5232-105J16P	RES, CBN 1/6P 1M
369	R105	5178-223481	RES, MTL 1/6P 22K	656	R560	5232-105J16P	RES, CBN 1/6P 1M
369	R106	5178-223481	RES, MTL 1/6P 22K	656	R561	5232-105J16P	RES, CBN 1/6P 1M
370	R107	5178-331481	RES, MTL 1/6P 330	646	R562	5232-105J16P	RES, CBN 1/6P 1M
370	R108	5178-331481	RES, MTL 1/6P 330	646	R563	5232-103J16P	RES, CBN 1/6P 10K
371	R109	5232-224J16P	RES, CBN 1/6P 220K	658	R564	5232-103J16P	RES, CBN 1/6P 10K
371	R110	5232-224J16P	RES, CBN 1/6P 220K	630	R565	5232-104J16P	RES, CBN 1/6P 100K
372	R111	5232-332J16P	RES, CBN 1/6P 3.3K	659	R566	5135-104522	RES, CBN 1/2P 100K
372	R112	5232-332J16P	RES, CBN 1/6P 3.3K	659	R569	5232-563J16P	RES, CBN 1/6P 56K
373	R113	5232-562J16P	RES, CBN 1/6P 5.6K	652	R570	5232-563J16P	RES, CBN 1/6P 56K
373	R114	5232-562J16P	RES, CBN 1/6P 5.6K	652	R571	5232-123J16P	RES, CBN 1/6P 12K
368	R115	5232-470J16P	RES, CBN 1/6P 47	652	R572	5232-123J16P	RES, CBN 1/6P 12K
368	R116	5232-470J16P	RES, CBN 1/6P 47	670	R573	5232-222J16P	RES, CBN 1/6P 2.2K
375	R117	5232-681J16P	RES, CBN 1/6P 680	670	R574	5232-222J16P	RES, CBN 1/6P 2.2K
375	R118	5232-681J16P	RES, CBN 1/6P 680	716	R705	5232-103J16P	RES, CBN 1/6P 10K
376	R119	5232-684J16P	RES, CBN 1/6P 680K	716	R706	5232-103J16P	RES, CBN 1/6P 10K
376	R120	5232-684J16P	RES, CBN 1/6P 680K	717	R725	5232-473J16P	RES, CBN 1/6P 47K
377	R121	5232-101J16P	RES, CBN 1/6P 100	717	R726	5232-473J16P	RES, CBN 1/6P 47K
377	R122	5232-101J16P	RES, CBN 1/6P 100	INTEGRATED CIRCUITS			
378	R123	5232-102J16P	RES, CBN 1/6P 1K	631	IC501	5653-CXA1330S	IC, LINEAR

Ser. No.	Ref. No.	Part No.	Description
631	IC551	5653-CXA1330S	IC, LINEAR
661	IC701	5654-TC4066BP	IC, DIGITAL
663	IC702	5654-LC4966	IC, DIGITAL

TRANSISTORS

347	Q101	5613-1775(F)	XISTOR, NPN R
347	Q102	5613-1775(F)	XISTOR, NPN R
347	Q103	5613-1775(F)	XISTOR, NPN R
347	Q104	5613-1775(F)	XISTOR, NPN R
348	Q105	5613-2320L(F)	XISTOR, NPN R
348	Q106	5613-2320L(F)	XISTOR, NPN R
349	Q107	5613-C114YS	XISTOR, NPN R
349	Q108	5613-C114YS	XISTOR, NPN R
350	Q109	5613-2878(B)	XISTOR, NPN R
350	Q110	5613-2878(B)	XISTOR, NPN R
352	Q112	5613-2320(F)	XISTOR, NPN R
634	Q505	5613-C114YS	XISTOR, NPN R
633	Q506	5611-A114YS	XISTOR, PNP R
632	Q507	5611-950(Y)	XISTOR, PNP R
635	Q508	5613-2120(Y)	XISTOR, NPN R
634	Q531	5613-C114YS	XISTOR, NPN R
633	Q532	5611-A114YS	XISTOR, PNP R
632	Q533	5611-950(Y)	XISTOR, PNP R
635	Q534	5613-2120(Y)	XISTOR, NPN R
669	Q551	5613-2320L(F)	XISTOR, NPN R
669	Q552	5613-2320L(F)	XISTOR, NPN R
634	Q553	5613-C114YS	XISTOR, NPN R
634	Q554	5613-C114YS	XISTOR, NPN R
634	Q555	5613-C114YS	XISTOR, NPN R
634	Q556	5613-C114YS	XISTOR, NPN R
634	Q560	5613-C114YS	XISTOR, NPN R
633	Q561	5611-A114YS	XISTOR, PNP R
666	Q705	5613-2878(B)	XISTOR, NPN R
666	Q706	5613-2878(B)	XISTOR, NPN R
668	Q721	5611-A124ES	XISTOR, PNP R
668	Q722	5611-A124ES	XISTOR, PNP R
679	Q723	5613-C124ES	XISTOR, NPN R
679	Q724	5613-C124ES	XISTOR, NPN R
690	Q730	5613-C114TS	XISTOR, NPN R

DIODES

353	D101	5635-HZ11B2L	DIODE, ZENER
345	D104	5631-1SS133	DIODE, DET

COILS

354	L101	5995-S160J472	COIL W/CORE
354	L102	5995-S160J472	COIL W/CORE

CONTROLS

355	VR101	5101-S0801203	RES, SEMI FIX 20K
355	VR102	5101-S0801203	RES, SEMI FIX 20K
356	VR103	5101-S0801501	RES, SEMI FIX 500
356	VR104	5101-S0801501	RES, SEMI FIX 500
638	VR551	5101-S0801103	RES, SEMI FIX 10K
638	VR552	5101-S0801103	RES, SEMI FIX 10K

MISCELLANEOUS

833	CN501	4443-01701017	CONNECTOR
839	CN502	4443-01701016	CONNECTOR
637	LC501	5214-13701	LC COMPOSITE
637	LC502	5214-13701	LC COMPOSITE
636	LC503	5214-13801	LC COMPOSITE
636	LC504	5214-13801	LC COMPOSITE
785	TP101	4214-132	TERMINAL
785	TP102	4214-132	TERMINAL

PCB-9 REC MUTE P. C. BOARD**RESISTORS**

720	R779	5232-223J16P	RES, CBN 1/6P 22K
-----	------	--------------	-------------------

TRANSISTOR

693	Q763	5613-C124ES	XISTOR, NPN R
694	Q764	5611-C124ES	XISTOR, PNP R

Ser. No.	Ref. No.	Part No.	Description
		DIODES	
536	D711	5631-1SS133	DIODE, DET
536	D712	5631-1SS133	DIODE, DET
536	D713	5631-1SS133	DIODE, DET
536	D714	5631-1SS133	DIODE, DET

ABBREVIATIONS IN PARTS LIST**CAPACITORS**

CAP, MINI ELE	: Electrolytic
CAP, CER	: Ceramic
CAP, PPP	: Polypropylene
CAP, MYL	: Mylar
CAP, MCA	: Mica
470μ	: 470μF
6800P	: 6800pF
.047μ	: 0.047μF

RESISTORS

RES, CBN	1/6P : Carbon 1/6W
	2.2K : 2.2kΩ
	220 : 220Ω
RES, FUSE	: Fuse
RES, CEM	5P : Cement 5W
RES, MTL	1P : Metal 1W

TRANSISTORS

XISTOR	: Transistor
FET	: Field Effect Transistor

CONTROLS

RES, V CBN	: Variable Carbon Resistor
RES, SEMI FIX	: Semi - fixed Resistors

CHASSIS MISCELLANEOUS

766	△ P1	4161-71151	CORD W/PLUG BK
766B	△ P1	4161-7256	CORD W/PLUG IB
767		4161-71184	CORD W/PLUG, RCA TYPE (ACCESSORY) (x2)
789	LUG1	4211-4	LUG, CABINET FRONT
789	LUG2	4211-4	LUG, CABINET FRONT
814	JL901	4242-S0330151	JUMPER LEAD

PACKAGE PARTS LIST


021B	1756-03108	LABEL (x2) IB
022B	1756-06304	LABEL IB
109	1111-J30355	OWNER GUIDE BK
109B	1111-J30356	OWNER GUIDE IB
110	1113-02501	OWNER CARD BK
112	1116-03801	WARRANTY CARD BK
113	1119-04501	ATTACH SHEET, SERVICE STATION BK
114	1119-01201	ATTACH SHEET, SAFETY BK
117A	1221-30205	CARTON BOX
118	1222-7384	CUSHION, R
119	1222-7385	CUSHION, L
121	1223-R0220055	SOFT SHEET, SET FRONT
122	1223-00403012	SOFT SHEET, CASS. LID (x2)
123	1241-R0160600	POLYETHY BAG, SET
124	1241-R0123350	POLYETHY BAG, OG
768	6142-02707	CONTROL UNIT
769	4191-0355	BATTERY, DAY

NOTE:


△ SAFETY RELATED COMPONENT. USE ONLY EXACT REPLACEMENT PART AS SPECIFIED.

IC BLOCK DIAGRAM


IC301, IC302 : μ PC1297CA
Dolby HX Pro

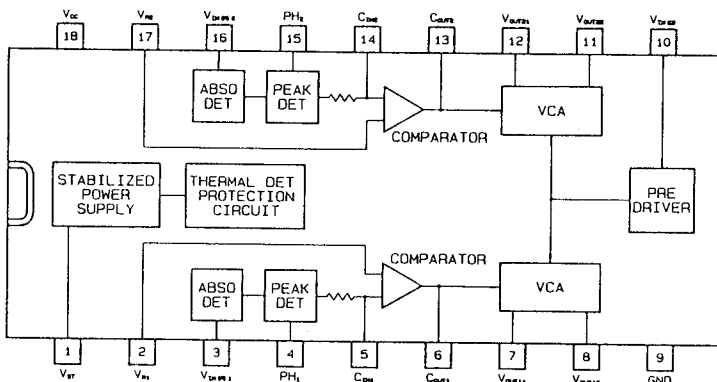


IC402 : BA6138
Signal Level Meter

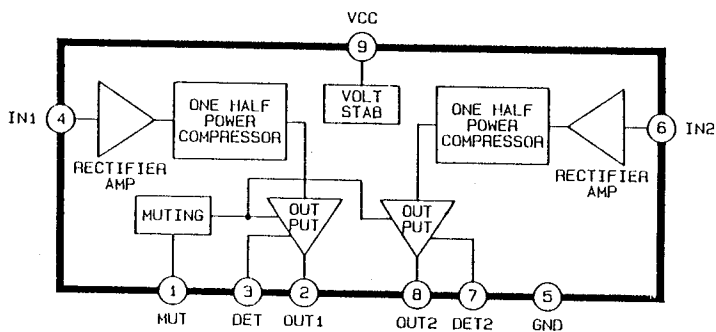


IC801, 802 : BA6229
Motor Driver

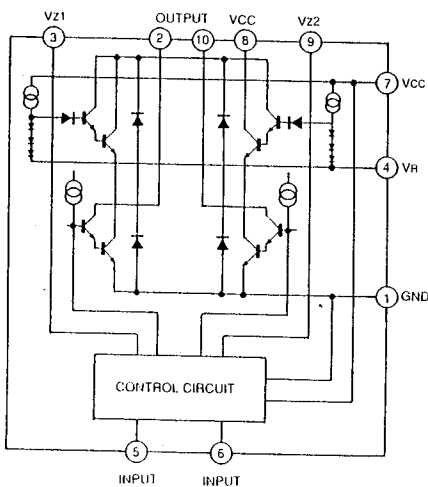


IC703 : TC4051BP

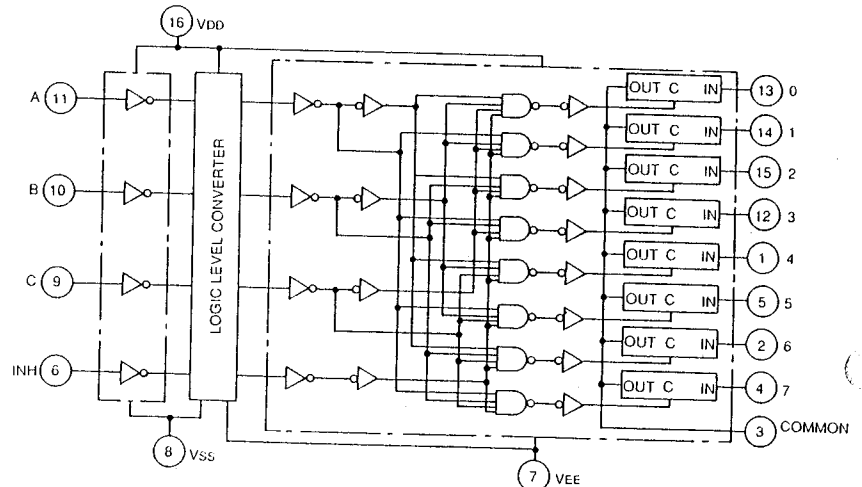

IC501, IC551 : CXA1330S
Dolby B/C NR

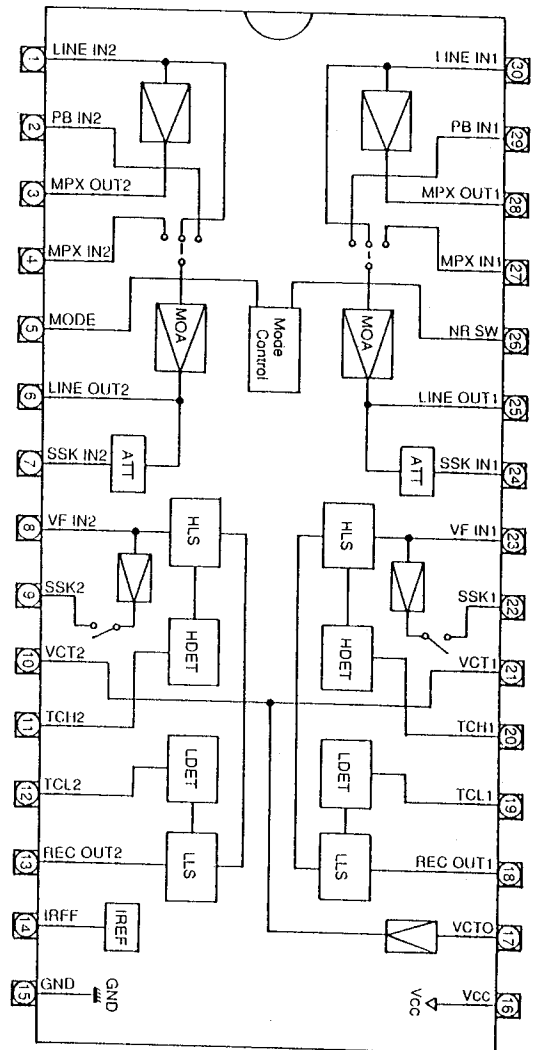

IC751 : MN15542 Logic Control Block

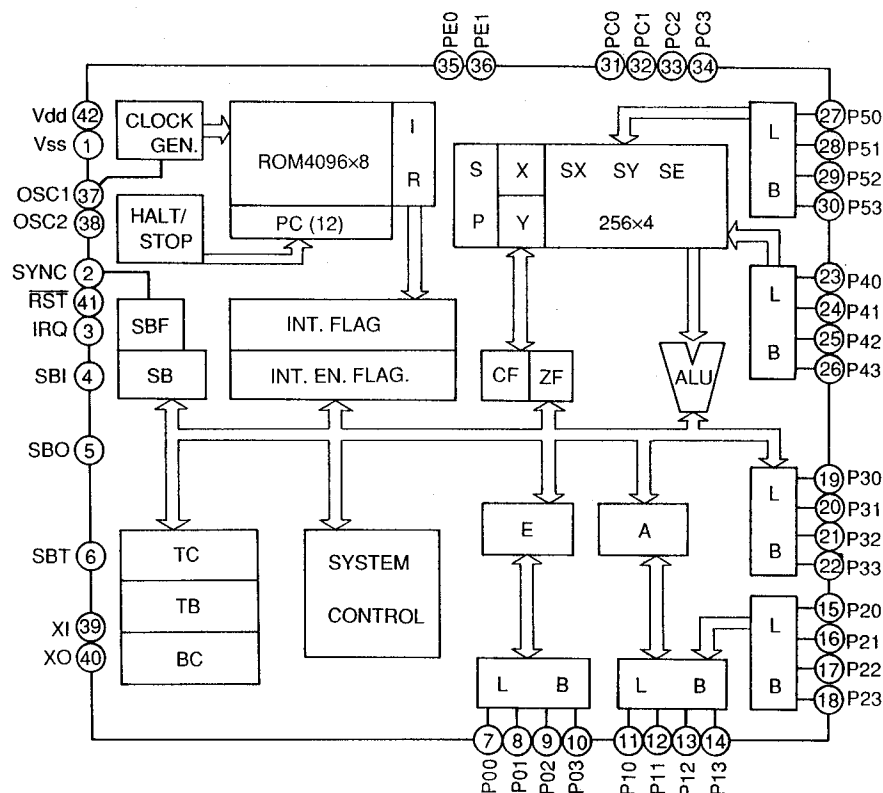


TERMINAL FUNCTIONS

NO.	Name	Functional Name	I/O	Description	NO.	Name	Functional Name	I/O	Description
1	Vss	Vss		GND	22	P33	LINE MUTE	0	Line mute output
2	SYNC			Not used	23	P40	SEC-RPC	0	SEC reel motor drive voltage change-over
3	IRQ	STB IN	I	STB input from MAIN	24	P41	SEC-RM2	0	SEC reel motor reverse drive output
4	SBI	DATA IN	I	Data input from MAIN	25	P42	SEC-RM1	0	SEC reel motor forward drive output
5					26	P43	SEC-SOLP	0	SEC solenoid retaining output
6	SBT	CLK IN/OUT	I/O	Clock input/output for data communication with SUB	27	P50	SEC-SOL	0	SEC solenoid trigger output
7	P00	SEC-RE MUTE	0	SEC playback mute output	28	P51	SEC-CPM	0	SEC capstan motor drive output
8	P01	SEC-REC MUTE	0	SEC REC mute output	29	P52	SEC-MMS	0	SEC capstan motor rpm change-over
9	P02	SEC-REC	0	SEC REC change-over output	30	P53	HI SPD	0	EQ change-over at high-speed copy
10	P03	SEC-BIAS	0	SEC bias drive output	31	PC0	PRI-DOLBY C	0	PRI Dolby C drive output
11	P10	PRI-PB MUTE	0	PRI playback mute output	32	PC1	PRI-DOLBY B	0	PRI Dolby B drive output
12	P11	PRI-REC MUTE	0	PRI recording mute output	33	PC2	PRI-MPX	0	PRI MPX filter drive output
13	P12	PRI-REC	0	PRI recording mute change-over	34	PC3	SEC-DOLBY C	0	SEC Dolby C drive output
14	P13	PRI-BIAS	0	PRI bias drive output	35	PE0	SEC-DOLBY B	0	SEC Dolby B drive output
15	P20	PRI-RPC	0	PRI reel motor drive voltage change-over	36	PE1	BUSY OUT	0	
16	P21	PRI-RM2	0	PRI reel motor reverse drive output	37	OSC1	OSC1		Ceramic resonator connection
17	P22	PRI-RM2	0	PRI reel motor forward DRIVE output	38	OSC2	OSC2		Transmitting frequency : 4.0 MHz
18	P30	PRI-SOLP	0	PRI solenoid retaining power	39	XI			Not used
19	P23	PRI-SOL	0	PRI solenoid trigger output	40	XO			
20	P31	PRI-CPM	0	PRI capstan motor drive output	41	RST	RESET	I	Reset
21	P32	PRI-MMS	0	PRI capstan motor rpm change-over	42	Vdd	Vdd		5V DC power connection

IC901 : MN187167

Main Controller

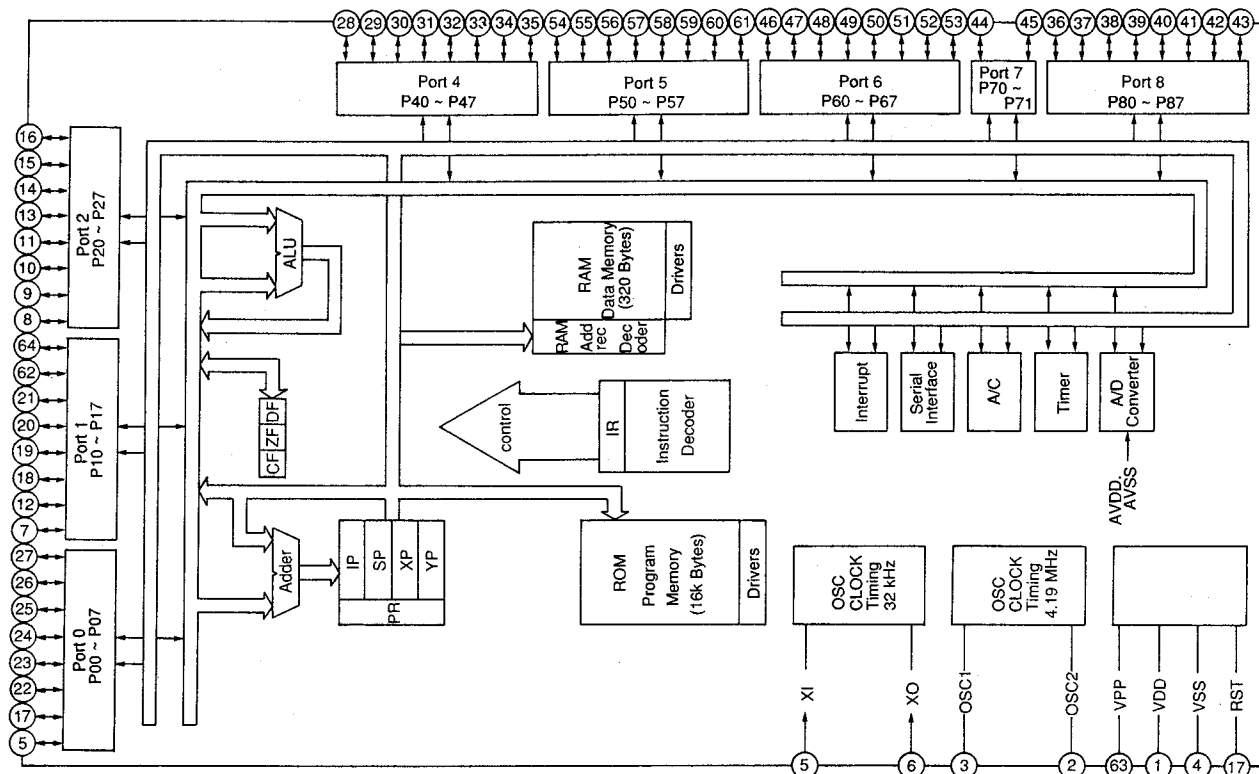

TERMINAL FUNCTIONS

NO.	Name	Functional Name	I/O	Description	NO.	Name	Functional Name	I/O	Description	NO.	Name	Functional Name	I/O	Description
1	Vdd	Vdd		5V DC power supply	22	P05	R-SI	I	Remote control input	39	P84	S. R. LED	O	H when SYNC. REVERSE LED is on
2	OSC	OSC OUT		Ceramic resonator connection Transmitting frequency : 4.0 MHz	23	P04	VOLT-DN	I	Power OFF detection ; L when OFF	40	P83	A. P. LED	O	H when AUTO PAUSE LED is on
3	OSC	OSC IN			24	P03	MS GAIN	I	MS amplifier gain control ; H when the gain is small	41	P82	G0	O	FL display grid drive output
4	Vss	Vss		GND	25	P02	CLK IN/OUT	I/O	Clock input/output terminal for data communication with SUB	42	P81	G1	O	
5	P06	BUSY IN	I	BUSY IN	26	P01	DATA IN	I	Serial data input from SUB	43	P80	G2	O	
6	X0			Not used	27	P00	DATA OUT	O	Serial data output to SUB	44	P71	G3	O	
7	P17	SYNC. REV. KEY	I	SYNC. REVERSE key input	28	P47	SEC-F. REC	I	SEC tape front hook detection ; L when REC enabled	45	P70	G4	O	
12	P16	A-PAUSE KEY	I	AUTO PAUSE key input	29	P46	SEC-R. REC	I	SEC tape rear hook detection	46	P67	G5	O	FL display anode drive output
8	AD7	KEY IN 5	I	Judging which key has been pressed by DC voltage detection with an A/D converter	30	P45	PRI-REEL 2	I	PRI right reel pulse input	50	P63	a	O	
9	AD6	KEY IN 4	I		31	P44	PRI-REEL 1	I	PRI left reel pulse input	51	P62	b	O	
10	AD5	KEY IN 3	I		32	P43	PRI-PACK DET	I	PRI pack detection	52	P61	c	O	
11	AD4	KEY IN 2	I		33	P42	PRI-QUICK DET	I	PRI quick photo detection	53	P60	d	O	
13	AD3	KEY IN 1	I		34	P41	PRI-R. REC	I	PRI tape rear hook detection	54	P57	e	O	
14	AD2	MS IN	I	A/D input port for MS detection	35	P40	PRI-F. REC	I	PRI tape front hook detection	55	P56	f	O	
15	AD1	METER R	I	Level meter right channel input	36	P87	STB OUT	O	STB output to SUB	56	P55	g	O	
16	AD0	METER L	I	Level meter left channel input	37	P86	COPY	O	H when copying from SEC to PRI	57	P54	h	O	
17	RST	RESET	I	Reset	38	P85	SEC	O	Voice output to LINE OUT and MS amplifier: H when SEC output and L when PRI output	58	P53	i	O	
18	P15	SEC-REEL 2	I	SEC right reel pulse input						59	P52	j	O	
19	P14	SEC-REEL 1	I	SEC left reel pulse input						60	P51	k	O	
20	P13	SEC-PACK DET	I	SEC pack detection ; L when a cassette is present						61	P50	l	O	
21	P12	SEC-QUICK DET	I	SEC quick photo detection L at the leader tape position						62	P11	INI SET B	I	Initial setting SW B connection
										63	Vpp	Vpp		Negative voltage load terminal for FL
										64	P10	INI SET A		Initial setting SW A connection

 
SCHEMATIC DIAGRAM (1)

NOTES:


1. ALL RESISTANCES VALUES ARE IN Ω
k Ω = 1000 Ω , M Ω = 1000k Ω
2. THE WATTAGE OF RESISTORS IS 1/2W UNLESS

OTHERWISE NOTED.


3. ALL CAPACITANCES VALUES ARE IN μ F UNLESS OTHERWISE NOTED. P = μ F.
4. V : DC VOLTAGE AT NO SIGNAL

Page 31
5/21

Type	R1	R2
DTC114YS	10K	47K
DTC124ES	22K	22K

 


Type	R1	R2
DTA114YS	10K	10K
DTA124ES	22K	22K
DTA143ES	4.7K	4.7K

 

Type	R1
DTC114TS	10K

PCB-5 FRONT P. C. BOARD

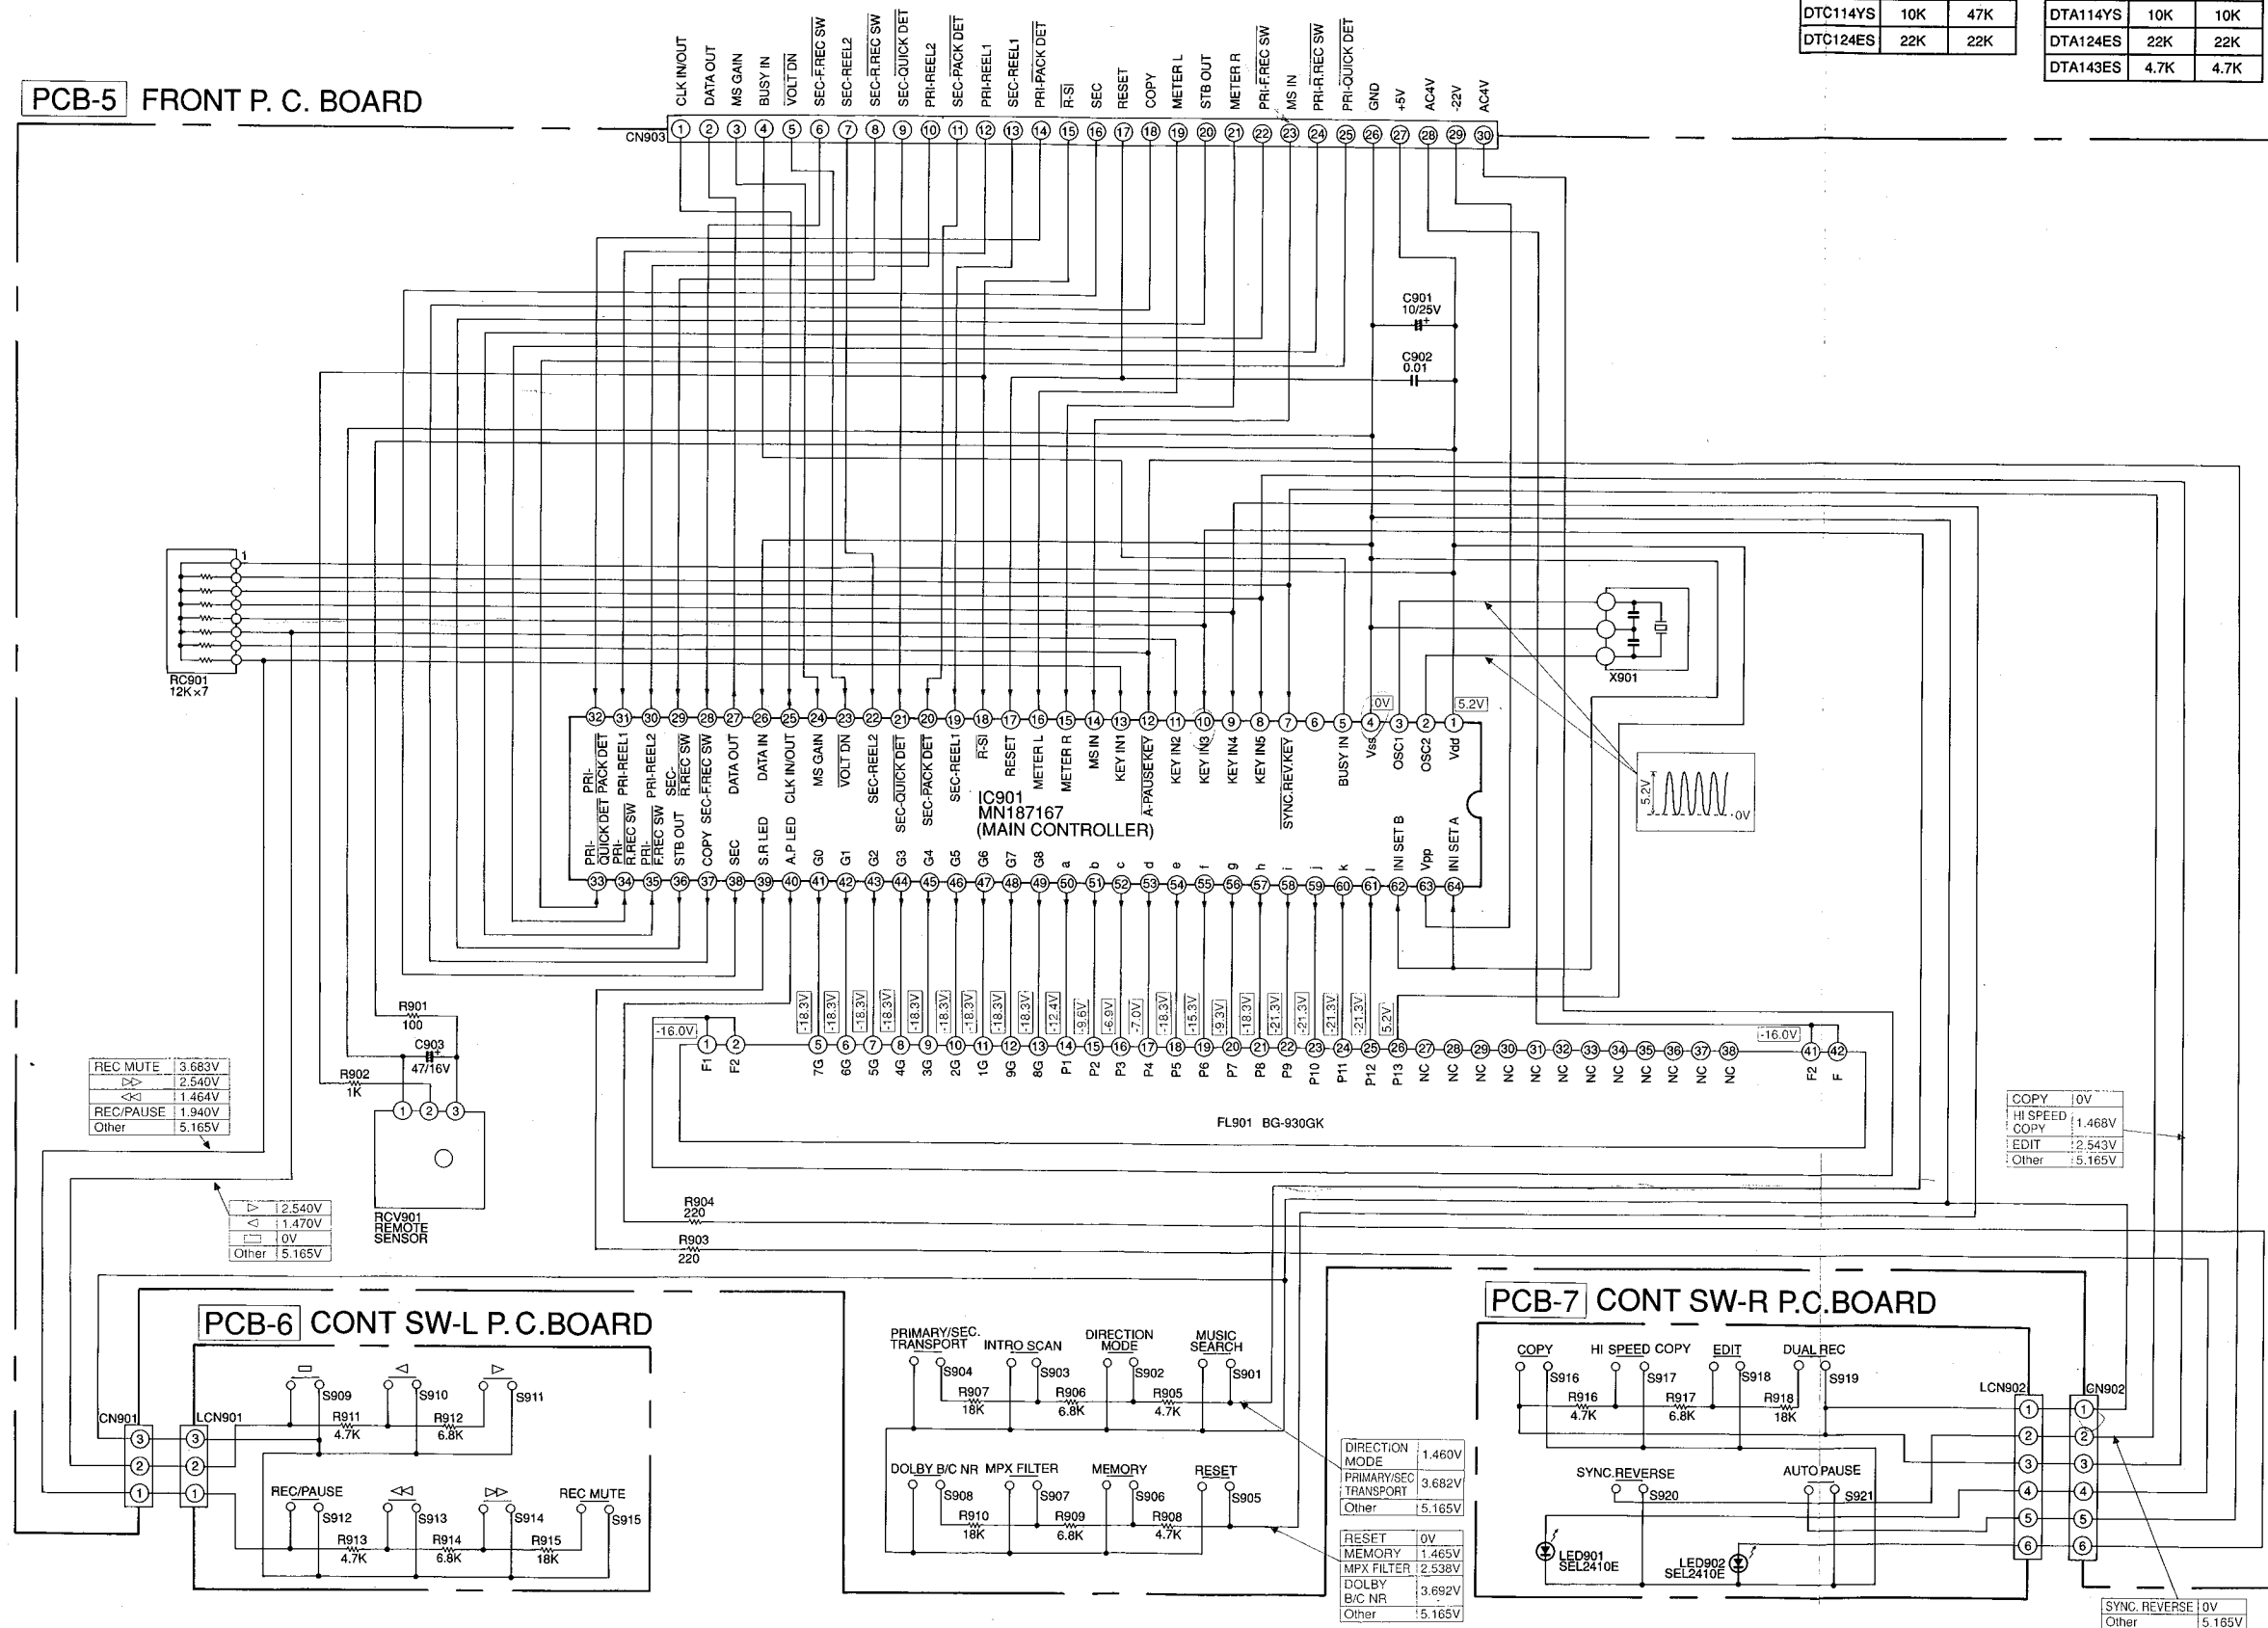



REC MUTE	3.683V
>>	2.540V
<<	1.468V
REC/PAUSE	1.940V
Other	5.165V

>	2.540V
<	1.470V
<>	0V
Other	5.165V

RCV901
REMOTE
SENSOR


COPY	10V
HI SPEED	1.468V
COPY	2.543V
EDIT	2.543V
Other	5.165V

PCB-6 CONT SW-L P. C. BOARD

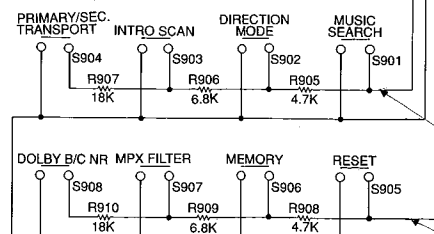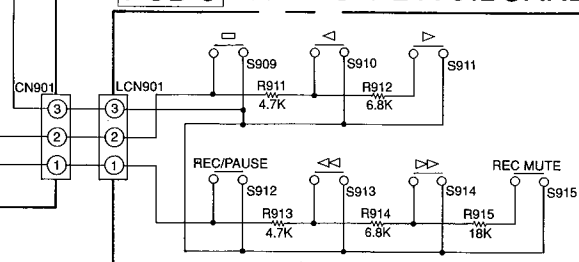

DIRECTION	1.460V
MODE	1.460V
PRIMARY/SEC	3.682V
TRANSPORT	5.165V
Other	5.165V
RESET	0V
MEMORY	1.465V
MPX FILTER	2.538V
DOLBY	3.692V
B/C NR	5.165V
Other	5.165V

PCB-7 CONT SW-R P. C. BOARD

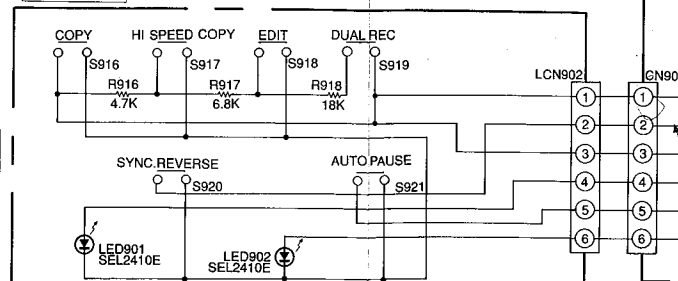

SYNC REVERSE	10V
Other	5.165V

SCHEMATIC DIAGRAM (1)

NOTES:

1. ALL RESISTANCES VALUES ARE IN Ω
k Ω = 1000 Ω , M Ω = 1000k Ω
2. THE WATTAGE OF RESISTORS IS 1/2W UNLESS

OTHERWISE NOTED.

3. ALL CAPACITANCES VALUES ARE IN μ F UNLESS OTHERWISE NOTED. P = μ F.
4. V : DC VOLTAGE AT NO SIGNAL

Page 31




PCB-5 FRONT P. C. BOARD





REC MUTE	3.683V
<>	2.540V
<<	1.464V
REC/PAUSE	1.940V
Other	5.165V

>	2.540V
>>	1.470V
>>>	0V
Other	5.165V

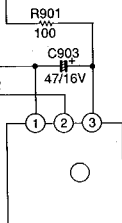

PCB-6 CONT SW-L P.C. BOARD

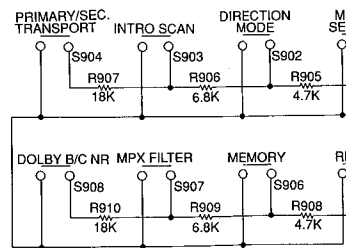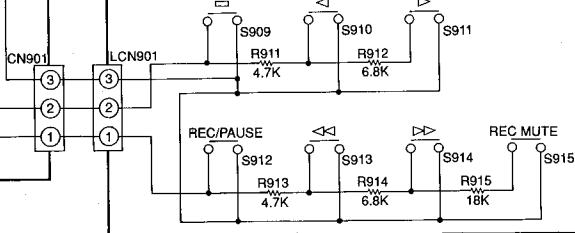


F

G


H

I

 
J




Type	R1	R2
DTC114YS	10K	47K
DTC124ES	22K	22K

 

Type	R1	R2
DTA114YS	10K	10K
DTA124ES	22K	22K
DTA143ES	4.7K	4.7K

 


Type	R1
DTC114TS	10K

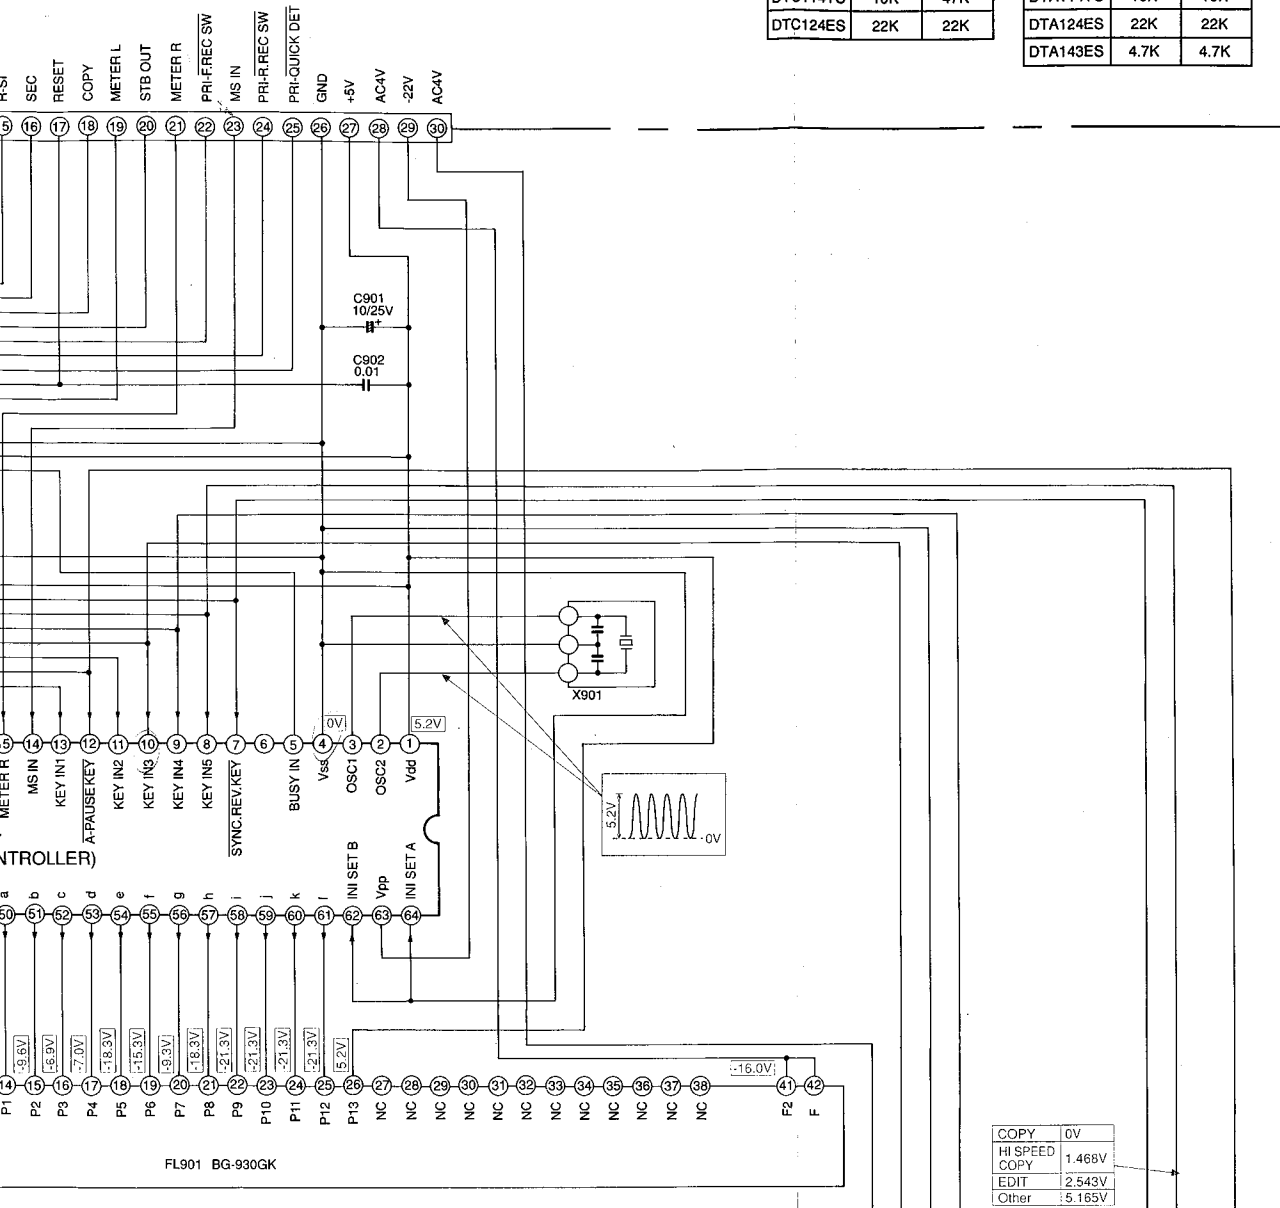

COPY	0V
HI SPEED COPY	1.468V
EDIT	2.543V
Other	5.165V

PCB-7 CONT SW-R P.C.BOARD

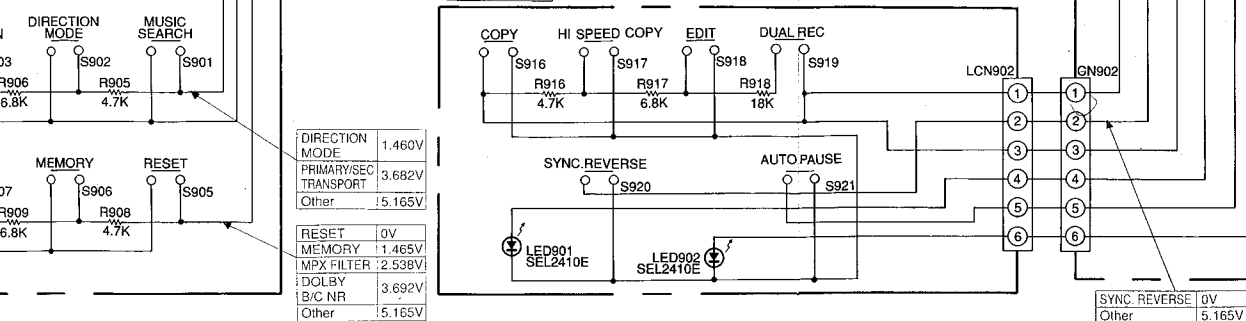


DIRECTION MODE	1.460V
PRIMARY/SEC TRANSPORT	3.682V
Other	5.165V

RESET	0V
MEMORY	1.465V
MPX FILTER	2.538V
DOLBY B/C NR	3.692V
Other	5.165V

SYNC REVERSE	0V
Other	5.165V

SCHEMATIC DIAGRAM (2)

PCB-4 POWER P. C. BOARD (1/2)

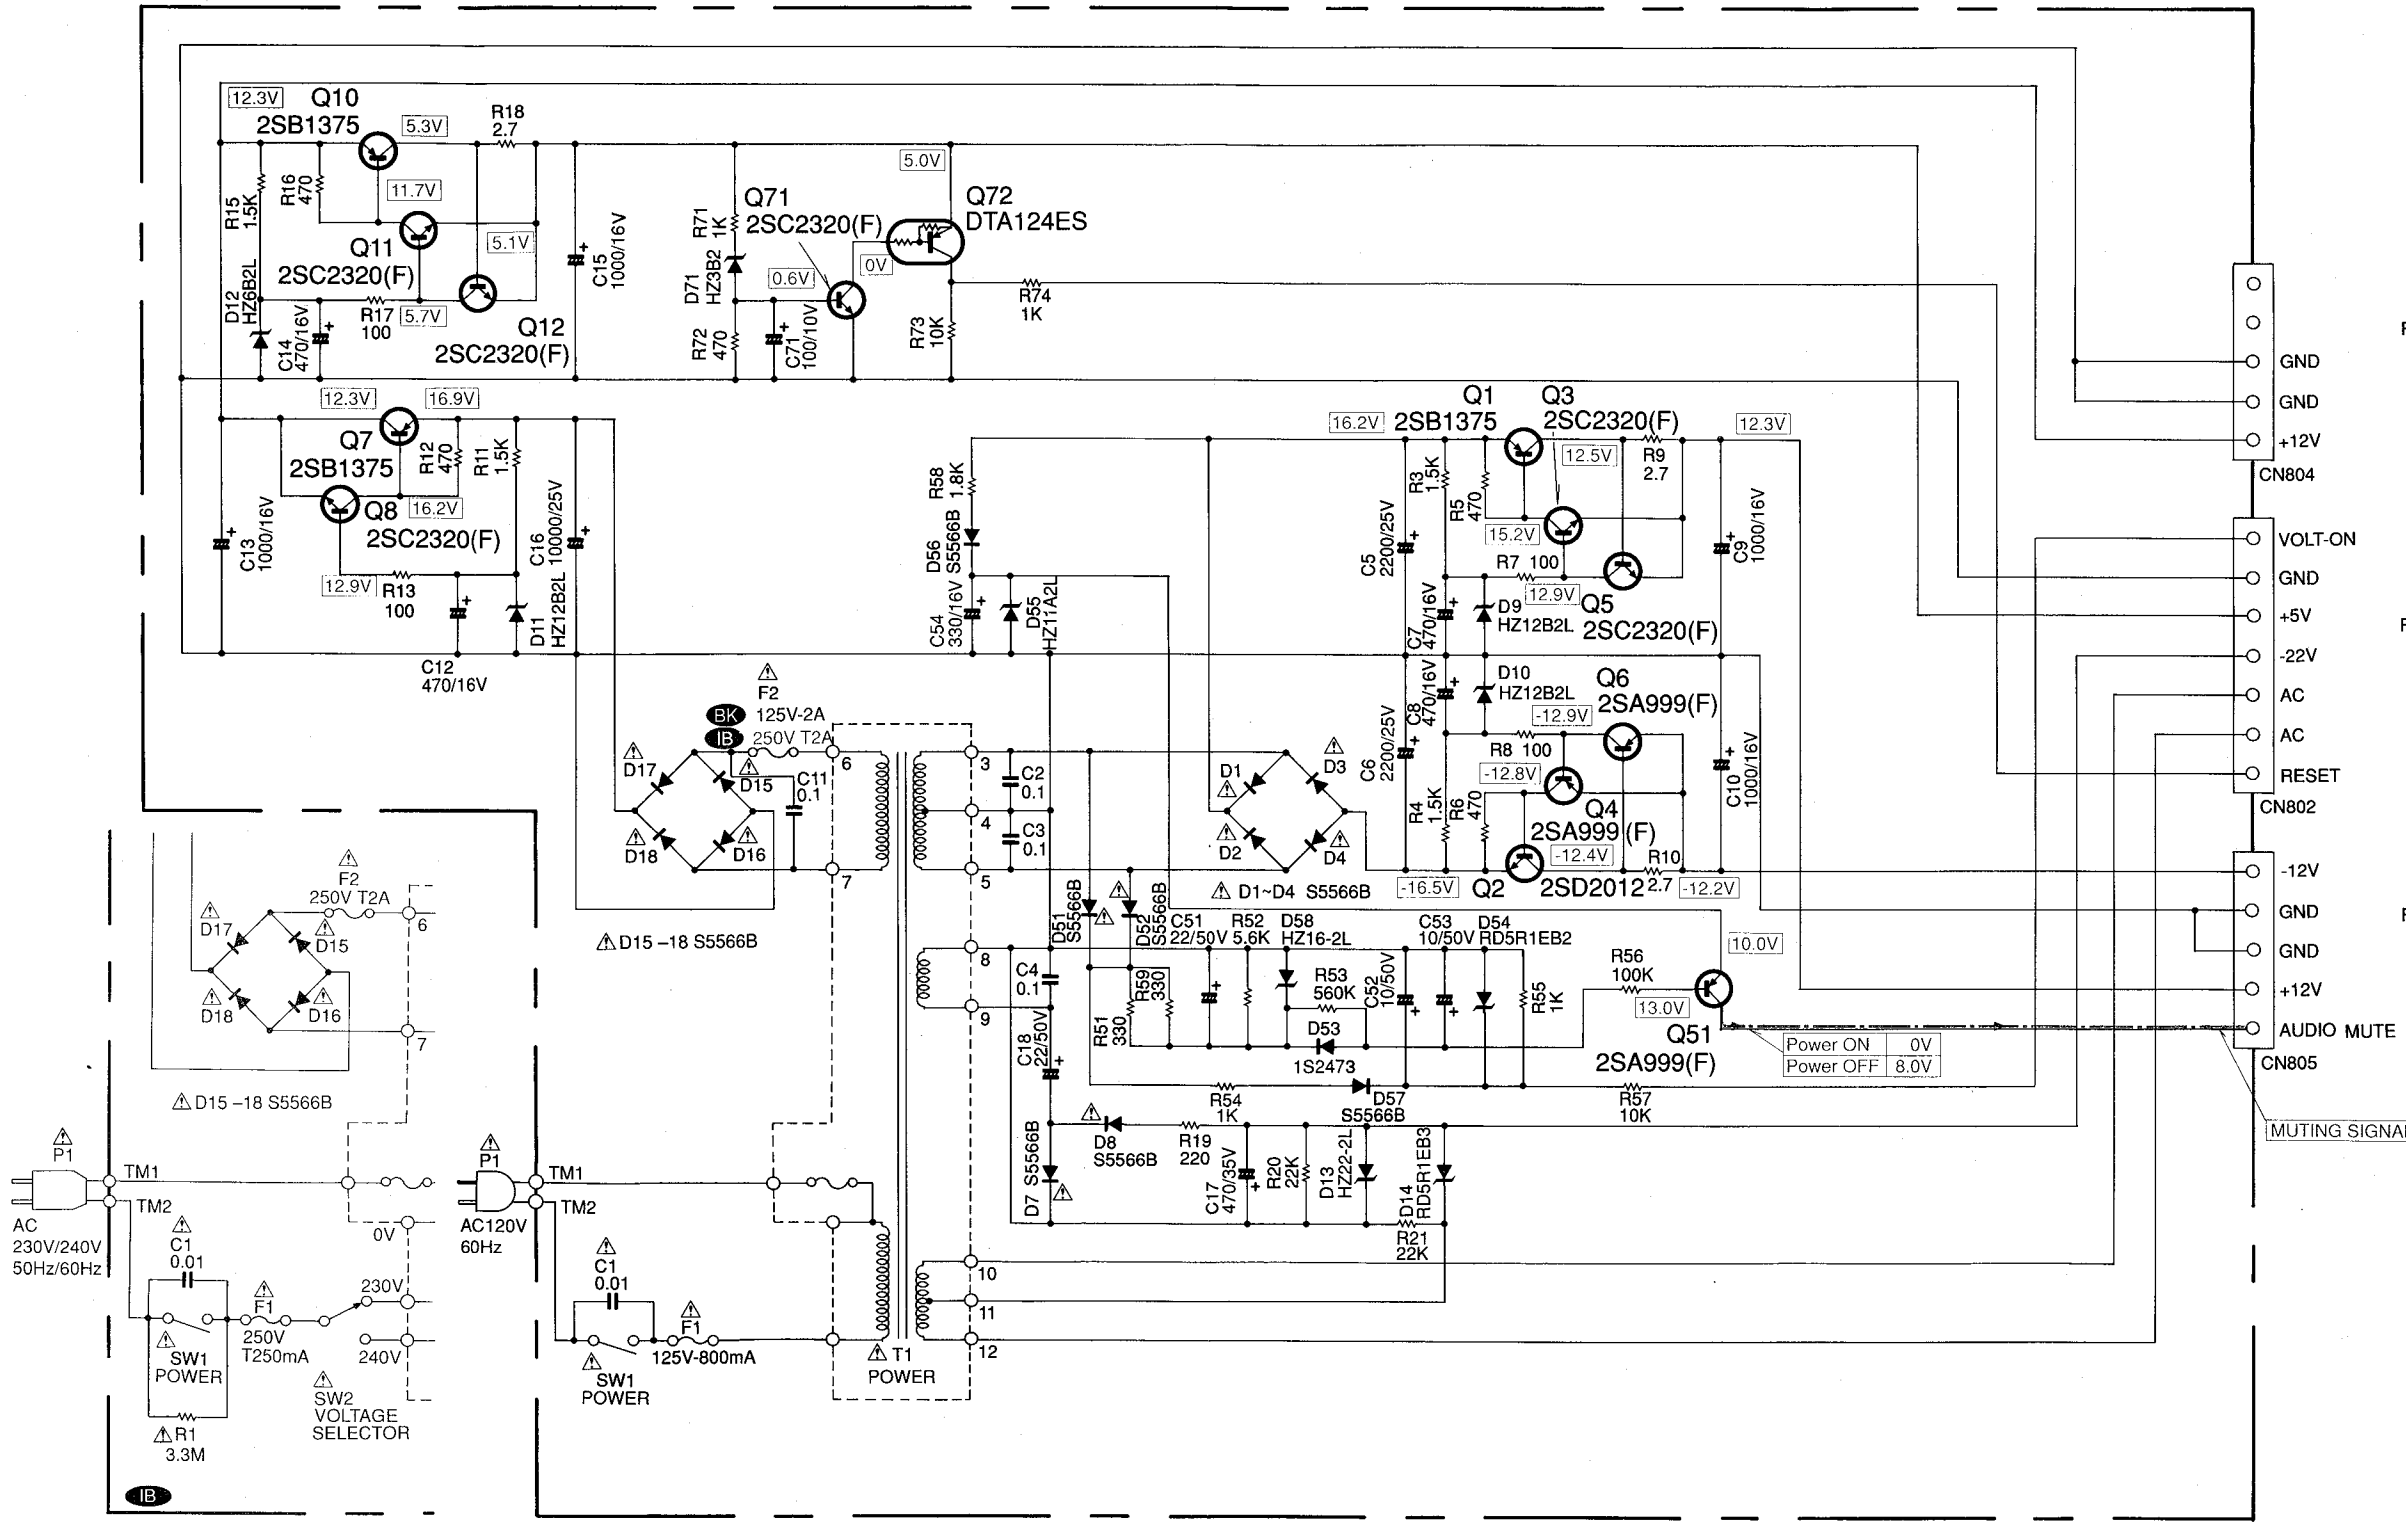


Page31
8 23


Page31
8 22

Page31
8 8

SCHEMATIC DIAGRAM (2)

PCB-4 POWER P. C. BOARD (1/2)

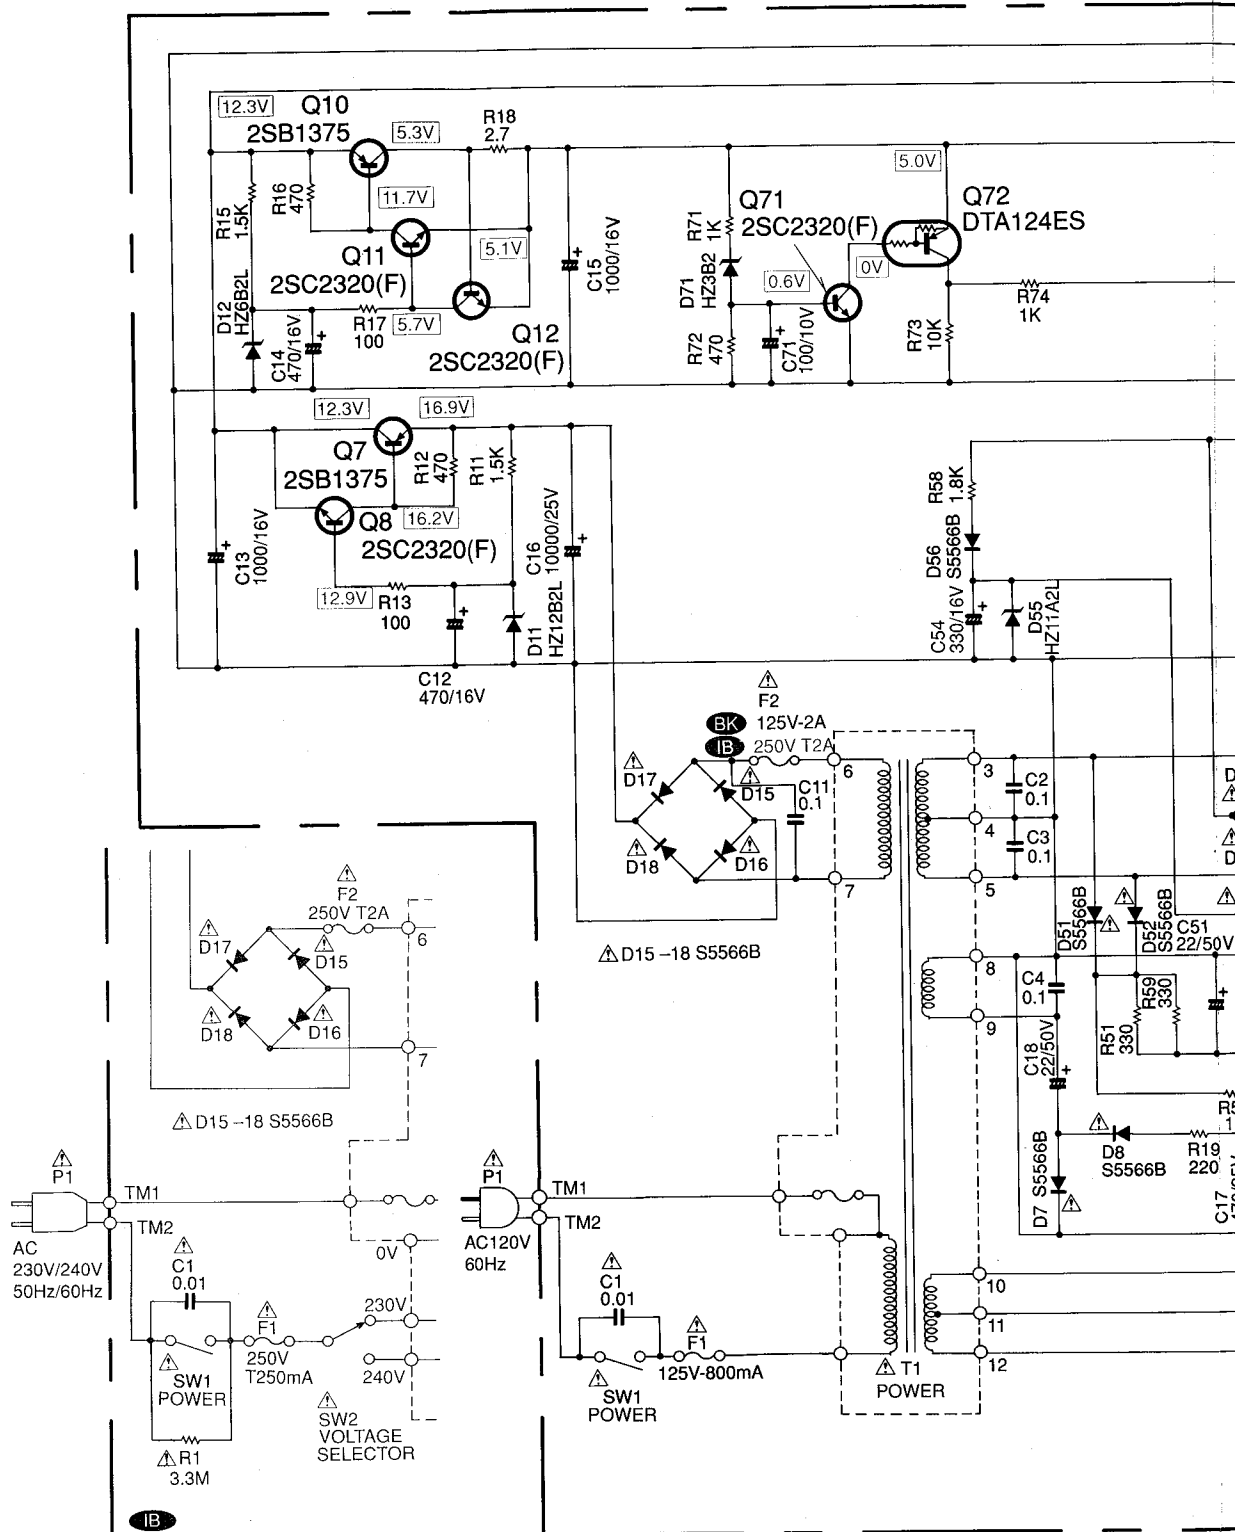


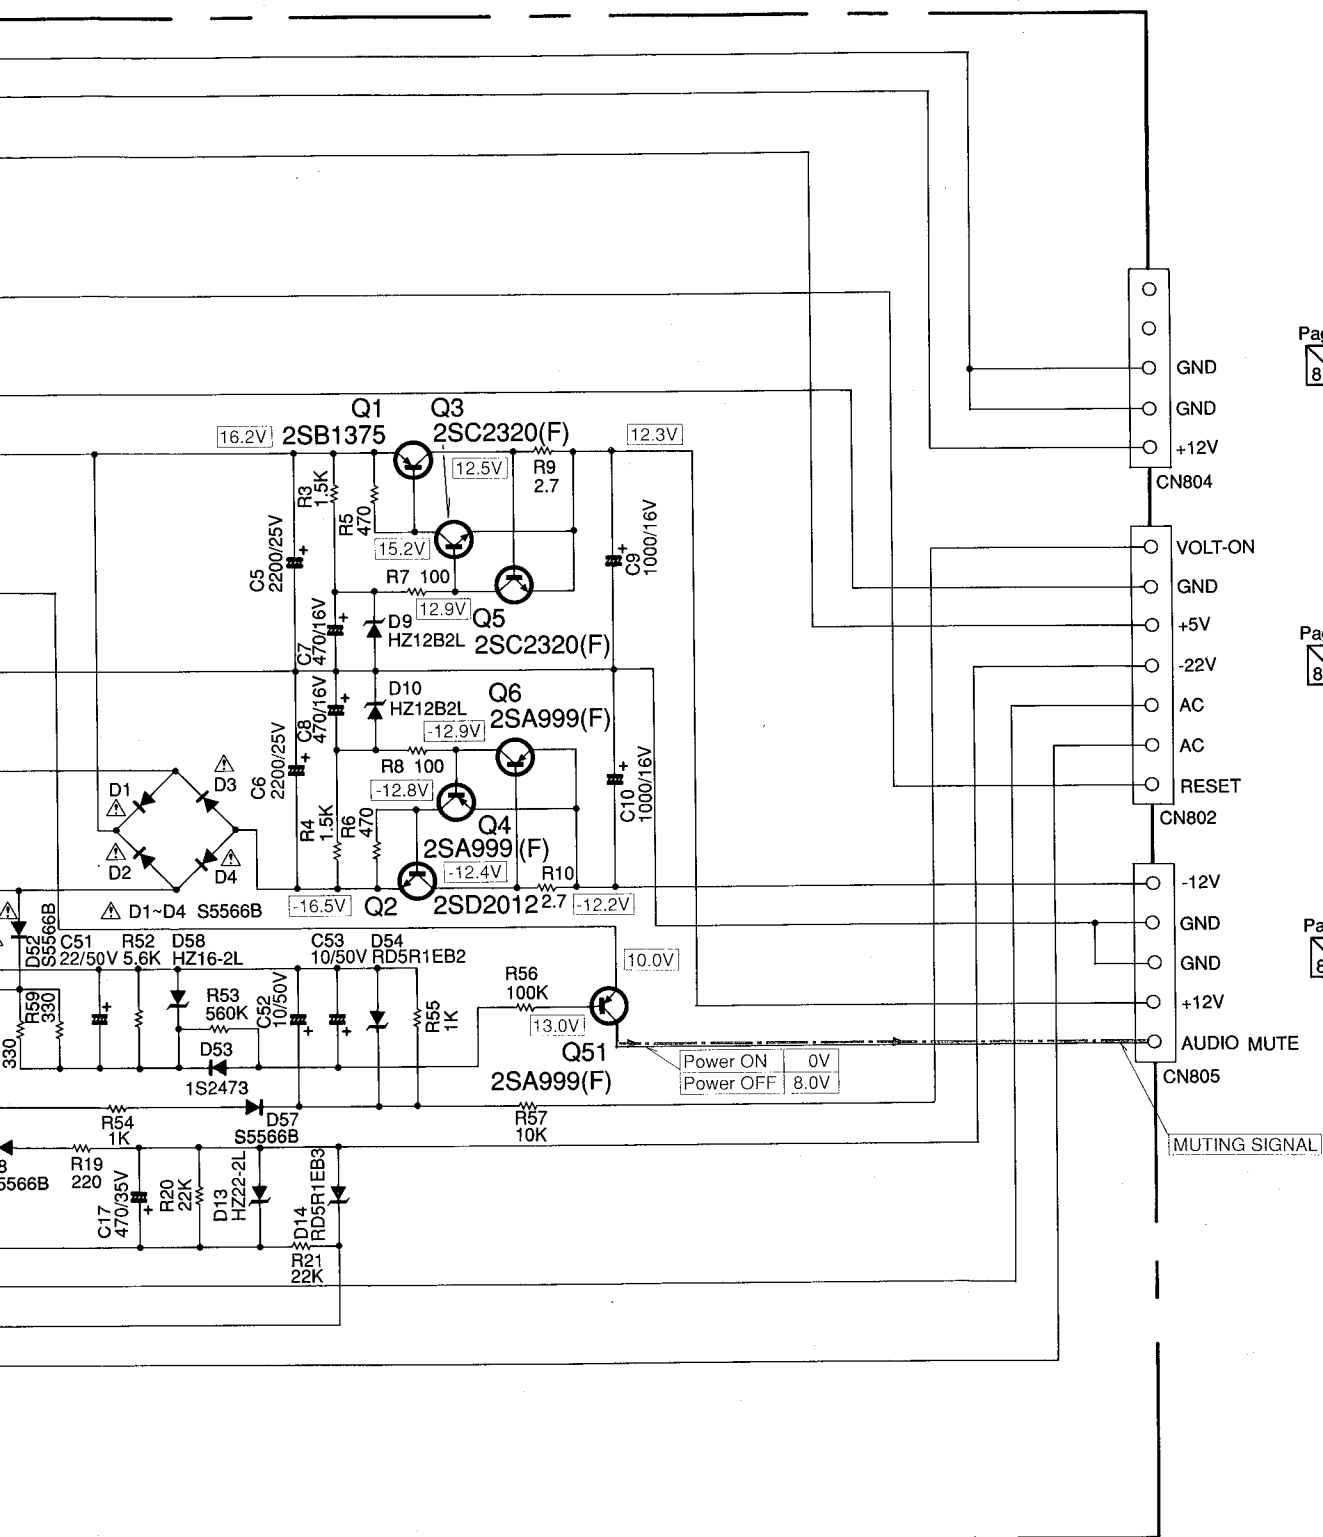

PCB-8 DOLBY P. C. BOARD(2/2)




PCB-8 DOLBY P. C. BOARD(2/2)

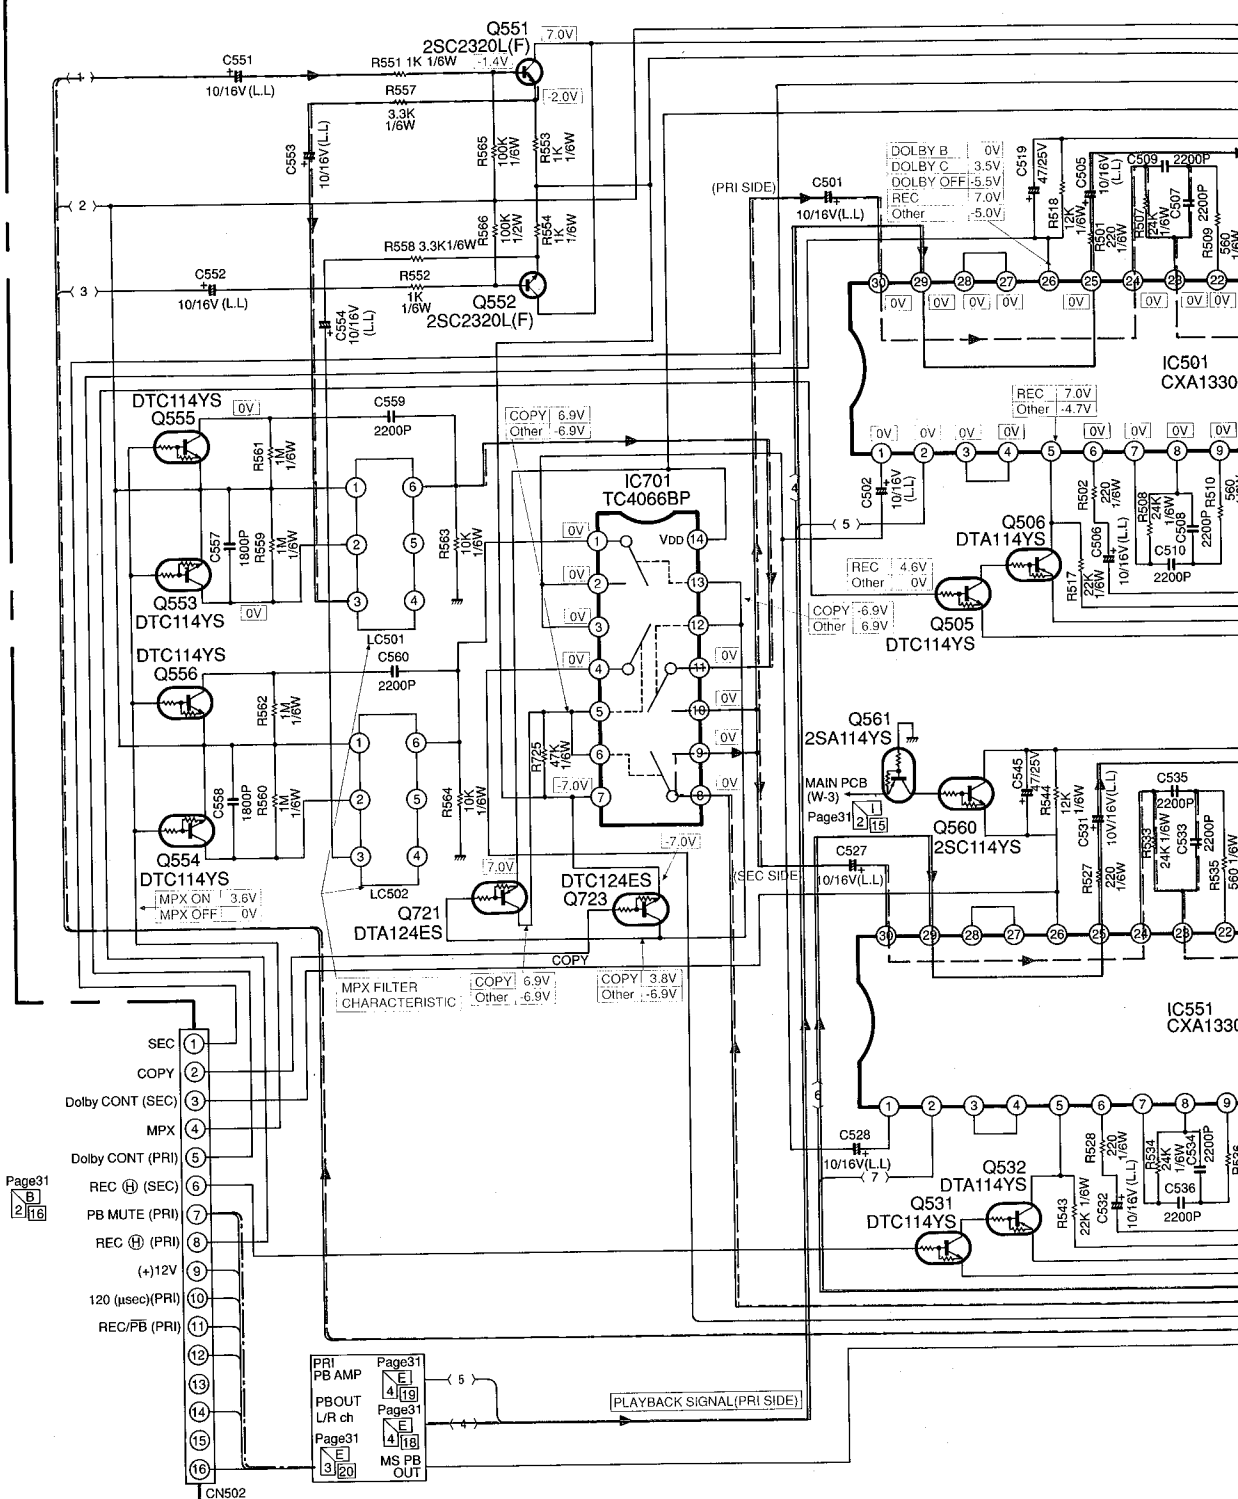





SCHEMATIC DIAGRAM (4)

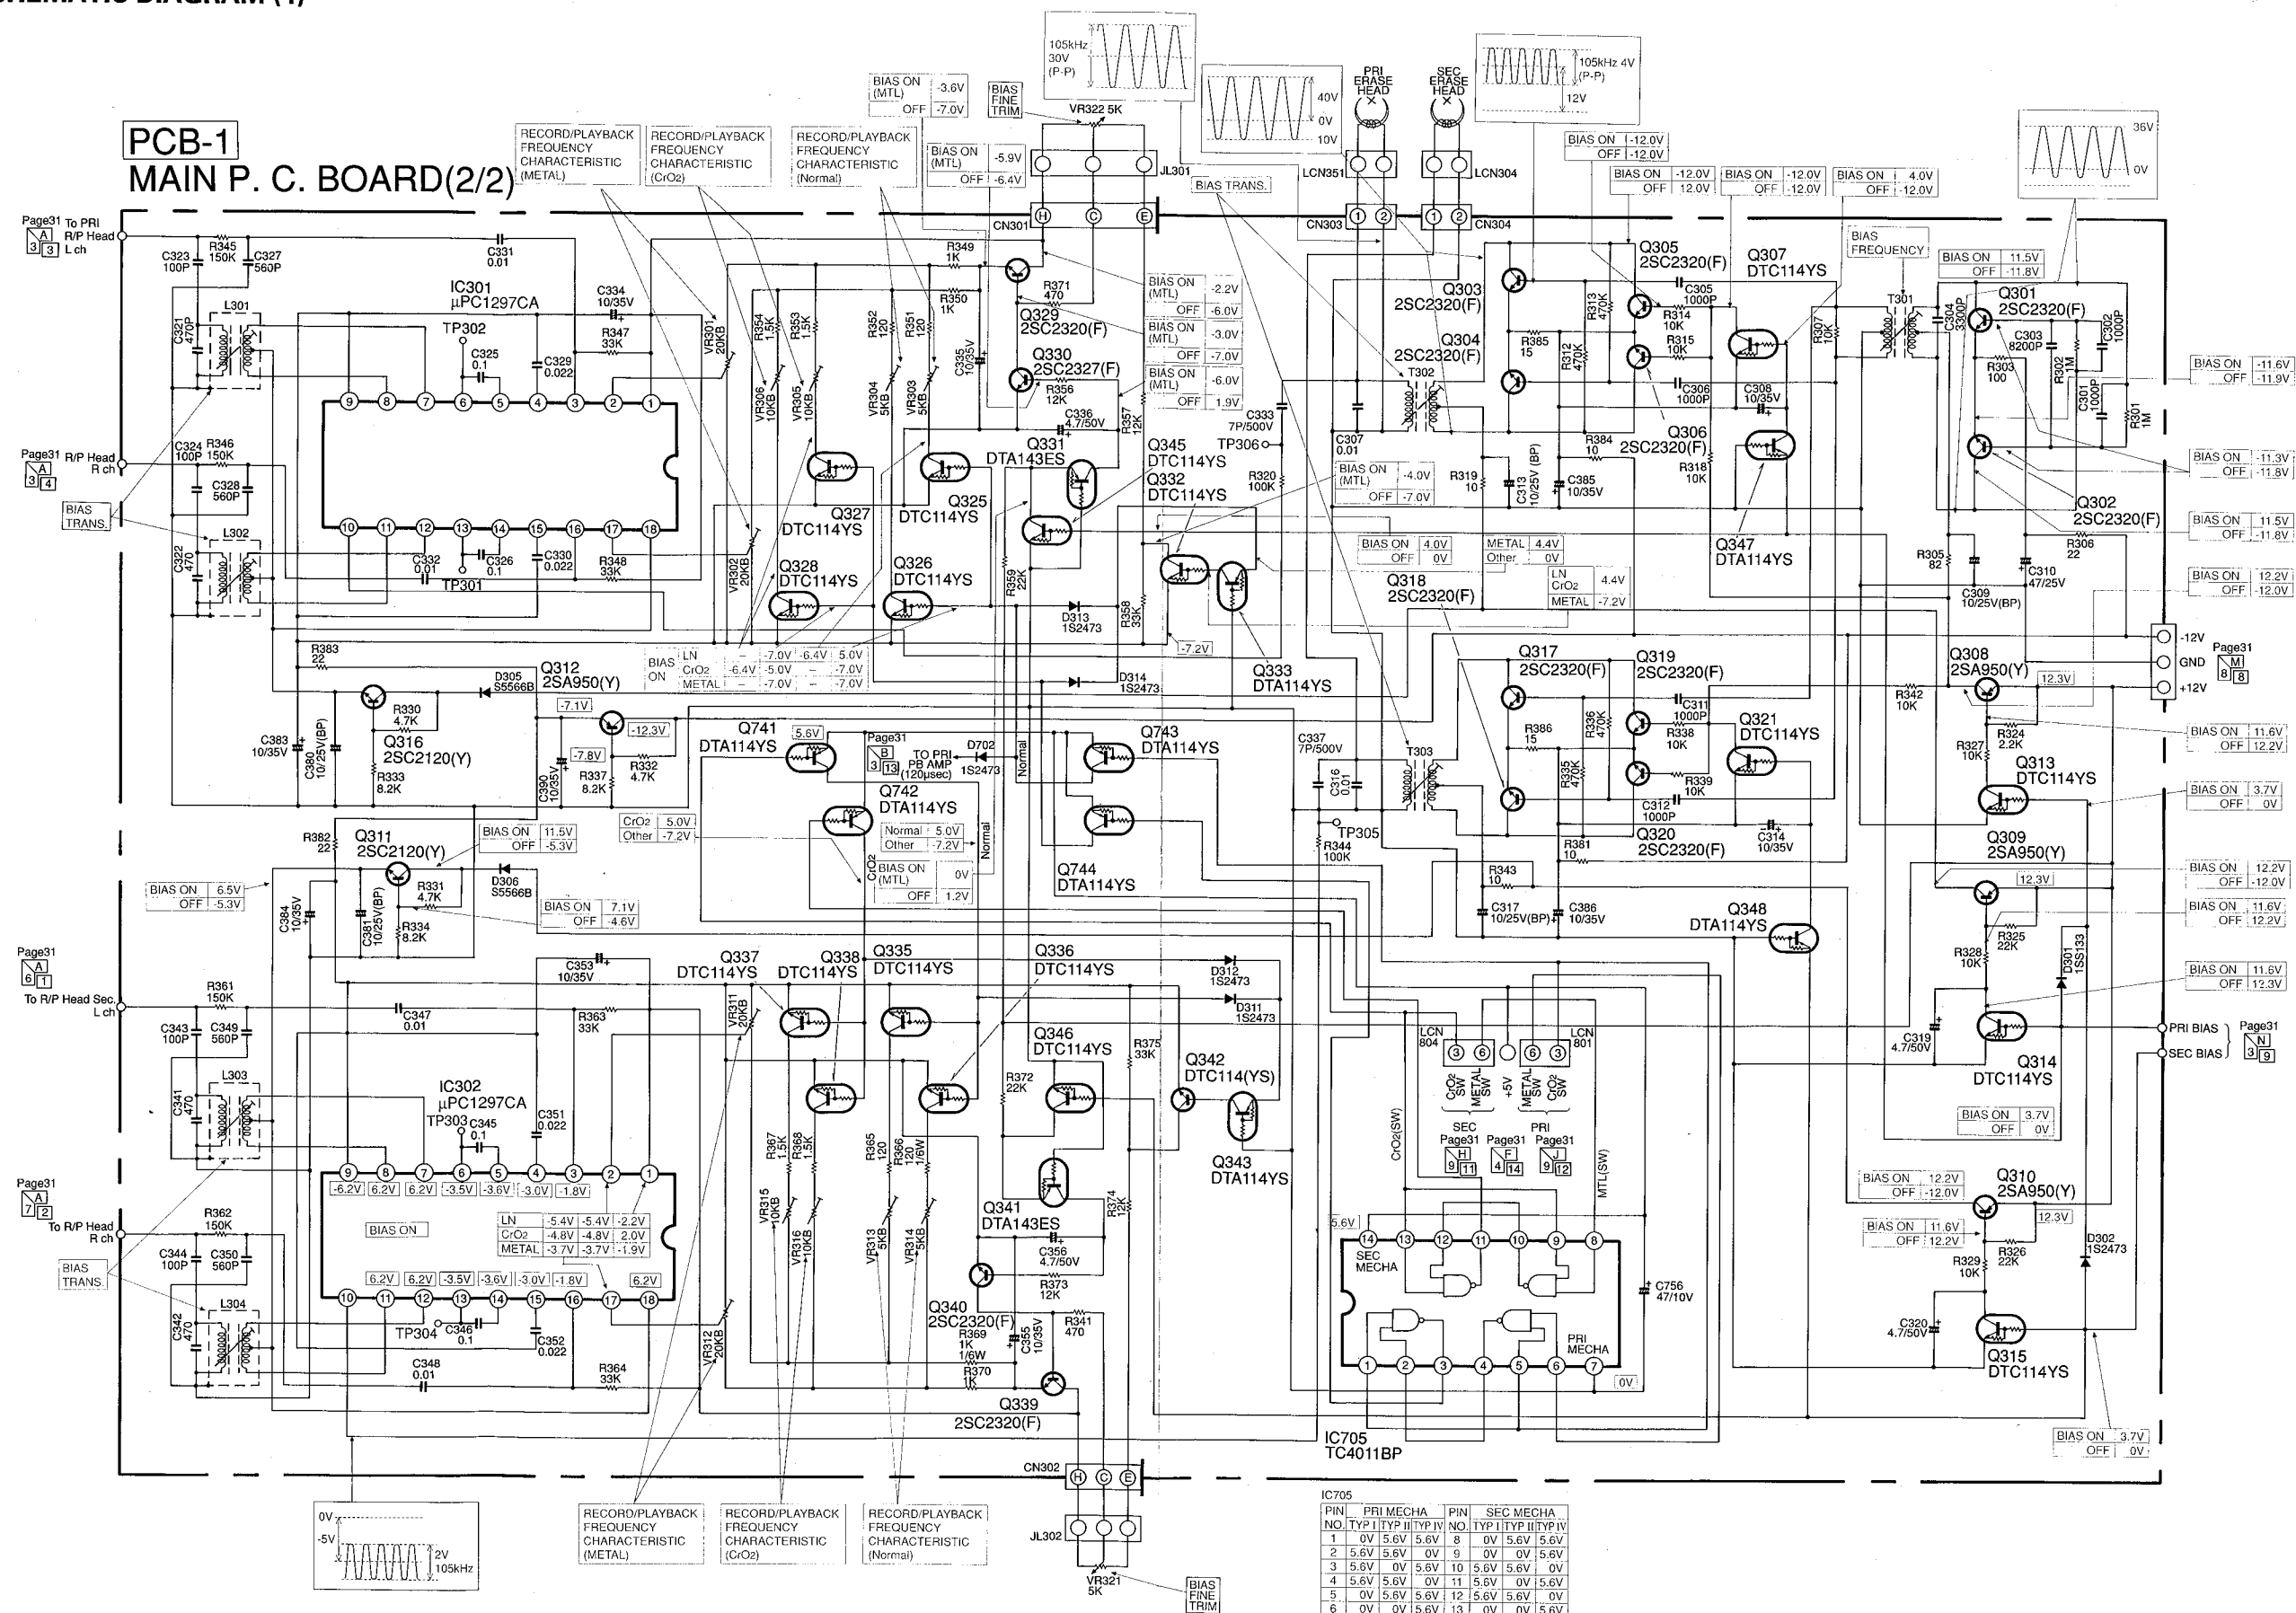

IC705				IC706			
PIN		PRI MECHA		PIN		SEC MECHA	
NO.	TYPE I	TYPE II	TYPE IV	NO.	TYPE I	TYPE II	TYPE IV
1	0V	5.6V	5.6V	8	0V	5.6V	5.6V
2	5.6V	5.6V	0V	9	0V	0V	5.6V
3	5.6V	0V	5.6V	10	5.6V	5.6V	0V
4	5.6V	5.6V	0V	11	5.6V	0V	5.6V
5	0V	5.6V	5.6V	12	5.6V	5.6V	0V
6	0V	0V	5.6V	13	0V	0V	5.6V


SCHEMATIC DIAGRAM (4)

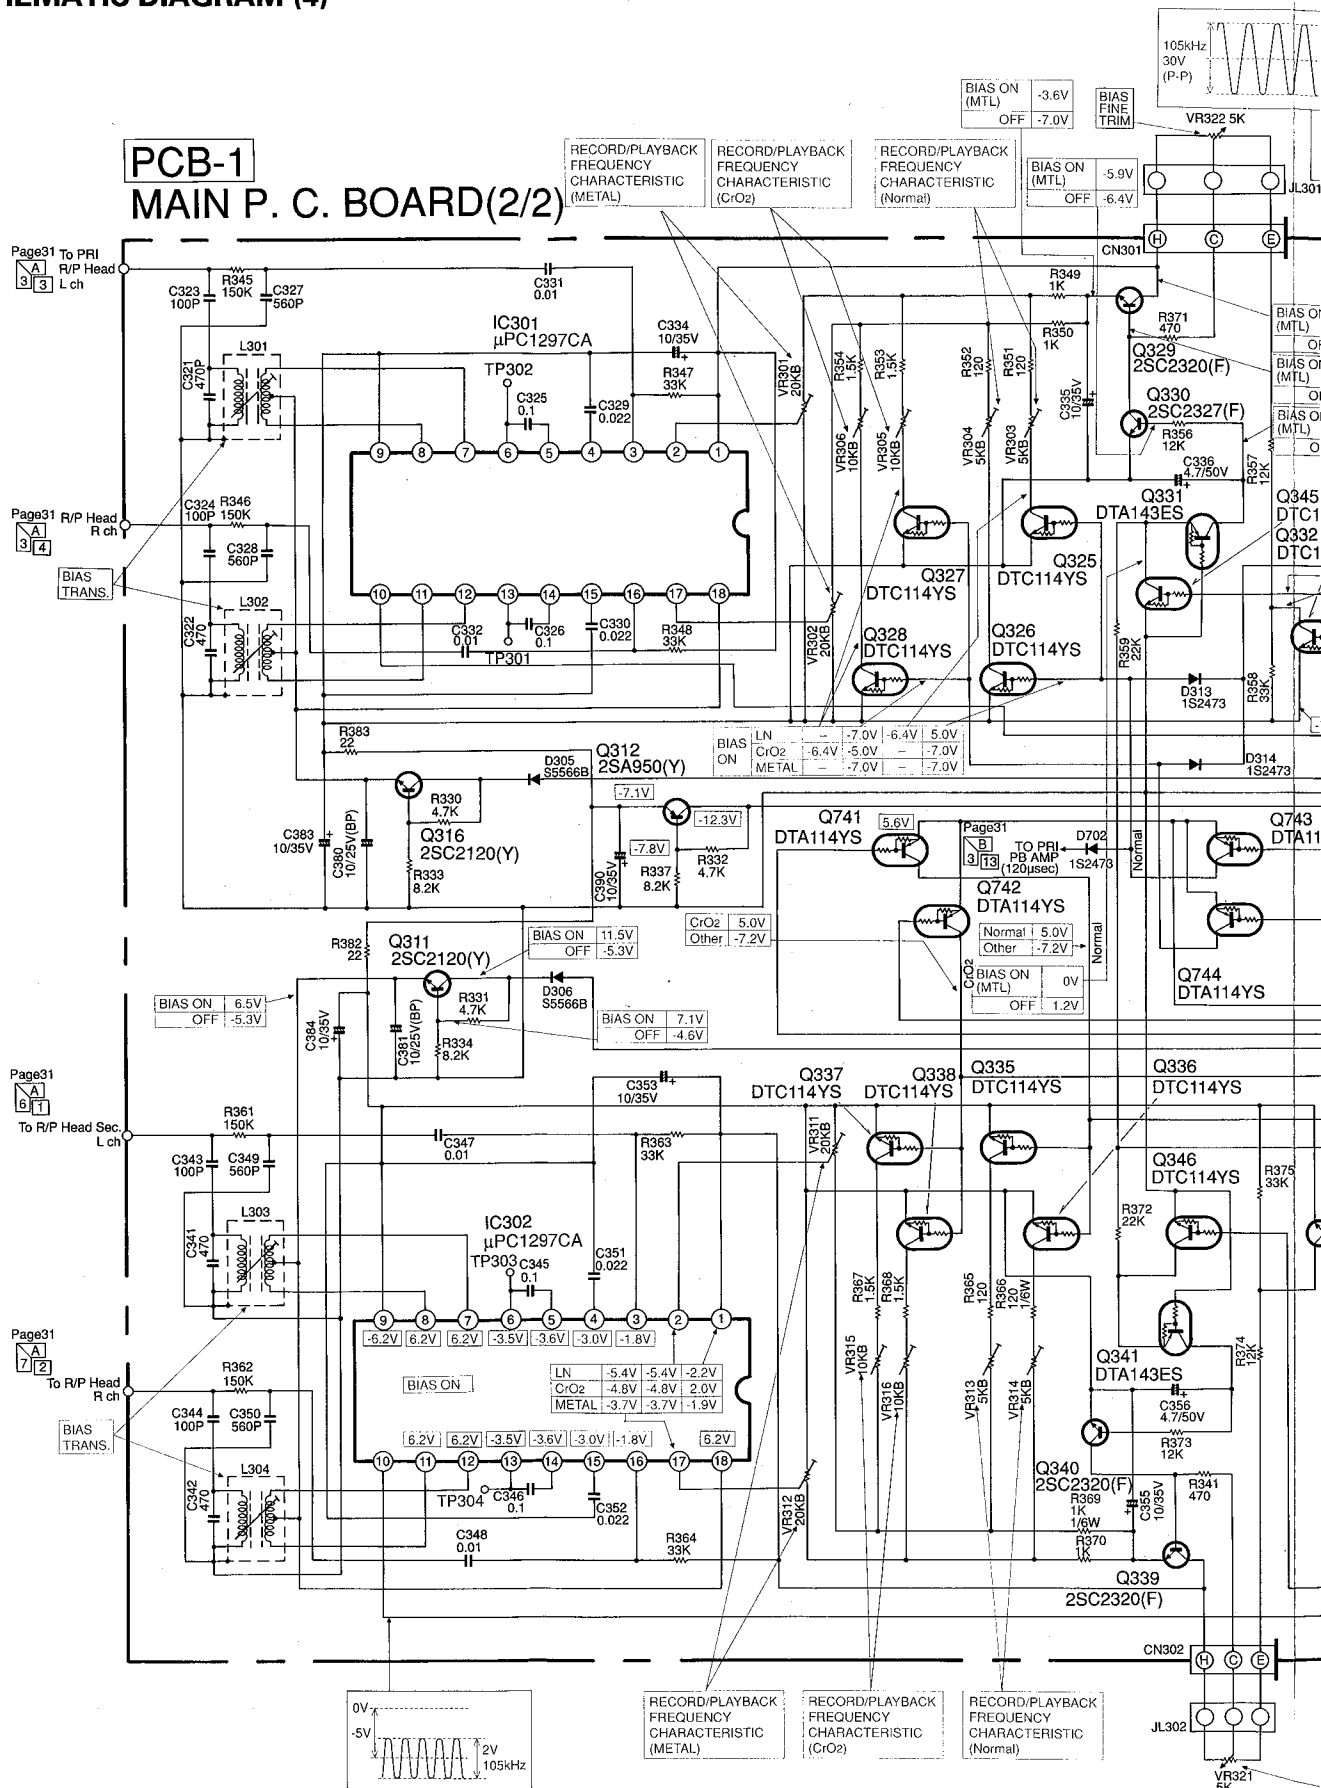

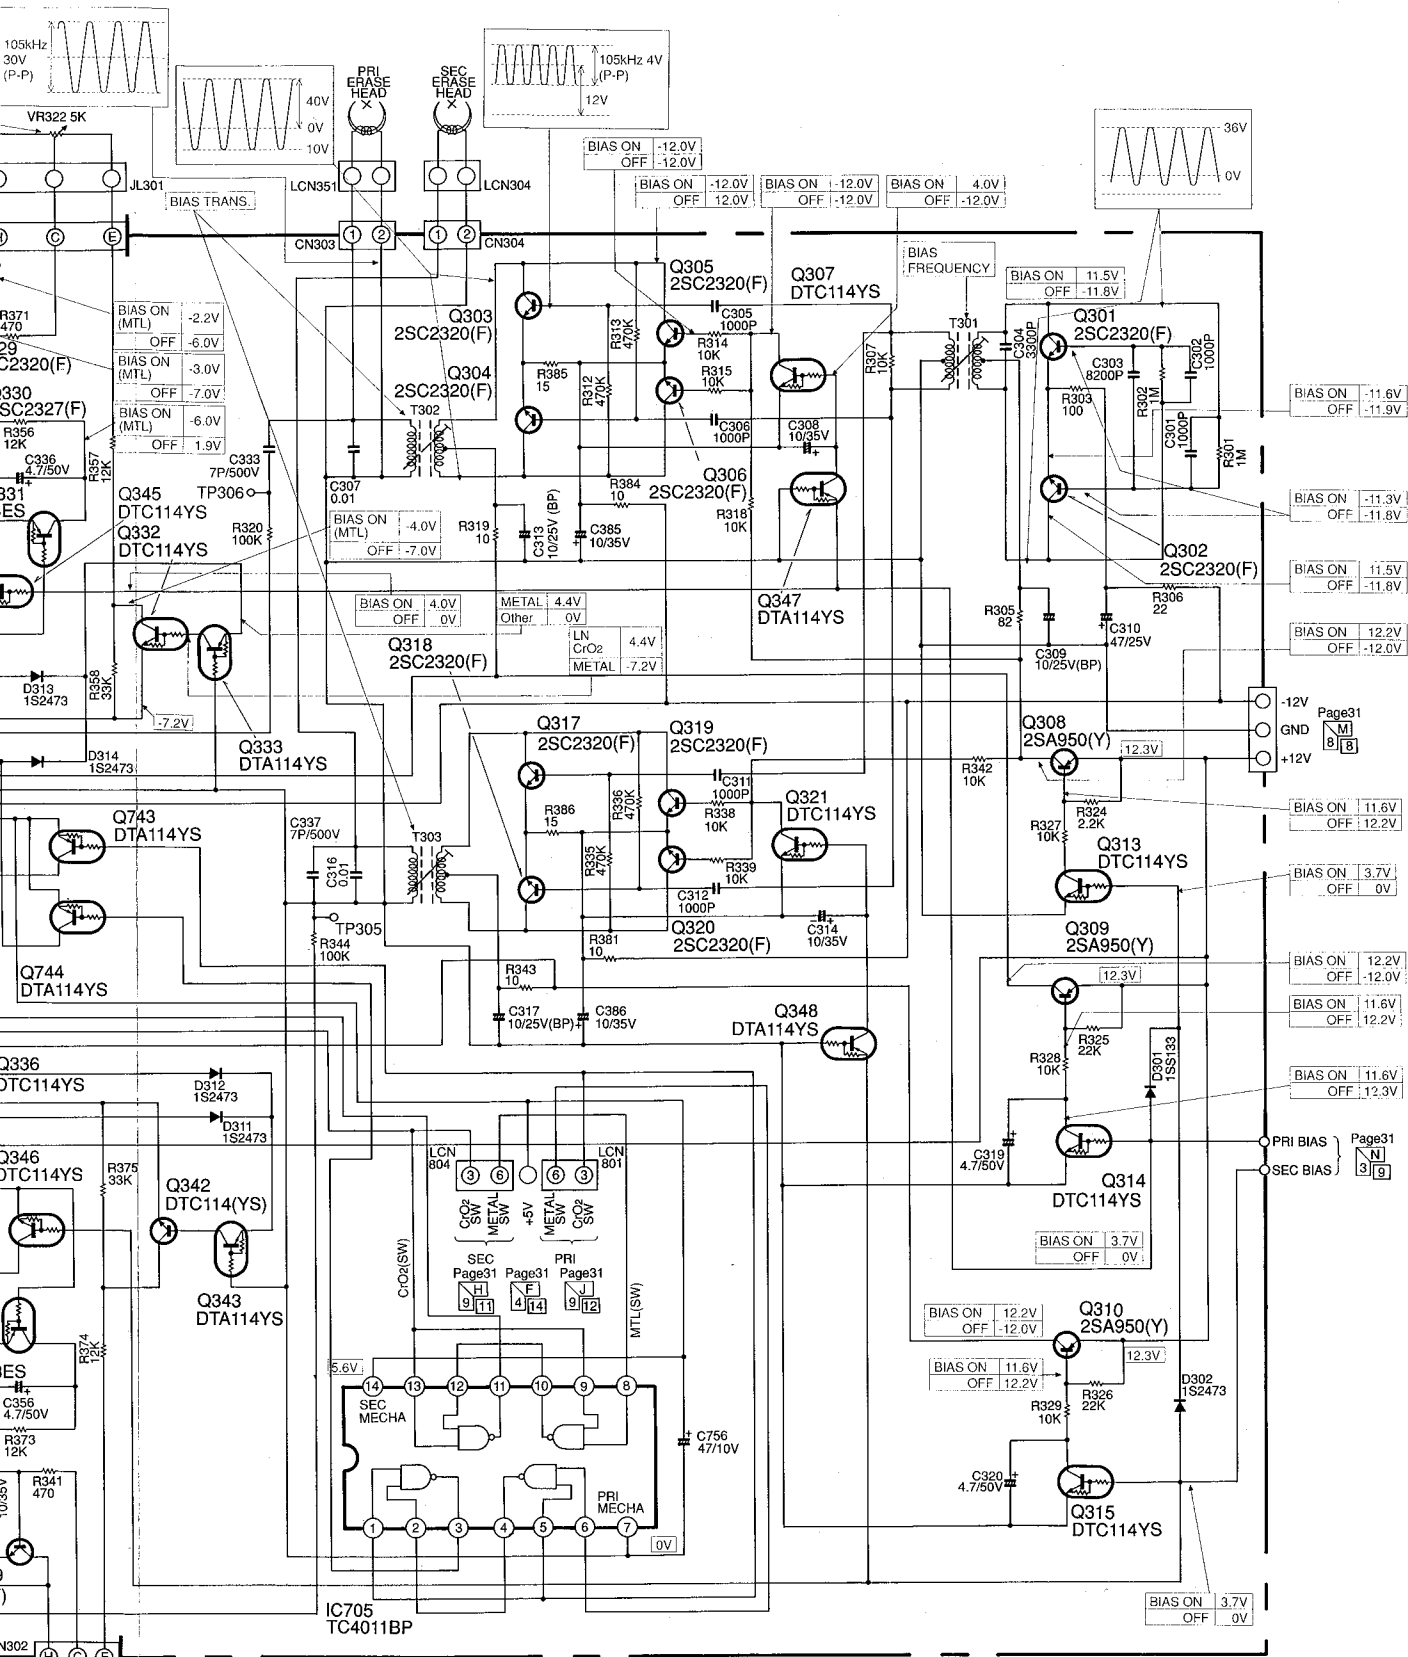

IC705				IC706			
PIN	NO.	TYPE	VOL	PIN	NO.	TYPE	VOL
1	1	0V	5.6V	8	8	0V	5.6V
2	2	5.6V	5.6V	9	9	0V	5.6V
3	3	5.6V	0V	10	10	5.6V	5.6V
4	4	5.6V	0V	11	11	5.6V	0V
5	5	0V	5.6V	12	12	5.6V	5.6V
6	6	0V	0V	13	13	0V	5.6V


SCHEMATIC DIAGRAM (5)

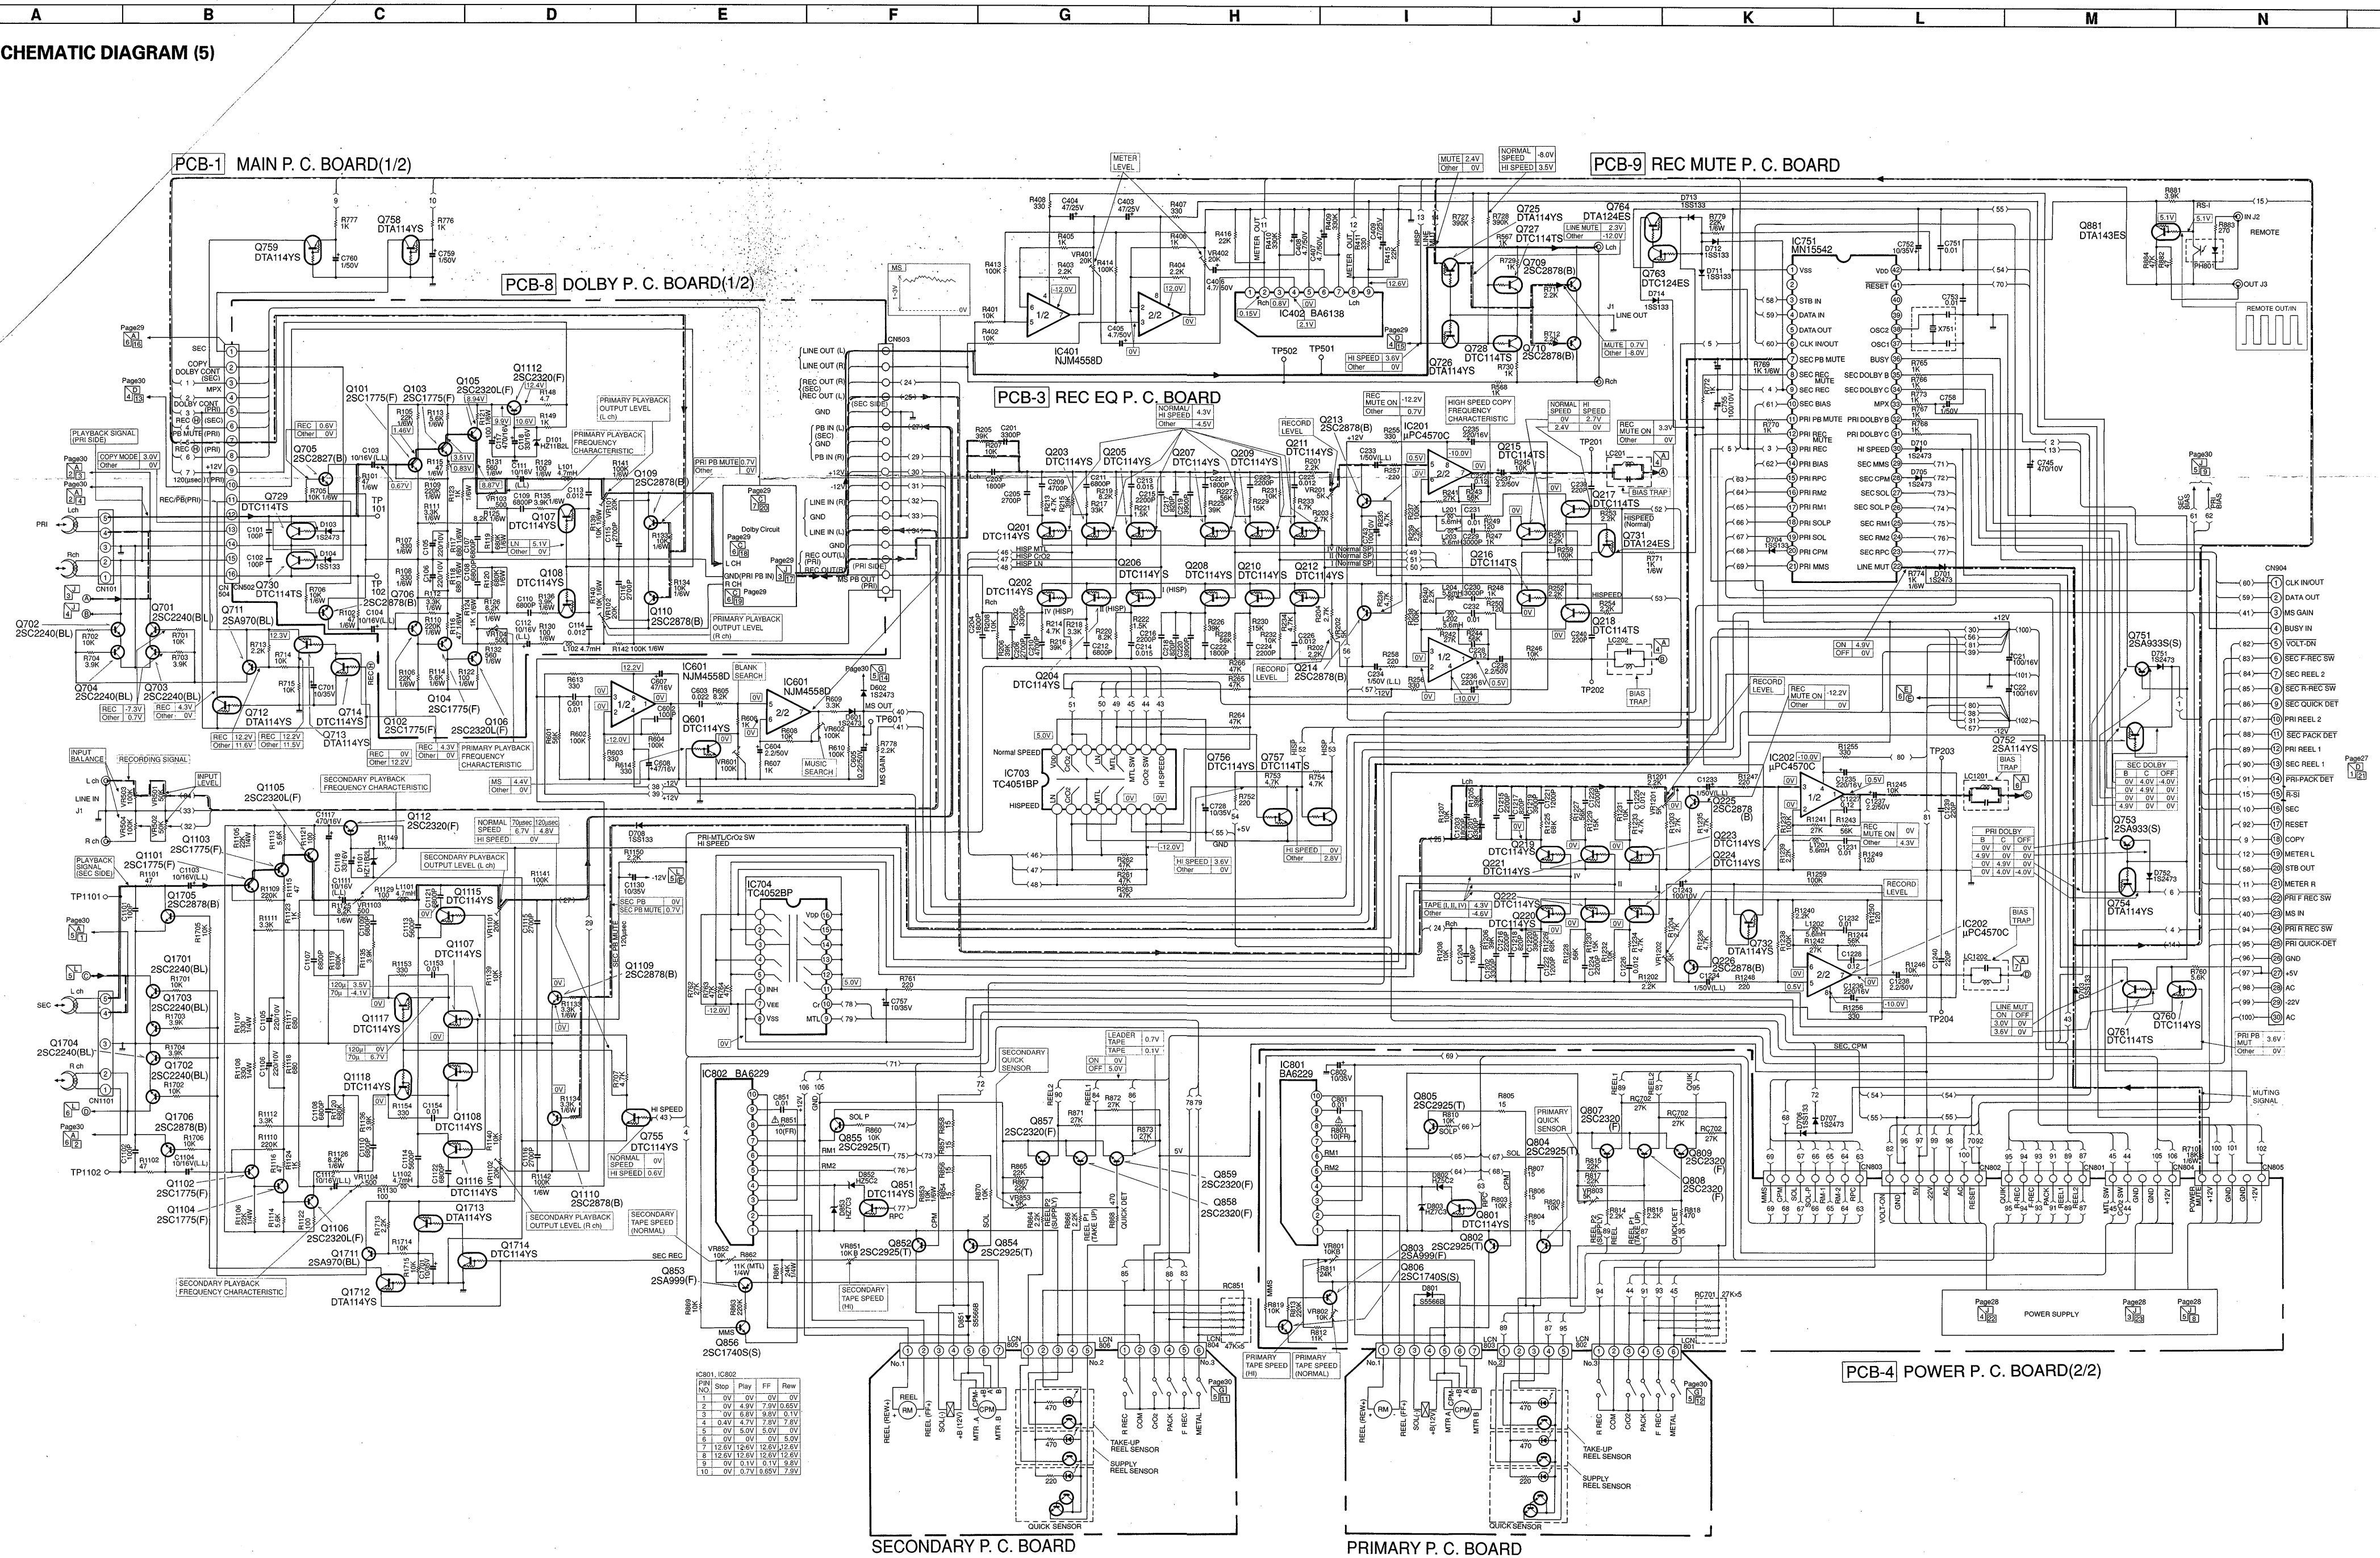


A	B	C	D	E
---	---	---	---	---



PCB-8 DOLBY P. C. BOARD(1/2)

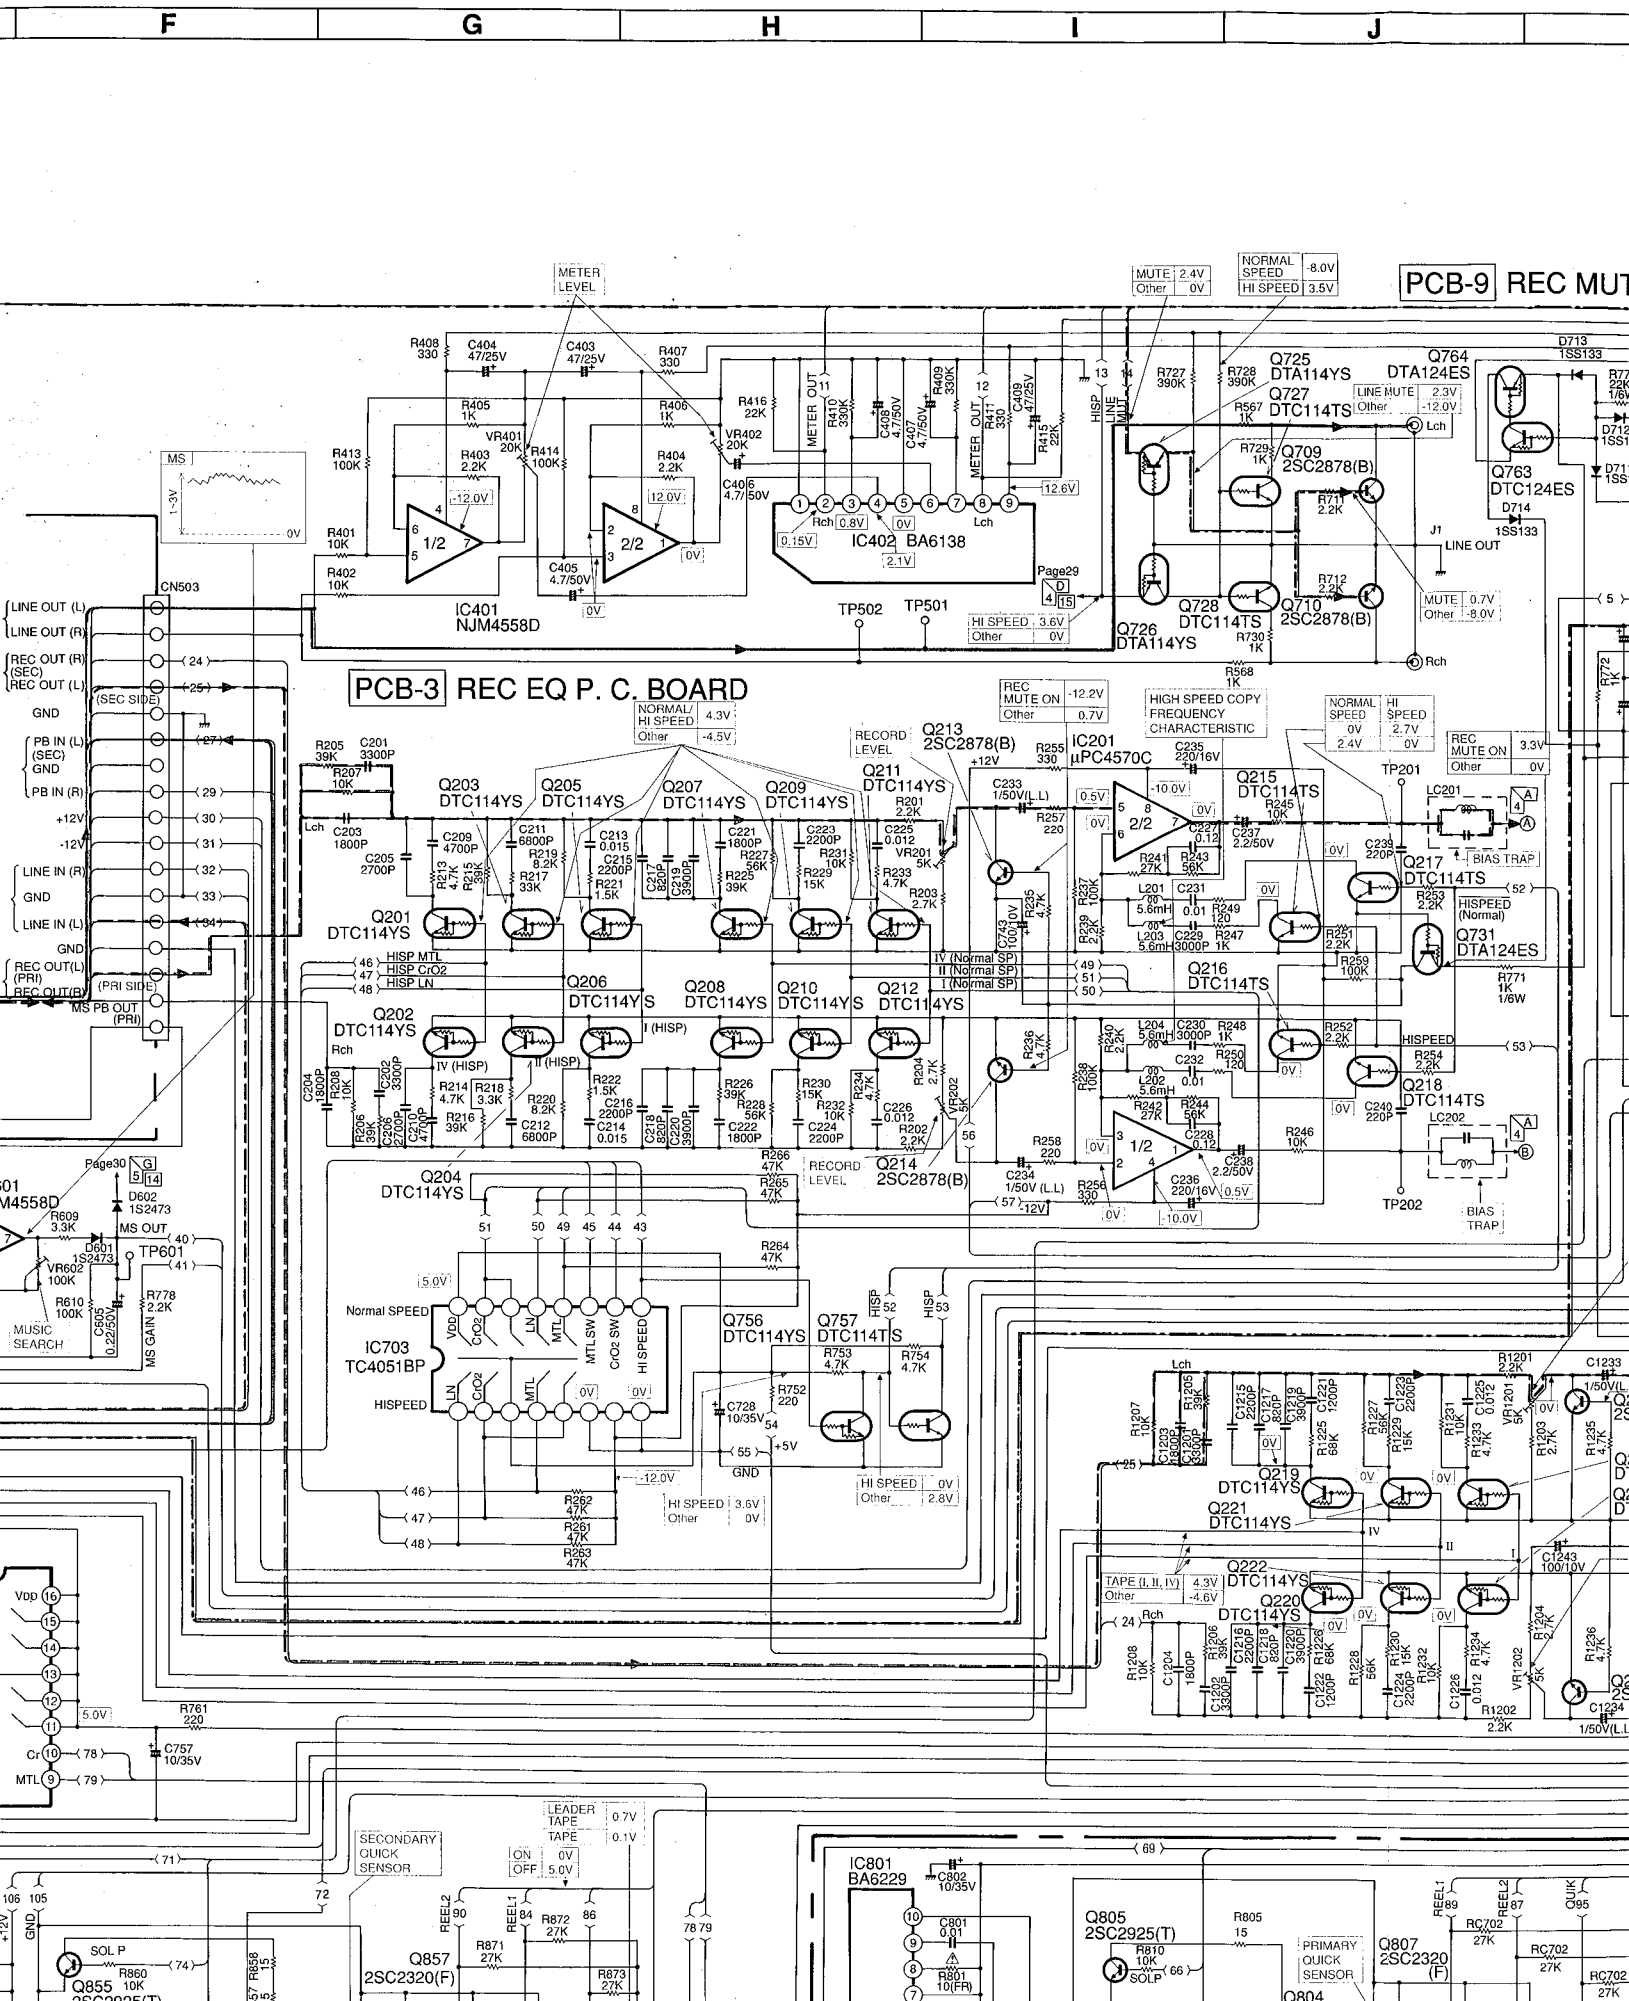

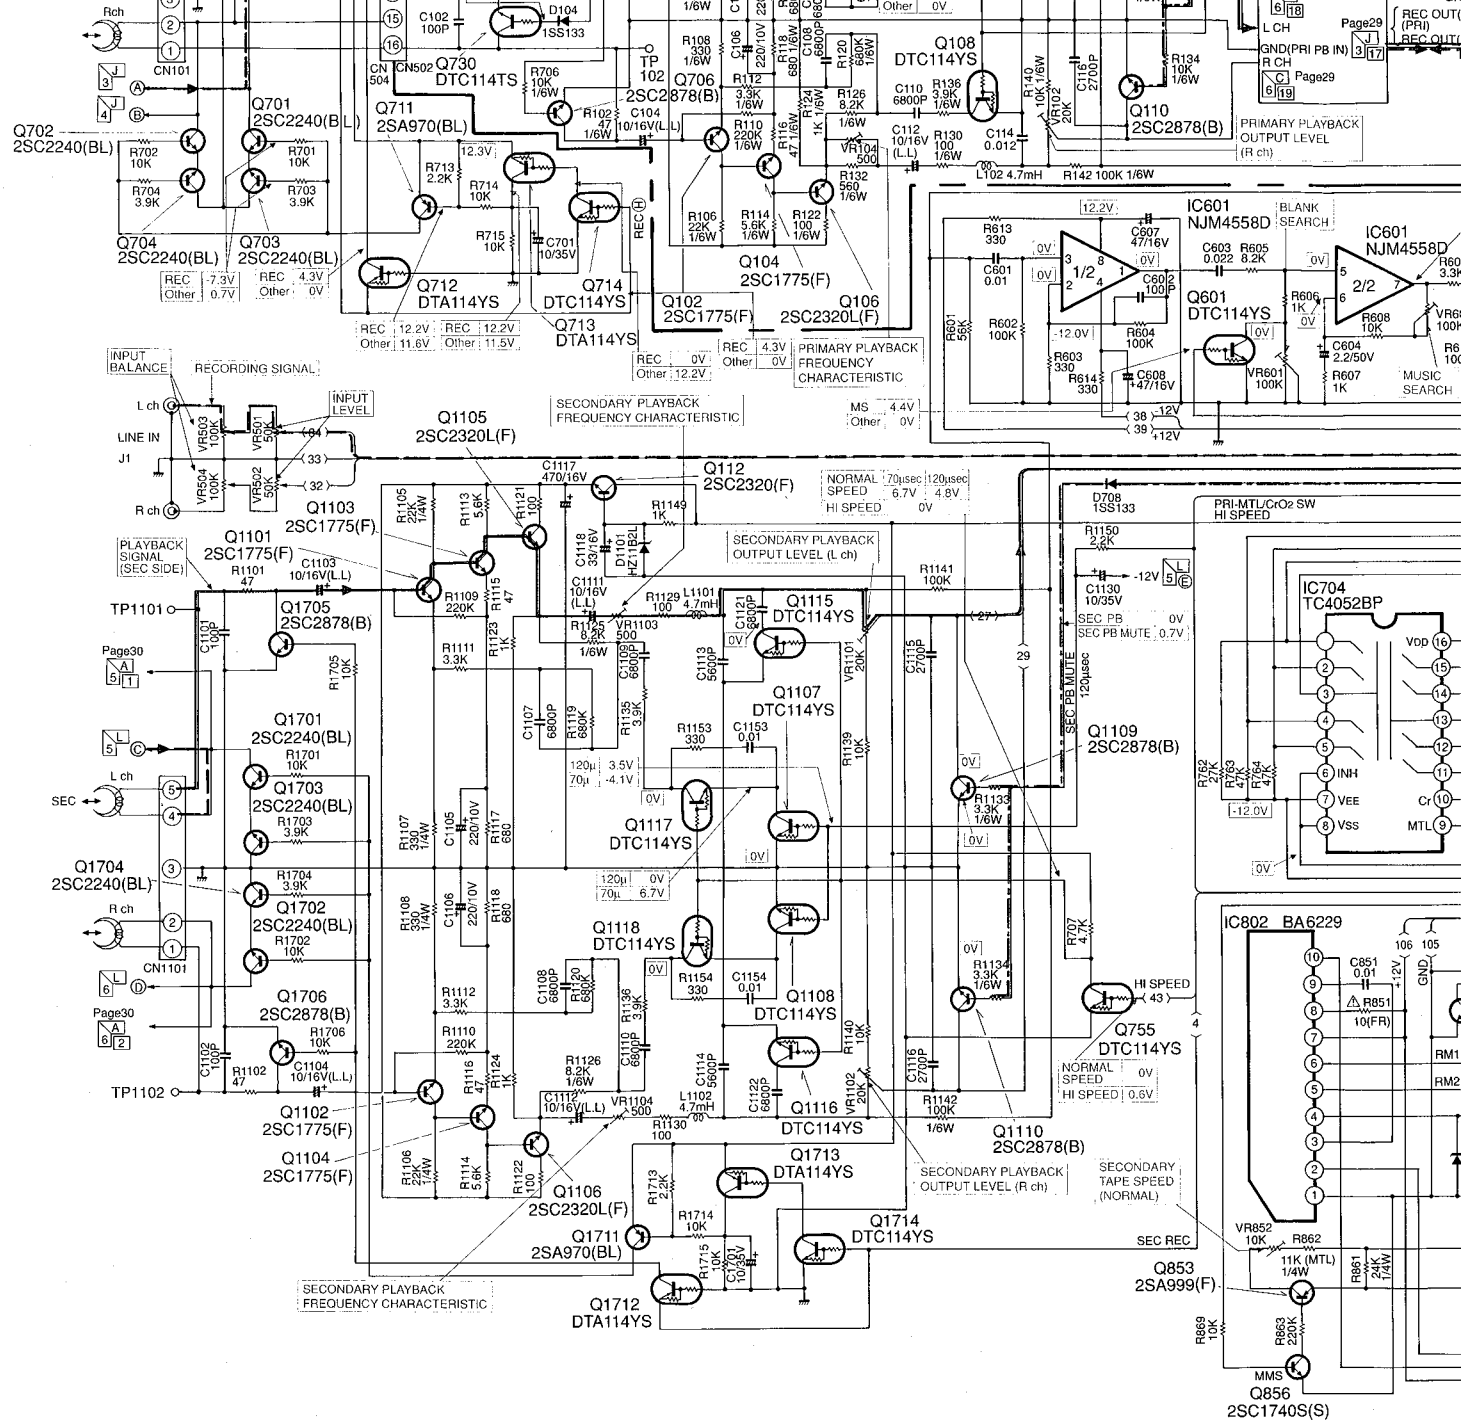

IC801, IC802

PIN NO.	Stop	Play	FF	Rev
1	0V	0V	0V	0V
2	0V	4.9V	7.9V	0.65V
3	0V	6.8V	9.8V	0.1V
4	0.4V	4.7V	7.8V	7.8V
5	0V	5.0V	5.0V	0V
6	0V	0V	0V	5.0V
7	12.6V	12.6V	12.6V	12.6V
8	12.6V	12.6V	12.6V	12.6V
9	0V	0.1V	0.1V	9.8V
10	0V	0.7V	0.65V	7.9V

