

**JBL**

S E R V I C E   M A N U A L

# **PSW1200**

**Powered Subwoofer**



**120V & 230V  
Versions**

JBL Consumer Products, Inc.  
80 Crossways Park West  
Woodbury, NY 11797

8500 Balboa Blvd.  
Northridge, CA 91329

**H** A Harman International Company

1112-PSW1200

## Table of Contents

Warranty.....	1
Specifications.....	2
Safety Information.....	3
Principles of Operation.....	5
Troubleshooting Before opening.....	5
Removing the Amplifier.....	6
Troubleshooting After Removal.....	6
Final Checks.....	11
List of Safety Components Requiring Exact Replacements.....	11
Driver Test Procedure.....	12
Parts List.....	13
Exploded View.....	17
Component Locations.....	18
Schematics.....	19

## Warranty

The following warranty information is provided with all PSW Series products:



### **1 Year Limited Warranty – Electronics 5 Year Limited Warranty - Loudspeakers**

***This is an important document. Attach a copy of your bill of sale to this card and keep it in a safe place. Your bill of sale is your warranty.***

The JBL warranty on the electronic components within this loudspeaker system remains in effect for one year from the date of the first consumer purchase.

The JBL warranty on loudspeaker components (except enclosures) remains in effect for five years from the date of the first consumer purchase. Enclosures are warranted for two years from the date of purchase.

#### **WHO IS PROTECTED BY THIS WARRANTY**

The JBL warranty protects the original owner and all subsequent owners providing that the JBL product was purchased from an authorized dealer in the United States or purchased by military personnel from an authorized military outlet. **A copy of the original dated bill of sale must be presented whenever warranty service is required.**

#### **WHAT IS COVERED BY THIS WARRANTY**

Except as specified below, the JBL warranty covers all defects in material and workmanship. The following are not covered: Damage caused by accident, misuse, abuse, product modification or

neglect, damage occurring during shipment, damage from failure to follow instructions contained in the instruction manual, damage resulting from the performance of repairs by someone not authorized by JBL, damage caused by installation of parts that do not conform to JBL specifications, any claims based on misrepresentations by the seller, products sold on an "as-is" or final sale basis, or the cost of installing, removing, or reinstalling the unit. JBL's liability is limited to the repair or replacement, at our option, of any defective product and shall not include incidental or consequential damages. JBL reserves the right to replace a discontinued model with a comparable model. Any replacement unit or parts supplied may be new or rebuilt.

### **TO OBTAIN WARRANTY SERVICE**

If you require warranty service, please return the product to your dealer. If this is not possible, in the United States, please call 1-800-336-4JBL, for information on how to obtain service.

If purchased outside the United States, contact your local dealer for repair or replacement.

### **DO NOT RETURN PRODUCTS TO THE JBL FACTORY WITHOUT AUTHORIZATION**

You are responsible for transporting your product for repair or replacement. JBL will pay reasonable return charges for delivery to any location in the United States if the repair or replacement is covered under the warranty.

Correspondence with JBL should be addressed to: JBL Customer Service, 80 Crossways Park West, Woodbury, NY 11797. Outside the United States, please contact your local distributor.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above may not apply to you.

**JBL Consumer Products  
80 Crossways Park West  
Woodbury, NY 11797**

**JBL Consumer Products  
8500 Balboa Boulevard  
Northridge, CA 91329**

### **Specifications PSW1200**

<b>Amplifier Power (RMS)*</b>	<b>120 Watts</b>
<b>Low Frequency Driver</b>	<b>12"</b>
<b>Voice Coil Diameter</b>	<b>2"</b>
<b>Cone Material</b>	<b>High Polymer Laminate</b>
<b>Inputs</b>	<b>Line Level &amp; Speaker Level</b>
<b>Outputs</b>	<b>Full Range Speaker</b>
<b>Crossover Frequency (Continuously Variable)</b>	<b>90-150Hz</b>
<b>Frequency Response (-6db)</b>	<b>23Hz to (90-150Hz)**</b>
<b>External Dimensions (HxWxD)</b> <b>426mm)</b>	<b>13-1/2 x 21-1/4 x 16-3/4" (342 x 540 x</b>
<b>Weight</b>	<b>43 lbs. (19.5 kg)</b>
<b>Shipping Weight</b>	<b>49 lbs. (22.3 kg)</b>

\* ALC circuit defeated

\*\* Determined by crossover setting

## SAFETY SYMBOLS

The following symbols are used throughout this manual and in the product. Familiarize yourself with each of the symbols and its meaning before servicing this amplifier.



Instruction manual symbol. The product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect the unit against damage.



**CAUTION**

Indicates dangerous voltages are present. Be extremely careful.

The CAUTION sign denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in damage to or destruction of the amplifier. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

**WARNING**

The WARNING sign denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

## GENERAL SAFETY CONSIDERATIONS

**WARNING**

This amplifier has no power switch. Hazardous voltages are present within the unit whenever it is plugged in. This still applies when the overtemperature thermostat opens.

**WARNING**

There are voltages and hot components at many points in the amplifier which can, if contacted, cause personal injury. Be extremely careful. Any adjustments or service procedures that require operation of the amplifier out of its enclosure should be performed only by trained service personnel.

**CAUTION**

BEFORE THIS AMPLIFIER IS PLUGGED IN, make sure its rated voltage corresponds to the voltage of the AC power source to be employed. Failure to use the correct voltage could cause damage to the amplifier when the AC power cable is plugged in. Do not exceed the rated voltage by more than 10%; operation below 90% will degrade performance or cause the unit to shut off.

# SERVICE MANUAL

## 1. Principles of Operation

Basic Bulk DC of  $\pm 50V$  nominal is rectified by bridge D36 from the 70VAC center-tapped winding of T1. The primary of T1 is protected by an embedded, non resetable thermostat, a 2A, 250V fuse (1A for 230V input) F1 (in clips on the PCA), and panel thermostat TM1. Resistors R102 - R107 and zener diodes D25 and D26 provide auxiliary  $\pm 15V$  DC for the low level signal processing circuits.

The pair of low level signal inputs are summed at U5A together with attenuated and inverted (U1A) high level inputs. The feedback gain control, R116, closely approximates a logarithmic characteristic. After phase selection, a third order high pass (U6) removes infrasonic components below 20Hz and provides inverse correction for the woofer's low frequency response with about 5 dB boost at 34 Hz. The adjustable low pass section U5B combines with the fixed section U9B to attenuate high frequencies at an ultimate slope of -36dB/octave to minimize voice content in the sub-woofer. The symmetric active clipper U8 automatically adapts to the varying DC bulk rail voltage (U1B), to control the amplifier peak output level to a point just below hard clipping (the steep low pass filter rapidly attenuates the harmonics to keep distortion to an acceptably low level). The power amplifier includes U9A, class A level shifter Q1-Q4 and complementary Darlington buffer Q5-Q6. FET Q7 in series with Q6 sustains half of the rail-to-output voltage, as does Q8 for Q5 (with quasi-complementary driver Q9). Active current limiting and SOA protection are implemented by Q11-Q12 with associated components; these are omitted on versions without extension terminals.

Some versions also contain an "auto mute" circuit which silences the amplifier after a signal absence of about 5.8 minutes. U108 amplifies level inputs by 40db for threshold comparator U10A. U11 is a retriggerable one-shot formed from a 16 stage counter and an oscillator of about 93 HZ which times out about 5.8 minutes after the last signal input is detected by U10A. Some models also contain an LED indicator D31 (showing that the amplifier is enabled) driven by current source Q15. The actual mute switch is J-FET Q17 in the low pass filter section, controlled by the output of U11.

## 2. Trouble shooting before opening

Check connections, control settings, driver and other possible external problems. If there is output, determine if all controls & inputs function properly. Rotate pots over full range while applying lateral and vertical oscillating forces to locate possible intermittent function. High level inputs should be tested individually, both differentially (signal from '-' to '+' with normal output) and in common mode (signal from low level ground to both '+' and '-' shorted together, giving virtually no output). While passing a signal, corner drop the enclosure a few inches to expose possible intermittent problems. Check woofer for rubbing of voice coil or tears in cone or surround. Check cabinet for loose extraneous articles which may have been pushed into the rear port.



### 3. Removing the Amplifier

#### **WARNING**

This amplifier has no power switch. Hazardous voltages are present within the unit whenever it is plugged in. This still applies when the over-temperature thermostat opens.

#### **WARNING**

There are voltages and hot components at many points in the amplifier which can, if contacted, cause personal injury. Be extremely careful. Any adjustments or service procedures that require operation of the amplifier out of its enclosure should be performed only by trained service personnel. Refer to drawings for locations of hazards & familiarize yourself with their locations before starting.

#### **WARNING**

The bulk DC electrolytics contain a large amount of stored energy. Wear safety glasses, and remove rings and jewellery when operating the amplifier out of its enclosure. Fully disconnect the AC source and wait one minute for capacitors to discharge before touching circuit. Do not bridge capacitors or bulk DC tracks, or components connected to them. Dangerous fragments of molten metal or shattered components may be ejected.

- a) Disconnect amplifier's AC plug. Wait 60 seconds.
- b) Remove 10 large screws within 0.5" of edge of panel; remove top two last while holding panel in place. (DO NOT remove any other screws).
- c) Carefully tip panel with PC board assembly partly out of cabinet, holding by edges of panel only. Disconnect 2 or 4 quick connects near upper center of PC board.

#### **CAUTION**

Do not pick up or support assembly by PC board or any components on PC assembly. Always support or handle by metal panel.

### 4. Trouble Shooting After Removal

#### **WARNING**

Verify AC plug is disconnected See WARNINGS in section 3 above.

**WARNING**

To prevent loose hardware from reducing safety spacings, it is essential that all hardware be replaced in the same manner as it was removed, with lock washers under all nuts, proper torque on screws and thread locking sealer on the transformer nuts.

**WARNING**

To reduce the risk of electric shock and/or fire, replace items marked on schematic with the safety marking  only with the exact replacements listed in the Safety Component List, section 6. If exact replacements are not available, order them from the factory or an authorized service center.

- a) Check fuse F1. If blown visually check transformer for discoloration, and large caps (C64-65 for bulges or venting. Check for shorts in Q3-Q8 with an ohmmeter, or across bulk DC (D36, etc.)(see schematic), or from cases of Q3-Q8 to panel.

**CAUTION**

MOSFETS Q7 and Q8 are susceptible to damage from static discharges. Use good ESD control procedures when handling, testing or replacing them, or components connected to them.

- b) With ohmmeter, verify contacts of thermostat are closed, voice coil of woofer is about 4 to 8 ohms (model dependent), and windings of transformer are continuous.
- c) Examine board and wiring for obvious damage, broken or poorly soldered connections, or discoloration.
- d) Repair or replace items identified above. Procedures for replacing power transistors and removing PCA are as follows:

**CAUTION**

Use low power, grounded temperature regulated iron with small tip such as Weller PTA7 and ESD control. Use SN63/37 solder 0.032" diameter with "no clean" flux core, Alpha Metals P2 or equal.

- i) Replacing power transistors: Clip all 3 leads near body of transistor. Remove screw and discard device (keep hardware and insulator). Holding each lead in turn with needle nose pliers, gently heat and remove cut lead from slot in edge of PCB.

Supporting the leads where they enter the plastic case, fold up the three leads in the manner of the original without applying stress to the plastic case. Clean insulator and seating area on back of panel. Coat both sides of insulator with zinc oxide (white) thermal compound (unless silicone rubber pads are provided), position it on back of device and place pair over hole in panel. Insert screw from far side, pass shoulder bushing over screw and carefully seat shoulder in hole in tab, add flat washer, lock washer and nut (finger tight). Form leads slightly if necessary, so that they just reach slots in PCB but don't lift transistor away from panel. Tighten screw first then solder all three leads in respective slots with full fillet, being careful not to bridge pads. Use ohmmeter to verify there is no short from tab of transistor to panel, or between pads. See also section (xi) below.

- ii) **Removing PC assembly** (only if absolutely necessary): Remove four screws in power transistors. Remove pot knobs and panel nuts. Remove seven screws attaching signal jack cluster, high level input and PCA from outside of panel. Carefully lift PCA away from panel, lifting power transistors with small screwdriver if needed.

**CAUTION**

Never operate amplifier with load connected when PC assembly is not attached to panel or when any of output transistors is not properly screwed to panel.

- e) If fuse is not blown, and no obvious faults are identified above, proceed cautiously as follows after reading and understanding instructions as well as warnings above, and identifying hazardous line voltage areas on assembly from component locator drawings (if you are unsure, consult the manufacturer before energizing):

- i) Connect lab audio oscillator (output level at zero) to left signal input. Set amplifier 'gain' control fully clockwise, 'crossover' to 90Hz. Place unit with panel and knobs down on a clean, convenient area of bench so that it is not necessary to reach across amplifier to access test equipment. Use foam blocks to hold securely and prevent rocking or damage to panel.
- ii) Connect negative lead of DVM to speaker 'black' tab. Use an insulated, shrouded probe for positive lead. Refer to Component Locator for test point locations to follow, and take care not to short to adjacent points with probe tip.
- iii) Position a switched 'power bar' with the switch in a convenient location near the edge of the bench well away from the unit so that it can be reached safely to turn AC power ON and OFF to unit without risk of accidental contact with exposed areas of assembly. See Safety Warnings in preface.

With 'bar' switch OFF, plug amplifier cord into this controlled 'power bar'.

- iv) Observing appropriate safety procedures, turn 'bar' ON.

With DVM probe, test following voltages:

+V	+50VDC $\pm 10\%$
-V	-50VDC $\pm 10\%$
A+	+15VDC $\pm 10\%$
A-	-15VDC $\pm 10\%$

If any of these is incorrect, switch OFF and investigate power supply.

- v) If DC is OK, check:

Speaker 'red' tab	0VDC	$\pm 0.03V$
collector tab of Q6	$\approx 25VDC$	(+V +2)
collector tab of Q5	$\approx -25VDC$	(-V +2)

Trouble shoot power amplifier if not correct.

**CAUTION**

Return supply voltage to zero immediately if output has offset as soon as DC is applied, or if DC supply current exceeds 100 mA (trouble shoot further!)

At  $\pm 40V$ , carefully check following voltages with DMM (to speaker 'black' tab):

tab of Q6 about  $+20V$  (approx.  $+V/2$ )

tab of Q5 about  $-20V$  (approx.  $-V/2$ )

Voltage across R11 about  $0.43V$

A+  $+15V \pm 10\%$

A-  $-15V \pm 10\%$

Speaker 'red' tab less than  $\pm 0.03V$

If a DC supply is not available, use variable auto-transformer (VARIAC™, etc) with a series AC Ammeter. Follow the procedure above, observing Safety **WARNINGS**, as the AC input is slowly raised from zero to about 80% of rated voltage ( $+V \approx 40V$ ).

**CAUTION**

Return AC input to zero immediately if the output voltage immediately deviates from zero as AC is initially raised, or if AC input current exceeds about 0.2A. Further trouble shooting is required.

- xii) After the fault has been corrected, re-test using an  $8\Omega$  100 watt load resistor. Amplifier should deliver about 60W RMS at  $8\Omega$  (about 110W at  $4\Omega$ ) from a stiff source of rated voltage at frequencies within its bandpass. Power is limited by the soft clipper on the skirts of the LP filter. Turn input down and disconnect load. There should be no instability or ringing on any of the output waveforms, unloaded, loaded. If some is observed, check compensation and gain-setting components, by-pass caps and damping networks (especially those involving C8, C10 and C11).
- xiii) Tack a 100 ohm 1/4W resistor in the R135 location. Turn unit ON apply input signal. Measure the DC voltage on pin 8 of IC U11 with the amplifier operating. The voltage should be approx. -15 Volts, and the oscillator frequency on pin 1 about 93 Hz. Carefully short pins 6 & 7 and observe the output shuts down within 2 seconds. Remove short and amplifier output should return. Turn OFF and remove R135 resistor to restore full 350 second delay.

## 5. Final Checks

After repair, inspect for possible safety hazards, including loose hardware, missing lock washers, correct fuse and lead dress of primary wires (these must be held in position with cable ties so that they cannot touch secondary components). With ohmmeter, check that panel is connected to signal ground.

Attach speaker wire(s) with black stripe to 'BLK' tab(s) & others to 'RED' tab(s). Re-install amplifier in cabinet using reverse of procedure in section 3.

### **WARNING**

It is essential that the following safety insulation test be performed prior to returning the Powered Sub-Woofer to the customer, using one of the following methods:

a) Insulation Resistance Test

With a 500VDC Insulation Tester, check insulation from the outer metal contact of the RCA jack (chassis) to the line and neutral of AC cord. Resistance should be  $>100M\Omega$ .

b) Hi-Pot Test

If a UL approved Hi-Pot tester is available, test line & neutral of AC cord to outer shell of RCA jack (chassis) at 1100VAC for 2 seconds. Observe all of instrument manufacturer's instructions and safety warnings in performing this test.

Connect sub-woofer system to a music source. Play at high level while checking for air leaks around driver, and voice coil problems such as rubbing or loose turns. With the crossover"frequency" set to 90Hz, very little of the voice content should be heard.

## 6. List of Safety Components Requiring Exact Replacements

F1	<u>120VAC input units:</u> Fuse, 2A/250V 1/4 x 1 1/4 NORMAL BLOW, UL & CSA approved.
	<u>230VAC input units:</u> Fuse, 1A 250V 1/4 x 1 1/4 SLOW BLOW, UL & CSA approved.
TM1	Thermostat, Open on Rise, 60°C, 15°C hysteresis, 10A 240VAC, UL and CSA approved. 230VAC version must also be VDE approved for Class II circuits.  SELCO OA-140-QCV or equal for 120VAC, or ELMWOOD for 230VAC.
T1	POWER TRANSFORMER, CLASS B (130°C) INSULATION, UL & CSA approved. Order from factory quoting model number, serial and rated AC voltage. 230VAC version must also meet IEC 65 requirements.
R21, R26	Resistor 3R3, 1/3W, Metal Film, Fusible Philips CR25, P/N 2322 211 *3338 Philips NFR25, P/N 2322 205 *3338
R126	Resistor 220R, 1/3W Metal film, Fusible, Non-Flammable

Line Cord SPT-2 or better, with polarized plug, UL and CSA marked and approved. Connect 'HOT' side (phase) to fused side, and neutral (wider pin) to 'N' pad on PCB. Use cable ties to dress AC wires so that they cannot touch PCB assembly or parts. A UL/CSA approved panel strain relief, Heyco 1127 (UL/CSA SR-4L-4) or equal, is required. For 230VAC versions, follow electrical code requirement for country of installation.

### **7. Driver Test Procedure**

- A. Using a sine wave generator, volt meter and amplifier, the driver should be swept through the range of 25-100Hz using a voltage of 11 volts. Listen for any abnormal sounds (ticks, buzzes, rattles etc.) that would indicate a defective driver.
- B. Using an ohm meter, make sure that the driver's D.C. resistance measures between 2.5 - 3.8 ohms.


PSW1200 PARTS LIST 120/230 V			
AMPLIFIER			
PART #	DESCRIPTION	LOCATION	
105205	CAP 220uF 25V M AER 8X11	C1	
082006	CAP MCER .1uf 50V K X7R	C2	
102429	CAP 68pf 100V .2 CPH	C3	
081121	CAP .1nf 100V C NPO .2 CPH	C4	
081121	CAP .1nf 100V C NPO .2 CPH	C7	
081023	CAP 2.2nf 100V K X7R .2 CPL	C8	
105205	CAP 220uf 25V M AER 8X11	C9	
105221	CAP MKTER .33uf 63V M .2	C10	
101365	CAP MCER .1uf 100V K X7R	C11	
101365	CAP MCER .1uf 100V K X7R	C12	
101365	CAP MCER .1uf 100V K X7R	C13	
081013	CAP .33nf 100V K X7R .2 CPL	C21	
082009	CAP MCER .22uf 100V K X7R	C22	
081023	CAP 2.2nf 100V K X7R .2 CPL	C29	
081023	CAP 2.2nf 100V K X7R .2 CPL	C30	
081121	CAP .1nf 100V C NPO .2 CPH	C31	
082006	CAP MCER .1uf 50V K X7R	C32	
082006	CAP MCER .1uf 50V K X7R	C33	
082006	CAP MCER .1uf 50V K X7R	C34	
104878	CAP MKTER .15uf 100V K .4	C36	
082006	CAP MCER .1uf 50V K X7R	C38	
082006	CAP MCER .1uf 50V K X7R	C39	
082006	CAP MCER .1uf 50V K X7R	C40	
082006	CAP MCER .1uf 50V K X7R	C41	
101257	CAP 33nf 100V K X7R	C42	
082002	CAP MCER .22uf 50V X7R .2	C43	
101842	CAP MCER 15nf 50V X7R .2	C44	
105221	CAP MKTER .33uf 63V M .2	C45	
105205	CAP 220uf 25V M AER 8X11	C46	
105206	CAP 100uf 35V M AER 8X11	C47	
081013	CAP .33nf 100V K X7R .2 CPL	C48	
082009	CAP MCER .22uf 100V K X7R	C49	
082000	CAP MCER .1uf 50V M Z5U .2	C58	
082000	CAP MCER .1uf 50V M Z5U .2	C59	
105199	CAP 4700uf 63V M AER 22X50	C64	
105199	CAP 4700uf 63V M AER 22X50	C65	
082006	CAP MCER .1uf 50V K	C71	
101059	CAP C MONO 22nf	C72	
082006	CAP MCER .1uf 50V K	C73	
082001	CAP MCER 47nf 50V	C74	
082000	CAP MCER .1uf 50V	C75	
082000	CAP MCER .1uf 50V	C76	
082000	CAP MCER .1uf 50V	C77	
082007	CAP MCER 10nf 50V K X7R	C80	
082006	CAP MCER .1uf 50V K X7R	C82	
014530	ZENER 1N5230B 4V7 W5 D035	D1	
011001	DIODE 1N4005 1A 600V D041	D2	
014530	ZENER 1N5230B 4V7 W5 D035	D3	
011001	DIODE 1N4005 1A 600V D041	D4	
014537	ZENER 1N5237B 8V2 W5 D035	D7	
010001	DIODE IN4148 75V D035	D8	
014537	ZENER 1N5237B 8V2 W5 D035	D9	
011001	DIODE 1N4005 1A 600V D041	D10	
011001	DIODE 1N4005 1A 600V D041	D11	


014540	ZENER 1N5240B 10V W5 DO35	D12
014537	ZENER 1N5237B 8V2 W5 DO35	D13
014545	ZENER 1N5245B 15V W5 DO35	D14
010001	DIODE IN4148 75V DO35	D21
010001	DIODE IN4148 75V DO35	D22
014444	ZENER 1N4744A 12V 1W DO41	D25
014444	ZENER 1N4744A 12V 1W DO41	D26
010001	DIODE IN4148 75V DO35	D29
105387	DIODE LED PCB MNT	D31
105202	DIODE BRIDGE PB64 6A 400V	D36
105310	FUSE 1.75A 250V .25X1.25 120V VERSION	F1
105400	FUSE 1A/250V 'F' TYPE 230V VERSION	F1
105300	FRONT PLATE/HEAT SINK 120V VERSION	FRONT PLATE
105404	FRONT PLATE/HEAT SINK 230V VERSION	FRONT PLATE
104924	ASSY HTSINK	HS1
105263	RCA INPUT JACKS	J5
105268	SPEAKER TERM CONNECTOR	J6
105268	SPEAKER TERM CONNECTOR	J7
104881	KNOBS	KNOB
105204	PWR CORD 120V SPT-2 BLK	LINE CORD
105408	PWR CORD 230V 6.2mm DIAMETER CABLE	LINE CORD
105517	PWR CORD 230V 7.6mm DIAMETER CABLE	LINE CORD
050515	ON-OFF POWER SWITCH(230V ONLY)	PS
103790	XSTR MPSA06 80V TO92 NPN	Q1
104869	XSTR MPSA56 80V TO92 PNP	Q2
104408	XSTR MJE350 300V	Q3
104868	XSTR MJE340 300V	Q4
104914	<<< XSTR TIP147 100V 218 PNP >>>	Q5 SEE NOTES BELOW IIII
104913	<<< XSTR TIP142 100V 218 NPN >>>	Q6 SEE NOTES BELOW IIII
105525	XSTR IRF540N 100V	Q7
105525	XSTR IRF540N 100V	Q8
104869	XSTR MPSA56 80V TO92 PNP	Q9
021001	XSTR PN2907A 60V	Q15
105287	XSTR J112 35V	Q16
102203	RES 1.5k OW6 1%MF LAQ 1/4	R1
091151	RES 150 OW3 5% CF LAQ 1/4	R2
091133	RES 13K OW3 5% CF LAQ 1/4	R3
093024	RES 39K OW6 1%MF LAQ 1/4	R4
091392	RES 4.7k OW3 5% CF LAQ 1/4	R5
091392	RES 4.7k OW3 5% CF LAQ 1/4	R6
092152	RES 2.2k OW5 5% SF LAQ 1/4	R7
092152	RES 2.2k OW5 5% SF LAQ 1/4	R8
091331	RES 330 OW3 5% CF LAQ 1/4	R9
091223	RES 22K OW3 5% CF LAQ 1/4	R10
091270	RES 27 OW3 5% CF LAQ 1/4	R11
091223	RES 22K OW3 5% CF LAQ 1/4	R12
092339	RES 3.3 OW5 5% SF LAQ 1/4	R21
091223	RES 22K OW3 5% CF LAQ 1/4	R22
091331	RES 330 OW3 5% CF LAQ 1/4	R23
091270	RES 27 OW3 5% CF LAQ 1/4	R24
092689	RES 6.8 OW5 5% SF LAQ 1/4	R25
092339	RES 3.3 OW5 5% SF LAQ 1/4	R26
091270	RES 27 OW3 5% CF LAQ 1/4	R29
092472	RES 4.7k OW5 5% SF LAQ	R30
091101	RES 100 OW3 5% CF LAQ	R31
092472	RES 4.7k OW5 5% SF LAQ	R32
092689	RES 6.8 OW5 5% SF LAQ 1/4	R34
091102	RES 1k OW3 5% SF LAQ 1/4	R35

091103	RES 10K OW3 5% CF LAQ 1/4	R36
091270	RES 27 OW3 5% CF LAQ 1/4	R37
091392	RES 4.7k OW3 5% CF LAQ 1/4	R38
092472	RES 4.7k OW5 5% SF LAQ	R39
092472	RES 4.7k OW5 5% SF LAQ	R40
091109	RES 1 OW3 5% CF LAQ 1/4	R41
092103	RES 10K OW5 5% SF LAQ	R43
091222	RES 2.2k OW3 5% CF LAQ 1/4	R51
091474	RES 470K OW3 5% CF LAQ 1/4	R52
100036	RES 49.9k OW6 1%MF LAQ 1/4	R59
100036	RES 49.9k OW6 1%MF LAQ 1/4	R60
100036	RES 49.9k OW6 1%MF LAQ 1/4	R61
104976	RES 24.9k OW6 1%MF LAQ 1/4	R62
102084	RES 7.15k OW6 1%MF LAQ 1/4	R63
093016	RES 100K OW6 1%MF LAQ 1/4	R64
093016	RES 100K OW6 1%MF LAQ 1/4	R65
093016	RES 100K OW6 1%MF LAQ 1/4	R66
093016	RES 100K OW6 1%MF LAQ 1/4	R67
102084	RES 7.15k OW6 1%MF LAQ 1/4	R68
100036	RES 49.9k OW6 1%MF LAQ 1/4	R69
104976	RES 24.9k OW6 1%MF LAQ 1/4	R70
091225	RES 2.2m OW3 5% CF LAQ 1/4	R71
091333	RES 33K OW3 5% CF LAQ 1/4	R72
091114	RES 110K OW3 5% CF LAQ 1/4	R73
091473	RES 47K OW3 5% CF LAQ 1/4	R74
091683	RES 68K OW3 5% CF LAQ 1/4	R75
091393	RES 39K OW3 5% CF LAQ 1/4	R76
091274	RES 270K OW3 5% CF LAQ 1/4	R77
091153	RES 15K OW3 5% CF LAQ 1/4	R78
091103	RES 10K OW3 5% CF LAQ 1/4	R81
091104	RES 100K OW3 5% CF LAQ 1/4	R82
091222	RES 2.2k OW3 5% CF LAQ 1/4	R85
091470	RES 47 OW3 5% CF LAQ 1/4	R87
091622	RES 6.2k OW3 5% CF LAQ 1/4	R88
105099	POT 10K LIN PANEL MNT	R89
091332	RES 3.3K OW3 5% CF LAQ 1/4	R90
104874	RES 13.3k OW6 1%MF LAQ 1/4	R91
104874	RES 13.3k OW6 1%MF LAQ 1/4	R92
104874	RES 13.3k OW6 1%MF LAQ 1/4	R93
093020	RES 10K OW6 1%MF LAQ 1/4	R94
093020	RES 10K OW6 1%MF LAQ 1/4	R95
091220	RES 22 OW3 5% CF LAQ 1/4	R96
091225	RES 2.2m OW3 5% CF LAQ 1/4	R97
093056	RES 18.7k OW6 1%MF LAQ 1/4	R98 DO NOT REPLACE. SEE NOTES BELOW !!!!
091431	RES 430 OW3 5% CF LAQ 1/4	R99 DO NOT REPLACE. SEE NOTES BELOW !!!!
105559	RES 665 OW6 1%MF LAQ 1/4	R100 DO NOT REPLACE. SEE NOTES BELOW !!!!
091913	RES 91K OW3 5% CF LAQ 1/4	R101 DO NOT REPLACE. SEE NOTES BELOW !!!!
099039	RES 1K 1W6/2W 5%MF SIL	R102
100789	RES 1.5K 1W6/2W 5%MF SIL	R102(230V)
100789	RES 1.5k 1W6/2W 5%MF SIL	R103(230V)
099039	RES 1K 1W6/2W 5%MF SIL	R104
100789	RES 1.5K 1W6/2W 5%MF SIL	R104(230V)
099039	RES 1K 1W6/2W 5%MF SIL	R105
100789	RES 1.5K 1W6/2W 5%MF SIL	R105(230V)
100789	RES 1.5K 1W6/2W 5%MF SIL	R106(230V)
099039	RES 1K 1W6/2W 5%MF SIL	R107
100789	RES 1.5K 1W6/2W 5%MF SIL	R107(230V)
091222	RES 2.2k OW3 5% CF LAQ 1/4	R108




## PSW Series Subwoofers

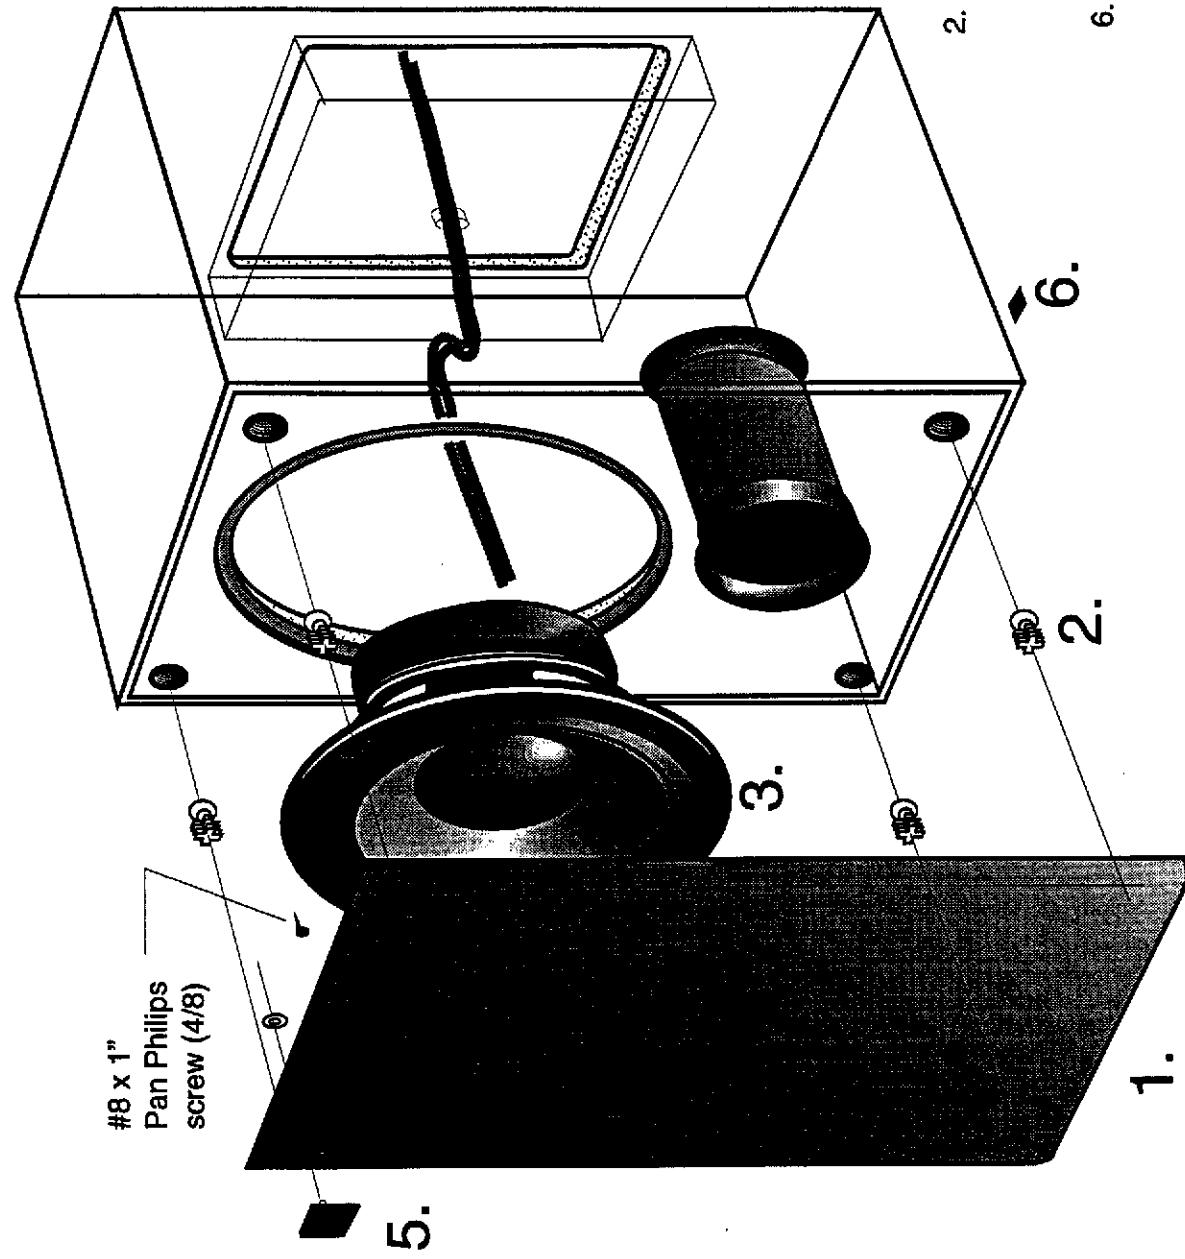

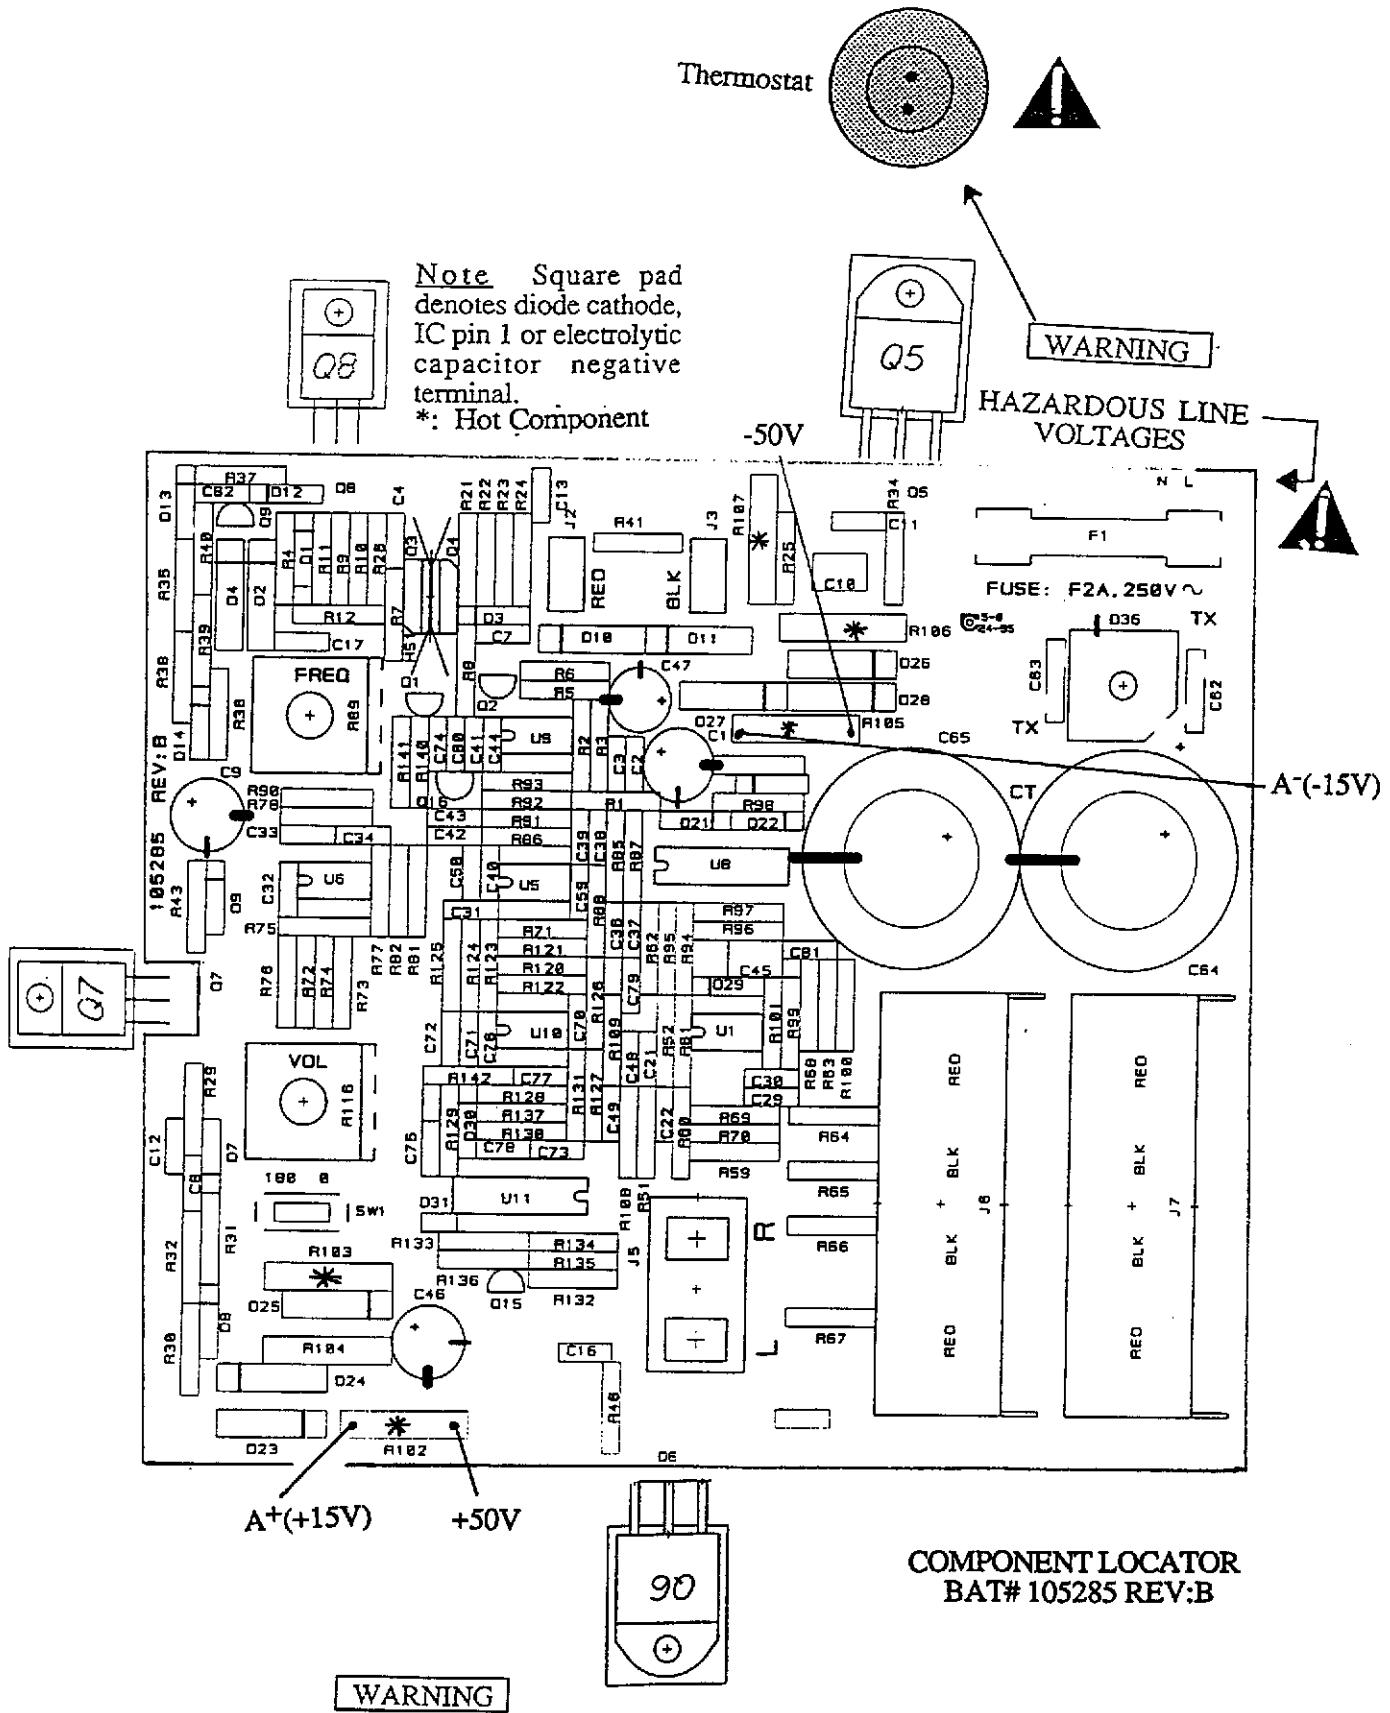


There are voltages and hot components at many parts in the amplifier which can, if contacted, cause personal injury. Any adjustments or service procedures that require operation of the amplifier out of its enclosure should be performed only by trained service personnel. Read service manual before opening.

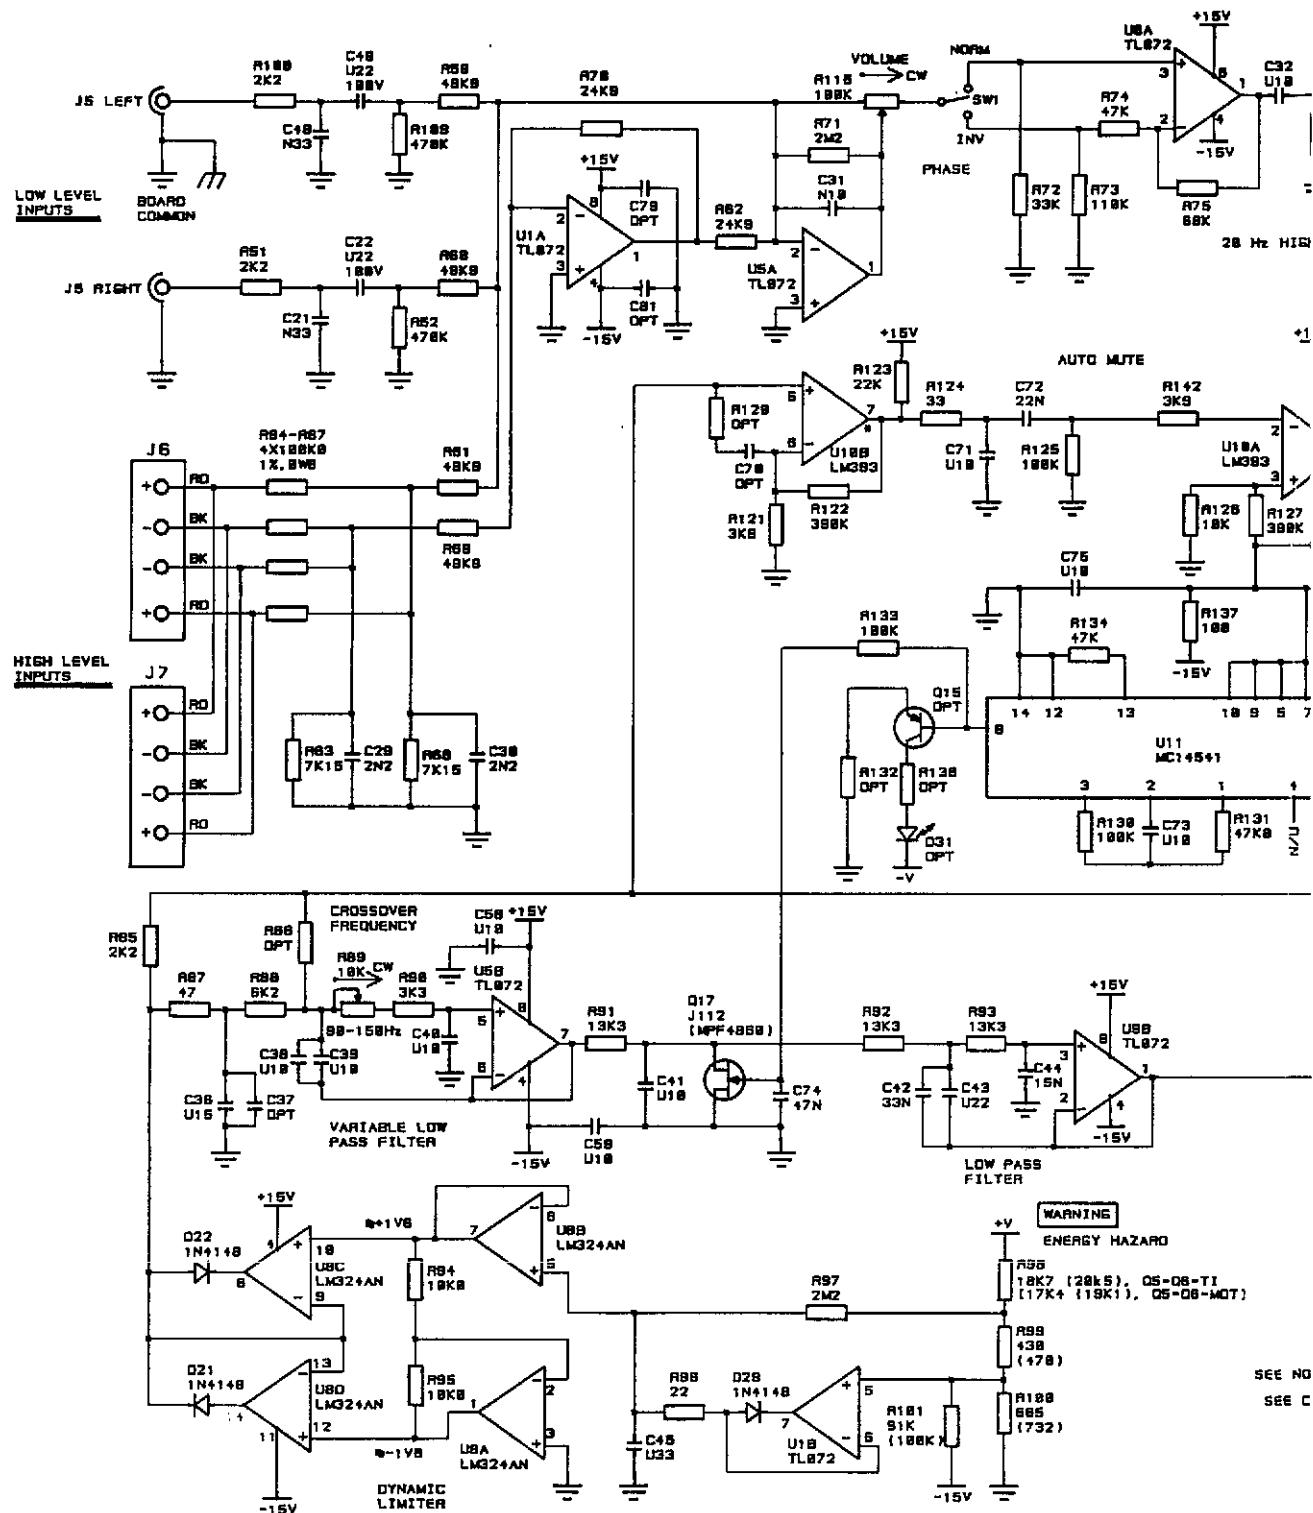

## REVISIONS

REV.	DESCRIPTION	ECO	DATE	DRAWN	CHKD
A	PRODUCTION RELEASE				

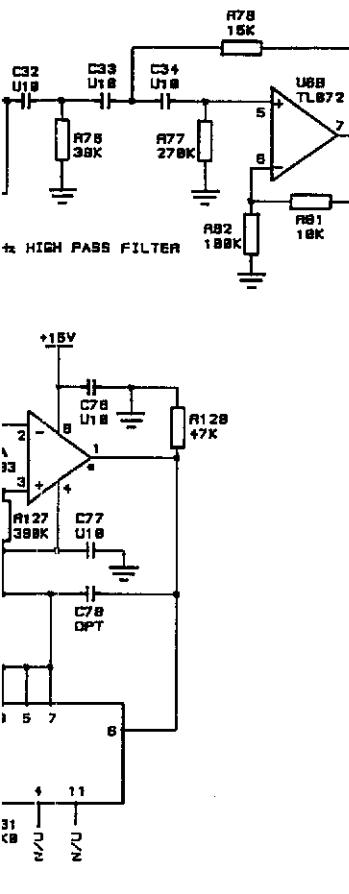


① (SUBWOOFER AMP,  
SHEET 2)

## WARNING


SEE NOTES AND WARNINGS ON SHEET 2.  
SEE COPYRIGHT NOTICE ON SHEET 2.

UNLESS OTHERWISE STATED ALL DIMS. IN INCHES			
TOL	X ± .020 .XX ± .010 .XXX ± .005	DWN. BY GJCHAN	28 APR 1995
MATERIAL	ENG. <i>[Signature]</i>	28/APR/95	TITLE PSW1200 Schematic 110v Version
FINISH	MFG. <i>[Signature]</i>	28/APR/95	
QUALITY	28/APR/95	DRAWING No. 105261-004	REV A
SCALE		B	SHT 1 OF 2

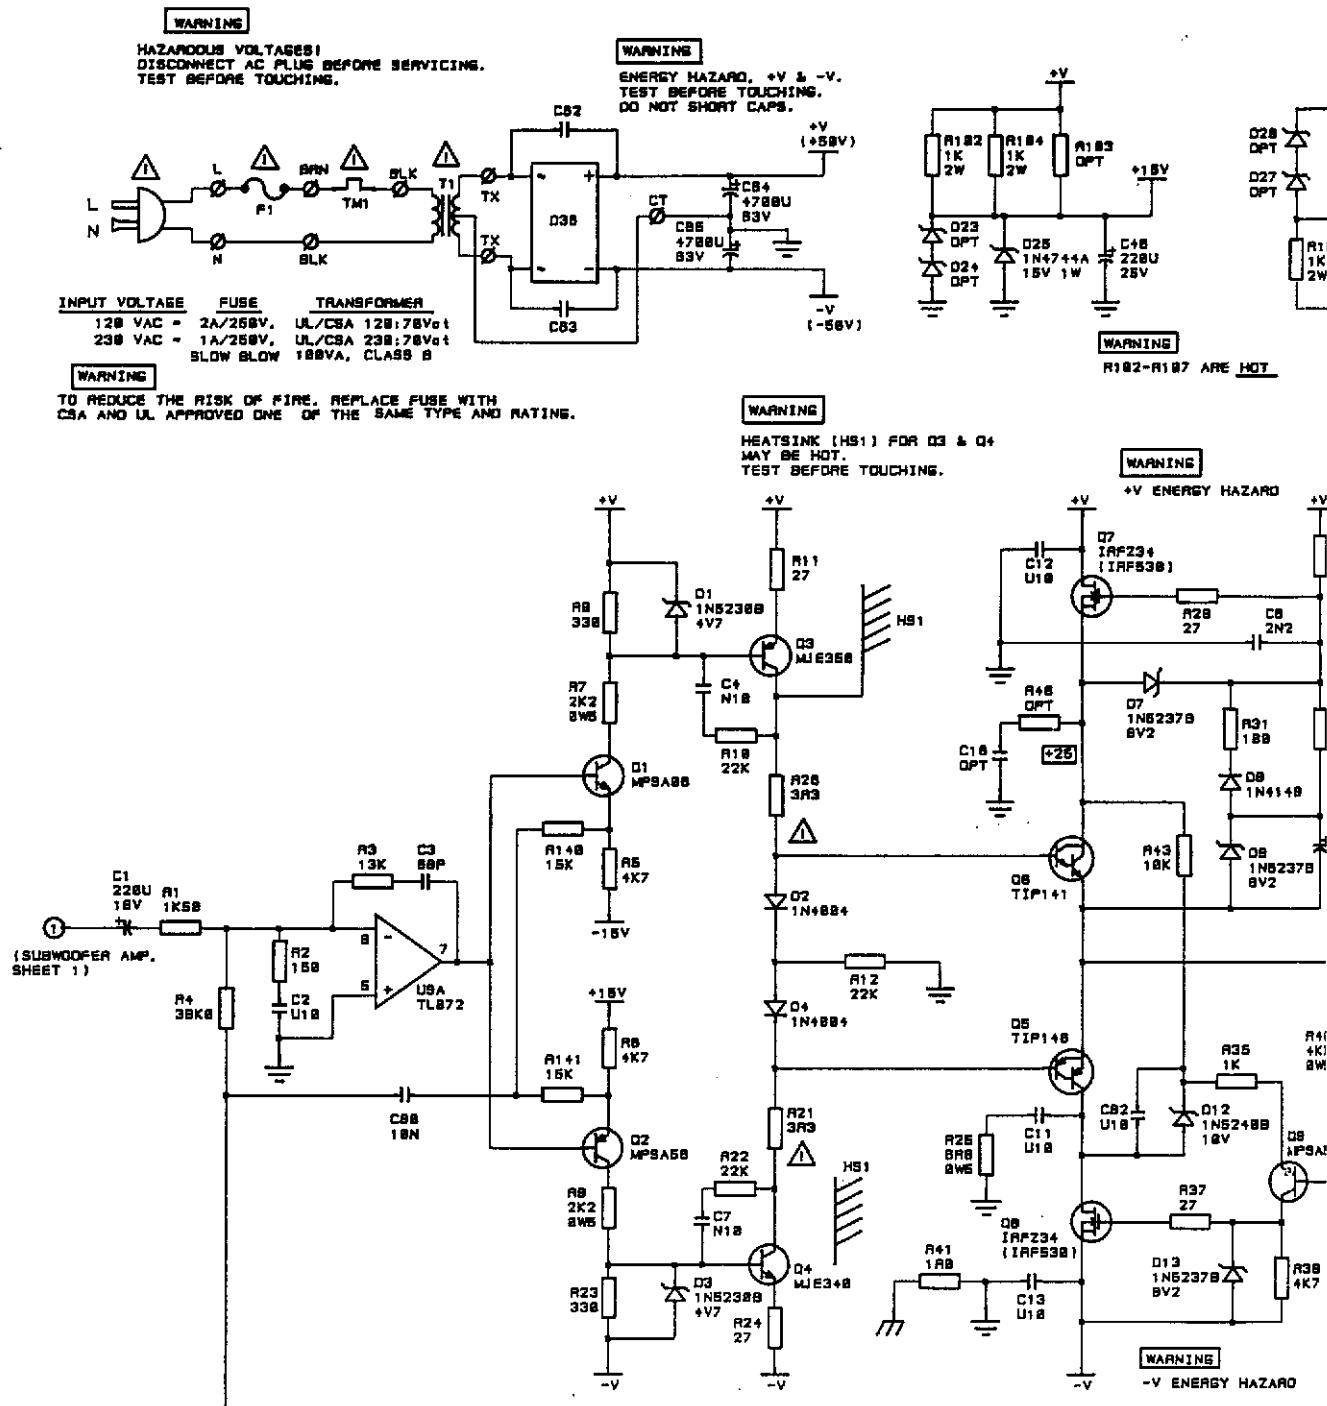

## REVISIONS

REV.	DESCRIPTION	ECO	DATE	DRAWN	CHKD

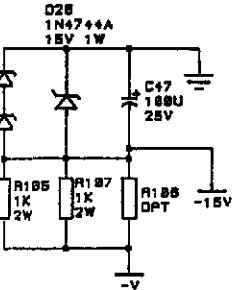

**WARNING**


THIS AMPLIFIER HAS NO POWER SWITCH. HAZARDOUS VOLTAGES ARE PRESENT WITHIN THE UNIT WHENEVER IT IS PLUGGED IN. THIS STILL APPLIES WHEN THE OVER TEMPERATURE THERMOSTAT OPENS. UNPLUG AND WAIT 60 SECONDS BEFORE SERVICING. ALWAYS TEST BEFORE TOUCHING POINTS WHICH MAY OFFER A HAZARD.

**WARNING**

THERE ARE VOLTAGES AND HOT COMPONENTS AT MANY POINTS IN THE AMPLIFIER WHICH CAN, IF CONTACTED, CAUSE PERSONAL INJURY. ANY ADJUSTMENTS OR SERVICE PROCEDURES THAT REQUIRE OPERATION OF THE AMPLIFIER OUT OF ITS ENCLOSURE, SHOULD BE PERFORMED ONLY BY TRAINED SERVICE PERSONNEL.

**WARNING**

1. BEFORE OPENING OR SERVICING A UNIT, READ AND UNDERSTAND THE SERVICE MANUAL, ESPECIALLY WARNINGS AND CAUTIONS.
2. ITEMS MARKED **Δ** MUST BE REPLACED WITH THE EXACT COMPONENT SPECIFIED IN THE SERVICE MANUAL, TO REDUCE THE RISK OF FIRE AND / OR ELECTRICAL SHOCK.
3. THE MANUFACTURER RESERVES THE RIGHT TO MAKE CHANGES TO ANY COMPONENTS OR THE DESIGN ITSELF. PLEASE CONTACT THE FACTORY FOR THE LATEST SERVICE MANUAL, QUOTING THE DATE CODE, SERIAL NUMBER, MODEL NUMBER AND RATED VOLTAGE.
4. THE CIRCUIT DESIGN, SCHEMATIC DRAWINGS (2 SHEETS), PRINTED CIRCUIT BOARD LAYOUT AND SERVICE MANUAL ARE ©1984 BY BAT INC., AND MAY NOT BE REPRODUCED IN WHOLE OR IN PART, OR USED FOR ANY PURPOSE OTHER THAN THE SERVICE AND REPAIR OF THE PRODUCT, WITHOUT THE PRIOR WRITTEN CONSENT OF BAT INC..

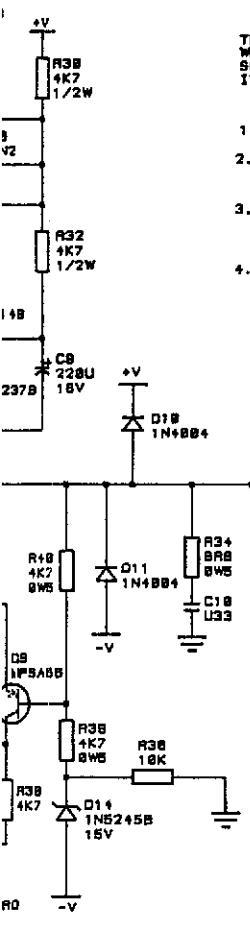

J2  
RED  
AMPLIFIER  
OUTPUT  
J3  
BLACK



UNLESS OTHERWISE STATED ALL DIMS. IN INCHES		DWN. BY G/CHAN	28 APR 1995			
TOL	.X ± .020 .XX ± .010 .XXX ± .005					
MATERIAL		ENG. <i>R. Foski</i>	28/APR/95	TITLE		
FINISH		MEG2 <i>S. S.</i>	28/APR/95	PSW1200 Schematic 110v Version		
QUALITY		DRAWING No. 105261-004			REV A	
		SCALE				
					<b>B</b>	SHT 2 OF 2

**WARNING**

HAZARDOUS VOLTAGES!  
DISCONNECT AC PLUG BEFORE SERVICING.  
TEST BEFORE TOUCHING.

**WARNING**

ENERGY HAZARD, +V & -V.  
TEST BEFORE TOUCHING.  
DO NOT SHORT CAPS.

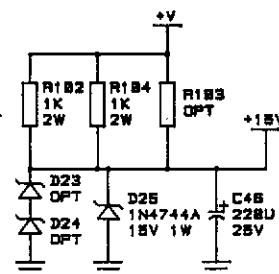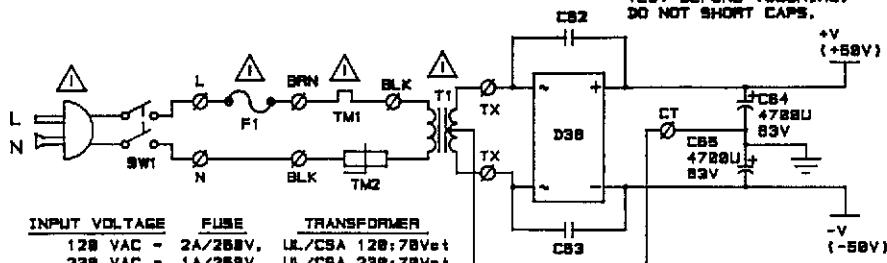


**WARNING**  
R182-R187 ARE

**WARNING**  
TO REDUCE THE RISK OF FIRE, REPLACE FUSE WITH  
CSA AND UL APPROVED ONE OF THE SAME TYPE AND RATING.

**WARNING**

HEATSINK (HS1) FOR Q3 & Q4  
MAY BE HOT.  
TEST BEFORE TOUCHING.

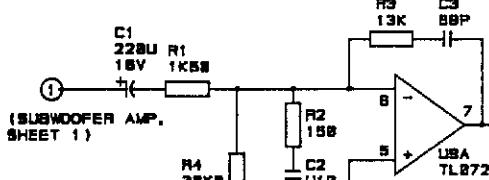

C88  
18N  
189V

R141 1K  
R8 4K7  
R148 1K  
R6 4K7

R149 1K  
R5 4K7

R140 1K  
R7 2K2  
R150 1K  
R9 4K7

R142 1K  
R10 4K7

R143 1K  
R11 27

R144 1K  
R12 22K

R145 1K  
R13 22K

R146 1K  
R14 22K

R147 1K  
R15 22K

R148 1K  
R16 22K

R149 1K  
R17 22K

R150 1K  
R18 22K

R151 1K  
R19 22K

R152 1K  
R20 22K

R153 1K  
R21 22K

R154 1K  
R22 22K

R155 1K  
R23 33K

R156 1K  
R24 27

R157 1K  
R25 33K

R158 1K  
R26 33K

R159 1K  
R27 27

R160 1K  
R28 33K

R161 1K  
R29 27

R162 1K  
R30 27

R163 1K  
R31 27

R164 1K  
R32 27

R165 1K  
R33 27

R166 1K  
R34 27

R167 1K  
R35 27

R168 1K  
R36 27

R169 1K  
R37 27

R170 1K  
R38 27

R171 1K  
R39 27

R172 1K  
R40 27


R173 1K  
R41 27

R174 1K  
R42 27

R175 1K  
R43 1K  
R44 1K  
R45 1K  
R46 1K  
R47 1K  
R48 1K  
R49 1K  
R50 1K  
R51 1K  
R52 1K  
R53 1K  
R54 1K  
R55 1K  
R56 1K  
R57 1K  
R58 1K  
R59 1K  
R60 1K  
R61 1K  
R62 1K  
R63 1K  
R64 1K  
R65 1K  
R66 1K  
R67 1K  
R68 1K  
R69 1K  
R70 1K  
R71 1K  
R72 1K  
R73 1K  
R74 1K  
R75 1K  
R76 1K  
R77 1K  
R78 1K  
R79 1K  
R80 1K  
R81 1K  
R82 1K  
R83 1K  
R84 1K  
R85 1K  
R86 1K  
R87 1K  
R88 1K  
R89 1K  
R90 1K  
R91 1K  
R92 1K  
R93 1K  
R94 1K  
R95 1K  
R96 1K  
R97 1K  
R98 1K  
R99 1K  
R100 1K  
R101 1K  
R102 1K  
R103 1K  
R104 1K  
R105 1K  
R106 1K  
R107 1K  
R108 1K  
R109 1K  
R110 1K  
R111 1K  
R112 1K  
R113 1K  
R114 1K  
R115 1K  
R116 1K  
R117 1K  
R118 1K  
R119 1K  
R120 1K  
R121 1K  
R122 1K  
R123 1K  
R124 1K  
R125 1K  
R126 1K  
R127 1K  
R128 1K  
R129 1K  
R130 1K  
R131 1K  
R132 1K  
R133 1K  
R134 1K  
R135 1K  
R136 1K  
R137 1K  
R138 1K  
R139 1K  
R140 1K  
R141 1K  
R142 1K  
R143 1K  
R144 1K  
R145 1K  
R146 1K  
R147 1K  
R148 1K  
R149 1K  
R150 1K  
R151 1K  
R152 1K  
R153 1K  
R154 1K  
R155 1K  
R156 1K  
R157 1K  
R158 1K  
R159 1K  
R160 1K  
R161 1K  
R162 1K  
R163 1K  
R164 1K  
R165 1K  
R166 1K  
R167 1K  
R168 1K  
R169 1K  
R170 1K  
R171 1K  
R172 1K  
R173 1K  
R174 1K  
R175 1K  
R176 1K  
R177 1K  
R178 1K  
R179 1K  
R180 1K  
R181 1K  
R182 1K  
R183 1K  
R184 1K  
R185 1K  
R186 1K  
R187 1K  
R188 1K  
R189 1K  
R190 1K  
R191 1K  
R192 1K  
R193 1K  
R194 1K  
R195 1K  
R196 1K  
R197 1K  
R198 1K  
R199 1K  
R200 1K  
R201 1K  
R202 1K  
R203 1K  
R204 1K  
R205 1K  
R206 1K  
R207 1K  
R208 1K  
R209 1K  
R210 1K  
R211 1K  
R212 1K  
R213 1K  
R214 1K  
R215 1K  
R216 1K  
R217 1K  
R218 1K  
R219 1K  
R220 1K  
R221 1K  
R222 1K  
R223 1K  
R224 1K  
R225 1K  
R226 1K  
R227 1K  
R228 1K  
R229 1K  
R230 1K  
R231 1K  
R232 1K  
R233 1K  
R234 1K  
R235 1K  
R236 1K  
R237 1K  
R238 1K  
R239 1K  
R240 1K  
R241 1K  
R242 1K  
R243 1K  
R244 1K  
R245 1K  
R246 1K  
R247 1K  
R248 1K  
R249 1K  
R250 1K  
R251 1K  
R252 1K  
R253 1K  
R254 1K  
R255 1K  
R256 1K  
R257 1K  
R258 1K  
R259 1K  
R260 1K  
R261 1K  
R262 1K  
R263 1K  
R264 1K  
R265 1K  
R266 1K  
R267 1K  
R268 1K  
R269 1K  
R270 1K  
R271 1K  
R272 1K  
R273 1K  
R274 1K  
R275 1K  
R276 1K  
R277 1K  
R278 1K  
R279 1K  
R280 1K  
R281 1K  
R282 1K  
R283 1K  
R284 1K  
R285 1K  
R286 1K  
R287 1K  
R288 1K  
R289 1K  
R290 1K  
R291 1K  
R292 1K  
R293 1K  
R294 1K  
R295 1K  
R296 1K  
R297 1K  
R298 1K  
R299 1K  
R300 1K  
R301 1K  
R302 1K  
R303 1K  
R304 1K  
R305 1K  
R306 1K  
R307 1K  
R308 1K  
R309 1K  
R310 1K  
R311 1K  
R312 1K  
R313 1K  
R314 1K  
R315 1K  
R316 1K  
R317 1K  
R318 1K  
R319 1K  
R320 1K  
R321 1K  
R322 1K  
R323 1K  
R324 1K  
R325 1K  
R326 1K  
R327 1K  
R328 1K  
R329 1K  
R330 1K  
R331 1K  
R332 1K  
R333 1K  
R334 1K  
R335 1K  
R336 1K  
R337 1K  
R338 1K  
R339 1K  
R340 1K  
R341 1K  
R342 1K  
R343 1K  
R344 1K  
R345 1K  
R346 1K  
R347 1K  
R348 1K  
R349 1K  
R350 1K  
R351 1K  
R352 1K  
R353 1K  
R354 1K  
R355 1K  
R356 1K  
R357 1K  
R358 1K  
R359 1K  
R360 1K  
R361 1K  
R362 1K  
R363 1K  
R364 1K  
R365 1K  
R366 1K  
R367 1K  
R368 1K  
R369 1K  
R370 1K  
R371 1K  
R372 1K  
R373 1K  
R374 1K  
R375 1K  
R376 1K  
R377 1K  
R378 1K  
R379 1K  
R380 1K  
R381 1K  
R382 1K  
R383 1K  
R384 1K  
R385 1K  
R386 1K  
R387 1K  
R388 1K  
R389 1K  
R390 1K  
R391 1K  
R392 1K  
R393 1K  
R394 1K  
R395 1K  
R396 1K  
R397 1K  
R398 1K  
R399 1K  
R400 1K  
R401 1K  
R402 1K  
R403 1K  
R404 1K  
R405 1K  
R406 1K  
R407 1K  
R408 1K  
R409 1K  
R410 1K  
R411 1K  
R412 1K  
R413 1K  
R414 1K  
R415 1K  
R416 1K  
R417 1K  
R418 1K  
R419 1K  
R420 1K  
R421 1K  
R422 1K  
R423 1K  
R424 1K  
R425 1K  
R426 1K  
R427 1K  
R428 1K  
R429 1K  
R430 1K  
R431 1K  
R432 1K  
R433 1K  
R434 1K  
R435 1K  
R436 1K  
R437 1K  
R438 1K  
R439 1K  
R440 1K  
R441 1K  
R442 1K  
R443 1K  
R444 1K  
R445 1K  
R446 1K  
R447 1K  
R448 1K  
R449 1K  
R450 1K  
R451 1K  
R452 1K  
R453 1K  
R454 1K  
R455 1K  
R456 1K  
R457 1K  
R458 1K  
R459 1K  
R460 1K  
R461 1K  
R462 1K  
R463 1K  
R464 1K  
R465 1K  
R466 1K  
R467 1K  
R468 1K  
R469 1K  
R470 1K  
R471 1K  
R472 1K  
R473 1K  
R474 1K  
R475 1K  
R476 1K  
R477 1K  
R478 1K  
R479 1K  
R480 1K  
R481 1K  
R482 1K  
R483 1K  
R484 1K  
R485 1K  
R486 1K  
R487 1K  
R488 1K  
R489 1K  
R490 1K  
R491 1K  
R492 1K  
R493 1K  
R494 1K  
R495 1K  
R496 1K  
R497 1K  
R498 1K  
R499 1K  
R500 1K  
R501 1K  
R502 1K  
R503 1K  
R504 1K  
R505 1K  
R506 1K  
R507 1K  
R508 1K  
R509 1K  
R510 1K  
R511 1K  
R512 1K  
R513 1K  
R514 1K  
R515 1K  
R516 1K  
R517 1K  
R518 1K  
R519 1K  
R520 1K  
R521 1K  
R522 1K  
R523 1K  
R524 1K  
R525 1K  
R526 1K  
R527 1K  
R528 1K  
R529 1K  
R530 1K  
R531 1K  
R532 1K  
R533 1K  
R534 1K  
R535 1K  
R536 1K  
R537 1K  
R538 1K  
R539 1K  
R540 1K  
R541 1K  
R542 1K  
R543 1K  
R544 1K  
R545 1K  
R546 1K  
R547 1K  
R548 1K  
R549 1K  
R550 1K  
R551 1K  
R552 1K  
R553 1K  
R554 1K  
R555 1K  
R556 1K  
R557 1K  
R558 1K  
R559 1K  
R560 1K  
R561 1K  
R562 1K  
R563 1K  
R564 1K  
R565 1K  
R566 1K  
R567 1K  
R568 1K  
R569 1K  
R570 1K  
R571 1K  
R572 1K  
R573 1K  
R574 1K  
R575 1K  
R576 1K  
R577 1K  
R578 1K  
R579 1K  
R580 1K  
R581 1K  
R582 1K  
R583 1K  
R584 1K  
R585 1K  
R586 1K  
R587 1K  
R588 1K  
R589 1K  
R590 1K  
R591 1K  
R592 1K  
R593 1K  
R594 1K  
R595 1K  
R596 1K  
R597 1K  
R598 1K  
R599 1K  
R600 1K  
R601 1K  
R602 1K  
R603 1K  
R604 1K  
R605 1K  
R606 1K  
R607 1K  
R608 1K  
R609 1K  
R610 1K  
R611 1K  
R612 1K  
R613 1K  
R614 1K  
R615 1K  
R616 1K  
R617 1K  
R618 1K  
R619 1K  
R620 1K  
R621 1K  
R622 1K  
R623 1K  
R624 1K  
R625 1K  
R626 1K  
R627 1K  
R628 1K  
R629 1K  
R630 1K  
R631 1K  
R632 1K  
R633 1K  
R634 1K  
R635 1K  
R636 1K  
R637 1K  
R638 1K  
R639 1K  
R640 1K  
R641 1K  
R642 1K  
R643 1K  
R644 1K  
R645 1K  
R646 1K  
R647 1K  
R648 1K  
R649 1K  
R650 1K  
R651 1K  
R652 1K  
R653 1K  
R654 1K  
R655 1K  
R656 1K  
R657 1K  
R658 1K  
R659 1K  
R660 1K  
R661 1K  
R662 1K  
R663 1K  
R664 1K  
R665 1K  
R666 1K  
R667 1K  
R668 1K  
R669 1K  
R670 1K  
R671 1K  
R672 1K  
R673 1K  
R674 1K  
R675 1K  
R676 1K  
R677 1K  
R678 1K  
R679 1K  
R680 1K  
R681 1K  
R682 1K  
R683 1K  
R684 1K  
R685 1K  
R686 1K  
R687 1K  
R688 1K  
R689 1K  
R690 1K  
R691 1K  
R692 1K  
R693 1K  
R694 1K  
R695 1K  
R696 1K  
R697 1K  
R698 1K  
R699 1K  
R700 1K  
R701 1K  
R702 1K  
R703 1K  
R704 1K  
R705 1K  
R706 1K  
R707 1K  
R708 1K  
R709 1K  
R710 1K  
R711 1K  
R712 1K  
R713 1K  
R714 1K  
R715 1K  
R716 1K  
R717 1K  
R718 1K  
R719 1K  
R720 1K  
R721 1K  
R722 1K  
R723 1K  
R724 1K  
R725 1K  
R726 1K  
R727 1K  
R728 1K  
R729 1K  
R730 1K  
R731 1K  
R732 1K  
R733 1K  
R734 1K  
R735 1K  
R736 1K  
R737 1K  
R738 1K  
R739 1K  
R740 1K  
R741 1K  
R742 1K  
R743 1K  
R744 1K  
R745 1K  
R746 1K  
R747 1K  
R748 1K  
R749 1K  
R750 1K  
R751 1K  
R752 1K  
R753 1K  
R754 1K  
R755 1K  
R756 1K  
R757 1K  
R758 1K  
R759 1K  
R760 1K  
R761 1K  
R762 1K  
R763 1K  
R764 1K  
R765 1K  
R766 1K  
R767 1K  
R768 1K  
R769 1K  
R770 1K  
R771 1K  
R772 1K  
R773 1K  
R774 1K  
R775 1K  
R776 1K  
R777 1K  
R778 1K  
R779 1K  
R780 1K  
R781 1K  
R782 1K  
R783 1K  
R784 1K  
R785 1K  
R786 1K  
R787 1K  
R788 1K  
R789 1K  
R790 1K  
R791 1K  
R792 1K  
R793 1K  
R794 1K  
R795 1K  
R796 1K  
R797 1K  
R798 1K  
R799 1K  
R800 1K  
R801 1K  
R802 1K  
R803 1K  
R804 1K  
R805 1K  
R806 1K  
R807 1K  
R808 1K  
R809 1K  
R810 1K  
R811 1K  
R812 1K  
R813 1K  
R814 1K  
R815 1K  
R816 1K  
R817 1K  
R818 1K  
R819 1K  
R820 1K  
R821 1K  
R822 1K  
R823 1K  
R824 1K  
R825 1K  
R826 1K  
R827 1K  
R828 1K  
R829 1K  
R830 1K  
R831 1K  
R832 1K  
R833 1K  
R834 1K  
R835 1K  
R836 1K  
R837 1K  
R838 1K  
R839 1K  
R840 1K  
R841 1K  
R842 1K  
R843 1K  
R844 1K  
R845 1K  
R846 1K  
R847 1K  
R848 1K  
R849 1K  
R850 1K  
R851 1K  
R852 1K  
R853 1K  
R854 1K  
R855 1K  
R856 1K  
R857 1K  
R858 1K  
R859 1K  
R860 1K  
R861 1K  
R862 1K  
R863 1K  
R864 1K  
R865 1K  
R866 1K  
R867 1K  
R868 1K  
R869 1K  
R870 1K  
R871 1K  
R872 1K  
R873 1K  
R874 1K  
R875 1K  
R876 1K  
R877 1K  
R878 1K  
R879 1K  
R880 1K  
R881 1K  
R882 1K  
R883 1K  
R884 1K  
R885 1K  
R886 1K  
R887 1K  
R888 1K  
R889 1K  
R890 1K  
R891 1K  
R892 1K  
R893 1K  
R894 1K  
R895 1K  
R896 1K  
R897 1K  
R898 1K  
R899 1K  
R900 1K  
R901 1K  
R902 1K  
R903 1K  
R904 1K  
R905 1K  
R906 1K  
R907 1K  
R908 1K  
R909 1K  
R910 1K  
R911 1K  
R912 1K  
R913 1K  
R914 1K  
R915 1K  
R916 1K  
R917 1K  
R918 1K  
R919 1K  
R920 1K  
R921 1K  
R922 1K  
R923 1K  
R924 1K  
R925 1K  
R926 1K  
R927 1K  
R928 1K  
R929 1K  
R930 1K  
R931 1K  
R932 1K  
R933 1K  
R934 1K  
R935 1K  
R936 1K  
R937 1K  
R938 1K  
R939 1K  
R940 1K  
R941 1K  
R942 1K  
R943 1K  
R944 1K  
R945 1K  
R946 1K  
R947 1K  
R948 1K  
R949 1K  
R950 1K  
R951 1K  
R952 1K  
R953 1K  
R954 1K  
R955 1K  
R956 1K  
R957 1K  
R958 1K  
R959 1K  
R960 1K  
R961 1K  
R962 1K  
R963 1K  
R964 1K  
R965 1K  
R966 1K  
R967 1K  
R968 1K  
R969 1K  
R970 1K  
R971 1K  
R972 1K  
R973 1K  
R974 1K  
R975 1K  
R976 1K  
R977 1K  
R978 1K  
R979 1K  
R980 1K  
R981 1K  
R982 1K  
R983 1K  
R984 1K  
R985 1K  
R986 1K  
R987 1K  
R988 1K  
R989 1K  
R990 1K  
R991 1K  
R992 1K  
R993 1K  
R994 1K  
R995 1K  
R996 1K  
R997 1K  
R998 1K  
R999 1K  
R1000 1K  
R1001 1K  
R1002 1K  
R1003 1K  
R1004 1K  
R1005 1K  
R1006 1K  
R1007 1K  
R1008 1K  
R1009 1K  
R1010 1K  
R1011 1K  
R1012 1K  
R1013 1K  
R101

## REVISONS

REV.	DESCRIPTION	ECO	DATE	DRAWN	CHKD
A	INITIAL RELEASE		01.96.	R.P.C.	

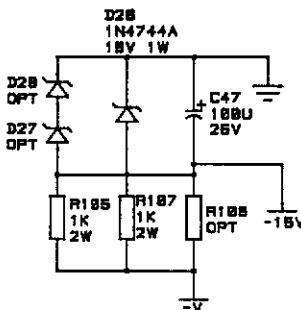

B187 ARE HOT

## WARNING

THIS AMPLIFIER HAS NO POWER SWITCH. HAZARDOUS VOLTAGES ARE PRESENT WITHIN THE UNIT WHENEVER IT IS PLUGGED IN. THIS STILL APPLIES WHEN THE OVER TEMPERATURE THERMOSTAT OPENS. UNPLUG AND WAIT 60 SECONDS BEFORE SERVICING. ALWAYS TEST BEFORE TOUCHING POINTS WHICH MAY OFFER A HAZARD.

## WARNING

THERE ARE VOLTAGES AND HOT COMPONENTS AT MANY POINTS IN THE AMPLIFIER WHICH CAN, IF CONTACTED, CAUSE PERSONAL INJURY. ANY ADJUSTMENTS OR SERVICE PROCEDURES THAT REQUIRE OPERATION OF THE AMPLIFIER OUT OF ITS ENCLOSURE, SHOULD BE PERFORMED ONLY BY TRAINED SERVICE PERSONNEL.

## WARNING

1. BEFORE OPENING OR SERVICING A UNIT, READ AND UNDERSTAND THE SERVICE MANUAL, ESPECIALLY WARNINGS AND CAUTIONS.
2. ITEMS MARKED  $\Delta$  MUST BE REPLACED WITH THE EXACT COMPONENT SPECIFIED IN THE SERVICE MANUAL, TO REDUCE THE RISK OF FIRE AND / OR ELECTRICAL SHOCK.
3. THE MANUFACTURER RESERVES THE RIGHT TO MAKE CHANGES TO ANY COMPONENTS OR THE DESIGN ITSELF. PLEASE CONTACT THE FACTORY FOR THE LATEST SERVICE MANUAL, QUOTING THE DATE CODE, SERIAL NUMBER, MODEL NUMBER AND RATED VOLTAGE.
4. THE CIRCUIT DESIGN, SCHEMATIC DRAWINGS (2 SHEETS), PRINTED CIRCUIT BOARD LAYOUT AND SERVICE MANUAL ARE © 1994 BY BAT INC., AND MAY NOT BE REPRODUCED IN WHOLE OR IN PART, OR USED FOR ANY PURPOSE OTHER THAN THE SERVICE AND REPAIR OF THE PRODUCT, WITHOUT THE PRIOR WRITTEN CONSENT OF BAT INC..

IN


ENERGY HAZARD



378



W

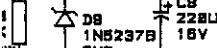

D10



J2

RED

AMPLIFIER

OUTPUT

J3

BLACK

GND

ENERGY HAZARD

-V

UNLESS OTHERWISE STATED  
ALL DIMS. IN INCHES

TOL      .X ± .020  
          .XX ± .010  
          .XXX ± .005

DWN. BY      02. JAN.  
                  1996.

TITLE

PSW1200 Schematic 230v Version


MATERIAL

ENG.

02/JAN/96



FINISH

MFG.

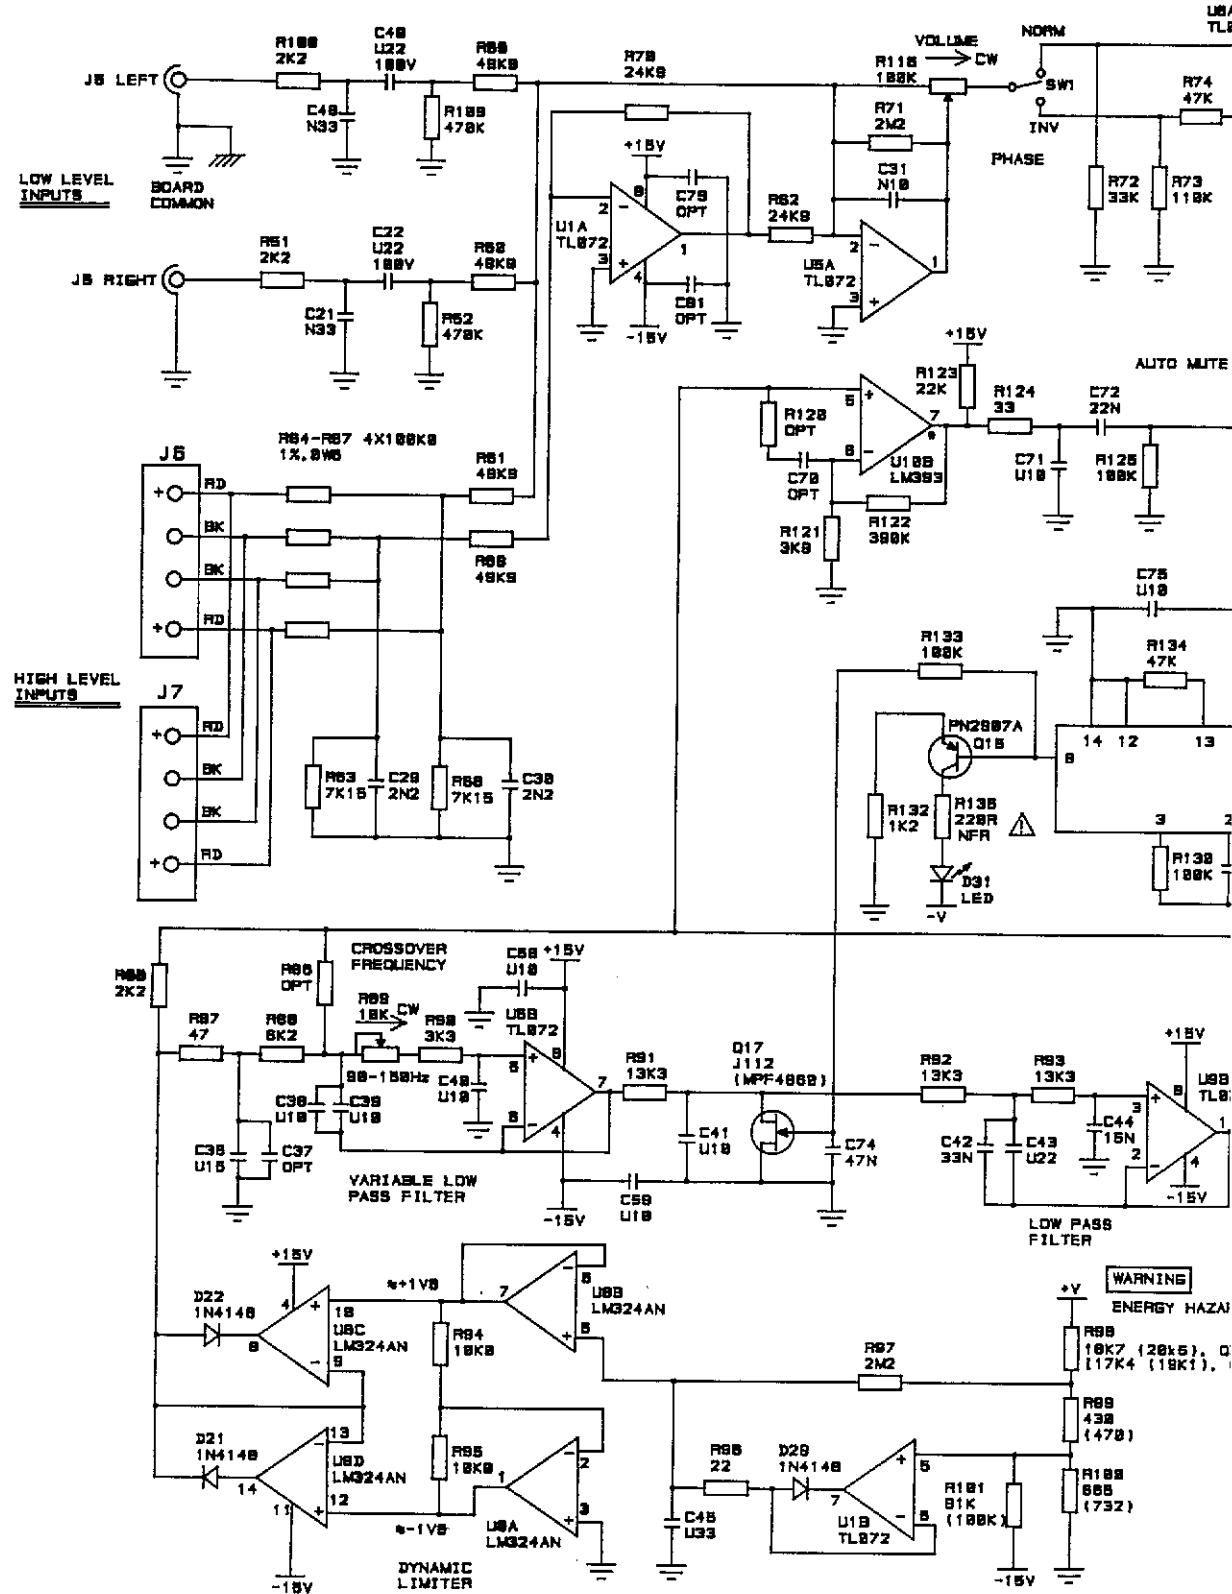

## REVISONS

REV.	DESCRIPTION	ECO	DATE	DRAWN	CHKD
A	INITIAL RELEASE		01/96	J.P. J.S.	

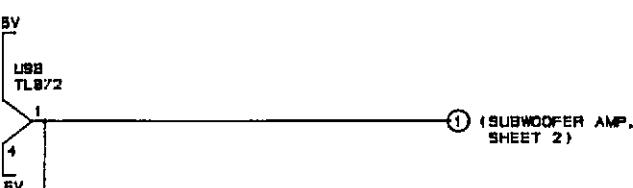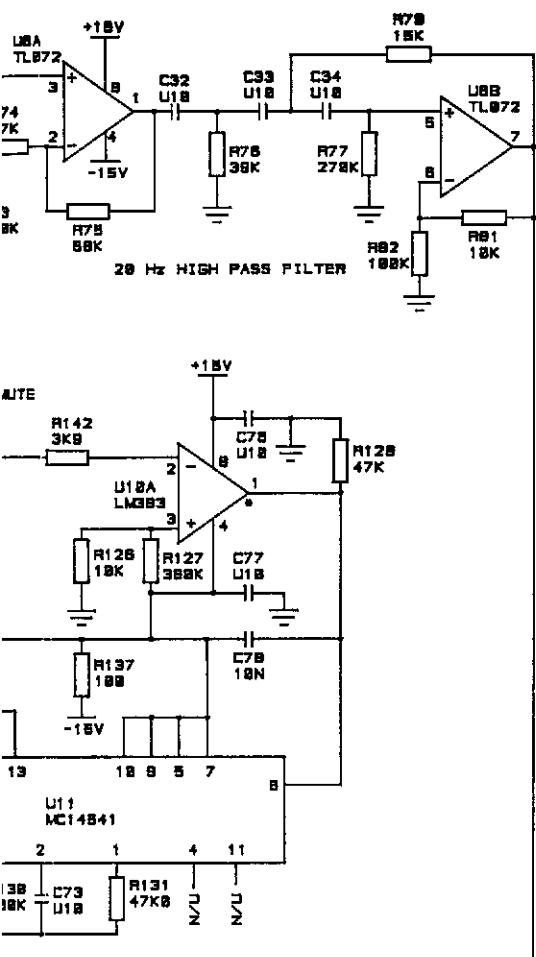

## WARNING

SEE NOTES AND WARNINGS ON SHEET 2.

SEE COPYRIGHT NOTICE ON SHEET 2.

HAZARD  
(1), 05-08-TI  
(1), 05-08-MOT

UNLESS OTHERWISE STATED ALL DIMS. IN INCHES		DWN BY <i>[Signature]</i>	02.JAN. 1996.	TITLE
TOL $X \pm .020$ $.XX \pm .010$ $.XXX \pm .005$				
MATERIAL	ENG. <i>[Signature]</i>	02/JAN/96	DRAWING No.	PSW1200 Schematic 230v Version
	MFG.			
FINISH	QUALITY		105405-004	REV A
	SCALE	NONE	B	SHT 2 OF 2