
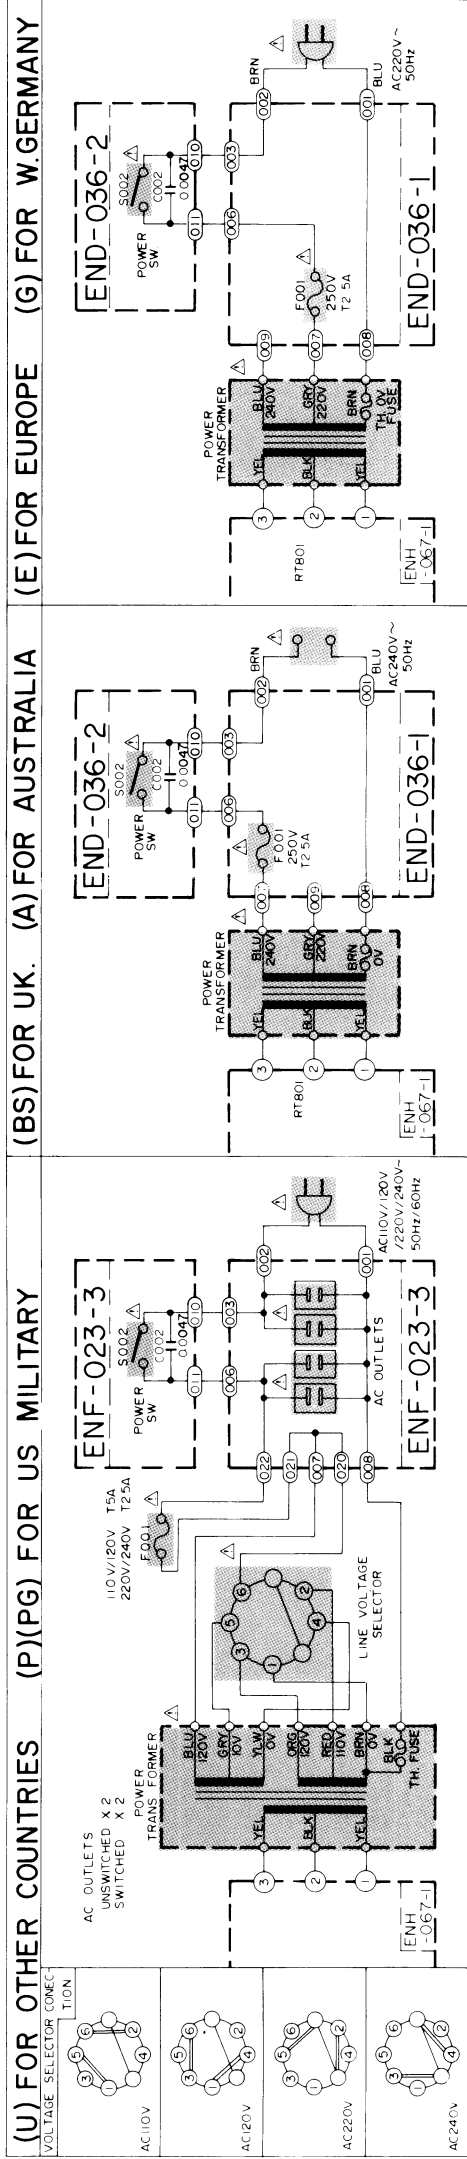


■ AX-E77BK SEA & Power Supply Section

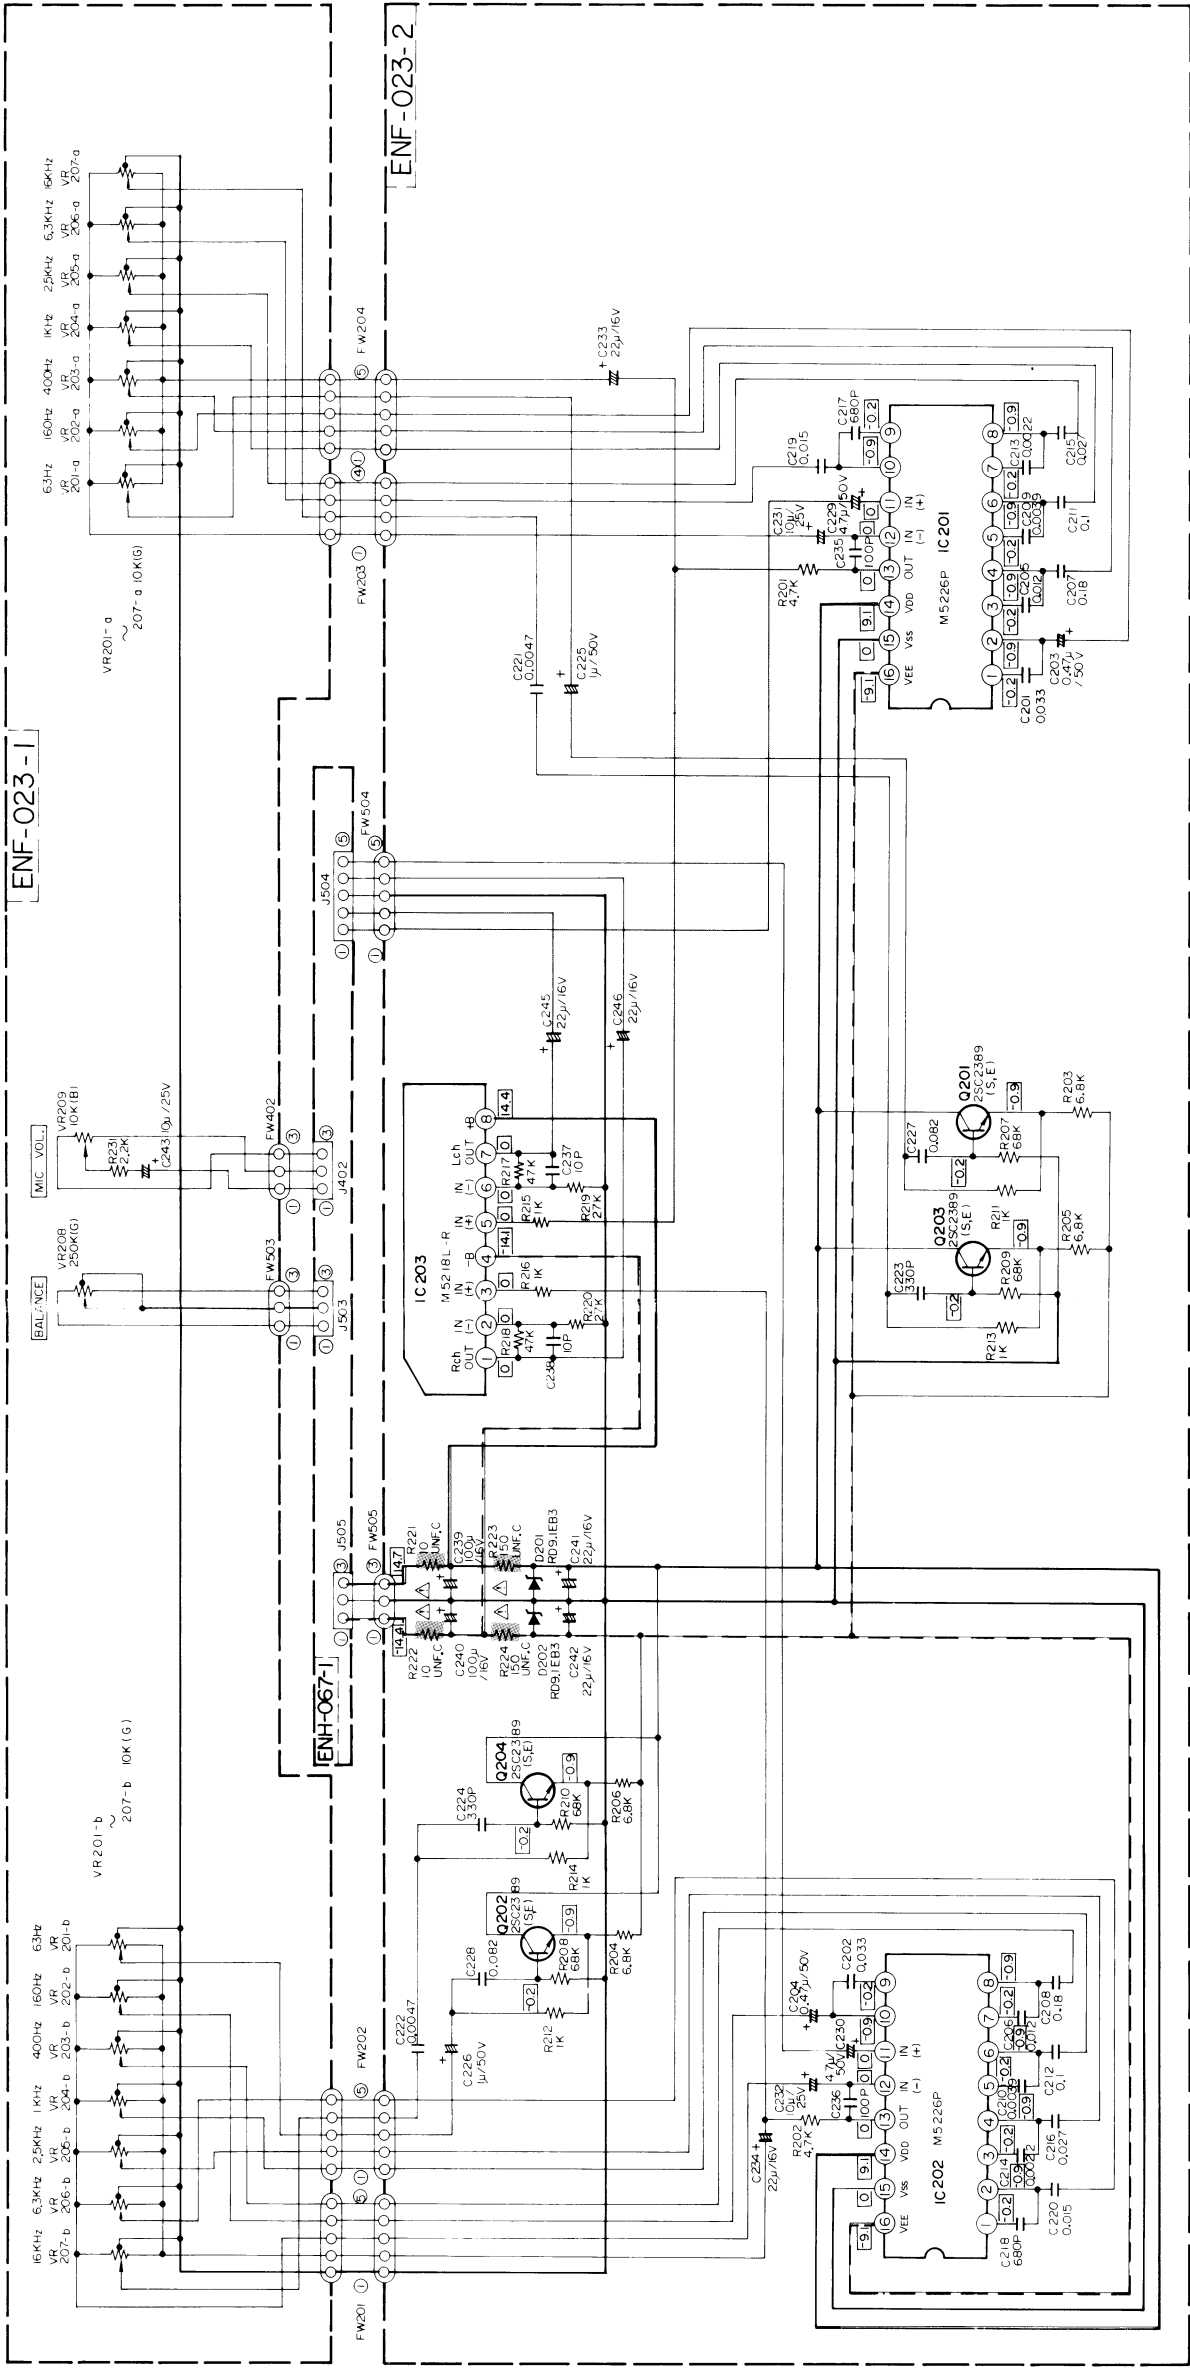

Notes:

1. — indicates positive B power supply.
 2. --- indicates negative B power supply.
 3. — indicates signal path.
 4. ☐ shows DC voltage to the chassis with no signal input.
 5. When replacing the parts in the darkened area (☐) and those marked with Δ , be sure to use the designated parts to ensure safety.
 6. This is the standard circuit diagram.
- The design and contents are subject to change without notice.