

JVC

SERVICE MANUAL

COMPACT COMPONENT SYSTEM

DX-MX90BK CA-MX90BK (UNIT No. AX-MX90BK)




* For instruction manual, please refer to the CA-MX90BK(SM.NO.20267) or DX-MX90BK(SM.NO.20268).


Contents


Safety Precautions	1-2	Internal Wiring of the FL Display	1-17
Technical Explanations	1-3	Block Diagram	1-19
Disassembly Procedures	1-5		
Mini Suggestion for Inspection		Connection Diagram	Insertion
with Active Power	1-6	Printed Circuit Boards	Insertion
Description of Major LSIs	1-7	Schematic Diagrams/Block Diagrams	Insertion
Internal Block Diagrams of the Other ICs	1-11	Parts List	Separate-volume Insertion


Schematic Diagrams

1. Source Select & Speaker Terminal Section

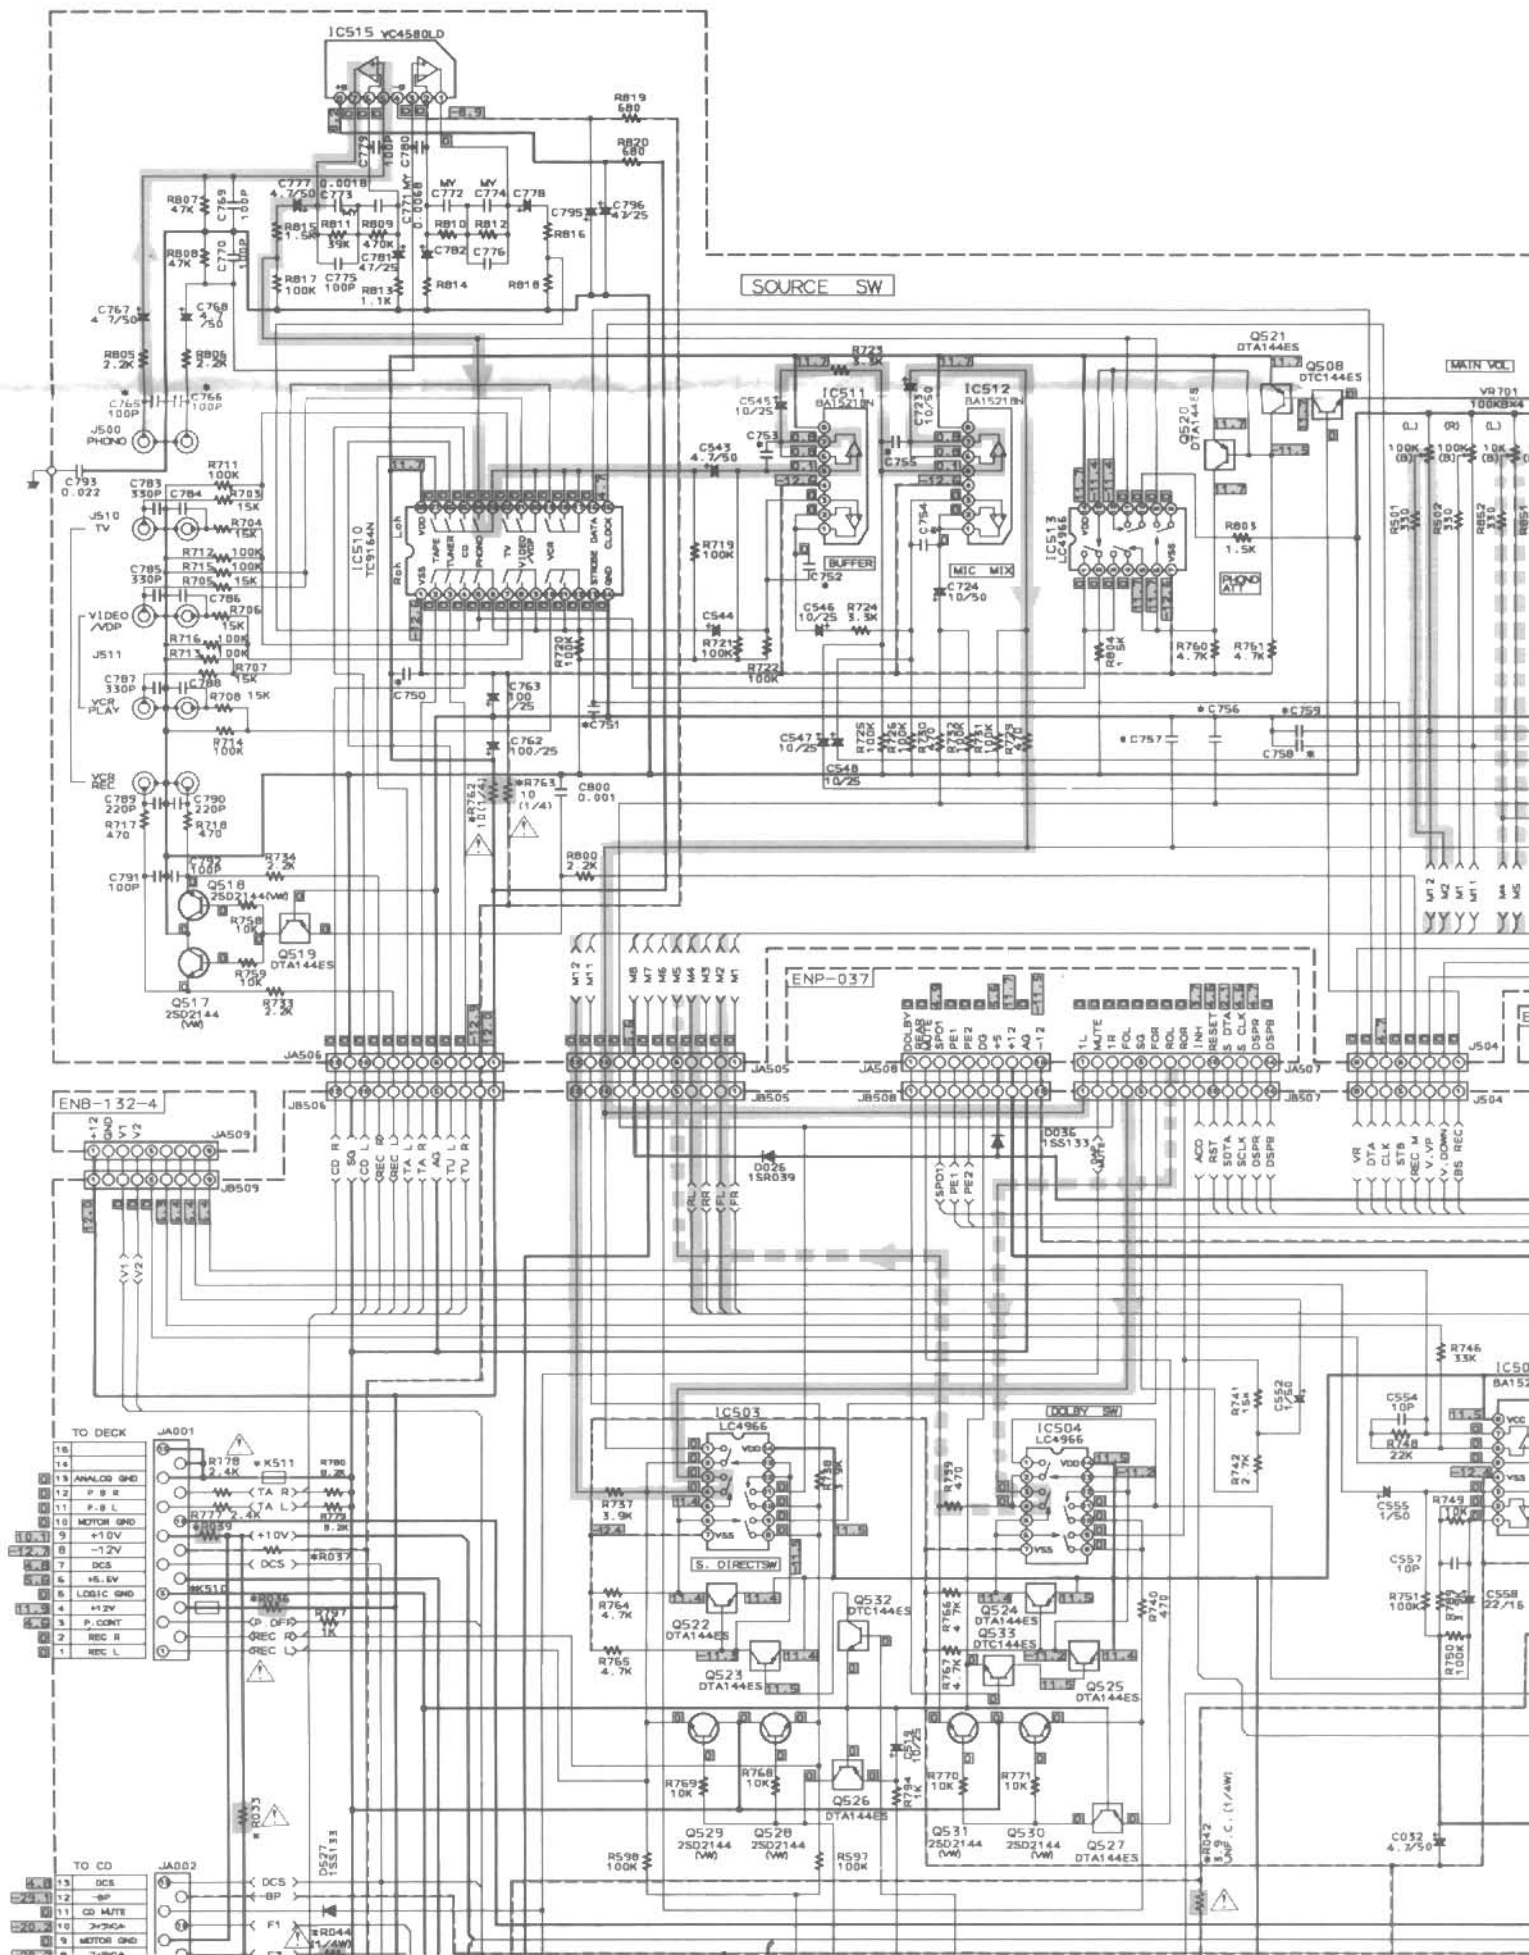

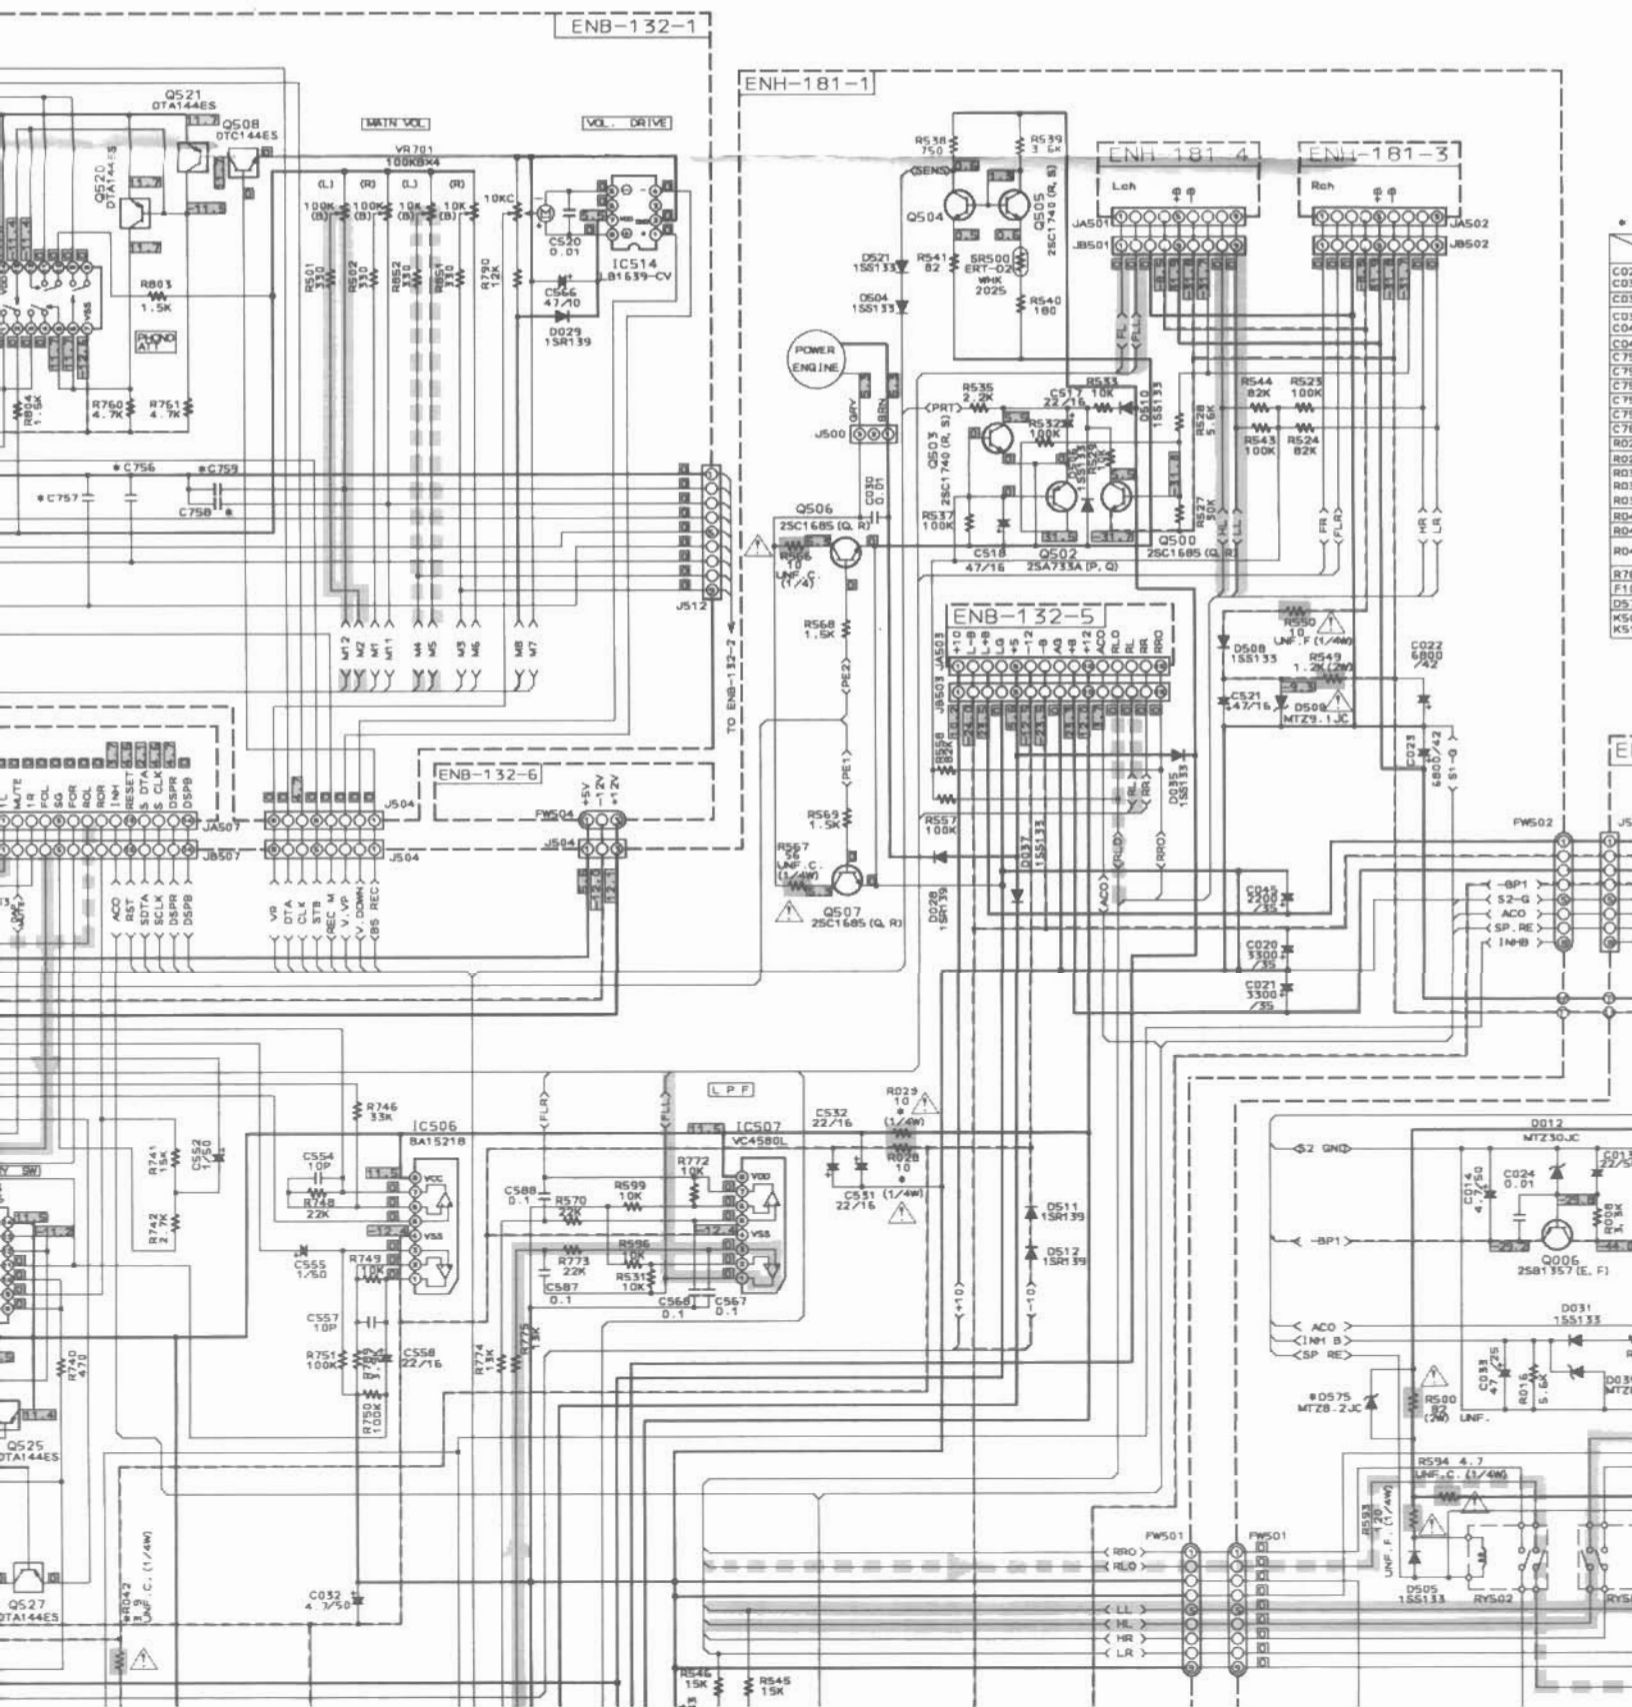

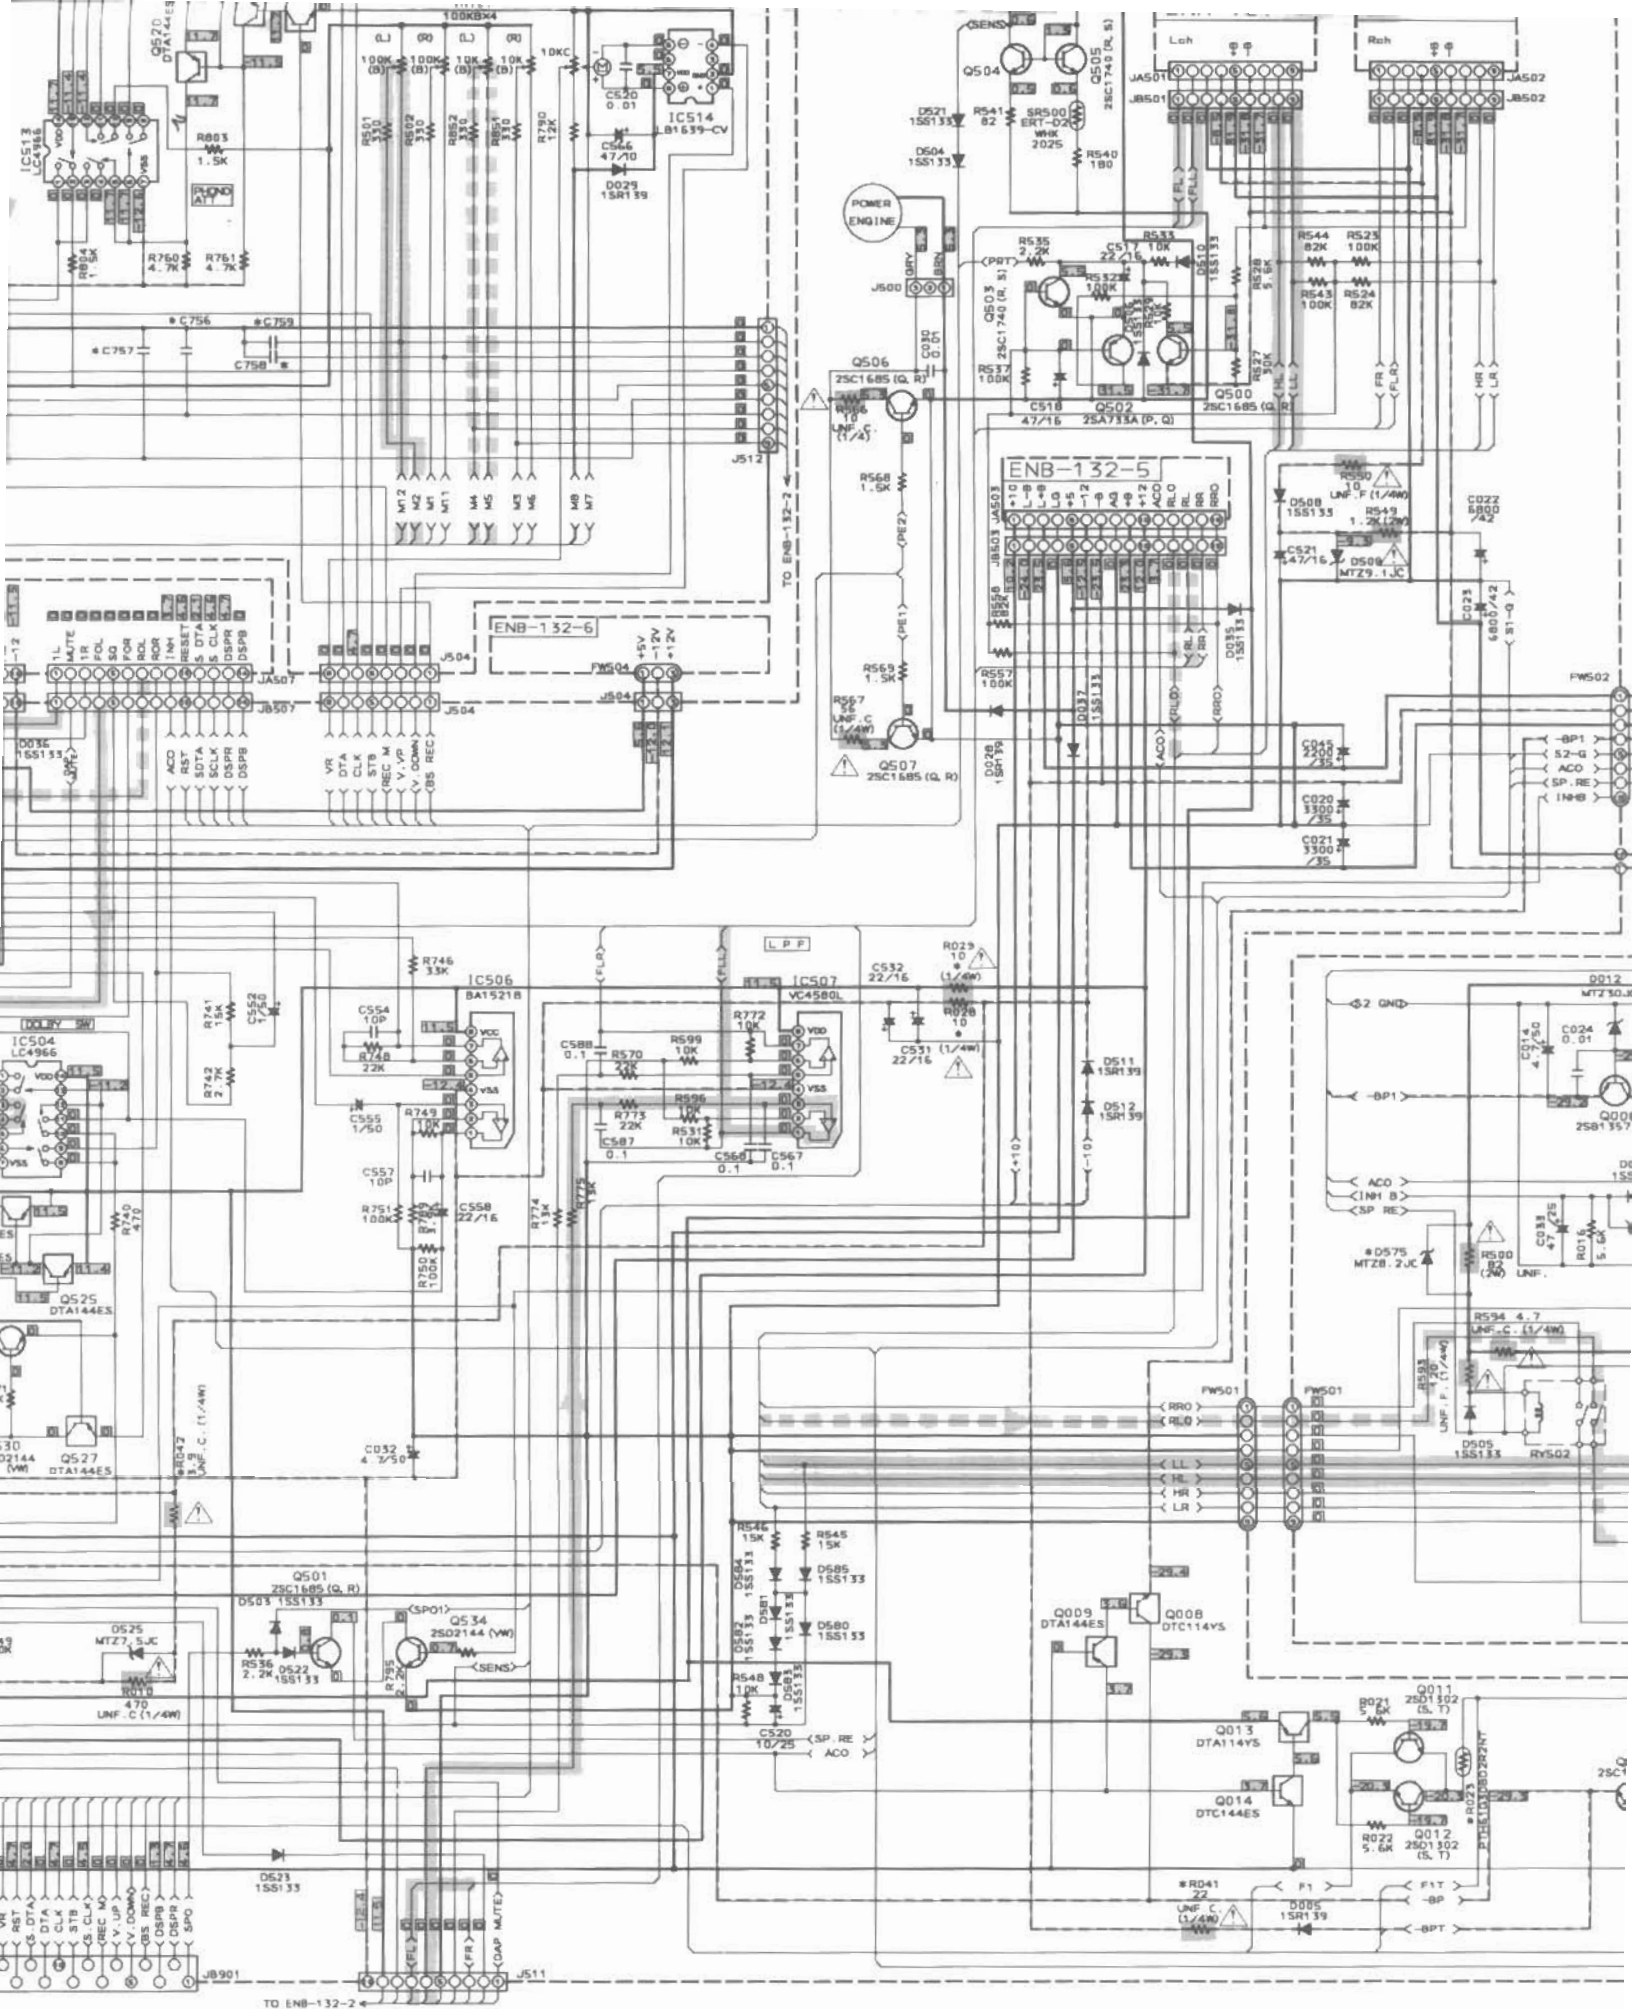

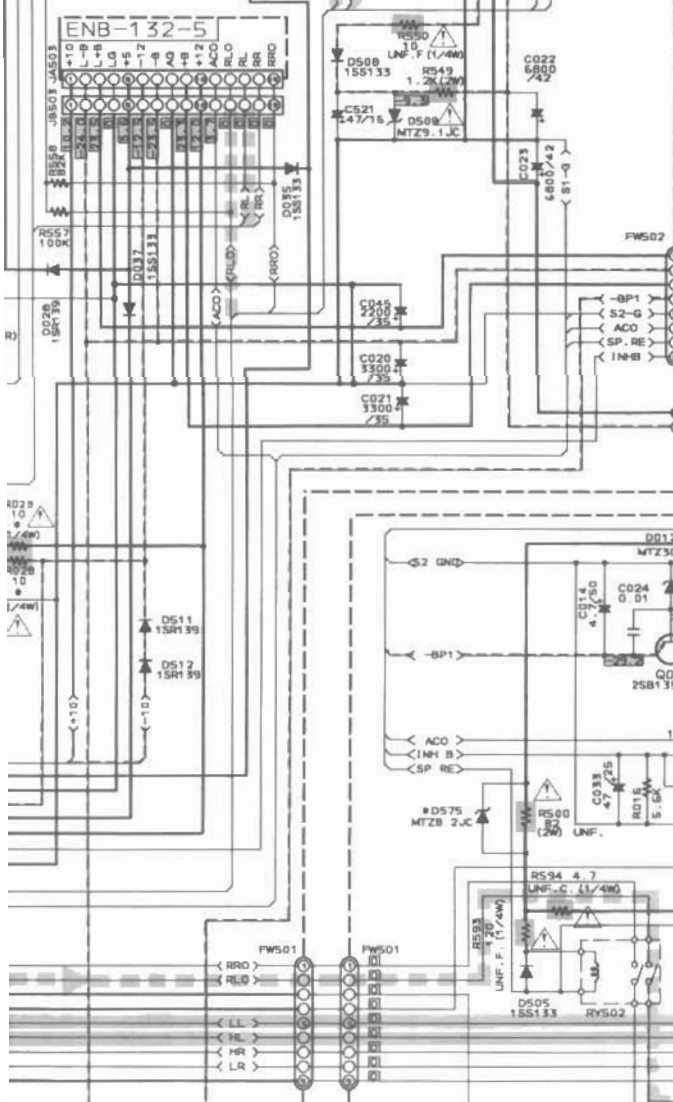





ENH-181-2




2. DAP Section

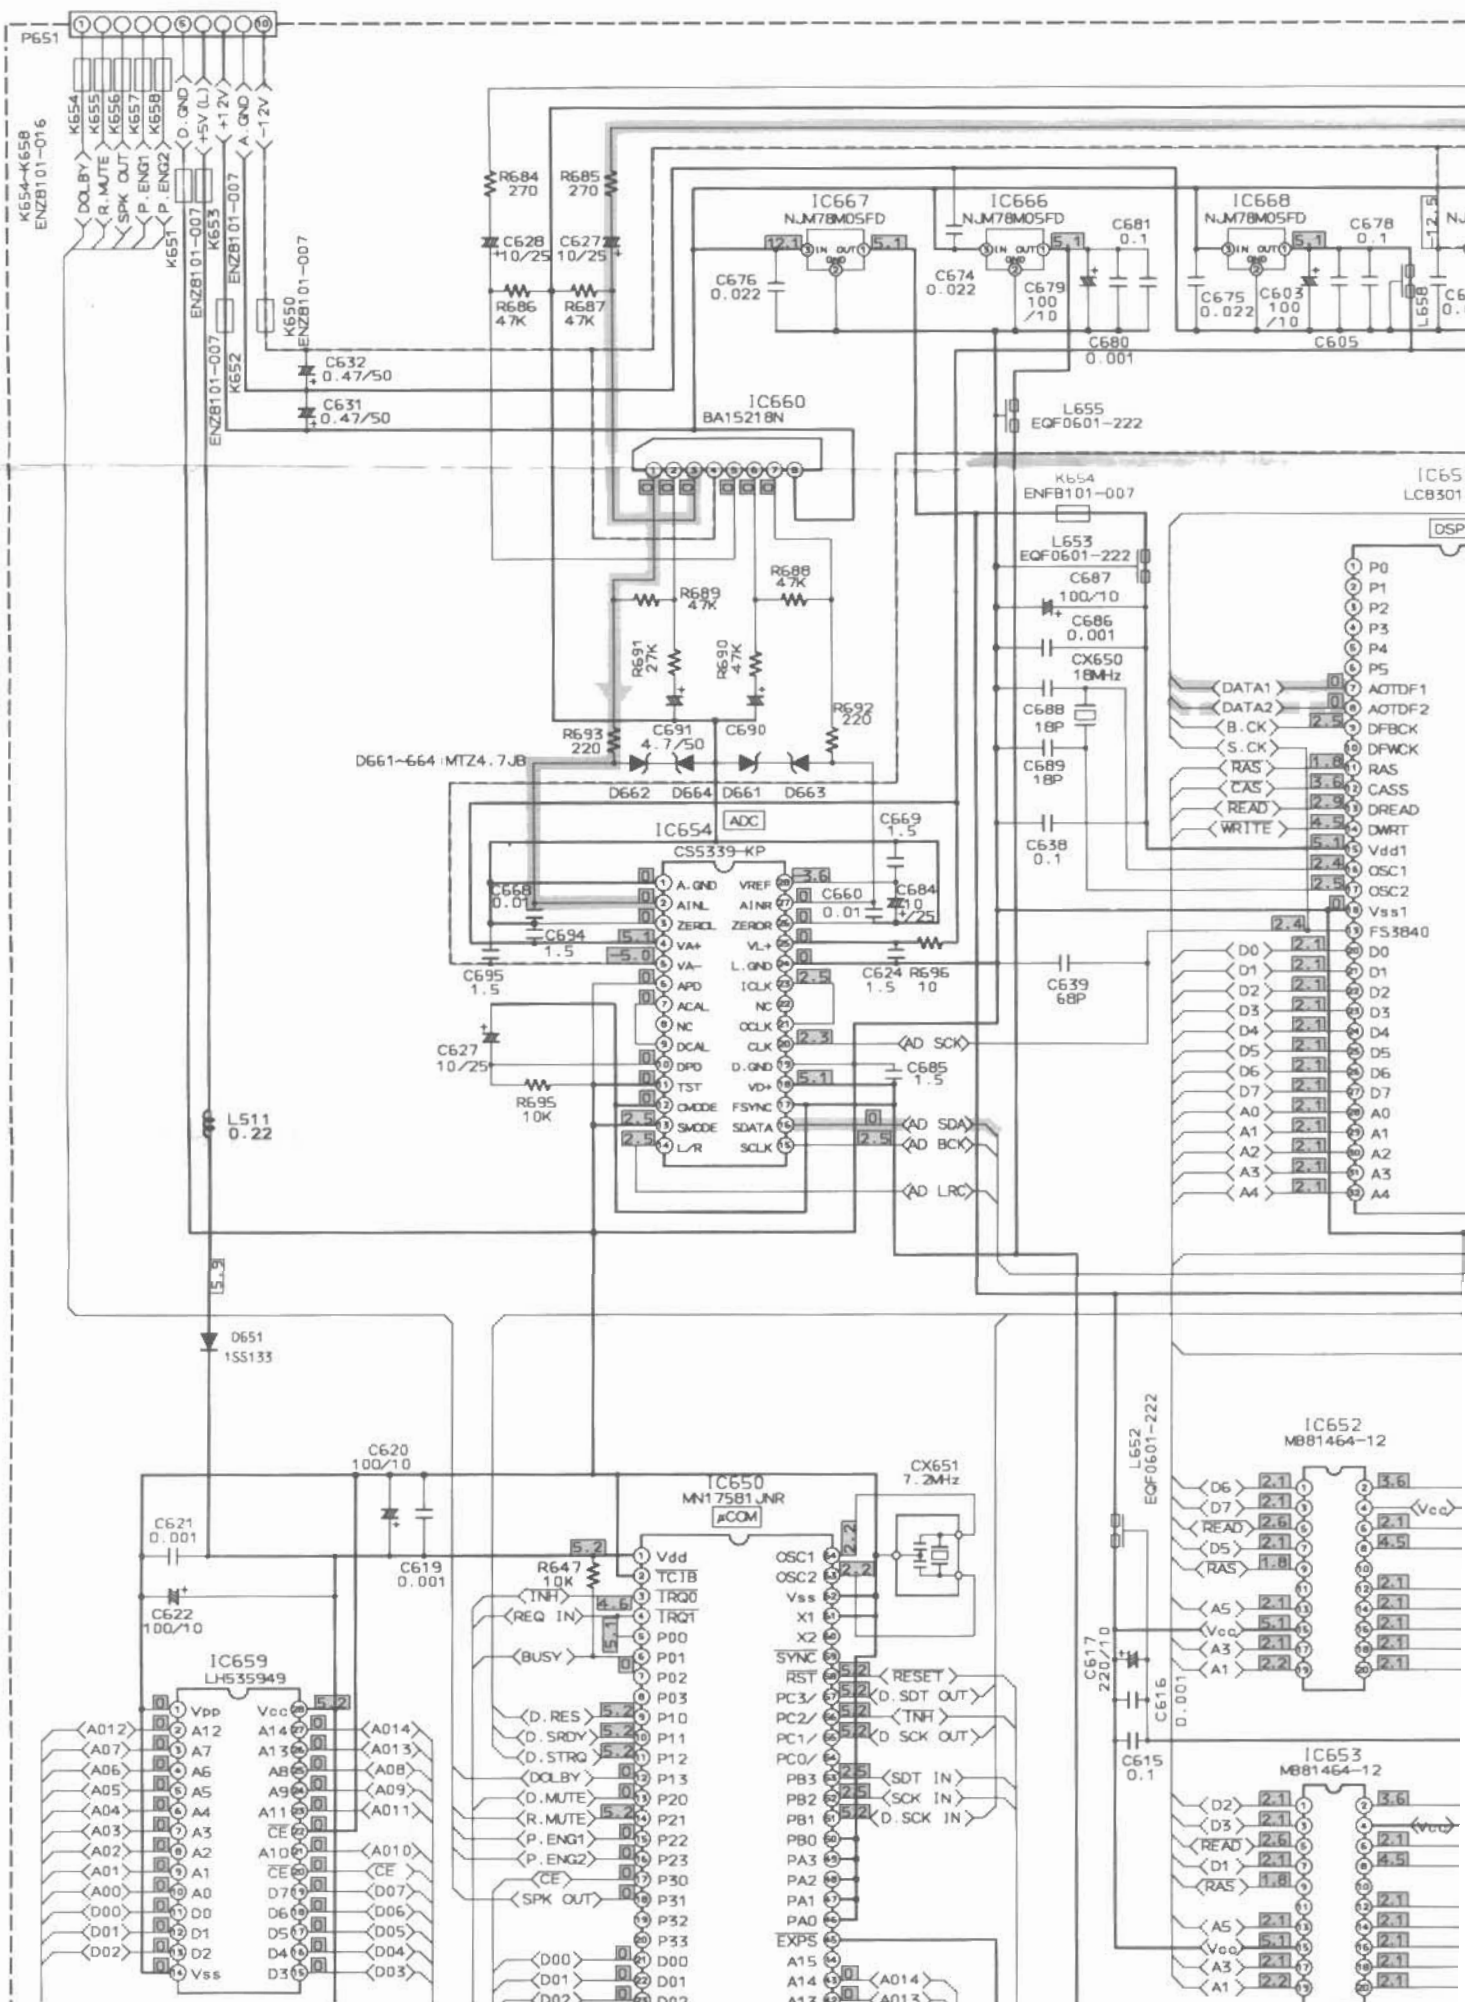





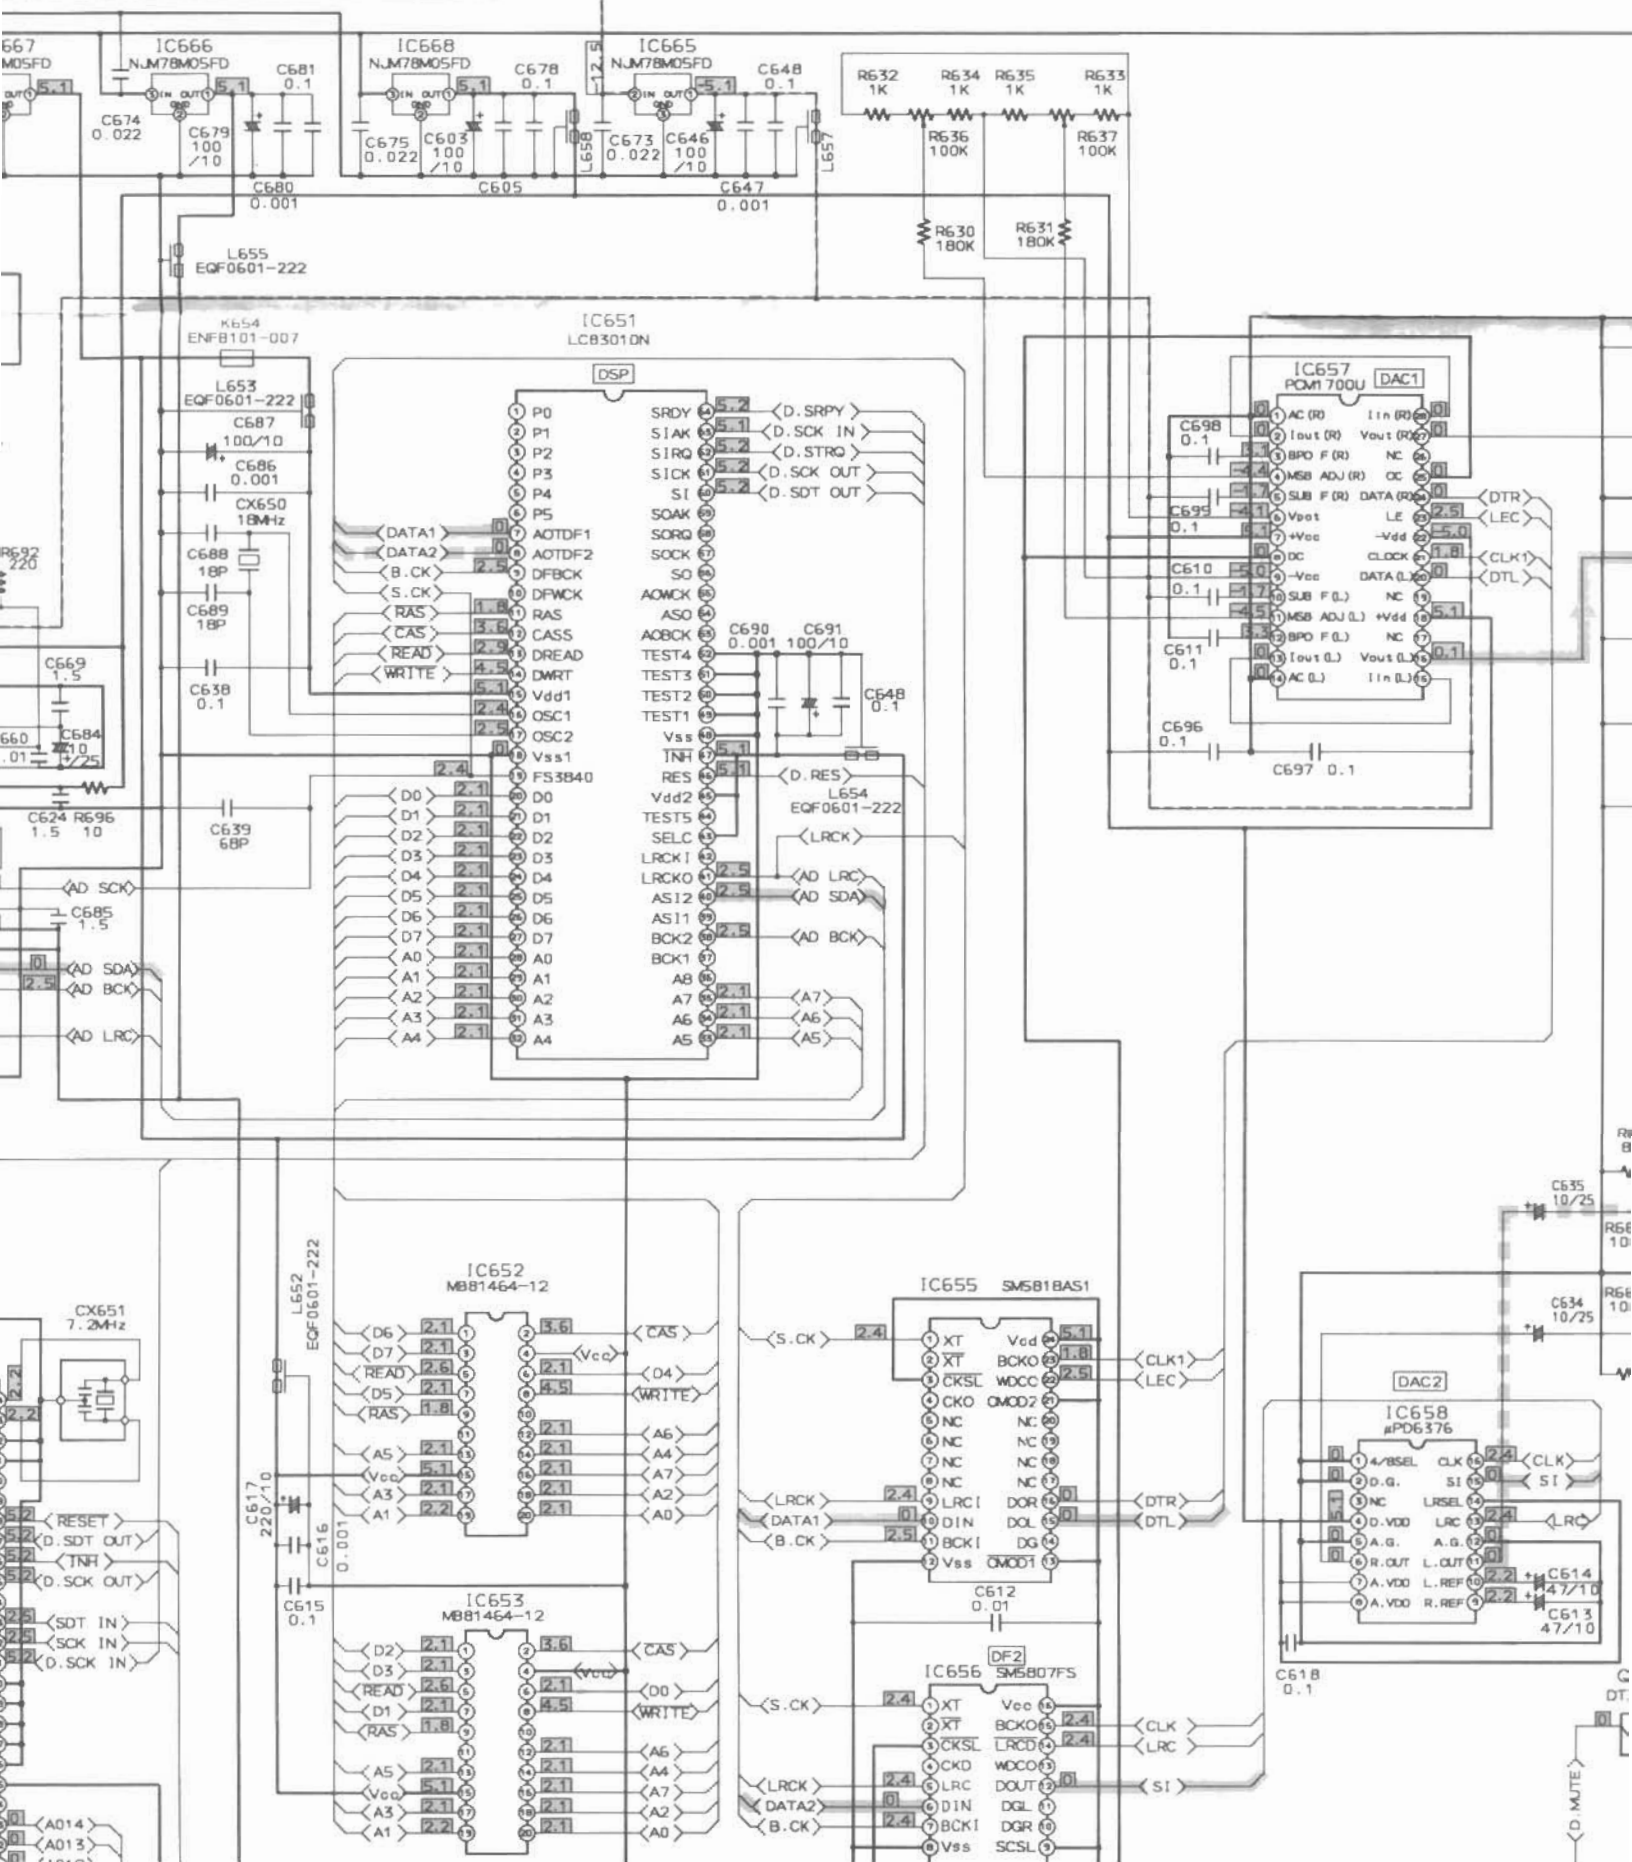




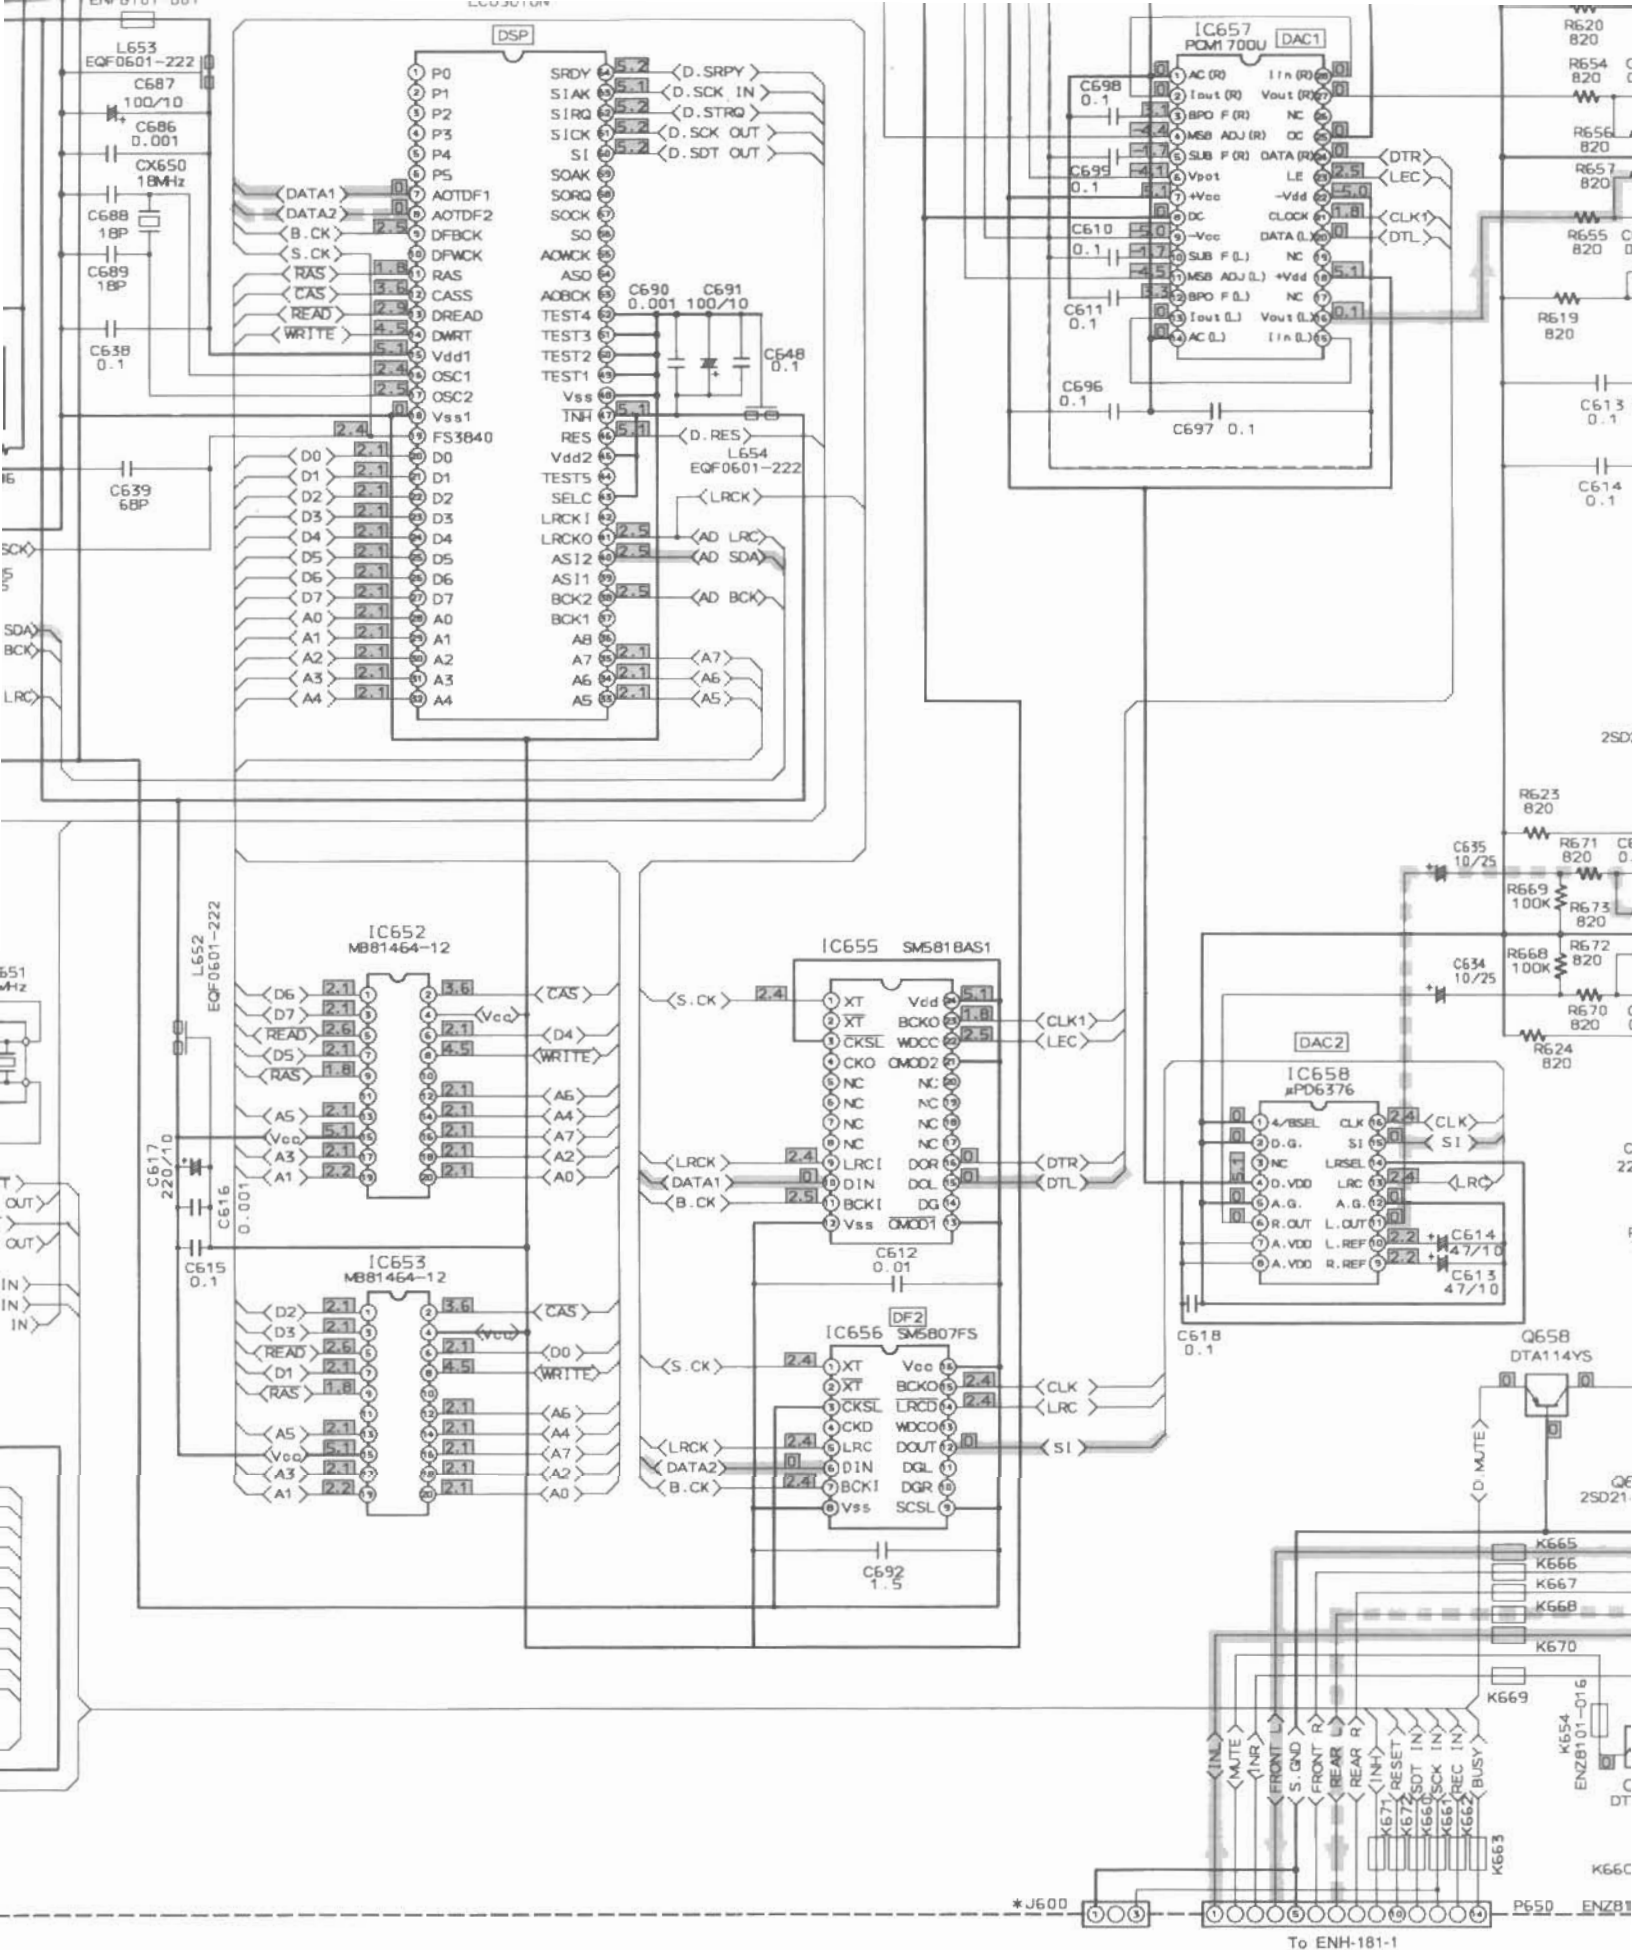






	J, C	E, EK A, BS	G, GI	U
J600	NONE	USED	USED	USED


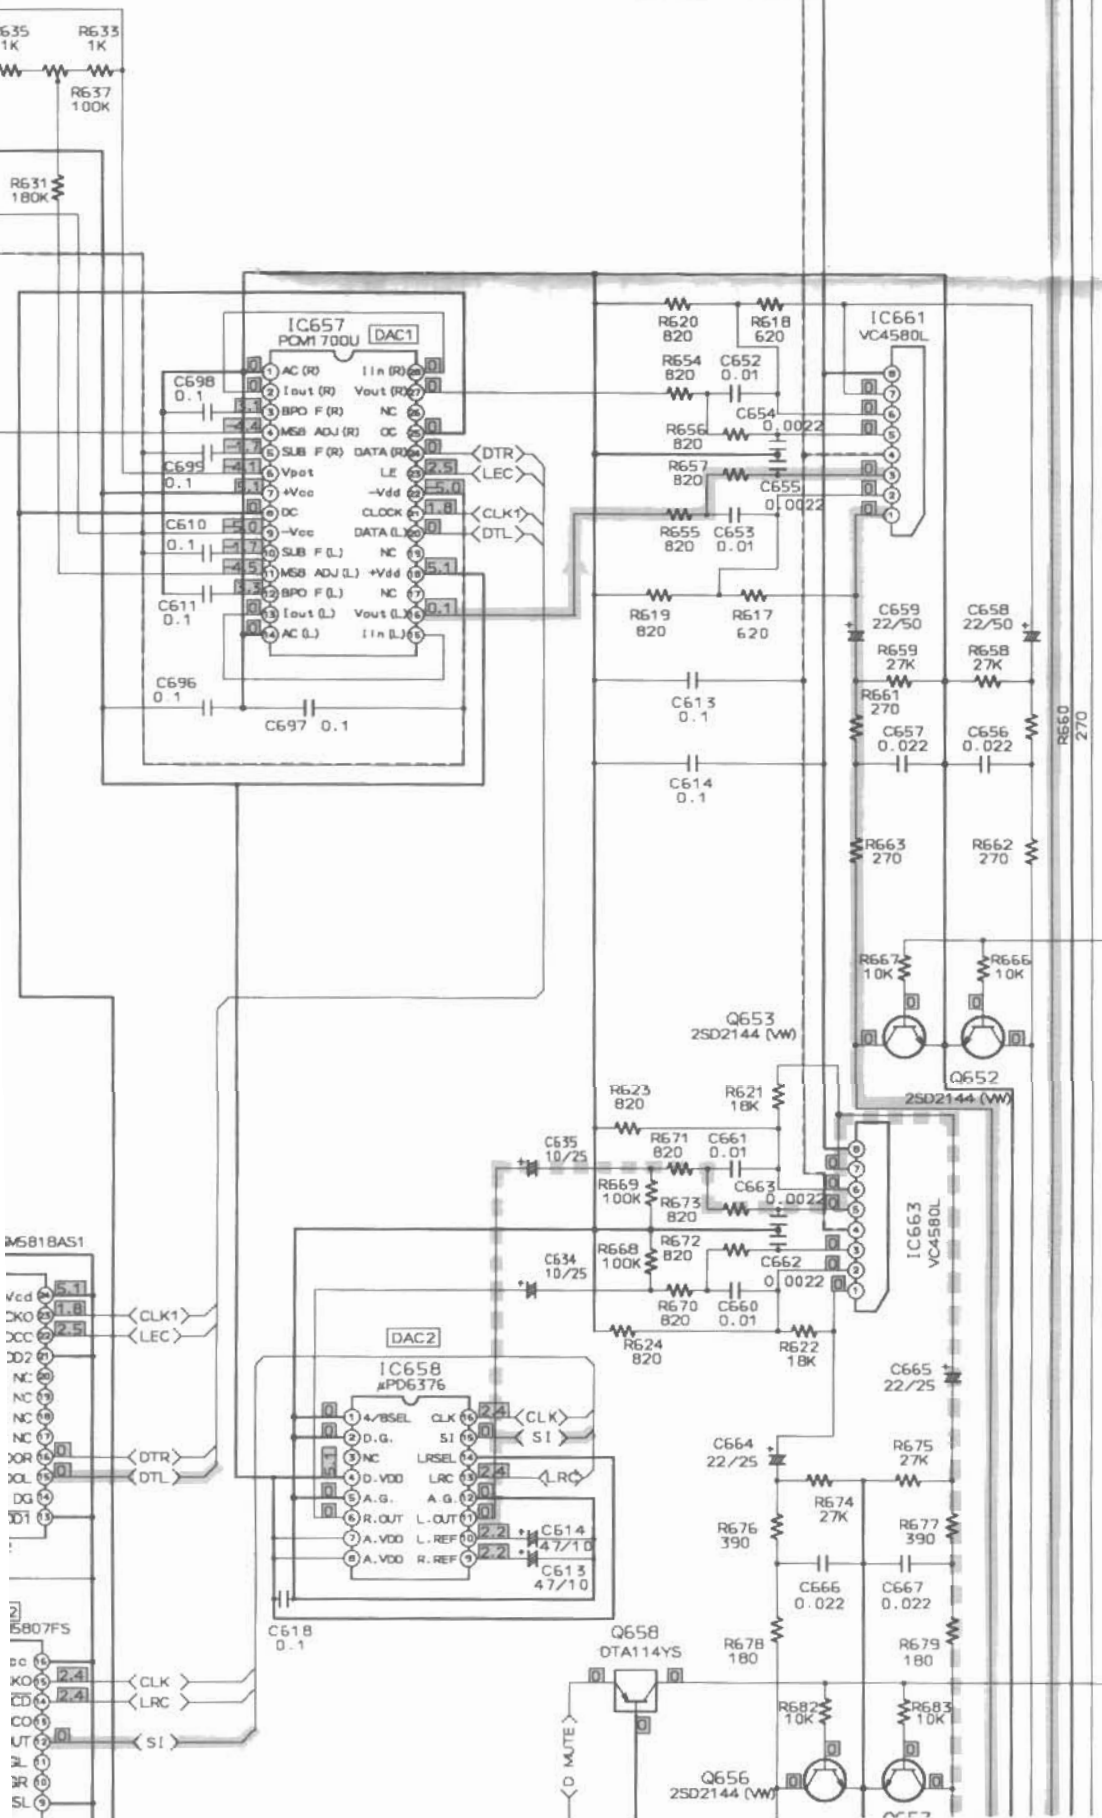


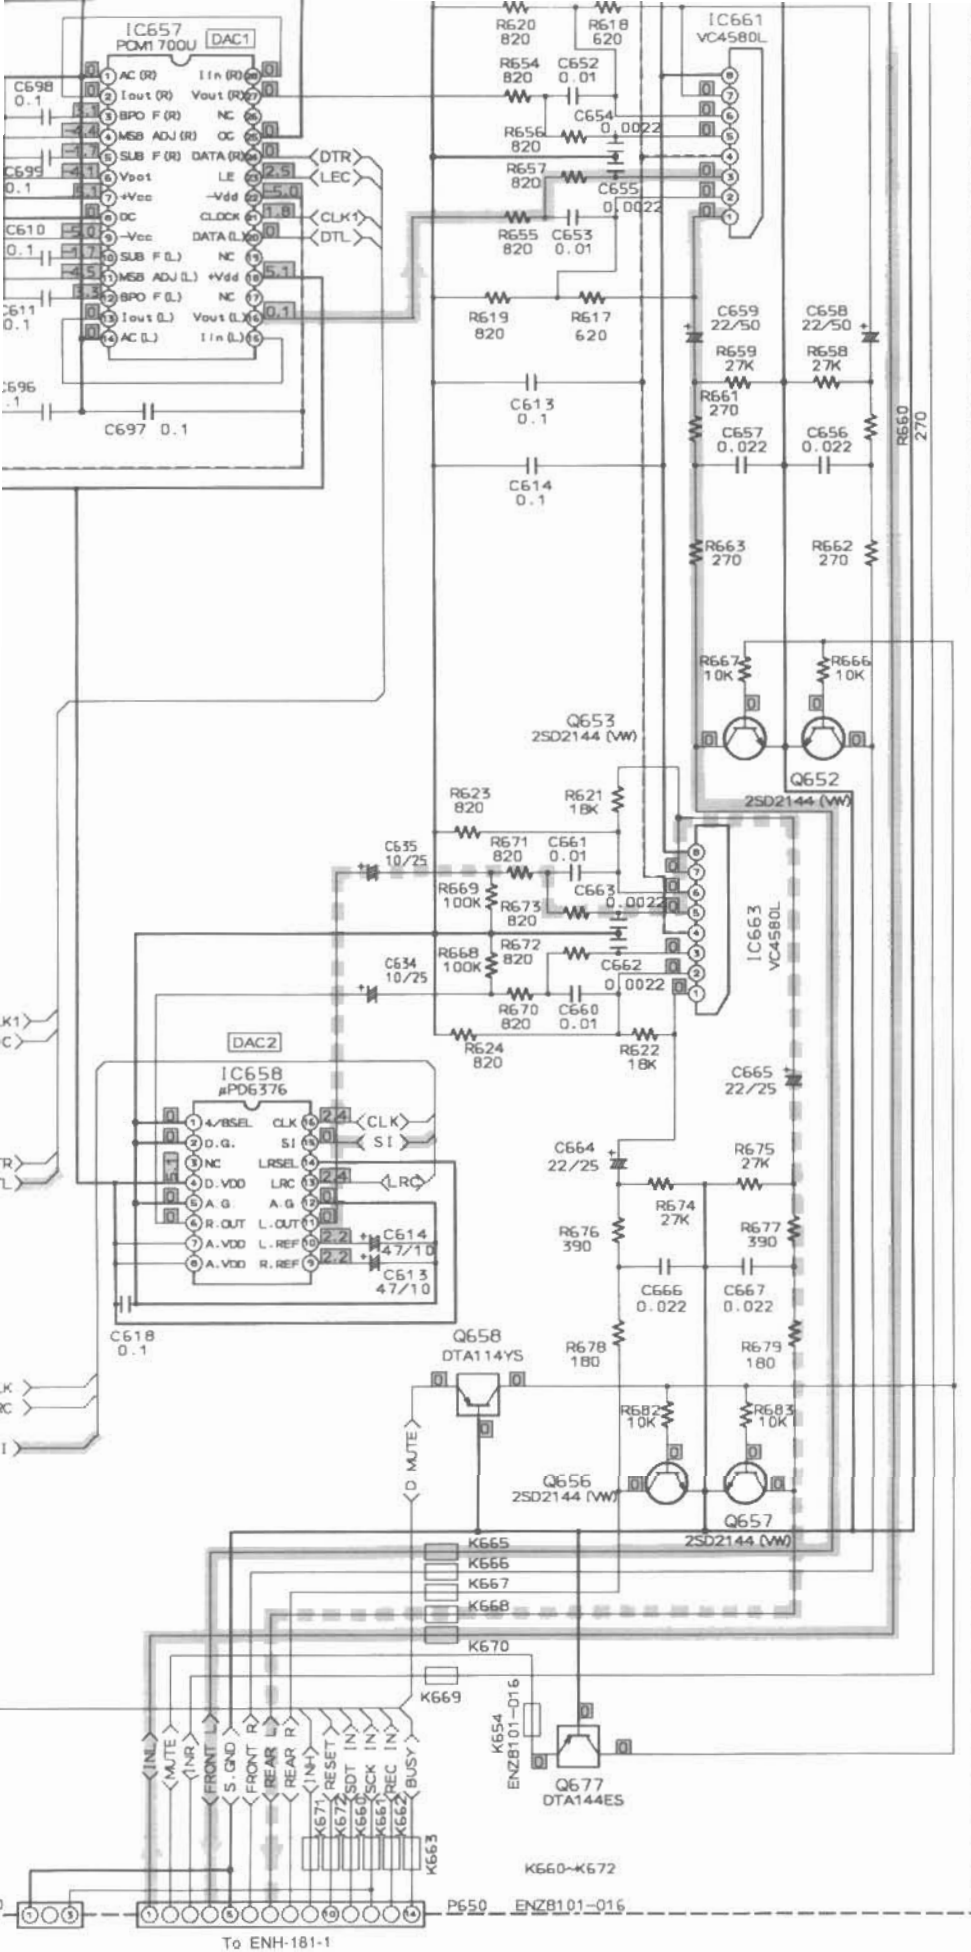


3. TWIN BASS & Power Amplifier Section

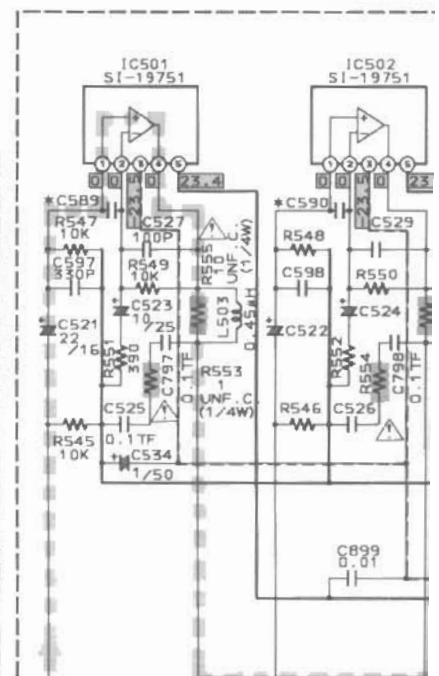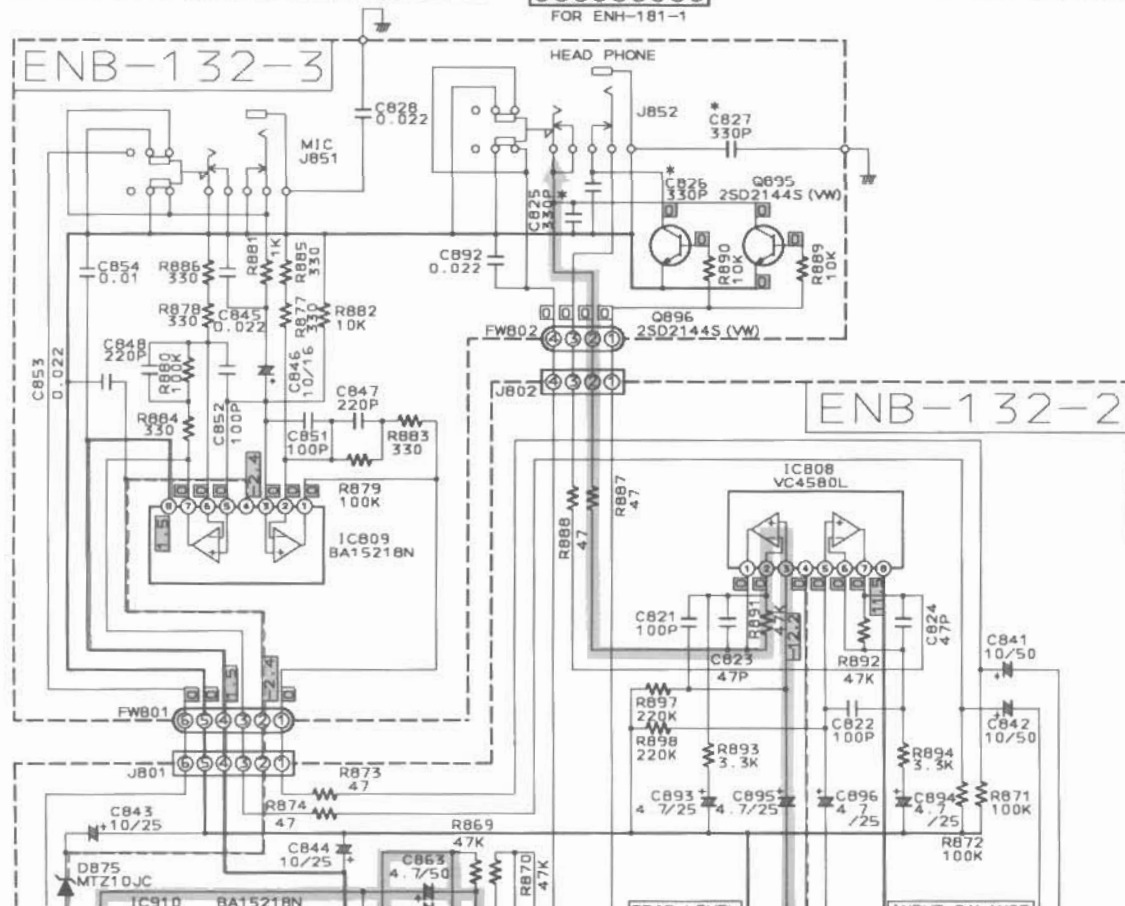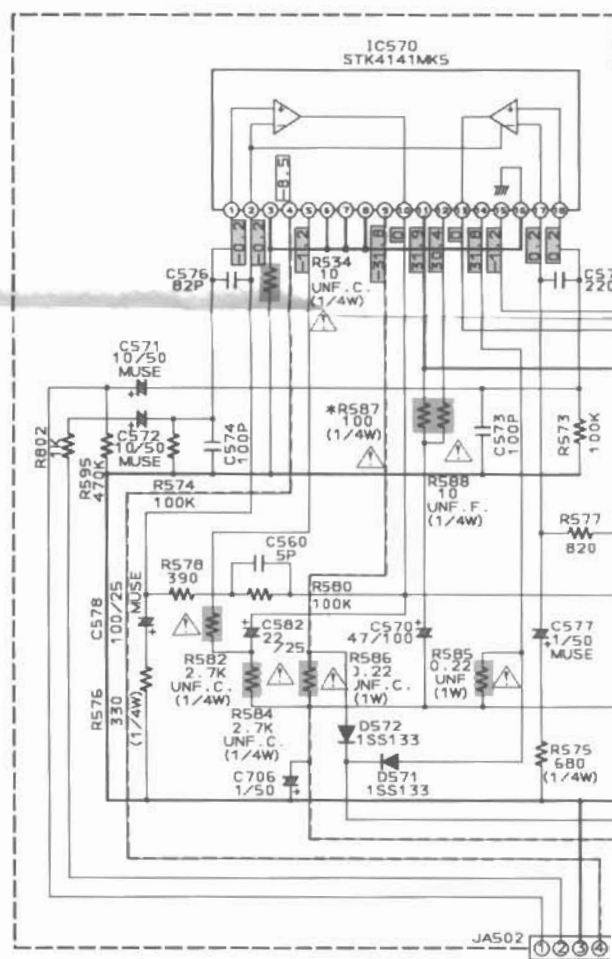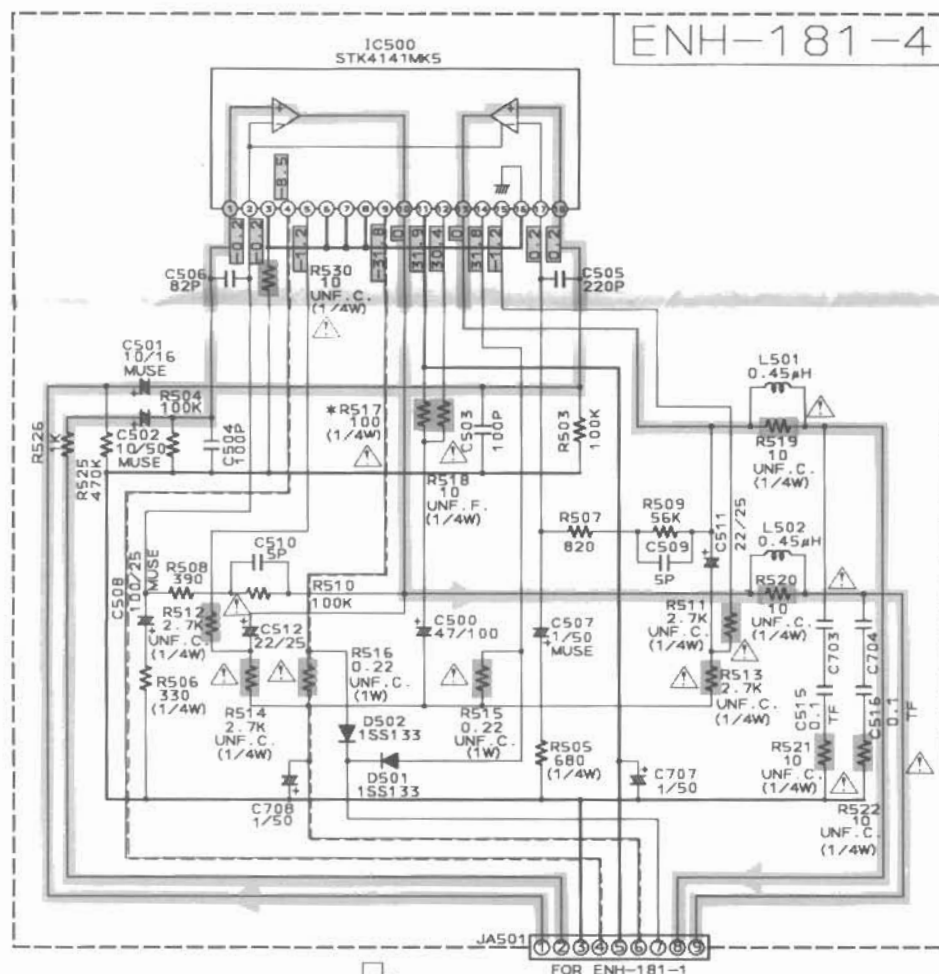

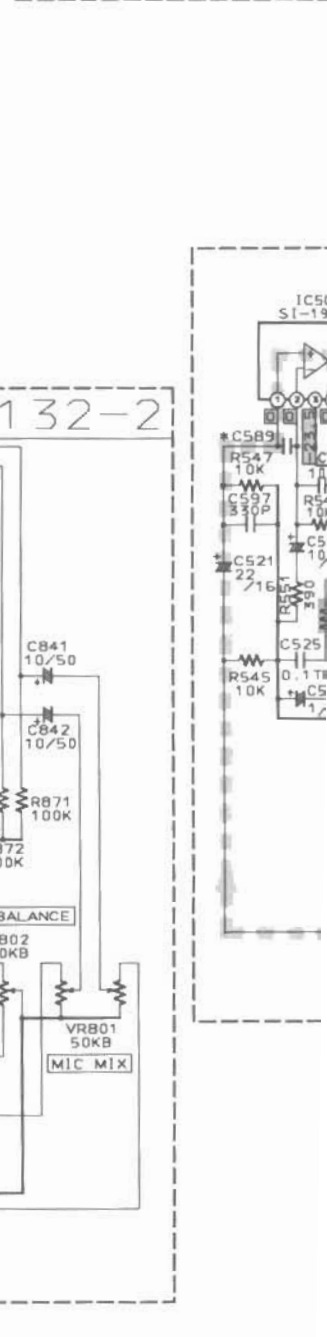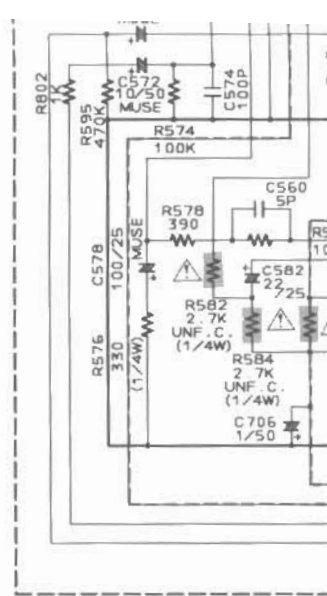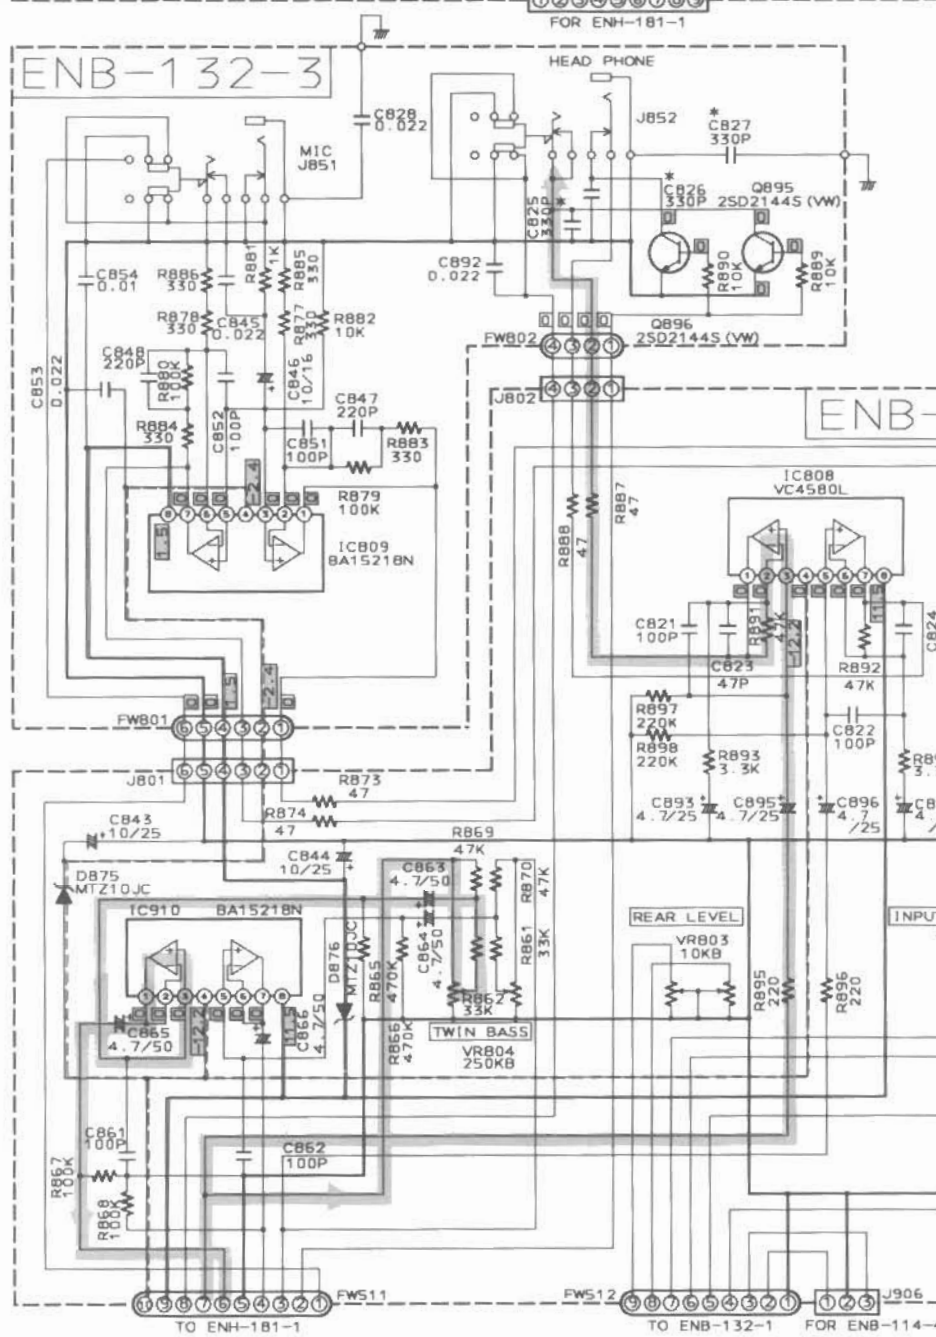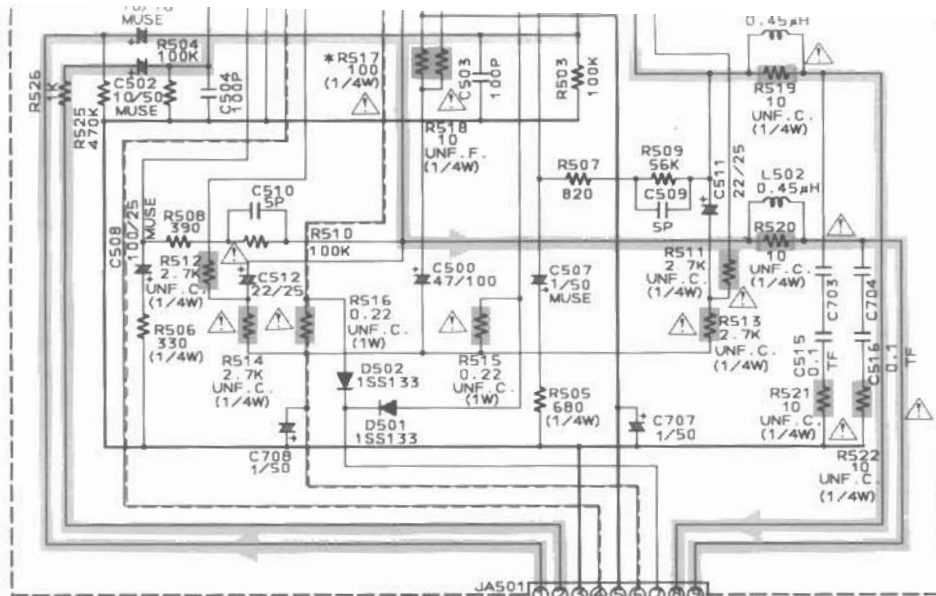

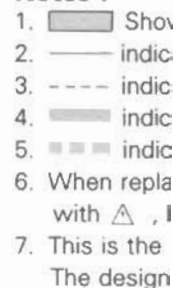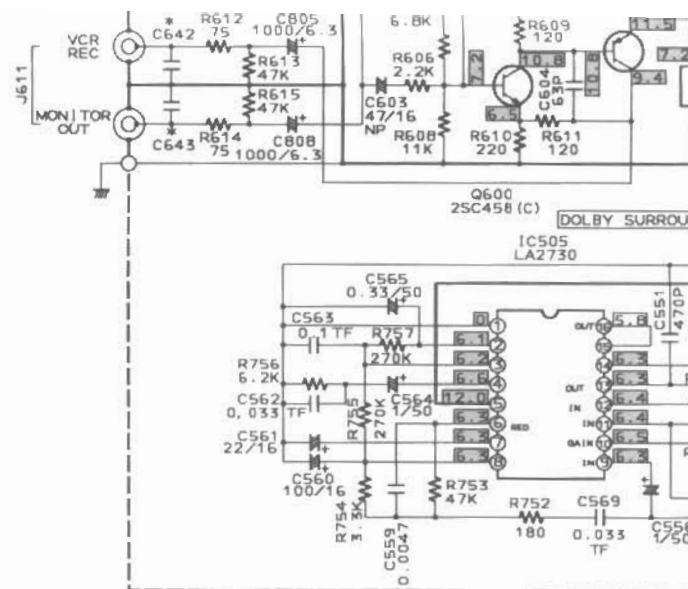


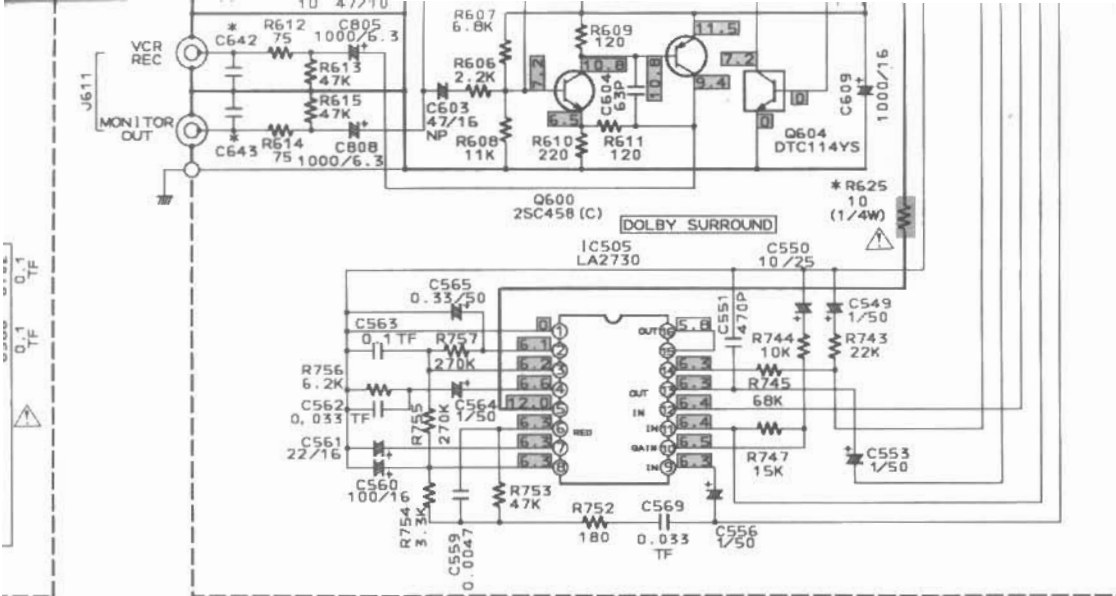



Notes :


The design and contents are subject to change without notice.

4. System Control & FL driver Section

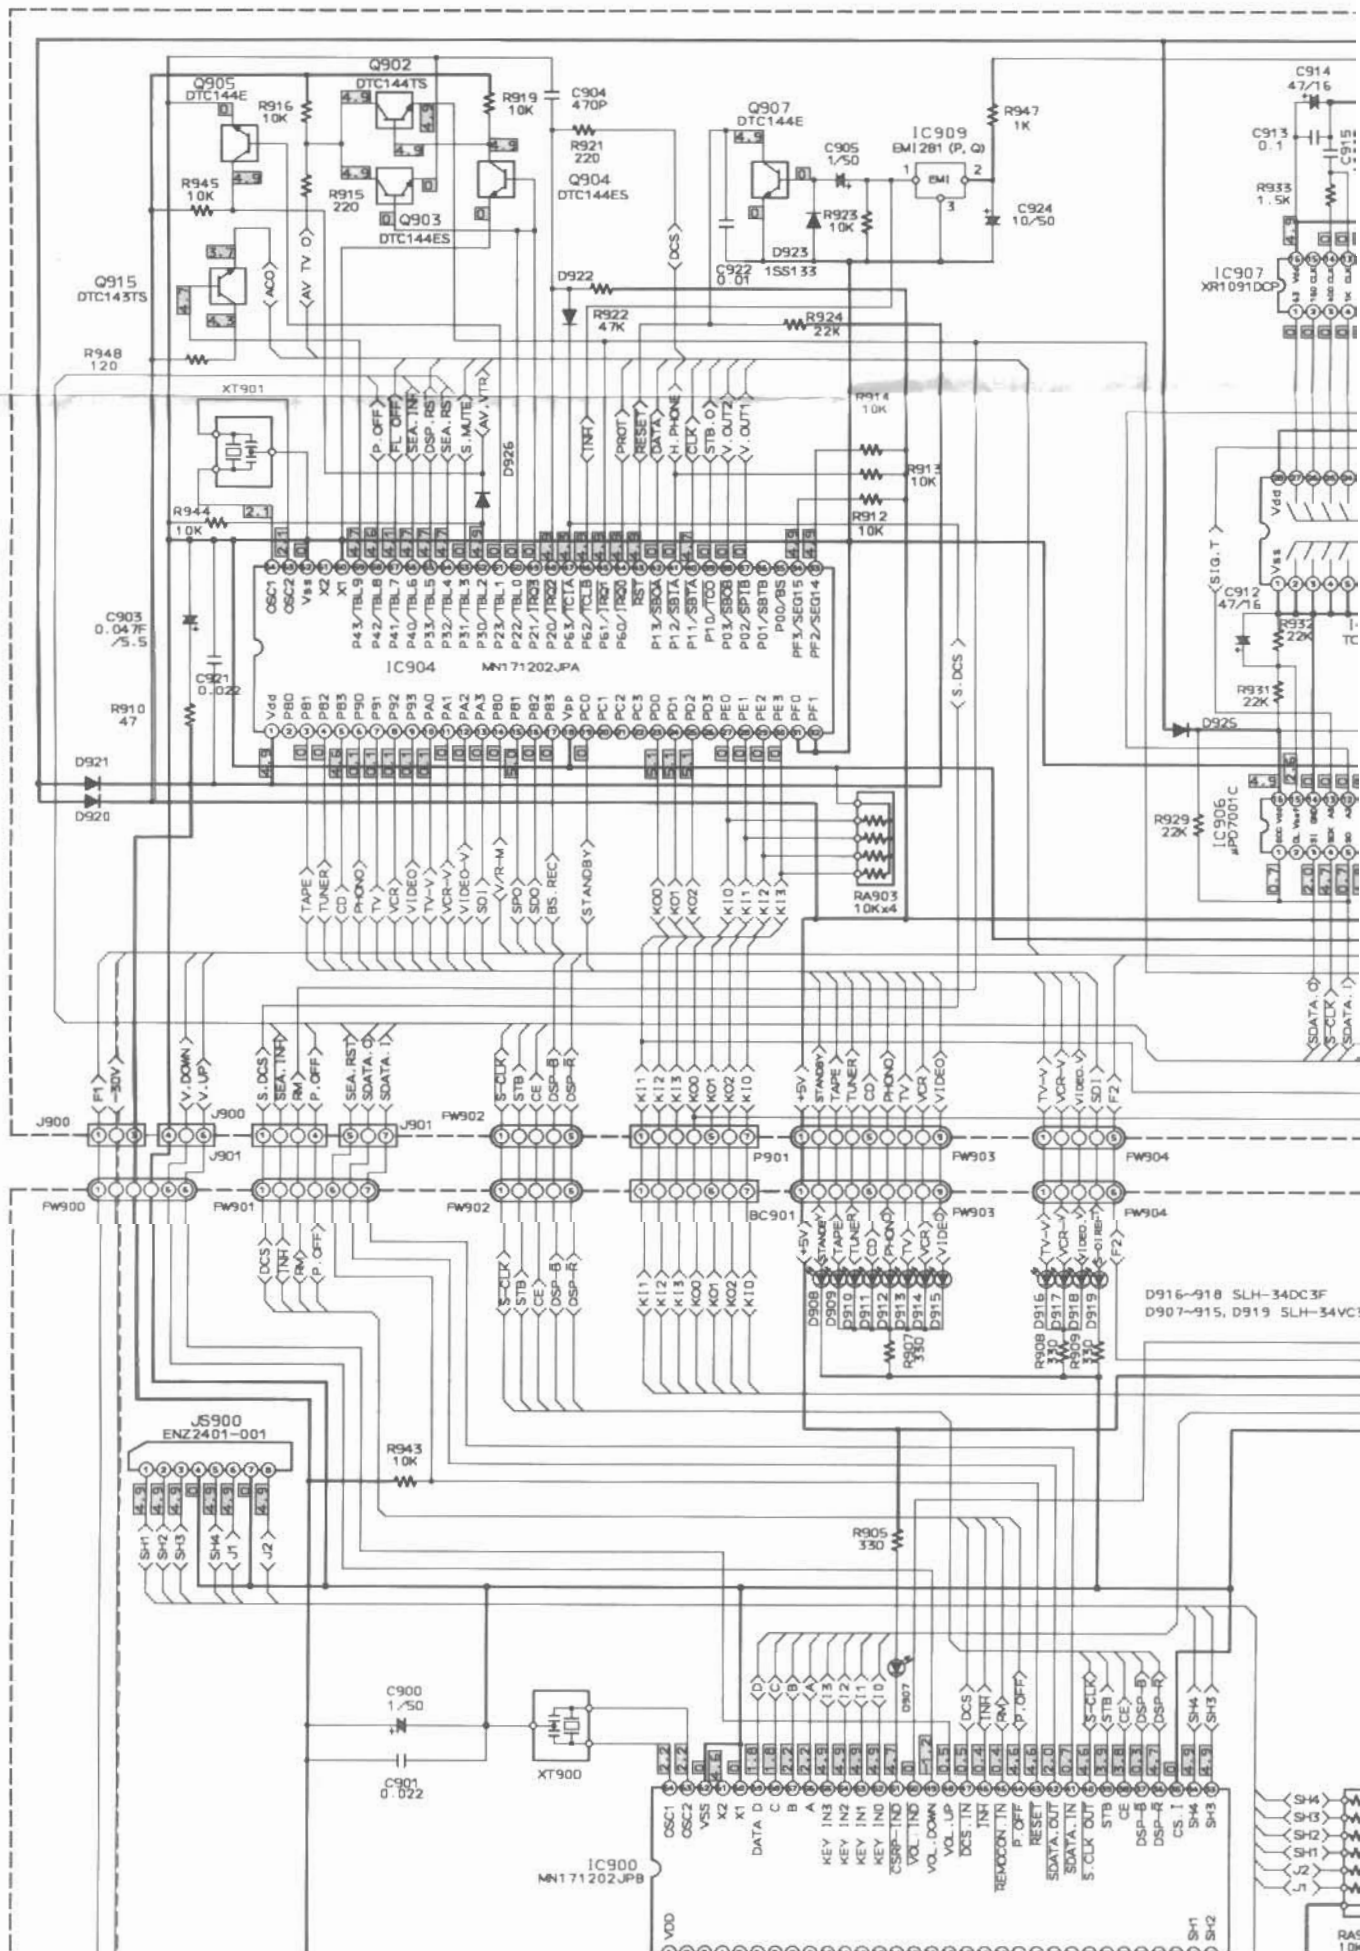

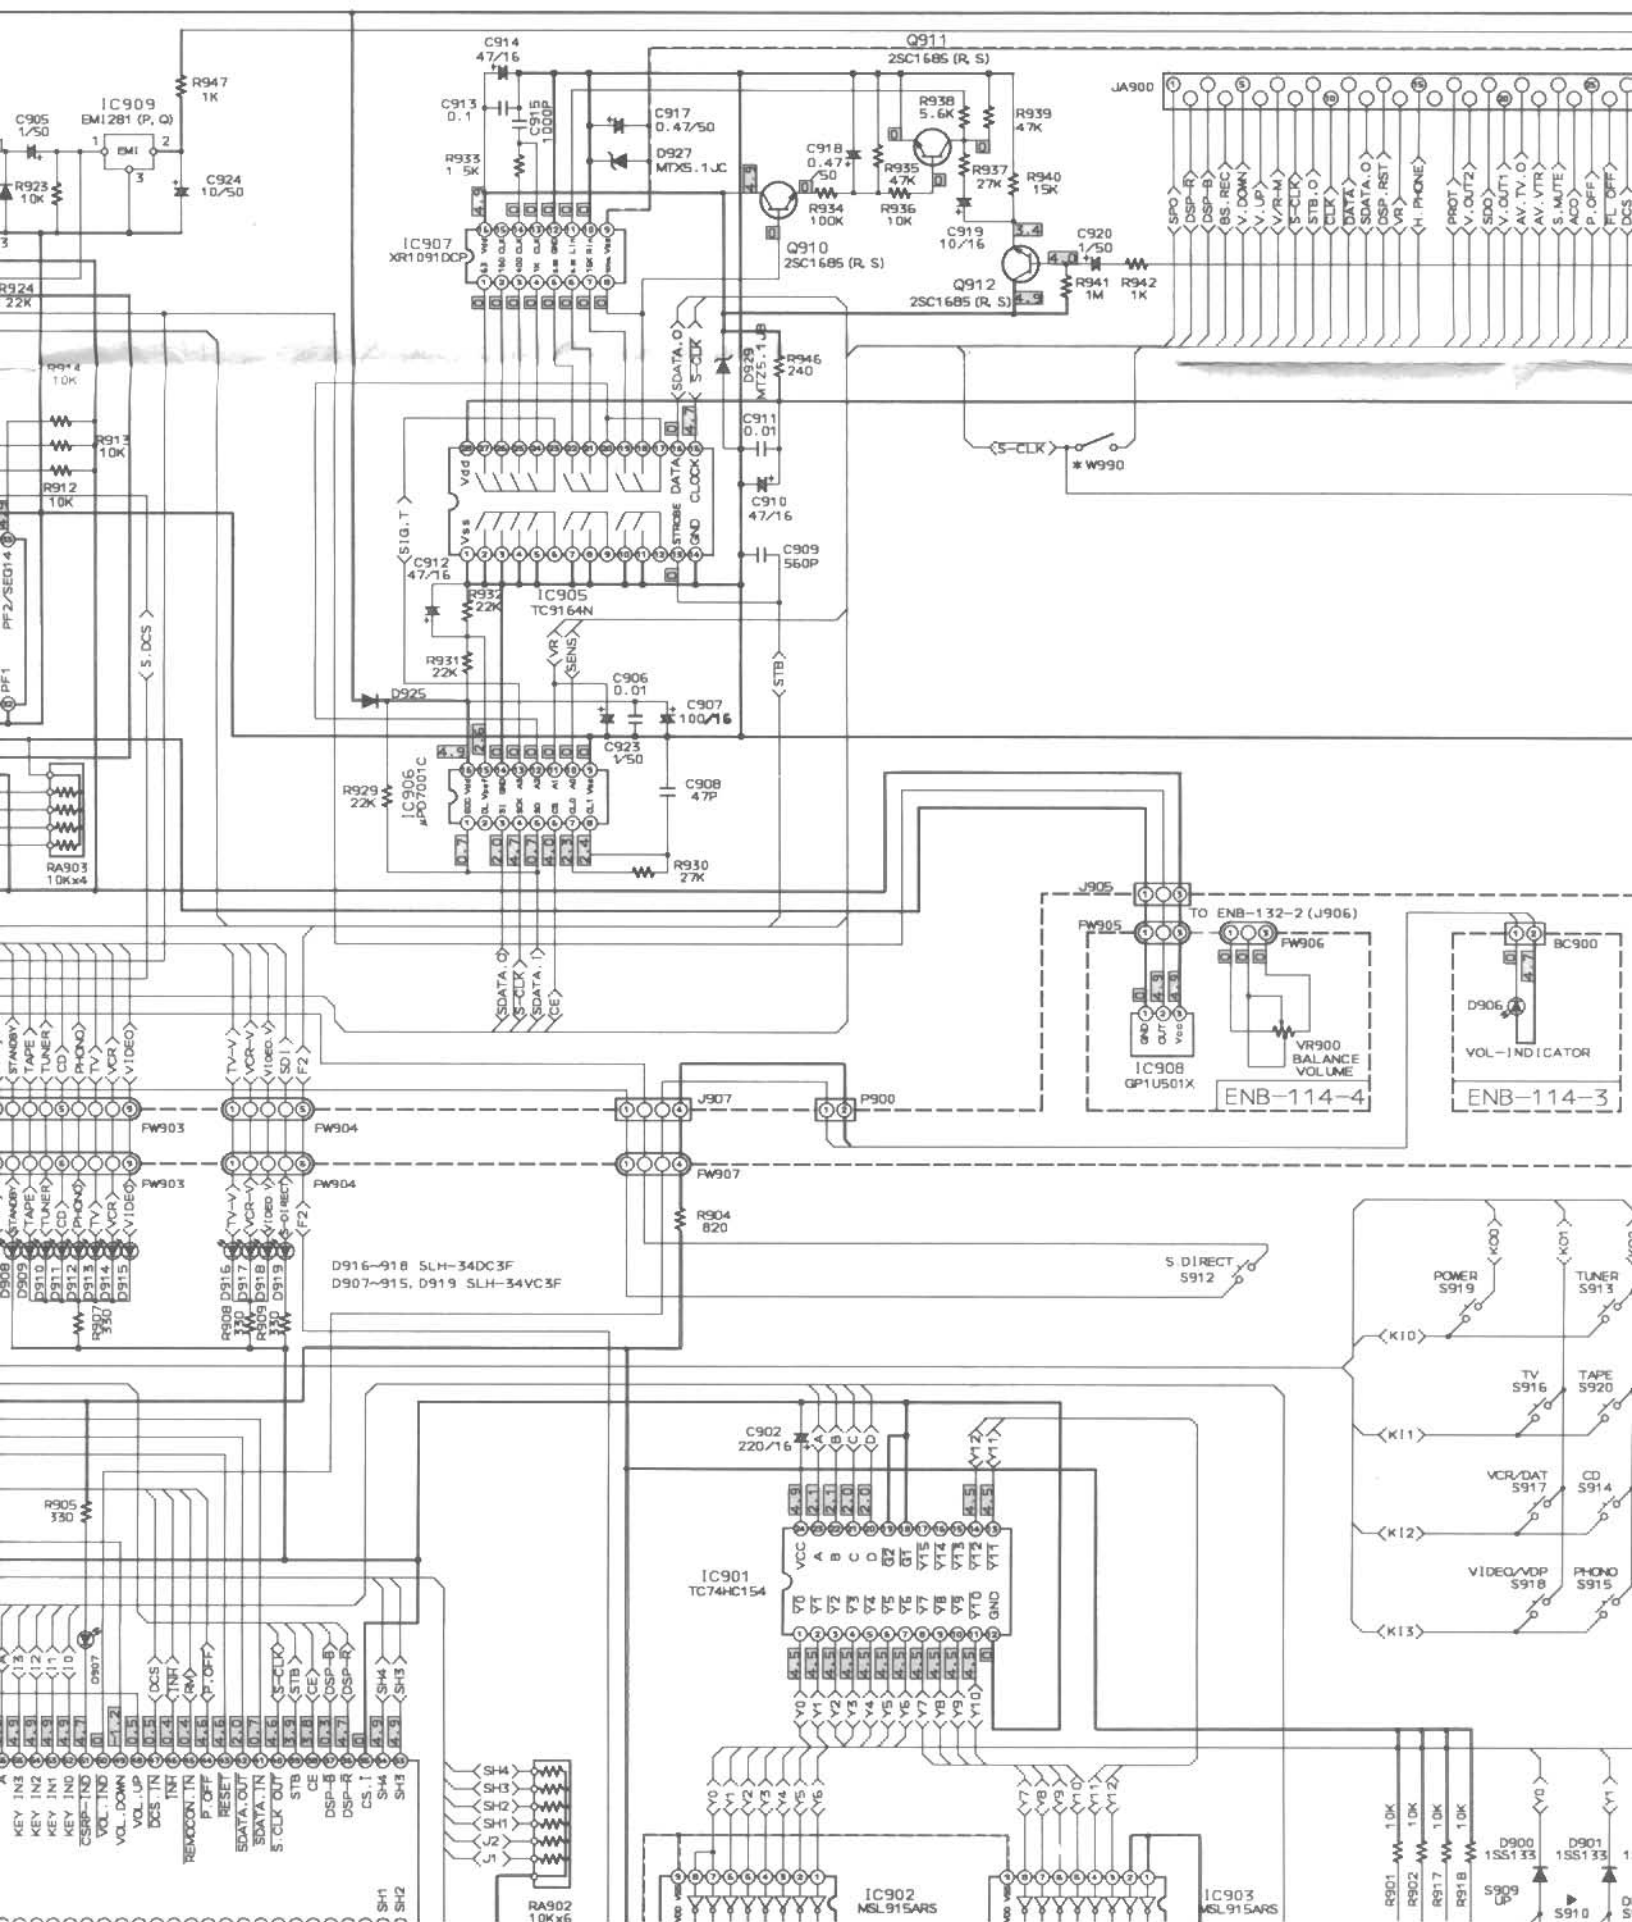

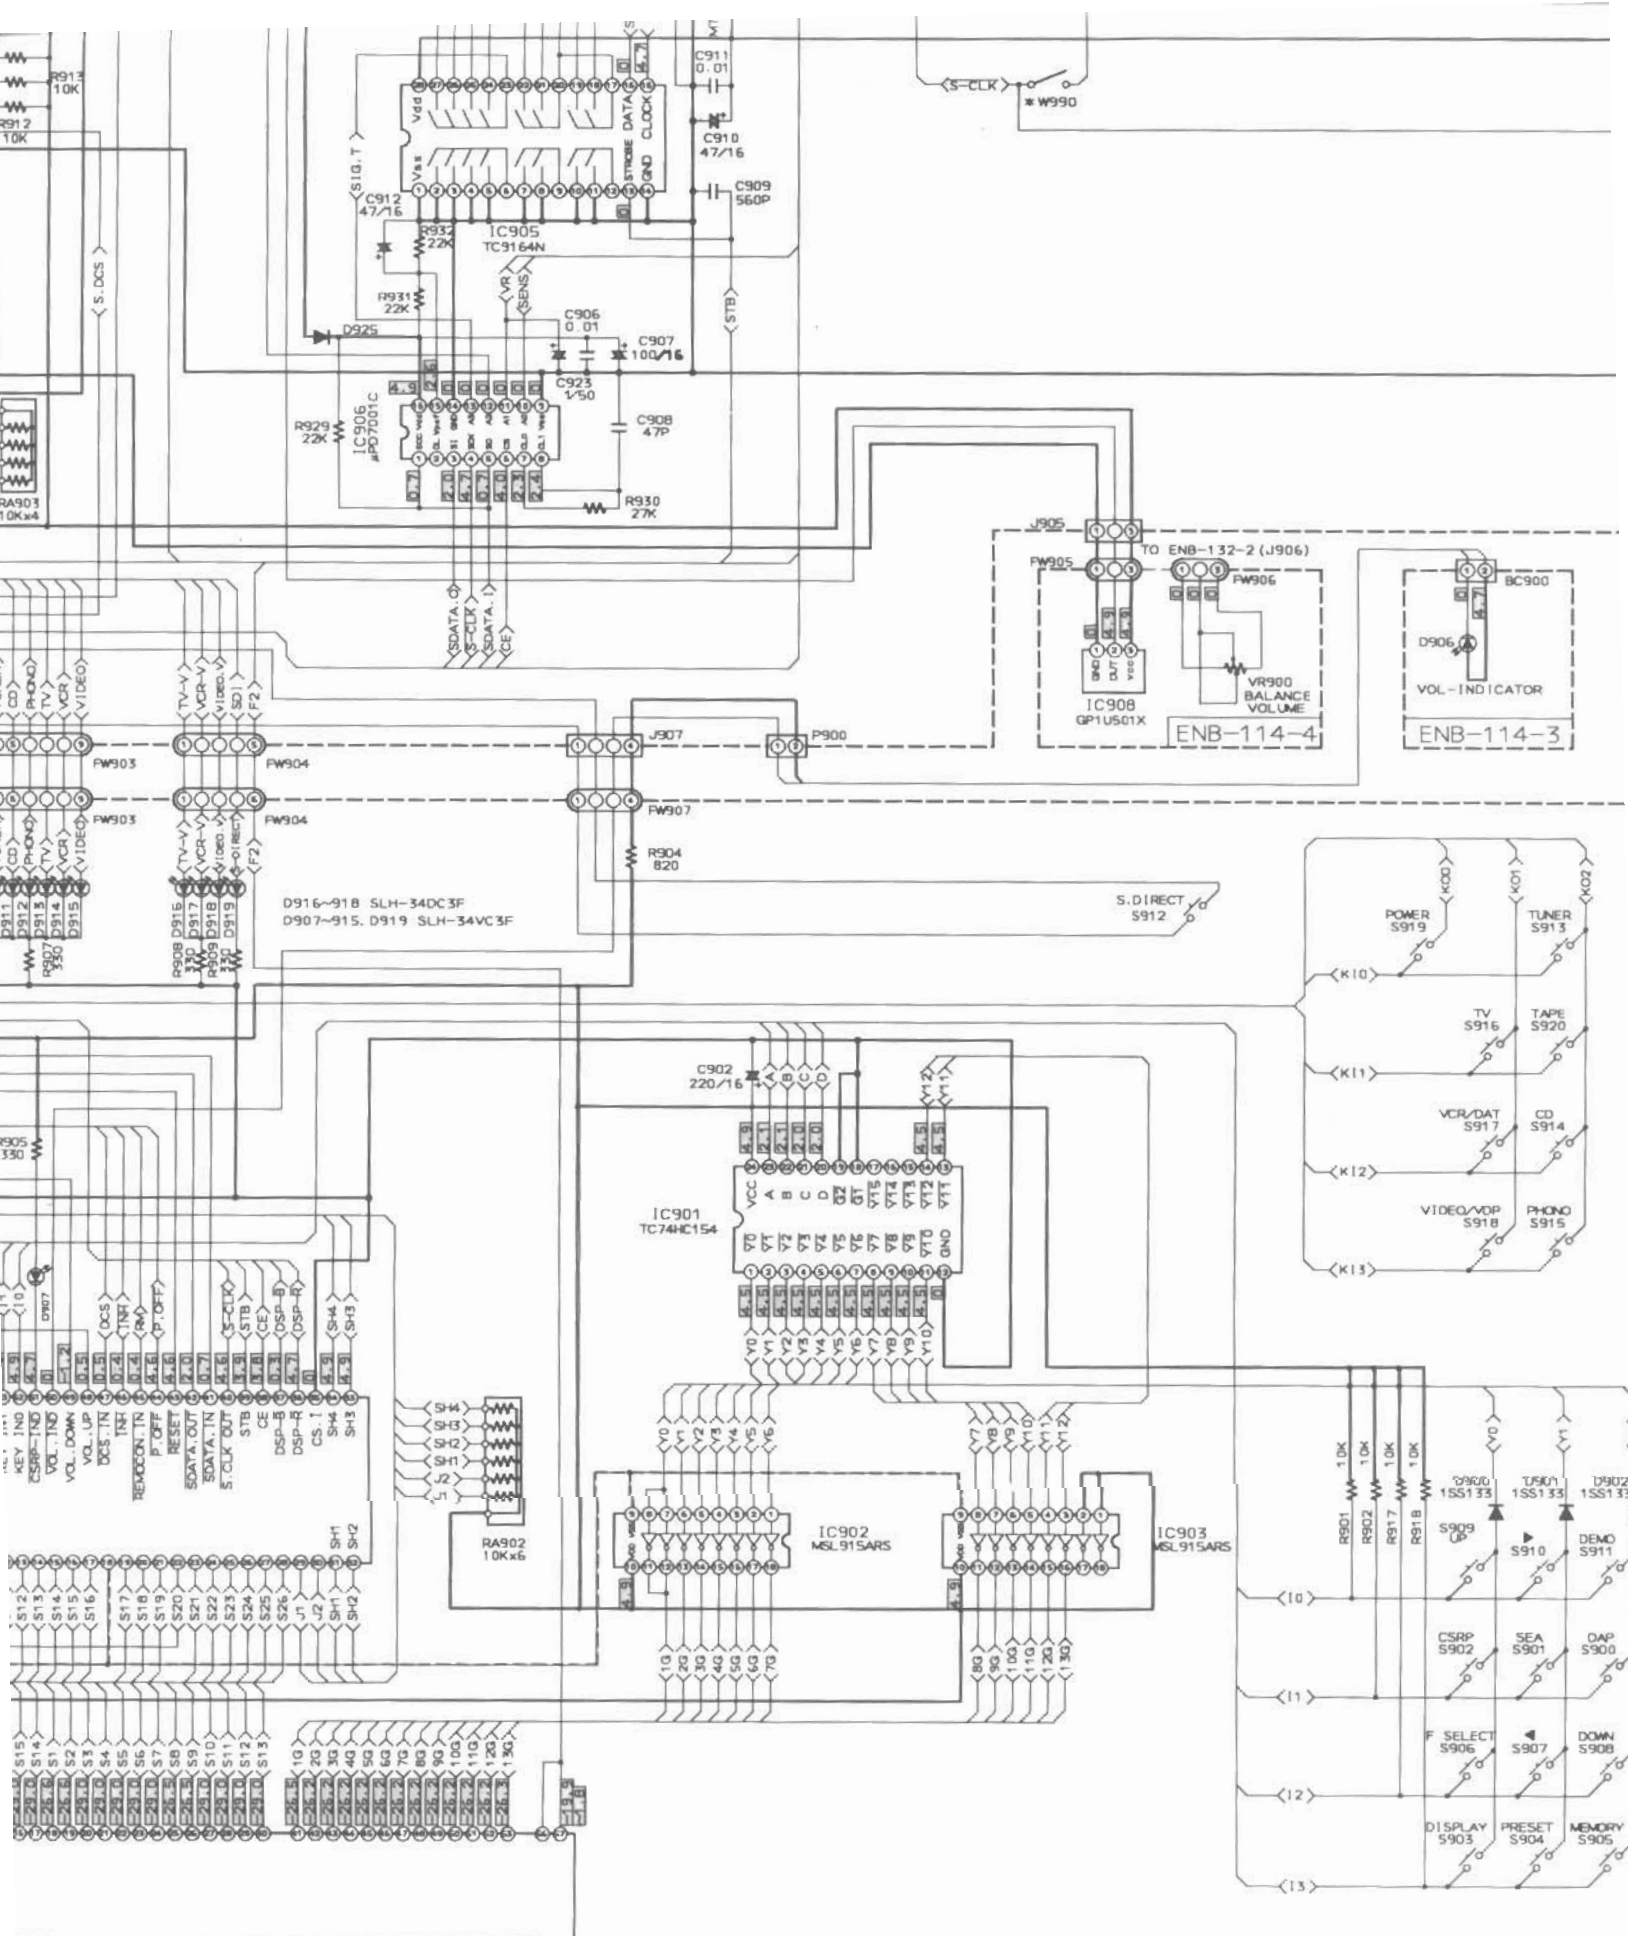

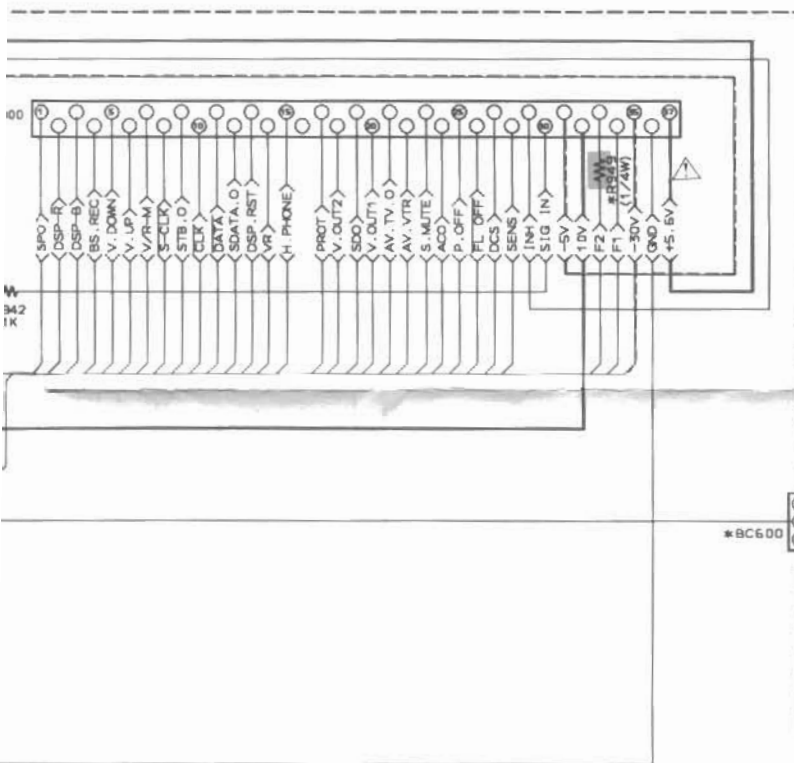



* MARK

	J. C	E. EF A. BS	G. GI	U
R949	2.7 UNF. C.	4.7 UNF. F.	4.7 UNF. F.	4.7 UNF. F.
BC600	NONE	USED	USED	USED
W990	USED	NONE	NONE	NONE


*BC600

TO ENP-037
J600

ENB-114-2

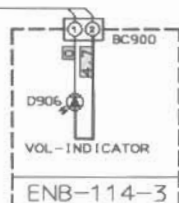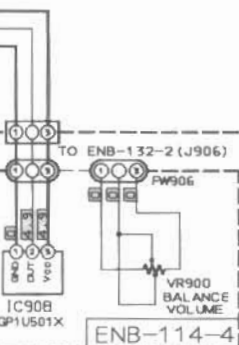


ENB-114-1

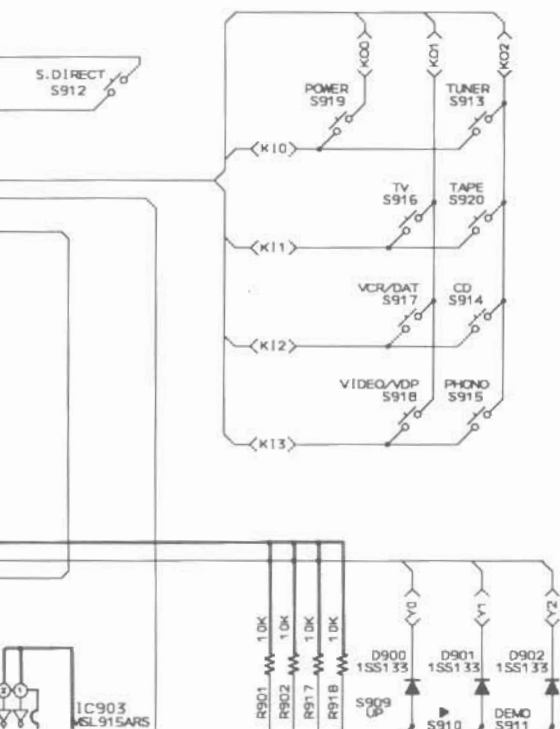


*BC600 TO ENP-037 J600

ENB-114-2

TO ENB-132-2 (J906)

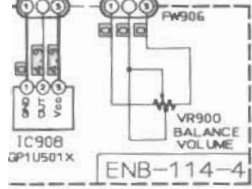


ENB-114-4

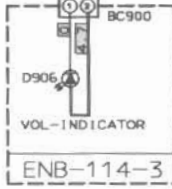

ENB-114-3

ENB-114-1

S.DIRECT
S912

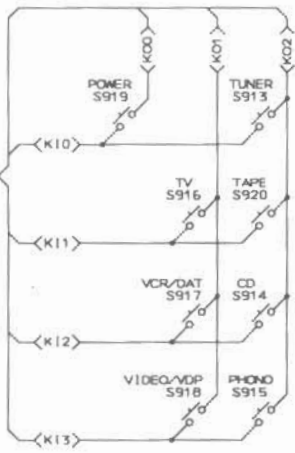

IC903
MSL915ARS

