


# Service Manual

CD5000/N4G

CD Player

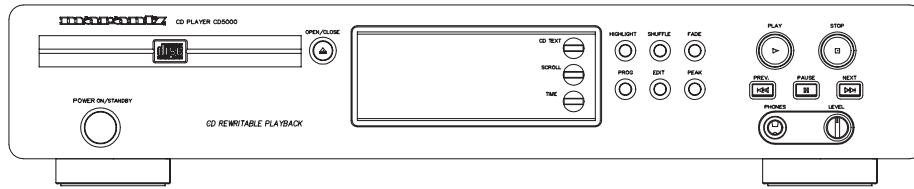

**REMARK :** This service manual explains the differences between the CD5000/N1B, N2B, N3B and the CD5000/N4G.

All other information is described in the service manual of the model CD5000 (code number: 3120 785 00050). The dispatch of the parts for after sales service has to be referred to these service manuals, with the first priority.

For this reason, please use this service manual with referring to the model CD5000 service manual without fail.

**The change parts are the following. Other parts are the same.**

POS.NO	VERS. COLOR	DESCRIPTION	PART NO.(PCS)
0101	/N4G	CABINET FRONT	3139 118 16690
0102	/N4G	BUTTON SET,PLAY STOP	3139 118 10170
0103	/N4G	COVER DOOR,CD	3139 118 10180
0105	/N4G	BUTTON,POWER	3139 118 10190
0106	/N4G	BUTTON,OPEN/CLOSE	3139 118 10200
0110	/N4G	BADGE, MARANTZ	nsp
0111	/N4G	BUTTON,SET PROGRAM	3139 118 10220
0112	/N4G	BADGE, CONPACT DISC	3139 118 10390
0126	/N4G	TOP/REAR COVER	nsp
0129	/N4G	PLATE (EARTH CONTACT)	nsp
0283	/N4G	SCREW(TOP,SIDE)	nsp

Please use this service manual with referring to the user guide (D.F.U) without fail.

**marantz®**

**CD5000**

273W855030 AO  
3120 785 22850  
First Issue:2002.02