

# Service Manual

CD6000K/N1B/T1B  
/N1G/T1G

CD Player



**REMARK :** This service manual explains the electrical differences between the CD6000K/N1B/T1B/N1G/T1G (KI version) and CD6000F/N1B/T1B/N1G/T1G (OSE version).

All other information is described in the service manual of the model CD6000F/N1B/T1B/N1G/T1G (Code number : **3120 785 00060**). The dispatch of the parts for after sales service has to be referred to these service manuals, with the first priority.

For this reason, please use these service manuals with referring to the model CD6000 OSE service manual without fail.

**The CD6000 KI is equal to the CD6000 OSE except the following electrical changes (mechanical changes are not listed):**

#### Main PCB

Position No.	Service code	Description
2131, 2132	9965 000 08117	3300uF 25V
2115, 2116, 2223,2224, 2225,2226	4822 124 80123	220uF 16V Silmic
2311, 2312, 2316, 2317	4822 124 80958	470uF 16V Silmic
5110	4822 146 10377	230V Transformer
3249, 3250, 3251,3252, 3711, 3712, 3713, 3714	--	Short circuited

**marantz**®

**CD6000 KI**

## Transformer Connections

Below the color coding and the connections for the transformer wires are given.

