

**marantz®****Service Bulletin****No. : MZ01-024****Date: November 29, 2006****Model:** SA-14**Subject:** The sound output mutes.**Symptom:** When playing a CD or a SACD, the sound may mute from current leaking from capacitors in the mute circuit.**Solution:** Replace the following capacitors: C524, C526, C535, C536**Parts:**

Ref#	Description	Part Number
C524, C526, C535, C536	1uF / 10V	DK98105200

Serial Number Range:

All

CONFIDENTIALITY NOTICE:

The information contained in this document is intended for the exclusive use by MARANTZ Authorized Service Centers and their employees. This document may contain information that is privileged, confidential and may be protected from disclosure under applicable laws and terms of the MARANTZ Service Agreement. Any distribution, disclosure, dissemination or copying of this document and the information it contains is prohibited. No responsibility will be accepted by MARANTZ for any damage, injury or loss resulting from the misuse of the information contained in this document.