

T562

Region Setting

The above model is delivered factory set to either R1 or R2 depending on the version. To change the region code to your own area please perform the following,

- 1. Turn on the unit and remove any discs .*
- 2. Call up the OSD menu and select “Settings”.*
- *3. Enter the numbers , 741130 .*
- 4. After these numbers are entered a screen will appear showing a number of regions to select.*
- 5. After selecting the region press enter, then turn the unit off for this procedure to take effect.*

** Note: Enter this sequence of numbers as quick as possible .*

This completes the region setting.