

ADDITIONAL

 PIONEER®

Service Manual

ORDER NO.
ART-621-0

NON SWITCHING AMP
STEREO AMPLIFIER

A-5 HE, HB

- The basic performance of the HE and HB types is the same as the KU type, please refer to the KU type service manual (ART-620) with the exception of this supplements.

SPECIFICATIONS

The specifications for HE and HB types are the same as the KU type except for following sections:

Amplifier Section

Hum and Noise (DIN, continuous Power/50mW)

PHONO.....72dB/64dB

TUNER, AUX, TAPE PLAY.....95dB/69dB

Miscellaneous

Power Requirements220V/240V (Switchable)

50/60Hz

Power Consumption250W

Line Voltage Selection

Line voltage can be changed with following steps.

1. Disconnect the AC power cord.
2. Remove the top cover.
3. Take out the fuse (AEK-018) from the fuse assembly.
4. Re-install the fuse in the correct voltage indication (see Fig. 1).
5. Stick the line voltage label on the rear panel.

Part No.	Description
AAX-193	220V label
AAX-192	240V label

 
 
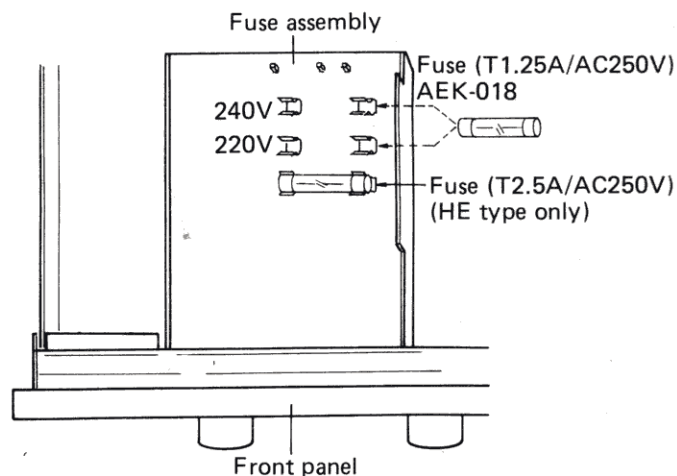 


Fig. 1

SCHEMATIC DIAGRAM

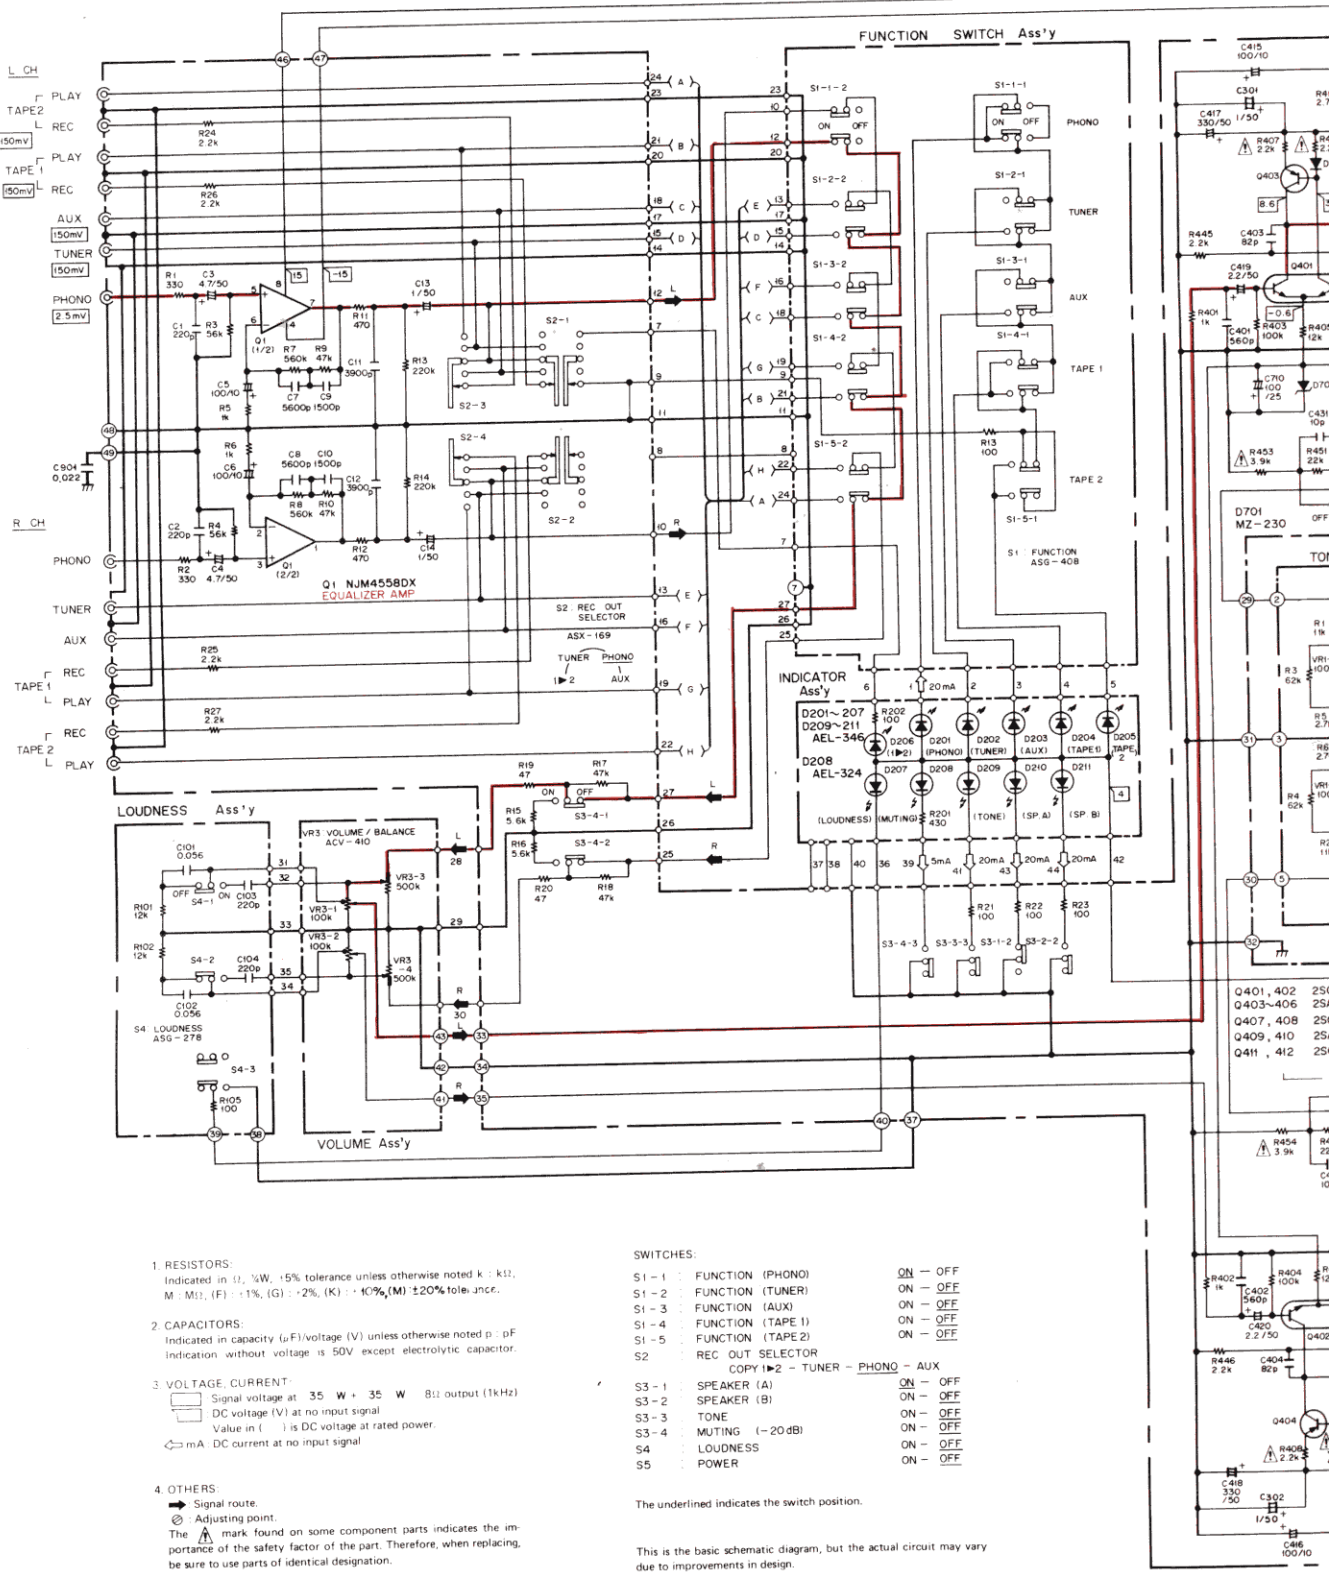

NOTE:
The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

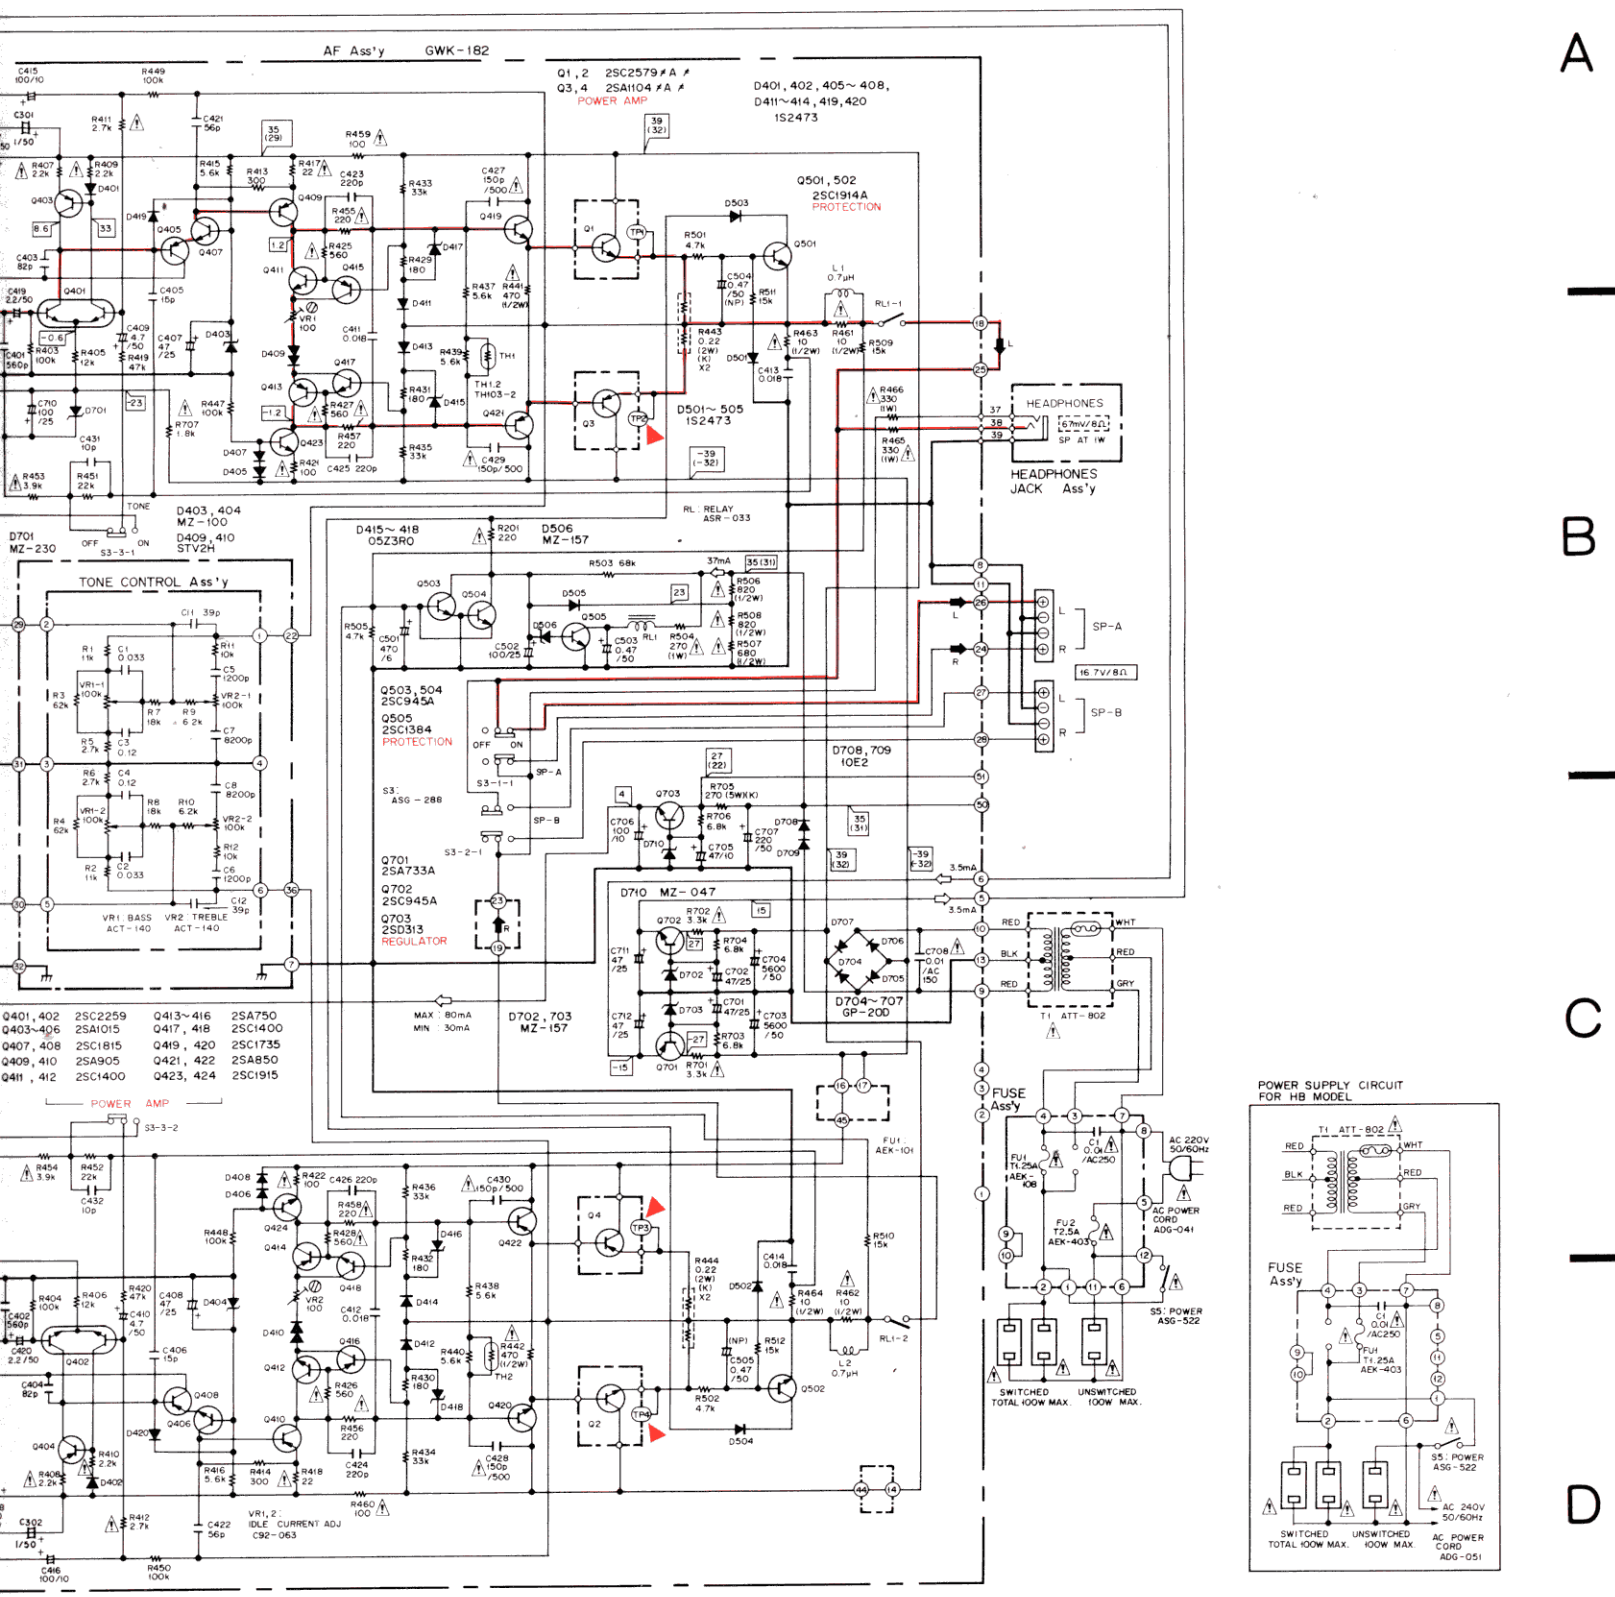

A

B

C

D