

Service Manual

ORDER NO.
RRV3749

AUDIO MULTI-CHANNEL RECEIVER

SX-218-K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
SX-218-K	KUCXJ	AC 120 V	

This service manual should be used together with the following manual(s):

Model	Order No.	Remarks
SX-316-S/KUCXJ	RRV3330	

For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2008

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ∇ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)
- Nos. indicate the pages and Nos. in the service manual for the base model.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow 56 $\times 10^1$ \rightarrow 561	RD1/4PU5 6 1J
47k Ω \rightarrow 47 $\times 10^3$ \rightarrow 473	RD1/4PU4 7 3J
0.5 Ω \rightarrow R50	RN2H R5 0K
1 Ω \rightarrow 1R0	RS1P1 R0K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562 $\times 10^1$ \rightarrow 5621	RN1/4PC5 6 2 1F
---	-------	-----------------

CONTRAST TABLE

SX-316-S/KUCXJ and SX-218-K/KUCXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	SX-316-S/KUCXJ	SX-218-K/KUCXJ	Remarks
C	P7- 6	PACKING SECTION			
	P7-11	Operating Instructions (English/French)	XRE3113	XRE3196	
	P7-15	Remote control	XXD3108	XXD3175	
		Packing Case	XHD3586	XHD3822	
	P9-24	EXTERIOR SECTION			
	P9-32	R Panel	XNC3420	XNC3608	
		Bonnet	XZN3184	XZN3183	
		Screw	BBZ30P080FNI	BBZ30P080FTB	the side of Bonnet
	P11- 6	FRONT PANEL SECTION			
	P11- 7	JOG Knob	XAB3048	XAB3052	
D	P11- 8	VOL Knob	XAB3051	XAB3053	
	P11-10	Standby BTN	XAD3203	XAD3202	
	P11-11	F Panel Assy	XXG3257	XXG3380	
	P11-12	Tuner BTN	XAD3248	XAD3230	
	P11-13	SUB BTN	XAD3249	XAD3231	
	P11-14	FUNC BTN	XAD3250	XAD3232	
	P11-15	Listen BTN	XAD3251	XAD3233	
	P11-16	JOG Button	XAD3252	XAD3240	
	P11-17	Pioneer Badge	VAM1129	XAM3006	
		FRT Panel	XMB3236	XMB3340	

E

F