


Pioneer

Service Manual

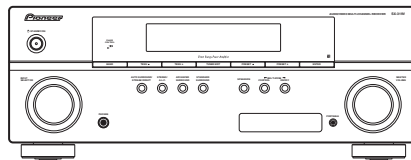

SX-319V-K

ORDER NO.
RRV3943

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

SX-319V-K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
SX-319V-K	UCXCN	AC 120 V	



For details, refer to "Important Check Points for good servicing".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2009

T-ZZK MAY 2009 Printed in Japan

SAFETY INFORMATION



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product may contain a chemical known to the State of California to cause cancer, or birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

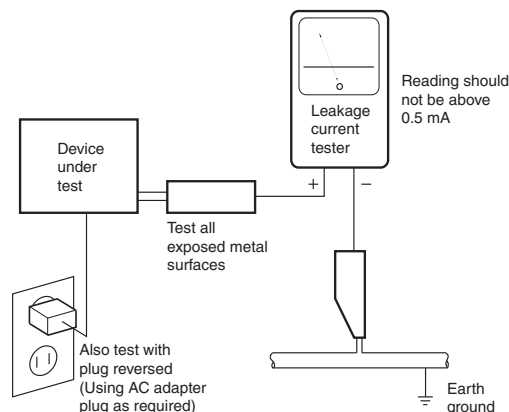

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual. The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol. Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification (addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris. Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs. In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages. If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries. Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification. Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance. Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

	SAFETY INFORMATION	2
	1. SERVICE PRECAUTIONS	5
A	1.1 NOTES ON SOLDERING	5
	1.2 CAUTION	5
	2. SPECIFICATIONS	6
	2.1 SPECIFICATIONS	6
	2.2 PANEL FACILITIES	7
	3. BASIC ITEMS FOR SERVICE	11
	3.1 CHECK POINTS AFTER SERVICING	11
	3.2 PCB LOCATIONS	12
	3.3 JIGS LIST	13
	4. BLOCK DIAGRAM	14
	4.1 OVERALL WIRING DIAGRAM	14
	4.2 AUDIO BLOCK DIAGRAM	16
B	4.3 U-COM BLOCK DIAGRAM	18
	4.4 POWER SUPPLY BLOCK DIAGRAM	19
	5. DIAGNOSIS	20
	5.1 DIAGNOSIS FLOWCHART	20
	5.2 DETECTION CIRCUIT	29
	6. SERVICE MODE	32
	6.1 SERVICE MODE	32
	7. DISASSEMBLY	35
	7.1 DISASSEMBLY	35
	8. EACH SETTING AND ADJUSTMENT	43
	8.1 IDLE CURRENT ADJUSTMENT	43
C	9. EXPLODED VIEWS AND PARTS LIST	44
	9.1 PACKING SECTION	44
	9.2 EXTERIOR SECTION	46
	10. SCHEMATIC DIAGRAM	50
	10.1 P.C.B SUB ASSY (MAIN) and P.C.B SUB ASSY (P/T)	50
	10.2 P.C.B SUB ASSYS (FRONT), (VOLUME), (FUNCTION), (HEADPHONE) and (PORTABLE)	52
	10.3 P.C.B SUB ASSY (AMP)	54
	10.4 P.C.B SUB ASSY (INPUT)	56
	10.5 P.C.B SUB ASSY (VIDEO)	58
	10.6 P.C.B SUB ASSY (SPEAKER) and P.C.B SUB ASSY (CNT)	59
	10.7 P.C.B SUB ASSY (DSP) (1/2)	60
	10.8 P.C.B SUB ASSY (DSP) (1/2) and P.C.B SUB ASSY (REG)	62
D	11. PCB CONNECTION DIAGRAM	64
	11.1 P.C.B SUB ASSY (MAIN) and P.C.B SUB ASSY (P/T)	64
	11.2 P.C.B SUB ASSY (FRONT)	68
	11.3 P.C.B SUB ASSYS (VOLUME), (FUNCTION), (HEADPHONE) and (PORTABLE)	70
	11.4 P.C.B SUB ASSY (AMP)	72
	11.5 P.C.B SUB ASSY (INPUT)	74
	11.6 P.C.B SUB ASSY (VIDEO)	76
	11.7 P.C.B SUB ASSY (SPEAKER)	80
	11.8 P.C.B SUB ASSYS (DSP), (CNT) and (REG)	82
	11.9 P.C.B SUB ASSY (HDMI)	86
	12. PCB PARTS LIST	88

1. SERVICE PRECAUTIONS

1.1 NOTES ON SOLDERING

- For environmental protection, lead-free solder is used on the printed circuit boards mounted in this unit.
Be sure to use lead-free solder and a soldering iron that can meet specifications for use with lead-free solders for repairs accompanied by reworking of soldering.
- Compared with conventional eutectic solders, lead-free solders have higher melting points, by approximately 40 °C. Therefore, for lead-free soldering, the tip temperature of a soldering iron must be set to around 373 °C in general, although the temperature depends on the heat capacity of the PC board on which reworking is required and the weight of the tip of the soldering iron.

Do NOT use a soldering iron whose tip temperature cannot be controlled.

Compared with eutectic solders, lead-free solders have higher bond strengths but slower wetting times and higher melting temperatures (hard to melt/easy to harden).

The following lead-free solders are available as service parts:

- Parts numbers of lead-free solder:
GYP1006 1.0 in dia.
GYP1007 0.6 in dia.
GYP1008 0.3 in dia.

1.2 CAUTION

- **Discharging**
For more detail, please refer to “7. DISASSEMBLY - 1. Discharging”.
- **Notes on Ground Points Connection**
For more detail, please refer to “7. DISASSEMBLY - 2. Notes on Ground Points Connection”.

2. SPECIFICATIONS

2.1 SPECIFICATIONS

A

Amplifier section

Continuous average power output of 80 watts* per channel, min., at 8 ohms, from 20 Hz to 20 000 Hz with no more than 0.2 % total harmonic distortion.**

Front (stereo)	.80 W + 80 W
Power output (1 kHz, 8 Ω , 0.05 %)	
.....	110 W per channel
Guaranteed speaker impedance	

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers

B

** Measured by Audio Spectrum Analyzer

Audio Section

Input (Sensitivity/Impedance)	
LINE	200 mV/47 k Ω
Output (Level/Impedance)	
REC.	200 mV/330 Ω
ZONE 2	200 mV/1 k Ω
Signal-to-Noise Ratio (IHF, short circuited, A network)	
LINE	98 dB
Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]	
LINE	79 dB

C

Tuner Section

Frequency Range (FM) . . . 87.5 MHz to 108 MHz
Antenna Input (FM) 75 Ω unbalanced
Frequency Range (AM) . . . 530 kHz to 1700 kHz
Antenna (AM) Loop antenna

Digital I/O

HDMI terminal	19-pin (Not DVI)
HDMI output type	.5 V, 100 mA

Integrated control section

Control (IR) terminal. . . Ø3.5 Mini-jack (MONO)
IR signal High Active (High Level : 2.0 V)

Miscellaneous

Power Requirements AC 120 V, 60 Hz
Power Consumption 310 W
In standby 0.5 W
Dimensions
 420 mm (W) x 158 mm (H) x 347.7 mm (D)
 16⁹/₁₆ in. (W) x 6¹/₄ in. (H) x 13³/₄ in. (D)
Weight (without package) 8.8 kg (19 lb 7 oz)

Furnished Parts

Remote control	1
Dry cell batteries (AAA size IEC R03)	2
AM loop antenna	1
FM wire antenna	1
Operating instructions	



- Specifications and the design are subject to possible modifications without notice, due to improvements.

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent #s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535 & other U.S. and worldwide patents issued & pending.
DTS and DTS Digital Surround are registered trademarks and the DTS logos, Symbol and DTS 96/24 are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

D

E

F

■ Accessories



 
AM loop antenna
(E601016000010-IL)



FM wire antenna
(E605010070001-IL)




AAA size IEC R03
Dry cell batteries (x2)



Remote control
(8300753500010-IL)

2.2 PANEL FACILITIES

Front panel

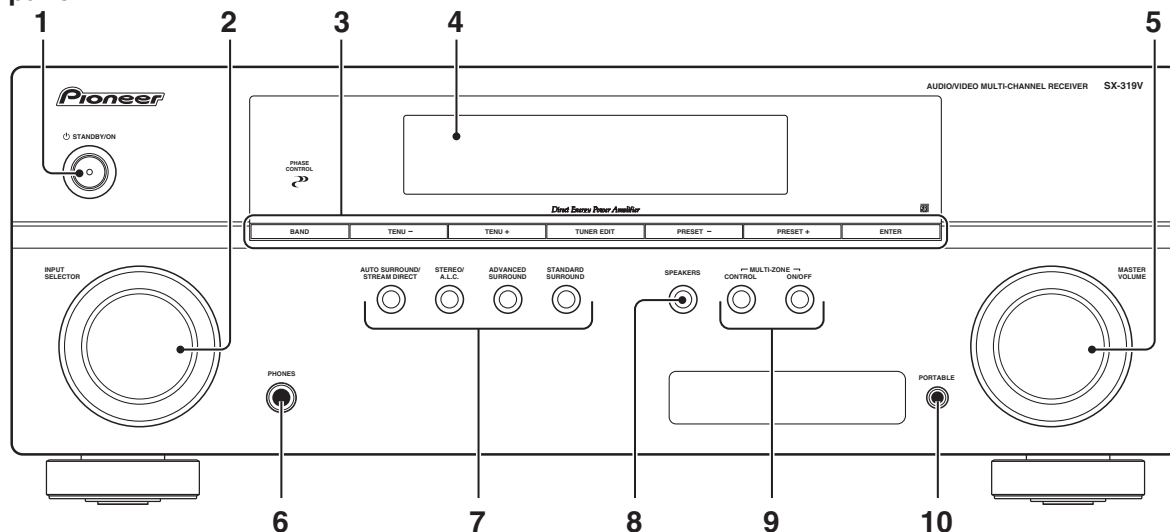

1 **STANDBY/ON**

2 INPUT SELECTOR dial
Selects an input source.

3 **Tuner control buttons**

BAND

Switches between AM, FM ST (stereo) and FM MONO radio bands.

TUNE +/-

Used to find radio frequencies.

TUNER EDIT

Use with **TUNE +/-**, **PRESET +/-** and **ENTER** to memorize and name stations for recall.

PRESET +/-

Use to select preset radio stations.

4 **Character display**

See Display.

5 **MASTER VOLUME dial**

6 **PHONES jack**

Use to connect headphones.

7 **Listening mode buttons**

AUTO SURROUND/STREAM DIRECT

Switches between Auto surround mode (Auto playback) and Stream Direct playback. Stream Direct playback bypasses the tone controls for the most accurate reproduction of a source.

STEREO/A.L.C.

Switches between stereo playback, Auto level control stereo mode and Front Stage Surround Advance modes.

ADVANCED SURROUND

Switches between the various surround modes.

STANDARD SURROUND

Press for Standard decoding and to switch between the various Pro Logic II options.

8 **SPEAKERS**

Use to change the speaker system on or off.


9 **MULTI ZONE controls**

If you've made MULTI-ZONE connections (see MULTI-ZONE listening) use these controls to control the sub zone from the main zone (see Using the MULTI-ZONE controls).

10 **PORTABLE audio input jack**


Connect an auxiliary component using a stereo mini-jack cable.

Rear panel

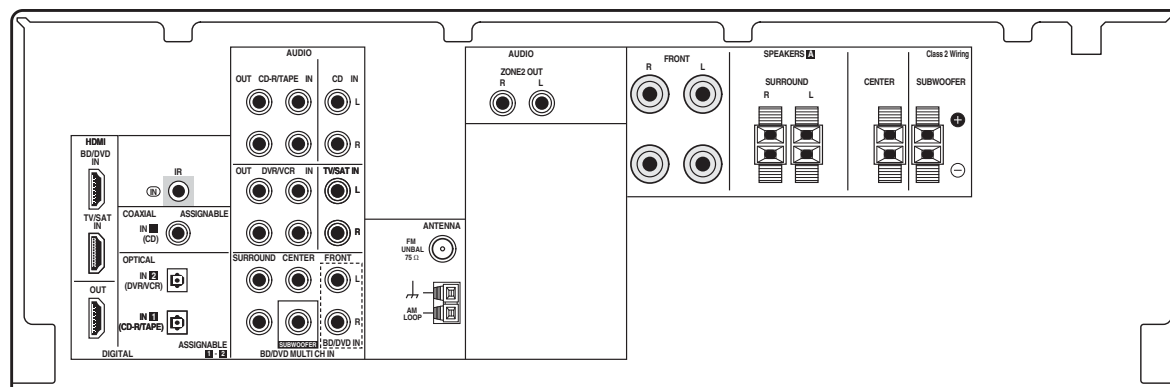

SX-319V-K

A Display

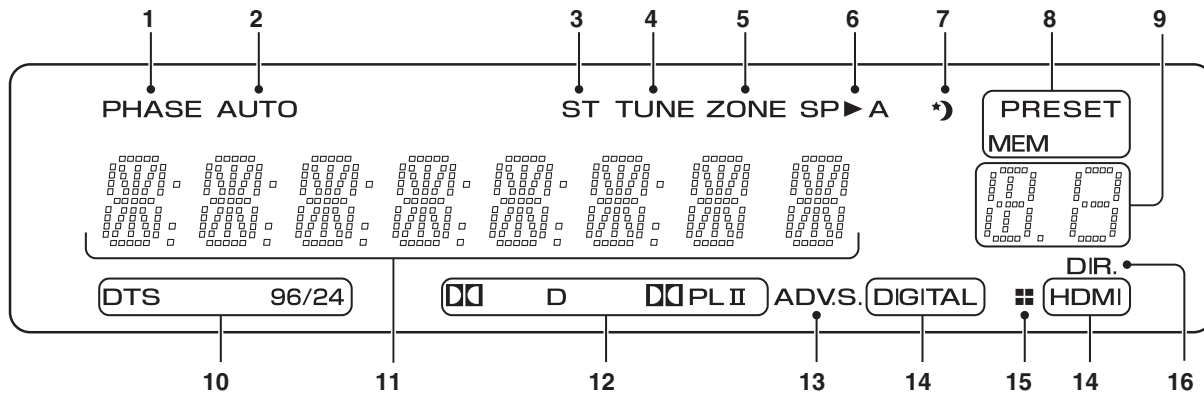

1 PHASE

Lights when the Phase Control is switched on.

2 AUTO

Lights when the Auto Surround feature is switched on (See Auto playback).

3 ST

Lights when a stereo FM broadcast is being received in auto stereo mode.

4 TUNE

Lights when a broadcast is being received.

5 ZONE

Lights when the MULTI-ZONE feature is active.

6 Speaker indicator

Shows if the speaker system is on or not.

SP▶A means the speakers are switched on.

SP▶ means the speakers are switched off and sound is output from the headphone jack.

7 Sleep timer indicator

Lights when the receiver is in sleep mode.

8 Tuner preset indicators

PRESET

Shows when a preset radio station is registered or called.

MEM

Blinks when a radio station is registered.

9 PRESET information or input signal indicator

Shows the preset number of the tuner or the input signal type etc.

10 DTS indicators

DTS

Lights when a source with DTS encoded audio signals is detected.

96/24

Lights when a source with DTS 96/24 encoded audio signals is detected.

11 Character display

Displays various system information.

12 Dolby Digital indicators

D

Lights when a Dolby Digital encoded signal is detected.

PLII

Lights to indicate Pro Logic II decoding (see Listening in surround sound for more on this).

13 ADV.S.

Lights when one of the Advanced Surround modes has been selected (See Using the Advanced surround effects for more on this).

14 SIGNAL SELECT indicators

DIGITAL

Lights when a digital audio signal is selected.

Blinks when a digital audio signal is not selected.

HDMI

Lights when an HDMI signal is selected.

Blinks when an HDMI signal is not selected.

15 DIMMER indicator


Shows when the display is set to turn off as the DIMMER setting.

16 DIR.

Lights when the **DIRECT** or **PURE DIRECT** mode is switched on.

Remote control

As for operating other devices, the remote control codes for the Pioneer products are preset. The settings cannot be changed.

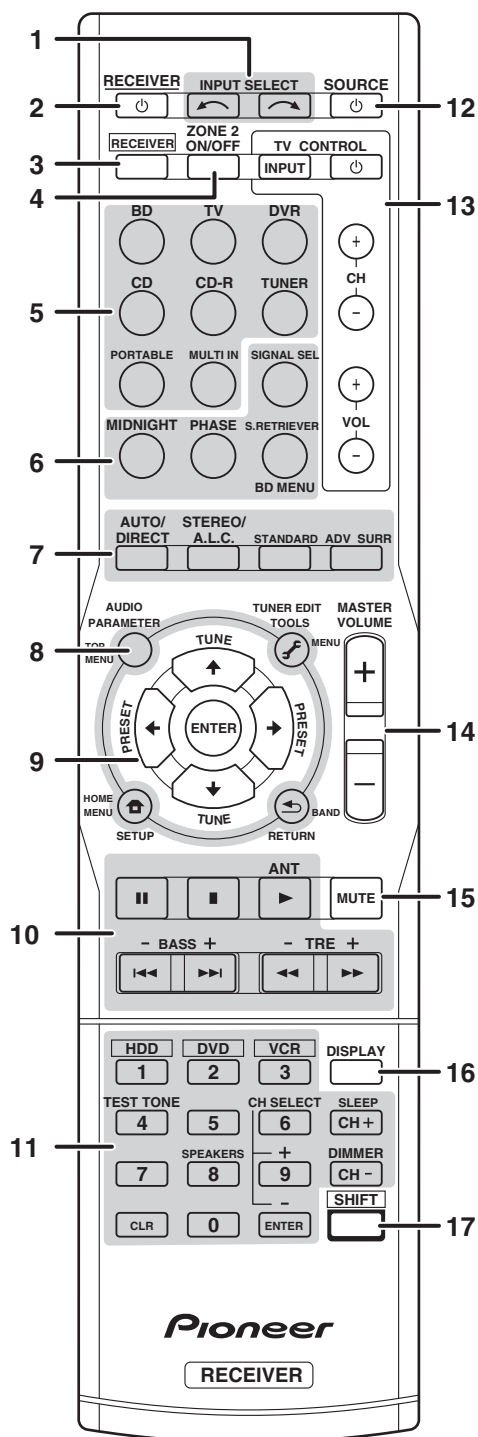

1 INPUT SELECT

Use to select the input source.

2 RECEIVER

Switches the receiver between standby and on.

3 RECEIVER

Switches the remote to control the receiver (used to select the white commands above the number buttons (**TEST TONE**, etc)). Also use this button to set up surround sound or Audio parameters.

4 ZONE 2 ON/OFF

Switches zone 2 of the multi-zone function between on and off.

5 MULTI CONTROL buttons

Press to select control of other components.

6 Receiver control buttons

SIGNAL SEL

Use to select an input signal.

MIDNIGHT

Switches to Midnight or Loudness listening.

PHASE

Press to switch on/off Phase Control.

S.RETRIEVER

Press to restore CD quality sound to compressed audio sources.

Press **BD** first to access:

BD MENU

Displays the disc menu of Blu-ray Discs.

7 Listening mode buttons

AUTO/DIRECT

Switches between Auto surround mode (Auto playback) and Stream Directplayback. Stream Directplayback bypasses the tone controls for the most accurate reproduction of a source.

STEREO/A.L.C.

Switches between stereoplayback, Auto level control stereo mode and Front Stage Surround Advance modes.

STANDARD

Press for Standard decoding and to switch between  Pro Logic II options.

ADV SURR

Switches between the various surround modes.

8 System Setup and Component control buttons

The following button controls can be accessed after you have selected the corresponding **MULTI CONTROL** button (**BD**, **TV**, etc.).

Press **RECEIVER** first to access:

AUDIO PARAMETER

Use to access the Audio options.

SETUP

Press to access the System Setup menu.

RETURN

Confirm and exit the current menu screen.

Press **BD** or **DVR** first to access:

TOP MENU

Displays the disc 'top' menu of a BD/DVD.

HOME MENU

Displays the HOME MENU screen.

RETURN

Confirm and exit the current menu screen.

MENU

Displays the TOOLS menu of Blu-ray Disc player.

Press **TUNER** first to access:

T.EDIT

Memorizes/names stations for recall.

BAND

Switches between AM, FM ST (stereo) and FM MONO radio bands (page 34).

9 **↑↓←→ (TUNE ↑/↓, PRESET ←/→), ENTER**

Use the arrow buttons when setting up your surround sound system. Also used to control BD/DVD menus/options.

Use the **TUNE** **↑/↓** buttons can be used to find radio frequencies and the **PRESET** **←/→** buttons can be used to select preset radio stations.

10 Component control buttons

The main buttons (**▶**, **⏏**, etc.) are used to control a component after you have selected it using the input source buttons.

The controls above these buttons can be accessed after you have selected the corresponding input source button (for example **BD**, **DVR** or **TV**). These buttons also function as described below.

Press **RECEIVER** first to access:

BASS -/+

Use to adjust Bass¹

TRE -/+

Use to adjust Treble¹

Press **TV** first to access:

ANT

Use to select the VHF/UHF antennas or Cable TV.

11 Number buttons and other component controls

Use the number buttons to directly select the tracks on a CD, DVD, etc. There are other buttons that can be accessed after the **RECEIVER** button is pressed. (For example **TEST TONE**, etc.)

HDD*, DVD*, VCR*

These buttons switch between the hard disk, DVD and VCR controls for HDD/DVD/VCR recorders.

TEST TONE

Outputs the test tones on each channel.

Use the **↑/↓** buttons to select the channel and use the **←/→** buttons to adjust the level on each channel. Pressing **TEST TONE** again exits the test tone mode.

CH SELECT

Press repeatedly to select a channel, then use **+/-** to adjust the level.

CH SELECT +/-

Use to adjust the channel levels.

SPEAKERS

Use to change the speaker system on or off.

SLEEP

Press to change the amount of time before the receiver switches into standby (**30 min – 60 min – 90 min – Off**). You can check the remaining sleep time at any time by pressing **SLEEP** once.

DIMMER

Dims or brightens the display. The brightness can be controlled in four steps.

12 **⏻ SOURCE**

Turns on or off the power of the Pioneer DVD, DVR units when **BD** or **DVR** is selected using the **MULTI CONTROL** buttons.

13 TV CONTROL buttons

These buttons can control only be used with Pioneer flat panel TVs.

⏻

Use to turn on/off the power of the TV.

INPUT

Use to select the TV input signal.

CH +/-

Use to select channels.

VOL +/-

Use to adjust the volume on your TV.

14 MASTER VOLUME +/-

Use to set the listening volume.

15 MUTE

Mutes/unmutes the sound.

16 DISPLAY

Switches the display of this unit. The input name, listening mode or sound volume can be checked by selecting an input source.

17 SHIFT

Press to access the 'boxed' commands (above the buttons) on the remote. These buttons are marked with an asterisk (*) in this section. The **TEST TONE** button is also used for operating ZONE 2.

Note

¹The tone controls are disabled when the listening mode is set to **DIRECT** or **PURE DIRECT**.

3. BASIC ITEMS FOR SERVICE

3.1 CHECK POINTS AFTER SERVICING


Items to be checked after servicing / VSX, SC

To keep the product quality after servicing, confirm recommended check points shown below.

No.	Procedures	Check points
1	Confirm whether the customer complain has been solved. If the customer complain occurs with the particular source, such as Dolby Digital, DTS, AAC, DVD-A and HDMI, input it for the operation check.	The customer complain must not be reappeared. Video, Audio and operations must be normal.
2	Check the analog audio playback. (Make the analog connections with a DVD player.)	Each channel audio and operations must be normal.
3	Check the digital audio playback. (Make the digital connections with a DVD player.)	Each channel audio and operations must be normal.
4	Check surround playback. (Select Surround mode and check the multichannel operations via the DSP circuit.)	Each channel audio and operations must be normal.
5	Check the video outputs. (Connect with a DVD player.)	Video and operations must be normal.
6	Check the tuner (AM and FM) operations.	Audio and operations must be normal.
7	Check the sound from headphone output.	Sound must be normal, without noise.
8	Check the appearance of the product.	No scratches or dirt on its appearance after receiving it for service.

See the table below for the items to be checked regarding video and audio.

Item to be checked regarding video	Item to be checked regarding audio
Block noise	Distortion
Horizontal noise	Noise
Flicker	Volume too low
Disturbed image (video jumpiness)	Volume too high
Too dark	Volume fluctuating
Too bright	Sound interrupted
Mottled color	

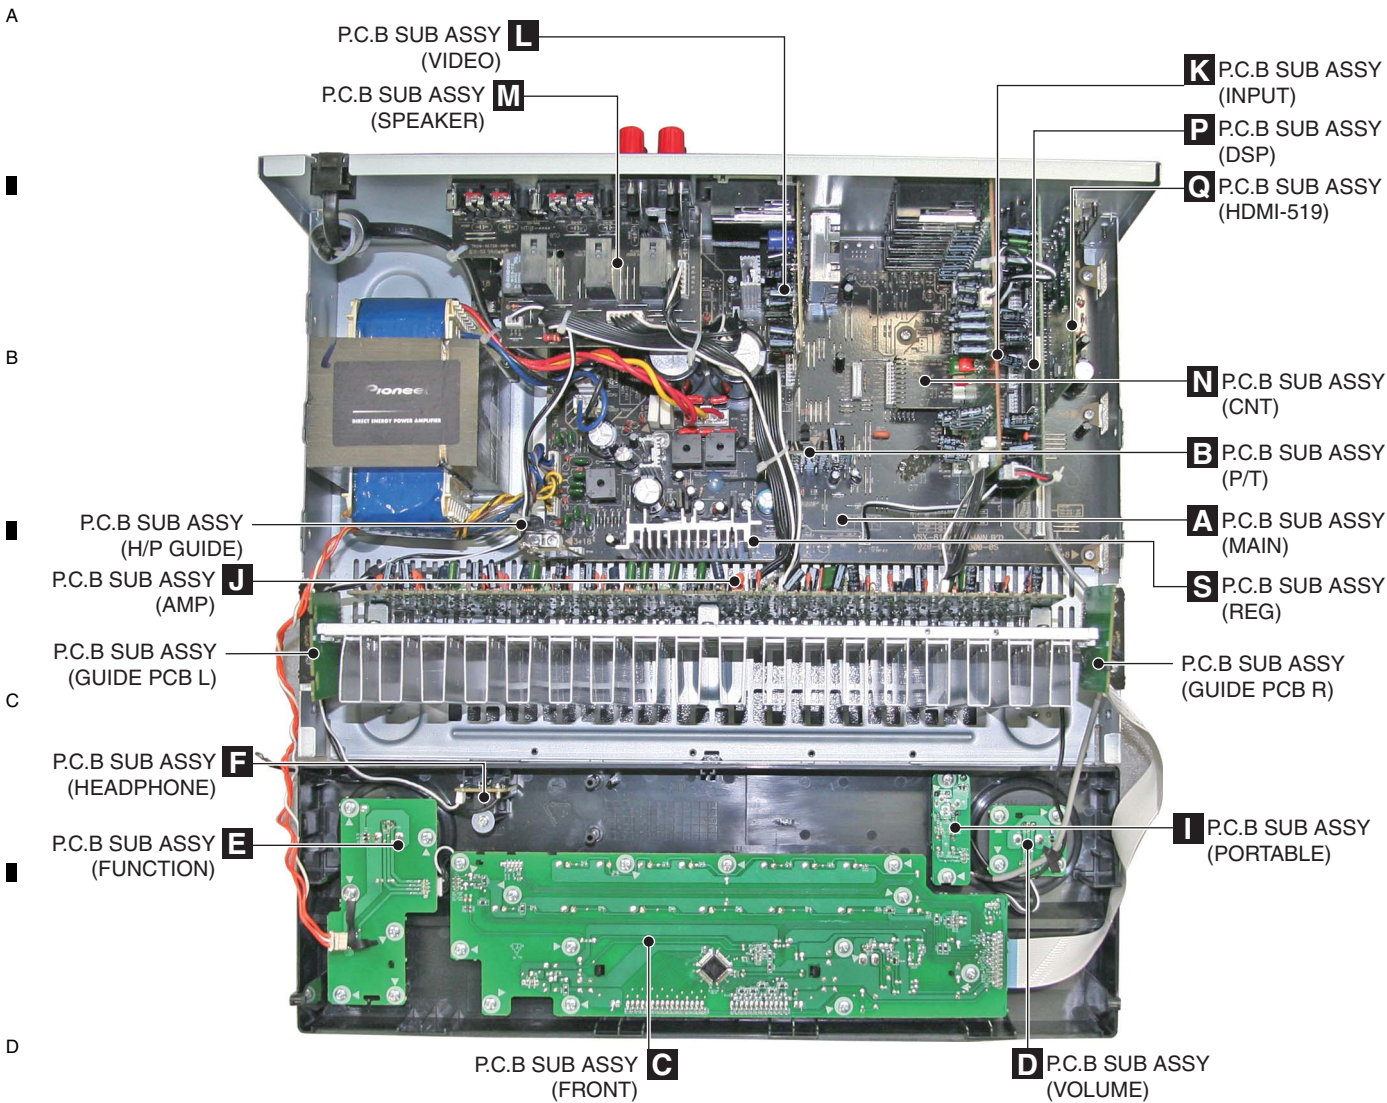

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.
Therefore, when replacing, be sure to use parts of identical designation.

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
LIST OF ASSEMBLIES							
E	NSP	1..P.C.B TOTAL ASSY (MAIN)	7025HK0812090-IL	NSP	1..P.C.B TOTAL ASSY (INPUT)	7025HK0812093-IL	7028067531040-IL
		2..P.C.B SUB ASSY (MAIN)	70280675010C0-IL		2..P.C.B SUB ASSY (INPUT)	7028067531040-IL	
		2..P.C.B SUB ASSY (GUIDE-L)	70280675020C0-IL	NSP	1..P.C.B TOTAL ASSY (VIDEO)	7025HK0812094-IL	7028067551030-IL
		2..P.C.B SUB ASSY (GUIDE-R)	70280675030C0-IL		2..P.C.B SUB ASSY (VIDEO)	7028067551030-IL	
		2..P.C.B SUB ASSY (CNT)	70280675040C0-IL	NSP	1..P.C.B TOTAL ASSY (DSP)	7025HK0812095-IL	7028067561040-IL
		2..P.C.B SUB ASSY (P/T)	70280675050C0-IL		2..P.C.B SUB ASSY (DSP)	7028067561040-IL	
		2..P.C.B SUB ASSY (HP GUIDE)	70280675060C0-IL		2..P.C.B SUB ASSY (REG)	7028067562010-IL	
	NSP	1..P.C.B TOTAL ASSY (FRONT)	7025HK0812091-IL	NSP	1..P.C.B TOTAL ASSY (HDMI)	7025HK0812096-IL	7028067581040-IL
		2..P.C.B SUB ASSY (FRONT)	7028067511030-IL		2..P.C.B SUB ASSY (HDMI)	7028067581040-IL	
		2..P.C.B SUB ASSY (HEADPHONE)	7028067512030-IL	NSP	1..P.C.B TOTAL ASSY (SPEAKER)	7025HK0812097-IL	7028068151010-IL
		2..P.C.B SUB ASSY (VOLUME)	7028067513030-IL		2..P.C.B SUB ASSY (SPEAKER)	7028068151010-IL	
		2..P.C.B SUB ASSY (FUNCTION)	7028067514030-IL				
F		2..P.C.B SUB ASSY (PORTABLE)	7028067518030-IL				
	NSP	1..P.C.B TOTAL ASSY (AMP)	7025HK0812092-IL				
		2..P.C.B SUB ASSY (AMP)	7028068141010-IL				

■ Jigs list

Name	Jig No.	Remarks
10P extension jig cable	GGD1628	Diagnosis
8P extension jig cable	GGD1629	Diagnosis
Board to board extension jig cable	GGD1630	Diagnosis

■ Lubricants and Glues list



Name	Lubricants and Glues No.	Remarks
Silicon grease	GEM1057	Refer to "9.2 EXTERIOR SECTION"
Silicon adhesive	GYA1011 (KE40RTV-W)	Refer to "9.2 EXTERIOR SECTION"

 
4.1 OVERALL WIRING DIAGRAM





△






4



4.4 POWER SUPPLY BLOCK DIAGRAM

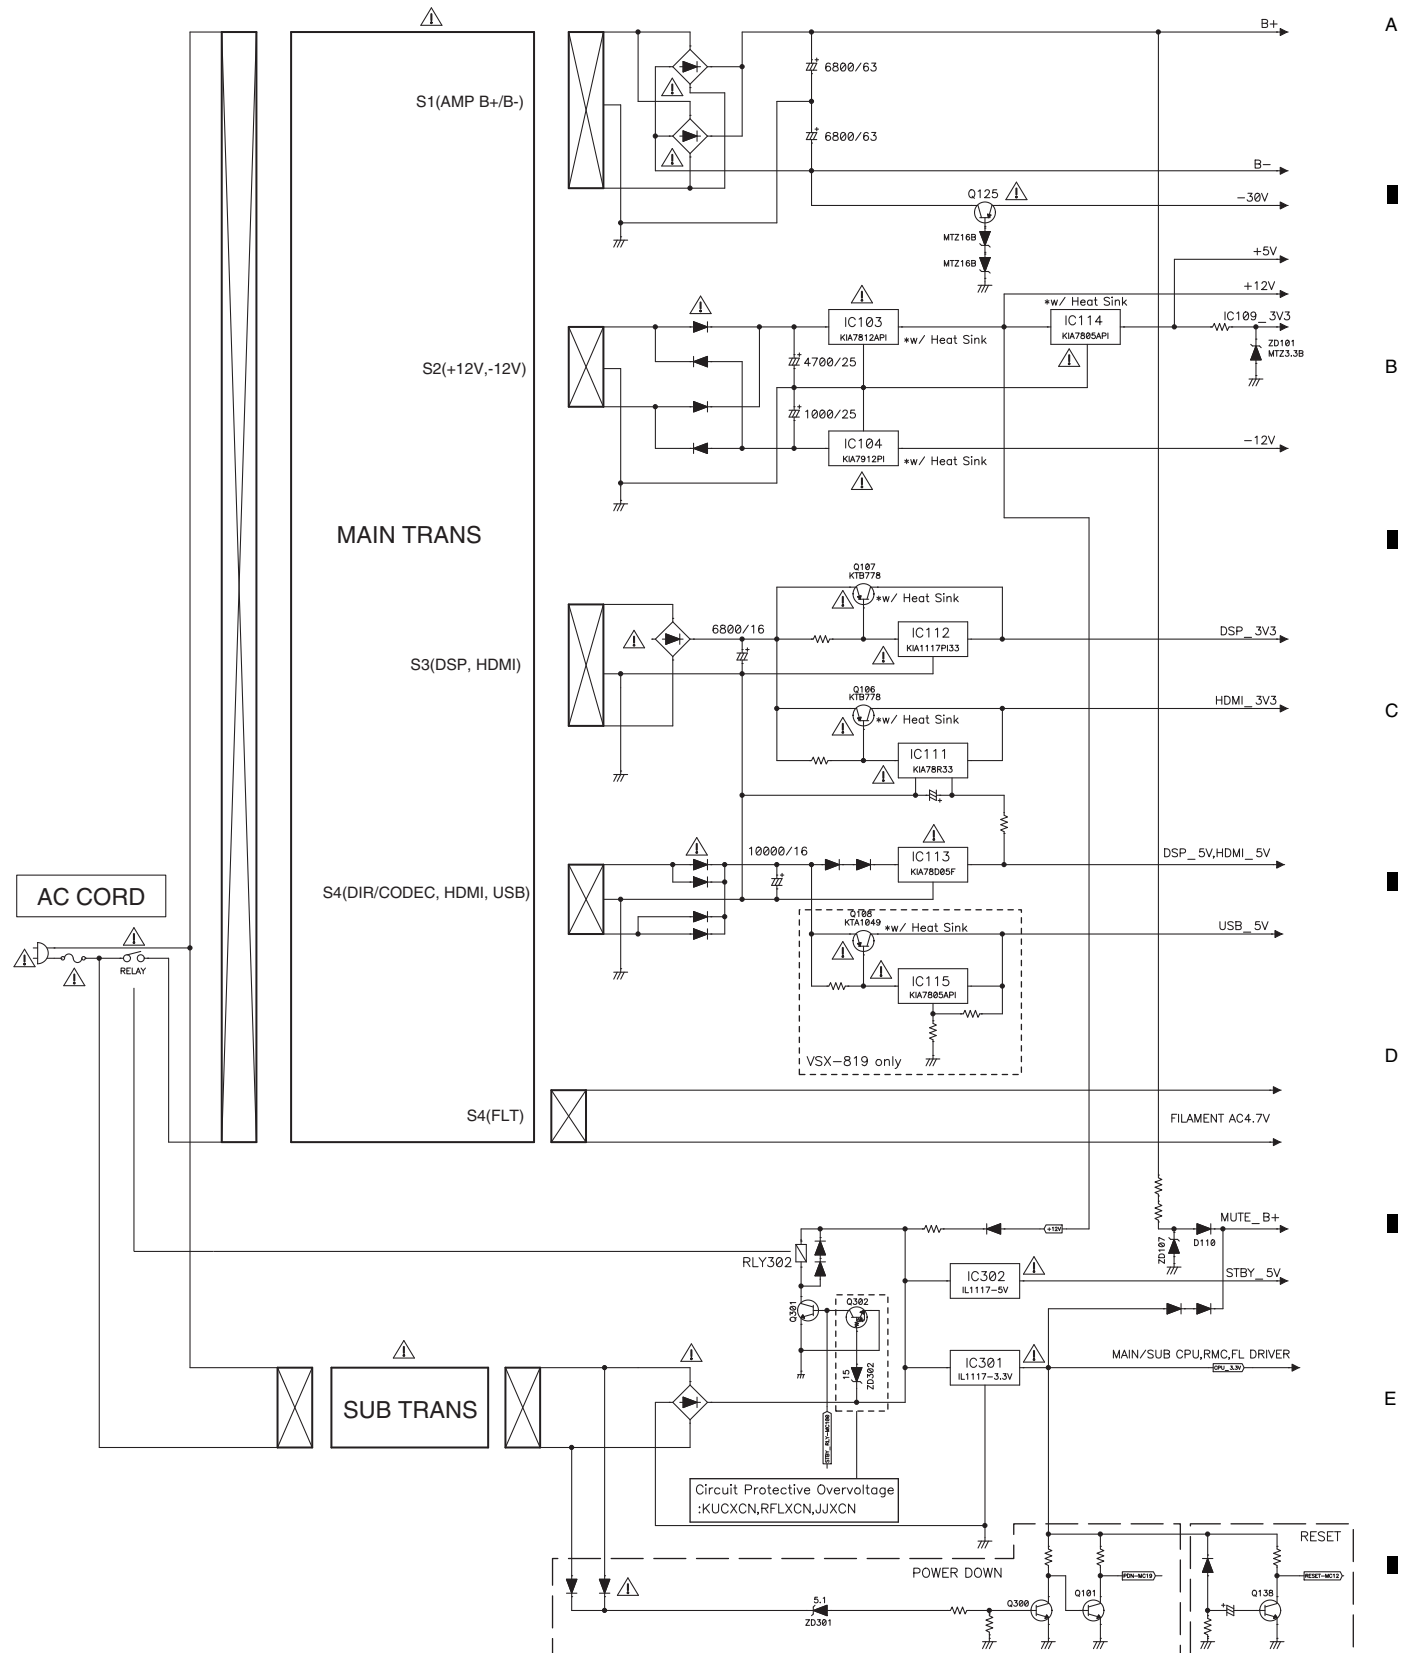

5. DIAGNOSIS


5.1 DIAGNOSIS FLOWCHART

[1] DSP TROUBLESHOOTING


Troubleshooting

Step 0: Preliminary confirmation


Confirm the following items before checking

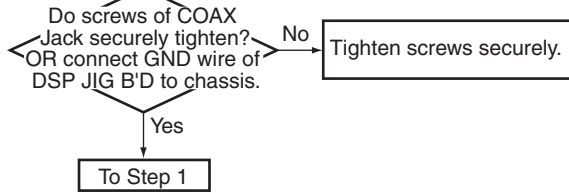


Step 1: BtoB connector

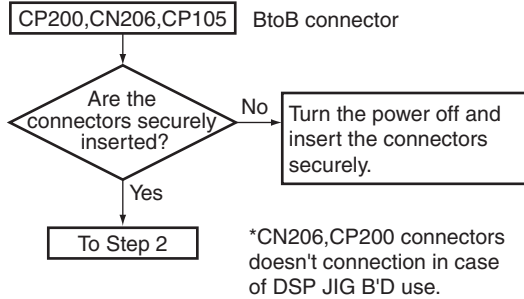


Step 2: Regulator IC

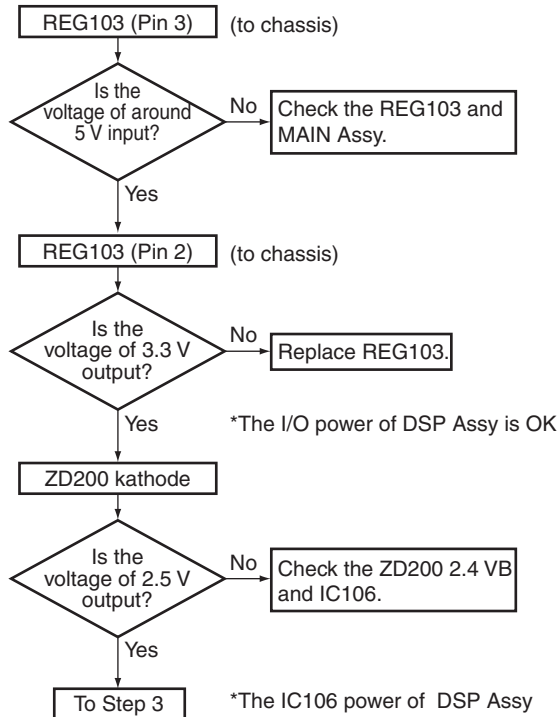

Step 3: Regulator IC


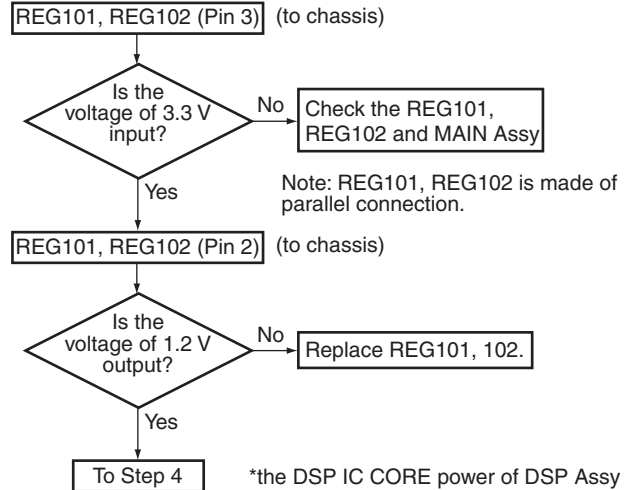


Step 4: X'tal

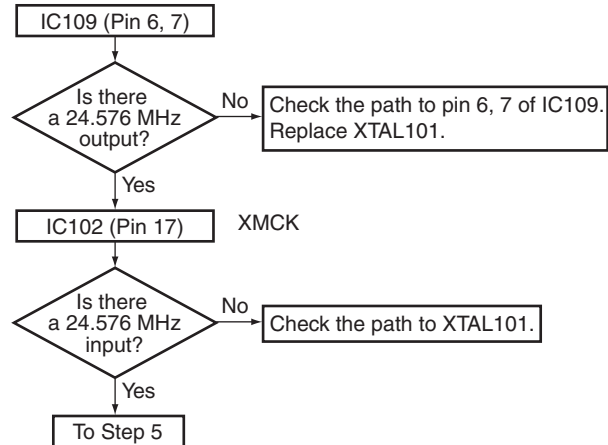

Step 5: DIR


Check that the S/PDIF signal is output.
Check that changes by pulling out and inserting the digital input lines.

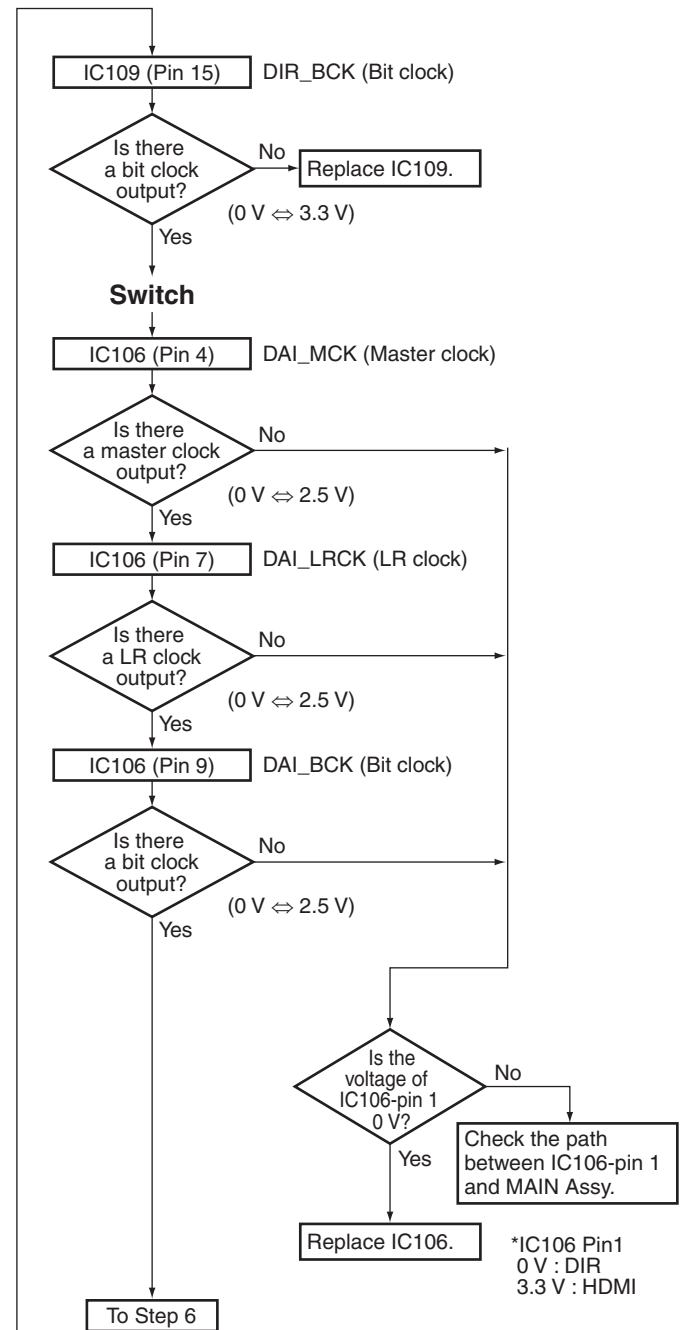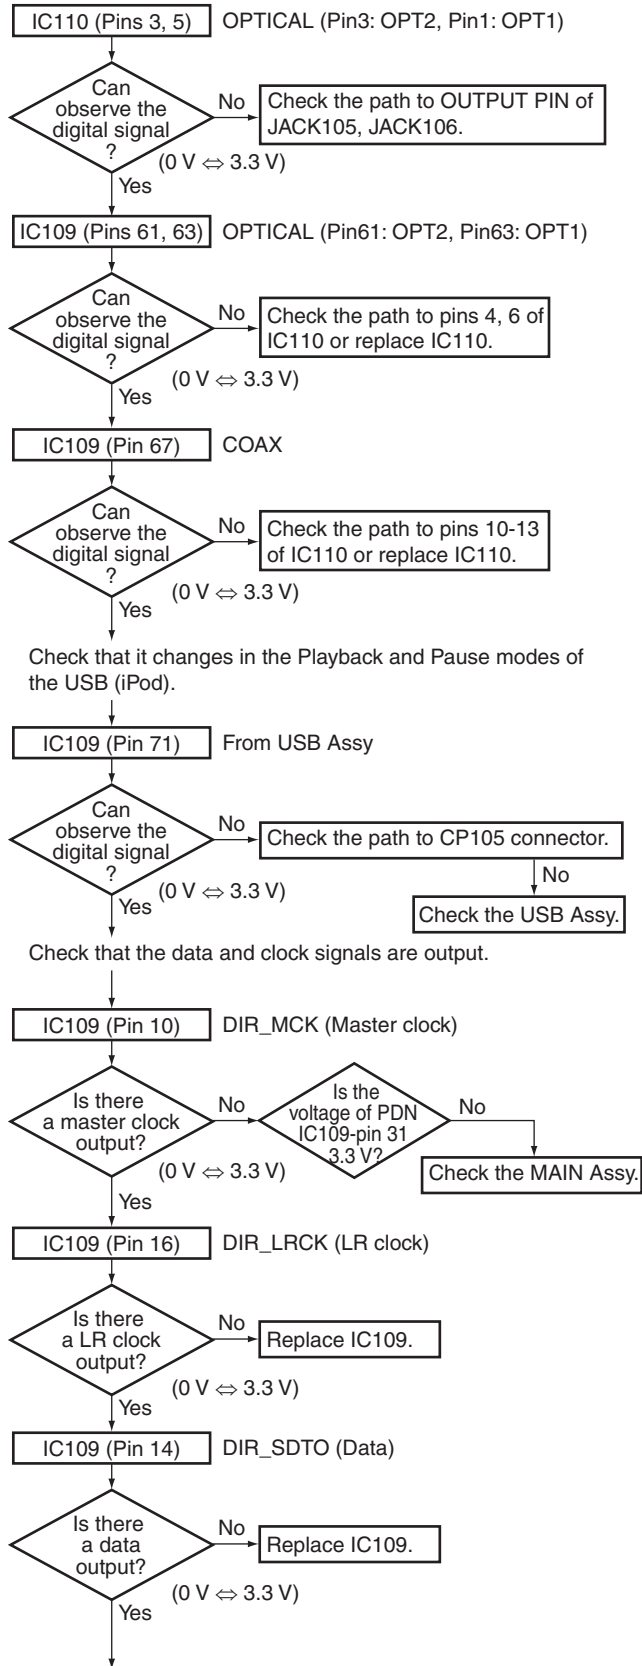

*IC106 Pin1
0 V : DIR
3.3 V : HDMI


A Step 6: DSP output (digital)

Digital output of each CH when inputting the digital signal with audio.

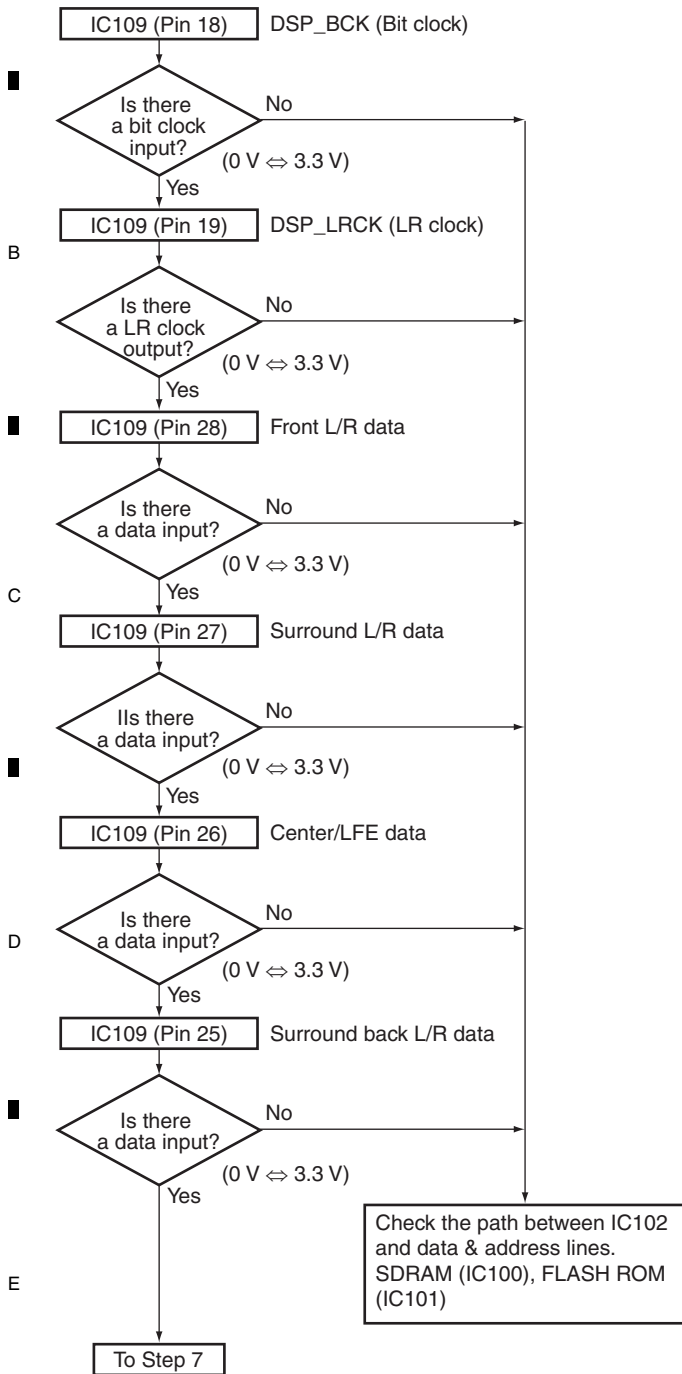


Step 7: Codec output (analog)

Analog output of each CH when inputting the digital signal with audio.

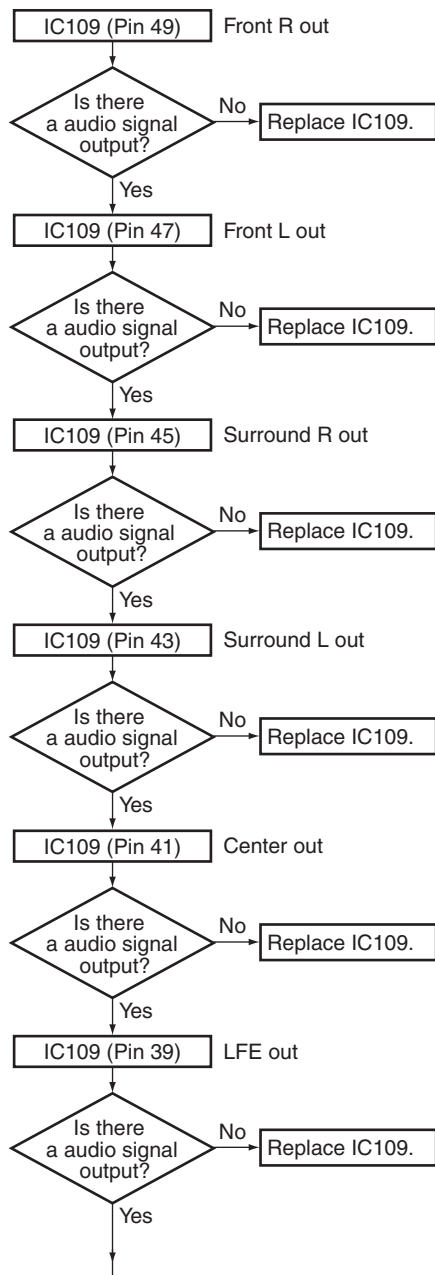

Analog output of each CH when inputting the digital signal (-∞ dB (no signal)).

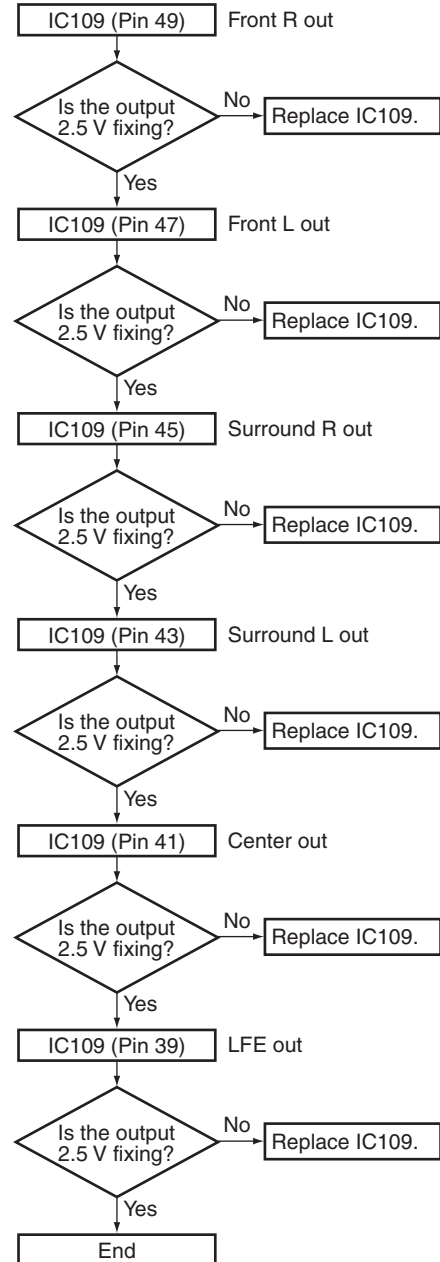


[2] HDMI TROUBLESHOOTING

1. Causes for noncompletion of HDMI authentication between the source equipment and this unit (the HDMI indicator is unlit or flashes)


HDMI Simple Diagnosis

Causes for no display or sound from the monitor

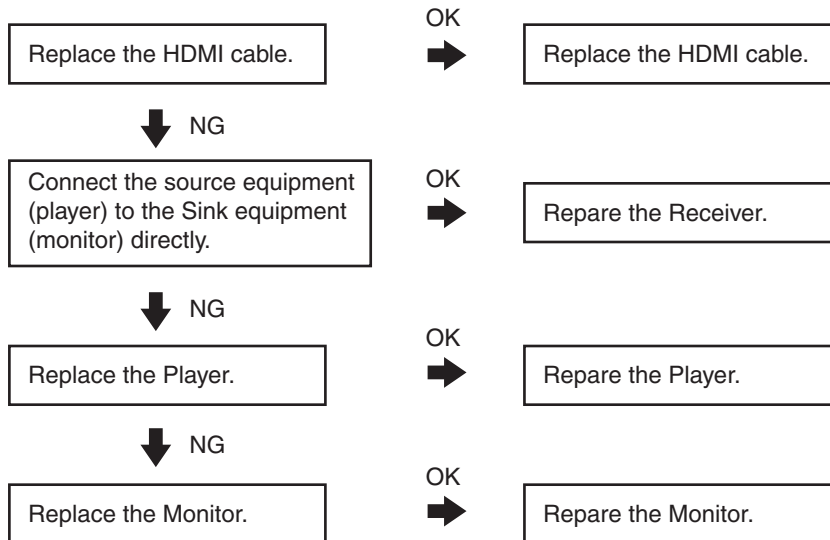


HDMI Troubleshooting


Step 0: Preliminary confirmation

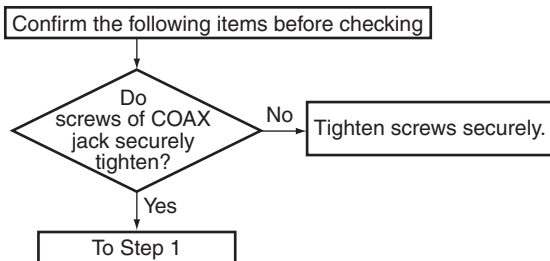

Step 1: Connect the HDMI equipment

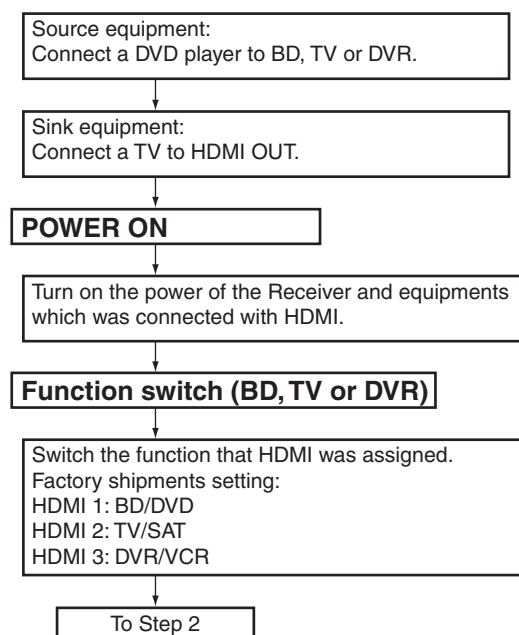


Step 2: Power supply

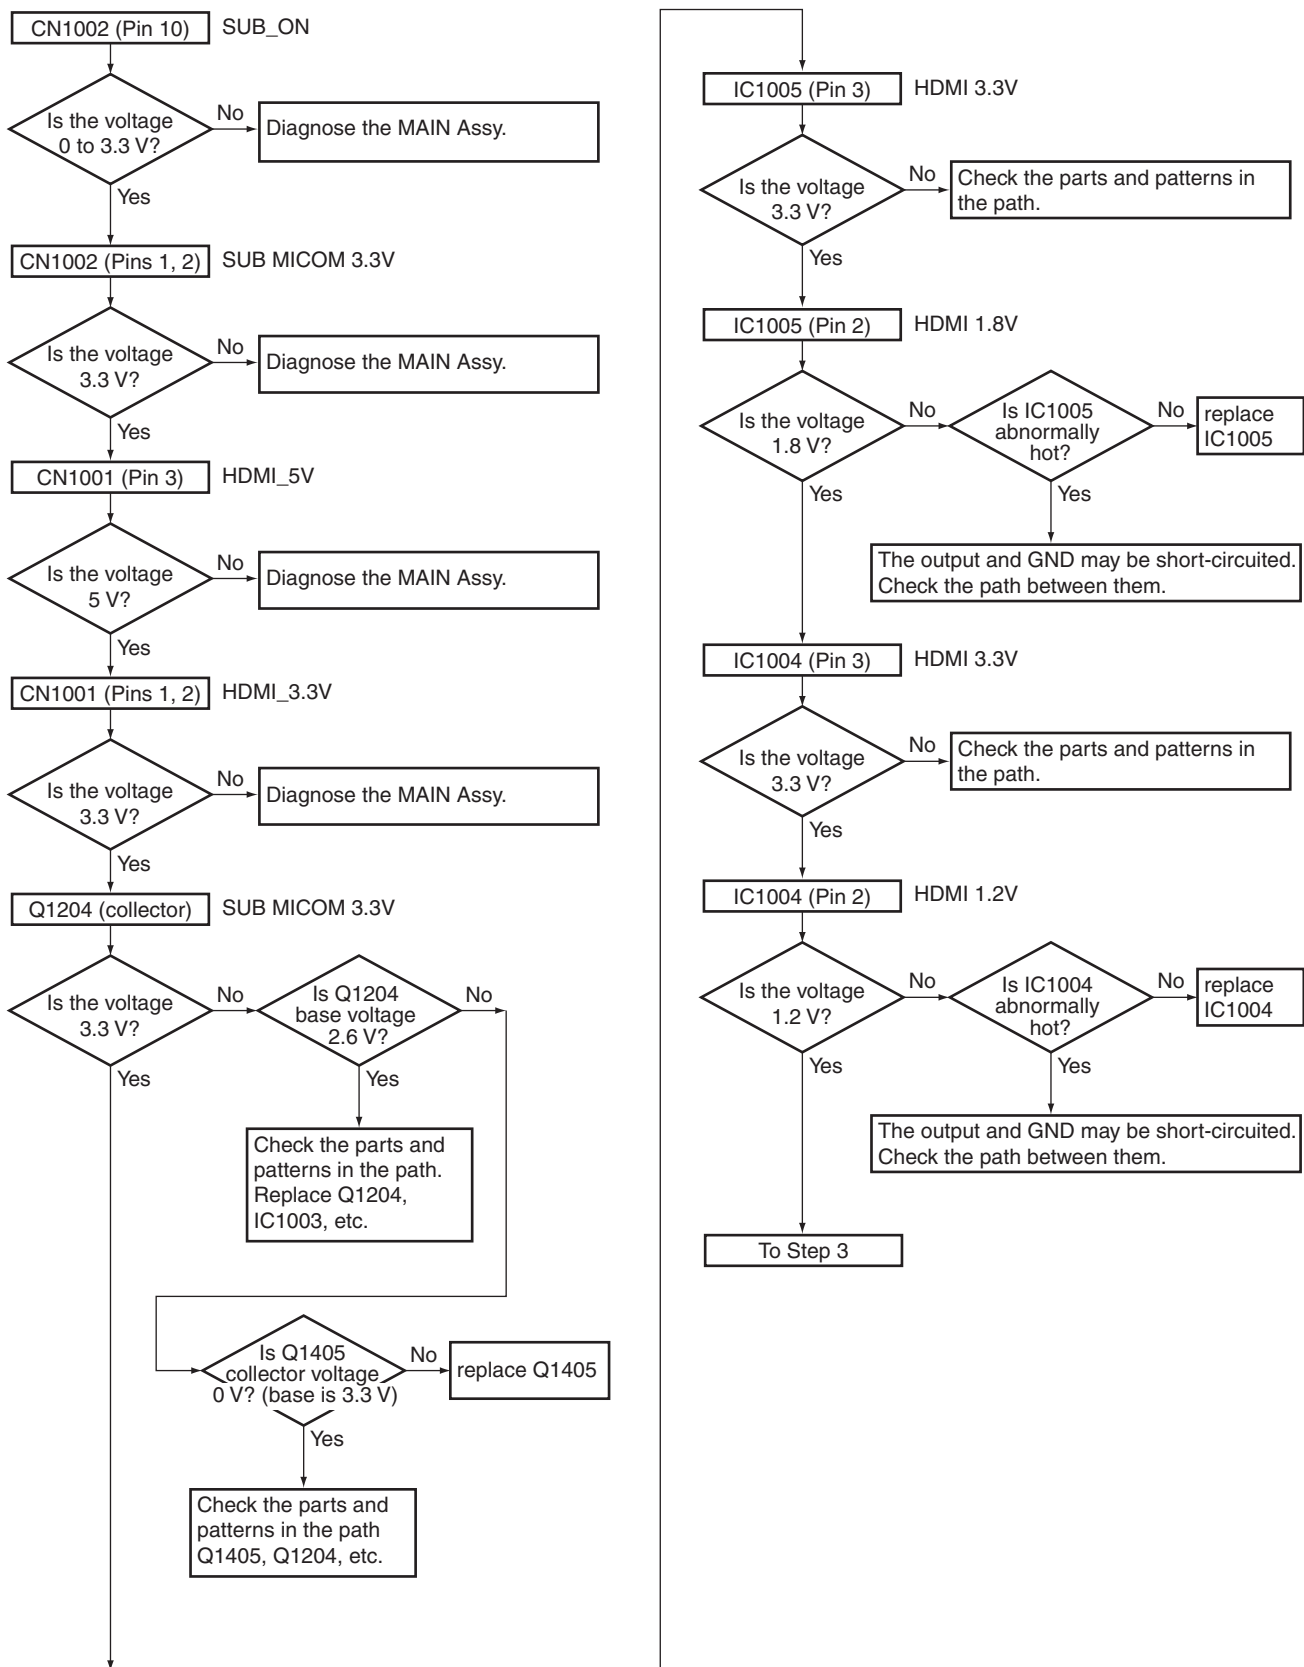


A Step 3: Diagnosis

Each data lines confirmation checks it after standby OFF/ON.

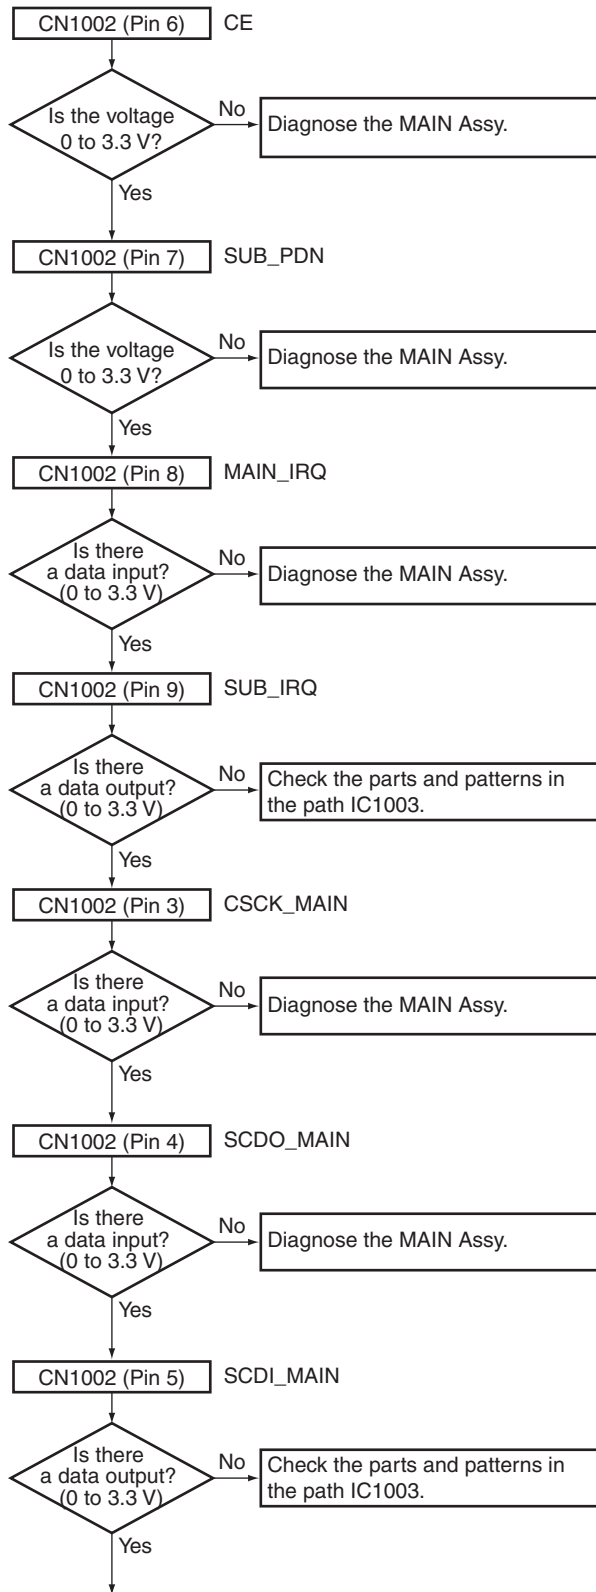


Step 4: X'TAL

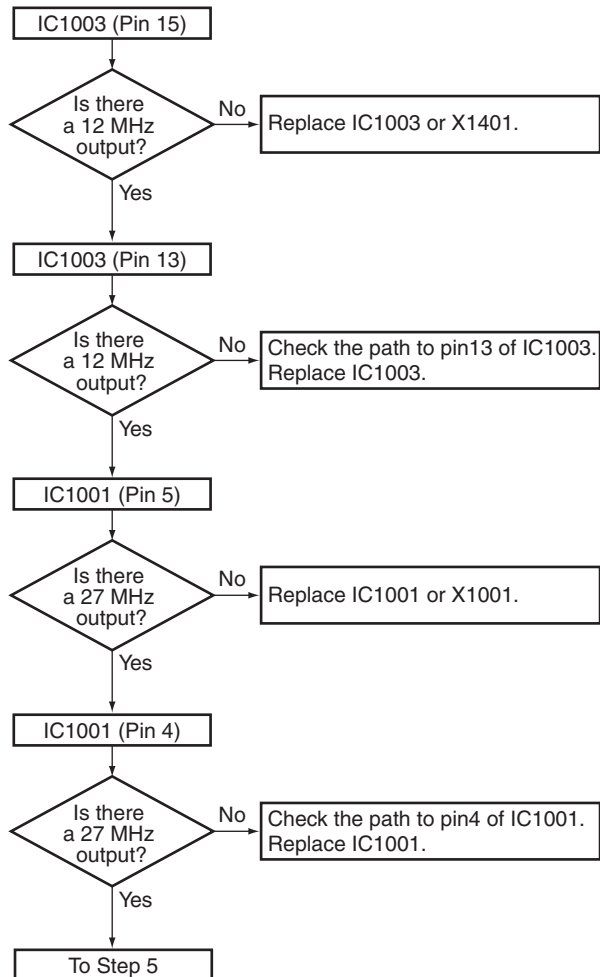


Step 5: IN/OUTPUT Diagnosis

* When connected the equipment to IN1(BD/DVD);

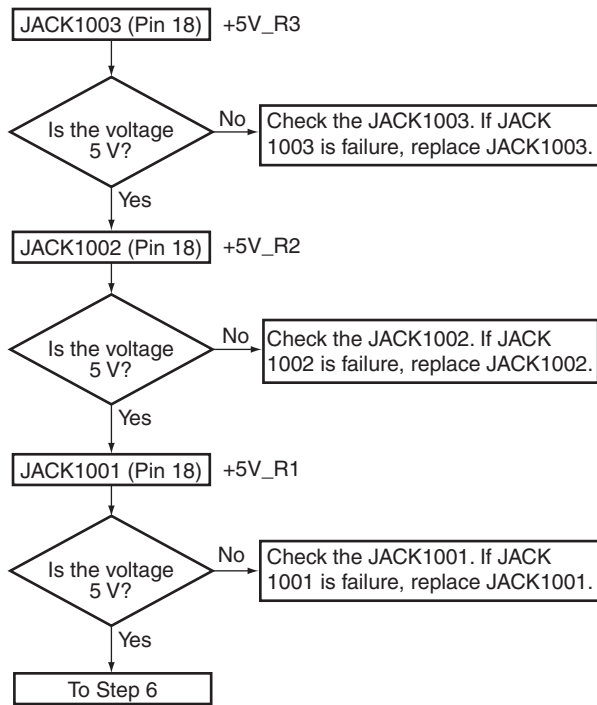

Step 6: Hot plug detect

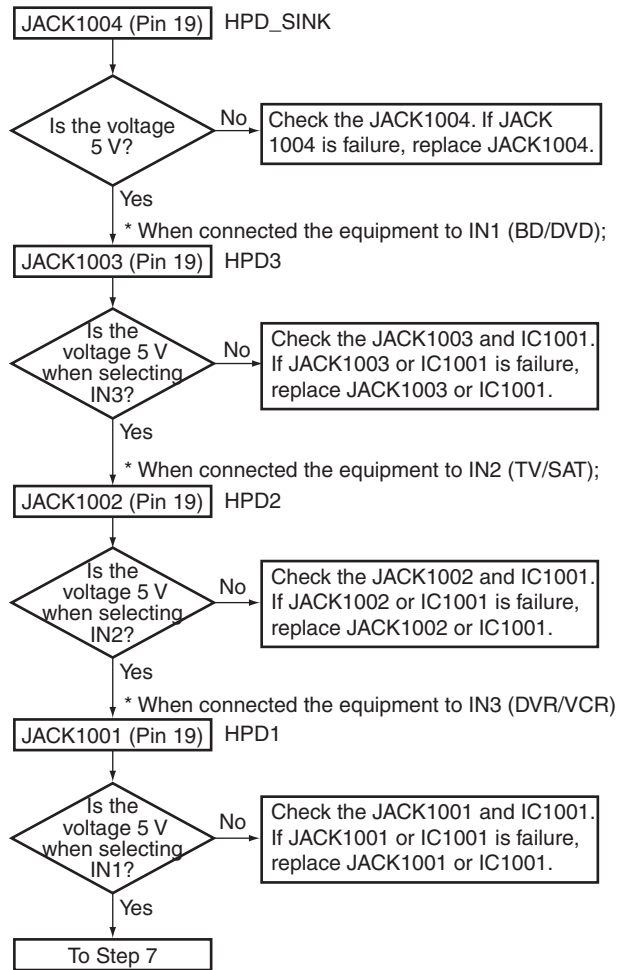

A Step 7: SDA /SCL



B

C


D

E


F

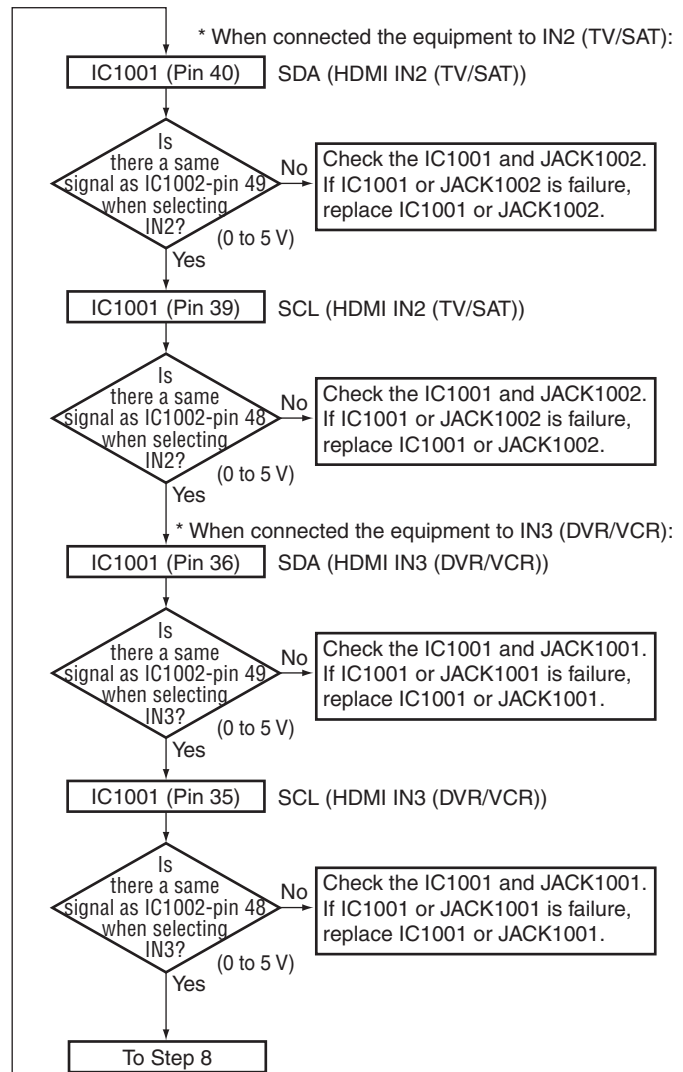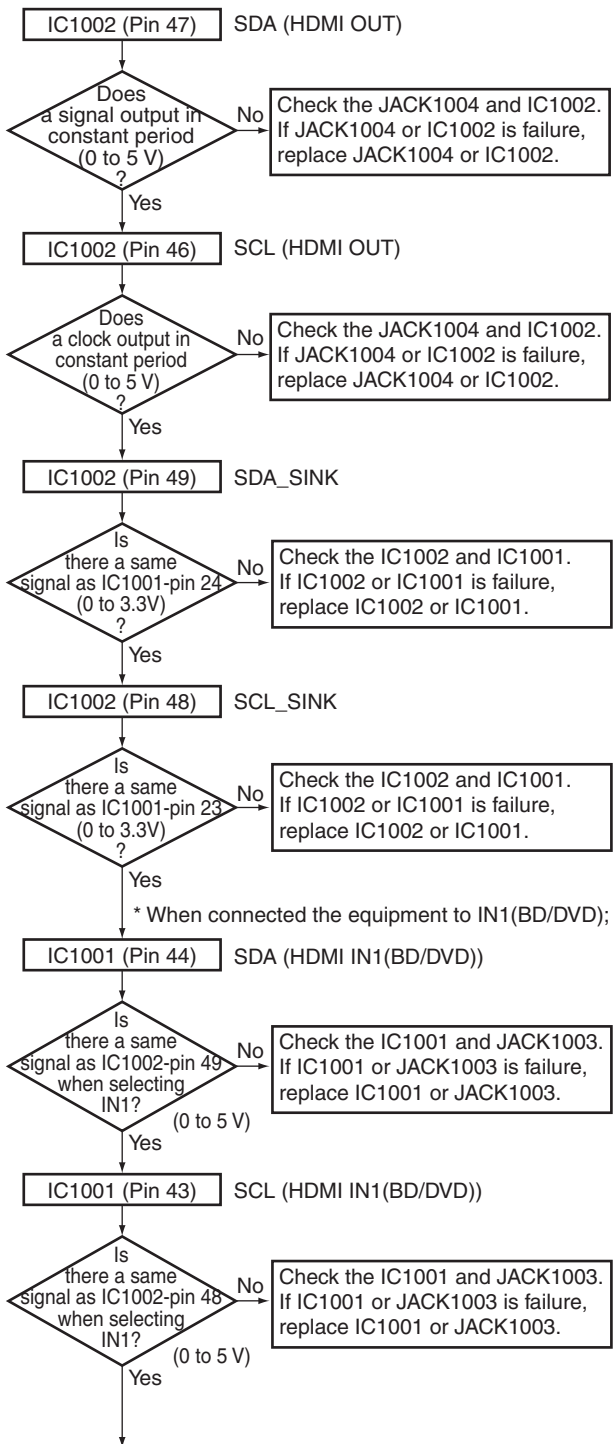


Step 8: TMDS

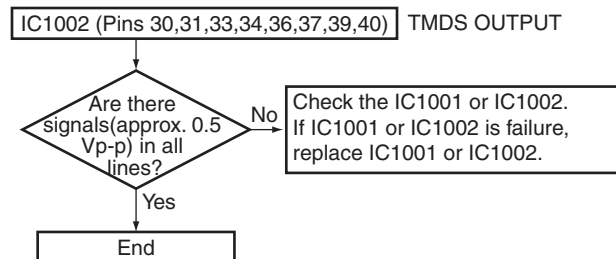


[1] DC Protection Circuit Diagram

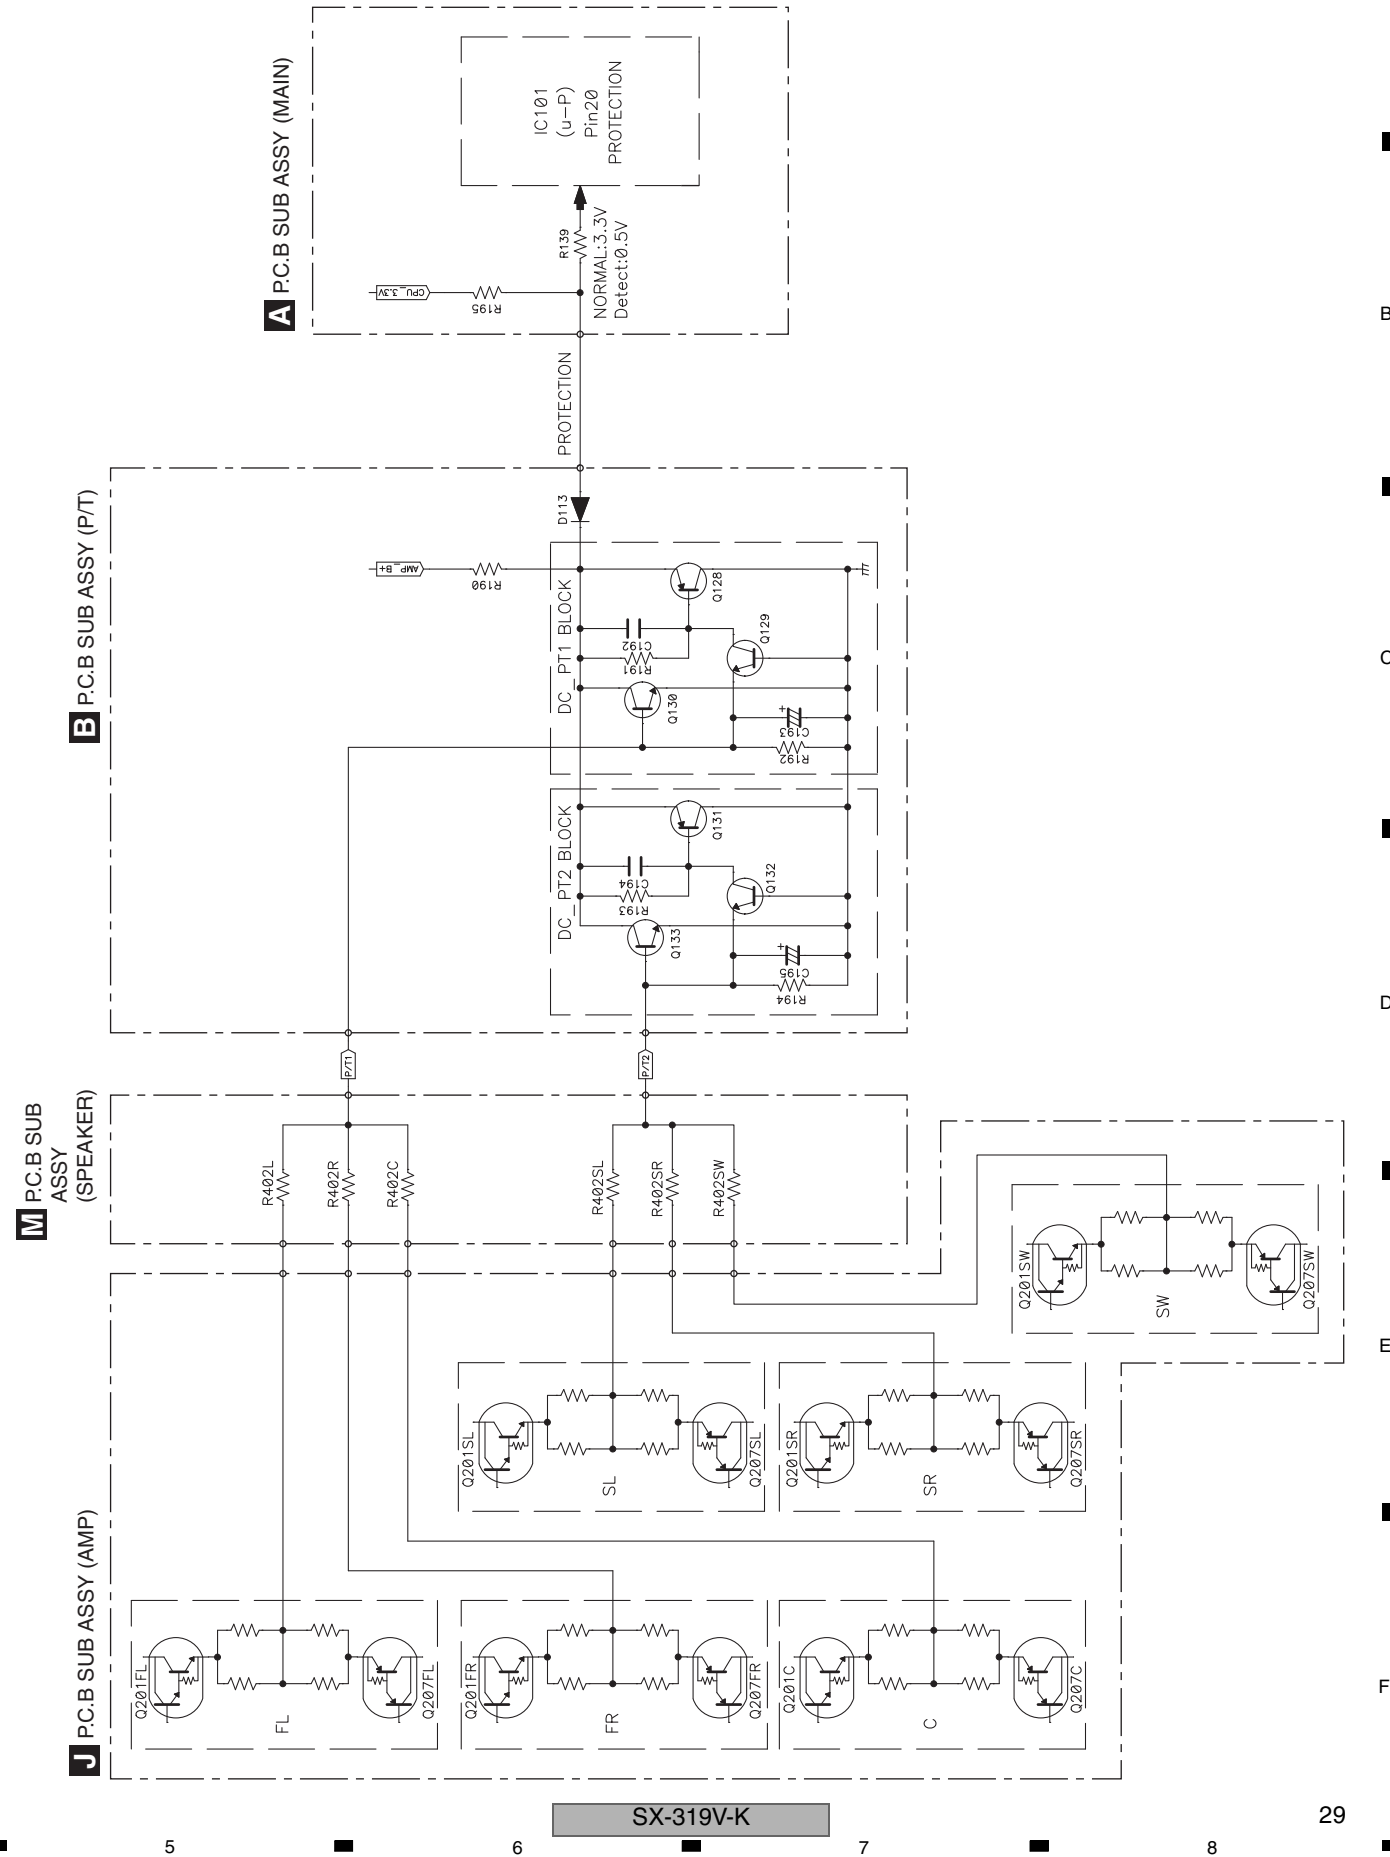

[2] Overload Protection Circuit Diagram

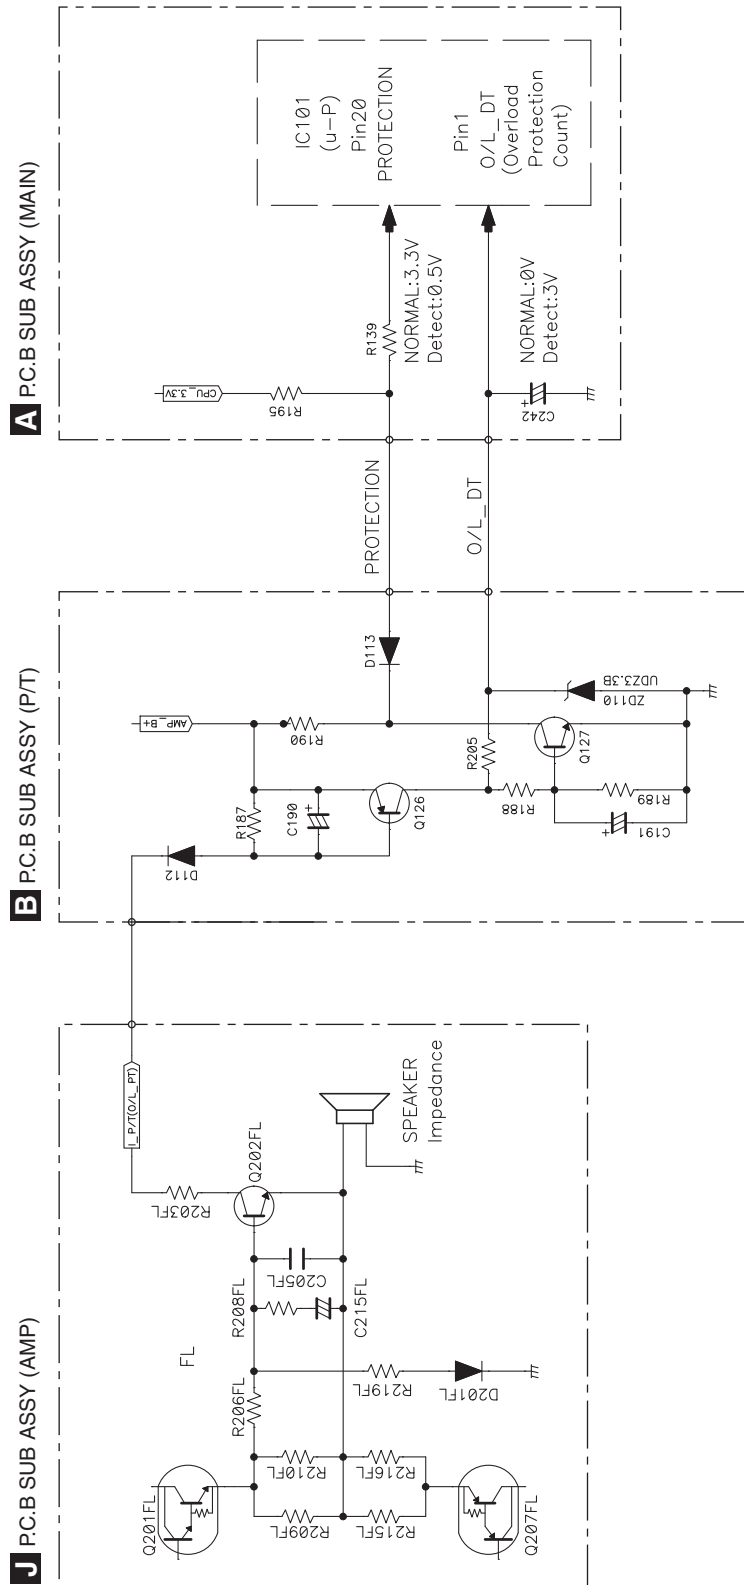

[3] Power DC Protection Circuit Diagram

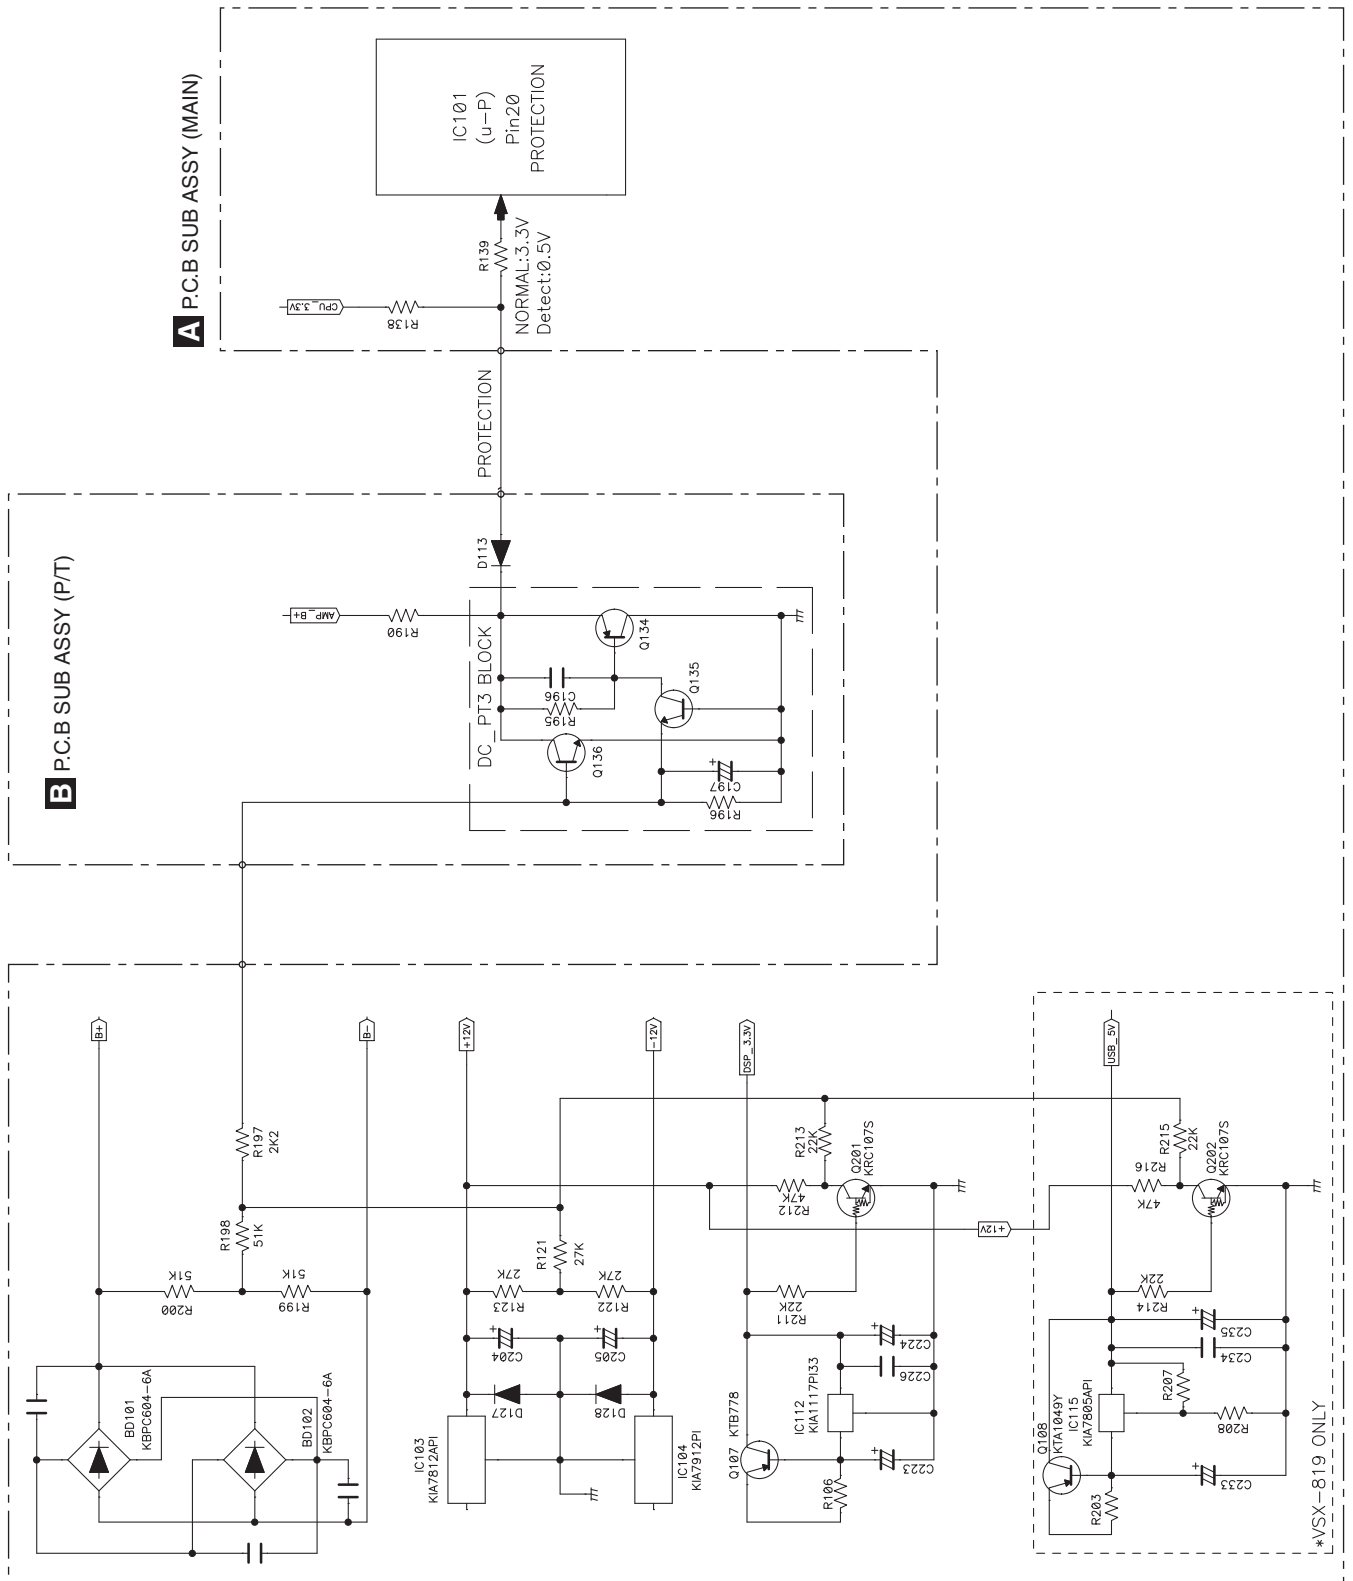

[2] Reset mode for numbers of protection detections

 
 
[Purpose]

For clearing all the counts of protection detections.
(This mode resets the counts of protection detections.)

[How to enter/exit]

During Standby mode, simultaneously press and hold the [STANDARD SURROUND] and [STANDBY/ON] keys for 10 seconds to enter this mode.
The display will return to the normal indication when no key operation is performed for 5 seconds.

[Basic operations]

Key Operation	FL Display	Time (sec.)	Description of Indications
(STANDBY state)			
[STANDARD SURROUND] + [STANDBY/ON] (press and hold the keys for 10 seconds.)		5 (-> normal) *1	
[ENTER key] ↓		5 (-> normal) *1	
(Counter Clear end)			
(Normal display)	 *2	usually	

*1 "5 (-> normal)" denotes that the display will return to the normal indication when no key operation is performed for 5 seconds.

*2 Indication when the BD/DVD function is selected

[Detailed explanations]

- When the procedures for Reset mode for numbers of protection detections are completed, all the counters will be reset to "000."
- Prohibitions:
The protection detection counts cannot be cleared (reset to 000) with the MEMORY CLEAR process.
They can only be cleared when the procedures of Reset mode are completed.

[3] The unit's operation when a error is detected

[Purpose]

- The unit's operation when a DC/OVER/TEMP error is detected is described here.
- How to cancel the status after detection of a DC error is described here, because no key input will be accepted after a DC error detection.

[Basic operations]

3.1 DC (AMP is abnormality) error detection

Key Operation	FL Display	Time (sec.)	Description of Indications
(Normal display)	BD / DVD ☐	usually	Normal display
(DC detection)	BD / DVD ☐		
↓ (Auto) (RECEIVER POWER OFF) *1, *2	☐ ☐		

3.2 OVERLOAD (overcurrent) error detection

Key Operation	FL Display	Time (sec.)	Description of Indications
(Normal display)	BD / DVD ☐	usually	Normal display
(OVERLOAD detection)	BD / DVD ☐		
↓ (Auto) (RECEIVER POWER OFF) *1	☐ ☐		

3.3 TEMP (AMP overheat) error detection

Key Operation	FL Display	Time (sec.)	Description of Indications
(Normal display)	BD / DVD ☐	usually	Normal display
(TEMP detection)	BD / DVD ☐		
↓ (Auto) (RECEIVER POWER OFF) *1	☐ ☐		

*1 The time required for the unit to be shut off after an error is detected depends on the circuit configuration.

*2 If the unit is automatically shut off after a DC error is detected, no key input will be accepted afterward.

(The power will not be turned ON.)

To turn it on again, see "3.4 How to cancel the status after detection of a DC error" below.

A key input will not be inhibited after an OVERLOAD/TEMP error is detected. (The unit can be turned ON.)

3.4 How to cancel the status after detection of the DC error

Key Operation	FL Display	Time (sec.)	Description of Indications
(STANDBY state) [ADVANCED SURROUND] + [STANDBY/ON] (press and hold the keys for 2 seconds.) ↓ (Normal display)	☐ ☐ BD / DVD ☐	usually	Normal display

[Detailed explanations]

Simultaneously holding the [ADVANCED SURROUND] and [STANDBY/ON] keys on the front panel pressed for 2 seconds will cancel Key Input Inhibition mode after a DC error detection and turn the unit ON.

7. DISASSEMBLY

7.1 DISASSEMBLY

Note 1: Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

Note 2: For performing the diagnosis shown below, the following jigs for service is required:


- 10P board to board extension jig cable (GGD1628)
- 8P board to board extension jig cable (GGD1629)
- Board to board extension jig cable (GGD1630)

1. Discharging

[1] P.C.B SUB ASSY (MAIN) Capacitor (C179, C180)

[Procedures]


- (1) Unplug the power cord.
- (2) Disconnect the 8P CONNECTOR wire that connects the CN202 of the P.C.B SUB Assy (AMP) and CP107 of the P.C.B SUB Assy (MAIN) from the CP107.
- (3) Connect CP107 B+ (Pins 5 and 6) and B- (Pins 7 and 8, respectively) terminals, using resistor leads with 47-100 ohms (2 W or higher), for discharging.
*Discharging time: 30-60 seconds, depending on the level of resistance.
- (4) Check that the voltage between the B+ and GND terminals, as well as that between the B- and GND terminals, is less than 1 V, using a tester.
*Be sure to connect the GND terminal of the tester to the chassis.
*If the voltage is still 1 V or higher, repeat Step (3).

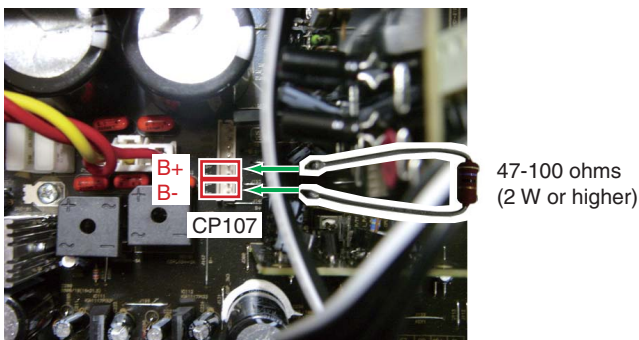

[2] FL-30 V Capacitor

[Procedures]

- (1) Unplug the power cord.
- (2) Connect CP704 -30 V (Pins 1 and 2) of the P.C.B SUB Assy (FRONT) and GND (Pins 3 and 4, respectively), using resistor leads with 47-100 ohms (2 W or higher), for discharging.
*Discharging time: 5-10 seconds, depending on the level of resistance.
- (3) Check that the voltage between the -30 V and GND terminals is less than 1 V, using a tester.
*Be sure to connect the GND terminal of the tester to the chassis.
*If the voltage is still 1 V or higher, repeat Step (2).

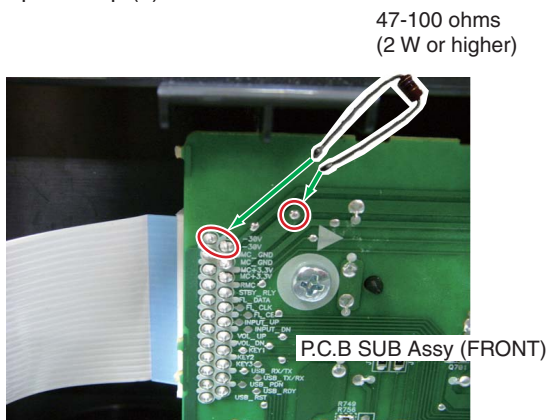


2. Notes on Ground Points Connection

[Note 1]

When reassembling after disassembling the product for repair, before connecting the power cord, make sure that the 2P wire from the CN206 of the P.C.B SUB Assy (DSP) is connected to the CP803 of the P.C.B TOTAL Assy (INPUT).


If the power is turned ON without the above connection, the CODEC IC (IC109: AK4588) of the P.C.B SUB Assy (DSP) may be damaged.

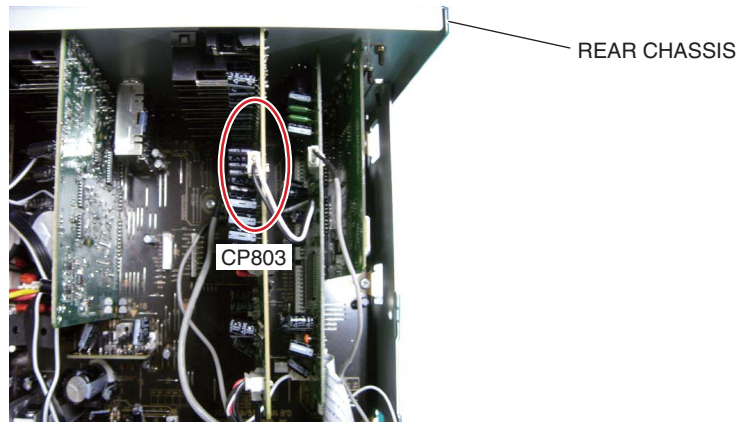

[Note 2]

During repair, before checking the P.C.B SUB Assy (MAIN), etc., with the rear chassis removed, be sure to connect the GND terminal of the main capacitor to the rear chassis (TUNER PACK CHASSIS), as shown below, then connect the power cord.

Without grounding connection, the protection circuit will be activated.
After repairing, be sure to remove the ground wire before reassembling.

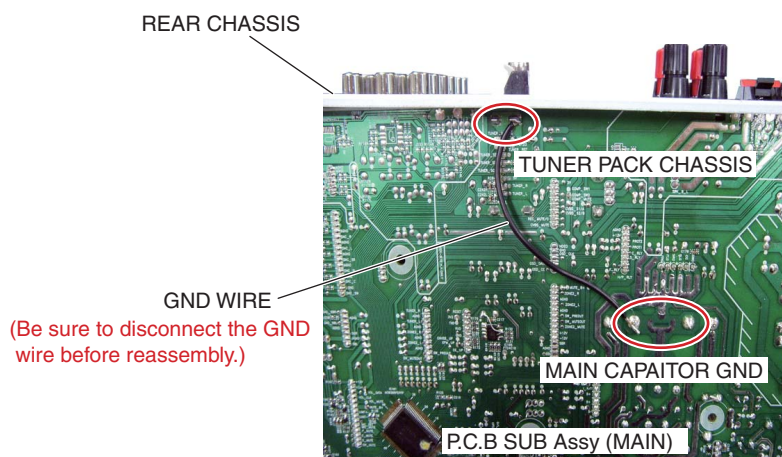


3. Diagnosis of PCB's



[1] Front Panel Section

Remove the bonnet by removing the 10 screws.


1. Remove the six screws. (BBZ30P080FTB)

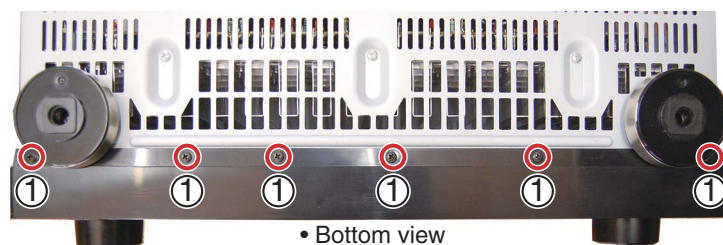


2. Remove the two screws. (BBZ30P080FTC)

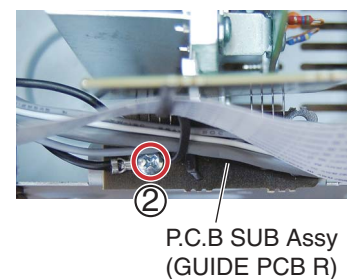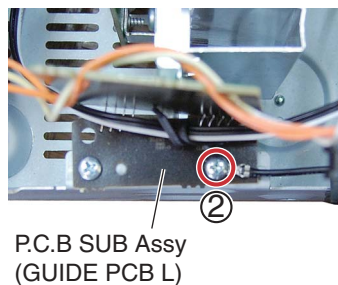

3. Remove the two screws.
4. Unhook the two hooks.
5. Arrange the front panel section as shown in the photo below.

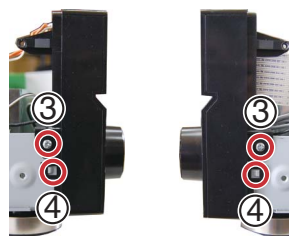

Front panel section

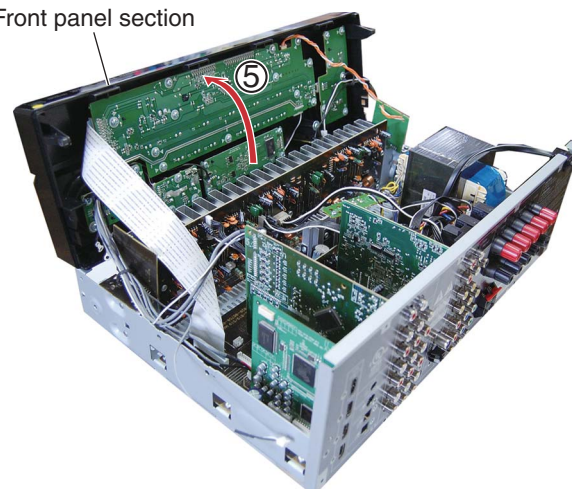


A [2] Heat sink Section


Caution: Heat sink section in work becomes hot, and be careful with it.

Remove the bonnet by removing the 10 screws.


1. Remove the seven screws. (BBZ30P080FTC)

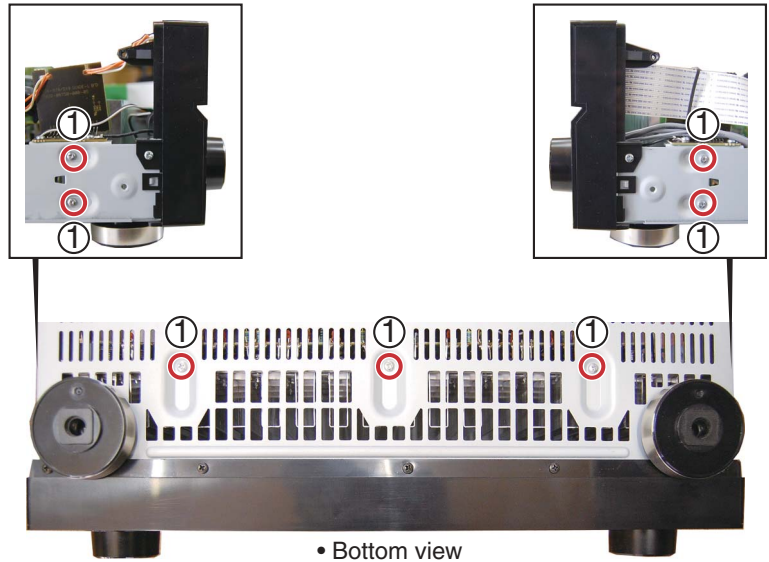


2. Remove the four screws. (BBZ30P080FTC)

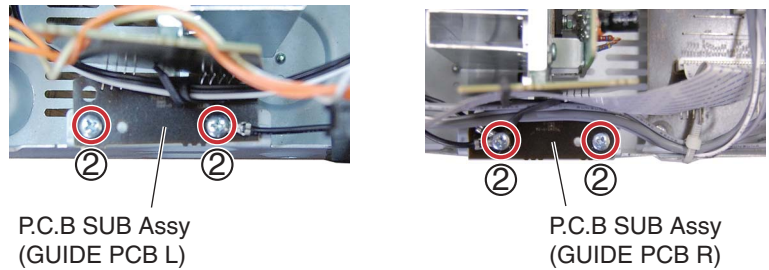

3. Disconnect the two connectors.



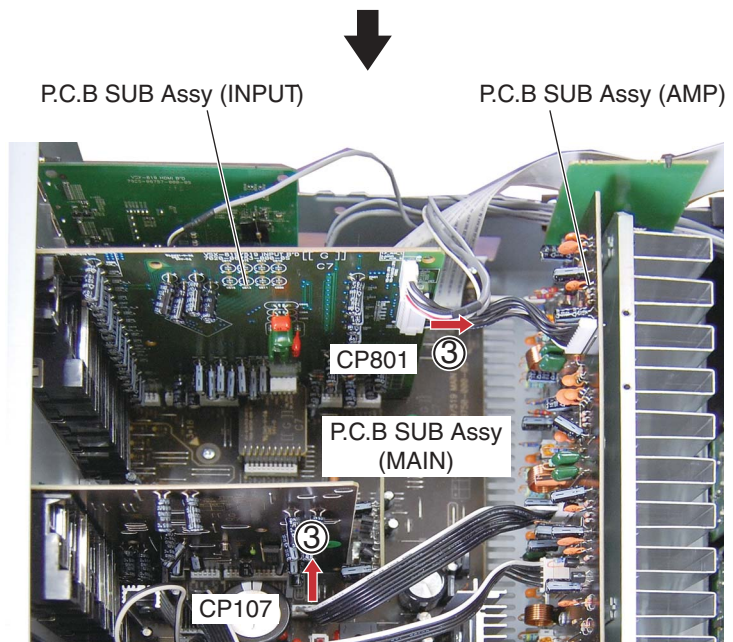


4. Connect the two extension jig cables.
5. Rotate the heat sink section in the direction of the arrow.

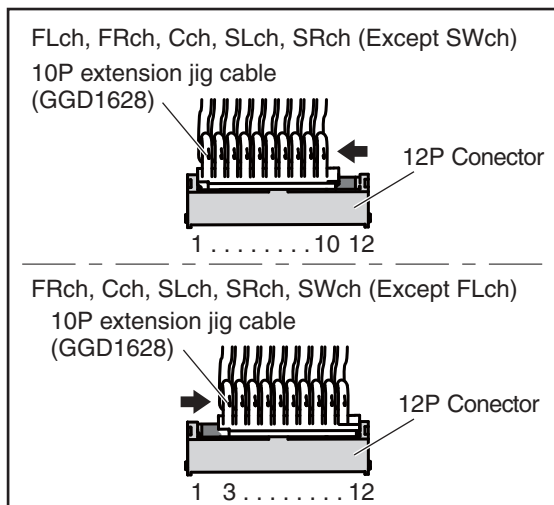

Note:

The Power transistor and heat sink on the P.C.B SUB Assy (MAIN) come closer.
Make sure that they will not come into contact.

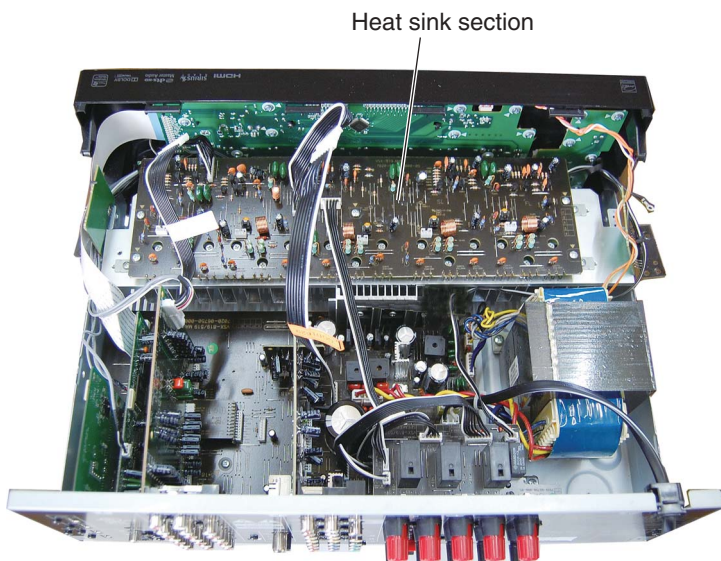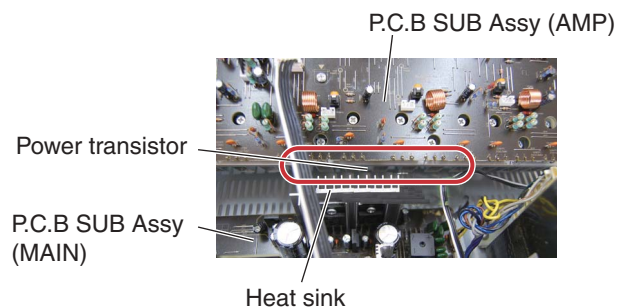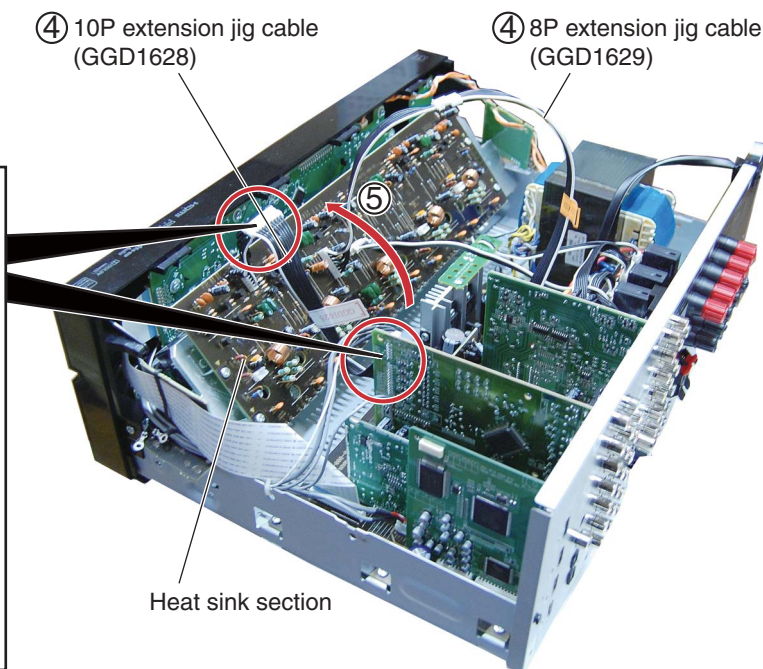


[3] P.C.B SUB Assy (MAIN)

Remove the bonnet by removing the 10 screws.

1. Remove the five screws. (BBT30P100FTB)


• Rear view

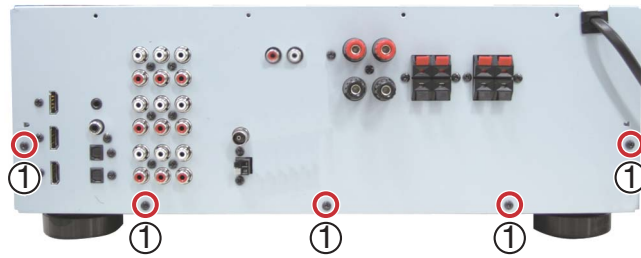

2. Remove the three screws. (BBZ30P080FTC)

3. Remove the six screws. (BBZ30P180FTC)


P.C.B SUB Assy (MAIN)

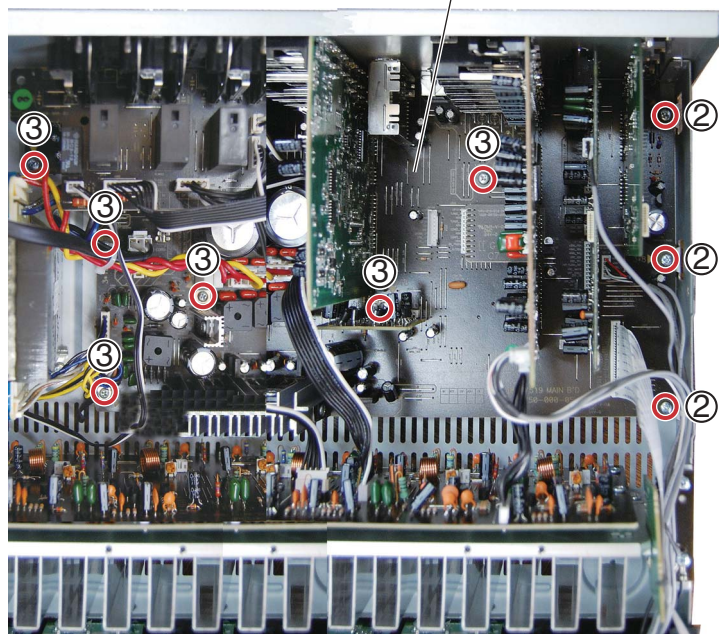

4. Arrange the unit as shown in the photo below.

5. Connect the chassis ground.

See "2. Notes on Ground Points Connection".

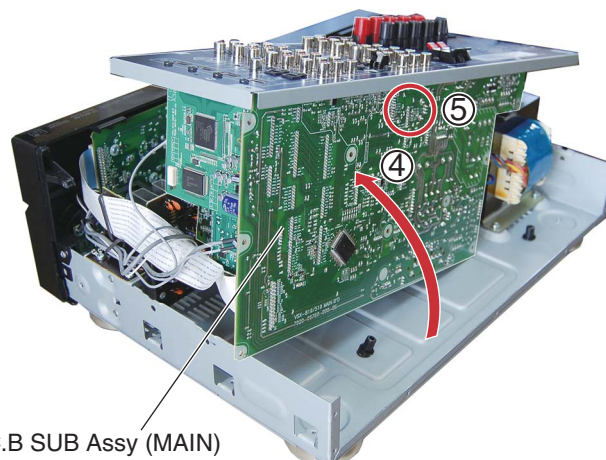


P.C.B SUB Assy (MAIN)


[4] P.C.B SUB Assy (DSP)

Remove the bonnet by removing the 10 screws.

1. Remove the three screws. (B020930083B10-IL)
2. Remove the 12 screws. (BBT30P100FTB)
3. Remove the five screws. (BBT30P100FTB)

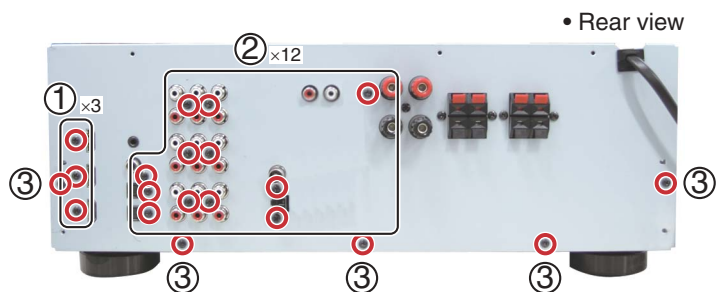

5. Remove the rear chassis.
6. Remove the P.C.B SUB Assy (DSP).

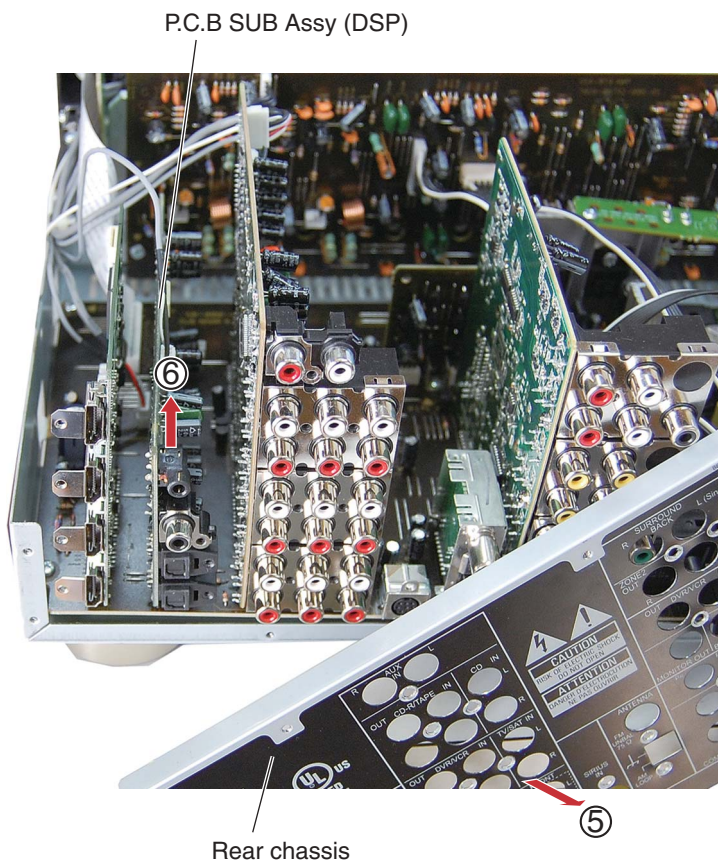


- A 7. Disconnect the two connectors.

Note:

When reassembling after disassembling the product for repair, before connecting the power cord, make sure that the 2P wire from the CN206 of the P.C.B SUB Assy (DSP) is connected to the CP803 of the P.C.B TOTAL Assy (INPUT).

See “2. Notes on Ground Points Connection”.

B

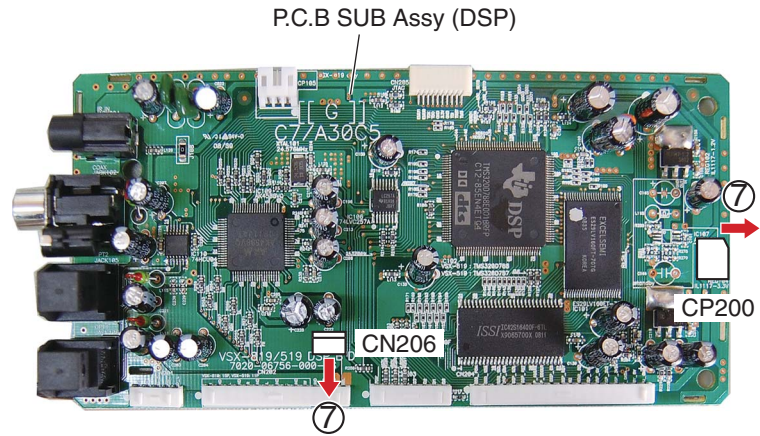


C



8. Reassembling the rear chassis.
9. Connect the board to board extension jig cable.

D

Connect an alligator clip to the chassis.

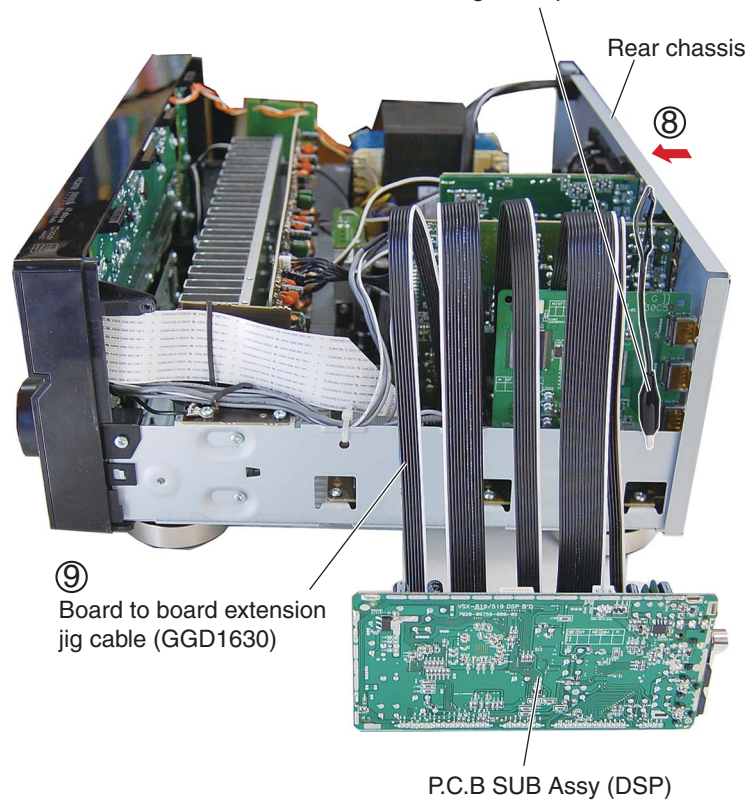

E

F

5678

8. EACH SETTING AND ADJUSTMENT

8.1 IDLE CURRENT ADJUSTMENT


 1. Idle Current Adjustment

Measurement Points	Adjustment Points	Procedure
TP201FL 3PIN : TEST POINT(+) TP201FL 1PIN : TEST POINT(-)	VR201FL	① Turn on the power. ② Perform aging for one minute. ③ Connect a digital voltmeter to the measurement point. ④ Turn the adjustment VR so that the voltage becomes in $2.0\text{ mV} \pm 0.2\text{ mV}$. (Condition : No signal and no load)
TP201FR 3PIN : TEST POINT(+) TP201FR 1PIN : TEST POINT(-)	VR201FR	
TP201C 3PIN : TEST POINT(+) TP201C 1PIN : TEST POINT(-)	VR201C	
TP201SL 3PIN : TEST POINT(+) TP201SL 1PIN : TEST POINT(-)	VR201SL	
TP201SR 3PIN : TEST POINT(+) TP201SR 1PIN : TEST POINT(-)	VR201SR	
TP201SW 3PIN : TEST POINT(+) TP201SW 1PIN : TEST POINT(-)	VR201SW	

• Adjustment Point and Measurement Points.... see fig1.

J P.C.B SUB ASSY (AMP)

SIDE A

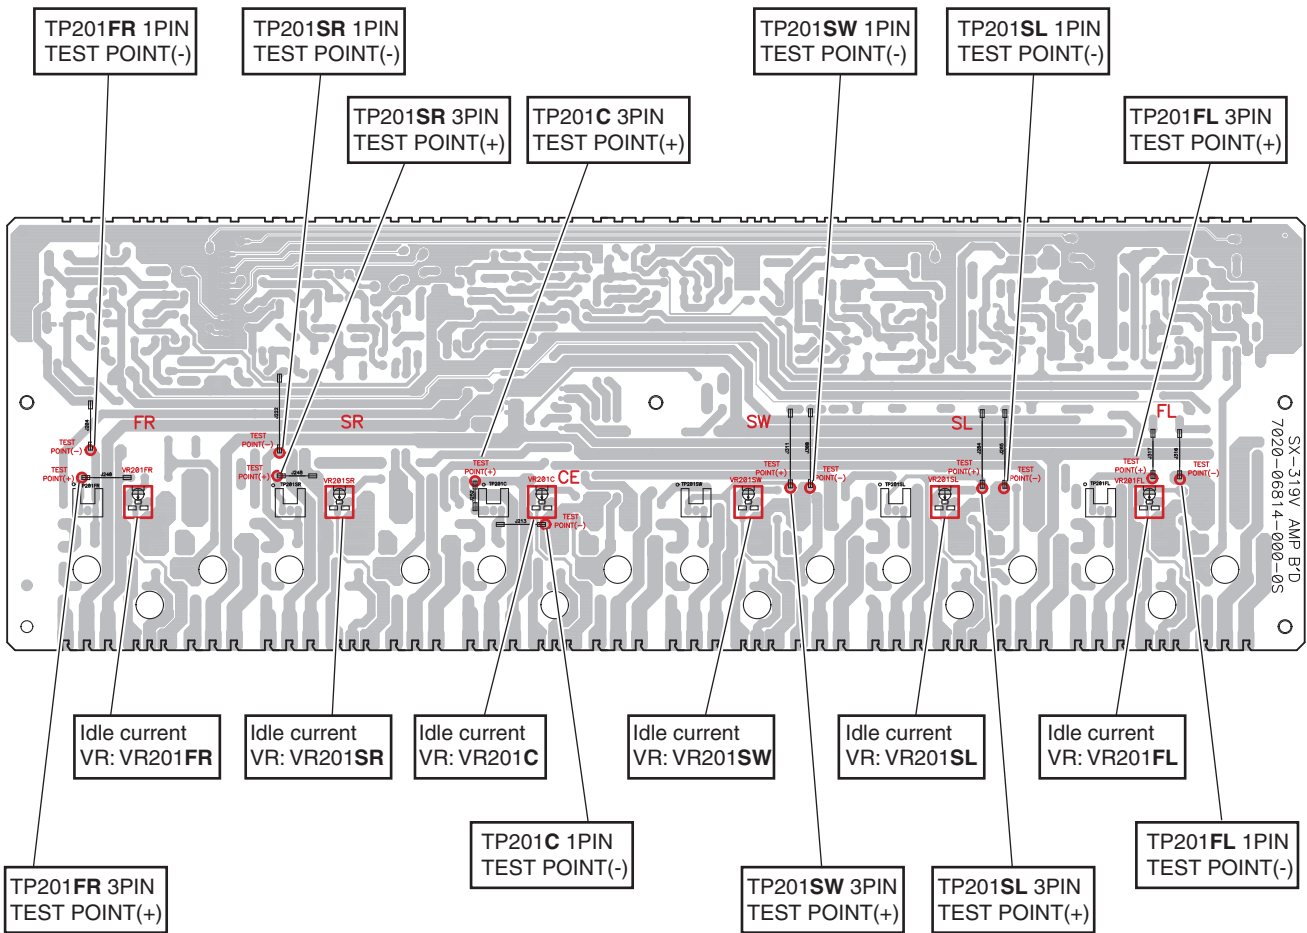

[fig 1.]

△

A

- (In the case of no amount instructions, apply as you think it appropriate.)

B



C



2/2

F

1 2 3 4

9.2 EXTERIOR SECTION

A



B

C

D

E

F

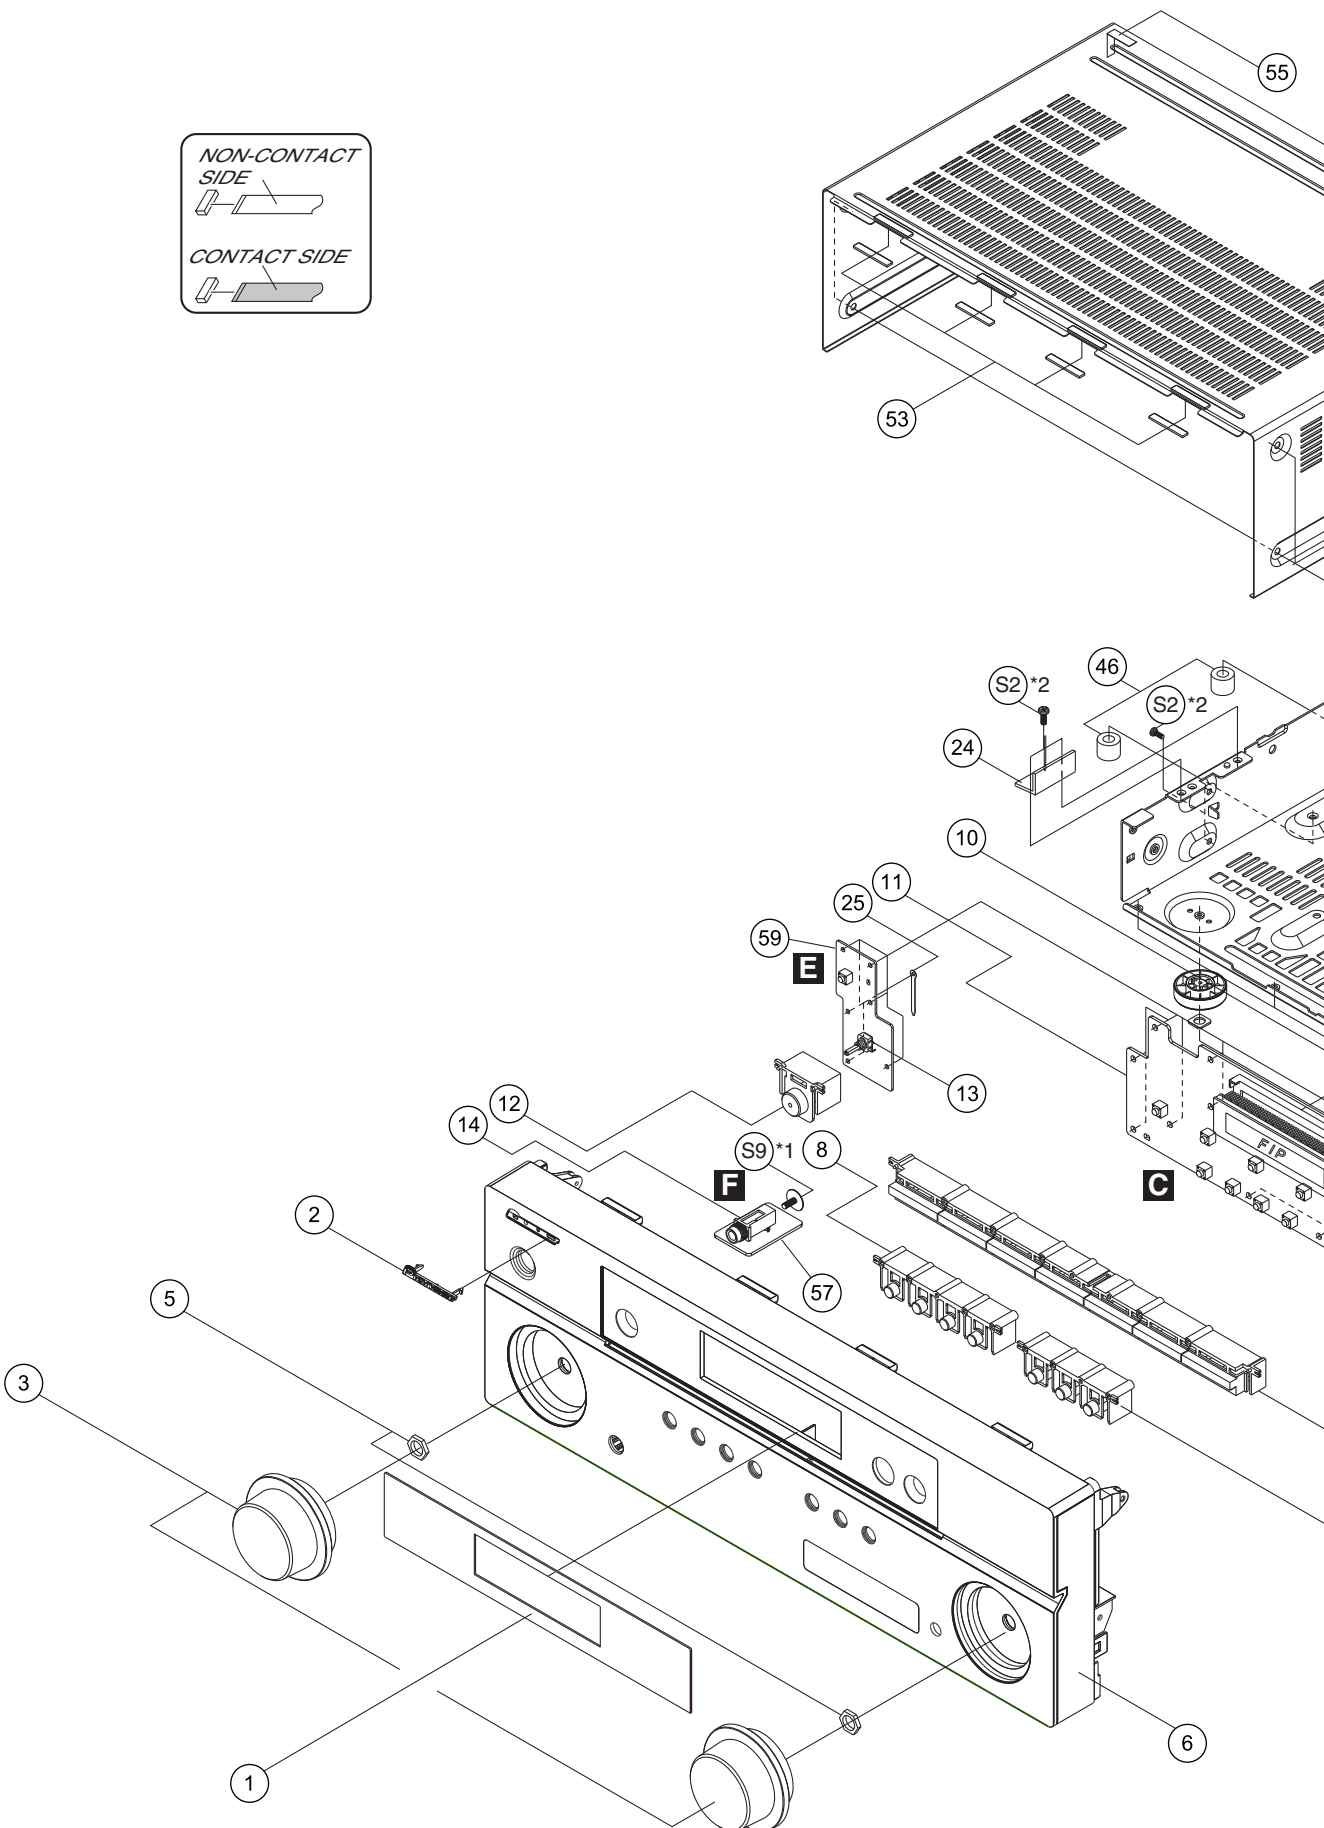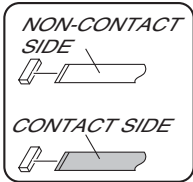



EXTERIOR SECTION PARTS LIST

	Mark No.	Description	Part No.		Mark No.	Description	Part No.
A	1	Window	5077212673010-IL	NSP	50	Cord Assy	L068125101710-IL
	2	Pioneer Badge B	XAM3006		51	Bracket	
	3	Knob	5080211931100-IL		52	Label Trans	5507000003270-IL
	4	Cushion	4050211745000-IL		53	Sheet	1210210235000-IL
	5	Nut			54	Cushion	4050211365000-IL
	6	Panel	3067214161010-IL		55	Cushion	4050211385000-IL
	7	Button	5090213751100-IL		56	Sheet	1210210772000-IL
	8	Button	5090213761100-IL		57	P.C.B SUB ASSY (HEADPHONE)	7028067512030-IL
	9	Button	5097213771100-IL		58	P.C.B SUB ASSY (VOLUME)	7028067513030-IL
	10	Holder	432004078301A-IL		59	P.C.B SUB ASSY (FUNCTION)	7028067514030-IL
B	11	P.C.B SUB ASSY (FRONT)	7028067511030-IL	NSP	60	P.C.B SUB ASSY (PORTABLE)	7028067518030-IL
	12	Button	5090213741100-IL		61	P.C.B SUB ASSY (INPUT)	7028067531040-IL
	13	SW,Encoder (S701)	G121123050020-IL		62	P.C.B SUB ASSY (VIDEO)	7028067551030-IL
	14	Jack,D6.5 (JA701)	G402PJ619AG0Y-IL		63	P.C.B SUB ASSY (DSP)	7028067561040-IL
	15	Jack,D3.5 (JA703)	G401PJ354H70Y-IL		64	P.C.B SUB ASSY (SPEAKER)	7028068151010-IL
	16	SW,Encoder (S702)	G121123040010-IL		65	Transistor (Q2071-Q2076)	J5011560Y0000-IL
	17	Chassis	3200212676000-IL		66	SEMI,TR/GE NPN 2SC (Q2051-Q2056)	J502396400010-IL
	18	Cushion	4050211605000-IL		67	Transistor (Q2011-Q2016)	J5032390Y0000-IL
	19	Foot	4000210391000-IL		68	Cable,Flat Card 1.25	N712192533810-IL
	20	Heat Sink	2120211378100-IL		69	P.C.B SUB ASSY (REG)	7028067562010-IL
C	21	Bracket	4010056906010-IL	NSP	S1	Screw	BBT40P080FTB
	22	P.C.B SUB ASSY (AMP)	7028068141010-IL		S2	Screw	BBZ30P080FTC
	23	P.C.B SUB ASSY (GUIDE-R)	70280675030C0-IL		S3	Screw	BBT30P100FTB
	24	P.C.B SUB ASSY (GUIDE-L)	70280675020C0-IL		S4	Screw,Tap Tite	B020930083B10-IL
	25	Clamp			S5	Screw	B028940101B10-IL
	26	Spacer			S6	Screw	BBZ30P180FTC
	27	P.C.B SUB ASSY (MAIN)	70280675010C0-IL		S7	Screw Tapping Assy	B018230141H11-IL
	28	Heat Sink	2120210958050-IL		S8	Screw	BBZ30P080FTB
	29	Heat Sink	2120000818020-IL		S9	Screw	1500001456010-IL
	30	Tuner (JA101)	E903004100020-IL	NSP	51	Bracket	
D	31	P.C.B SUB ASSY (HDMI)	7028067581040-IL		52	Label Trans	5507000003270-IL
	32	Optical Receiver (JA105, JA106)	E100116500040-IL		53	Sheet	1210210235000-IL
	33	TER,RCA 1Pin (JA102)	G600107A0000Y-IL		54	Cushion	4050211365000-IL
	34	Jack,D3.5 (JA804)	G40130802000Y-IL		55	Cushion	4050211385000-IL
	35	TER,RCA 6Pin (JA802-JA804)	G603610A02000-IL		56	Sheet	1210210772000-IL
	36				57	P.C.B SUB ASSY (HEADPHONE)	7028067512030-IL
	37				58	P.C.B SUB ASSY (VOLUME)	7028067513030-IL
	38	TER,RCA 2Pin (JA1001)	G608610D0801Y-IL		59	P.C.B SUB ASSY (FUNCTION)	7028067514030-IL
	39	TER,Board Screw 4P (JA401)	G612405E0200Y-IL		60	P.C.B SUB ASSY (PORTABLE)	7028067518030-IL
	40	TER,Board Push 4P (JA402)	G594408SA030Y-IL		61	P.C.B SUB ASSY (INPUT)	7028067531040-IL
E	41	TER,Board Push 4P (JA403)	G594408SA030Y-IL		62	P.C.B SUB ASSY (VIDEO)	7028067551030-IL
	42	Power Trans	8200960610470-IL		63	P.C.B SUB ASSY (DSP)	7028067561040-IL
	43	Chassis	3207212706000-IL		64	P.C.B SUB ASSY (SPEAKER)	7028068151010-IL
	44	Stopper	4380040162010-IL		65	Transistor (Q2071-Q2076)	J5011560Y0000-IL
	45	Cabinet	3007211276010-IL		66	SEMI,TR/GE NPN 2SC (Q2051-Q2056)	J502396400010-IL
	46	Cushion	4050211205000-IL		67	Transistor (Q2011-Q2016)	J5032390Y0000-IL
	47	P.C.B SUB ASSY (H/P GUIDE)	70280675060C0-IL		68	Cable,Flat Card 1.25	N712192533810-IL
	48	P.C.B SUB ASSY (P/T)	70280675050C0-IL		69	P.C.B SUB ASSY (REG)	7028067562010-IL
	49	P.C.B SUB ASSY (CNT)	70280675040C0-IL		S1	Screw	BBT40P080FTB
					S2	Screw	BBZ30P080FTC

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

■

7

■

8

■

SX-319V-K

- A



E

C


D

E



F

A

51

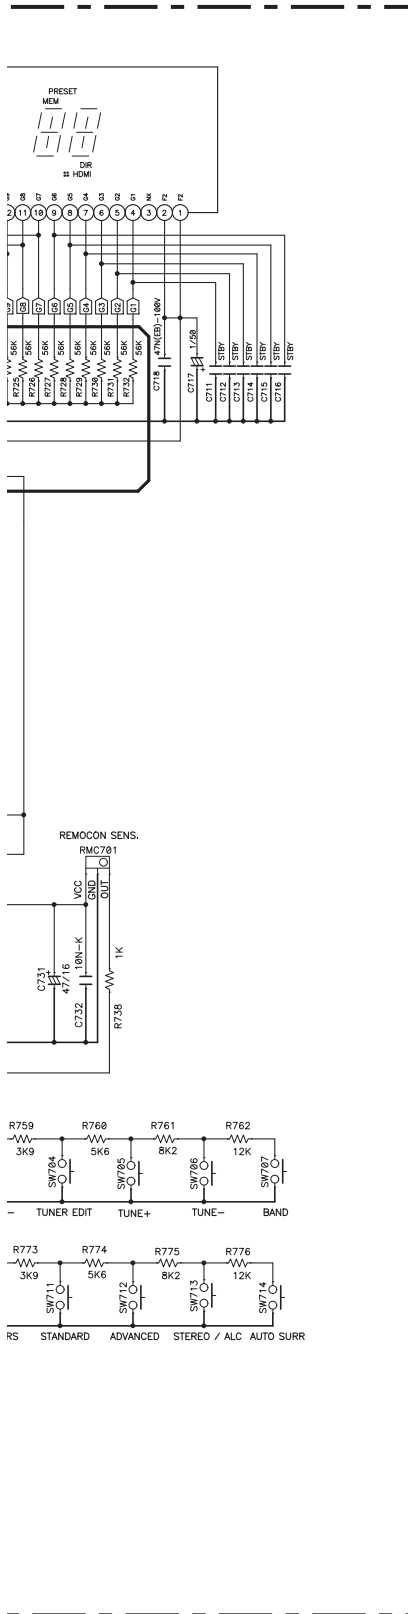

F P.C.B SUB ASSY
(HEADPHONE)
(7028067512030-IL)

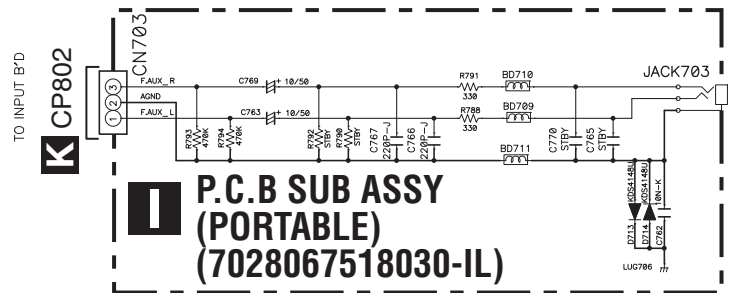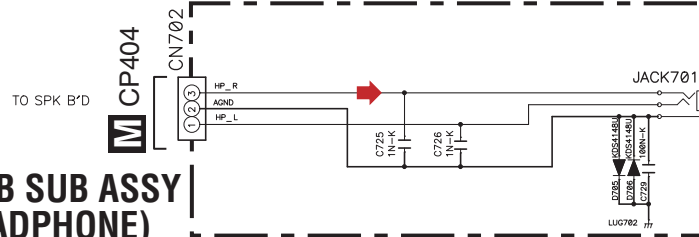


Video Signal Route
Audio Signal Route (L ch)


10.3 P.C.B SUB ASSY (AMP)

J P.C.B SUB ASSY (AMP) (7028068141010-IL)

- (FL) : Audio Signal Route (Front L ch)
- (SL) : Audio Signal Route (Surround L ch)
- (C) : Audio Signal Route (Center ch)
- (SW) : Audio Signal Route (Subwoofer ch)

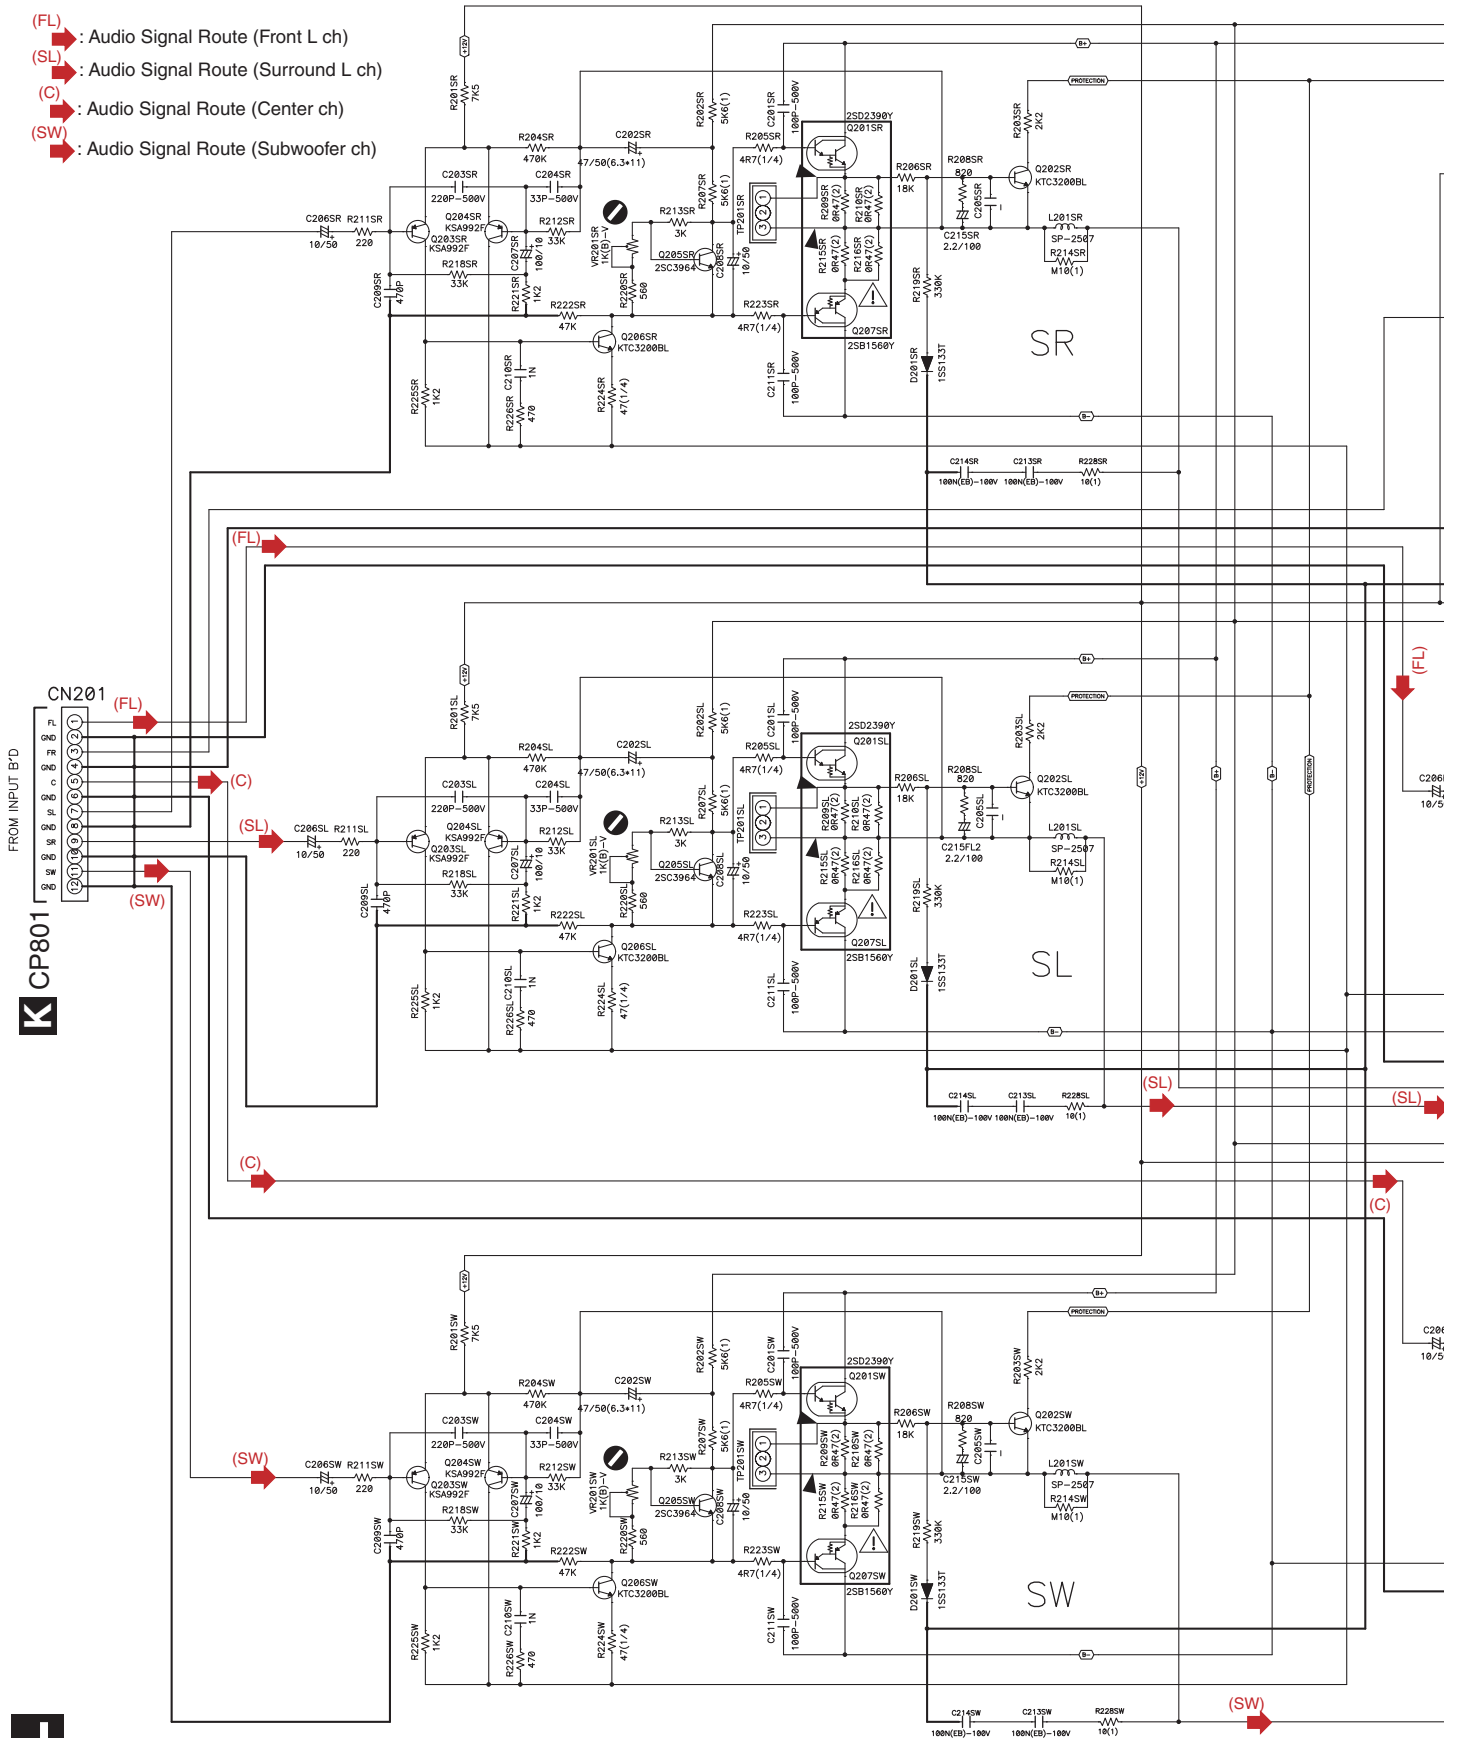


The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore when replacing be sure to use parts of identical designation

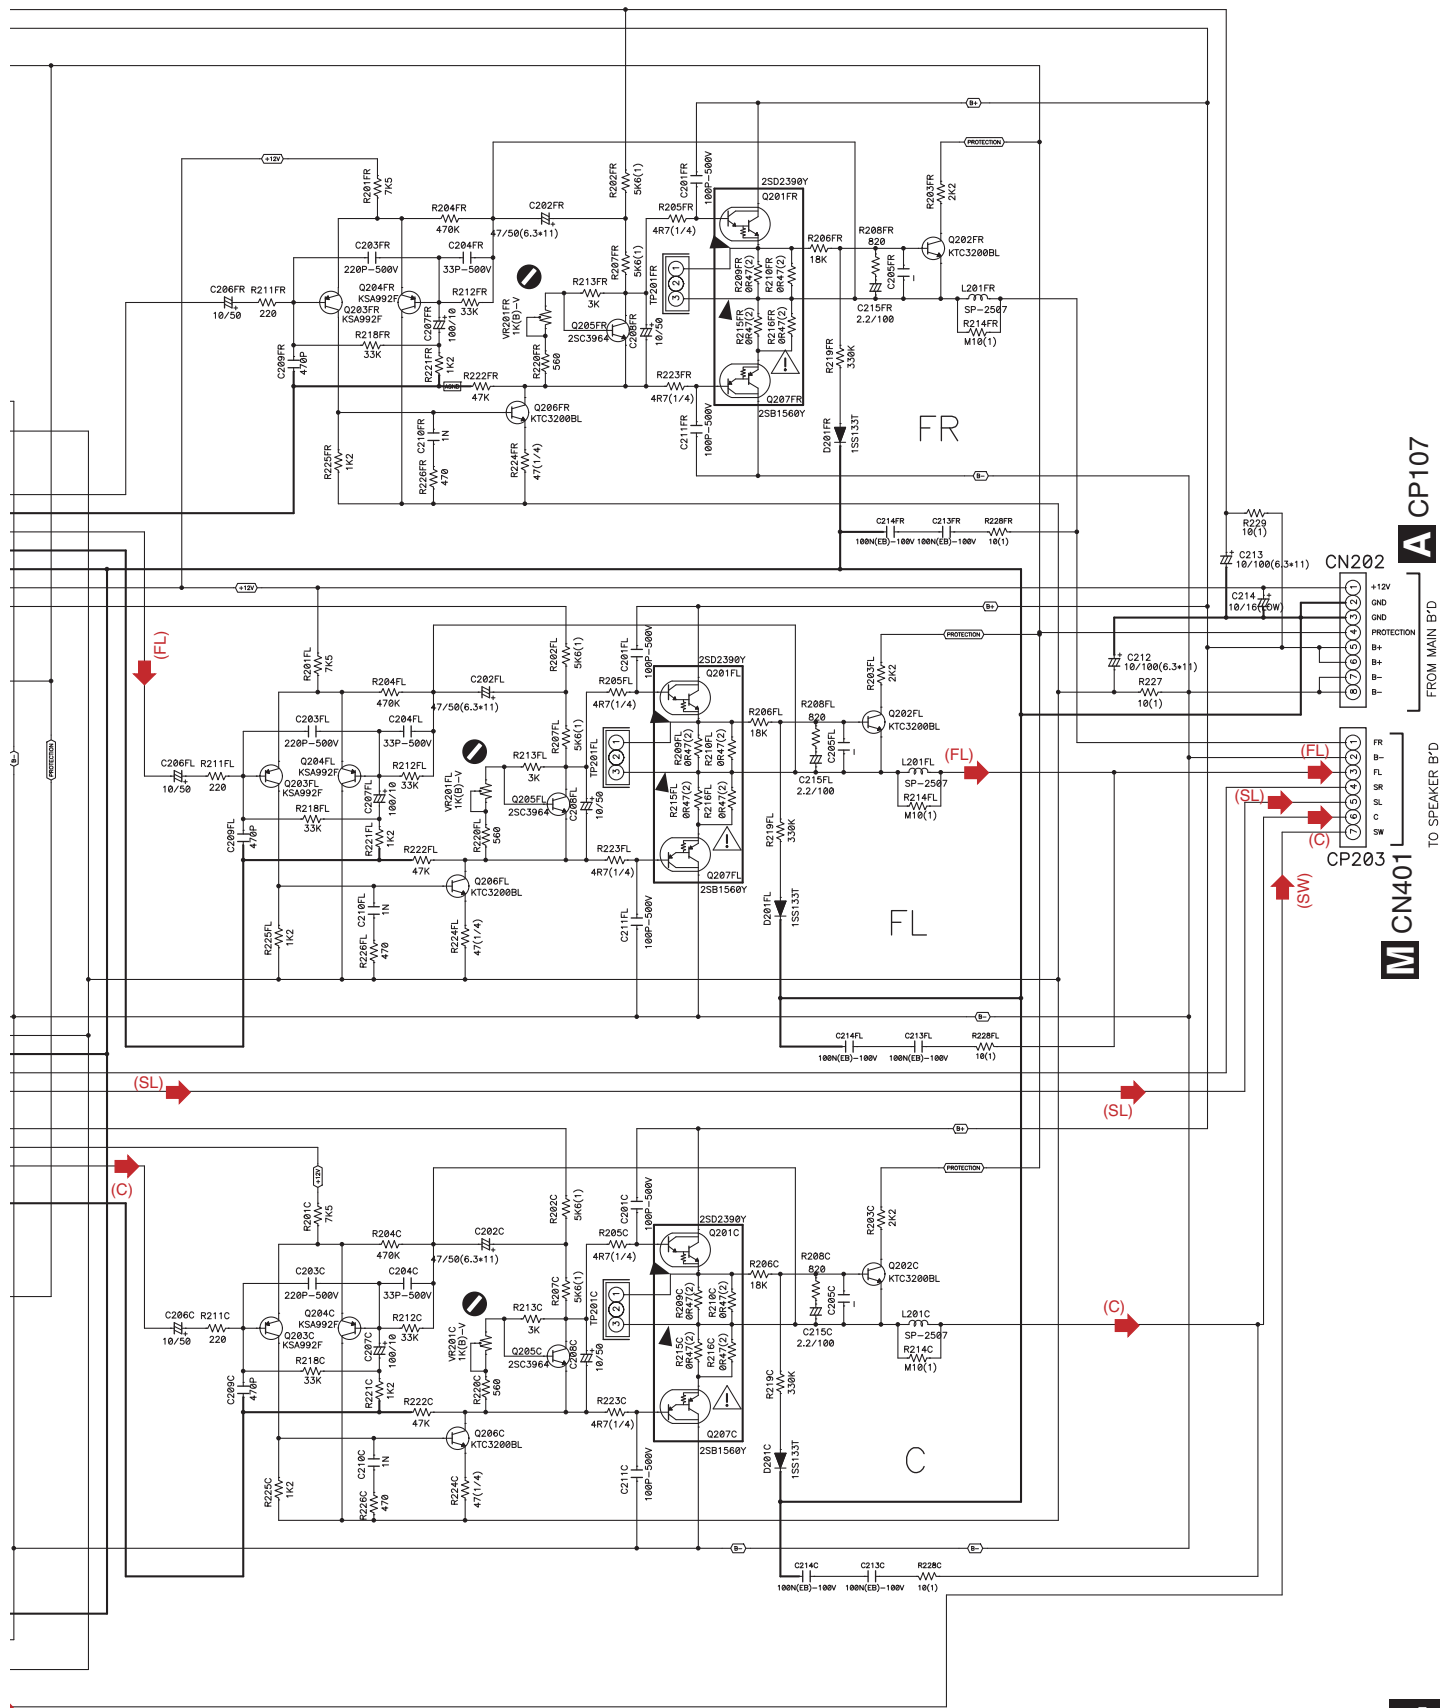

10.4 P.C.B SUB ASSY (INPUT)

P.C.B SUB ASSY (INPUT) (7028067531040-IL)

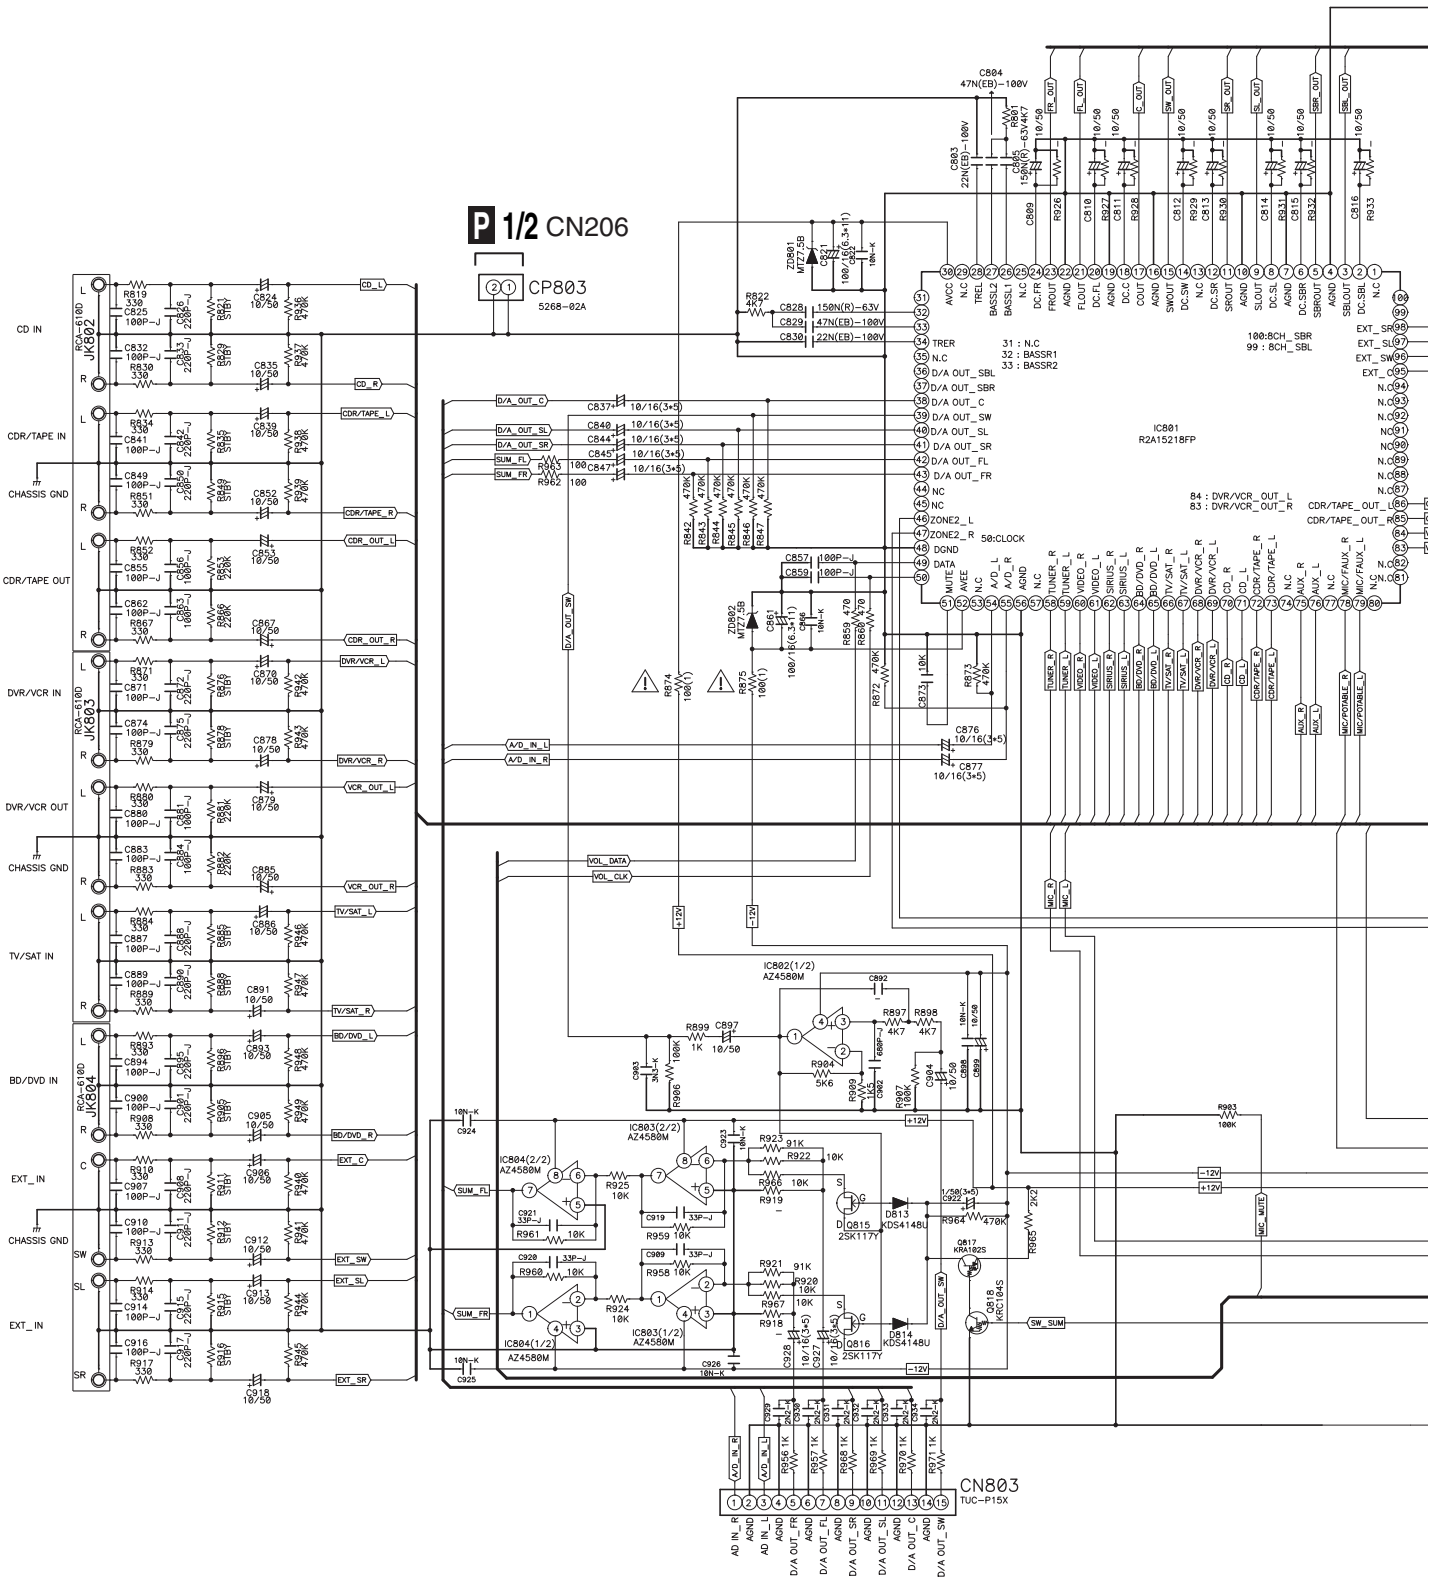

A CP118


TO MAIN B'D

SX-319V-K




10.5 P.C.B SUB ASSY (VIDEO)

P.C.B SUB ASSY (VIDEO) (7028067551030-IL)

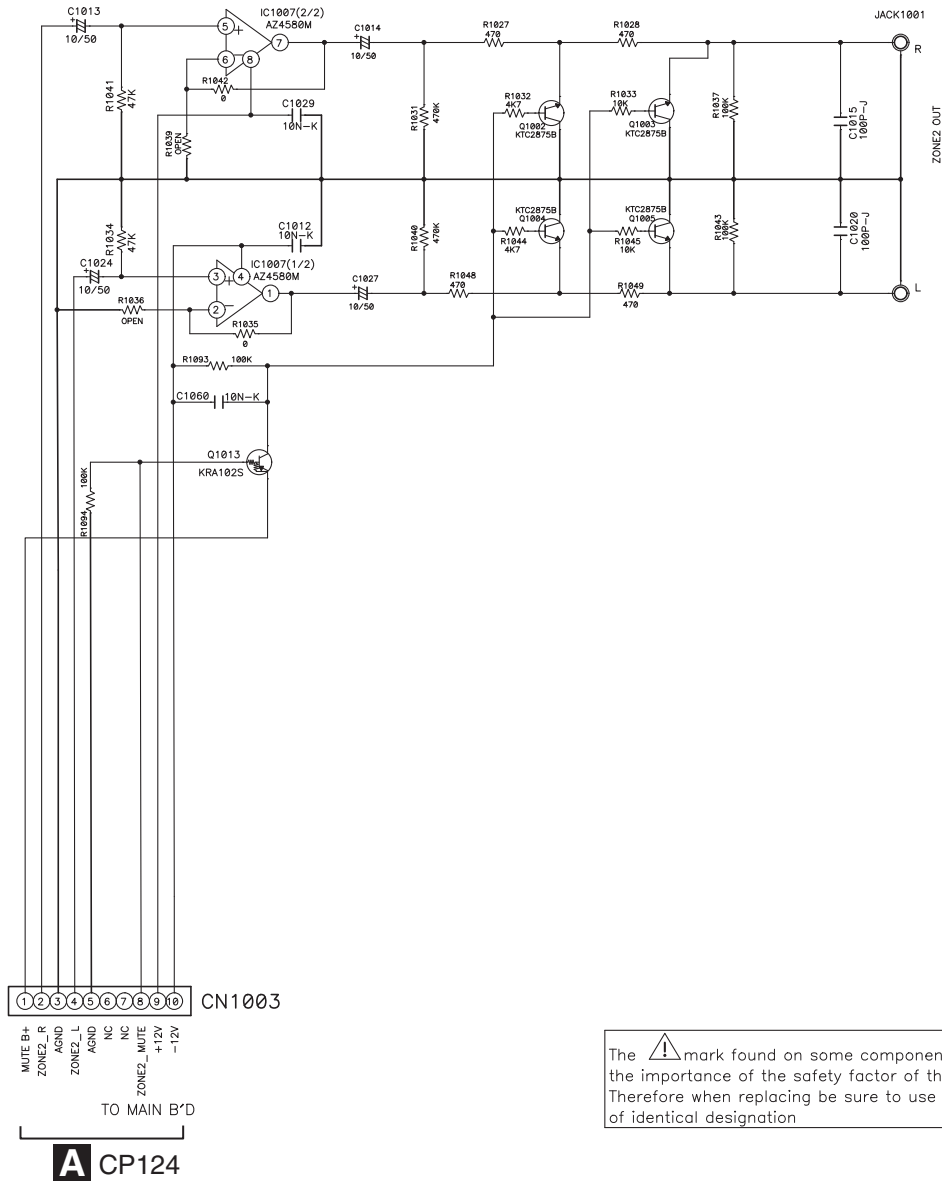

10.6 P.C.B SUB ASSY (SPEAKER) and P.C.B SUB ASSY (CNT)

M P.C.B SUB ASSY (SPEAKER) (7028068151010-IL)

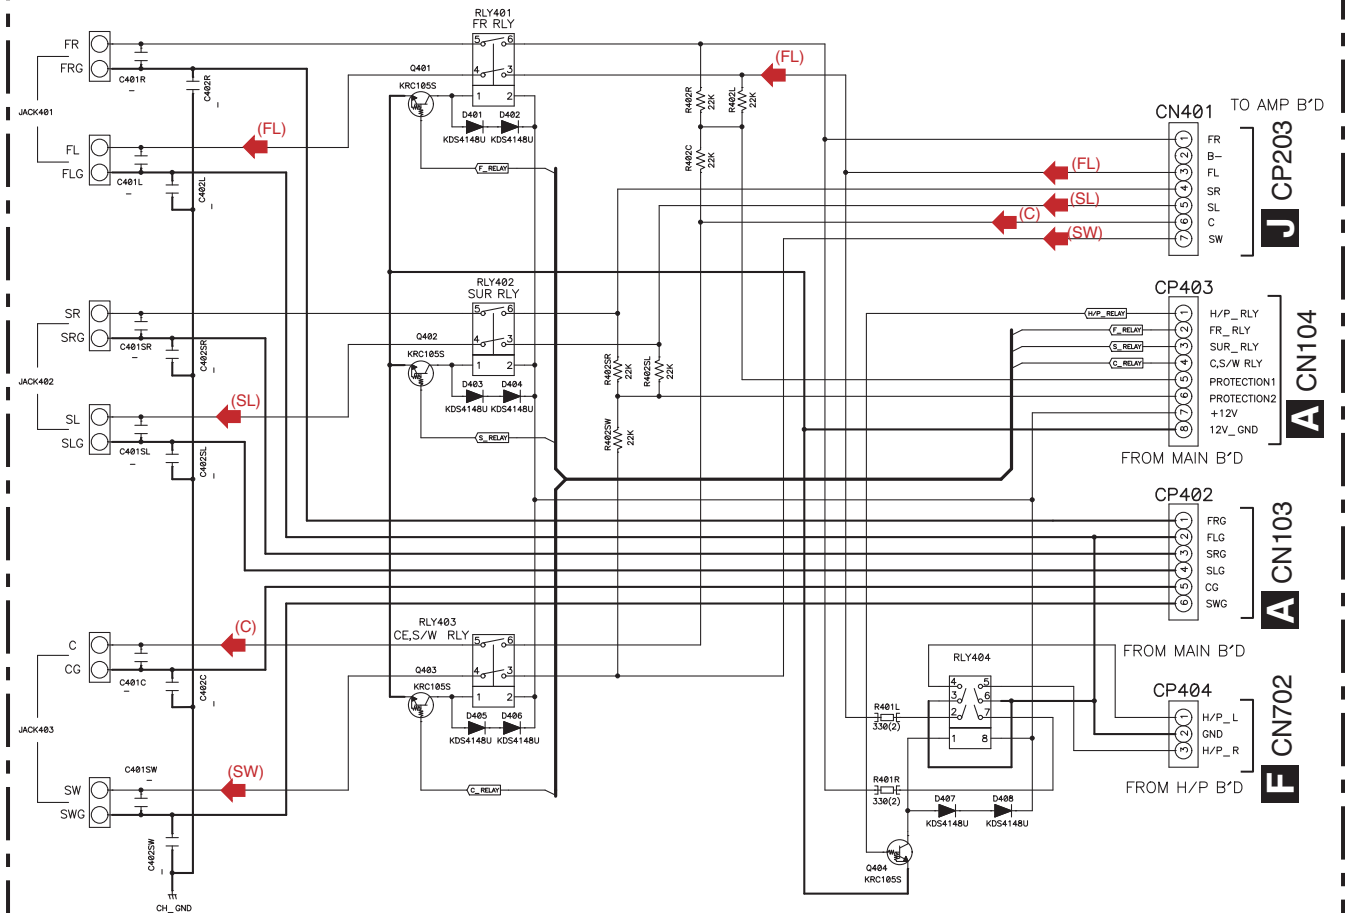


- (FL) → Audio Signal Route (Front L ch)
- (SL) → Audio Signal Route (Surround L ch)
- (C) → Audio Signal Route (Center ch)
- (SW) → Audio Signal Route (Subwoofer ch)

NOTES

1. Resistor values are indicated in ohms unless otherwise specified
[k = 1.000 m = 1.000.000]
 2. Capacitor values are indicated in microfarads unless otherwise specified.
[p = micro-microfarads]
 3. : These resistor are to be segregated from printed wiring board or other accessible parts.
CAUTION
Safety precaution to be followed during servicing
- 1] Since those parts marked with are critical parts for safety, use only the one described in the parts list
- 2] Before returning the set to the customer make appropriate leakage current or resistance measurements to determine the exposed parts are properly insulated from the supply circuit.

N P.C.B SUB ASSY (CNT) (70280675040C0-IL)

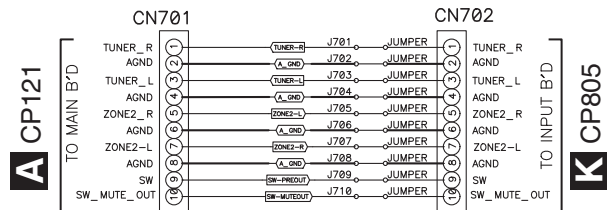


M N

SX-319V-K

M N

59

DIR/IR

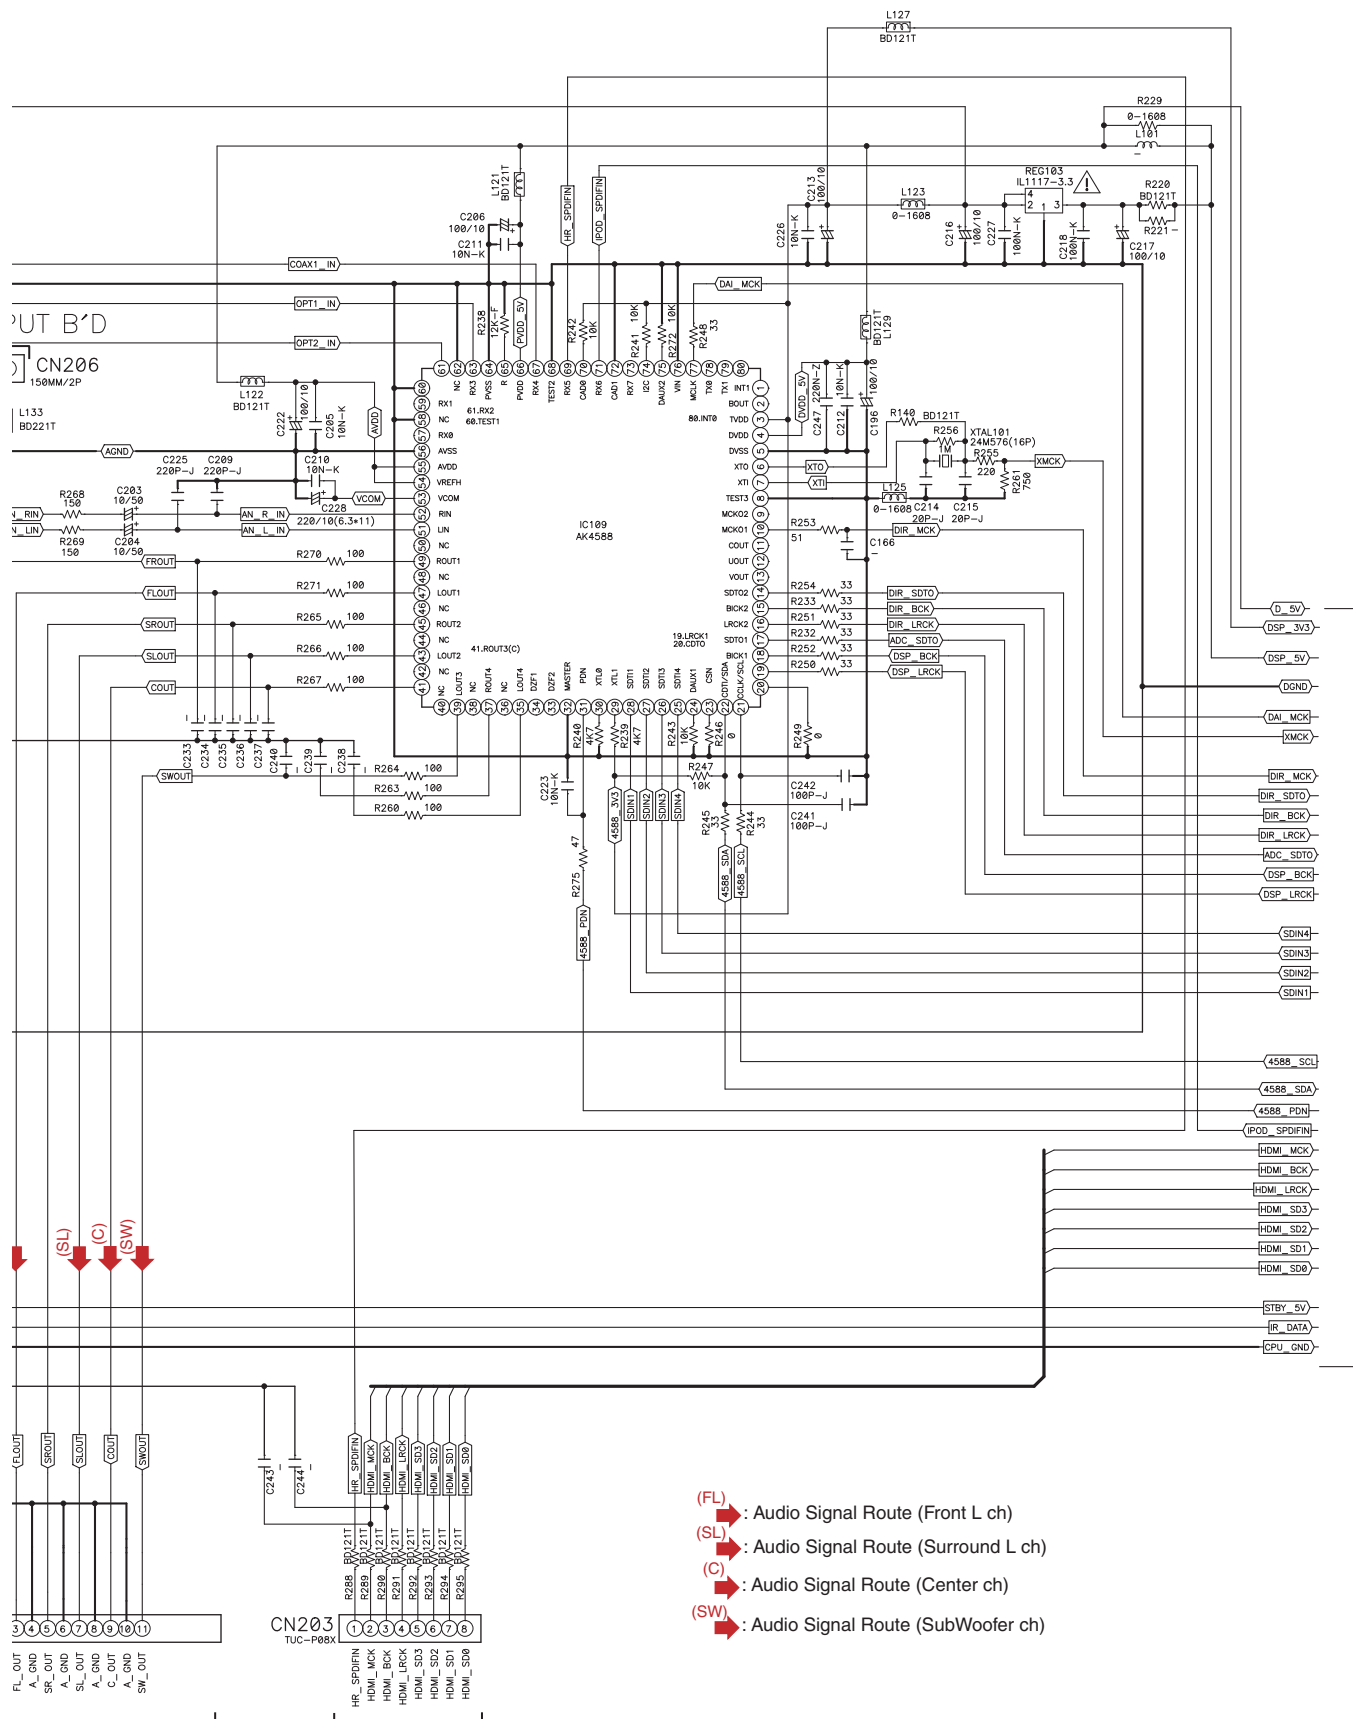

TO DSP SHEET

P 2/2


P 1/2

P 2/2 P.C.B SUB ASSY (DSP)
(7028067561040-IL)




A CP116

DSP

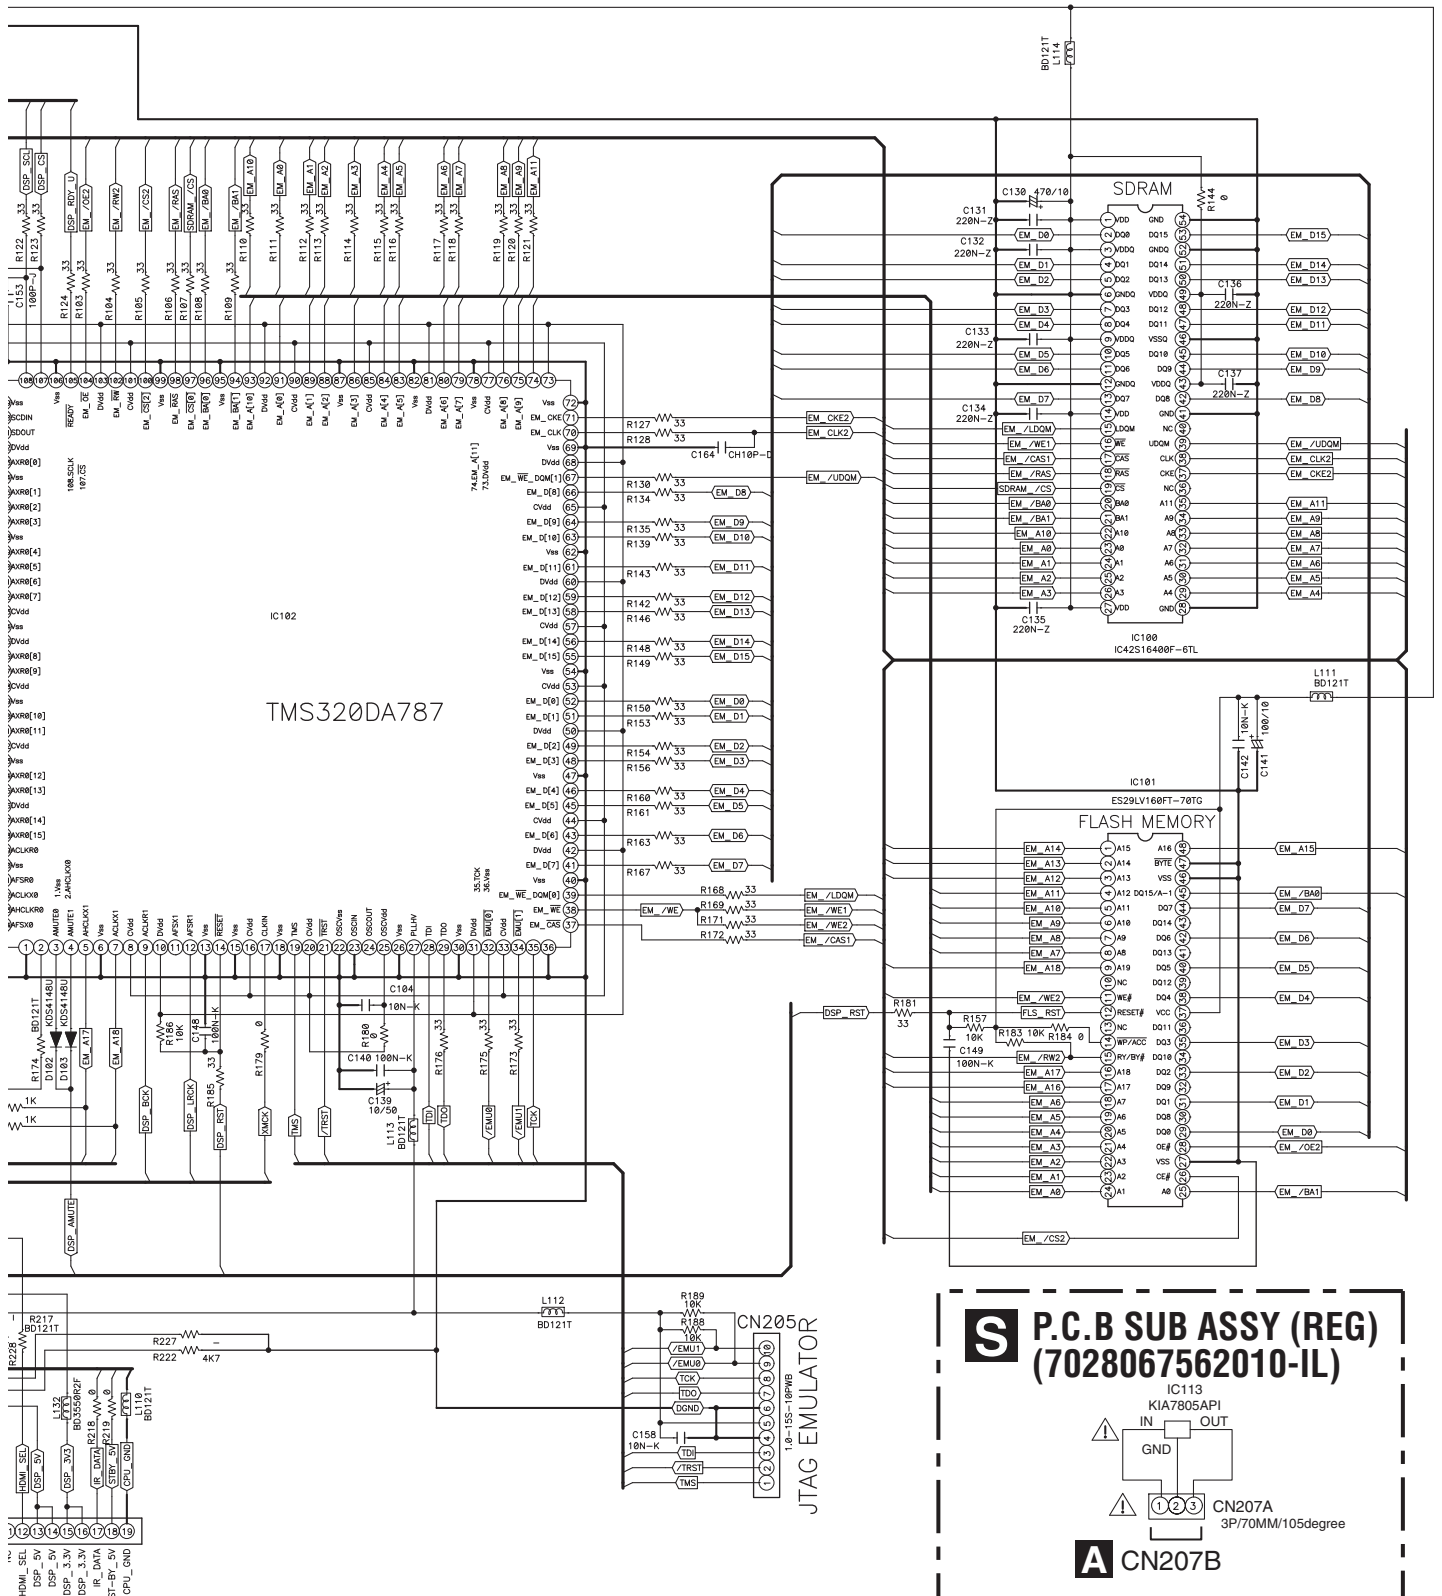

11.1 P.C.B SUB ASSY (MAIN) and P.C.B SUB ASSY (P/T)

A P.C.B SUB ASSY (MAIN)

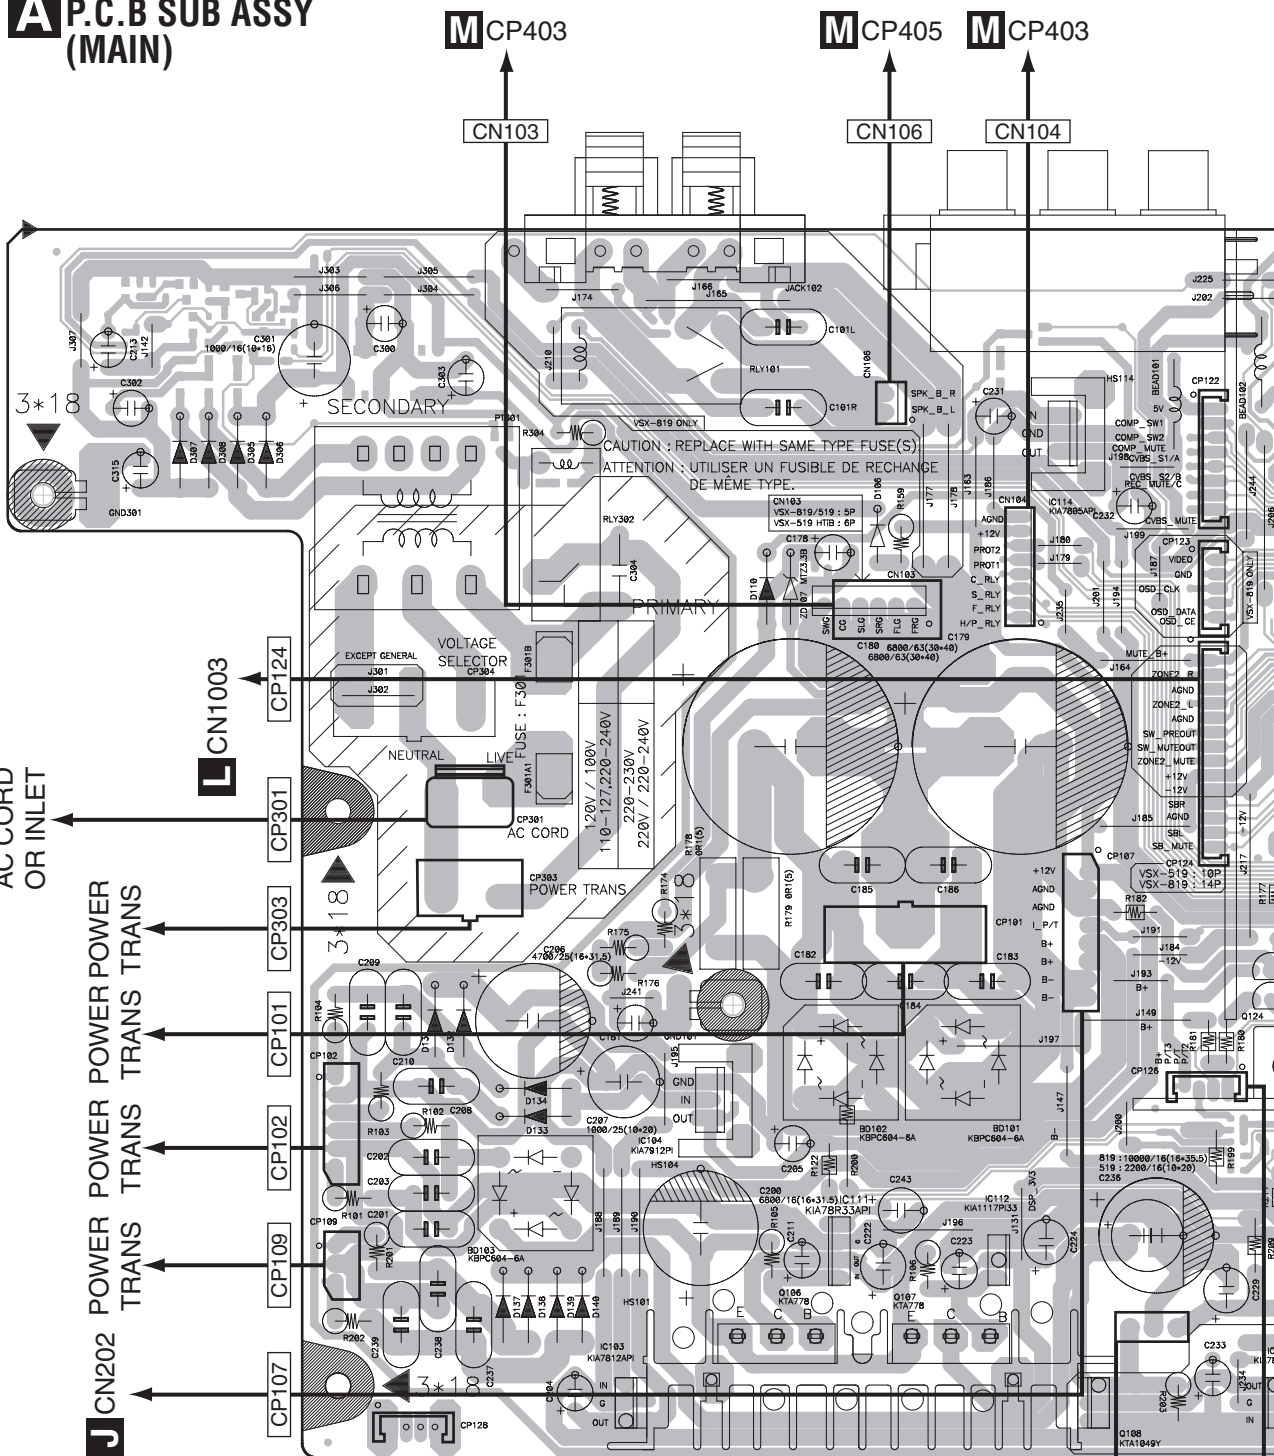

IC	Q
----	---

Q126 Q127

CN207B CP12

S CN207A

B P.C.B SUB ASSY (P/T)

SIDE B

A P.C.B SUB ASSY (MAIN)

IC	Q
----	---

IC108	
IC110	
IC109	Q138
IC120	Q300

Q101
Q111
Q109
Q302

IC106

IC101

Q103
Q202
Q102
Q201

IC113

A B


66

1

2

3

4

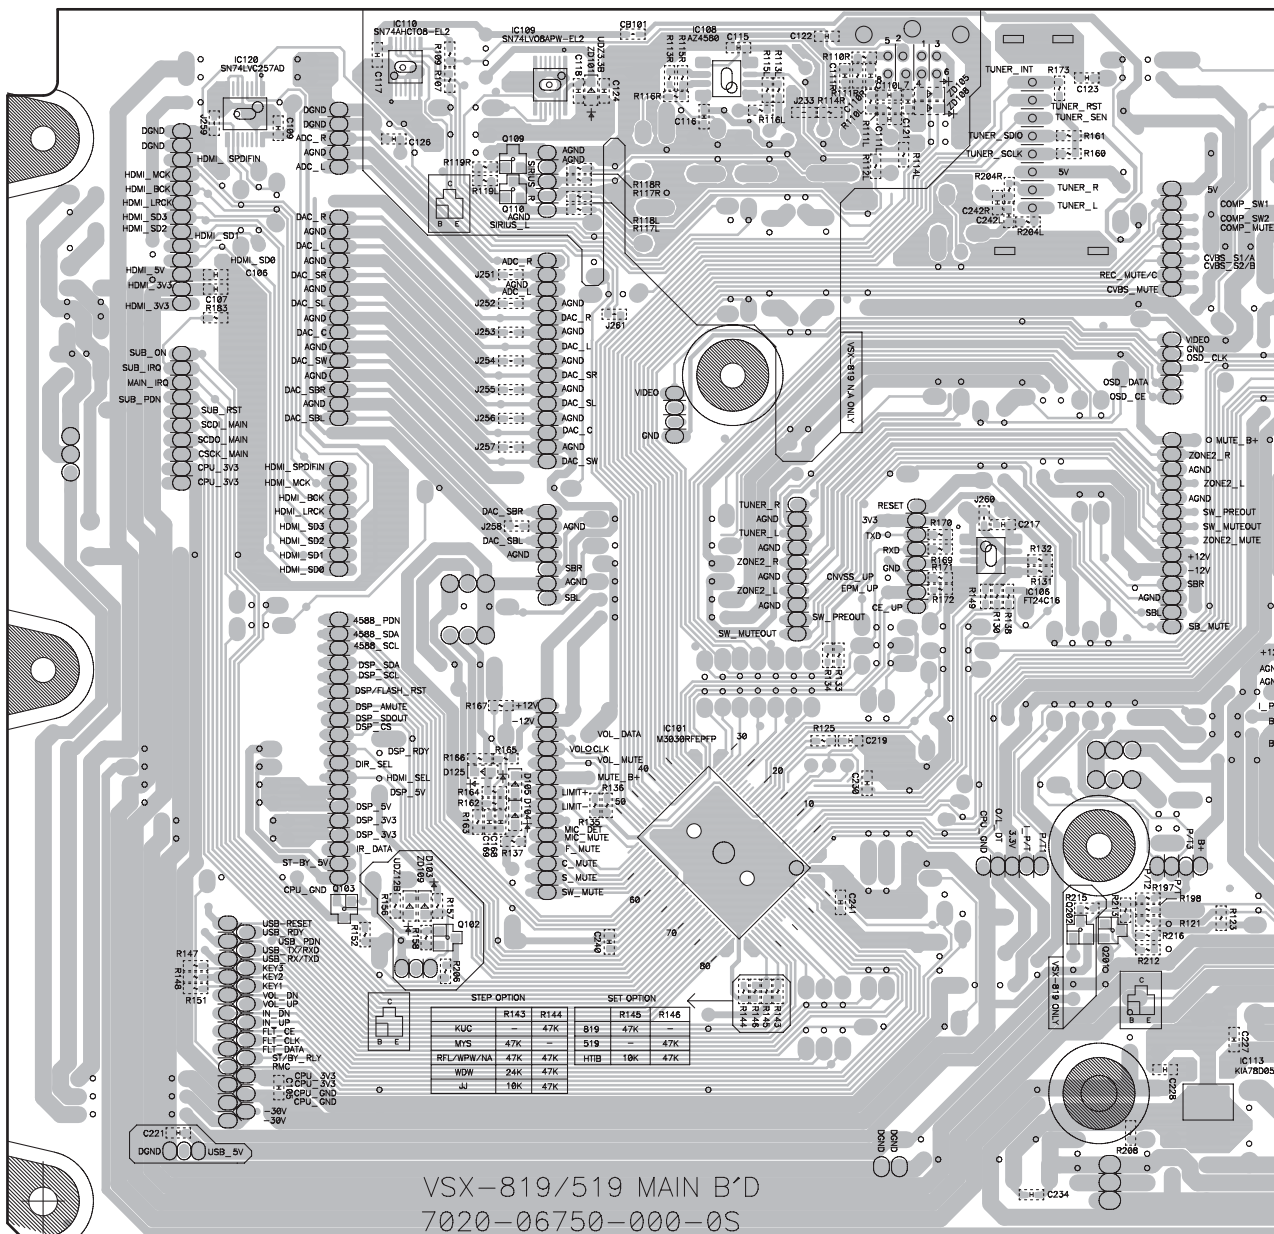

SX-319V-K

△

A




D



F

SIDE A

A

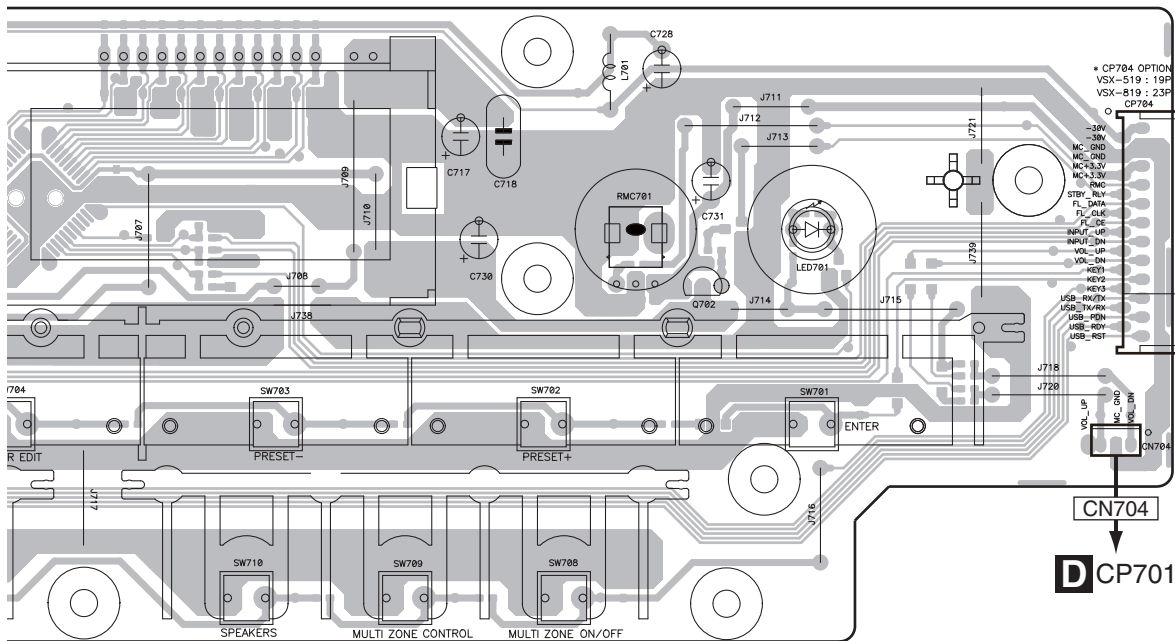

A FPC101
(VSX-819 : 23P)
(VSX-519 : 19P)


D CP701

B

C

SIDE B

D

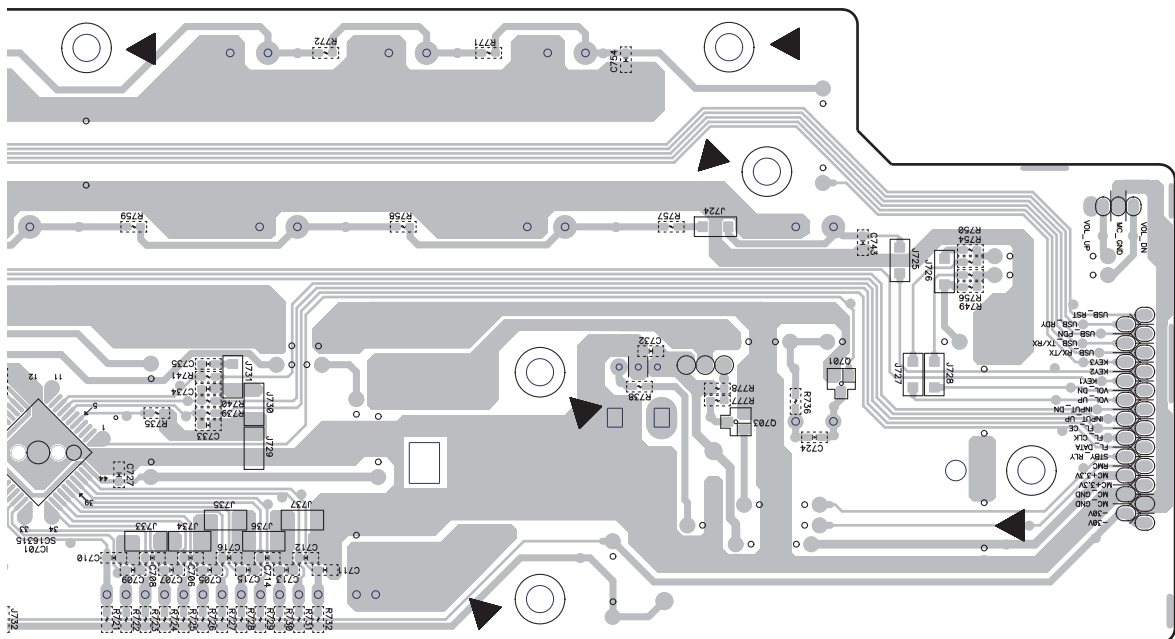

E

F

C



11.3 P.C.B SUB ASSYS (VOLUME), (FUNCTION), (HEADPHONE) and (PORTABLE)

SIDE A


SIDE A

D P.C.B SUB ASSY(VOLUME)


I P.C.B SUB ASSY (PORTABLE)

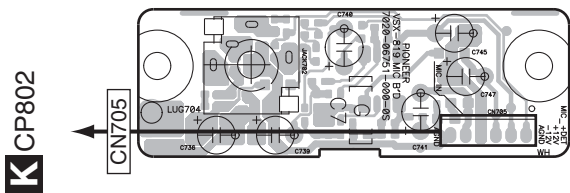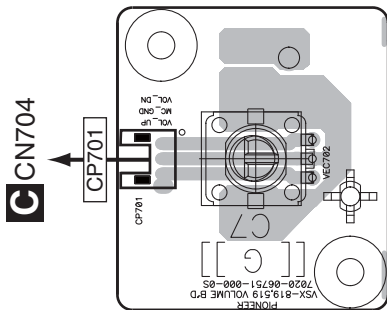

F P.C.B SUB ASSY (HEADPHONE)

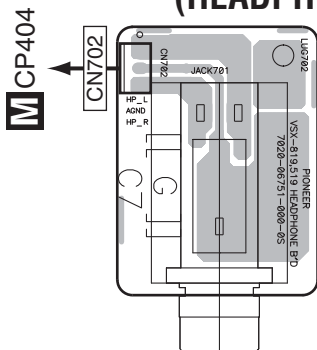

E P.C.B SUB ASSY (FUNCTION)

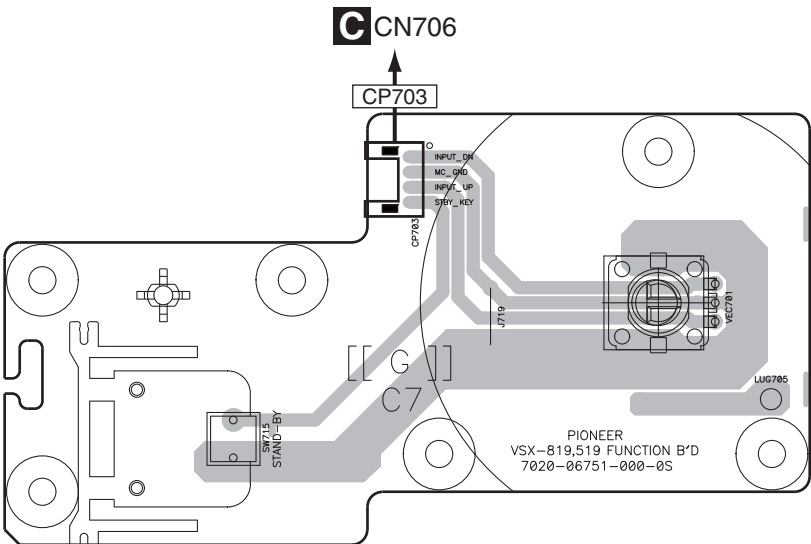


D E F I

SIDE B


SIDE B

A

I P.C.B SUB ASSY (PORTABLE)

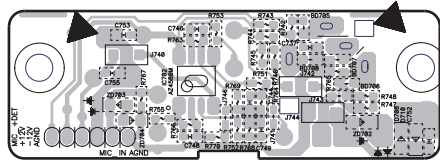


D P.C.B SUB ASSY(VOLUME)

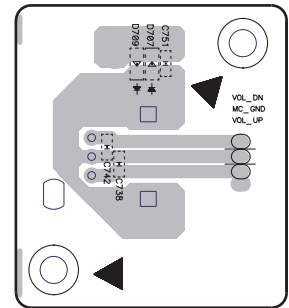


B

**F P.C.B SUB ASSY
(HEADPHONE)**

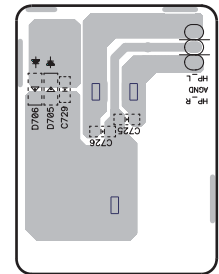

C

E P.C.B SUB ASSY (FUNCTION)

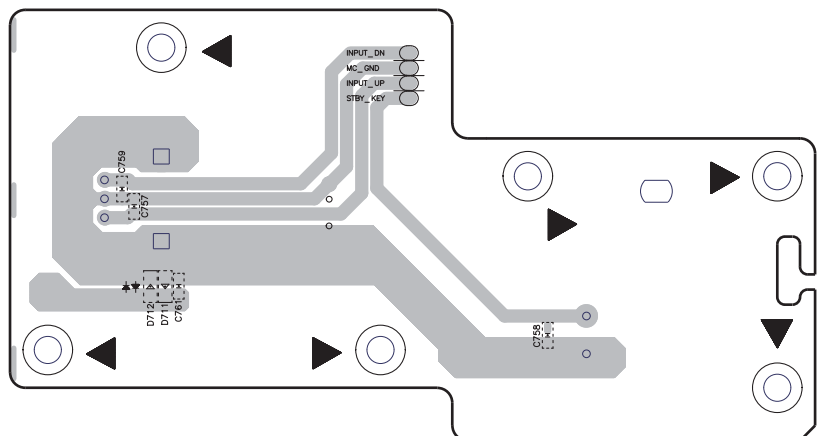

D

E

F

D E F I


71

J P.C.B SUB ASSY (AMP)

M CN401



J P.C.B SUB ASSY (AMP)

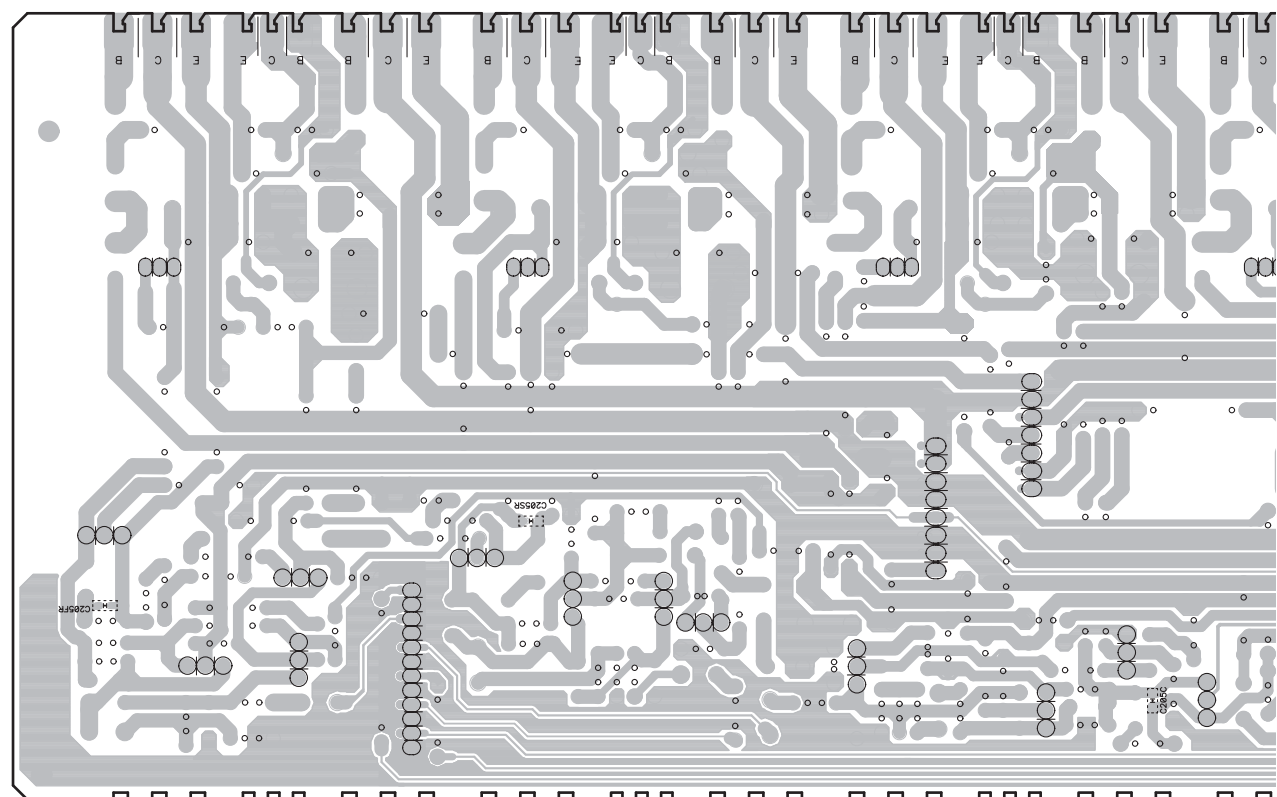


11.5 P.C.B SUB ASSY (INPUT)

SIDE A

SIDE A

K P.C.B SUB ASSY (INPUT)

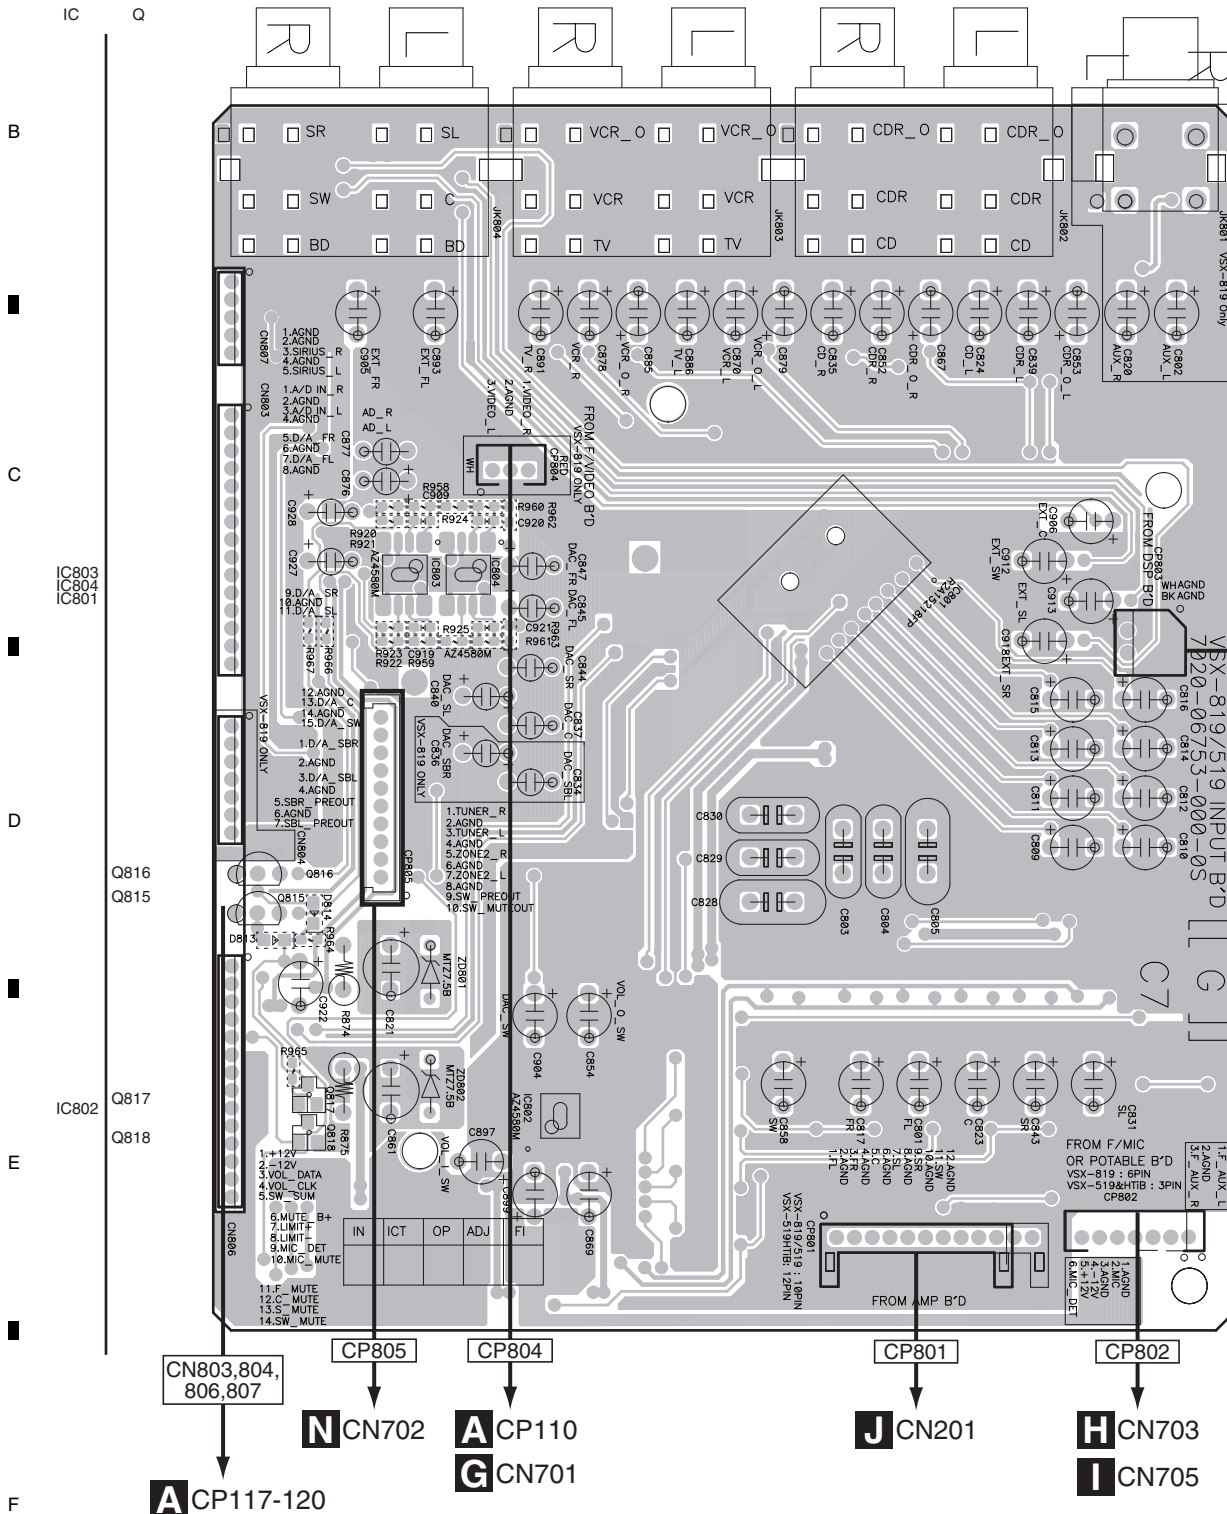

K

K

SIDE B

SIDE B

K P.C.B SUB ASSY (INPUT)

IC Q


IC801

IC802

Q812
Q813
Q814
Q801
Q802 Q803
Q805
Q804

Q807
Q806
Q808

Q809
Q810
Q811

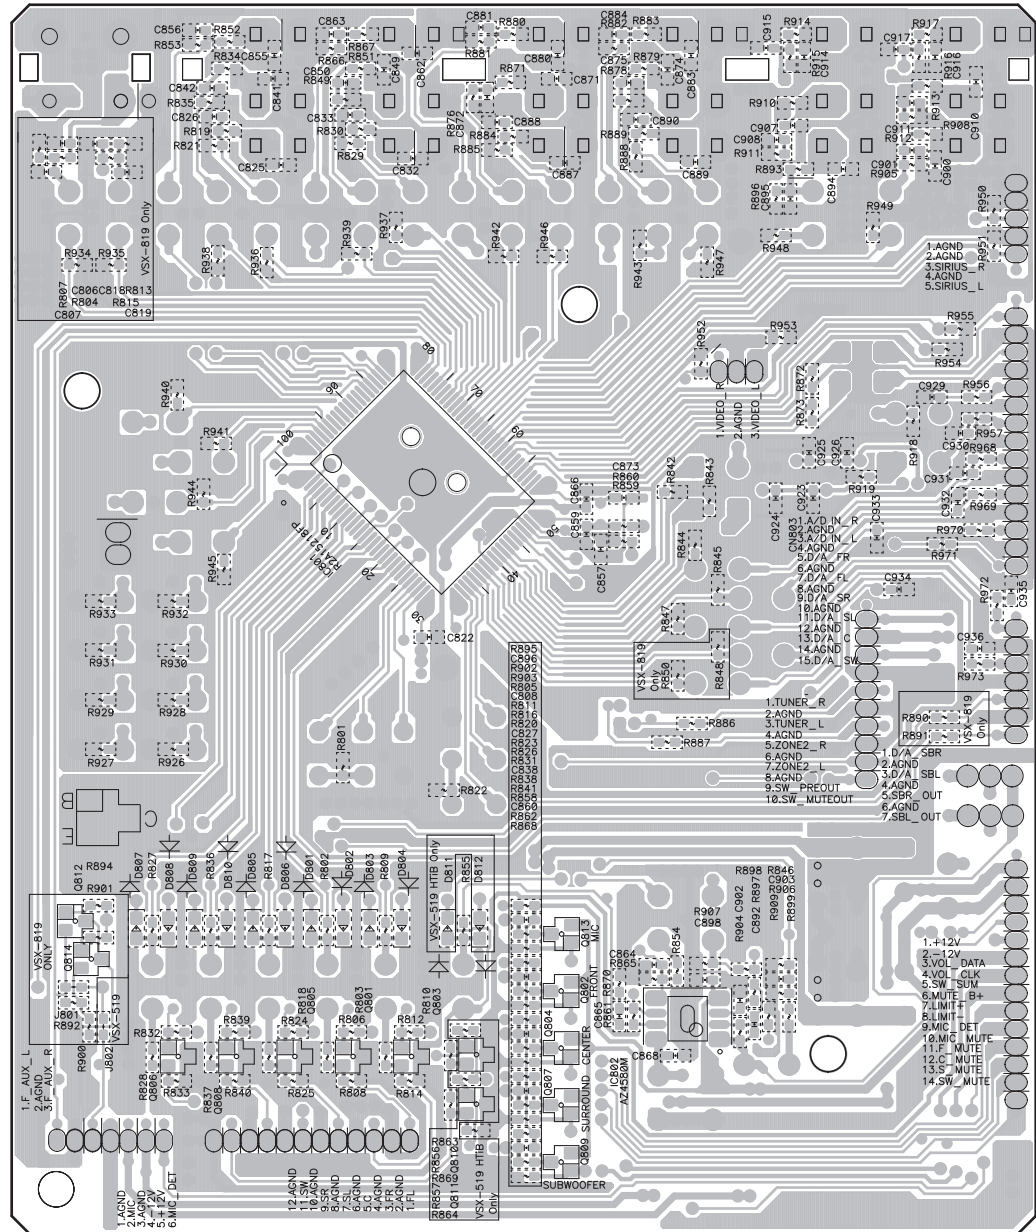

K


K


SX-319V-K

75

SIDE A

L P.C.B SUB ASSY (VIDEO)

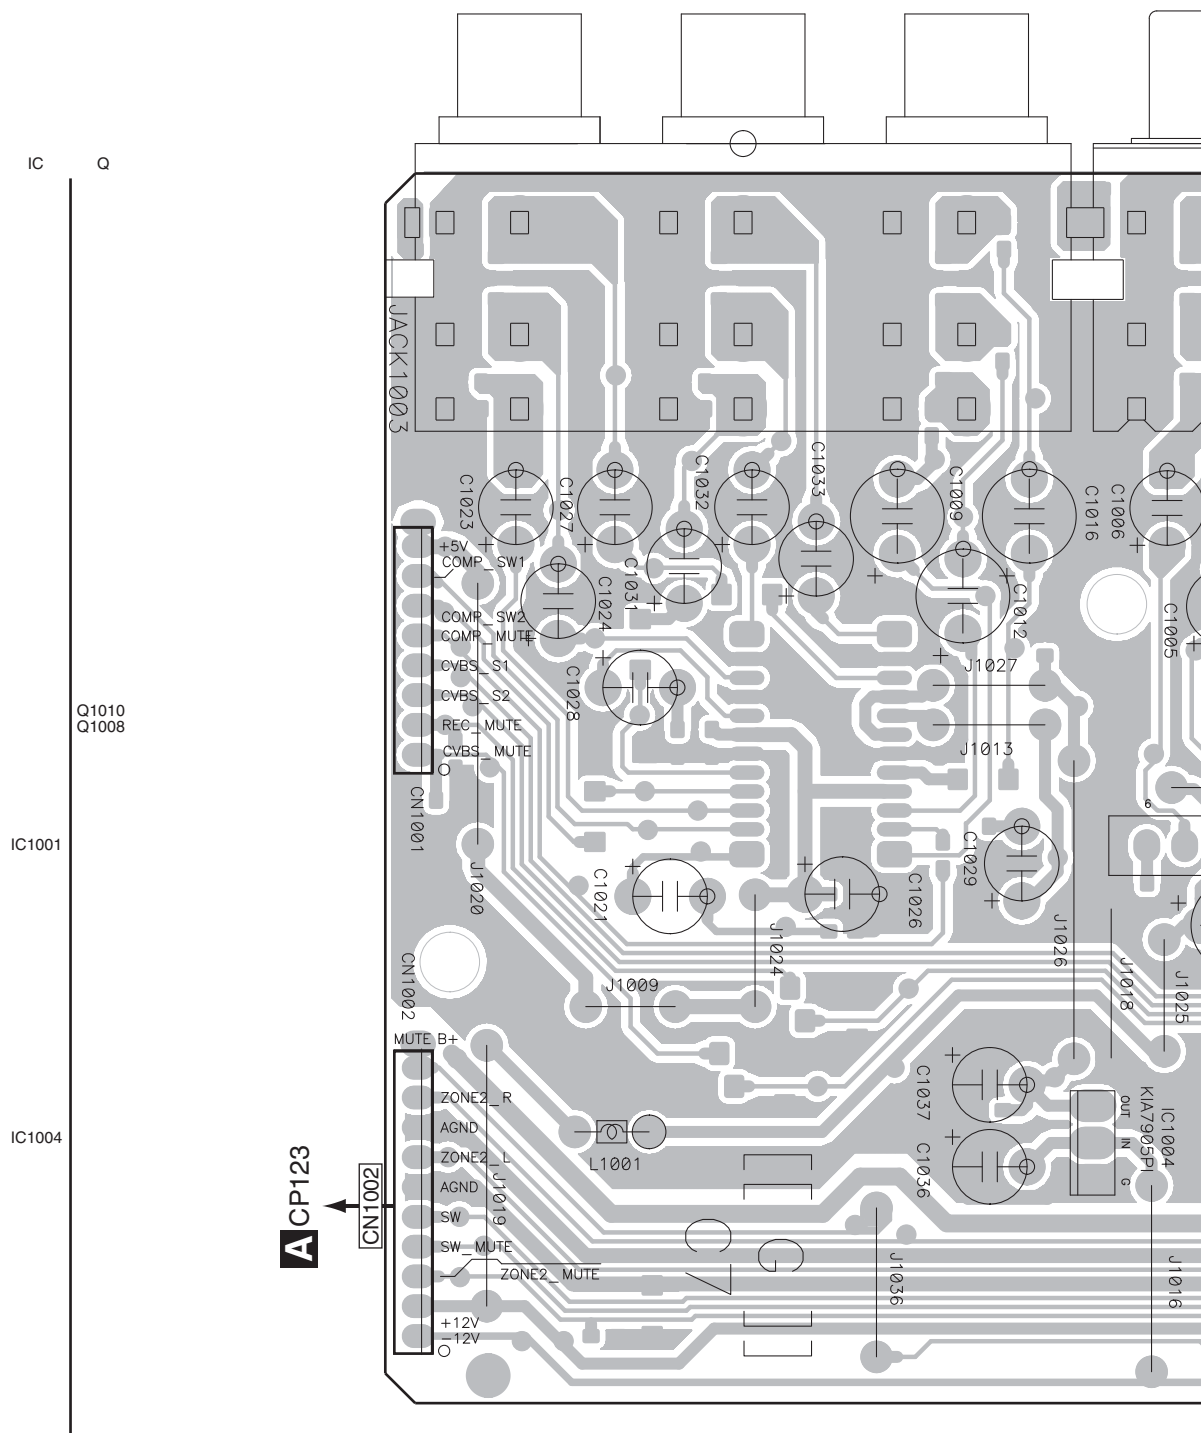

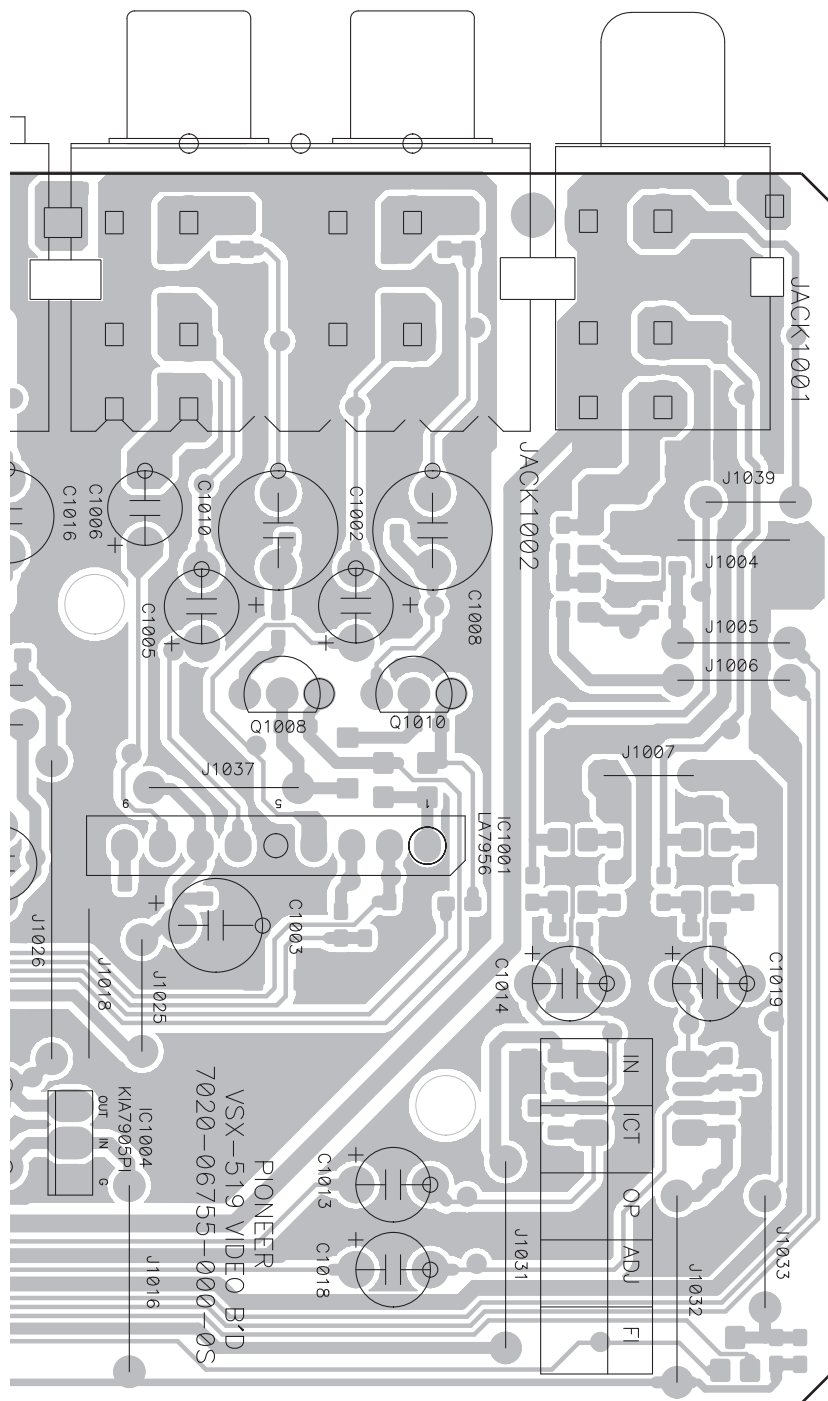

SIDE B

A


B

C

D


E

F

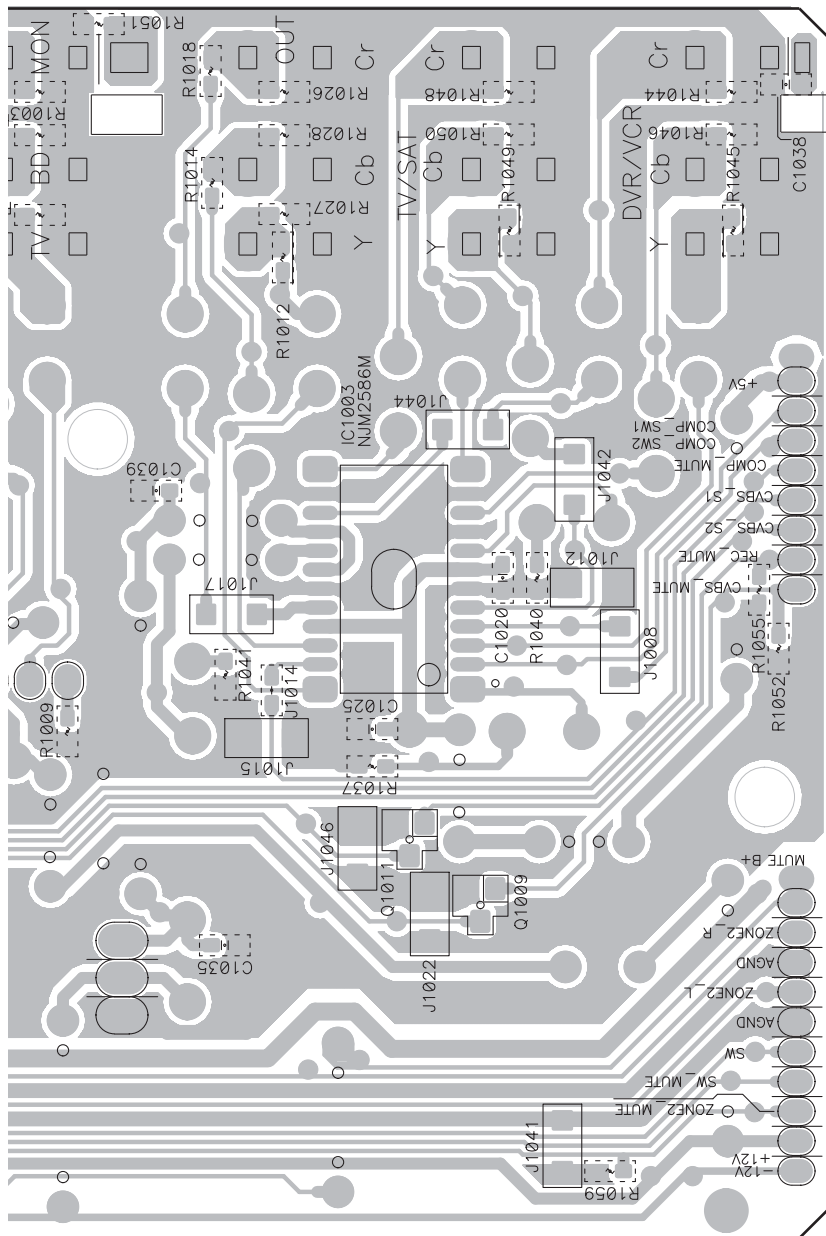

M

 SIDE A

R CN805


ACP114



KCP803

AC

N P

S P.C.B SUB ASSY (REG)

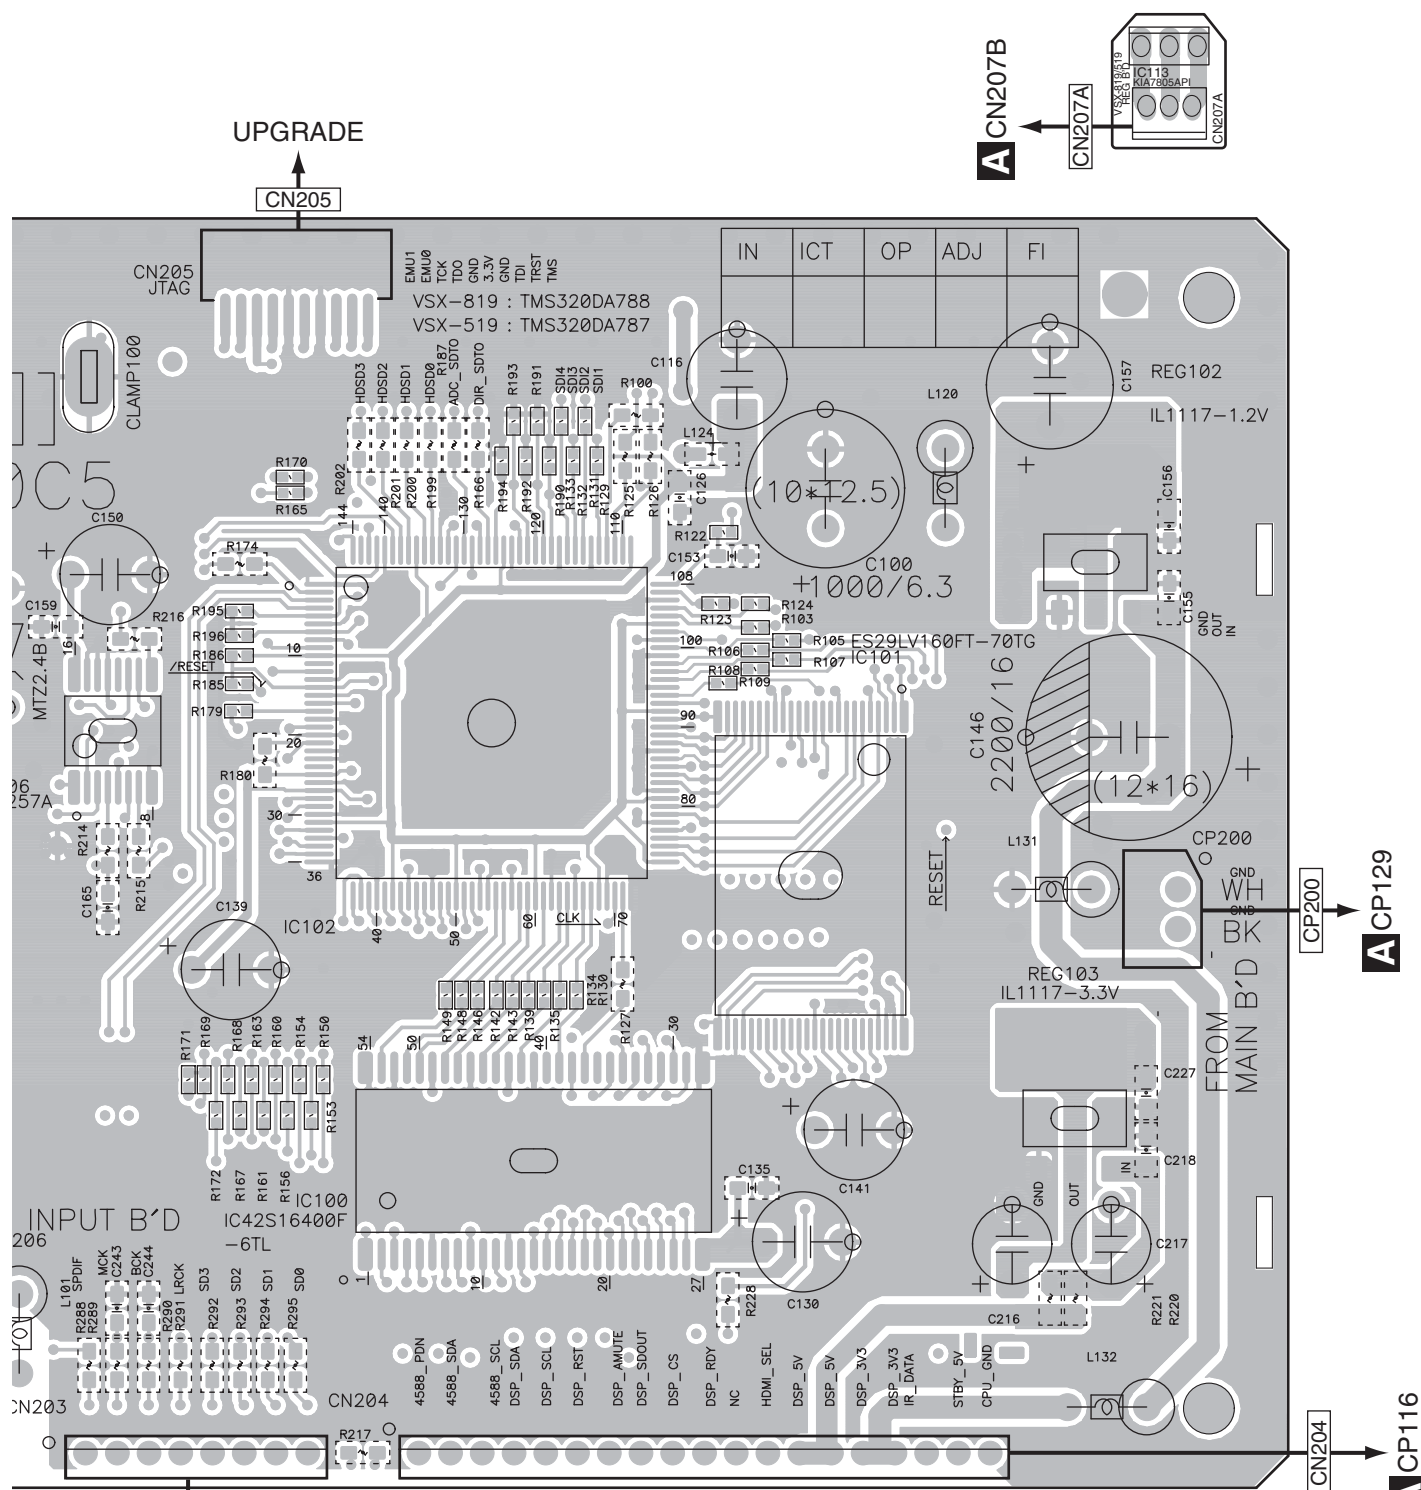SIDE A

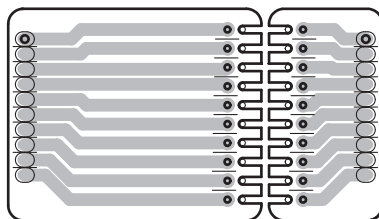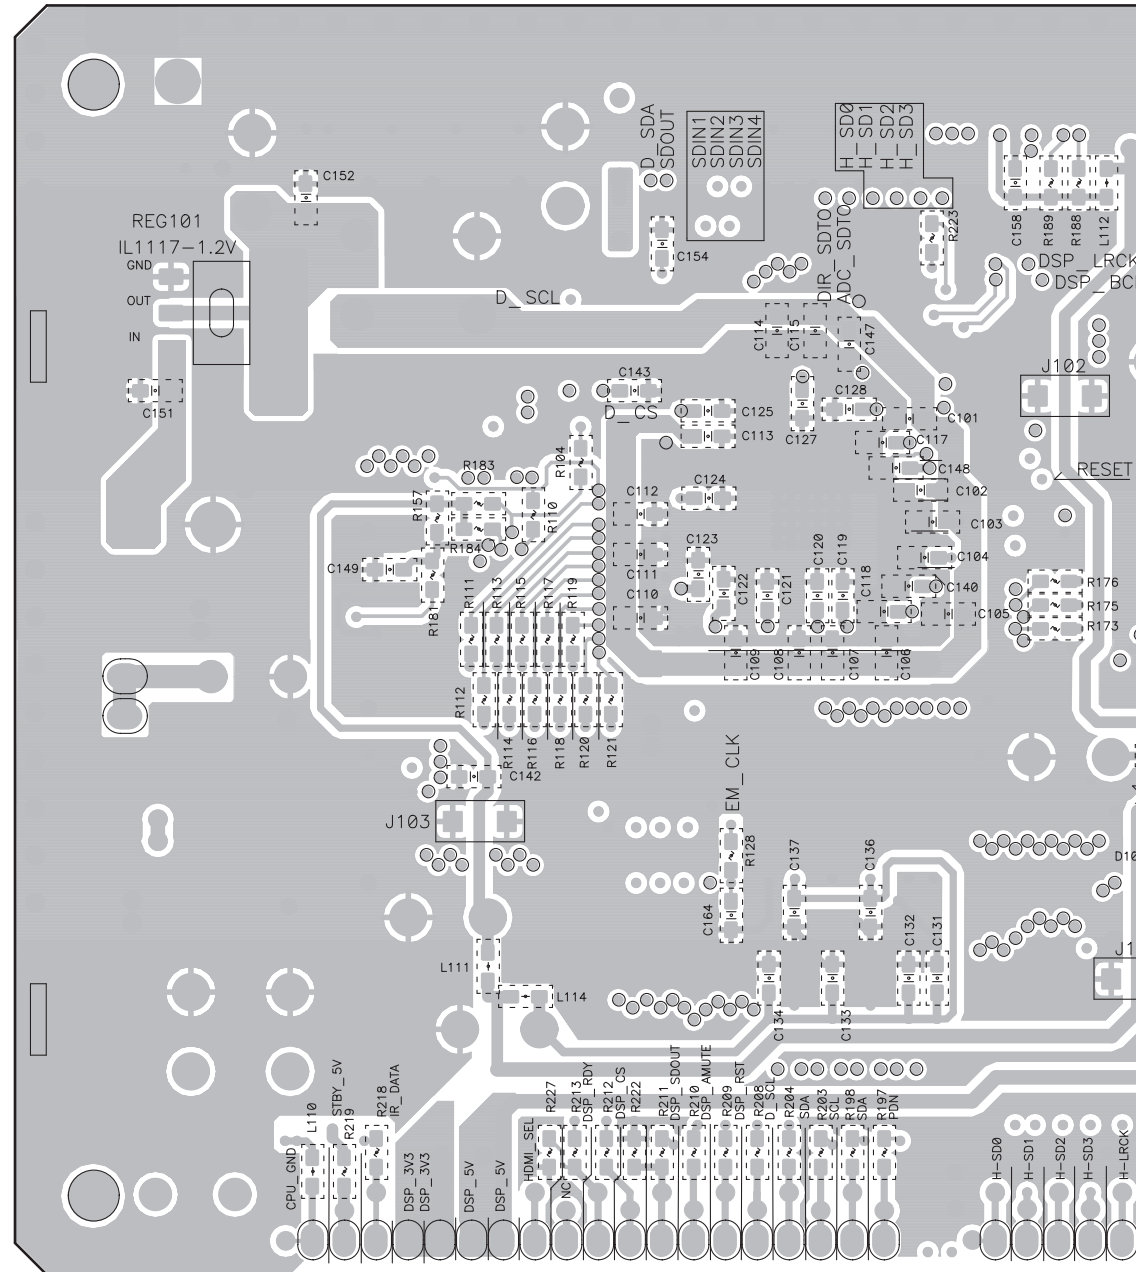
SIDE B**P** P.C.B SUB ASSY (DSP)**N** P.C.B SUB ASSY (CNT)**N P**

A

E

C

□

E

F



SIDE B**SIDE B**

A

Q P.C.B SUB ASSY (HDMI-519)


B

C

D

E

F

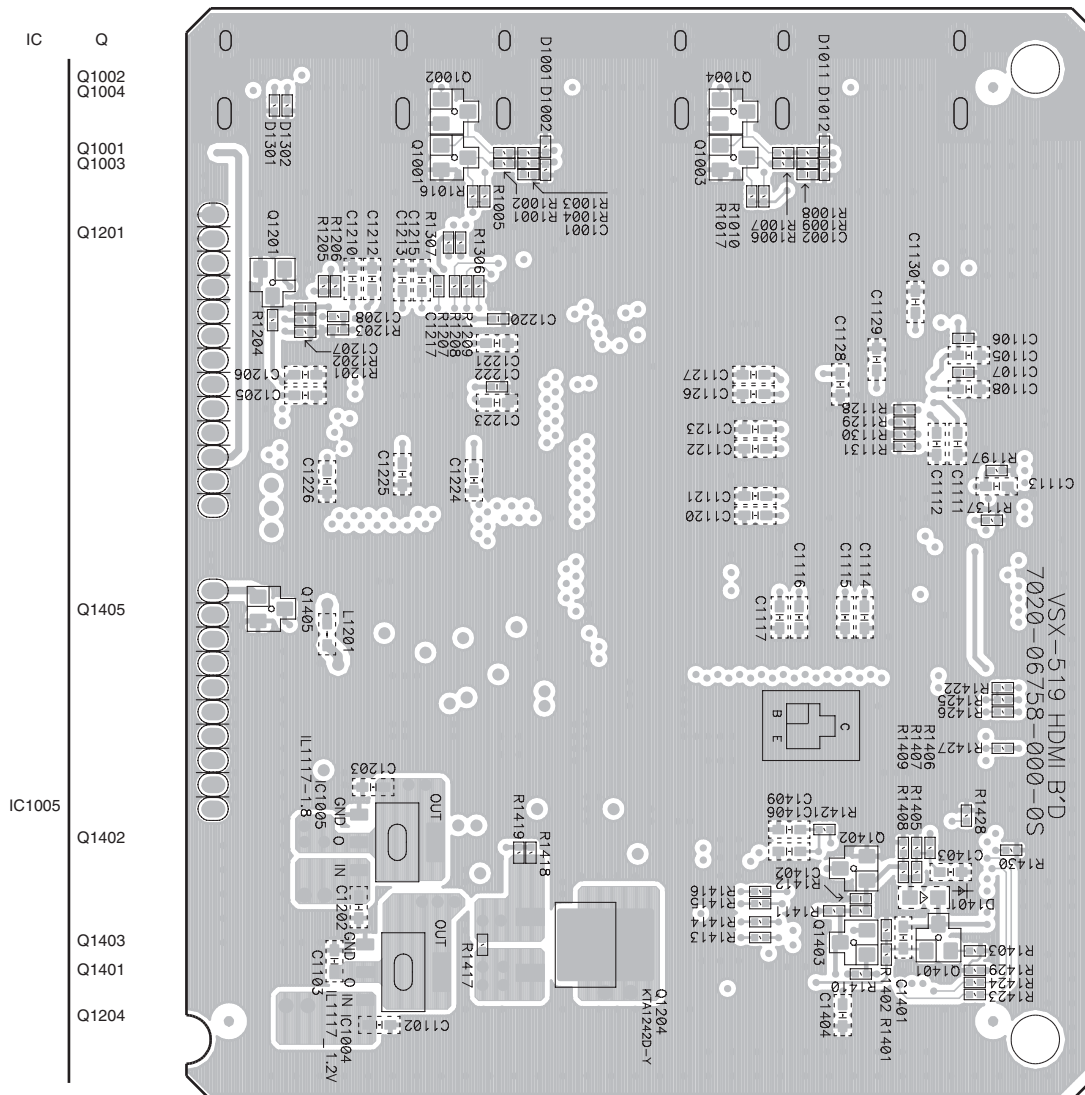

SX-319V-K

12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56 $\times 10^1$ $\rightarrow$ 561.....RD1/4PU $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 1 \\ 7 \end{bmatrix} J$

47 k Ω $\rightarrow$ 47 $\times 10^3$ $\rightarrow$ 473.....RD1/4PU $\begin{bmatrix} 4 \\ 7 \end{bmatrix} \begin{bmatrix} 3 \\ 3 \end{bmatrix} J$

0.5 Ω $\rightarrow$ R50.....RN2H $\begin{bmatrix} R \\ 5 \end{bmatrix} \begin{bmatrix} 0 \\ 0 \end{bmatrix} K$

1 Ω $\rightarrow$ 1R0.....RSIP $\begin{bmatrix} 1 \\ 7 \end{bmatrix} \begin{bmatrix} R \\ 0 \end{bmatrix} K$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω $\rightarrow$ 562 $\times 10^1$ $\rightarrow$ 5621.....RN1/4PC $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 2 \\ 2 \end{bmatrix} \begin{bmatrix} 1 \\ 7 \end{bmatrix} F$

● Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

● PCB PARTS LIST

JA***

RY***

T***

X***

FU***

V***

S***

Q***I - Q***6

● SCHEMATIC DIAGRAM and PCB CONNECTION DIAGRAM

JACK***, JK***

RLY***

PT***

XTAL***, RES*** (CERAMIC)

F***

FLT***

SW***, VEC*** (ENCODER)

Q***FL, Q***FR, Q***C, Q***SL, Q***SR, Q***SW

Mark No. Description Part No.

Mark No. Description Part No.

LIST OF ASSEMBLIES

NSP 1..P.C.B TOTAL ASSY (MAIN) 7025HK0812090-IL
2..P.C.B SUB ASSY (MAIN) 70280675010C0-IL
2..P.C.B SUB ASSY (GUIDE-L) 70280675020C0-IL
2..P.C.B SUB ASSY (GUIDE-R) 70280675030C0-IL
2..P.C.B SUB ASSY (CNT) 70280675040C0-IL
2..P.C.B SUB ASSY (P/T) 70280675050C0-IL
2..P.C.B SUB ASSY (HP GUIDE) 70280675060C0-IL

NSP 1..P.C.B TOTAL ASSY (FRONT) 7025HK0812091-IL
2..P.C.B SUB ASSY (FRONT) 7028067511030-IL
2..P.C.B SUB ASSY (HEADPHONE) 7028067512030-IL
2..P.C.B SUB ASSY (VOLUME) 7028067513030-IL
2..P.C.B SUB ASSY (FUNCTION) 7028067514030-IL
2..P.C.B SUB ASSY (PORTABLE) 7028067518030-IL

NSP 1..P.C.B TOTAL ASSY (AMP) 7025HK0812092-IL
2..P.C.B SUB ASSY (AMP) 7028068141010-IL

NSP 1..P.C.B TOTAL ASSY (INPUT) 7025HK0812093-IL
2..P.C.B SUB ASSY (INPUT) 7028067531040-IL

NSP 1..P.C.B TOTAL ASSY (VIDEO) 7025HK0812094-IL
2..P.C.B SUB ASSY (VIDEO) 7028067551030-IL

NSP 1..P.C.B TOTAL ASSY (DSP) 7025HK0812095-IL
2..P.C.B SUB ASSY (DSP) 7028067561040-IL
2..P.C.B SUB ASSY (REG) 7028067562010-IL

NSP 1..P.C.B TOTAL ASSY (HDMI) 7025HK0812096-IL
2..P.C.B SUB ASSY (HDMI) 7028067581040-IL

NSP 1..P.C.B TOTAL ASSY (SPEAKER) 7025HK0812097-IL
2..P.C.B SUB ASSY (SPEAKER) 7028068151010-IL

A P.C.B SUB ASSY (MAIN) SEMICONDUCTORS

IC 101 8952519000011-IL
IC 103 J126781200040-IL
IC 104 J126791200060-IL
IC 106 J000241600020-IL
IC 111 J12678R330010-IL

IC 112 J126111733050-IL
IC 114 J126780500110-IL
IC 301 J126111700041-IL
IC 302 J126111750010-IL
Q 101,102,138,300 J522038750210-IL

Q 103,111 J522010500210-IL
Q 106,107 J501778000010-IL
Q 121,123,124 J5001268B0050-IL
Q 122 J5023198Y0000-IL
Q 125 J5000916Y0050-IL

Q 301 J522038750210-IL
Q 302 J522107S00210-IL
D 104,105,125,127 K005041480030-IL
D 128,135,136 K005041480030-IL
D 301-304 K005041480030-IL

D 1101-1103 (BD101-103) K047604000020-IL

MISCELLANEOUS

L 101,102 (BEAD101, 102) BEAD,COIL 7610010030000-IL
JA 101 TUNER E903004100020-IL
RY 302 RELAY G680060502010-IL
T 301 POWER TRANS 8200280150620-IL
X 101 RESONATOR,CERAMIC (16 MHz) E830160000060-IL

101 HEAT SINK 2120210958050-IL
104,114 HEAT SINK 2120000818020-IL
FU 301 FUSE GLASS TUBE 20MM N751226301110-IL

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
RESISTORS				MISCELLANEOUS			
R	101-104,201,202		C060R22065050-IL	S	702	SW,ENCODER	G121123040010-IL
R	105,106		C060033065050-IL	E P.C.B SUB ASSY (FUNCTION)			
R	159		C060015165050-IL	SEMICONDUCTORS			
R	174-176		C060022265050-IL	D	711,712		K005041480030-IL
R	178,179		C141R10069010-IL	MISCELLANEOUS			
R	184		C0604R7065050-IL	S	701	SW,ENCODER	G121123050020-IL
R	186		C060022063050-IL	S	715	SWITCH	G180501000010-IL
R	304		C060010063050-IL	F P.C.B SUB ASSY (HEADPHONE)			
CAPACITORS				SEMICONDUCTORS			
C	179,180		D040682088010-IL	D	705,706		K005041480030-IL
C	182-186		D02010407H080-IL	MISCELLANEOUS			
C	189		D040331088230-IL	JA	701	JACK,D6.5	G402PJ619AG0Y-IL
C	200		D040682083000-IL	I P.C.B SUB ASSY (PORTABLE)			
C	201-203,208-210		D02047306C060-IL	SEMICONDUCTORS			
C	206		D040472084020-IL	D	713,714		K005041480030-IL
C	207		D040102084060-IL	MISCELLANEOUS			
C	222,224		D040471082060-IL	JA	703	JACK,D3.5	G401PJ354H70Y-IL
C	236		D040222083080-IL	J P.C.B SUB ASSY (AMP)			
C	237-239		D02047306C060-IL	SEMICONDUCTORS			
C	301		D040102083030-IL	Q	2021-2026,2061-2066		J5023200B0050-IL
C	304		D00847208H010-IL	Q	2031-2036,2041-2046		J5000992F0050-IL
B P.C.B SUB ASSY (P/T)				MISCELLANEOUS			
SEMICONDUCTORS				L	2011-2016 COIL,FILTER-INDUCTOR		D330900001330-IL
Q	126,128,131,134		J5001268B0050-IL	VR	2011-2016 VR,SEMI CARBON MOLD		C541102315000-IL
Q	127,129,130,132		J5023198Y0000-IL	RESISTORS			
Q	133,135,136		J5023198Y0000-IL	R	227,229		C060010065050-IL
D	112,113		K005041480030-IL	R	2011-2016		C00007526P520-IL
MISCELLANEOUS				R	2021-2026,2071-2076		C060056265050-IL
201	BRACKET		4010210196000-IL	R	2031-2036		C00002226P520-IL
RESISTORS				R	2041-2046		C00004746P520-IL
R	189		C00004736P520-IL	R	2051-2056,2231-2236		C0604R7063050-IL
R	190		C060047363050-IL	R	2061-2066		C00001836P520-IL
C P.C.B SUB ASSY (FRONT)				R	2081-2086		C00008216P520-IL
SEMICONDUCTORS				R	2091-2096,2101-2106		N113136647820-IL
IC	701		J127163150010-IL	R	2111-2116		C00002216P520-IL
IC	7011 (RMC701)		E940343800010-IL	R	2121-2126,2181-2186		C00003336P520-IL
Q	702		J5000933S0050-IL	R	2131-2136		C00003026P520-IL
Q	703		J522107S00210-IL	R	2141-2146		C060010065520-IL
MISCELLANEOUS				R	2151-2156,2161-2166		N113136647820-IL
L	701 COIL		D330101001020-IL	R	2191-2196		C00003346P520-IL
L	702 COIL,FILTER-INDUCTOR		D330100700520-IL	R	2201-2206		C00005616P520-IL
V	701 DISPLAY,FLT		K530126300010-IL	R	2211-2216,2251-2256		C00001226P520-IL
S	701-714 SWITCH		G180501000010-IL	R	2221-2226		C00004736P520-IL
O	HOLDER		432004078301A-IL	R	2241-2246		C060047063050-IL
RESISTORS				R	2261-2266		C00004716P520-IL
R	779,780		C0602R2063050-IL	R	2281-2286		N113135610020-IL
CAPACITORS				D P.C.B SUB ASSY (VOLUME)			
C	718,719		D02047306C060-IL	SEMICONDUCTORS			
D	707,709		K005041480030-IL				

Mark	No.	Description	Part No.
CAPACITORS			
A	C	2011-2016,2111-2116	D00410106D050-IL
	C	2031-2036	D00422106D05C-IL
	C	2041-2046	D00033006D050-IL
	C	2091-2096	D004471277050-IL
	C	2101-2106	D004102277050-IL
	C	2131-2136,2141-2146	D02010406C060-IL

Mark	No.	Description	Part No.
	IC	106	J040742570030-IL
	IC	109	J080458800010-IL
	IC	110	J040740400290-IL
	IC	806	J030151100010-IL
	IC	1011,1021	J126111712040-IL
	Q	802	J522010500210-IL
	D	101-103	K005041480030-IL

MISCELLANEOUS

L	115,116	COIL	D3304R7000150-IL
L	117	COIL	D3302R2000150-IL
L	120	BEAD,COIL	7610035500030-IL
JA	102	TER,RCA 1PIN	G600107A0000Y-IL
JA	105,106	OPTICAL RECEIVER	E100116500040-IL
JA	804	JACK,D3.5	G40130802000Y-IL
X	101	CRYSTAL CHIP (24.576 MHz)	E80524R576020-IL

CAPACITORS

C	823,825	D02012306C060-IL
---	---------	------------------

Q P.C.B SUB ASSY (HDMI)**SEMICONDUCTORS**

IC	1001	J040923300030-IL
IC	1002	J040913400030-IL
IC	1003	8952519000020-IL
IC	1004	J126111712040-IL
IC	1005	J126111710011-IL
Q	1201	J522104S00210-IL
Q	1204	J500124200010-IL

MISCELLANEOUS

JA	1001,1002,1004	CN.WAFER	L109100190050-IL
X	1001	CRYSTAL CHIP (27.000 MHz)	E80527R000010-IL
X	1401	CRYSTAL CHIP (16.000 MHz)	E80516R000010-IL

S P.C.B SUB ASSY (REG)**SEMICONDUCTORS**

IC	113	J126780500110-IL
----	-----	------------------

P.C.B SUB ASSY (GUIDE-L)**MISCELLANEOUS**

801	JHMX9800(ON)HAITI)	4330000120000-IL
-----	--------------------	------------------

P.C.B SUB ASSY (GUIDE-R)**MISCELLANEOUS**

901,902	JHMX9800(ON)HAITI)	4330000120000-IL
---------	--------------------	------------------

P.C.B SUB ASSY (H/P GUIDE)**MISCELLANEOUS**

601	BRACKET	4010210196000-IL
-----	---------	------------------

K P.C.B SUB ASSY (INPUT)**SEMICONDUCTORS**

IC	801	J084152180010-IL
IC	802	J121458000020-IL
Q	801,803,805,806	J5222875B0010-IL
Q	802,804,807,809	J520010200210-IL
Q	808	J5222875B0010-IL
D	801-810	K005041480030-IL

MISCELLANEOUS

JA	802-804	TER,RCA 6PIN	G603610A02000-IL
----	---------	--------------	------------------

RESISTORS

R	874,875	C060010165060-IL
---	---------	------------------

CAPACITORS

C	803,830	D02022306C060-IL
C	804,829	D02047306C060-IL
C	805,828	D020154078060-IL

L P.C.B SUB ASSY (VIDEO)**SEMICONDUCTORS**

IC	1007	J121458000020-IL
Q	1002-1005	J5222875B0010-IL

MISCELLANEOUS

JA	1001	TER,RCA 2PIN	G608610D0801Y-IL
----	------	--------------	------------------

M P.C.B SUB ASSY (SPEAKER)**SEMICONDUCTORS**

Q	401-404	J522010500210-IL
D	401-408	K005041480030-IL

MISCELLANEOUS

JA	401	TER,BOARD SCREW 4P	G612405E0200Y-IL
JA	402,403	TER,BOARD PUSH 4P	G594408SA030Y-IL
RY	401-403	RELAY	G680120502050-IL
RY	404	RELAY	G680240202030-IL

RESISTORS

R	4016,4017	C060033166520-IL
---	-----------	------------------

N P.C.B SUB ASSY (CNT)

P.C.B SUB ASSY (CNT) has no service part.

P P.C.B SUB ASSY (DSP)**SEMICONDUCTORS**

IC	100	J001421640040-IL
IC	101	8952519000030-IL
IC	102	J080320787010-IL