

Service Manual

ORDER NO.
RRV2596

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D811S-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	Remarks
	VSX-D811S-S		
KUXJI	○	AC120V	

● This service manual should be used together with the following manual(s):

Model No.	Order No.	Remarks
VSX-D811S/KUXJI	RRV2583	

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to ▼ mark on product are used for disassembly.

● Reference Nos. indicate the pages and Nos. in the service manual for the base model.

● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

■ CONTRAST TABLE

VSX-D811S-S/KUXJI and VSX-D811S/KUXJI are constructed the same except for the following :

Ref. No.	Mark	Symbol and Description	Part No.		Remarks
			VSX-D811S /KUXJI	VSX-D811S-S /KUXJI	
P7 - 13	NSP	PACKING SECTION Packing Case	XHD3202	XHD3302	*1
P9 - 41		EXTERIOR SECTION Bonnet Screw (Each side of Bonnet) N Label 811S/KU	XZN3112 FBT40P080FZK Not used	XZN3123 FBT40P080FNI XAL3121	
P11 - 11		FRONT PANEL SECTION Select Knob	XAB3023	XAB3024	
P11 - 12		Volume Knob	XAB3025	XAB3026	
P11 - 13		Power Button	XAD3123	XAD3129	
P11 - 15		Jog Button	XAD3124	XAD3131	
P11 - 16		Door Button	XAD3126	XAD3135	
P11 - 19		BN Cover	XAK3294	XAK3290	
P11 - 21		Pioneer Badge	XAM3006	VAM1129	
P11 - 23		Cushion	XED3001	XED3003	
P11 - 24	NSP	Front Panel	XMB3063	XMB3091	
P11 - 30		Door Assy	XXG3091	XXG3093	
P11 - 31		Door	XAK3275	XAK3281	
P11 - 32		Door Cover	XAK3276	XAK3283	
P11 - 33	NSP	Screw 2x35	XBA3007	XBA3008	

*1 Stick N Label on the Rear Panel.