


Service Manual

PIONEER
The Art of Entertainment

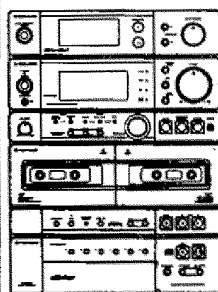

ORDER NO.
RRV1023

STEREO MULTI-PLAY CD CASSETTE DECK RECEIVER

XR-P740M

XR-P640M

XR-P340M

STEREO CD CASSETTE DECK RECEIVER

XR-P740

XR-P640

XR-P340

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model						Power Requirement	The voltage can be converted by the following method.
	XR-P740M	XR-P740	XR-P640M	XR-P640	XR-P340M	XR-P340		
SD	○	○	○	○	○	○	AC110V/120-127V/ 220V/240V	With the voltage selector
YPW	○	—	○	—	○	○	AC240V	—
KU	—	—	—	—	○	—	AC120V	—
KC	—	—	—	—	○	—	AC120V	—

CONTENTS

CHAPTER 1

1.1 SAFETY INFORMATION	1-2
1.2 SPECIFICATIONS	1-4
1.3 PANEL FACILITIES	1-5
1.4 DISASSEMBLY	1-8
1.5 BLOCK DIAGRAM	1-9
1.6 IC INFORMATION	1-11
1.7 ADJUSTMENTS	1-20

1.8 PARTS LIST FOR PACKING AND EXPLODED VIEWS	1-38
1.9 PCB PARTS LIST	1-47

CHAPTER 2

2.1 PACKING AND EXPLODED VIEWS ...	2-2
2.2 SCHEMATIC AND PCB CONNECTION DIAGRAMS	2-16

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2 Canada

PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

© PIONEER ELECTRONIC CORPORATION 1993

T-DFF DEC. 1993 Printed in Japan

CHAPTER 1

1.1 SAFETY INFORMATION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).

When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

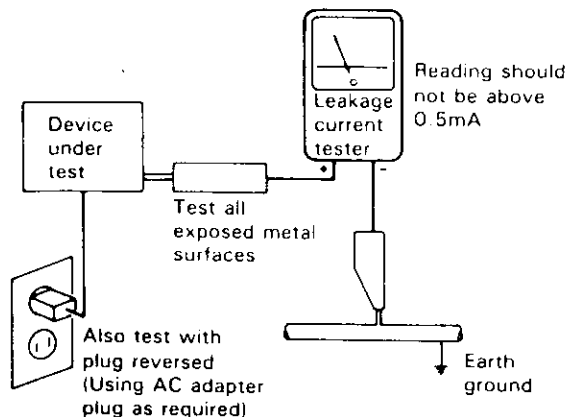

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

(FOR EUROPEAN MODEL ONLY)

VARO!
AVATTAESSA JA SUOJALUKITUS
OHITETTAESSA OLET ALTTIINA
NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.
ÄLÄ KATSO SÄTEESEEN.

ADVERSEL:
USYNLIG LASERSTRÅLING VED ÅBNING
NÅR SIKKERHEDSAFBRYDERE ER UDE AF
FUNKTION UNDGA UDSÆTTELSE FOR
STRÅLING.

VARNING!
OSYNLIG LASERSTRÅLNING NÅR DENNA
DEL ÄR ÖPPNAD OCH SPÄRREN
ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.



LASER
Kuva 1
Lasersäteilyn
varoituserkki

WARNING!
DEVICE INCLUDES LASER DIODE WHICH
EMITS INVISIBLE INFRARED RADIATION
WHICH IS DANGEROUS TO EYES. THERE IS
A WARNING SIGN ACCORDING TO PICTURE
1 INSIDE THE DEVICE CLOSE TO THE LASER
DIODE.



LASER
Picture 1
Warning sign for
laser radiation

IMPORTANT
THIS PIONEER APPARATUS CONTAINS
LASER OF CLASS 1.
SERVICING OPERATION OF THE APPARATUS
SHOULD BE DONE BY A SPECIALLY
INSTRUCTED PERSON.


LASER DIODE CHARACTERISTICS
MAXIMUM OUTPUT POWER: 5 mw
WAVELENGTH: 780-785 nm

LABEL CHECK


YPW type



VRW-329

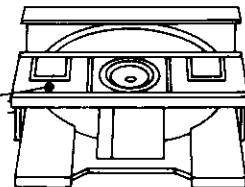

CD Single

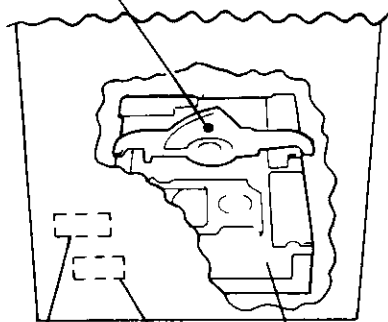

CD Multi

YPW type



ARW1021

YPW type



ARW1023

FOR CD MULTI

Additional Laser Caution

1. Laser Interlock Mechanism

The ON/OFF (ON : low level, OFF : high level) status of S601 (LPS1) and S602 (LPS2) switches for detecting the loading state is detected by the system microprocessor, and the design prevents laser diode oscillation except when both switches (LPS1 and LPS2) are ON (low level or clamped state).

Thus, interlock will no longer function if switches S601 (LPS1) and S602 (LPS2) are deliberately shorted.

The interlock also does not operate in the test mode*.

Laser diode oscillation will continue, if pin 1 of M51593FP (IC101) on the PRE-AMP BOARD assembly loaded on pickup assembly are connected to GND, or pin 19 is connected to low level (ON), or else the terminals of Q101 are shorted to each other (fault condition).

2. When the cover is opened with the servo mechanism block removed and turned over, close viewing of the objective lens with the naked eye will cause exposure to a Class 1 laser beam.

*2M1A

* Refer to page 1-29.

FOR CD SINGLE

Additional Laser Caution

1. Laser Interlock Mechanism

The position of the switch (S601) for detecting loading state is detected by the system microprocessor, and the design prevents laser diode oscillation when the switch (S601) is not on CLMP terminal side (CLMP signal is OFF or high level.).

Thus, the interlock will no longer function if the switch (S601) is deliberately set to CLMP terminal side. (low level).

The interlock also does not function in the test mode*.

Laser diode oscillation will continue, if pin 1 of M51593FP (IC101) on the PRE-AMP BOARD ASSY mounted on the pickup assembly is connected to GND, or pin 19 is connected to low level (ON), or else the terminals of Q101 are shorted to each other (fault condition).

2. When the cover is opened, close viewing of the objective lens with the naked eye will cause exposure to a Class 1 laser beam.

* Refer to page 1-29.

1.2 SPECIFICATIONS

STEREO CD CASSETTE DECK RECEIVER/STEREO MULTI-PLAY CD CASSETTE DECK RECEIVER: XR- P740/XR-P740M/XR-P640/XR-P640M/XR-P340/XR- P340M

Amplifier section

<XR-P740/XR-P740M>

FRONT

Continuous Average Power Output is 70 Watts* per channel, min., at 8 ohms from 50 Hertz with no more than 1 % total harmonic distortion.**

Continuous Power Output (RMS) 100 W + 100 W
 (1 kHz, T.H.D. 10%, 8 Ω)

Peak Music Power 1050 W

REAR

Continuous Power Output (RMS) 15 W
 (1 kHz, T.H.D. 10%, 16 Ω x 2)

CENTER

Continuous Power Output (RMS) 15 W
 (1 kHz, T.H.D. 10%, 16 Ω x 2)

<XR-P640/XR-P640M>

FRONT

Continuous Average Power Output is 70 Watt* per channel, min., at 8 ohms from 50 Hertz with no more than 1 % total harmonic distortion.**

Continuous Power Output (RMS) 100 W + 100 W
 (1 kHz, T.H.D. 10%, 8 Ω)

Peak Music Power 950 W

REAR

Continuous Power Output (RMS) 15 W
 (1 kHz, T.H.D. 10%, 16 Ω x 2)

<XR-P340/XR-P340M>

FRONT

Continuous Average Power Output is 33 Watts* per channel, min., at 8 ohms from 50 Hertz with no more than 1 % total harmonic distortion.**

Continuous Power Output (RMS) 50 W + 50 W
 (1 kHz, T.H.D. 10%, 8 Ω)

Peak Music Power 500 W

FM/AM tuner section

FM Tuner Section

Frequency Range

(9 kHz/10 kHz step) 7.5 MHz to 108 MHz

Antenna Input 75 ohms unbalanced

AM Tuner Section

Frequency Range

With 10 kHz step 530 kHz to 1,700 kHz

With 9 kHz step 531 kHz to 1,602 kHz

Antenna Loop Antenna

Miscellaneous

Power Requirements

Singapore model 220-230/240 V, 50/60 Hz

Other model 110/120-127/220/240 V, 50/60 Hz

Power Consumption

(XR-P740/XR-P740M) 444 W

(XR-P640/XR-P640M) 432 W

(XR-P340/XR-P340M) 276 W

Dimensions 260 (W) x 371.5 (H) x 295 (D) mm

(XR-P740/XR-P740M/XR-P640/XR-P640M)

260 (W) x 310 (H) x 295 (D) mm

(XR-P340/XR-P340M)

Weight (without package)

(XR-P740M/XR-P640M) 9.5 kg

(XR-P740/XR-P640) 8.8 kg

(XR-P340M) 7.4 kg

(XR-P340) 6.7 kg

CD Section

Type Compact disc digital audio system

Wow and Flutter Limit of measurement
 ($\pm 0.001\%$ W.PEAK) or less (EIAJ)

Cassette deck section

Systems 4 track, 2-channel stereo

Heads Recording/playback head x 1


Playback head x 1

Erasing head x 1

Motor DC servo motor x 1

Tape type TYPE I (Normal) tape/TYPE II (CrO₂) tape

1.3 PANEL FACILITIES

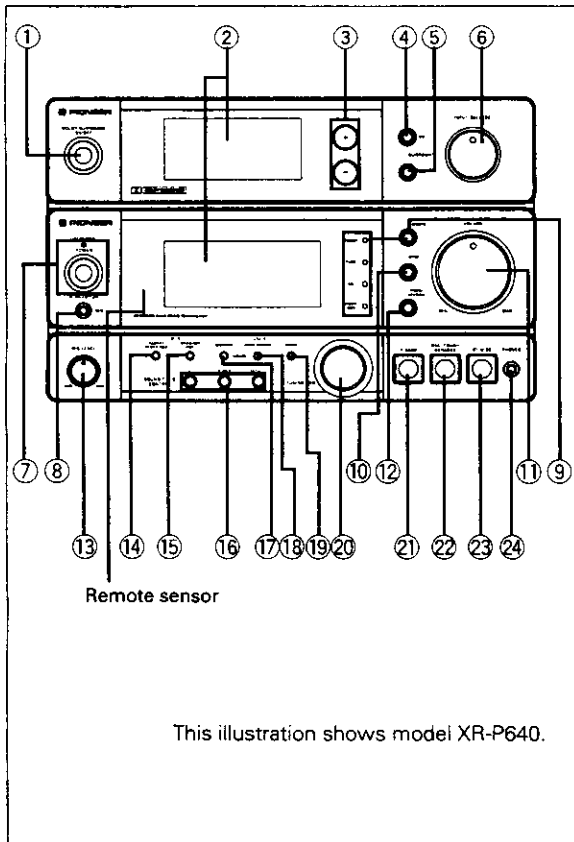

RECEIVER

The XR-P340/XR-P340M is not equipped with the buttons ①–

- ① **DOLBY SURROUND ON/OFF button**
(XR-P640/XR-P640M only)
- ①* **CENTER/REAR button**
(XR-P740/XR-P740M only)
- ② **Display**
- ③ **REAR LEVEL (+, -) buttons**
(XR-P640/XR-P640M only)
- ③* **CENTER/REAR LEVEL (+, -) buttons**
(XR-P740/XR-P740M only)
- ④ **SURROUND ON button**
(XR-P640/XR-P640M only)
- ④* **CENTER MODE button**
(XR-P740/XR-P740M only)
- ⑤ **SURROUND OFF button**
(XR-P640/XR-P640M only)
- ⑤* **□ MODE button** (XR-P740/XR-P740M only)
- ⑥ **INPUT BALANCE control**
(XR-P640/XR-P640M only)
- ⑥* **BALANCE (L,R) control**
(XR-P740/XR-P740M only)
- ⑦ **POWER STANDBY/ON switch and STANDBY indicator**

 
This is the switch for electric power.

ON: When set to the ON position, power is supplied and the unit becomes operational.

STANDBY: When set to the STANDBY position, the main power flow is cut and the unit is no longer fully operational. A minute flow of power feeds the unit to maintain operation readiness. (The STANDBY indicator lights.)

- ⑧ **Microphone jack (MIC)**
- ⑨ **FUNCTION (*DEMO) button and indicators**

Each time this button is pressed, the function changes in the following sequence (The selected function is displayed in the display window and indicator.):




- ⑩ **BAND button**
- ⑪ **VOLUME control**
- ⑫ **FREQ/STATION button**
- ⑬ **MIC LEVEL control**
- ⑭ **CLOCK/CLOCK ADJ button**
- ⑮ **WAKE-UP/REC button**
- ⑯ **SOUND FIELD CONTROL buttons**
(HALL, DISCO, MOVIE)
- ⑰ **MEMORY button**
- ⑱ **AUTO TUNING button**
- ⑲ **MONO button**
- ⑲ **TUNING JOG knob**
- ⑲ **P. BASS button**
- ⑲ **ONE-TOUCH KARAOKE button**
- ⑲ **ST WIDE button** (XR-P740/XR-P740M/XR-P640/XR-P640M)
- ⑲* **SURROUND & ST WIDE button**
(XR-P340/XR-P340M)
- ⑲ **Headphones jack (PHONES)**

* Manufactured under license from Dolby Laboratories Licensing Corporation.

DOLBY and the double-D symbol □ are trademarks of Dolby Laboratories Licensing Corporation.

TAPE DECK

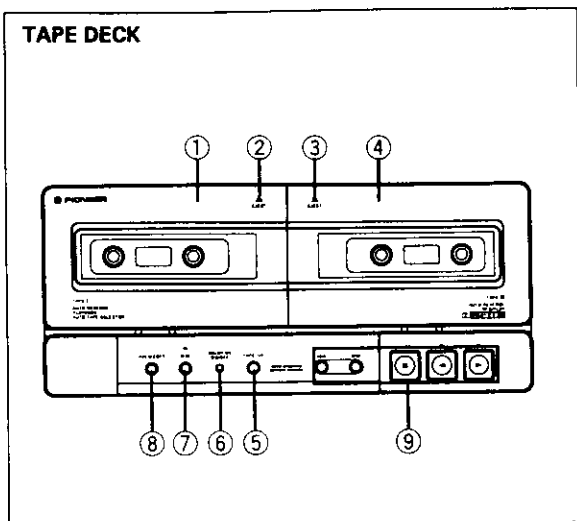

TAPE DECK

- ① **TAPE I cassette door**
- ② **TAPE I EJECT section (▲)**
- ③ **TAPE II EJECT section (▲)**
- ④ **TAPE II cassette door**
- ⑤ **TAPE 1/2 selector button**
- ⑥ **DOLBY* NR B/C OFF button (XR-P740/XR-P740M and XR-P640/XR-P640M)**
Each time this button is pressed, DOLBY NR setting changes B → C → OFF.
- ⑥' **DOLBY* NR ON/OFF button (XR-P340/XR-P340M only)**
Each time this button is pressed, DOLBY NR system turns ON and OFF.
- ⑦ **Rec pause button (● II)**
- ⑧ **ASES (Auto Synchro Editing System)/COPY button**
- ⑨ **TAPE operation buttons (PLAY ◀▶, STOP ■, Fast ◀◀▶▶)**


■ Auto Function

This model is equipped with "Auto Function" operation, so when the switch for PLAY/PAUSE, DISC SELECTOR 1-6, RND, TAPE 1/2, PLAY (tape), or BAND is pressed, the function switches automatically. Use the FUNCTION button to select the component connected to the VIDEO/AUX IN jacks, since Auto Function is not effective for this.


NOTE:

The function cannot be switched during recording and tape copying.

MULTI-PLAY CD PLAYER

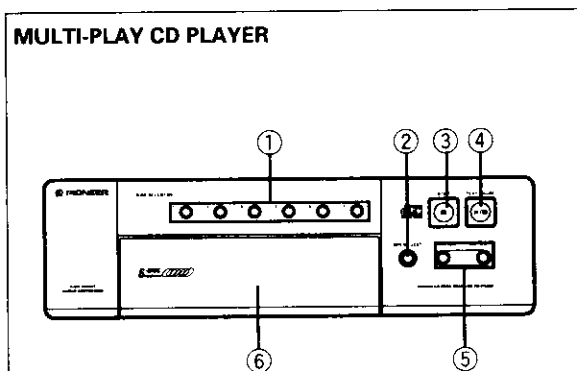

CD PLAYER

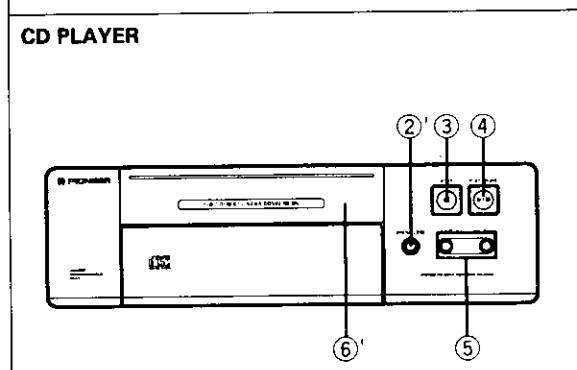


CD PLAYERS

- ① **DISC SELECTOR buttons (1-6)**
- ② **OPEN/EJECT button**
- ②' **OPEN/CLOSE button**
- ③ **STOP button (■)**
- ④ **PLAY/PAUSE button (▶/II)**
- ⑤ **Manual/Track search buttons (◀◀ • ◀, ▶▶ • ▶▶▶)**
- ⑥ **Magazine slot door**
- ⑥' **Disc tray**


- *Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.*
- *"DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.*

REMOTE CONTROL UNIT


**<XR-P740/
XR-P740M>**

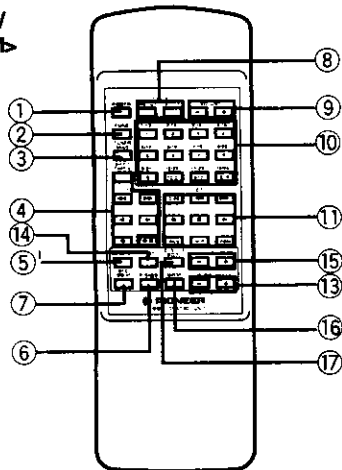

**<XR-P640/
XR-P640M>**

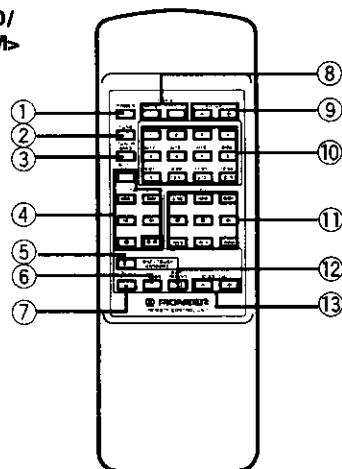

**<XR-P340/
XR-P340M>**

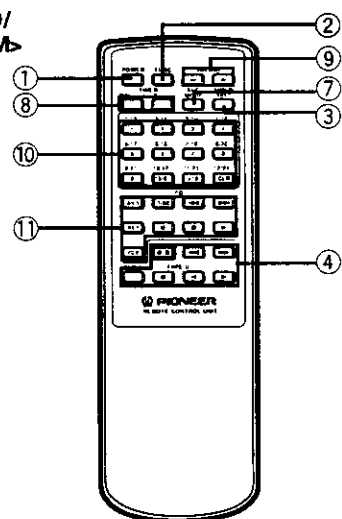


REMOTE CONTROL UNIT

① POWER button

② Function button (FUNC)

 Each time this button is pressed, the function changes in the following sequence:



③ TUNER BAND button

④ TAPE operation buttons

(SHIFT TAPE I, Fast ◀▶▶▶, Play ▶▶, Stop ■, Rec pause ● II)

To operate TAPE I, press the desired deck operation button while pressing SHIFT TAPE I. (Except for the Rec pause ● II button)

⑤ ONE-TOUCH KARAOKE button

(XR-P640/XR-P640M only)

⑤ KARAOKE button (XR-P740/XR-P740M only)

⑥ P. BASS button (Except for XR-P340/XR-P340M)

⑦ SFC MODE button

⑧ TIMER control buttons (WAKE-UP, SLEEP)

⑨ VOLUME (-/+) buttons

⑩ Number buttons

These buttons are used for selecting track numbers of a CD and scanning preset stations.

⑪ CD operation buttons

(DISC, Track search ◀◀▶▶▶▶, Pause II, Stop ■, Play ▶▶, RND (Random), REP (Repeat), PGM (Program))

⑫ □ SURROUND button (XR-P640/XR-P640M only)

⑬ REAR LEVEL (-/+) buttons (Except for XR-P340/XR-P340M)

⑭ Test tone button (TEST) (XR-P740/XR-P740M only)

⑮ CENTER LEVEL (-/+) buttons (XR-P740/XR-P740M only)

⑯ □ MODE button (XR-P740/XR-P740M only)

⑰ CENTER MODE button (XR-P740/XR-P740M only)

1.4 DISASSEMBLY

■ CD MECHA ASSY DIAGNOSIS AND REPLACEMENT

1. Remove the cover.
2. OPEN the tray and lift the tray cap, pulling the bottom of the tray cap toward you. After removing the tray cap, CLOSE the tray.
3. Remove the VOL knob and 2 screws (BBZ30P080FZK) holding the VR Assy in place.
4. Remove the 3 screws between the front panel and the chassis.
L/R sides: CBZ30P080FMC × 2
Bottom side: BBZ30P080FZK × 1
5. Remove the lead wire from the cassette mecha Assy from the chassis.
Screw: BBZ30P080FZK × 1
6. Remove the front panel from the chassis (watching out for the claw on the left and right), and open the side of the AF CD Assy. (Refer to Fig. 1)

NOTE:

Do not remove the rear panel and AF CD Assy at this time.

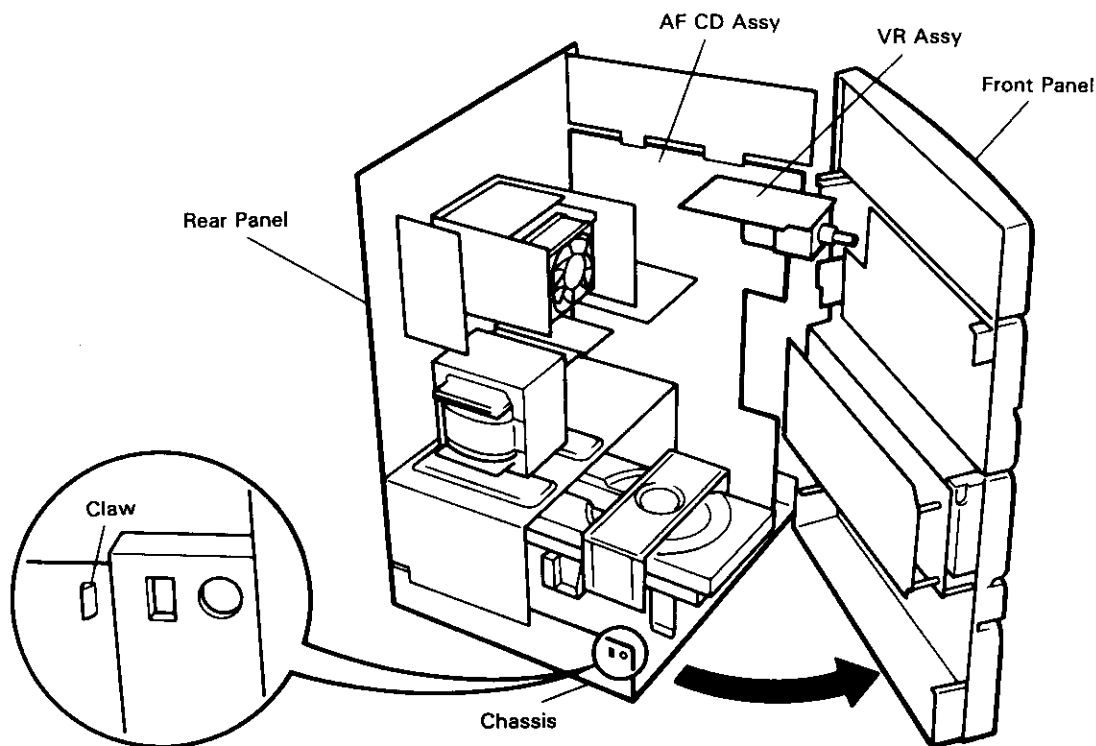


Fig. 1

Under these conditions most of the PCB diagnosis and parts replacement can be performed.

■ REMOVAL OF AF CD ASSY

1. Under the conditions of the previous paragraph, remove the rear panel and AF CD Assy.
(Do not separate the rear panel and AF CD Assy.)


XR-P340M (except KU type) and XR-P340 ... Between rear panel and chassis.

Screw: BBZ30P080FZK × 2


XR-P740M, 740, 640M, 640 and XR-P340M/KU ... Between rear panel and trans frame.

Screw: BBZ30P080FZK × 3

1.5 BLOCK DIAGRAM

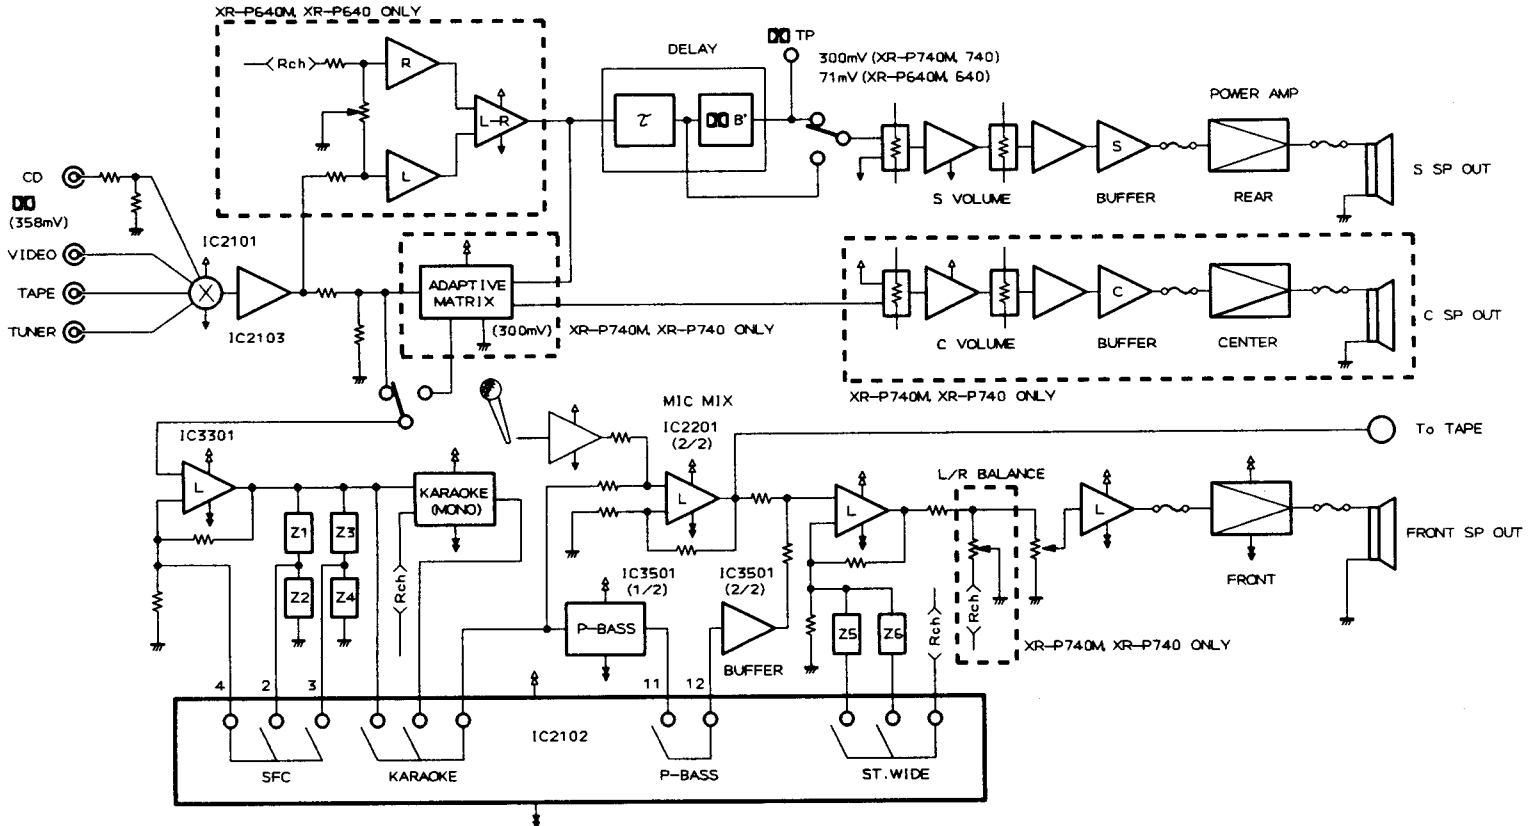

POWER AMP MODULE SECTION

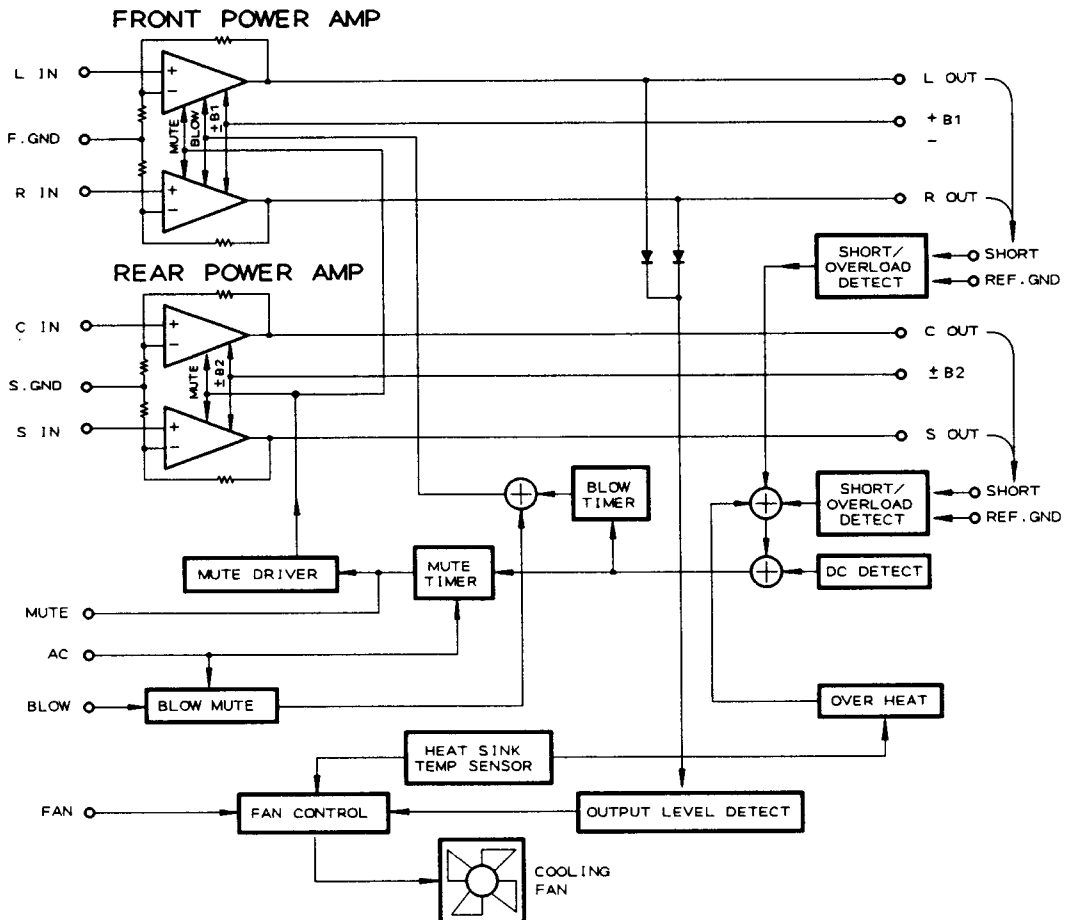

● Pin Function of Power Amp Module

Connector	No.	Name	I/O	Description
CN7101	1	+12V. M	O	+12V separate system stabilized output
	2	UNREG -12	I	Unstabilized power input for -12V
	3	AC	I	AC detection input; for power ON/OFF and MUTE.
	4	-12V	O	Stabilized power output for -12V
	5	MUTE	I/O	Mute external input; outputs internal mute conditions; cancels forced mute.
	6	REF. GND	I	GND for protective circuit; reference GND for short detection
	7	BLOW	I	BLOW circuit external output; ON at $\pm 0.5V$ or more.
	8	REG. GND	I	Reference GND for stabilized power source
	9	UNREG +5	I	Unstabilized power input for +5.6V
	10	UNREG +12	I	Unstabilized power input for +12V and +12V. M
	11	+5.6V	O	+5.6V stabilized output
	12	+12V	O	+12V stabilized output
CN7102	1	C IN	I	Center signal input
	2	S. GND	I	Signal input GND; floating interior type
	3	S IN	I	Surround signal input
	4	OVERLOAD	I	Short detection input for Surround and Center channels
	5	+B2	I	Power supply (+) for Surround and Center channels
	6	-B2	I	Power supply (-) for Surround and Center channels
	7	C OUT	O	Center speaker output
	8	S OUT	O	Surround speaker output
CN7502	1	REF. GND	I	Reference GND for short detection
	2	L OUT	O	Left speaker output
	3	R OUT	O	Right speaker output
	4	FAN	I	Forced fan circuit input (LOW speed)
	5	+B1	I	Power supply (+) for L/R channels
	6	-B1	I	Power supply (-) for L/R channels
	7	SHORT	I	Short detection input for L/R channels
	8	L IN	I	Left signal input
	9	F. GND	I	Signal input GND; floating interior type
	10	R IN	I	Right signal input


1.6 IC INFORMATION

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


TC9268F (IC8401 : AF CD ASSY)

- Σ - Δ Modulation-Type DA Converter with Built-in 8-fold Oversampling Digital Filter

- Pin Assignment (Top View)

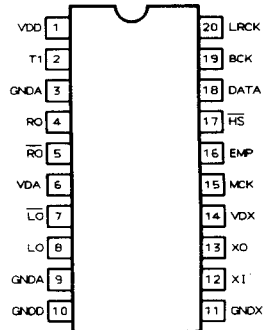

- Block Diagram

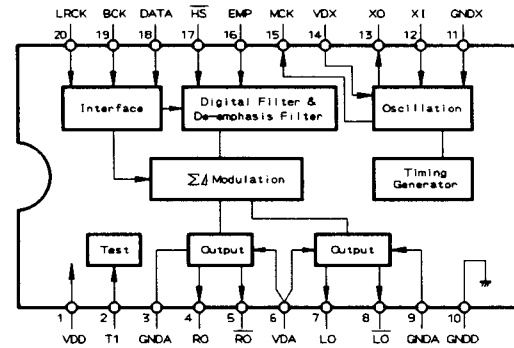

- Pin Function


No.	Symbol	I/O	Description	Remarks
1	VDD	—	Digital part power supply terminal	
2	T1	I	Test terminal; normally used on "L"	
3	GNDA	—	Analog part ground terminal for R channel	
4	RO	O	R channel data right output terminal	
5	$\overline{RO}$	O	R channel data inverse output terminal	
6	VDA	—	Analog part power supply terminal	
7	$\overline{LO}$	O	L channel data inverse output terminal	
8	LO	O	L channel data right output terminal	
9	GNDA	—	Analog part ground terminal for L channel	
10	GNDD	—	Digital part ground terminal	
11	GNDX	—	Crystal-oscillating part ground terminal	
12	XI	I	Crystal oscillator connection terminal; oscillates clock needed by system	
13	XO	O		
14	VDX	—	Crystal-oscillating part power terminal	
15	MCK	O	System clock output terminal	
16	EMP	I	De-emphasis filter control terminal; "H": de-emphasis filter ON, "L": de-emphasis filter OFF	
17	$\overline{HS}$	I	Standard/double-speed operating mode changeover terminal; "H": standard operation, "L": double-speed operation	
18	DATA	I	Data input terminal	
19	BCK	I	Bit clock input terminal	
20	LRCK	I	LR clock input terminal	

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

■ PD4493A (IC1901 : DISPLAY ASSY for MULTI CD)

● System Control Micro-computer

● Pin Assignment (Top View)

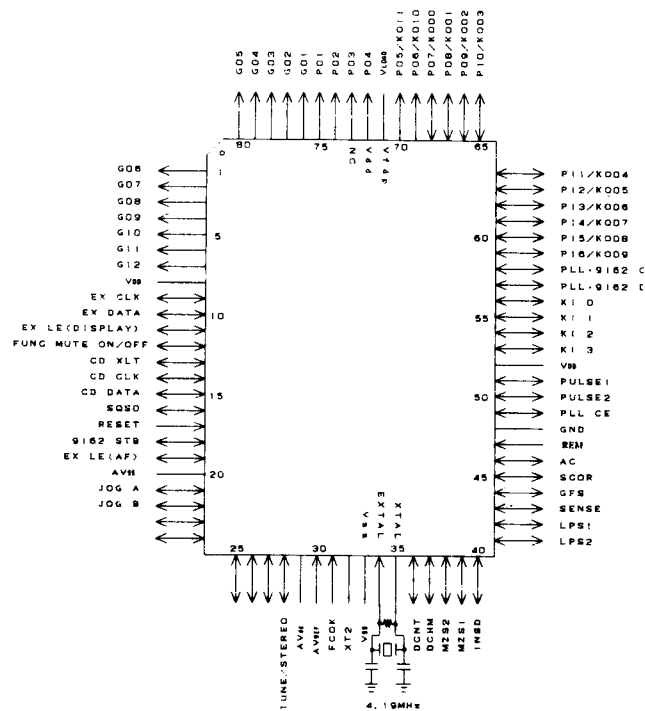

No.	Name	Function	I/O	Description
15	SO1	CD DATA	C	LSI control data serial output
16	SI1	SQSO	I	Subcode Q data serial input
17	RESET	—	—	Reset input
18	P74	9162 STB	N	9162 strobe output
19	P73	EX LE (AF)	N	Extension port (AF system) latch pulse
20	AVss	AVss	—	Connected to GND.
21	ANI7	JOG A	I	JOG Input
22	ANI6	JOG B		
23	ANI5	—	A/D	Spectrum analyzer input
24	ANI4	—		
25	ANI3	—		
26	ANI2	—		
27	P11	—	A/D	TUNE/STEREO status discrimination input
28	P10	TUNE/STEREO		
29	AVDD	AVDD	—	Connected to +5V.
30	AVREF	AVREF	—	
31	P04	FCOK	I	Focus OK input
32	XT2	—	O	Open
33	Vss	—	—	Connected to GND.
34	X1	—	I	Connected to Oscillator (4.19MHz).
35	X2	—	O	
36	P37	DCNT	I	Disc count pulse input
37	P36	DCHM	I	Disc selector home SW
38	P35	MZS2	I	Magazine discrimination SW input
39	P34	MZS1		
40	P33	INSD	I	Slider inside SW input
41	P32	LPS2	I	Load position discrimination input
42	P31	LPS1		

● Pin Function

No.	Name	Function	I/O	Description
1	FIP6	6G	P	FL grid
2	FIP5	7G		
3	FIP4	8G		
4	FIP3	9G		
5	FIP2	10G		
6	FIP1	11G		
7	FIP0	12G		
8	VDD	VDD	—	Connected to +5V.
9	SCK0	EX CLK	N	Extension port serial clock output
10	SO0	EX DATA	N	Extension port serial data output
11	P25	EX LE (DISPLAY)	C	Extension port (display system) latch pulse
12	P24	POWER ON/OFF	C	POWER ON/OFF
13	P23	CD XLT	C	LSI control data latch pulse
14	SCK1	CD CLK	C	LSI control data serial clock

No.	Name	Function	I/O	Description
43	P30	SENS	I	LSI operating status multi-mode input
44	P03	GFS	I	Frame/synch/lock input
45	INTP2	SCOR	I	Subcode synch SO + SI input
46	INTP1	AC	I	AC input
47	INTP0	REM	I	Remote control signal input
48	IC	—	—	Connected to GND.
49	P72	PLL CE	N	PLL latch pulse
50	P71	PULSE2	I	Tape 2 reel pulse input
51	P70	PULSE1	I	Tape 1 reel pulse input
52	V _{DD}	—	—	Connected to +5V.
53	P127	—	I	Key scan input
54	P126	—		
55	P125	—		
56	P124	—		
57	P123	PLL 9162 DATA/ KO11	P	PLL and 9162 serial data
58	P122	PLL 9162 CLK/ KO10	P	PLL and 9162 clock
59	FIP27	P16/KO9	P	FL segment and key scan output
60	FIP26	P15/KO8	P	
61	FIP25	P14/KO7	P	
62	FIP24	P13/KO6	P	
63	FIP23	P12/KO5	P	
64	FIP22	P11/KO4	P	
65	FIP21	P10/KO3	P	
66	FIP20	P9/KO2	P	
67	FIP19	P8/KO1	P	
68	FIP18	P7/KO0	P	

No.	Name	Function	I/O	Description
69	FIP17	P6	P	FL segment
70	FIP16	P5	P	
71	V _{LOAD}	—	—	Connected to -30V.
72	FIP15	P4	P	FL segment
73	FIP14	P3	P	
74	FIP13	P2	P	
75	FIP12	P1	P	
76	FIP11	1G	P	FL grid
77	FIP10	2G	P	
78	FIP9	3G	P	
79	FIP8	4G	P	
80	FIP7	5G	P	

Note)

I : Input

A/D : Analog Input

O : Cmos Output

N : Nch Open Drain Output


P : Pch Open Drain Output

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

■ PD4492A (IC1901 : DISPLAY ASSY for SINGLE CD)

● System Control Micro-computer

● Pin Assignment (Top View)

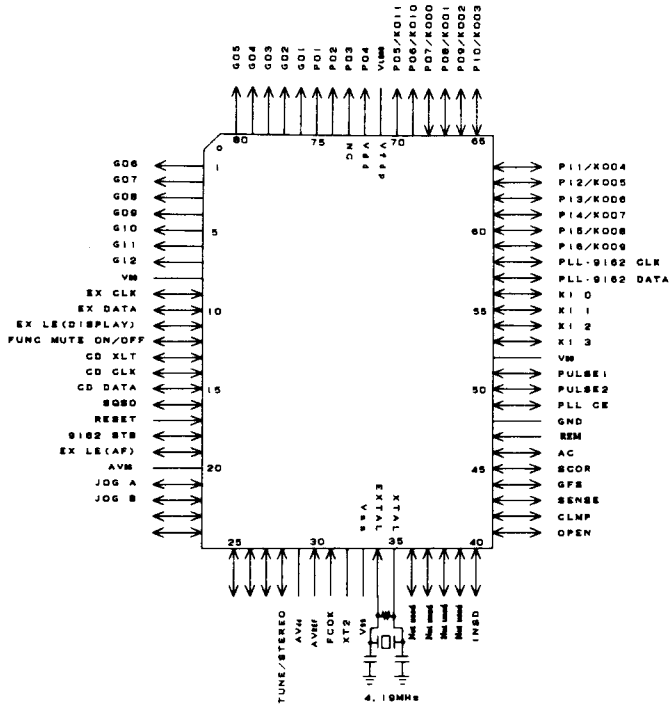

● Pin Function

No.	Name	Function	I/O	Description
1	FIP6	6G	P	FL grid
2	FIP5	7G		
3	FIP4	8G		
4	FIP3	9G		
5	FIP2	10G		
6	FIP1	11G		
7	FIP0	12G		
8	V _{DD}	V _{DD}	—	Connected to +5V.
9	SCK0	EX CLK	N	Extension port serial clock output
10	SO0	EX DATA	N	Extension port serial data output
11	P25	EX LE (DISPLAY)	C	Extension port (display system) latch pulse
12	P24	POWER ON/OFF	C	POWER ON/OFF
13	P23	CD XLT	C	LSI control data latch pulse
14	SCK1	CD CLK	C	LSI control data serial clock

No.	Name	Function	I/O	Description
15	SO1	CD DATA	C	LSI control data serial output
16	SI1	SQSO	I	Subcode Q data serial input
17	RESET	—	—	Reset input
18	P74	9162 STB	N	9162 strobe output
19	P73	EX LE (AF)	N	Extension port (AF system) latch pulse
20	AV _{SS}	AV _{SS}	—	Connected to GND.
21	ANI7	JOG A	I	JOG Input
22	ANI6	JOG B		
23	ANI5	—	A/D	Spectrum analyzer input
24	ANI4	—		
25	ANI3	—		
26	ANI2	—		
27	P11	—	—	—
28	P10	TUNE/STEREO	A/D	TUNE/STEREO status discrimination input
29	AV _{DD}	AV _{DD}	—	Connected to +5V.
30	AV _{REF}	AV _{REF}	—	
31	P04	FCOK	I	Focus OK input
32	XT2	—	O	Open
33	V _{SS}	—	—	Connected to GND.
34	X1	—	I	Connected to Oscillator (4.19MHz).
35	X2	—	O	
36	P37	—	C	Not used
37	P36			
38	P35			
39	P34			
40	P33	INSD	I	Slider inside SW input
41	P32	OPEN	I	OPEN completion SW input
42	P31	CLAMP	I	CLAMP completion SW input

No.	Name	Function	I/O	Description
43	P30	SENS	I	LSI operating status multi-mode input
44	P03	GFS	I	Frame/synch/lock input
45	INTP2	SCOR	I	Subcode synch SO + SI input
46	INTP1	AC	I	AC input
47	INTP0	REM	I	Remote control signal input
48	IC	—	—	Connected to GND.
49	P72	PLL CE	N	PLL latch pulse
50	P71	PULSE2	I	Tape 2 reel pulse input
51	P70	PULSE1	I	Tape 1 reel pulse input
52	V _{DD}	—	—	Connected to +5V.
53	P127	—	I	Key scan input
54	P126	—		
55	P125	—		
56	P124	—		
57	P123	PLL 9162 DATA/ KO11	P	PLL and 9162 serial data
58	P122	PLL 9162 CLK/ KO10	P	PLL and 9162 clock
59	FIP27	P16/KO9	P	FL segment and key scan output
60	FIP26	P15/KO8	P	
61	FIP25	P14/KO7	P	
62	FIP24	P13/KO6	P	
63	FIP23	P12/KO5	P	
64	FIP22	P11/KO4	P	
65	FIP21	P10/KO3	P	
66	FIP20	P9/KO2	P	
67	FIP19	P8/KO1	P	
68	FIP18	P7/KO0	P	

No.	Name	Function	I/O	Description
69	FIP17	P6	P	FL segment
70	FIP16	P5	P	
71	V _{LOAD}	—	—	Connected to -30V.
72	FIP15	P4	P	FL segment
73	FIP14	P3	P	
74	FIP13	P2	P	
75	FIP12	P1	P	
76	FIP11	1G	P	FL grid
77	FIP10	2G	P	
78	FIP9	3G	P	
79	FIP8	4G	P	
80	FIP7	5G	P	

Note)

I : Input

A/D : Analog Input

O : Cmos Output

N : Nch Open Drain Output

P : Pch Open Drain Output

XR-P740M, XR-P640M, XR-P340M
XR-P740, XR-P640, XR-P340

■ PDG108A (IC3951 : ADDON DISPLAY ASSY)
(Except XR-P340M and XR-P340)

● **System Control Micro-computer**

● **Pin Function**

No.	Name	Function	I/O	Description
1	PE3/INT3	NO USE	—	
2	PE4/RMC	RMC IN	I	Remote control signal input
3	PE5	NO USE	—	
4	PE6	PRO. LOGI	O	Pro-logic ON output
5	PE7/T0	NO USE	—	
6	PB0			
7	PB1/CS0			
8	PB2/SCK0			
9	PB3/SI0			
10	PB4/SO0	9154 CLK	O	9154 CLK output
11	PB5/SCK1	9154 STB	O	9154 STB output
12	PB6/SI1	9154 DATA	O	9154 DATA output
13	PB7/SO1	NO USE	—	
14	PC0/KR0	KEY IN0	I	Key scan, Key return signal input
15	PC1/KR1	KEY IN1		
16	PC2/KR2	NO USE	—	
17	PC3/KR3			
18	PC4/KR4			
19	PC5/KR5			
20	PC6/KR6			
21	PC7/KR7			
22	PA0/AN0	LEVEL L IN	I	A/D input for level meter (Lch)
23	PA1/AN1	LEVEL R IN	I	A/D input for level meter (Rch)
24	PA2/AN2	Destination	I	Prologic/Dolby surround changeover
25	PA3/AN3	SURROUND SEL	O	DOLBY/THROUGH changeover output for FRONT & REAR signals.
26	PA4/AN4	F MUTE	O	Front mute output


No.	Name	Function	I/O	Description
27	PA5/AN5	NO USE	—	
28	PA6/AN6			
29	PA7/AN7			
30	RST	—	—	Reset signal input
31	EXTAL		—	Connected to ceramic oscillator (8MHz).
32	XTAL			
33	VSS	VSS	—	GND
34	PD0/S0	S MUTE	O	Surround mute output
35	PD1/S1	C MUTE	O	Center mute output
36	PD2/S2	C MODE2	O	Center mode 2 output
37	PD3/S3	C MODE1	O	Center mode 1 output
38	PD4/S4	N MODE2	O	Noise mode 2 output
39	PD5/S5	N MODE1	O	Noise mode 1 output
40	PD6/S6	N CH SEL2	O	Noise channel select 2 output
41	PD7/S7	N CH SEL1	O	Noise channel select 1 output
42	PF0/S8	FL ON	O	FL ON output
43	PF1/S9	NO USE	—	
44	PF2/S10			
45	PF3/S11			
46	PF4/S12			
47	PF5/S13	S1	O	FL control segment output
48	PF6/S14	S2		
49	PF7/S15	S3		
50	S16	S4		
51	S17	S5		
52	S18	S6/KO2	O	FL control segment/Key scan strobe output
53	S19	S7/KO1		
54	S20	S8/KO0		

■ **TC7S04F (IC8402 : AF CD ASSY)**

● **Inverter**

● **Pin Assignment (Top View)**




No.	Name	Function	I/O	Description
55	T15/S21	S9	O	FL control segment output
56	T14/S22	S10		
57	T13/S23	S11		
58	T12/S24	S12		
59	T11/S25	S13		
60	T10/S26	S14		
61	T9/S27	S15		
62	T8/S28	S16		
63	T7	NO USE	—	
64	T6			
65	T5			
66	T4			
67	T3			
68	T2	G3	O	FL control timing output
69	T1	G2		
70	T0	G1		
71	VFDP	VFDP	—	Offset voltage (−30V) for FL control.
72	VDD	VDD	—	+5V Power Supply
73	NC	VDD	—	Connected to VDD.
74	PG0	DOLBY OFF	I	DOLBY NR OFF input
75	PG1	NO USE	—	
76	PG2			
77	PG3			
78	PE0/INT0	POWER ON	I	Power ON input
79	PE1/INT1	Destination	P	Domestic/foreign changeover
80	PE2/INT2	NO USE	—	

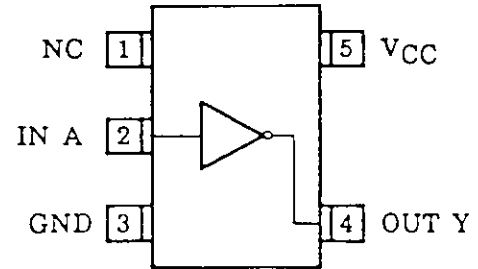


XR-P740M, XR-P640M, XR-P340M
XR-P740, XR-P640, XR-P340

■ AAV7002 (V1701 : DISPLAY ASSY)

- **FL Tube**
- **Grid Assignment**

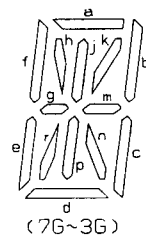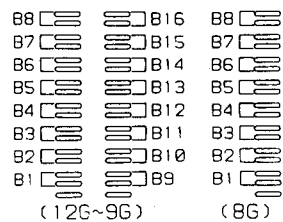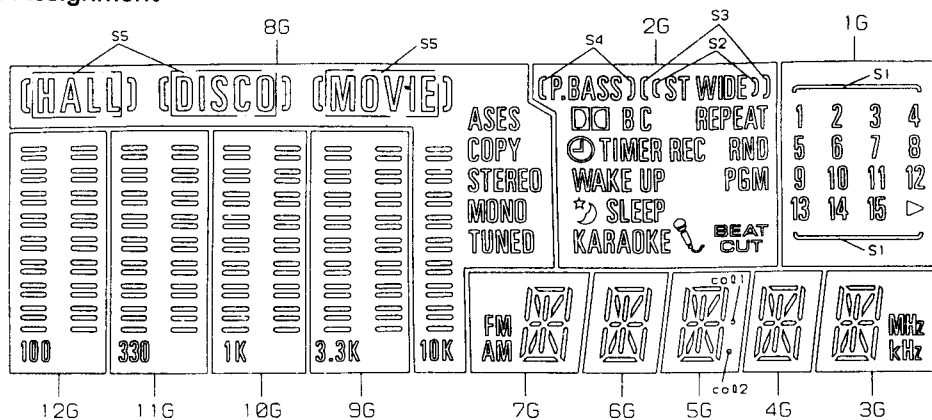

- Pin Assignment

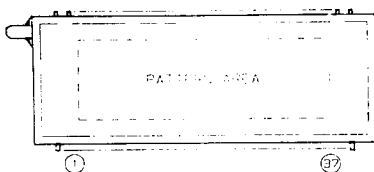

● Pin Connection

PIN NO	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	2	2	2	2	2	2	2	3	3	3	3	3	3		
CONNECTION	F	F	N	N	2	1	0	9	8	7	6	5	4	3	2	1	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	F	F	
	1	1	P	P	G	G	G	G	G	G	G	G	G	G	G	G	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	P	P	2	2


NOTE 1) F1,F2 --- Filament
2) NP ----- No pin
3) DL ----- Datum Line
4) 1G~12G --- Grid

- **Anode Connection**


	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	B1	B1	B1	B1	B1	AM	-	col2	-	KHz	KARAOKE	14
P2	B2	B2	B2	B2	B2	n	n	n	n	n	PGM	▷
P3	B3	B3	B3	B3	B3	e	e	e	e	e	RND	10
P4	B4	B4	B4	B4	B4	g	g	g	g	g	⌚ TIMER	12
P5	B5	B5	B5	B5	B5	b	b	b	b	b	C	6
P6	B6	B6	B6	B6	B6	k	k	k	k	k	DK	8
P7	B7	B7	B7	B7	B7	j	j	j	j	j	S3	2
P8	B8	B8	B8	B8	B8	a	a	a	a	a	P. BASS STWIDE	4
P9	B9	B9	B9	B9	{ (HALL) }	d	d	d	d	d	BEAT CUT	13
P10	B10	B10	B10	B10	{ (DISCO) }	p	p	p	p	p	♪ SLEEP	15
P11	B11	B11	B11	B11	{ (MOVIE) }	r	r	r	r	r	WAKE UP	9
P12	B12	B12	B12	B12	TUNED	c	c	c	c	c	REC	11
P13	B13	B13	B13	B13	MOMO	m	m	m	m	m	REPEAT	5
P14	B14	B14	B14	B14	STEREO	f	f	f	f	f	B	7
P15	B15	B15	B15	B15	COPY	h	h	h	h	h	S2	1
P16	B16	B16	B16	B16	ASES	FM	-	col1	-	MHz	S4	3
P17	100	330	1K	3.3K	10K S5	-	-	-	-	-	-	S1

■ **AAV7001 (V3951 : ADDON DISPLAY ASSY)**
(Except XR-P340M and XR-P340)

- **FL Tube**
- **Grid Assignment**

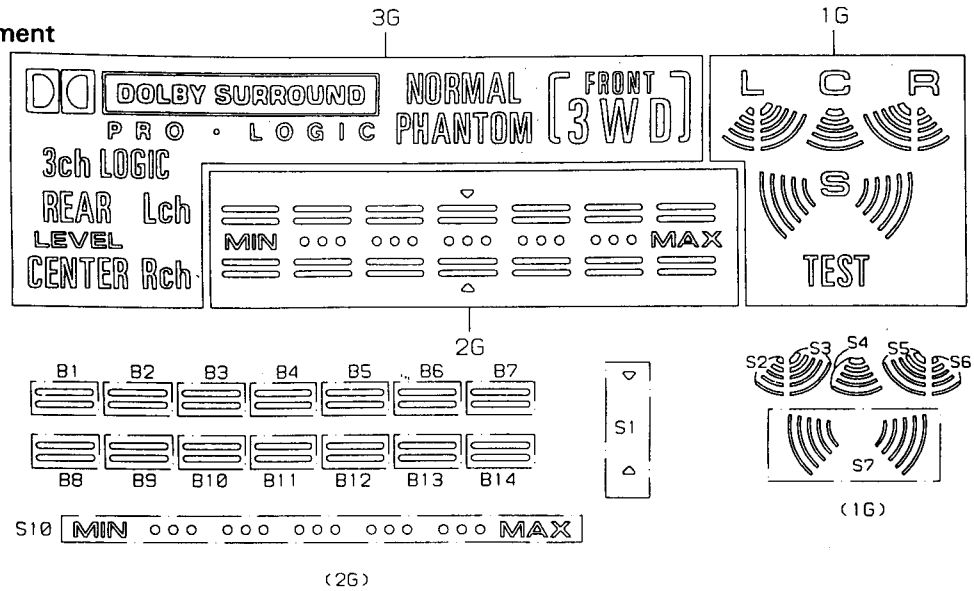

● **Pin Assignment**

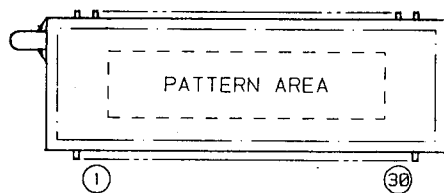

● **Pin Connection**

PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
CONNECTION	F	F	N	1	2	3	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

- NOTE
- 1) F1, F2 --- Filament
 - 2) NP --- No pin
 - 3) NX --- No extend pin
 - 4) DL --- Datum Line
 - 5) 1G - 3G - Grid

● **Anode Connection**

	3G	2G	1G
P1	DOLBY SURROUND	S10	L R
P2	PRO-LOGIC	B1	C
P3	3ch LOGIC	B2	S
P4	REAR	B3	TEST
P5	LEVEL	B4	S2
P6	CENTER	B5	S3
P7	Lch Rch	B6	S4
P8	NORMAL	B7	S5
P9	PHANTOM	B8	S6
P10	FRONT (3WD)	B9	S7
P11	-	B10	-
P12	-	B11	-
P13	-	B12	-
P14	-	B13	-
P15	-	B14	-
P16	-	S1	-

1.7 ADJUSTMENTS

1. TUNER SECTION

■ FM Tuner Section

- Set the mode selector to FM BAND.
- Connect the wiring as shown in Fig. 1-1.

Step No.	Adjustment Title	FM SG (1kHz, ± 75 kHz dev.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (MHz)	Level (dB μ V)			
1	Center Adjustment	98 Non modulation	80 or more	—	L6207	Adjust so that the DC voltage between Pin 4 and Pin 28 of IC6201 becomes $0V \pm 50mV$.
2	Front End Sencitivity	98	10-30	98MHz	L6102 T6101	Adjust so that the DC voltage of the Pin12 of IC6201 (S-meter) becomes at maximum level.
3	TUNED IND. Lighting Level	98	15 ± 2	98MHz	VR6201	Adjust so that the indicators of TUNED IND. start to light up.

Notes:

- Before adjusting, make sure there is no gap between L6101 and L6102. If there is a gap between them, bring them into contact with each other first, and then make adjustments.
- Make indicator adjustments in order of AM $\rightarrow$ FM.

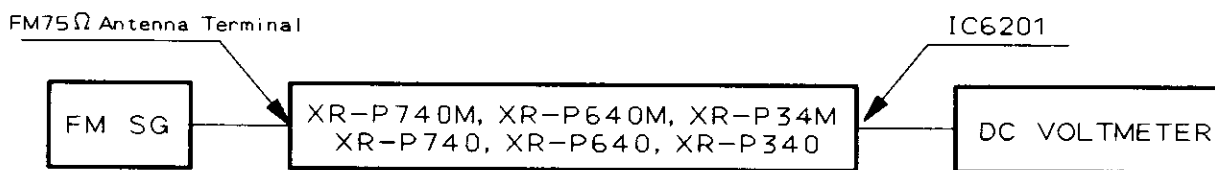


Fig. 1-1 FM Adjustment Connection Diagram

■ AM Tuner Section

- Set the mode selector to AM BAND.
- Connect the wiring as shown in Fig. 1-2.

Step No.	Adjustment Title	AM SG (400Hz, 30% Mod.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (kHz)	Level (dB μ V/m)			
1	TUNED IND. Lighting Level	999	47 ± 2	999kHz	VR6202	Adjust so that the indicators of TUNED IND. start to light up.

Note:

- When SD and YPW type is used, set the AM frequency step to 10kHz.

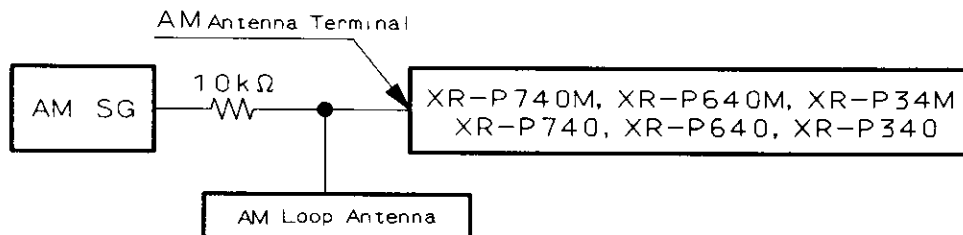


Fig. 1-2 AM (MW) Adjustment Connection Diagram

FM/AM TUNER MODULE

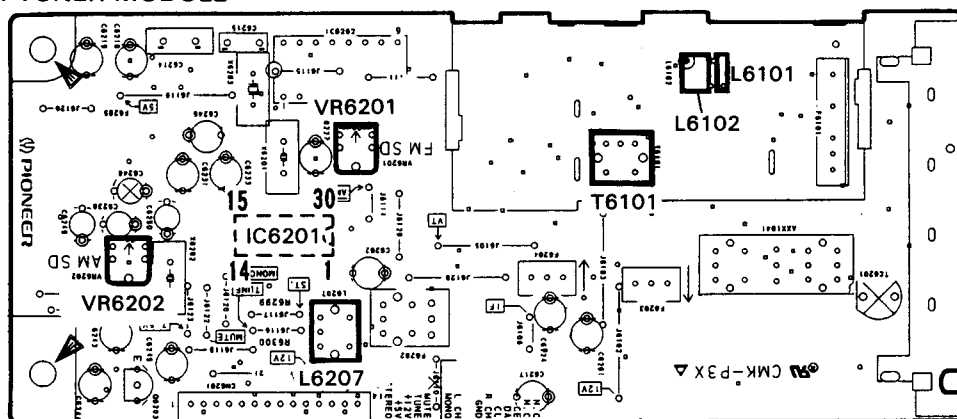


Fig. 1-3 Adjustment Points

2. POWER AMP MODULE SECTION (Refer to Fig. 2-1.)

1. Handling Precautions

- Since the heat sink and transistor metallic parts are connected to the Front Amp output, make sure they do not contact the GND (chassis) or other circuits.
- Since there is residual high voltage in the Power Amp Module Assy $\pm B1$ (FRONT ASSY FOR 100W) and $\pm B2$ (REAR, PWR, PRTEC ASSY) even when the power is OFF, caution should be exercised. (If necessary, the voltage should be discharged).
- When handling the Power Amp Module Assy, make sure you do not touch the fan motor blade.

2. Adjustment and Confirmation of Idle Current

- Basically, the idle current needs to be confirmed when replacing a power transistor, driver transistor, or bias transistor, or when the entire split board Assy of the Power Amp Module Assy has been replaced.
- Make sure the heat sink has cooled sufficiently before measuring the idle current. (Temperature should be the same as room temperature; 25°C is ideal, if possible.)
- Idle current stipulated value: 3-50mA.

■ Front Amp Side (FRONT ASSY FOR 100W)

Step	Measurement	Item	Remarks
1	Lch side	Short both sides of C7123 and C7124 on the Rear Amp side.	Do not operate the Rear Amp side.
2		Insert a resistor (0.22 Ω , 3W or more) in series in the connector CN7502 +B1 (or -B1) line (terminal No. 5 or 6). (Refer to Fig. 2-2.)	For measuring voltage at both sides of resistor
3		Short both sides of C7524.	Do not operate Rch side.
4		Turn the power ON, wait 6 seconds, and then measure the resistance voltage in Step 2.	Lch Idle current $I = V / 0.22 (\Omega)$
5	Rch side	● Same as Steps 1 and 2 above. ● Short both sides of C7523.	Do not operate Lch side.
6		Turn the power ON under the above conditions, and after 6 seconds measure the resistance voltage in Step 2.	
7	—	If the measured idle current is greater than 50mA, perform the following procedure.	
8	Lch side	Short between the Point A pattern in Fig. 2-3 using solder.	Connect R7517 to R7515 in a parallel circuit.
9	Rch side	Short between the Point B pattern in Fig. 2-3 using solder.	Connect R7518 to R7516 in a parallel circuit.
10	—	After performing Steps 8 and 9, remeasure the idle current and confirm that it is below 50mA.	

NOTE:

If the idle current is below 3mA, support a resistor (33k Ω) between the emitter and the Q7501 (Lch) and Q7502 (Rch) bias transistor base, and confirm that the idle current is within 3-50mA.

■ Rear Amp Side (REAR, PWR, PRTEC ASSY)

Step	Measurement	Item	Remarks
1	Center amp side	Short both sides of C7523 and C7524 on the Front Amp side.	Do not operate the Front Amp side.
2		Insert a resistor (0.22Ω, 2W or more) in series in the connector CN7102 +B2 (or -B2) line (terminal No. 5 or 6). (Refer to Fig. 2-4.)	For measuring voltage at both sides of resistor
3		Short both sides of C7124 on the Surround Amp side.	Do not operate the Surround Amp.
4		Turn the power ON, wait 6 seconds, and then measure the resistance voltage in Step 2.	Idle current: $I = V/0.22 (\Omega)$
5	Surround amp side	● Same as Steps 1 and 2 above. ● Short both sides of C7123 on Surround Amp side.	Do not operate Surround Amp.
6		Turn the power ON under the conditions in Steps 1 and 2, and after 6 seconds measure the resistance voltage in Step 2.	
7	—	If the measured idle current is greater than 50mA, perform the following procedure.	
8	Center amp side	Short between the Point C pattern in Fig. 2-5 using solder.	Connect R7117 to R7115 in a parallel circuit.
9	Surround amp side	Short between the Point D pattern in Fig. 2-5 using solder.	Connect R7118 to R7116 in a parallel circuit.
10	—	After performing Steps 8 and 9, remeasure the idle current and confirm that it is below 50mA.	

NOTE:

If the idle current is below 3mA, support a resistor (15kΩ) between the emitter and the Q7101 (Center-ch) and Q7102 (Surround-ch) base, and confirm that the idle current is within 3-50mA.

3. Adjusting the Operating Temperature Setting of the Fan Motor (VR7701)

This adjustment is necessary when IC7403 (+12V regulator), Q7301 and Q7302 (temperature sensors), or VR7701 has been replaced, or when the entire split board Assy of the Power Amp Module Assy has been replaced.

■ Adjustment-Related Cautions

- Make sure the heat sink has sufficiently cooled (is the same as room temperature Ta.)
- Once the power has been turned ON, make measurements and adjustments as quickly as possible. (If too much time is taken, the heat sink temperature will rise, and the measurements will deviate from the Ta measurement point.)

■ Adjustment

1. Connect a voltmeter between TEMP and TP (or between IC7702 terminals No.3 and 2). (Refer to Figs. 2-3 and 2-6.)
2. Determine the fan motor operating temperature setting by means of the following formula. (Tolerance is within $\pm 30\text{mV}$.)
 Formula: $(85^{\circ}\text{C} - \text{Ta}) \times 19 (\text{mV})$
 Ta: ambient temperature ($^{\circ}\text{C}$)
3. Adjust VR7701 so that the voltage between TEMP and TP is the value obtained from the above formula.

For example:

when the room temperature is 25°C ,
 set value = $(85 - 25) \times 19 (\text{mV})$
 = 1140mV (tolerance within $\pm 30\text{mV}$).


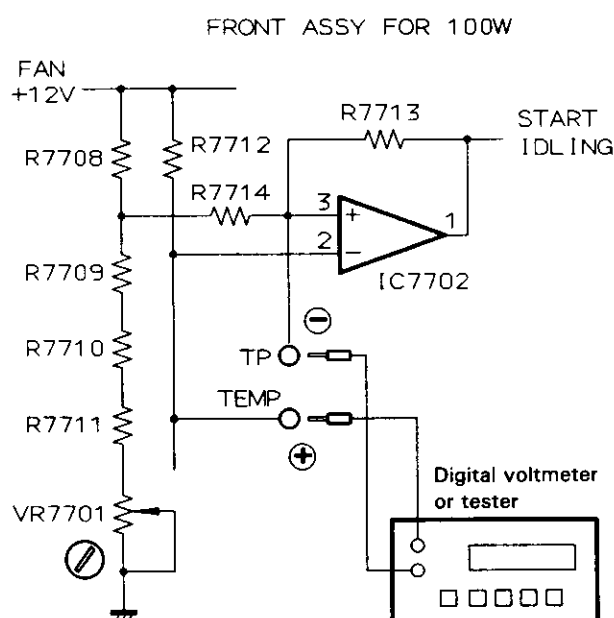


Fig. 2-6 Adjustment of Operating Temperature Setting of Fan Motor

FRONT ASSY FOR 100W (Front Amp Side)

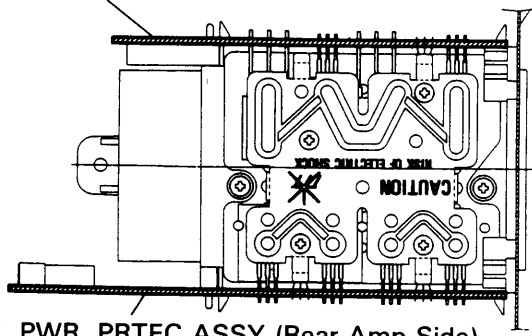

REAR, PWR, PRTEC ASSY (Rear Amp Side)

**Fig. 2-1 Power Amp Module
(POWER MOD. F100+R20)**

Resistor (0.22Ω, 2W or more)

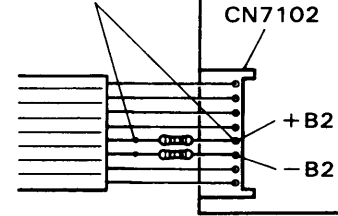


Fig. 2-4 REAR, PWR, PRTEC ASSY

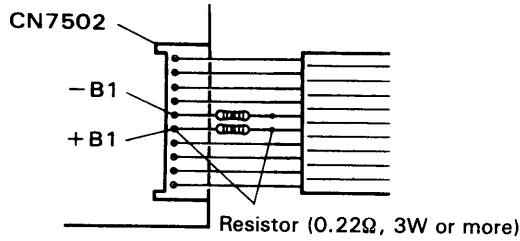
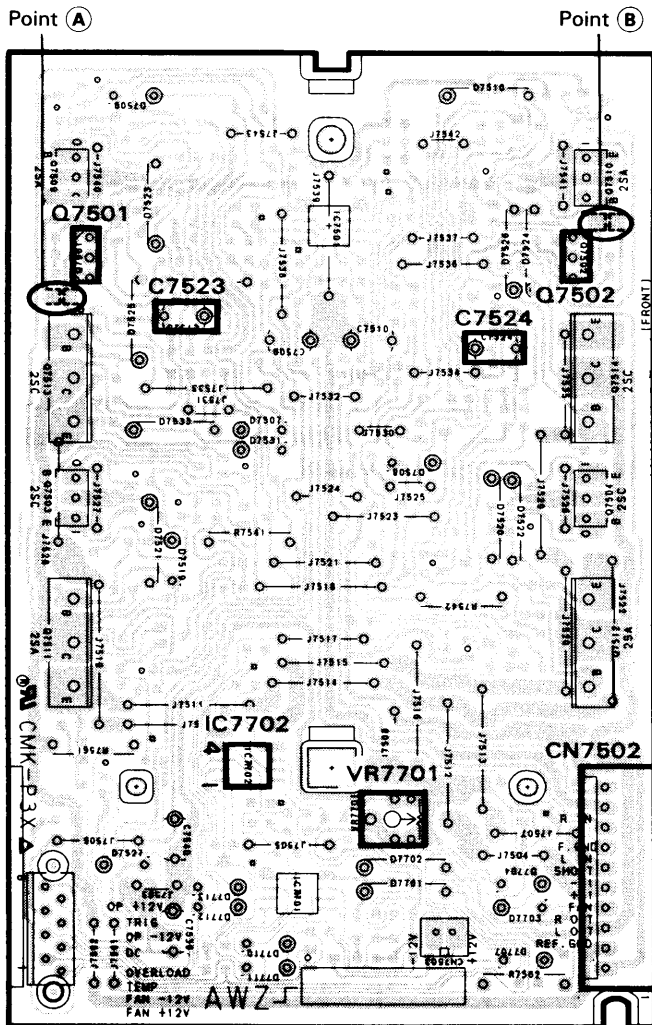
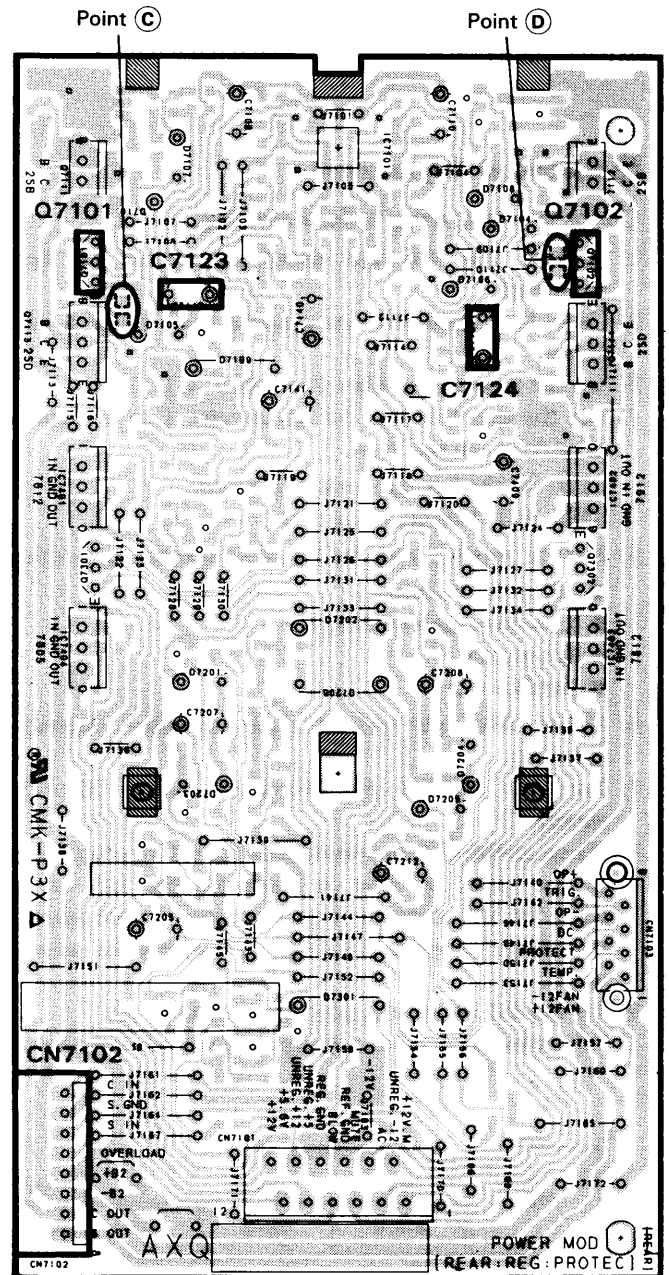


Fig. 2-2 FRONT ASSY FOR 100W



**Fig. 2-3 FRONT ASSY FOR 100W
(This diagram is viewed from the foil side)**



**Fig. 2-5 REAR, PWR, PRTEC ASSY
(This diagram is viewed from the foil side)**

3. CASSETTE DECK SECTION

- Adjustment points and test points are shown in Fig. 3-2 and Fig. 3-4.

■ Mechanical Adjustment

- Set the TAPE function.
- Test tape: STD-301 (3kHz, 30min).

1. Tape Speed Adjustment

No.	Mode	Test Tape	Adjusting Points	Measurement Points	Adjustment Procedure	Remarks
1	PLAY	STD-301 (Playback: 3kHz)	DECK Unit VR4111	TAPE TEST POINT (Rch) (AF CD Assy)	Press the PLAY SW and adjust so that the reading becomes $3010\text{Hz} \pm 10\text{Hz}$. Confirm that wow & flutter level is below 0.2% (in the reverse direction, confirm that the reading is within $3010\text{Hz} \pm 60\text{Hz}$).	

■ Electrical Adjustment

Check the following before starting.

1. Confirm that the tape speed adjustment has been completed.
2. Clean the heads and demagnetize them using a head eraser.
3. Set the measurement level to $0\text{ dBV} = 1\text{ Vrms}$.
4. Use the specified tape for adjustment. Use the labeled (A) side of the test tape.

STD-331E: For playback adjustment

STD-631: Normal blank tape

5. Provide yourself with the following measuring devices:

- AC millivoltmeter
- Low-frequency oscillator
- Attenuator
- Oscilloscope

6. Adjust both right and left channels unless otherwise specified.
7. Turn the DOLBY NR switch off unless otherwise specified.
8. Warm up the unit for several minutes before adjustment. In particular, be sure to warm up the unit in the REC/PLAY mode for 3 to 5 minutes before starting recording/playback frequency characteristics adjustment.
9. Always follow the indicated adjustment order. Otherwise, a complete adjustment may not be achieved.

Playback Adjustment (Decks I and II)

1. Head Azimuth Adjustment
2. Playback Level Adjustment

Recording Adjustment (Deck II)

1. Bias Oscillation Frequency Adjustment
2. Recording Level Adjustment.
3. Recording/playback Frequency Characteristics Adjustment
4. ALC Operation Check

**As the reference recording level is 250nwb/m for STD-331E, the recording level will be higher by 4 dB for STD-331B (160nwb/m). When adjusting, pay carefull attention to the type of tape used.*

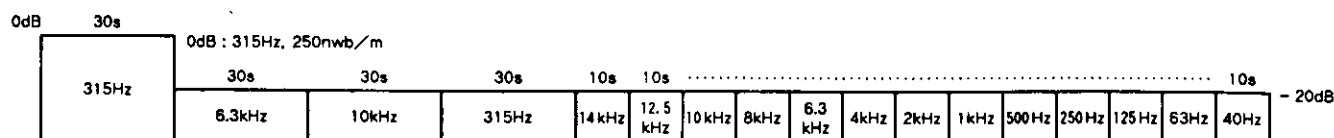


Fig. 3-1 STD-331E Test Tape

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
 "DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.


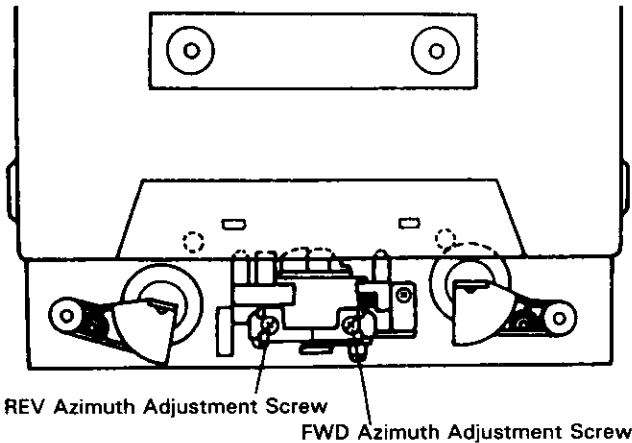


Fig. 3-2 Head Azimuth Adjustment

PLAY BACK

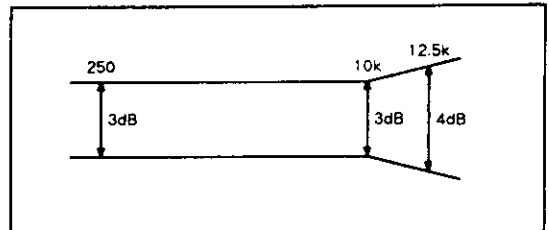

RECORDING

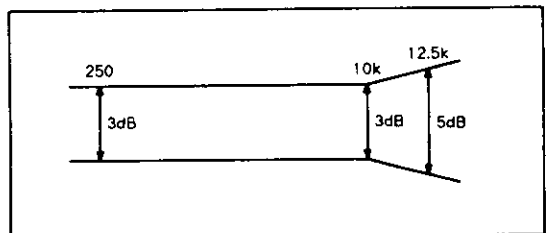


Fig. 3-3 Frequency Characteristics

● Playback Adjustment

1. Head Azimuth Adjustment

- This unit is equipped with auto tape selector.
- Do not switch between forward and reverse operation with the screwdriver inserted.

Step	Tape Selector (AUTO)	Mode	Input Signal/ Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	PLAY	STD-331E test tape (Playback: 10kHz, -10dB)	Deck I	Head azimuth adjustment screw (Fig. 3-2)	TAPE TEST POINT (L, Rch) (AF CD Assy)	Max. playback signal level	After adjustment, apply lock paint to the head azimuth adjustment screw.
				Deck II				

2. Playback Level Adjustment

- Since this adjustment determines playback Dolby NR level, perform it carefully.

Step	Tape Selector (AUTO)	Mode	Input Signal/ Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	PLAY	STD-331E test tape (Playback: 315Hz, 0dB)	Deck I	VR4201 (Lch) VR4202 (Rch)	TAPE TEST POINT (L, Rch) (AF CD Assy)	-1.2 dBV	
				Deck II	VR4203 (Lch) VR4204 (Rch)			

● Recording Adjustment

1. Bias Oscillation Frequency Adjustment

Step	Tape Selector (AUTO)	Mode	Input Signal/Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	REC	Load the STD-631 test tape and set the recording mode.	Deck I	—	—	Oscillation frequency to be 105.0kHz $\pm$ 2kHz.	When the power is turned ON while the BAND button is depressed, the frequency will decrease 2–3 kHz.
				Deck II	—	Between ① point in Fig. 3-4 and GND.		

2. Recording Level Adjustment

Step	Tape Selector (AUTO)	Mode	Input Signal/Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	REC	Input a 315Hz signal to the VIDEO/AUX IN terminal and set the input selector to VIDEO.	Deck I	Input signal level	TAPE TEST POINT (L, Rch) (AF CD Assy)	-5.2 dBV	
				Deck II				
2	NORMAL	REC/PLAY	STD-631 test tape and record/playback the 315Hz signal.	Deck I	—	TAPE TEST POINT (L, Rch) (AF CD Assy)	Repeat recording, playback and adjustment until playback level of the 315Hz signal becomes -5.2dBV.	
				Deck II	VR4301 (Lch) VR4302 (Rch)			

- Since this adjustment affects recording bias, prevent distortion from increasing due to underbias.

3. Recording/playback Frequency Characteristics Adjustment

Step	Tape Selector (AUTO)	Mode	Input Signal/Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	REC	Input a 315Hz signal to the VIDEO/AUX IN terminal and set the input selector to VIDEO.	Deck I	—	TAPE TEST POINT (L, Rch) (AF CD Assy)	-25.2 dBV	
				Deck II	Input signal level			
2	NORMAL	REC/PLAY	Load the STD-631 test tape and record/playback the 315Hz and 10kHz signals. (see the Note below)	Deck I	—	TAPE TEST POINT (L, Rch) (AF CD Assy)	Repeat adjustment until playback level of the 10kHz signal is within 0 ± 0.5 dB from that of the 315Hz signal.	
				Deck II	VR4351 (Lch) VR4352 (Rch)			

Note: Set to the same level used for the 315Hz input signal at step 1.

4. ALC Operation Check

Step	Tape Selector (AUTO)	Mode	Input Signal/Test Tape	Adjusting Points	Measurement Points	Adjustment Value	Remarks
1	NORMAL	REC • PAUSE	Input a 315Hz signal to the VIDEO/AUX IN terminal and set the input selector to VIDEO.	Input signal level	TAPE TEST POINT (L, Rch) (AF CD Assy)	-5.2 dBV	
2				Set to a level +10dB above the input level at step 1.		-2.2±2.5dBV	

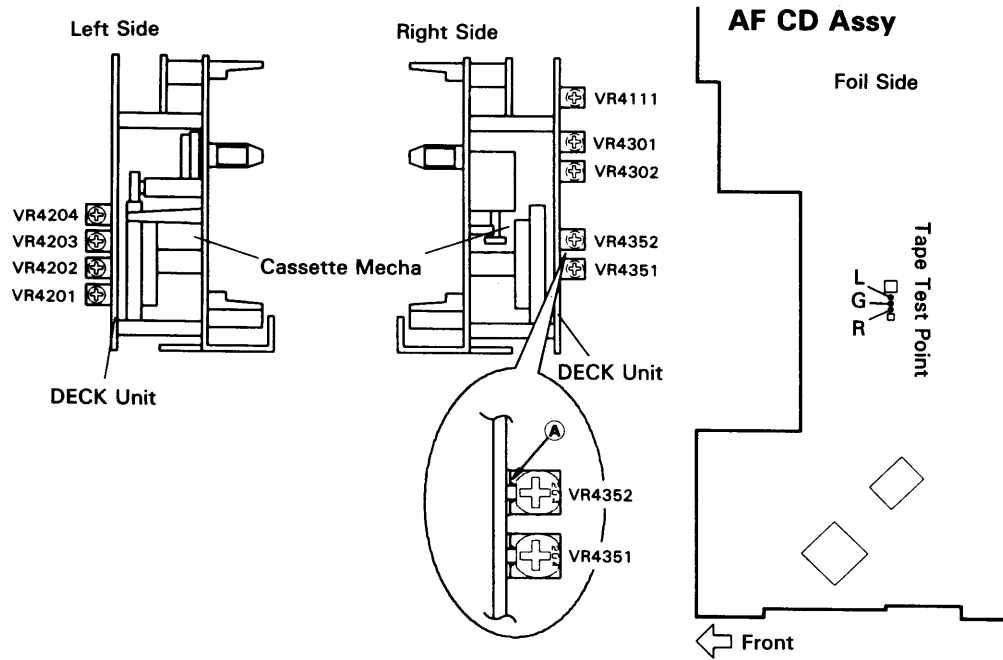



Fig. 3-4 Adjusting Points and Measurement Points

4. DOLBY PRO-LOGIC ADJUSTMENT

1. Turn FUNCTION to VIDEO, MODE to PRO-LOGIC, and CENTER MODE to NORMAL.
2. Input a 1kHz sine wave (253mVrms) to the Video Terminal (L/R). (But the input signal for R should be 180° inverse of the input signal for L.)
3. Adjust VR3401 so that the Dolby Test Point (CN3402) is 300mVrms.

NOTE:

Wait at least 2 minutes after the power has been turned ON before making adjustments.

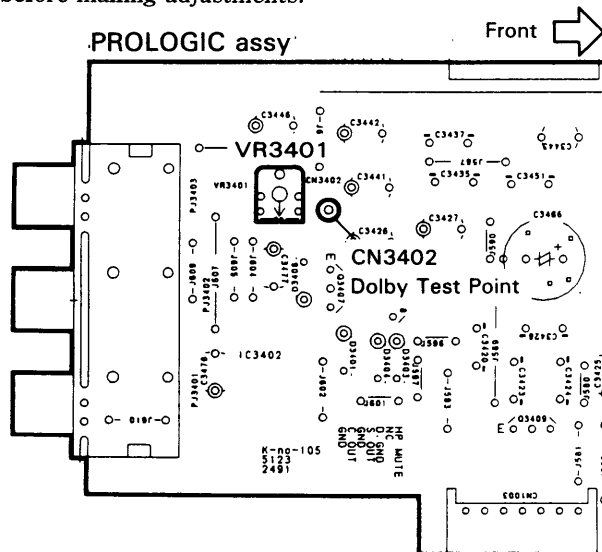


Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

5. DOLBY SURROUND ADJUSTMENT

1. Turn FUNCTION to VIDEO and SURROUND to ON.
2. Input a 1kHz sine wave (260mVrms) to the Video Terminal (L/R). (But the input signal for R should be 180° inverse of the input signal for L.)
3. Adjust VR3401 so that the Dolby Test Point (R3440) is 71mVrms.

NOTE:

Wait at least 2 minutes after the power has been turned ON before making adjustments.

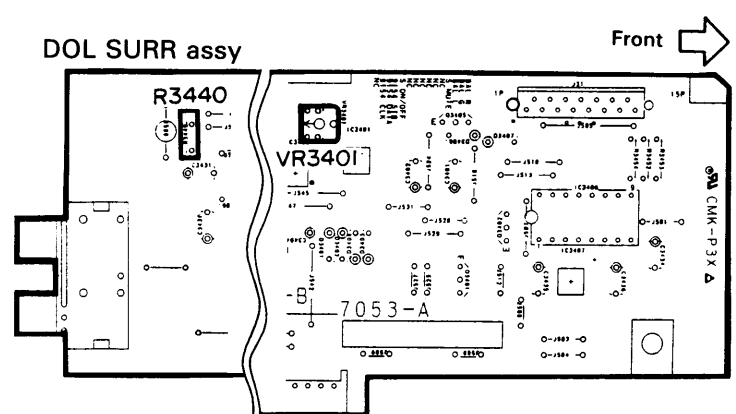

Manufactured under license from Dolby Laboratories Licensing Corporation.
DOLBY and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

6. CD SECTION (FOR CD MULTI AND CD SINGLE)

■ Adjustment Methods

If a disc player is adjusted incorrectly or inadequately, it may malfunction or not work at all even though there is nothing at all wrong with the pickup or the circuitry. Adjust correctly following the adjustment procedure.

● Adjustment Items/Verification Items and Order

If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in steps 1–4, the pickup block may be defective.

Step	Item	Test Point	Adjustment Location
1	Focus offset verification	TP1, Pin6 (FOER)	None
2	Tracking error balance verification	TP1, Pin2 (TRER)	None
3	Pickup radial/tangential direction tilt adjustment	TP1, Pin1 (RF)	Radial tilt adjustment screw, Tangential tilt adjustment screw
4	RF level verification	TP1, Pin1 (RF)	None
5	Focus servo loop gain adjustment	TP1, Pin5 (FOIN) TP1, Pin6 (FOER)	VR8152 (FCS GAN)
6	Tracking servo loop gain adjustment	TP1, Pin3 (TRIN) TP1, Pin2 (TRER)	VR8151 (TRK GAN)

● Abbreviation Table

FOER	: Focus Error
TRER	: Tracking Error
FCS GAN	: Focus Gain
TRK GAN	: Tracking Gain
FOIN	: Focus In
TRIN	: Tracking In

● Measuring Instruments and Tools

1. Dual trace oscilloscope (10 : 1 probe)
2. Low-frequency oscillator
3. Test disc (YEDS-7)
4. Low pass filter (39k Ω + 0.001 μ F)
5. Resistor (100k Ω)
6. 8cm disc (With at least about 20 minutes of recording)
7. Ball point hexagon wrench (GGK1002)
8. Standard tools

● Test Point and Adjustment Variable Resistor Positions

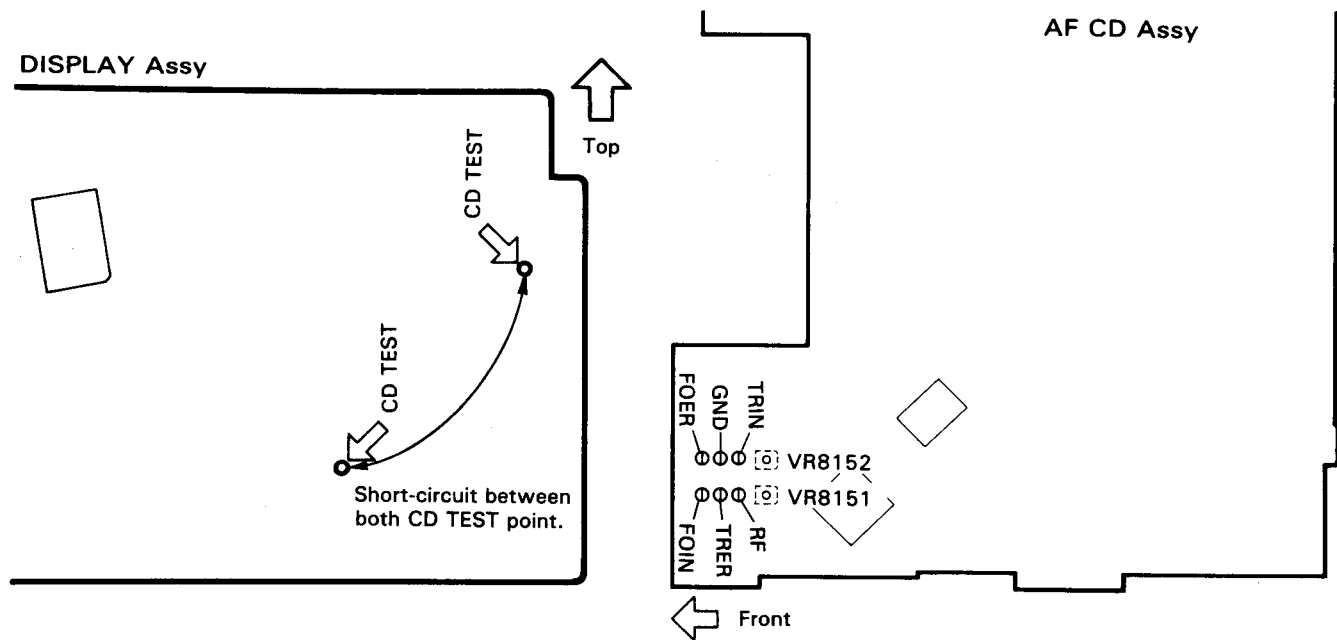


Fig. 1 Adjustment Location

● Notes

1. Use a 10 : 1 probe for the oscilloscope.
2. All the knob positions (settings) for the oscilloscope in the adjustment procedures are for when a 10 : 1 probe is used.

● Test Mode

These models have a test mode so that the adjustment and checks required for service can be carried out easily. When these models are in test mode, the keys on the front panel work differently from normal. Adjustments and checks can be carried out by operating these keys with the correct procedure. For these models, all adjustments are carried out in test mode.

[Setting these models to test mode]

How to set this model into test mode.

1. When the Power switch is activated, set the FUNCTION button to CD.
2. Short-circuit between both CD TEST points. (See Fig. 1)

When the test mode is set correctly, the display is different from what it usually is when the power is turned on. If the display is still the same as usual, test mode has not been set correctly, so repeat Steps 1–2.


[Release from test mode]

Here is the procedure for releasing the test mode:

1. Press the STOP key and stop all operations.
2. Turn off the power switch on the front panel.

[Operations of the keys in test mode]

Code	Key Name	Function in Test Mode	Explanation
	DOLBY NR	Focus servo close	The laser diode is lit up and the focus actuator is lifted up, then lowered slowly and the focus servo is closed at the point where the objective lens is focused on the disc. With the player in this state, if you lightly rotate the stopped disc by hand, you can hear the sound the focus servo. If you can hear this sound, the focus servo is operating correctly. If you press this key with no disc mounted, the laser diode lights up, the focus actuator is pulled up, then the actuator is lowered and raised three times and returned to its original position.
	PLAY/PAUSE	Spindle servo ON	Starts the spindle motor in the clockwise direction and when the disc rotation reaches the prescribed speed (about 500rpm at the inner periphery), sets the spindle servo in a closed loop. Be careful. Pressing this key when there is no disc mounted makes the spindle motor run at the maximum speed. If the focus servo does not go correctly into a closed loop or the laser light shines on the mirror section at the outermost periphery of the disc, the same symptom is occurred.
		Tracking servo close/open	Pressing this key when the focus servo and spindle servo are operating correctly in closed loops puts the tracking servo into a closed loop, displays the track number being played back and the elapsed time on the front panel, and outputs the playback signal. If the elapsed time is not displayed or not counted correctly or the audio is not played back correctly, it may be that the laser is shining on the section with no sound recorded at the outer edge of the disc, that something is out of adjustment, or that there is some other problem. This key is a toggle key and open/close the tracking servo alternately. This key has no effect if no disc is mounted.

 
Code	Key Name	Function in Test Mode	Explanation
	MANUAL/ TRACK SEARCH REV	Carriage reverse (inwards)	Moves the pickup position toward the inner diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
	MANUAL/ TRACK SEARCH FWD	Carriage forward (outwards)	Moves the pickup position toward the outer diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
	STOP	Stop	Initializes and the disc rotation stops. The pickup and disc remain where they are when this key is pressed.
	EJECT	CD magazine eject (For CD Multi)	Stores Disc 1 in the CD magazine, then ejects the CD magazine. However, even though the CD magazine is ejected, the pickup does not return to the park position. Even if the CD magazine is mounted again, the pickup remains where it is.
	OPEN/CLOSE	Disc tray open/close (For CD Single)	Open/close the disc tray. This key is a toggle key and open/close tray alternately. Pressing this key when the disc is turning stops the disc, then opens the tray. This key operation does not affect the position of the pickup.

Note: When inserting the magazine, disc 1 of the magazine is loaded automatically.

[How to playback a disc in test mode]

In test mode, since the servos operate independently, playing back a disc requires that you operate the keys in the correct order to close the servos.

Here is the key operation sequence for playing back a disc in test mode.

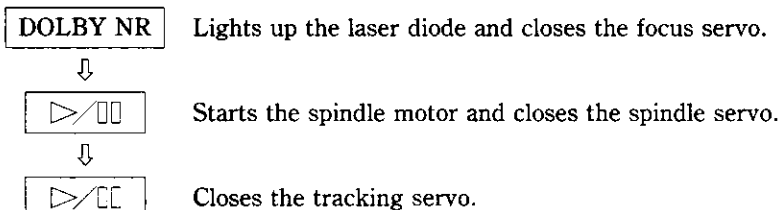


Wait at least 2–3 seconds between each of these operations.

■ Focus Offset Verification

● Objective	Verify the DC offset for the focus error amp.		
● Symptom when out of adjustment	The model does not focus in and the RF signal is dirty.		
● Measurement Instrument Connections	Connect the oscilloscope to TP1, Pin6 (FOER) [Settings] 5mV/division 10ms/division DC mode	● Player State ● Adjustment Location ● Disc	Test mode, stopped (just the Power switch on) None None needed
[Procedure] Verify the DC voltage at TP1, Pin6 (FOER) is $0 \pm 50\text{mV}$.			

Note: If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in adjustment items 1–4, the pickup block may be defective.

■ Tracking Error Balance Verification

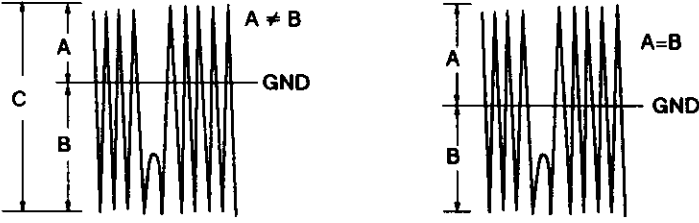● Objective	To verify that there is no variation in the sensitivity of the tracking photo diode.		
● Symptom when out of adjustment	Play does not start or track search is impossible.		
● Measurement Instrument Connections	Connect the oscilloscope to TP1, Pin2 (TRER). This connection may be via a low pass filter. [Settings] 50mV/division 5ms/division DC mode	● Player State ● Adjustment Location ● Disc	Test mode, focus and spindle servos closed and tracking servo open. None YEDS-7
[Procedure] 1. Move the pickup to midway across the disc (R=35mm) with the MANUAL/TRACK SEARCH FWD $\triangleright \triangleright \bullet \triangleright \triangleright \square$ key or REV $\triangleleft \triangleleft \bullet \triangleleft \triangleleft$ key. 2. Press the DOLBY NR key, then the PLAY/PAUSE $\triangleright / \square$ key in that order to close the focus servo then the spindle servo. 3. Line up the bright line (ground) at the center of the oscilloscope screen and put the oscilloscope into DC mode. 4. Supposing that the positive amplitude of the tracking error signal at TP1, pin2 (TRER) is (A) and the negative amplitude is (B), the following expression is satisfied.			
When $A \geq B$, $\frac{A-B}{C} \times \frac{1}{2} \leq 0.1$ When $A < B$, $\frac{B-A}{C} \times \frac{1}{2} \leq 0.1$			
		When there is a DC component When there is no DC component	


■ **Pickup Radial/Tangential Tilt Adjustment (For CD Multi)**

● Objective	To adjust the angle of the pickup relative to the disc so that the laser beams are shone straight down into the disc for the best read out of the RF signals.		
● Symptom when out of adjustment	Sound broken; some discs can be played but not others.		
● Measurement Instrument Connections	Connect the oscilloscope to TP1, Pin1 (RF). [Settings] 20mV/division 200ns/division AC mode	● Player State ● Adjustment Location ● Disc	Test mode, play Pickup radial tilt adjustment screw and tangential tilt adjustment screw YEDS-7

[Procedure]

1. Press the **MANUAL/TRACK SEARCH FWD** $\triangleright\triangleright \cdot \triangleright\triangleright$ key or **REV** $\triangleleft\triangleleft \cdot \triangleleft\triangleleft$ key to move the pickup to halfway across the disc ($R=35\text{mm}$).
Press the **DOLBY NR** key, the **PLAY/PAUSE** $\triangleright/\square$ key twice in that order to close the respective servos and put the player into play mode.
2. First, adjust the radial tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly.
3. Next, adjust the tangential tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly (Fig. 3).
4. Adjust the radial tilt adjustment screw and the tangential tilt adjustment screw again so that the eye pattern can be seen the most clearly. As necessary, adjust the two screws alternately so that the eye pattern can be seen the most clearly.
5. When the adjustment is completed, lock the radial and tangential adjustment screw.

Note: Radial and tangential mean the directions relative to the disc shown in Fig. 2.

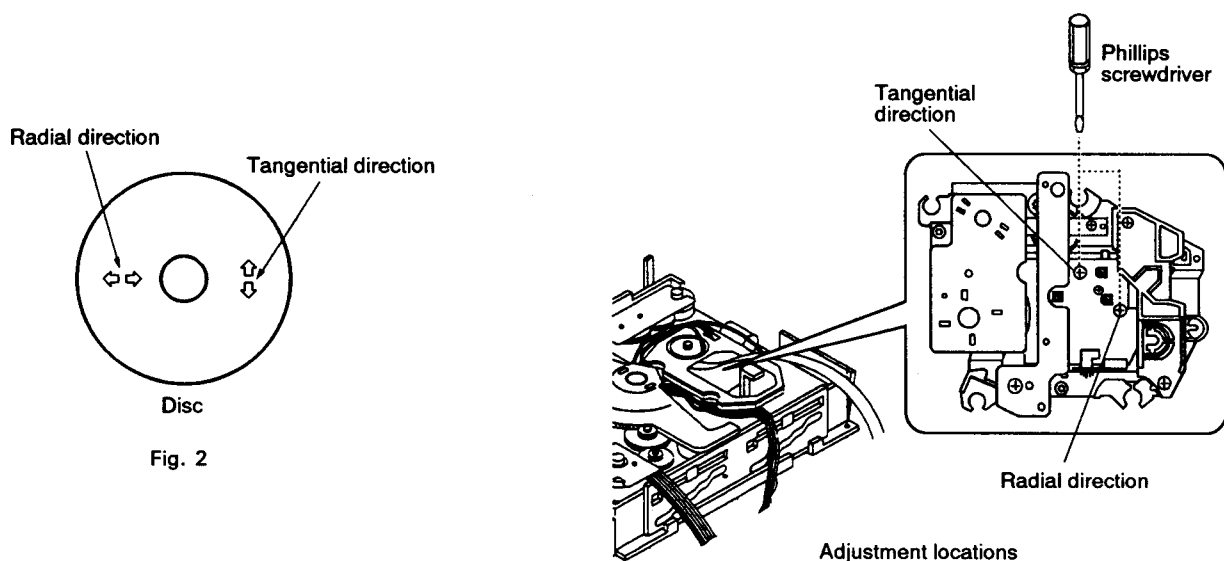

■ **Pickup Radial/Tangential Tilt Adjustment (For CD Single)**

● Objective	To adjust the angle of the pickup relative to the disc so that the laser beams are shone straight down into the disc for the best read out of the RF signals.		
● Symptom when out of adjustment	Sound broken; some discs can be played but not others.		
● Measurement Instrument Connections	Connect the oscilloscope to TP1, Pin1 (RF). [Settings] 20mV/division 200ns/division AC mode	● Player State ● Adjustment Location ● Disc	Test mode, play Pickup radial tilt adjustment screw and tangential tilt adjustment screw 8 cm disc [However, those with approx. 20 min of audio signal (music).]

[Procedure]

1. Press the **MANUAL/TRACK SEARCH FWD** $\triangleright\triangleright \bullet \triangleright\triangleright$ key or **REV** $\triangleleft\triangleleft \bullet \triangleleft\triangleleft$ key to move the pickup to the external circumference of the disc.
Press the **DOLBY NR** key, the **PLAY/PAUSE** $\triangleright/\square$ key twice in that order to close the respective servos and put the player into play mode.
2. First, adjust the radial tilt adjustment screw with the hexagon wrench (GGK1002) so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly.
3. Next, adjust the tangential tilt adjustment screw with the hexagon wrench (GGK1002) so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly (Fig. 3).
※ The ball-point type hexagonal wrench is used because the disc will get in the way if a normal hexagonal wrench is used.
4. Adjust the radial tilt adjustment screw and the tangential tilt adjustment screw again so that the eye pattern can be seen the most clearly. As necessary, adjust the two screws alternately so that the eye pattern can be seen the most clearly.
5. When the adjustment is completed, lock the radial and tangential adjustment screw.

Note: Radial and tangential mean the directions relative to the disc shown in Fig. 2.

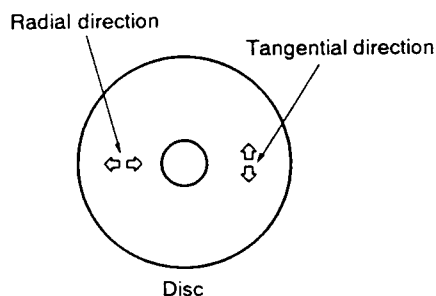
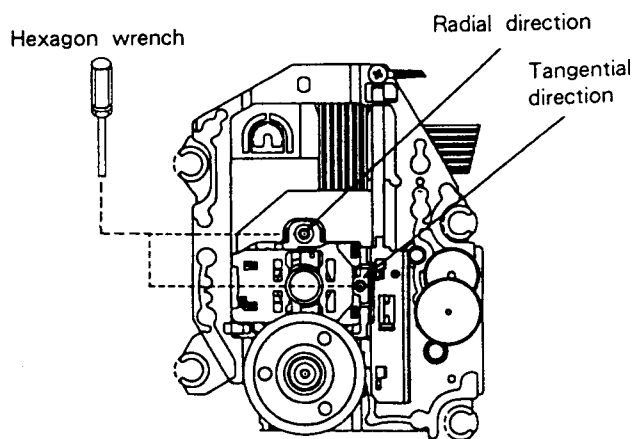


Fig. 2



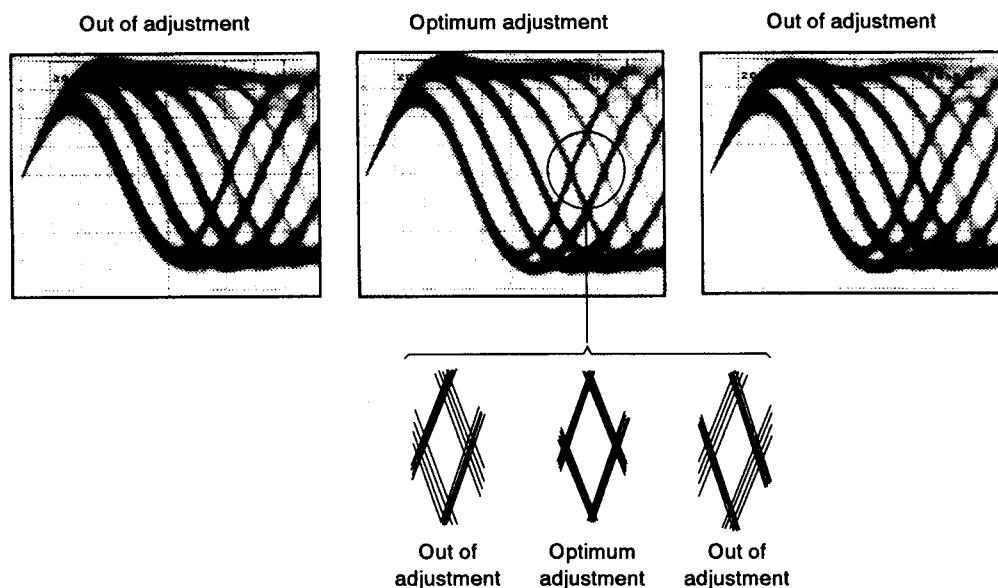


Fig. 3 Eye Pattern

■ RF Level Verification

● Objective	To verify the playback RF signal amplitude.		
● Symptom when out of adjustment	No play or no search		
● Measurement Instrument Connections	Connect the oscilloscope to TP1, Pin1 (RF). [Settings] 50mV/division 10ms/division AC mode	● Player State ● Adjustment Location ● Disc	Test mode, play None YEDS-7
[Procedure] 1. Move the pickup to midway across the disc (R=35mm) with the MANUAL/TRACK SEARCH FWD ▷▷ • ▷▷ key or REV ◁◁ • ◁◁ key, then press the DOLBY NR key, the PLAY/PAUSE ▷/◻ key twice in that order to close the respective servos and put the player into play mode. 2. Verify the RF signal amplitude is 1.2V _{p-p} ± 0.2V.			

■ Focus Servo Loop Gain Adjustment

● Objective	To optimize the focus servo loop gain.		
● Symptom when out of adjustment	Playback does not start or focus actuator noisy.		
● Measurement Instrument Connections	See Fig. 4. [Settings] CH1 20mV/division X-Y mode CH2 5mV/division	● Player State ● Adjustment Location ● Disc	Test mode, play VR8152 (FCS GAN) YEDS-7

[Procedure]

1. Set the AF generator output to 1.2kHz and 1Vp-p.
2. Press the MANUAL/TRACK SEARCH FWD • key or REV • key to move the pickup to halfway across the disc (R=35mm), then press the DOLBY NR key, the PLAY/PAUSE key twice in that order to close the corresponding servos and put the player into play mode.
3. Adjust VR8152 (FCS GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.



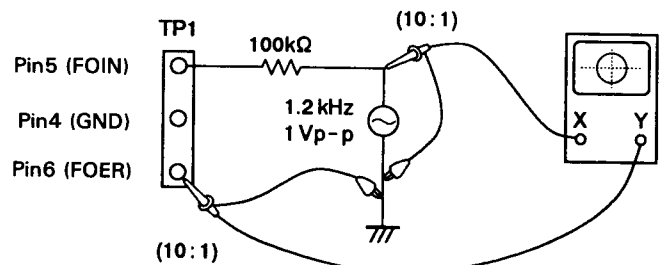


Fig. 4


Focus Gain Adjustment

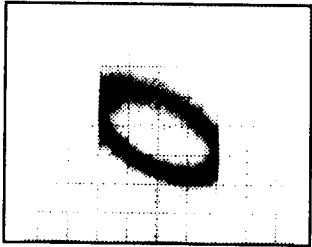

Higher gain

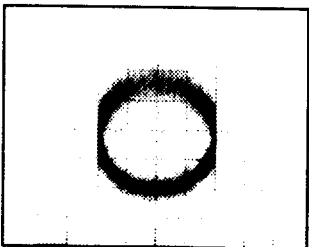

Optimum gain

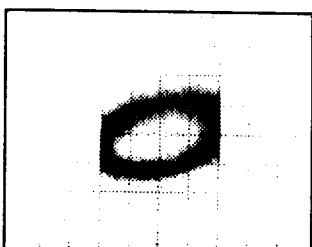

Lower gain

■ Tracking Servo Loop Gain Adjustment

● Objective	To optimize the tracking servo loop gain.		
● Symptom when out of adjustment	Playback does not start, during searches the actuator is noisy, or tracks are skipped.		
● Measurement Instrument Connections	See Fig. 5.	● Player State	Test mode, play
	[Settings] CH1 50mV/division X-Y mode CH2 20mV/division	● Adjustment Location ● Disc	VR8151 (TRK GAN) YEDS-7

[Procedure]

1. Set the AF generator output to 1.2kHz and 2Vp-p.
2. Press the MANUAL/TRACK SEARCH FWD $\triangleright\triangleright$ • $\triangleright\triangleright$ key or REV $\triangleleft\triangleleft$ • $\triangleleft\triangleleft$ key to move the pickup to halfway across the disc (R=35mm), then press the DOLBY NR key, the PLAY/PAUSE $\triangleright/\square$ key twice in that order to close the corresponding servos and put the player into play mode.
3. Adjust VR8151 (TRK GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.



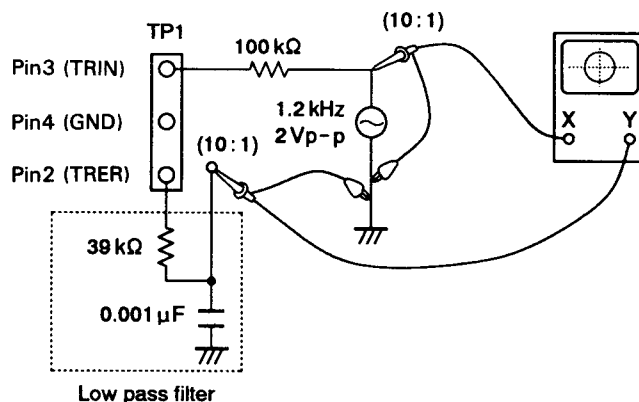


Fig. 5


Tracking Gain Adjustment

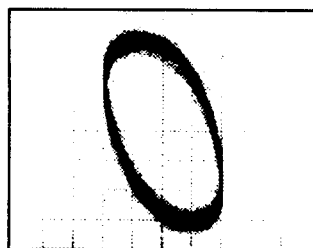

Higher gain

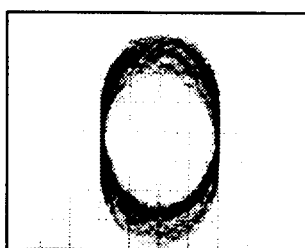

Optimum gain

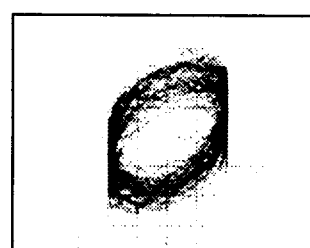

Lower gain

1.8 PARTS LIST FOR PACKING AND EXPLODED VIEWS

NOTES :

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "☉" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

(1) PACKING

(1) - 1. FOR XR-P740M, XR-P740, XR-P640M AND XR-P640

■ For XR-P740M/SD

Mark	No.	Description	Parts No.
	1	MAGAZINE ASSY	PXA1549
	2	OPERATING INSTRUCTIONS (ECS-1,2,3/S/M)	ARC7006
	3	REMOTE CONTROL UNIT (CU-XR012)	AXD7007
	4	BATTERY COVER	AZA7032
	5	FM ANTENNA	ADH1016
	6		
	7	LOOP ANTENNA (L8043)	ATB1012
	8	FRONT PAD LR	AHA7004
	9	REAR PAD LR	AHA7005
	10	PACKING CASE	AHD7039
	11	SHEET	AHG7004

■ For XR-P740M/YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD

Part number differs between XR-P740M/YPW, XR-P740/SD, XR-P640M/SD, YPW, XR-P640/SD and XR-P740M/SD

Mark	No.	Symbol & Description	Part No.						Remarks
			XR-P740M		XR-P740	XR-P640M		XR-P640	
			SD	YPW	SD	SD	YPW	SD	
	2	Operating instructions (English/Spanish/Chinese)	ARC7006		ARC7006	ARC7006		ARC7006	
	2	Operating instructions (English)		ARB7006			ARB7006		
	10	Packing case	AHD7039	AHD7039	AHD7038	AHD7037	AHD7037	AHD7036	
	3	Remote control unit (CU-XR012)	AXD7007	AXD7007	AXD7007				
	3	Remote control unit (CU-XR010)				AXD7002	AXD7002	AXD7002	
	1	Magazine assy	PXA1549	PXA1549		PXA1549	PXA1549		

(1)–2. FOR XR–P340M AND XR–P340

■ For XR–P340M/KU

Mark	No.	Description	Parts No.
	1	MAGAZINE ASSY	PXA1549
	2	OPERATING INSTRUCTIONS (E–1, 2, 3/S/M)	ARB7006
	3	REMOTE CONTROL UNIT (CU–XR009)	AXD7001
	4	BATTERY COVER	AZA7031
	5	FM ANTENNA	ADH1016
	6		
	7	LOOP ANTENNA (L8043)	ATB1012
	8	FRONT PAD LR	AHA7002
	9	REAR PAD LR	AHA7003
	10	PACKING CASE	AHD7035
	11	SHEET	AHG7003

■ For XR–P340M/KC, SD, YPW, XR–P340/SD and YPW

Part number differs between XR–P340M/KC, SD, YPW, XR–P340/SD, YPW and XR–P340M/KU

Mark	No.	Symbol & Description	Part No.						Remarks
			XR – P340M				XR – P340		
			KU	KC	SD	YPW	SD	YPW	
	2	Operating instructions (English)	ARB7006	ARB7006		ARB7006		ARB7006	
	2	Operating instructions (English/Spanish/Chinese)			ARC7006		ARC7006		
	2	Operating instructions (French)		ARC7007					
	10	Packing case	AHD7035	AHD7035	AHD7034	AHD7034	AHD7033	AHD7033	
	1	Magazine assy	PXA1549	PXA1549	PXA1549	PXA1549			

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

(2) EXPLODED VIEWS

(2) - 1. EXTERIOR

■ For XR-P740M, XR-P740, XR-P640M and XR-P640

● For XR-P740M/SD

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
△	1	POWER TRANSFORMER (T8005)	ATS7015		46	SCREW	VPZ30P080FZK
△	2	FUSE (T2.5A/250V, FU1)	AEK-512		47	FRONT PANEL A	AMB7059
△	3	AC POWER CORD	ADG1051		48	LENS	AAK7021
	4	STRAIN RELIEF	AEC-882		49	AMP. TUNER BUTTON	AAD7048
NSP	5	GROUND LEAD	ADB1001		50	DOOR-L	AAN7016
					51	DOOR-R	AAN7020
△	6	FLEXIBLE CABLE (J1)	ADD1127		52	CATCHER	AEC7001
	7	MULTI MECHA ASSY	AXA7006		53	DOOR SPRING (L)	ABH7001
	8	CASSETTE MOD. BC	EXK2420		54	DOOR SPRING (R)	ABH7002
NSP	9	CHASSIS	ANA7001		55	DECK. CD BUTTON	AAD7049
	10	REAR PANEL	ANC7036				
					56	M-CD PANEL	AAK7016
	11	RUBBER SHEET	AEB1111		57	DAMPER ASSY	AXA7001
	12	TRANS FRAME	ANA7002		58	KEEP PLATE	ABK1017
	13	BRACKET	ANG7002		59	FRONT PANEL B	AMB7067
	14	NYLON BINDER	AEC-093		60	DOLBY BUTTON	AAD7007
	15	PCB SPACER (3×12)	AEC1372				
					61	LEVEL BUTTON	AAD7012
	16	PCB CONNECTOR (PVC)	AEC1500		62	DOOR SHAFT	AXA7003
	17	FRONT PANEL ASSY	AMB7084		63	DAMPER	PXA1484
	18	TUNER PLATE	AAK7012		64	DOOR SPRING	ABH7003
	19	DOLBY PLATE	AAK7013		65	MULTI BUTTON	AAD7009
	20	DECK PLATE LR	AAK7018				
					66	MULTI DOOR	AAK7017
	21				67	LOCK LEVER SPRING	ABH7004
	22				68	SCREW	BPZ20P080FMC
	23	JOG KNOB	AAB7006	△	69	VOLTAGE SELECTOR (S8001)	AKX-507
	24	VOL KNOB	AAB7021	△	70	FUSE (T2.5A/250V, FU2)	AEK-512
	25	BALANCE KNOB	AAB7008				
					71	GROUND LEAD	ADB1005
	26	P. BASS KNOB	AAB7013	NSP	72	PARALLEL WIRE (J2)	D20PYY0615E
	27	BONNET	ANE7005				
	28	AF CD ASSY	AWZ7095				
	29	VR ASSY	AWZ7282				
	30	H. P ASSY	AWZ7105				
	31	SECONDRY TRANS ASSY	AWZ7211				
	32	DISPLAY ASSY	AWZ7215				
	33	CD DECK SW ASSY	AWZ7125				
	34	TRANS PRIMARY ASSY	AWZ7130				
	35	PROLOGIC ASSY	AWZ7138				
	36	ADDON DISPLAY ASSY	AWZ7141				
	37	FM/AM TUNER MODULE	AXQ1012				
	38	POWER MOD. F100+R20	AXQ1019				
	39	SCREW (P2.6×8)	ABA1095				
	40	SCREW	ASZ40P060FMC				
	41	SCREW	BBZ30P060FMC				
	42	SCREW	BBZ30P080FZK				
	43						
	44	SCREW	BPZ26P080FMC				
	45	SCREW	CBZ30P080FMC				

● For XR-P740M/YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD

Part number differs between XR-P740M/YPW, XR-P740/SD, XR-P640M/SD, YPW, XR-P640/SD and XR-P740M/SD

Mark	No.	Symbol & Description	Part No.						Remarks
			XR-P740M		XR-P740	XR-P640M		XR-P640	
			SD	YPW	SD	SD	YPW	SD	
	28	AF CD assy	AWZ7095	AWZ7095	AWZ7281	AWZ7091	AWZ7091	AWZ7089	
	29	VR assy	AWZ7282	AWZ7282	AWZ7282	AWZ7099	AWZ7099	AWZ7099	
	32	DISPLAY assy	AWZ7215	AWZ7215	AWZ7214	AWZ7118	AWZ7118	AWZ7116	
	33	CD DECK SW assy	AWZ7125	AWZ7125	AWZ7124	AWZ7125	AWZ7125	AWZ7124	
	34	TRANS PRIMARY assy	AWZ7130	AWZ7127	AWZ7130	AWZ7130	AWZ7127	AWZ7130	
	35	PROLOGIC assy	AWZ7138	AWZ7138	AWZ7138				
	35	DOL SURR assy				AWZ7137	AWZ7137	AWZ7137	
	36	ADDON DISPLAY assy	AWZ7141	AWZ7141	AWZ7141	AWZ7139	AWZ7139	AWZ7139	
	7	MULTI MECHA assy	AXA7006	AXA7006		AXA7006	AXA7006		
	7	SINGLE MECHA assy			AXA7004			AXA7004	
△	69	S8001 Voltage selector	AKX-507		AKX-507	AKX-507		AKX-507	
△	1	T8005 Power transformer	ATS7015	ATS7015	ATS7015	ATS7013	ATS7013	ATS7013	
△	3	AC power cord	ADG1051	ADG1123	ADG1051	ADG1051	ADG1123	ADG1051	
△	70	FU2 Fuse (T2.5A/250V)	AEK-512		AEK-512	AEK-512		AEK-512	
	17	Front panel assy	AMB7084	AMB7084	AMB7083	AMB7082	AMB7082	AMB7081	
	47	— Front panel A	AMB7059	AMB7059	AMB7058	AMB7056	AMB7056	AMB7055	
	59	— Front panel B	AMB7067	AMB7067	AMB7067	AMB7065	AMB7065	AMB7065	
	64	— Door spring	ABH7003	ABH7003		ABH7003	ABH7003		
	62	— Door shaft	AXA7003	AXA7003		AXA7003	AXA7003		
	63	— Damper	PXA1484	PXA1484		PXA1484	PXA1484		
	68	— Screw	BPZ20P080FMC	BPZ20P080FMC		BPZ20P080FMC	BPZ20P080FMC		
	56	— M-CD panel	AAK7016	AAK7016		AAK7016	AAK7016		
	56	— S-CD panel			AAK7053			AAK7053	
	66	— Multi door	AAK7017	AAK7017		AAK7017	AAK7017		
	10	Rear panel	ANC7036	ANC7040	ANC7035	ANC7029	ANC7033	ANC7028	
	65	Multi button	AAD7009	AAD7009		AAD7009	AAD7009		
	67	Lock lever spring	ABH7004	ABH7004		ABH7004	ABH7004		
	71	Ground lead	ADB1005	ADB1005		ADB1005	ADB1005		
	19	Dolby plate	AAK7013	AAK7013	AAK7013	AAK7014	AAK7014	AAK7014	
	21	Tray cap			AAK7020			AAK7020	
	42	Screw (for CD MECHA assy)	BBZ30P080FZK	BBZ30P080FZK	BBZ30P180FMC	BBZ30P080FZK	BBZ30P080FZK	BBZ30P180FMC	※
	73	Caution label		VRW-329			VRW-329		

※ : Refer to page 2-3 (*3).

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

■ For XR-P340M and XR-P340

● For XR-P340M/KU

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
△	1	POWER TRANSFORMER (T8005)	ATS7009	51	M-CD PANEL	AAK7016	
△	2	FUSE (4A/125V, FU1)	AEK-125	52	DAMPER ASSY	AXA7001	
△	3	AC POWER CORD	ADG1146	53	KEEP PLATE	ABK1017	
	4	CORD STOPPER	AEP-113	54	TRANS FRAME	ANA7002	
NSP	5	GROUND LEAD	ADB1001	55	65 LABEL	ORW1069	
				56	DOOR SHAFT	AXA7003	
△	6	FLEXIBLE CABLE (J1)	ADD1127	57	DOOR SPRING	ABH7003	
	7	MULTI MECHA ASSY	AXA7006	58	MULTI BUTTON	AAD7009	
	8	CASSETTE MOD. B	EXK2430	59	MULTI DOOR	AAK7017	
NSP	9	CHASSIS	ANA7001	60	LOCK LEVER SPRING	ABH7004	
	10	REAR PANEL	ANC7026				
	11	RUBBER SHEET	AEB1111	61	DAMPER	PXA1484	
	12	BRACKET	ANG7002	62	SCREW	BPZ20P080FMC	
	13	NYLON BINDER	AEC-093	NSP 63	GROUND LEAD	ADB1005	
	14	PCB SPACER (3×12)	AEC1372	64	PARALLEL WIRE (J2)	D20PYY0615E	
	15	PCB CONNECTOR (PVC)	AEC1500				
	16	FRONT PANEL ASSY	AMB7075				
	17	TUNER PLATE	AAK7012				
	18	DECK PLATE LR	AAK7018				
	19						
	20						
	21	JOG KNOB	AAB7006				
	22	VOL KNOB	AAB7021				
	23	P. BASS KNOB	AAB7013				
	24	BONNET	ANE7003				
	25	AF CD ASSY	AWZ7088				
	26	VR ASSY	AWZ7270				
	27	H. P ASSY	AWZ7103				
	28	SECONDARY TRANS ASSY	AWZ7107				
	29	DISPLAY ASSY	AWZ7113				
	30	CD DECK SW ASSY	AWZ7125				
	31	TRANS PRIMARY ASSY	AWZ7131				
	32	FM/AM TUNER MODULE	AXQ1012				
	33	POWER MOD. F50	AXQ1018				
	34	SCREW (P2.6×8)	ABA1095				
	35	SCREW	ASZ40P060FMC				
	36	SCREW	BBZ30P060FMC				
	37	SCREW	BBZ30P080FZK				
	38						
	39	SCREW	BPZ26P080FMC				
	40	SCREW	CBZ30P080FMC				
	41	SCREW	VPZ30P080FZK				
	42	FRONT PANEL A	AMB7054				
	43	LENS	AAK7021				
	44	AMP. TUNER BUTTON	AAD7048				
	45	DOOR-L	AAN7016				
	46	DOOR-R	AAN7019				
	47	CATCHER	AEC7001				
	48	DOOR SPRING (L)	ABH7001				
	49	DOOR SPRING (R)	ABH7002				
	50	DECK. CD BUTTON	AAD7049				

● For XR-P340M/KC, SD, YPW, XR-P340/SD and YPW

Part number differs between XR-P340M/KC, SD, YPW, XR-P340/SD, YPW and XR-P340M/KU

Mark	No.	Symbol & Description	Part No.						Remarks
			XR-P340M				XR-P340		
			KU	KC	SD	YPW	SD	YPW	
	25	AF CD assy	AWZ7088	AWZ7088	AWZ7086	AWZ7086	AWZ7084	AWZ7084	
	26	VR assy	AWZ7270	AWZ7270	AWZ7280	AWZ7080	AWZ7080	AWZ7080	
	29	DISPLAY assy	AWZ7113	AWZ7113	AWZ7114	AWZ7114	AWZ7110	AWZ7110	
	30	CD DECK SW assy	AWZ7125	AWZ7125	AWZ7125	AWZ7125	AWZ7124	AWZ7124	
	31	TRANS PRIMARY assy	AWZ7131	AWZ7131	AWZ7130	AWZ7127	AWZ7130	AWZ7127	
	8	CASSETTE MOD. B	EXK2430	EXK2410	EXK2410	EXK2410	EXK2410	EXK2410	
	7	MULTI MECHA assy	AXA7006	AXA7006	AXA7006	AXA7006			
	7	SINGLE MECHA assy					AXA7004	AXA7004	
⚠	66	S8001 Voltage selector			AKX-507		AKX-507		
⚠	1	T8005 Power transformer	ATS7009	ATS7009	ATS7010	ATS7010	ATS7010	ATS7010	
⚠	3	AC power cord	ADG1146	ADG1146	ADG1051	ADG1123	ADG1051	ADG1123	
⚠	65	FU2 Fuse (T1A/250V)			AEK-508		AEK-508		
	16	Front panel assy	AMB7075	AMB7075	AMB7075	AMB7075	AMB7074	AMB7074	
	42	└ Front panel A	AMB7054	AMB7054	AMB7054	AMB7054	AMB7053	AMB7053	
	57	└ Door spring	ABH7003	ABH7003	ABH7003	ABH7003			
	56	└ Door shaft	AXA7003	AXA7003	AXA7003	AXA7003			
	61	└ Damper	PXA1484	PXA1484	PXA1484	PXA1484			
	62	└ Screw	BPZ20P080FMC	BPZ20P080FMC	BPZ20P080FMC	BPZ20P080FMC			
	51	└ M-CD panel	AAK7016	AAK7016	AAK7016	AAK7016			
		└ S-CD panel					AAK7053	AAK7053	
	59	└ Multi door	AAK7017	AAK7017	AAK7017	AAK7017			
	10	Rear panel	ANC7026	ANC7027	ANC7021	ANC7025	ANC7020	ANC7024	
	58	Multi button	AAD7009	AAD7009	AAD7009	AAD7009			
	60	Lock lever spring	ABH7004	ABH7004	ABH7004	ABH7004			
	63	Ground lead	ADB1005	ADB1005	ADB1005	ADB1005			
	4	Cord stopper	AEP-113	AEP-113	AEC-882	AEC-882	AEC-882	AEC-882	
	54	Trans frame	ANA7002	ANA7002					
	20	Tray cap					AAK7020	AAK7020	
	35	Screw	ASZ40P060FMC	ASZ40P060FMC	ASZ30P060FZK	ASZ30P060FZK	ASZ30P060FZK	ASZ30P060FZK	
	37	Screw	BBZ30P080FZK	BBZ30P080FZK	BBZ30P080FZK	BBZ30P080FZK	BBZ30P180FMC	BBZ30P180FMC	※
		(for CD MECHA assy)							
	55	65 label	ORW1069						
	67	Caution label				VRW-329		VRW-329	

※ : Refer to page 2-6 (*3).

(2) – 2. CASSETTE MECHA SECTION (FOR ALL MODELS)

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	1	SPRING	EBH1467	51	SWITCH (AR – F)	ESN1009	
	2	SPRING	EBH1475	52	SWITCH (CrO2)	ESN1009	
	3	SPRING	EBL1021	53	SWITCH (HALF)	ESG1002	
	4	SPRING	EBH1478	54	CONNECTOR	EKS1012	
	5	SPRING	EBH1483	55	CONNECTOR	EKS1017	
	6	SPRING	EBH1472	56	PHOTO INTERRUPTER	ON1004	
	7	SPRING	EBH1496	57	LEAD WIRE	EDE1012	
	8	SPRING	EBH1495	58	RESISTOR	ERD25T561S	
	9	ARM	ENV1431	59	SCREW (For AZIMUTH)	EBA1034	
	10	BRAKE	ENV1395	60	CASSETTE MECHA UNIT (For EXK2420 and EXK2410)	EXA1347	
	11	ARM	ENV1394	60	CASSETTE MECHA UNIT (For EXK2430)	EXA1362	
	12	GEAR	ENV1393				
	13	PULLEY	ENV1291	61	SPRING	EBL1019	
	14	REEL	ENV1385	62	HEAD UNIT	EXA1316	
	15	GEAR	ENV1383	63	HEAD UNIT	EXA1317	
	16	REEL	ENV1384	64	SPRING	EBL1473	
	17	ARM	ENV1400	65	SPRING	EBL1474	
	18	BUSH	ENV1386				
	19	ARM	ENV1403	66	SPRING	EBL1476	
	20	LIMITER UNIT	EXA1349	67	SPRING	EBL1479	
	21	FLYWHEEL UNIT	EXA1330	68	LEVER	ENC1349	
	22	FLYWHEEL UNIT	EXA1329	69	SCREW	EBA1035	
	23	ROLLER UNIT	EXA1352				
	24	ROLLER UNIT	EXA1353				
	25	FLYWHEEL UNIT	EXA1322				
	26	FLYWHEEL UNIT	EXA1321				
	27	SHAFT	ELA1332				
	28	SPRING	EBH1468				
	29	SOLENOID	EXP1011				
	30	ARM	ENC1359				
	31	ARM	ENC1358				
	32	BRACKET	ENC1357				
	33	BRACKET	AZN7094				
	34	BELT	ENT1033				
	35	BELT	ENT1032				
	36	CHASSIS UNIT	EXA1348				
	37	HEAD BASE ASSY	EXX1031				
	38	MOTOR ASSY	EXX1030				
	39	HEAD BASE ASSEMBLY	EXX1029				
	40	SUB COMPLEX PCB	ENX1026				
	41	SUB COMPLEX PCB	ENX1022				
	42	DECK UNIT (For EXK2420)	EWM1002				
	42	DECK UNIT (For EXK2410 and EXK2430)	EWM1001				
	43	SCREW	BSZ20P035FMC				
	44	SCREW	PMS26P025FUC				
	45	SCREW	BSZ20P030FMC				
	46	SCREW	ATZ26P080FMC				
	47	WASHER	EBF1028				
	48	WASHER	EBF1027				
	49	SWITCH (AR – R)	ESN1009				
	50	SWITCH (CrO2)	ESN1009				

(2) - 3. CD MULTI MECHA ASSY
(FOR XR - P740M, XR - P640M AND XR - P340M)

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	1	MOTOR PULLEY	PNW1634		51	GEAR 1	PNW2052
	2	GEAR HOLDER	PNW1929		52	GEAR 2	PNW2053
	3	PU FREXIBLE CABLE	PNP1343		53	GEAR 3	PNW2054
	4	CAM GEAR	PNW1923		54	PINION GEAR	PNW2055
	5	BELT	PEB1138		55	PWB HOLDER	PNW2057
	6	TOP GUIDE N	PNW2441	NSP	56	CARRIAGE DC MOTOR/0.3W	PXM1027
	7	GEAR PULLEY	PNW1918		57	D.C. MOTOR ASSY	PEA1235
	8	GEAR S	PNW1919			(SPINDLE, with OIL)	
	9	GEAR L	PNW1920		58	PICKUP ASSY	PEA1179
	10	EJECT SPRING	PBH1107		59	DISC TABLE ASSY	PEA1035
					60	SCREW	BBZ26P060FMC
	11	SWITCH LEVER	PNW1927		61	SCREW	BPZ20P060FMC
	12	SEVEN BAR	PNW1931		62	SCREW	BPZ26P100FMC
	13	SUB ROTARY LEVER	PNW1933		63	SCREW	JFZ17P025FZK
	14	SUB ROTARY LEVER SPRING	PBH1111		64	SCREW	JFZ20P040FMC
	15	ROTARY LEVER	PNW1932		65	WASHER	WT12D032D025
	16	DRIVE PLATE	PNW1930		66		
	17	MOTOR SCREW	PBA - 112		67	STOP SPRING	PBH1131
	18	HOLDER LEVER SPRING	PBH1110		68	STOPPER	PNW2069
	19	DISC HOLDER	PNW1924		69	CARRIAGE DC MOTOR ASSY	PEA1246
	20	CUSHION A	PED1001				
	21	HOLDER LEVER	PNW1925				
	22	FLOAT RUBBER	PEB1014				
	23	FLOAT RUBBER	PEB1132	NSP	101	MOTOR	VXM1033
	24	FLOAT SCREW	PBA1073	NSP	102	EJECT LEVER	PNB1306
	25	RELEASE LEVER	PNW1934		103	UPPER CHASSIS N	PNB1267
				NSP	104	SERVO MECHANISM ASSY M	PXA1537
	26	RELEASE SPRING	PBH1106	NSP	105	LOADING BOARD ASSY	AWZ7207
	27	CLAMPER CAM	PNW1922				
	28	CLAMPER HOLDER	PNW1921		106	SUB CHASSIS N	PNW2440
	29	CLAMPER SPRING	PBH1109		107		
	30	CLAMPER	PNW1857	NSP	108	MAIN CHASSIS	PNW2074
				NSP	109	SELECT BOARD ASSY	AWZ7209
	31	LOCK LEVER	PNW1917	NSP	110	MOTOR BOARD ASSY	AWZ7208
	32	LOCK SPRING	PBH1108				
	33	STAIR NL	PNW2443	NSP	111	MECHANISM BOARD ASSY	PWX1192
	34	STAIR NR	PNW2444	NSP	112	EARTH LEAD UNIT	PDF1074
	35	SYNCHRONIZE LEVER	PNW1926	NSP	113	CLAMP MAGNET	PMF1014
				NSP	114	GEAR STOPPER	PNB1303
	36	MOTOR ASSY	PEA1130	NSP	115	YOKE M	PNB1312
		(LOADING, DISC SELECT)					
	37	SCREW	PMZ26P040FMC	NSP	116	AV ANGLE	PNB1405
	38	SCREW	PPZ30P080FMC		117	CARRIAGE BASE	PNW2445
	39	SCREW	BBZ30P060FMC				
	40	WASHER	WT26D047D025				
	41	WASHER	WA31D054D025				
	42	E RING	Z39 - 010				
	43	SCREW	IPZ30P080FMC				
	44	RUBBER SPACER	PEB1238				
	45	RUBBER SPACER	PEB1179				
	46	SILENT RING	PBK1093				
	47	WASHER	WA62D130D025				
	48	EARTH SPRING	PBH1132				
	49	GUIDE BAR	PLA1094				
	50	DISC TABLE	PNW1067				

XR-P740M, XR-P640M, XR-P340M **XR-P740, XR-P640, XR-P340**

(2)–4. CD SINGLE MECHA ASSY (FOR XR–P740, XR–P640 AND XR–P340)

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	1	LEVER SWITCH (CLAMP, S8001)	DSK1003		26	WASHER	WT12D032D025
	2	FLOAT SCREW	PBA1048		27	PICKUP ASSY	PEA1179
	3	RUBBER BELT	PEB1193		28	GUIDE BAR	PLA1094
	4	MOTOR PULLEY	PNW1634		29	GEAR 1	PNW2052
	5	TRAY	PNW2265	NSP	30	GEAR STOPPER	PNB1303
	6	FLOAT BASE	PNW2032		31	SCREW	BPZ20P060FMC
	7	DRIVE GEAR 2	PNW2369		32	PWB HOLDER	PNW2057
	8	GEAR PULLEY	PNW2034		33	SCREW	BPZ26P100FMC
	9	CLAMPER BASE	PNW2375	NSP	34	EARTH LEAD UNIT	PDF1104
	10	CLAMP CAM	PNW2364		35	SCREW	BBZ26P060FMC
	11	DC MOTOR/0.75W (LOADING)	PXM1010	NSP	36	MECHANISM BOARD ASSY	PWX1192
	12	FLOAT RUBBER	PEB1014	NSP	37	CLAMP MAGNET	PMF1014
	13	FLOAT RUBBER	PEB1132	NSP	38	YOKE	PNB1216
	14	SCREW	BPZ26P080FMC	NSP	39	H RUBBER	PEB1249
	15	SCREW	Z39–018	NSP	40	CLAMPER S	PNW1609
	16	SCREW	PMZ26P040FMC	NSP	41	LOADING BASE	PNW2376
	17	PINION GEAR	PNW2055		42	DC MOTOR ASSY (CARRIAGE)	PEA1246
NSP	18	DC MOTOR (CARRIAGE)	PXM1027	NSP	43	SERVO MECHANISM ASSY	PXA1536
	19	DC MOTOR ASSY (SPINDLE)	PEA1235		44	SCREW	BBZ30P080FZK
	20	CARRIAGE BASE	PNW2058	NSP	45	CONNECTOR ASSY (4P)	PDE1238
	21	DISC TABLE	PNW1608	NSP	46	CONNECTOR ASSY (5P)	PDE1239
	22	SCREW	JFZ20P030FNI				
	23	SCREW	JFZ17P025FZK				
	24	GEAR 3	PNW2054				
	25	GEAR 2	PNW2053				

(2)–5. POWER AMP MODULE SECTION (FOR ALL MODELS)

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	1	FRONT ASSY FOR 100W (For AXQ1019)	AWZ5389	△	18	TRANSISTOR (Q7113) (AXQ1019 only)	2SD1913
	1	FRONT ASSY FOR 50W (For AXQ1018)	AWZ5390	△	19	TRANSISTOR (Q7114) (AXQ1019 only)	2SD1913
	2	REAR, PWR, PRTEC ASSY (For AXQ1019)	AWZ5391		20	TRANSISTOR (Q7503) (AXQ1019 only)	2SC4793
	2	PWR, PRTEC ASSY (For AXQ1018)	AWZ5392		21	TRANSISTOR (Q7504) (AXQ1019 only)	2SC4793
	3	HEAT SINK (AL)	ANH1446		22	TRANSISTOR (Q7509) (AXQ1019 only)	2SA1837
	4	BRACKET	ANG1868		23	TRANSISTOR (Q7510) (AXQ1019 only)	2SA1837
	5	SHEET	AEB1256		24	TRANSISTOR (Q7511) (For AXQ1019)	2SA1264N
	6	MOLD A	AMR2594	△	24	TRANSISTOR (Q7511) (For AXQ1018)	2SA1263N
	7	MOLD B	AMR2595	△	25	TRANSISTOR (Q7512) (For AXQ1019)	2SA1264N
	8	SCREW (3 × 10)	ABA1021	△	25	TRANSISTOR (Q7512) (For AXQ1018)	2SA1263N
	9	SCREW	BBZ30P140FZK	△	26	TRANSISTOR (Q7513) (For AXQ1019)	2SC3181N
	10	SCREW	BPZ30P350FZK	△	26	TRANSISTOR (Q7513) (For AXQ1018)	2SC3180N
	11	FAN MOTOR	AXM1019	△	27	TRANSISTOR (Q7514) (For AXQ1019)	2SC3181N
	12	REGULATOR IC (IC7401)	MC7812CT	△	27	TRANSISTOR (Q7514) (For AXQ1018)	2SC3180N
	13	REGULATOR IC (IC7402)	NJM7912A				
	14	REGULATOR IC (IC7403)	MC7812CT				
	15	REGULATOR IC (IC7404)	MC7805CT				
△	16	TRANSISTOR (Q7111) (AXQ1019 only)	2SB1274				
△	17	TRANSISTOR (Q7112) (AXQ1019 only)	2SB1274				

1.9 PCB PARTS LIST

NOTES :

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56 $\times$ 10¹ $\rightarrow$ 561 RD1/8PM $\begin{bmatrix} 5 & 6 & 1 \end{bmatrix}$ J

47k Ω $\rightarrow$ 47 $\times$ 10³ $\rightarrow$ 473 RD1/4PS $\begin{bmatrix} 4 & 7 & 3 \end{bmatrix}$ J

0.5 Ω $\rightarrow$ 0R5 RN2H $\begin{bmatrix} 0 & R & 5 \end{bmatrix}$ K

1 Ω $\rightarrow$ 010 RS1P $\begin{bmatrix} 0 & 1 & 0 \end{bmatrix}$ K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω $\rightarrow$ 562 $\times$ 10¹ $\rightarrow$ 5621 RM1/4PC $\begin{bmatrix} 5 & 6 & 2 & 1 \end{bmatrix}$ F

(1) FOR XR-P740M, XR-P740, XR-P640M AND XR-P640

(1)-1. LIST OF WHOLE PCB ASSEMBLIES

Mark	Symbol & Description	Part No.						Remarks
		XR-P740M		XR-P740	XR-P640M		XR-P640	
		SD	YPW	SD	SD	YPW	SD	
	MAIN assy	AWK7041	AWK7041	AWK7080	AWK7037	AWK7037	AWK7035	
	└ AF CD assy	AWZ7095	AWZ7095	AWZ7281	AWZ7091	AWZ7091	AWZ7089	
	└ H. P assy	AWZ7105	AWZ7105	AWZ7105	AWZ7105	AWZ7105	AWZ7105	
	└ SECONDRY TRANS assy	AWZ7211	AWZ7211	AWZ7211	AWZ7211	AWZ7211	AWZ7211	
	└ VR assy	AWZ7282	AWZ7282	AWZ7282	AWZ7099	AWZ7099	AWZ7099	
	COMPLEX assy	AWM7050	AWM7051	AWM7081	AWM7040	AWM7041	AWM7034	
	└ CD DECK SW assy	AWZ7125	AWZ7125	AWZ7124	AWZ7125	AWZ7125	AWZ7124	
	└ TRANS PRIMARY assy	AWZ7130	AWZ7127	AWZ7130	AWZ7130	AWZ7127	AWZ7130	
	└ DISPLAY assy	AWZ7215	AWZ7215	AWZ7214	AWZ7118	AWZ7118	AWZ7116	
	PRO LOGIC assy	AWM7054	AWM7054	AWM7054				
	└ PROLOGIC assy	AWZ7138	AWZ7138	AWZ7138				
	└ ADDON DISPLAY assy	AWZ7141	AWZ7141	AWZ7141				
	DOLBY SURROUND assy				AWM7053	AWM7053	AWM7053	
	└ DOL SURR assy				AWZ7137	AWZ7137	AWZ7137	
	└ ADDON DISPLAY assy				AWZ7139	AWZ7139	AWZ7139	
	MULTI MECHA assy	AXA7006	AXA7006		AXA7006	AXA7006		
	└ LOADING BOARD assy	AWZ7207	AWZ7207		AWZ7207	AWZ7207		
	└ MOTOR BOARD assy	AWZ7208	AWZ7208		AWZ7208	AWZ7208		
	└ SELECT BOARD assy	AWZ7209	AWZ7209		AWZ7209	AWZ7209		
	└ MECHANISM BOARD assy	PWX1192	PWX1192		PWX1192	PWX1192		
NSP	SINGLE MECHA assy			AXA7004			AXA7004	
NSP	└ MECHANISM BOARD assy			PWX1192			PWX1192	
	FM/AM TUNER MODULE	AXQ1012	AXQ1012	AXQ1012	AXQ1012	AXQ1012	AXQ1012	
	POWER MOD. F100+R20	AXQ1019	AXQ1019	AXQ1019	AXQ1019	AXQ1019	AXQ1019	
	└ FRONT ASSY FOR 100W	AWZ5389	AWZ5389	AWZ5389	AWZ5389	AWZ5389	AWZ5389	
	└ REAR, PWR, PRTEC ASSY	AWZ5391	AWZ5391	AWZ5391	AWZ5391	AWZ5391	AWZ5391	
	CASSETTE MECHA MOD. BC	EXK2420	EXK2420	EXK2420	EXK2420	EXK2420	EXK2420	
	└ DECK unit	EWM1002	EWM1002	EWM1002	EWM1002	EWM1002	EWM1002	

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

(1) - 2. FOR XR - P740M/SD

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
AF CD ASSY							
SEMICONDUCTORS							
	IC8151		CXA1372Q		C1013, C1014		CEAS470M16
	IC8301		CXD2517Q		C2251, C2252		CEAS470M50
	IC1001		ICP - N70		C3301, C3302, C3501, C8160, C8162		CEAS47M50
	IC8201, IC8202 LA6520				C2503, C2504		CEASR15M50
	IC2104		M66311FP		C3502, C3601, C8309		CEASR47M50
	IC2101		MC14052BF		C8164, C8167, C8169, C8212		CKSQYB103K50
	IC2103, IC2201 - IC2203, IC3301, IC3501		NJM4558M - D		C8306, C8441, C8442		CKSQYB152K50
	IC3601, IC8405		NJM4558M - D		C3309, C3310, C8155		CKSQYB182K50
	IC8402		TC7S04F		C3503		CKSQYB223K50
	IC2102		TC9162N		C3305, C3306		CKSQYB273K50
	IC8401		TC9268F		C3307, C3308, C8170		CKSQYB332K50
	Q1051, Q1053		2SA1048		C8156, C8168		CKSQYB333K50
	Q1002, Q1006, Q1040		2SA1515		C2201 - C2203		CKSQYB471K50
	Q1005, Q106		2SB560		C8171, C8172		CKSQYB472K50
	Q1052, Q1403, Q9001 - Q9003, Q9005		2SC2458		C8307		CKSQYB473K50
	Q1003		2SC3377		C3311, C3312, C8157, C8202, C8203		CKSQYF103Z50
	Q105		2SD438		C8205 - C8207		CKSQYF103Z50
	Q8401		2SK246		C1301 - C1304, C2253, C2257		CKSQYF104Z50
	Q1001, Q1007, Q1041		RN1201		C8158, C8159, C8161, C8163, C8301		CKSQYF104Z50
	Q1004, Q9004		RN2201		C8304, C8308, C8361, C8414, C8415		CKSQYF104Z50
	Q8402		RN2203	RESISTORS			
	D1001		D5SB20F		VR8151, VR8152 (22kΩ)		ACP1057
	D1021, D1022, D1027, D1031		HSS104 - 02		R2125		RA11T103J
	D1153, D1154, D6901, D8301, D8401		HSS104 - 02		R1159, R1160		RD1/2PM151J
	D9001		HSS104 - 02		R1064, R1153, R1157		RD1/4PM102J
	D2201, D8211		HZS6CL		R1041		RD1/4PM222J
	D1010		HZS7BL		R1002		RD1/4PM272J
	D1002, D1003		RB152		R1020		RD1/4PM432J
	D1023		RD30ESB4		R1003		RD1/4PM472J
	D1151, D1152		RD5.1ESB		R1019		RD1/4PM511J
	D1011, D1012		RD5.6ESB2		R1301, R1302		RD1/4PMF6R8J
	D1007, D1008, D1013 - D1020		S5688G		R1031, R2101, R2102, R2105 - R2107		RD1/8PM102J
	D1024, D1025, D1041 - D1043,		S5688G		R2111 - R2113, R2117, R2129, R9007		RD1/8PM102J
	D1996 - D1999				R1040, R1063, R1154, R1158		RD1/8PM103J
CAPACITORS					R8368		RD1/8PM105J
	C1001, C1002 (6800/63)		ACH1247		R1026		RD1/8PM114J
	C2255, C8173, C8174		CCSQCH101J50		R1015		RD1/8PM223J
	C8403, C8404		CCSQCH150J50		R1051		RD1/8PM331J
	C3303, C3304		CCSQCH220J50		R3502		RD1/8PM433J
	C2204		CCSQCH331J50		R1052		RD1/8PM471J
	C8435 - C8438		CCSQCH390J50		R1151, R2136, R9001, R9002		RD1/8PM472J
	C8429, C8430		CCSQCH560J50		R2114		RD1/8PM473J
	C8433, C8434		CEANP2R2M50		R1013		RD1/8PM562J
	C1019		CEAS010M50		R2121, R2122		RD1/8PM912J
	C1016		CEAS101M10		R1006, R1016		RS1LMFR22J
	C1011, C1012		CEAS101M16		R1001		RS2LMF151J
	C1018		CEAS101M63		R1998		RS2LMF220J
	C1007, C1225		CEAS220M50		R1007, R1017		RS2LMFR22J
	C1017		CEAS221M35		R1999		RS3LMF3R9J
	C1004 - C1006		CEAS222M35		Other Resistors		RS1/10S□□□J
	C2501, C2502		CEAS2R2M50	OTHERS			
	C8216, C8217, C8302		CEAS330M16		CN8131 CONNECTOR		12FMZ - ABT
	C8175, C8176		CEAS331M16		CN8204 6P JUMPER CONNECTOR		52147 - 0610
	C1003		CEAS332M35		CN2101 PIN JACK 2P (VIDEO/AUX)		AKB1171
	C1224		CEAS3R3M50		SPEAKER TERMINAL 4 - P		AKE1026
					CN1 36P SOCKET		AKP1105

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	CN10	JUMPER CONNECTOR	KPC6	DISPLAY ASSY			
	X8401	XTAL RES (OSC)	PSS1008	SEMICONDUCTORS			
	PCB BINDER		VEF1008		IC1951		M66311FP
	CN8202	CONNECTER	VKN1051		IC2501, IC3701-IC3703		NJM4558M-D
	CN8203	CONNECTOR 4P	4-173981-4		IC1901		PD4493A
					Q1801		2SA1048
					Q1901		2SC2458
H.P ASSY					Q1902		RN1201
RESISTORS					Q1707		RN2201
	R1201, R1202		RS3LMF331J		D1701-D1705		AEL1118
	Other Resistors		RS1/10S□□□J		D1801-D1817, D1819, D1901, D1903		HSS104-02
OTHERS					D1905, D1906, D3701-D3705		HSS104-02
	CN1201	JACK	AKN1029		D1951, D1953		HZS6CL
SECONDRY TRANS ASSY					D1904		HZS7AL
SEMICONDUCTORS				COIL			
	IC1002-IC1005		ICP-N70		L1901		LAU220J
VR ASSY				SWITCHES			
SEMICONDUCTORS					S1801-S1815		ASG1034
	IC1501, IC1502 NJM4558M-D				S1901		ASX1021
	IC1551		TA8409S	CAPACITORS			
CAPACITORS					C1903		ACH1246
	C1517, C1518		CCSQCH470J50		C1952		CCSQCH101J50
	C1554		CEAS101M16		C2504		CCSQCH221J50
	C1503, C1504, C1511-C1514		CEAS2R2M50		C1907		CEJA010M50
	C1501, C1502		CEYA2R2M50		C1910, C2503, C2505		CEJA100M50
	C1557, C1558		CKSQYB273K50		C1905		CEJA221M10
	C1509, C1510, C1519, C1520		CKSQYB473K50		C1902		CEJA470M16
	C1555, C1556		CKSQYB473K50		C2502		CEJA4R7M50
	C1551-C1553		CKSQYF104Z50		C1908		CFTYA224J50
RESISTORS					C1915, C1916		CKSQYB102K50
	VR301 (100K-3B*4)		ACX1088		C1954		CKSQYB103K50
	Other Resistors		RS1/10S□□□J		C2501		CKSQYB122K50
CD DECK SW ASSY					C3710, C3711		CKSQYB152K50
SEMICONDUCTORS					C3704, C3705		CKSQYB153K50
	Q1701-Q1706		2SA1048		C3713, C3714		CKSQYB471K50
	D1708		AEL1131		C3707, C3708		CKSQYB472K50
	D1706, D1707, D1709-D1714		AEL1132		C2507, C3701, C3702		CKSQYB473K50
SWITCHES					C2506		CKSQYB682K50
	S1816-S1835		ASG1034		C1909		CKSQYF102Z50
RESISTORS					C1955		CKSQYF103Z50
	R1703		RD1/8PM201J		C1901, C1904, C1906, C1911-C1914		CKSQYF473Z50
	R1704		RD1/8PM241J		C2508, C2509, C3703, C3706, C3709		CKSQYF473Z50
	Other Resistors		RS1/10S□□□J		C3712, C3715		CKSQYF473Z50
TRANS PRIMARY ASSY				RESISTORS			
COILS AND FILTERS					VR2501 (10K-B)		ACS1104
	L1101		ATF-151		R1701		RD1/8PM181J
CAPACITORS					R1801-R1804		RD1/8PM223J
	C1102 (0.01/400)		ACG1003		R1941		RD1/8PM472J
RESISTORS					R1919		RD1/8PM473J
	Other Resistors		RS1/10S□□□J		R1935, R1938, R1939		RD1/8PM561J
					Other Resistors		RS1/10S□□□J
OTHERS				OTHERS			
					V1701		AAV7002
					JACK		AKN1030
					CN1001 36P SOCKET		AKP1105
					X1901		ASS1018
					REMOTE RECEIVER UNIT		AXX1023

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

Mark	No.	Description	Parts No.
PROLOGIC ASSY			
SEMICONDUCTORS			
	IC3406		LA2780N
	IC3410		LM3364K-15
	IC3408		LV1001M-A
	IC3402		MC14053BF
	IC3403-IC3405, IC3409		NJM4558M-D
	IC3401		TC9154AP
	Q3401, Q3402, Q3407, Q3408		2SC1740S
	Q3409		2SC2458
	Q3405		2SD438
	Q3403, Q3404, Q3406		RN2203
	D3401, D3403, D3404, D3406-D3410		HSS104-02
	D3412		RD5.1ESB
CAPACITORS			
	C3403, C3404, C3407, C3408		CCSQCH101J50
	C3460, C3469		CCSQCH102J50
	C3455, C3470		CCSQCH151J50
	C3484		CCSQCH331J50
	C3410, C3430, C3440		CCSQCH681J50
	C3444, C3445, C3449, C3450		CEANL4R7M50
	C3429		CEANP100M35
	C3443		CEANPR33M50
	C3427		CEAS010M50
	C3416, C3419, C3421, C3422, C3426		CEAS100M50
	C3441, C3442, C3446		CEAS100M50
	C3417		CEAS101M16
	C3474		CEAS221M10
	C3464, C3471		CEAS221M16
	C3472		CEAS221M25
	C3413, C3414, C3476, C3477		CEAS2R2M50
	C3415		CEAS470M25
	C3466		CEAS471M16
	C3463, C3467		CEAS4R7M50
	C3452, C3453		CEASR15M50
	C3425		CEASR22M50
	C3457, C3458		CEYA3R3M50
	C3431, C3432		CEYAR33M50
	C3411		CFTYA103J50
	C3409, C3433, C3436, C3438, C3439		CFTYA104J50
	C3456		CFTYA104J50
	C3412		CFTYA153J50
	C3451, C3461, C3462		CFTYA154J50
	C3459, C3468		CFTYA223J50
	C3428		CFTYA333J50
	C3447		CFTYA334J50
	C3454		CFTYA473J50
	C3424		CFTYA683J50
	C3475		CKSQYB103K50
	C3434		CKSQYB471K50
	C3478, C3483		CKSQYB473K50
	C3418		CKSQYB562K50
	C3448		CKSQYB681K50
	C3465, C3473, C3479-C3482		CKSQYF104Z50
	C3423		CQMA392J50
	C3420		CQMA472J50
	C3435		CQMA562J50
	C3437		CQMA682J50

Mark	No.	Description	Parts No.
RESISTORS			
	VR3401 (22kΩ)		ACP1044
	R3472		RD1/2PM561J
	R3473-R3475		RD1/8PM222J
	Other Resistors		RS1/10S□□□J
OTHERS			
	CN3401 PIN JACK 3P (CENTER, REAR)		AKB1215
	X3401 CRYSTAL RESONATOR		ASS1015
ADDON DISPLAY			
SEMICONDUCTORS			
	IC3952		NJM4558M-D
	IC3951		PDG108A
	Q3951		2SA1515
	Q3952		RN2201
	D3951-D3954, D3956-D3960		HSS104-02
	D3955		HZS6C1L
COILS AND FILTERS			
	L3951		LAU220K
SWITCHES			
	S3951-S3955		ASG1034
CAPACITORS			
	C3953, C3954		CEJA100M16
	C3951		CEJA100M50
	C3956		CEJA101M10
	C3952		CKSQYF102Z50
	C3961		CKSQYF104Z50
	C3957-C3960		CKSQYF473Z50
RESISTORS			
	VR3951 (10K-B)		ACS1103
	R4029-R4032, R4034		RD1/8PM102J
	Other Resistors		RS1/10S□□□J
OTHERS			
	V3951 FL TUBE		AAV7001
	X3951 CRYSTAL RESONATOR		ASS1015
	CN20 CONNECTOR (13P)		KPE13
LOADING BOARD ASSY			
SWITCHES			
	S601, S602		DSG1016
MOTOR BOARD ASSY			
OTHERS			
	CN602 6PJUMPER CONNECTOR		52151-0610
SELECT BOARD ASSY			
SWITCHES			
	S604-S606		DSG1016
	S603		PSG1010
MECHANISM BOARD ASSY			
SWITCHES			
	S610		DSG1016

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
FM/AM TUNER MODULE							
SEMICONDUCTORS							
	IC6201		LA1836M		C6225, C6241, C6266		CKSQYF473Z50
	IC6202		LM7001J		C6232		CKSYB333K50
	Q6102		2SC2223		C6251		CKSYB472K50
	Q6203		2SC2235		C6223		CKSYF103Z50
	Q6202		2SC2712		C6263		CKSYF473Z50
	Q6103, Q6214		2SC2714	RESISTORS			
	Q6201		2SK208		VR6201 (10kΩ)		ACP1043
	Q6104		2SK302		VR6202		VRTB6VS223
	Q6101		3SK194		R6299, R6300		RD1/8PM102J
	Q6204		XDA124EK		R6113, R6116, R6118, R6268—R6271		RS1/8S000J
	Q6217		XDC124EK		R6275, R6276, R6278, R6283, R6284		RS1/8S000J
	D6101, D6102		1T33		R6290, R6293, R6294, R6297		RS1/8S000J
COILS AND FILTERS					R6243, R6244		RS1/8S101J
	L6104		ATC1003		R6211		RS1/8S103J
	L6101		ATC1020		R6237		RS1/8S182J
	L6102		ATC1021		R6209		RS1/8S221J
	T6101		ATE—063		R6239		RS1/8S332J
	L6207 (10.7MHZ)		ATE1013		R6101		RS1/8S470J
	F6204 (SFE10.7MA8)		ATF—107		Other Resistors		RS1/10S□□□J
	F6203 (SFE10.7MS3G)		ATF—119	OTHERS			
	F6101		ATF—155		BN6201 TERMINAL 4—P		AKA1016
	F6202 (450KHZ)		ATF1145		X6203 CRYSTAL RESONATOR		ASS1042
	L6103		ATH1043		X6201 CRYSTAL RESONATOR		ASS1066
	L6202, L6203, L6208		LCTA2R2J3225		X6202 CERAMIC RESONATOR		ATF1027
CAPACITORS					AM RF TUNING BLOCK		AXX1041
	C6202, C6234, C6236 (1μ/16V)		ACG1051	FRONT ASSY FOR 100W			
	C6235 (0.47/25V)		ACG1052	SEMICONDUCTORS			
	C6107		CCSCH010C50		IC7501		UPC4570G2
	C6229		CCSCH821J50		IC7701, IC7702		XRA4558F—P
	C6110		CCSQCH020C50		Q7507, Q7508		2SA1182
	C6101		CCSQCH050C50		Q7601		2SA1255
	C6108, C6203, C6268		CCSQCH101J50		Q7501, Q7502		2SC2240
	C6111, C6116, C6208, C6221, C6222		CCSQCH150J50		Q7605, Q7606, Q7703		2SC2712
	C6115		CCSQCH330J50		Q7505, Q7506		2SC2859
	C6114		CCSQRH080D50		Q7603		2SC3138
	C6113		CCSQRH180J50		Q7704		XDC143EK
	C6105		CCSQTH150J50		D7505, D7506, D7517, D7518		1SS181
	C6261		CEAS010M50		D7503, D7504, D7516		1SS184
	C6224, C6231, C6233, C6246, C6262		CEAS100M50		D7521—D7524		1SS244
	C6216, C6217		CEAS330M16		D7519, D7520, D7525, D7526, D7531		HSS104—02
	C6219		CEAS470M10		D7533, D7701—D7704, D7707		HSS104—02
	C6243—C6245		CEAS470M16		D7710—D7713		HSS104—02
	C6227		CEAS470M25		D7507—D7510		RD3.3ESB2
	C6238		CEJA100M16	CAPACITORS			
	C6249, C6250		CEJA4R7M35		C7703 (1/16V)		ACG1051
	C6215		CFTXA103J50		C7523, C7524 (10/35V)		ACH1150
	C6214		CFTXA224J50		C7509, C7510 (47/16V)		ACH1151
	C6103, C6106, C6112, C6204		CKSQYB102K50		C7539, C7540 (22/16V)		ACH1248
	C6102, C6109, C6117, C6210, C6264		CKSQYB103K50		C7519—C7522, C7545—C7552		CCSQCH101J50
	C6213		CKSQYB223K50		C7525—C7528		CCSQCH271J50
	C6230		CKSQYB333K50		C7503, C7504		CCSQCH331J50
	C6228, C6252		CKSQYB472K50		C7541, C7542		CCSQCH470J50
	C6209, C6237, C6265, C6267		CKSQYB473K50		C7529—C7532		CKSQYB333K50
	C6212, C6218		CKSQYF103Z50		C7543, C7544		CKSQYB472K50
	C6220, C6226, C6239, C6242, C6255		CKSQYF223Z50		C7602		CKSQYF103Z50
					C7601, C7603, C7702		CKSQYF104Z50
					C7537		CKSQYF473Z50

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

Mark	No.	Description	Parts No.
RESISTORS			
	VR7701 (1kΩ)		ACPI076
	R7519, R7520 (630kΩ)		ACN1106
	R7515, R7516 (1.8kΩ)		ACN1107
	R7541, R7542		RD1/4PMF100J
	R7547—R7550		RS1/10S2200F
	R7709		RS1/10S39R0F
	R7710		RS1/10S56R0F
	R7708		RS1/10S7500F
	R7753		RS1/8S000J
	R7537—R7540		RS1/8S100J
	R7551, R7552		RD1/8PM333J
	R7553		RS1/8S101J
	R7543, R7544		RS1/8S7R5J
	Other Resistors		RS1/10S□□□J

REAR, PWR, PRTEC ASSY

SEMICONDUCTORS

IC7101	UPC4570G2
Q7107, Q7108, Q7208, Q7215, Q7219	2SA1162
Q7213	2SA1182
Q7109, Q7110	2SB1115
Q7301, Q7302	2SC1815
Q7101, Q7102	2SC2240
Q7105, Q7106, Q7205—Q7207, Q7209	2SC2712
Q7212, Q7214, Q7218, Q7220, Q7221	2SC2712
Q7216	2SC2859
Q7211, Q7217	2SC3138
Q7103, Q7104	2SD1615
Q7210, Q7222	XDA124EK
D7113, D7114	1SS181
D7111, D7112	1SS184
D7103—D7106, D7201, D7205	HSS104—02
D7204, D7206	HZS6C3L
D7203	HZS9A2L
D7107—D7110	RD2.2ESB2

CAPACITORS

C7402, C7406, C7408 (0.082/25V)	ACG1050
C7401, C7405, C7407 (0.33/50V)	ACG1053
C7123, C7124, C7212 (1/50V)	ACH1056
C7409 (10/35V)	ACH1150
C7109, C7110, C7205, C7207, C7208 (47/16V)	ACH1151
C7140, C7141	ACH1248
C7119—C7122	CCSQCH101J50
C7133—C7136	CCSQCH221J50
C7125—C7128	CCSQCH271J50
C7103, C7104	CCSQCH331J50
C7142, C7143	CCSQCH470J50
C7301	CKSQYB332K50
C7129—C7132	CKSQYB333K50
C7213, C7214	CKSQYF103Z50
C7206, C7404	CKSQYF104Z50
C7137, C7138	CKSQYF472Z50
C7139	CKSQYF473Z50

RESISTORS

R7403, R7404 (1.0Ω)	ACN1104
R7119, R7120	ACN1105
R7115, R7116 (1.8kΩ)	ACN1107

Mark	No.	Description	Parts No.
	R7137—R7140		RS1/10S0100F
	R7303		RS1/10S1002F
	R7151, R7152		RS1/10S333J
	R7147—R7150		RS1/10S2200F
	R7304		RS1/10S8200F
	R7141—R7144		RS1/8S100J
	R7153		RS1/8S101J
	Other Resistors		RS1/10S□□□J
OTHERS			
	CN7101 CONNECTOR (12P)		KPE12

OTHER ELECTRICAL PARTS

FRONT ASSY FOR 100W

SEMICONDUCTORS

IC7404	MC7805CT
IC7401, IC7403	MC7812CT
IC7402	NJM7912A
△ Q7111, Q7112	2SB1274
△ Q7113, Q7114	2SD1913

REAR, PWR, PRTEC ASSY

SEMICONDUCTORS

△ Q7511, Q7512	2SA1264N
Q7509, Q7510	2SA1837
△ Q7513, Q7514	2SC3181N
Q7503, Q7504	2SC4793

OTHERS

POWER MOD. PCB	ANP1708
FAN MOTOR	AXM1019

DECK UNIT

SEMICONDUCTORS

IC4431	CXA1330S
IC4901	M66320FP
IC4202	MC14066BF
IC4101, IC4151, IC4301	NJM4558M—D
Q4111, Q4113, Q4161, Q4352	2SA1515
Q4356	2SC2240
Q4101, Q4102, Q4151, Q4152, Q4203—Q4206, Q4301, Q4302, Q4305, Q4306, Q4451—Q4454	2SC2458
Q4355	2SC2712
Q4353, Q4354	2SC3377
Q4307, Q4308	2SK373
Q4303, Q4432, Q4901	XDA124ES
Q4208	XDA143ES
Q4112, Q4114, Q4155, Q4162, Q4357, Q4431, Q4433, Q4434	XDC124ES
Q4207, Q4351	XDC143ES
D4111, D4161, D4201, D4202, D4301—D4306, D4451, D4452, D4901—D4906	HSS104—02

COILS AND FILTERS

F4431, F4432	ATF1064
T4351	ATX—043
L4301, L4302	LTA272J
L4303, L4304	LTA822J

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
CAPACITORS							
	C4361 (2000p/630V)		ACE1020		C4358		CQMA123K250
	C4319, C4320		CCDSL271K500		C4356		CQMA153J50
	C4323, C4324		CCSQCH100D50		C4433 - C4436		CQMA222J50
	C4902		CCSQCH101J50		C4362		CQMA562K400
	C4353		CCSQCH221J50		C4105, C4106, C4155, C4156		CQMA682J50
	C4109, C4110, C4159, C4160		CCSQCH471J50		C4311, C4312		CQMA823J50
	C4151, C4152		CCSQCH561J50		C4998, C4999		CQMA104J50
	C4101, C4102, C4321, C4322, C4355		CCSQCH681J50	RESISTORS			
	C4303, C4304, C4451, C4452		CEAS010M50		VR4111		VRTP6HS103
	C4359, C4360, C4364, C4403, C4404, C4443 - C4446, C4454		CEAS100M50		VR4201 - VR4204		VRTP6HS203
	C4365, C4366, C4453		CEAS220M16		VR4351, VR4352		VRTP6HS204
	C4301, C4302, C4315, C4316		CEAS2R2M50		VR4301, VR4302		VRTP6HS502
	C4103, C4104, C4153, C4154, C4309, C4310, C4317, C4318		CEAS330M16		R4353		RD1/2PM560J
	C4357		CEAS3R3M50		R4444		RD1/8PM103J
	C4107, C4108, C4157, C4158		CEAS470M10		R4121		RD1/8PM153J
	C4351		CEAS470M16		R4361, R4362		RD1/8PM333J
	C4207, C4208		CEAS4R7M50		R4401, R4402		RD1/8PM473J
	C4437, C4438		CEASR22M50		R4357		RD1/8PM6R8J
	C4439 - C4442		CEASR33M50		R4113, R4114, R4163, R4164, R4323, R4324		RD1/8PM820J
	C4363		CKCYB222K500		Other Resistors		RS1/10S□□□J
	C4352, C4354		CKSQYB103K50	OTHERS			
	C4313, C4314		CKSQYB222K50		CN24 3P SOCKET		EKS1018
	C4307, C4308		CKSQYB273K50		CN25 5P SOCKET		EKS1019
	C4305, C4306		CKSQYB473K50		CN16 12P JUMPER CONNECTOR		KPE12
	C4901		CKSQYF473Z50		CN3002 13P JUMPER CONNECTOR		KPE13

**(1) - 3. FOR XR - P740M/YPW, XR - P740/SD, XR - P640M/SD, YPW AND XR - P640/SD
AF CD ASSY**

AWZ7281, AWZ7091, AWZ7089 and AWZ7095 have the same construction except for the following :

Mark	Symbol & Description	Part No.				Remarks
		AWZ7095	AWZ7281	AWZ7091	AWZ7089	
	IC2203	NJM4558M - D	NJM4558M - D			
	D1010	HZS7BL	RD7.5ESB	HZS7BL	HZS7BL	
	R2217, R2218, R3469, R3470	RS1/10S472J	RS1/10S472J			
	R2219, R2220	RS1/10S104J	RS1/10S104J			
	R3411, R3412	RS1/10S911J	RS1/10S911J			
	R5003, R5009			RS1/10S223J	RS1/10S223J	
	R5011, R5012			RS1/10S000J	RS1/10S000J	
	CN8203	4 - 173981 - 4		4 - 173981 - 4		
	CN8203		VKN1052		VKN1052	
	CN8204	52147 - 0610		52147 - 0610		
	PCB binder	VEF1008		VEF1008		

VR ASSY

AWZ7099 and AWZ7282 have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ7282	AWZ7099	
	C1501, C1502	CEYA2R2M50	CEAS2R2M50	
	VR301	ACX1088	ACX1092	

CD DECK SW ASSY

AWZ7124 and AWZ7125 have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ7125	AWZ7124	
	Q1701-Q1706	2SA1048		
	D1709-D1714	AEL1132		
	S1828, S1830-S1835	ASG1034		
	S1836		ASG1034	
	R1705-R1710, R1729-R1734	RS1/10S301J		
	R1711-R1716	RS1/10S273J		
	R1717-R1722	RS1/10S272J		

TRANS PRIMARY ASSY

AWZ7127 and AWZ7130 have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ7130	AWZ7127	
	L1101	ATF-151		
	C1102 (0.01/400)	ACG1003		

DISPLAY ASSY

AWZ7214, AWZ7118, AWZ7116 and AWZ7215 have the same construction except for the following :

Mark	Symbol & Description	Part No.				Remarks
		AWZ7215	AWZ7214	AWZ7118	AWZ7116	
	IC1901	PD4493A	PD4492A	PD4493A	PD4492A	
	R1723-R1728	RS1/10S562J		RS1/10S562J		

ADDON DISPLAY ASSY

AWZ7139 and AWZ7141 have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ7141	AWZ7139	
	R3968 R3969 R4030-R4034	 RS1/10S473J RD1/8PM102J	RS1/10S473J	

DOL SURR ASSY

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
SEMICONDUCTORS				RESISTORS			
	IC3404		LA2730		VR3401		ACP1044
	IC3403		M50198P		R3451		RD1/2PM271J
	IC3405		MC14066BF		R3422		RD1/4PM390J
	IC3401, IC3402, IC3407		NJM4558M-D		R3440		RD1/8PM102J
	IC3406		TC9154AP		R3452-R3454		RD1/8PM222J
	Q3402		2SC1740S		Other Resistors		RS1/10S□□□J
	Q3405		2SC2458	OTHERS			
	Q3404		RN1201		PIN JACK (2P)		AKB1164
	Q3403		RN2201		X3401 CERAMIC OSCILLATOR		ASS1016
	Q3401		RN2203				
	D3410		1SS226				
	D3401-D3404, D3406-D3408		HSS104-02				
	D3409		RD5.1ESB				
COILS AND FILTERS							
	L3401		LAU5R6K				
CAPACITORS							
	C3414		CEANP100M35				
	C3421		CEAS010M50				
	C3404, C3417, C3424, C3427, C3431		CEAS100M50				
	C3426		CEAS101M10				
	C3425		CEAS220M16				
	C3401, C3402, C3430, C3432		CEAS2R2M50				
	C3434-C3436		CEAS2R2M50				
	C3405, C3409		CEAS470M16				
	C3418		CEAS470M25				
	C3419		CEASR33M50				
	C3416		CFTYA103J50				
	C3408, C3413, C3420		CFTYA104J50				
	C3422, C3429		CFTYA333J50				
	C3410, C3411		CFTYA474J50				
	C3437		CKSQYB471K50				
	C3440, C3441		CKSQYF104Z50				
	C3403, C3442		CKSQYF473Z50				
	C3423		CQMA153J50				
	C3428		CQMA472J50				
	C3407, C3415		CQMA561J50				
	C3406, C3412		CQMA562J50				

XR-P740M, XR-P640M, XR-P340M
XR-P740, XR-P640, XR-P340

(2) FOR XR-P340M AND XR-P340

(2)-1. LIST OF WHOLE PCB ASSEMBLIES

Mark	Symbol & Description	Part No.						Remarks
		XR-P340M				XR-P340		
		KU	KC	SD	YPW	SD	YPW	
NSP	MAIN assy	AWK7034	AWK7034	AWK7082	AWK7082	AWK7081	AWK7081	
	└ AF CD assy	AWZ7088	AWZ7088	AWZ7287	AWZ7287	AWZ7286	AWZ7286	
	└ H. P assy	AWZ7103	AWZ7103	AWZ7103	AWZ7103	AWZ7103	AWZ7103	
	└ SECONDRY TRANS assy	AWZ7107	AWZ7107	AWZ7107	AWZ7107	AWZ7107	AWZ7107	
	└ VR assy	AWZ7270	AWZ7270	AWZ7280	AWZ7280	AWZ7280	AWZ7280	
	COMPLEX assy	AWM7027	AWM7027	AWM7028	AWM7029	AWM7020	AWM7021	
	└ CD DECK SW assy	AWZ7125	AWZ7125	AWZ7125	AWZ7125	AWZ7124	AWZ7124	
	└ TRANS PRIMARY assy	AWZ7131	AWZ7131	AWZ7130	AWZ7127	AWZ7130	AWZ7127	
	└ DISPLAY assy	AWZ7113	AWZ7113	AWZ7114	AWZ7114	AWZ7110	AWZ7110	
	MULTI MECHA assy	AXA7006	AXA7006	AXA7006	AXA7006			
	└ LOADING BOARD assy	AWZ7207	AWZ7207	AWZ7207	AWZ7207			
	└ MOTOR BOARD assy	AWZ7208	AWZ7208	AWZ7208	AWZ7208			
	└ SELECT BOARD assy	AWZ7209	AWZ7209	AWZ7209	AWZ7209			
	└ MECHANISM BOARD assy	PWX1192	PWX1192	PWX1192	PWX1192			
	SINGLE MECHA assy					AXA7004	AXA7004	
	└ MECHANISM BOARD assy					PWX1192	PWX1192	
	FM/AM TUNER MODULE	AXQ1012	AXQ1012	AXQ1012	AXQ1012	AXQ1012	AXQ1012	
	POWER MOD. F50	AXQ1018	AXQ1018	AXQ1018	AXQ1018	AXQ1018	AXQ1018	
	└ FRONT ASSY FOR 50W	AWZ5390	AWZ5390	AWZ5390	AWZ5390	AWZ5390	AWZ5390	
	└ REAR, PRTEC ASSY	AWZ5392	AWZ5392	AWZ5392	AWZ5392	AWZ5392	AWZ5392	
	CASSETTE MECHA MOD. B	EXK2430	EXK2410	EXK2410	EXK2410	EXK2410	EXK2410	
	└ DECK unit	EWM1001	EWM1001	EWM1001	EWM1001	EWM1001	EWM1001	

(2)-2. FOR XR-P340M/KU

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
AF CD ASSY							
SEMICONDUCTORS							
	IC8151	CXA1372Q			Q1051, Q1053		2SA1048
	IC8301	CXD2517Q			Q1002, Q1006, Q1040		2SA1515
	IC1001	ICP-N70			Q1005, Q106		2SB560
	IC8201, IC8202 LA6520				Q1052, Q1403, Q9001, Q9002		2SC2458
	IC2104	M66311FP			Q1003		2SC3377
	IC2101	MC14052BF			Q105		2SD438
	IC2201, IC2202, IC3301, IC3501, IC3601	NJM4558M--D			Q8401		2SK246
	IC8405	NJM4558M--D			Q1001, Q1007, Q1041		RN1201
	IC8402	TC7S04F			Q1004, Q9004		RN2201
	IC2102	TC9162N			Q8402		RN2203
	IC8401	TC9268F			D1001		D3SBA20 (A)
					D1021, D1022, D1027, D1031		HSS104-02
					D1153, D1154, D6901, D8301, D8401		HSS104-02
					D9001		HSS104-02

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	D2201, D8211		HZS6CL	R1019			RD1/4PM511J
	D1010		HZS7BL	R1301, R1302			RD1/4PMF6R8J
	D1002		RB152				
	D1023		RD30ESB4	R1031, R2101, R2102, R2105-R2107			RD1/8PM102J
	D1151, D1152		RD5.1ESB	R2111-R2113, R2117, R2129, R9007			RD1/8PM102J
				R1040, R1063, R1154, R1158			RD1/8PM103J
	D1011, D1012		RD5.6ESB2	R8368			RD1/8PM105J
	D1007, D1008, D1013-D1020		S5688G	R1032			RD1/8PM152J
	D1024, D1025, D1041-D1043		S5688G				
CAPACITORS				R1051			RD1/8PM331J
	C1009 (0.01/150V)		ACG1005	R3502			RD1/8PM433J
	C1001, C1002 (5600/56V)		ACH1211	R1052			RD1/8PM471J
	C2255, C8173, C8174		CCSQCH101J50	R1151, R2136			RD1/8PM472J
	C8403, C8404		CCSQCH150J50	R2114			RD1/8PM473J
	C3303, C3304		CCSQCH220J50				
	C2204		CCSQCH331J50	R1013			RD1/8PM562J
	C8435-C8438		CCSQCH390J50	R1026			RD1/8PM823J
	C8429, C8430		CCSQCH560J50	R2121, R2122			RD1/8PM912J
	C8433, C8434		CEANP2R2M50	R1007, R1017			RS2LMFR22J
	C1019		CEAS010M50	Other Resistors			RS1/10S□□□□J
	C1016		CEAS101M10	OTHERS			
	C1011, C1012		CEAS101M16	CN8131 CONNECTOR			12FMZ-ABT
	C1018		CEAS101M63	CN8204 6P JUMPER CONNECTOR			52147-0610
	C1007, C1225		CEAS220M50	CN2102 PIN JACK 2P (SP OUT)			AKB1146
	C1017		CEAS221M35	CN2101 PIN JACK 2P (VIDEO/AUX)			AKB1171
	C1004		CEAS222M35	SPEAKER TERMINAL 4-P			AKE1026
	C8216, C8217, C8302		CEAS330M16				
	C8175, C8176		CEAS331M16	CN1 36P SOCKET			AKP1105
	C1003		CEAS332M35	CN10 JUMPER CONNECTOR			KPC6
	C1224		CEAS3R3M50	X8401 XTAL RES (OSC)			PSS1008
	C1013, C1014		CEAS470M16	PCB BINDER			VEF1008
	C2251, C2252		CEAS470M50	CN8202 CONNECTER			VKN1051
	C3301, C3302, C3501, C8160, C8162		CEAS4R7M50	CN8203 CONNECTOR 4P			4-173981-4
	C2503, C2504		CEASR15M50	H. P ASSY			
	C3502, C3601, C8309		CEASR47M50	RESISTORS			
	C8164, C8167, C8169, C8212		CKSQYB103K50	R1201, R1202			RS2LMF331J
	C8306, C8441, C8442		CKSQYB152K50	Other Resistors			RS1/10S□□□□J
	C3309, C3310, C8155		CKSQYB182K50	OTHERS			
	C3503		CKSQYB223K50	CN1201 JACK			AKN1029
	C3305, C3306		CKSQYB273K50	SECONDRY TRANS ASSY			
	C3307, C3308, C8170		CKSQYB332K50	SEMICONDUCTORS			
	C8156, C8168		CKSQYB333K50	IC1006-IC1009			ICP-N70
	C2201-C2203		CKSQYB471K50	VR ASSY			
	C8171, C8172		CKSQYB472K50	SEMICONDUCTORS			
	C8307		CKSQYB473K50	IC1501			NJM4558M-D
	C3311, C3312, C8157, C8202, C8203		CKSQYF103Z50	IC1551			TA8409S
	C8205-C8207		CKSQYF103Z50	CAPACITORS			
	C1301-C1304, C2253, C2257		CKSQYF104Z50	C1554			CEAS101M16
	C8158, C8159, C8161, C8163, C8301		CKSQYF104Z50	C1501-C1504			CEAS2R2M50
	C8304, C8308, C8361, C8414, C8415		CKSQYF104Z50	C1557, C1558			CKSQYB273K50
	C8431, C8432, C8461, C8462		CKSQYF104Z50	C1509, C1510, C1555, C1556			CKSQYB473K50
				C1551-C1553			CKSQYF104Z50
RESISTORS				RESISTORS			
	VR8151, VR8152 (22kΩ)		ACP1057	VR301 (100K-3B*2)			ACX1089
	R2125		RA11T103J	Other Resistors			RS1/10S□□□□J
	R1159, R1160		RD1/2PM151J				
	R1064, R1153, R1157		RD1/4PM102J				
	R1041		RD1/4PM222J				
	R1002		RD1/4PM272J				
	R1020		RD1/4PM432J				
	R1003		RD1/4PM472J				

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

Mark	No.	Description	Parts No.
------	-----	-------------	-----------

DISPLAY ASSY

SEMICONDUCTORS

IC1951	M66311FP
IC2501, IC3701 - IC3703	NJM4558M - D
IC1901	PD4493A
Q1901	2SC2458
Q1902	RN1201

Q1707	RN2201
D1701 - D1705	AEL1118
D1801 - D1815, D1819, D1820, D1901	HSS104 - 02
D1903, D1905, D1906, D3701 - D3705	HSS104 - 02
D1951, D1953	HZS6CL

D1904	HZS7AL
-------	--------

COILS AND FILTERS

L1901	LAU220J
-------	---------

SWITCHES

S1801 - S1815	ASG1034
S1901	ASX1021

CAPACITORS

C1903	ACH1246
C1952	CCSQCH101J50
C2504	CCSQCH221J50
C1907	CEJA010M50
C1910, C2503, C2505	CEJA100M50

C1905	CEJA221M10
C1902	CEJA470M16
C2502	CEJA4R7M50
C1908	CFTYA224J50
C1915, C1916	CKSQYB102K50

C1954	CKSQYB103K50
C2501	CKSQYB122K50
C3710, C3711	CKSQYB152K50
C3704, C3705	CKSQYB153K50
C3713, C3714	CKSQYB471K50

C3707, C3708	CKSQYB472K50
C2507, C3701, C3702	CKSQYB473K50
C2506	CKSQYB682K50
C1909	CKSQYF102Z50
C1955	CKSQYF103Z50

C1901, C1904, C1906, C1911 - C1914	CKSQYF473Z50
C2508, C2509, C3703, C3706, C3709	CKSQYF473Z50
C3712, C3715	CKSQYF473Z50

RESISTORS

VR2501 (10K - B)	ACS1104
R1701	RD1/8PM181J
R1801 - R1804	RD1/8PM223J
R1941	RD1/8PM472J
R1919	RD1/8PM473J

R1935, R1938, R1939	RD1/8PM561J
Other Resistors	RS1/10S□□□J

OTHERS

V1701 FL TUBE	AAV7002
JACK	AKN1030
CN1001 36P SOCKET	AKP1105
X1901 CERAMIC RESONATOR	ASS1018
REMOTE RECEIVER UNIT	AXX1023

Mark	No.	Description	Parts No.
------	-----	-------------	-----------

CD DECK SW ASSY

CD DECK SW assy of XR - P340M/KU is the same as that of XR - P740M/SD.

Refer to "(1) - 2. FOR XR - P740M/SD".

TRANS PRIMARY ASSY

CAPACITORS

C1102 (0.01/400)	ACG1003
------------------	---------

RESISTORS

R1101 (2.2M, 1/2W)	ACN - 208
Other Resistors	RS1/10S□□□J

LOADING BOARD ASSY

LOADING BOARD assy of XR - P340M/KU is the same as that of XR - P740M/SD.

Refer to "(1) - 2. FOR XR - P740M/SD".

MOTOR BOARD ASSY

MOTOR BOARD assy of XR - P340M/KU is the same as that of XR - P740M/SD.

Refer to "(1) - 2. FOR XR - P740M/SD".

SELECT BOARD ASSY

SELECT BOARD assy of XR - P340M/KU is the same as that of XR - P740M/SD.

Refer to "(1) - 2. FOR XR - P740M/SD".

MECHANISM BOARD ASSY

MECHANISM BOARD assy of XR - P340M/KU is the same as that of XR - P740M/SD.

Refer to "(1) - 2. FOR XR - P740M/SD".

FM/AM TUNER MODULE

FM/AM TUNER MODULE of XR - P340M/KU is the same as that of XR - P740M/SD.

Refer to "(1) - 2. FOR XR - P740M/SD".

FRONT ASSY FOR 50W

SEMICONDUCTORS

IC7501	UPC4570G2
IC7701, IC7702 XRA4558F - P	
Q7507, Q7508	2SA1182
Q7601	2SA1255
Q7517, Q7518	2SB1115

Q7501, Q7502	2SC2240
Q7605, Q7606, Q7703	2SC2712
Q7505, Q7506	2SC2859
Q7603	2SC3138
Q7515, Q7516	2SD1615

Q7704	XDC143EK
D7505, D7506, D7517, D7518	1SS181
D7503, D7504, D7516	1SS184
D7521 - D7524	1SS244
D7519, D7520, D7525, D7526, D7531	HSS104 - 02

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	D2201, D8211		HZS6CL		R1019		RD1/4PM511J
	D1010		HZS7BL		R1301, R1302		RD1/4PMF6R8J
	D1002		RB152				
	D1023		RD30ESB4		R1031, R2101, R2102, R2105-R2107		RD1/8PM102J
	D1151, D1152		RD5.1ESB		R2111-R2113, R2117, R2129, R9007		RD1/8PM102J
					R1040, R1063, R1154, R1158		RD1/8PM103J
	D1011, D1012		RD5.6ESB2		R8368		RD1/8PM105J
	D1007, D1008, D1013-D1020		S5688G		R1032		RD1/8PM152J
	D1024, D1025, D1041-D1043		S5688G				
CAPACITORS					R1051		RD1/8PM331J
	C1009 (0.01/150V)		ACG1005		R3502		RD1/8PM433J
	C1001, C1002 (5600/56V)		ACH1211		R1052		RD1/8PM471J
	C2255, C8173, C8174		CCSQCH101J50		R1151, R2136		RD1/8PM472J
	C8403, C8404		CCSQCH150J50		R2114		RD1/8PM473J
	C3303, C3304		CCSQCH220J50				
					R1013		RD1/8PM562J
	C2204		CCSQCH331J50		R1026		RD1/8PM823J
	C8435-C8438		CCSQCH390J50		R2121, R2122		RD1/8PM912J
	C8429, C8430		CCSQCH560J50		R1007, R1017		RS2LMFR22J
	C8433, C8434		CEANP2R2M50		Other Resistors		RS1/10S□□□J
	C1019		CEAS010M50	OTHERS			
					CN8131 CONNECTOR		12FMZ-ABT
	C1016		CEAS101M10		CN8204 6P JUMPER CONNECTOR		52147-0610
	C1011, C1012		CEAS101M16		CN2102 PIN JACK 2P (SP OUT)		AKB1146
	C1018		CEAS101M63		CN2101 PIN JACK 2P (VIDEO/AUX)		AKB1171
	C1007, C1225		CEAS220M50		SPEAKER TERMINAL 4-P		AKE1026
	C1017		CEAS221M35				
					CN1 36P SOCKET		AKP1105
	C1004		CEAS222M35		CN10 JUMPER CONNECTOR		KPC6
	C8216, C8217, C8302		CEAS330M16		X8401 XTAL RES (OSC)		PSS1008
	C8175, C8176		CEAS331M16		PCB BINDER		VEF1008
	C1003		CEAS332M35		CN8202 CONNECTER		VKN1051
	C1224		CEAS333M50		CN8203 CONNECTOR 4P		4-173981-4
				H. P ASSY			
	C1013, C1014		CEAS470M16				
	C2251, C2252		CEAS470M50	RESISTORS			
	C3301, C3302, C3501, C8160, C8162		CEAS4R7M50		R1201, R1202		RS2LMF331J
	C2503, C2504		CEASR15M50		Other Resistors		RS1/10S□□□J
	C3502, C3601, C8309		CEASR47M50				
				OTHERS			
	C8164, C8167, C8169, C8212		CKSQYB103K50		CN1201 JACK		AKN1029
	C8306, C8441, C8442		CKSQYB152K50				
	C3309, C3310, C8155		CKSQYB182K50	SECONDRY TRANS ASSY			
	C3503		CKSQYB223K50	SEMICONDUCTORS			
	C3305, C3306		CKSQYB273K50		IC1006-IC1009		ICP-N70
	C3307, C3308, C8170		CKSQYB332K50	VR ASSY			
	C8156, C8168		CKSQYB333K50	SEMICONDUCTORS			
	C2201-C2203		CKSQYB471K50		IC1501		NJM4558M-D
	C8171, C8172		CKSQYB472K50		IC1551		TA8409S
	C8307		CKSQYB473K50				
				CAPACITORS			
	C3311, C3312, C8157, C8202, C8203		CKSQYF103Z50		C1554		CEAS101M16
	C8205-C8207		CKSQYF103Z50		C1501-C1504		CEAS2R2M50
	C1301-C1304, C2253, C2257		CKSQYF104Z50		C1557, C1558		CKSQYB273K50
	C8158, C8159, C8161, C8163, C8301		CKSQYF104Z50		C1509, C1510, C1555, C1556		CKSQYB473K50
	C8304, C8308, C8361, C8414, C8415		CKSQYF104Z50		C1551-C1553		CKSQYF104Z50
	C8431, C8432, C8461, C8462		CKSQYF104Z50	RESISTORS			
RESISTORS					VR301 (100K-3B*2)		ACX1089
	VR8151, VR8152 (22kΩ)		ACP1057		Other Resistors		RS1/10S□□□J
	R2125		RA11T103J				
	R1159, R1160		RD1/2PM151J				
	R1064, R1153, R1157		RD1/4PM102J				
	R1041		RD1/4PM222J				
	R1002		RD1/4PM272J				
	R1020		RD1/4PM432J				
	R1003		RD1/4PM472J				

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

Mark	No.	Description	Parts No.
------	-----	-------------	-----------

DISPLAY ASSY

SEMICONDUCTORS

IC1951	M66311FP
IC2501, IC3701-IC3703	NJM4558M-D
IC1901	PD4493A
Q1901	2SC2458
Q1902	RN1201

Q1707	RN2201
D1701-D1705	AEL1118
D1801-D1815, D1819, D1820, D1901	HSS104-02
D1903, D1905, D1906, D3701-D3705	HSS104-02
D1951, D1953	HZS6CL

D1904	HZS7AL
-------	--------

COILS AND FILTERS

L1901	LAU220J
-------	---------

SWITCHES

S1801-S1815	ASG1034
S1901	ASX1021

CAPACITORS

C1903	ACH1246
C1952	CCSQCH101J50
C2504	CCSQCH221J50
C1907	CEJA010M50
C1910, C2503, C2505	CEJA100M50

C1905	CEJA221M10
C1902	CEJA470M16
C2502	CEJA4R7M50
C1908	CFTYA224J50
C1915, C1916	CKSQYB102K50

C1954	CKSQYB103K50
C2501	CKSQYB122K50
C3710, C3711	CKSQYB152K50
C3704, C3705	CKSQYB153K50
C3713, C3714	CKSQYB471K50

C3707, C3708	CKSQYB472K50
C2507, C3701, C3702	CKSQYB473K50
C2506	CKSQYB682K50
C1909	CKSQYF102Z50
C1955	CKSQYF103Z50

C1901, C1904, C1906, C1911-C1914	CKSQYF473Z50
C2508, C2509, C3703, C3706, C3709	CKSQYF473Z50
C3712, C3715	CKSQYF473Z50

RESISTORS

VR2501 (10K-B)	ACS1104
R1701	RD1/8PM181J
R1801-R1804	RD1/8PM223J
R1941	RD1/8PM472J
R1919	RD1/8PM473J

R1935, R1938, R1939	RD1/8PM561J
Other Resistors	RS1/10S□□□□

OTHERS

V1701 FL TUBE	AAV7002
JACK	AKN1030
CN1001 36P SOCKET	AKP1105
X1901 CERAMIC RESONATOR	ASS1018
REMOTE RECEIVER UNIT	AXX1023

Mark	No.	Description	Parts No.
------	-----	-------------	-----------

CD DECK SW ASSY

CD DECK SW assy of XR-P340M/KU is the same as that of XR-P740M/SD.

Refer to "(1)-2. FOR XR-P740M/SD".

TRANS PRIMARY ASSY

CAPACITORS

C1102 (0.01/400)	ACG1003
------------------	---------

RESISTORS

R1101 (2.2M, 1/2W)	ACN-208
Other Resistors	RS1/10S□□□□

LOADING BOARD ASSY

LOADING BOARD assy of XR-P340M/KU is the same as that of XR-P740M/SD.

Refer to "(1)-2. FOR XR-P740M/SD".

MOTOR BOARD ASSY

MOTOR BOARD assy of XR-P340M/KU is the same as that of XR-P740M/SD.

Refer to "(1)-2. FOR XR-P740M/SD".

SELECT BOARD ASSY

SELECT BOARD assy of XR-P340M/KU is the same as that of XR-P740M/SD.

Refer to "(1)-2. FOR XR-P740M/SD".

MECHANISM BOARD ASSY

MECHANISM BOARD assy of XR-P340M/KU is the same as that of XR-P740M/SD.

Refer to "(1)-2. FOR XR-P740M/SD".

FM/AM TUNER MODULE

FM/AM TUNER MODULE of XR-P340M/KU is the same as that of XR-P740M/SD.

Refer to "(1)-2. FOR XR-P740M/SD".

FRONT ASSY FOR 50W

SEMICONDUCTORS

IC7501	UPC4570G2
IC7701, IC7702 XRA4558F-P	
Q7507, Q7508	2SA1182
Q7601	2SA1255
Q7517, Q7518	2SB1115

Q7501, Q7502	2SC2240
Q7605, Q7606, Q7703	2SC2712
Q7505, Q7506	2SC2859
Q7603	2SC3138
Q7515, Q7516	2SD1615

Q7704	XDC143EK
D7505, D7506, D7517, D7518	1SS181
D7503, D7504, D7516	1SS184
D7521-D7524	1SS244
D7519, D7520, D7525, D7526, D7531	HSS104-02

Mark	No. •	Description	Parts No.	Mark	No.	Description	Parts No.
		D7533, D7701-D7704, D7707 D7710-D7713 D7507-D7510	HSS104-02 HSS104-02 RD3.3ESB2			RESISTORS	
						R7403, R7404 (1Ω) R7303 R7304 Other Resistors	ACN1104 RS1/10S1002F RS1/10S8200F RS1/10S□□□J
		CAPACITORS				OTHERS	
		C7703 (1/16V) C7523, C7524 (10/35V) C7509, C7510 (47/16V) C7539, C7540 (22/16V) C7519-C7522, C7545-C7552	ACG1051 ACH1150 ACH1151 ACH1248 CCSQCH101J50			CN7101 CONNECTOR (12P)	KPE12
		C7525-C7528 C7503, C7504 C7541, C7542 C7529-C7532 C7543, C7544	CCSQCH271J50 CCSQCH331J50 CCSQCH470J50 CKSQYB333K50 CKSQYB472K50			OTHER ELECTRICAL PARTS	
		C7602 C7601, C7603, C7702 C7537	CKSQYF103Z50 CKSQYF104Z50 CKSQYF473Z50			FRONT ASSY FOR 50W	
						SEMICONDUCTORS	
						IC7404 IC7401, IC7403 IC7402	MC7805CT MC7812CT NJM7912A
		RESISTORS				PWR, PRTEC ASSY	
		VR7701 (1kΩ) R7519, R7520 (630kΩ) R7515, R7516 (1.8kΩ) R7541, R7542 R7547-R7550	ACP1076 ACN1106 ACN1107 RD1/4PMF100J RS1/10S2200F			SEMICONDUCTORS	
		R7709 R7710 R7708 R7753 R7537-R7540	RS1/10S39R0F RS1/10S56R0F RS1/10S7500F RS1/8S000J RS1/8S100J			Q7511, Q7512 Q7513, Q7514	2SA1264N 2SC3181N
		R7551, R7552 R7553 R7543, R7544 Other Resistors	RD1/8PM333J RS1/8S101J RS1/8S7R5J RS1/10S□□□J			OTHERS	
						POWER MOD. PCB FAN MOTOR	ANP1708 AXM1019
		PWR, PRTEC ASSY				DECK UNIT	
		SEMICONDUCTORS				SEMICONDUCTORS	
		Q7208, Q7215, Q7219 Q7213 Q7301, Q7302 Q7207, Q7209, Q7212, Q7214, Q7218 2SC2712 Q7220, Q7221	2SA1162 2SA1182 2SC1815			IC4421 IC4901 IC4202 IC4101, IC4151, IC4301 Q4111, Q4113, Q4161, Q4352	CXA1100P M66320FP MC14066BF NJM4558M-D 2SA1515
		Q7216 Q7211, Q7217 Q7210, Q7222 D7201, D7205 D7204, D7206	2SC2859 2SC3138 XDA124EK HSS104-02 HZS6C3L			Q4356 Q4101, Q4102, Q4151, Q4152, Q4203-Q4206, Q4301, Q4302, Q4305, Q4306, Q4451-Q4454 Q4355 Q4353, Q4354	2SC2240 2SC2458
		D7203	HZS9A2L			Q4307, Q4308 Q4303, Q4901 Q4208 Q4112, Q4114, Q4155, Q4162, Q4357 Q4207, Q4351	2SC2712 2SC3377
		CAPACITORS				D4111, D4161, D4201, D4202, D4301-D4306, D4451, D4452, D4901-D4906	2SK373 XDA124ES XDA143ES XDC124ES XDC143ES
		C7402, C7406, C7408 (0.082/25V) C7401, C7405, C7407 (0.33/50V) C7212 (1/50V) C7409 (10/35V) C7205, C7207, C7208 (47/16V)	ACG1050 ACG1053 ACH1056 ACH1150 ACH1151			COILS AND FILTERS	HSS104-02
		C7301 C7213, C7214 C7206, C7404	CKSQYB332K50 CKSQYF103Z50 CKSQYF104Z50			F4401, F4402 T4351 L4301, L4302 L4303, L4304	ATF1064 ATX-043 LTA272J LTA822J
						CAPACITORS	
						C4361 (2000P/630V) C4319, C4320 C4323, C4324 C4902 C4353	ACE1020 CCDSL271K500 CCSQCH100D50 CCSQCH101J50 CCSQCH221J50

XR-P740M, XR-P640M, XR-P340M
XR-P740, XR-P640, XR-P340

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	C4109, C4110, C4159, C4160		CCSQCH471J50		C4105, C4106		CQMA682J50
	C4151, C4152		CCSQCH561J50		C4155, C4156		CQMA682J50
	C4101, C4102, C4321, C4322, C4355		CCSQCH681J50		C4311, C4312		CQMA823J50
	C4303, C4304, C4451, C4452		CEAS010M50				
	C4359, C4360, C4364, C4403 – C4405, C4407, C4454		CEAS100M50		RESISTORS		
					VR4111		VRTP6HS103
	C4401, C4408		CEAS101M16		VR4201 – VR4204		VRTP6HS203
	C4365, C4366, C4453		CEAS220M16		VR4351, VR4352		VRTP6HS204
	C4301, C4302, C4315, C4316		CEAS2R2M50		VR4301, VR4302		VRTP6HS502
	C4103, C4104, C4153, C4154, C4309, C4310, C4317, C4318		CEAS330M16		R4353		RD1/2PM560J
	C4357		CEAS3R3M50				
	C4107, C4108, C4157, C4158		CEAS470M10		R4121		RD1/8PM153J
	C4351		CEAS470M16		R4401, R4402		RD1/8PM242J
	C4207, C4208		CEAS4R7M50		R4361, R4362		RD1/8PM333J
	C4402, C4406		CEASR22M50		R4357		RD1/8PM6R8J
	C4363		CKCYB222K500		R4113, R4114, R4163, R4164, R4323, R4324		RD1/8PM820J
					Other Resistors		RS1/10S□□□J
	C4352, C4354		CKSQYB103K50		OTHERS		
	C4313, C4314		CKSQYB222K50		CN24 3P SOCKET		EKS1018
	C4307, C4308		CKSQYB273K50		CN25 5P SOCKET		EKS1019
	C4305, C4306		CKSQYB473K50		CN16 12P JUMPER CONNECTOR		KPE12
	C4901		CKSQYF473Z50		CN3002 13P JUMPER CONNECTOR		KPE13
	C4358		CQMA123K250				
	C4356		CQMA153J50				
	C4362		CQMA562K400				

(2) – 3. FOR XR – P340M/KC, SD, YPW, XR – P340/SD AND YPW

AF CD ASSY

AWZ7287, AWZ7286 and AWZ7088 have the same construction except for the following :

Mark	Symbol & Description	Part No.			Remarks
		AWZ7088	AWZ7287	AWZ7286	
	D1010	HZS7BL	RD7.5ESB	RD7.5ESB	
	D1032, D1033		HSS104 – 02	HSS104 – 02	
	D2201, D8211	HZS6CL	RD6.2ESB	RD6.2ESB	
	D1996, D1997		S5688G	S5688G	
	C1001, C1002 (5600/56)	ACH1211			
	C1001, C1002 (3300/50)		ACH1066	ACH1066	
	C1010 (0.01/150)		ACG1005	ACG1005	
	R1223	RS1/10S303J	RS1/10S333J	RS1/10S333J	
	R1997		RD1/8PM100J	RD1/8PM100J	
	R1998		RS1LMF220J	RS1LMF220J	
	R1999		RS3LMF6R8J	RS3LMF6R8J	
	R3503	RS1/10S272J		RS1/10S272J	
	CN8203	4 – 173981 – 4	4 – 173981 – 4		
	CN8203			VKN1052	
	CN8204	52147 – 0610	52147 – 0610		
	PCB binder	VEF1008	VEF1008		

VR ASSY

AWZ7280 and AWZ7270 have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ7270	AWZ7280	
	C1501, C1502 C1557, C1558 R1555-R1558	CEAS2R2M50 CKSQYB273K50 RS1/10S823J	CEYA2R2M50 CKSQYB393K50 RS1/10S104J	

CD DECK SW ASSY

CD DECK SW assemblies of XR-P340M and XR-P340 are the same as those of XR-P740M and XR-P740. Refer to "(1)-2. FOR XR-P740M/SD".

TRANS PRIMARY ASSY

AWZ7130, AWZ7127 and AWZ7131 have the same construction except for the following :

Mark	Symbol & Description	Part No.			Remarks
		AWZ7131	AWZ7130	AWZ7127	
	L1101 C1102 (0.01/400) R1101 (2.2M, 1/2W)	 ACG1003 ACN-208	ATF-151 ACG1003 		

DISPLAY ASSY

AWZ7114, AWZ7110 and AWZ7113 have the same construction except for the following :

Mark	Symbol & Description	Part No.			Remarks
		AWZ7113	AWZ7114	AWZ7110	
	IC1901 D1820 R1723-R1728	PD4493A HSS104-02 RS1/10S562J	PD4493A RS1/10S562J	PD4492A	

Service Manual

STEREO MULTI-PLAY CD CASSETTE DECK RECEIVER

XR-P740M

XR-P640M

XR-P340M

STEREO CD CASSETTE DECK RECEIVER

XR-P740

XR-P640

XR-P340

CHAPTER 2


2.1 PACKING AND EXPLODED VIEWS ... 2-2

**2.2 SCHEMATIC AND PCB CONNECTION
DIAGRAMS 2-16**

CHAPTER 2

2.1 PACKING AND EXPLODED VIEWS


(1) PACKING (FOR ALL MODELS)

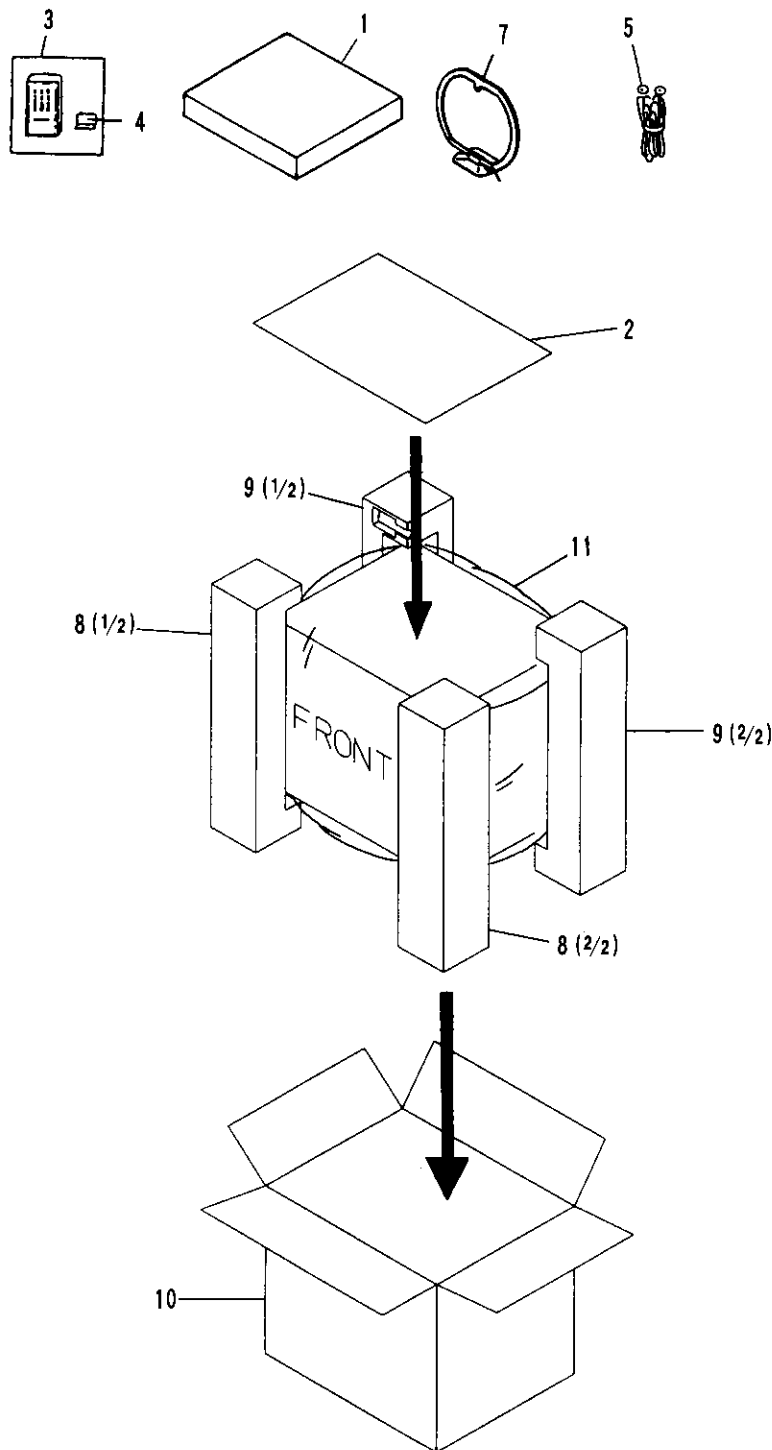


(2) EXPLODED VIEWS


(2) - 1. EXTERIOR

■ For XR-P740M, XR-P740, XR-P640M and XR-P640

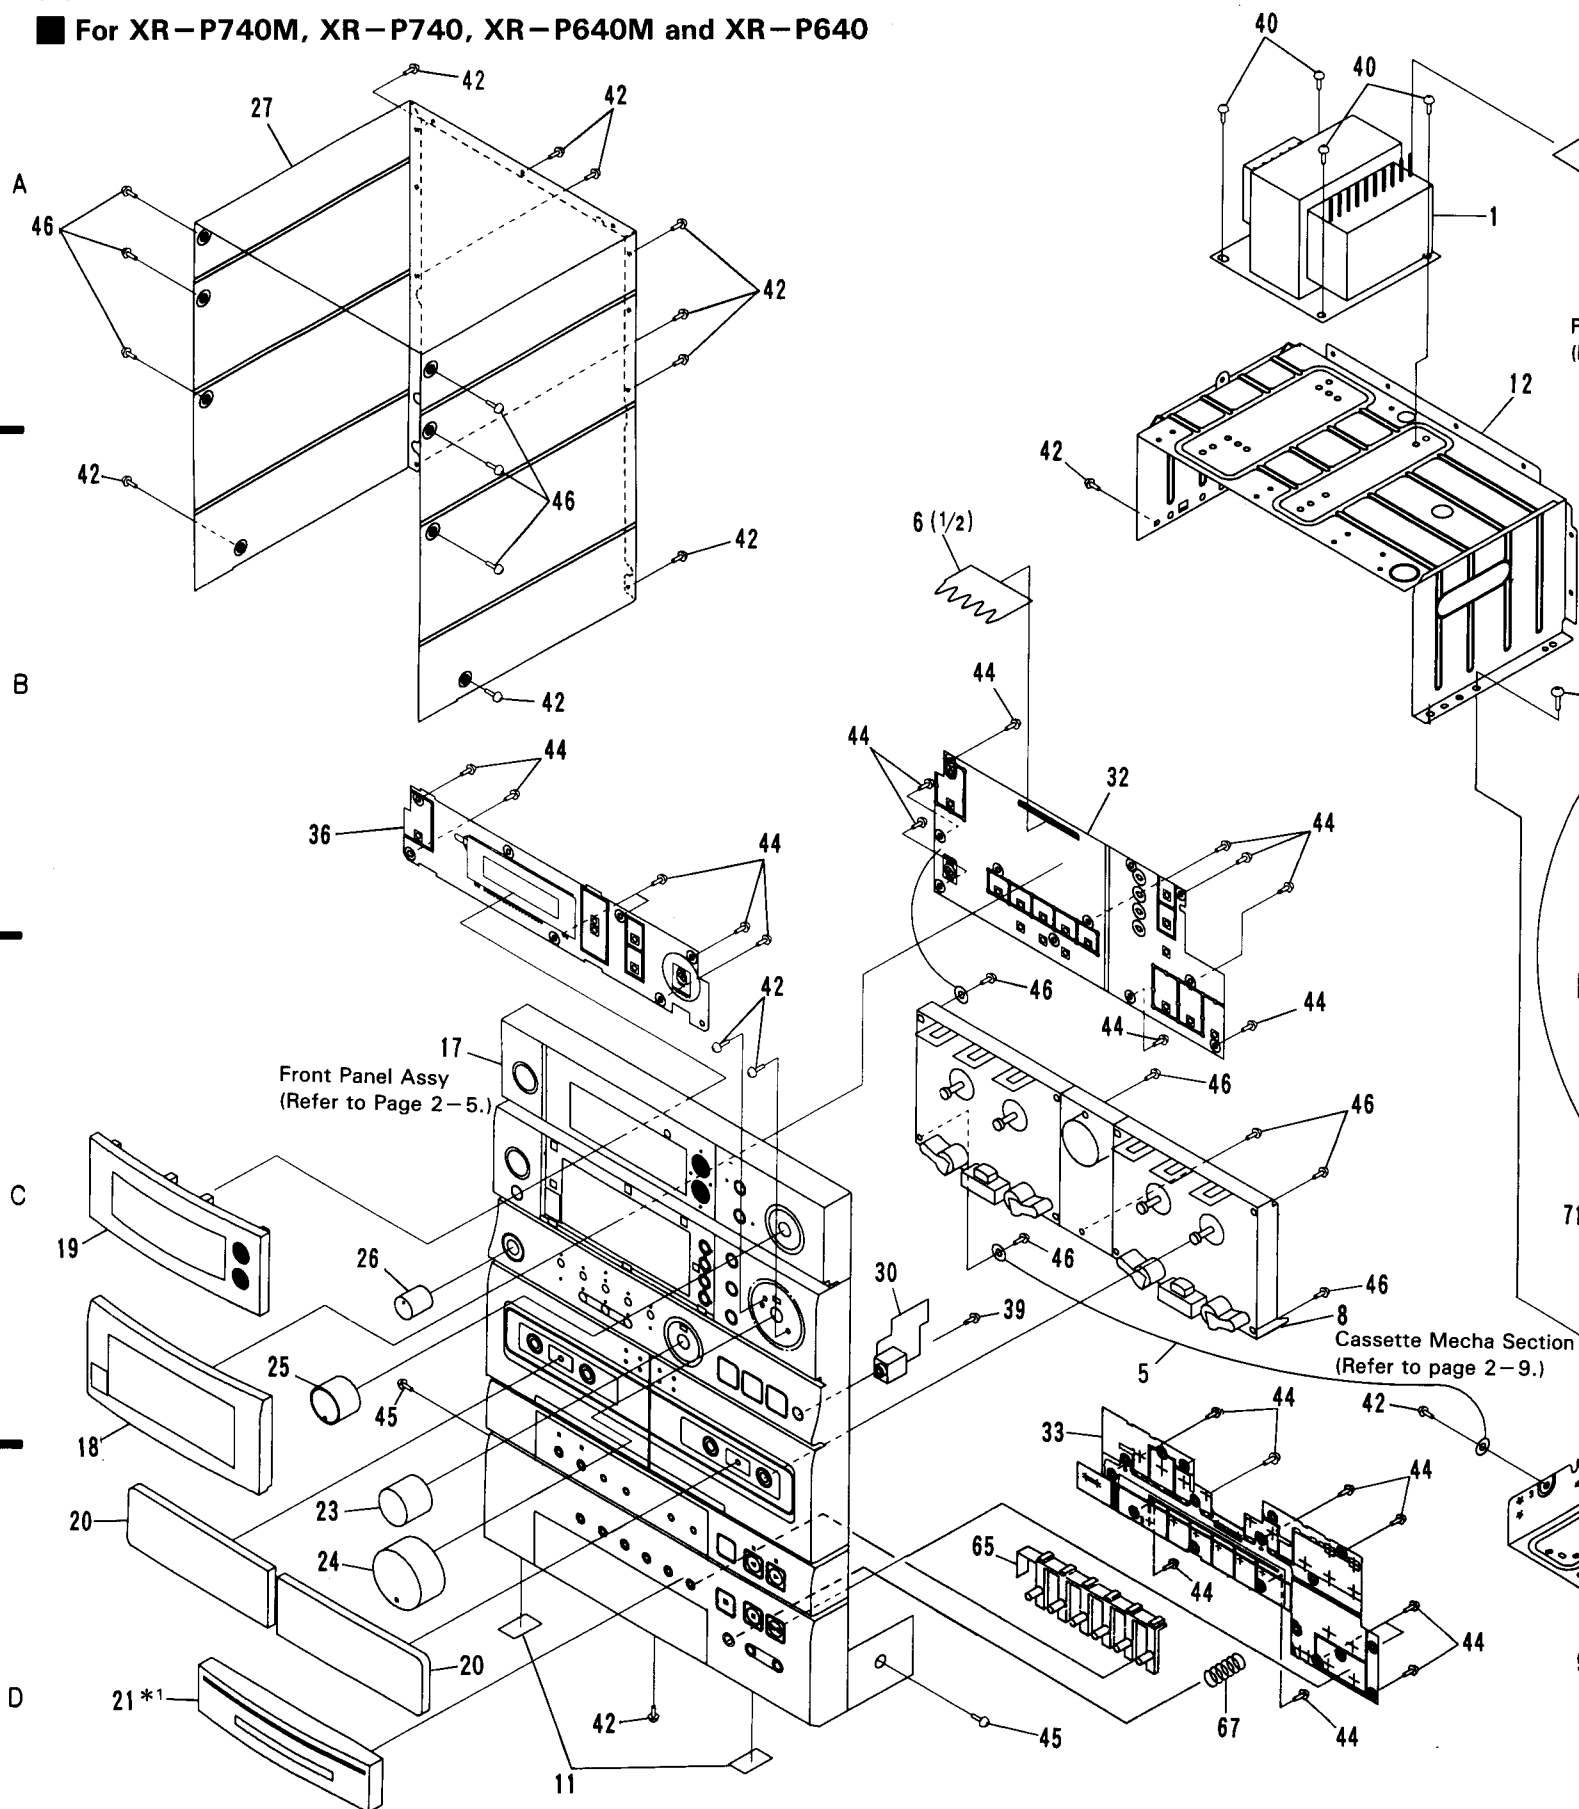

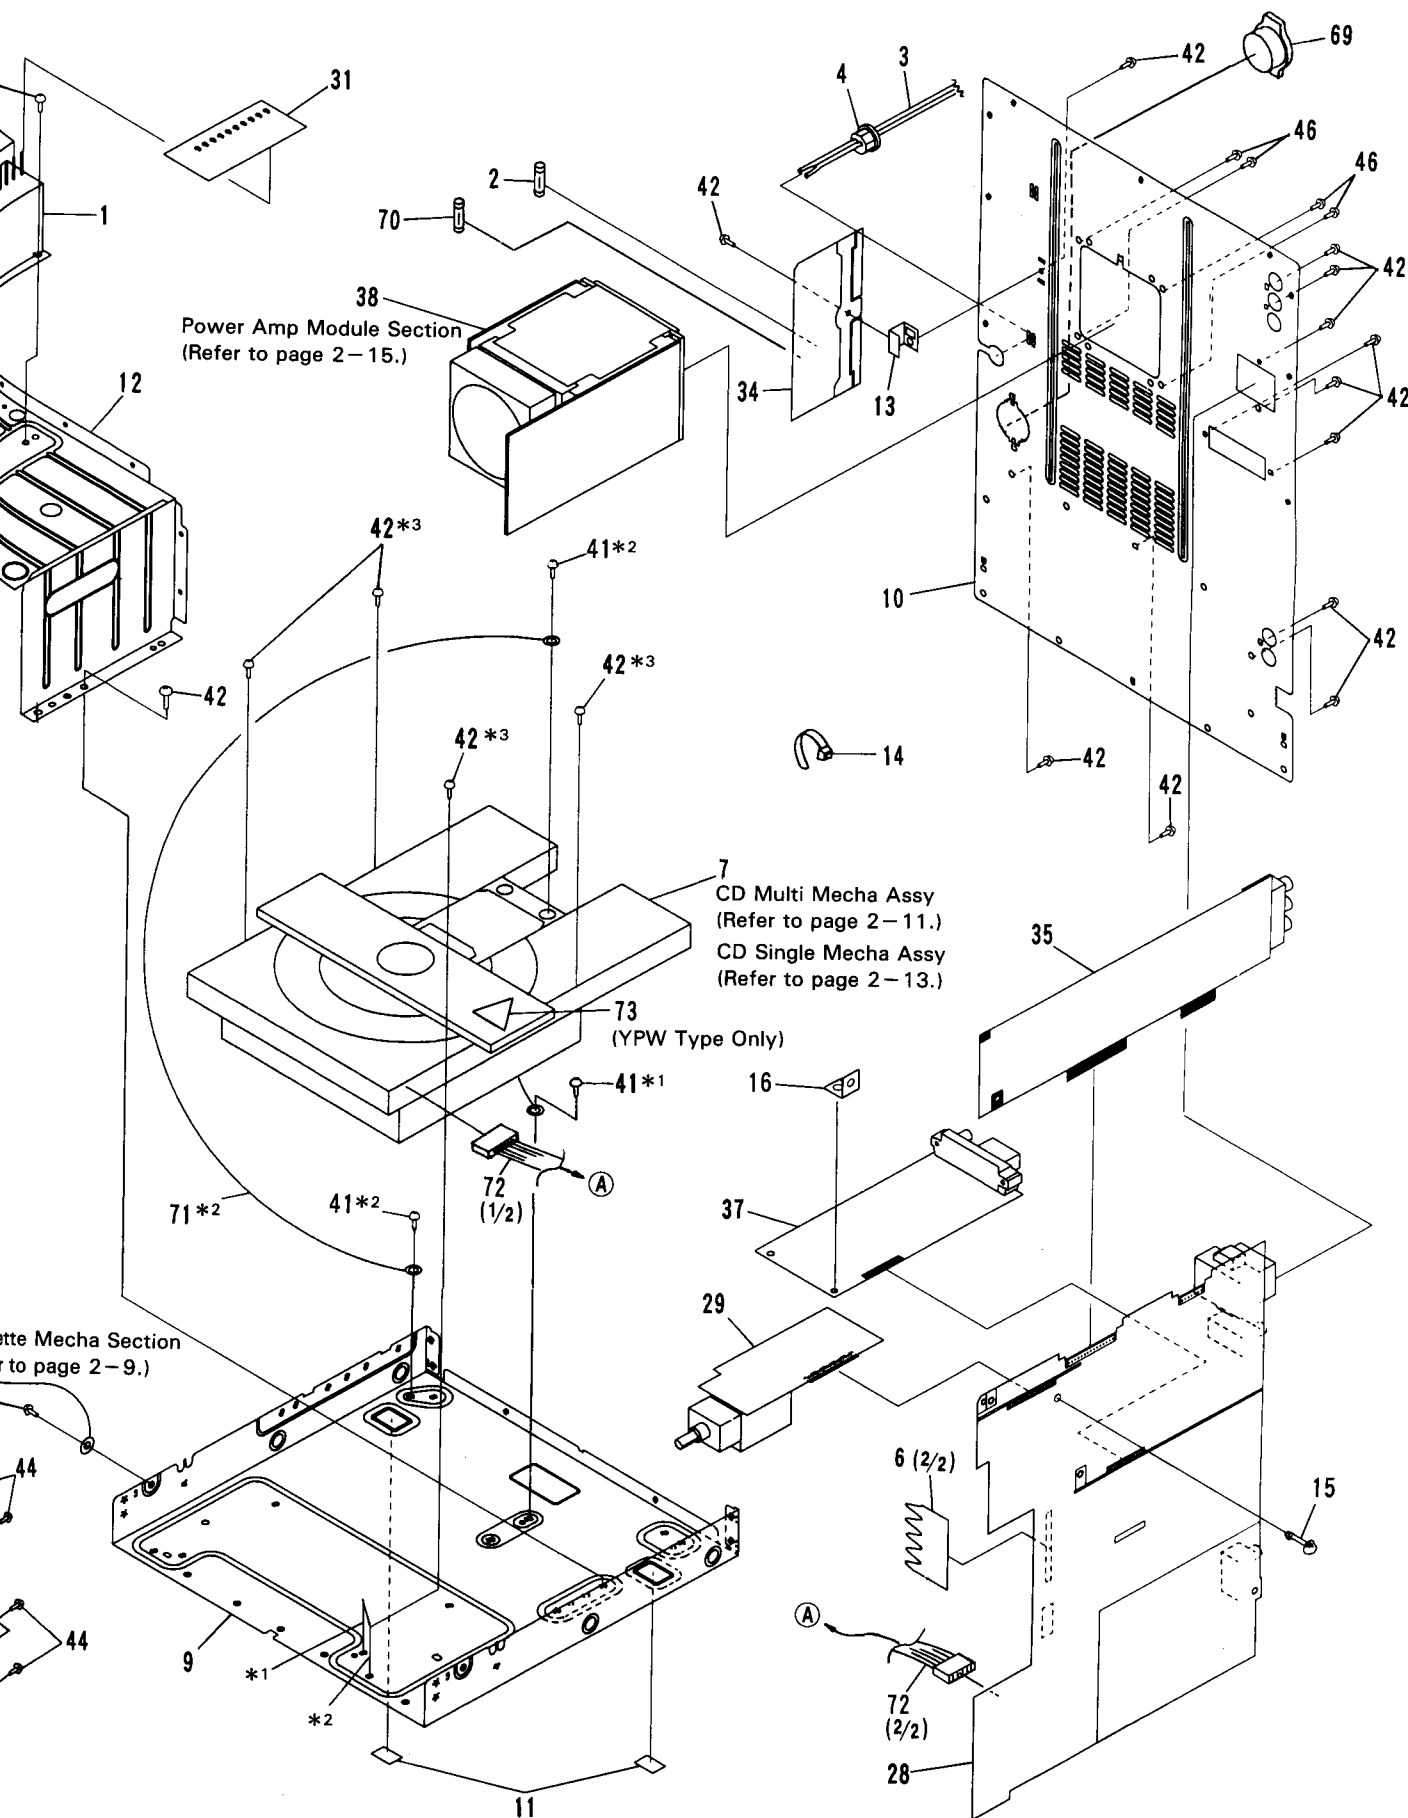


Front Pa

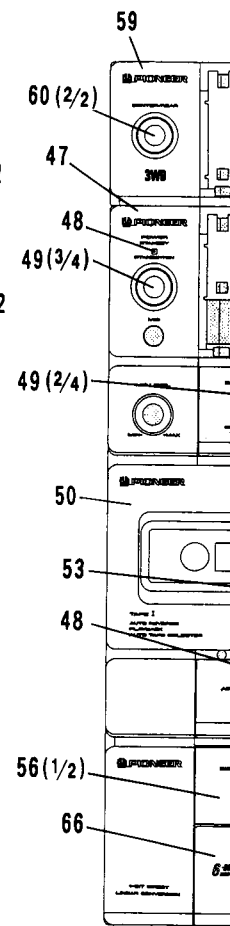

mark on the product
bly.


*1: XR-P740 and XR-P640 Only
*2: XR-P740M and XR-P640M Only

Front Panel Assy

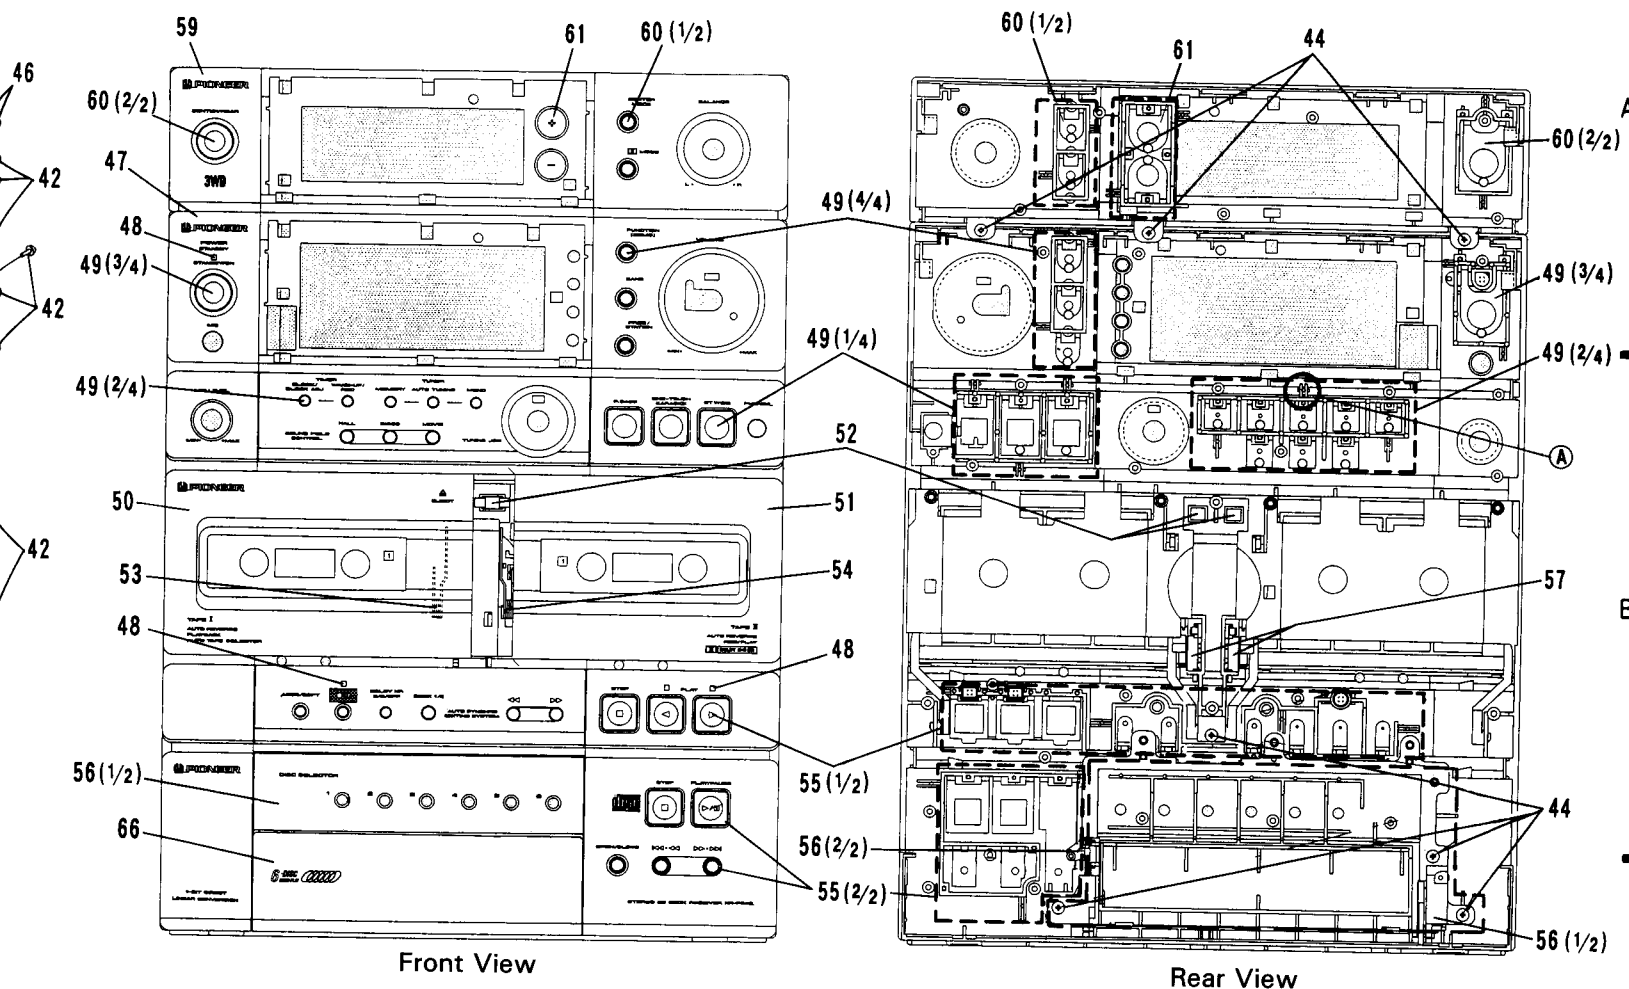


● Preparation Prior to Assembling Door-LR Assy.

After installing Door-L (No. 50) and Door-R (No. 51) on front panel A (No. 47), hook the long side of Door Spring (L) (No. 53) and Door Spring (R) (No. 54) onto the hooks on front panel A.

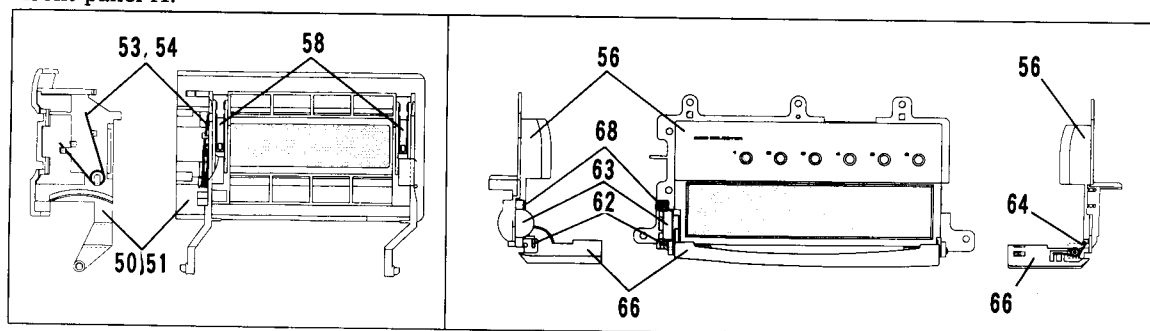


NOTE: When installing the AMP. TUNER button (No. 49), DECK. CD button (No. 55), DOLBY button (No. 60), and LEVEL button (No. 61), insert the hook on each button into the corresponding pin on the back of front panel A (No. 47) and front panel B (No. 59).

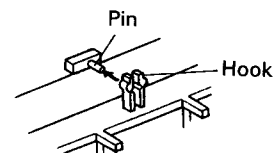


Section (A)

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340


■ For XR-P340M and XR-P340

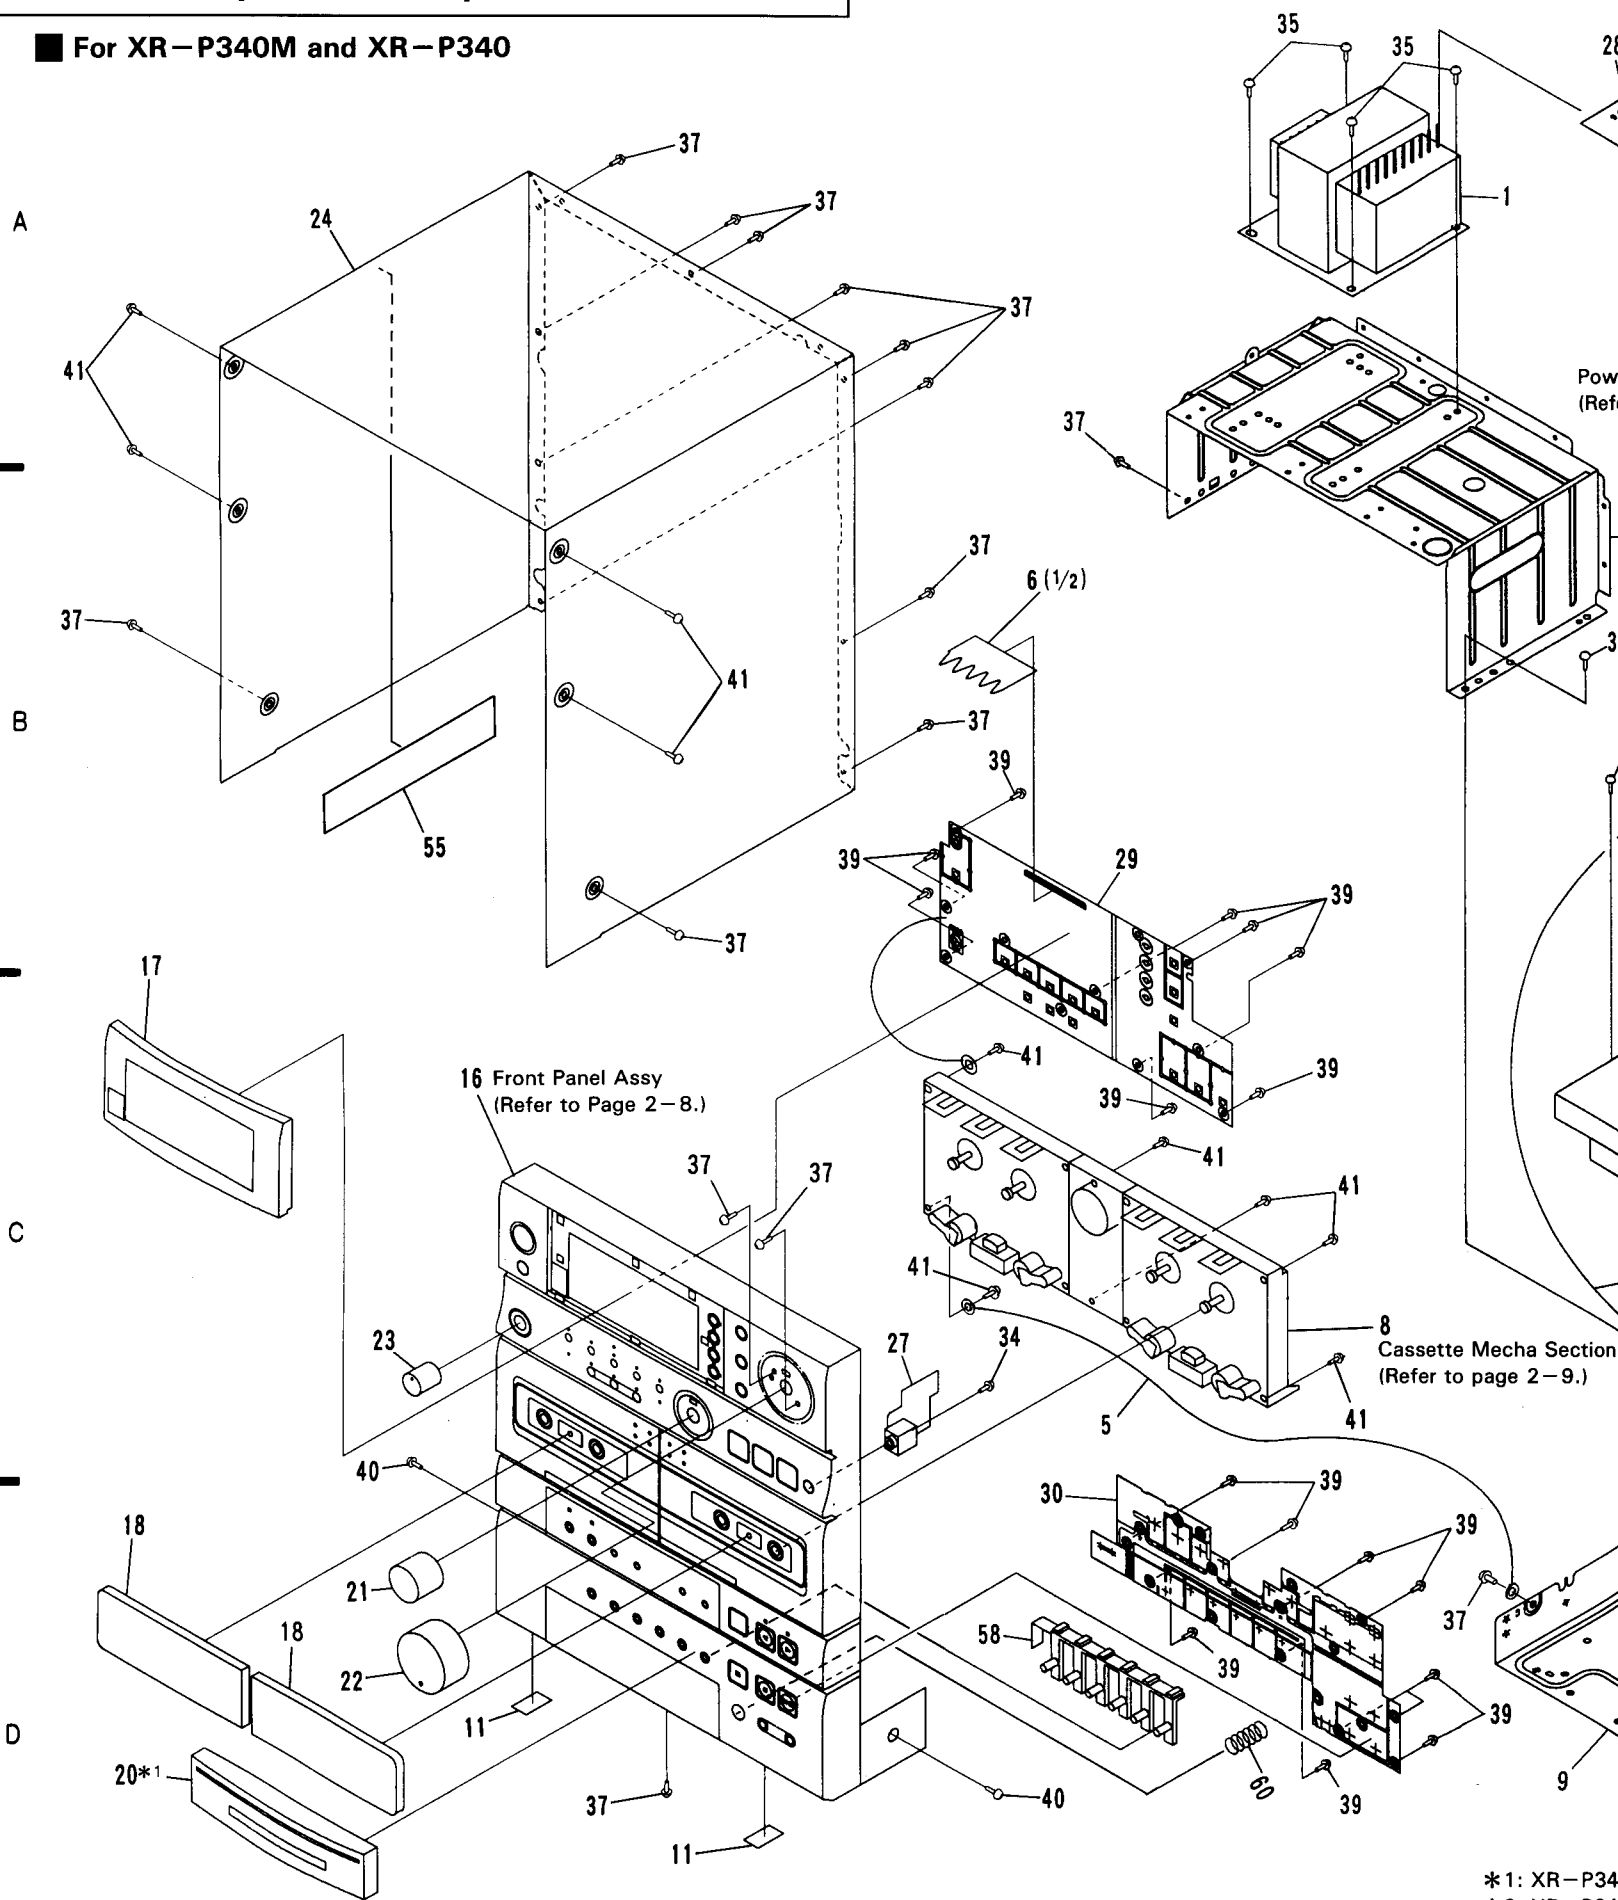

*1: XR-P340
*2: XR-P340

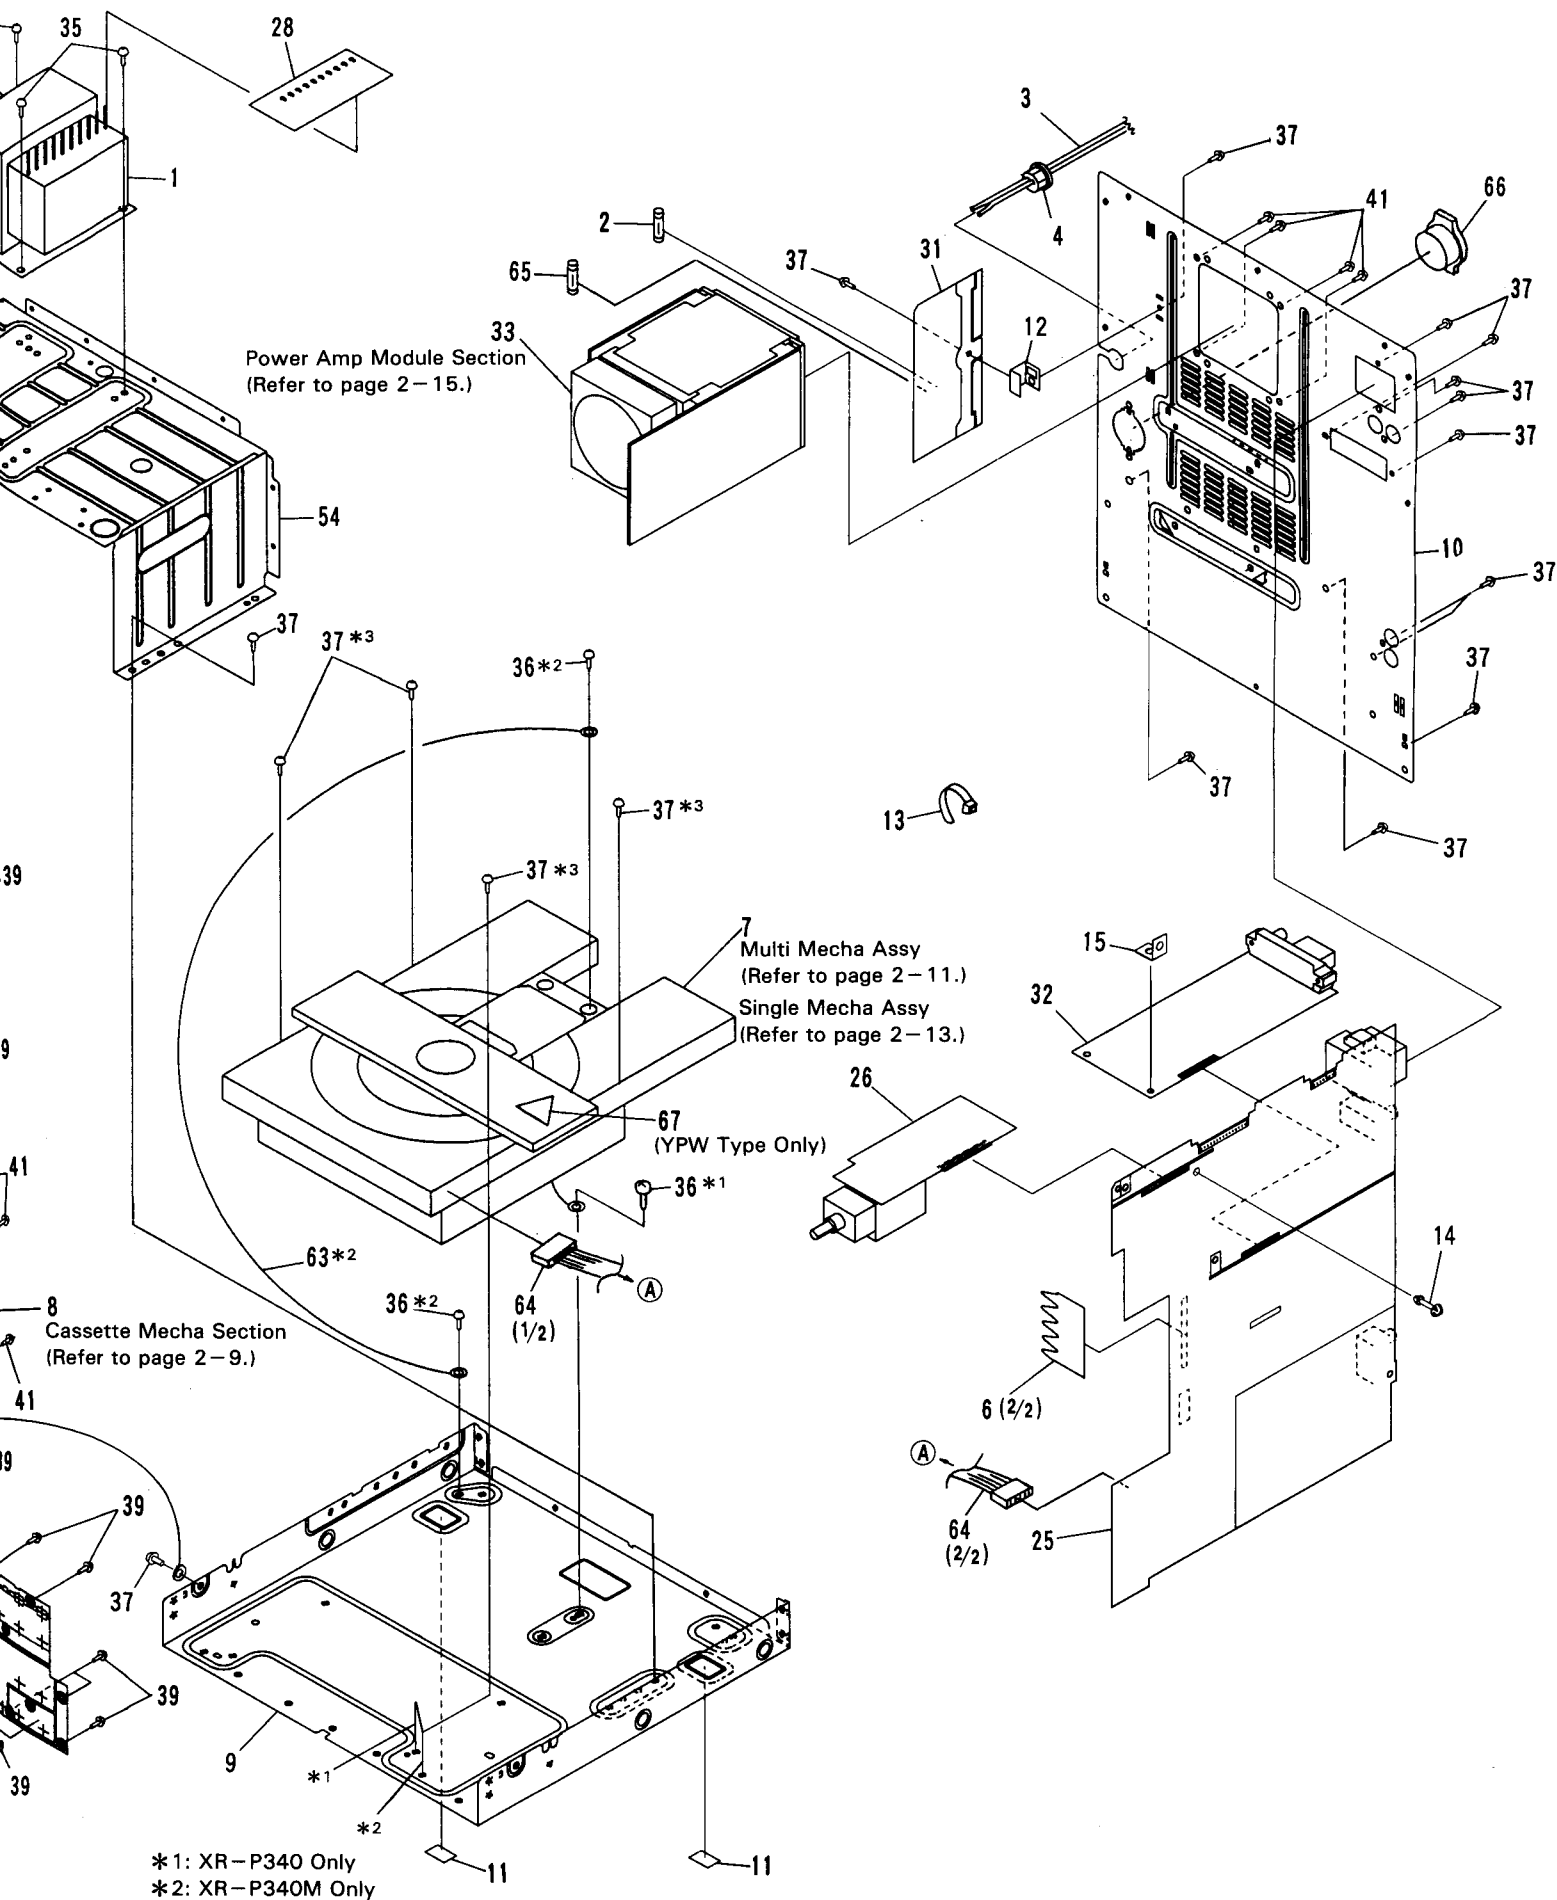


Front Panel Assy

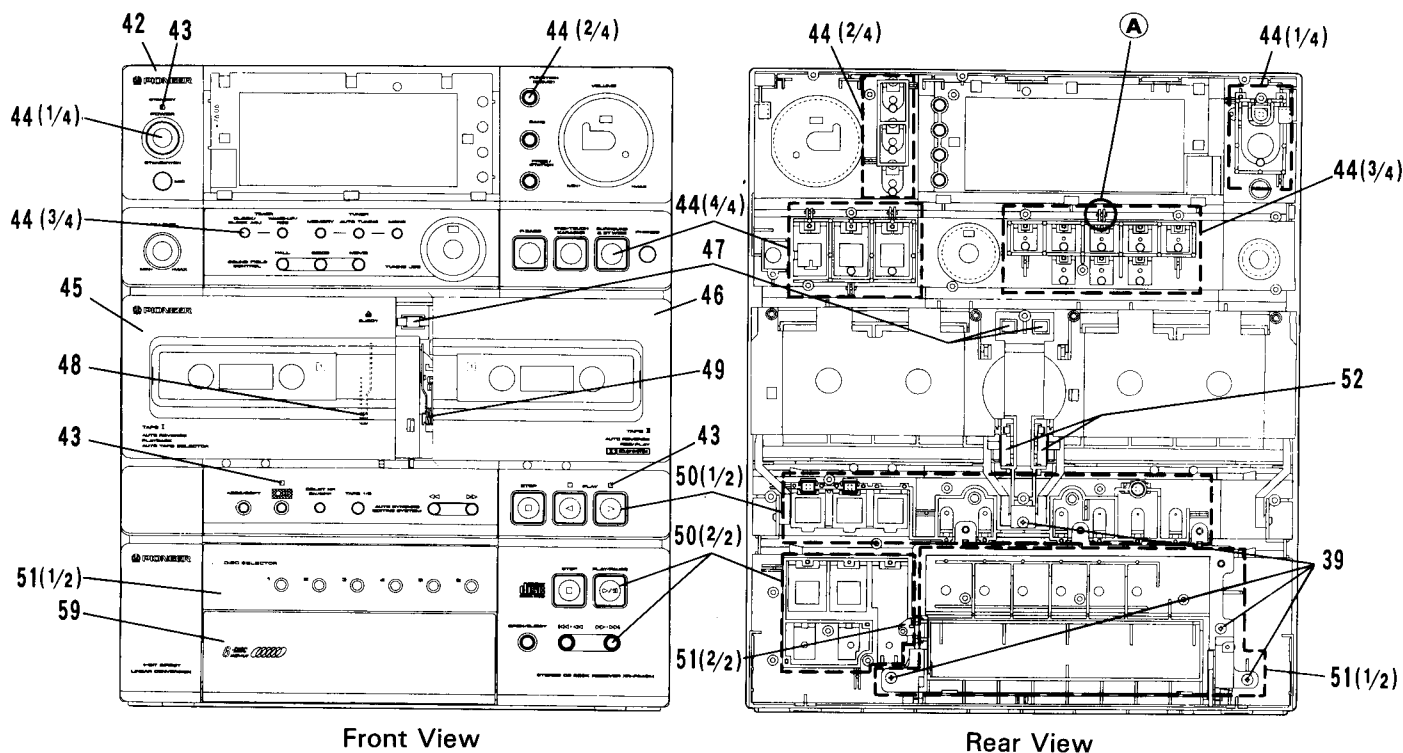


● Preparation Prior to Assembling Door—LR Assy.

After installing Door—L (No. 45) and Door—R (No. 46) on front panel A (No. 42), hook the long side of Door Spring (L) (No. 48) and Door Spring (R) (No. 49) onto the hooks on front panel A.

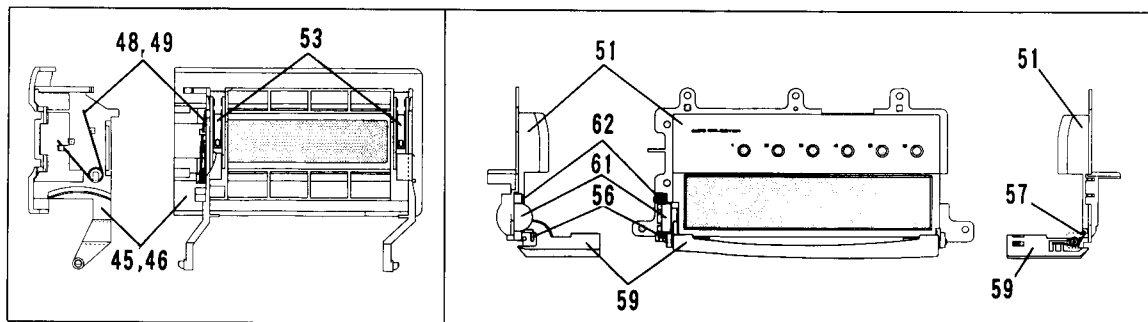

NOTE: When installing the AMP. TUNER button (No. 44) and DECK. CD button (No. 50), insert the hook on each button into the corresponding pin on the back of front panel A (No. 42). (Refer to the diagram below.)

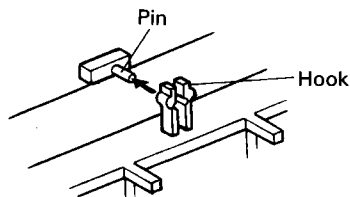

Section A

1 2 3


(2)-2. CASSETTE MECHA SECTION (FOR ALL MODELS)

A


B

C


D

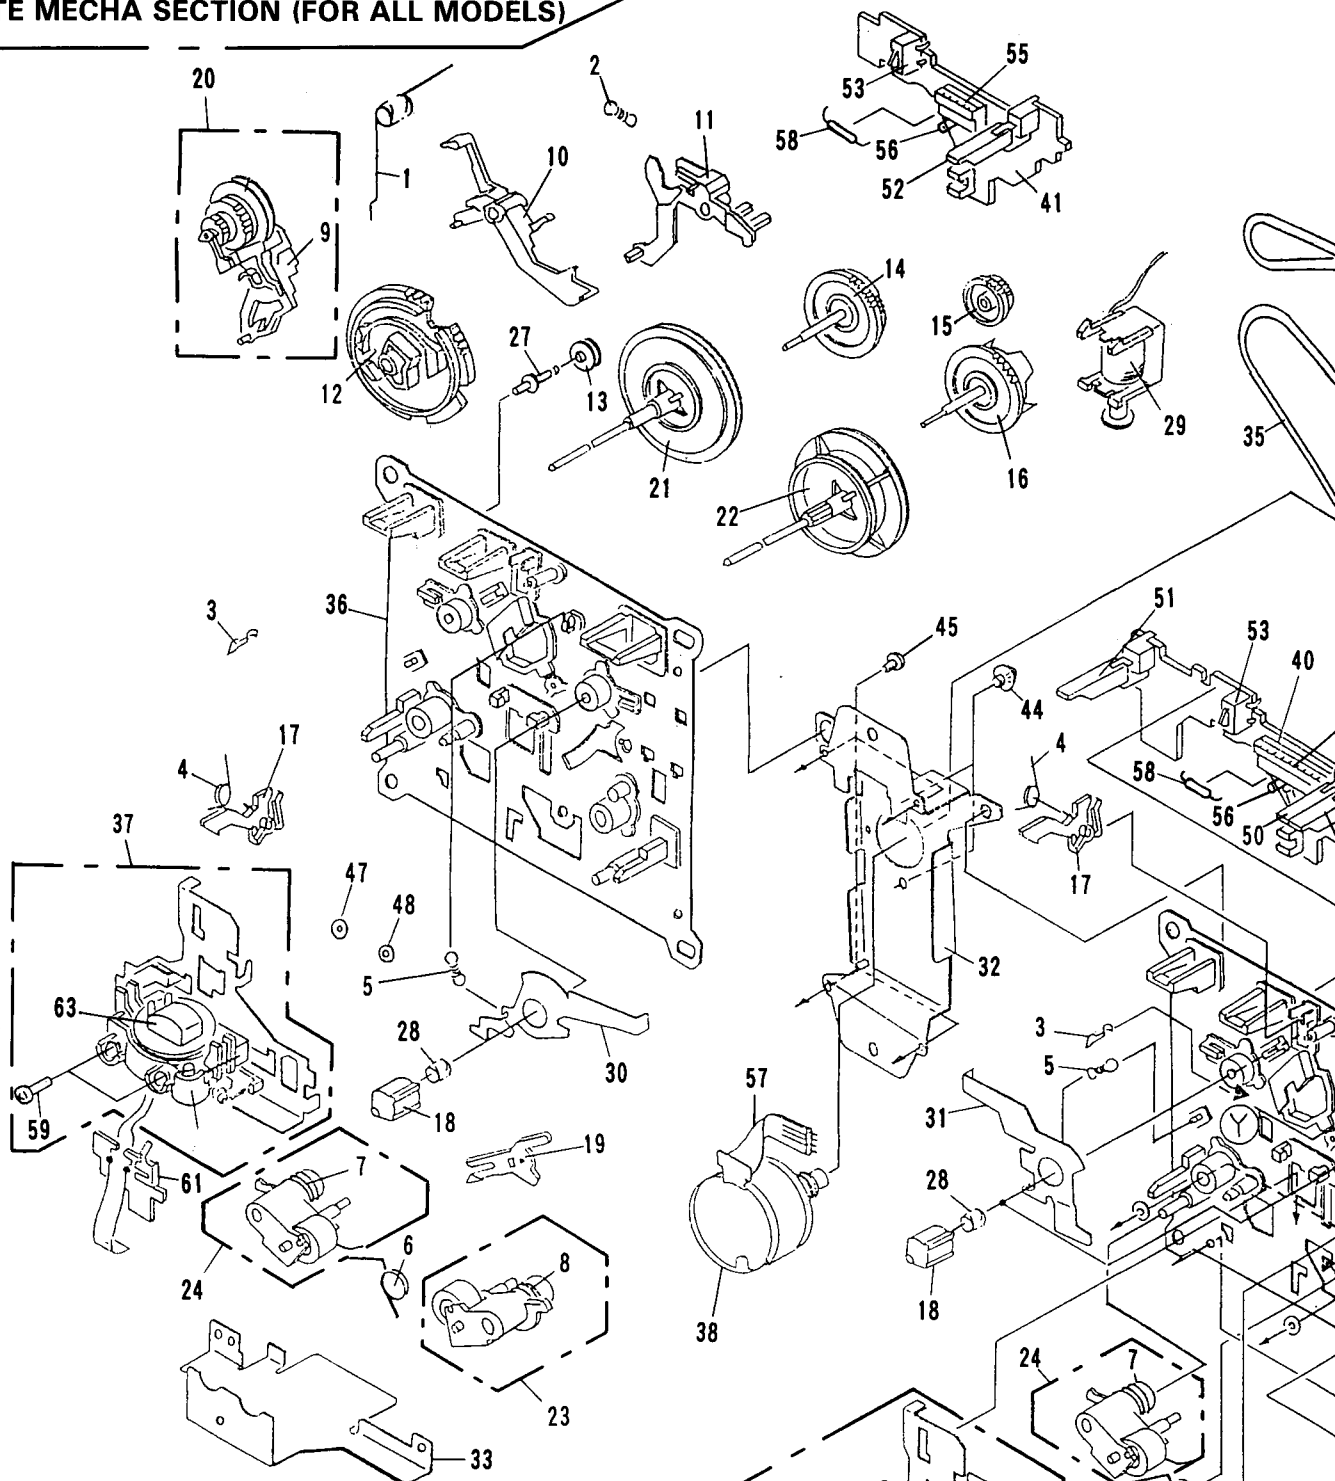

Detail of HEAD BASE ASSY (No. 37 and 39)

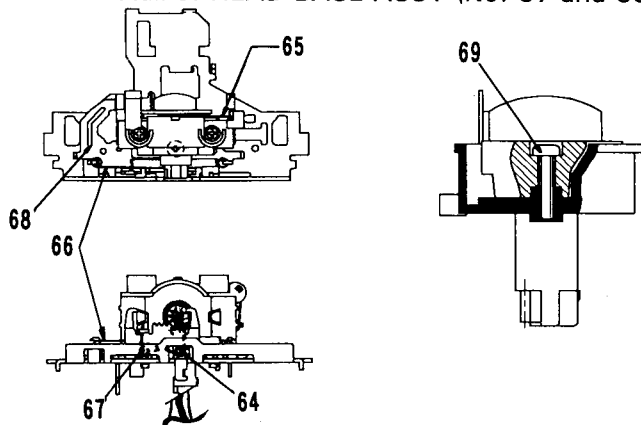

**XR-P740M, XR-P640M, XR-P340M
XR-P740, XR-P640, XR-P340**

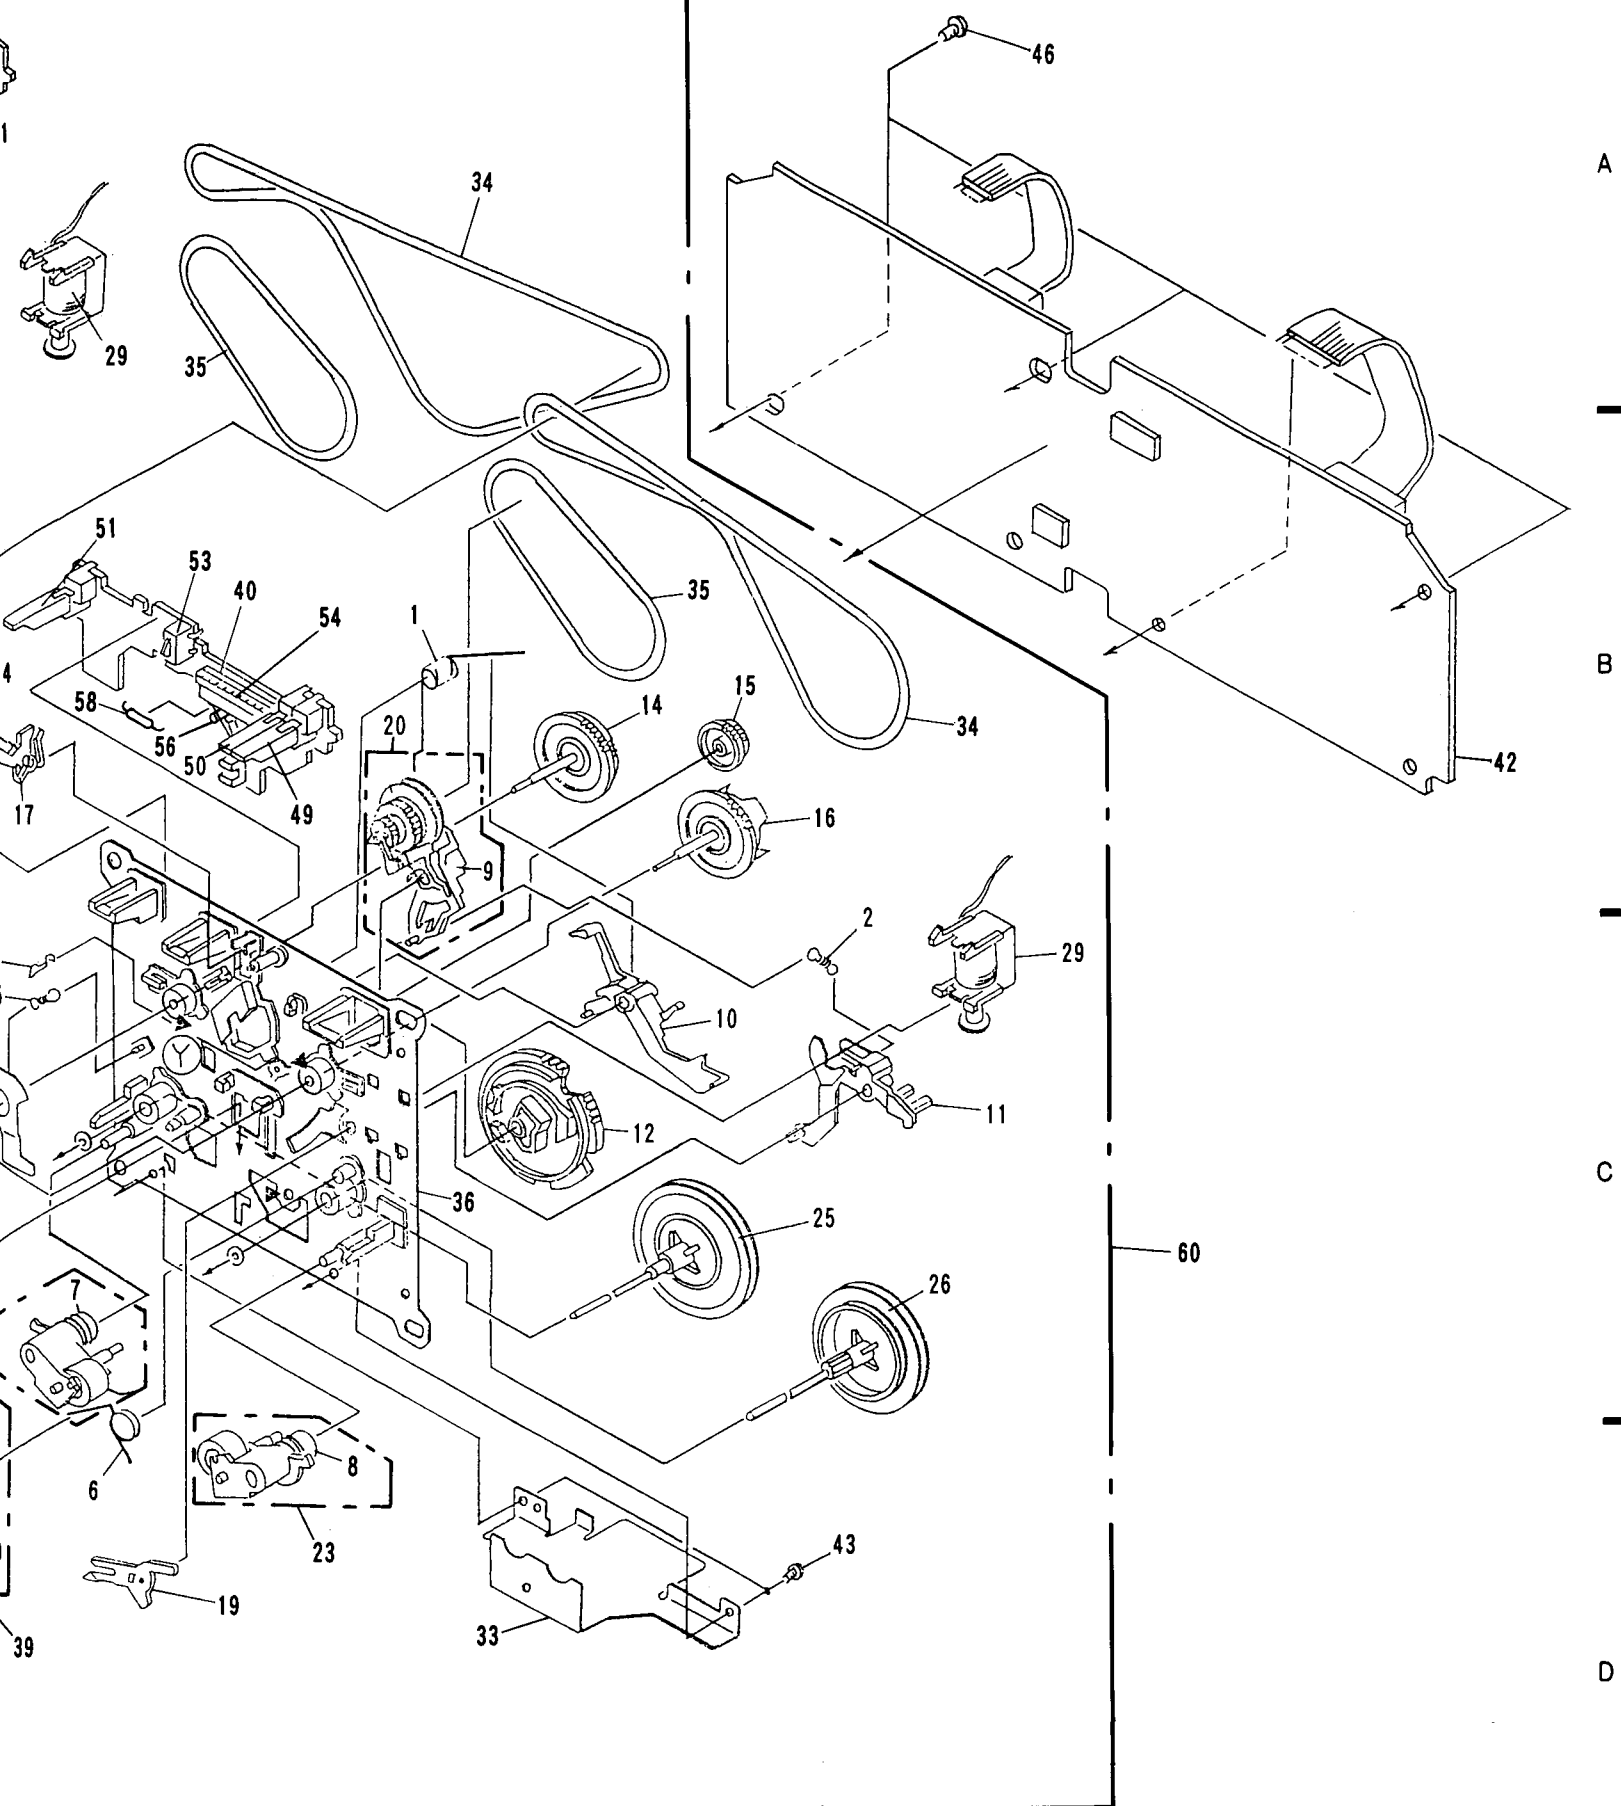

Note: The EXK2430 consists of the EXK2410 with the spring glued to it.

(2)-3. CD MULTI MECHA ASSY (FOR XR-P740M, XR-P640M AND XR-P340M)


*1: Fix the motor (No. 101) on the LOADING BOARD ASSY (No. 105) so that the label attached on the motor faces the direction illustrated.


A

B

C

D

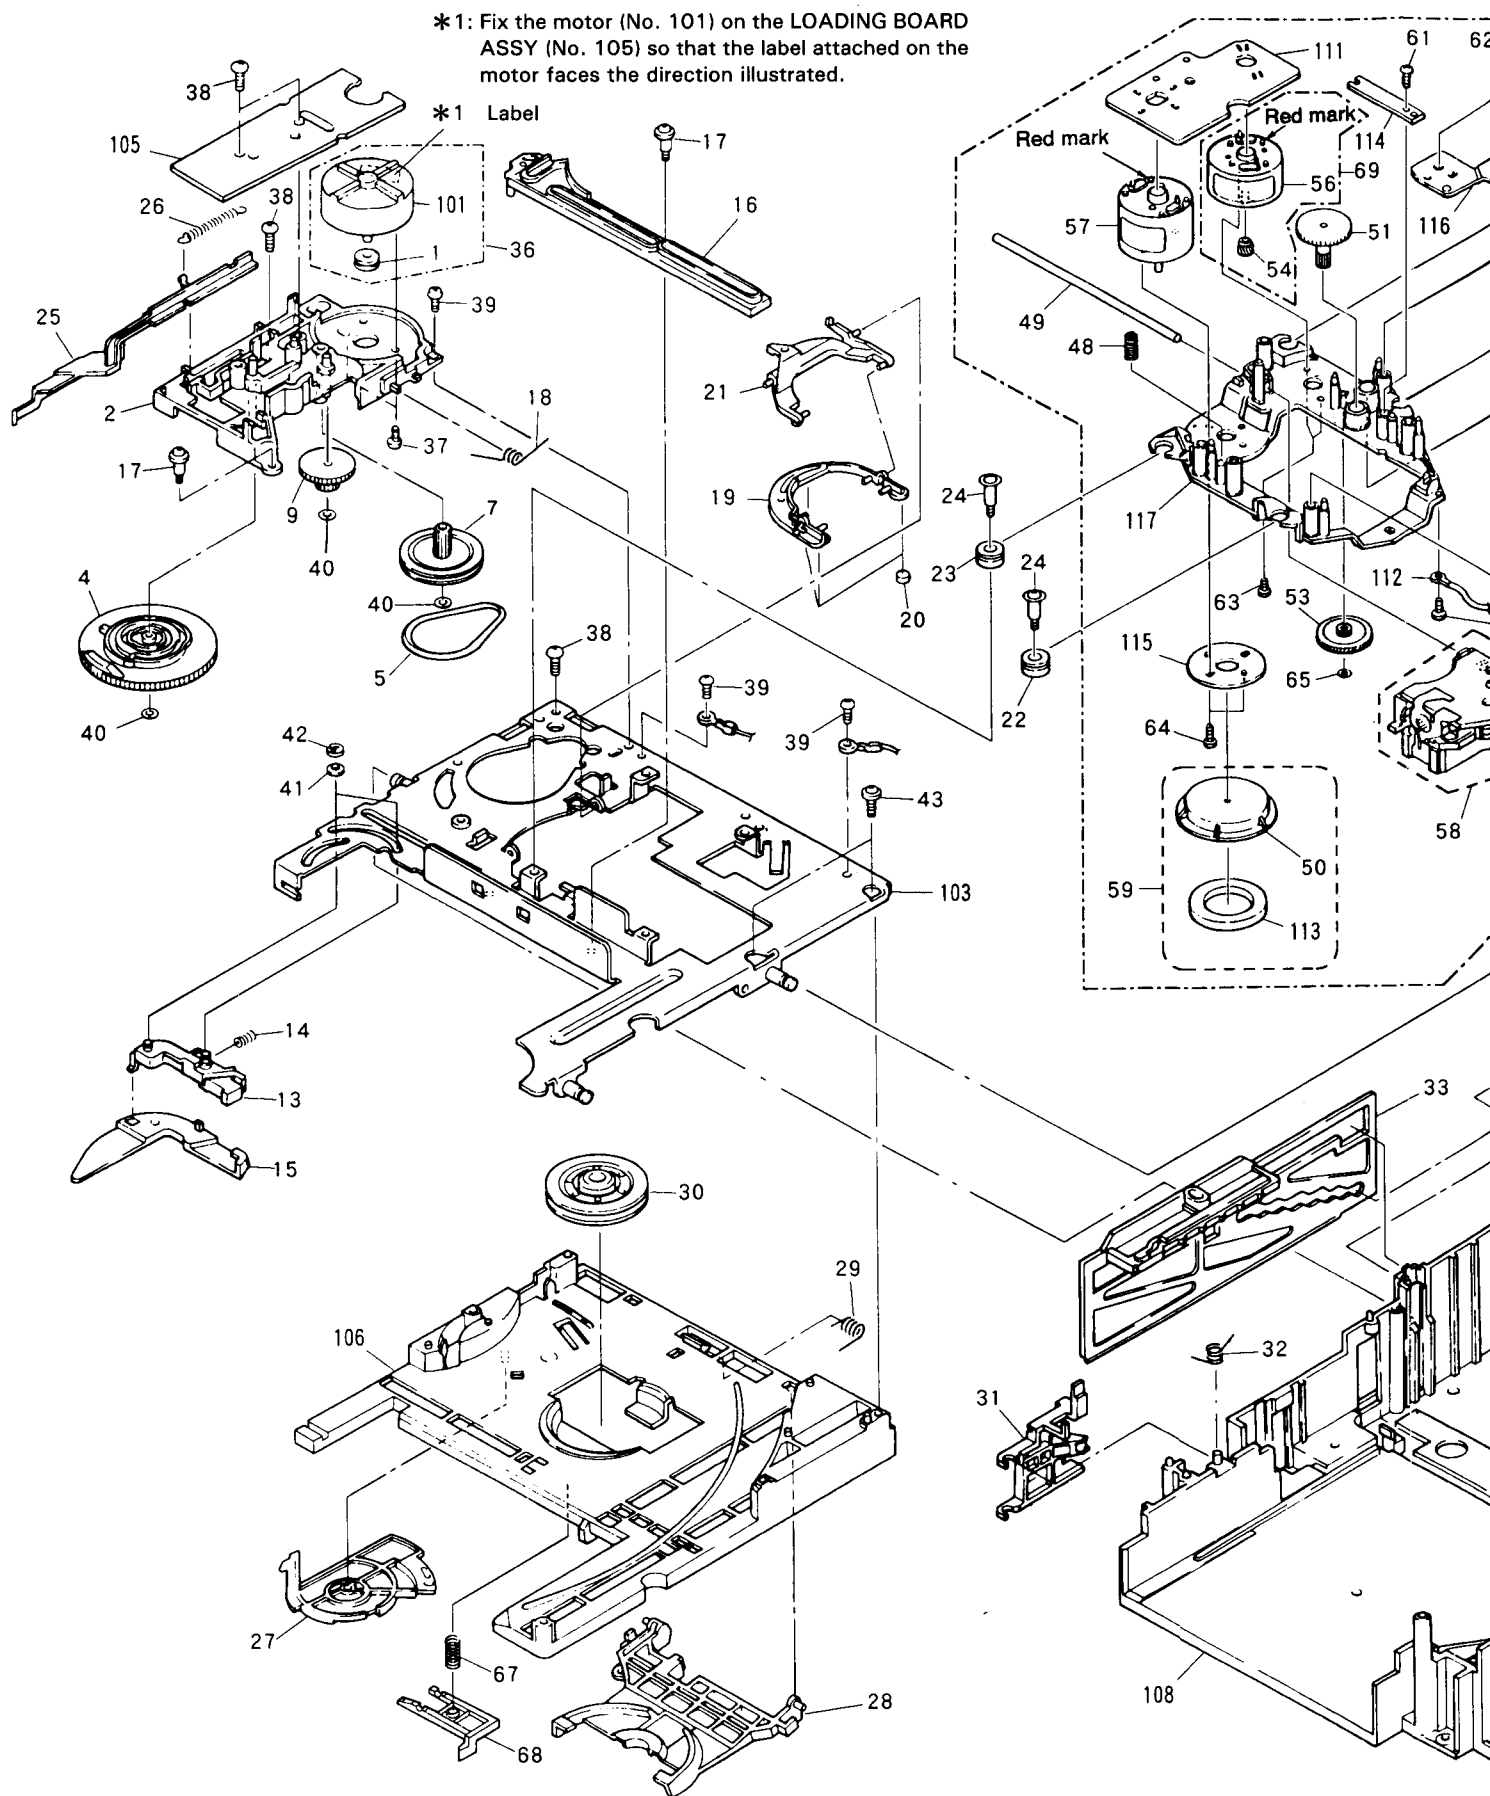

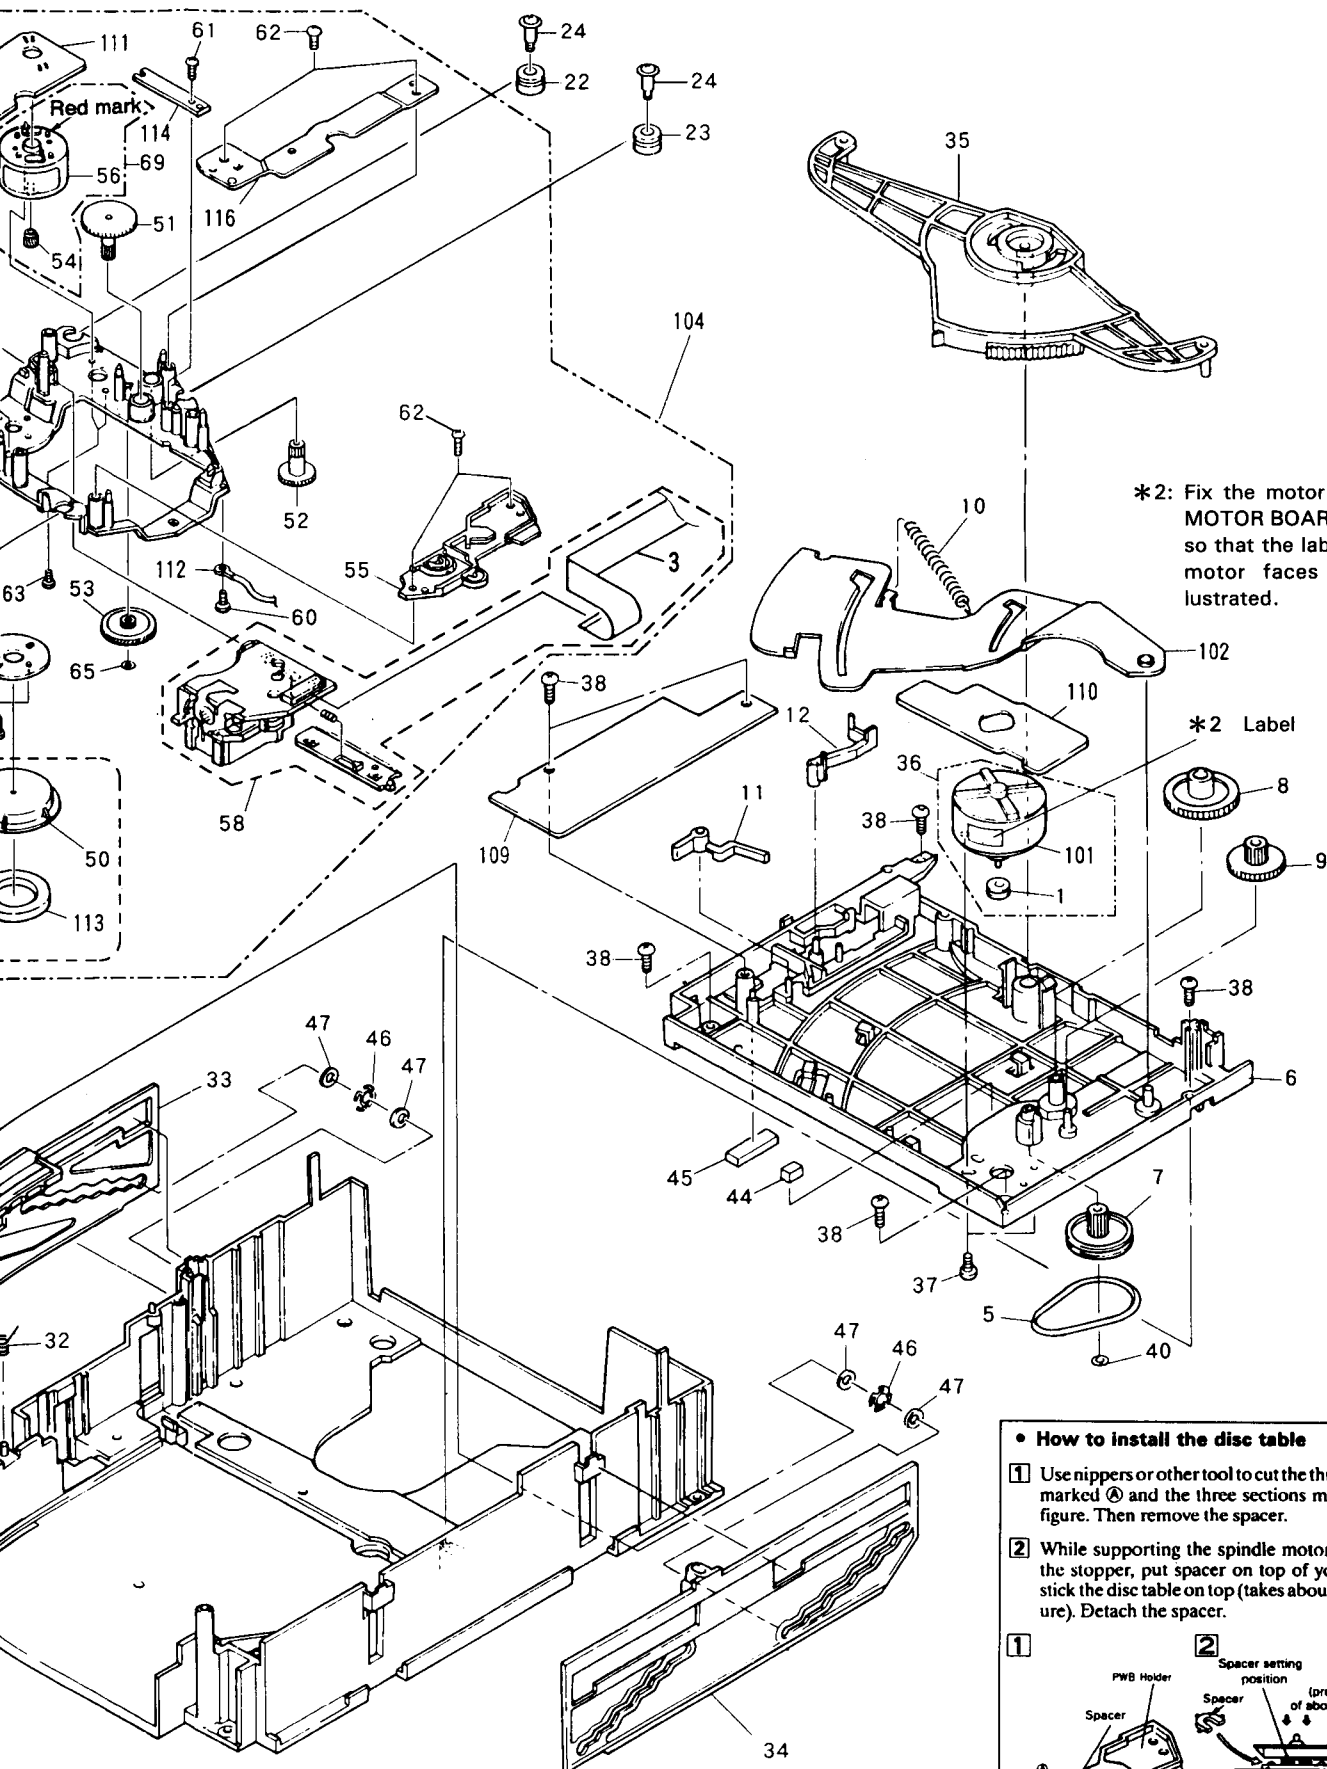


*2: Fix the motor (No. 101) on the MOTOR BOARD ASSY (No. 110) so that the label attached on the motor faces the direction illustrated.

*2 Label

• How to install the disc table

- 1 Use nippers or other tool to cut the three sections marked (A) and the three sections marked (B) in figure. Then remove the spacer.
- 2 While supporting the spindle motor shaft with the stopper, put spacer on top of yoke M, and stick the disc table on top (takes about 9kg pressure). Detach the spacer.

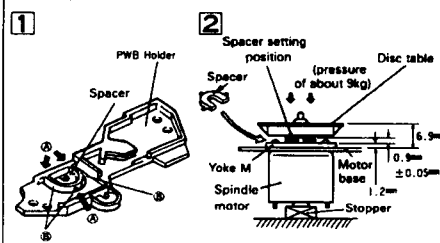


1

2

3

(2) - 4. CD SINGLE MECHA ASSY (FOR XR-P740, XR-P640 AND XR-P340)

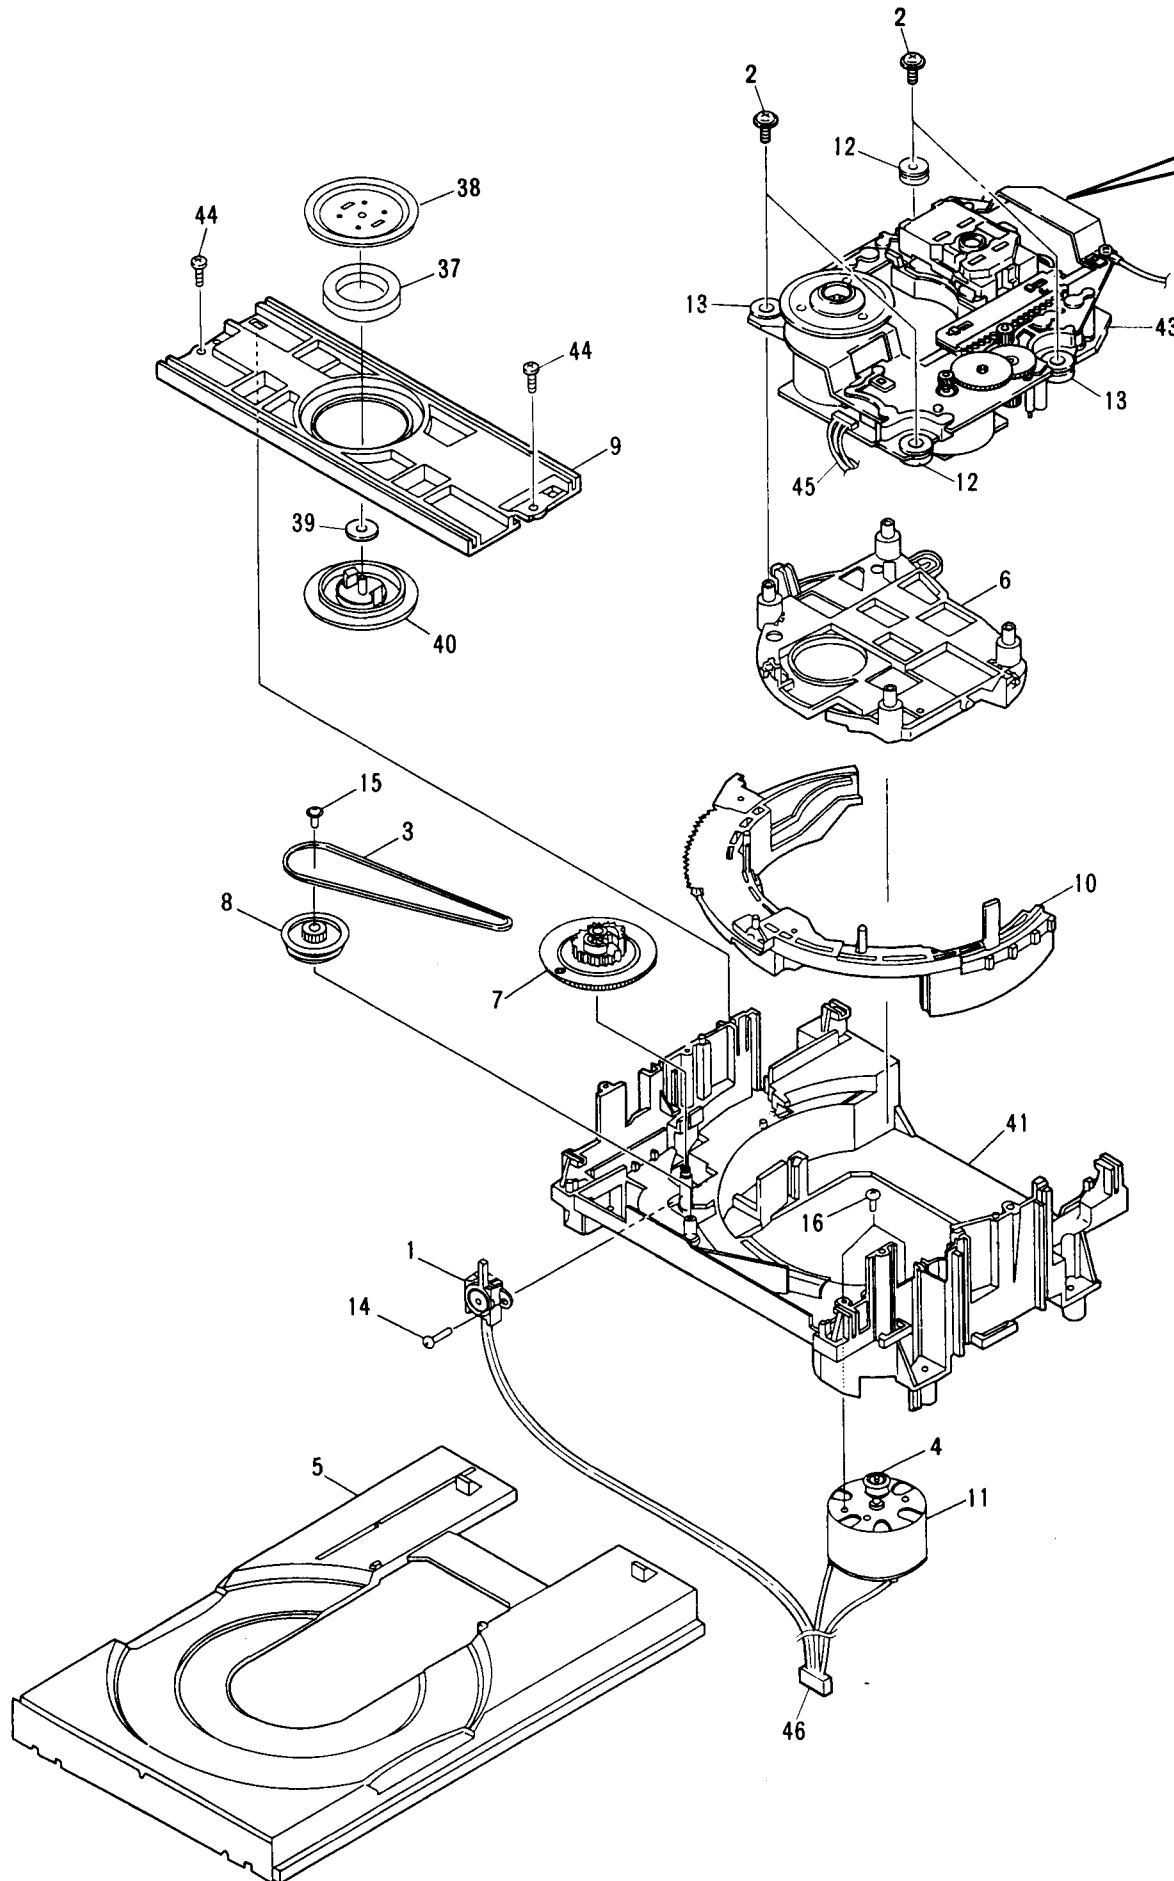

A

B

C

D

1

2

3




C

- D



(2) - 5. POWER AMP MODULE SECTION (FOR ALL MODELS)

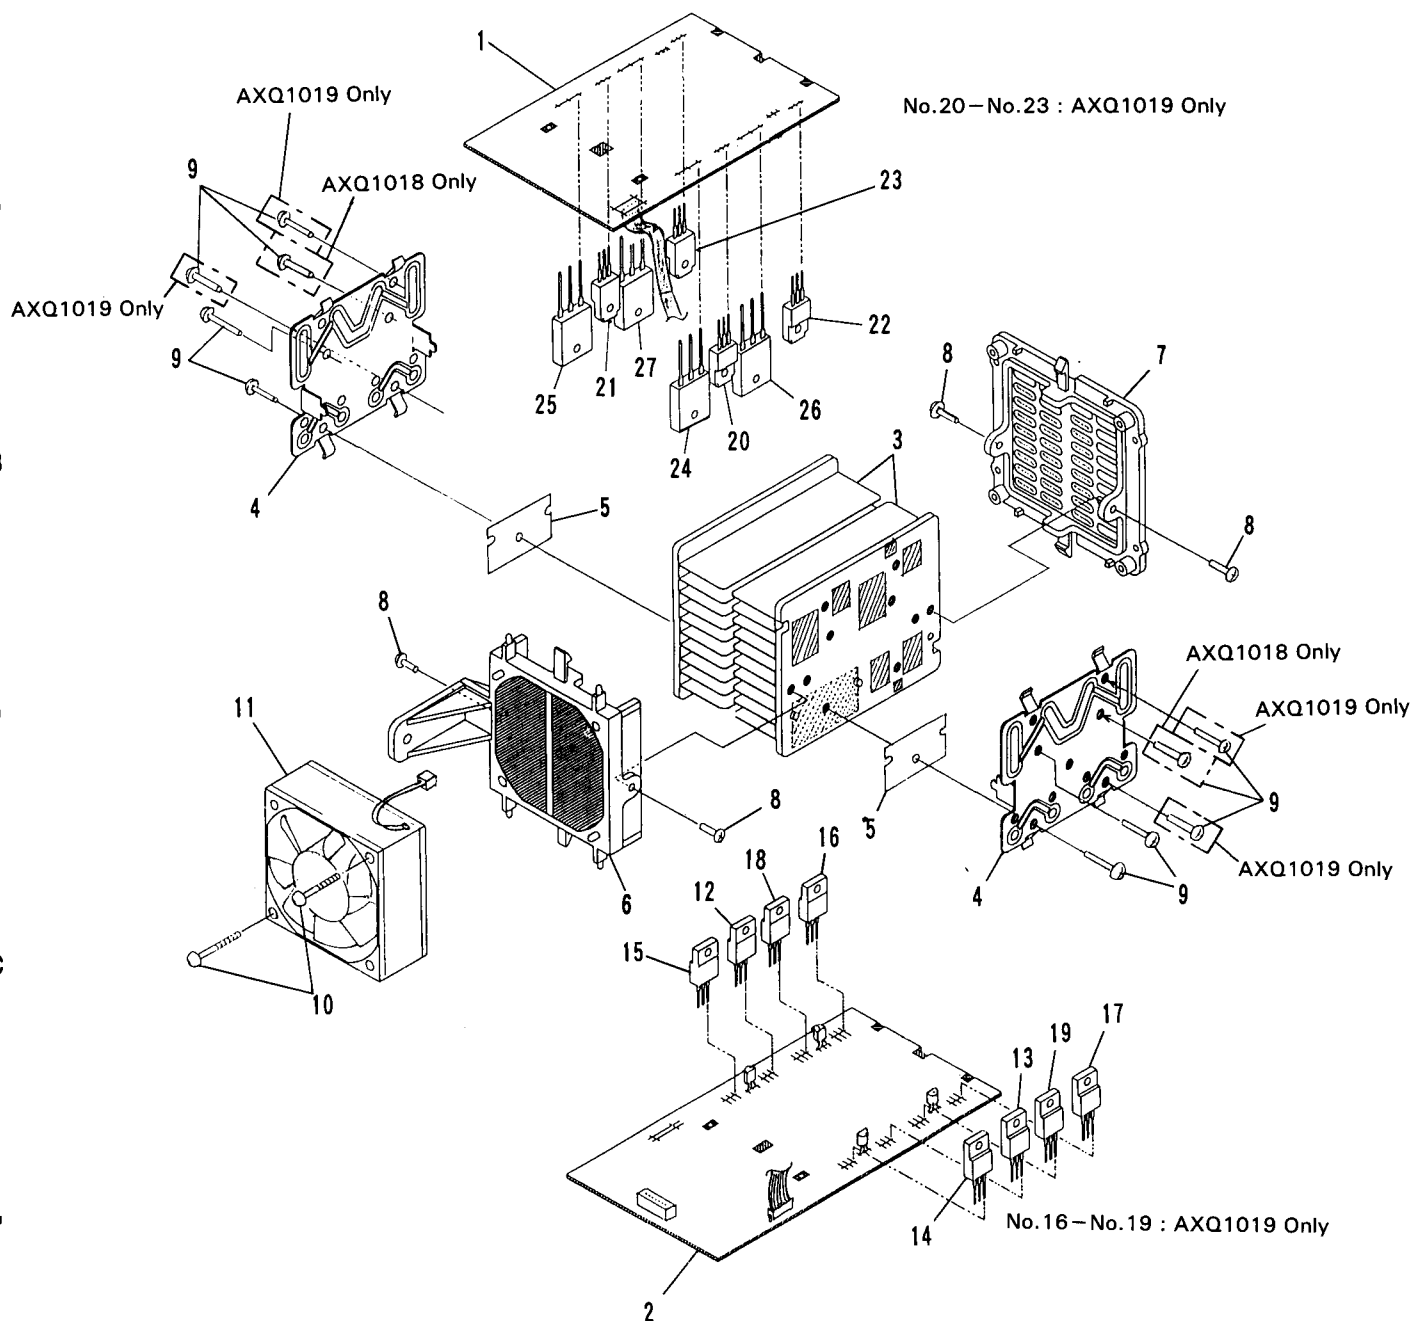

*Note: Ensure that silicon grease does not adhere to the
MOLD A (No. 6) and MOLD B (No. 7).*

2.2 SCHEMATIC AND PCB CONNECTION DIAGRAM

NOTE FOR SCHEMATIC DIAGRAMS

(Type 1A)

1. When ordering service parts, be sure to refer to "PARTS LIST OF EXPLODED VIEWS" or "PCB PARTS LIST".

2. Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.

3. RESISTORS:

Unit: k: k Ω , M: M Ω , or Ω unless otherwise noted.

Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.

Tolerance: (F): $\pm 1\%$, (G): $\pm 2\%$, (K): $\pm 10\%$, (M): $\pm 20\%$ or $\pm 5\%$ unless otherwise noted.

4. CAPACITORS:

Unit: p: pF or μ F unless otherwise noted.

Ratings: capacitor (μ F)/ voltage (V) unless otherwise noted.

Rated voltage: 50V except for electrolytic capacitors.

5. COILS:

Unit: m: mH or μ H unless otherwise noted.

6. VOLTAGE AND CURRENT:

 : Signal voltage at rated output.

 or $-V$:

DC voltage (V) at no input signal unless otherwise noted.

Value in () is DC voltage at rated power.

 mA or $-mA$:

DC current at no input signal unless otherwise noted.

7. OTHERS:

•  or  : Adjusting point.

•  : Measurement point.

• The Δ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.

8. SCH- ON THE SCHEMATIC DIAGRAM:

• SCH- indicates the drawing number of the schematic diagram. (SCH stands for schematic diagram.)

9. SWITCHES (Underline indicates switch position):

DISPLAY assy

S1801 FREQ/STATION
S1802 BAND
S1803 FUNCTION
S1804 POWER STANDBY
S1805 MONO
S1806 P. BASS
S1807 ONE-TOUCH KARAOKE
S1808 ST WIDE(XR-P740M SERIES)
SURROUND & ST WIDE
(XR-P340M SERIES)
S1809 AUTO TUNING
S1810 HALL
S1811 DISCO
S1812 MOVIE
S1813 MEMORY
S1814 WAKE-UP/REC
S1815 CLOCK/CLOCK ADJ
S1901 TUNING JOG

ADDON DISPALY assy

(XR-P740M SERIES ONLY)

S3951 CENTER/REAR LEVEL -
S3952 CENTER/REAR LEVEL +
S3953 CENTER MODE
S3954 CENTER/REAR
S3955 DOLBY MODE

CD DECK SW assy

(XR-P740M, XR-640M, XR-P340M)

S1816 
S1817 
S1818 STOP(TAPE)
S1819 
S1820 ASES/COPY
S1821 
S1822 DOLBY NR
S1823 TAPE 1/2
S1824 
S1825 STOP(CD)
S1826 PLAY/PAUSE
S1827 
S1828 OPEN/EJECT
S1829 
S1830 MULTI 6
S1831 MULTI 5
S1832 MULTI 1
S1833 MULTI 2
S1834 MULTI 3
S1835 MULTI 4


CD DECK SW assy

(XR-P740, XR-640, XR-P340)

S1816 
S1817 
S1818 STOP(TAPE)
S1819 
S1820 ASES/COPY
S1821 
S1822 DOLBY NR
S1823 TAPE 1/2
S1824 
S1825 STOP(CD)
S1826 PLAY/PAUSE
S1827 
S1829 
S1836 OPEN/CLOSE

XR-P740M Series indicates models XR-P740M/SD, YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD.
XR-P340M Series indicates models XR-P340M/KU, KC, SD, YPW, XR-P340/SD and YPW.

1. OVERALL SCHEMATIC DIAGRAM, TRANS PRIMARY ASSY

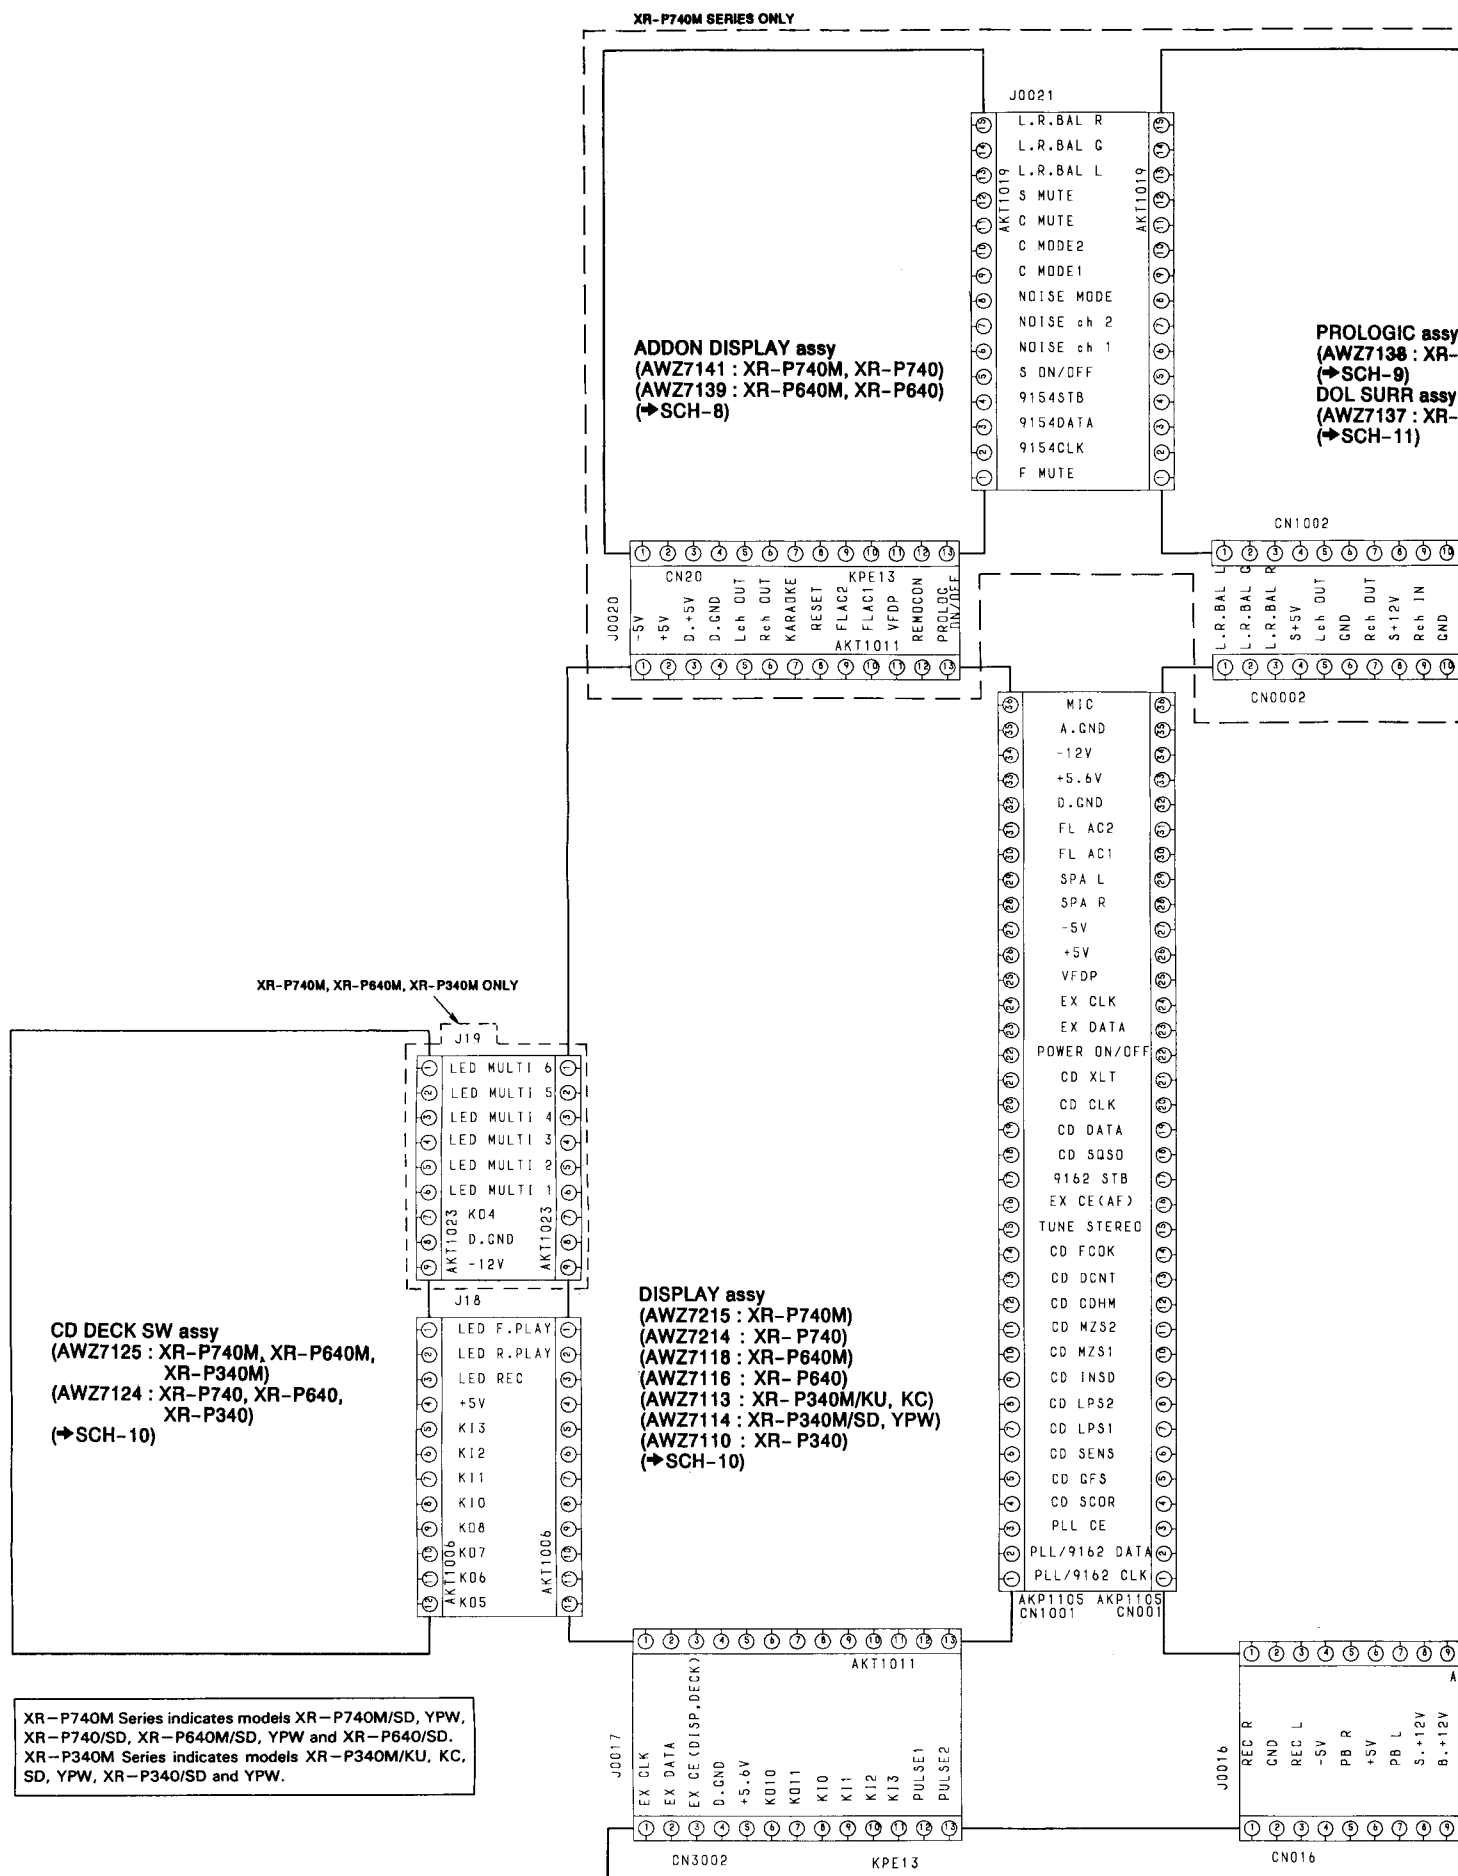


PROLOGIC assy
(AWZ7138 : XR-P740M, XR-P740)
(→SCH-9)
DOL SURR assy
(AWZ7137 : XR-P640M, XR-P640)
(→SCH-11)

VR assy
(AWZ7282 : XR-P740M, XR-P740)
(AWZ7099 : XR-P640M, XR-P640)
(AWZ7280 :
XR-P340M/SD, YPW, XR-P340)
(AWZ7270 : XR-P340M/KU, KC)
(→SCH-5)


REAR, PWR, PRTEC assy
(AWZ5391 : XR-P740M SERIES)
PWR, PRTEC assy
(AWZ5392 : XR-P340M SERIES)
(→SCH-7)


POWER MOD. F100
(AXQ1019 : XR-P740M)
POWER MOD. F50
(AXQ1018 : XR-P340M)

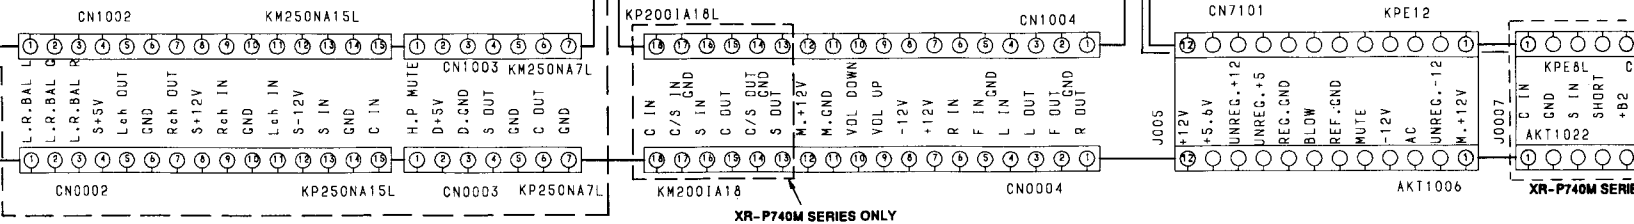

XR-P740M SERIES ONLY



AF CD assy
(AWZ7095 : XR-P740M)
(AWZ7281 : XR-P740)
(AWZ7091 : XR-P640M)
(AWZ7089 : XR-P640)
(AWZ7088 : XR-P340M/KU, KC)
(AWZ7287 : XR-P340M/SD, YPW)
(AWZ7286 : XR-P340)
(→SCH-4-2 and 5)

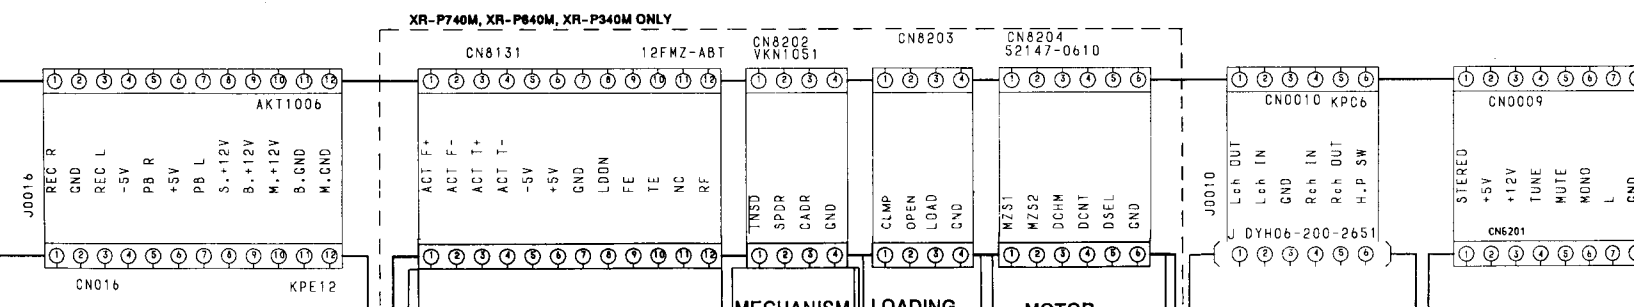

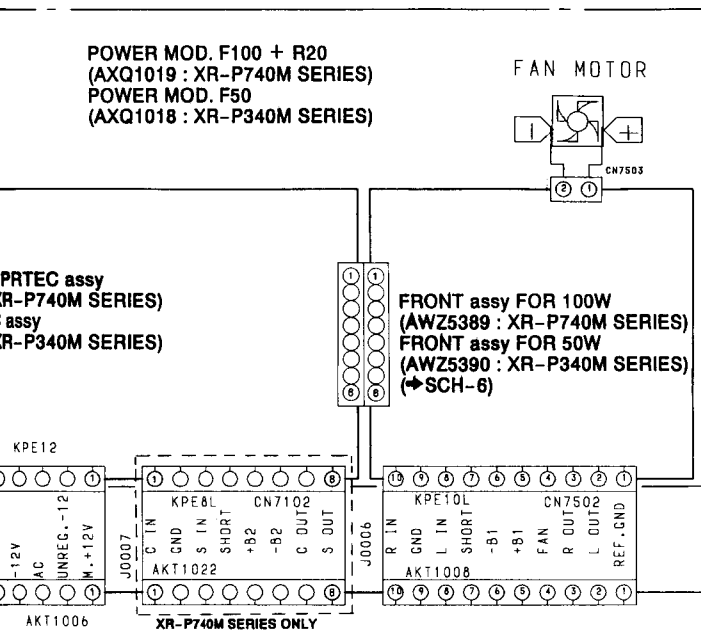

(, KC)
(YPW)

XR-P340M/SD, YPW, XR-P340 ONLY

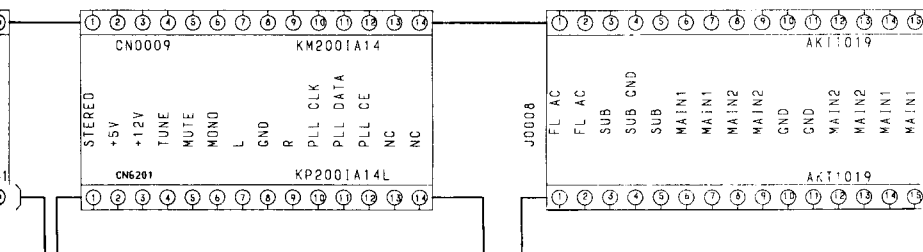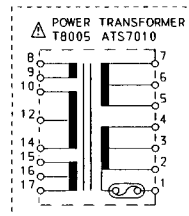


XR-P740M SERIES ONLY

POWER TRANSFORMER
T8005
ATS7015 (XR-P740M, XR-P740)
ATS7013 (XR-P640M, XR-P640)

SD TYPE ONLY


VOLTAGE SELECTOR
S8001 AKX-507

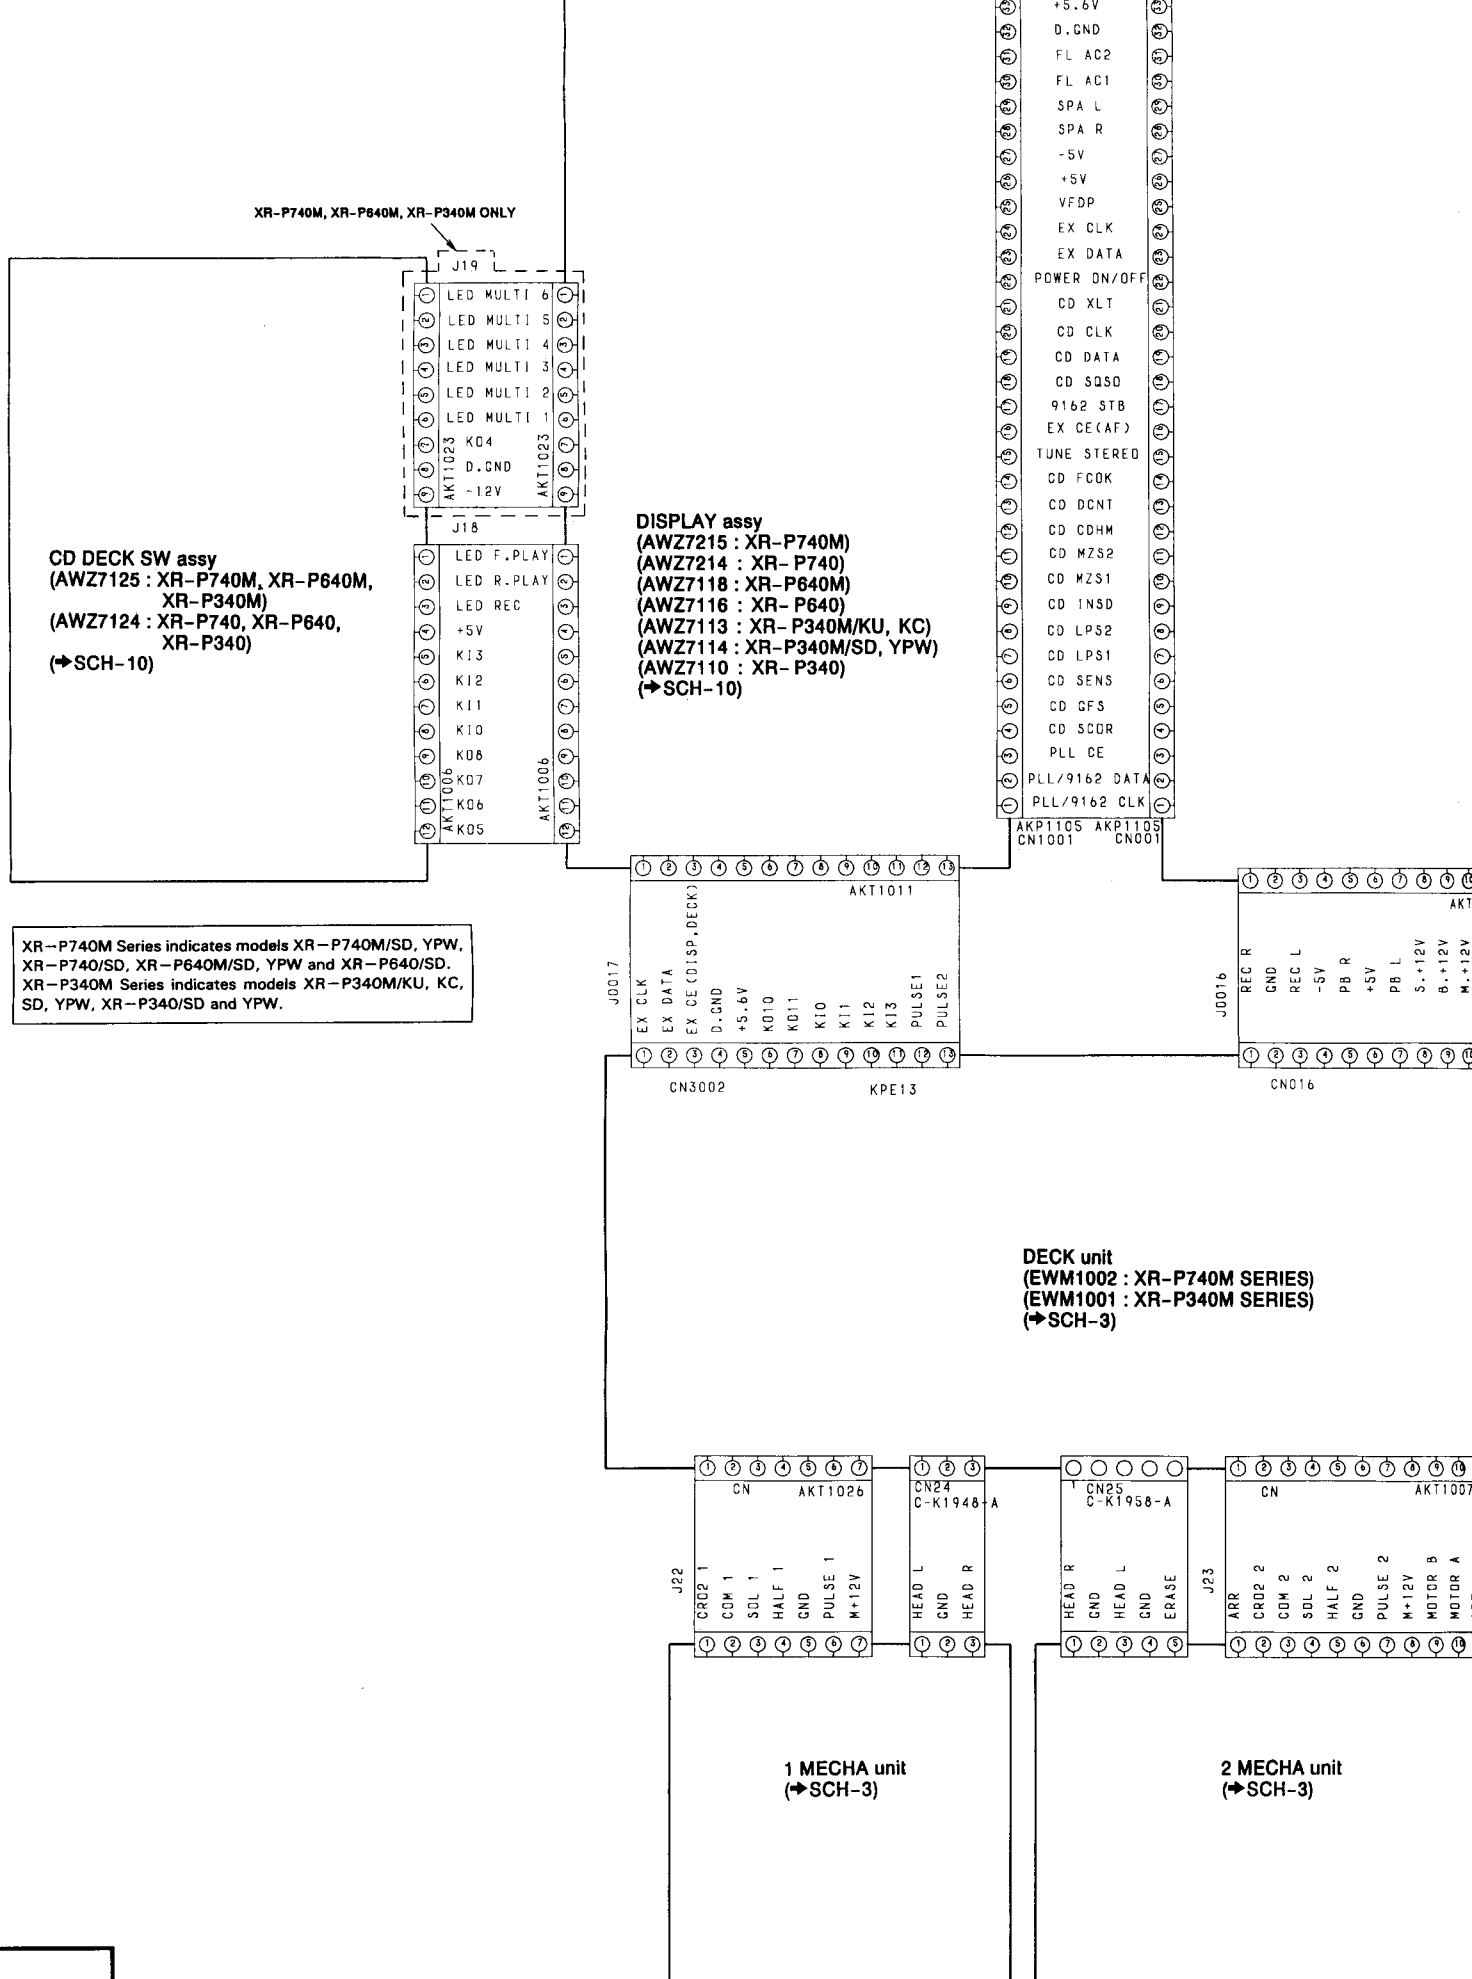

SCH-1

OVERALL SCHEMATIC DIAGRAM, TRANS PRIMARY ASSY

AF CD assy
 (AWZ7095 : XR-P740M)
 (AWZ7281 : XR-P740)
 (AWZ7091 : XR-P640M)
 (AWZ7089 : XR-P640)
 (AWZ7088 : XR-P340M/KU, KC)
 (AWZ7287 : XR-P340M/SD, YPW)
 (AWZ7286 : XR-P340)
 (→SCH-4-2 and 5)

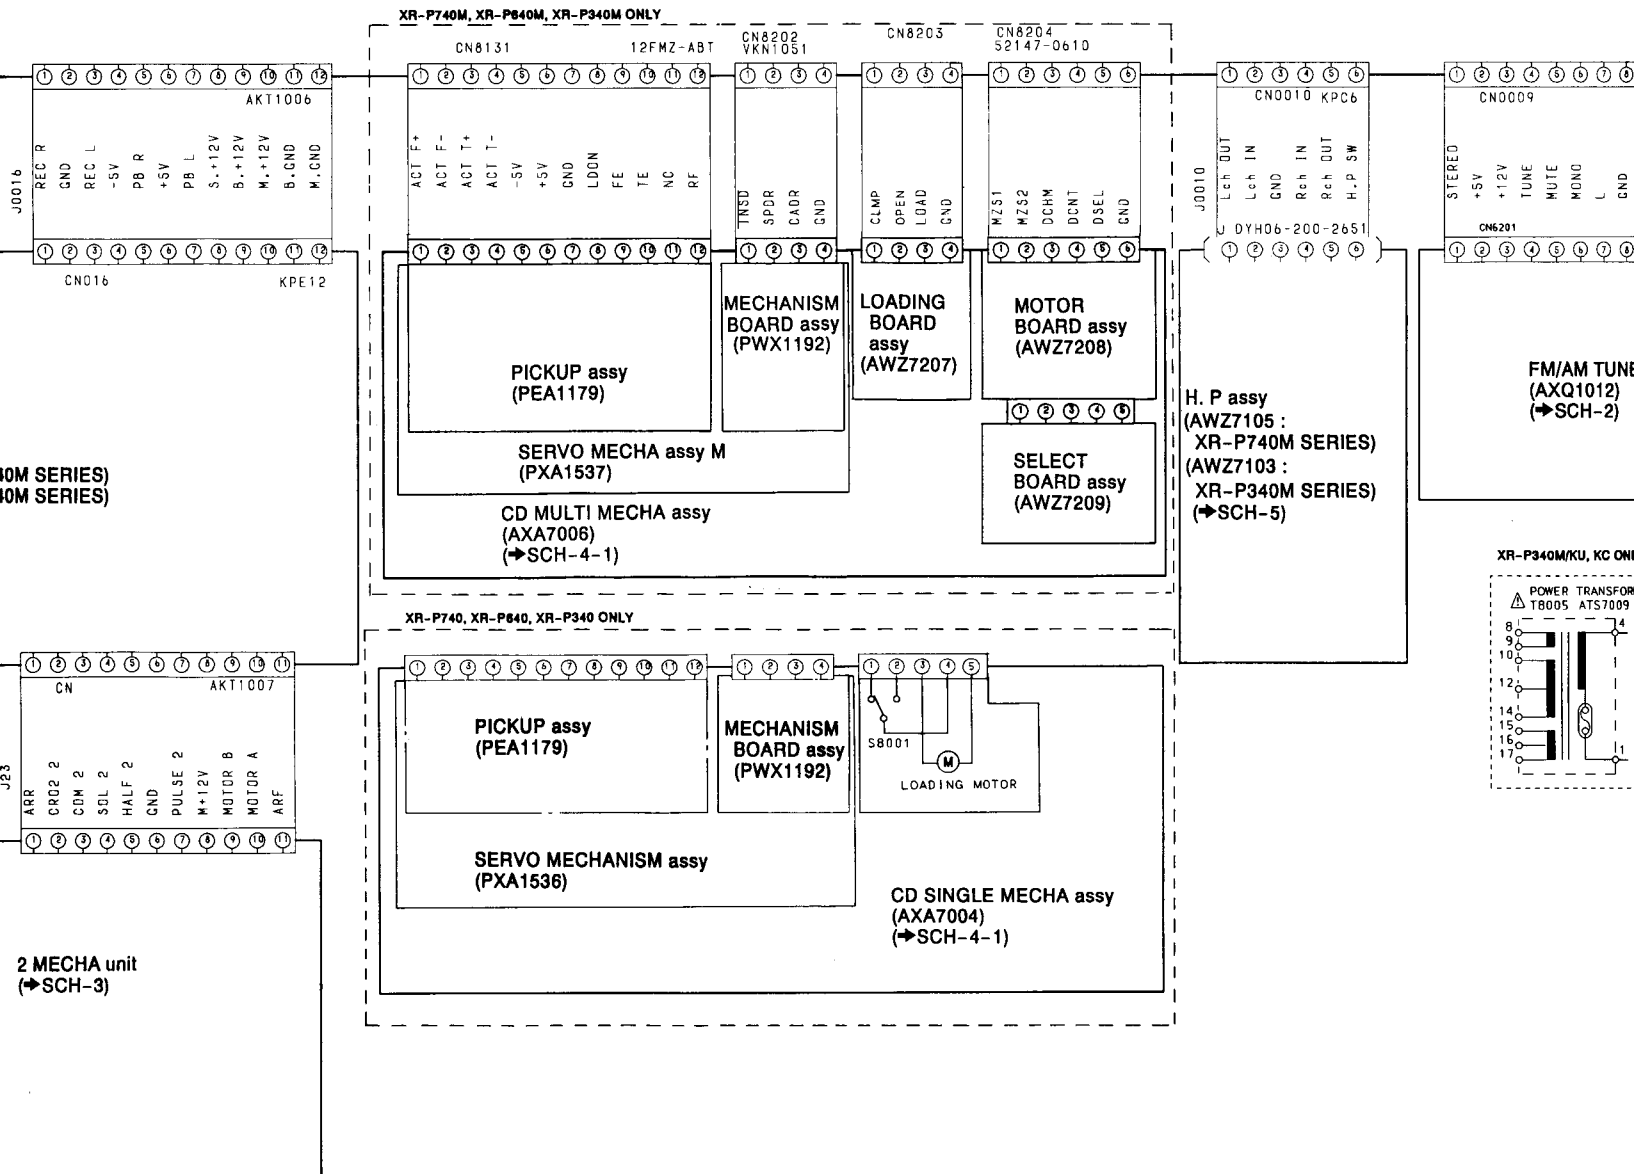


(KC)
(YPW)

)
)

E

F

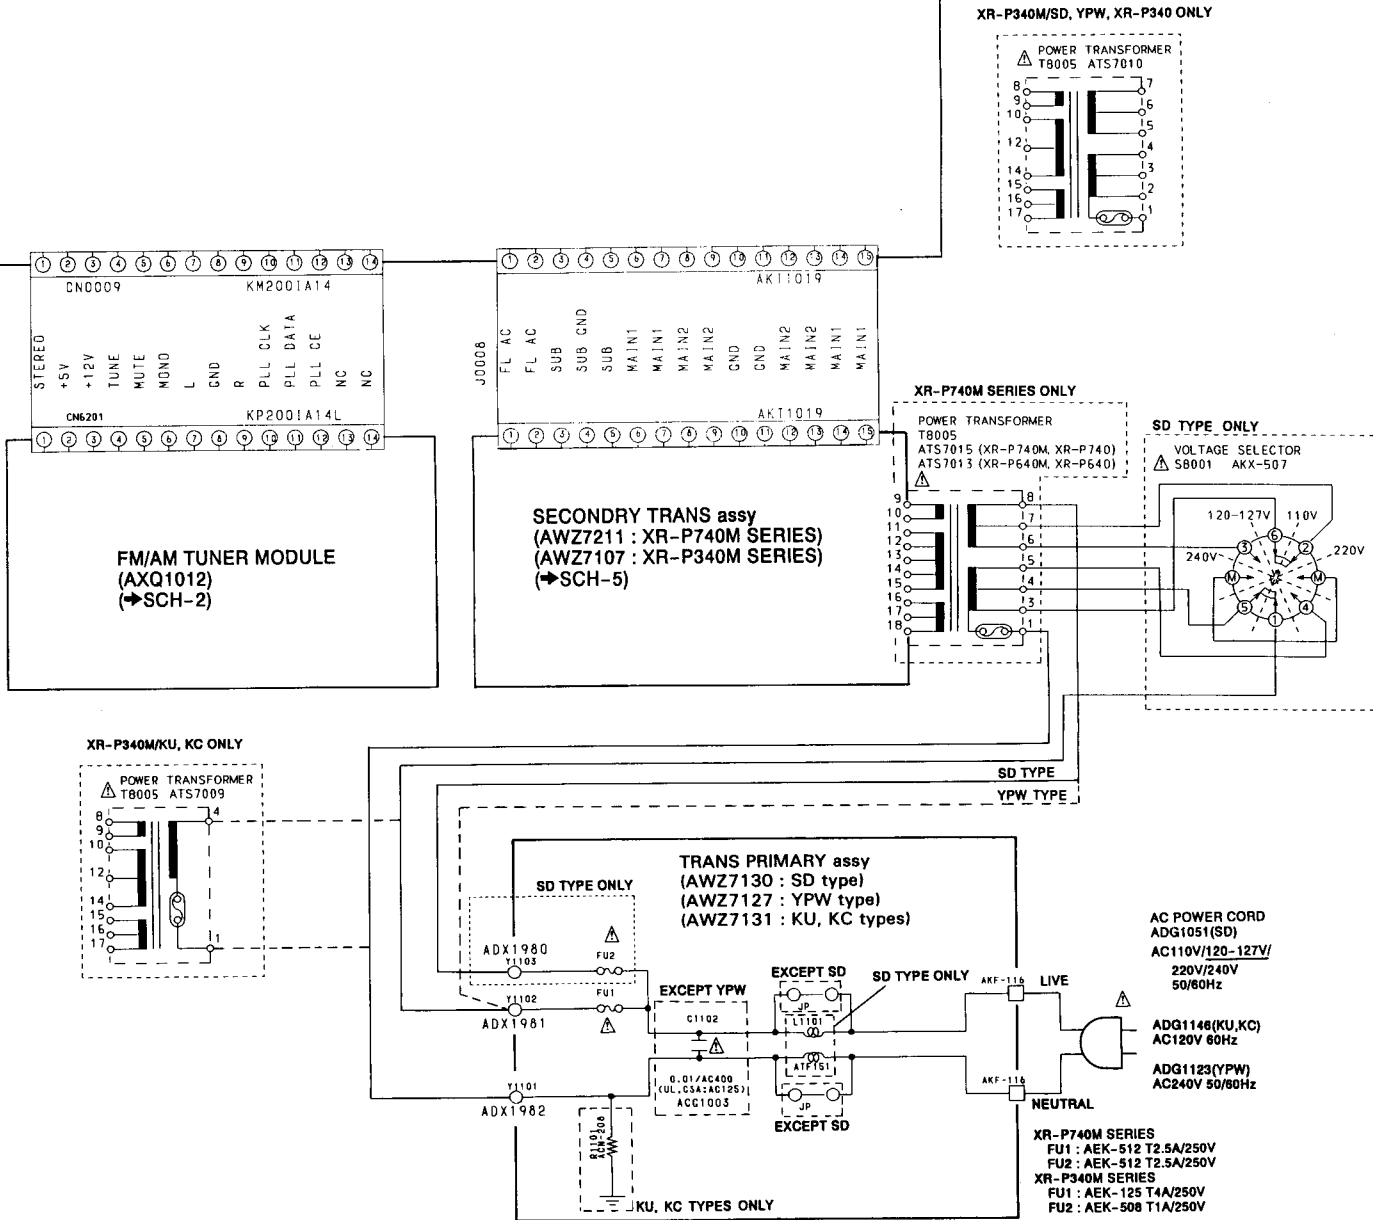

SCH-1


2. FM/AM TUNER MODULE

A


B

C



D

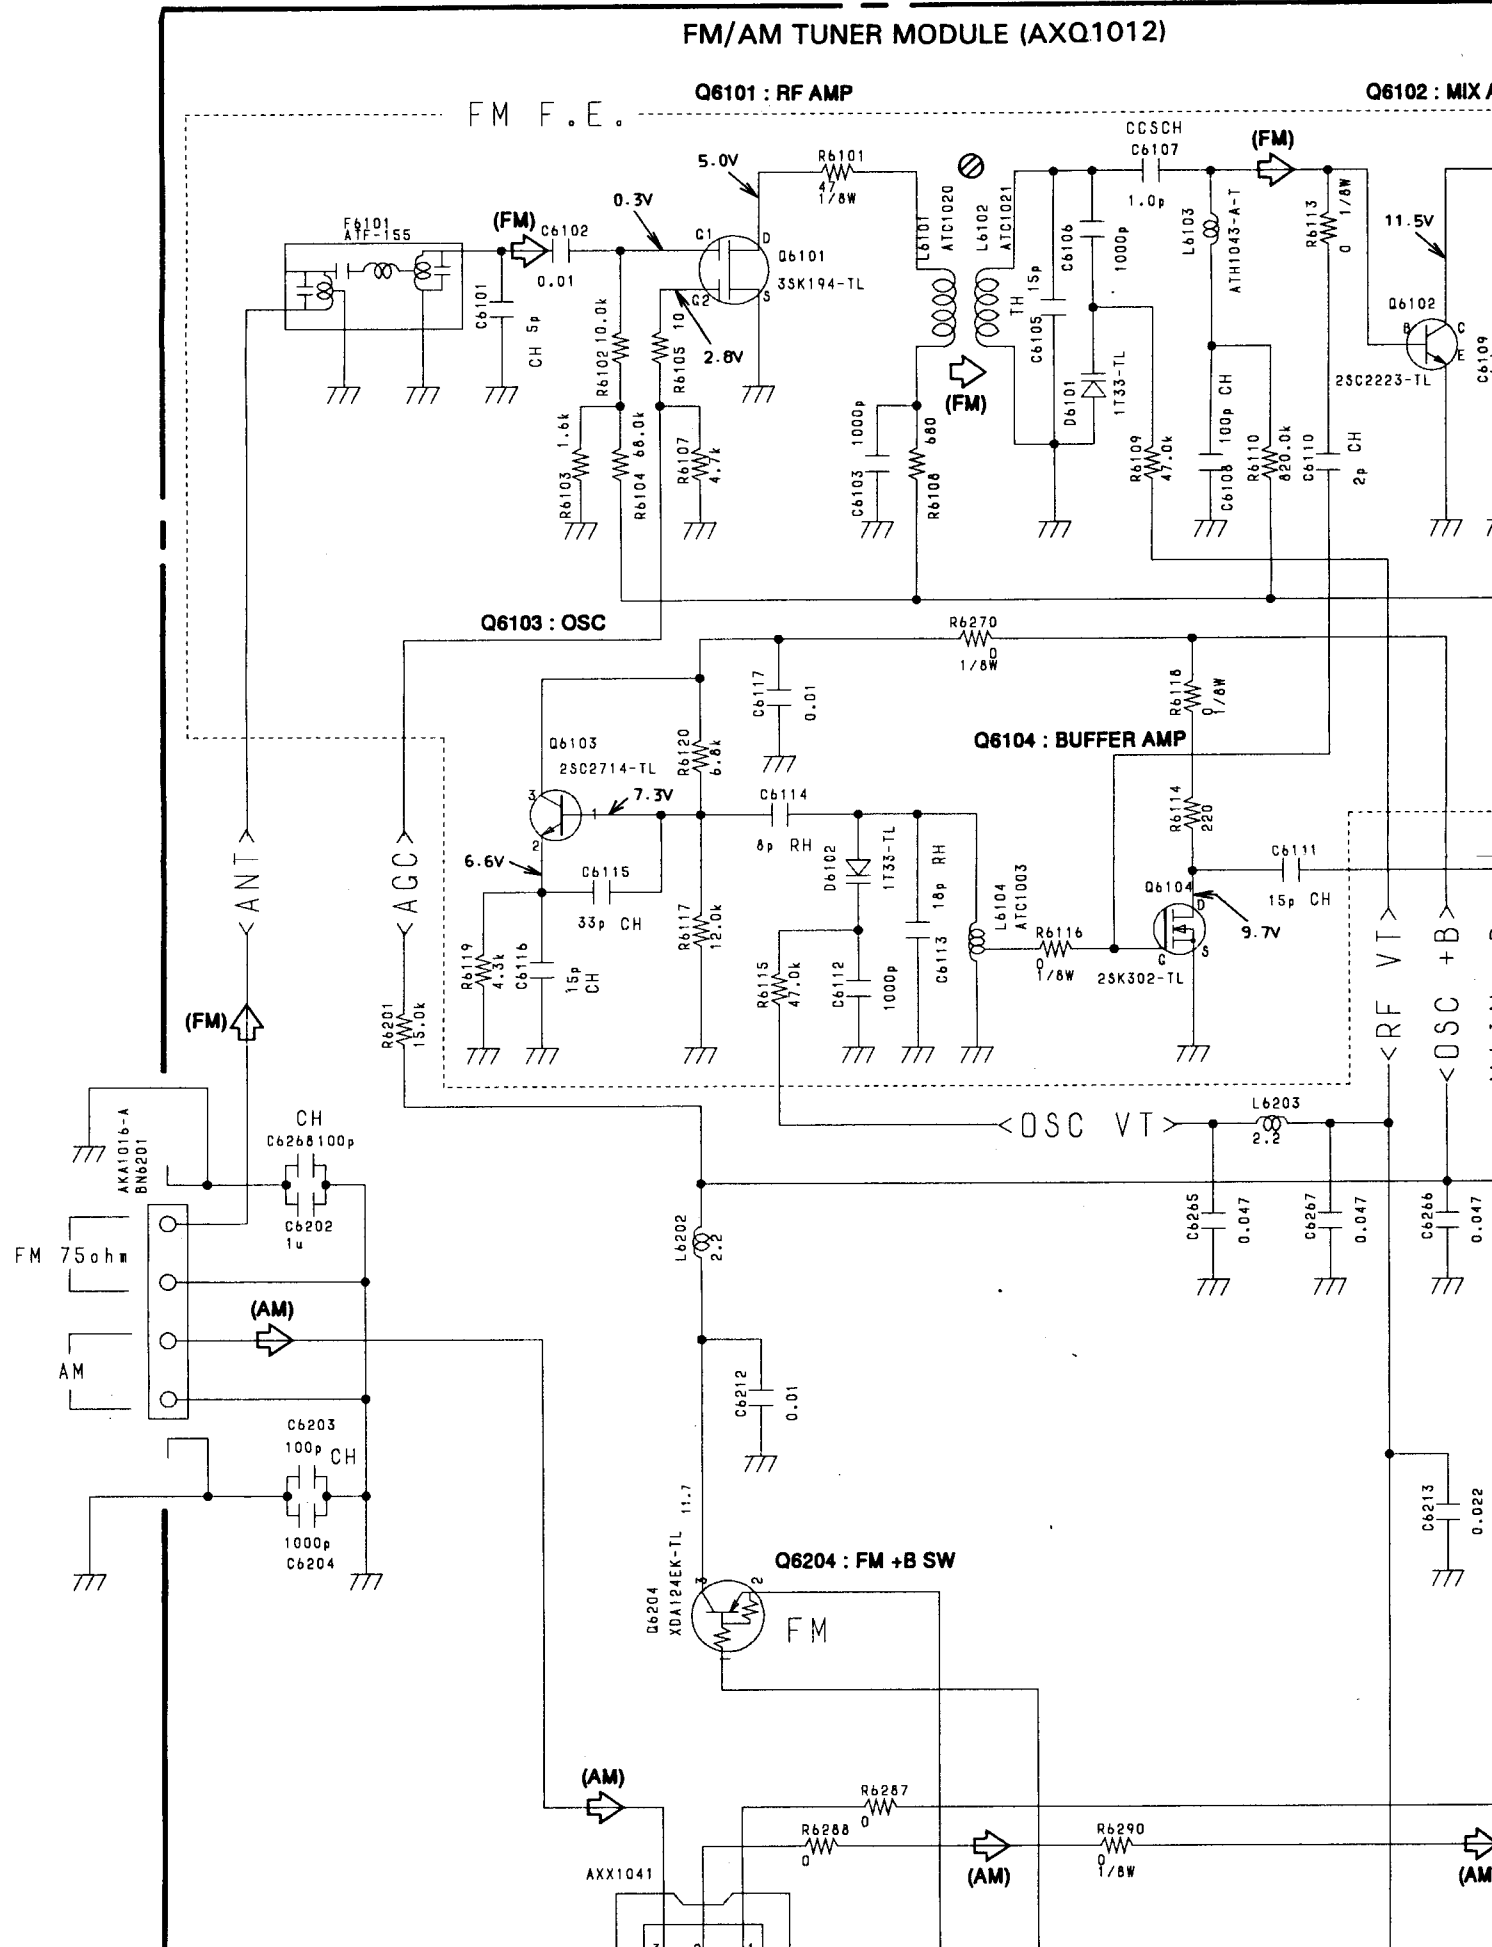



Q6102 : MIX AMP

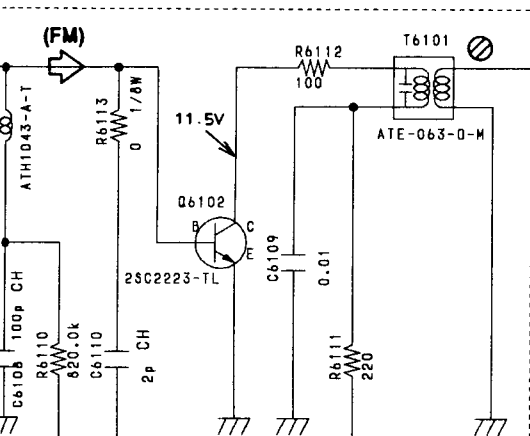

Q6214 : IF AMP

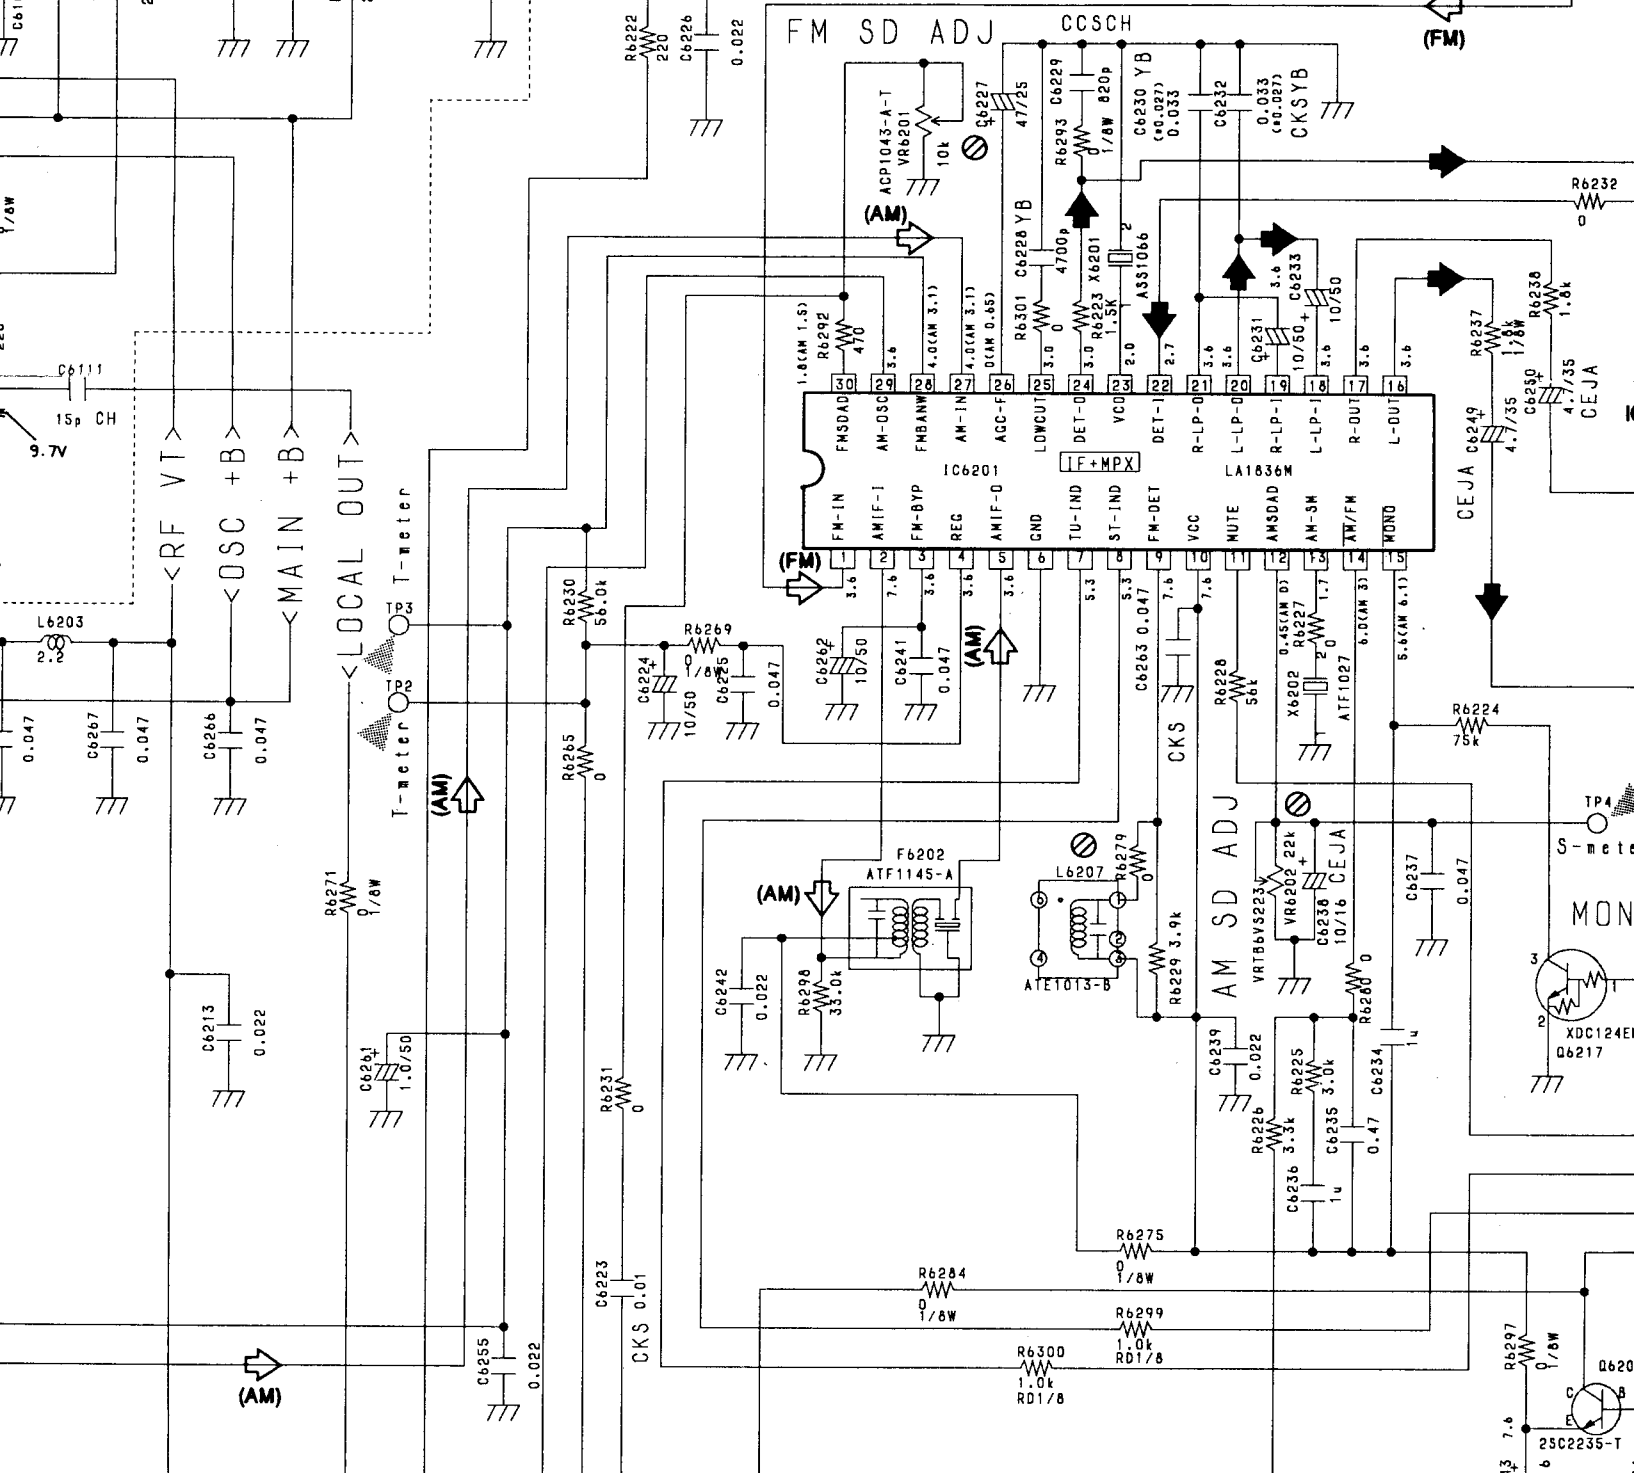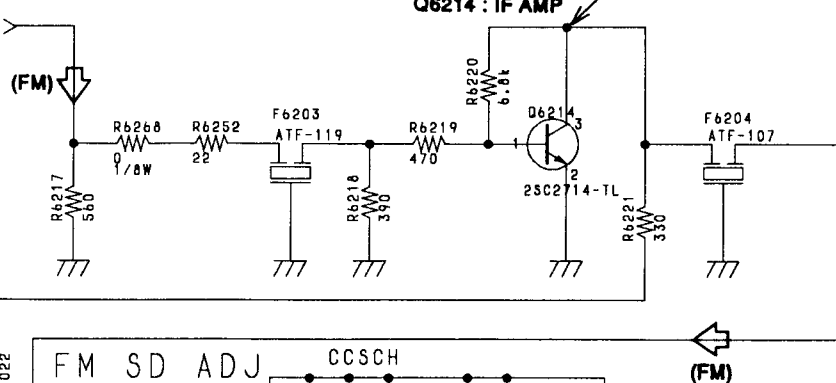


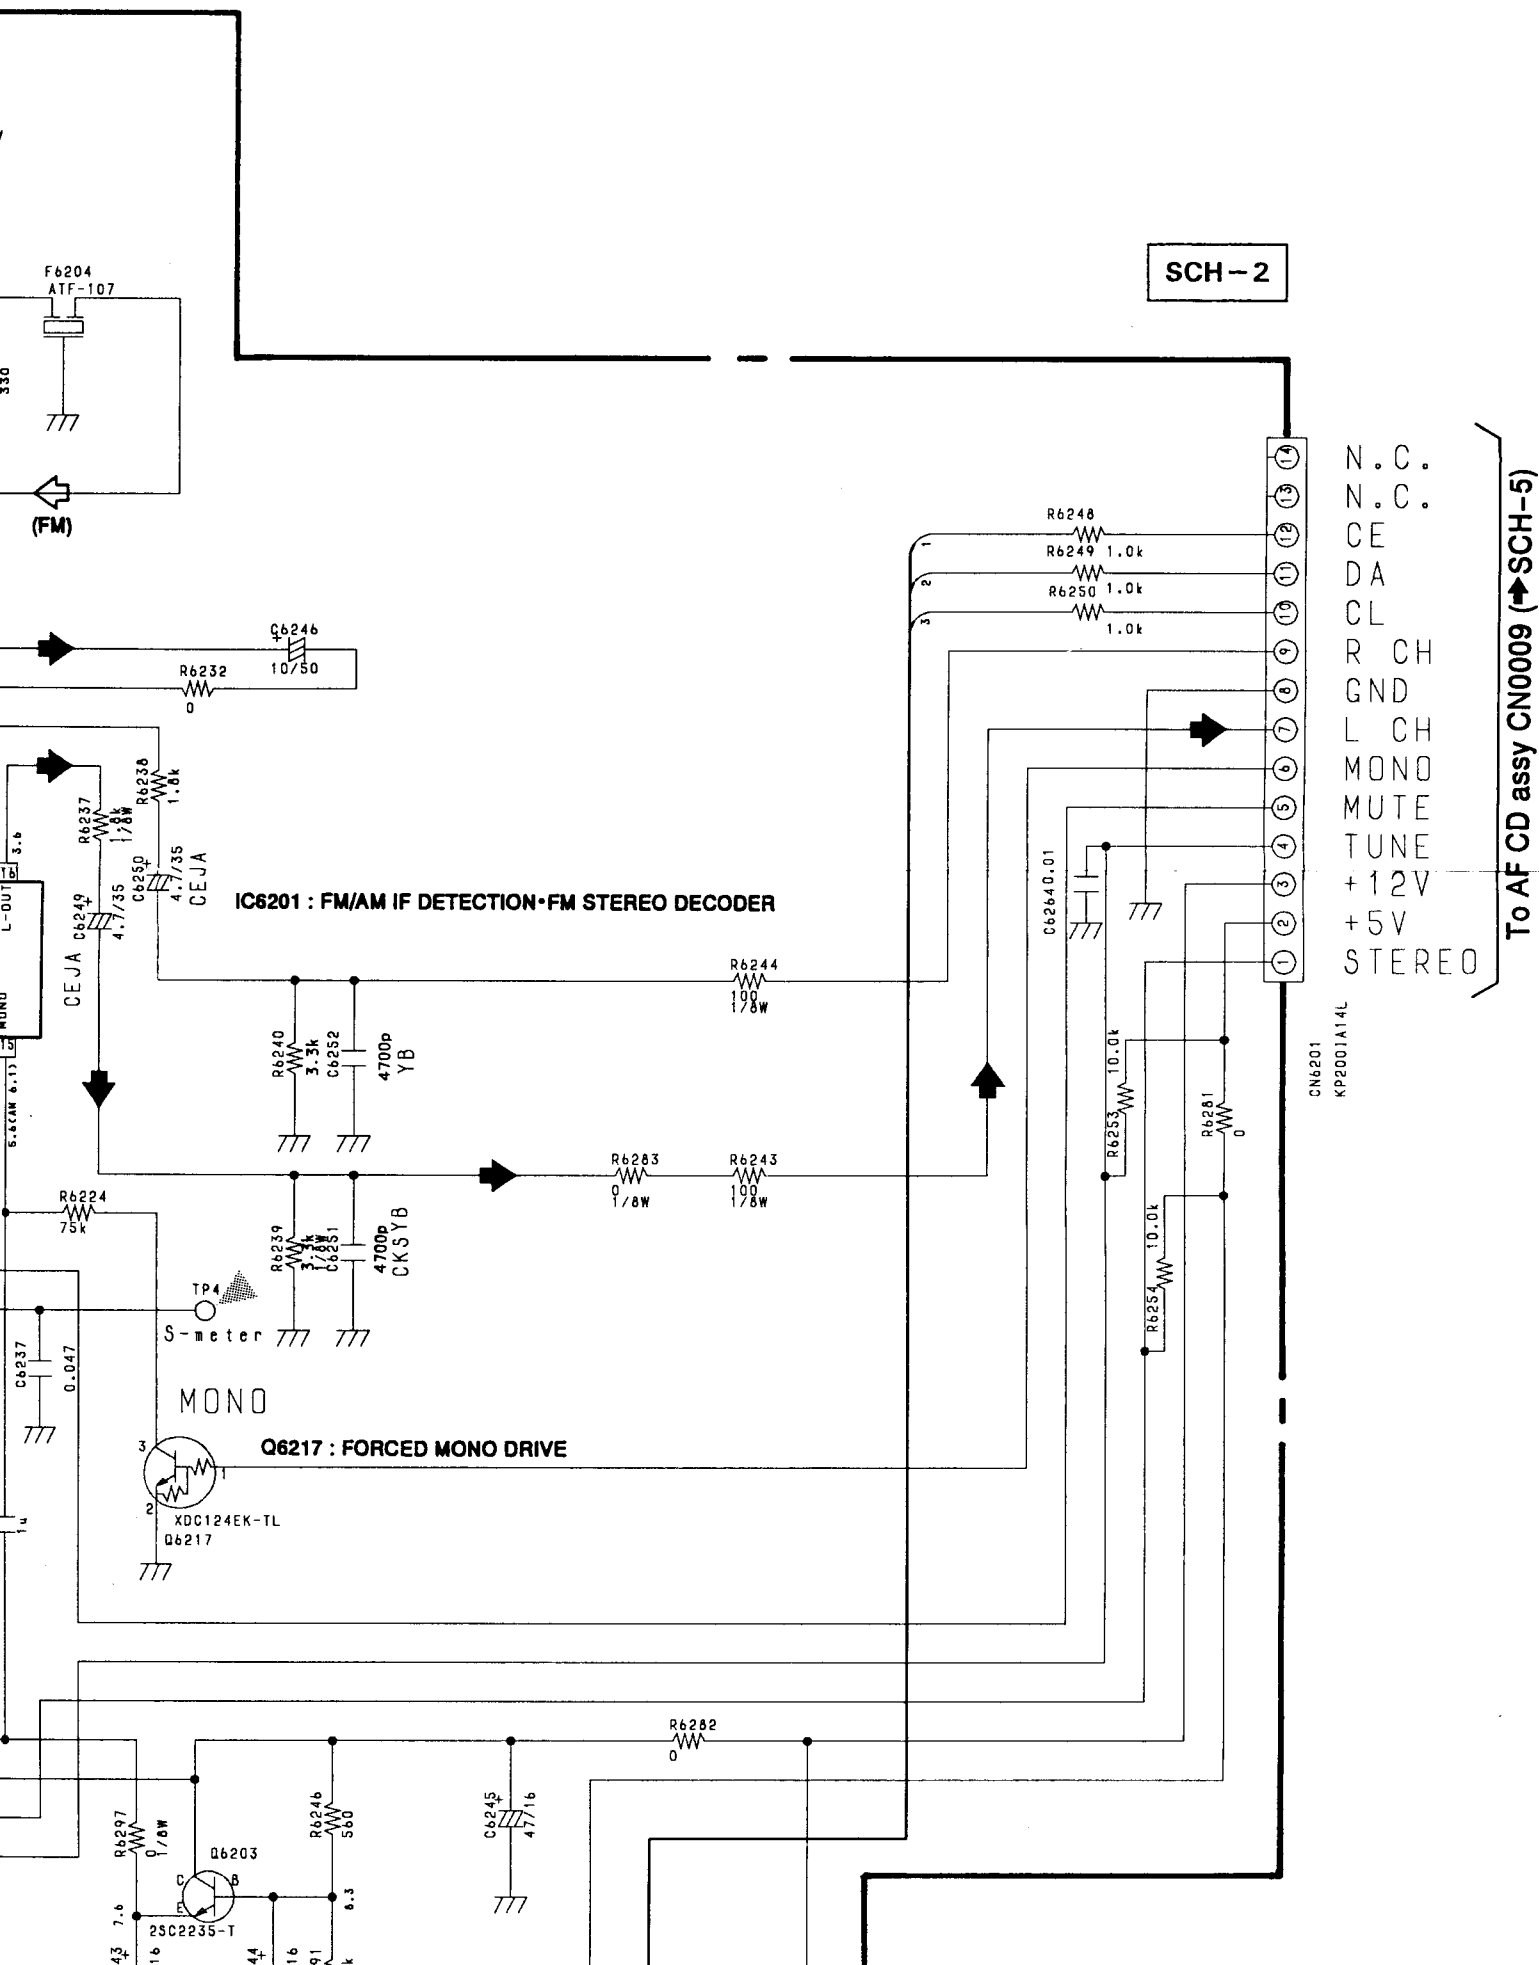

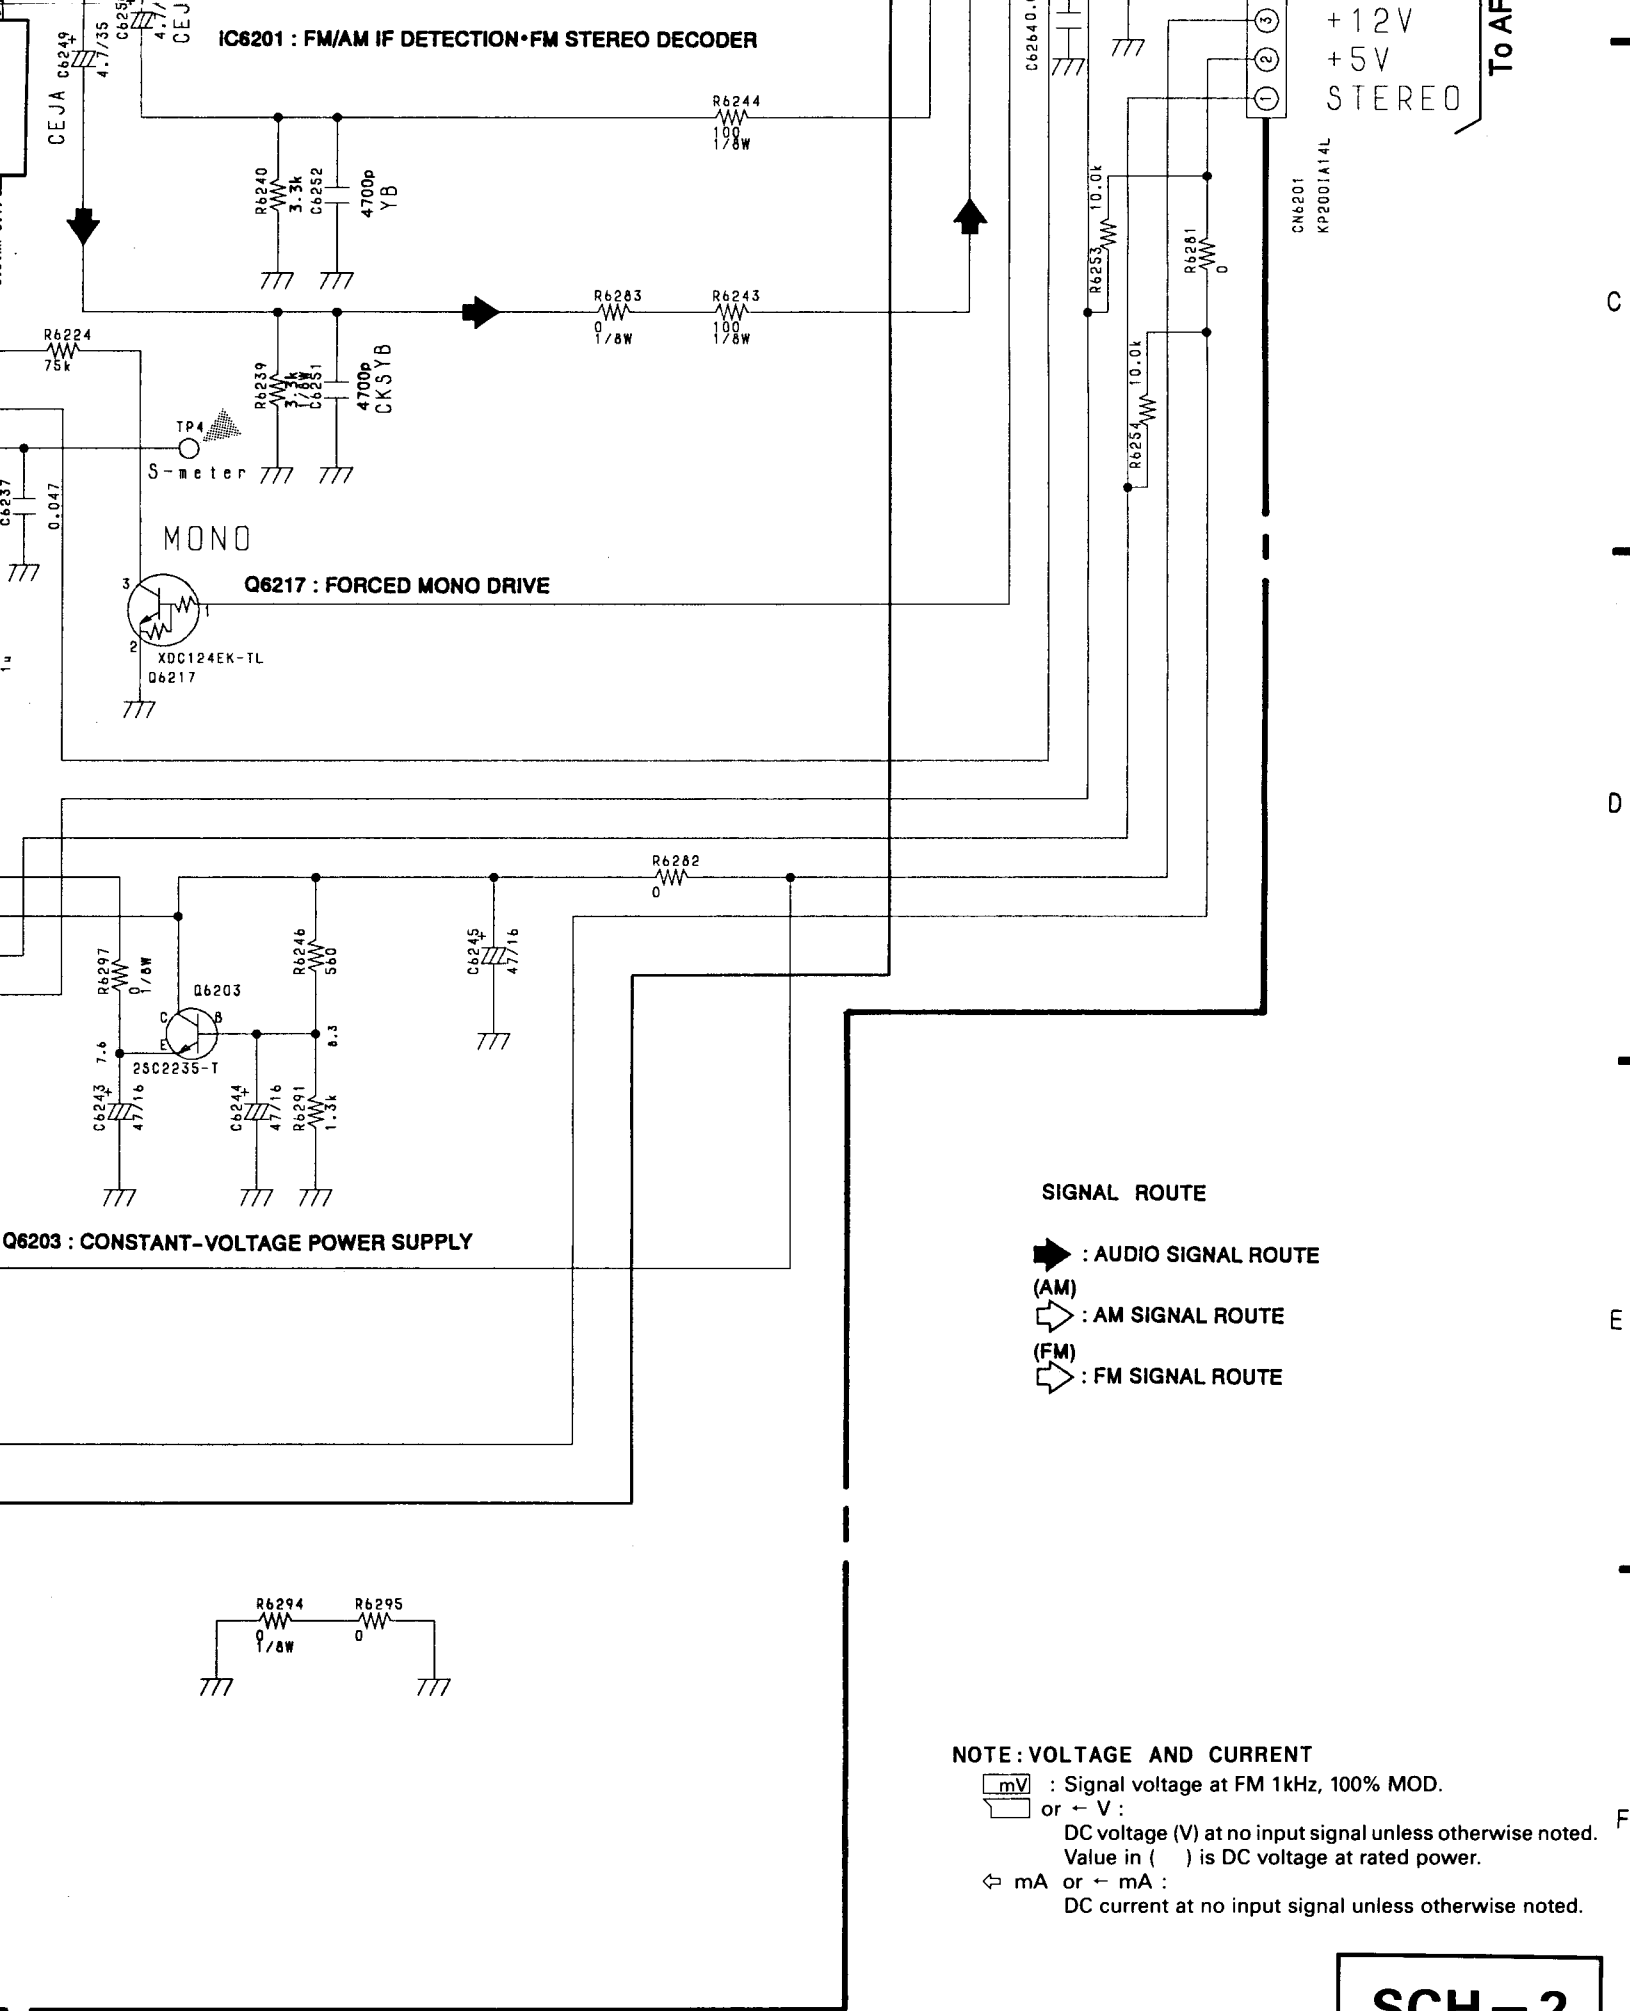

SCH - 2

FM/AM TUNER MODULE

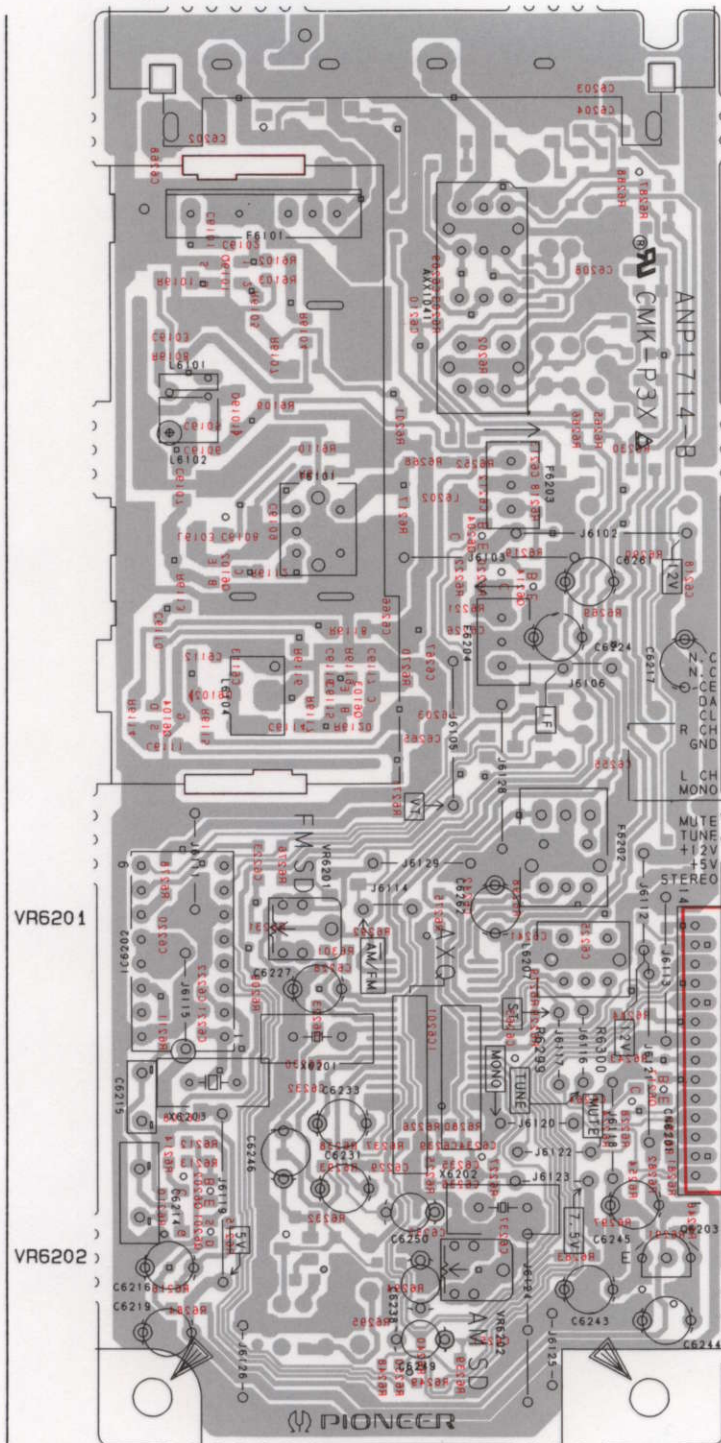


NOTE FOR PCB DIAGRAMS:

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between main parts of PCB and schematic diagrams is shown below.

Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
Q504	Q504	Transistor
D203	D203	Diode
C513	C513	Capacitor (Polarized)

• This diagram is viewed from the mounted parts side.

 3. The transistor terminal marked with E or C shows the emitter.
4. The diode terminal marked with C or A shows cathode side.
5. The capacitor terminal marked with + or - shows negative terminal.




● This diagram is viewed from the foil side.

FM\AM TUNER MODULE

3. DECK UNIT

XR-P740M, XR-P640M, XR-P340M
XR-P740, XR-P640, XR-P340

• This diagram is viewed from the foil side.

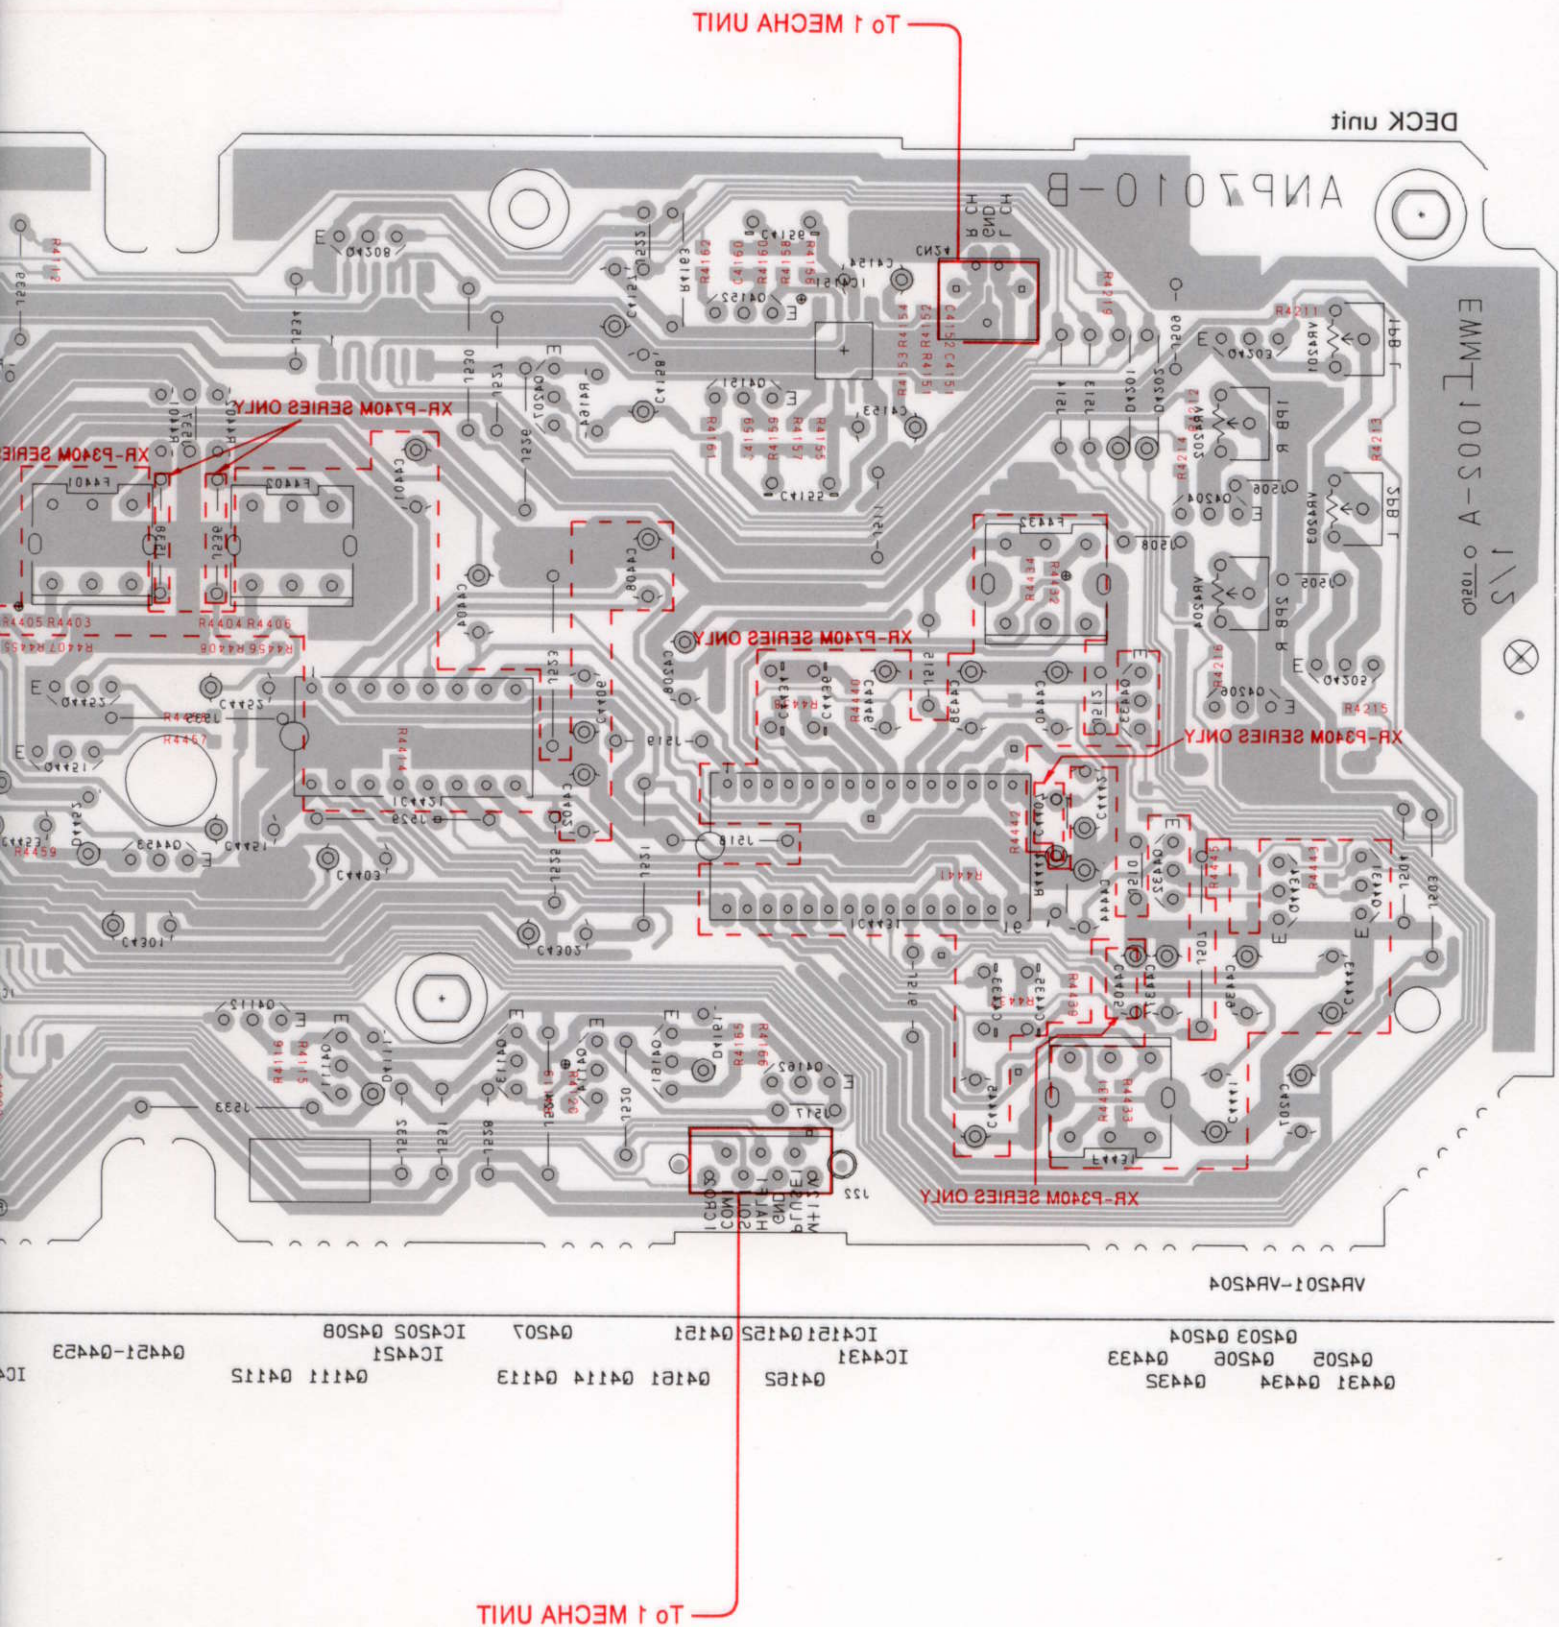

TO 1 MECHA UNIT

TO 1 MECHA UNIT

DECK unit

EMW 1005-A 10510

1/5

3. DECK UNIT

- This diagram is viewed from the mounted parts side.


XR-P740M Series indicates models XR-P740M/SD, YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD. XR-P340M Series indicates models XR-P340M/KU, KSD, YPW, XR-P340/SD and YPW.

A

B


C

D

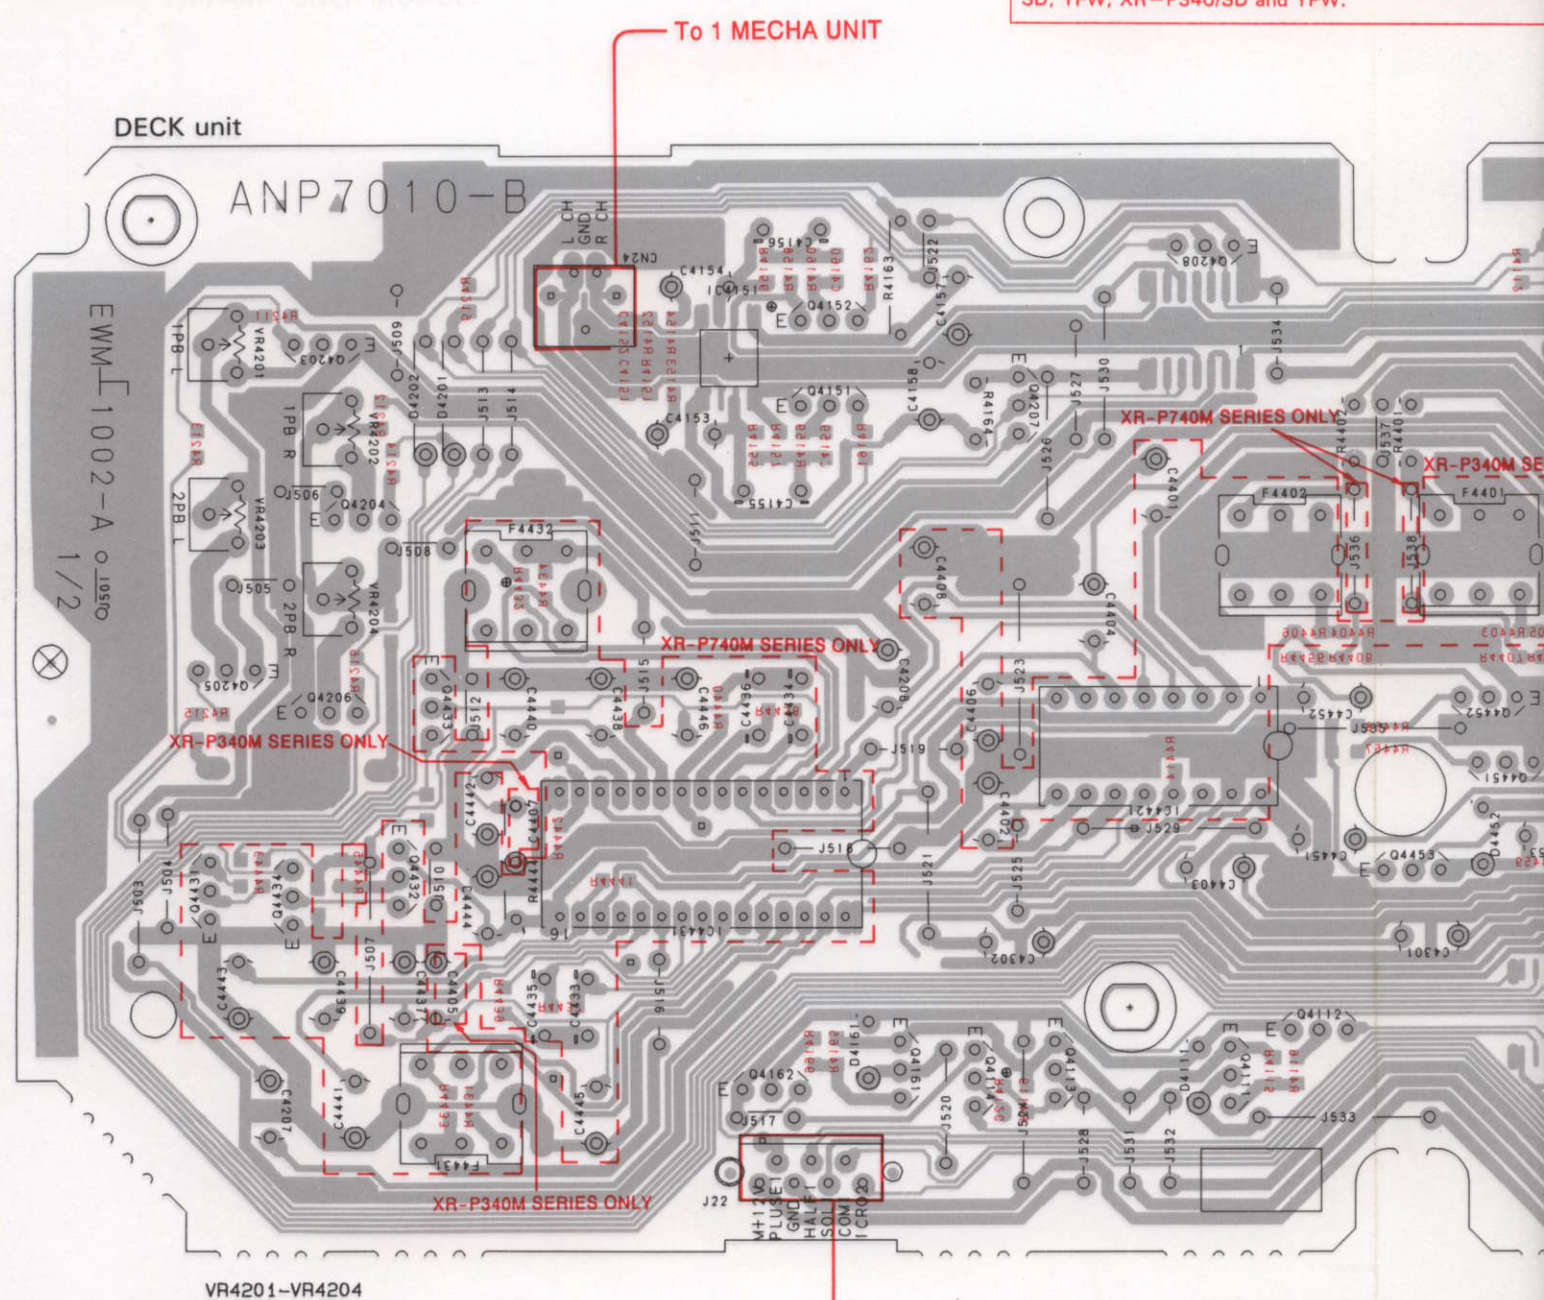

VR4201-VR4204											
Q4203	Q4204		IC4151	Q4152	Q4151	Q4207	IC4202	Q4208			
Q4205	Q4206	Q4433	IC4431		Q4162	Q4161	IC4421		Q4111	Q4112	Q4451-Q4453
Q4431	Q4434	Q4432				Q4114	Q4113				

es models XR-P740M/SD, YPW,
M/SD, YPW and XR-P640/SD.
es models XR-P340M/KU, KC,
and YPW.

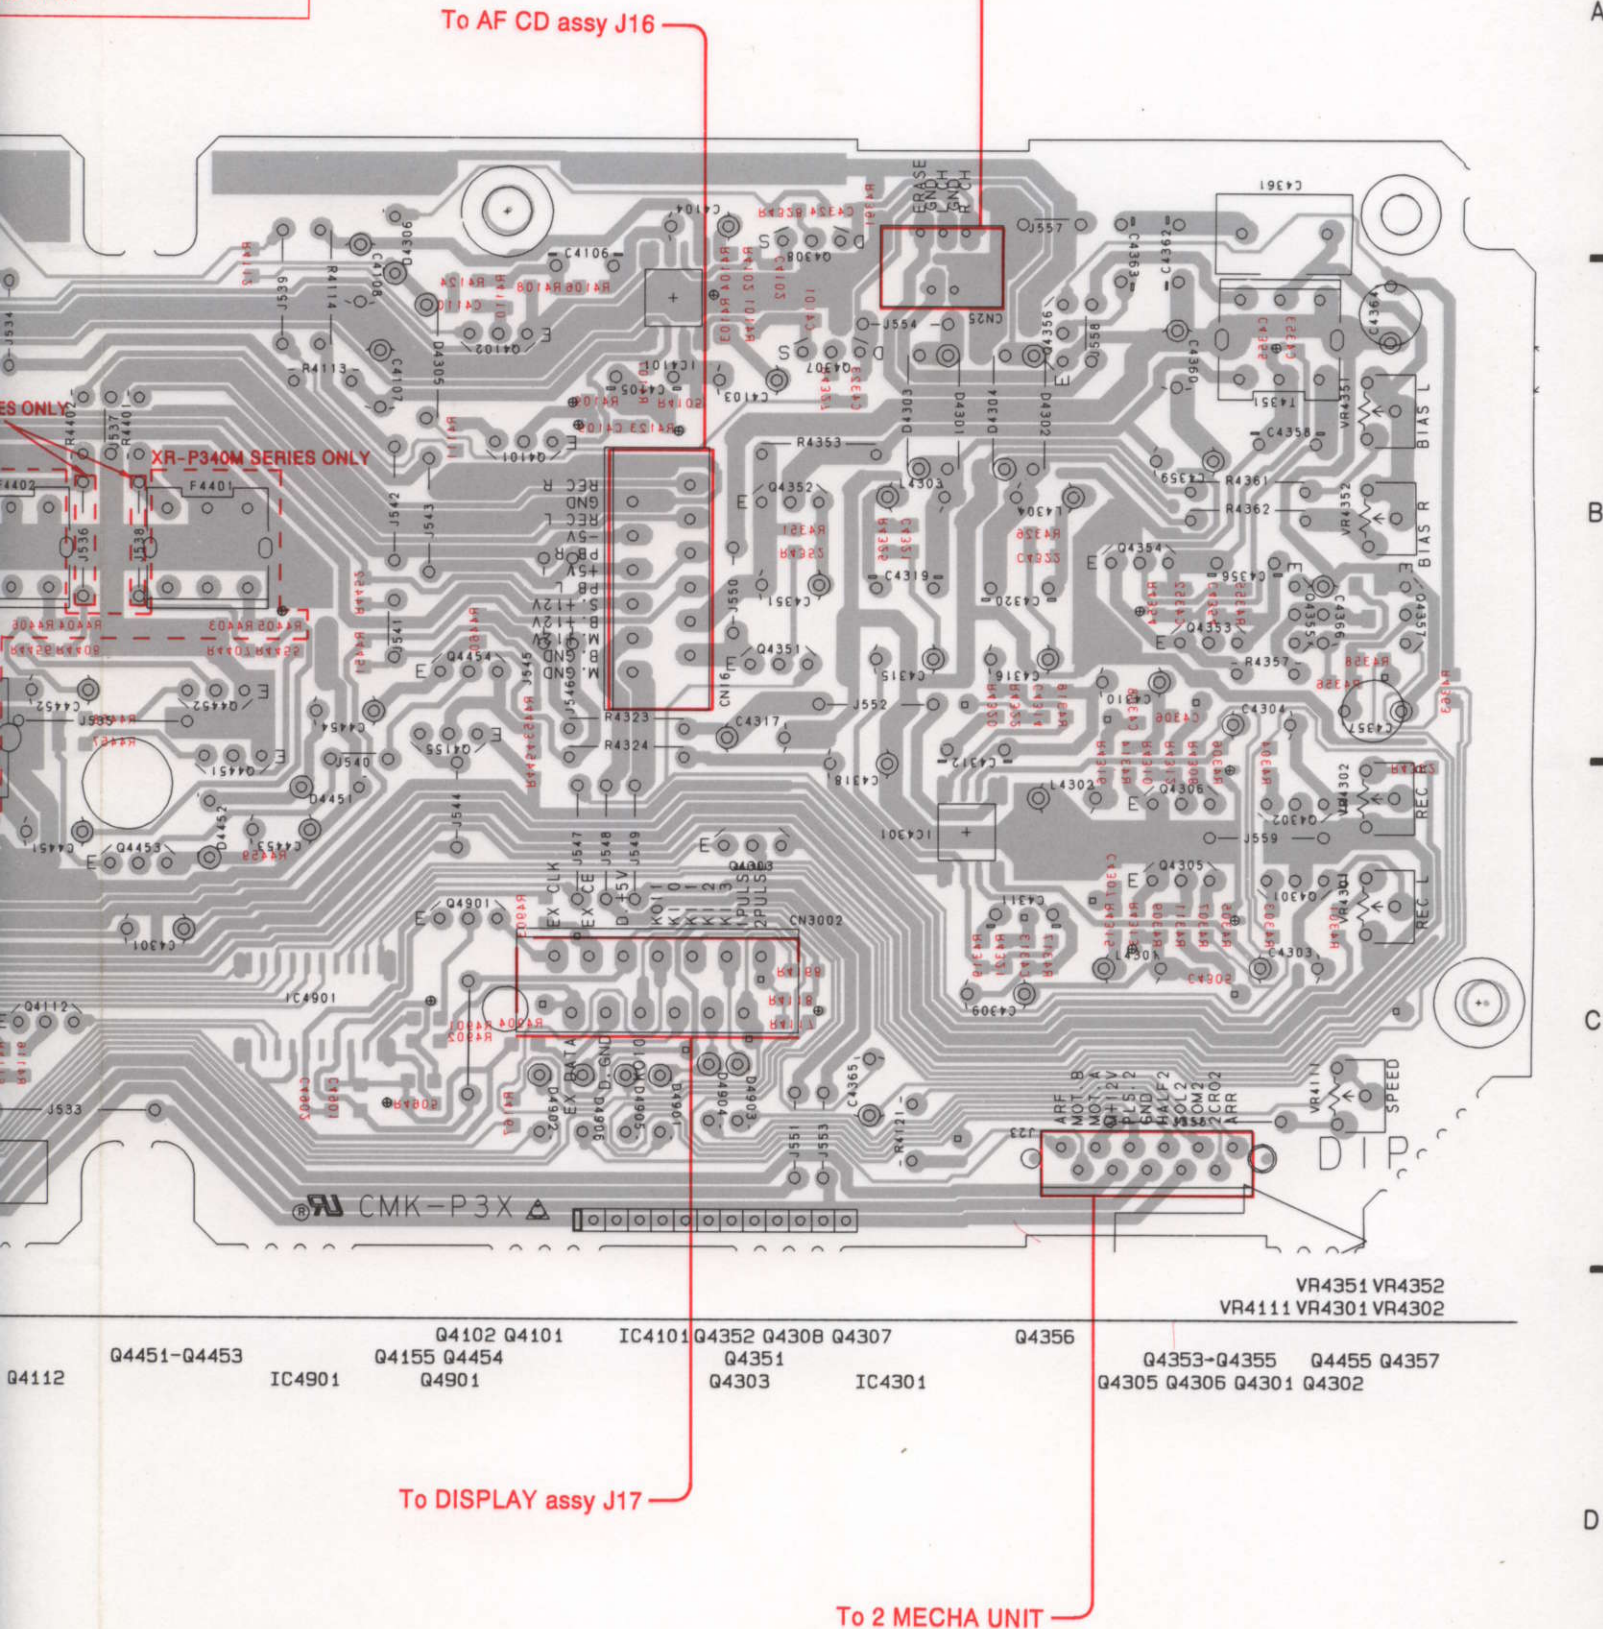

NOTE : VOLTAGE AND CURRENT

□ or ← V :

DC voltage (V) in STOP mode unless otherwise noted.

↶ mA or ← mA :

DC current in STOP mode unless otherwise noted.

To DISPL

EX CLK
EX DATA
EX CE (DECK DISP)
D-CND

1 MECHA UNIT

1 Lch +
2 Rch - Lch +
3 Rch +

2 MECHA UNIT

1 Rch +
2 Rch - Lch -
3 Lch +
4 Erase +
5 Erase -HEAD
GND
HEAD
GND
ERASEDECK unit (EWM1002 : XR-P740M Series)
(EWM1001 : XR-P340M Series)

SIGNAL ROUTE

▶ : DECK PB SIGNAL ROUTE

◀ : DECK REC SIGNAL ROUTE


To AF CD assy J0016 (→SCH-5)

REC R
CND
REC L
-5V
PB R
+5V
PB L
5+12V
B+12V
M+12V
B CND
M CNDEX CLK
EX DATA
EX CE (DECK DISP)
D-CNDCN16
KPE12D4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10WD4901
R4901
1.0k
1/10W
X0424ES-T
1/10W

SCH-3

DECK UNIT


Any diode without part number indicate

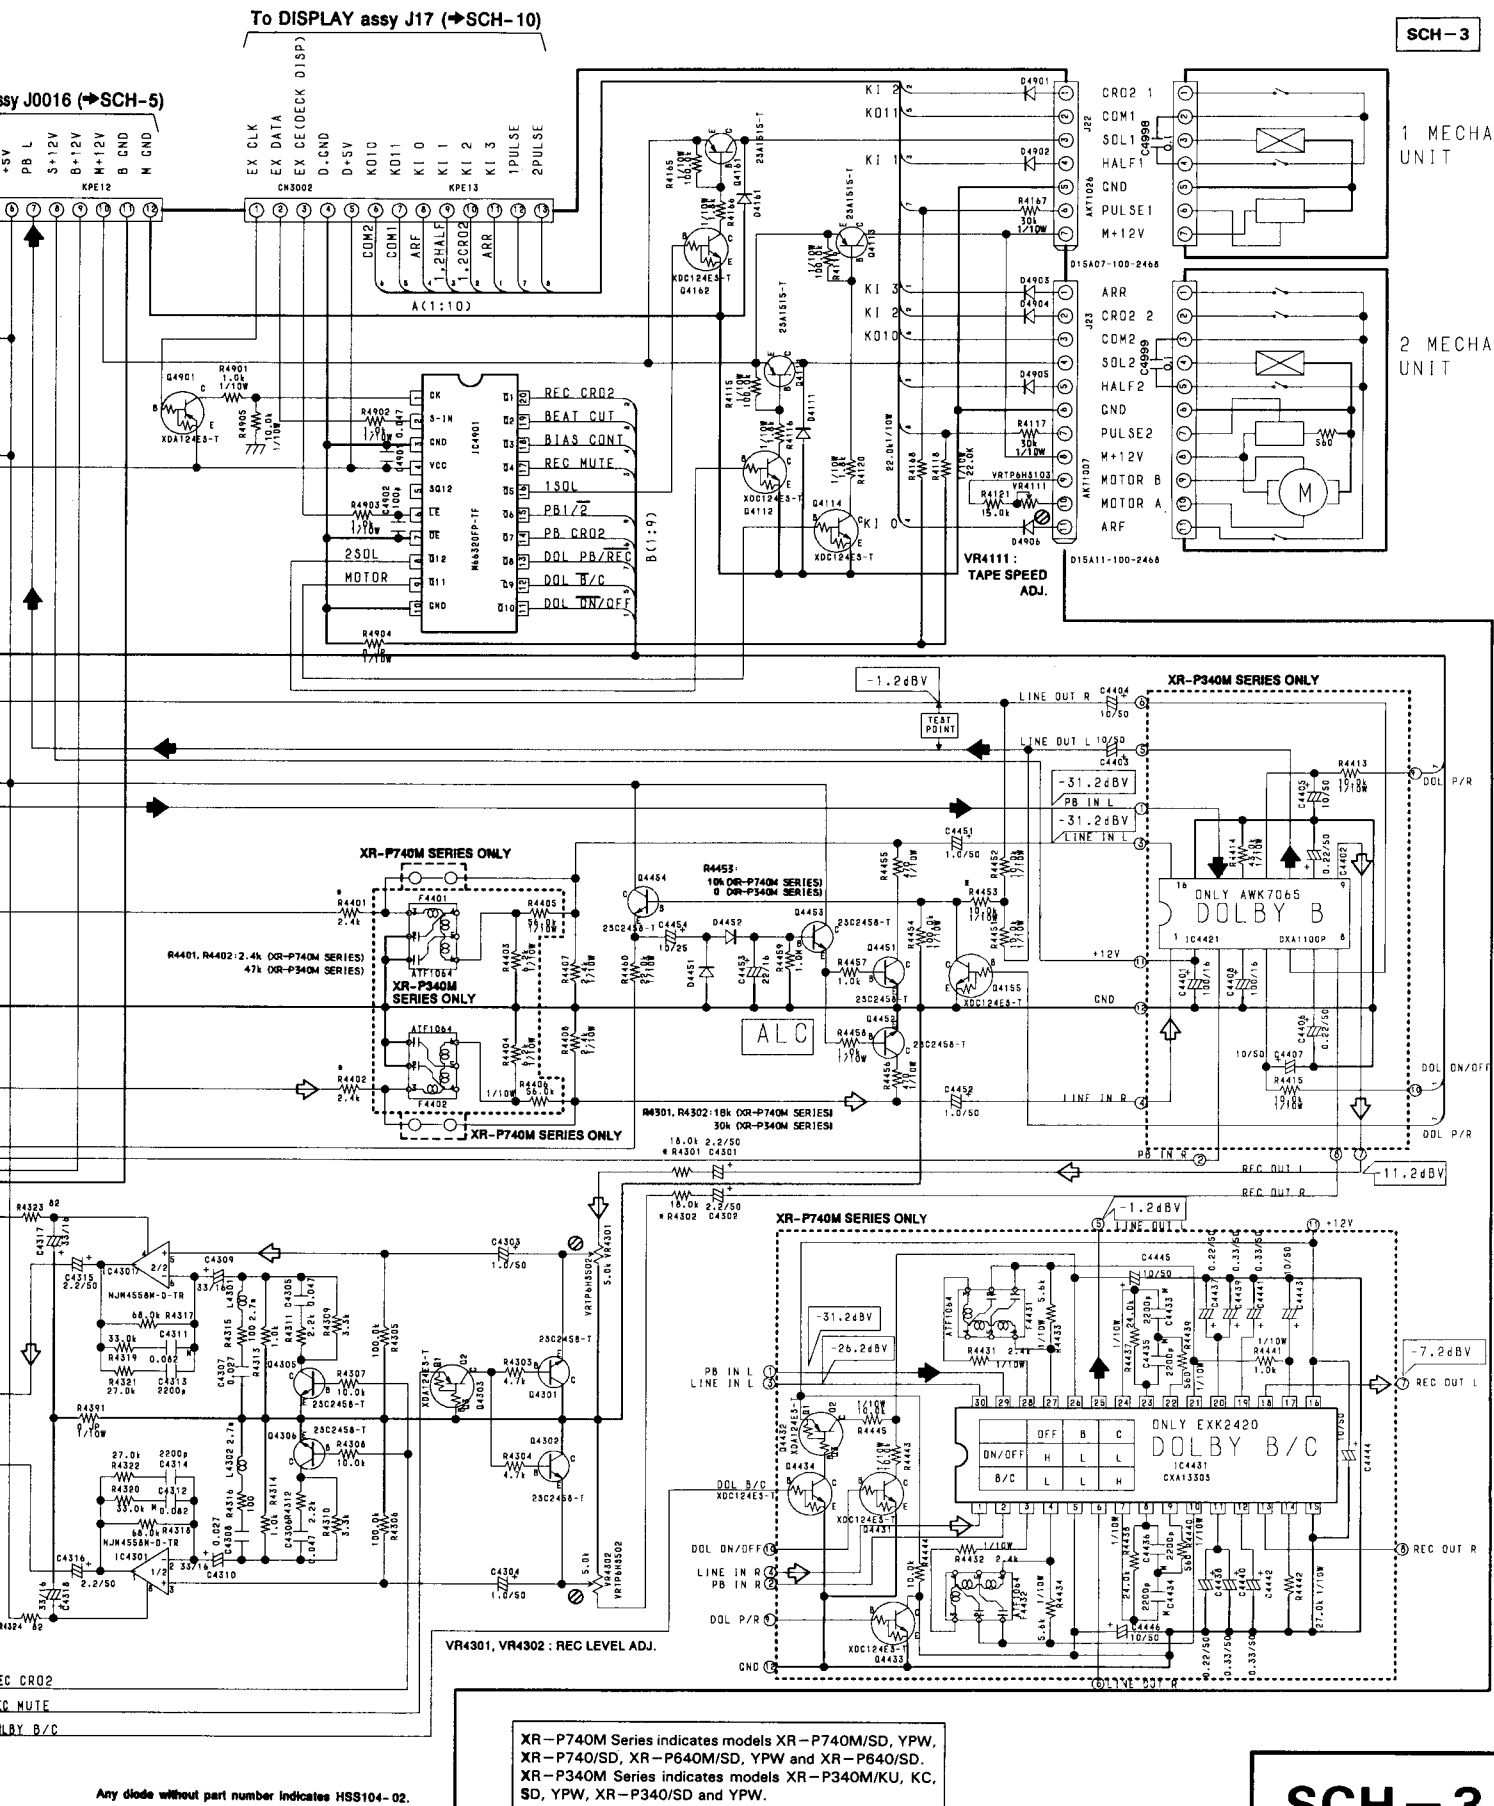

SCH-3

DECK UNIT


4. AF CD ASSY, VR ASSY, H. P ASSY, SECONDRY TRANS ASSY,
MULTI MECHA ASSY AND SINGLE MECHA ASSY

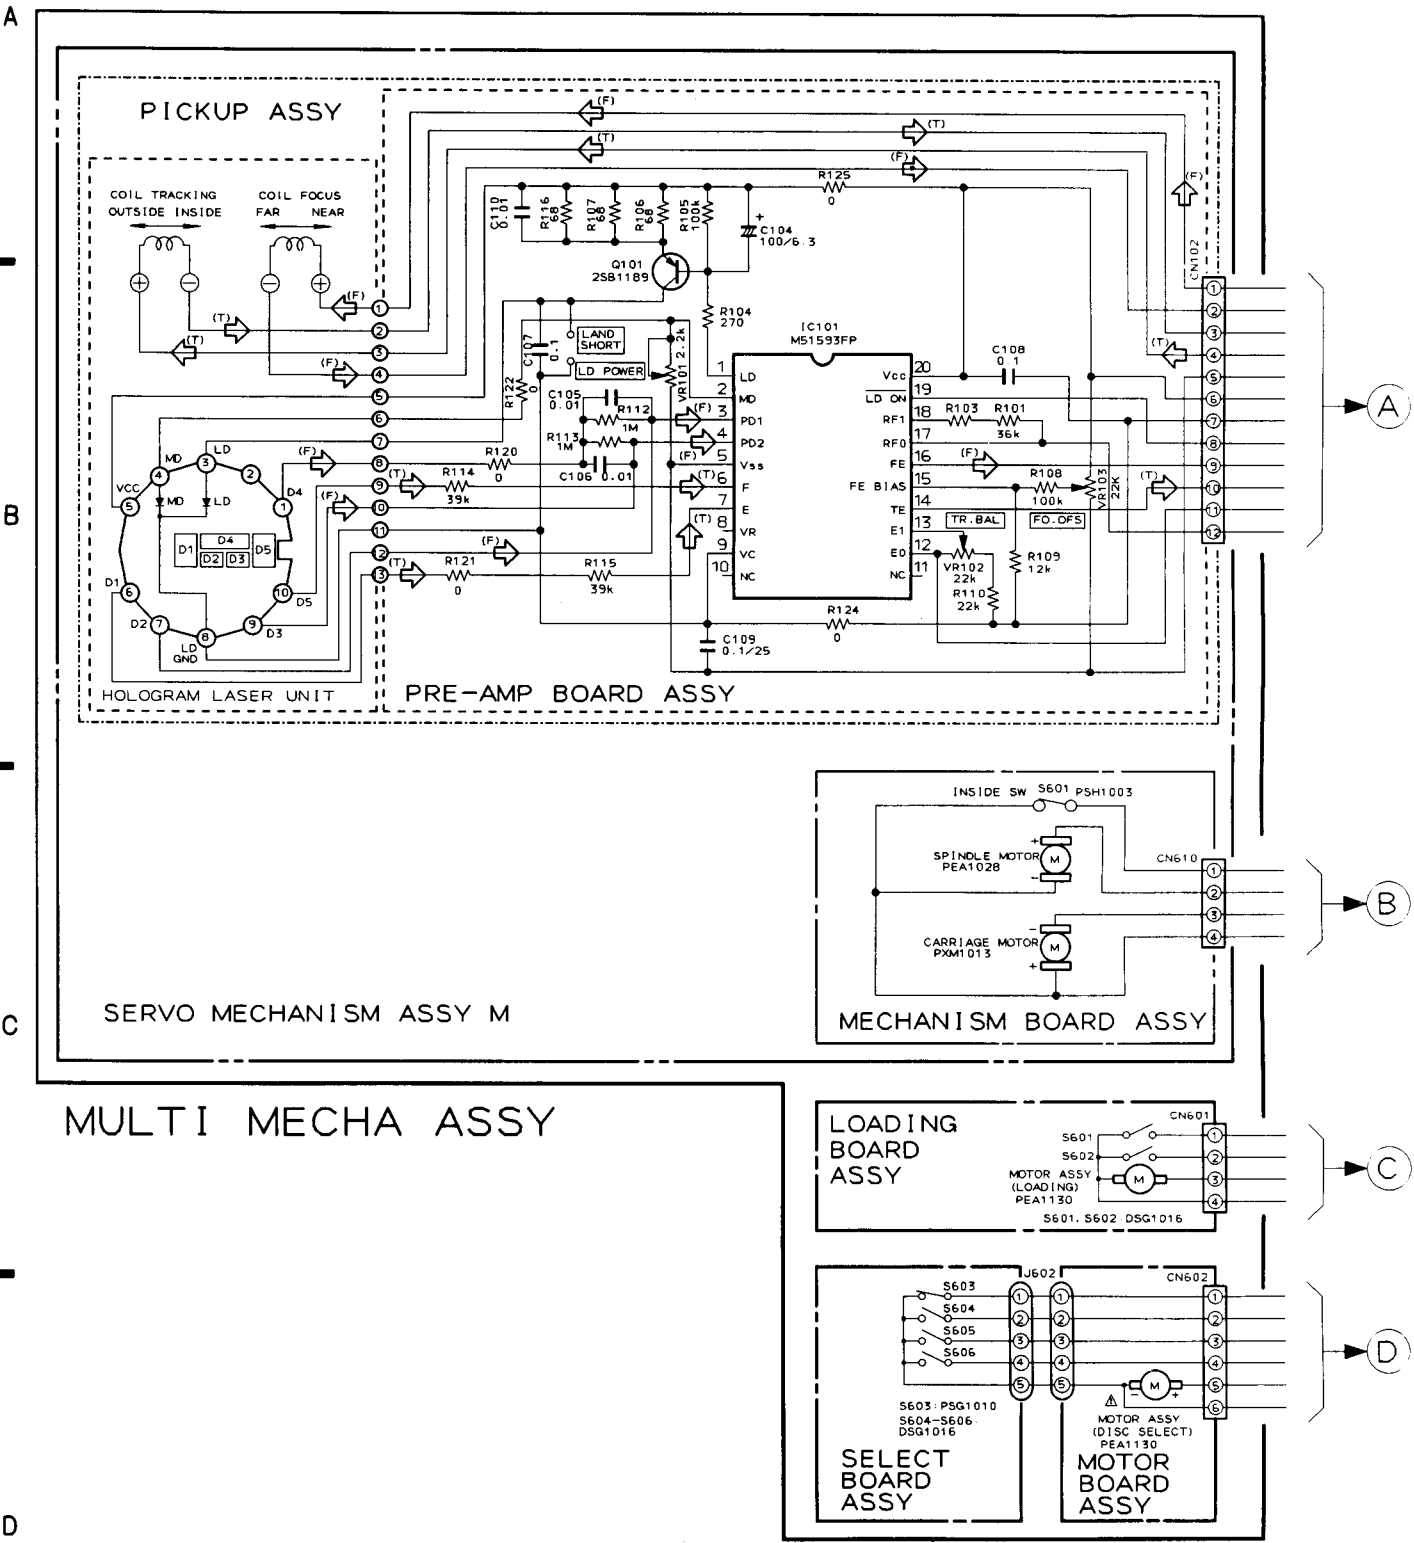

NOTE

SCH-4-1

CD MULTI MECHA ASSY,
CD SINGLE MECHA ASSY

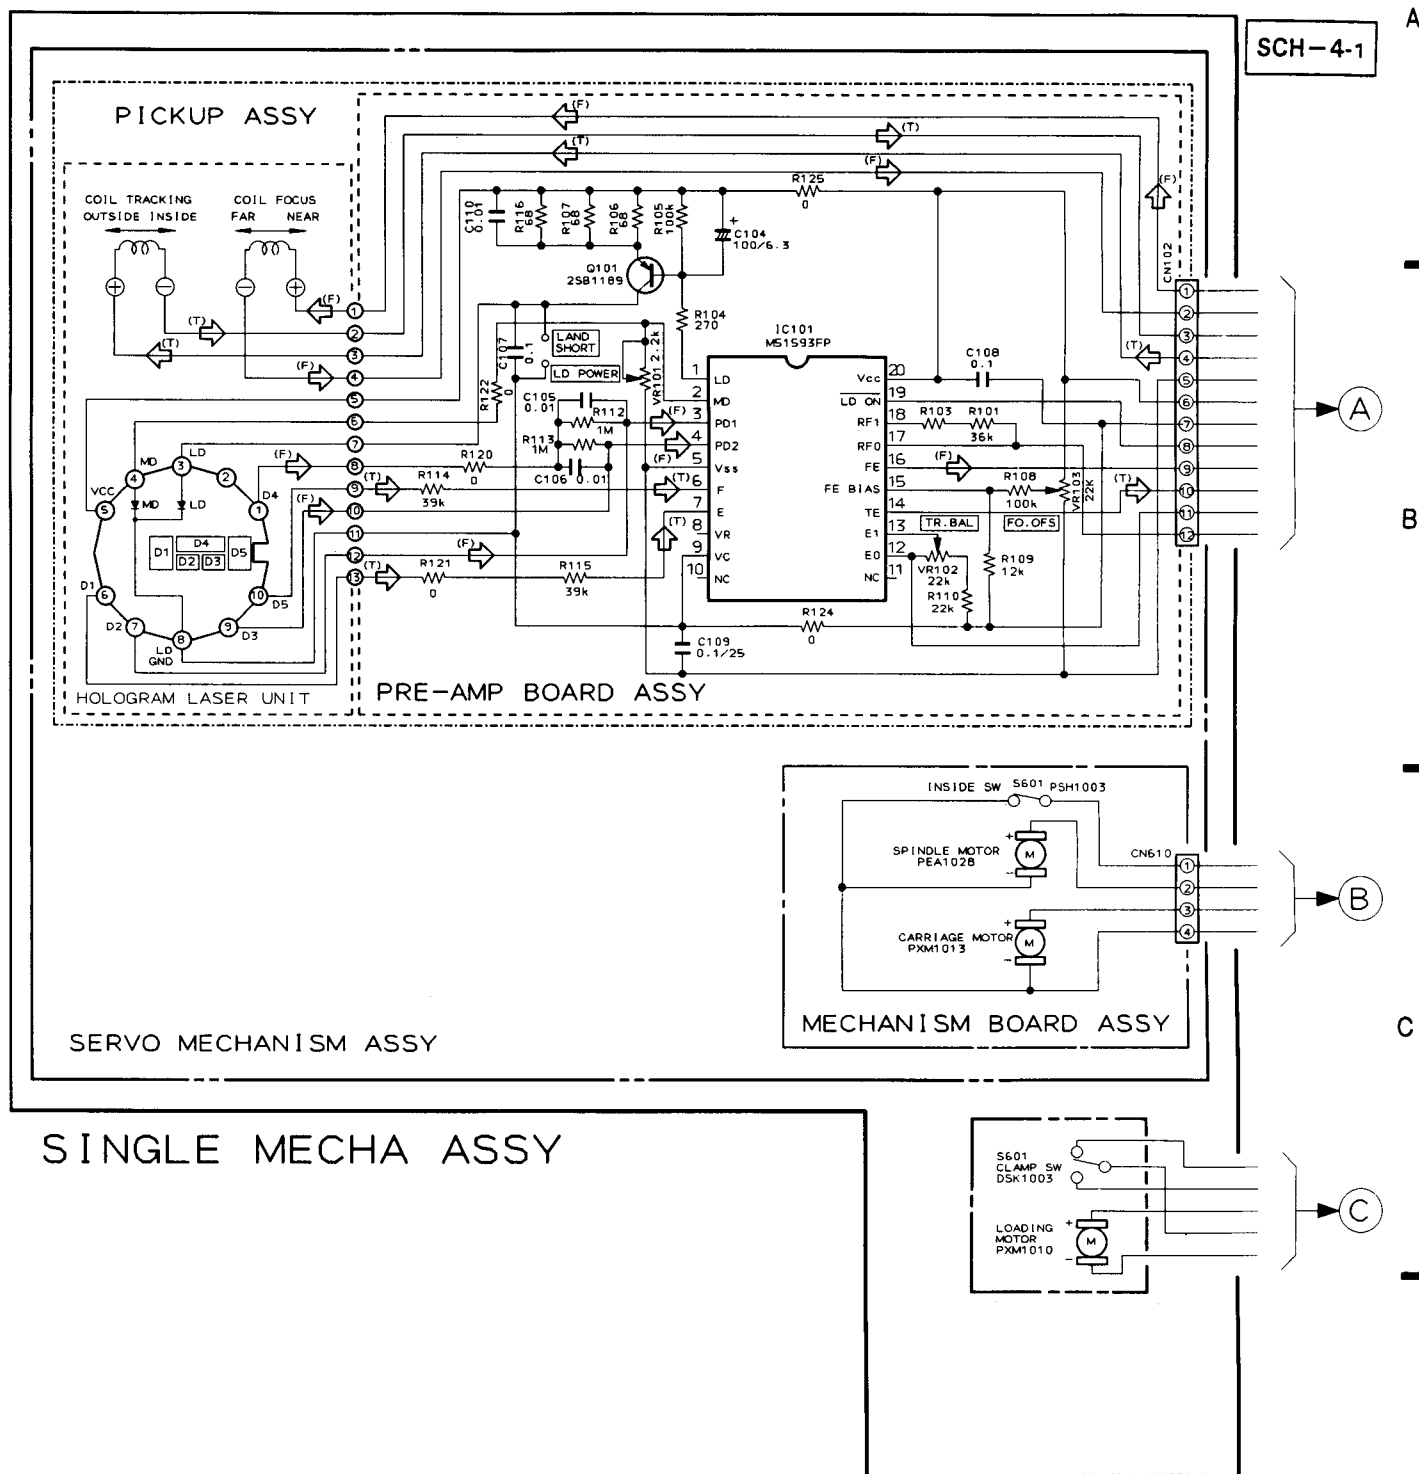

: VOLTAGE AND CURRENT


□ or - V :


DC voltage (V) in PLAY mode unless otherwise noted.

↻ mA or - mA :

DC current in PLAY mode unless otherwise noted.

Value in () is DC current in STOP mode.

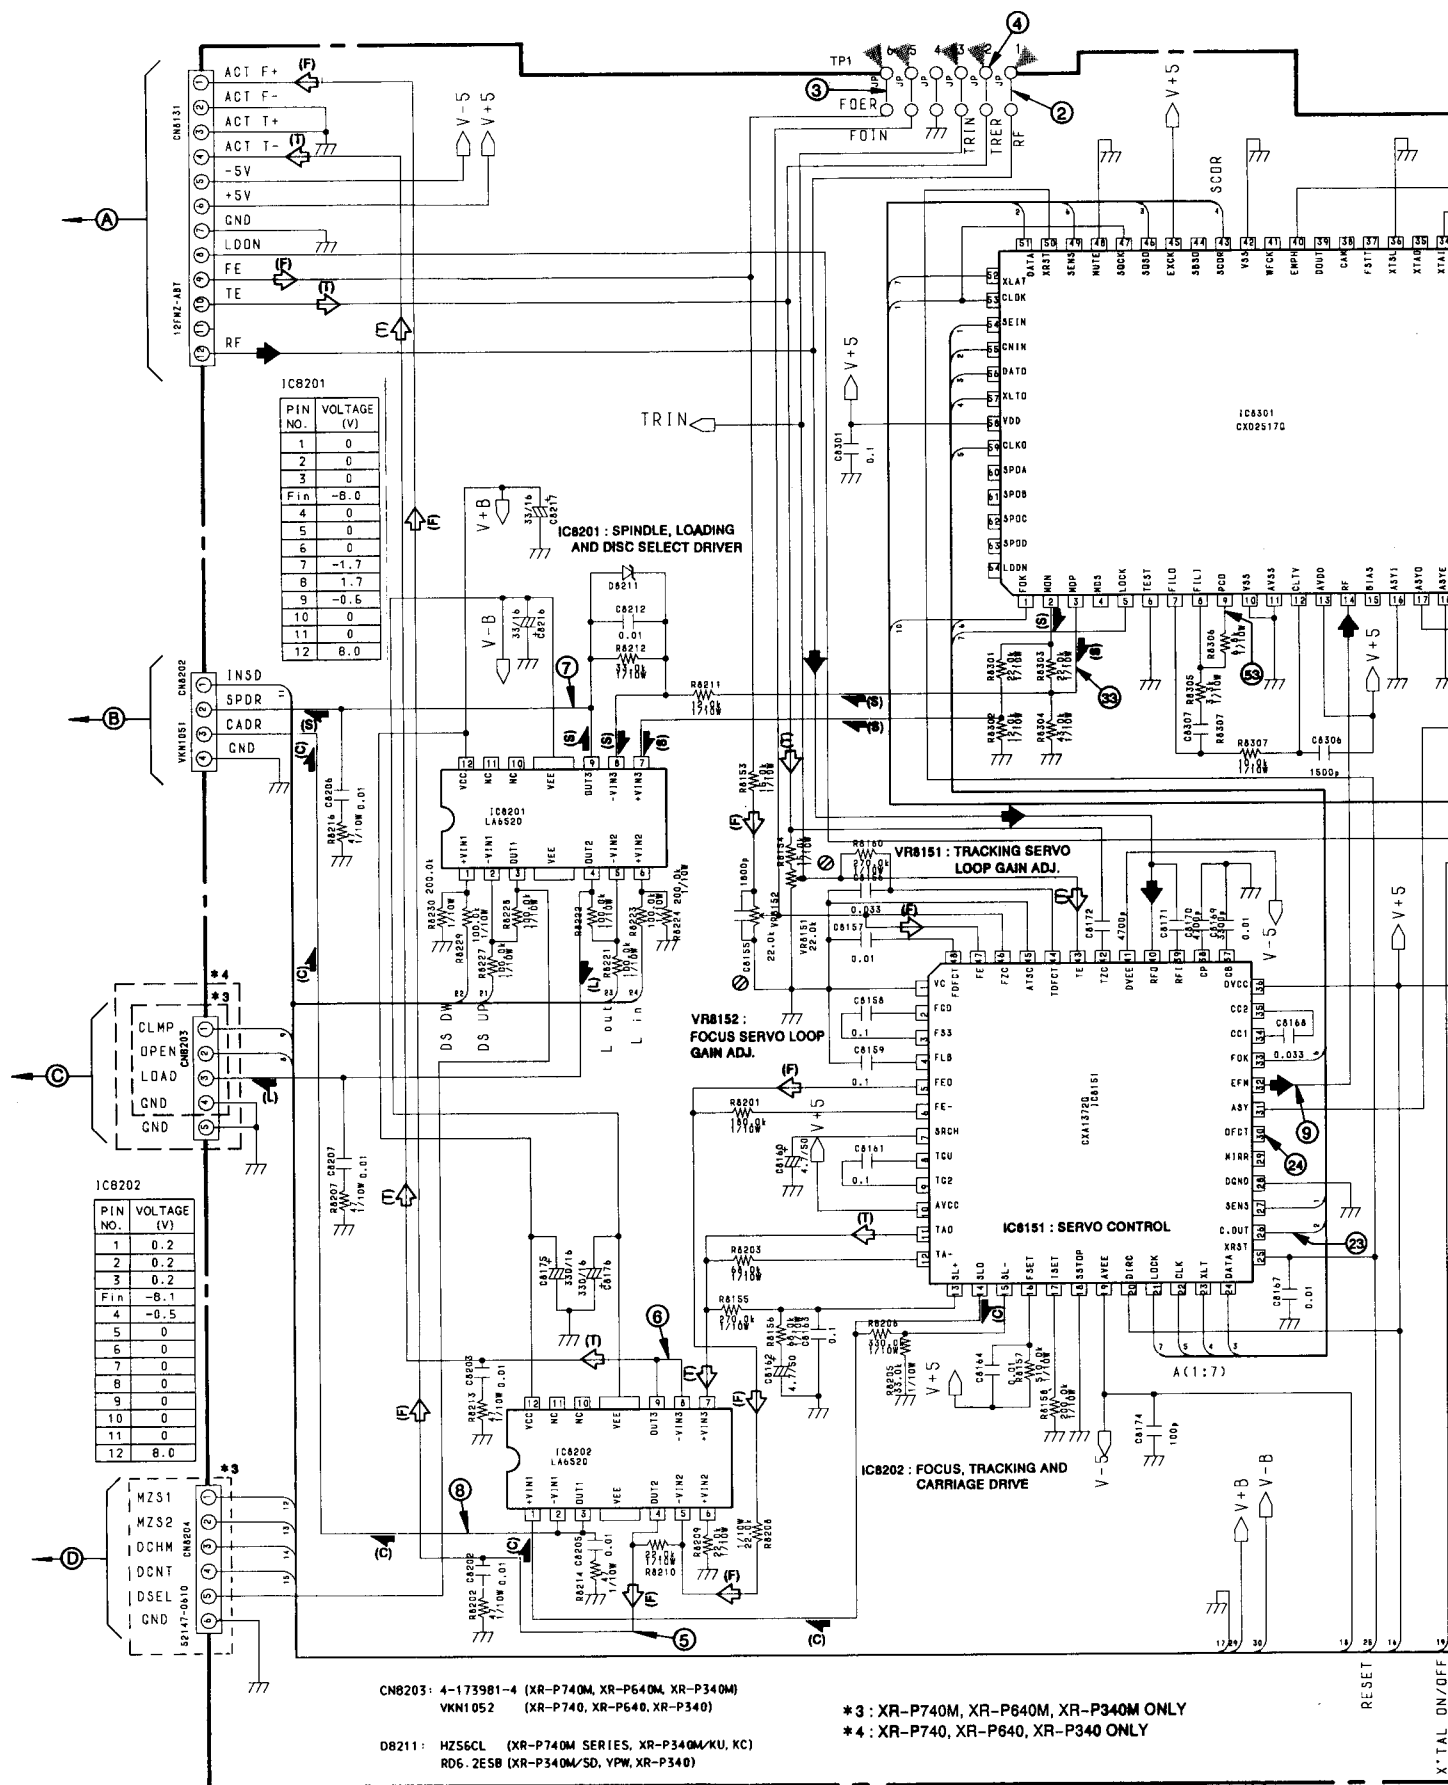

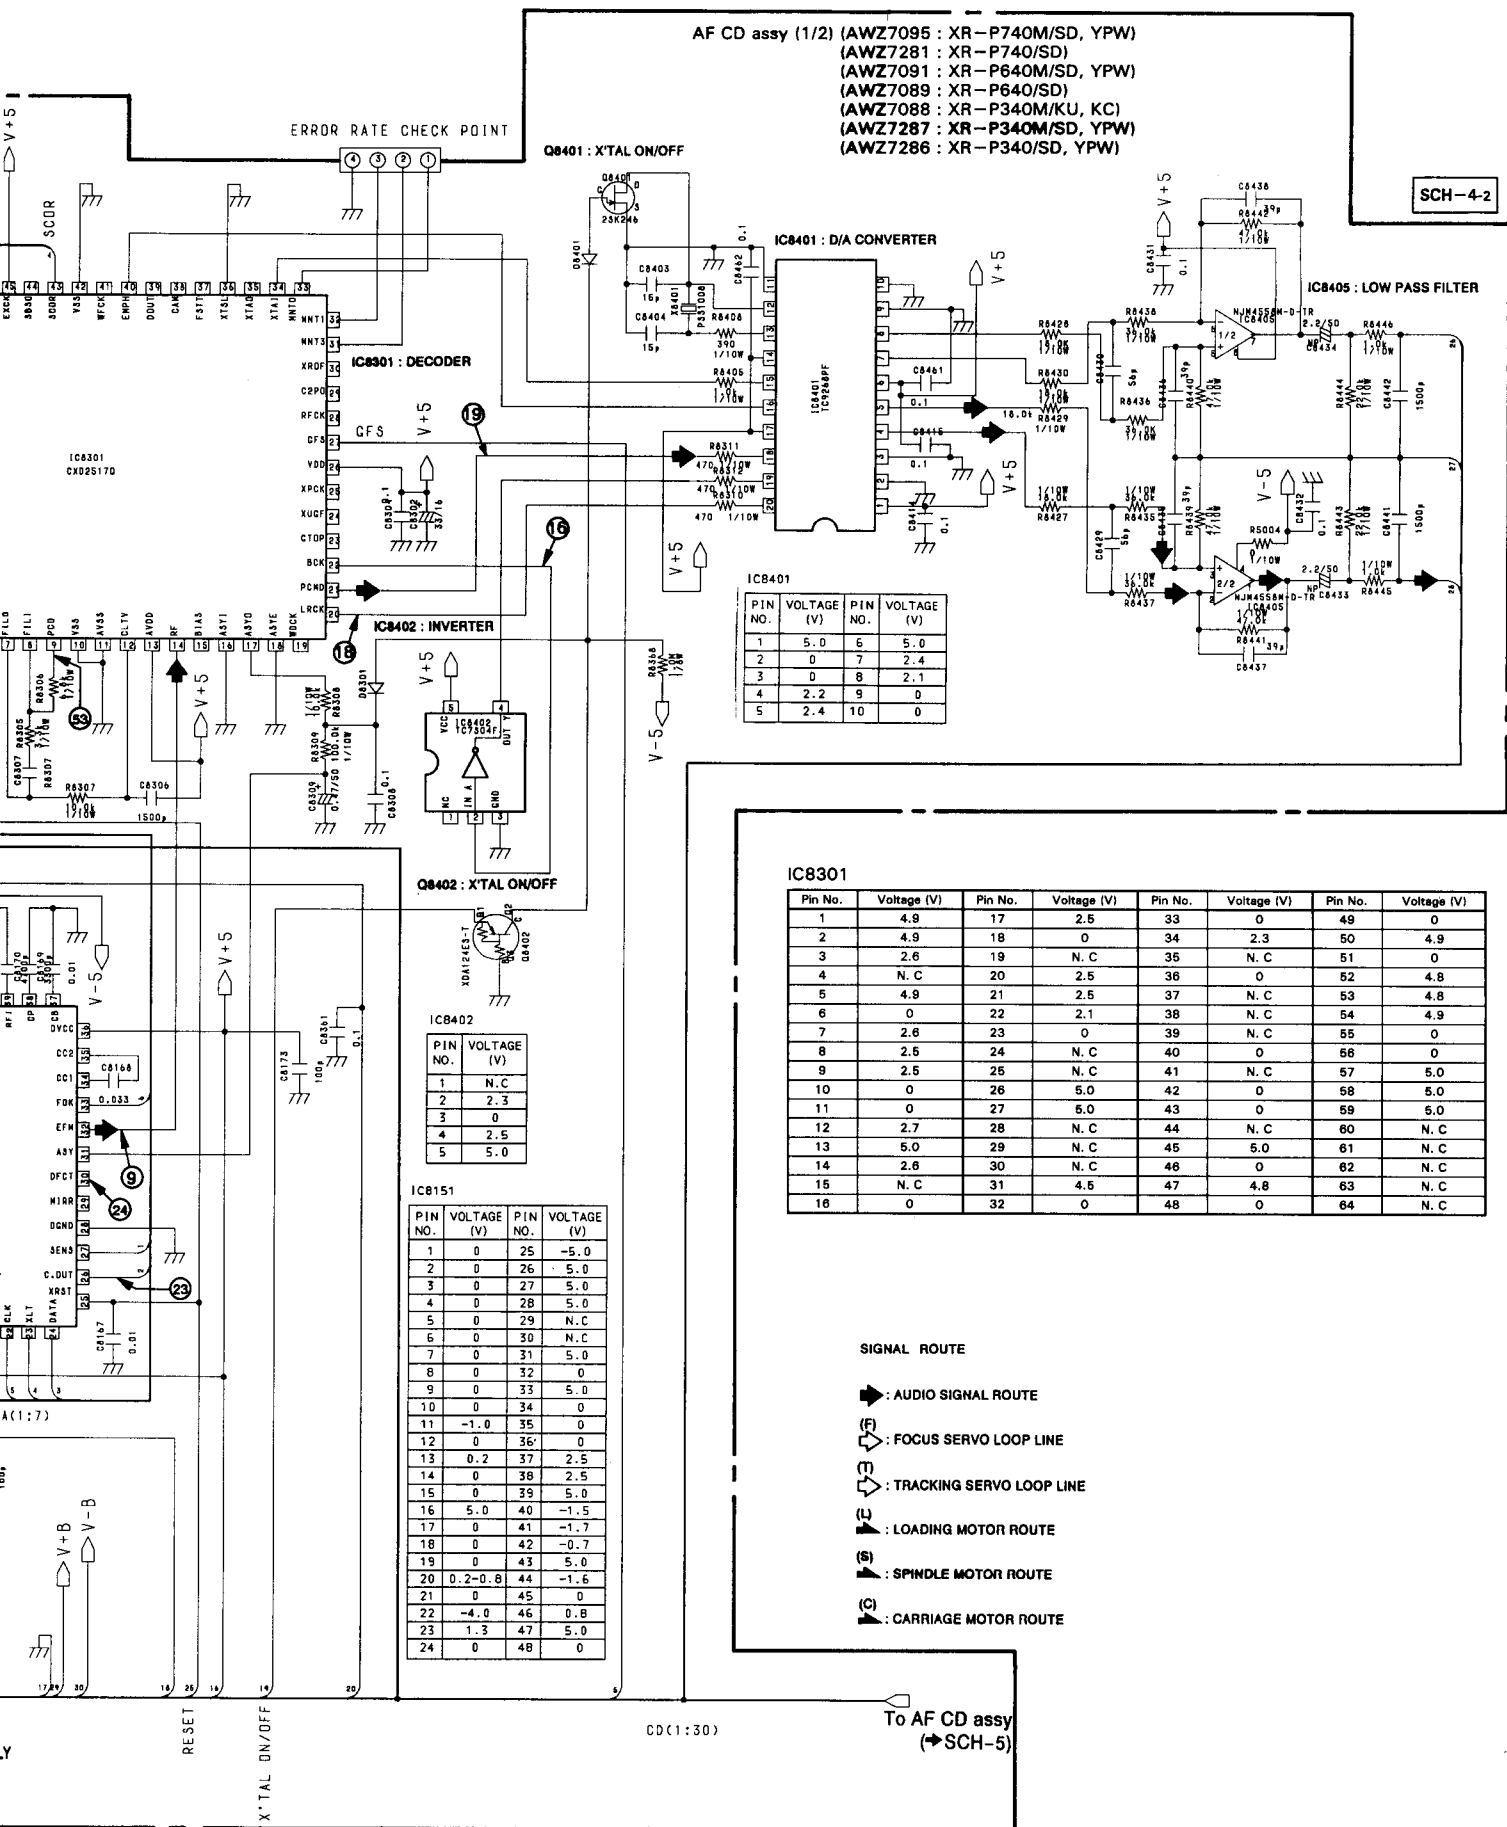



SCH-4-2

Waveforms

Note: The encircled numbers denote measuring point in the schematic diagram.

- *1 50T-JUMP: After switching to the pause mode, press the manual search key.
 *2 FOCUS-IN: Press the key without loading a disc.

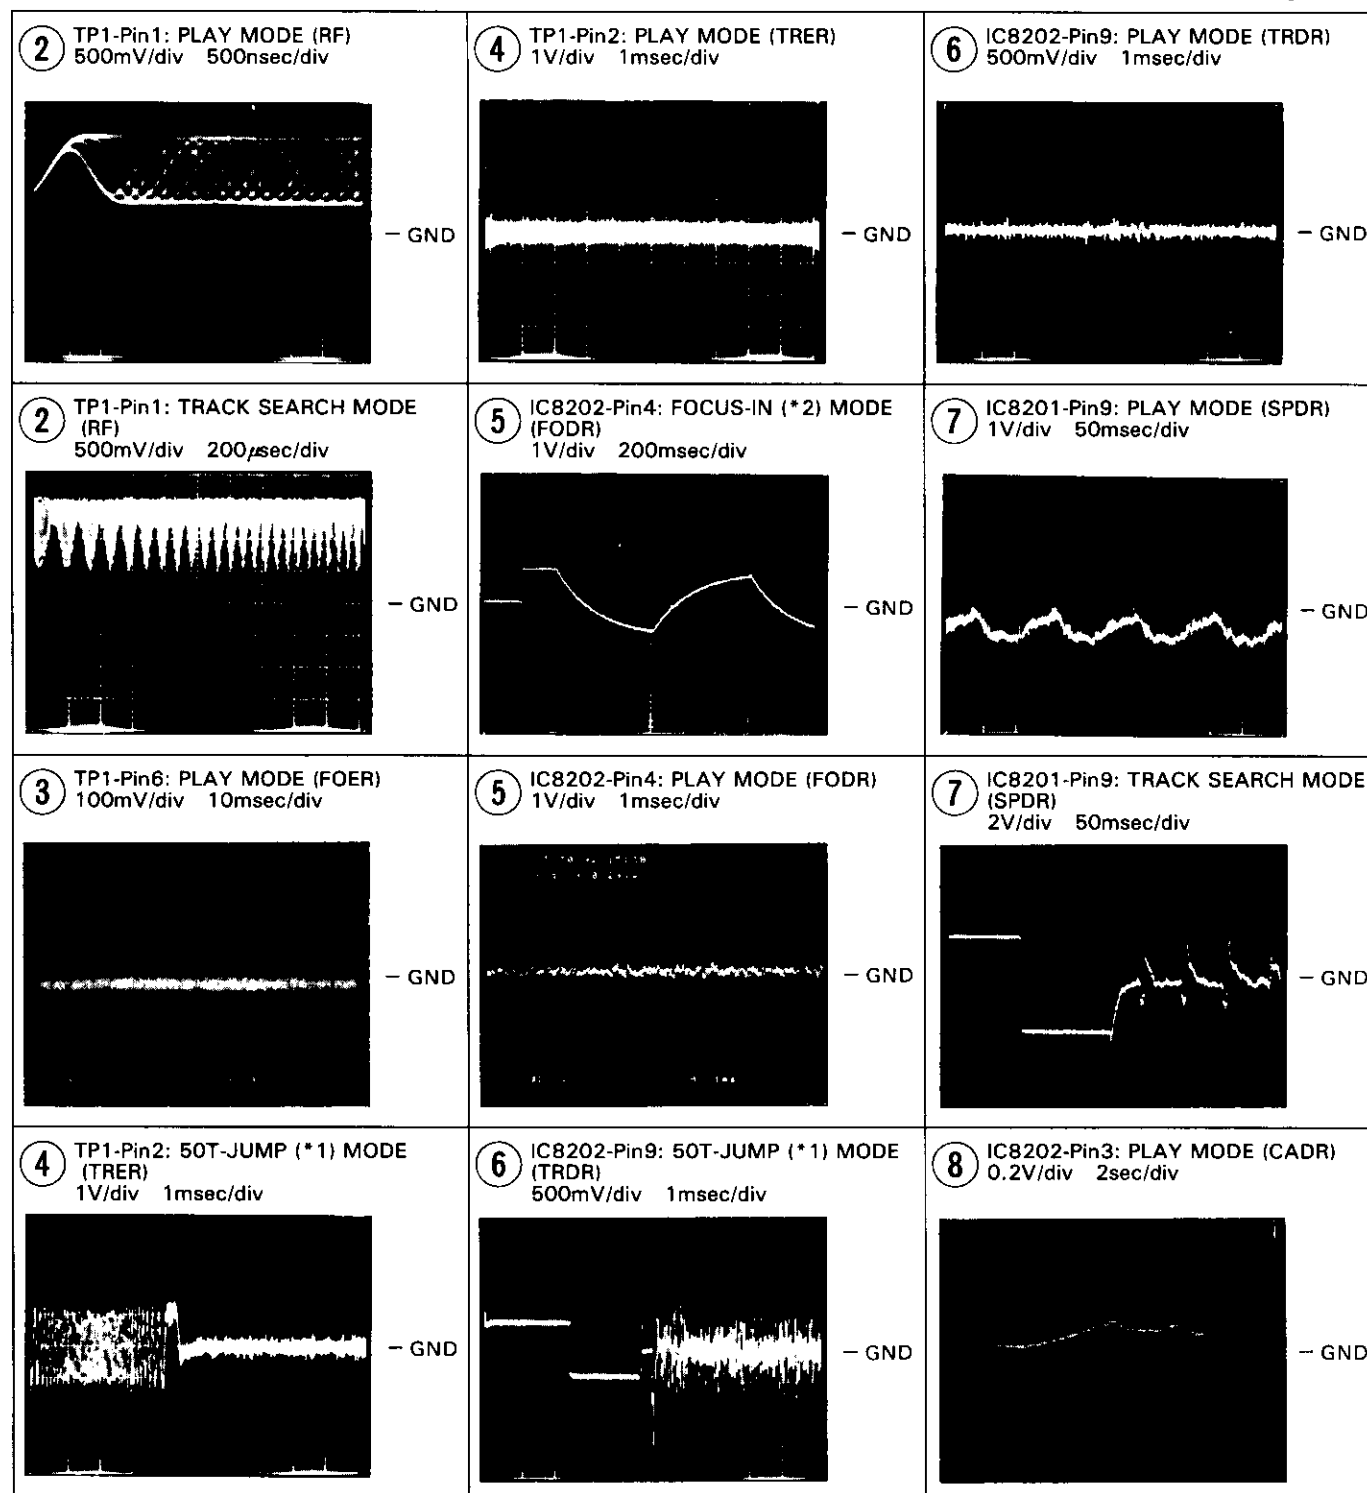

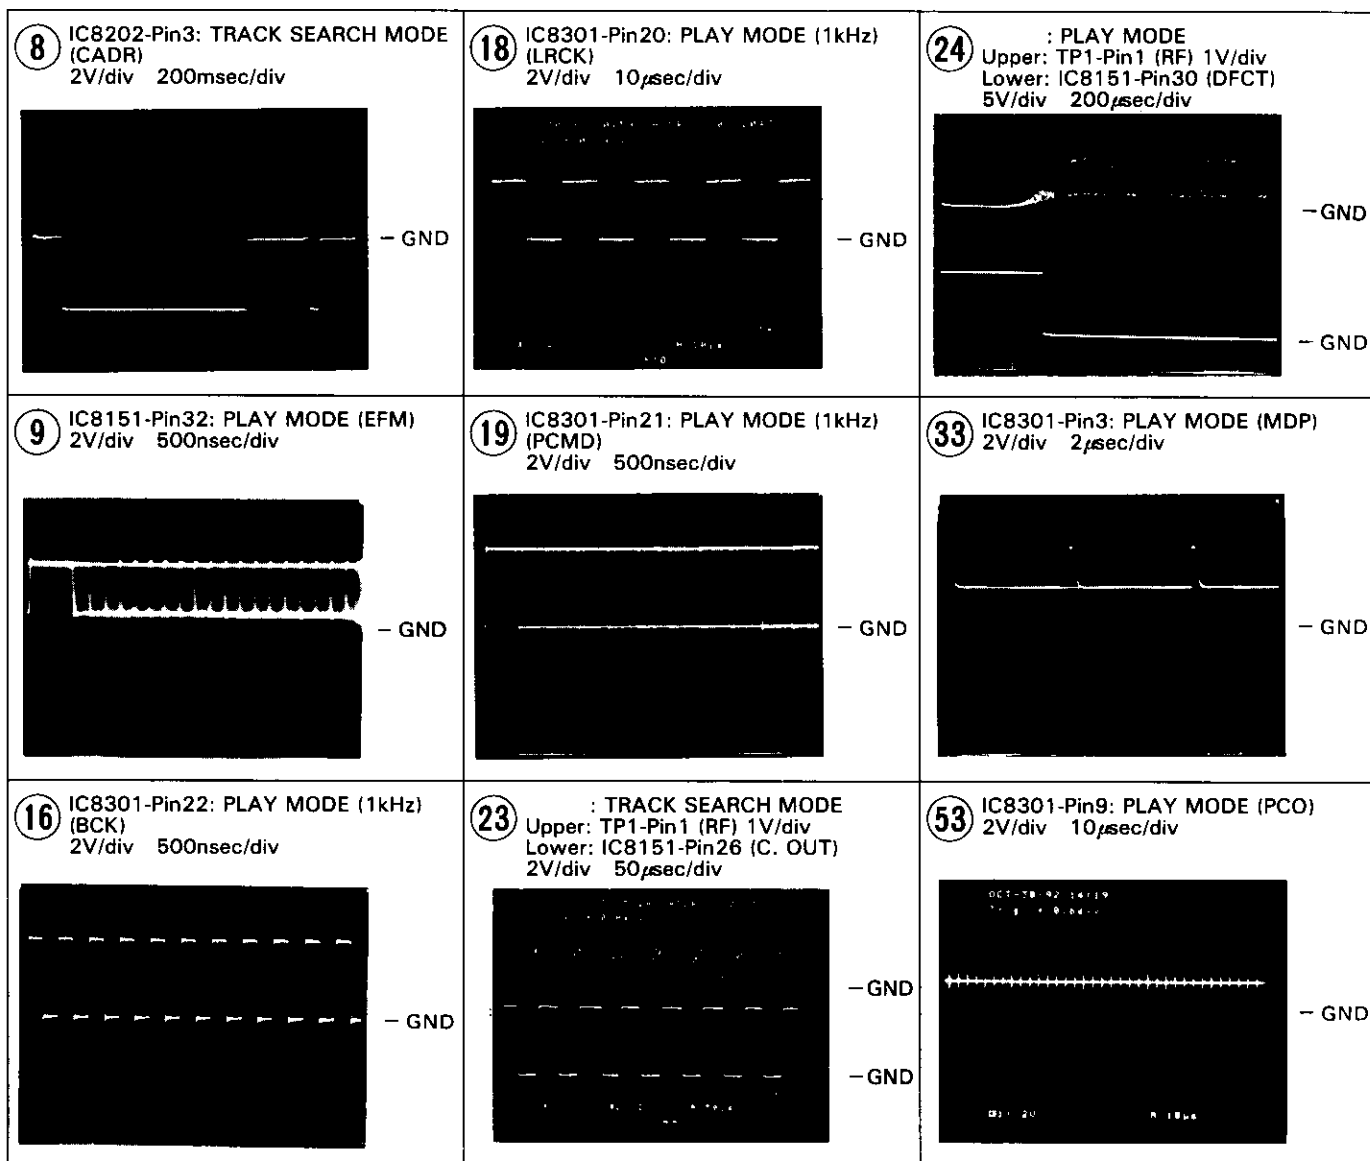


ICB405

IC8402 IC8301 IC840
IC8201

VR8151 VR8152

AWK

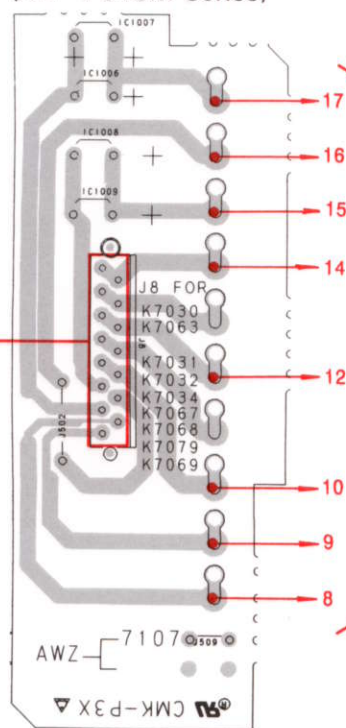

To POWER TRANSFORMER

To PICK UP assy CN102

To POWER TRANSFORMER 1

TRANS PRIMARY assy

ATTENTION : POUR LES
PRECAUTIONS CONTINU-
ELLES CONTRE L'INCE-
NDIE, LES FUSIBLES
A REMPLACER DOIVENT
ETRE LES MEMES TYPES
ET VALEURS NOMINALES
UNIQUEMENT.

KU, KC TYPES ONLY

SD TYPE ONLY

EXCEPT SD

EXCEPT YPW

CAUTION :
FOR CONTINUED
PROTECTION AGAINST
FIRE HAZARD,
REPLACEMENT FUSES
SHOULD BE OF THE
SAME TYPE AND
RATINGS ONLY.

1101	2.5A 125V
------	-----------

H101

A diagram showing a pulley system. A red laser beam is directed at a pulley on the right, which is part of a larger assembly. The beam is labeled 'Laser' and 'Red'.

1102

NO TYPE ONLY

11H E11 2 1103

102

100

OR BOARD assy

ON BOARD assy

DISC (M)

SELECT MOTOR



CN502

DARD assv

5602

H-2641347

— —

2

MOTOR BOARD assy

SELECT BOARD assy

LOADING BOARD assy

XR-P740M, XR-P640M, XR-P340M ONLY

Q1040 Q1041Q1403
IC2203

WK

[illegible]


* 2「


ANP 7005-D

KU, KC TYPES
ONLY
(Jumper)

PATTERN CU

MECHANISM BOARD assy

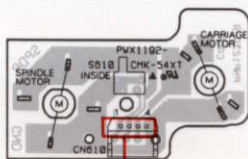

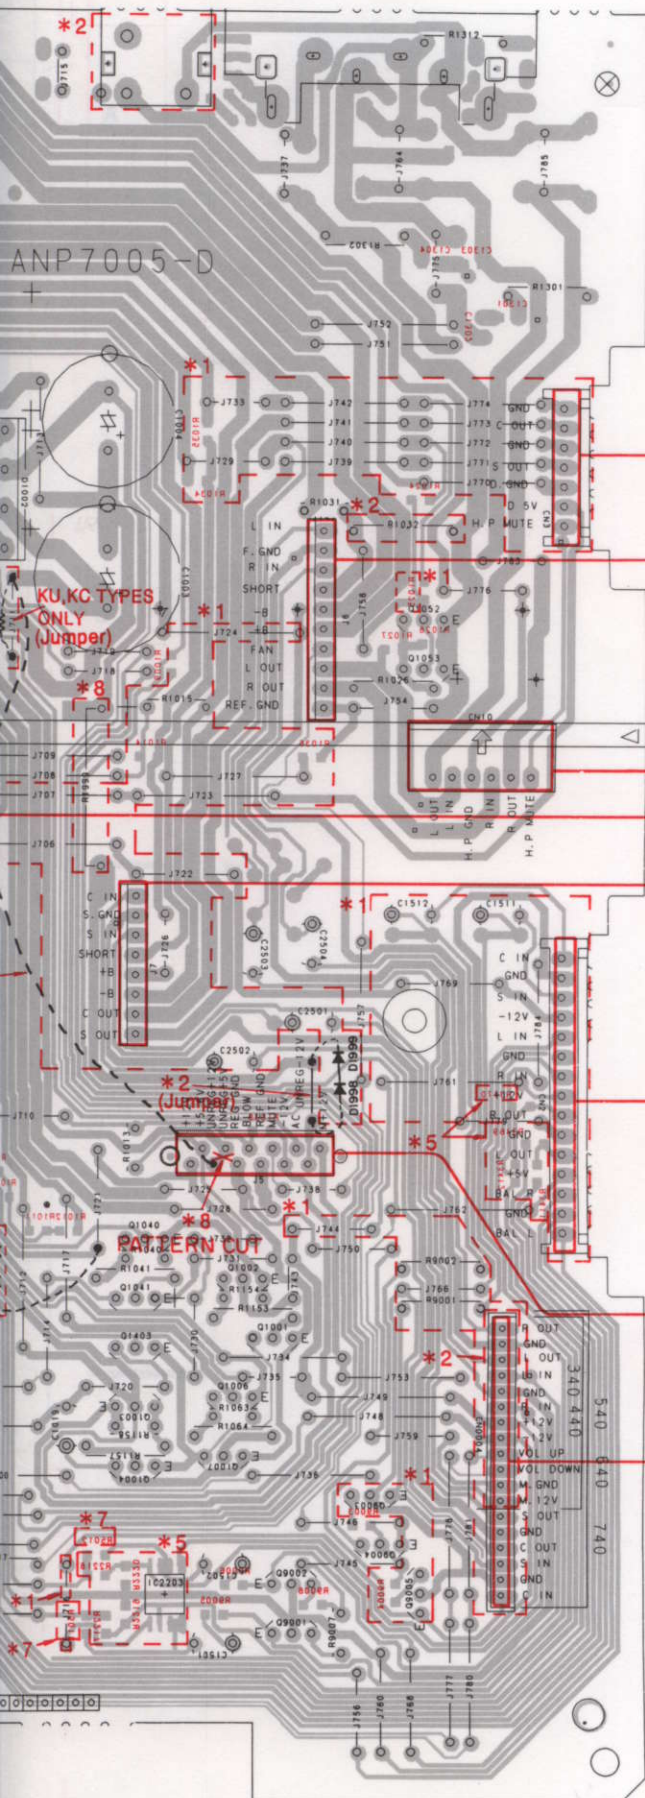

- *1 : XR-P740M, XR-P740, XR-P640M, XR-P640 ONLY
- *2 : XR-P340M, XR-P340 ONLY
- *3 : XR-P740M, XR-P640M, XR-P340M ONLY
- *4 : XR-P740, XR-P640, XR-P340 ONLY
- *5 : XR-P740M, XR-P740 ONLY
- *6 : XR-P340M/SD, YPW, XR-P340 ONLY
- *7 : EXCEPT XR-P740M, XR-P740
- *8 : SD, YPW TYPES ONLY
- *9 : EXCEPT XR-P340M/SD, YPW
- *10 : XR-P740M SERIES, XR-P340M /KU, KC ONLY

XR-P740M Series indicates models XR-P740M/SD, YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD.
XR-P340M Series indicates models XR-P340M/KU, KC, SD, YPW, XR-P340/SD and YPW.

To PROLOGIC assy CN1003
(XR-P740M, XR-P740)
To DOL SURR assy CN1003
(XR-P640M, XR-P640)

To FRONT assy FOR 100W
(XR-P740M SERIES)
To FRONT assy FOR 50W
(XR-P340M SERIES)
CN7502


To FM/AM TUNER MODULE CN6201

To REAR, PWR, PRTEC assy CN7102


To PROLOGIC assy CN1002
(XR-P740M, XR-P740)
To DOL SURR assy CN1002
(XR-P640M, XR-P640)

To REAR, PWR, PRTEC assy
(XR-P740M SERIES)
To PWR, PRTEC assy
(XR-P340M SERIES)
CN7101

H. P assy

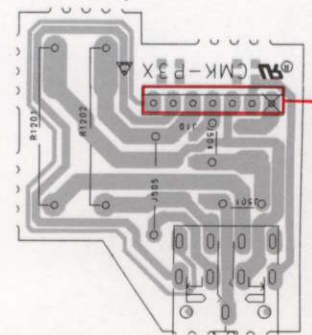


VR assy

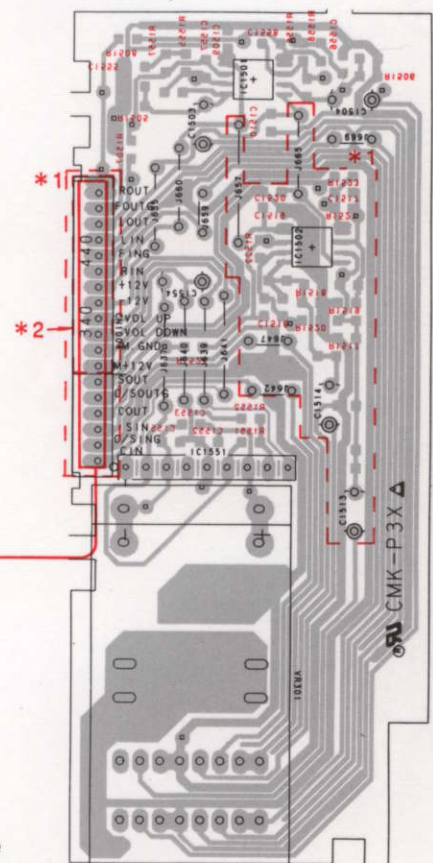


• This diagram is viewed from the mounted parts side.

H. P. 9226

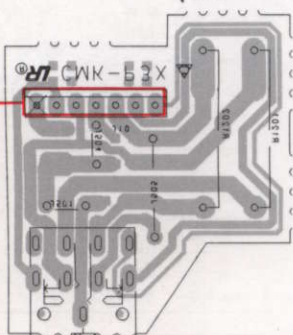



VR 222y

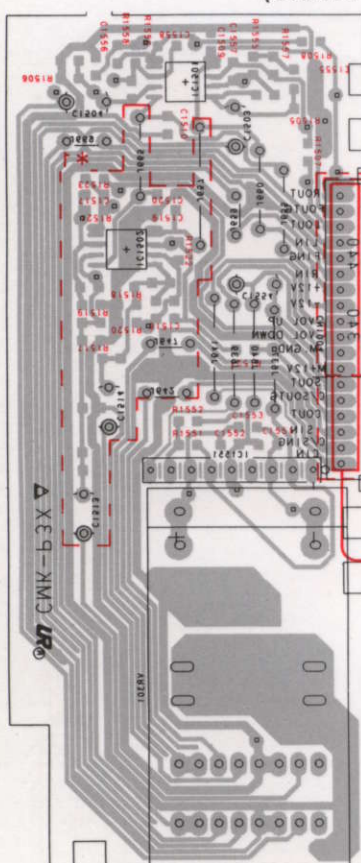

CN7101
(XR-P340M SERIES)
To PWR, PRTEC Assy
(XR-P740M SERIES)
To REAR, PWR, PRTEC Assy



- This diagram is viewed from the foil side.

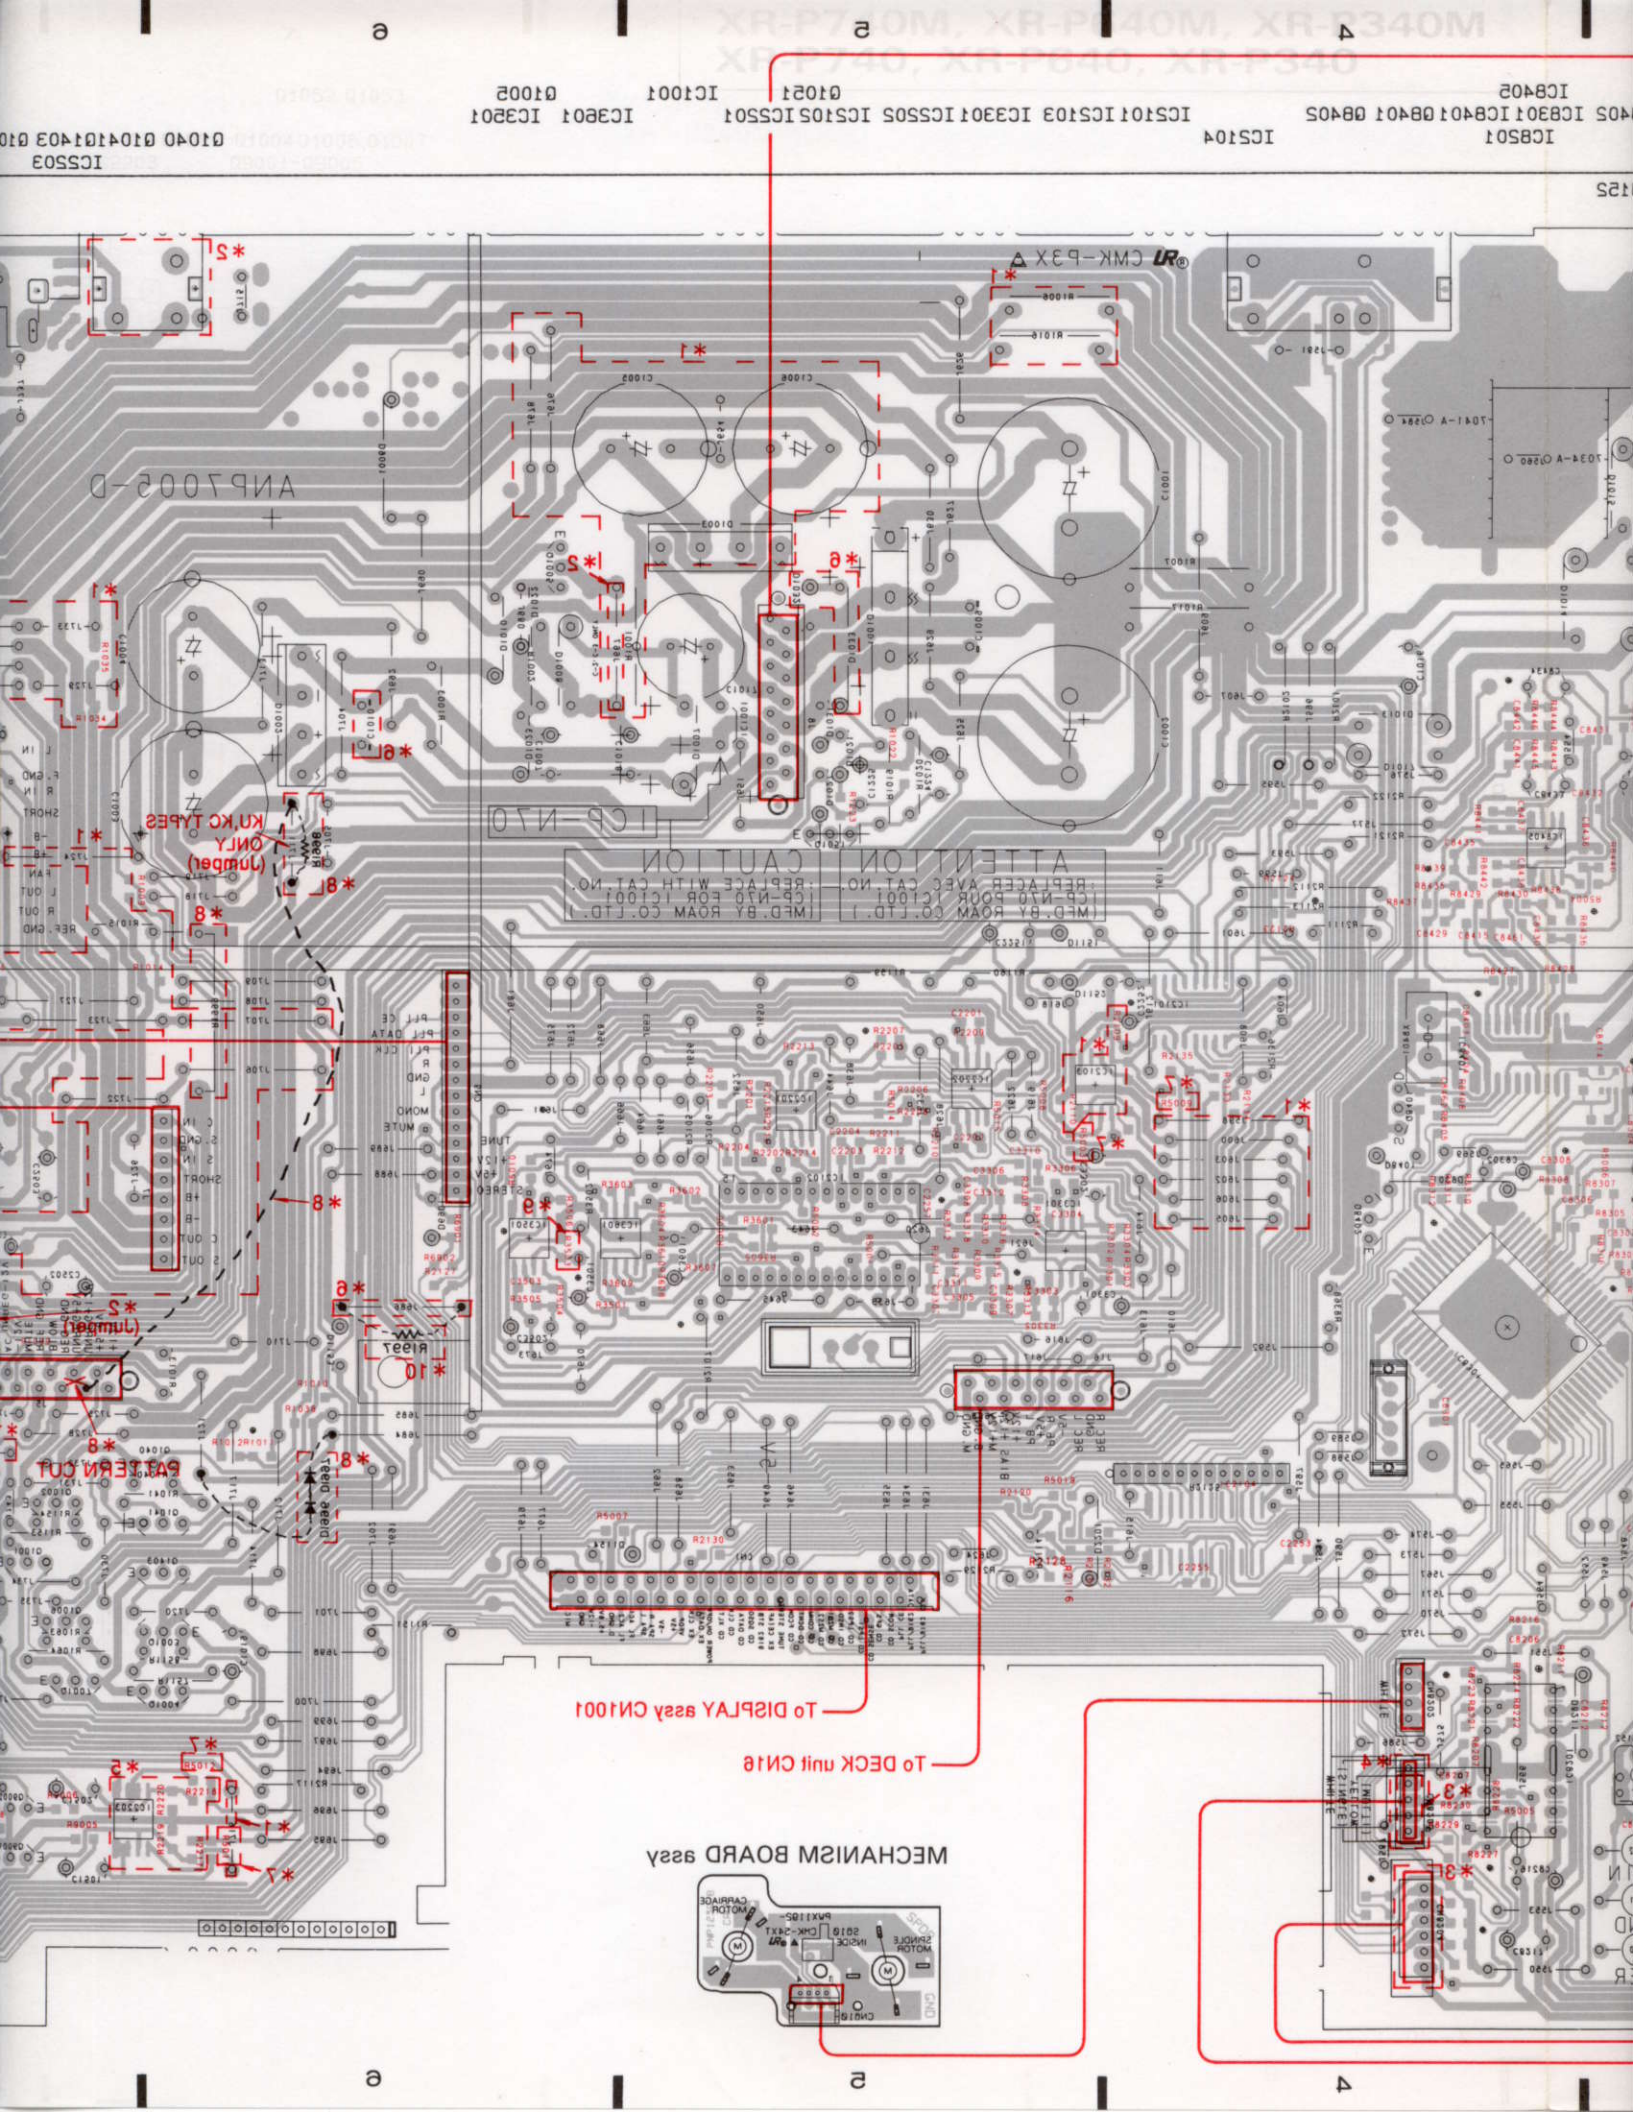

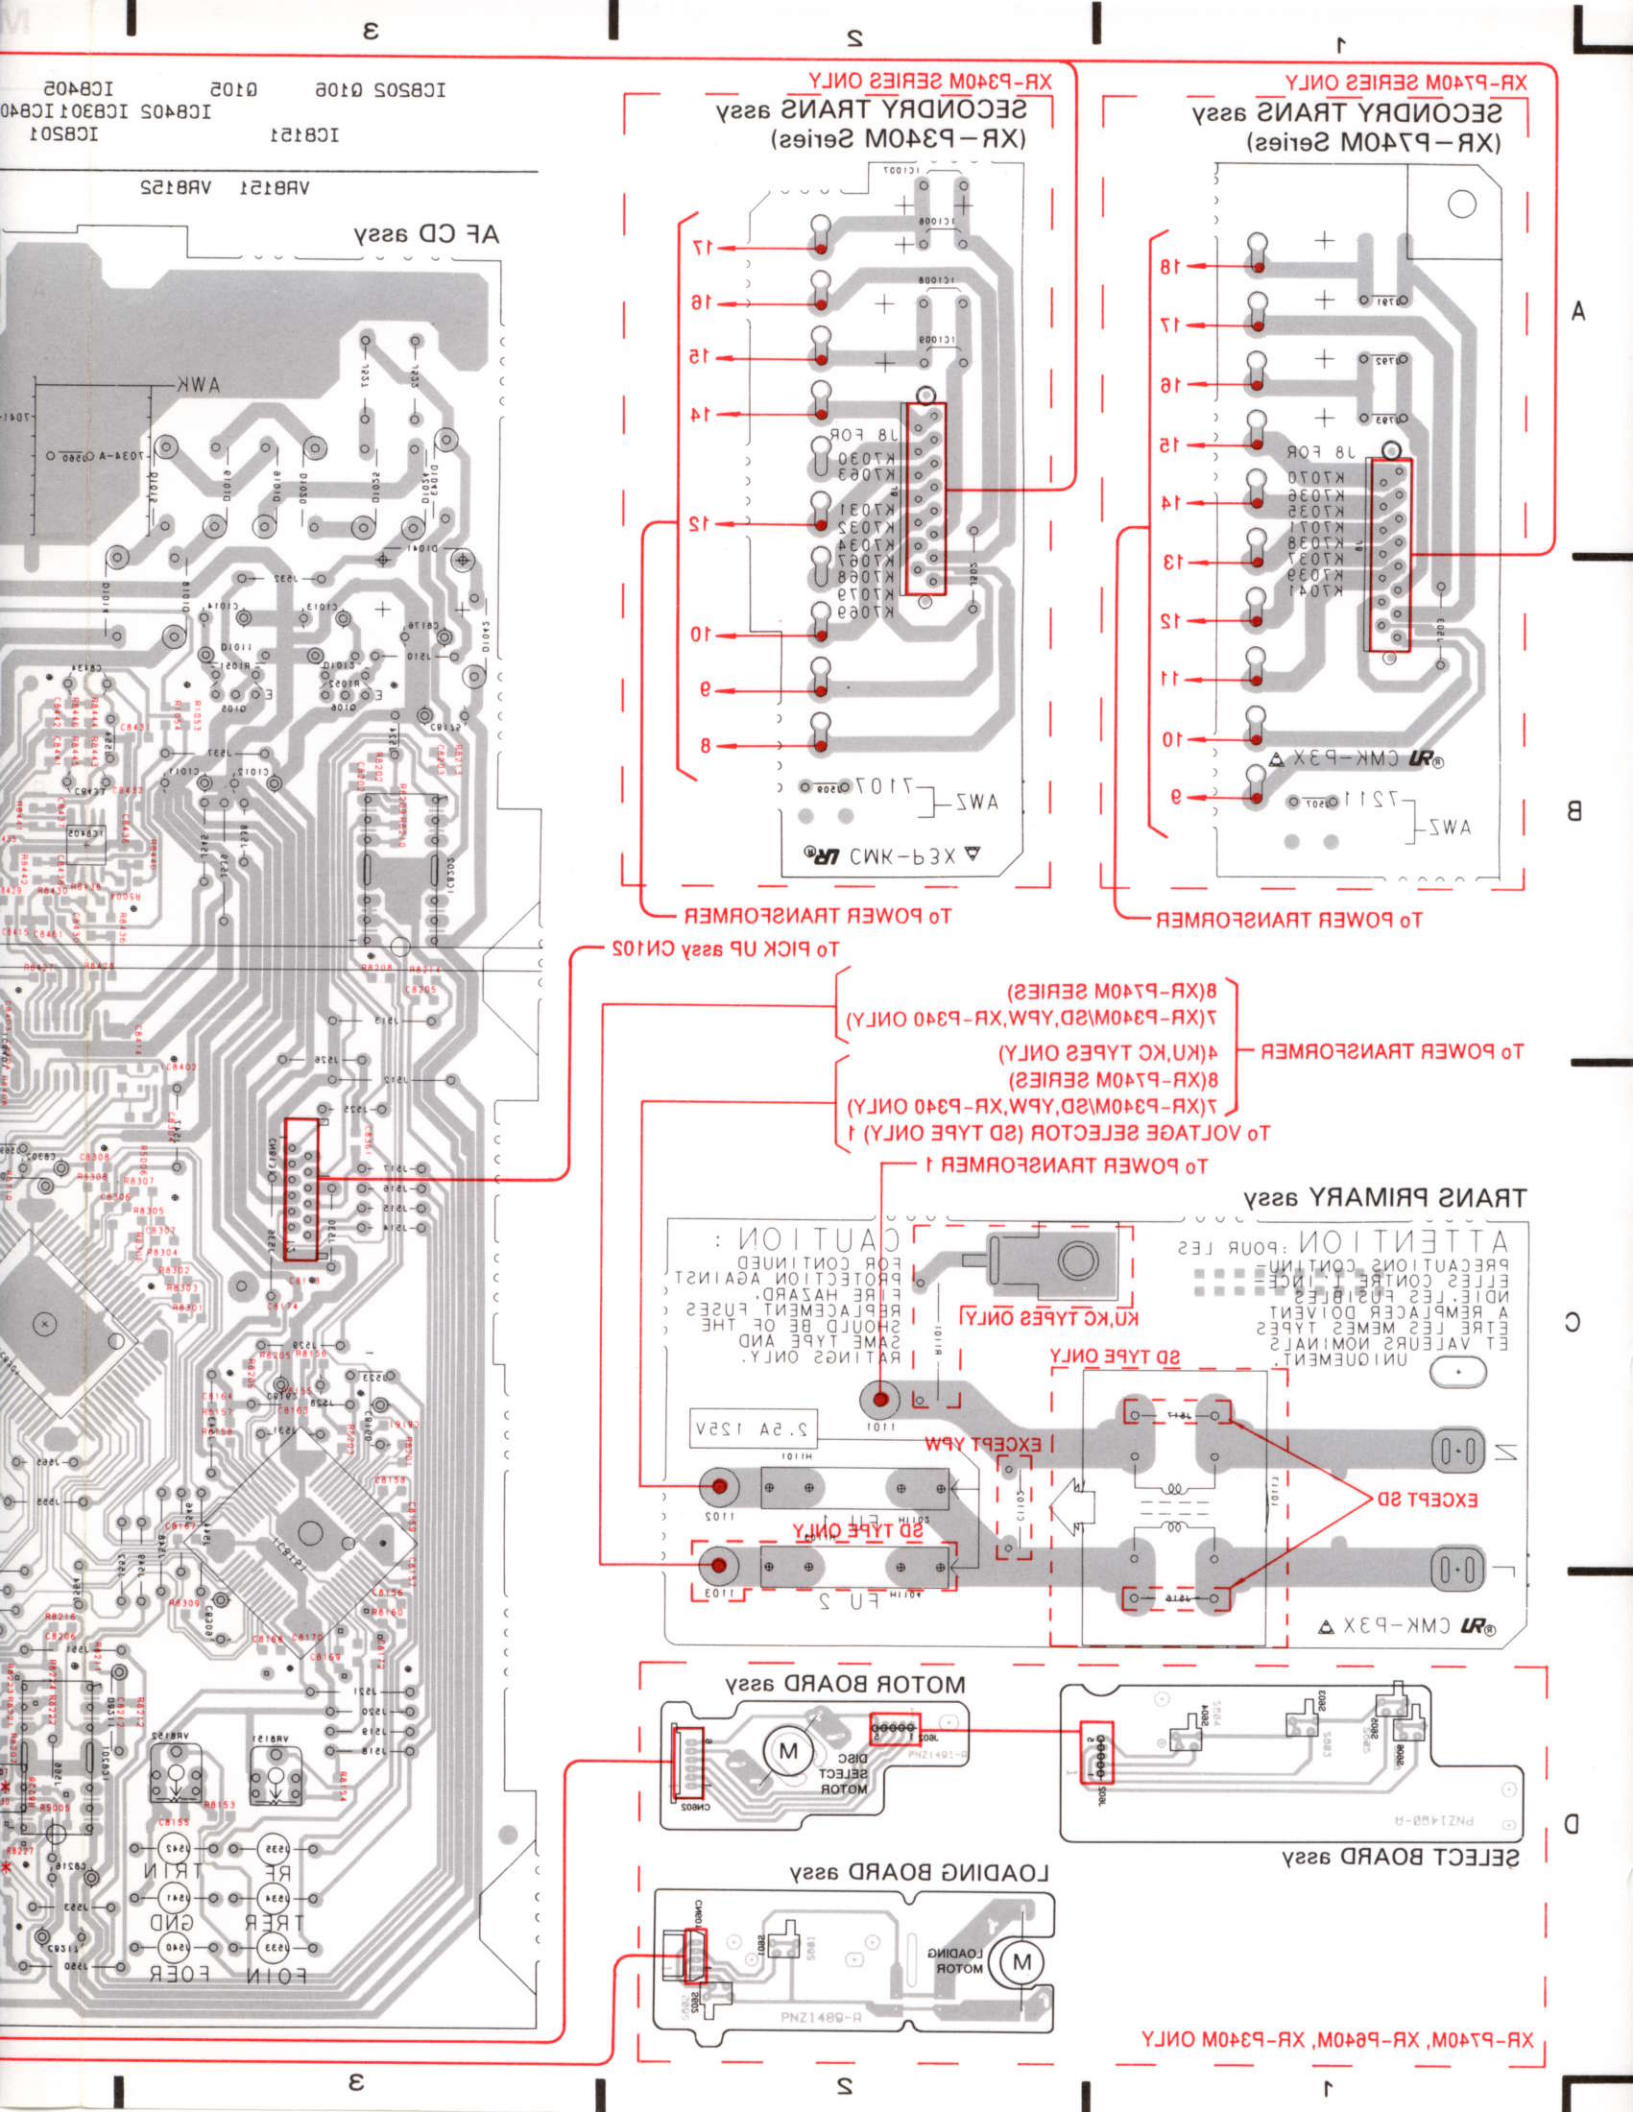

XR-P340M Series ONLY
SECONDARY TRANS assy
(XR-P340M Series)

XR-P340M Series ONLY
SECONDARY TRANS assy
(XR-P340M Series)

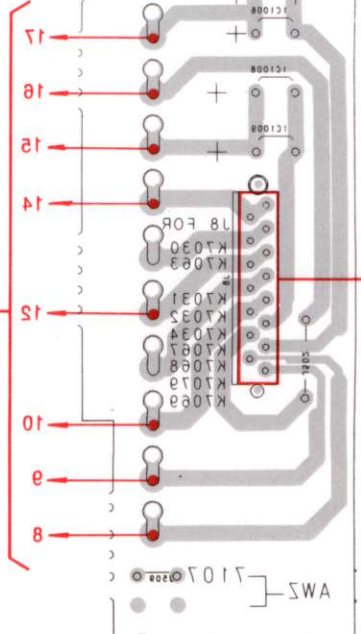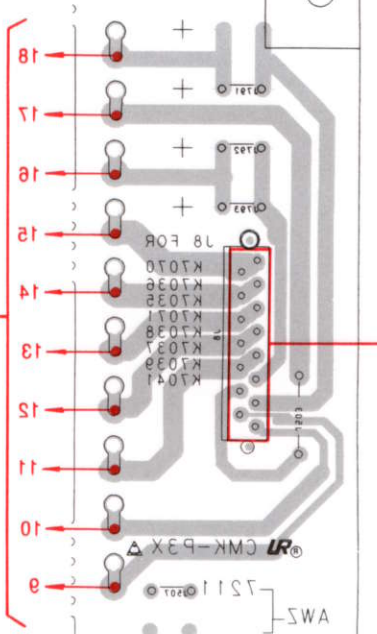


TO POWER TRANSFORMER

TO POWER TRANSFORMER

TO PICK UP assy CN105




TO POWER TRANSFORMER
TO VOLTAGE SELECTOR (SD TYPE ONLY)
1(XR-P340M/SD, YPW, XR-P340 ONLY)
8(XR-P340M Series)
4(KU, KC TYPES ONLY)
7(XR-P340M/SD, YPW, XR-P340 ONLY)
8(XR-P340M Series)

TRANS PRIMARY assy

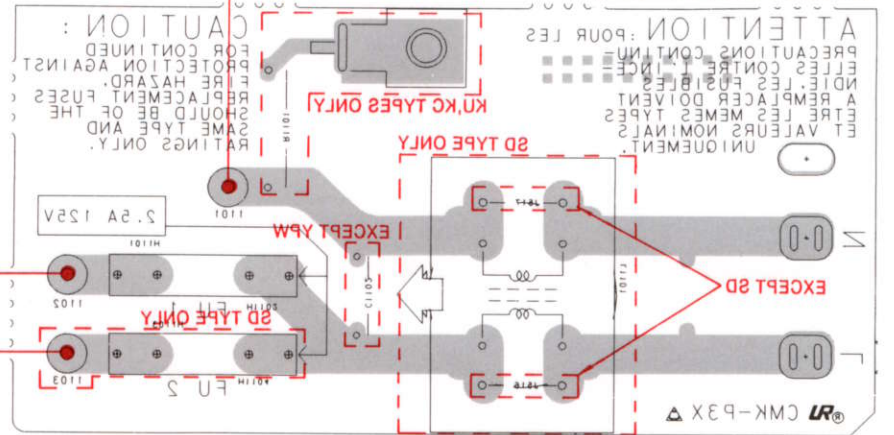

SELECT BOARD assy

LOADING BOARD assy

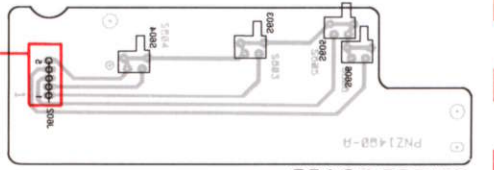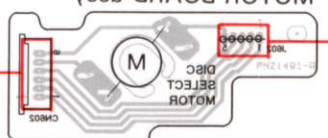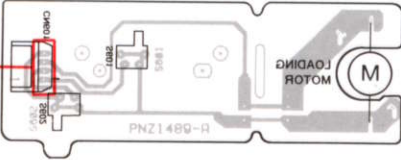


XR-P340M, XR-P340M, XR-P340M ONLY


To PROLOGIC assy CN1002 (→SCH-9)
(XR-P740M, XR-P740)
To DOL SURR assy CN1002 (→SCH-11)
(XR-P640M, XR-P640)

To PRO
(XR-
To DOL
(XR-


AF CD assy (2/2) (AWZ7095 : XR-P740M/SD, YPW)
(AWZ7281 : XR-P740/SD)
(AWZ7091 : XR-P640M/SD, YPW)
(AWZ7089 : XR-P640/SD)
(AWZ7088 : XR-P340M/KU, KC)
(AWZ7287 : XR-P340M/SD, YPW)
(AWZ7286 : XR-P340/SD, YPW)

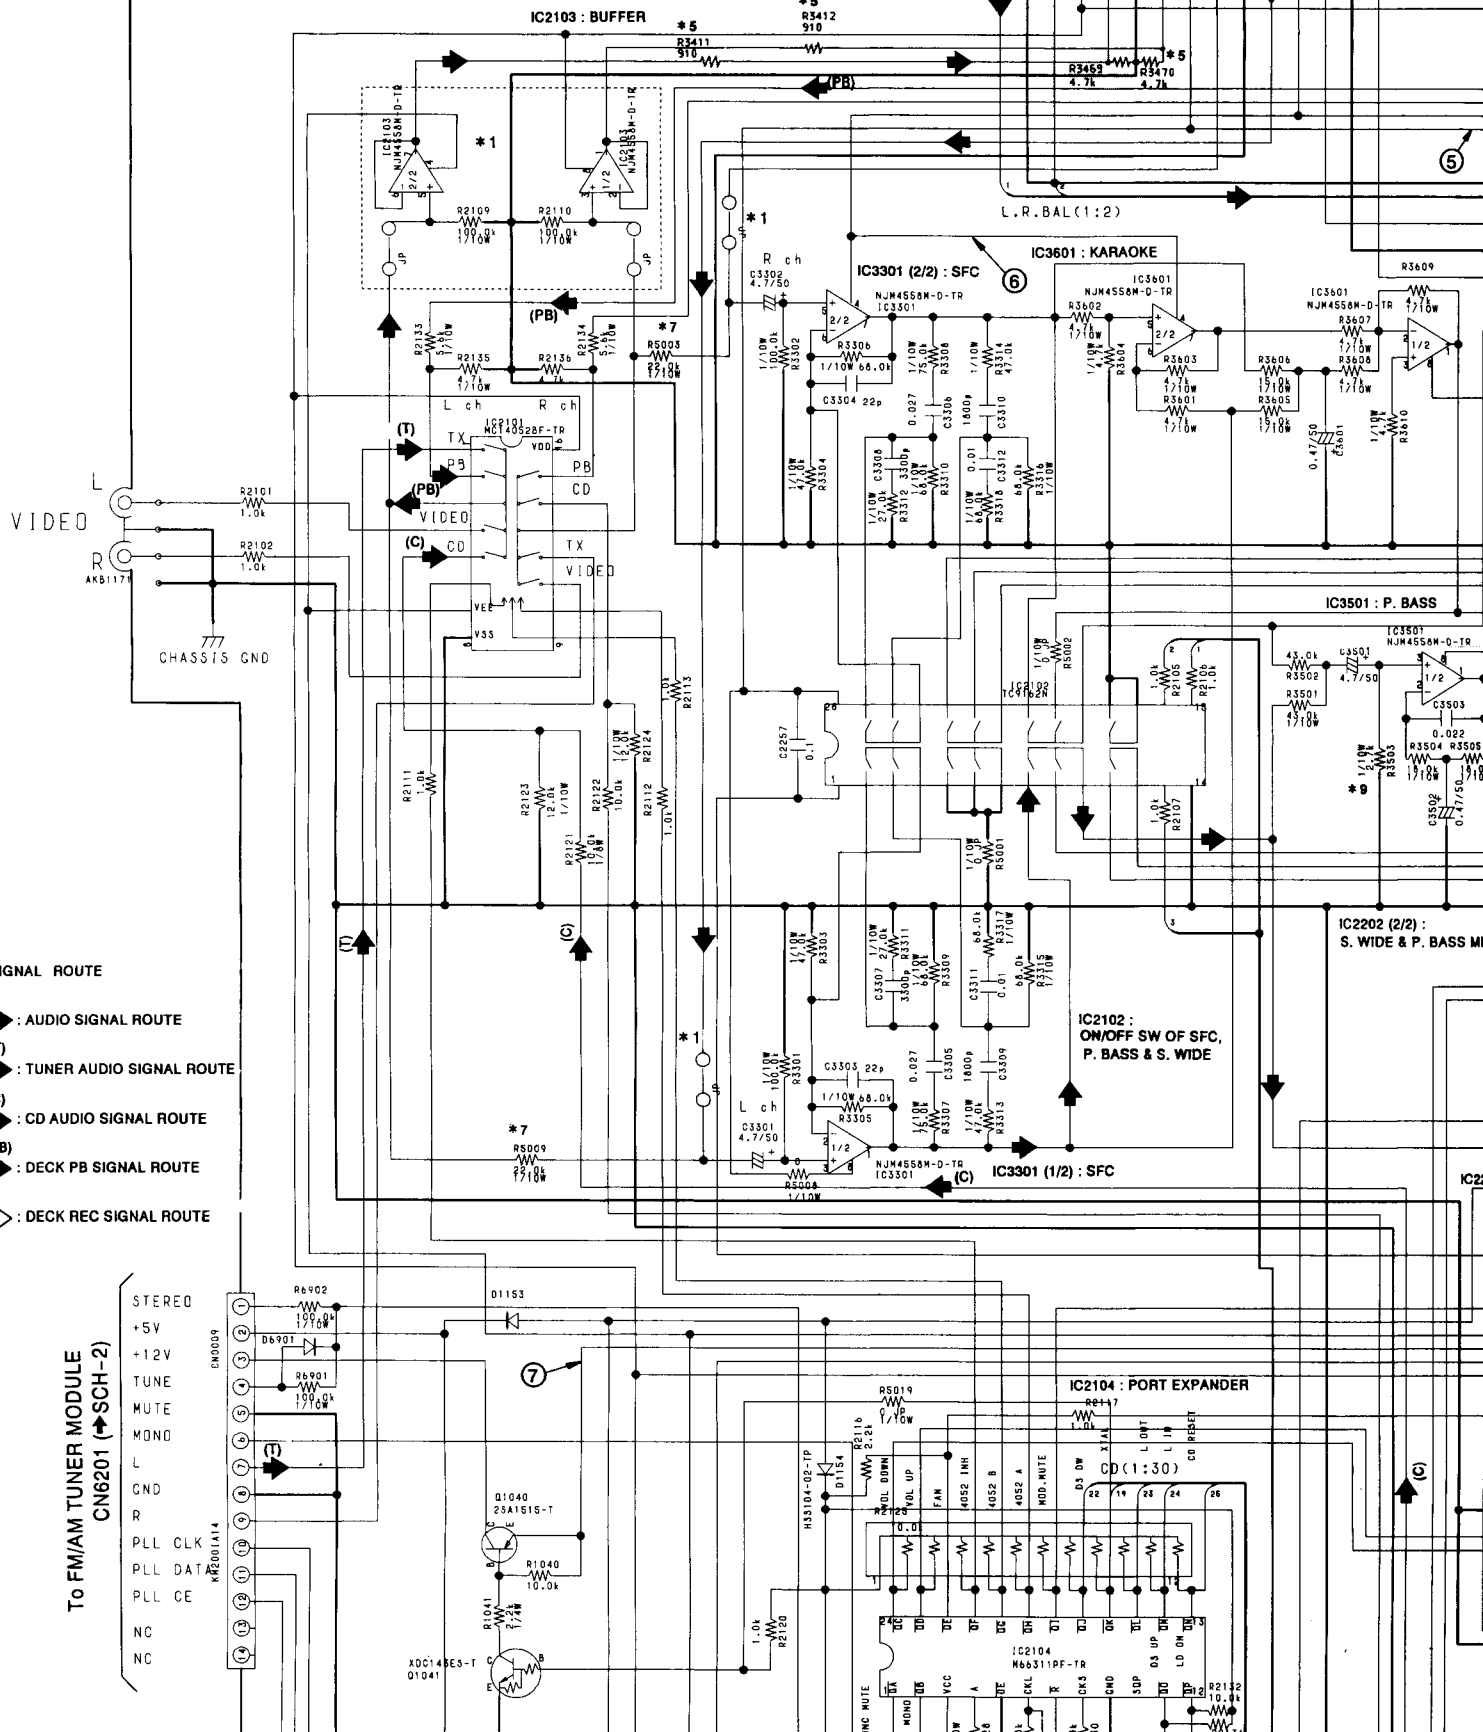

To DECK unit CN16 (→SCH-3)

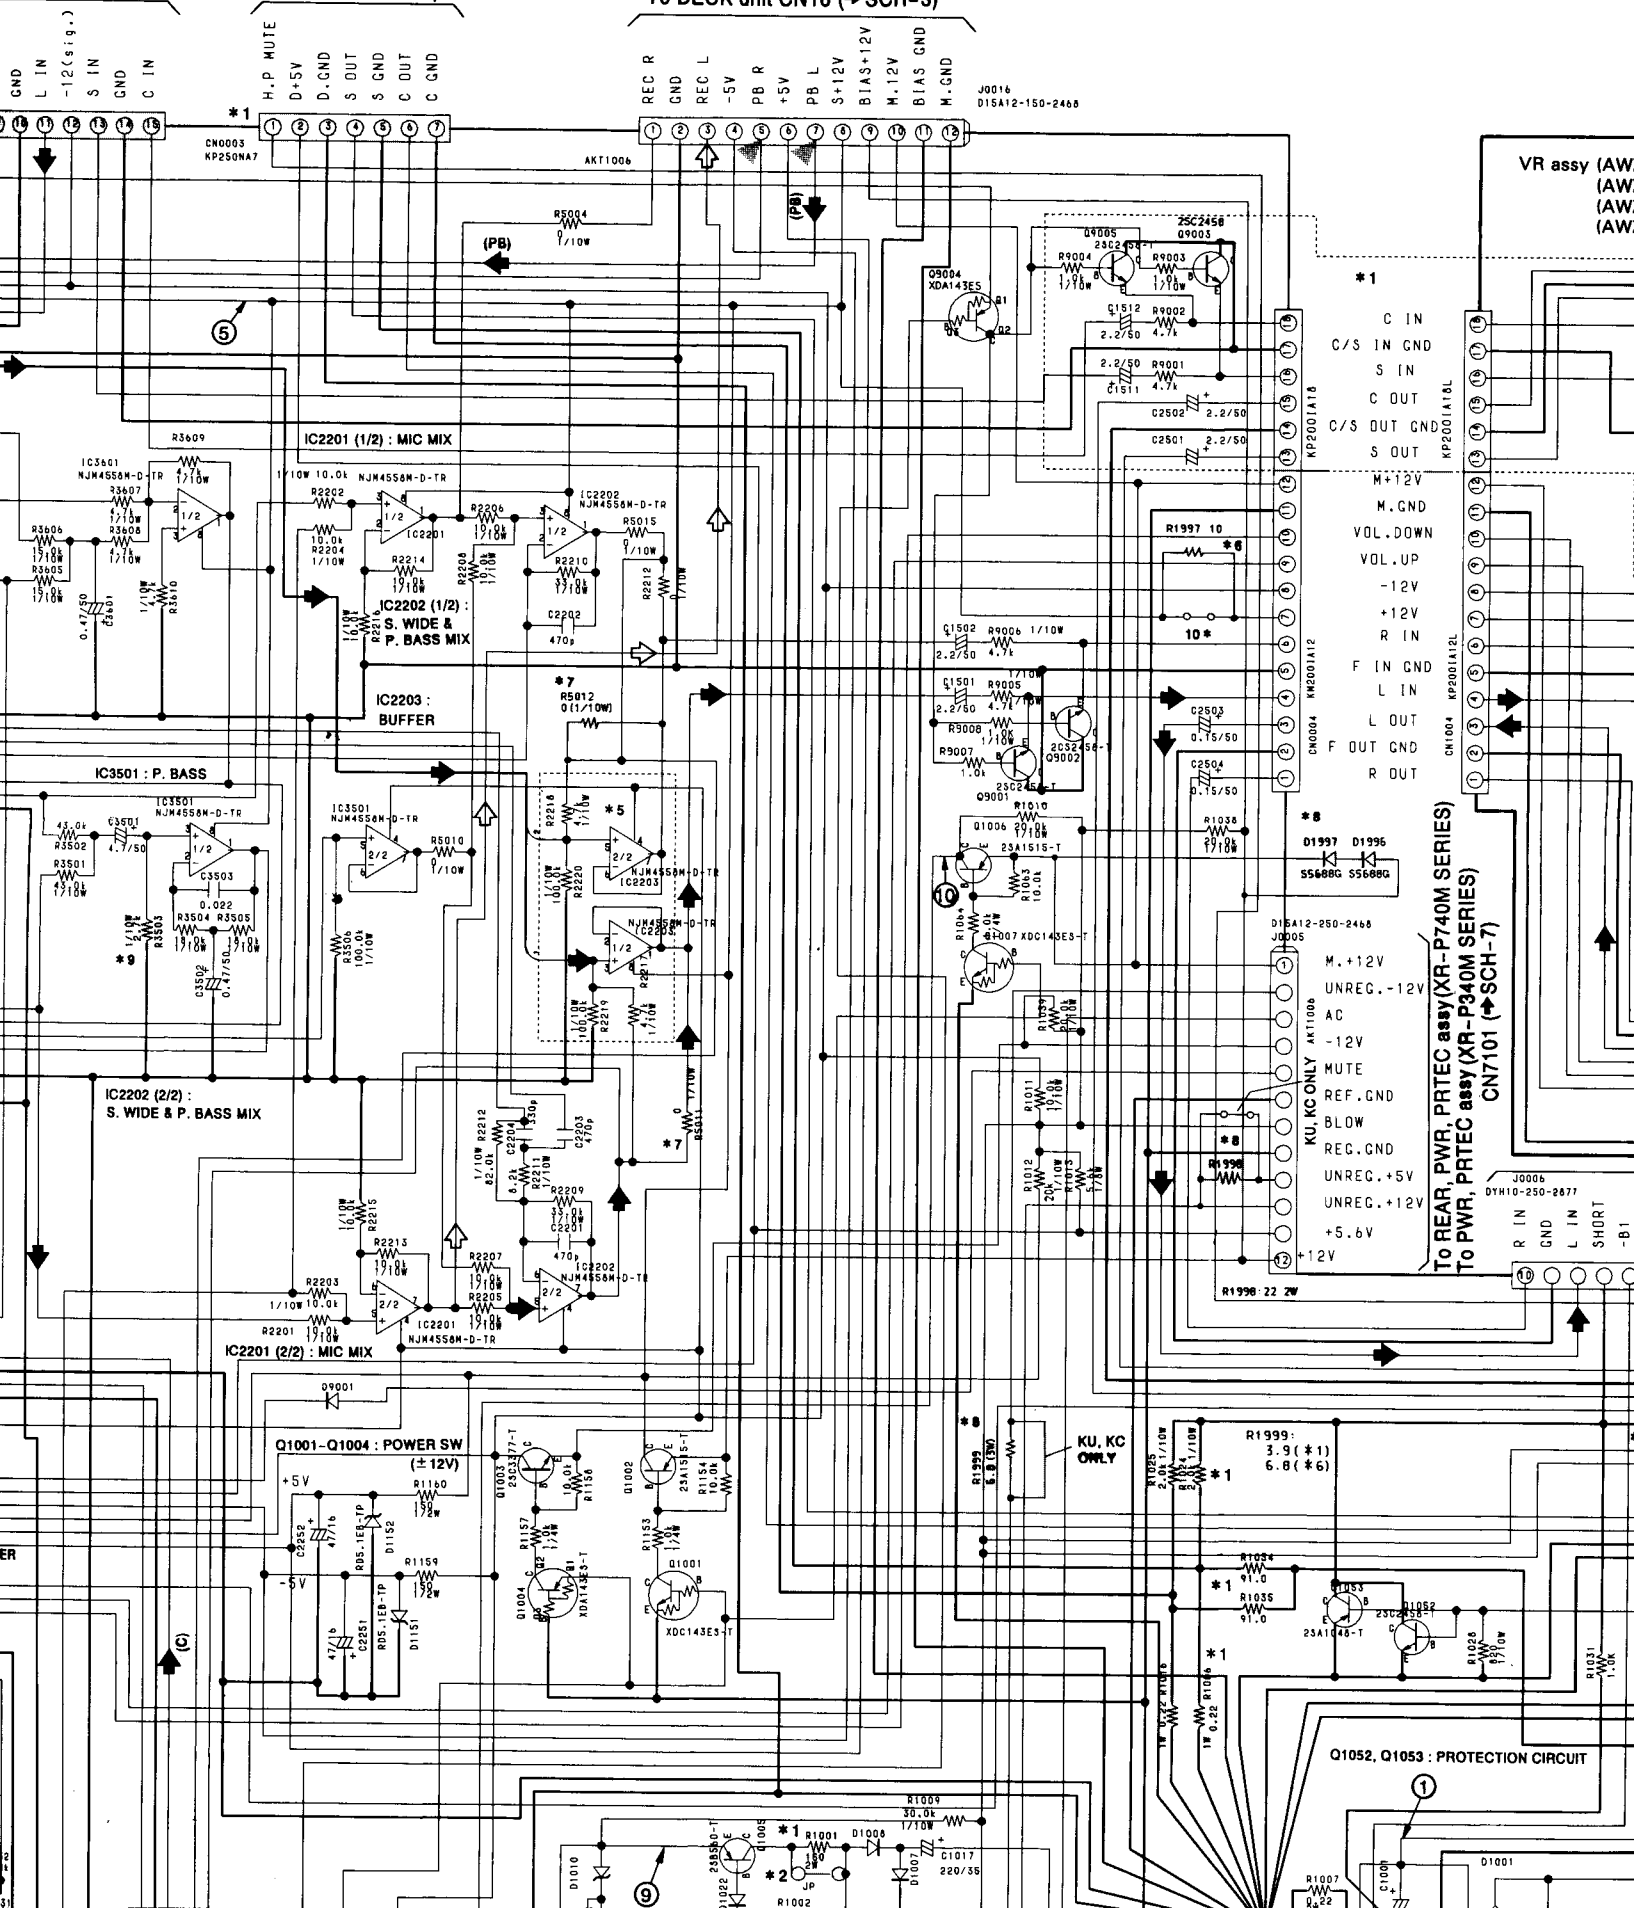


SCH-5

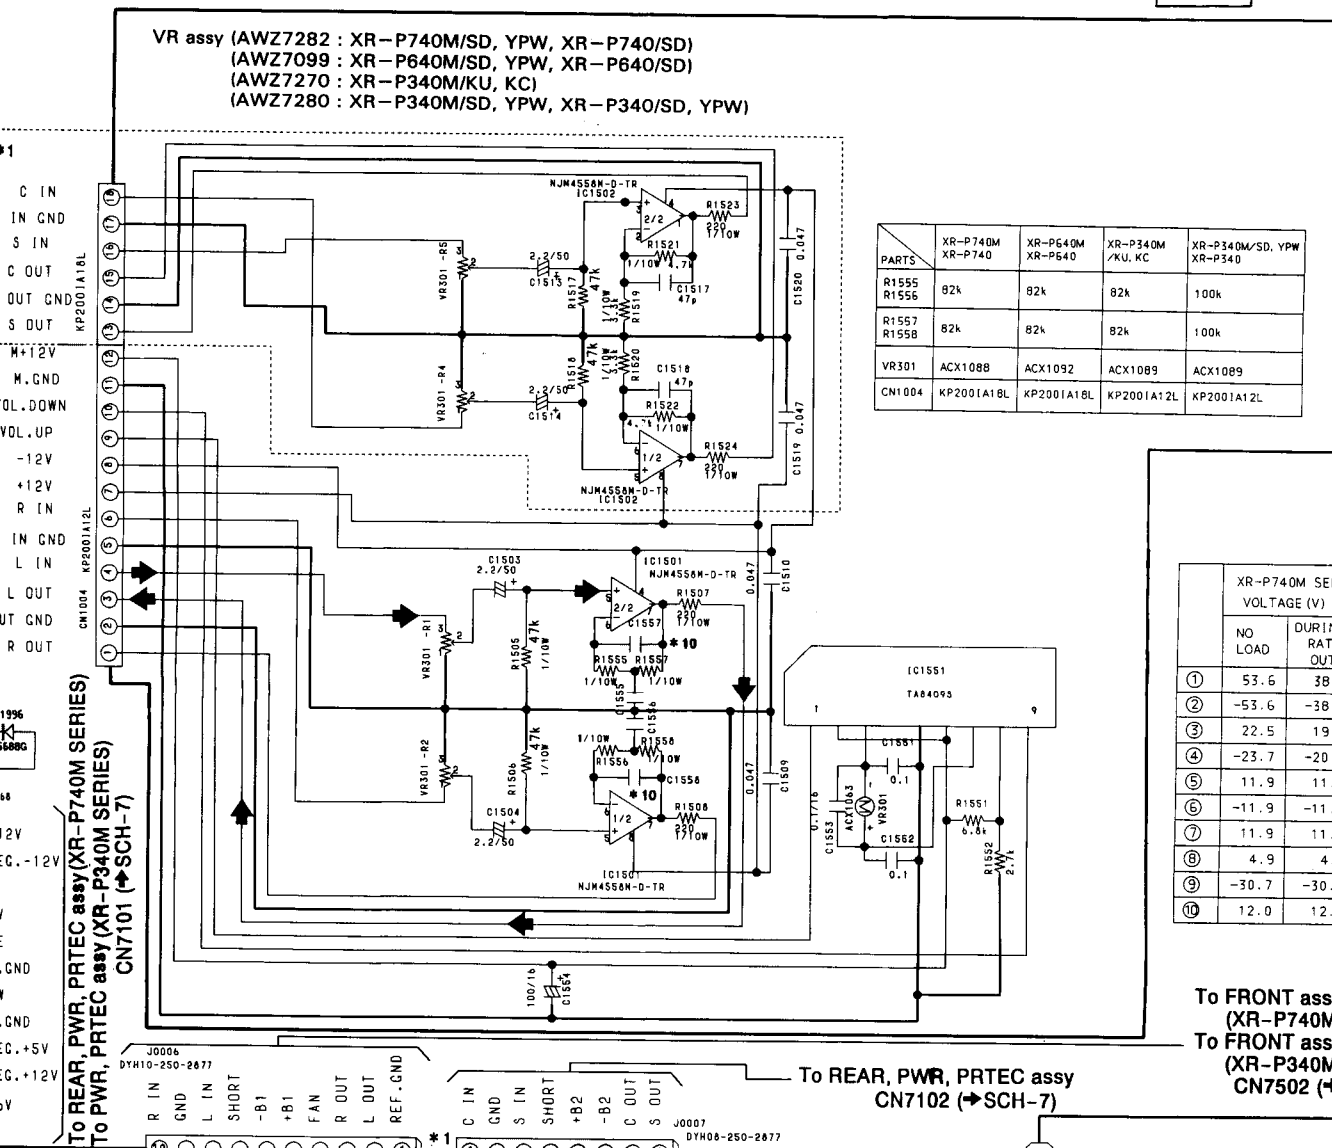

PARTS	XR-P740M XR-P740	XR-P640M XR-P640	XR-P340M /KU, KC	XR-P340M/SD, YP XR-P340
R1555 R1556	82k	82k	82k	100k
R1557 R1558	82k	82k	82k	100k
VR301	ACX1088	ACX1092	ACX1089	ACX1089
CN1004	KP2001A18L	KP2001A18L	KP2001A12L	KP2001A12L

	XR-P740M SERIES VOLTAGE (V)		XR-P340M SERIES VOLTAGE (V)	
	NO LOAD	DURING RATED OUTPUT	NO LOAD	DURING RATED OUTPUT
①	53.6	38.2	39.4	28.2
②	-53.6	-38.7	-39.4	-28.2
③	22.5	19.4	24.3	21.2
④	-23.7	-20.9	-26.0	-22.8
⑤	11.9	11.9	11.9	11.9
⑥	-11.9	-11.9	-11.9	-11.9
⑦	11.9	11.9	11.9	11.9
⑧	4.9	4.9	4.9	4.9
⑨	-30.7	-30.7	-30.7	-30.7
⑩	12.0	12.0	12.0	12.0

To FRONT assy FOR 100W
(XR-P740M SERIES)
- To FRONT assy FOR 50W
(XR-P340M SERIES)
CN7502 (→SCH-6)

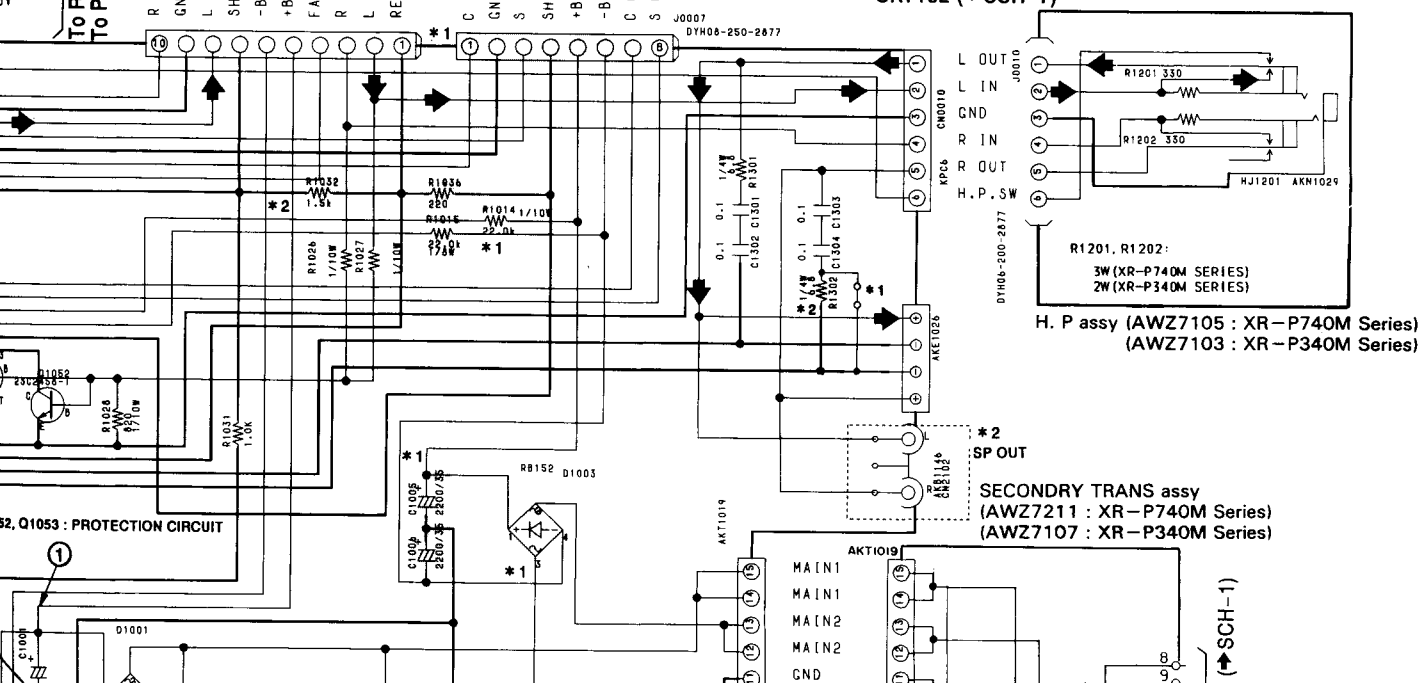


SIGNAL ROUTE

- ➔ : AUDIO SIGNAL ROUTE
- Ⓔ : TUNER AUDIO SIGNAL ROUTE
- (C) : CD AUDIO SIGNAL ROUTE
- (PB) : DECK PB SIGNAL ROUTE
- ⬅ : DECK REC SIGNAL ROUTE

To FM/AM TUNER MODULE
CN6201 (➔SCH-2)


STEREO
+5V
+12V
TUNE
MUTE
MONO
L
GND
R
PLL CLK
PLL DAT
PLL CE
NC
NC

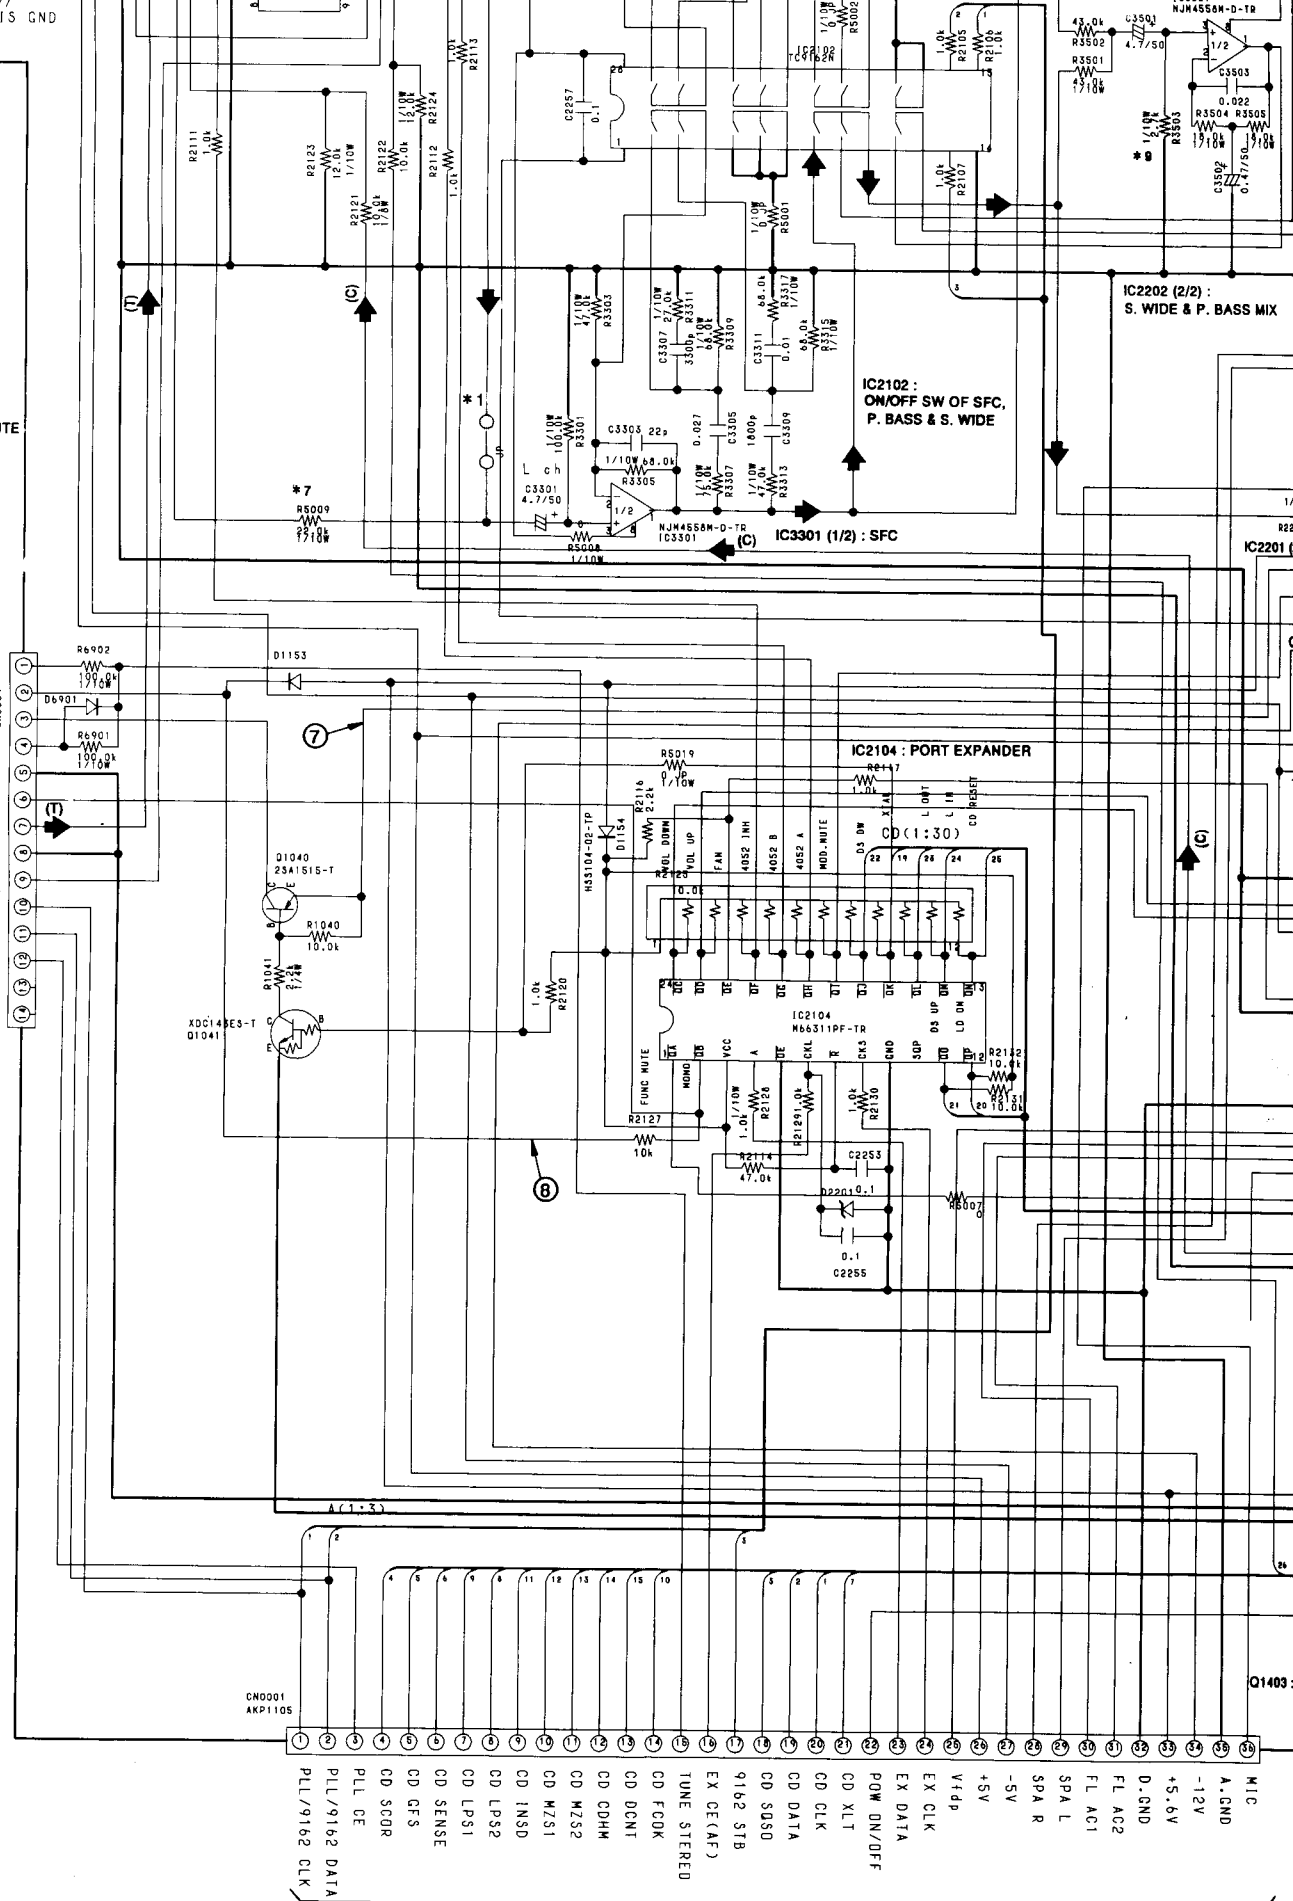

To DISPLAY assy CN1001 (➔SCH-10)

SCH-5

AF CD ASSY (2/2), VR ASSY, H. P ASSY,
SECONDARY TRANS ASSY

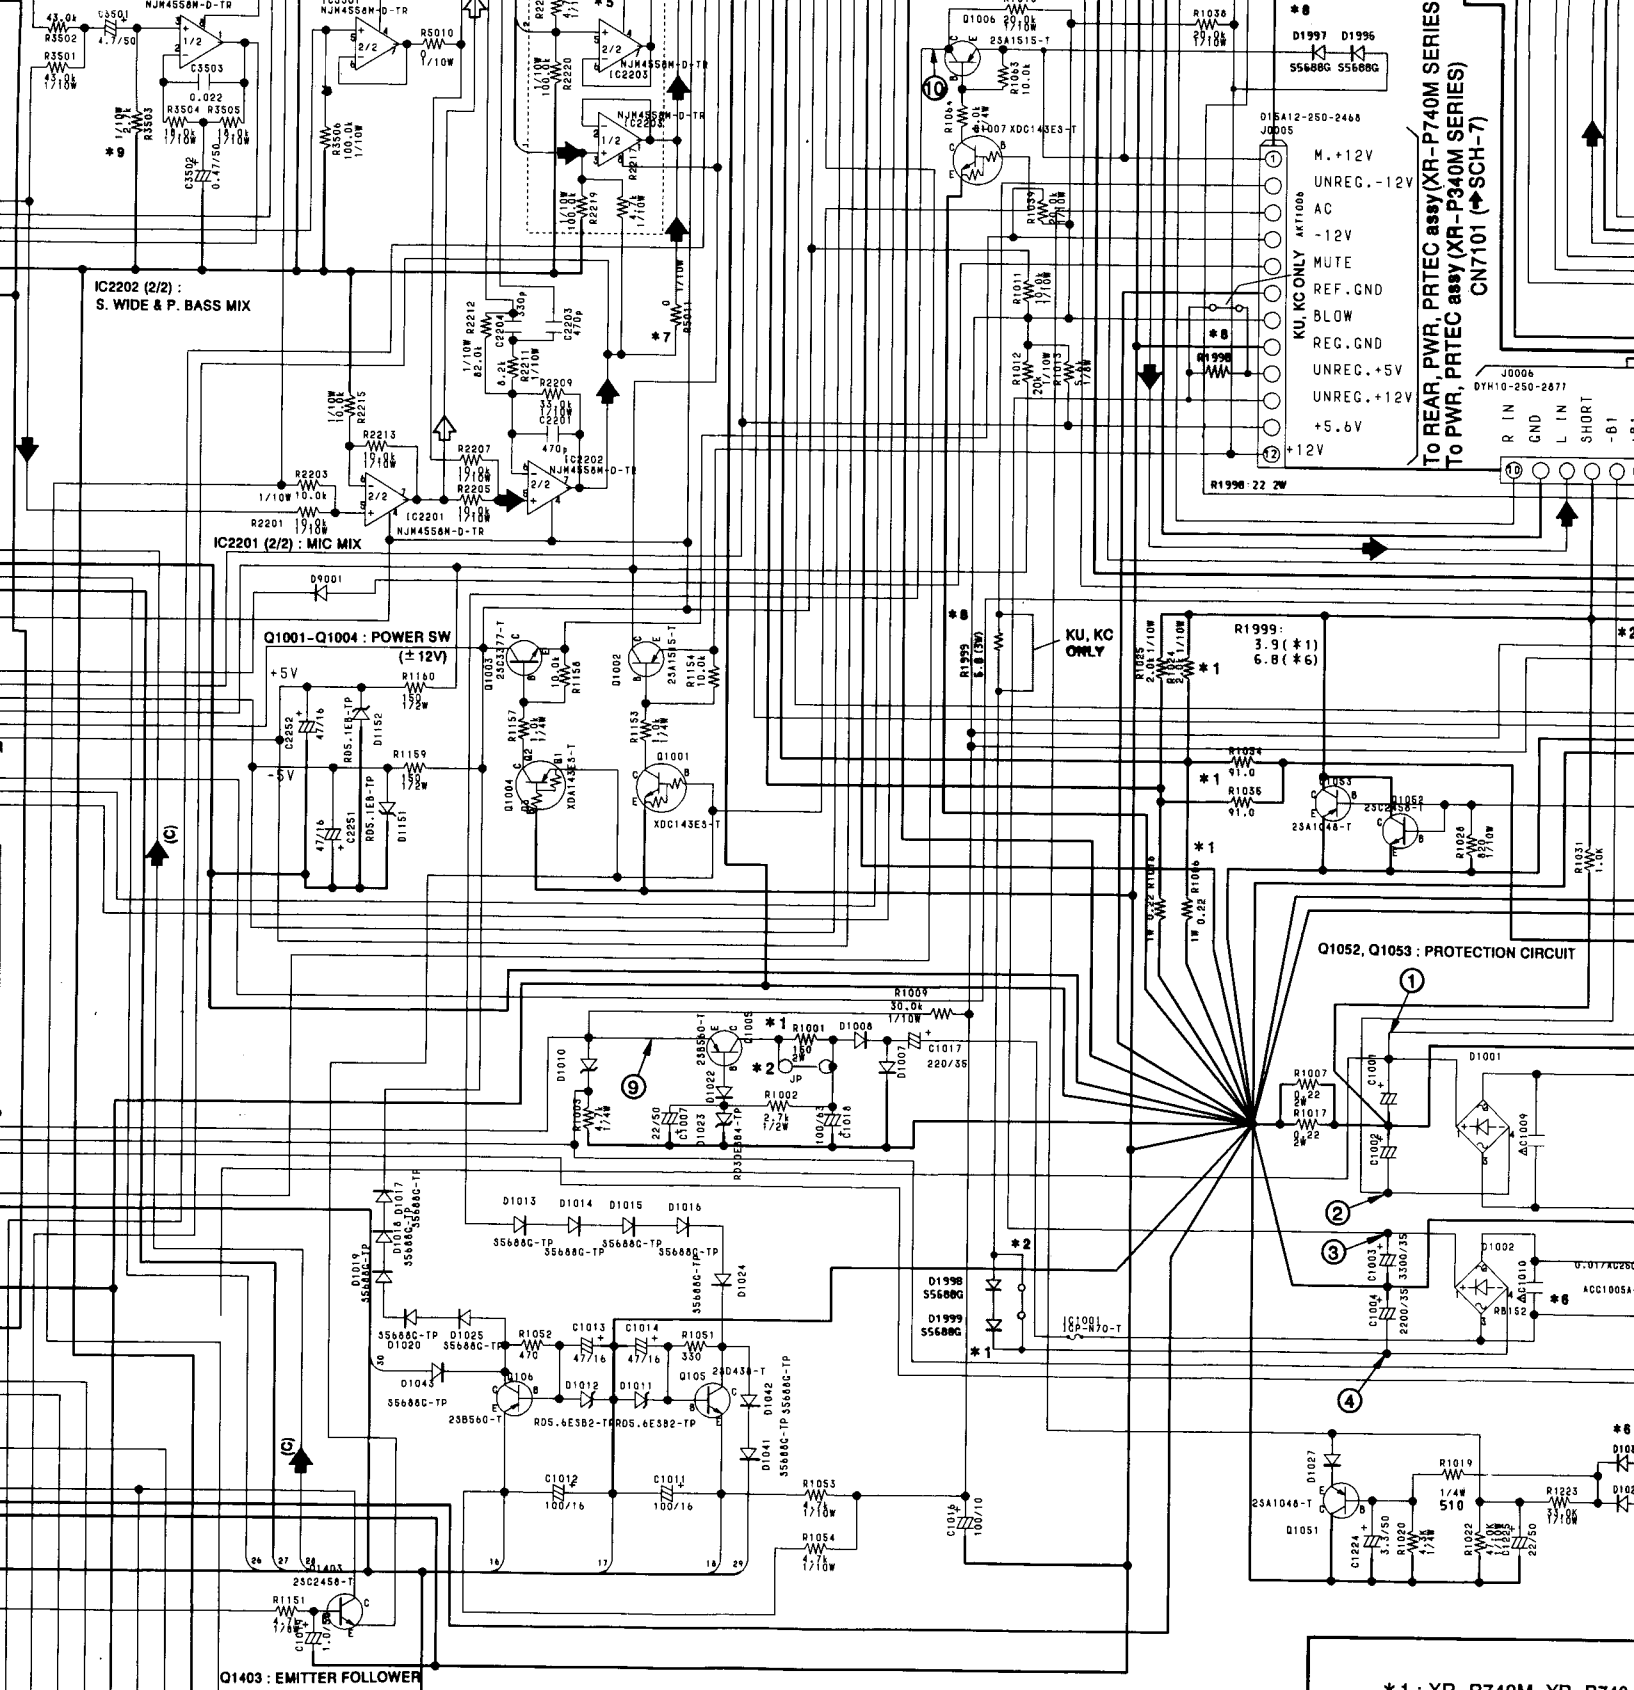

To AF CD assy (1/2) (➔SCH-4-2)

Any diode without part number indicates HSS104-02.

XR-P740M Series indicates models XR-P740M/SD, YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD.
XR-P340M Series indicates models XR-P340M/KU, KC, SD, YPW, XR-P340/SD and YPW.

- * 1 : XR-P740M, XR-P740,
- * 2 : XR-P340M, XR-P340
- * 3 : XR-P740M, XR-P640M
- * 4 : XR-P740, XR-P640, X
- * 5 : XR-P740M, XR-P740
- * 6 : XR-P340M/SD, YPW, X
- * 7 : EXCEPT XR-P740M, X
- * 8 : SD, YPW TYPES ONLY
- * 9 : EXCEPT XR-P340M/SD
- * 10 : XR-P740M SERIES, X

**XR-P740M, XR-P640M, XR-P340M
XR-P740, XR-P640, XR-P340**

**5. FRONT ASSY FOR 100W (XR-P740M Series) AND
FRONT ASSY FOR 50W (XR-P340M Series)**

3

SIGNAL ROUTE
➡ : AUDIO SIGNAL ROUTE

To REAR, PWR, PRTEC assy (XR-P740M SERIES)
To PWR, PRTEC assy (XR-P340M SERIES)
CN7103 (➡SCH-7)

DP +12V
TRIG
DP -12V
DC
PROTECT
TEMP
FAN -12V
FAN +12V

To AF CD assy J006 (➡SCH-5)

R IN
F. GND
L IN
SHORT
-B1
+B1
FAN
R OUT
L OUT
REF GND

FRONT assy FOR 100W (AWZ5389 :
FRONT assy FOR 50W (AWZ5390 : X

IC7501 (1/2) : V

F. GND

IC7702 (1/2) : TE

YF 07705
0.01

R7502
470

C7504
330p

R7504

C7539
25p

ACH1216-A-T

C7540

R7553
100

C7537
1/8p

R7503
330p

C7503

OV


IC7501 (1/2) : V


NT assy FOR 100W (AWZ5389 : XR-P740M Series)
NT assy FOR 50W (AWZ5390 : XR-P340M Series)


Q7503, Q7505, Q7507, Q7509 : DRIVER TRANSISTOR

Q7511, Q7513 : POWER TRANSISTOR

Q7601, Q7603 : BLOW DR

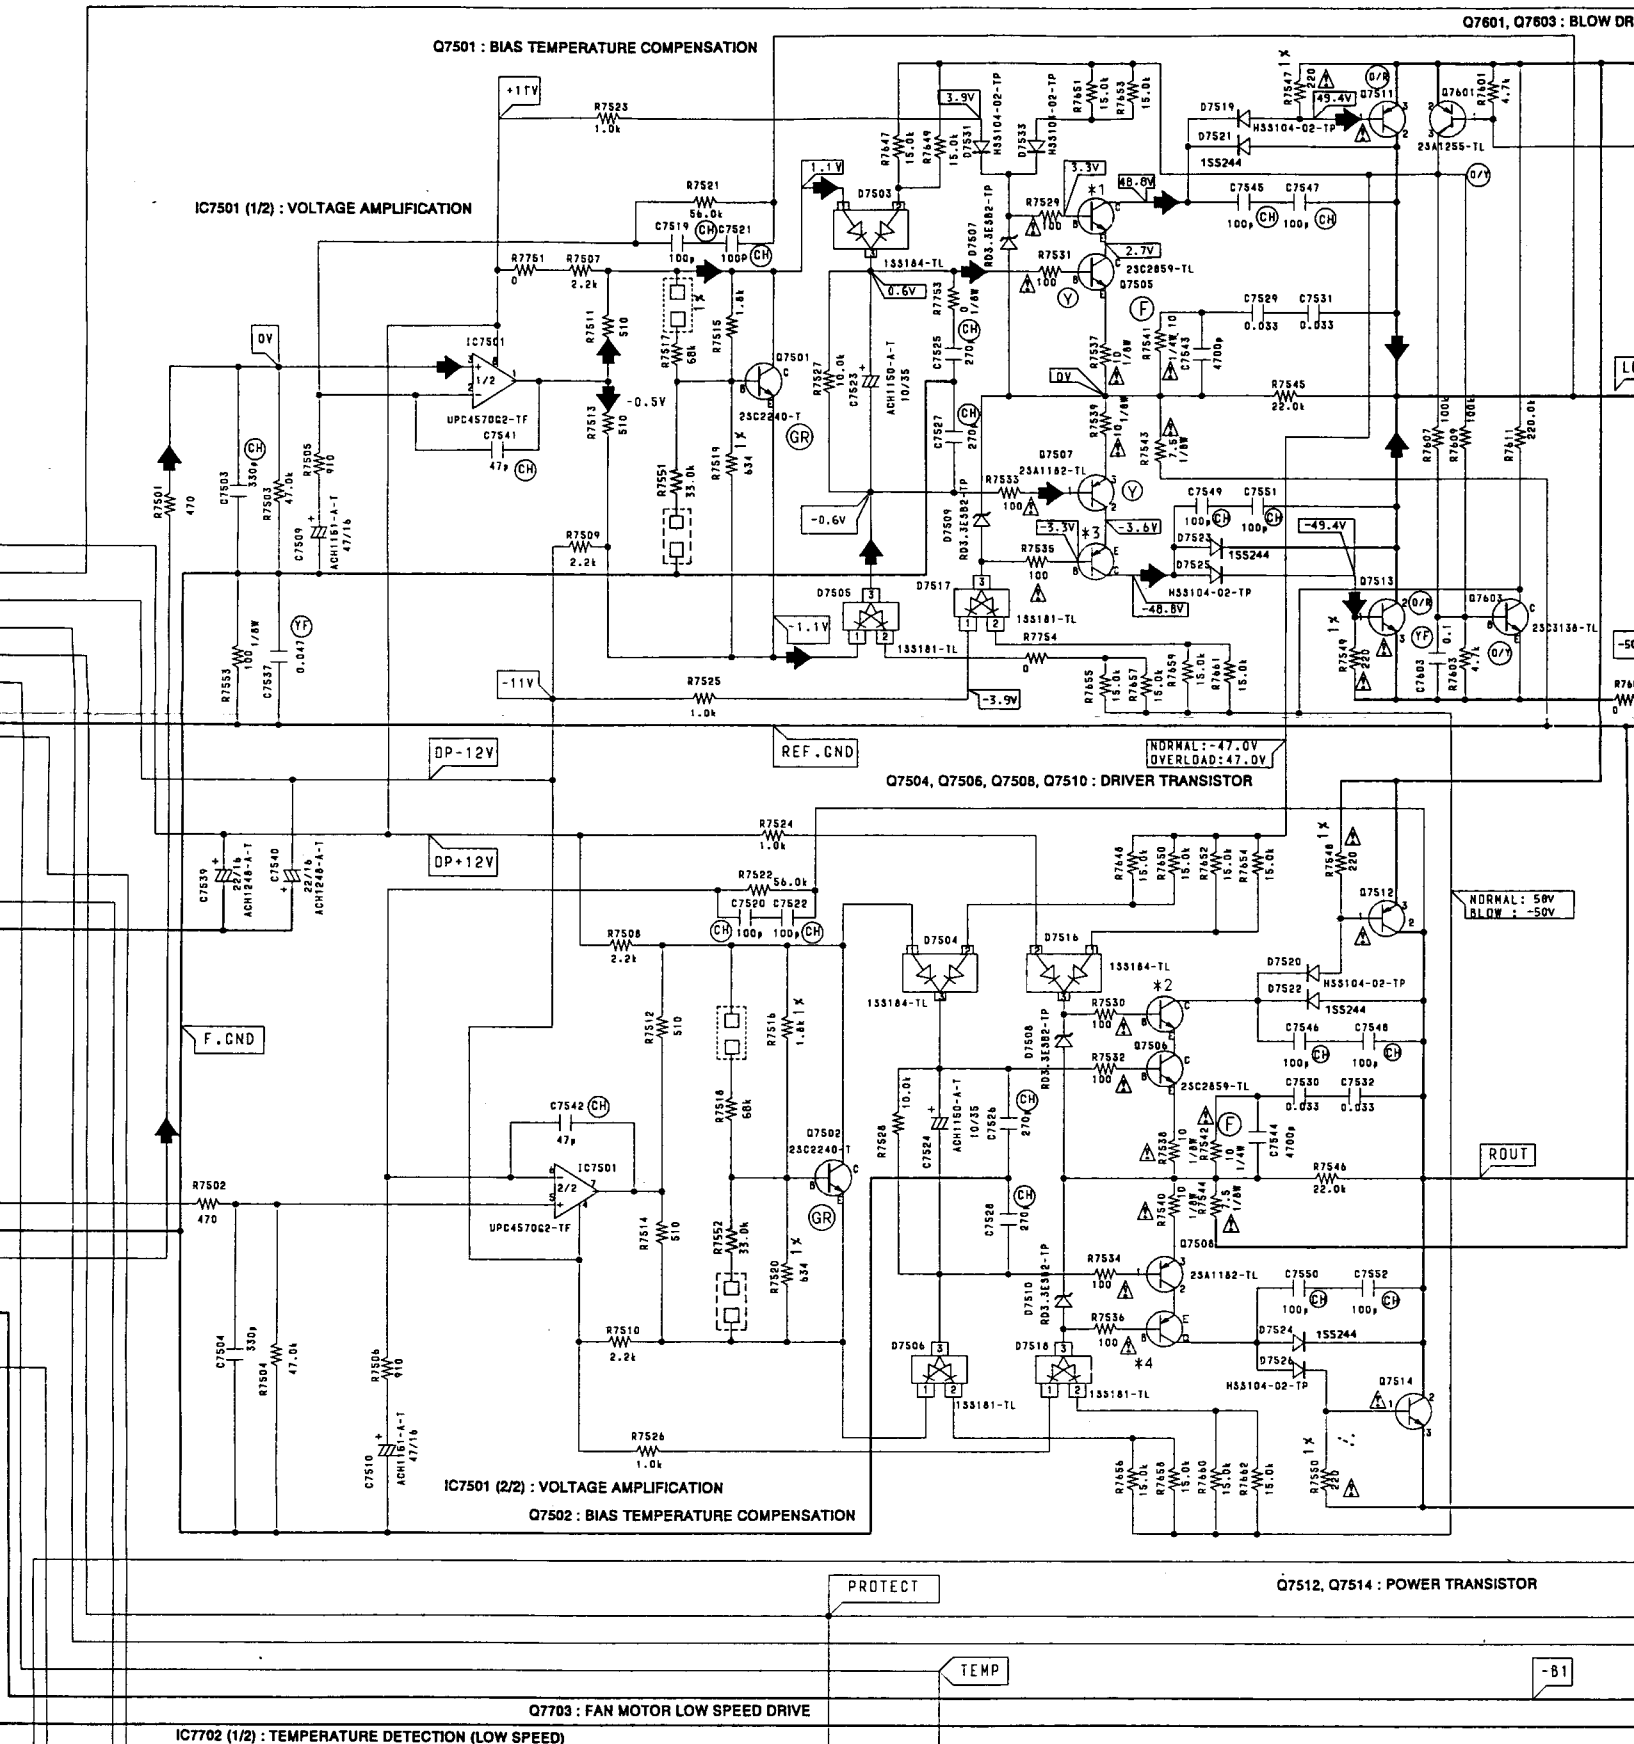

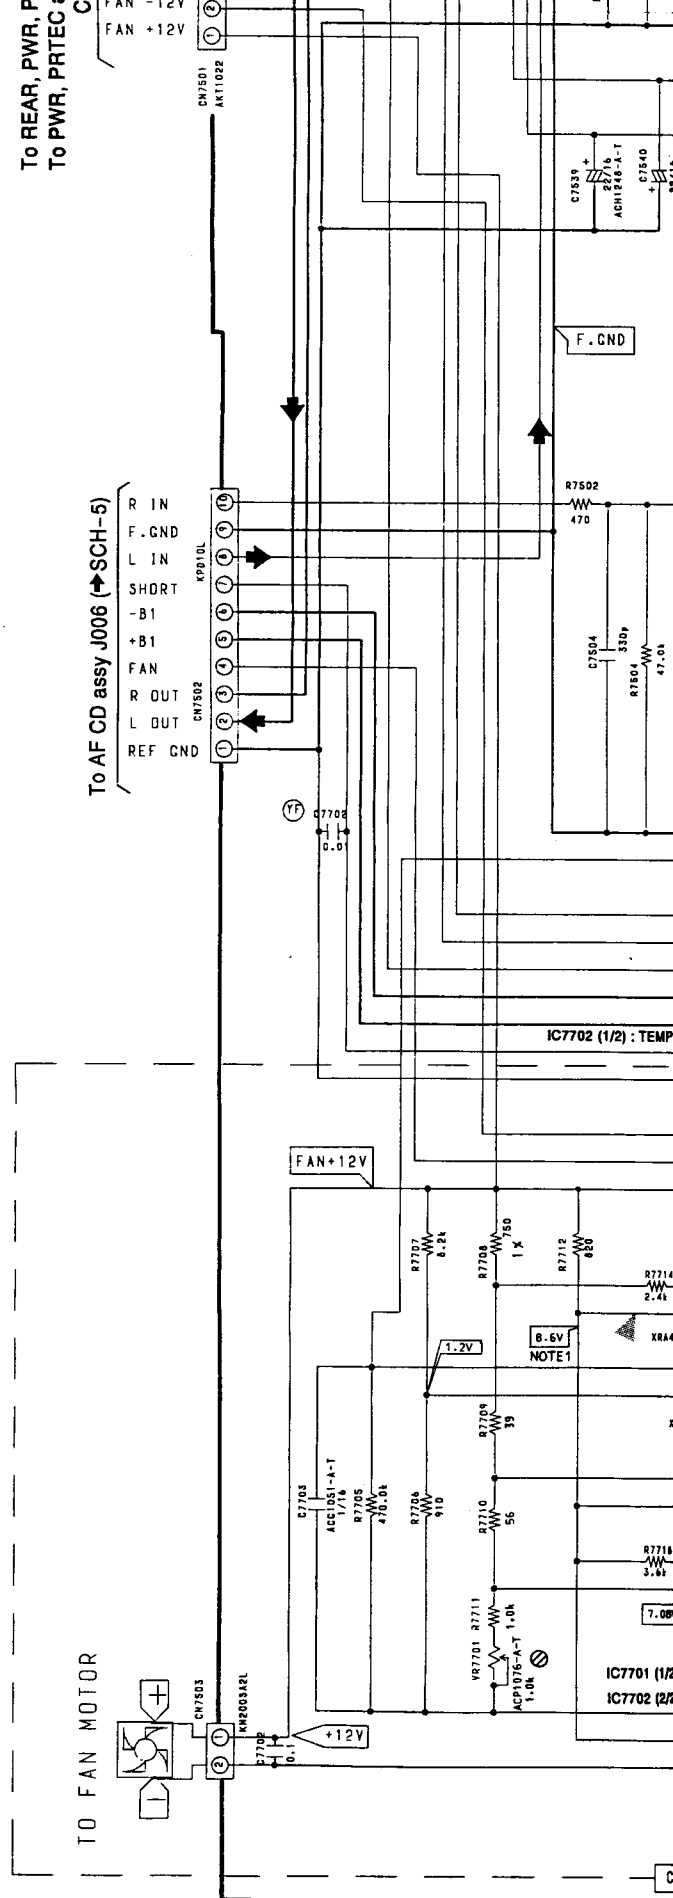

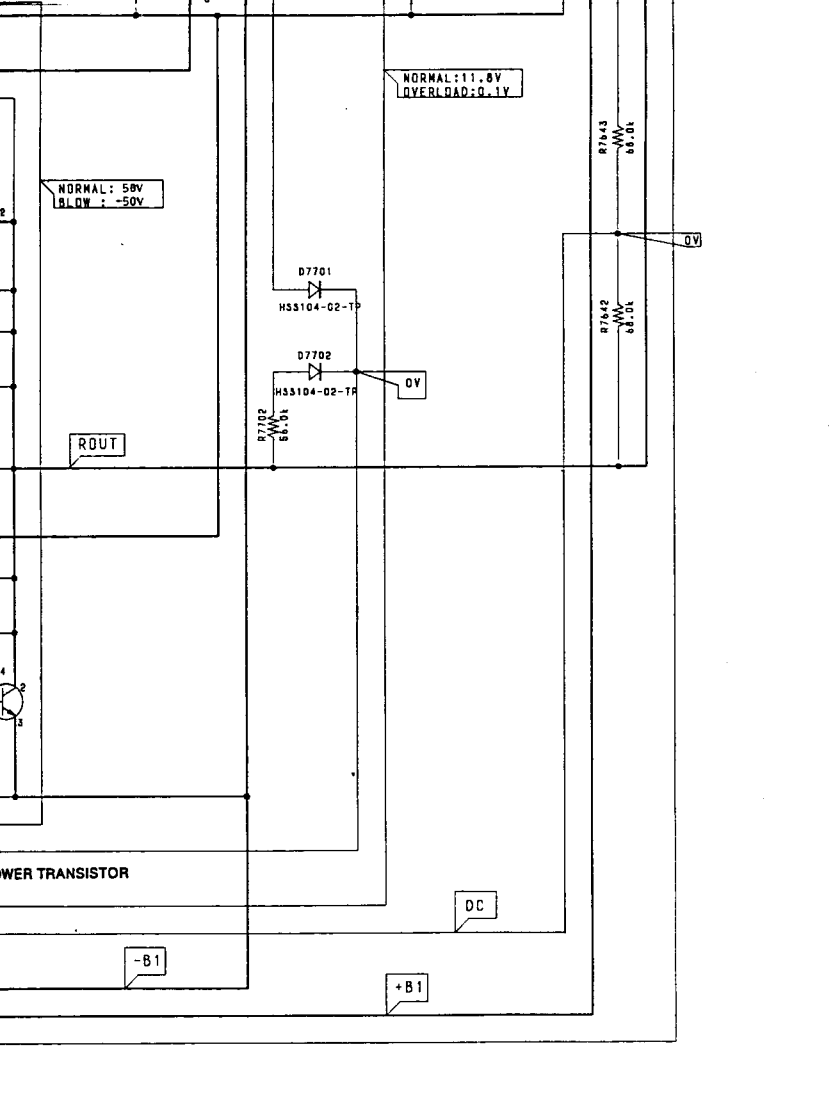

	XR-P740M SERIES	XR-P340M SERIES
	Q7503 25C4793	Q7515 25D1615
	Q7504 25C4793	Q7516 25D1615
	Q7509 25A1837	Q7517 25B1115
	Q7510 25A1837	Q7518 25B1115
Q7512	25A1264N	25A1263N
Q7514	25C3181N	25C3180N


XR-P740M Series indicates models XR-P740M/SD, YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD.
XR-P340M Series indicates models XR-P340M/KU, KC, SD, YPW, XR-P340/SD and YPW.

1: This voltage value will be greater or smaller if the temperature varies when the heat synch temperature is 25° C.
(Reference value : $V = 8.6 - 0.019 \times \Delta t$)
 Δt : $\pm$ deviation from 25° C

FRONT ASSY FOR 100W
(XR-P740M Series),
FRONT ASSY FOR 50W
(XR-P340M Series)

SCH-6

FRONT assy FOR 100W (XR-P740M Series)
FRONT assy FOR 50W (XR-P340M Series)

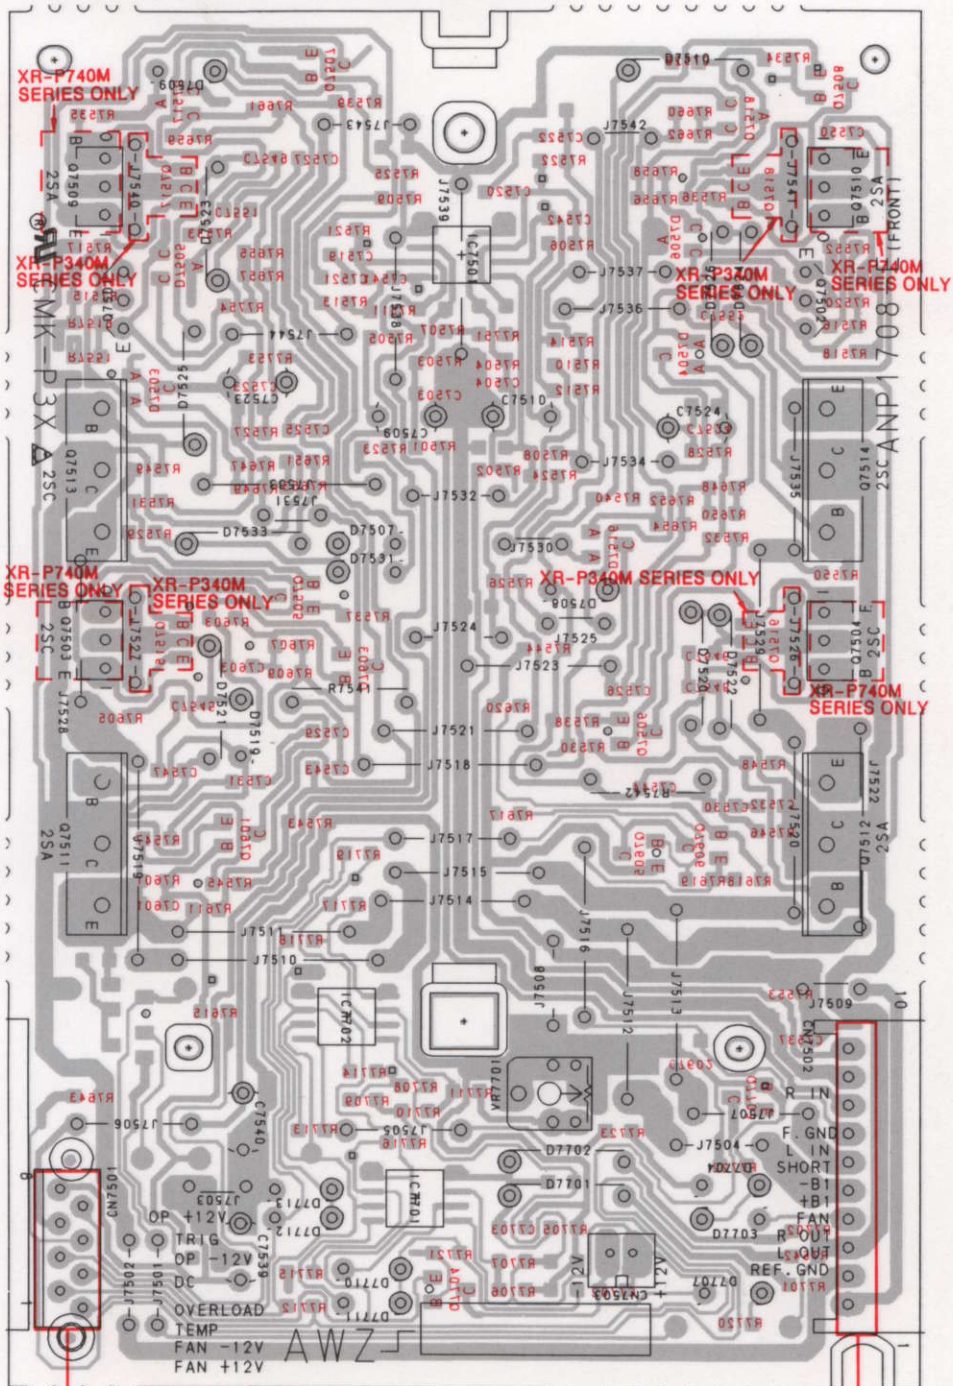

To AF CD assy J6

2-49

REAR, PWR, PRTEC ASSY (XR-P740M Series) AND
PWR, PRTEC ASSY (XR-P340M Series)
REAR, PWB, PRTEC assy (XR-P740M Series) PWR, PRTEC assy (XR-P340M Series)

A

FRONT assy FOR 100W (XR-P740M Series)
FRONT assy FOR 50W (XR-P340M Series)

A

B

B


C

C

D

D

- 07507 07508
- 07517 07518
- 07519 07520
- IC2501
- 07501 07505
- 07513 07514
- 07505 07506
- 07503 07504
- 07516 07517
- 07508
- 07511 07512
- 07502 07503
- IC2505
- 07503 07504
- IC2501
- 07504

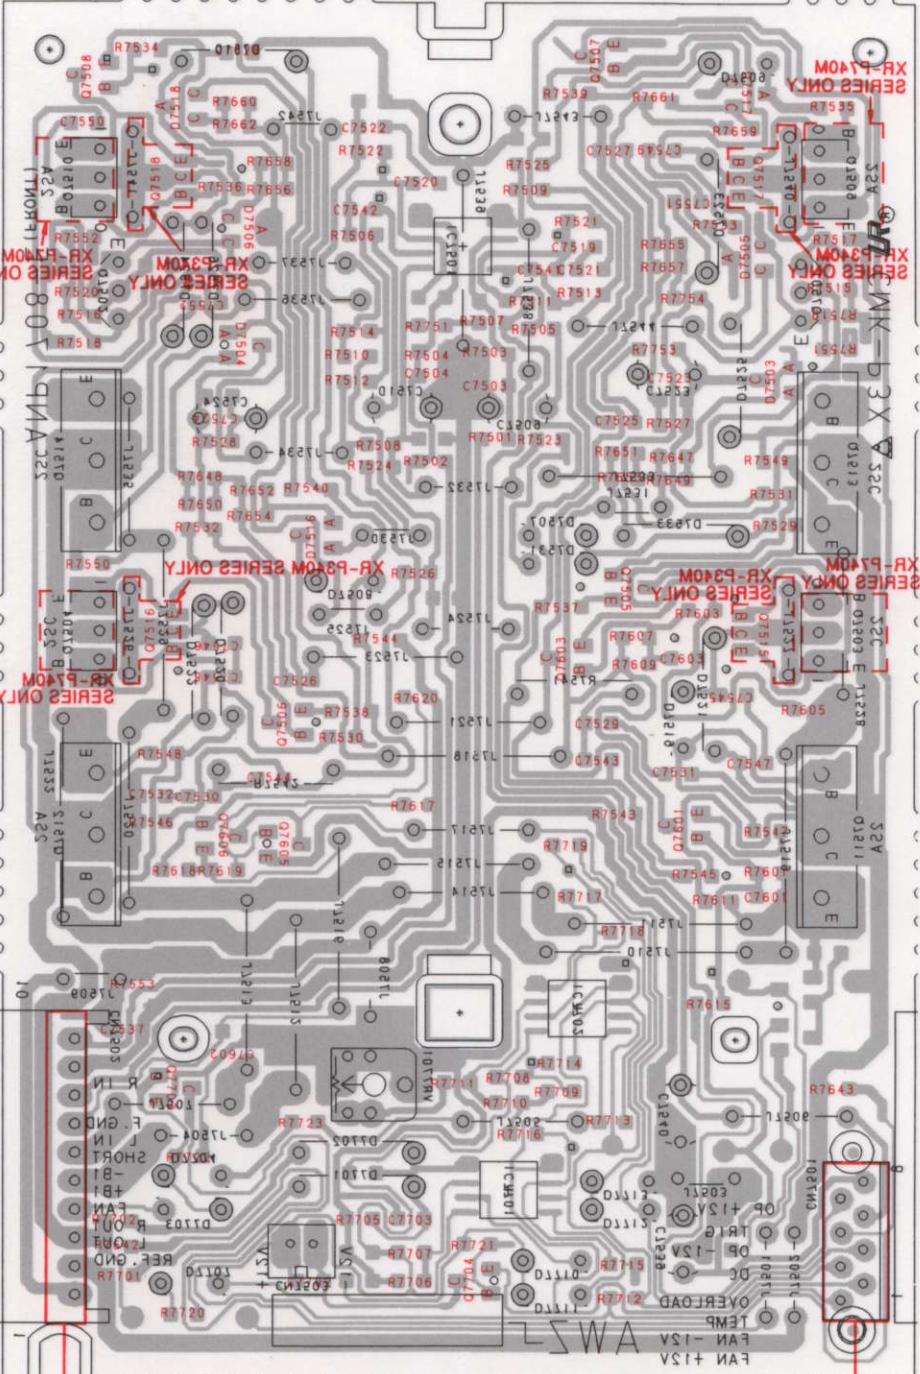

TO REAR, PWR, PRTEC assy
(XR-P740M SERIES)
TO PWR, PRTEC assy
(XR-P340M SERIES)
CN2103

TO AF CD assy 18


● This diagram is viewed from the foil side.

XR-P740M, XR-P640M, XR-P340M
XR-P740, XR-P640, XR-P340

6. REAR, PWR, PRTEC ASSY (XR-P740M Series) AND
PWR, PRTEC ASSY (XR-P340M Series)

REAR, PWR, PRTEC assy (XR-P740M Series) PWR, PRTEC assy (XR-P340M Series)

07106
07104
07105
07111
07105
07114
07108
07110
IC2405B
02514
02513
02501
02555
IC2404
02510
02517
02518
02550
02511
02507
02508
02502
02506

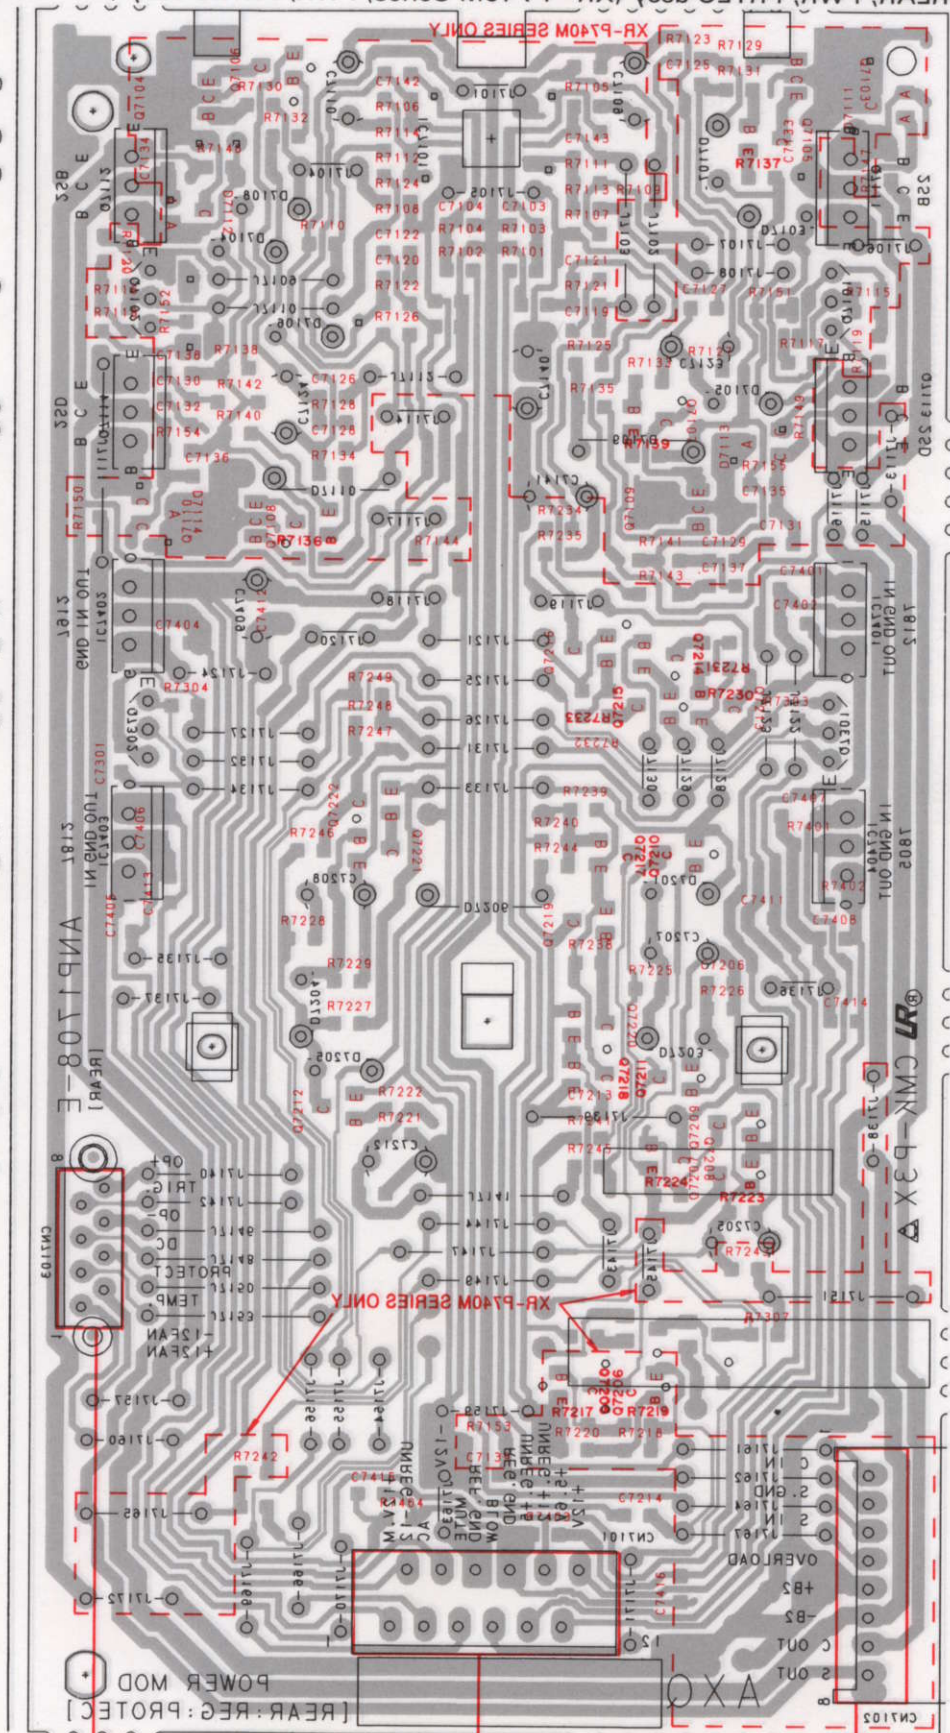

To AF CD assy 12
From AF CD assy 12
To FRONT assy FOR 50W
(XR-P340M SERIES)
To FRONT assy FOR 100W
(XR-P740M SERIES)

This diagram is viewed from the foil side.

XR-P740M Series indicates models XR-P740M/SD, YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD.
XR-P340M Series indicates models XR-P340M/KU, KC, SD, YPW, XR-P340/SD and YPW.

A

C

- This diagram is viewed from the mounted parts side.

REAR, PWR, PRTEC assy
(AWZ5391 : XR-P740M Series)
PWR, PRTEC assy
(AWZ5392 : XR-P340M Series)

XR-P740M SERIES ONLY

Q7101 : BIAS TEMPERATURE COMPENSATION
IC7101 (1/2) : VOLTAGE AMPLIFICATION

Q7111, Q7113 : POWER TRANSISTOR

Q7103, Q7105, Q7107, Q7109 :

Q7217-Q7220, Q7211 : B

SIGNAL ROUTE

→ : REAR SIGNAL ROUTE

→ : CENTER SIGNAL ROUTE

From AF CD assy J0005 (SCH-5)

+12V
+5.6V
UNREG+12
UNREG+5
REG.GND
BLOW
REF.GND
MUTE
-12V
AC
UNREG-12
+12V.M.

CN7101
CN7113

777

Q7104, Q7106, Q7108, Q7110 : DRIVER TRANSISTOR

Q7112, Q7114 : POWER TRANSISTOR

IC7101 (2/2) : VOLTAGE AMPLIFICATION

SUBROUND POWER AMP

Q7102 : BIAS TEMPERATURE COMPENSATION

IC7401 : +12V 3-TERMINAL REGULATOR

IC7403 : +12V 3-TERMINAL REGULATOR (MOTOR SYSTEM)


IC7402 : -12V 3-TERMINAL REGULATOR

IC7404 : +5V 3-TERMINAL REGULATOR

REGULATOR

Q7301, Q7302 : FAN MOTOR TEMPERATURE SENSOR

(Q7301 and Q7302 must be used in pair rank)

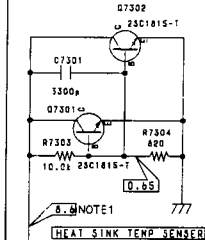


NOT

XR-
XR-
XR-
SD,

SCH-7

REAR, PWR, PRTEC ASSY
(XR-P740M Series),
PWR, PRTEC ASSY (XR-P340M Series)

XR-P740M, XR-P640M, XR-P340M XR-P740, XR-P640, XR-P340

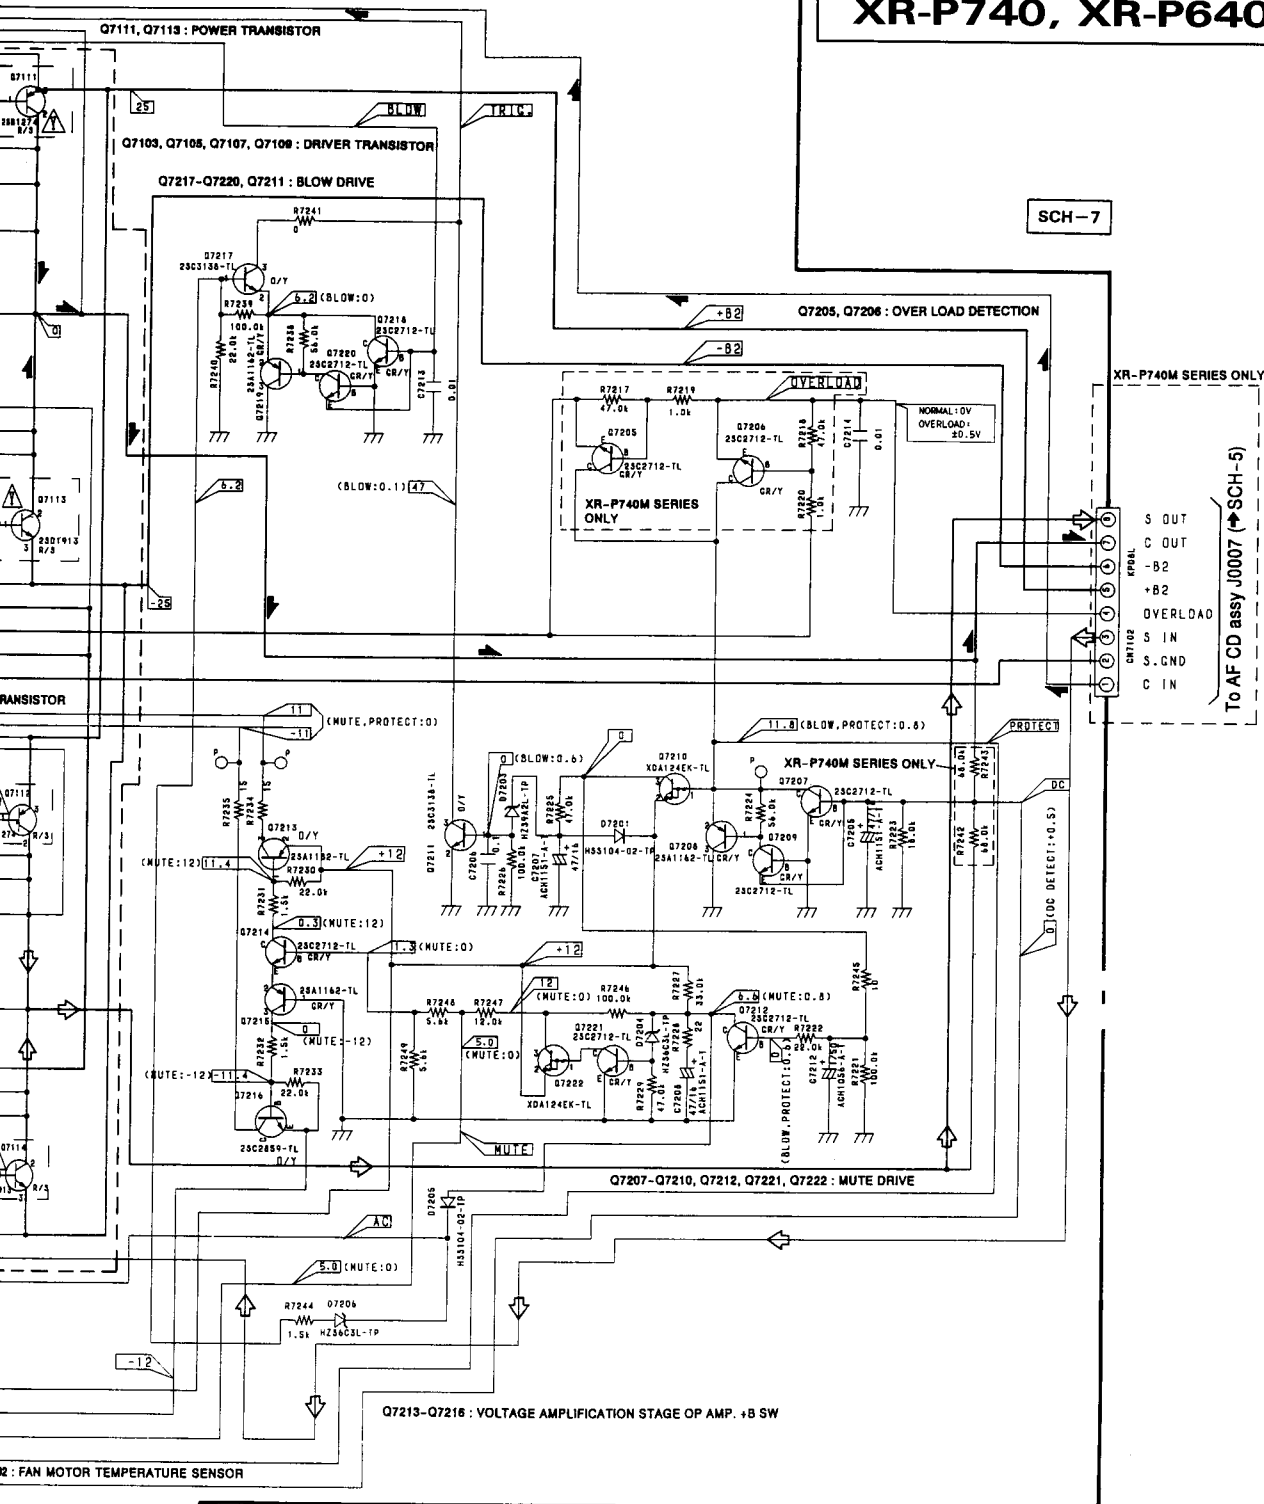


NOTE1: This voltage value will be greater or smaller if the temperature varies when the heat synch temperature is 25° C.
(Reference value : $V = 8.6 - 0.019 \times \Delta t$)
 Δt : $\pm$ deviation from 25° C

XR-P740M Series indicates models XR-P740M/SD, YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD.
XR-P340M Series indicates models XR-P340M/KC, KC, SD, YPW, XR-P340/SD and YPW.

REAR, PWR, PRTEC ASSY
(XR-P740M Series),
PWR, PRTEC ASSY (XR-P340M Series)


SCH-7

 ADDON DISPLAY assy (AWZ7141 : XR-P740M, XR-P740)
(AWZ7139 : XR-P640M, XR-P640)



To DISPLAY assy J20 (→SCH-10)

ADDON DISPLAY ASSY

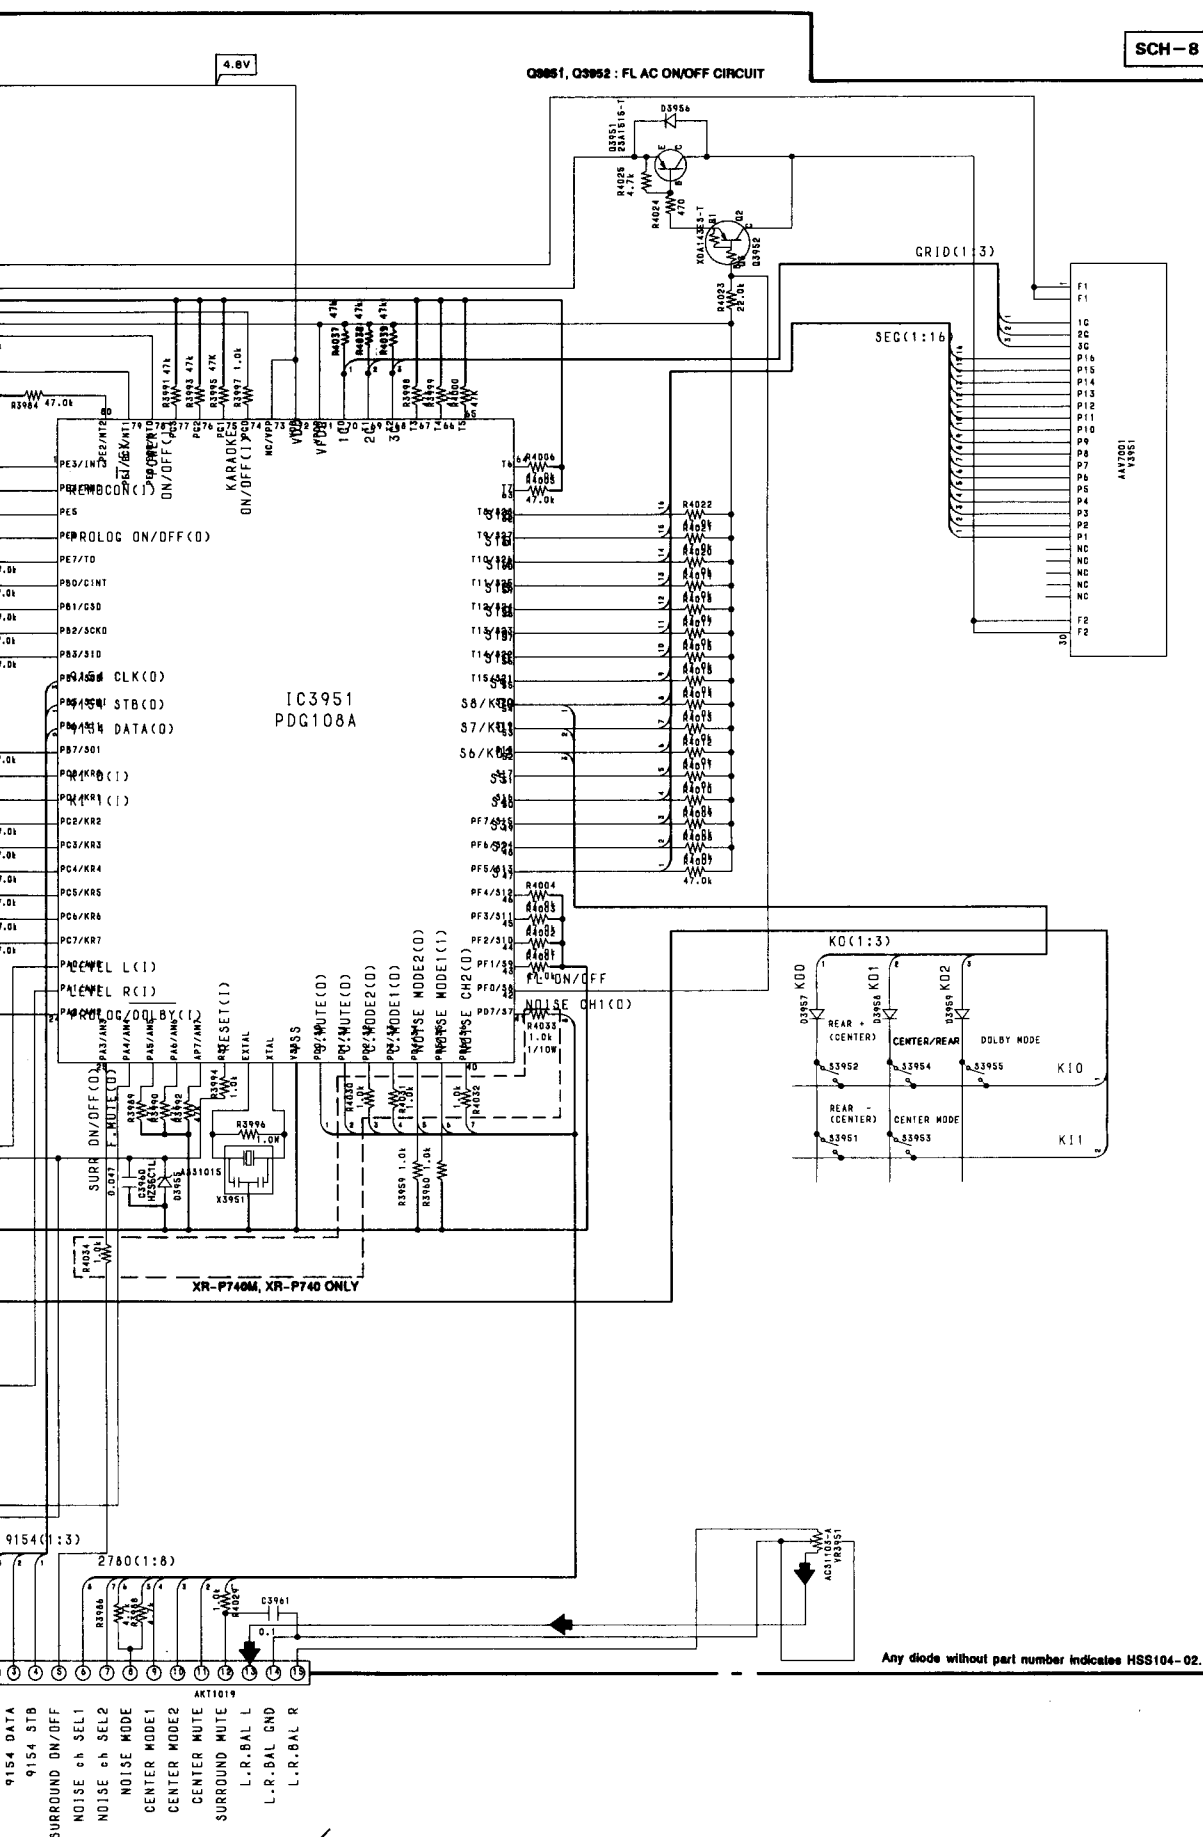

assy J21 (→SCH-9)(XR-P740M, XR-P740)
assy J21 (→SCH-11)(XR-P840M, XR-P840)

• This diagram is viewed mounted parts side.

For XR-P640M,XR-P640

IC3952 Q3952 Q3951

IC3951

AWM

To DISPLAY assy J20

For XR-P740M,XR-P740

IC3952 Q3952 Q3951

IC3951

AWM

To DISPLAY assy J20

Q3407 Q3408
IC3402

Q3409 IC3408

Q3405 IC3410

VR3401


To AF CD assy CN3

This diagram is viewed from the
mounted parts side.


XR-P740M, XR-P640M, XR-P340M
XR-P740, XR-P640, XR-P340

PCB-6

ADDON DISPLAY assy (XR-P640M AND XR-P640)

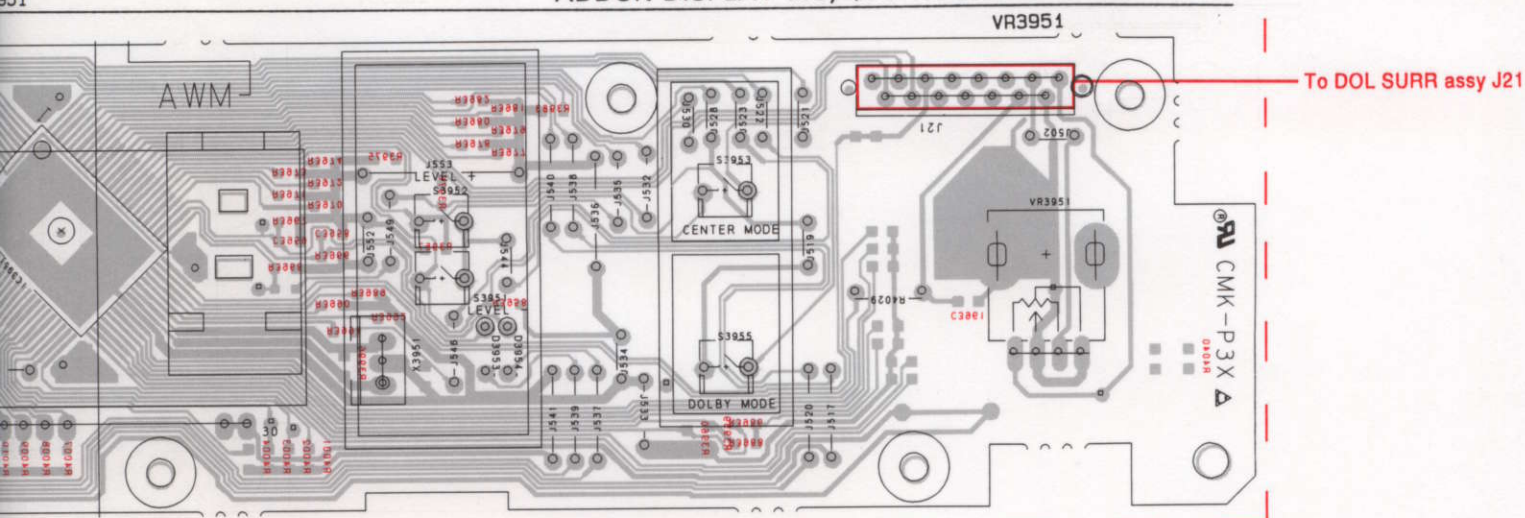

ADDON DISPLAY assy (XR-P740M AND XR-P740)

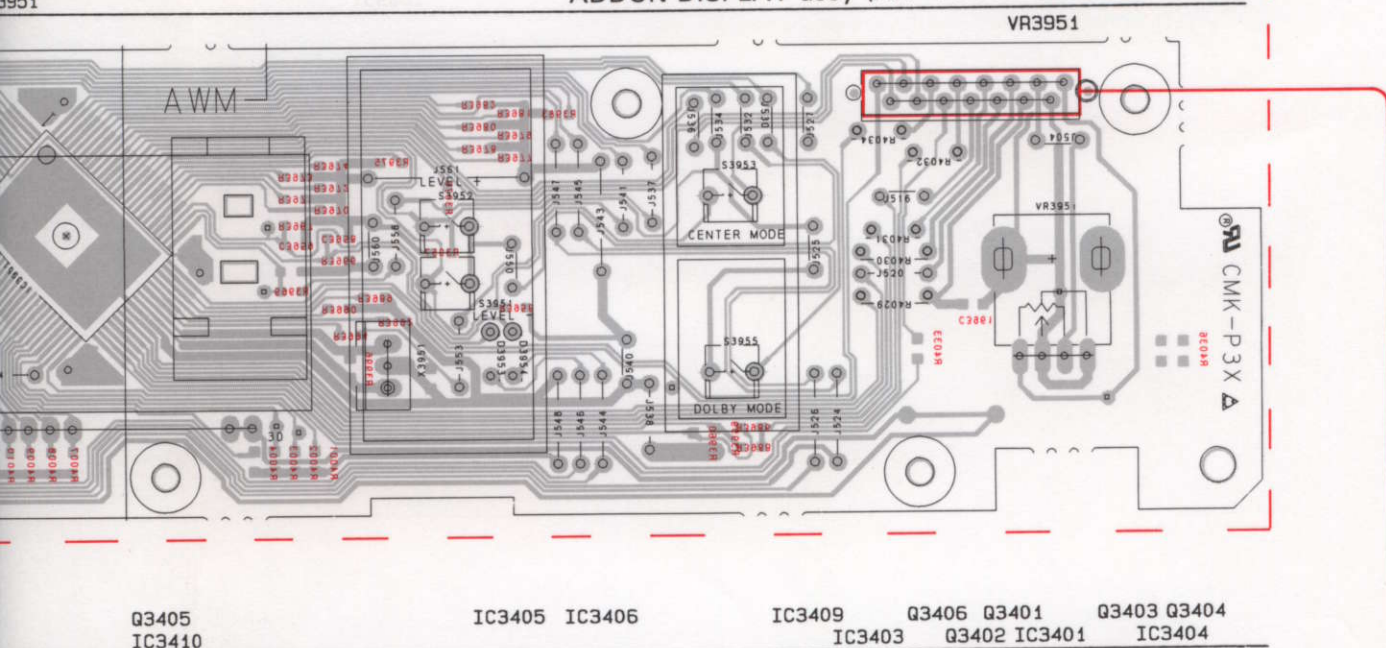


Q3405
IC3410

IC3405 IC3406

IC3409
IC3403




Q3406 Q3401
Q3402 IC3401

Q3403 Q3404
IC3404

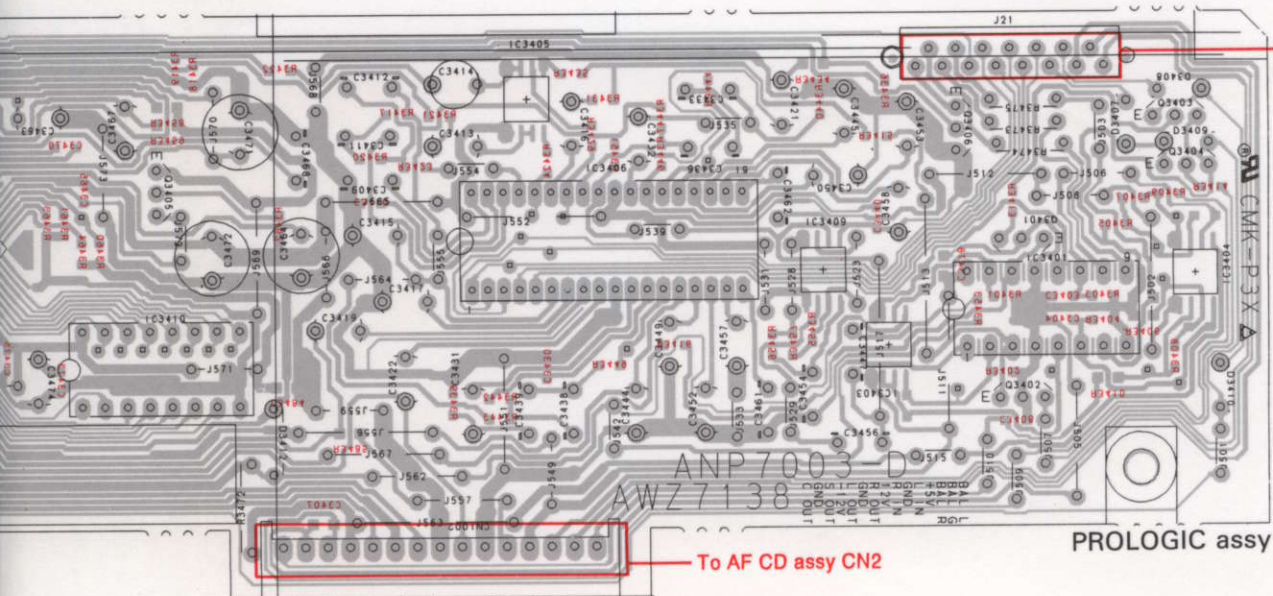


PROLOGIC assy

● This diagram is viewed from the front side.

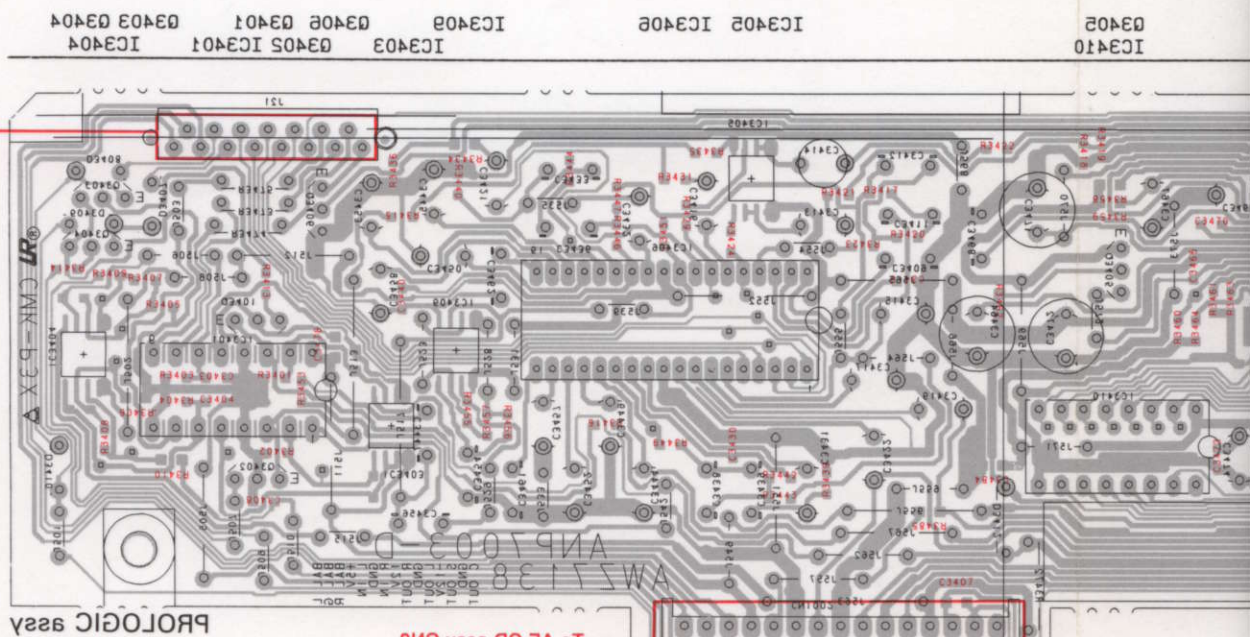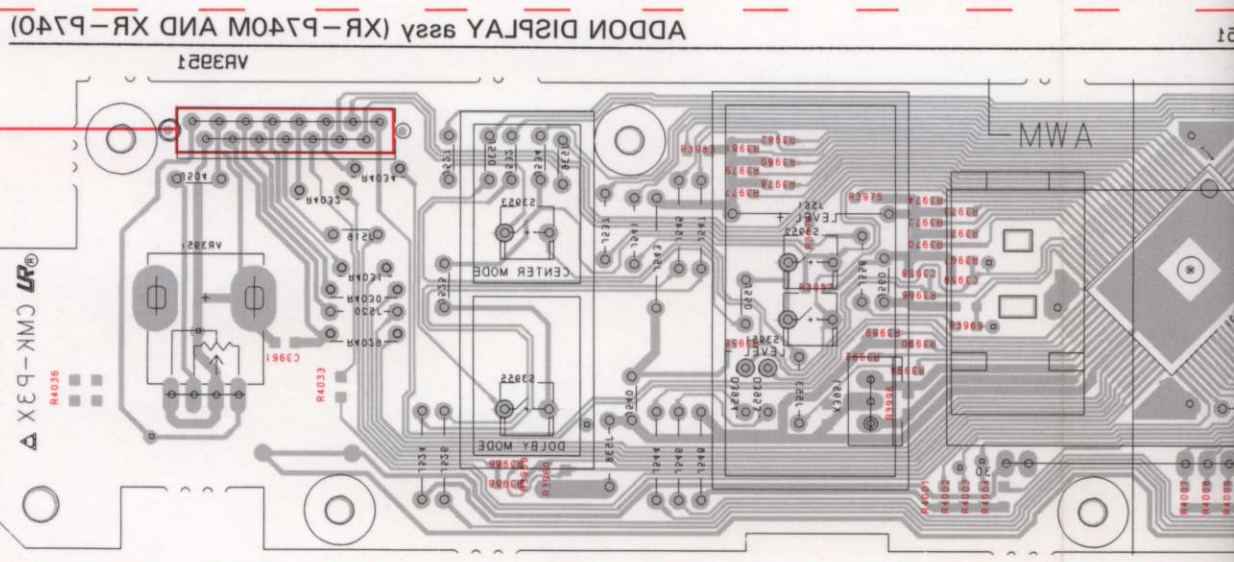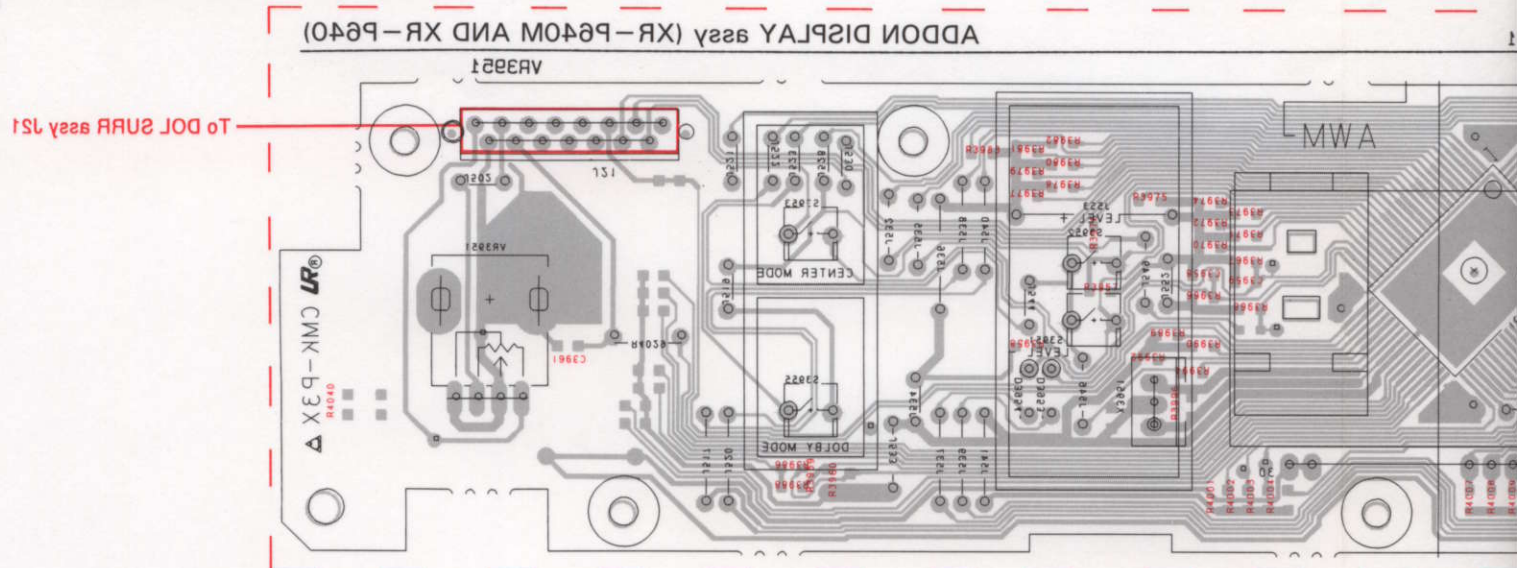


gram is viewed from the foil


For XR-P640W, XR-P640

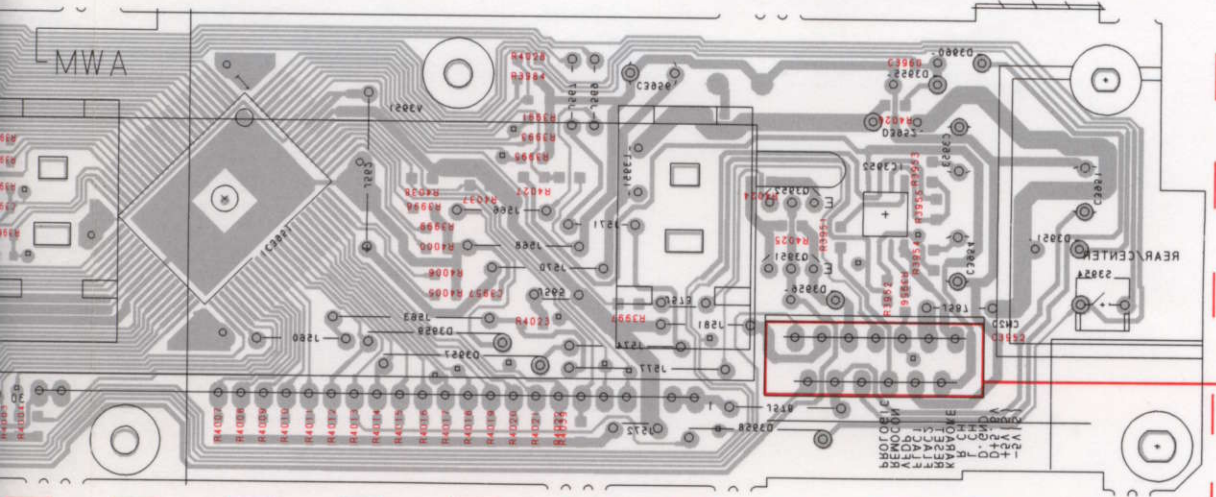

For XR-P740W, XR-P740

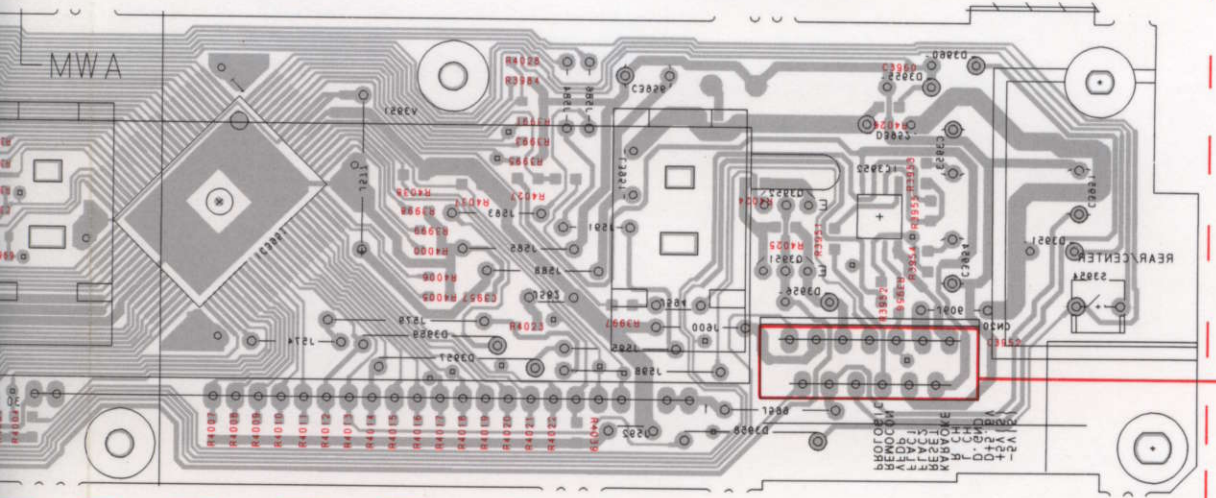

IC3405 03405 03408 03402 03408 03402 03408 03402

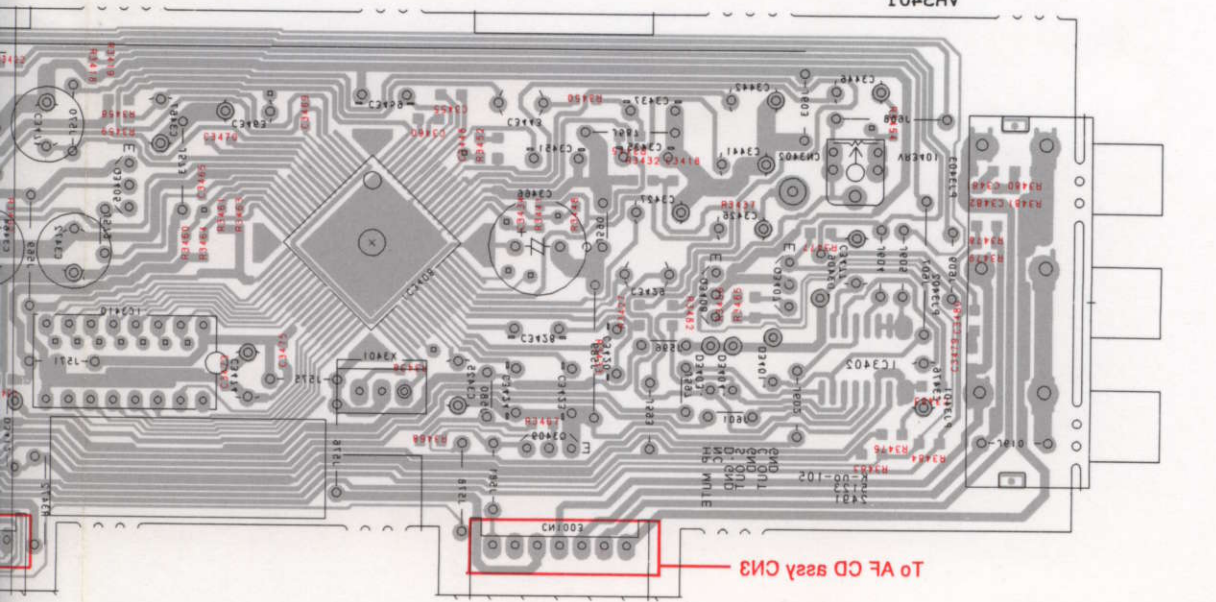



For XR-P740M, XR-P740

PROLOGIC assy (AWZ7138)


SIGNAL ROUTE

➡ : AUDIO SIGNAL ROUTE


IC3402 : SWITCHING CIRCUIT

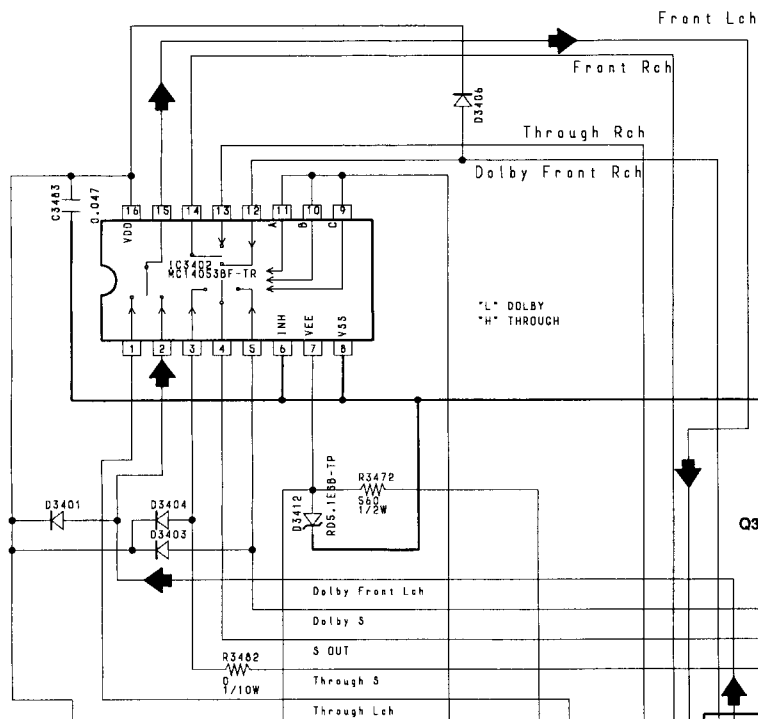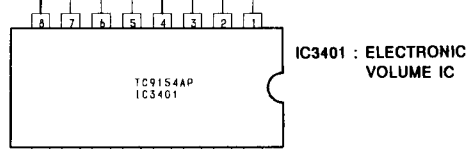IC3403 (2/2), IC3404 (2/2) :
CENTER SIGNAL AMP CIRCUITQ3401, Q3403 :
SURROUND SIGNAL
MUTE CIRCUITIC3403 (1/2), IC3404 (1/2) :
SURROUND SIGNAL AMP CIRCUITQ3402, Q3404 :
CENTER SIGNAL MUTE CIR

ont Lch

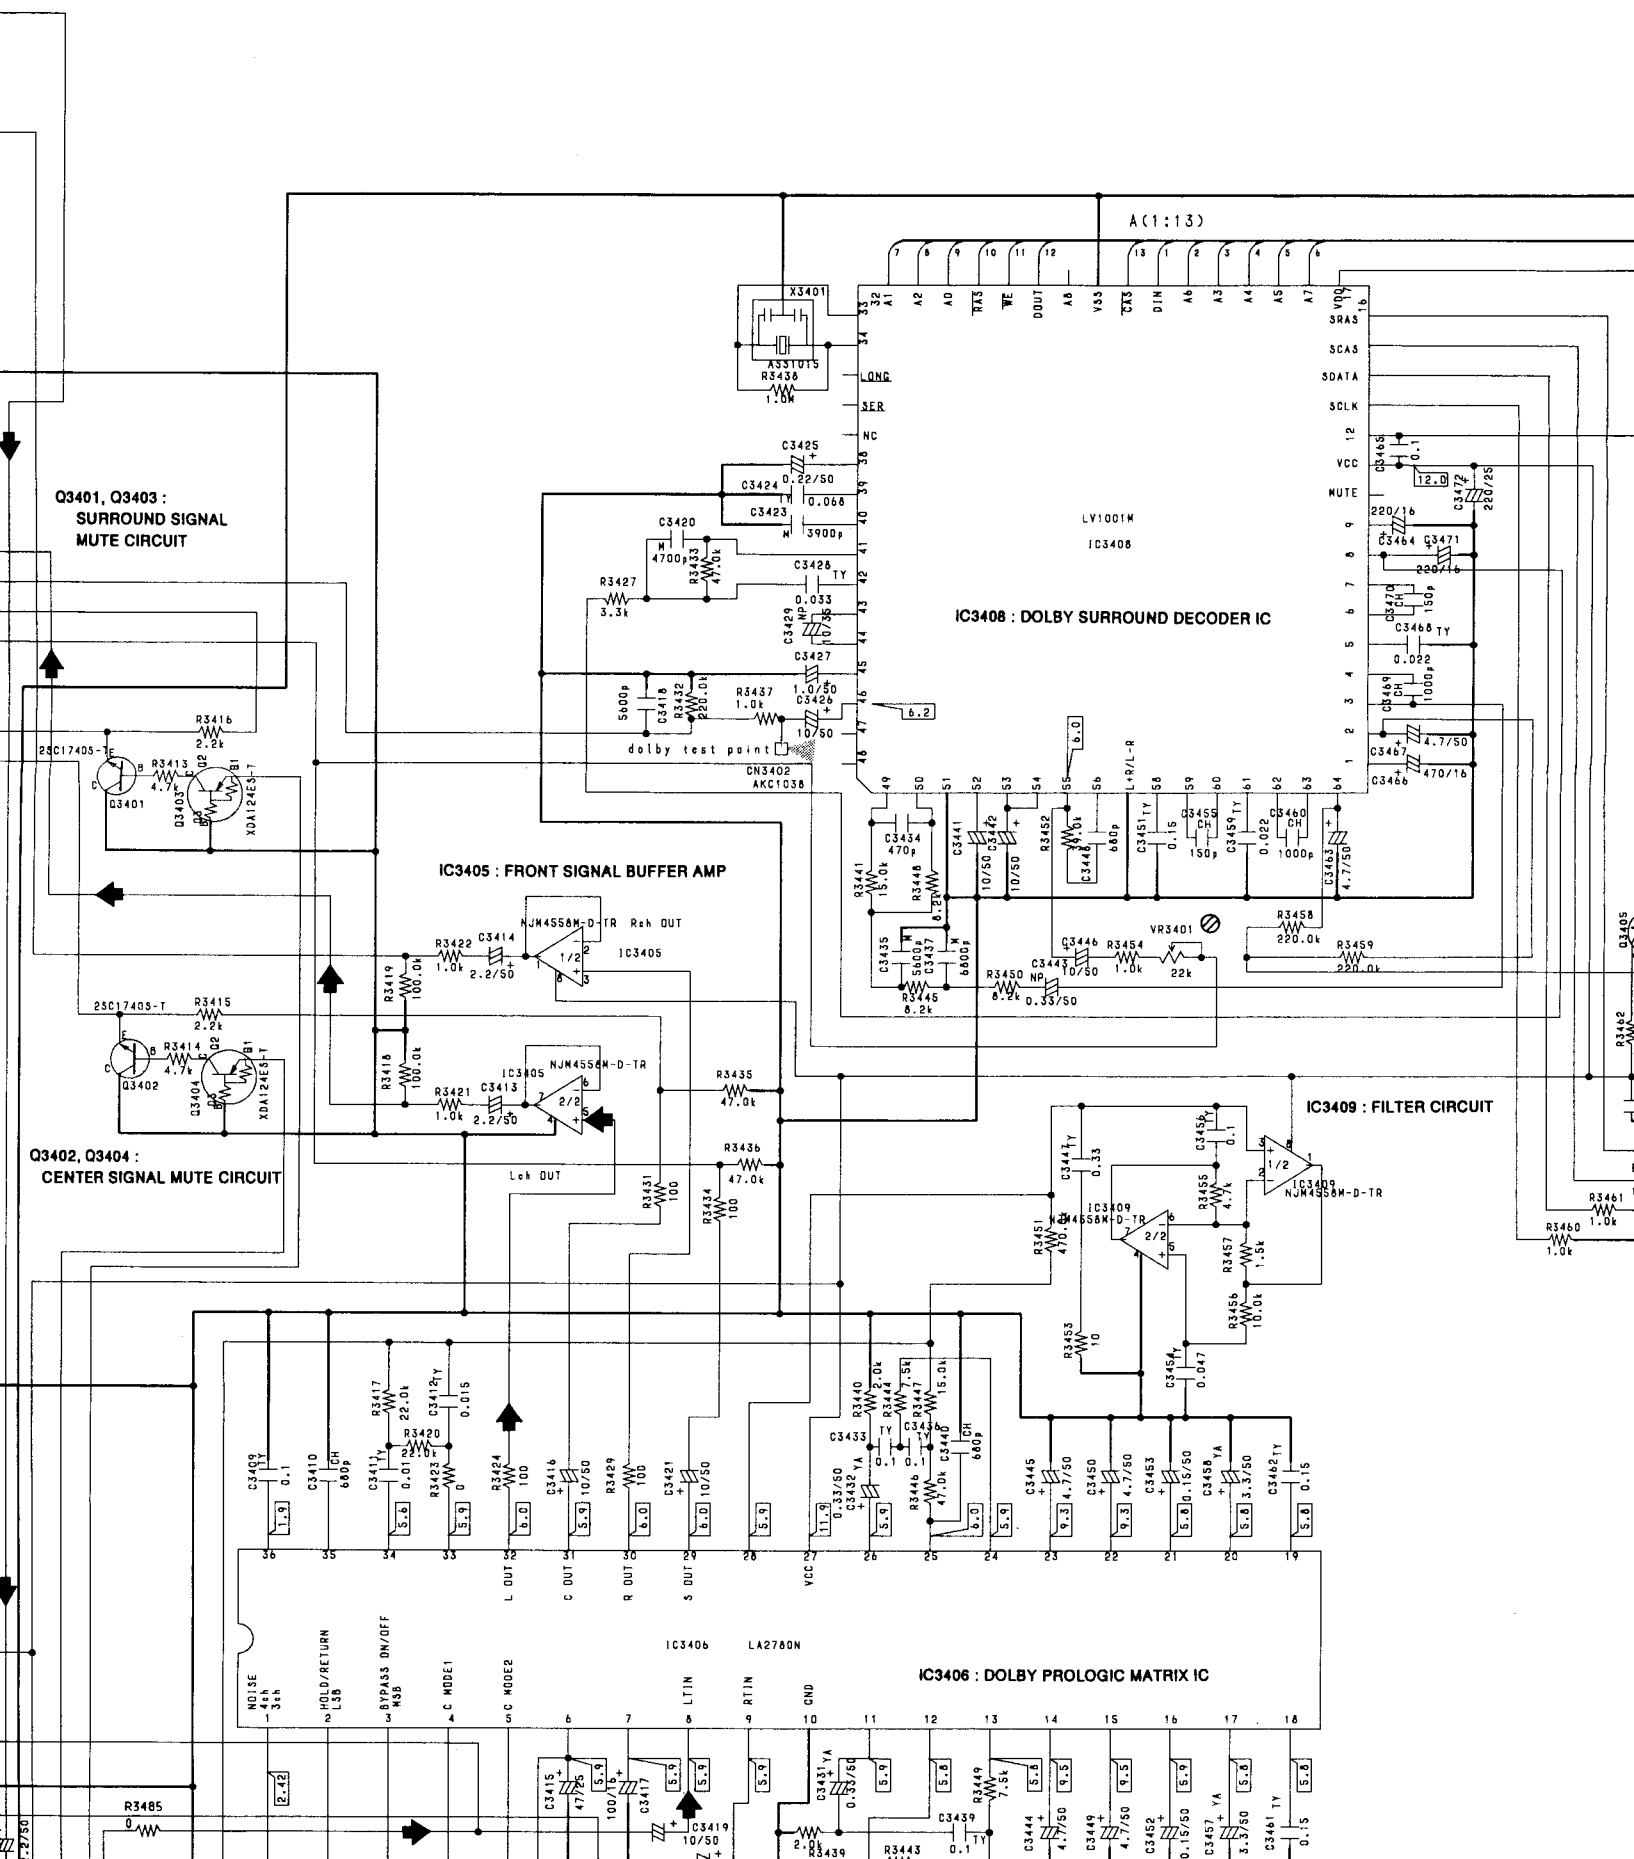

SCH-9

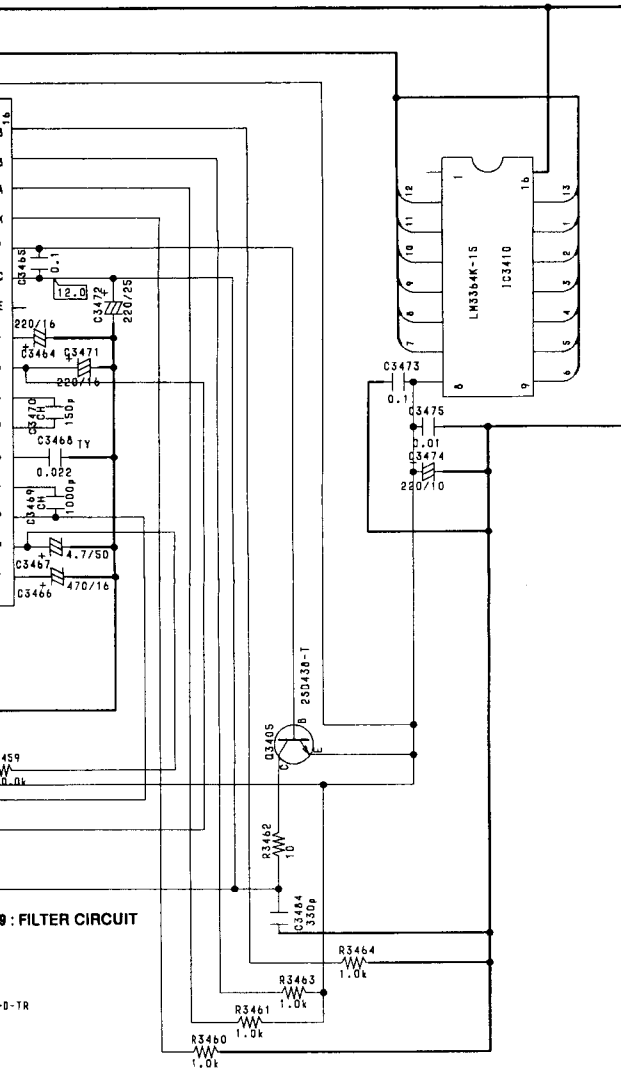

DELAY TIME 20ms

R3460,3464 --- "L"

R3461,3463 --- "H"


NOISE MODE1	NOISE MODE2	
H	H	3ch
H	L	4ch
L	H	4ch
L	L	NOISE


CENTER MODE1	CENTER MODE2	
L	L	NORMAL
H	L	PHANTOM
H	H	OFF


NOISE ch.SEL.1	NOISE ch.SEL.2	ch
L	L	Lch
L	H	Cch
H	L	Rch
H	H	Sch

(* NOISE MODE)

NOISE ch.SEL.1	
H	BYPASS OFF
L	BYPASS ON
NOISE ch.SEL.2	

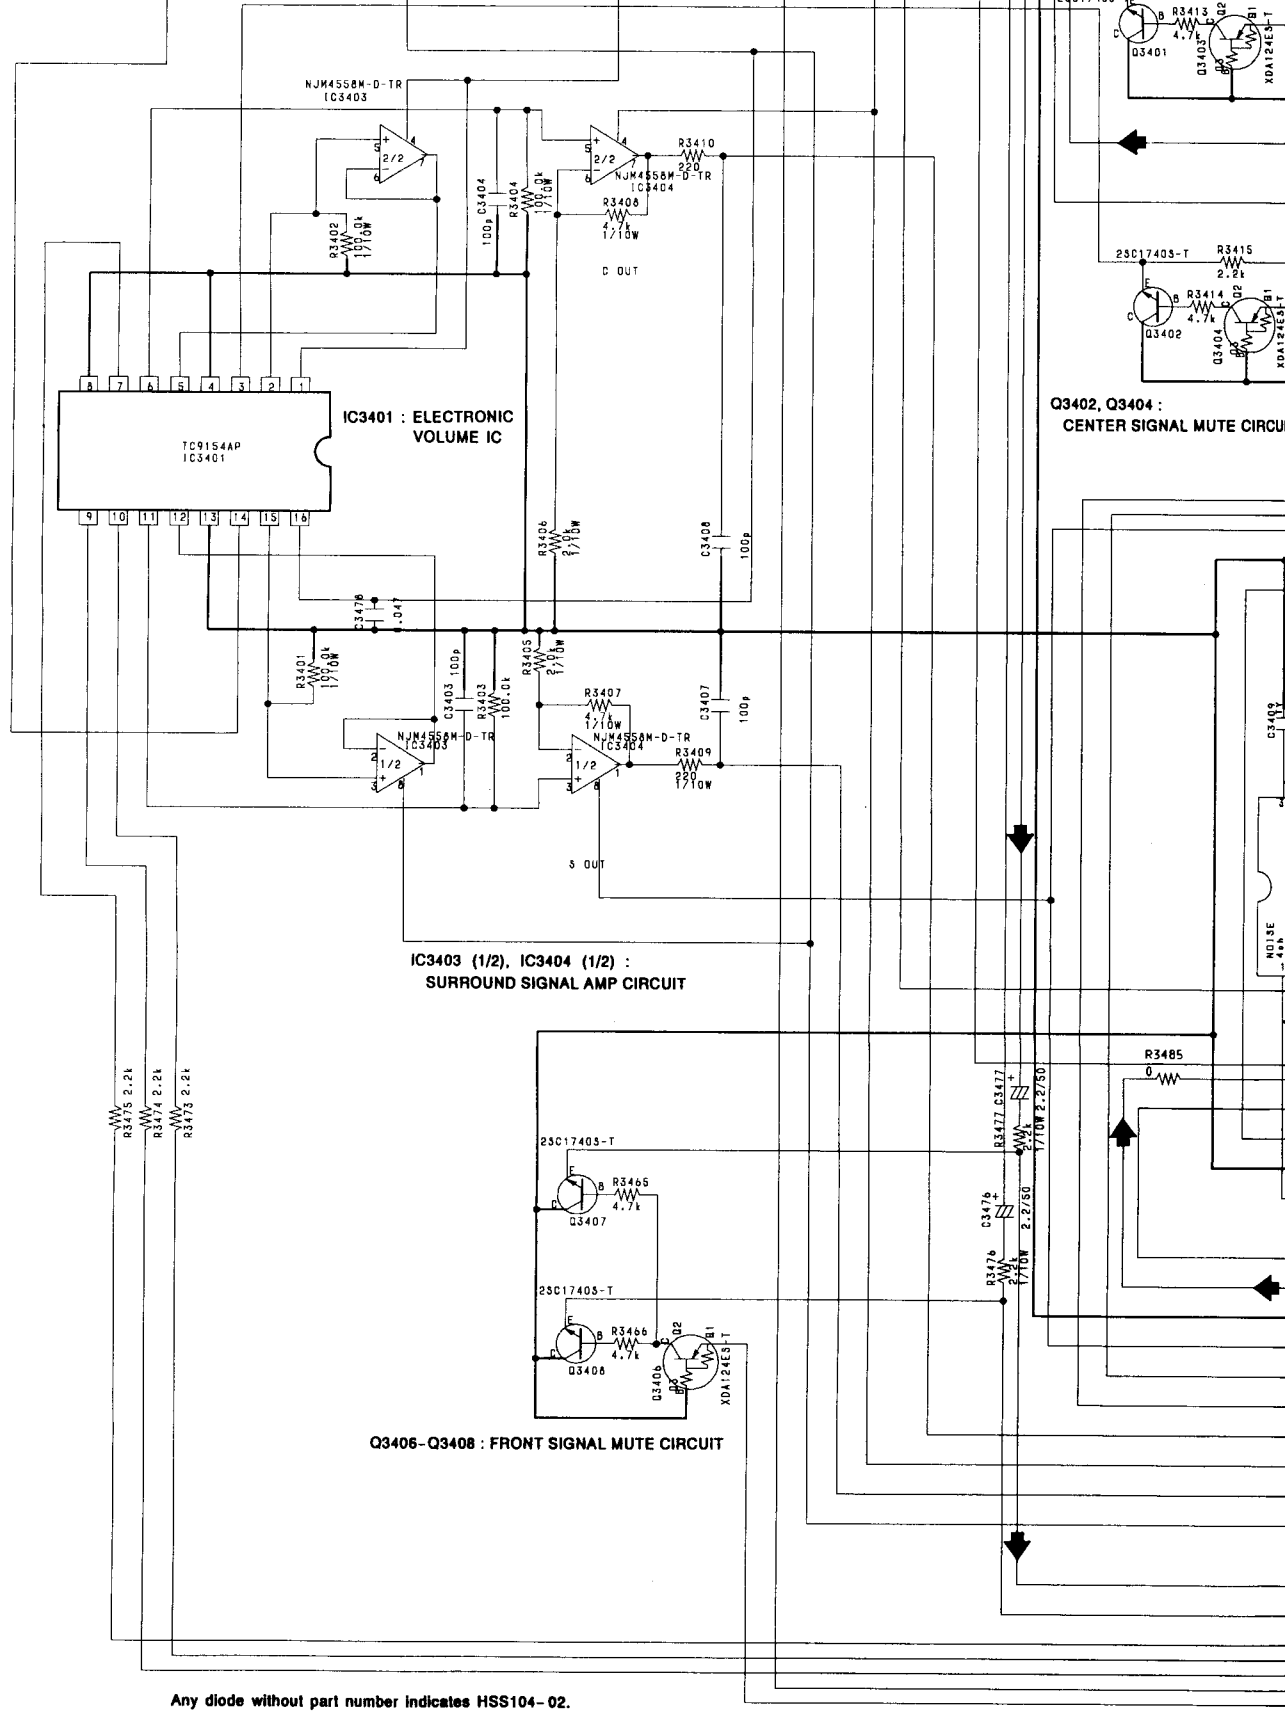

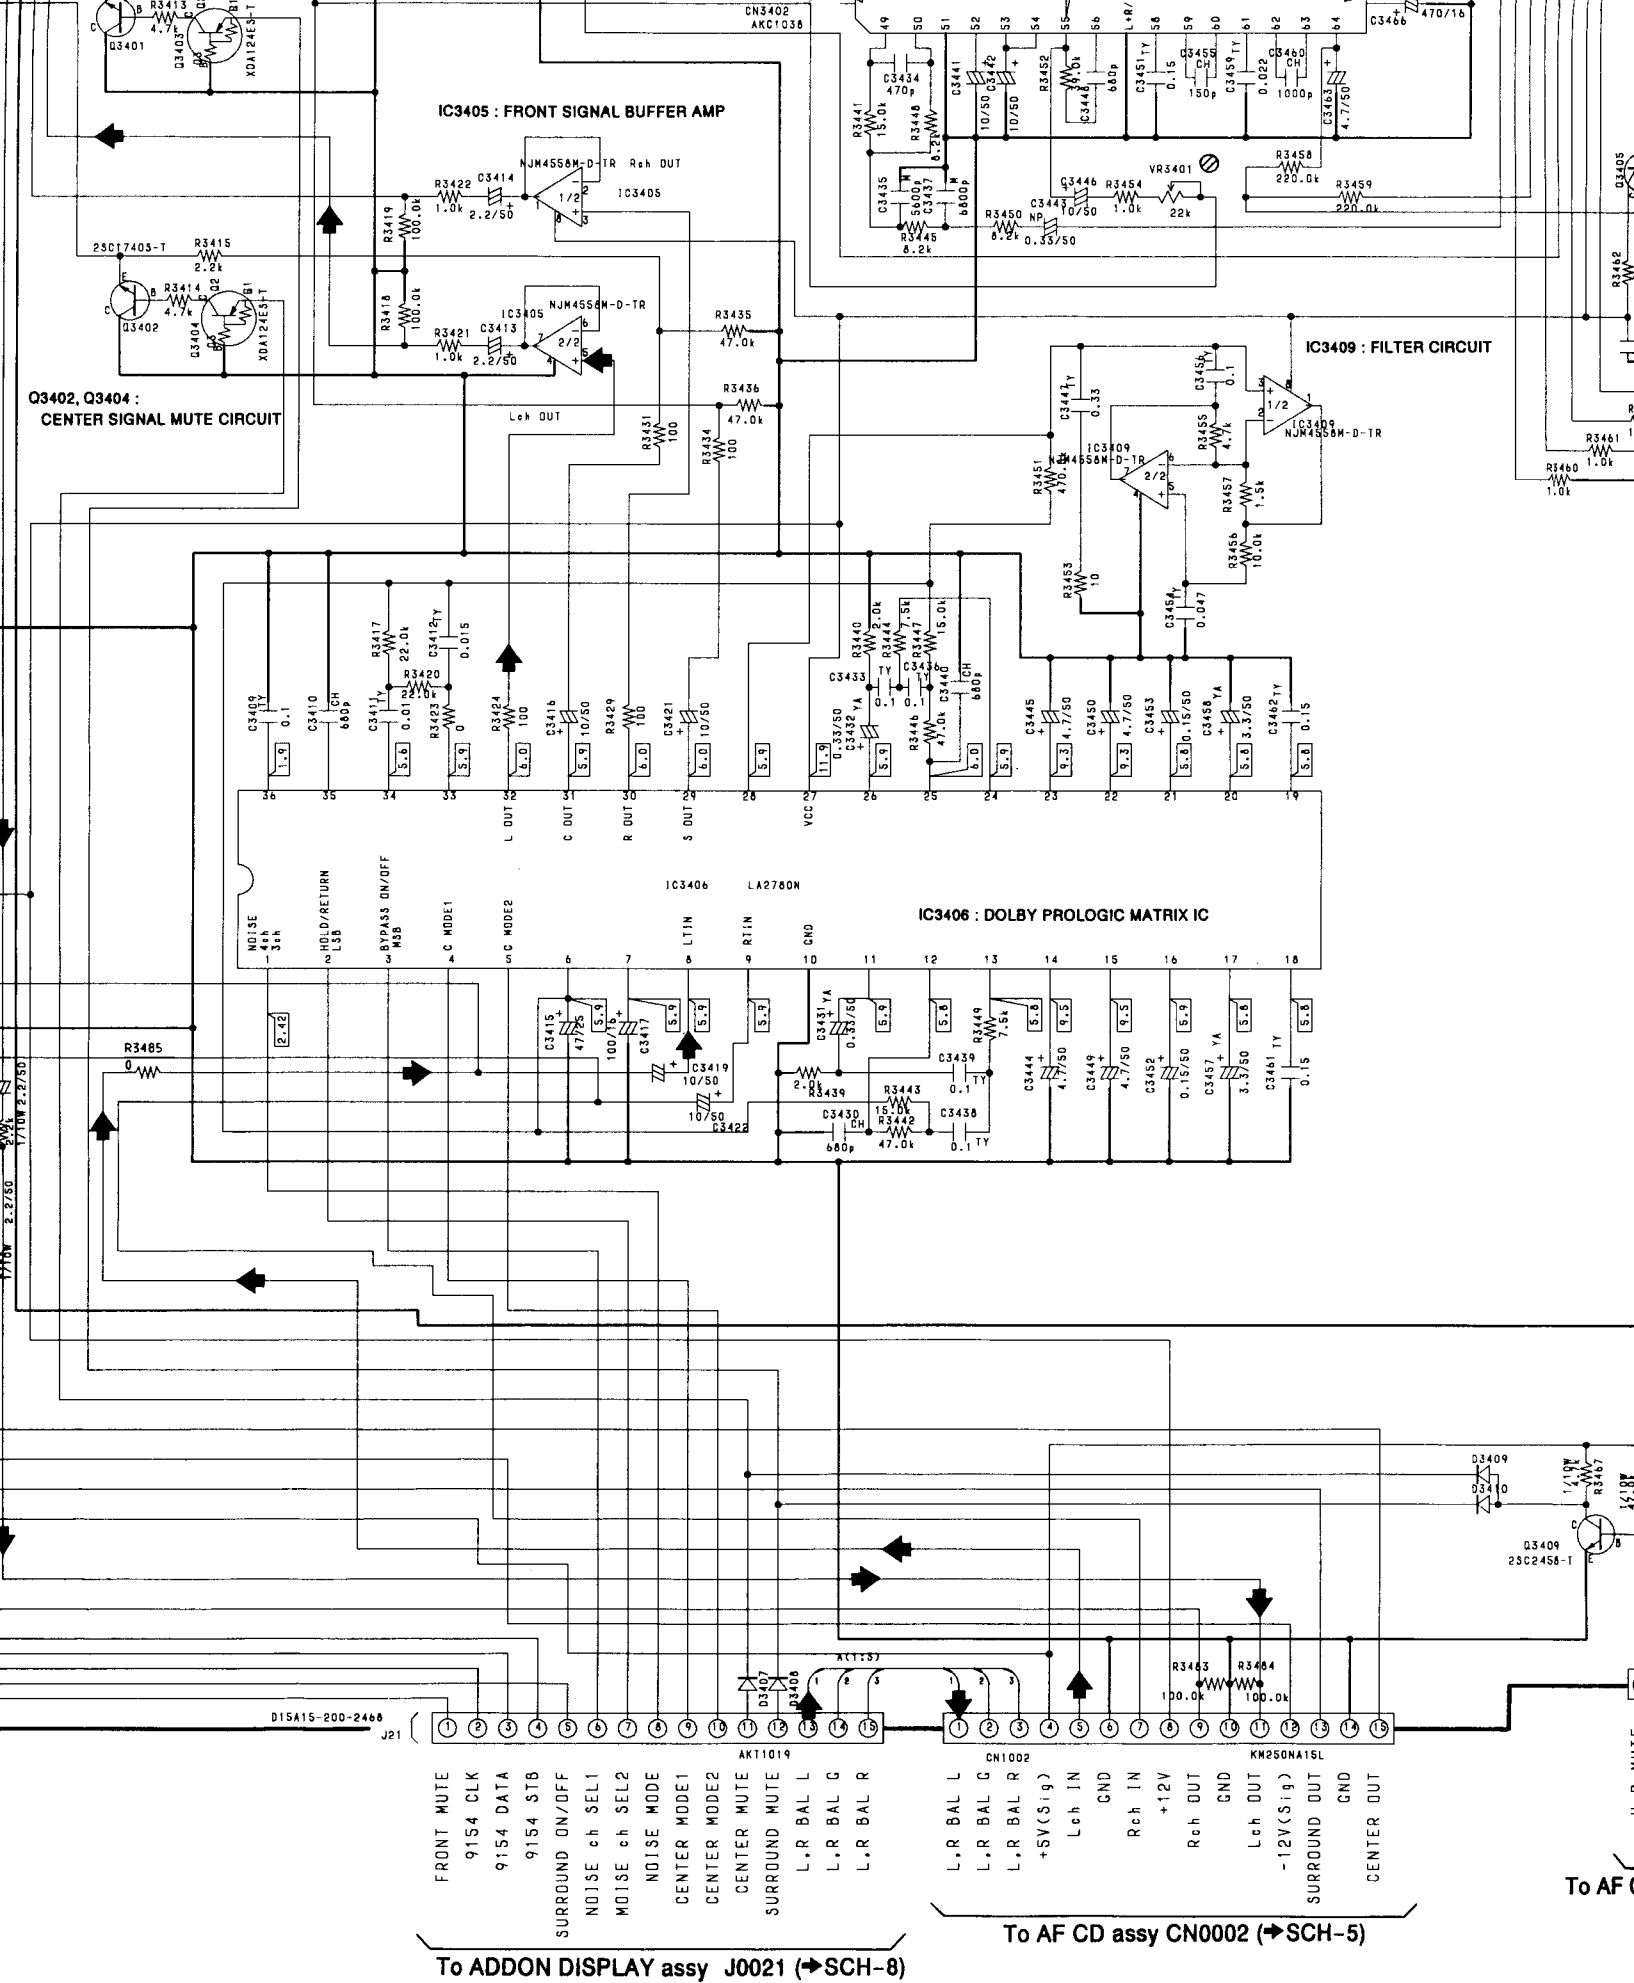

 

R3461,3463 --- "H"

(* 3.4ch MODE)


Rch (SURROUND)

A




C



D

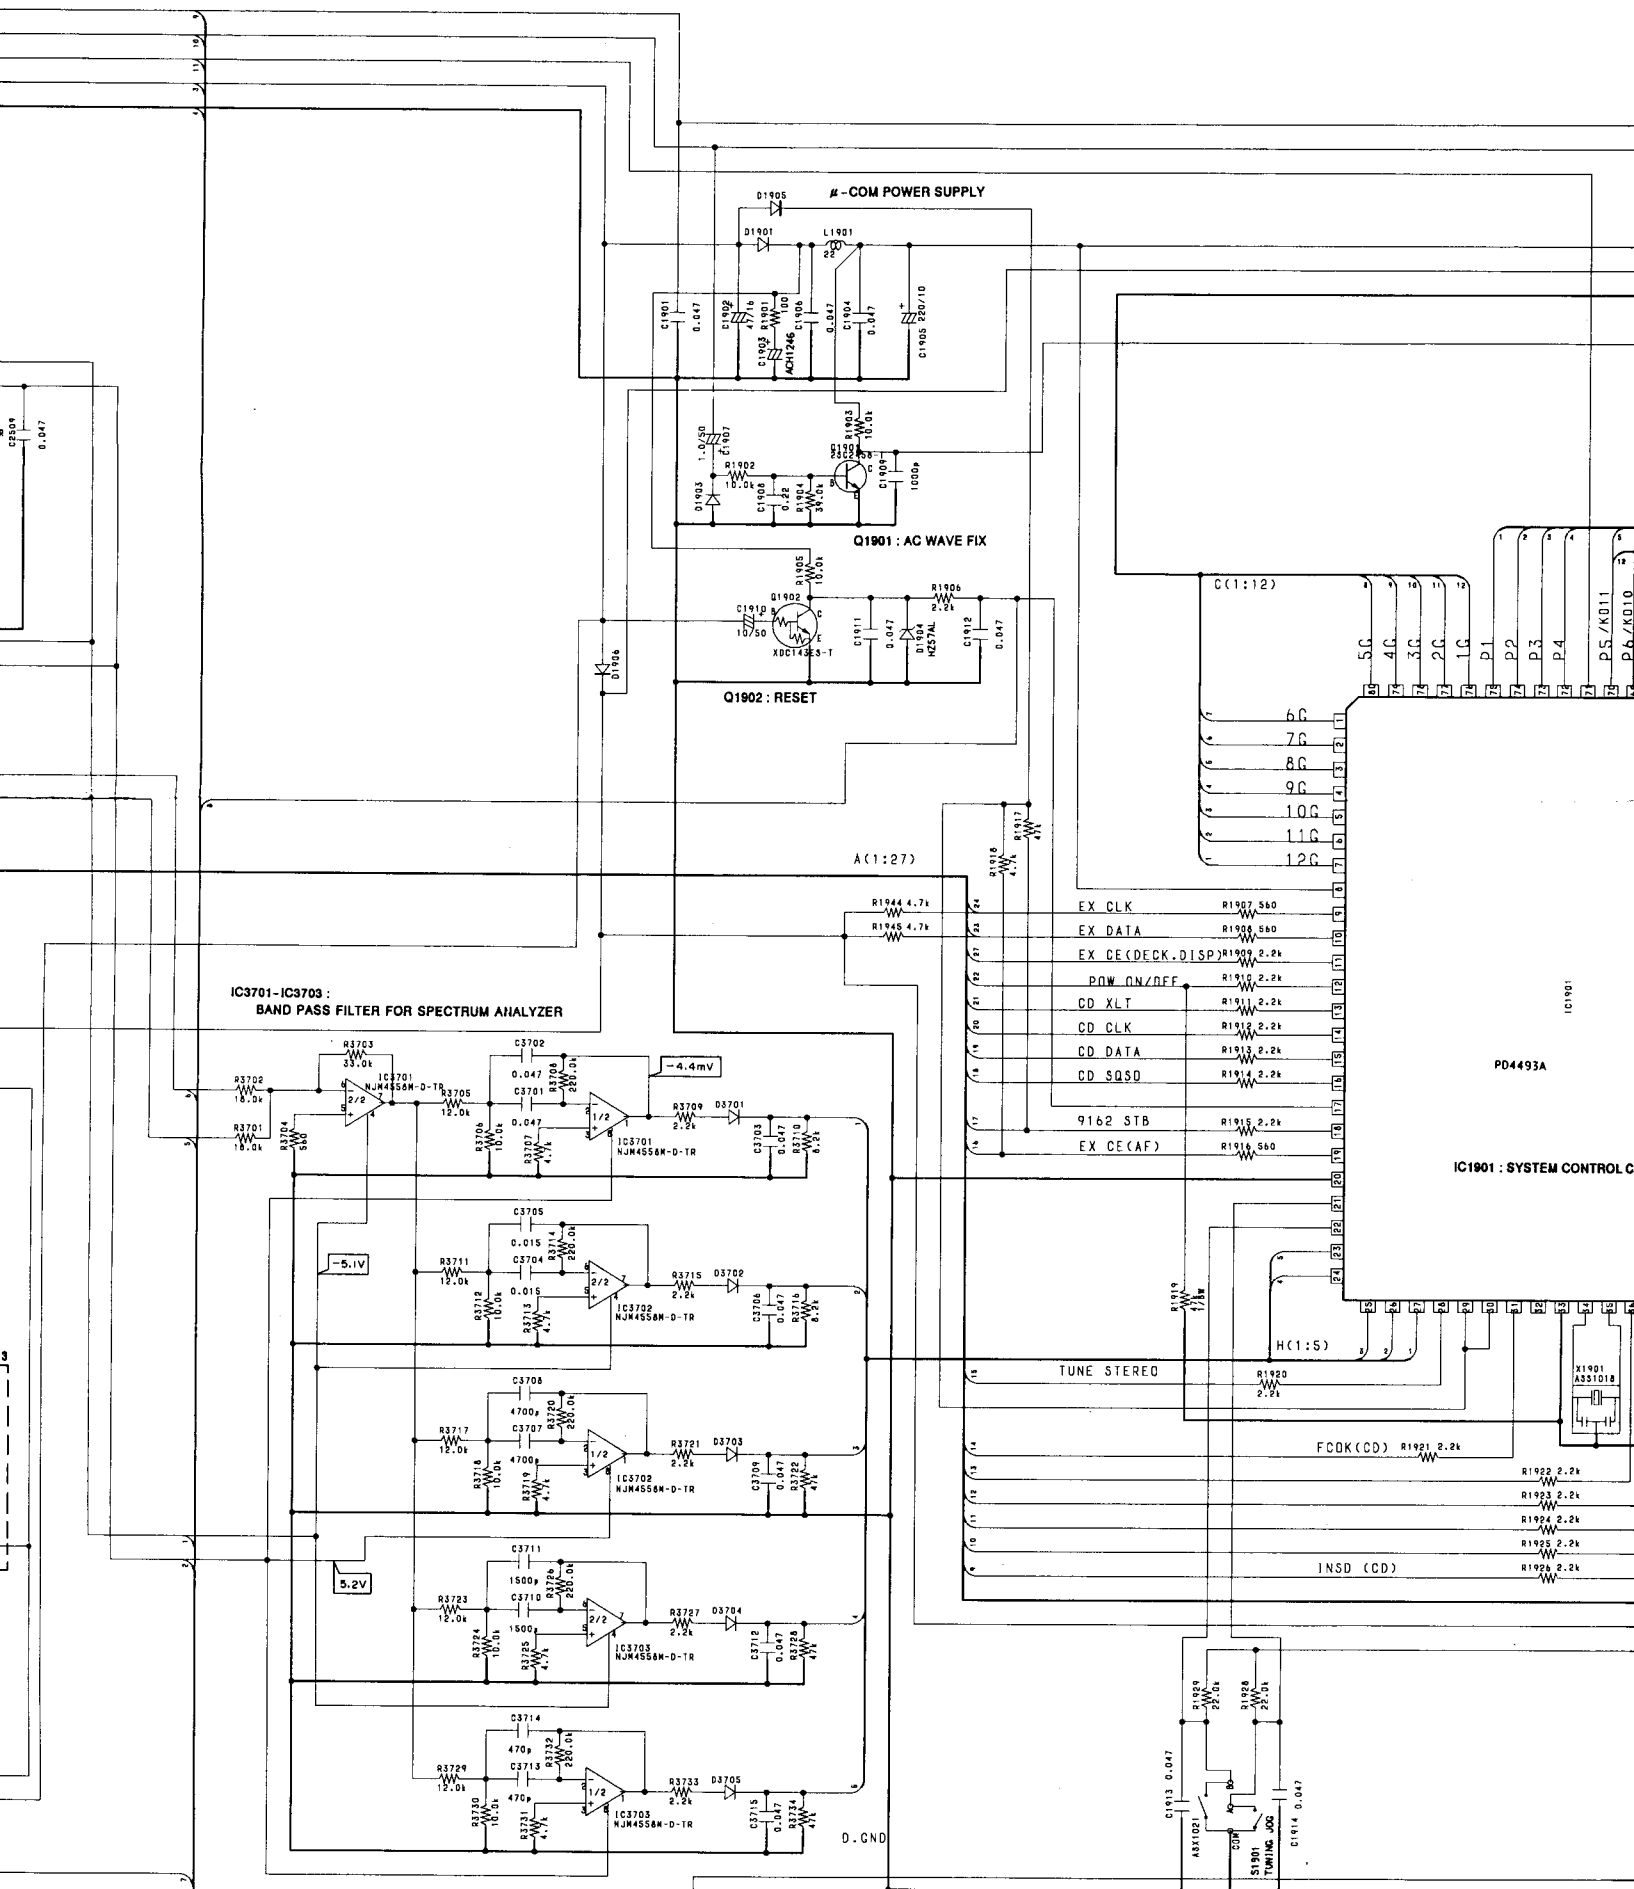

SCH-10

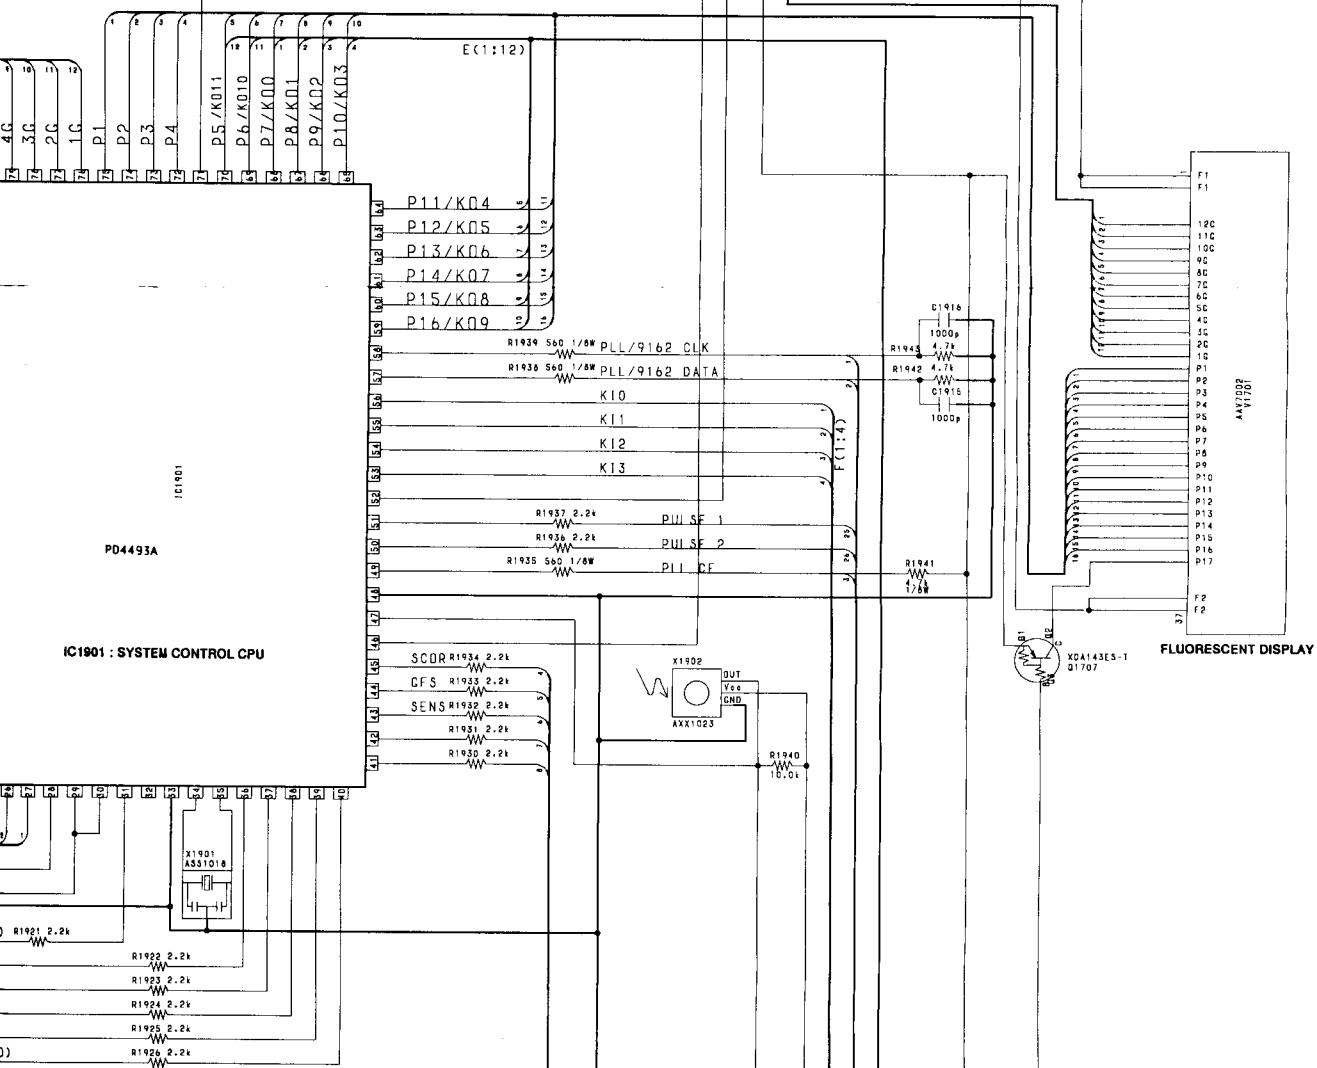



IC1901:PD4493A (XR-P740M, XR-P640M, XR-P340M)
PD4492A (XR-P740, XR-P640, XR-P340)

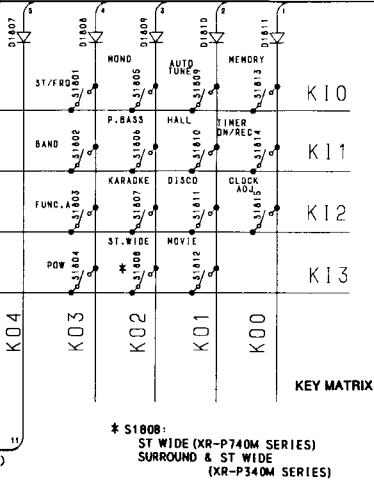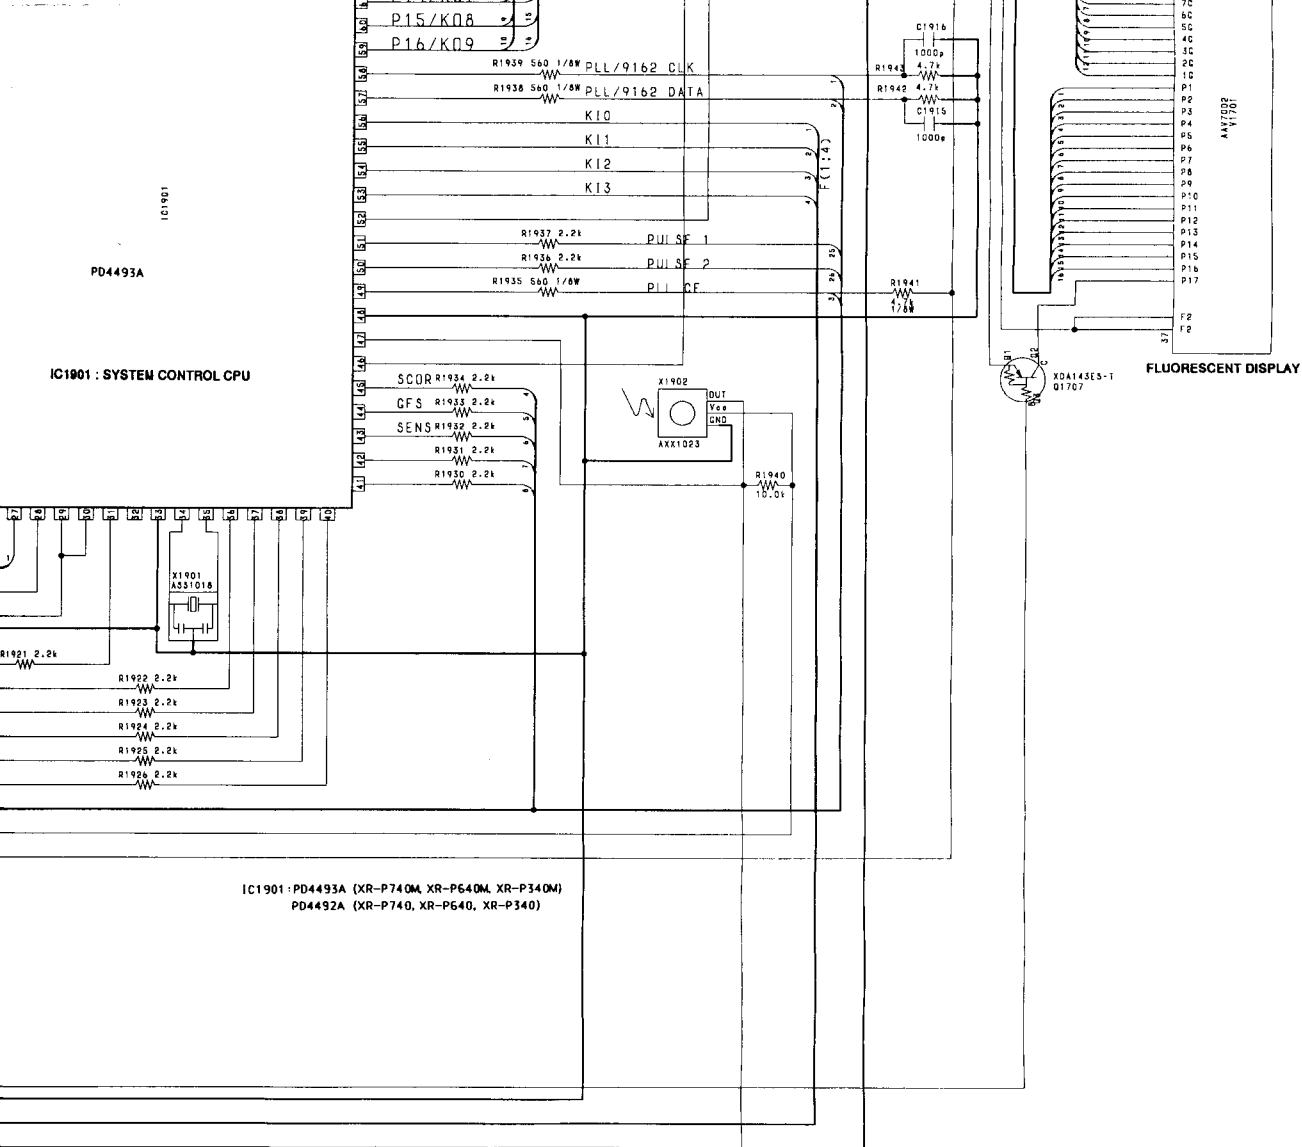

number indicates HSS104-02.

SCH-10

DISPLAY ASSY, CD DECK SW ASSY

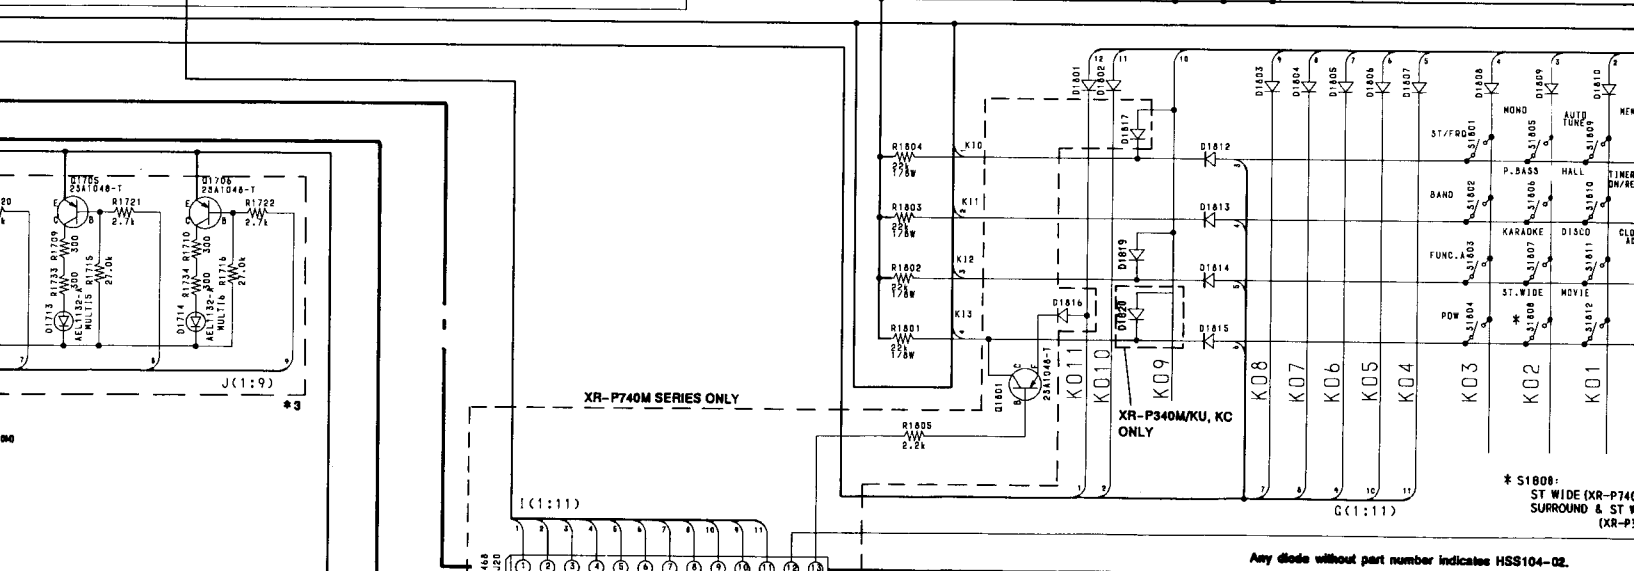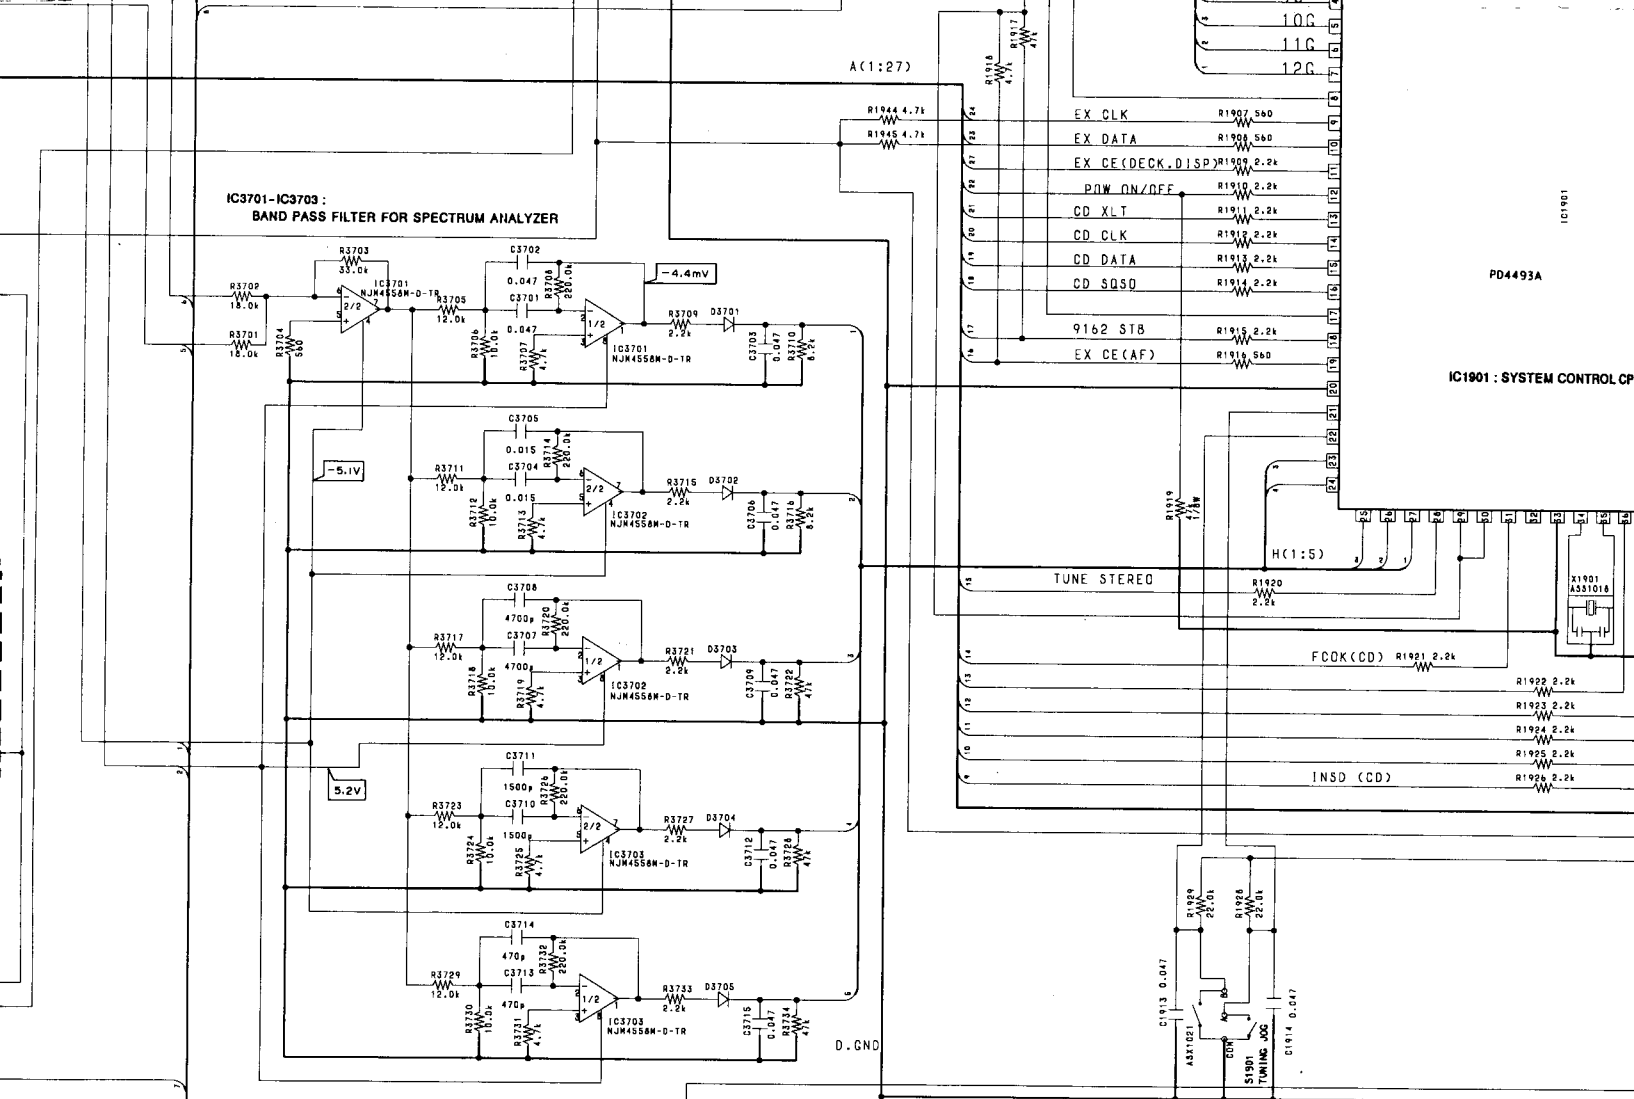

Q1701

Q1702

- A • This diagram is viewed from the mounted parts side.

XR-P740M Series indicates models XR-P740M/SD, YPW, XR-P740/SD, XR-P640M/SD, YPW and XR-P640/SD.
XR-P340M Series indicates models XR-P340M/KU, KC, SD, YPW, XR-P340/SD and YPW.

CD DECK SW assy

XR-P740M, XR-P640M, XR-P340M ONLY

DISPLAY assy

To ADDON DISPLAY assy CN20

To AF CD assy CN1

XR-P740M SERIES ONLY

XR-P740, XR-P640,
XR-P340 ONLYXR-P740M, XR-P640M,
XR-P340M ONLY

VR2501

Q1902

IC2501

IC1951

IC3701

IC3702

IC3703

IC1901

Q1707

Q1801

Q1901




XR-P740,XR-P640,
XR-P340 ONLY

**XR-P740M
SERIES ONLY**

XR-P740M SERIES ONLY

ANP7002-D

- To DECK unit CN3002

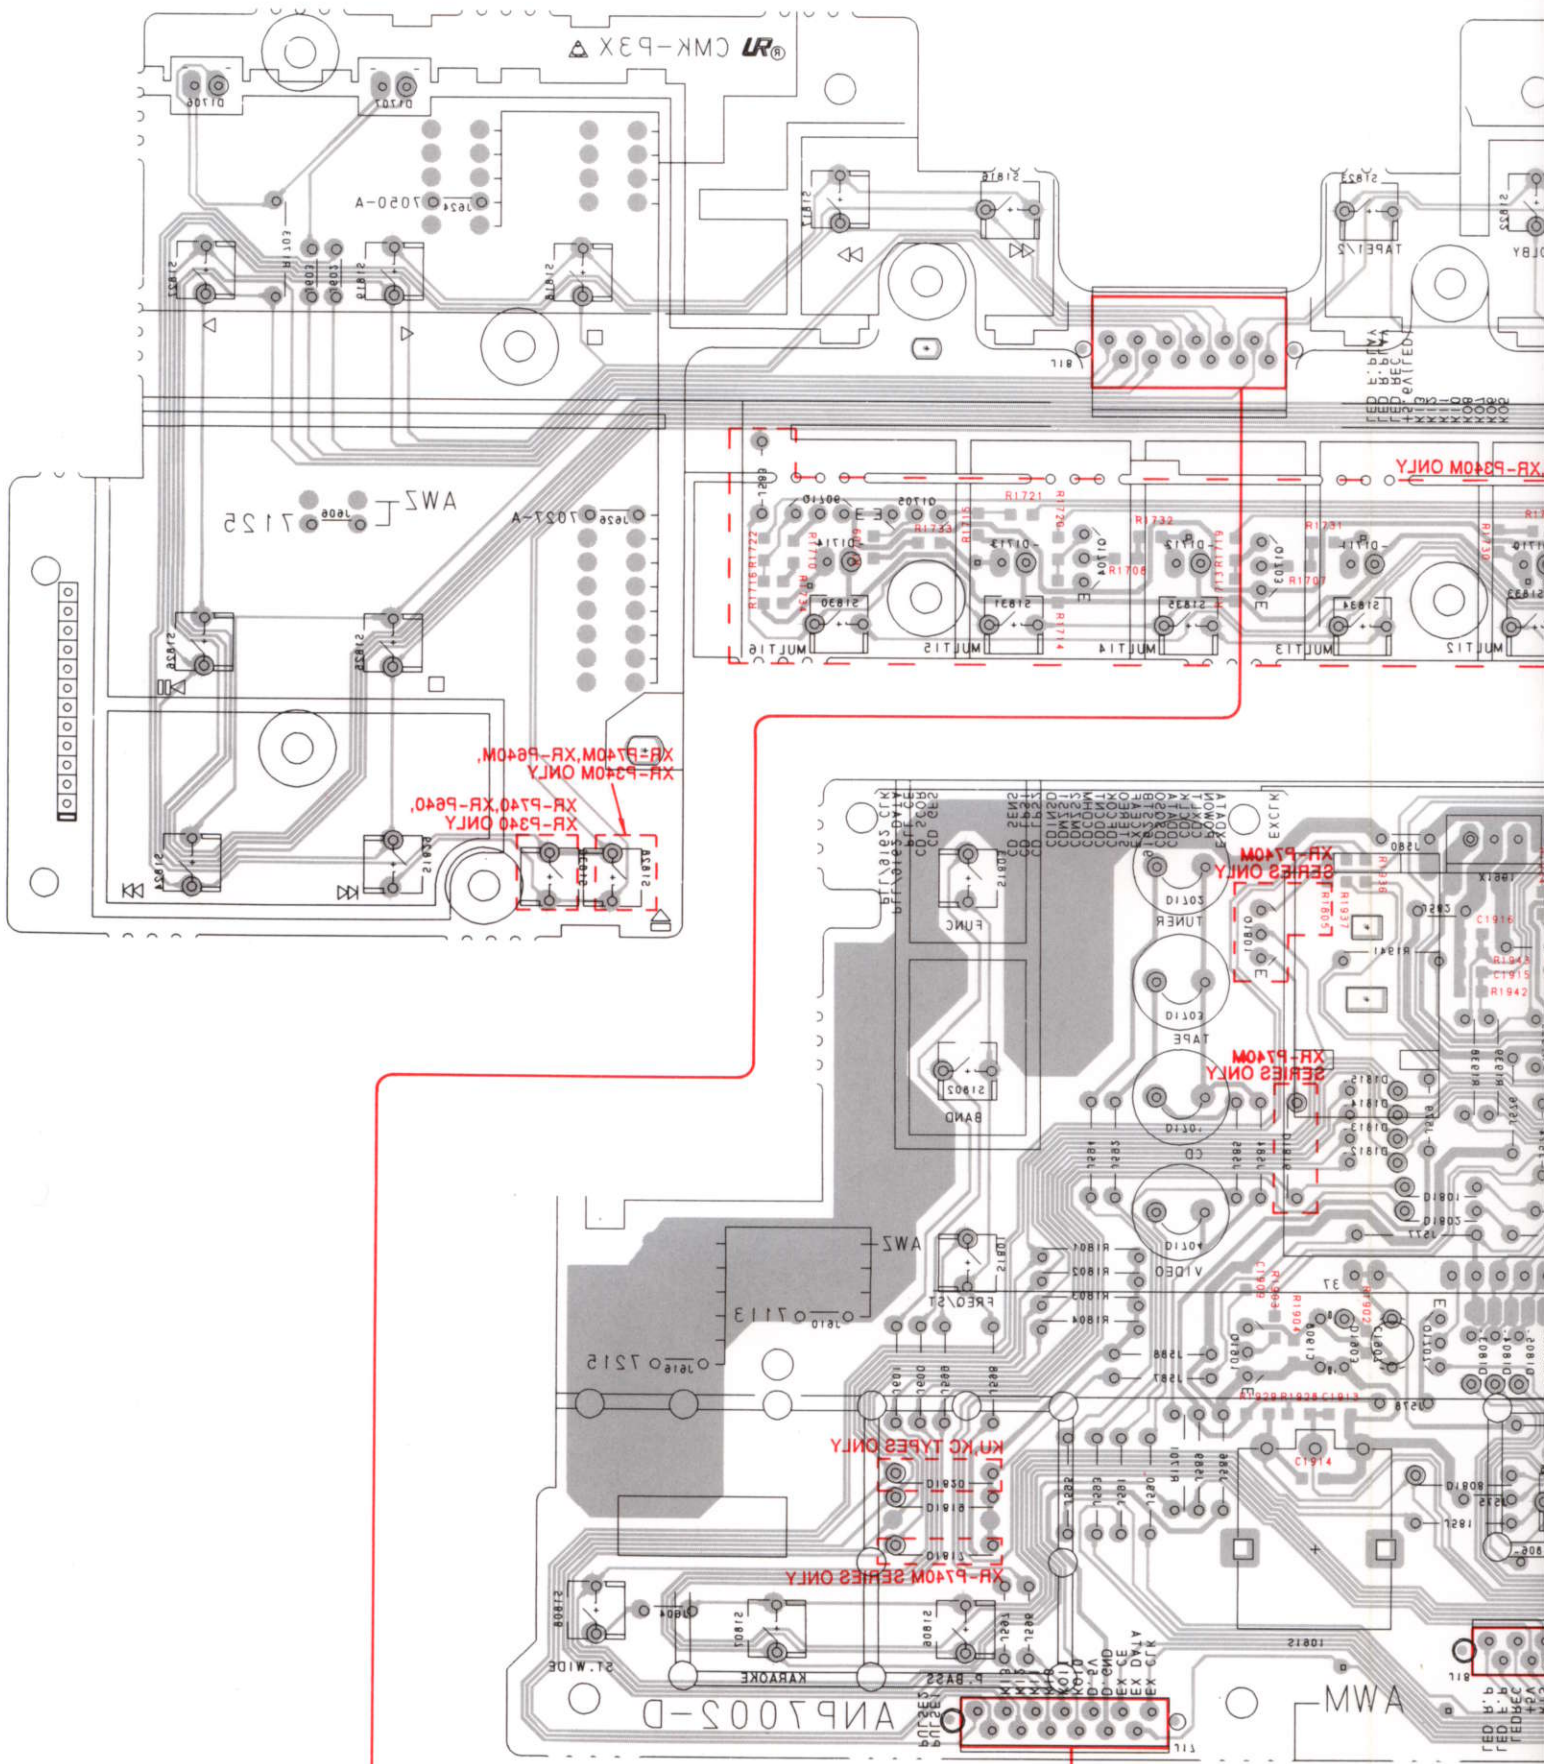

DOL SURR ASSY

● This diagram is viewed from the foil side.

IC340B

Q3403

Q3404

IC340A

IC340B


IC340B

IC3401

Q3402

Q3405

IC340B

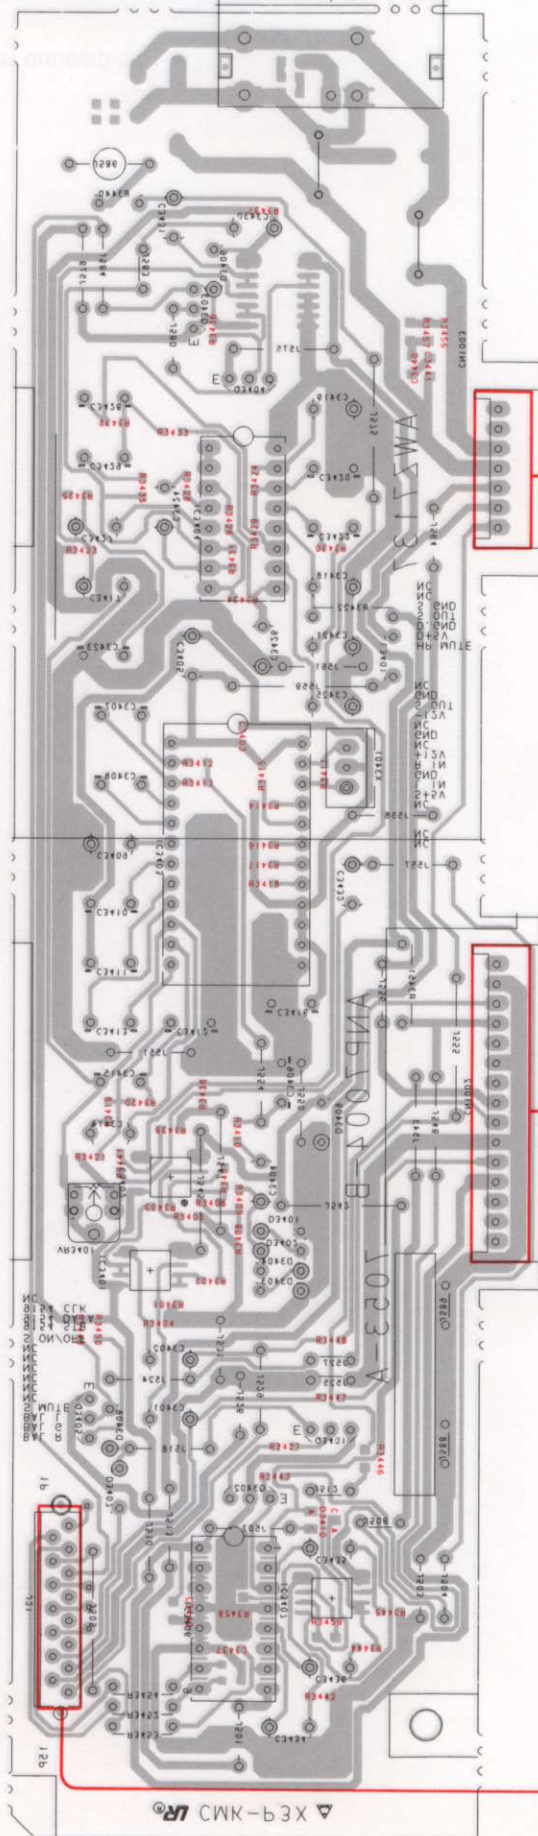

To ADDON DISPLAY Assy 151

To AF CD Assy C15

To AF CD Assy C13

A


- B



D

CMK-P3X

DOL SURR assy (AWZ7137)

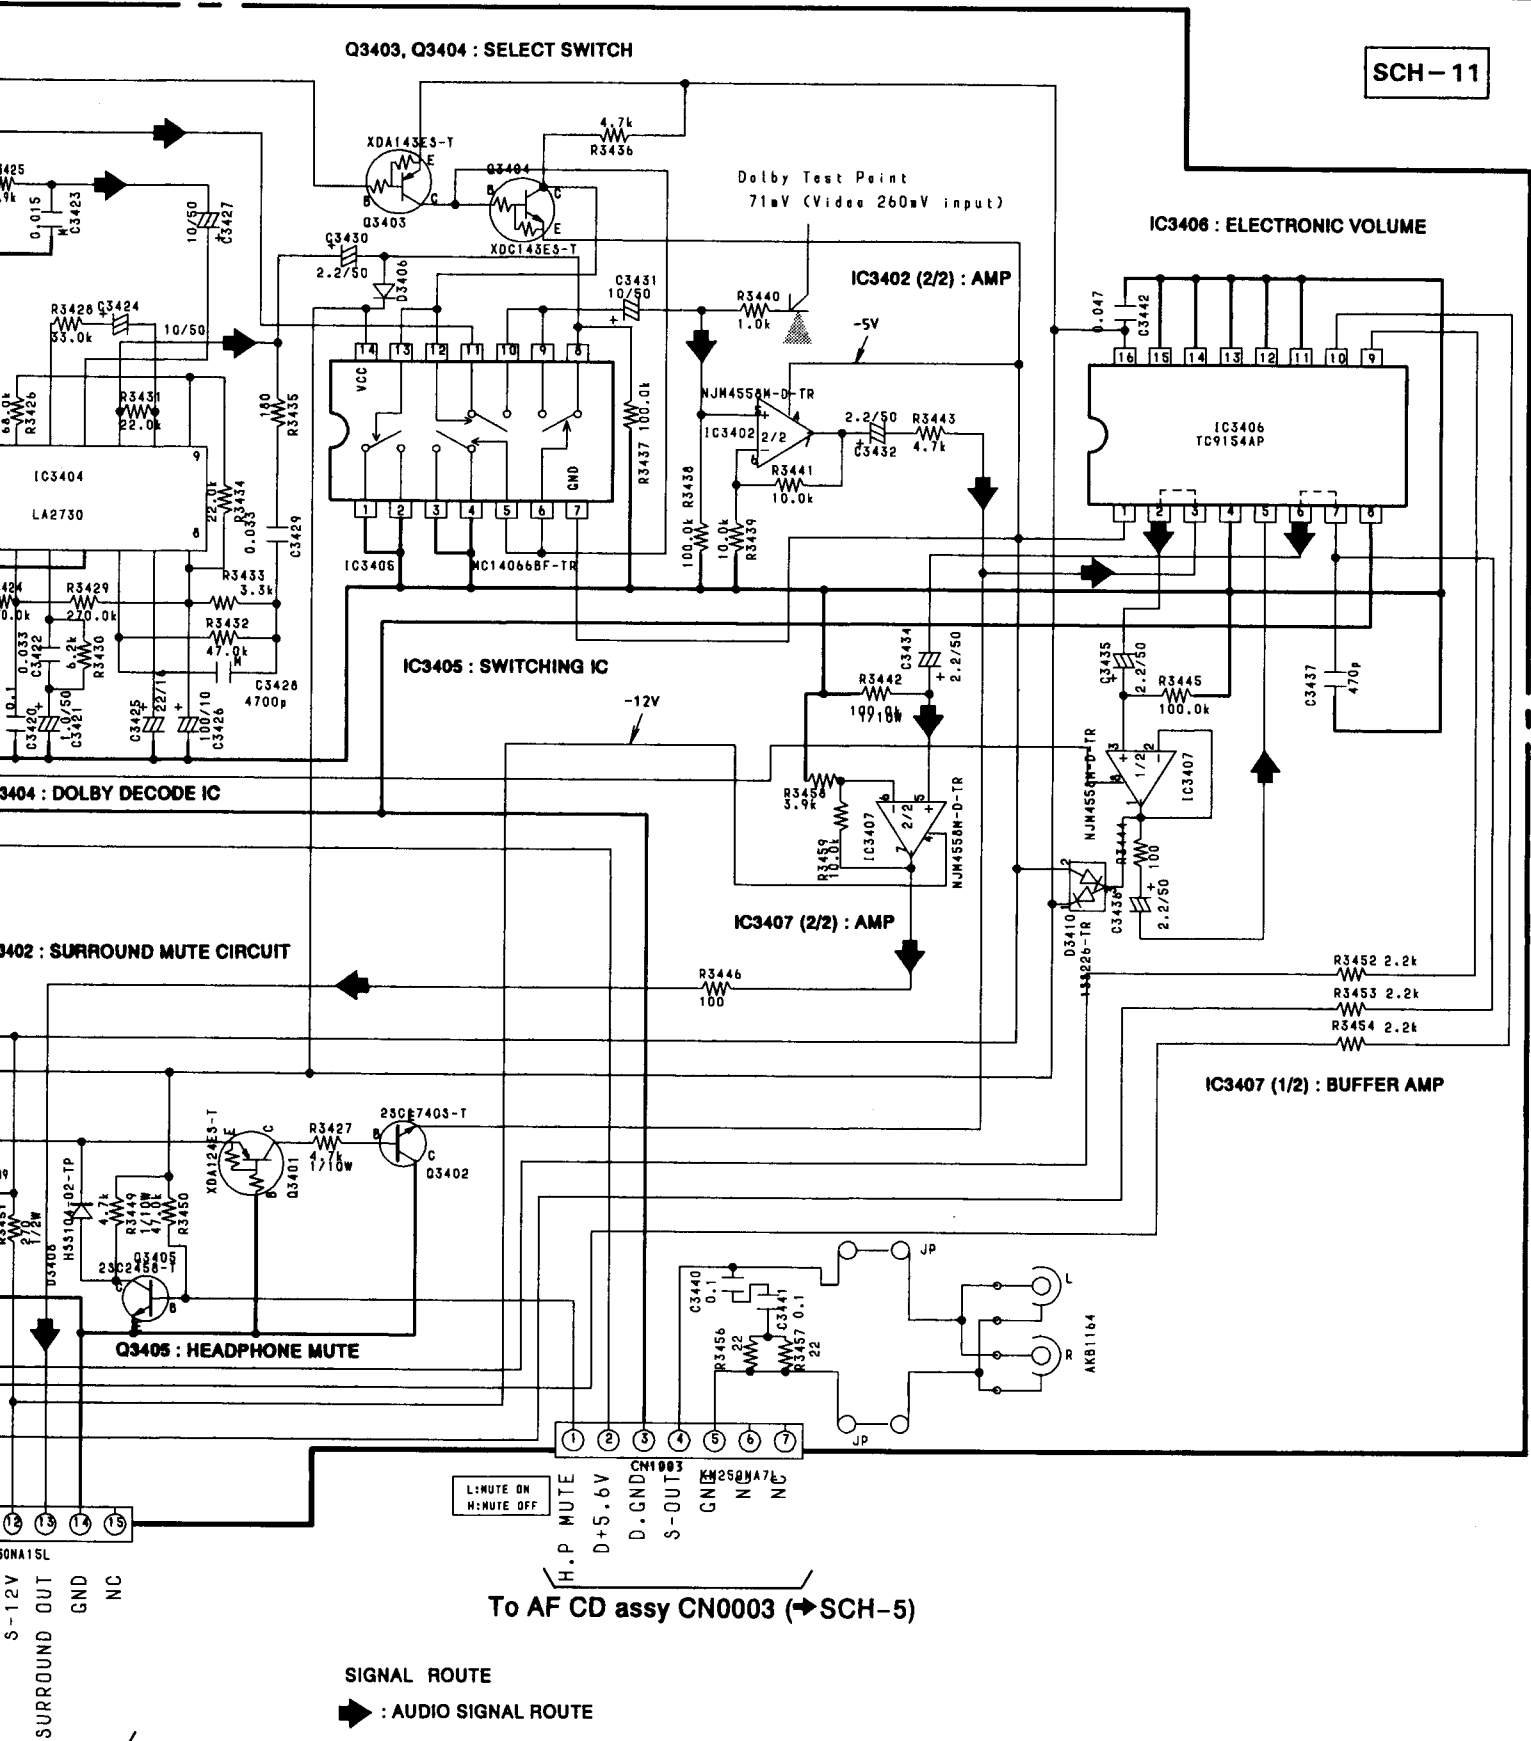

SCH-5)

SCH-11