


SAMSUNG

RADIO CASSETTE RECORDER CD PLAYER

RCD-750

SERVICE *Manual*

RADIO CASSETTE RECORDER CD PLAYER

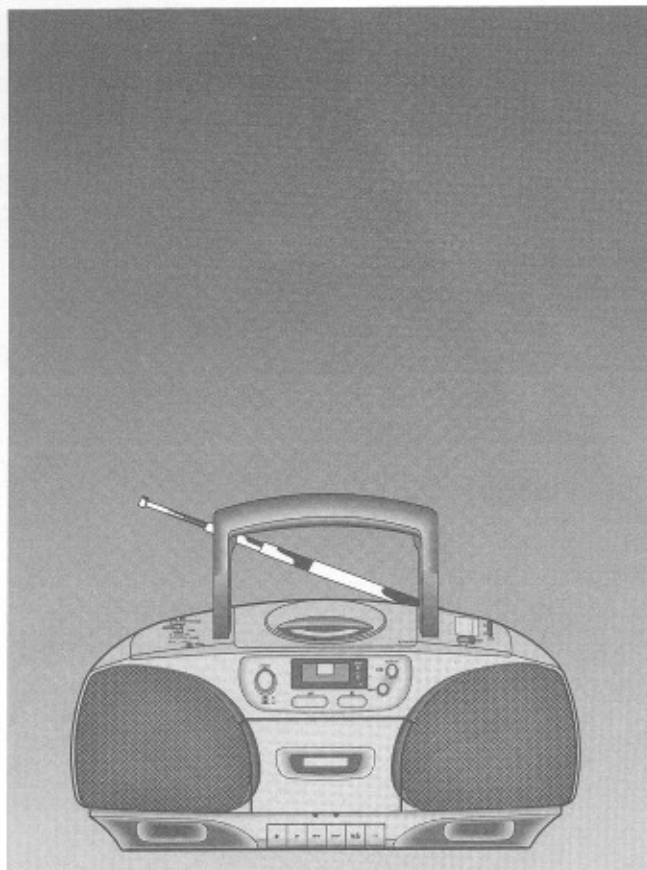


CONTENTS

1. Precaution	1~9
2. Specification	10
3. Location of controls	11~12
4. Disassembly instruction	13~14
5. Basic circuit operation	15~25
6. Troubleshooting	26~30
7. Adjustment	31~37
8. Block diagram	38~39
9. Exploded view & parts list	40~44
10. Schematic diagram	45~46
11. PCB Pattern and Marking diagram	47~49
12. Wiring diagram	50
13. IC & TR internal diagram	51~55
14. Electrical parts list	56~62
15. List of abbreviation	63

● Design and specification are subject to change upon improvement without prior notice.


4-3. How to disassemble back-cabinet (FIG.3)


- 4-3-1. Release the 6 screws ① and 1 screws ②.
- 4-3-2. Remove the knob volume ③ & knob tone ④.
- 4-3-3. Disconnect connecting wires & take out.
- 4-3-4. Remove main chassis ass'y ⑤ from the back cabinet.
- 4-3-5. Remove the holder P/T ⑥ & P/T PCB ⑦.

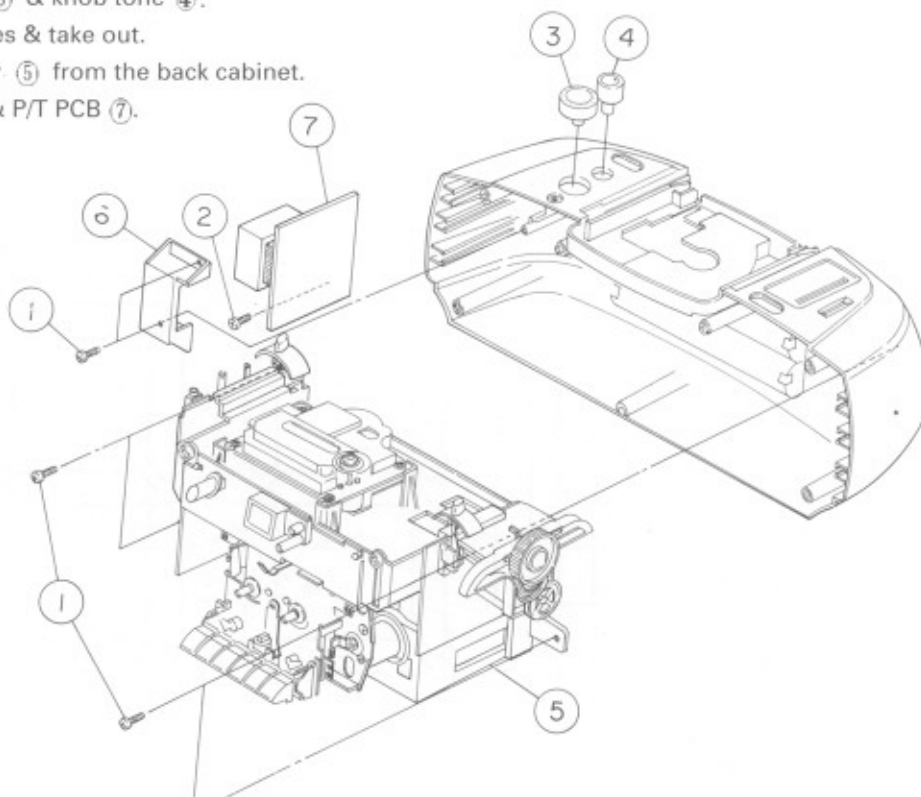

4-4. How to disassemble Chassis (FIG.4)


- 4-4-1. Release the 4 cd shafts ①.
- 4-4-2. Release the 9 screws ②.
- 4-4-3. Release the 1 screw ③.
- 4-4-4. Disconnect connection wires & take out
- 4-4-5. Remove 4 cd rubber ④ from the cd deck.
- 4-4-6. Remove the cassette deck ⑤.
- 4-4-7. Remove the latch ass'y ⑦ & leaf switch ⑧.
- 4-4-8. Remove the front PCB ⑨, main PCB ⑩, tuner PCB ⑪ and CD PCB ⑫.

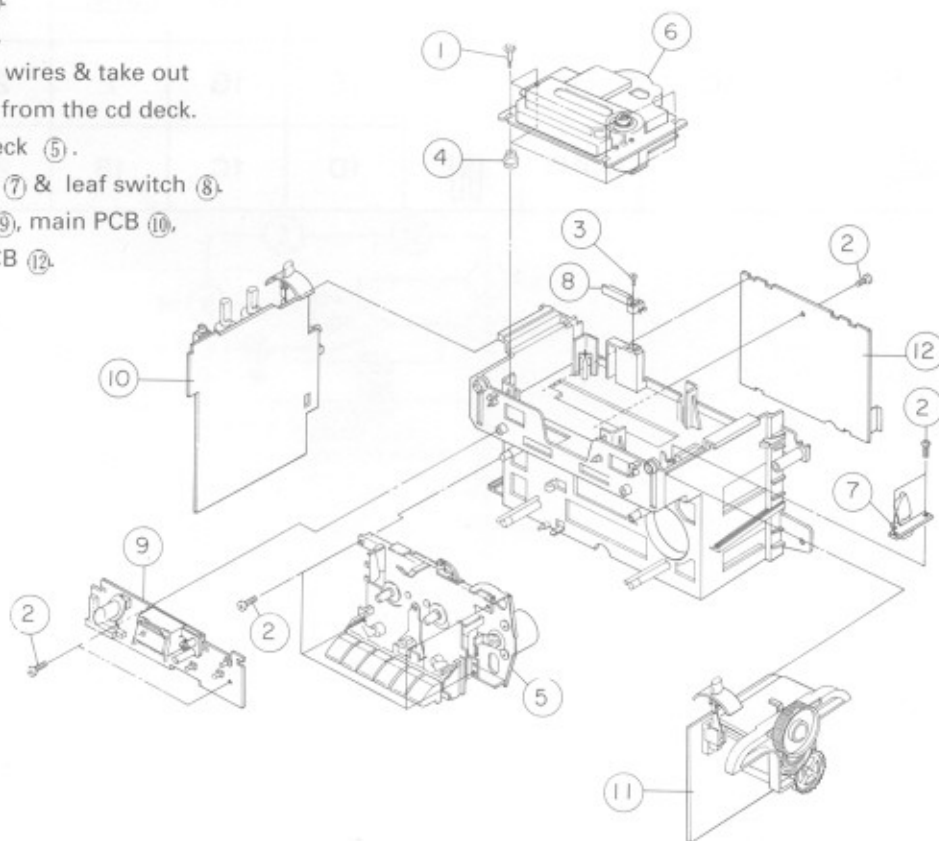


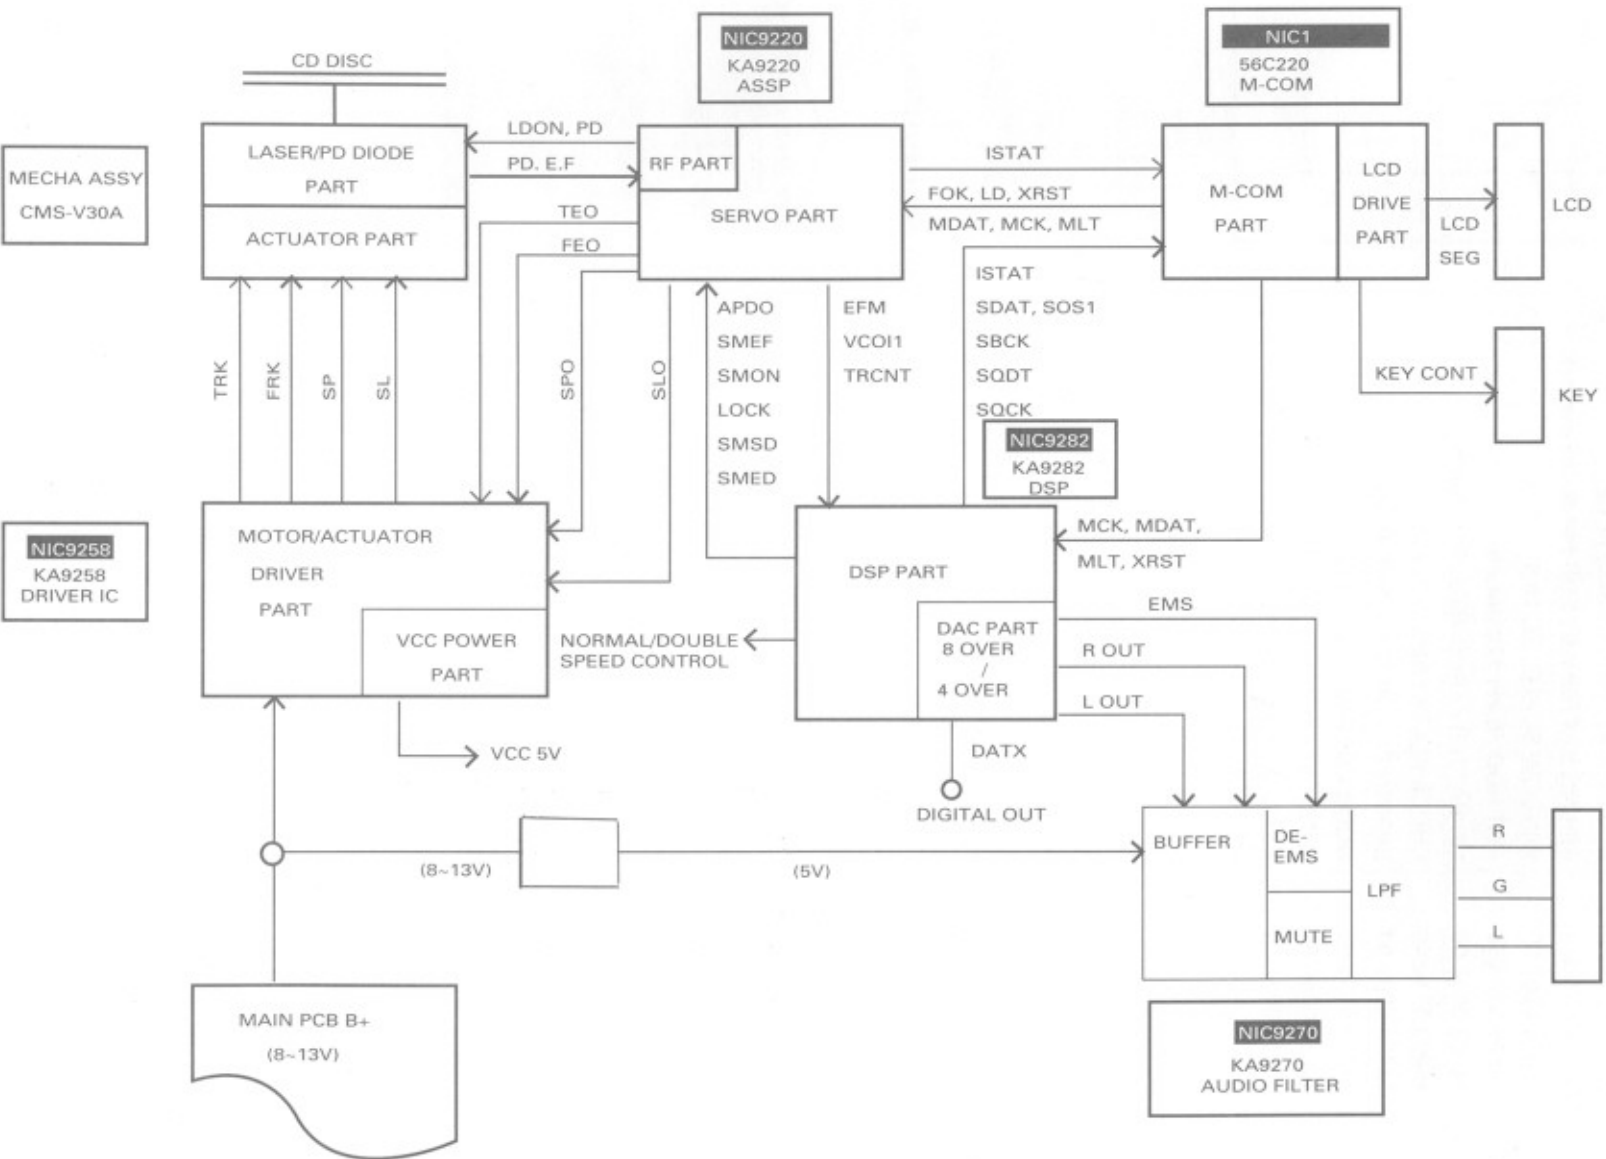

No.	
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	
31	
32	
33	
34	
35	
36	
37	
38	


9-1-2. Exploded view (RCD-750)

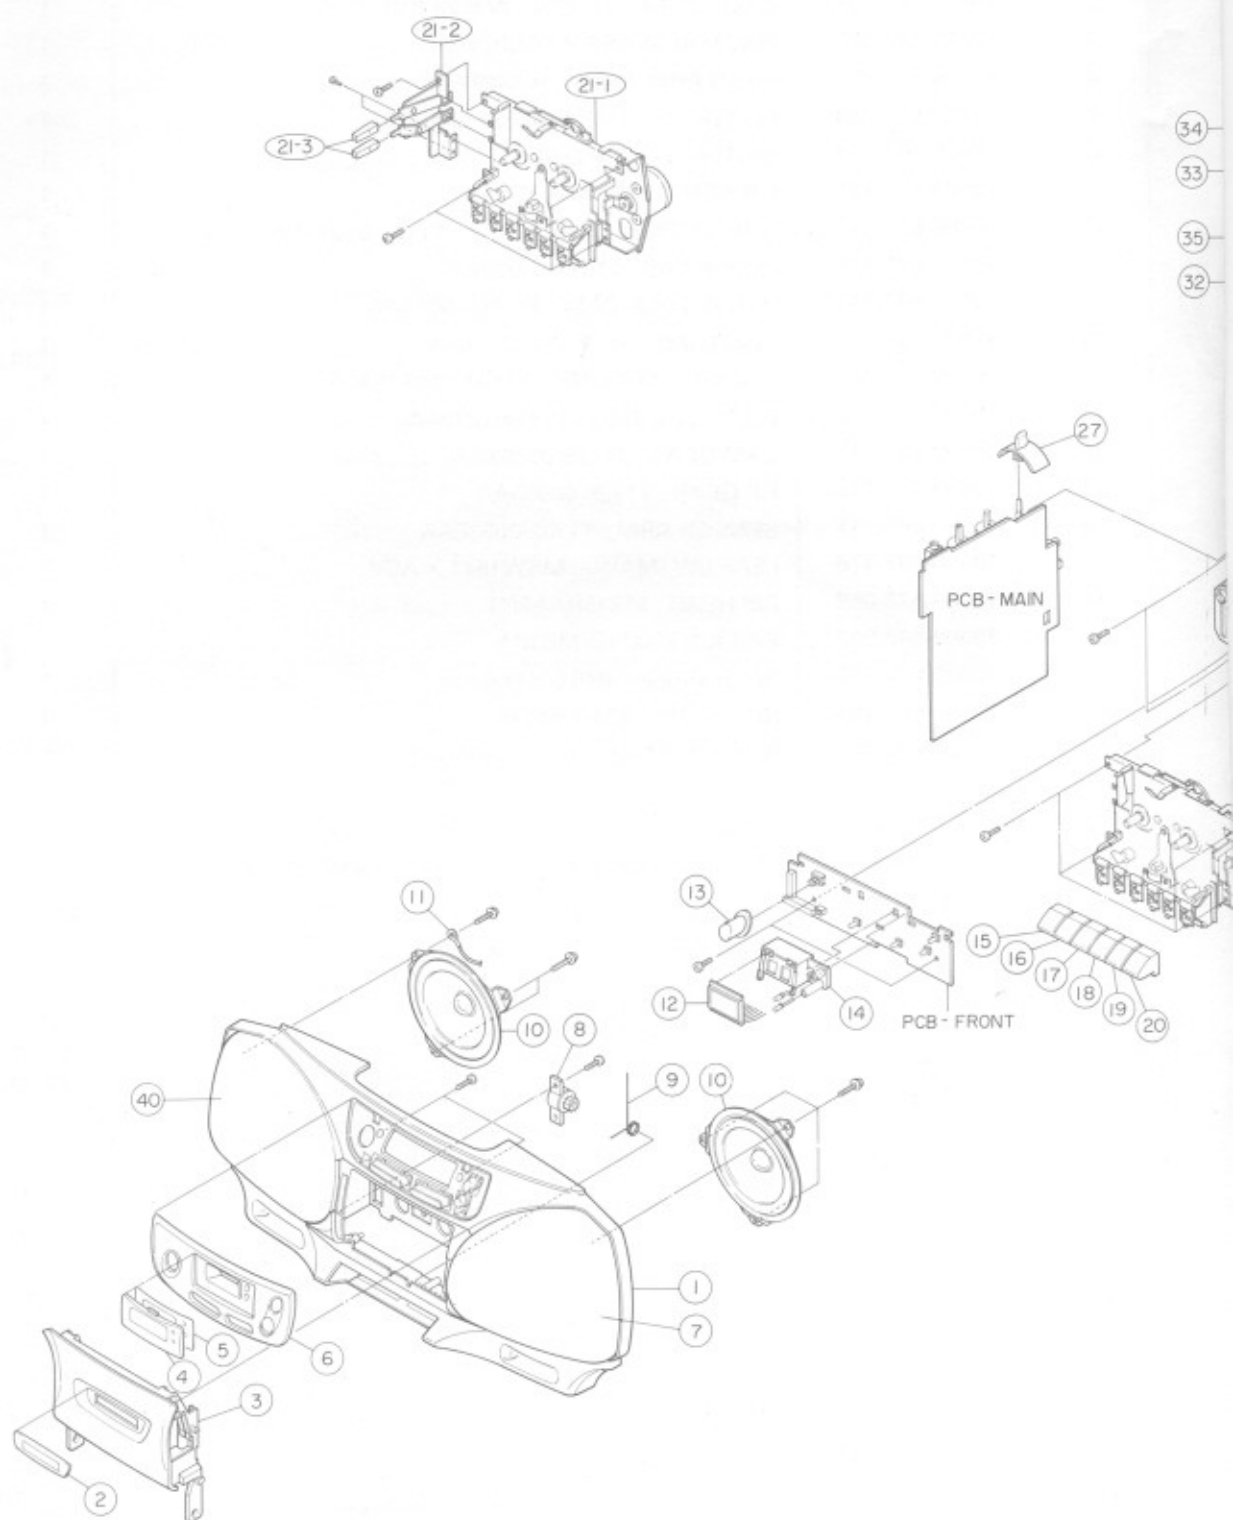


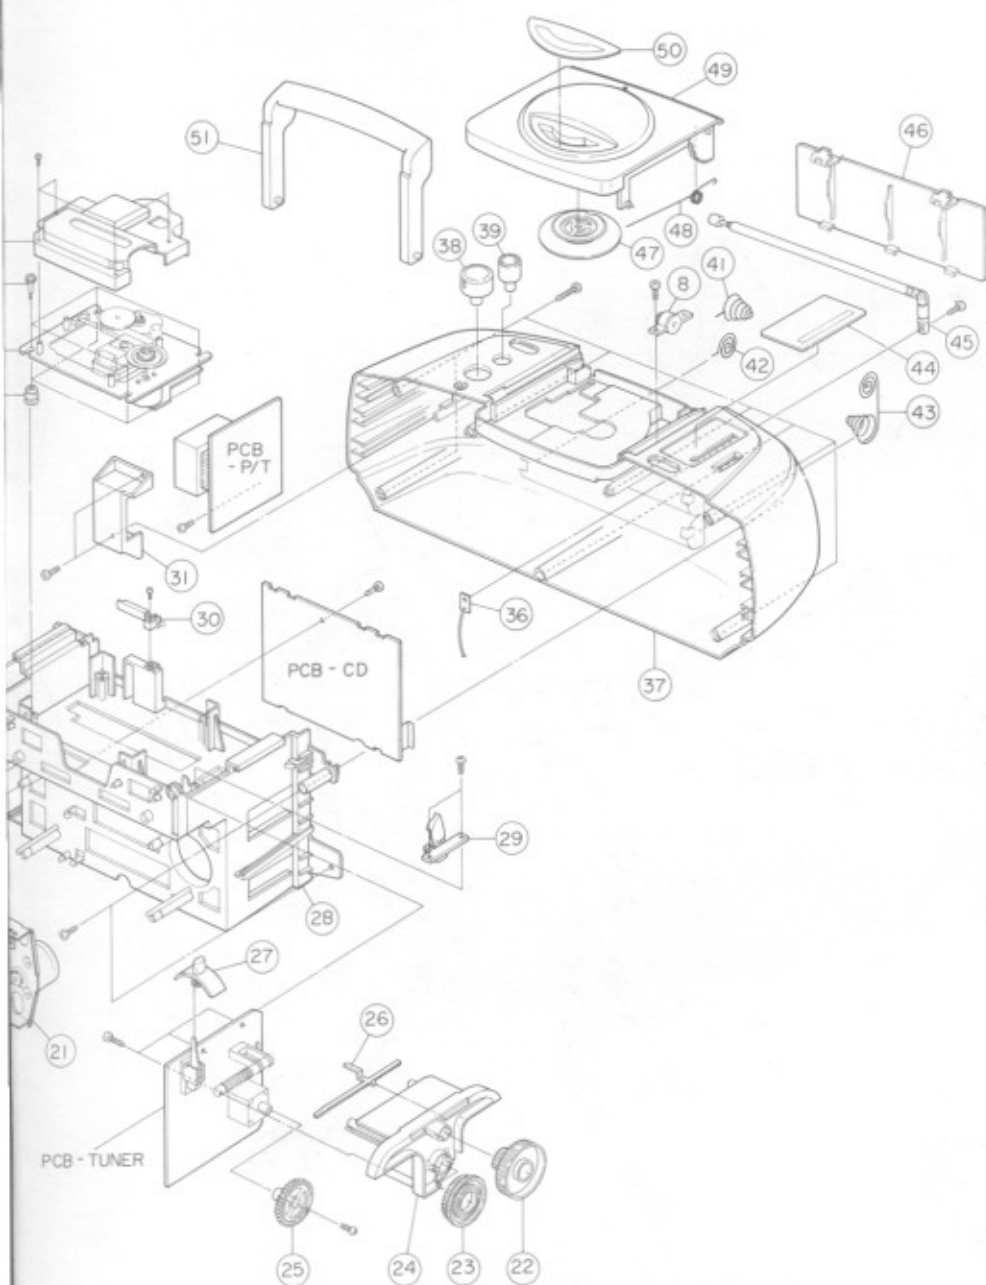


8. Block diagram

8-1. Main section

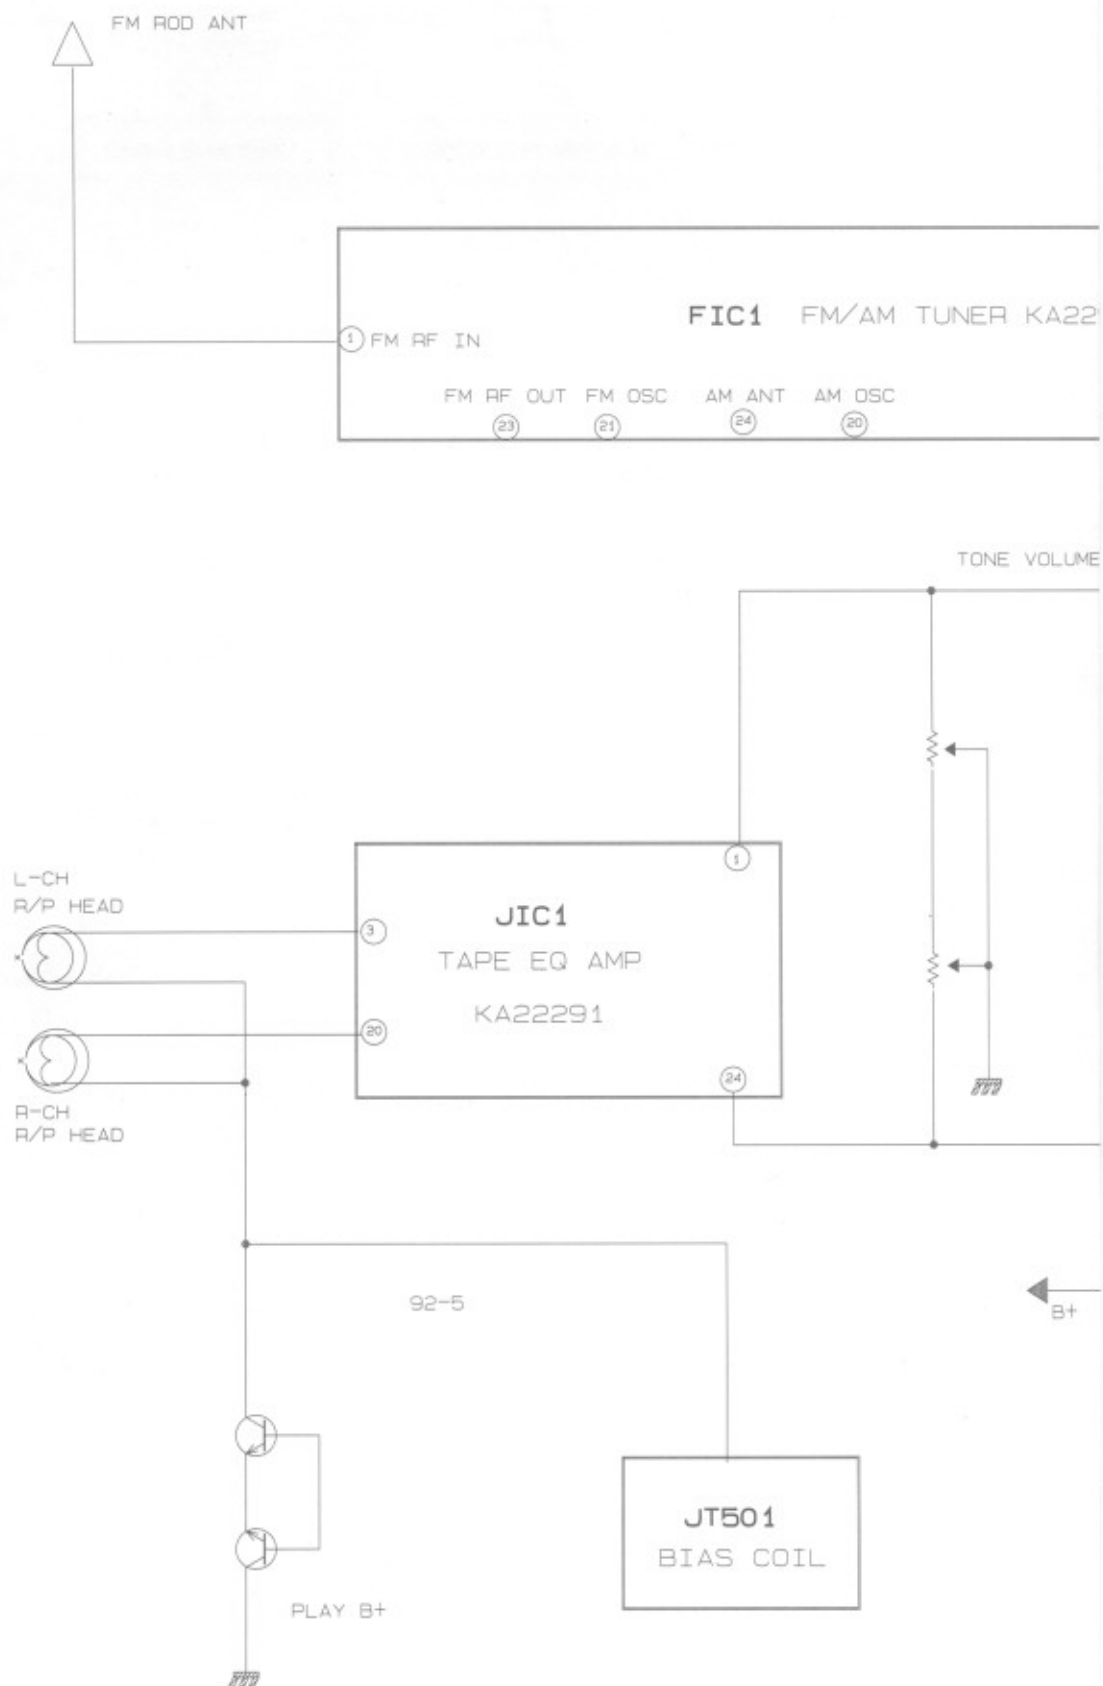


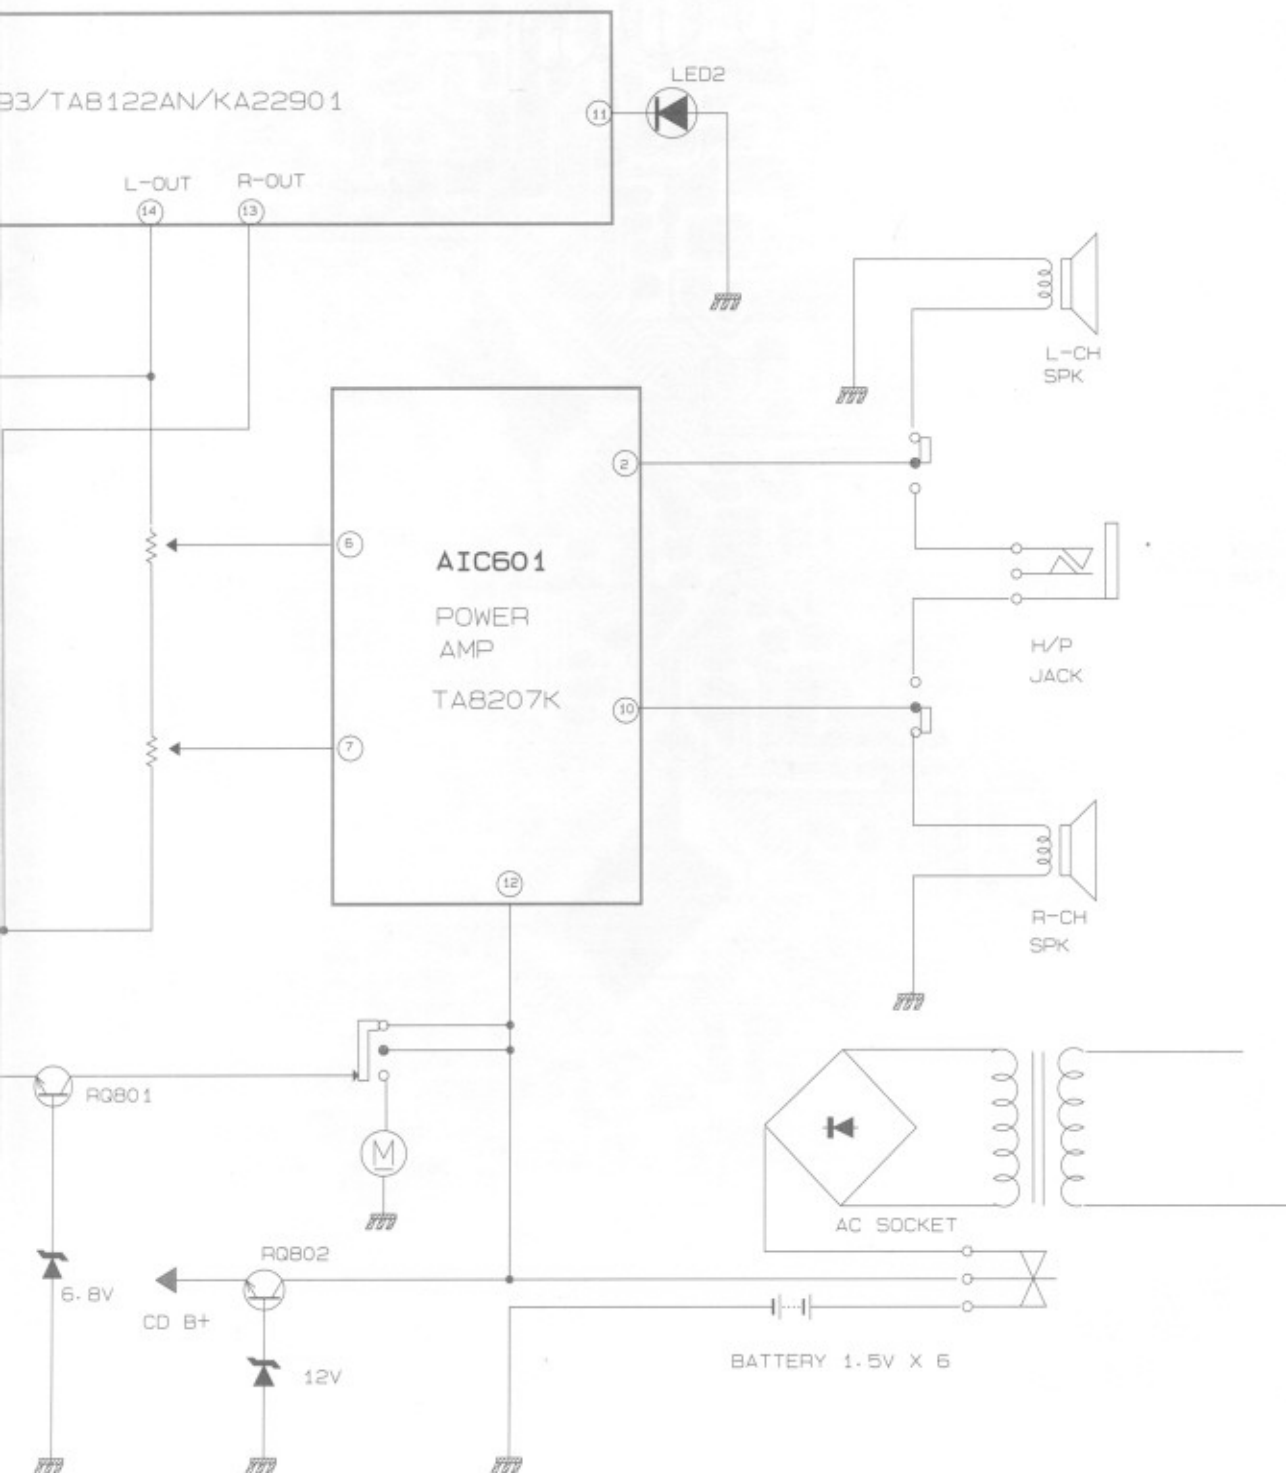


10-1. Main section

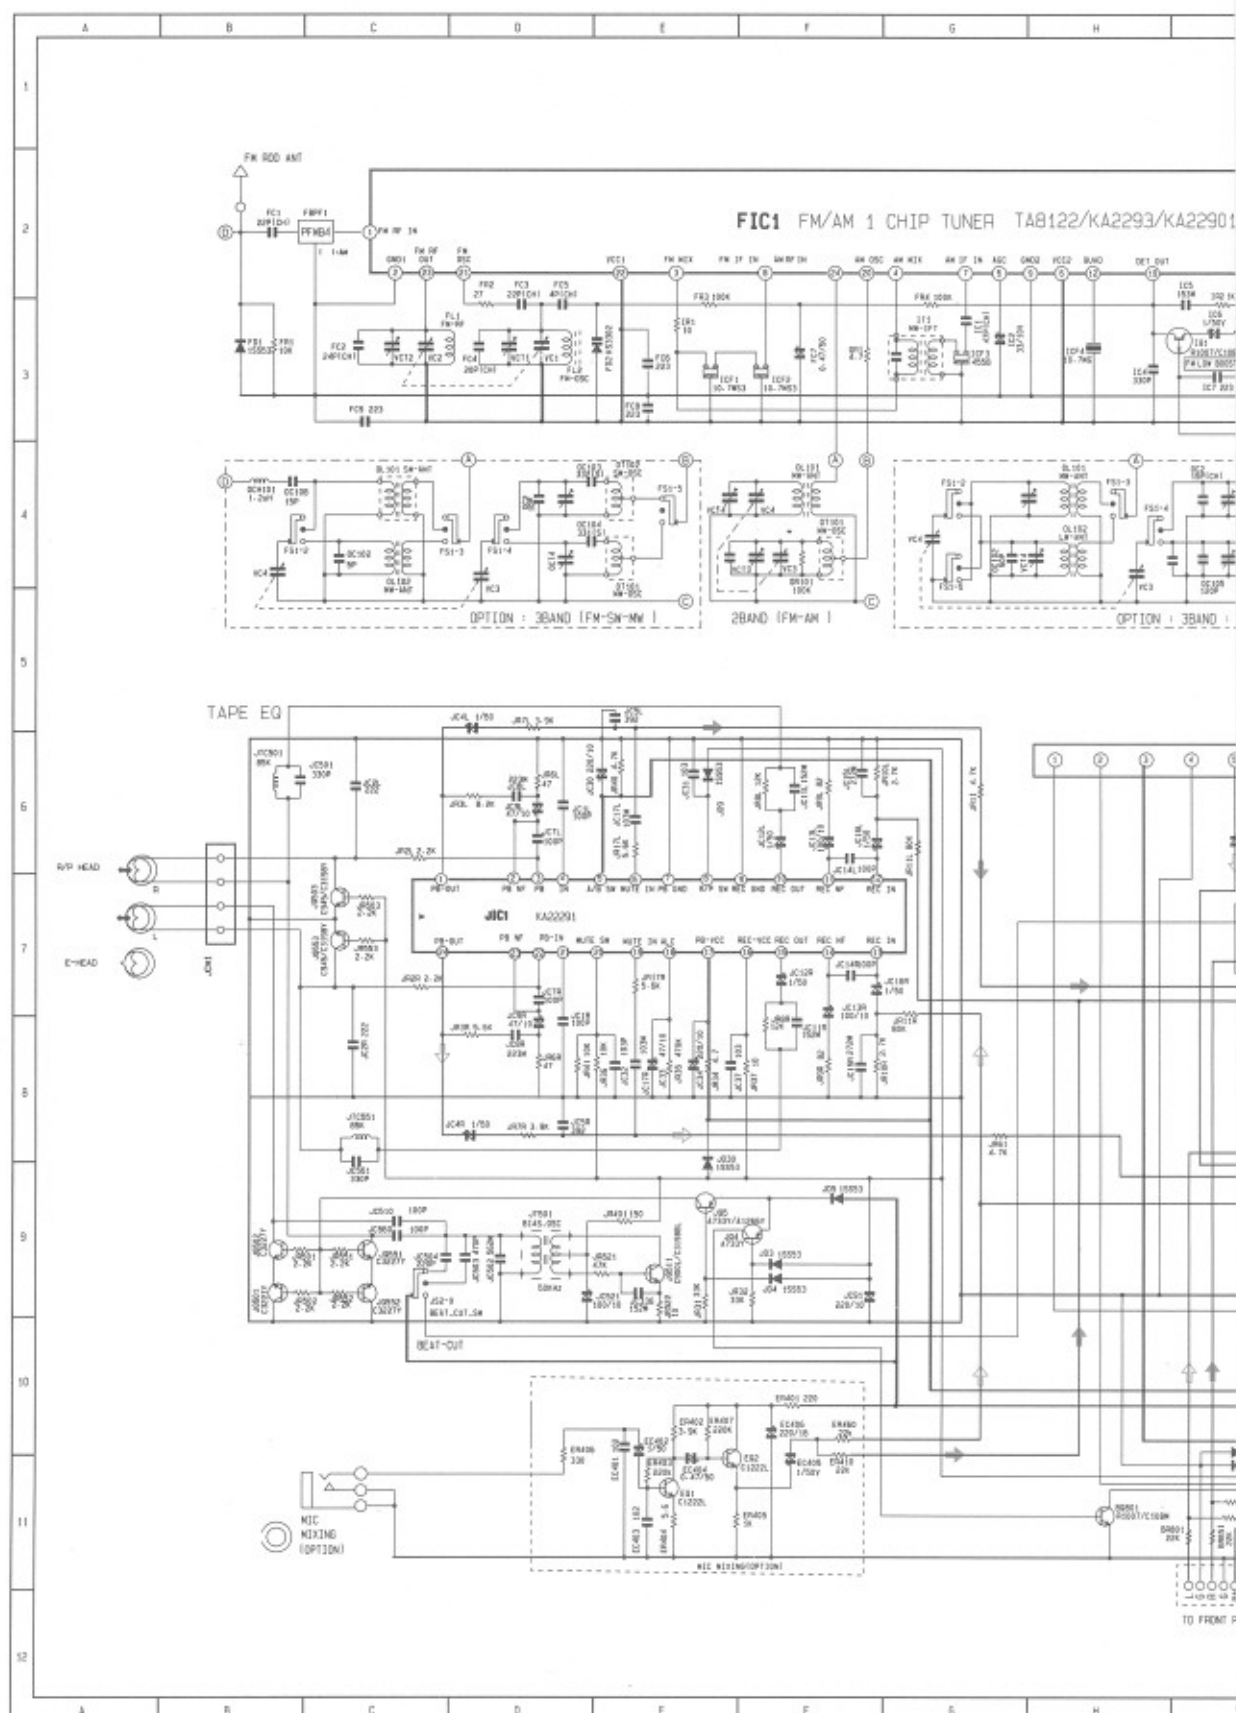



TR & IC LOCATION		
X-Y	LOCATION NO.	SPEC
2-H	FQ1	R1007
7-K	YQ601	R1007
B-G	JQ804	A733
B-K	YQ651	R1007
9-I	YQ809	R1007
9-H	JQ808	R1007
10-I	JQ806	R1007
10-J	YQ803	A733
10-L	RQ801-RQ301	C1008-A708
11-E1	EQ1-EQ2	C1222L
11-E6	RQ802-EQ3	Q882-C945
11-E	JQ501	C900-L
11-G-H	QB04	R1007
11-J	JQ807-QB05	A733
1-D	FJC101	TA8122-KA2293
7-E	JJC201	KA2299
8-L	AJC301	KA22065-TA8207K

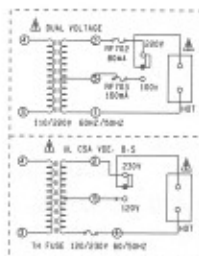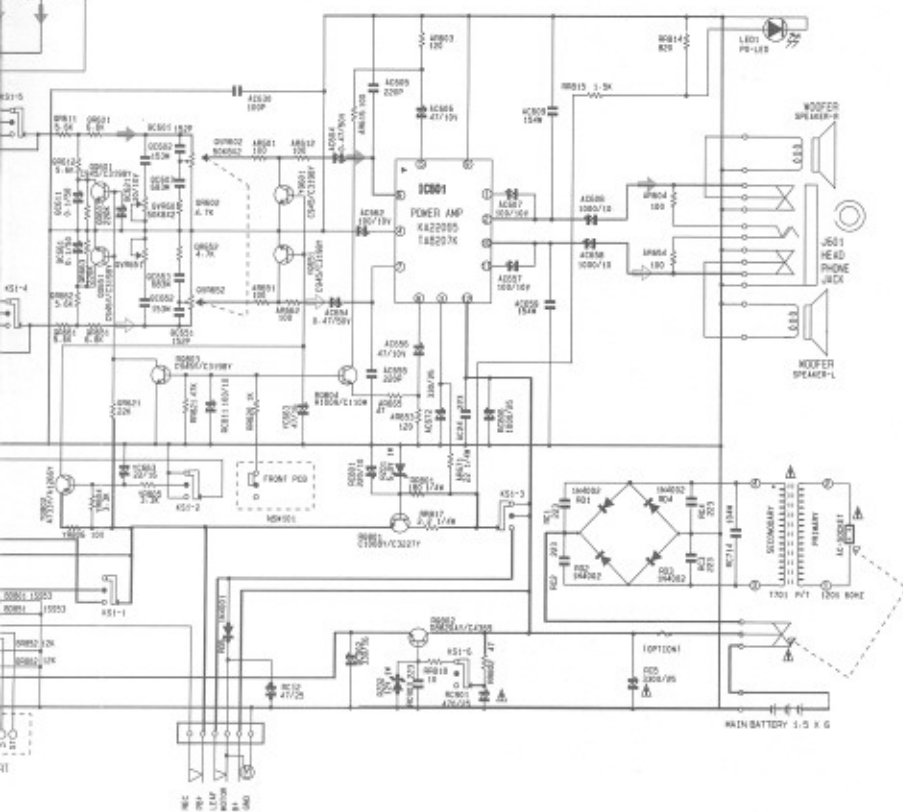

10-2. CD section

G3STEN

SCHEMATIC DIAGRAM

<NOTE>

1. All resistors are in ohm (Ω-KΩ-MΩG) or, unless otherwise noted, wattage values (1/2W, 1/10W).
2. All capacitance values are indicated in μF-pF.
3. The schematic diagram is subject to change upon improvement without prior notice.
4. Be sure to use identical and standardized replacement parts, especially for critical parts in the unit since many parts in the unit have special safety features marked by in the schematic diagram and parts list.

