


TAPE DECK MODEL RS-269US SCHEMATIC DIAGRAM

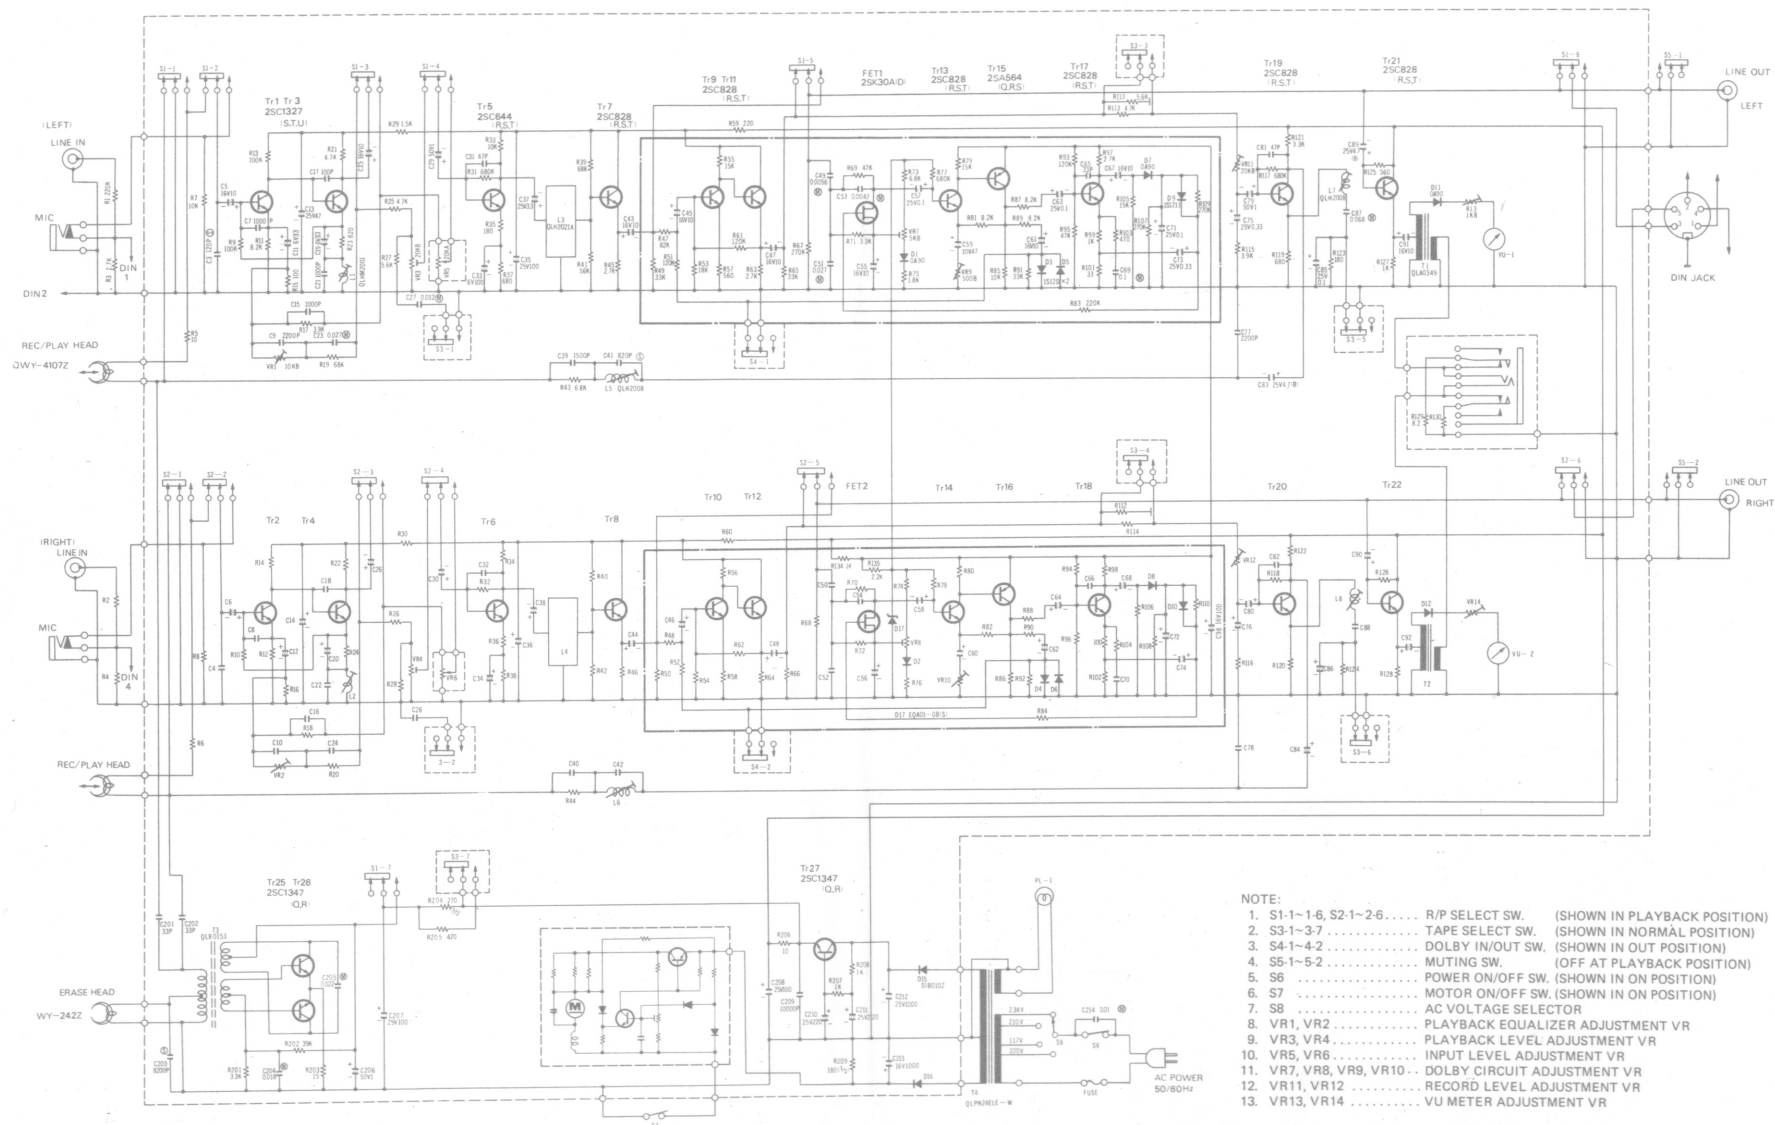

- NOTE:
- 1. S1-1~1-6, S2-1~2-6..... R/P SELECT SW. (SHOWN IN PLAYBACK POSITION)
 - 2. S3-1~3-7..... TAPE SELECT SW. (SHOWN IN NORMAL POSITION)
 - 3. S4-1~4-2..... DOLBY IN/OUT SW. (SHOWN IN OUT POSITION)
 - 4. S5-1~5-2..... MUTE SW. (OFF AT PLAYBACK POSITION)
 - 5. S6..... POWER ON/OFF SW. (SHOWN IN ON POSITION)
 - 6. S7..... MOTOR ON/OFF SW. (SHOWN IN ON POSITION)
 - 7. S8..... AC VOLTAGE SELECTOR
 - 8. VR1, VR2..... PLAYBACK EQUALIZER ADJUSTMENT VR
 - 9. VR3, VR4..... PLAYBACK LEVEL ADJUSTMENT VR
 - 10. VR5, VR6..... INPUT LEVEL ADJUSTMENT VR
 - 11. VR7, VR8, VR9, VR10..... DOLBY CIRCUIT ADJUSTMENT VR
 - 12. VR11, VR12..... RECORD LEVEL ADJUSTMENT VR
 - 13. VR13, VR14..... VU METER ADJUSTMENT VR

* This schematic diagram is subject to change, to accomodate improvements in design.