 


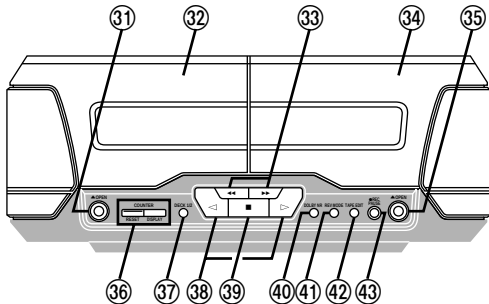

③① Deck 1 cassette holder open button (▲ OPEN)

③② Deck 1

③③ Fast forward/rewind, TPS buttons (◀◀, ▶▶)

③④ Deck 2

③⑤ Deck 2 cassette holder open button (▲ OPEN)

③⑥ Counter reset, display buttons
(COUNTER, RESET, DISPLAY)

③⑦ Deck 1/deck 2 select button (DECK 1/2)

③⑧ Playback buttons and indicators (◁, ▷)

The color of the indicators depends on the operation taking place.

If stopped, fast forwarding or rewinding: orange

If playing or recording: green

While carrying out TPS or recording is on standby: flashes

③⑨ Stop button (■)

④① Dolby noise reduction button (DOLBY NR)

 
④② Reverse mode button (REV MODE)

④③ Tape edit button (TAPE EDIT)

④④ Record pause button (● REC PAUSE)


NOTES

- → : PLAYBACK SIGNAL LINE
- ⇨ : RECORDING SIGNAL LINE
- () indicates pin No. Right channel.

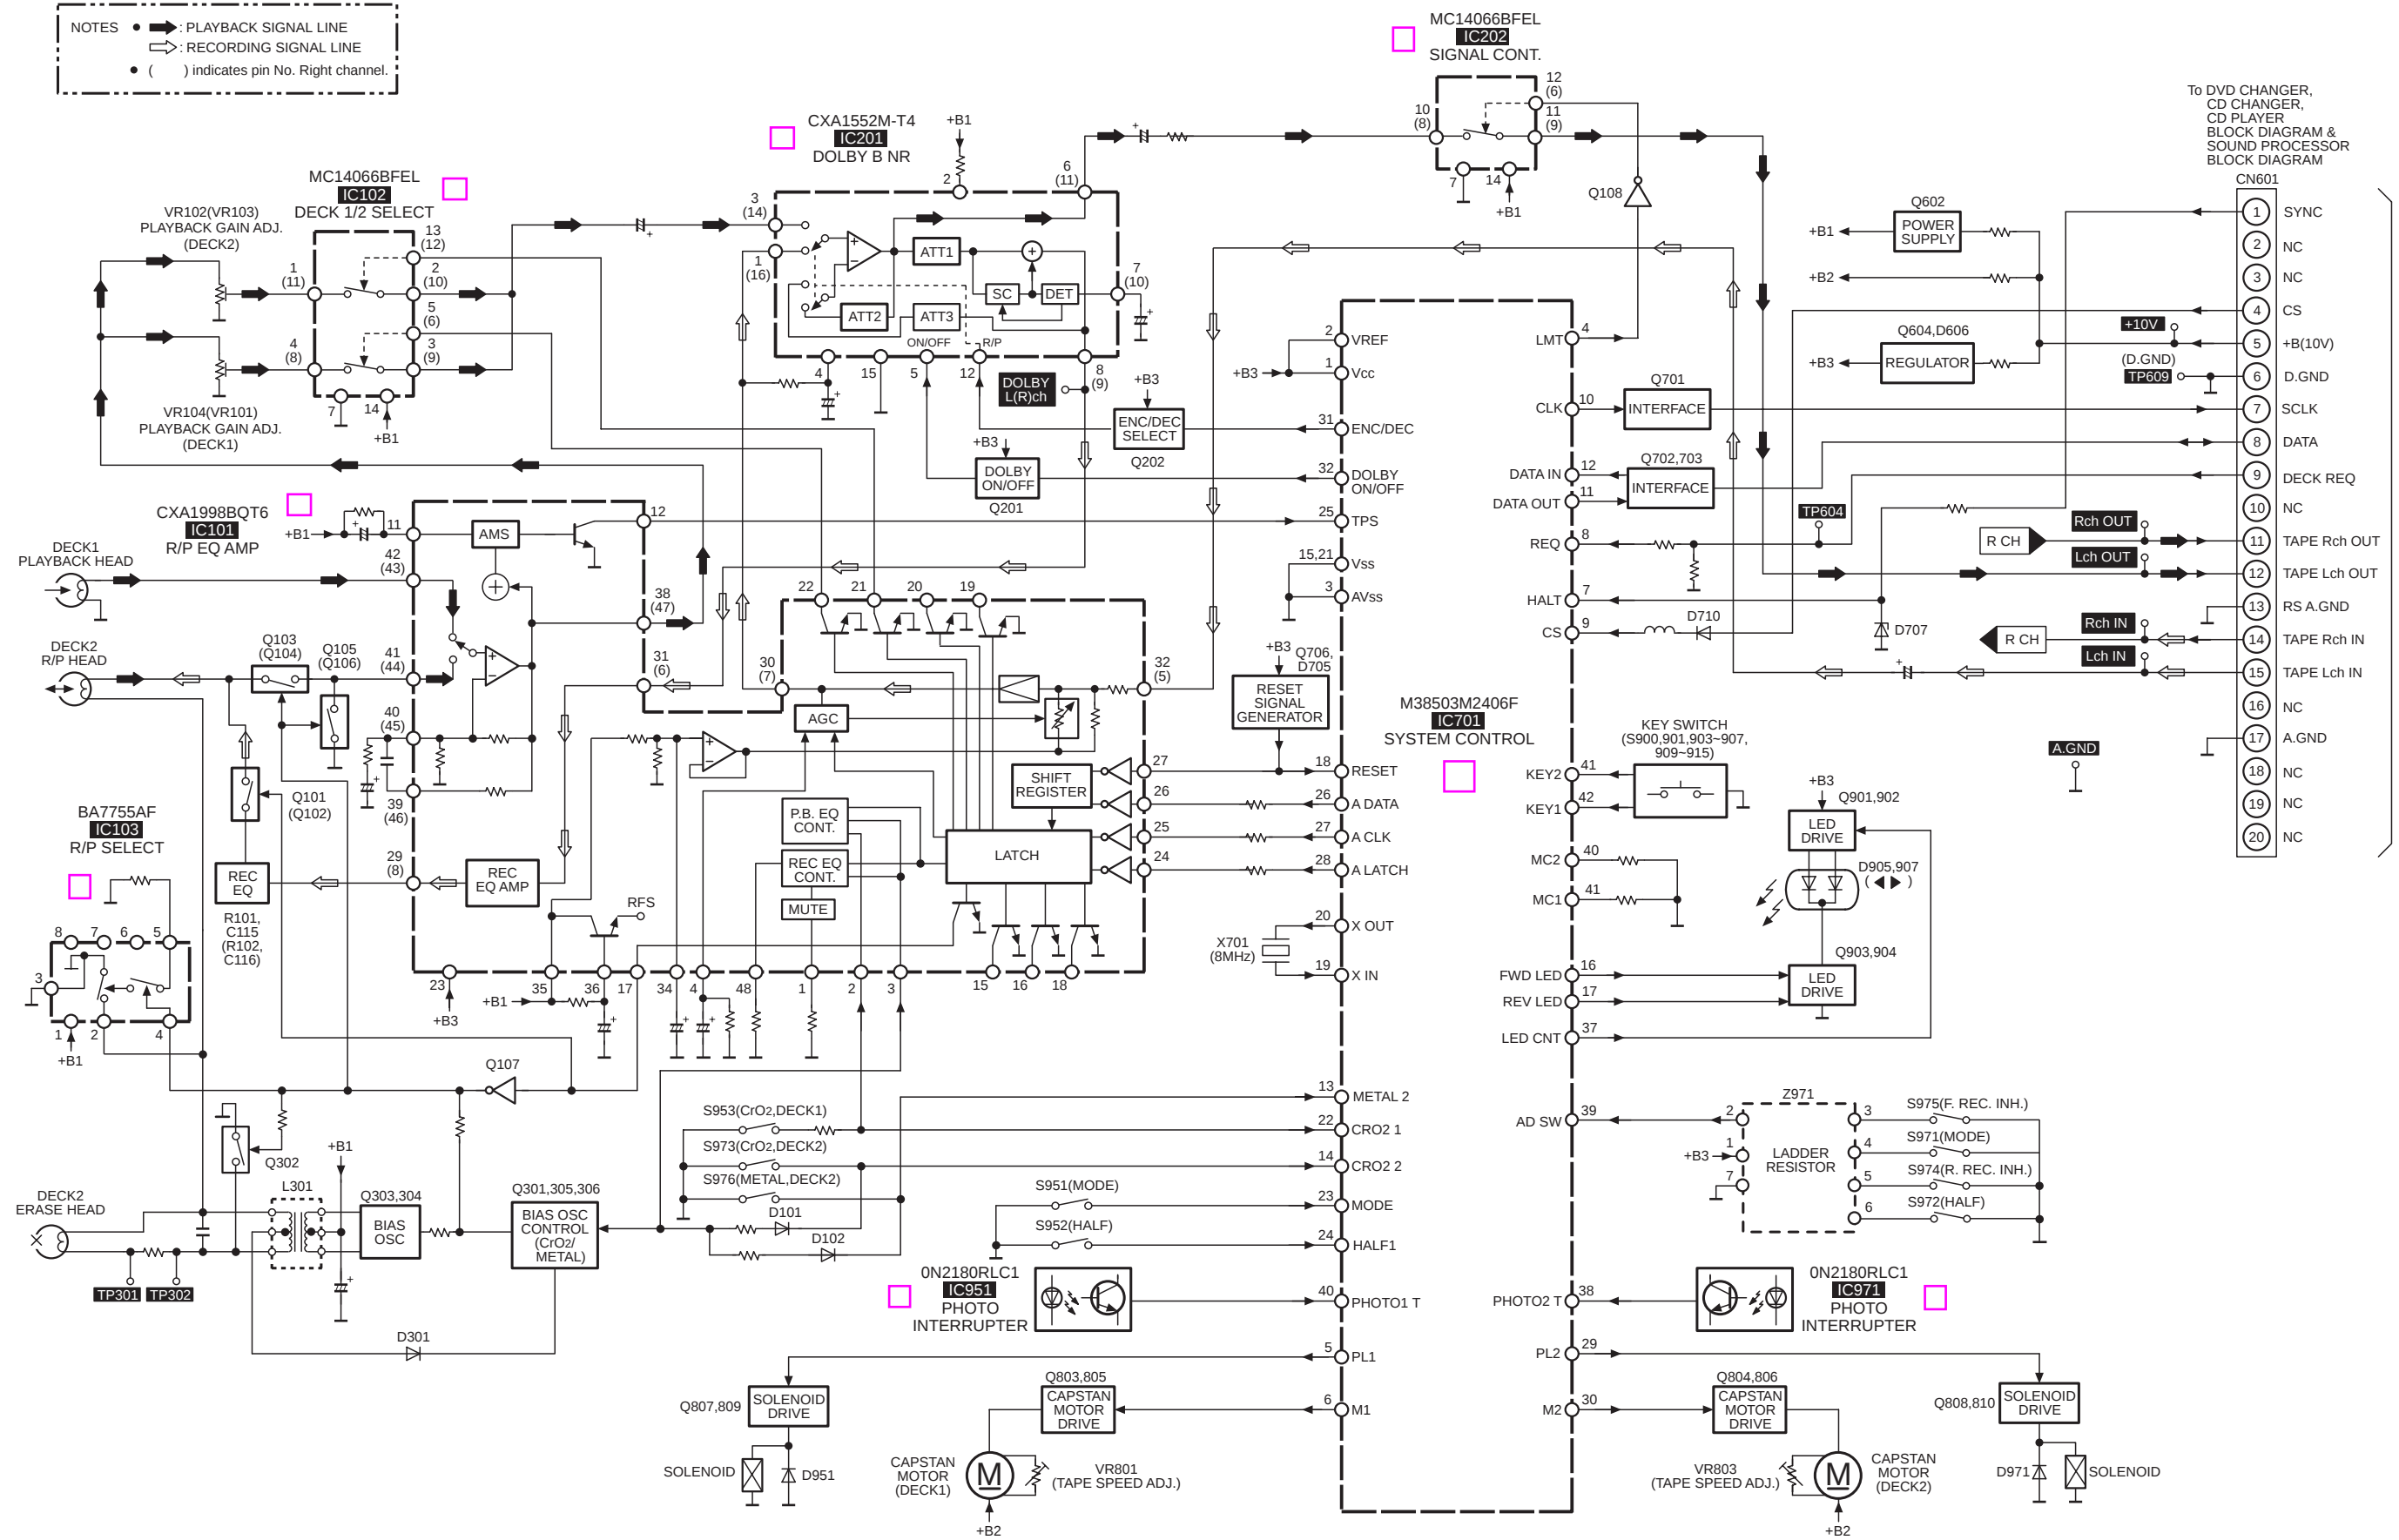


A MAIN CIRCUIT

 → : POSITIVE VOLTAGE LINE ⇨ : RECORDING SIGNAL LINE ⇩ : PLAYBACK SIGNAL LINE

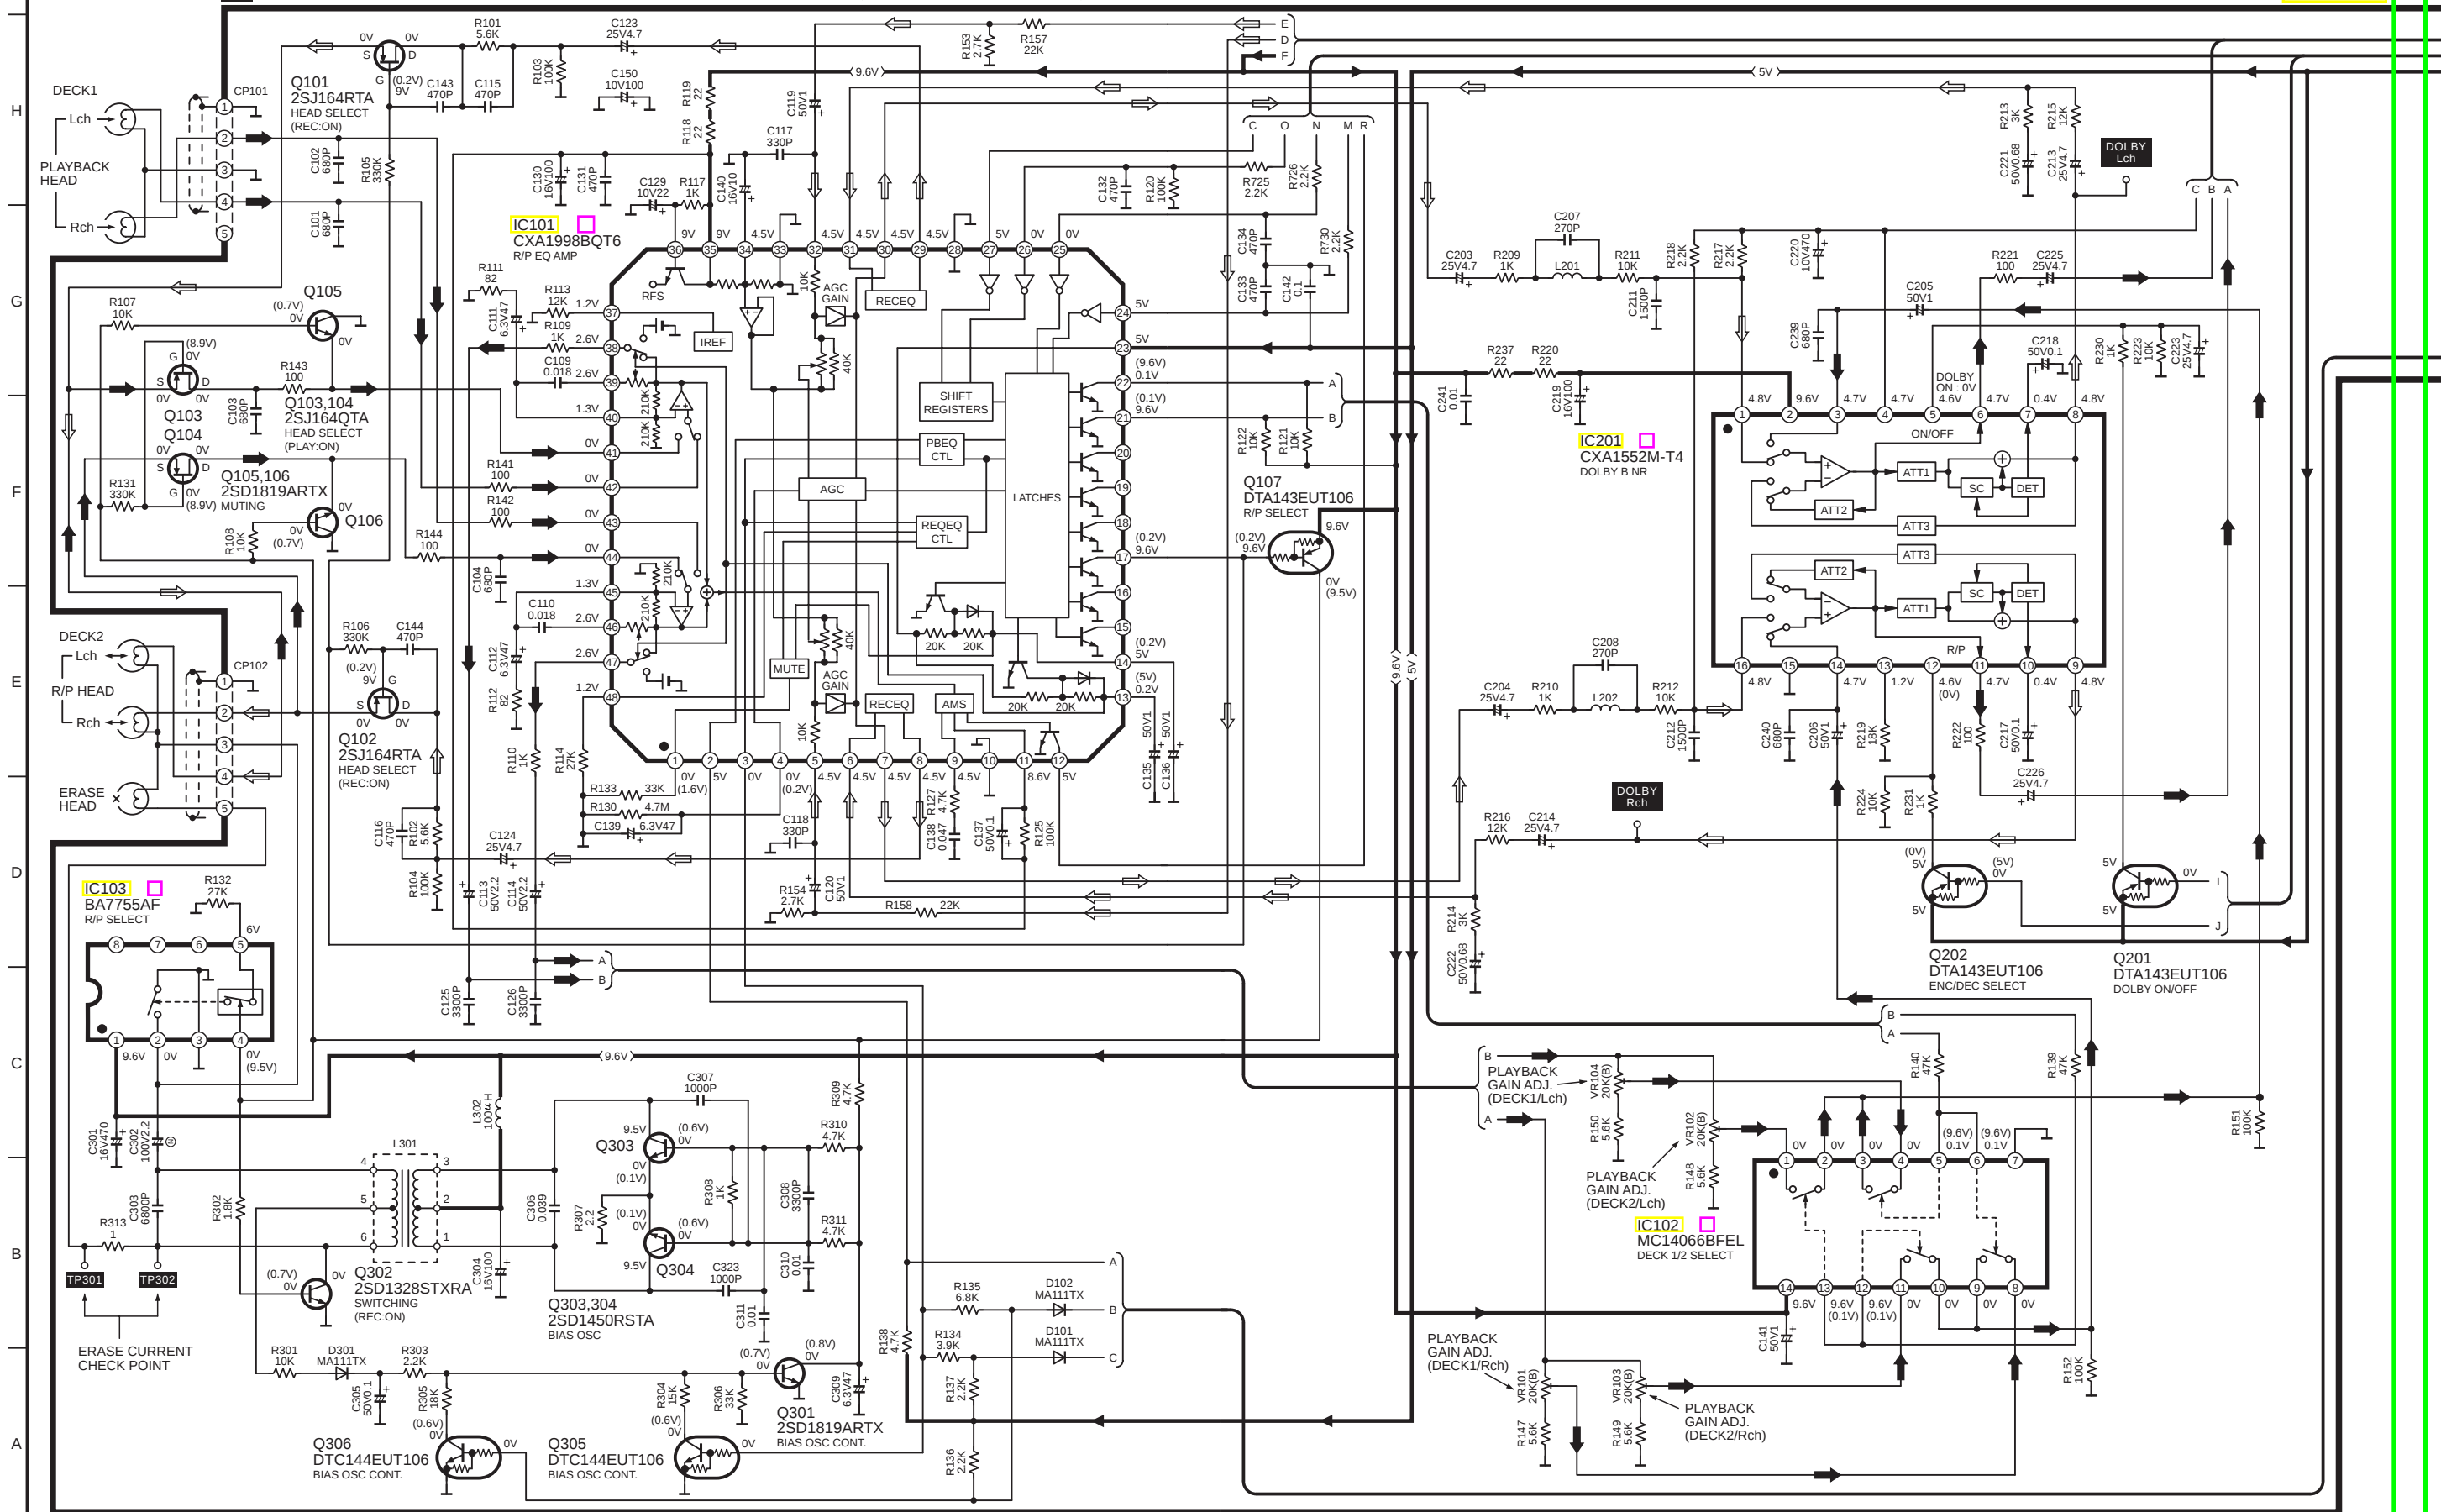


A MAIN CIRCUIT

 
→ : POSITIVE VOLTAGE LINE ⇨ : RECORDING SIGNAL LINE ⇩ : PLAYBACK SIGNAL LINE

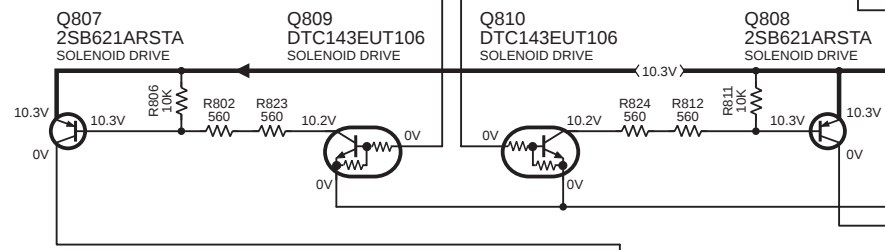


B MECHANISM CIRCUIT (DECK1)

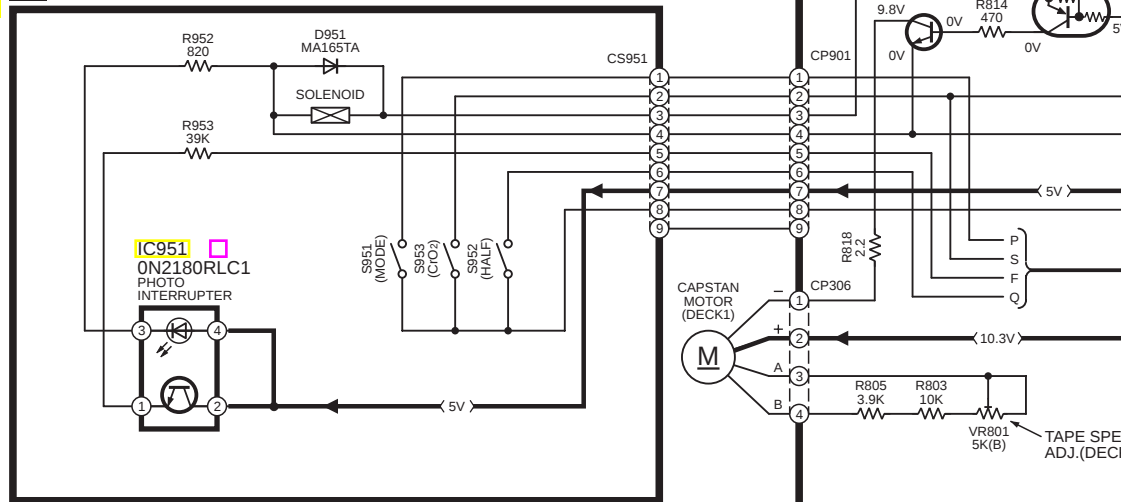 

C MECHANISM CIRCUIT (DECK2)

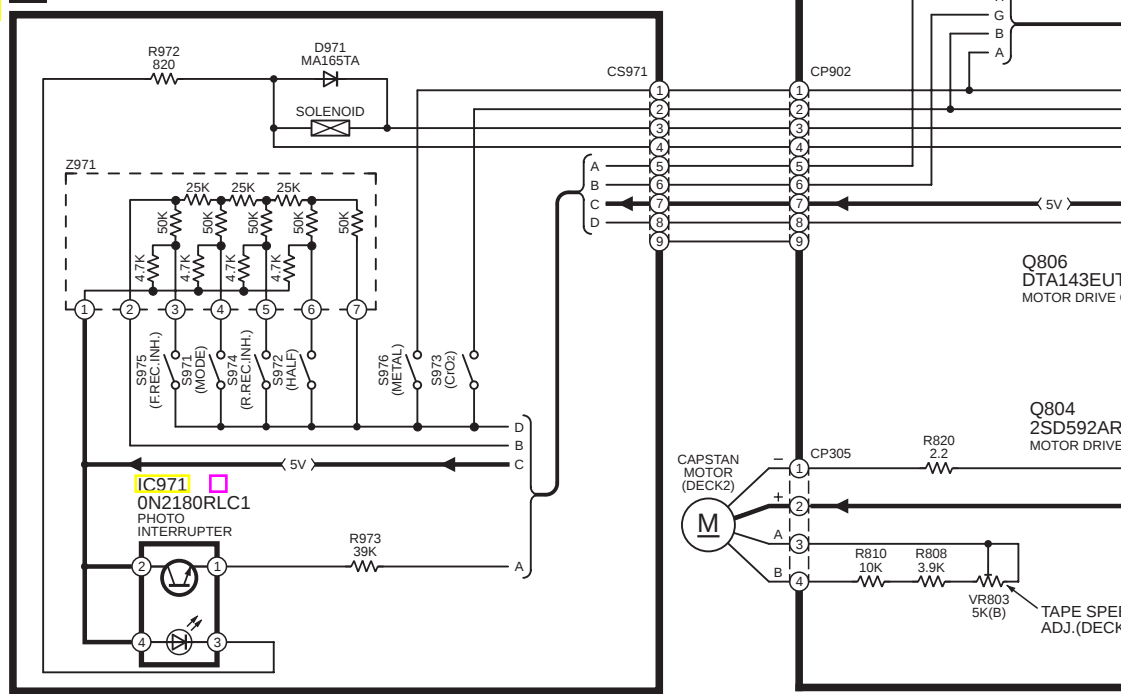 


D EARTH TERMINAL CIRCUIT

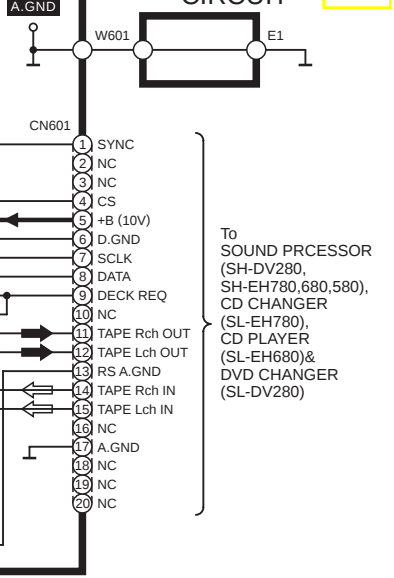 


To SOUND PRCESSOR (SH-DV280, SH-EH780,680,580), CD CHANGER (SL-EH780), CD PLAYER (SL-EH680)& DVD CHANGER (SL-DV280)

E OPERATION CIRCUIT

 → : POSITIVE VOLTAGE LINE
➡ : PLAYBACK SIGNAL LINE

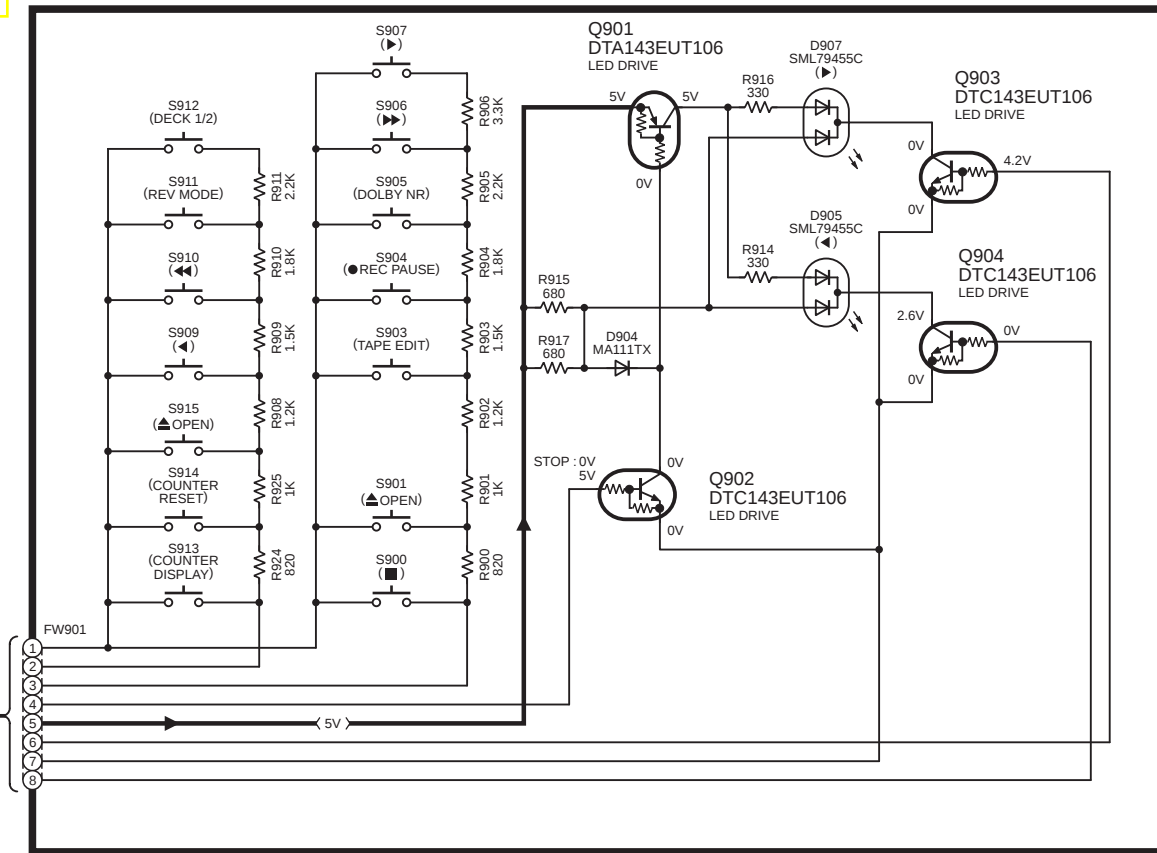


A MAIN CIRCUIT

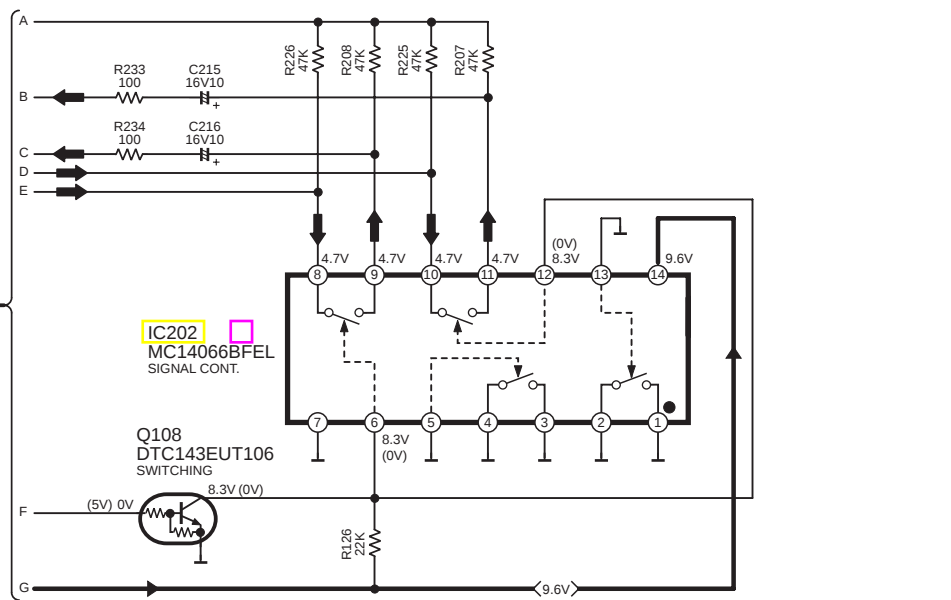 


A MAIN CIRCUIT

 : POSITIVE VOLTAGE LINE : RECORDING SIGNAL LINE : PLAYBACK SIGNAL LINE

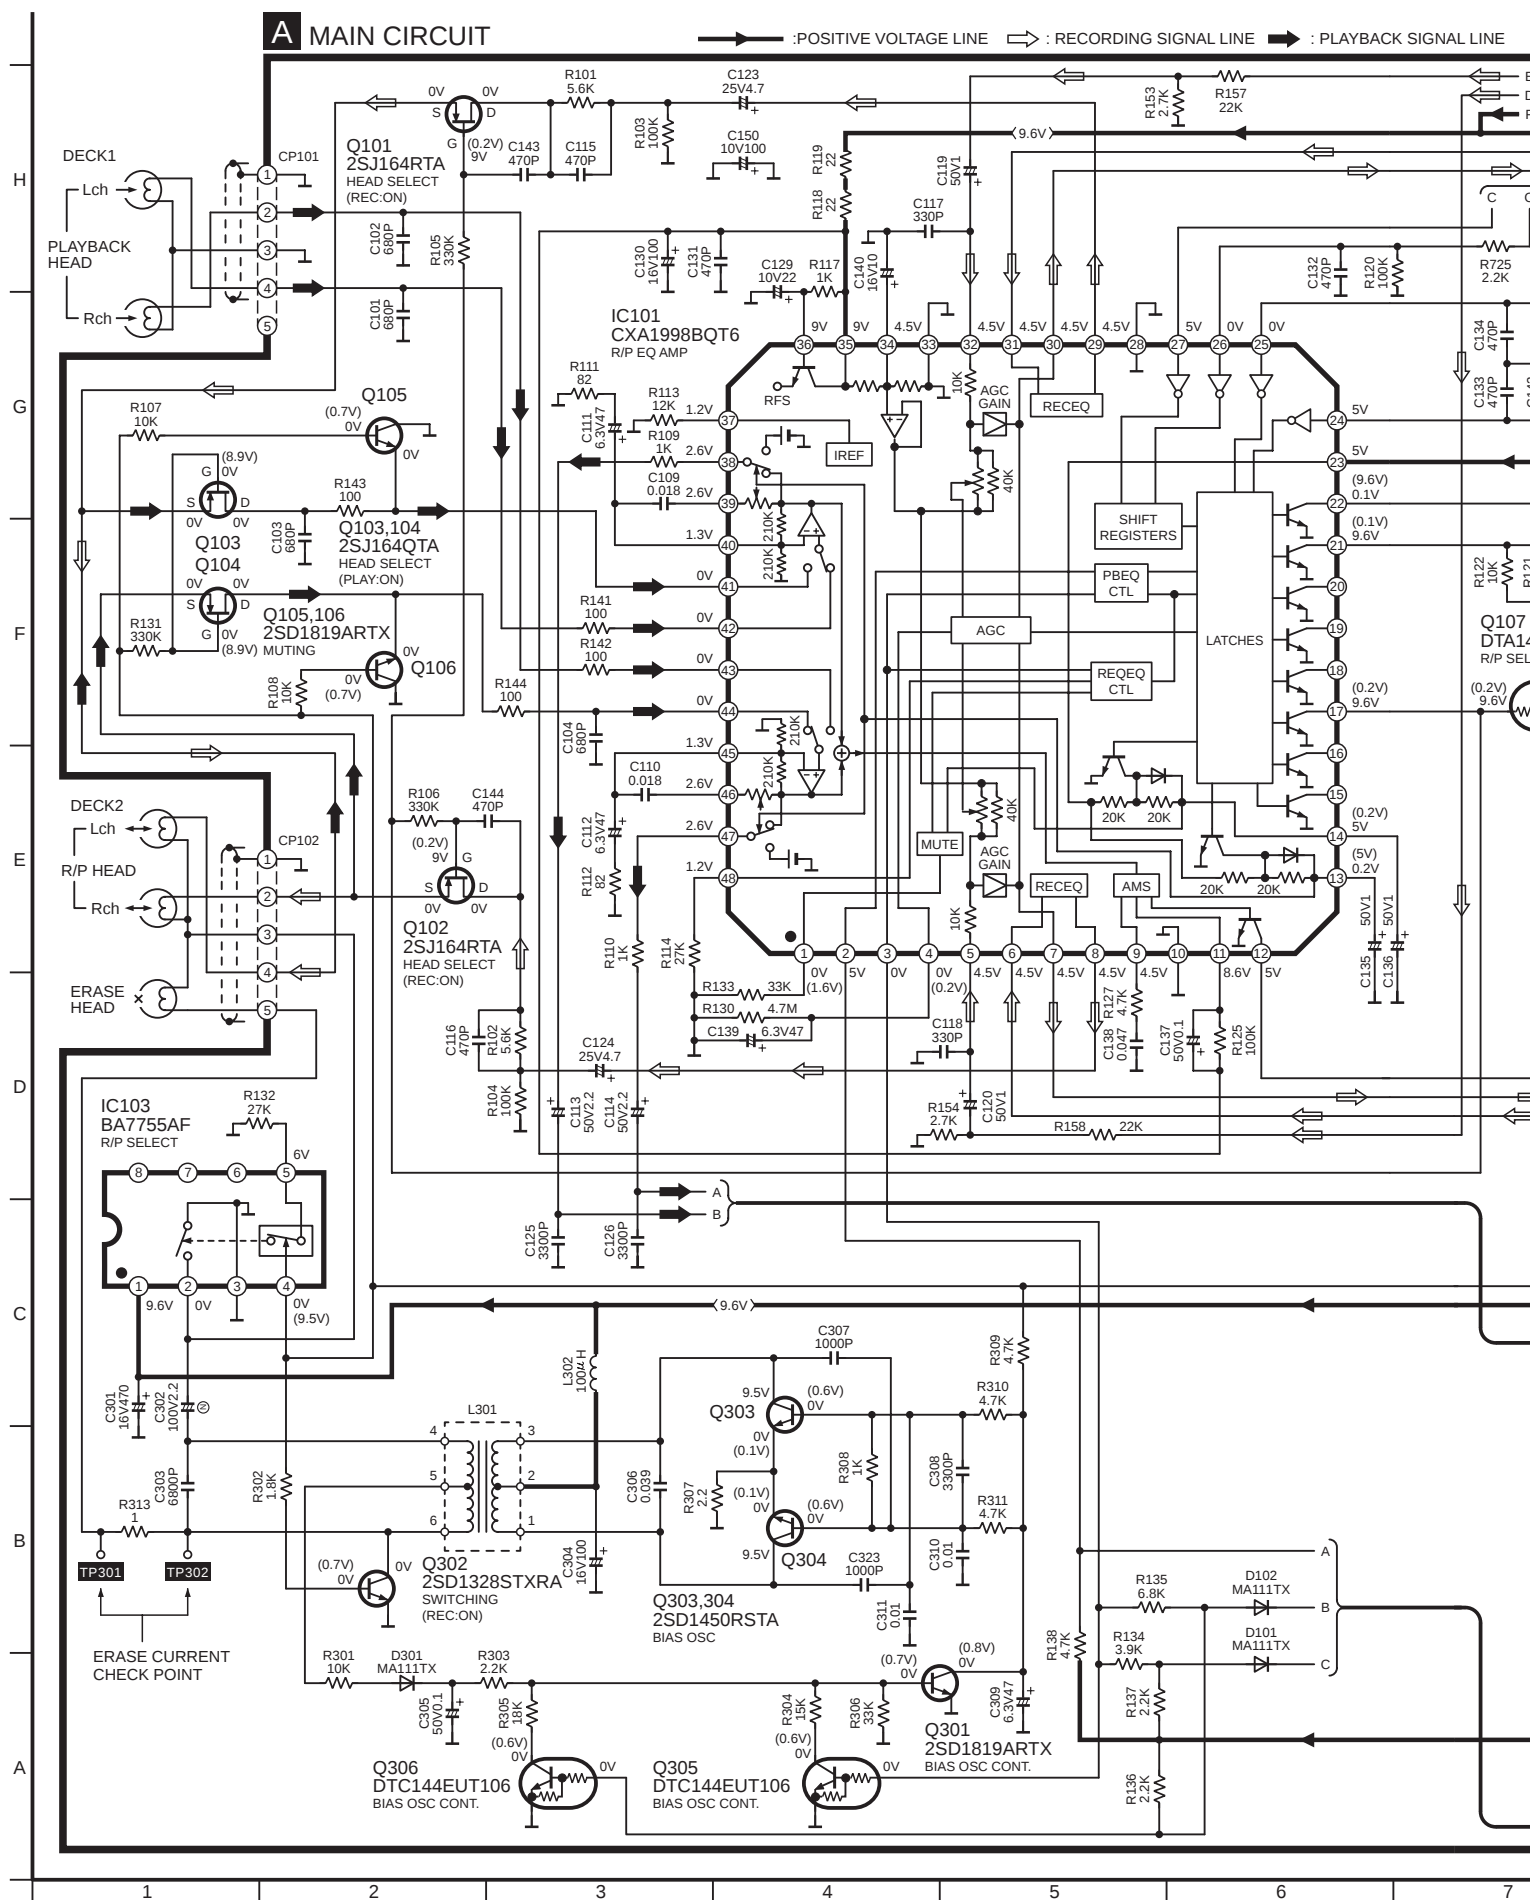


▶ : PLAYBACK SIGNAL LINE

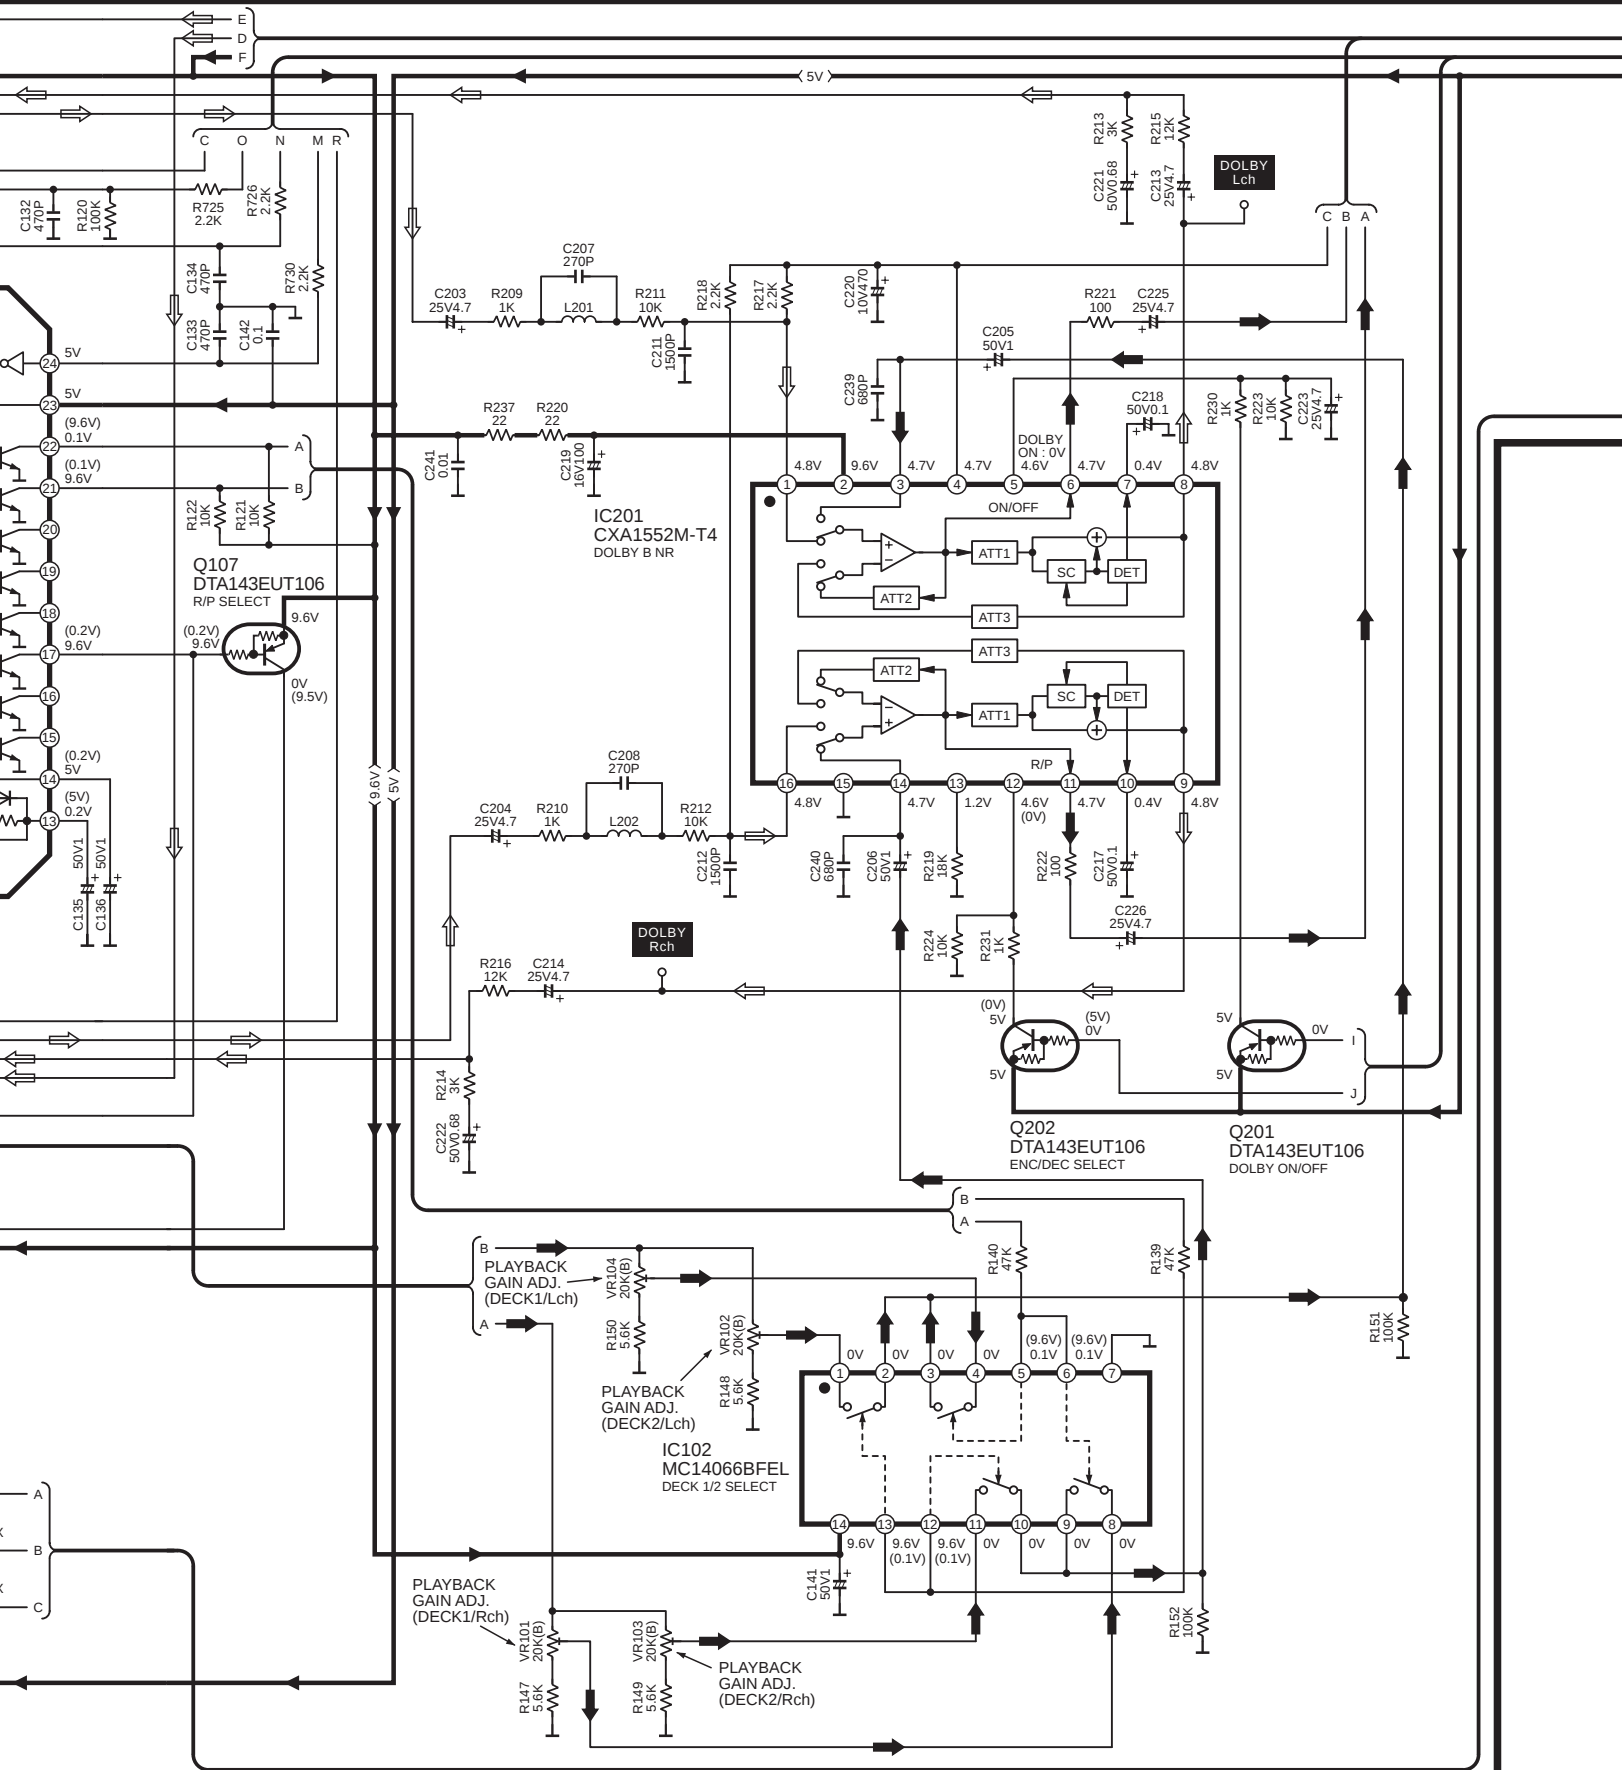 


A MAIN CIRCUIT


 
→ : POSITIVE VOLTAGE LINE ⇨ : RECORDING SIGNAL LINE ➡ : PLAYBACK SIGNAL LINE

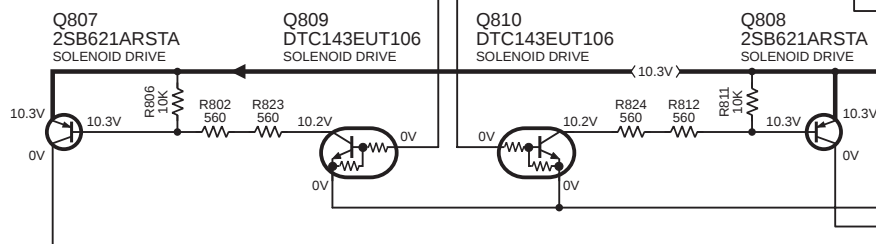


B MECHANISM CIRCUIT (DECK1)

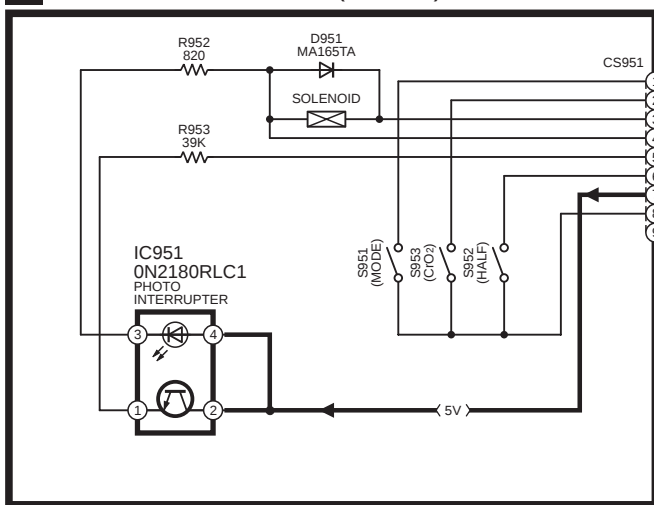 

C MECHANISM CIRCUIT (DECK2)

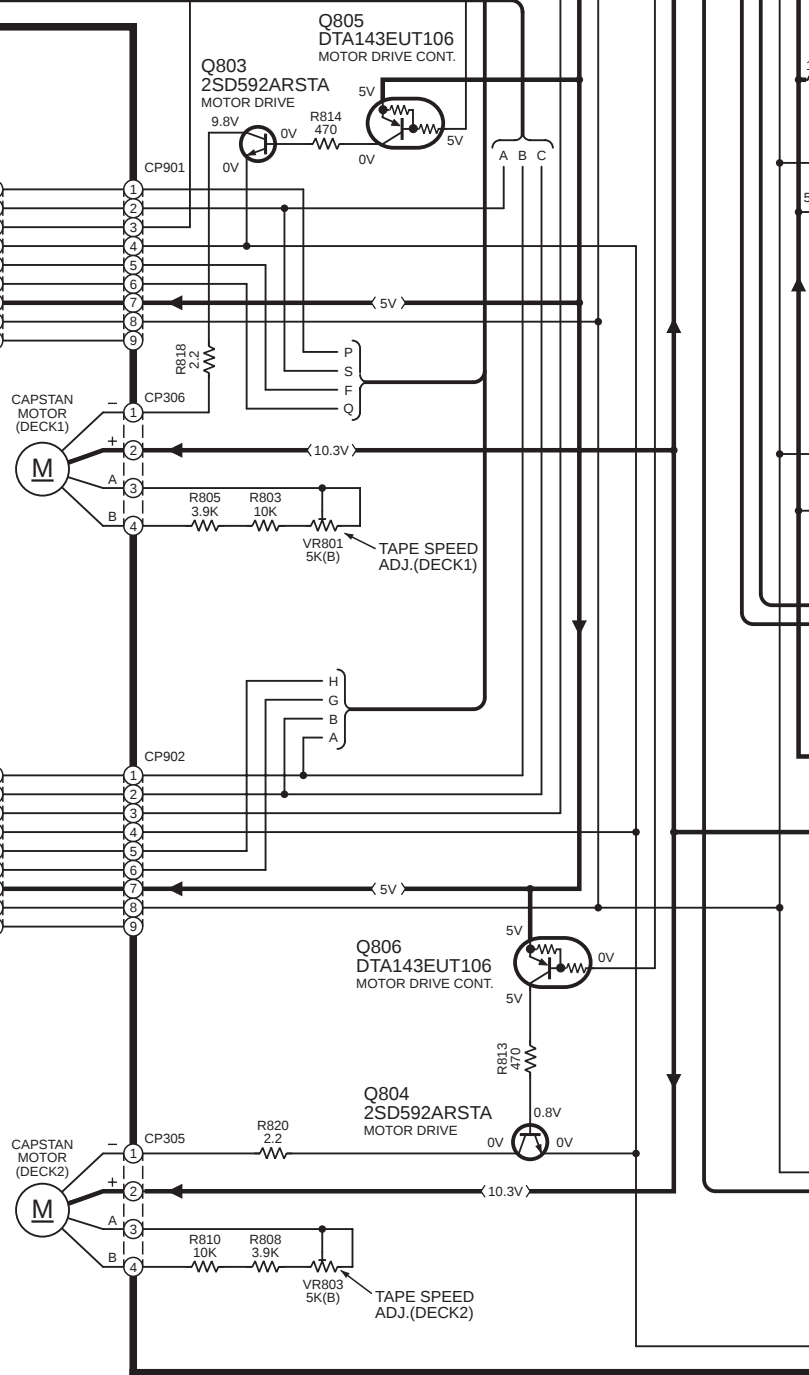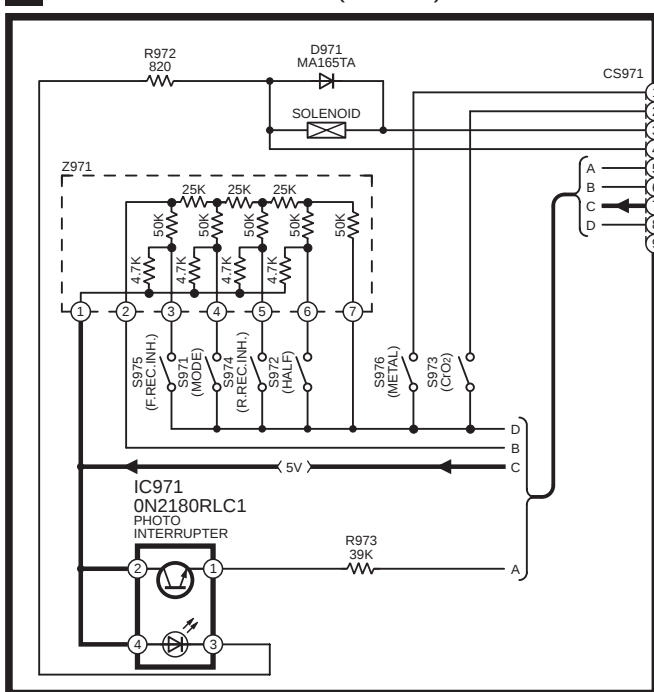  


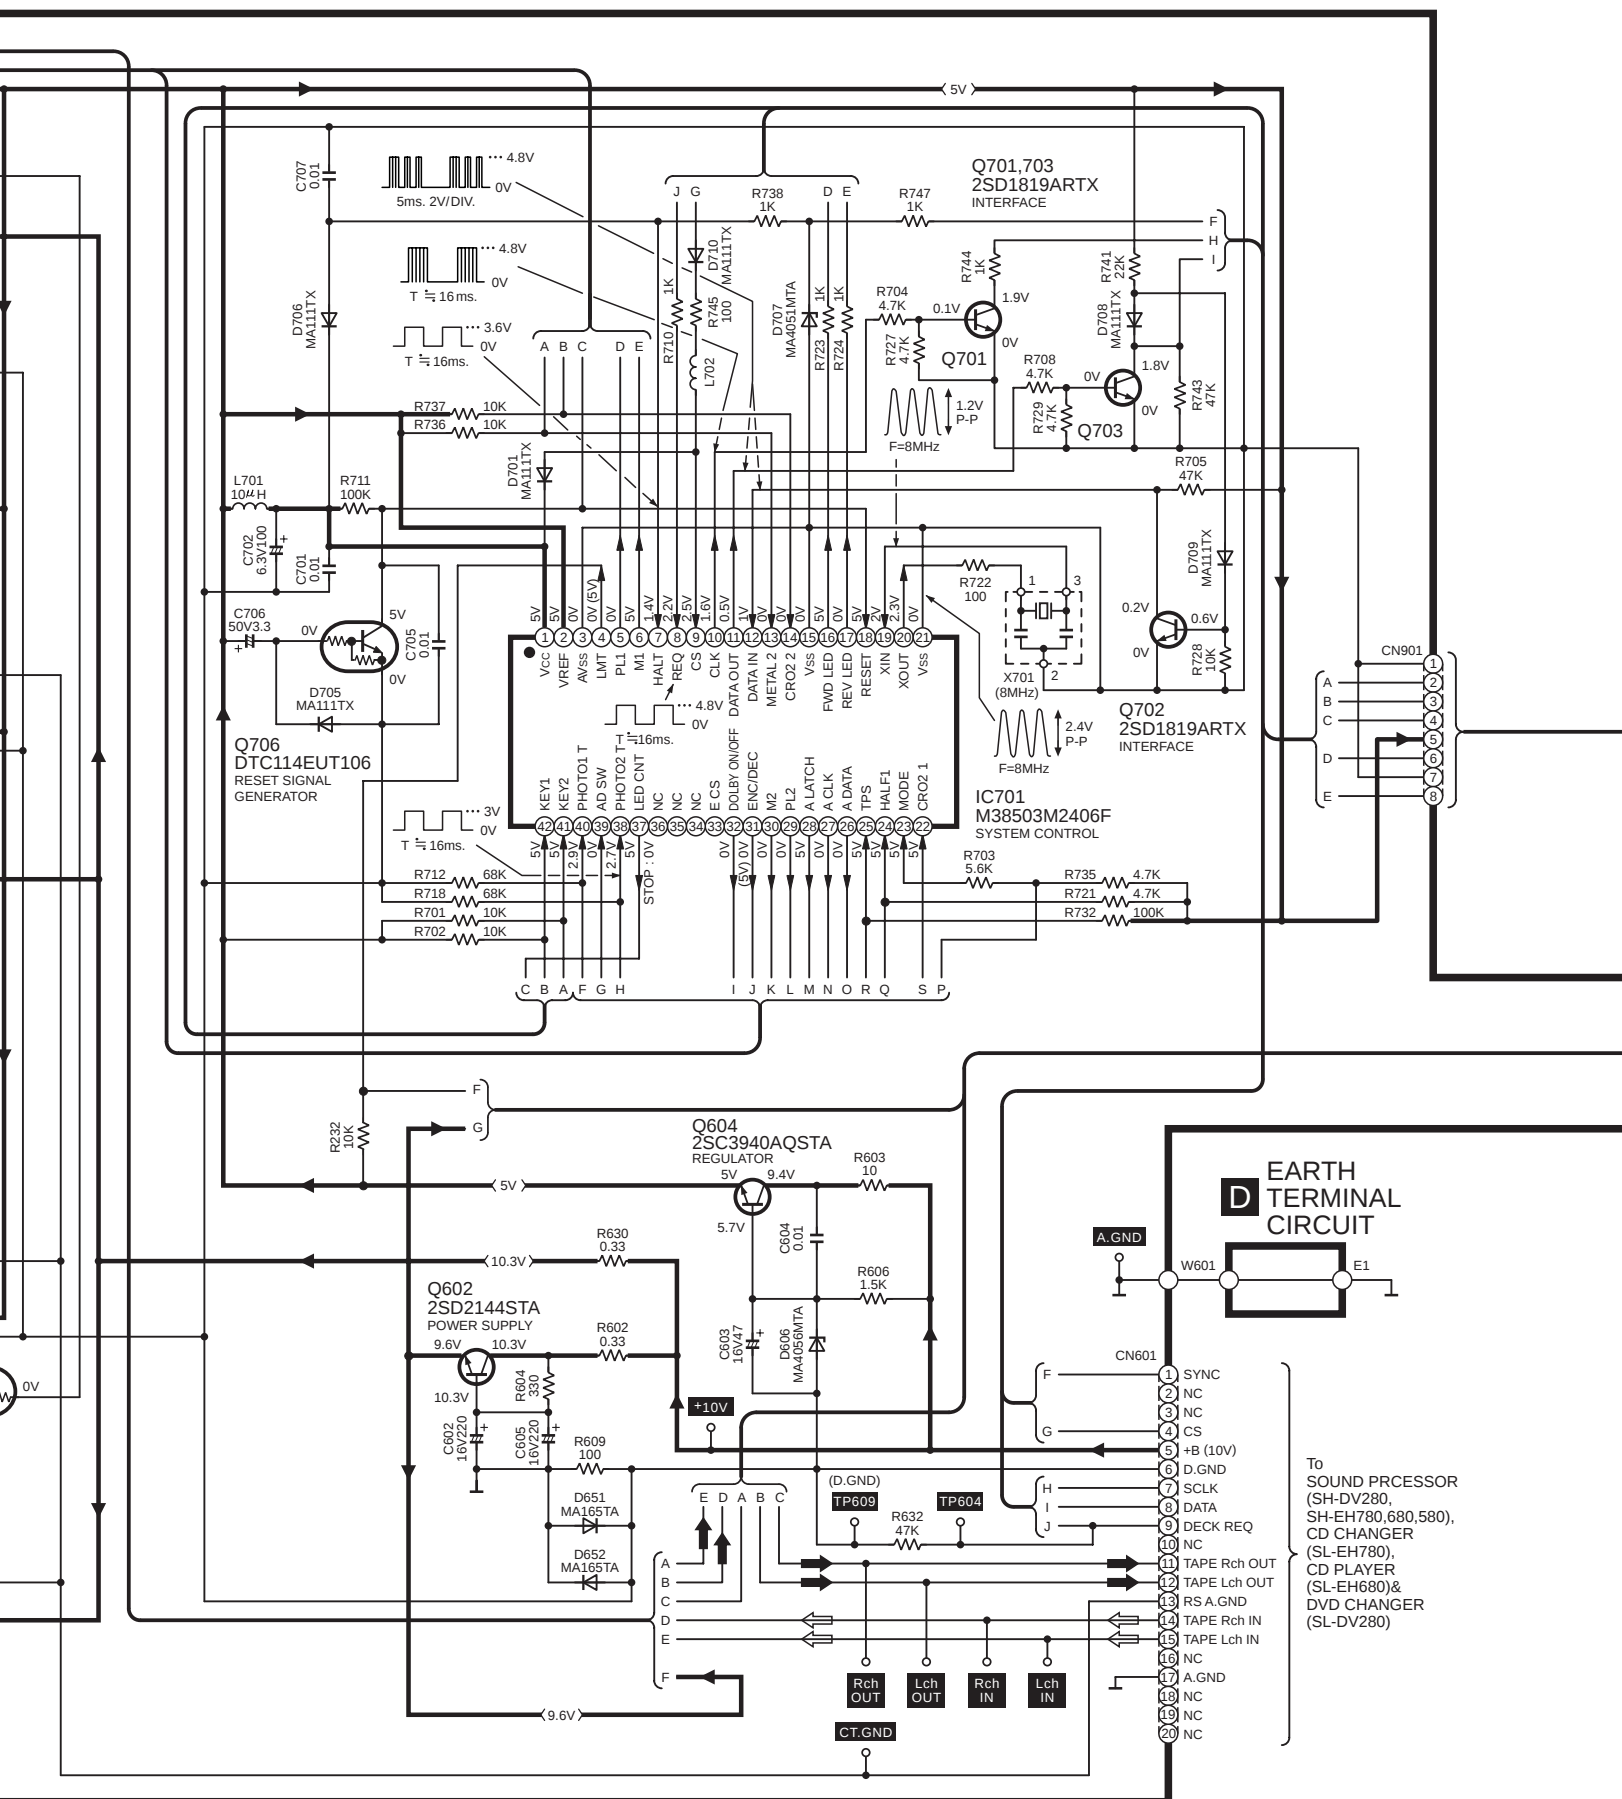 


RS-DV280(EG) MAIN, MECHANISM (DECK 1, 2), EARTH TERMINAL CIRCUIT DIAGRAM


E OPERATION CIRCUIT

 → : POSITIVE VOLTAGE LINE → : PLAYBACK SIGNAL LINE

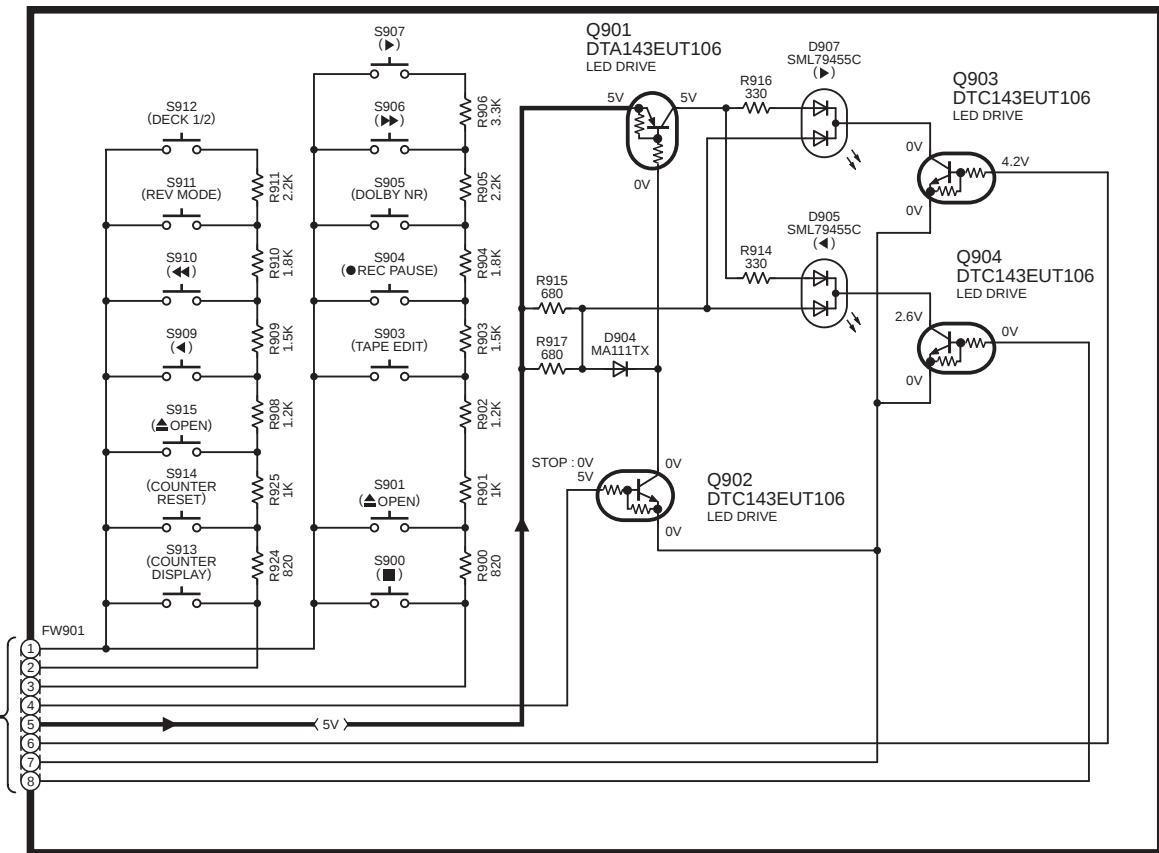


A MAIN CIRCUIT

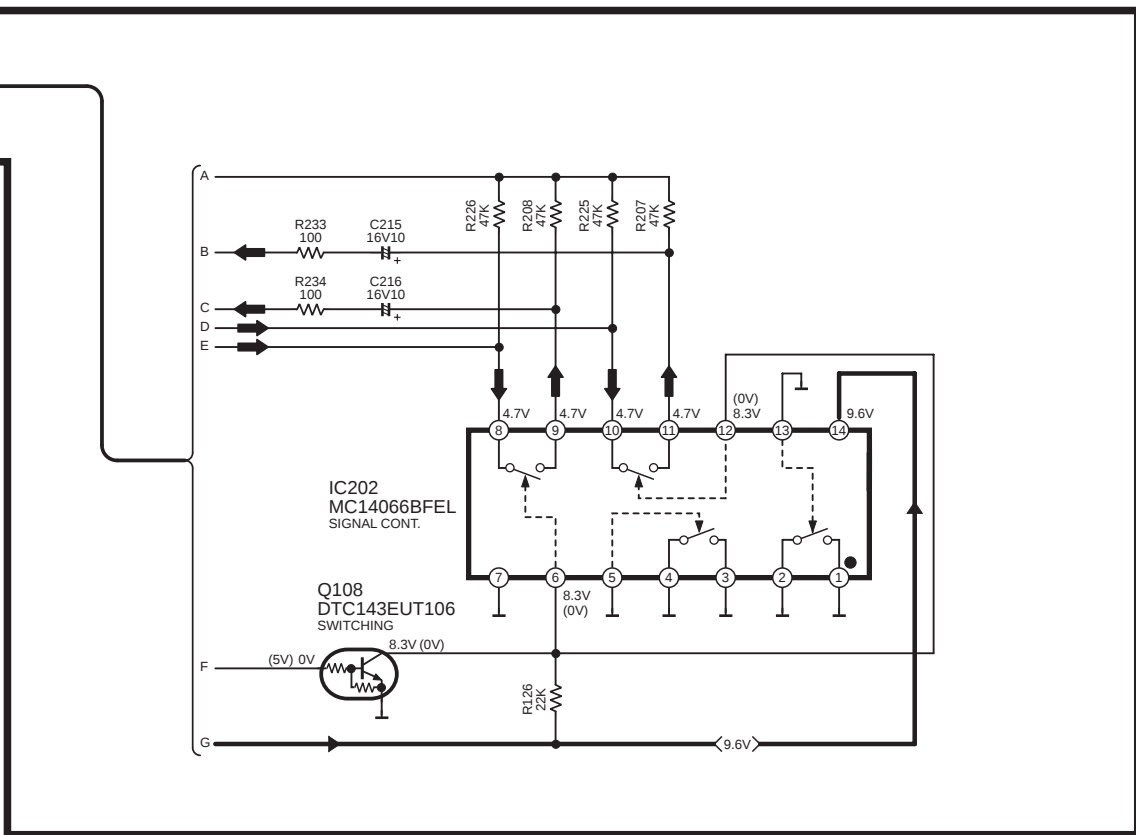 


 


CXA1552M-T4	16PIN
MC14066BFEL	14PIN
M38503M2406F	42PIN

 


BA7755AF

 

CXA1998BQT6

 



0N2180RLC1

 

2SD1450RSTA




  2SB621ARSTA
2SD592ARSTA




2SD1819ARTX
2SD1328STXRA
DTA143EUT106
DTC114EUT106
DTC143EUT106
DTC144EUT106

 
2SC3940AQSTA




2SD2144STA

 


2SJ164QTA
2SJ164RTA

 


MA165TA

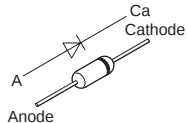 

MA4051MTA
MA4056MTA

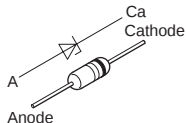 

SML79455C

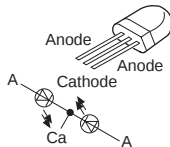 

MA111TX

