


Technics TAPE DECK MODEL RS-M14 SCHEMATIC DIAGRAM

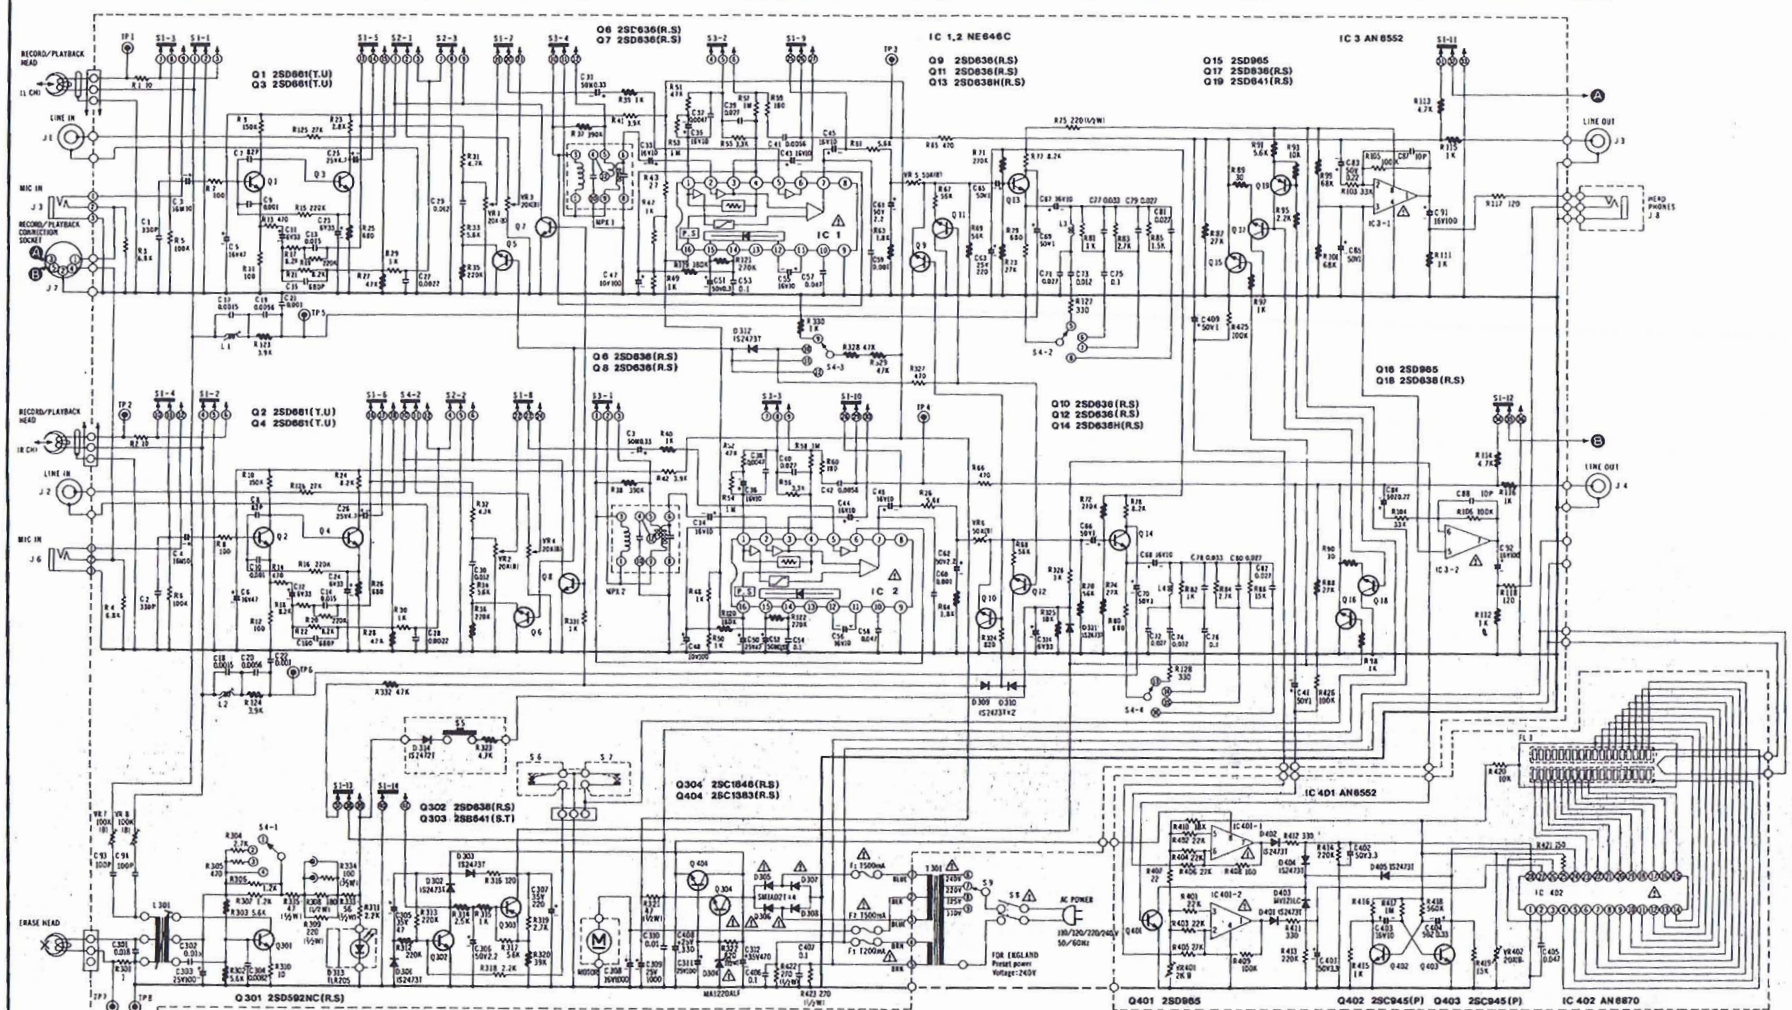

SWITCHES

1. S₁ ~ S₄ RECORD/PLAYBACK SWITCH (PLAYBACK POSITION)
2. S₂ ~ S₂ INPUT SELECTOR SWITCH (LINE POSITION)
3. S₃ ~ S₃ DOLBY SWITCH (OUT POSITION)
4. S₄ ~ S₄ TAPE SELECTOR SWITCH
(1. Nor 2. Fe-Cr 3. CrO₂ 4. Metal)
5. S₅ RECORD MUTING SWITCH (OFF POSITION)
6. S₆ PLAY SWITCH (PLAY POSITION)

7. S₇ CUE/REVIEW SWITCH
8. S₈ POWER SWITCH (OFF POSITION)
9. S₉ VOLTAGE SELECTOR SWITCH

△ indicates that only parts specified manufacturer be used for replacement in critical circuits.
• This schematic diagram is subject to change.