


SERVICE MANUAL

INTEGRATED STEREO AMPLIFIER

SANSUI A-707/505

(Silver & Black Model)

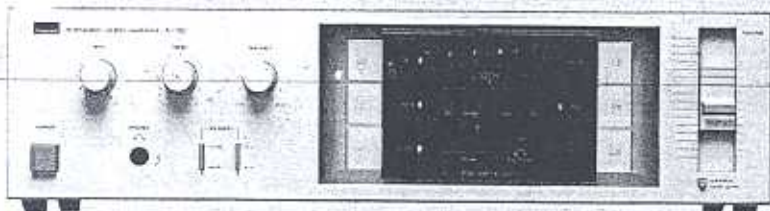

Classic-Audio-Service

HiFi-Service-Center

Heinz Deppermann, Dipl.-Ing.

service@cas-germany.com

Tel. +49 (0) 2065 - 959085

Sansui

SANSUI ELECTRIC CO., LTD.

A-707/505

• SPECIFICATIONS

• A-707

Power output
Min. RMS, both channels driven, from 20 to 20,000 Hz,
with no more than 0.06 % total harmonic distortion
50 watts per channel into 8 ohms

Load impedance 8 ohms

Total harmonic distortion
..... less than 0.06 % at or below
rated min. RMS power output

Frequency response (at 1 watt)
..... 5 to 60,000 Hz
..... +1 dB, -2 dB

RIAA curve deviation (PHONO, 20 Hz to 20 kHz)
..... +0.5 dB, -0.5 dB

Input sensitivity and impedance (1 kHz, for rated power
output)
PHONO 2.5 mV/47 kilohms
(Max. input capability, 120 mV at 1 kHz, less than
0.1 % total harmonic distortion)

TUNER, TAPE PLAY
..... 150 mV/47 kilohms

Output level (1 kHz)
TAPE REC 130 mV into 47 kilohms

Signal to noise ratio (short-circuit, A-network)
PHONO 72 dB
TUNER, TAPE PLAY
..... 90 dB

Power requirements
Power voltage 120/220/240 V (50/60 Hz)
For U.S.A. & Canada
..... 120 V (60 Hz)

Power consumption
..... 190 watts 225 VA Rated
..... 270 watts Maximum

Dimensions 430 mm (16-1/2/16") W
..... 118 mm (4-11/16") H
..... 245 mm (9-11/16") D

Weight 4.9 kg (10.8 lbs.) net
..... 5.7 kg (12.6 lbs.) packed

• A-505

Power output
Min. RMS, both channels driven, from 40 to 20,000 Hz,
with no more than 0.07 % total harmonic distortion
30 watts per channel into 8 ohms

Load impedance 8 ohms

Total harmonic distortion
..... less than 0.07 % at or below
rated min. RMS power output

Frequency response (at 1 watt)
..... 10 to 50,000 Hz
..... +1 dB, -2 dB

RIAA curve deviation (PHONO, 30 Hz to 15 kHz)
..... +0.5 dB, -0.5 dB

Input sensitivity and impedance (1 kHz, for rated power
output)
PHONO 2.5 mV/47 kilohms
(Max. input capability, 120 mV at 1 kHz, less than
0.1 % total harmonic distortion)

TUNER, TAPE PLAY
..... 150 mV/47 kilohms

Output level (1 kHz)
TAPE REC 130 mV into 47 kilohms

Signal to noise ratio (short-circuit, A-network)
PHONO 72 dB
TUNER, TAPE PLAY
..... 90 dB

Power requirements
Power voltage 120/220/240 V (50/60 Hz)
For U.S.A. & Canada
..... 120 V (60 Hz)

Power consumption
..... 120 watts 150 VA Rated
..... 170 watts Maximum

Dimensions 430 mm (16-1/2/16") W
..... 118 mm (4-11/16") H
..... 245 mm (9-11/16") D


Weight 4.0 kg (8.8 lbs.) net
..... 4.8 kg (10.6 lbs.) packed

* Design and specifications subject to changes without
notice for improvements.

2F3



1. BLOCK DIAGRAM

1-1. A-707

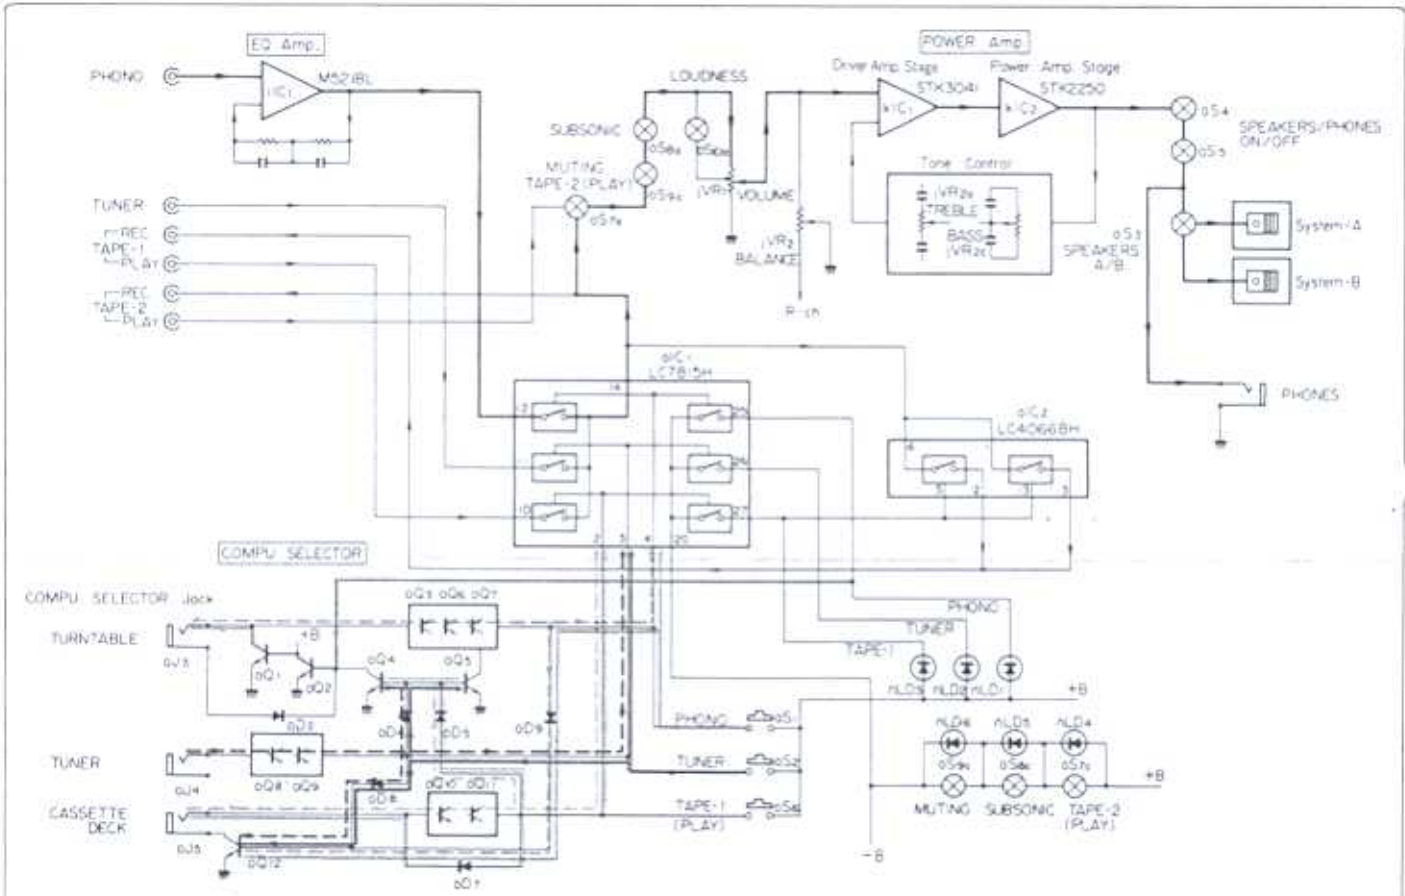

• LC7815H Analog Function Switch IC

• LC4066BH Quad Bilateral Switch IC

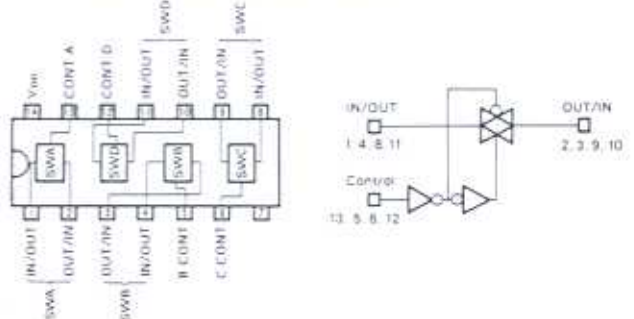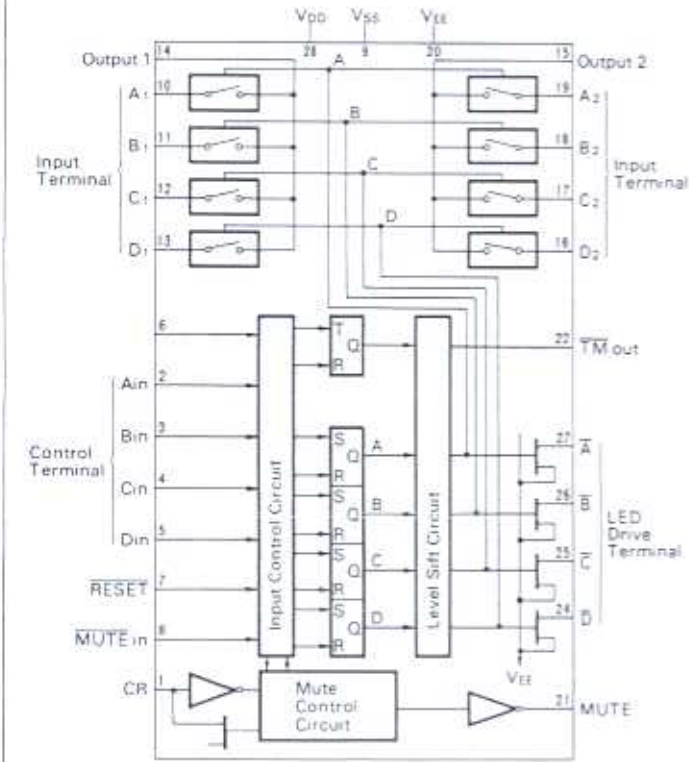


• LC7815H

Condition of control input terminals Port (Pin No.)				Connected input terminal to output 1 and 2 terminals		Connected terminal to LED indicator
Ain (2)	Bin (3)	Cin (4)	Din (5)	PORT (Pin No.)	PORT (Pin No.)	PORT (Pin No.)
H	H	H	H	A (10)	A (19)	A (27)
L	H	H	H	B (11)	B (18)	B (26)
L	L	H	H	C (12)	C (17)	C (25)
L	L	L	H	D (13)	D (16)	D (24)

H: H level L: L level * : Don't care

1-2. A-505

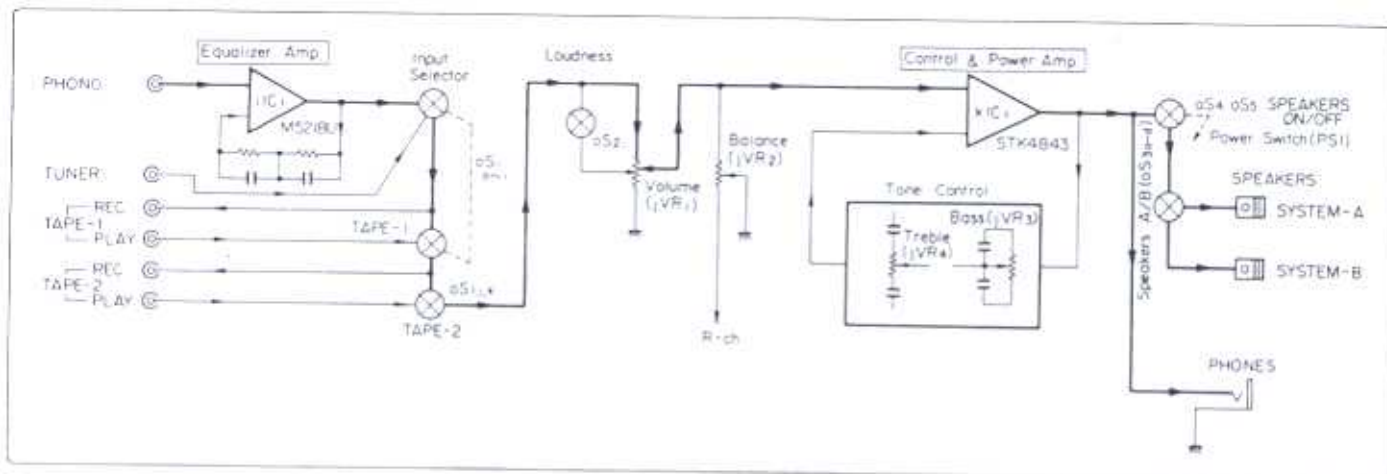

2. OPERATION OF COMPU SELECTOR <A-707> (See A-707 Block Diagram)

• The amplifier (A-707) has COMPU SELECTOR function which works with a tuner (T-707 or T-909), a turntable (P-D30, P-L40 or P-L50), a tape deck (D-77F, D-77R or D-99D).


• When the PHONO or TUNER switch is pushed during tape playback, cassette deck stops automatically.

A. Operation when one of the input selector switches of the amplifier is pushed


- 1) • When the PHONO switch is pushed, the platter of the turntable (P-L40 or P-L50) starts rotating and the tonearm automatically moves to play record.
- When the TUNER or TAPE-1 switch is pushed during record play, the tonearm returns to the arm rest and the platter stops rotating automatically.
- 2) • When the TAPE-1 switch is pushed, the cassette deck (D-77F or D-77R) starts automatically to playback a tape.

B. Operation when one of the function switches of combined unit is controlled

- 1) When the START/STOP switch of the turntable (P-D30, P-L40 or P-L50) is pushed, the input selector of the amplifier is automatically set to the PHONO mode.
- 2) When one of the FM/AM selection switch and the UP/DOWN switch of the tuner (T-707 or T-909) is pushed, or the tuning knob of the tuner is touched by hand, the input selector of the amplifier is automatically set to TUNER mode.
- 3) When the PLAY switch of the cassette deck is pushed, the input selector of the amplifier is automatically set to the TAPE-1 mode.

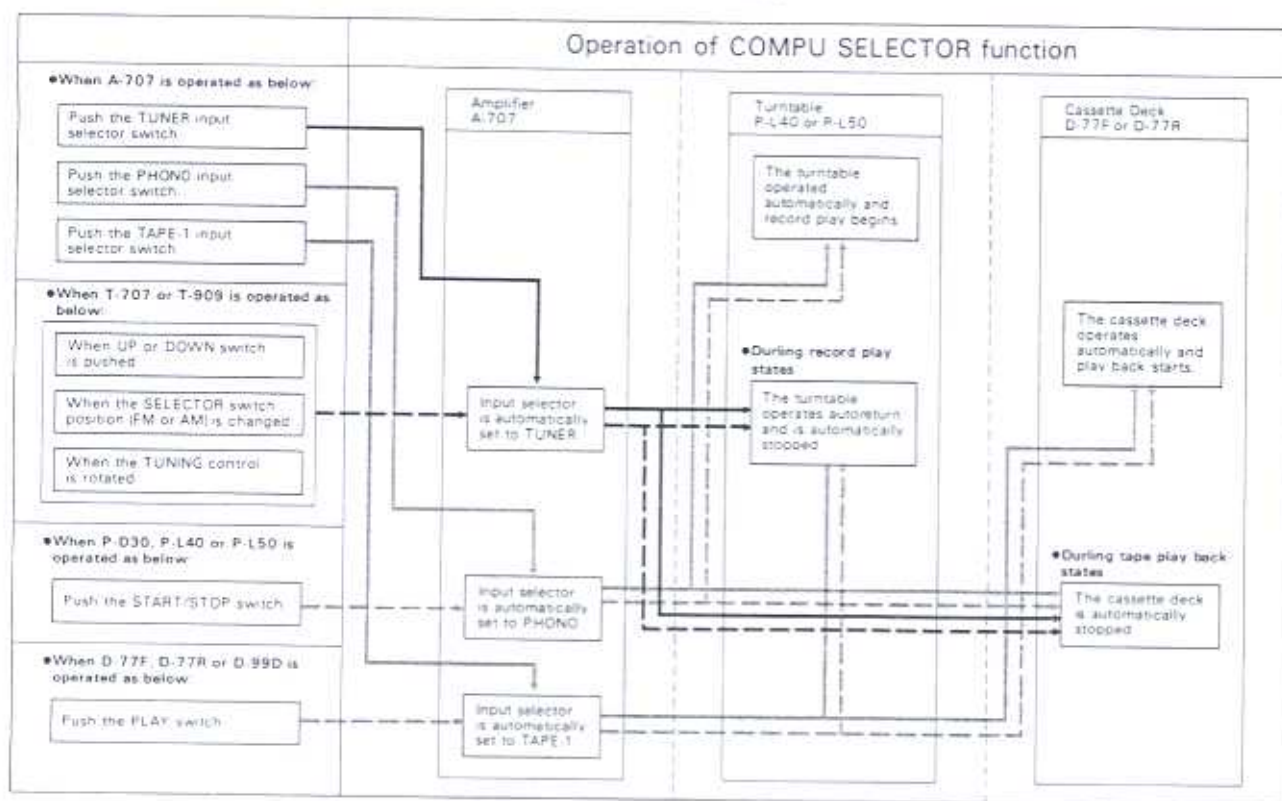

1-2. A-505

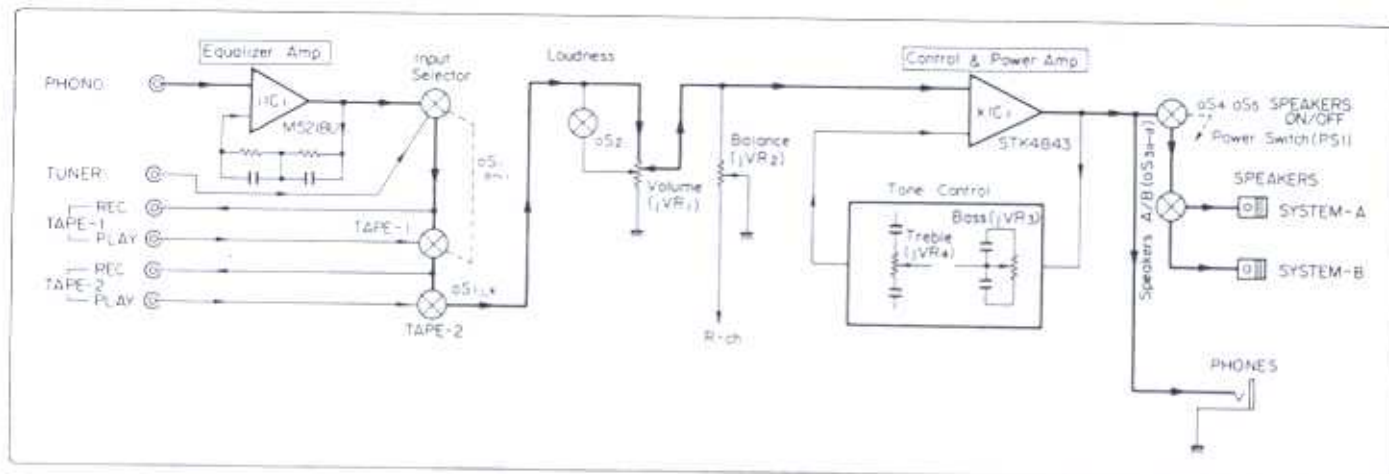

2. OPERATION OF COMPU SELECTOR <A-707> (See A-707 Block Diagram)

• The amplifier (A-707) has COMPU SELECTOR function which works with a tuner (T-707 or T-909), a turntable (P-D30, P-L40 or P-L50), a tape deck (D-77F, D-77R or D-99D).


• When the PHONO or TUNER switch is pushed during tape playback, cassette deck stops automatically.

A. Operation when one of the input selector switches of the amplifier is pushed

- 1) When the PHONO switch is pushed, the platter of the turntable (P-L40 or P-L50) starts rotating and the tonearm automatically moves to play record.
- When the TUNER or TAPE-1 switch is pushed during record play, the tonearm returns to the arm rest and the platter stops rotating automatically.
- 2) When the TAPE-1 switch is pushed, the cassette deck (D-77F or D-77R) starts automatically to playback a tape.

B. Operation when one of the function switches of combined unit is controlled


- 1) When the START/STOP switch of the turntable (P-D30, P-L40 or P-L50) is pushed, the input selector of the amplifier is automatically set to the PHONO mode.
- 2) When one of the FM/AM selection switch and the UP/DOWN switch of the tuner (T-707 or T-909) is pushed, or the tuning knob of the tuner is touched by hand, the input selector of the amplifier is automatically set to TUNER mode.
- 3) When the PLAY switch of the cassette deck is pushed, the input selector of the amplifier is automatically set to the TAPE-1 mode.

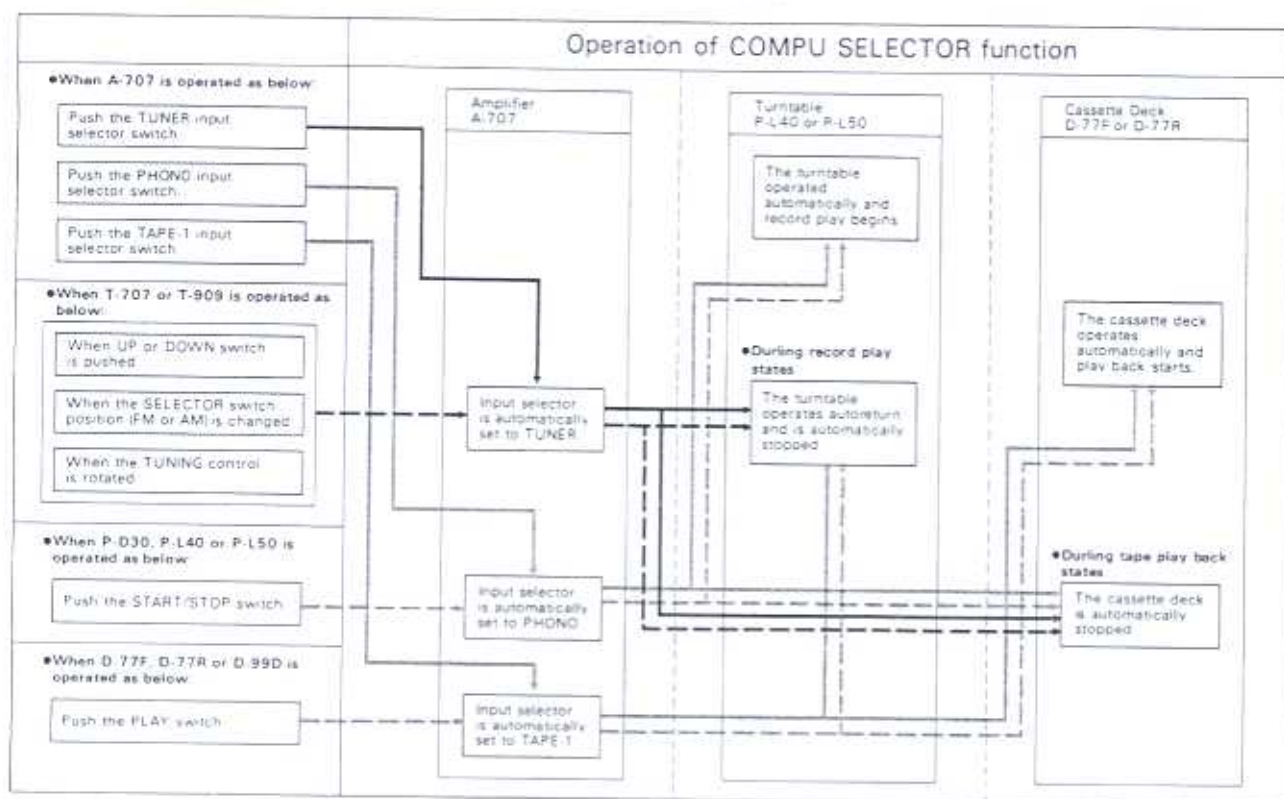

3. PARTS LOCATION & PARTS LIST

3-1. F-3729 Power Amp. & Power Supply Circuit Board (Stock No. 00704201) <A-707>

Component Side

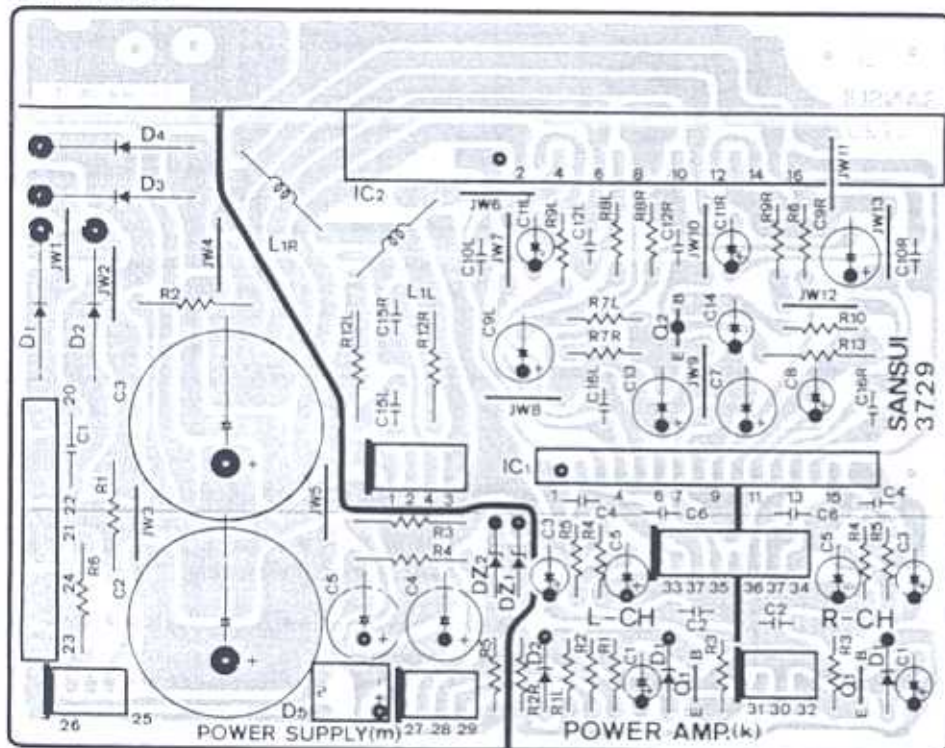

Parts List

Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
• Transistor			• Diode		
KQ1	07194801	2SC1815	mD1	03115300	3002
	or 46367301	2SC245B	mD2	03115300	3002
KQ2	03010901	2SA992	mD3	03115300	3002
• IC			mD4	03115300	3002
KIC1	46395100	STK3041	mD5	46273600	DBB10-B
KIC2	46395000	STK2250	• Zener Diode		
• Diode			mDZ1	46113800	05Z12
KD1	03117600	1S2473D	mDZ2	46113800	05Z12
KD2	03117600	1S2473D	mR1	46251400	5.6kΩ 1W N.I.R.
KR6	46229000	100Ω 1/2W N.I.R.	mR2	46251400	5.6kΩ 1W N.I.R.
KR9	46229400	220Ω 1/2W N.I.R.	mR3	46249800	270Ω 1W N.I.R.
KR11	46230200	1kΩ 1/2W N.I.R.	mR4	46249800	270Ω 1W N.I.R.
KR12	46247700	4.7Ω 1W N.I.R.	mR5	46229900	5.6kΩ 1/2W N.I.R.
KC2	46137200	220pF 50V C.C.	mC1	08680400	10000pF 500V C.C.
KC4	46137200	220pF 50V C.C.	mC2	46395200	4700μF 50V E.C.
KL1	46394500, 1	Inductor Coil	mC3	46395200	4700μF 50V E.C.

• Abbreviations


C.R.	Carbon Resistor	E.B.	Bi-Polar Electrolytic Capacitor
S.R.	Solid Resistor	E.B.L.	Low Leak Bi-Polar Electrolytic Capacitor
Ce.R.	Cement Resistor	Ta.C.	Tantalum Capacitor
M.R.	Metal Film Resistor	F.C.	Film Capacitor
F.R.	Fusing Resistor	M.P.	Metalized Paper Capacitor
N.I.R.	Non-Inflammable Resistor	P.C.	Polystyrene Capacitor
C.C.	Ceramic Capacitor	G.C.	Gimmic Capacitor
C.T.	Ceramic Capacitor, Temperature Compensation	V.R.	Variable Resistor
E.C.	Electrolytic Capacitor	S.V.R.	Semi Variable Resistor
E.L.	Low Leak Electrolytic Capacitor	SW	Switch

• Since some of capacitors and resistors are omitted from parts lists in this Service Manual, refer to the Common Parts List for capacitors & resistors, which was appended previously to Sansui Manual.

3. PARTS LOCATION & PARTS LIST

3-1. F-3729 Power Amp. & Power Supply Circuit Board (Stock No. 00704201) <A-707>

Component Side

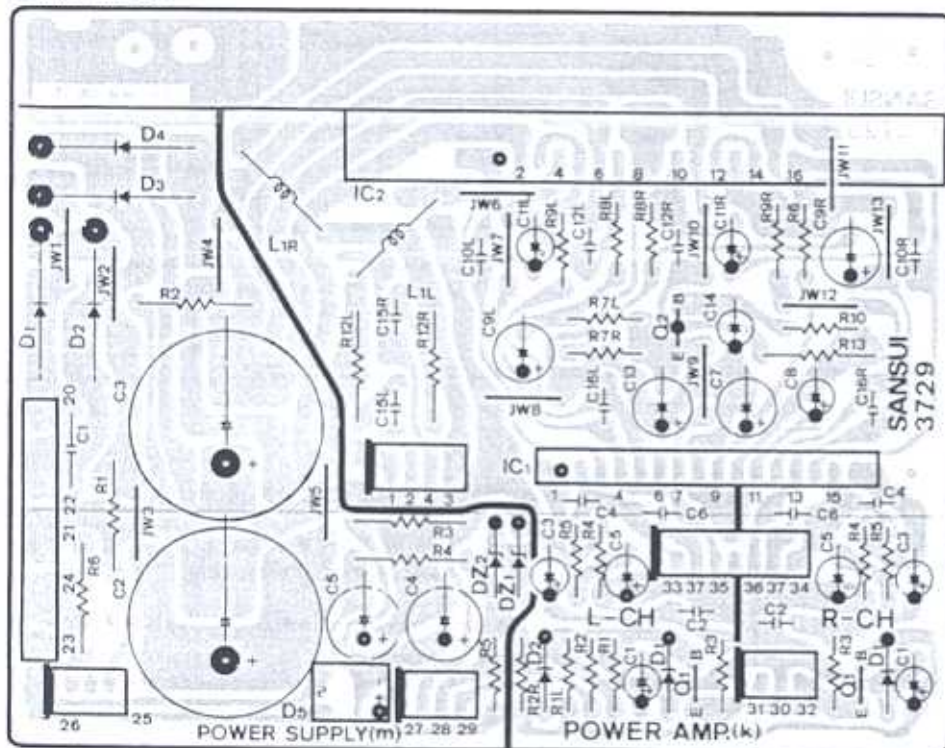

Parts List

Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
• Transistor			• Diode		
kQ1	07194801	2SC1815	mD1	03115300	3002
	or 46367301	2SC245B	mD2	03115300	3002
kQ2	03010901	2SA992	mD3	03115300	3002
• IC			mD4	03115300	3002
kIC1	46395100	STK3041	mD5	46273600	DBB10-B
kIC2	46395000	STK2250	• Zener Diode		
• Diode			mDZ1	46113800	05Z12
kD1	03117600	1S2473D	mDZ2	46113800	05Z12
kD2	03117600	1S2473D	• Resistor		
kR6	46229000	100Ω 1/2W N.I.R.	mR1	46251400	5.6kΩ 1W N.I.R.
kR9	46229400	220Ω 1/2W N.I.R.	mR2	46251400	5.6kΩ 1W N.I.R.
kR11	46230200	1kΩ 1/2W N.I.R.	mR3	46249800	270Ω 1W N.I.R.
kR12	46247700	4.7Ω 1W N.I.R.	mR4	46249800	270Ω 1W N.I.R.
• Capacitor			mR5	46229900	5.6kΩ 1/2W N.I.R.
kC2	46137200	220pF 50V C.C.	• Capacitor		
kC4	46137200	220pF 50V C.C.	mC1	08680400	10000pF 500V C.C.
• Inductor			mC2	46395200	4700μF 50V E.C.
kL1	46394500, 1	Inductor Coil	mC3	46395200	4700μF 50V E.C.


• Abbreviations

C.R.	Carbon Resistor	E.B.	Bi-Polar Electrolytic Capacitor
S.R.	Solid Resistor	E.B.L.	Low Leak Bi-Polar Electrolytic Capacitor
Ce.R.	Cement Resistor	Ta.C.	Tantalum Capacitor
M.R.	Metal Film Resistor	F.C.	Film Capacitor
F.R.	Fusing Resistor	M.P.	Metalized Paper Capacitor
N.I.R.	Non-Inflammable Resistor	P.C.	Polystyrene Capacitor
C.C.	Ceramic Capacitor	G.C.	Gimmic Capacitor
C.T.	Ceramic Capacitor, Temperature Compensation	V.R.	Variable Resistor
E.C.	Electrolytic Capacitor	S.V.R.	Semi-Variable Resistor
E.L.	Low Leak Electrolytic Capacitor	SW	Switch

• Since some of capacitors and resistors are omitted from parts lists in this Service Manual, refer to the Common Parts List for capacitors & resistors, which was appended previously to Sansui Manual.

3-2. F-3735 COMPU SELECTOR Control IC Circuit Board (Stock No. 00704701) <A-707>

Component Side

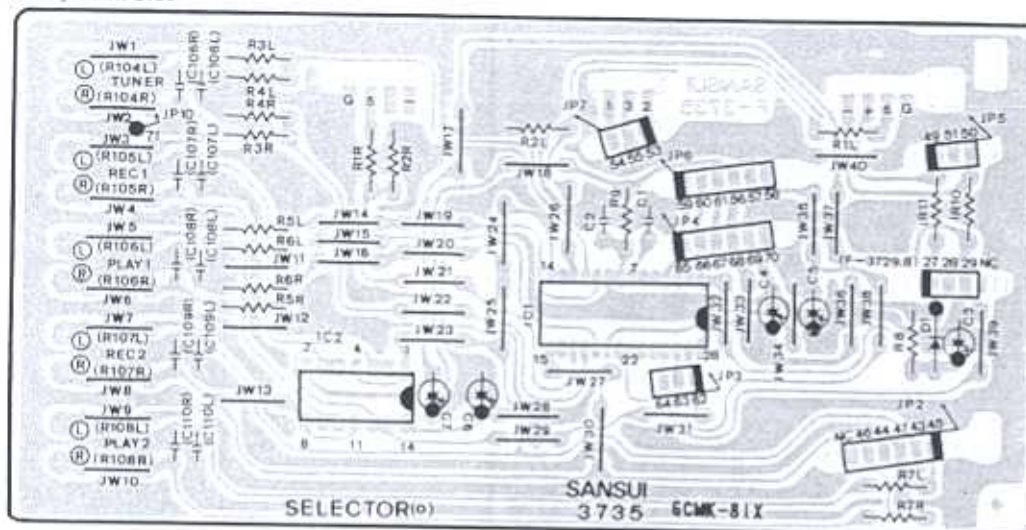


Parts List

Parts No.	Stock No.	Description
R10	46229000	100Ω 1/2W N.I.R.
R11	46229000	100Ω 1/2W N.I.R.
•IC		
oIC1	46394800	LC7815H
oIC2	46255000	LC4066BH

Parts No.	Stock No.	Description
•Diode		
oD1	03117600	1S2473D
	46371500	4P Input Terminal, TUNER/TAPE-1 (REC)
	46363900	6P Input Terminal, TAPE-1 (PLAY)/TAPE-2

3-3. F-3739 COMPU SELECTOR Circuit Board (Stock No. 00705101) <A-707>

Component Side

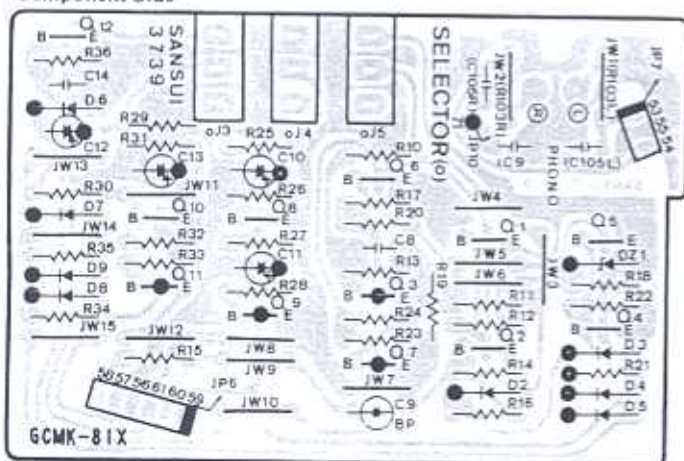

Parts List


Parts No.	Stock No.	Description
•Transistor		
oQ1	07194801	2SC1815
	or 46367301	2SC2458
oQ2	07194801	2SC1815
	or 46367301	2SC2458
oQ3	07194701	2SA1015
	or 46367201	2SA1048
oQ4	07194801	2SC1815
	or 46367301	2SC2458
oQ5	07194801	2SC1815
	or 46367301	2SC2458
oQ6	07194801	2SC1815
	or 46367301	2SC2458
oQ7	07194701	2SA1015
	or 46367201	2SA1048
oQ8	07194801	2SC1815
	or 46367301	2SC2458

Parts No.	Stock No.	Description
oQ9	07194701	2SA1015
	or 46367201	2SA1048
oQ10	07194801	2SC1815
	or 46367301	2SC2458
oQ11	07194701	2SA1015
	or 46367201	2SA1048
oQ12	07194801	2SC1815
	or 46367301	2SC2458
•Diode		
oD2	03117600	1S2473D
oD3	03117600	1S2473D
oD4	03117600	1S2473D
oD5	03117600	1S2473D
oD6	03117600	1S2473D
oD7	03117600	1S2473D
oD8	03117600	1S2473D

Parts No.	Stock No.	Description
oD9	03117600	1S2473D
•Zener Diode		
oDZ1	46111200	05Z5.1
oC9	08450800	3.3μF 16V E.B.
oJ3	46148200	Jack (Mini), COMPU SELECTOR
oJ4	46148200	Jack (Mini), COMPU SELECTOR
oJ5	46148200	Jack (Mini), COMPU SELECTOR
	46363700	2P Input Terminal, PHONO

3-2. F-3735 COMPU SELECTOR Control IC Circuit Board (Stock No. 00704701) <A-707>

Component Side

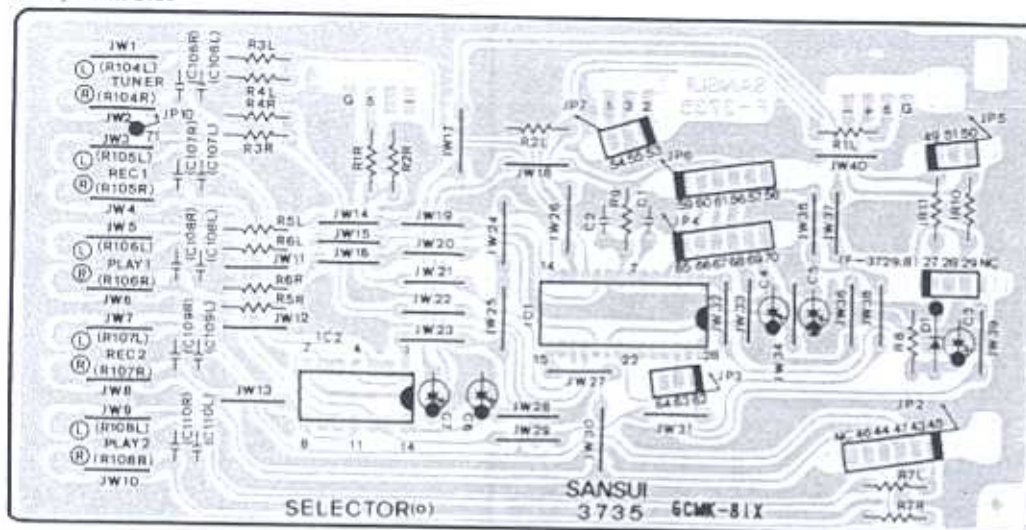


Parts List

Parts No.	Stock No.	Description
R10	46229000	100Ω 1/2W N.I.R
R11	46229000	100Ω 1/2W N.I.R
•IC		
oIC1	46394800	LC7815H
oIC2	46255000	LC4066BH

Parts No.	Stock No.	Description
•Diode		
oD1	03117600	1S2473D
	46371500	4P Input Terminal, TUNER/TAPE-1 (REC)
	46363900	6P Input Terminal, TAPE-1 (PLAY)/TAPE-2

3-3. F-3739 COMPU SELECTOR Circuit Board (Stock No. 00705101) <A-707>

Component Side

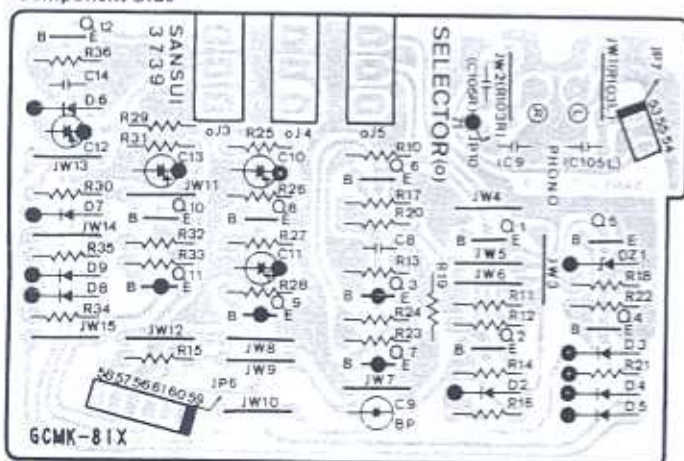

Parts List


Parts No.	Stock No.	Description
•Transistor		
oQ1	07194801	2SC1815
	or 46367301	2SC2458
oQ2	07194801	2SC1815
	or 46367301	2SC2458
oQ3	07194701	2SA1015
	or 46367201	2SA1048
oQ4	07194801	2SC1815
	or 46367301	2SC2458
oQ5	07194801	2SC1815
	or 46367301	2SC2458
oQ6	07194801	2SC1815
	or 46367301	2SC2458
oQ7	07194701	2SA1015
	or 46367201	2SA1048
oQ8	07194801	2SC1815
	or 46367301	2SC2458

Parts No.	Stock No.	Description
oQ9	07194701	2SA1015
	or 46367201	2SA1048
oQ10	07194801	2SC1815
	or 46367301	2SC2458
oQ11	07194701	2SA1015
	or 46367201	2SA1048
oQ12	07194801	2SC1815
	or 46367301	2SC2458
•Diode		
oD2	03117600	1S2473D
oD3	03117600	1S2473D
oD4	03117600	1S2473D
oD5	03117600	1S2473D
oD6	03117600	1S2473D
oD7	03117600	1S2473D
oD8	03117600	1S2473D

Parts No.	Stock No.	Description
oD9	03117600	1S2473D
•Zener Diode		
oDZ1	46111200	05Z5.1
oC9	08450800	3.3μF 16V E.B.
oJ3	46148200	Jack (Mini), COMPU SELECTOR
oJ4	46148200	Jack (Mini), COMPU SELECTOR
oJ5	46148200	Jack (Mini), COMPU SELECTOR
	46363700	2P Input Terminal, PHONO

3-4. F-3730 Power Amp. & Power Supply Circuit Board (Stock No. 00695801) <A-505>

Component Side

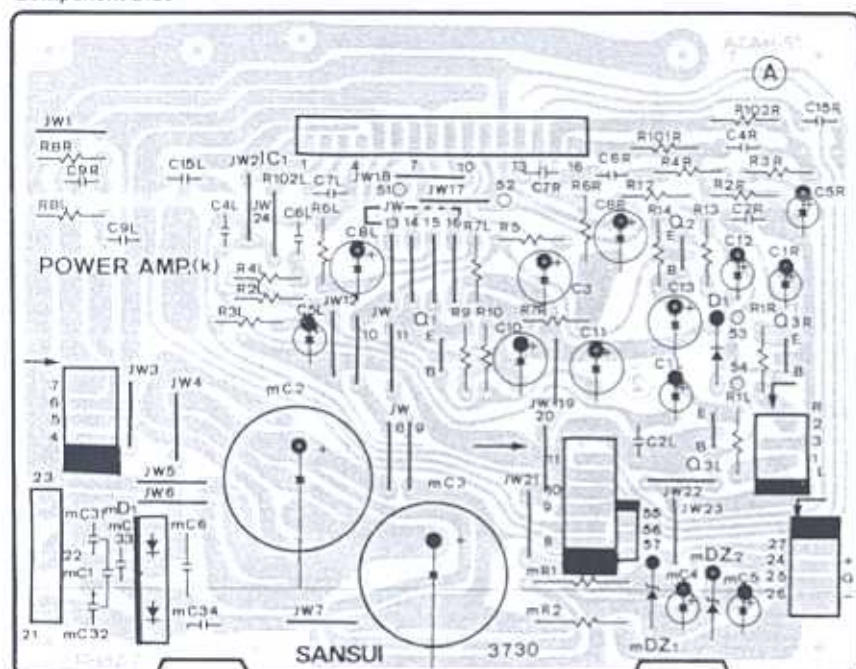

Parts List


Parts No.	Stock No.	Description
• Transistor		
• Q1	07194701	2SA1015
• IC		
• IC1	46367600	STK4843
• R5	46229000	100Ω 1/2W N.I.R.
• R8	46227800	10Ω 1/2W N.I.R.
• R9	46229000	100Ω 1/2W N.I.R.
• C2	46137400	330pF 50V C.C.
• C4	46137400	330pF 50V C.C.
• C6	46137600	470pF 50V C.C.

Parts No.	Stock No.	Description
-----------	-----------	-------------

• Diode		
• mD1	03117000	RB-152
• Zener Diode		
• mD21	46115400	05Z20
• mD22	46115400	05Z20
• mR1	46250300	680Ω 1W N.I.R.
• mR2	46250300	680Ω 1W N.I.R.
• mC1	06680400	10000pF 50V C.C.
• mC2	46363300	3900μF 42V E.C.
• mC3	46363300	3900μF 42V E.C.

3-5. F-3725 EQ. Amp. Circuit Board (Stock No. 00695501) <A-707/A-505>

Component Side

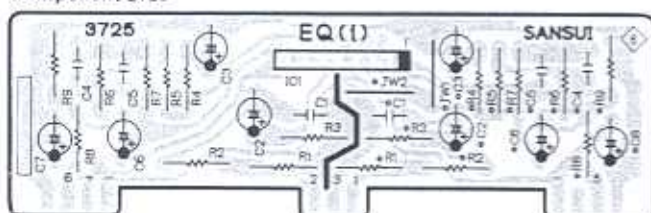


Parts List

Parts No.	Stock No.	Description
• IC		
• IC1	46078900	M5218L
• IC2	46137200	220pF 50V C.C.

3-6. F-3726 Tone Control Circuit Board <A-707/A-505>

Component Side

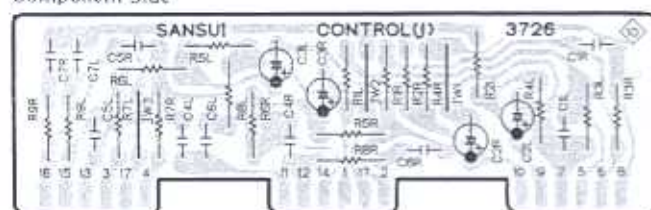


Parts List

Parts No.	Stock No.	Description
• IC7	07216800	68000pF 25V C.C.

Note: This circuit board is not supplied as the assembled. However, individual parts on the circuit board are provided by order.

3-4. F-3730 Power Amp. & Power Supply Circuit Board (Stock No. 00695801) <A-505>

Component Side

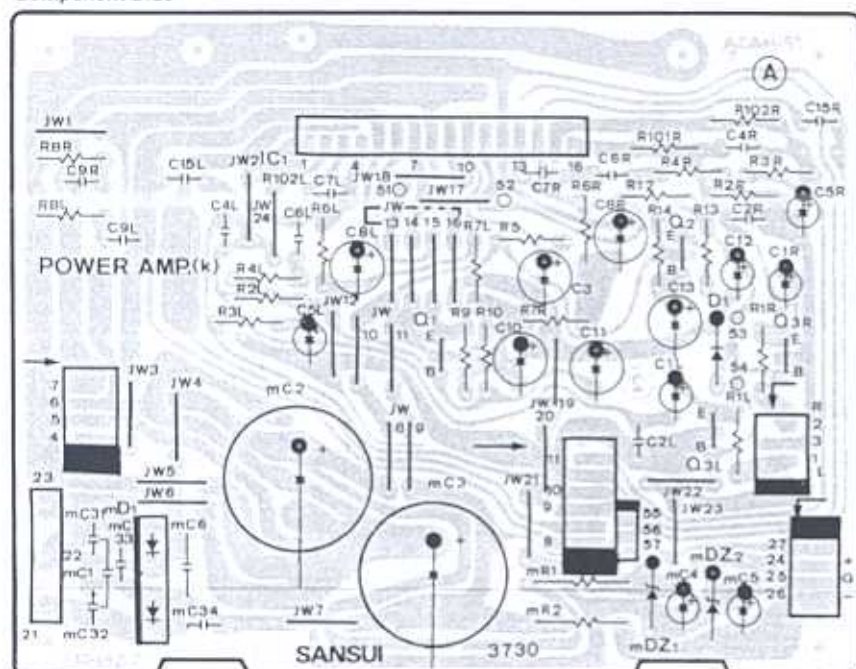

Parts List


Parts No.	Stock No.	Description
• Transistor		
• Q1	07194701	2SA1015
• IC		
• IC1	46367600	STK4843
• R5	46229000	100Ω 1/2W N.I.R.
• R8	46227800	10Ω 1/2W N.I.R.
• R9	46229000	100Ω 1/2W N.I.R.
• C2	46137400	330pF 50V C.C.
• C4	46137400	330pF 50V C.C.
• C6	46137600	470pF 50V C.C.

Parts No.	Stock No.	Description
-----------	-----------	-------------

• Diode		
• mD1	03117000	RB-152
• Zener Diode		
• mD21	46115400	05Z20
• mD22	46115400	05Z20
• mR1	46250300	680Ω 1W N.I.R.
• mR2	46250300	680Ω 1W N.I.R.
• mC1	06680400	10000pF 50V C.C.
• mC2	46363300	3900μF 42V E.C.
• mC3	46363300	3900μF 42V E.C.

3-5. F-3725 EQ. Amp. Circuit Board (Stock No. 00695501) <A-707/A-505>

Component Side

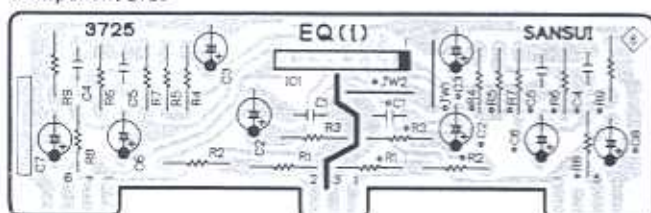


Parts List

Parts No.	Stock No.	Description
• IC		
• IC1	46078900	M5218L
• IC2	46137200	220pF 50V C.C.

3-6. F-3726 Tone Control Circuit Board <A-707/A-505>

Component Side

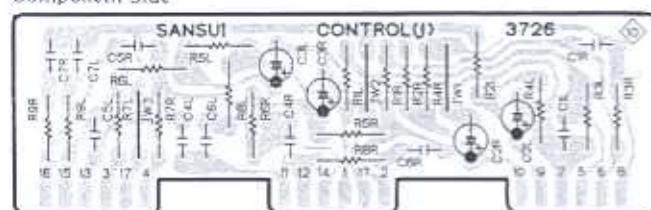


Parts List

Parts No.	Stock No.	Description
• IC7	07216800	68000pF 25V C.C.

Note: This circuit board is not supplied as the assembled. However, individual parts on the circuit board are provided by order.

3-4. F-3730 Power Amp. & Power Supply Circuit Board (Stock No. 00695801) <A-505>

Component Side

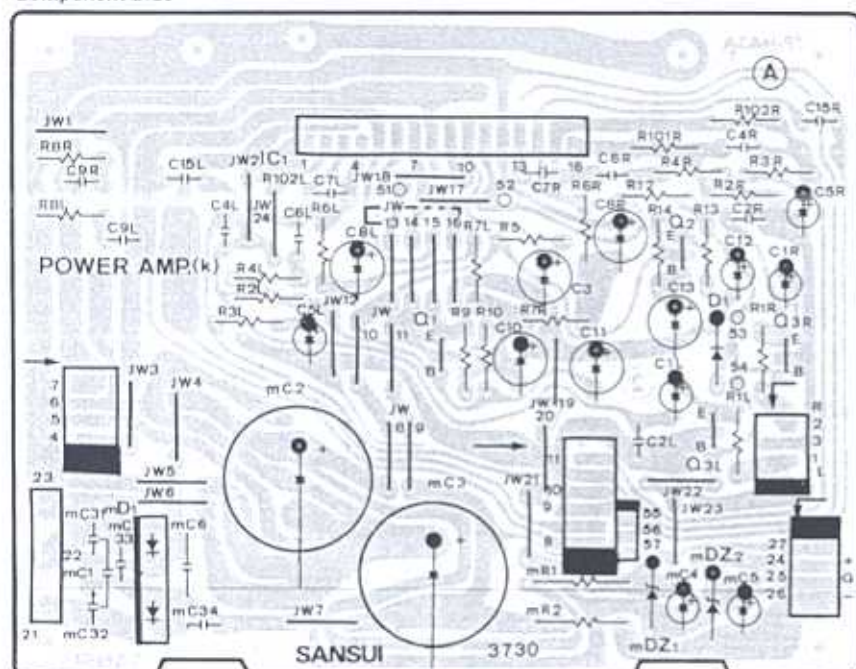

Parts List


Parts No.	Stock No.	Description
• Transistor		
• Q1	07194701	2SA1015
• IC		
• IC1	46367800	STK4843
• R5	46229000	100Ω 1/2W N.I.R.
• R8	46227800	10Ω 1/2W N.I.R.
• R9	46229000	100Ω 1/2W N.I.R.
• C2	46137400	330pF 50V C.C.
• C4	46137400	330pF 50V C.C.
• C6	46137600	470pF 50V C.C.

Parts No.	Stock No.	Description
-----------	-----------	-------------

• Diode		
• mD1	03117000	RB-152
• Zener Diode		
• mD21	46115400	05Z20
• mD22	46115400	05Z20
• mR1	46250300	680Ω 1W N.I.R.
• mR2	46250300	680Ω 1W N.I.R.
• mC1	06680400	10000pF 50V C.C.
• mC2	46363300	3900μF 42V E.C.
• mC3	46363300	3900μF 42V E.C.

3-5. F-3725 EQ. Amp. Circuit Board (Stock No. 00695501) <A-707/A-505>

Component Side

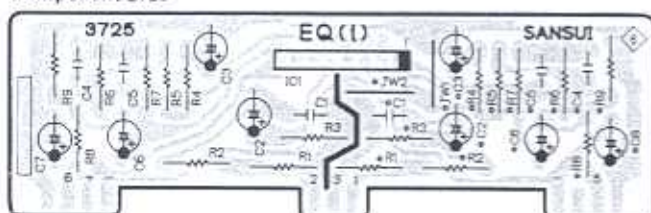


Parts List

Parts No.	Stock No.	Description
• IC		
• IC1	46078900	M5218L
• IC2	46137200	220pF 50V C.C.

3-6. F-3726 Tone Control Circuit Board <A-707/A-505>

Component Side

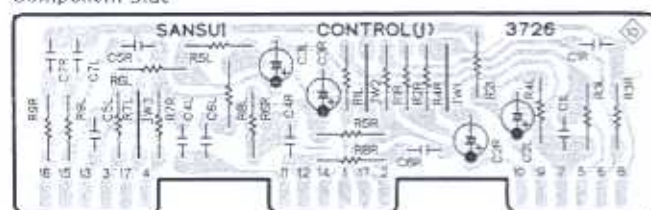

Parts List

Parts No.	Stock No.	Description
• IC7	07216800	68000pF 25V C.C.

Note: This circuit board is not supplied as the assembled. However, individual parts on the circuit board are provided by order.

- Note: The circuit boards, F-3736, F-3737, F-3738, F-3740, F-3741, F-3742, F-3743, F-3744, F-3727, F-3731 & F-3732 are not supplied as the assembled. However, the individual parts on the circuit boards are provided by orders.

3-7. F-3736 Input Selector Switch & Indicator Circuit Board <A-707>

Component Side



Parts List

Parts No.	Stock No.	Description
nLD1	46176900	LED TLS-123
nLD2	46176900	LED TLS-123
nLD3	46176900	LED TLS-123
nLD4	46176900	LED TLS-123
nLD5	46176900	LED TLS-123
nLD6	46176900	LED TLS-123
nPL1	46315900	Pilot Lamp 12V 1.5A
oS1	46395900	Push SW., PHONO
oS2	46395900	Push SW., TUNER
oS6	46395900	Push SW., TAPE-1
oS7	46365400	Push SW., TAPE-2
oS8	46365400	Push SW., SUBSONIC
oS9	46365400	Push SW., MUTING

3-8. F-3737 BASS/TREBLE/BALANCE Volume Circuit Board <A-707>

Component Side




Parts List

Parts No.	Stock No.	Description
VR2	46363100	50k Ω (C1) x 2 + 250k Ω

3-9. F-3738 VOLUME Circuit Board <A-707>

Component Side

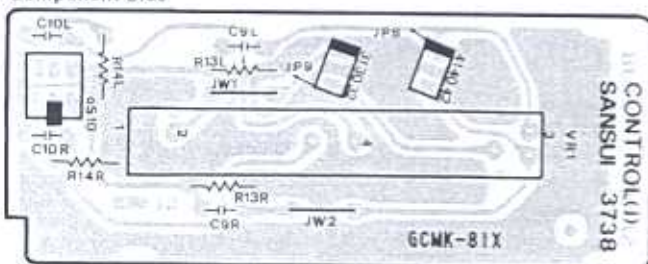


Parts List

Parts No.	Stock No.	Description
IC9	46137600	470pF 50V C.C.
IC10	07216200	22000pF 25V C.C.
VR1	46395300	150k Ω Slide V.R., VOLUME
oS10	46360900	Push SW., LOUDNESS

3-10. F-3740 Input Terminal Circuit Board <A-505>

Component Side

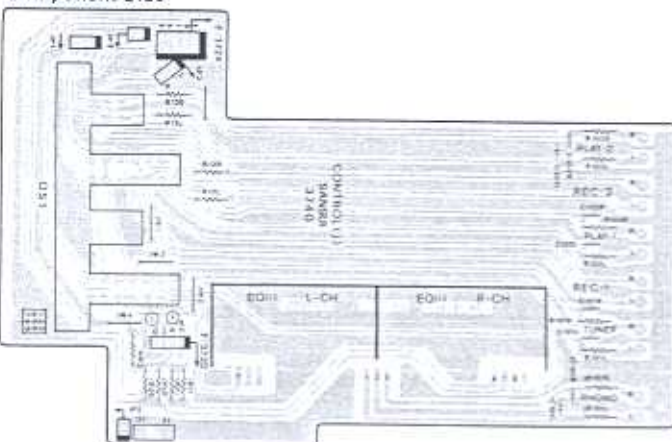

Parts List

Parts No.	Stock No.	Description
IR10	46230400	1.5k Ω 1/2W N.I.R.
IR11	46230400	1.5k Ω 1/2W N.I.R.
IR4	46229000	100 Ω 1/2W N.I.R.
IR5	46229000	100 Ω 1/2W N.I.R.
oS1	46365600	Push SW., PHONO/TUNER/TAPE-1
	46363700	2P Input Terminal, PHONO
	46371500	4P Input Terminal, TUNER, TAPE-1 REC
	46363900	6P Input Terminal, TAPE-1 PLAY, TAPE 2

- Note: The circuit boards, F-3736, F-3737, F-3738, F-3740, F-3741, F-3742, F-3743, F-3744, F-3727, F-3731 & F-3732 are not supplied as the assembled. However, the individual parts on the circuit boards are provided by orders.

3-7. F-3736 Input Selector Switch & Indicator Circuit Board <A-707>

Component Side



Parts List

Parts No.	Stock No.	Description
nLD1	46176900	LED TLS-123
nLD2	46176900	LED TLS-123
nLD3	46176900	LED TLS-123
nLD4	46176900	LED TLS-123
nLD5	46176900	LED TLS-123
nLD6	46176900	LED TLS-123
nPL1	46315900	Pilot Lamp 12V 1.5A
oS1	46395900	Push SW., PHONO
oS2	46395900	Push SW., TUNER
oS6	46395900	Push SW., TAPE-1
oS7	46365400	Push SW., TAPE-2
oS8	46365400	Push SW., SUBSONIC
oS9	46365400	Push SW., MUTING

3-8. F-3737 BASS/TREBLE/BALANCE Volume Circuit Board <A-707>

Component Side




Parts List

Parts No.	Stock No.	Description
jVR2	46363100	50k Ω (C) x 2 + 250k Ω

3-9. F-3738 VOLUME Circuit Board <A-707>

Component Side

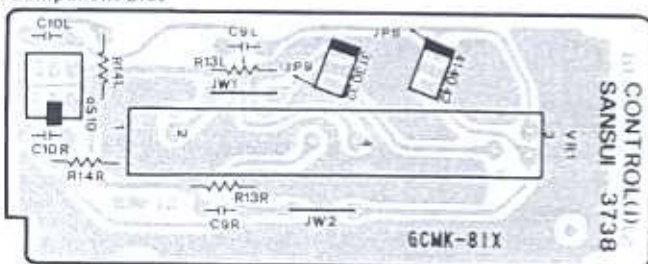


Parts List

Parts No.	Stock No.	Description
jC9	46137600	470pF 50V C.C.
jC10	07216200	22000pF 25V C.C.
jVR1	46395300	150k Ω Slide V.R., VOLUME
oS10	46360900	Push SW., LOUDNESS

3-10. F-3740 Input Terminal Circuit Board <A-505>

Component Side

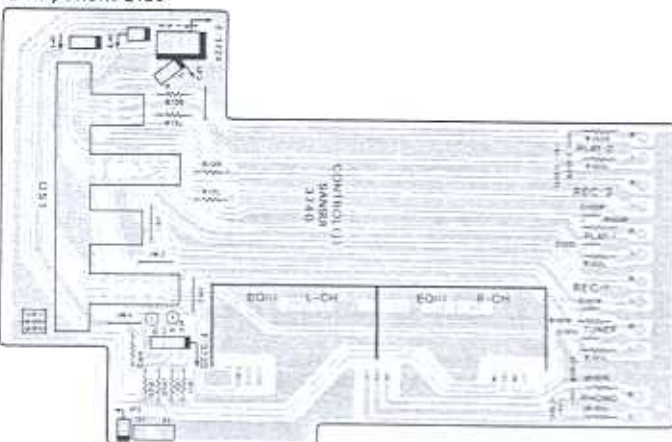

Parts List

Parts No.	Stock No.	Description
iR10	46230400	1.5k Ω 1/2W N.I.R.
iR11	46230400	1.5k Ω 1/2W N.I.R.
mR4	46229000	100 Ω 1/2W N.I.R.
mR5	46229000	100 Ω 1/2W N.I.R.
oS1	46365600	Push SW., PHONO/TUNER/TAPE-1
	46363700	2P Input Terminal, PHONO
	46371500	4P Input Terminal, TUNER, TAPE-1 REC
	46363900	6P Input Terminal, TAPE-1 PLAY, TAPE 2

- Note: The circuit boards, F-3736, F-3737, F-3738, F-3740, F-3741, F-3742, F-3743, F-3744, F-3727, F-3731 & F-3732 are not supplied as the assembled. However, the individual parts on the circuit boards are provided by orders.

3-7. F-3736 Input Selector Switch & Indicator Circuit Board <A-707>

Component Side



Parts List

Parts No.	Stock No.	Description
nLD1	46176900	LED TLS-123
nLD2	46176900	LED TLS-123
nLD3	46176900	LED TLS-123
nLD4	46176900	LED TLS-123
nLD5	46176900	LED TLS-123
nLD6	46176900	LED TLS-123
nPL1	46315900	Pilot Lamp 12V 1.5A
oS1	46395900	Push SW., PHONO
oS2	46395900	Push SW., TUNER
oS6	46395900	Push SW., TAPE-1
oS7	46365400	Push SW., TAPE-2
oS8	46365400	Push SW., SUBSONIC
oS9	46365400	Push SW., MUTING

3-8. F-3737 BASS/TREBLE/BALANCE Volume Circuit Board <A-707>

Component Side




Parts List

Parts No.	Stock No.	Description
VR2	46363100	50k Ω IC1 x 2 + 250k Ω

3-9. F-3738 VOLUME Circuit Board <A-707>

Component Side

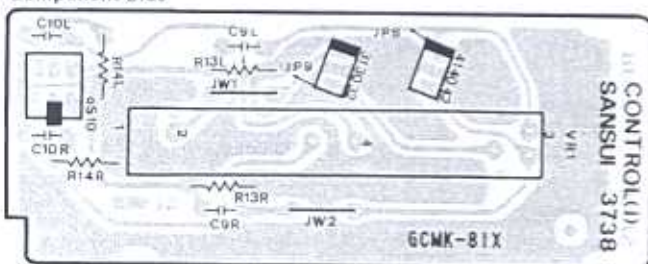


Parts List

Parts No.	Stock No.	Description
IC9	46137600	470pF 50V C.C.
IC10	07216200	22000pF 25V C.C.
VR1	46395300	150k Ω Slide V.R., VOLUME
oS10	46360900	Push SW., LOUDNESS

3-10. F-3740 Input Terminal Circuit Board <A-505>

Component Side

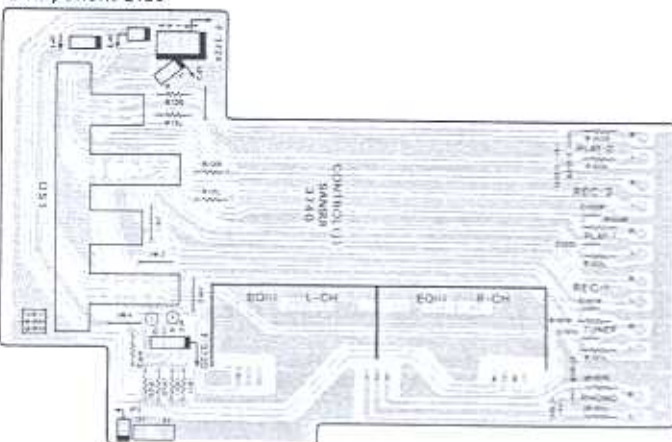


Parts List

Parts No.	Stock No.	Description
IR10	46230400	1.5k Ω 1/2W N.I.R.
IR11	46230400	1.5k Ω 1/2W N.I.R.
IR4	46229000	100 Ω 1/2W N.I.R.
IR5	46229000	100 Ω 1/2W N.I.R.
oS1	46365600	Push SW., PHONO/TUNER/TAPE-1
	46363700	2P Input Terminal, PHONO
	46371500	4P Input Terminal, TUNER, TAPE-1 REC
	46363900	6P Input Terminal, TAPE-1 PLAY, TAPE 2

3-11. F-3741 PHONO/TUNER Indicator Circuit Board <A-505>

Component Side

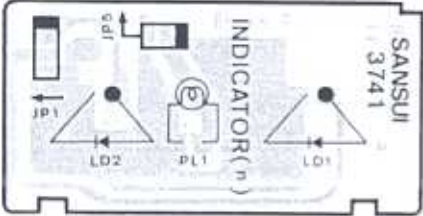


Parts List

Parts No.	Stock No.	Description
nLD1	46176900	Light Emitting Diode T.L.S-123
nLD2	46176900	Light Emitting Diode T.L.S-123
nPL1	46315900	Pilot Lamp 12V 1.5A

3-12. F-3742 TAPE Indicator Circuit Board <A-505>

Component Side

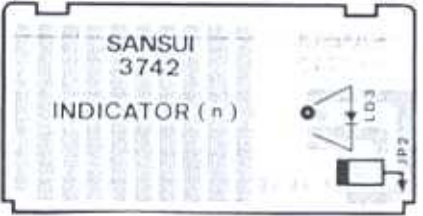


Parts List

Parts No.	Stock No.	Description
nLD3	46176900	Light Emitting Diode T.L.S-123

3-13. F-3743 VOLUME Circuit Board <A-505>

Component Side

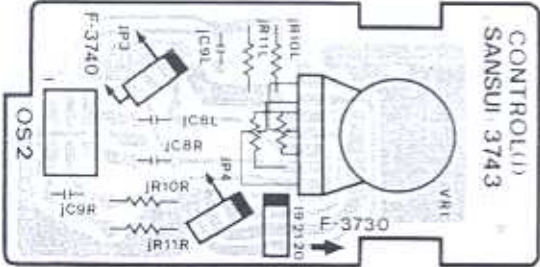

Parts List

Parts No.	Stock No.	Description
jC8	46139800	330pF 50V C.C.
jC9	46131400	0.022uF 50V C.C.
jVR1	46362900	150kΩ (B) x 2 V.R., VOLUME
oS2	46360900	Push SW., LOUDNESS

3-14. F-3744 BASS/TREBLE/BALANCE Volume Circuit Board <A-505>

Component Side




Parts List

Parts No.	Stock No.	Description
jVR2	46363100	50kΩ (C) x 2 + 250kΩ V.R.

3-15. F-3727 POWER Switch Circuit Board <A-707/A-505>

Component Side

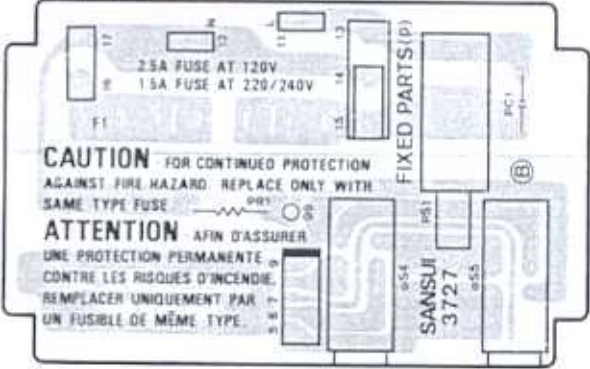

Parts List

Parts No.	Stock No.	Description
oS4	46414001	Push SW., speakers ON/OFF <A-707>
oS5	46360800	Push SW., speakers ON/OFF <A-505>
oS5	46360800	Push SW., speakers ON/OFF <A-707/505>
•AC Fuse <A-707>		
pF1	07189000	4A 250V (120V)
	07186600	2A 250V (220/240V)
<A-505>		
pF1	07188700	2.5A 250V (120V)
	07188500	1.5A 250V (220/240V)
pS1	46364300	Push SW., POWER

3-16. F-3731 Speaker Selector Circuit Board <A-707/A-505>

Parts List

Parts No.	Stock No.	Description
kR11	46229400	220Ω 1/2W N.I.R. <A-505>
oS3	46361100	Push SW., SP selector
oJ1	46265700	Jack, PHONES

3-17. F-3732 Speaker Terminal Circuit Board <A-707/A-505>


Parts List

Parts No.	Stock No.	Description
kR101.2	46227400	4.7Ω 1/2W N.I.R. <A-707>
	46227800	10Ω 1/2W N.I.R. <A-505>
	46364100	8P Push Terminal, speaker


4. OTHER PARTS

4-1. A-707

A) Front View

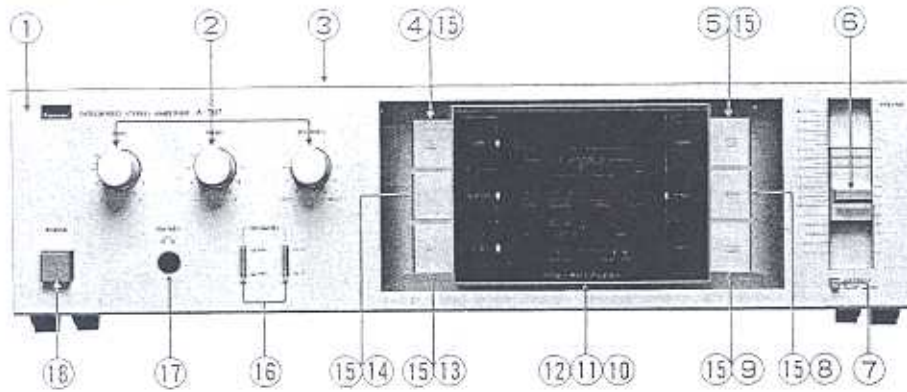

B) Top View

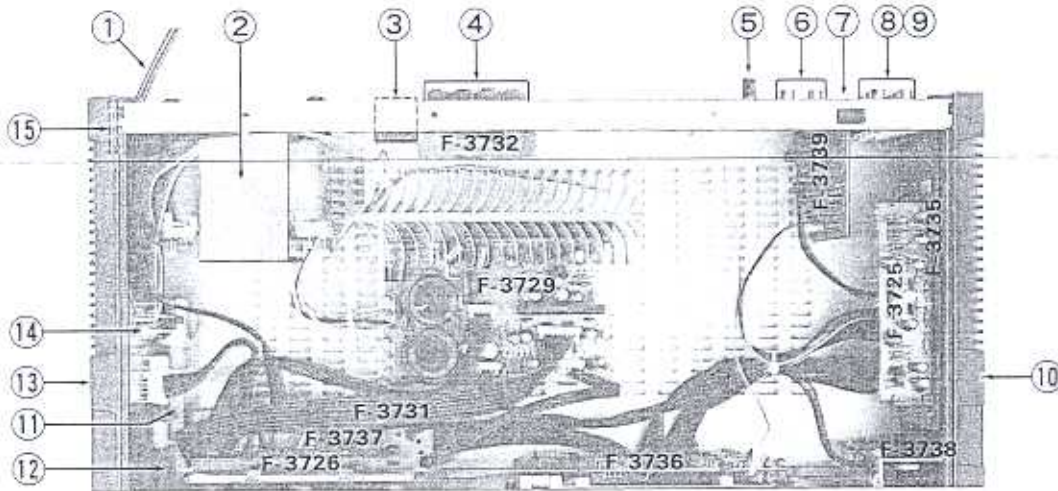

Parts List <Front View>

Parts No.	Stock No.	Description
●Common Parts		
2	46363100	50k Ω (C) x 2 + 250k Ω V.R., BASS/TREBLE/BALANCE
3	07952400	Bonnet
4	07925800	Knob, TAPE-2
	46365400	Push SW., TAPE-2
5	07925500	Knob, PHONO
	46395900	Push SW., PHONO
6	46395300	150k Ω Slide V.R., VOLUME
7	46360900	Push SW., LOUDNESS
8	07925600	Knob, TUNER
	46395900	Push SW., TUNER
9	07925700	Knob, TAPE-1
	46385900	Push SW., TAPE-1
10	07945100	Display Cover
13	07925100	Knob, MUTING
	46365400	Push SW., MUTING
14	07925200	Knob, SUBSONIC
	46365400	Push SW., SUBSONIC
15	07962600	Cushion Rubber
16	46361100	Push SW., SPEAKERS
17	46265700	Jack, PHONES
18	46364300	Push SW., POWER
●Silver Model		
1	07933300	Front Panel
2	07932400	Knob, BASS/TREBLE/BALANCE
6	07932600	Slide Knob, VOLUME
7	07917200	Push Knob, LOUDNESS
11	47009600	Display Panel
12	47011500	Display Holder
16	47005500	Push Knob, SPEAKERS
18	07971200	Push Knob, POWER


Parts No.	Stock No.	Description
●Black Model		
1	07962100	Front Panel
2	47033300	Knob, BASS/TREBLE/BALANCE
6	07932700	Slide Knob, VOLUME
7	07917300	Push Knob, LOUDNESS
11	07954300	Display Panel
12	07947900	Display Holder
16	07911000	Push Knob, SPEAKERS
18	07911200	Push Knob, POWER

Parts List <Top View>


Parts No.	Stock No.	Description
1	38004700	Power Supply Cord
2	15008701	Power Transformer
3	46365000	AC Outlet
4	46364100	8P Push Terminal, SPEAKERS
5	22301500	Ground Terminal
6	46363700	2P Input Terminal, PHONO
7	46148200	Jack (Mini), COMPU SELECTOR
8	46371500	4P Input Terminal, TUNER/TAPE-1 (REC)
9	46363900	8P Input Terminal, TAPE-1 (PLAY)/TAPE-2
10	07952700	Side Panel (R)
11	07934000	Joint Shaft (B), POWER SW.
12	07934100	Joint Shaft (C), POWER SW.
13	07952600	Side Panel (L)
14	07189000	AC Fuse 4A 250 V (120 V)
	07188600	AC Fuse 2A 250 V (220 V/240 V)
15	07917700	AC Cord Cover

4-2. A-505

A) Front View

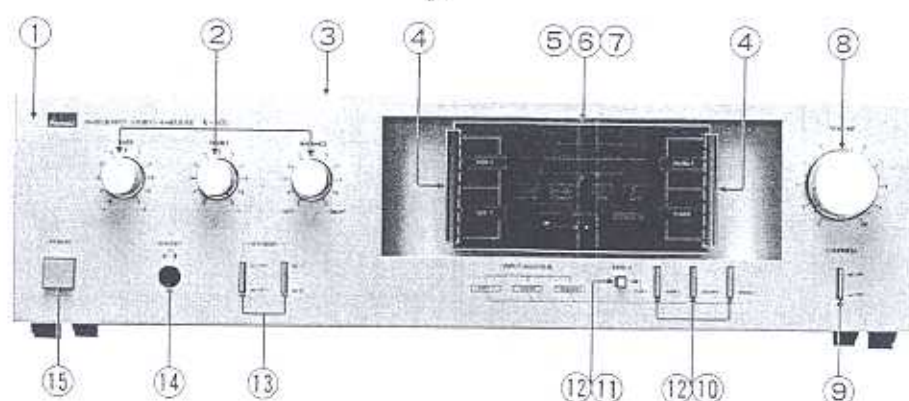

B) Top View

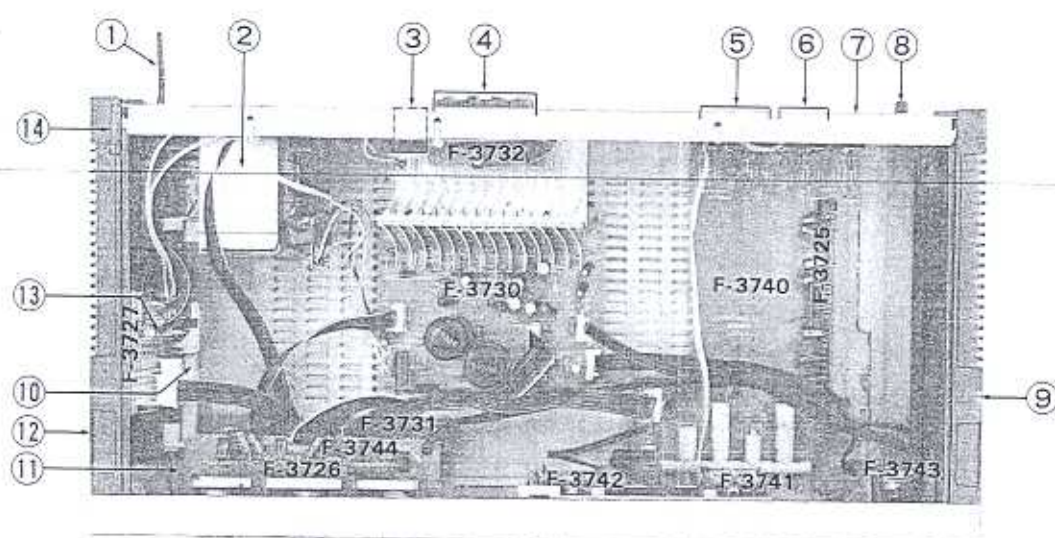

Parts List <Front View>

Parts No.	Stock No.	Description
•Common Parts		
2	46363100	50k Ω (C) x 2 + 250k Ω V.R., BASS/TREBLE/BALANCE
3	07952400	Bonnet
4	07918400	Dress Knob
5	07919200	Display Cover
8	46362900	150k Ω (B) x 2 V.R., VOLUME
9	46360900	Push SW., LOUDNESS
12	46365600	Push SW., PHONO/TUNER/TAPE-1, 2
13	46361000	Push SW., SPEAKERS
14	46265700	Jack, PHONES
15	46364300	Push SW., POWER

•Silver Model

1	07918300	Front Panel
2	07932400	Knob, BASS/TREBLE/BALANCE
6	47009500	Display Panel
7	47011700	Display Holder
8	07961800	Knob, VOLUME
9	07910900	Push Knob, LOUDNESS
10	07910900	Push Knob, PHONO/TUNER/TAPE-1
11	07917200	Push Knob, TAPE-2
13	47005500	Push Knob, SPEAKERS
15	07971200	Push Knob, POWER

•Black Model

1	07961900	Front Panel
2	47033300	Knob, BASS/TREBLE/BALANCE
6	07954400	Display Panel
7	07935500	Display Holder
8	47033400	Knob, VOLUME


Parts No.	Stock No.	Description
9	07911000	Push Knob, LOUDNESS
10	07911000	Push Knob, PHONO/TUNER/TAPE-1
11	07917300	Push Knob, TAPE-2
13	07911000	Push Knob, SPEAKERS
15	07911200	Push Knob, POWER

Parts List <Top View>


Parts No.	Stock No.	Description
1	38004700	Power Supply Cord
2	15007901	Power Transformer
3	46365000	AC Outlet
4	46364100	8P Push Terminal, SPEAKERS
5	46363900	6P Input Terminal, TAPE-1 (PLAY)/TAPE-2
6	46371500	4P Input Terminal, TUNER/TAPE-1 (REC)
7	46363700	2P Input Terminal, PHONO
8	22301500	Ground Terminal
9	07952700	Side Panel (R)
10	07934000	Joint Shaft (B), POWER SW.
11	07934100	Joint Shaft (C), POWER SW.
12	07952600	Side Panel (L)
13	07188700	AC Fuse 2.5A 250 V (120 V)
	07188500	AC Fuse 1.5A 250 V (220 V/240 V)
14	07917700	AC Cord Cover

4-2. A-505

A) Front View

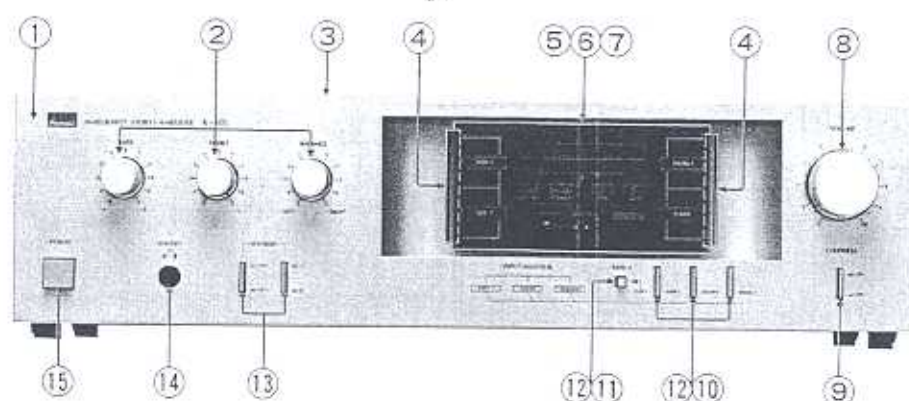

B) Top View

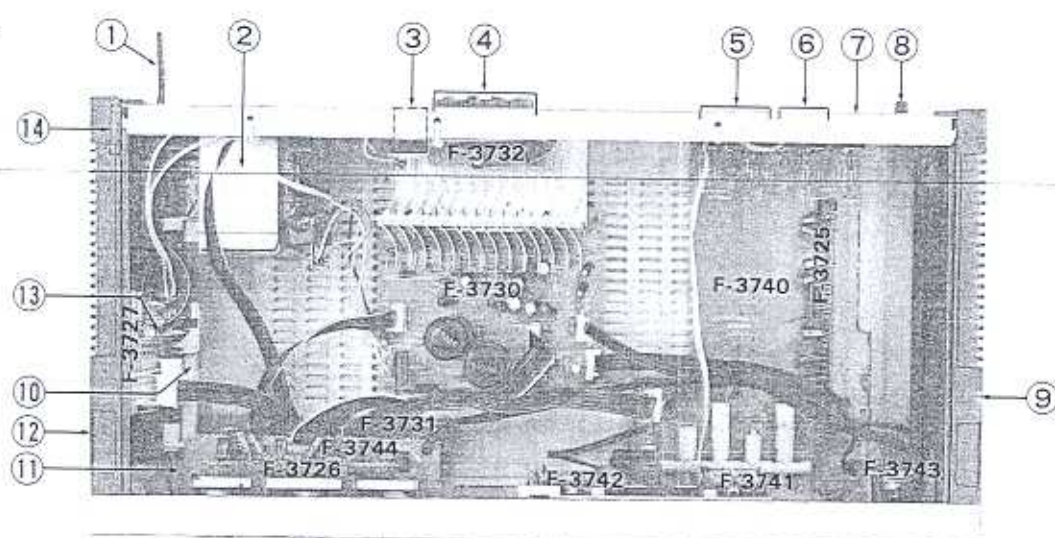

Parts List <Front View>

Parts No.	Stock No.	Description
•Common Parts		
2	46363100	50k Ω (C) x 2 + 250k Ω V.R., BASS/TREBLE/BALANCE
3	07952400	Bonnet
4	07918400	Dress Knob
5	07919200	Display Cover
8	46362900	150k Ω (B) x 2 V.R., VOLUME
9	46360900	Push SW., LOUDNESS
12	46365600	Push SW., PHONO/TUNER/TAPE-1, 2
13	46361000	Push SW., SPEAKERS
14	46265700	Jack, PHONES
15	46364300	Push SW., POWER

•Silver Model

1	07918300	Front Panel
2	07932400	Knob, BASS/TREBLE/BALANCE
6	47009500	Display Panel
7	47011700	Display Holder
8	07961800	Knob, VOLUME
9	07910900	Push Knob, LOUDNESS
10	07910900	Push Knob, PHONO/TUNER/TAPE-1
11	07917200	Push Knob, TAPE-2
13	47005500	Push Knob, SPEAKERS
15	07971200	Push Knob, POWER

•Black Model

1	07961900	Front Panel
2	47033300	Knob, BASS/TREBLE/BALANCE
6	07954400	Display Panel
7	07935500	Display Holder
8	47033400	Knob, VOLUME

Parts No.	Stock No.	Description
9	07911000	Push Knob, LOUDNESS
10	07911000	Push Knob, PHONO/TUNER/TAPE-1
11	07917300	Push Knob, TAPE-2
13	07911000	Push Knob, SPEAKERS
15	07911200	Push Knob, POWER

Parts List <Top View>

Parts No.	Stock No.	Description
1	38004700	Power Supply Cord
2	15007901	Power Transformer
3	46365000	AC Outlet
4	46364100	8P Push Terminal, SPEAKERS
5	46363900	6P Input Terminal, TAPE-1 (PLAY)/TAPE-2
6	46371500	4P Input Terminal, TUNER/TAPE-1 (REC)
7	46363700	2P Input Terminal, PHONO
8	22301500	Ground Terminal
9	07952700	Side Panel (R)
10	07934000	Joint Shaft (B), POWER SW.
11	07934100	Joint Shaft (C), POWER SW.
12	07952600	Side Panel (L)
13	07188700	AC Fuse 2.5A 250 V (120 V)
	07188500	AC Fuse 1.5A 250 V (220 V/240 V)
14	07917700	AC Cord Cover

5-1. A-707



JAPAN, U.S., CSA MODELS

JAPAN

100% 50% 50%
44% 44% 44%

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

[illegible]

— 25 —

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

1.000000

120V 60Hz $\xrightarrow{\text{Power}}$

F-372

MBSQ

Ceramic

Bonus: Learn Capabilities

Author's Note: I would like to thank Dr. Robert C. Serfaty for his helpful comments.

55137055

dry in night, 104 Watts,

1-800-745-2222

Approved for Release by NSA on 08-28-2013 pursuant to E.O. 13526


EXERCISES

are in the United States will
be in the United States.


1997, 1998, 1999, 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018, 2019, 2020, 2021, 2022, 2023, 2024, 2025, 2026, 2027, 2028, 2029, 2030, 2031, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2043, 2044, 2045, 2046, 2047, 2048, 2049, 2050, 2051, 2052, 2053, 2054, 2055, 2056, 2057, 2058, 2059, 2060, 2061, 2062, 2063, 2064, 2065, 2066, 2067, 2068, 2069, 2070, 2071, 2072, 2073, 2074, 2075, 2076, 2077, 2078, 2079, 2080, 2081, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2092, 2093, 2094, 2095, 2096, 2097, 2098, 2099, 2100, 2101, 2102, 2103, 2104, 2105, 2106, 2107, 2108, 2109, 2110, 2111, 2112, 2113, 2114, 2115, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2124, 2125, 2126, 2127, 2128, 2129, 2130, 2131, 2132, 2133, 2134, 2135, 2136, 2137, 2138, 2139, 2140, 2141, 2142, 2143, 2144, 2145, 2146, 2147, 2148, 2149, 2150, 2151, 2152, 2153, 2154, 2155, 2156, 2157, 2158, 2159, 2160, 2161, 2162, 2163, 2164, 2165, 2166, 2167, 2168, 2169, 2170, 2171, 2172, 2173, 2174, 2175, 2176, 2177, 2178, 2179, 2180, 2181, 2182, 2183, 2184, 2185, 2186, 2187, 2188, 2189, 2190, 2191, 2192, 2193, 2194, 2195, 2196, 2197, 2198, 2199, 2200, 2201, 2202, 2203, 2204, 2205, 2206, 2207, 2208, 2209, 2210, 2211, 2212, 2213, 2214, 2215, 2216, 2217, 2218, 2219, 2220, 2221, 2222, 2223, 2224, 2225, 2226, 2227, 2228, 2229, 2230, 2231, 2232, 2233, 2234, 2235, 2236, 2237, 2238, 2239, 2240, 2241, 2242, 2243, 2244, 2245, 2246, 2247, 2248, 2249, 2250, 2251, 2252, 2253, 2254, 2255, 2256, 2257, 2258, 2259, 2260, 2261, 2262, 2263, 2264, 2265, 2266, 2267, 2268, 2269, 2270, 2271, 2272, 2273, 2274, 2275, 2276, 2277, 2278, 2279, 2280, 2281, 2282, 2283, 2284, 2285, 2286, 2287, 2288, 2289, 2290, 2291, 2292, 2293, 2294, 2295, 2296, 2297, 2298, 2299, 2300, 2301, 2302, 2303, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2312, 2313, 2314, 2315, 2316, 2317, 2318, 2319, 2320, 2321, 2322, 2323, 2324, 2325, 2326, 2327, 2328, 2329, 2330, 2331, 2332, 2333, 2334, 2335, 2336, 2337, 2338, 2339, 2340, 2341, 2342, 2343, 2344, 2345, 2346, 2347, 2348, 2349, 2350, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2360, 2361, 2362, 2363, 2364, 2365, 2366, 2367, 2368, 2369, 2370, 2371, 2372, 2373, 2374, 2375, 2376, 2377, 2378, 2379, 2380, 2381, 2382, 2383, 2384, 2385, 2386, 2387, 2388, 2389, 2390, 2391, 2392, 2393, 2394, 2395, 2396, 2397, 2398, 2399, 2400, 2401, 2402, 2403, 2404, 2405, 2406, 2407, 2408, 2409, 2410, 2411, 2412, 2413, 2414, 2415, 2416, 2417, 2418, 2419, 2420, 2421, 2422, 2423, 2424, 2425, 2426, 2427, 2428, 2429, 2430, 2431, 2432, 2433, 2434, 2435, 2436, 2437, 2438, 2439, 2440, 2441, 2442, 2443, 2444, 2445, 2446, 2447, 2448, 2449, 2450, 2451, 2452, 2453, 2454, 2455, 2456, 2457, 2458, 2459, 2460, 2461, 2462, 2463, 2464, 2465, 2466, 2467, 2468, 2469, 2470, 2471, 2472, 2473, 2474, 2475, 2476, 2477, 2478, 2479, 2480, 2481, 2482, 2483, 2484, 2485, 2486, 2487, 2488, 2489, 2490, 2491, 2492, 2493, 2494, 2495, 2496, 2497, 2498, 2499, 2500, 2501, 2502, 2503, 2504, 2505, 2506, 2507, 2508, 2509, 2510, 2511, 2512, 2513, 2514, 2515, 2516, 2517, 2518, 2519, 2520, 2521, 2522, 2523, 2524, 2525, 2526, 2527, 2528, 2529, 2530, 2531, 2532, 2533, 2534, 2535, 2536, 2537, 2538, 2539, 2540, 2541, 2542, 2543, 2544, 2545, 2546, 2547, 2548, 2549, 2550, 2551, 2552, 2553, 2554, 2555, 2556, 2557, 2558, 2559, 2560, 2561, 2562, 2563, 2564, 2565, 2566, 2567, 2568, 2569, 2570, 2571, 2572, 2573, 2574, 2575, 2576, 2577, 2578, 2579, 2580, 2581, 2582, 2583, 2584, 2585, 2586, 2587, 2588, 2589, 2590, 2591, 2592, 2593, 2594, 2595, 2596, 2597, 2598, 2599, 2600, 2601, 2602, 2603, 2604, 2605, 2606, 2607, 2608, 2609, 2610, 2611, 2612, 2613, 2614, 2615, 2616, 2617, 2618, 2619, 2620, 2621, 2622, 2623, 2624, 2625, 2626, 2627, 2628, 2629, 2630, 2631, 2632, 2633, 2634, 2635, 2636, 2637, 2638, 2639, 2640, 2641, 2642, 2643, 2644, 2645, 2646, 2647, 2648, 2649, 2650, 2651, 2652, 2653, 2654, 2655, 2656, 2657, 2658, 2659, 2660, 2661, 2662, 2663, 2664, 2665, 2666, 2667, 2668, 2669, 2670, 2671, 2672, 2673, 2674, 2675, 2676, 2677, 2678, 26

* Design and specifications subject to change without notice for improvement.
* La présentation et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles.
* Änderungen, die dem technischen Fortschritt dienen, bleiben vorbehalten.


POWER AMP(k) L-CH
F-3729

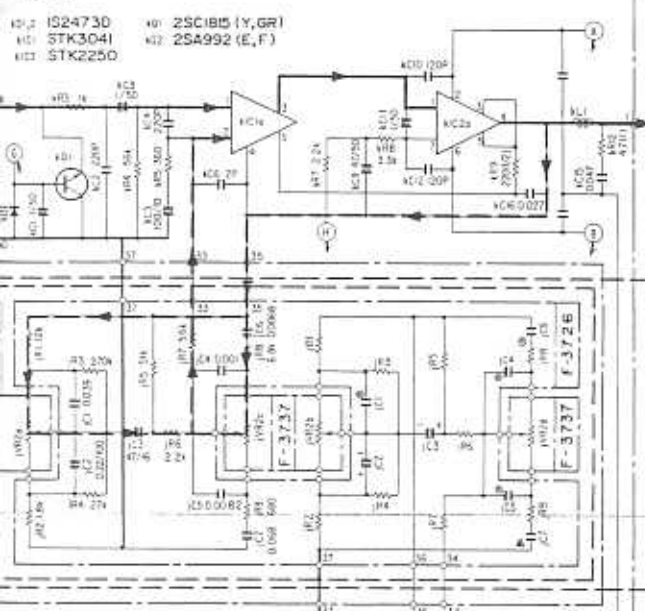

POWER AMP(k) R-CH

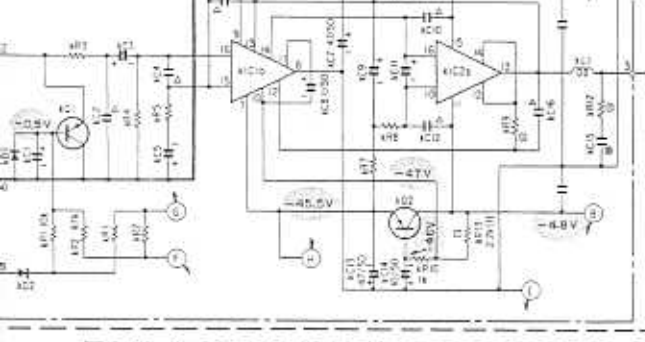

POWER SUPPLY(m)

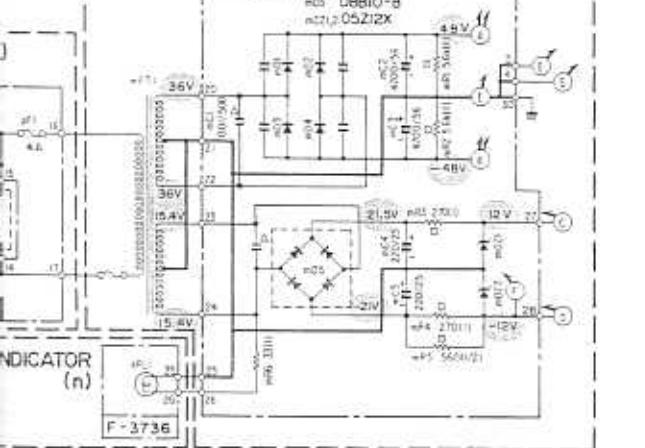

INDICATOR (n)




TOLERANCE
J: ±5%, G: ±10%, F: ±1%
Each D.C. voltage shows the nominal value
in volts at no load signal
Electrolytic Capacitor: Capacitance(μF)/voltage(V)

W: FT2 On




OPTIONAL USE FOR TRANSISTORS:
25C1815 (25C2458, 25C2603, 25C2758)
25A1015 (25A1048, 25A1115, 25A1175)

— Signal Line
--- N.F.B Line

SELECTOR(o)

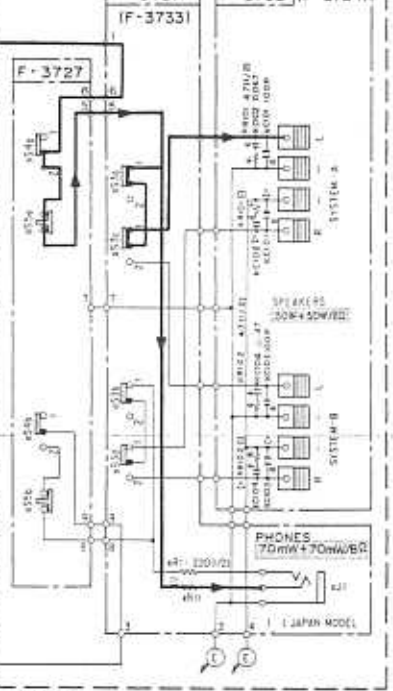

SWITCHES
SELECTOR (F-3731)
101 PHONO
102 TUNER
103 TAPE PLAY-1
104 TAPE PLAY-2 (OFF 2 ON)
105 SUBSONIC (F-3731)
106 MUTE (F-3731)
107 MUTE (F-3731)
108 LOUDNESS (F-3731)
109 100% (F-3731)
110 100% (F-3731)
111 100% (F-3731)
112 100% (F-3731)
113 100% (F-3731)
114 100% (F-3731)
115 100% (F-3731)
116 100% (F-3731)
117 100% (F-3731)
118 100% (F-3731)
119 100% (F-3731)
120 100% (F-3731)
121 100% (F-3731)
122 100% (F-3731)
123 100% (F-3731)
124 100% (F-3731)
125 100% (F-3731)
126 100% (F-3731)
127 100% (F-3731)
128 100% (F-3731)
129 100% (F-3731)
130 100% (F-3731)
131 100% (F-3731)
132 100% (F-3731)
133 100% (F-3731)
134 100% (F-3731)
135 100% (F-3731)
136 100% (F-3731)
137 100% (F-3731)
138 100% (F-3731)
139 100% (F-3731)
140 100% (F-3731)
141 100% (F-3731)
142 100% (F-3731)
143 100% (F-3731)
144 100% (F-3731)
145 100% (F-3731)
146 100% (F-3731)
147 100% (F-3731)
148 100% (F-3731)
149 100% (F-3731)
150 100% (F-3731)
151 100% (F-3731)
152 100% (F-3731)
153 100% (F-3731)
154 100% (F-3731)
155 100% (F-3731)
156 100% (F-3731)
157 100% (F-3731)
158 100% (F-3731)
159 100% (F-3731)
160 100% (F-3731)
161 100% (F-3731)
162 100% (F-3731)
163 100% (F-3731)
164 100% (F-3731)
165 100% (F-3731)
166 100% (F-3731)
167 100% (F-3731)
168 100% (F-3731)
169 100% (F-3731)
170 100% (F-3731)
171 100% (F-3731)
172 100% (F-3731)
173 100% (F-3731)
174 100% (F-3731)
175 100% (F-3731)
176 100% (F-3731)
177 100% (F-3731)
178 100% (F-3731)
179 100% (F-3731)
180 100% (F-3731)
181 100% (F-3731)
182 100% (F-3731)
183 100% (F-3731)
184 100% (F-3731)
185 100% (F-3731)
186 100% (F-3731)
187 100% (F-3731)
188 100% (F-3731)
189 100% (F-3731)
190 100% (F-3731)
191 100% (F-3731)
192 100% (F-3731)
193 100% (F-3731)
194 100% (F-3731)
195 100% (F-3731)
196 100% (F-3731)
197 100% (F-3731)
198 100% (F-3731)
199 100% (F-3731)
200 100% (F-3731)

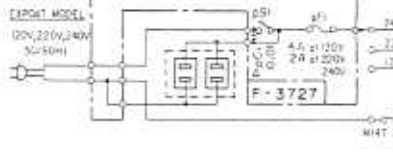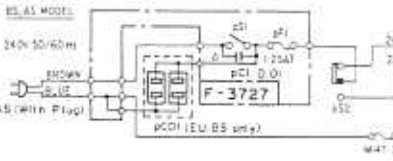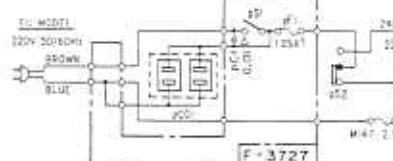

- 25A1015
- 25A1048
- 25A1115
- 25C1815
- 25C2458
- 25C2603
- 25A1175
- 25C2785
- M5218L
- LC4066BH
- LC7815H
- STK2250
- STK3041
- DB810-B
- 3002
- 152473D
- 05212
- 0525.1

1


2

3

4

5

5-2. A-505

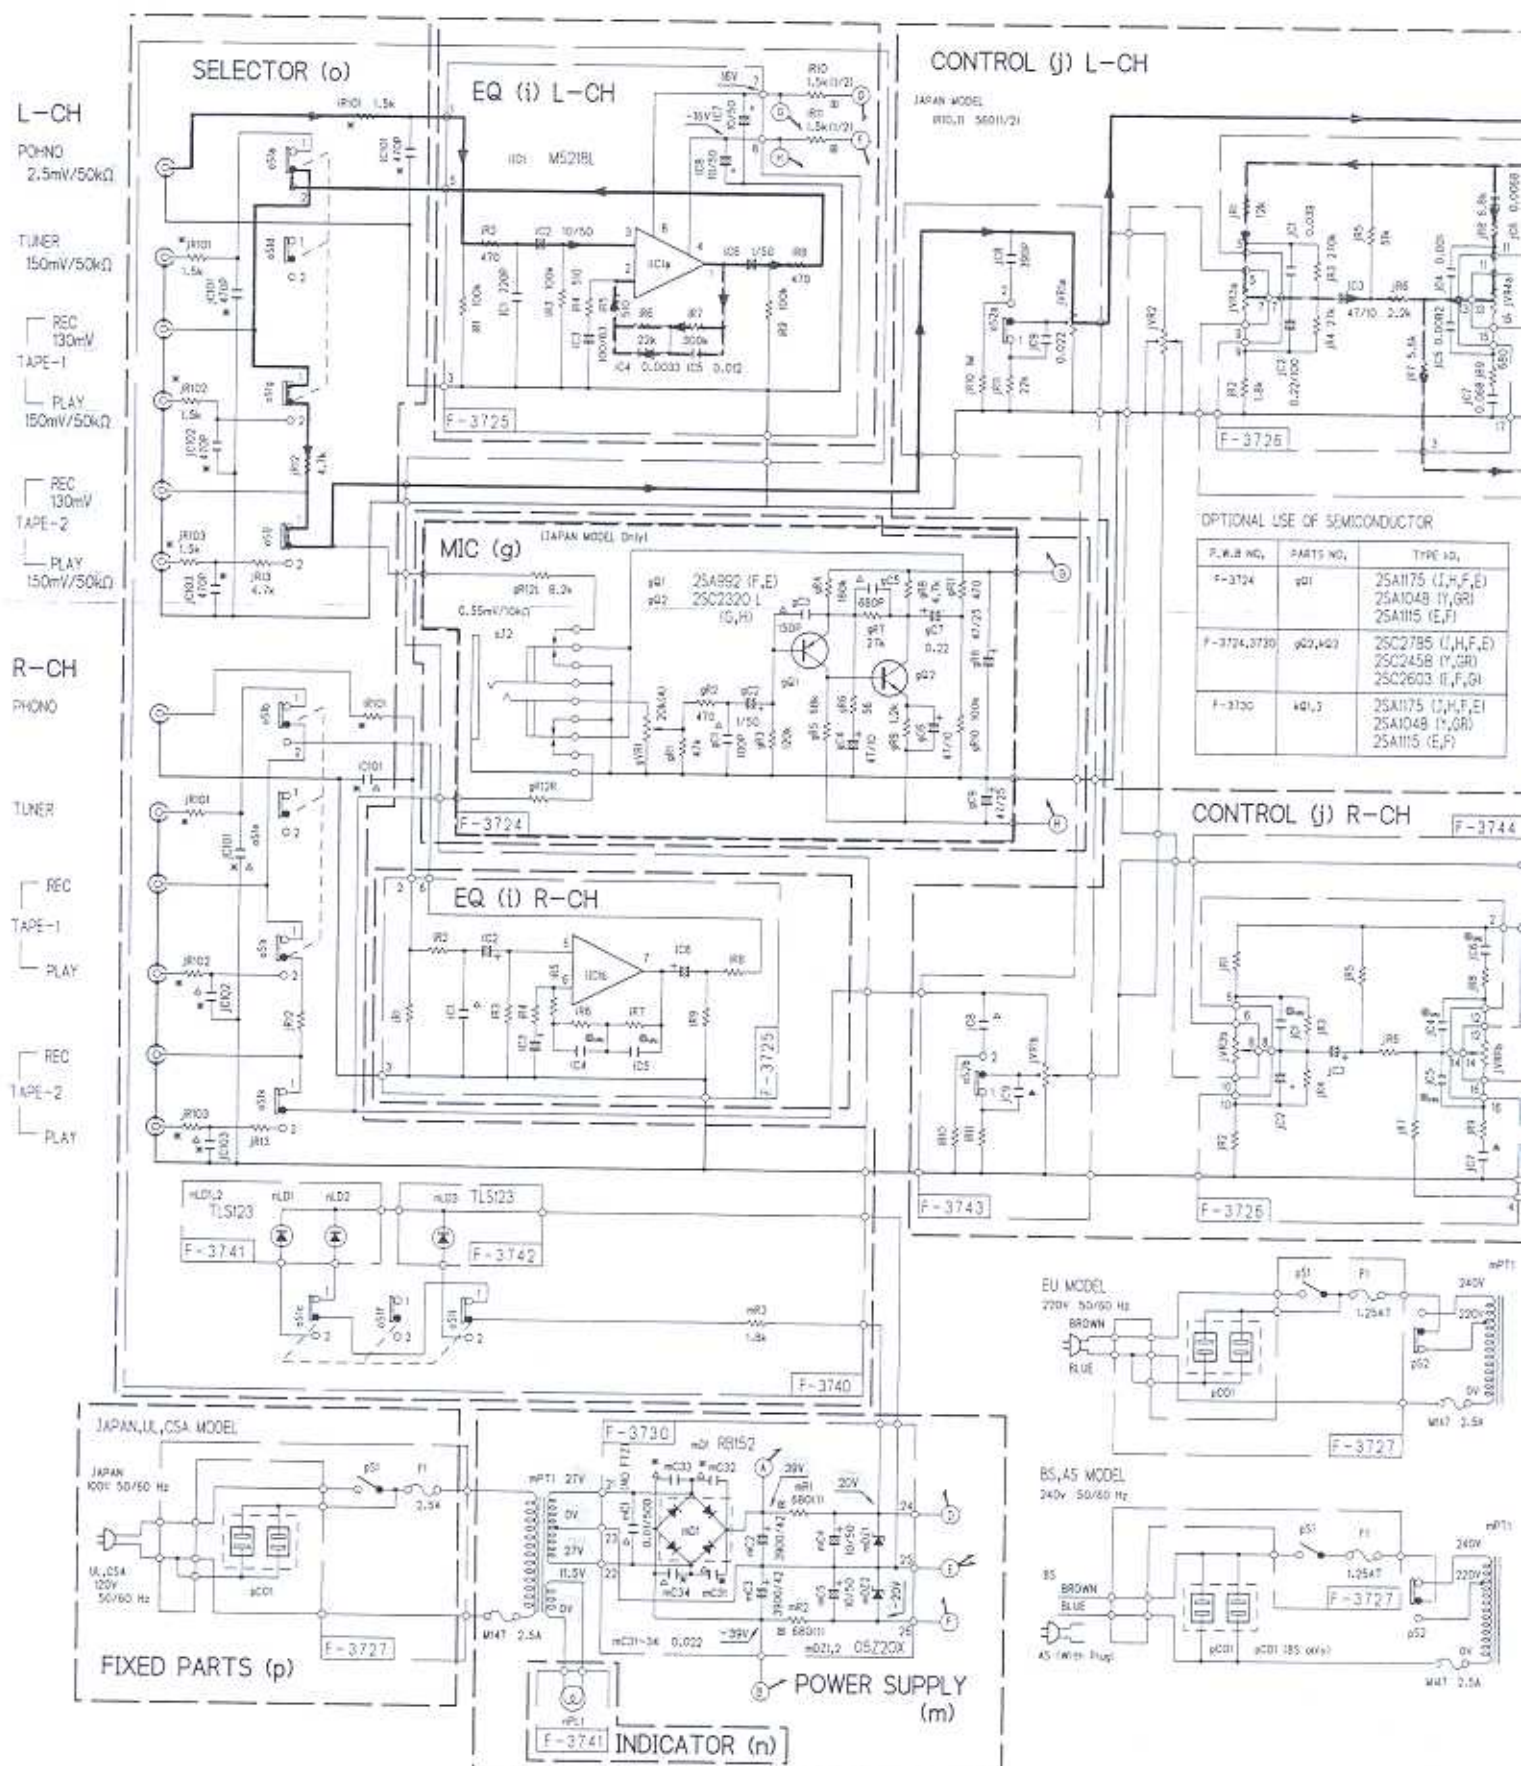



E

F

G

H

Design and specifications subject to change without notice for improvement.
La présentation et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles.
Änderungen, die dem technischen Fortschritt dienen, bleiben vorbehalten.

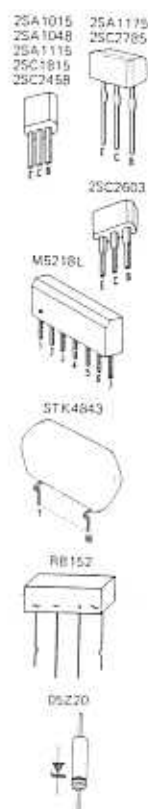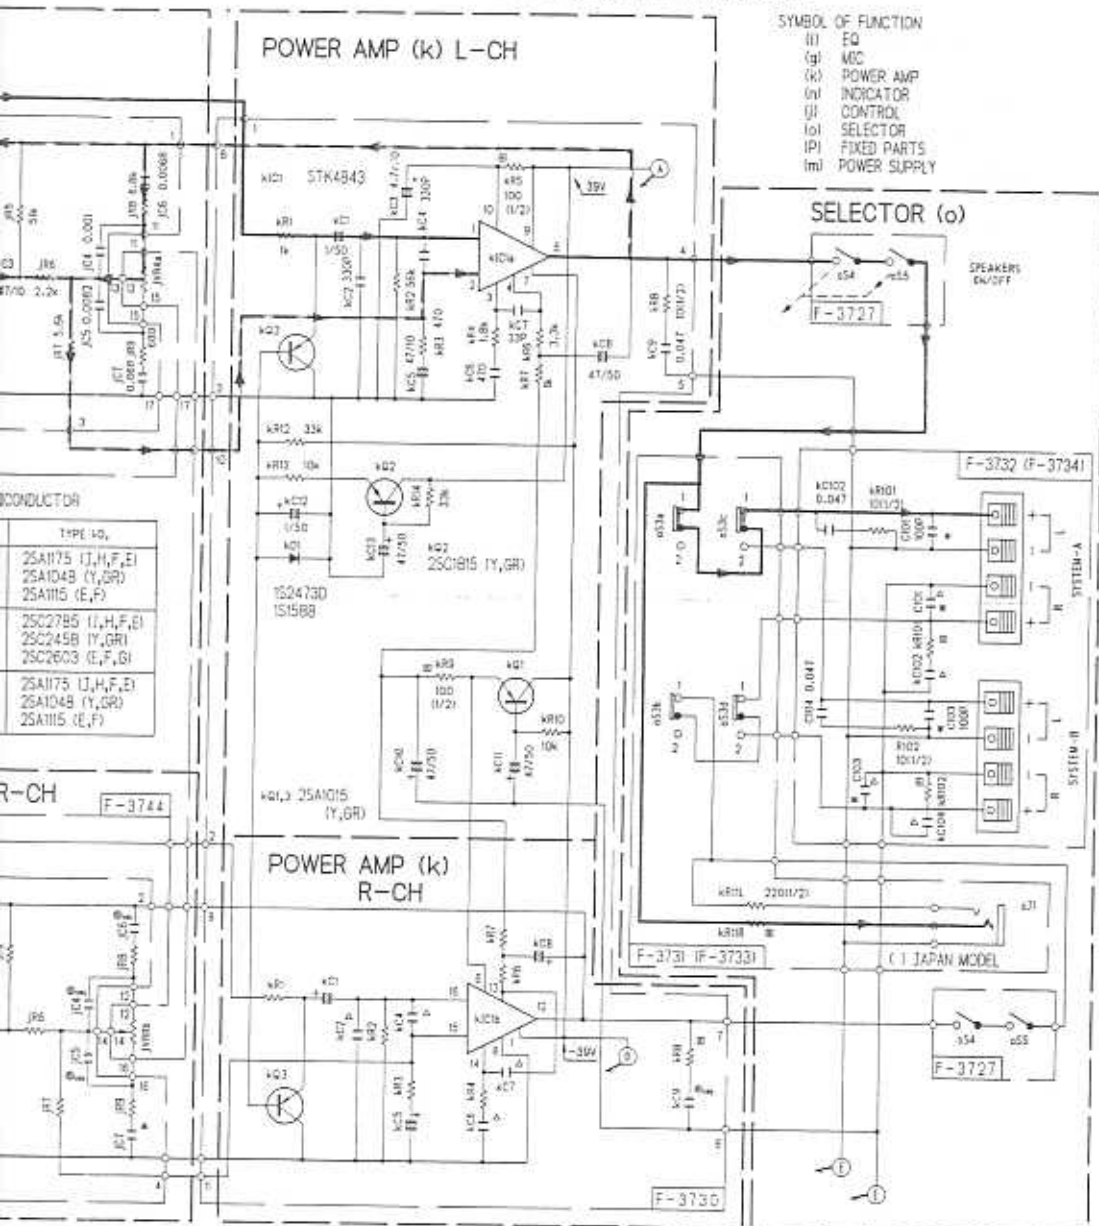

1

2



3

4


5

6. INTERIOR BLOCK DIAGRAM OF IC


• M5218L (Audio PRE Amp. IC) <A-707/A-505>

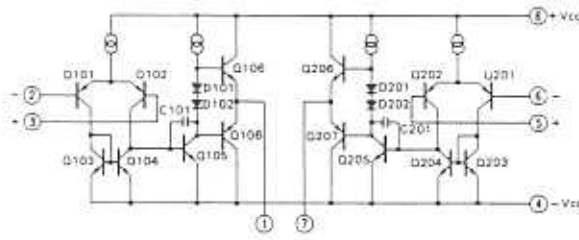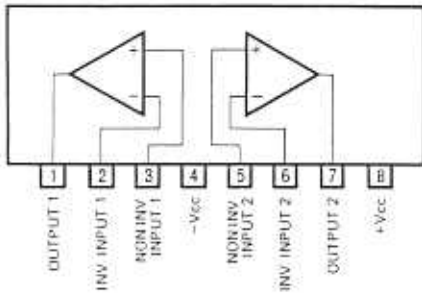


• STK4843 (AF Power Amp. IC) <A-505>

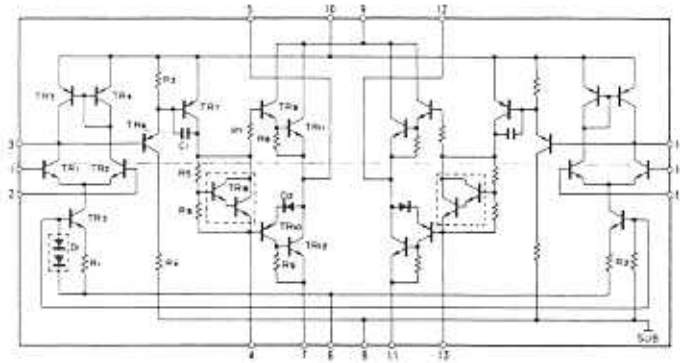

• STK3041 (Driver Amplifier IC) <A-707>

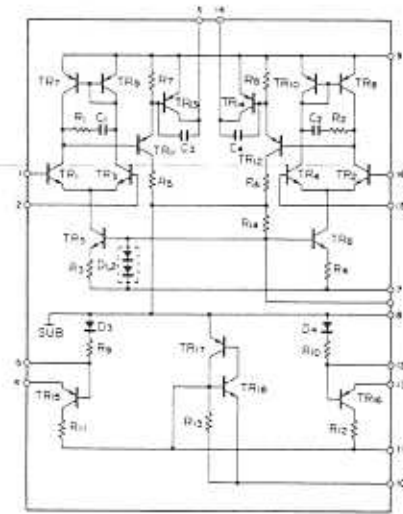


• STK2250 (AF Power Amp. Output Stage IC) <A-707>

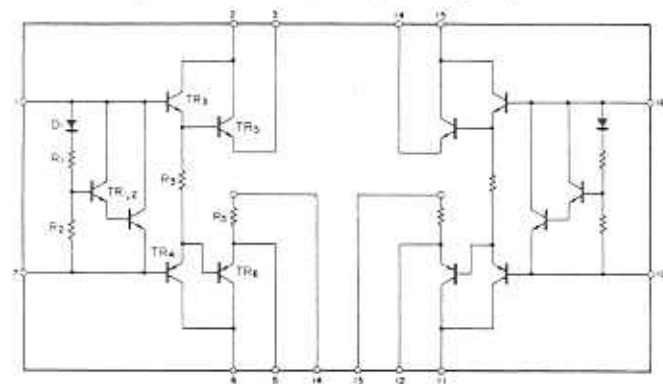

7. REPLACEMENT OF SIDE PANEL L(R)


1. Remove bonnet and bottom plate.
2. Remove the screw (5x) fixing side panel L (R) from rear panel side.
3. Shift the position of the side panel L (R) 2 cm in the arrow direction (1) and then pull it the arrow direction (2) to remove the side panel L (R). (See Fig. 7-1)

Fig. 7-1

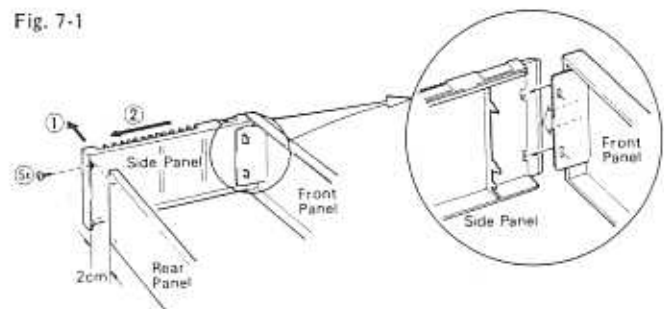

8. PACKING LIST

Parts No.	Stock No.	Description
1	91263810	Vinyl Cover
2	07948000	Styrofoam Packing
3	07948400	Carton Case <A-707/Silver Model>
	07948300	Carton Case <A-707/Black Model>
	07948700	Carton Case <A-505/Silver Model>
	07948600	Carton Case <A-505/Black Model>

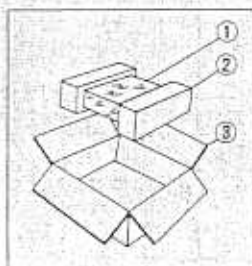

9. ACCESSORY LIST

Stock No.	Description
46355600	Operating Instruction <A-707>
46354700	Operating Instruction <A-505>

Sansui

SANSUI ELECTRIC CO., LTD.:

SANSUI ELECTRONICS CORPORATION:

SANSUI ELECTRONICS (U.K.) LTD.
SANSUI ELECTRONICS G.M.B.H.

14-1, Izumi 2-chome, Suginami-ku, Tokyo 168 Japan
 PHONE: (03) 324-8891/TELEX: 232-2076 (International Division)
 1250 Valley Brook Ave. Lyndhurst, N.J. 07071 U.S.A.
 333 West Alondra Blvd. Gardena, California 90247 U.S.A.
 3036 Koaopaka St. Honolulu, Hawaii 96819 U.S.A.
 Unit 10A, Lyon Industrial Estate, Rockware Avenue, Greenford, Middx UB6, OAA, England
 Paul Ehrlich Strasse 8, 5074 Rödermark 2, West Germany

(SM1-56)

Printed in Japan (720030M) (Stock No. 36469800)