 


PARTS LIST
LISTE PIECES DETACHEES
ERSATZTEILLISTE
LISTA PARTI DI RICAMBIO
LISTA DE PIEZAS DE REPUESTO

 
THOMSON
ALTIMA3005
Chassis CRKD2520U

MODULES								
MAIN	MAIN	R 55036280						
AMPL	AMPLI	R 35115490						
KB	CD CONTROL	R 35115510						
KB	CONTROL	R 35115500						
KDB	DISPLAY/CONTROL	R 55036290						
POWE	POWER	R 55036300						
SVB	CD	55024460						
								
IC001,002	LB1641 (CD)	20656300						
IC001	AN7238 (MAIN)	10057840						
IC002	LM7001 (MAIN)	20334880						
IC003	TA7358AP	10384690						
IC004	BU1924F	55048400						
IC300	AN7348K	20693340						
IC301	TDA7439	35096300						
IC302	BA7755A	10214460						
IC601	BA4558F FLAT	20976940						
IC701	UPD780205GF-051-3BA FLAT	55050850						
IC702	M24C01BN6	20924140						
IC703	KIA7042AP	20977940						
IR701	RPM6957-V4	55049790						
								
PI01,02,03,05,06	RPI-574	20586840						
PI04	GP2S28	20556130						
Q001,010,016,704	KTA1504GR SMD	20779750						
Q003,004,005,006,007,012,013,015,601L,601R,702,703,705,709	KTC3875GR SMD	20779850						
Q008	KTC3880 O SMD	55050950						
Q009,014	KTA1298Y SMD	55050930						
Q305,401	2SC1815BL	20251960						
Q306,307	KRC107S SMD	55051240						
Q701	KTC3203Y	20538220						
								
D003,211,212,717,718,719,720,721,722,727,728,729,730,J209,301	1N4148	44009209						
D006,007	SVC201SP	10281340						
D03,04	1N4002	11070780						
D402	BZX55C7V5	80444150						
D701	1N5232B	20414280						
D704,710	LTL4261N LED	20506170						
D706	LTL4236N LED	20415320						
								
TF001	10,7MHZ	35042190						
X001	4M332HZ	55050710						
Y001	10M7HZ	20702430						
Y002	7M2HZ	10281350						
Y201	450KOHZ	10281230						
Y701	4M19HZ	20776150						
								
L001		10281320						
L002		10281260						
L006		10281250						
L801		70182000						
SVC01		55060590						
								
EN701		55064440						
EN702		55064450						
RV001,340	4K7 OHM	10368440						
RV341	200R0 OHM	20498490						
								
R03,04	2R2 OHM 5% 0,25W	△ 15009870						
								
C015	11P0F	10280980						
								
TP801		△ 55048980						
TP501		△ 35118910						
OTHER PARTS AUTRES PIECES SONSTIGE TEILE ALTRE PARTI OTRAS PIEZAS								
F801	1A6T TIME-LAG FUSE 1A6T FUSIBLE TEMPORISE 1A6T SICHERUNG 1A6T FUSIBILE TEMPORIZZATO 1A6T FUSIBLE TEMPORIZADO	△ 48064700						
FL701	DISPLAY LCD AFFICHEUR LCD LCD-ANZEIGE VISUALIZZATORE LCD VISUALIZADOR LCD	55026550						
NJ301	ANTENNA SOCKET AM PRISE ANTENNE AM ANTENNENBUCHSE AM PRESA ANTENNA AM TOMA DE ANTENA AM	35051440						
NJ515	LOUDSPEAKER SOCKET PRISE HAUT PARLEUR LAUTSPRECHERBUCHSE PRESA ALTOPARLANTE TOMA HEMBRA ALTAVOZ	55060580						
NJ516,517	CINCH SOCKET PRISE CINCH CHINCH-BUCHSE PRESA CINCH TOMA CINCH	55051030						
RLY801	RELAY RELAIS RELAIS RELEE RELEE	△ 35095470						

SW701,702, 703,704,705, 706,707,712, 713,714,715, 716,719,720, 721,722,723, 724,725,726	MICROSWITCH MICROCONTACTEUR MIKROSCHALTER MICROINTERRUTTORE MICROCONTACTOR	20404730	CASSETTE BUTTON PLAY LEFT TOUCHE DE LECTURE CASSETTE GAUCHE CASSETTENLAUFWERK TASTE PLAY LINKS TASTO LETTURA CASSETTA SINISTRA TECLA LECTURA CASSETTE IZQUIERDA	55046930	BUTTON DISC 5 TOUCHE SELECTION DISQUE 5 TASTE AUSWAHL LASERPLATTE 5 TASTI SELEZIONE DEL DISCOS 5 TECLAS SELECCION DE DISCOS 5	55075180
SW708,709, 710,711,717, 718	MICROSWITCH MICRO CONTACTEUR MIKROSCHALTER MICROINTERRUTTORE MICROCONTACTOR	20404790	CASSETTE BUTTON PLAY RIGHT TOUCHE DE LECTURE CASSETTE DROITE CASSETTENLAUFWERK TASTE PLAY RECHTS TASTO LETTURA CASSETTA DESTRA TECLA LECTURA CASSETTE DERECHA	55046940	TRAY CD CONTROL BUTTON TOUCHE CD/CDE TIROIR TASTE CD SCHUBEINHEIT TASTO COMANDI PORTA-DISCHI TECLA MANDO PORTADISCO	55058940
			CASSETTE BUTTON RECORD TOUCHE ENREGISTREMENT CASSETTE CASSETTENLAUFWERK TASTE AUFNAHME TASTO REGISTRAZIONE TECLA GRABACION	55046950	BUTTON STRIP SHUFFLE/INTRO/REP/ATS BARRETTE TOUCHES 4T SHUFFLE/INTRO/REP/ATS TASTENLEISTE SHUFFLE/INTRO/REP/ATS PIATTINA TASTI 4T SHUFFLE/INTRO/REP/ATS PLACA DE TECLAS 4T SHUFFLE/INTRO/REP/ATS	55058960
			CASSETTE REW KNOB TOUCHE CASSETTE RETOUR RAPIDE CASSETTENLAUFWERK KNOPF REW TASTO CASSETTA VELOCE INDIETRO TECLA CASSETTE RETROCESO RAPIDO	55046960	BUTTON STRIP PLAY/PAUSE/STOP/SOURCE BARRETTE TOUCHES 3T LECT/PAUSE/STOP/SOURCE TASTENLEISTE PLAY/PAUSE/STOP/SOURCE PIATTINA TASTI 3T LETT/PAUSE/STOP/SOURCE PLACA DE TECLAS 3T LECT/PAUSE/STOP/SOURCE	55058980
			CASSETTE BUTTON F.F TOUCHE CASSETTE AVANCE RAPIDE CASSETTENLAUFWERK KNOPF F.F TASTO CASSETTA VELOCE AVANTI TECLA CASSETTE AVANCE RAPIDO	55046970	BUTTON STRIP FF/REW/EQ/S.BASS BARRETTE DE TOUCHES 5T FF/REW/EQ/S.BASS TASTENLEISTE FF/REW/EQ/S.BASS PIATTINA TASTI 5T FF/REW/EQ/S.BASS PLACA DE TECLAS 5T FF/REW/EQ/S.BASS	55061170
			CASSETTE BUTTON PAUSE TOUCHE CASSETTE PAUSE CASSETTENLAUFWERK TASTE PAUSE TASTO CASSETTA PAUSA TECLA CASSETTE PAUSA	55046980	BUTTON HELP TOUCHE HELP TASTE HELP TASTO HELP TECLA HELP	55045230
			VOLUME KNOB BOUTON VOLUME LAUTSTAERKEKNOPF ROTELLA DI PLASTICA VOLUME RUEDA PLASTICA MANDO	55058900	ON/OFF BUTTON TOUCHE MARCHE/ARRET EIN-AUS TASTE TASTO ACCESO/SPENTO TECLA MARCHA/PARADA	55059010
			TUNING KNOB BOUTON TUNER TUNING KNOPF ROTELLA DI PLASTICA TUNING RUEDA PLASTICA MANDO TUNING	55074940	BUTTON DEMO TOUCHE DEMO TASTE DEMO TASTO DEMO TECLA DEMO	55059020
			TUNING KNOB TRIM ENJOLIVEUR BOUTON TUNING ZIERRAHMEN KNOPF TUNING FINIZIONE ROTELLA DI PLASTICA TUNING EMBELLECEDOR RUEDA PLASTICA TUNING	55058910	BUTTON STRIP CLOCK/TIMER BARRETTE DE TOUCHES 2T CLOCK/TIMER TASTENLEISTE CLOCK/TIMER PIATTINA TASTI 2T CLOCK/TIMER PLACA DE TECLAS 2T CLOCK/TIMER	55059030
			HOLDER BUTTON TUNING SUPPORT BOUTON TUNER HALTER TUNING KNOPF SUPPORTO ROTELLA DI PLASTICA TUNING SOPORTE RUEDA PLASTICA TUNING	55061160	FRONT PANEL FACADE FRONTPLATTE PANNELLO FRONTALE PANEL FRONTAL	55060930
			BUTTON DISK/SKIP TOUCHE DISK/SKIP TASTE DISK/SKIP TASTO DISK/SKIP TECLA DISK/SKIP	55045920	BUTTON STRIP BAND/FM BARRETTE DE TOUCHES 2T BAND/FM TASTENLEISTE BAND/FM PIATTINA TASTI 2T BAND/FM PLACA DE TECLAS 2T BAND/FM	55059040
			BUTTON DISC 1 TOUCHE SELECTION DISQUE 1 TASTE AUSWAHL LASERPLATTE 1 TASTI SELEZIONE DEL DISCOS 1 TECLAS SELECCION DE DISCOS 1	55075140	UPPER CASE WINDOW CD GLACE AFFICHEUR CD ANZEIGEFENSTER CD VETRO DEL VISUALIZZATORE CD CRISTAL DEL VISUALIZADOR CD	55044840
			BUTTON DISC 2 TOUCHE SELECTION DISQUE 2 TASTE AUSWAHL LASERPLATTE 2 TASTI SELEZIONE DEL DISCOS 2 TECLAS SELECCION DE DISCOS 2	55075150	DISPLAY WINDOW TUNER GLACE AFFICHEUR TUNER ANZEIGEFENSTER TUNER VETRO DEL VISUALIZZATORE TUNER CRISTAL DEL VISUALIZADOR TUNER	55069840
			BUTTON DISC 3 TOUCHE SELECTION DISQUE 3 TASTE AUSWAHL LASERPLATTE 3 TASTI SELEZIONE DEL DISCOS 3 TECLAS SELECCION DE DISCOS 3	55075160	CONTROL PANEL TABLEAU DE COMMANDES BEDIENTEIL QUADRO DI COMANDO TABLERO DE MANDO	55045850
			BUTTON DISC 4 TOUCHE SELECTION DISQUE 4 TASTE AUSWAHL LASERPLATTE 4 TASTI SELEZIONE DEL DISCOS 4 TECLAS SELECCION DE DISCOS 4	55075170	CASSETTE FLAP WINDOW LEFT GLACE VOLET CASSETTE GAUCHE FENSTER CASSETTENKLAPPE LINKS VETRO SPORTELLO CASSETTA SINISTRA CRISTAL TAPA CASSETTE IZQUIERDA	55060940
EQUIPMENT/PRESENTATION EQUIPEMENT/PRESENTATION AUSSTATTUNG/GEHAEUSE PARTI VARIE EQUIPO/PRESENTACION						
A3000/3005 (REMOTE CONTROL) A3000/3005 (TELECOMMANDE) A3000/3005 (FERNBEDIENUNG) A3000/3005 (TELECOMANDO) A3000/3005 (TELEMANDO)		55063350				
LOUDSPEAKER BOX ASSY RIGHT OR LEFT ENCEINTE ACOUSTIQUE GAUCHE OU DROITE LAUTSPRECHERBOX RECHTS ODER LINKS CASSA ACUSTICA DESTRO O SINISTRA CAJA ACUSTICA DERECHA O IZQUIERDA		35116660				
POWER SUPPLY LEAD CORDON D'ALIMENTATION NETZKABEL CAVO DI ALIMENTAZIONE CABLE DE ALIMENTACION	△	20492600				
CONNECTION LEAD 2+2 CINCH CORDON DE LIAISON 2+2 CINCH ANSCHLUSSKABEL 2+2 CINCH CAVO DI ALLACCIAMENTO 2+2 CINCH CABLE DE ENLACE 2+2 CINCH		10046700				
BUTTON STRIP FM/ALARM BARRETTE DE TOUCHES 2T FM/ALARM TASTENLEISTE FM/ALARM PIATTINA TASTI 2T FM/ALARM PLACA DE TECLAS 2T FM/ALARM		55025140				
CASSETTE FLAP DOOR LEFT VOLET CASSETTE GAUCHE CASSETTENKLAPPE LINKS SPORTELLO CASSETTA SINISTRO TAPA CASSETTE IZQUIERDO		55058690				
CASSETTE FLAP DOOR RIGHT VOLET CASSETTE DROIT CASSETTENKLAPPE RECHTS SPORTELLO CASSETTA DESTRO TAPA CASSETTE DERECHO		55058700				
COVER TRAY CD CACHE TIROIR CD ABDECKUNG SCHUBLADE CD COPERCHIO CASSETTO CD CUBIERTA CORREDERA CD		55058710				
TRAY CD TRIM ENJOLIVEUR VOLET CD ZIERRAHMEN CD KLASPE FINIZIONE SPORTELLO CD EMBELLECEDOR DE TAPA CD		55058720				
CASSETTE BUTTON STOP/EJECT LEFT TOUCHE STOP/EJECT CASSETTE GAUCHE CASSETTENLAUFWERK TASTE STOP/EJECT LINKS TASTO STOP/EJECT CASSETTA SINISTRA TECLA STOP/EJECT CASSETTE IZQUIERDA		55046910				
CASSETTE BUTTON STOP/EJECT RIGHT TOUCHE STOP/EJECT CASSETTE DROITE CASSETTENLAUFWERK TASTE STOP/EJECT RECHT TASTO STOP/EJECT CASSETTA DESTRA TECLA STOP/EJECT CASSETTE DERECHA		55046920				

CASSETTE FLAP WINDOW RIGHT GLACE VOLET CASSETTE DROIT FENSTER CASSETTENKLAPPE RECHTS VETRO SPORTELLLO CASSETTA DESTRA CRISTAL TAPA CASSETTE DERECHA	55060950
CASSETTE HOLDER LEFT PORTE CASSETTE GAUCHE CASSETTENHALTER LINKS PORTACASSETTA SINISTRO PORTACASSETTE IZQUIERDO	55025010
CASSETTE HOLDER RIGHT PORTE CASSETTE DROIT CASSETTENHALTER RECHTS PORTACASSETTA DESTRO PORTACASSETTE DERECHO	55025020
SIDE PANEL LEFT PANNEAU LATERAL GAUCHE SEITENTEIL LINKS PANNELLO LATERALE SINISTRO PANEL LATERAL IZQUIERDO	△ 55060910
AM ANTENNA HOLDER SUPPORT ANTENNE AM AM ANTENNENHALTER SUPPORTO ANTENNA AM SOPORTE ANTENA AM	20690520
AM ANTENNA ANTENNE AM AM ANTENNE ANTENNA AM ANTENA AM	20690640
SIDE PANEL RIGHT PANNEAU LATERAL DROIT SEITENTEIL RECHTS PANNELLO LATERALE DESTRO PANEL LATERAL DERECHO	△ 55060920
REAR PANEL PANNEAU ARRIERE SEITENTEIL HINTEN PANNELLO POSTERIORE PANEL POSTERIOR	△ 55047860
COVER UPPER COUVERCLE SUPERIEUR GEHAEUSEOBERTEIL COPERCHIO SUPERIORE TAPA SUPERIOR	△ 55046080
UPPER COVER WINDOW GLACE COUVERCLE SUPERIEUR FENSTER GEHAEUSEOBERTEIL VETRO DEL COPERCHIO SUPERIORE CRISTAL DEL TAPA SUPERIOR	55060970
FITTING FRONT CALE AVANT POLSTER VORN Distanziatore anteriore CALZO DELANTERA	55051660
FITTING REAR CALE ARRIERE POLSTER HINTEN Distanziatore posteriore CALZO TRASERA	55051670
FOLDING BOX EMBALLAGE CARTON KARTON IMBALLGGIO CARTONE EMBALAJE CARTON	55054900

MECHANISM MECANIQUE MECHANİK MECCANICA MECANISMO	
TCM-125-0E OPTICAL PLAYER TCM-125-0E LECTEUR OPTIQUE TCM-125-0E CD-LAUFWERK TCM-125-0E ASSIEME OTTICA TCM-125-0E MECANISMO OPTICO	10656490
CD 5 DISC CHASSIS ASSY CHASSIS CD 5 DISQUES EQUIPE CHASSIS CD LASERPLATTE K.P.L CHASSIS CD 5 DISCOS COMPLETO CHASIS CD 5 DISCOS EQUIPADO	55058570
CASSETTE MECHANISM MECANIQUE CASSETTE CASSETTENLAUFWERK MECCANICA CASSETTA MECANISMO CASSETTE	55046590
BUSH RUBBER CD REAR AMORTISSEUR CAOUTCHOUC CD ARRIERE DAEMPFER GUMMI CD HINTEN AMMORTIZZATORE DI GOMMA CD POSTERIORE AMORTIGUADOR DE GOMA CD TRASERA	20365070
BUSH RUBBER CD FRONT AMORTISSEUR CAOUTCHOUC CD AVANT DAEMPFER GUMMI CD VORN AMMORTIZZATORE DI GOMMA CD ANTERIORE AMORTIGUADOR DE GOMA CD DELANTERA	20446740
CASSETTE DOOR DAMPER GEAR ROUE DENTEE PORTE CASSETTE ZAHNRAD CASSETTENHALTER RUOTA DENTATA PORTACASSETTA RUEDA DENTADA PORTACASSETTE	10039140
SPRING TORSION HOLDER CASSETTE LEFT RESSORT A EPINGLE VOLET CASSETTE GAUCHE FEDER CASSETTENKLAPPE LINKS MOLLA DI TORSIONE PORTACASSETTA SINISTRO RESORTE HORQUILLA PORTACASSETTE IZQUIERD	35095850
SPRING TORSION HOLDER CASSETTE RIGHT RESSORT A EPINGLE VOLET CASSETTE DROIT FEDER CASSETTENKLAPPE RECHTS MOLLA DI TORSIONE PORTACASSETTA DESTRO RESORTE HORQUILLA PORTACASSETTE DERECHO	35095860
EG530YD-2BH MOTOR EG530YD-2BH MOTEUR EG530YD-2BH MOTOR EG530YD-2BH MOTORE EG530YD-2BH MOTOR	35049330

	
CRKD2520 SERVICE MANUAL CRKD2520 DOCUMENTATION TECHNIQUE CRKD2520 TECHNISCHE DOKUMENTATION CRKD2520 DOCUMENTAZIONE TECNICA CRKD2520 DOCUMENTACION TECNICA	35114850
ALTIMA3005 PARTS LIST ALTIMA3005 LISTE DE PIECES DETACHEES ALTIMA3005 ERSATZTEILLISTE ALTIMA3005 LISTA PARTI DI RICAMBIO ALTIMA3005 LISTA DE PIEZAS DE REPUESTO	35118190
ALTIMA3000/3005 UM TH ALTIMA3000/3005 NU TH ALTIMA3000/3005 BA TH ALTIMA3000/3005 IU TH ALTIMA3000/3005 IU TH	55054920