

DVD PLAYER

DVD-S557

 
SERVICE MANUAL

This Service Manual describes only the items that differ from DVD-S550/DV-S5750's.

For the items not described in this Service Manual, refer to DVD-S550/DV-S5750 Service Manual of which ID is 100894.


FRONT PANEL

▼ B, G models

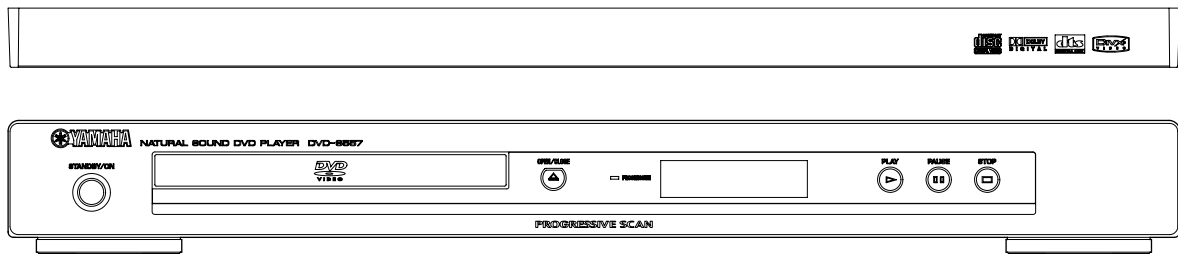

REAR PANEL

 ▼ B, G models

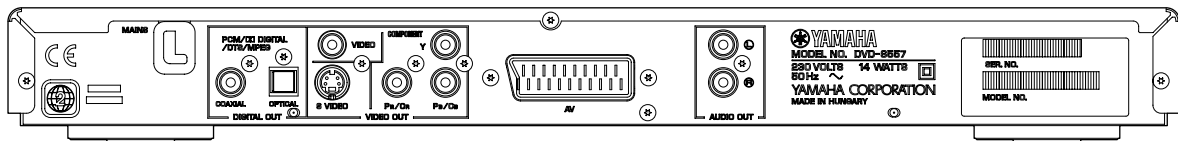


SPECIFICATIONS

Finish

- Black Color B, G models
- Titanium Color G model
- Silver Color B, G models

All the other items are common with DVD-S550/DV-S5750.

 DIMENSIONS

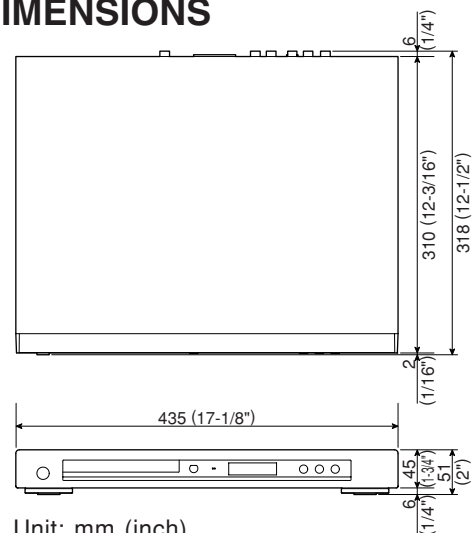

Unit: mm (inch)



このサービスマニュアルは、エコマーク認定の再生紙を使用しています。
This Service Manual uses recycled paper.

© 2005 YAMAHA CORPORATION All rights reserved.

100949



YAMAHA

YAMAHA CORPORATION
P.O.Box 1, Hamamatsu, Japan

'05.04

DVD-S557

■ REPLACEMENT PARTS


	Ref. No.	Part No.	Description	Remarks	Markets
*	101	AAX69510	FRONT PANEL ASS'Y	BL	3143 027 62111
*	101	AAX69520	FRONT PANEL ASS'Y	TI	3143 027 62121
*	101	AAX69530	FRONT PANEL ASS'Y	SI	3143 027 62131
*	110	AAX69500	TRAY COVER ASS'Y		3143 027 60961
	161	AAX67060	FRAME ASS'Y		3143 027 60891
	190	AAX53540	BUSH	450H259010	3139 114 26671
*	230	AAX69540	REAR PANEL		3139 241 22741
	240	AAX58270	TOP COVER	BL	3139 247 59051
	240	AAX58290	TOP COVER	TI, SI	3139 241 22191
	250	AAX55450	PW HEAD TORX S-TIGHT SCREW	BL 3x6 MFZN2BL	3139 110 40611
	250	AAX53440	PW HEAD TORX S-TIGHT SCREW	TI, SI 3x6 MFN133	3104 120 40081
	255	AAX55930	PAN HEAD TORX S-TIGHT SCREW	3x4 MFZN2BL	3141 010 40591
	256	AAX23640	PAN HEAD TORX S-TIGHT SCREW	3x6 MFZN2BL	2511 077 00039
	260	AAX53520	PAN HEAD TORX P-TIGHT SCREW	3x8 MFZN2BL	2511 076 50012
⚠	336	AAX58470	POWER CABLE	1.8m	3103 140 25882
⚠	336	AAX53630	POWER CABLE	1.8m	2422 070 98231
	1100	AAX58190	P.C.B. ASS'Y	FRONT	3139 248 83061
	1200	AAX58170	P.C.B. ASS'Y	A/V	3139 248 83161
*	1300	AAX70190	DVD MODULE	MODULE SD6.1 PL 2CH	3139 247 11431
⚠	1600	AAX58480	POWER SUPPLY UNIT	HE 2004 MIT	3139 248 72062
	1902	AAX58250	FLEXIBLE FLAT CABLE	30P 120mm P=1mm	3139 241 00541
	1903	AAX58220	FLEXIBLE FLAT CABLE	16P 220mm P=1mm	3139 111 02421
	1904	AAX58230	FLEXIBLE FLAT CABLE	9P 140mm P=1mm	3139 241 00521
	1905	AAX58240	FLEXIBLE FLAT CABLE	4P 400mm P=1mm	3139 241 00531
			ACCESSORIES		
	2000	AAX58450	REMOTE CONTROL		3139 248 71873
	2003	AAX21980	AUDIO PIN CABLE	RD/WH 1.5m 1pc	3103 308 92611
	2004	AAX22970	VIDEO PIN CABLE	YE 1.5m 1pc	3104 108 45432
			BATTERY	UM-3 (2pcs)	

* New Parts

EXPLODED VIEW

When disassembling, use the special screw driver with such tip shape as shown in figure.

 
T10  2.7 mm



- 250 3 x 6 S-Tight with the brim
- 255 3 x 4 S-Tight Black
- 256 3 x 6 S-Tight Black
- 260 3 x 8 P-Tight Black

DVD Module

 - The DVD Mechanism and Mono Board together as a set are called the DVD Module.
- If a failure has occurred with any part of the DVD Module, be sure to replace the DVD Module as a whole.
- Neither the DVD Mechanism nor Mono Board can be replaced independently.

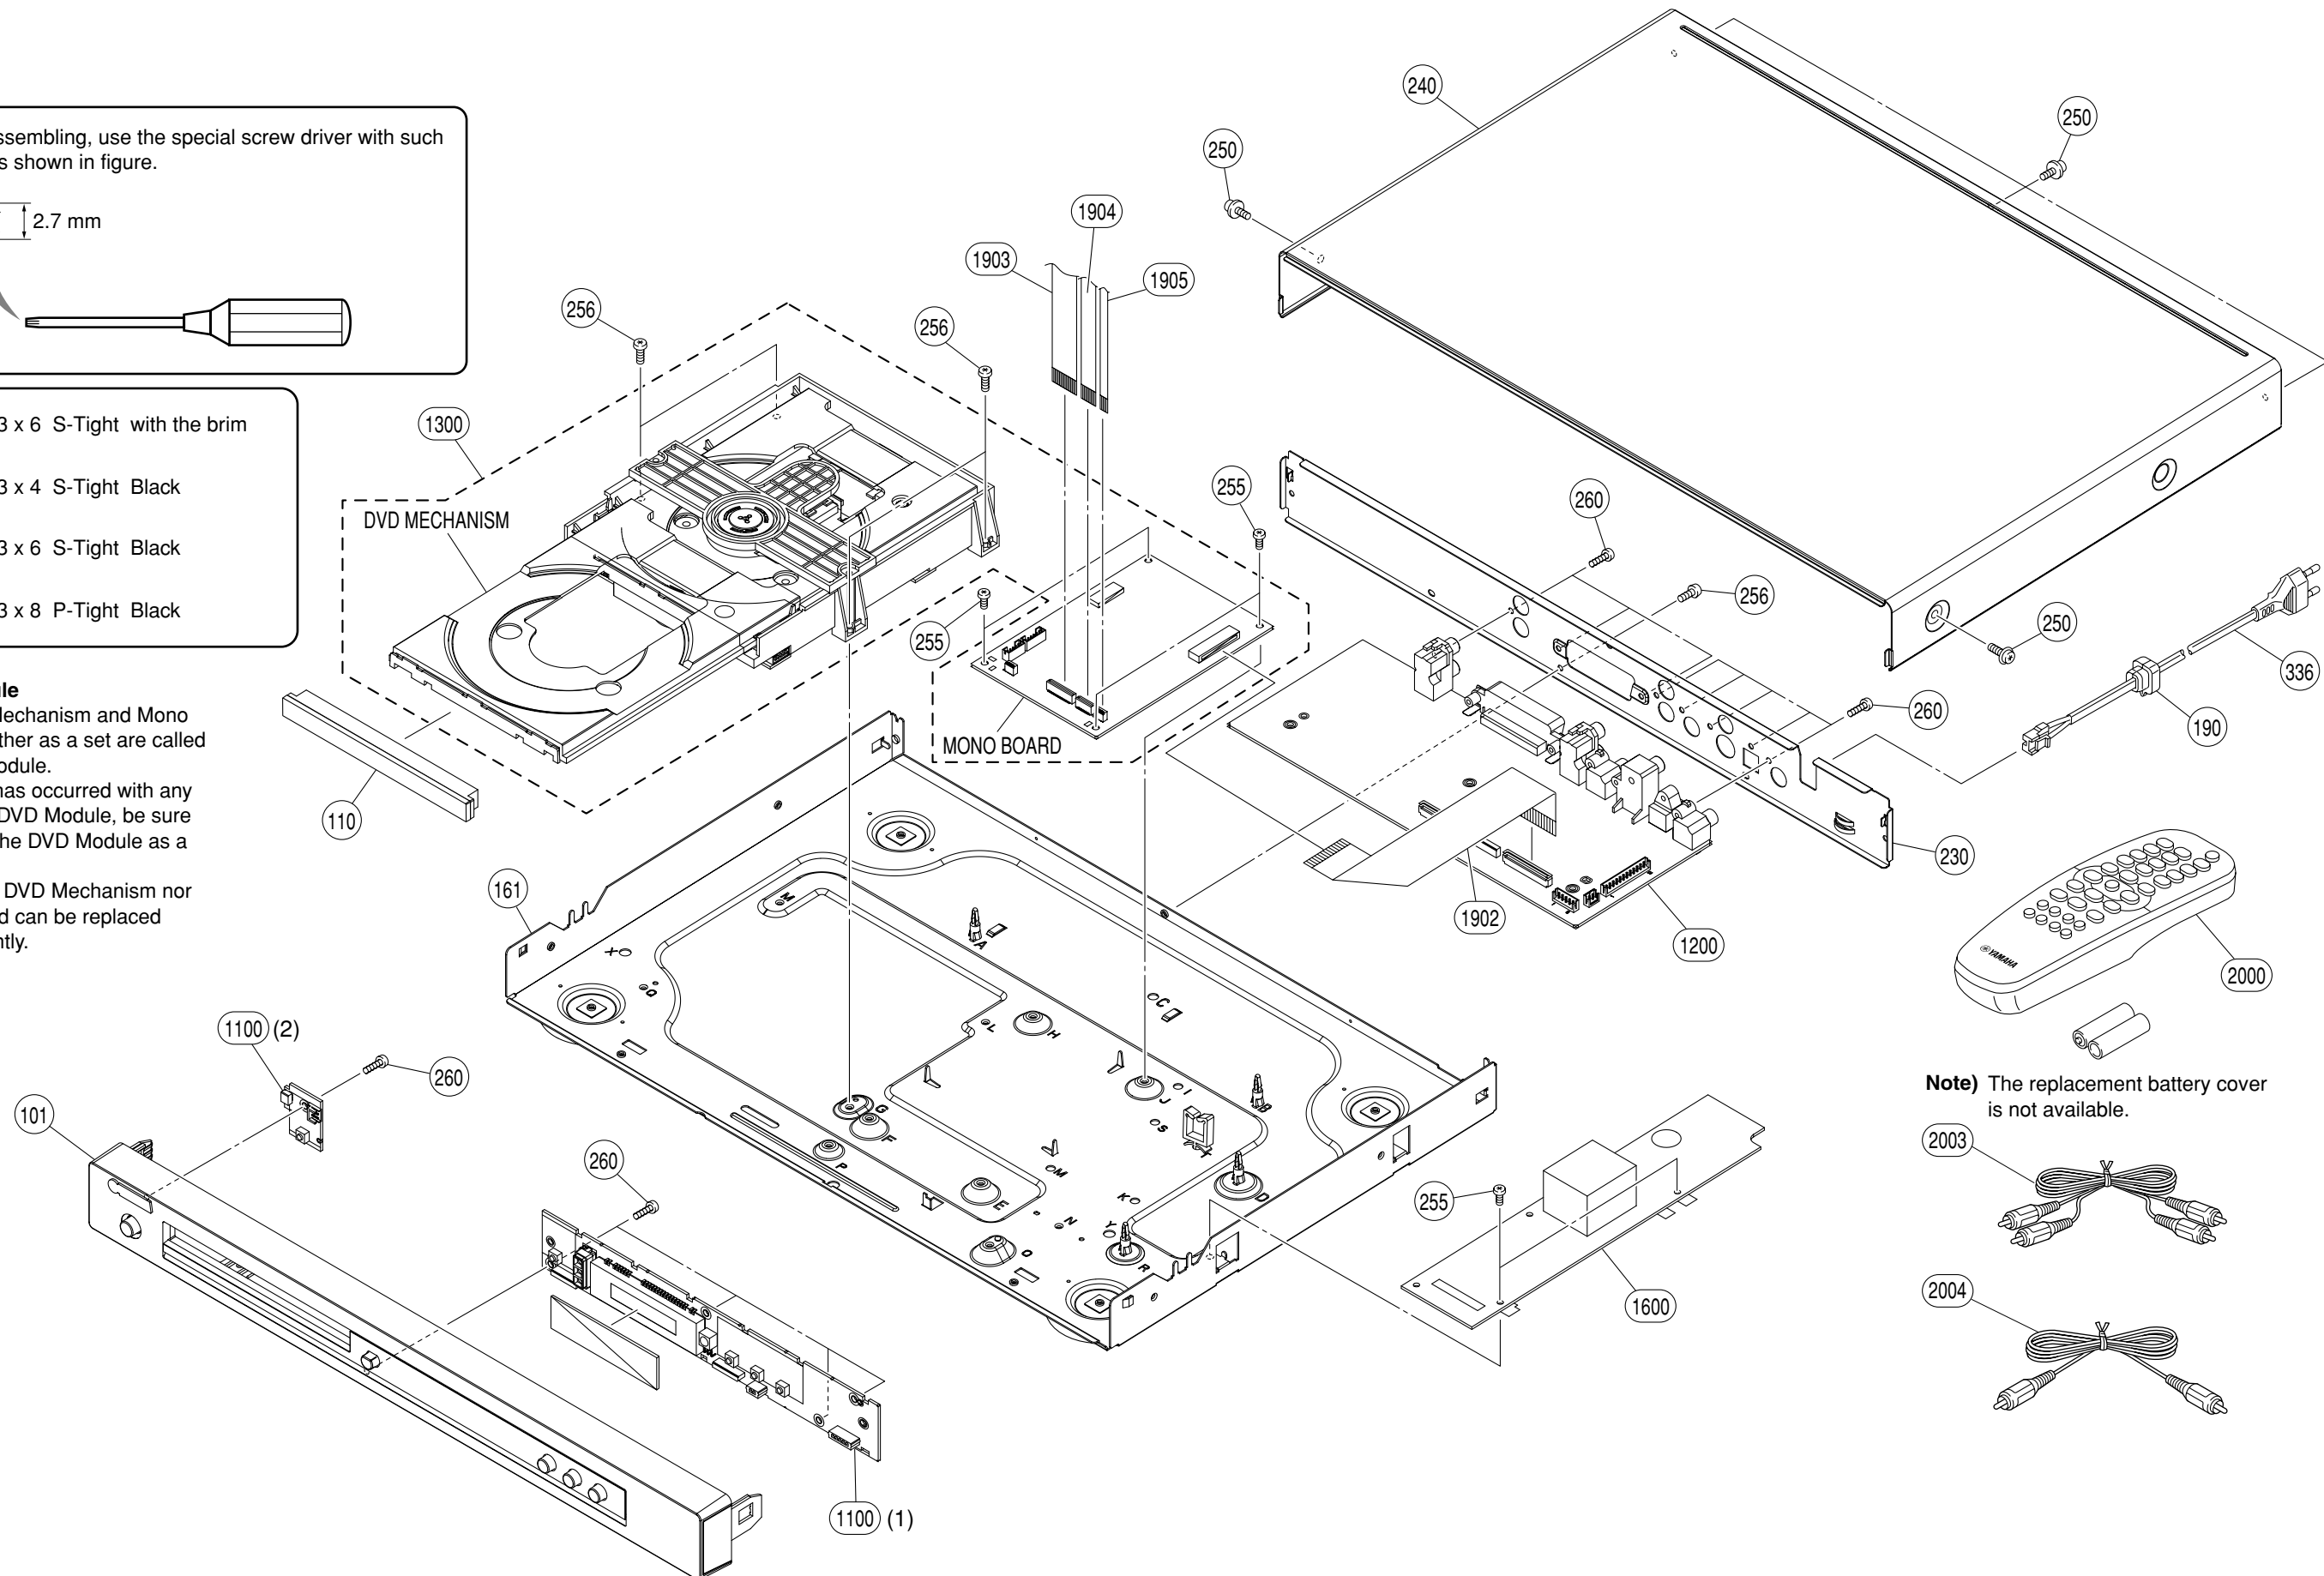

Note) The replacement battery cover is not available.

DVD-S557

