

Bang & Olufsen




Beogram CD4500

Type 5171, 5172, 5173, 5174,
5175

BEOGRAM CD 3500

Type 5146-5147-5148-5149-5150


CD-Mechanism Version II
Beogram CD 4500

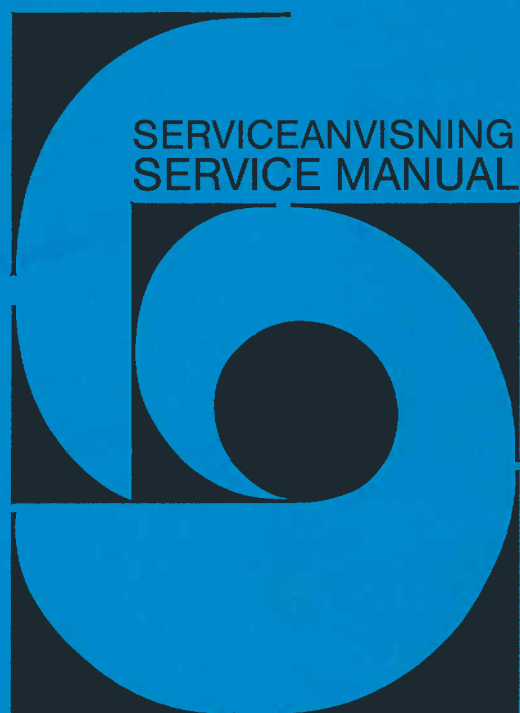

Modules

3	Display	diagr. C page 2-5
5	Decoder	diagr. B page 2-4
10	Digital out	diagr. B page 2-4
11	Connections PCB	diagr. A page 2-2
30	Servo	diagr. A page 2-2
96	CD-mechanism	diagr. A page 2-2

CLASS 1
LASER PRODUCT

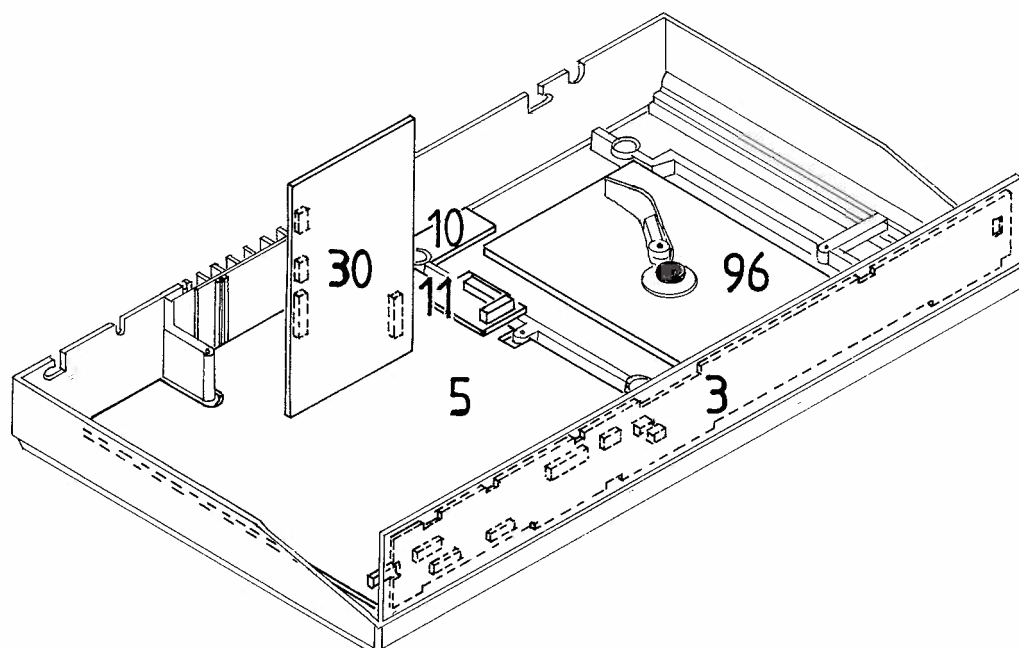


TECHNICAL SPECIFICATIONS

Frequency range	3-20,000 Hz ± 0.3 dB
Signal-to-noise ratio	>100 dB/110 dB A-weighted
Dynamic range	>96 dB
Harmonic distortion	<0.0025% at 0 dB
	<0.025% at -20 dB
Channel separation	>101 dB
Channel difference	<0.08 dB
Converter system	2 x 16 bit, 4 x oversampling 176.4 kHz
Low pass filter	Digital + Bessel/elliptical analog
Damping >20,000 Hz	>50 dB
Phase error between L and R	0 degree at 20-20,000 Hz
Output, analog	1.3 V RMS at 0 dB
Output, digital	For digital equipment
Power supply	Type no. 5171: 220 V
	Type no. 5172: 240 V
	Type no. 5173: 120 V
	Type no. 5174: 100 V
	Type no. 5175: 240 V
Power frequency	50-60 Hz
Power consumption	23 watts
Dimensions W x H x D	42 x 7 x 24.5 cm (16 $\frac{1}{2}$ " x 2 $\frac{3}{4}$ " x 9 $\frac{1}{2}$ ")
Weight	4.5 kg (9,9 lbs)


Subject to change without notice

OVERSIGHT OVER LEDNINGSMONTERING FOR NETTRANSFORMATOR


SURVEY OF WIRE MOUNTING FOR MAINS TRANSFORMER

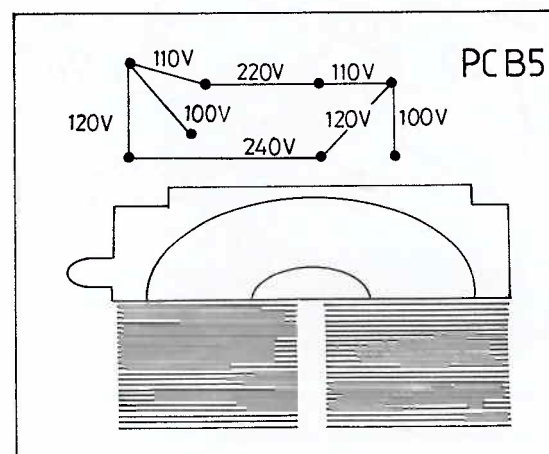


SERVO PCB30

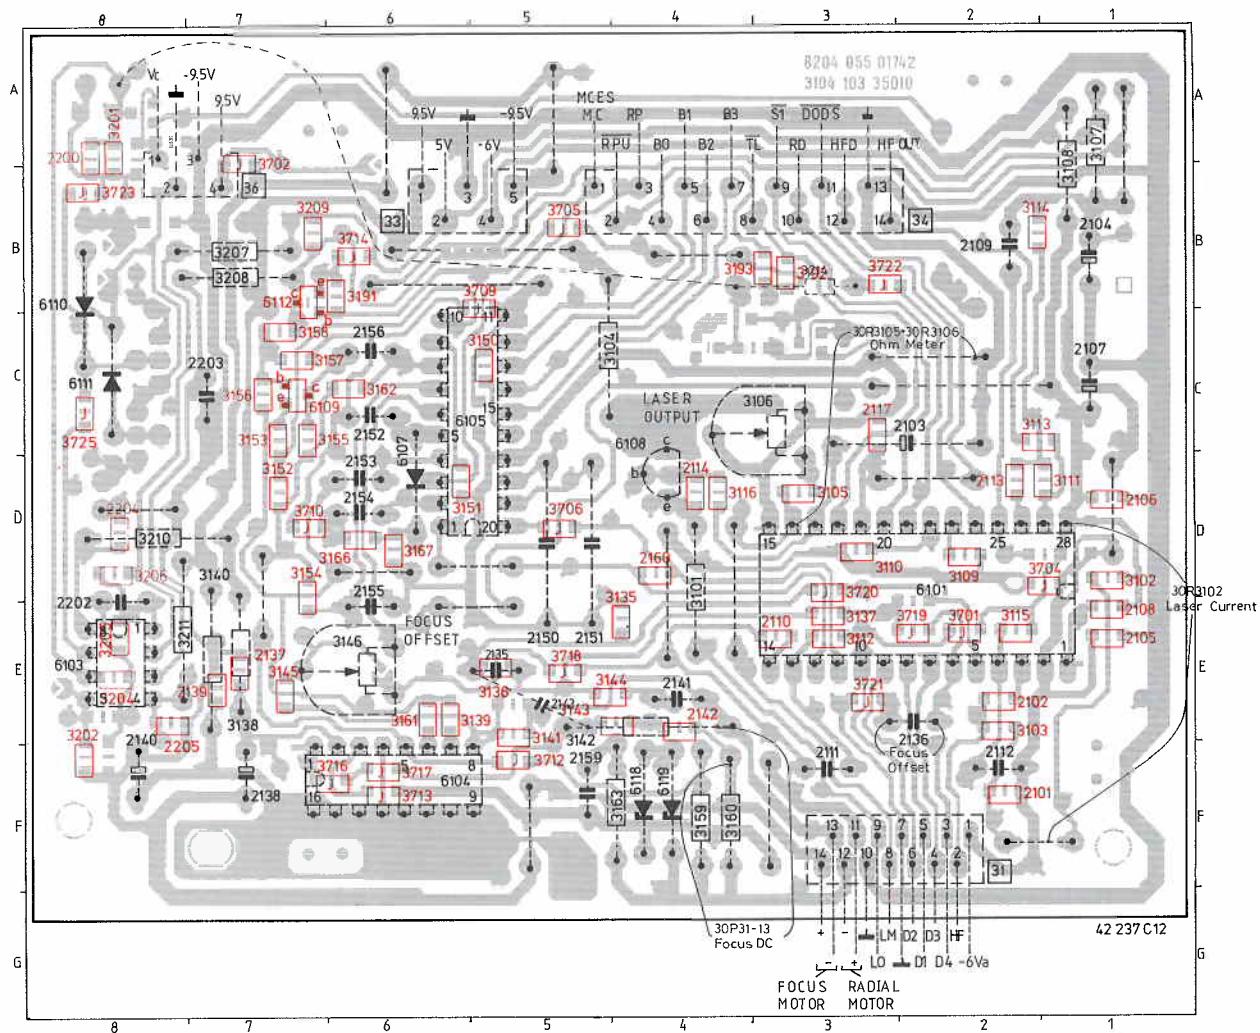


DISC MOTOR CONTROL

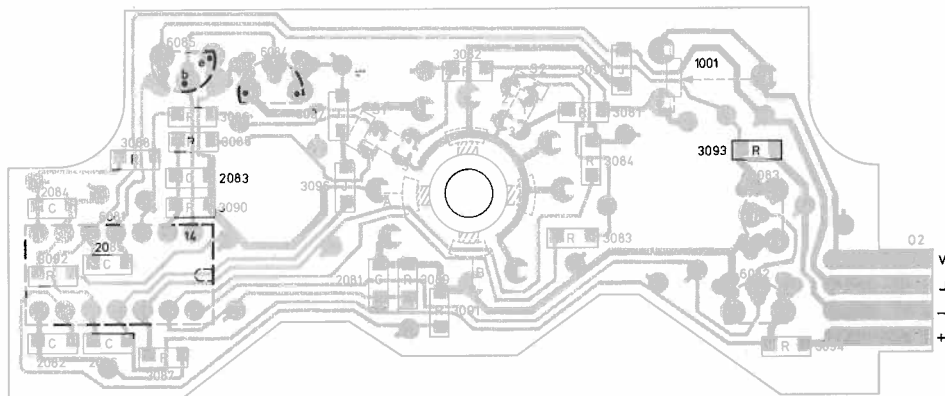



SERVO PCB30

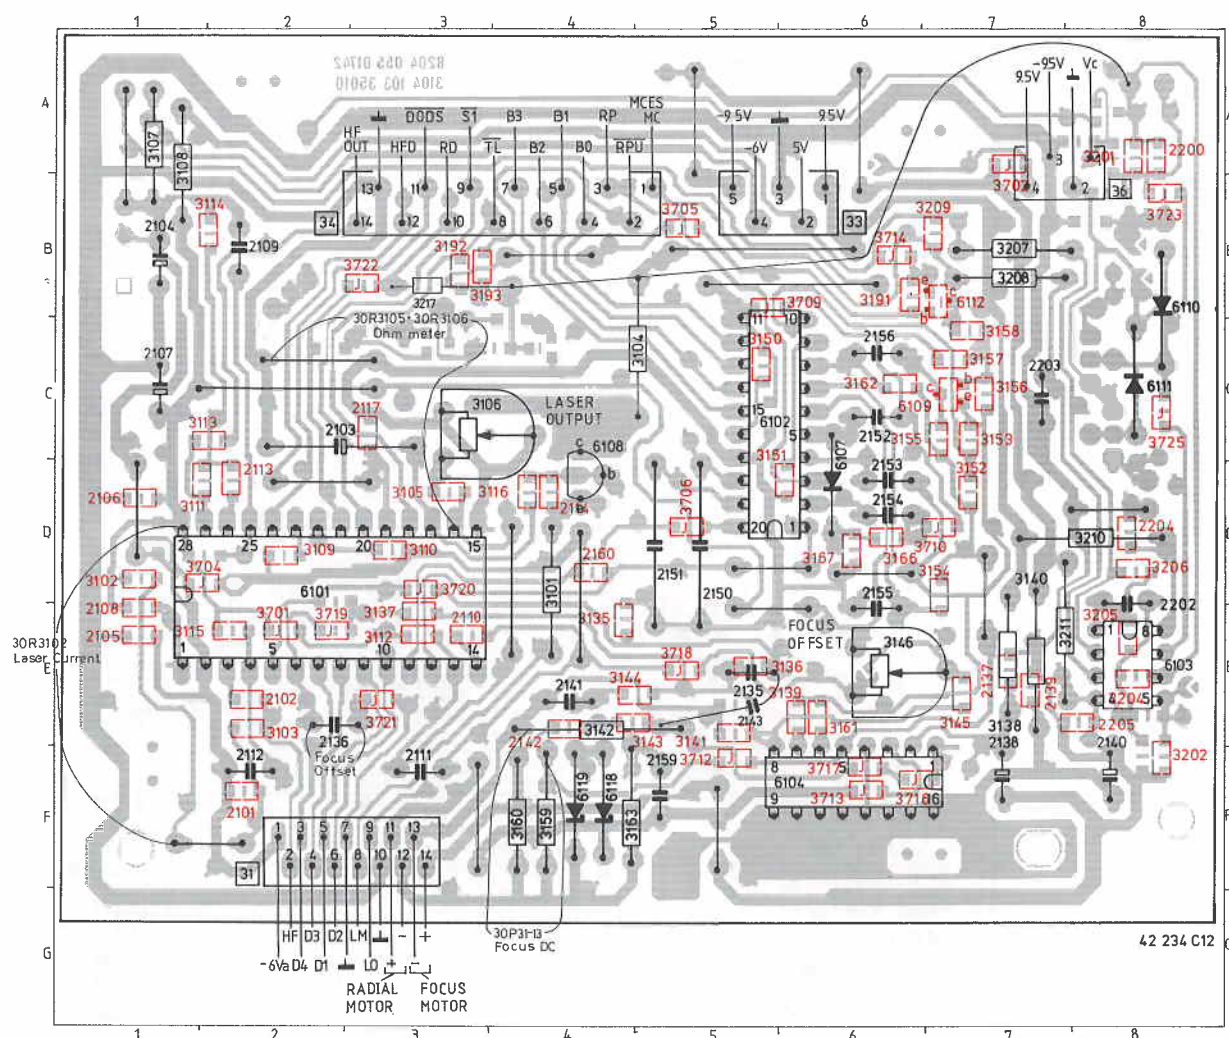


DISC MOTOR CONTROL

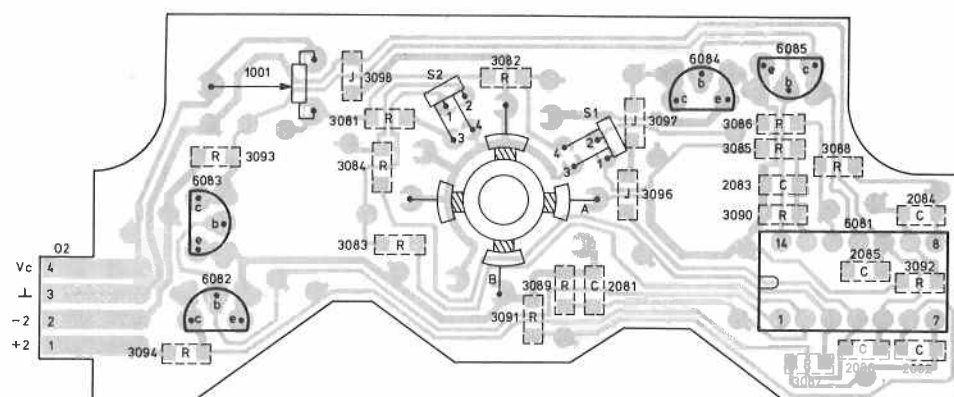


DISPLAY PCB3

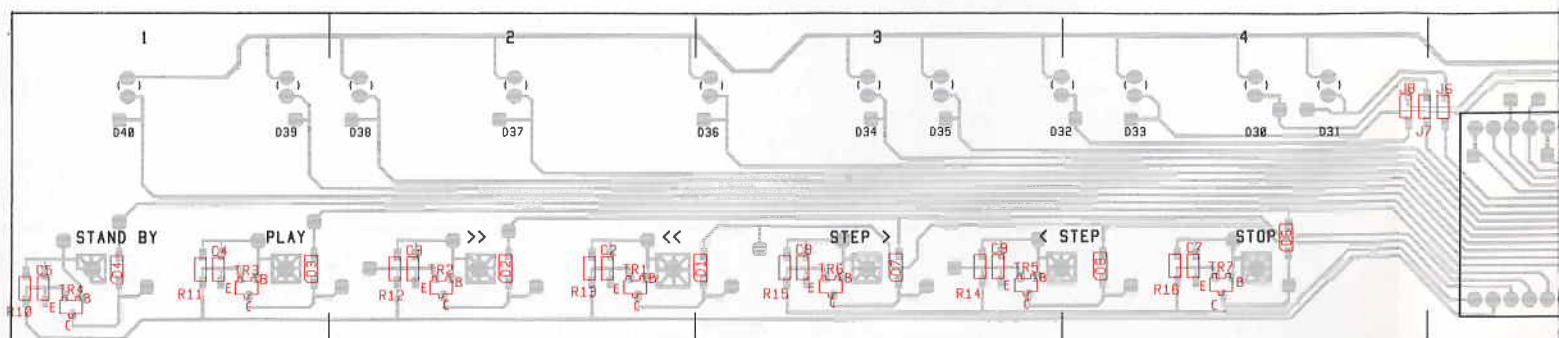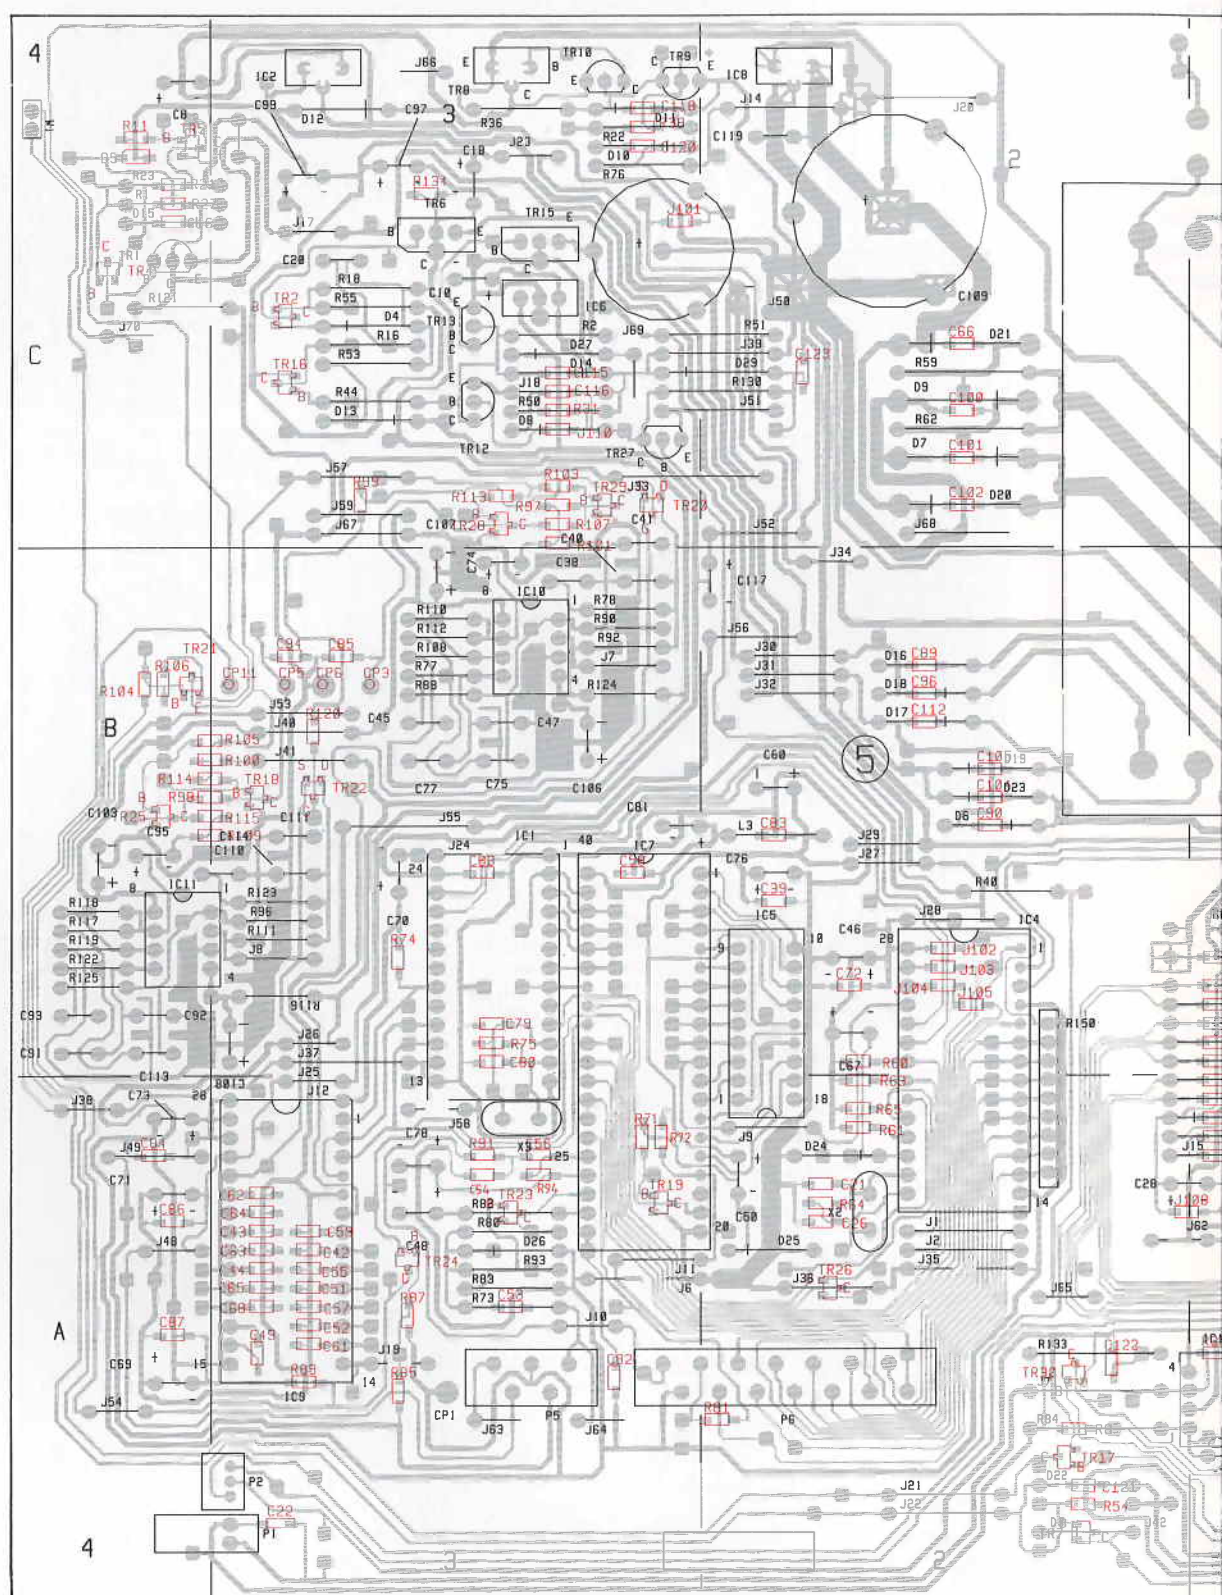

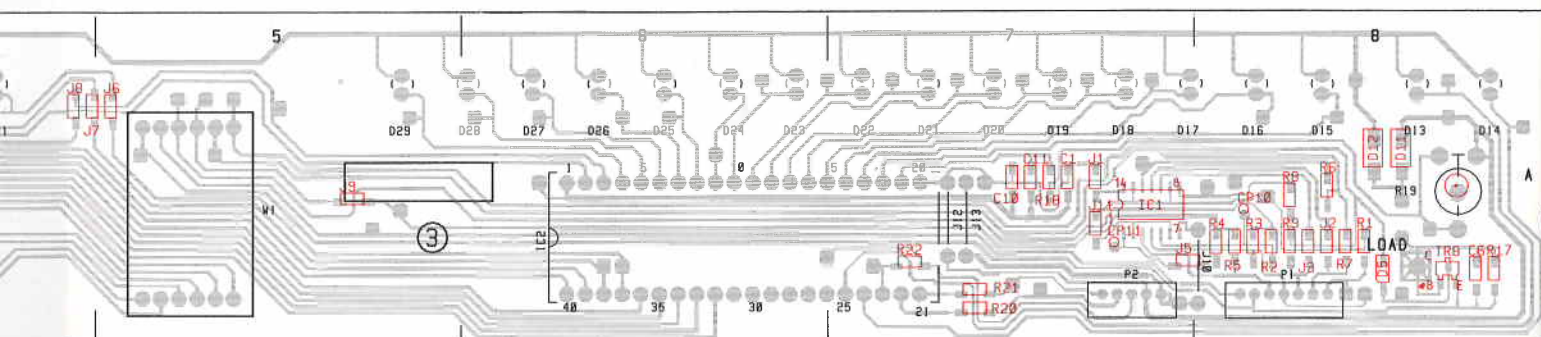

The diagram shows a power distribution system with a fault at bus 10. The fault is represented by a red circle with the number '10' inside. The fault is located on a line connecting bus 10 to bus 11. The fault is labeled 'R=0.001 pu' and 'X=0.001 pu'. The fault is also labeled '10' in a red circle. The diagram includes a fault indicator 'F' and a fault location 'pg'.

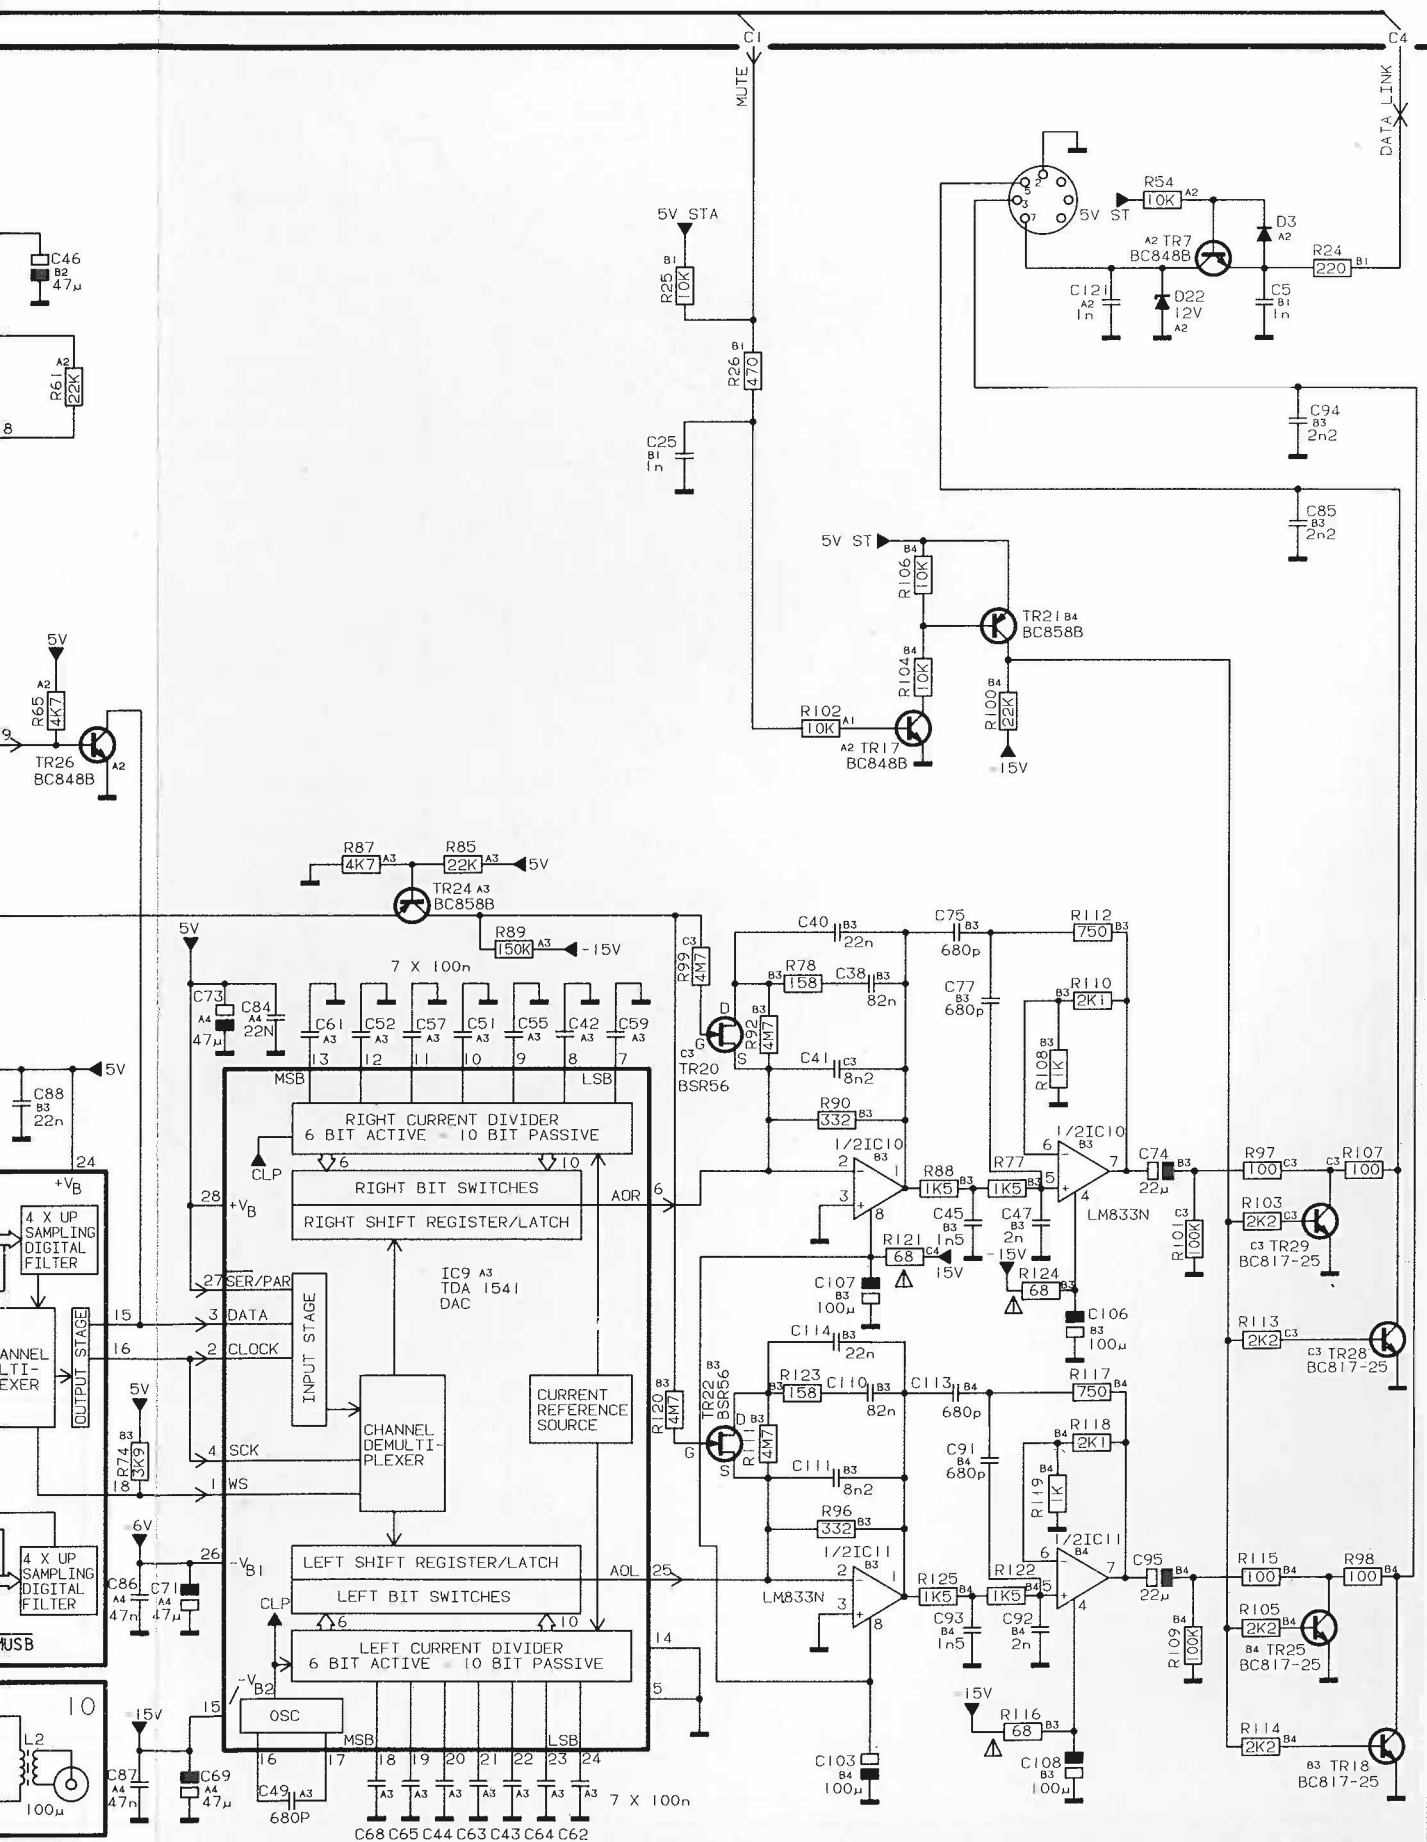

5 8005230

13V ST (2 CON.)

5V ST (3 CON.)

5V ST A

91S1

P2-2

P2-3

P2-1

P2-4

P2-5

P2-6

P2-7

P2-8

P2-9

P2-10

P2-11

P2-12

P2-13

P2-14

P2-15

P2-16

P2-17

P2-18

P2-19

P2-20

P2-21

P2-22

P2-23

P2-24

P2-25

P2-26

P2-27

P2-28

P2-29

P2-30

P2-31

P2-32

P2-33

P2-34

P2-35

P2-36

P2-37

P2-38

P2-39

P2-40

P2-41

P2-42

P2-43

P2-44

P2-45

P2-46

P2-47

P2-48

P2-49

P2-50

P2-51

P2-52

P2-53

P2-54

P2-55

P2-56

P2-57

P2-58

P2-59

P2-60

P2-61

P2-62

P2-63

P2-64

P2-65

P2-66

P2-67

P2-68

P2-69

P2-70

P2-71

P2-72

P2-73

P2-74

P2-75

P2-76

P2-77

P2-78

P2-79

P2-80

P2-81

P2-82

P2-83

P2-84

P2-85

P2-86

P2-87

P2-88

P2-89

P2-90

P2-91

P2-92

P2-93

P2-94

P2-95

P2-96

P2-97

P2-98

P2-99

P2-100

P2-101

P2-102

P2-103

P2-104

P2-105

P2-106

P2-107

P2-108

P2-109

P2-110

P2-111

P2-112

P2-113

P2-114

P2-115

P2-116

P2-117

P2-118

P2-119

P2-120

P2-121

P2-122

P2-123

P2-124

P2-125

P2-126

P2-127

P2-128

P2-129

P2-130

P2-131

P2-132

P2-133

P2-134

P2-135

P2-136

P2-137

P2-138

P2-139

P2-140

P2-141

P2-142

P2-143

P2-144

P2-145

P2-146

P2-147

P2-148

P2-149

P2-150

P2-151

P2-152

P2-153

P2-154

P2-155

P2-156

P2-157

P2-158

P2-159

P2-160

P2-161

P2-162

P2-163

P2-164

P2-165

P2-166

P2-167

P2-168

P2-169

P2-170

P2-171

P2-172

P2-173

P2-174

P2-175

P2-176

P2-177

P2-178

P2-179

P2-180

P2-181

P2-182

P2-183

P2-184

P2-185

P2-186

P2-187

P2-188

P2-189

P2-190

P2-191

P2-192

P2-193

P2-194

P2-195

P2-196

P2-197

P2-198

P2-199

P2-200

P2-201

P2-202

P2-203

P2-204

P2-205

P2-206

P2-207

P2-208

P2-209

P2-210

P2-211

P2-212

P2-213

P2-214

P2-215

P2-216

P2-217

P2-218

P2-219

P2-220

P2-221

P2-222

P2-223

P2-224

P2-225

P2-226

P2-227

P2-228

P2-229

P2-230

P2-231

P2-232

P2-233

P2-234

P2-235

P2-236

P2-237

P2-238

P2-239

P2-240

P2-241

P2-242

P2-243

P2-244

P2-245

P2-246

P2-247

P2-248

P2-249

P2-250

P2-251

P2-252

P2-253

P2-254

P2-255

P2-256

P2-257

P2-258

P2-259

P2-260

P2-261

P2-262

P2-263

P2-264

P2-265

P2-266

P2-267

P2-268

P2-269

P2-270

P2-271

P2-272

P2-273

P2-274

P2-275

P2-276

P2-277

P2-278

P2-279

P2-280

P2-281

P2-282

P2-283

P2-284

P2-285

P2-286

P2-287

P2-288

P2-289

P2-290

P2-291

P2-292

P2-293

P2-294

P2-295

P2-296

P2-297

P2-298

P2-299

P2-300

P2-301

P2-302

P2-303

P2-304

P2-305

P2-306

P2-307

P2-308

P2-309

P2-310

P2-311

P2-312

P2-313

P2-314

P2-315

P2-316

P2-317

P2-318

P2-319

P2-320

P2-321

P2-322

P2-323

P2-324

P2-325

P2-326

P2-327

P2-328

P2-329

P2-330

P2-331

P2-332

P2-333

P2-334

P2-335

P2-336

P2-337

P2-338

P2-339

P2-340

P2-341

P2-342

P2-343

P2-344

P2-345

P2-346

P2-347

P2-348

P2-349

P2-350

P2-351

P2-352

P2-353

P2-354

P2-355

P2-356

P2-357

P2-358

P2-359

P2-360

P2-361

P2-362

P2-363

P2-364

P2-365

P2-366

P2-367

P2-368

P2-369

P2-370

P2-371

P2-372

P2-373

P2-374

P2-375

P2-376

P2-377

P2-378

P2-379

P2-380

P2-381

P2-382

P2-383

P2-384

P2-385

P2-386

P2-387

P2-388

P2-389

P2-390

P2-391

P2-392

P2-393

P2-394

P2-395

P2-396

P2-397

P2-398

P2-399

P2-400

P2-401

P2-402

P2-403

P2-404

P2-405

P2-406

P2-407

P2-408

P2-409

P2-410

P2-411


P2-412


P2-413

P2-414

P2-415


(X CON) = NUMBER OF VOLTAGE CONNECTIONS

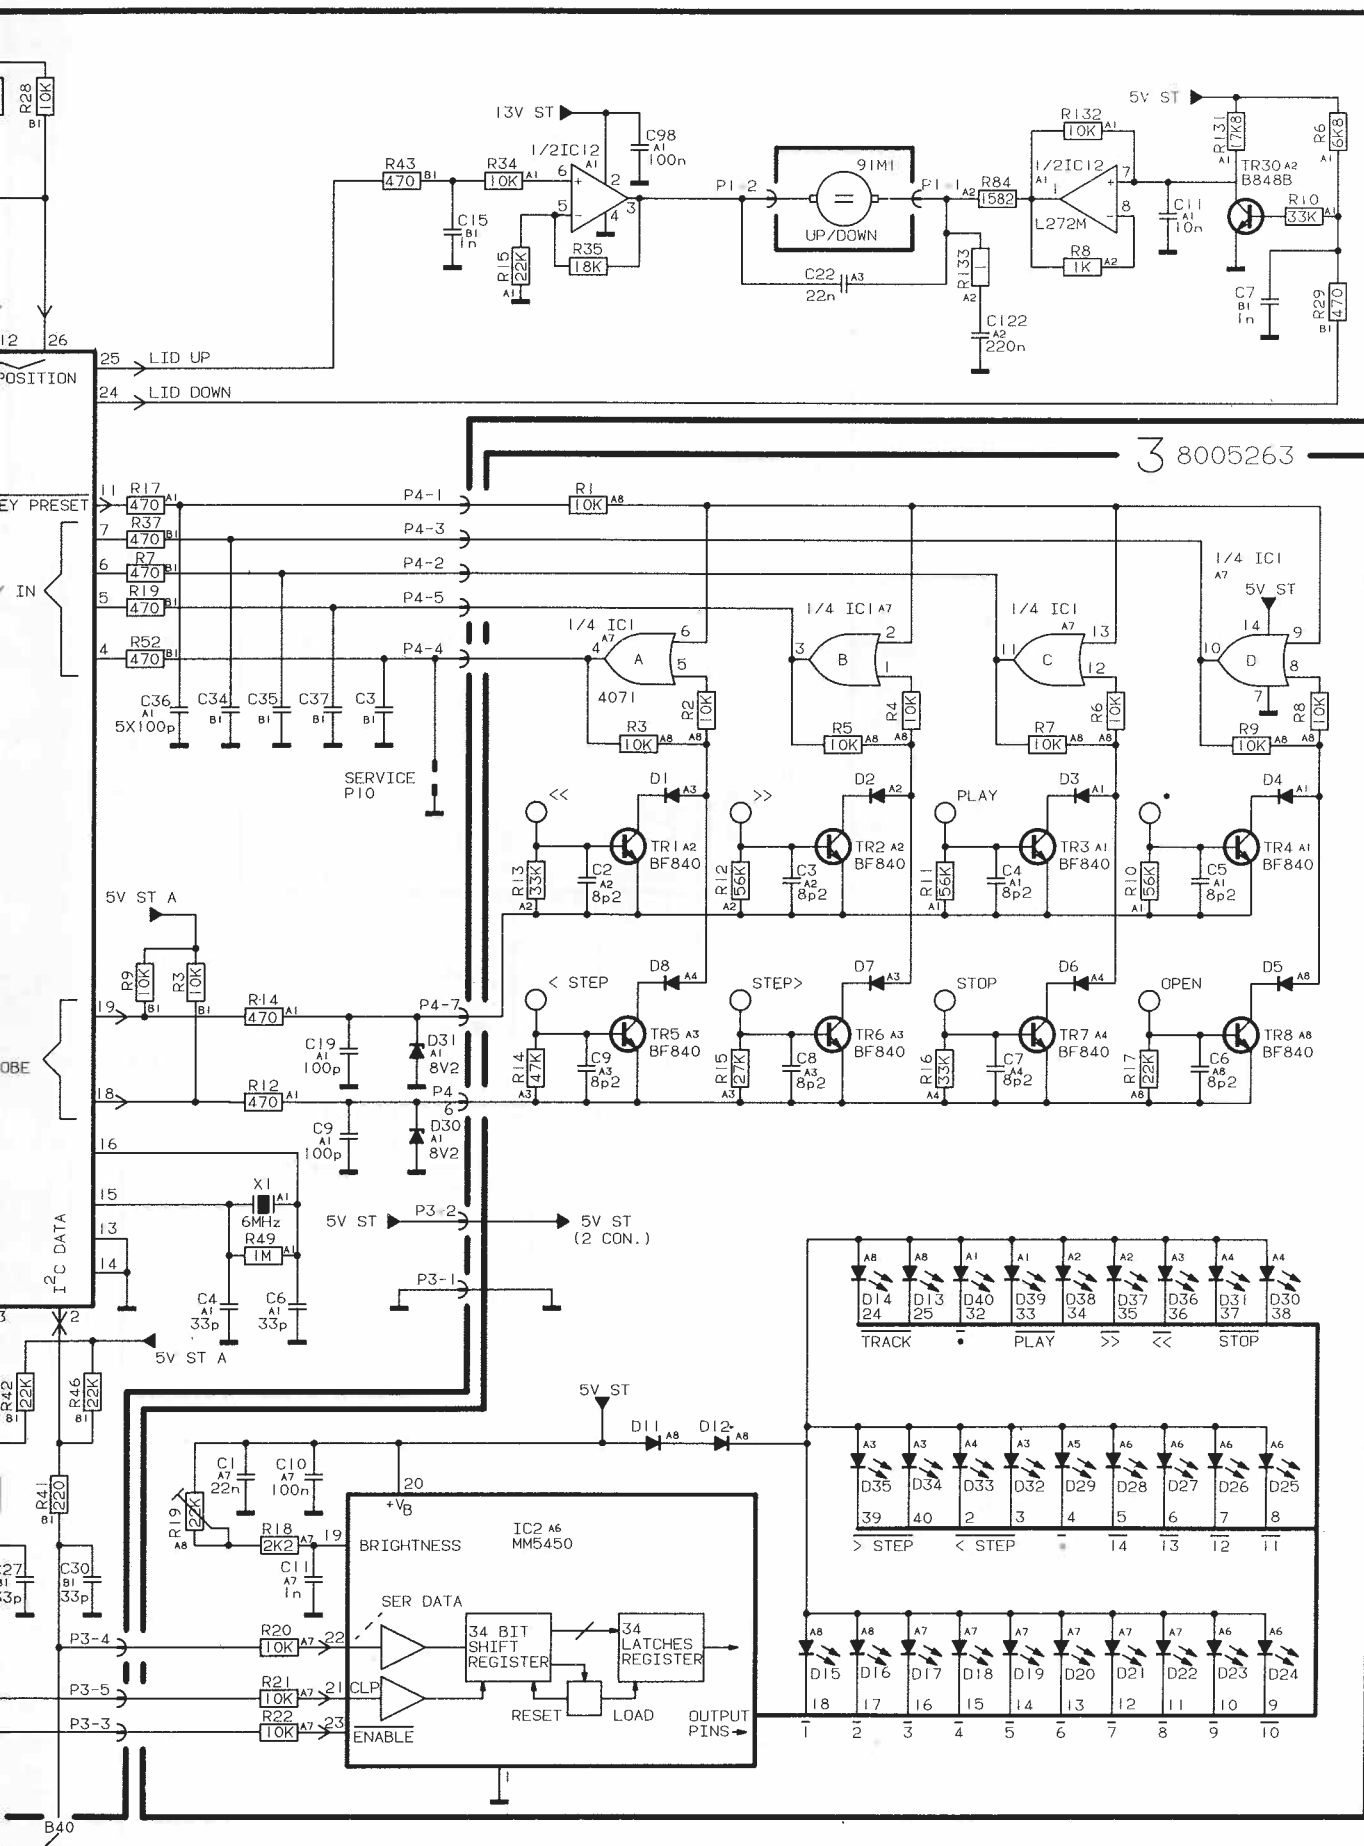

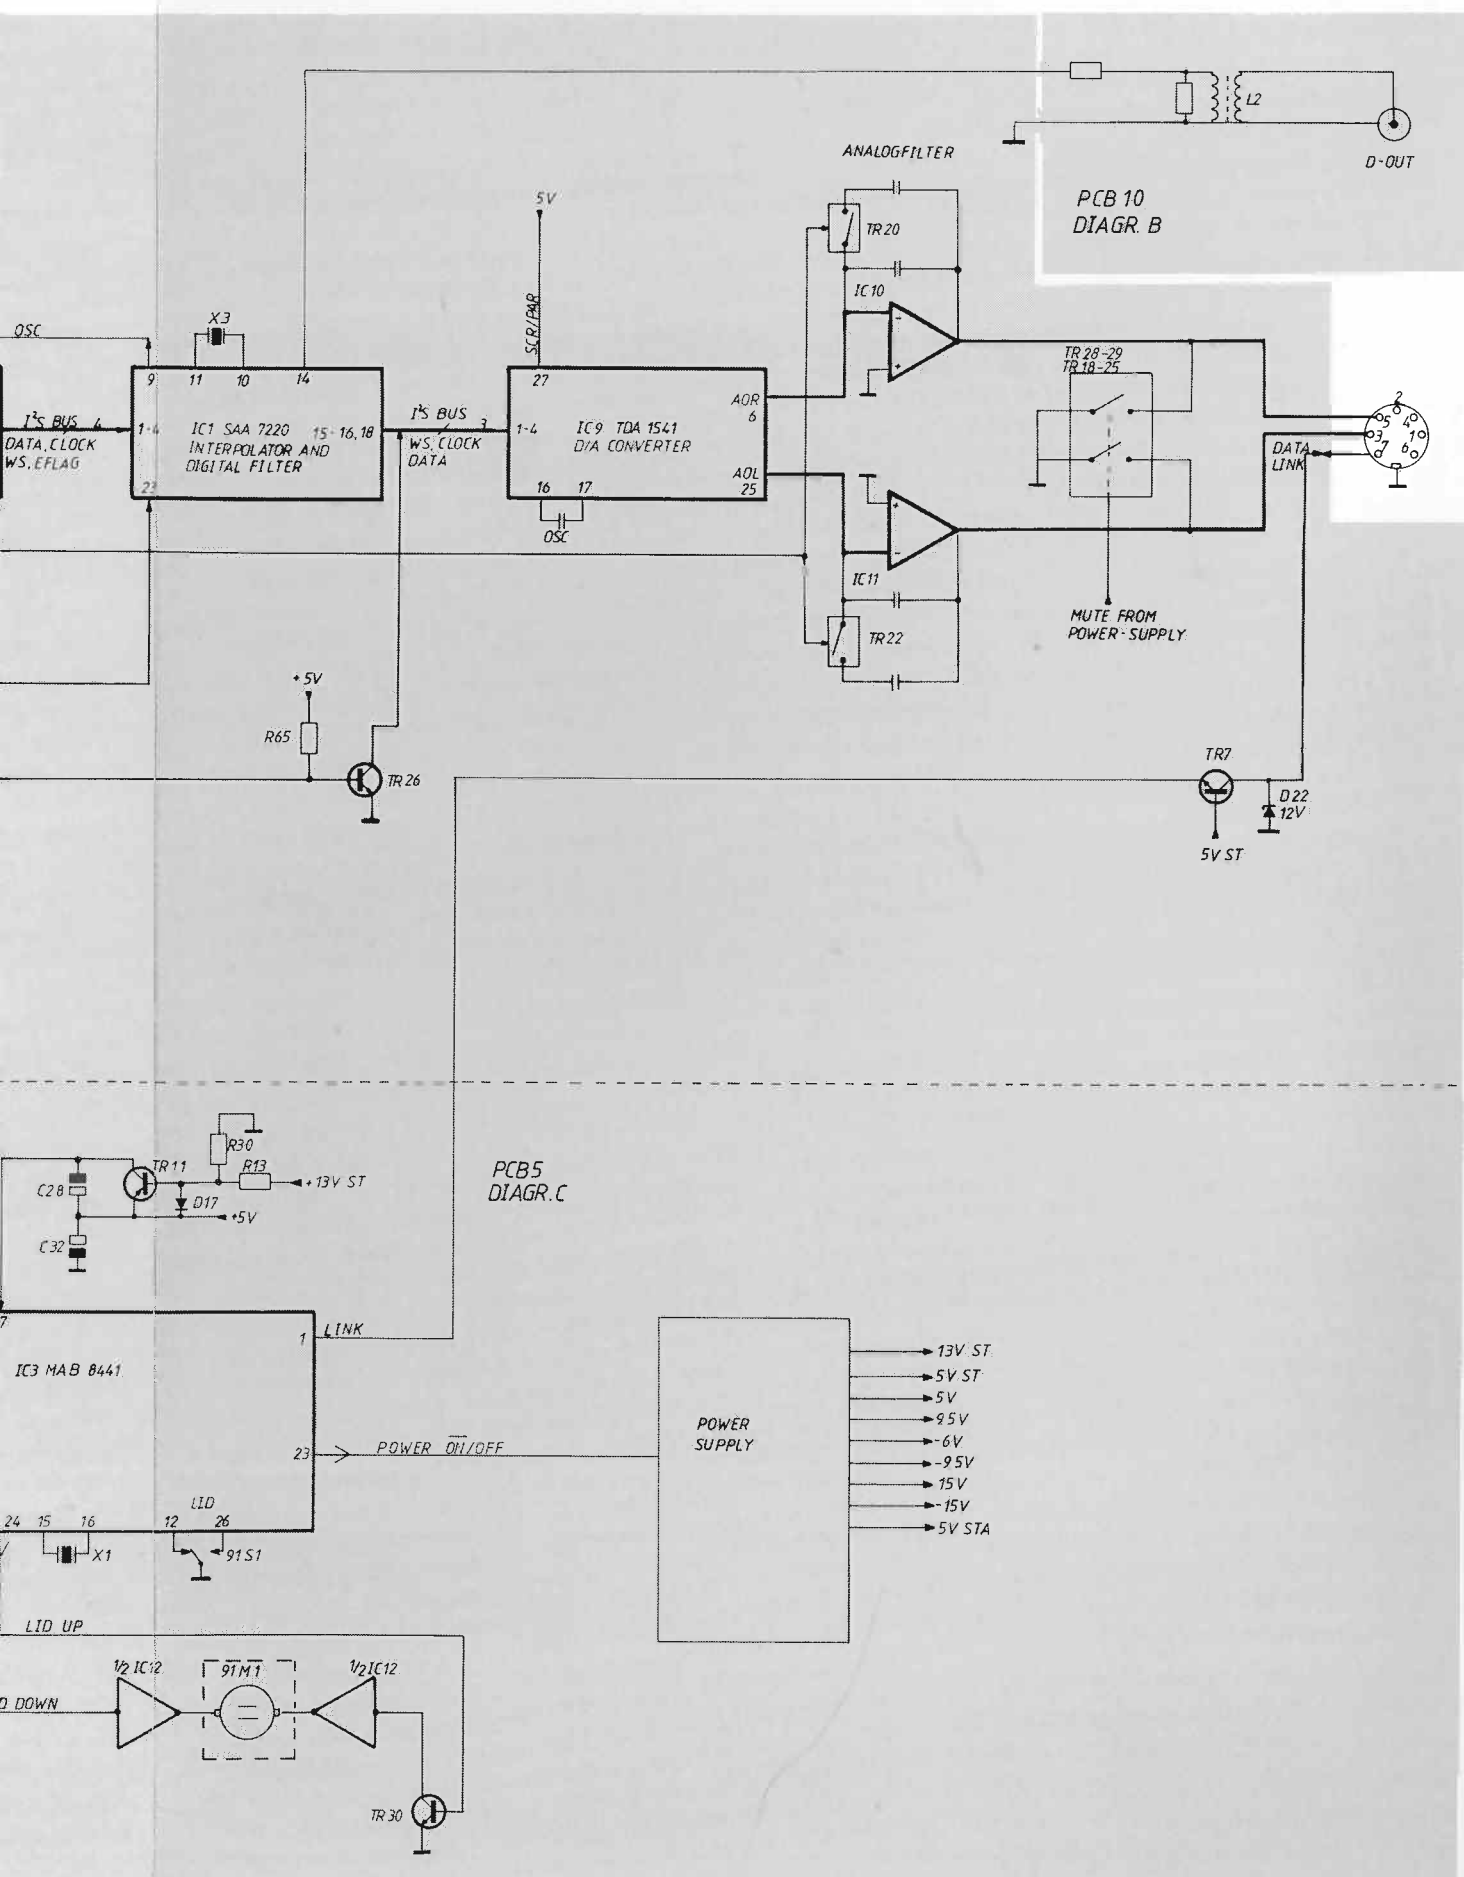


BLOCK DIAGRAM


PCB 30
DIAGR. A

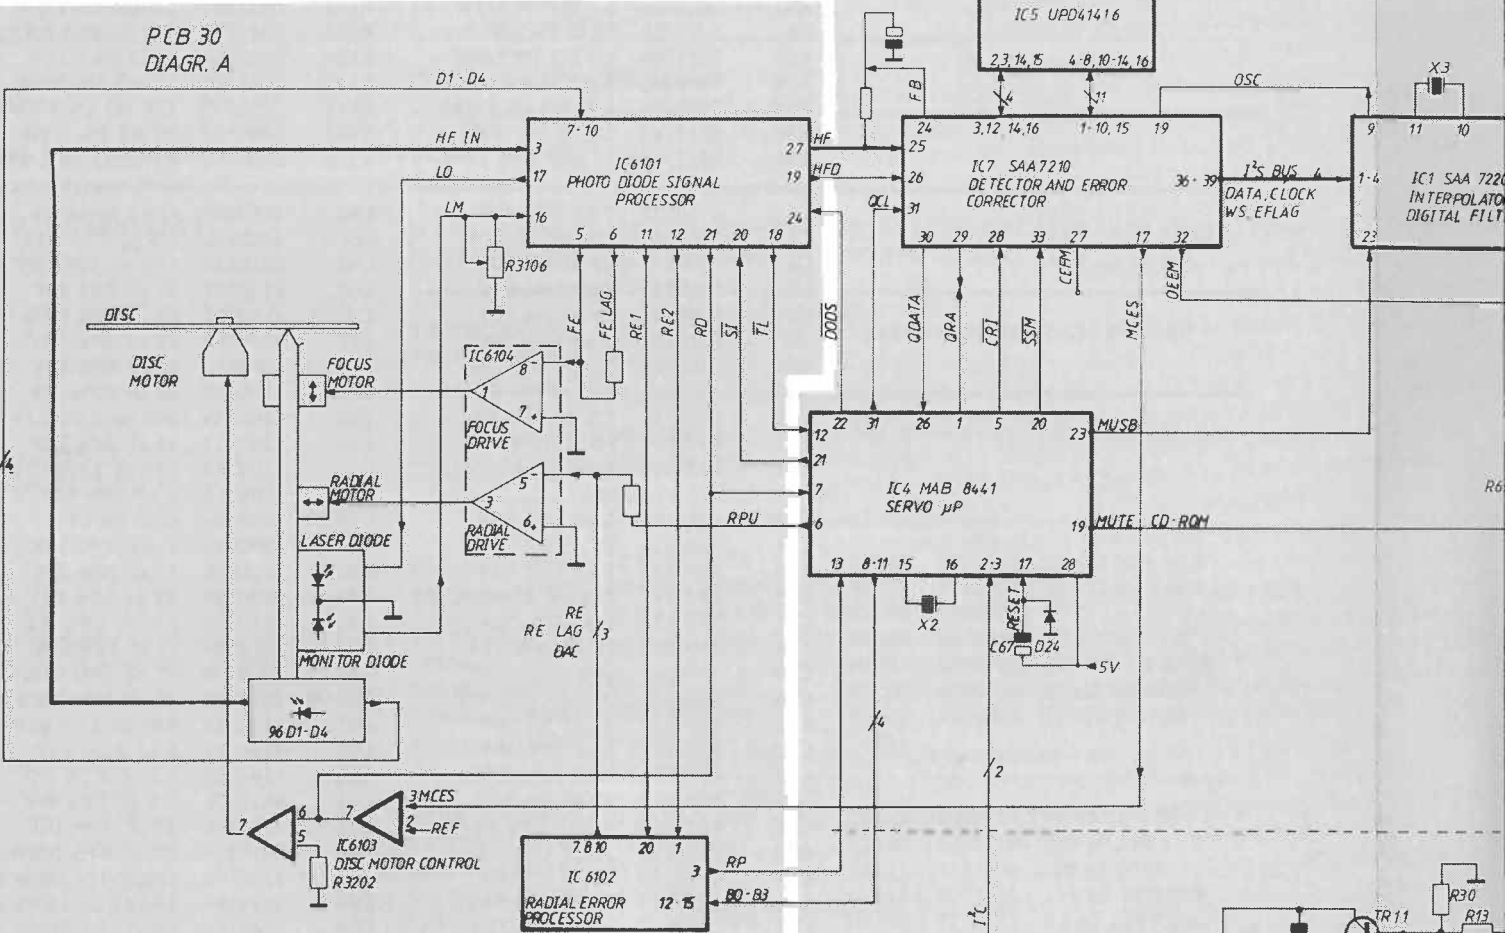


PCB 05
DIAGR B

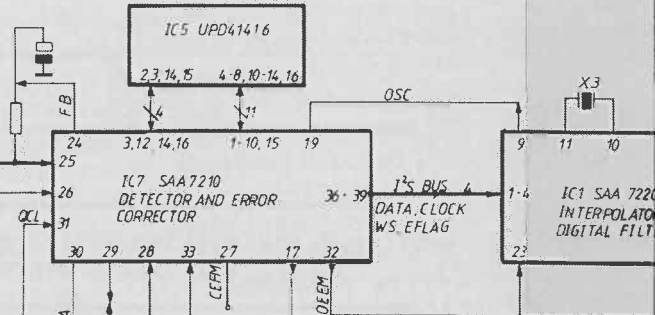

PCB 03
DIAGR. C

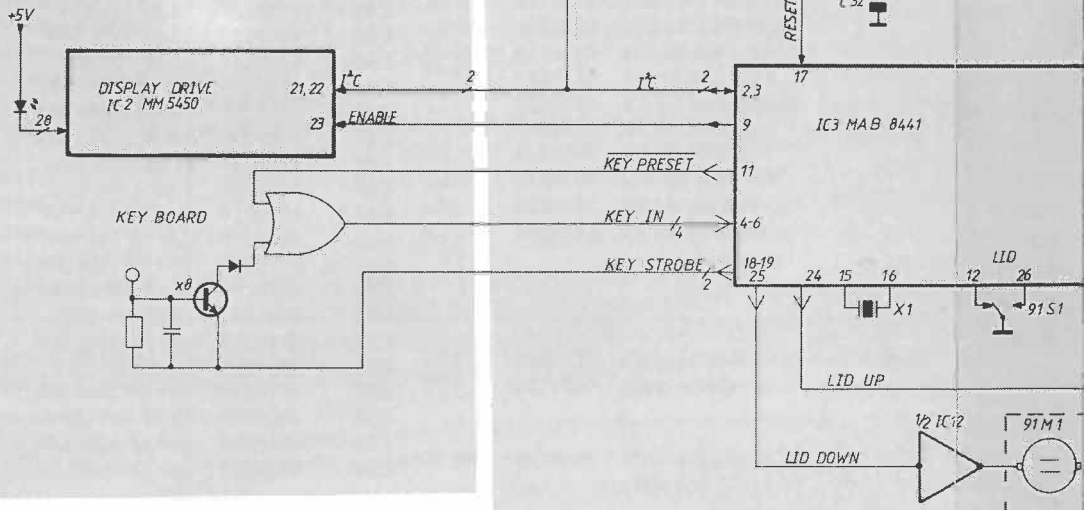

SERVO PCB30

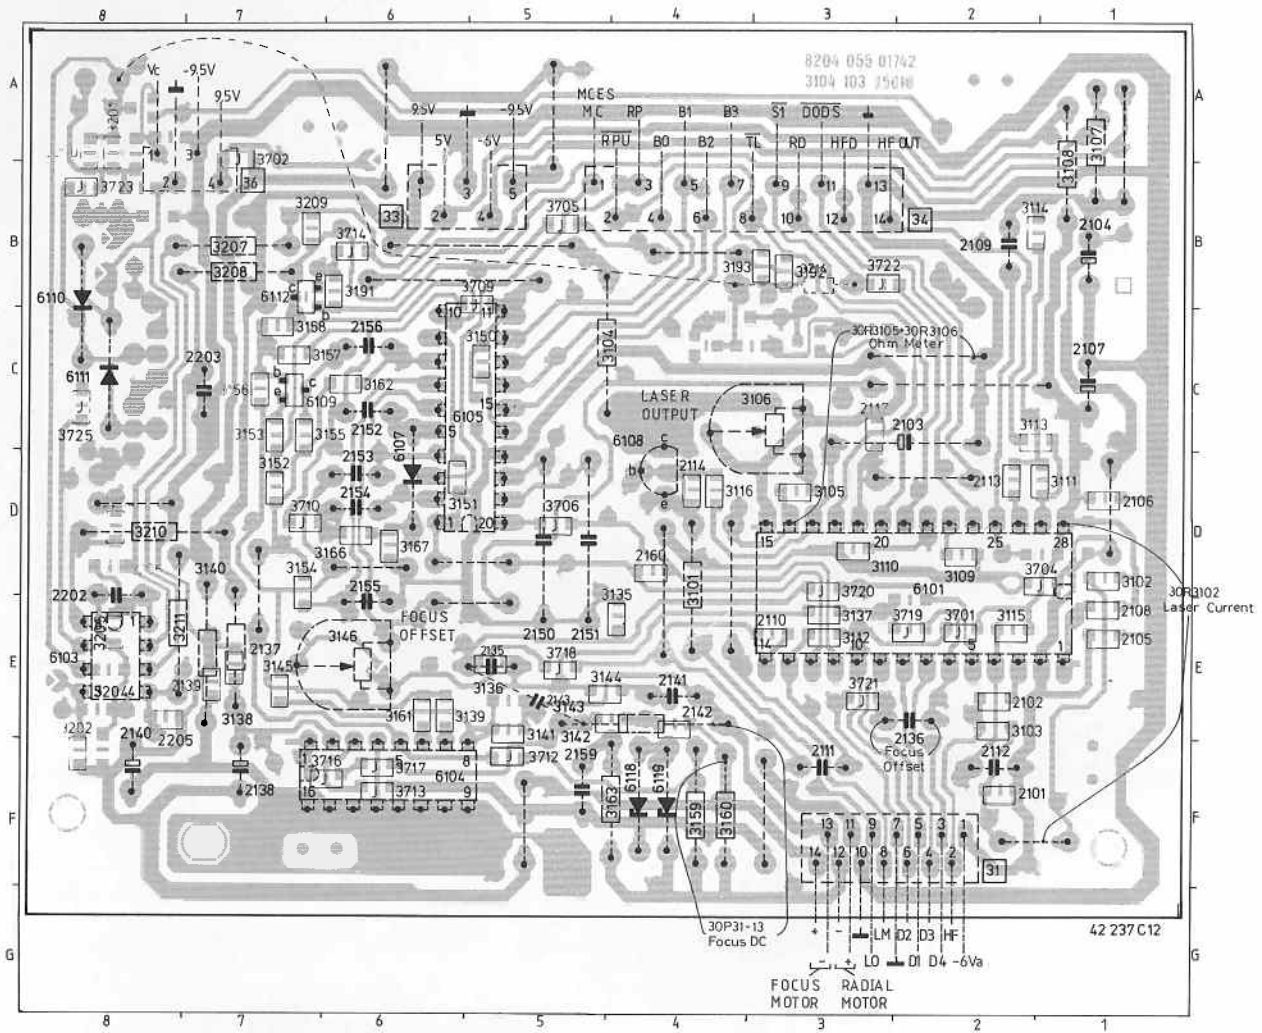

JUSTERINGER

Laserstrøm

Vigtigt:

Efter udskiftning af CD løbeværket eller servo-PCB30 skal laserstrøm-potentiometeret 30R3106 forjusteres, inden apparatet tilsluttes lysnettet.

Tilslut et ohmmeter over 30R3105 + 30R3106. Juster 30R3106, indtil 30R3105 og 30R3106 tilsammen har en værdi på 1 kohm.

Tilslut et DC-voltmeter over 30R3102.

Tilslut et oscilloskop til ben 27 på 30IC6101.

Ilæg testplade nr. 5 (plade uden fejl, bestillingsnr. 3634031) og tryk PLAY.

Kontroller på oscilloskopet, om der er HF signal. Hvis der ikke er HF signal, slukkes apparatet, og fejlen findes.

Hvis der er HF signal, spilles spor 1 på testplade 5, og 30R3106 justeres, til der måles $50\text{mV} \pm 5\text{mV}$ med DC-voltmeteret.

Fokus offset.

Ilæg testplade nr. 5A (bestillingsnr. 3634031).

Sæt apparatet i service-position 2 ved at kortslutte service-stikket på PCB5 samtidig med, at netstikket sættes i.

Kortslutningen på service-stikket fjernes.

Tryk STEP> 2 gange.

Hvis »2« i displayet bliver ved med at blinke, justeres 30R3146, indtil »2« lyser konstant.

Sæt apparatet i serviceposition 4 ved at trykke STEP> 2 gange (»4« i displayet skal lyse, og pladen skal rotere).

Tilslut et DC-voltmeter over 30C2136.

Juster 30R3146, indtil der måles $400\text{ mV} \pm 40\text{ mV}$.

Vinkel-indstilling på laserarm

Før justeringen skal vinkel-indstillingen på laserarmen kontrolleres, se side 7.1.

Hvis kontrol af vinkel-indstillingen viser, at vinklen er uden for tolerance, skal den *ikke* justeres til minimum afvigelse men blot justeres inden for tolerance.

Efter justering af vinkel-indstillingen skal laserarmens friktion kontrolleres. Dette kan gøres med en trykfjedermåler, som holdes mod magneten på fokusenheden.

ADJUSTMENTS

Laser current

Important:

When replacing the CD mechanism or the servo PCB30, the laser current potentiometer 30R3106 must be preadjusted before the set is connected to mains.

Connect an ohmmeter across 30R3105 + 30R3106. Adjust 30R3106 until the combined value of 30R3105 and 30R3106 is 1 kohm.

Connect a DC voltmeter across 30R3102.

Connect an oscilloscope to pin 27 of 30IC6101.

Load test disc no. 5 (disc without faults, part no. 3634031) and press PLAY.

Check on the oscilloscope whether there is any HF signal. If not, switch off the CD player and locate the fault.

If there is an HF signal, play track 1 of test disc 5 and adjust 30R3106 until a reading of $50\text{ mV} \pm 5\text{ mV}$ is obtained on the DC voltmeter.

Focus offset

Load test disc 5A (part no. 3634031)

Set the unit in service position 2 by short-circuiting the service plug on PCB5 and simultaneously connecting the player to mains. Remove the short-circuit on the service plug.

Press STEP> twice.

If '2' in the display keeps flashing, adjust 30R3146 until '2' is lit constantly.

Set the unit in service position 4 by pressing STEP> twice ('4' in the display must be lit and the disc rotate).

Connect a DC voltmeter across 30C2136.

Adjust 30R3146 until a reading of $400\text{ mV} \pm 40\text{ mV}$ is obtained.

Angle setting of laser arm


Before carrying out the adjustment, check the angle setting of the laser arm, see page 7.1.

If a check on the angle setting shows that the angle falls outside the tolerance, the angle should *not* be adjusted for minimum deviation but should be adjusted within the tolerance.

After adjusting the angle setting, check the friction of the laser arm. This is done by means of a spring pressure gauge which is held against the magnet of the focusing unit.

ADSKILLELSE

DISASSEMBLY

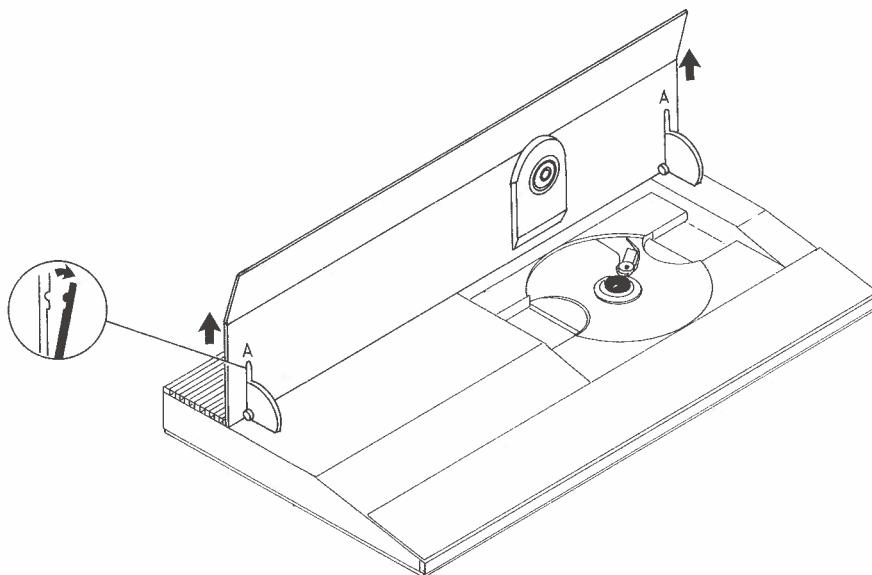


Låg

Lågholderne A i begge sider vippes udad.
Låget kan nu løftes op og fjernes.

Lid

Pull outwards the lid arms A in both sides.
The lid can now be removed by pulling it upwards.

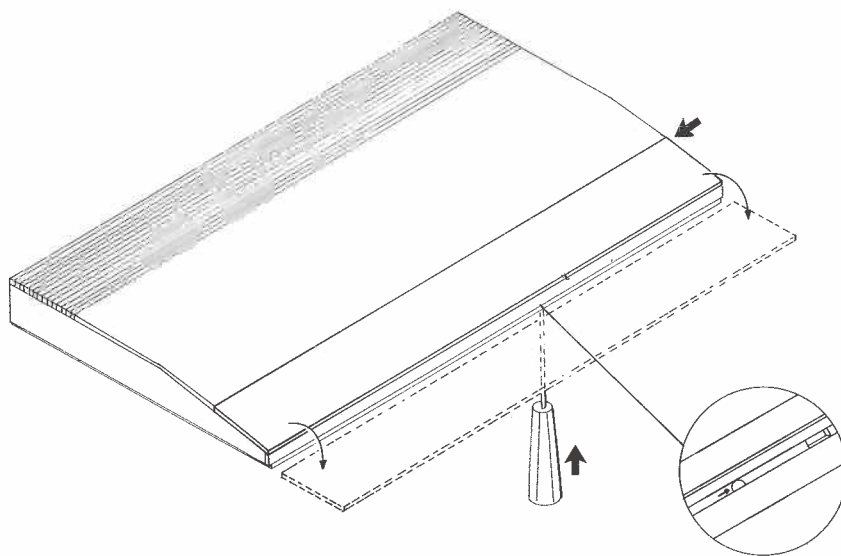


Betjeningspanel

En tynd genstand presses op i hullet mærket med
en pil i bunden.
Samtidig presses betjeningspanelet mod venstre.

Operation panel


Insert a thin object in the hole in the bottom
marked with an arrow.
At the same time, push the operation panel towards
the left.

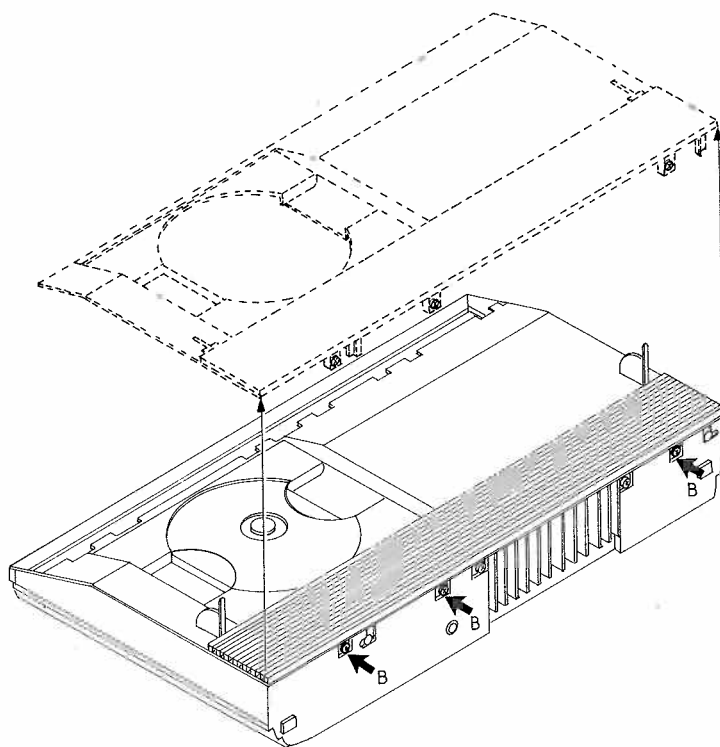**Topplade**

Skruerne B i bagkanten af toppanelet løsnes.
Toppladen kan nu løftes op og fjernes.

Top panel

Loosen the screws B in the rear side of the top panel.
The top panel can now be removed by lifting it.

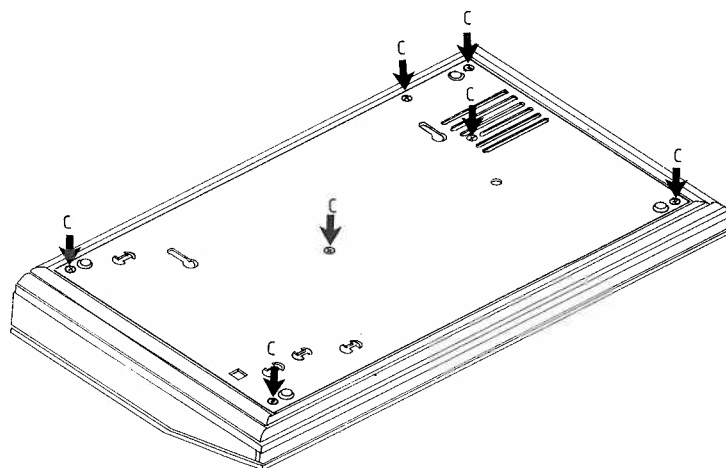**Bund**

Skruerne C i bunden fjernes.
Bunden kan nu aftages.

Bottom


Remove the screws C in the bottom.
The bottom can now be removed.

CD løbeværk

Pres de to plastikflige (D) ud, løft samtidig plastdækslet op i samme side.

CD Mechanism

Push the two plastic flaps (D) outwards, and lift the plastic cover on the same side simultaneously.

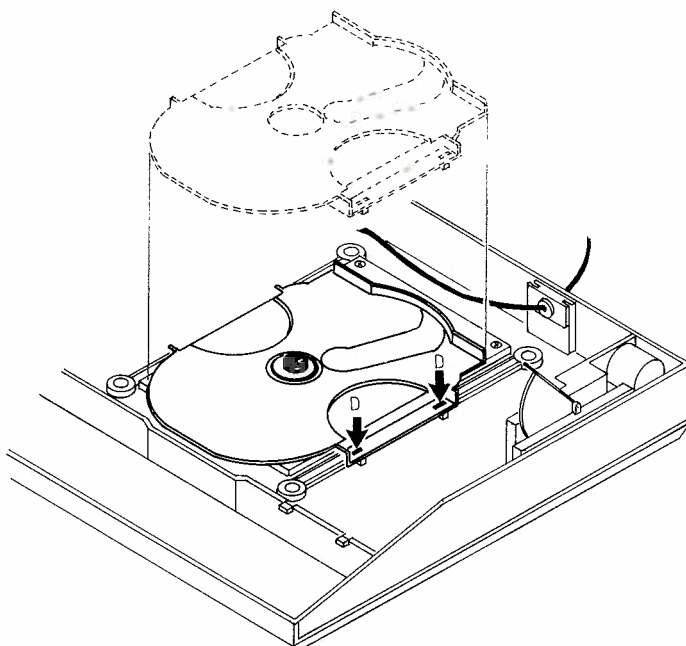

Fjern de fire skruer (E)


Flexprintet i stikket F løsnes.

CD løbeværket kan nu forsigtigt løftes op.

Remove the four screws (E).


Loosen the flexible PCB in the socket F.

The CD drive unit can now be lifted out carefully.

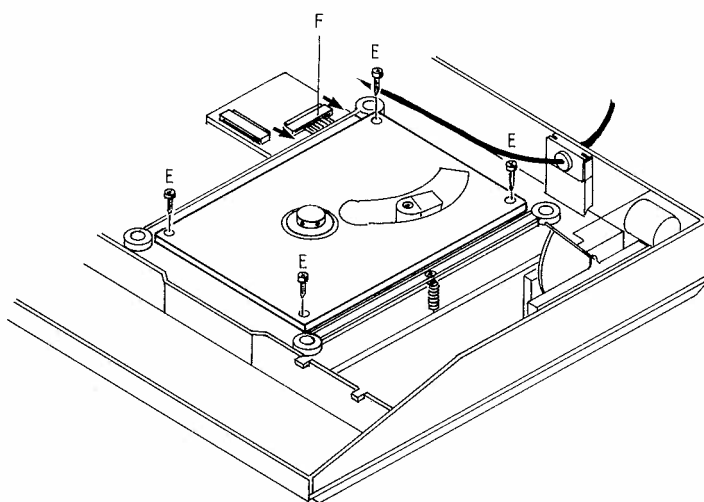

Serviceprogram

Kortslut servicestikket på PCB5, samtidig med at netstikket sættes i. Kortslutningen i servicestikket fjernes.

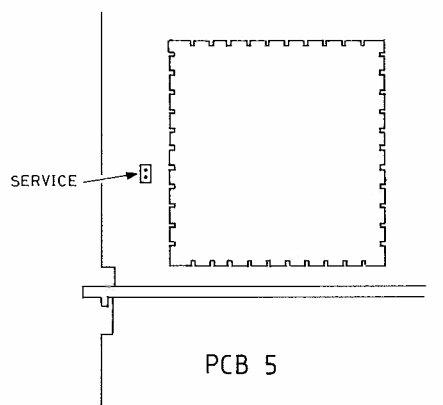


Tast STEP>	Display viser 1 (= serviceposition 1).	
Tast >>	Laserarm svinger ud.	<i>Hvis arm bliver stående:</i> Er fleks-PCB rigtigt placeret? Går radials pole imod? Er trægheden i armlejet for stor?
Tast <<	Laserarm svinger ind.	<i>Hvis arm bliver stående:</i> Er fleks-PCB rigtig placeret? Går radials pole imod? Er trægheden i armlejet for stor?
Ilæg CD-plade		
Tast STEP>	Display viser 2. Laser tænder og søger focus. Hvis display lyser 2 konstant: Focussøgning i orden.	<i>Hvis 2 i displayet blinker:</i> CD bliver ved med at søge i focus, indtil der tasteres STEP>. Tændes laser? Regulerer FE-udgangen til focus motoramplifier? Regulerer focusmotor?
Tast STEP>	Display viser 3. CD-motor starter rotation og laser placeres mod centrum.	<i>Hvis CD-plade ikke roterer:</i> Starter RD-udgangen turntable motoramplifier? Er MCES-pulsen tilstede?
Tast STEP>	Display viser 4. Radialsøgning startes. Hvis display viser 4 konstant. Radial søgning i orden.	<i>Hvis 4 i displayet blinker:</i> Regulerer RE-udgangen til radial motoramplifier? Subcode info er ignoreret. Musik kan høres, fordi MUSB er høj men er afhængig af lead-in sporets længde. Kan vare op til 1 min.

Tast >>	Display viser 4 konstant.	<i>Hvis 4 i displayet blinker.</i>
	Laserarm springer ud over spor.	Kontroller radialservo.
Tast <<	Display viser 4 konstant.	<i>Hvis 4 i displayet blinker.</i>
	Laserarm springer ind over spor.	Kontroller radialservo.

Serviceprogrammet kan gentages ved at taste STEP>. Displayet viser da kort efter service-position 1.
Serviceprogrammet afsluttes ved kortvarigt at fjerne netstikket.

Service program

Short-circuit the service plug on PCB5 and simultaneously connect the CD player to mains.
Remove the short-circuit on the service plug.

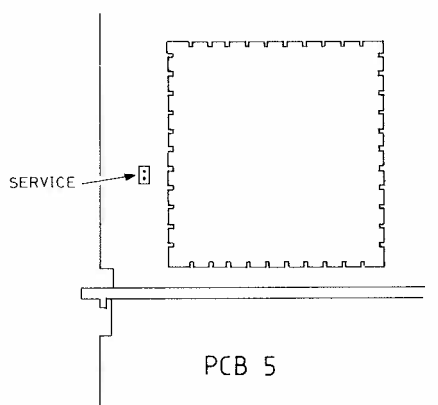

Press STEP>	Display indicates service position 1.	
Press >>	Laser arm swings out.	<i>If arm doesn't move:</i> Is flex-PCB placed correctly? Does radial coil touch anything? Is arm bearing inertia excessive?
Press <<	Laser arm swings in.	<i>If arm doesn't move:</i> Is flex-PCB placed correctly? Does radial coil touch anything? Is arm bearing inertia excessive?
Load compact disc		
Press STEP>	Display indicates 2. Laser switches on and searches for focus If display indicates 2 constantly. Focus search is OK.	<i>If 2 in the display flashes:</i> CD continues to search for focus until STEP> is pressed. Does laser switch on? Does FE output regulate the focus motor amplifier? Does focus motor regulate?

Bang & Olufsen

3538741

Indklæbes i serviceanvisning nr. 3538721/3538722, Beogram CD 4500 type 51XX.
To paste into Servicemanual no. 3538721/3538722, Beogram CD 4500 type 51XX.
In Serviceanleitung Nr. 3538721/3538722, Beogram CD 4500 Typ 51XX einkleben.
A coller le Manuel d'entretien No. 3538721/3538722, Beogram CD 4500 Type 51XX.

Beogram CD 3500

Type 5146-5147-5148-5149-5150



BEOGRAM CD 3500, TYPE 514X

See drawings on pages 4-1

List of Mechanical parts

9006	3114308	Chassis
9019	3162313	Cover
9027	3458710	Top Plate

CD-Mechanism Version II Beogram CD 4500

Indklæbes i Serviceanvisningen Beogram CD 4500 (3538721/3538722)
Paste into Service Manual Beogram CD 4500 (3538721/3538722)
In Serviceanleitung Beogram CD 4500 (3538721/3538722) einkleben
A coller le Manual d'entretien pour Beogram CD 4500 (3538721/3538722)

10-91 3538798




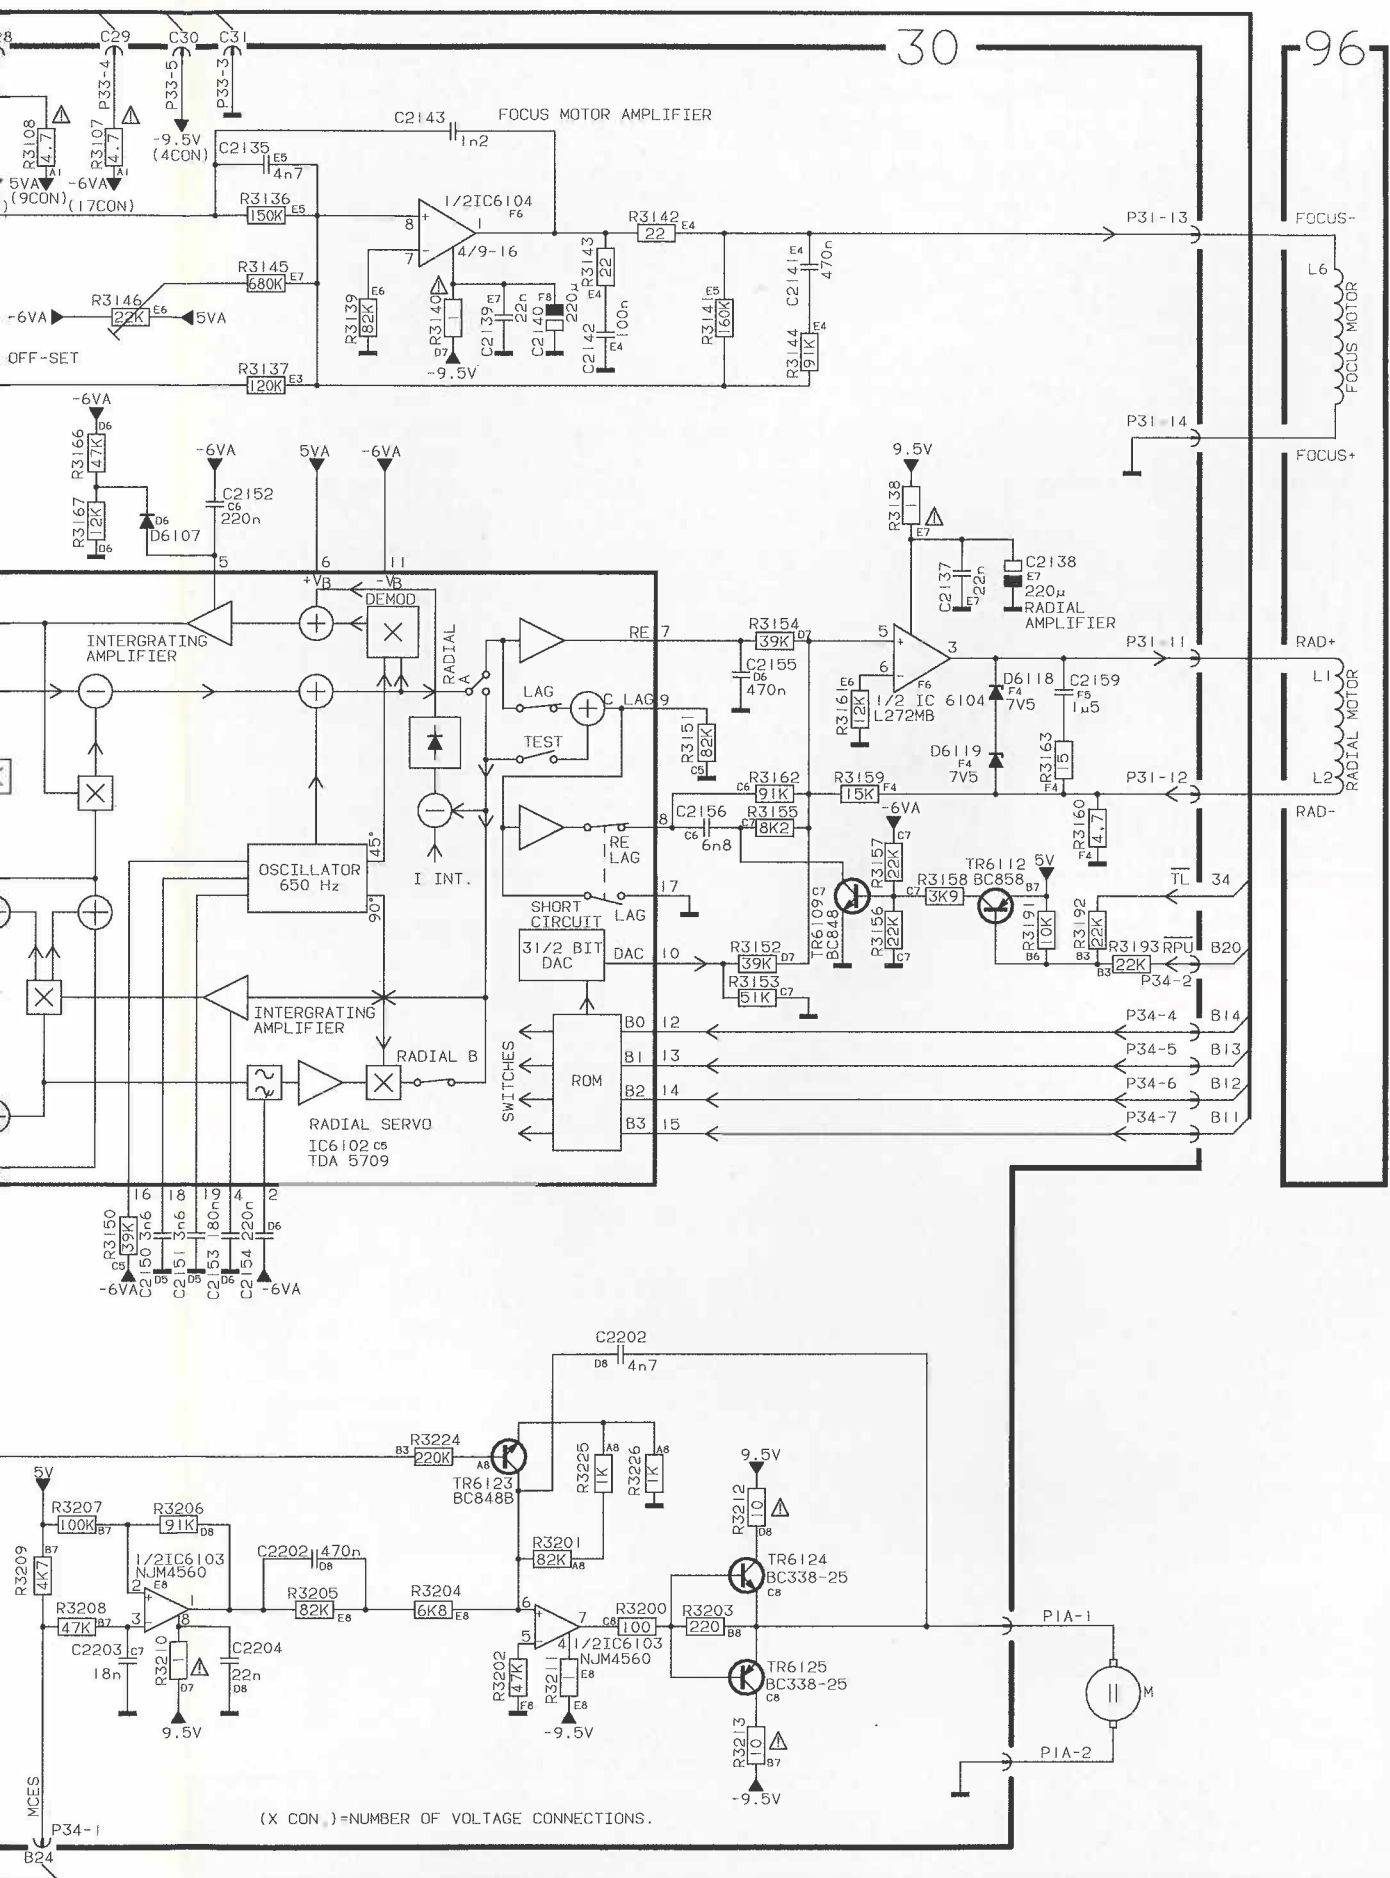


DIAGRAM A (Servo and Disc Motor System)

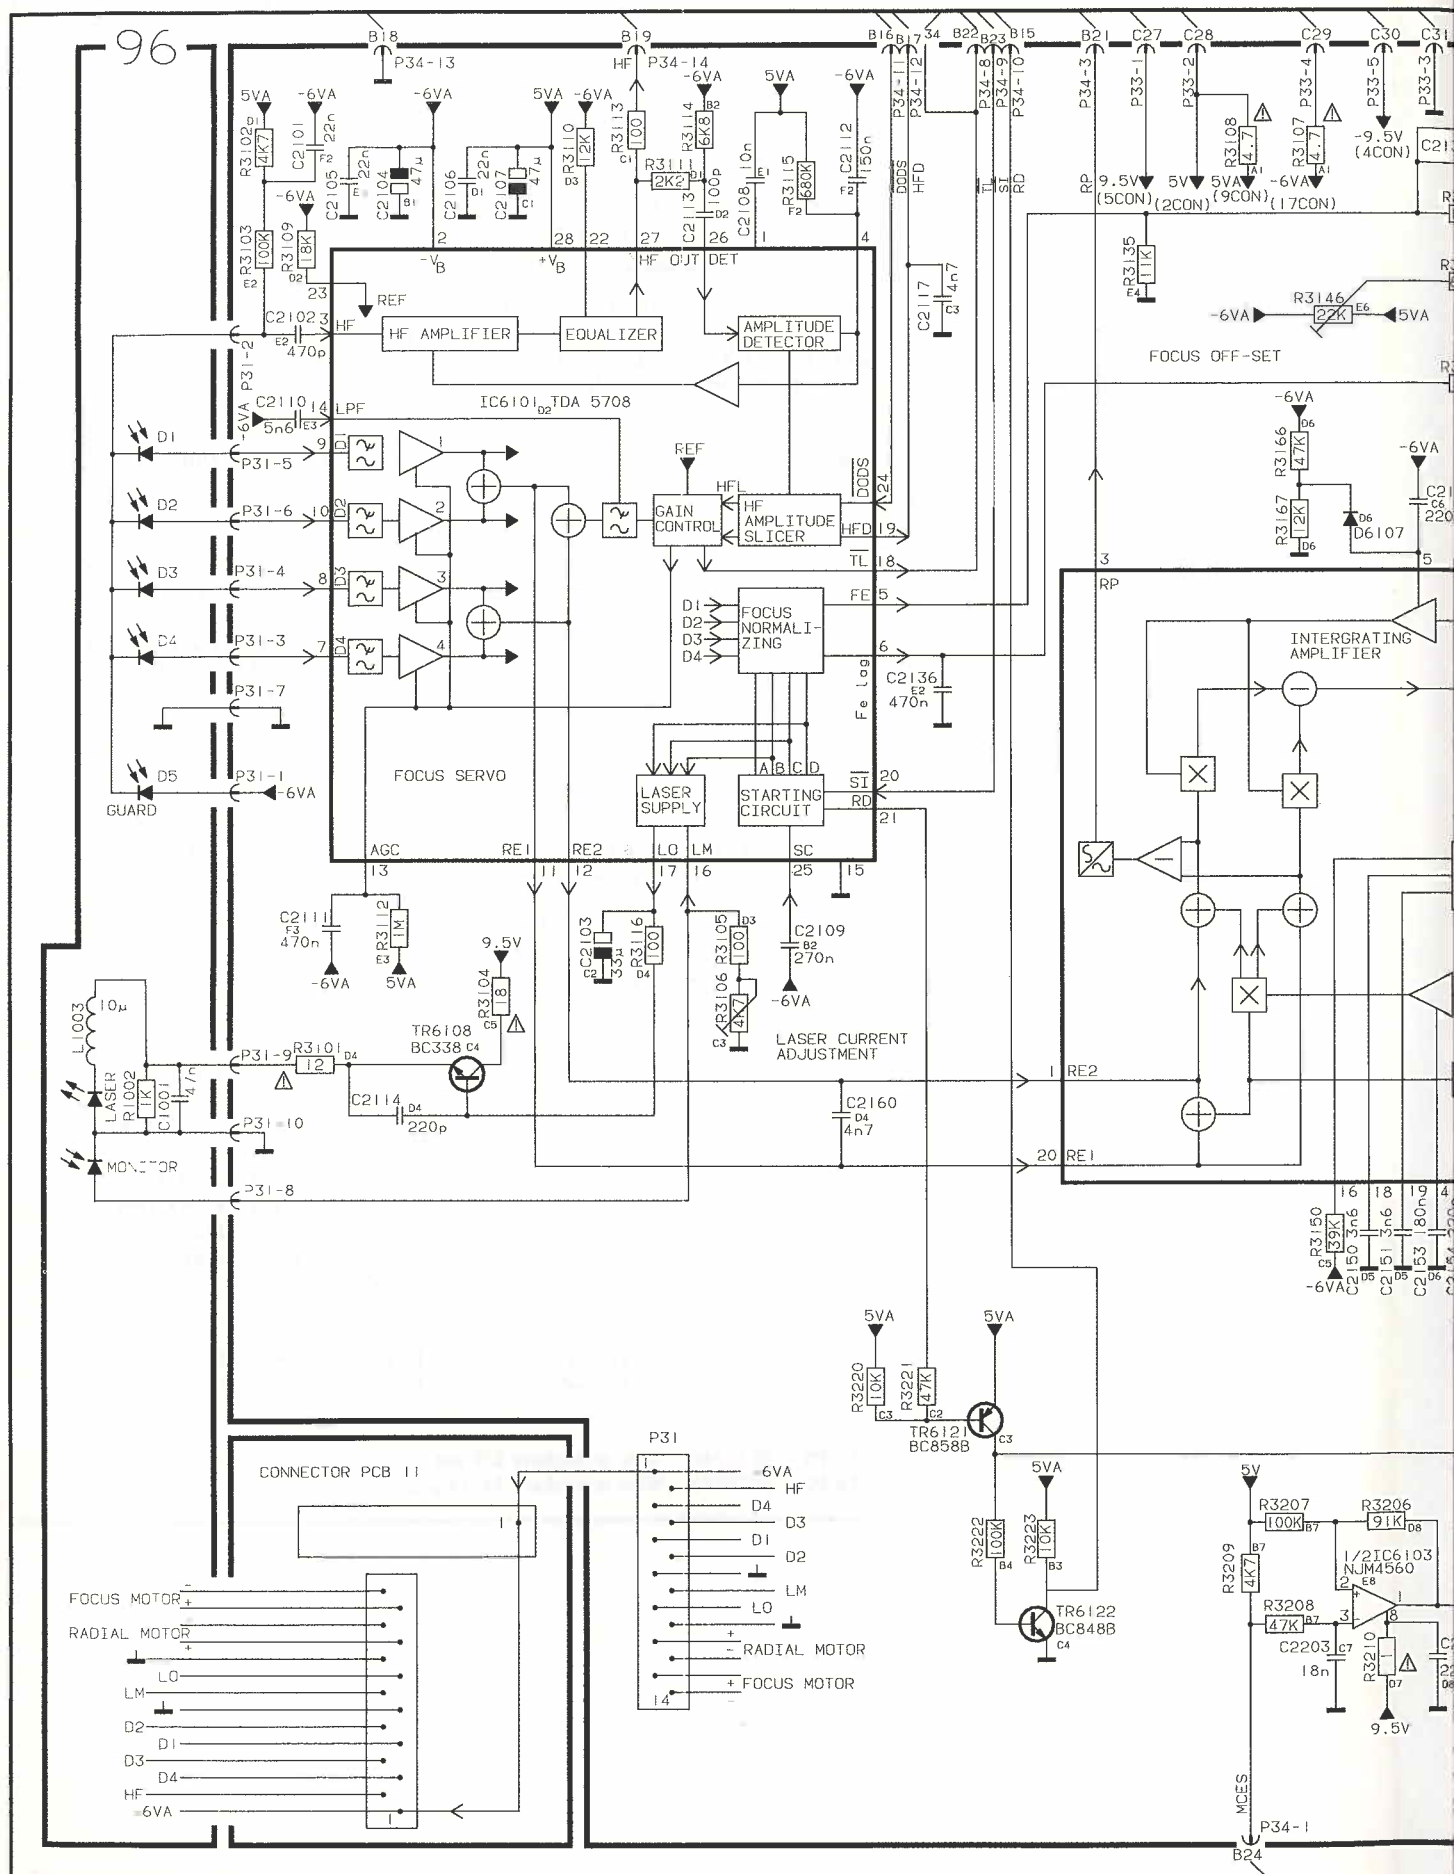

LIST OF ELECTRICAL PARTS

20	51	103	125	134	209		
							

Δ indicates that static electricity may destroy the component.

Resistors not referred to are standard, see page 3-2

PCB 30, 8005288
Servo

IC6101Δ 8340991	125	TDA 5708 C3	IC6103 8340993	103	NJM 4560D
IC6102Δ 8340992	134	TDA 5709	IC6104 8340683	103	L 272BH

TR6108 8320721	20	BC 338-16	TR6122- 8320615	51	BC 848B
TR6109 8320615	51	BC 848B	TR6123		
TR6112 8320616	51	BC 858B	TR6125 8320523	20	BC 328-25
TR6121 8320616	51	BC 858B			

D6107 8300058	209	1N 4148	D6118- 8300570	209	HZ 7C2 7V5
			D6119		


R3101 5020966	12Ω 5% 1/3W	R3146 5370327	22kΩ 20% 0.1W
R3104 5020967	18Ω 5% 1/3W	R3160 5020971	4.7Ω 1% 1/4W
R3106 5370324	4.7kΩ 20% 0.1W	R3207 5020263	100kΩ 1% 1/4W
R3107- 5020965	4.7Ω 2% 1/3W	R3208 5020969	47kΩ 1% 1/4W
R3108		R3210- 5020964	1.0Ω 2% 1/3W
R3138 5020964	1.0Ω 2% 1/3W	R3211	
R3140 5020964	1.0Ω 2% 1/3W	R3212- 5020489	10Ω 10% 0.30W
R3141 5011587	160kΩ 1% 1/8W	R3213	

C2101 4000255	22nF 10% 50V	C2139 4000255	22nF 10% 50V
C2102 4000249	470pF 5% 50V	C2140 4200745	220μ 16V
C2103 4200414	33μ -10+50% 16V	C2141 4130405	470nF 50V
C2104 4200482	47μ 20% 10V	C2142 4000256	100nF 10% 50V
C2105- 4000255	22nF 10% 50V	C2143 4100283	1.2nF 2% 250V
C2106		C2150- 4130424	3.6nF 1% 160V
C2107 4200482	47μ 20% 10V	C2151	
C2108 4000254	10nF 10% 50V	C2152 4130206	220nF 10% 100V
C2109 4130379	270nF 5% 63V	C2153 4130314	180nF 10% 63V
C2110 4000253	5.6nF 10% 50V	C2154 4130206	220nF 10% 100V
C2111 4130405	470nF 10% 50V	C2155 4130405	470nF 10% 50V
C2112 4130406	150nF 5% 50V	C2156 4130338	6.8nF 5% 100V
C2113 4000248	100pF 5% 50V	C2159 4200746	1.5μ 50V Bipolar
C2114 4000233	220pF 5% 50V	C2160 4010173	4.7nF 10% 50V
C2117 4010173	4.7nF 10% 50V	C2200 4010173	4.7nF 10% 50V
C2135 4130370	4.7nF 5%	C2202 4130405	470nF 10% 50V
C2136 4130405	470nF 10% 50V	C2203 4130221	18nF 5% 63V
C2137 4000255	22nF 10% 50V	C2204- 4000255	22nF 10% 50V
C2138 4200745	220μ 16V	C2205	

P31 7210614	Socket, 14 pol	P34 7220657	Plug, 14 pole
P33 7220652	Plug, 5 pole	P36 7220651	Plug, 4 pole

To P5 6275746	Wire w/sockets 5/5 pin
To P6 6275745	Wire w/sockets 14/14 pin

LIST OF MECHANICAL PARTS

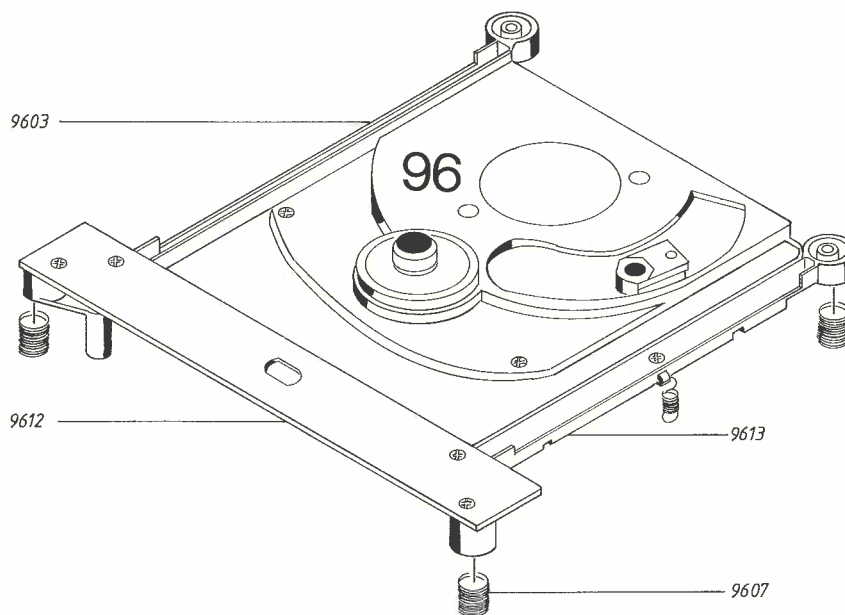

8420178 CD Mechanism with servo
 8420179 CD Mechanism without servo
 8005288 Servo PCB

9603 3152841 Holder, left
 9612 3342053 Weight load
 9613 3152840 Holder, right
 9607 2812140 Spring

6276561 Wire bundle