


ONKYO SERVICE MANUAL

SYNTHESIZED FM STEREO/AM TUNER MODEL T-404

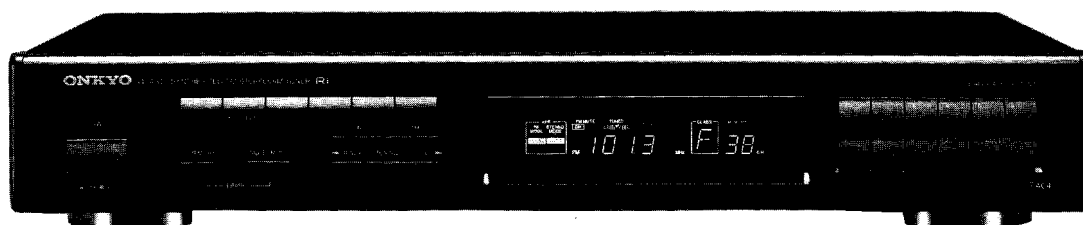

Black and Silver models

BHMDN, BHMD	120V AC, 60 Hz
BHMP, MP	230V AC, 50Hz
BHMW	120/220 V AC, 50/60Hz
BHMQA	240V AC, 50 Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

Specifications	2
Service procedures	2
Block diagram	3
Exploded view	4
Parts list	5
Block diagram of IC	6
Packing view	10
Adjustment procedures	11
Pc board view/parts list	13
Main circuit	13
Display/Operation switch	19
Schematic diagram	15
120V model	15
Other models	17

ONKYO
AUDIO COMPONENTS

SPECIFICATIONS

FM:		Total Harmonic Distortion: Mono: 0.1%	
Tuning Range:	87.9-107.9MHz(200kHz steps: U.S.A model) 87.5-108.0MHz(50kHz steps: European model) 87.9-107.9MHz(200kHz steps) or 87.5-108.0MHz(50kHz steps) (Worldwide model)	Stereo: 0.2%	
Usable Sensitivity:	Mono: 11.2dBf, 1.0 μ V IHF 0.9 μ V 75ohms DIN Stereo: 2.0 μ V 75ohms Mono: 11.2dBf, 2.0 μ V IHF (120V model) Stereo: 17.2dBf, 4.0 μ V (120V model)	Frequency Response: 30-15,000Hz $\pm$ 1.5dB Stereo Separation: 40dB at 1kHz 30dB at 70-10,000Hz Muting Level: 2.0 μ V, 75ohm 17.2dBf, 4.0 μ V Output Voltage: 500mV (120V model) 750mV (Other models)	
50dB Quieting Sensitivity:	Mono: 1.7 μ V 75ohms Stereo: 1.7 μ V 75ohms Mono: 16.1dBf, 3.5 μ V (120V model) Stereo: 36.1dBf, 35 μ V (120V model)	AM:	
Capture Ratio:	1.5dB	Tuning Range:	530-1710kHz(10kHz steps) (U.S.A. model) 522-1611kHz(9Hz steps) (European model) 530-1620kHz(10kHz steps) or 531-1602kHz(9kHz steps) (Worldwide model)
Image Rejection Ratio:	40dB (120V model) 80dB (Other models)	Usable Sensitivity:	25 μ V
IF Rejection Ratio:	90dB	Image Rejection Ratio:	40dB
Signal-to-Noise Ratio:	Mono: 73dB Stereo: 66dB	IF Rejection Ratio:	40dB
Alternate Channel		Signal-to-Noise Ratio:	40dB
Attenuation:	50dB IHF ($\pm$ 400kHz) (120V model)	Harmonic Distortion:	0.8%
Selectivity:	55dB DIN ($\pm$ 300kHz, 40kHz dev.) (Other models)	Output voltage:	150mV
AM suppression Ratio:	50dB	GENERAL:	
		Dimensions(W×H×D):	455 × 75.5 × 306mm 17-15/16" × 2-15/16" × 12-1/16"
		Weight:	3.4kg., 7.5 lbs.
		Specifications and features are subject to change without notice.	

SERVICE PROCEDURES

1. Safety-check out

(Only U.S.A. model)

After correcting the original service problem,perform the following safety check before releasing the set to the customer.

Connect the insulating-resistance tester between the plug of power supply cord and chassis.

Specifications: 3.3Mohm $\pm$ 10% at 500V.

2. Memory preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory,the power switch must be turned on and off a few times each month to keep the back-up system operative. The period of time during which memory contents are preserved after power has last been turned off varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of 3 to 4 weeks (a minimum of 2 weeks) after the last time power has been turned off. This period is shorter when the unit is exposed to very high humidity or used in an area with an extremely humid climate.

3. Voltage Selector (Back Panel)

W models are equipped with a voltage selector to conform with local power supplies. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on. This switch is set to 220V at the factory. Voltage is changed by sliding the groove in the switch with a screwdriver to the right or left. Confirm that the switch has been moved all the way to the right or left before turning the power switch on. Models without a voltage selector can only be used in areas where the power supply is the same as that of the unit.

4. Tuning Step Frequency Switch (Back Panel)

W models are equipped with a switch for the AM (9kHz/10kHz) and FM (50kHz/200kHz) bands. The switch should be set to the proper steps for the radio broadcast frequencies in your area.

5. Changing the band step


With the exception of the models below, a BAND STEP selector switch is not provided.

FM

MODEL	BAND STEP	J243
UD	200kHz $\rightarrow$ 50kHz	Open
UP/UQ	50kHz $\rightarrow$ 200kHz	Short


AM

MODEL	BAND STEP	J246
UD	10kHz $\rightarrow$ 9kHz	Short
UP/UQ	9kHz $\rightarrow$ 10kHz	Open

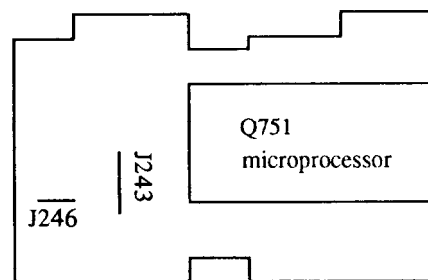


DISPLAY CIRCUIT PCB

BLOCK DIAGRAM

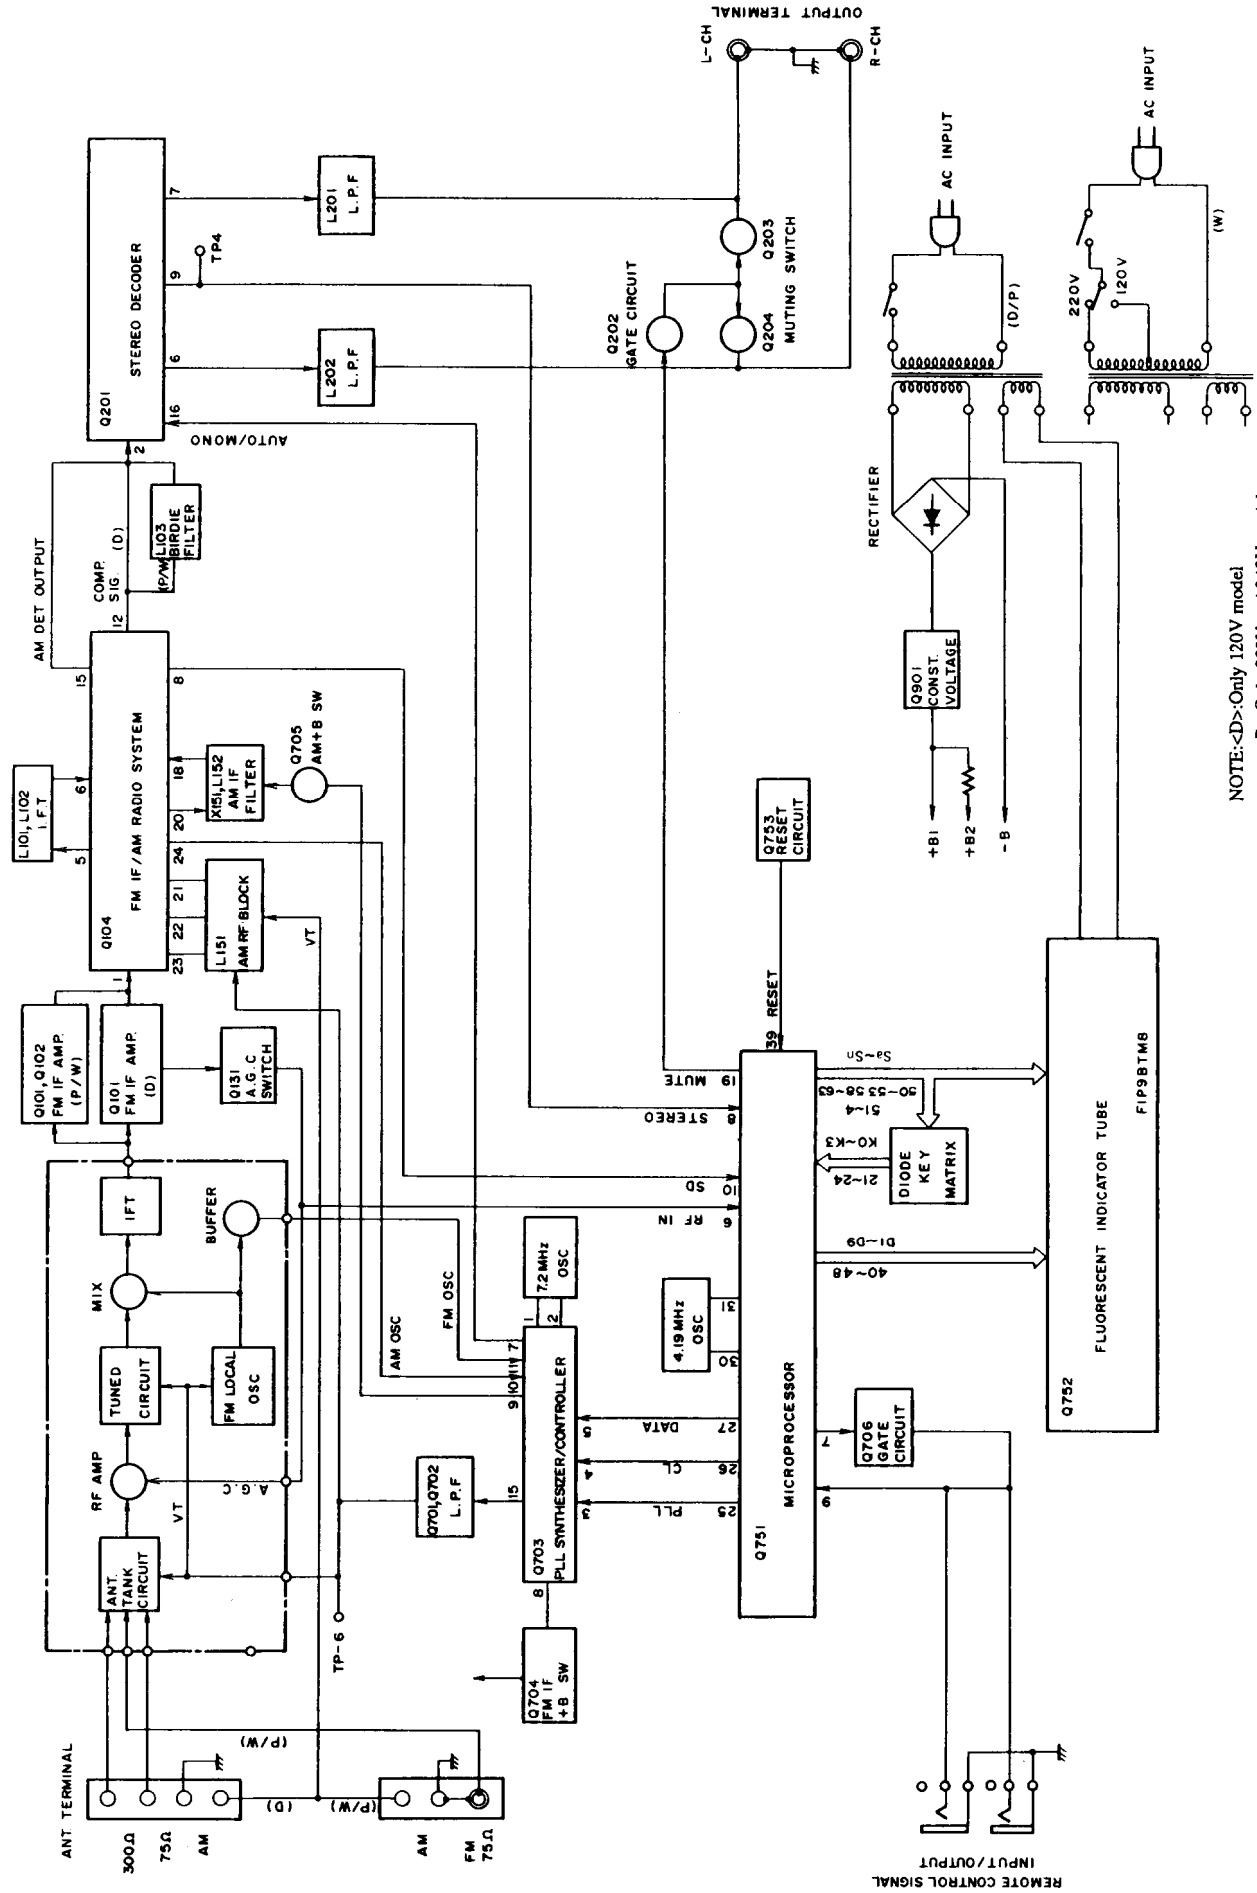

EXPLODED VIEW

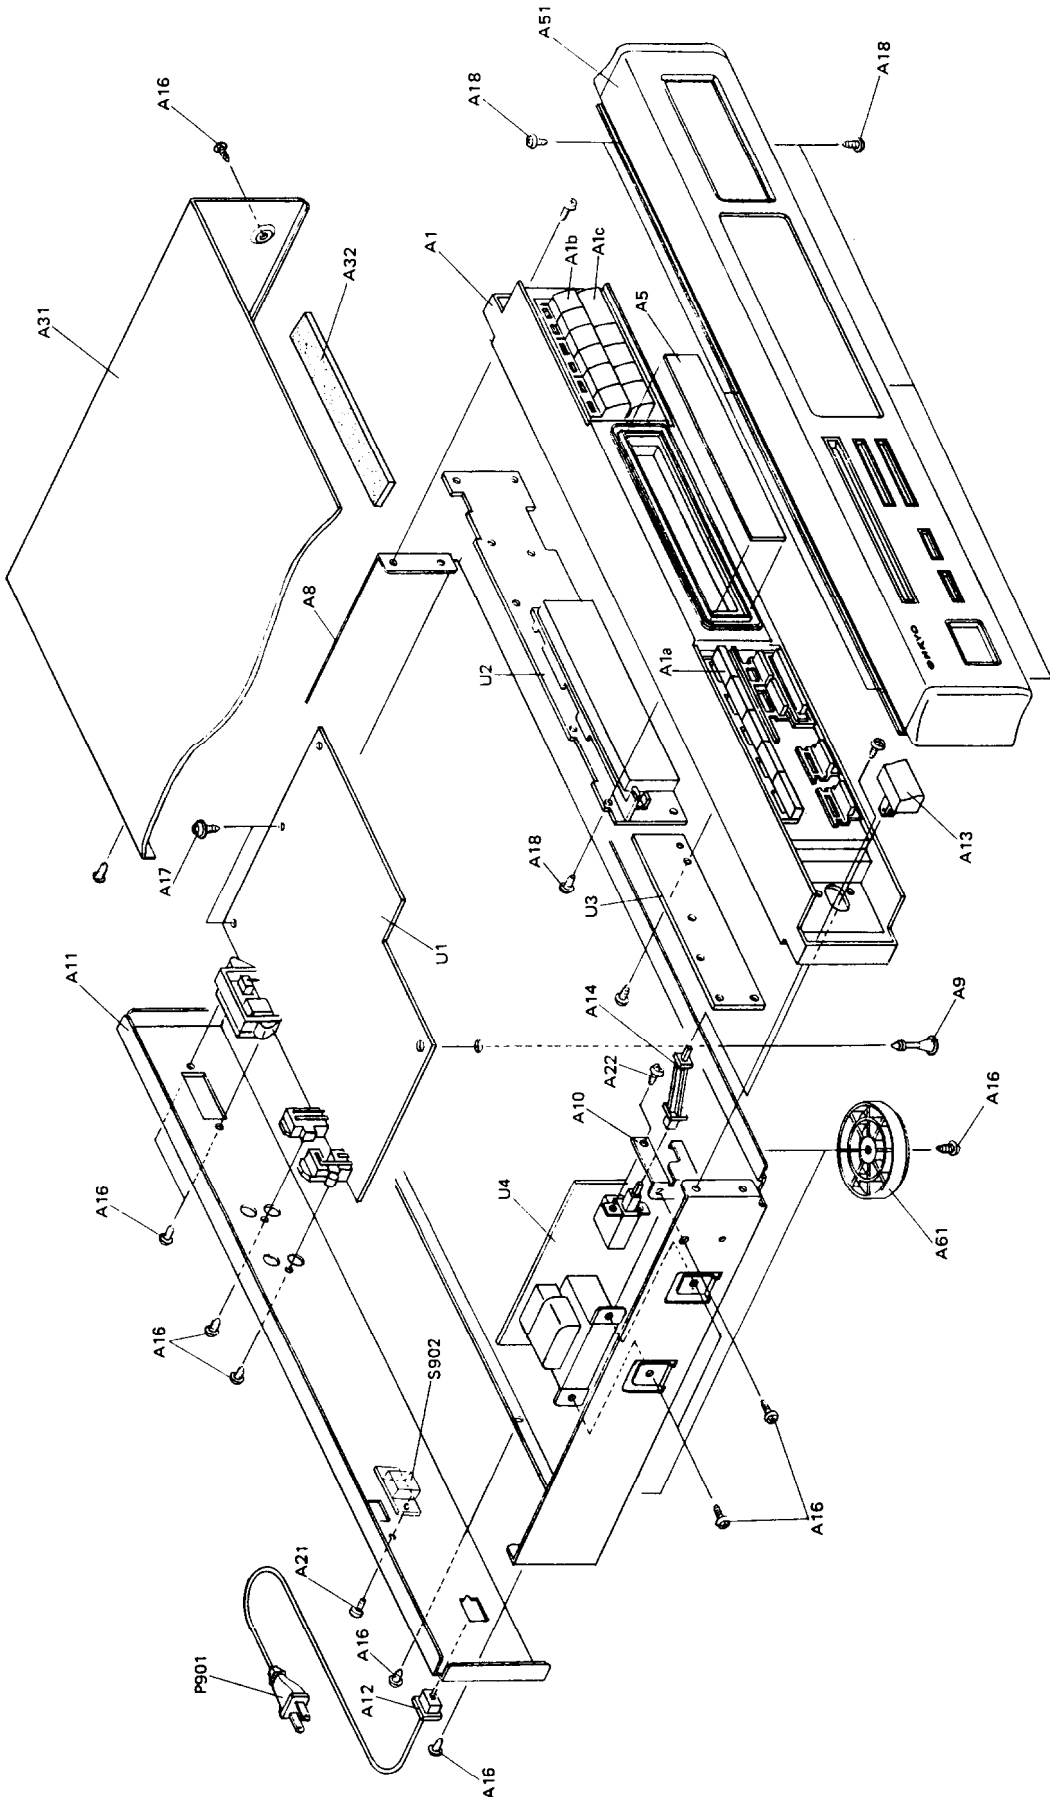

PARTS LIST

REF.NO.	PART NO.	DESCRIPTION	REF.NO.	PART NO.	DESCRIPTION
A1	27110686Y	Front bracket 	P901	253142A	△ AS-UC-7#18,Power supply cord <D/WX>
A1a	27110740AY	Front bracket <S>		253149	△ AS-CEE,Power supply cord <P/W>
A1b	28324517	Knob CL <S>		253170	△ AS-SAA,Power supply cord <Q>
A1c	28324519	Knob TU <S>	S902	25065123	△ NSS-1258P, Voltage selector switch <W>
A5	28325421	Knob TD <S>	U1	1A392540-2	NARF-4400-2,Main circuit pc board ass'y <D>
A8	28191579A	Clear plate		1A392540-2A	NARF-4400-2A,Main circuit pc board ass'y <P/Q>
A9	27190511	Chassis		1A392540-2B	NARF-4400-2B,Main circuit pc board ass'y <W>
A10	27141468	KGLS-16R,Holder	U2	1A392541-2	NADIS-4441-2,Display circuit pc board ass'y <D>
A11	27121554Y	Bracket,power		1A392541-2A	NADIS-4441-2A,Display circuit pc board ass'y <P/Q>
	27121641	Back panel <D>		1A392541-2B	NADIS-4441-2B,Display circuit pc board ass'y <W>
A12	27121641	Back panel <P>	U3	1A392542-2	NASW-4442-2,Operation switch pc board ass'y
A13	27121643	Back panel <W>	U4	1A392543-2	△ NAPS-4443-2,Power supply circuit pc board ass'y <D>
	27121660	Back panel <WX>		1A392543-2A	△ NAPS-4443-2A,Power supply circuit pc board ass'y <P>
	27121644	Back panel <Q>		1A392543-2B	△ NAPS-4443-2B,Power supply circuit pc board ass'y <W>
A12	27300750	△ Bushing		1A392543-2C	△ NAPS-4443-2C,Power supply circuit pc board ass'y <Q>
A13	28324140	Knob,power 			
	28324184	Knob,power <S>			
A14	27260294	Joint,power			
A16	834430088	3TTS+8B(BC),Self-tapping screw			
A17	831130088	3TTW+8B,Self-tapping screw			
A18	833430080	3TTP+8P(BC),Self-tapping screw			
A22	82143006	3P+6FN(BC),Pan head screw			
A23	834230108	3TTS+10B(Ni),Nickel screw			
A31	28184474	Top cover			
A32	28140837	0.9×250×10,Cushion			
A51	1A392701K	Front panel ass'y 			
	1A393701K	Front panel ass'y <S>			
	28125230AY	End cap L			
	28125231AY	End cap R			
A61	27175254	Leg			

NOTE: <D>:120V model only

<P>:230V model only

<W>:Worldwide model only

<Q>:240V model only

:Black model only


<S>:Silver model only

<WX>:PX model only


NOTE: THE COMPONENTS IDENTIFIED BY MARK △
ARE CRITICAL FOR RISK OF FIRE AND
ELECTRIC SHOCK. REPLACE ONLY WITH
PART NUMBER SPECIFIED.

BLOCK DIAGRAM OF IC


LA1266 (FM IF/AM radio system)

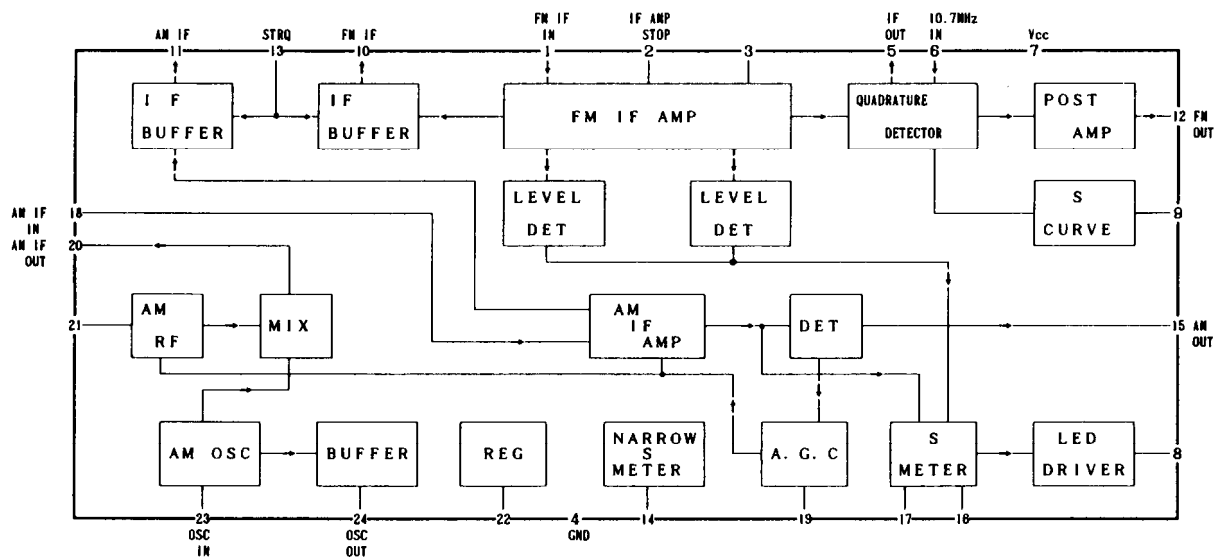

AN7470 (FM stereo decoder)

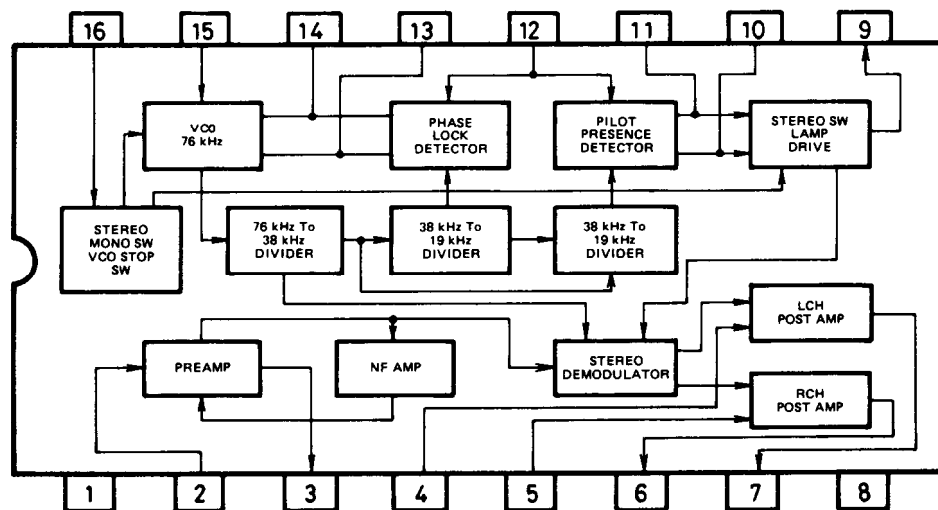

μPD75268CW-025 (Microprocessor)

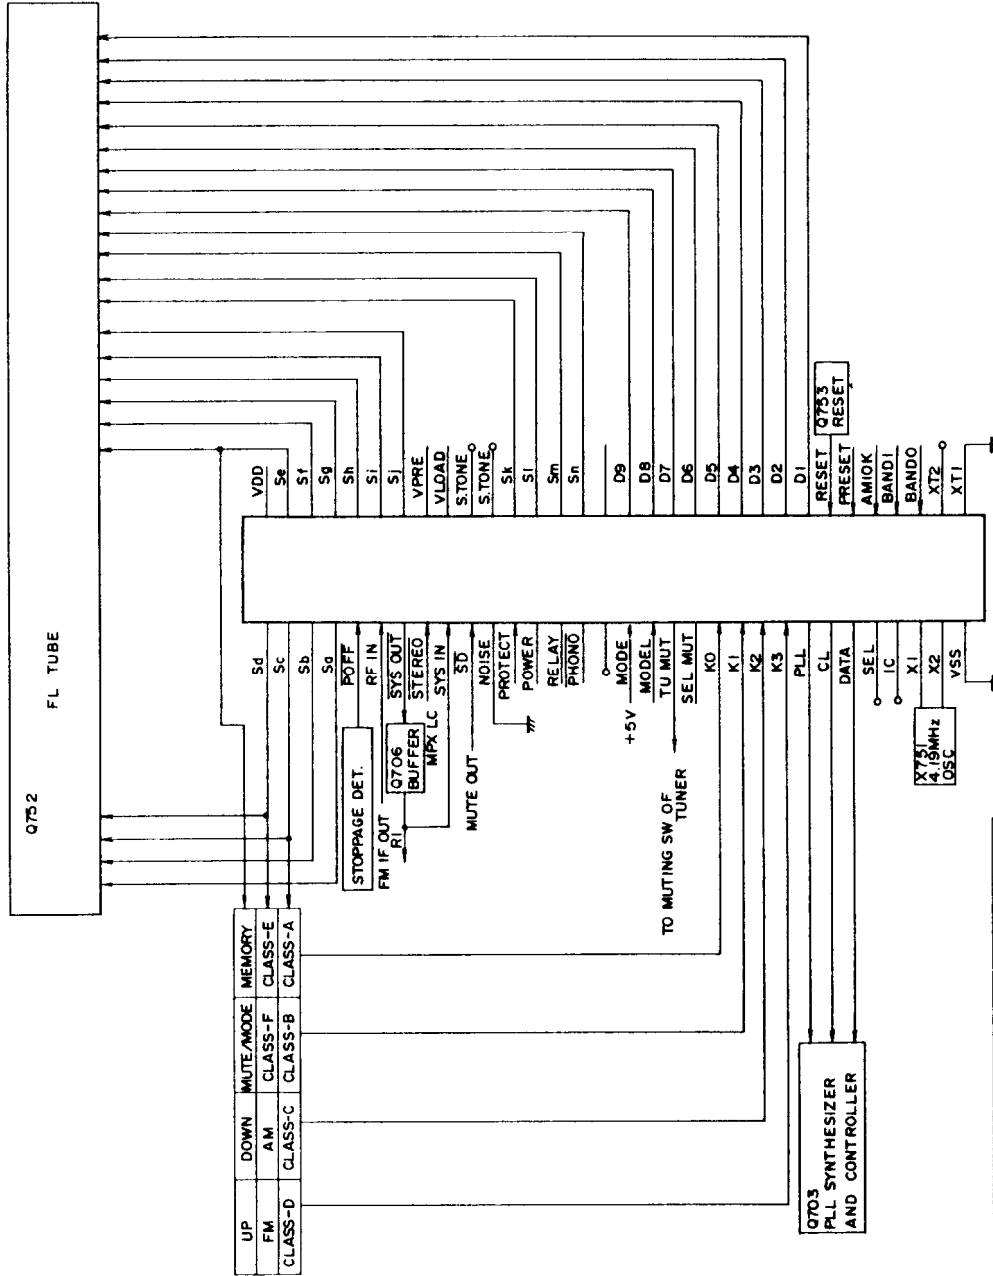

Terminal No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Electrode	F	F	NP	9G	NP	NP	NP	NP	NP	9G	NP	8G	NP	NP	8G	P(n)
Terminal No.	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	
Electrode	7G	7G	P(m)	6G	6G	P(l)	P(l)	5G	P(j)	P(j)	4G	P(l)	NP	4G	P(g)	G:Grid
Terminal No.	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	
Electrode	3G	P(j)	P(c)	3G	P(a)	2G	2G	P(b)	1G	P(c)	P(d)	1G	NP	F	F	P:Anode NP:No pin


BAND1	BAND0	REGION	BAND	FREQUENCY RANGE	CH. SPACE
0	0	U.S.A.	FM	87.50-108.00MHz	50kHz
			AM	530-1710kHz	10kHz
0	1	EUROPE 1	FM	87.50-108.00MHz	50kHz
			AM	522-1611kHz	9kHz
1	0	EUROPE 2	FM	87.50-108.00MHz	50kHz
			AM	531-1602kHz	9kHz
1	1	JAPAN	FM	76.0-90.0MHz	100kHz
			AM	522-1611kHz	9kHz

Terminal Descriptions

Pin No.	Symbol	Description						
1	Sd							
2	Sc	Segment and key scan output terminals.						
3	Sb	"H" when active.						
4	Sa							
5	POFF	This is the input terminal for detection of the stoppage of electric current. "L" when the stoppage of electric current.						
6	RF IN	RF mode input terminal. <table><tr><td>RF IN</td><td>RF MODE</td></tr><tr><td>L</td><td>LOCAL</td></tr><tr><td>H</td><td>DX</td></tr></table>	RF IN	RF MODE	L	LOCAL	H	DX
RF IN	RF MODE							
L	LOCAL							
H	DX							
7	SYS OUT/ SYSEN	System code output terminal. "L" when active.						
8	STEREO	Initializing input terminal when the power turns on.						
9	SYS IN	Stereo broadcast detection input terminal.						
10	SD	"L" when stereo broadcast.						
11	NOISE	System code input terminal. "H" when active.						
12	PROTECT	Broadcast detection input terminal. "L" when active.						
13	POWER	Control the stop of auto tuning and output TU MUT(#19).						
14	RELAY	Noise detection input terminal. Not used.						
15	PHONO	Protection circuit operation detection input terminal. Not used.						
16		Power control output terminal. Not used.						
17	MODE	Speaker relay control output terminal. Not used.						
18	MODEL	Phono control output terminal. Not used.						
19	TU MUT	Not used.						
20	SEL MUT	Initializing input terminal for operation mode setting.						
21	K0	Initializing input terminal for model setting of receiver.						
22	K1	Muting output terminal. "H" when active.						
23	K2	Audio muting output terminal. Not used.						
24	K3	Key scan input terminals.						
25	PLL	"H" when active.						
26	CL	Connect to the terminal CE of PLL IC(LM7001 Q703).						
27	DATA	Connect to the terminal CL of PLL IC(LM7001 Q703).						
28	SEL	Connect to the terminal DATA of PLL IC(LM7001 Q703).						
		Not used.						


Pin No.	Function	Description
29	IC	Internal connected.
30	X1	Ceramic oscillator connection terminal for main system clock.
31	X2	Connect to the 4.19MHz ceramic oscillator.
32	VSS	Ground terminal.
33	XT1	Ceramic oscillator connection terminal for sub system clock.
34	XT2	Not used.
35	BAND0	Initializing input terminal for region setting of FM band.
36	BAND1	
37	AM 10K	Initializing input terminal for region setting of AM band.
38	PRESET	Initializing input terminal for operation mode setting.
39	RESET	Reset input terminal. "L" when active.
40	D1	
41	D2	
42	D3	
43	D4	
44	D5	Digit output terminals. "H" when active.
45	D6	
46	D7	
47	D8	
48	D9	
49		Not used.
50	Sn	
51	Sm	Segment output terminals. "H" when active.
52	Sj	
53	Sk	
54	S.TONE	SELECTIVE TONE indication output terminal. Not used.
55	S.TONE	SELECTIVE TONE control output terminal. Not used.
56	VLOAD	Pull-down resistor connection terminal of FIP controller/driver.
57	VPRE	Power supply terminal of output buffer of FIP controller/driver.
58	Sj	
59	Si	
60	Sh	Segment and key scan output terminals.
61	Sg	"H" when active.
62	Sf	
63	Se	
64	VDD	Power supply terminal. (+5V)

LM7001 (PLL frequency synthesizer)

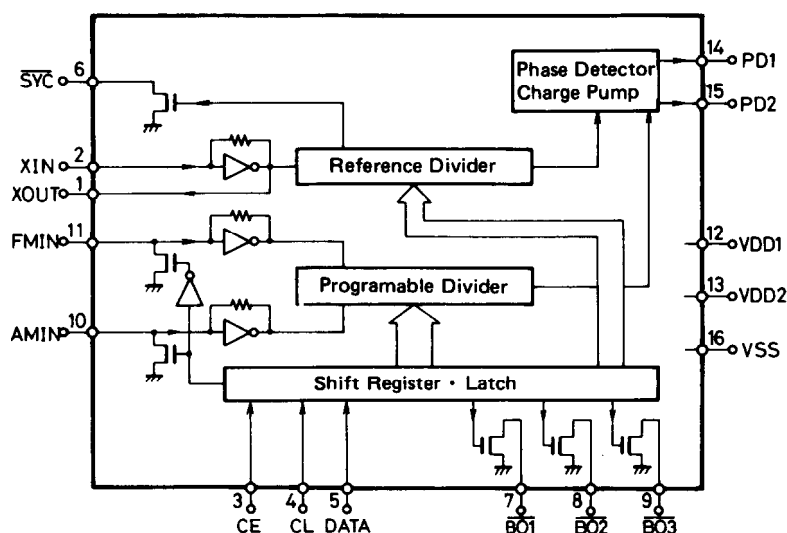

Pin No.	Terminal	Description									
1	XOUT	Connect to the 7.2 MHz crystal oscillator.									
2	XIN										
3	CE	Chip enable terminal. Connect to the PLL terminal of microprocessor μ PD75268CW-025.									
4	CL	Serial clock input terminal. Connect to the CLOCK terminal of microprocessor μ PD75268CW-025.									
5	DATA	Serial data input terminal. Connect to the DATA terminal of microprocessor μ PD75268CW-025.									
6	SYN	Not used.									
8	BAND1	Band selector output terminal.									
9	BAND2										
		<table border="1"> <thead> <tr> <th>BAND</th><th>BAND 1</th><th>BAND 2</th></tr> </thead> <tbody> <tr> <td>FM</td><td>L</td><td>H</td></tr> <tr> <td>AM</td><td>H</td><td>L</td></tr> </tbody> </table>	BAND	BAND 1	BAND 2	FM	L	H	AM	H	L
BAND	BAND 1	BAND 2									
FM	L	H									
AM	H	L									
7	BO1	This is the output terminal for AUTO/MONO. 'L' when AUTO.									
10	AMIN	AM local oscillator input terminal.									
11	FMIN	FM local oscillator input terminal.									
12	VDD 1	Power supply terminal for back-up.									
13	VDD 2	Power supply terminal.									
14	PD1	Charge pump output of the phase detector which constitutes the PLL. High level is output when the divided local oscillator frequency is high than the reference frequency. In the opposite case, low level is output. Floating occurs when the frequencies matched. The output is applied to the variable capacitor diode in the local oscillator through the low pass filters.									
15	PD2										
16	Vss	Ground terminal.									

PACKING VIEW

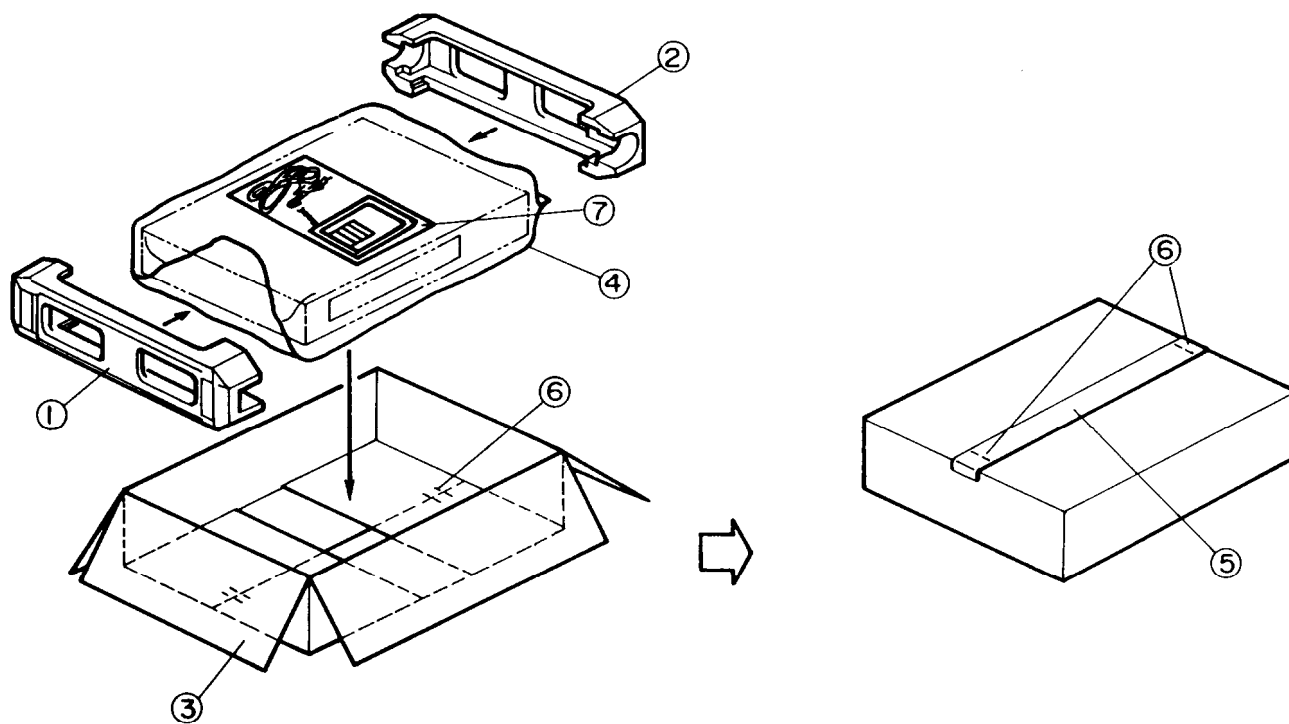

REF.NO.	PART NO.	DESCRIPTION
1	29091454	Pad L
2	29091455	Pad R
3	29052354BY	Master carton box <D>
	29052475	Master carton box <P/W/Q/C>
	29052495	Master carton box <WX>
	29052475	Master carton box <S>
4	29100034A	650×850mm, Styrene bag
5	29110071	Damplon tape
	261504	Adhesive tape
6	282301	Sealing hook
7	Accessory bag ass'y	
	29341708Y	Instruction manual <N>
	29341709Y	Instruction manual <P/W/Q/C>
	292111	FM antenna <D>
	292112	FM antenna <P/W/Q>
	232140	NMA-3057, AM loop antenna
	2010098A	Connection cord
	2010200	Remote control cord
	29365019AY	Warranty card <N>
	29365024A	Warranty card <F>
	29365021	Warranty card <WX>
	29100097	350×250mm, Styrene bag
	29100107	Styrene bag for warranty card <F>
	29358002J	Service station list <N/WX>
	25065462	YAE21-0237, FM antenna adaptor <W/F/Q>
	25055018	CV-K-1, Conversion plug <W>
	25055251	CV-CP, Conversion plug <WX>

NOTE: <D>:120V model only
 <P>:230V model only
 <W>:Worldwide model only
 <Q>:240V model only
 <N>:U.S.A. model only
 <F>:French model only
 <C>:Canadian model only
 :Black model only
 <S>:Silver model only
 <WX>:PX model only

ADJUSTMENT PROCEDURES

Preparation

• Input

FM mono: 1kHz, 75kHz devi., 60dB/μV (65dBf)
 FM stereo: 1kHz, L+R 67.5kHz devi.: Pilot signal 19kHz
 7.5kHz devi.
 AM: 400Hz, 30% mod.,

Reference specifications

Tuned voltage	AM	530kHz(522kHz)	1.3±0.4V
		1710kHz(1611kHz)	7.6±0.5V (7.0±0.5V)
	FM	87.5MHz(87.9MHz)	1.6±0.5V
		108MHz(107.9MHz)	8.0±0.5V
Muting width			35±10kHz
Auto stop level	AM		Less than 68dB/m
	FM		Less than 18dBμ (Less than 20dBμ)

() : European model







FM Section

Item	Step	Connection of instrument	FM SG output	Stereo modulator output	Tuned frequency	Output indicator	Adjustment point	Adjust	Remarks
Front end		Fig. 1	99.1MHz, 1kHz 75kHz devi. 25.2dBf (20dBμ)	—	99.1MHz	AC voltmeter	IF core on front end	Maximum	
FM IF	1	Fig. 2	99.1 MHz, 1 kHz 75 kHz devi. 65 dBf (60 dB μ)	—	99.1 MHz	DC voltmeter	L101	0 ± 20 mV	MUTE/MODE switch to OFF/MONO. Repeat the steps 1 and 2 until no further adjustment is necessary.
	2					Distortion analyzer	L102	Minimum	
Muting Level	1	Fig. 2	99.1MHz, 1kHz 75kHz devi. 19.2dBf (14dBμ) (120V model) 16dBf (other model)	—	99.1 MHz	Oscilloscope	R101	Signal	
	2							No signal	
VCO		Fig. 3	99.1 MHz, 1 kHz 75 kHz devi. 65 dBf (60 dB μ)	—	99.1 MHz	Frequency counter	R201	19,000 ± 10 Hz	MUTE/MODE switch to ON/STEREO
Stereo Distortion		Fig. 4	99.1 MHz, Ext. modulation 65 dBf (60 dB μ)	L + R 1 kHz, 67.5 kHz devi. Pilot signal 7.5 kHz devi.	99.1 MHz	Distortion analyzer	IF core on front end	Minimum	Don't turn more than 180°.

AM Section

Step	AM SG output	Tuned frequency	Output indicator	Adjust point	Adjust for
1		522 kHz (530 kHz)	Digital DC voltmeter	L151 OSC	1.3 ± 0.1V
2	603 kHz, 400 Hz 30% mod. 60 dB/m (600 kHz)	603 kHz (600 kHz)	AC voltmeter	L151 RF	Maximum
3	999 kHz, 400 Hz 30% mod. 60 dB/m (1000 kHz)	999 kHz (1000 kHz)	AC voltmeter	L152	Maximum

() : 10 kHz step model

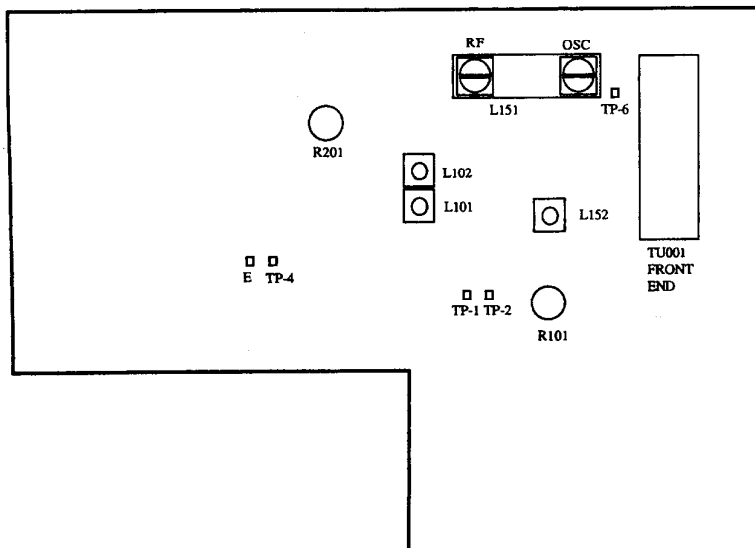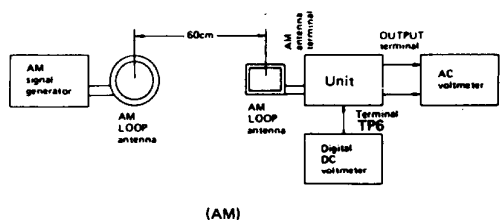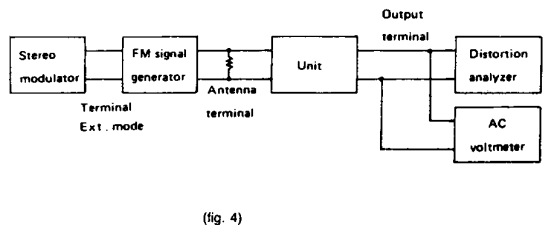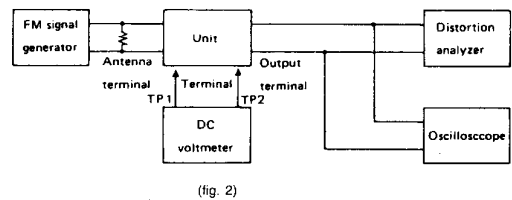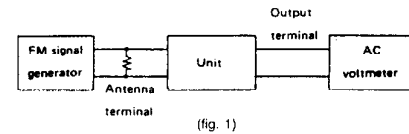


PRINTED CIRCUIT BOARD-PARTS LIST


MAIN CIRCUIT PC BOARD(NARF-4400-2/2A/2B)

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
ICs			Capacitors		
Q104	22240039	LA1266	C157,C158	354761009	10 μ F,35V,Elect.
Q201	22240242	AN7470	C159	374723334	0.033 μ F $\pm$ 5%,50V,Plastic
Q703	22240090	LM7001	C160	374722234	0.022 μ F $\pm$ 5%,50V,Plastic
Q901	222780125NEC	78M12HF	C201	374724734	0.047 μ F $\pm$ 5%,50V,Plastic
Transistors			C202	354742209	22 μ F,16V,Elect.
Q101	2211723	2SC1923-O	C203	354744719	470 μ F,16V,Elect.
Q102	2210746	2SC945A-P <P/W/Q>	C205,C206	374721824	1800pF $\pm$ 5%,50V,Plastic <D>
Q131,Q701	2211255 or	2SC1815-GR or		374721224	1200pF $\pm$ 5%,50V,Plastic <P/Q>
	2213284	2SC1740S-R		374721524	1500pF $\pm$ 5%,50V,Plastic <W>
Q202	2211455 or	2SA1015-GR or	C208,C209	354761009	10 μ F,35V,Elect.
	2213354	2SA933S-R	C210	370134714	470pF $\pm$ 5%,100V,Plastic
Q203,Q204	2212794	2SD1468-R	C211	354780109	1 μ F,50V,Elect.
Q702	2212445	2SK365-GR	C212	354780339	3.3 μ F,50V,Elect.
Q704,Q705	2213090	DTA114YS	C213	354782299	0.22 μ F,50V,Elect.
Q706	2212600	DTA124ES	C215,C216	354742209	22 μ F,16V,Elect.
Diodes			C217	354781099	0.1 μ F,50V,Elect.
D131,D132	223132	1K60	C701	354782299	0.22 μ F,50V,Elect.
D201,D202	223163 or	1SS133 or	C702	354780229	2.2 μ F,50V,Elect.
D701-D703	223205	1SS270A	C703,C704	374721034	0.01 μ F $\pm$ 5%,50V,Plastic
D704	224450562	MTZ5.6B	C706	354722219	220 μ F,6.3V,Elect.
D901-D905	22380032	1SR139-100	C903	354762219	220 μ F,35V,Elect.
D906	224452704	MTZ27D	C904,C908	354764709	47 μ F,35V,Elect.
D907	224450623	MTZ6.2C	C905	354761029	1000 μ F,35V,Elect.
D908	224451503	MTZ15C	C906	354772219	220 μ F,63V,Elect.
D909	224450562	MTZ5.6B	C909-C911	354761009	10 μ F,35V,Elect.
Coils & Transformers			Resistors		
L101	233401	NMIF-4072	R101	5210070 or	N06HR100KBD or
L102	233402	NMIF-4073		5210221	N06HR100KBD,Semi-fixed
L103	233383	NMC-6070 <P/W/Q>	R201	5210062 or	N06HR4.7KBD or
L151	232148	NMRF-7050		5210216	N06HR5KBD,Semi-fixed
L152	232139	NMIF-4062	R902	441629114	910ohm,1W,Metal oxide film
L202,L203	233355A	NMC-4059	R904	442521214	120ohm,1/2W,Metal oxide film
Front end			Terminals		
U001	240088	FE337-A07 <D>	P101	25060157	NTM-4PDML083 <D>
	240089	FE415-G11 <P/W/Q>		25060117	NTM-2PDML051 <P/W/Q>
Ceramic filters			P102	25045307	NPJ-2PDBL166 <D>
X101,X103	3010071	SFE10.7MA5 <D>		25045333	NPJ-2PDBL185 <P/W/Q>
X101-X103	3010137	SFE10.7MMK <P/W/Q>	P103	25045330	NPJ-2PDBL184
X151	3010123	SFZ-450JL	Switch		
X152	3010076	BFU-450C	S710	25065286	NSS-22122,Band <W>
X'tal					
X701	3010141	XTL-7.2M			
Capacitors					
C001	354741019	100 μ F,16V,Elect.			
C106,C132	354742209	22 μ F,16V,Elect.			
C108	354780109	1 μ F,50V,Elect.			
C112	354780339	3.3 μ F,50V,Elect.			
C131	354784799	0.47 μ F,50V,Elect.			
C153	354741019	100 μ F,16V,Elect.			
C156	354780479	4.7 μ F,50V,Elect.			


1
 2
 3
 4
 5
 6
 7
 8
 9
 10
 11
 12
 13
 14
 15
 16
 17
 18
 19
 20
 21
 22
 23
 24
 25
 26
 27
 28
 29
 30
 31
 32
 33
 34
 35
 36
 37
 38
 39
 40
 41
 42
 43
 44
 45
 46
 47
 48
 49
 50
 51
 52
 53
 54
 55
 56
 57
 58
 59
 60
 61
 62
 63
 64
 65
 66
 67
 68
 69
 70
 71
 72
 73
 74
 75
 76
 77
 78
 79
 80
 81
 82
 83
 84
 85
 86
 87
 88
 89
 90
 91
 92
 93
 94
 95
 96
 97
 98
 99
 100
 101
 102
 103
 104
 105
 106
 107
 108
 109
 110
 111
 112
 113
 114
 115
 116
 117
 118
 119
 120
 121
 122
 123
 124
 125
 126
 127
 128
 129
 130
 131
 132
 133
 134
 135
 136
 137
 138
 139
 140
 141
 142
 143
 144
 145
 146
 147
 148
 149
 150
 151
 152
 153
 154
 155
 156
 157
 158
 159
 160
 161
 162
 163
 164
 165
 166
 167
 168
 169
 170
 171
 172
 173
 174
 175
 176
 177
 178
 179
 180
 181
 182
 183
 184
 185
 186
 187
 188
 189
 190
 191
 192
 193
 194
 195
 196
 197
 198
 199
 200
 201
 202
 203
 204
 205
 206
 207
 208
 209
 210
 211
 212
 213
 214
 215
 216
 217
 218
 219
 220
 221
 222
 223
 224
 225
 226
 227
 228
 229
 230
 231
 232
 233
 234
 235
 236
 237
 238
 239
 240
 241
 242
 243
 244
 245
 246
 247
 248
 249
 250
 251
 252
 253
 254
 255
 256
 257
 258
 259
 260
 261
 262
 263
 264
 265
 266
 267
 268
 269
 270
 271
 272
 273
 274
 275
 276
 277
 278
 279
 280
 281
 282
 283
 284
 285
 286
 287
 288
 289
 290
 291
 292
 293
 294
 295
 296
 297
 298
 299
 300
 301
 302
 303
 304
 305
 306
 307
 308
 309
 310
 311
 312
 313
 314
 315
 316
 317
 318
 319
 320
 321
 322
 323
 324
 325
 326
 327
 328
 329
 330
 331
 332
 333
 334
 335
 336
 337
 338
 339
 340
 341
 342
 343
 344
 345
 346
 347
 348
 349
 350
 351
 352
 353
 354
 355
 356
 357
 358
 359
 360
 361
 362
 363
 364
 365
 366
 367
 368
 369
 370
 371
 372
 373
 374
 375
 376
 377
 378
 379
 380
 381
 382
 383
 384
 385
 386
 387
 388
 389
 390
 391
 392
 393
 394
 395
 396
 397
 398
 399
 400
 401
 402
 403
 404
 405
 406
 407
 408
 409
 410
 411
 412
 413
 414
 415
 416
 417
 418
 419
 420
 421
 422
 423
 424
 425
 426
 427
 428
 429
 430
 431
 432
 433
 434
 435
 436
 437
 438
 439
 440
 441
 442
 443
 444
 445
 446
 447
 448
 449
 450
 451
 452
 453
 454
 455
 456
 457
 458
 459
 460
 461
 462
 463
 464
 465
 466
 467
 468
 469
 470
 471
 472
 473
 474
 475
 476
 477
 478
 479
 480
 481
 482
 483
 484
 485
 486
 487
 488
 489
 490
 491
 492
 493
 494
 495
 496
 497
 498
 499
 500
 501
 502
 503
 504
 505
 506
 507
 508
 509
 510
 511
 512
 513
 514
 515
 516
 517
 518
 519
 520
 521
 522
 523
 524
 525

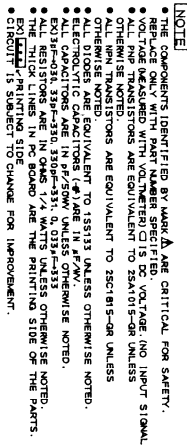

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

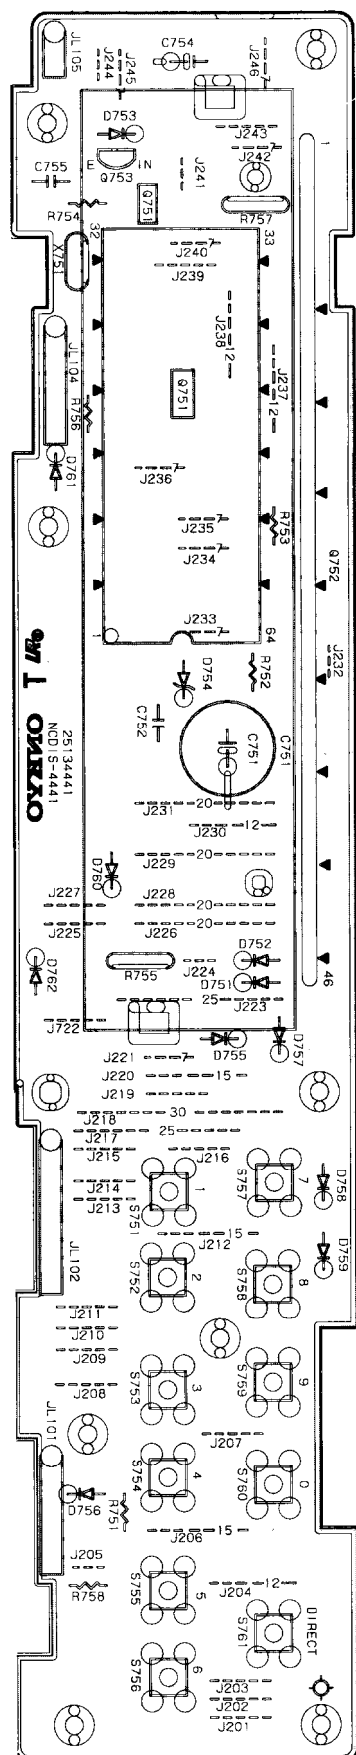

DISPLAY PC BOARD

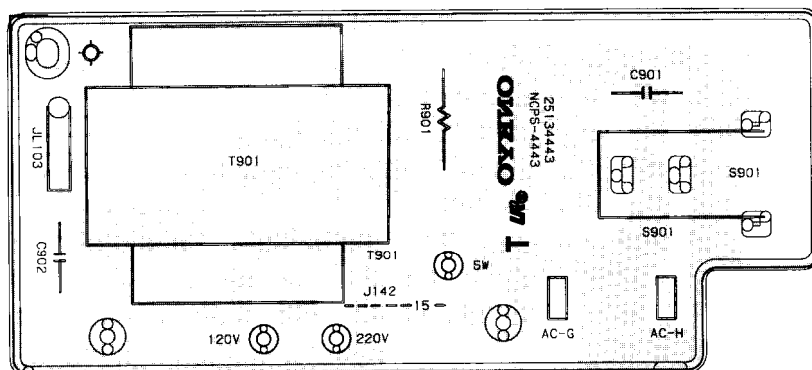

POWER SUPPLY CIRCUIT PC BOARD (NAPS-4443-2/2A/2B/2C)

CIRCUIT NO.	PART NO.	DESCRIPTION
C901	3500065A	△ DE7150FZ103PAC400V/125V,IS capacitor
	27301216	△ Cover for C901 <P/W/Q>
T901	2300636	△ NPT-1102D,Power transformer <D>
	2300637	△ NPT-1102P,Power transformer <P>
	2300638	△ NPT-1102DG,Power transformer <W>
	2300639	△ NPT-1102Q,Power transformer <Q>
R901	431523355	△ 3.3M Ω ,1/2W,Solid resistor <D>
S901	25035636	△ NPS-111-L590P,Power switch
	28175137	Insulator plate

NOTE: <D>:120V model only
 <P>:230V model only
 <W>:Worldwide model only
 <Q>:240V model only

NOTE:THE COMPONENTS IDENTIFIED BY MARK △
 ARE CRITICAL FOR RISK OF FIRE AND
 ELECTRIC SHOCK.REPLACE ONLY WITH PART
 NUMBER SPECIFIED.

ONKYO CORPORATION

International Division: Onarimon Yusen Bldg., 23-5, Nishi-Shimbashi 3-chome, Minato-ku,
 TOKYO 105, JAPAN Tel: 03-3432-6987 Fax: 03-3436-6979

ONKYO U.S.A CORPORATION

200 Williams Drive, Ramsey, N.J. 07446, U.S.A.
 Tel: 201-825-7950 Fax: 201-825-8150

ONKYO Europe GmbH

Hellersbergstrasse 4, 4040 Neuss WEST GERMANY
 Tel: 02101 12 00 75 Fax: 02101 10 33 06 TLX: 85 17 916 ONDU D

ONKYO FRANCE S.A.R.L.

Immeuble Le DIAMANT, Domaine Technologique De Saclay, 4 rue Rene Razel,
 91892 SACLAY, FRANCE Tel: (1)69 41 35 10 Fax: (1)69 41 35 84