


8. SCHEMATIC DIAGRAM

A

B


C

D

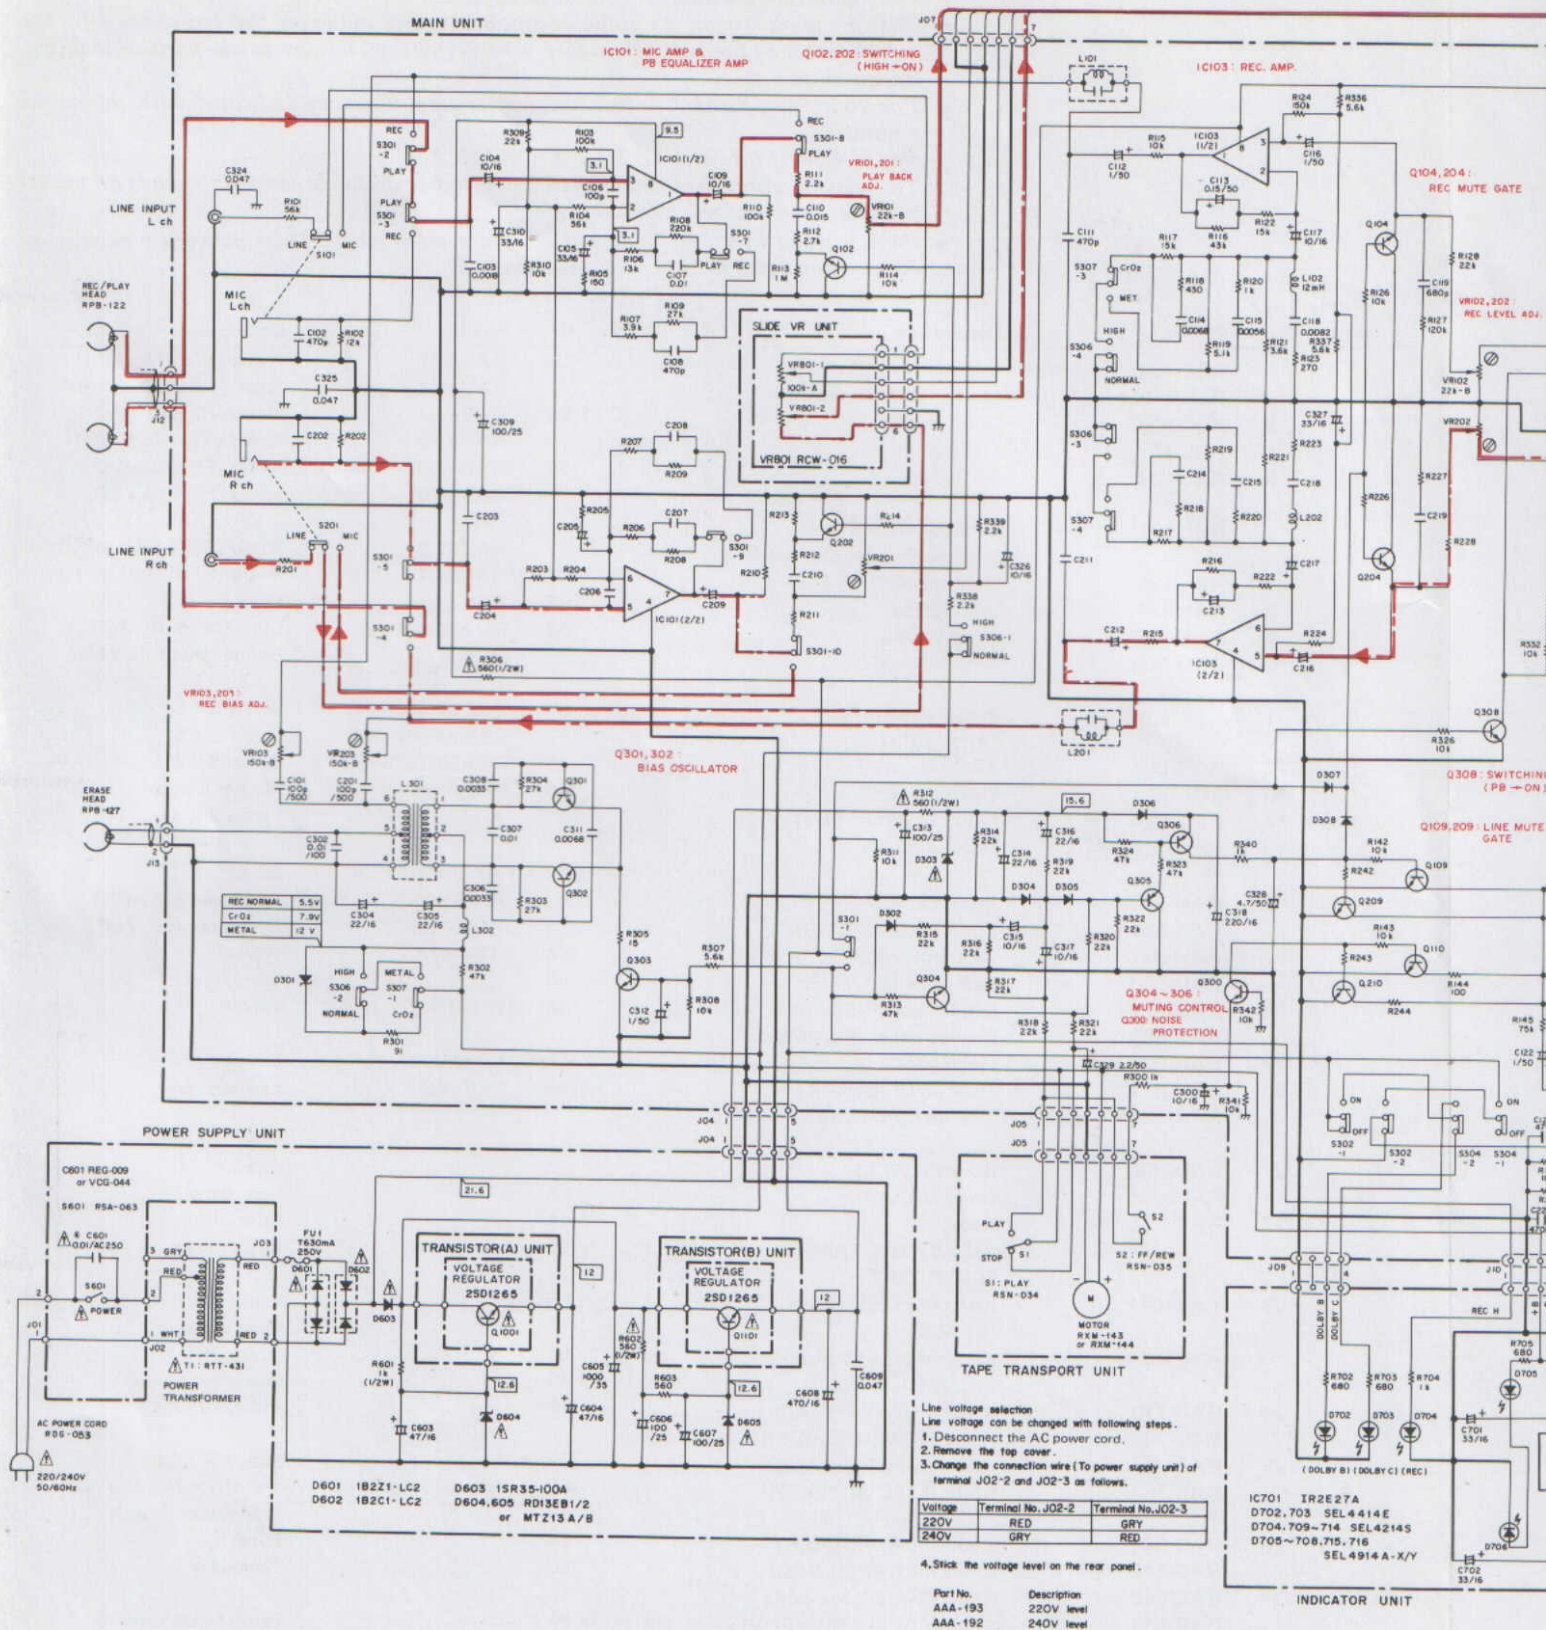

NOTE:

The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

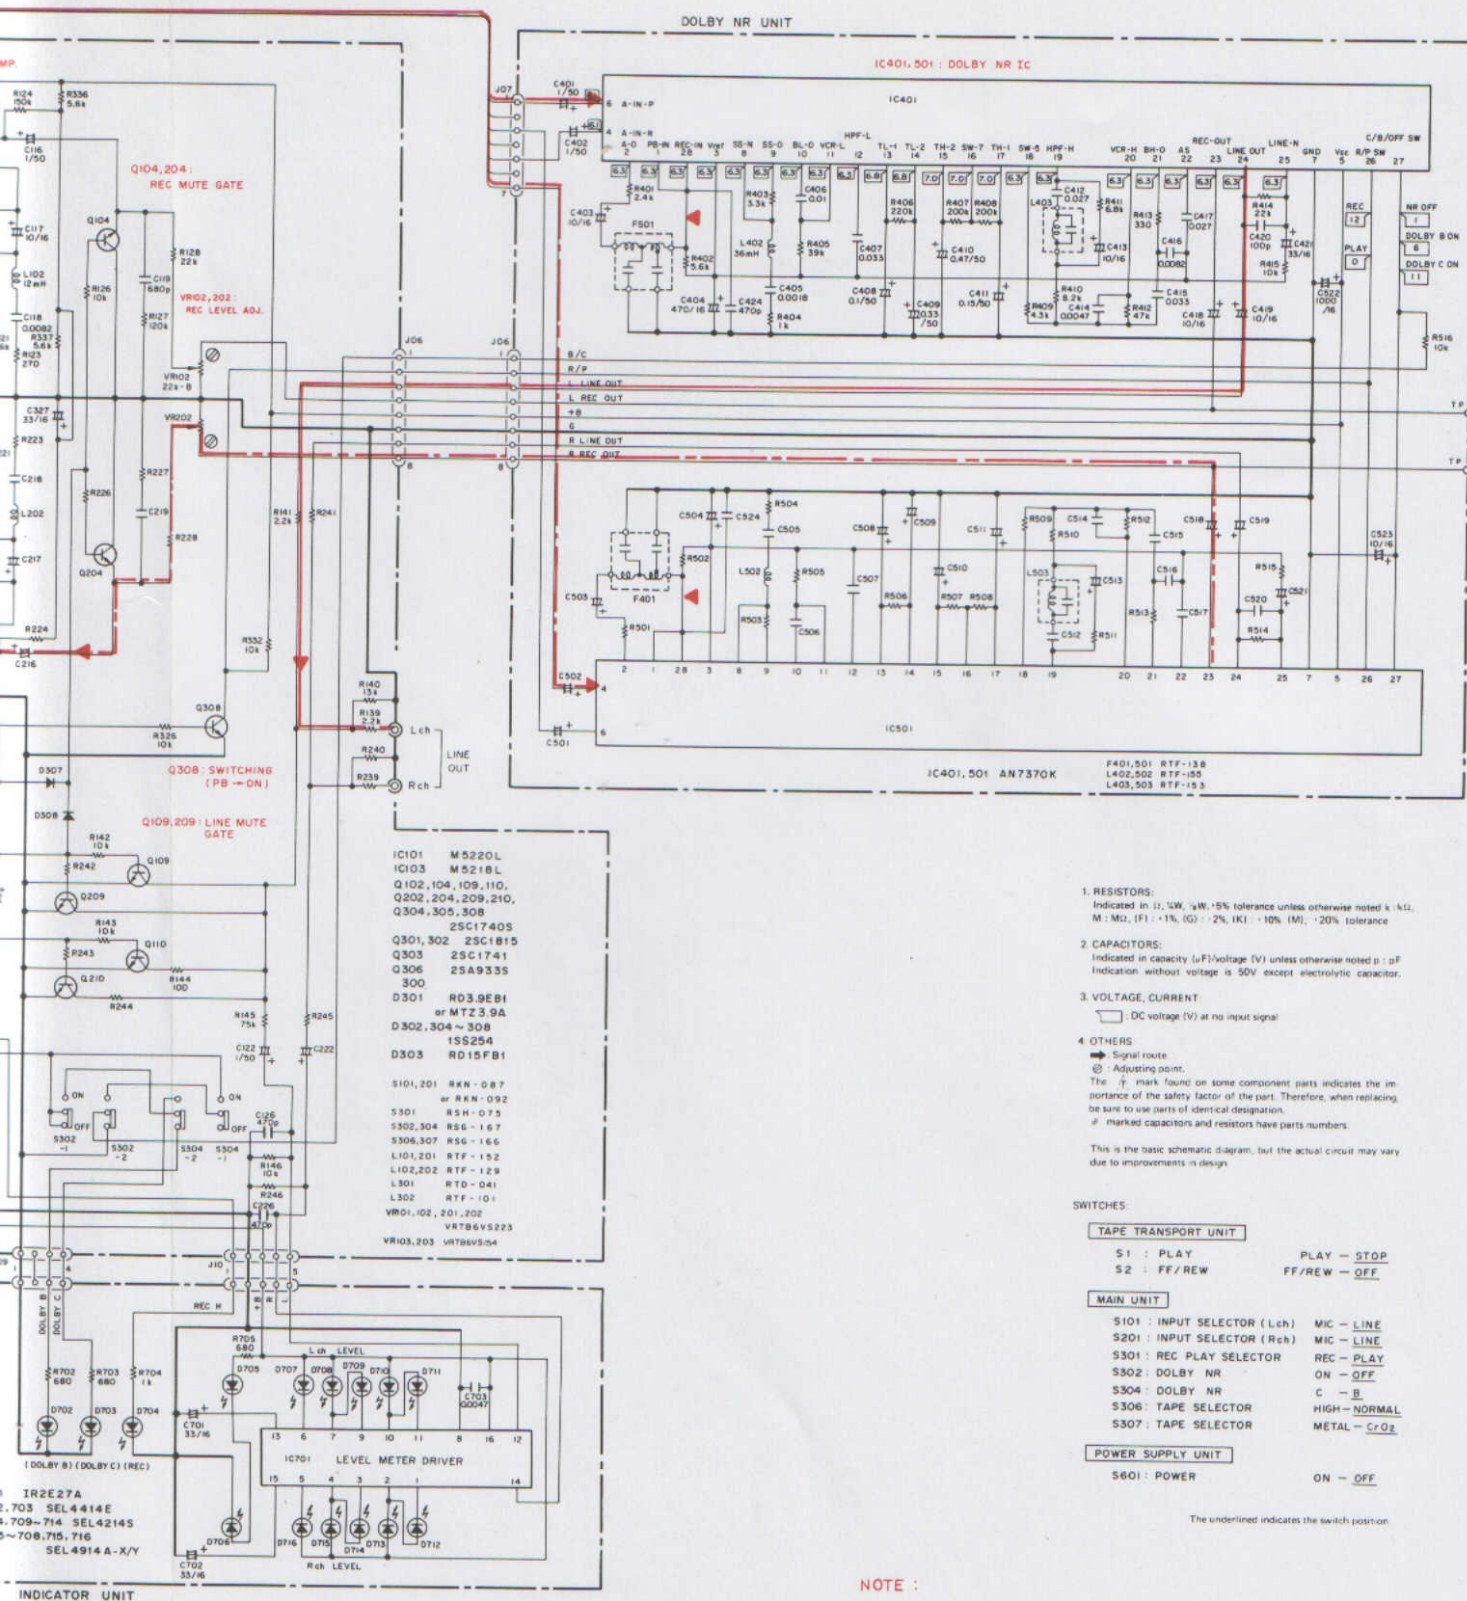

- RESISTORS:**
Indicated in Ω , $k\Omega$, $M\Omega$, $\%W$, $\%B$ tolerance unless otherwise noted k, M, Ω , $\%W$, $\%B$, $\%C$, $\%D$, $\%E$, $\%F$, $\%G$, $\%H$, $\%I$, $\%J$, $\%K$, $\%L$, $\%M$, $\%N$, $\%P$, $\%Q$, $\%R$, $\%S$, $\%T$, $\%U$, $\%V$, $\%W$, $\%X$, $\%Y$, $\%Z$.
- CAPACITORS:**
Indicated in capacity (μF), voltage (V) unless otherwise noted μ , pF. Indication without voltage is 50V except electrolytic capacitor.
- VOLTAGE, CURRENT:**
□ DC voltage (V) at no input signal
- OTHERS:**
— Signal route
⊗ — Adjusting point
The ∇ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
Marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

SWITCHES:

TAPE TRANSPORT UNIT	
S1 : PLAY	PLAY — STOP
S2 : FF/REW	FF/REW — OFF
MAIN UNIT	
S101 : INPUT SELECTOR (Lch)	MIC — LINE
S201 : INPUT SELECTOR (Rch)	MIC — LINE
S301 : REC PLAY SELECTOR	REC — PLAY
S302 : DOLBY NR	ON — OFF
S304 : DOLBY NR	C — B
S306 : TAPE SELECTOR	HIGH — NORMAL
S307 : TAPE SELECTOR	METAL — CR2
POWER SUPPLY UNIT	
S601 : POWER	ON — OFF

The underlined indicates the switch position.

NOTE :

Playback signal route ———
(Lch)
Recording signal route - - - - -
(Rch)