


Pioneer

Service Manual

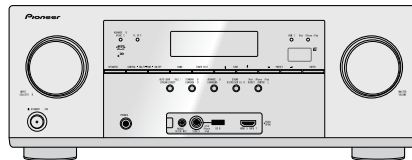

VSX-1127-K

ORDER NO.
RRV4307

AV Receiver

VSX-1127-K

VSX-1122-K

VSX-60

VSX-1027-K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-1127-K	CUXE	AC 120 V	
VSX-1122-K	CUXESM	AC 120 V	
VSX-60	UXECB	AC 120 V	
VSX-1027-K	CUXE	AC 120 V	



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2012

K-MZV MAR. 2012 Printed in Japan

SAFETY INFORMATION



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product may contain a chemical known to the State of California to cause cancer, or birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120 V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

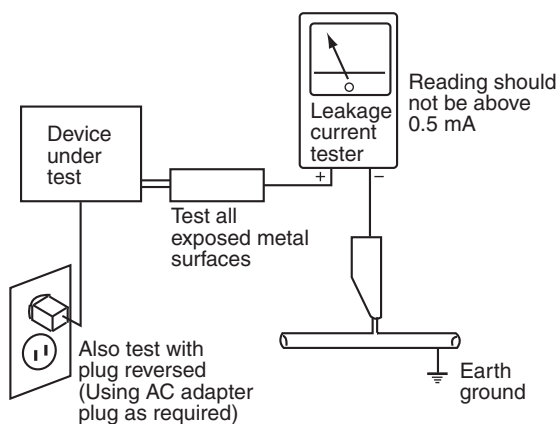

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

CONTENTS

SAFETY INFORMATION.....	2	
1. SERVICE PRECAUTIONS.....	5	
1.1 NOTES ON SOLDERING.....	5	A
1.2 NOTES ON REPLACING PARTS.....	5	
1.3 SERVICE NOTICE.....	5	
2. SPECIFICATIONS.....	6	
3. BASIC ITEMS FOR SERVICE.....	9	
3.1 CHECK POINTS AFTER SERVICING.....	9	
3.2 JIGS LIST.....	9	
3.3 PCB LOCATIONS.....	10	
4. BLOCK DIAGRAM.....	12	
4.1 OVERALL WIRING DIAGRAM.....	12	
4.2 AUDIO BLOCK DIAGRAM.....	14	
4.3 D-AUDIO BLOCK DIAGRAM.....	16	
4.4 D-VIDEO BLOCK DIAGRAM.....	18	B
4.5 VIDEO BLOCK DIAGRAM.....	20	
4.6 POWER SUPPLY BLOCK DIAGRAM.....	22	
5. DIAGNOSIS.....	24	
5.1 TROUBLESHOOTING.....	24	
5.2 ERROR INDICATIONS.....	32	
5.3 DETECTION CIRCUIT.....	33	
5.4 IC INFORMATION.....	35	
6. SERVICE MODE.....	38	
6.1 TEST MODE.....	38	
6.2 DEFAULT SETTINGS.....	40	
7. DISASSEMBLY.....	41	
8. EACH SETTING AND ADJUSTMENT.....	48	C
8.1 ADJUSTMENT REQUIRED WHEN THE UNIT IS REPAIRED OR REPLACED.....	48	
8.2 USB BACKUP.....	49	
8.3 UPDATING OF THE FIRMWARE.....	51	
8.4 IDLE CURRENT ADJUSTMENT.....	54	
9. EXPLODED VIEWS AND PARTS LIST.....	56	
9.1 PACKING SECTION.....	56	
9.2 EXTERIOR SECION.....	58	
10. SCHEMATIC DIAGRAM.....	62	
10.1 AUDIO ASSY.....	62	
10.2 AMP7 ASSY (1/2).....	64	
10.3 AMP7 ASSY (2/2).....	66	
10.4 MAIN ASSY.....	68	D
10.5 D-MAIN ASSY (1/10).....	70	
10.6 D-MAIN ASSY (2/10).....	72	
10.7 D-MAIN ASSY (3/10).....	74	
10.8 D-MAIN ASSY (4/10).....	76	
10.9 D-MAIN ASSY (5/10).....	78	
10.10 D-MAIN ASSY (6/10).....	80	
10.11 D-MAIN ASSY (7/10).....	82	
10.12 D-MAIN ASSY (8/10).....	84	
10.13 D-MAIN ASSY (9/10).....	86	
10.14 D-MAIN ASSY (10/10).....	88	
10.15 IR ASSY.....	90	E
10.16 VIDEO ASSY.....	92	
10.17 BRG ASSY.....	94	
10.18 FRONT and POWER ASSYS.....	96	
10.19 MIC, FVIDEO and HP ASSYS.....	98	
10.20 G-L, G-R, WG-A, WG-B, CCG and BTCNT ASSYS.....	99	
10.21 FHDMI and F-USB ASSYS.....	100	
10.22 SMPS ASSY.....	102	
10.23 BT ASSY.....	104	

11. PCB CONNECTION DIAGRAM106

11.1 AUDIO ASSY106

11.2 AMP7 ASSY108

11.3 MAIN ASSY110

11.4 D-MAIN ASSY114

11.5 IR ASSY118

11.6 VIDEO ASSY120

11.7 BRG ASSY122

11.8 FRONT, POWER, MIC, FVIDEO and HP ASSYS124

11.9 G-L, G-R, WG-A and WG-B ASSYS128

11.10 CCG and BTCNT ASSYS129

11.11 FHDMI and F-USB ASSYS130

11.12 BT ASSY131

11.13 SMPS ASSY132

12. PCB PARTS LIST134

1. SERVICE PRECAUTIONS

1.1 NOTES ON SOLDERING

- For environmental protection, lead-free solder is used on the printed circuit boards mounted in this unit.
Be sure to use lead-free solder and a soldering iron that can meet specifications for use with lead-free solders for repairs accompanied by reworking of soldering.
- Compared with conventional eutectic solders, lead-free solders have higher melting points, by approximately 40 °C.
Therefore, for lead-free soldering, the tip temperature of a soldering iron must be set to around 373 °C in general, although the temperature depends on the heat capacity of the PC board on which reworking is required and the weight of the tip of the soldering iron.

Do NOT use a soldering iron whose tip temperature cannot be controlled.

Compared with eutectic solders, lead-free solders have higher bond strengths but slower wetting times and higher melting temperatures (hard to melt/easy to harden).

The following lead-free solders are available as service parts:

- Parts numbers of lead-free solder:
GYP1006 1.0 in dia.
GYP1007 0.6 in dia.
GYP1008 0.3 in dia.

1.2 NOTES ON REPLACING PARTS

The part listed below is difficult to replace as a discrete component part.
When the part listed in the table is defective, replace whole Assy.

Assy Name	Parts that is Difficult to Replace			
	Ref No.	Function	Part No.	Remarks
D-MAIN Assy	JA1601, JA9601-JA9607	HDMI Connector	—————	JACK with Cu-through-hole & SMD type
	JA9201	USB Connector	—————	JACK with Cu-through-hole & 6 pin
	JA9202	LAN Connector	—————	JACK with Cu-through-hole & 10 pin
	IC9520	D-MAIN 3.3V Power Supply IC	—————	IC with heat-pad
	IC9521	D-MAIN 3.3V Power Supply IC	—————	IC with heat-pad
	IC9522	D-MAIN 1.8V Power Supply IC	—————	IC with heat-pad
	IC9002	DSP IC	—————	IC with heat-pad
	IC1204	VIDEO FORMAT CONVERTER	—————	IC BGA type
	IC1212	DDR IC	—————	IC BGA type
	IC9203	LAN PHY IC	—————	IC with heat-pad
	IC9204	NETWORK MEDIA PROCESSOR	—————	IC BGA type
	IC1602	HDMI Tx	—————	IC with heat-pad
	IC903	HDMI Rx	—————	IC with heat-pad
	IC9602	HDMI SW IC	—————	IC with heat-pad
F-USB Assy	IC805	USB 5V SW IC	—————	IC with heat-pad
	IC1307	USB 5V SW Power Supply IC	—————	IC with heat-pad

1.3 SERVICE NOTICE

- Discharging**
For more detail, please refer to "7. DISASSEMBLY - 1. Discharging".
- Notes on Ground Points Connection**
For more detail, please refer to "7. DISASSEMBLY - 2. Notes on Ground Points Connection".

2. SPECIFICATIONS

■ VSX-1127-K, VSX-1027-K

Amplifier section

Continuous average power output of 90 watts* per channel, min., at 8 ohms, from 20 Hz to 20 000 Hz with no more than 0.08 %** total harmonic distortion.

Front (stereo) 90 W + 90 W

Power output (1 kHz, 6 Ω , 1 %, 1 ch driven) 165 W

Guaranteed speaker impedance 6 Ω to 16 Ω

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers

** Measured by Audio Spectrum Analyzer

Audio Section

Input (Sensitivity/Impedance)

LINE 315 mV/47 k Ω

Signal-to-Noise Ratio (IHF, short circuited, A network)

LINE 100 dB

Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]

LINE 81 dB

Tuner Section

Frequency Range (FM) 87.5 MHz to 108 MHz

Antenna Input (FM) 75 Ω unbalanced

Frequency Range (AM) 530 kHz to 1700 kHz

Antenna (AM) Loop antenna (balanced)

Video Section

Signal level

Composite Video 1 Vp-p (75 Ω)

Component Video Y: 1.0 Vp-p (75 Ω), PB/PR: 0.7 Vp-p (75 Ω)

Corresponding maximum resolution

Component Video 1080p (1125p) (Video convert off)

Digital In/Out Section

HDMI terminal 19-pin (Not DVI)

HDMI output type 5 V, 100 mA

USB terminal USB2.0 High Speed (Type A) 5 V, 2.1 A

iPod terminal USB, and Video (Composite)

ADAPTER PORT terminal 5 V, 100 mA

WIRELESS LAN ADAPTER terminal 5 V, 600 mA

Integrated Control Section

Control (IR) terminal ϕ 3.5 Mini-jack (MONO)

IR signal High Active (High Level: 2.0 V)

Network Section

LAN terminal 10 BASE-T/100 BASE-TX

Miscellaneous

Power requirements AC 120 V, 60 Hz

Power consumption 550 W

In standby 0.2 W (HDMI Setup – Control : OFF)

0.3 W (HDMI Setup – Control : ON)

Dimensions 435 mm (W) x 168 mm (H) x 362.5 mm (D)

(17 3/16 in. (W) x 6 5/8 in. (H) x 14 5/16 in. (D))

Weight (without package)

VSX-1127 9.9 kg (21.8 lb)

VSX-1027 9.8 kg (21.6 lb)

Note

• Specifications and the design are subject to possible modifications without notice, due to improvements.

• This product includes FontAvenue® fonts licensed by NEC Corporation. FontAvenue is a registered trademark of NEC Corporation.

■ VSX-60

Amplifier section

Continuous average power output of 90 watts* per channel, min., at 8 ohms, from 20 Hz to 20 000 Hz

with no more than 0.08 %** total harmonic distortion.

Front (stereo) 90 W + 90 W

Guaranteed speaker impedance 6 Ω to 16 Ω

* Measured pursuant to the Federal Trade Commission's

Trade Regulation rule on Power Output Claims for Amplifiers

** Measured by Audio Spectrum Analyzer

Audio Section

Input (Sensitivity/Impedance)

LINE 315 mV/47 k Ω

Output (Level/Impedance)

REC 315 mV/2.2 k Ω

Signal-to-Noise Ratio (IHF, short circuited, A network)

LINE 100 dB

Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]

LINE 81 dB

Tuner Section

Frequency Range (FM) 87.5 MHz to 108 MHz

Antenna Input (FM) 75 Ω unbalanced

Frequency Range (AM) 530 kHz to 1700 kHz

Antenna (AM) Loop antenna (balanced)

Video Section

Signal level

Composite Video 1 Vp-p (75 Ω)

Component Video Y: 1.0 Vp-p (75 Ω), PB/PR: 0.7 Vp-p (75 Ω)

Corresponding maximum resolution

Component Video 1080p (1125p) (Video convert off)

Digital In/Out Section

HDMI terminal 19-pin (Not DVI)

HDMI output type 5 V, 100 mA

USB terminal USB2.0 High Speed (Type A) 5 V, 2.1 A

iPod terminal USB, and Video (Composite)

ADAPTER PORT terminal 5 V, 100 mA

WIRELESS LAN ADAPTER terminal 5 V, 600 mA

Integrated Control Section

Control (IR) terminal ϕ 3.5 Mini-jack (MONO)

IR signal High Active (High Level: 2.0 V)

12 V Trigger terminal ϕ 3.5 Mini-jack (MONO)

12 V Trigger output type 12 V, Total 150 mA

RS-232C cable type 9-pin, cross type, female-female

Network Section

LAN terminal 10 BASE-T/100 BASE-TX

Miscellaneous

Power requirements.....AC 120 V, 60 Hz
Power consumption550 W
In standby.....0.2 W (HDMI Setup – Control : OFF)
0.3 W (HDMI Setup – Control : ON)
Dimensions.....435 mm (W) x 168 mm (H) x 362.5 mm (D)
(17 3/16 in. (W) x 6 5/8 in. (H) x 14 5/16 in. (D))
Weight (without package).....9.9 kg (22 lb)

Note

- Specifications and the design are subject to possible modifications without notice, due to improvements.
- This product includes FontAvenue® fonts licensed by NEC Corporation. FontAvenue is a registered trademark of NEC Corporation.

■ VSX-1122-K

Amplifier section

Continuous average power output of 90 watts* per channel, min., at 8 ohms, from 20 Hz to 20 000 Hz with no more than 0.08 %** total harmonic distortion.

Front (stereo) 90 W + 90 W
Power output (1 kHz, 6 Ω, 1 %, 1 ch driven) 165 W
Guaranteed speaker impedance 6 Ω to 16 Ω

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers

** Measured by Audio Spectrum Analyzer

Audio Section

Input (Sensitivity/Impedance)	
LINE.....	315 mV/47 k Ω
Signal-to-Noise Ratio (IHF, short circuited, A network)	
LINE.....	100 dB
Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]	
LINE.....	81 dB

Tuner Section

Frequency Range (FM) 87.5 MHz to 108 MHz
Antenna Input (FM)..... 75 Ω unbalanced
Frequency Range (AM) 530 kHz to 1700 kHz
Antenna (AM) Loop antenna (balanced)

Video Section

Signal level
Composite Video 1 Vp-p (75 Ω)
Component Video..... Y: 1.0 Vp-p (75 Ω), PB/PR: 0.7 Vp-p
(75 Ω)

Corresponding maximum resolution
Component Video..... 1080p (1125p) (Video convert off)

Digital In/Out Section

HDMI terminal	19-pin (Not DVI)
HDMI output type.....	5 V, 100 mA
USB terminal	USB2.0 High Speed (Type A) 5 V, 2.1 A
iPod terminal.....	USB, and Video (Composite)
ADAPTER PORT terminal.....	5 V, 100 mA
WIRELESS LAN ADAPTER terminal	5 V, 600 mA

Integrated Control Section

Control (IR) terminalø 3.5 Mini-jack (MONO)
IR signal..... High Active (High Level: 2.0 V)

Network Section

LAN terminal..... 10 BASE-T/100 BASE-TX

Miscellaneous

Power requirements.....AC 120 V, 60 Hz
Power consumption550 W
In standby.....0.2 W (HDMI Setup – Control : OFF)
0.3 W (HDMI Setup – Control : ON)
Dimensions..... 435 mm (W) x 168 mm (H) x 362.5 mm (D)
(17 3/16 in. (W) x 6 5/8 in. (H) x 14 5/16 in. (D))
Weight (without package).....9.9 kg (22 lb)


Note

- Specifications and the design are subject to possible modifications without notice, due to improvements.
- This product includes FontAvenue® fonts licensed by NEC Corporation. FontAvenue is a registered trademark of NEC Corporation.


Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "Surround EX", and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio is a trademark of DTS, Inc. Product includes software.
© DTS, Inc. All Rights Reserved.


A ■ Accessories

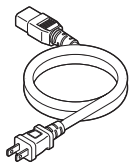

Power cord
(L068125130010-IL)
(VSX-60 only)

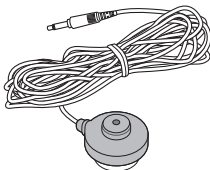

Microphone
(for Auto MCACC setup)
(APM7010)



iPod cable
(L308102013030-IL)



AM loop antenna
(E601019000010-IL)



FM wire antenna
(E605010140010-IL)



Remote control (AXD7664)
(8300766400010-IL)



Dry cell batteries
(AAA size IEC R03) x2

Warranty card

Quick start guide
(VSX-1127-K, VSX-1027-K: 5707000006590-IL)
(VSX-1122-K: 5707000006580-IL)
(VSX-60: 5707000006600-IL)

Safety Brochure

Operating instructions (CD-ROM)
(VSX-1127-K, VSX-1027-K: 6517000000550-IL)
(VSX-1122-K: 6517000000540-IL)
(VSX-60: 6517000000560-IL)

3. BASIC ITEMS FOR SERVICE

3.1 CHECK POINTS AFTER SERVICING

Items to be checked after servicing

To keep the product quality after servicing, confirm recommended check points shown below.

No.	Procedures	Check points
1	Confirm whether the customer complain has been solved. If the customer complain occurs with the particular source, such as Dolby Digital, DTS, AAC, DVD-A and HDMI, input it for the operation check.	The customer complain must not be reappeared. Video, Audio and operations must be normal.
2	Check the analog audio playback. (Make the analog connections with a DVD player.)	Each channel audio and operations must be normal.
3	Check the digital audio playback. (Make the digital connections with a DVD player.)	Each channel audio and operations must be normal.
4	Check surround playback. (Select Surround mode and check the multichannel operations via the DSP circuit.)	Each channel audio and operations must be normal.
5	Check the video outputs. (Connect with a DVD player.)	Video and operations must be normal.
6	Check the tuner (AM and FM) operations.	Audio and operations must be normal.
7	Check the sound from headphone output.	Sound must be normal, without noise.
8	Check the appearance of the product.	No scratches or dirt on its appearance after receiving it for service.

See the table below for the items to be checked regarding video and audio.

Item to be checked regarding video	Item to be checked regarding audio
Block noise	Distortion
Horizontal noise	Noise
Flicker	Volume too low
Disturbed image (video jumpiness)	Volume too high
Too dark	Volume fluctuating
Too bright	Sound interrupted
Mottled color	

3.2 JIGS LIST

Jigs List

Jig Name	Part No.	Remarks
13P extension jig cable	GGD1740	Diagnosis (AMP7 Assy ↔ AUDIO Assy)
3P extension jig cable	GGD1741	Diagnosis (AMP7 Assy ↔ MAIN Assy)
Board to board extension jig cable	GGD1736	Diagnosis (D-MAIN Assy ↔ BRG Assy)
Board to board extension jig cable	GGD1798	Diagnosis (D-MAIN Assy ↔ IR Assy)
Board to board extension jig cable	GGD1799	Diagnosis (D-MAIN Assy ↔ IR Assy)
Conversion jig	GGD1802	Diagnosis (D-MAIN Assy ↔ BRG Assy)
Conversion jig	GGD1803	Diagnosis (D-MAIN Assy ↔ IR Assy)


Lubricants and Glues List



Name	Part No.	Remarks
Silicon grease	GEM1057	Refer to "9.2 EXTERIOR SECTION".
Silicon adhesive	GYA1011 (KE40RTV-W)	Refer to "9.2 EXTERIOR SECTION".

1 2 3 4

3.3 PCB LOCATIONS

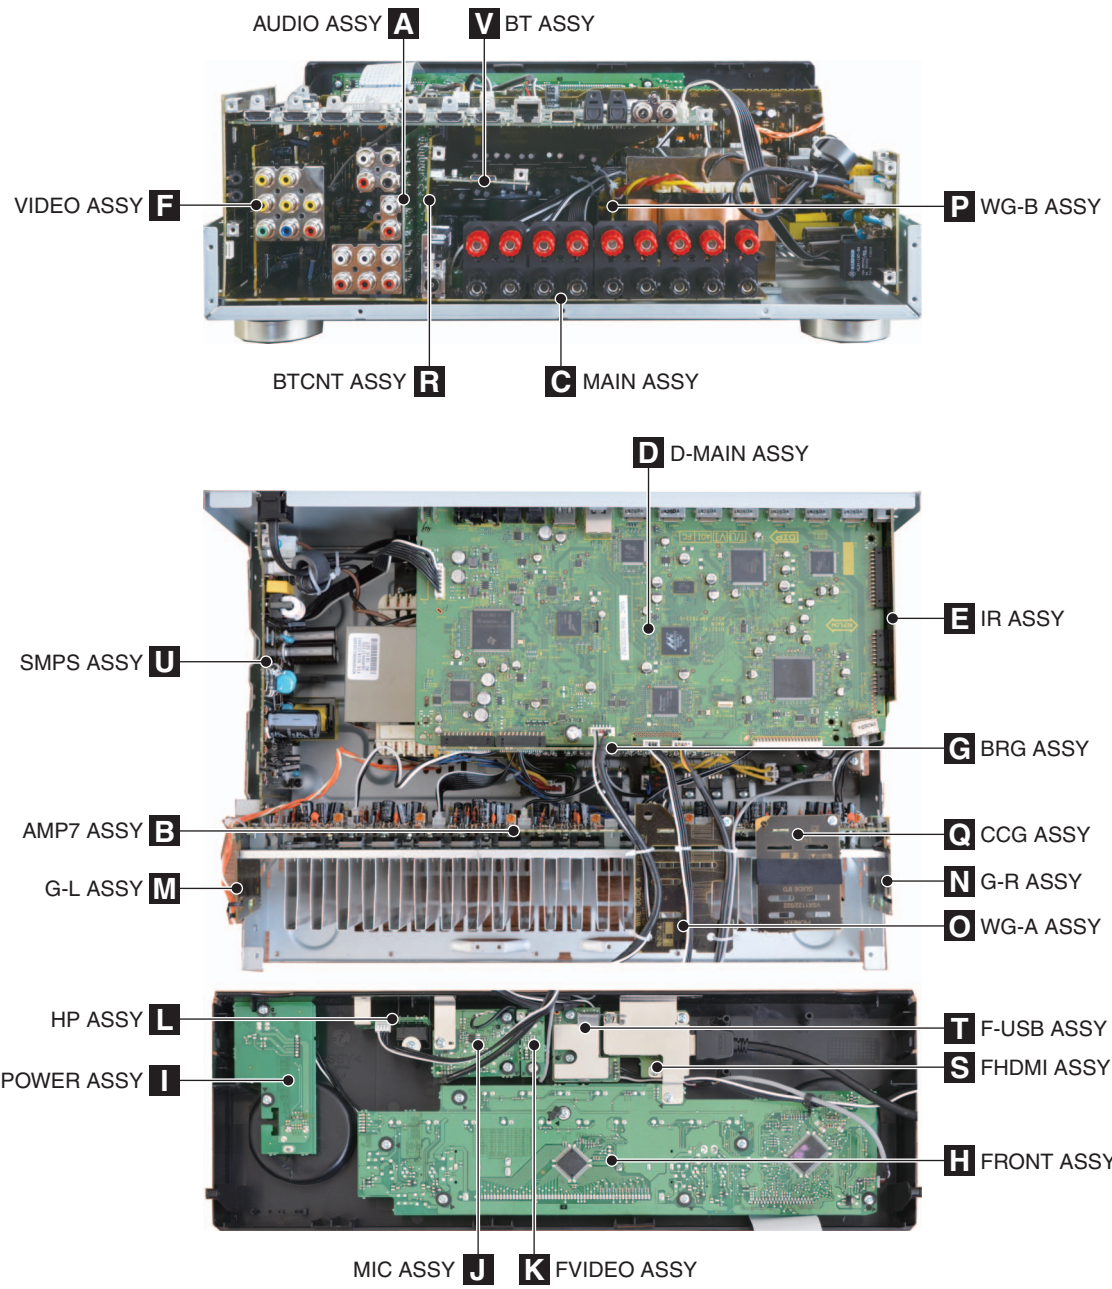


NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 ● The Δ mark found on some component parts indicates the importance of the safety factor of the part.
 Therefore, when replacing, be sure to use parts of identical designation.

LIST OF ASSEMBLIES

Mark	Symbol and Description	VSX-1127-K/CUXE	VSX-1122-K/CUXESM	VSX-60/UXECB	VSX-1027-K/CUXE
NSP	1..PCB TTL ASSY MAIN	7025HK1110020-IL	7025HK1110010-IL	7025HK1110030-IL	7025HK1109010-IL
	2..MAIN ASSY	7028071711010-IL	7028071711010-IL	7028071711040-IL	7028071711010-IL
	2..VIDEO ASSY	7028071712020-IL	7028071712070-IL	7028071712040-IL	7028071712070-IL
	2..G-L ASSY	7028071713040-IL	7028071713040-IL	7028071713040-IL	7028071713040-IL
	2..G-R ASSY	7028071714040-IL	7028071714040-IL	7028071714040-IL	7028071714040-IL
	2..WG-A ASSY	7028071715040-IL	7028071715040-IL	7028071715040-IL	7028071715040-IL
	2..WG-B ASSY	7028071716040-IL	7028071716040-IL	7028071716040-IL	7028071716040-IL
NSP	1..PCB TTL ASSY DMAIN	7025HK1110021-IL	7025HK1110011-IL	7025HK1110031-IL	7025HK1109011-IL
	2..D-MAIN ASSY	7028071752020-IL	7028071752040-IL	7028071752040-IL	7028071752070-IL
NSP	1..PCB TTL ASSY FRONT	7025HK1110022-IL	7025HK1110012-IL	7025HK1110032-IL	7025HK1109012-IL
	2..FRONT ASSY	7028071721050-IL	7028071721010-IL	7028071721040-IL	7028071721060-IL
	2..POWER ASSY	7028071722010-IL	7028071722010-IL	7028071722040-IL	7028071722010-IL
	2..MIC ASSY	7028071723040-IL	7028071723040-IL	7028071723040-IL	7028071723040-IL
	2..FVIDEO ASSY	7028071724040-IL	7028071724040-IL	7028071724040-IL	7028071724040-IL
	2..HP ASSY	7028071725040-IL	7028071725040-IL	7028071725040-IL	7028071725040-IL
NSP	1..PCB TTL ASSY AUDIO	7025HK1110023-IL	7025HK1110013-IL	7025HK1110033-IL	7025HK1109013-IL
	2..AUDIO ASSY	7028071741050-IL	7028071741010-IL	7028071741040-IL	7028071741010-IL
NSP	1..PCB TTL ASSY IR	7025HK1110024-IL	7025HK1110014-IL	7025HK1110034-IL	7025HK1109014-IL
	2..IR ASSY	7028071771010-IL	7028071771010-IL	7028071771040-IL	7028071771010-IL
	2..SMPS ASSY	7028071772010-IL	7028071772010-IL	7028071772040-IL	7028071772010-IL
	2..BRG ASSY	7028071773040-IL	7028071773040-IL	7028071773040-IL	7028071773070-IL
	2..BTCNT ASSY	7028071774040-IL	7028071774040-IL	7028071774040-IL	7028071774040-IL
	2..CCG ASSY	7028071775040-IL	7028071775040-IL	7028071775040-IL	7028071775040-IL
NSP	1..PCB TTL ASSY AMP7	7025HK1110025-IL	7025HK1110015-IL	7025HK1110035-IL	7025HK1109015-IL
	2..AMP7 ASSY	7028071731040-IL	7028071731040-IL	7028071731040-IL	7028071731040-IL
NSP	1..PCB TTL ASSY FHDMI	7025HK1110026-IL	7025HK1110016-IL	7025HK1110036-IL	Not used
	2..FHDMI ASSY	7028071791040-IL	7028071791040-IL	7028071791040-IL	Not used
NSP	1..PCB TTL ASSY F-USB	7025HK1110027-IL	7025HK1110017-IL	7025HK1110037-IL	7025HK1109017-IL
	2..F-USB ASSY	7028071761020-IL	7028071761020-IL	7028071761020-IL	7028071761020-IL
NSP	1..PCB TTL ASSY BT	7025HK1110028-IL	7025HK1110018-IL	7025HK1110038-IL	7025HK1109018-IL
	2..BT ASSY	7028070231010-IL	7028070231010-IL	7028070231010-IL	7028070231010-IL


4. BLOCK DIAGRAM


4.1 OVERALL WIRING DIAGRAM

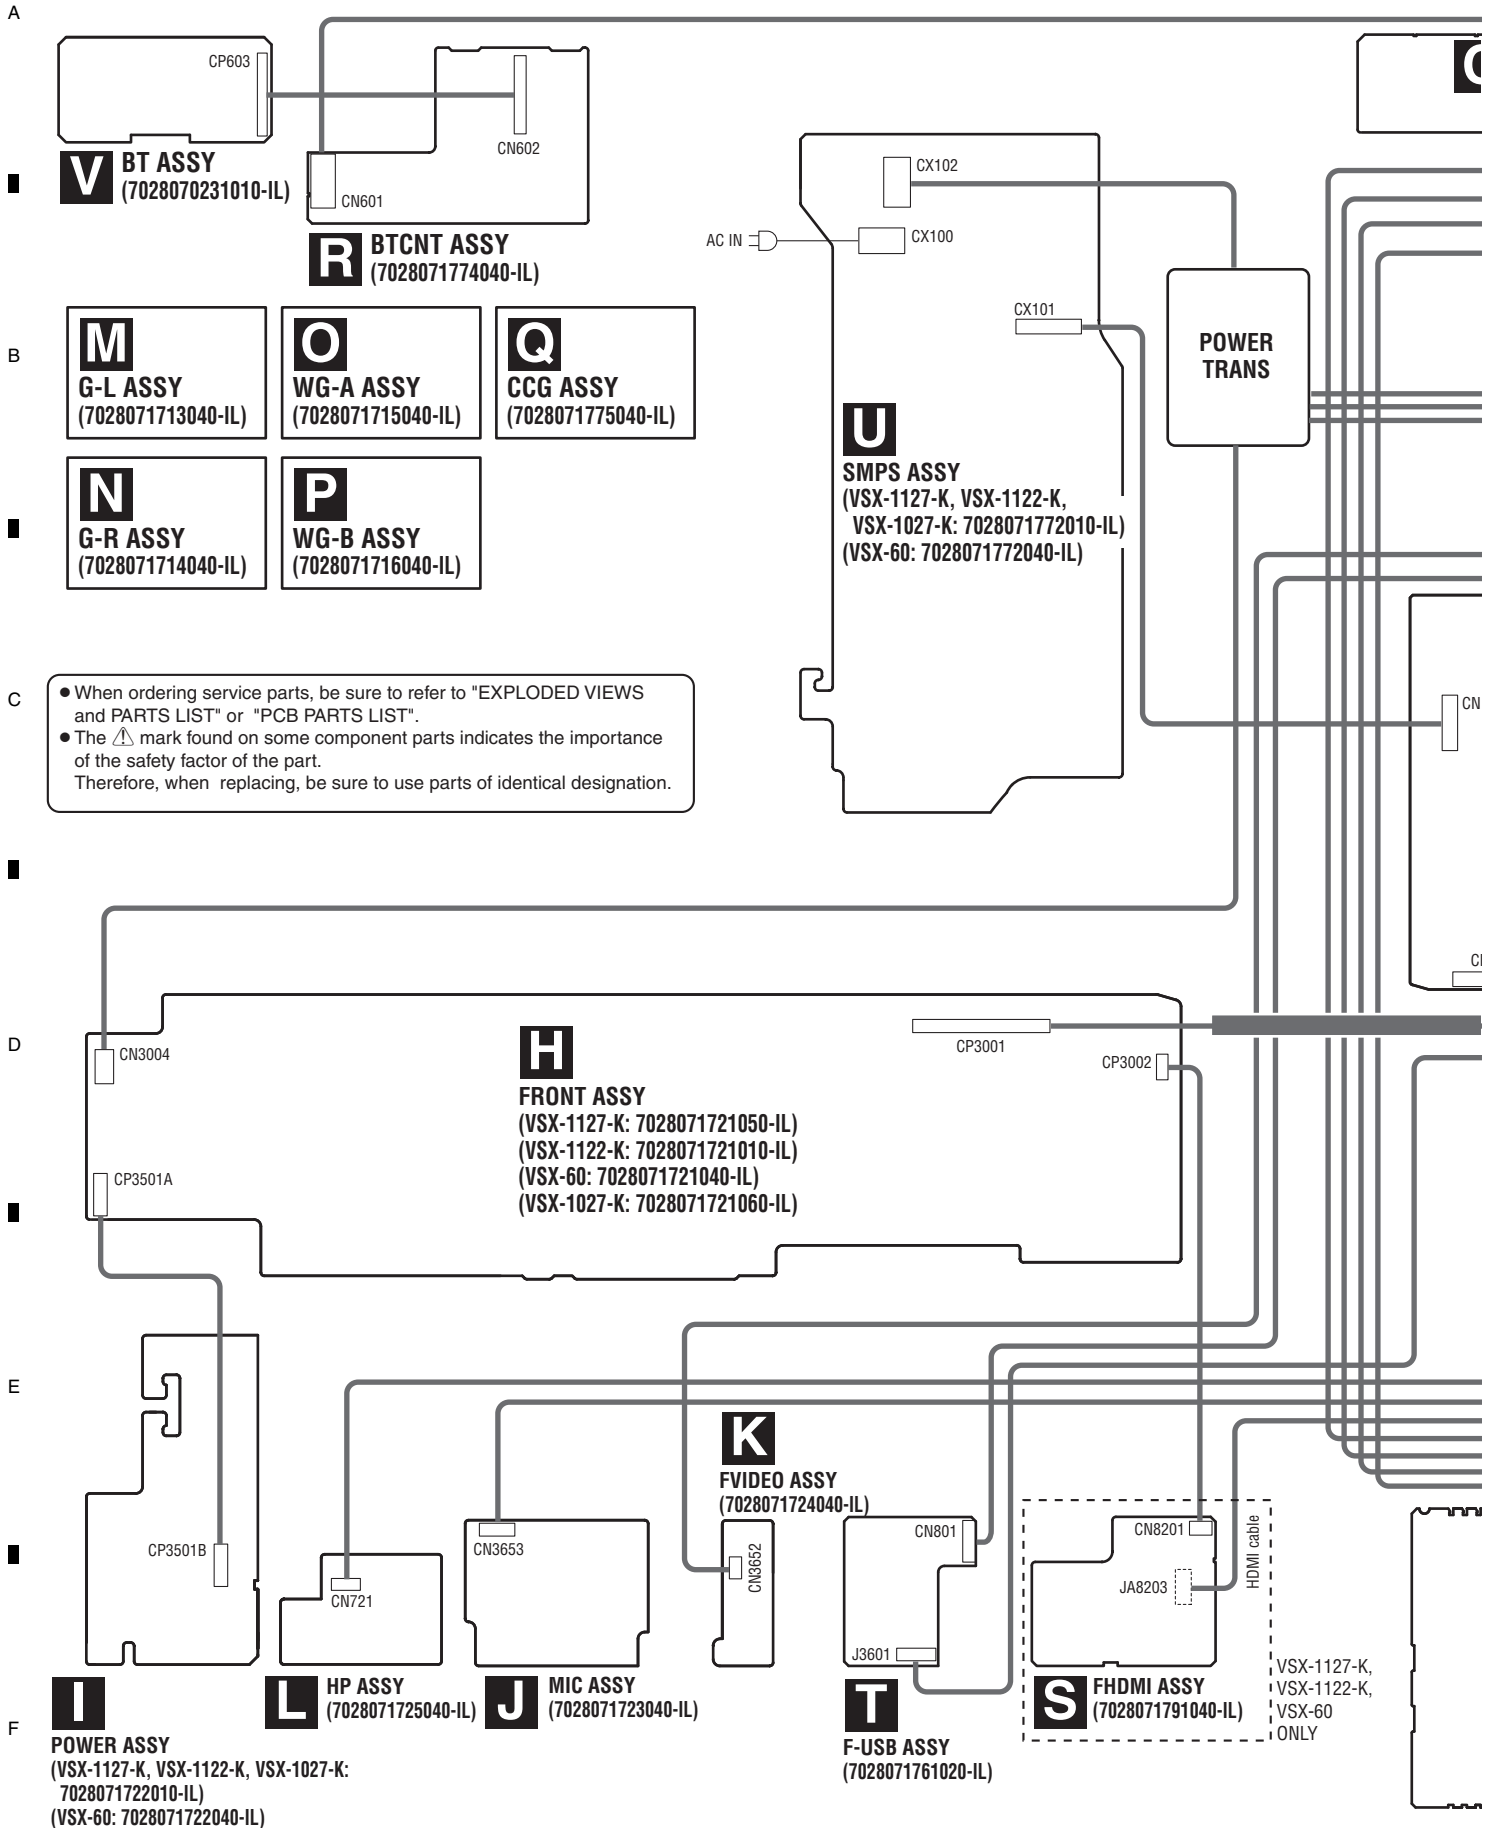



4.2 AUDIO BLOCK DIAGRAM

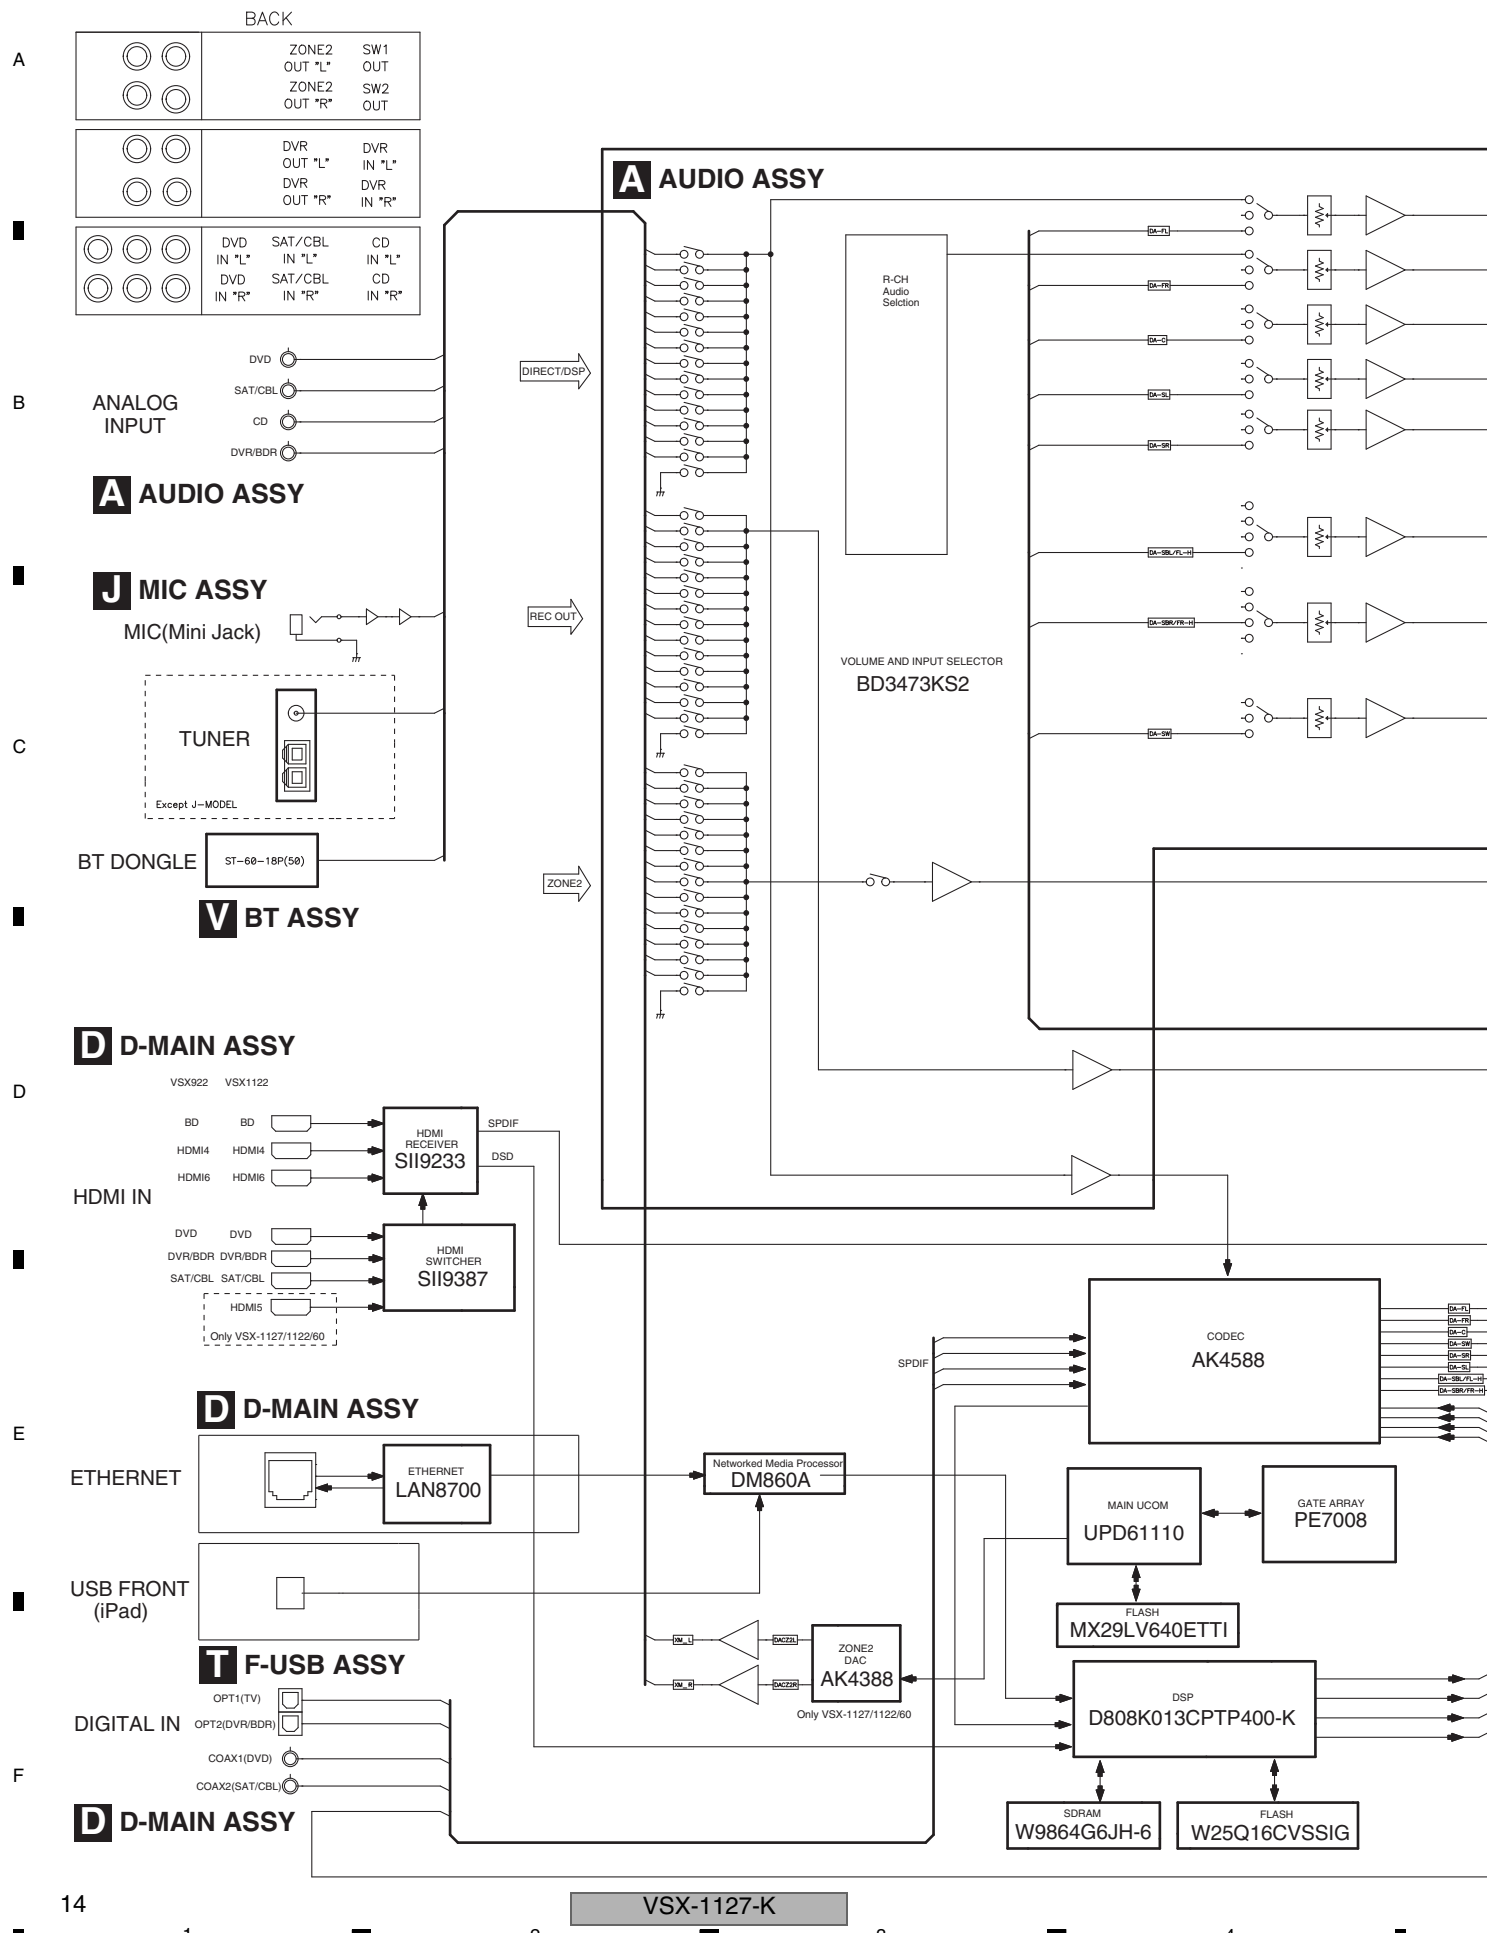

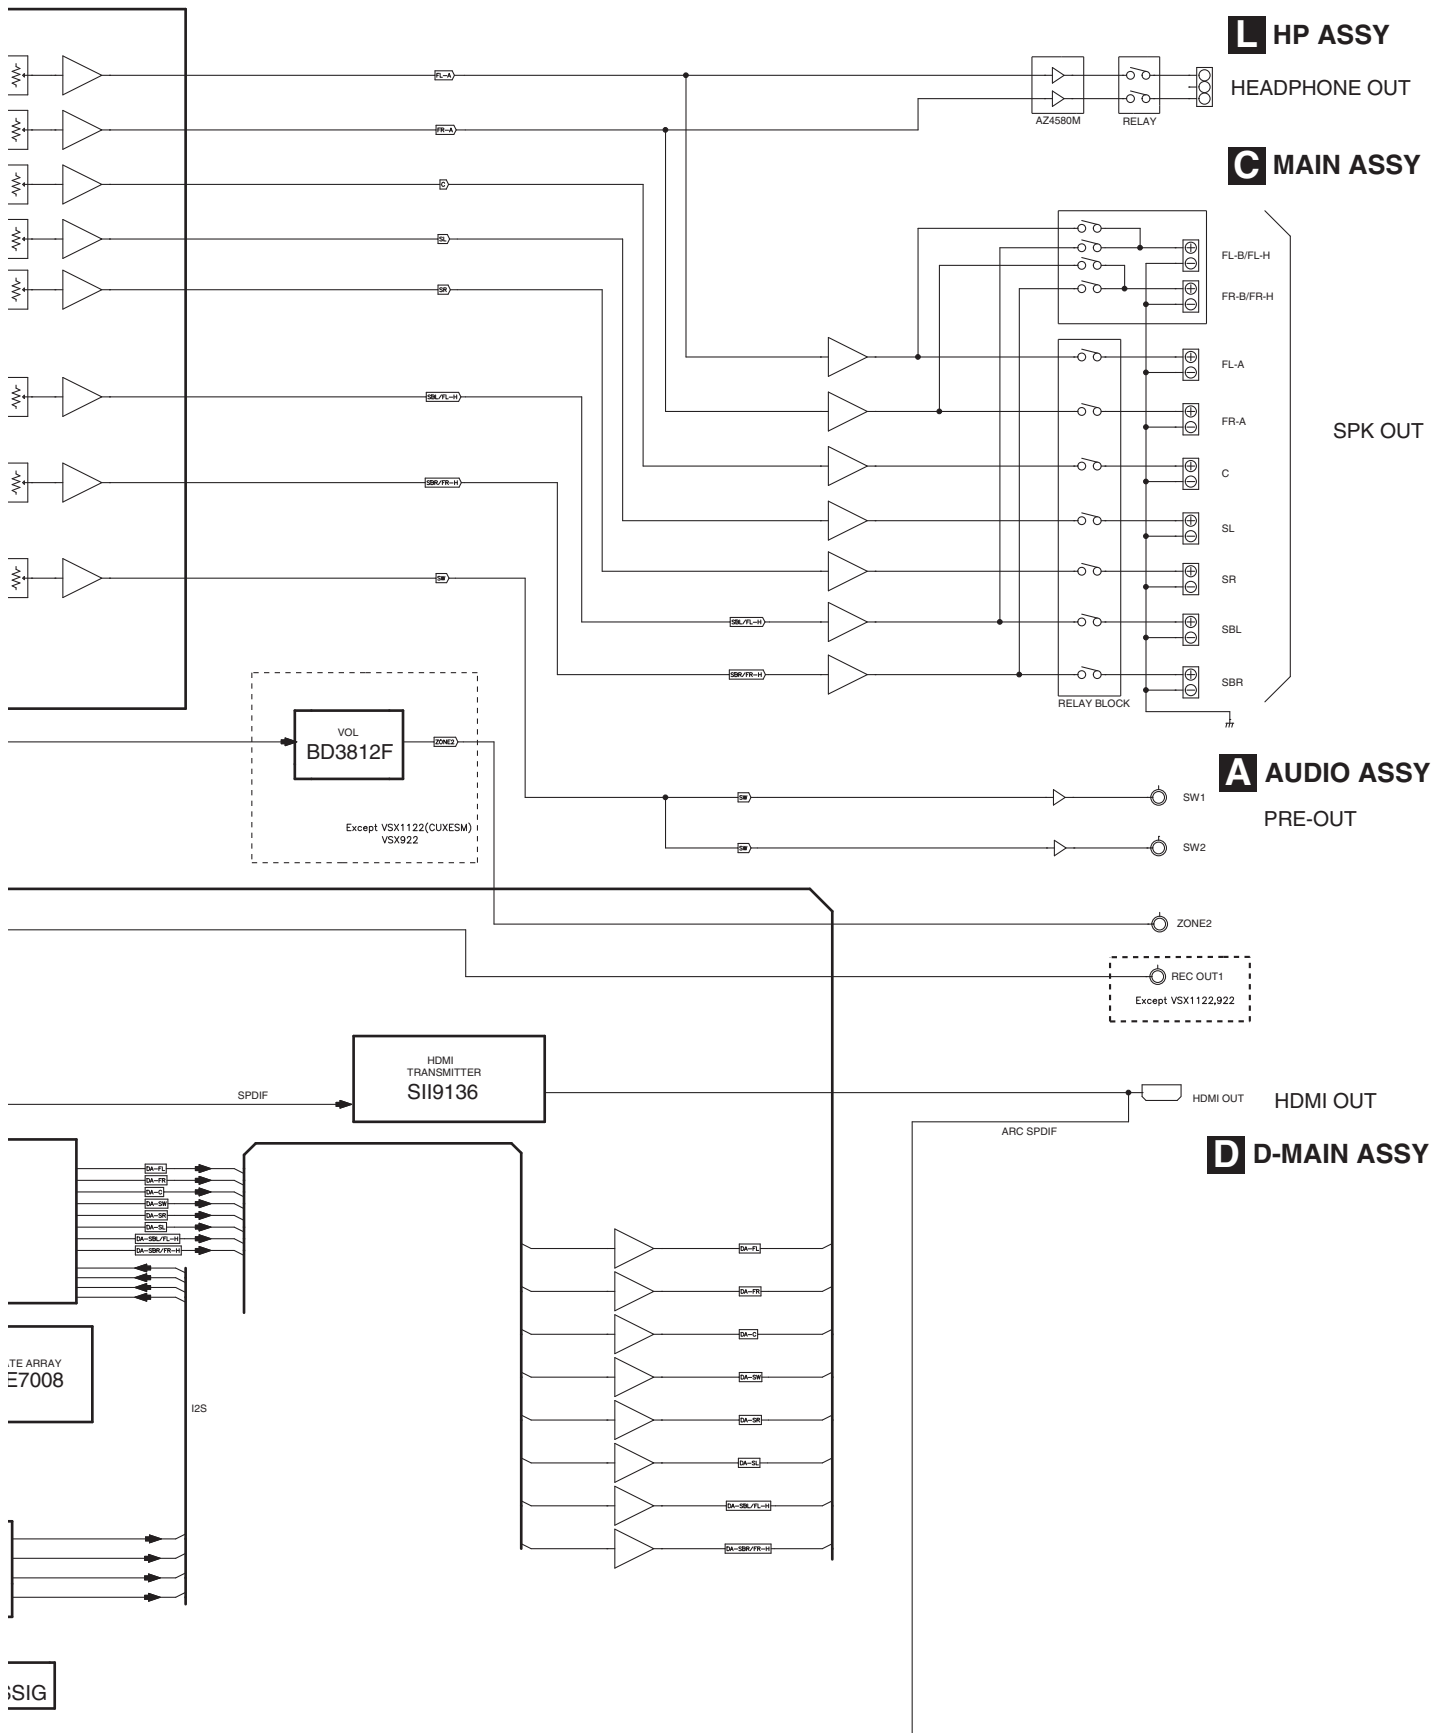


△


A




SPDIF → AMCLK → I2S → SYSCLK → FLG
 I2S BCK,LRCK

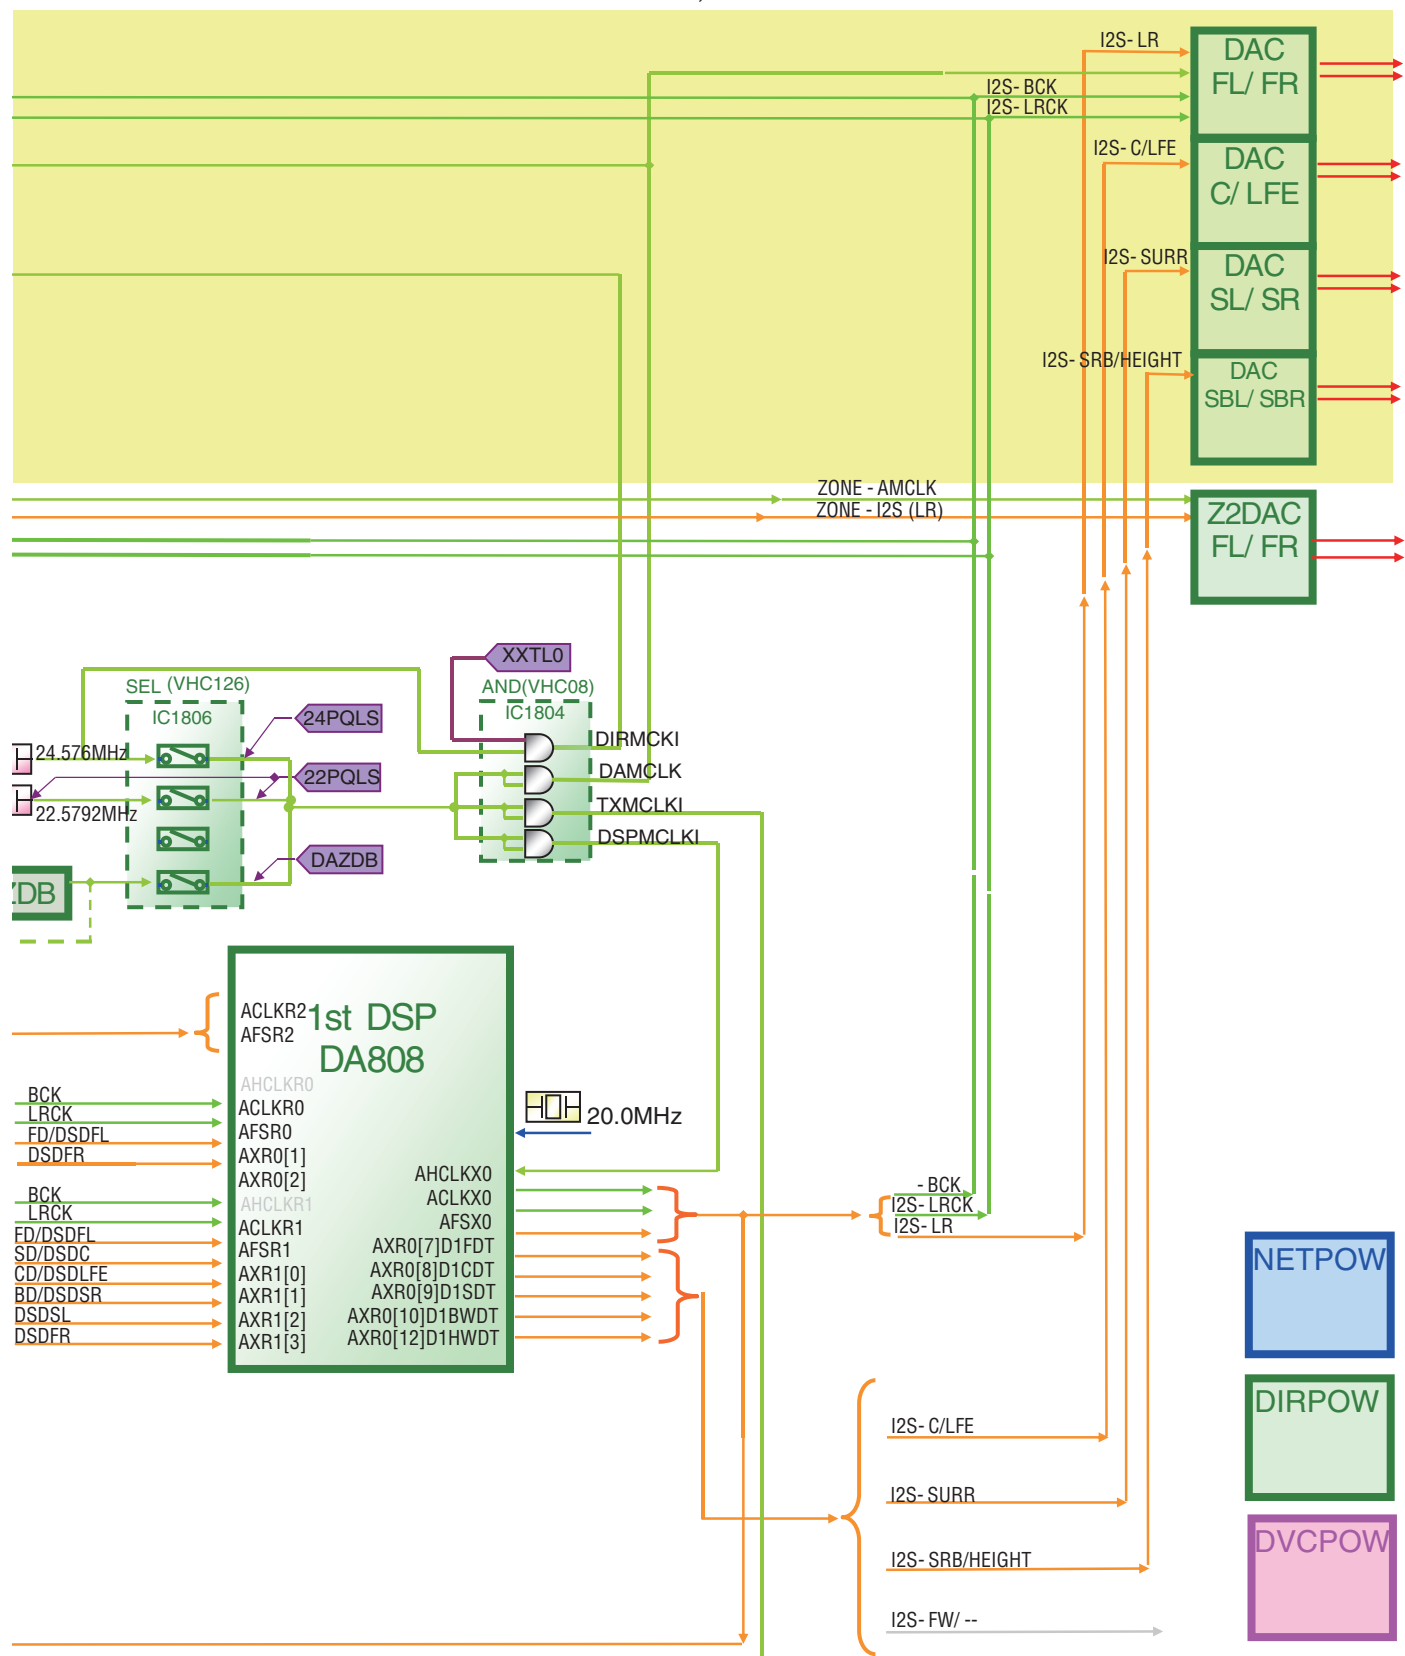

4.4 D-VIDEO BLOCK DIAGRAM

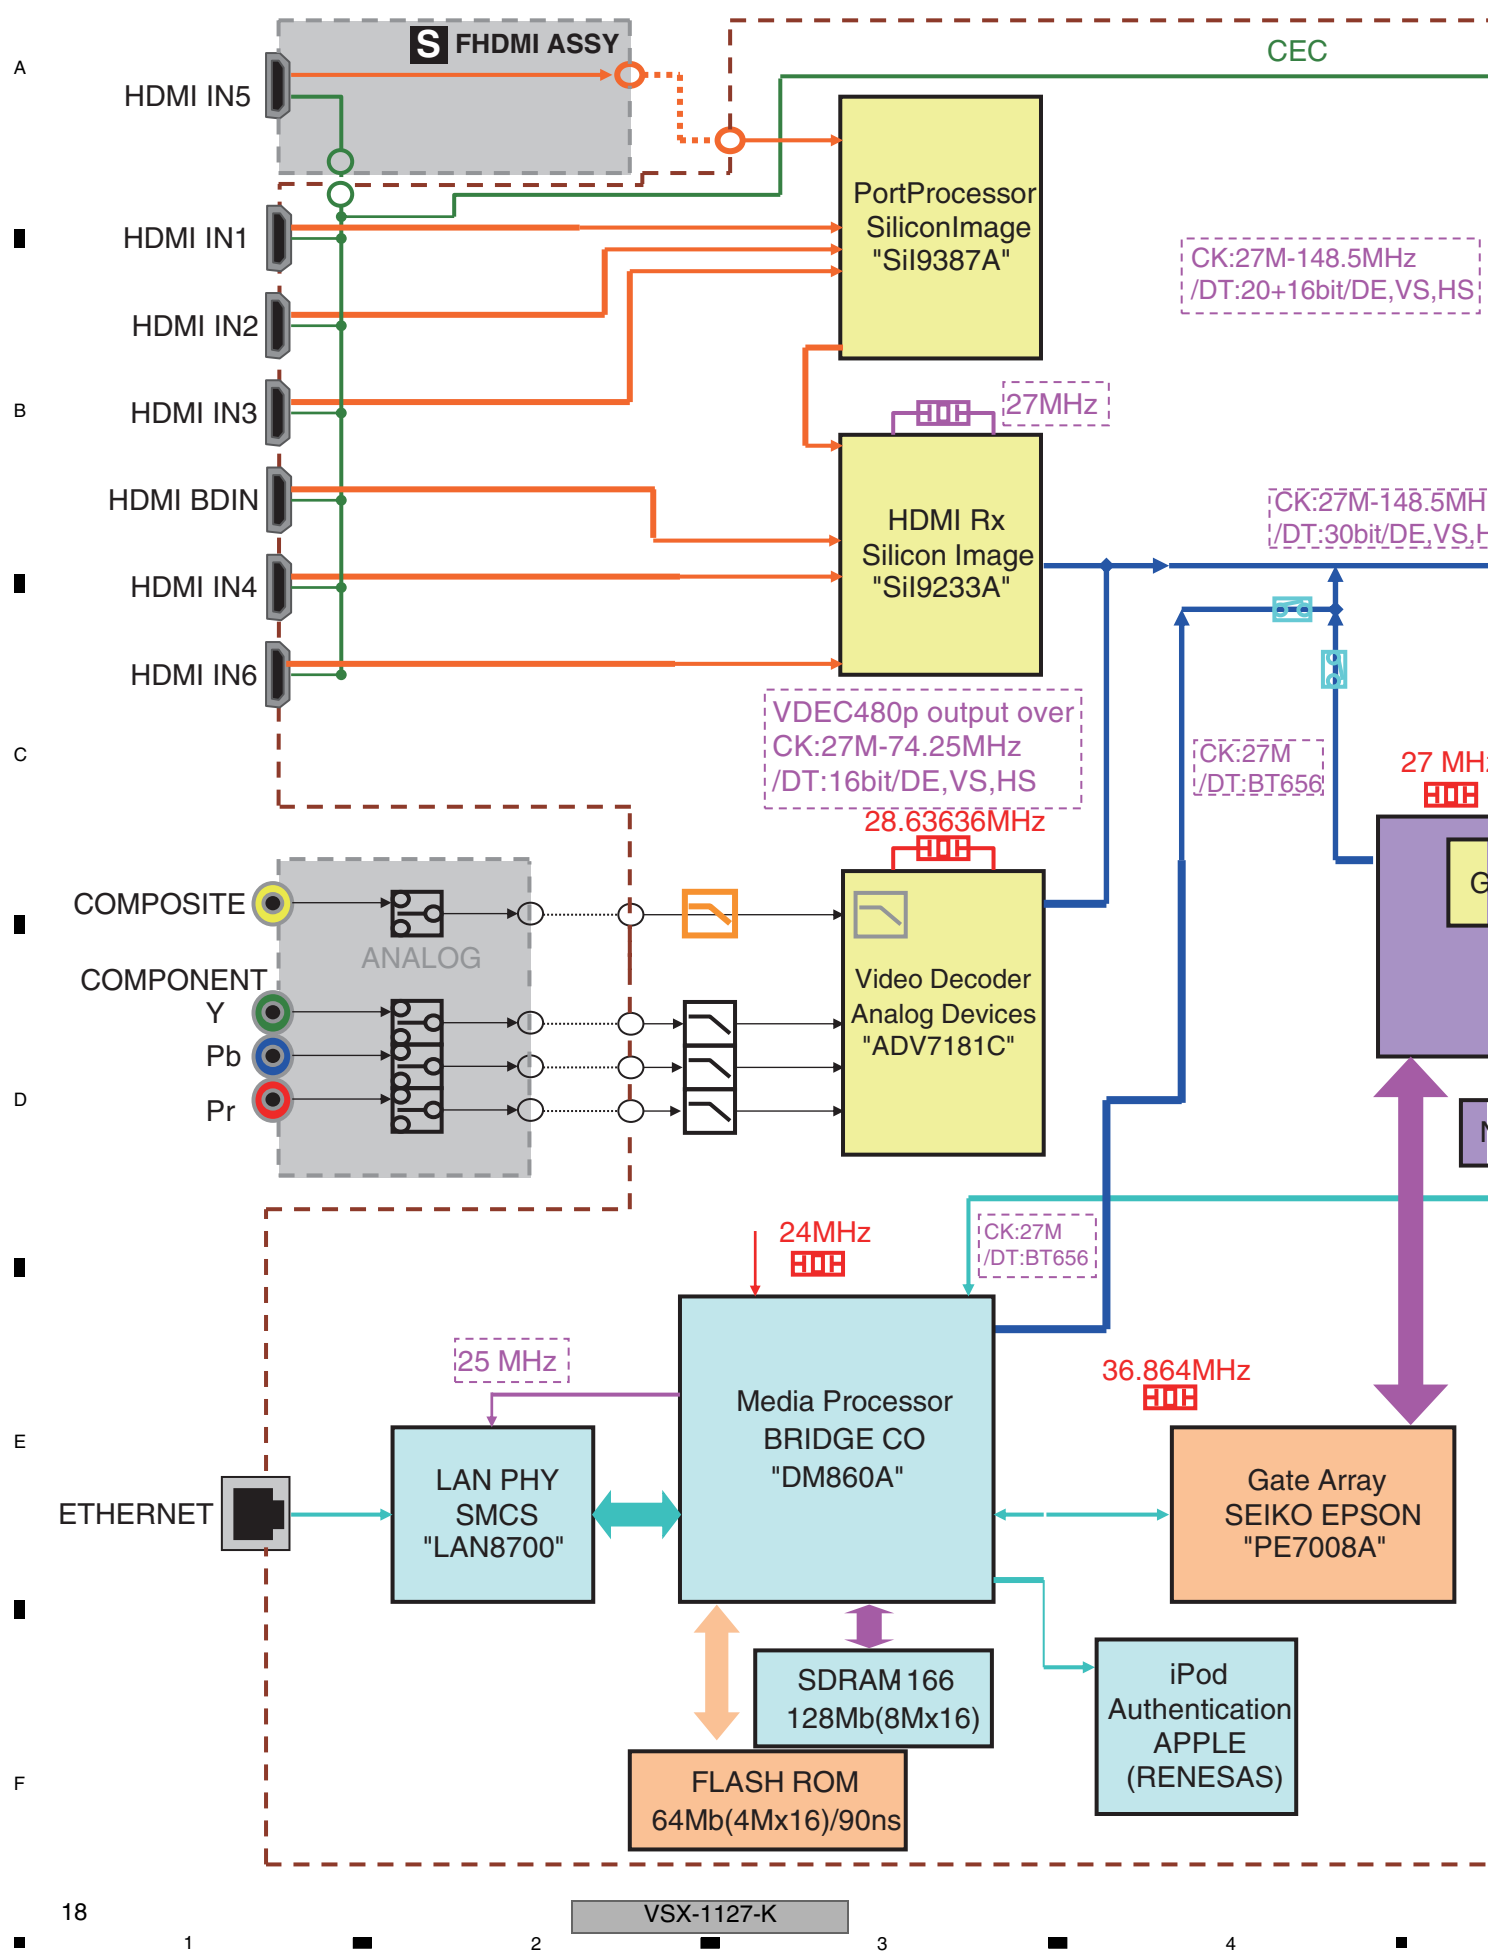


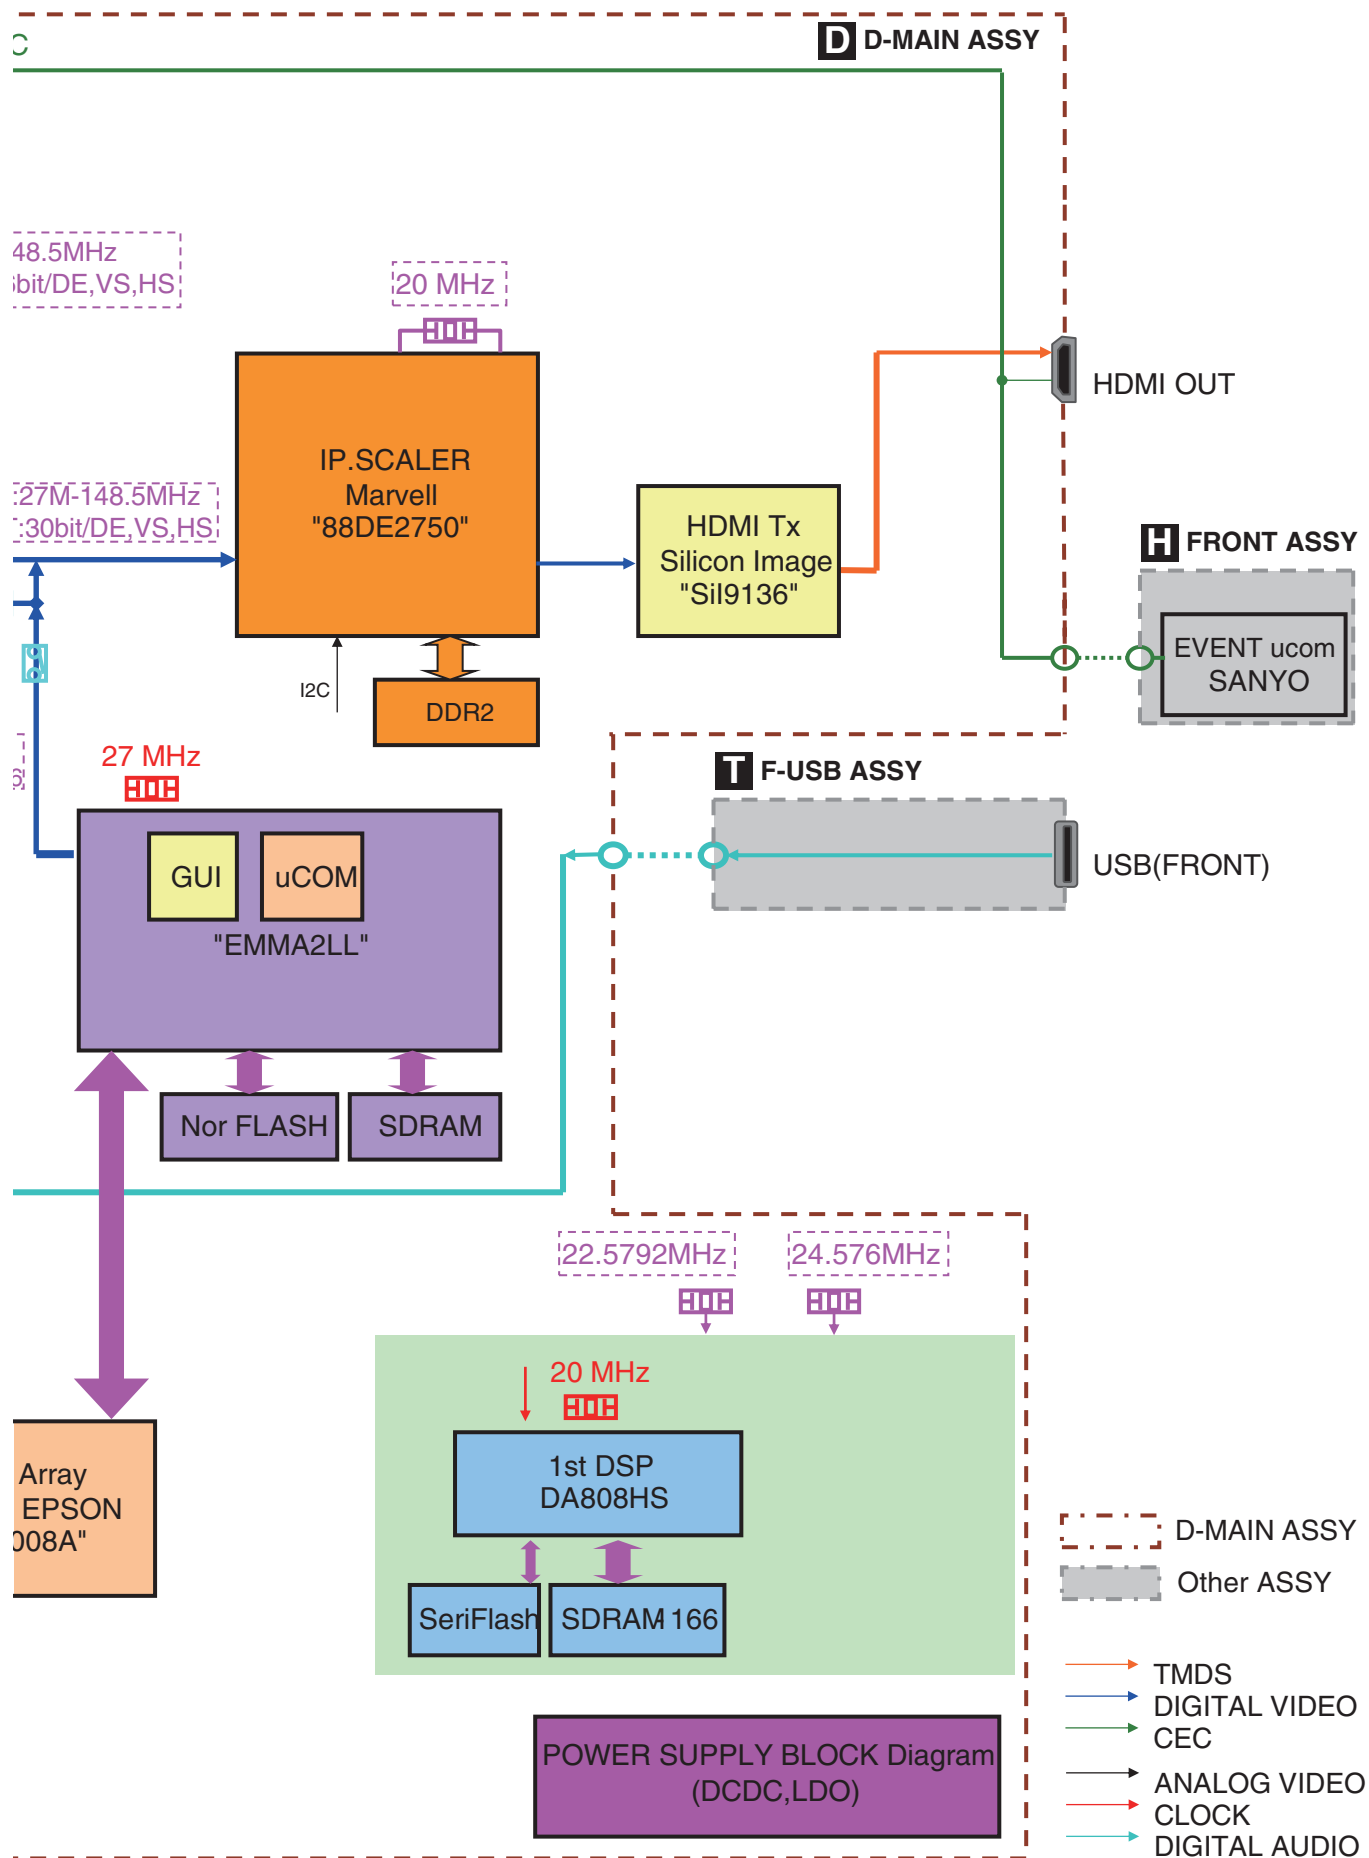

4.5 VIDEO BLOCK DIAGRAM


A

D D-MAIN ASSY

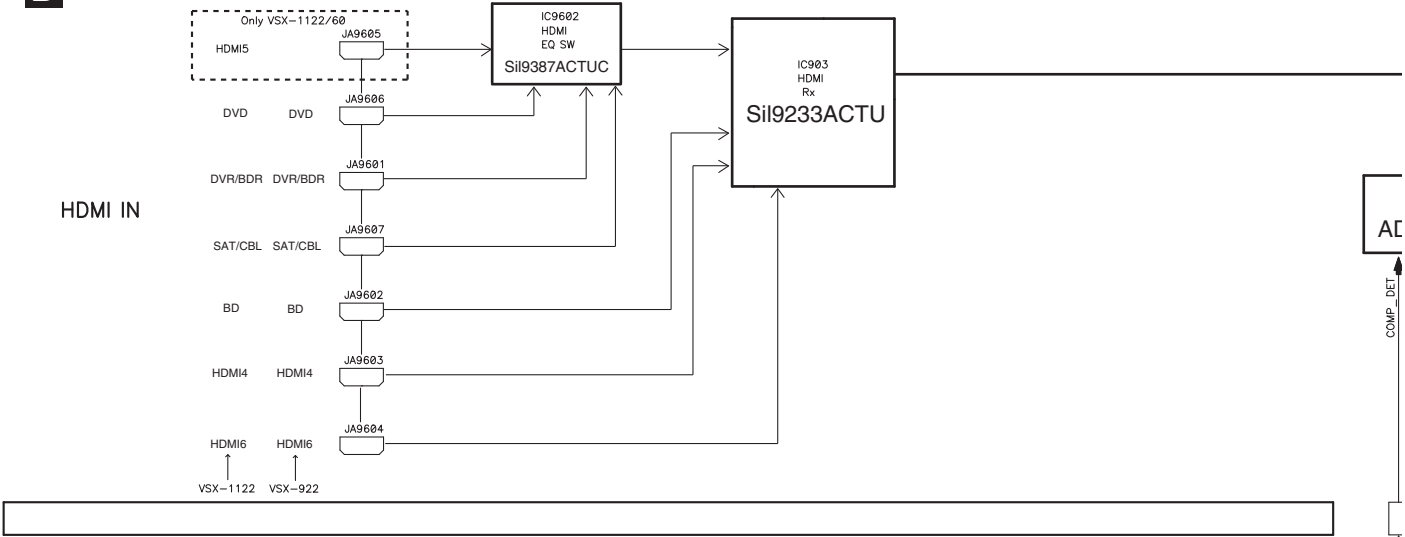


B

BACK

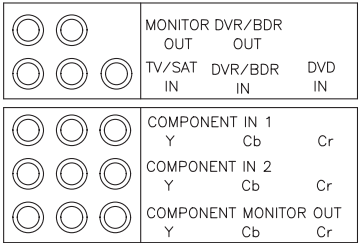

C


K FVIDEO ASSY

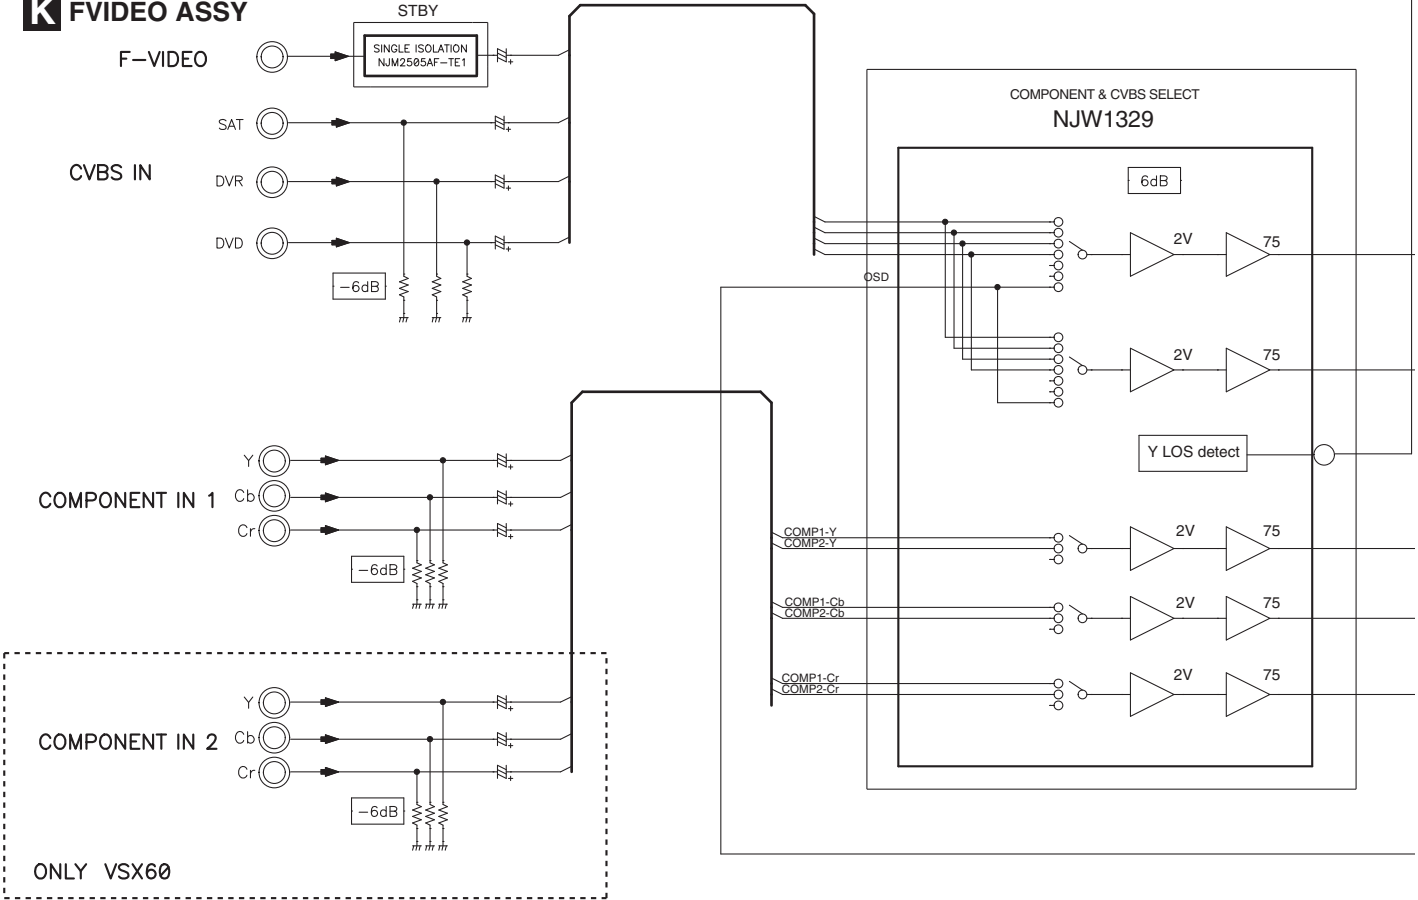

E

F

— TMS
 — Video BUS
 — Analog Video

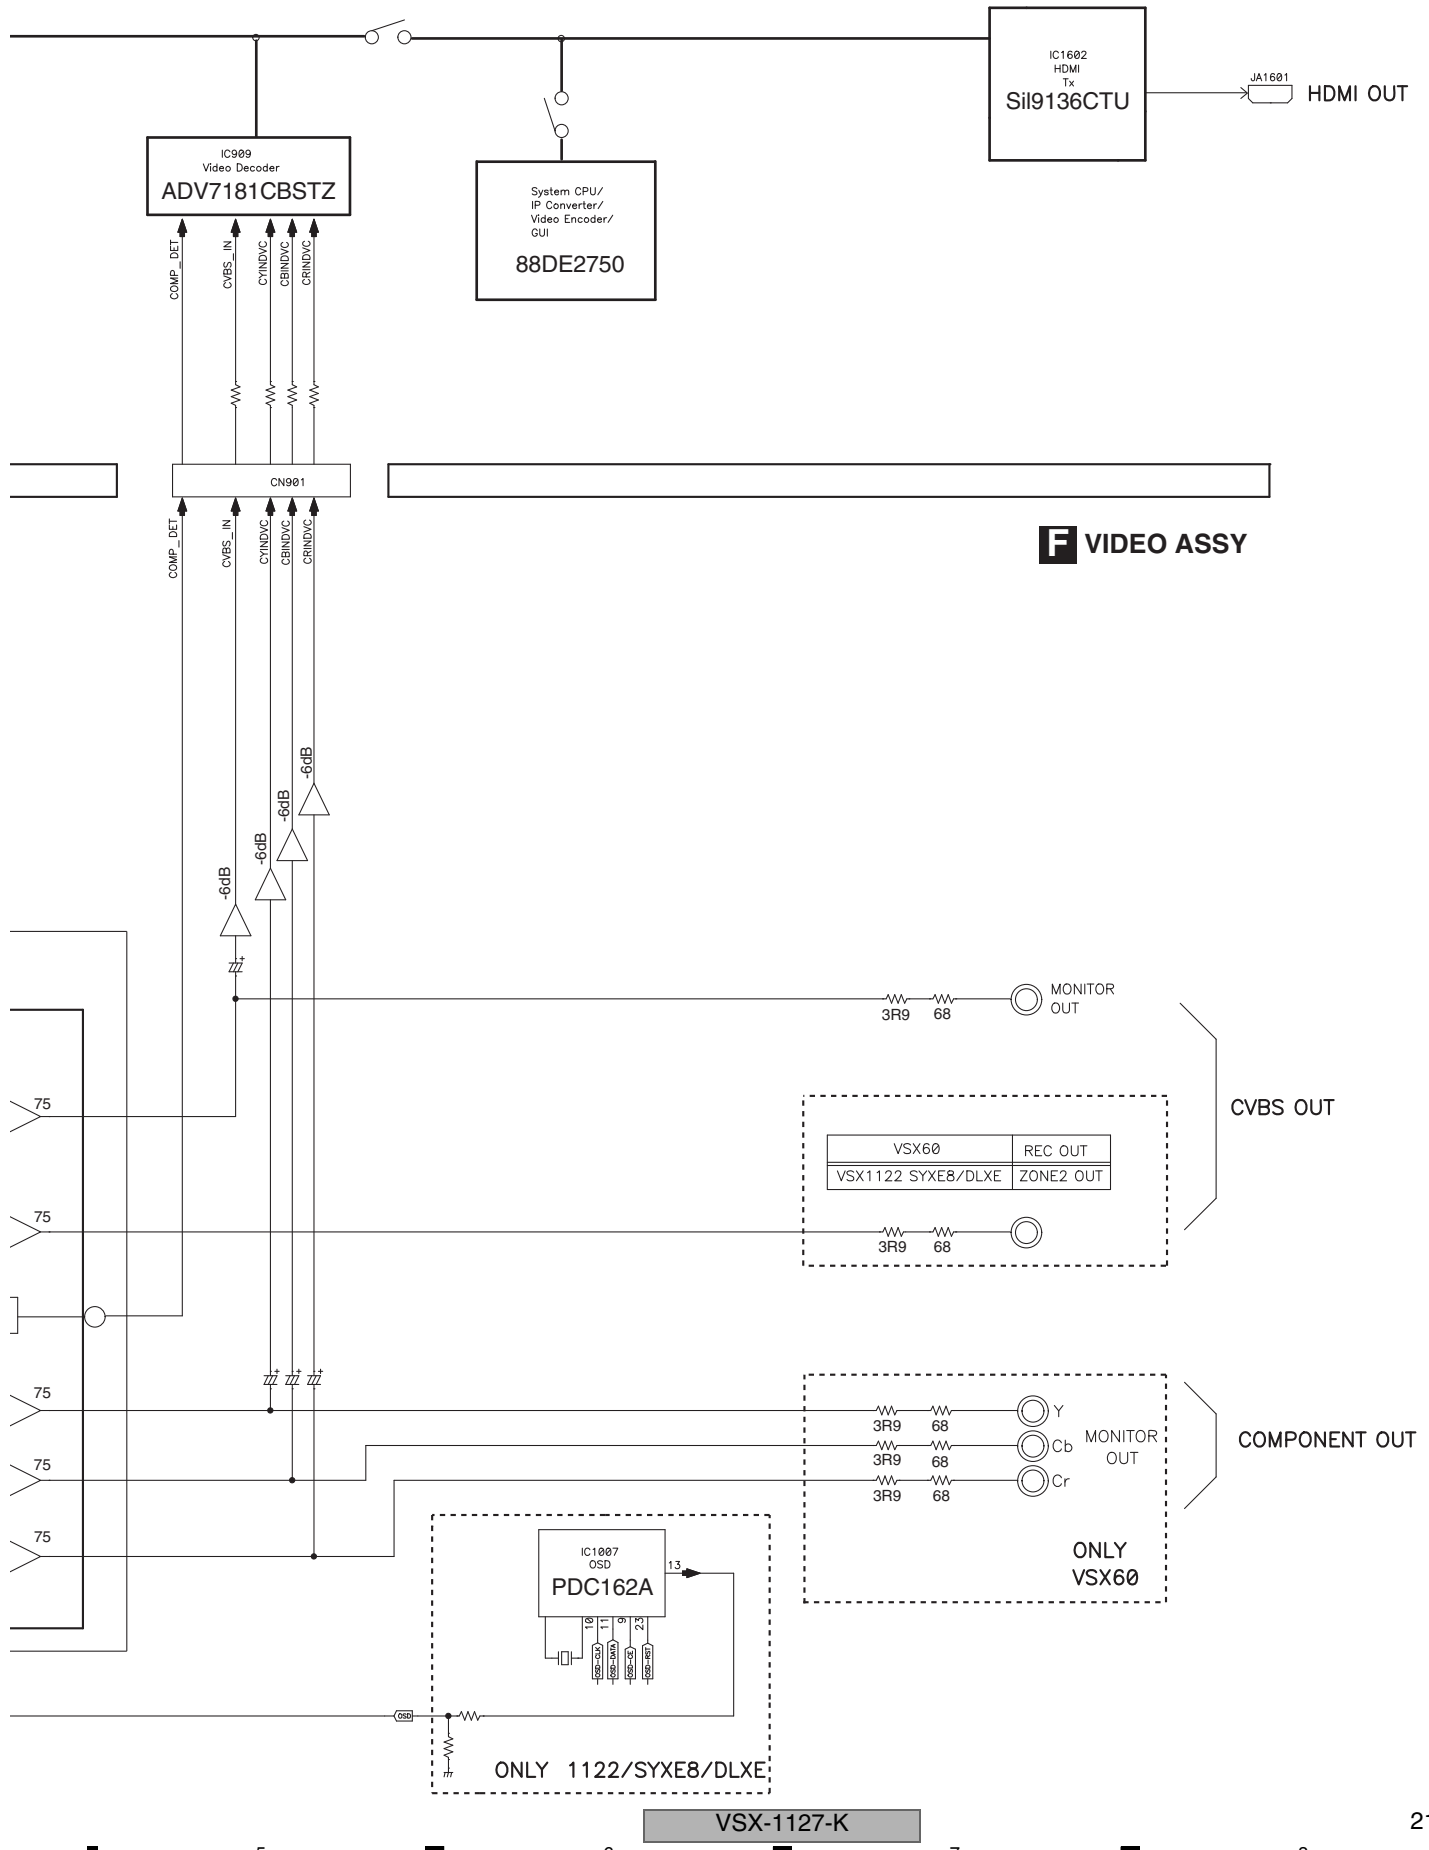

A

B

C

D

E

F

4.6 POWER SUPPLY BLOCK DIAGRAM

A


B


C

D

E

F

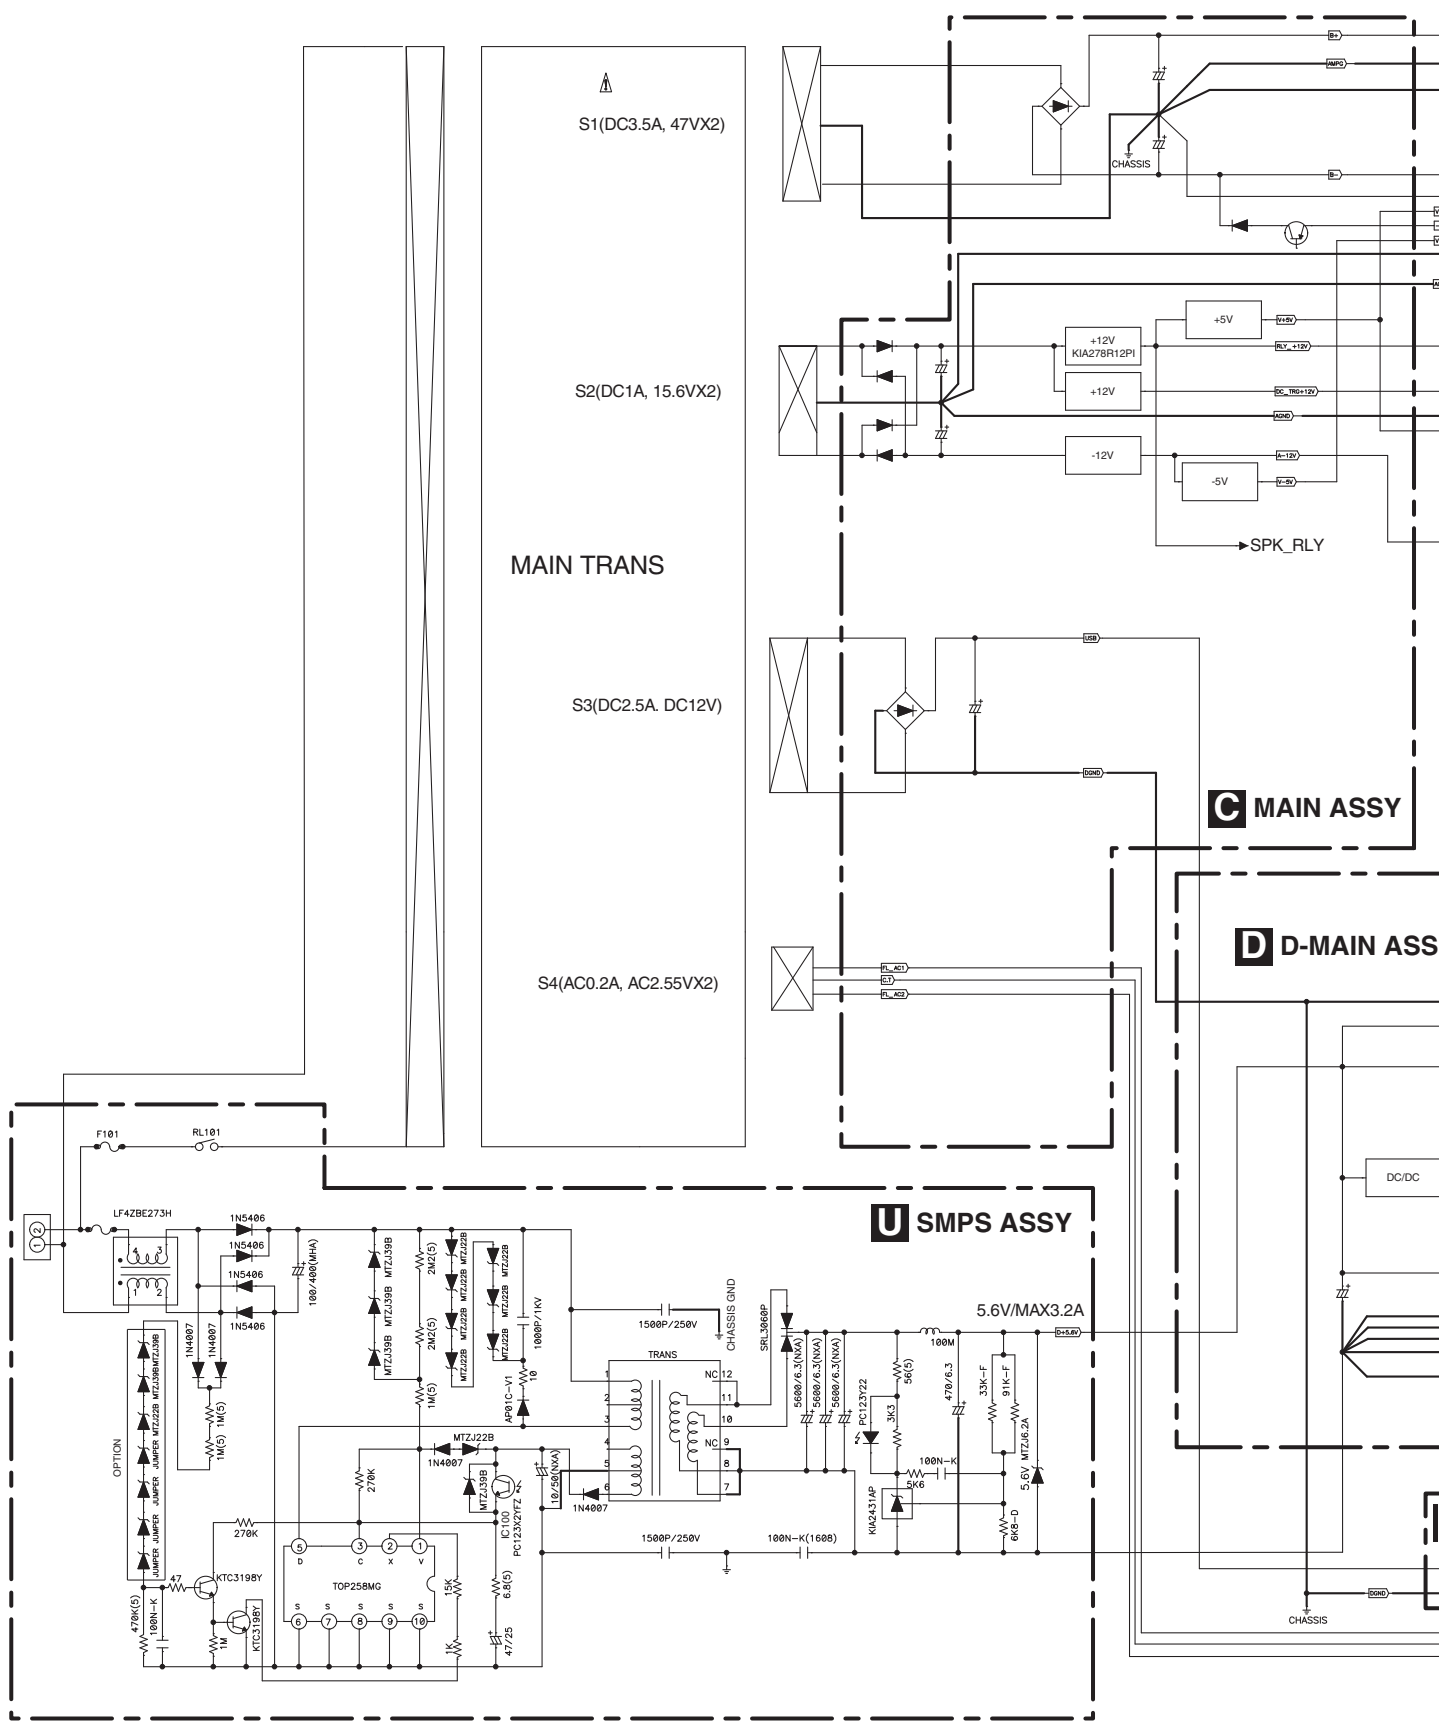

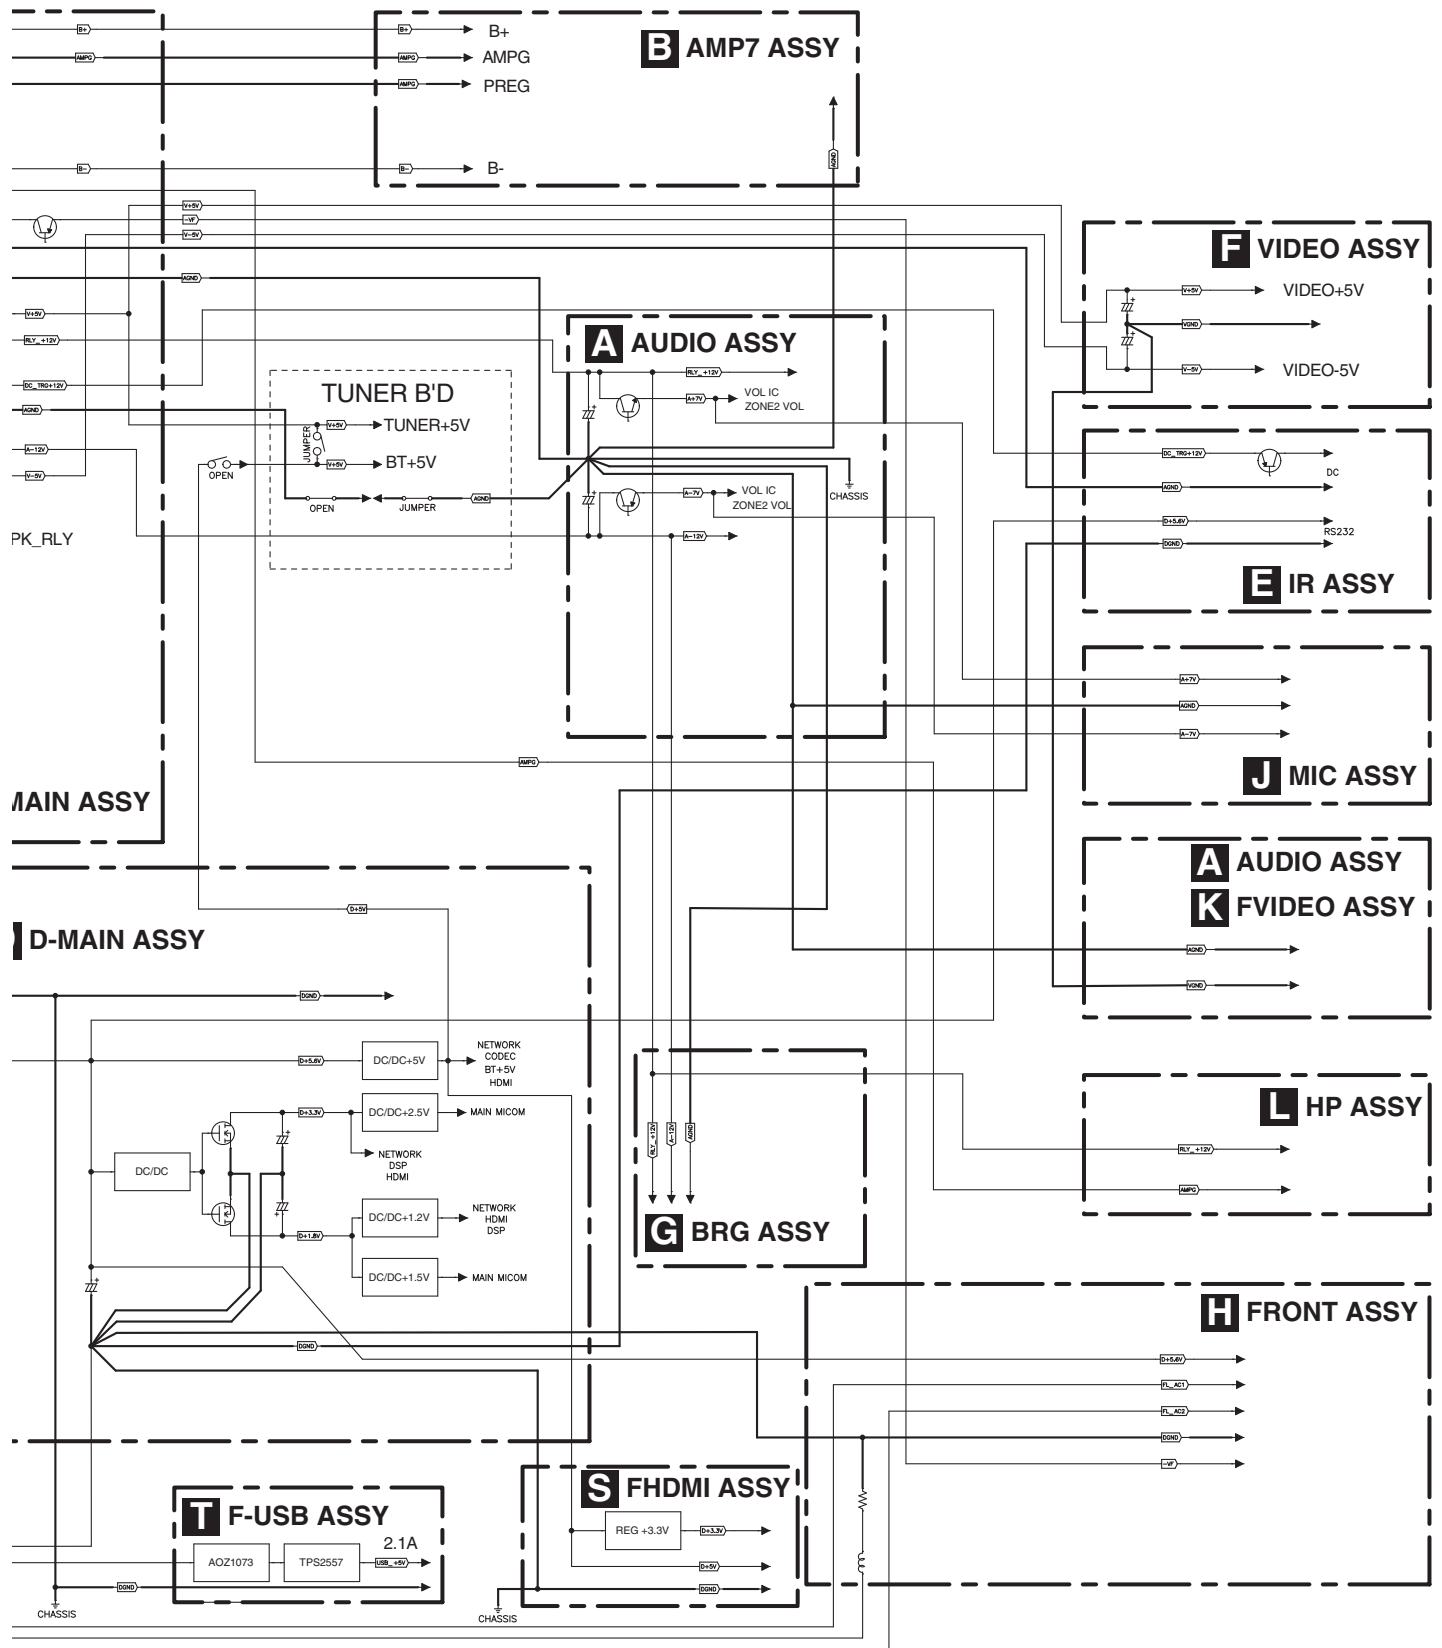


5. DIAGNOSIS

5.1 TROUBLESHOOTING


A No Power

This is just for general reference and does not including every single case.

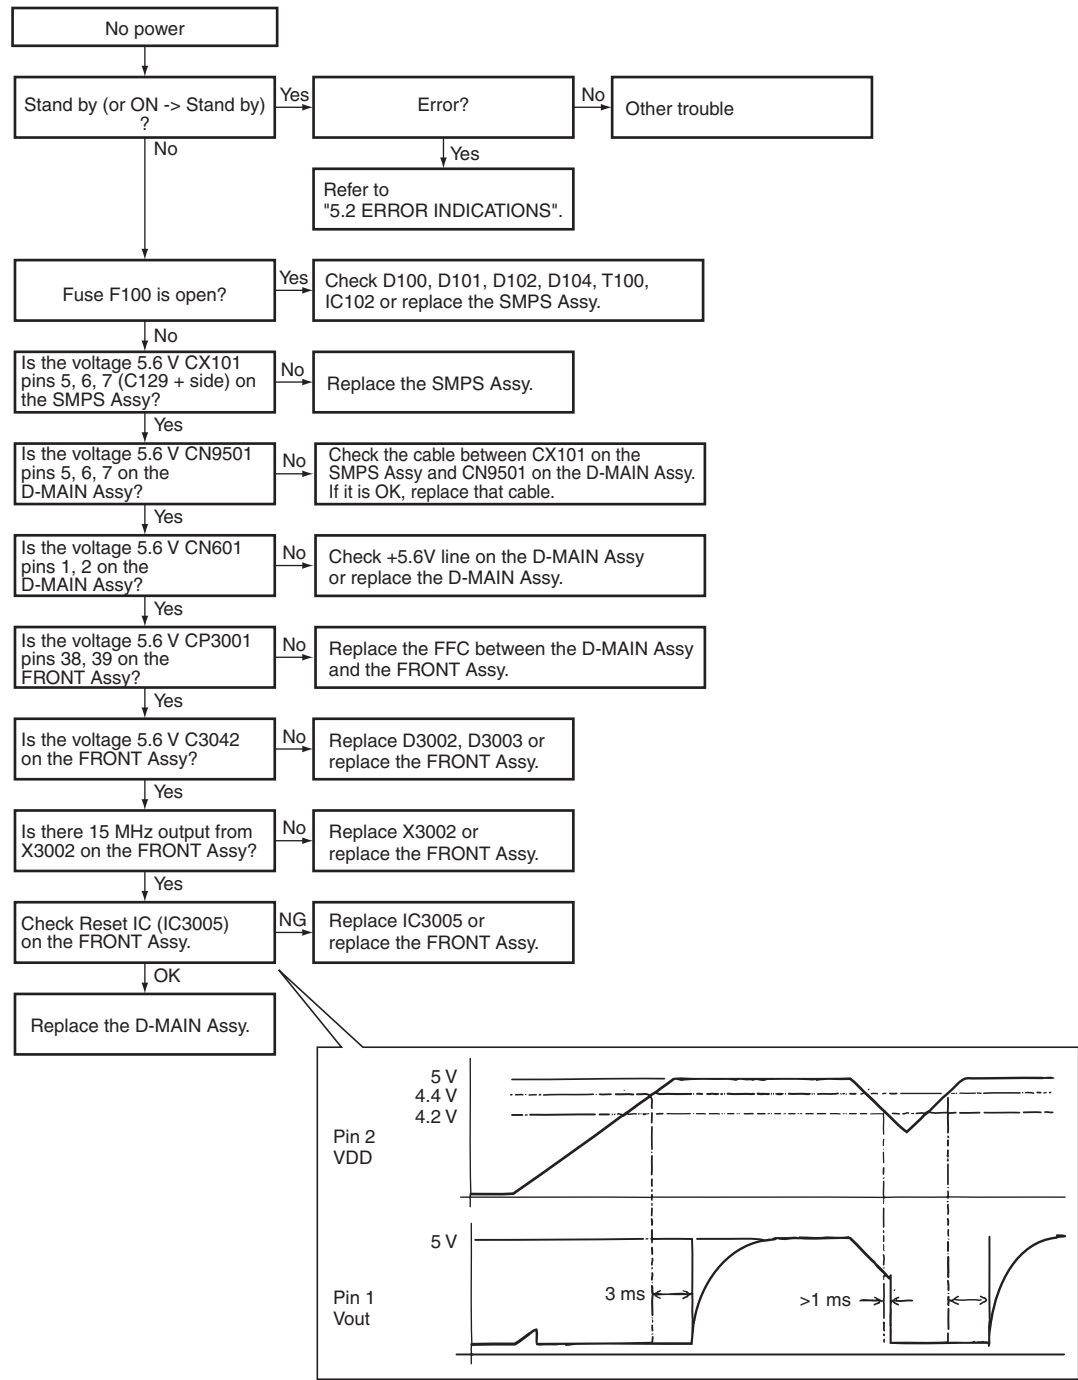


No FL Display


This is just for general reference and does not including every single case.

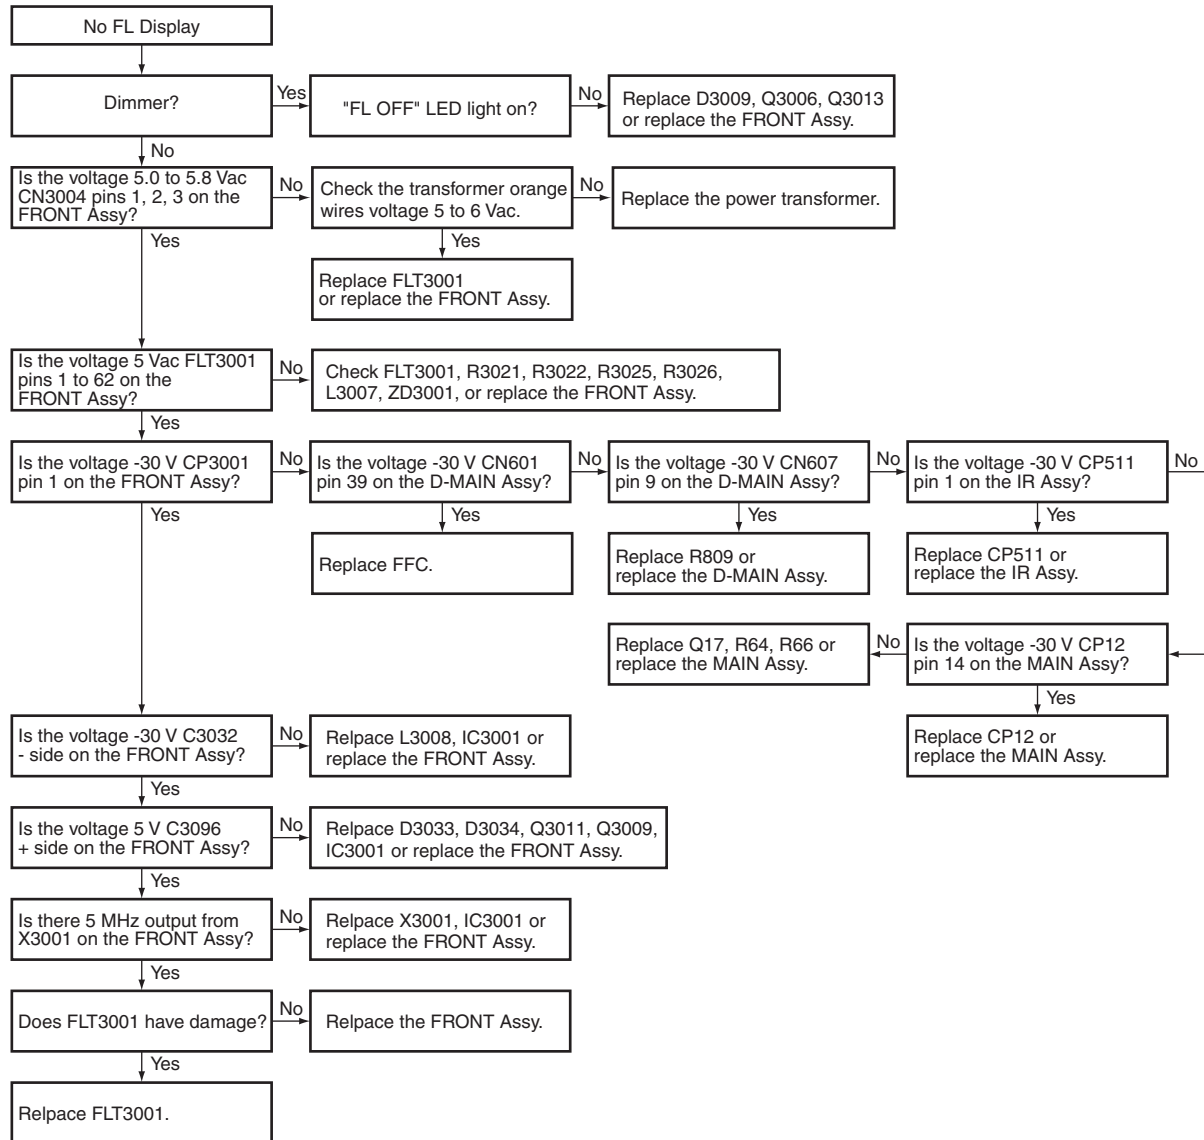

A No Sound

This is just for general reference and does not including every single case.

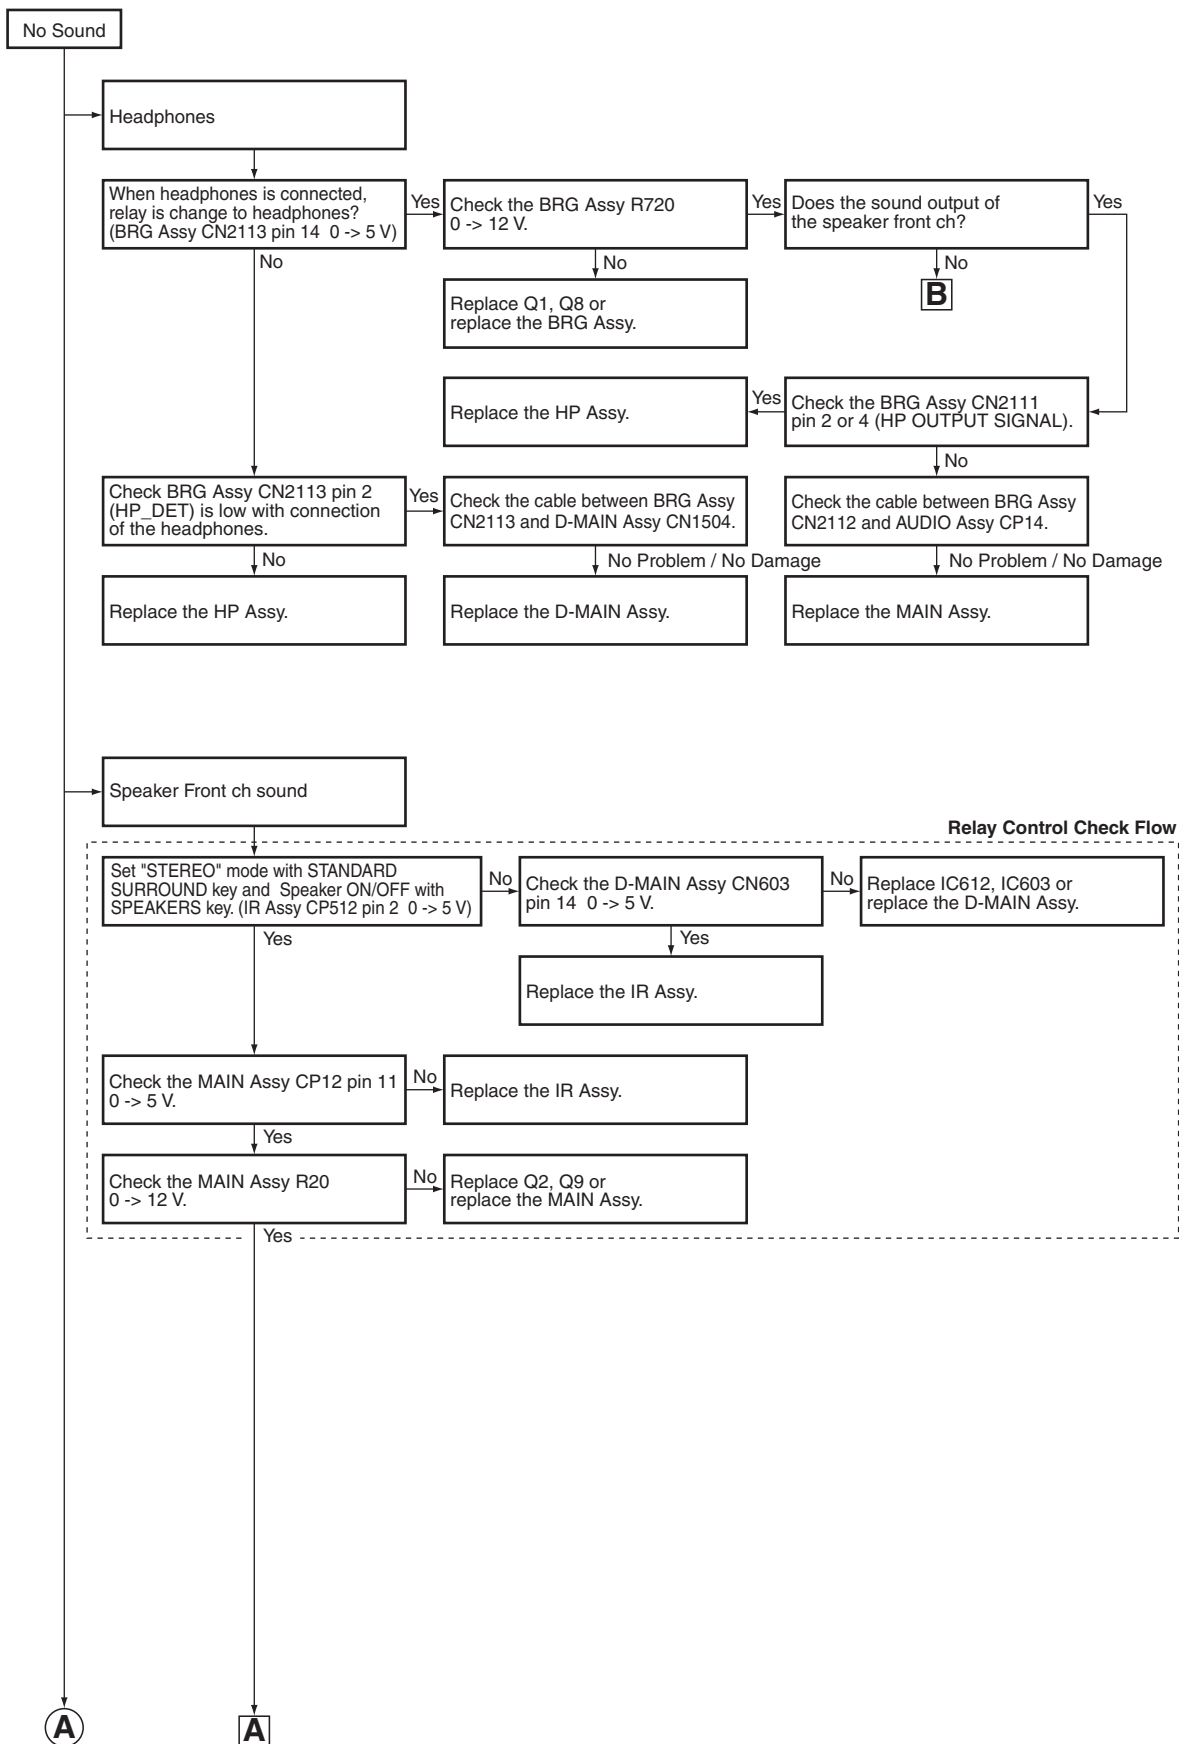

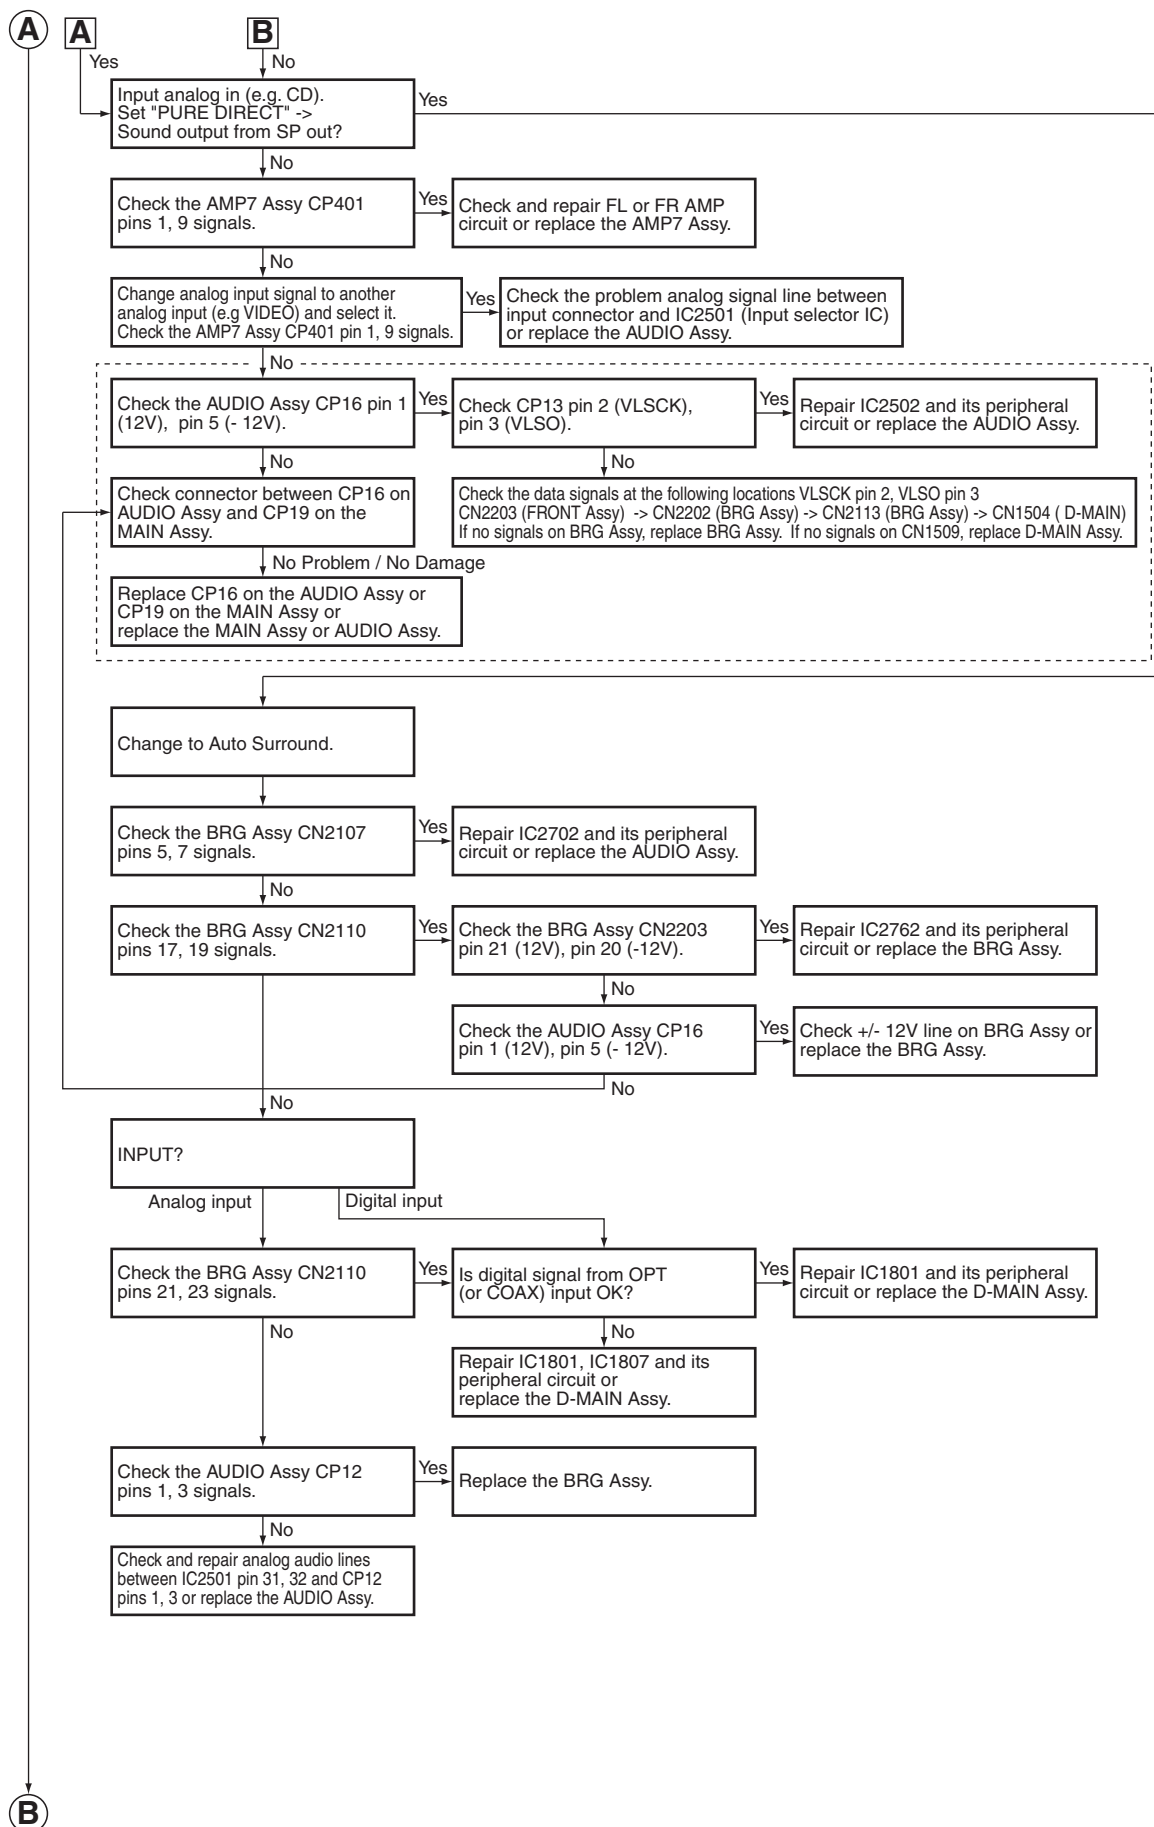

A

B

Speaker C (S SB SP-B etc) ch
(Front LR is OK)

Check SP System menu is appropriate
and connected speakers are not
selected [No] on SP Setting menu.

No

Change SP System and SP
Setting to correct setting.

Yes

Check Selection of Speaker system
by [SPEAKERS] key on front panel
is correct.

No

Change SP selection to correct
setting by [SPEAKER] key.

Yes

Check relay operating of problem ch.
(refer to schematic diagram and Relay
Control Check flow for Front ch)

Yes

Select Surround mode to
EX. STEREO in Advanced Surround.

No

SP-B no sound

Input analog signals to analog in
(e.g. CD), SP selection should be
"SP:B ON", check SBR, SBL channels.

Check signals of problem channel on
AMP7 Assy CP401 pins 3 (SL), 5 (C),
7 (SR), 11 (SBL), 13 (SBR) signals.

Yes

Check and repair AMP circuit of
problem channels
or replace the AMP7 Assy.

No

Check signals on BRG Assy CN2107
pins 9 (SR), 11 (SL), 13 (SW),
15 (C), 17 (SBR), 19 (SBL) signals.

Yes

Replace AUDIO Assy or
their peripheral circuit.

No

Check signals on BRG Assy CN2110
pins 5, 7, 9, 11, 13, 15 signals.
(Pin assign is same as CN2107)

Yes

Repair IC2742, IC2704, IC2782
and their peripheral circuit
or replace the BRG Assy.

No

Input PCM to COAX in or OPT in,
set Auto Surround.
Is Front LR SP output sound is OK?

Yes

Replace the D-MAIN Assy.

No

Repair IC1801 and its peripheral
circuit or replace the D-MAIN Assy.

Speaker System Menu

Setup name	Output sound
Speaker B	SP-B
Normal (SB/FH)	Front High or SB
Normal (SB/FW)	Front Wide or SB

[If Speaker System is "Normal (SB/FH)" or
"Normal (SB/FW)" and speaker setting by
SPEAKER key is "SP: SB ON", there is no
sound from FH or FW.

B

C


D

E

F


C

C

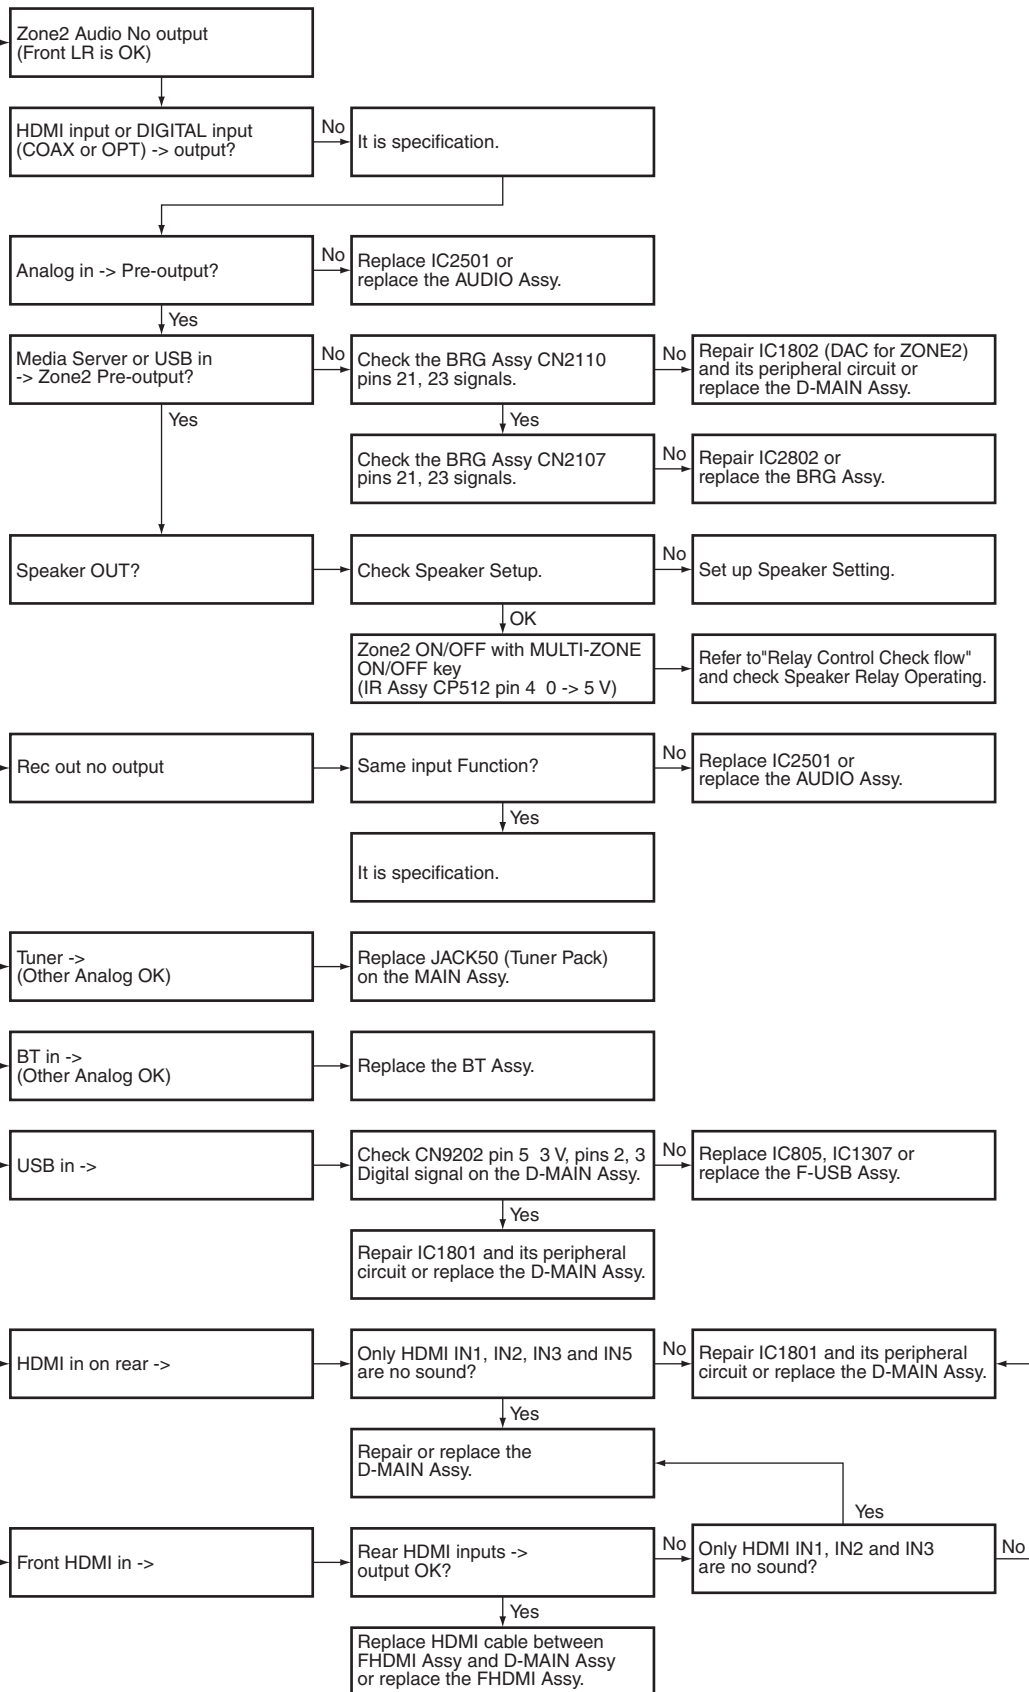

D

A

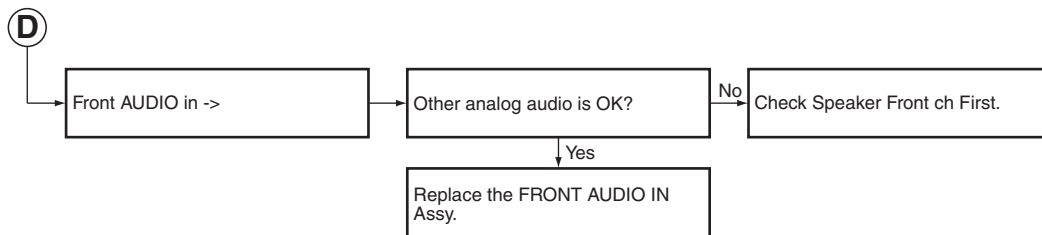

B

No Picture


This is just for general reference and does not including every single case.

C

D

E

F

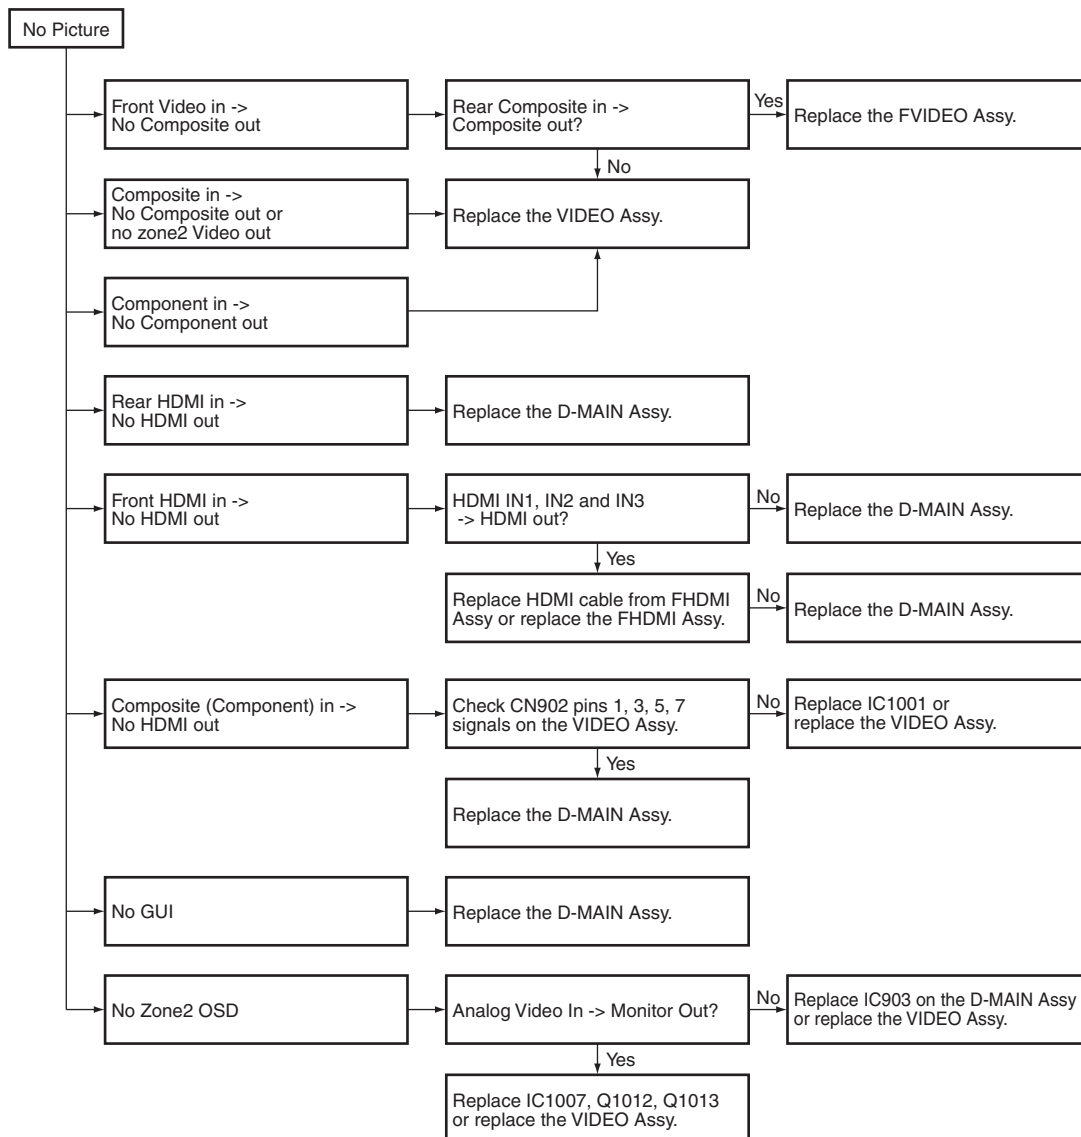

Others

This is just for general reference and does not including every single case.

12V Trig

12V Trig

No

RS-232C

RS-232C

No

IR

IR

↓

Remote control

Yes

↓ No

Replace the FRONT Assy.

Replace the IR Assy.

5.2 ERROR INDICATIONS

Error Indications When an Abnormality in The Amplifier System is Detected

[Purpose]

Errors upon detection of abnormalities in the amp system are indicated.


[Error Indications]

Item	FL Display	LED Flashes	NG Count.	Detection Method	Process After Detection	Description / Remarks
"AMP DC" ("DC output from SP term") detection	Flashing "AMP ERR" for 3 seconds	ADVANCED MCACC LED	DC	XDCERR (Pin 80 of IC3004) Detect "L"	1) Muting on, speaker relay off. 2) "AMP ERR" flashing 3) Shutdown after 3 seconds. 4) "ADVANCED MCACC" LED flashing 5) Power on is not acceptable.	To detect high DC output from amplifier damage (defect status). A process to protect speakers (for protection of connected external devices). For checking, refer to "How to enter release mode" below. If the DC detection port become "H" for 3 seconds, the unit will returns to normal condition automatically.
"AMP overload" detection.	N/A	iPod iPhone iPad LED	OL	XOLERR (Pin 71 of IC3004) Detect "L"	1) Muting on, speaker relay off. 2) Shutdown immediately. 3) "iPod iPhone iPad" LED flashing 4) Power on is acceptable.	To detect overloading (abnormal status) with low-load driving or a short circuit of the speaker terminals (for protection of the amplifier).
"Over Heat" detection.	Flashing "AMP OVERHEAT" for 3 seconds	FL OFF LED	STMP	TEMPERR5 (Pin 72 of IC3004) Detect "H" (REDI_DET)	1) Muting on, speaker relay off. 2) "OVERHEAT" flashing 3) Shutdown after 3 seconds. 4) "FL OFF" LED flashing 5) Power on is acceptable after 1 minute.	To detect overheat of inner temperature.
"Abnormality DC voltage of the Digital power supply" detection	N/A	iPod iPhone iPad LED	DERR	XVDDERR (Pin 70 of IC3004) Detect "L"	1) Muting on, speaker relay off. 2) Shutdown immediately. 3) "iPod iPhone iPad" LED flashing 4) Power on is acceptable.	To detect the abnormality voltage of Digital power supply circuit for the D-MAIN Assy.
"USB Overload" detection	"Over Current" No Flashing	N/A	N/A	USB ERR (VCO0) (Pin K2 of IC9204 (DM860A)) Detect "H"	1) Bass Power off 2) Display "Over Current"	To detect the connected USB device is overload. (over 2.1 A)
"BT Adapter overload" detection.	"ADP OVERLOAD" No Flashing	N/A	N/A	BTOL (MIL_CRS) (Pin R14 of IC9204 (DM860A)) Detect "H"	1) Adapter port power off 2) Display "ADP OVERLOAD"	To detect the connected Blue Tooth Adapter device is overload. (over 100 mA)
"HDCP of HDMI Error" detection	Flashes "HDCP ERROR" for 5 seconds	N/A	N/A	Read Register value	1) Display "HDCP ERROR"	The monitor does not support HDCP type or is in standby mode. (Warning indication for HDMI Simplay)
"Analog Input Over" detection	"OVER" Icon lights 1 second	N/A	N/A	DSP firmware Detect	While the Icon lights 1 second, when there is no ANALOG INPUT OVER detection, the Icon stops lighting and returns to normal display.	To detect the over-input of the analog audio to the A/D converter. When the Icon lights frequently, output level of the source equipment is high and a sound is distorted. Turn on the Analog Att switch.
Analog POWER SUPPLY Error	N/A	FL OFF LED	XPRT	XPROTECT (Pin 83 of IC3004)	1) Muting on, speaker relay off. 2) Shutdown immediately. 3) "FL OFF" LED flashing 4) Power on is acceptable after 1 minute.	Power-on impossible for 1 min.
"Over Heat" detection	N/A (VOL LEVEL)	N/A	N/A	TEMP L (TR_DET) (Pin 81 of IC3004)	VOL 3 dB down	After this error is detected, the system interrupts the OVER HEAT detection for 2 minutes.
"WiFi Over Current" detection	WLAN POW ERR	N/A	N/A	XWUSB ERR (Pin 45 of IC3004)	WUSBPOW is set to L.	To detect the connected WiFi Adapter device is overload. (over 600 mA)


[How to Enter Release Mode]

During Standby mode, simultaneously press and hold the "TUNE ↓" and "MULTI-ZONE ON/OFF" keys for 5 seconds.

[1] Overload and DC Protection Circuit

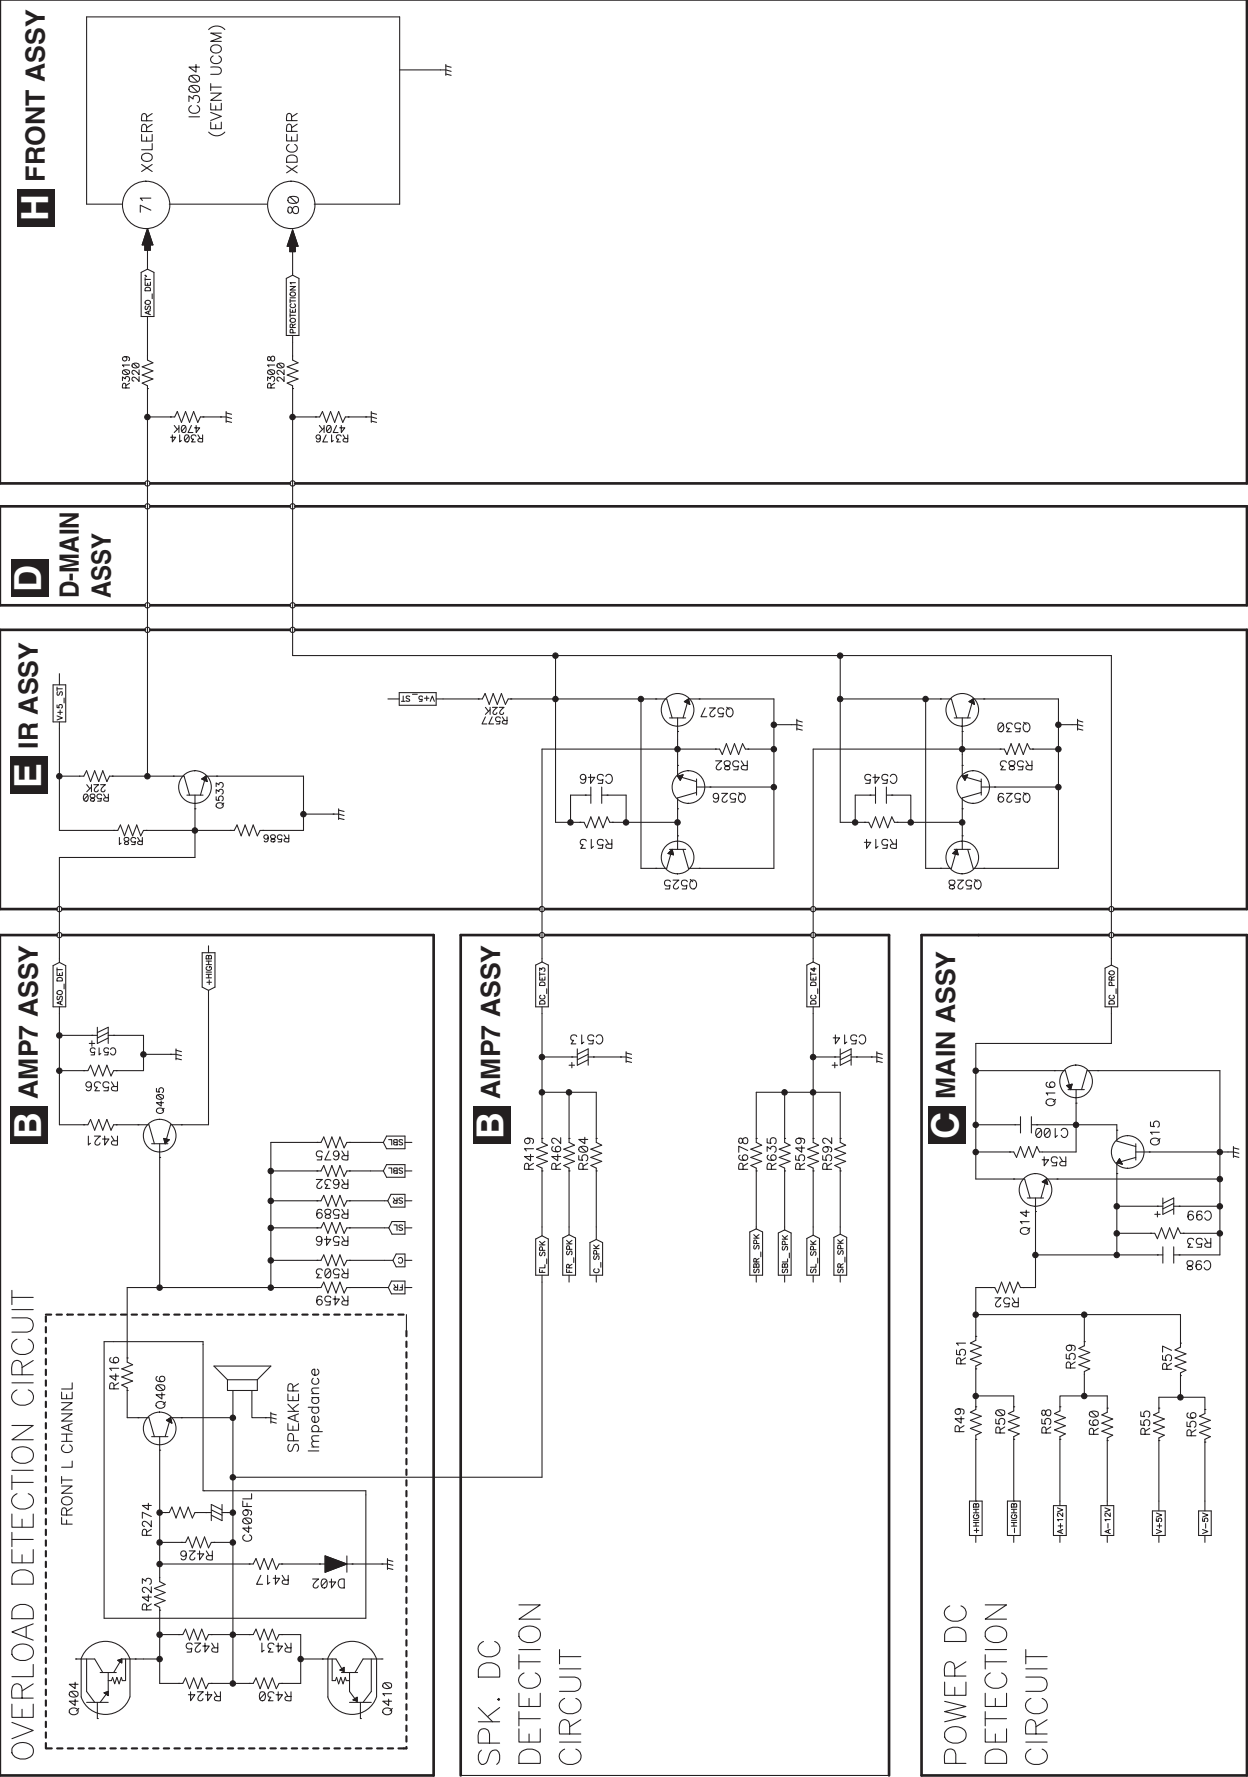


A [2] TEMP Protection Circuit

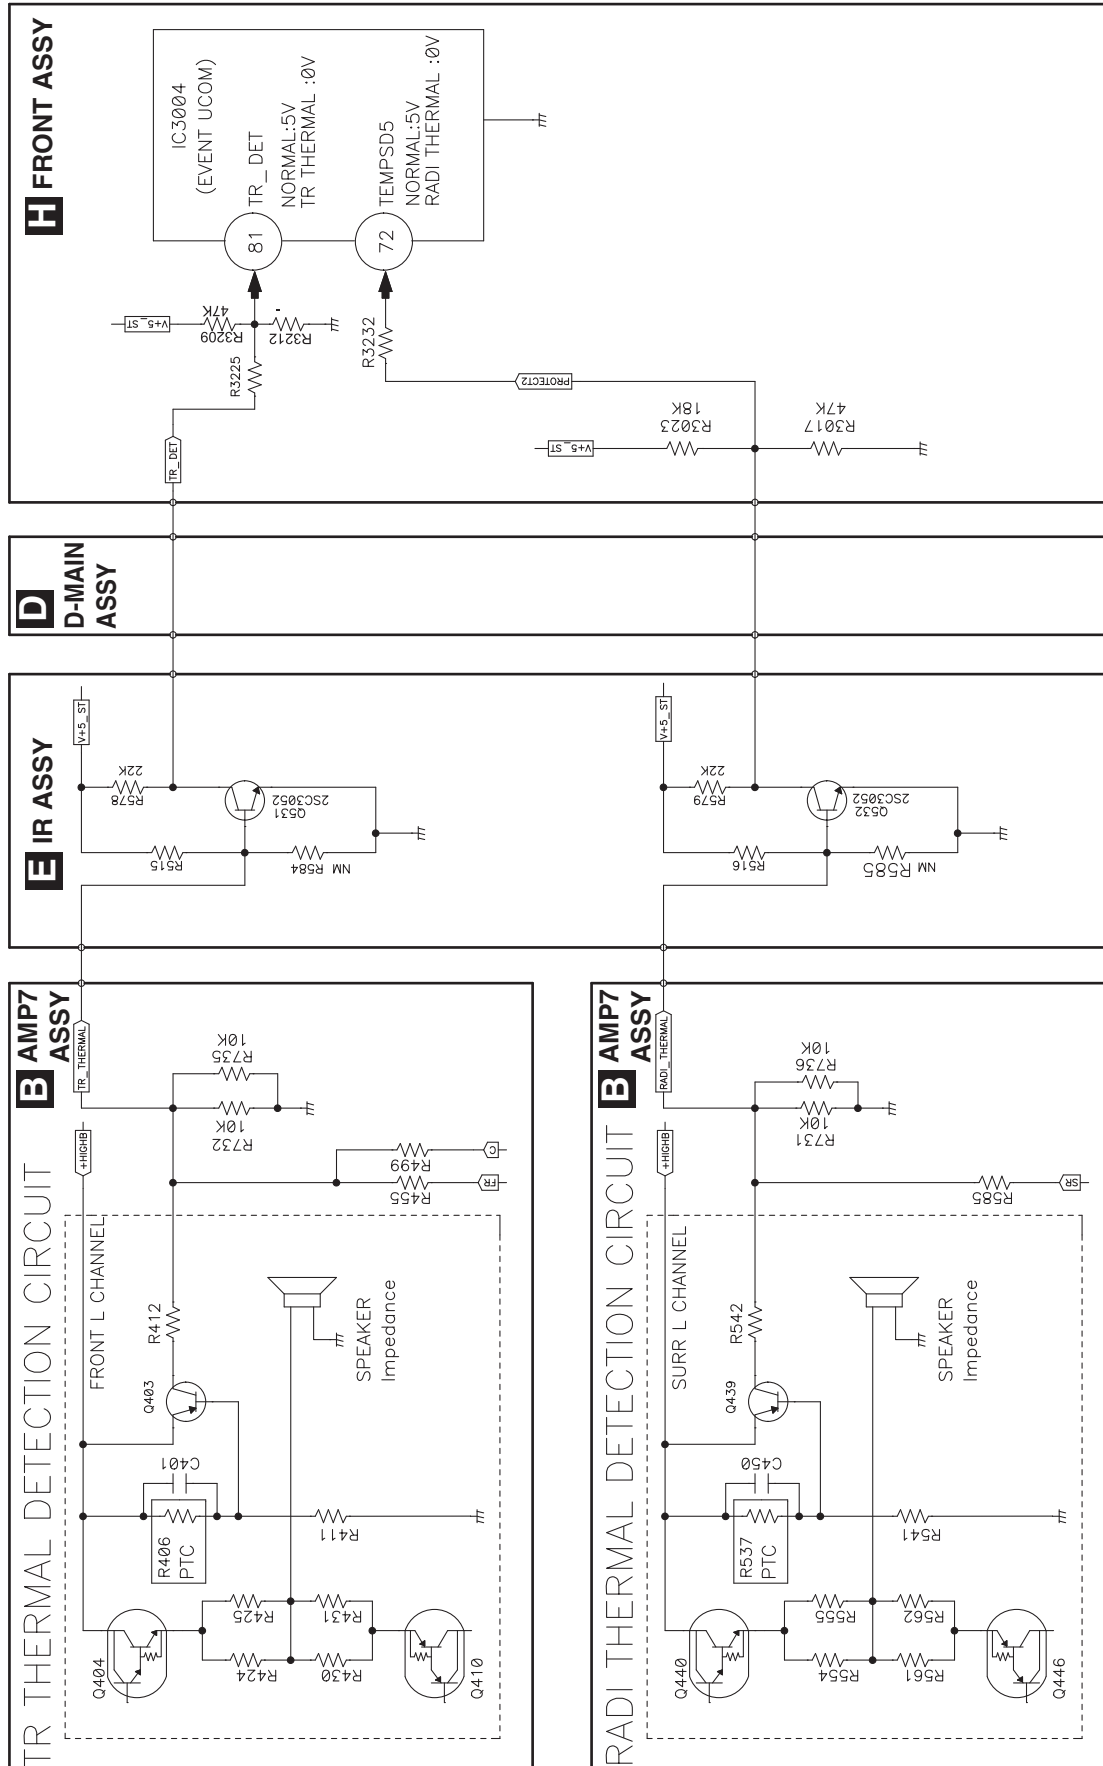


■ J171132900010-IL (VIDEO ASSY: IC1001)

IC, MONITOR SW

• Pin Arrangement (Top view)

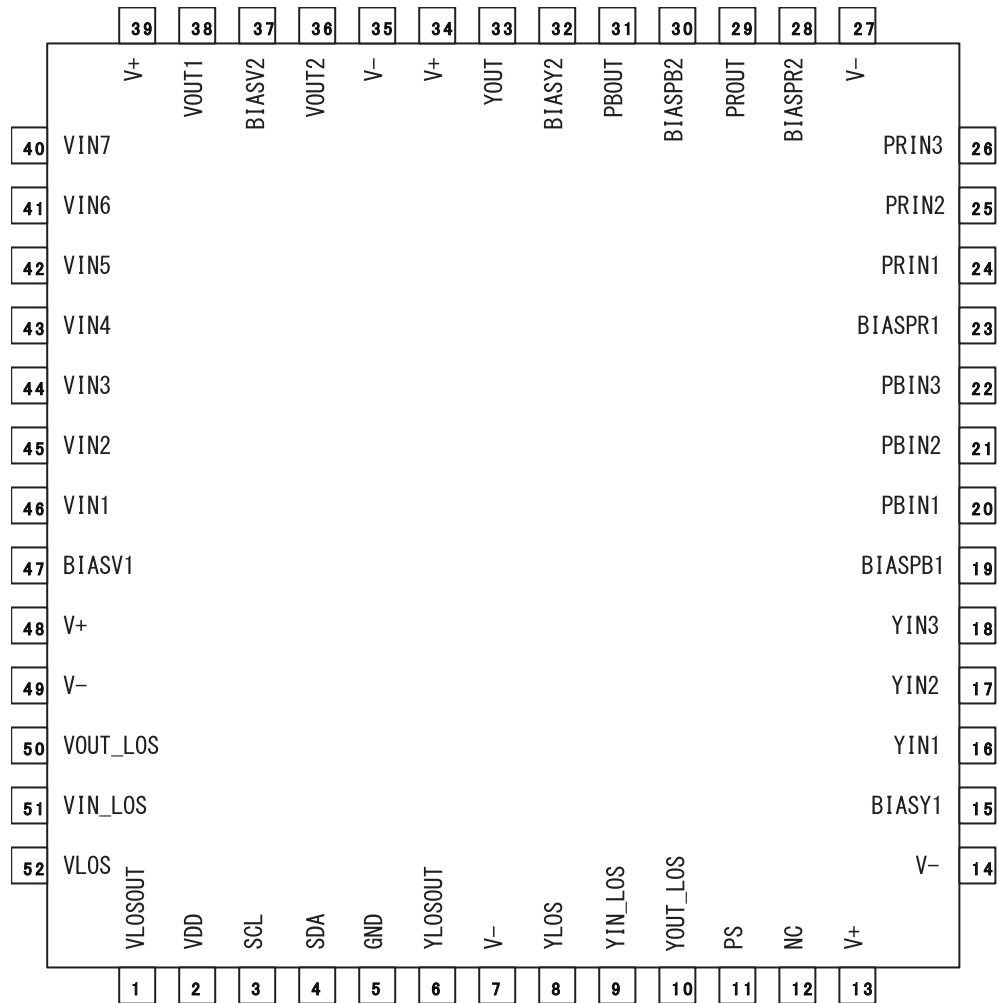


A • Block Diagram

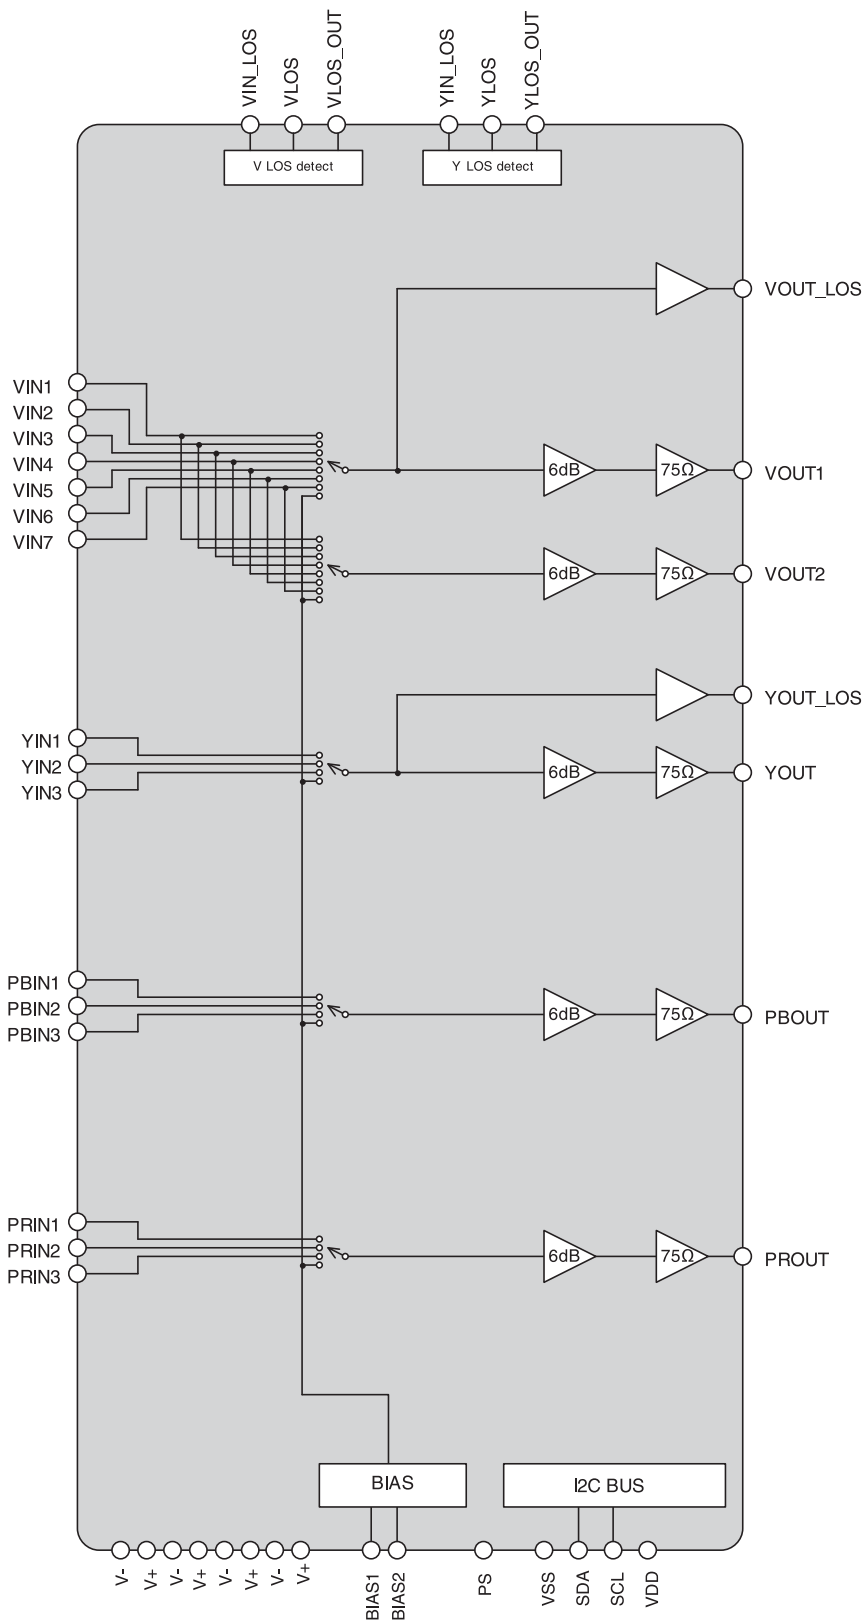

■ (J005251601010S-IL) (D-MAIN ASSY: IC9004)

IC, MEMORY FLASH

• Pin Arrangement (Top view)

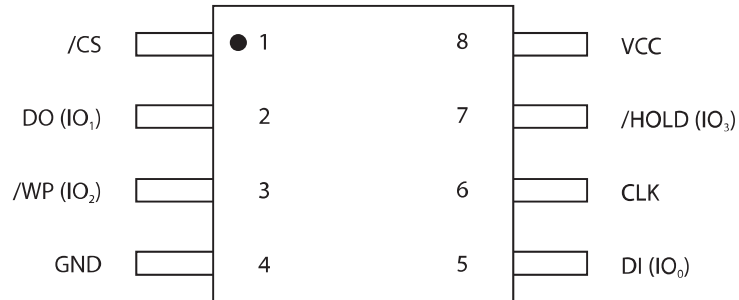

• Pin Function

PIN NO.	PIN NAME	I/O	FUNCTION
1	/CS	I	Chip Select Input
2	DO (IO ₁)	I/O	Data Output (Data Input Output 1)* ¹
3	/WP (IO ₂)	I/O	Write Protect Input (Data Input Output 2)* ²
4	GND		Ground
5	DI (IO ₀)	I/O	Data Input (Data Input Output 0)* ¹
6	CLK	I	Serial Clock Input
7	/HOLD (IO ₃)	I/O	Hold Input (Data Input Output 3)* ²
8	VCC		Power Supply

*1 IO₀ and IO₁ are used for Dual and Quad instructions

*2 IO₀ – IO₃ are used for Quad instructions

6. SERVICE MODE

6.1 TEST MODE

A

[1] Detected protection history

[Purpose]

The numbers of detections for various protection processes are displayed.

[How to enter]

During Standby mode, simultaneously press and hold “MULTI-ZONE ON/OFF” and “ENTER” keys for 5 seconds to enter this mode.Turn off the power to this unit by setting the main volume level to “---dB” and Multi-zone to “OFF”.

[How to exit]

Turning off the power or pressing the RETURN key returns to the normal mode.

B

[Basic operations]

C

C

D

D

E

E

F

F

Key operation	FL display
Display number of times DC is detected.	DC : ***
[↓] [↑]	
Display number of times OVERLOAD is detected.	OL : ***
[↓] [↑]	
Display number of times COMBINATION is detected. (Detects DC and OVERLOAD simultaneously)	COM : ***
[↓] [↑]	
Display number of times Power abnormality is detected.	XPRT : ***
[↓] [↑]	
Display number of times AMP overheat is detected.	STMP : ***
[↓] [↑]	
Display number of times Digital Power abnormality is detected.	DERR : ***
[↓] [↑]	
Resetting the number of times error is detected.	RESET ◀HOLD▶
[↓] [↑]	

Front Panel Key

[↓] : TUNE key

[↑] : TUNE key

[←] : PRESET key

[→] : PRESET key

Resetting the number of times error is detected

Key operation	FL display
[←][→]	RESET ◀CLEAR?▶
[ENTER]	RESET ◀RESET▶
Continued	

Key operation	FL display
Display accumulated time & RESET. [↓] [↑]	1 2 3 4 5 h 2 0 m ◀ H L D ▶
Display CEC(TEST) state. [↓] [↑]	CEC ◀ OFF ▶
Display FAN(TEST) state. This function does not work on this model. [↓] [↑]	FAN ◀ OFF ▶
USB Backup state [↓] [↑]	USB BAK ◀ HOLD ▶
Display Model Name/Destination state. [↓] [↑]	VSX-1127/CUXE
Change cyclically	

[Description]

CEC TEST : The function for making the HDMI output terminal to output 4 Hz square wave. If the square wave is output, the CEC line is considered to be normal.

FAN TEST : The function for making the FAN to be forced to rotate.

Resetting the accumulated time

Key operation	FL display
[←][→]	1 2 3 4 5 h 2 0 m ◀ CL ? ▶
[ENTER]	0 h 0 0 m ◀ RST ▶
Continued	

Display CEC(TEST) state.

Key operation	FL display
[←][→]	CEC ◀ ON ▶
Change cyclically	

Note:

In case of US models, [USB Backup] function is not implemented with the first firmware. Before performing the backup function, please check the unit version. If small version number of Main com (EMMA) is smaller than 157, please update to the latest version. If that is 157 or over (e.g. [1-157076014091]), the backup function is implemented.

Saving and Loading of USB backup state.

Key operation	FL display
[←][→]	(A/V Receiver → USB) USB BAK ◀ SAVE ? ▶
[←][→]	(USB → A/V Receiver) USB BAK ◀ LOAD ? ▶
Change cyclically	

Key operation	FL display
[ENTER]	PLEASE WAIT
SAVE or LOAD is completed. ↓ 5 sec Power OFF (All zone OFF)	COMPLETE

A Default system settings

Setting		Default
Digital Video Converter		ON
SPEAKERS		SB/FH
Speaker System		Normal(SB/FH)
Speaker Setting	Front	SMALL
	Center	SMALL
	FH/FW	SMALL
	Surr	SMALL
	SB	SMALLx2
	SW	YES
Surround Position		IN REAR
Crossover		80 Hz
X-Curve		OFF
DIMMER		Brightest
HDMI		
HDMI Audio		Amp
Control		OFF
Control Mode		--- (OFF)
ARC (Audio Return Channel)		--- (OFF)
PQLS		--- (AUTO)
Standby Through		OFF
DSP		
Power On Level		LAST
Volume Limit		OFF
Mute Level		FULL
Phase Control		ON
Auto Sound Retriever	iPod/USB, INTERNET RADIO, SiriusXM, PANDORA, MEDIA SERVER, FAVORITES, ADAPTER PORT input function	ON
	Other input functions	OFF
Sound Delay		0.0 frame
Dual Mono		CH1
DRC		AUTO
SACD Gain		0 dB
LFE Attenuate		0 dB
Auto delay		OFF
Digital Safety		OFF
Effect Level	ExtendedStereo	90
	Other modes	50
PL II Music Options	Center Width	3
	Dimension	0
	Panorama	OFF
	Neo:6 Options	Center Image
PL IIz Options	Height Gain	MID
All Inputs	Listening Mode (2 ch/multi ch)	AUTO SURROUND
	Listening Mode (Headphones)	STEREO
MCACC		
MCACC Position Memory		M1: MEMORY 1
Channel Level (M1 to M6)		0.0 dB
Speaker Distance (M1 to M6)		10'00"
Standing Wave (M1 to M6)	ATT of all channels/filters	0.0 dB
	SWch Wide Trim	0.0 dB
EQ Data (M1 to M6)	All channels/bands	0.0 dB
	EQ Wide Trim	0.0 dB

Default input settings

Input function	Input Terminals		
	HDMI	Audio	Component
BD	(BD)		
DVD	IN 1	COAX-1	IN 1
SAT/CBL	IN 2	COAX-2 <a>	●
DVR/BDR	IN 3	OPT-2 <a>	●
HDMI 4	IN 4		
HDMI 5	IN 5 		
HDMI 6 <a>	IN 6		
INTERNET RADIO			
SiriusXM			
PANDORA			
MEDIA SERVER			
FAVORITES			
iPod/USB			
TV		OPT-1	
CD		ANALOG-1 <c>	
TUNER			
ADAPTER PORT			

- a VSX-1127 only.
b Located on the front panel for the VSX-1127.
c Only the **TV** and **CD** inputs can be assigned to **ANALOG-1**.

Resetting the system

Use this procedure to reset all the receiver's settings to the factory default. Use the front panel controls to do this.

Set MULTI-ZONE to **MULTI ZONE OFF**.

- Disconnect the iPod and USB memory device from the receiver beforehand.
- Set the **Control** with HDMI to **OFF**.

- 1 **Switch the receiver into standby.**
- 2 **While holding down ENTER on the front panel, press STANDBY/ON.**

The display shows **RESET ◀ NO ▶**.

- 3 **Select 'RESET' using PRESET / , then press ENTER on the front panel.**

The display shows **RESET? OK**.

- 4 **Press ENTER to confirm.**

OK appears in the display to indicate that the receiver has been reset to the factory default settings.

- Note that all settings will be saved, even if the receiver is unplugged.

7. DISASSEMBLY

Note:



- (1) Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.
- (2) For performing the diagnosis shown below, the following jigs for service is required:
 - 13P extension jig cable (GGD1740)
 - 3P extension jig cable (GGD1741)
 - Board to board extension jig cable (GGD1736) + Conversion jig (GGD1802)
 - Board to board extension jig cable (GGD1798) + Conversion jig (GGD1803)
 - Board to board extension jig cable (GGD1799)

1. Discharging

[1] MAIN Assy Capacitor (C55, C58)

[Procedures]


- (1) Unplug the power cord.
- (2) Disconnect the 10P connector from CP403 of the AMP7 Assy between CN3 of the MAIN Assy.
- (3) Connect +B and -B terminal of the D7, using resistor leads with 47 - 100 ohms (2 W or higher), for discharging.
 - * Discharging time: 30 - 60 seconds, depending on the level of resistance.
- (4) Check that the voltage between the +B and -B terminals is less than 1 V, using a tester.
 - * Be sure to connect the GND terminal of the tester to the chassis.
 - * If the voltage is still 1 V or higher, repeat Step (3).

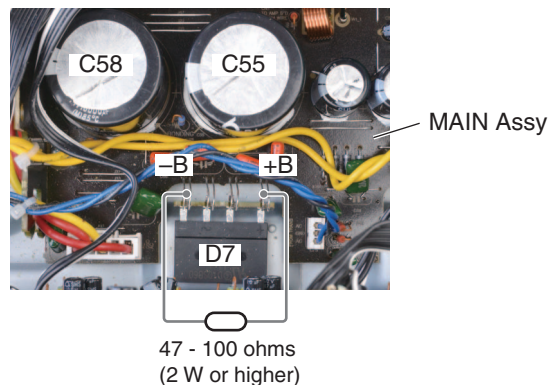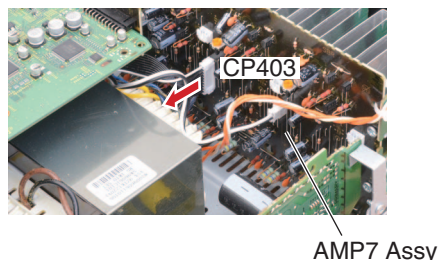

[2] FL-30 V Capacitor

[Procedures]

- (1) Unplug the power cord.
- (2) Connect pin 1 (-30V) and GND terminal (A) of CP3001 on the FRONT Assy, using resistor leads with 47-100 ohms (2 W or higher), for discharging.
 - * Discharging time: 5 - 10 seconds, depending on the level of resistance.
- (3) Check that the voltage between the -30V terminal is less than 1 V, using a tester.
 - * Be sure to connect the GND terminal of the tester to the chassis.
 - * If the voltage is still 1 V or higher, repeat Step (2).

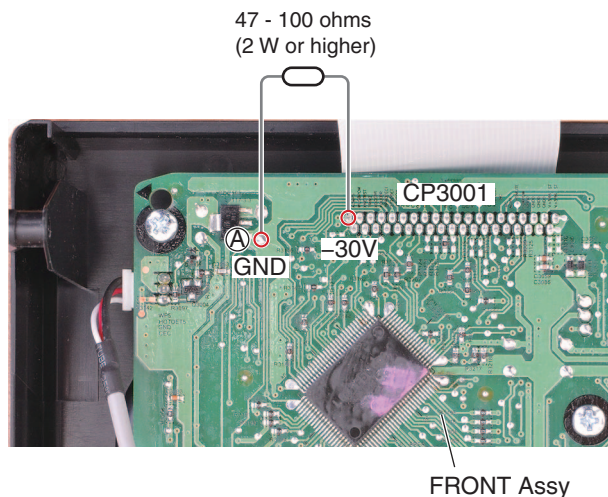


2. Notes on Ground Points Connection

[Note]

During repair, before checking the MAIN Assy, etc., with the rear chassis removed, be sure to connect the GND terminal of the main capacitor to the back chassis (speaker chassis), as shown below, then connect the power cord.

**Without grounding connection, the protection circuit will be activated.
After repairing, be sure to remove the ground wire before reassembling.**

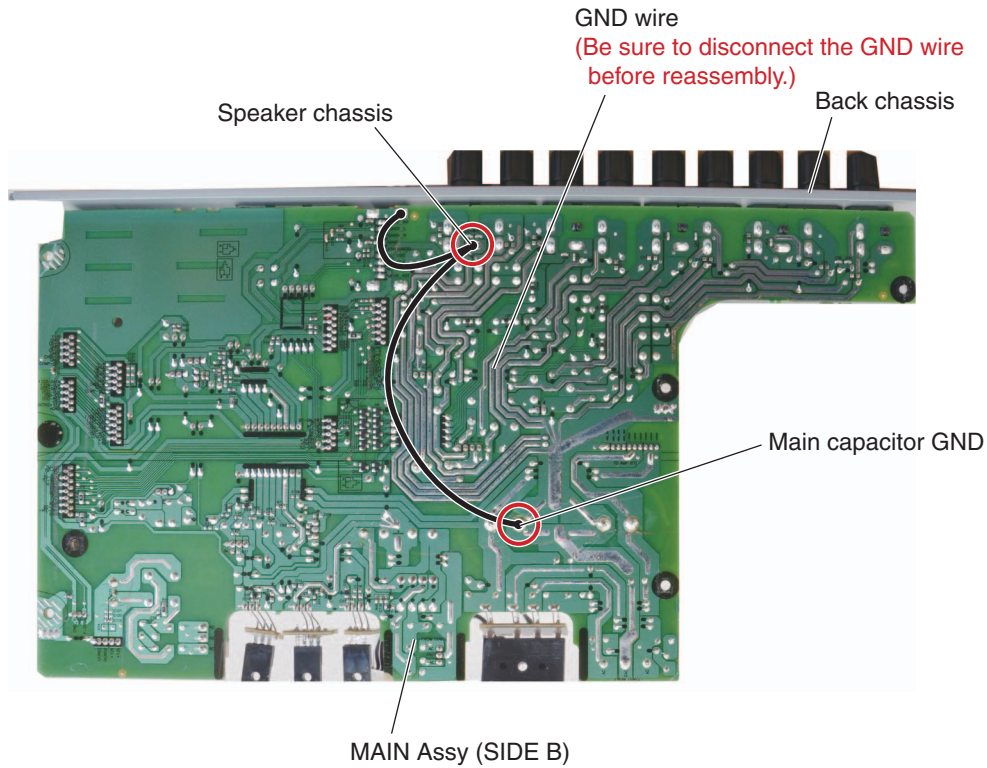


3. Disassembly

[1] Front Panel Section

Remove the cabinet by removing the 10 screws.

(1) Remove the five screws. (BBZ30P080FTB)

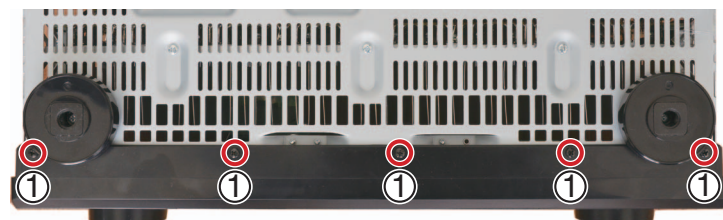


• Bottom view

(2) Remove the one screw.


(BBZ30P080FTC)

(3) Remove the three screws.

(1500001206010-IL)

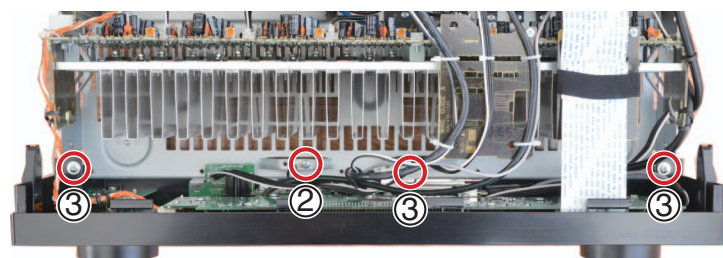


(4) Unhook the two hooks.

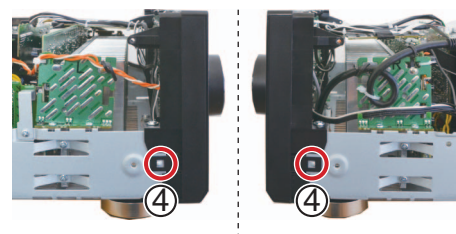

(5) Arrange the front panel section as shown in the photo below.

Front panel section

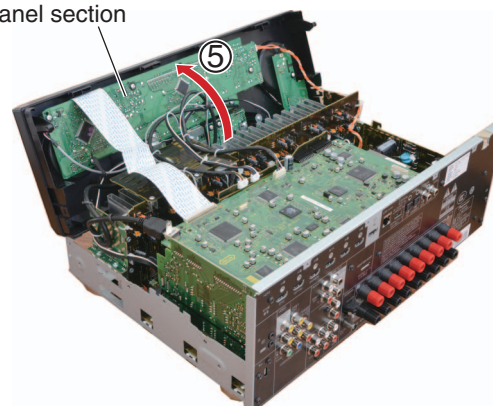


A [2] Heatsink Section

Caution: Heatsink section in work becomes hot, and be careful with it.

Remove the cabinet by removing the 10 screws.

(1) Remove the three screws. (BBZ30P080FTC)

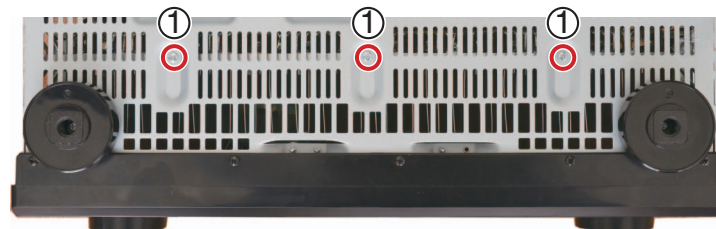


• Bottom view




(2) Remove the four screws. (BBZ30P080FTC)

(3) Cut the two binders.


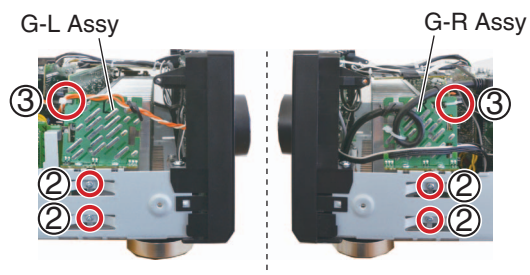


(4) Remove the two screws. (BBZ30P080FTC)



(5) Remove the WG-A and CCG Assemblies.

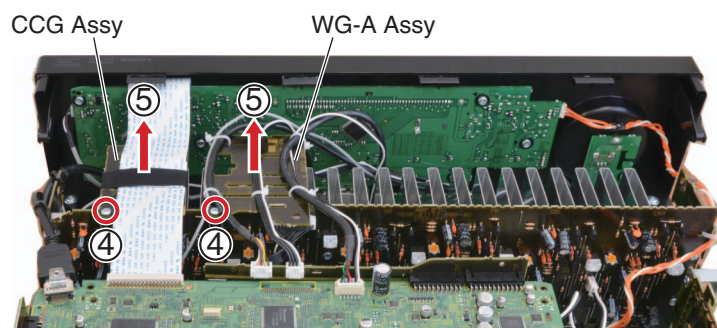

- (6) Disconnect the six connectors.
 (7) Remove the Heatsink section.

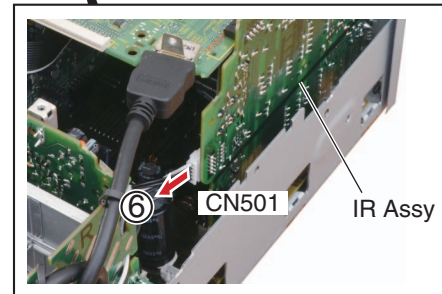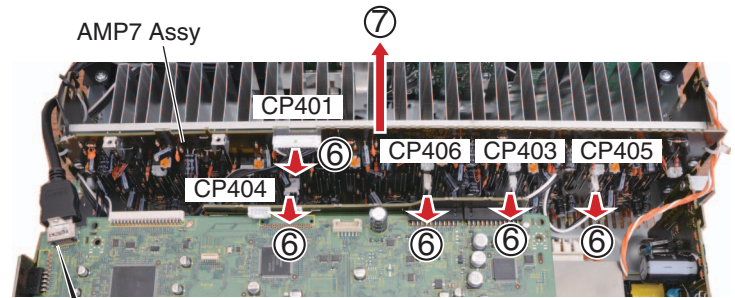


- (8) As shown, arrange the Heatsink section over the WG-A Assy.
 (9) Re-connect the four connectors.
 (10) Connect the two extension jig cables.

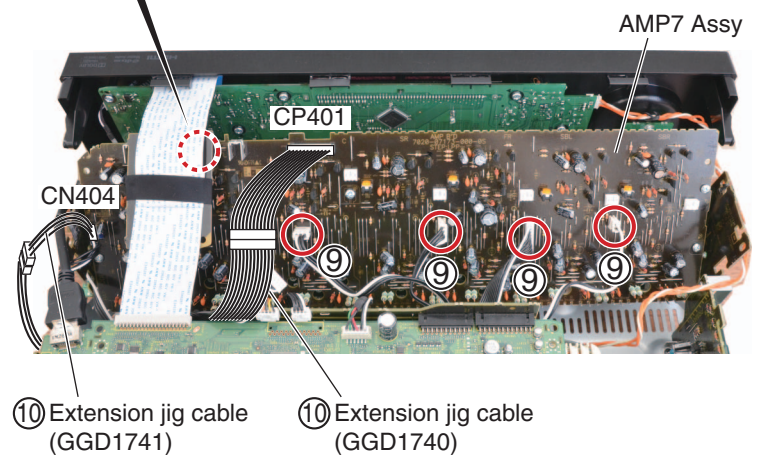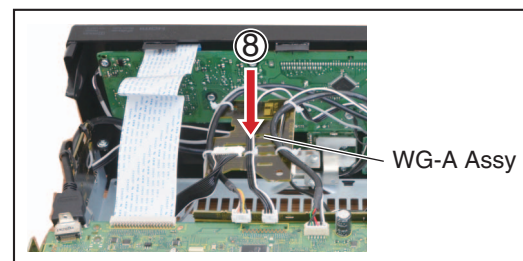

A [3] D-MAIN Assy

Remove the cabinet by removing the 10 screws.


- (1) Remove the five screws. (BBT30P100FTB)
- (2) Remove the seven screws. (BSZ30P040FTB)

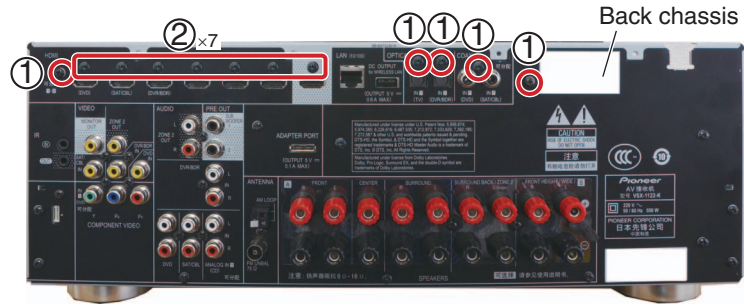


• Rear view

- (3) Disconnect the five B to B connectors. (CN603, 607, 901, 1504, 1801)
- (4) Remove the D-MAIN Assy.

• HDMI cable styling

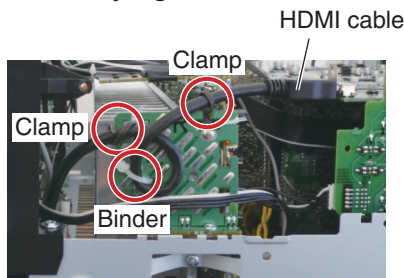


Note:
Make styling so that tension does not hang to the HDMI connector.

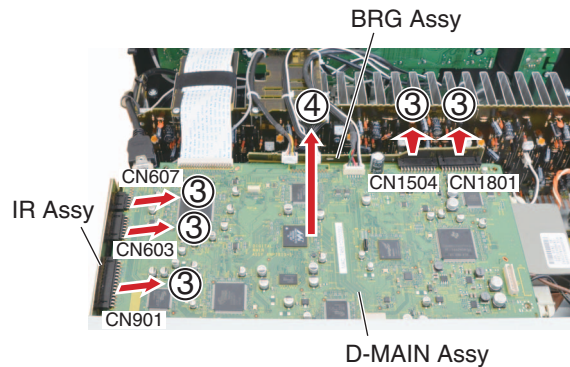

- (5) Connect the five extension jig cables.
- (6) Arrange the D-MAIN Assy in the photo below.
- (7) Insert any insulation sheet.

Note:
Confirm that a B to B connector of BRG Assy is connected to AUDIO Assy tightly.

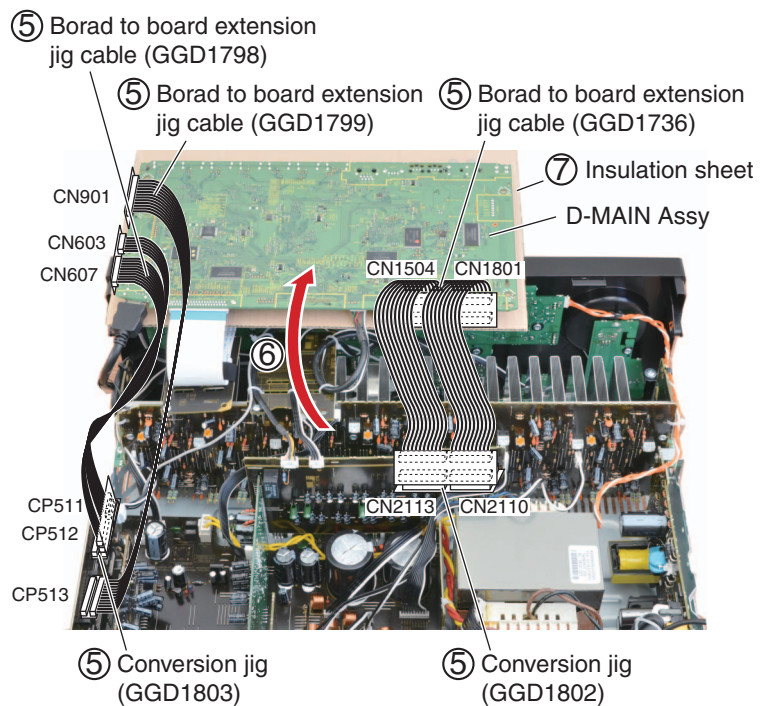


[4] MAIN Assy

Remove the cabinet by removing the 10 screws.


[4-1] Back chassis, D-MAIN Assy

- (1) Remove the 15 screws. (BBT30P100FTB)
- (2) Remove the seven screws. (BSZ30P040FTB)
- (3) Remove the D-MAIN Assy.
(See procedure [3].)

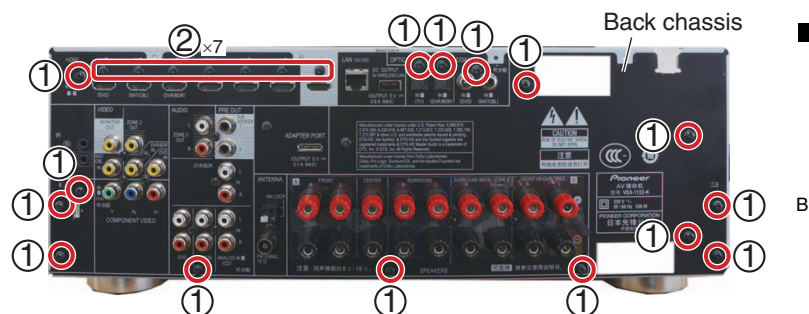

[4-2] MAIN Assy

- (1) Remove the four screws. (BBZ30P180FTC)
- (2) Remove the six screws. (BBZ30P080FTC)
- (3) Cut the four binders.
- (4) Remove the MAIN Assy with back chassis.

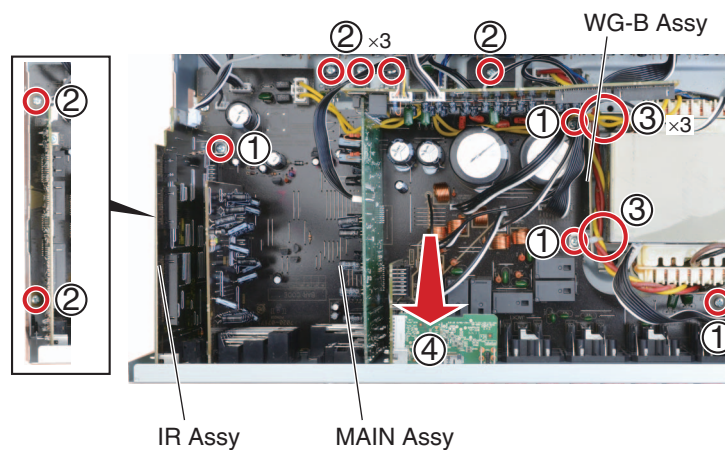

■1■2■3■4■

8. EACH SETTING AND ADJUSTMENT



- If the adjustment is shifted or if it becomes necessary to readjust because of part replacement, etc., perform the adjustment as described below.
- Any value changed in Adjustment mode will be stored in memory as soon as it is changed. Before readjustment, take note of the original values for reference in case you need to restore the original settings.
- Use a stable AC power supply.

■

8.1 ADJUSTMENT REQUIRED WHEN THE UNIT IS REPAIRED OR REPLACED

■

When any of the following assemblies is replaced

C

AMP7 Assy	➡	"8.4 IDLE CURRENT ADJUSTMENT" (All channel)
D-MAIN Assy	➡	"8.2 USB BACKUP"
Other assemblies	➡	No adjustment required

■

When any of the following parts is replaced

D

AMP7 Assy	➡	"8.4 IDLE CURRENT ADJUSTMENT" (Only channel of replacement parts)
Other assemblies	➡	No adjustment required

E

Note:
Some parts on D-MAIN and F-USB Assemblies can not be replaced due to using heat-pad connection between the board.
Please refer to [1.2 NOTES ON REPLACING PARTS], when the parts listed in the table is defective, replace whole Assy.

8.2 USB BACKUP

[Introduction]

This model is capable of saving the set values stored in the MAIN Ucom of D-MAIN Assy in the USB and loading them in a new D-MAIN Assy. (Note that MAIN Ucom should normally operate to enable this function.)
When replacing D-MAIN Assy, execute the above mentioned processes.

[Data that can be saved/cannot be saved]

The following **data can not be saved**. Data other than these can be saved.

Contents to save	Destination to save
Last memory for turning ON/OFF the Main power and power supply for ZONE2 Last memory for inputting the Main power, ZONE2 Setting for controlling HDMI Remote control ID Setting for Network Standby Data to be save upon the operation of protection circuit Standby Through setting	EVENT Ucom
Settings for HMG Favorite, Recently played, Repeat	BridgeCo IC

(As the data saved by EVENT Ucom is on the FRONT Assy, the data cannot be deleted unless Assy is replaced at the same time.)

[Requirements for USB memory]

USB memory to be used should meet the following requirements.

- Compatible with USB Mass storage Class
- With a file system of FAT (FAT32)

[File saving format]

Files are to be saved in the following format:

Example: VSX-1127_BK01.avr

[How to save in the USB memory from AV amplifier]

1. Insert the usable USB memory into the USB terminal when the main device is off.
2. Enter the SERVICE MODE and select [USB BAK ◀ HOLD ▶] with ↑↓ keys.
(See [6.1 TEST MODE] for how to enter the SERVICE MODE.)
3. Select [USB BAK ◀ SAVE? ▶] with ⇐⇒ keys and press [ENTER].
Note: The system cannot execute SAVE, LOAD until start is completed of BridgeCo.
4. Saving in the USB starts and the main device automatically goes off after the normal completion ([COMPLETE] is displayed.).
5. Remove the USB and saving is finished.

*1. If the following errors occur after "SAVE" is executed, error message will be displayed and "SAVE" will be stopped and the power will be turned off.

- Ejecting of USB device
- Short capacity of USB device
- Error during writing in the USB device (Read Only or defective Sector, etc.)

*2. If the same file name exists in the USB, overwriting will be automatically executed.

[How to write into AV amplifier from the USB memory]

1. Insert the USB with the saved file into the USB terminal when the main device is off.
2. Enter the TEST MODE and select [USB BAK ◀ HOLD ▶] with ↑↓ keys.
(See [6.1 TEST MODE] for how to enter the TEST MODE.)
3. Select [USB BAK ◀ LOAD? ▶] with ⇐⇒ keys and press [ENTER].
4. Saving in the main device starts and it automatically goes off after the normal completion ([COMPLETE] is displayed.).
5. Remove the USB and loading is finished.

* If the following errors occur after "LOAD" is executed, error message will be displayed and "LOAD" will be stopped and the power will be turned off.

- No setting file
- Mismatching between the setting file and the specification of the A/V RECEIVER type to be loaded back
- Error due to Checksum, Signature Check, and Size Check
- Ejecting of USB device (during reading of the setting file)

A Precautions

- Files are stored in Root of USB memory.
- Files are read from Root of USB memory.
 - ⇒ To make operations such as moving files, be sure to assign the saved file in Root of the USB memory.
Also please be careful not to assign *.avr in multiple numbers.
- The time and date of updating for saved file is fixed to "2006/03/08 20:01."
- In principle, please implement Load without making of factory default settings.
To Load from factory default settings status, please take caution on the following points;

Please be sure to check the HDMI control setting for the user before performing of factory default settings.
Since the HDMI control setting of default settings is ON, turn OFF the HDMI control setting and Load after performing of factory default settings if the checked user setting is OFF.
(If Load is executed with the setting ON, the assignment information for each HDMI input will be cleared.)

B

Procedures for turning OFF the HDMI control setting
⇒ HOME MENU ⇒ 4.System Setup ⇒ e.HDMI Setup ⇒ Control OFF


Note:

In case of US models, [USB Backup] function is not implemented with the first firmware.
Before performing the backup function, please check the unit version. If small version number of Main com (EMMA) is smaller than 157, please update to the latest version.
If that is 157 or over (e.g. [1-157076014091]), the backup function is implemented.

C**D****E****F**

8.3 UPDATING OF THE FIRMWARE

Workflow

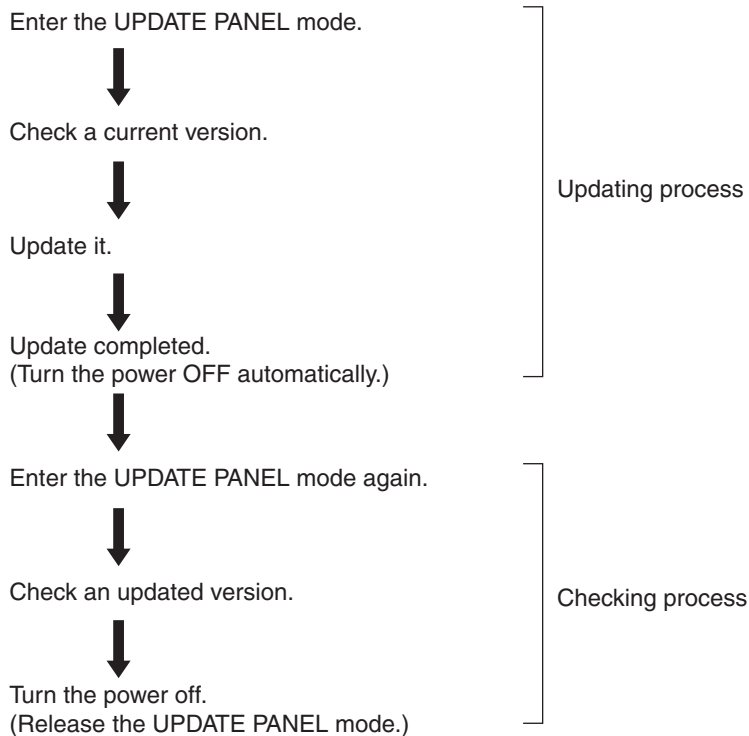

MAIN com (EMMA), SUB com (EVENT), DSP Flash ROM and BridgeCo IC Update by USB Memory and the Confirmation of the Version

● UPDATE PANEL Mode (Version update)


[Preparations]

1. Copy the UPDATE FILE to the root directory of the USB Memory.
Note: NEVER copy several UPDATE FILES to the root directory of the USB Memory.
Copy only the corresponding UPDATE FILE.
2. Turn off the power to this unit by setting Multi-Zone to "OFF".
3. Connect the USB Memory to the USB terminal (A type) of the front panel.

[Procedure]


1. While holding down "TUNE↑" key on the front panel, press "STANDBY ON/OFF" key and moves to the **UPDATE PANEL mode**.
2. The updating process is as follows.

A

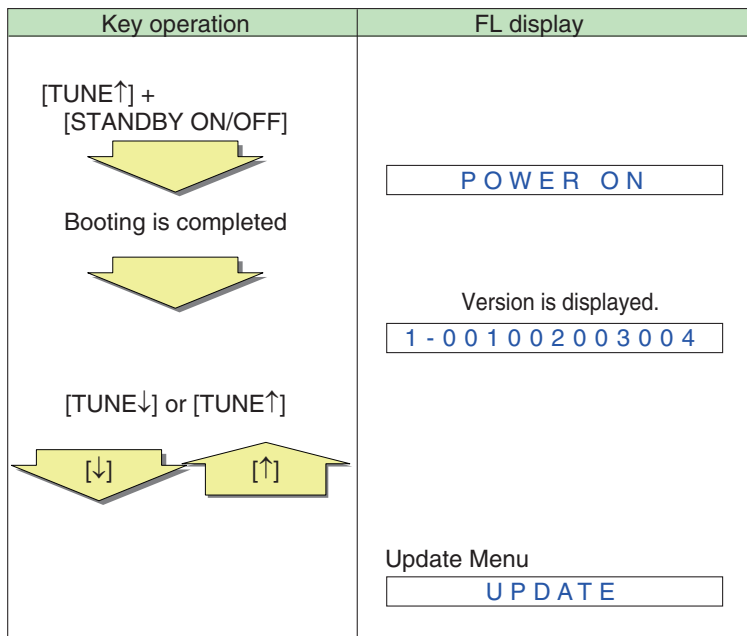

Front Panel Key

[↓] : TUNE key
 [↑] : TUNE key
 [←] : PRESET key
 [→] : PRESET key

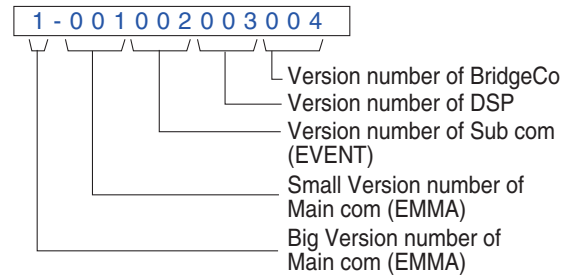


B

C


Do not do time-out during update panel indication.
 It takes about 45 seconds till version of the BridgeCo is displayed.
 Meanwhile, version of the BridgeCo is displayed with ***.

D

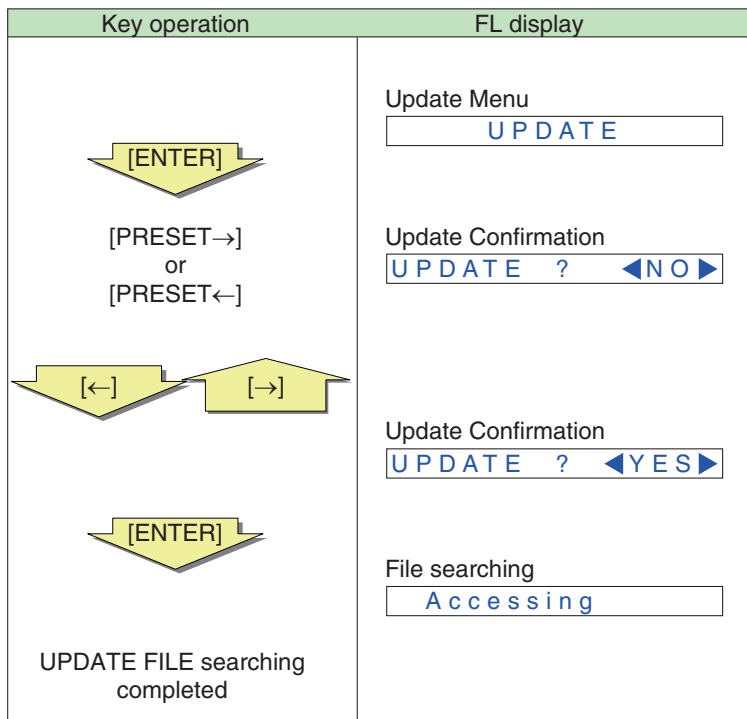

E

F

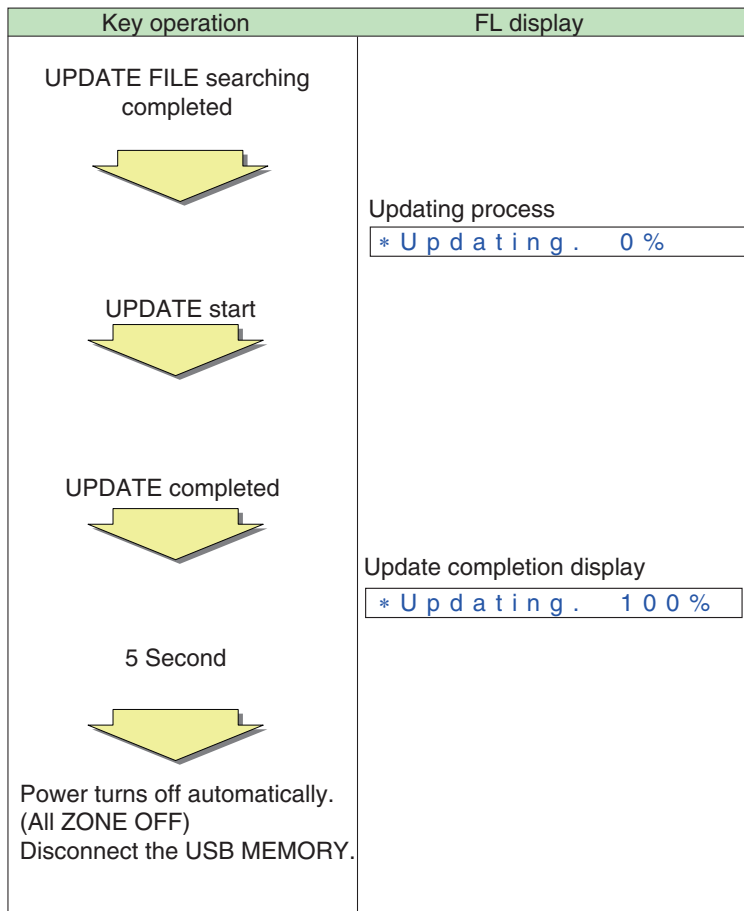

Update time is fluctuated by contents of the update. It will take about 26 minutes at the maximum.
(Actual time is from 3 minutes to 26 minutes.)
Time required for updating varies, because only the programs that require updating will be updated.

[Confirmation]

Enter UPDATE PANEL mode and check that the programs have been updated.

4

C

E



54

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

■

7

■

8

■

VSX-1127-K



9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

Poly bag packing style

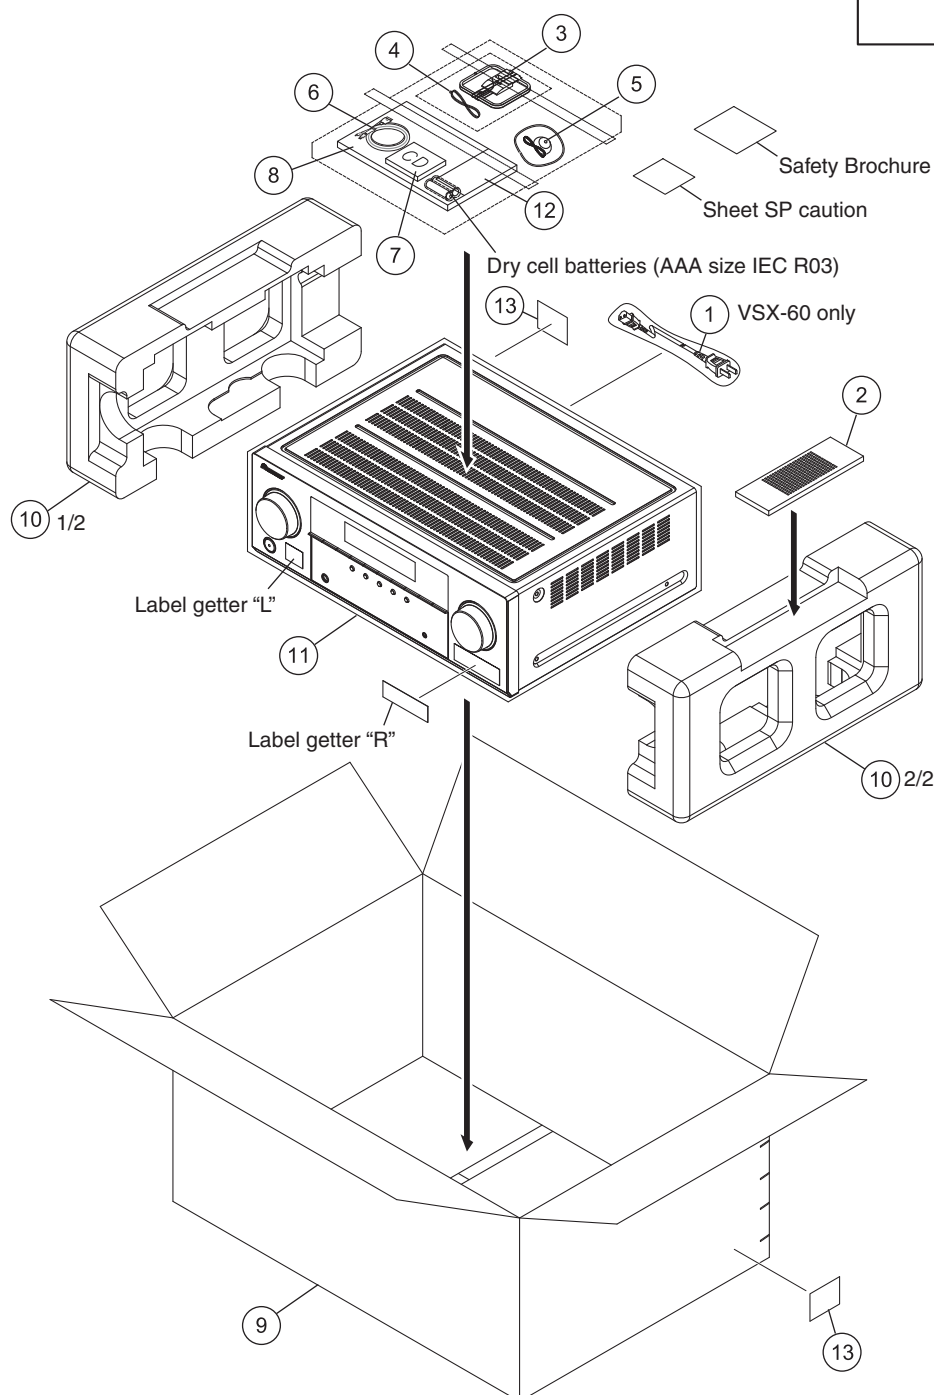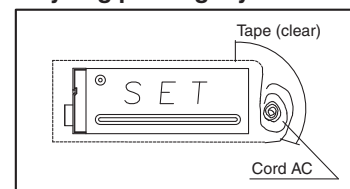

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power Cord	See Contrast table (2)
	2 Remote Control	8300766400010-IL
	3 AM Loop Antenna	E601019000010-IL
	4 FM Wire Antenna	E605010140010-IL
	5 Microphone (for Auto MCACC setup)	APM7010
	6 iPod Cable	L308102013030-IL
	7 Operating Instructions (CD-ROM)	See Contrast table (2)
	8 Quick Start Guide	See Contrast table (2)
	9 Box, Gift	See Contrast table (2)
	10 Cushion, Snow	6230212914000-IL
	11 PE, Sheet	6327040059000-IL
NSP	12 Warranty Sheet	See Contrast table (2)
NSP	13 Label	VRW1629

(2) CONTRAST TABLE

VSX-1127-K/CUXE, VSX-1122-K/CUXESM, VSX-60/UXECB and VSX-1027-K/CUXE are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-1127-K /CUXE	VSX-1122-K /CUXESM	VSX-60 /UXECB	VSX-1027-K /CUXE
⚠	1	Power Cord	Not used	Not used	L068125130010-IL	Not used
	7	Operating Instructions (CD-ROM)	6517000000550-IL	6517000000540-IL	6517000000560-IL	6517000000550-IL
	8	Quick Start Guide	57070000006590-IL	57070000006580-IL	57070000006600-IL	57070000006590-IL
	9	Box, Gift	6007211820110-IL	6007211820100-IL	6007211820120-IL	6007211820150-IL
NSP	12	Warranty Sheet	ARY7156	ARY7156	ARY7007	ARY7156

9.2 EXTERIOR SECTION

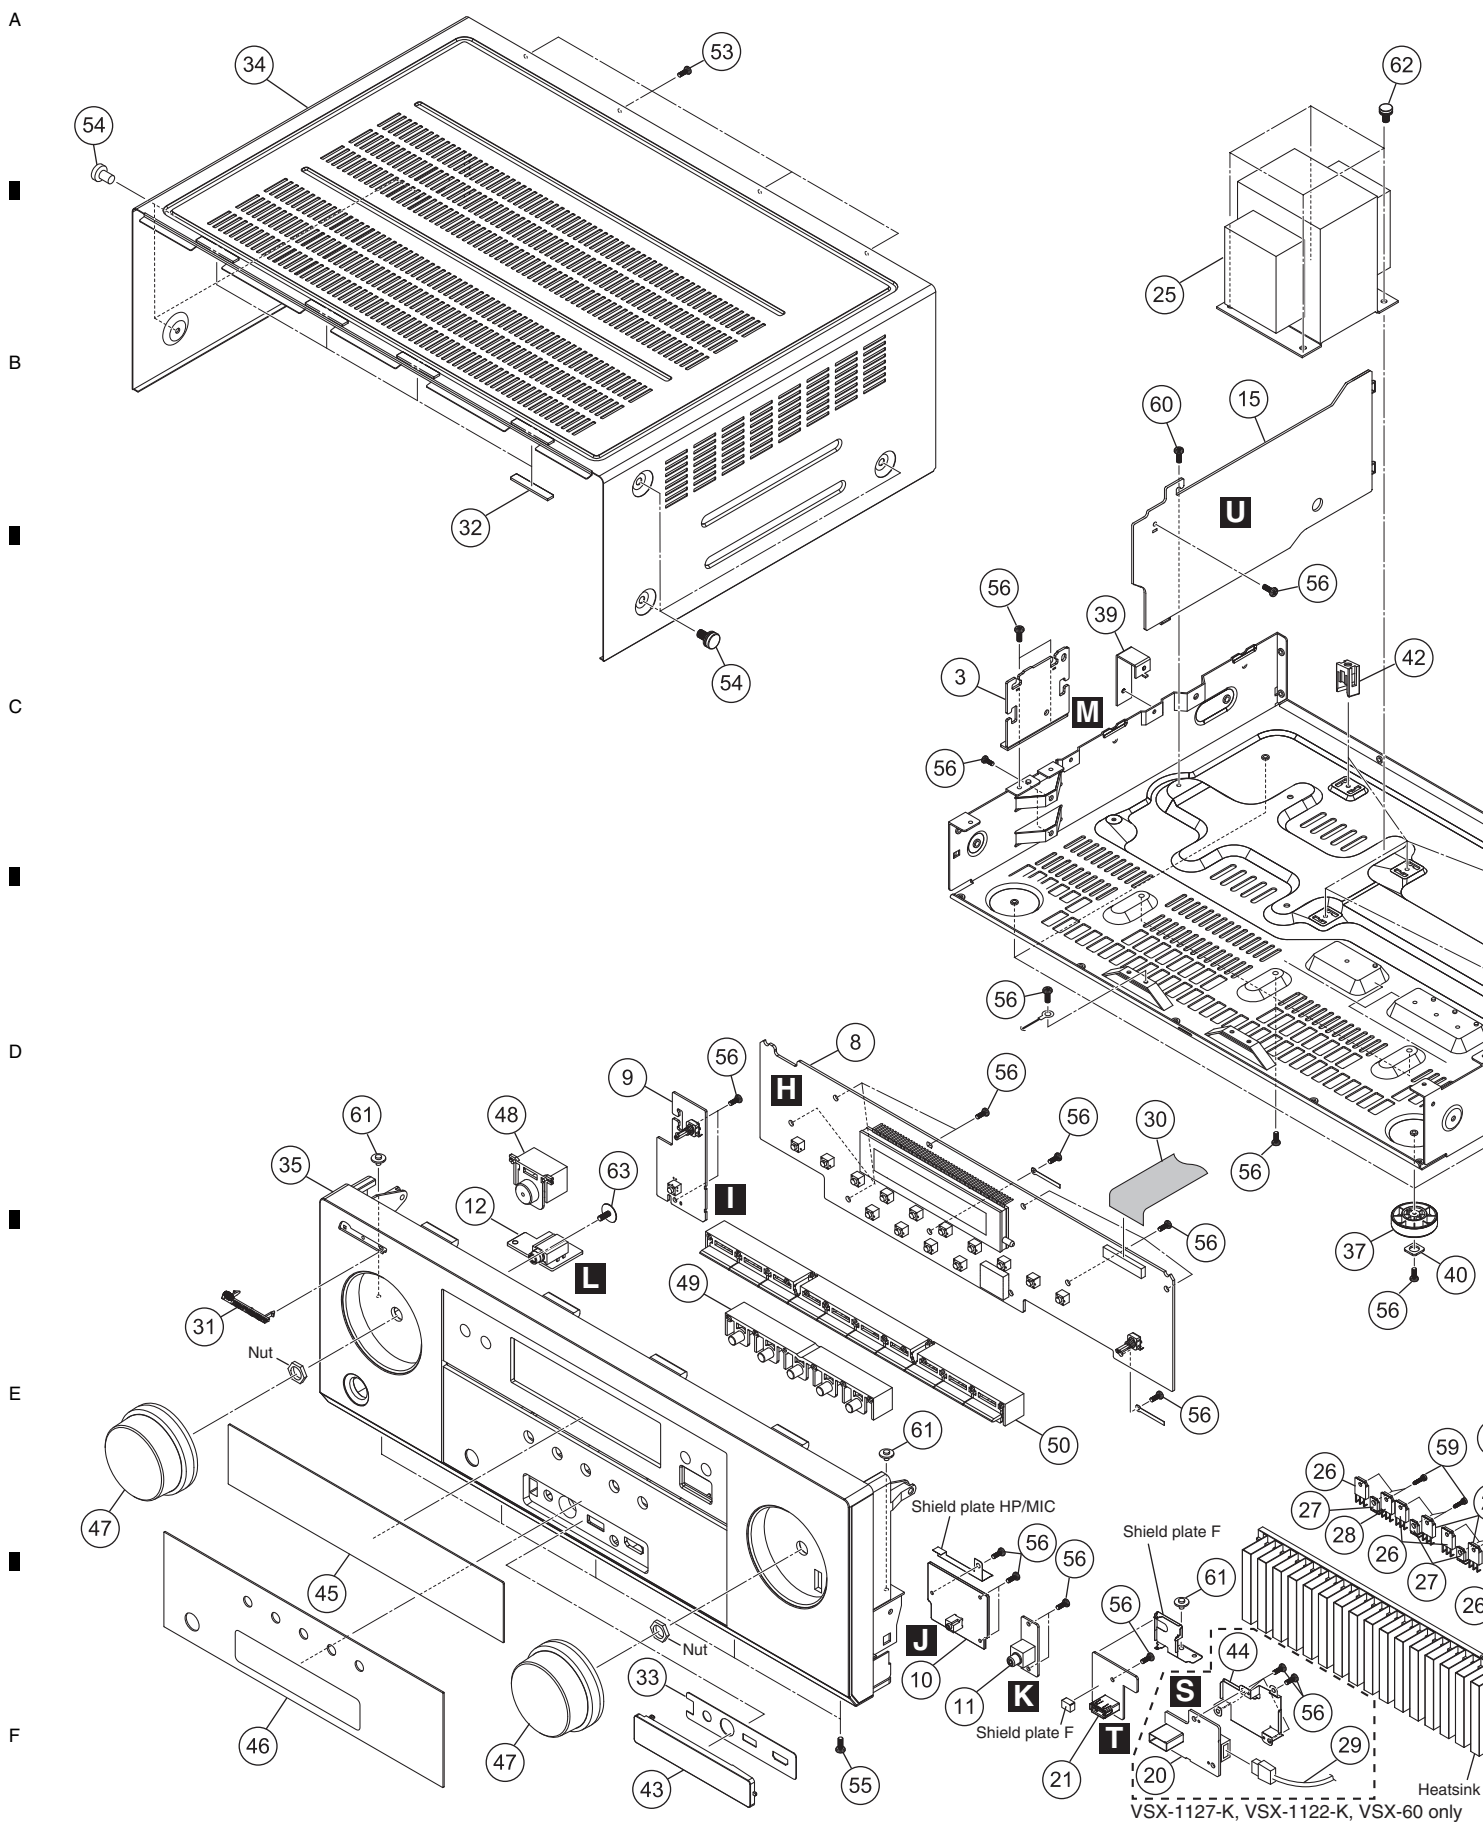

VSX-1127-K



(1) EXTERIOR SECION SECTION PARTS LIST

	Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1	MAIN Assy	See Contrast table (2)	46	Window Lower	See Contrast table (2)
	2	VIDEO Assy	See Contrast table (2)	47	Knob	5080212431000-IL
	3	G-L Assy	7028071713040-IL	48	Button	See Contrast table (2)
	4	G-R Assy	7028071714040-IL	49	5 Key Button	5090214561000-IL
	5	WG-A Assy	7028071715040-IL	50	10 Key Button	5090214571000-IL
B	6	WG-B Assy	7028071716040-IL	51	CN, Wire	See Contrast table (2)
	7	D-MAIN Assy	See Contrast table (2)	52	•••••	
	8	FRONT Assy	See Contrast table (2)	53	Screw	BBT30P100FTB
	9	POWER Assy	See Contrast table (2)	54	Screw	BBT40P080FTB
	10	MIC Assy	7028071723040-IL	55	Screw	BBZ30P080FTB
C	11	FVIDEO Assy	7028071724040-IL	56	Screw	BBZ30P080FTC
	12	HP Assy	7028071725040-IL	57	Screw	BBZ30P180FTC
	13	AUDIO Assy	See Contrast table (2)	58	Screw	BSZ30P040FTB
	14	IR Assy	See Contrast table (2)	59	Screw Tapping Assy	B018230141H11-IL
	15	SMPS Assy	See Contrast table (2)	60	Screw, Tap Tite	B020230063B10-IL
D	16	BRG Assy	See Contrast table (2)	61	Screw, Tap Tite	1500001206010-IL
	17	BTCNT Assy	7028071774040-IL	62	Screw	B028940101B11-IL
	18	CCG Assy	7028071775040-IL	63	Screw	1500001456010-IL
	19	AMP7 Assy	7028071731040-IL	64	Screw	See Contrast table (2)
	20	FHDMI Assy	See Contrast table (2)			
E	21	F-USB Assy	7028071761020-IL			
	22	BT Assy	7028070231010-IL			
	23	Cord Assy	See Contrast table (2)			
	24	Socket, power AC	See Contrast table (2)			
	25	Power Trans 1021U	8200960611050-IL			
F	26	Transistor	J5011560Y0000-IL			
	27	Semi, TR/GE NPN 2SC	J502396400010-IL			
	28	Transistor	J5032390Y0000-IL			
	29	HDMI Conn-Cable	See Contrast table (2)			
	30	Cable, Flat Card 1.0M	N711392412880-IL			
G	31	Pioneer Badge	See Contrast table (2)			
	32	Sheet	1210210235000-IL			
	33	F Input Sheet	See Contrast table (2)			
	34	Cabinet	3007211846000-IL			
	35	Front Panel	See Contrast table (2)			
H	36	Back Chassis	See Contrast table (2)			
	37	Foot (PLS)	4000210391000-IL			
	38	Bracket	4010056906010-IL			
	39	Bracket SMPS	4010214886000-IL			
	40	Cushion	4050211605000-IL			
I	41	Screw Cover	4050211745100-IL			
	42	Support	4070001601010-IL			
	43	Front Input Cover	4317215111030-IL			
	44	Front HDMI Plate1122	See Contrast table (2)			
	45	Window Display U	See Contrast table (2)			

(2) CONTRAST TABLE

VSX-1127-K/CUXE, VSX-1122-K/CUXESM, VSX-60/UXECB and VSX-1027-K/CUXE are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-1127-K /CUXE	VSX-1122-K /CUXESM	VSX-60 /UXECB	VSX-1027-K /CUXE
	1	MAIN Assy	7028071711010-IL	7028071711010-IL	7028071711040-IL	7028071711010-IL
	2	VIDEO Assy	7028071712020-IL	7028071712070-IL	7028071712040-IL	7028071712070-IL
	7	D-MAIN Assy	7028071752020-IL	7028071752040-IL	7028071752040-IL	7028071752070-IL
	8	FRONT Assy	7028071721050-IL	7028071721010-IL	7028071721040-IL	7028071721060-IL
	9	POWER Assy	7028071722010-IL	7028071722010-IL	7028071722040-IL	7028071722010-IL
	13	AUDIO Assy	7028071741050-IL	7028071741010-IL	7028071741040-IL	7028071741010-IL
	14	IR Assy	7028071771010-IL	7028071771010-IL	7028071771040-IL	7028071771010-IL
	15	SMPS Assy	7028071772010-IL	7028071772010-IL	7028071772040-IL	7028071772010-IL
	16	BRG Assy	7028071773040-IL	7028071773040-IL	7028071773040-IL	7028071773070-IL
	20	FHDMI Assy	7028071791040-IL	7028071791040-IL	7028071791040-IL	Not used
⚠	23	Cord Assy	L068125101710-IL	L068125101710-IL	Not used	L068125101710-IL
⚠	24	Socket, power AC	Not used	Not used	G430040560021-IL	Not used
	29	HDMI Conn-Cable	ADX7777	ADX7777	ADX7777	Not used
	31	Pioneer Badge	XAM3006	XAM3006	PAM1791	XAM3006
	33	F Input Sheet	1217211162040-IL	1217211162040-IL	1217211162050-IL	1217211792000-IL
	35	Front Panel	3067215111020-IL	3067215111010-IL	3067215121010-IL	3067215491000-IL
	36	Back Chassis	3207214216200S-IL	3207214216000S-IL	3207214216300S-IL	3207214206100S-IL
	44	Front HDMI Plate1122	4470212466000-IL	4470212466000-IL	4470212466000-IL	Not used
	45	Window Display U	5077213113040-IL	5077213113040-IL	5077213113050-IL	5077213113040-IL
	46	Window Lower	5077213123090-IL	5077213123090-IL	50772131230B0-IL	5077213123090-IL
	48	Button	5090213741100-IL	5090213741100-IL	5098214551000-IL	5090213741100-IL
	51	CN, Wire	Not used	Not used	L000800020220-IL	Not used
	64	Screw	Not used	Not used	CBZ30P080FTB	Not used

10. SCHEMATIC DIAGRAM

10.1 AUDIO ASSY

- When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- : The power supply is shown with the marked box.



A


B

C


D

E


F

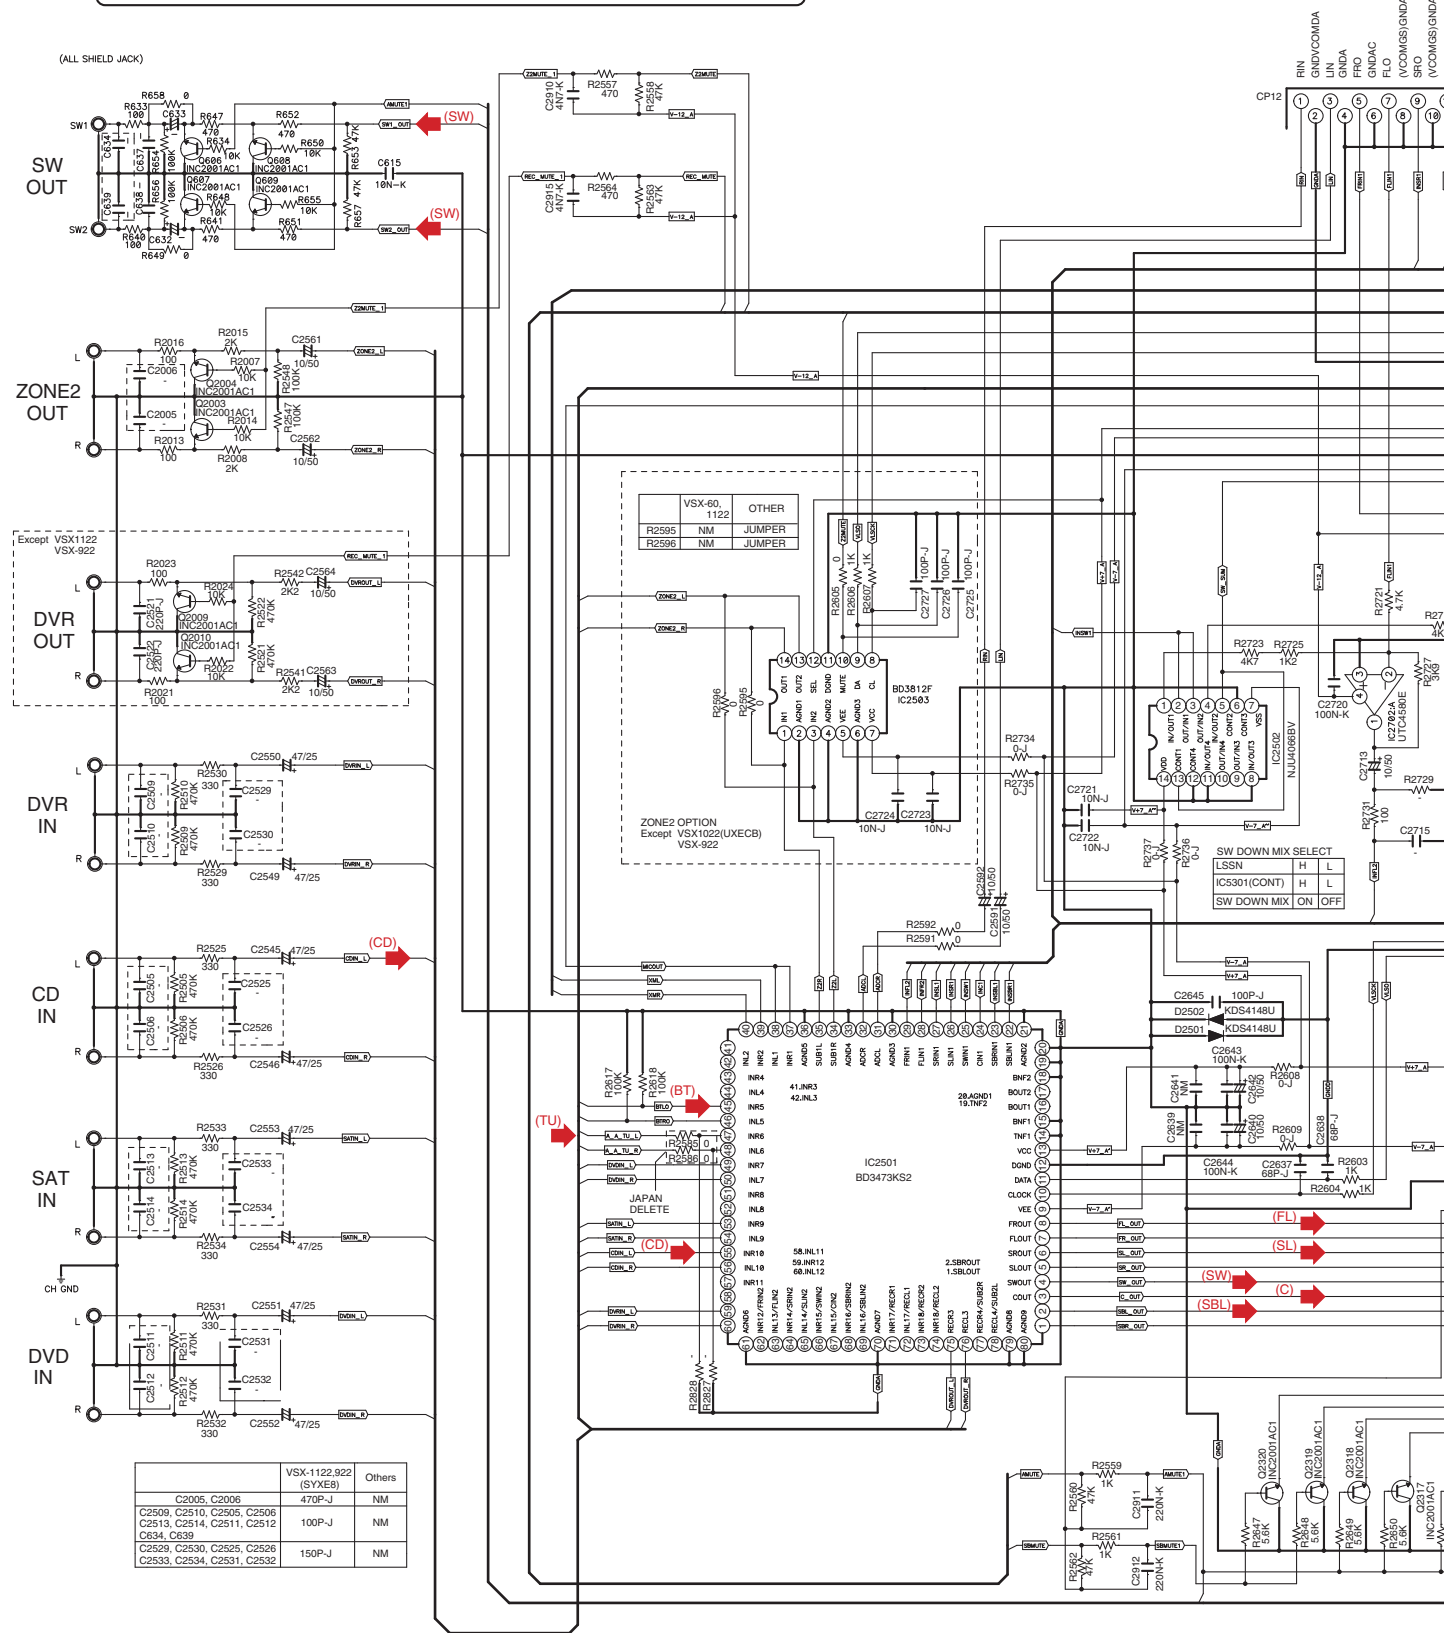

10.2 AMP7 ASSY (1/2)

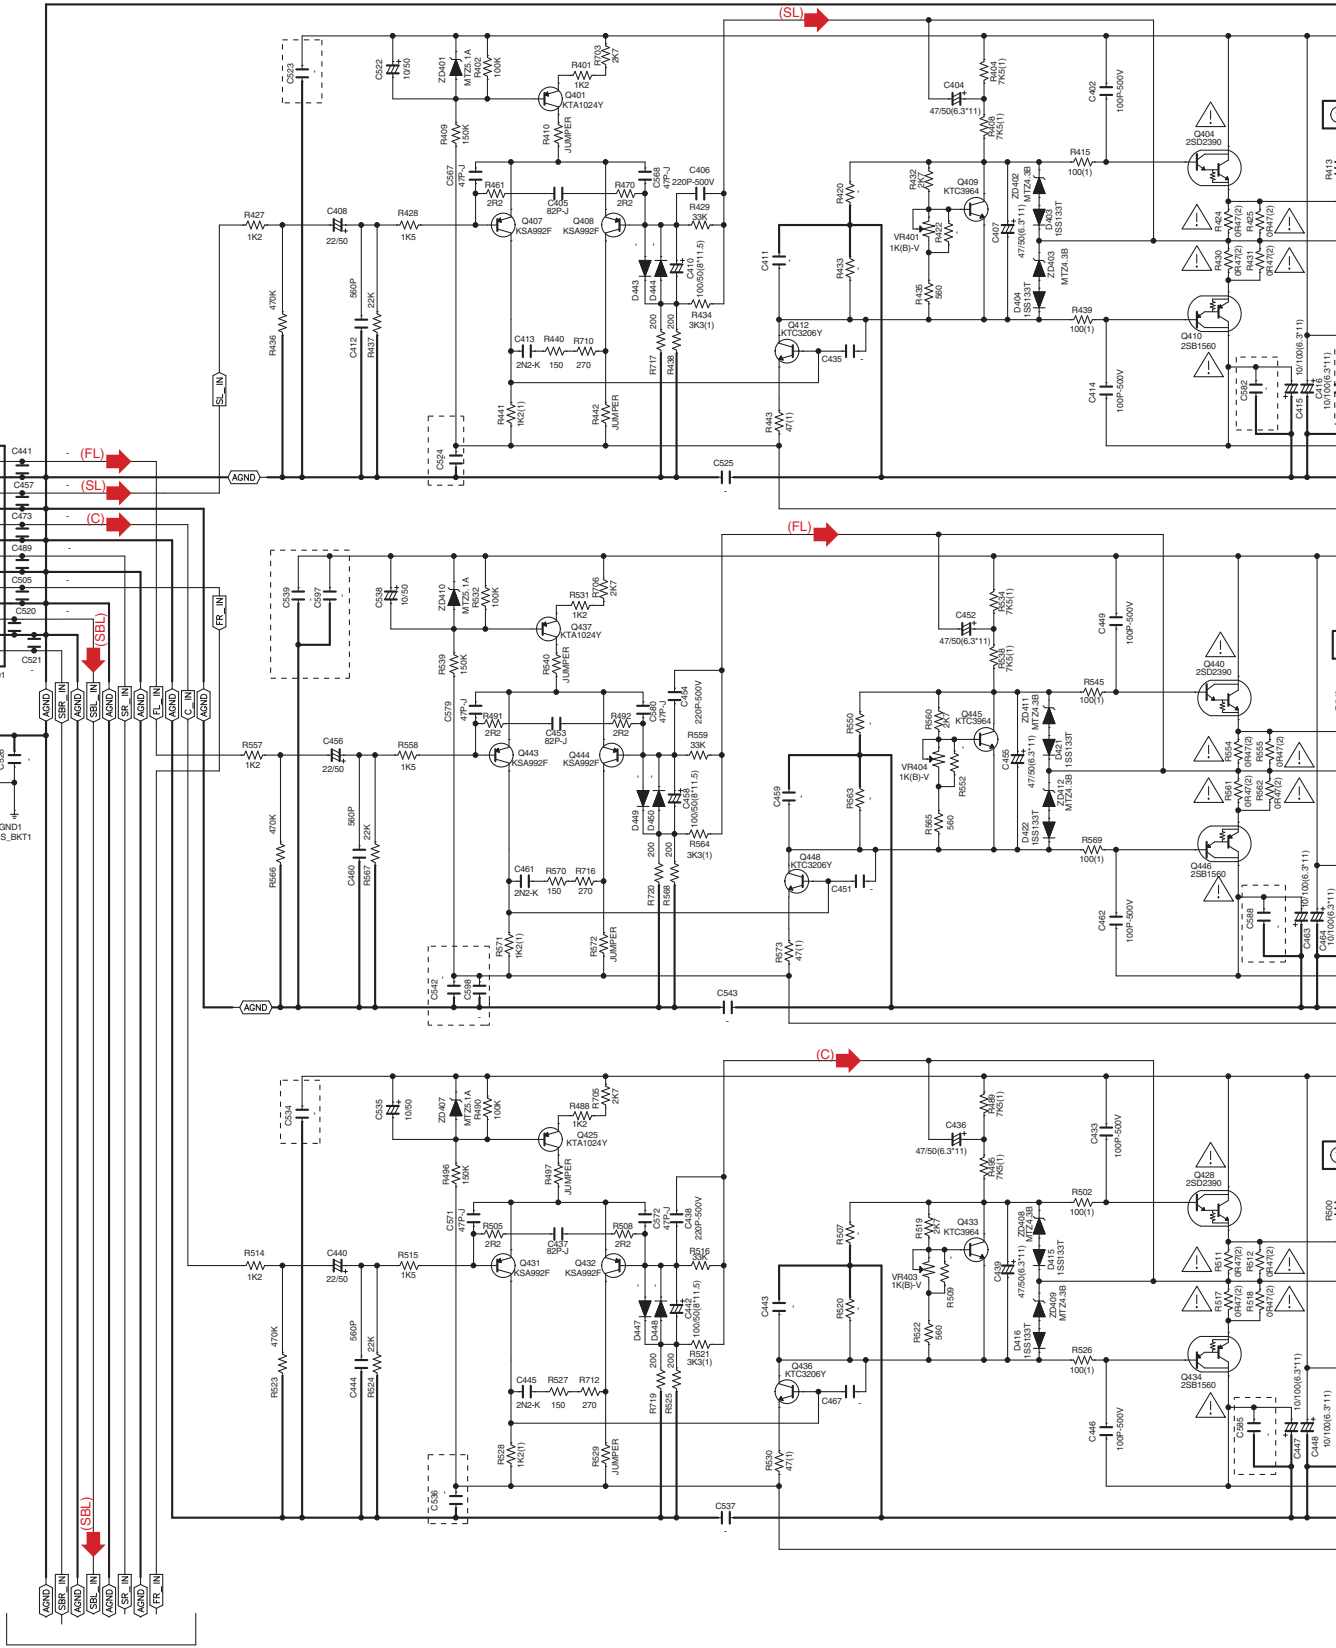

B 1/2 AMP7 ASSY (7028071731040-IL)

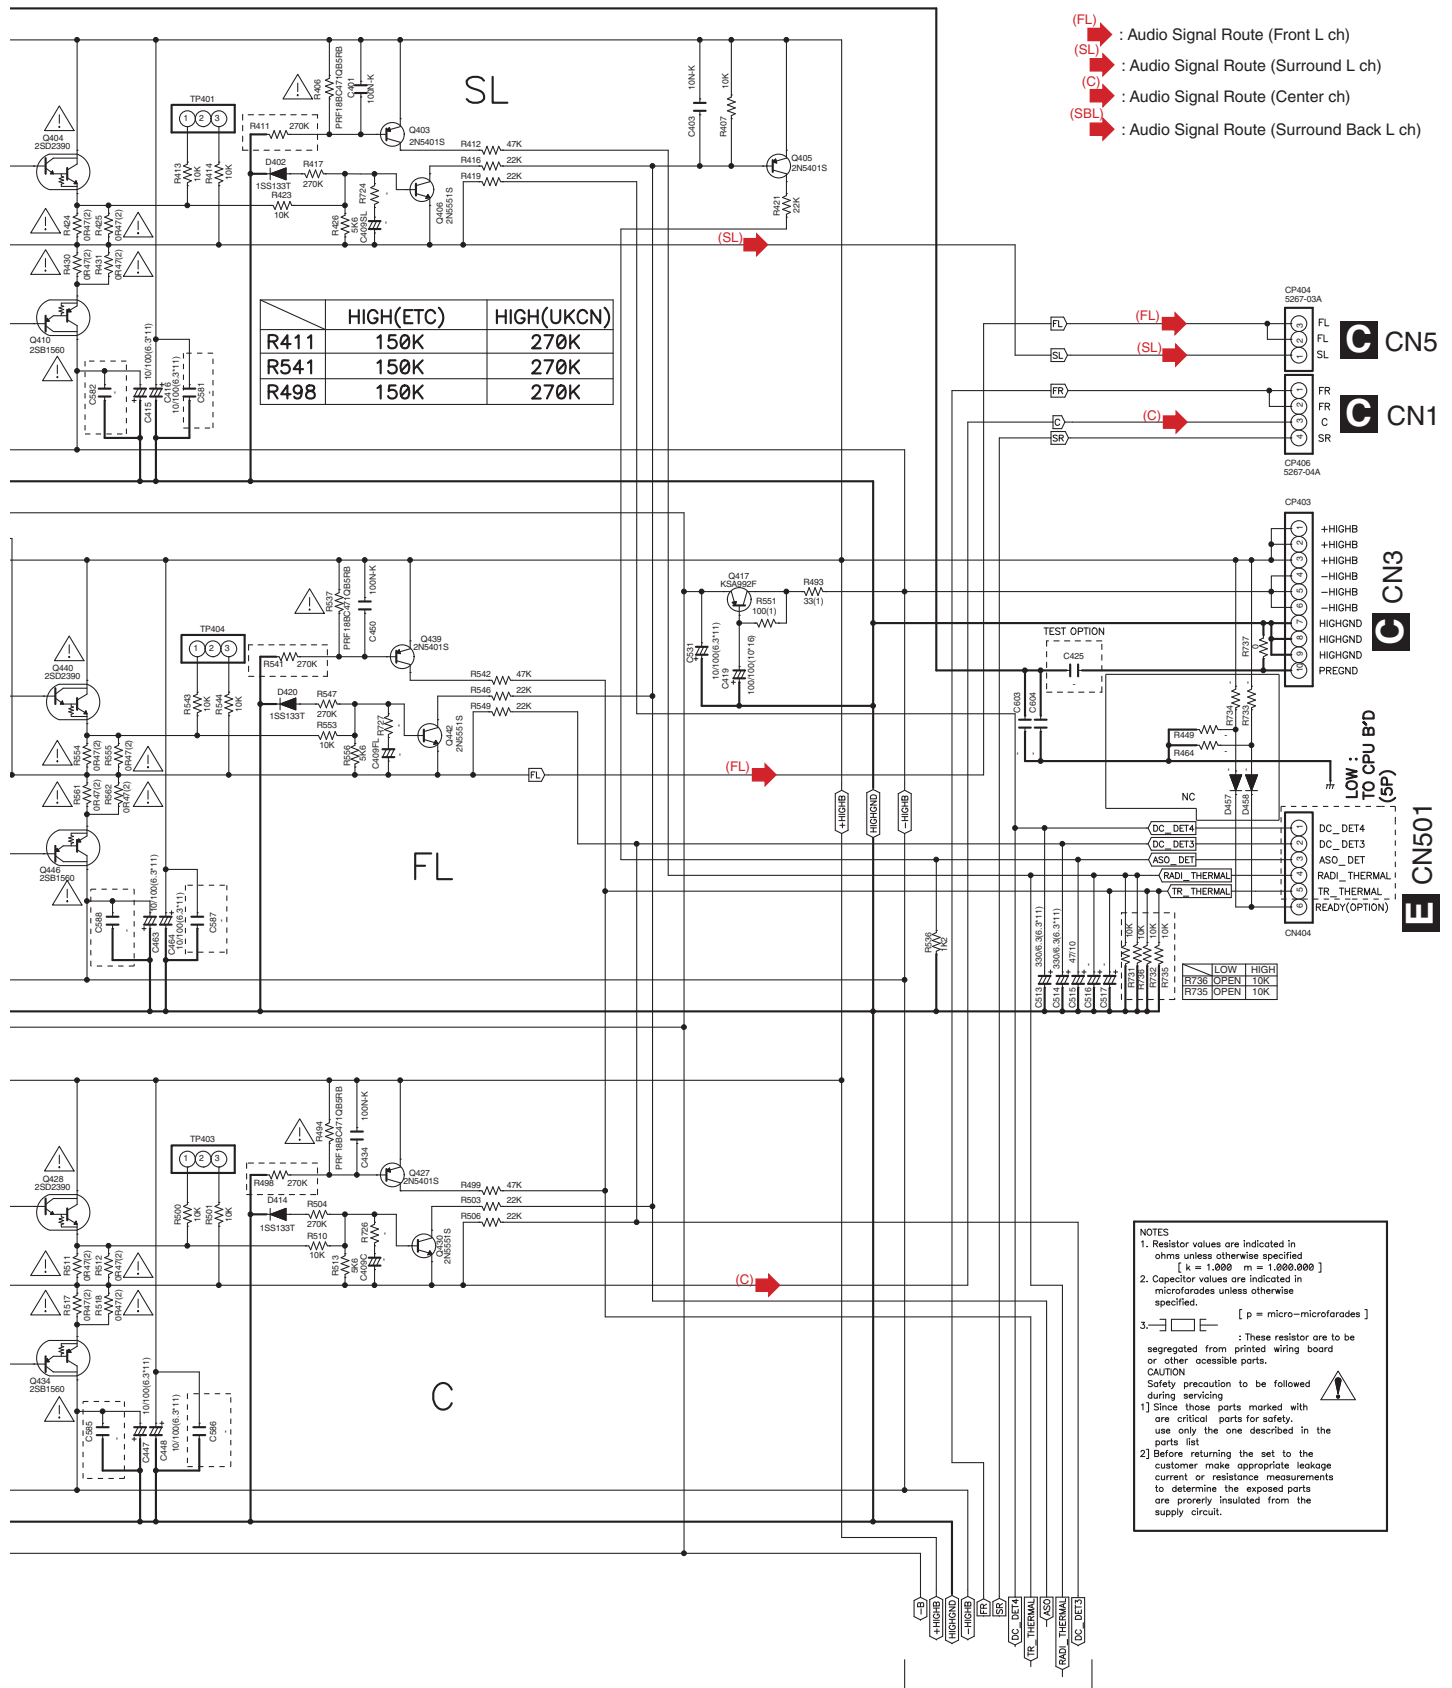

4


F



66

4

B2/2 AMP7 ASSY (7028071731040-IL)

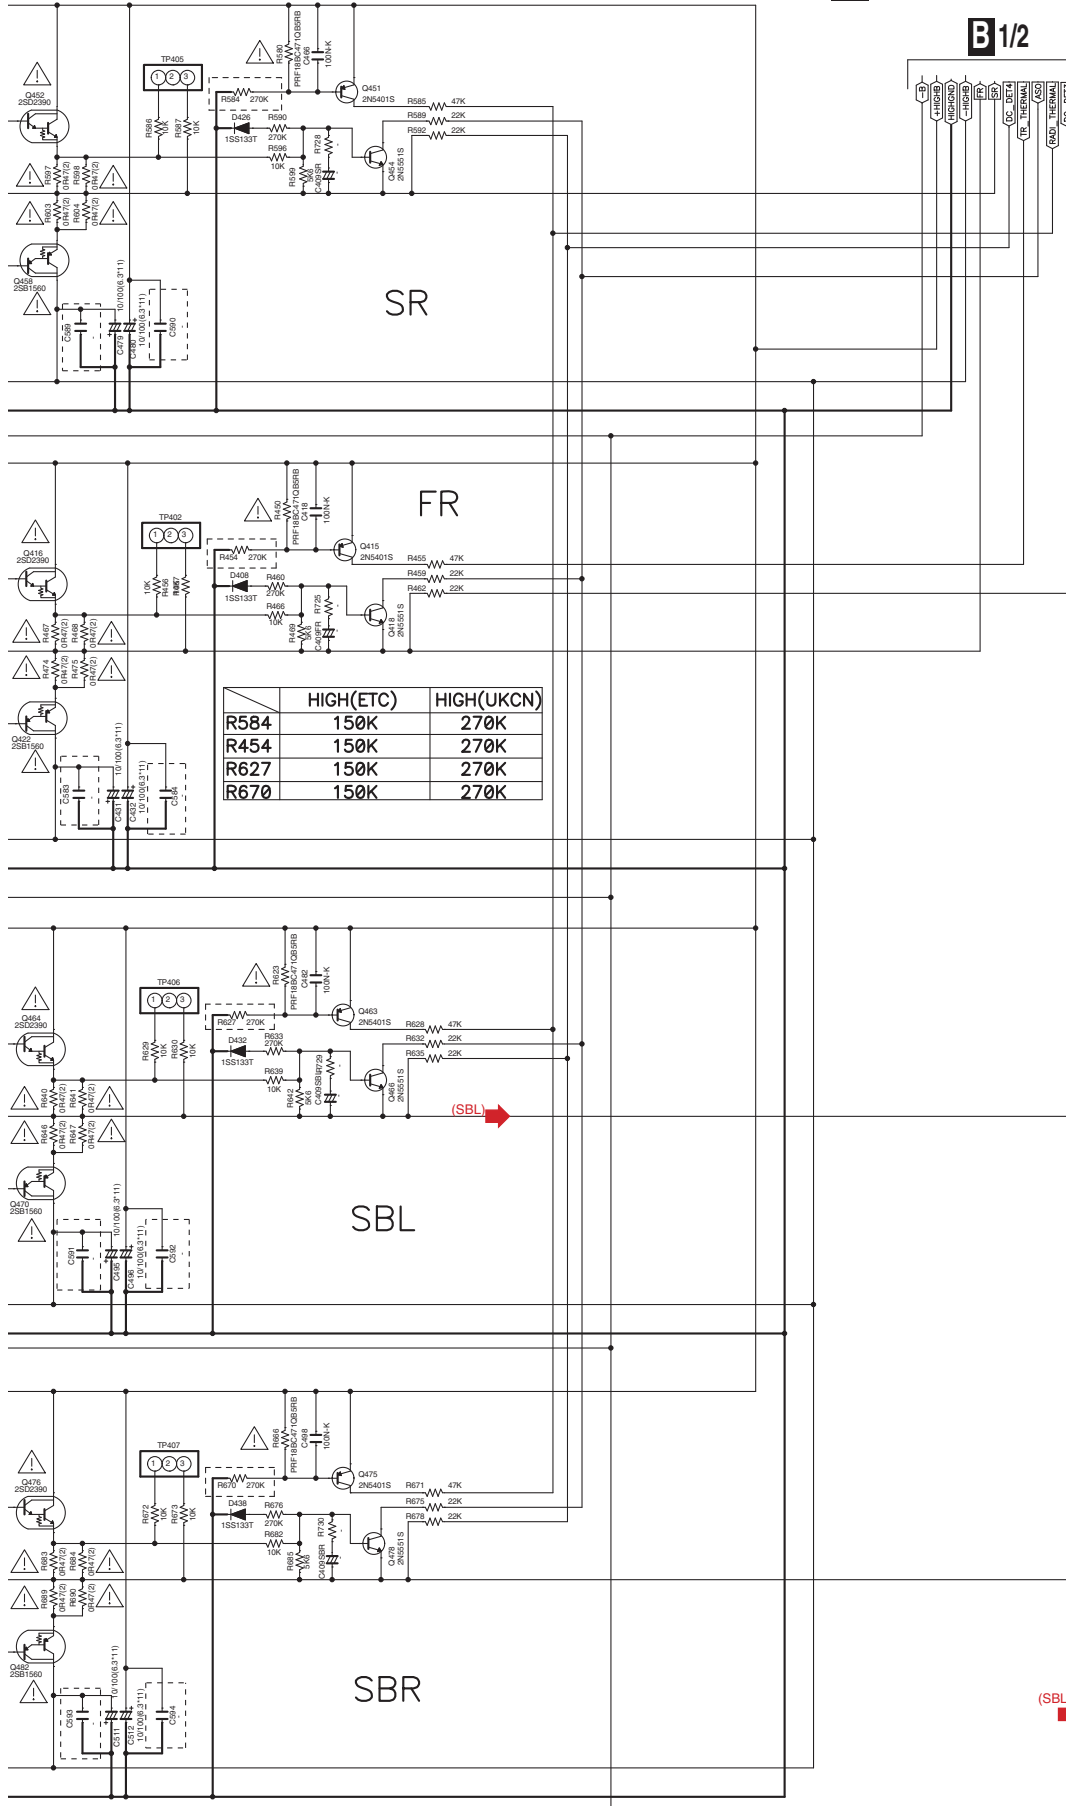

(SBL) : Audio Signal Route (Surround Back L ch)

10.4 MAIN ASSY

A

B

C

D

E

F


FROM MAIN TRANS

C


68

SPEAKER TERMINAL

- NOTES
1. Resistor values are indicated in ohms unless otherwise specified. [$k = 1,000$ $m = 1,000,000$]
 2. Capacitor values are indicated in microfarads unless otherwise specified. [$\mu = \text{micro-microfarads}$]
 3.  : These resistor are to be segregated from printed wiring board or other accessible parts.
- CAUTION
- Safety precaution to be followed during servicing
- 1) Since those parts marked with one critical parts for safety use only the one described in the parts list.
 - 2) Before returning the set to the customer make appropriate leakage current or resistance measurements to determine the exposed parts are properly insulated from the supply circuit.

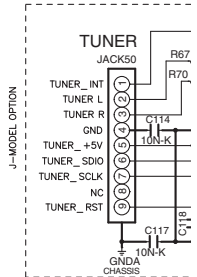

R CP601

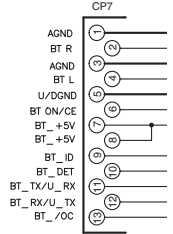

B 1/2 CP406 B 1/2 CP404 B 2/2 CP405 B 1/2 CP403

VSX-1127-K

70





AWX1200: FY13 AVR SEL-LOW
AWX9957: VSX-1127/CU,VSX-1122/SY,/DL
AWX1223: VSX-1027/CU,VSX-922/SY,/F,/DL,/PW,/A,VSA-922/J
AWX1228: VSX-1122/CU,VSX-60/J

	AKW1003	AKW0907	AKW1003	AKW1008
C101	1300/4	AKW1352-1	AKW1352-1	AKW1352-1
C104	1300/4	AKW1352-1	AKW1352-1	AKW1352-1
C105	1300/50	BN	BN	BN
C107	1300/4	AKW1352-1	AKW1352-1	AKW1352-1
C108	1300/50	AKW1352-1	1300/50/50	1300/50/50
C110	1300/4	AKW1352-1	AKW1352-1	AKW1352-1
C116	1300/4	AKW1352-1	AKW1352-1	AKW1352-1
C119	1300/50	1300/50/50	1300/50/50	1300/50/50
C120	0.31x/25	0.31x/25	0.31x/25	0.31x/25
C121	0.31x/25	AKW1352-1	AKW1352-1	AKW1352-1
C122	4700/50	1300/50/50	1300/50/50	1300/50/50
C123	0.31x/16	0.84x/16	0.84x/16	0.84x/16
C124	0.31x/25	4700/50	4700/50	4700/50
C125	1300/50	1300/50/50	1300/50/50	1300/50/50
C127	0.31x/16	0.31x/25	0.31x/25	0.31x/25
C129	4700/50	AKW1352-1	1300/50/50	1300/50/50
C144	1300/50	1300/50/50	1300/50/50	1300/50/50
C145	1300/50	1300/50/50	1300/50/50	1300/50/50
C146	1300/50	1300/50/50	1300/50/50	1300/50/50
C149	1300/50	1300/50/50	1300/50/50	1300/50/50
C173	1300/50	1300/50/50	1300/50/50	1300/50/50
C175	0.31x/16	0.31x/25	0.31x/25	0.31x/25
C176	1300/50	1300/50/50	1300/50/50	1300/50/50
C184	76/50	76/50	76/50	76/50
C187	76/50	76/50	76/50	76/50
C204	4700/50	1300/50/50	1300/50/50	1300/50/50
C207	1300/50	1300/50/50	1300/50/50	1300/50/50
C208	BN	1300/50/50	1300/50/50	1300/50/50
C209	1300/50	1300/50/50	1300/50/50	1300/50/50
C215	BN	4700/50/50	4700/50/50	4700/50/50
C211	BN	4700/50/50	4700/50/50	4700/50/50
C212	1300/50	1300/50/50	1300/50/50	1300/50/50
C213	BN	4700/50/50	4700/50/50	4700/50/50
C214	1300/50	1300/50/50	1300/50/50	1300/50/50
C215	1300/50	1300/50/50	1300/50/50	1300/50/50
C216	BN	1300/50/50	1300/50/50	1300/50/50
C219	BN	1300/50/50	1300/50/50	1300/50/50
C221	BN	1300/50/50	1300/50/50	1300/50/50
C220	BN	1300/50/50	1300/50/50	1300/50/50
C221	BN	4700/50/50	4700/50/50	4700/50/50
C222	650	1300	1300	1300
C223	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C224	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C225	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C226	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C227	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C228	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C229	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C230	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C231	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C232	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C233	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C234	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C235	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C236	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C237	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C238	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C239	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C240	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C241	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C242	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C243	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C244	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C245	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C246	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C247	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C248	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C249	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C250	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C251	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C252	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C253	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C254	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C255	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C256	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C257	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C258	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C259	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C260	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C261	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C262	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C263	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C264	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C265	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C266	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C267	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C268	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C269	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C270	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C271	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C272	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C273	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C274	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C275	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C276	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C277	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C278	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C279	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C280	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C281	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C282	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C283	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C284	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C285	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C286	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C287	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C288	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C289	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C290	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C291	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C292	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C293	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C294	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C295	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C296	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C297	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C298	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C299	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C300	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C301	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C302	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C303	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C304	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C305	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C306	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C307	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C308	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C309	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C310	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C311	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C312	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C313	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C314	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C315	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C316	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C317	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C318	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C319	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C320	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C321	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C322	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C323	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C324	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C325	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C326	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C327	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C328	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C329	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C330	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C331	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C332	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C333	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C334	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C335	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C336	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C337	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C338	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C339	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C340	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C341	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C342	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C343	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C344	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C345	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C346	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C347	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C348	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C349	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C350	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C351	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C352	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C353	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C354	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C355	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C356	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C357	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C358	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C359	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C360	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C361	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C362	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C363	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C364	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C365	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C366	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C367	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C368	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C369	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C370	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C371	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C372	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C373	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C374	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C375	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C376	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C377	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C378	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C379	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C380	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C381	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C382	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C383	AKW1003-A	AKW1003-A	AKW1003-A	AKW1003-A
C384	AKW1003-A	AKW1003-A	AKW1003-A	AKW

D 2/10, 7/10, 8/10

CONT_EMMA

VSX-1127-K

10.6 D-MAIN ASSY (2/10)

D2/10 D-MAIN ASSY

(VSX-1127-K: 7028071752020-IL)

(VSX-1122-K: 7028071752040-IL)

(VSX-60: 7028071752040-IL)

(VSX-1027-K: 7028071752070-IL)

D1/10,7/10,8/10

D3/10-10/10

B

C

D


E

F

D2/10

72




VSX-1127-K

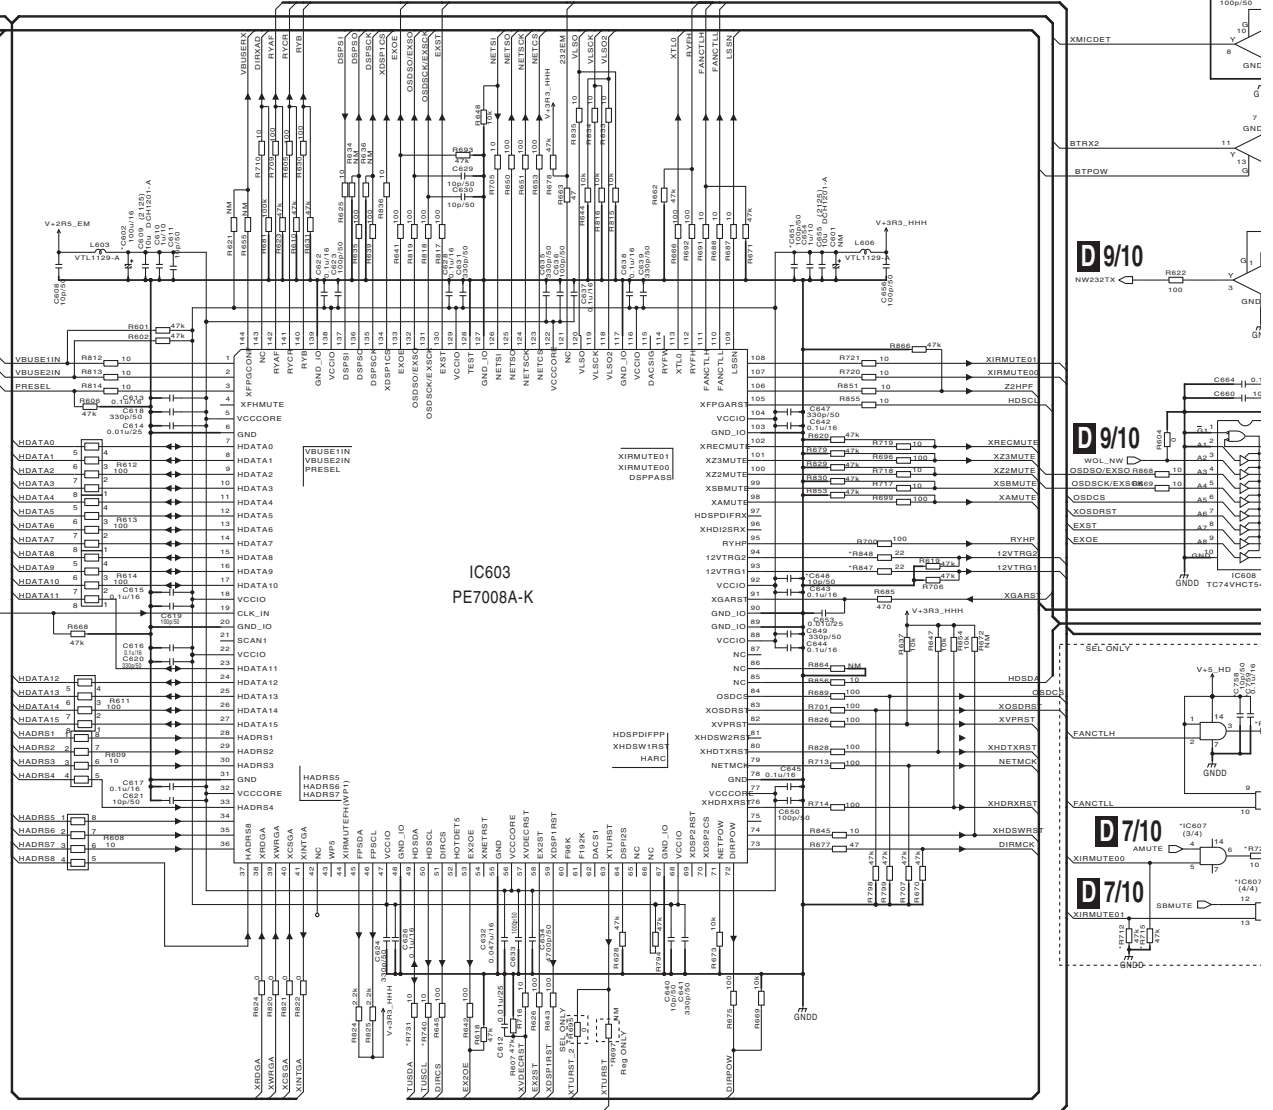

The Δ mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.


Δ 印の部品は、指定部品（安全規格適合部品）を必ず使用すること。

Part No.	Part Name	Part No.	Part Name	Part No.	Part Name
AW0100	AW0100	AW0101	AW0101	AW0102	AW0102
AW0103	AW0103	AW0104	AW0104	AW0105	AW0105
AW0106	AW0106	AW0107	AW0107	AW0108	AW0108
AW0109	AW0109	AW0110	AW0110	AW0111	AW0111
AW0112	AW0112	AW0113	AW0113	AW0114	AW0114
AW0115	AW0115	AW0116	AW0116	AW0117	AW0117
AW0118	AW0118	AW0119	AW0119	AW0120	AW0120
AW0121	AW0121	AW0122	AW0122	AW0123	AW0123
AW0124	AW0124	AW0125	AW0125	AW0126	AW0126
AW0127	AW0127	AW0128	AW0128	AW0129	AW0129
AW0130	AW0130	AW0131	AW0131	AW0132	AW0132
AW0133	AW0133	AW0134	AW0134	AW0135	AW0135
AW0136	AW0136	AW0137	AW0137	AW0138	AW0138
AW0139	AW0139	AW0140	AW0140	AW0141	AW0141
AW0142	AW0142	AW0143	AW0143	AW0144	AW0144
AW0145	AW0145	AW0146	AW0146	AW0147	AW0147
AW0148	AW0148	AW0149	AW0149	AW0150	AW0150
AW0151	AW0151	AW0152	AW0152	AW0153	AW0153
AW0154	AW0154	AW0155	AW0155	AW0156	AW0156
AW0157	AW0157	AW0158	AW0158	AW0159	AW0159
AW0160	AW0160	AW0161	AW0161	AW0162	AW0162
AW0163	AW0163	AW0164	AW0164	AW0165	AW0165
AW0166	AW0166	AW0167	AW0167	AW0168	AW0168
AW0169	AW0169	AW0170	AW0170	AW0171	AW0171
AW0172	AW0172	AW0173	AW0173	AW0174	AW0174
AW0175	AW0175	AW0176	AW0176	AW0177	AW0177
AW0178	AW0178	AW0179	AW0179	AW0180	AW0180
AW0181	AW0181	AW0182	AW0182	AW0183	AW0183
AW0184	AW0184	AW0185	AW0185	AW0186	AW0186
AW0187	AW0187	AW0188	AW0188	AW0189	AW0189
AW0190	AW0190	AW0191	AW0191	AW0192	AW0192
AW0193	AW0193	AW0194	AW0194	AW0195	AW0195
AW0196	AW0196	AW0197	AW0197	AW0198	AW0198
AW0199	AW0199	AW0200	AW0200	AW0201	AW0201

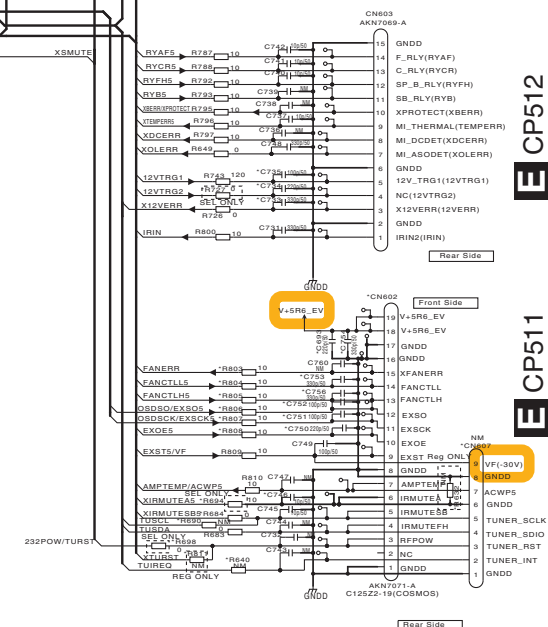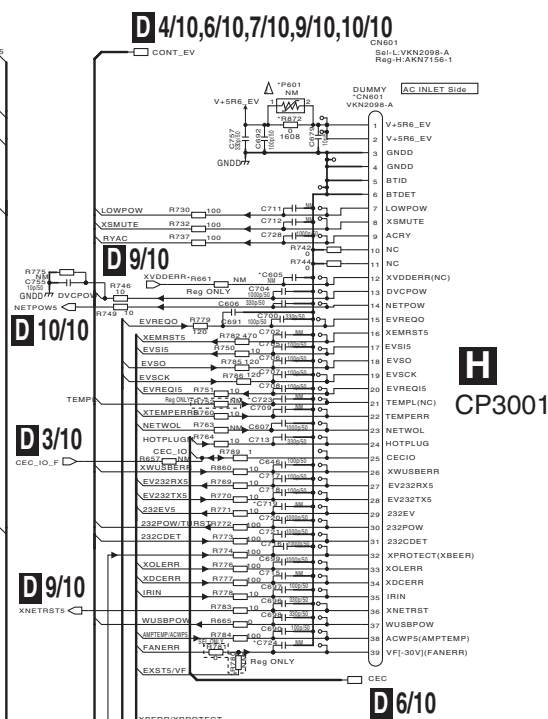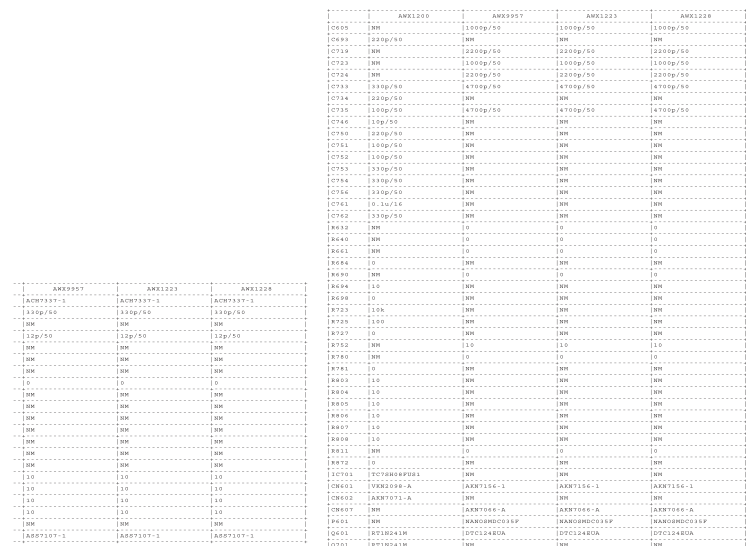


AWX1200: FY13 AVR SEL-LOW
AWX9957: VSX-1127/CU,VSX-1122/SY,/DL
AWX1223: VSX-1027/CU,VSX-922/SY,/F,/DL,/PW,/A,VSA-922/J
AWX1228: VSX-1122/CU,VSX-60/U

10.7 D-MAIN ASSY (3/10)

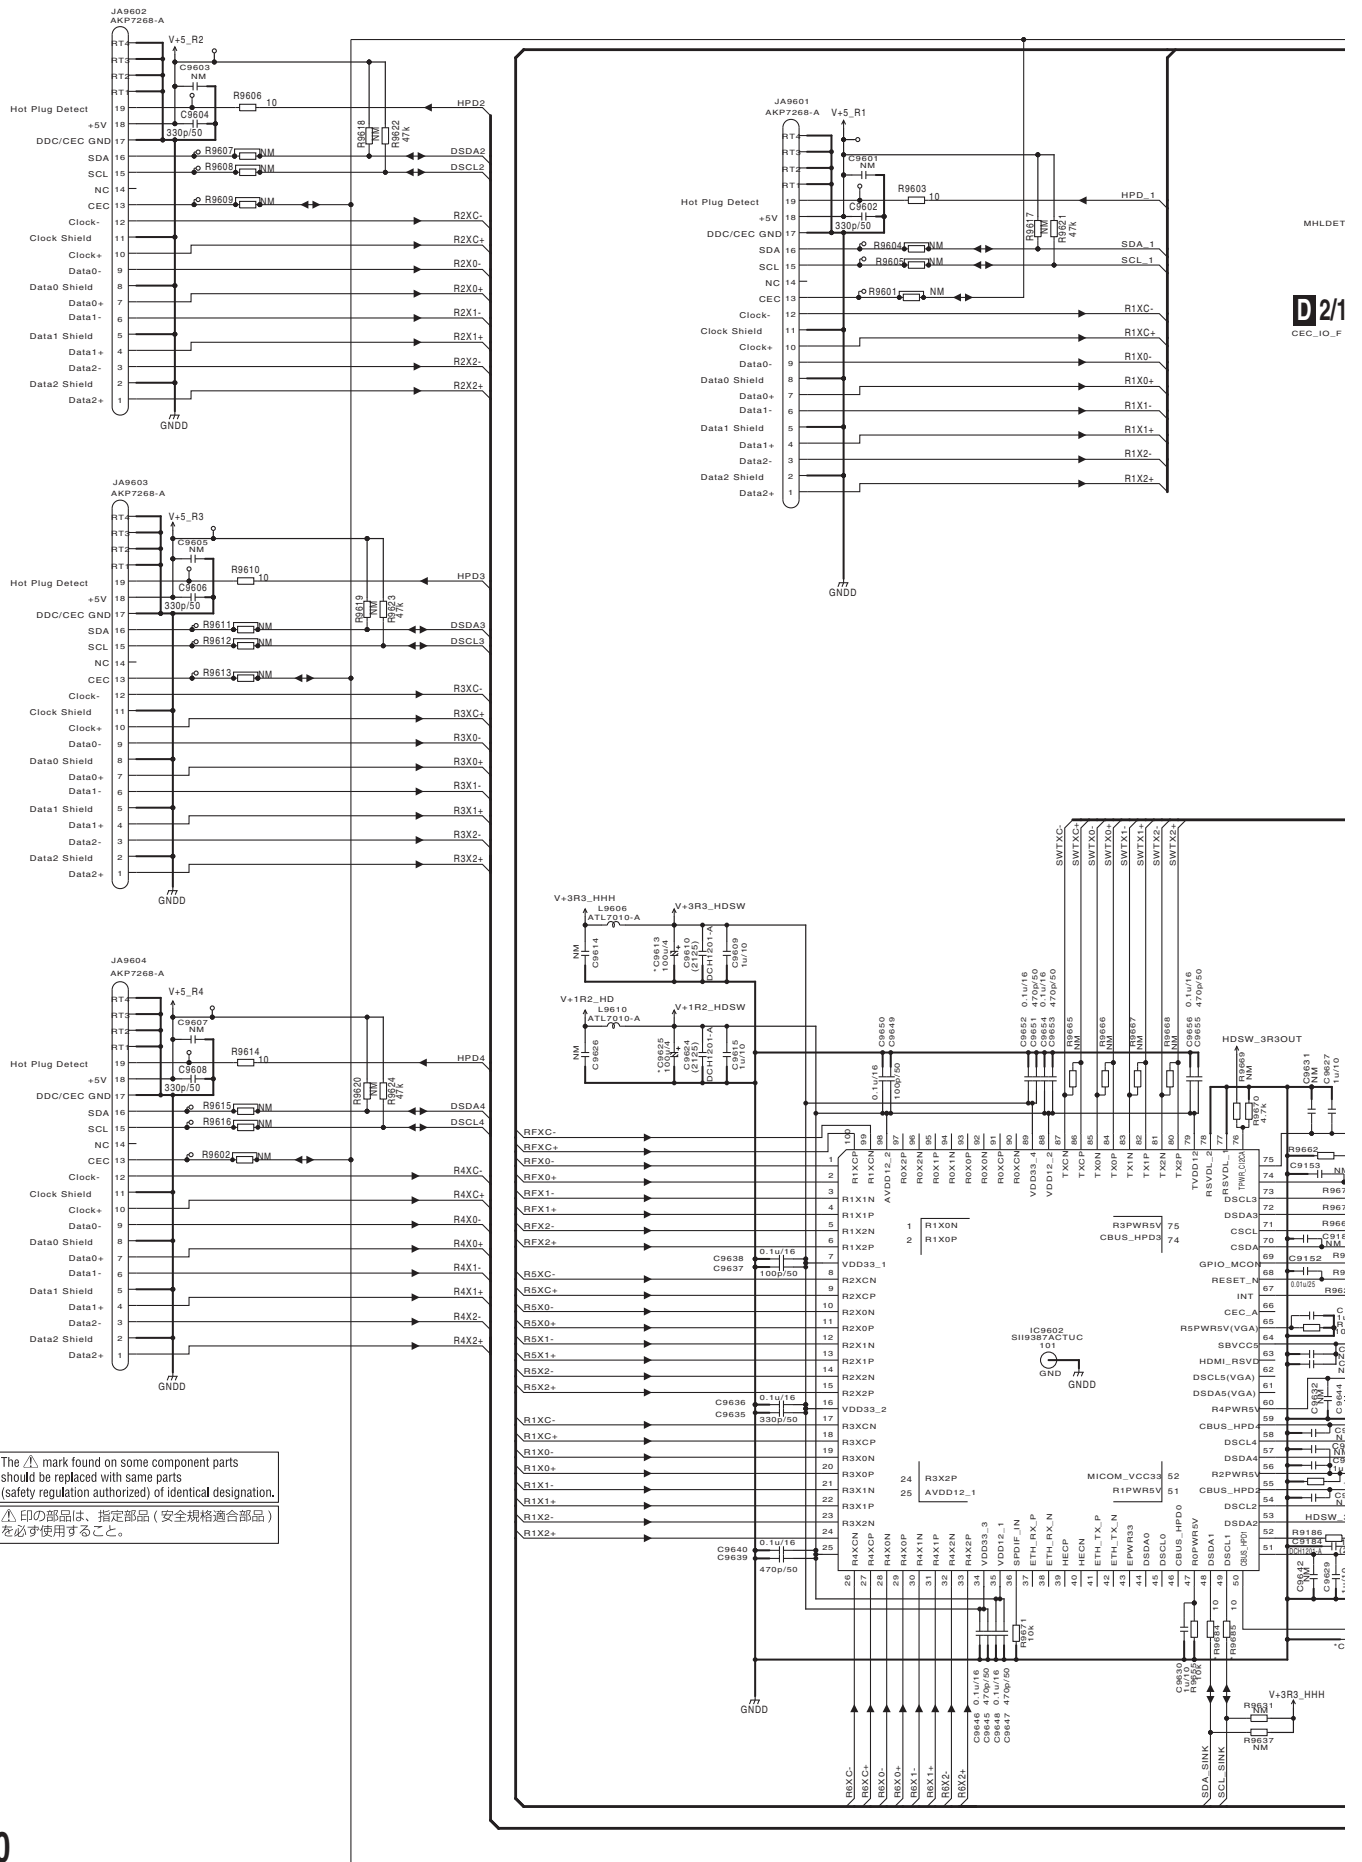

The Δ mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.
 Δ 印の部品は、指定部品（安全規格適合部品）を必ず使用すること。

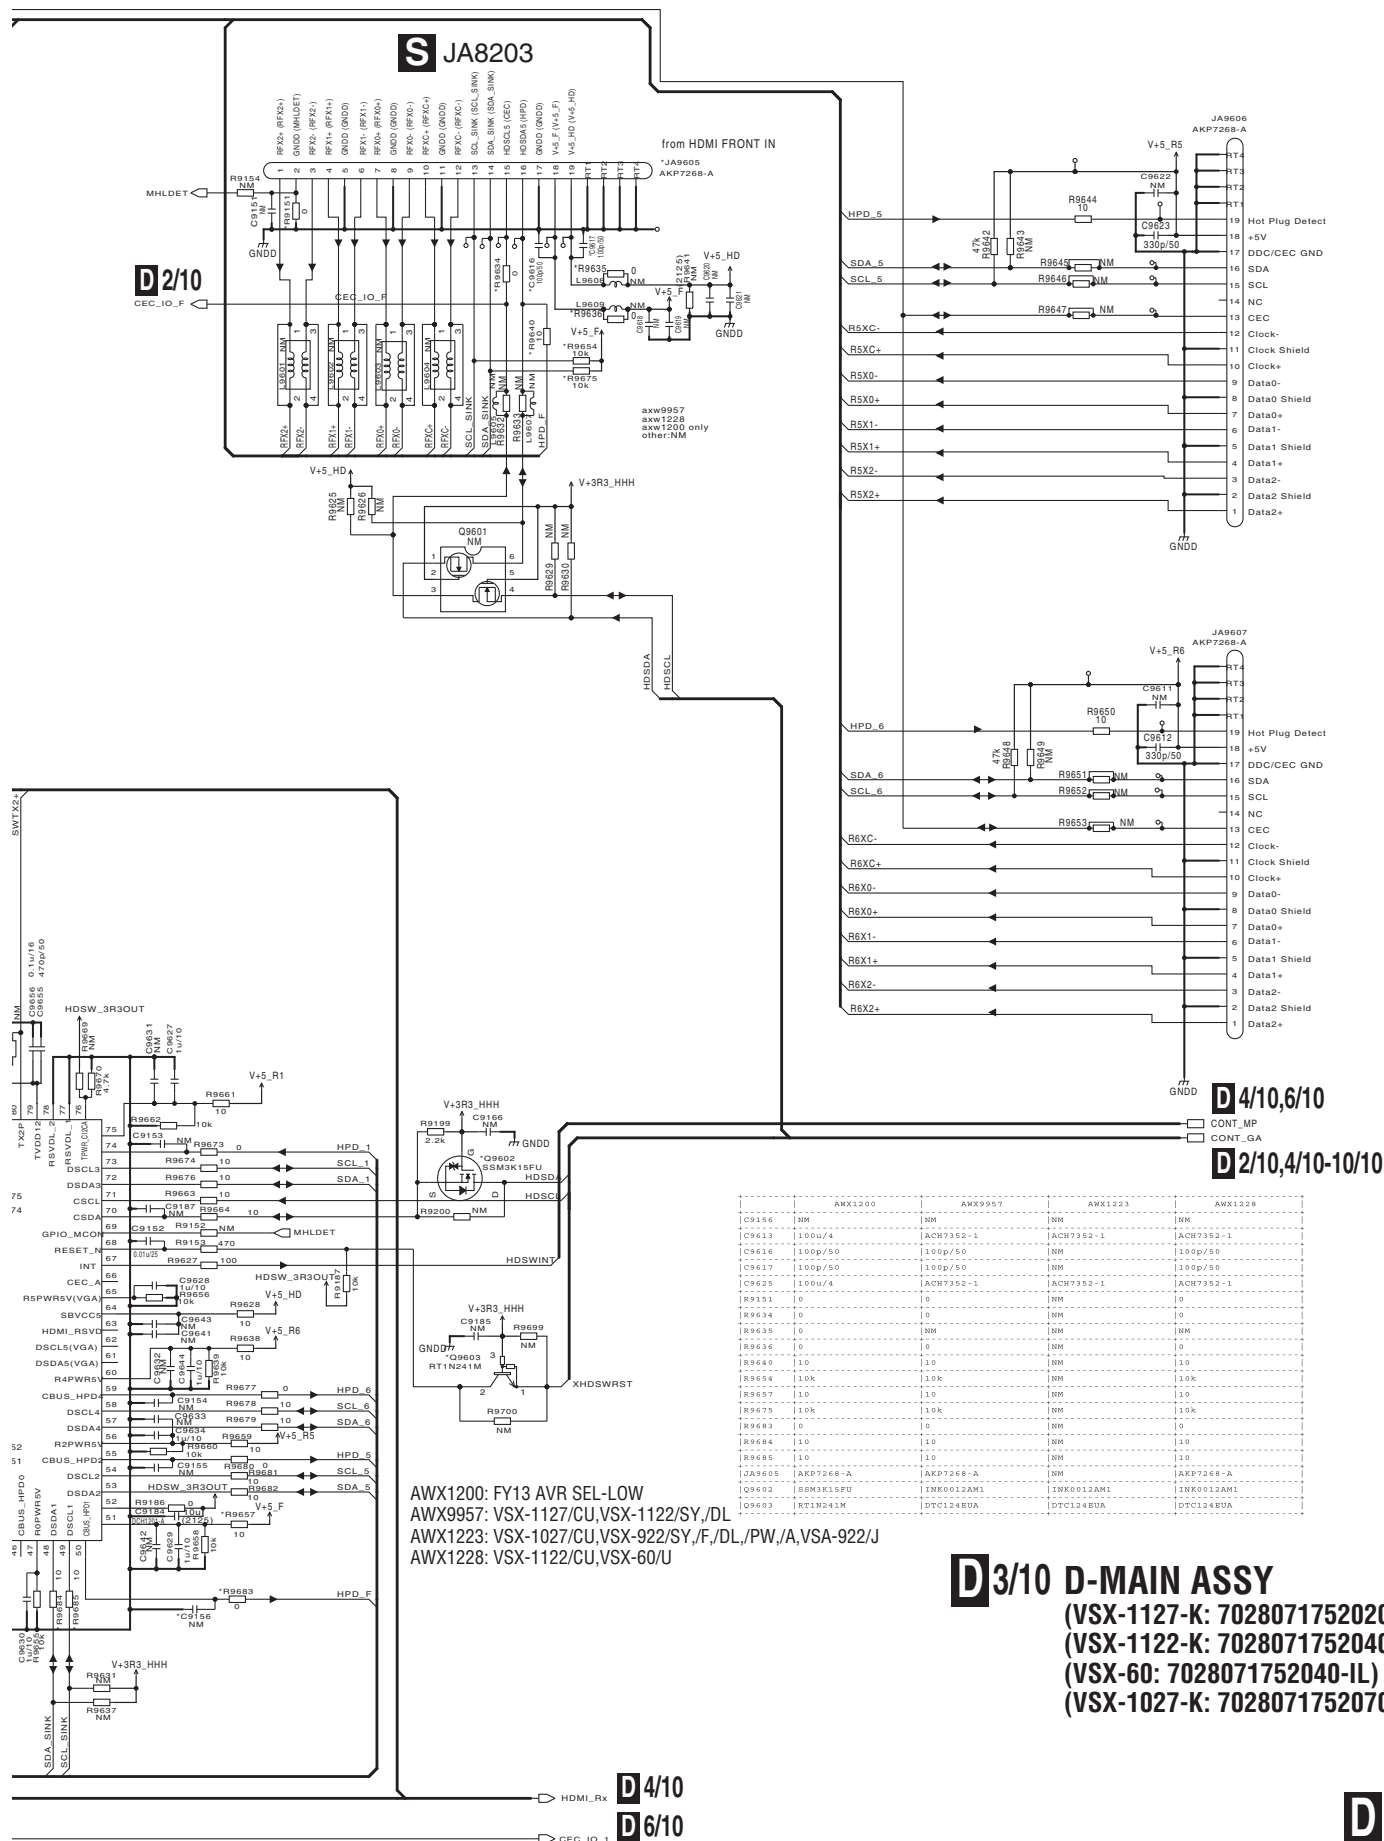

A

B


C

D

E


F

D 4/10



77

D 4/10

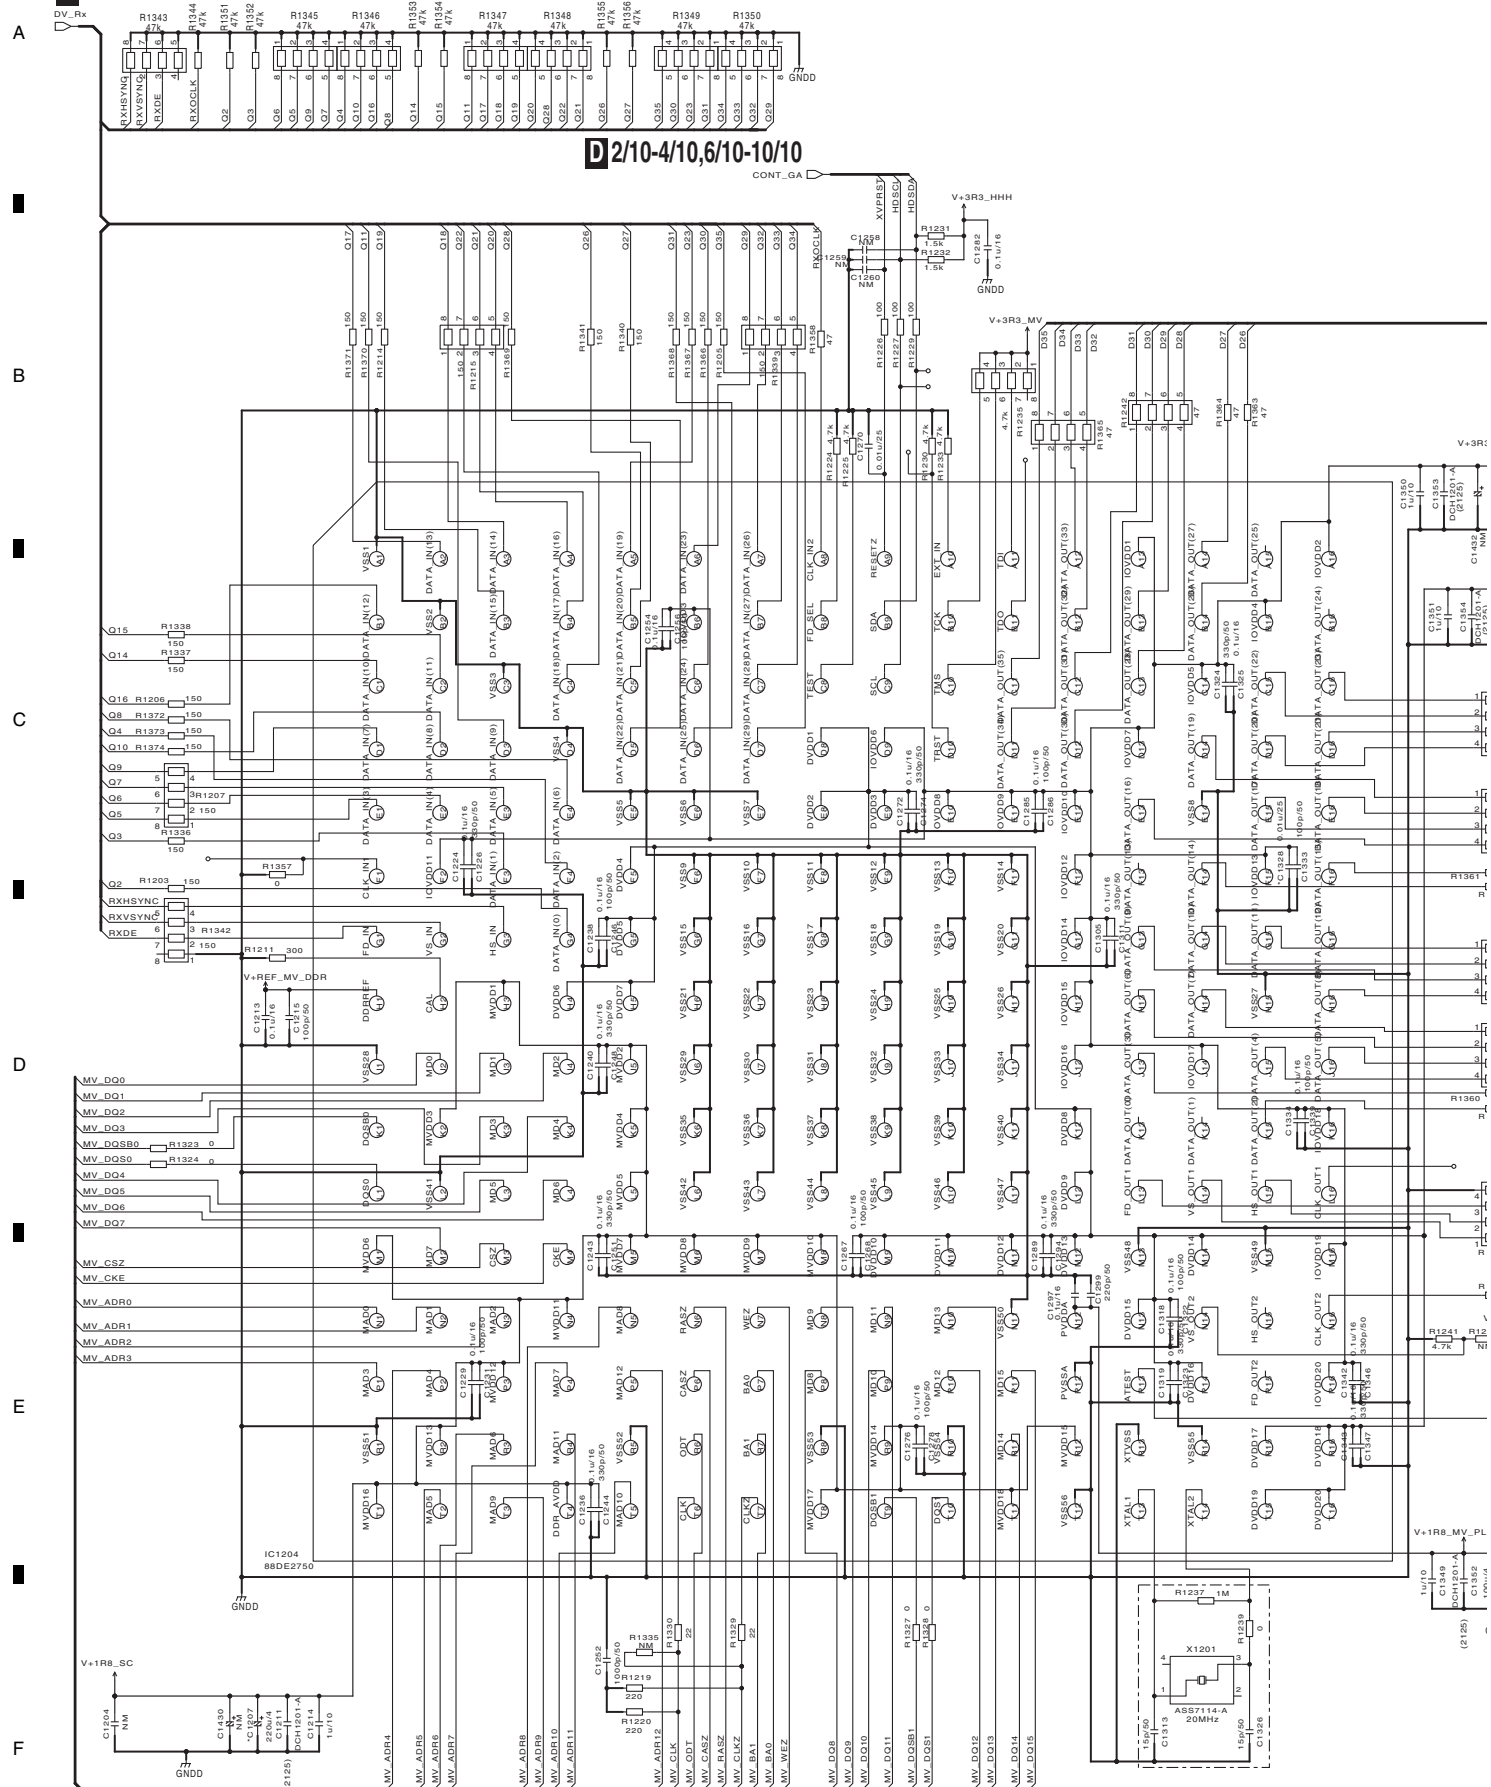

D 5/10

10.10 D-MAIN ASSY (6/10)

A

B

C

D

E


F

D 5/10
DV_TX

D 4/10,7/10,8/10
DSP

D 7/10 TXMCLKI

D 6/10

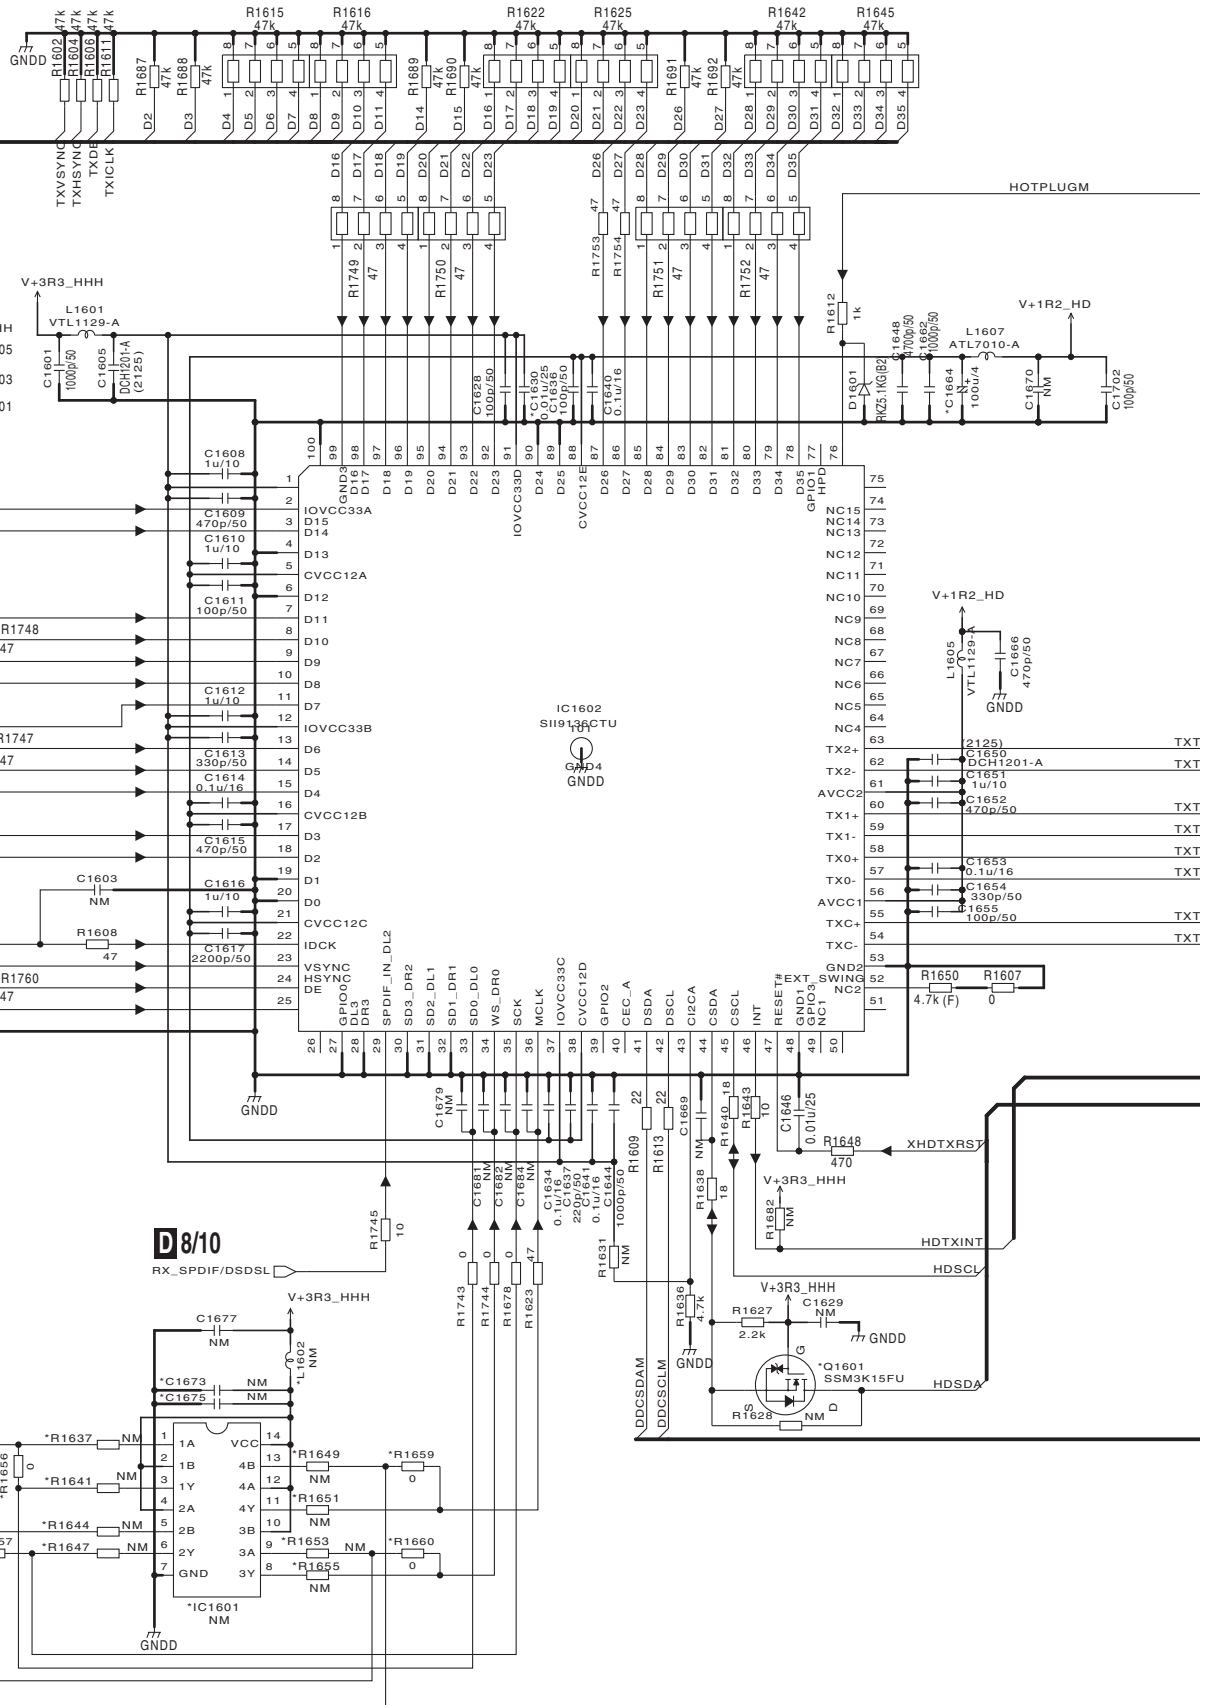



83

4



D 8/10 D-MAIN ASSY

(VSX-1127-K: 7028071752020-IL)
 (VSX-1122-K: 7028071752040-IL)
 (VSX-60: 7028071752040-IL)
 (VSX-1027-K: 7028071752070-IL)

AWX1200: FY13 AVR SEL-LOW
 AWX9957: VSX-1127/CU,VSX-1122/SY/DL
 AWX1223: VSX-1027/CU,VSX-922/SY,F/DL,PW/A,VSA-922/J
 AWX1228: VSX-1122/CU,VSX-60/U

	AWX1200	AWX9957	AWX1223	AWX1228
IC1509	1000u/16	ACR7349-1	ACR7349-1	ACR7349-1
IC1512	100	4700p/50	4700p/50	4700p/50
IC1514	100	4700p/50	4700p/50	4700p/50
IC1517	100	4700p/50	4700p/50	4700p/50
IC1518	100p/50	100	100	100
IC1519	100	100p/50	100p/50	100p/50
IC1520	100	100p/50	100p/50	100p/50
IC1521	100	4700p/50	4700p/50	4700p/50
IC1522	100	100	100	100
IC1524	0.1u/16	100	100	100
IC1525	100	100p/50	100p/50	100p/50
IC1528	100p/50	100	100	100
IC1529	100	4700p/50	4700p/50	4700p/50
IC1531	100	4700p/50	4700p/50	4700p/50
IC1534	100	1000p/50	1000p/50	1000p/50
IC1538	100p/50	100	100	100
IC1539	100p/50	100	100	100
IC1541	100p/50	100	100	100
IC1542	100	4700p/50	4700p/50	4700p/50
IC1543	100	4700p/50	4700p/50	4700p/50
IC1545	100p/50	100	100	100
IC1546	100p/50	100	100	100
IC1547	100p/50	100	100	100
IC1550	100p/50	470p/50	470p/50	470p/50
IC9850	100p/50	100	100	100
IC9851	100p/50	100	100	100
IC9852	100	100	100	100
IC9853	100p/50	100	100	100
IC9854	100p/50	100	100	100
IC9855	100p/50	100	100	100
IC9856	100p/50	100	100	100
IC9857	100p/50	100	100	100
IC9858	100p/50	100	100	100
IC9859	100p/50	100	100	100
IC9860	100p/50	100	100	100
RI1523	10	100	100	100
RI1526	10	100	100	100
RI1529	10	100	100	100
RI1530	10	100	100	100
RI1531	10	100	100	100
RI1534	100	100	100	100
RI1539	10	100	100	100
RI1540	100	100	100	100
RI1541	100	100	100	100
RI1542	100	100	100	100
RI1543	100	100	100	100
RI1544	100	100	100	100
RI1545	100	100	100	100
RI1546	100	100	100	100
RI1548	10	100	100	100
RI1557	100	10	10	10
RI1558	100	10	10	10
RI1559	10	10	10	10
RI1560	10	10	10	10
RI1561	10	10	10	10
RI1562	10	10	10	10
RI1563	10	10	10	10
RI1564	10	10	10	10
RI1565	10	10	10	10
RI1566	10	10	10	10
RI1567	10	10	10	10
RI1568	10	10	10	10
RI1569	10	10	10	10
RI1570	10	10	10	10
RI1571	10	10	10	10
RI1572	10	10	10	10
RI1573	10	10	10	10
RI1574	10	10	10	10
RI1575	10	10	10	10
RI1576	10	10	10	10
RI1577	10	10	10	10
RI1578	10	10	10	10
RI1579	10	10	10	10
RI1580	10	10	10	10
RI1581	10	10	10	10
RI1582	10	10	10	10
RI1583	10	10	10	10
RI1584	10	10	10	10
RI1585	10	10	10	10
RI1586	10	10	10	10
RI1587	10	10	10	10
RI1588	10	10	10	10
RI1589	10	10	10	10
RI1590	10	10	10	10
RI1591	10	10	10	10
RI1592	10	10	10	10
RI1593	10	10	10	10
RI1594	10	10	10	10
RI1595	10	10	10	10
RI1596	10	10	10	10
RI1597	10	10	10	10
RI1598	10	10	10	10
RI1599	10	10	10	10
RI1600	10	10	10	10
RI1601	10	10	10	10
RI1602	10	10	10	10
RI1603	10	10	10	10
RI1604	10	10	10	10
RI1605	10	10	10	10
RI1606	10	10	10	10
RI1607	10	10	10	10
RI1608	10	10	10	10
RI1609	10	10	10	10
RI1610	10	10	10	10
RI1611	10	10	10	10
RI1612	10	10	10	10
RI1613	10	10	10	10
RI1614	10	10	10	10
RI1615	10	10	10	10
RI1616	10	10	10	10
RI1617	10	10	10	10
RI1618	10	10	10	10
RI1619	10	10	10	10
RI1620	10	10	10	10
RI1621	10	10	10	10
RI1622	10	10	10	10
RI1623	10	10	10	10
RI1624	10	10	10	10
RI1625	10	10	10	10
RI1626	10	10	10	10
RI1627	10	10	10	10
RI1628	10	10	10	10
RI1629	10	10	10	10
RI1630	10	10	10	10
RI1631	10	10	10	10
RI1632	10	10	10	10
RI1633	10	10	10	10
RI1634	10	10	10	10
RI1635	10	10	10	10
RI1636	10	10	10	10
RI1637	10	10	10	10
RI1638	10	10	10	10
RI1639	10	10	10	10
RI1640	10	10	10	10
RI1641	10	10	10	10
RI1642	10	10	10	10
RI1643	10	10	10	10
RI1644	10	10	10	10
RI1645	10	10	10	10
RI1646	10	10	10	10
RI1647	10	10	10	10
RI1648	10	10	10	10
RI1649	10	10	10	10
RI1650	10	10	10	10
RI1651	10	10	10	10
RI1652	10	10	10	10
RI1653	10	10	10	10
RI1654	10	10	10	10
RI1655	10	10	10	10
RI1656	10	10	10	10
RI1657	10	10	10	10
RI1658	10	10	10	10
RI1659	10	10	10	10
RI1660	10	10	10	10
RI1661	10	10	10	10
RI1662	10	10	10	10
RI1663	10	10	10	10
RI1664	10	10	10	10
RI1665	10	10	10	10
RI1666	10	10	10	10
RI1667	10	10	10	10
RI1668	10	10	10	10
RI1669	10	10	10	10
RI1670	10	10	10	10
RI1671	10	10	10	10
RI1672	10	10	10	10
RI1673	10	10	10	10
RI1674	10	10	10	10
RI1675	10	10	10	10
RI1676	10	10	10	10
RI1677	10	10	10	10
RI1678	10	10	10	10
RI1679	10	10	10	10
RI1680	10	10	10	10
RI1681	10	10	10	10
RI1682	10	10	10	10
RI1683	10	10	10	10
RI1684	10	10	10	10
RI1685	10	10	10	10
RI1686	10	10	10	10
RI1687	10	10	10	10
RI1688	10	10	10	10
RI1689	10	10	10	10
RI1690	10	10	10	10
RI1691	10	10	10	10
RI1692	10	10	10	10
RI1693	10	10	10	10
RI1694	10	10	10	10
RI1695	10	10	10	10
RI1696	10	10	10	10
RI1697	10	10	10	10
RI1698	10	10	10	10
RI1699	10	10	10	10
RI1700	10	10	10	10
RI1701	10	10	10	10
RI1702	10	10	10	10
RI1703	10	10	10	10
RI1704	10	10	10	10
RI1705	10	10	10	10
RI1706	10	10	10	10
RI1707	10	10	10	10
RI1708	10	10	10	10
RI1709	10	10	10	10
RI1710	10	10	10	10
RI1711	10	10	10	10
RI1712	10	10	10	10
RI1713	10	10	10	10
RI1714	10	10	10	10
RI1715	10	10	10	10
RI1716	10	10	10	10
RI1717	10	10	10	10
RI1718	10	10	10	10
RI1719	10	10	10	10
RI1720	10	10	10	10
RI1721	10	10	10	10
RI1722	10	10	10	10
RI1723	10	10	10	10
RI1724	10	10	10	10
RI1725	10	10	10	10
RI1726	10	10	10	10
RI1727	10	10	10	10
RI1728	10	10	10	10
RI1729	10	10	10	10
RI1730	10	10	10	10
RI1731	10	10	10	10
RI1732	10	10	10	10
RI1733	10	10	10	10
RI1734	10	10	10	10
RI1735	10	10	10	10
RI1736	10	10	10	10
RI1737	10	10	10	10
RI1738	10	10	10	10
RI1739	10	10	10	10
RI1740	10	10	10	10
RI1741	10	10	10	10
RI1742	10	10	10	10
RI1743	10	10	10	10
RI1744	10	10	10	10
RI1745	10	10	10	10
RI1746	10	10	10	10
RI1747	10	10	10	10
RI1748	10	10	10	10
RI1749	10	10	10	10
RI1750	10	10	10	10
RI1751	10	10	10	10
RI1752	10	10	10	10
RI1753	10	10	10	10
RI1754	10	10	10	10
RI1755	10	10	10	10
RI1756	10	10	10	10
RI1757	10	10	10	10
RI1758	10	10	10	10
RI1759	10	10	10	10
RI1760	10	10	10	10
RI1761	10	10	10	10
RI1762	10	10	10	10
RI1763	10	10	10	10
RI1764	10	10	10	10


4



△

F



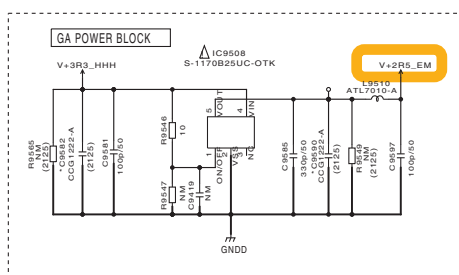

4

A



C

D

F


F

E

VSX-1127-K

D 2/10 CN603**D** 2/10 CN607**E** IR ASSY

(VSX-1127-K, VSX-1122-K, VSX-1027-K
: 7028071771010-IL)
(VSX-60: 7028071771040-IL)

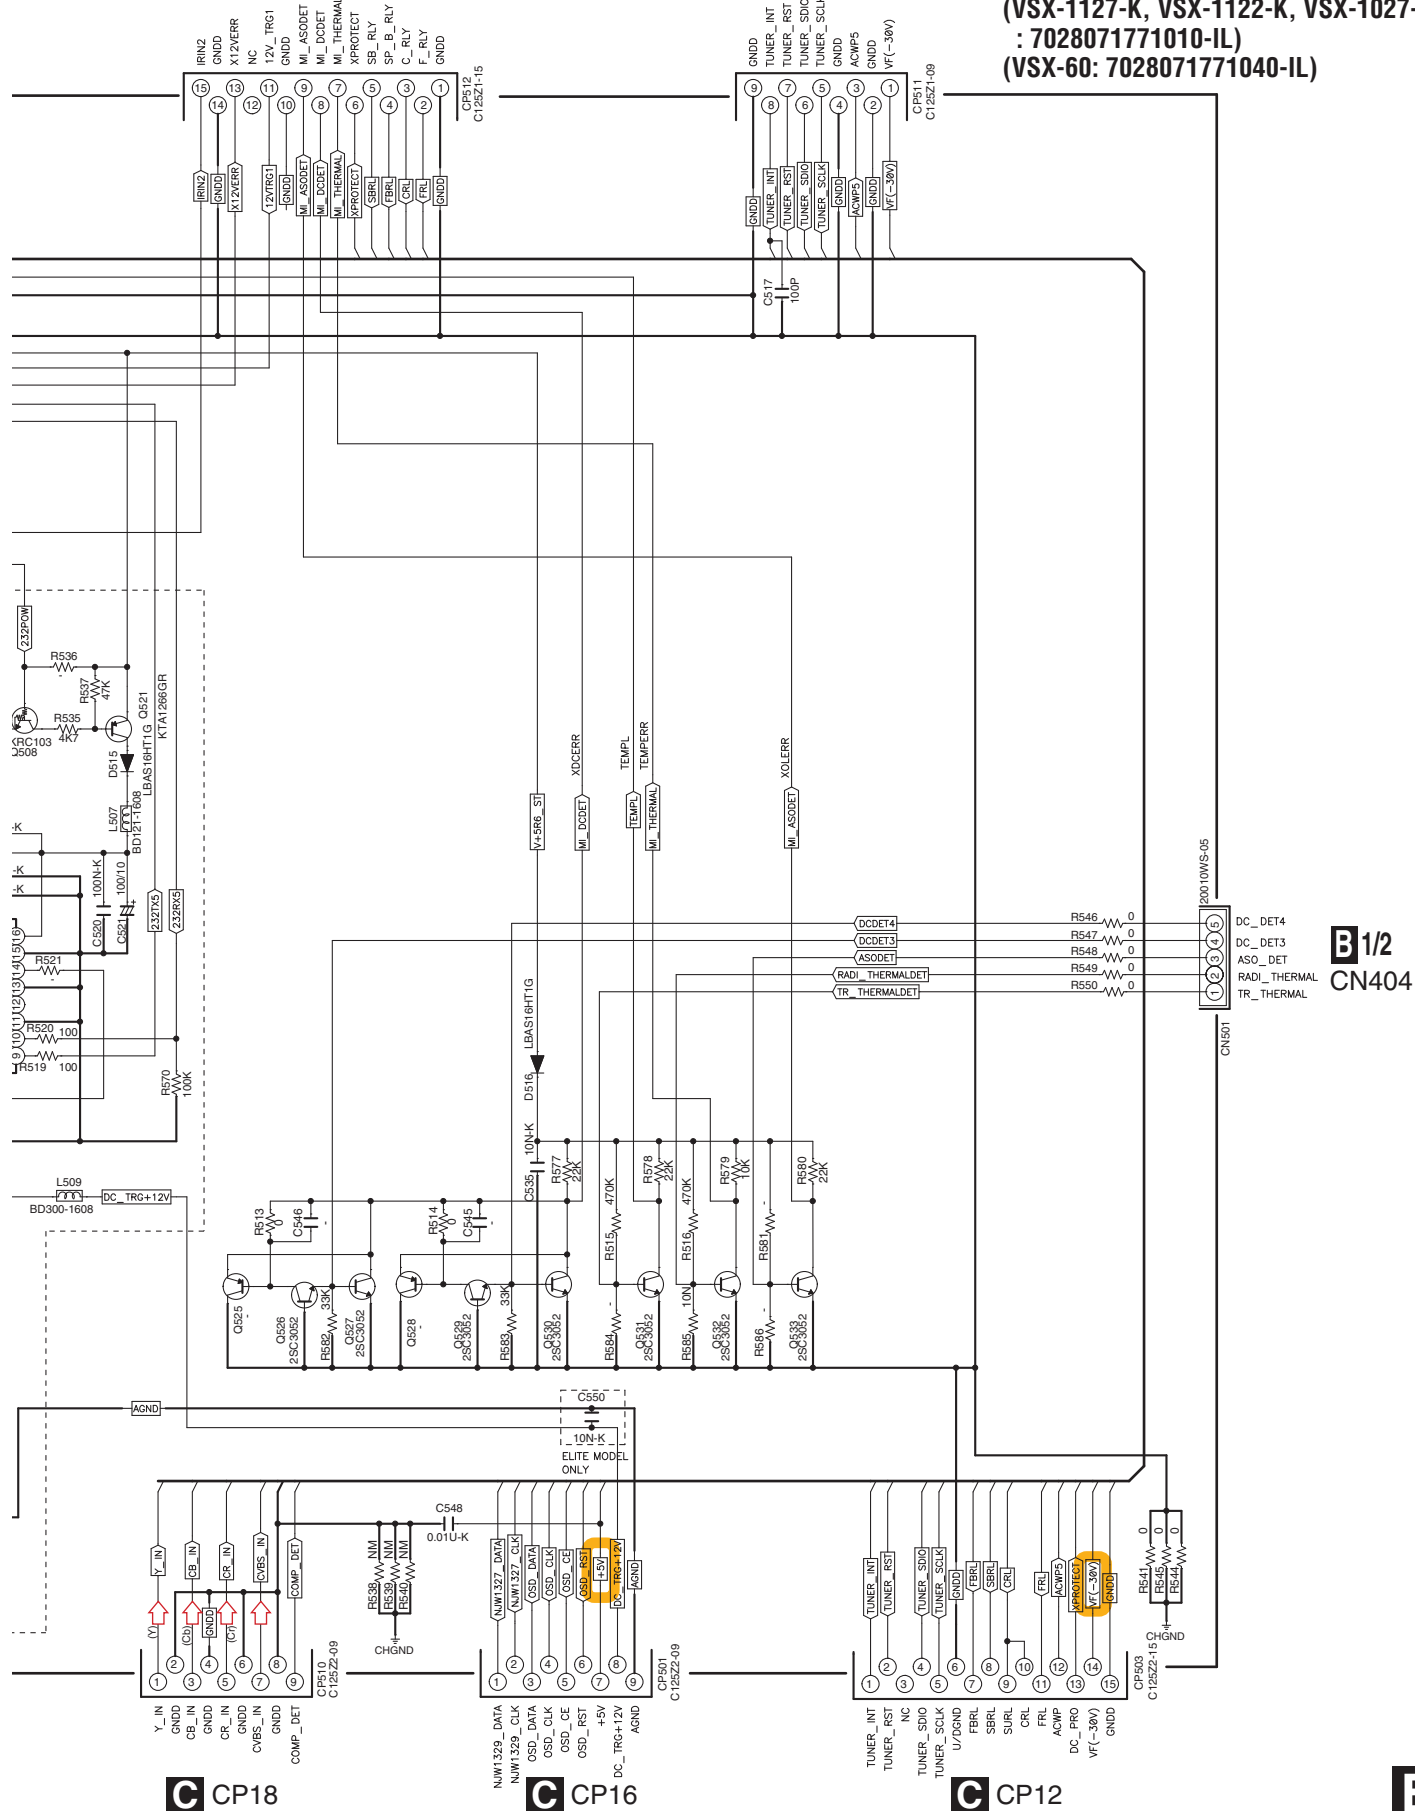

VSX-1127-K

10.16 VIDEO ASSY

A


B

C

D

E

F

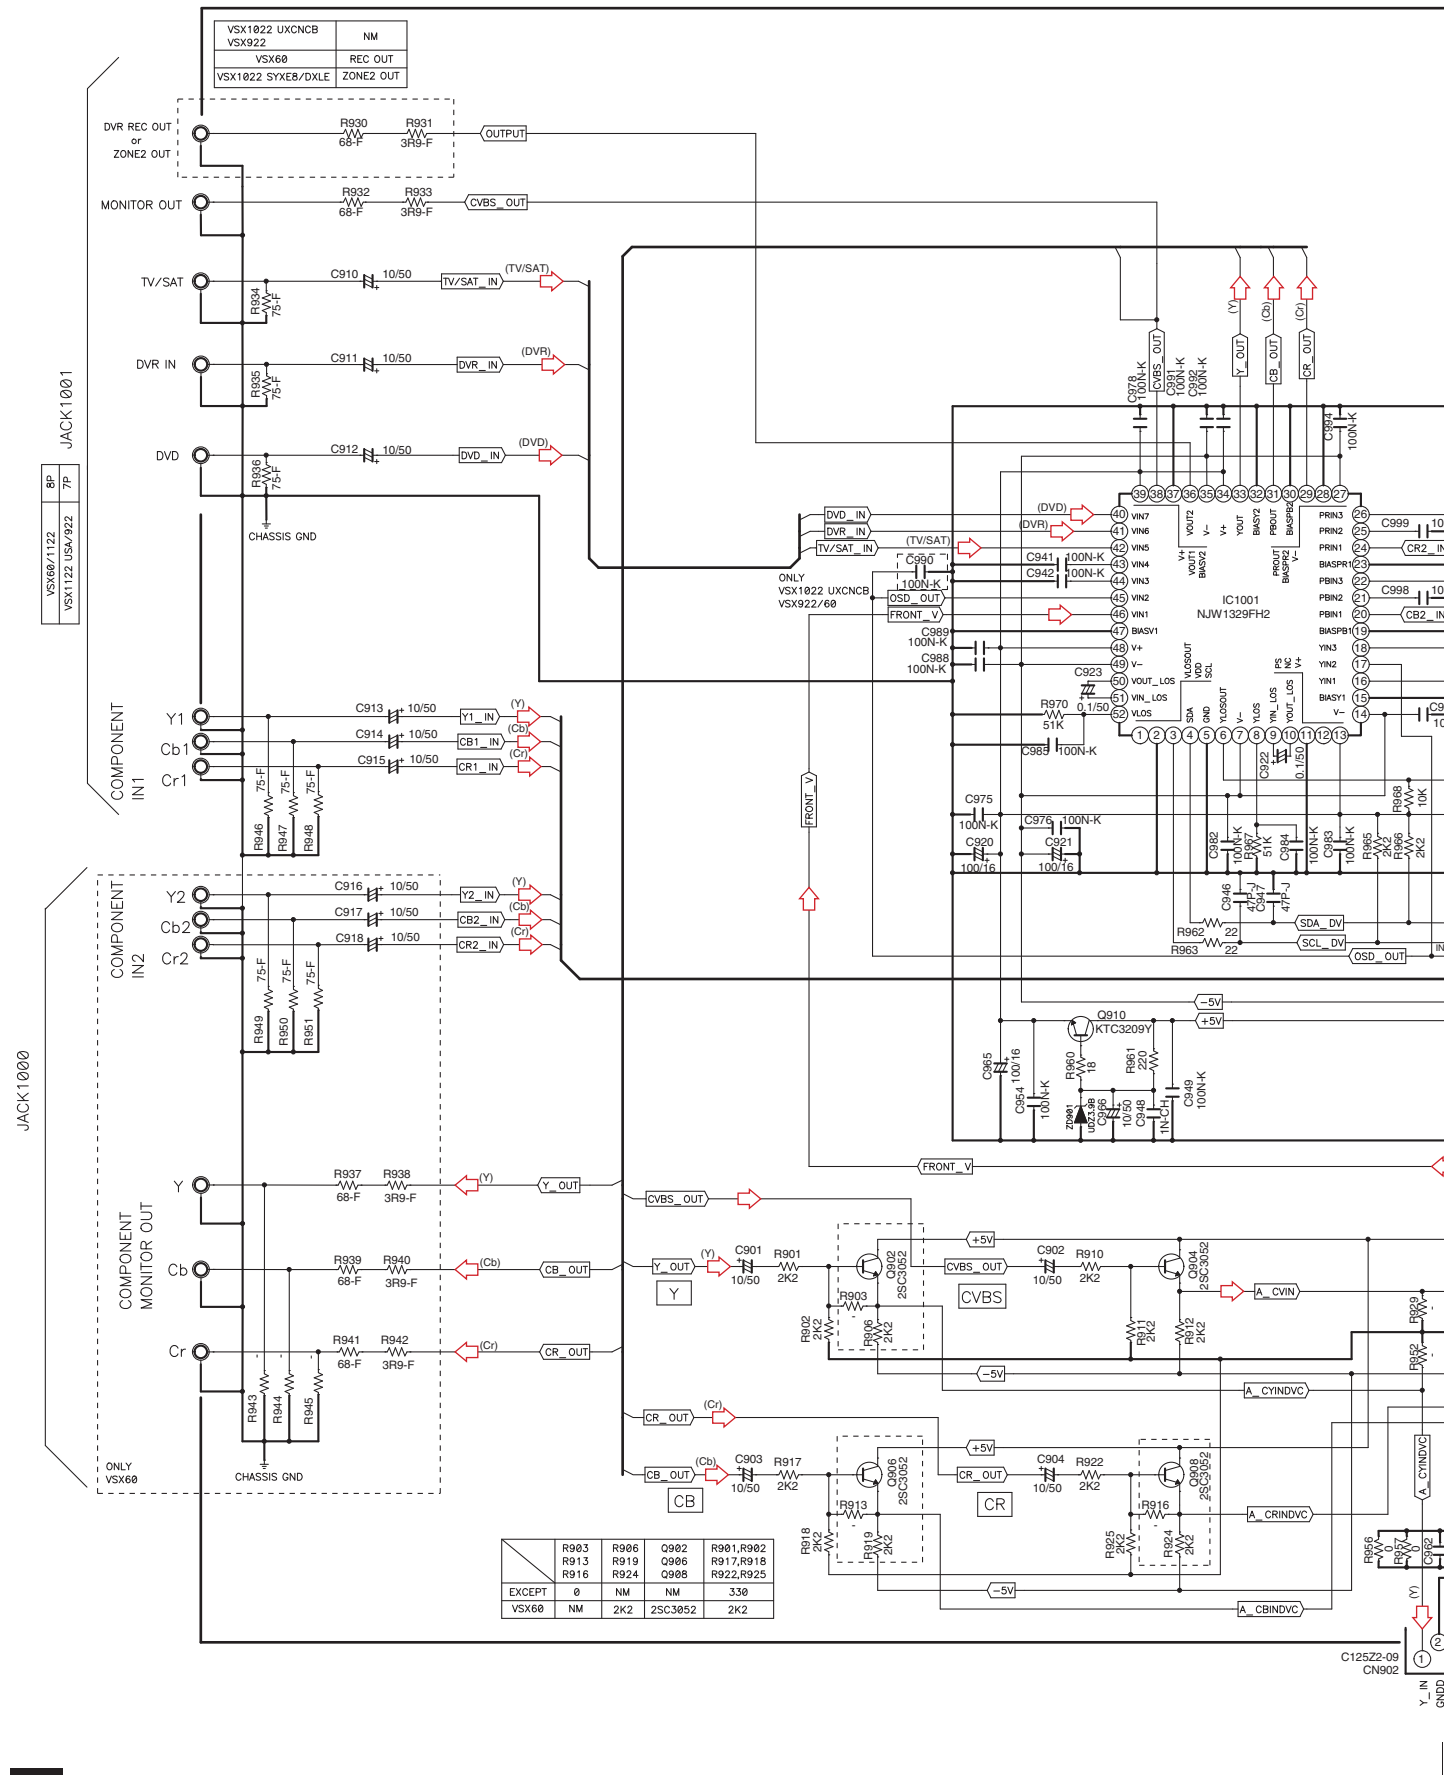


F VIDEO ASSY

(VSX-1127-K: 7028071712020-IL)

(VSX-1122-K: 7028071712070-IL)

(VSX-60: 7028071712040-IL)

(VSX-1027-K: 7028071712070-IL)

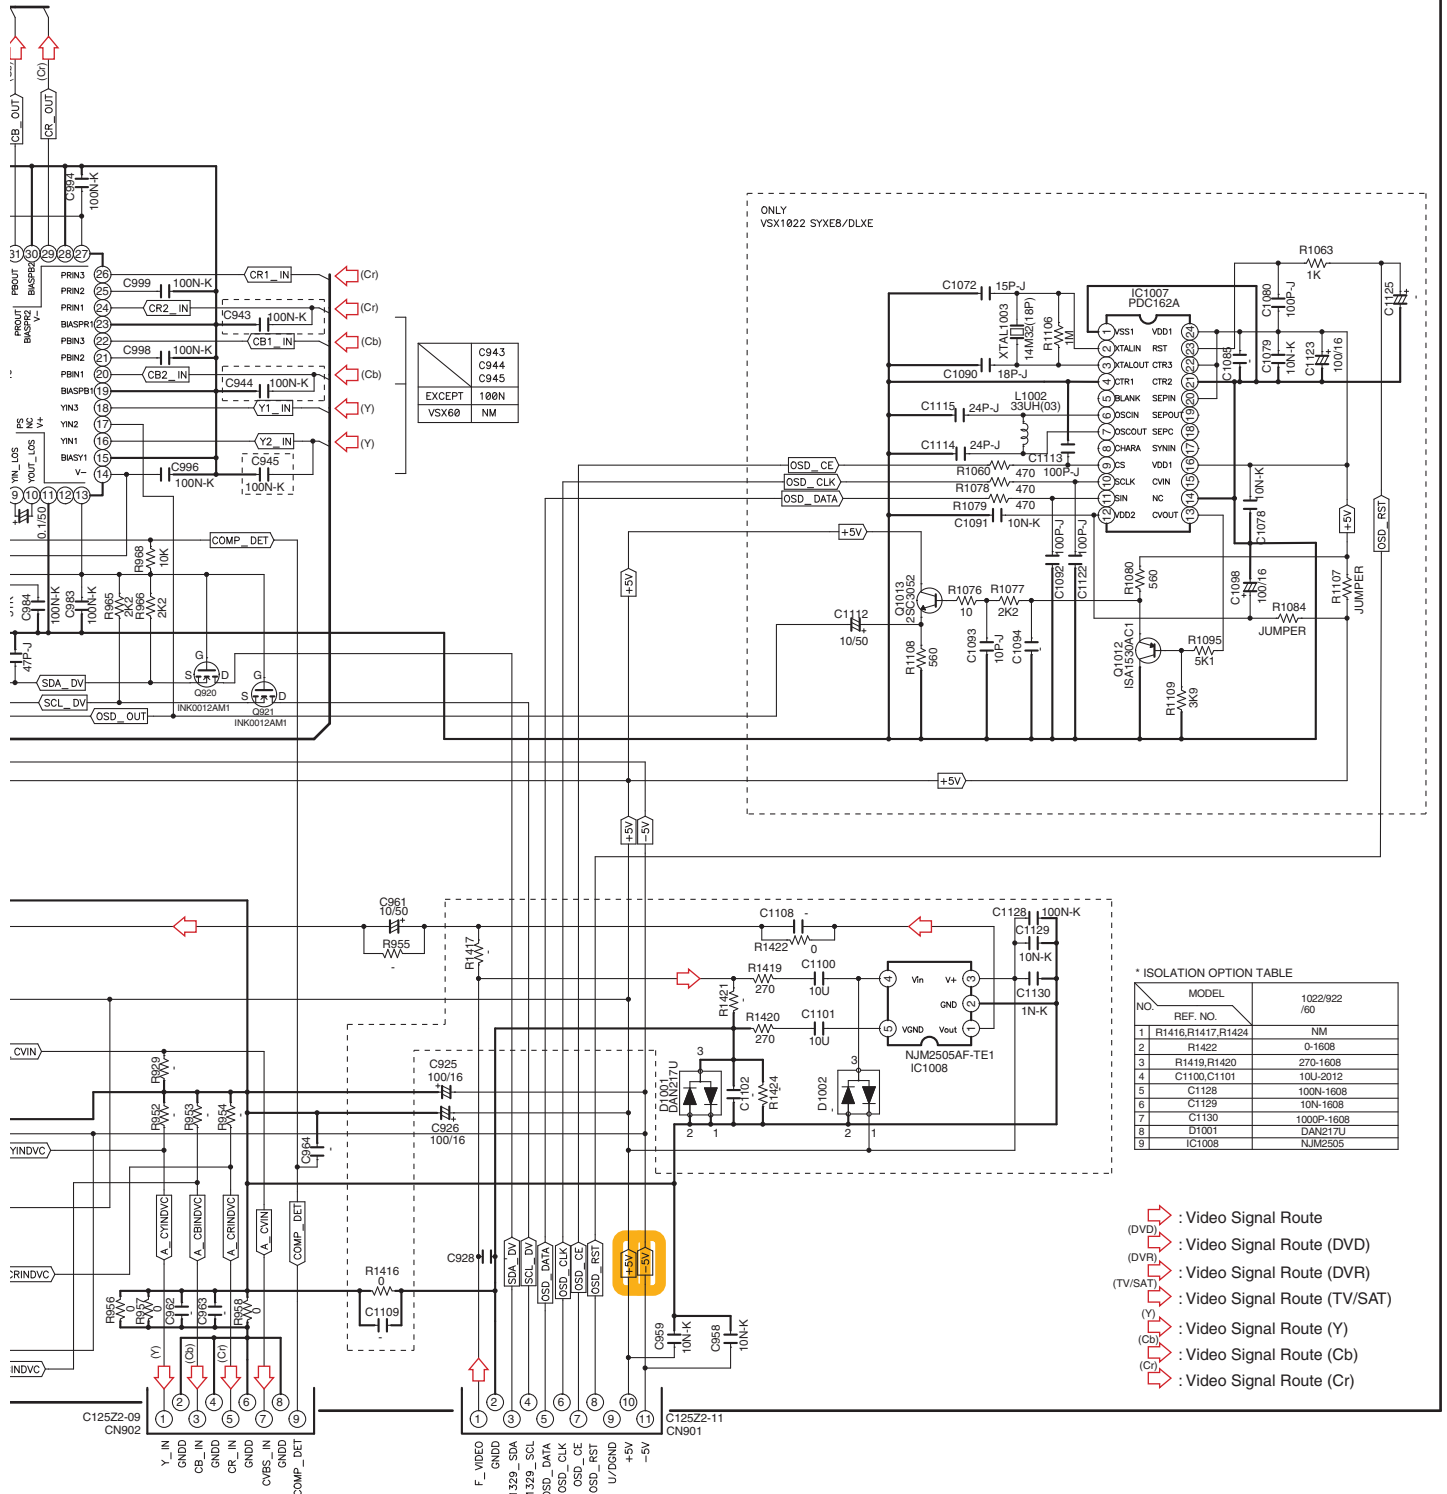

C CP8

C CP9

VSX-1127-K

F

4

A



C

D

E

F

A

F



1

2

3

△

FRONT ASSY (VSX-112
(VSX-112
(VSX-60:
(VSX-102

A



B

C


D

E

F

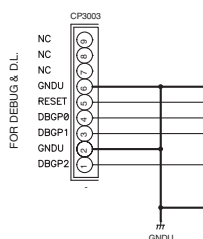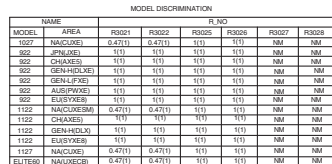

MODEL DISCRIMINATION							
MODEL	NAME	PROJECT			MODEL	AREA	
		R192	R193	R187		R184	R185
1027	NALCUE	47K	NM	25K	33K	47K	NM
922	CHAYLSE	47K	NM	47K	NM	38K	39K
922	GEM-HOLIE	47K	NM	47K	NM	22K	33K
922	GEM-HOLIE	47K	NM	47K	NM	38K	10K
922	AUSPILAE	47K	NM	47K	NM	38K	22K
922	EUSTYXII	47K	NM	10K	38K	38K	10K
1122	GEM-HOLIE	47K	NM	47K	NM	NM	47K
1122	NALCUEHREI	47K	NM	NM	47K	47K	38K
1122	CHAYLSE	47K	NM	NM	47K	23K	33K
1122	GEM-HOLIE	47K	NM	NM	47K	38K	10K
1122	EUSTYXII	47K	NM	NM	47K	NM	47K
1122	NALCUE	47K	NM	33K	22K	47K	NM
1122	CHAYLSE	47K	NM	33K	15K	38K	38K

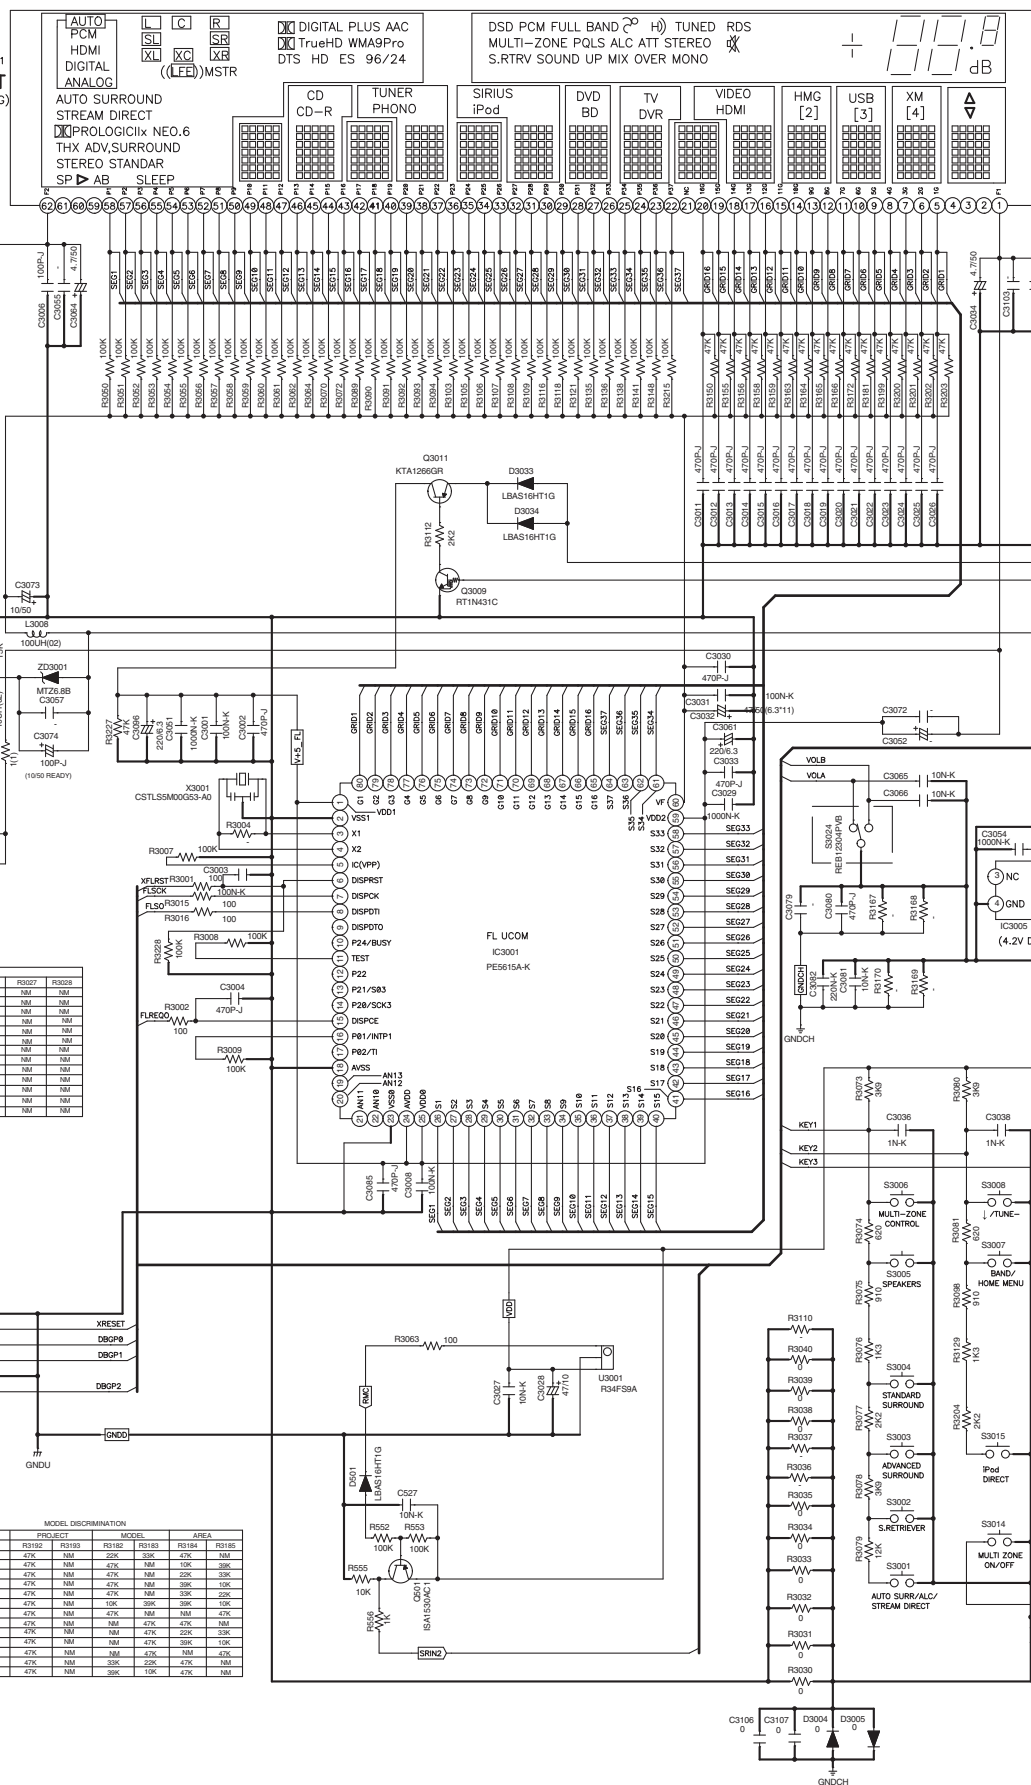

A



□




HI

M G-L ASSY
(7028071713040-IL)


O WG-A ASSY
(7028071715040-IL)

Q CCG ASSY
(7028071775040-IL)

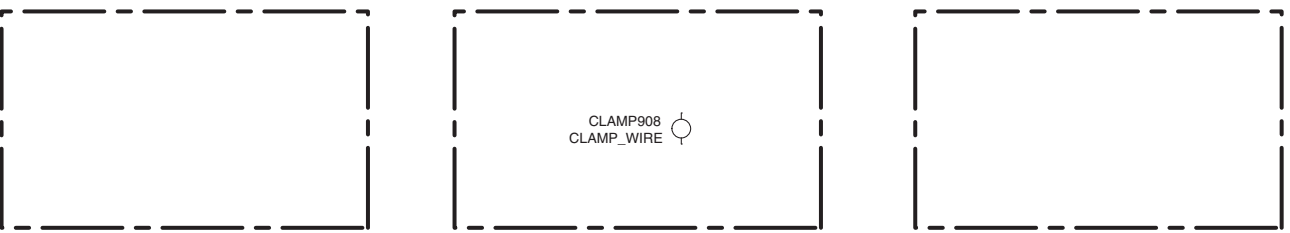


N G-R ASSY
(7028071714040-IL)

P WG-B ASSY
(7028071716040-IL)

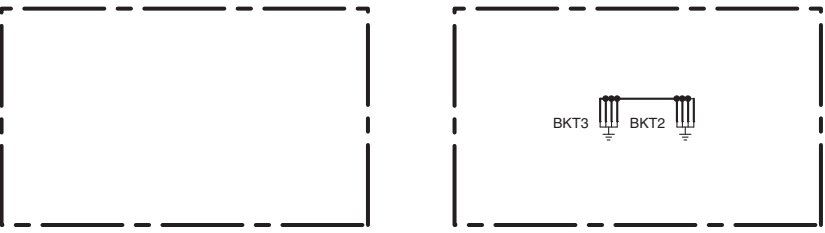


R BT CNT ASSY (7028071774040-IL)

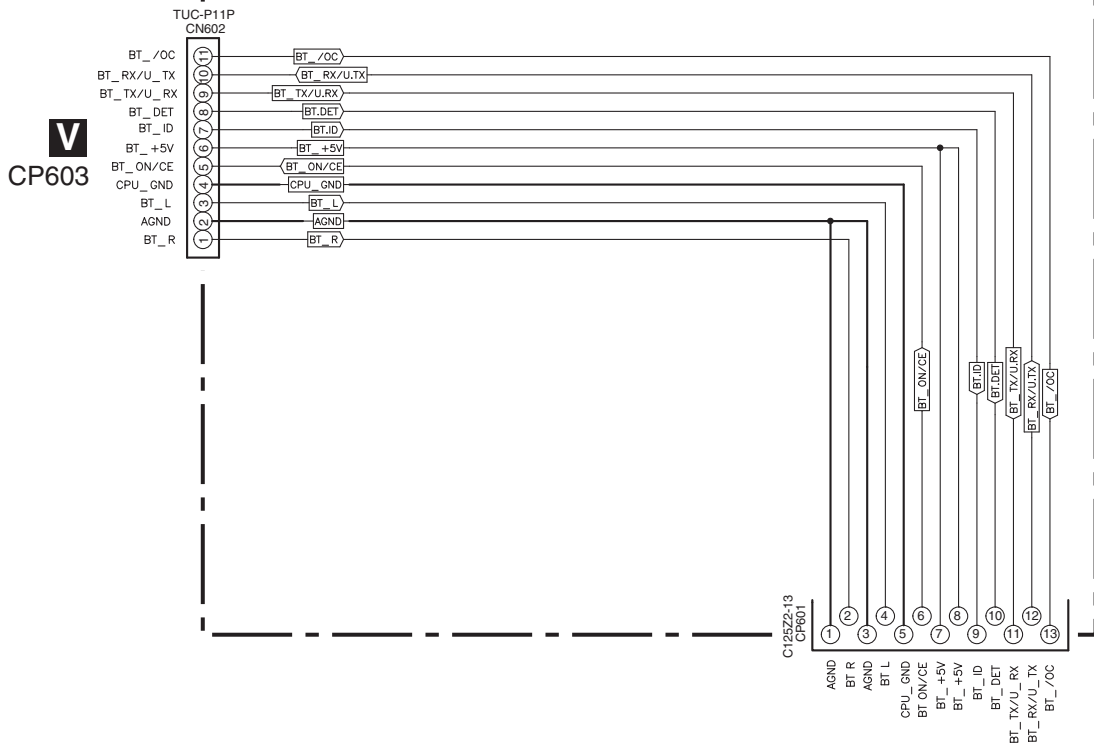


C CP7



10.21 FHDMI and F-USB ASSYS

S FHDMI ASSY (7028071791040-IL) (VSX-1127-K, VSX-1122-K, VSX-60 ONLY)

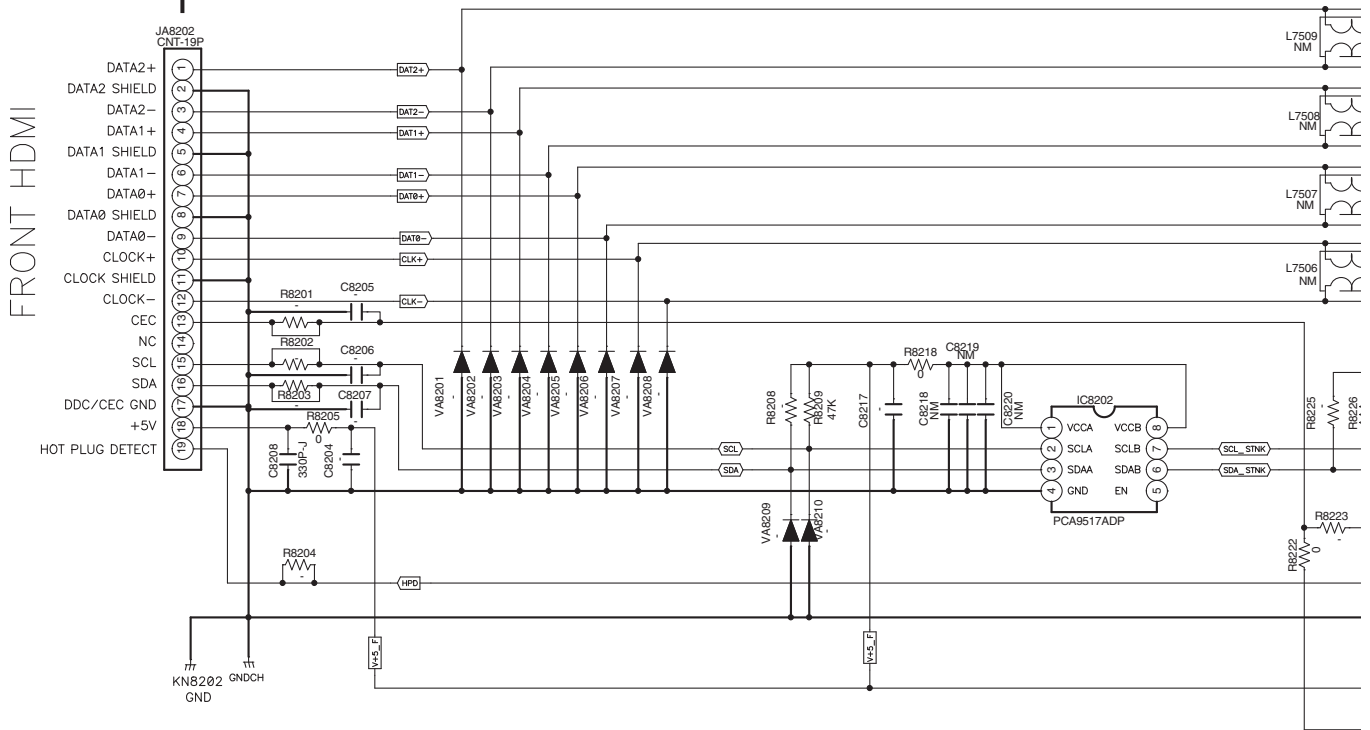

T F-USB ASSY (7028071761020-IL)

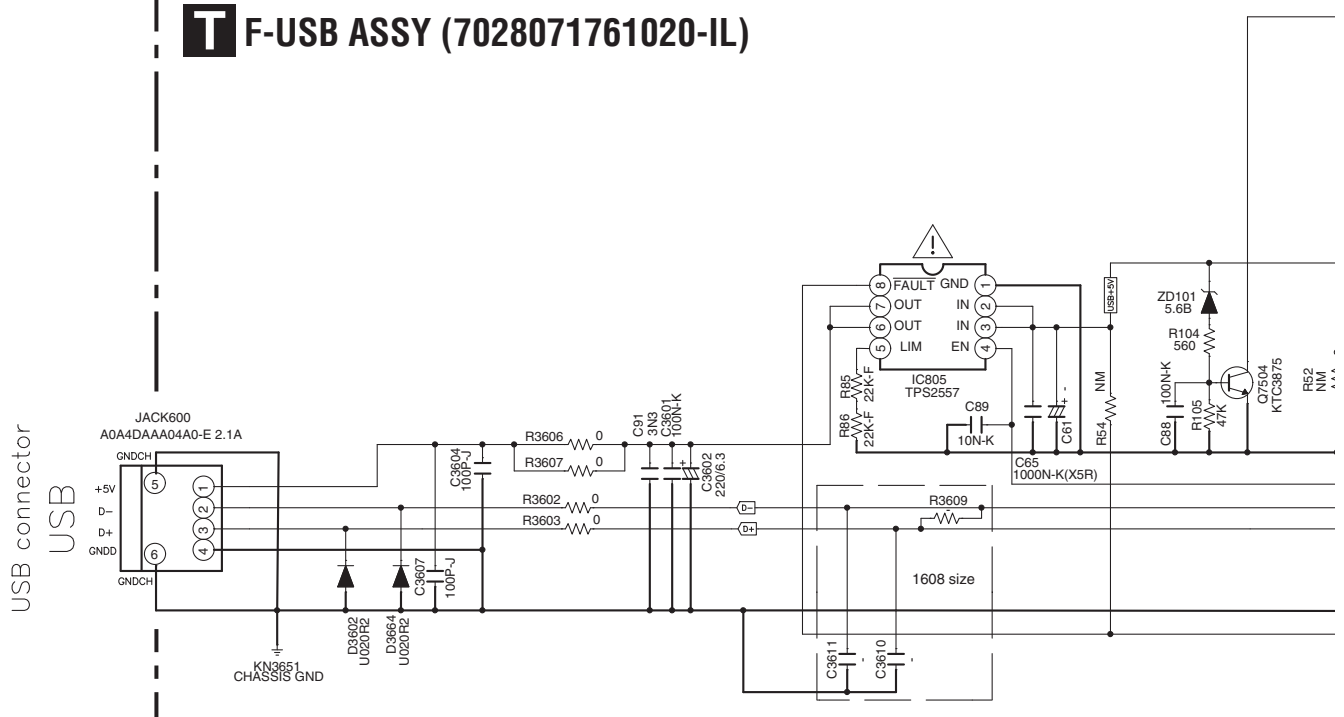

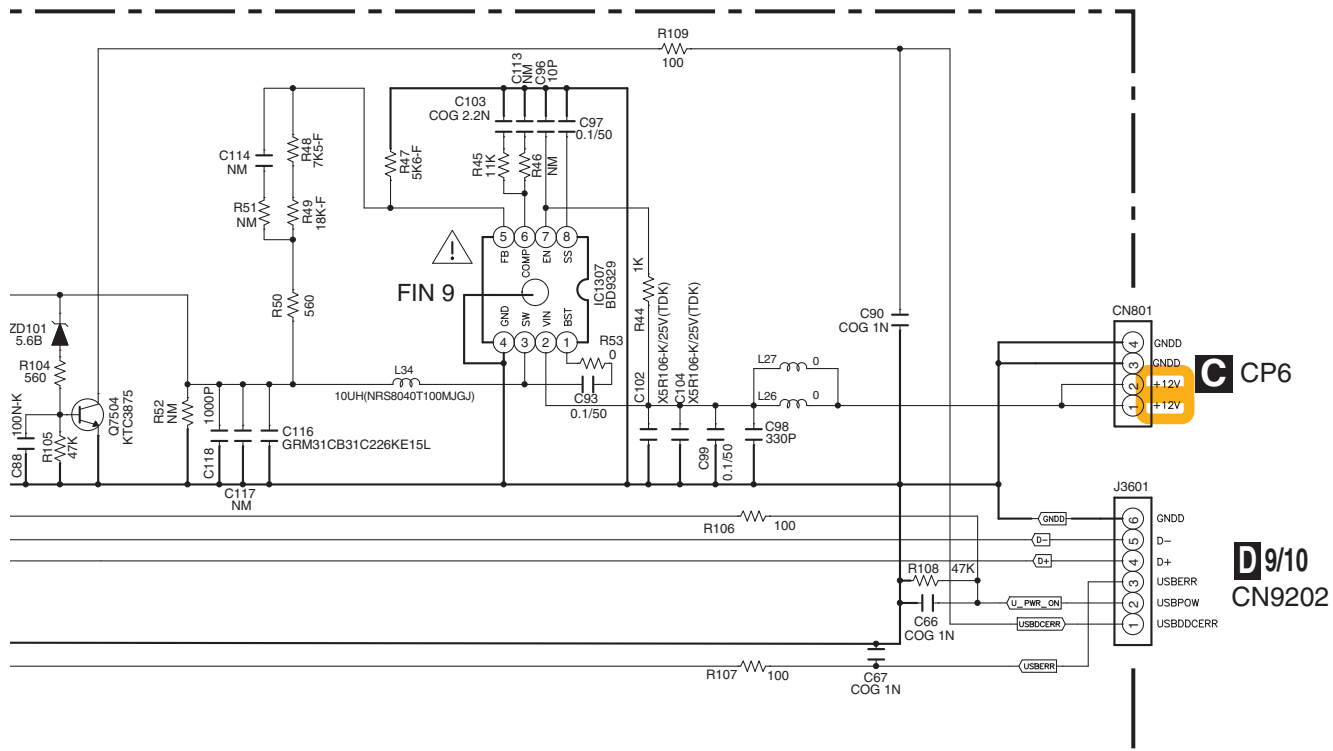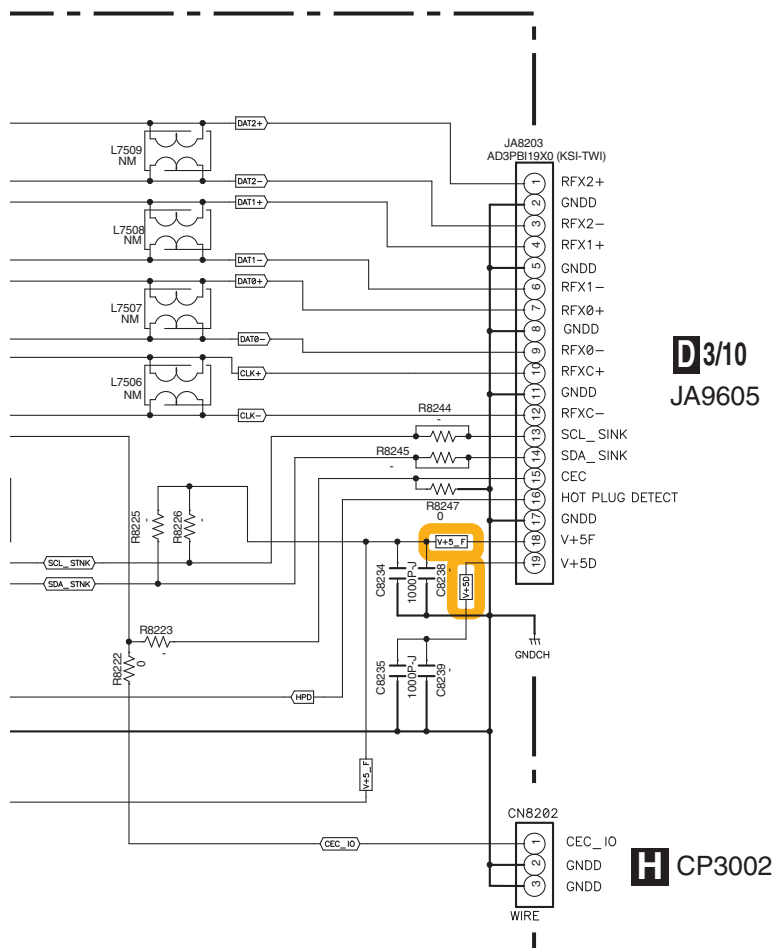

4

A



C

□

F

F

NOTES

1. Resistor values are indicated in ohms unless otherwise specified
[$k = 1.000 \quad m = 1.000.000$]
2. Capacitor values are indicated in microfarades unless otherwise specified.
[$\mu = \text{micro-microfarades}$]

3.  : These resistor are to be segregated from printed wiring board or other accessible parts.

CAUTION

Safety precaution to be followed during servicing




- 1] Since those parts marked with are critical parts for safety, use only the one described in the parts list
- 2] Before returning the set to the customer make appropriate leakage current or resistance measurements to determine the exposed parts are properly insulated from the supply circuit.

103

10.23 BT ASSY

V BT ASSY
(7028070231010-IL)

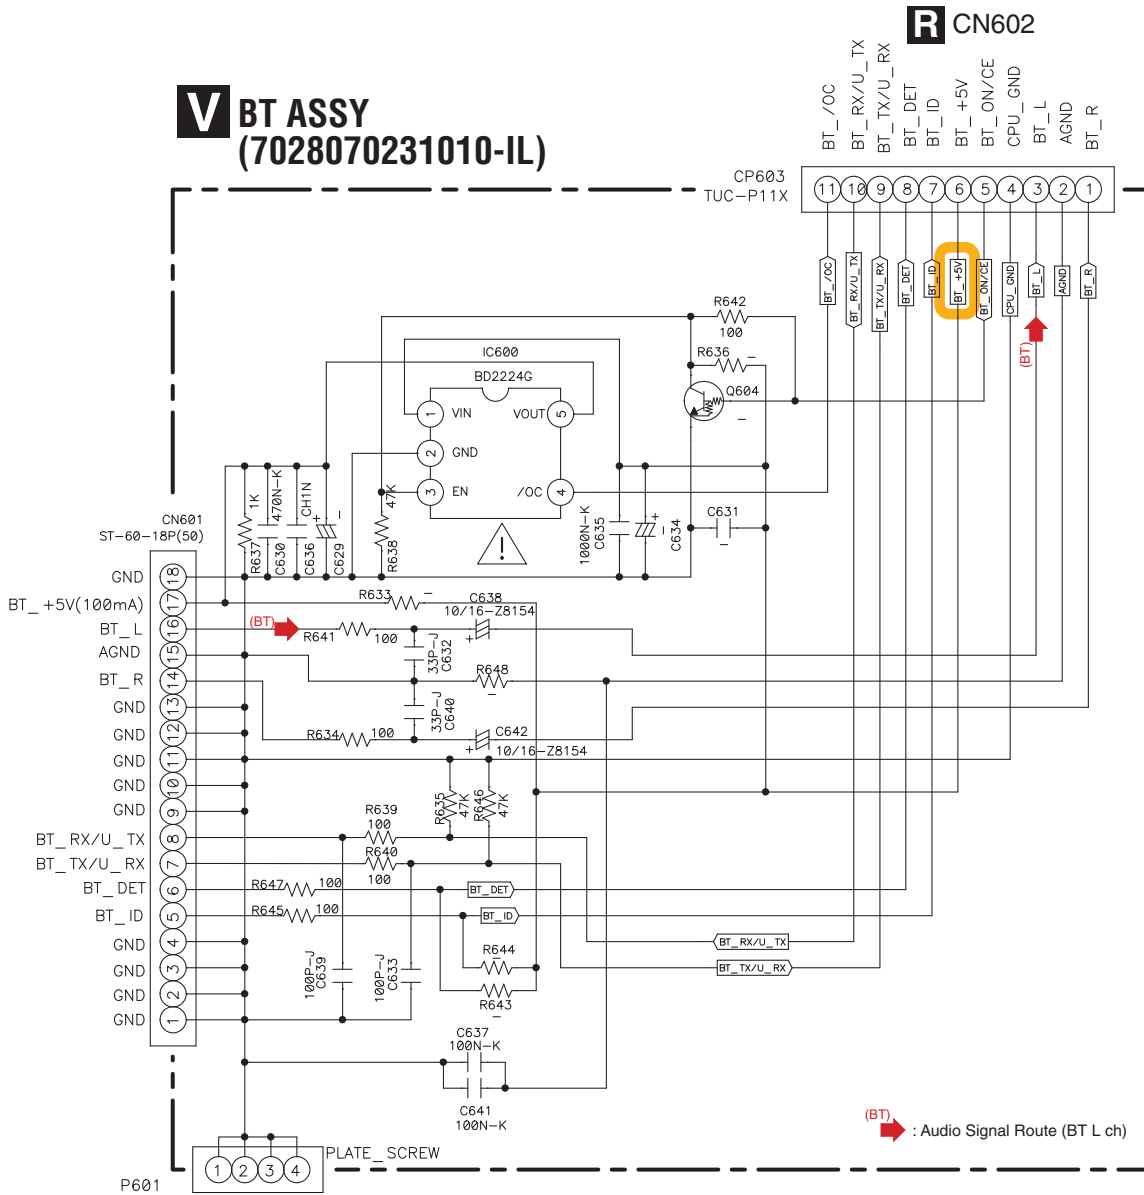

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

■

7

■

8

■


VSX-1127-K

105

11.1 AUDIO ASSY

SIDE A


The diagram illustrates a PCB layout with a horizontal line representing the PCB. Above the line, a rectangular component is labeled "Connector" and a cylindrical component is labeled "Capacitor". Below the line, a small rectangular component is labeled "Chip Part". To the right of the components, two boxes are labeled "SIDE A" (top) and "SIDE B" (bottom).

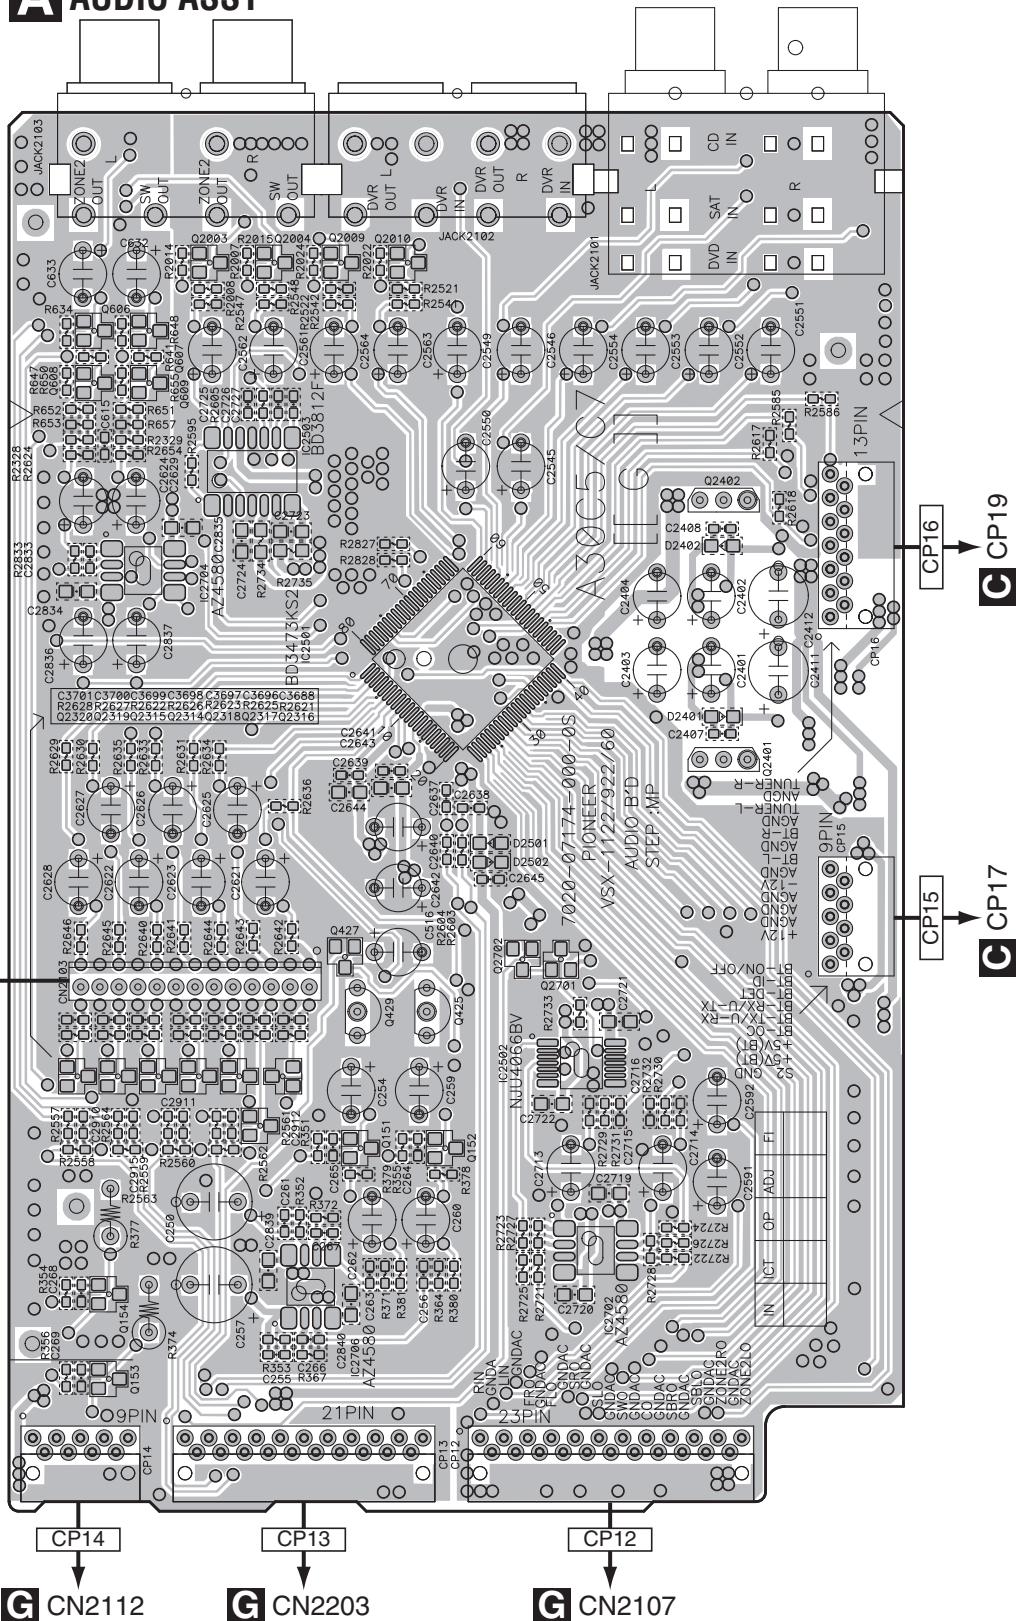

11.2 AMP7 ASSY

SIDE A


B AMP7 ASSY

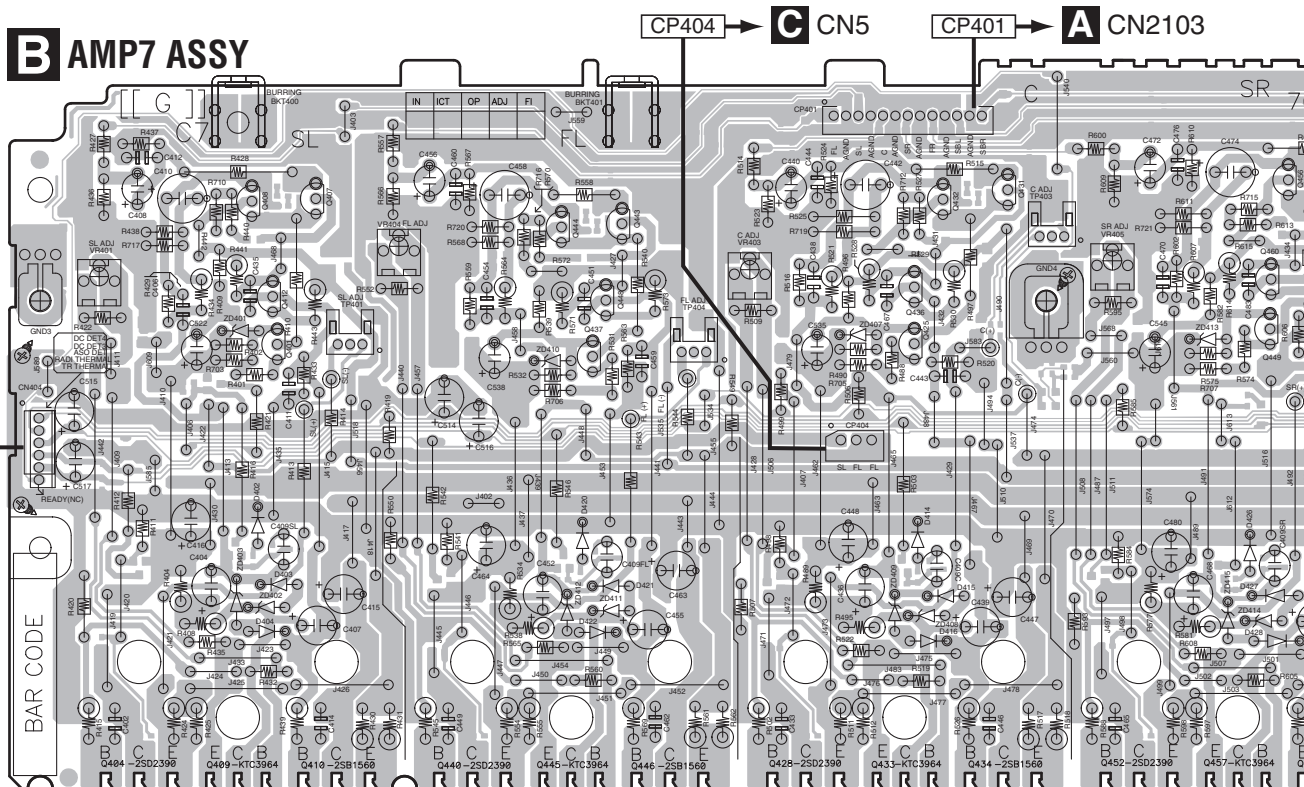

Q408 Q407 Q444 Q443 Q432 Q431 Q456
Q412 Q448 Q436 Q431 Q460
Q401 Q437 Q425 Q434 Q449
Q404 Q409 Q410 Q440 Q445 Q446 Q428 Q433 Q434 Q452 Q457



SIDE B


B AMP7 ASSY

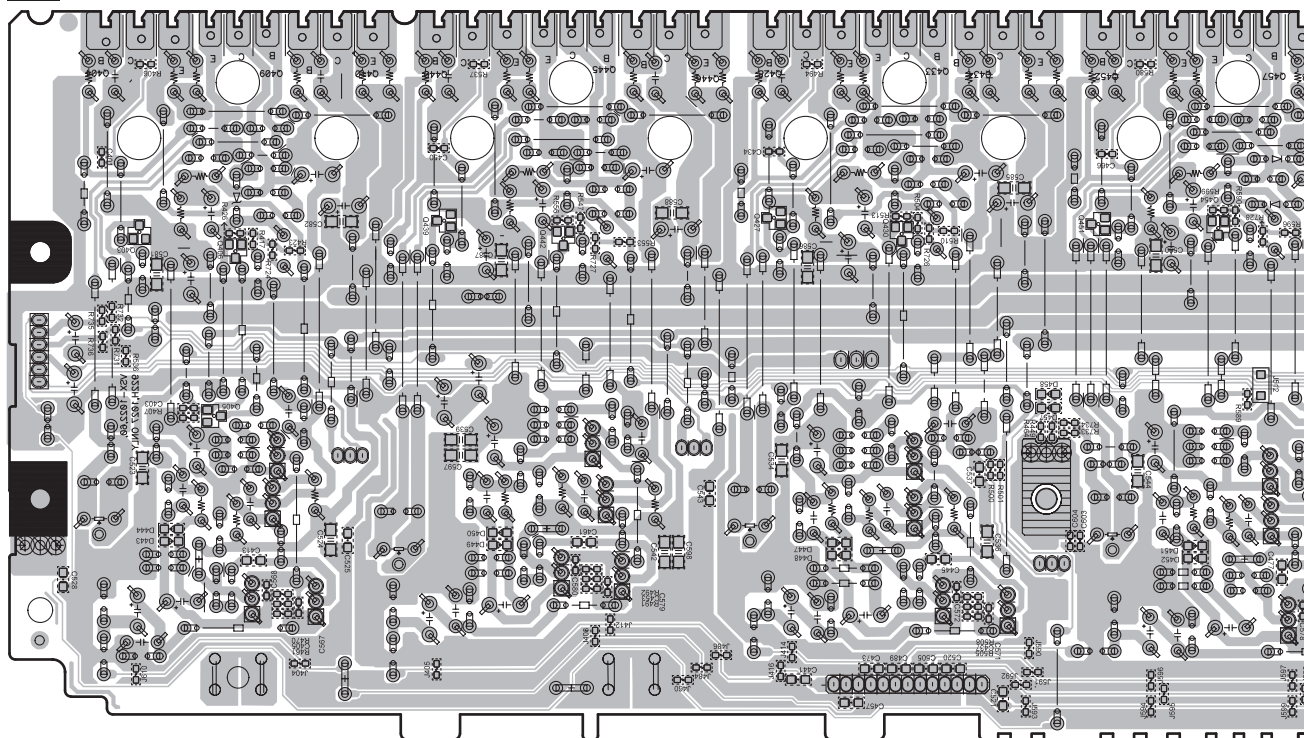

Q403 Q406 Q439 Q442 Q427 Q461 Q454
Q405

B

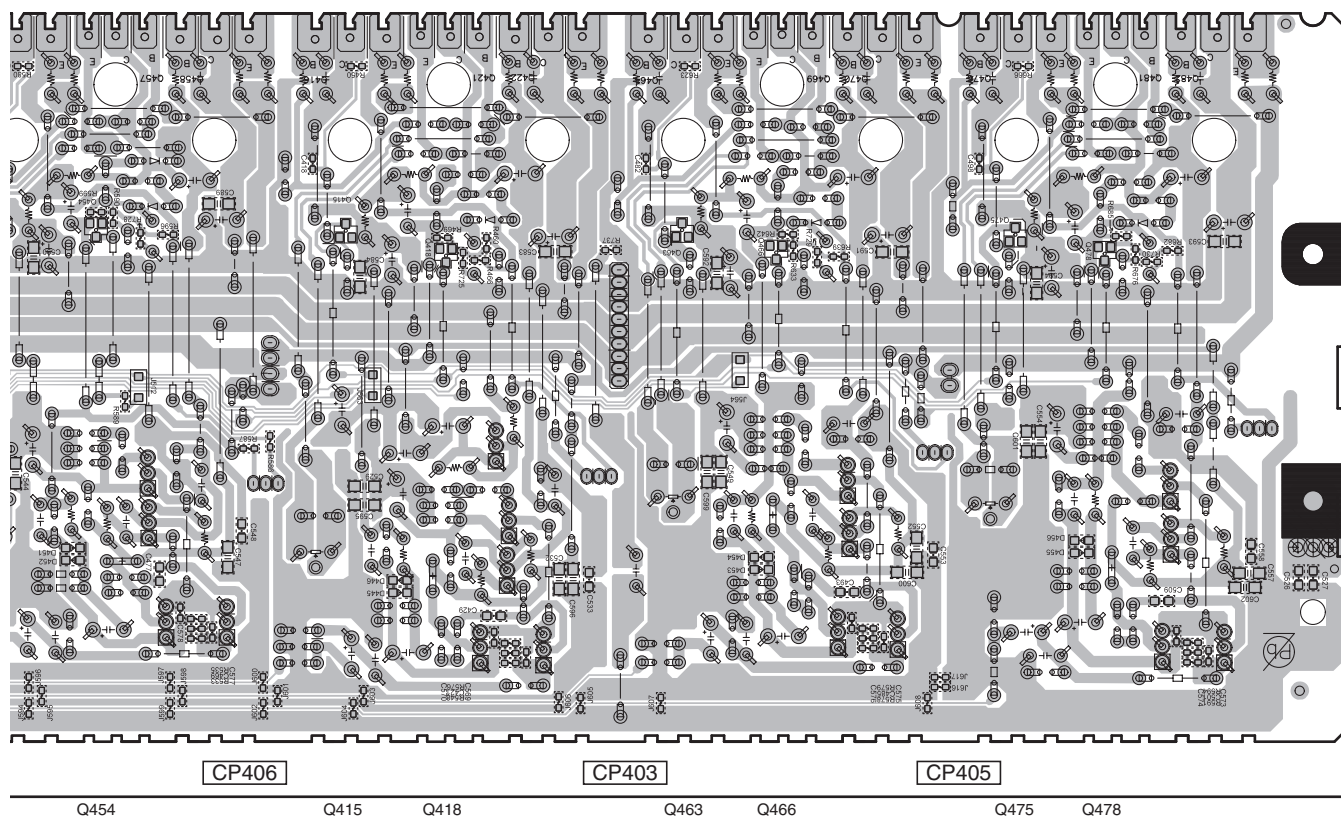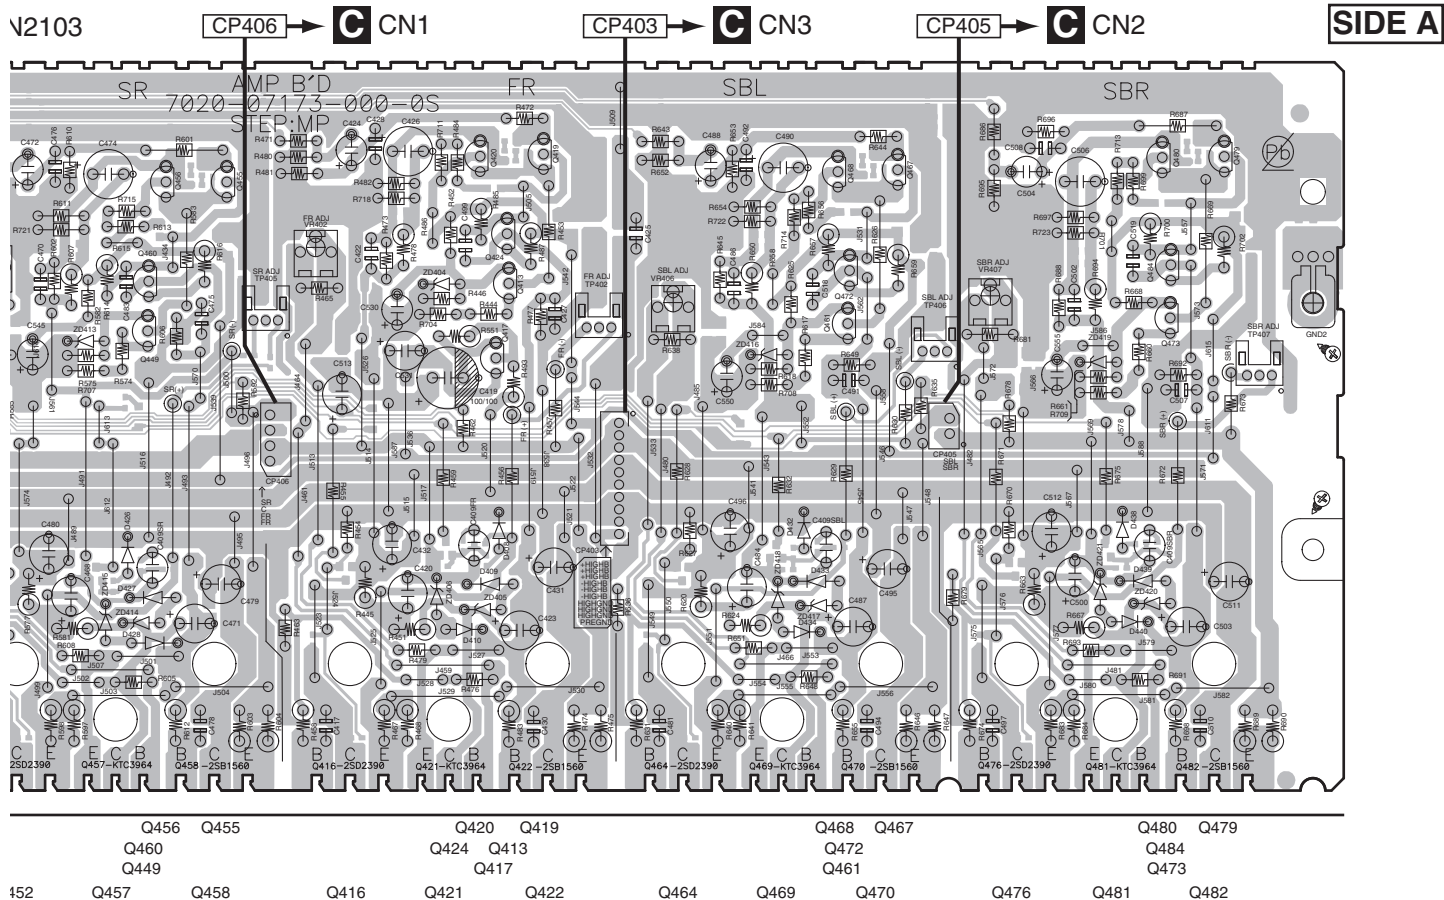

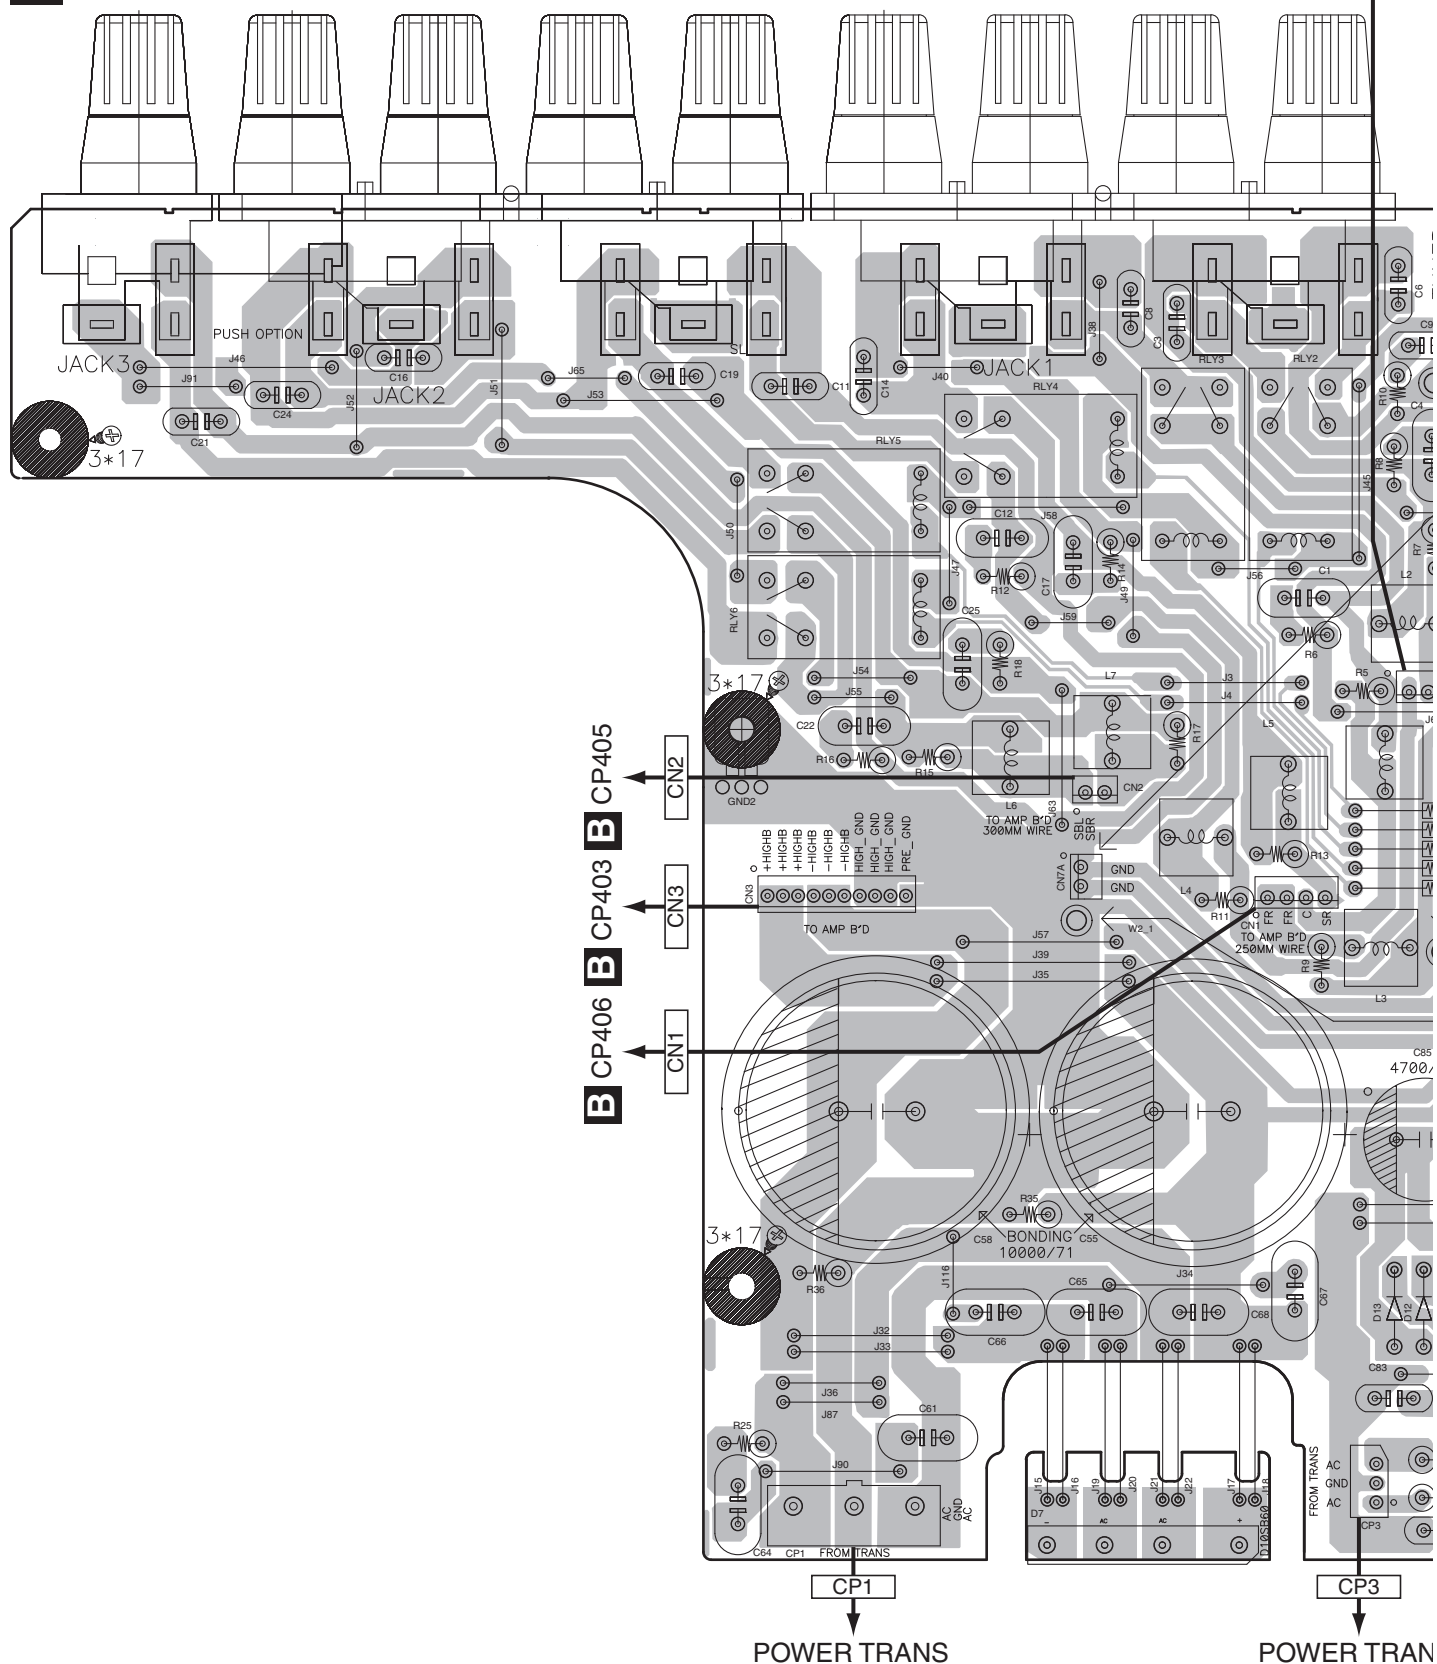SIDE A**C MAIN ASSY**

C

A

E


C

□

E

F



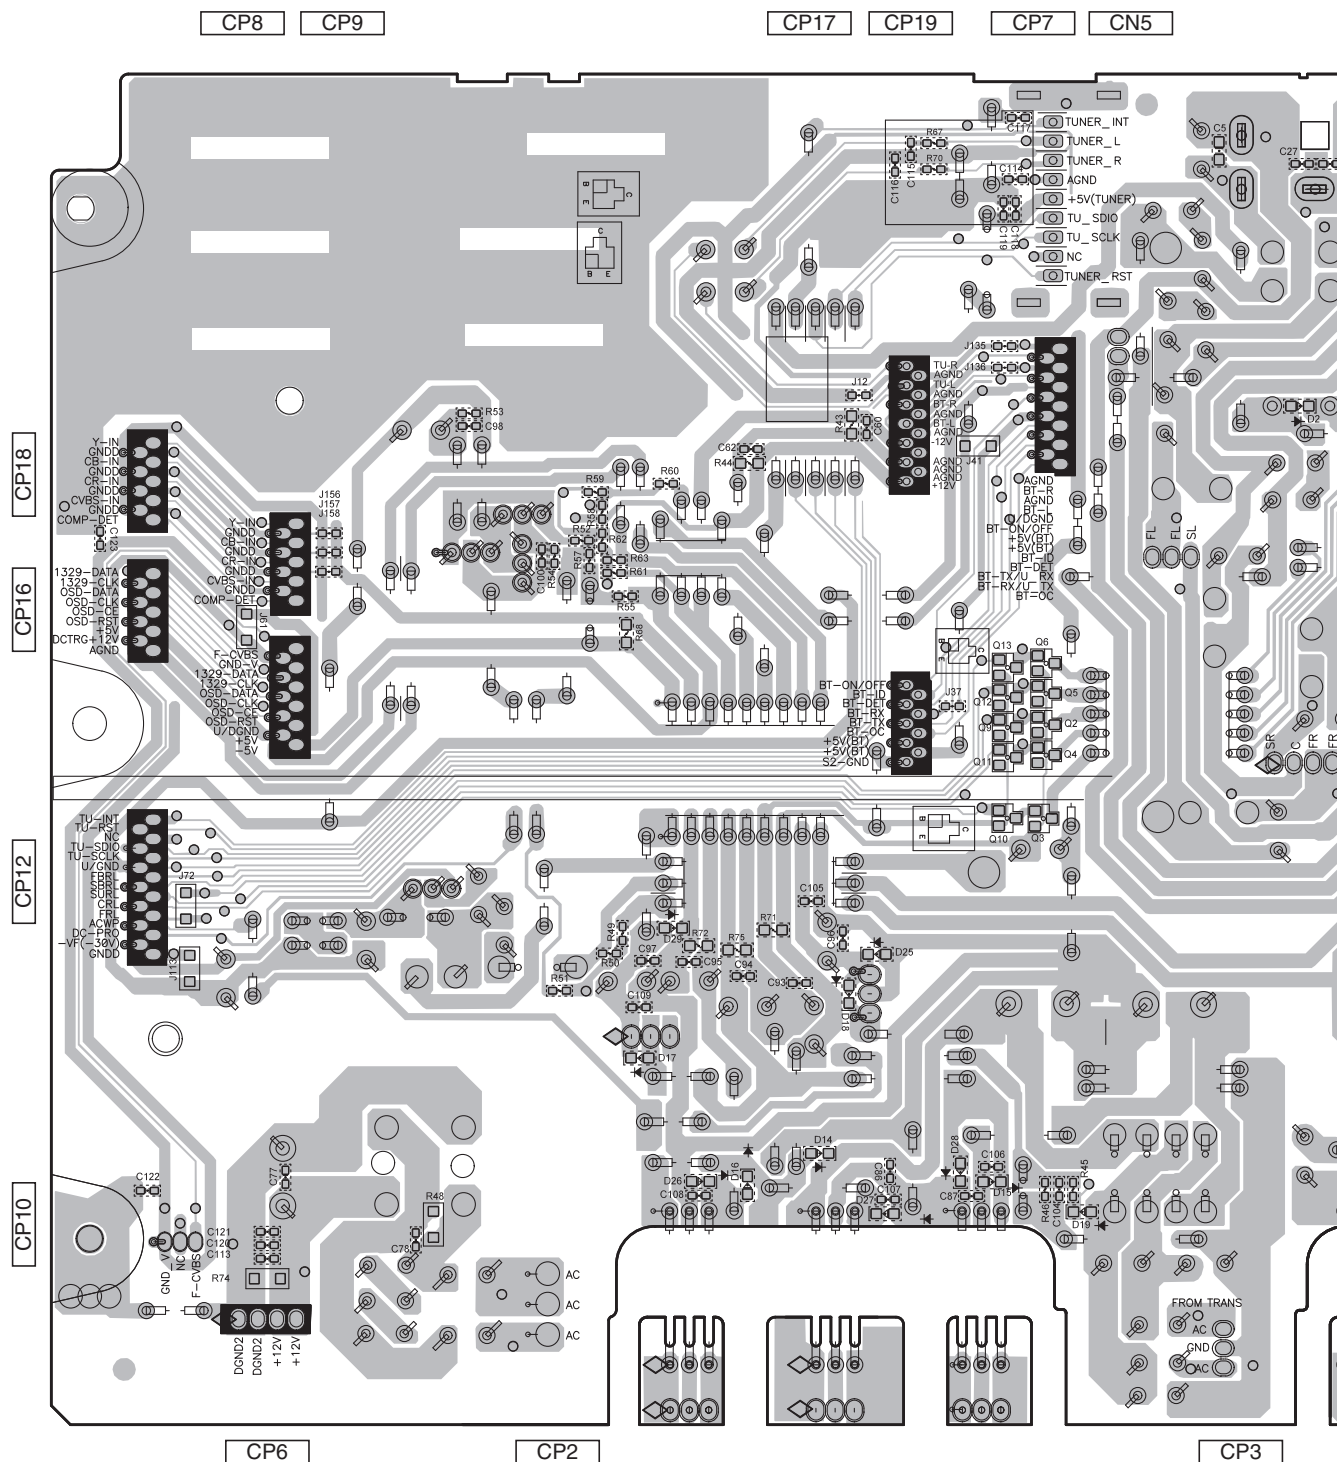

SIDE B

A

B


C

D

E


F

]

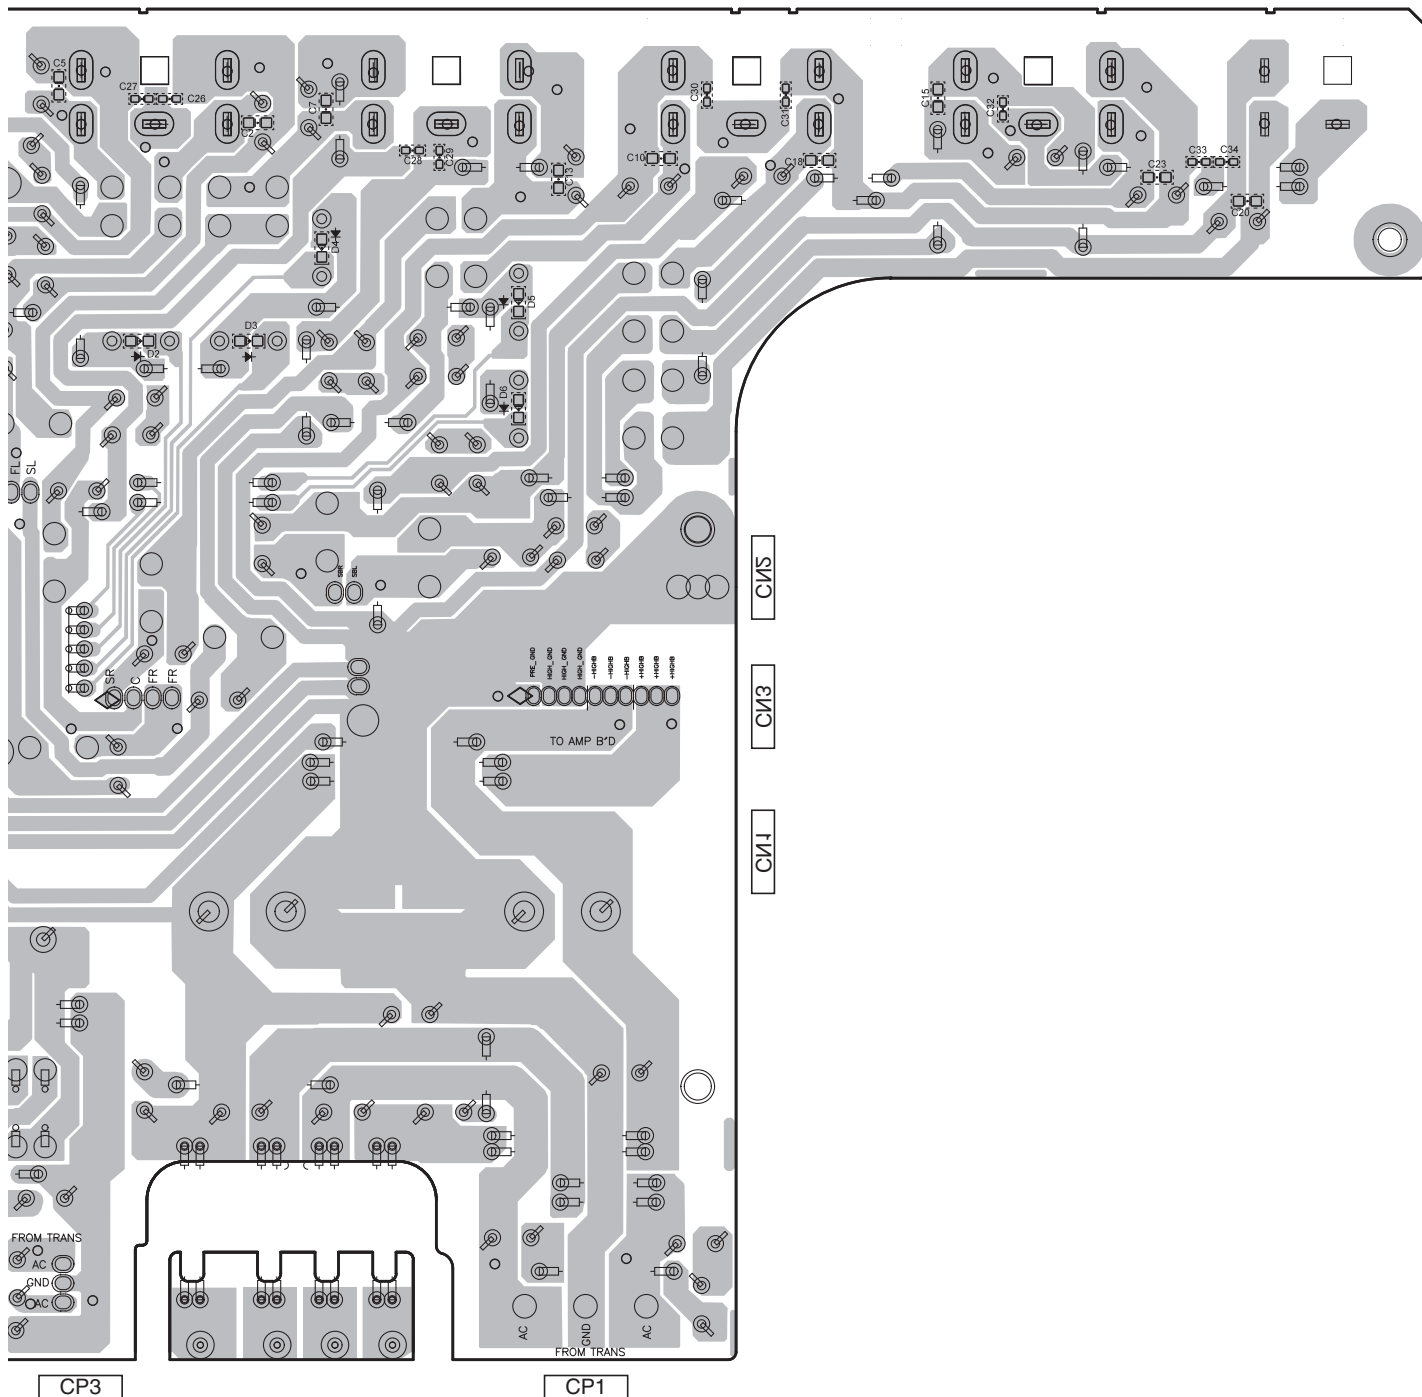

SIDE A

D D-MAIN ASSY

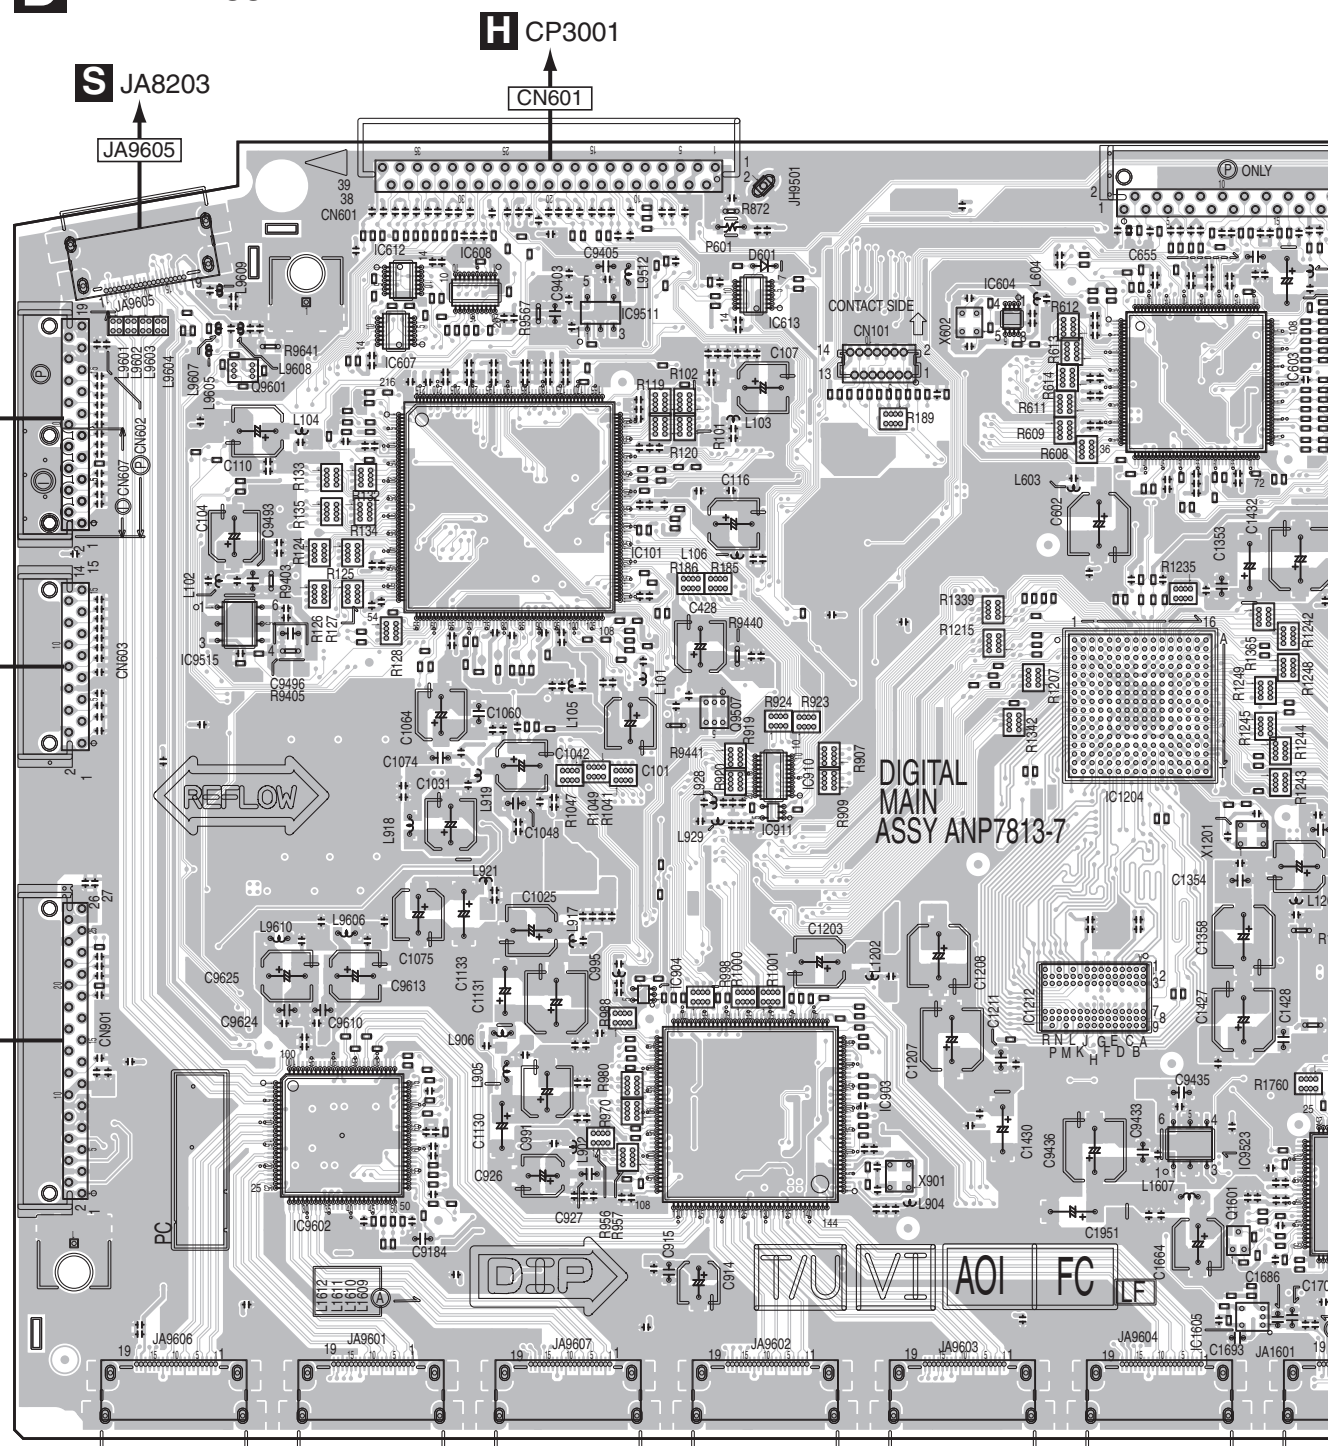

Q1601

D

SIDE B

A

B

C

D

F

F

D

117

5

6

7

8

CN601

JA9605

CN607

CN603

CN901

IC9508

IC104

IC90

Q9508

IC909

IC103

Q101

Q906-Q911

IC9501

Q9504

Q9503

IC1216

IC902

Q901

Q9602

Q9603

VSX-1127

11.5 IR ASSY

SIDE A

SIDE A

IR ASSY

D CN901

D CN603

D CN607

CP513

CP512

CP511

CP510

CP501

CP503

CN501

C CP18

C CP16

C CP12

B CN404

Q523
Q519 Q511 Q524
Q508
Q521

VSX-1127-K

E

118

SIDE B**SIDE B**

A

E

9


[

E

F

E

119

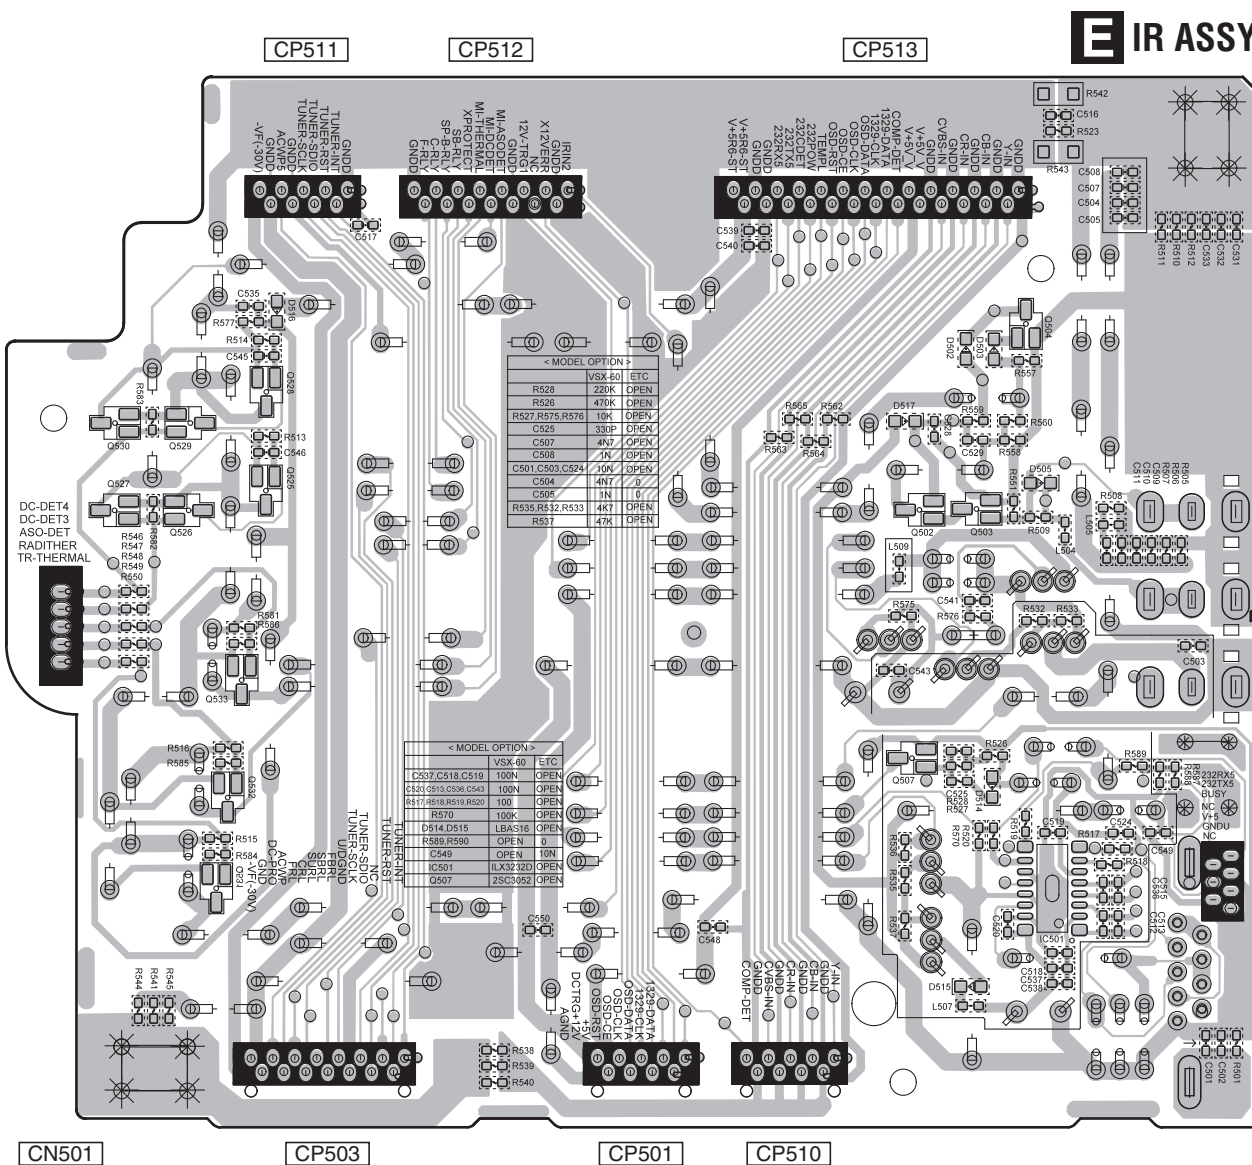

Q530 Q529 Q528
Q527 Q526 Q525
 Q533
 Q532
 Q531

Q502 Q503 Q504 Q507 IC501

VSX-1127-K

SIDE A


SIDE A

**F**

SIDE A

G BRG ASSY

SIDE A

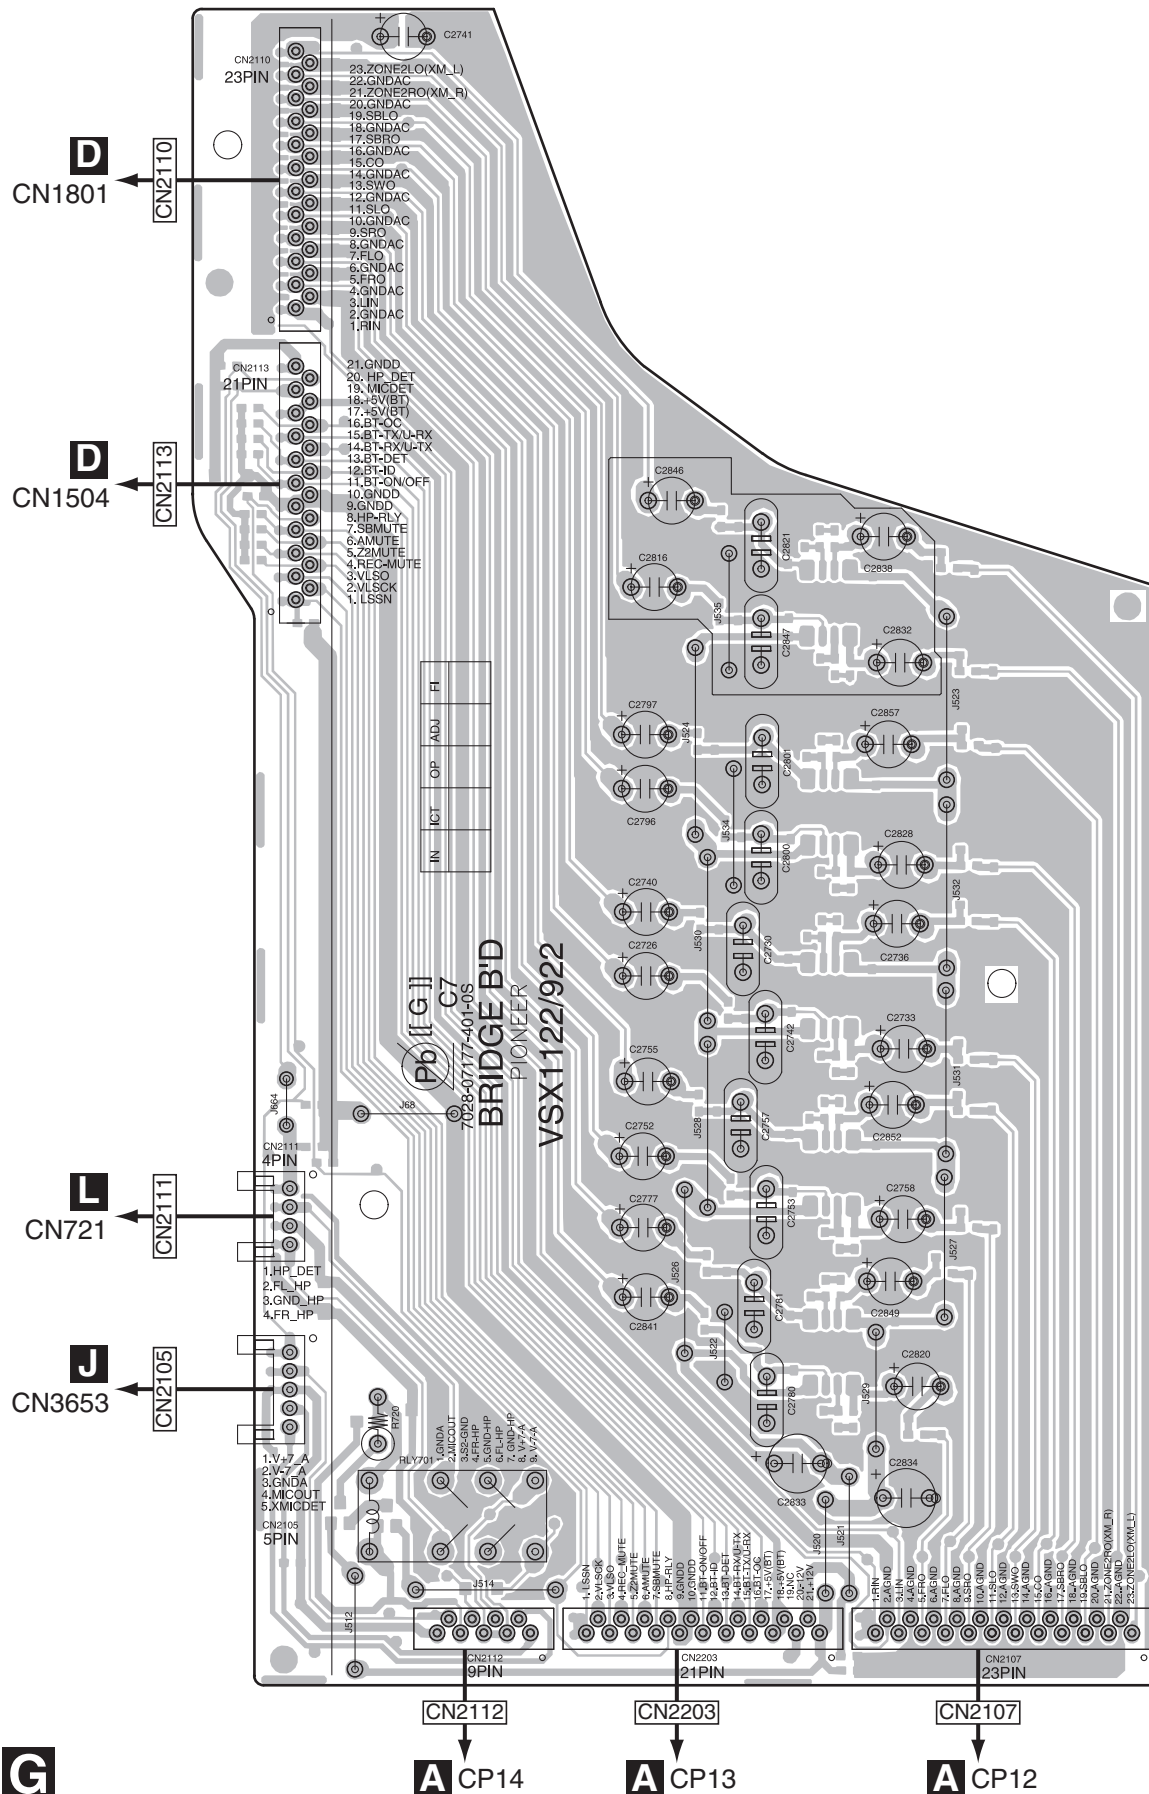

SIDE B

SIDE B

G BRG ASSY

IC2802

IC2782

IC2704

IC2742

IC2762

Q8 Q1

CN2107

CN2203

CN2112

CN2110

CN2113

CN2111

CN2105

< MODEL OPTION >			
VSX-60/1122/1027 VSX-922/927			
R2903, R2904	47K	OPEN	
C2847, C2821	OPEN	OPEN	
C2845, C2819	3300P	OPEN	
R2921, R2863	3K3	OPEN	
R2931, R2881	1K	OPEN	
R2908, R2862	470	OPEN	
C2850, C2839	10N	OPEN	
C2844, C2817	4N7	OPEN	
C2846, C2816	10/50	OPEN	
C2832, C2838		OPEN	
R2880, R2932	100	OPEN	
R2958, R2908		OPEN	
IC2802	AZ4580	OPEN	


VSX-1127-K

G



123

SIDE A

H FRONT ASSY

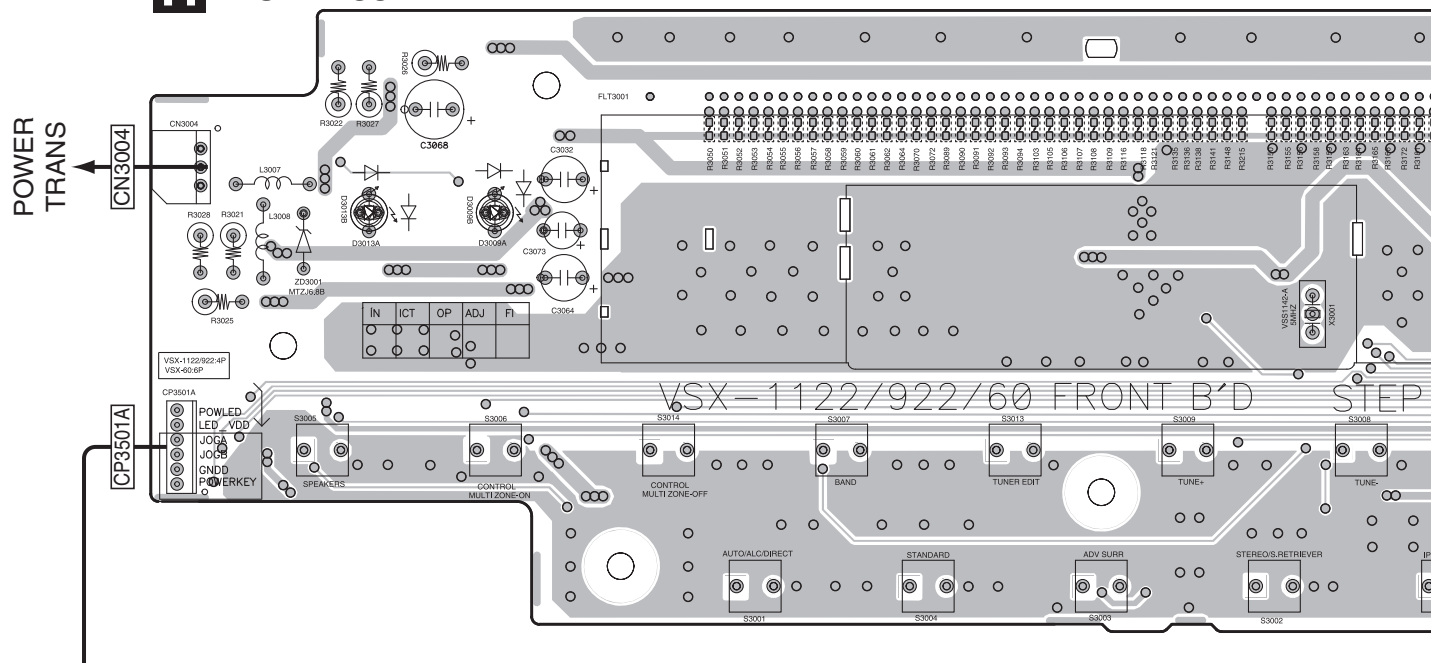







POWER ASSY

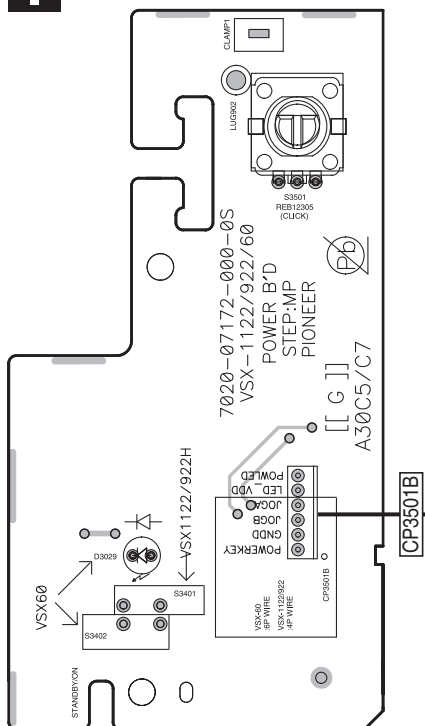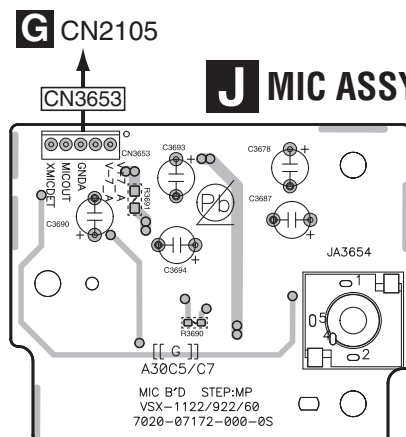**J MIC ASSY**

11.9 G-L, G-R, WG-A and WG-B ASSYS



SIDE A

SIDE B

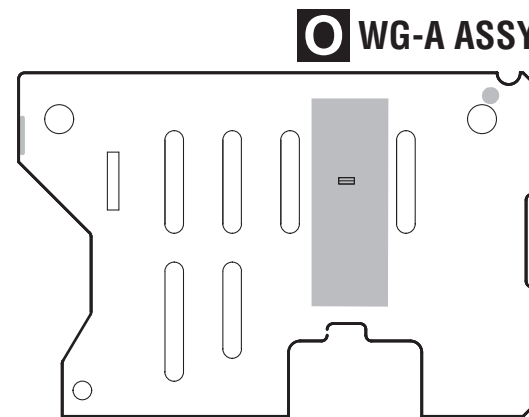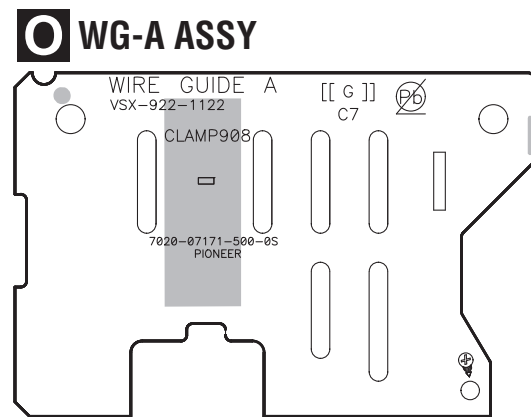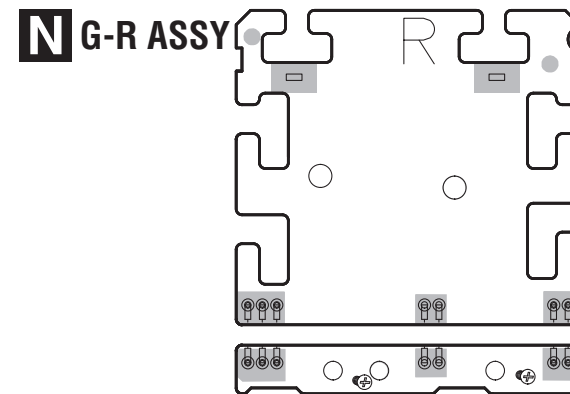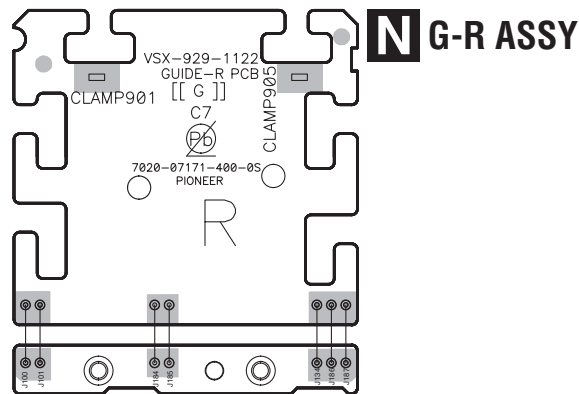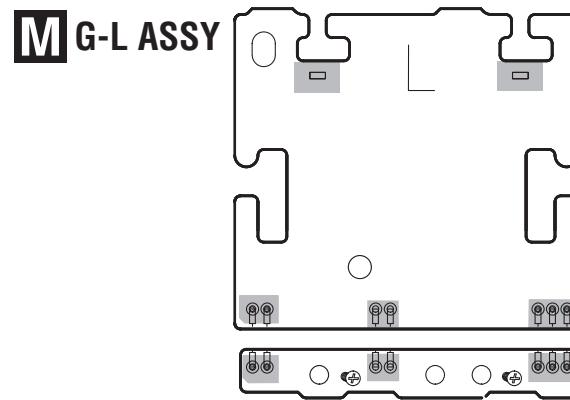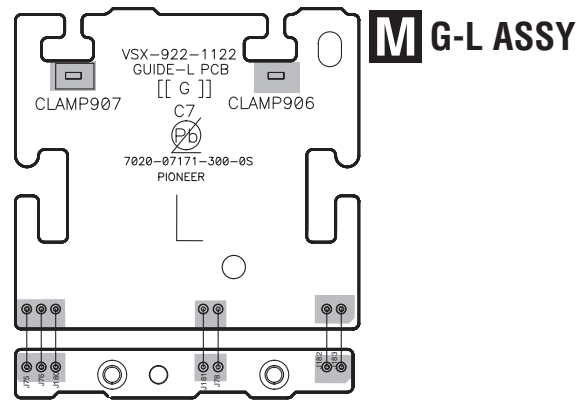

P WG-B ASSY


P WG-B ASSY

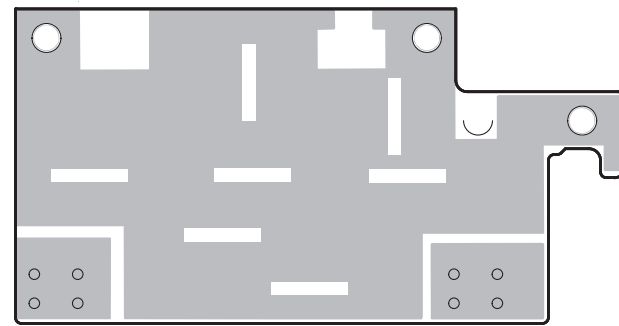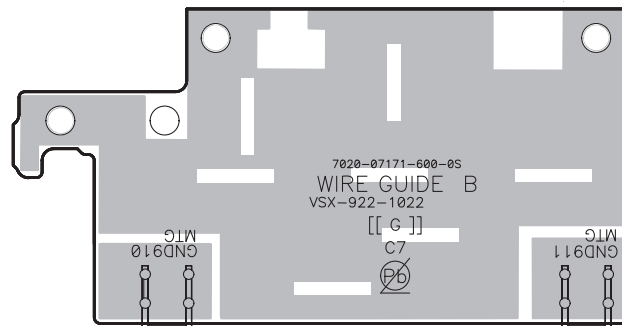


M N O P

SIDE A

SIDE A

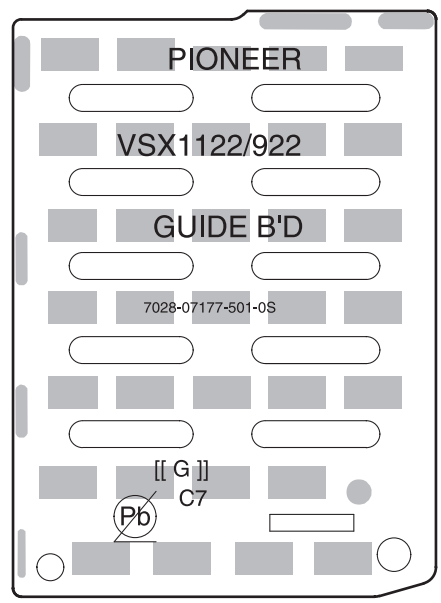

Q CCG ASSY

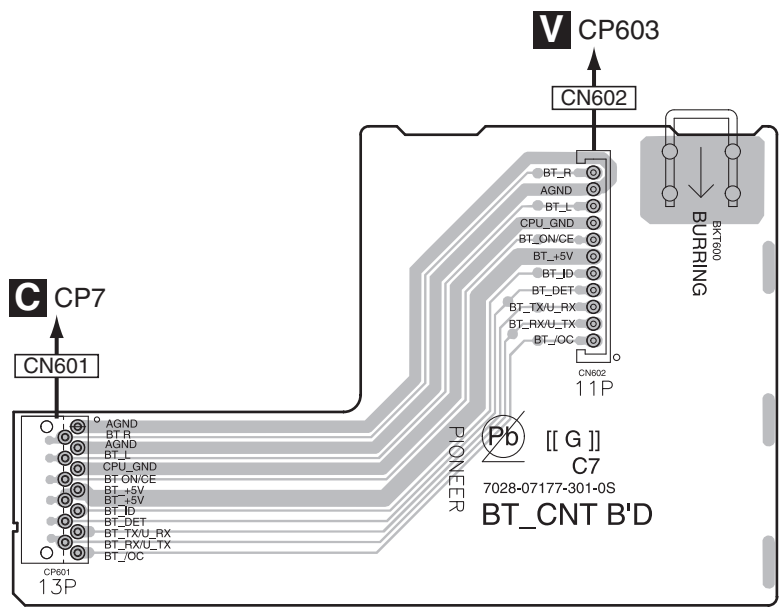


R BTCNT ASSY


SIDE B

SIDE B

Q CCG ASSY

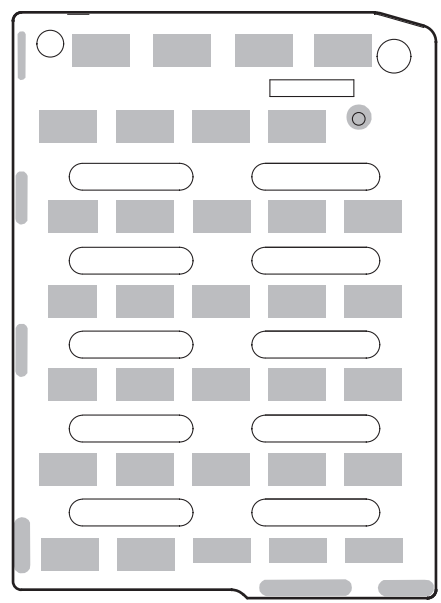


R BTCNT ASSY

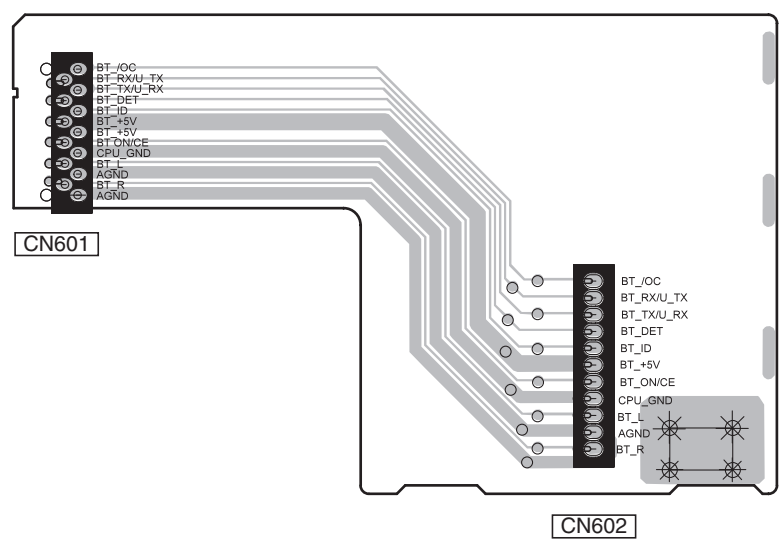

Q **R**

SIDE A

131



SIDE A**SIDE A**

TR102

IC102

IC116

TR101

TR100

IC100


7028-07177-201-0S
SMPS B'D

VSX-1127-K

SIDE B

SIDE B

U SMPS ASSY

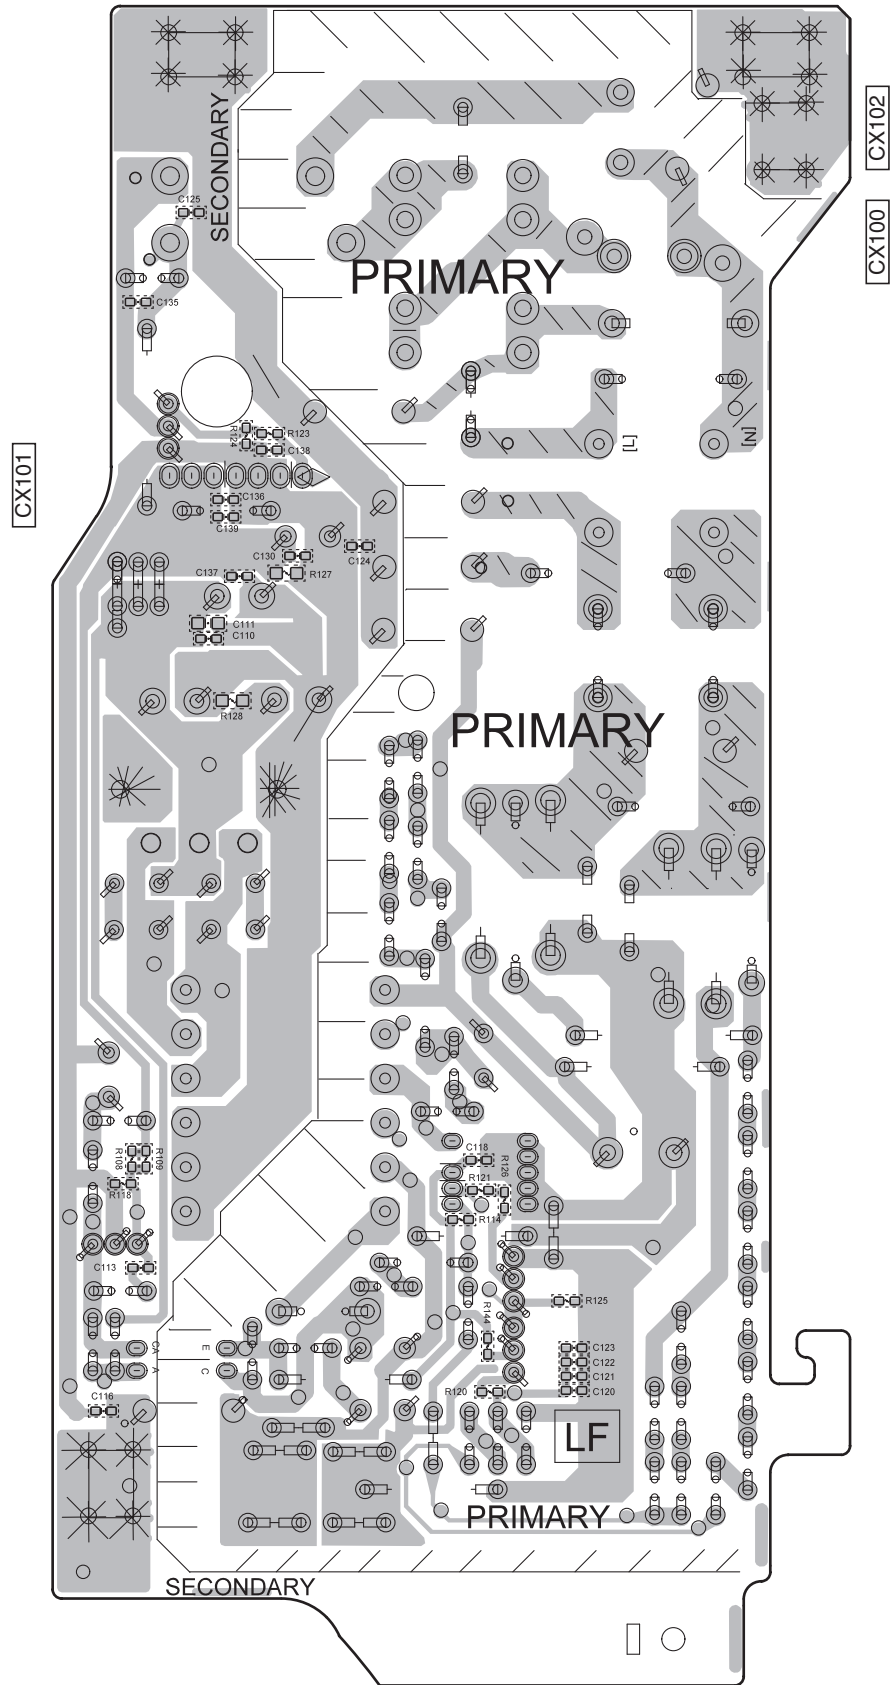

12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56×10^1 $\rightarrow$ 561.....RD1/4PU $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 1 \\ J \end{bmatrix}$

47 k Ω $\rightarrow$ 47×10^3 $\rightarrow$ 473.....RD1/4PU $\begin{bmatrix} 4 \\ 7 \end{bmatrix} \begin{bmatrix} 3 \\ J \end{bmatrix}$

0.5 Ω $\rightarrow$ R50.....RN2H $\begin{bmatrix} R \\ 5 \end{bmatrix} \begin{bmatrix} 0 \\ K \end{bmatrix}$

1 Ω $\rightarrow$ 1R0.....RSIP $\begin{bmatrix} 1 \\ R \end{bmatrix} \begin{bmatrix} 0 \\ K \end{bmatrix}$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω $\rightarrow$ 562×10^1 $\rightarrow$ 5621.....RN1/4PC $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 2 \\ 1 \end{bmatrix} F$

- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- SCHEMATIC DIAGRAM and PCB CONNECTION DIAGRAM $\rightarrow$ ● PCB PARTS LIST

BKT $\rightarrow$ none

CLAMP $\rightarrow$ none

W $\rightarrow$ none

LUG $\rightarrow$ none

P $\rightarrow$ none

BEAD $\rightarrow$ L

F $\rightarrow$ FU

FLT $\rightarrow$ V

JACK $\rightarrow$ JA

JACK $\rightarrow$ JA9***

RLY $\rightarrow$ RY

RMC $\rightarrow$ U

RES $\rightarrow$ X

XTAL $\rightarrow$ X9***

BD $\rightarrow$ L7***

SW $\rightarrow$ S

VEC $\rightarrow$ S9***

GND $\rightarrow$ KN

PACK $\rightarrow$ 9***

CP $\rightarrow$ CN

CP $\rightarrow$ CN9***

CX $\rightarrow$ CN9***

FPC $\rightarrow$ CN9***

JK $\rightarrow$ JA

PT $\rightarrow$ T

REG $\rightarrow$ IC

REG $\rightarrow$ IC9***

LED $\rightarrow$ D8***

Z $\rightarrow$ D9***

ZD $\rightarrow$ D9***

DZ $\rightarrow$ D9***

LIST OF ASSEMBLIES

Mark	Symbol and Description	VSX-1127-K/CUXE	VSX-1122-K/CUXESM	VSX-60/UXECB	VSX-1027-K/CUXE
NSP	1..PCB TTL ASSY MAIN	7025HK1110020-IL	7025HK1110010-IL	7025HK1110030-IL	7025HK1109010-IL
	2..MAIN ASSY	7028071711010-IL	7028071711010-IL	7028071711040-IL	7028071711010-IL
	2..VIDEO ASSY	7028071712020-IL	7028071712070-IL	7028071712040-IL	7028071712070-IL
	2..G-L ASSY	7028071713040-IL	7028071713040-IL	7028071713040-IL	7028071713040-IL
	2..G-R ASSY	7028071714040-IL	7028071714040-IL	7028071714040-IL	7028071714040-IL
	2..WG-A ASSY	7028071715040-IL	7028071715040-IL	7028071715040-IL	7028071715040-IL
	2..WG-B ASSY	7028071716040-IL	7028071716040-IL	7028071716040-IL	7028071716040-IL
NSP	1..PCB TTL ASSY DMAIN	7025HK1110021-IL	7025HK1110011-IL	7025HK1110031-IL	7025HK1109011-IL
	2..D-MAIN ASSY	7028071752020-IL	7028071752040-IL	7028071752040-IL	7028071752070-IL
NSP	1..PCB TTL ASSY FRONT	7025HK1110022-IL	7025HK1110012-IL	7025HK1110032-IL	7025HK1109012-IL
	2..FRONT ASSY	7028071721050-IL	7028071721010-IL	7028071721040-IL	7028071721060-IL
	2..POWER ASSY	7028071722010-IL	7028071722010-IL	7028071722040-IL	7028071722010-IL
	2..MIC ASSY	7028071723040-IL	7028071723040-IL	7028071723040-IL	7028071723040-IL
	2..FVIDEO ASSY	7028071724040-IL	7028071724040-IL	7028071724040-IL	7028071724040-IL
	2..HP ASSY	7028071725040-IL	7028071725040-IL	7028071725040-IL	7028071725040-IL
NSP	1..PCB TTL ASSY AUDIO	7025HK1110023-IL	7025HK1110013-IL	7025HK1110033-IL	7025HK1109013-IL
	2..AUDIO ASSY	7028071741050-IL	7028071741010-IL	7028071741040-IL	7028071741010-IL
NSP	1..PCB TTL ASSY IR	7025HK1110024-IL	7025HK1110014-IL	7025HK1110034-IL	7025HK1109014-IL
	2..IR ASSY	7028071771010-IL	7028071771010-IL	7028071771040-IL	7028071771010-IL
	2..SMPS ASSY	7028071772010-IL	7028071772010-IL	7028071772040-IL	7028071772010-IL
	2..BRG ASSY	7028071773040-IL	7028071773040-IL	7028071773040-IL	7028071773070-IL
	2..BTCNT ASSY	7028071774040-IL	7028071774040-IL	7028071774040-IL	7028071774040-IL
	2..CCG ASSY	7028071775040-IL	7028071775040-IL	7028071775040-IL	7028071775040-IL
NSP	1..PCB TTL ASSY AMP7	7025HK1110025-IL	7025HK1110015-IL	7025HK1110035-IL	7025HK1109015-IL
	2..AMP7 ASSY	7028071731040-IL	7028071731040-IL	7028071731040-IL	7028071731040-IL
NSP	1..PCB TTL ASSY FHDMI	7025HK1110026-IL	7025HK1110016-IL	7025HK1110036-IL	Not used
	2..FHDMI ASSY	7028071791040-IL	7028071791040-IL	7028071791040-IL	Not used
NSP	1..PCB TTL ASSY F-USB	7025HK1110027-IL	7025HK1110017-IL	7025HK1110037-IL	7025HK1109017-IL
	2..F-USB ASSY	7028071761020-IL	7028071761020-IL	7028071761020-IL	7028071761020-IL
NSP	1..PCB TTL ASSY BT	7025HK1110028-IL	7025HK1110018-IL	7025HK1110038-IL	7025HK1109018-IL
	2..BT ASSY	7028070231010-IL	7028070231010-IL	7028070231010-IL	7028070231010-IL

CONTRAST OF PCB ASSEMBLIES

A AUDIO ASSY

7028071741050-IL, 7028071741040-IL and 7028071741010-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071741050-IL	7028071741040-IL	7028071741010-IL
	IC2503 Electric VOL IC (2 ch)	BD3812F	BD3812F	Not used
	JA2102 Ter, RCA 2pin	G601206A0005Y-IL	G602421E0002Y-IL	G601206A0005Y-IL

C MAIN ASSY

7028071711010-IL and 7028071711040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071711010-IL	7028071711040-IL
	IC5 Liner Regulator IC	Not used	J126781200040-IL

D D-MAIN ASSY

7028071752020-IL, 7028071752040-IL and 7028071752070-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071752020-IL	7028071752040-IL	7028071752070-IL
	IC1802 D/A Converter IC	AK4388ET	AK4388ET	Not used
	IC1803 Zero Delay Buffer	IDT6V60008DCG	Not used	Not used
	IC9207 IC	TC74VHC08FK	TC74VHC08FK	Not used
	JA1801 Pin Jack (2P)	G601206A0700Y-IL	G601206A0700Y-IL	Not used
	JA1802 Ter, RCA 1pin	Not used	Not used	G60011703000Y-IL
	JA1804 Module	E100216500010-IL	E100216500010-IL	Not used

E IR ASSY

7028071771010-IL and 7028071771040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071771010-IL	7028071771040-IL
	IC501 IC, Logic-interface	Not used	J046323200020-IL
	Q508, Q511, Q524 Semi, BRT/PNP RC	Not used	J502010300210-IL
	Q519, Q521, Q523 Semi, TR/GE PNP 2SA	Not used	J5001266G0050-IL
	JA501 CN. Wafer Interface	Not used	L103090090040-IL
	JA502 Jack, D3.5	Not used	G401PJ3080100-IL
	503 Bracket	4010210196100-IL	Not used

F VIDEO ASSY

7028071712020-IL, 7028071712070-IL and 7028071712040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071712020-IL	7028071712070-IL	7028071712040-IL
	IC1007 Character Generator	PDC162A	Not used	Not used
	X1003 Crystal	E80014R318080-IL	Not used	Not used
	JA1000 Ter, RCA 6pin	Not used	Not used	G603610A0032Y-IL
	JA1001 Ter, RCA 9pin	G607902AA133Y-IL	G607902AA133Y-IL	G607902AA151Y-IL
	JA1001 Ter, RCA 9pin	G607902AA151Y-IL	Not used	Not used

G BRG ASSY

7028071773040-IL and 7028071773070-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071773040-IL	7028071773070-IL
	IC2802 IC, Linear OP	J121458001010-IL	Not used

H FRONT ASSY

7028071721050-IL, 7028071721010-IL, 7028071721040-IL and 7028071721060-IL are different in part number, they consist of the same components.

I POWER ASSY

7028071722010-IL and 7028071722040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071722010-IL	7028071722040-IL
	D3029 LED, Round	Not used	K500036001120-IL

U SMPS ASSY

7028071772010-IL and 7028071772040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071772010-IL	7028071772040-IL
	CN9100 Connector	L108396030010-IL	Not used

Mark	No.	Description	Part No.
------	-----	-------------	----------

PARTS LIST (VSX-1127-K)

A AUDIO ASSY

SEMICONDUCTORS

IC 2501	BD3473KS2
IC 2502	J040406600010-IL
IC 2503	BD3812F
IC 2702,2704,2706	J121458001010-IL
Q 2401	J5023209Y0010-IL
Q 2402	J5001281Y0010-IL

MISCELLANEOUS

JA 2101 TER,RCA 6PIN	G603610A0001Y-IL
JA 2102 TER,RCA 2PIN	G601206A0005Y-IL
JA 2103 TER,RCA 4PIN	G602421E0046Y-IL

RESISTORS

R 374,377	C060033065050-IL
-----------	------------------

B AMP7 ASSY

SEMICONDUCTORS

Q 401,413,425,437	J5001024Y0050-IL
Q 407,408,417,419	J5000992F0050-IL
Q 412,424,436,448	J5023206Y0050-IL
Q 420,431,432,443	J5000992F0050-IL
Q 444,455,456,467	J5000992F0050-IL
Q 449,461,473	J5001024Y0050-IL
Q 460,472,484	J5023206Y0050-IL
Q 468,479,480	J5000992F0050-IL
D 9401,9404,9407,9410	K06005R134520-IL
D 9402,9403,9405,9406	K06004R344520-IL
D 9408,9409,9411,9412	K06004R344520-IL
D 9413,9416,9419	K06005R134520-IL
D 9414,9415,9417,9418	K06004R344520-IL
D 9420,9421	K06004R344520-IL

MISCELLANEOUS

VR 401-407 VR,SEMI CARBON MOLD	C541102315000-IL
400,401 BRACKET	4010210196100-IL

Mark	No.	Description	Part No.
------	-----	-------------	----------

RESISTORS

⚠ R 406,450,494,537	F320184710050-IL
⚠ R 424,425,430,431	N113136647820-IL
R 443,487,530,573	C060047065060-IL
⚠ R 467,468,474,475	N113136647820-IL
R 493	C060033065050-IL
⚠ R 511,512,517,518	N113136647820-IL
⚠ R 554,555,561,562	N113136647820-IL
⚠ R 580,623,666	F320184710050-IL
⚠ R 597,598,603,604	N113136647820-IL
R 616,659,702	C060047065060-IL
⚠ R 640,641,646,647	N113136647820-IL
⚠ R 683,684,689,690	N113136647820-IL

CAPACITORS

C 419	D04010108C240-IL
-------	------------------

C MAIN ASSY

SEMICONDUCTORS

⚠ IC 1	J126781200040-IL
⚠ IC 2	J126791200060-IL
⚠ IC 3	J126780500110-IL
⚠ IC 4	J126790500070-IL
Q 14,15	J5023198Y0000-IL
Q 16	J5000992F0050-IL
Q 17	J5000916Y0050-IL
⚠ D 7	K047100600220-IL
⚠ D 10-13,23	K000400700220-IL
⚠ D 4912	K047604000020-IL
D 9002	K06005R144520-IL
D 9024,9025	K06012R044520-IL

MISCELLANEOUS

JA 1,2 TER,BOARD SCREW 8P	G614108V1010M-IL
JA 3 TER,BOARD SCREW 2P	G611201A0200Y-IL
JA 50 TUNER,FM/AM	E903004100780-IL
RY 2-6 RELAY	G680120502050-IL
CN 9007,9019 CN,WAFER	L109012511320-IL
CN 9008,9016-9018 CN.WAFER	L109012510920-IL

Mark	No.	Description	Part No.
	CN 9009	CN,WAFER	L109012511120-IL
	CN 9012	CN,WAFER	L109012511520-IL
	2	TERMINAL	3790040886000-IL
⚠	33,34	FUSE,MICRO	G658315250050-IL
RESISTORS			
	R	5,7,9,11	C060010065050-IL
	R	6,8,10,12	C060010066050-IL
	R	13,15,17	C060010065050-IL
	R	14,16,18	C060010066050-IL
	R	41,42	C060R22065050-IL
	R	25	C0605R6065050-IL
	R	64	C060022063050-IL
	R	66	C0604R7065050-IL
CAPACITORS			
	C	55,58	D040103089000-IL
	C	76	D040682083000-IL
	C	84,85	D040472084020-IL
	C	101	D04010108C240-IL
D MAIN ASSY			
SEMICONDUCTORS			
	IC	101	UPD61110GM-100UEVA
	IC	102,9201	J001982566010-IL
	IC	104,604,1808	TC7WHU04FK
	IC	603	PE7008A
	IC	608	TC74VHCT541AFK
	IC	610,1509,1806	TC74VHC126FK
	IC	611	TC74VHCT126AFK
	IC	612,1502	TC74VHCT08AFKS1
	IC	613,1601,1804,9003	TC74VHC08FK
	IC	614,701,9008,9208	TC7SH08FUS1
	IC	901,910	TC74LCX541FK
	IC	902,911	TC7SZ125FU
	IC	909	ADV7181CBSTZ
⚠	IC	1216	LP2996M
	IC	1403	J040740400270-IL
⚠	IC	1605	AAT4610BIGV-1
	IC	1801	AK4588VQ
	IC	1802	AK4388ET
	IC	1803	IDT6V60008DCG
	IC	1805	TC74VHC157FK
	IC	1807	J040740400270-IL
	IC	1812	TC7SZ126FU
	IC	9001	J001986466010-IL
	IC	9102	BU4094BCFV
⚠	IC	9202	BD2226G
	IC	9206	341S2162
	IC	9207	TC74VHC08FK
⚠	IC	9401,9511,9519	S-1170B50UC-OUJ
⚠	IC	9501	S-1172B10-U5
⚠	IC	9502,9518,9523	S-1172B12-E6
⚠	IC	9508	S-1170B25UC-OTK
⚠	IC	9515	S-1172B15-E6
⚠	Q	9503,9507,9516	J543045010060-IL
MISCELLANEOUS			
	JA	1801 PIN JACK (2P)	G601206A0700Y-IL
	JA	1803,1804 MODULE	E100216500010-IL
	KN	9801 BRACKET	4010210196100-IL
⚠	P	601 SW.POLY	G300003500010-IL

Mark	No.	Description	Part No.
<u>CAPACITORS</u>			
	C	1509	D040222081000-IL
<u>E IR ASSY</u>			
<u>MISCELLANEOUS</u>			
	JA	504,505 JACK,D3.5	G401PJ3080100-IL
	CN	9511 CN.WAFER	L109012510920-IL
	CN	9512 CN.WAFER	L109012511520-IL
	CN	9513 CN.WAFER	L109012512720-IL
		501,503 BRACKET	4010210196100-IL
<u>F VIDEO ASSY</u>			
<u>SEMICONDUCTORS</u>			
	IC	1001	J171132900010-IL
	IC	1007	PDC162A
	IC	1008	NJM2505AF
	Q	910	J5023209Y0010-IL
<u>MISCELLANEOUS</u>			
	JA	1001 TER,RCA 9PIN	G607902AA151Y-IL
	JA	1001 TER,RCA 9PIN	G607902AA133Y-IL
	X	1003 CRYSTAL	E80014R318080-IL
<u>G BRG ASSY</u>			
<u>SEMICONDUCTORS</u>			
	IC	2704,2742,2762,2782	J121458001010-IL
	IC	2802	J121458001010-IL
<u>MISCELLANEOUS</u>			
	RY	701 RELAY	G680240202030-IL
	CN	2107,2110 CN,WAFER	L109012512320-IL
	CN	2112 CN.WAFER	L109012510920-IL
	CN	2113,2203 CN,WAFER	L109012512120-IL
<u>RESISTORS</u>			
	R	720	C060010063050-IL
<u>H FRONT ASSY</u>			
<u>SEMICONDUCTORS</u>			
	IC	3001	PE5615A
	IC	3005	J126077004210-IL
⚠	IC	9103	J126111700041-IL
	Q	3011	J5001266G0050-IL
	D	3007,3009,3011,3013	K500052009011-IL
	D	9001	K06006R844520-IL
<u>MISCELLANEOUS</u>			
	V	3001 DISPLAY,FLT	K530166400010-IL
	S	3001-3015 SWITCH	G180501000010-IL
	S	3024 SW,ENCODER	G121125042011-IL
	X	3001 RESONATOR,CERAMIC	E830500000020-IL
	X	3002 CRYSTAL	E80015R000020-IL
		3000 FL HOLDER	4320211016000-IL
	U	3001 MODULE,REMOCON	E940349003810-IL
<u>RESISTORS</u>			
	R	3021,3022	C060R47065050-IL
	R	3025,3026	C060001065060-IL

Mark No. Description

Part No.

Mark No. Description

Part No.

A

I POWER ASSY

MISCELLANEOUS

S 3401 SWITCH
S 3501 SW,ENCODER

G180501000010-IL
G121125052011-IL

T F-USB ASSY

MISCELLANEOUS

JA 600 CN,PLUG CONTACT

G480040000180-IL

B

J MIC ASSY

SEMICONDUCTORS

IC 3652

J121458001010-IL

U SMPS ASSY

SEMICONDUCTORS

⚠ IC 100
⚠ IC 102
⚠ IC 116
Q 9100-9102
⚠ D 100-102,104

K614123000010-IL
J122258001010-IL
J126243118010-IL
J5023198Y0000-IL
K040540600030-IL

C

MISCELLANEOUS

JA 3654 JACK,D3.5

G401PJ354H40Y-IL

⚠ D 103
D 105,106,109,110
D 108
D 9100,9102,9104,9106
D 9101,9103,9105,9108

K120306005510-IL
K000400700220-IL
K050000015000-IL
K06022R044520-IL
K06039R044520-IL

K FVIDEO ASSY

MISCELLANEOUS

JA 3656 TER,RCA 1PIN

G600101HG000Y-IL

D 9107,9110,9112,9117
D 9109,9115
D 9114
D 9118

K06022R044520-IL
K06039R044520-IL
K06006R244520-IL
K06022R044520-IL

D

M G-L ASSY

There is no service parts.

⚠ L 100 COIL,LINE FILTER
⚠ RY 101 RELAY
⚠ T 100 TRANS,SWITCHING
⚠ CN9100 CONNECTOR
⚠ CN9102 CN.WAFER 7.92MM

D320201405510-IL
G680050102020-IL
E060283405510-IL
L108396030010-IL
L108011430210-IL

E

N G-R ASSY

There is no service parts.

100,102 BRACKET
⚠ FU 100 FUSE GLASS TUBE 20MM
⚠ FU 101 FUSE GLASS TUBE 20MM

4010210196100-IL
N751503151160-IL
N751508001160-IL

F

O WG-A ASSY

There is no service parts.

RESISTORS

⚠ R 100
⚠ R 101
R 104
⚠ R 105,113,115

C060015564520-IL
C060022563520-IL
C060022563520-IL
C060010563520-IL

G

P WG-B ASSY

There is no service parts.

CAPACITORS

⚠ C 100
C 102
C 103
⚠ C 104,105
C 106-108

D02122407H010-IL
D04010108K000-IL
D00810207Q010-IL
D00847127H010-IL
D041562081001-IL

H

Q CCG ASSY

There is no service parts.

⚠ C 115,128
⚠ C 117
C 131,133

D00815248H010-IL
D008103589010-IL
D008103589010-IL

I

R BTCNT ASSY

MISCELLANEOUS

CN 602 CN.WAFER 2.0MM
600 BRACKET

L101100041110-IL
4010210196100-IL

V BT ASSY

SEMICONDUCTORS

⚠ IC 600

BD2224G

S FHDMI ASSY

SEMICONDUCTORS

IC 8202

PCA9517DGK

MISCELLANEOUS
CN 601 CONNECTOR
CN 603 CN.WAFER 2.0MM
601 BRACKET

CKS5712
L101100031110-IL
4010210196100-IL

J

MISCELLANEOUS

JA 8202 CN.WAFER
JA 8203 CN.WAFER

L109100190060-IL
L109100190170-IL