




PIONEER®
The future of sound and vision.

Service Manual

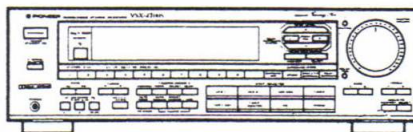


ORDER NO.
ARP2099

AUDIO/VIDEO STEREO RECEIVER

VSX-4700S

- This manual is applicable to the VSX-4700S/HEZ type.
- Ce manuel pour le service comprend les explications de réglage en français.
- Este manual de servicio trata del método ajuste escrito en español.

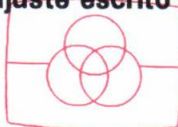

Free service manuals
Gratis schema's

Digitized by

www.freeservicemanuals.info

CONTENTS

1. SPECIFICATIONS	2	6. RÉGLAGE	37
2. EXPLODED VIEWS, PACKING AND PARTS LIST	3	6. AJUSTE	39
3. SCHEMATIC DIAGRAM	7	7. IC INFORMATION	41
4. P.C. BOARDS CONNECTION DIAGRAM	15	8. REMOTE CONTROL UNIT (CU-VSX016: AXD1154)	45
5. PCB 's PARTS LIST	29	9. PANEL FACILITIES	50
6. ADJUSTMENTS	35		

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada

PIONEER ELECTRONIC [EUROPE] N.V. Keetberglaan 1, 2740 Beveren, Belgium

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

© **PIONEER ELECTRONIC CORPORATION** 1990

YQ AUG. 1990 Printed in Japan

1. SPECIFICATIONS

Amplifier section

[POWER AMP IN]

Continuous average power output of 105 watts* per channel, min., at 8 ohms, from 20 Hz to 20,000 Hz with no more than 0.008 % total harmonic distortion (front).**

Continuous power output (rear)	20 W + 20 W (1 kHz, T.H.D. 0.08%** , 8Ω)
Dynamic Power (2 Ω/4 Ω/8 Ω)	230 W/200 W/150 W
Input (Sensitivity/Impedance)	
PHONO MM	2.5 mV/47 kΩ
CD, TAPE 1/DAT, TAPE 2, VDP/CDV,	
VCR 1, VCR 2	150 mV/47 kΩ
FRONT POWER AMP IN	1 V/47 kΩ
Phono Overload Level (T.H.D. 0.08 %, 1000 Hz)**	
PHONO MM	130 mV
Frequency Response	
PHONO MM	20 Hz to 20,000 Hz ±0.3 dB
CD, TAPE 1/DAT, TAPE 2, VDP/CDV,	
VCR 1, VCR 2	5 Hz to 100,000 Hz ± $\frac{0}{3}$ dB
Output (Level/Impedance)	
TAPE 1/DAT REC, TAPE 2 REC	150 mV/2.2 kΩ
VCR 1 OUT, VCR 2 OUT	150 mV/2.2 kΩ
PRE AMP OUT	1 V/470Ω
Tone Control	
BASS 100 Hz	±8 dB
TREBLE 10 kHz	±8 dB
Loudness Contour	6 dB (100 Hz) 3 dB (10 kHz)
Signal-to-Noise Ratio (IHF, short circuited, A network)	
PHONO MM	73 dB
CD, TAPE 1/DAT, TAPE 2, VDP/CDV,	
VCR 1, VCR 2	98 dB
Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]	
PHONO MM	75 dB
CD, TAPE 1/DAT, TAPE 2, VDP/CDV,	
VCR 1, VCR 2	80 dB

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier.

** Measured by Audio Spectrum Analyzer.

VIDEO Section

Input (Sensitivity/Impedance)	
VCR 1, VCR 2, VDP/CDV	1 V _{p-p} /75Ω
Output (Level/Impedance)	
VCR 1, VCR 2, MONITOR	1 V _{p-p} /75Ω
Frequency Response	
VCR 1, VCR 2, VDP/CDV → MONITOR	5 Hz — 10 MHz ± $\frac{0}{3}$ dB
Signal to Noise Ratio	55 dB
Cross Talk	55 dB

FM Tuner Section

Frequency Range	87.5 MHz to 108 MHz
Usable Sensitivity	Mono; 10.8 dBf, IHF (0.95 μV/75 Ω)
50 dB Quieting Sensitivity	Mono; 15.3 dBf, (1.6 μV/75 Ω) Stereo; 37.0 dBf, (19.5 μV/75 Ω)
Signal-to-Noise Ratio	Mono; 80 dB (at 65 dBf) Stereo; 76 dB (at 85 dBf)
Distortion	Mono; 0.2 % (1 kHz) Stereo; 0.3 % (1 kHz)
Capture Ratio	1 dB
Alternate Channel Selectivity	65 dB (400 kHz)
Stereo Separation	45 dB (1 kHz)
Frequency Response	30 Hz to 15 kHz (± $\frac{0.5}{2.0}$) dB
Image Interference Ratio	50 dB
IF Interference Ratio	80 dB
Antenna Input	300 Ω balanced 75 Ω unbalanced

AM Tuner Section

Frequency range	530 kHz — 1,700 kHz
Sensitivity (IHF, Loop antenna)	300 μV/m
Selectivity	25 dB
Signal-to-Noise Ratio	50 dB
Antenna	Loop antenna

Miscellaneous

Power requirements	AC 120V, 60 Hz
Power consumption	400 W, 510 VA
In standby condition	3 W
AC Outlets	
SWITCHED x 2	TOTAL 100 W MAX
UNSWITCHED x 1	200 W MAX
Dimensions	420 (W) x 125.5 (H) x 395 (D) mm 16-7/16 (W) x 4-15/16 (H) x 15-9/16 (D) in
Weight (without package)	9.5 kg (21 lb)

Furnished Parts

FM T-type antenna	1
AM Loop antenna	1
Dry cell batteries	
VSX-4700S size "AAA" (LR03/AM-4) Alkaline	4
VSX-4600 size "AAA" (R03/UM-4)	2
Remote control unit	1
Operating Instructions	1
Templates (VSX-4700S)	2

NOTE:

Specifications and the design subject to possible modifications without notice due to improvements.

Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: U.S. numbers 3,632,886, 3,746,792 and 3,959,590; CANADA numbers 1,004,603 and 1,037,877. "Dolby" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

Manufacturé sous licence de Dolby Laboratories Licensing Corporation. En outre, sous licence d'un ou plusieurs des brevets suivants: numéros américains 3,632,886, 3,746,792 et 3,959,590; numéros canadiens 1,004,603 et 1,037,877. Le terme "Dolby" et le symbole Double-D sont des marques déposées de Dolby Laboratories Licensing Corporation.


2. EXPLODED VIEWS,PACKING AND PARTS LIST

- NOTES:
- Parts without part number cannot be supplied.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.


Parts list of Exterior and Packing

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	1	MASTER VOL ASSY	AAB1119		41	INSULATOR ASSY	AMR1434
	2	LIGHT ACTION KNOB	AAD1398		42	INSULATOR ASSY	AMR1435
	3	SP SELECTOR BUTTON	AAD1587		43	CHASSIS	
	4	STATION BUTTON	AAD1588		44	FRONT PANEL	ANB1406
	5	SURROUND MODE BUTTON	AAD1589		45	REAR PANEL	
	6	FUNCTION BUTTON	AAD1590		46	BONNET COVER	AZN1934
	7	FUNCTION BUTTON	AAD1591		47	BOTTOM PLATE	
	8	PRIMARY ASSEMBLY			48	SUB TRANS BRACKET	
	9	PANEL	AAK2013		49	PCB PLATE	
	10	FL FILTER	AAK2014		50	HEAT SINK PLATE	
	11	NAME PLATE (METAL)	AAM1029		51	HEAT SINK	
	12	AMP ASSEMBLY	AWH1008		52	OPERATING INSTRUCTIONS	ARC1239
	13	SURR ASSEMBLY	AWX1031		53	OPERATING INSTRUCTIONS	ARE1179
	14	SCREW (STEEL)	ABA-297		54	TUNER ASSEMBLY	AWE1184
	15	SCREW	ABA-298		55	FE ASSEMBLY	AWB1004
	16	SCREW (STEEL)	ABA1006		56	SP.SW ASSEMBLY	
	17	SCREW (STEEL)	ABA1011		57	FRONT ASSEMBLY	AWZ3158
	18	SCREW (STEEL)	ABA1047		58	REMOTE CONTROL UNIT	AXD1154
	19	SCREW (STEEL)	ABA1093		59	SCREW	BBZ26P080FMC
	20	NUT	ABN-065		60	SCREW	FBT40P080FZK
	21	AC POWER CORD	ADG1021		61	SCREW	PBZ25P100FMC
	22	FM ANTENNA	ADH1002		62	SCREW	VMZ30P060FMC
	23	CUSHION (RUBBER)		⚠	63	FUSE (T2.5A, FU1)	AEK-403
	24	MICA SHEET	AEC-818	⚠	64	FUSE (T2.5A, FU3)	AEK-403
	25	PIN GROMMET		⚠	65	FUSE (T2.5A, FU4)	AEK-403
	26	BARRIER			66	LOOP ANTENNA	ATB1005
	27	PCB SPACER	AEC1273	⚠	67	TRANSISTOR (Q1)	2SC3281
	28	CUSHION		⚠	68	TRANSISTOR (Q2)	2SC3281
	29	REAR SP ASSEMBLY		⚠	69	TRANSISTOR (Q3)	2SA1302
	30	CLAMPER		⚠	70	TRANSISTOR (Q4)	2SA1302
	31	MICA SHEET	AEP-313	⚠	71	TRANSISTOR (Q5)	2SA1263N
	32			⚠	72	TRANSISTOR (Q6)	2SC3180N
	33	STYROL PROTECTOR	AHA1020	⚠	73	POWER TRANSFORMER (T1)	ATS1303
	34	STYROL PROTECTOR	AHA1021		74	EQ ASSEMBLY	
	35	PACKING CASE	AHD1868		75	REAR AMP ASSEMBLY	
	36	MAIN ASSEMBLY	AWZ3123		76	VOL ASSEMBLY	
	37	PACKING SHEET	AHG1016		77	SP A, B ASSEMBLY	
	38	TERMINAL SCREW					
	39						
	40	PANEL BASE	AMB1516				

Exterior

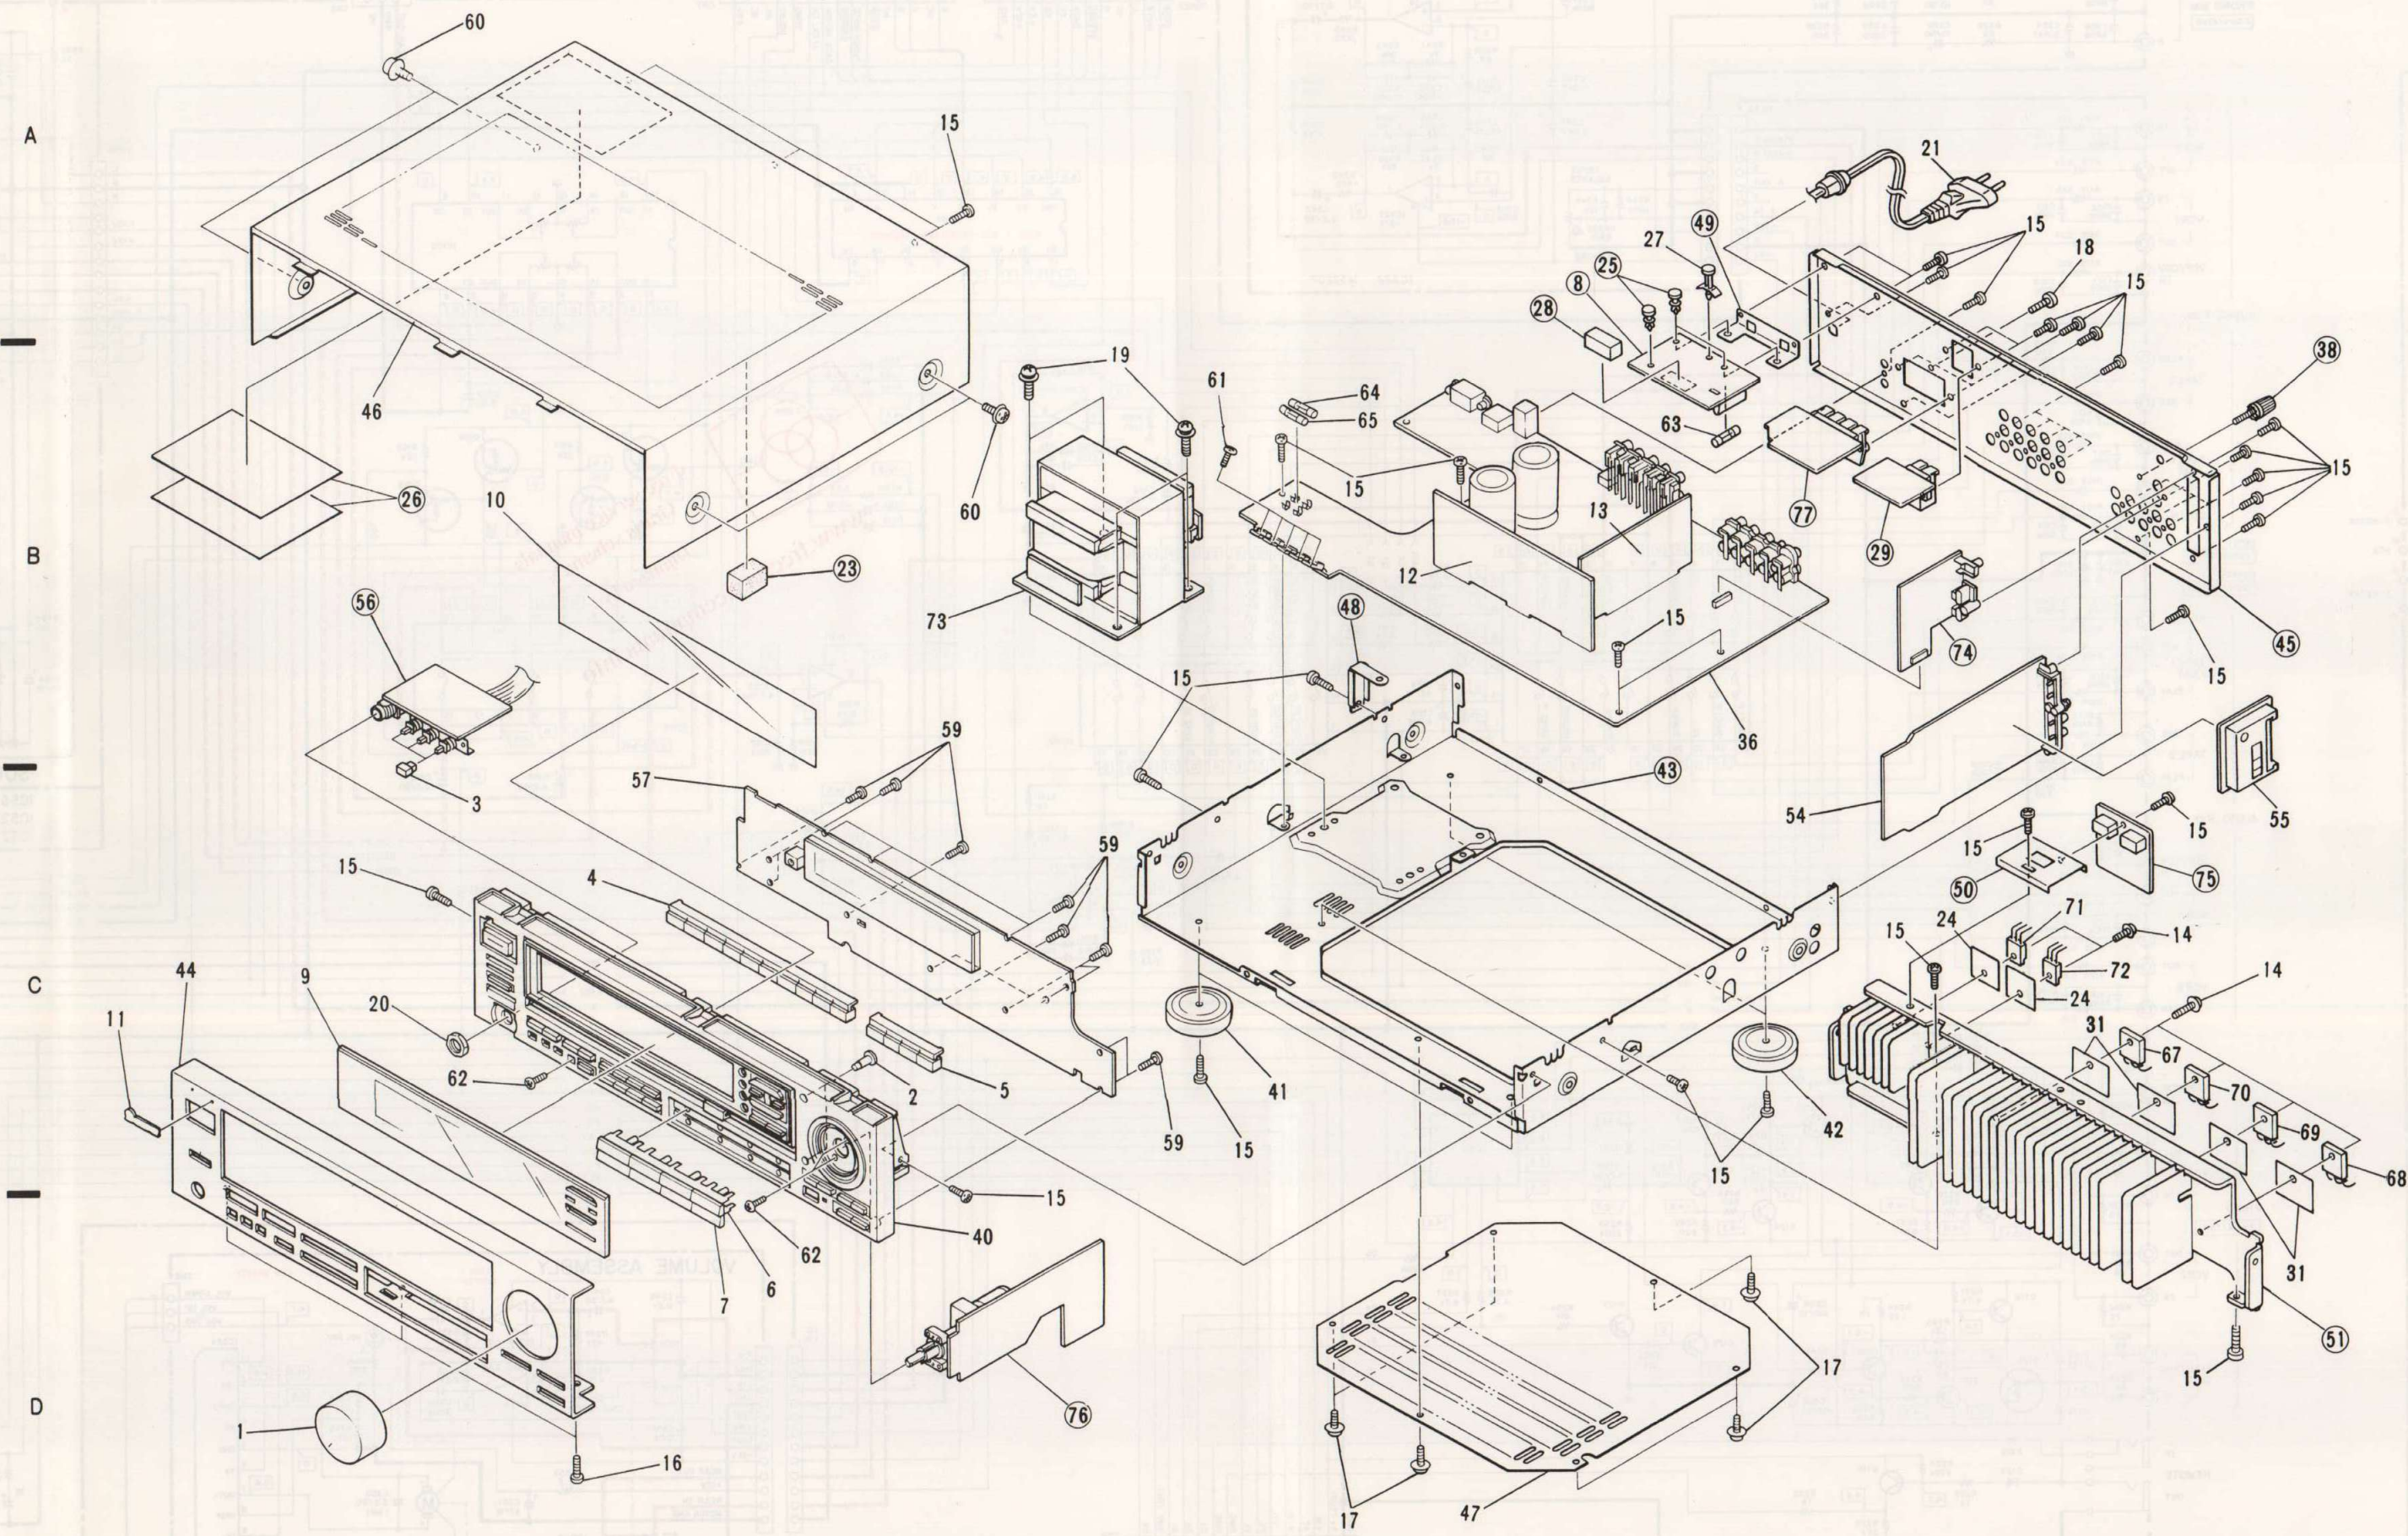

packing

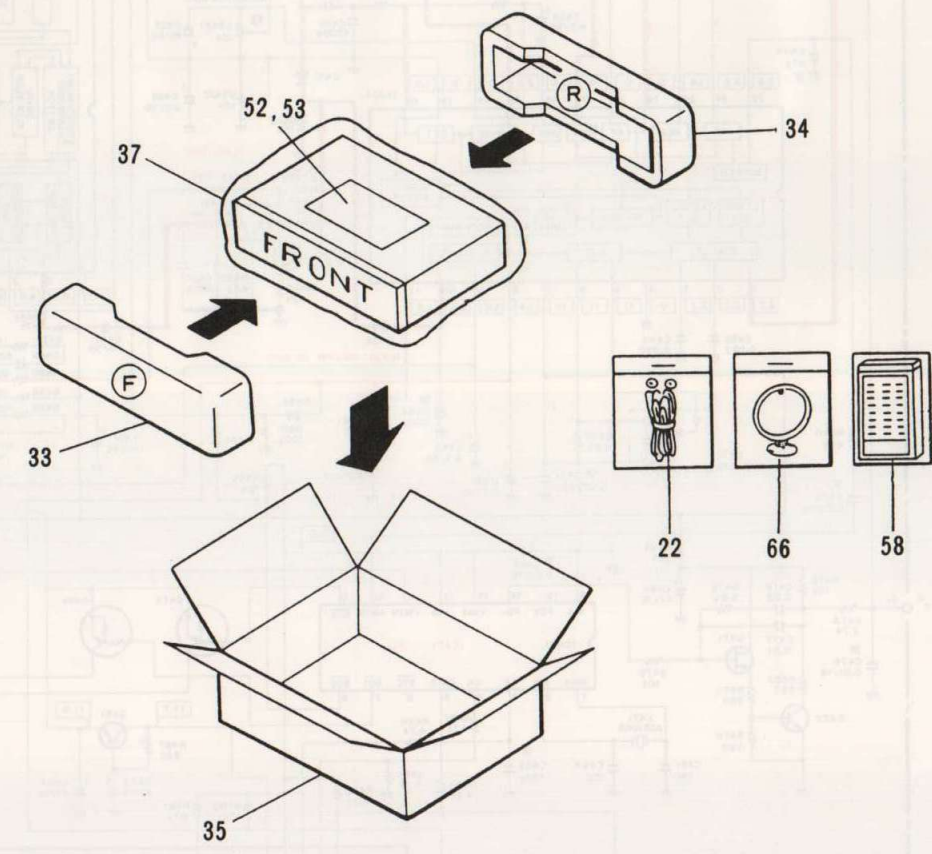

3. SCHEMATIC DIAGRAM

A

B

C

D

TUNER ASSEMBLY (AWE1184)

FE ASSEMBLY (AWB1004)

EQ ASSEMBLY

From TUNER ASSEMBLY (A)

To FRONT ASSEMBLY J7

VOLUME ASSEMBLY

SURROUND ASSEMBLY (AWX1031)

MAIN ASSEMBLY (1/2) (AWZ3123)

IC431 LA1265S Q472 25C1740SLN D431-D435 15S252
IC451 AN740P Q451 25C2603 D901-D904 15V147
IC471 LM7001 Q421,Q902 25C2608 L901 15V147
Q471 25K246 L901 ATC1001
RN2201 Q901,Q903,Q904 25K241 L902 ATC1010
25A933S Q905 25C2786 L903 ATC1010
Q452,Q453,Q441 25C1740S L906 ATC-247
LAU282M

IC106 BU4066BL
IC112 CX-894
IC113 M5F78M05L
IC117 M5F78M12L
IC115 M5F78M15L

IC114 M5F79M05L
IC116 M5F79M15L
IC109,IC110 M5220L
IC18 M5278L56(A)
IC108,IC111 NJM4558S-X

IC107 TC4028BP
IC103,IC105 TC9154AP
IC101,IC102 TC9164N
IC104 TC9184P

Q101,Q103,Q120 RN1203
Q102,Q104 RN2203
Q111,Q118,Q122, 25A1048
Q125 25C2458
Q108-Q110
Q112-Q117
Q119,Q121,
Q123,Q124,
Q126-Q128
Q107 25D438


A

B

C




D

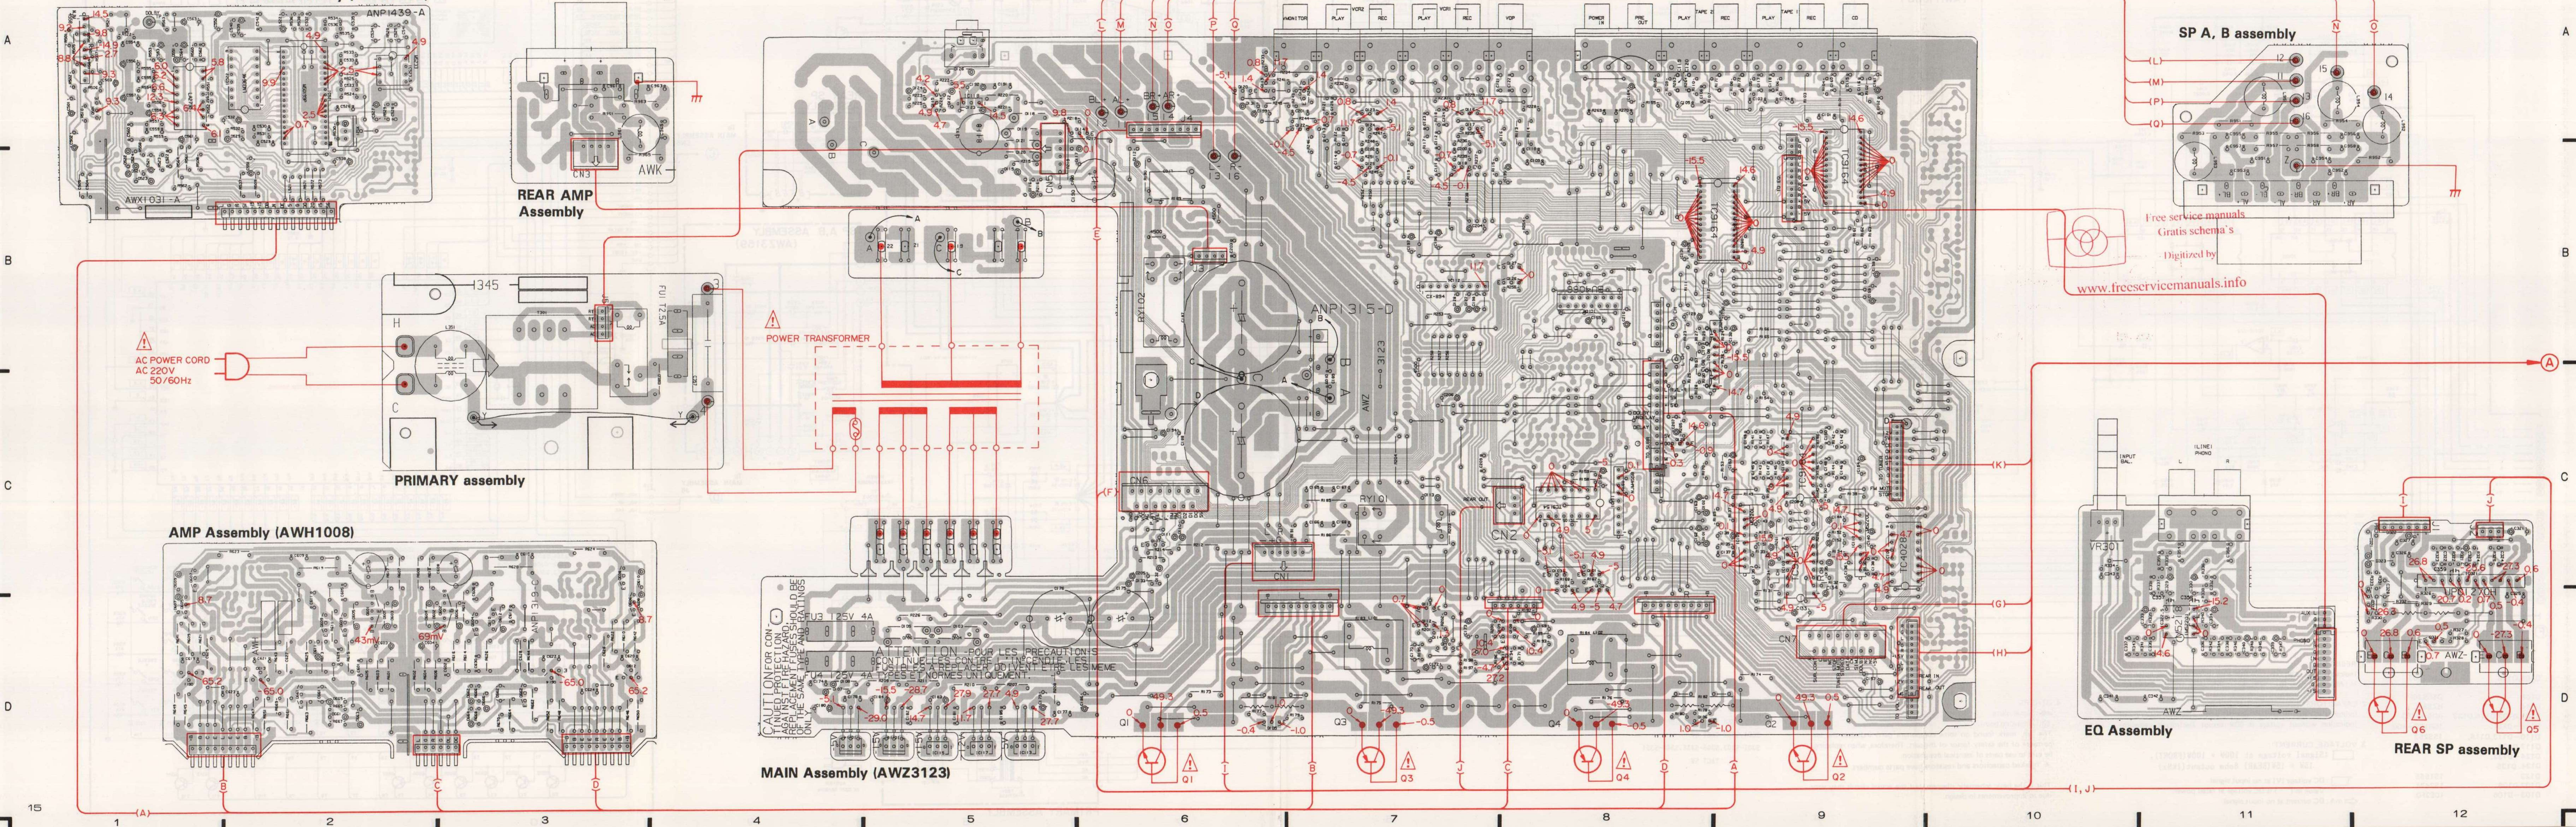


SURR Assembly (AWX1031)



This P.C.B. connection diagram is viewed from the foil side.

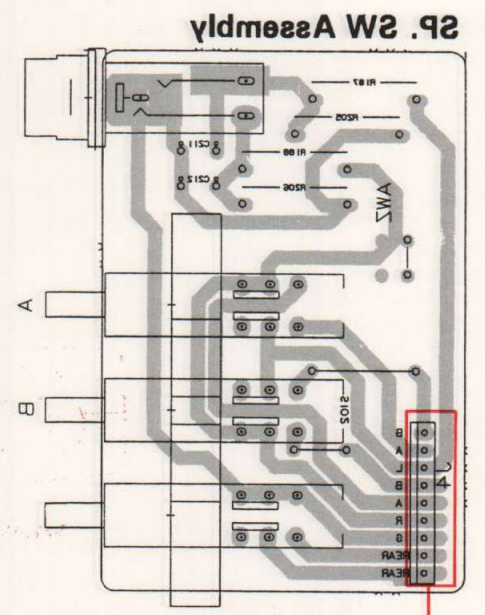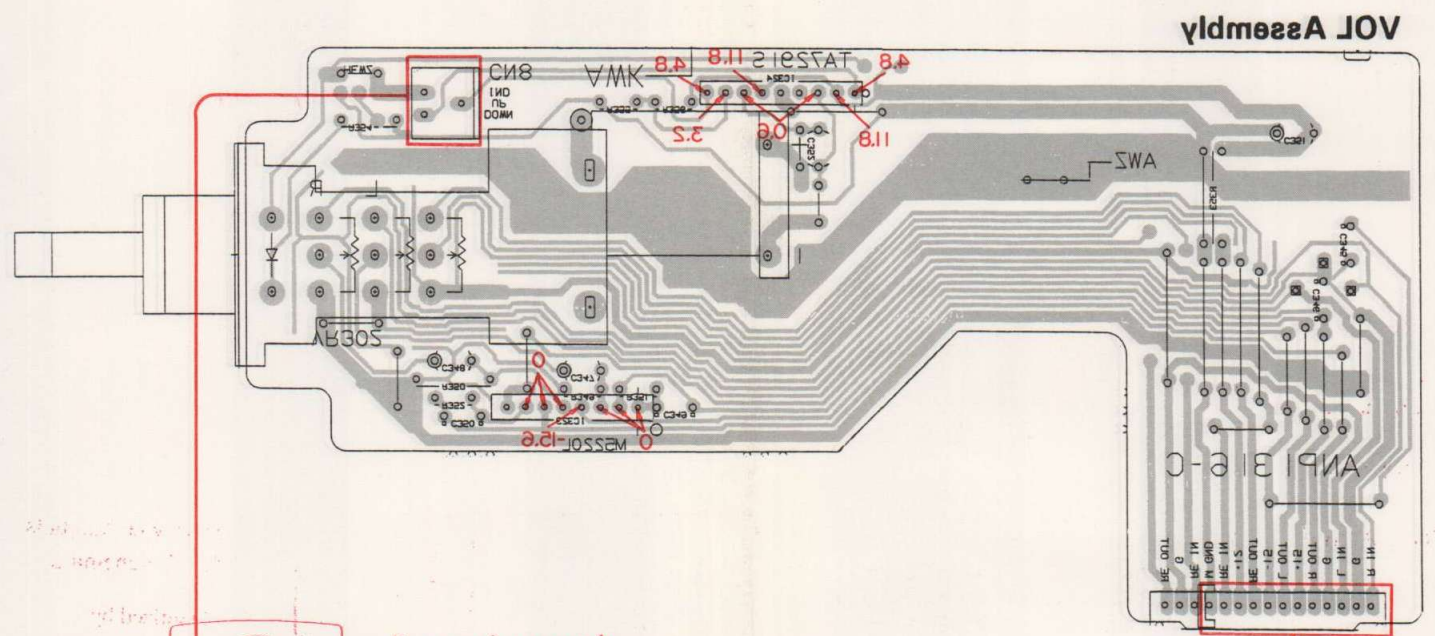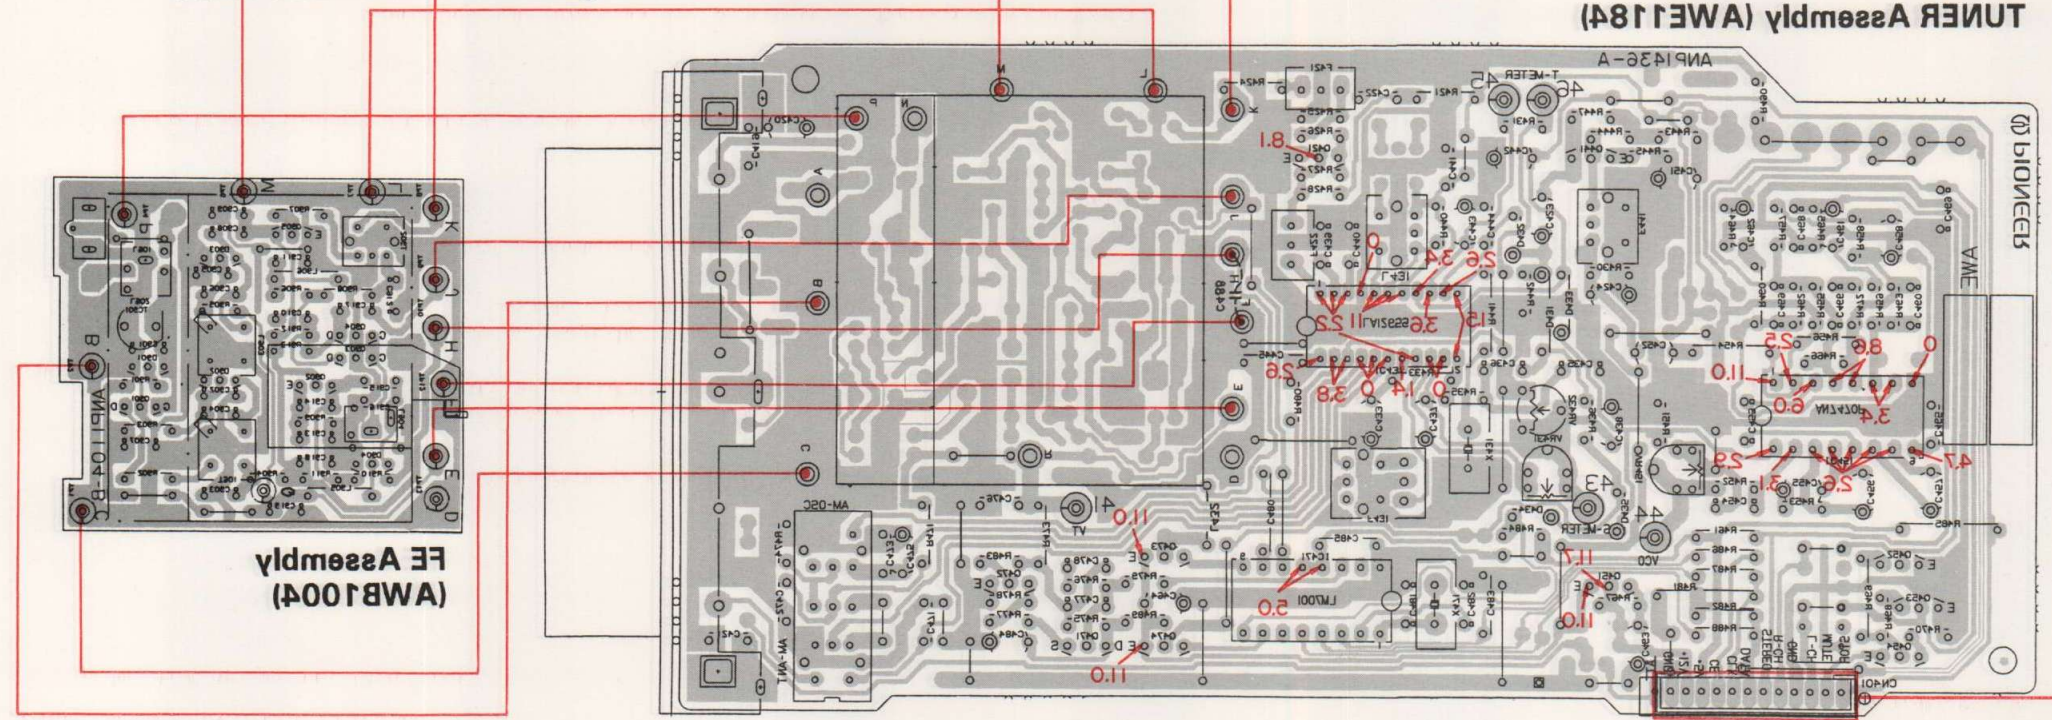

Free service manuals
Gratis schema's
Digitized by
www.freeservicemanuals.info

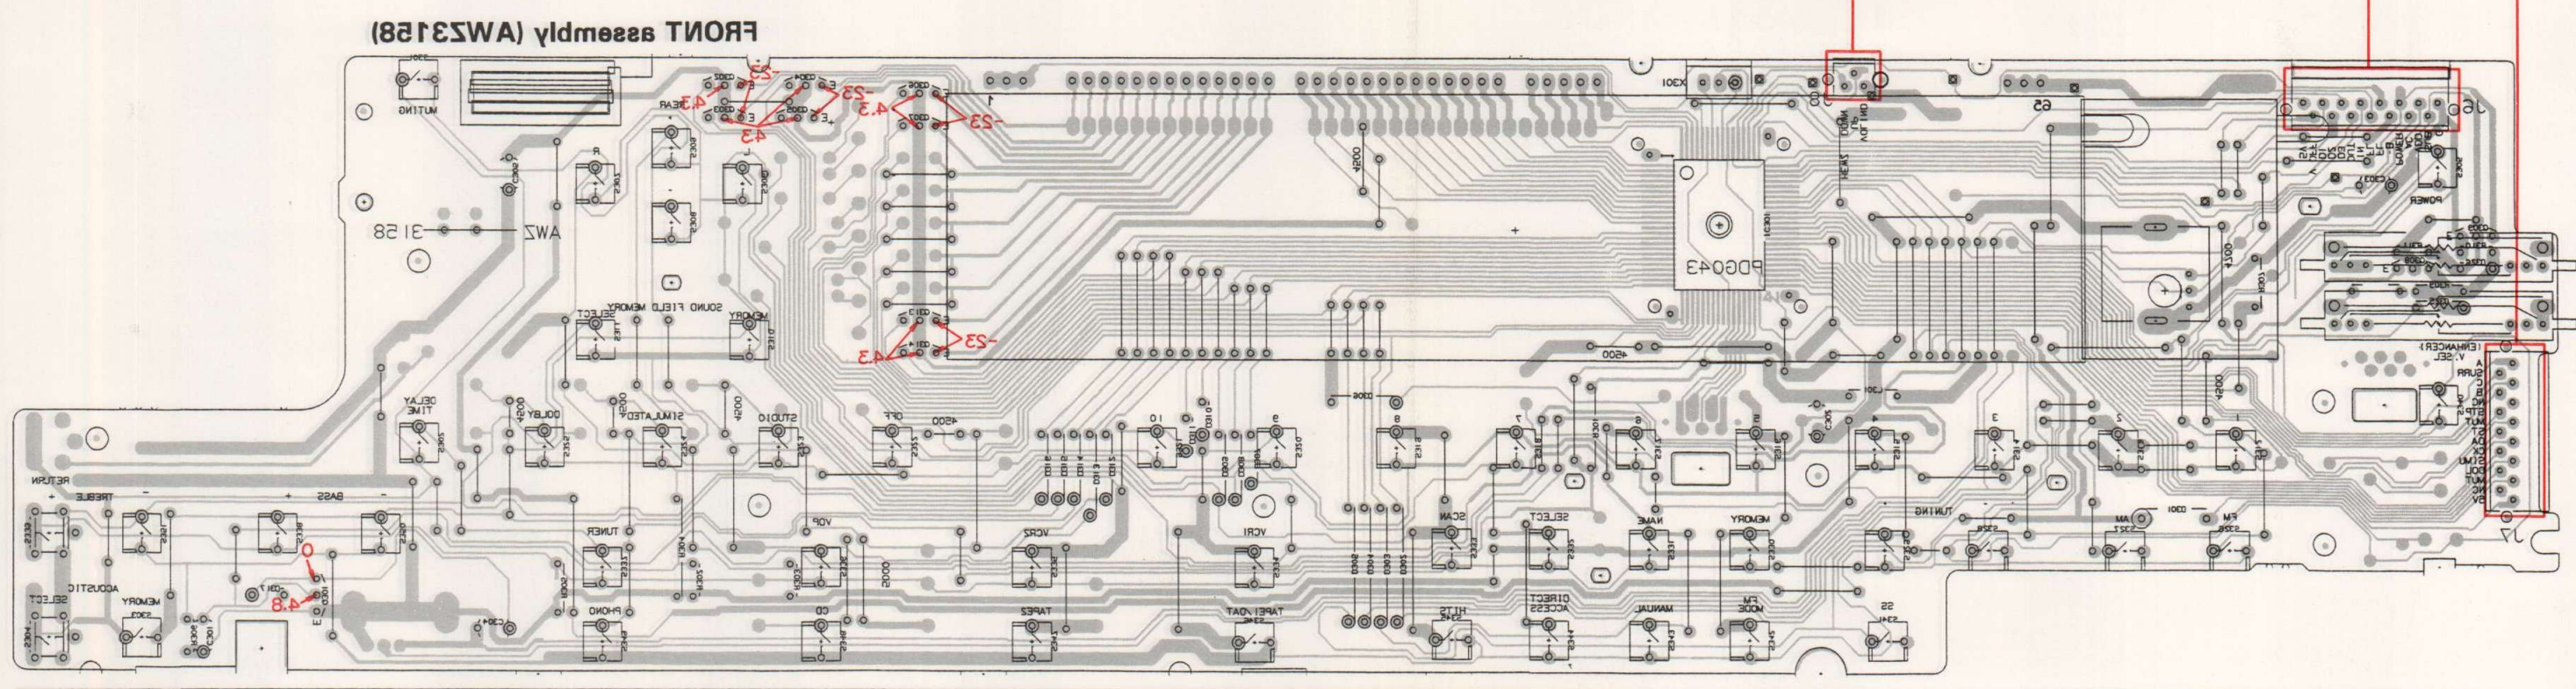


NOTE

1. This P.C.B. connection diagram is viewed from the front mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. bottom diagram indication	Corresponding part symbol	Part Name
IC		IC
S		Switch
RY		Relay
L		Coil
F		Filter
VR		Variable resistor or 2semi-fixed resistor
Resistor		Resistor
Diode		Diode
Transistor		Transistor

Others

3. The capacitor terminal marked with @ (double circles) shows negative terminal.
4. The diode terminal marked with @ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.



5. PCB 's PARTS LIST

NOTES:

- Parts without part number cannot be supplied.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.
- ★★ GENERALLY MOVES FASTER THAN ★
- This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω	56 × 10 ¹	561.....	RD1/4PS	□	□	□	J
47kΩ	47 × 10 ³	473.....	RD1/4PS	□	□	□	J
0.5Ω	0R5.....		RN2H	□	□	□	K
1Ω	010.....		RS1P	□	□	□	K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ	562 × 10 ¹	5621.....	RN1/4SR	□	□	□	F
--------	-----------------------	-----------	---------	---	---	---	---

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
TUNER ASSEMBLY (AWE1184)							
SEMICONDUCTORS							
IC431	AM/FM IC	LA1265S		C439,440	CERAMIC CAPACITOR	CKCYF223Z50	
IC451	MPX IC	AN7470P		C441	CERAMIC CAPACITOR	ACG1022	
IC471	PLL IC	LM7001		C442	ELECTR.CAPACITOR	CEASOR1M50	
				C443	ELECTR.CAPACITOR	CEAS3R3M50	
Q421	TRANSISTOR	2SC2668		C444	CERAMIC CAPACITOR	ACG1018	
Q441	TRANSISTOR	2SC1740S		C445	CERAMIC CAPACITOR	ACG1016	
Q451	TRANSISTOR	2SC2603		C451	ELECTR.CAPACITOR	CEAS101M16	
Q452,453	TRANSISTOR	2SC1740S		C452	ELECTR.CAPACITOR	CEAS100M50	
Q454	TRANSISTOR	2SA933S		C453	CERAMIC CAPACITOR	CKCYF473Z50	
				C454	CAPACITOR	ACE1039	
Q471	N-FET	2SK246		C455	ELECTR.CAPACITOR	CEAS3R3M50	
Q472	TRANSISTOR	2SC1740SLN		C456	ELECTROLYTIC CAPACIT	CEAS1R5M50	
Q473,474	TRANSISTOR	RN2201		C457	ELECTR.CAPACITOR	CEASR22M50	
				C458	ELECTR.CAPACITOR	CEAS470M16	
D431-435	DIODE	1SS252		C459,460	MYLOR FILM CAPACITOR	CQMA102J50	
COILS							
F421	CERAMIC FILTER	ATF-107		C461,462	ELECTR.CAPACITOR	CEAS4R7M50	
F422	CERAMIC FILTER	ATF-119		C463,464	ELECTR.CAPACITOR	CEAS470M16	
F431	CERAMIC FILTER	ATF-208		C465	CERAMIC CAPACITOR	ACG1021	
F441	FILTER	ATF-146		C466	CERAMIC CAPACITOR	CCCSL221J50	
				C468,469	MYLOR FILM CAPACITOR	CQMA182J50	
L431	COIL	ATE-079		C471	CERAMIC CAPACITOR	ACG1021	
L432	AXIAL INDUCTOR	LAU2R2M		C472	CERAMIC CAPACITOR	ACG1022	
CAPACITORS							
C419	CERAMIC CAPACITOR	CKDYF103Z50		C473	CERAMIC CAPACITOR	ACG1021	
C420	ELECTR.CAPACITOR	CEAS100M50		C475	ELECTR.CAPACITOR	CEAS100M50	
C421,422	CERAMIC CAPACITOR	ACG1021		C476	CERAMIC CAPACITOR	ACG1021	
C423	ELECTR.CAPACITOR	CEANP2R2M50		C477	CERAMIC CAPACITOR	CKCYF103Z50	
C424	CERAMIC CAPACITOR	CKCYB681K50		C478	AUDIO FILM CAPACITOR	CFTXA224J50	
C433	ELECTR.CAPACITOR	CEAS4R7M50		C480	CERAMIC CAPACITOR	ACG1021	
C435	CERAMIC CAPACITOR	CKCYF472Z50		C481,482	CERAMIC CAPACITOR	CCDCH150J50	
C436	CERAMIC CAPACITOR	CKCYX683M25		C483	CERAMIC CAPACITOR	ACG1017	
C437	ELECTR.CAPACITOR	CEAS100M50					
C438	ELECTR.CAPACITOR	CEAS2R2M50					

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
C484	ELECTR.CAPACITOR	CEAS470M16		C914	CERAMIC CAPACITOR	CCDCH330J50	
C485	CERAMIC CAPACITOR	ACG1021		C915	CERAMIC CAPACITOR	CCDCH080D50	
C488	CERAMIC CAPACITOR	CKDYF103Z50		C916	CERAMIC CAPACITOR	CCDTH180J50	
RESISTORS							
VR431	VR(10K)	ACP1025		C917	CERAMIC CAPACITOR	CCDCH050C50	
VR432	VR	VRTS6V5153		C918,919	CERAMIC CAPACITOR	CKDYF103Z50	
VR451	VR(4.7K)	ACP1024		RESISTORS			
	Other resistors	RD1/8PM	□□□□		All resistors	RD1/8PM	□□□□
OTHERS							
X431	CERAMIC RESONATOR	ATF1027		MAIN ASSEMBLY (AWZ3123)			
X471	CRYSTAL RESONATOR	ASS1005		SEMICONDUCTORS			
	ANTENNA TERMINAL	AKA1011		IC101,102	E-SW IC	TC9164N	
	2-P			IC103	E-VR IC	TC9154AP	
	FE ASSEMBLY	AWB1004		IC104	E-TONE CONTROL IC	TC9184P	
	AM RF tuning block	AXX1011		IC105	E-VR IC	TC9154AP	
				IC106	LOGIC IC	BU4066BL	
				IC107	LOGIC IC	TC4028BP	
				IC108	OP-AMP IC	NJM4558S-X	
				IC109,110	OP-AMP IC	M5220L	
				IC111	OP-AMP IC	NJM4558S-X	
				IC112	E-SW IC	CX-894	
FE ASSEMBLY (AWB1004)							
Note : FE assembly (AWB1004) is a part of TUNER assembly (AWE1184).							
SEMICONDUCTORS							
Q901	MOS-FET	2SK241		IC113	REGULATOR IC	M5F78M05L	
Q902	TRANSISTOR	2SC2668		IC114	REGURATOR IC	M5F79M05L	
Q903,904	MOS-FET	2SK241		IC115	REGULATOR IC	M5F78M15L	
Q905	TRANSISTOR	2SC2786		IC116	REGURATOR IC	M5F79M15L	
				IC117	REGULATOR IC	M5F78M12L	
D901-904	VARI-CAP DIODE	1SV147-4		IC118	REGULATOR IC	M5278L56(A)	
COILS & TRANSFORMER							
L901	COIL	ATC1001		Q101	TRANSISTOR	RN1203	
L902	COIL	ATC1010		Q102	TRANSISTOR	RN2203	
L903	COIL	ATC-247		Q103	TRANSISTOR	RN1203	
L904	COIL	ATC1003		Q104	TRANSISTOR	RN2203	
L905,906	AXIAL INDUCTOR	LAU2R2M		Q105,106	TRANSISTOR	2SC2603	
T901	COIL	ATC-194		Q107	TRANSISTOR	2SD438	
T902	IF TRANSFORMER	ATE-063		Q108-110	TRANSISTOR	2SC2458	
				Q111	TRANSISTOR	2SA1048	
				Q112-117	TRANSISTOR	2SC2458	
				Q118	TRANSISTOR	2SA1048	
CAPACITORS							
TC901	CERAMIC TRIMMER	ACM-014		Q119	TRANSISTOR	2SC2458	
C901	CERAMIC CAPACITOR	CCDRH100D50		Q120	TRANSISTOR	RN1203	
C902	CERAMIC CAPACITOR	CCDRH390J50		Q121	TRANSISTOR	2SC2458	
C903	CERAMIC CAPACITOR	CKDYF103Z50		Q122	TRANSISTOR	2SA1048	
C904	CERAMIC CAPACITOR	CCDRH390J50		Q123,124	TRANSISTOR	2SC2458	
C905	CERAMIC CAPACITOR	CCDRH330J50		Q125	TRANSISTOR	2SA1048	
				Q126-128	TRANSISTOR	2SC2458	
C906	CERAMIC CAPACITOR	CCDRH390J50		D101,102	ZENER DIODE	RD5.1ESB2	
C907	CERAMIC CAPACITOR	CKDYF223Z50		D103-106	DIODE	10E2FD	
C908	CERAMIC CAPACITOR	CCDCH010C50		D107,108	DIODE	1S2471	
C909,910	CERAMIC CAPACITOR	CCDCH020C50		D109	DIODE	D55B20F	
C911	CERAMIC CAPACITOR	CCDSL101J50		D110-113	DIODE	1SS252	
C912	CERAMIC CAPACITOR	CKDYF103Z50		D114	ZENER DIODE	HZS9AL	
C913	CERAMIC CAPACITOR	CCDCH150J50		D115	DIODE	1SS252	

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
D116	ZENER DIODE	RD5.1ESB2		C181,182	CERAMIC CAPACITOR	CKCYF473Z50	
D117	DIODE	1SS252		C183,184	ELECTR.CAPACITOR	CEAS470M16	
D118-121	DIODE	1SR139-400		C185	CERAMIC CAPACITOR	CKCYF473Z50	
				C186	ELECTR.CAPACITOR	CEAS470M16	
D122	DIODE	1SS252		C187	ELECTROLYTIC CAPACIT	ACH1157	
D123	DIODE	1S1555					
D124,126-128,131,132	DIODE	1SS252		C188	ELECTROLYTIC CAPACIT	ACH1158	
D133	ZENER DIODE	RD5.1ESB2		C189	POLYESTER CAPACITOR	CQMXA104J100	
D134,135	DIODE	1SS252		C190	ELECTROLYTIC CAPACIT	CEAS471M25	
RELAIAS							
RY101	RELAY	ASR-112		C191	CERAMIC CAPACITOR	CKCYF103Z50	
RY102	RELAY	ASR1005		C192	ELECTR.CAPACITOR	CEAS470M10	
COILS							
L101-103	COIL	ATH1009		C193	CEA (47000/5.5V)	ACH1070	
CAPACITORS							
C101-106	CERAMIC CAPACITOR	CCMSL101J50		C194-197	ELECTR.CAPACITOR	CEAS470M10	
C107,108	CERAMIC CAPACITOR	CCMSL680J50		C198	ELECTR.CAPACITOR	CEAS4R7M50	
C109-114	CERAMIC CAPACITOR	CCMSL101J50		C199	ELECTR.CAPACITOR	CEAS220M25	
C115-126	CERAMIC CAPACITOR	CKDYB391K50		C200-202	CERAMIC CAPACITOR	CCMSL080D50	
C129-134	ELECTR.CAPACITOR	CEAS4R7M50		C203	AUDIO FILM CAPACITOR	CFTXA473J50	
C135,136	ELECTR.CAPACITOR	CEAS2R2M50		C204	ELECTR.CAPACITOR	CEAS101M16	
C137,138	CERAMIC CAPACITOR	CCMSL820J50		C205	ELECTR.CAPACITOR	CEAS470M50	
C139,140	ELECTR.CAPACITOR	CEAS010M50		C206	ELECTR.CAPACITOR	CEAS470M25	
C141,142	MYLOR FILM CAPACITOR	CQMA272K50		C207	ELECTR.CAPACITOR	CEAS2R2M50	
C143,144	ELECTR.CAPACITOR	CEAS100M25		C208,209	CERAMIC CAPACITOR	CKCYF103Z50	
C145,146	AUDIO FILM CAPACITOR	CFTXA823J50		C210	ELECTR.CAPACITOR	CEAS2R2M50	
C147-150	AUDIO FILM CAPACITOR	CFTXA153J50		RESISTORS			
C151-156	ELECTR.CAPACITOR	CEAS4R7M50		R173-176	CARBON FILM RESISTOR	RD1/4PMF4R7J	
C157	ELECTR.CAPACITOR	CEAS2R2M50		R181,182	RESISTOR (0.33, 5W)	ACN-139	
C158,159	ELECTR.CAPACITOR	CEAS470M16		R183-186	METAL OXIDE RESISTOR	RSILMF100J	
C160	CERAMIC CAPACITOR	CKDYX473M16		R189,190	CARBON FILM RESISTOR	RD1/4PMF100J	
C161	ELECTR.CAPACITOR	CEAS010M50		R203	FUSIBLE RESISTOR	RFA1/4PS100J	
C162,163	ELECTR.CAPACITOR	CEAS470M10		R204	CARBON FILM RESISTOR	RD1/4PMF100J	
C164	ELECTR.CAPACITOR	CEAS010M50		R207-211	CARBON FILM RESISTOR	RD1/4PMF4R7J	
C165-168	AUDIO FILM CAPACITOR	CFTXA104J50		R212,219,220	CARBON FILM RESISTOR	RD1/4PMF100J	
C169	ELECTROLYTIC CAPACIT	CEAS471M6		R226	FUSIBLE RESISTOR	RFA1/4PS220J	
C170	ELECTROLYTIC CAPACIT	CEANP4R7M50			Other resistors	RD1/8PM	□□□□
C171	CERAMIC CAPACITOR	CKCYF473Z50		OTHERS			
C172	ELECTROLYTIC CAPACIT	CEAS470M35		PIN JACK(2P)	AKB1100		
C173	ELECTR.CAPACITOR	CEAS101M16		PIN JACK(4P)	AKB1101		
				PIN JACK(3P)	AKB1102		
C174	POLYESTER CAPACITOR	CQMXA104J100		PIN JACK(2P) JACK	AKB1103		
C175,176	ELECTROLYTIC CAPACIT	ACH1021			AKN1006		
C177,178	CERAMIC CAPACITOR	CKCYF473Z50					
C179	ELECTR.CAPACITOR	CEAS470M10					
C180	ELECTR.CAPACITOR	CEAS470M25					

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	CN5	CONNECTOR(4P)	KPC4		R623,624	CARBON FILM RESISTOR	RD1/4PM104J
	CN6,7	CONNECTOR(15P)	KPE15		R625,626	FUSIBLE RESISTOR	RFA1/4PS470J
					R641-644	CARBON FILM RESISTOR	RD1/4PMF151J
AMP ASSEMBLY (AWH1008)					R645-648	CARBON FILM RESISTOR	RD1/4PMF101J
Note : AMP assembly (AWH1008) is a part of MAIN assembly (AWZ3123).					R649-652	FUSIBLE RESISTOR	RFA1/4PS4R7J
SEMICONDUCTORS					R661-664	CARBON FILM RESISTOR	RD1/4PMF222J
	Q601,602	TRANSISTOR	2SA979		R665-670	CARBONFILM RESISTOR	RD1/8PM□□□□
	Q603,604	TRANSISTOR	2SC2240	SURR ASSEMBLY (AWX1031)			
	Q605,606	TRANSISTOR	2SA970	Note : SURR assembly (AWX1031) is a part of MAIN assembly (AWZ3123).			
	Q607,608	TRANSISTOR	2SA1145	SEMICONDUCTORS			
	Q609,610	TRANSISTOR	2SC2705		IC501	OP-AMP IC	NJM4558S-X
	Q611,612	TRANSISTOR	2SC3298		IC521	IC	M50199P
	Q613,614	TRANSISTOR	2SA1306		IC522	DRAM IC	LM3364K-15
	Q661,662	TRANSISTOR	2SC2240		IC523	COMPARATOR	M5233P
	D601-612	DIODE	1SS252		IC551	DOLBY-B IC	LA2730
	D661-666	DIODE	1SS252		Q501	TRANSISTOR	2SC1740S
CAPACITORS					D521-525	DIODE	1SS252
	C601,602	MYLOR FILM CAPACITOR	CQMA102J50		D551	ZENER DIODE	RD12ESB
	C603,604	ELECTR.CAPACITOR	CEAS2R2M50	COILS			
	C605,606	CERAMIC CAPACITOR	CKCYB222K50		L521	AXIAL INDUCTOR	LAU2R2M
	C607,608	ELECTROLYTIC CAPACIT	CEXA471M16		L522	INDUCTOR	LTA822J
	C609,610	MICA CAPACITOR	CMA100D500	CAPACITORS			
	C611,612	CERAMIC CAPACITOR	CCCSL020C500		C501-503	ELECTR.CAPACITOR	CEAS4R7M50
	C619-622	CERAMIC CAPACITOR	CCCSL101K500		C504,505	CERAMIC CAPACITOR	ACG1021
	C623,624	CERAMIC CAPACITOR	CKCYX473M25		C521	ELECTR.CAPACITOR	CEAS4R7M50
	C625-628	CAPACITOR (CERAMIC)	ACG-009-O		C522	MYLOR FILM CAPACITOR	CQMA562J50
	C629,630	CERAMIC CAPACITOR	CCCSL101J50		C523	PL.STYRENE CAPACITOR	CQSA561J50
	C661,662	ELECTROLYTIC CAPACIT	CEANP2R2M100		C525	ELECTR.CAPACITOR	CEANP4R7M35
RESISTORS					C526	AUDIO FILM CAPACITOR	CFTXA104J50
	R601,602	CARBON FILM RESISTOR	RD1/4PM474J		C527	ELECTR.CAPACITOR	CEAS470M10
	R603,604	CARBON FILM RESISTOR	RD1/4PM751J		C528	AUDIO FILM CAPACITOR	CFTXA103J50
	R605,606	CARBON FILM RESISTOR	RDR1/4PM513J		C529,530	AUDIO FILM CAPACITOR	CFTXA823J50
	R607,608	CARBON FILM RESISTOR	RD1/4PM472J		C532	ELECTR.CAPACITOR	CEAS470M10
	R609,610	CARBONFILM RESISTOR	RD1/4PM331J		C533	AUDIO FILM CAPACITOR	CFTXA104J50
	R611,612	CARBON FILM RESISTOR	RD1/4PM122J		C534	ELECTR.CAPACITOR	CEANP010M50
	R613-616	FUSIBLE RESISTOR	RFA1/4PS101J		C535	MYLOR FILM CAPACITOR	CQMA562J50
	R617,618	CARBON FILM RESISTOR	RDR1/4PM431J		C536	PL.STYRENE CAPACITOR	CQSA561J50
	R619,620	CARBON FILM RESISTOR	RDR1/2PM123J				
	R621,622	FUSIBLE RESISTOR	RFA1/4PS680J				

Mark	No.	Description	Parts No.
	C537	MYLOR FILM CAPACITOR	CQMA562J50
	C538	ELECTR.CAPACITOR	CEAS4R7M50
	C539	ELECTR.CAPACITOR	CEAS101M10
	C540,541	CERAMIC CAPACITOR	ACG1021
	C542	MYLOR FILM CAPACITOR	CQMA183J50
	C551	ELECTR.CAPACITOR	CEAS4R7M50
	C552	ELECTR.CAPACITOR	CEAS100M50
	C553	ELECTR.CAPACITOR	CEASR33M50
	C554	AUDIO FILM CAPACITOR	CFTXA104J50
	C555	AUDIO FILM CAPACITOR	CFTXA333J50
	C556	ELECTR.CAPACITOR	CEAS010M50
	C557	ELECTR.CAPACITOR	CEAS220M16
	C558	ELECTR.CAPACITOR	CEAS101M10
	C559	MYLOR FILM CAPACITOR	CQMA472J50
	C560	AUDIO FILM CAPACITOR	CFTXA333J50
	C561	ELECTR.CAPACITOR	CEAS220M16
	C562	CERAMIC CAPACITOR	CKMYB471K50
	C563	ELECTR.CAPACITOR	CEAS4R7M50
	C564	ELECTR.CAPACITOR	CEAS470M25

RESISTORS

All resistors RD1/8PM□□□J

OTHERS

X521	CERAMIC OSCILLATOR	ASS1016
------	--------------------	---------

SP. SW ASSEMBLY

SWITCHES

S102	PUSH SWITCH	SUL6LXXXX
------	-------------	-----------

CAPACITORS

C211,212	CERAMIC CAPACITOR	CKDYB392K50
----------	-------------------	-------------

RESISTORS

All resistors RS2LMF□□□J

OTHER

JACK	AKN1002
------	---------

EQ ASSEMBLY

SEMICONDUCTOR

IC322	OP-AMP-IC	M5220P
-------	-----------	--------

Mark	No.	Description	Parts No.
CAPACITORS			
	C329,330	ELECTR.CAPACITOR	CEAS100M50
	C331,332	CERAMIC CAPACITOR	CCDSL221J50
	C333,334	ELECTROLYTIC CAPACIT	CEAS471M6
	C335,336	AUDIO FILM CAPACITOR	CFTXA243J50
	C337,338	AUDIO FILM CAPACITOR	CFTXA823J50
	C339,340	ELECTR.CAPACITOR	CEAS2R2M50
	C341,342	CERAMIC CAPACITOR	CKCYF473Z50
	C343	CERAMIC CAPACITOR	CCMSL150J50
	C354	CERAMIC CAPACITOR	CKCYF473Z50
	C355,356	CERAMIC CAPACITOR	CKDYB681K50
	C357,358	CERAMIC CAPACITOR	CKDYB821K50

RESISTORS

VR301 VARIABLE RESISTOR ACS1038
 Free service manuals
 Other resistors iratis schen RD1/8PM□□□J

OTHER

PIN JACK(2P) AKB1099

Digitized by
www.freeservicemanuals.info

FRONT ASSEMBLY (AWZ3158)

SEMICONDUCTORS

IC301	CONTROL MCU	PDG043-A
Q301	TRANSISTOR	RN1203
Q302-308	TRANSISTOR	2SC2458
Q309	TRANSISTOR	RN1203
Q313,314	TRANSISTOR	2SC2458
D301	DIODE	S5566
D302-317	DIODE	1SS252
D325,326	DIODE	1SS252

SWITCHES

S301-303	SWITCH	ASG1029
S304	SWITCH	ASG-703
S305-338	SWITCH	ASG1029
S339	SWITCH	ASG-703
S340-351	SWITCH	ASG1029

COIL

L301	AXIAL INDUCTOR	LAU100K
------	----------------	---------

CAPACITORS

C301	ELECTROLYTIC CAPACIT	CEJA0R1M50
C302-304	ELECTR.CAPACIT	CEJA100M16
C305	ELECTROLYTIC CAPACIT	CEJA220M6

RESISTORS

All resistors RD1/8PM□□□J


Mark	No.	Description	Parts No.
OTHER			
V301	FL TUBE	AAV1081	
X301	CERAMIC OSCILLATOR	ASS1022	
	REMOTE RECEIVER UNIT	AXX1010	
REAR AMP ASSEMBLY			
SEMICONDUCTORS			
IC321	PREDRIVER-IC	UPC1270H	
Q321	TRANSISTOR	2SC2458	
Q322	TRANSISTOR	2SC2240	
D321	DIODE	1S2471	
D322,323	DIODE	1SS252	
CAPACITORS			
C321	ELECTR.CAPACITOR	CEAS2R2M50	
C322	CERAMIC CAPACITOR	CKCYB102K50	
C323	ELECTR.CAPACITOR	CEAS101M10	
C324	CERAMIC CAPACITOR	CCCSL270J50	
C325	MYLOR FILM CAPACITOR	CQMA333K50	
C326,327	CERAMIC CAPACITOR	CKDYF473Z50	
C328	ELECTR.CAPACITOR	CEANP2R2M50	
C359	CERAMIC CAPACITOR	CCDSL101J50	
RESISTORS			
R329	RESISTOR (0.22, 2W)	ACN-131	
	Other resistors	RD1/8PM□□□□	
OTHER			
	TRANSISTOR SOCKET	AKH-017	
VOL ASSEMBLY			
SEMICONDUCTORS			
IC323	OP-AMP IC	M5220L	
IC324	MECHANISM DRIVER IC	TA7291S	
CAPACITORS			
C345,346	CERAMIC CAPACITOR	CKCYB103K50	
C347,348	ELECTR.CAPACITOR	CEAS4R7M50	
C349,350	CERAMIC CAPACITOR	CKCYB331K50	
C351	ELECTR.CAPACITOR	CEAS470M16	
C352	ELECTR.CAPACITOR	CEANP2R2M50	
RESISTORS			
VR302	VARIABLE RESISTOR	ACX1033	
R353	CARBON FILM RESISTOR	RD1/4PMF2R2J	
	Other resistors	RD1/8PM□□□□	

Mark	No.	Description	Parts No.
OTHER			
CN8	CONNECTOR(3P)	KPE3	
SP A, B ASSEMBLY			
COILS			
L951-954	COIL	ATH-133	
CAPACITORS			
C951-954	CERAMIC CAPACITOR	CKDYF103Z50	
C955-958	CERAMIC CAPACITOR	CKDYB102K50	
RESISTORS			
R951-954	CARBON FILM RESISTOR	RD1/2PMF101J	
R955-958	CARBON FILM RESISTOR	RD1/4PMF100J	
OTHER			
	SPEAKER TERMINAL 8-P	AKE-111	
REAR SP ASSEMBLY			
COIL			
L961	COIL	ATH-133	
CAPACITORS			
C961	CERAMIC CAPACITOR	CKDYF103Z50	
C963	CERAMIC CAPACITOR	CKDYB102K50	
C965	CERAMIC CAPACITOR	CCDSL101J50	
RESISTORS			
	All resistors	RD1/4PMF100J	
OTHERS			
	SPEAKER TERMINAL 4-P	AKE1025	
CN3	CONNECTOR(4P)	KPC4	
PRIMARY ASSEMBLY			
RELAY			
RY301	RELAY	ASR1027	
COIL & TRANSFORMER			
L351	FILTER	ATF-151	
T301	POWER TRANSFORMER	ATT1136	
CAPACITORS			
C353	CKA (0.01/AC400V)	ACG1002	
C357	FLM CAP.(0.1/250V)	ACE-507	

6. ADJUSTMENTS

6.1 TUNER SECTION

1. Wiring Connect the wires as shown in Fig.1 (FM ANT. terminal: 75Ω).
2. Preset Set the VR451 to center position.

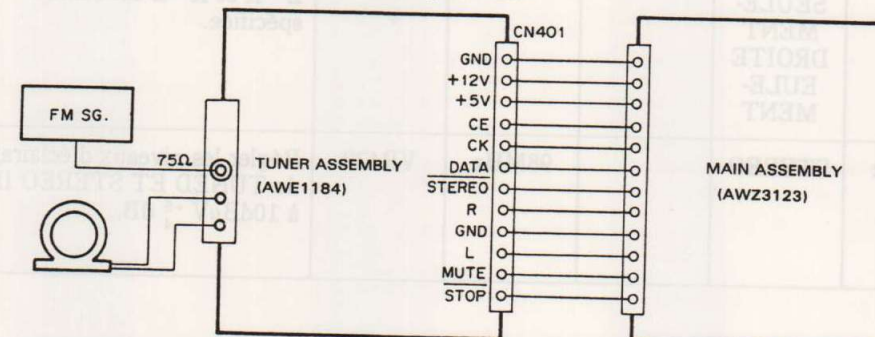

FM Section

Note: Stereo modulation: Main 1kHz L+R ± 68.25 kHz
Pilot 19 kHz ± 6.75 kHz

Pile 19 kHz ± 6.75 kHz							
Order	Item	SSG			Receiving frequency	Adjustment	
		Frequency	Modulation	Level		Adjustment location	Remarks
1	Checking front end VT	No signal			108MHz	—	Check that the voltage between terminal 41 and ground is 8.7 ± 2.0 V.
2	Checking front end VT				87.5MHz	—	Check that the voltage between terminal 41 and ground is 3.4 ± 1.5 V.
3	Increasing front end sensitivity	90MHz	1KHz ± 75 KHz dev.	30 to 40dB	90MHz	L902,L903, T901,T902 (AWB1004)	Adjustment until DC voltage between terminal 43(S—METER) and ground is at maximum.
		106MHz			106MHz	TC901, T901,L903 (AWB1004)	
		90MHz			90MHz	L902 (AWB1004)	
		Repeat step 2 and 3 until the DC voltage between terminal 43(S—METER) and GND is at maximum. Step 2 should always be the last step performed.					
4	Center adjustment	98MHz		60dB μ V	98MHz	L431	Adjust the voltage between terminals 45 and 46 to 0 ± 50 mV.
5	Checking monophonic distortion	98MHz	1kHz ± 75 kHz dev.	60dB μ V	98MHz	—	Check that the monophonic distortion is as specified.
6	Adjusting VCO		OFF	60dB μ V		VR451	Adjust the output of terminal 44 to 76.0 kHz ± 1.0 kHz.

Order	Item	SSG			Receiving frequency	Adjustment	
		Frequency	Modulation	Level		Adjustment location	Remarks
7	Adjusting stereo distortion	98MHz	L-ONLY R-ONLY	60dB μ V	98MHz	T902 (AWB1004)	Minimize the distortion within 1/4 rotation of the core, and check conformity to the specification.
8	Checking separation	98MHz	L-ONLY R-ONLY	60dB μ V	98MHz	—	Check that the separation of L→R and R→L is as specified.
9	Checking lighting levels of TUNED and STEREO IND.	98MHz	STEREO		98MHz	VR432	Adjust the lighting level of TUNED and STEREO IND. to 10dB μ V ± 6 dB.

AM Section

Order	Item	SSG			Receiving frequency	Adjustment	
		Frequency	Modulation	Level		Adjustment location	Remarks
1	Checking front end VT	No signal			1700kHz	—	Check that the voltage between terminal 41 and ground is 7.5 ± 1.0 V.
2	Checking front end VT				530kHz	—	Check that the voltage between terminal 41 and ground is 1.5 ± 0.5 V.
3	Checking front end sensitivity	999kHz	400Hz 30% MOD.	Practical sensitivity level	999kHz	—	Check that the practical sensitivity (maximum sensitivity) is as specified.
4	Adjusting lighting level of TUNED IND.	999kHz			999kHz	VR431	Adjust the lighting level of TUNED IND. to 55dB μ V/m ± 3 dB.


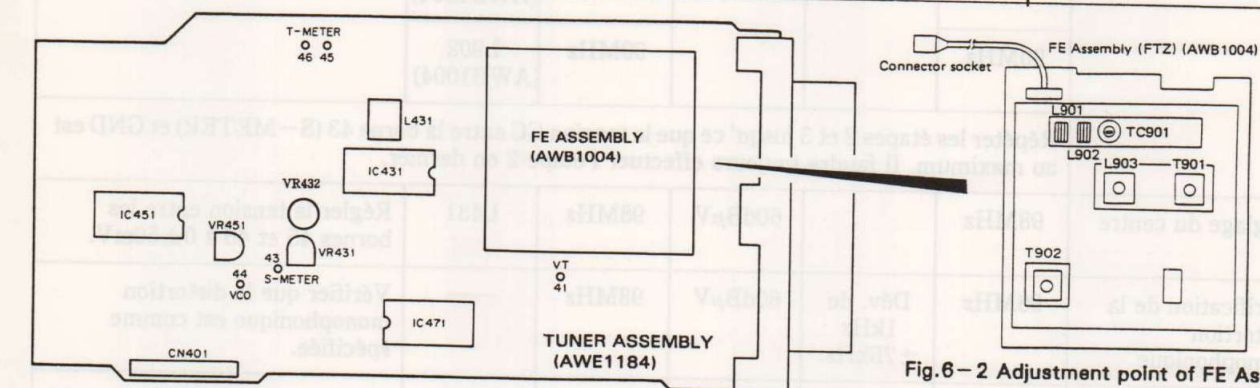


Fig. 6-1 adjustment point

Fig. 6-2 Adjustment point of FE Assembly

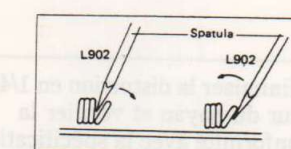

To make the output maximum by opening and closing of the first right side turn of the coil.
Fig. 6-3 Adjustment tuning coil L902


Use a spatula whose an edge is thin. The spatula is not metal (ex. Glass-Cloth Epoxy Resin).

SPATULA

6. RÉGLAGE

6.1 TUNER

1. Cablage Brancher les câbles comme indiqué dans la Fig. 1 (borne FM. ANT: 75Ω).
2. Préréglage.....Placer le VR451 dans la position.

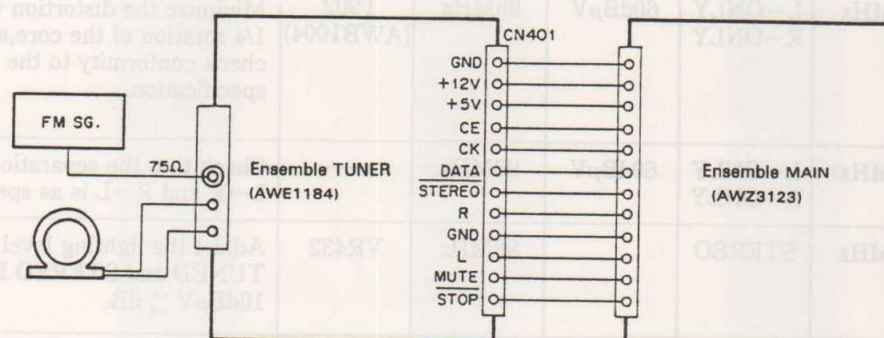

Remarque : modulation stéréo : signal principal 1kHz D+G $\pm 68,25$ kHz
Signal pilote 19 kHz $\pm 6,75$ kHz

Section FM

Ordre	Article	SSG			Fréquence reçue	Réglage	
		Fréquence	Modulation	Niveau		Empl acement du réglage	Obserrations
1	Vérification de la tension frontale	Pas de signal			108MHz	—	Vérifier que la tension entre la borne 41 et la masse est de 8,7 ±2,0V.
2	Vérification de la tension frontale				87.5MHz	—	Vérifier que la tension entre la borne 41 et la masse est de 3,4±1,5V.
3	1 Augmentation de la sensibilité frontable	90MHz	Dév. de 1kHz ±75KHz	De 30à 40dB	90MHz	L902,L903, T901,T902 (AWB1004)	Régler jusqu'à ce que la tension CC entre la borne 43 (S—METER) et la masse est au maximum.
	2	106MHz			106MHz	TC901, T901,L903 (AWB1004)	
	3	90MHz			90MHz	L902 (AWB1004)	
	4	Répéter les étapes 2 et 3 jusqu' ce que la tension CC entre la borne 43 (S—METER) et GND est au maximum. Il faudra toujours effectuer l'étape 2 en dernier.					
4	Réglage du centre	98MHz		60dBμV	98MHz	L431	Régler la tension entre les bornes 45 et 46 à 0±50mV.
5	Vérification de la distortion monophonique	98MHz	Dév. de 1kHz ±75kHz.	60dBμV	98MHz	—	Vérifier que la distortion monophonique est comme spécifiée.
6	Réglage de l'oscillateur de régulation de tension		ARRET	60dBμV		VR451	Régler la sortie de la borne 44 à 76,0kHz±1,0kHz.
7	Réglage de la distortion stéréophonique	98MHz	GAUCHE SEULE- MENT DROITE SEULE- MENT	60dBμV	98MHz	T902 (AWB1004)	Minimiser la distortion en 1/4 de tour du noyau et vérifier la conformité avec la spécification.

Ordre	Article	SSG			Fréquence reçue	Réglage	
		Fréquence	Modulation	Niveau		Emplacement du réglage	Observations
8	Vérification de la séparation	98MHz	GAUCHE SEULEMENT DROITE SEULEMENT	60dBμV	98MHz	—	Vérifier que la séparation de L→R et R→L est comme spécifiée.
9	Vérification des niveaux d'éclairage de TUNED ET STEREO IND.	98MHz	STEREO		98MHz	VR432	Régler les niveaux d'éclairage de TUNED ET STEREO IND. à 10 dBμV $_{-4}^{+6}$ dB.

AM Section

Ordre	Article	SSG			Fréquence reçue	Réglage	
		Fréquence	Modulation	Niveau		Emplacement du réglage	Observations
1	Vérification de la tension frontale	Pas de signal			1700kHz	—	Vérifier que la tension entre la borne 41 et la masse est de $7,5 \pm 1,0$ V.
2	Vérification de la tension frontale				530kHz	—	Vérifier que la tension entre la borne 41 et la masse est de $1,5 \pm 0,5$ V.
3	Vérification de la sensibilité frontale	999kHz	400Hz 30% de MOD.	Niveau de sensibilité réelle	999kHz	—	Vérifier que la sensibilité réelle (sensibilité maximum) est comme spécifiée.
4	Réglage du niveau d'éclairage de TUNED IND.	999kHz			999kHz	VR431	Régler le niveau d'éclairage de TUNED IND. à 55 dBμV/m ± 3 dB.


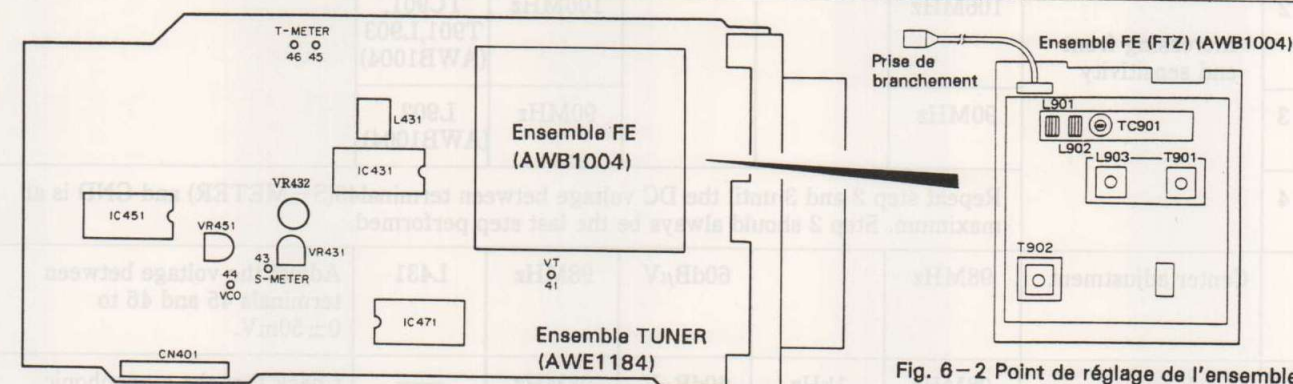



Fig. 6-1 Pointe de réglage

Fig. 6-2 Point de réglage de l'ensemble FE

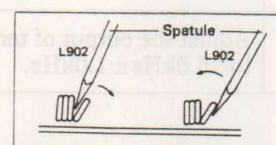

Rendre la sortie maximum en écartant et ramenant la première boucle de droite de la bobine.

Fig. 6-3 Réglage de la bobine de syntonisation L902




Utiliser une spatule dont l'extrémité est mince.
La spatule n'est pas métallique
(ex. : résines époxydes en toile verrée).

SPATULE

6. AJUSTE

6.1 SECCIÓN DEL SINTONIZADOR

1. Cableado Conecte los cables como se muestra en la Fig. 1 (Terminal FM ANT. : 75Ω).
2. Preajuste Ajuste el VR451 a la posición central.

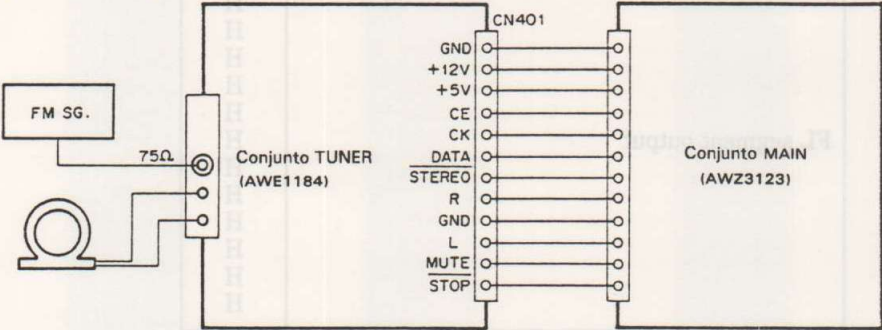

Sección de FM

Nota : Modulación estereofónica : Principal 1kHz D+I ±68,25kHz
Piloto 19 kHz ±6,75kHz

Orden	Item	SSG			Frecuencia de recepción	Ajuste	
		Frecuencia	Modulación	Nivel		Punto de ajuste	Observaciones
1	Verificación de VT de extremo delantero	Sin señal			108MHz	—	Verifique que la tensión entre el terminal 41 y la puesta a tierra sea de 8,7 ±2,0V.
2	Verificación de VT de extremo delantero				87.5MHz	—	Verifique que la tensión entre el terminal 41 y la puesta a tierra sea de 3,4±1,5V.
3	Aumentando la sensibilidad del extremo delantero	90MHz	1KHz ±75KHz de desv.	30 a 40dB	90MHz	L902,L903, T901,T902 (AWB1004)	Ajuste hasta que la tensión de CC entre el terminal 43 (S-METER) y la puesta a tierra se encuentre al máximo.
		106MHz			106MHz	TC901, T901,L903 (AWB1004)	
		90MHz			90MHz	L902 (AWB1004)	
		Repita los pasos 2 y 3 hasta que la tensión de CC entre el terminal 43 (S-METER) y GND se encuentre al máximo. El paso 2 debe ser siempre el último paso realizado.					
4	Ajuste central	98MHz		60dBμV	98MHz	L431	Ajuste la tensión entre los terminales 45 y 48 a 0±50mV.
5	Verificación de distorsión monofónica	98MHz	1kHz ±75kHz de desv.	60dBμV	98MHz	—	Verifique que la distorsión monofónica sea la especificada.
6	Ajuste de VCC		DESACTIV	60dBμV		VR451	Ajuste la salida del terminal 44 a 76,0kHz±1,0kHz.
7	Ajuste de distorsión estereofónica	98MHz	I-Solamente D-Solamente	60dBμV	98MHz	T902 (AWB1004)	Miminice la distorsión dentro de 1/4 de distorsión del núcleo, y verifique conforme a la especificación.

Orden	Item	SSG			Frecuencia de recepción	Ajuste	
		Frecuencia	Modulación	Nivel		Punto de ajuste	Observaciones
8	Verificación de separación	98MHz	I-Solamente D-Solamente	60dBμV	98MHz	—	Verifique que la separación de I→D y D→I sea de acuerdo a la especificación.
9	Verificación de niveles de iluminación de TUNED y STEREO IND.	98MHz	ESTEREO		98MHz	VR432	Ajuste el nivel de iluminación de TUNED y STEREO IND. a 10dBμV ⁺⁶ ₋₄ dB.

Sección de AM

Orden	Item	SSG			Frecuencia de recepción	Ajuste	
		Frecuencia	Modulación	Nivel		Punto de ajuste	Observaciones
1	Verificación de VT de extremo delantero	Sin señal			1700kHz	—	Verifique que la tensión entre el terminal 41 y la puesta a tierra sea de 7,5 ±1,0V.
2	Verificación de VT de extremo delantero				530kHz	—	Verifique que la tensión entre el terminal 41 y la puesta a tierra sea de 1,5±0,5V.
3	Verificación de sensibilidad de extremo delantero	999kHz	400Hz 30% de MOD.	Nivel de sensibilidad práctica	999kHz	—	Verifique que la sensibilidad práctica (sensibilidad máxima) sea la especificada.
4	Verificación de niveles de iluminación de TUNED IND.	999kHz			999kHz	VR431	Ajuste el nivel de iluminación de TUNED IND. a 55dBμV/m ±3dB.


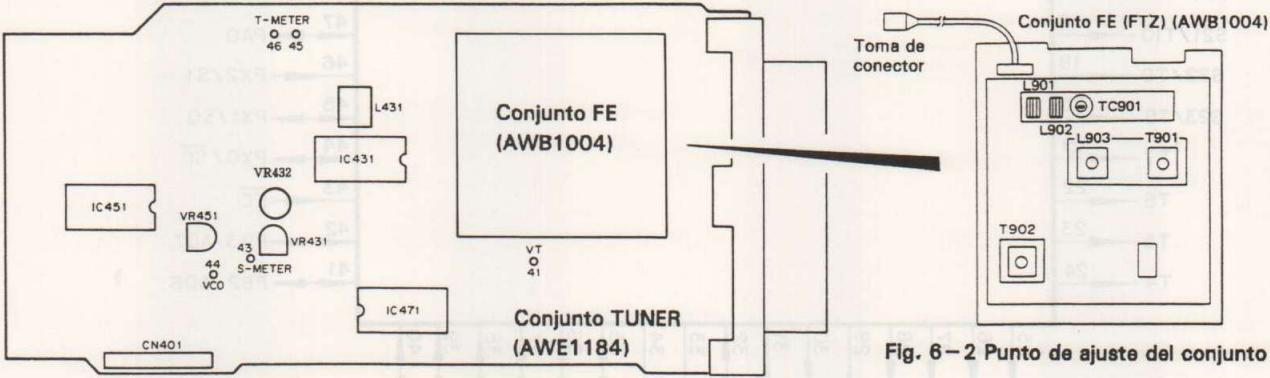


Fig. 6-1 Puntos de ajuste

Fig. 6-2 Punto de ajuste del conjunto FE

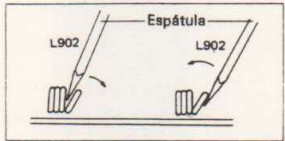

Para producir la máxima salida abriendo y cerrando de la primera espira del lado derecho de la bobina.

Utilice la espátula cuyo borde sea delgado.
La espátula no es metálica
(ej. resina epóxica para vidrio - paño).

ESPÁTULA

Fig. 6-3 Ajuste de la bobina de sintonización L902

<PDG043-A> SYSTEM CONTROL MICROCOMPUTER


PDG043-A

Pin No.	Terminal name	I/O	Function	Active
1	S4/PG0	O	FL segment output	H
2	S5/PG1	O		H
3	S6/PG2	O		H
4	S7/PG3	O		H
5	S8/PK0	O		H
6	S9/PK1	O		H
7	S10/PK2	O		H
8	S11/PK3	O		H
9	S12/PJ0	O		H
10	S13/PJ1	O		H
11	S14/PJ2	O		H
12	S15/PJ3	O		H
13	S16/T15	O	FL timing output	H
14	S17/T14	O		H
15	S18/T13	O		H
16	S19/T12	O		H
17	S20/T11	O		H
18	S21/T10	O		H
19	S22/T9	O		H
20	S23/T8	O		H
21	T7	O		H
22	T6	O		H
23	T5	O		H
24	T4	O		H
25	T3	O		H
26	T2	O		H
27	T1	O		H
28	T0	O		H
29	INT	I	Version change	
30	TX	O	Unused(OPEN)	
31	TEX	I	Unused, Connected to GND or VDD	
32	RST	I/O	Reset input	L
33	NC		Unused	
34	VDD		+5V	
35	PI0/AD0	I/O	Level meter input (FRONT L)	
36	PI1/AD1	I/O	Level meter input (FRONT R)	
37	PI2/AD2	I/O	Level meter input (REAR L)	
38	PI3/AD3	I/O	Level meter input (REAR R or CENTER)	
39	PB0/AD4	I/O	Unused	
40	PB1/AD5	I/O	Surround mode control 1	H
41	PB2/AD6	I/O	Surround mode control 2	
42	PB3/AD7	I/O	Surround mode control 3	

Pin No.	Terminal name	I/O	Function	Active
43	$\overline{\text{EC}}$	I	Unused(GND)	
44	PX0/ $\overline{\text{SC}}$	I/O	J/EX or serial clock output	L
45	PX1/SO	I/O	ch STEP 9k,50k/10k,100k or serial data output	
46	PX2/SI	I	Stereo	
47	PA0	I/O	Tuner mute	H
48	PA1	I/O	Stop (TUNED)	L
49	PA2	I/O	Key scan (INPUT)	H
50	PA3	I/O	Version change	
51	PF0	I/O	TC4028 Control signal	
52	PF1	I/O	TC4028 Control signal	
53	PF2	I/O	Surround mode control 4	
54	PF3	I/O	TC4028 Control signal	
55	PE0	I/O	Key scan input	H
56	PE1	I/O		H
57	PE2	I/O		H
58	PE3	I/O		H
59	PY0	O	TV Antenna ON/OFF	H
60	PY1/PWM	O	VIDEO ENHANCER ON/OFF	H
61	PY2/WP	I	WP Input. Input to AC50Hz or AC60Hz	H
62	PY3/RMC	I	Remote control signal input	L
63	PD0	I/O	VIDEO MUTE	H
64	PD1	I/O	VIDEO Control	
65	PD2	I/O		
66	PD3	I/O		
67	PC0	I/O	VOLUME IND.	H
68	PC1	I/O	VOLUME CONTROL DOWN	L
69	PC2	I/O	VOLUME CONTROL UP	L
70	PC3	I/O	AC (POWER) RY ON/OFF	H
71	Vss		Connected to GND	
72	XTAL	O	MAIN CLOCK output.Connected to 4.19MHZ ceramic resonator	
73	NC		Unused	
74	EXTAL	I	MAIN CLOCK input. Connected to 4.19MHZ ceramic resonator	
75	VREF		Reference voltage input. Connected to VDD	
76	VFDP		Power terminal for FL	
77	S0/PH0	O	Segment output for FL	H
78	S1/PH1	O		H
79	S2/PH2	O		H
80	S3/PH3	O		H

FLUORESCENT INDICATOR TUBE (AAV1081)

Outer dimension

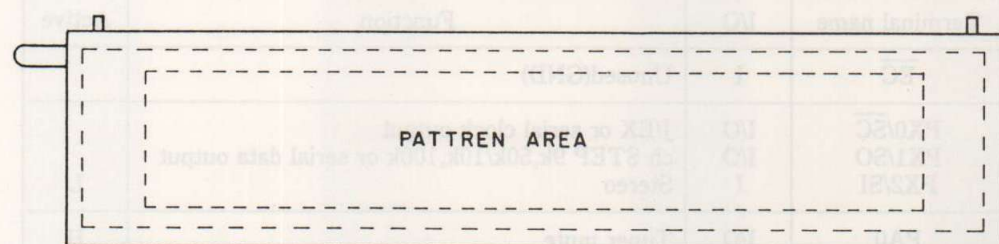

8.3 SCHEMATIC DIAGRAM

1. RESISTORS:

Indicated in Ω , $\frac{1}{2}W$, $\frac{1}{4}W$, $\pm 5\%$ tolerance unless otherwise noted k: k Ω , M: M Ω , (F): $\pm 1\%$, (G): $\pm 2\%$, (K): $\pm 10\%$ (M): $\pm 20\%$ tolerance

2. CAPACITORS:

Indicated in capacity (μF)/voltage (V) unless otherwise noted p: pF
Indication without voltage is 50V except electrolytic capacitor.

3. OTHERS:

➡ Signal route.

⊗ Adjusting point.

The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

* marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

The underline indicates the switch position

S01 : AUDIO/VIDEO/AUX
S02 : SR RECALL/USE/LEARN
S05 : DECK I/DECK II
S04 : RESET

TAPE/VCR

S-1 : VCR POWER
S-2 : TAPE/VCR
S-3 : TAPE/VCR
S-4 : VCR CH-
S-5 : VCR CH+
S-6 :
S-7 : ANT/TV/VCR
S-8 :
S-9 :
S-10 :
CD/VDP

S-11 : DISC SEL/DISPLAY CALL
S-12 :
S-13 : CHP/FR-TM
S-14 : /SEARCH
S-15 : PROG
S-16 :
S-17 :
S-18 :
S-19 :
TUNER/CD/TV/VDP

S-20 : 1/13
S-21 : 2/14
S-22 : 3/15
S-23 : 4/16
S-24 : 5/17
S-25 : 6/18
S-26 : 7/19
S-27 : 8/20
S-28 : 9/21
S-29 : 0, 10/22
S-30 : 11/MEMORY/23
S-31 : 12/CLEAR/24
TUNER/CD/PHONO/AMP/TV
S-32 : BAND/DUAL

TUNER/CD/TV/VDP

S-36 : 1-12/13-24/CH-RETURN
S-37 : FREQUENCY-/TV CHANNEL-
S-38 : FREQUENCY+/TV CHANNEL+
S-39 : TV POWER
S-40 : CD+10/TV FUNC CYCLIC
S-41 : PHONO/TV VOL-
S-42 : PHONO/TV VOL+
S-43 : AMP DISPLAY/TV DISPLAY
S-44 : VCR 1
S-45 : VCR 2
S-46 : VCR 3
S-47 : VDP
S-48 : TV
S-49 : VIDEO


S-51 : TAPE 1/DAT
S-52 : TAPE 2
S-53 : LINE
S-54 : CD
S-55 : TUNER
S-56 : PHONO

S-58 : SLEEP
S-59 : RECEIVER POWER
S-60 : MUTING
S-61 : FRONT BAL.R
S-62 : FRONT BAL.L
S-63 : MASTER VOLUME-
S-64 : MASTER VOLUME+
S-65 : REAR LEVEL-
S-66 : REAR LEVEL+
S-67 : SURROUND MODE
S-68 : SURROUND DELAY TIME
S-69 : REAR BAL.R
S-70 : REAR BAL.L

S-73 : CENTER LEVEL-
S-74 : CENTER LEVEL+
S-75 : SOUND FIELD
S-76 : ACOUSTIC
S-77 : SP-A
S-78 : SP-B

S-80 : RETURN



IC01 PD5146A
IC02 AZC1045
IC03 AZC1046
IC04 AZC1047
IC05 AZC1048
Q01, Q02 AZC1050
Q03, Q04 AZC1051
Q05 AZC1052
D03-D06 AZC1049
D01, D02, D7-D15 AZC1233
PHD01 AZC1055
LED01, LED02 AZC1053
LED01, LED02 AZC1054

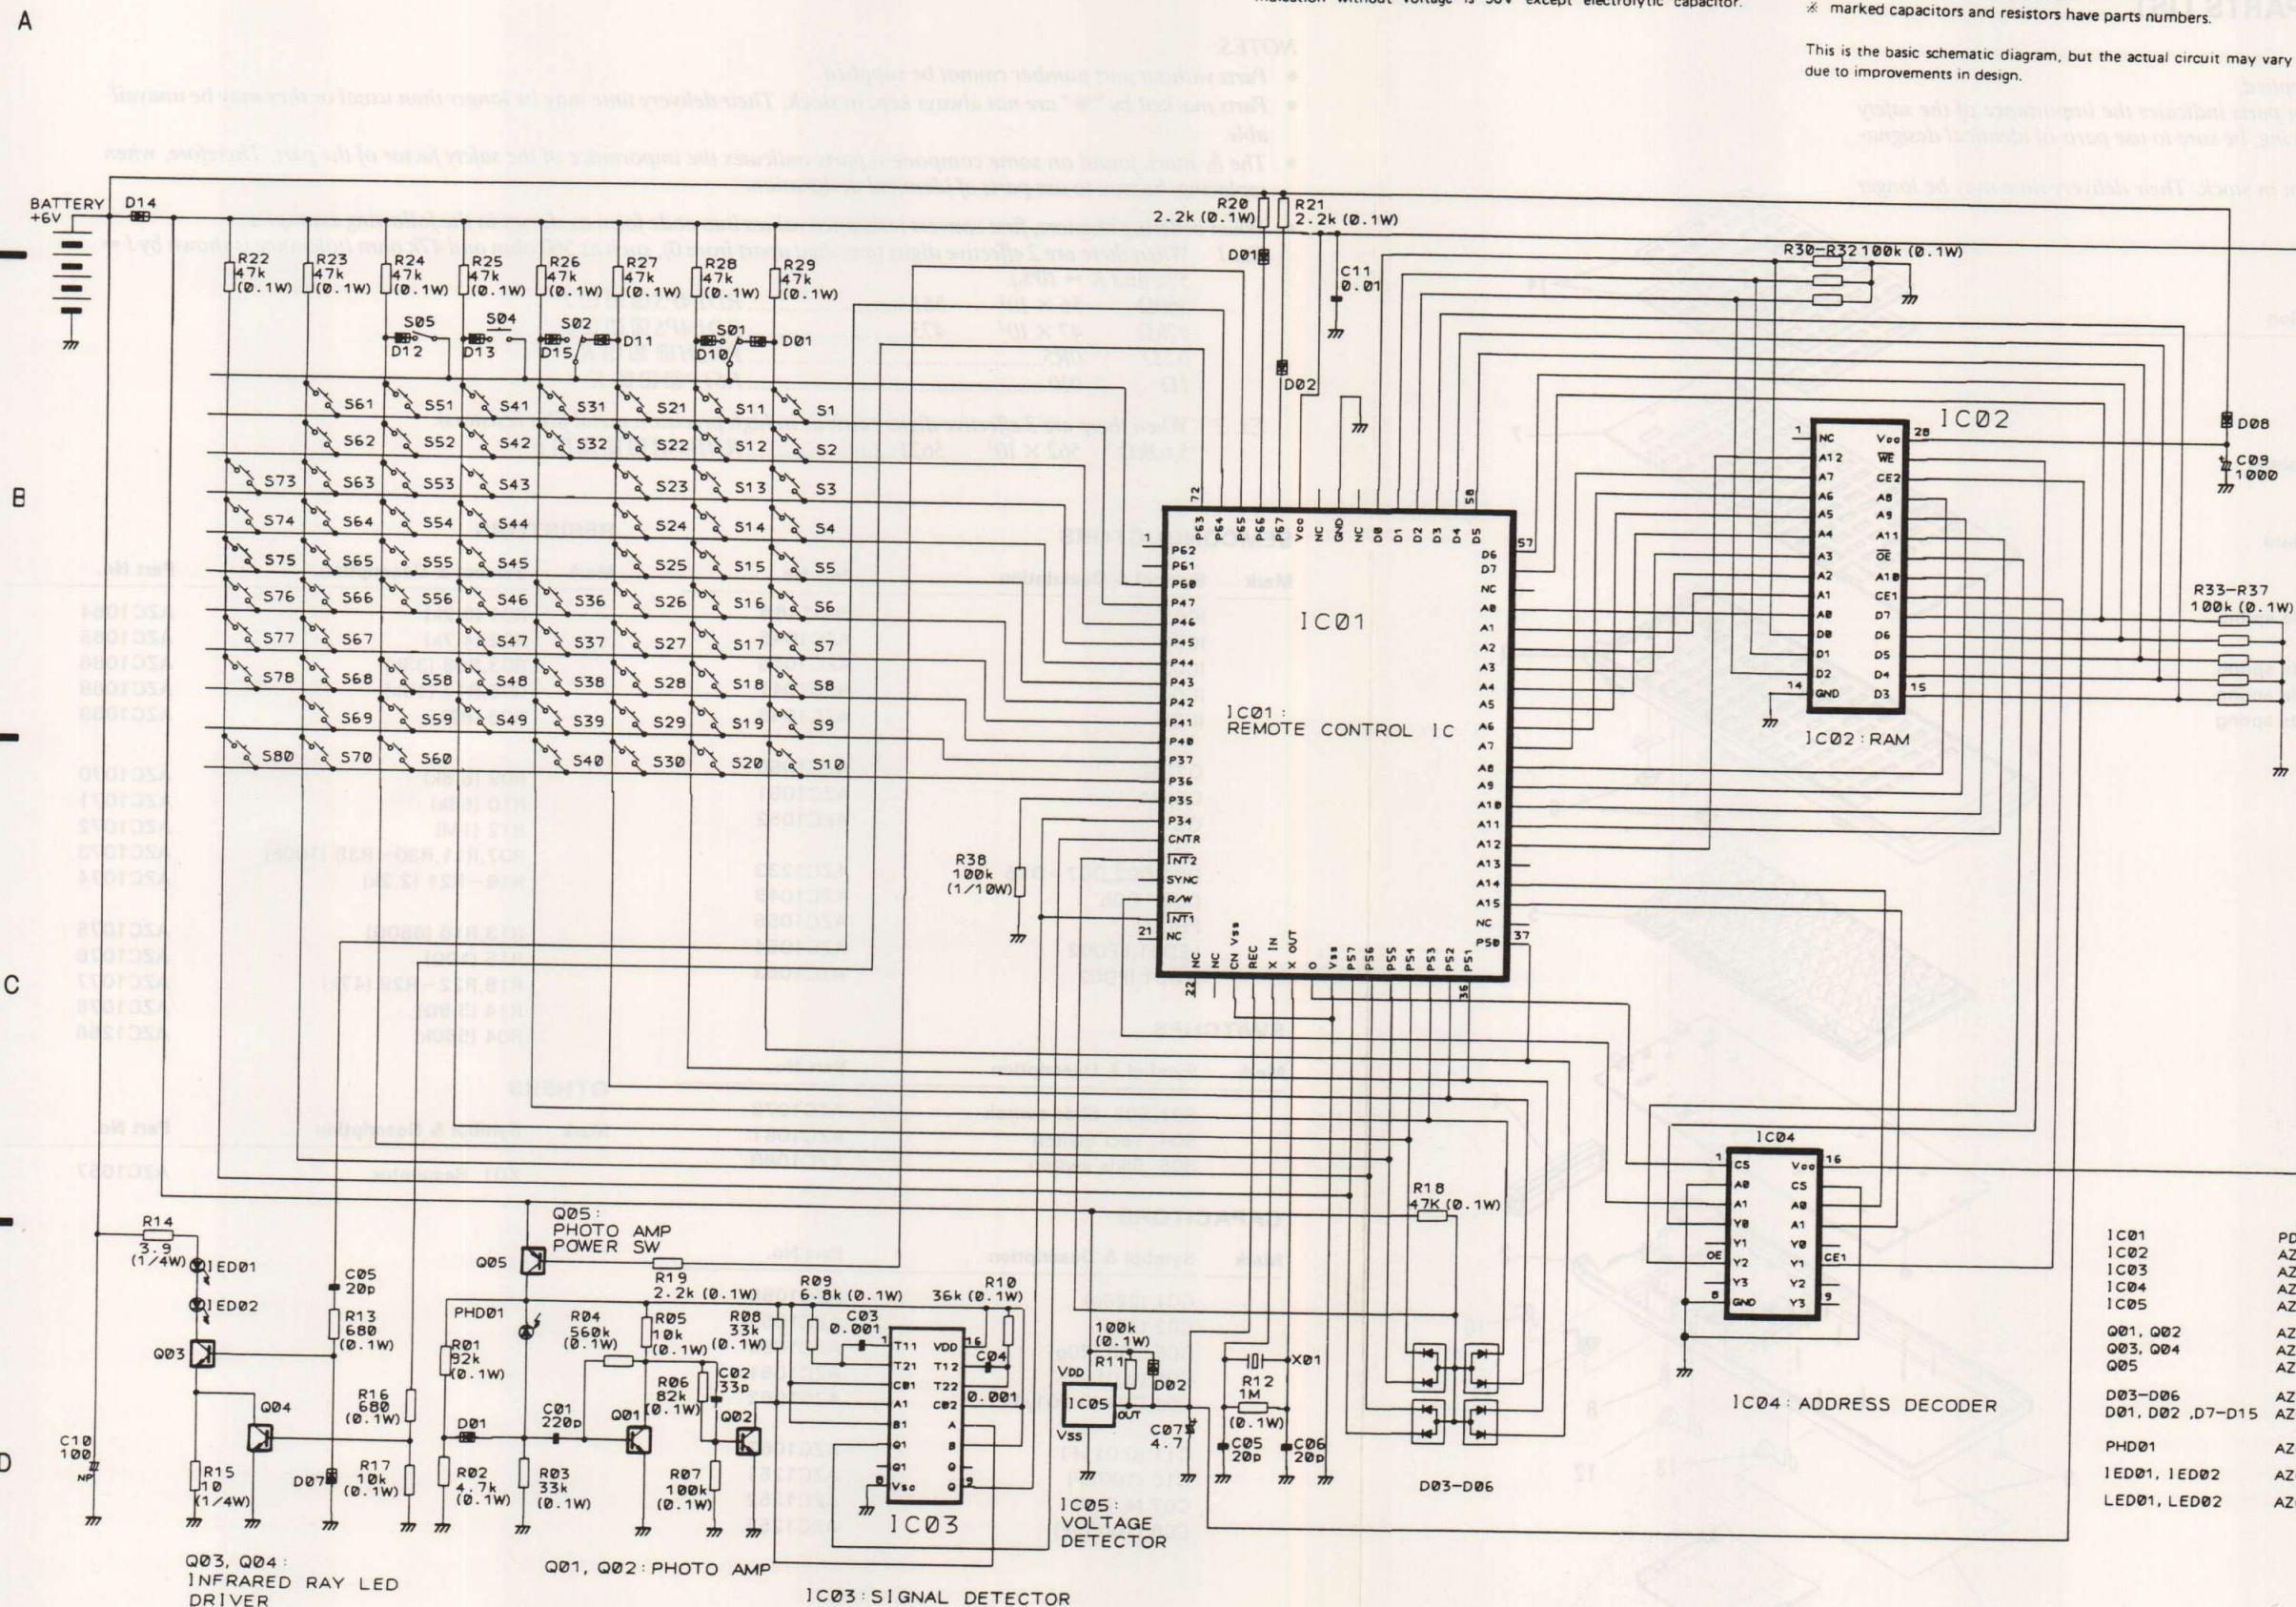

8.4 P.C.BOARD PATTERNS

NOTE :


- : Indicates a chip resistor.
- : Indicates a chip capacitor.
- K— : Indicates a chip transistor.
- K— : Indicates a chip diode.

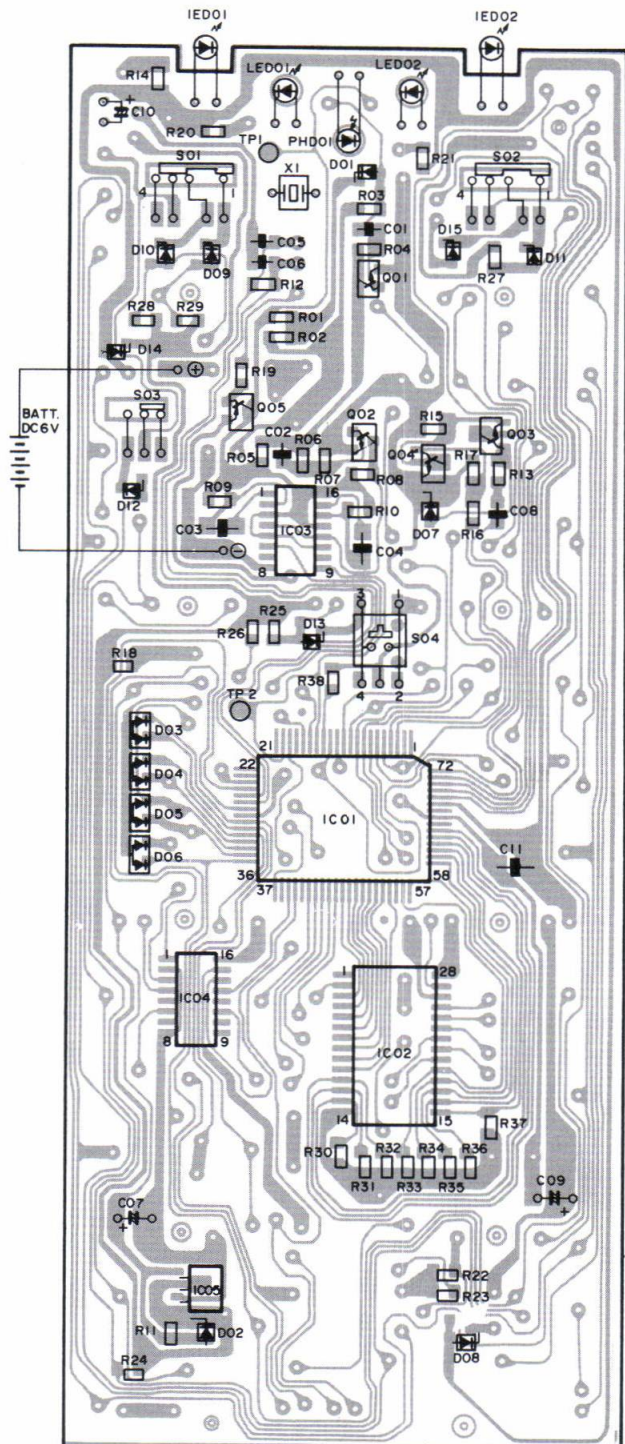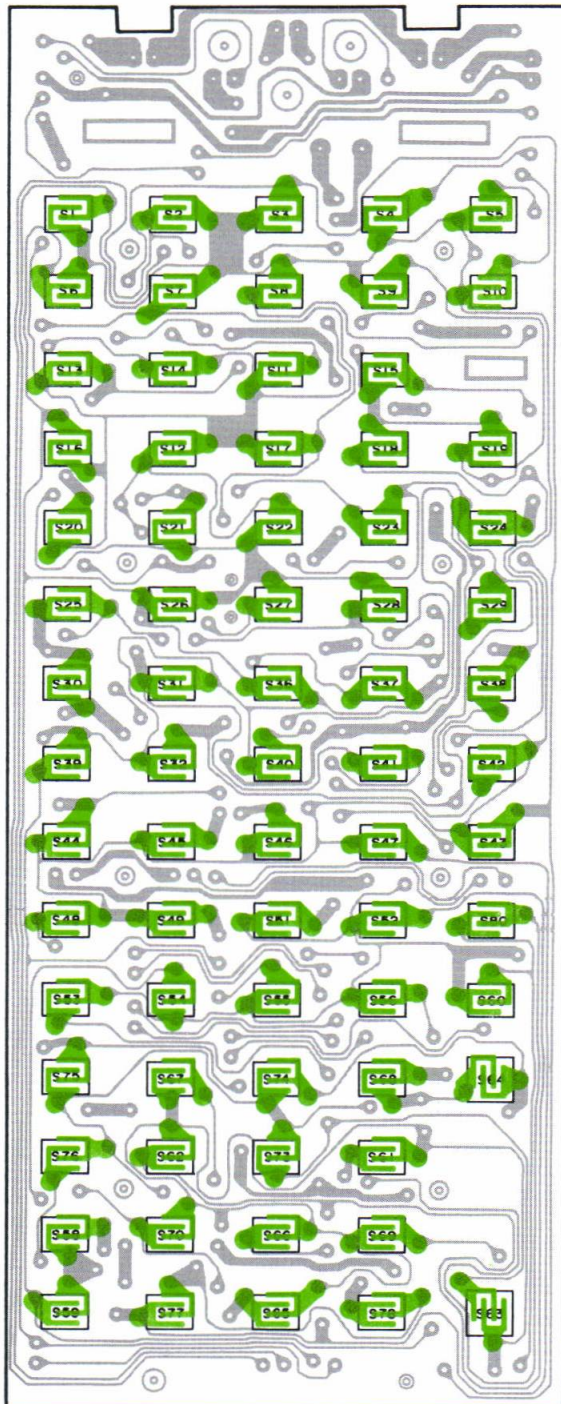


9. PANEL FACILITIES

FRONT PANEL FACILITIES

Illustration shows VSX-4700S

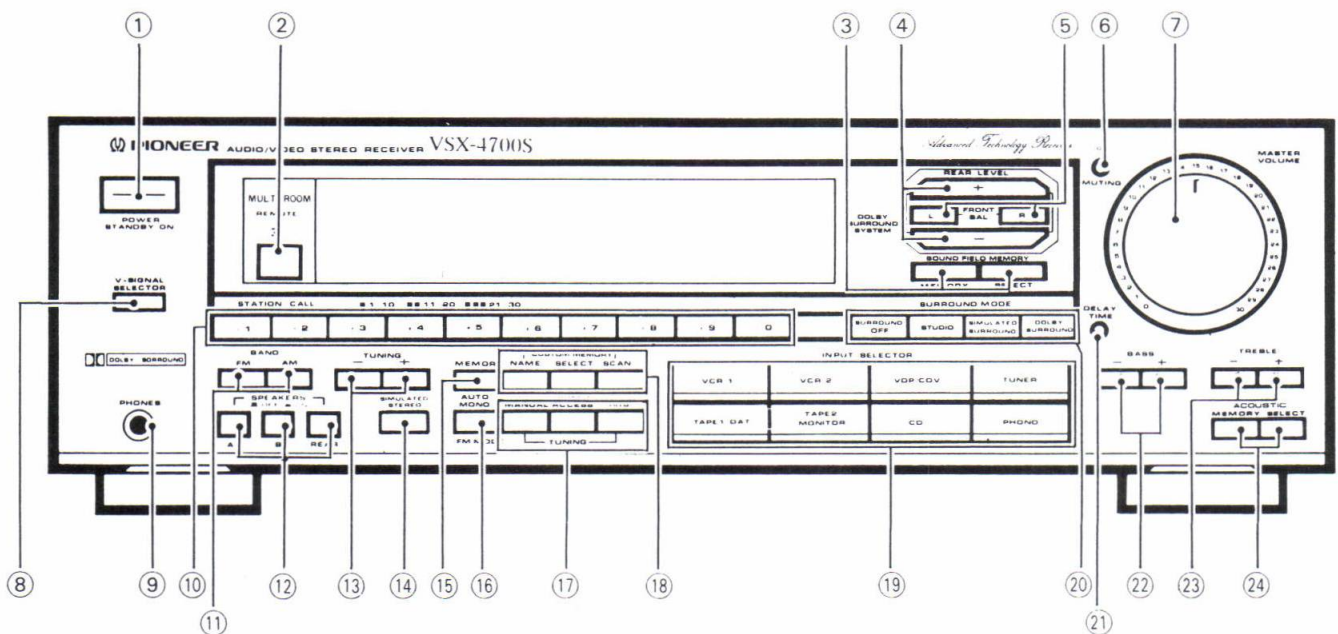

DISPLAY SECTION

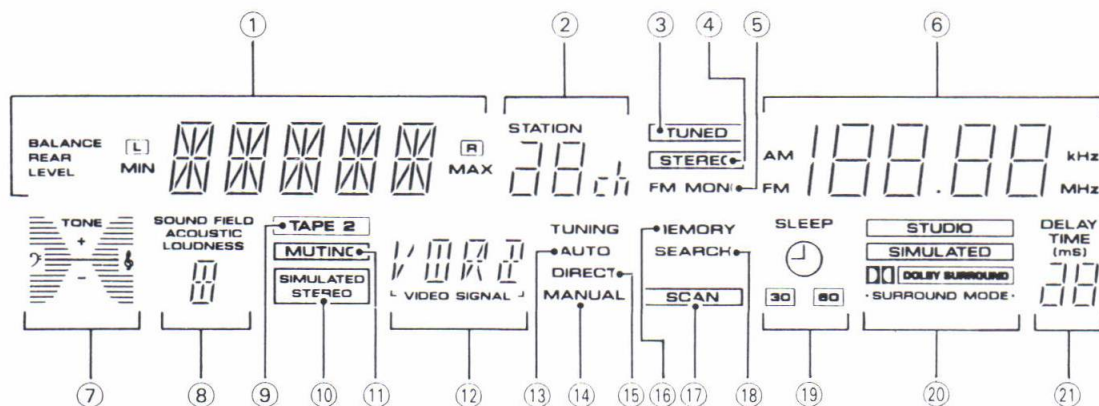

① POWER STANDBY/ON switch

- When this switch is pressed, power is supplied to the unit. Press the switch again to turn power to standby.

[Timer ON/OFF possible]

When the unit is switched ON, ON/OFF control can be performed by means of the optional timer.

NOTE:


When the power is initially turned ON, muting will be applied to prevent sound from being output for about 5 seconds.

② Remote sensor**③ SOUND FIELD MEMORY switches****MEMORY:**

Pressing this switch will result in the memorization of the sound field condition. Press again to cancel this mode.

SELECT:

- This switch is used to preset the five sound field memories (A—E).
- This switch is also used to recall previously set sound field settings. Each time you press the switch, the sound field setting advances in the order shown below.



P: The sound field setting previously memorized by the unit.

④ REAR LEVEL (–, +) switches

Operate only when the surround mode is on.

These switches are used to preset the sound level difference between the front and surround speakers. In this way, after presetting the difference, the overall volume of the front and surround speakers can be changed using the MASTER VOLUME control, while still maintaining the sound volume differential.

– : Surround speaker volume is reduced.

+ : Surround speaker volume is increased.

Press – and + together to restore front and surround to the default volume balance setting.

⑤ FRONT BAL switches

Use them to adjust the sound volume balance between left and right speakers.

L: Press to decrease the sound on the right side.

R: Press to decrease the sound on the left side.

Press L and R together to bring the volume balance back to center.

NOTE:

The left-right sound volume balance cannot be adjusted on the rear speakers.

⑥ MUTING switch

Press to temporarily cut off the sound volume. The display section MUTING indicator will flash. When pressed again, the sound will return to its previous level.

⑦ MASTER VOLUME control

Use it to simultaneously adjust the sound volume from the front and rear speakers.

⑧ V-SIGNAL (VIDEO SIGNAL) SELECTOR switch

When recording simulcast programs, the recorded image can be selected from among VCR 1, VCR 2 and VDP.



The current setting is shown by an indicator on the display section.

⑨ PHONES jack

Connect the plug on your headphones to this jack. Set all SPEAKERS A, B and REAR switches to OFF if you want to cut the sound from speakers and listen to it only through the headphones.

⑩ STATION CALL switches

Up to 30 FM or AM stations can be preset at random.

These switches are used to preset and recall desired broadcasting stations, FM AUTO/MONO mode.

NOTE:

Pressing a BAND selector switch or STATION CALL switch will select TUNER as the source, regardless of what other listening source or function was selected.

⑪ BAND selector switches

FM: Press for FM reception.

AM: Press for AM reception.

⑫ SPEAKERS switches (A, B, REAR) OFF ON

ON/OFF switches for the A, B and REAR (surround) speaker systems.

⑬ TUNING switches

+ : Performs tuning from the currently displayed station frequency in ascending frequency order.

– : Performs tuning in order of descending frequencies.

⑭ SIMULATED STEREO switch

Press to produce a simulated stereo effect when listening to monaural sources (for example, normal AM or TV broadcasts).

“SIMULATED STEREO” appears on the display section.

NOTE:

- This effect is not produced through the rear speakers.
- Use with the SURROUND MODE in the OFF or SIMULATED SURROUND position (There is no effect in the STUDIO or DOLBY SURROUND positions). With a monaural source, it is more effective if used together with SIMULATED SURROUND.

⑮ MEMORY switch

When the unit is in the frequency display mode, pressing this switch will result in the memorization of the current broadcast band, reception frequency, and FM AUTO/MONO mode.

This switch is also used to input custom memory names (see page 23).

⑯ FM MODE AUTO/MONO selector switch

Use to select the auto stereo mode or monaural mode when listening to FM broadcasts. The monaural mode has been selected when the FM MONO indicator in the display section is lit.

Auto stereo mode:

Normally, leave in this mode for reception. When a stereo FM broadcast is received, it will be automatically reproduced in stereo.

Monaural mode:

When receiving distant stations or stations with weak broadcast signals, the input signal may be weak, thus resulting in increased noise during FM stereo broadcasts. In this event, setting the receiver to the monaural mode will reduce the noise. In this case, however, FM stereo broadcasts will be reproduced in monaural sound.

NOTE:

This switch has no effect on reception of AM broadcasts.

17 TUNING switches

AUTO/MANUAL TUNING selector switch:

This switch is used to select the tuning mode. The TUNING AUTO indicator lights when the AUTO tuning mode has been selected. The MANUAL TUNING indicator lights when the MANUAL tuning mode has been selected.

AUTO tuning

When the $-$ or $+$ TUNING switch is pressed, the receiver automatically scans the broadcast station frequencies. When a broadcast is detected, the scanning stops at that frequency.

NOTE:

Pressing the TUNING switch ($-$ or $+$) while scanning is taking place causes scanning to stop.

MANUAL tuning

This lets you manually tune to particular broadcast frequencies. Each press of the $+$ or $-$ switch raises or lowers the frequency by one tuning step. For continuous scanning, keep the switch pressed, then release it to stop scanning.

DIRECT ACCESS TUNING switch:


When this switch is pressed, the STATION CALL switches function as ten-key number switches for direct input of the desired reception frequency. Press again to cancel this mode.

If the input station falls outside of the receiver's tuning range, the display section will display a message: "UPPER" if the frequency is too high and "LOWER" if it is too low.

HITS (Hyper Intelligent Tuning System) switch:

- If the HITS switch is pressed during input of numbers for DIRECT ACCESS tuning, the receiver sets the remaining digits which have not yet been input to "0," searches for the corresponding frequencies, and stops on the first station it finds.
- If the HITS switch is pressed at the currently displayed station frequency, the receiver searches up and down the frequency band for the next station (the SEARCH indicator in the display section lights at this time) and stops at the first one it finds.

(FM)

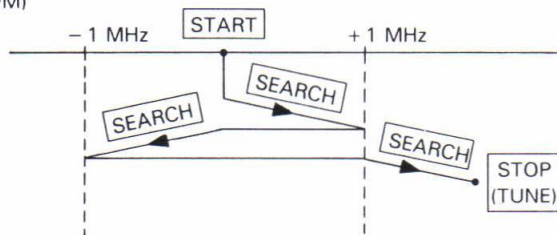

NOTE:

- The system searches for stations within successive 1 MHz ranges for FM and 100 kHz ranges for AM. During DIRECT ACCESS tuning, it searches up and down for a station until it reaches the edges of the band. If no receivable station is found within the band range, the receiver returns to the state it was in before the HITS switch was pressed.
- If the upper (or lower) frequency limit of the receiver is encountered during HITS operation, the receiver stops searching in that direction but continues to search in the other.

18 CUSTOM MEMORY switches

Stations can be assigned to STATION CALL switches according to the genre of material broadcast (for example, ROCK, JAZZ, etc.). You can recall a particular genre, and scan all the stations of that genre with Memory Scan until you reach the desired one.

The initial settings are ROCK, POP, JAZZ, NEWS, and PARTY.

NAME switch

Change the name of a genre with this switch.

SELECT switch

Recall a genre name with this switch.

SCAN switch

Use this switch to carry out Memory Scan within a genre recalled with the SELECT switch.

If it is pressed when "TUNER" is displayed, Memory Scan of successive STATION CALL NUMBERS will occur, not of genre.

19 Audio/Video INPUT SELECTOR switches

VCR 1: Press when performing playback on a VCR unit.

VCR 2: Press when performing playback on a second VCR unit.

VDP/CDV: Press when performing playback on a video disc player (VDP) or CDV player.

TUNER: Press when listening to radio broadcasts.

TAPE 1/DAT: Press when performing playback on a DAT or cassette deck.

TAPE 2 MONITOR: Press when performing playback on a second cassette deck or second DAT and when monitoring recording.

CD: Press when playing compact discs on a CD player.

PHONO: Press when playing records on turntable.

20 SURROUND MODE selector switches

OFF:

To cancel the surround function.

STUDIO:

Select this setting to enjoy the effect of listening to music in a recording studio.

SIMULATED SURROUND:

Select this setting when listening to music or a monaural source, etc. With a monaural source, a much better surround effect is achieved if it is used together with SIMULATED STEREO.

DOLBY SURROUND:

Select this setting when watching video tapes or video discs bearing the  DOLBY SURROUND mark.

21 DELAY TIME switch

Operates when the SIMULATED or DOLBY SURROUND mode is ON. Switches to surround delay time in three steps. For DOLBY SURROUND, 20 ms is standard.



22 BASS control switches

Use to adjust the low-frequency level. Press the $+$ switch to increase the low-frequency level, and the $-$ switch to decrease it.

The TONE indicator appears on the display section.

When both switches ($+$, $-$) of the BASS control are pressed simultaneously, the bass response will be set to the flat (normal) condition.

23 TREBLE control switches

Use to adjust the high-frequency level. Press the $+$ switch to increase the high-frequency level, and the $-$ switch to decrease it.

The TONE indicator appears on the display section.


When both switches ($+$, $-$) of the TREBLE control are pressed simultaneously, the treble response will be set to the flat (normal) condition.

②④ ACOUSTIC switches**MEMORY:**

Pressing this switch will result in the memorization of the sound quality (tone control condition). Press again to cancel this mode.

SELECT:

- This switch is used to preset the five acoustic memories (A – E).
- This switch is also used to recall previously set sound quality settings. Each time you press the switch, the sound quality setting advances in the order shown below.



FLAT: For flat (normal) frequency response.

LOUDNESS: Emphasizes the low- and high- frequency ranges. Produces a fuller sense of sound, particularly when listening at low volume.

A – E: Memorized acoustic memory settings.

[DISPLAY SECTION]**① CHARACTER/LEVEL/BALANCE display**

This displays the name of the component selected with the INPUT SELECTOR. It also displays the level and balance settings during adjustment.

② STATION No. display

Shows the channel selected with the STATION CALL switch.

③ TUNED indicator

Lights up when a station is tuned in during TUNER operation.

④ STEREO indicator

Lights up when a stereo FM broadcast is being received.

⑤ FM MONO indicator

Lights up when the FM MONO mode is selected with the FM MODE switch.

⑥ Frequency display**⑦ TONE level indicator**

Shows the settings of the BASS and TREBLE switches.

⑧ SOUND FIELD/ACOUSTIC display

Shows the setting of the SOUND FIELD and ACOUSTIC LOUDNESS.

⑨ TAPE 2 indicator

Lights up when the INPUT SELECTOR is set to TAPE 2 MONITOR ON.

⑩ SIMULATED STEREO indicator**⑪ MUTING indicator**

Flashes when MUTING is ON.

⑫ VIDEO SIGNAL SELECTOR indicator

Shows the video component selected with the V-SIGNAL SELECTOR switch.

⑬ AUTO TUNING indicator

Lights up when in the auto tuning mode.

⑭ MANUAL TUNING indicator

Lights up when in the manual tuning mode.

⑮ DIRECT TUNING indicator

Lights up when in the direct access-tuning mode.

⑯ MEMORY indicator**⑰ SCAN indicator**

Lights up during memory scan operation.


⑱ SEARCH indicator**⑲ SLEEP timer indicators**

Shows the SLEEP timer setting (the length of time from the set time to the point at which power will switch off). (The sleep timer can be operated via the remote control.)

⑳ SURROUND MODE indicators**㉑ DELAY TIME display**

Shows the delay time during surround operation.

REAR PANEL FACILITIES

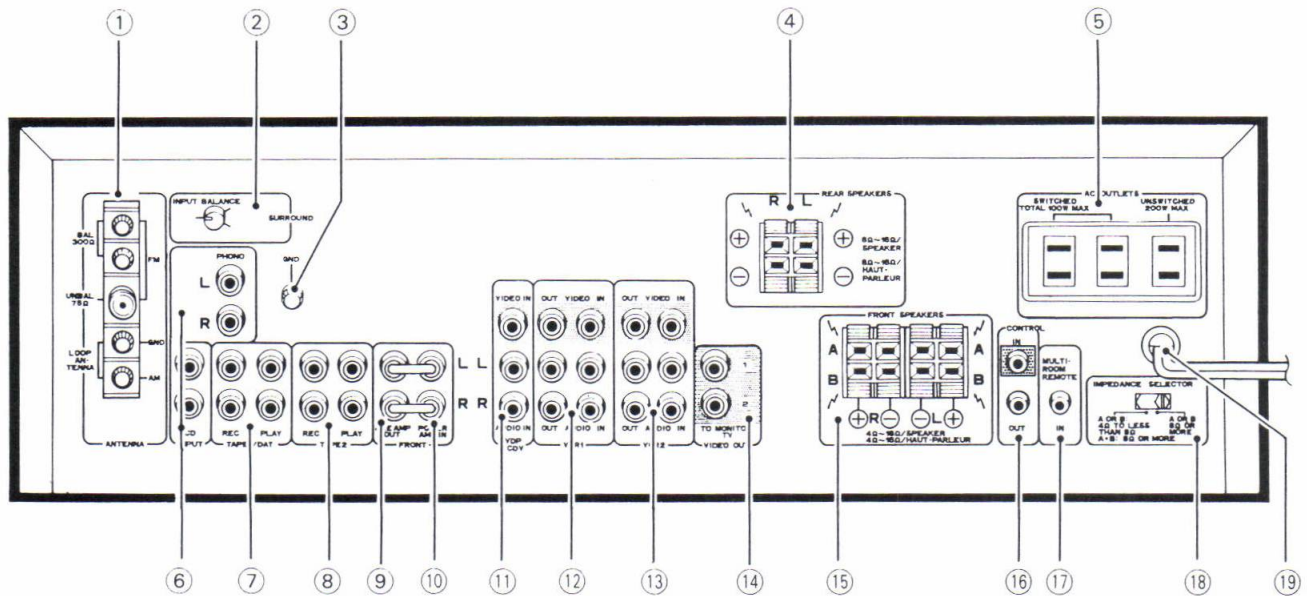

① FM/AM ANTENNA terminals

Use these antenna terminals for reception of normal FM and AM broadcasts.

② SURROUND INPUT BALANCE control

This knob is for adjusting the balance of the DOLBY SURROUND input signal. To adjust, apply a monaural sound signal and rotate until the SURROUND (rear) sound becomes minimal.

③ GND terminal

Connect the turntable ground lead to this terminal.

④ REAR SPEAKERS terminals

Connect the surround speakers to these terminals.

NOTE:

Do not allow any of the cord's conductors to protrude from the terminals or touch any other conductors. Malfunctioning or breakdowns may occur when conductors come into contact with each other. Use surround speakers of impedance 8Ω — 16Ω.

⑤ AC OUTLETS**[SWITCHED TOTAL 100 W MAX]**

Power supplied through these outlets is turned on and off by the receiver's POWER switch. Total electrical power consumption of connected equipment should not exceed 100 W.

[UNSWITCHED 200 W MAX]

Power flows continually to this outlet, regardless of whether the receiver is switched ON or OFF. Electrical power consumption of the connected equipment should not exceed 200 W.

The equipment should be disconnected by removing the power plug from the wall socket when not in regular use, e.g. when on vacation.

NOTE:

Do not connect appliances with high power consumption such as heaters, irons, or television sets to the AC OUTLETS in order to avoid overheating or fire hazard.

This can cause the receiver to malfunction.

⑥ INPUT jacks

PHONO Connect to the output cables from a turntable.

CD Connect to the output jacks of a compact disc player.

⑦ TAPE 1/DAT jacks

Use these to connect the first cassette deck or first DAT (digital audio tape) deck.

Connecting for Recording

The tape recording jack (REC) on the cassette deck or DAT should be connected to the REC side of the TAPE 1/DAT jack on the receiver with a pin plug connecting cord.

Connecting for Playback

Connect the PLAY jack on the cassette deck or DAT to the PLAY side of the TAPE 1/DAT jack on the receiver with a pin plug connecting cord.

⑧ TAPE 2 jacks

Connect the second cassette deck to these jacks.

Connecting for Recording

The tape recording jack (REC) on the cassette deck should be connected to the REC side of the TAPE 2 jack on the receiver with a pin plug connecting cord.

Connecting for Playback

Connect the TAPE PLAY jack on the cassette deck to the PLAY side of the TAPE 2 jack on the receiver with a pin plug connecting cord.

⑨ FRONT PRE-AMP OUT jacks

When a separate power amplifier is used to drive the front speakers, connect the power amplifier to these jacks.

⑩ FRONT POWER AMP IN jacks

When a separate pre-amplifier is connected and this unit is used as power amplifier, connect the pre-amplifier to these jacks.

⑪ VDP/CDV jacks**[VIDEO IN]**

When watching the video image from a LD player (VDP) or a CDV player, connect its VIDEO OUTPUT jacks here.

[AUDIO IN (L,R)]

When playing back the audio channel from a LD player (VDP) or a CDV player, connect its AUDIO OUTPUT jacks here.

⑫ VCR 1 jacks**[VIDEO OUT]**

When copying program material from the video component connected to the VCR 2 or VDP/CDV jacks, connect to the VIDEO INPUT jacks of the VCR used for recording.

[AUDIO OUT (L, R)]

When copying program material from the video component connected to the VCR 2 or VDP/CDV jacks, or when recording music from an audio component source, connect to the AUDIO INPUT jacks of the VCR used for recording.

[VIDEO IN]

When monitoring the video image from a VCR used for playing, connect its VIDEO OUTPUT jacks here.

[AUDIO IN (L, R)]

When monitoring the audio channel from a VCR used for playing, connect its AUDIO OUTPUT jacks here.

⑬ VCR 2 jacks**[VIDEO OUT]**

When copying program material from the video component connected to the VCR 1 or VDP/CDV jacks, connect to the VIDEO INPUT jacks of the VCR used for recording.

[AUDIO OUT (L, R)]

When copying program materials from the video component connected to the VCR 1 or VDP/CDV jacks, or when recording music from an audio component source, connect to the AUDIO INPUT jacks of the VCR used for recording.

[VIDEO IN]

When monitoring the video image from a VCR used for copying, connect its VIDEO OUTPUT jacks here.

[AUDIO IN (L, R)]

When monitoring the audio channel from a VCR used for copying, connect its AUDIO OUTPUT jacks here.

14 VIDEO OUT TO MONITOR TV jacks


Connect to monitor TV or to TV sets with video input terminals for watching program materials from a VCR or VDP/CDV connected to this unit.

15 SPEAKERS (FRONT) terminals

A: Connect to the first set of speakers.

B: Connect to the second set of speakers.

Speaker lead wire preparation and connection.

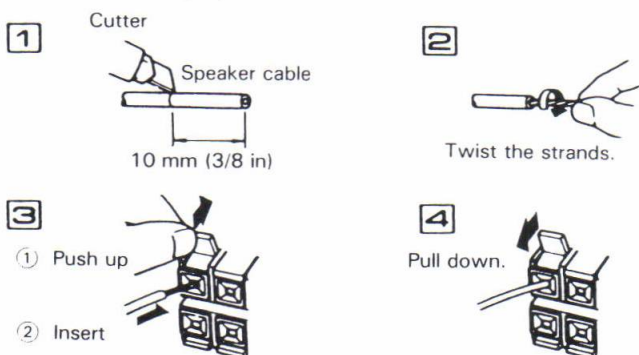

NOTE:

Do not allow any of the cord's conductors to protrude from the terminals or touch any other conductors. Malfunctions or breakdowns may occur when conductors come into contact with each other.

Use speakers of impedance 4 Ω–16 Ω. Also set the **IMPEDANCE SELECTOR** switch to match the impedance of your speakers.


16 REMOTE CONTROL IN/OUT jacks

IN: Connect this jack to other Pioneer components (main unit or remote control unit) when using those components to control this unit.

OUT: Connect this jack to other Pioneer components when using the remote control of this unit to control the other components.

NOTE:

The receiver's remote sensor does not function when a plug is inserted in IN jack. To operate, point the remote control unit at the remote sensor on the component to which the receiver's IN jack is connected.

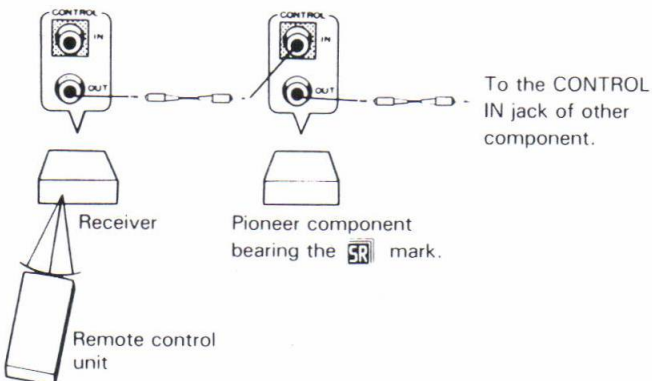


17 MULTI-ROOM REMOTE IN jack

Connect the adaptor (MR-100, sold separately) to this Multi-Remote IN jack. You can operate the unit by remote control through the adaptor. It is convenient when the unit is located in a separate room.

18 IMPEDANCE SELECTOR switch

Set this switch to match the impedance of your speakers.

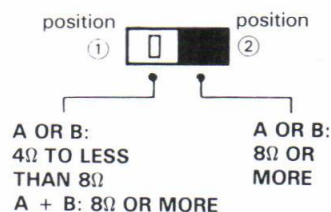

- When using a pair of speakers:

Impedance of a speaker	Selector position
4Ω to less than 8Ω	①
8Ω or more	②

- When using two pairs of speakers:

Select ① as the selector switch position and use speakers having impedance of 8 ohms or more.

NOTE:

Turn off the receiver's power before changing the impedance selector switch setting.

19 Power cord

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.