Ref. No.3546-2

ONKYO® SERVICE MANUAL

Personal Theater System
FM STEREO/AM TUNER AV AMPLFIER
PTS-303/307/505/507/707
(RY-303/307/505/507/707)

PTS-303/505/707 (RY-303/505/707)	UDN	120V,60Hz U.S.A model
PTS-303/505/707 (RY-307/507/707)	UM	220V/230V-240V,50Hz Asian model

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

SERVICE PROCEDURES 2
SPECIFICATIONS 2
ADJUSTMENT PROCEDURE 3

EXPLODED VIEW 14
EXPLODED VIEW PARTS LIST 15
MICROPROCESSOR CONNECTION DIAGRAM 16
TERMINAL DESCRIPTION 17
IC BLOCK DIAGRAMS 18
PRINTED CIRCUIT BOARD PARTS LIST 22

SCHEMATIC DIAGRAMS 31

ONKYO®
AUDIO COMPONENTS

SERVICE PROCEDURES

1.Safety-check out

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Connect the insulating-resistance tester between the plug of power supply cord and chassis.
Specifications : More than 10 Mohm at 500V.

2. Replacing the fuses

For continued protection against fire hazard, replace only with same type and same rating fuse.

Circuit No.	Part No.	Description
F551	4-0035-1	T2.5A/250V <D> model RY-707
	4-0039-1	T5A/250V <M> model RY-707
	4-0040-1	T4A/250V <D> model RY-303/505
F552	4-0041-1	T4A/250V <D> model RY-307/507
	4-0042-1	T2.5A/250V <D> model RY-303/505/707
	4-0043-1	T2.5A/250V <M> model RY-307/707

NOTE: <D> 120V model only
<M> Asian model only

3. Voltage Selector (Rear Panel)

Asian model are equipped with a voltage selector to conform to local power supplied.
Be sure to set this switch to match the voltage of the power supply in your area before plugging in the unit. Models without a voltage selector can only be used in area where the power supply is the same as that of the unit.

VOLTAGE SELECTOR

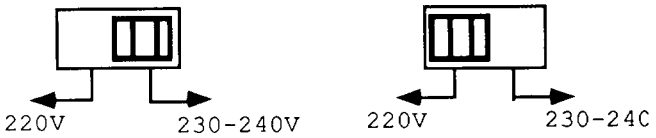

at AC 230-240V at AC 220V

Setting the voltage selector

1. Determine the proper for voltage for your area : 230-240V or 220V.
2. If the preset voltage is not proper for your area, insert a screwdriver into the groove in the switch. Slide the switch all the way to the right (230-240V) or to the left (220V), which-ever is proper.

SPECIFICATIONS

Amplifier Section

Power Output:

Front: 70W x 2 at 8 ohm from 40 Hz to 15 kHz with no more than 0.9% THD (model: RY-707)
50W x 2 at 8 ohm from 40 Hz to 15 kHz with no more than 0.9% THD (models: RY-303, 307, 505, 507)

Center: 30W (3.0% THD, 1 kHz, 8 ohm) (model: RY-707)
20W (3.0% THD, 1 kHz, 8 ohm) (models: RY-505, 507)

Surround: 15W x 2 (3.0% THD, 1 kHz, 16 ohm) (model: RY-707)
10W x 2 (3.0% THD, 1 kHz, 16 ohm) (models: RY-505, 507)

S/N: 89 dB (IHF-A)

FM Section

Tuning Range: 87.9 - 107.9 MHz (U.S.A. and Canadian models)
87.5 - 108.0 MHz (Asian models)
(Asian models: 50 kHz step U.S.A. and Canadian models: 200 kHz step)

AM Section

Tuning Range: 520 - 1710 kHz, 10 kHz step (U.S.A. and Canadian models)
522 - 1620 kHz, 9 kHz step (Asian models)

General

Power Requirement: 120V AC, 60 Hz (U.S.A. and Canadian models)
220/230 - 240V AC, 50/60 Hz (Asian models)

Dimensions: Tuner/Amplifier unit
(W x H x D) 270 x185 x 322 mm
(10-5/8 x 7-5/16 x 12-11/16 in.)

ADJUSTMENT PROCEDURES

Equipment required:
1. AM signal generator
2. FM signal generator
3. VTVM
4. DC voltmeter
5. FM/AM IF sweep generator
6. Oscilloscope

Notes:
1. Signal input must be as low as possible to avoid overload and clipping. (Use highest sensitivity of output indicator.)
2. Volume control at maximum.
3. Standard modulation is 400Hz at 30% amplitude for AM, 1000Hz at 22.5kHz deviation for FM (Mono).
4. Connect 8 ohm load acros speaker terminal.

AM IF Adjustment

Signal Source	Signal Generator Frequency	Output	Frequency Setting	Adjustment	Remarks
AM IF sweep generator connected to AM antenna.	Sweep centered 450kHz	Oscilloscope connected to pin 18 of IC1.	1000 kHz	IFT 2	Adjust for maximum & symmetrical curve.
	520kHz (522kHz)	DC voltmeter to TP VCO	520kHz (522kHz)	L32	DC voltmeter 0.8V±0.05V
AM signal generator connected to AM antenna.	610kHz (612 kHz)	VTVM connected to speaker terminal	610kHz (612kHz)	L31	Adjust for maximum output
	1400kHz (1404kHz)		1400kHz (1404kHz)	TC1	
	Repeat adjustments as necessary to minimise tracking error.				

FM IF Adjustment

Signal Source	Signal Generator Frequency	Output	Frequency Setting	Adjustment	Remarks
FM IF sweep generator connected to FM antenna.	Sweep centered 10.7MHz	Oscilloscope connected to pin 18 of IC1.	98MHz	IFT 1 on the front end	Adjust for maximum & symmetrical curve.

FM RF Adjustment

Signal Source	Signal Generator Frequency	Output	Frequency Setting	Adjustment	Remarks
FM signal generator connected to FM antenna.	87.5MHz 60dB	DC voltmeter to TP VCO	87.9MHz (87.5MHz)	L10	DC meter to indicate 2.2V±0.05V
	98MHz	VTVM connected to speaker terminal.	98MHz	L3, L17, L19 on the front end	Adjust for maximum output

1. Preparations

1) Place the unit on the workbench. (There should be about 15 mm of space between the base plate of the unit and the work surface.)
2) Set up the unit as follows.
   (1) No load
   (2) No signal
   (3) Volume turned all the way down
   (4) Speaker switch OFF
   (5) Power switch OFF

   Note) Check the following points before making adjustments
   (1) The power switch should be OFF.
   (2) The interior of the unit should not be warm.

2. Idling current adjustment

1) Turn the power switch ON and allow the unit to warm up for about 10 minutes.
   (1) Adjust VR370(VR470) so that the voltage at test point R383 (R483) on the power amp transistor pc circuit board is 13mV±2mV.
   NOTE) Semi-fixed resistors enclosed in parentheses ( ) are for the right channel.

EXPLODED VIEW

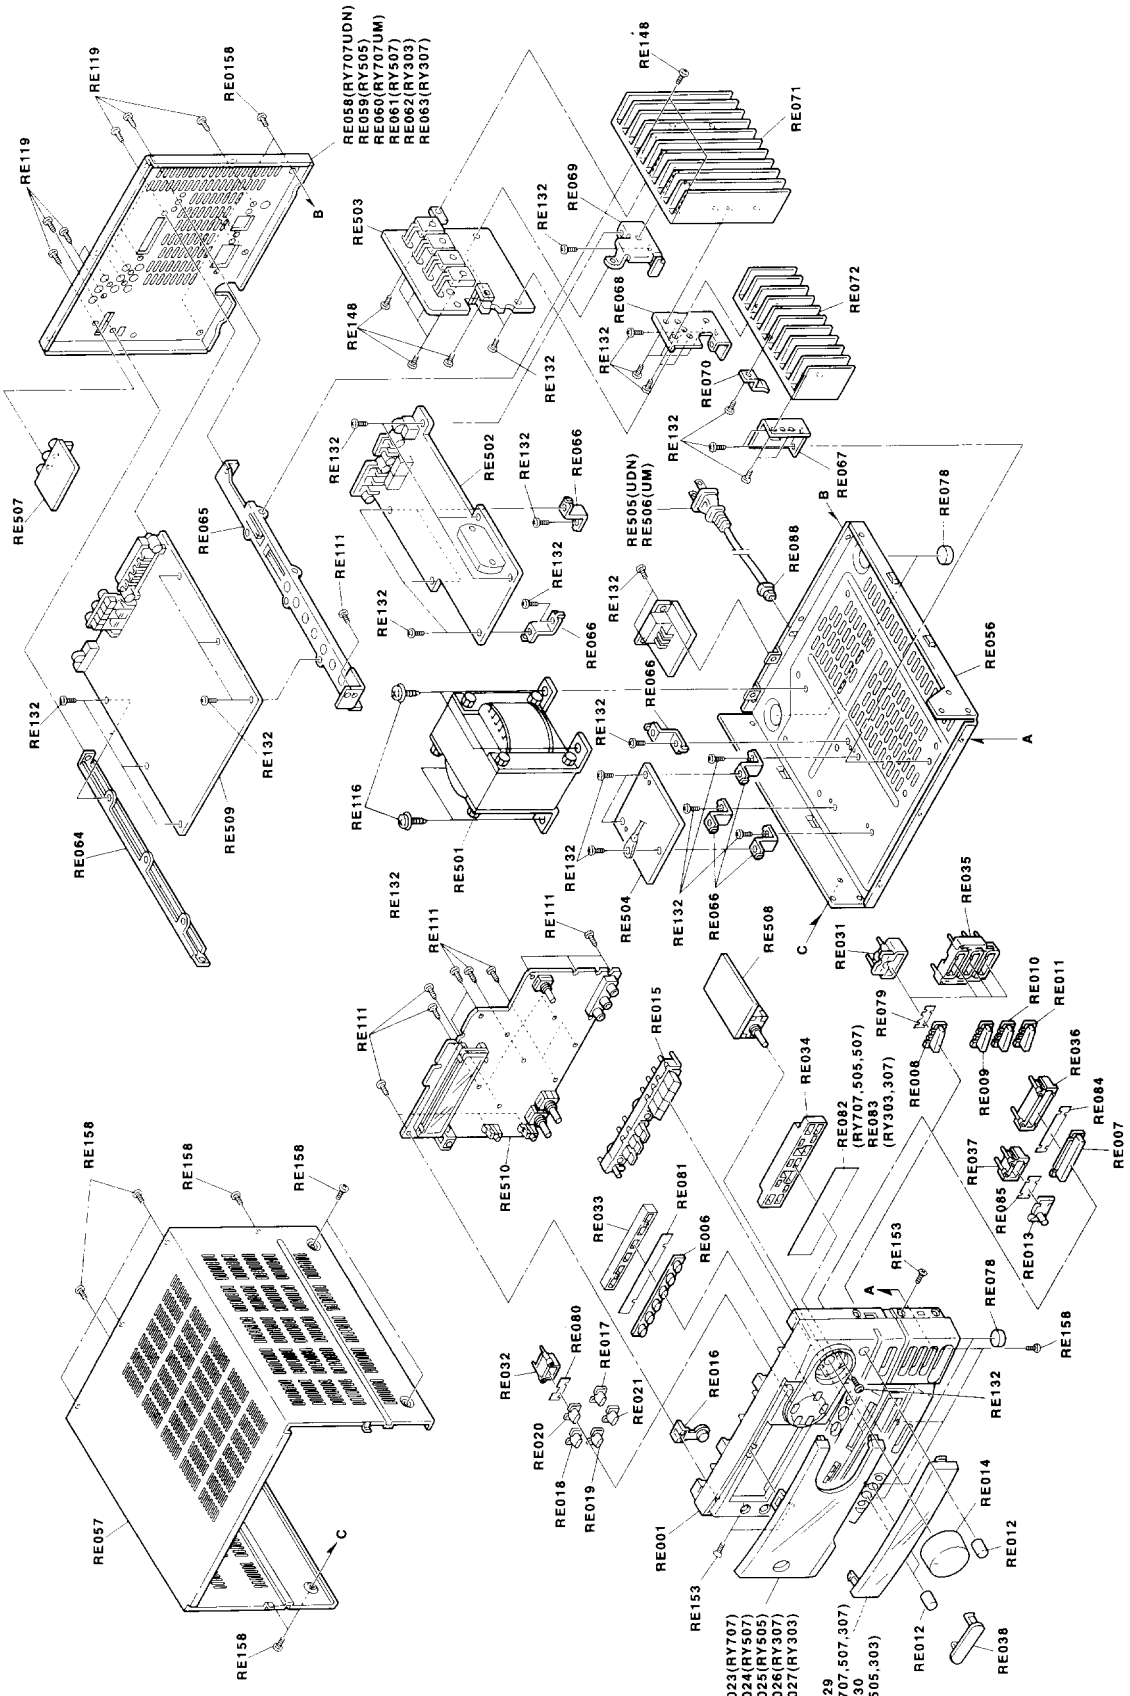

EXPLODED VIEW PARTS LIST

EXPLODED VIEW PARTS LIST (AMP/TUNER BLOCK)

Ref. No.	Part No.	Description
RE001	10-3437010101	FRONT PANEL (B) (RY-707 <D><M>)
RE001	10-3437020201	FRONT PANEL (C) (RY-505 <D>)
RE001	10-3437030201	FRONT PANEL (C) (RY-507 <M>)
RE001	10-3437040301	FRONT PANEL (D) (RY-303 <D>)
RE001	10-3437050301	FRONT PANEL (D) (RY-307 <M>)
RE006	10-3444010101	LIGHT GUIDE (C)
RE007	10-3447010101	DTX BUTTON
RE006	10-3446030101	FUNCTION BUTTON
RE006	10-3446040101	FUNCTION BUTTON
RE006	10-3446050101	FUNCTION BUTTON
RE006	10-3446060101	FUNCTION BUTTON
RE012	10-3441010101	ROTARY KNOB
RE013	10-3465010101	VOCAL FADER BUTTON (RY-307/507/707 <M>)(RY-707<D>)
RE014	10-3440010101	VOLUME KNOB
RE015	10-3445010101	TUNER BUTTON
RE016	10-3442010101	POWER BUTTON
RE017	10-3443010101	SOUND BUTTON
RE018	10-3443020101	SOUND BUTTON (RY-505,707 <D>)(RY-507/707 <M>)
RE019	10-3443030101	SOUND BUTTON (RY-505,707 <D>)(RY-507/707 <M>)
RE020	10-3443040101	SOUND BUTTON
RE021	10-3443050101	SOUND BUTTON (RY-707 <D><M>)
RE022	10-3443060101	SOUND BUTTON (RY-303 <D>)(RY-307<M>)
RE023	10-3438010101	DISPLAY WINDOW (A) (RY-707 <D><M>)
RE024	10-3438020101	DISPLAY WINDOW (A) (RY-507 <M>)
RE025	10-3438030101	DISPLAY WINDOW (A) (RY-505 <D>)
RE026	10-3438040101	DISPLAY WINDOW (A) (RY-307 <M>)
RE027	10-3438050101	DISPLAY WINDOW (A) (RY-303 <D>)
RE029	10-3439010101	DISPLAY WINDOW (B) (RY-307/507/707 <M>)(RY-707 <D>)
RE030	10-3439020101	DISPLAY WINDOW (B) (RY303/505 <D>)
RE031	10-3492010101	LED BOX (C)
RE032	10-3450010101	LED BOX (D)
RE033	10-3451010101	LED BOX (E)
RE034	10-3452010101	LED BOX (F)
RE035	10-3453010101	LED BOX (G)
RE036	10-3454010101	LED BOX (H)
RE037	10-3455010101	LED BOX (I) (RY-307/507/707 <M>) (RY-707 <D>)
RE038	10-3581010101	MASK PLATE (RY-303/505 <D>)
RE056	20-1113010101	BOTTOM COVER (B)
RE057	20-1112010101	TOP COVER (B)
RE058	20-1144010101	REAR COVER (B) (RY-707 <D>)
RE058	20-1144020101	REAR COVER (B) (RY-505 <D>)
RE058	20-1114010101	REAR COVER (C) (RY-707 <M>)
RE058	20-1114020101	REAR COVER (C) (RY-507 <M>)
RE058	20-1145010101	REAR COVER (D) (RY-303 <D>)
RE058	20-1146010101	REAR COVER (E) (RY-307 <M>)
RE064	20-1115010101	PCB BRACKET(A)
RE065	20-1117010101	PCB BRACKET(C)
RE066	20-1118010101	PCB BRACKET(D)
RE067	20-1119010101	HEAT SINK BRACKET(A) (RY-505/707 <D>)(RY-507/707<M>)
RE068	20-1120010101	HEAT SINK BRACKET(B)
RE069	20-1123010101	HEAT SINK BRACKET(C) (RY-707 <D><M>)
RE070	20-1122010101	IC HOLDER (RY-505/707 <D>(RY-507/707 <M>)
RE071	20-1131010101	HEAT SINK (A) (RY-707 <D><M>)
RE072	20-1131010101	HEAT SINK (B) (RY-505/707 <D>)(RY-507/707 <M>)
RE073	20-1169010101	HEAT SINK (E) (RY-303/505 <D>)(RY-307/507 <M>)
RE075	20-1179010101	HEAT SINK BRACKET(D) (RY-303/505 <D>)(RY-307/507 <M>)
RE078	30-0756010101	FOOT RUBBER
RE079	10-3496010101	LED FILTER (C)
RE080	10-3457010101	LED FILTER (D)
RE081	10-3458010101	LED FILTER (E)
RE082	10-3459010101	LED FILTER (F) (RY-505/707 <D>)(RY-507/707 <M>)
RE083	10-3459020101	LED FILTER (F) (RY-303 <D>)(RY-307 <M>)
RE084	10-3460010101	LED FILTER (G)
RE085	10-3462010101	LED FILTER (I) (RY-307/507/707 <M>)(RY-707 <D>)
RE088	10-3464010101	STRAIN RELIEF BUSHING
RE501	9-0307-1	POWER TRANS EI 120V UL/CSA (RY-303 <D>)
RE501	9-0309-1	POWER TRANS EI 220V/230-240V ASIA (RY-307 <M>)
RE501	9-0308-1	POWER TRANS EI 120V UL/CSA (RY-707 <D>)
RE501	9-0310-1	POWER TRANS EI 220V/230-240V ASIA (RY-707 <M>)
RE501	9-0314-1	POWER TRANS EI 120V UL/CSA (RY-505 <D>)
RE501	9-0315-1	POWER TRANS EI 220V/230-240V ASIA (RY-507 <M>)

NOTE: <D> 120V model only
<M> Asian model only

MICROPROCESSOR CONNECTION DIAGRAM

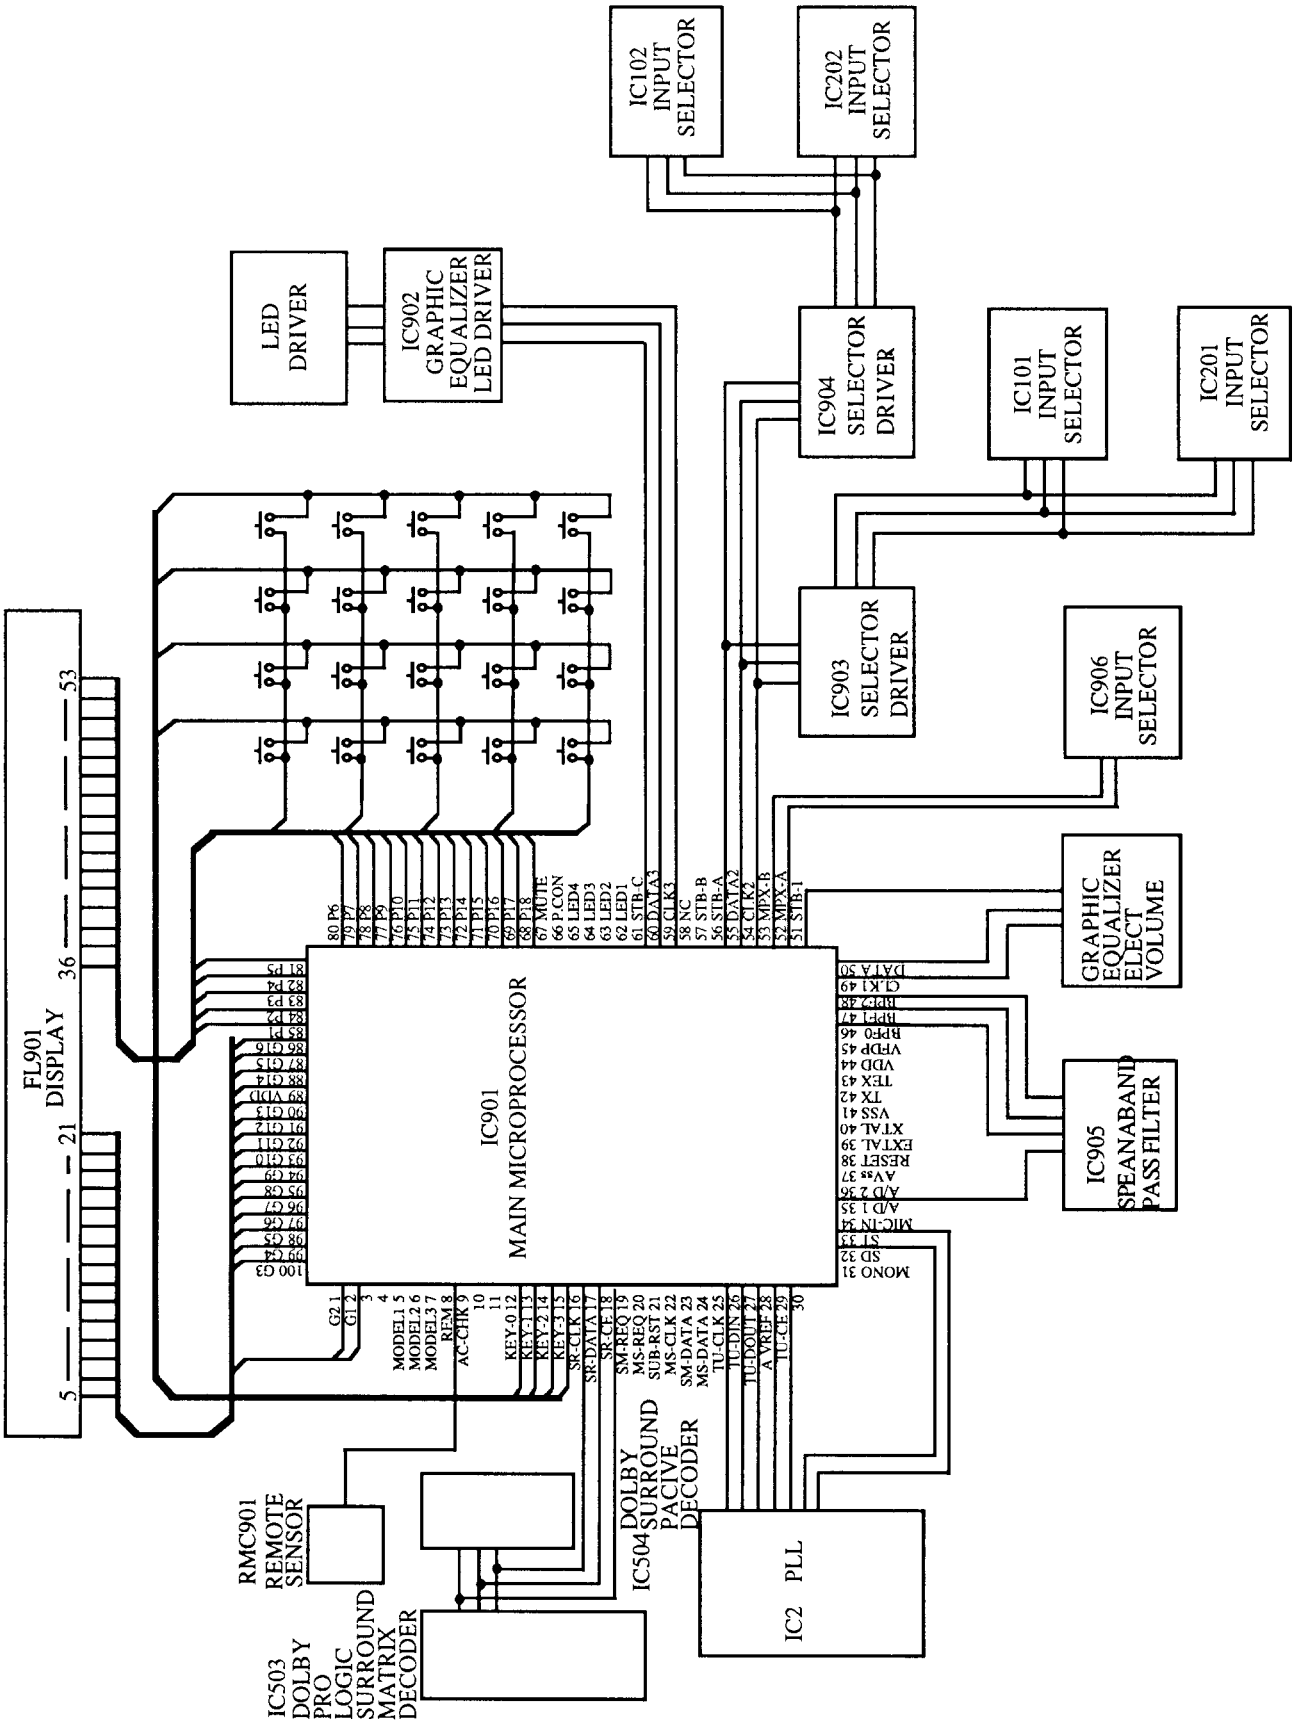

TERMINAL DESCRIPTION

IC901 : CXP82840

Pin No.	Function	Port Name	I/O	Description	Pin No.	Function	Port Name	I/O	Description
1	G15	G1	O	FL tube grid output	51	STB1	PD5	O	
2	G16	G0	O	FL tube grid output	52	MPX-A	PD6	O	Level A sensor signal input selection
3	NC	NC	-	Not used	53	MPX-B	PD7	O	Level B sensor signal input selection
4	-	PE0	I	Not used	54	CLK2	PF0	O	Command clock output
5	MODEL1	PE1	I	Model judgement input	55	DATA2	PF1	O	Command data
6	MODEL2	PE2	I	Model judgement input	56	STB-A	PF2	O	Input IC selection
7	MODEL3	PE3	I	Model judgement input	57	STB-B	PF3	O	Output IC selection
8	RMC	MRC	I	Remote control input	58	-	PF4	O	Not used
9	AC-CHK	PE5	I	AC power supply	59	CLK3	PF5	O	Command clock output
10	-	PE6	O	Not used	60	DTA3	PF6	O	Command data
11	-	PE7	O	Not used	61	STB-C	PF7	O	IC selection
12	KEY0	KR0	I	Key matrix input terminal	62	LED1	PG0	O	LED Display matrix drive output
13	KEY1	KR1	I	Key matrix input terminal	63	LED2	PG1	O	LED Display matrix drive output
14	KEY2	KR2	I	Key matrix input terminal	64	LED3	PG2	O	LED Display matrix drive output
15	KEY3	KR3	I	Key matrix input terminal	65	LED4	PG3	O	LED Display matrix drive output
16	SR-CLK	PC4	O	Surround IC command clock	66	P-0N	PG4	O	Power control output (Power on='H')
17	SR-DATA	PC5	O	Surround IC command data	67	MUTE	PG5	O	Amp mute control output (Mute on='L')
18	RS-CE	PC6	O	Surround IC command selection	68	P1	A33	O	FL tube anode output
19	MS-REQ	PC7	O	Sub microprocessor from command request	69	P2	A32	O	FL tube anode output
20	SM-REQ	CINT	I	From microrocessor	70	P3	A31	O	FL tube anode output
21	SUB-RST	PB1	O	From micrpprocessor reset	71	P4	A30	O	FL tube anode output
22	MS-CLK	SCK0	O	Sub microprocessor command clock	72	P5	A29	O	FL tube anode output
23	SM-DATA	SI0	I	Sub micrpprocessor from data input	73	P6	A28	O	FL tube anode output
24	MS-DATA	SO0	O	Sub microprocessor data output	74	P7	A27	O	FL tube anode output
25	TU-CLK	PB5	O	Tuner command clock	75	P8	A26	O	FL tube anode output
26	TU-DOUT	PB6	O	Tuner from data input	76	P9	A25	O	FL tube anode output
27	TU-IN	PB7	I	Tuner data output	77	P10	A24	O	FL tube anode output
28	AVREF	AVREF	-	A/D standard voltage input	78	P11	A23	O	FL tube anode output
29	TU-CE	PA0	O	Tuner from command selection output	79	P12	A22	O	FL tube anode output
30		PA1	O	Tuner from command selection output	80	P13	A21	O	FL tube anode output
31		PA2	O	Tuner from command selection output	81	P14	A20	0	FL tube anode output
32	SD	PA3	I	Tuner receiving condition signal	82	P15	A19	0	FL tube anode output
33	ST-IND	PA4	I	Stereo indicator input	83	P16	A18	O	FL tube anode output
34	MIC-IN	PA5	I	Microphone connecting detecte input	84	P17	A17	O	FL tube anode output
35	A/D1	AN6	I		85	P18	A16	O	FL tube anode output
36	A/D2	AN7	I		86	G1	G15	O	FL tube grid output
37	AVss	AVss	-		87	G2	G14	O	FL tube grid output
38	RESET	RST	I		88	G3	G13	O	FL tube grid output
39	EXTAL	EXTAL	I		89	VDD	VDD	-	+5V Power supply
40	XTAL	XTAL	-		90	G4	G12	O	FLtube grid output
41	Vss	Vss	-	GND pin	91	G5	G11	O	FLtube grid output
42		TX	-		92	G6	G10	O	FLtube grid output
43		TEX	-		93	G7	G9	O	FLtube grid output
44	VDD	VDD	-	+5V power supply	94	G8	G8	O	FLtube grid output
45	VEDP	VEDP	-	FL drive voltage	95	G9	G7	O	FLtube grid output
46	BPF0	PD0	O	BPF select 0	96	G10	G6	O	FLtube grid output
47	BPF1	PD1	O	BPF select 1	97	G11	G5	O	FLtube grid output
48	BPF2	PD2	O	BPF select 2	98	G12	G4	O	FLtube grid output
49	CLK1	PD3	O	Command clock output	99	G13	G3	O	FLtube grid output
50	DATA1	PD4	O	Command data output	100	G14	G2	O	FLtube grid output

BLOCK DIAGRAMS (TUNER SECTION)

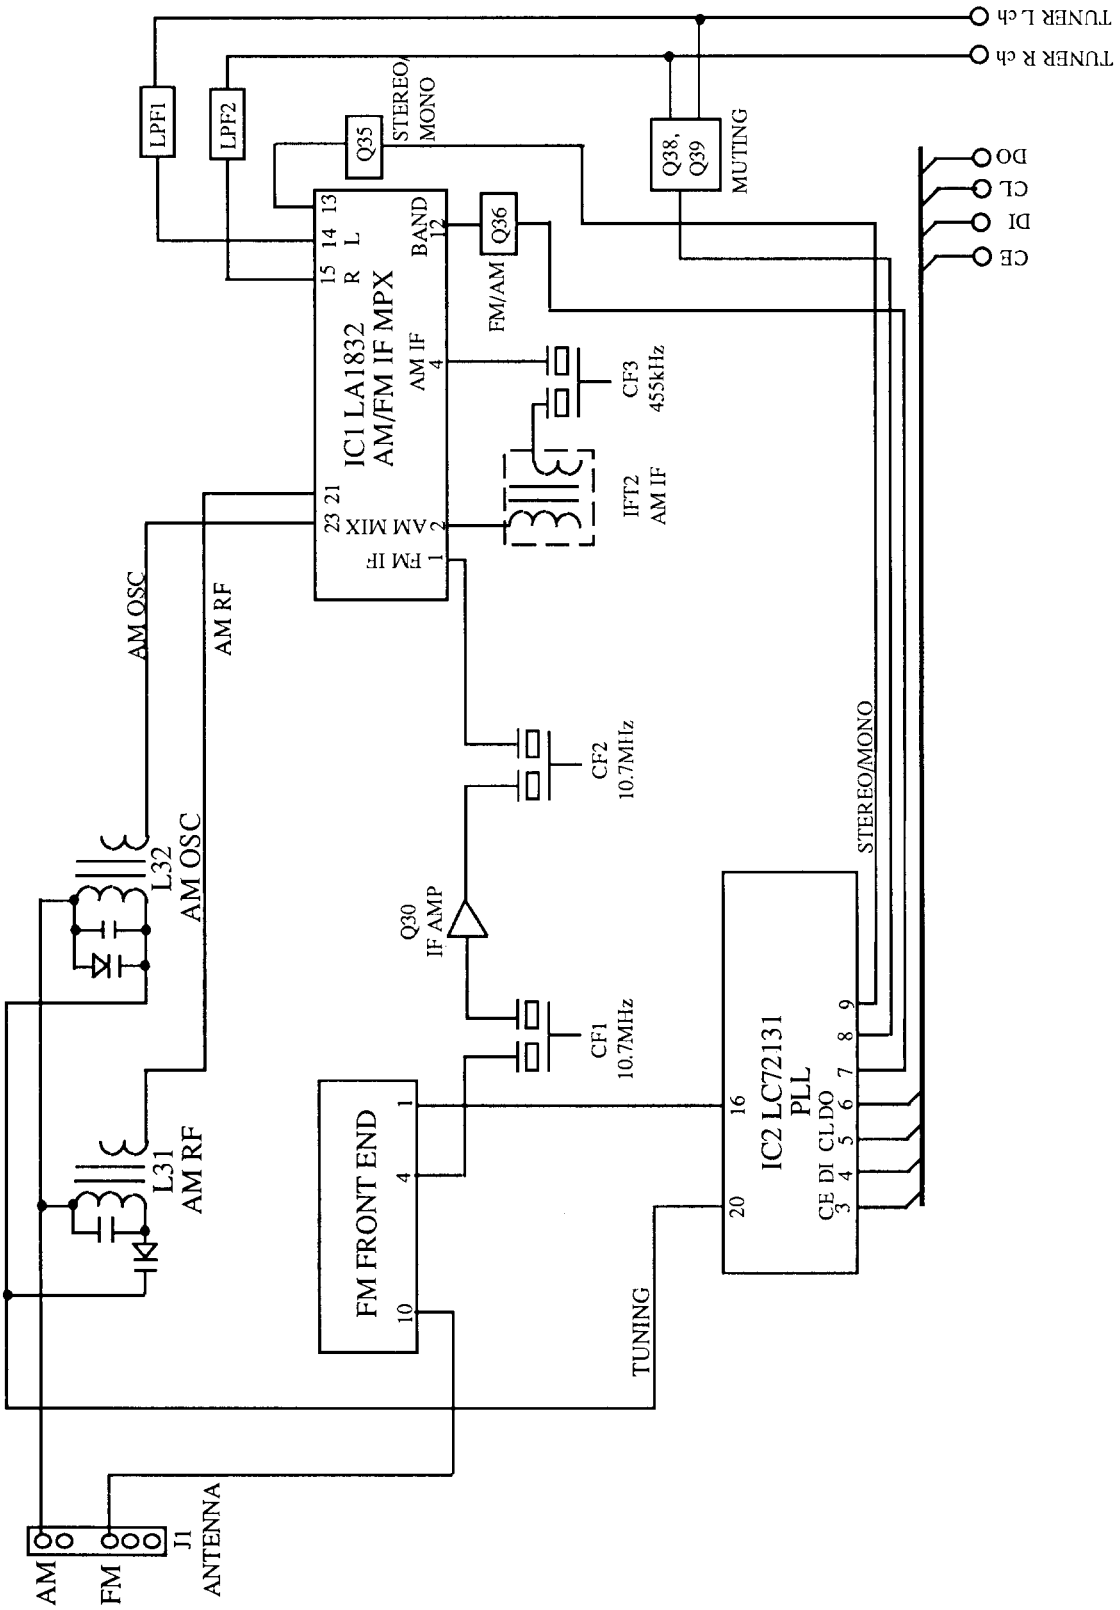

BLOCK DIAGRAMS (MAIN SECTION)

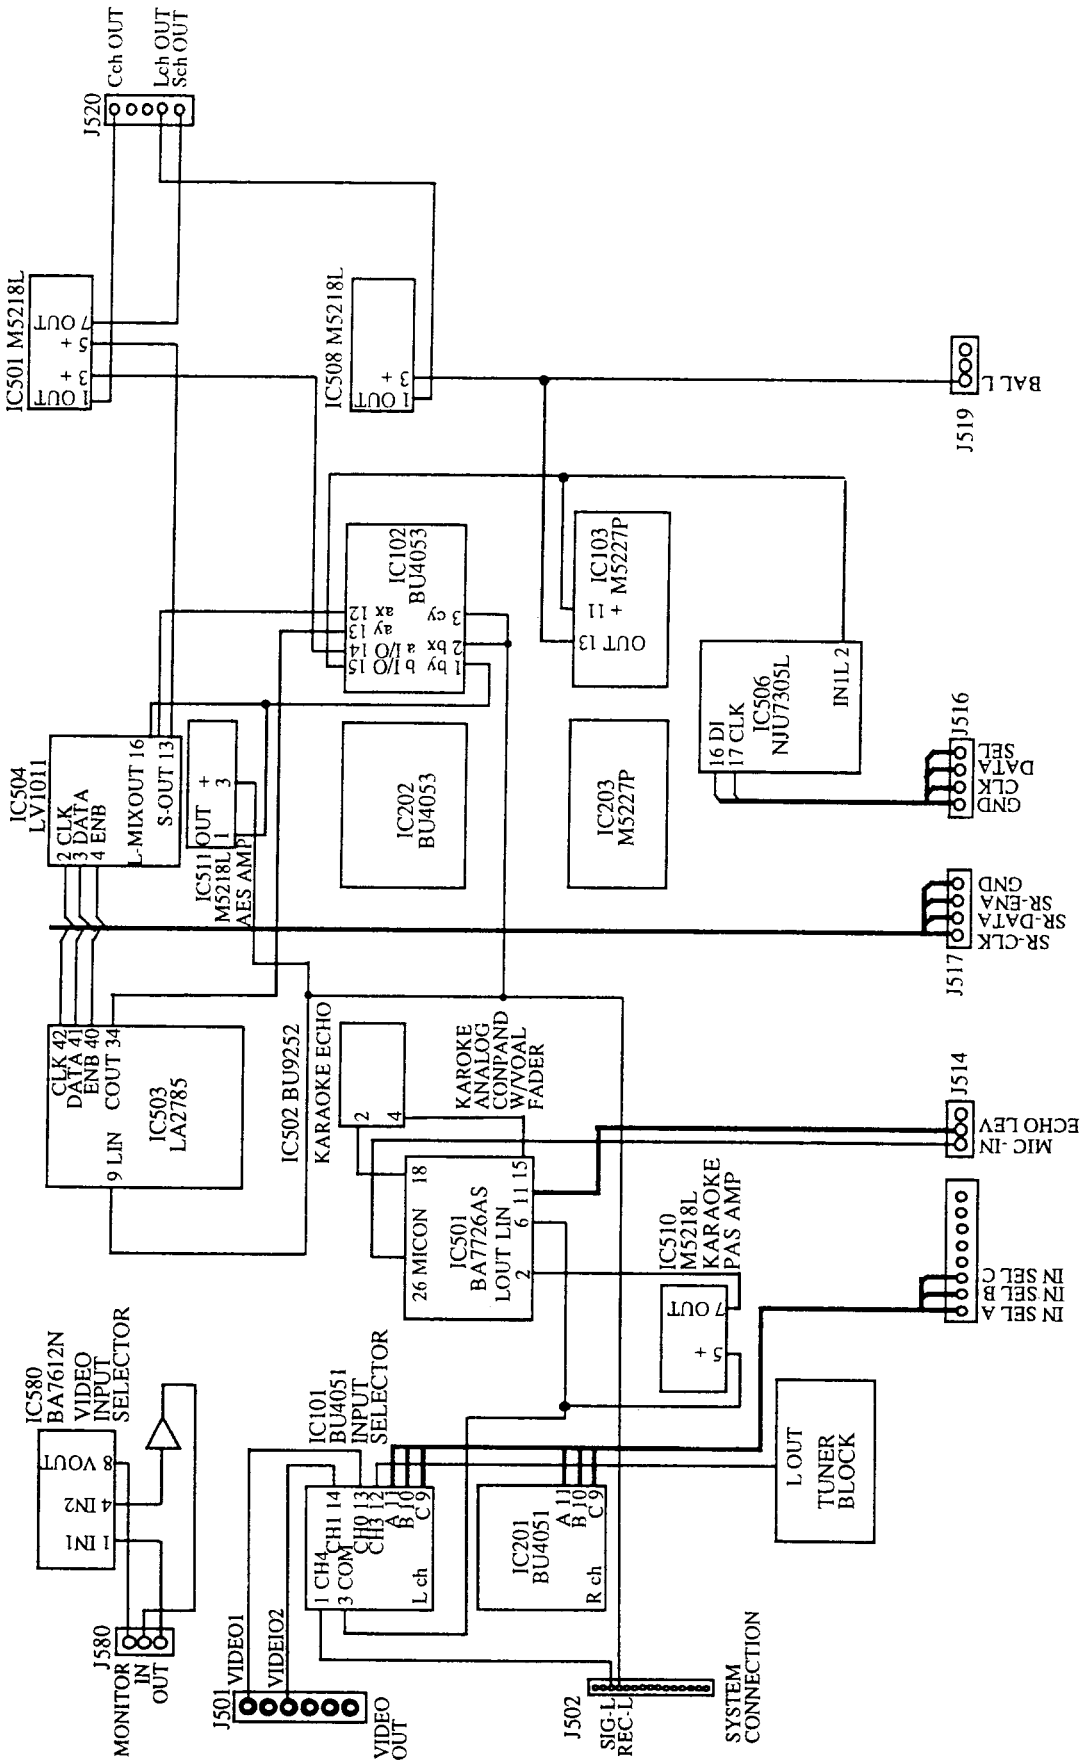

BLOCK DIAGRAMS (DISPLAY SECTION)

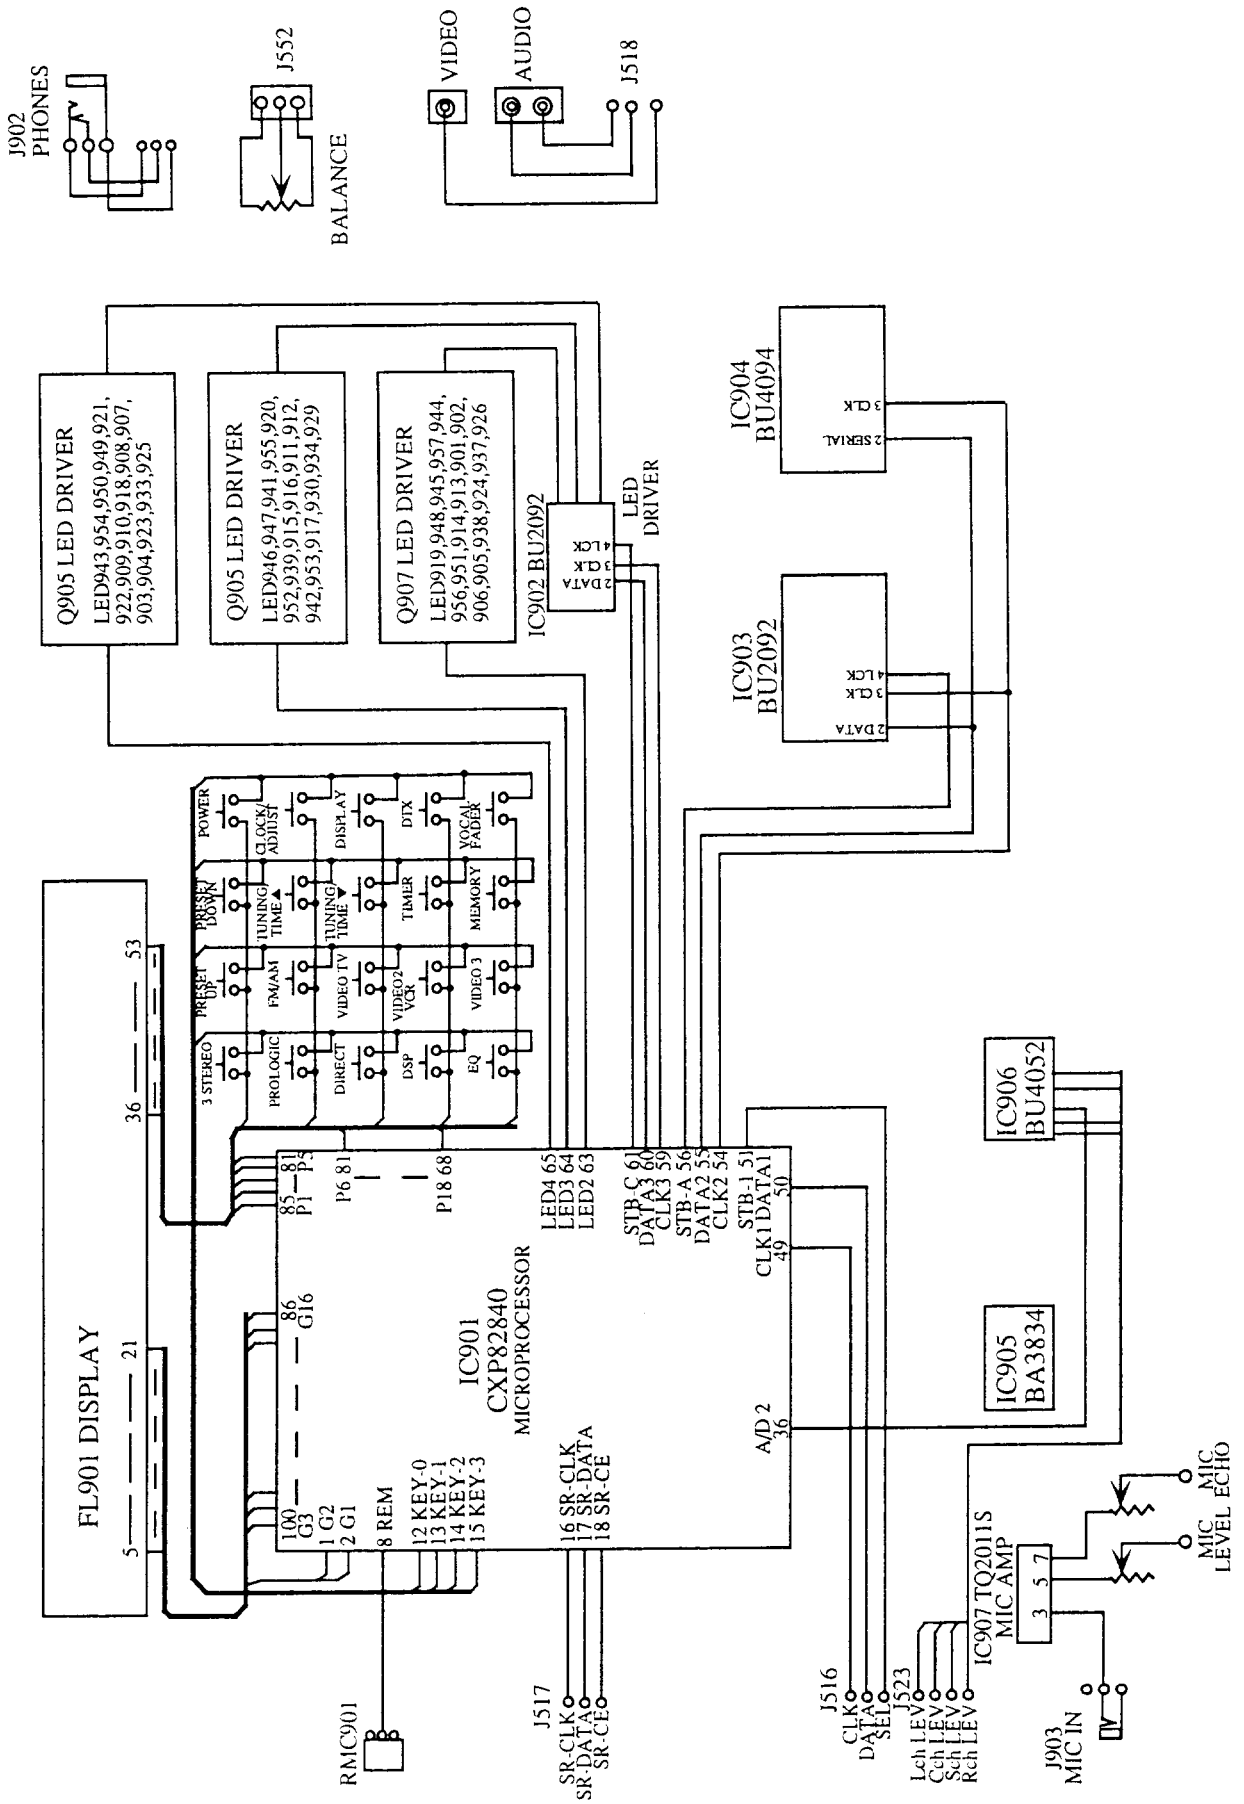

BLOCK DIAGRAMS (POWER SECTION)

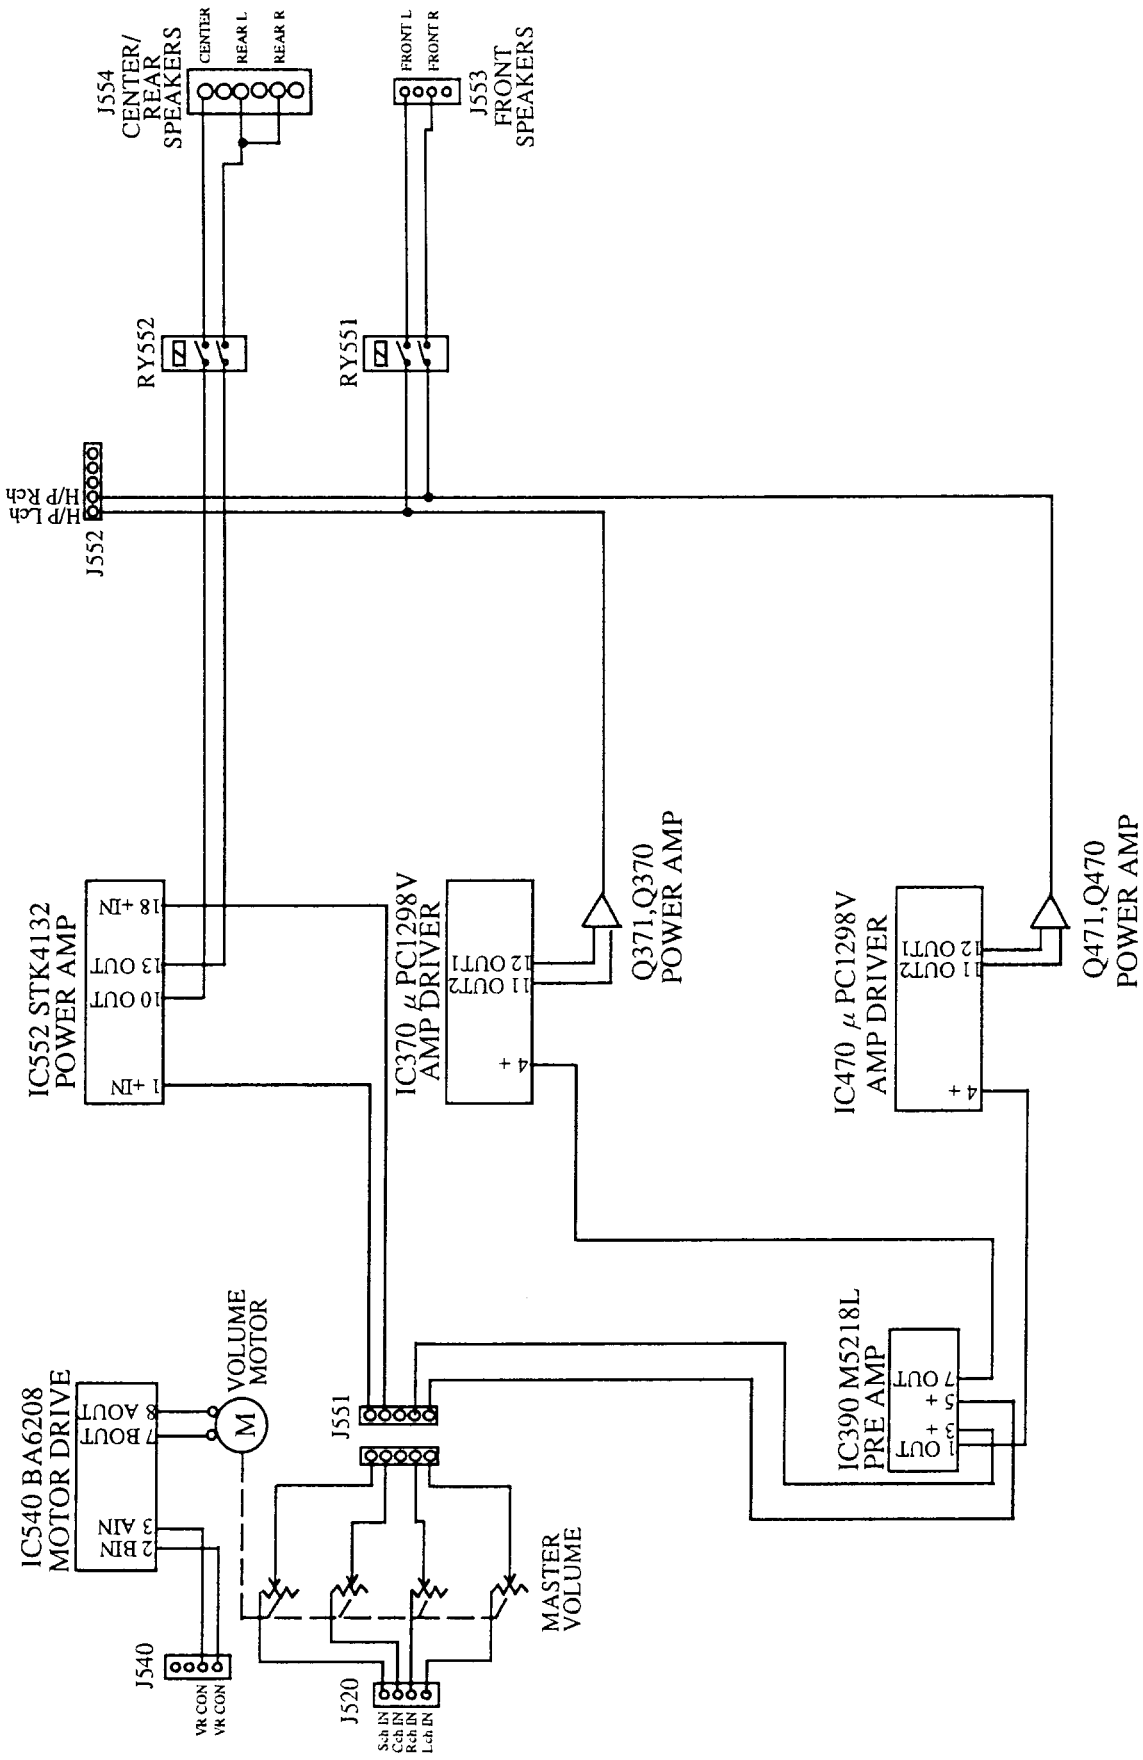

PRINTED CIRCUIT BOARD PARTS LIST

POWER AMP PCB ASS'Y (RE502)

Ref. No.	Part No.	Description
	ICS	
IC551	22240360 or 1-0278-1	UPC1237HA
IC552	1-0279-1	STK4132mk II (RY-505/507)
IC552	1-0280-1	STK4152mk II (RY-707)
IC553	222780122NEC or 1-0113-1	NJM78M12
IC554	222790122 or 1-0321-1	NJM79M12
	TRANSISTORS	
Q351,451	2213284 or 2-2SC1740S-S7	2SC1740SR
Q352,452	2213284 or 2-2SC1740S-S7	2SC1740SR (RY-505/507/707)
Q561,562	2213355 or 2-2SA933S-S7	2SA933S
Q560	2-2SC2389-S-7	2SC2389S (RY-505/507/707)
	DIODES	
D351,451,590	223163 or 3-1SS133-1	1SS133 (RY-505/507/707)
D560,591	223163 or 3-1SS133-1	1SS133
D575,576,577,578	223839 or 3-IN4002-1	1N4002 (RY-303/307)
D575,576,577,578	22380003F or 3-IN5402-1	1N5402 (RY-505/507/707)
D579,580,581,582	22380003F or 3-IN5402-1	1N5402
D589	223839 or 3-IN4002-1	1N4002
	CAPACITORS	
C557,558	354761029	1000 μF 35V ELECT. (RY-303/307) 3300 μF 35V ELECT. (RY-505/507) 3300 μF 50V ELECT. (RY-707)
C583,584		6800 μF 50V ELECT. (RY-303/307/505/507) 6800 μF 63V ELECT. (RY-707)
	INDUCTORS	
L362,462	7A-0075	1 μH (RY-505/507/707)
L385,485	7A-0075	1 μH
	TERMINALS	
J553	23-F003-1	SPEAKER HSP134V-03
J554	23-F004-1	SPEAKER (SURROUND) HSP116V-04 (RY-505/507/707)
	JACK	
J555	23-B033-1	SUB WOOFER HTJ032-09BB (RY-507/507/707)
	CONNECTORS	
J551	12S3-J0001	B3B-EH (RY-303/307)
J551	12S5-J0001	B5B-EH (RY-505/507/707)
J556	12S3-C0002	52147-0310
J552	12S5-C0002	52147-0510
	RELAYS	
RY551	8-RL-0001-1	(SPEAKER L/R) OMI-SS-224LM
RY552	8-RL-0001-1	(SPEAKER C/S) OMI-SS-224LM (RY-505/507/707)
	25-0572-01	POWER AMP PCB

POWER AMP TRANSISTOR PCB ASS'Y (RE503)

Ref. No.	Part No.	Description
	ICs	
IC370	22240311 or 1-0277-1	μPC1298V
IC390	222652 or 1-0281-1	M5218L
IC470	22240311 or 1-0277-1	μPC1298V
	TRANSISTORS	
Q370,470	2-2SA1633-7	2SA1633E
Q371,471	2-2SC4278-7	2SC4278E
Q372,472	2213284 or 2-2SC1740S-S7	2SC1740SR
Q571,572	2-2SC3271N-7	2SC3271N

Ref. No.	Part No.	Description
	DIODES	
D371,471	223163 or 3-1SS133-1	1SS133
	TRIMMER POTENTIOMETERS	
VR370	RH0615CS4J	4.7KΩ
VR470	RH0615CS4J	4.7KΩ
	20-1170010101	HEAT SINK (D)
	30-0756010101	SLLICONE SHEET
	25-0571-01	POWER TR. PCB

AC PCB ASS'Y (RE504)

Ref. No.	Part No.	Description
	AC CORDS	
RE505	⚠14-0041-2	SPT-2 #18 POLARIZED UL L=2m <D>
RE506	⚠14-0015-1	VDE Type 2.5A/250V L=6ft <M>
	SWITCH	
F551	⚠8-0268-1	DUAL VOLTAGE SDKGA4-A-3-R <M>
	FUSES	
F551	⚠4-0035-1	GMC T5A/250V (RY-707 <D>)
F551	⚠4-0039-1	S506 T5A/250V (RY-707 <M>)
F551	⚠4-0040-1	GMC T4A/250V (RY-303/505)
F552	⚠4-0041-1	S506 T4A/250V (RY-307/507)
F552	⚠4-0042-1	GMC T2.5A/250V <D>
	⚠4-0043-1	S506 T2.5A/250V <M>
	20-00463-1	FUSE HOLDER
LW551	25-0570-01	AC PCB

VIDEO SWITCH PCB ASS'Y (RE507)

Ref. No.	Part No.	Description
	IC	
IC580	1-0291-1	BA7612N
	TRANSISTORS	
Q580,582	2213355 or 2-2SA933S-S7	2SA933S
Q581,583	2213284 or 2-2SC1740S-S7	2SC1740SR
	INDUCTOR	
L580	26-0053-1	10 μH LAL02
	JACK	
J580	25-B032-1	(MONITOR/VIDEO) HSP213V-08
	CONNECTORS	
J581	12S2-J0001	B2B-EH
J582	12S4-C0002	52147-0410
	25-0583-01V	VIDEO PCB

VR PCB ASS'Y (RE508)

Ref. No.	Part No.	Description
	ICs	
IC540	22240372 or 1-0283-1	BA6208
IC541	1-0275-1	NJM78L06
	CONNECTOR	
J540	12S4-C0002	52147-0410
	MOTOR VOLUMES	
VR540	15-0139-1	RK16812MG A100KΩ ×2 (RY-303/307)
VR540	15-0138-1	RK16814MG A100KΩ ×4 (RY-505/507/707)
	25-0573-01	VR(VOLUME) PCB

Ref. No.	Part No.	Description
	LEDs	
LED901,902,905,906, 909,910,913,914, 917,918,919,920, 921,922,923	28-0057-1	SLV-312VC RED
LED903,904,907,908, 911,912,915,916, 924,941,942,953, 955	28-0058-1	SLV-312MC GREEN
LED925,929,933,937	26-0056-1	SLV-312VC RED (RY-707)
LED926,930,934,938, 943,944,945,956, 957	28-0058-1	SLV-312MC GREEN (RY-707)
LED927,935	28-0057-1	SLV-312VC RED (RY-303/307)
LED927,931,935	28-0057-1	SLV-312VC RED (RY-505/507)
LED928,936	28-0058-1	SLV-312MC GREEN (RY-303/307)
LED928,932,936,943, 944,945,956,957	28-0058-1	SLV-312MC GREEN (RY-505/507)
LED939,940,946,947, 952	26-0061-1	SLV-312DC ORANGE
LED948,949,950	26-0061-1	SLV-312DC ORANGE (RY-505/507/707)
LED951	26-0056-1	SLR-332VR RED (RY-307/507/707)
	CAPACITOR	
C902		0.22F 5.5V SUPPER ELECT.
	FL	
FL901	27-0089-1	DISPLAY BJ455GK
	TACT SWITCHES	
SW901,902,903,904, 905,906,907,908, 909,910,911,912, 913,914,915	8-0263-2	SKHHAM H=5mm
SW916,918,920,922	8-0263-2	SKHHAM H=5mm (RY-707)
SW917,921	8-0263-2	SKHHAM H=5mm (RY-303/307/505/507)
SW919	8-0263-2	SKHHAM H=5mm (RY-505/507)
SW923	8-0263-2	SKHHAM H=5mm (RY-307/507/707)
	JACKS	
J901	23-B038-1	LPV8529-0100(3P)
J902	23-B029-1	(HEADPHONE) HTJ035-18A
J903	23-B029-1	(MIC) HTJ035-18A (RY-307/507/707)
	VOLUMES	
VR901	15-0136-1	(BAL) RK14K124 B10KΩ ×2
VR902	15-0137-1	(MIXING) RK14K12D B100KΩ ×2 (RY-307/507/707)
VR903	15-0137-1	(ECHO) RK14K12D B100KΩ ×2 (RY-307/507/707)
	CERAMIC RESONATOR	
X901	29-0069-1	CST8MTW 8MHz
	CRYSTAL	
X902	21-0101-3	CRYSTAL 32.768KHz
	OPTIC RECEIVER	
RMC901	28T-0018-1	MODULE IS1U621L
	MICRO INDUCTOR	
L901	26-0056-1	100 μH LAL03
	10-3448010101	VFD HOLDER
	10-3449010101	SENSOR HOLDER
33559	25-0574-01	DISPLAY PCB

NOTE: <D> 120V model only
<M> Asian model only

SCHEMATIC DIAGRAMS VOLTAGE CHARTS (ALL IN VOLT)

Q' NO.	Q303	Q35	Q36	Q37	Q319	Q320	Q370	Q370	Q371	Q371
MODE	FM/AM	FM/AM	FM/AM	FM/AM	FM	FM	FM	FM	FM	FM
E	10.0/0	0/0	0/0	0/0	-29.0	17.0	0.0	0.0	0.0	0.0
C	12.0/0	4.6/4.6	11.6/0	0/0	-40.0	18.0	-50.0	-40.0	50.0	40.0
B	10.6/0	0/0	0/0.7	0.7/0.7	-29.6	17.6	-0.6	-0.6	0.6	0.6
							(RY-303/505/707)	(RY-303/505)	(RY-303/505/707)	

Q' NO.	Q470	Q470	Q471	Q471	Q560	Q560	Q560	Q561	Q561	Q562
MODE	FM	FM	FM	FM	FM	FM	FM	FM	FM	FM
E	0.0	0.0	0.0	0.0	-31.0	-27.0	-31.0	49.0	40	1.8
C	-50.0	-40.0	50.0	40.0	49.0	40.0	49.0	0.0	0	0.0
B	-0.6	-0.6	0.6	0.6	-30.4	-27.0	-30.4	49.7	40	1.3
	(RY-303/505/707)	(RY-303/505)	(RY-303/505/707)	(RY-303/505)	(RY-303/505/707)	(RY-303/505)				

Q' NO.	Q571	Q572
MODE	FM	FM
E	-1.2	-1.2
C	0.6	0.6
B	-0.6	-0.6

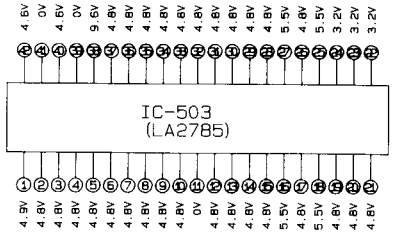

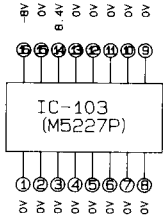

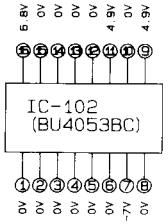

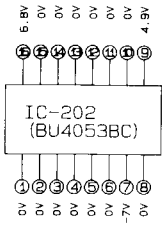

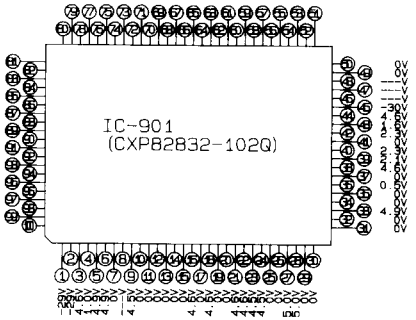

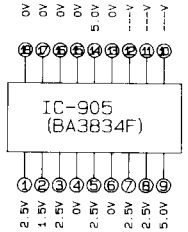

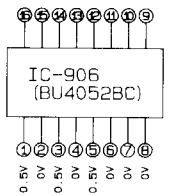

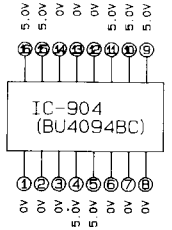

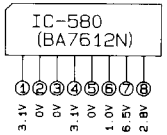

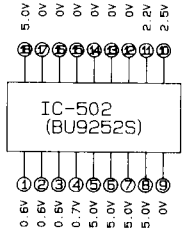

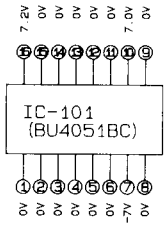

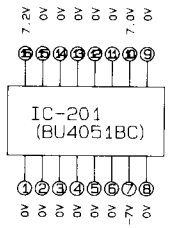

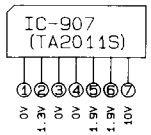

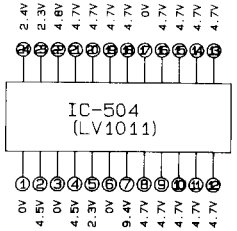

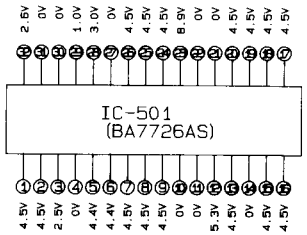

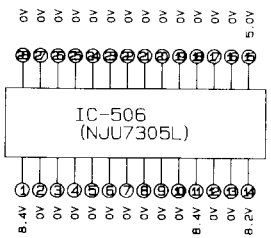

SCHEMATIC DIAGRAMS (TUNER SECTION)

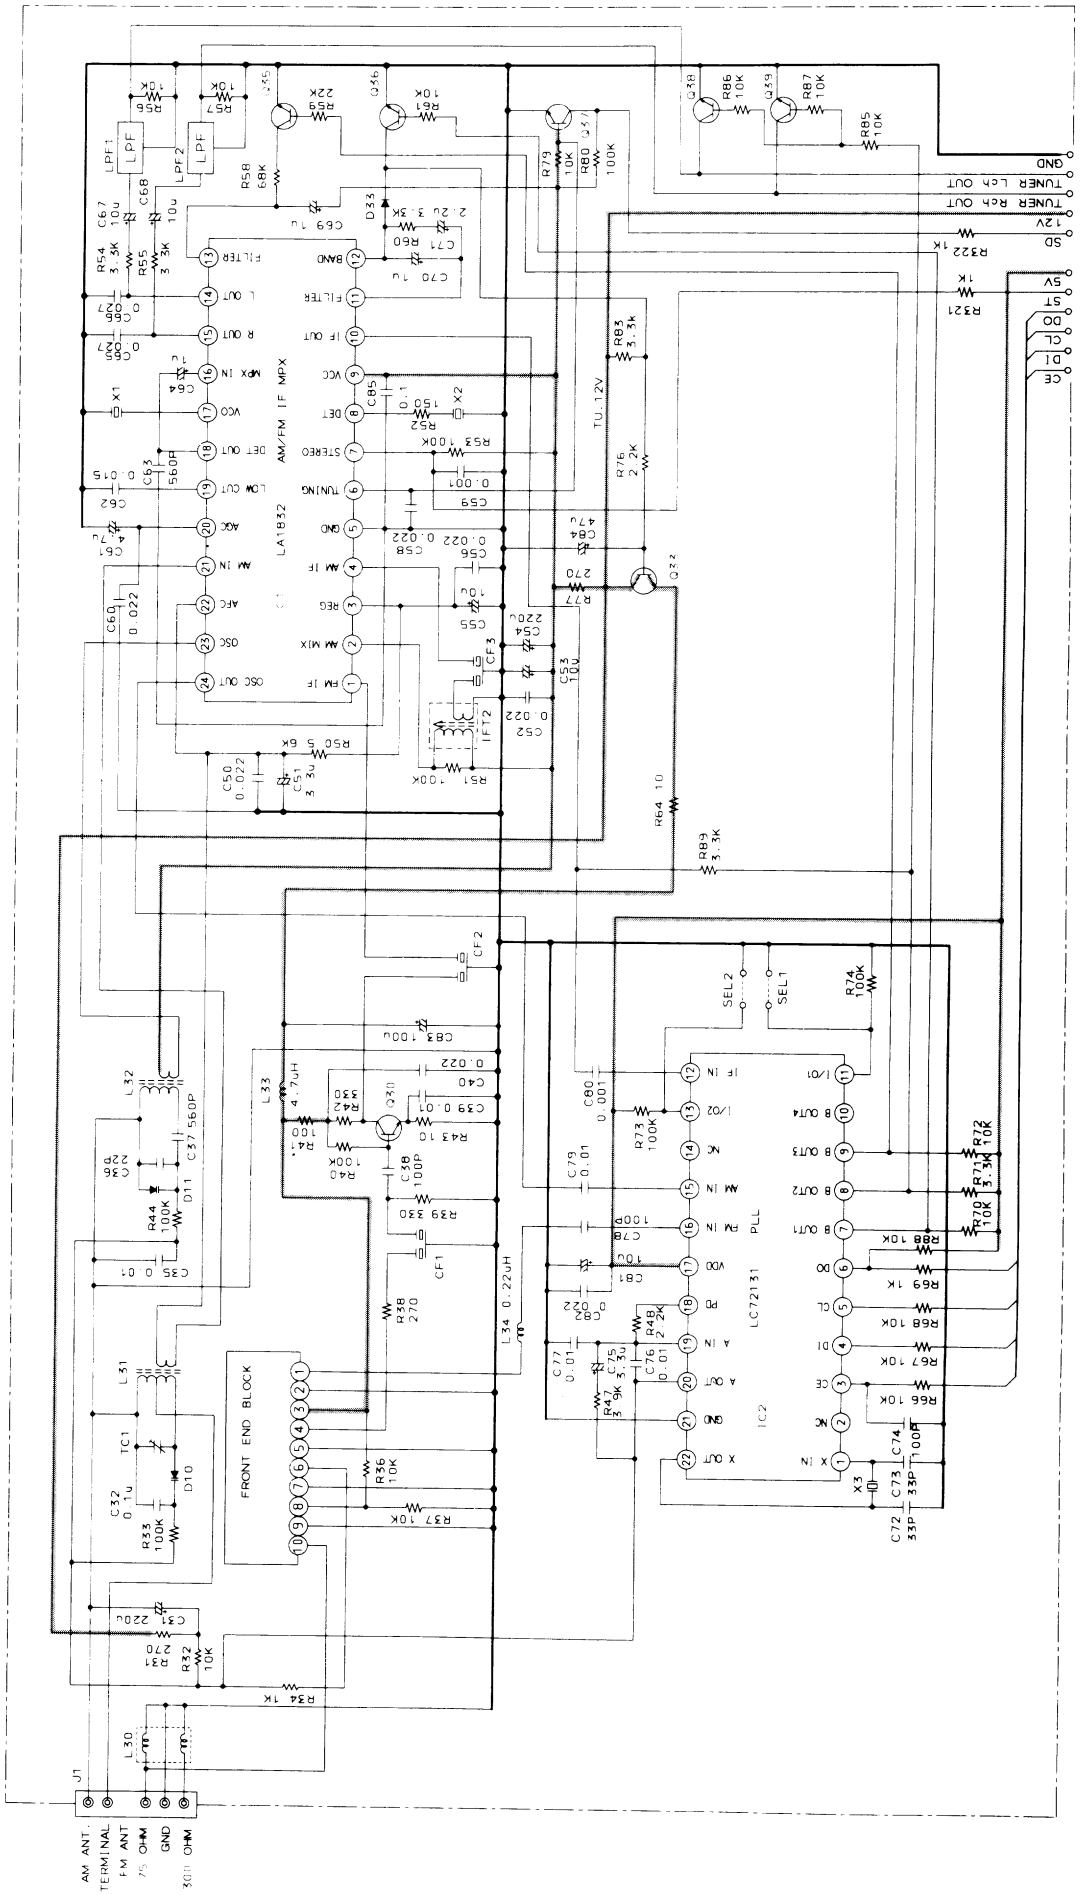

CHEMATIC DIAGRAMS (MAIN SECTION)

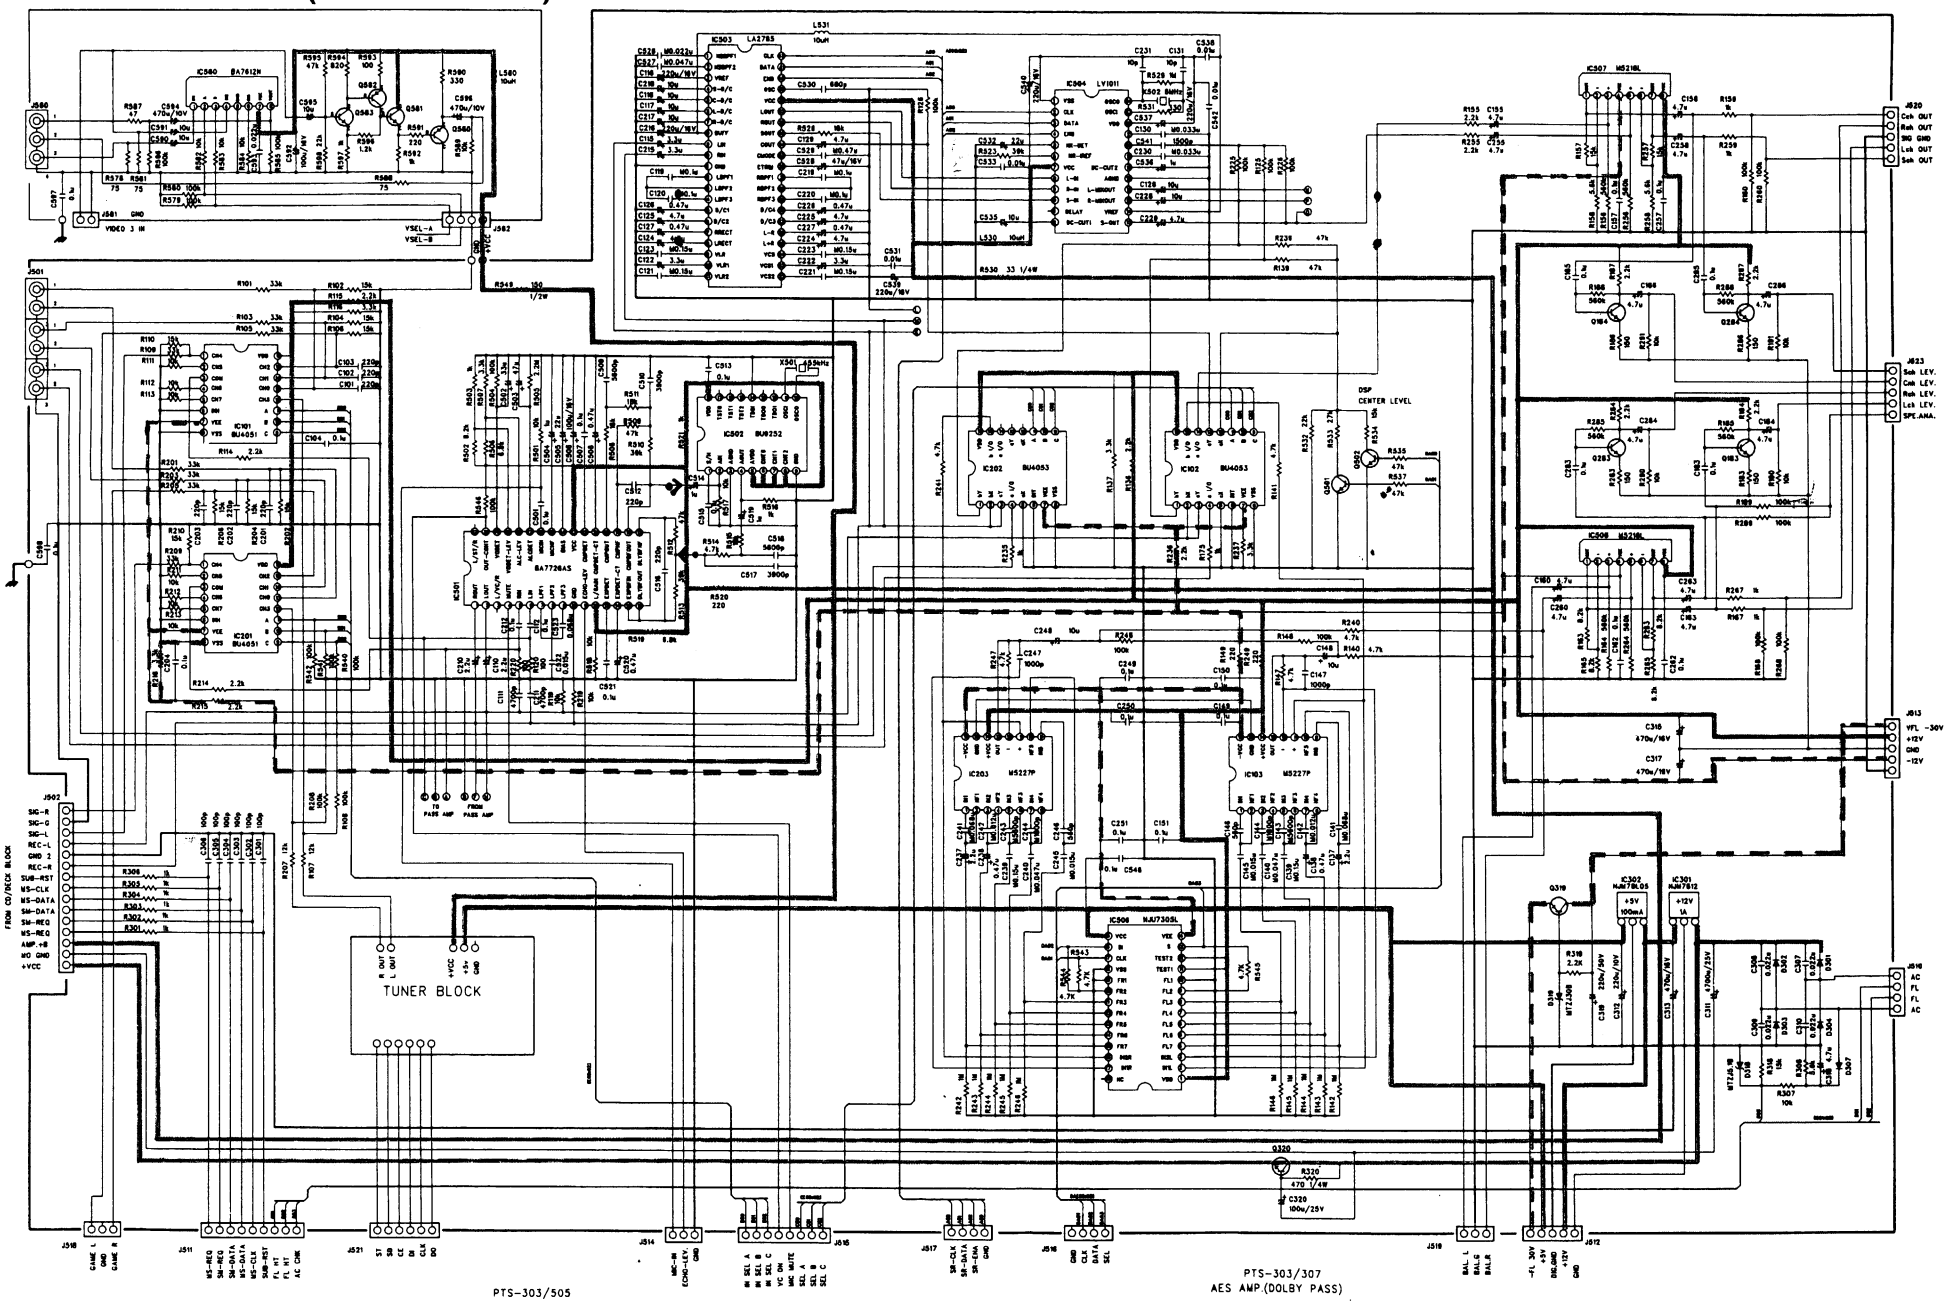

SCHEMATIC DIAGRAMS (DISPLAY SECTION)

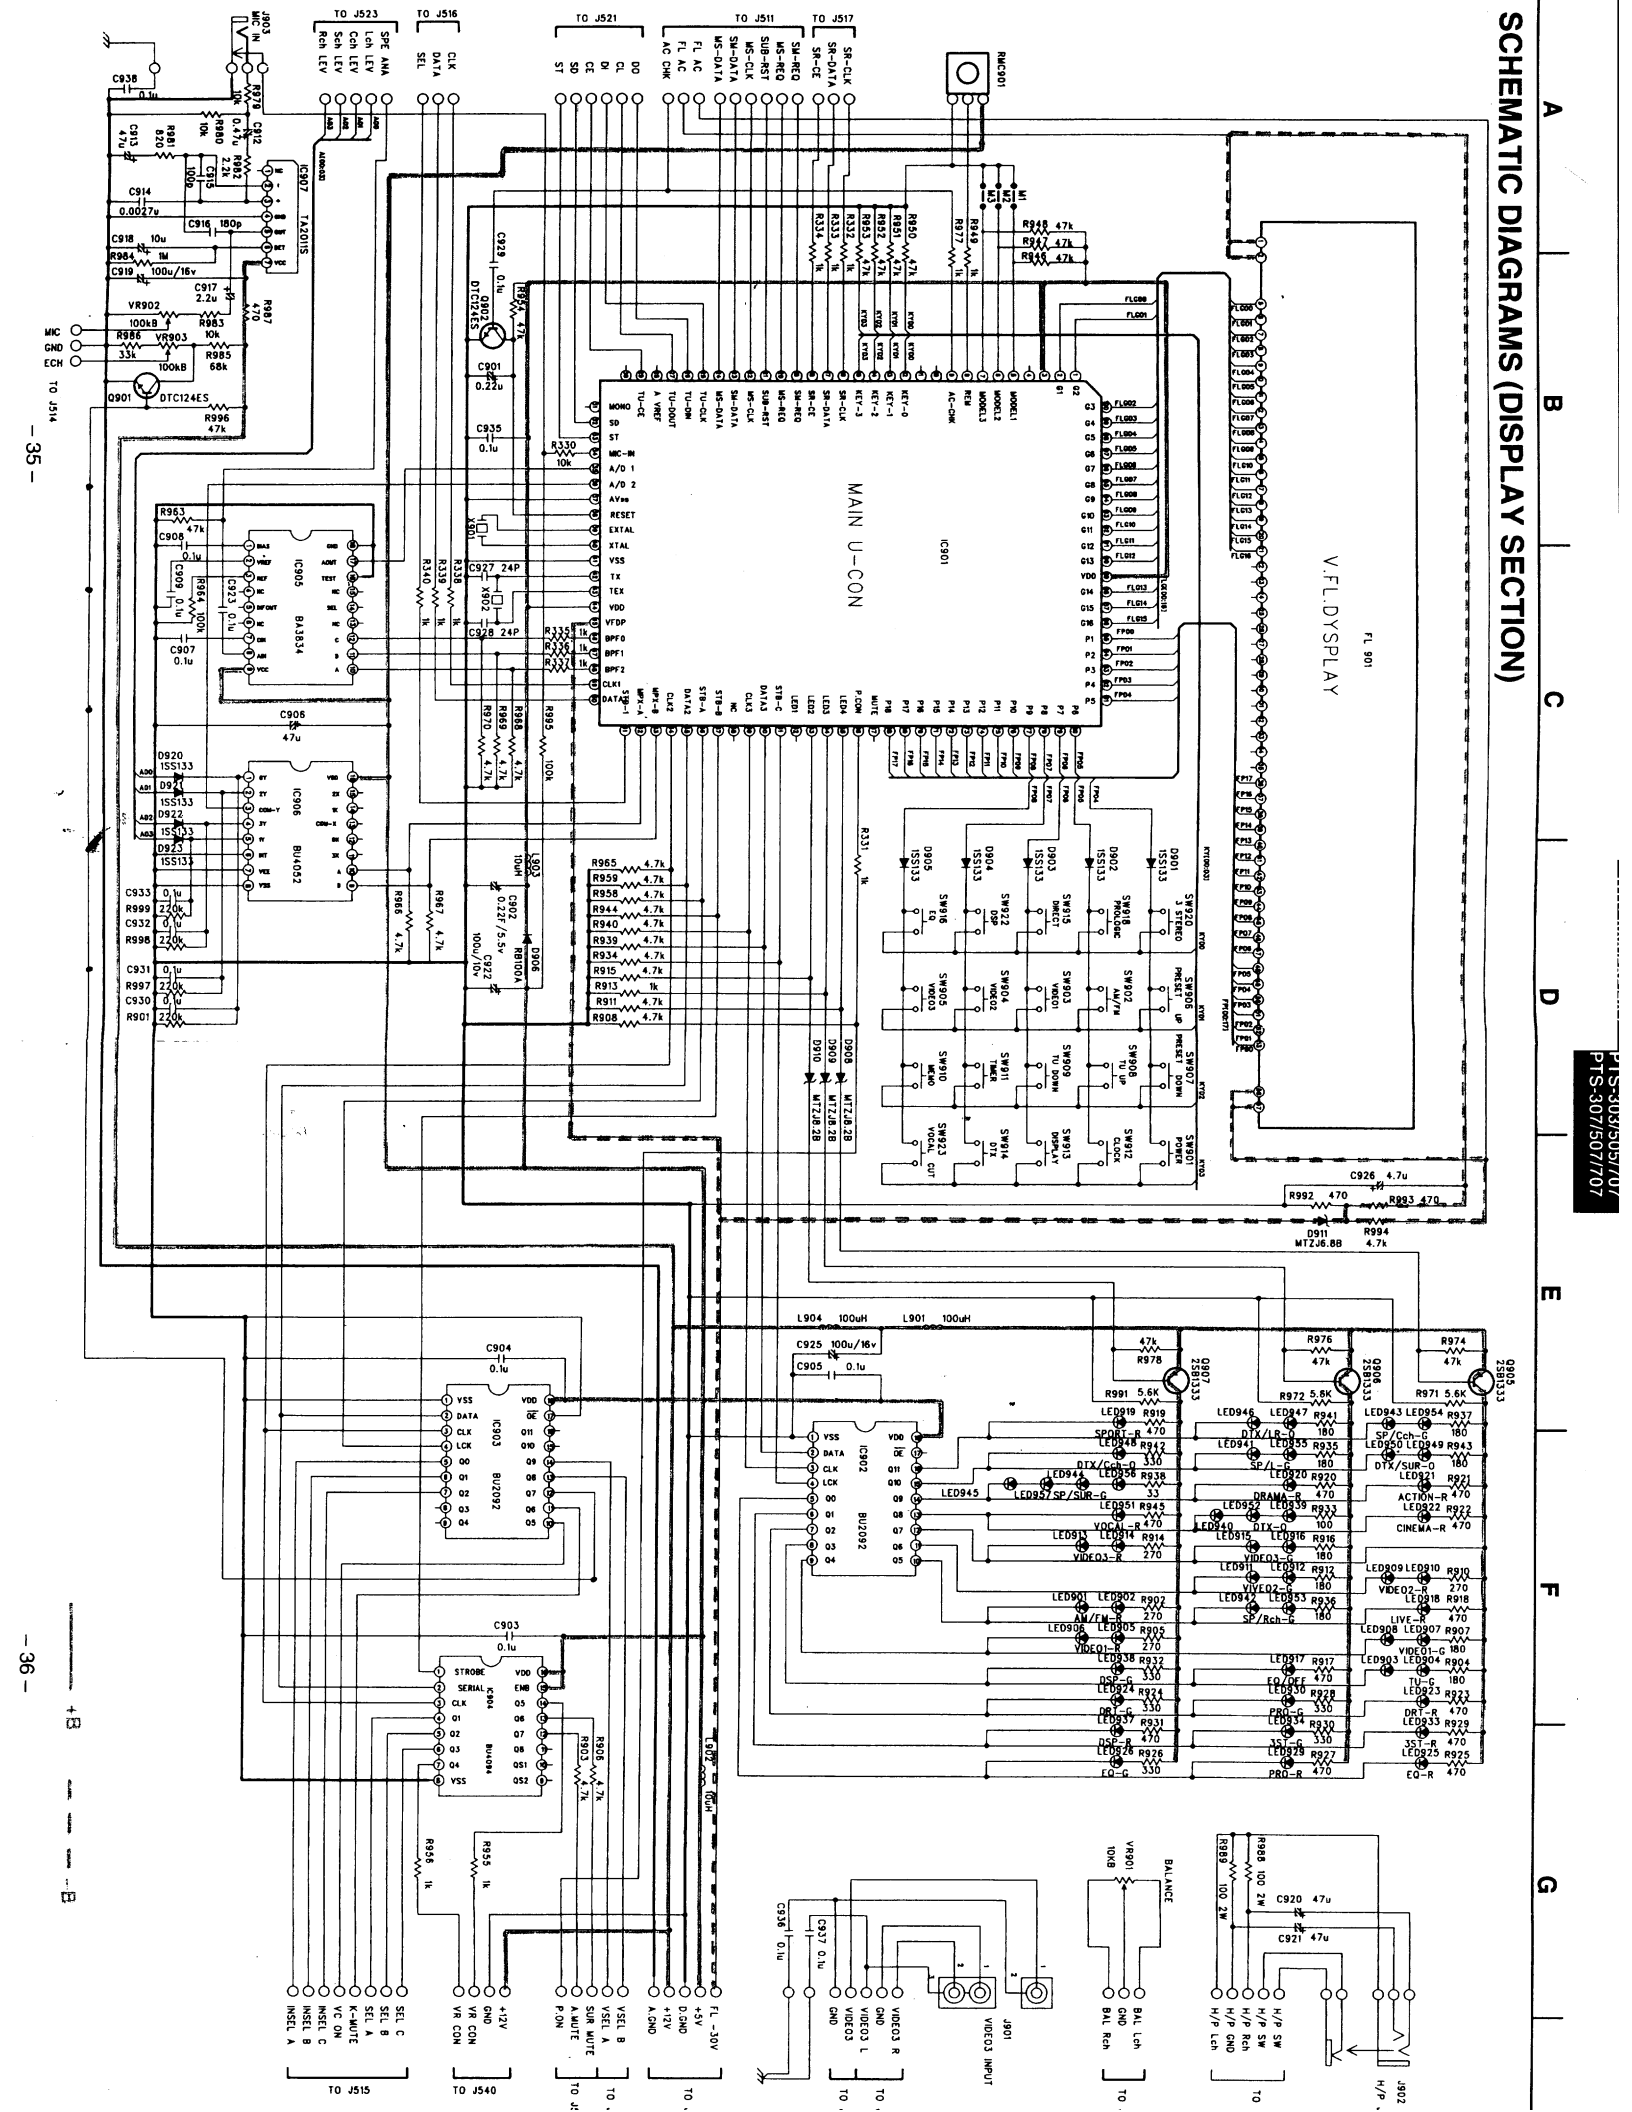

CHEMATIC DIAGRAMS (POWER AMP SECTION)

ODELS: RY-303/307)

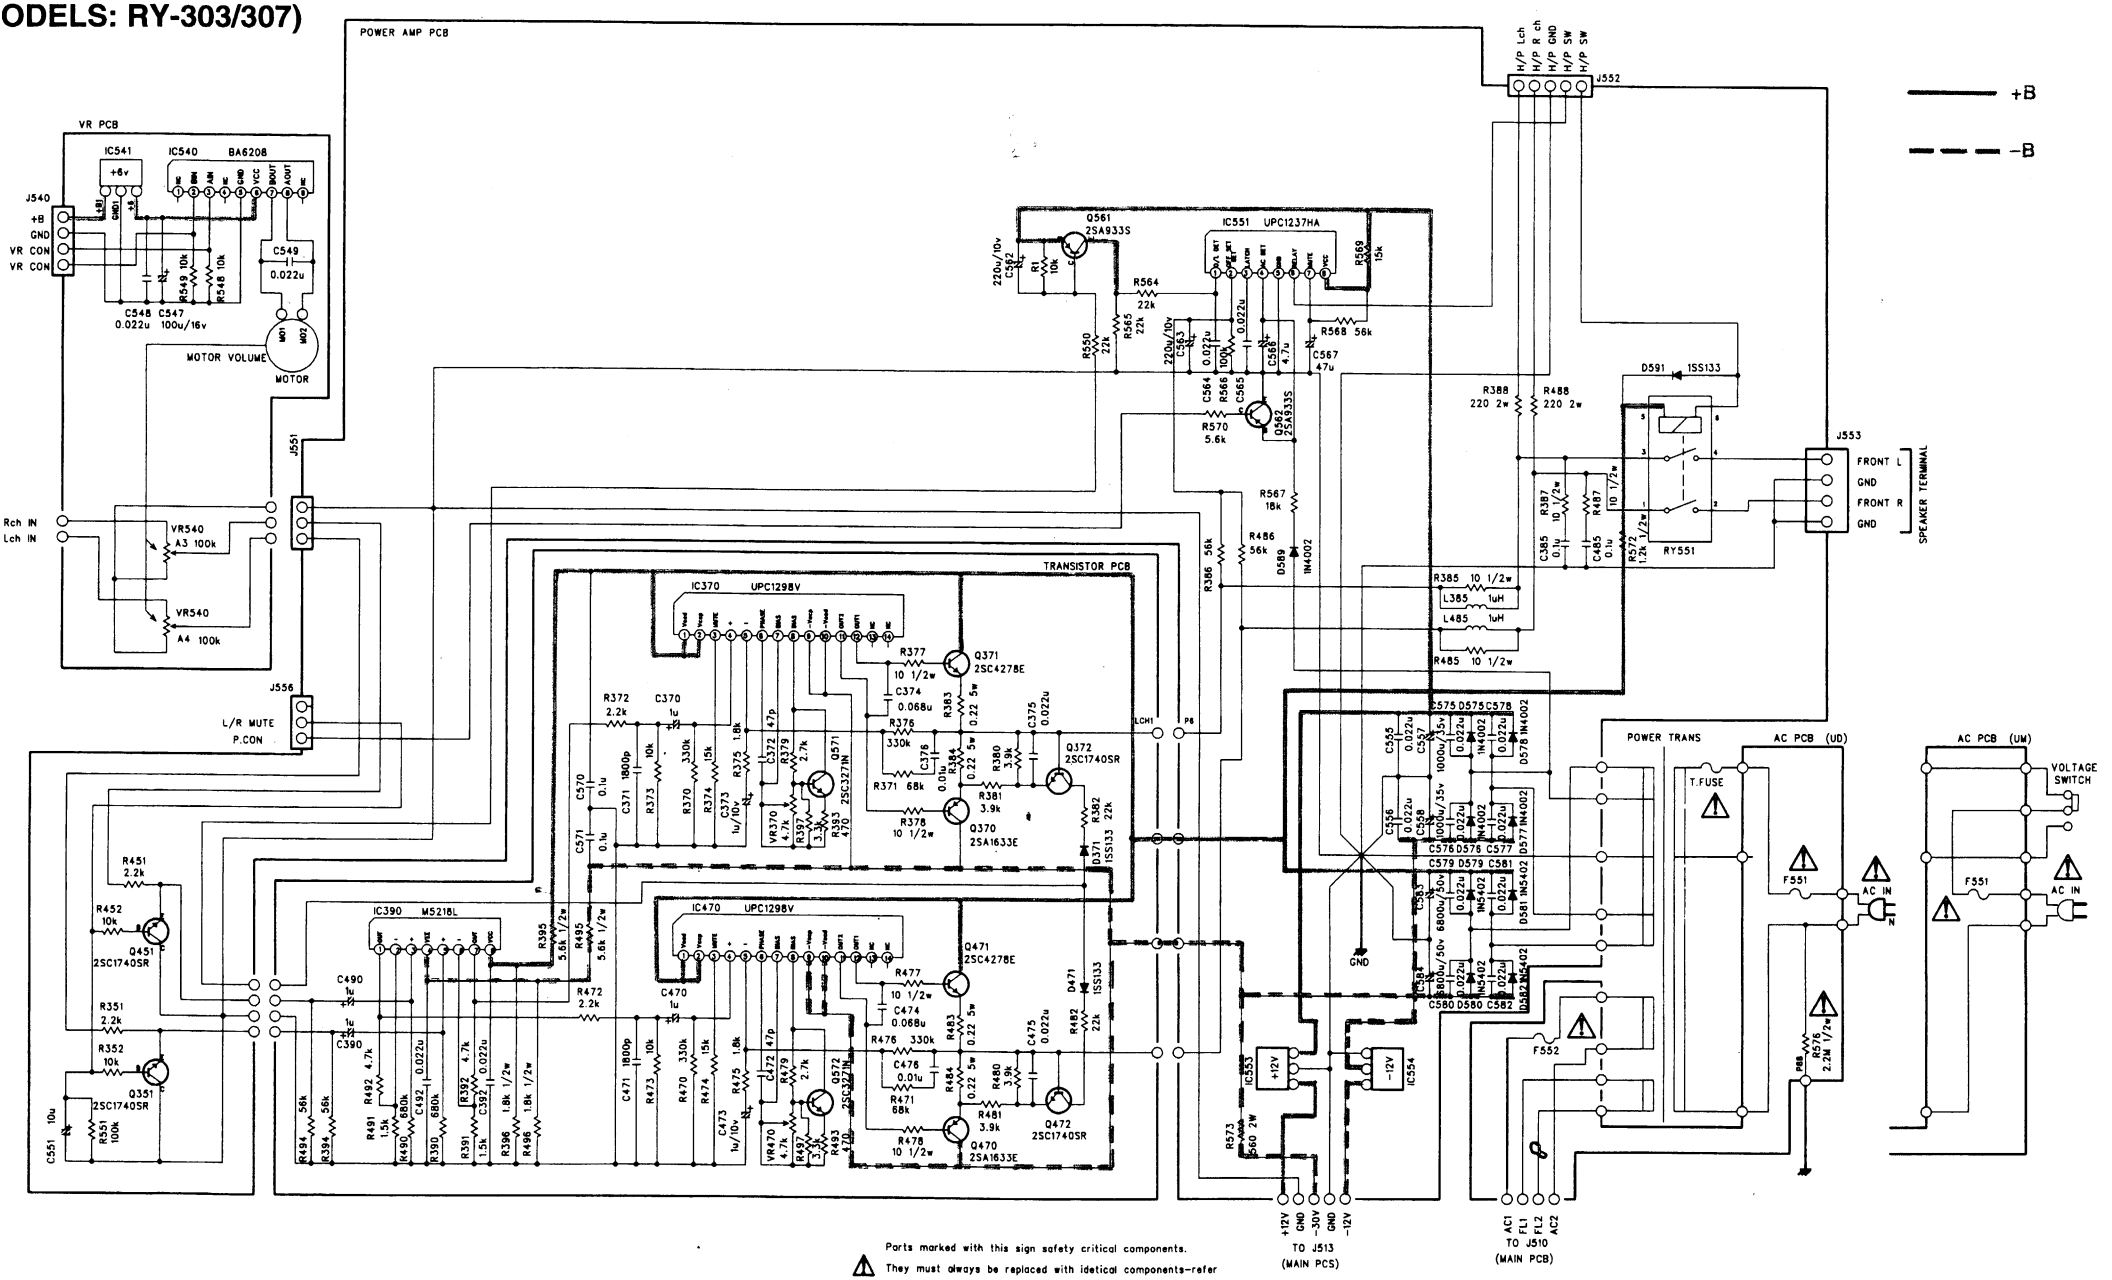

⚠ Parts marked with this sign safety critical components. They must always be replaced with idetical components–refer to the appropriats parts list and ensure exact replasement.

FUSE LIST		
	RY–303	RY–307
F551	T 4A L 125V	T 4A L 250V
F552	T 2.5A L 250V	

SCHEMATIC DIAGRAMS (POWER AMP SECTION) (MODELS: RY-505/507/707)

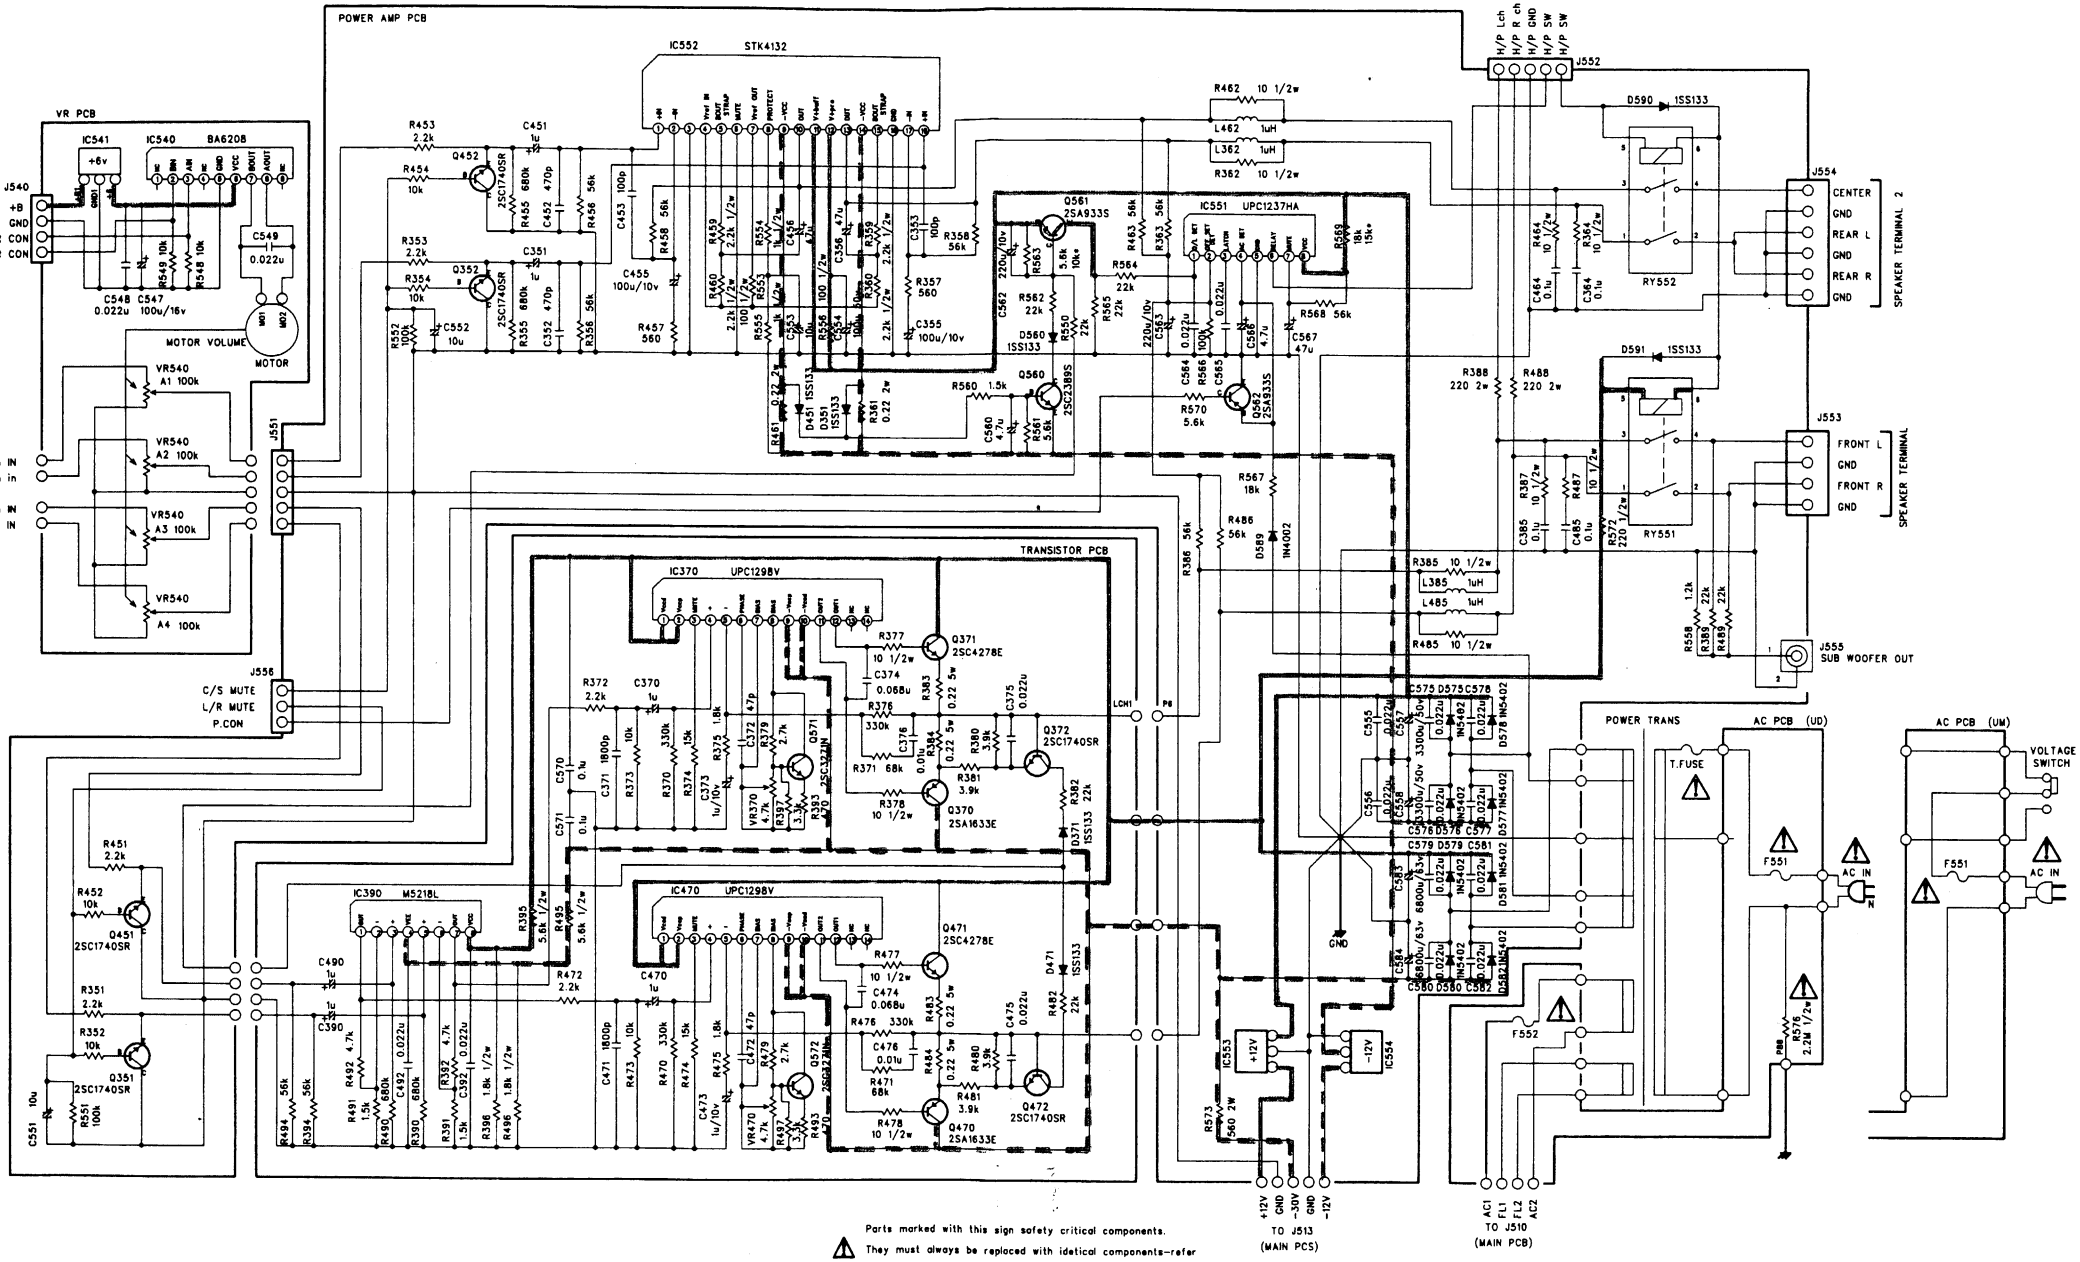

⚠ Parts marked with this sign safety critical components.
They must always be replaced with idetical components—refer to the appropriats parts list and ensure exact replasement.

FUSE LIST				
	RY-505	RY-507	RY-707UD	RY-707UM
F551	T 4A L 125V	T 4A L 250V	T 5A L 125V	T 5A L 250V
F552	T 2.5A L 250V			