
Pioneer *sound.vision.soul*

Service Manual

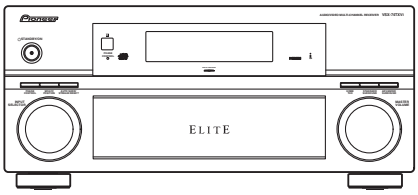

VSX-74TXVi

ORDER NO.
RRV3197

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-74TXVi
VSX-74TXVi-S
VSX-72TXV
VSX-72TXV-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-74TXVi	KUXJ/CA	AC120V	
VSX-74TXVi-S	KUXJC	AC120V	
VSX-72TXV	KUXJ/CA	AC120V	
VSX-72TXV-S	KUXJC	AC120V	

For details, refer to "Important Check Points for Good Servicing".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
ⓒ**PIONEER CORPORATION 2005**

T-ZZK SEPT. 2005 printed in Japan

SAFETY INFORMATION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

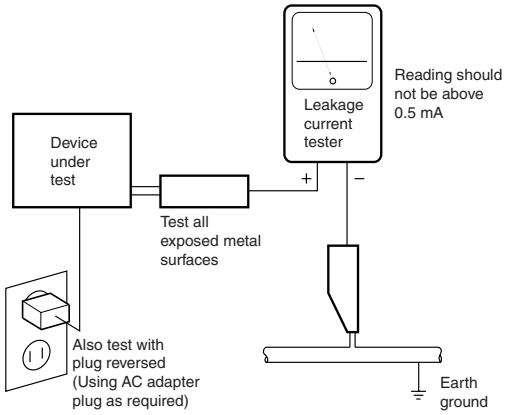

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

SAFETY INFORMATION 2
1. SPECIFICATIONS 6
2. EXPLODED VIEWS AND PARTS LIST 8
2.1 PACKING 8
2.2 EXTERIOR 10
2.3 CHASSIS SECTION 12
2.4 REAR PANEL SECTION 14
2.5 POWER AMP BLOCK 16
2.6 FRONT PANEL SECTION 18
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM 20
3.1 BLOCK DIAGRAM 20
3.1.1 OVERALL BLOCK DIAGRAM 20
3.1.2 COMPOSITE V BLOCK DIAGRAM 22
3.1.3 S-VIDEO BLOCK DIAGRAM 23
3.1.4 COMPONENT &VOL BLOCK DIAGRAM 24
3.1.5 DSP BLOCK DIAGRAM 25
3.1.6 HDMI & DVC BLOCK DIAGRAM 26
3.1.7 MICROCOMPUTER BLOCK DIAGRAM 27
3.2 OVERALL WIRING CONNECTION DIAGRAM 28
3.3 AUDIO & MULTI CH IN ASSY 30
3.4 V-AUDIO ASSY 32
3.5 FRONT-IN and HEADPHONE ASSYS 34
3.6 BRIDGE1, BRIDGE2, TRANS SIDE and BRIDGE3 ASSYS 36
3.7 COMPOSITE V ASSY 38
3.8 S-VIDEO ASSY 40
3.9 COMPONENT & VOL ASSY (1/4) 42
3.10 COMPONENT & VOL ASSY (2/4) 44
3.11 COMPONENT & VOL ASSY (3/4) 46
3.12 COMPONENT & VOL ASSY (4/4) 48
3.13 DIGITAL MOTHER ASSY (1/8) 50
3.14 DIGITAL MOTHER ASSY (2/8) 52
3.15 DIGITAL MOTHER ASSY (3/8) 54
3.16 DIGITAL MOTHER ASSY (4/8) 56
3.17 DIGITAL MOTHER ASSY (5/8) 58
3.18 DIGITAL MOTHER ASSY (6/8) 60
3.19 DIGITAL MOTHER ASSY (7/8) 62
3.20 DIGITAL MOTHER ASSY (8/8) 64
3.21 DSP ASSY (1/2) 66
3.22 DSP ASSY (2/2) 68
3.23 INTERFACE ASSY 70
3.24 POWER AMP IN and POWER PROTECT ASSYS 72
3.25 POWER AMP L ASSY 74
3.26 POWER AMP R ASSY 76
3.27 LOCAL SUPPLY and DC/DC ASSYS 78
3.28 TRANS2-1, VH-TR, DIODE and SP/PS ASSYS 80
3.29 TRANS2-2, TRANS1 and PRIMARY ASSYS 82
3.30 VOLUME, DISPLAY and INPUT SELECT ASSYS 84
3.31 PREOUT & CONTROL ASSY 86
3.32 1394 ASSY (1/2) 88
3.33 1394 ASSY (2/2) 90
3.34 HDMI&DVC ASSY (1/2) 92
3.35 HDMI&DVC ASSY (2/2) 94
4. PCB CONNECTION DIAGRAM 96
4.1 PRIOUT&CONTROL ASSY 97
4.2 AUDIO&MULTI CH IN ASSY 98
4.3 V-AUDIO ASSY 99
4.4 HEAD PHONE and FRONT-IN ASSYS 100
4.5 BRIDGE1 and BRIDGE2 ASSYS 101
4.6 TRANS SIDE and BRIDGE3 ASSYs 102
4.7 COMPOSITE V ASSYS 104
4.8 S-VIDEO ASSY 105
4.9 COMPONENT&VOL ASSY 106
4.10 DIGITAL MOTHER ASSY 110
4.11 DSP ASSY 114
4.12 INTERFACE ASSY 116

4.13 POWER AMP IN ASSY 120
4.14 POWER PROTECT ASSY 121
4.15 POWER AMP L and POWER AMP R ASSYS 122
4.16 LOCAL SUPPLY and DC/DC ASSYS 126
4.17 TRANS2-1, VH TR, DIODE and TRANS2-2 ASSYS 128
4.18 SP/PS ASSY 130
4.19 TRANS1 and PRIMARY ASSYS 132
4.20 VOLUME, DISPLAY and INPUT SELECT ASSYS 134
4.21 HDMI&DVC ASSY 138
4.22 1394 ASSY 140
5. PCB PARTS LIST 141
6. ADJUSTMENT 188
7. GENERAL INFORMATION 189
7.1 DIAGNOSIS 189
7.1.1 TEST MODE 189
7.1.2 PROTECTION CIRCUIT SPECIFICATION 192
7.1.3 TROUBLESHOOTING THE DSP BLOCK 194
7.1.4 DIAGNOSIS OF THE HDMI BLOCK AND RELATED SYSTEMS 202
7.1.5 DIAGNOSIS OF THE 1394 ASSY 218
7.1.6 iPod INFORMATION 223
7.1.7 XM RADIO INFORMATION 225
7.1.8 HOW TO UPDATE THE DSP FLASH ROM BY PLAYING BACK A CD 226
7.1.9 HOW TO UPDATE THE FLASH ROMS FOR VARIOUS MICROCOMPUTERS 229
7.1.10 DISASSEMBLY 230
7.1.11 HOW TO DIAGNOSE THE PRODUCT WITH THE POWER AMP BLOCK REMOVED 237
7.1.12 FAILURE DIAGNOSIS OF THE POWER AMP BLOCK 239
7.2 PARTS 240
7.2.1 IC 240
8. PANEL FACILITIES 272

1. SPECIFICATIONS

Specifications

Amplifier section

Continuous average power output of 140 (or 130) watts* per channel, min., at 8 ohms, from 20 Hz to 20,000 Hz with no more than 0.09% total harmonic distortion (front).**

Continuous Power Output (20Hz-20kHz, 8Ω, 0.09%)

Front . . . . . 130 W + 130 W (72TXV)
140 W + 140 W (74TXVi)
Center . . . . . 130 W (72TXV), 140 W (74TXVi)
Surround . . . . . 130 W + 130 W (72TXV)
140 W + 140 W (74TXVi)
Surround back . . . . . 130 W + 130 W (72TXV)
140 W + 140 W (74TXVi)

Continuous Power Output (1 kHz, 6 Ω, 1.0%)

Front . . . . . 160 W + 160 W (72TXV)
180 W + 180 W (74TXVi)
Center . . . . . 160 W (72TXV), 180 W (74TXVi)
Surround . . . . . 160 W + 160 W (72TXV)
180 W + 180 W (74TXVi)
Surround back . . . . . 160 W + 160 W (72TXV)
180 W + 180 W (74TXVi)

Total harmonic distortion 0.05%
(20 Hz-20 kHz, 120 W, 8 Ω) (72TXV)
(20 Hz-20 kHz, 130 W, 8 Ω) (74TXVi)

Audio Section

Input (Sensitivity/Impedance)
LINE . . . . . 335 mV/47 kΩ
Frequency Response (LINE) . . . . . .
5 Hz to 100,000 Hz $^{+0}_{-3}$ dB
Output (Level/Impedance)
REC . . . . . 335 mV/2.2 kΩ
Tone Control
BASS . . . . . ± 6 dB (100 Hz)
TREBLE . . . . . ± 6 dB (10 kHz)
LOUDNESS . . . . . +4/+2 dB (100Hz/10 kHz)
(at volume position -40 dB)
Signal-to-Noise Ratio (IHF, short circuited, A network)
LINE . . . . . 103 dB
Signal-to-Noise Ratio [EIA, at 1W (1kHz)]
LINE . . . . . 83 dB

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers
** Measured by Audio Spectrum Analyzer

Composite Video / S-Video Section

Input (Sensitivity/Impedance) . . . . . 1 Vp-p/75 Ω
Output (Level/Impedance) . . . . . 1 Vp-p/75 Ω
Signal-to-Noise Ratio . . . . . 65 dB
Frequency Response . . . . . 5 Hz to 10 MHz

Component Video Section

Input (Sensitivity/Impedance) . . . . . 1 Vp-p/75 Ω
Output (Level/Impedance) . . . . . 1 Vp-p/75 Ω
Signal-to-Noise Ratio . . . . . 65 dB
Frequency Response . . . . . 5 Hz to 100 MHz

FM Tuner Section

Frequency Range . . . . . 87.5 MHz to 108 MHz
Usable Sensitivity . . . . . .
Mono: 13.2 dBf, IHF (1.3 μV/75 Ω)
50 dB Quieting Sensitivity . . . . . Mono: 20.2 dBf
Stereo: 38.6 dBf
Signal-to-Noise Ratio . . . . Mono: 73 dB (at 85 dBf)
Stereo: 70 dB (at 85 dBf)
Distortion . . . . . Stereo: 0.5% (1 kHz)
Alternate Channel Selectivity . . . . 60 dB (400 kHz)
Stereo Separation . . . . . 40 dB (1 kHz)
Frequency Response . . . . 30 Hz to 15 kHz ± 1dB
Antenna Input . . . . . 75 Ω unbalanced

AM Tuner Section

Frequency Range . . . . . 530 kHz to 1,700 kHz
Sensitivity (IHF, Loop antenna) . . . . . 350 μV/m
Selectivity . . . . . 25 dB
Signal-to-Noise Ratio . . . . . 50 dB
Antenna . . . . . Loop antenna

Miscellaneous

Power Requirements . . . . . AC 120 V, 60 Hz
Power Consumption . . . . . 530 W, 690 VA
In standby . . . . . Less than 0.6 W
AC Outlet . . . . . (switched) 100 W MAX.
Dimensions . . . . . 420 (W) x 187 (H) x 462 (D) mm
($16^{9}/_{16}$ (W) x $7^{3}/_{8}$(H) x $18^{1}/_{4}$(D)in.)
Weight (without package) . . . . . .
16.0 kg (35.3 lb) (74TXVi)
15.9 kg (35.1 lb) (72TXV)

Furnished Parts

Setup microphone (for Auto MCACC setup) 1
AA/IEC R6P dry cell batteries 2
Remote control unit 1
AM loop antenna 1
FM wire antenna 1
Audio control cable for iPod 1
Warranty card 1
Operating instructions
Operating instructions (Audio control cable for iPod)
Caution Sheet SP, E

Note

- Specifications and the design are subject to possible modifications without notice, due to improvements.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "Surround EX", and the double-D symbol are trademarks of Dolby Laboratories.


"DTS", "DTS-ES", "Neo:6" and "DTS 96/24" are trademarks of Digital Theater Systems, Inc.

The THX logo is a trademark of THX Ltd. which may be registered in some jurisdictions. All rights reserved.


● Accessories




AM Loop Antenna
(ATB7013)




FM Wire Antenna
(ADH7030)

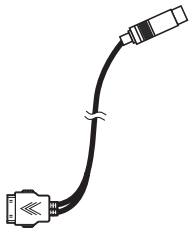


Audio Control Cable for iPod
(ADE7119)

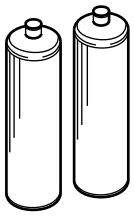

AA/IEC R6P Dry Cell Batteries
(VEM1031)

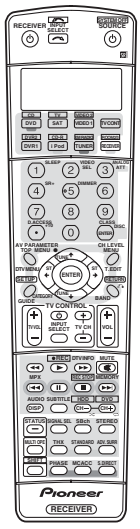

Remote Control Unit
(AXD7409)

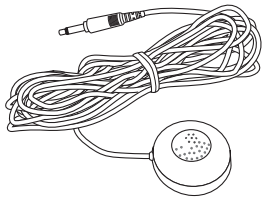


Setup Microphone
(for Auto MCACC setup)
(APM7006)

2. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

2.1 PACKING

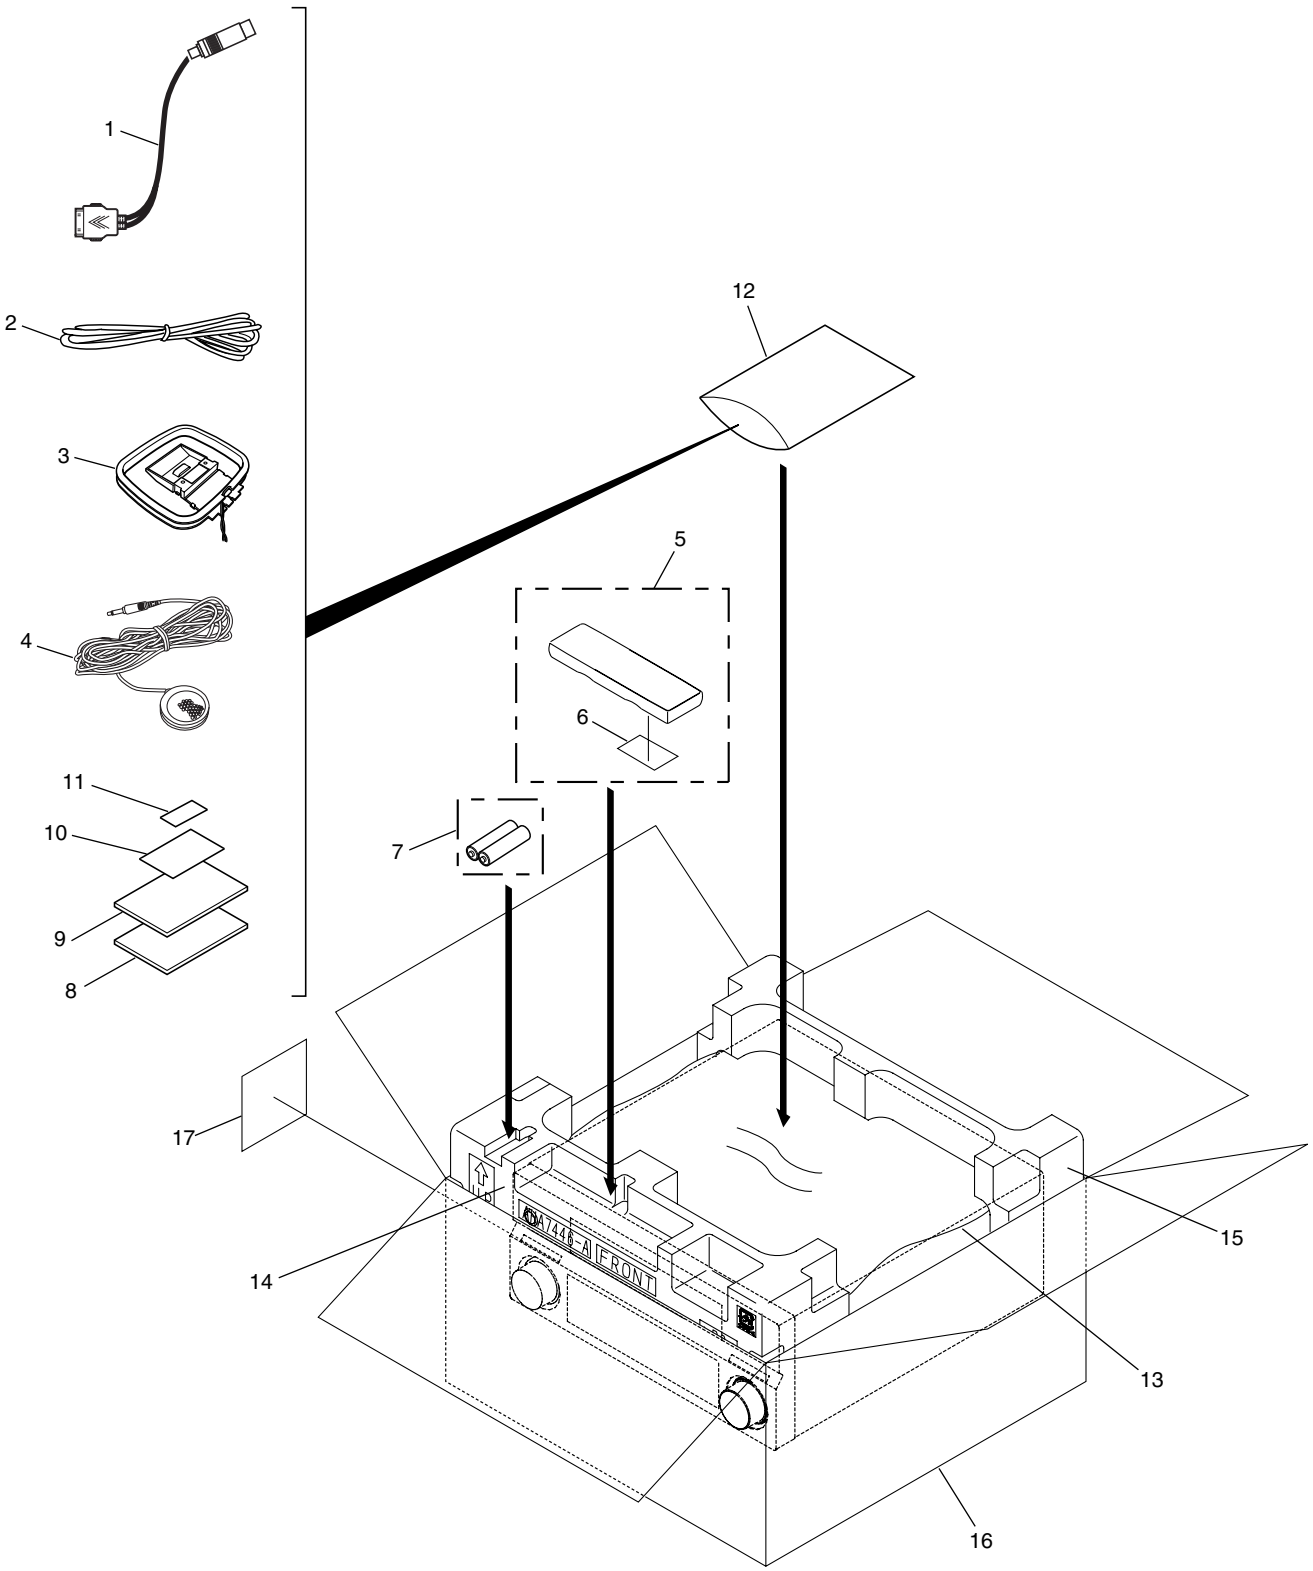

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Audio Control Cable for iPod	ADE7119
	2	FM Wire Antenna	ADH7030
	3	AM Loop Antenna	ATB7013
	4	Setup Microphone (for Auto MCACC setup)	APM7006
	5	Remote Control Unit	AXD7409
	6	Battery Cover	XZN3140
NSP	7	AA/IEC R6P Dry Cell Batteries	VEM1031
	8	Operating Instructions (English)	ARB7334
	9	Operating Instructions (Audio Control Cable for iPod)	ARE7600
	10	Caution Sheet SP, E	ARM7056
NSP	11	Warranty Card	ARY7007
NSP	12	Polyethylene Bag	AHG7117
	13	Packing Sheet	RHC1023
	14	Front Pad 74	AHA7446
	15	Rear Pad 74	AHA7447
	16	Packing Case	See Contrast table (2)
	17	iPod Label	ARW7332

(2) CONTRAST TABLE

VSX-74TXVi/KUXJ/CA, VSX-74TXVi-S/KUXJC, VSX-72TXV/KUXJ/CA and VSX-72TXV-S/KUXJC are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-74TXVi /KUXJ/CA	VSX-74TXVi-S /KUXJC	VSX-72TXV /KUXJ/CA	VSX-72TXV-S /KUXJC
	16	Packing Case	AHD8418	AHD8420	AHD8419	AHD8421

2.2 EXTERIOR

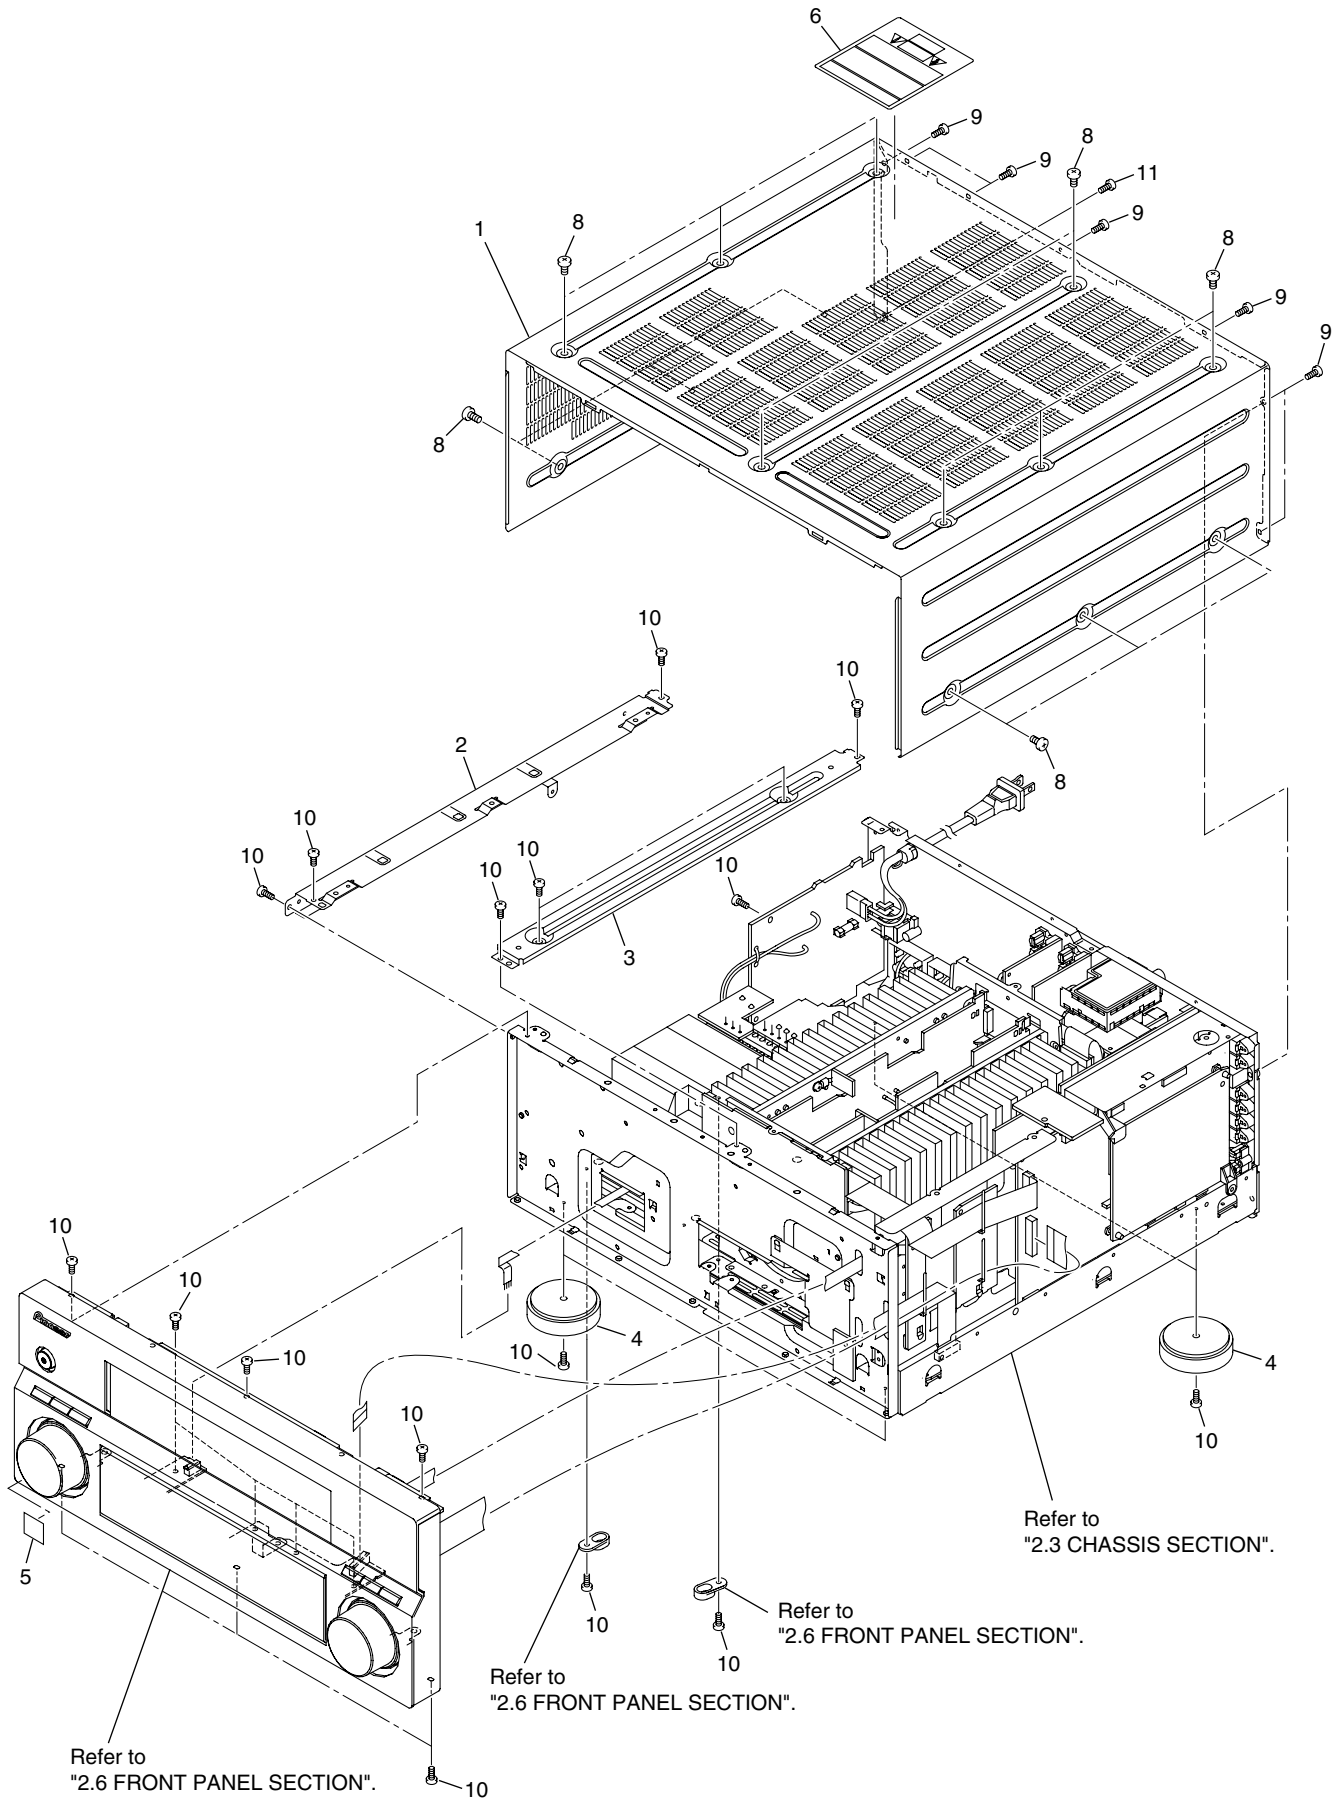
Refer to
"2.3 CHASSIS SECTION".
Refer to
"2.6 FRONT PANEL SECTION".
Refer to
"2.6 FRONT PANEL SECTION".
Refer to
"2.6 FRONT PANEL SECTION".

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Bonnet	See Contrast table (2)
	2	Left Beam 45	ANG7401
	3	Center Beam V1	ANG7482
	4	Insulator	AMR7198
NSP	5	Energy Star Label	AAX8022
	6	Label (DD/DTS/THX)	ARW7320
	7	••••••	
	8	Screw	See Contrast table (2)
	9	Screw	BBZ30P060FCC
	10	Screw	BBZ30P080FCC
	11	Screw	IBP30P090FCC

(2) CONTRAST TABLE

VSX-74TXVi/KUXJ/CA, VSX-74TXVi-S/KUXJC, VSX-72TXV/KUXJ/CA and VSX-72TXV-S/KUXJC are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-74TXVi /KUXJ/CA	VSX-74TXVi-S /KUXJC	VSX-72TXV /KUXJ/CA	VSX-72TXV-S /KUXJC
	1	Bonnet 74B	AZN8006	Not used	AZN8006	Not used
	1	Bonnet AX4S	Not used	AZN8008	Not used	AZN8008
	8	Screw	BCZ40P060FTB	BCZ40P060FNI	BCZ40P060FTB	BCZ40P060FNI

2.3 CHASSIS SECTION

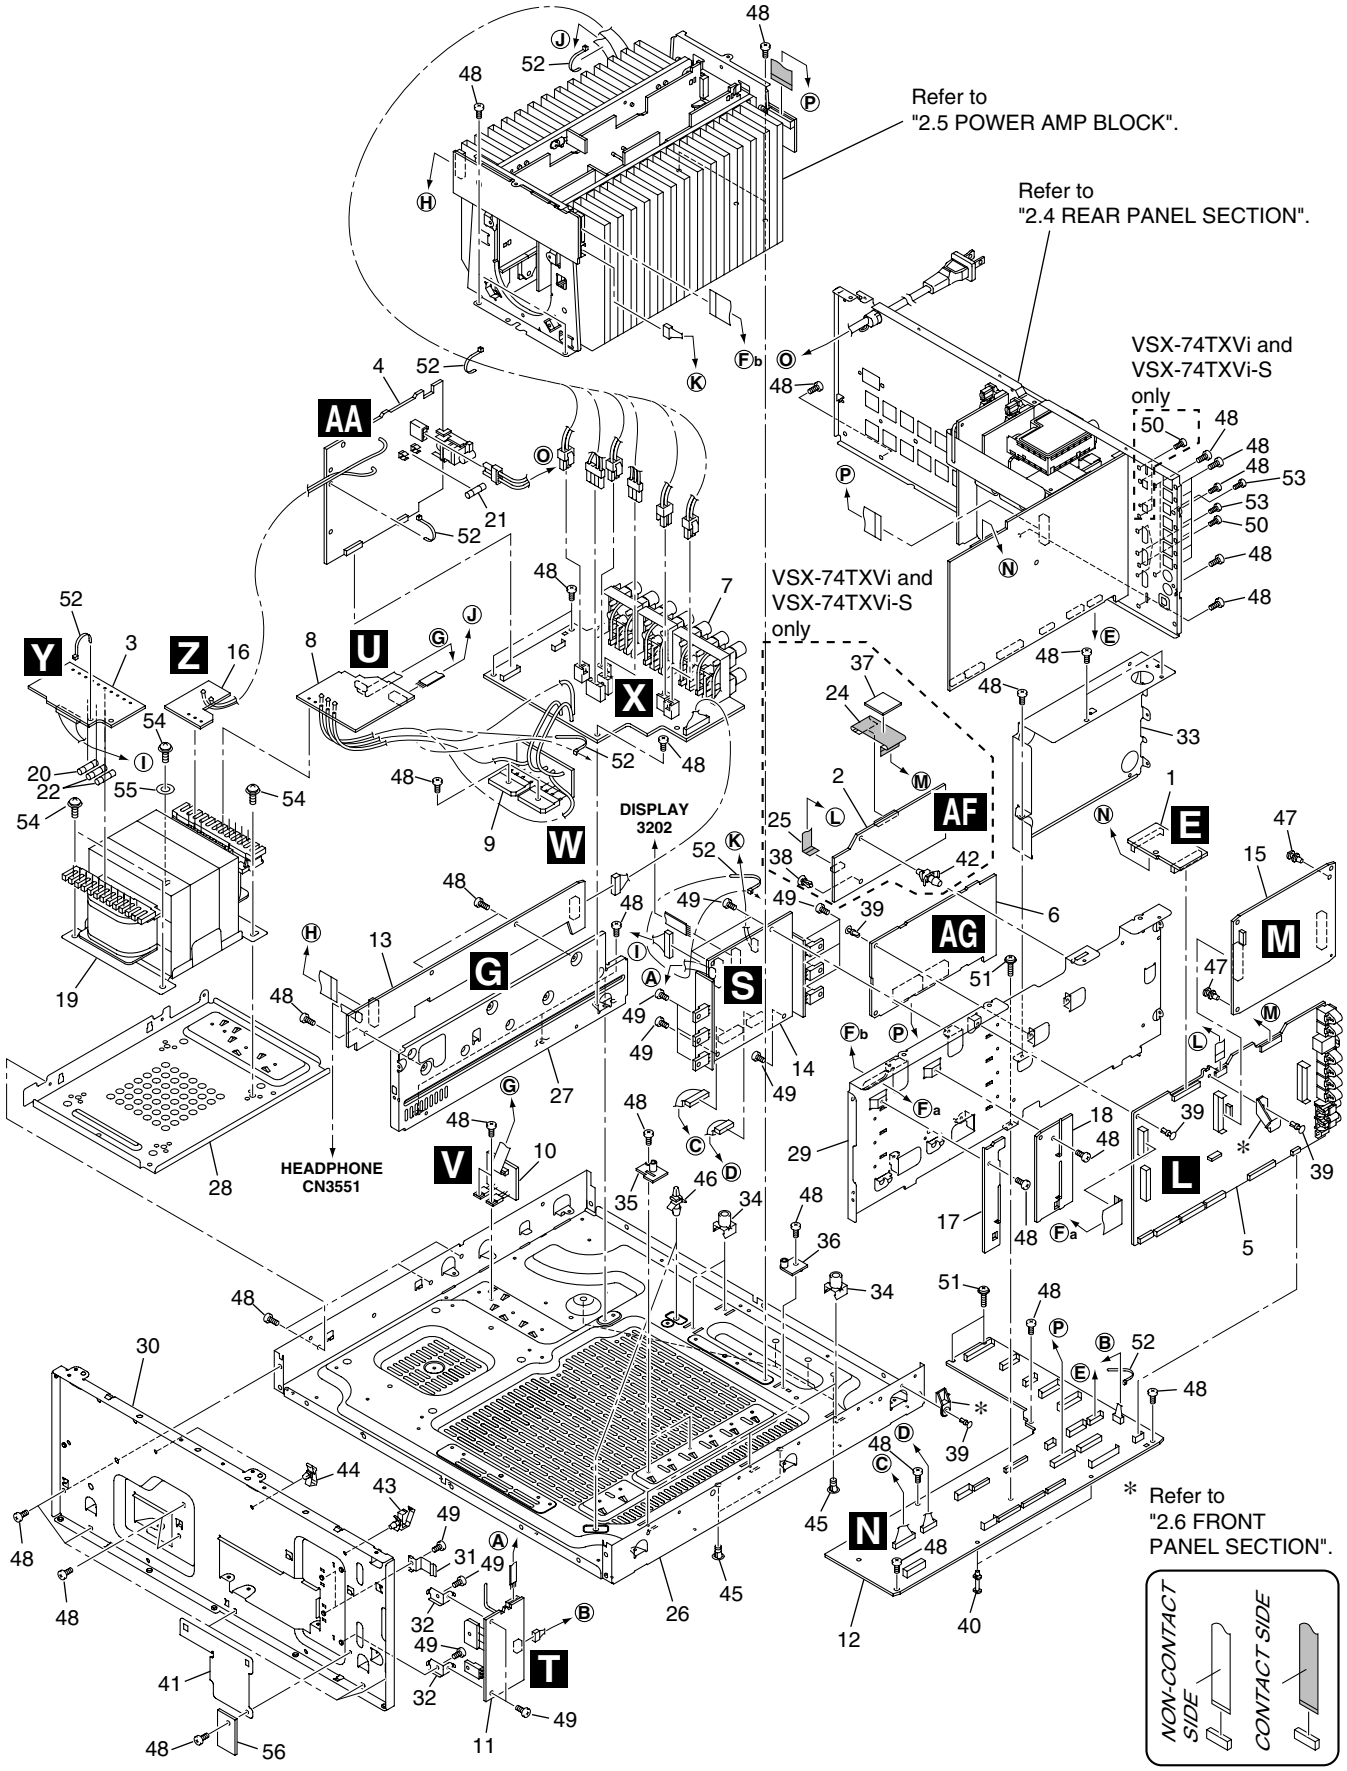

(1) CHASSIS SECTION PARTS LIST


Mark	No.	Description	Part No.
NSP	1	BRIDGE 1 Assy	AWX8667
	2	1394 Assy	See Contrast table (2)
	3	TRANS 2-2 Assy	AWX8626
	4	PRIMARY Assy	AWX8628
	5	DIGITAL MOTHER Assy	See Contrast table (2)
	6	HDMI & DVC Assy	AWQ7024
	7	SP/PS Assy	See Contrast table (2)
	8	TRANS 2-1 Assy	AWX8646
NSP	9	DIODE Assy	AWX8648
	10	VH TR Assy	AWX8649
	11	DC/DC Assy	AWX8650
	12	INTERFACE Assy	AWX8651
NSP	13	TRANS SIDE Assy	AWX8652
	14	LOCAL SUPPLY Assy	AWX8671
	15	DSP Assy	AWX8599
	16	TRANS 1 Assy	•••••
NSP	17	FFC Guard (Front) Assy	AWX8634
NSP	18	FFC Guard (Side) Assy	AWX8696
⚠	19	Power Transformer (T1501)	ATS7402
⚠	20	Fuse (FU4 : 5A/125V)	REK1067
⚠	21	Fuse (FU1 : 10A/125V)	REK1087
⚠	22	Fuse (FU5, 6 : 1.25A/125V)	REK1108
⚠	23	Fuse (FU7, 8 : 2.5A/125V)	REK1112
	24	22P Flexible Cable (J52)	See Contrast table (2)
	25	10P Flexible Cable (J53)	See Contrast table (2)
NSP	26	Under Base 72	ANA7182
	27	Under Beam V1	ANG7478
NSP	28	Trans. Frame 74	ANG7539
NSP	29	DSP Shield 74	ANG7540
NSP	30	Panel Stay 74	ANG7541
NSP	31	Transistor Holder	ANG7543
NSP	32	DC Assy Holder	ANG7544
NSP	33	HDMI Shield	ANK7124
	34	PCB Mold	AMR2534
	35	Inter Holder A	AMR7500
	36	Inter Holder B	AMR7501
	37	Shield Cushion	See Contrast table (2)
	38	Nyron Rivet	See Contrast table (2)
	39	Nyron Rivet	AEC7408
	40	Card Spacer	AEC7502
NSP	41	FR IN Barrier	AEC7538
	42	Locking Card Spacer	See Contrast table (2)
	43	Locking Wire Saddle	AEC7550
	44	Side Clamp	DEC2007
	45	Card Spacer	DNK2769
	46	Locking Card Spacer	PNW2917
	47	PC Support	VEC1508
	48	Screw	BBZ30P080FCC
	49	Screw	BBZ30P060FCC
	50	Screw	BBZ26P080FCC
	51	Screw 3 x 15	ABA7100
NSP	52	Binder (BK-1)	ZCA-BK1
	53	Screw	PMZ30P060FCC
	54	Screw	ABA7125
	55	Washer	WH40FNI
NSP	56	Barrier Holder	••••••

(2) CONTRAST TABLE

VSX-74TXVi/KUXJ/CA, VSX-74TXVi-S/KUXJC, VSX-72TXV/KUXJ/CA and VSX-72TXV-S/KUXJC are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-74TXVi /KUXJ/CA	VSX-74TXVi-S /KUXJC	VSX-72TXV /KUXJ/CA	VSX-72TXV-S /KUXJC
	2	1394 Assy	AWK7882	AWK7882	Not used	Not used
	5	DIGITAL MOTHER Assy	AWP7037	AWP7037	AWP7041	AWP7041
	7	SP/PS Assy	AWX8642	AWX8642	AWX8644	AWX8644
	24	22P Flexible Cable (J52)	ADD7517	ADD7517	Not used	Not used
	25	10P Flexible Cable (J53)	ADD7518	ADD7518	Not used	Not used
	37	Shield Cushion	AEB7372	AEB7372	Not used	Not used
	38	Nyron Rivet	AEC7406	AEC7406	Not used	Not used
	42	Locking Card Spacer	AEC7549	AEC7549	Not used	Not used

2.4 REAR PANEL SECTION

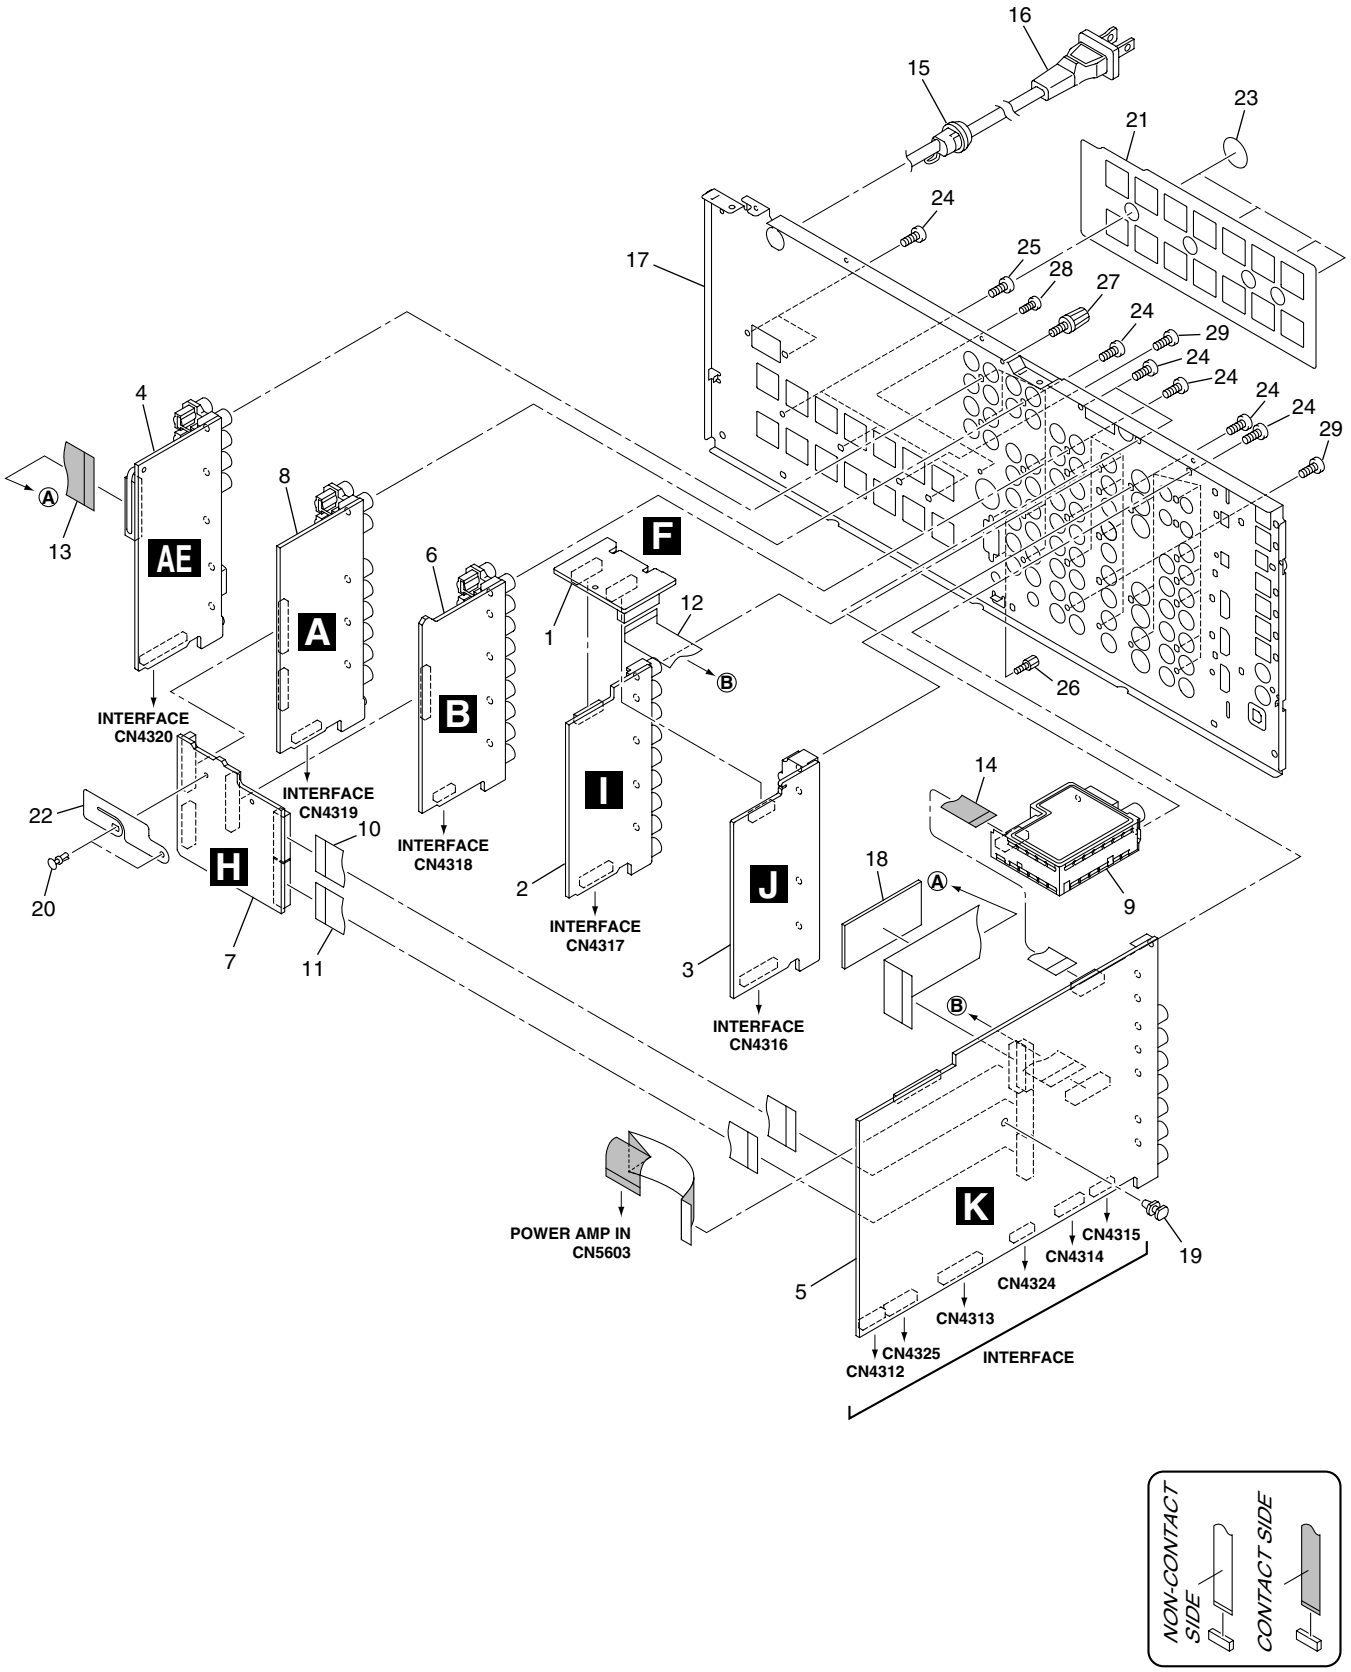

(1) REAR PANEL SECTION PARTS LIST


Mark	No.	Description	Part No.
NSP	1	BRIDGE 2 Assy	AWX8668
	2	COMPOSITE V Assy	AWX8620
	3	S VIDEO Assy	AWX8622
	4	PREOUT & CONTROL Assy	AWX8625
	5	COMPONENT & VOL Assy	See Contrast table (2)
	6	V-AUDIO Assy	AWX8637
NSP	7	BRIDGE 3 Assy	AWX8669
	8	AUDIO & MULTI CH IN Assy	AWX8674
	9	FM/AM TUNER Unit	AXX7172
	10	19P Flexible Cable (J45)	ADD7511
	11	17P Flexible Cable (J46)	ADD7512
	12	17P Flexible Cable (J47)	ADD7513
	13	26P Flexible Cable (J48)	ADD7514
	14	11P Flexible Cable (J54)	ADD7519
	15	Cord Stopper	CM-22C
⚠	16	Power Cord	VDG1075
	17	Rear Panel	See Contrast table (2)
	18	FFC Cushion	AEB7373
NSP	19	PCB Spacer (3 x 6)	AEC7156
	20	Nyron Rivet	AEC7408
	21	SP Sheet 74	AEC7537
NSP	22	Connect Barrier	AEC7541
	23	Cushion Circle 16B	AED7052
	24	Screw	BBZ30P080FCC
	25	Screw	BBZ30P100FCC
	26	Screw 2.85 x 7	ABA7078
	27	Terminal Screw	AKE-031
	28	Screw	BBZ26P080FCC
	29	Screw	BBT30P100FCC


(2) CONTRAST TABLE

VSX-74TXVi/KUXJ/CA, VSX-74TXVi-S/KUXJC, VSX-72TXV/KUXJ/CA and VSX-72TXV-S/KUXJC are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-74TXVi /KUXJ/CA	VSX-74TXVi-S /KUXJC	VSX-72TXV /KUXJ/CA	VSX-72TXV-S /KUXJC
	5	COMPONENT & VOL Assy	AWQ7028	AWQ7028	AWQ7030	AWQ7030
	17	Rear Panel 74KU	ANC8324	Not used	Not used	Not used
	17	Rear Panel 74SKU	Not used	ANC8366	Not used	Not used
	17	Rear Panel 72KU	Not used	Not used	ANC8325	Not used
	17	Rear Panel 72SKU	Not used	Not used	Not used	ANC8367

2.5 POWER AMP BLOCK

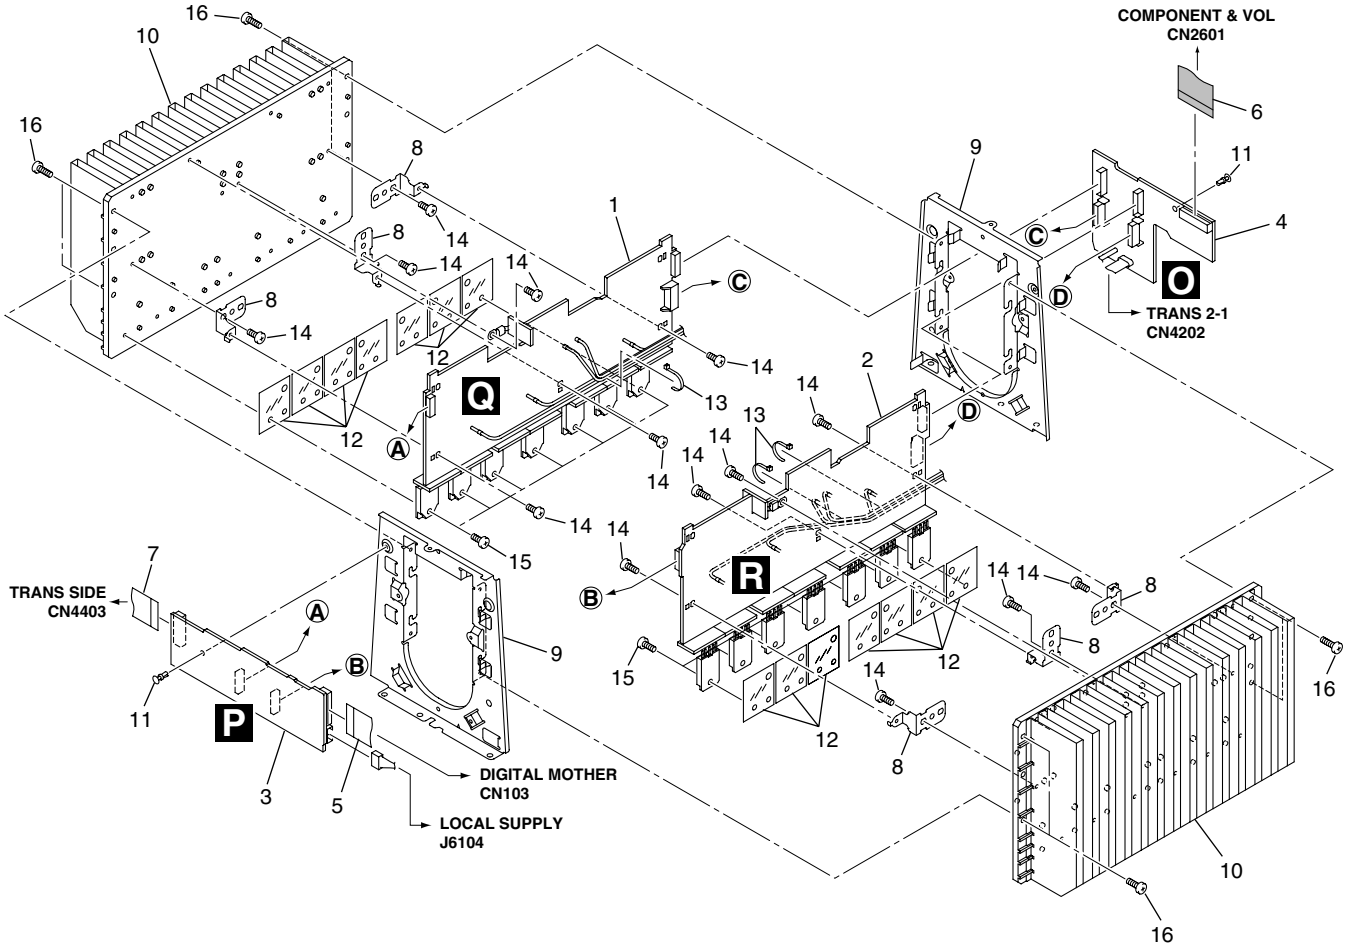


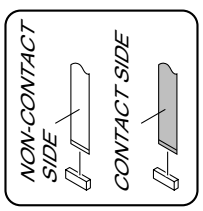



POWER AMP BLOCK PARTS LIST

Mark	No.	Description	Part No.
	1	POWER AMP-L Assy	AWX8654
	2	POWER AMP-R Assy	AWX8656
	3	POWER PROTECT Assy	AWX8658
	4	POWER AMP IN Assy	AWX8662
	5	19P Flexible Cable (J43)	ADD7509
	6	19P Flexible Cable (J44)	ADD7510
	7	17P Flexible Cable (J51)	ADD7516
	8	PCB Angle 45	ANG7406
NSP	9	HS Angle 74	ANG7542
NSP	10	Heatsink 74	ANH7181
	11	Nyron Rivet	AEC7408
	12	Mica Sheet	AEC7545
NSP	13	Binder (BK-1)	ZCA-BK1
	14	Screw	BBZ30P080FCC
	15	Screw 3 x 19	ABA7085
	16	Screw	BBT30P100FCC

2.6 FRONT PANEL SECTION

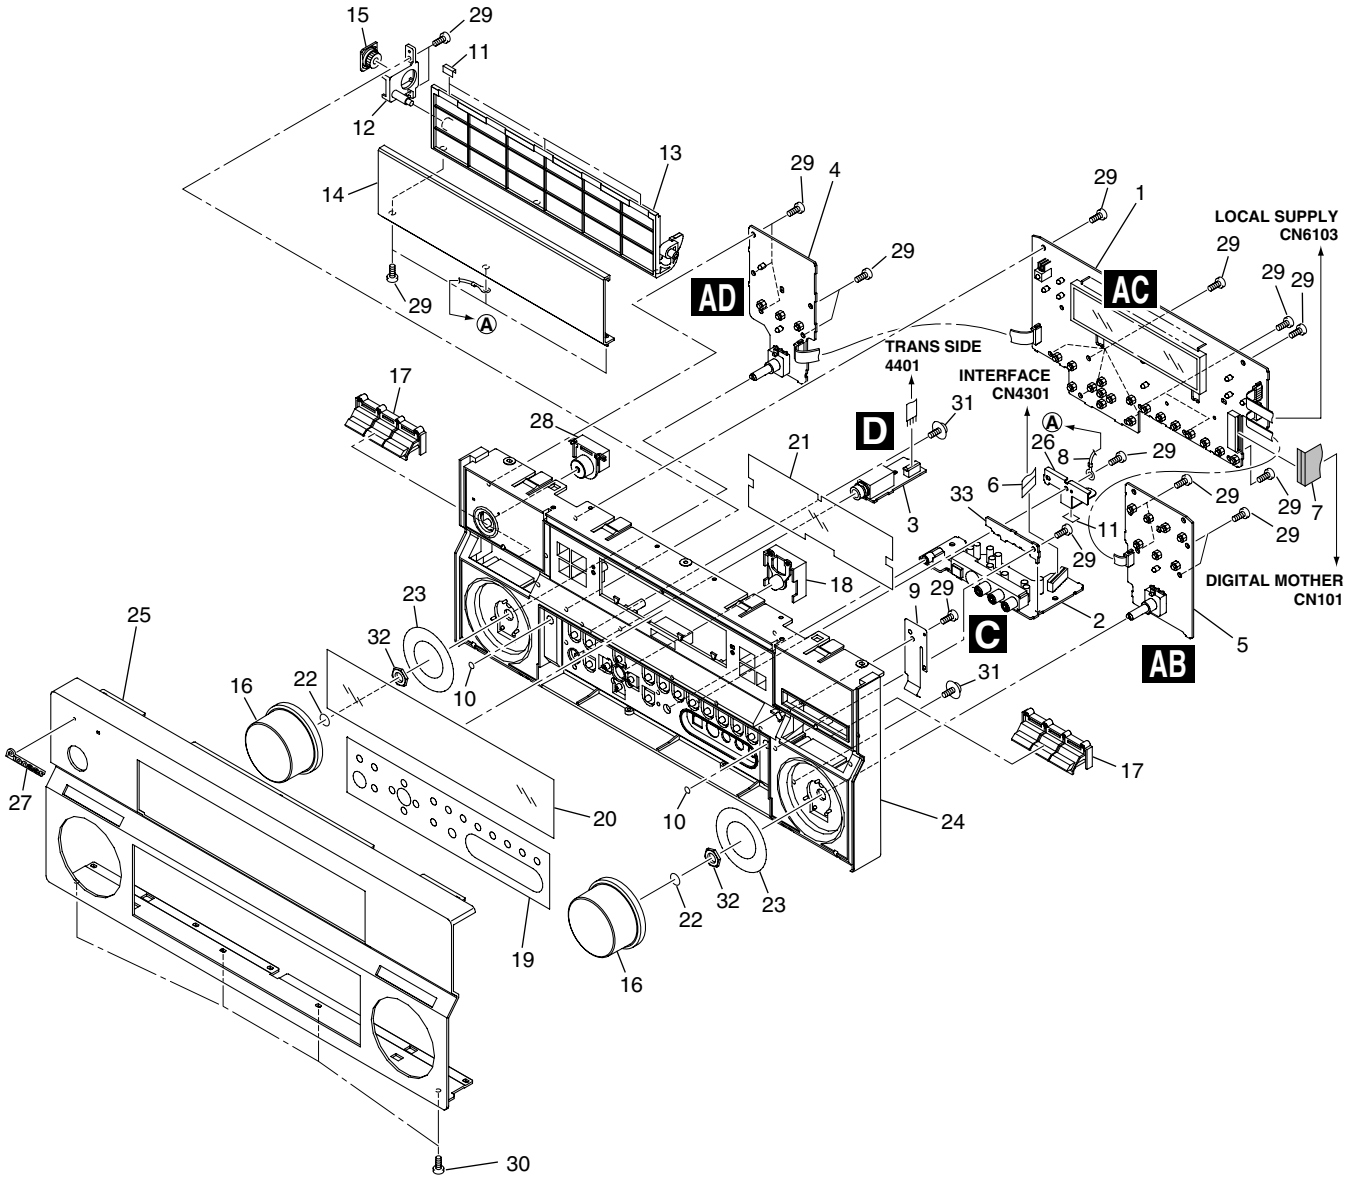

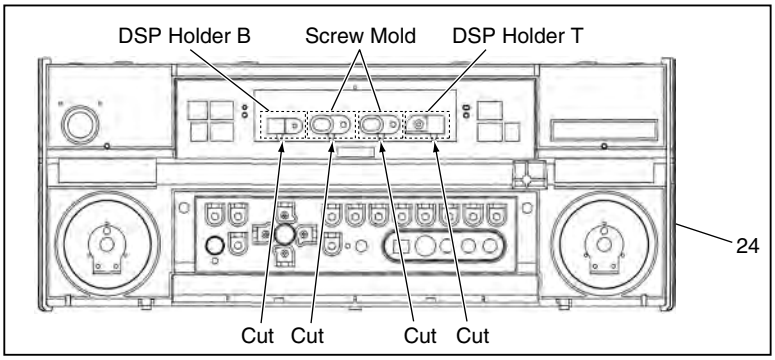

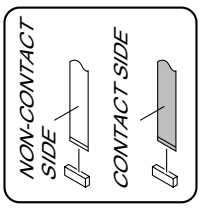

(1) FRONT PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	DISPLAY Assy	See Contrast table (2)
	2	FRONT-IN Assy	AWX8638
	3	HEADPHONE Assy	AWX8639
	4	INPUT SELECT Assy	AWX8640
	5	VOLUME Assy	AWX8641
	6	15P Flexible Cable (J41)	ADD7507
	7	23P Flexible Cable (J42)	ADD7508
NSP	8	Cord with Plug	ADH7022
	9	Door Spring	ABK7061
	10	Cushion Circle	See Contrast table (2)
	11	Cushion 11 x 7	AED7092
	12	Door Shaft 35	AMR7295
	13	Door Base	See Contrast table (2)
	14	Door Panel	See Contrast table (2)
	15	Damper Assy (200)	AXA7088
	16	Rotary Knob	See Contrast table (2)
	17	Hinge Button	See Contrast table (2)
	18	ENTER Button	See Contrast table (2)
	19	Door Sheet	See Contrast table (2)
	20	Window	See Contrast table (2)
	21	Filter	See Contrast table (2)
	22	Ring	ABH7213
	23	Knob Spacer 74	AEC7558
	24	Panel Base	See Contrast table (2)
	25	Front Panel	See Contrast table (2)
	26	Earth Plate A	ANG7484
	27	Pioneer Badge	See Contrast table (2)
	28	STBY BTN Assy	See Contrast table (2)
	29	Screw	BBZ30P080FNI
	30	Screw	See Contrast table (2)
	31	Screw	ABA7110
	32	Nut	NK90FCU
NSP	33	Front In Folder	••••••

(2) CONTRAST TABLE


VSX-74TXVi/KUXJ/CA, VSX-74TXVi-S/KUXJC, VSX-72TXV/KUXJ/CA and VSX-72TXV-S/KUXJC are constructed the same except for the following:


Mark	No.	Symbol and Description	VSX-74TXVi /KUXJ/CA	VSX-74TXVi-S /KUXJC	VSX-72TXV /KUXJ/CA	VSX-72TXV-S /KUXJC
	1	DISPLAY Assy	AWX8635	AWX8635	AWX8636	AWX8636
	10	Cushion Circle 6B	AED7083	Not used	AED7083	Not used
	10	Cushion Circle 6S	Not used	AED7080	Not used	AED7080
	13	Door Base BK	AMR7508	Not used	AMR7508	Not used
	13	Door Base S	Not used	AMR7510	Not used	AMR7510
	14	Door Panel 74	ANB7369	Not used	ANB7369	Not used
	14	Door Panel 74S	Not used	ANB7391	Not used	ANB7391
	16	Rotary Knob BK	AAA7031	Not used	AAA7031	Not used
	16	Rotary Knob S	Not used	AAA7025	Not used	AAA7025
	17	Hinge Button 74BK	AAD7744	Not used	AAD7744	Not used
	17	Hinge Button AX4S	Not used	AAD7746	Not used	AAD7746
	18	ENTER Button 74BK	AAD7747	Not used	AAD7747	Not used
	18	ENTER Button AX4S	Not used	AAD7749	Not used	AAD7749
	19	Door Sheet 74	AAK8291	Not used	AAK8291	Not used
	19	Door Sheet AX4HY	Not used	AAK8293	Not used	AAK8293
	20	Window 74	AAK8296	Not used	Not used	Not used
	20	Window 74S	Not used	AAK8317	Not used	Not used
	20	Window 72	Not used	Not used	AAK8297	Not used
	20	Window 72S	Not used	Not used	Not used	AAK8318
	21	Filter 74	AAK8308	Not used	AAK8308	Not used
	21	Filter 74S	Not used	AAK8311	Not used	AAK8311
	24	Panel Base 74BK	AMB7900	Not used	AMB7900	Not used
	24	Panel Base 74S	Not used	AMB7907	Not used	AMB7907
	25	Front Panel 74	ANB7374	Not used	Not used	Not used
	25	Front Panel 74S	Not used	ANB7392	Not used	Not used
	25	Front Panel 72	Not used	Not used	ANB7375	Not used
	25	Front Panel 72S	Not used	Not used	Not used	ANB7393
	27	Pioneer Badge B	PAN1376	Not used	PAN1376	Not used
	27	Pioneer Badge S	Not used	VAM1124	Not used	VAM1124
	28	STBY BTN 915K Assy	XAD3216	Not used	XAD3216	Not used
	28	STBY BTN 915P Assy	Not used	XAD3217	Not used	XAD3217
	30	Screw	BBZ30P080FTB	BBZ30P080FNI	BBZ30P080FTB	BBZ30P080FNI

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM


3.1 BLOCK DIAGRAM

3.1.1 OVERALL BLOCK DIAGRAM

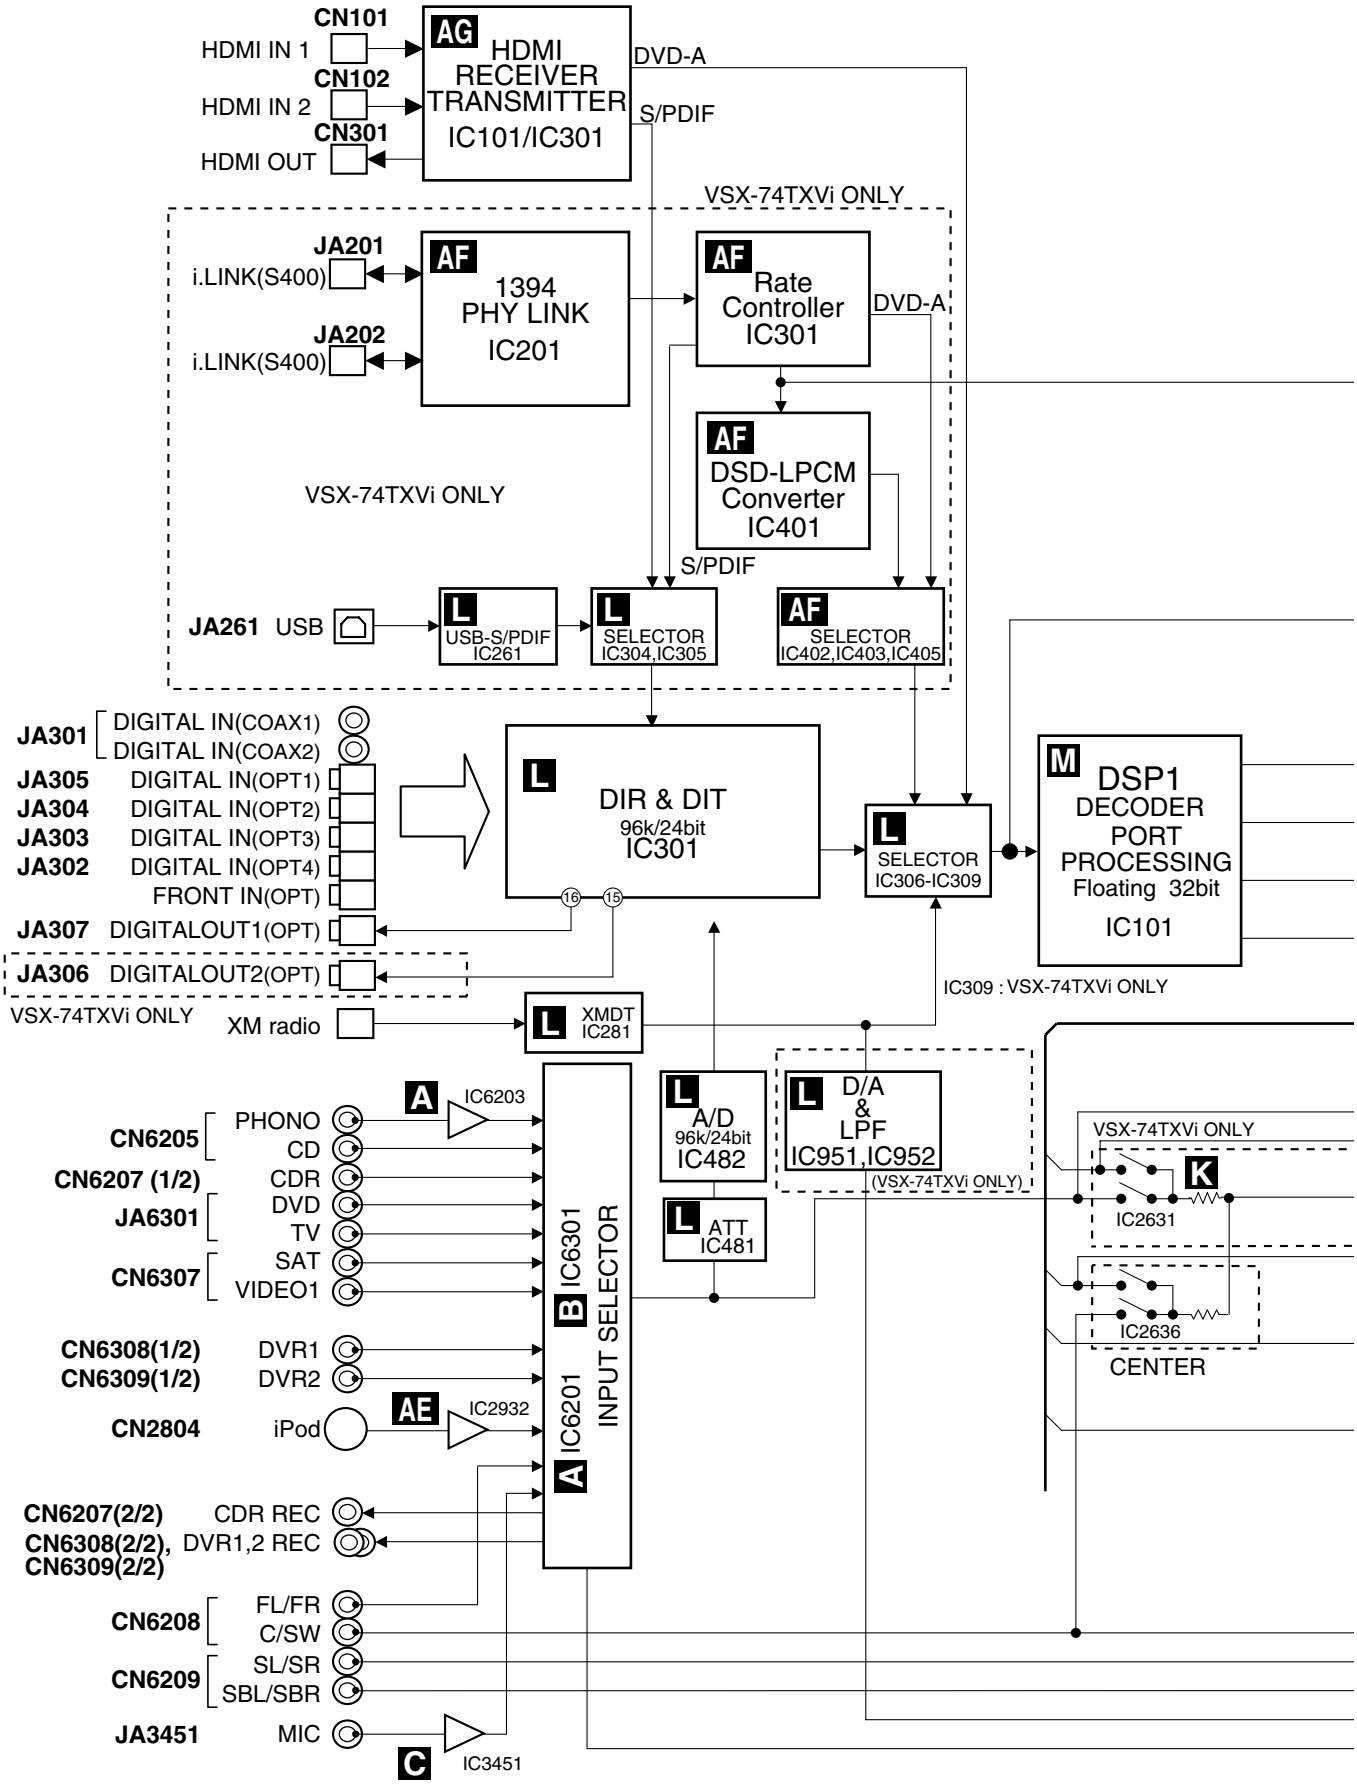


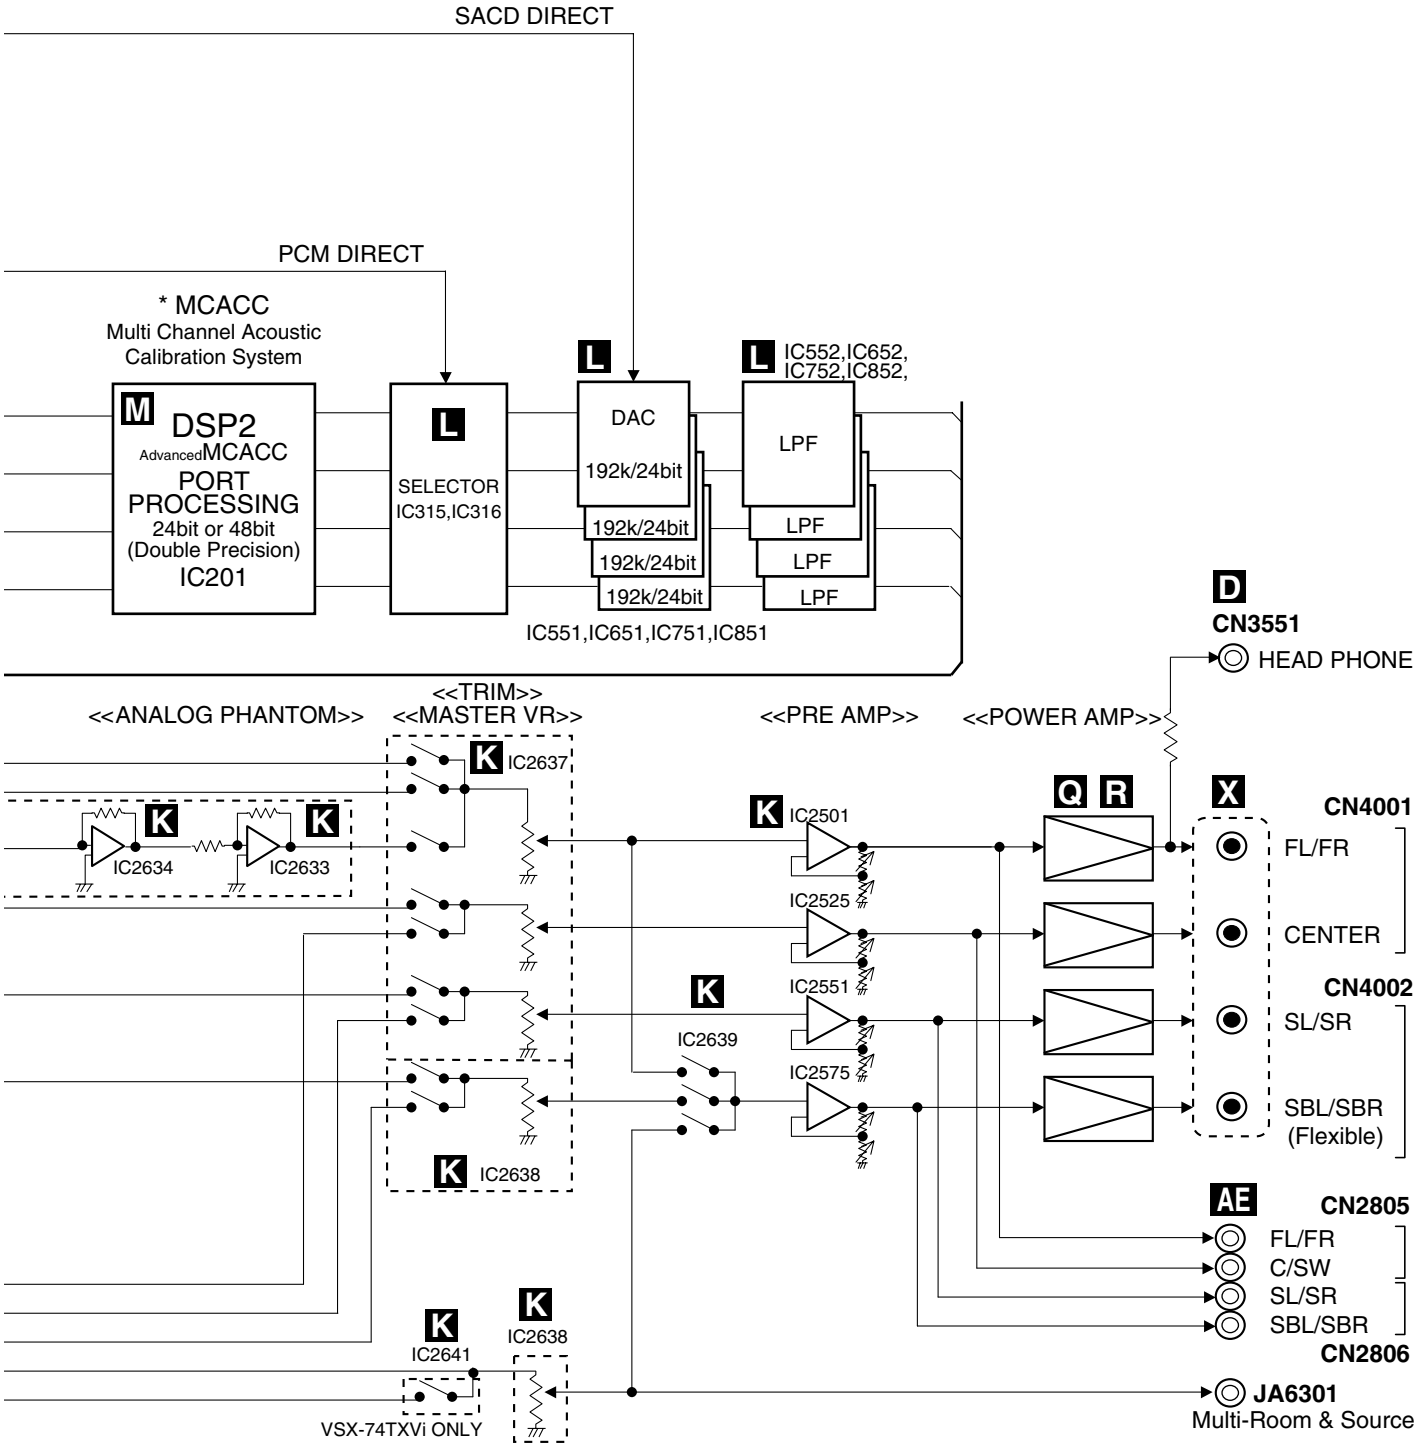
SACD DIRECT
PCM DIRECT
* MCACC
Multi Channel Acoustic Calibration System
M
DSP2
AdvancedMCACC
PORT PROCESSING
24bit or 48bit (Double Precision)
IC201
L
SELECTOR
IC315,IC316
L
DAC
192k/24bit
192k/24bit
192k/24bit
L
IC552,IC652, IC752,IC852,
LPF
LPF
LPF
IC551,IC651,IC751,IC851
D
CN3551
HEAD PHONE
<<TRIM>>
<<ANALOG PHANTOM>>
<<MASTER VR>>
<<PRE AMP>>
<<POWER AMP>>
K
IC2637
K
IC2634
K
IC2633
K
IC2501
IC2525
K
IC2551
IC2639
IC2575
K
IC2638
Q
R
X
CN4001
FL/FR
CENTER
CN4002
SL/SR
SBL/SBR
(Flexible)
AE
CN2805
FL/FR
C/SW
SL/SR
SBL/SBR
CN2806
K
IC2641
K
IC2638
VSX-74TXVi ONLY
JA6301
Multi-Room & Source


3.1.2 COMPOSITE V BLOCK DIAGRAM

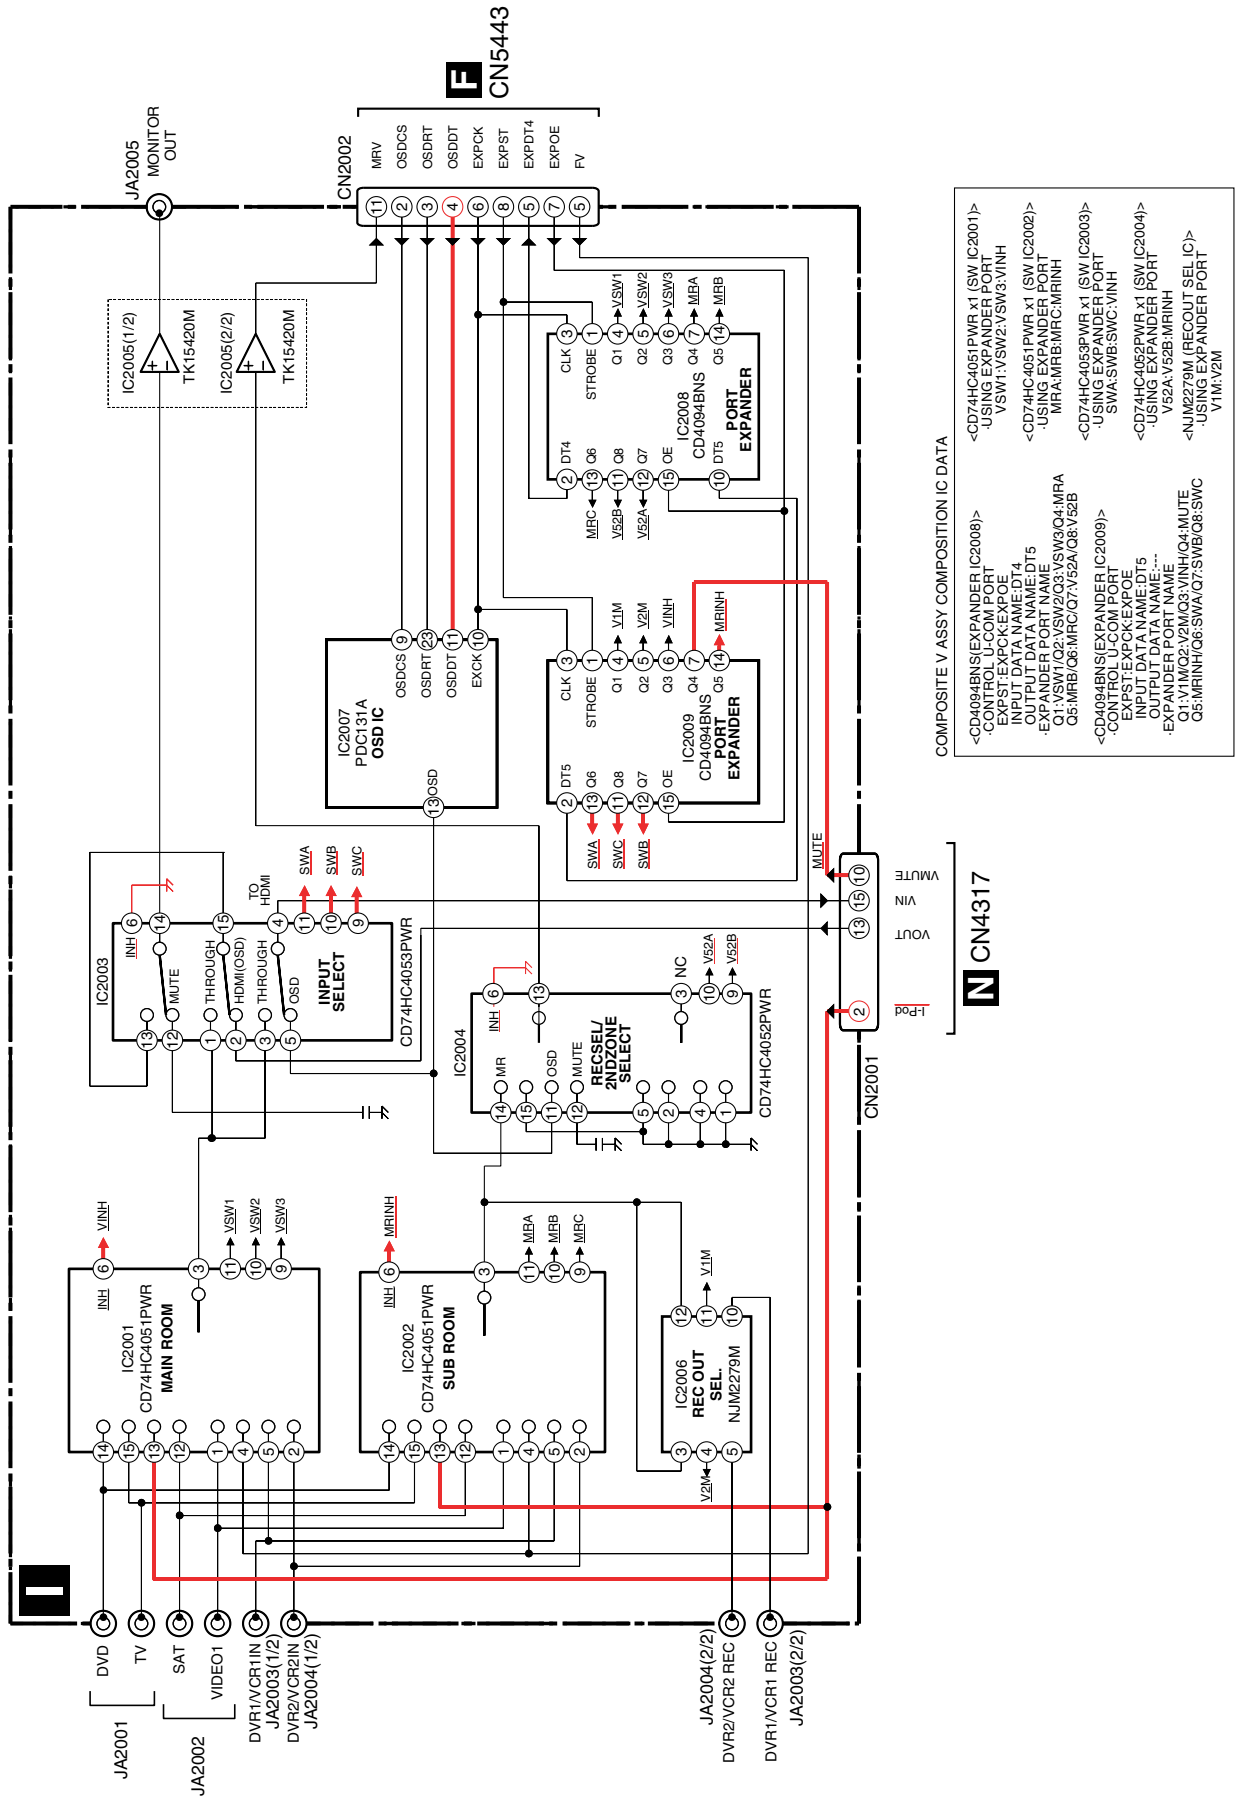

3.1.3 S-VIDEO BLOCK DIAGRAM

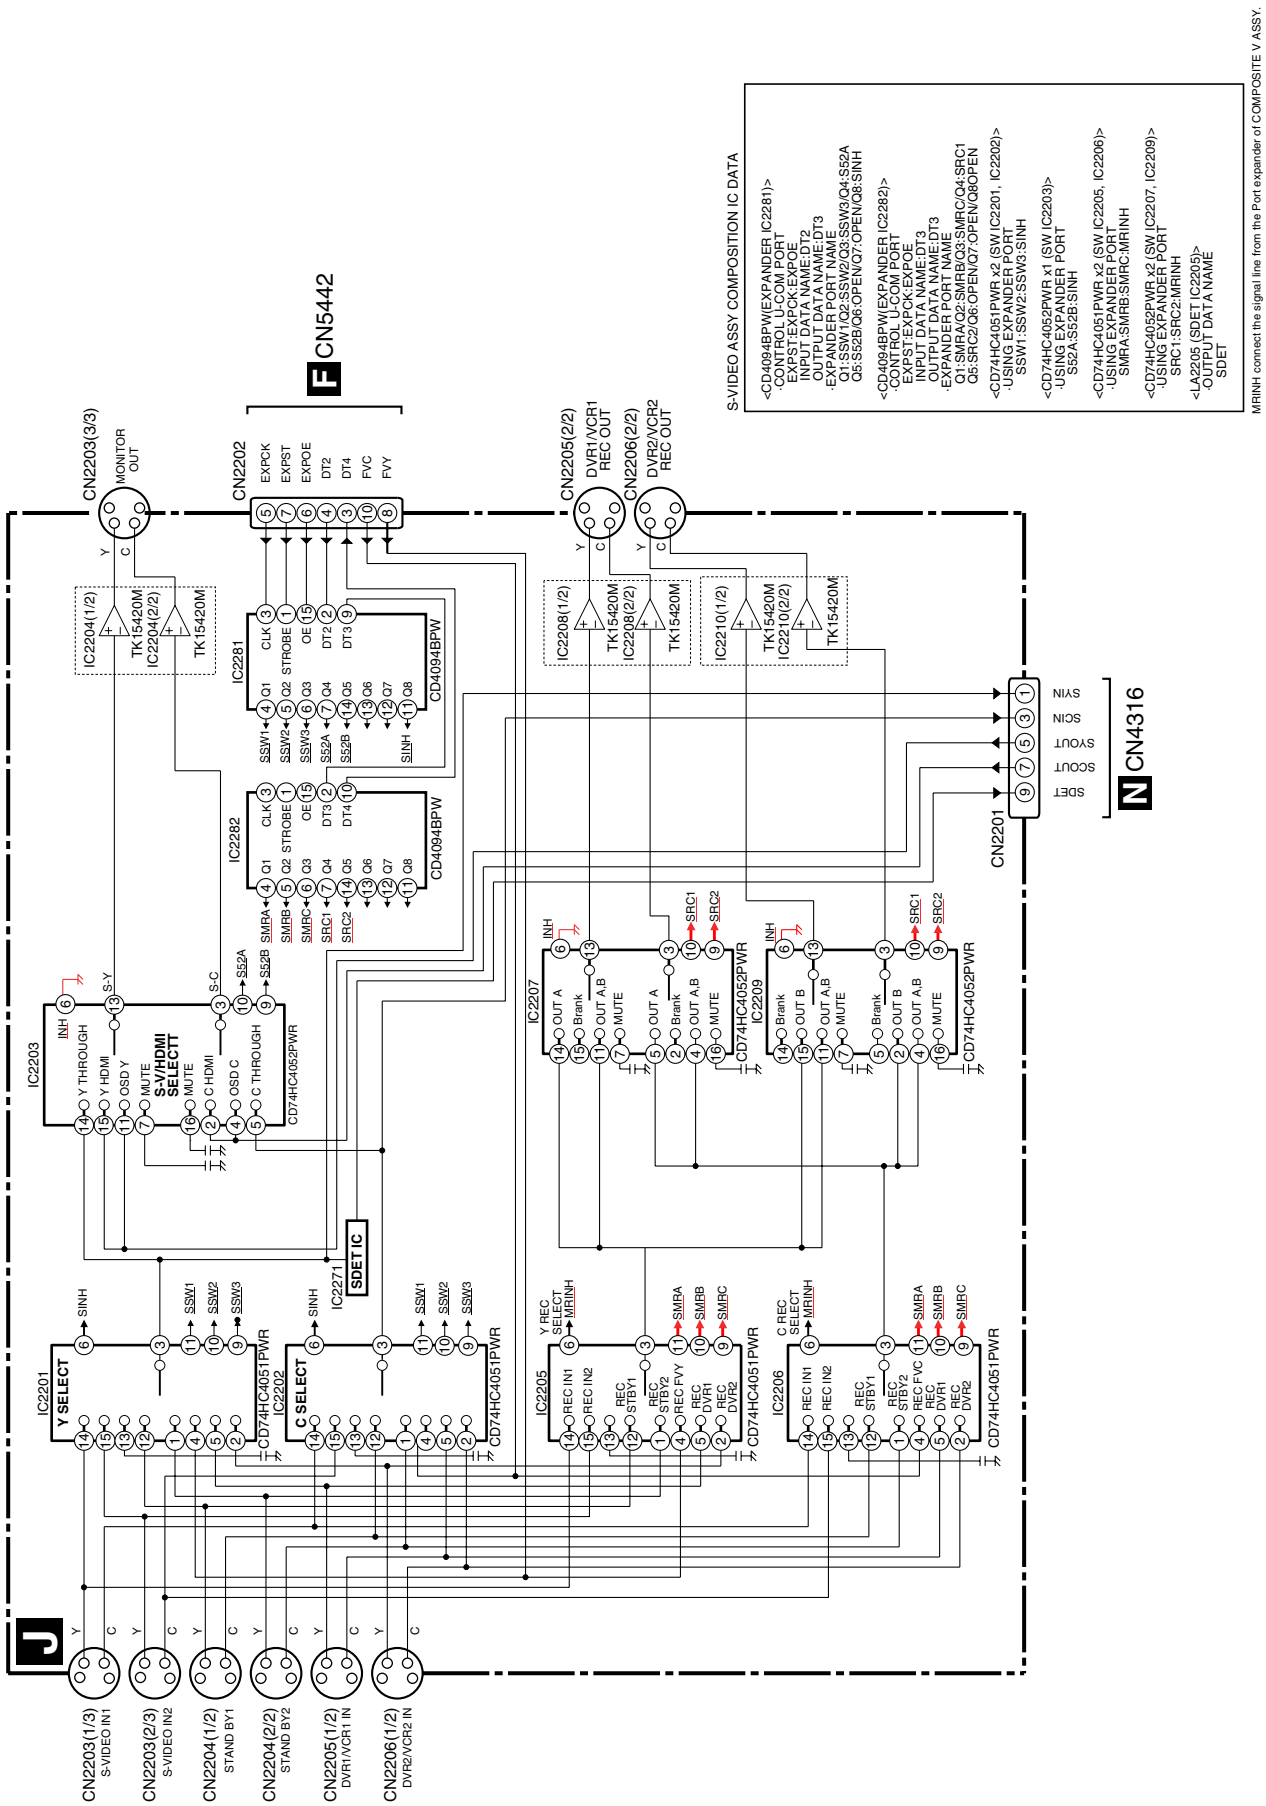

3.1.4 COMPONENT &VOL BLOCK DIAGRAM

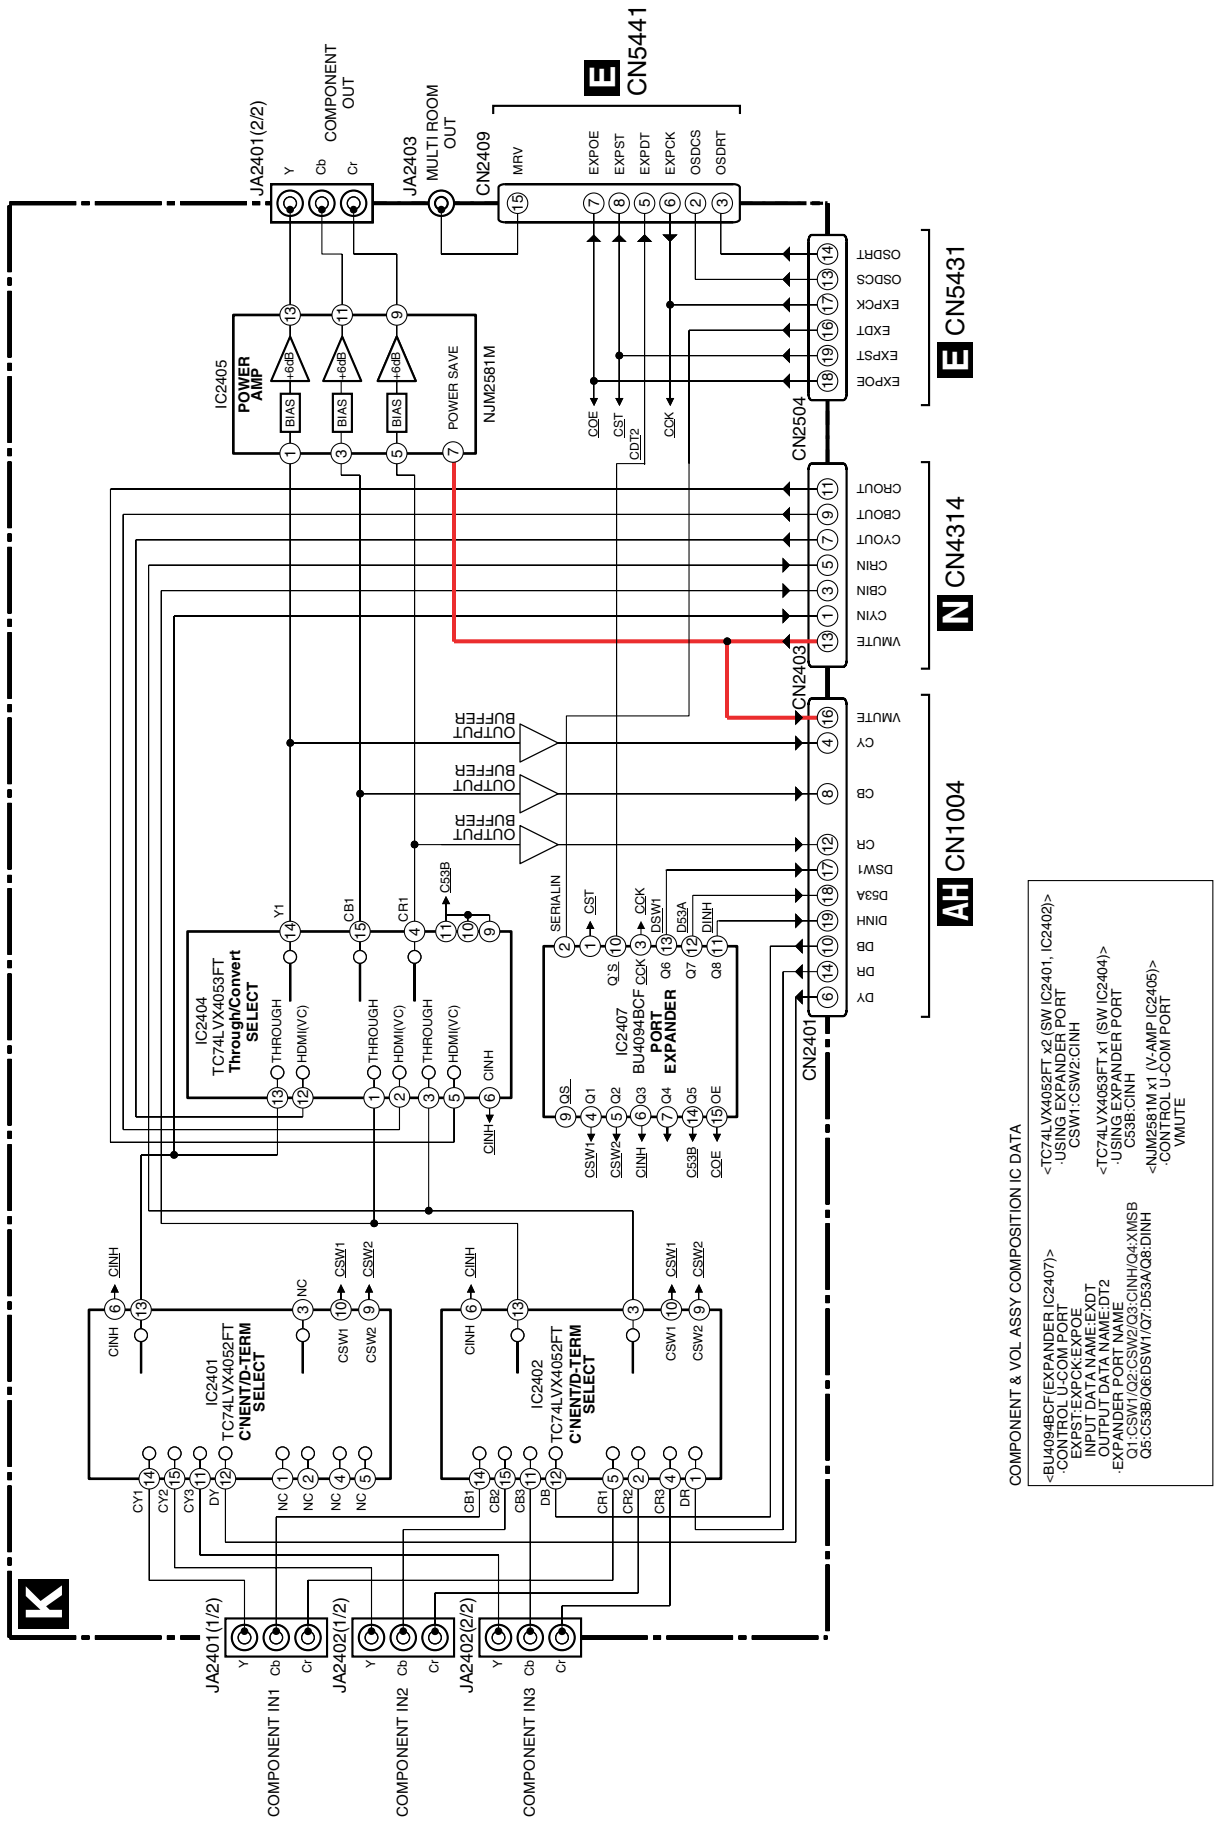

COMPONENT & VOL ASSY COMPOSITION IC DATA


<BU4094BCF(EXPANDER IC2407)>
·CONTROL U-COM PORT
EXPST:EXPCK:EXPOE
INPUT DATA NAME:EXDT
OUTPUT DATA NAME:DT2
·EXPANDER PORT NAME
Q1:CSW1/Q2:CSW2/Q3:CINH/Q4:XMSB
Q5:C53B/Q6:DSW1/Q7:D53A/Q8:DINH

<TC74LVX4052FT x2 (SW IC2401, IC2402)>
·USING EXPANDER PORT
CSW1:CSW2:CINH

<TC74LVX4053FT x1 (SW IC2404)>
·USING EXPANDER PORT
C53B:CINH

<NJM2581M x1 (V-AMP IC2405)>
·CONTROL U-COM PORT
VMUTE

3.1.5 DSP BLOCK DIAGRAM

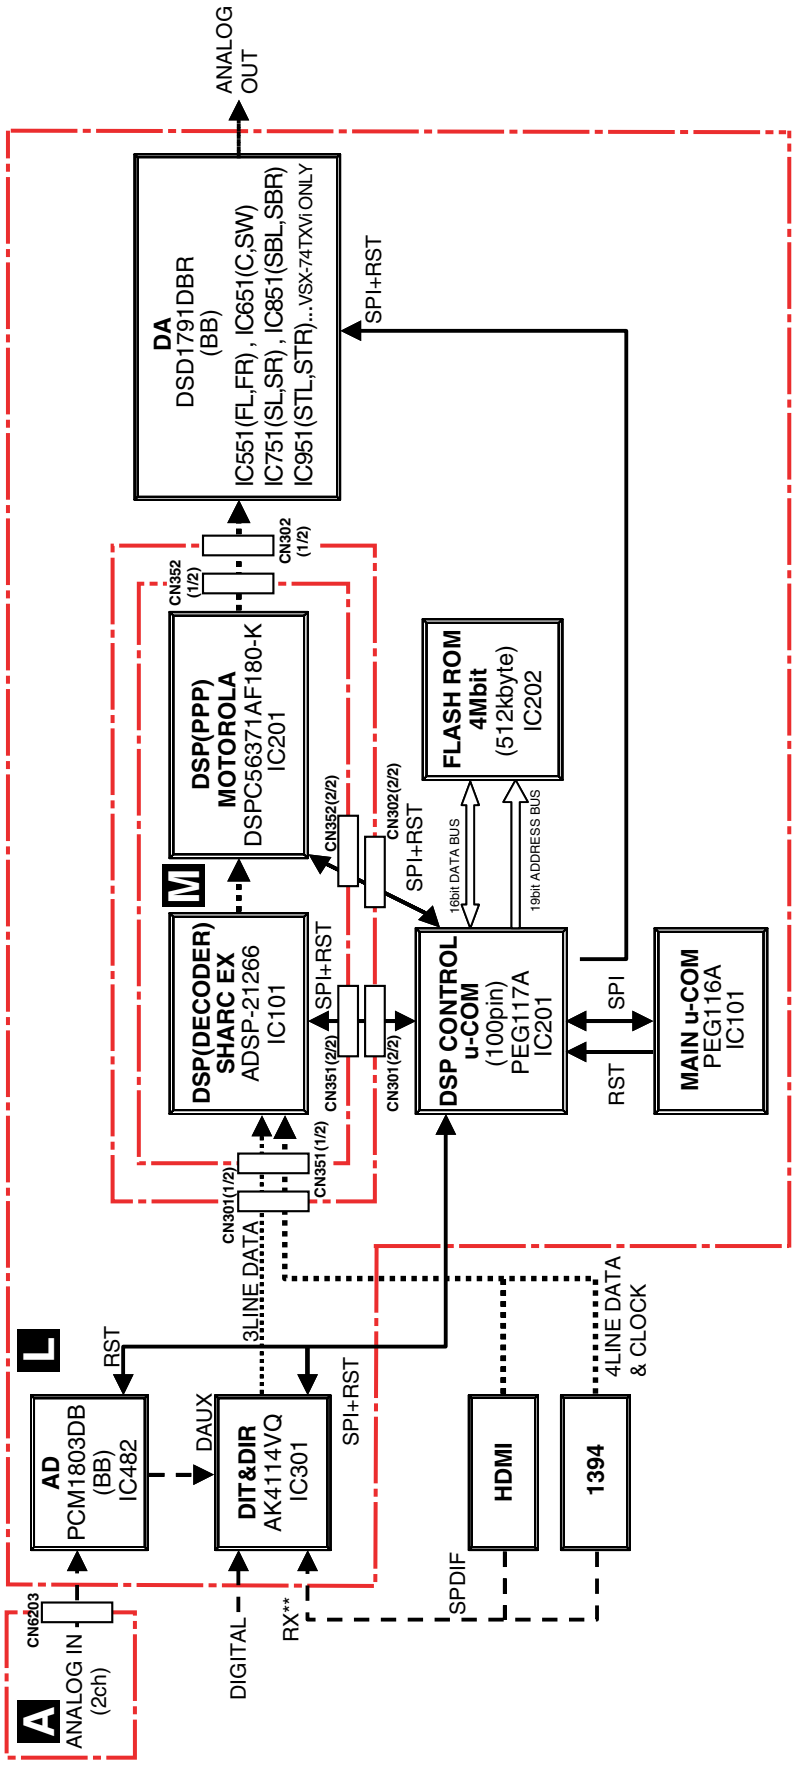


1.Description of Device ICs

IC No	IC Name	Description of function
IC 482	A/D Converter	Converts signals from an analog source into digital signals.
IC 301	Digital Audio Interface Transceiver & Receiver	Selecting digital data.
IC 101	DSP	Decoder for compressed sound such as AC-3 and DTS.
IC 201	DSP	P Company's original processor such as SFC.
IC 201	DSP Microcomputer } set	DSP Control / DIR Control / A/D,D/A Control
IC 202	FLASH ROM	DSP Microcomputer programs are stored in the flash rom.
IC 551,651,751, 851,951	D/A Converter	Converts digital signals into analog signals.


2.Description of Abbreviated Names

Signal name	Formal signal name	Description of signals
SPI	SONY/Philips Digital Interface	Consumer format used for exchanging digital audio signals.
RST	RESET	Reset signal.
PPP	Post Processing Phase	Denotes DSP processing (P Company's original surround processing), which are executed at the latter part of a decoder area.

3.1.6 HDMI & DVC BLOCK DIAGRAM

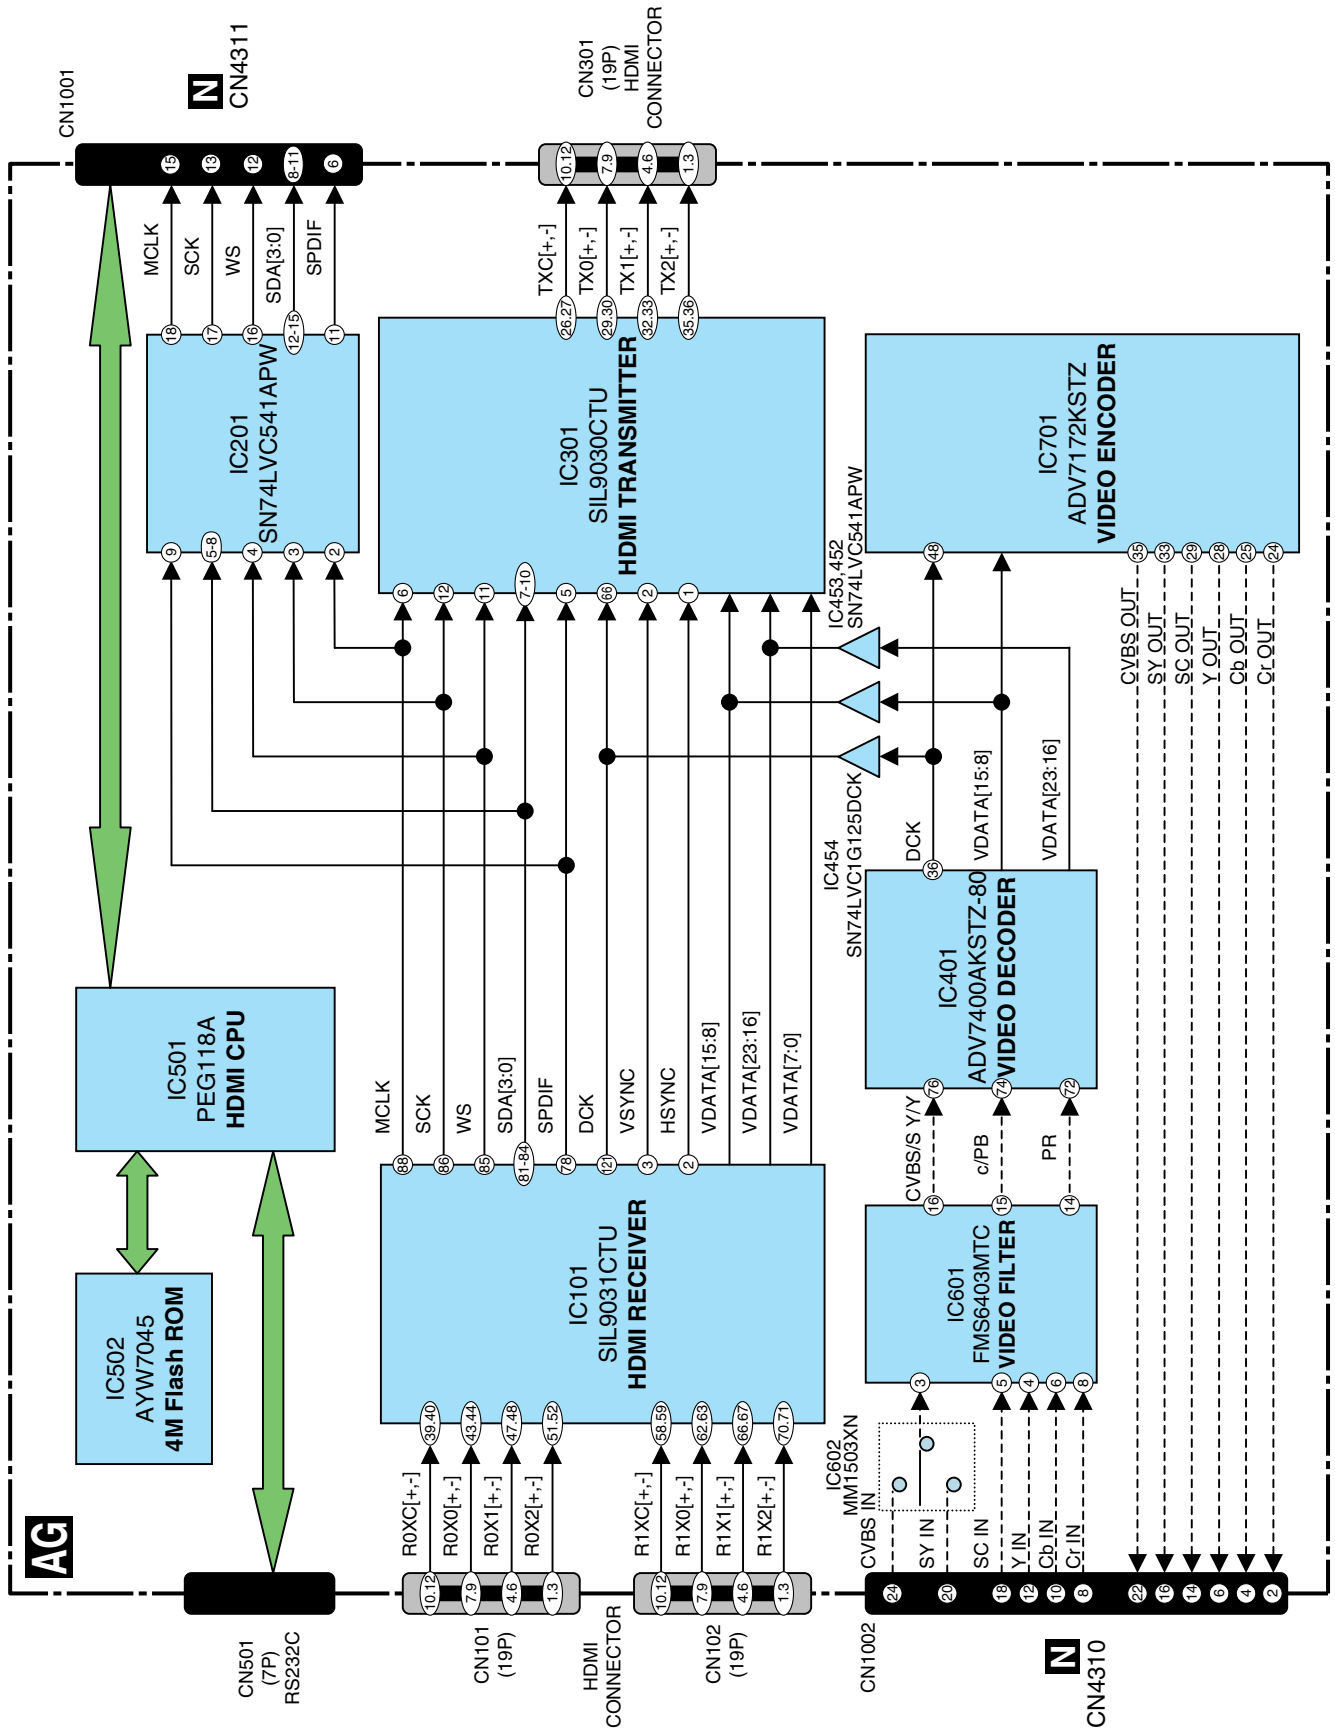



3.1.7 MICROCOMPUTER BLOCK DIAGRAM

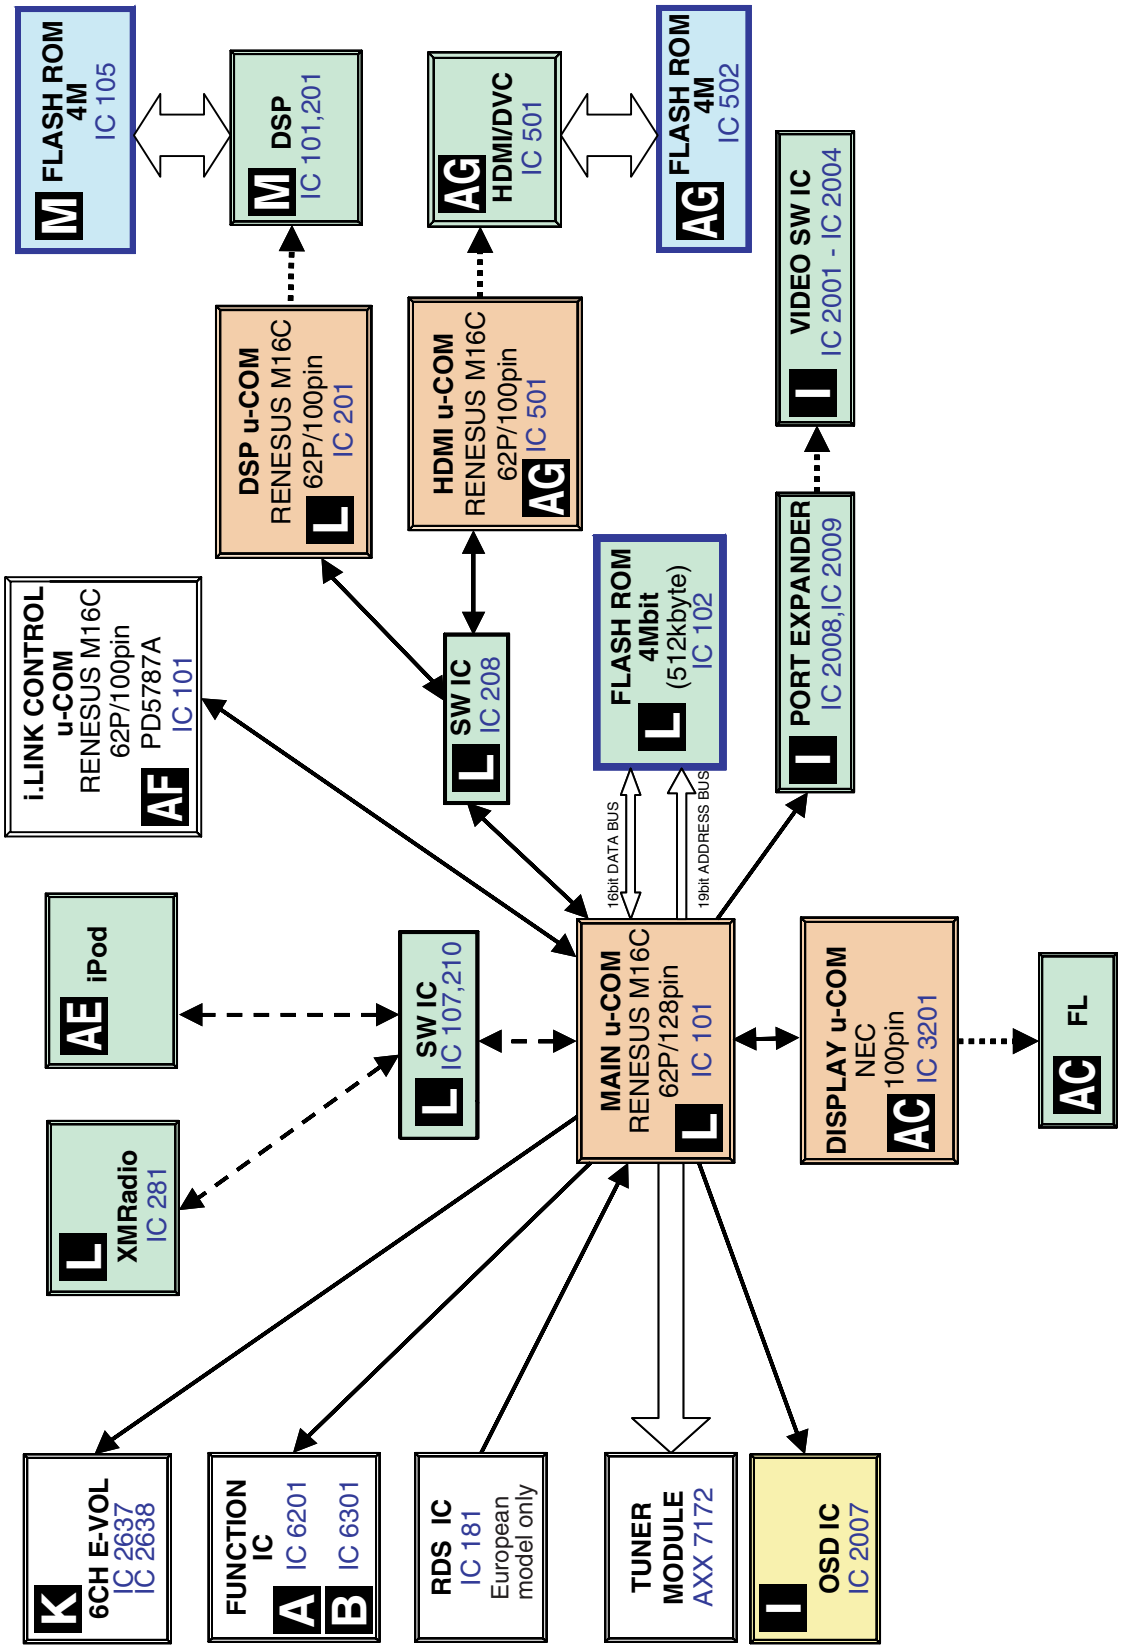

IC NAME	IC NO	MAIN FUNCTION
MAIN u-COM	IC101	SYSTEM CONTROL(AMP,ICs,XM,iPod,RS232C,OSD,TUNER,RDS)
DISPLAY u-COM	IC3201	FL,LED,KEY CONTROL
HDMI u-COM	IC501	HDMI TX,RX CONTROL / DVC CONTROL
DSP u-COM	IC201	DSP CONTROL / DIR CONTROL / A/D,D/A CONTROL
iLINK CONTROL u-COM	IC101	iLINK(1394) CONTROL

3.2 OVERALL WIRING CONNECTION DIAGRAM

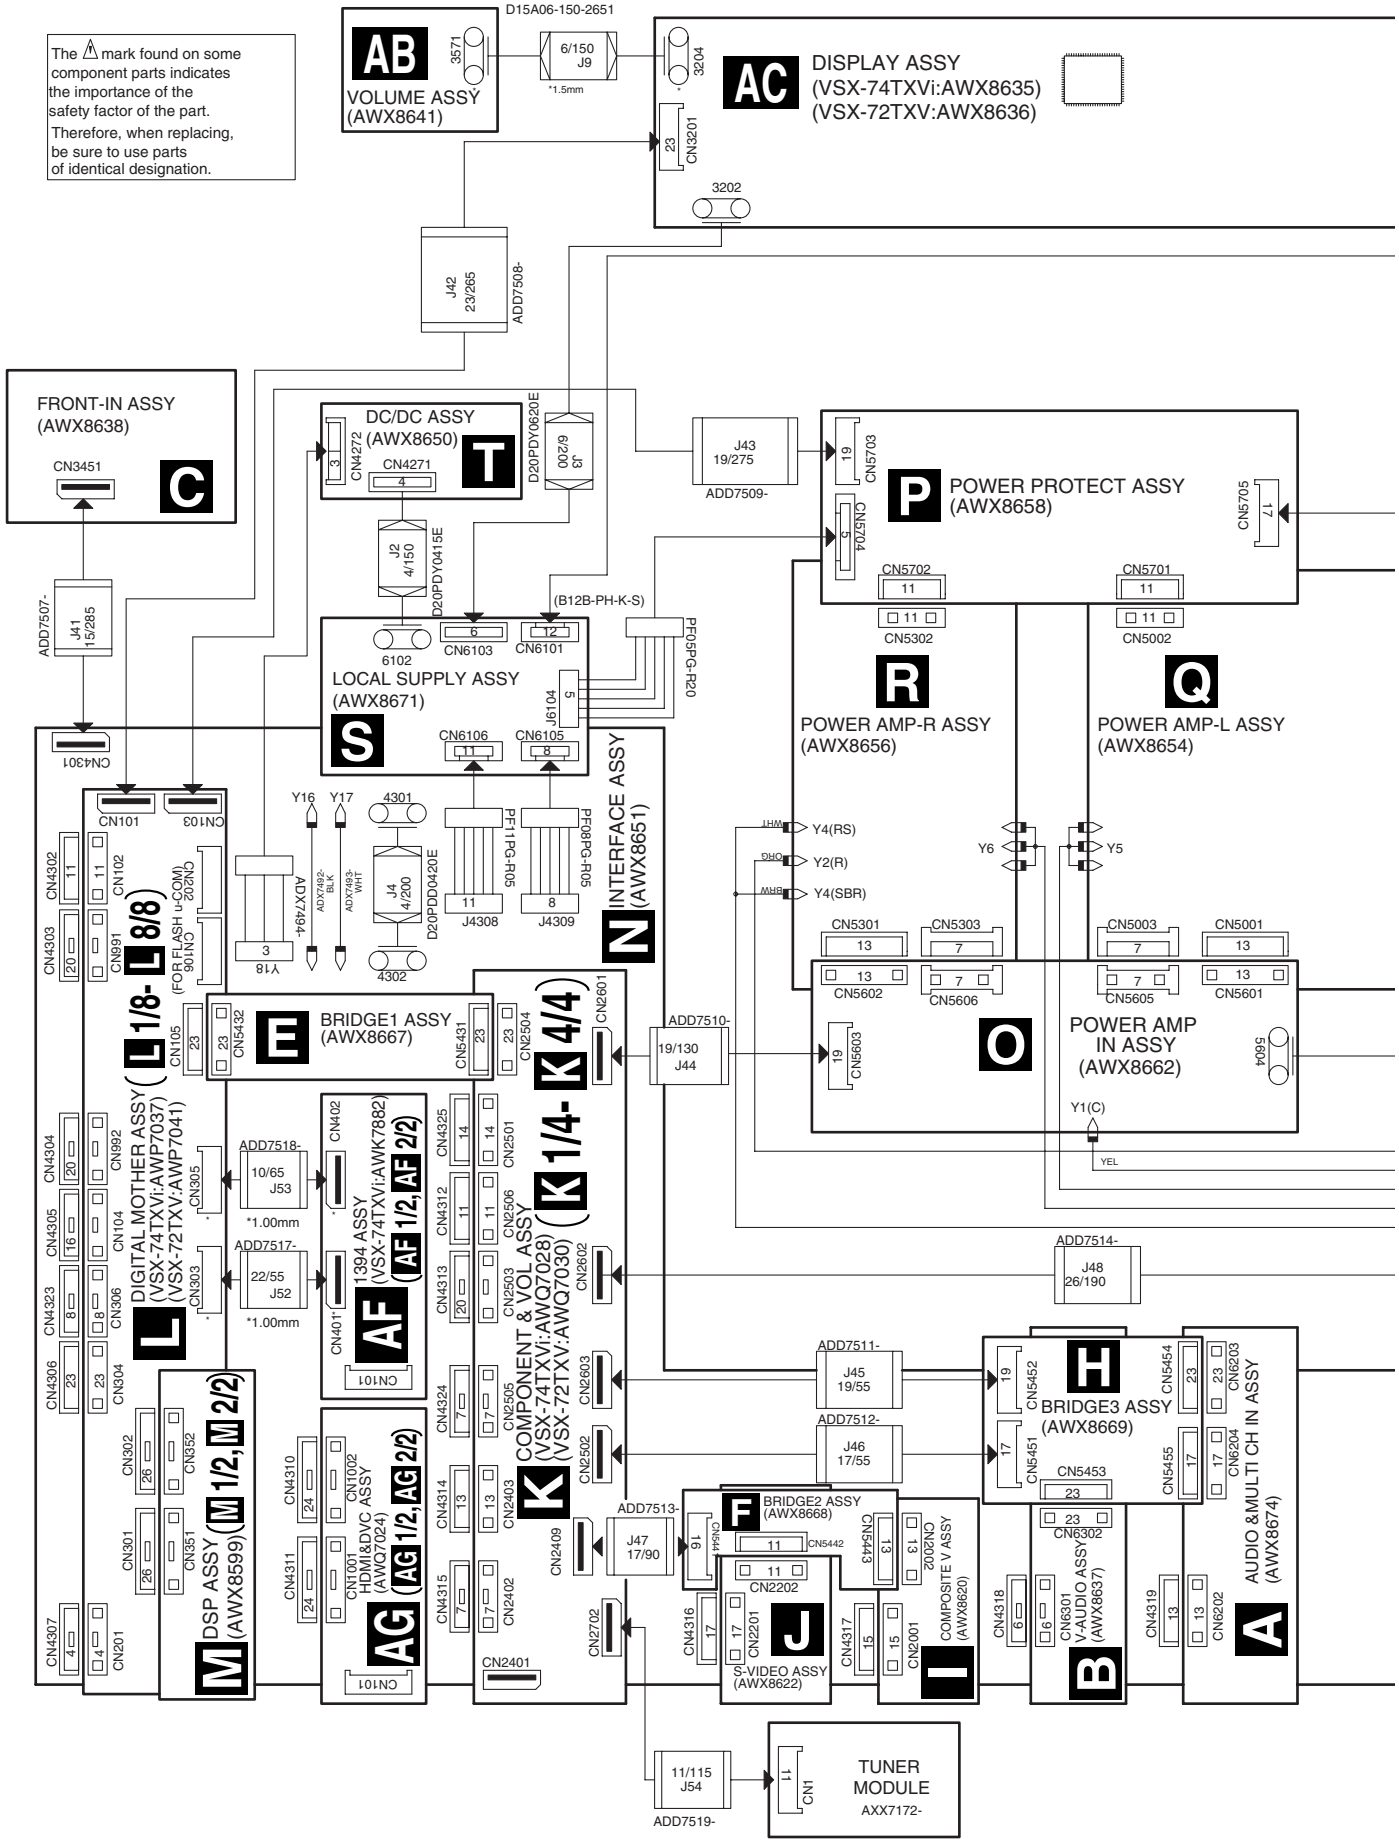


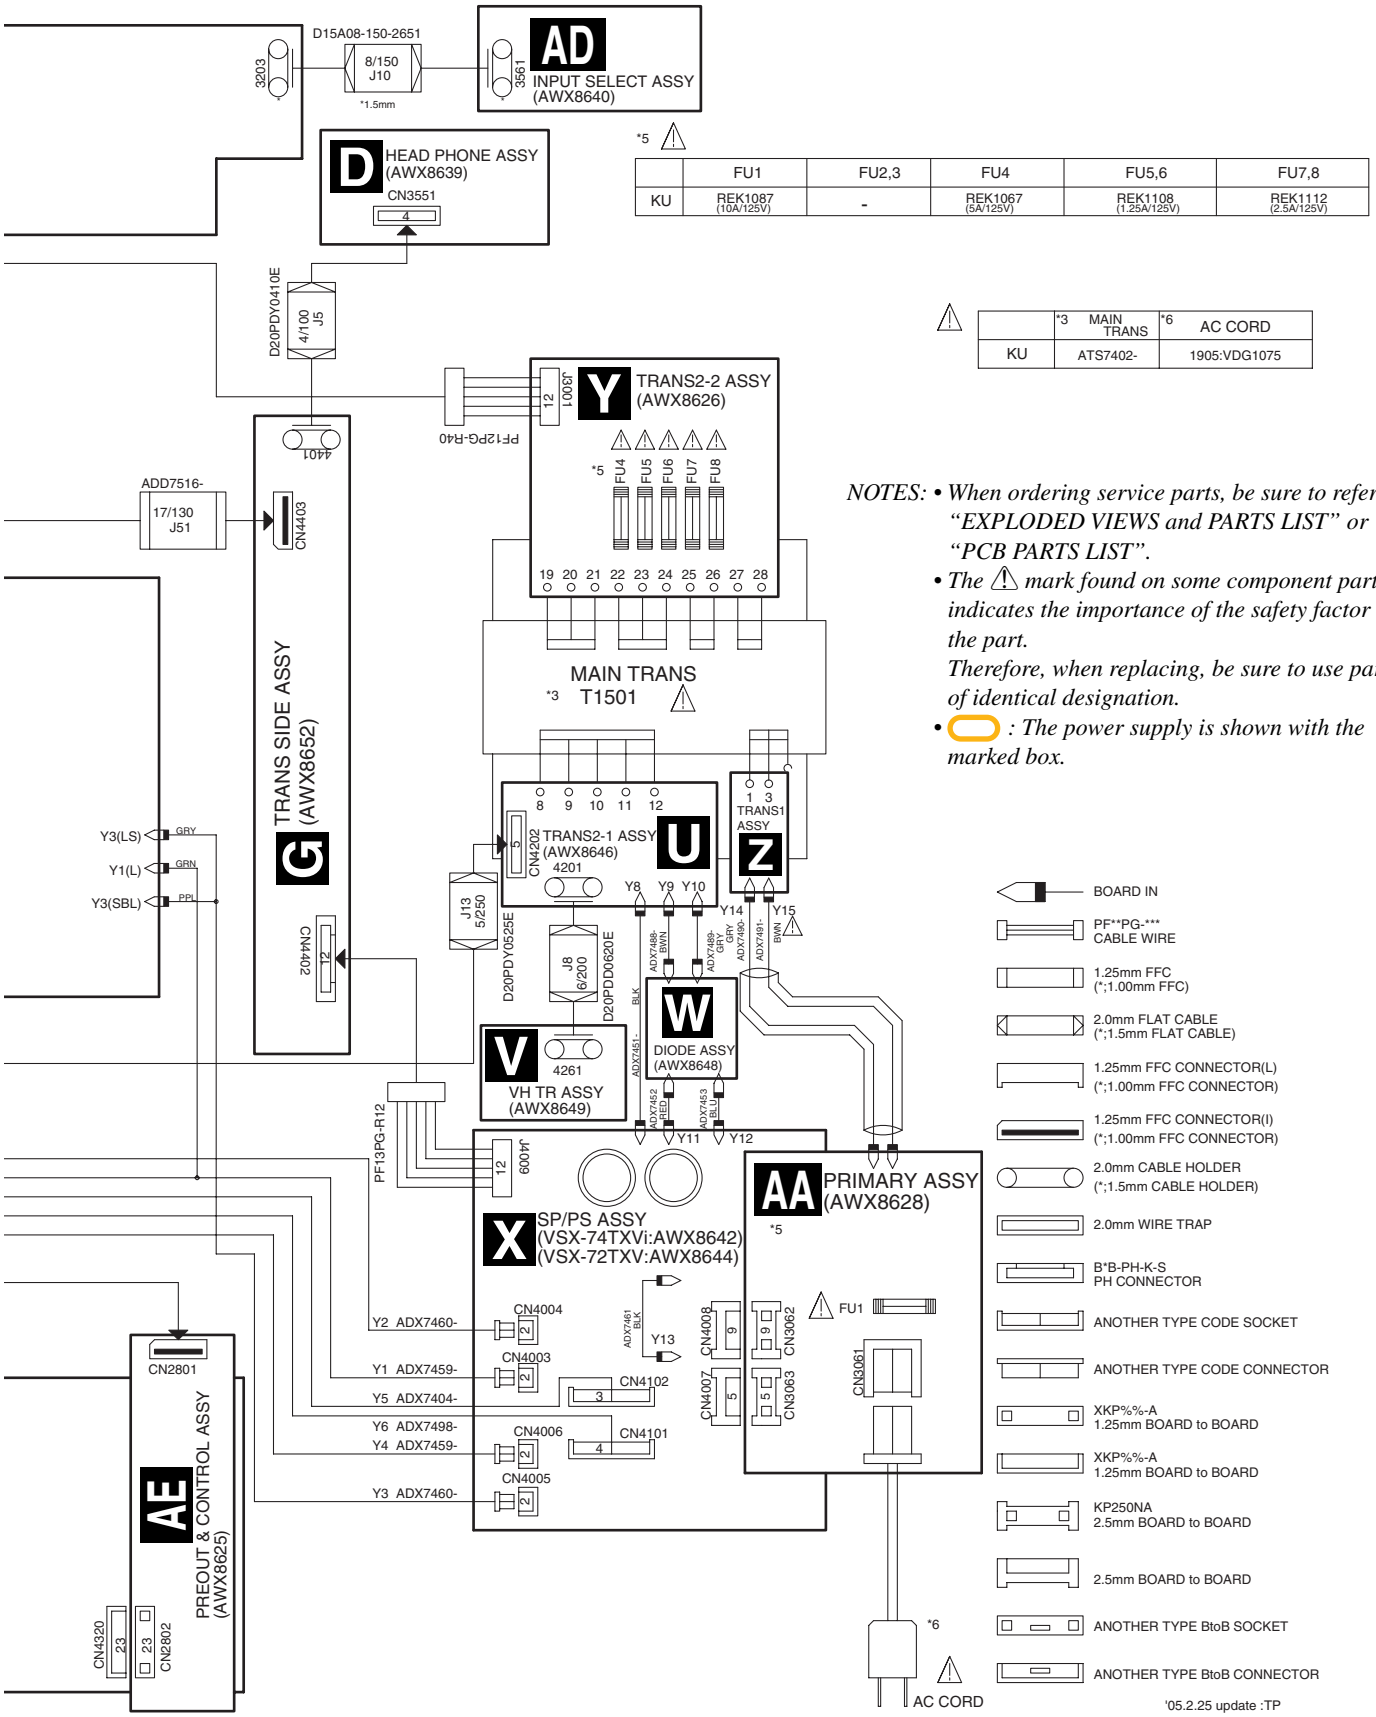

NOTES:

- *When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.*
  Therefore, when replacing, be sure to use parts of identical designation.
- *⬭ : The power supply is shown with the marked box.*


3.3 AUDIO & MULTI CH IN ASSY

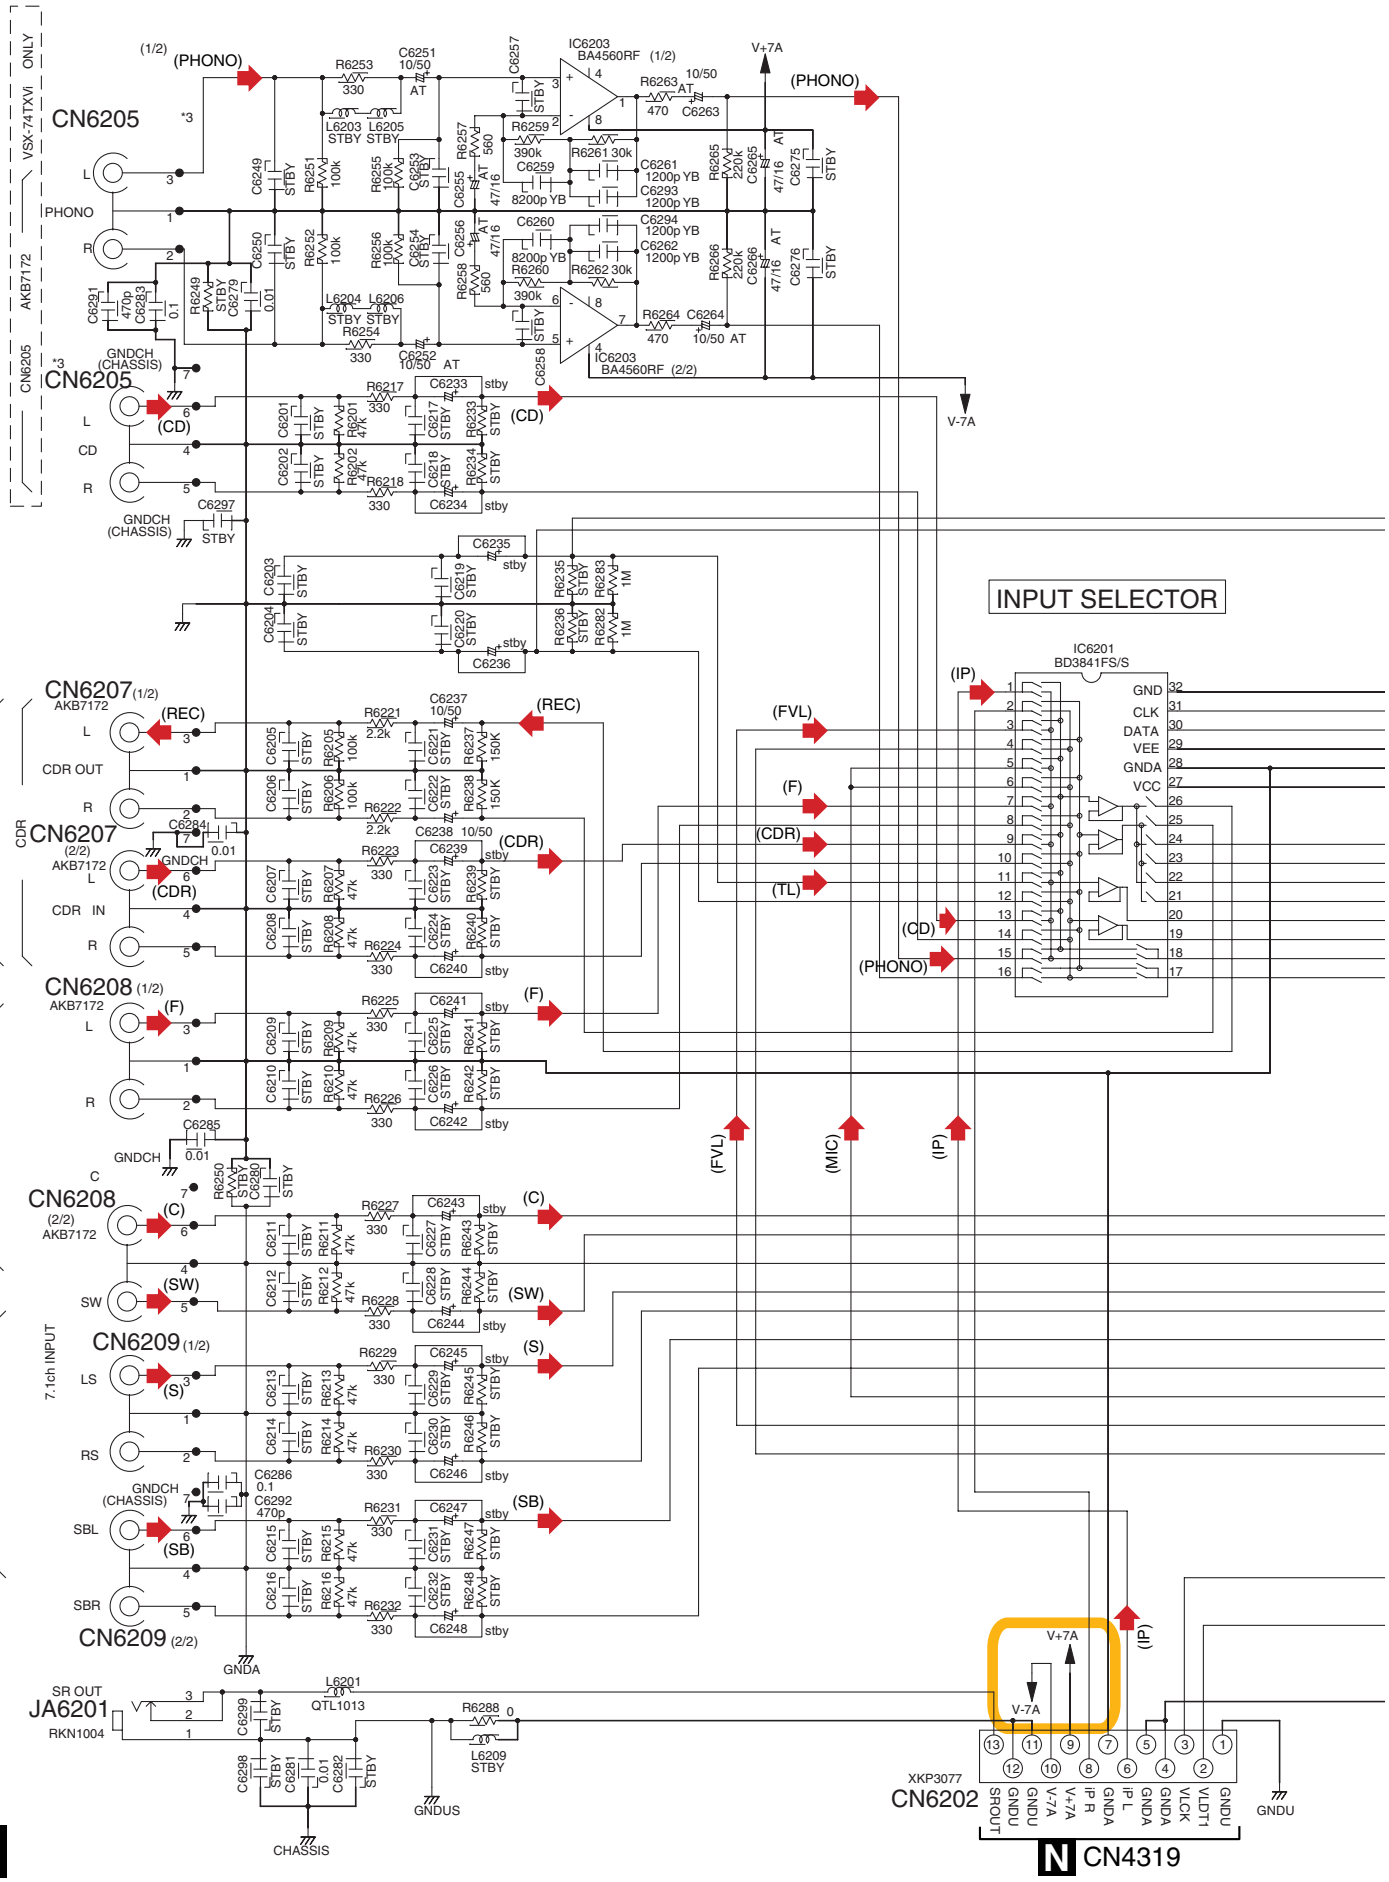


(F): AUDIO SIGNAL ROUTE(F)
(C): AUDIO SIGNAL ROUTE(C)
(S): AUDIO SIGNAL ROUTE(S)
(SB): AUDIO SIGNAL ROUTE(SB)
(SW): AUDIO SIGNAL ROUTE(SW)
(PHONO): AUDIO SIGNAL ROUTE (PHONO)
(IP): AUDIO SIGNAL ROUTE(IP)

(CD): AUDIO SIGNAL ROUTE (CD)
(TL): AUDIO SIGNAL ROUTE (TL)
(MR): AUDIO SIGNAL ROUTE (MR)
(REC): AUDIO SIGNAL ROUTE (REC)
(CDR): AUDIO SIGNAL ROUTE (CDR)
(MIC): AUDIO SIGNAL ROUTE (CDR)
(FVL): AUDIO SIGNAL ROUTE (FVL)

A AUDIO&MULTI CH IN ASSY (AWX8674)

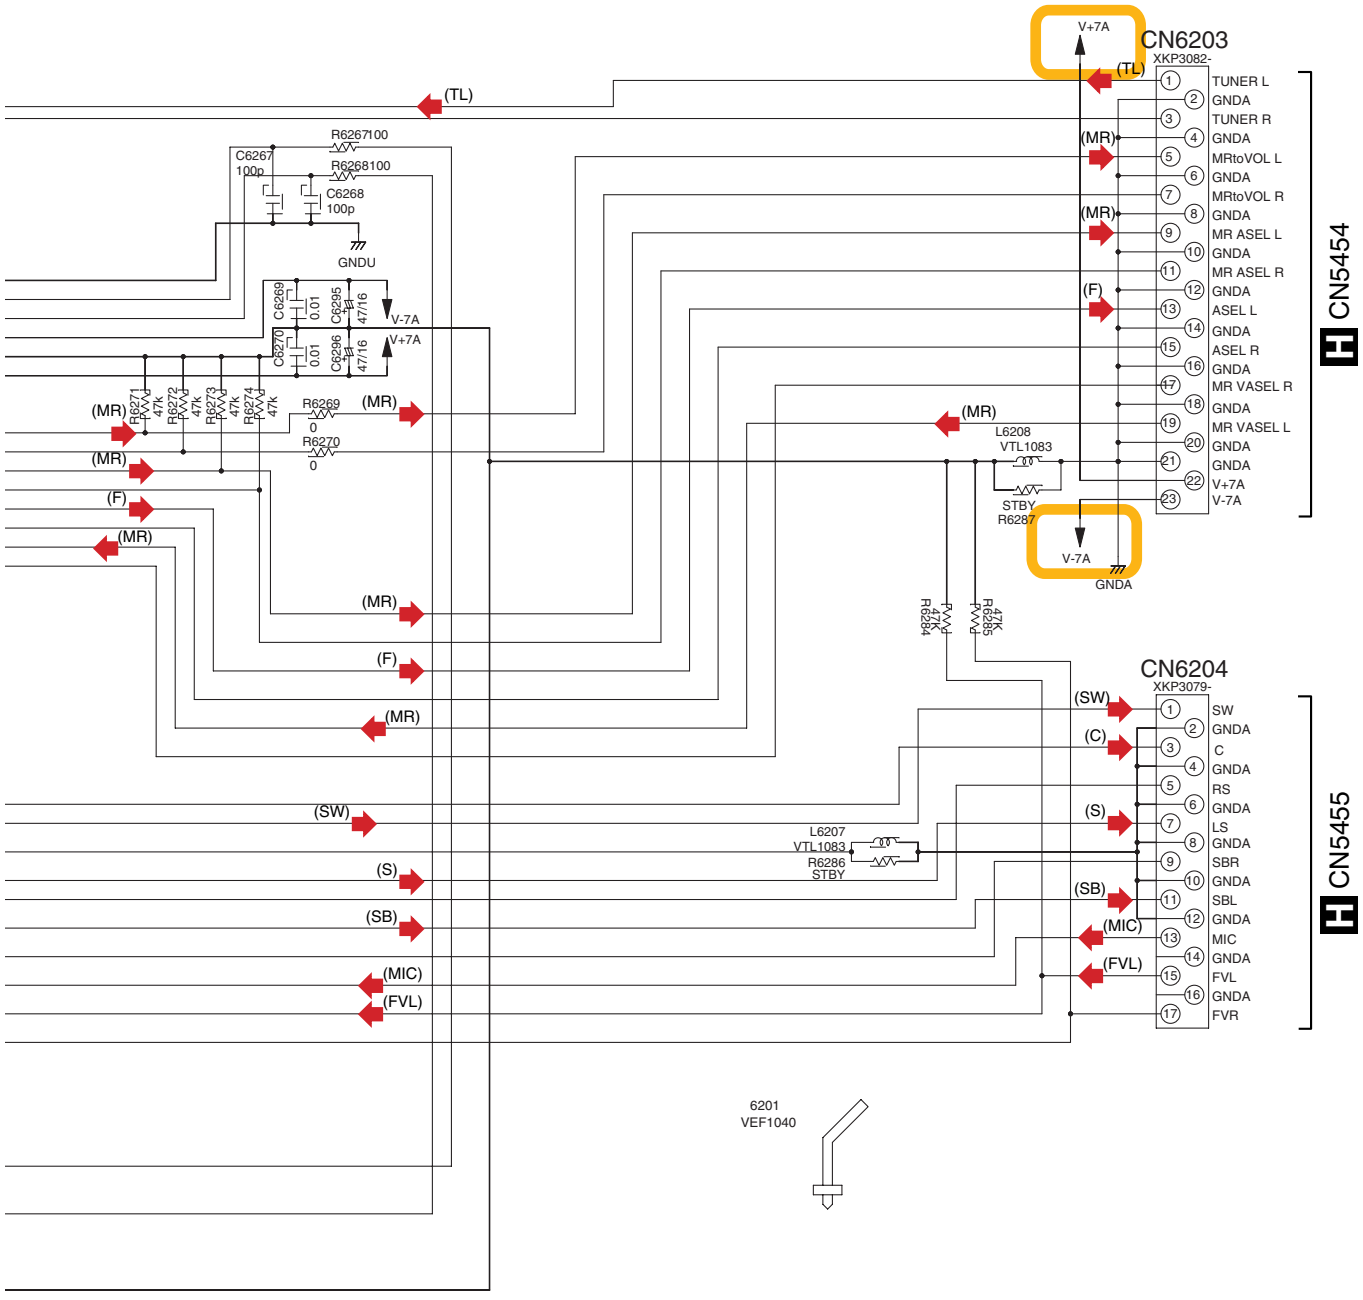

B V-AUDIO ASSY (AWX8637)

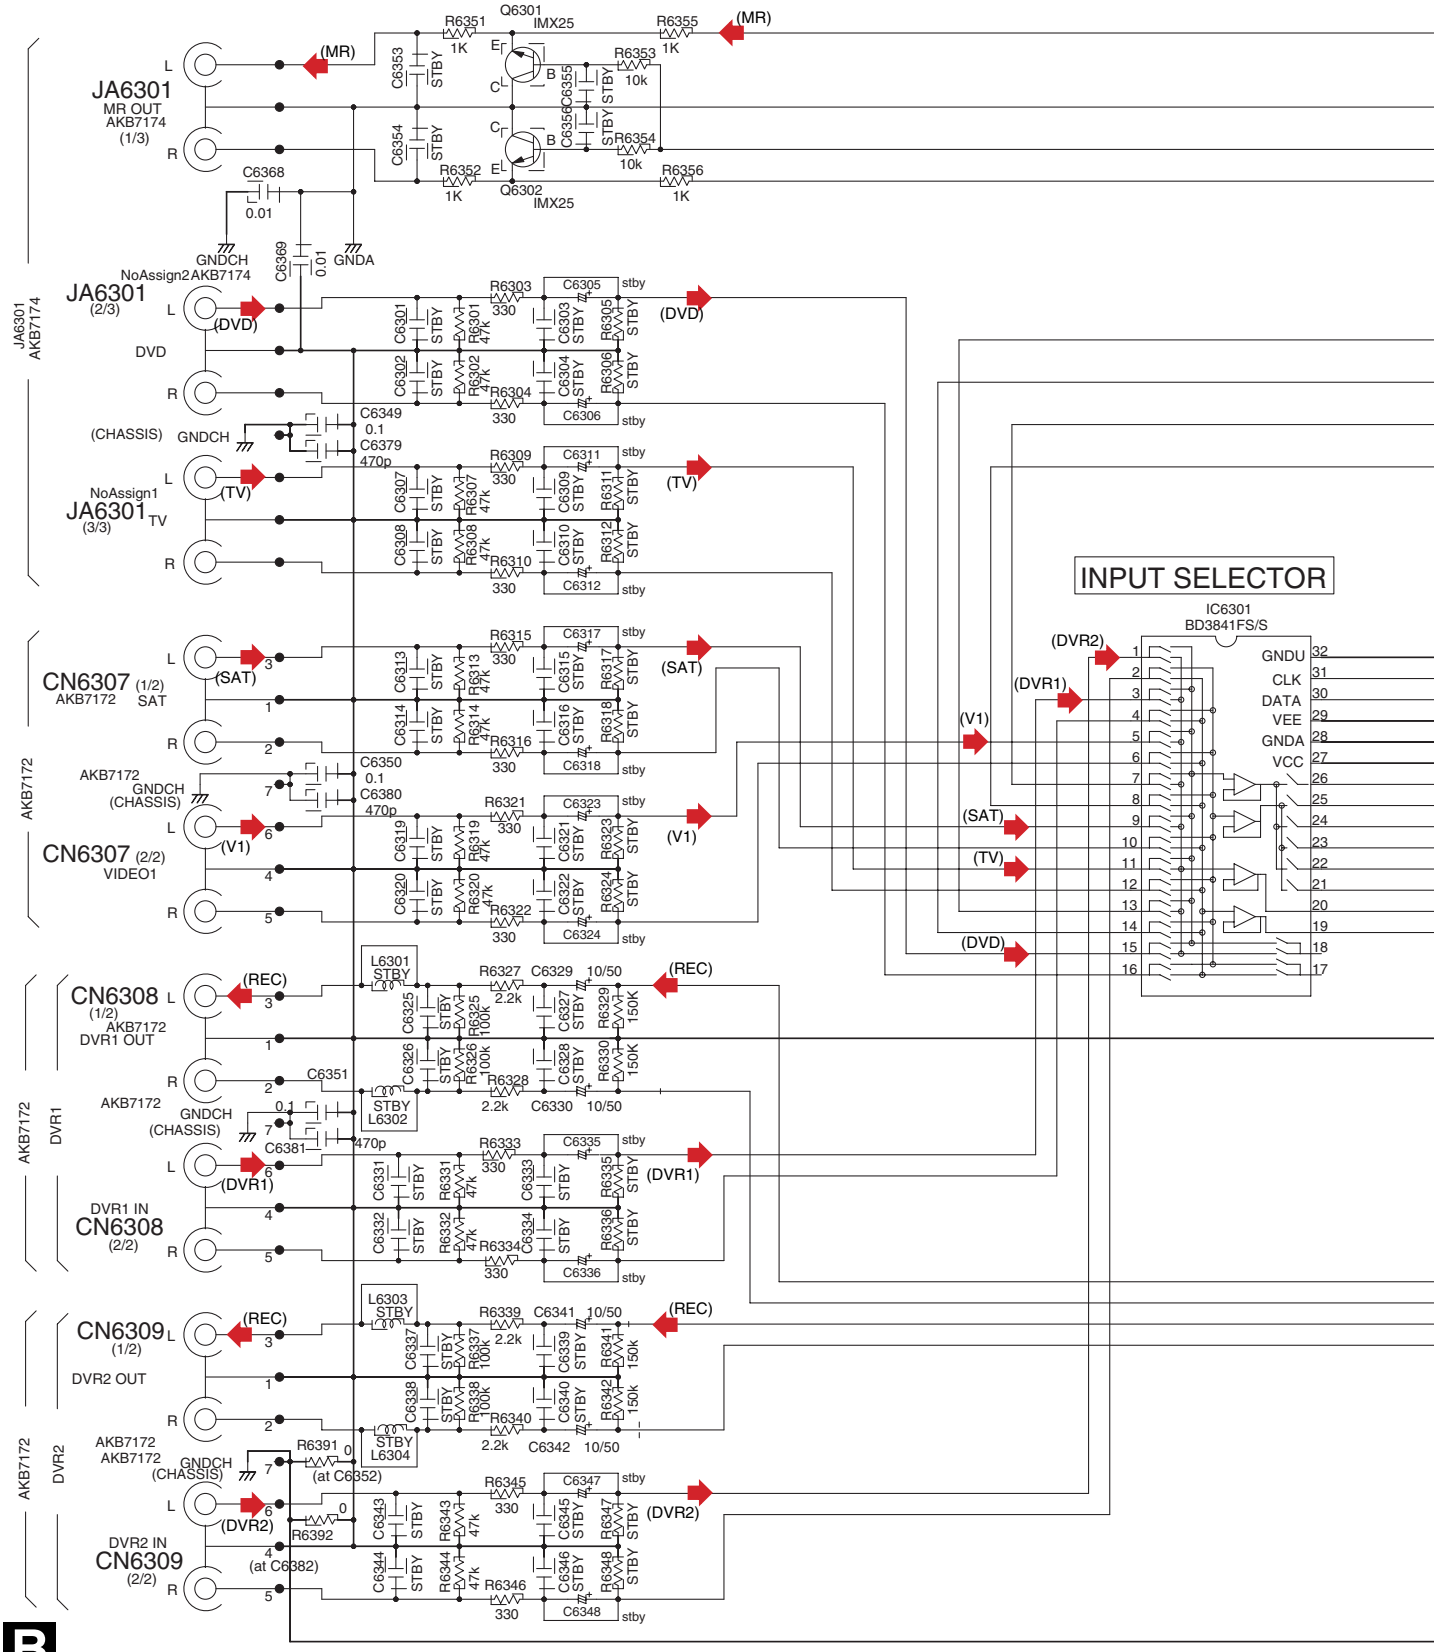


NOTE

1.RESISTORS


Unit: k-k , M-M or unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: (J) ±5% unless otherwise noted.

2.CAPACITORS

Unit: p-pF or µF unless otherwise noted.
Ratings: Capacity(µF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.

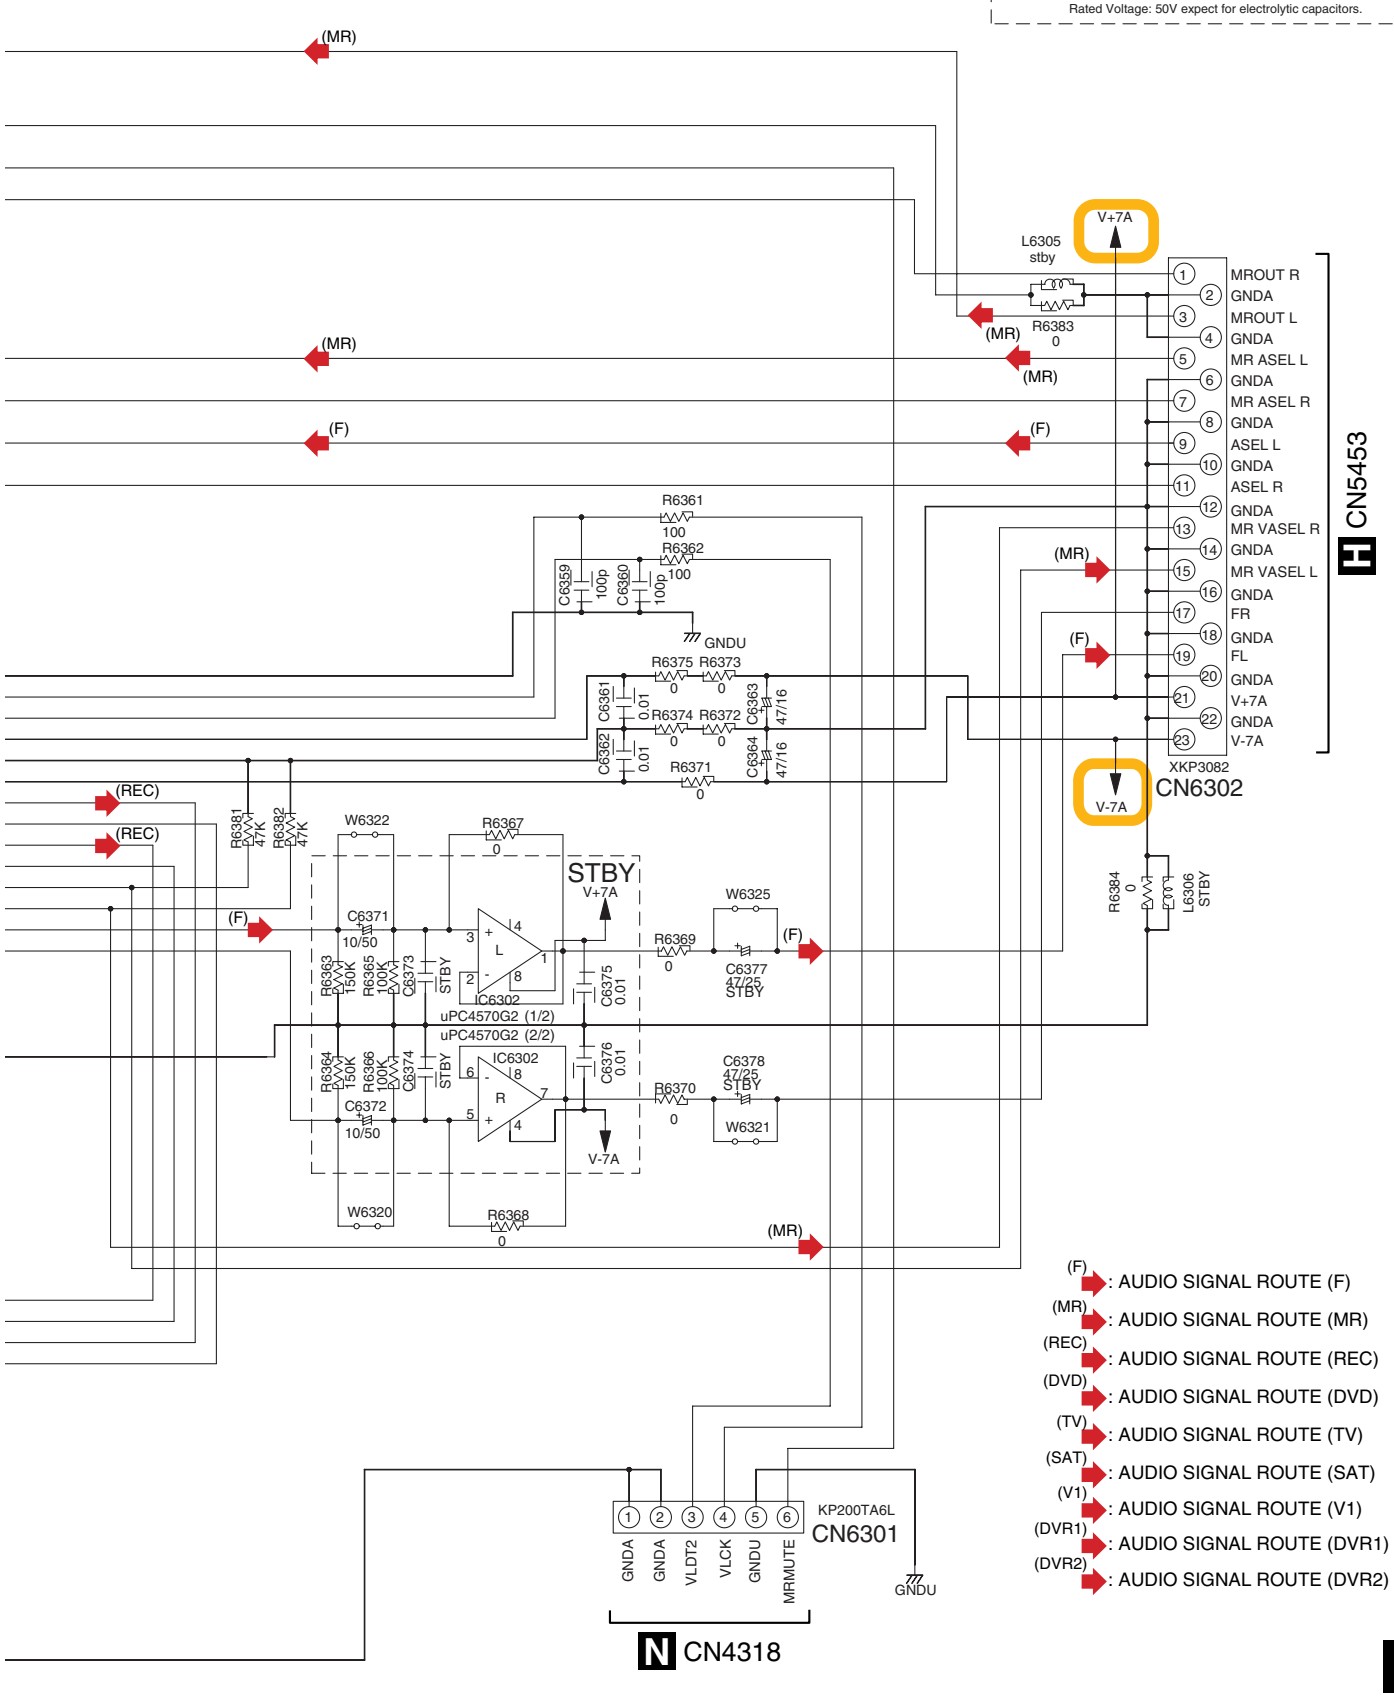


3.5 FRONT-IN and HEADPHONE ASSYS

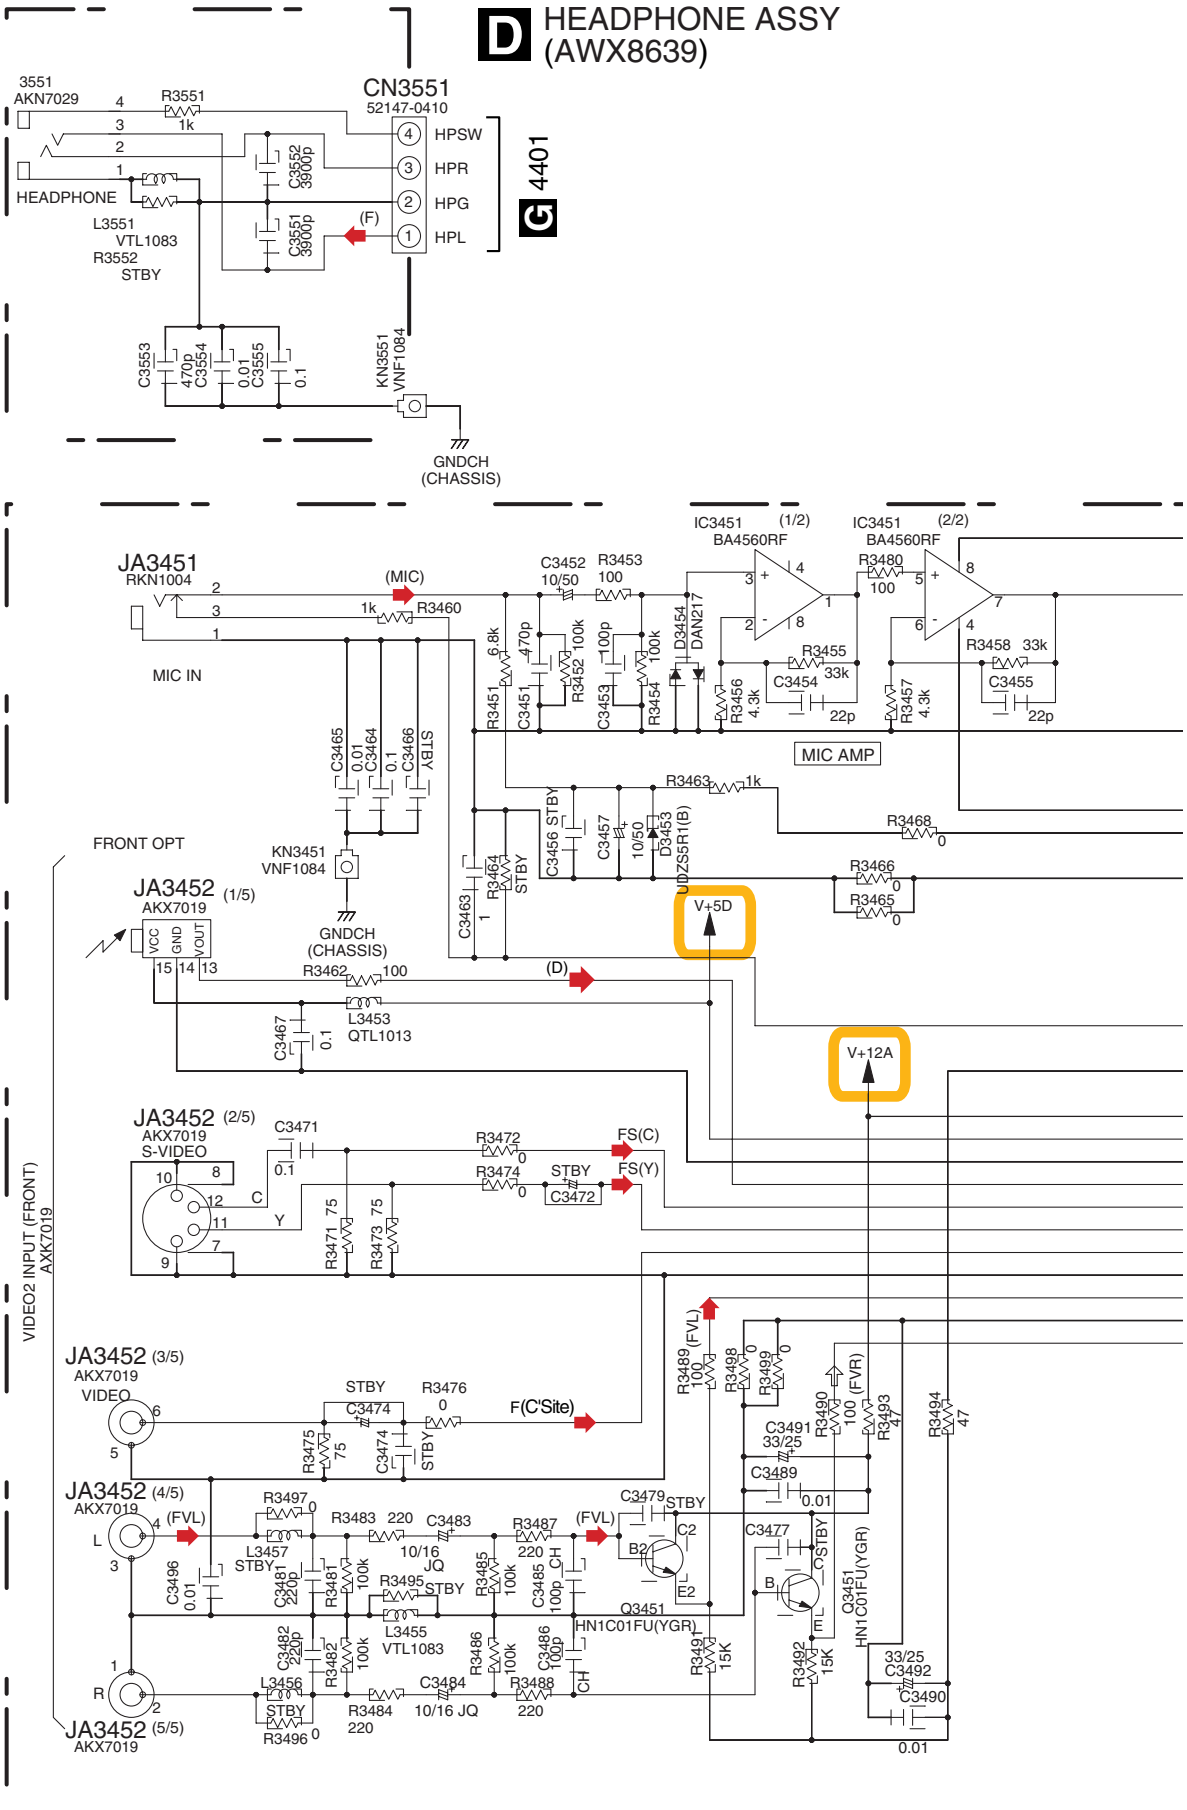

C D

C FRONT-IN ASSY (AWX8638)

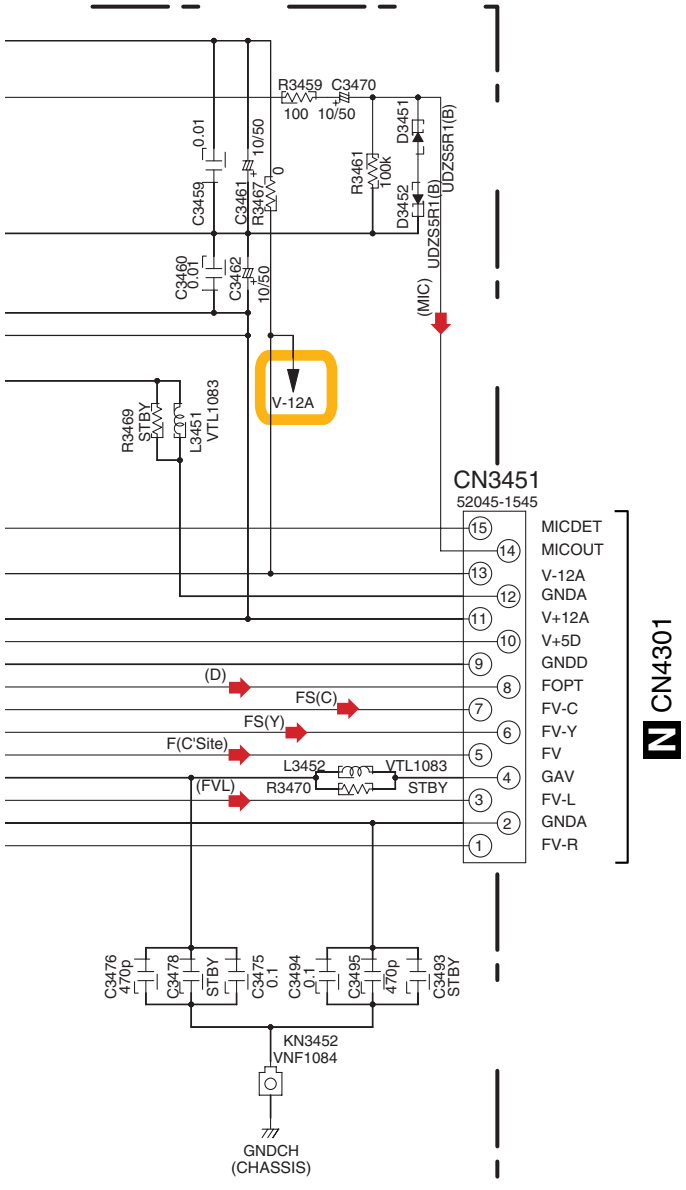

N CN4301

The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore,when replacing,be sure to use parts of identical designation.

NOTE

1.RESISTORS
- Unit: k-k , M-M or unless otherwise noted.
- Rated power: 1/16W unless otherwise noted.
- Tolerance: (J) ±5% unless otherwise noted.


2.CAPACITORS
- Unit: p-pF or µF unless otherwise noted.
- Ratings: Capacity(µF)/Voltage(V) unless otherwise noted.
- Rated Voltage: 50V expect for electrolytic capacitors.
- JQ:CEJQ

FS(Y) ➡ : VIDEO SIGNAL ROUTE FS(Y)
FS(C) ➡ : VIDEO SIGNAL ROUTE FS(C)
F(C'Site) ➡ : VIDEO SIGNAL ROUTE F(C'Site)
(FVL) ➡ : VIDEO SIGNAL ROUTE (VIDEO 2)
(F) ➡ : AUDIO SIGNAL ROUTE (F)
(MIC) ➡ : AUDIO SIGNAL ROUTE (MIC)
(D) ➡ : AUDIO SIGNAL ROUTE (SPDIF)


C

3.6 BRIDGE1, BRIDGE2, TRANS SIDE and BRIDGE3 ASSYS


E BRIDGE 1 ASSY (AWX8667)

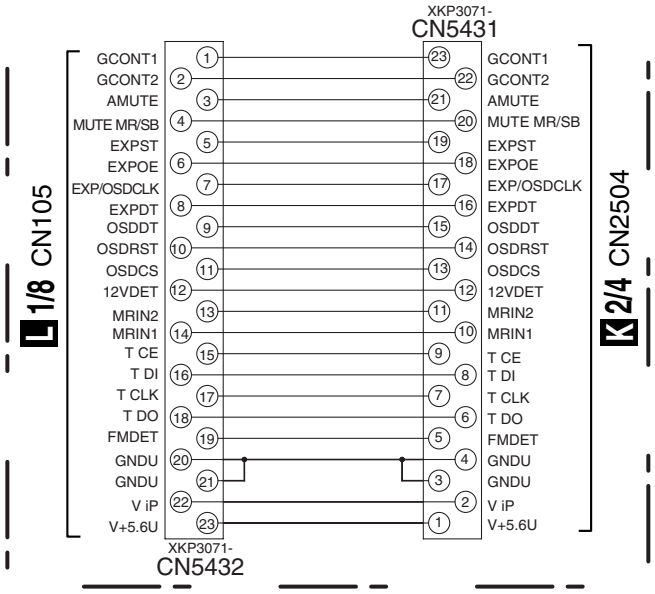

F BRIDGE 2 ASSY (AWX8668)

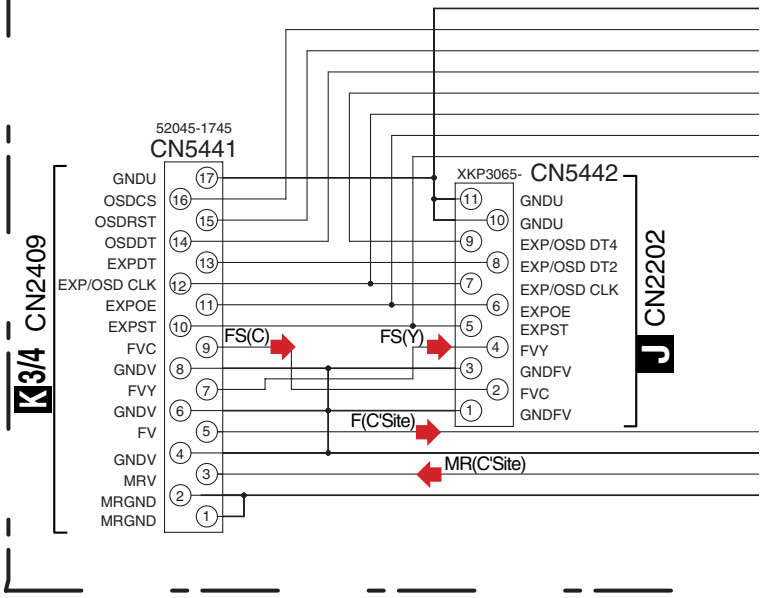


G TRANS SIDE ASSY (AWX8652)

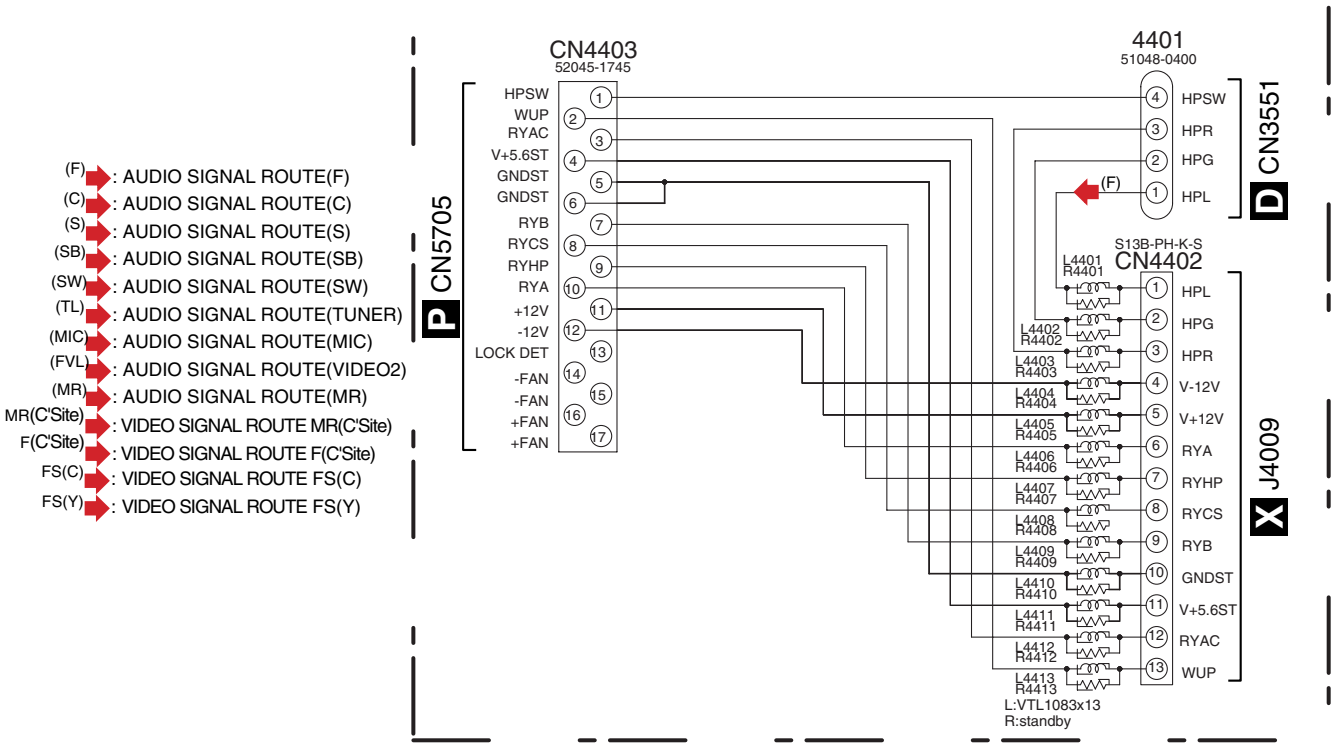


E F G

H BRIDGE 3 ASSY (AWX8669)

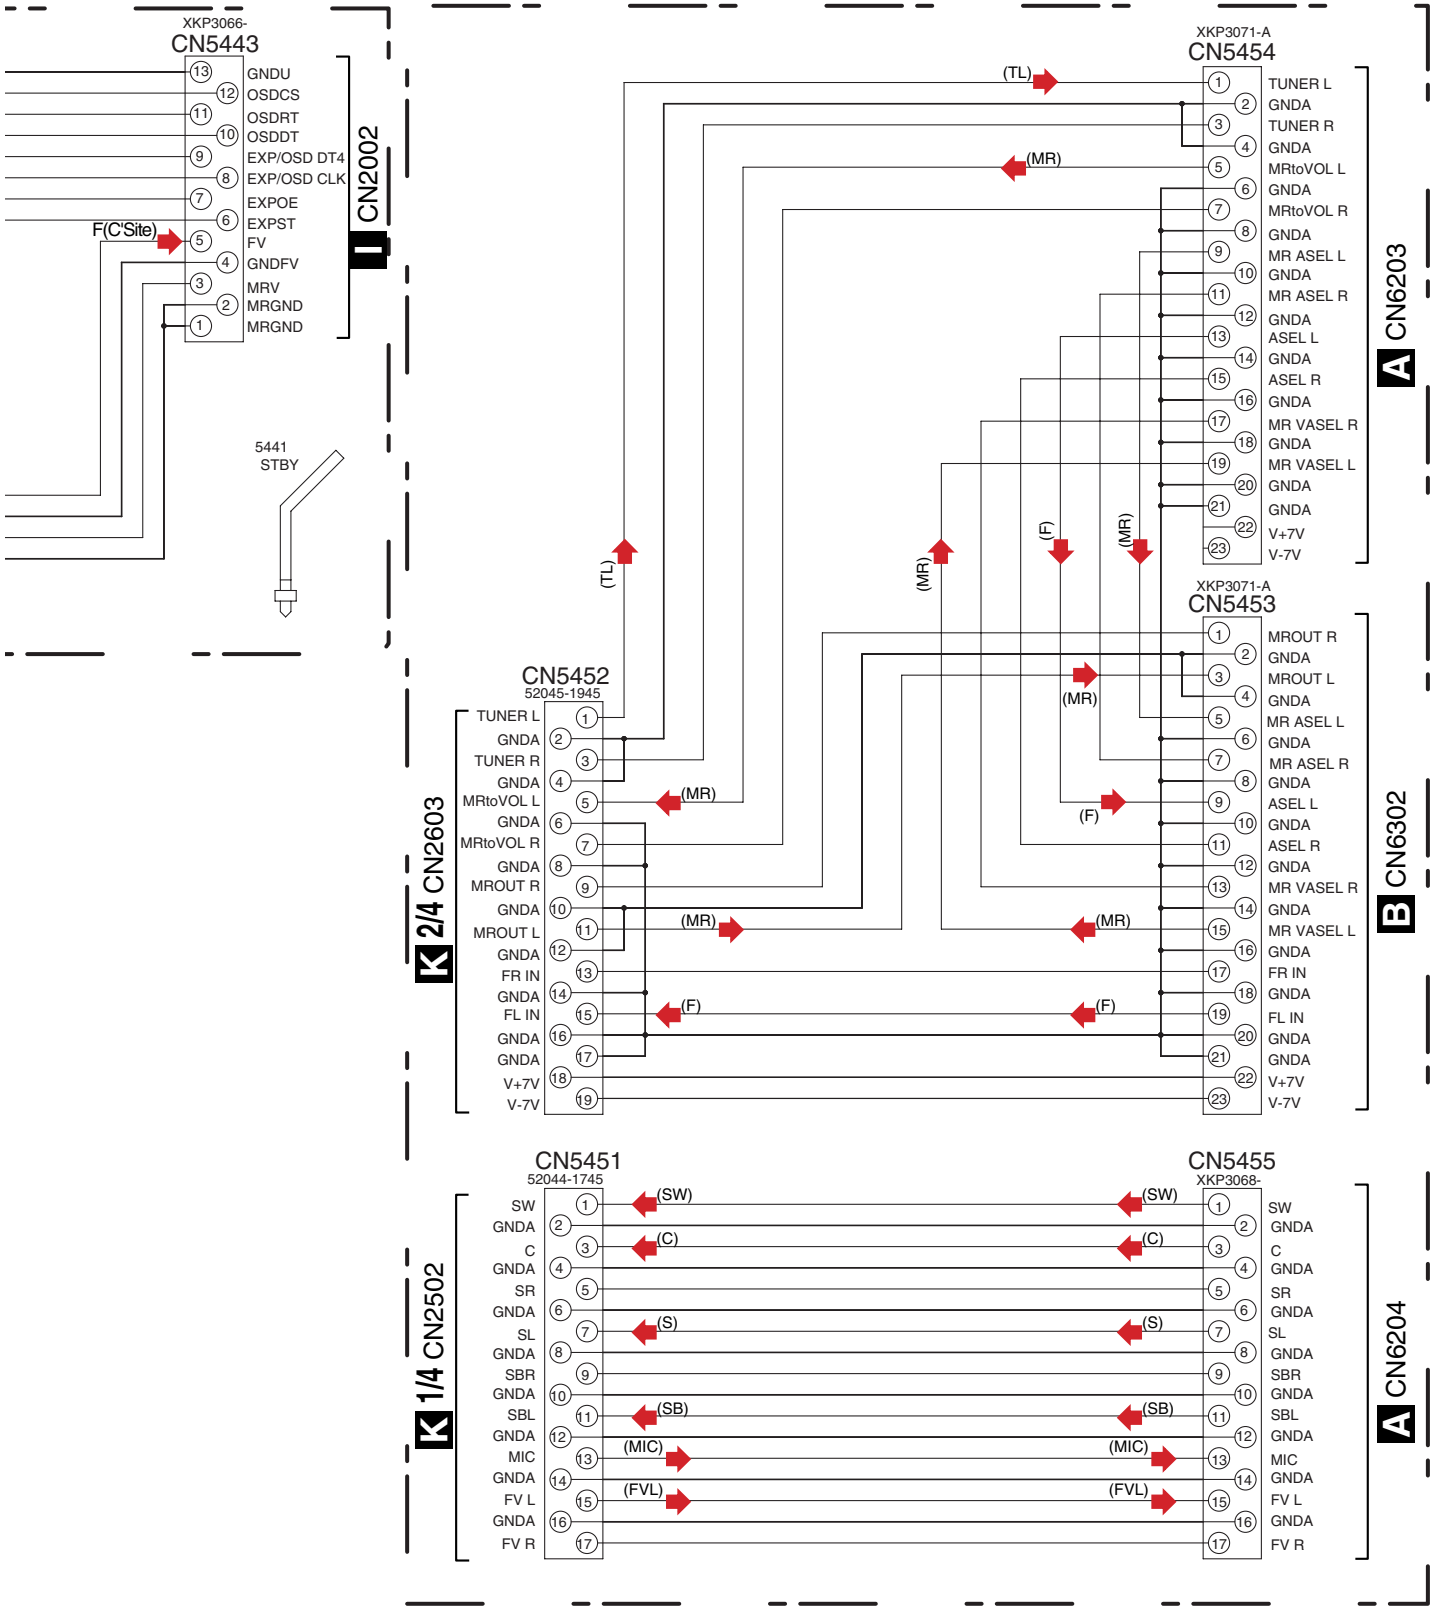

3.7 COMPOSITE V ASSY

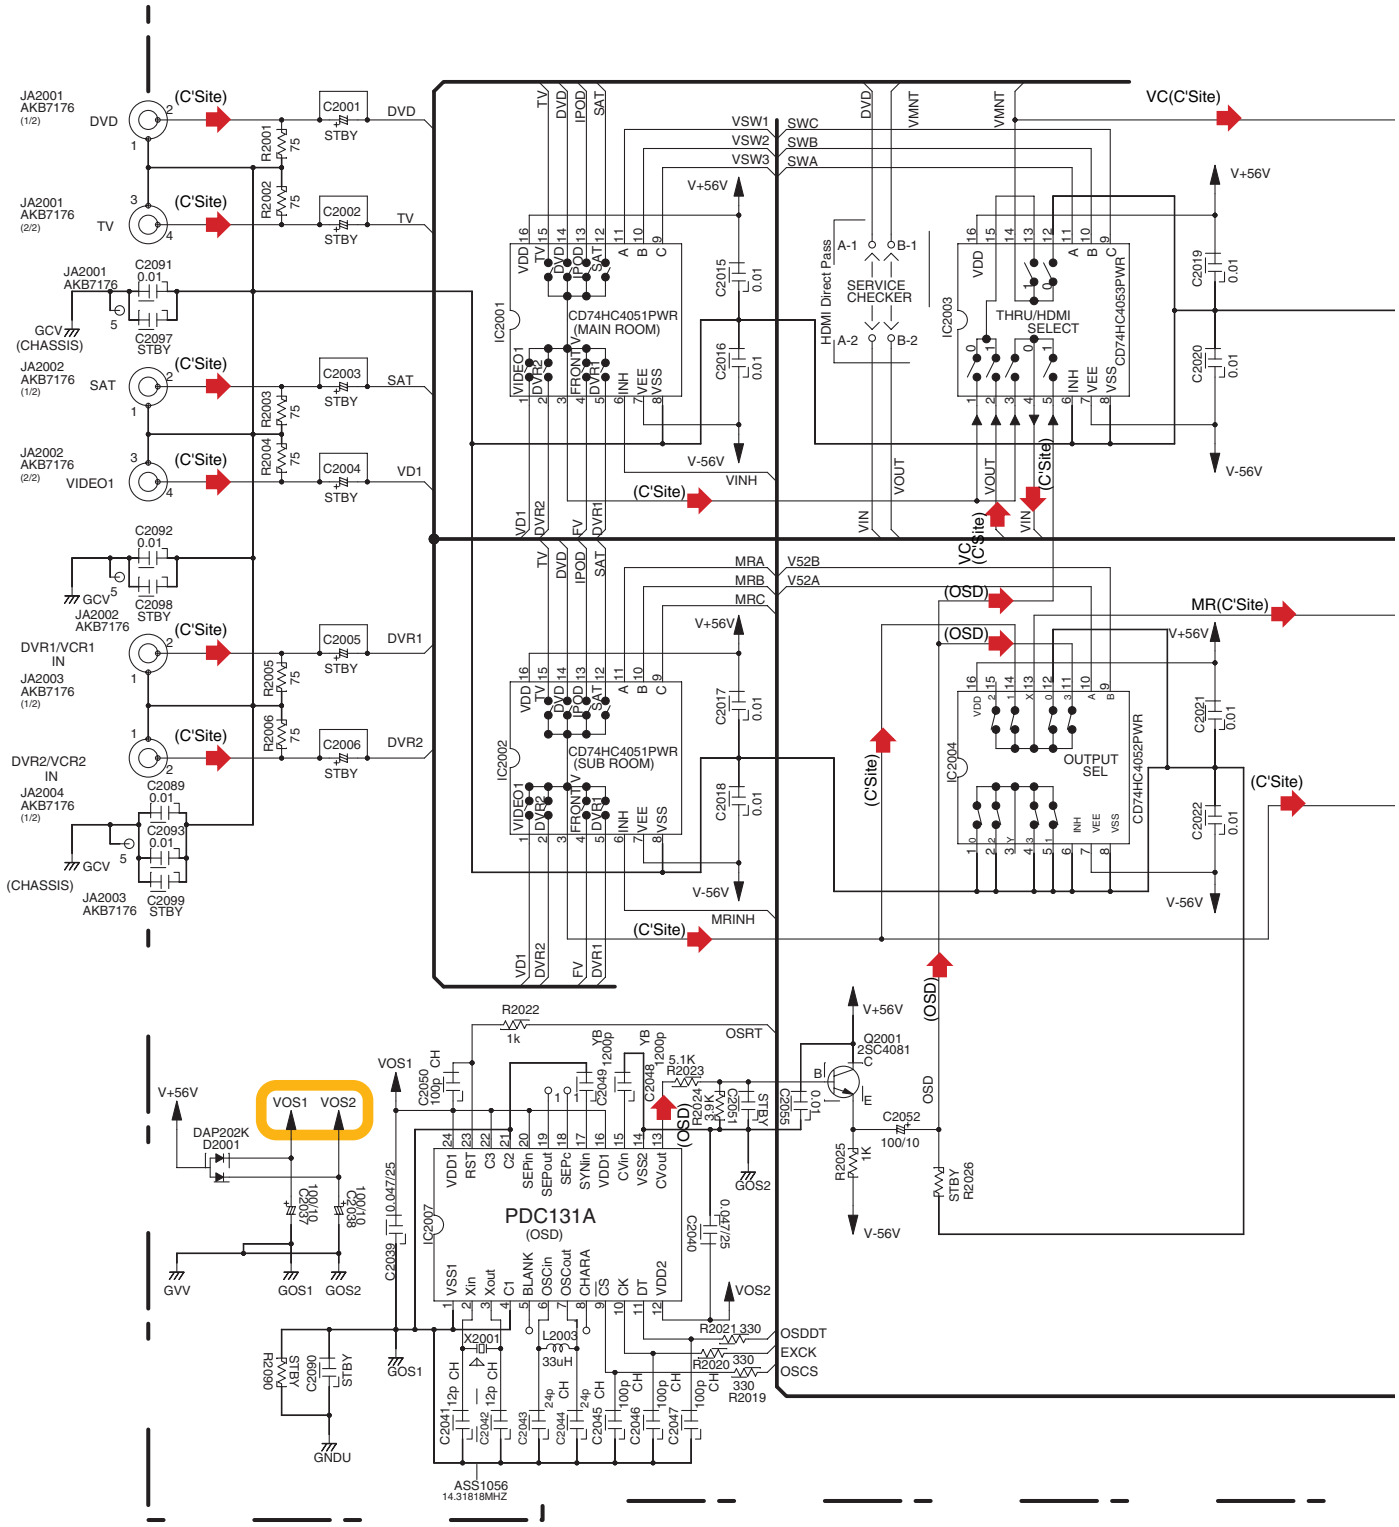

(C'Site) : VIDEO SIGNAL ROUTE (C'Site)


F(C'Site) : VIDEO SIGNAL ROUTE F(C'Site)

MR(C'Site) : VIDEO SIGNAL ROUTE MR(C'Site)

VC(C'Site) : VIDEO SIGNAL ROUTE VC(C'Site)

(OSD) : VIDEO SIGNAL ROUTE (OSD)

I COMPOSITE V ASSY (AWX8620)

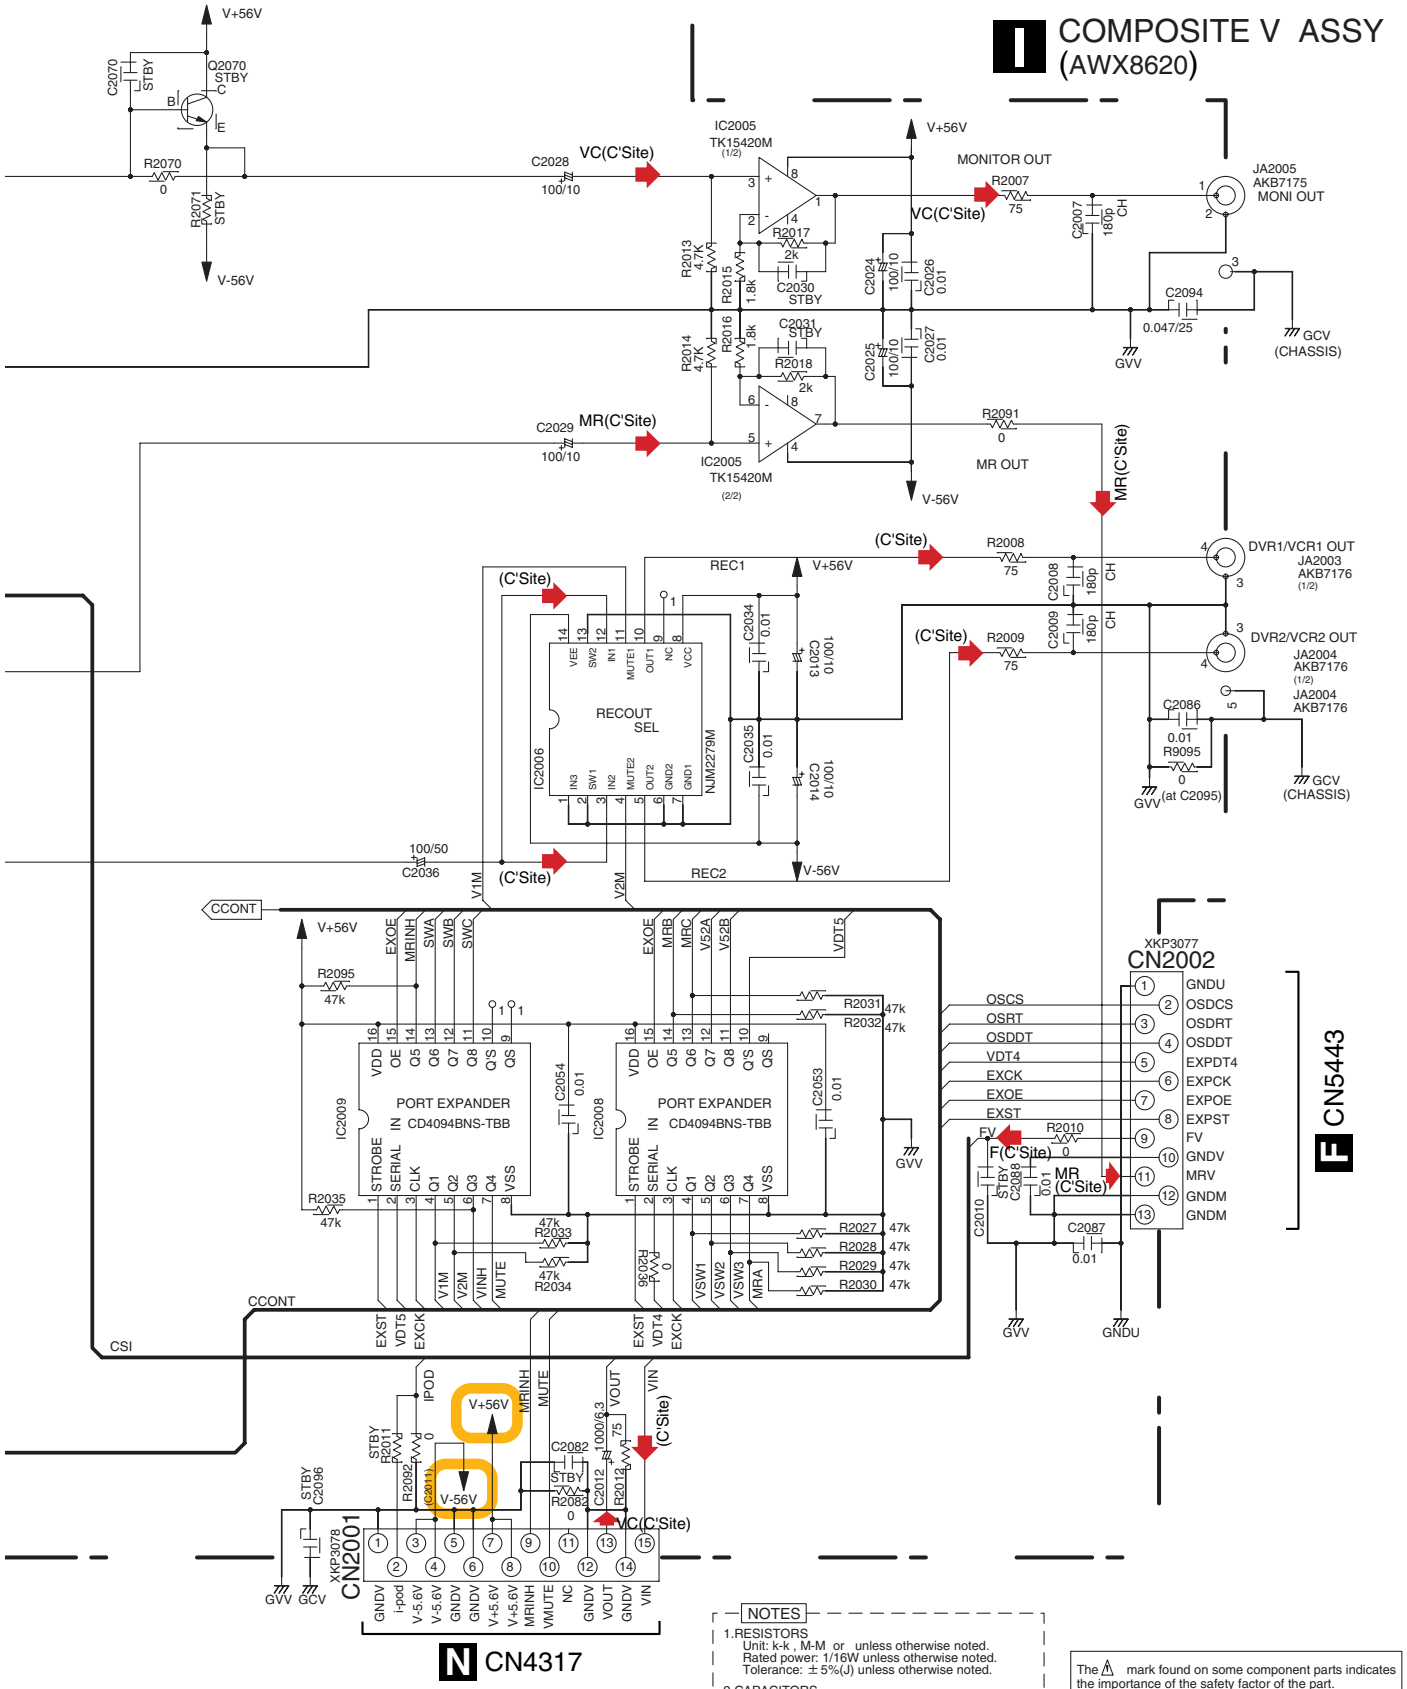

NOTES

1.RESISTORS
Unit: k-k , M-M or unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: ± 5%(J) unless otherwise noted.


2.CAPACITORS
No marked Capacitors are CEAT or CKSRYB.
Unit: p-pF or µF unless otherwise noted.
Rated Voltage: shown as "Capacity(µF)/Voltage(V)", or 50V unless otherwise noted.

3.DIODES
No marked Diodes are 1SS355.

※Parts or parts block marked by "STBY" are standby.

The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

3.8 S-VIDEO ASSY

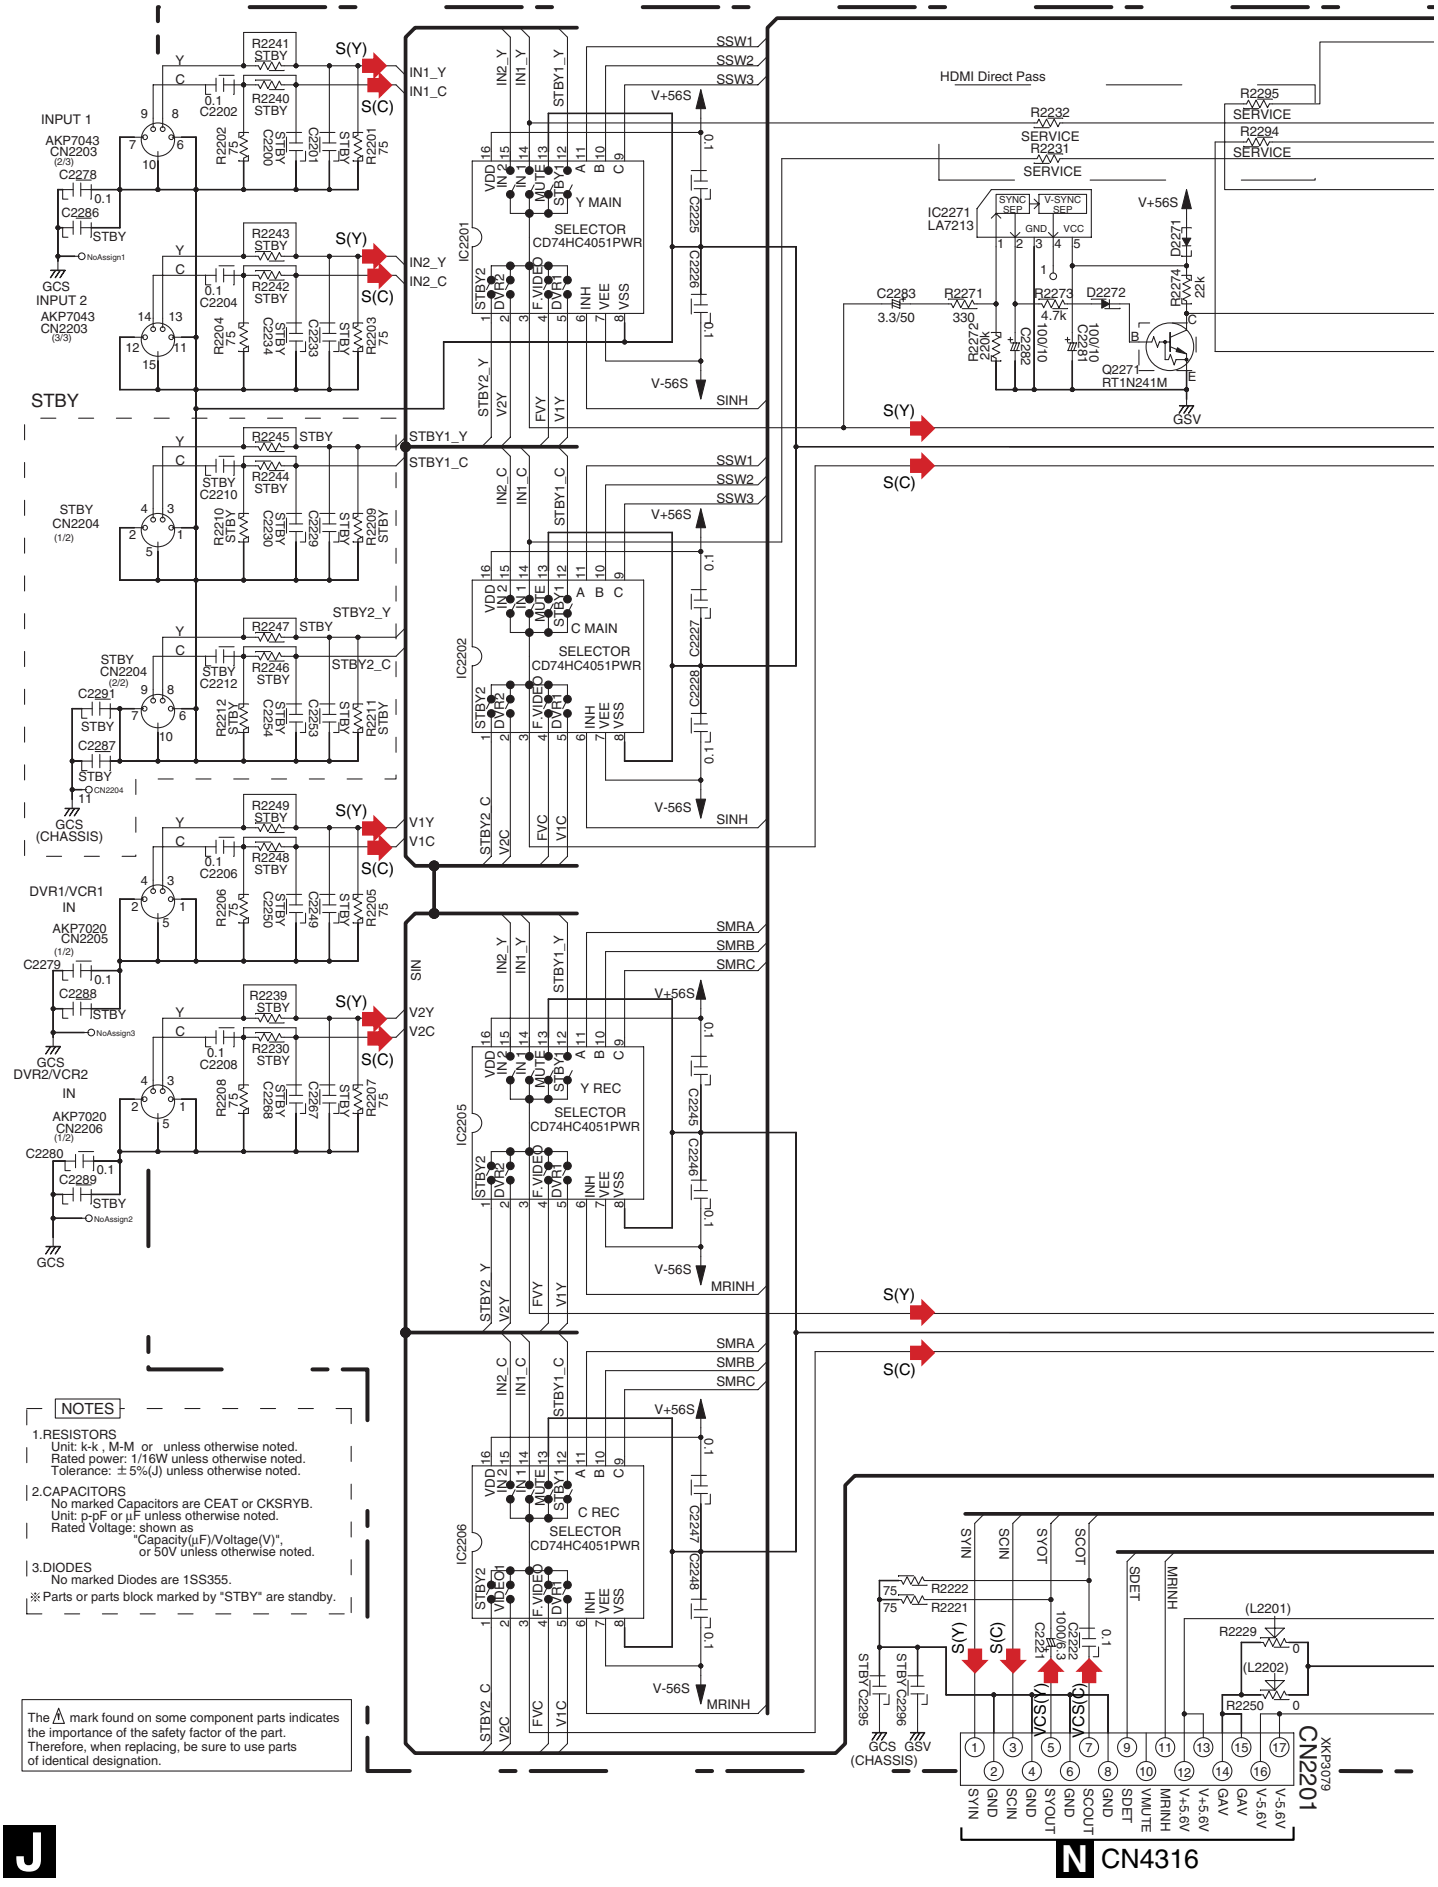

NOTES

1.RESISTORS
Unit: k-k , M-M or unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: ±5%(J) unless otherwise noted.


2.CAPACITORS
No marked Capacitors are CEAT or CKSRYB.
Unit: p-pF or µF unless otherwise noted.
Rated Voltage: shown as
"Capacity(µF)/Voltage(V)",
or 50V unless otherwise noted.

3.DIODES
No marked Diodes are 1SS355.


※Parts or parts block marked by "STBY" are standby.

The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.


J S-VIDEO ASSY (AWX8622)

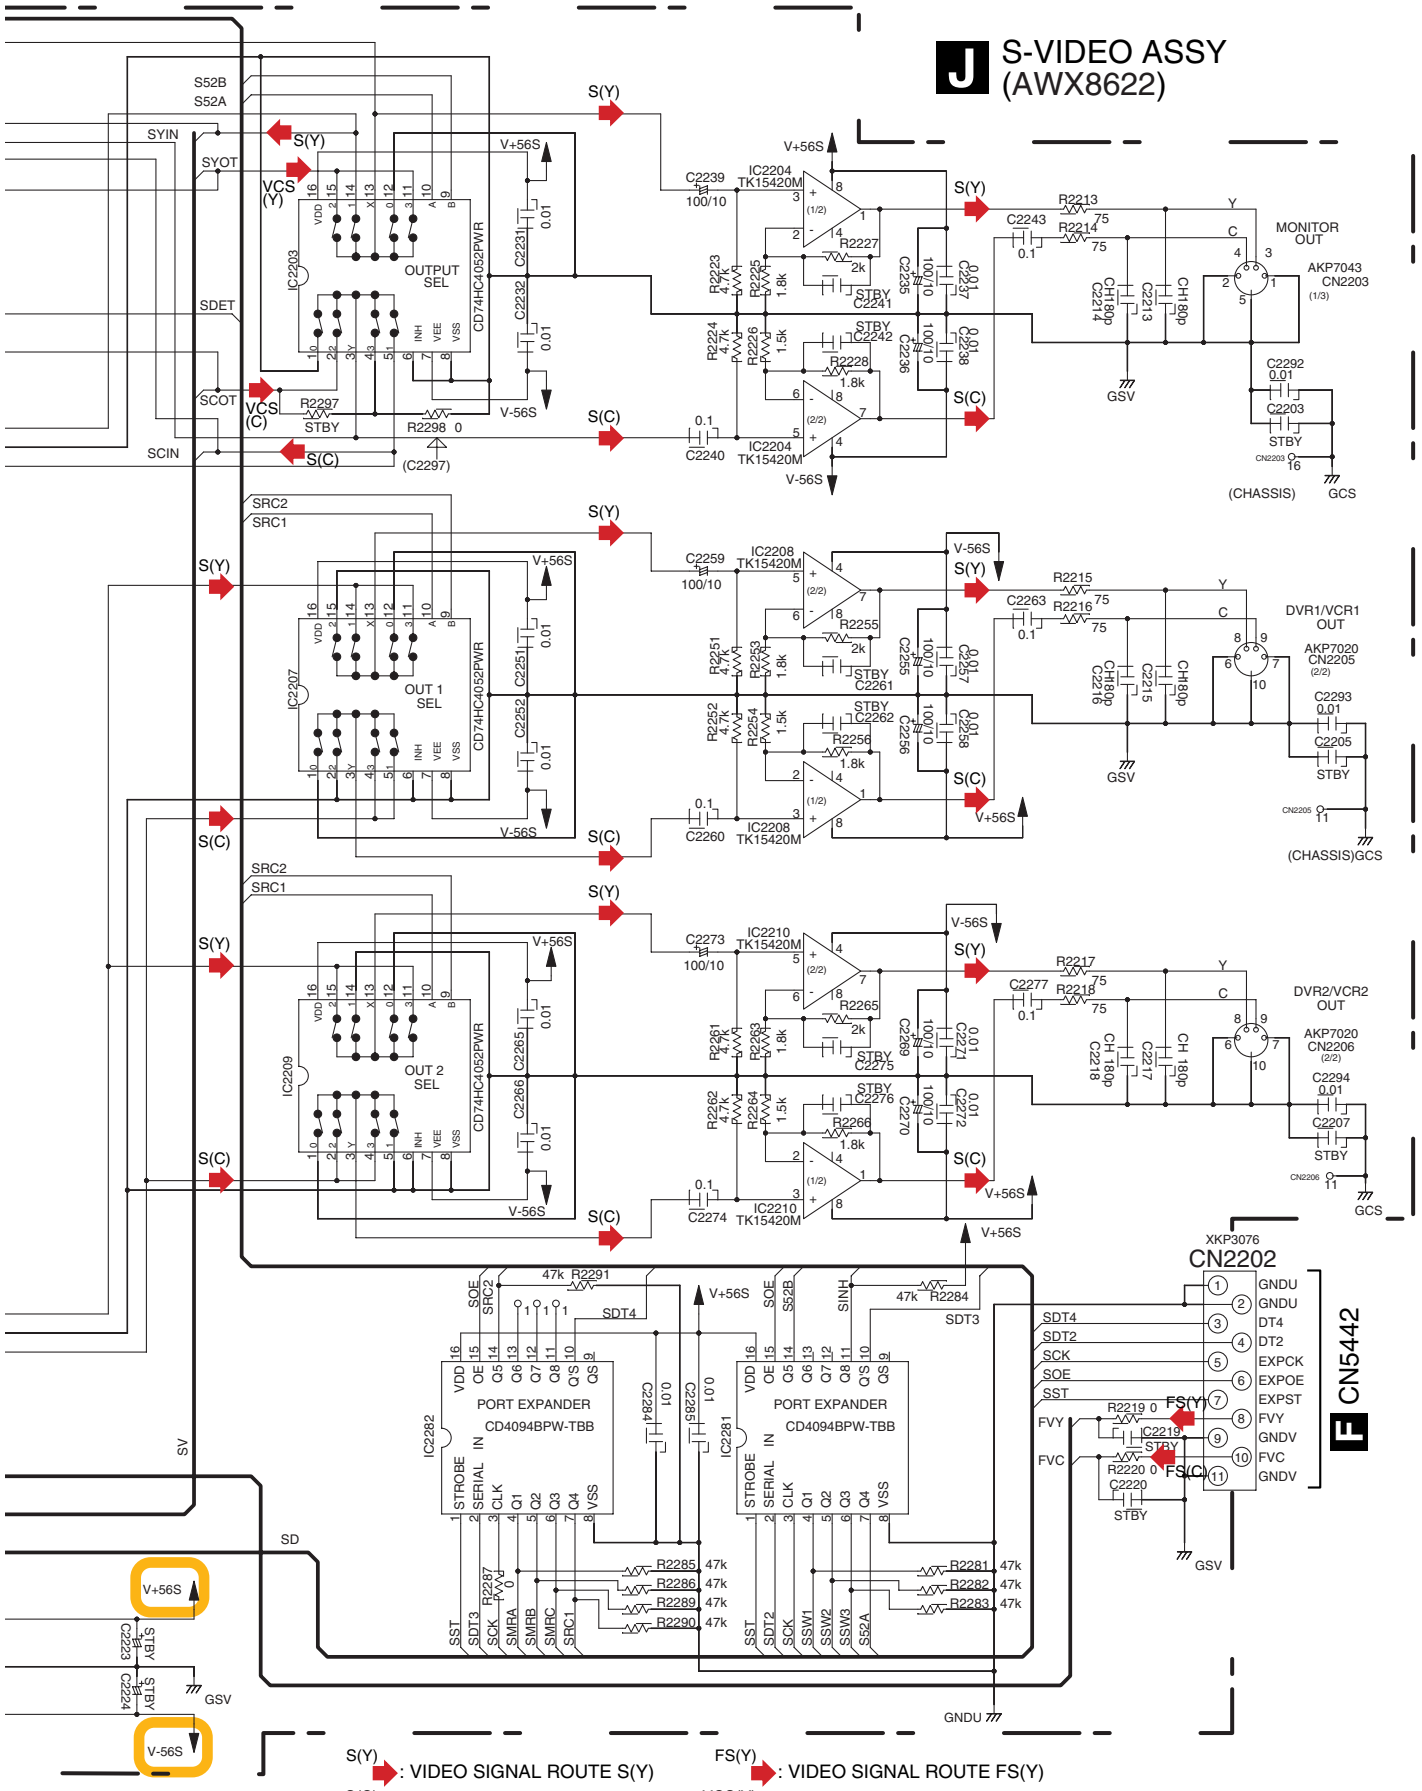

3.9 COMPONENT & VOL ASSY (1/4)

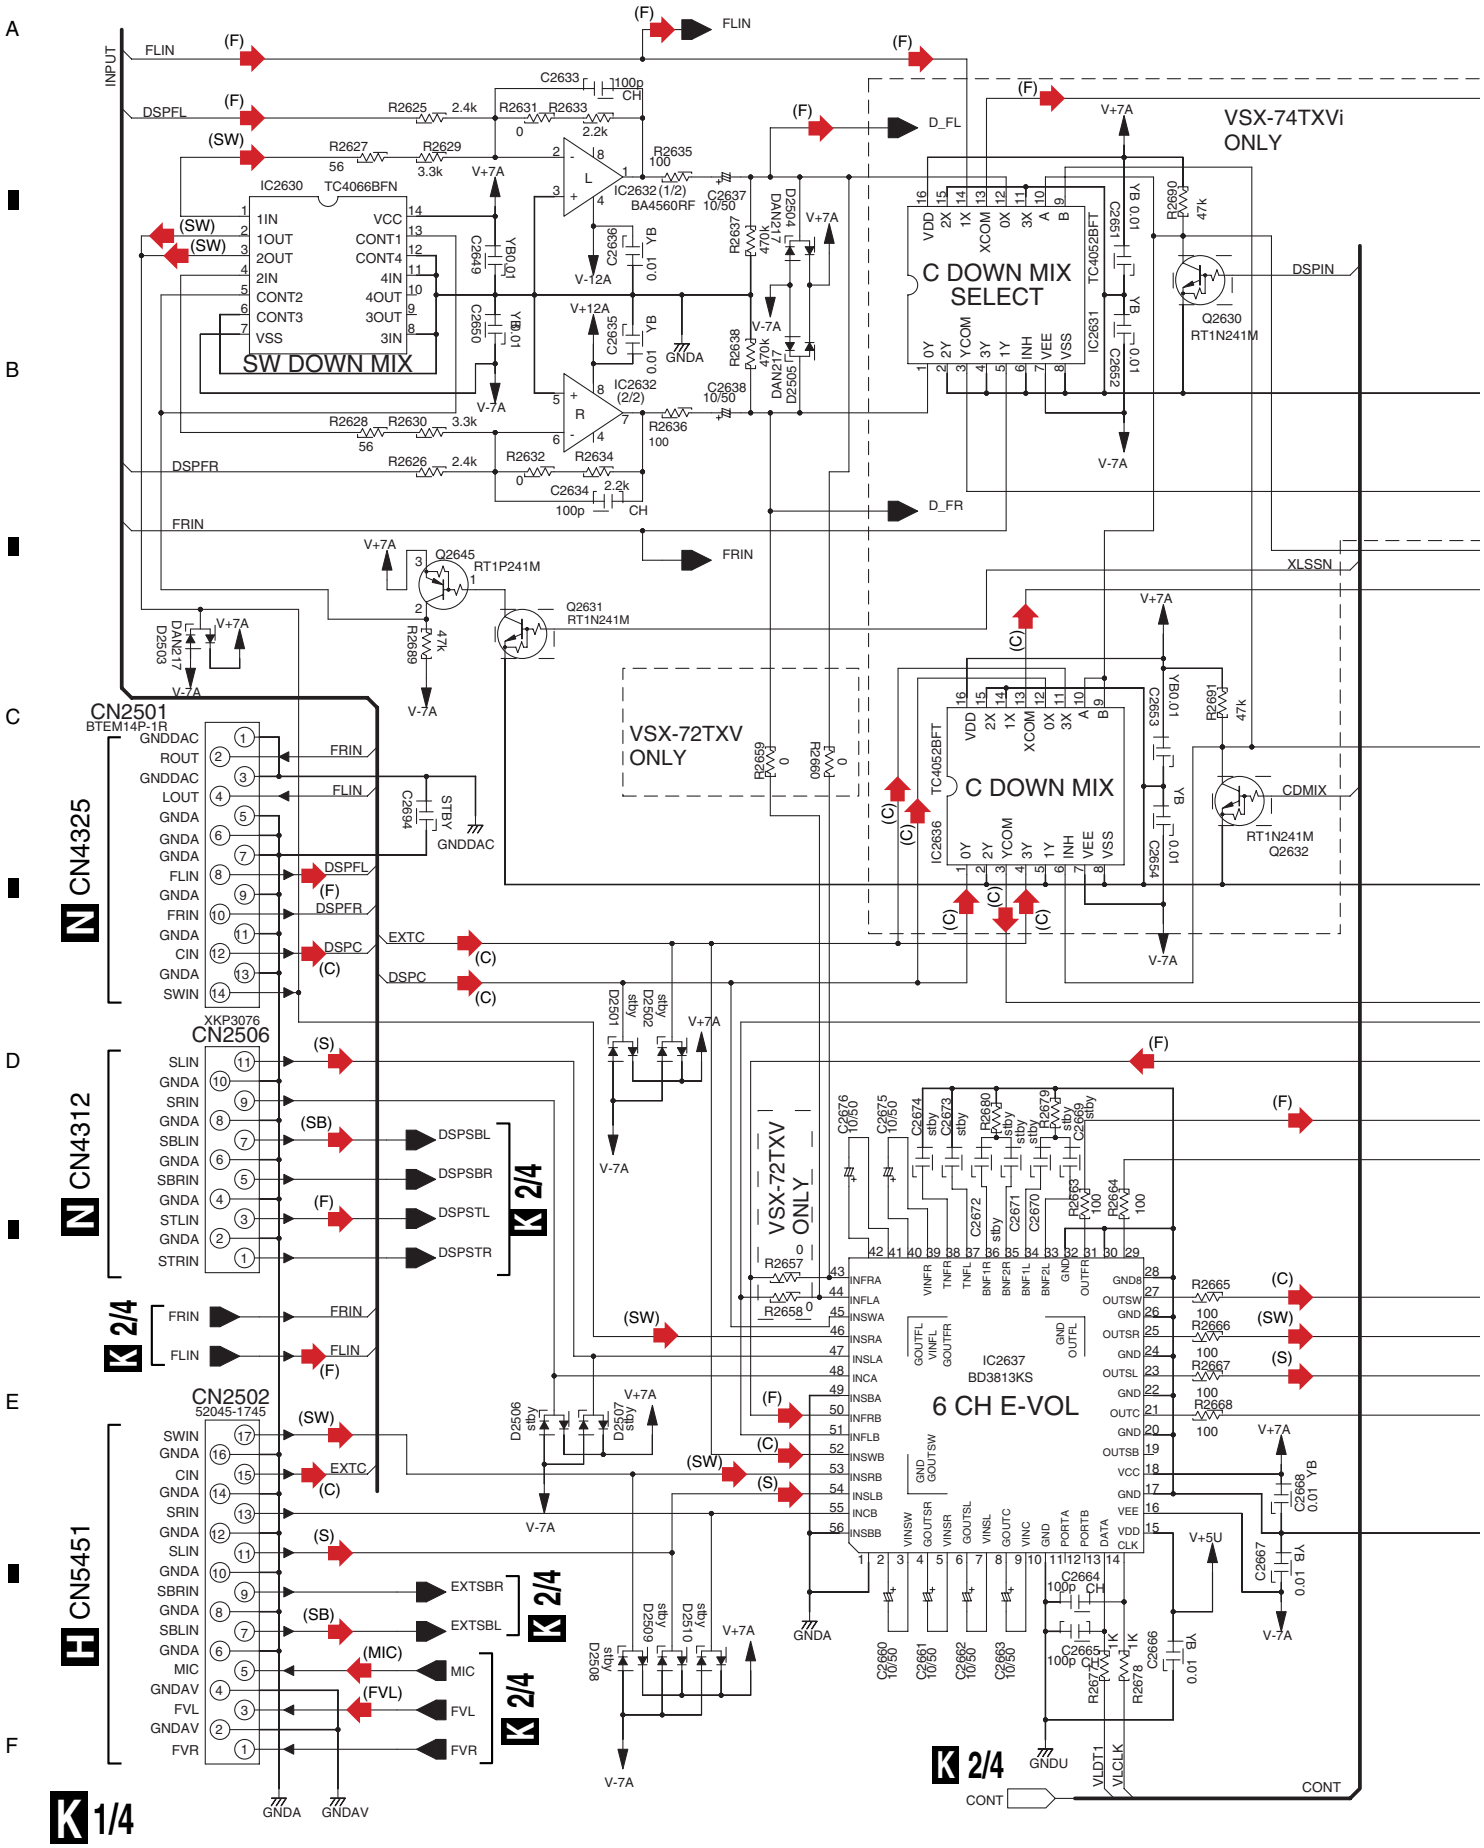


K 1/4 COMPONENT & VOL ASSY (VSX-74TXVi:AWQ7028) (VSX-72TXV:AWQ7030)

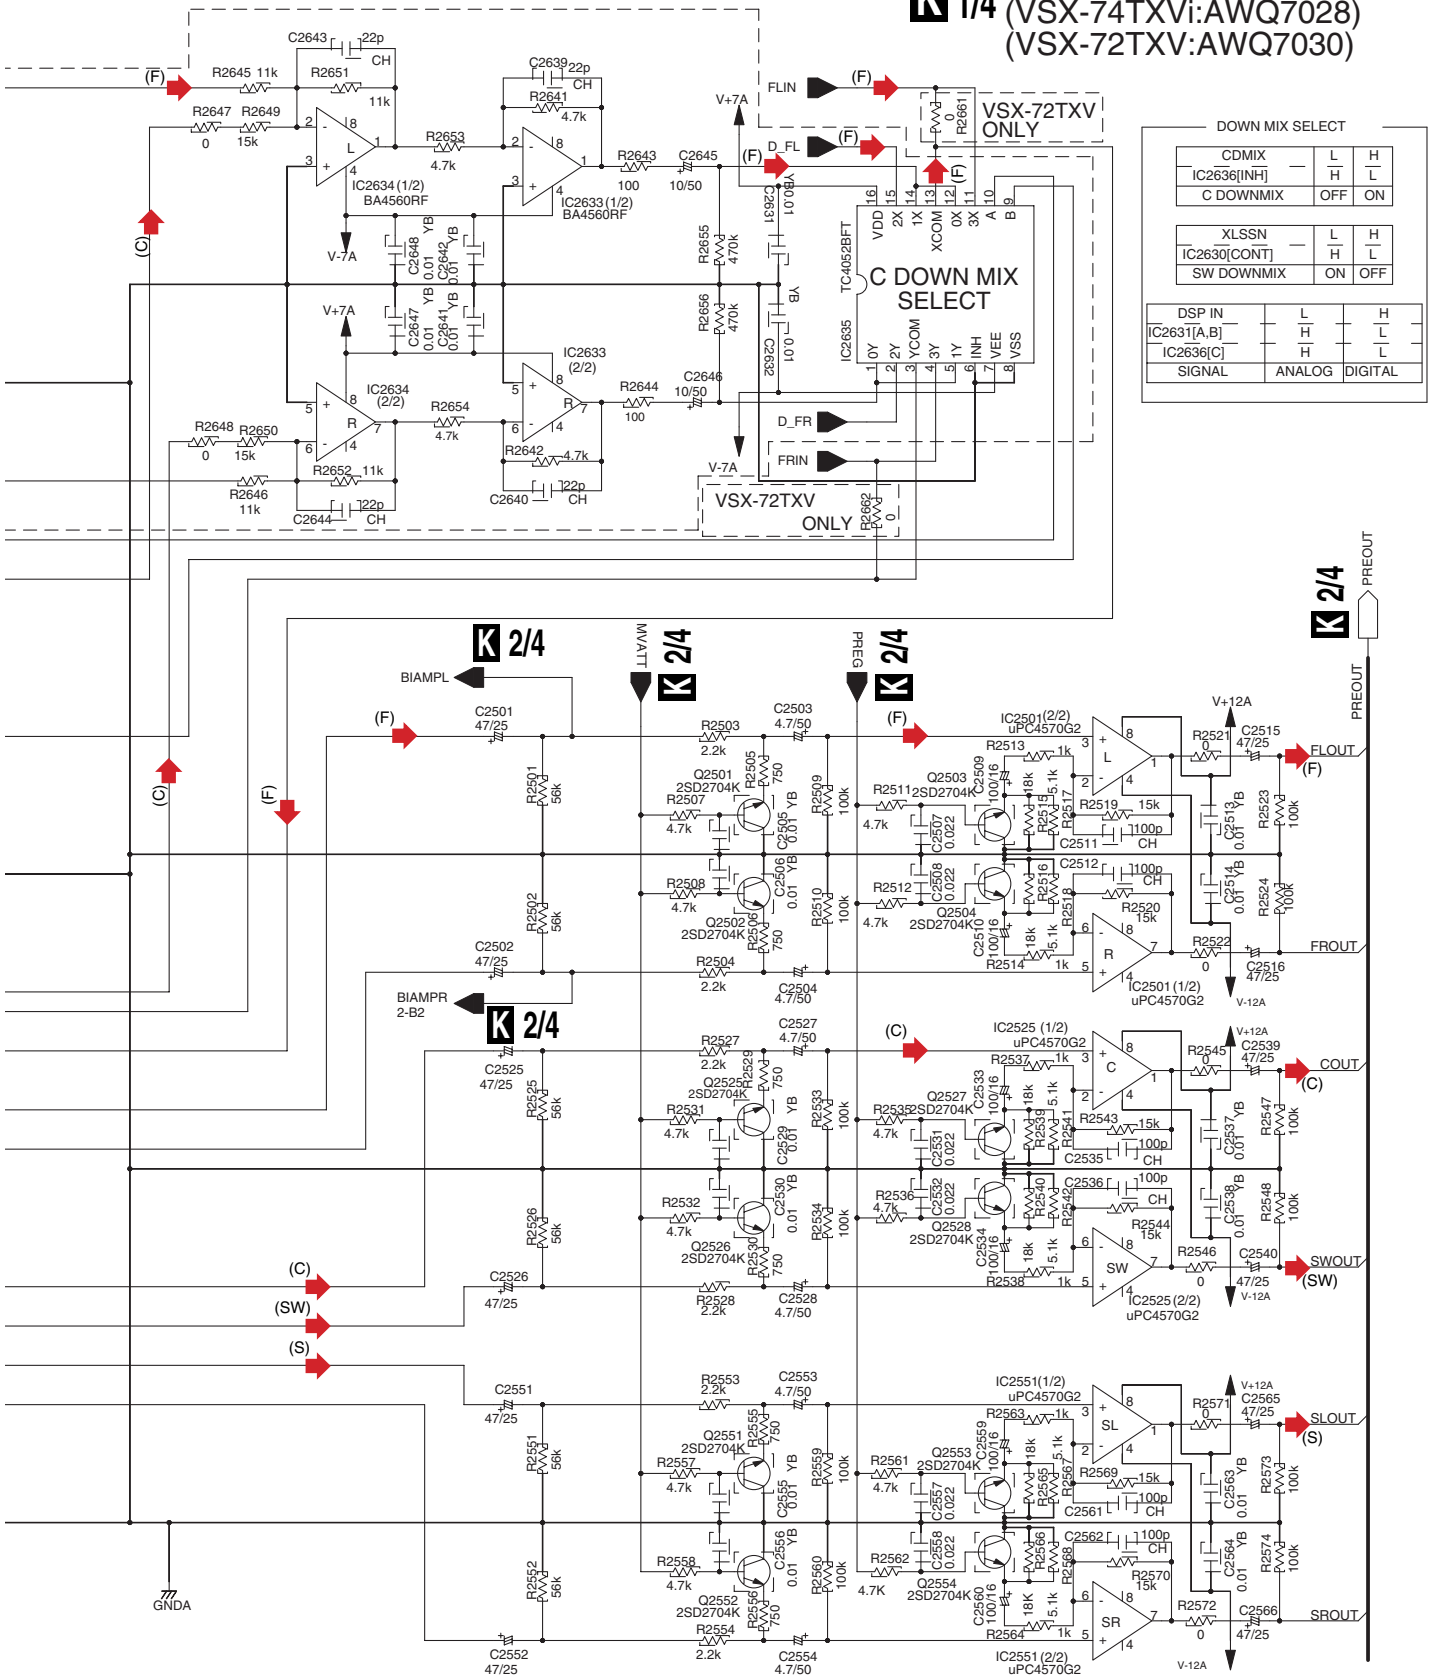


(F): AUDIO SIGNAL ROUTE(F)
(C): AUDIO SIGNAL ROUTE(C)
(S): AUDIO SIGNAL ROUTE(S)
(SW): AUDIO SIGNAL ROUTE(SW)
(MIC): AUDIO SIGNAL ROUTE(MIC)
(FVL): AUDIO SIGNAL ROUTE(VIDEO2)
(SB): AUDIO SIGNAL ROUTE(SB)

K 1/4


3.10 COMPONENT & VOL ASSY (2/4)

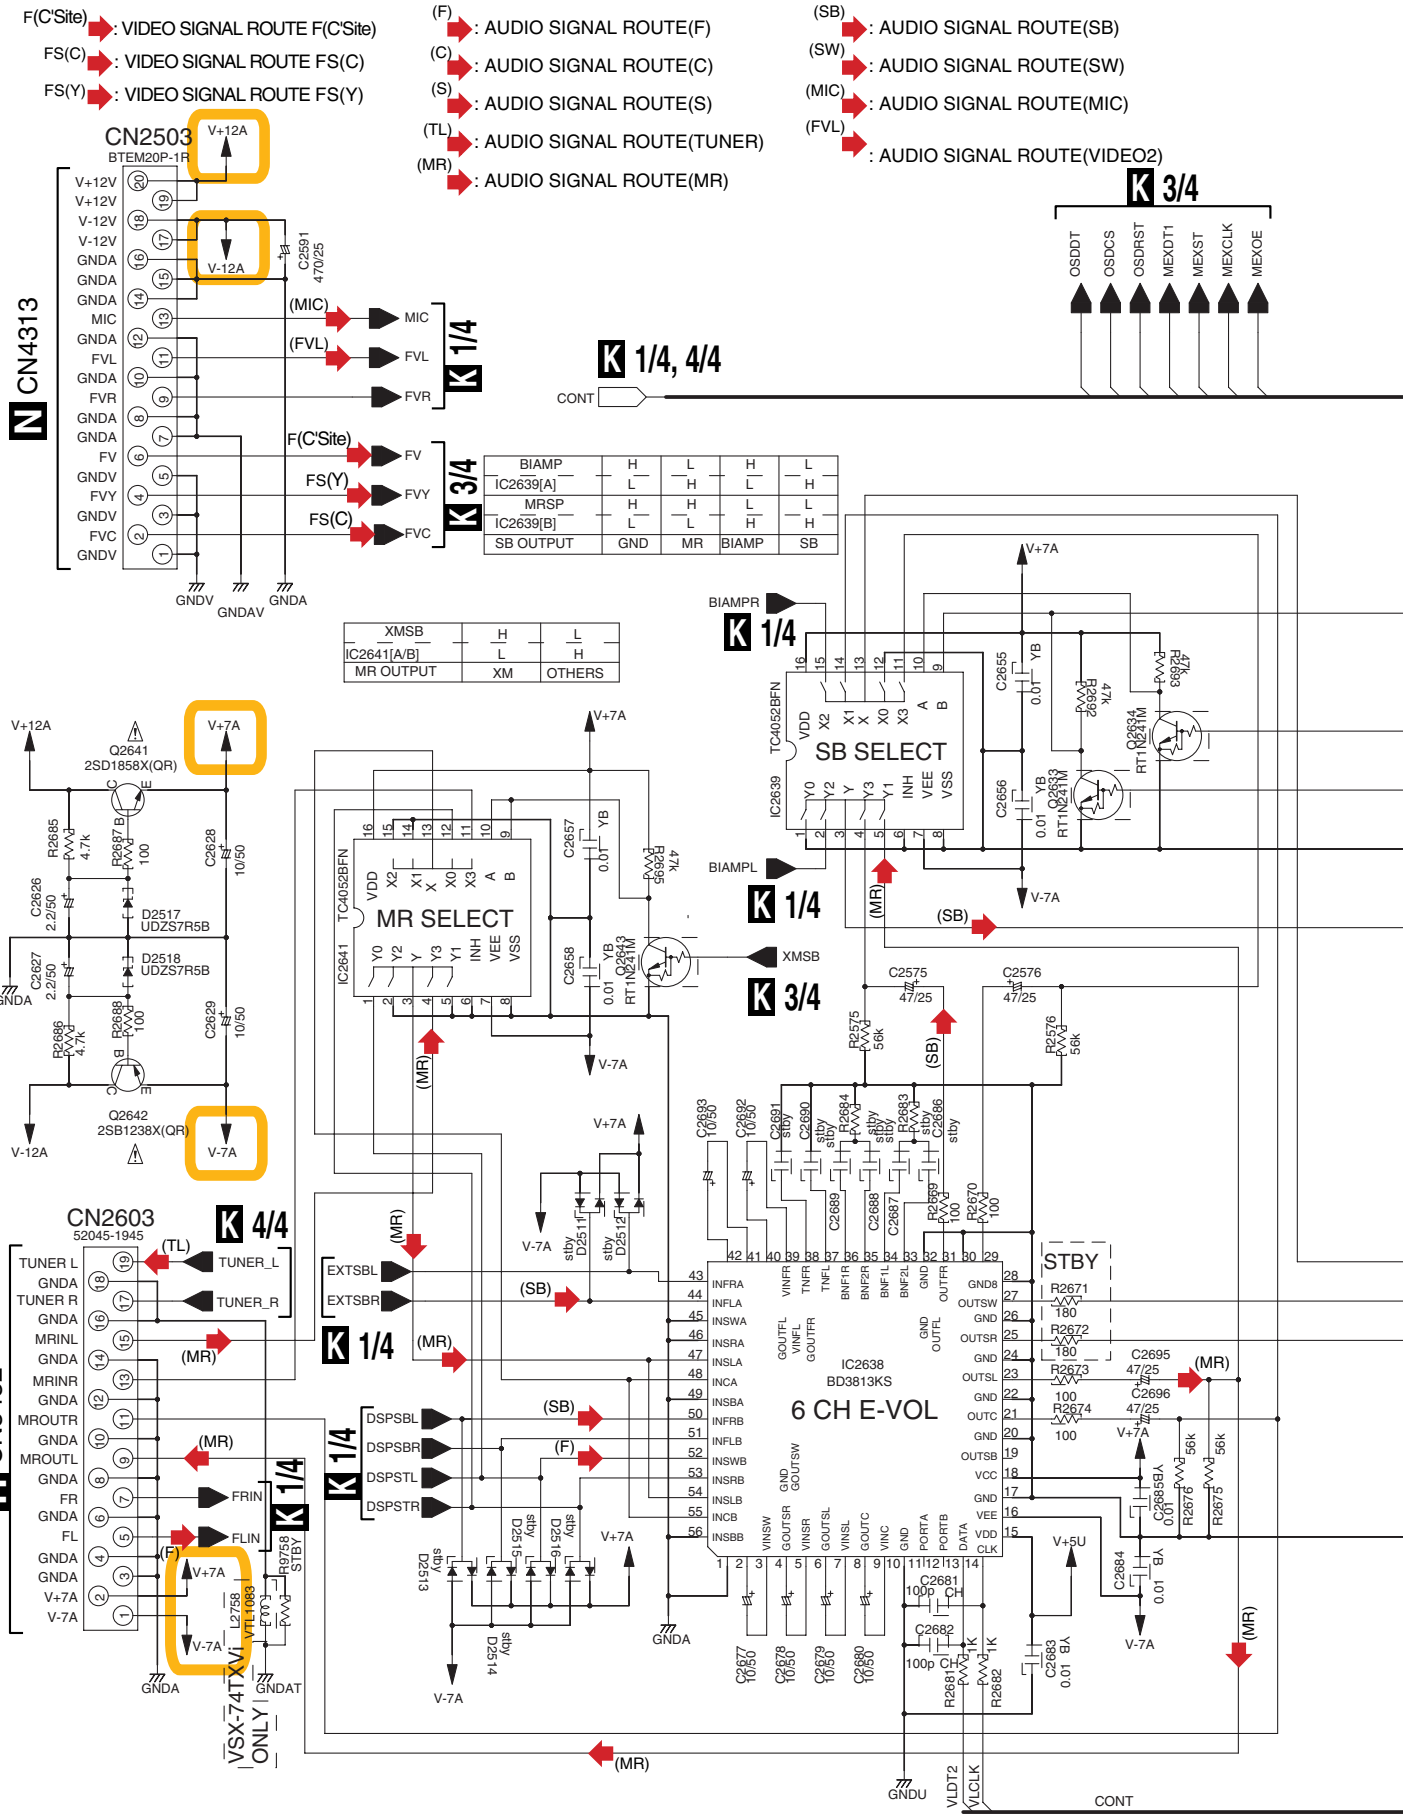

K 2/4 COMPONENT & VOL ASSY (VSX-74TXVi:AWQ7028) (VSX-72TXV:AWQ7030)

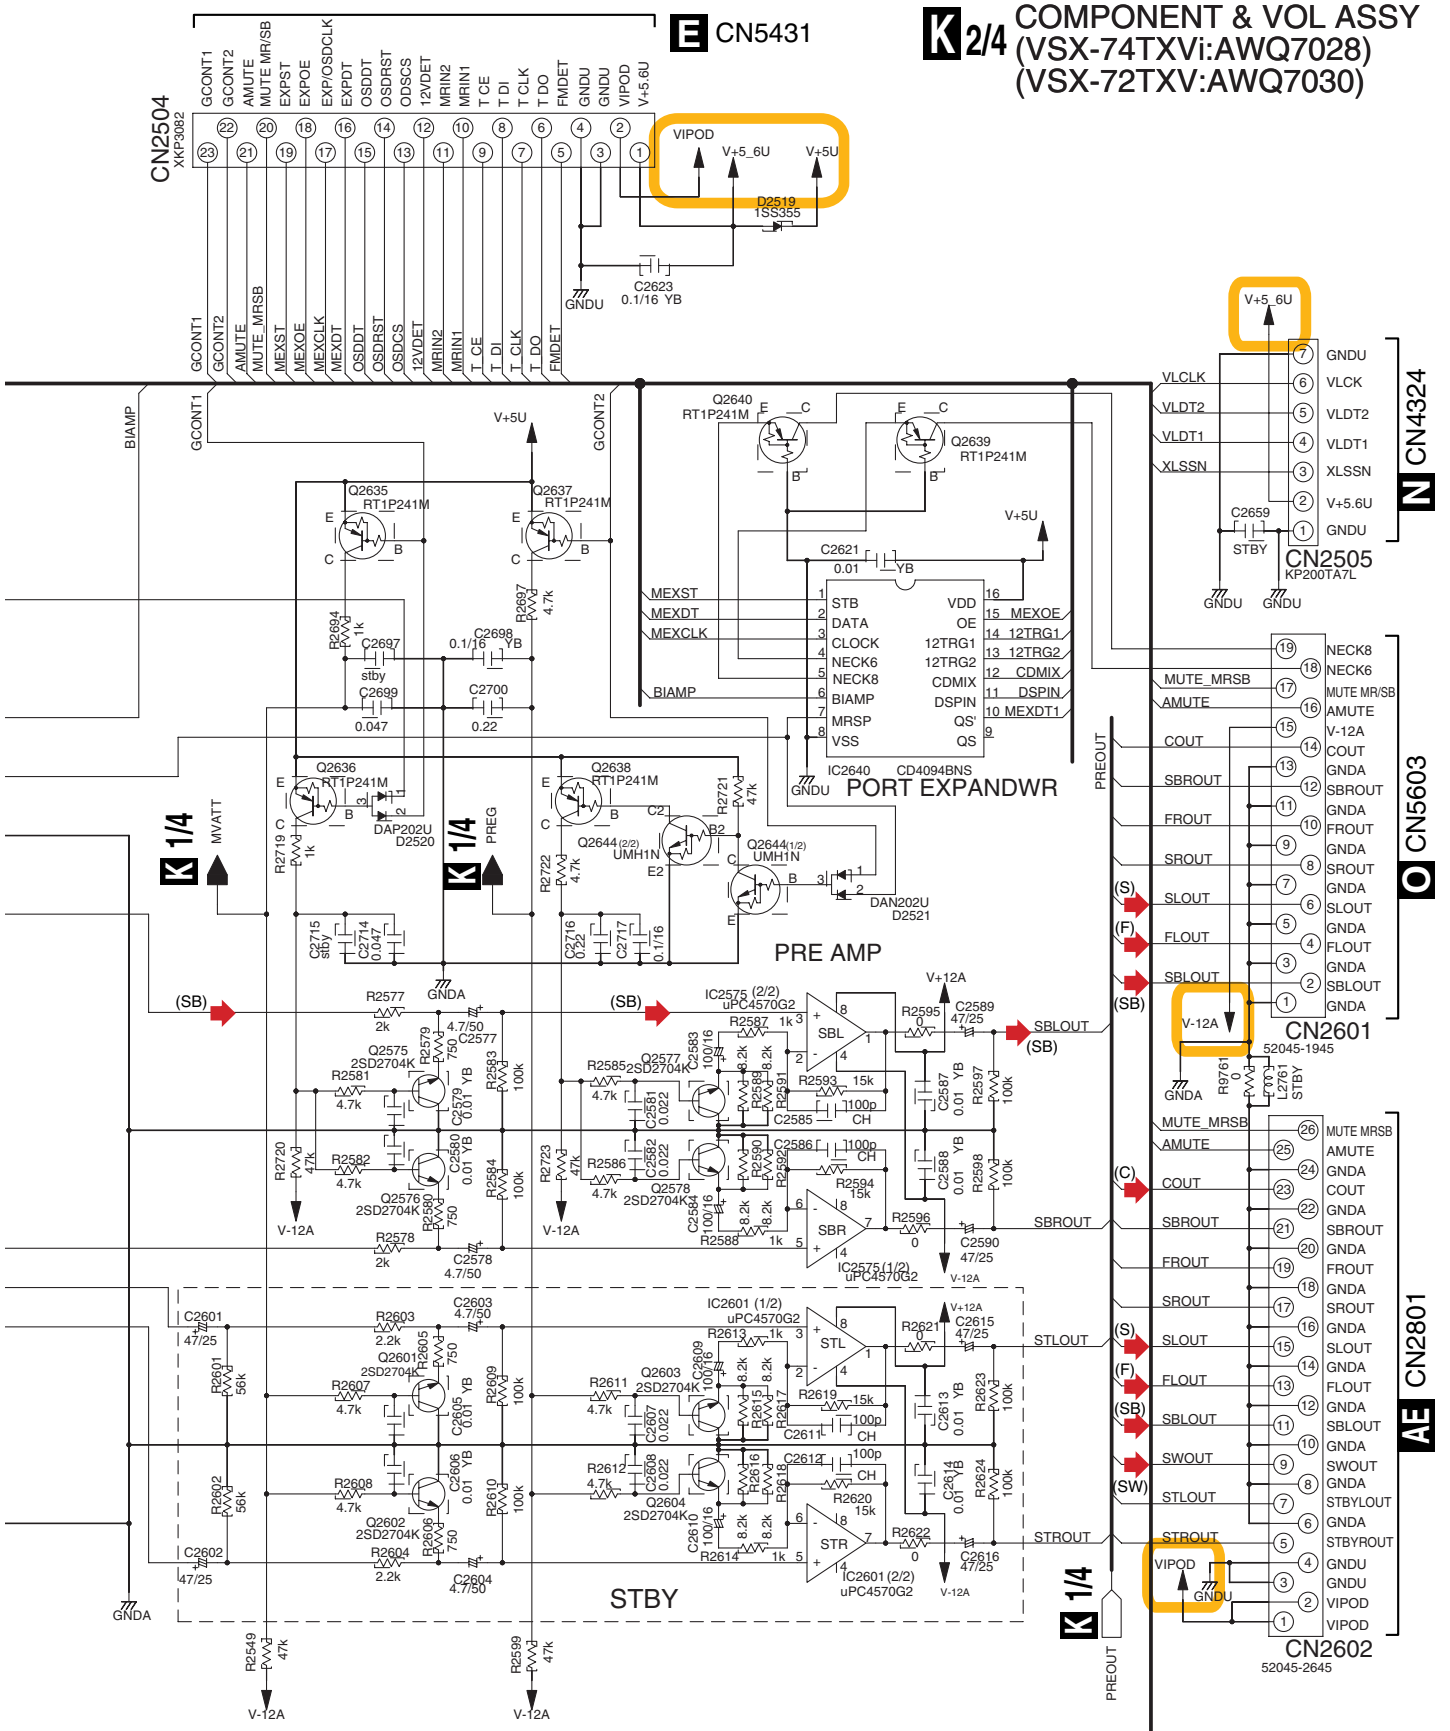


3.11 COMPONENT & VOL ASSY (3/4)

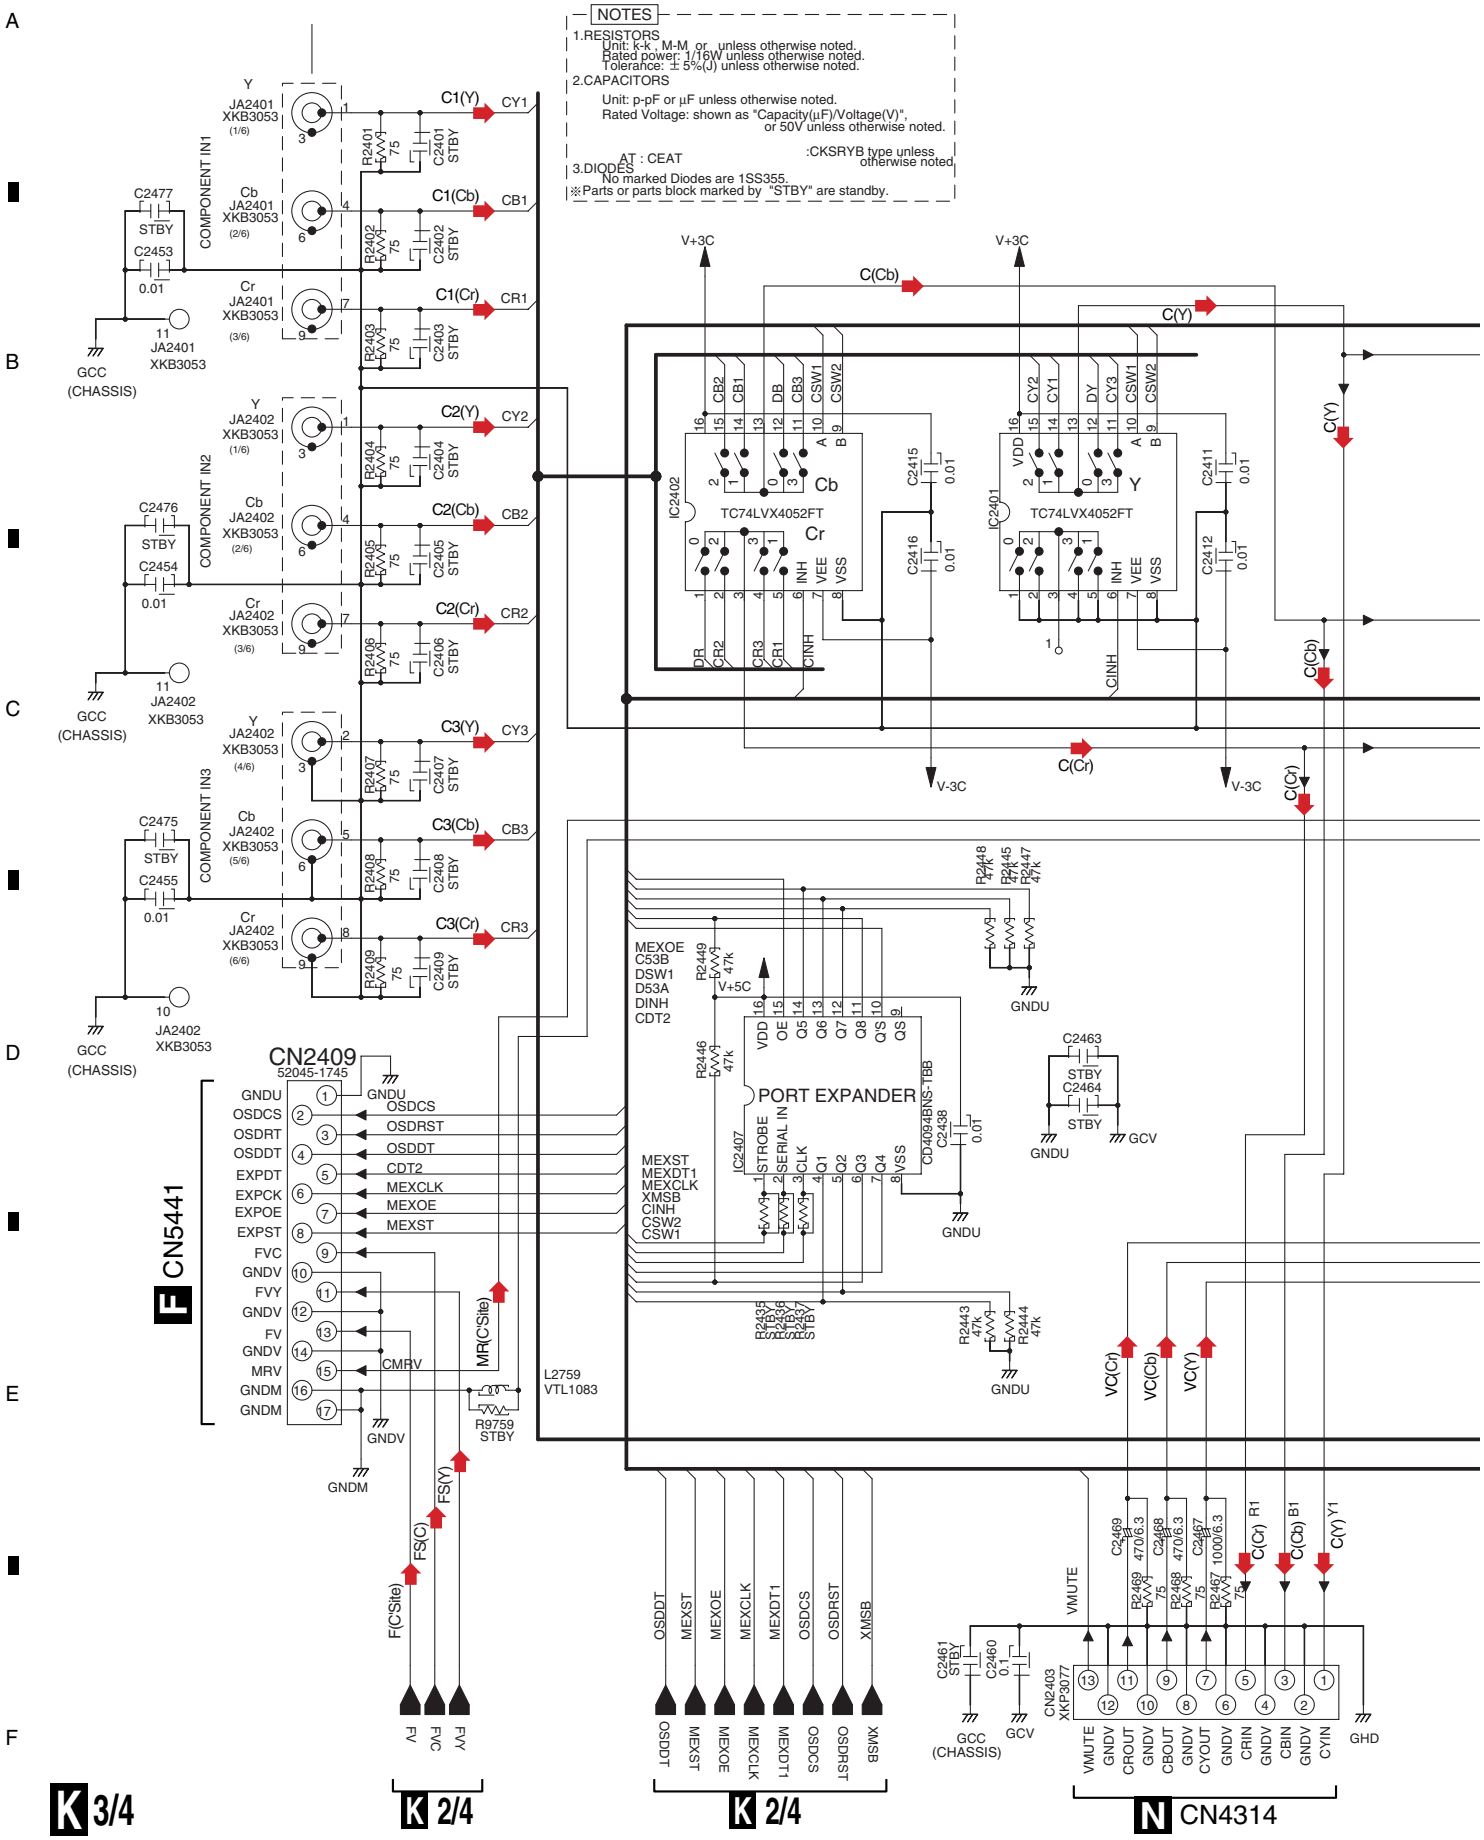

C1(Y) : VIDEO SIGNAL ROUTE C1(Y)
C1(Cb) : VIDEO SIGNAL ROUTE C1(Cb)
C1(Cr) : VIDEO SIGNAL ROUTE C1(Cr)
C2(Y) : VIDEO SIGNAL ROUTE C2(Y)
C2(Cb) : VIDEO SIGNAL ROUTE C2(Cb)
C2(Cr) : VIDEO SIGNAL ROUTE C2(Cr)
C3(Y) : VIDEO SIGNAL ROUTE C3(Y)
C3(Cb) : VIDEO SIGNAL ROUTE C3(Cb)
C3(Cr) : VIDEO SIGNAL ROUTE C3(Cr)


MR(C'Site) : VIDEO SIGNAL ROUTE MR(C'Site)
F(C'Site) : VIDEO SIGNAL ROUTE F(C'Site)
FS(C) : VIDEO SIGNAL ROUTE FS(C)
FS(Y) : VIDEO SIGNAL ROUTE FS(Y)
C(Y) : VIDEO SIGNAL ROUTE C(Y)
C(Cb) : VIDEO SIGNAL ROUTE C(Cb)
C(Cr) : VIDEO SIGNAL ROUTE C(Cr)
VC(Cr) : VIDEO SIGNAL ROUTE VC(Cr)
VC(Cb) : VIDEO SIGNAL ROUTE VC(Cb)
VC(Y) : VIDEO SIGNAL ROUTE VC(Y)

K 3/4 COMPONENT & VOL ASSY (VSX-74TXVi:AWQ7028) (VSX-72TXV:AWQ7030)

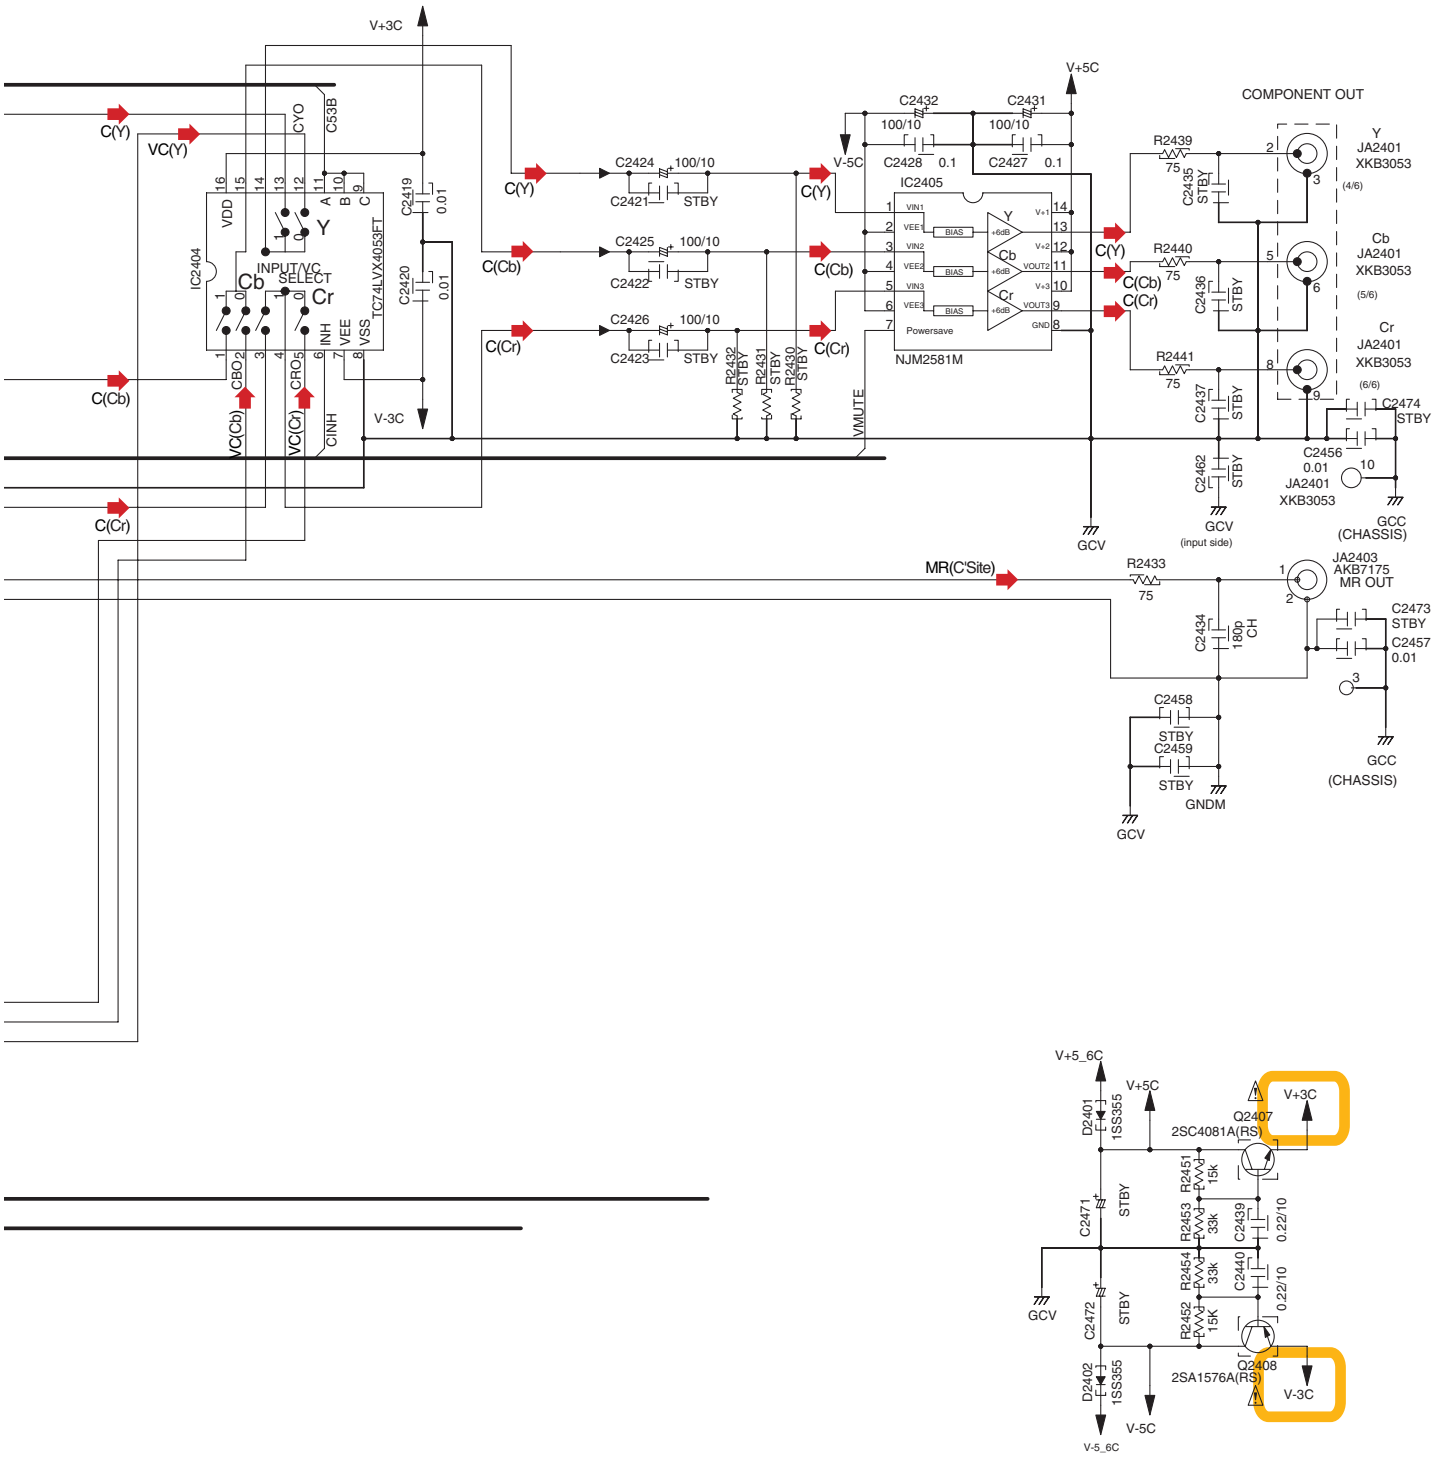

The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

3.12 COMPONENT & VOL ASSY (4/4)

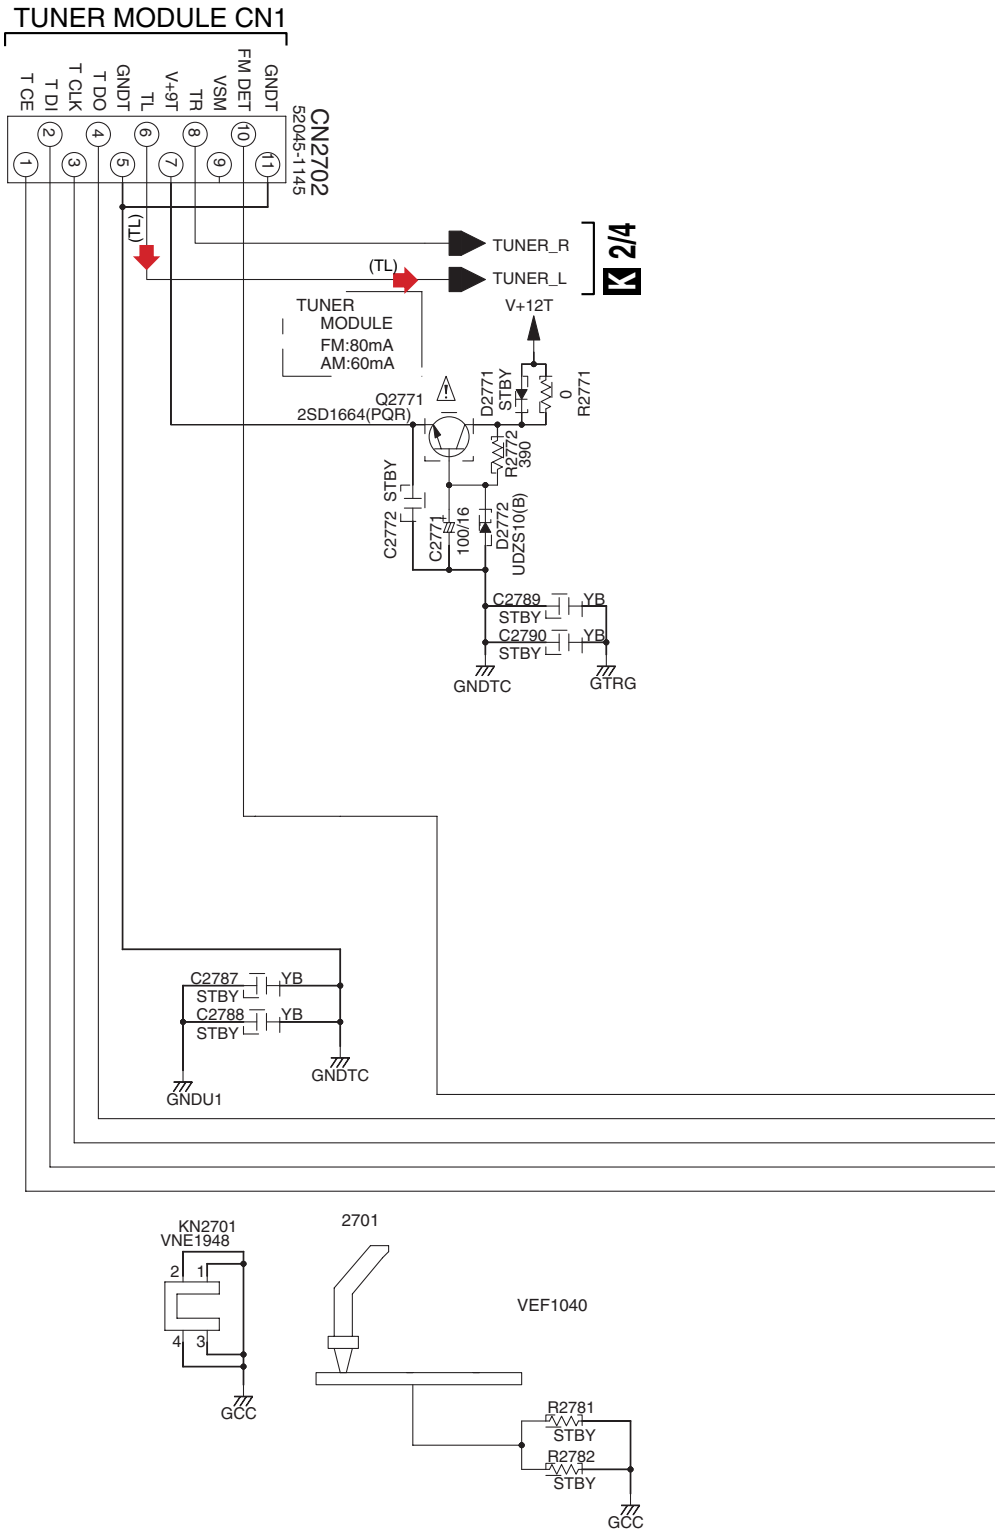

NOTE

1.RESISTORS

Unit: k-k , M-M or unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: (J) ±5% unless otherwise noted.


2.CAPACITORS

Unit: p-pF or μ F unless otherwise noted.
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.

※Parts or parts block marked by "*" or "STBY" are standby.


K 4/4


K 4/4 COMPONENT & VOL ASSY (VSX-74TXVi:AWQ7028) (VSX-72TXV:AWQ7030)

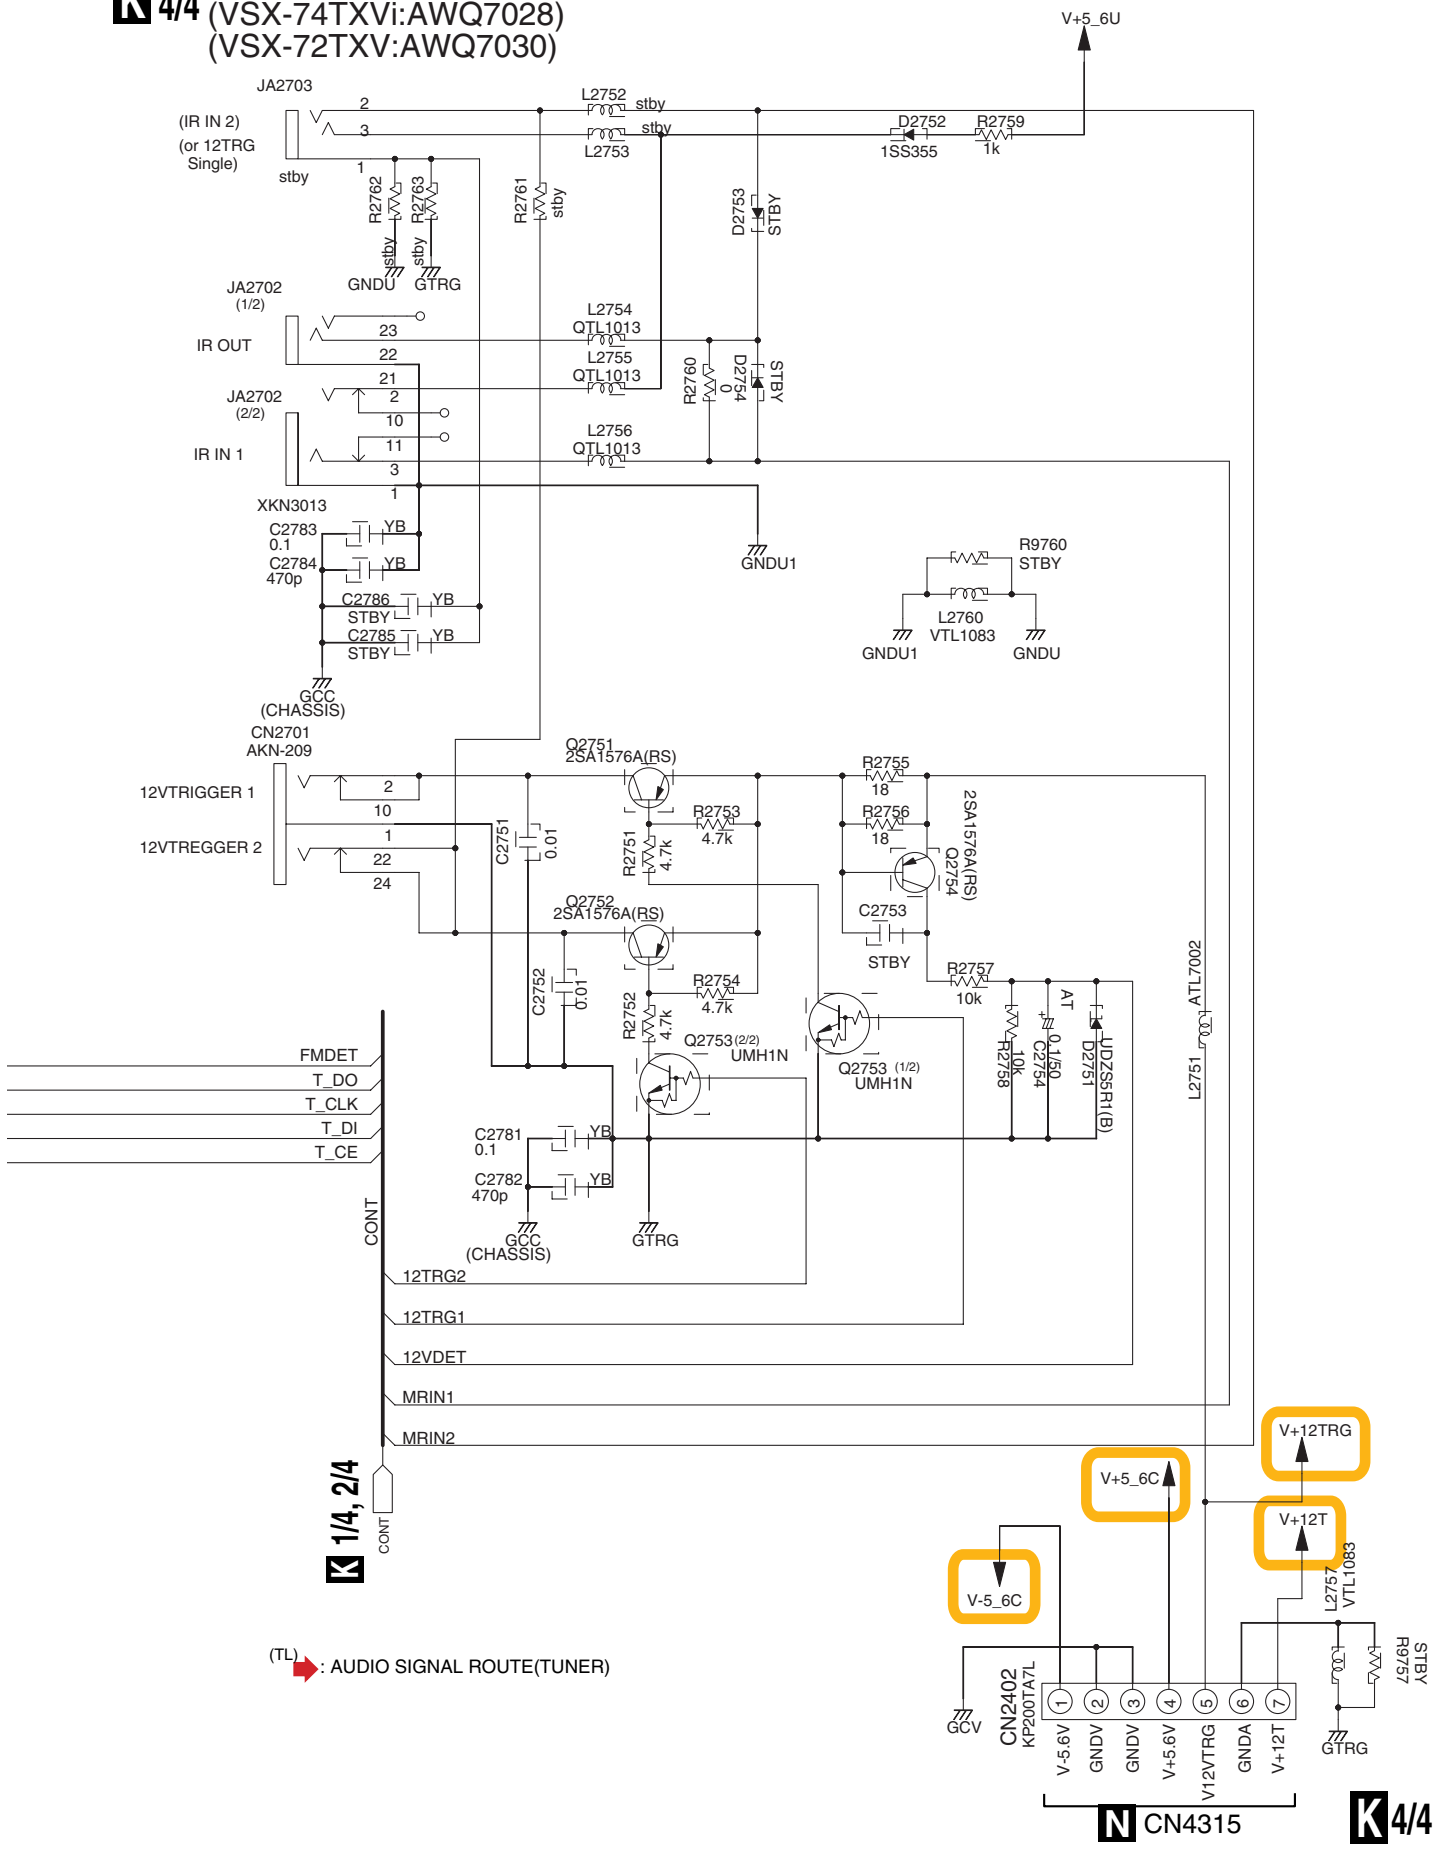


(TL) : AUDIO SIGNAL ROUTE(TUNER)

3.13 DIGITAL MOTHER ASSY (1/8)

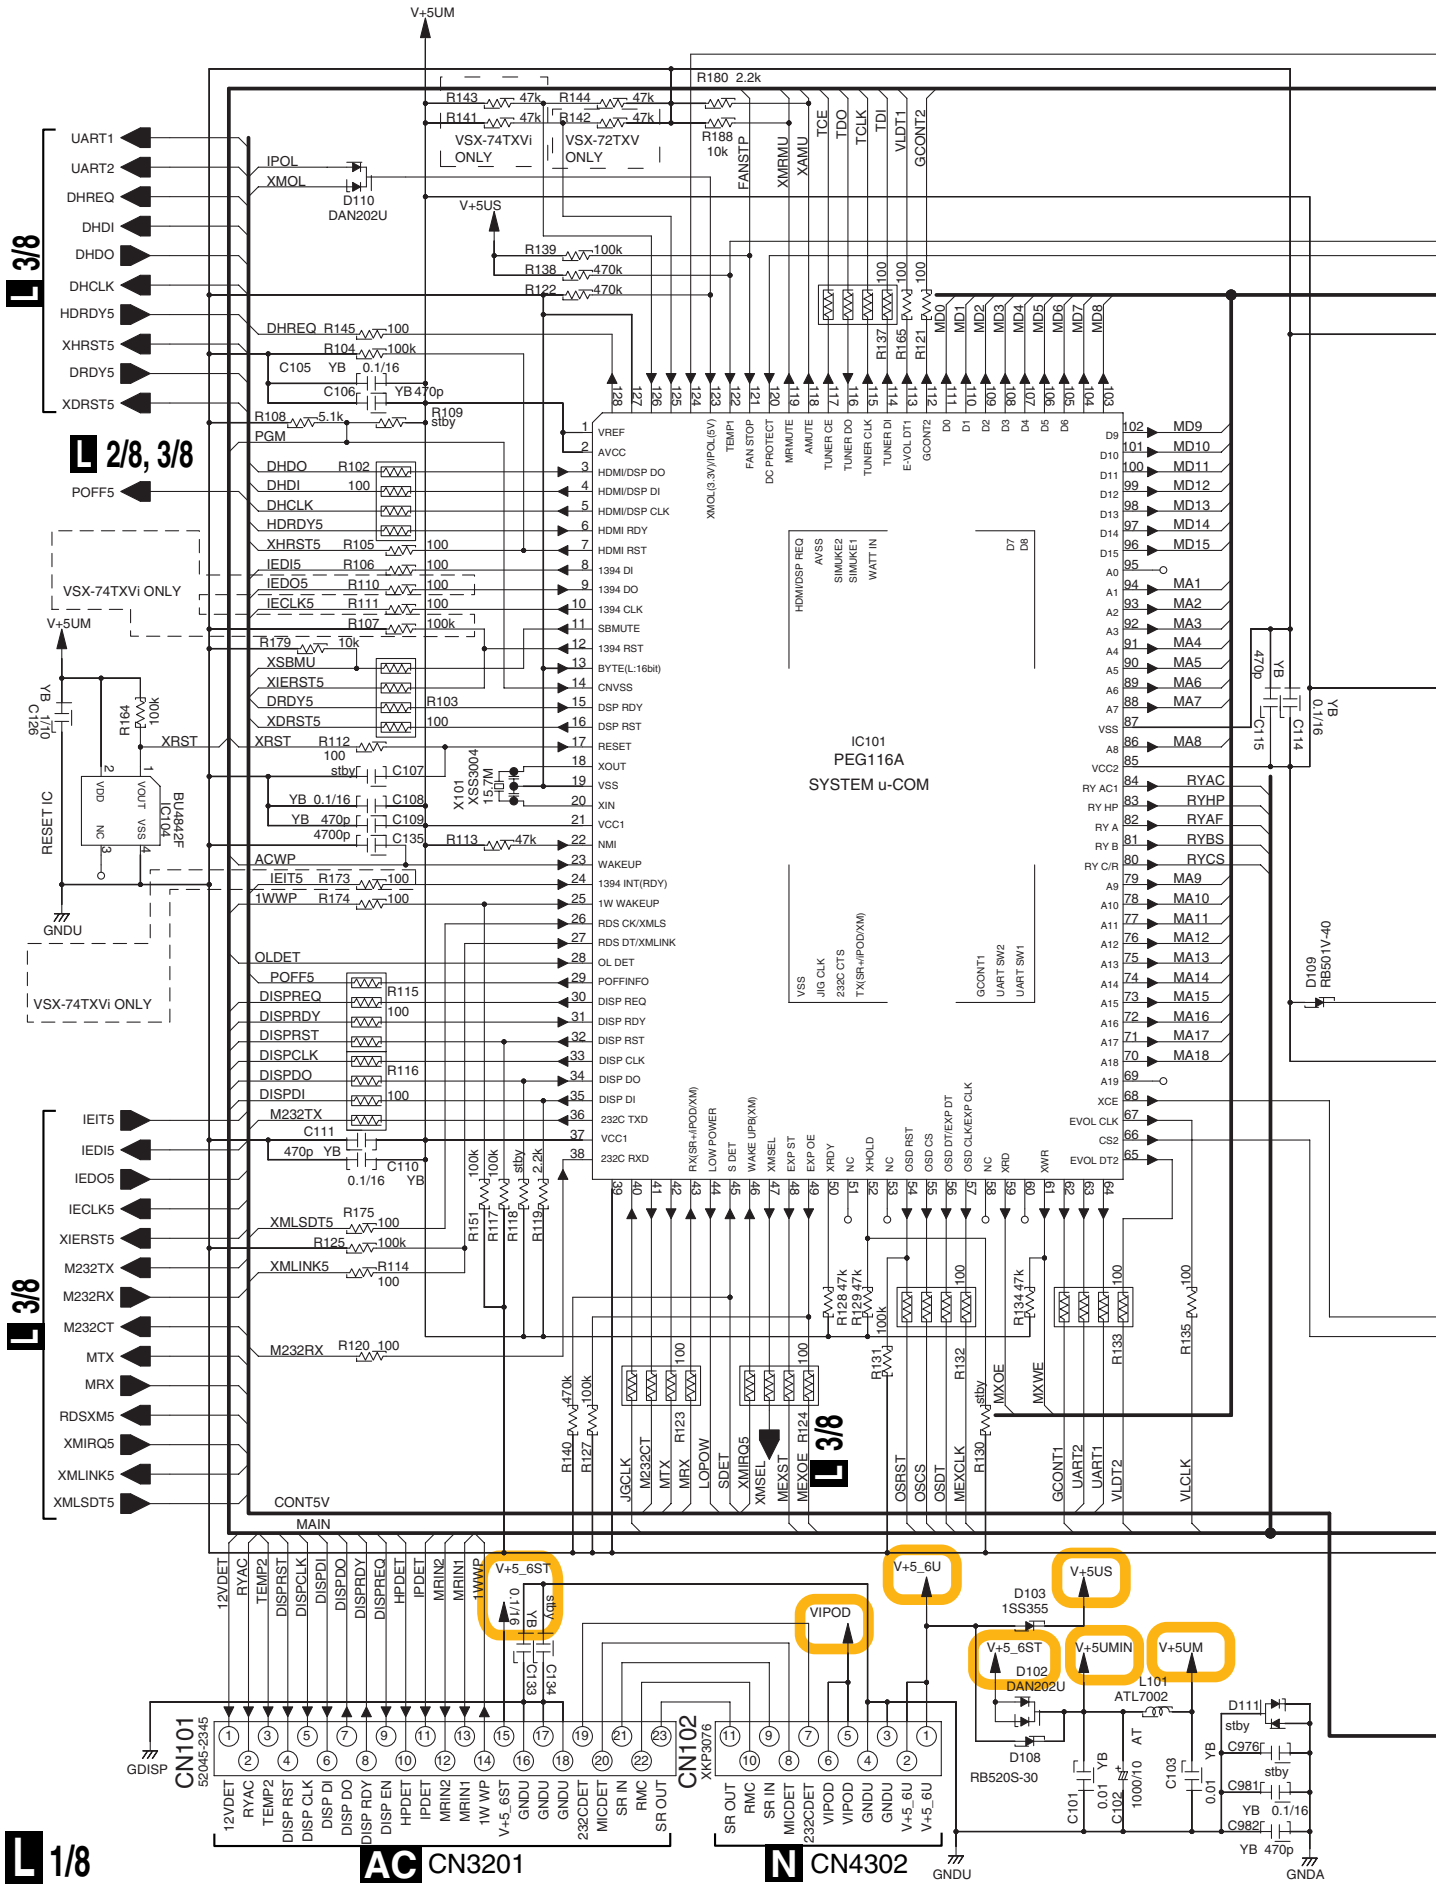


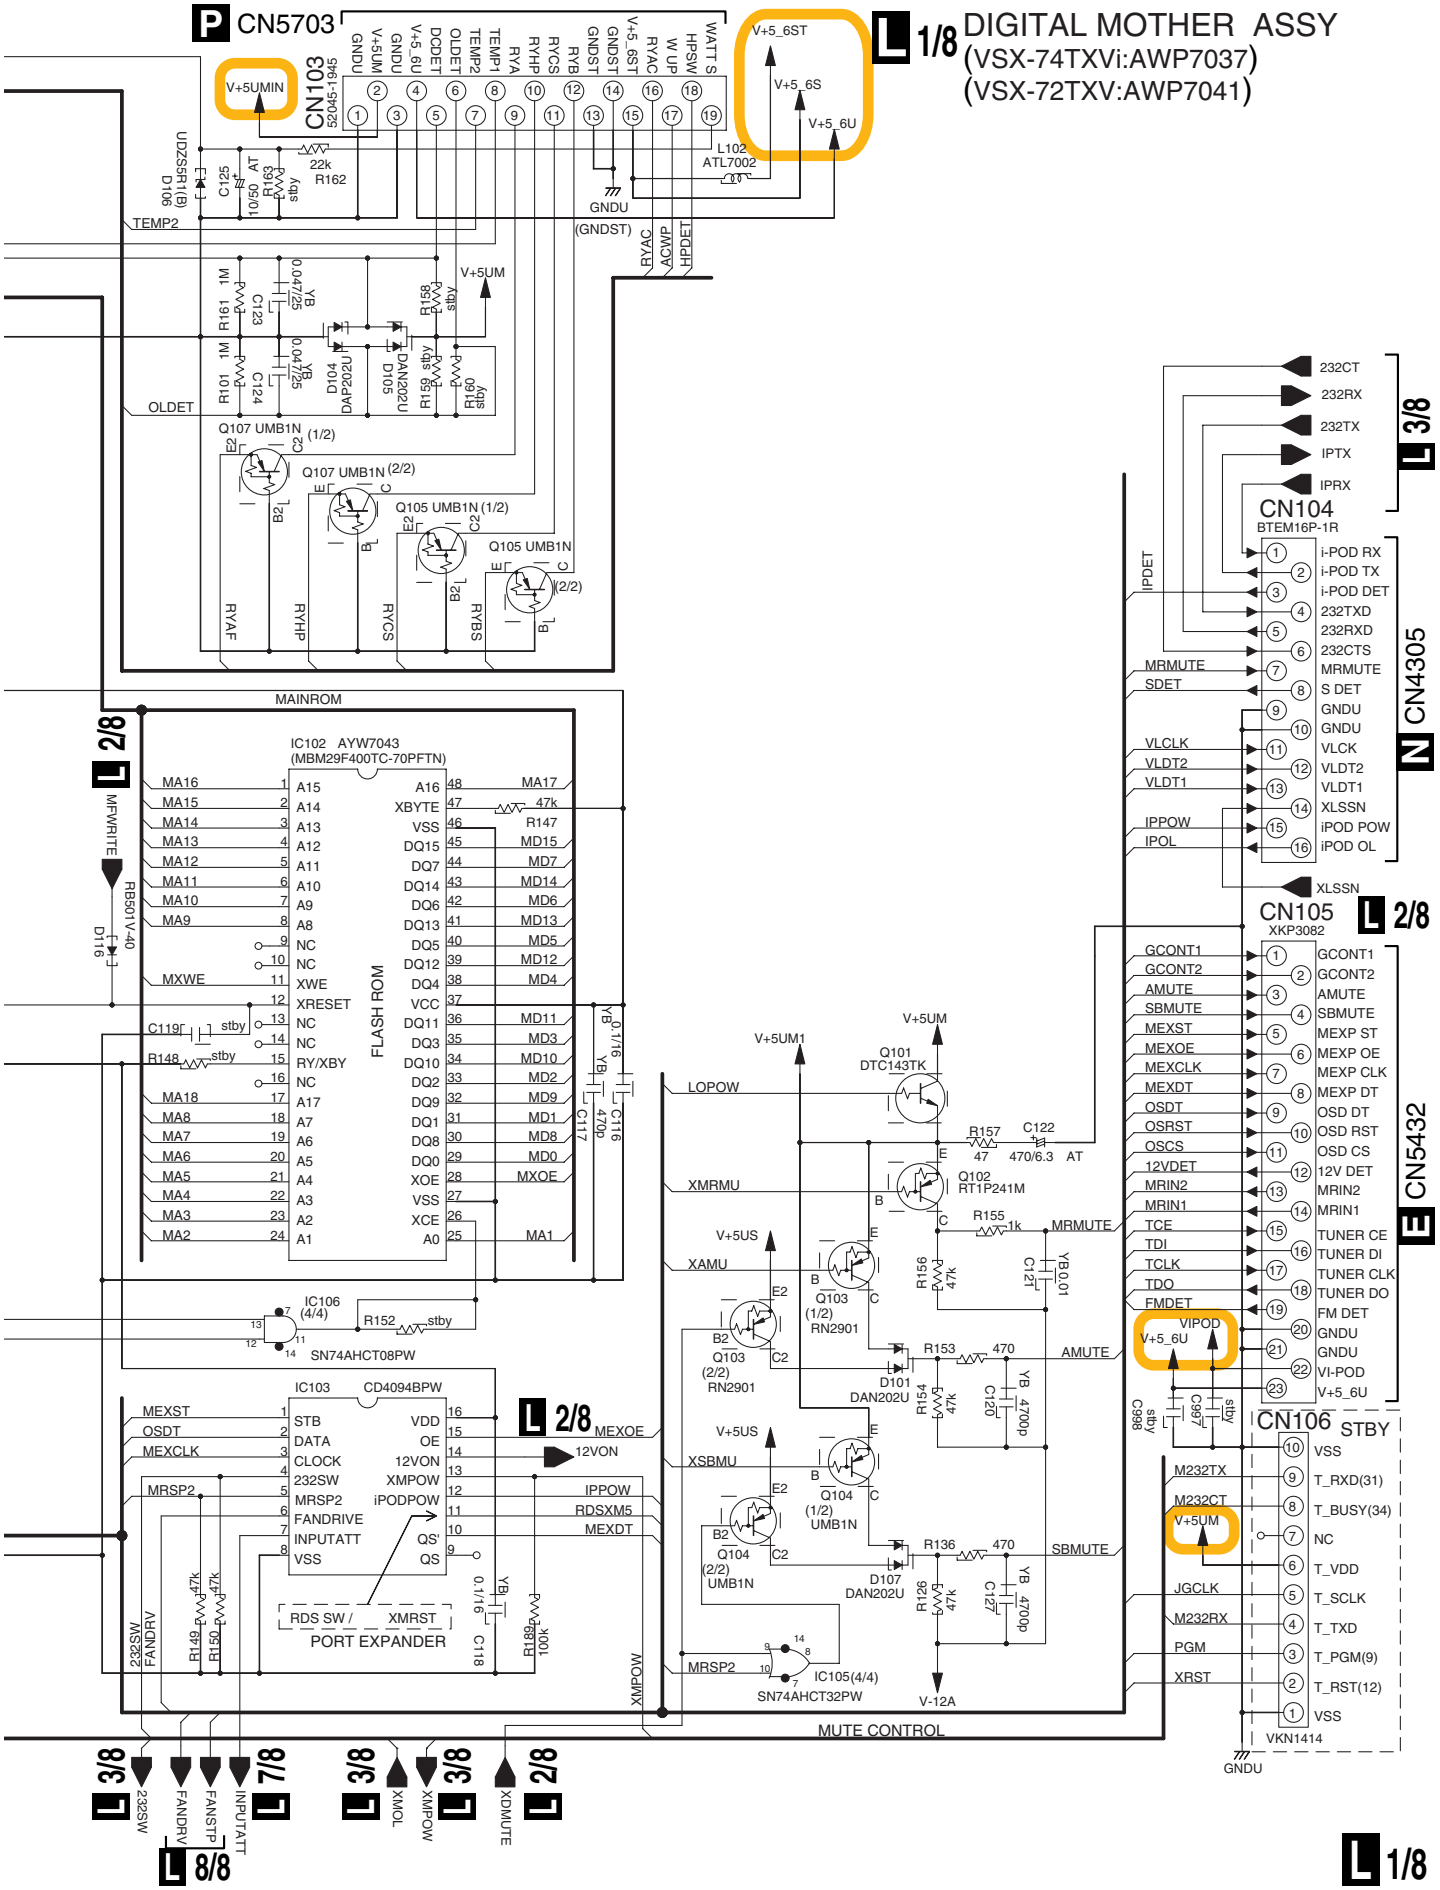
P CN5703
CN103
52045-1945
V+5UMIN
V+5UM
V+5_6ST
V+5_6S
V+5_6U
L 1/8 DIGITAL MOTHER ASSY
(VSX-74TXVi:AWP7037)
(VSX-72TXV:AWP7041)
L102
ATL7002
GNDU
(GNDST)
TEMP2
OLDET
Q107 UMB1N (1/2)
Q107 UMB1N (2/2)
Q105 UMB1N (1/2)
Q105 UMB1N (2/2)
RYAF
RYHP
RYCS
RYBS
RYAC
ACWP
HPDET
MAINROM
L 2/8
IC102 AYW7043
(MBM29F400TC-70PFTN)
FLASH ROM
MFWRITE
RB501V-40
D116
MXWE
C119
R148
stby
IC106
(4/4)
R152
SN74AHCT08PW
IC103 CD4094BPW
PORT EXPANDER
RDS SW /
XMRST
MEXST
OSDT
MEXCLK
MRSP2
232SW
FANDRV
FANSTP
INPUTATT
MEXOE
12VON
IPPOW
RDSXM5
MEXDT
XMPOW
XMOL
XDMUTE
L 3/8
L 7/8
L 8/8
V+5UM1
LOPOW
XMRMU
XAMU
XSBMU
Q101 DTC143TK
Q102 RT1P241M
Q103 (1/2) RN2901
Q103 (2/2) RN2901
Q104 (1/2) UMB1N
Q104 (2/2) UMB1N
D101 DAN202U
D107 DAN202U
MRMUTE
AMUTE
SBMUTE
V-12A
IC105(4/4)
SN74AHCT32PW
MUTE CONTROL
CN104
BTEM16P-1R
232CT
232RX
232TX
IPTX
IPRX
i-POD RX
i-POD TX
i-POD DET
232TXD
232RXD
232CTS
MRMUTE
S DET
GNDU
VLCK
VLDT2
VLDT1
XLSSN
iPOD POW
iPOD OL
IPDET
SDET
VLCLK
IPPOW
IPOL
N CN4305
CN105
XKP3082
L 2/8
GCONT1
GCONT2
AMUTE
SBMUTE
MEXST
MEXOE
MEXCLK
MEXDT
OSDT
OSRST
OSCS
12VDET
MRIN2
MRIN1
TCE
TDI
TCLK
TDO
FMDET
VIPOD
V+5_6U
GNDU
VI-POD
E CN5432
CN106
STBY
M232TX
M232CT
JGCLK
M232RX
PGM
XRST
T_RXD(31)
T_BUSY(34)
T_VDD
T_SCLK
T_TXD
T_PGM(9)
T_RST(12)
VKN1414
L 3/8
L 1/8

3.14 DIGITAL MOTHER ASSY (2/8)

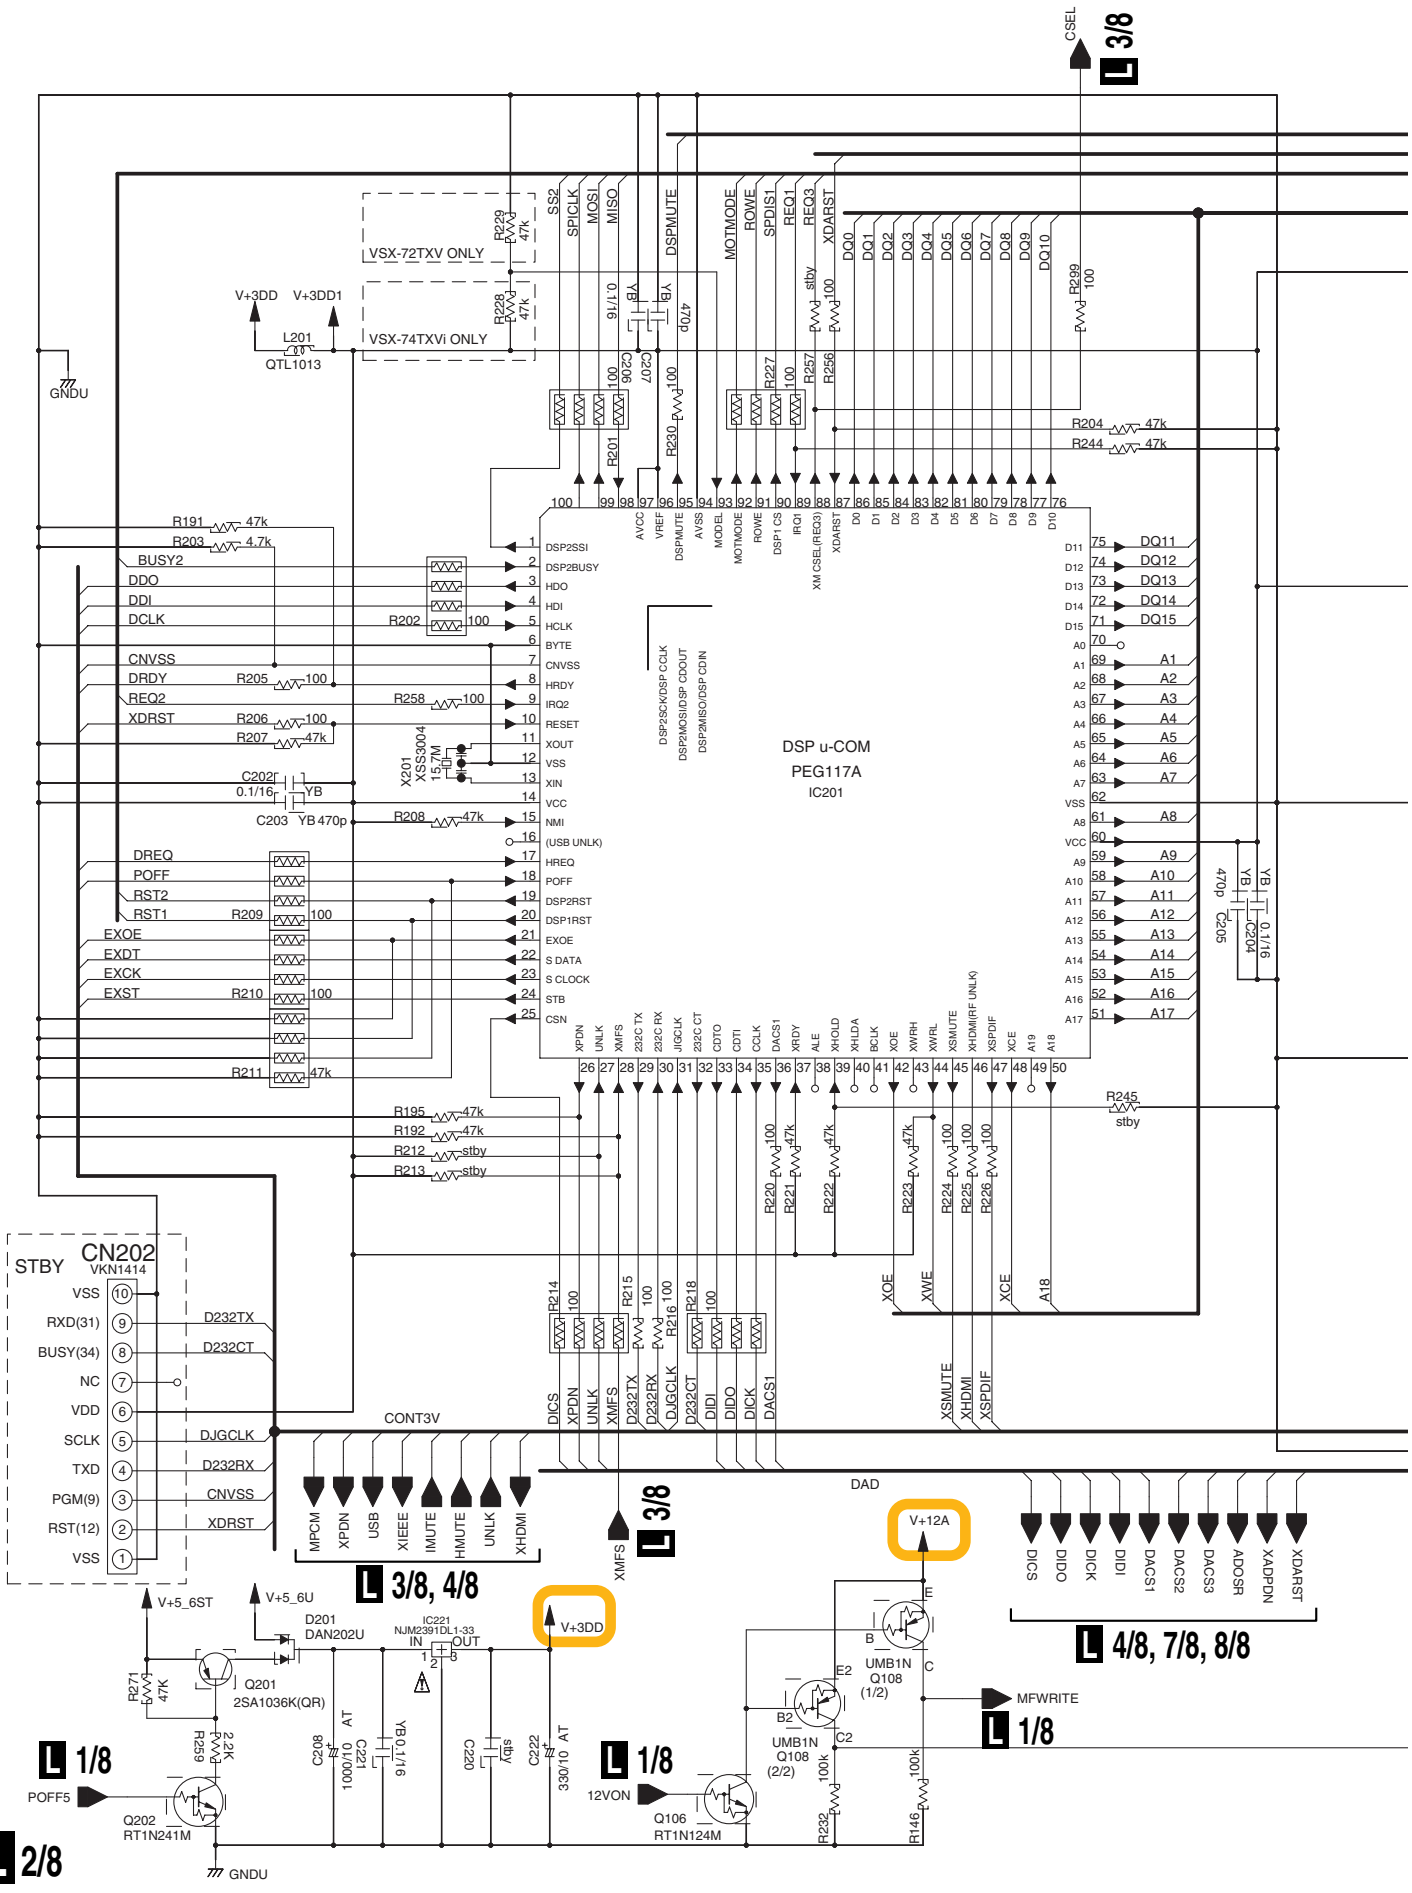


L 2/8 DIGITAL MOTHER ASSY
(VSX-74TXVi:AWP7037)
(VSX-72TXV:AWP7041)

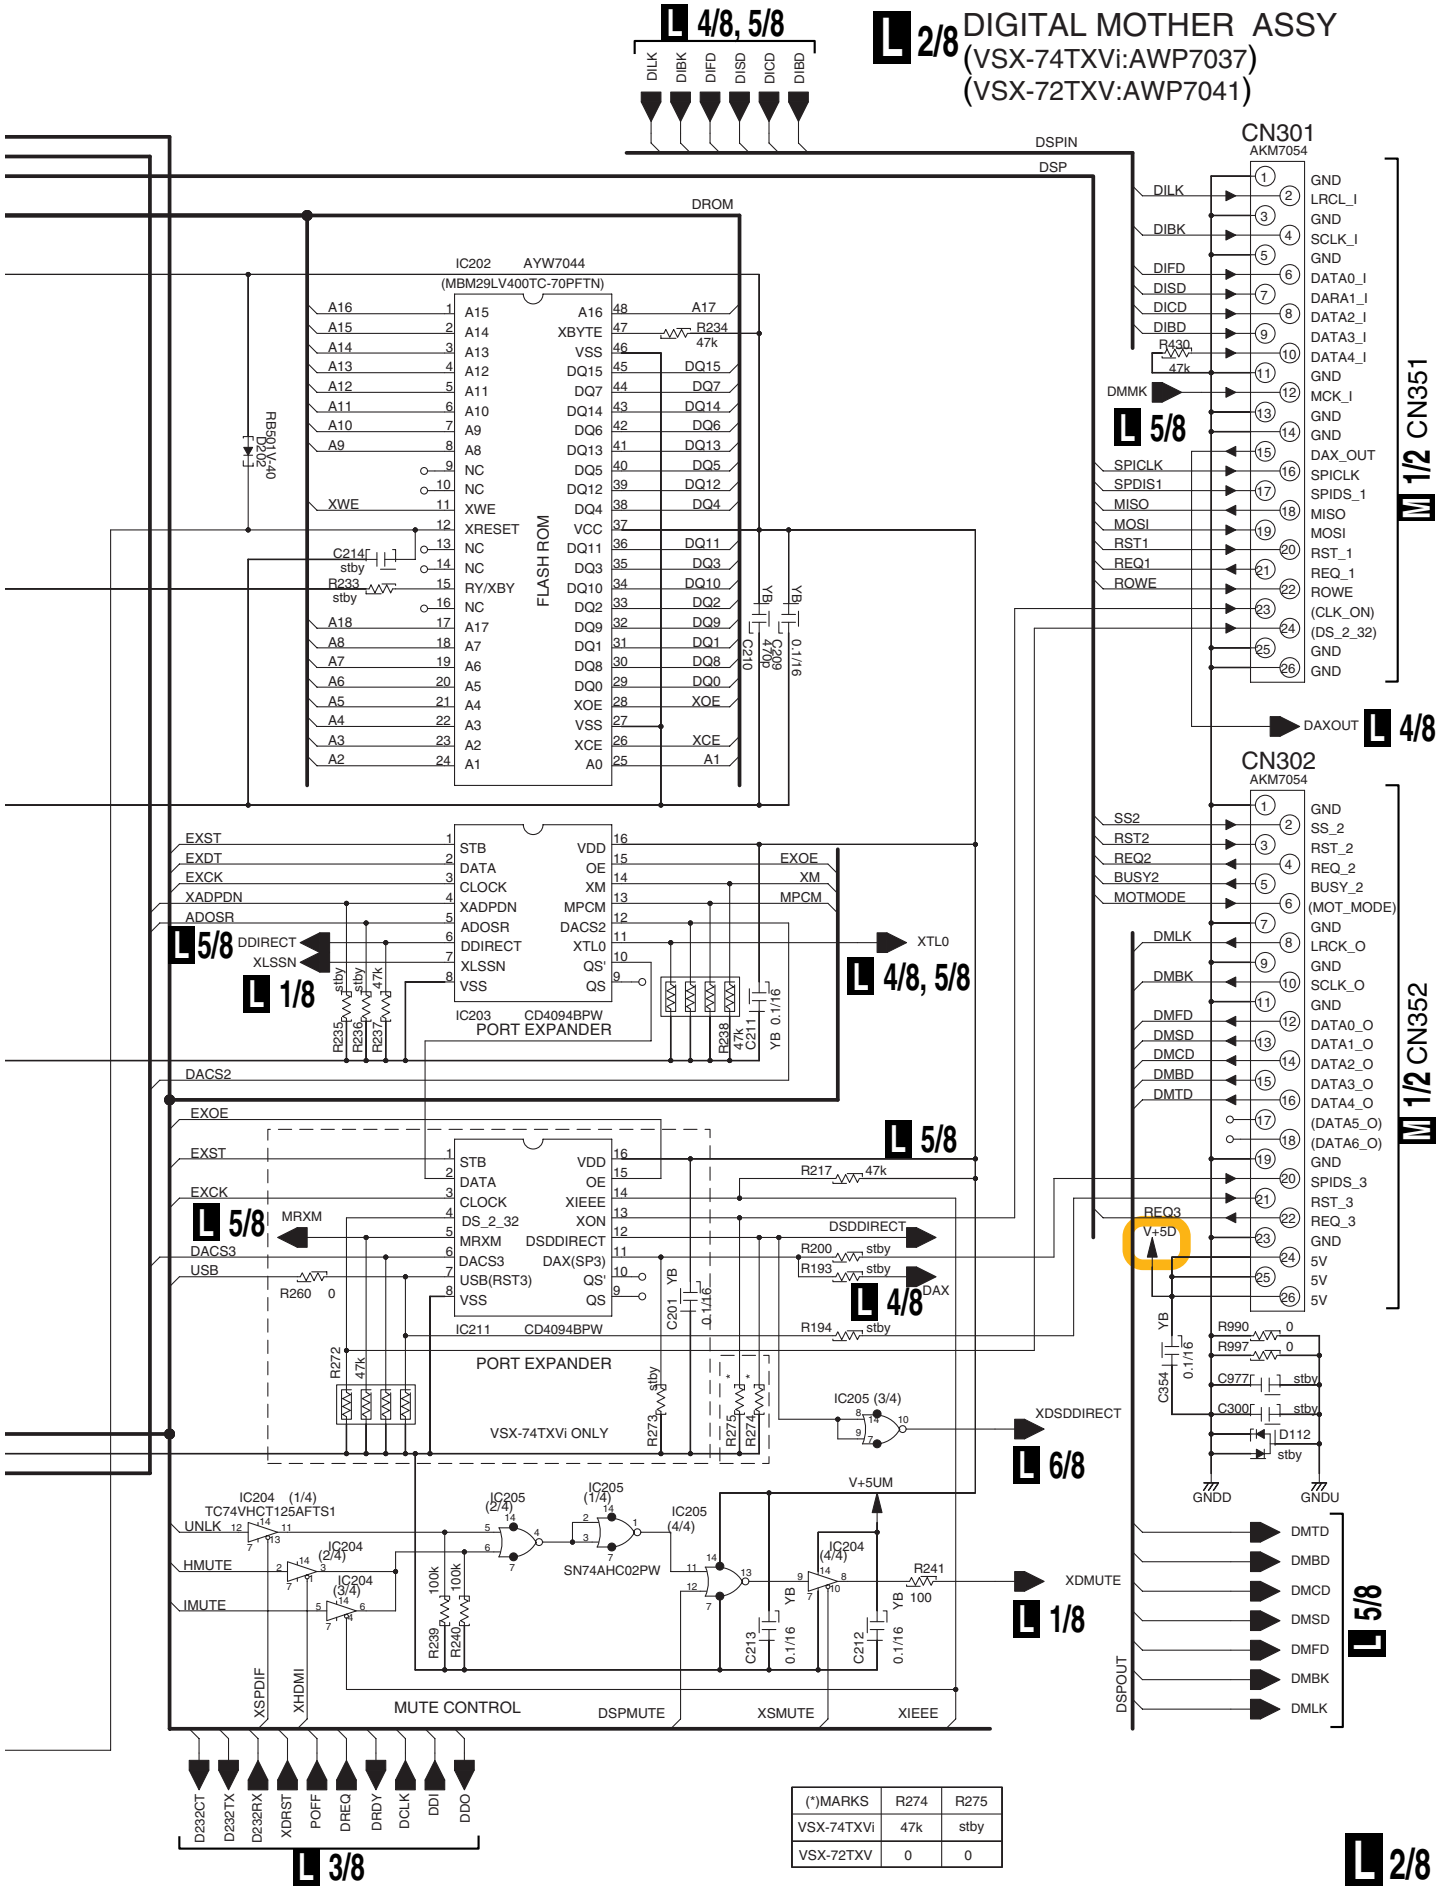


(*)MARKS	R274	R275
VSX-74TXVi	47k	stby
VSX-72TXV	0	0

3.15 DIGITAL MOTHER ASSY (3/8)

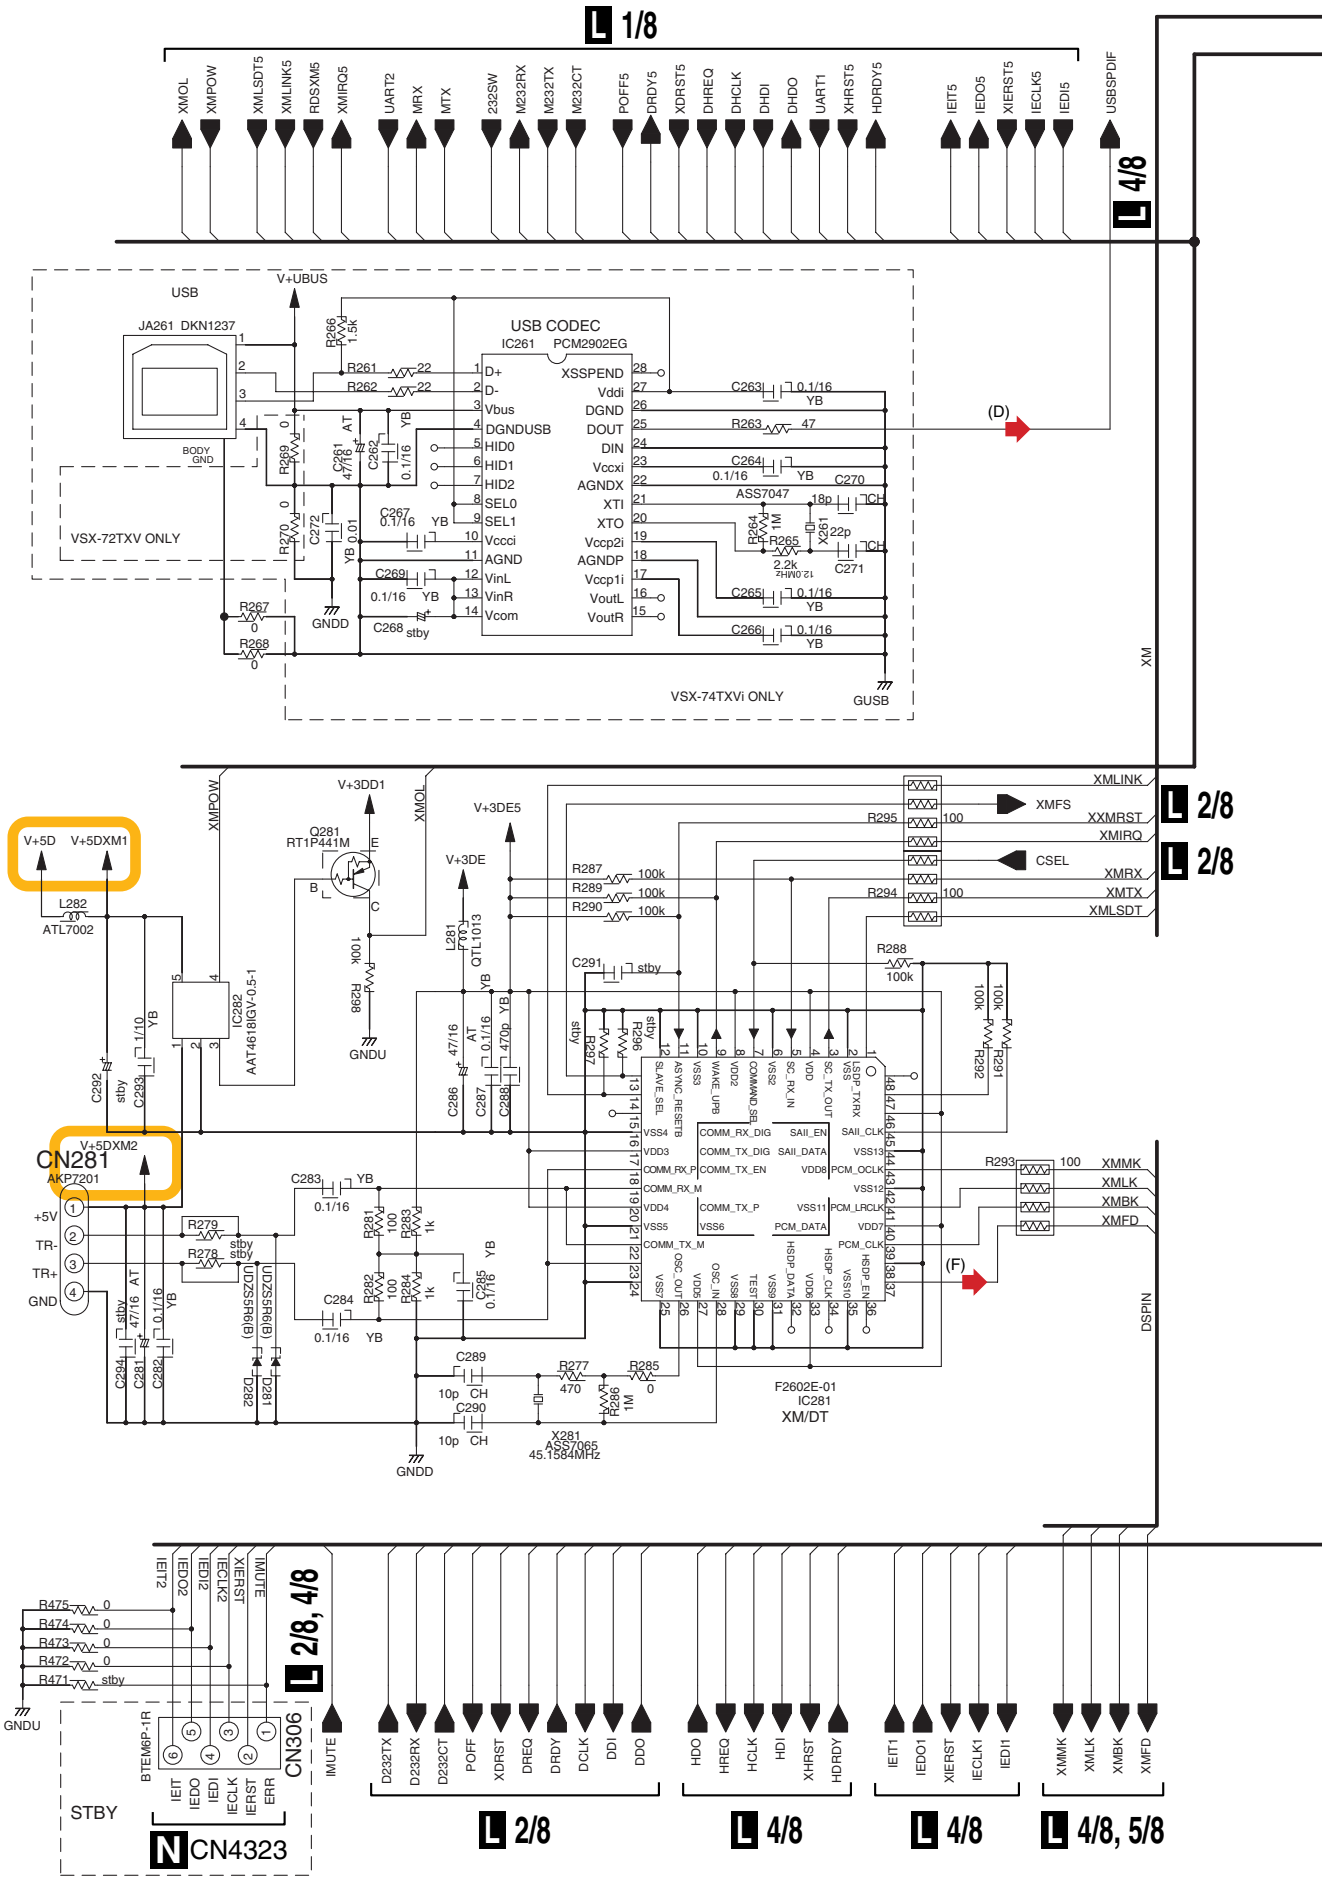

L 3/8 DIGITAL MOTHER ASSY
(VSX-74TXVi:AWP7037)
(VSX-72TXV:AWP7041)

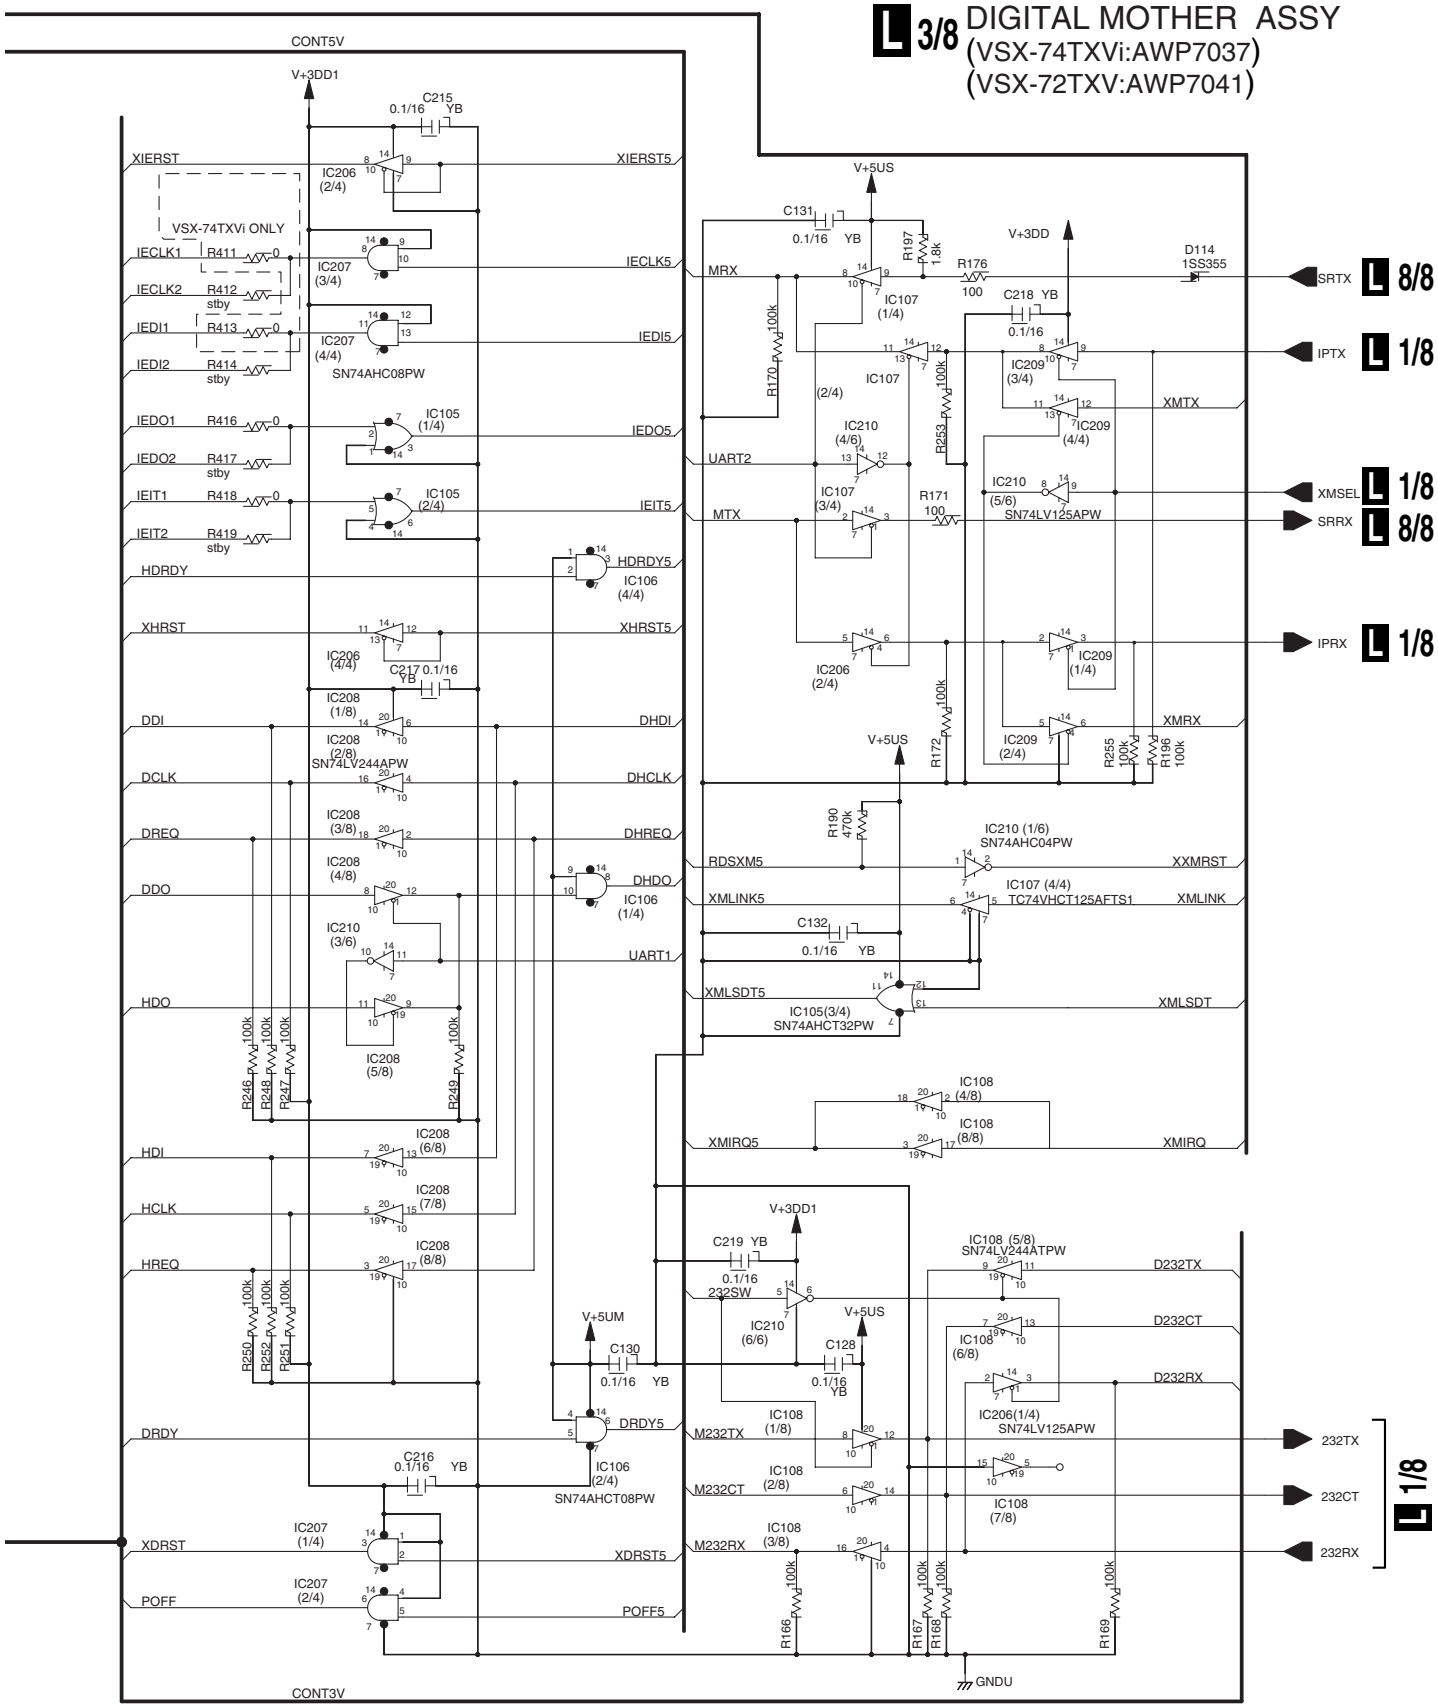


L 8/8 SRTX
L 1/8 IPTX
L 1/8 XMSEL
L 8/8 SRRX
L 1/8 IPRX
L 1/8 232TX 232CT 232RX


(F) : AUDIO SIGNAL ROUTE(F)
(D) : AUDIO SIGNAL ROUTE(SPDIF)

L 3/8


3.16 DIGITAL MOTHER ASSY (4/8)

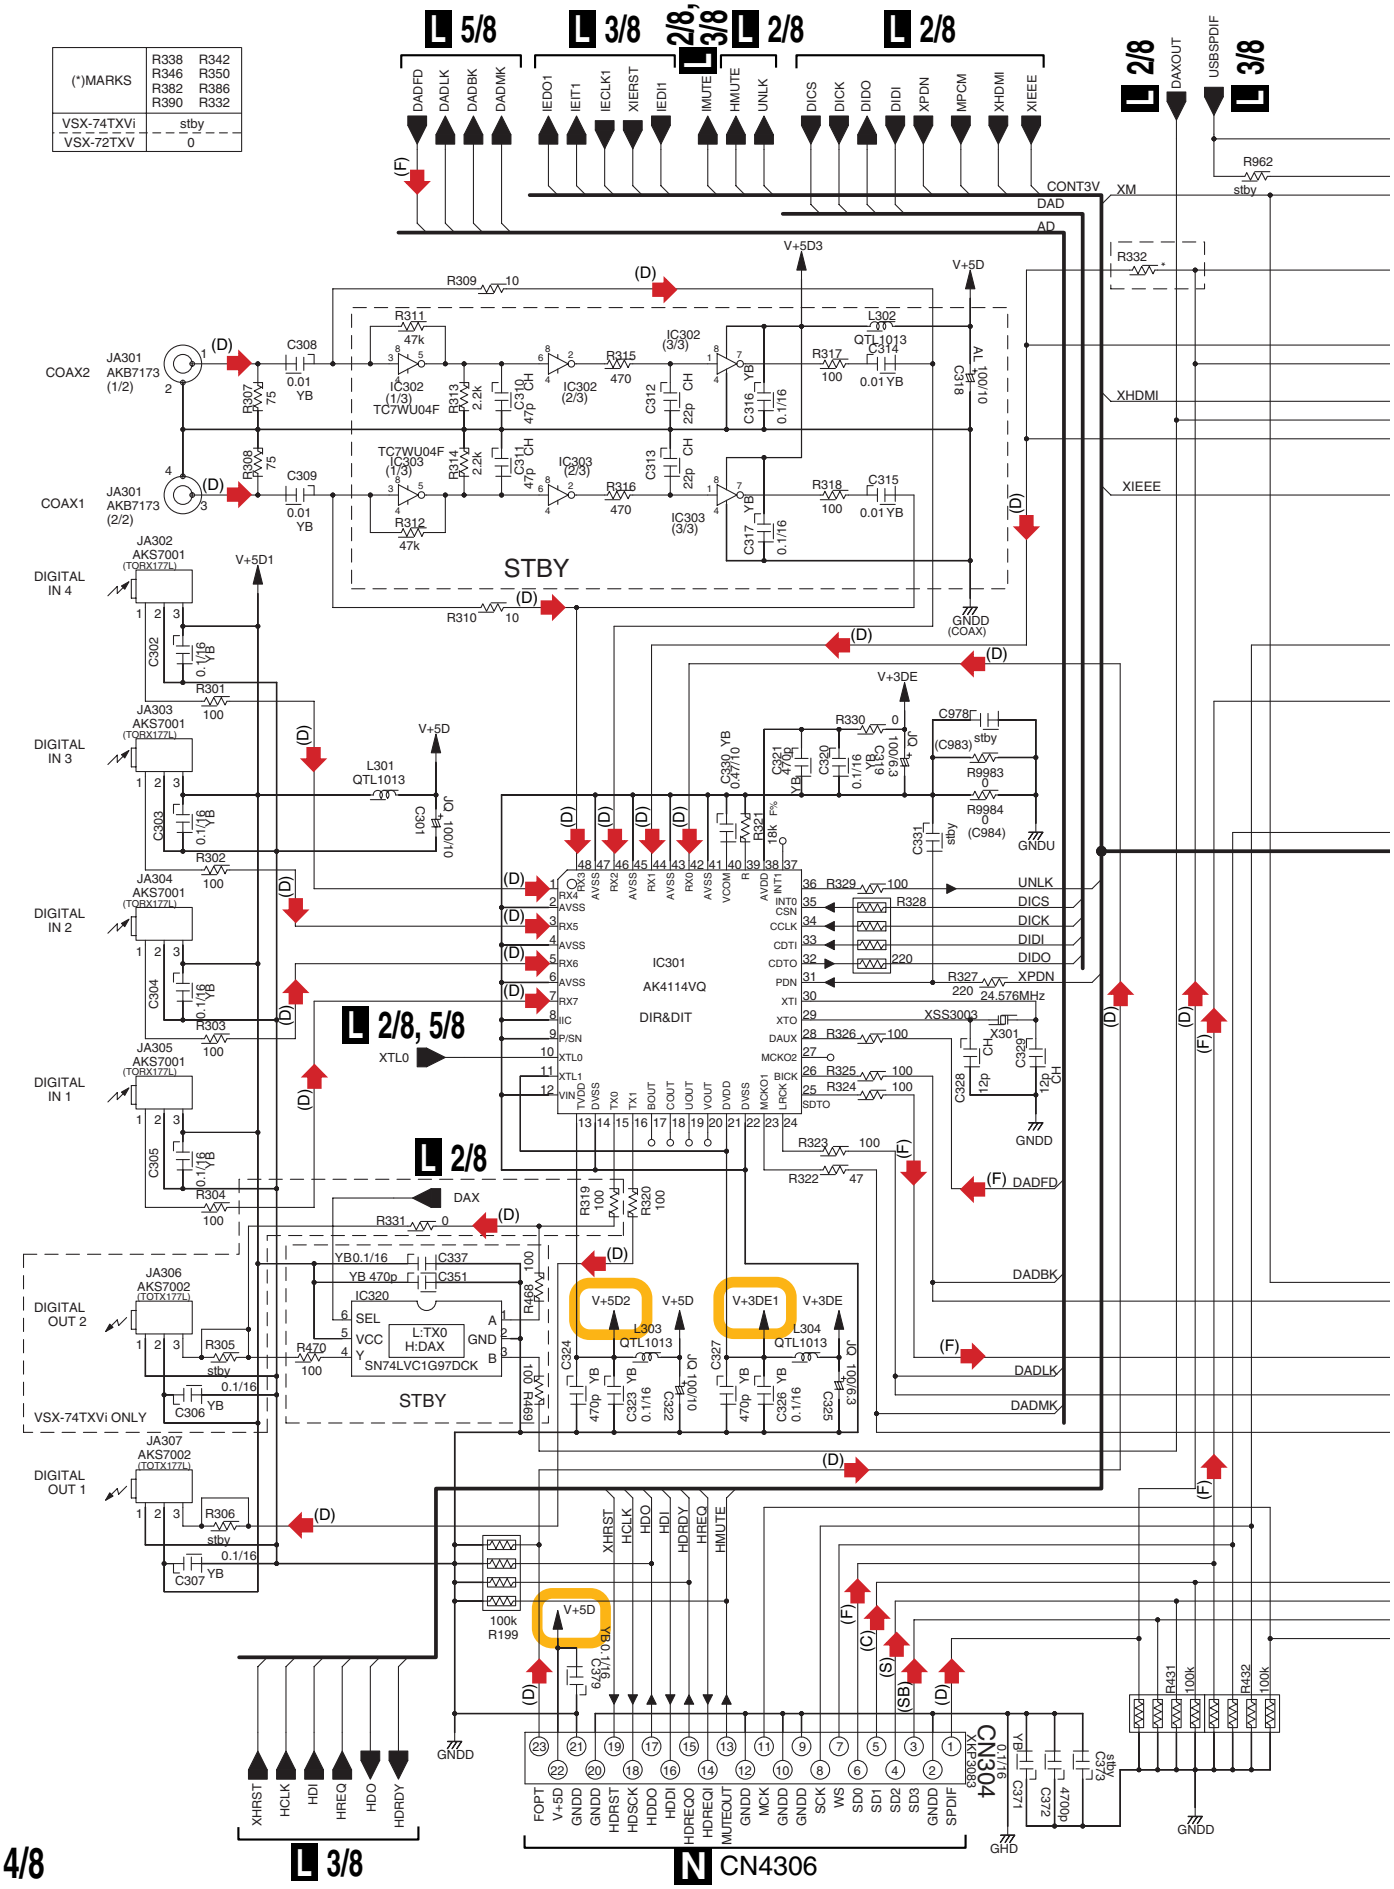


L 4/8 DIGITAL MOTHER ASSY
(VSX-74TXVi:AWP7037)
(VSX-72TXV:AWP7041)

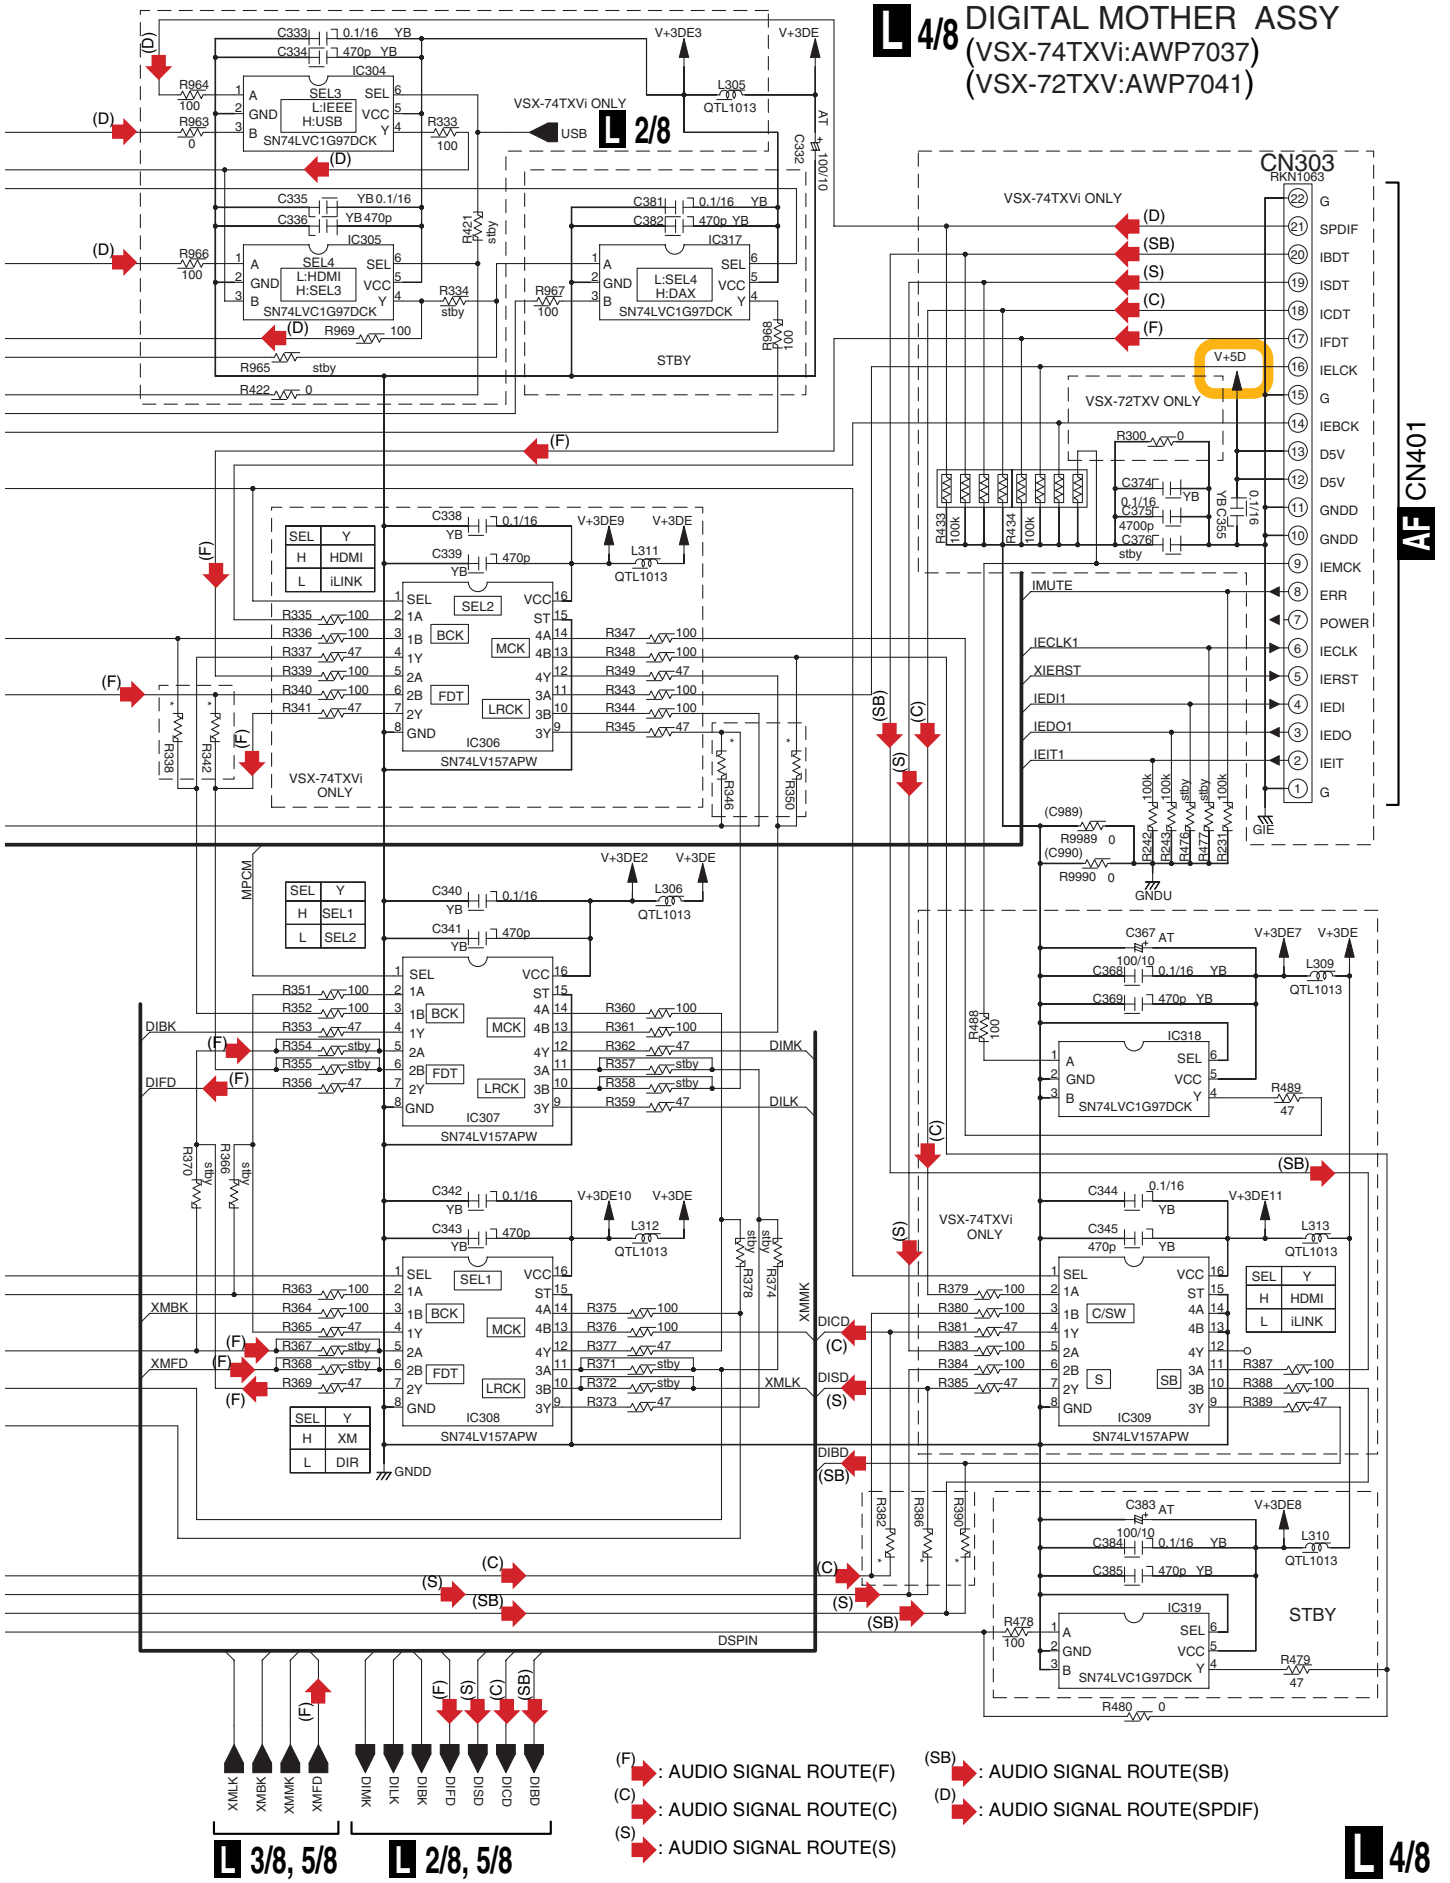

3.17 DIGITAL MOTHER ASSY (5/8)

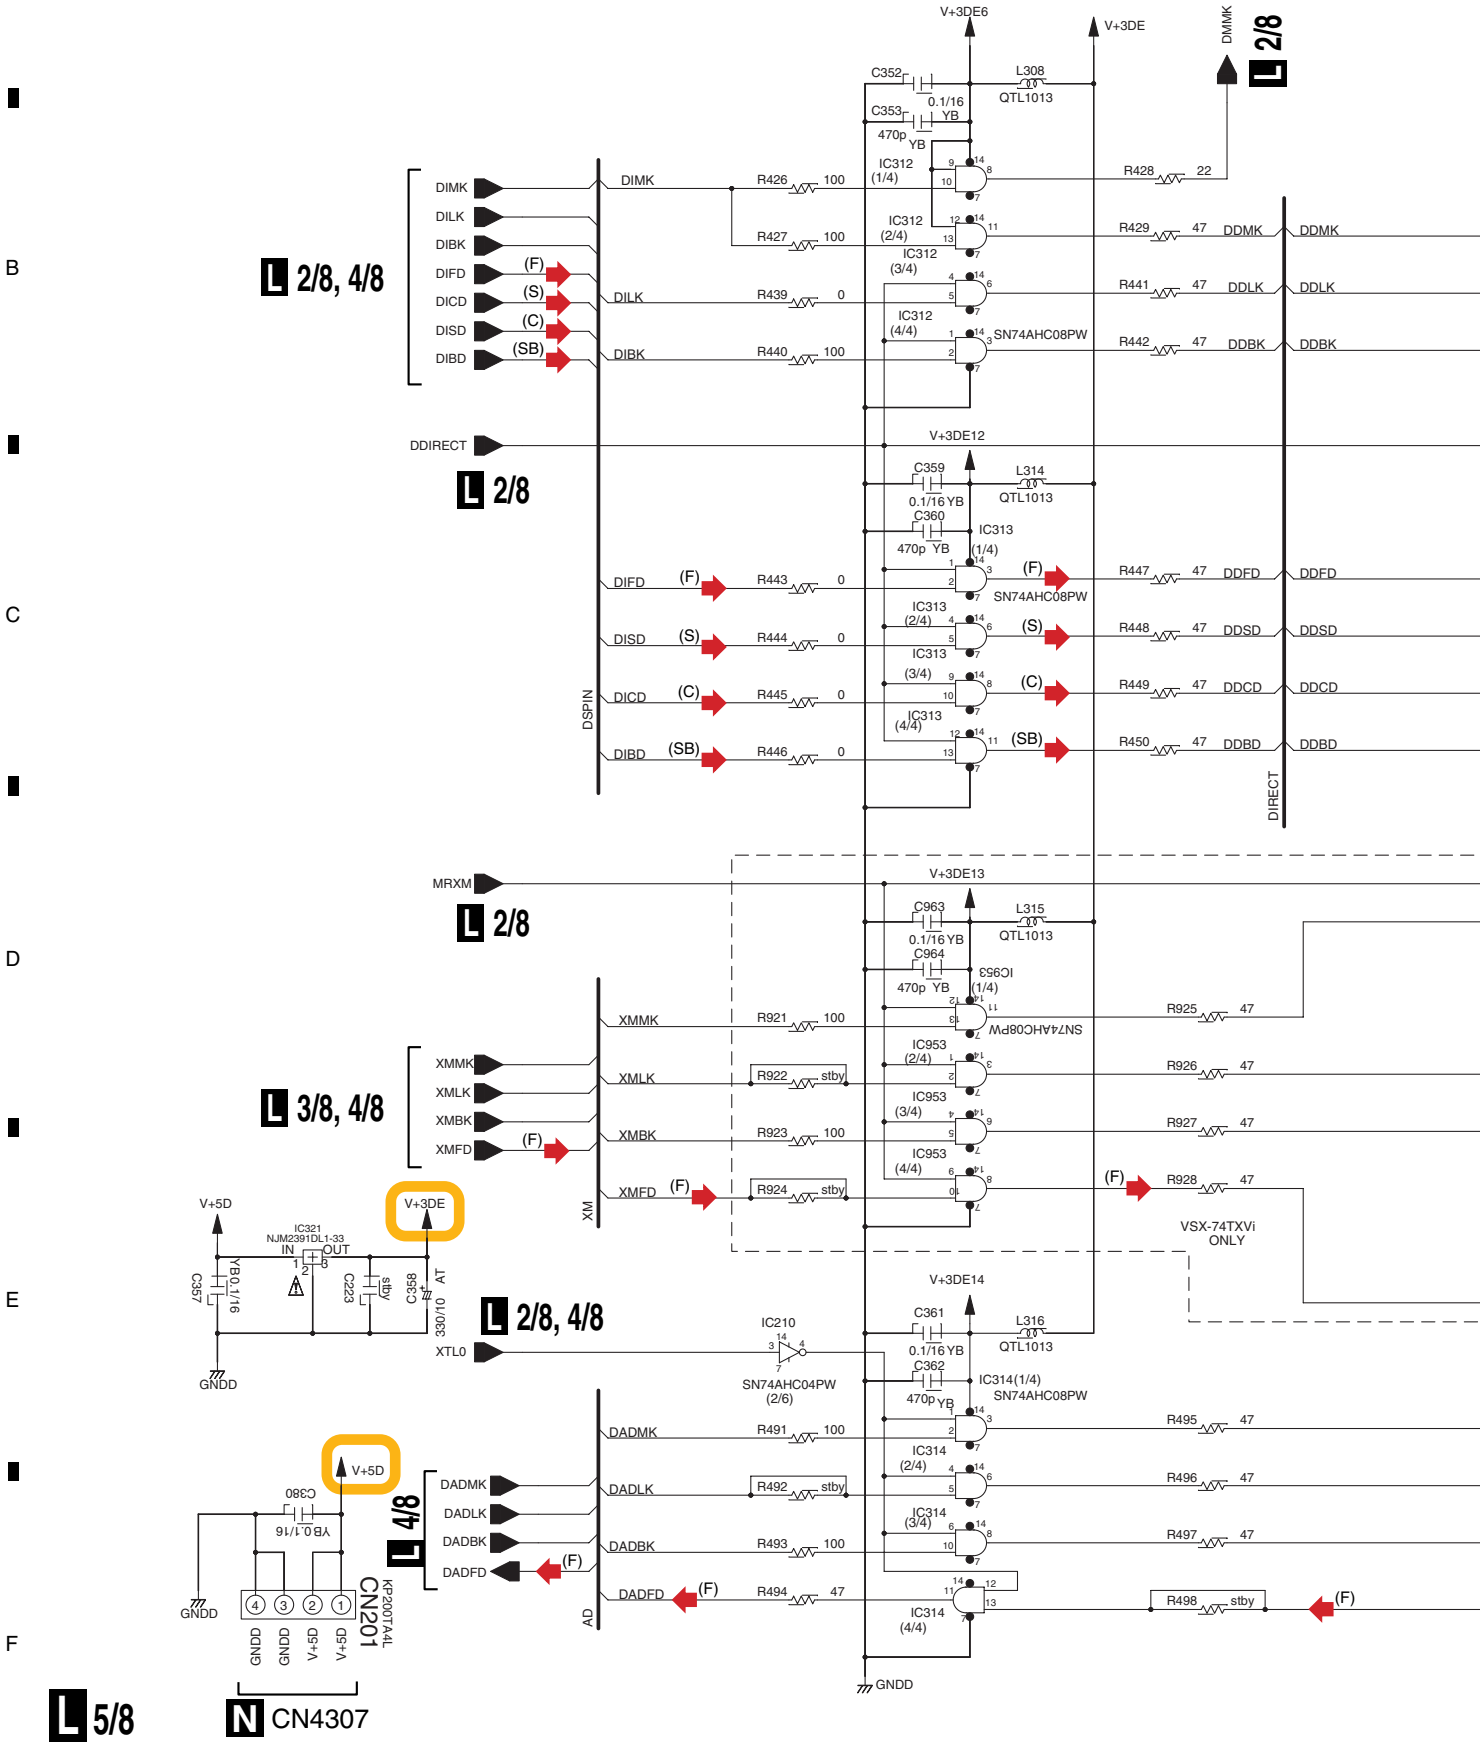

L 5/8 DIGITAL MOTHER ASSY
(VSX-74TXVi:AWP7037)
(VSX-72TXV:AWP7041)

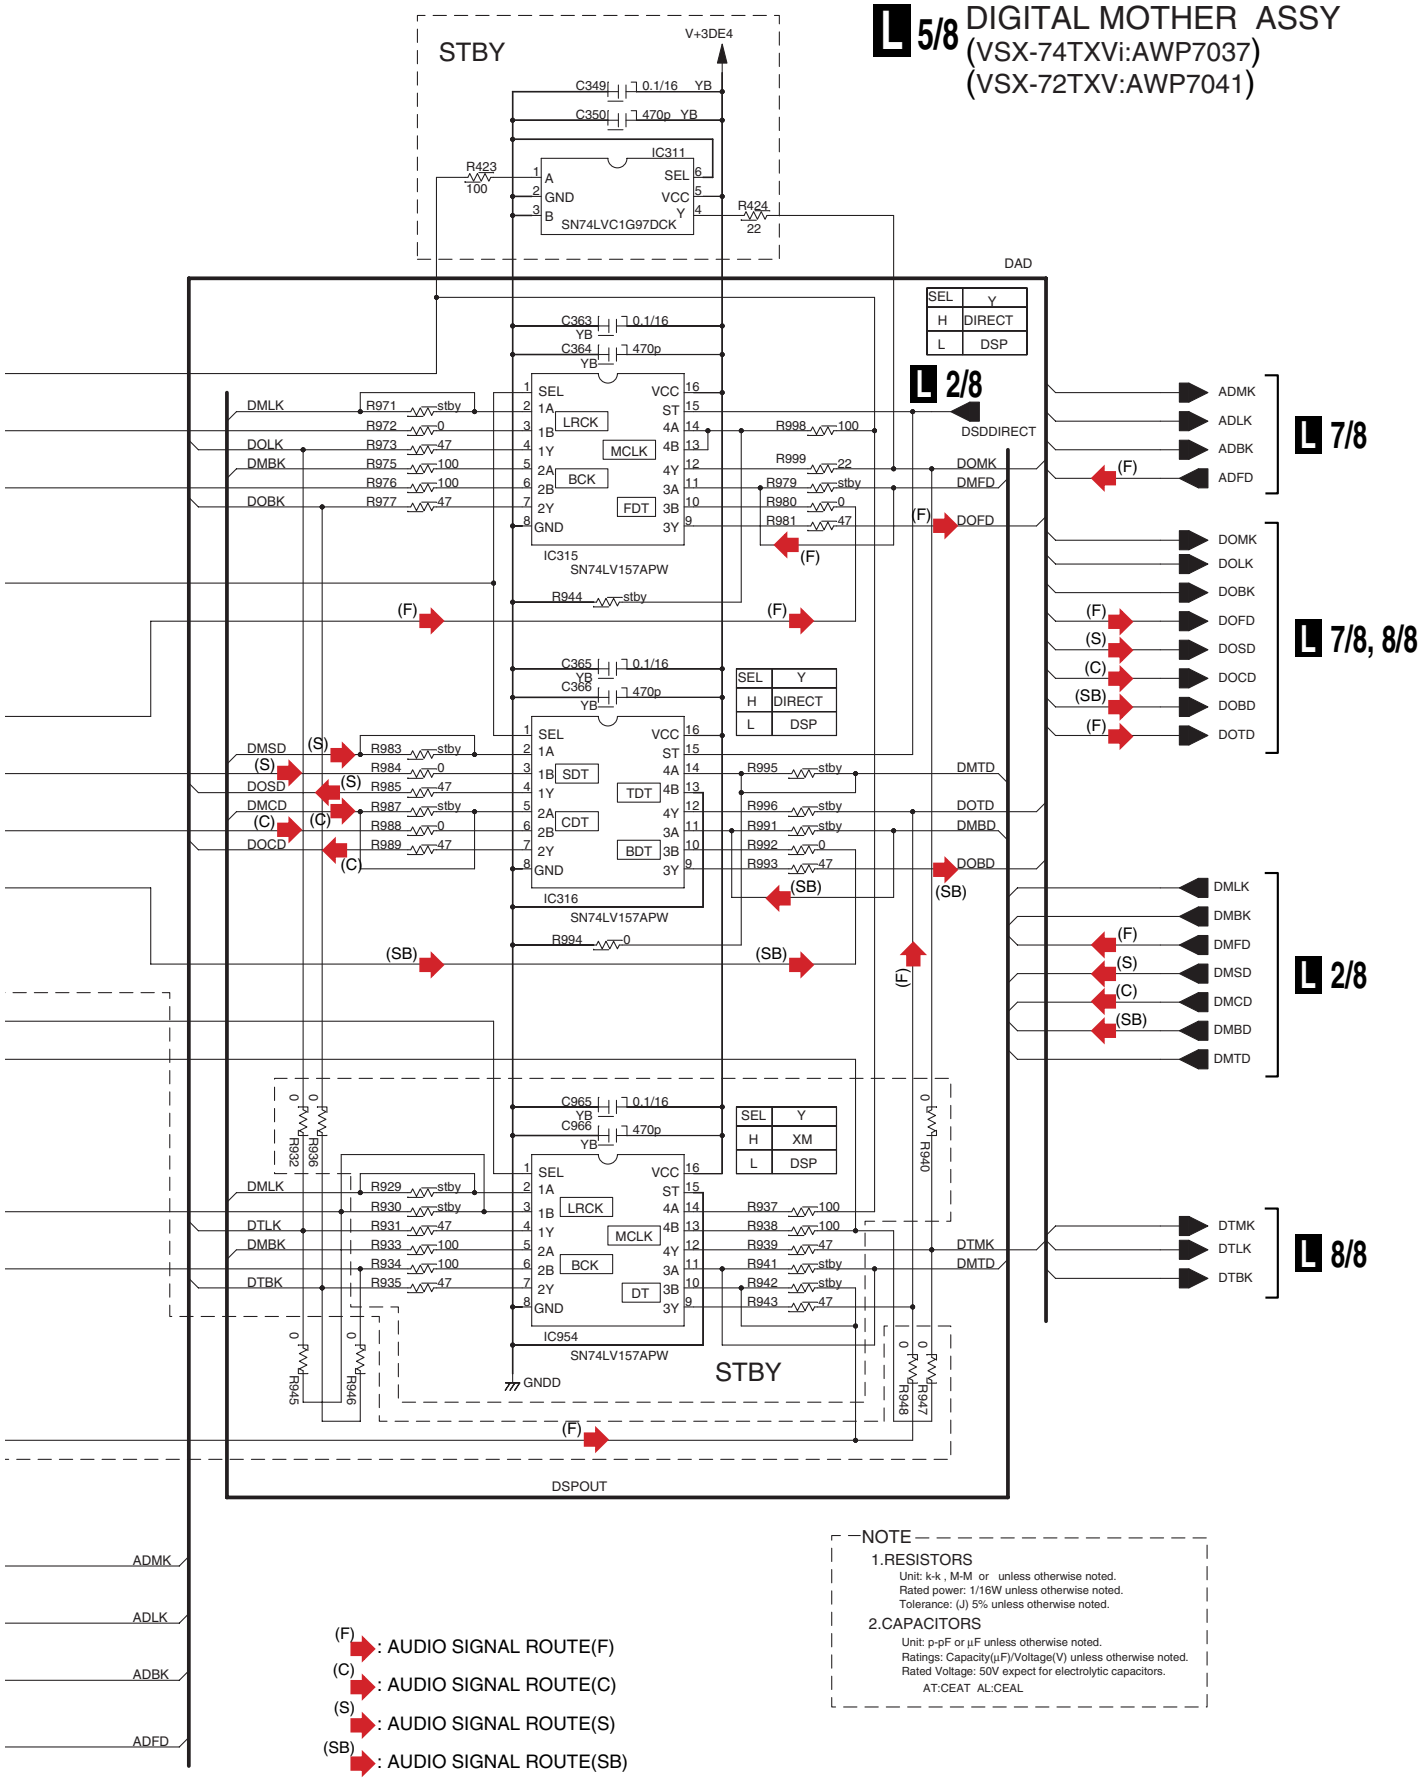


NOTE
1.RESISTORS
Unit: k-k , M-M or unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: (J) 5% unless otherwise noted.
2.CAPACITORS
Unit: p-pF or µF unless otherwise noted.
Ratings: Capacity(µF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.
AT:CEAT AL:CEAL

(F): AUDIO SIGNAL ROUTE(F)
(C): AUDIO SIGNAL ROUTE(C)
(S): AUDIO SIGNAL ROUTE(S)
(SB): AUDIO SIGNAL ROUTE(SB)


L 5/8

3.18 DIGITAL MOTHER ASSY (6/8)

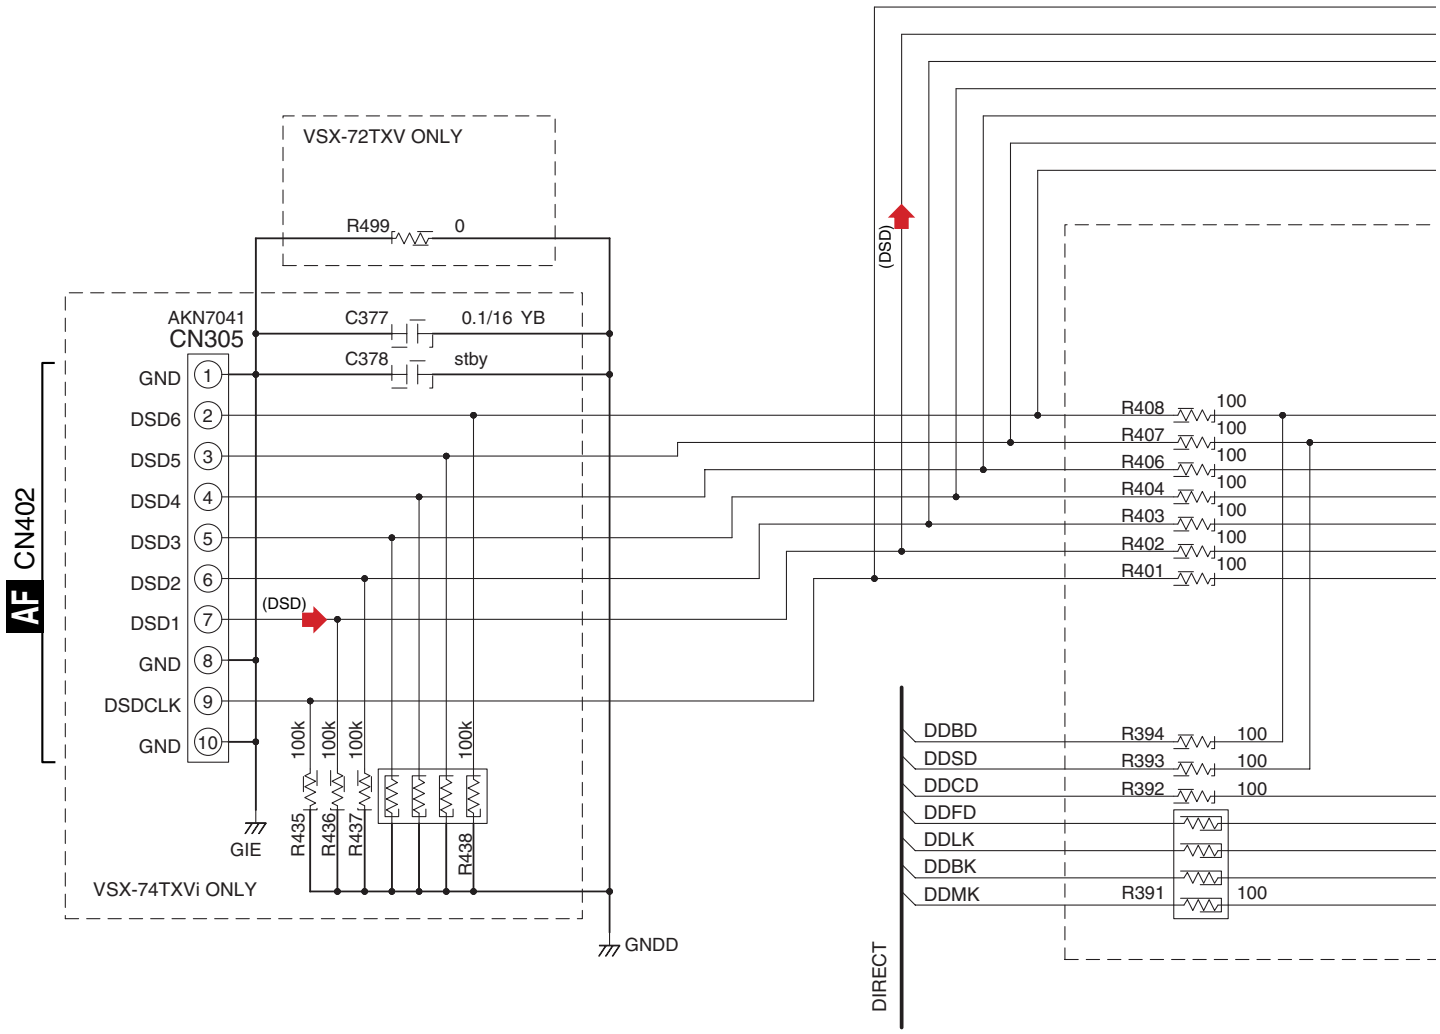

L 6/8


L 6/8 DIGITAL MOTHER ASSY
(VSX-74TXVi:AWP7037)
(VSX-72TXV:AWP7041)

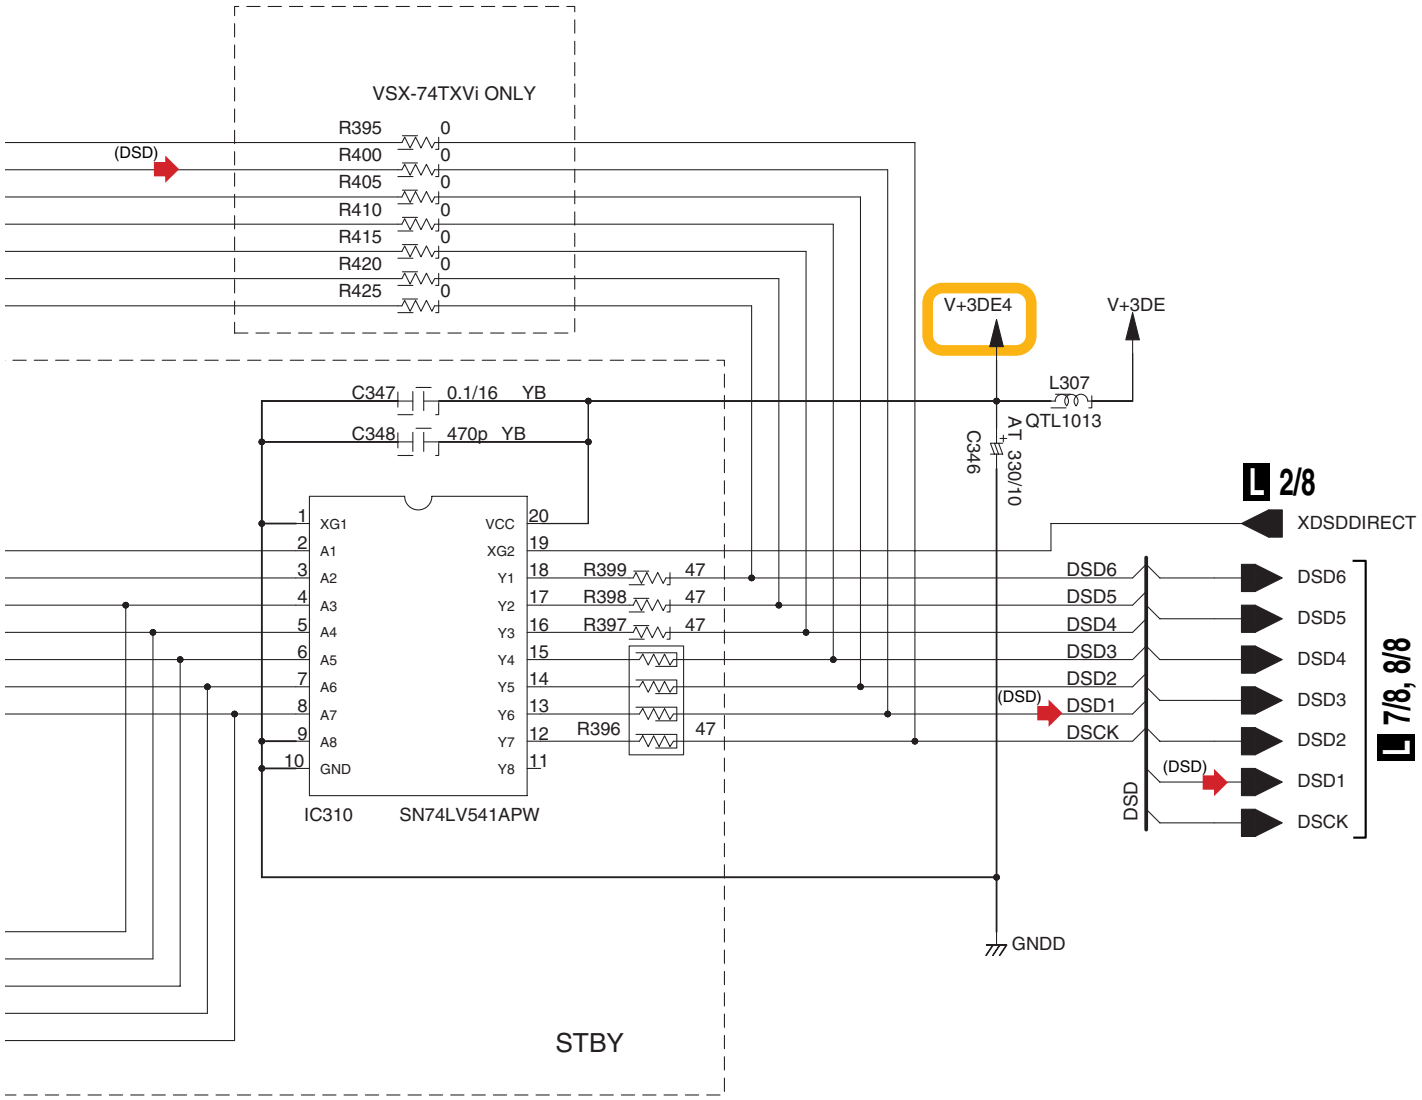

(DSD) : AUDIO SIGNAL ROUTE(DSD)


L 6/8

3.19 DIGITAL MOTHER ASSY (7/8)

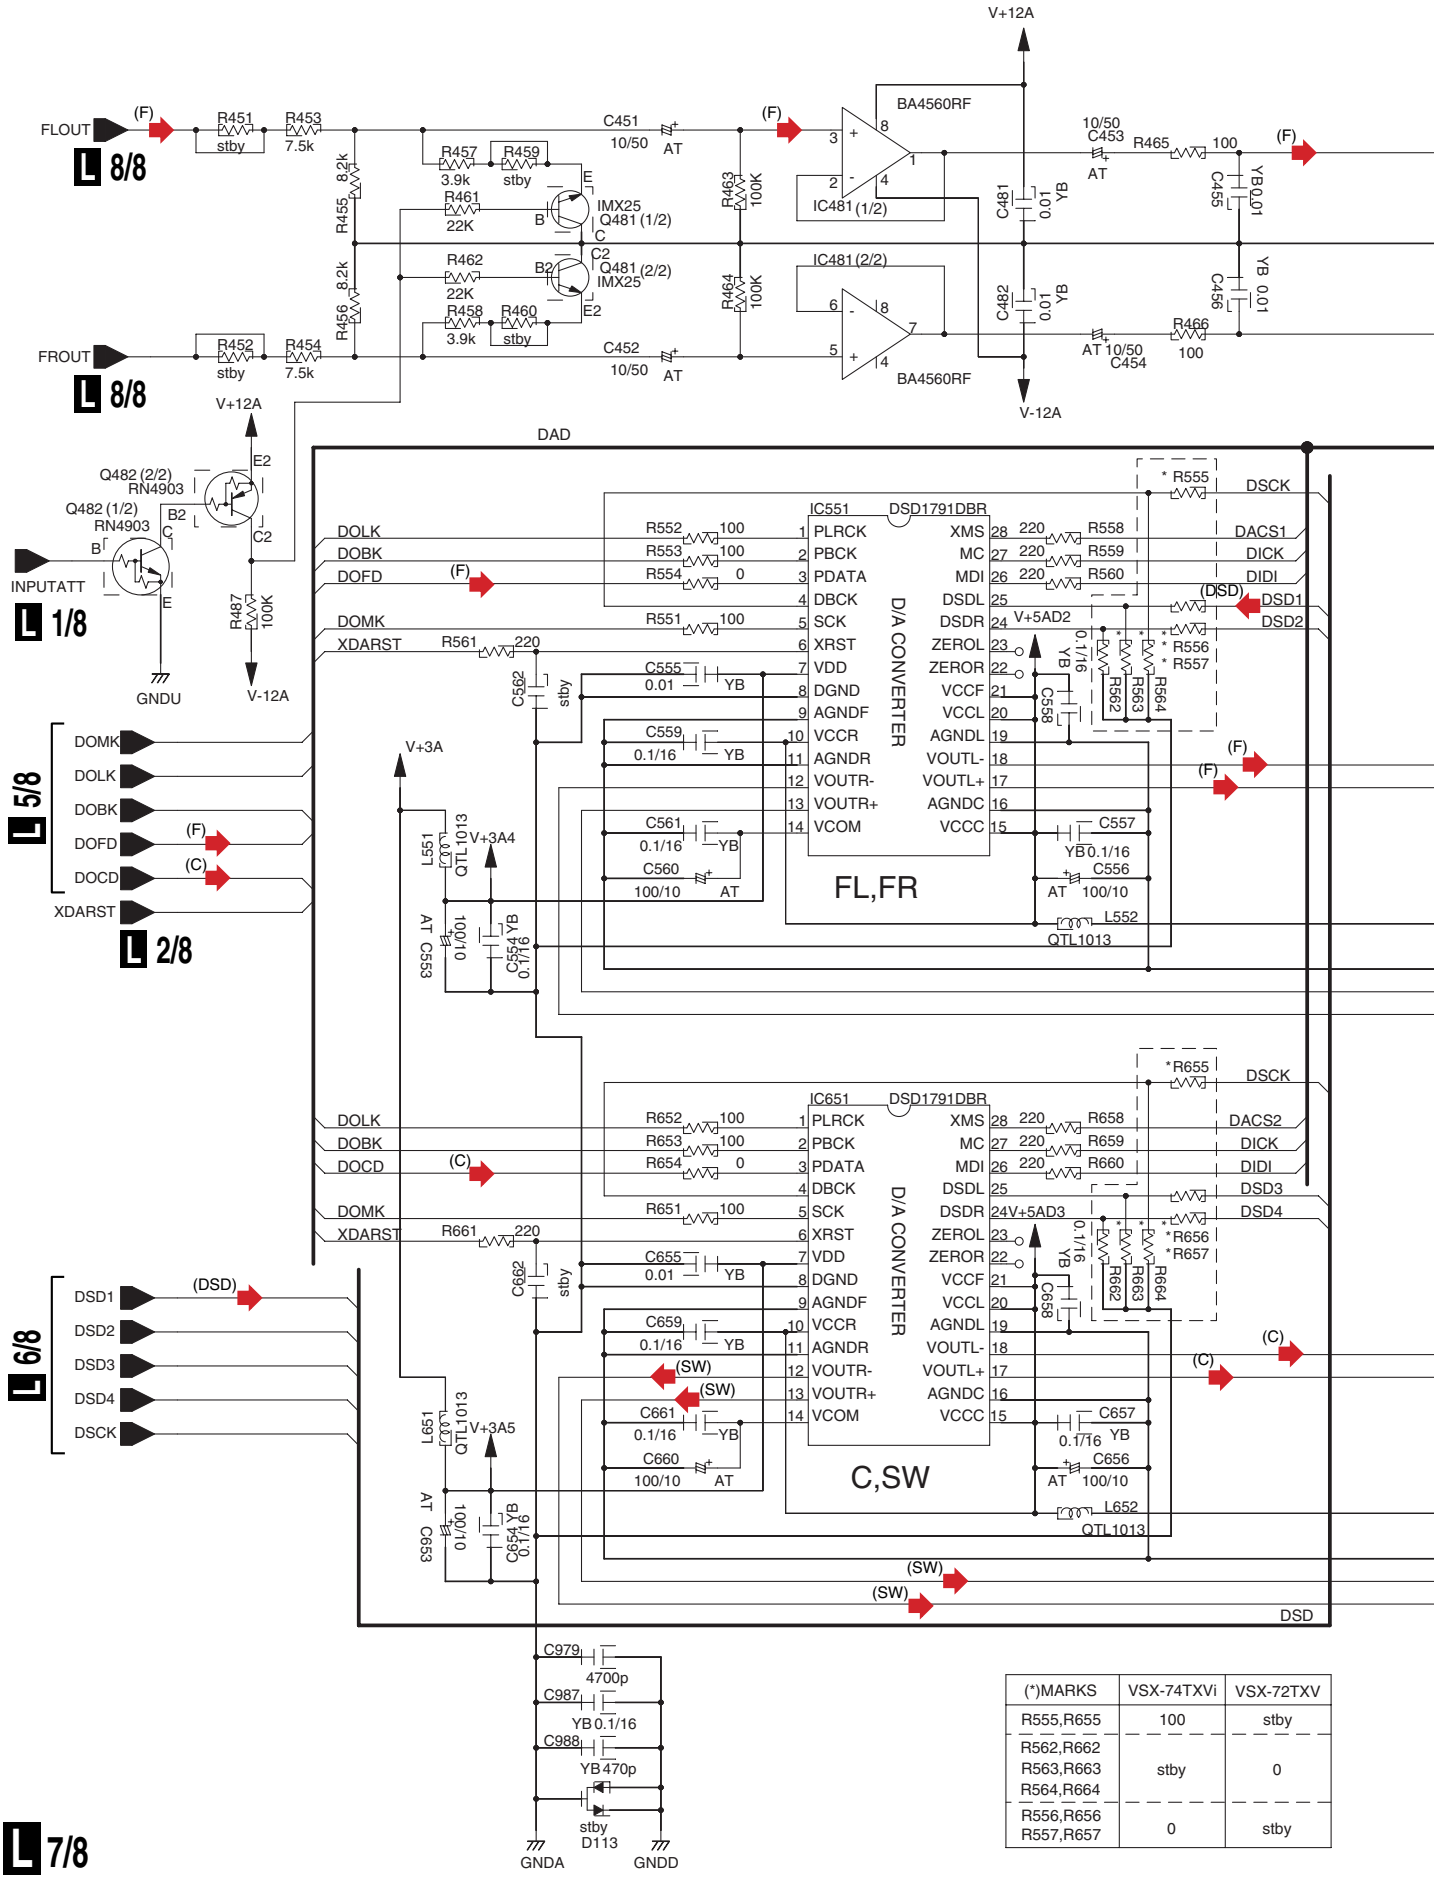


(*)MARKS	VSX-74TXVi	VSX-72TXV
R555,R655	100	stby
R562,R662 R563,R663 R564,R664	stby	0
R556,R656 R557,R657	0	stby

L 7/8 DIGITAL MOTHER ASSY
(VSX-74TXVi:AWP7037)
(VSX-72TXV:AWP7041)

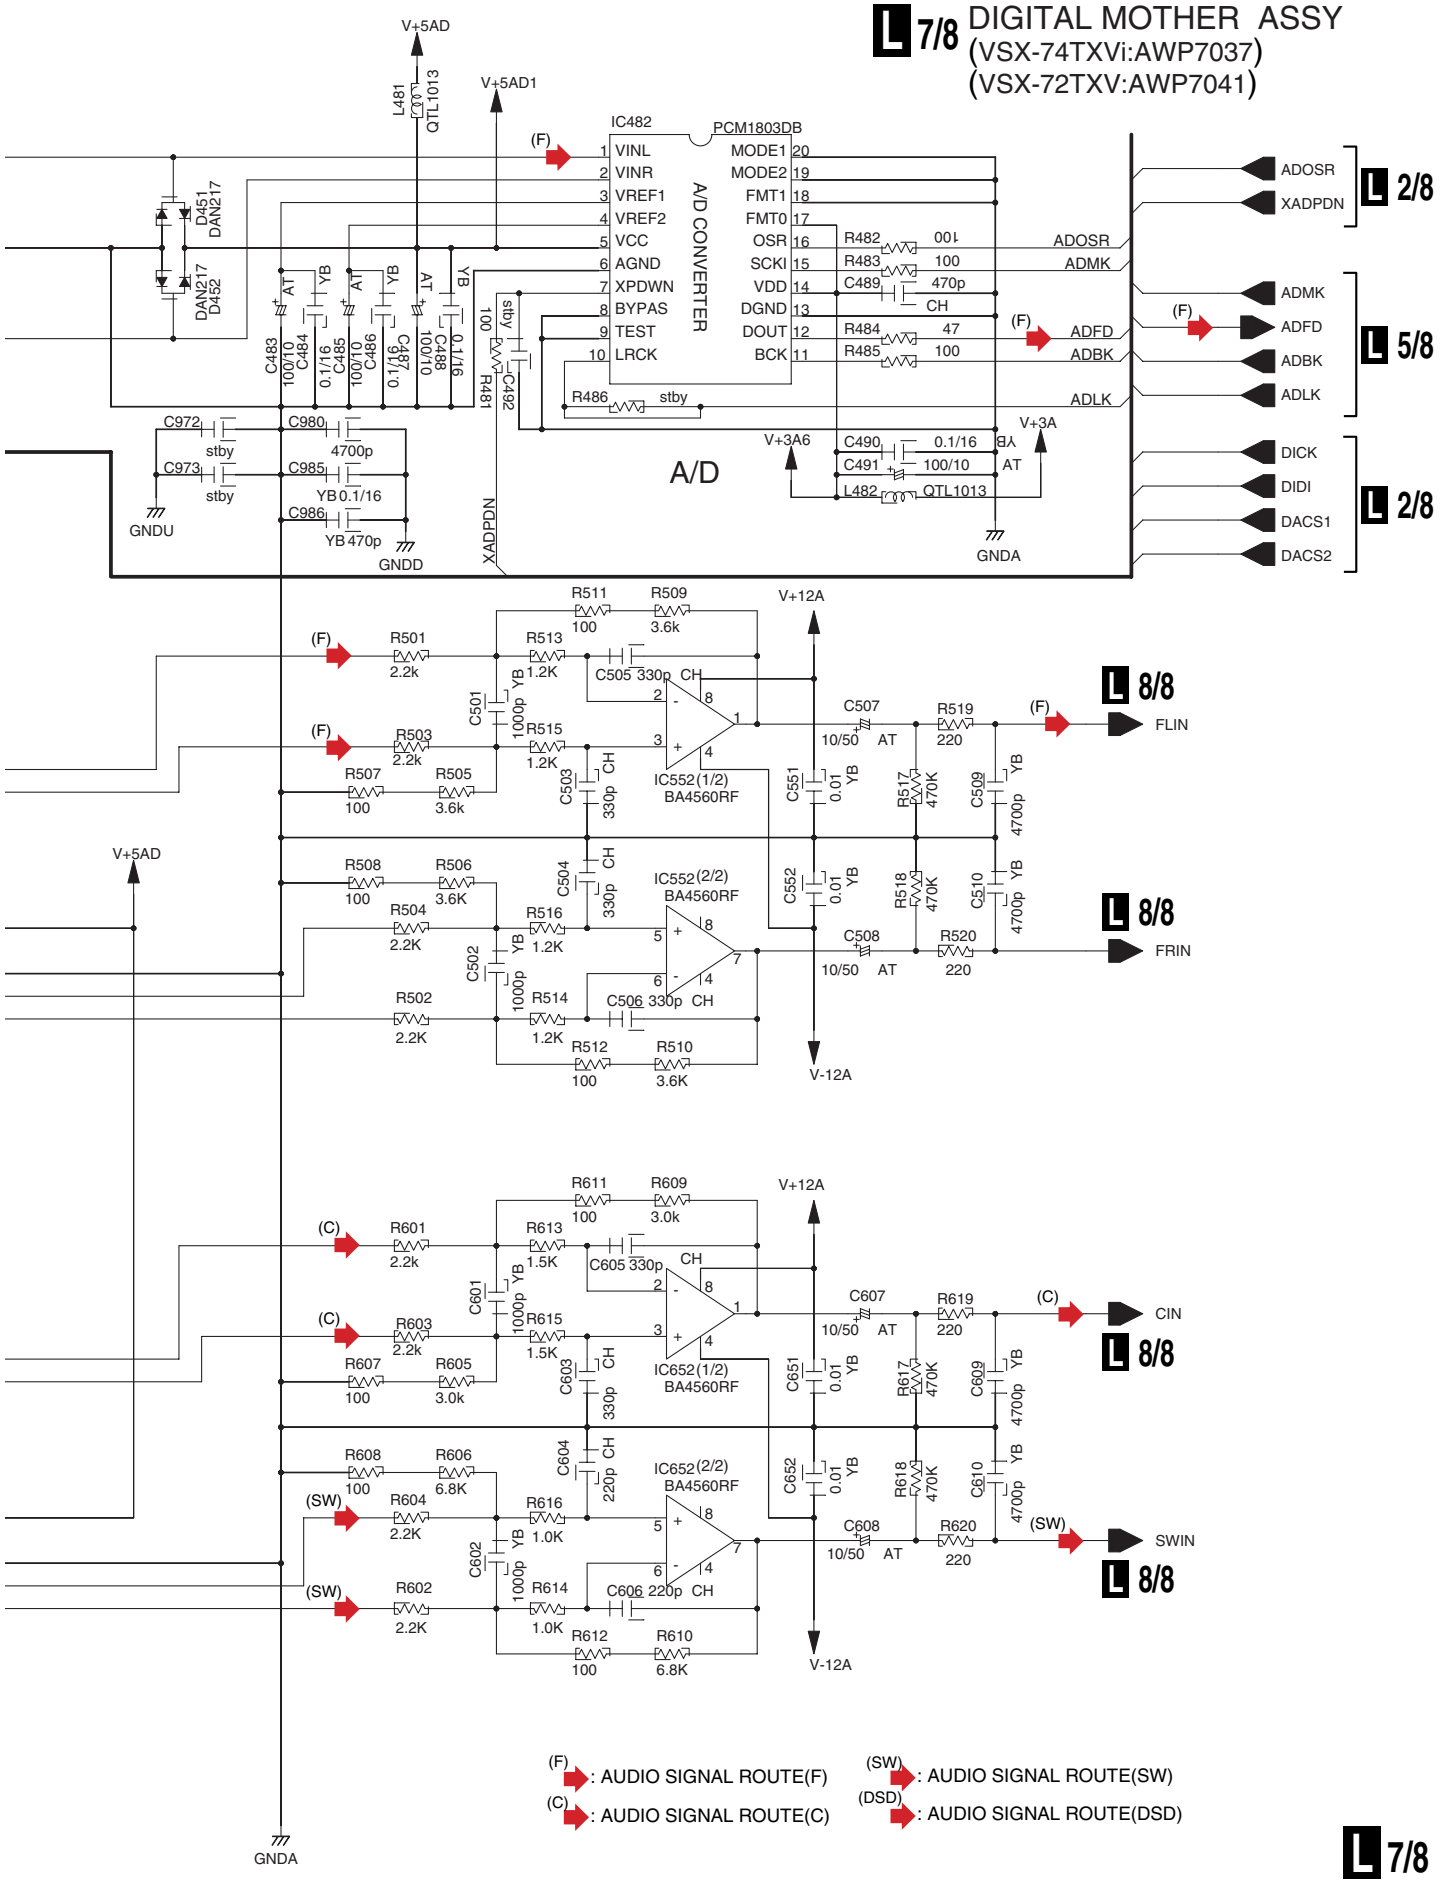


L 7/8

3.20 DIGITAL MOTHER ASSY (8/8)

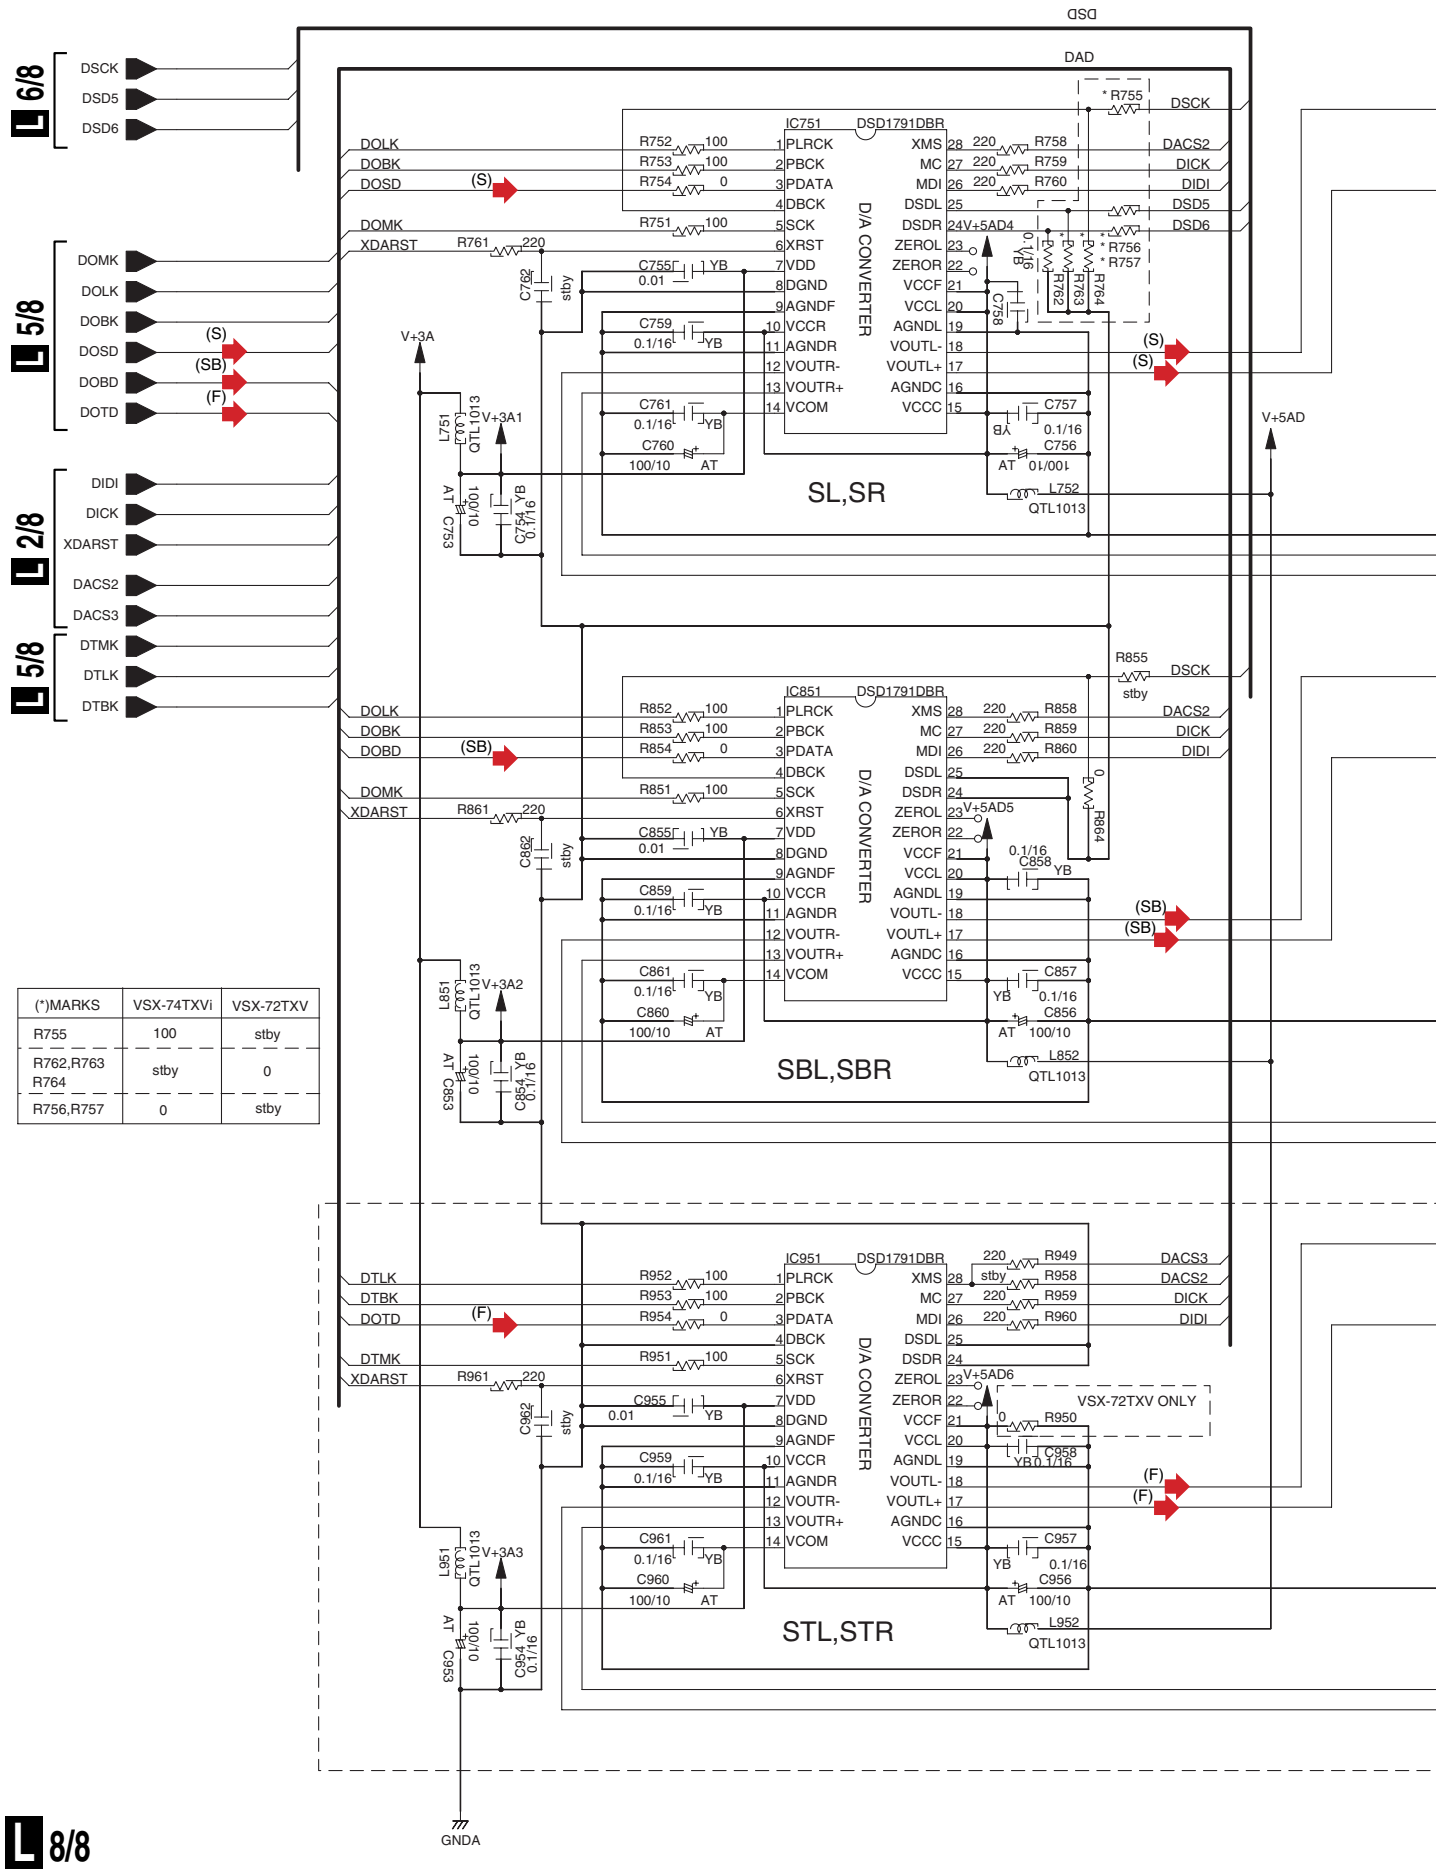


(*)MARKS	VSX-74TXVi	VSX-72TXV
R755	100	stby
R762,R763 R764	stby	0
R756,R757	0	stby


L 8/8 DIGITAL MOTHER ASSY
(VSX-74TXVi:AWP7037)
(VSX-72TXV:AWP7041)

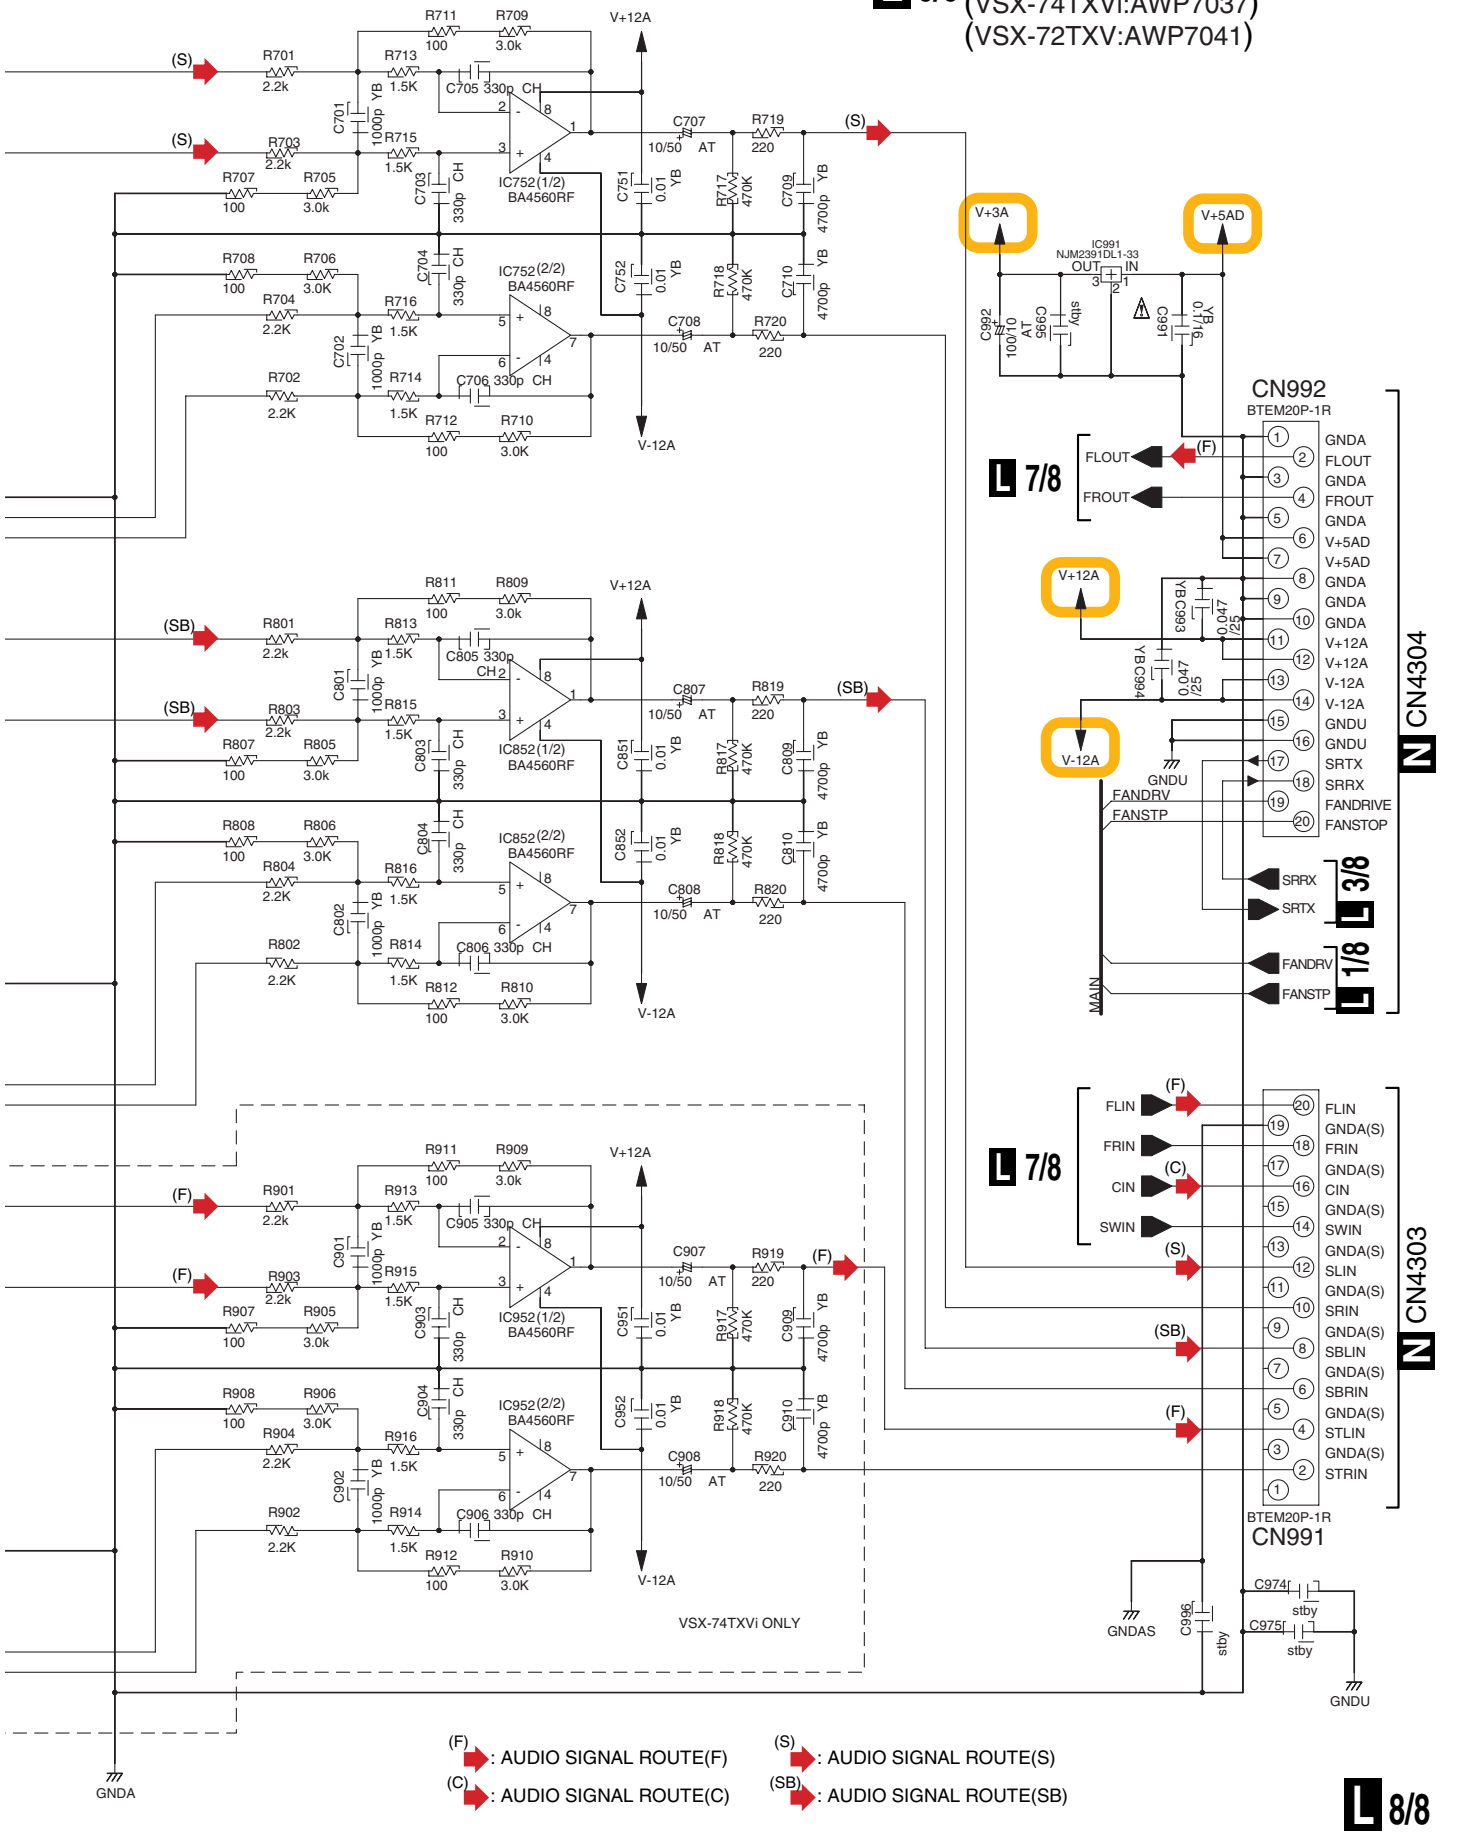


3.21 DSP ASSY (1/2)

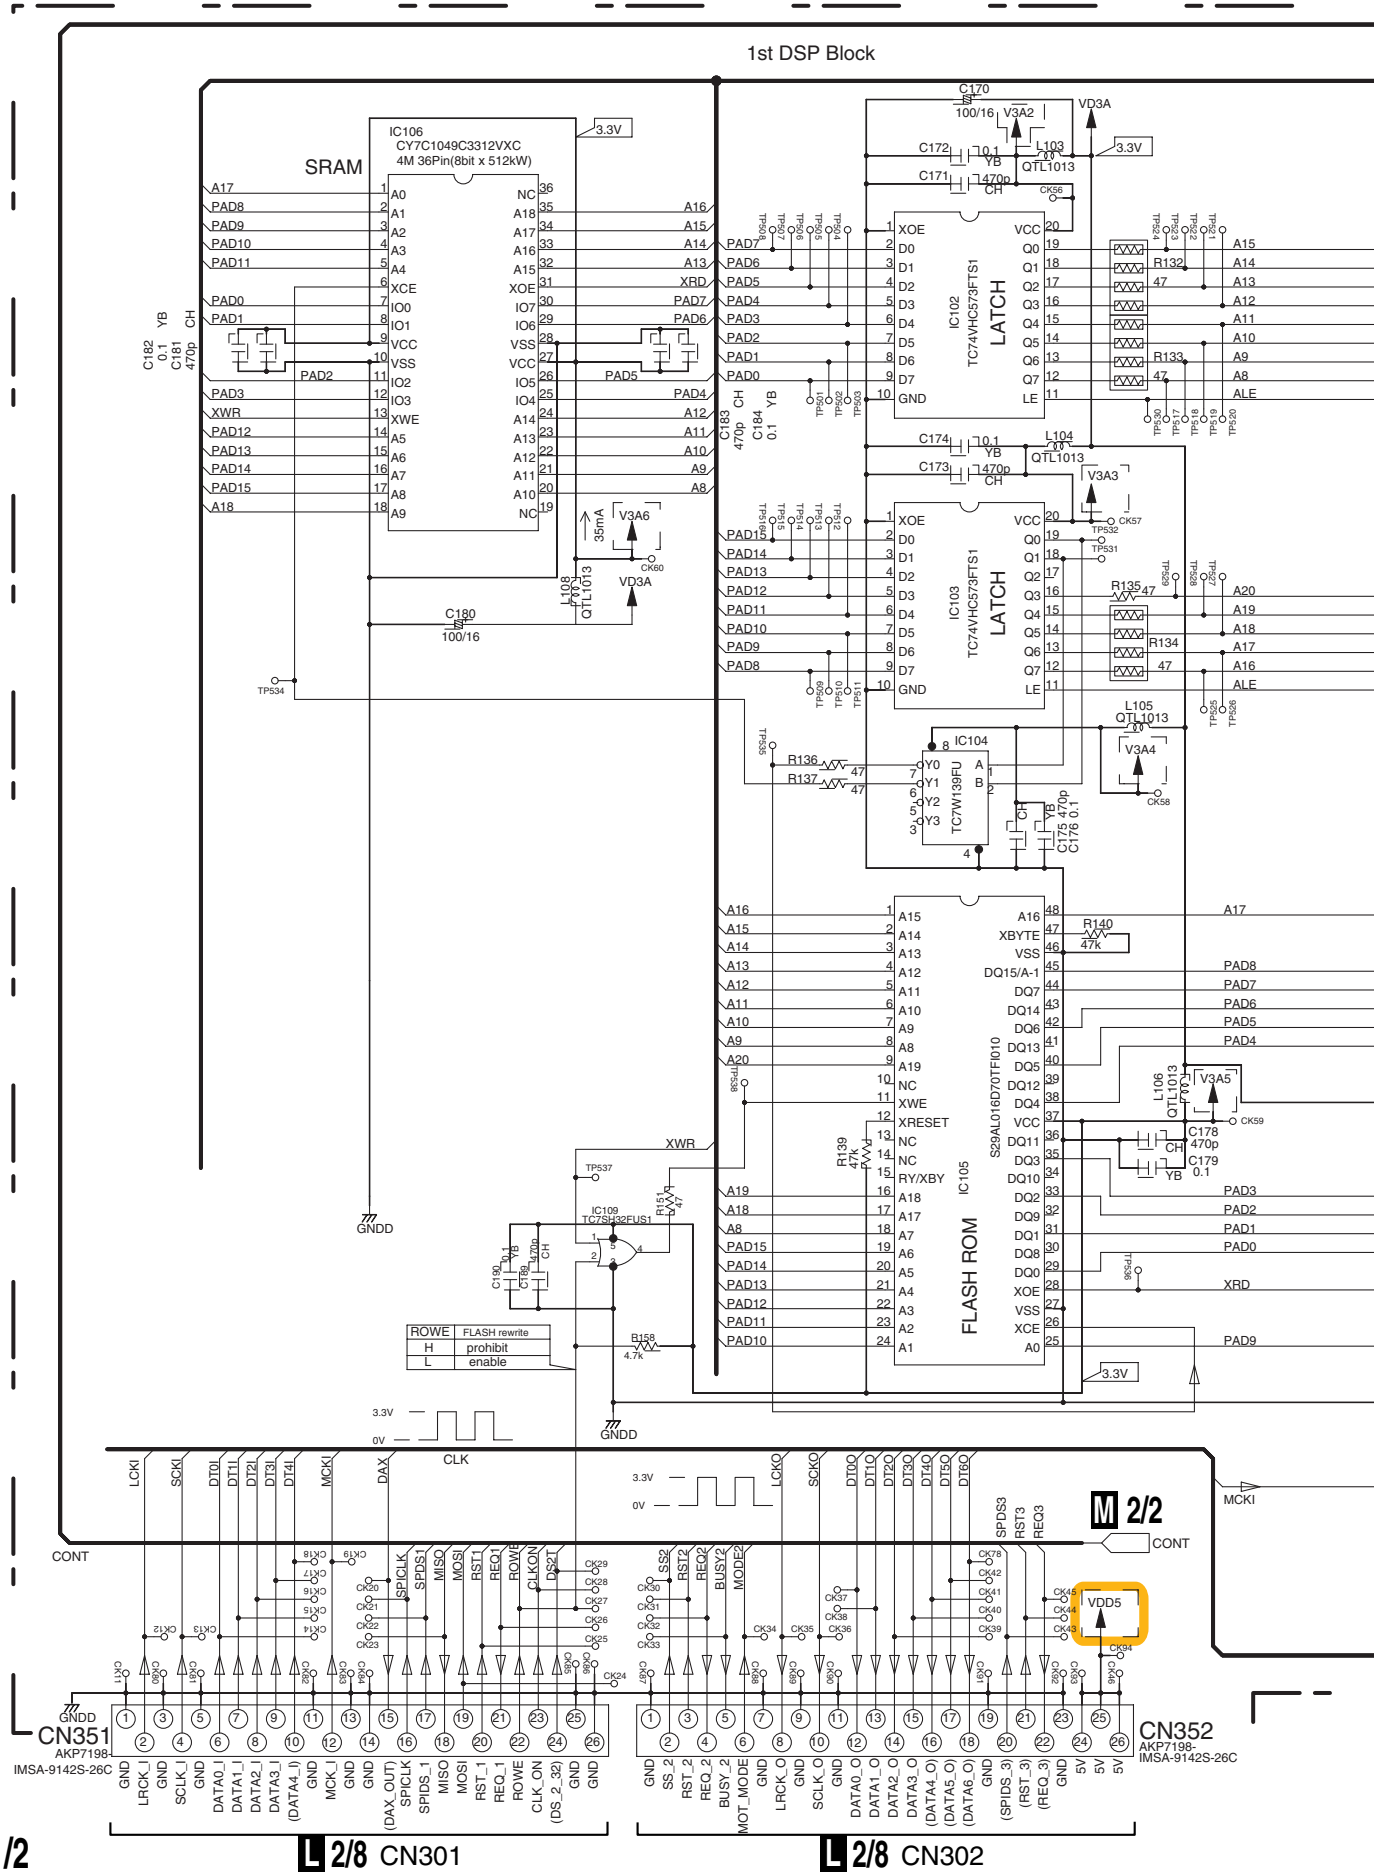

M 1/2 DSP ASSY (AWX8599)

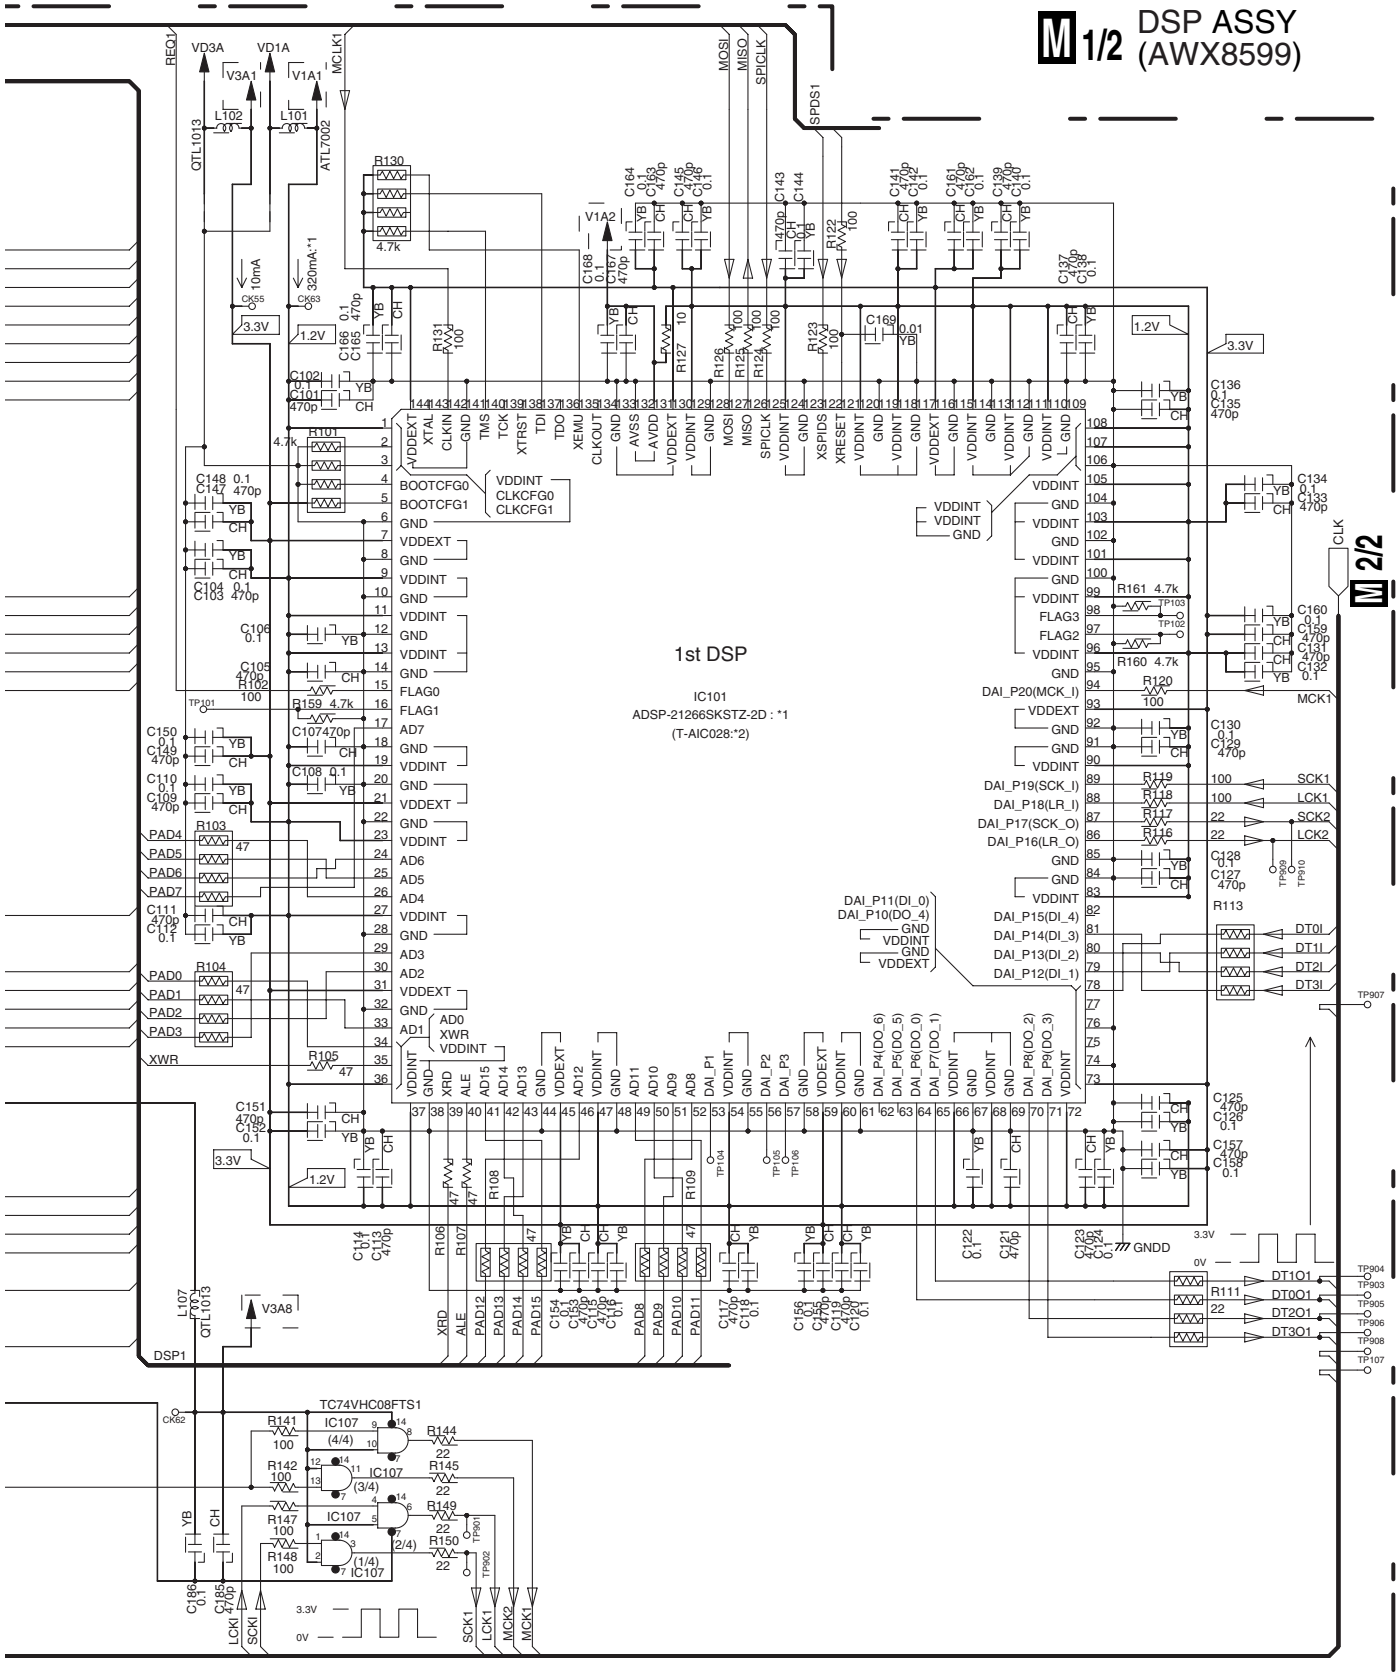


3.22 DSP ASSY (2/2)

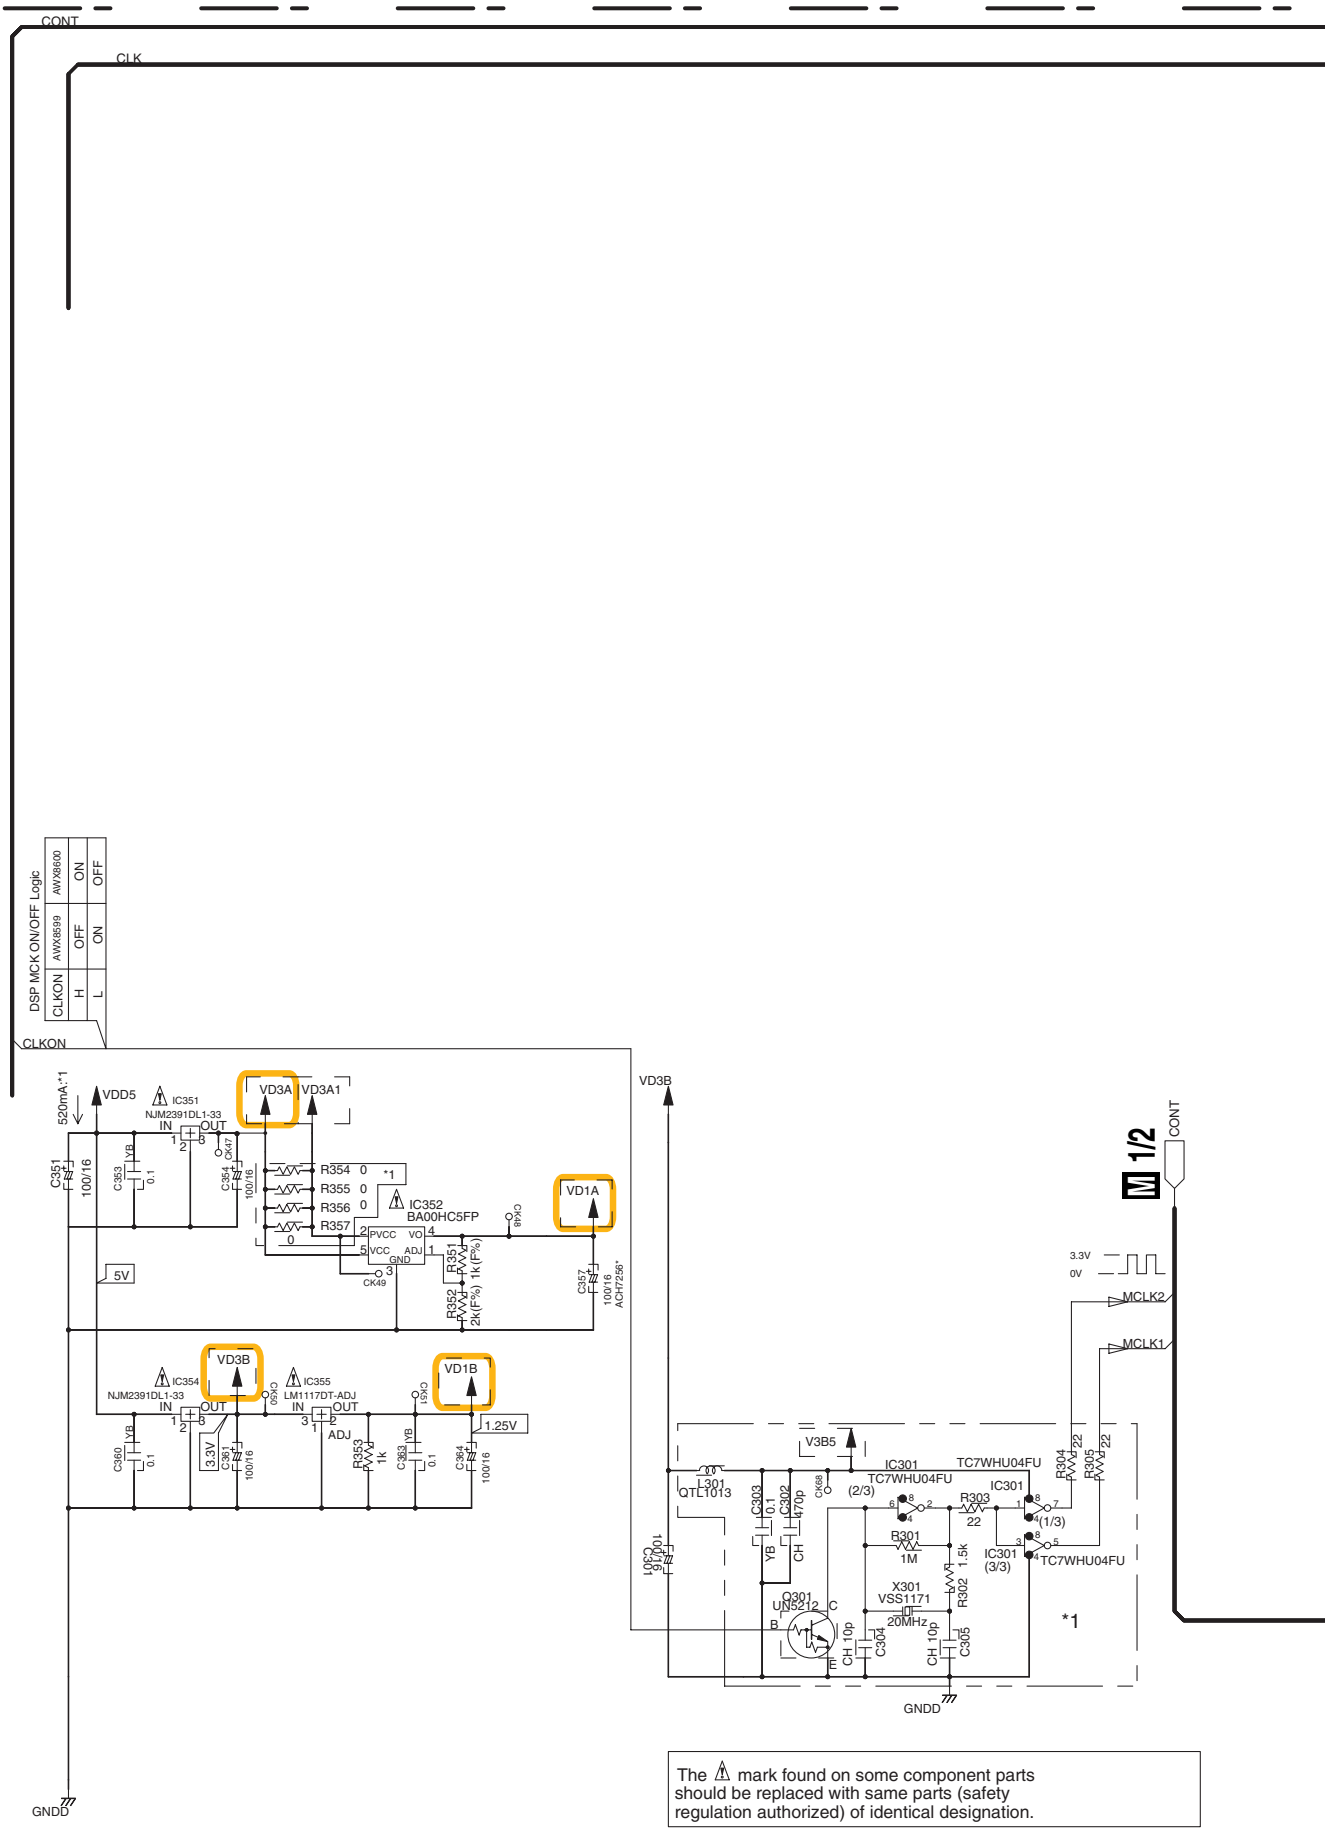



The ⚠ mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.

M 2/2 DSP ASSY (AWX8599)

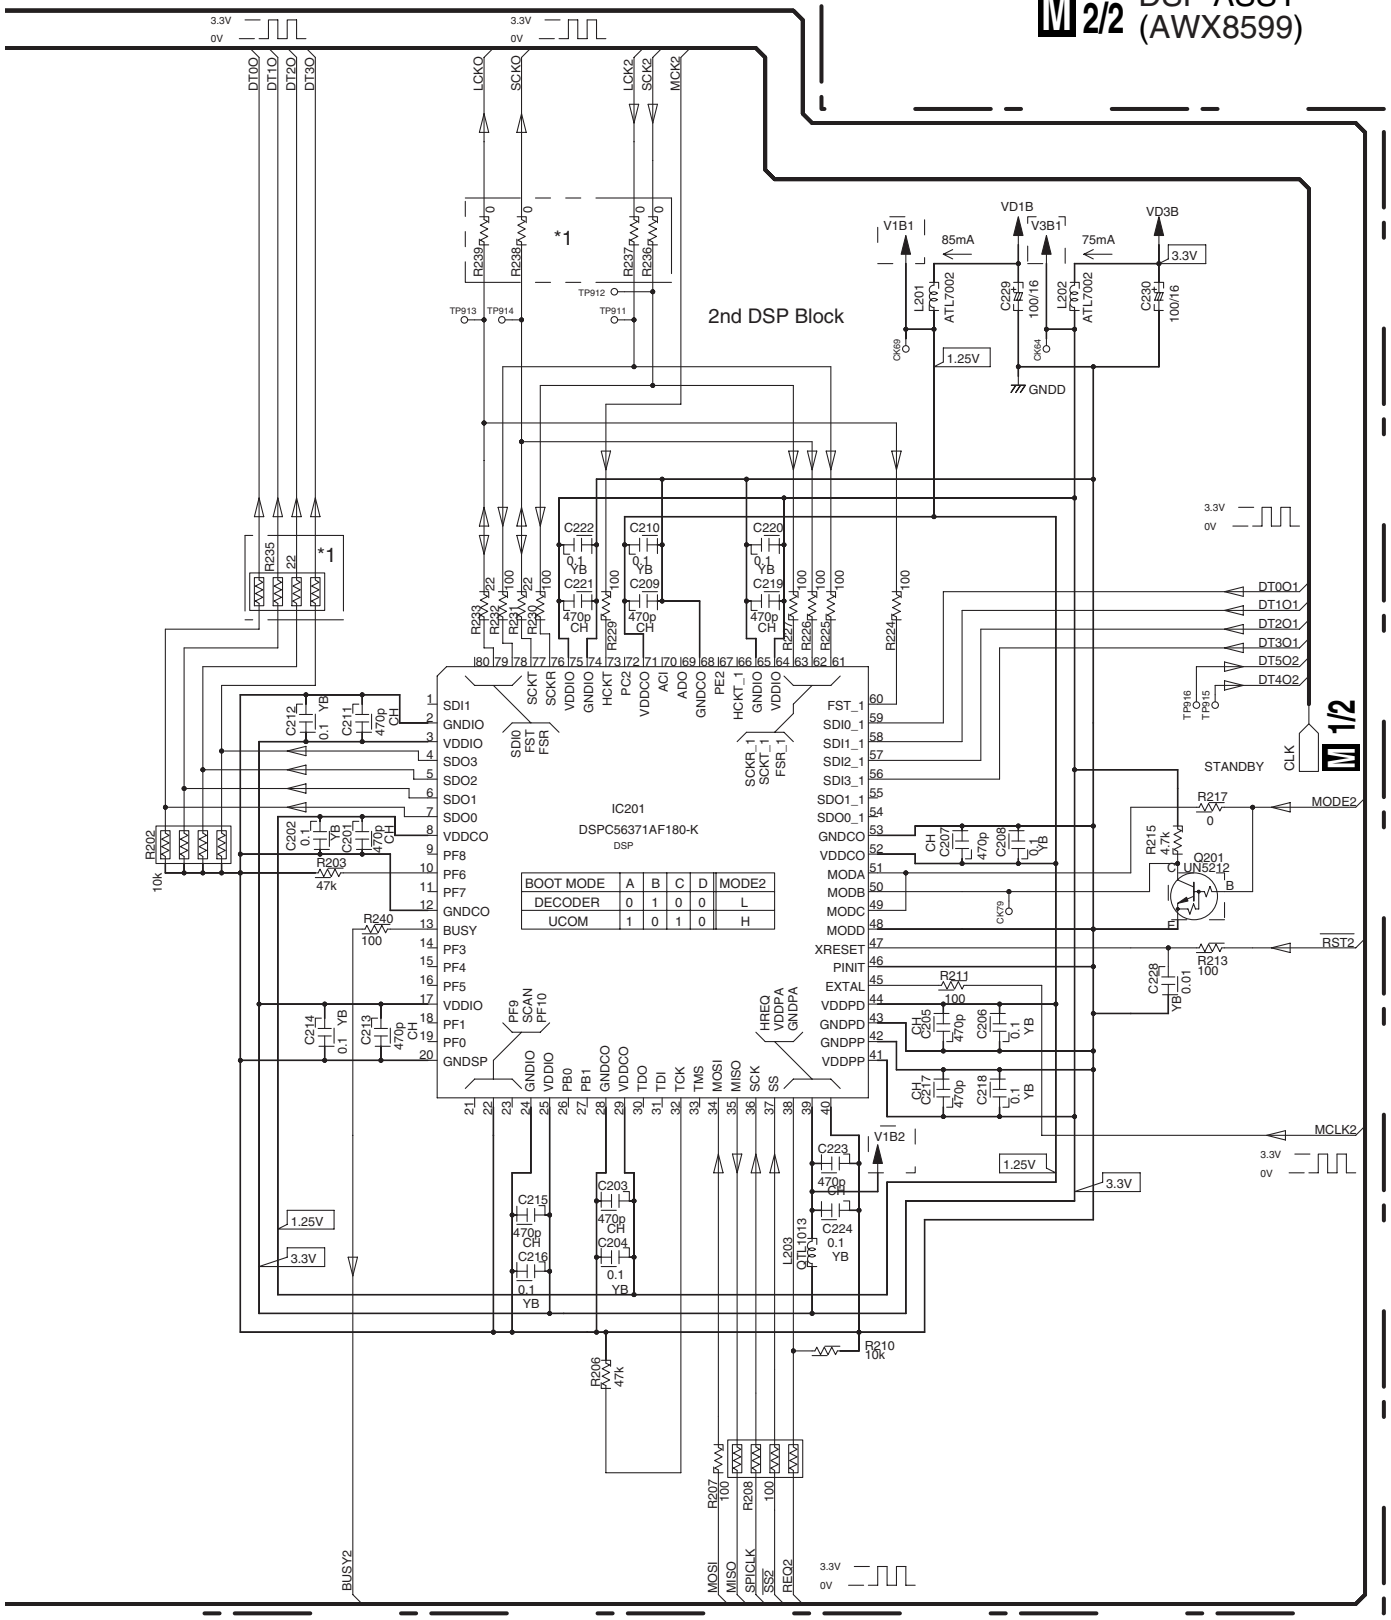


NOTES:
NO INDICATED PARTS IS...
CCSRCH****50-T
CKSRYB103K50-T
CKSRYB104K16-T
CEVW101M**-TRB
RS1/16S***J-T
RAB4C***J-T
UNLESS OTHERWISE NOTED

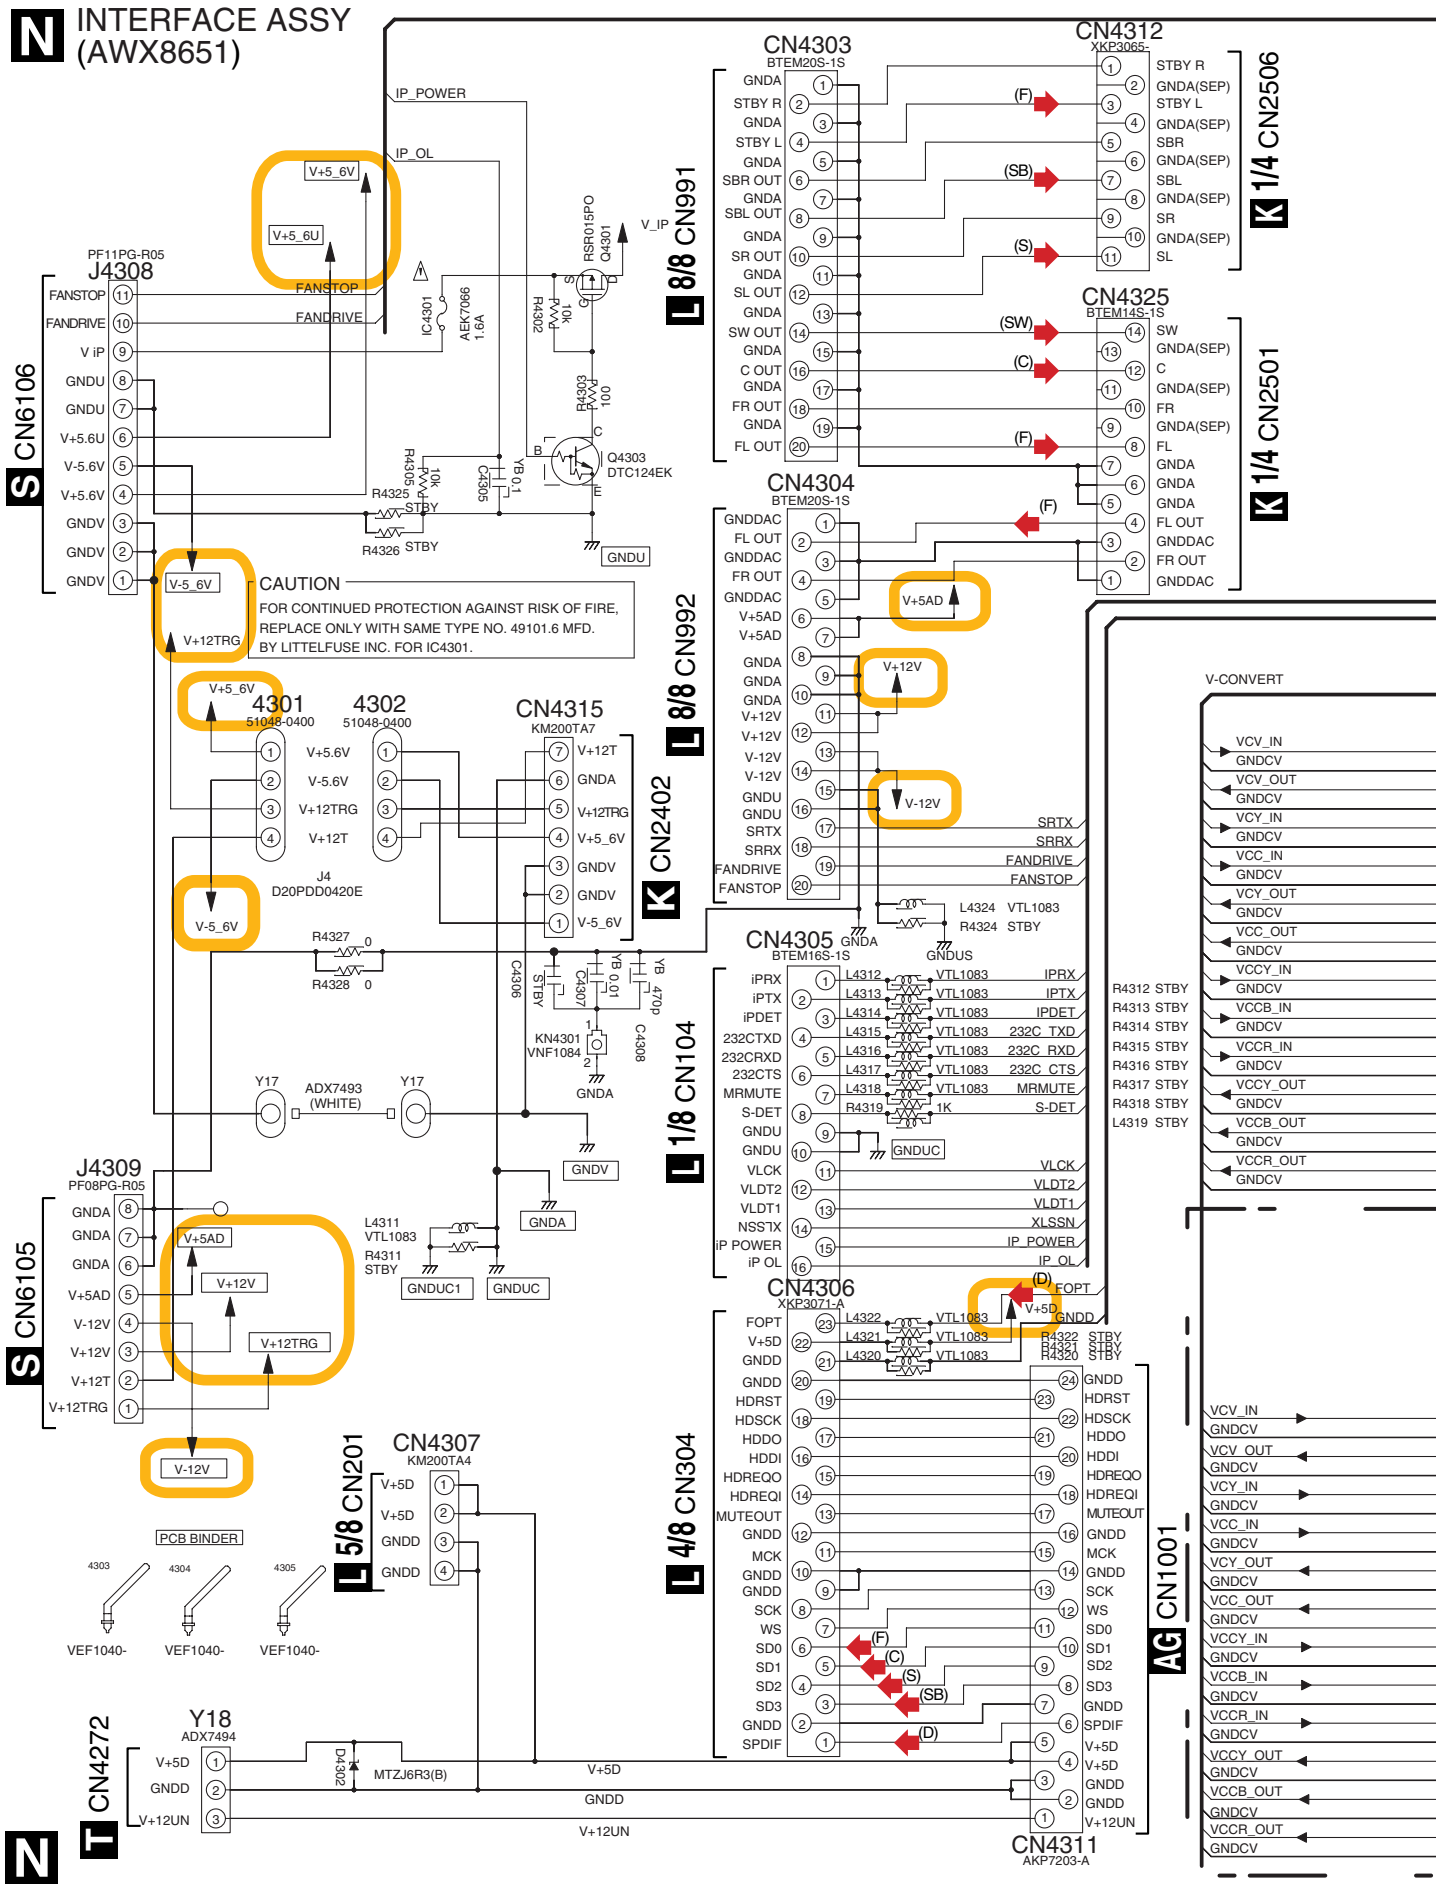
N INTERFACE ASSY (AWX8651)
CN4303 BTEM20S-1S
CN4312 XKP3065-
K 1/4 CN2506
CN4325 BTEM14S-1S
K 1/4 CN2501
L 8/8 CN991
CN4304 BTEM20S-1S
L 8/8 CN992
S CN6106 PF11PG-R05 J4308
IP_POWER
IP_OL
V_IP
V+5_6V
V+5_6U
FANSTOP
FANDRIVE
IC4301 AEK7066 1.6A
RSR015P0 Q4301
R4302 10K
R4303 100
Q4303 DTC124EK
R4305 10k
C4305 0.1
R4325 STBY
R4326 STBY
GNDU
V-5_6V
V+12TRG
CAUTION
FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE NO. 49101.6 MFD. BY LITTELFUSE INC. FOR IC4301.
4301 51048-0400
4302 51048-0400
CN4315 KM200TA7
J4 D20PDD0420E
K CN2402
R4327 0
R4328 0
C4306 STBY
C4307 YB 0.01
C4308 YB 470p
KN4301 VNF1084
GNDA
Y17 ADX7493 (WHITE)
GNDV
J4309 PF08PG-R05
S CN6105
V+5AD
V+12V
V+12TRG
V-12V
L4311 VTL1083
R4311 STBY
GNDUC1
GNDUC
PCB BINDER
VEF1040-
L 5/8 CN201
CN4307 KM200TA4
Y18 ADX7494
D4302 MTZJ6R3(B)
T CN4272
V+12UN
CN4305 BTEM16S-1S
GNDUS
L 1/8 CN104
L4324 VTL1083
R4324 STBY
CN4306 XKP3071-A
L 4/8 CN304
V+5D
GNDD
CN4311 AKP7203-A
AG CN1001
V-CONVERT
VCV_IN
VCV_OUT
VCY_IN
VCC_IN
VCY_OUT
VCC_OUT
VCCY_IN
VCCB_IN
VCCR_IN
VCCY_OUT
VCCB_OUT
VCCR_OUT
GNDCV

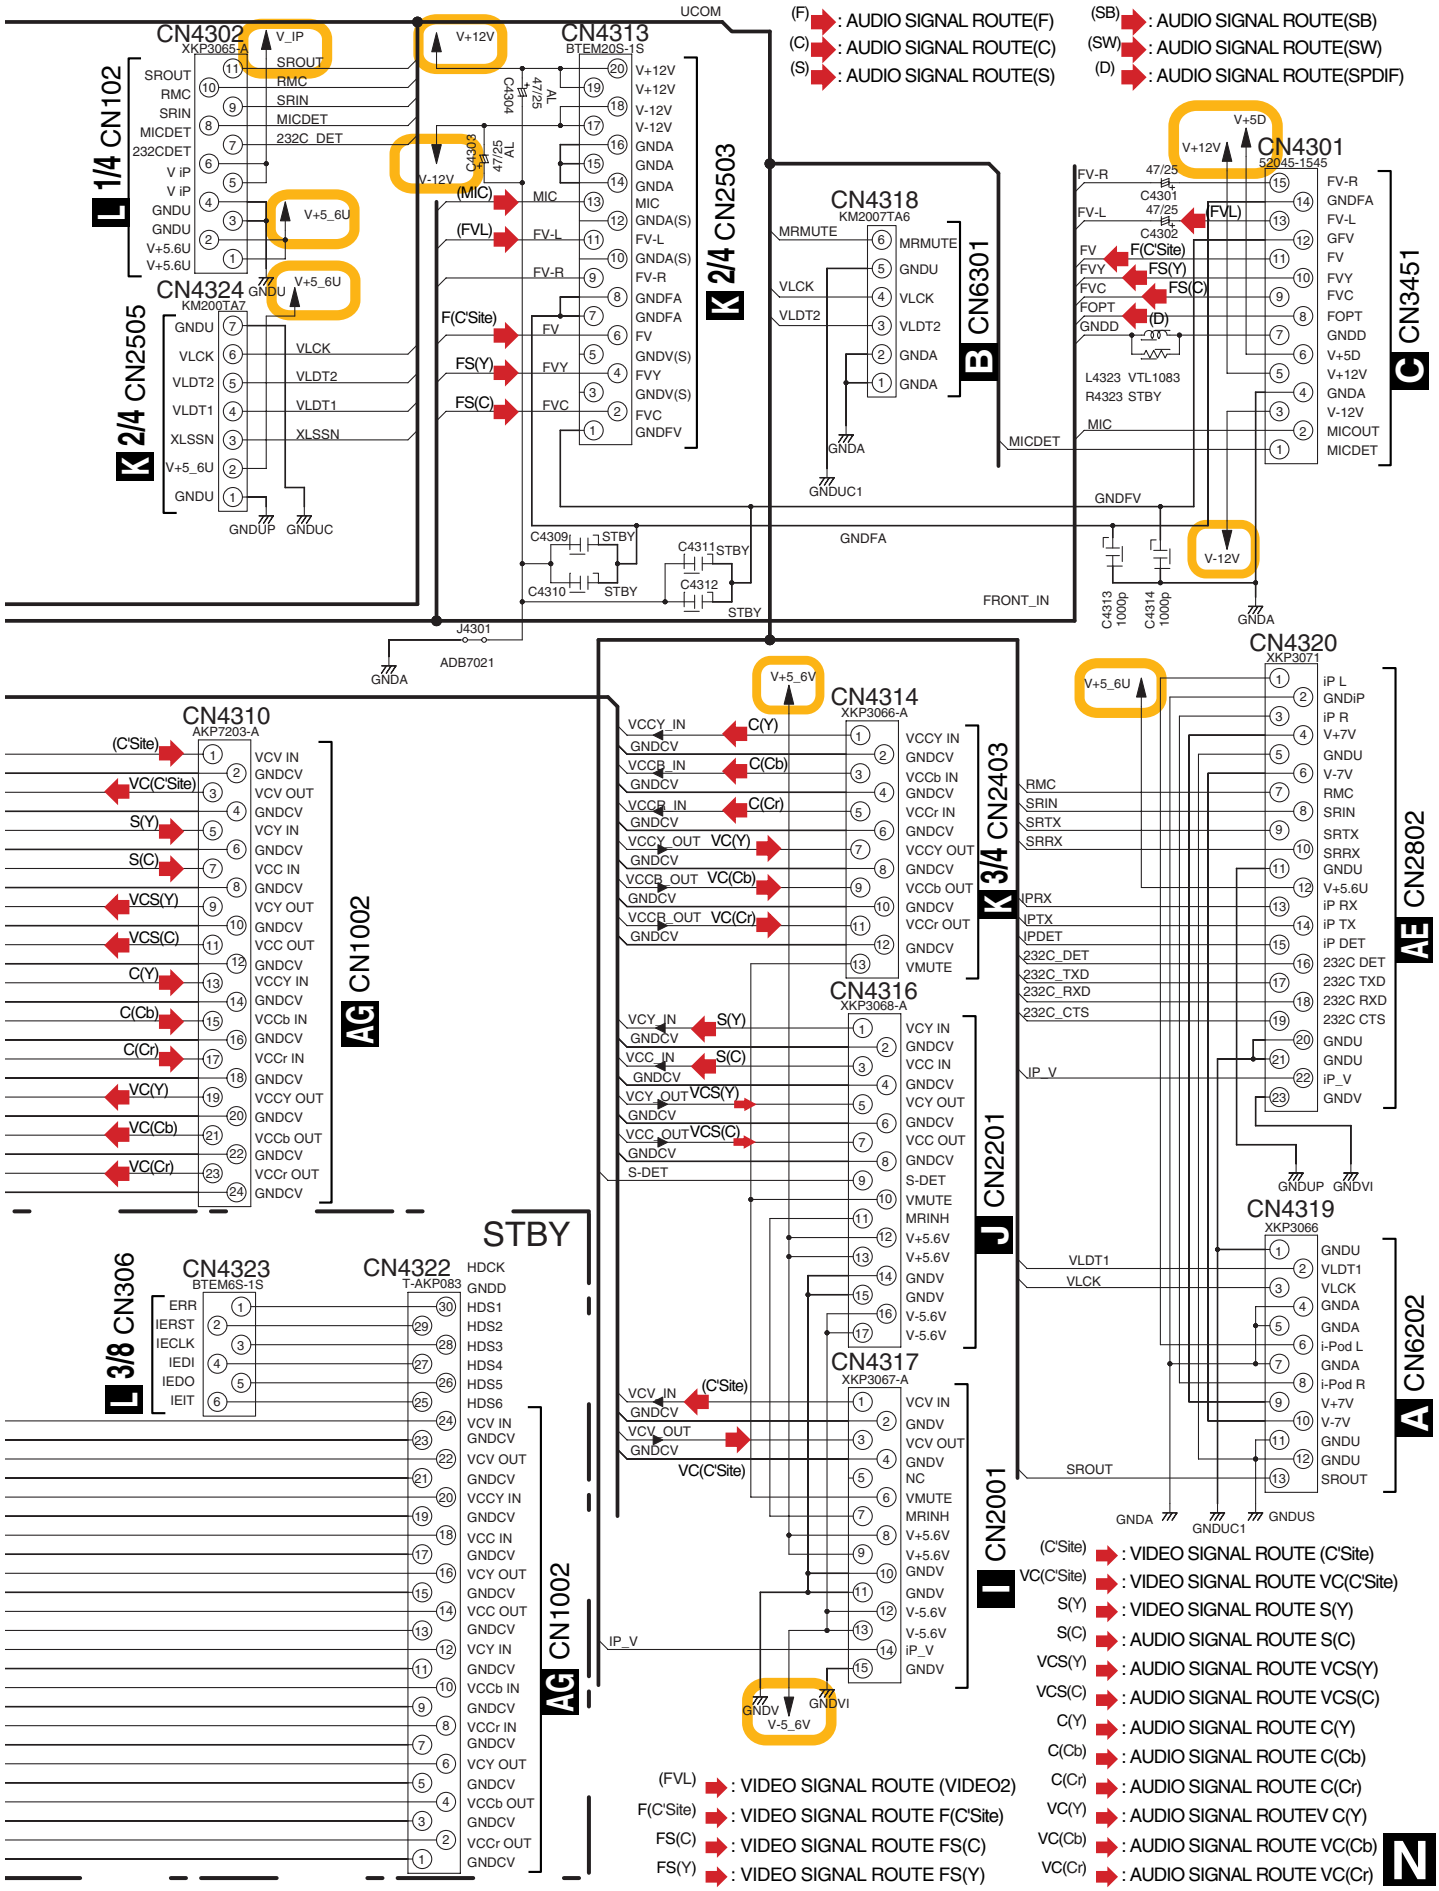

(F) : AUDIO SIGNAL ROUTE(F)
(C) : AUDIO SIGNAL ROUTE(C)
(S) : AUDIO SIGNAL ROUTE(S)
(SB) : AUDIO SIGNAL ROUTE(SB)
(SW) : AUDIO SIGNAL ROUTE(SW)
(D) : AUDIO SIGNAL ROUTE(SPDIF)
UCOM
CN4302
XKP3065-A
CN4313
BTEM20S-1S
CN4318
KM2007TA6
CN4301
52045-1545
CN4324
KM200TA7
CN4310
AKP7203-A
CN4314
XKP3066-A
CN4316
XKP3068-A
CN4317
XKP3067-A
CN4320
XKP3071
CN4319
XKP3066
CN4323
BTEM6S-1S
CN4322
T-AKP083
STBY
L 1/4 CN102
K 2/4 CN2505
K 2/4 CN2503
B CN6301
C CN3451
AG CN1002
K 3/4 CN2403
J CN2201
AE CN2802
L 3/8 CN306
I CN2001
A CN6202
(FVL) : VIDEO SIGNAL ROUTE (VIDEO2)
F(C'Site) : VIDEO SIGNAL ROUTE F(C'Site)
FS(C) : VIDEO SIGNAL ROUTE FS(C)
FS(Y) : VIDEO SIGNAL ROUTE FS(Y)
(C'Site) : VIDEO SIGNAL ROUTE (C'Site)
VC(C'Site) : VIDEO SIGNAL ROUTE VC(C'Site)
S(Y) : VIDEO SIGNAL ROUTE S(Y)
S(C) : AUDIO SIGNAL ROUTE S(C)
VCS(Y) : AUDIO SIGNAL ROUTE VCS(Y)
VCS(C) : AUDIO SIGNAL ROUTE VCS(C)
C(Y) : AUDIO SIGNAL ROUTE C(Y)
C(Cb) : AUDIO SIGNAL ROUTE C(Cb)
C(Cr) : AUDIO SIGNAL ROUTE C(Cr)
VC(Y) : AUDIO SIGNAL ROUTEV C(Y)
VC(Cb) : AUDIO SIGNAL ROUTE VC(Cb)
VC(Cr) : AUDIO SIGNAL ROUTE VC(Cr)
N

3.24 POWER AMP IN and POWER PROTECT ASSYS

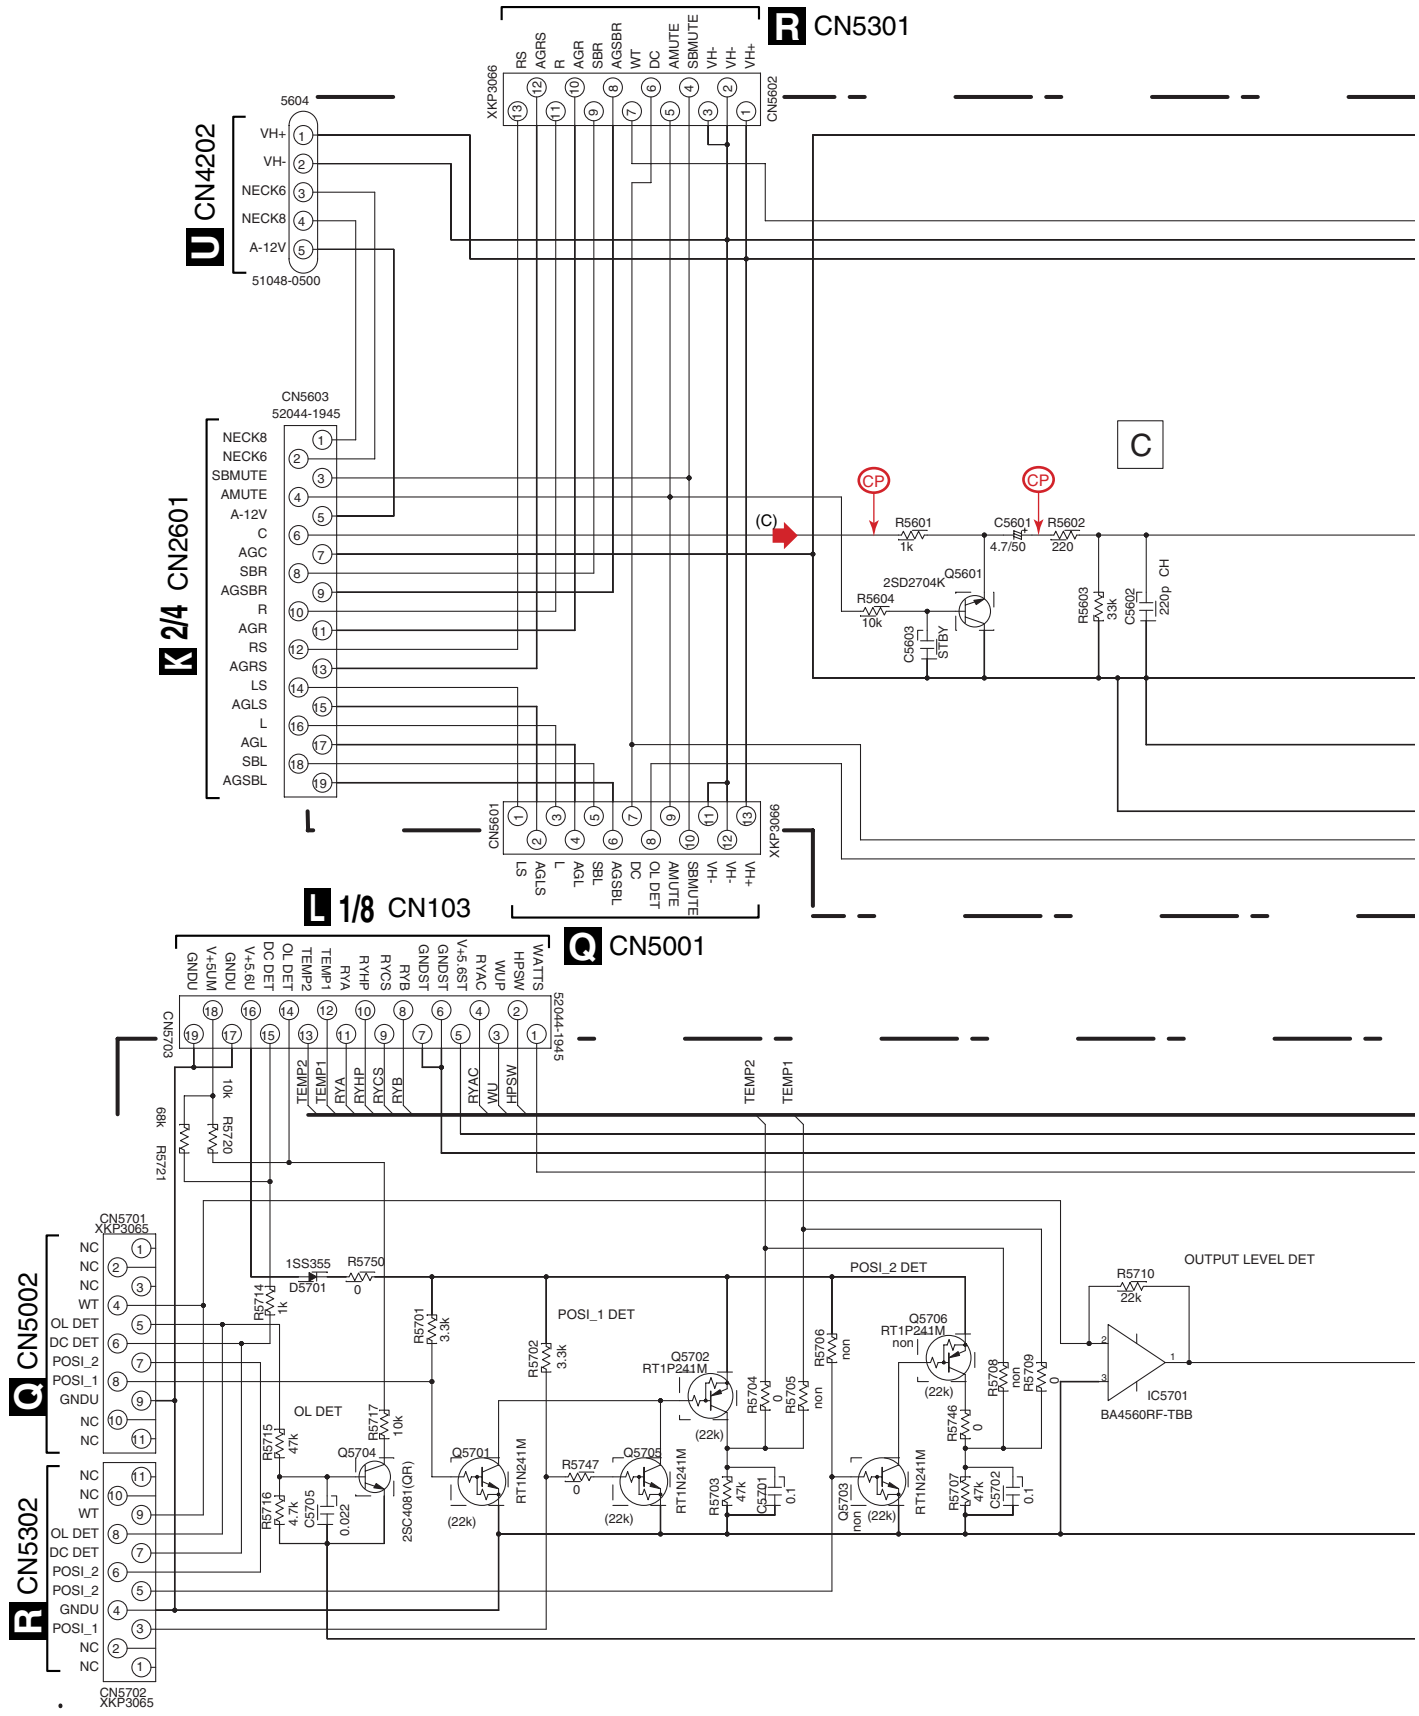


PROTECTION DETECT


	NORMAL	DETECT
LOCK DET	L	H
OL DET	H	L
DC DET	H	L
TEMP1,2	L	H

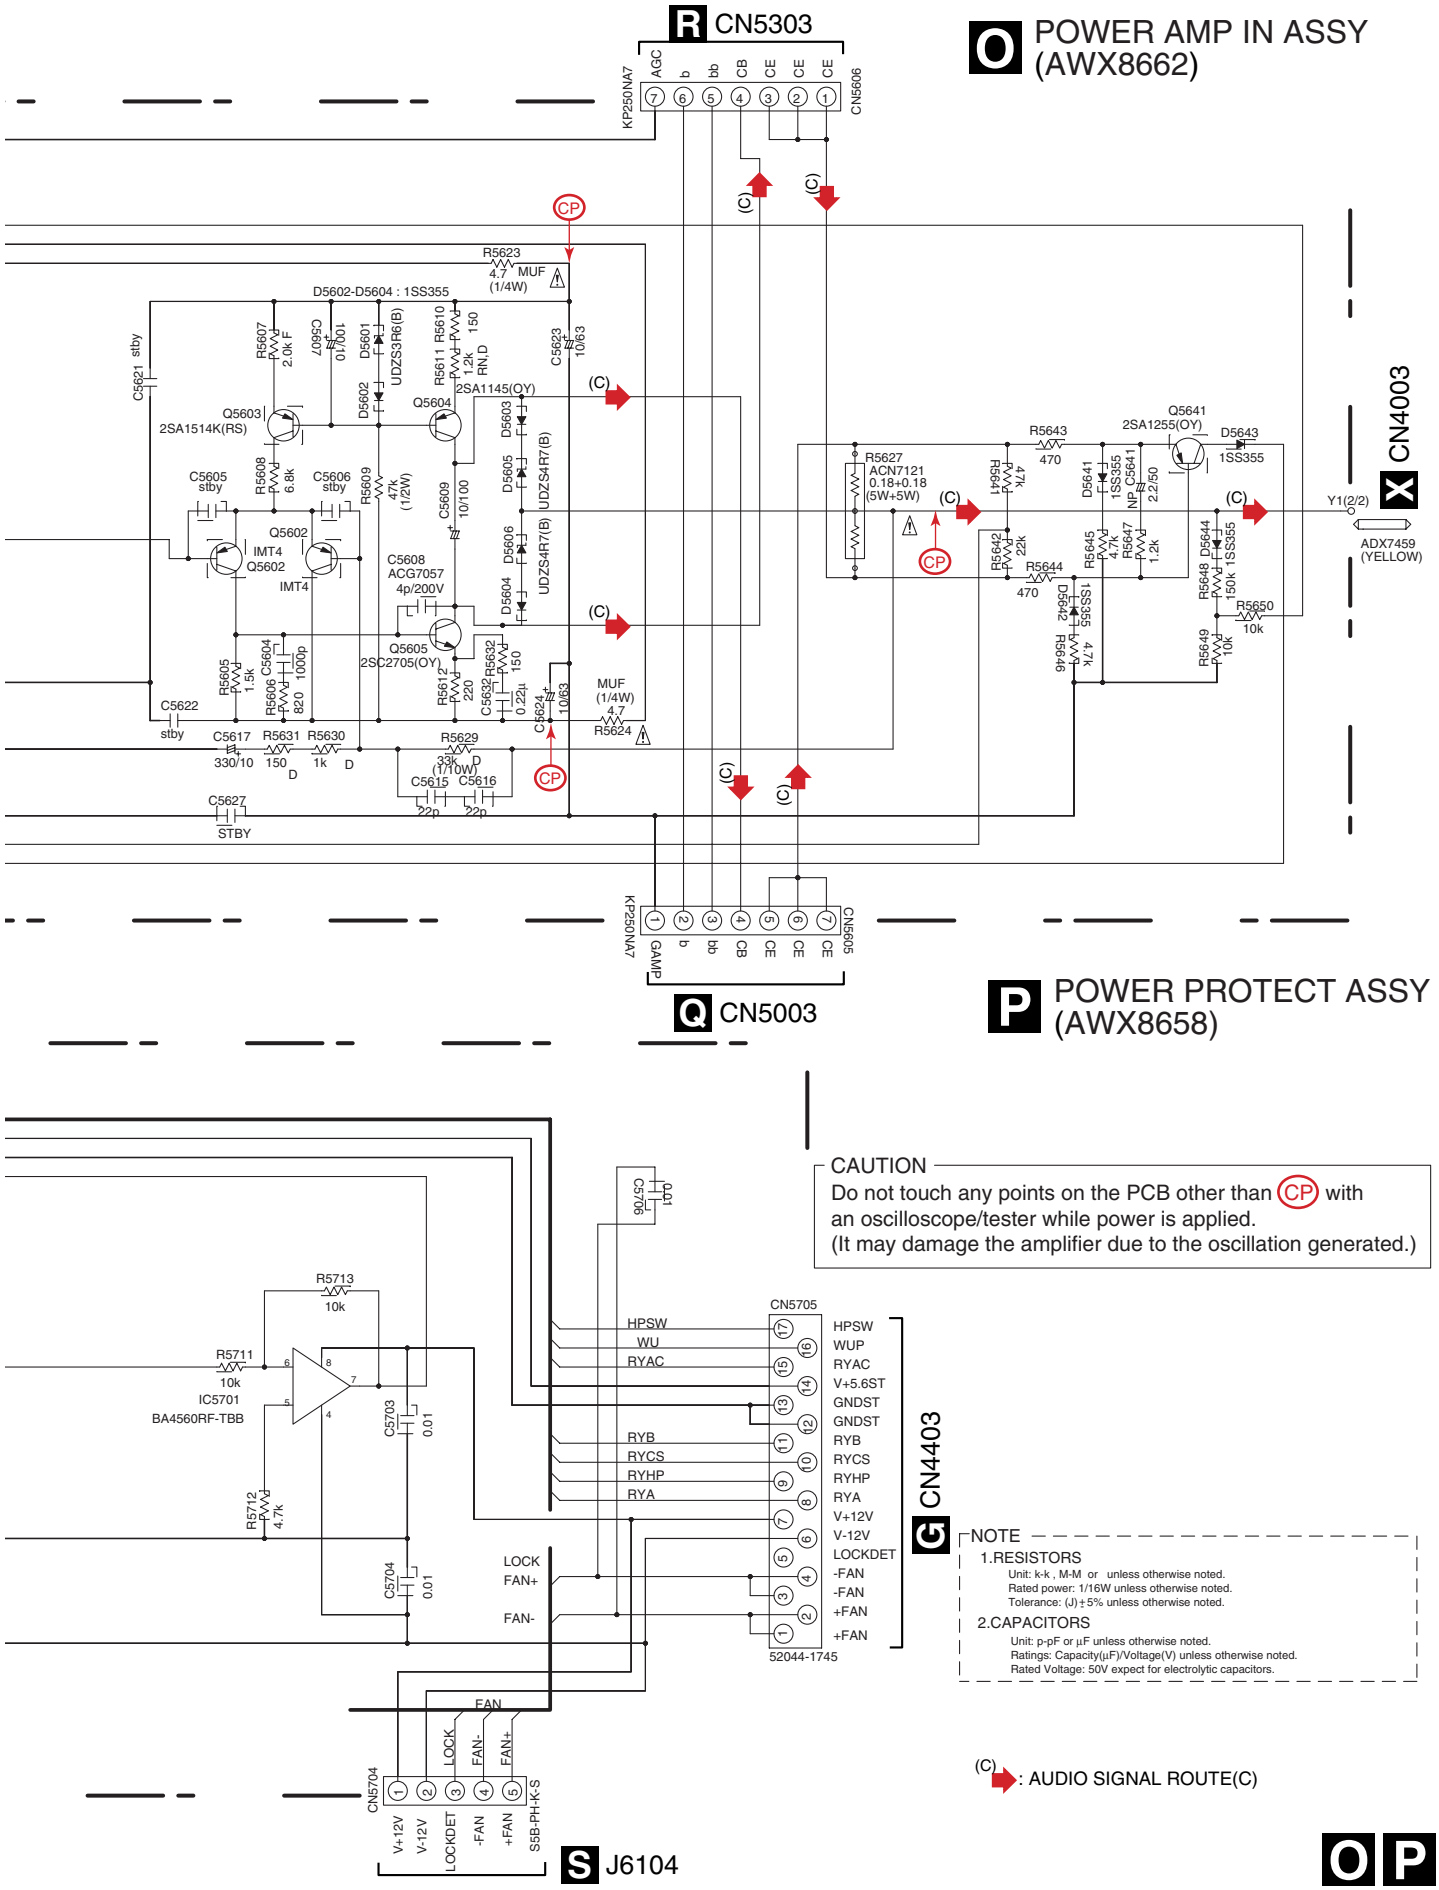
R CN5303
O POWER AMP IN ASSY (AWX8662)
KP250NA7
AGC
b
bb
CB
CE
CE
CE
CN5606
(C)
CP
R5623
4.7 MUF (1/4W)
D5602-D5604 : 1SS355
C5621 stby
R5607 2.0k F
C5607 0.1/100
D5601
UDZS3R6(B)
D5602
R5611 R5610 1.2k 150 RN D
C5623 10/63
Q5603 2SA1514K(RS)
Q5604 2SA1145(QY)
D5603
D5605
UDZS4R7(B)
C5605 stby
R5608 6.8k
C5606 stby
R5609 47k (1/2W)
C5609 10/100
Q5602 IMT4
D5606
D5604
C5608 ACG7057 4p/200V
Q5605 2SC2705(QY)
R5605 1.5k
C5604 1000p
R5606 820
R5612 220
R5632 150
C5632 0.22µ
C5624 10/63
MUF (1/4W) 4.7
R5624
C5622 stby
C5617 330/10
R5631 150 D
R5630 1k D
R5629 33k D (1/10W)
C5615 22p
C5616 22p
C5627 STBY
R5627 ACN7121 0.18+0.18 (5W+5W)
R5643 470
Q5641 2SA1255(OY)
D5643 1SS355
R5641 47k
D5641 1SS355
C5641 NP 2.2/50
R5642 22k
R5644 470
R5645 4.7k
R5647 1.2k
D5642 1SS355
R5646 4.7k
D5644 1SS355
R5648 150k
R5649 10k
R5650 10k
X CN4003
Y1(2/2)
ADX7459 (YELLOW)
KP250NA7
GAMP
b
bb
CB
CE
CE
CE
CN5605
Q CN5003
P POWER PROTECT ASSY (AWX8658)
CAUTION
Do not touch any points on the PCB other than CP with an oscilloscope/tester while power is applied.
(It may damage the amplifier due to the oscillation generated.)
C5706 100
R5713 10k
R5711 10k
IC5701 BA4560RF-TBB
R5712 4.7k
C5703 0.01
C5704 0.01
HPSW
WU
RYAC
RYB
RYCS
RYHP
RYA
LOCK
FAN+
FAN-
CN5705
HPSW
WUP
RYAC
V+5.6ST
GNDST
GNDST
RYB
RYCS
RYHP
RYA
V+12V
V-12V
LOCKDET
-FAN
-FAN
+FAN
+FAN
52044-1745
G CN4403
NOTE
1.RESISTORS
Unit: k-k , M-M or unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: (J)±5% unless otherwise noted.
2.CAPACITORS
Unit: p-pF or µF unless otherwise noted.
Ratings: Capacity(µF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.
(C): AUDIO SIGNAL ROUTE(C)
FAN
LOCK
FAN-
FAN+
CN5704
V+12V
V-12V
LOCKDET
-FAN
+FAN
S5B-PH-K-S
S J6104
O P


3.25 POWER AMP L ASSY

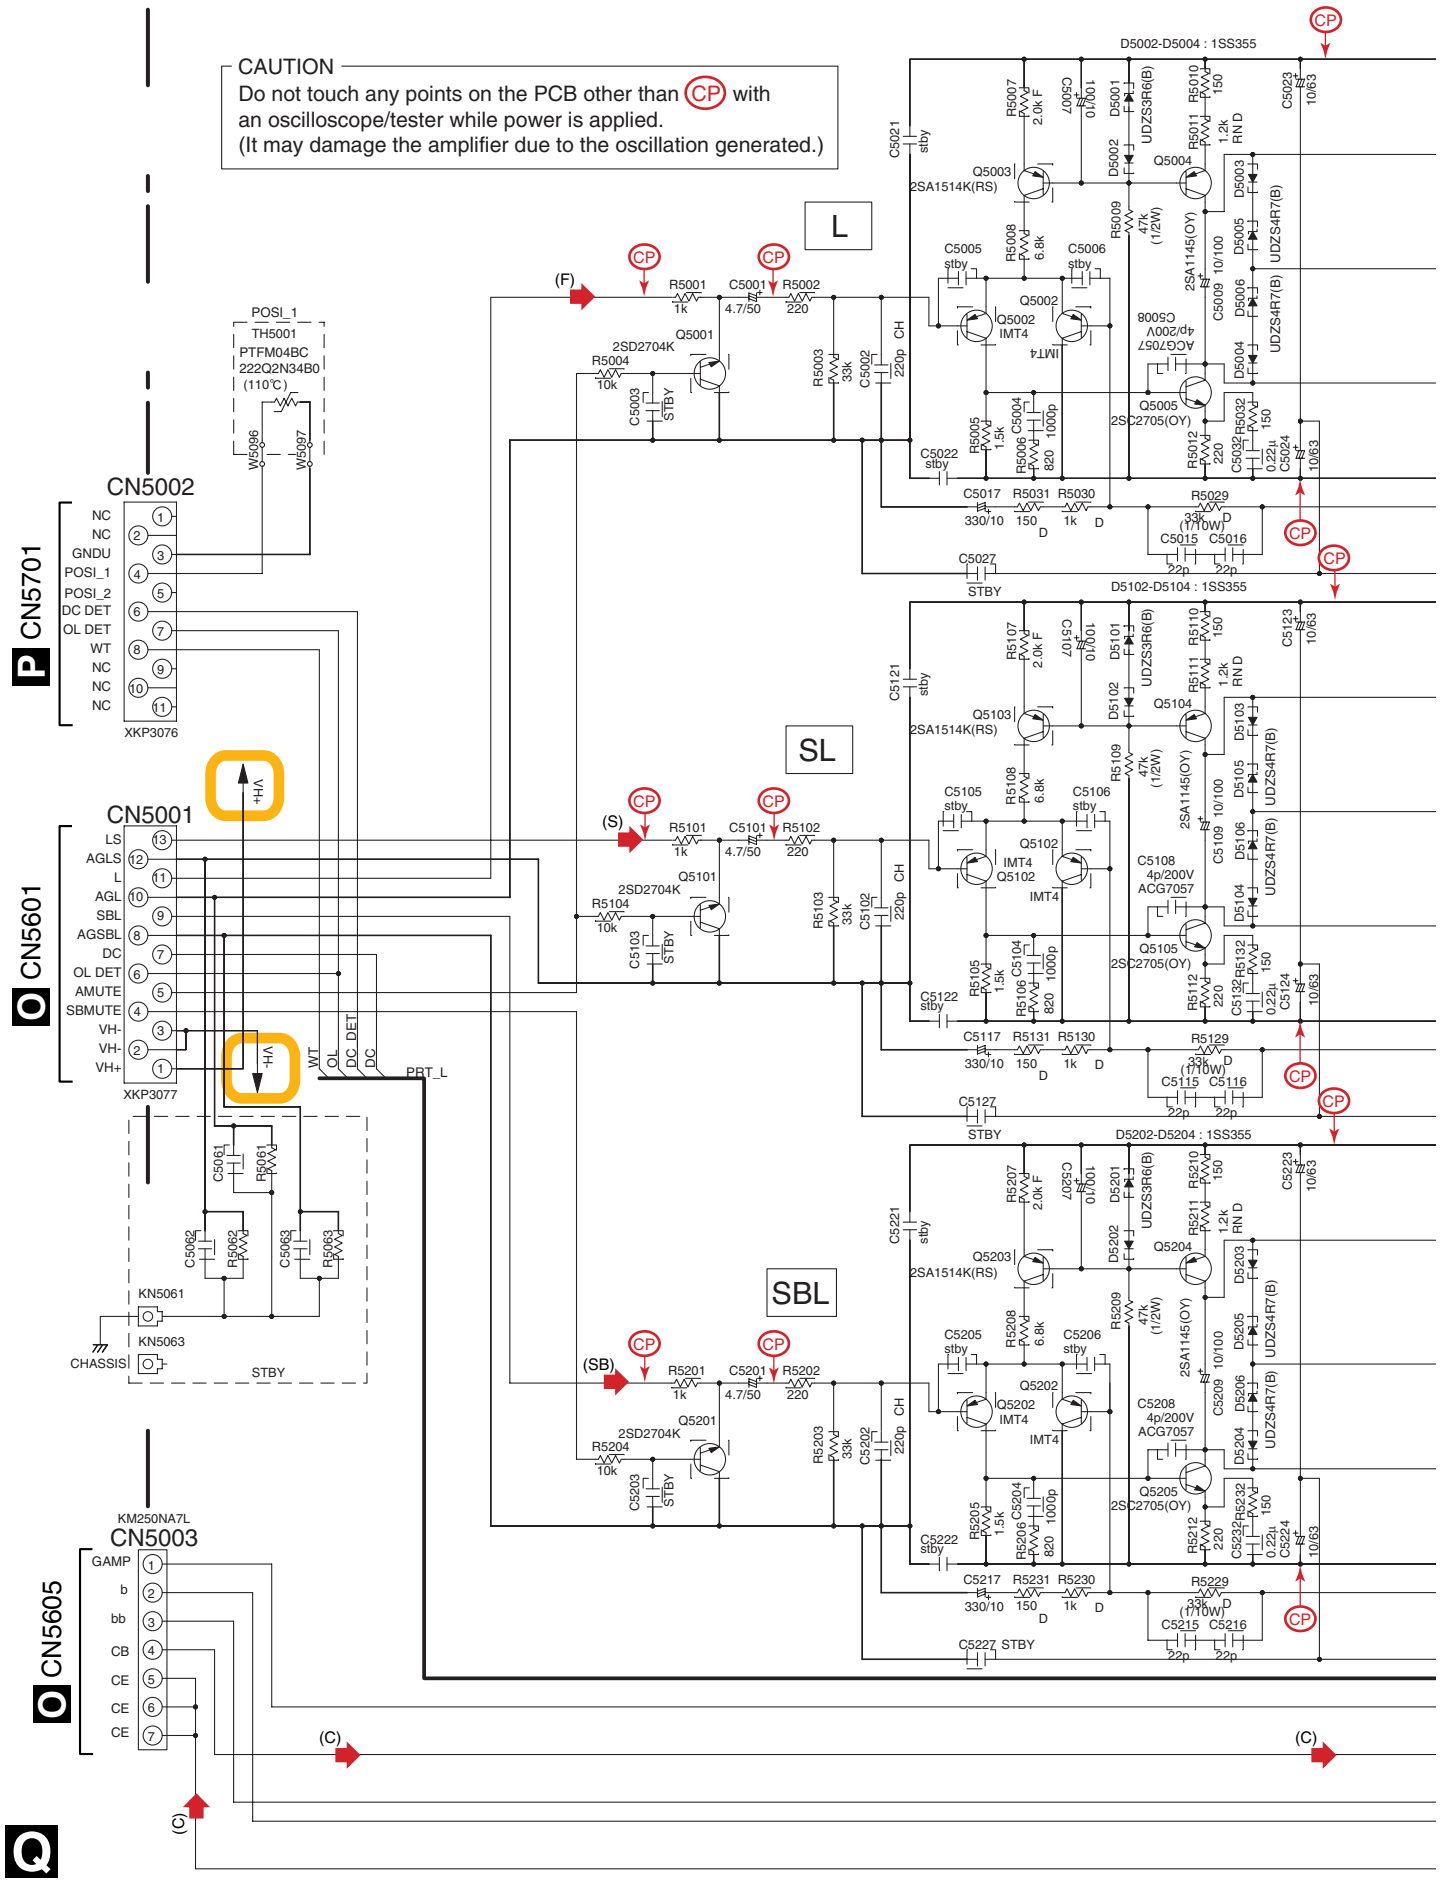


Q POWER AMP L ASSY (AWX8654)

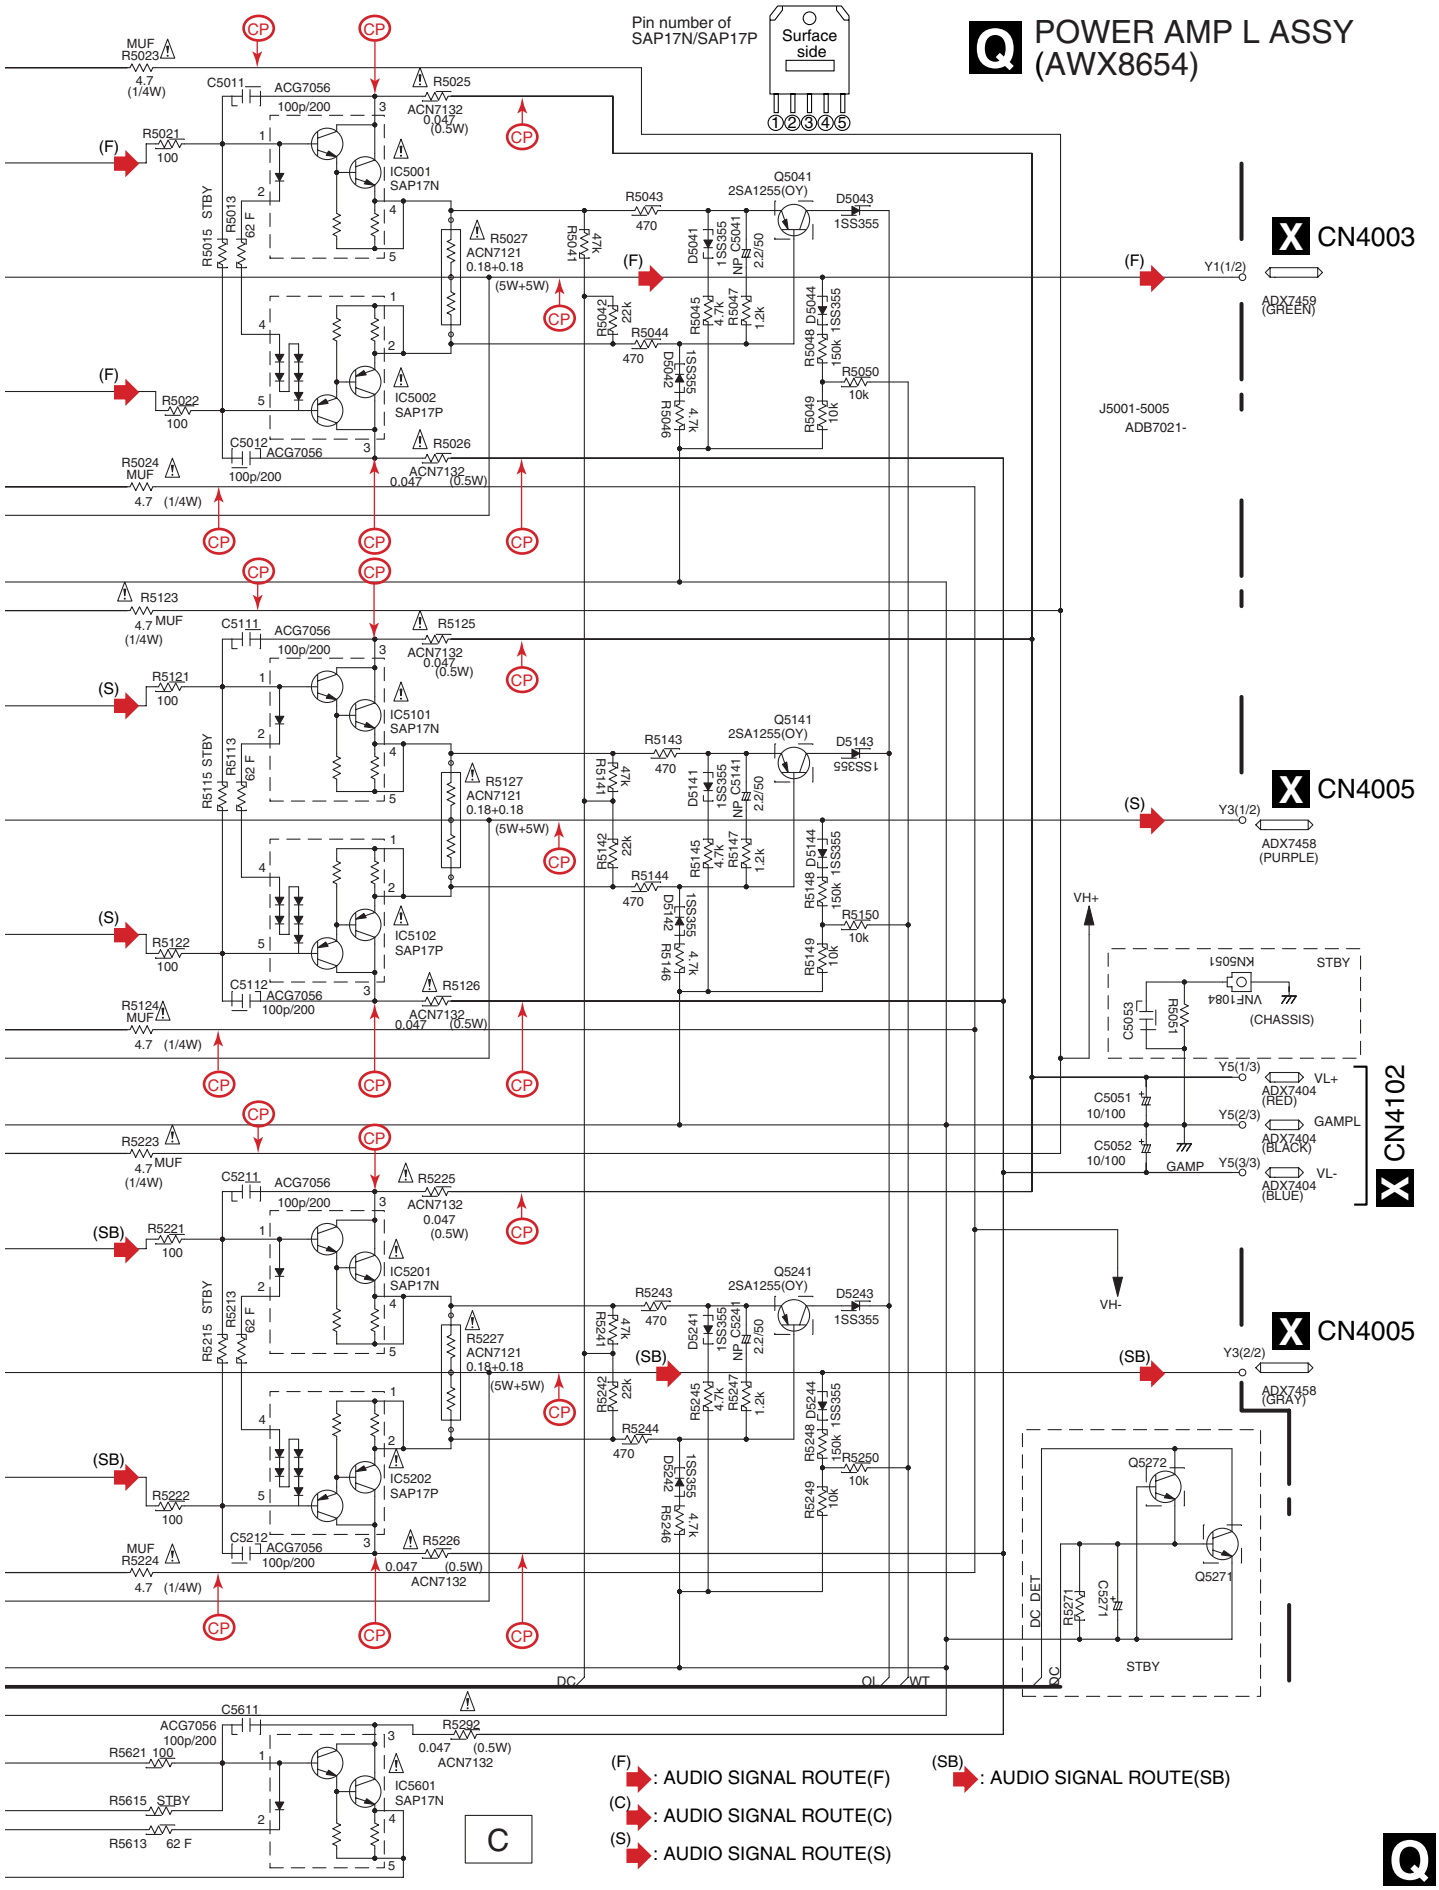


3.26 POWER AMP R ASSY

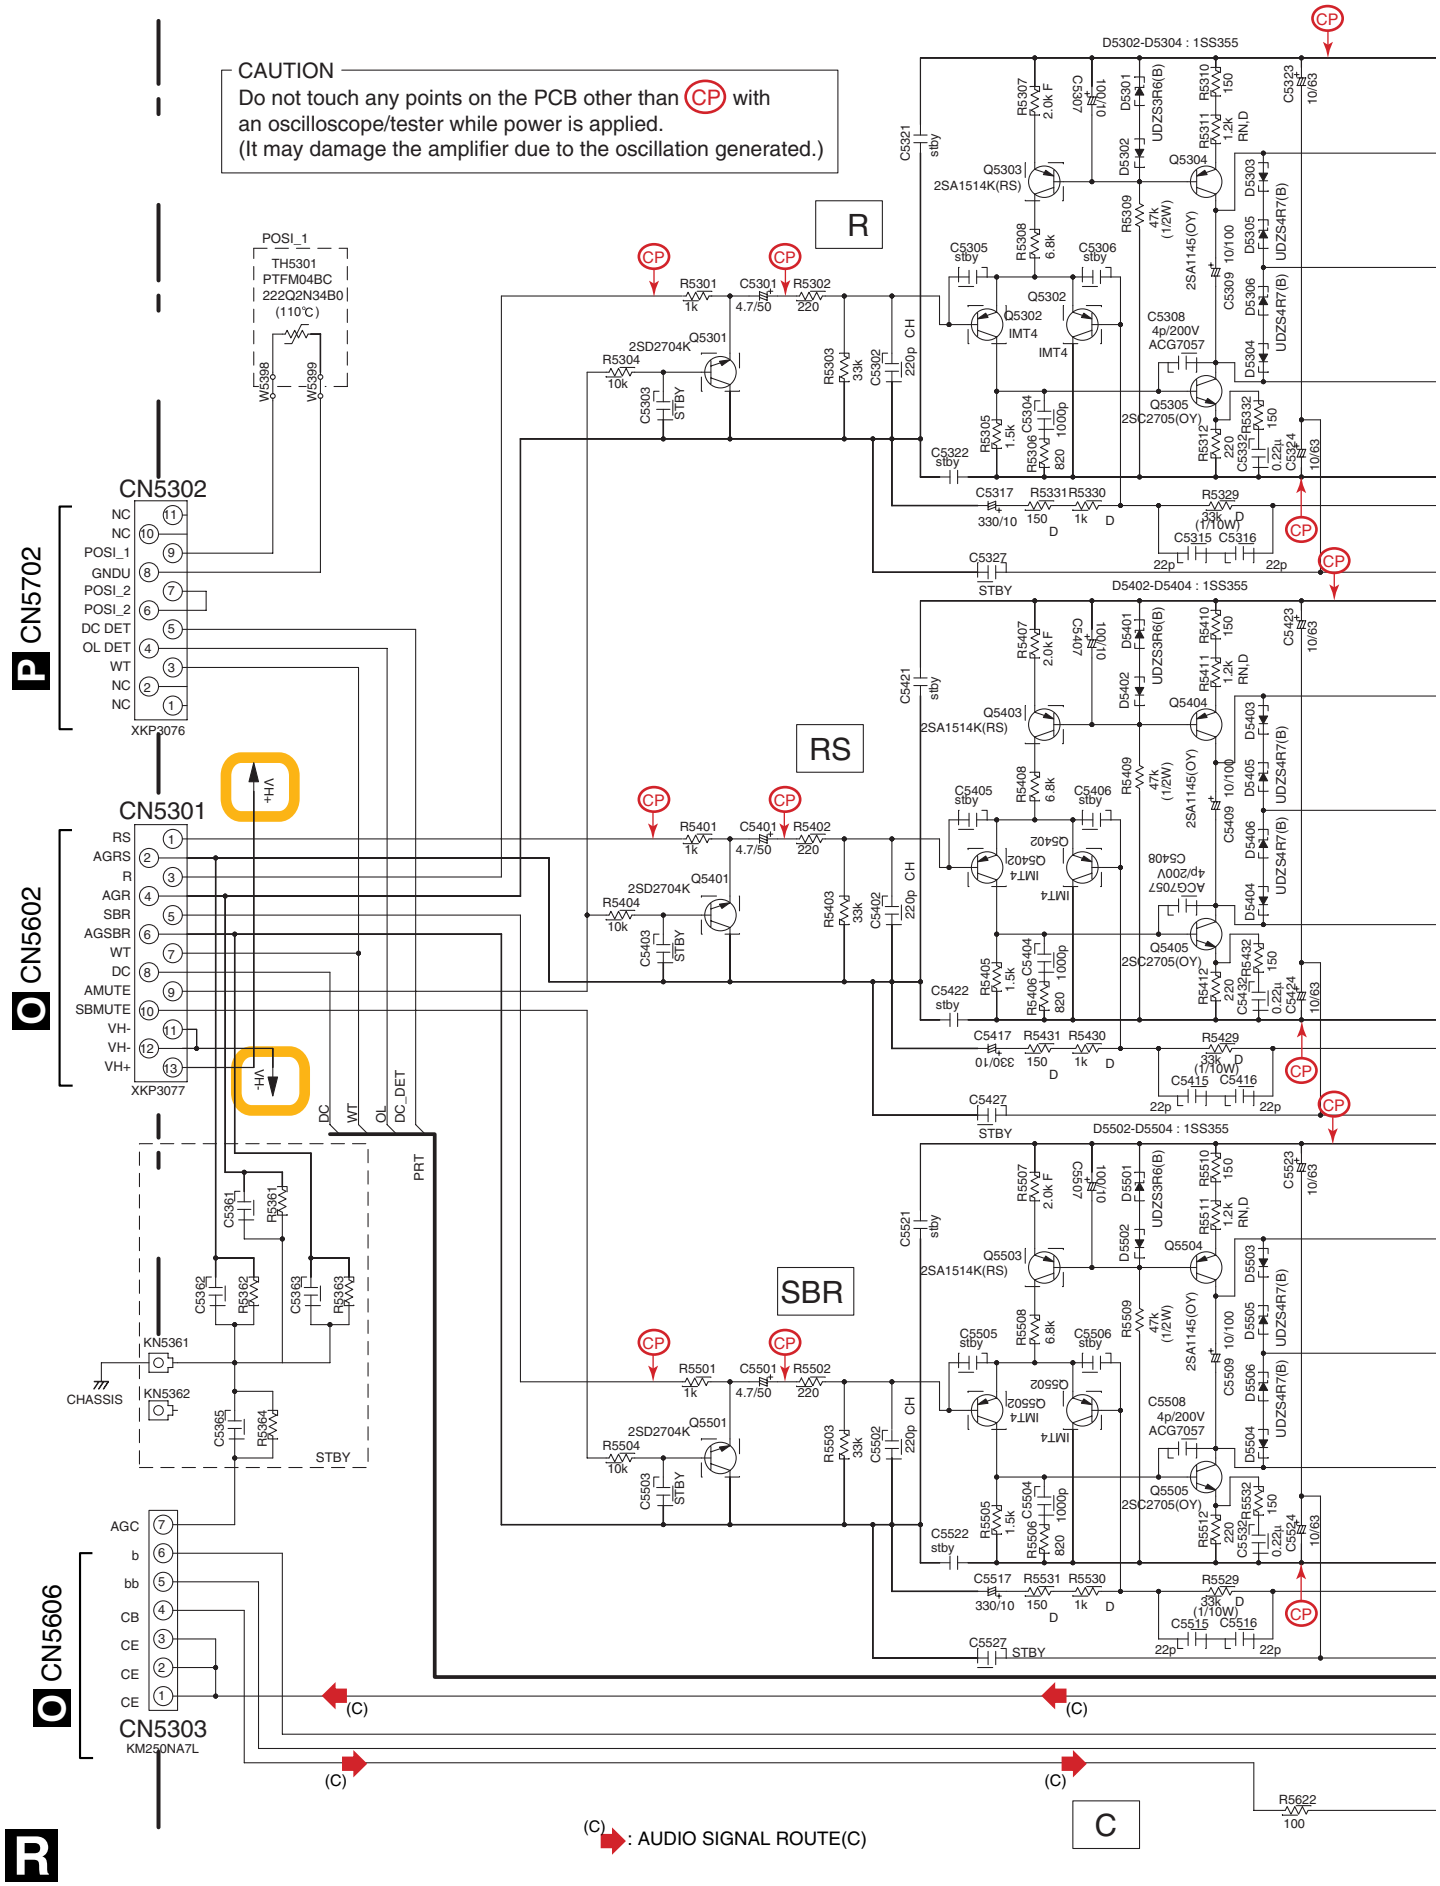

R POWER AMP R ASSY (AWX8656)

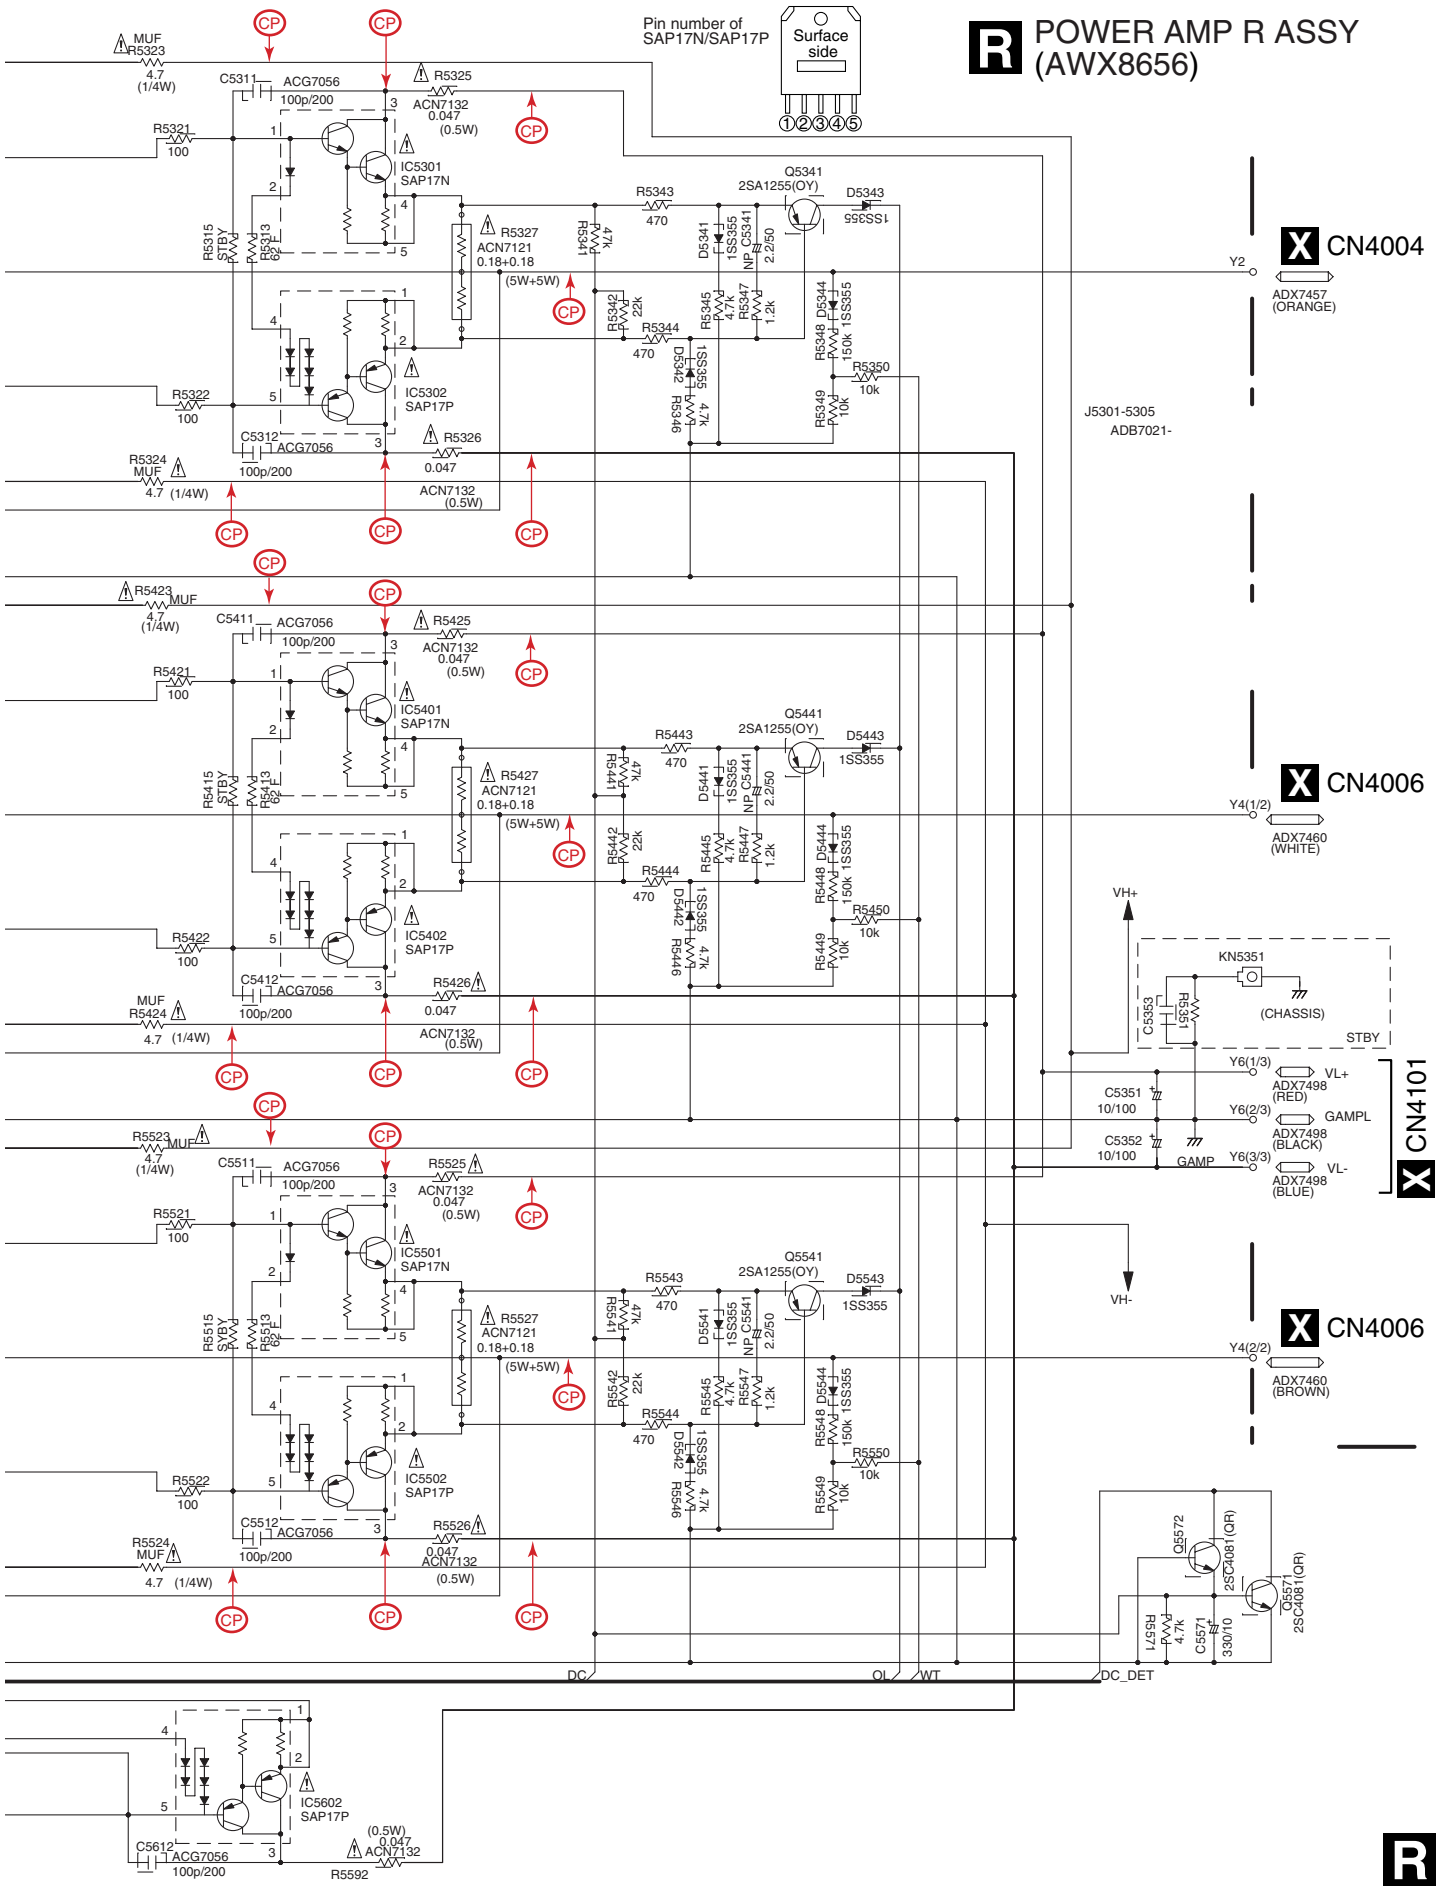

3.27 LOCAL SUPPLY and DC/DC ASSYS

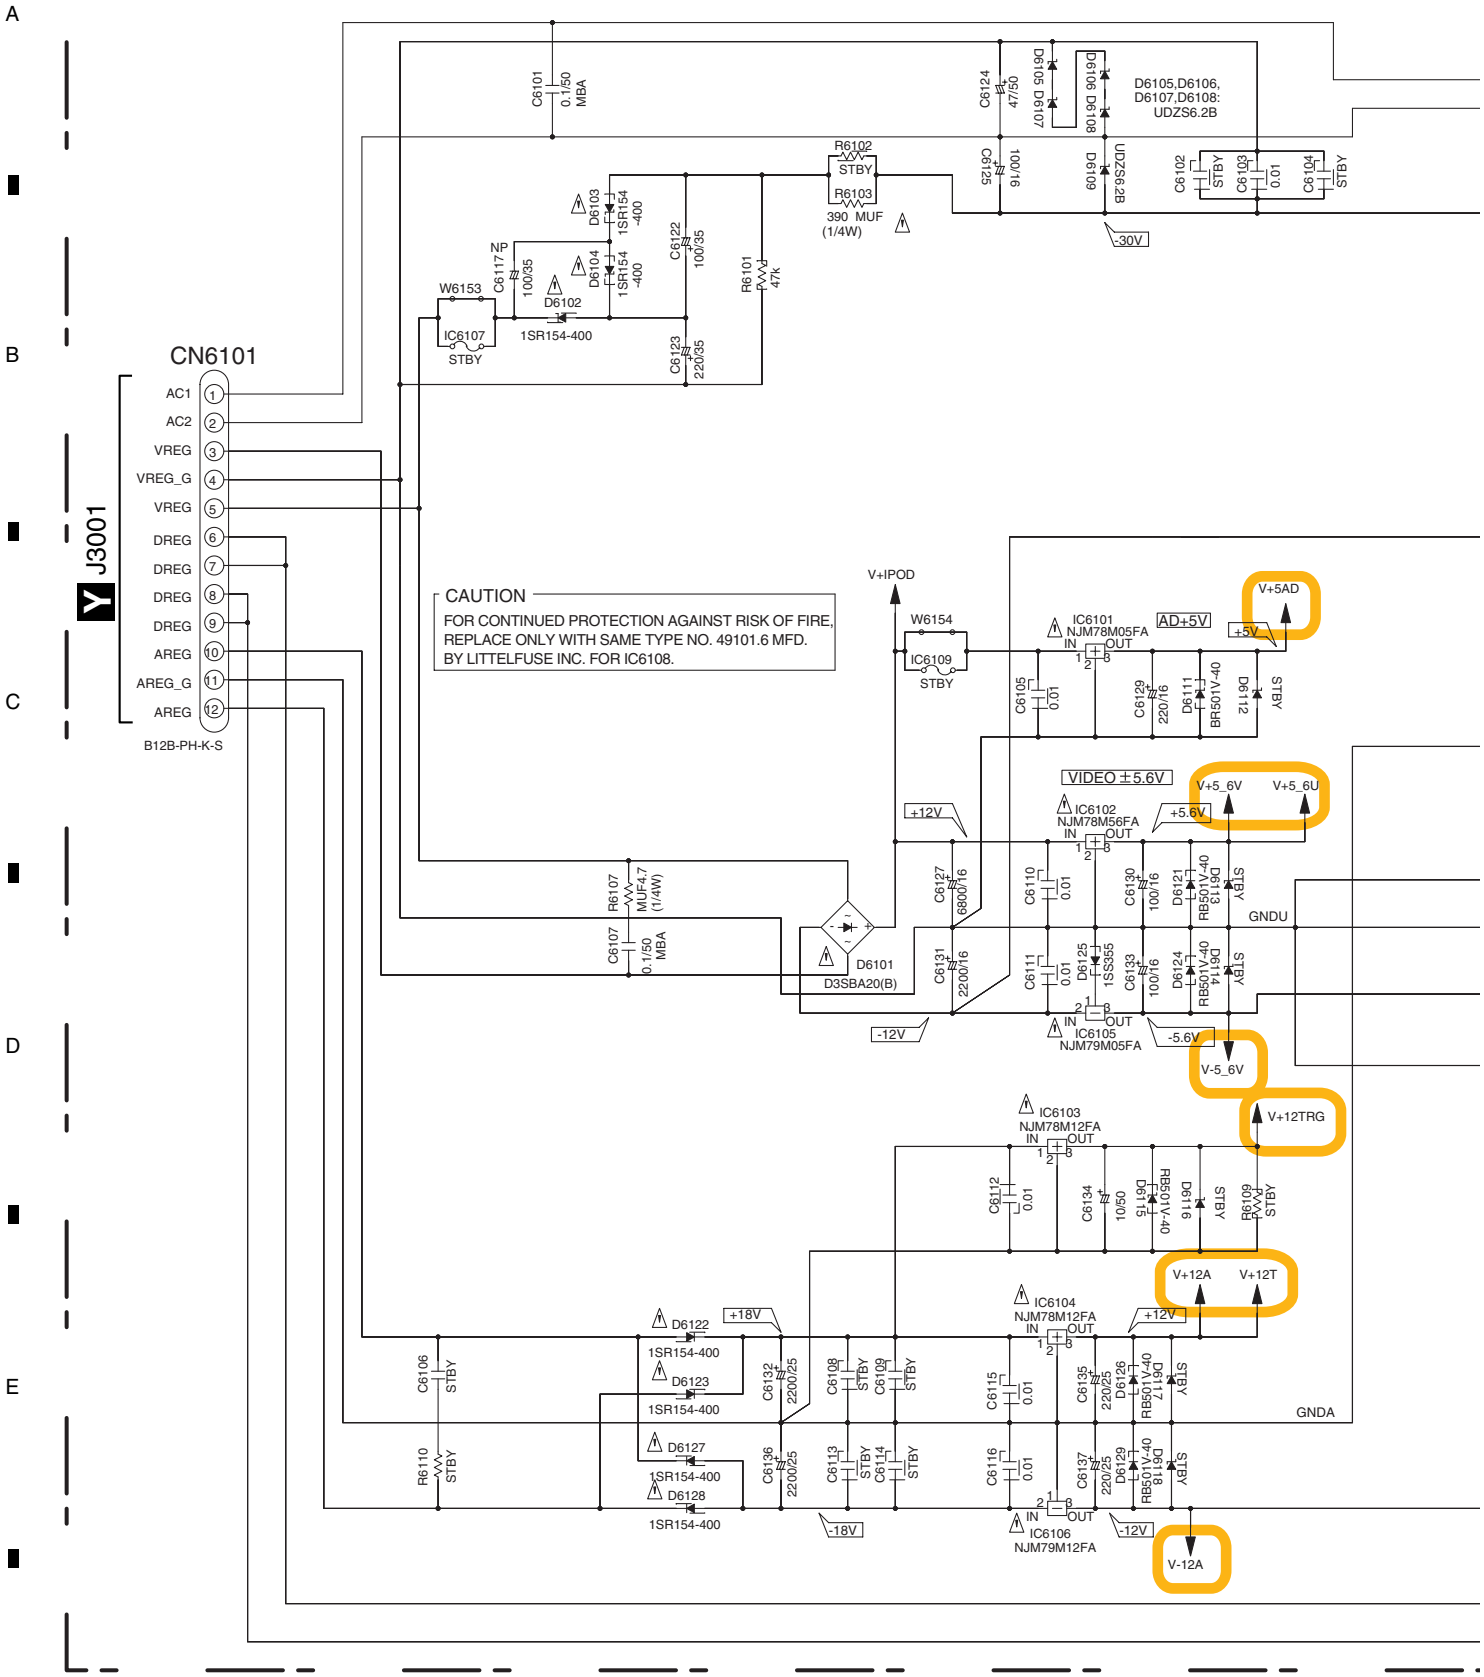


The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore,when replacing,be sure to use parts of identical designation.


S

S LOCAL SUPPLY ASSY (AWX8671)


NOTE
1.RESISTORS
Unit: k-k , M-M or unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: (J) ±5% unless otherwise noted.
2.CAPACITORS
Unit: p-pF or µF unless otherwise noted.
Ratings: Capacity(µF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.

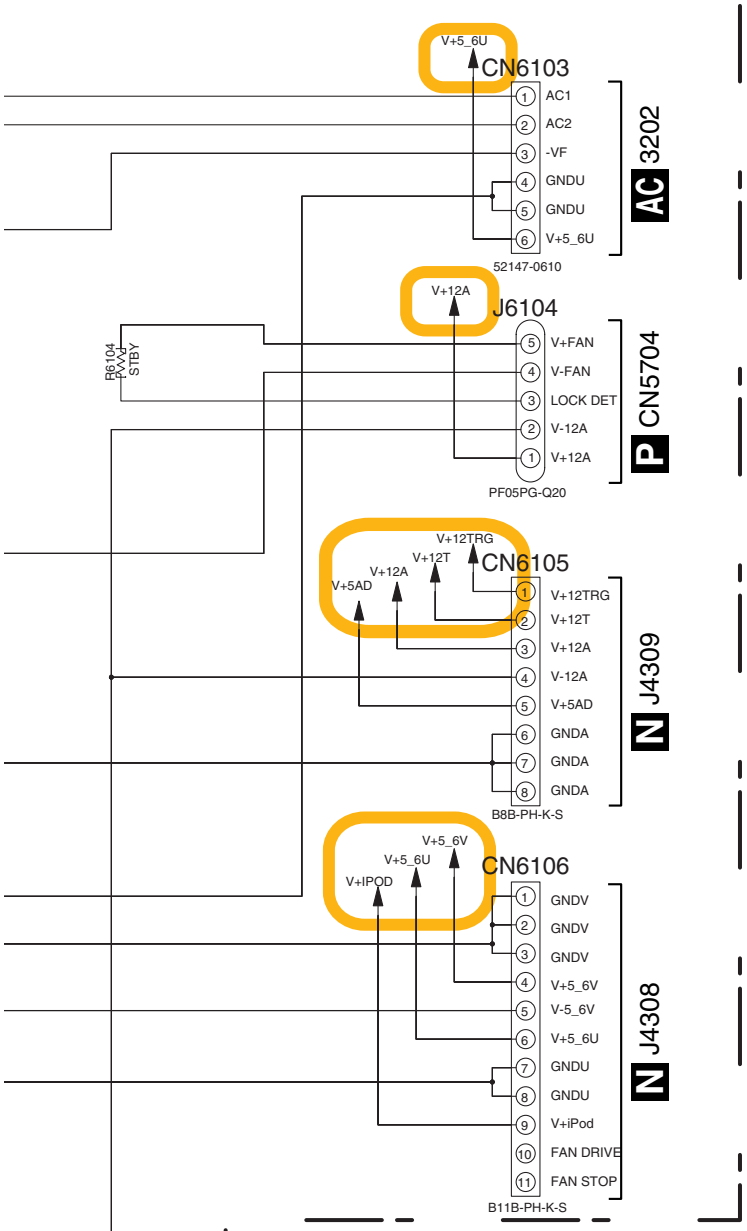


T DC/DC ASSY (AWX8650)

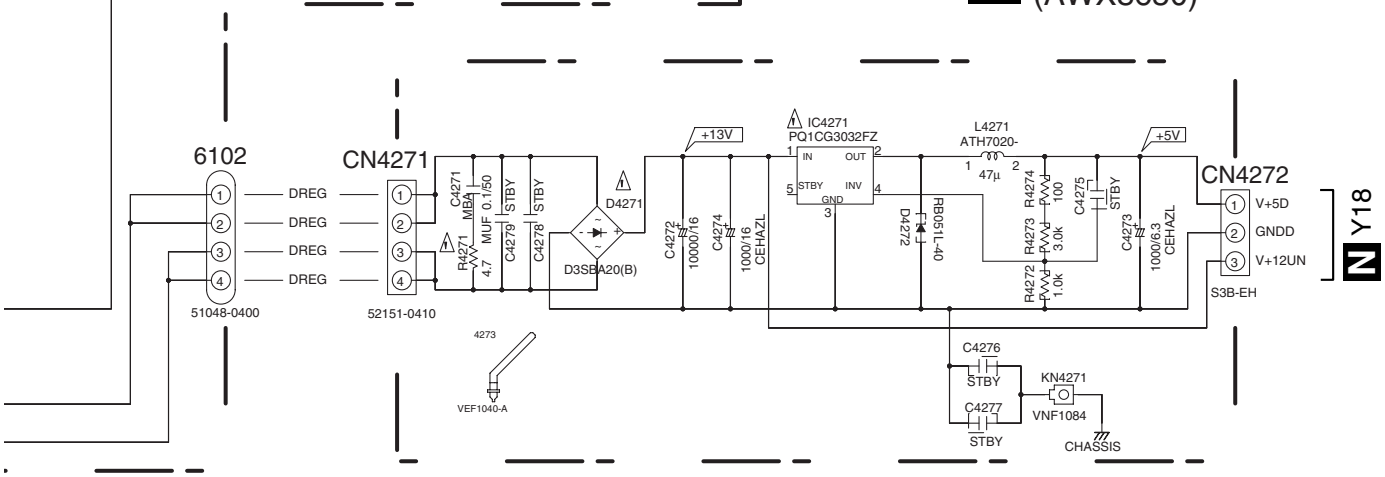

3.28 TRANS2-1, VH-TR, DIODE and SP/PS ASSYS

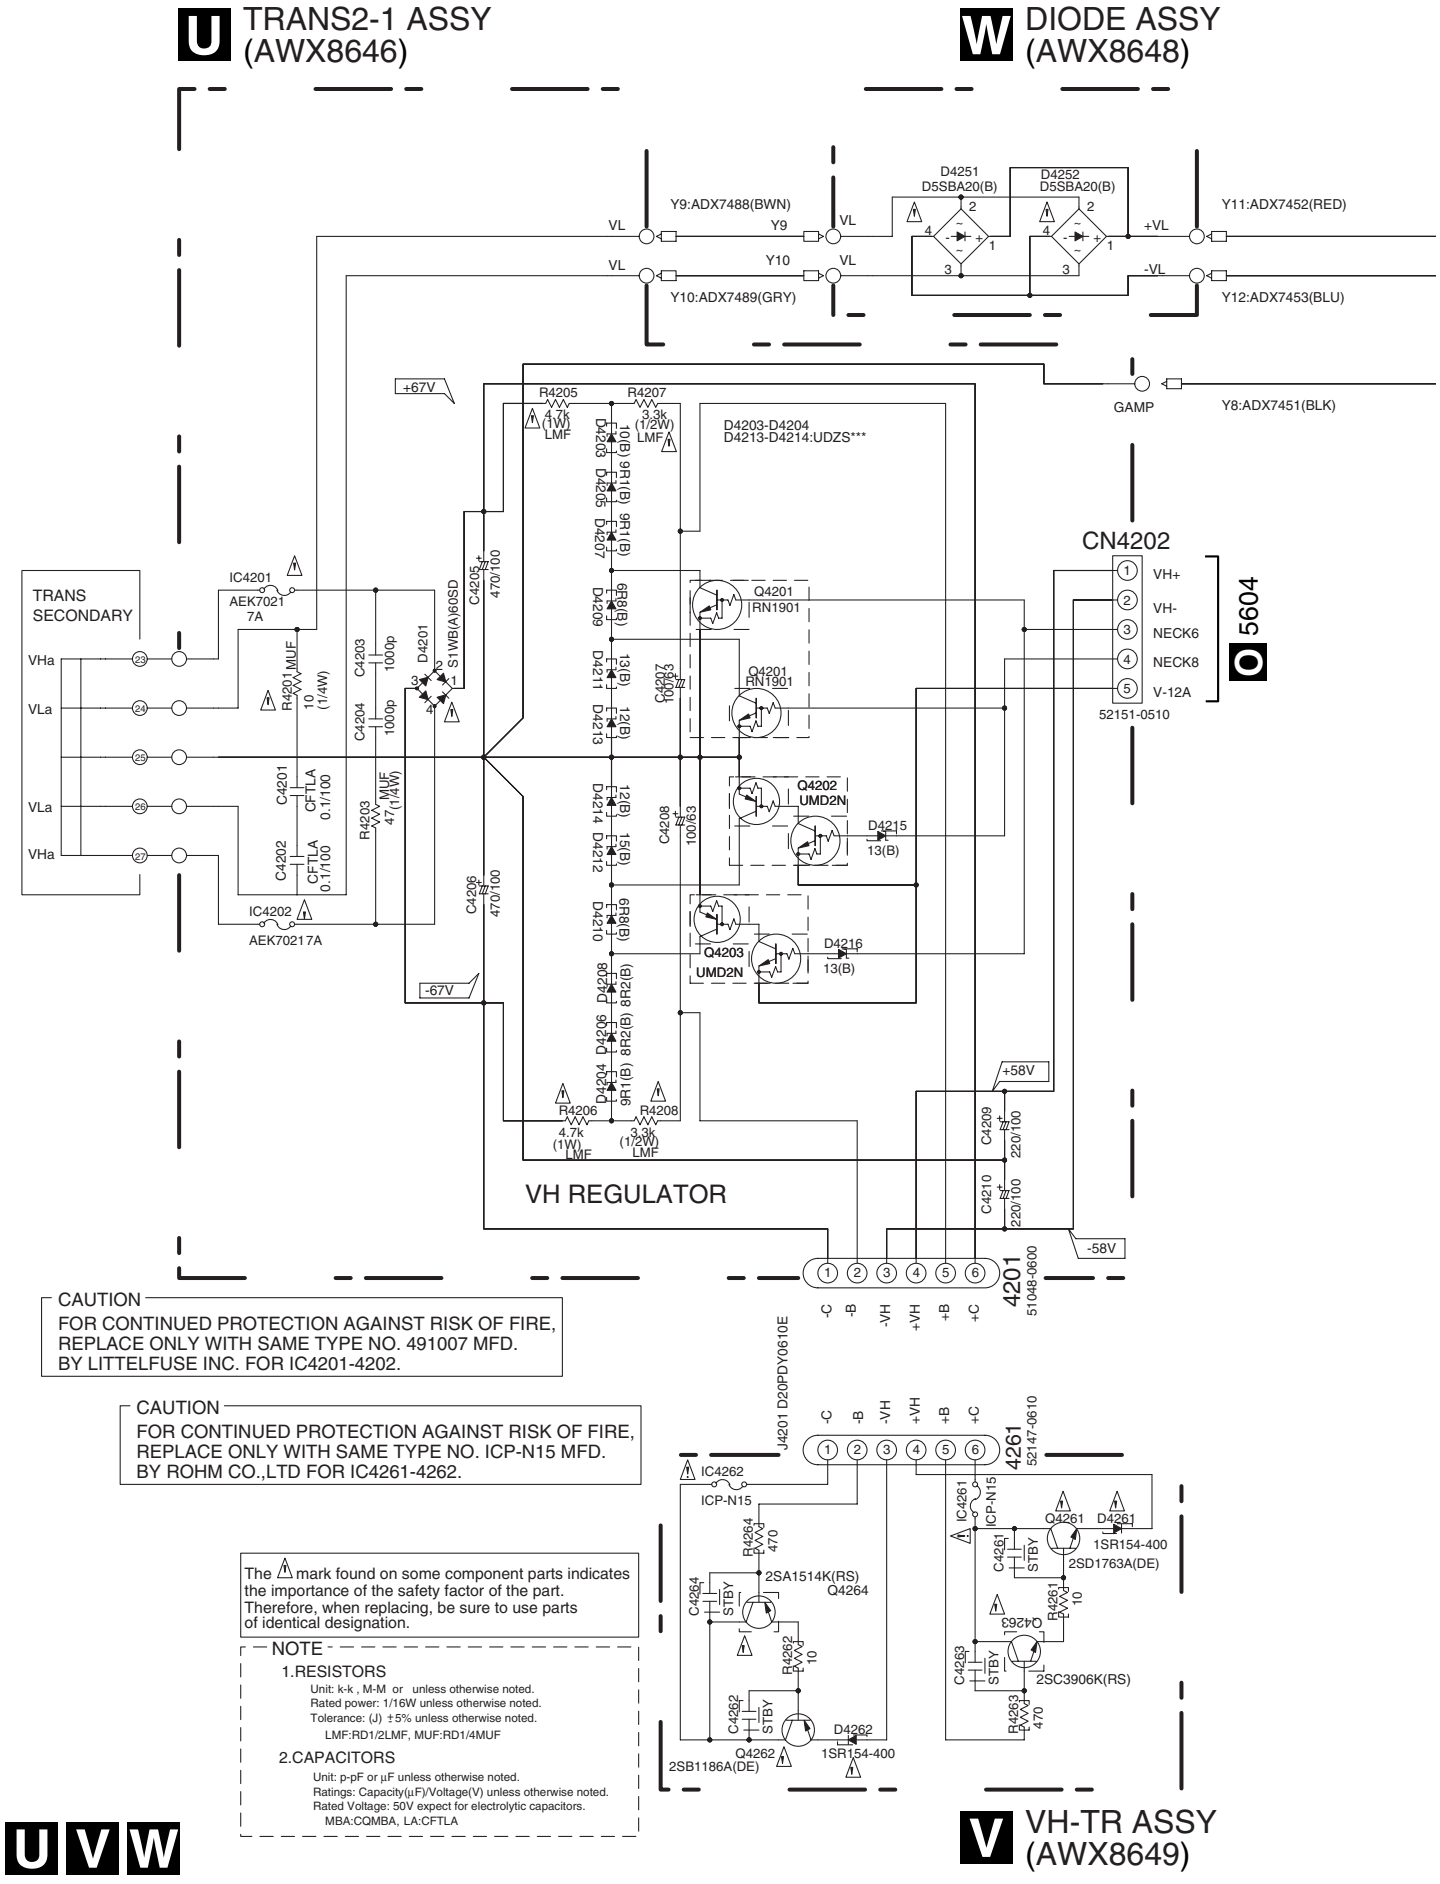

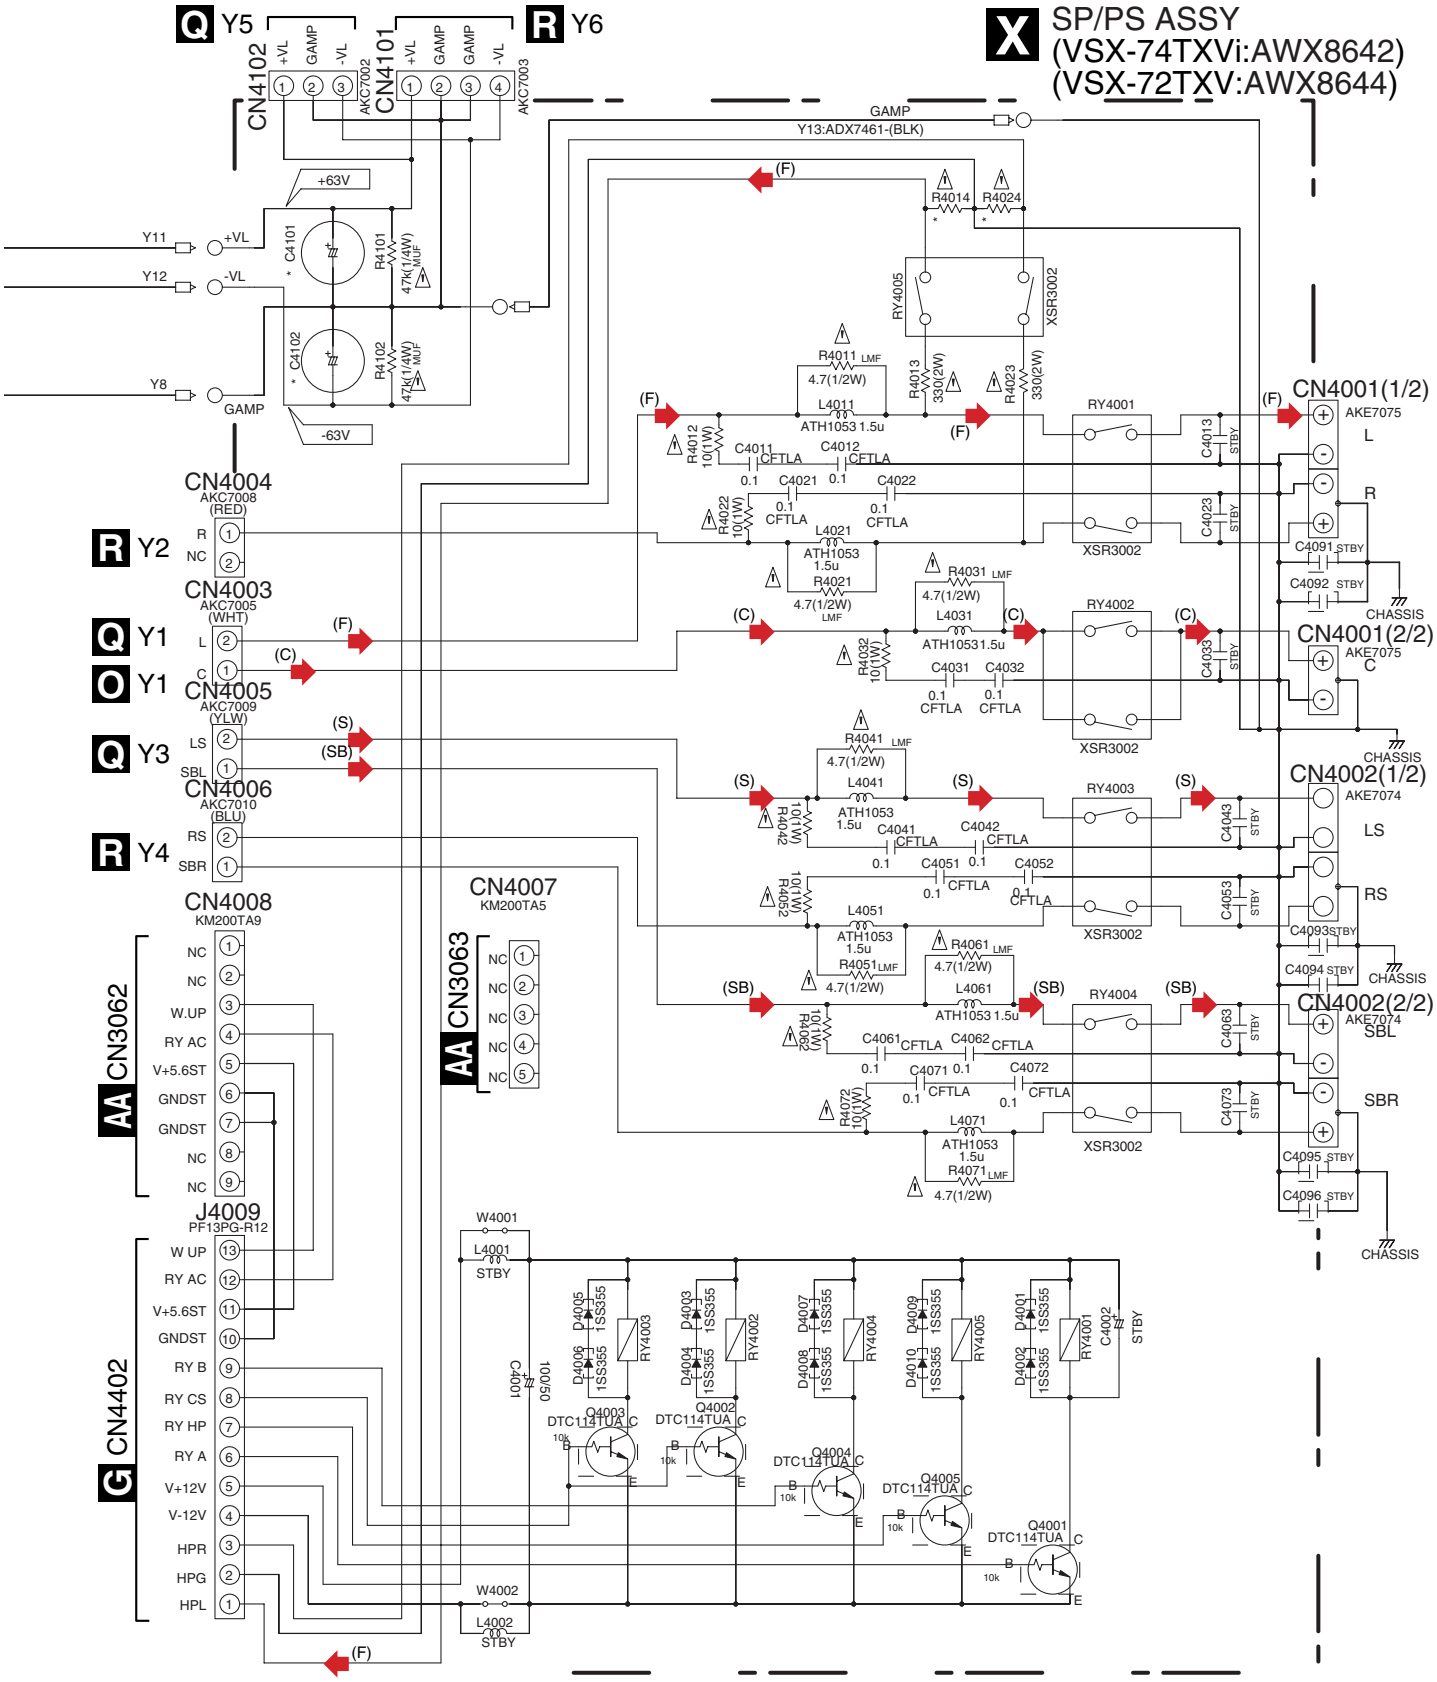


PSSP ASSY

* Mark parts

	VSX-74TXVi	VSX-72TXV
R4014,R4024	STBY	←
C4101,C4102	ACH7218 (15000/71)	ACH7255 (10000/71)


(F): AUDIO SIGNAL ROUTE (F)
(C): AUDIO SIGNAL ROUTE (C)
(S): AUDIO SIGNAL ROUTE (S)
(SB): AUDIO SIGNAL ROUTE (SB)

3.29 TRANS2-2, TRANS1 and PRIMARY ASSYS

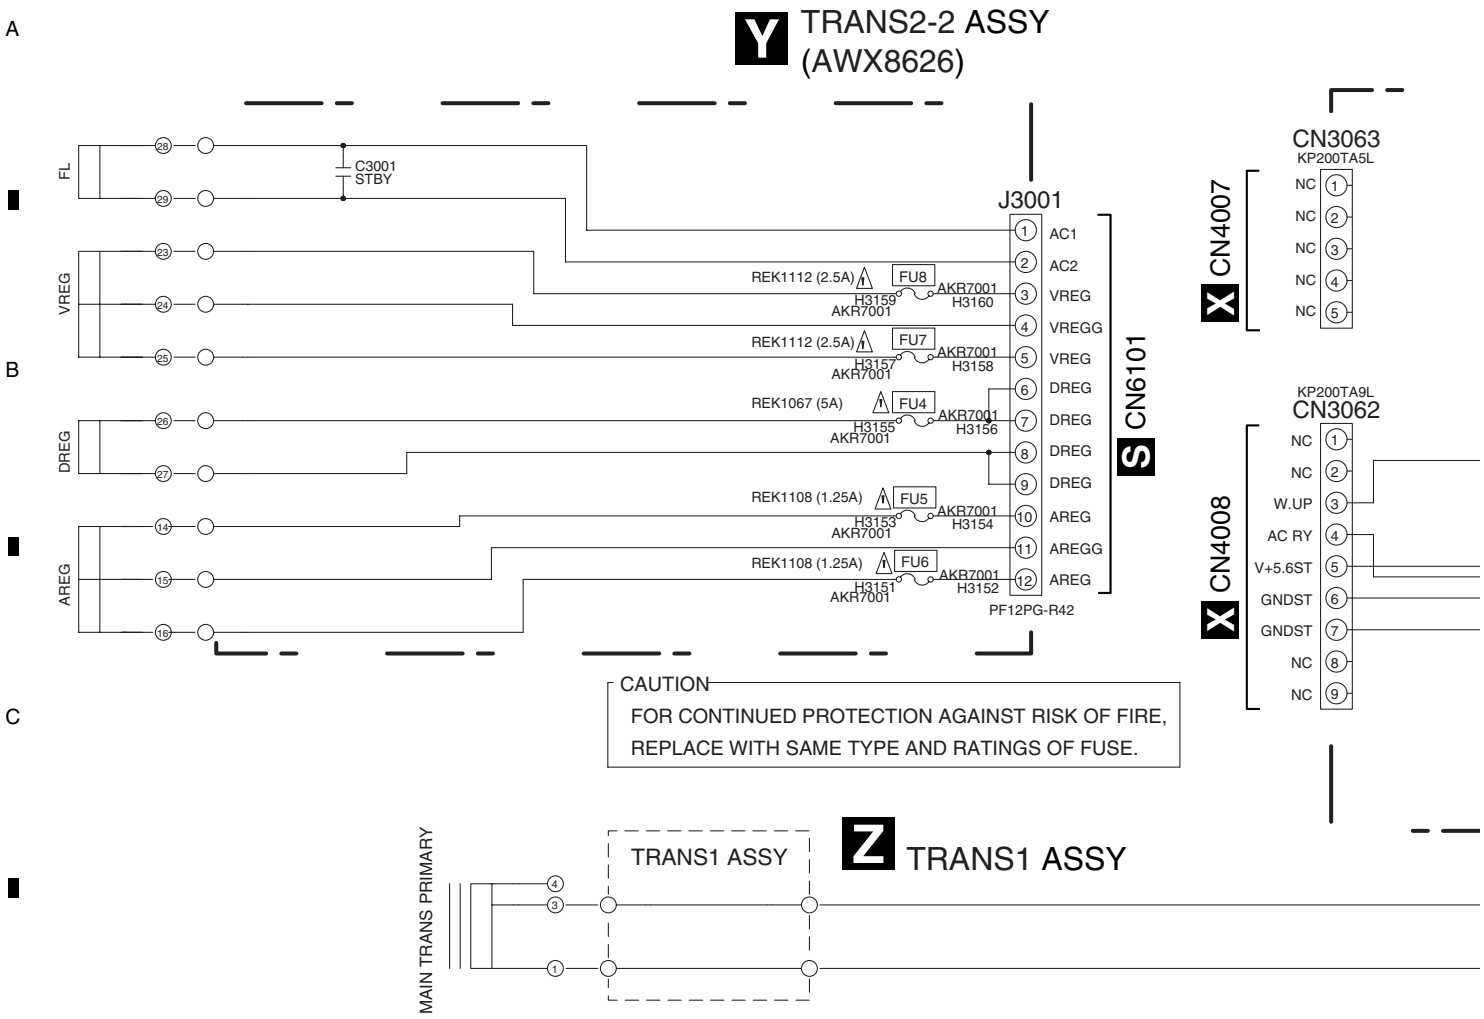

Y Z AA

AA PRIMARY ASSY (AWX8628)

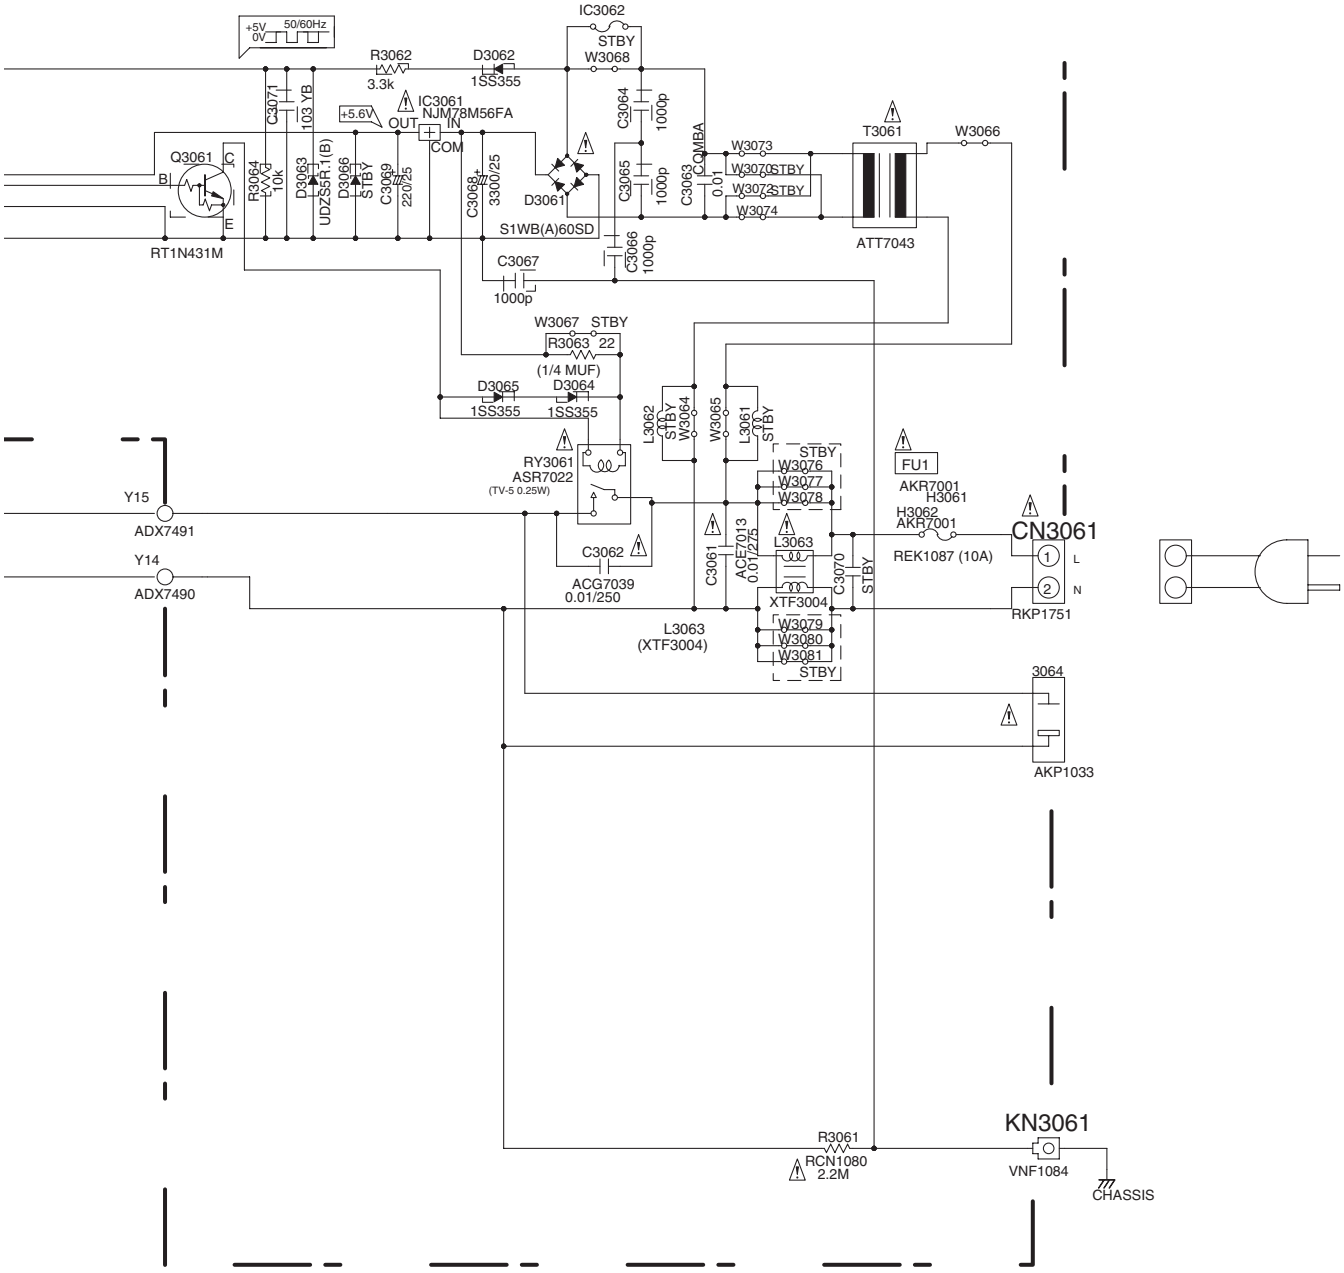


The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore,when replacing,be sure to use parts of identical designation.

AA

3.30 VOLUME, DISPLAY and INPUT SELECT ASSYS

AB VOLUME ASSY(AWX8641)


VOLUME ASSY
S3572 : STANDARD SURROUND
S3573 : ADVANCED SURROUND
S3574 : HOME THX

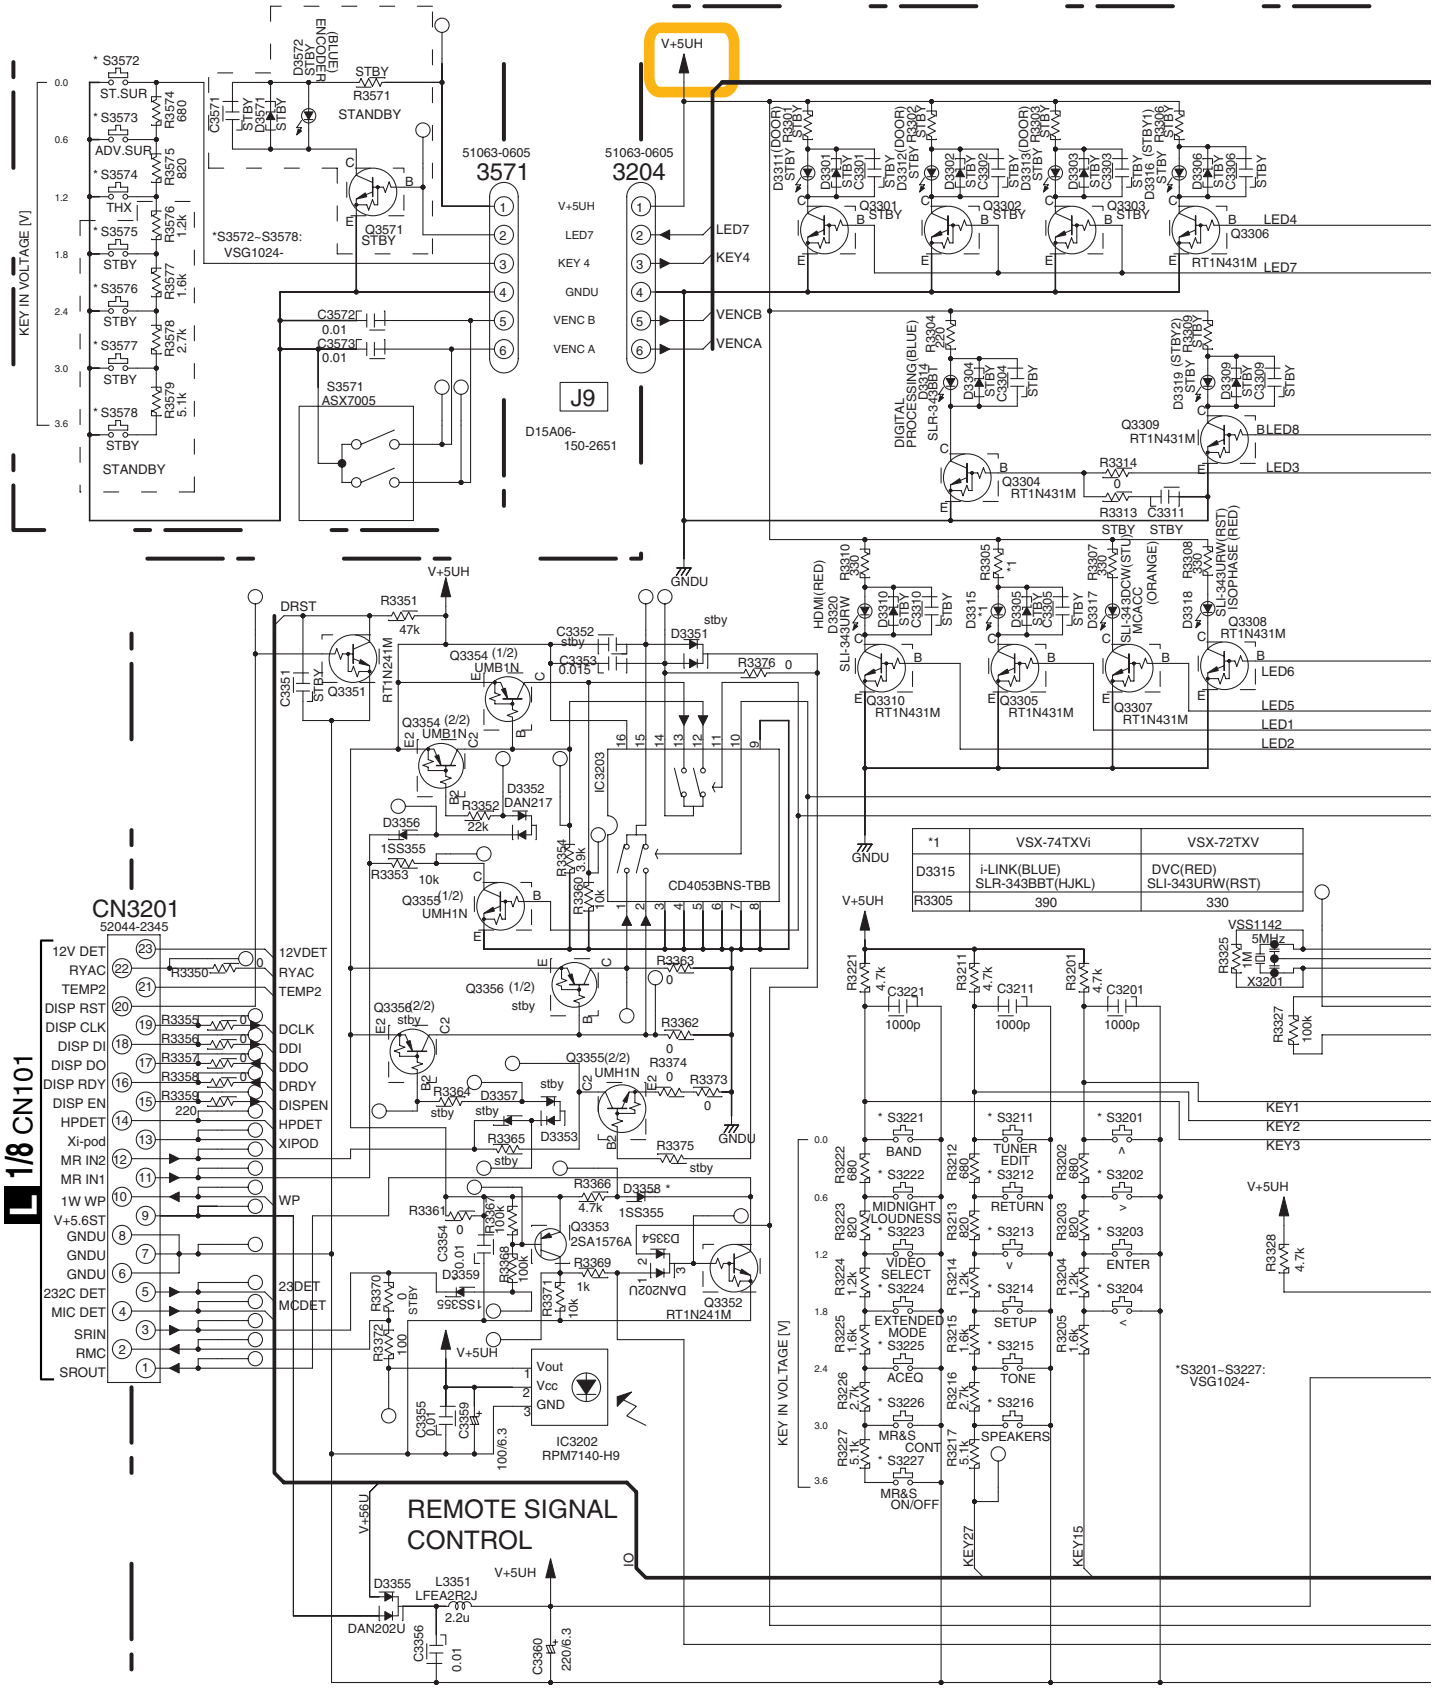


*1	VSX-74TXVi	VSX-72TXV
D3315	i-LINK(BLUE) SLR-343BBT(HJKL)	DVC(RED) SLI-343URW(RST)
R3305	390	330

AC DISPLAY ASSY (VSX-74TXVi:AWX8635) (VSX-72TXV:AWX8636)


DISPLAY ASSY
- S3201 : ↑(TUNE/ST +/-)
- S3202 : →(TUNE/ST +/-)
- S3203 : ENTER
- S3204 : ←(TUNE/ST +/-)
- S3211 : TUNER EDIT
- S3212 : RETURN
- S3213 : ↓(TUNE/ST +/-)
- S3214 : SETUP
- S3215 : AV PARAMETER
- S3216 : SPEAKERS
- S3221 : BAND
- S3222 : MULTI ROOM & SOURCE/REC SEL CONTROL
- S3223 : MULTI ROOM & SOURCE/REC SEL ON/OFF
- S3224 : VIDEO SELECT
- S3225 : SIGNAL SELECT
- S3226 : SBch PROCESSING
- S3227 : STEREO

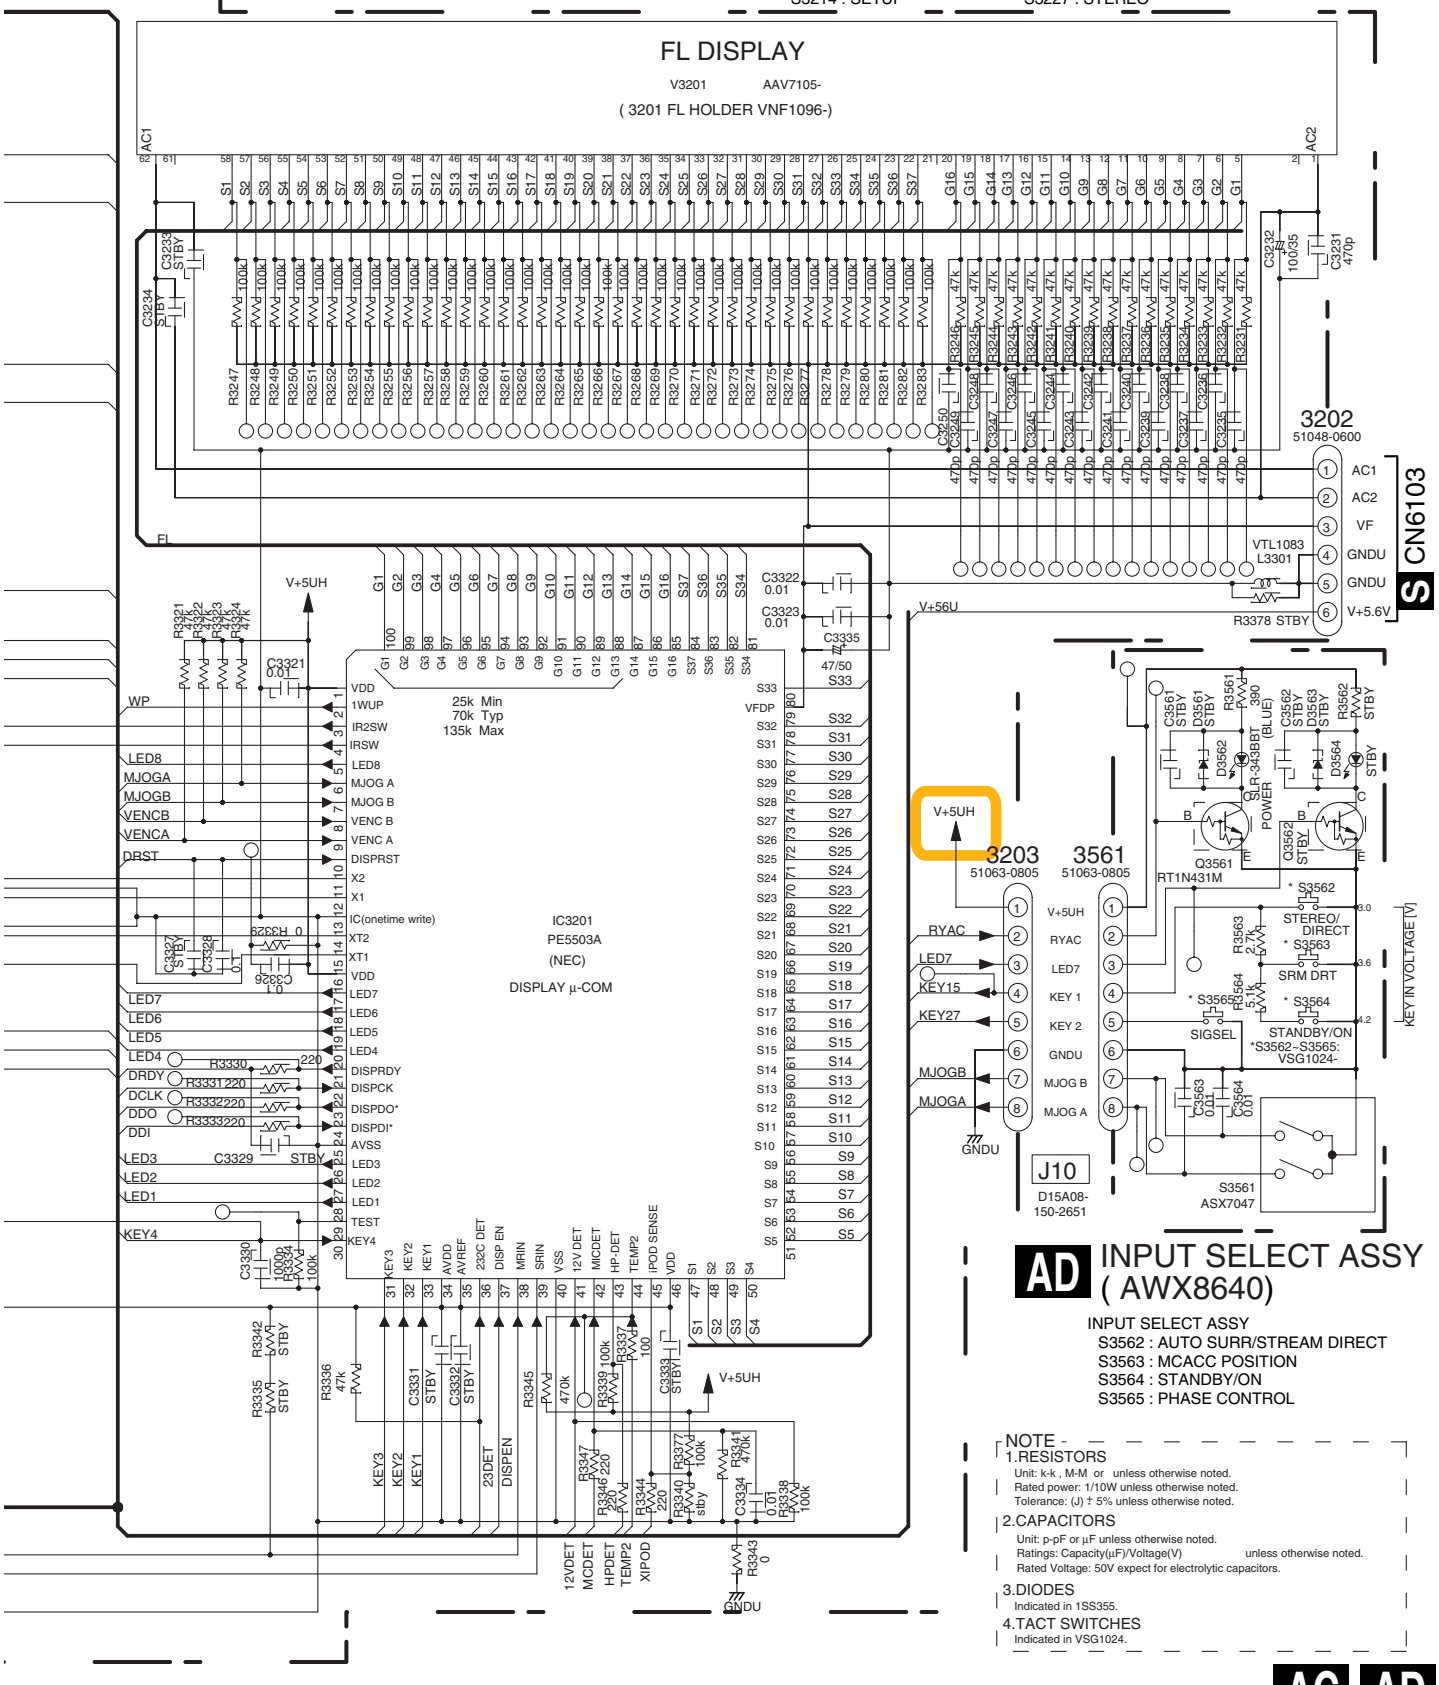

3.31 PREOUT & CONTROL ASSY

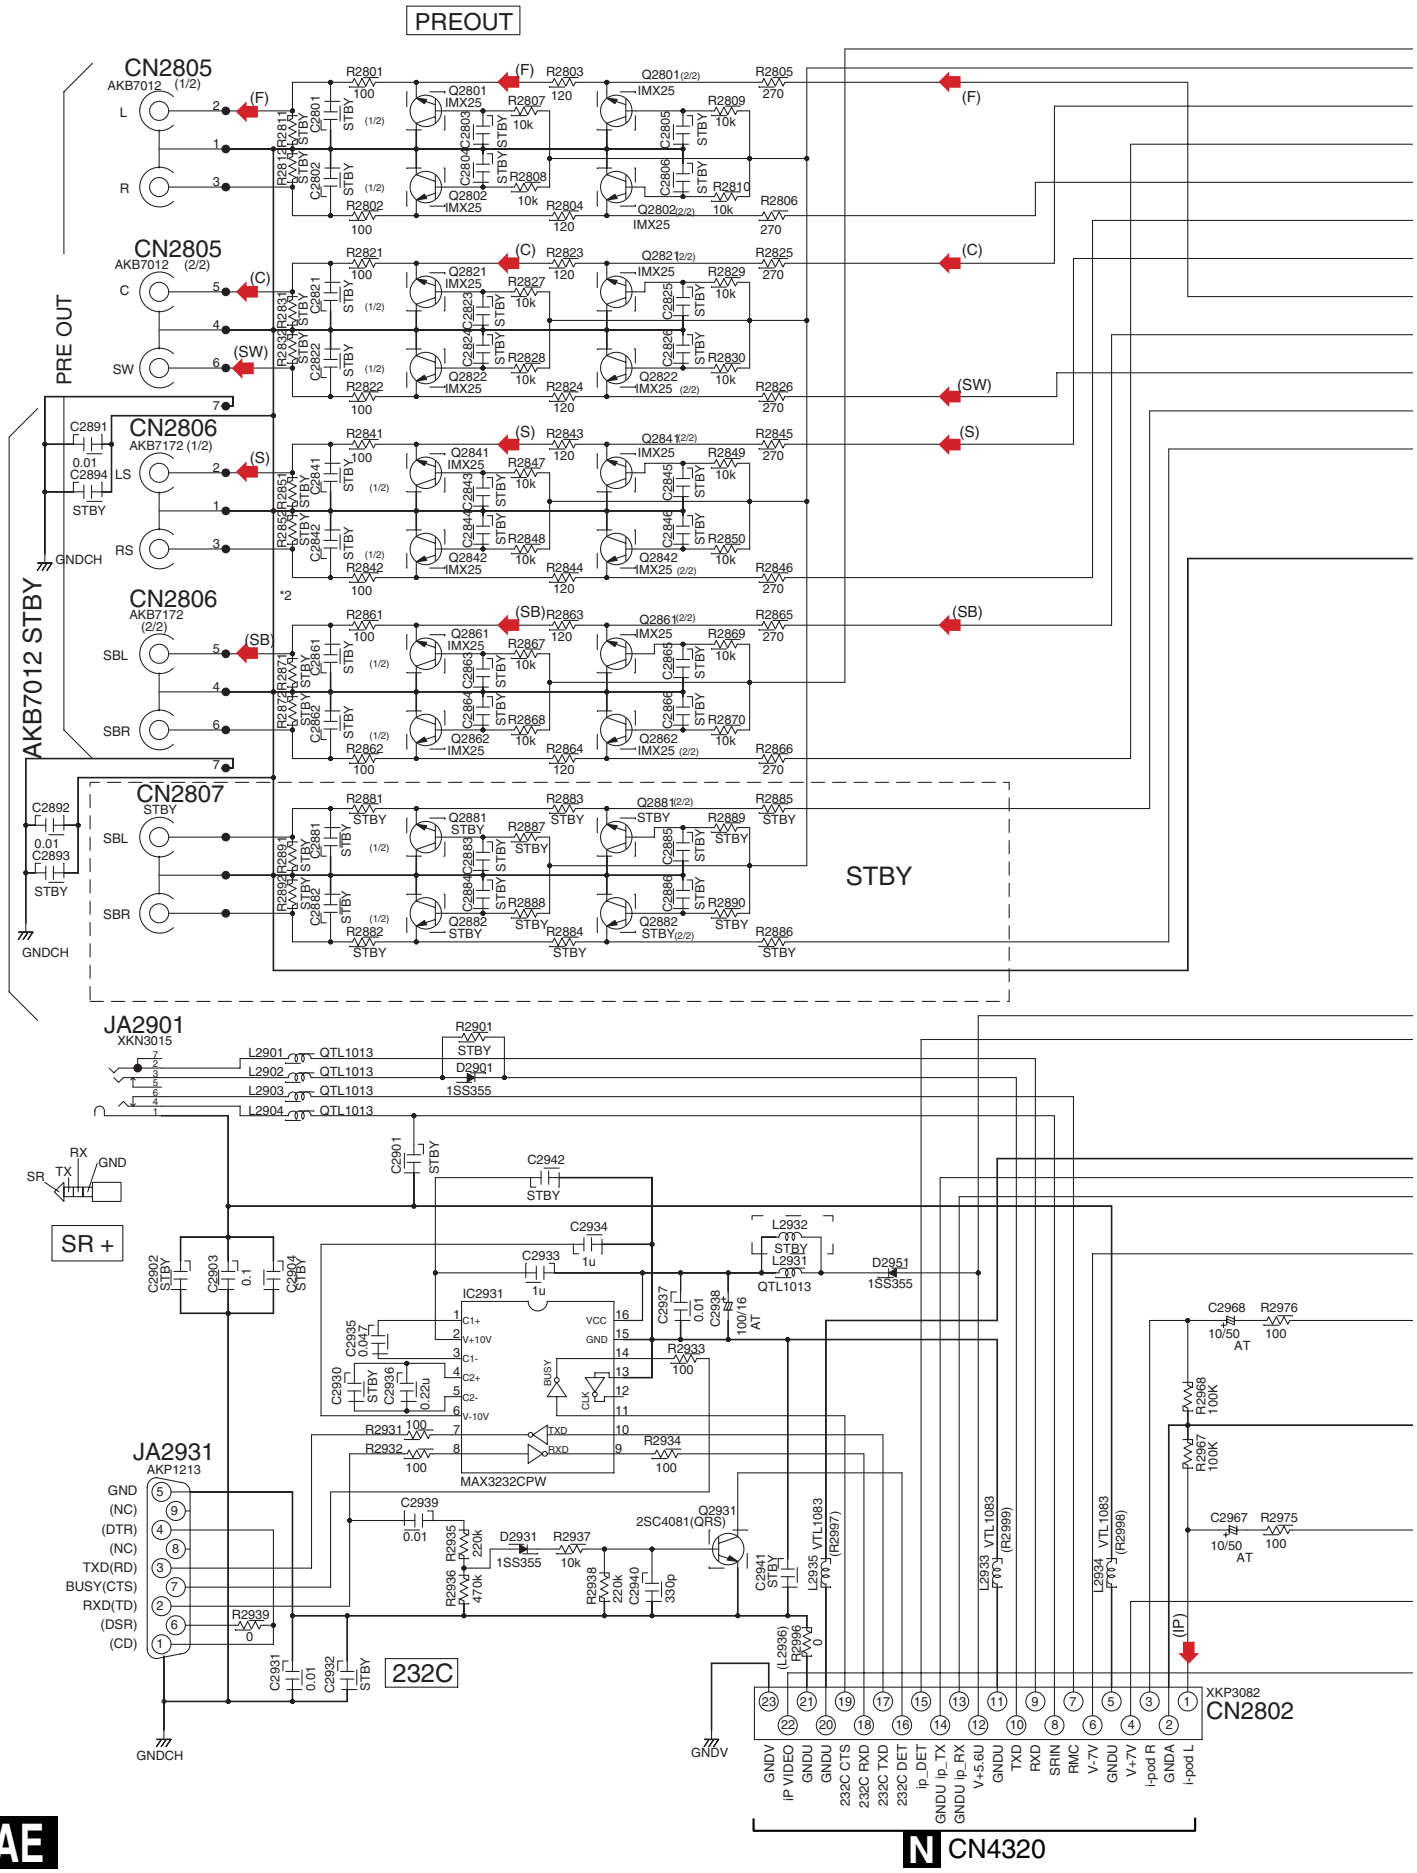

AE PREOUT & CONTROL ASSY (AWX8625)

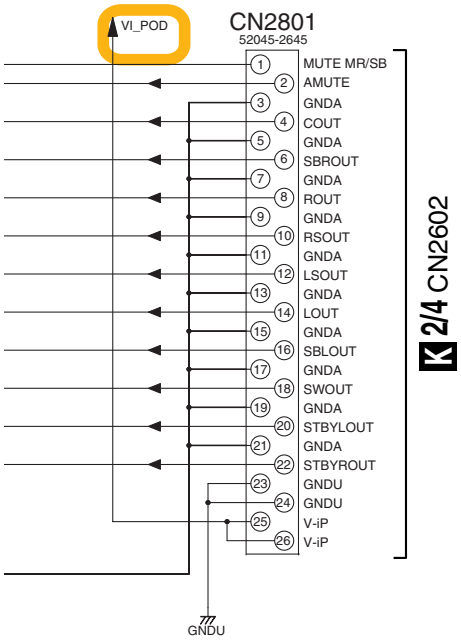


NOTE


1.RESISTORS
- Unit: k-k , M-M or unless otherwise noted.
- Rated power: 1/16W unless otherwise noted.
- Tolerance: (J) 5% unless otherwise noted.


2.CAPACITORS
- Unit: p-pF or µF unless otherwise noted.
- Ratings: Capacity(µF)/Voltage(V) unless otherwise noted.
- Rated Voltage: 50V expect for electrolytic capacitors.

(F) : AUDIO SIGNAL ROUTE (F)
(C) : AUDIO SIGNAL ROUTE (C)
(S) : AUDIO SIGNAL ROUTE (S)
(SB) : AUDIO SIGNAL ROUTE (SB)
(SW) : AUDIO SIGNAL ROUTE (SW)
(IP) : AUDIO SIGNAL ROUTE (IP)

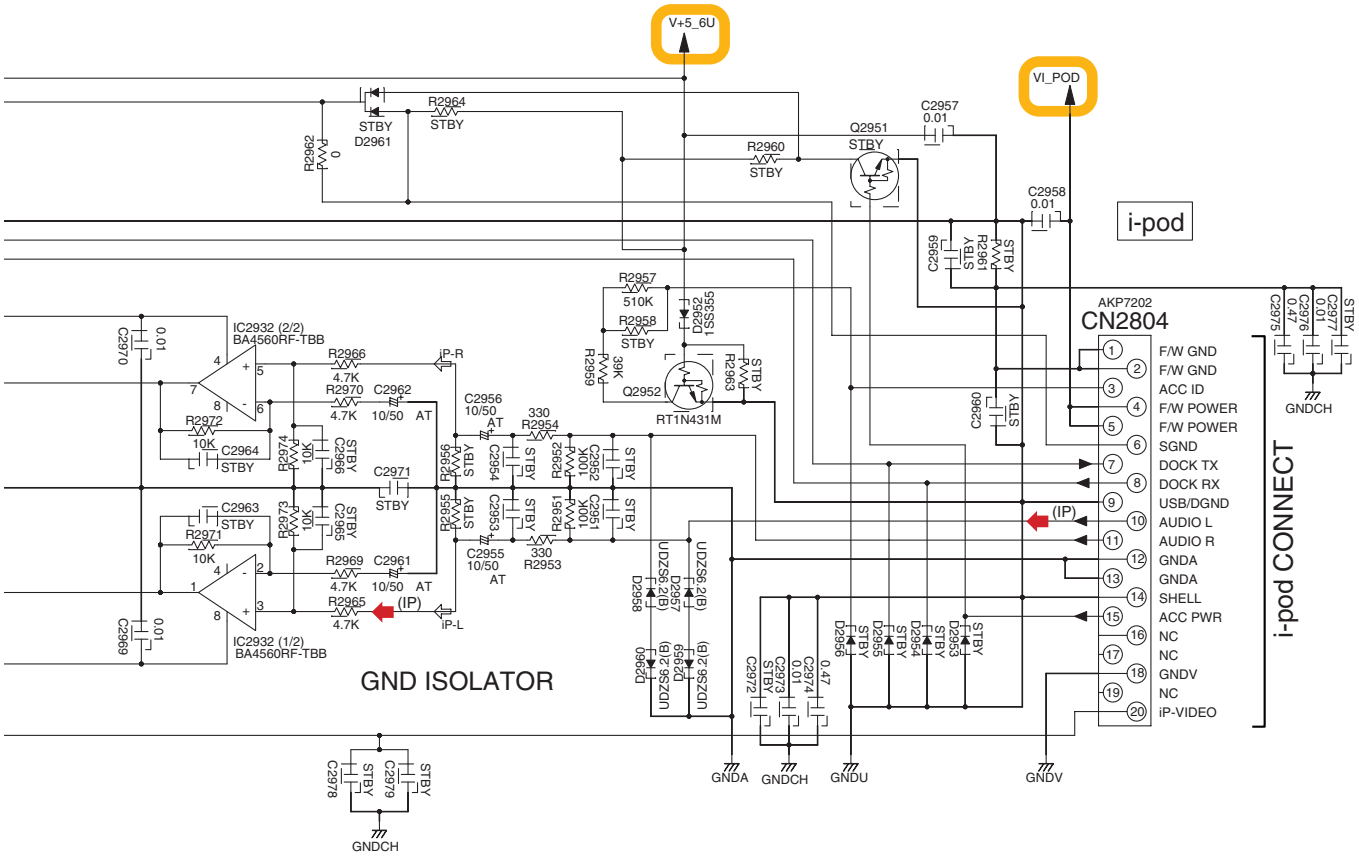


3.32 1394 ASSY (1/2)

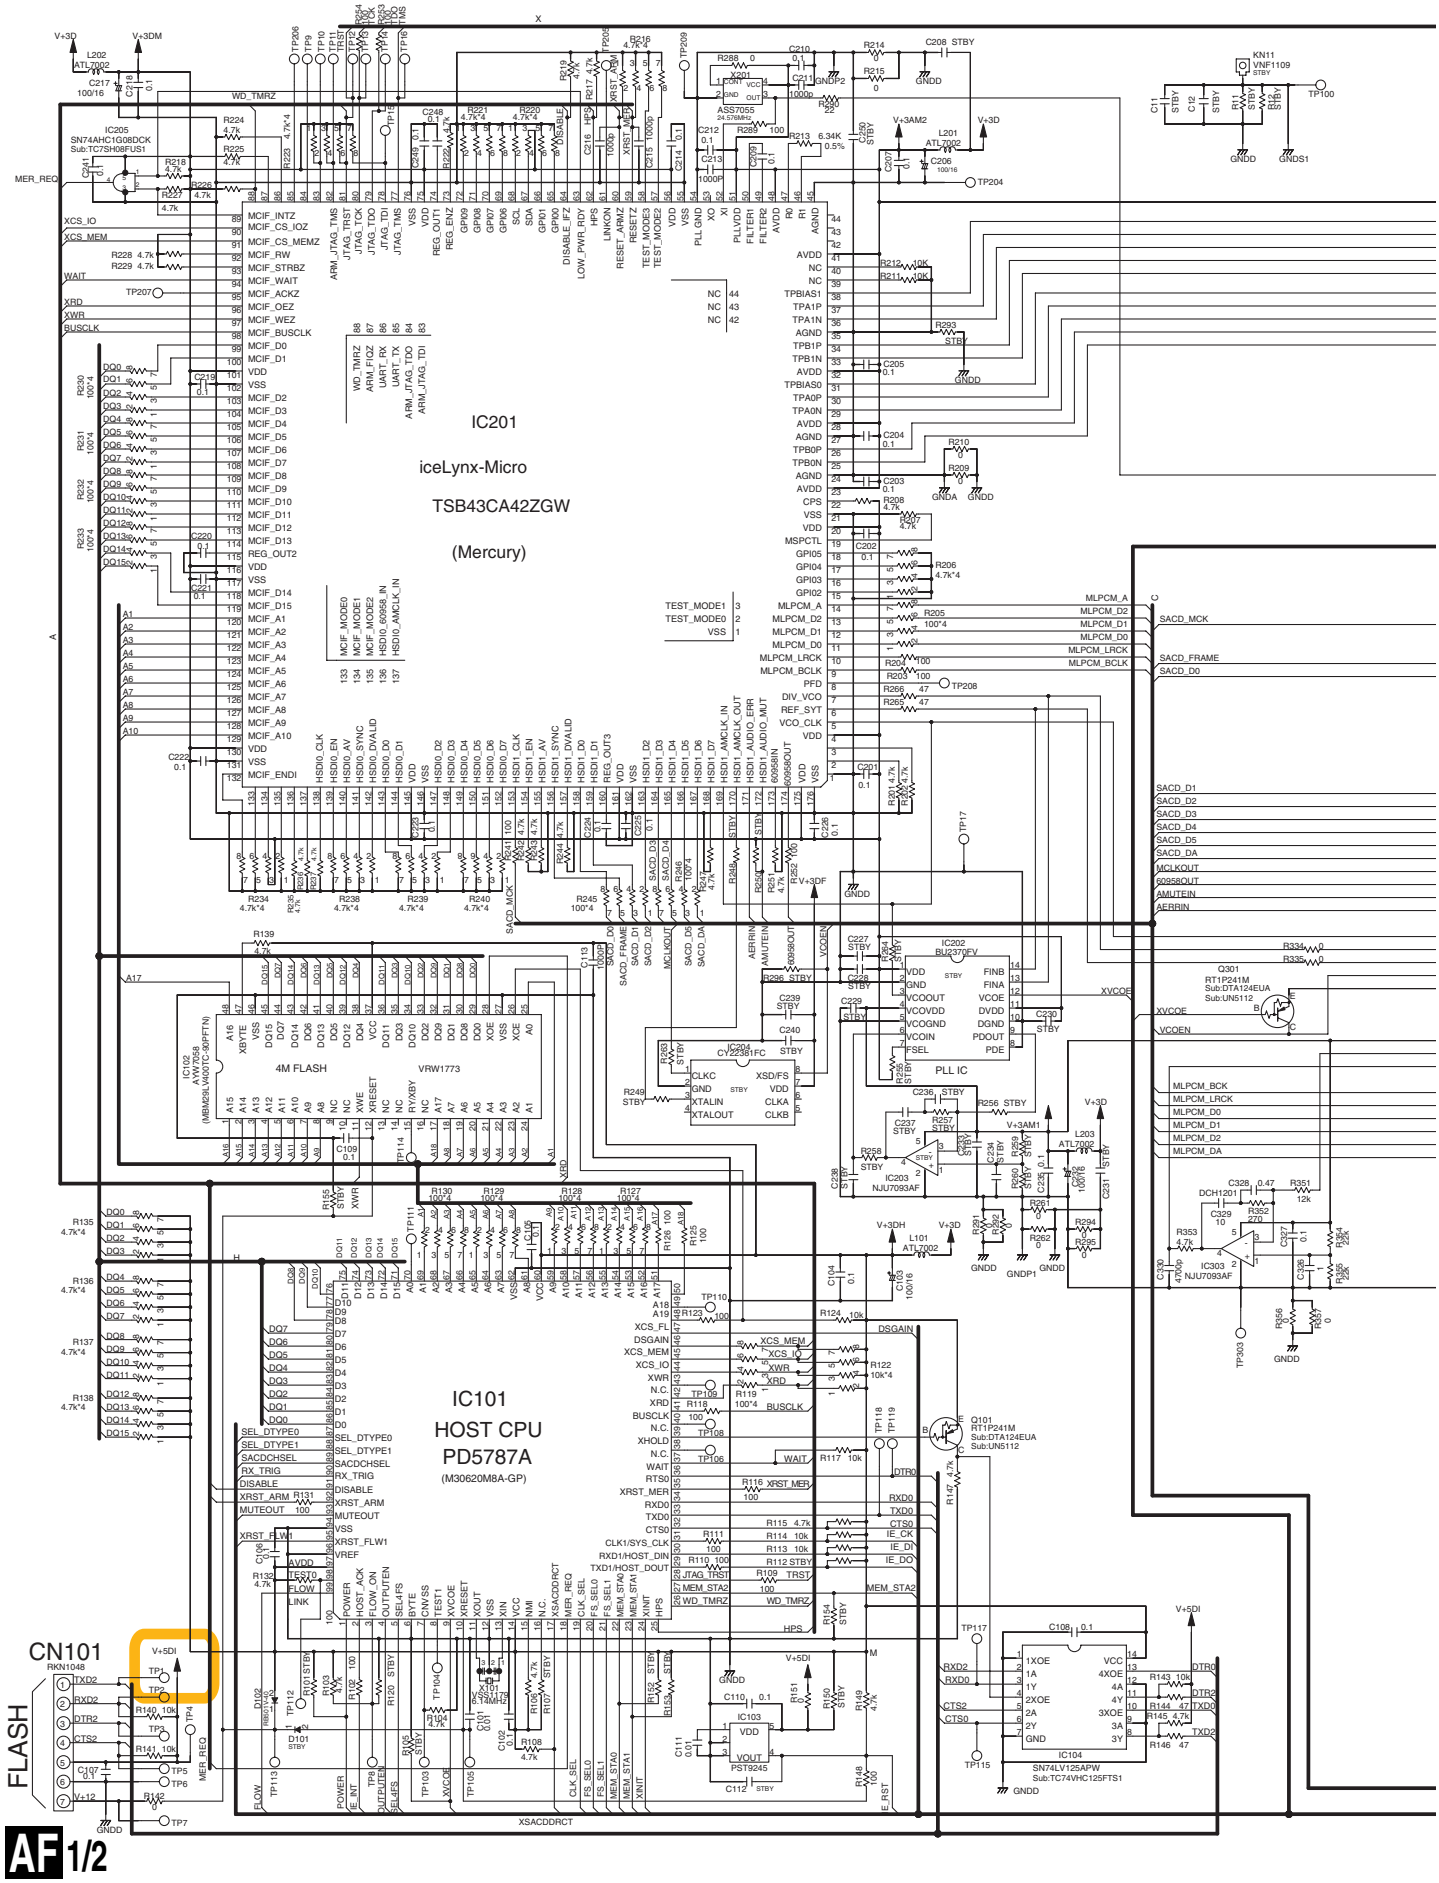

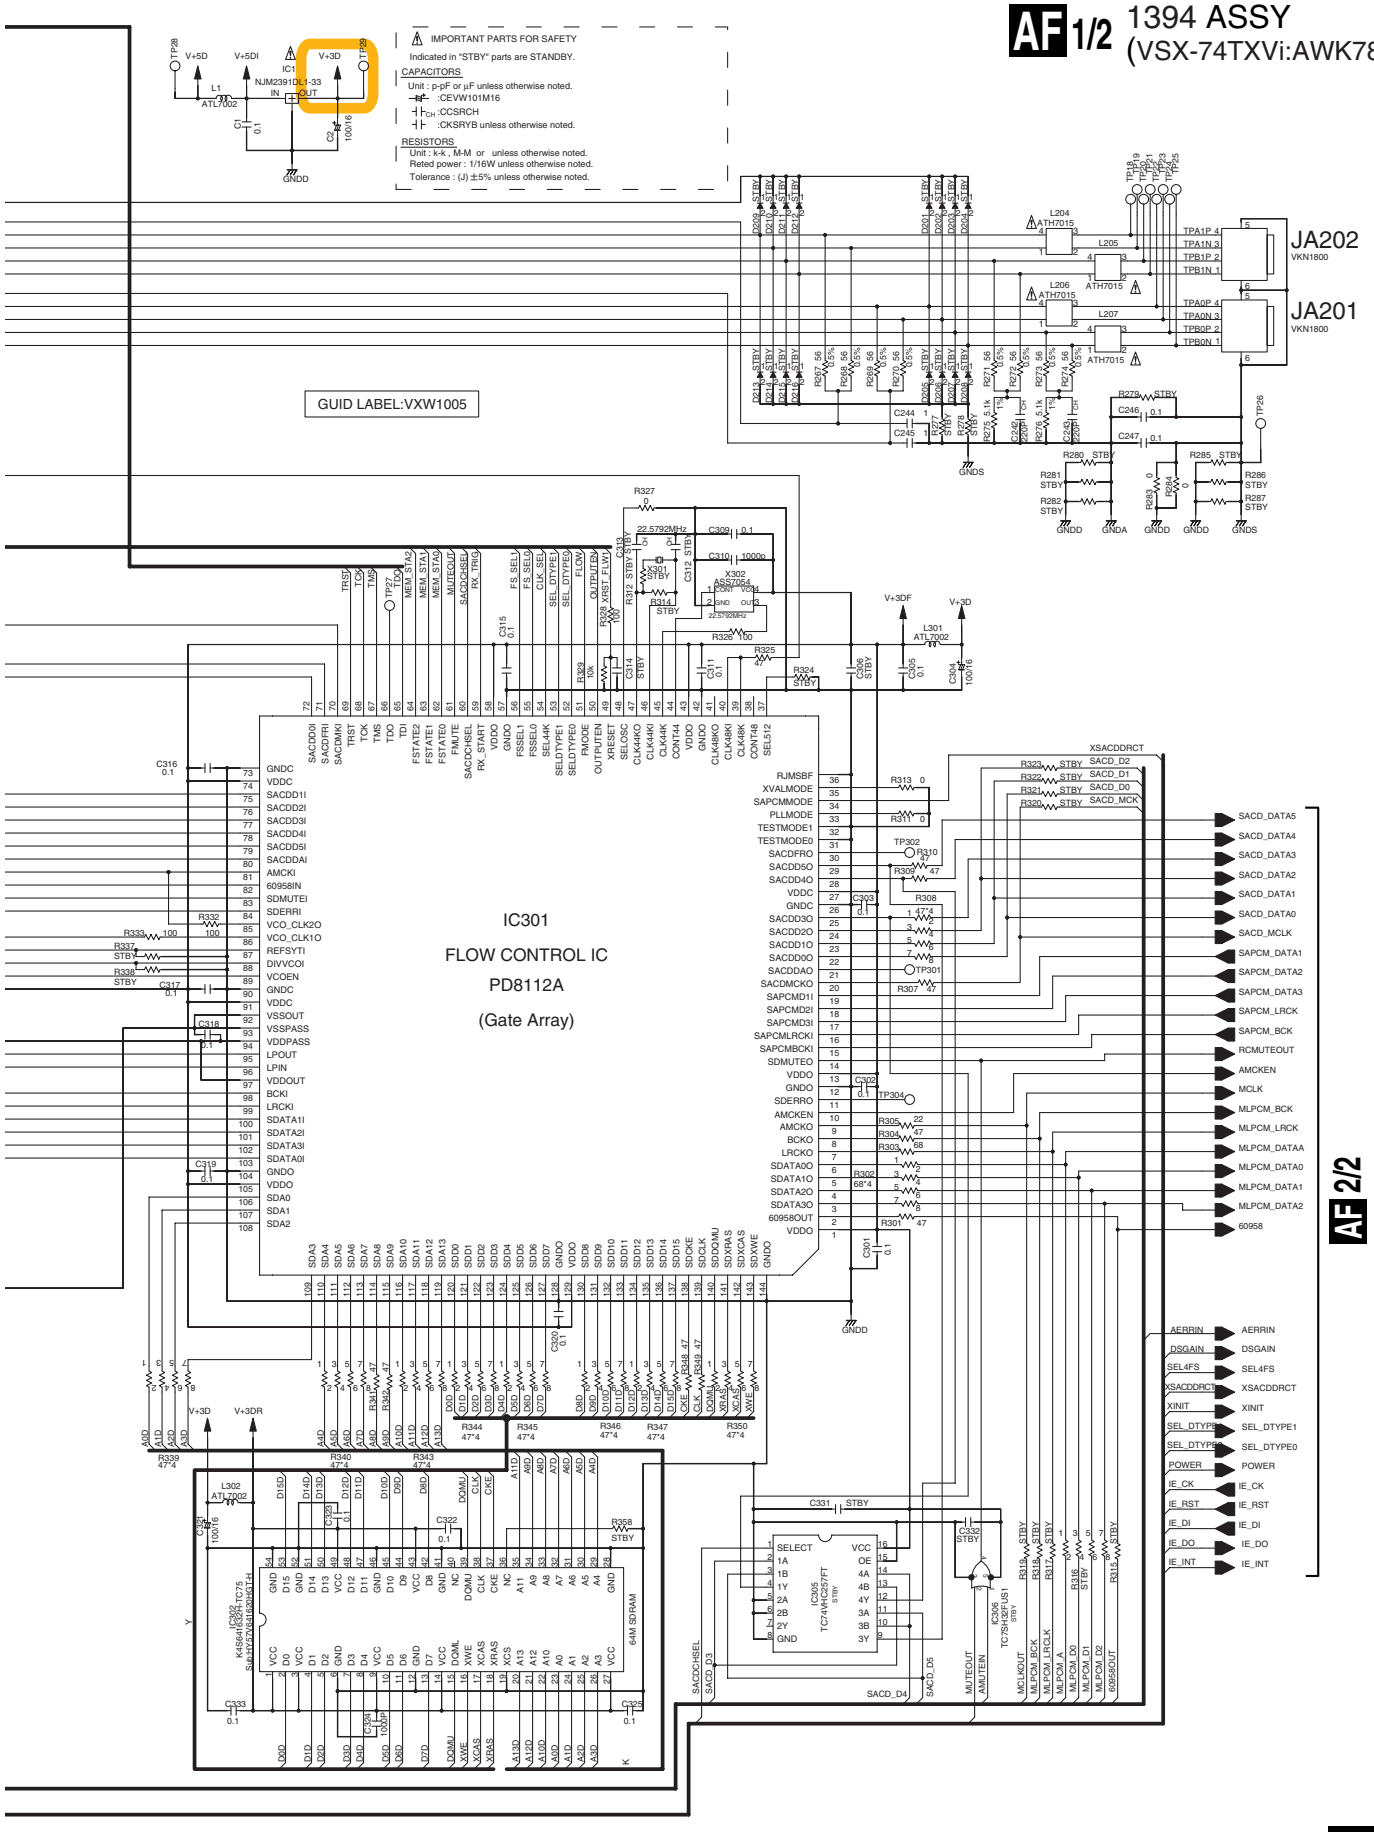
IMPORTANT PARTS FOR SAFETY
Indicated in "STBY" parts are STANDBY.
CAPACITORS
Unit : p-pF or µF unless otherwise noted.
:CEVW101M16
:CCSRCH
:CKSRYB unless otherwise noted.
RESISTORS
Unit : k-k , M-M or unless otherwise noted.
Reted power : 1/16W unless otherwise noted.
Tolerance : (J) ±5% unless otherwise noted.
GUID LABEL:VXW1005
JA202
VKN1800
JA201
VKN1800
IC301
FLOW CONTROL IC
PD8112A
(Gate Array)
AF 2/2
AF 1/2

3.33 1394 ASSY (2/2)

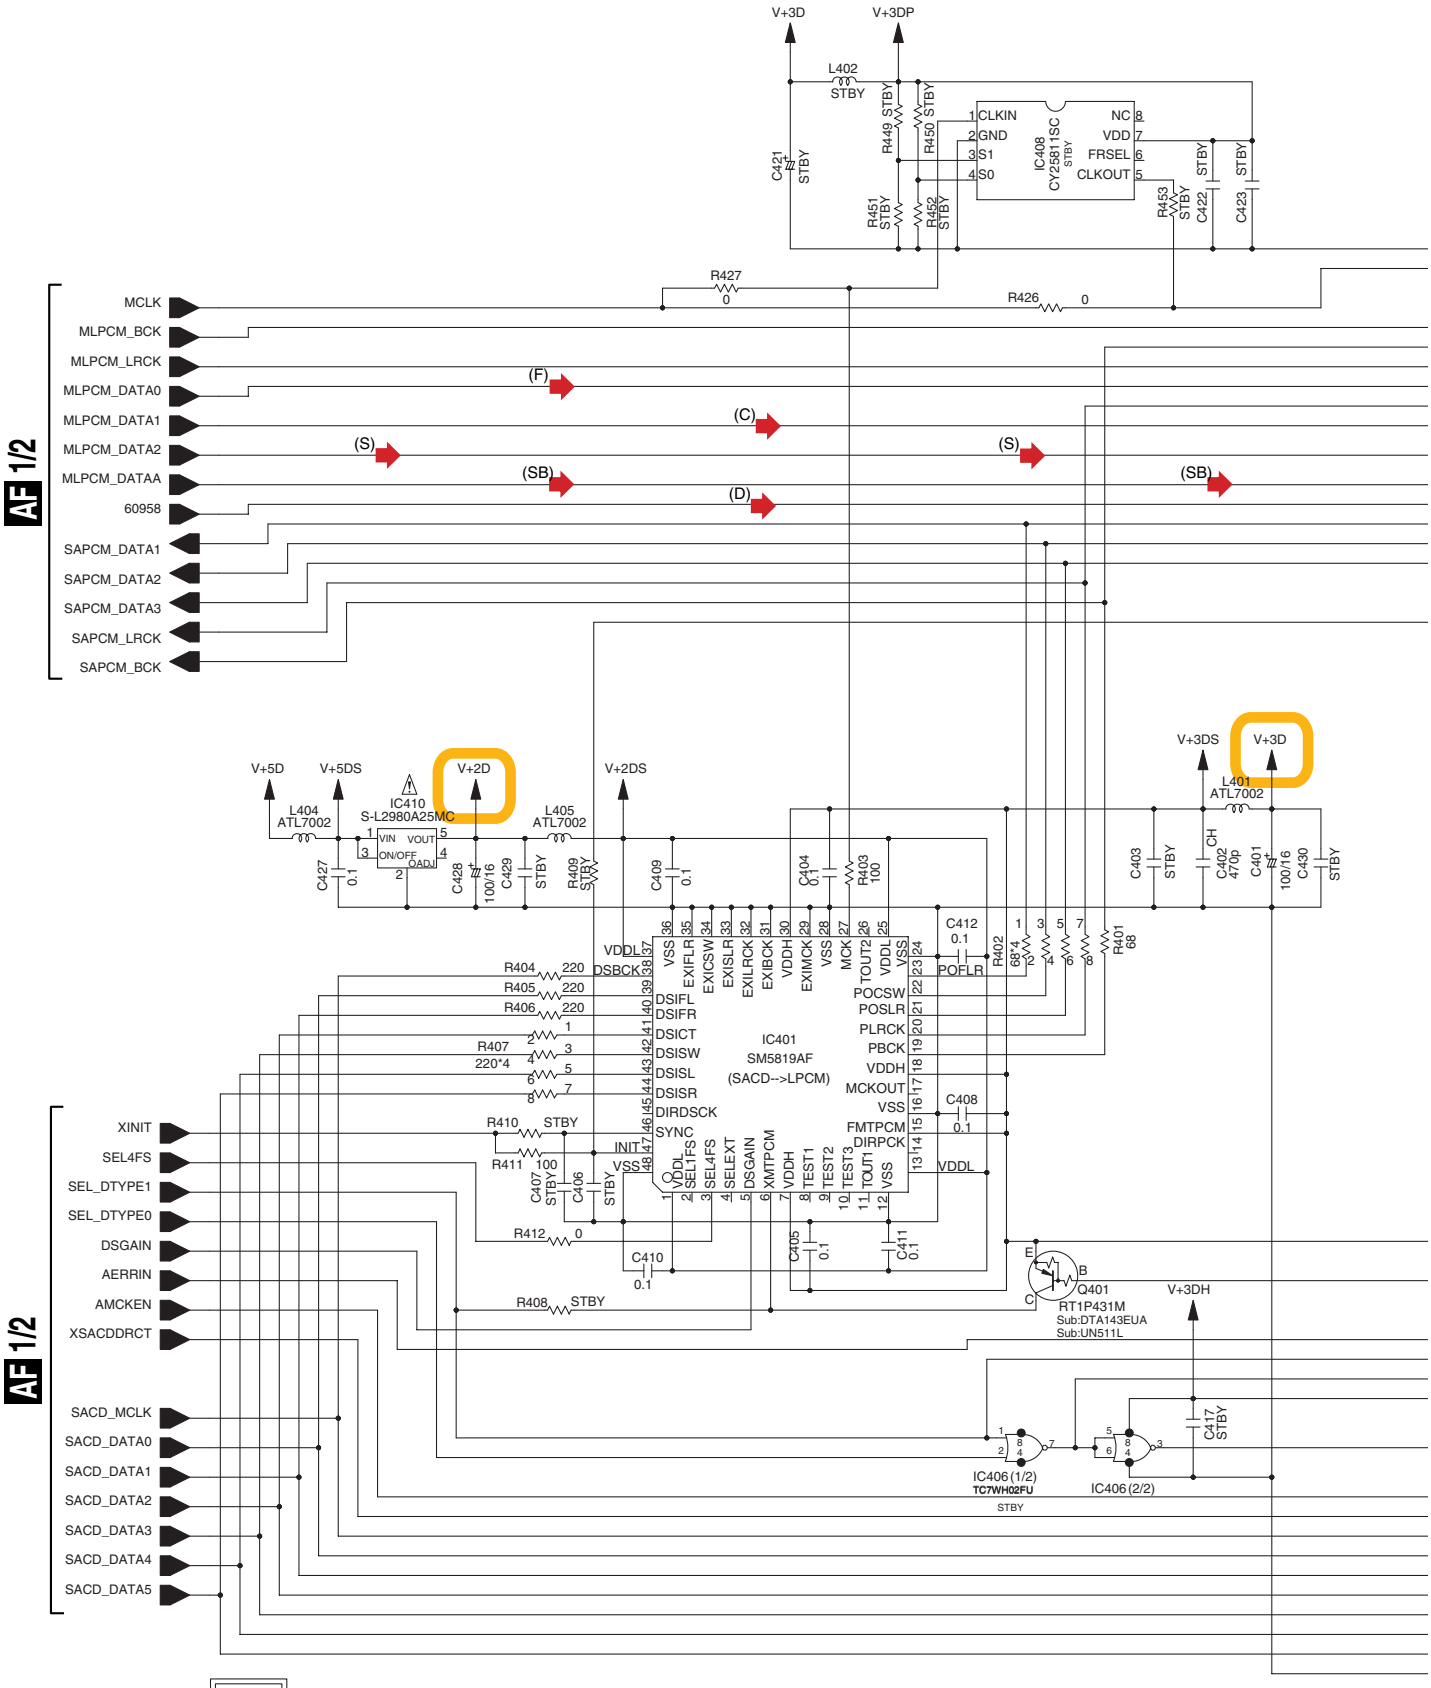

NOTES

⚠ IMPORTANT PARTS FOR SAFETY
Indicated in "STBY" parts are STANDBY.


CAPACITORS
Unit : p-pF or µF unless otherwise noted.
Ratings : Capacity(µF)/Voltage(V)
Rated Voltage : 50V except for electrolytic capacitors. unless otherwise noted.

:CEVW101M16


:CKSRYB unless otherwise noted

RESISTORS
Unit : k-k ,M-M or unless otherwise noted.
Rated power : 1/16W unless otherwise noted.
Tolerance : (J)±5% unless otherwise noted.


AF 2/2

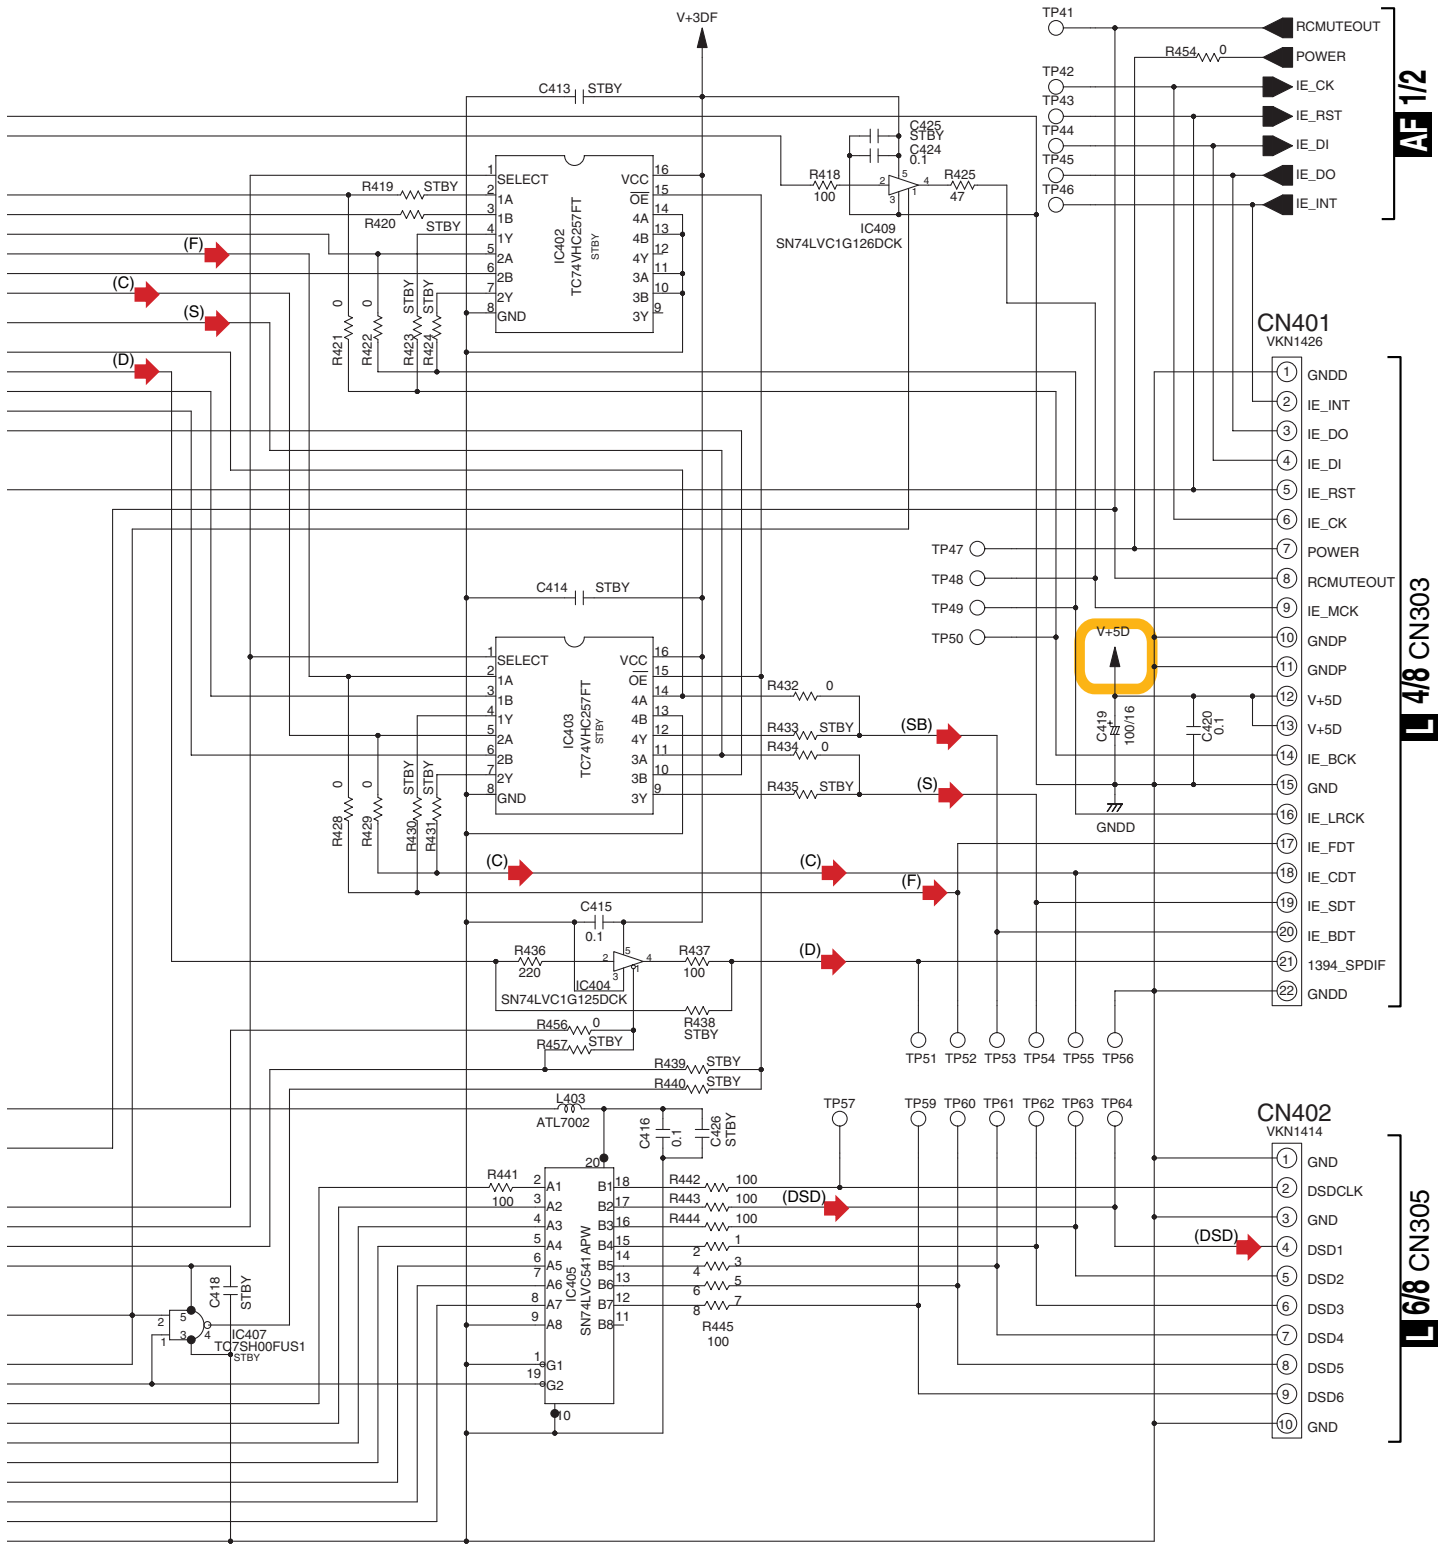
V+3DF
C413 STBY
IC402 TC74VHC257FT
SELECT
1A
1B
1Y
2A
2B
2Y
GND
VCC
OE
4A
4B
4Y
3A
3B
3Y
R419 STBY
R420 STBY
R421 0
R422 0
R423 STBY
R424 STBY
(F)
(C)
(S)
(D)
C425 STBY
C424 0.1
R418 100
R425 47
IC409 SN74LVC1G126DCK
TP41
TP42
TP43
TP44
TP45
TP46
RCMUTEOUT
R454 0
POWER
IE_CK
IE_RST
IE_DI
IE_DO
IE_INT
AF 1/2
CN401
VKN1426
GNDD
IE_INT
IE_DO
IE_DI
IE_RST
IE_CK
POWER
RCMUTEOUT
IE_MCK
GNDP
GNDP
V+5D
V+5D
IE_BCK
GND
IE_LRCK
IE_FDT
IE_CDT
IE_SDT
IE_BDT
1394_SPDIF
GNDD
L 4/8 CN303
TP47
TP48
TP49
TP50
V+5D
C419 100/16
C420 0.1
GNDD
C414 STBY
IC403 TC74VHC257FT
R428 0
R429 0
R430 STBY
R431 STBY
R432 0
R433 STBY
R434 0
R435 STBY
(SB)
(S)
(C)
(C)
(F)
C415 0.1
R436 220
R437 100
IC404 SN74LVC1G125DCK
(D)
R456 0
R457 STBY
R438 STBY
R439 STBY
R440 STBY
TP51 TP52 TP53 TP54 TP55 TP56
L403 ATL7002
C416 0.1
C426 STBY
TP57
TP59 TP60 TP61 TP62 TP63 TP64
CN402
VKN1414
GND
DSDCLK
GND
DSD1
DSD2
DSD3
DSD4
DSD5
DSD6
GND
L 6/8 CN305
(DSD)
(DSD)
R441 100
IC405 SN74LVC541APW
R442 100
R443 100
R444 100
R445 100
C418 STBY
IC407 TC7SH00FUS1
(F): AUDIO SIGNAL ROUTE(F)
(C): AUDIO SIGNAL ROUTE(C)
(S): AUDIO SIGNAL ROUTE(S)
(SB): AUDIO SIGNAL ROUTE(SB)
(D): AUDIO SIGNAL ROUTE(SPDIF)
(DSD): AUDIO SIGNAL ROUTE(DSD)


3.34 HDMI&DVC ASSY (1/2)

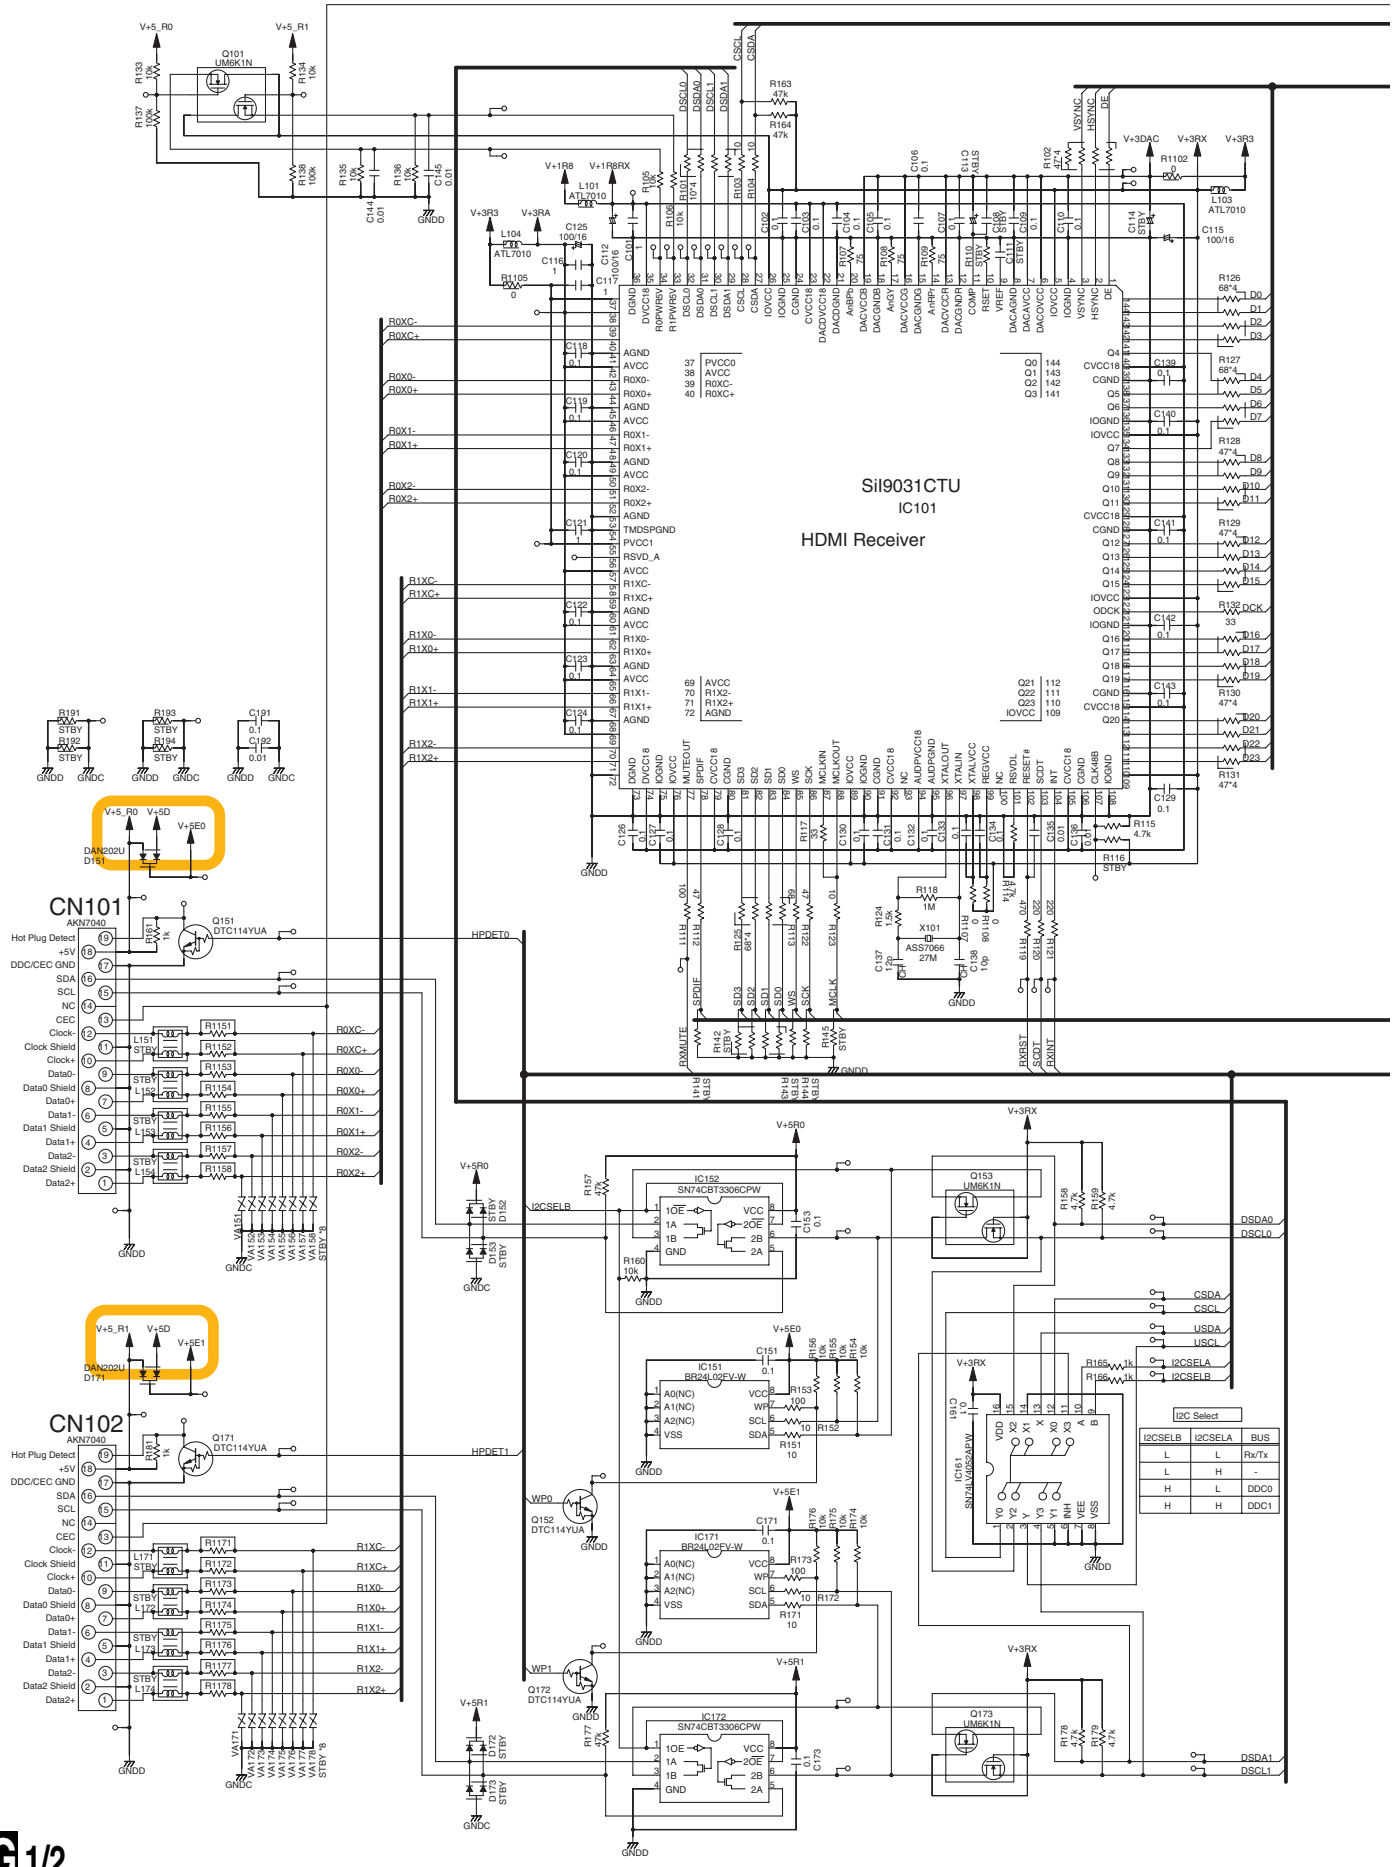

AG 1/2

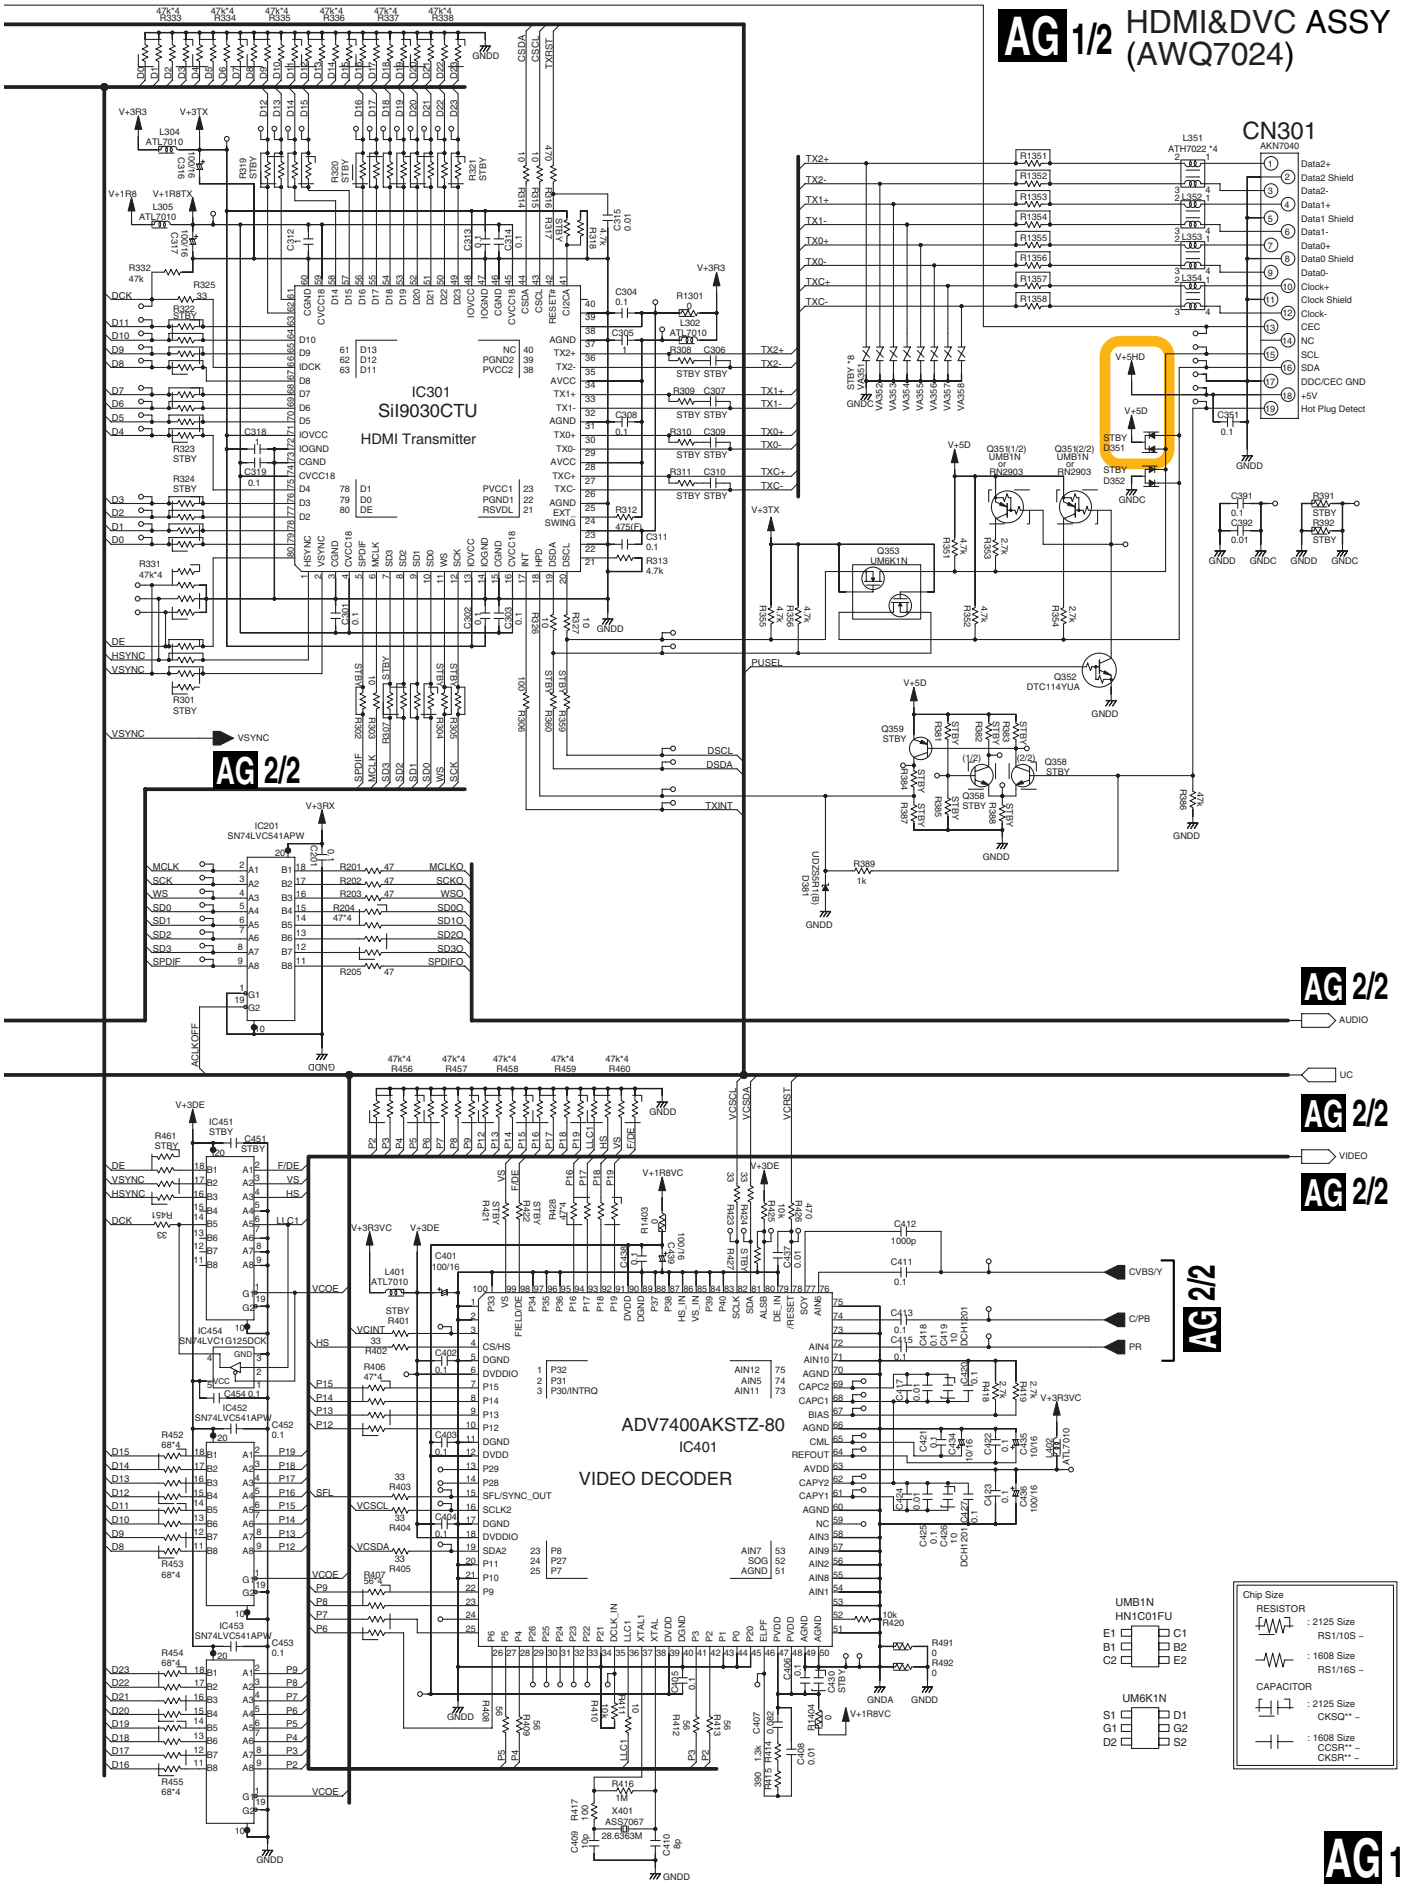

CN301
IC301
Sil9030CTU
HDMI Transmitter
IC401
ADV7400AKSTZ-80
VIDEO DECODER
AG 2/2
AG 1/2
AUDIO
UC
VIDEO
CVBS/Y
C/PB
PR
Chip Size
RESISTOR
CAPACITOR

3.35 HDMI&DVC ASSY (2/2)

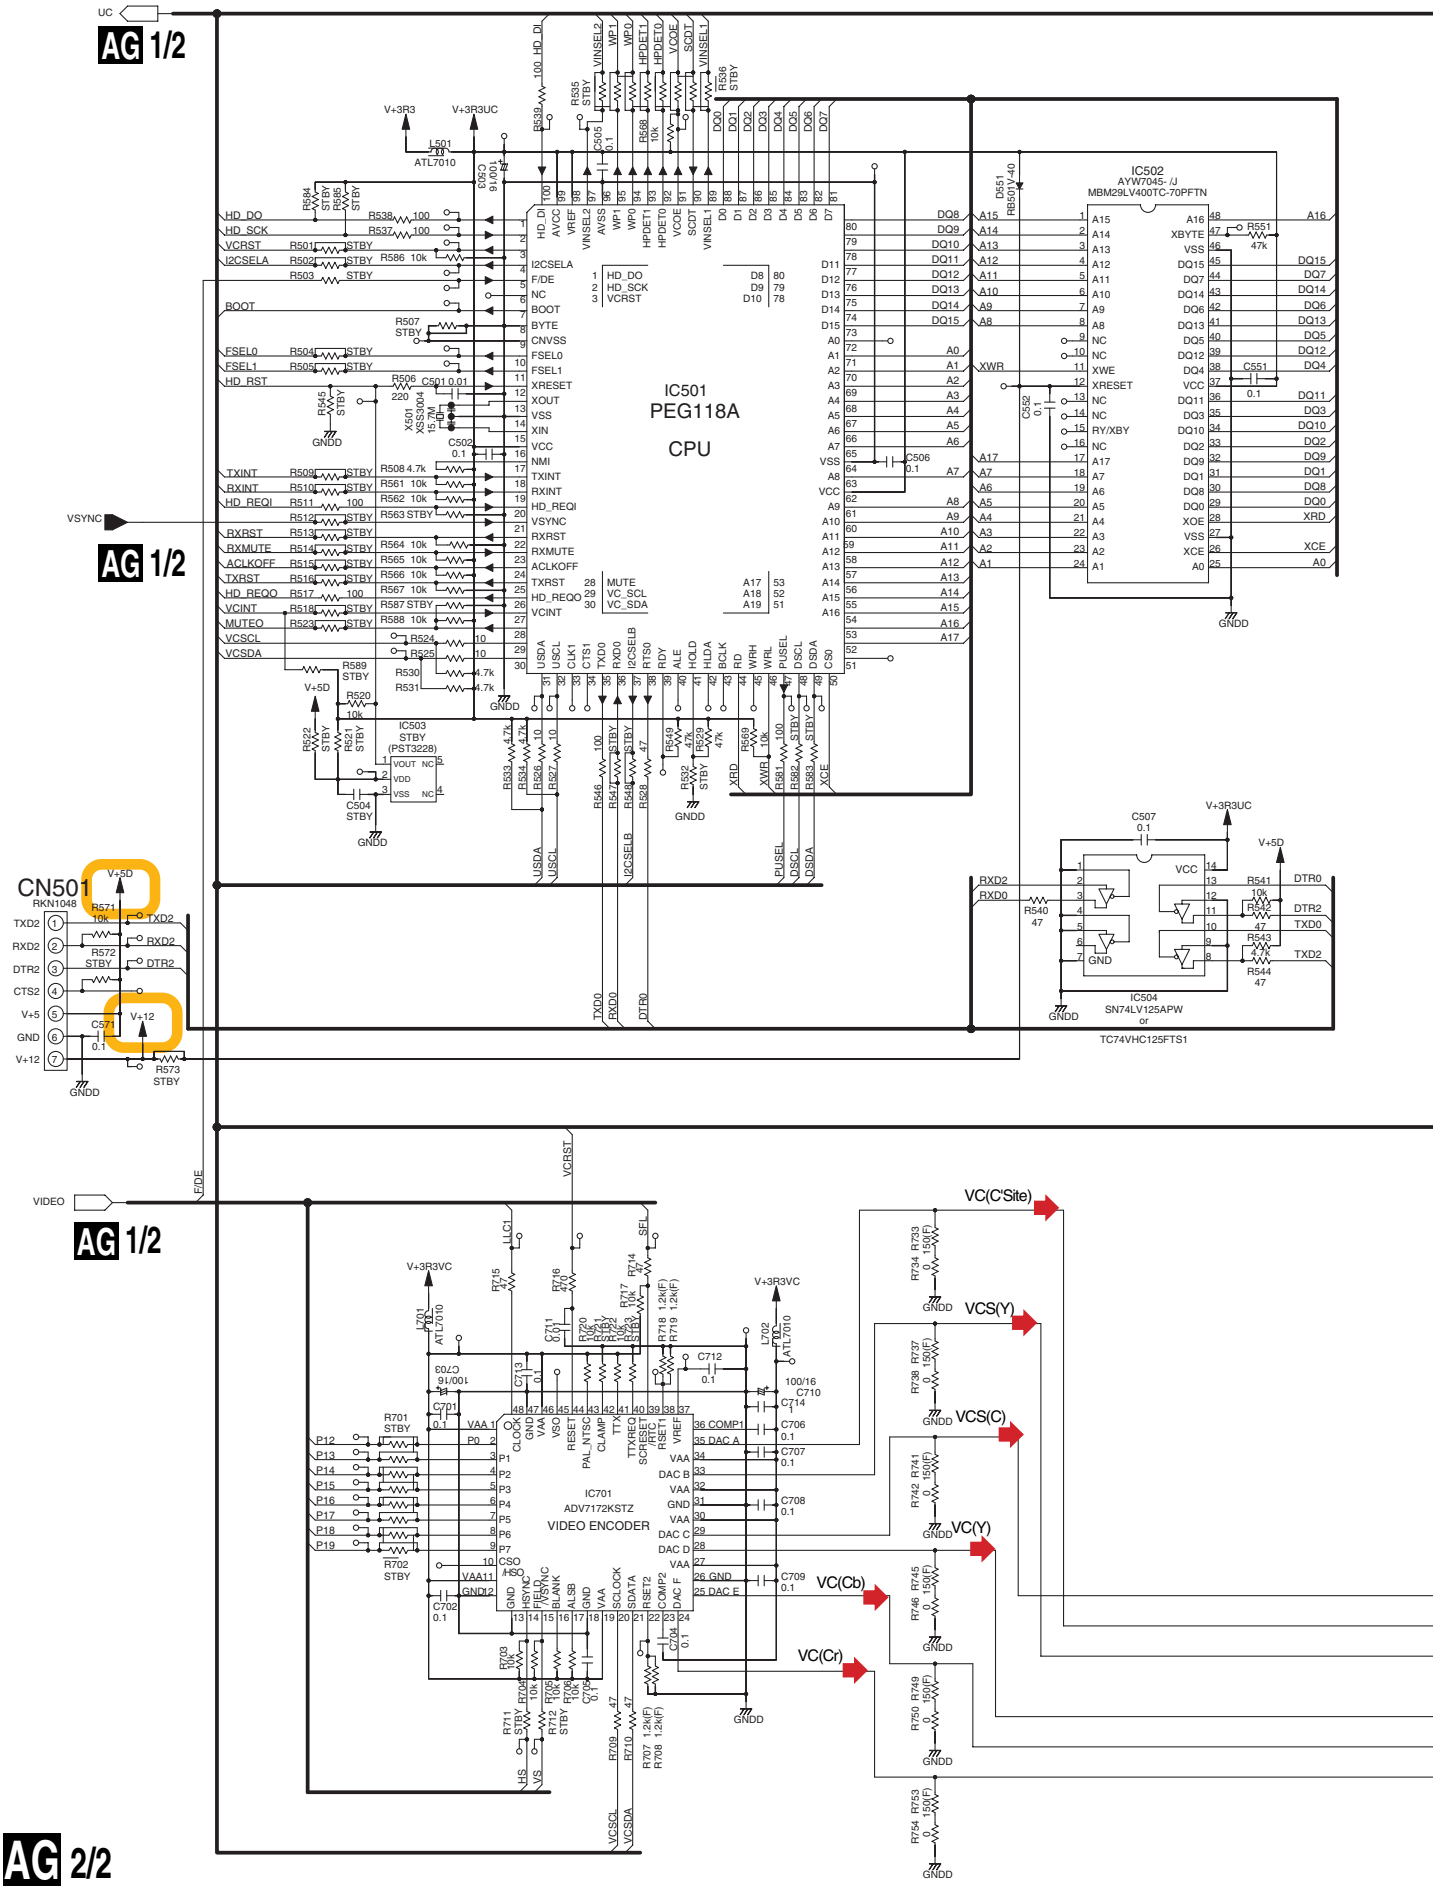

AG 2/2 HDMI&DVC ASSY (AWQ7024)

(F) : AUDIO SIGNAL ROUTE(F)
(C) : AUDIO SIGNAL ROUTE(C)
(S) : AUDIO SIGNAL ROUTE(S)
(SB) : AUDIO SIGNAL ROUTE(SB)
(D) : AUDIO SIGNAL ROUTE(SPDIF)

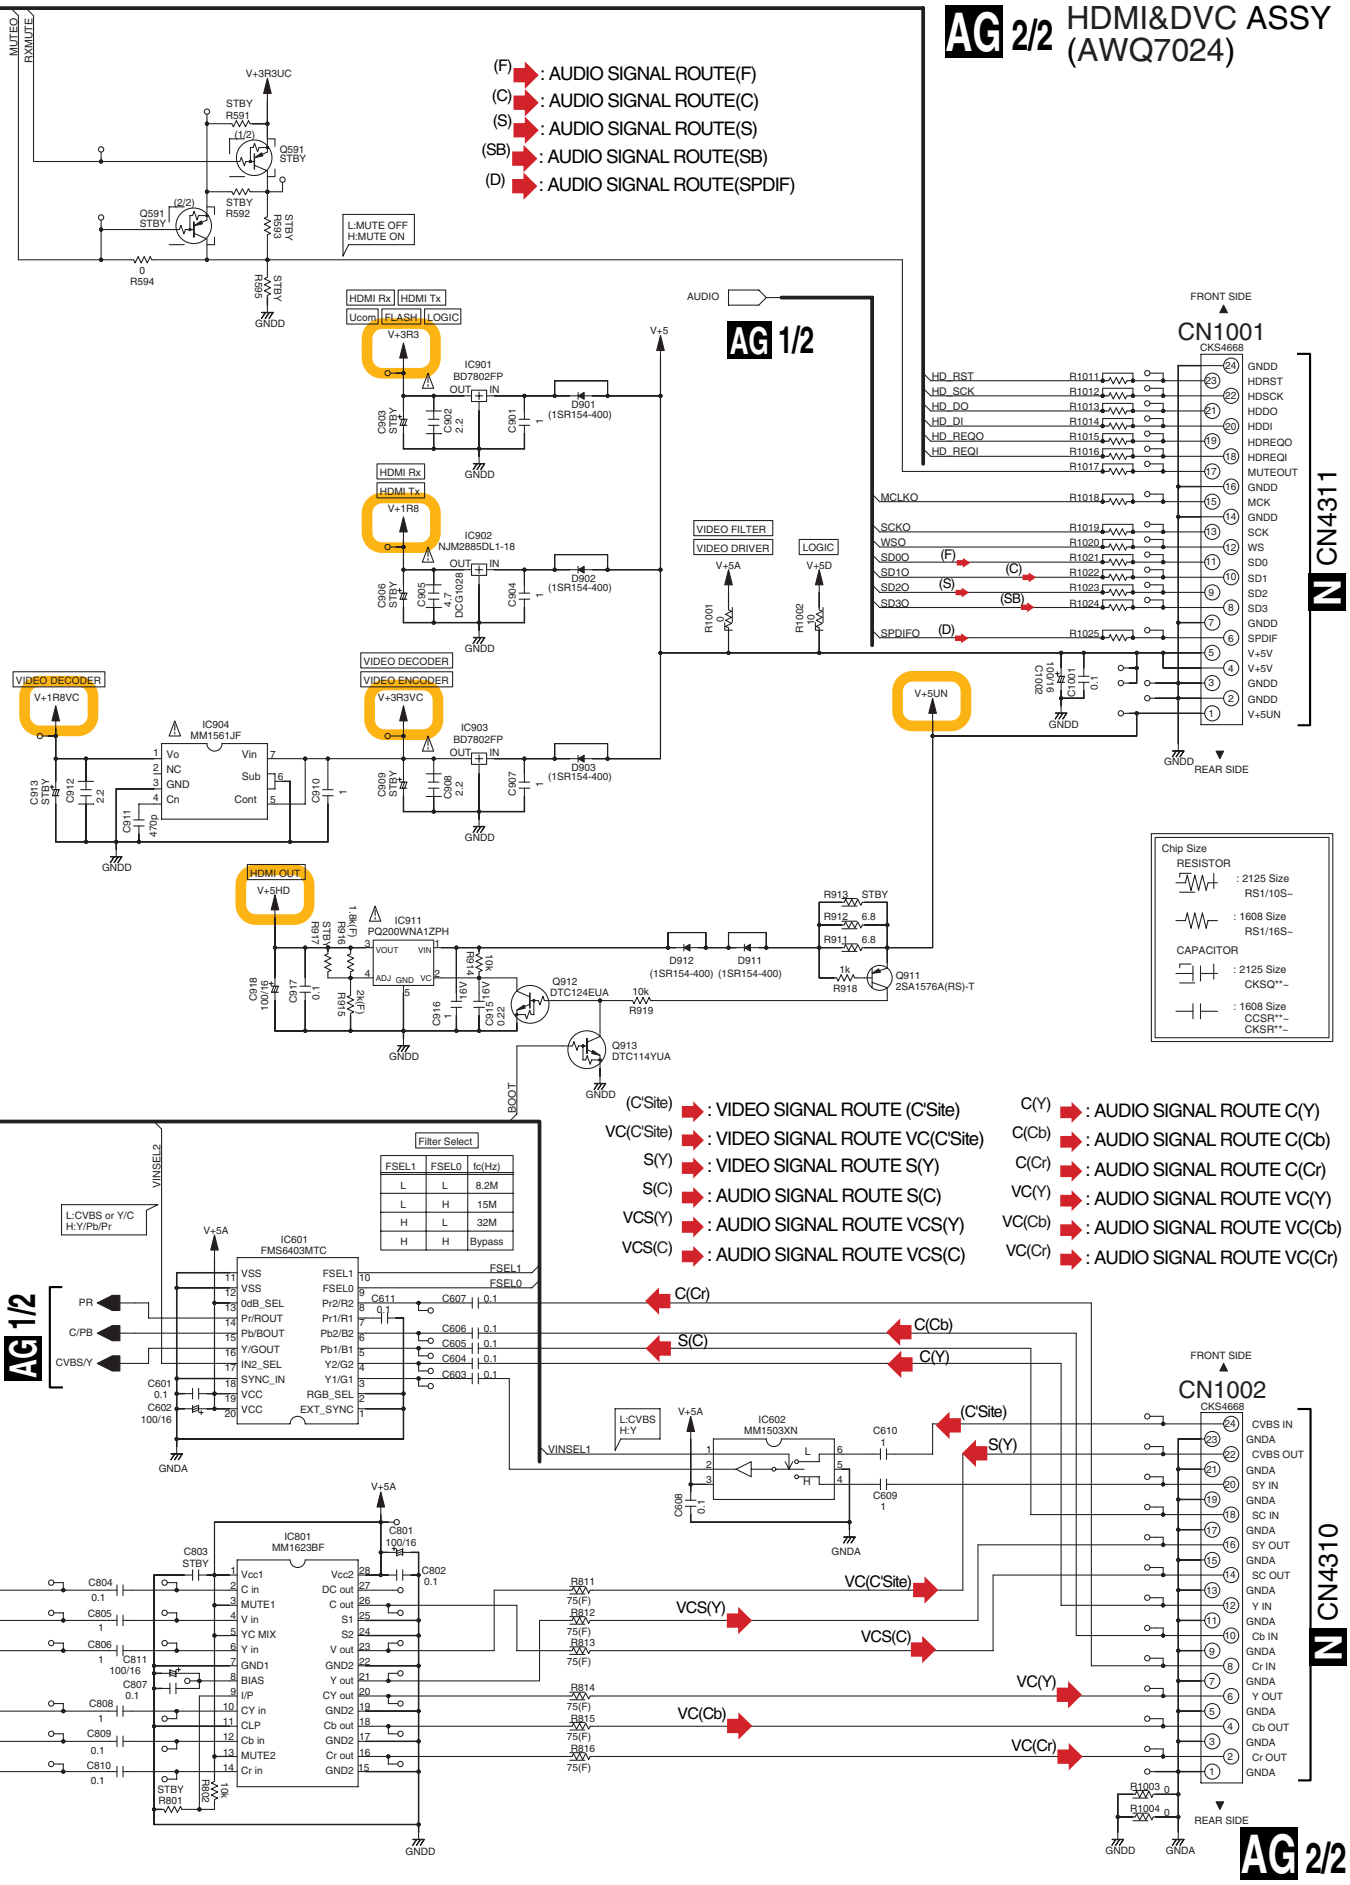





(C'Site) : VIDEO SIGNAL ROUTE (C'Site)
VC(C'Site) : VIDEO SIGNAL ROUTE VC(C'Site)
S(Y) : VIDEO SIGNAL ROUTE S(Y)
S(C) : AUDIO SIGNAL ROUTE S(C)
VCS(Y) : AUDIO SIGNAL ROUTE VCS(Y)
VCS(C) : AUDIO SIGNAL ROUTE VCS(C)

C(Y) : AUDIO SIGNAL ROUTE C(Y)
C(Cb) : AUDIO SIGNAL ROUTE C(Cb)
C(Cr) : AUDIO SIGNAL ROUTE C(Cr)
VC(Y) : AUDIO SIGNAL ROUTE VC(Y)
VC(Cb) : AUDIO SIGNAL ROUTE VC(Cb)
VC(Cr) : AUDIO SIGNAL ROUTE VC(Cr)


4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
   For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

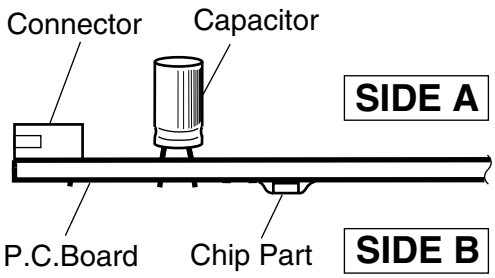


4.1 PRIOUT&CONTROL ASSY


SIDE A

SIDE B

AE PRIOUT&CONTROL ASSY

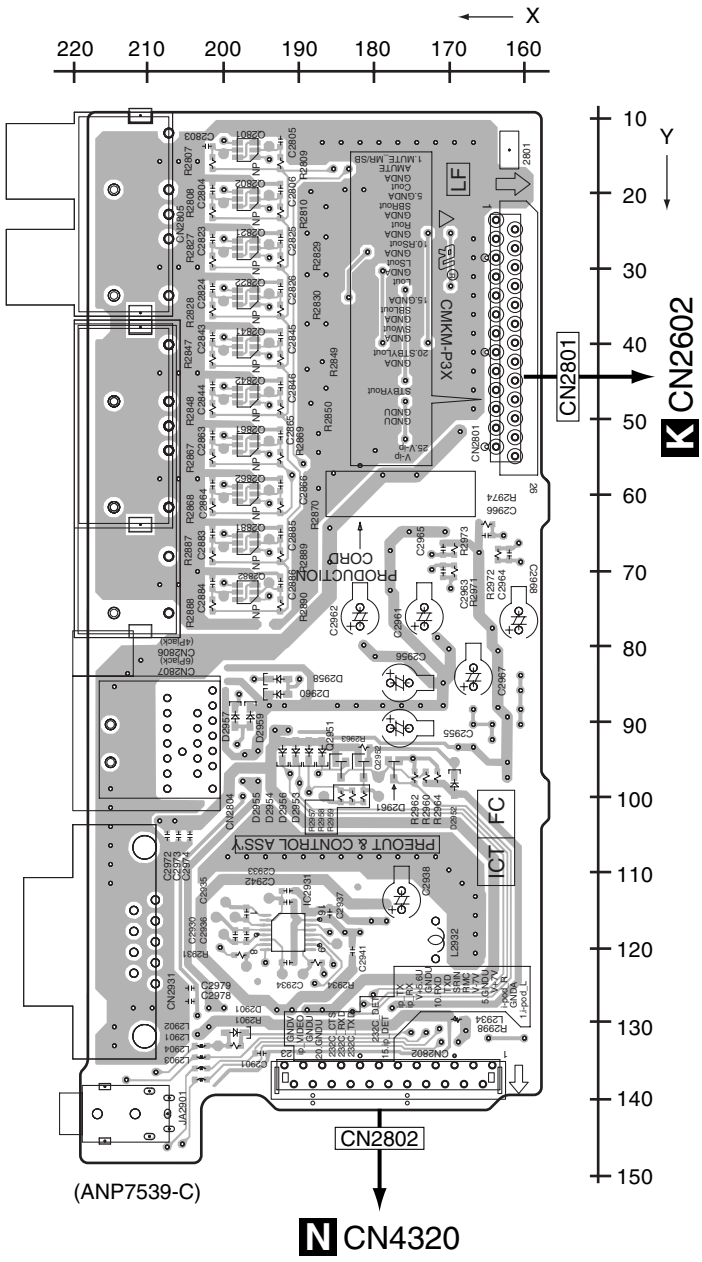


AE PRIOUT&CONTROL ASSY

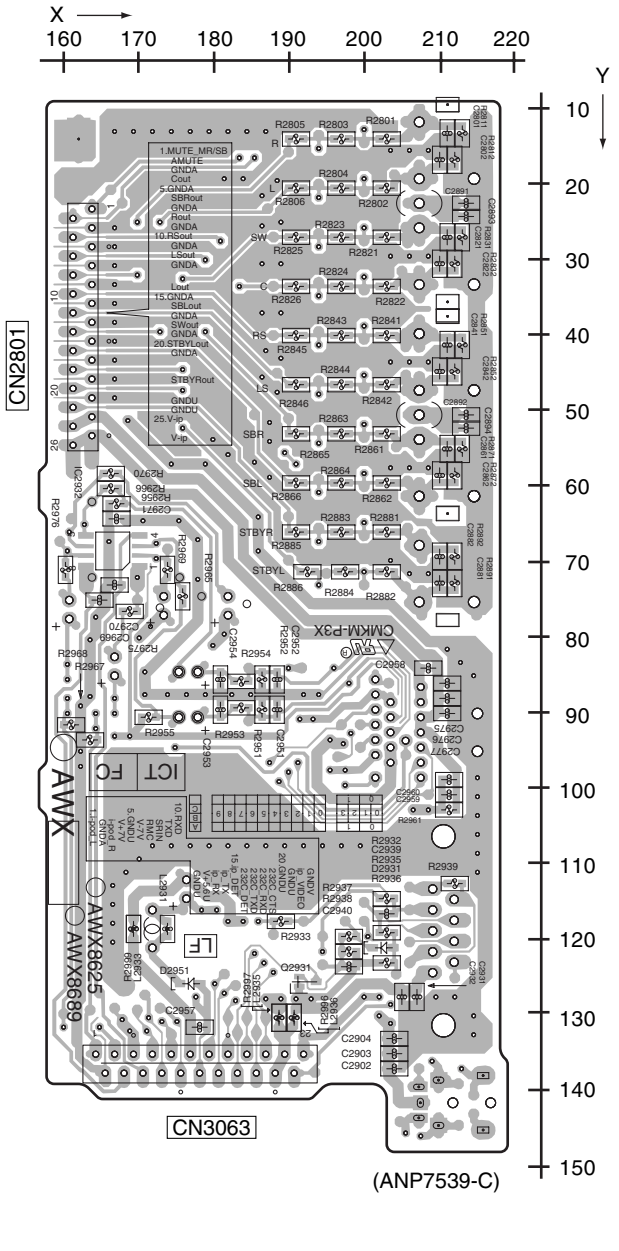

4.2 AUDIO&MULTI CH IN ASSY


SIDE A

SIDE B

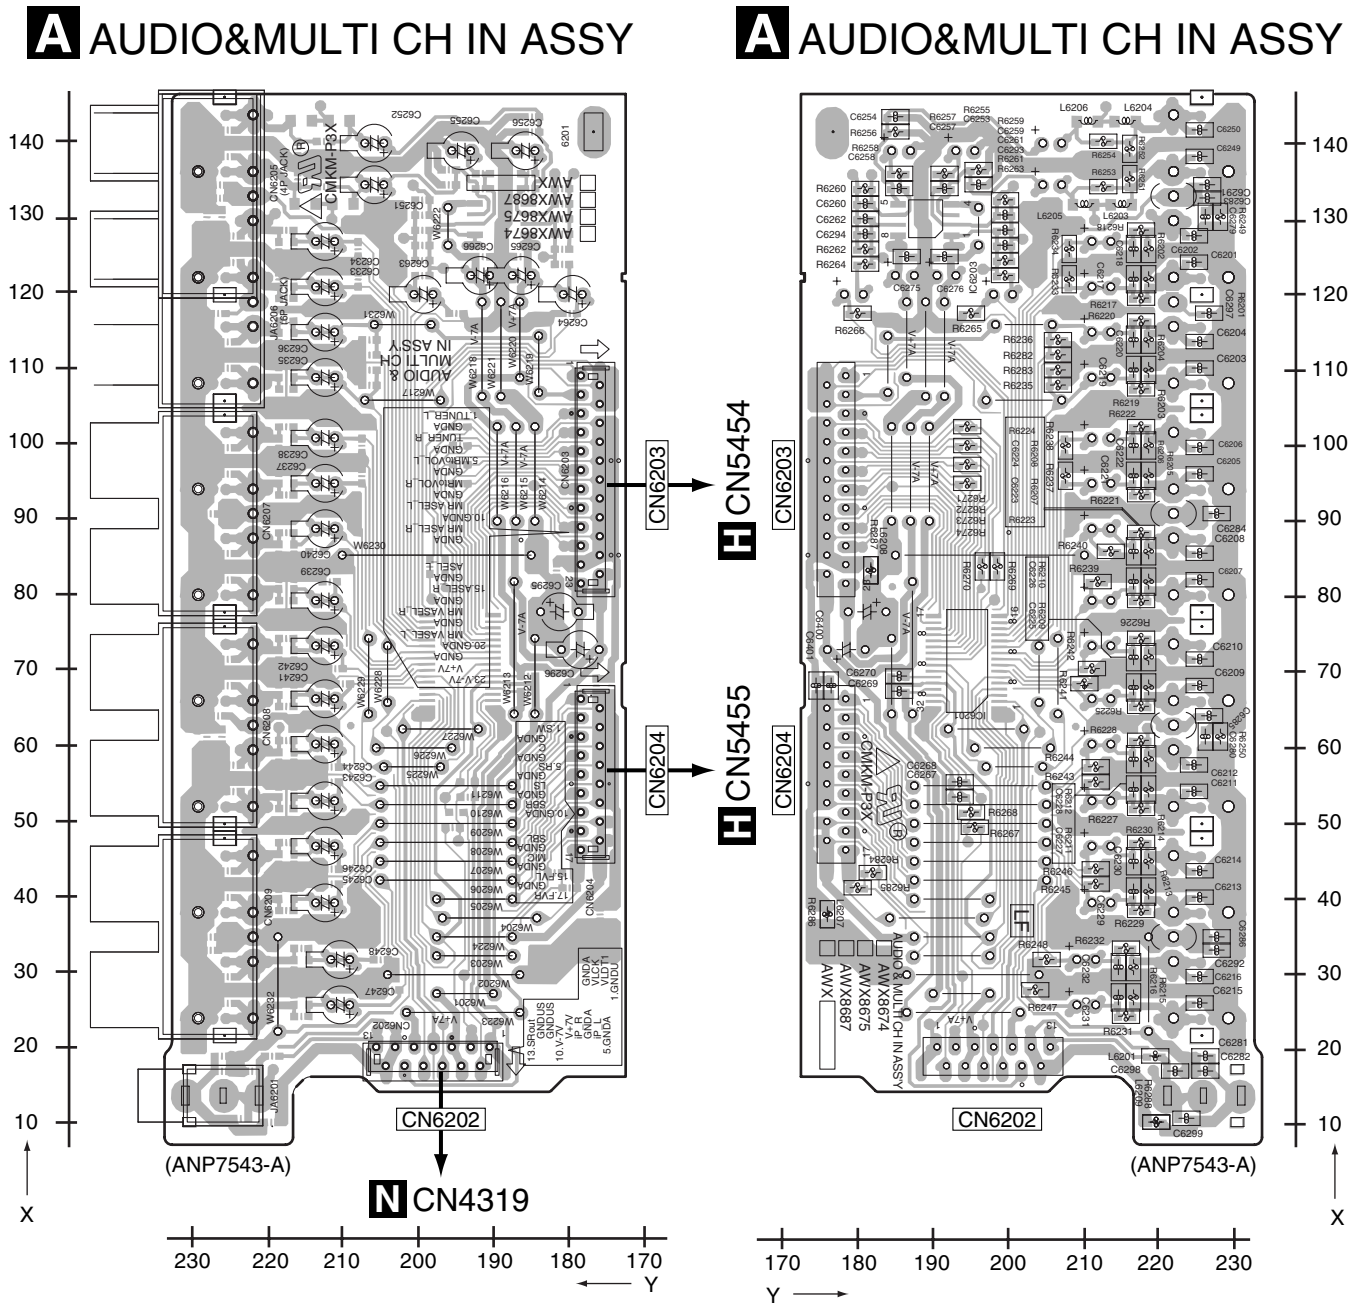

4.3 V-AUDIO ASSY

SIDE A **SIDE B**

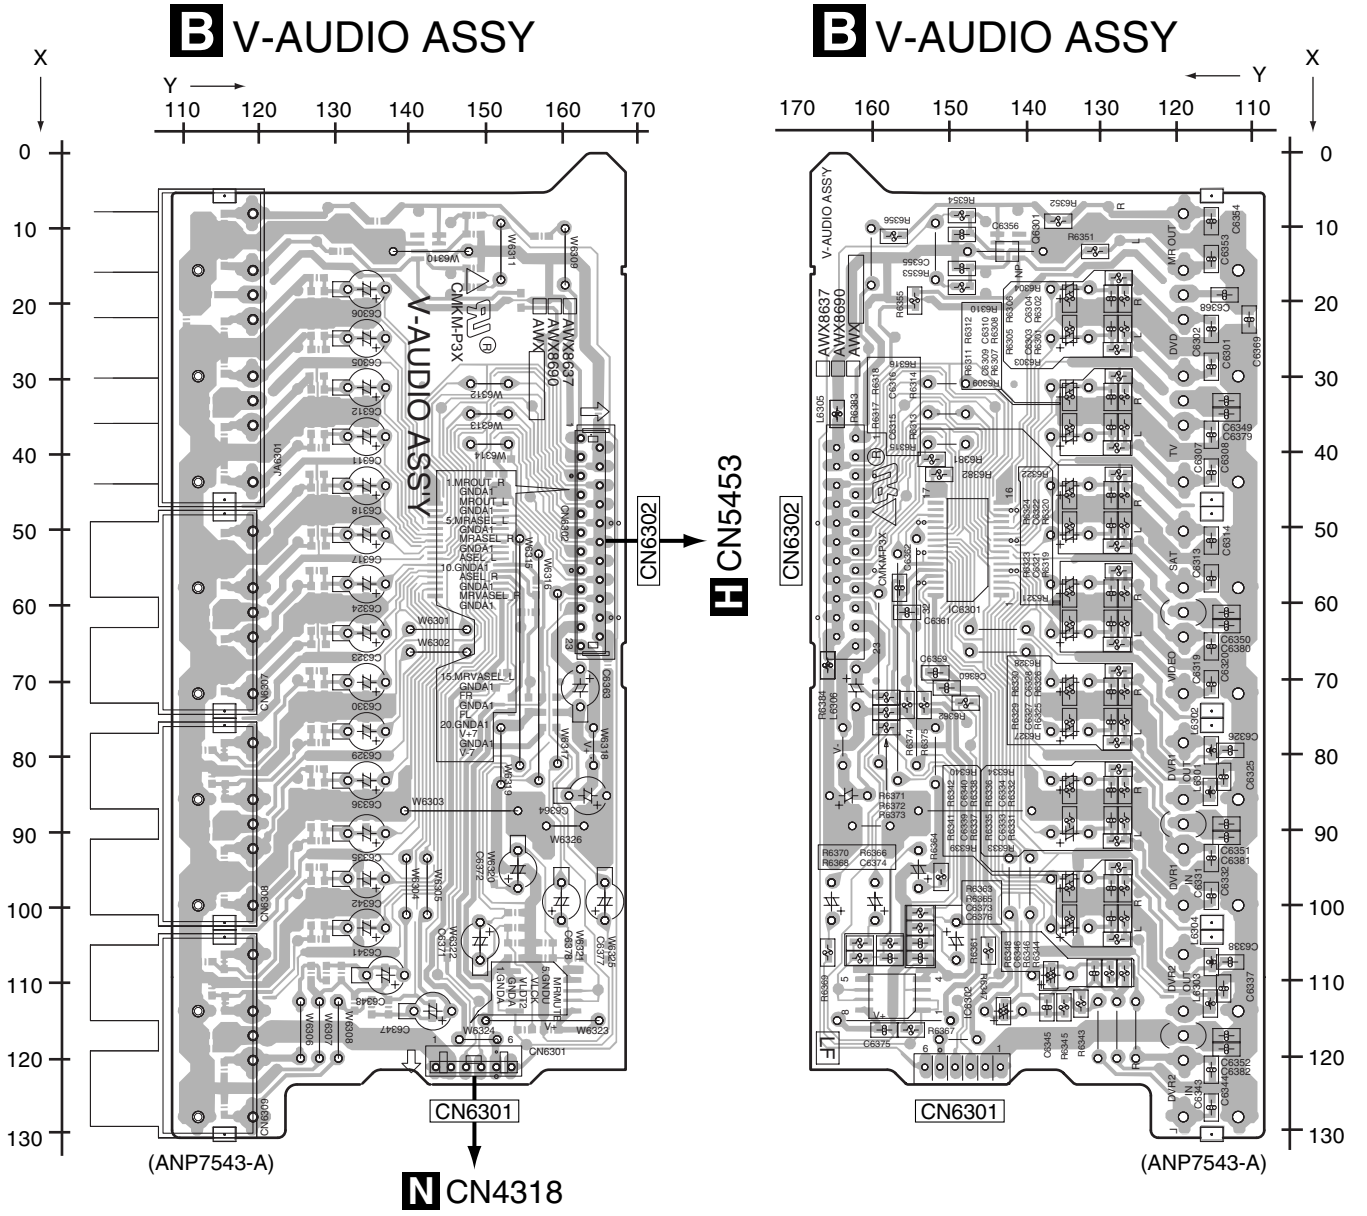


4.4 HEAD PHONE and FRONT-IN ASSYS


SIDE A

SIDE A

D HEAD PHONE ASSY

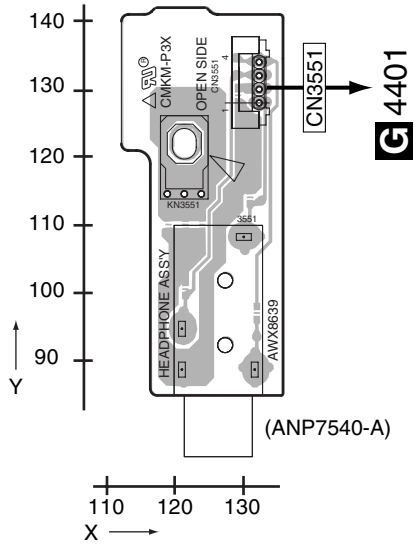


C FRONT-IN ASSY

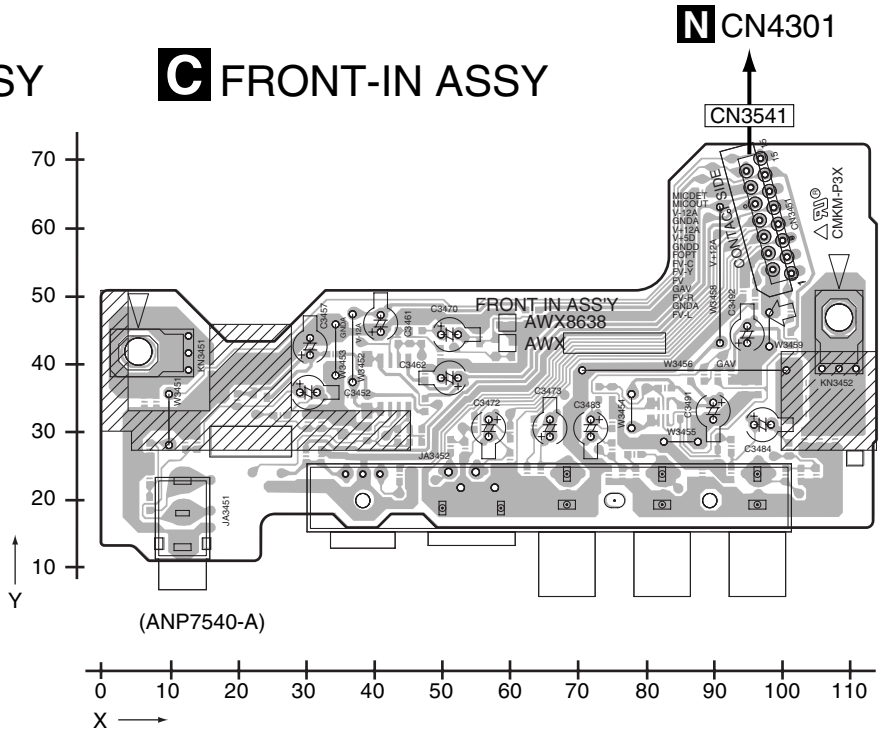


SIDE B

SIDE B

D HEAD PHONE ASSY

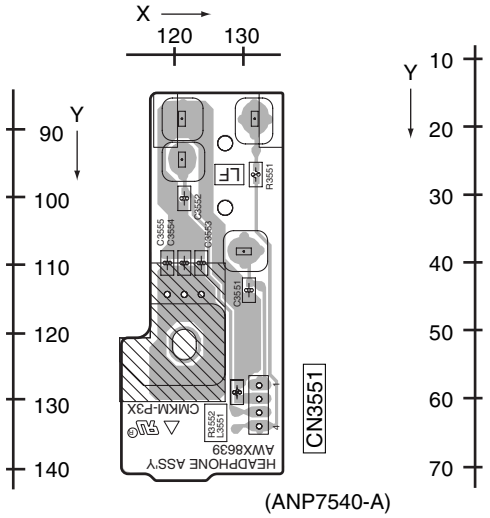

C FRONT-IN ASSY

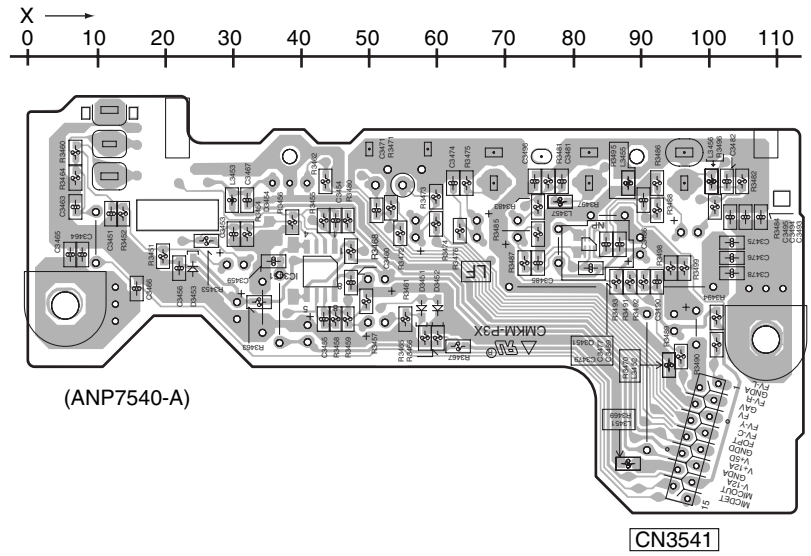


C D

C D

4.5 BRIDGE1 and BRIDGE2 ASSYS


SIDE A

E BRIDGE1 ASSY

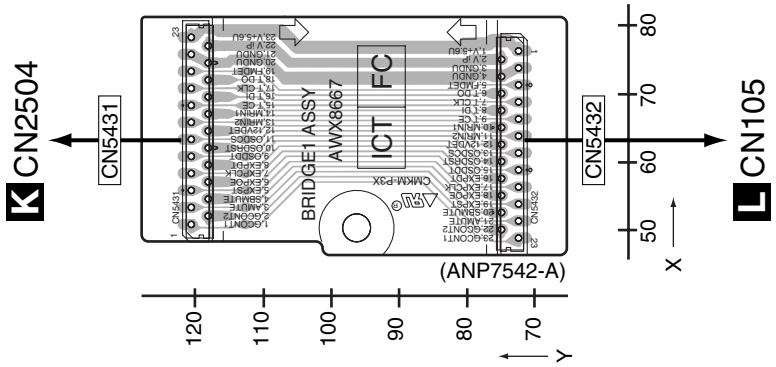

SIDE B


E BRIDGE1 ASSY

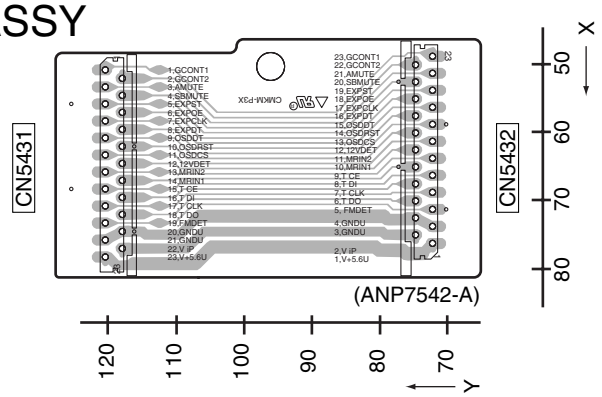

SIDE A


J CN2202

E BRIDGE2 ASSY

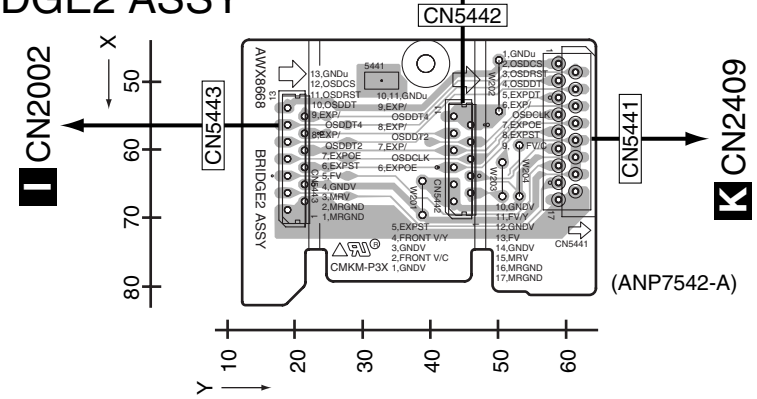

SIDE B

E BRIDGE2 ASSY

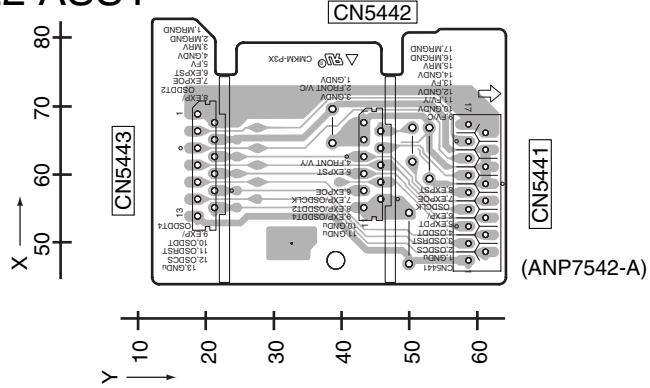


E **F**

E **F**

4.6 TRANS SIDE and BRIDGE3 ASSYs


SIDE A

G TRANS SIDE ASSY

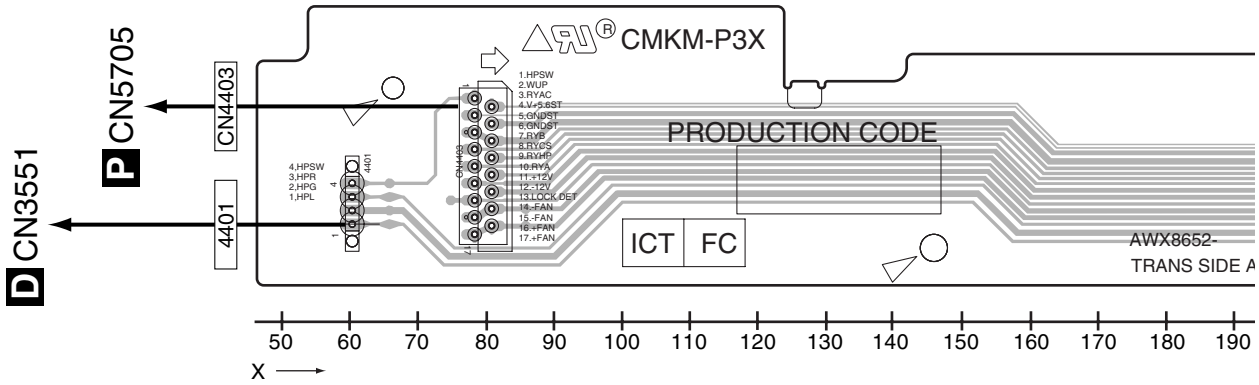


SIDE B

G TRANS SIDE ASSY

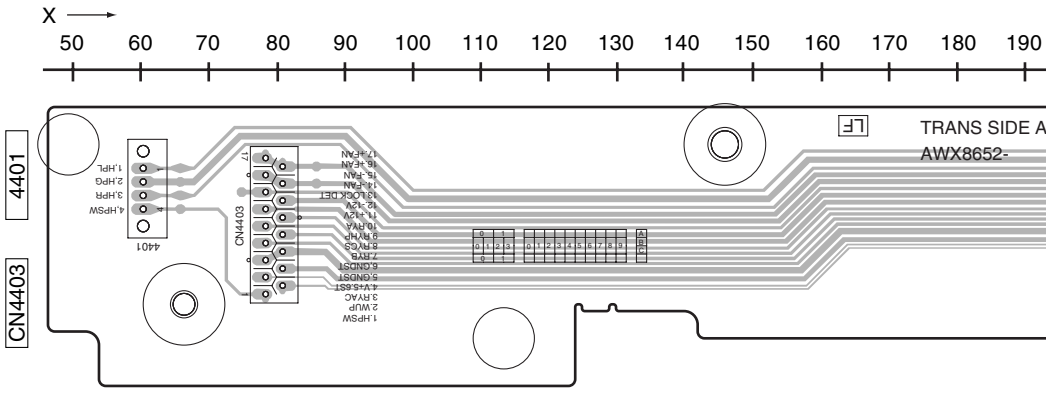


SIDE A

H BRIDGE3 ASSY

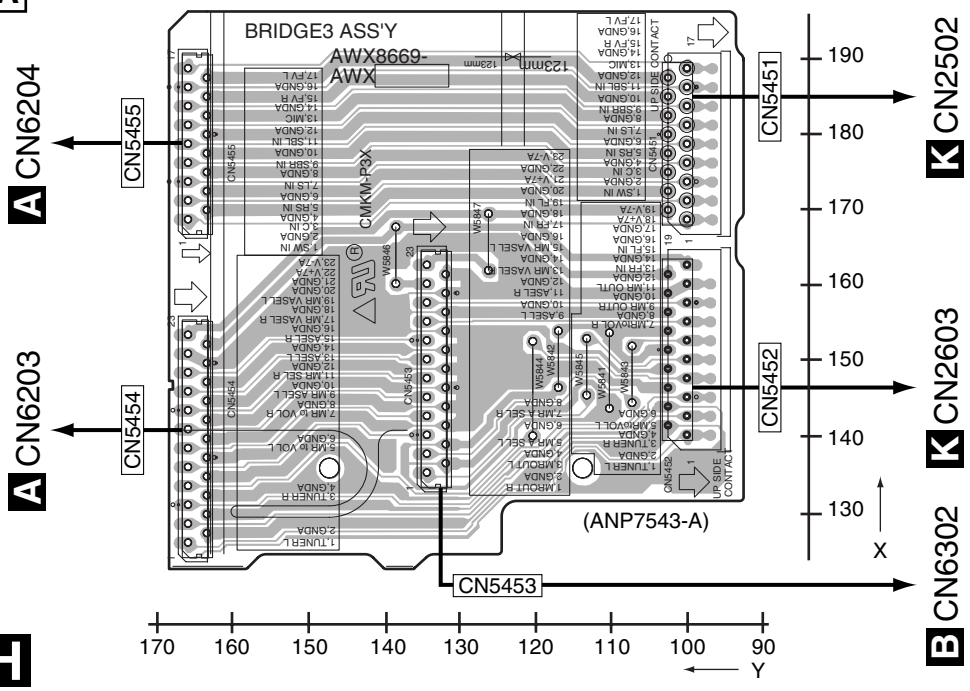


G **H**

SIDE A

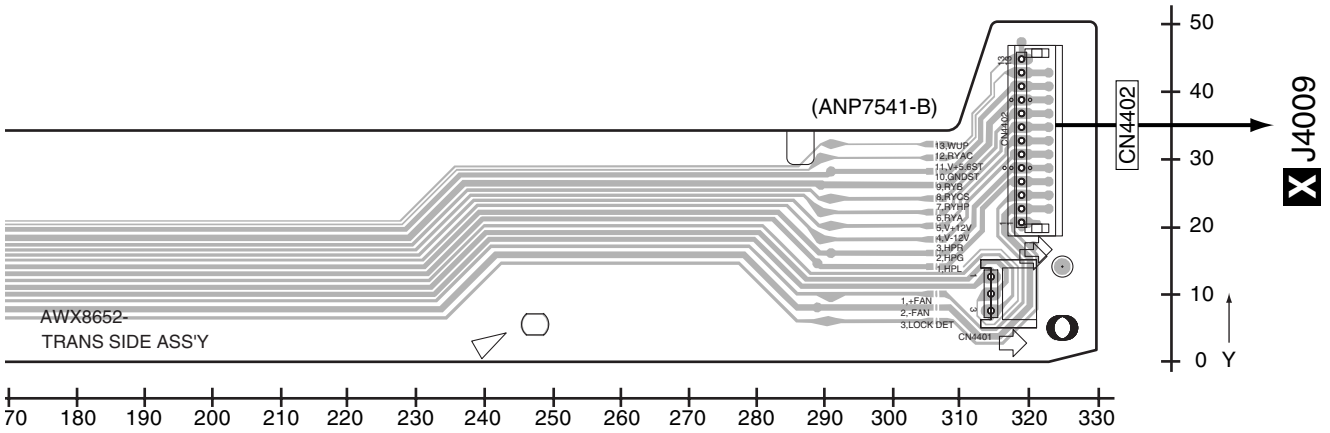


SIDE B

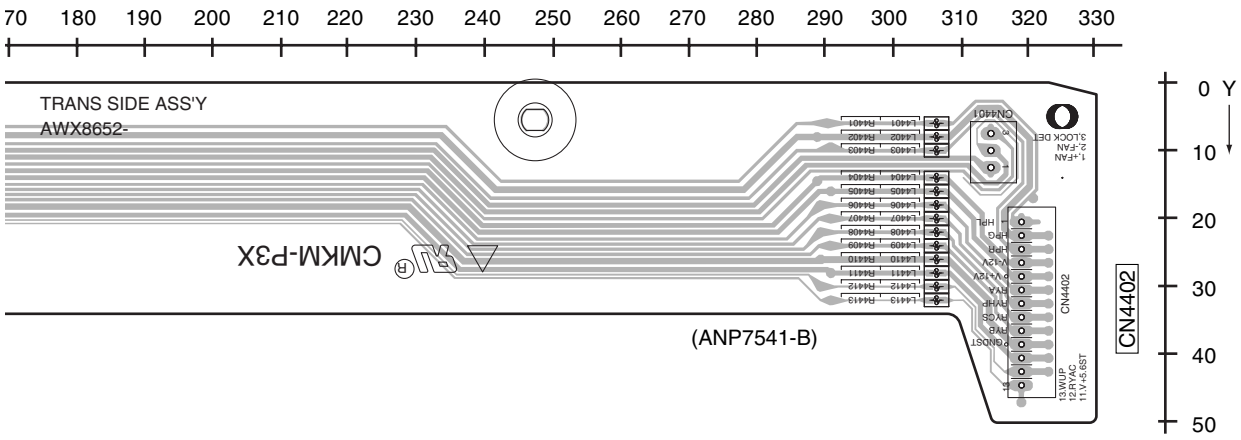

H BRIDGE3 ASSY

SIDE B

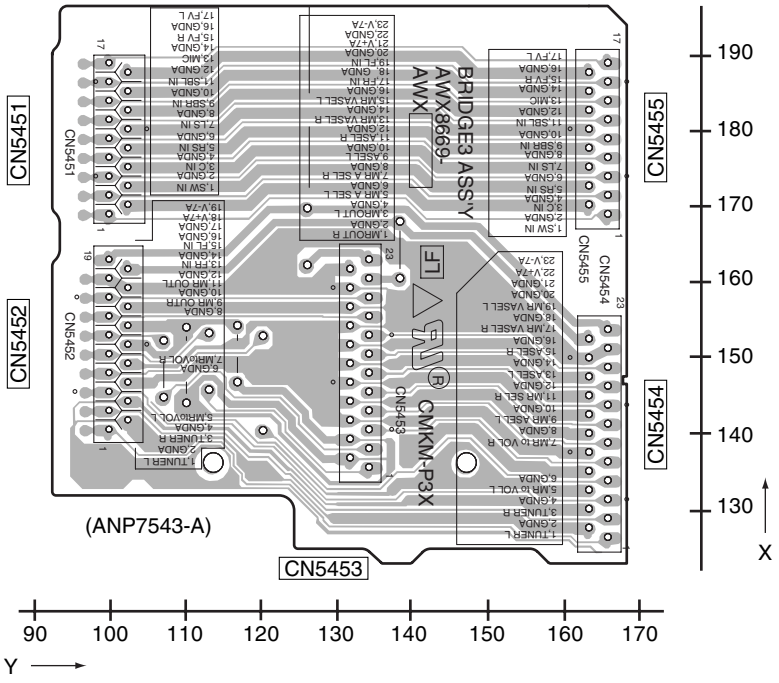


4.7 COMPOSITE V ASSYS


SIDE A

SIDE B

I COMPOSITE V ASSY

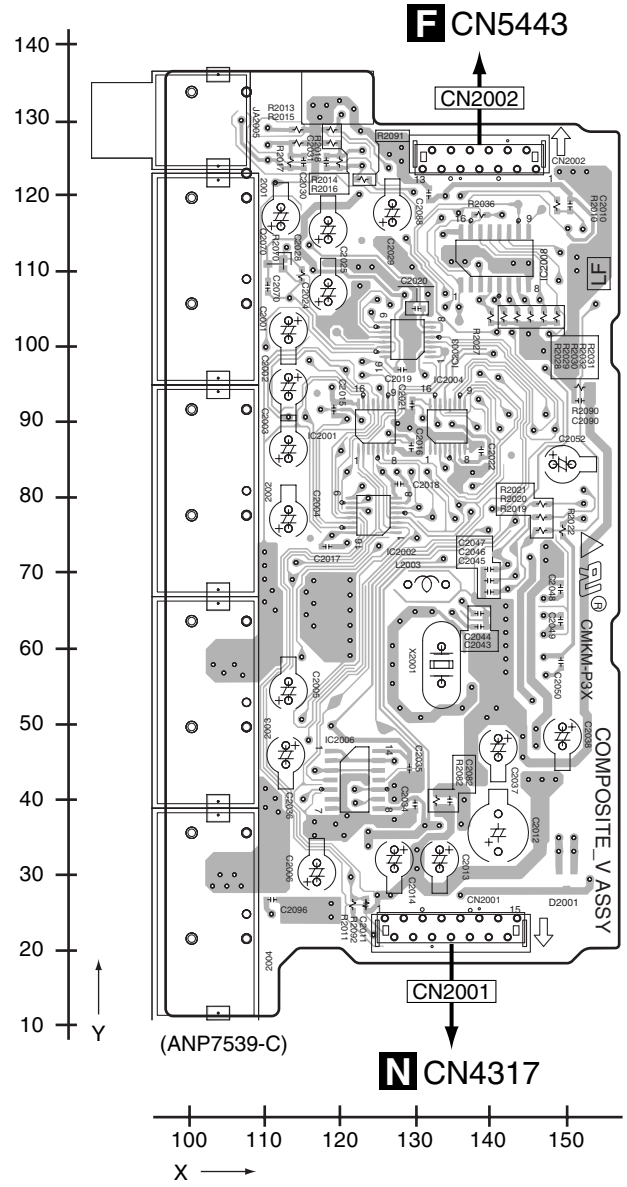

I COMPOSITE V ASSY

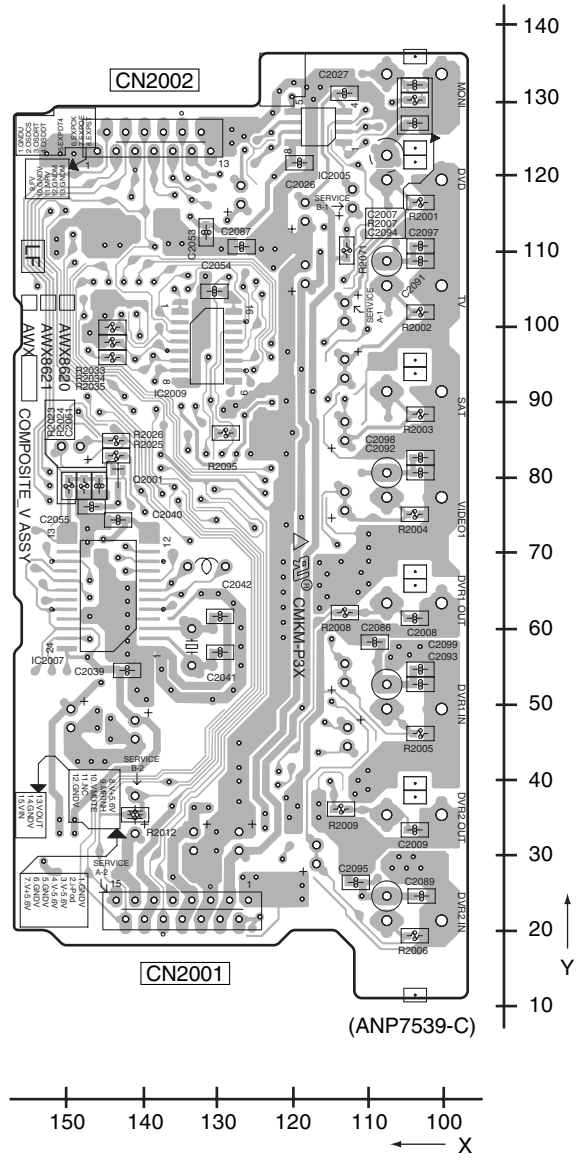


4.8 S-VIDEO ASSY


SIDE A

SIDE B

J S-VIDEO ASSY

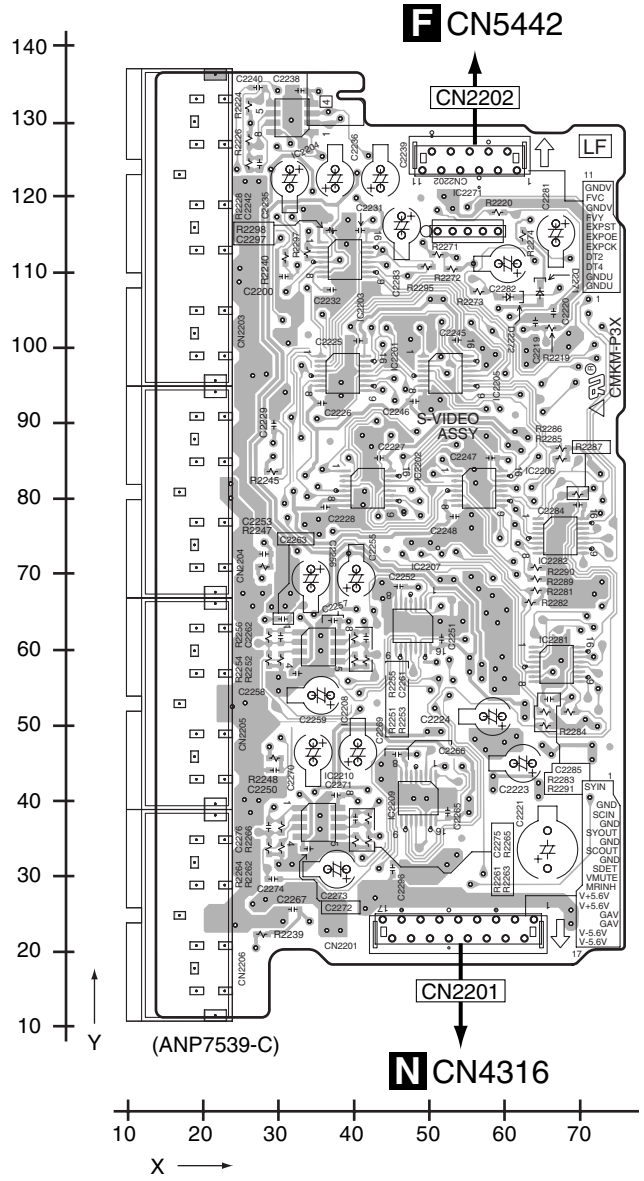


J S-VIDEO ASSY

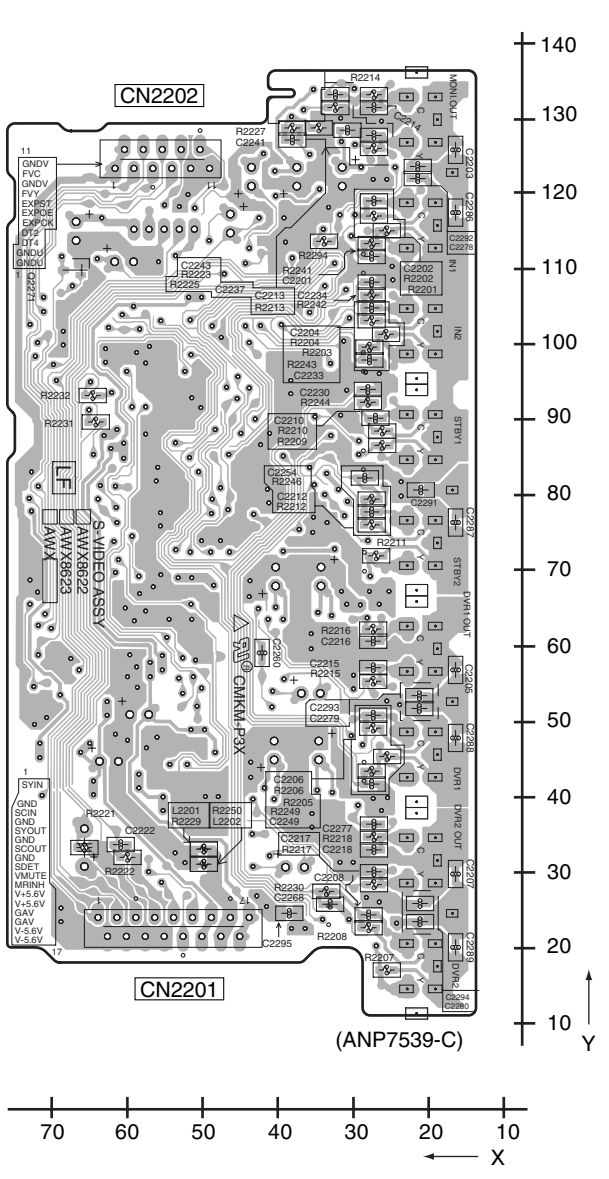


4.9 COMPONENT&VOL ASSY

SIDE A

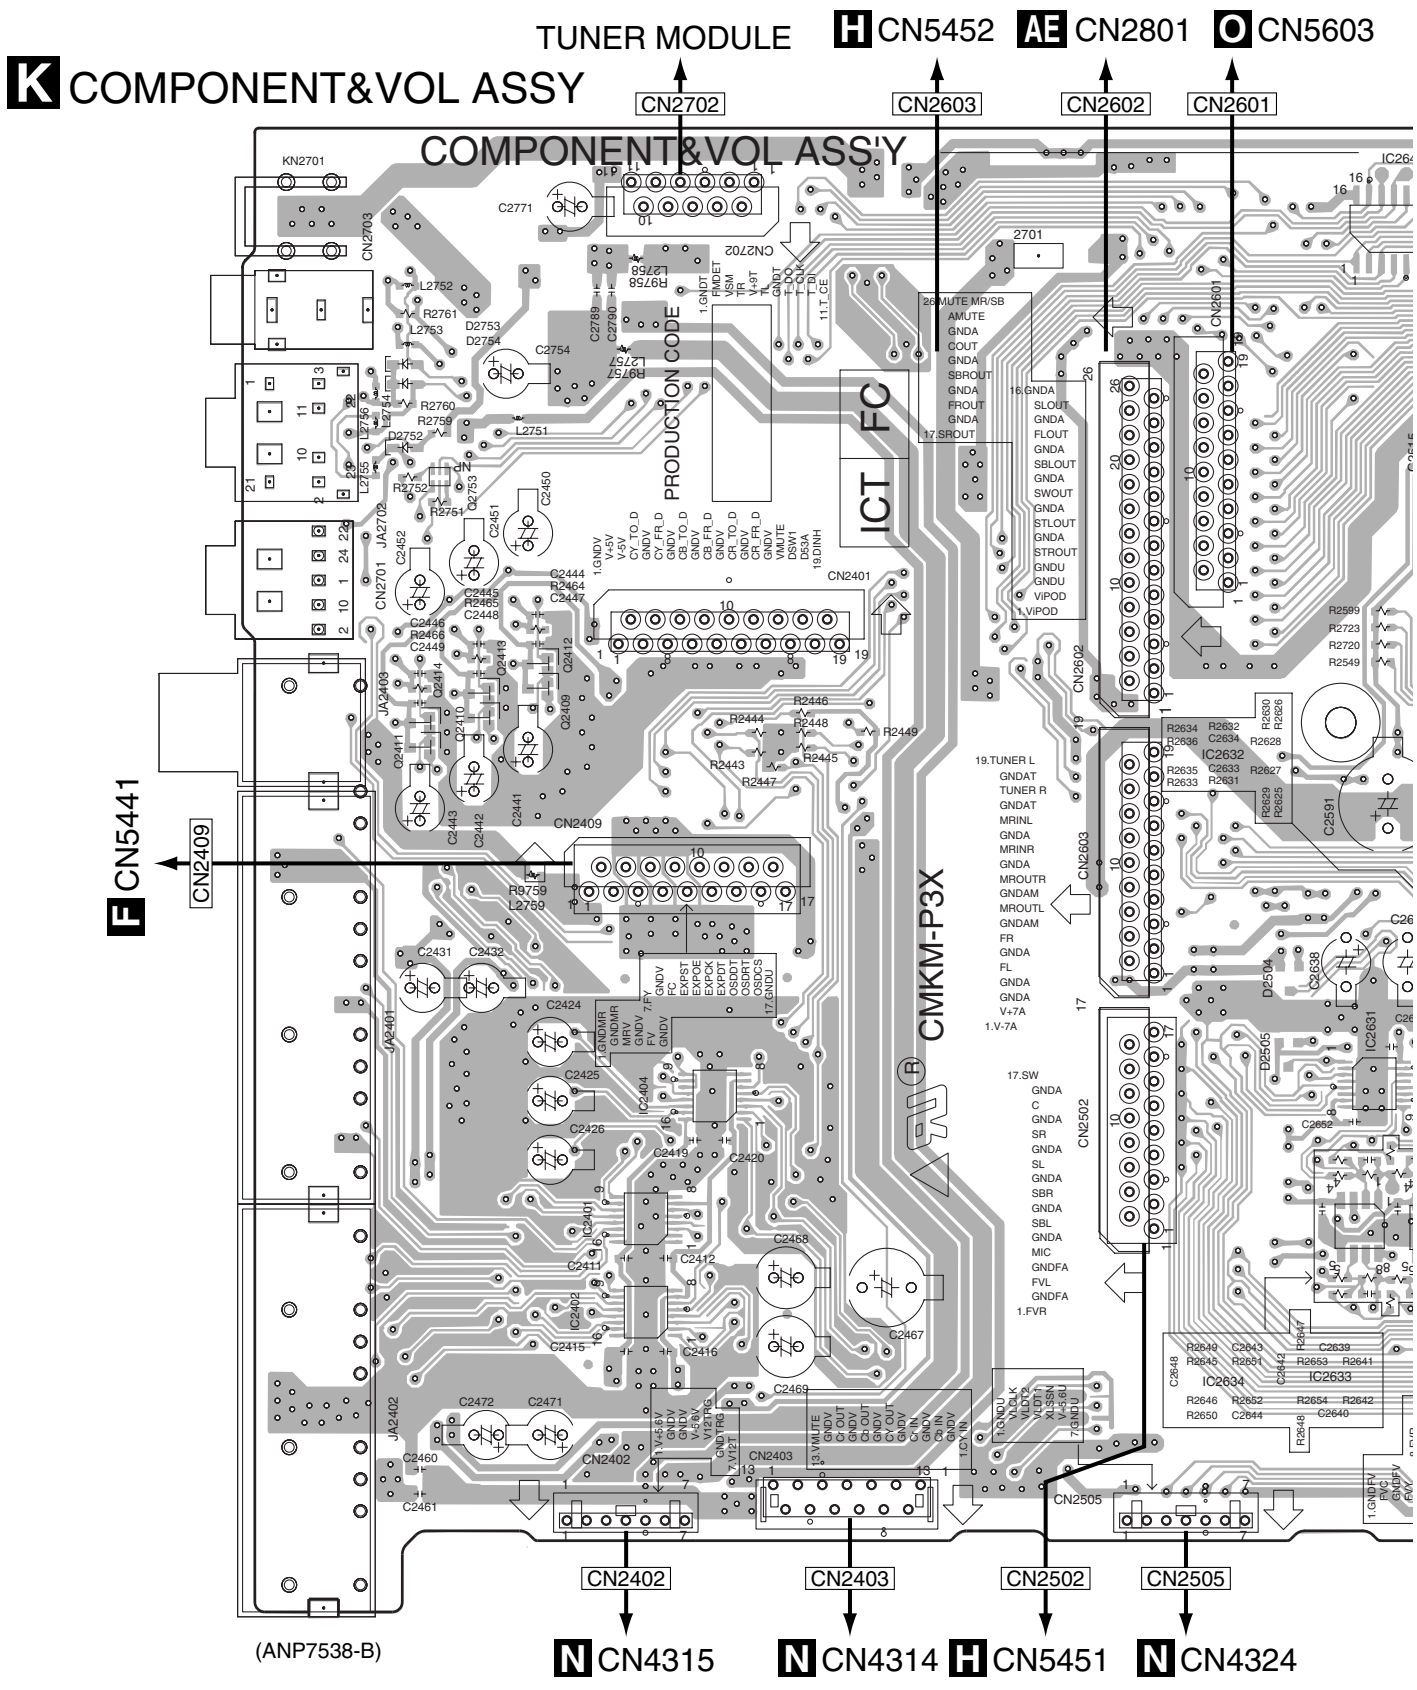


CN5603

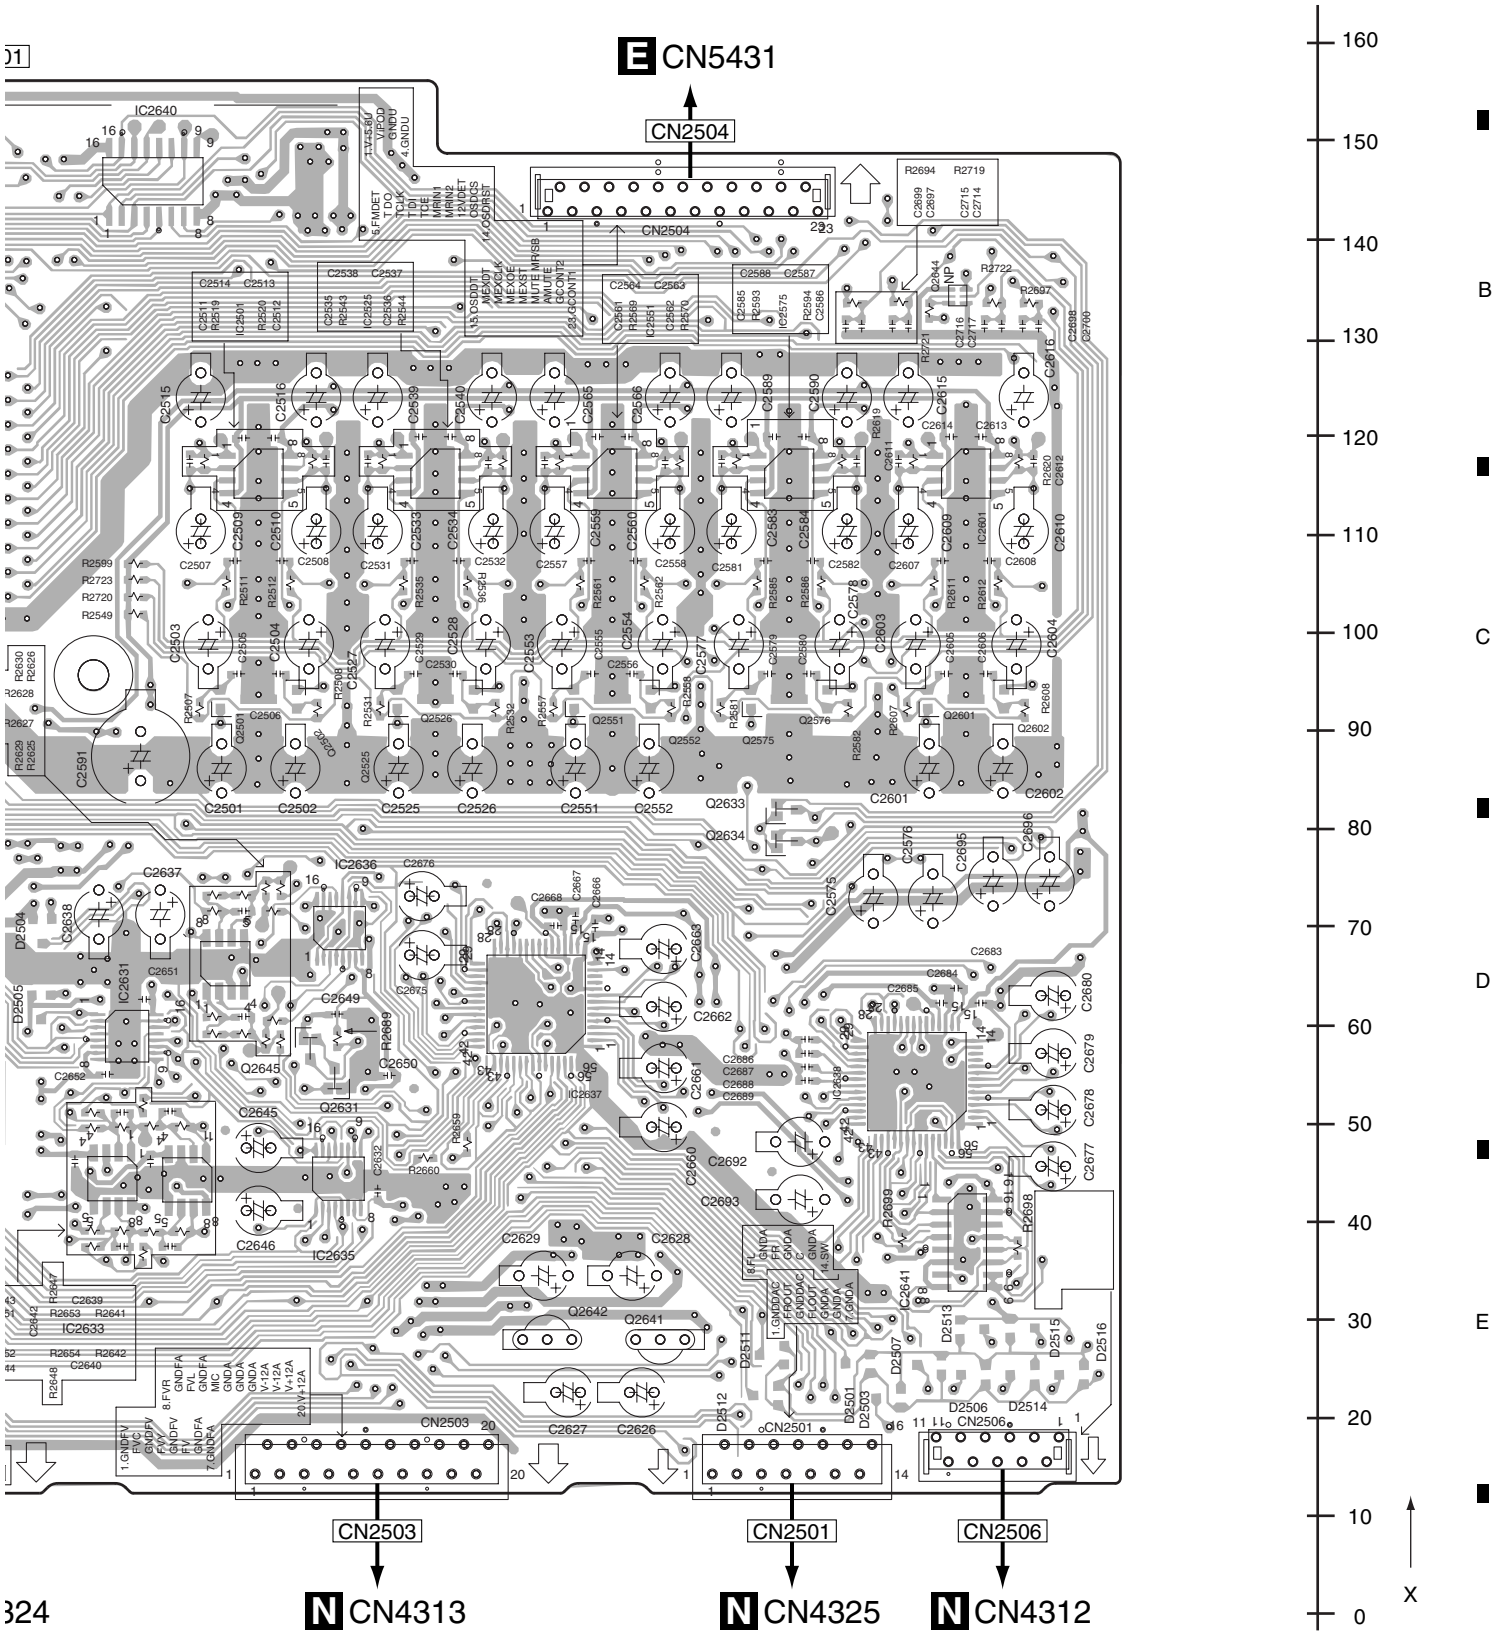

E CN5431
CN2504
IC2640
R2694
R2719
C2699
C2697
C2715
C2714
R2722
R2637
C2844
NP
C2716
C2717
C2698
C2766
C2616
C2515
C2516
C2539
C2540
C2565
C2566
C2589
C2590
C2615
C2614
C2613
R2619
C2611
R2620
C2612
C2610
C2509
C2510
C2533
C2534
C2558
C2560
C2583
C2584
C2609
C2608
C2507
C2508
C2531
C2532
C2557
C2558
C2581
C2582
C2607
IC2601
R2599
R2723
R2720
R2549
C2503
C2504
C2528
C2553
C2554
C2577
C2578
C2603
C2604
C2605
C2606
R2630
R2626
R2628
R2627
R2629
R2625
C2591
C2506
C2501
C2502
C2526
C2525
C2551
C2552
Q2526
Q2525
Q2551
Q2552
Q2575
Q2576
Q2601
Q2602
R2607
R2608
C2601
C2602
Q2633
Q2634
C2637
C2638
D2504
D2505
IC2631
C2651
C2649
C2650
C2652
Q2645
Q2631
C2645
C2646
IC2635
IC2636
C2676
C2675
C2668
C2667
C2666
C2663
C2662
C2661
C2660
C2692
C2693
C2683
C2684
C2685
C2680
C2679
C2678
C2677
C2698
C2639
C2653
R2641
IC2633
R2647
R2654
R2642
C2640
R2648
C2629
C2628
Q2642
Q2641
C2627
C2626
D2511
D2512
D2513
D2515
D2516
D2507
D2501
D2503
D2506
D2514
C2641
R2639
CN2503
CN2501
CN2506
N CN4313
N CN4325
N CN4312
X
Y
K

SIDE B

K COMPONENT&VOL ASSY

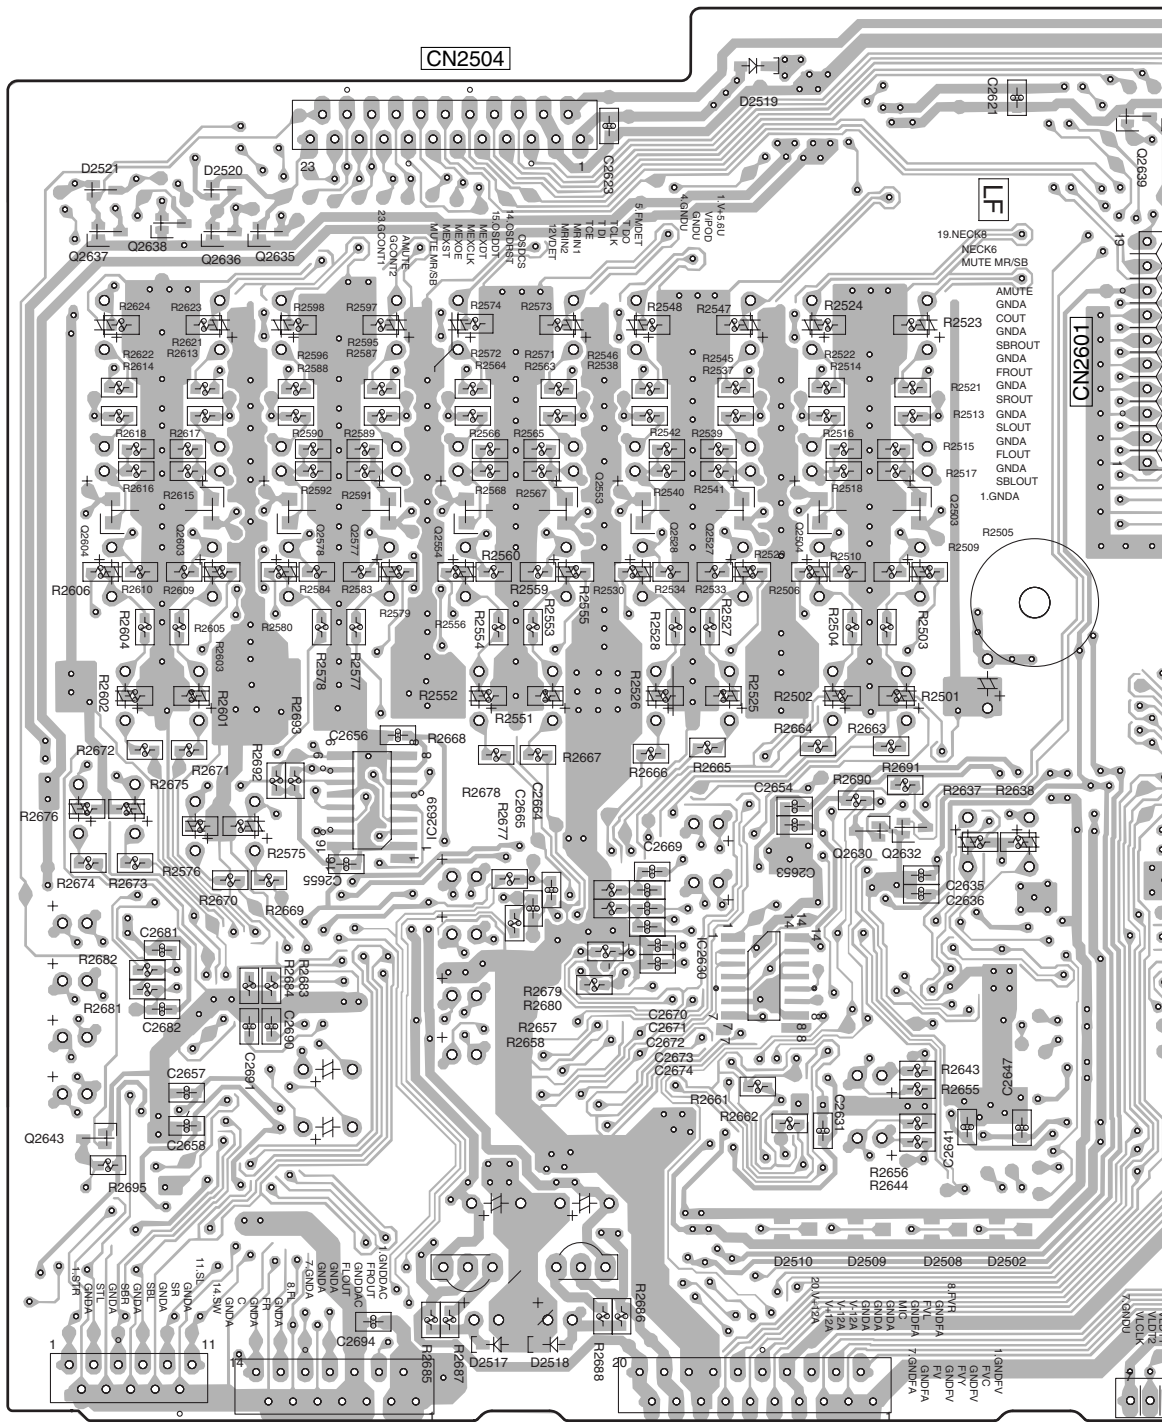


SIDE B

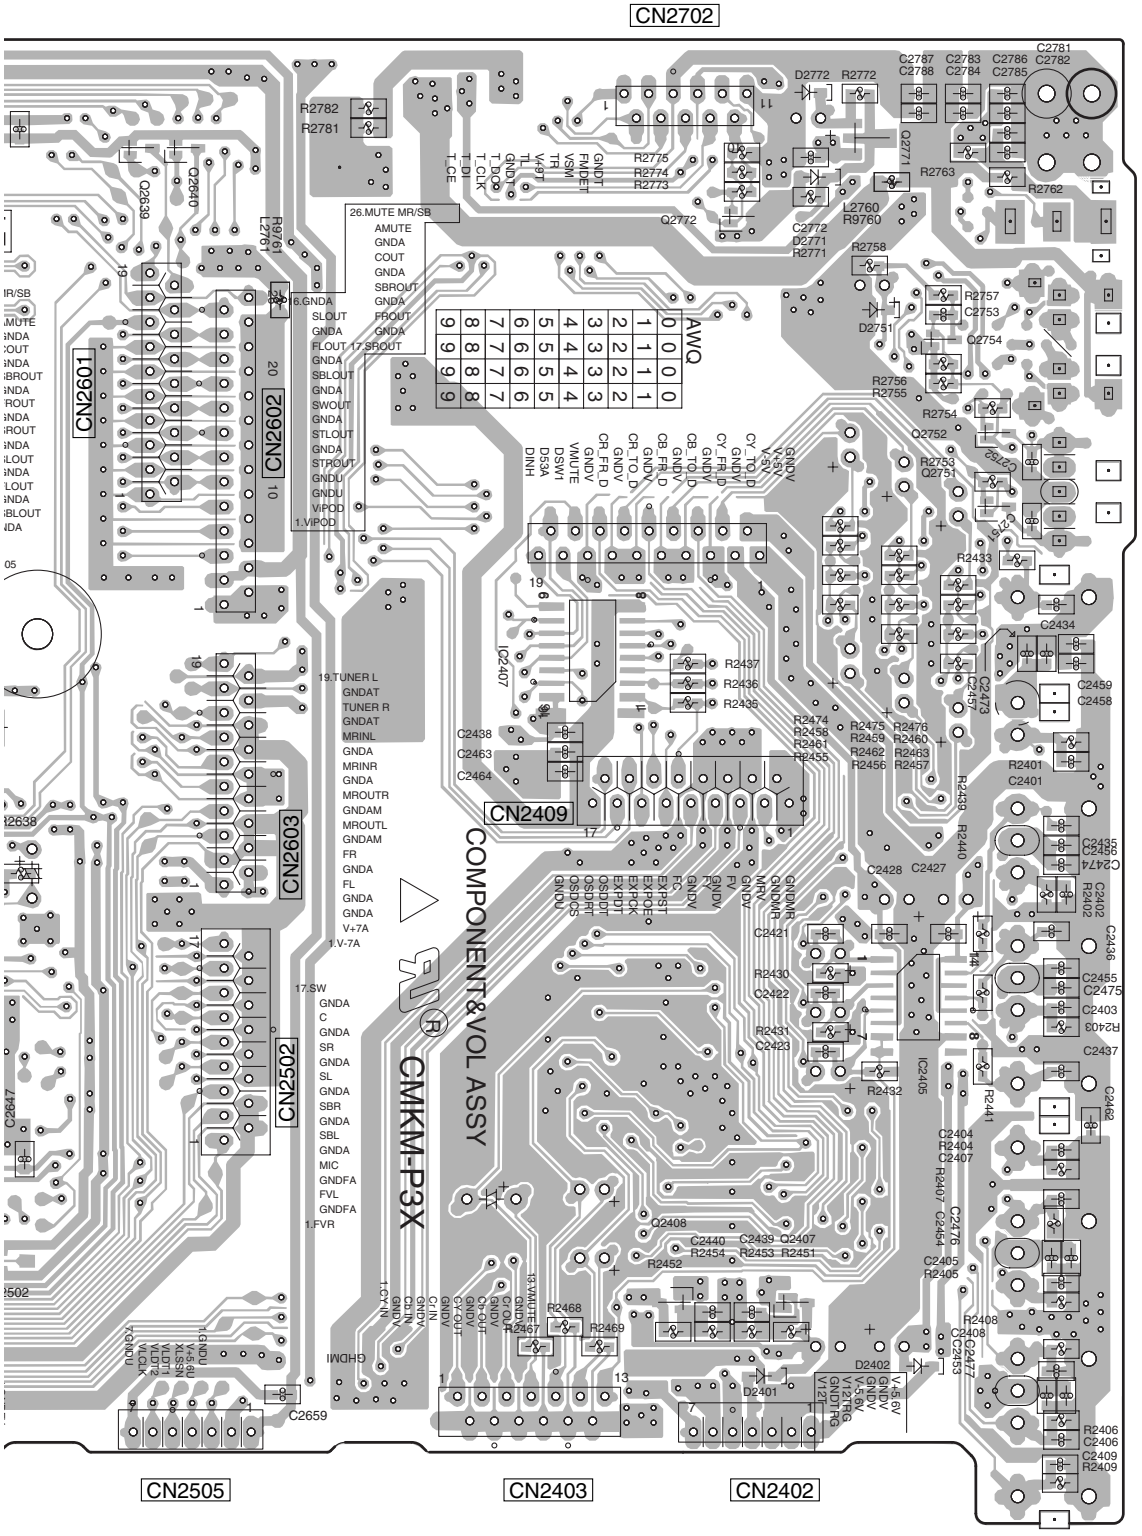

CN2702
CN2601
CN2602
CN2603
CN2502
CN2409
CN2505
CN2403
CN2402
COMPONENT&VOL ASSY
CMKM-P3X
(ANP7538-B)

4.10 DIGITAL MOTHER ASSY

SIDE A

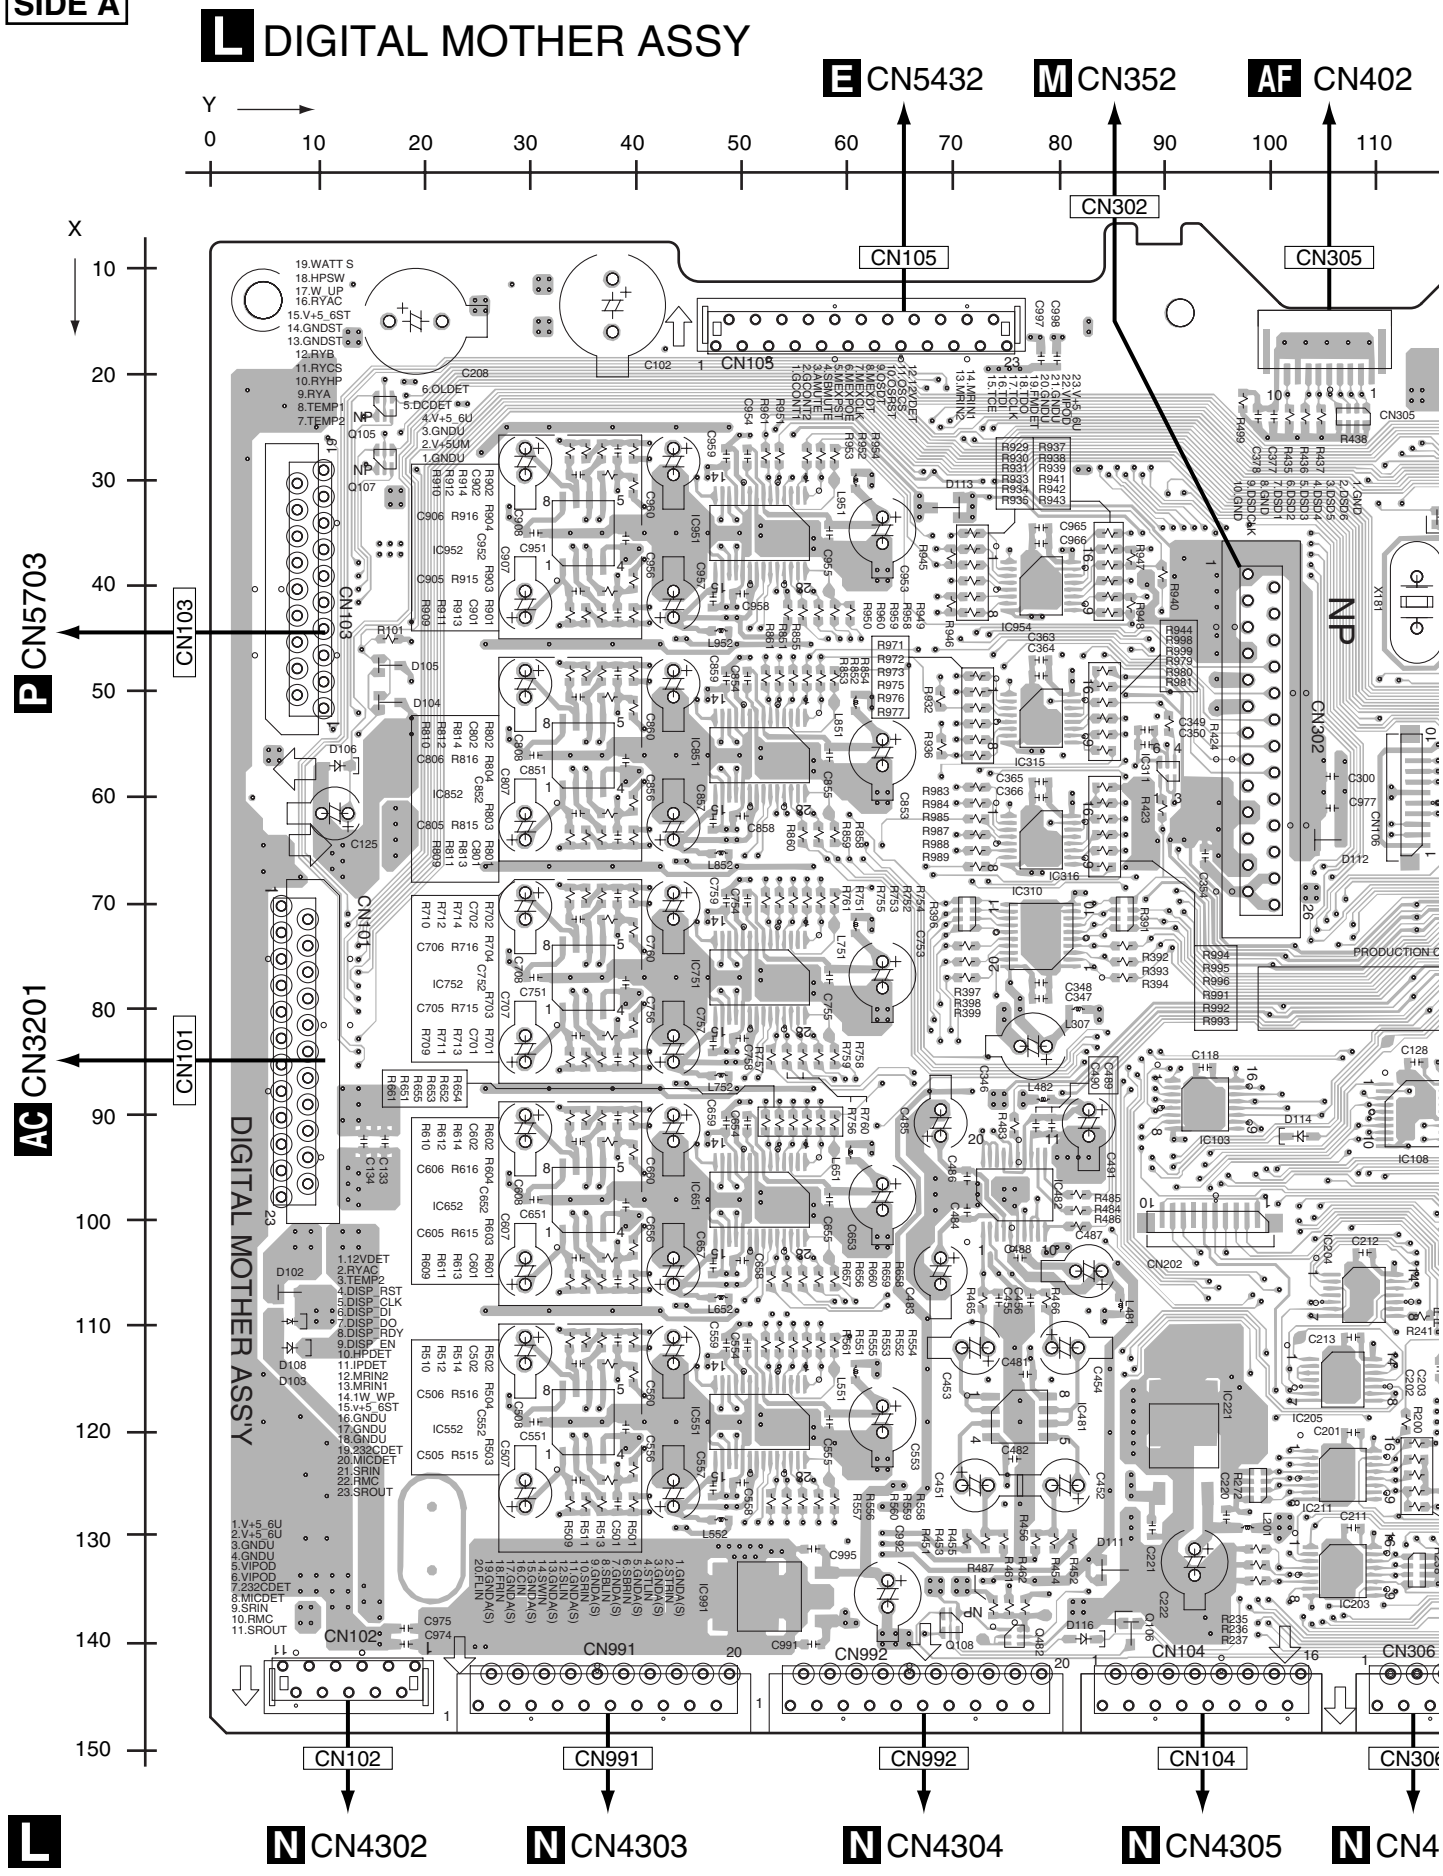


SIDE A

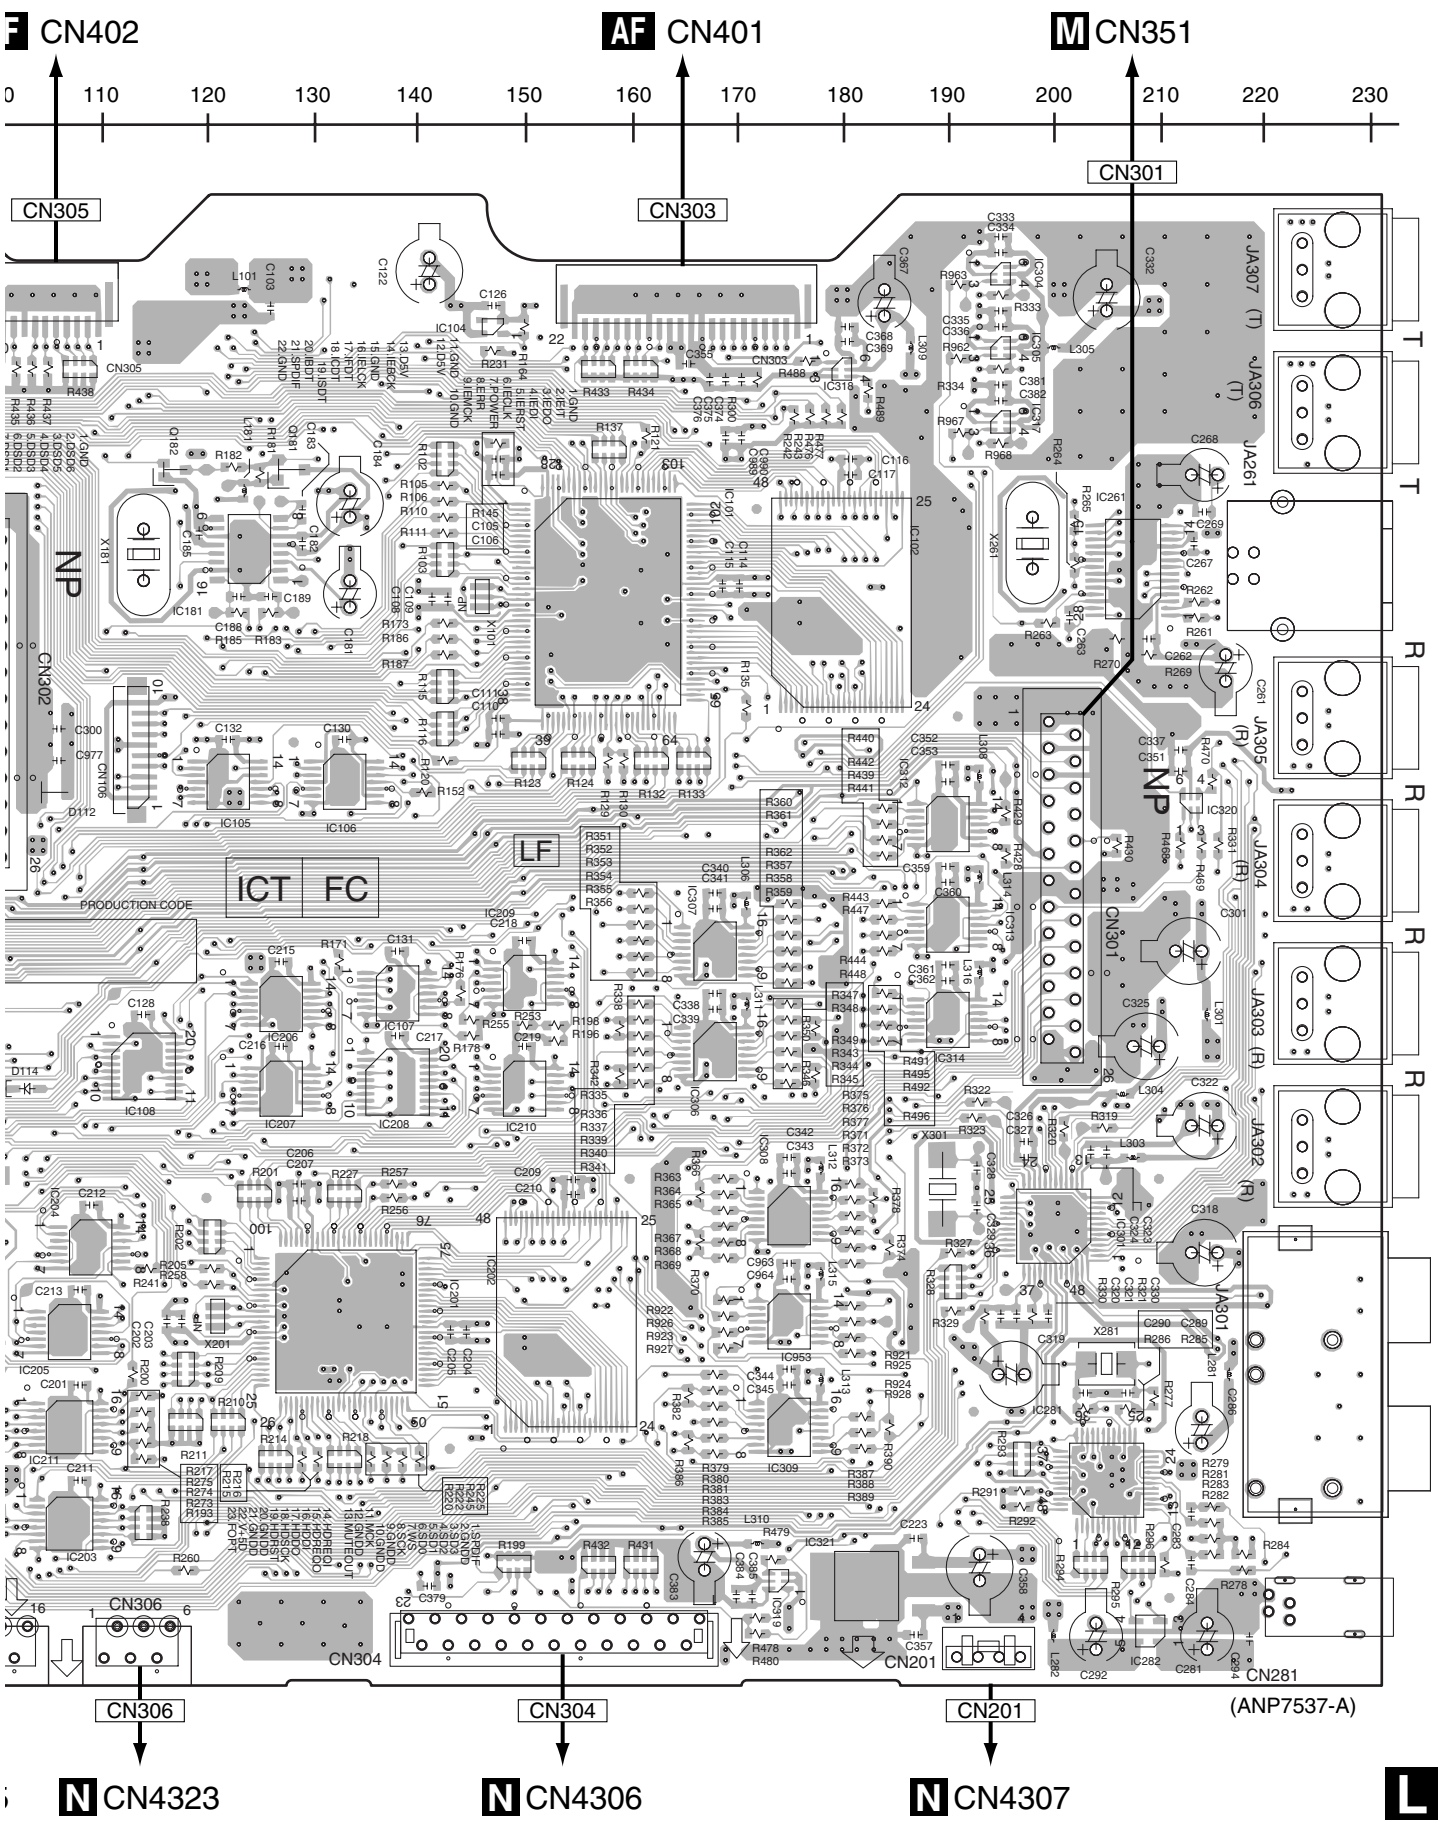

F CN402
AF CN401
M CN351
CN305
CN303
CN301
CN302
CN306
CN304
CN201
CN281
JA307 (T)
JA306 (T)
JA261
JA305 (R)
JA304 (R)
JA303 (R)
JA302 (R)
JA301
NP
LF
ICT
FC
PRODUCTION CODE
(ANP7537-A)
N CN4323
N CN4306
N CN4307

SIDE B

L DIGITAL MOTHER ASSY

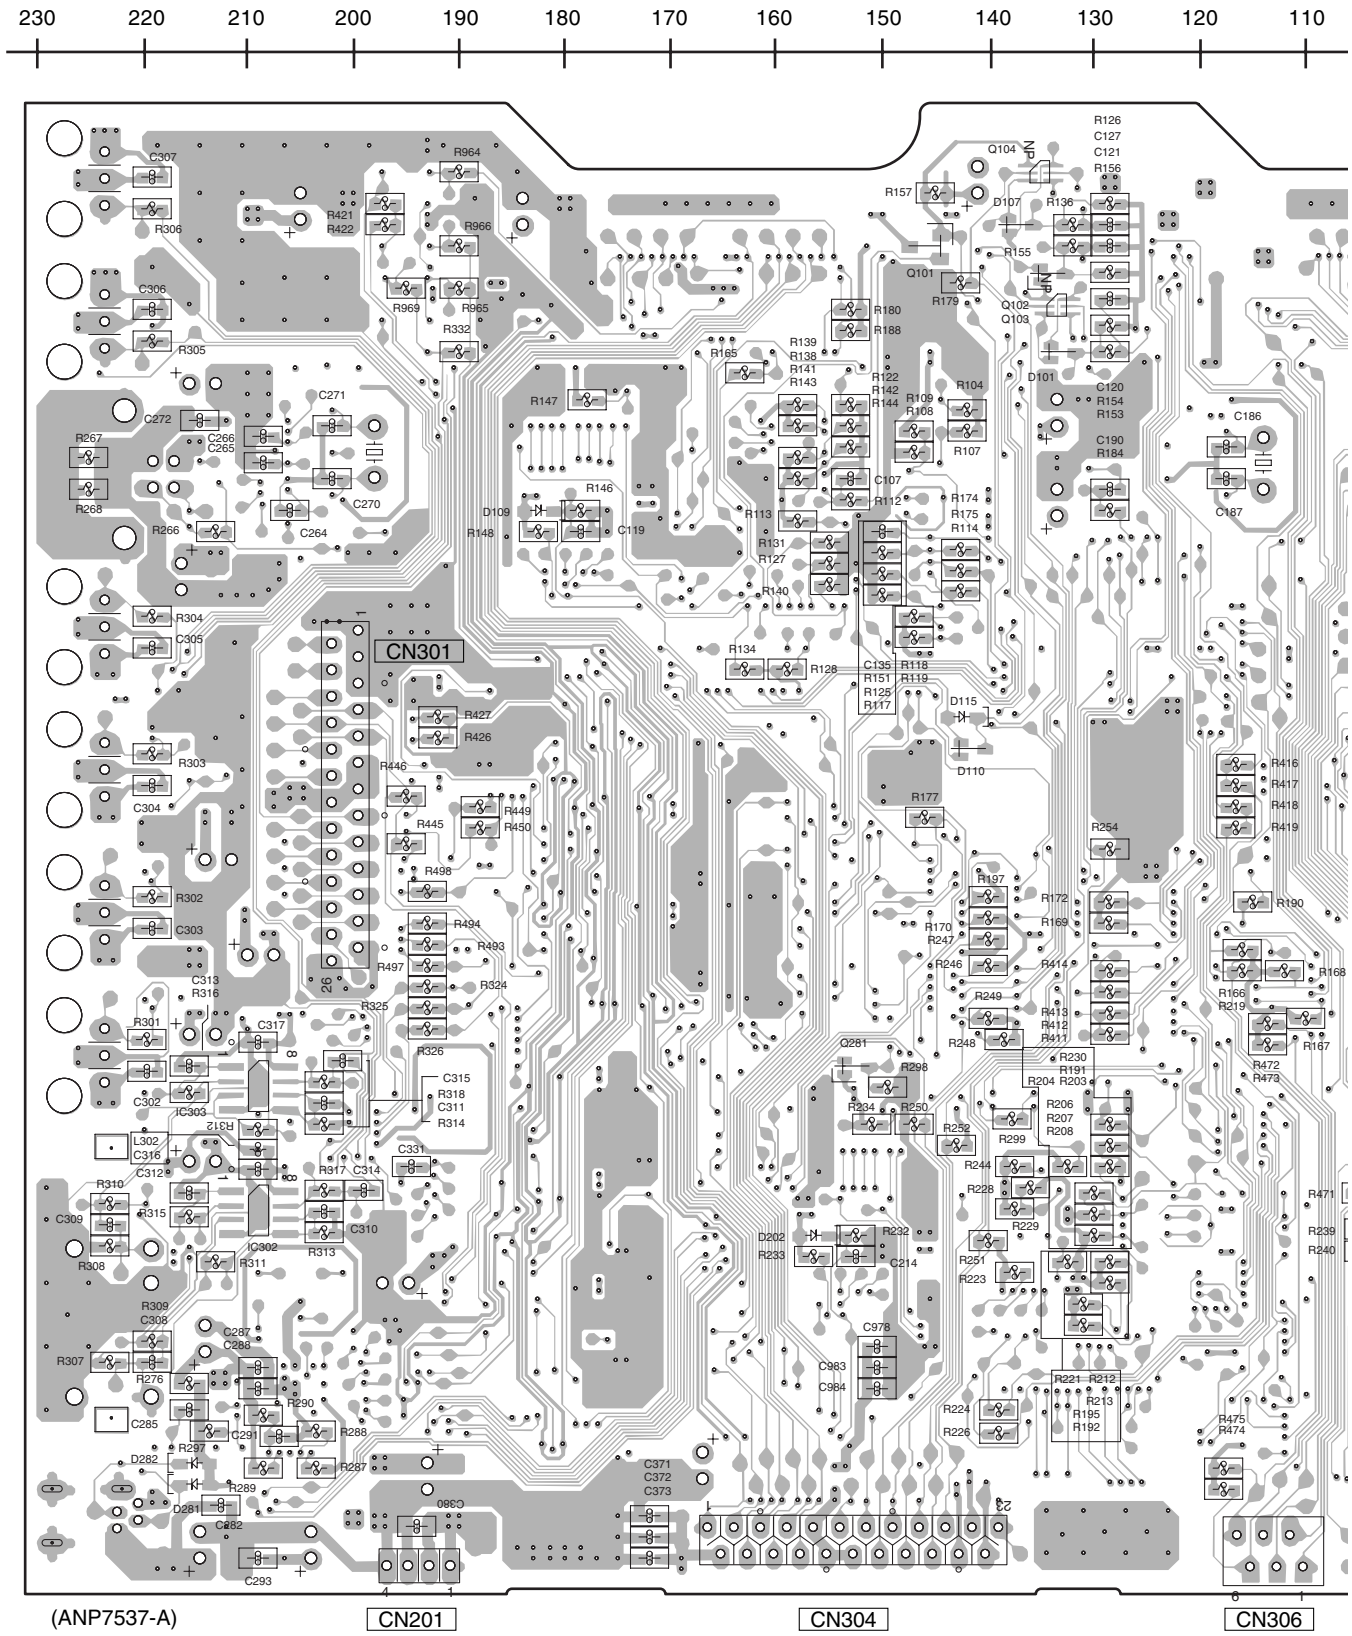


SIDE B

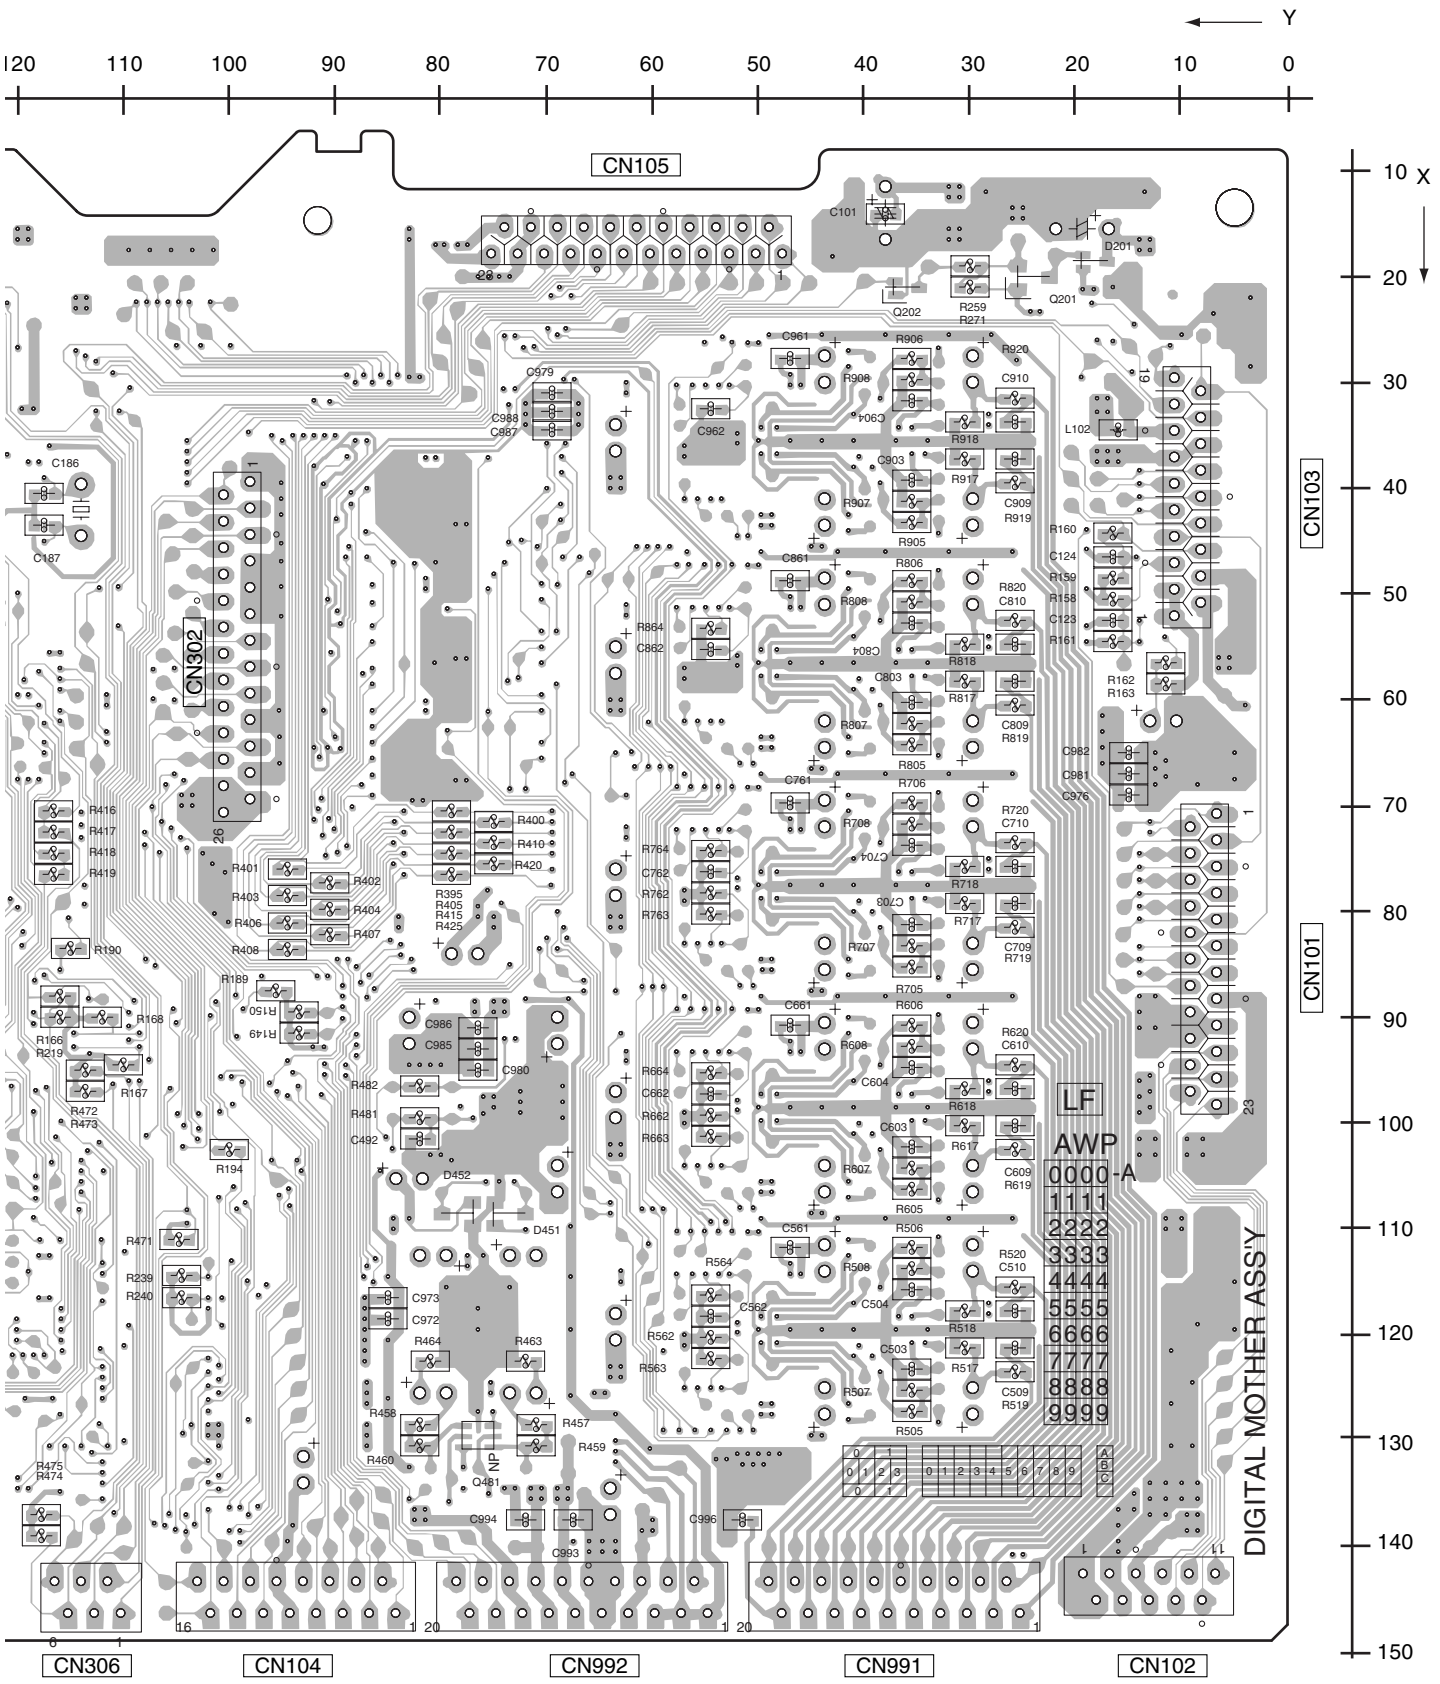
Y
120 110 100 90 80 70 60 50 40 30 20 10 0
X
10 20 30 40 50 60 70 80 90 100 110 120 130 140 150
A B C D E F
CN105
CN103
CN101
CN302
CN306
CN104
CN992
CN991
CN102
LF
AWP
0000-A
1111
2222
3333
4444
5555
6666
7777
8888
9999
DIGITAL MOTHER ASS'Y

4.11 DSP ASSY


SIDE A **SIDE A**

M DSP ASSY

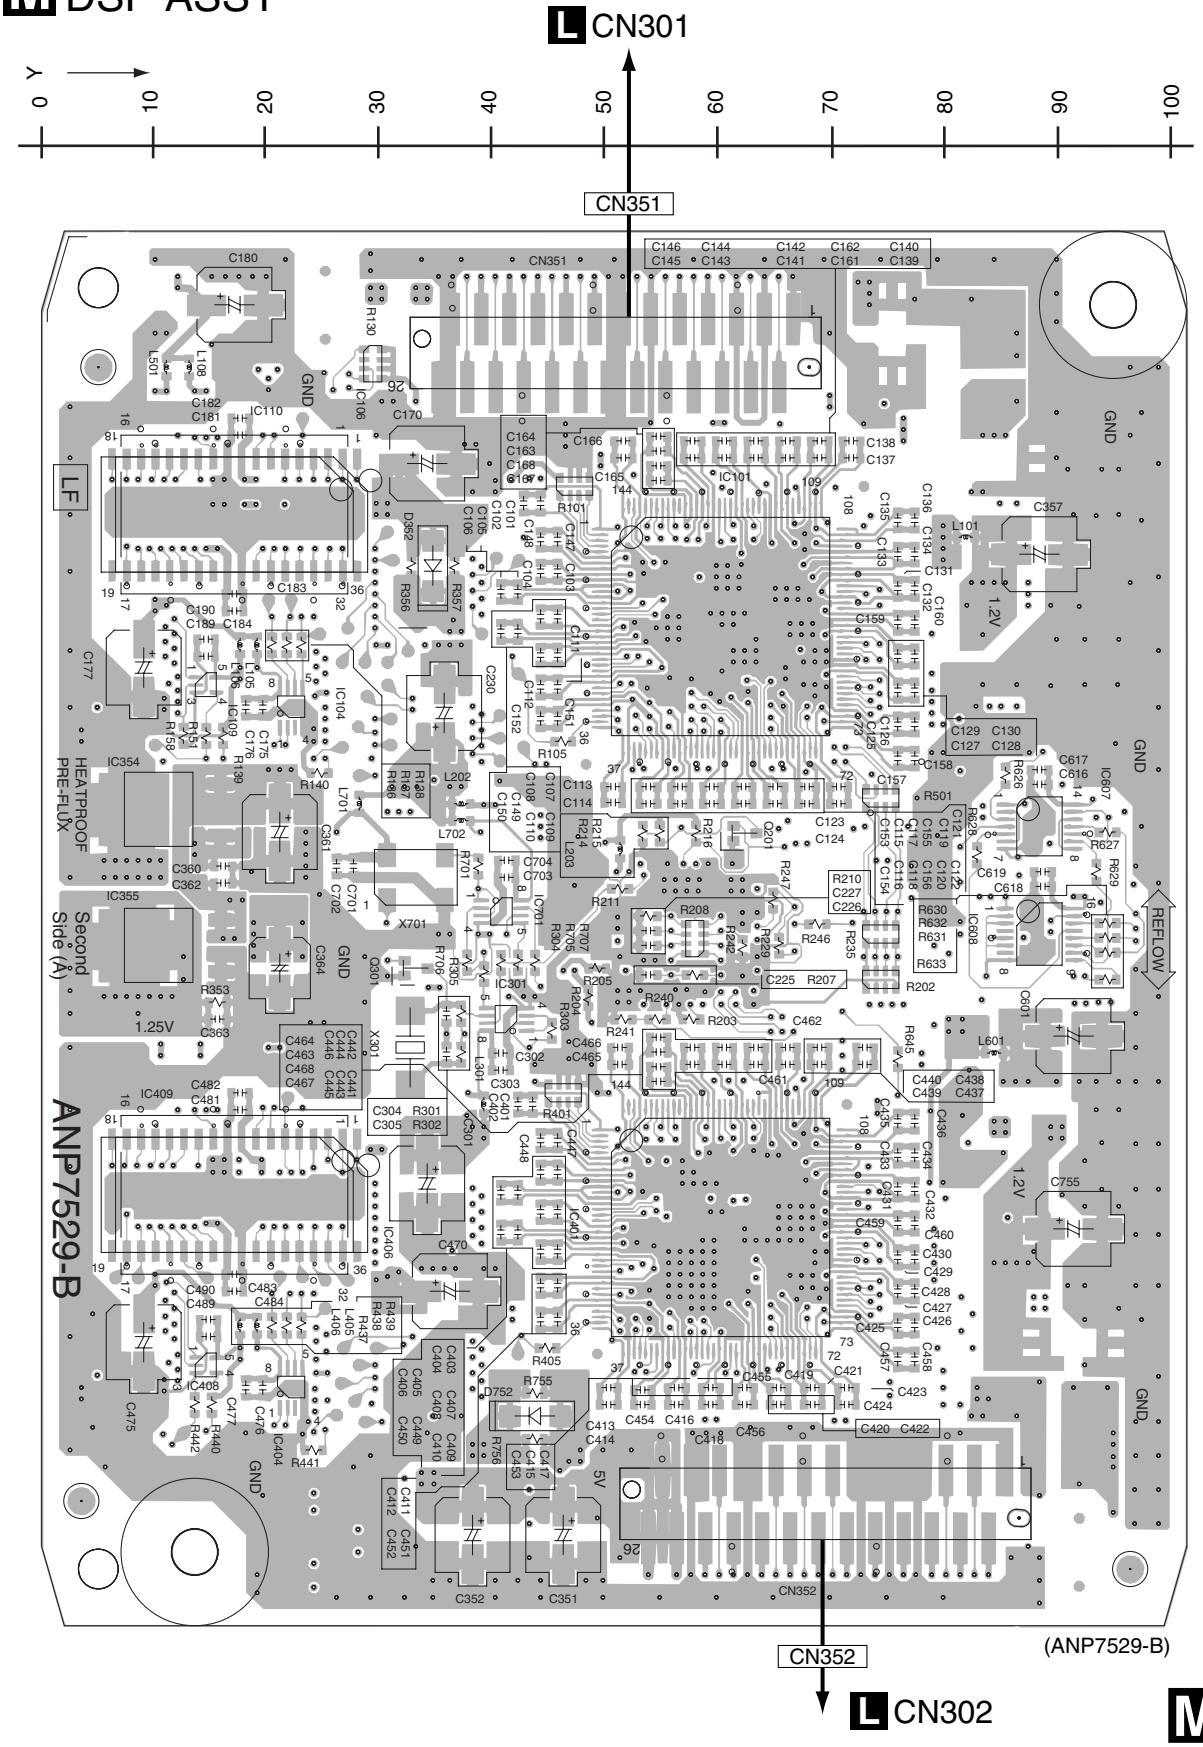

SIDE B


M DSP ASSY

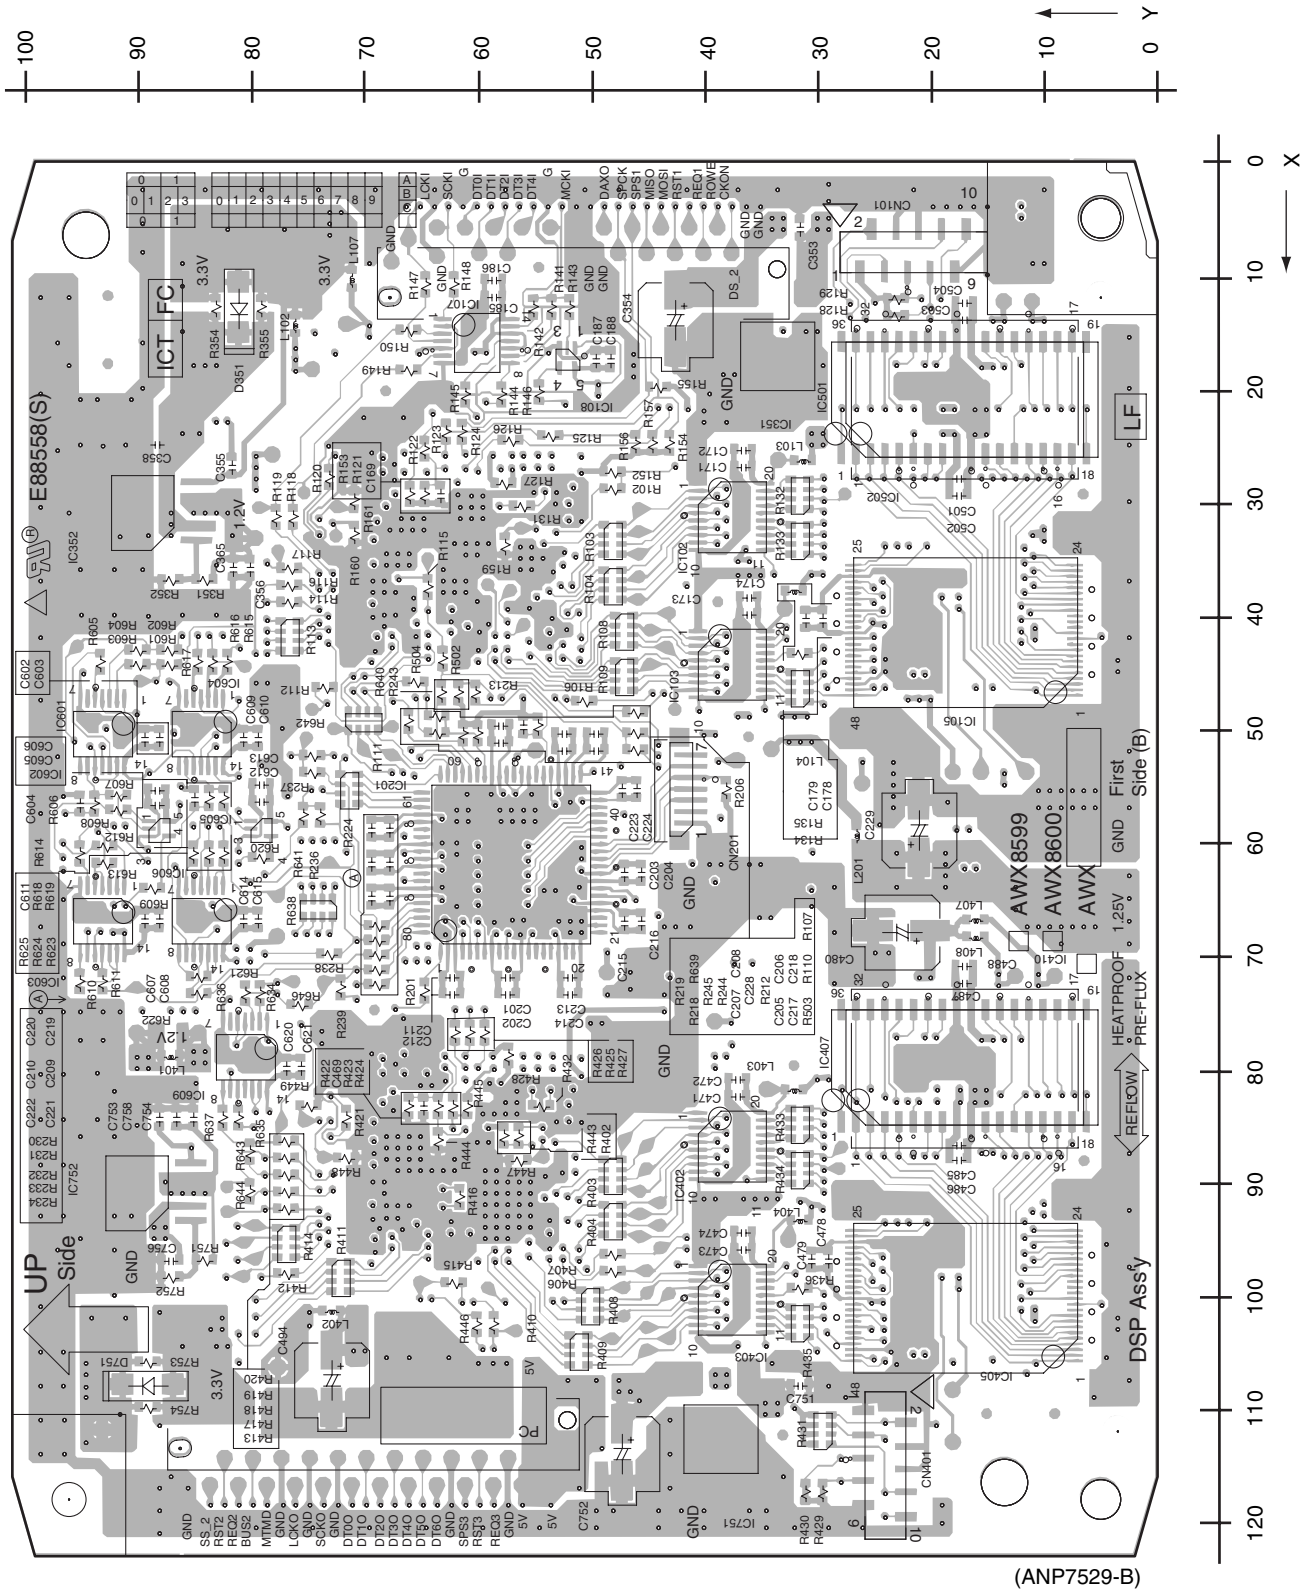


(ANP7529-B)

4.12 INTERFACE ASSY

SIDE A

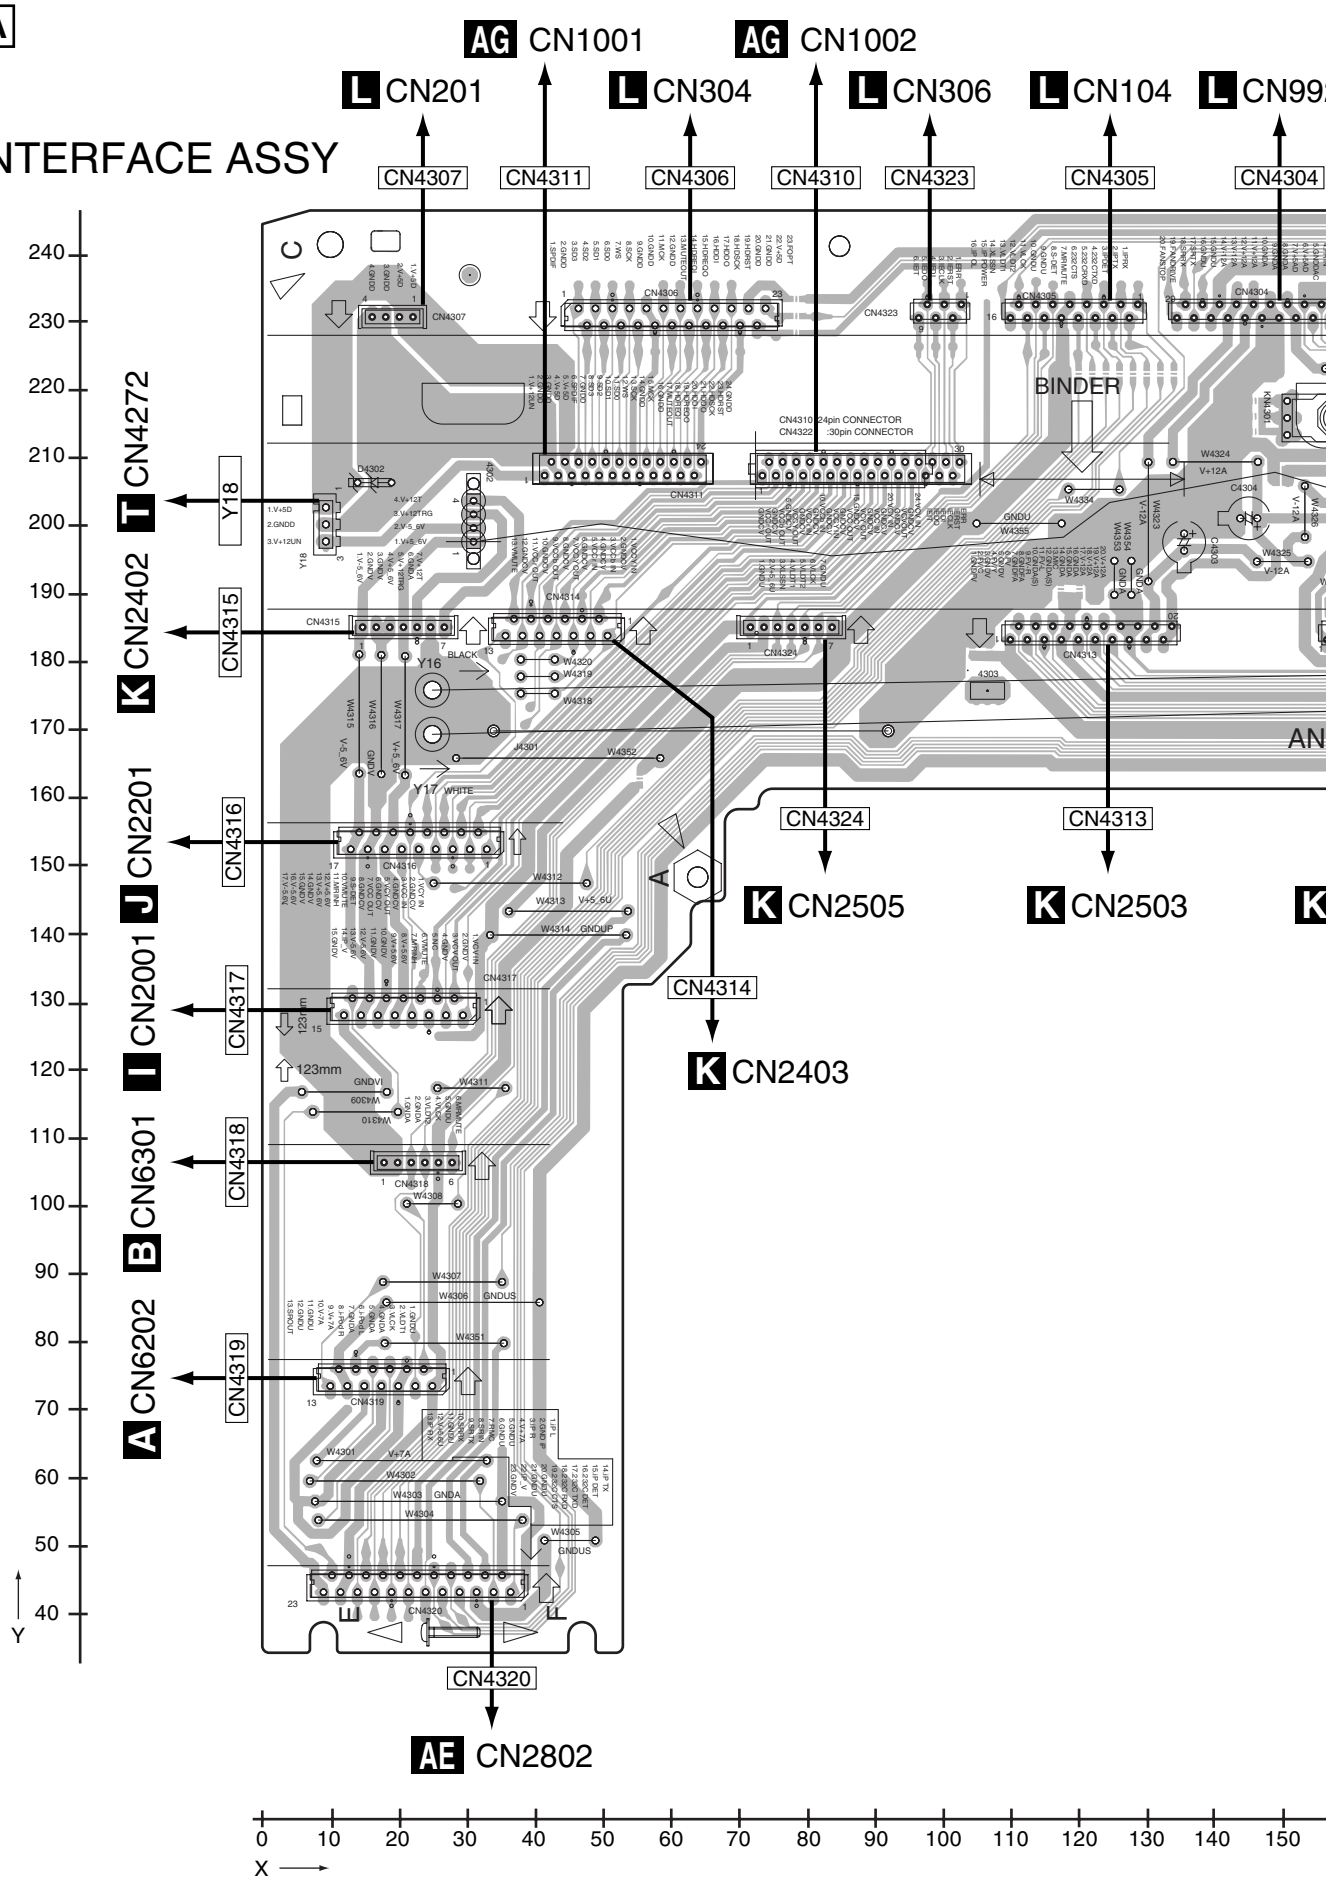


SIDE A

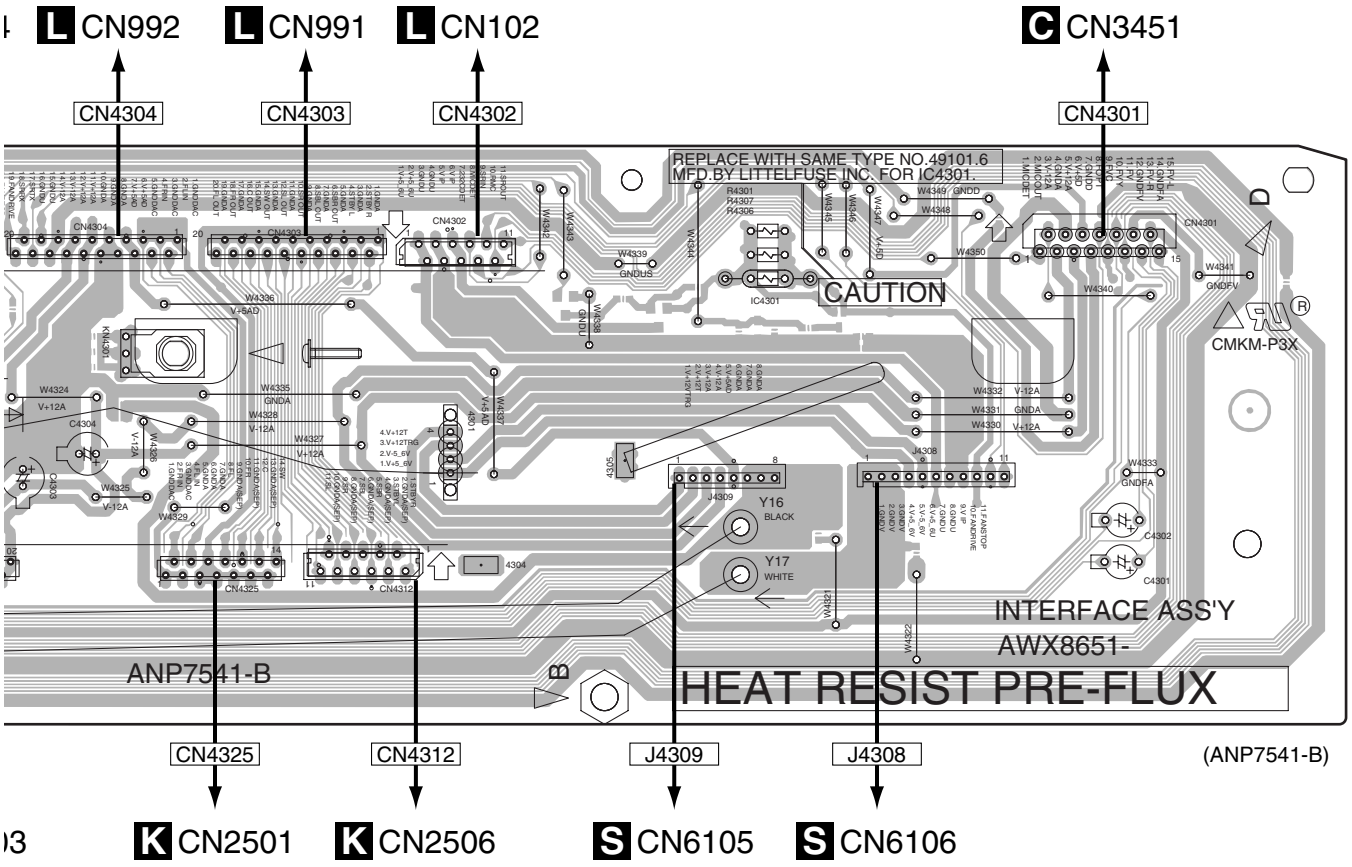

K CN2501 K CN2506 S CN6105 S CN6106

SIDE B


N INTERFACE ASSY

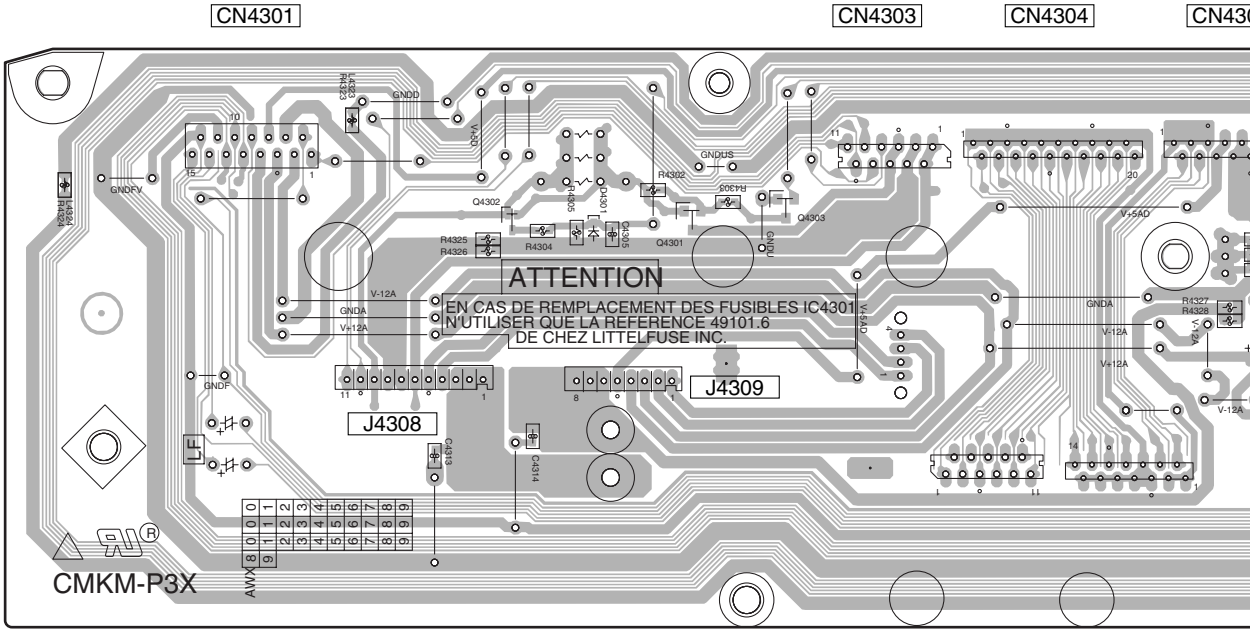

(ANP7540-A)


320 310 300 290 290 280 270 260 250 240 230 220 210 200 190 180 170 160 150

SIDE B

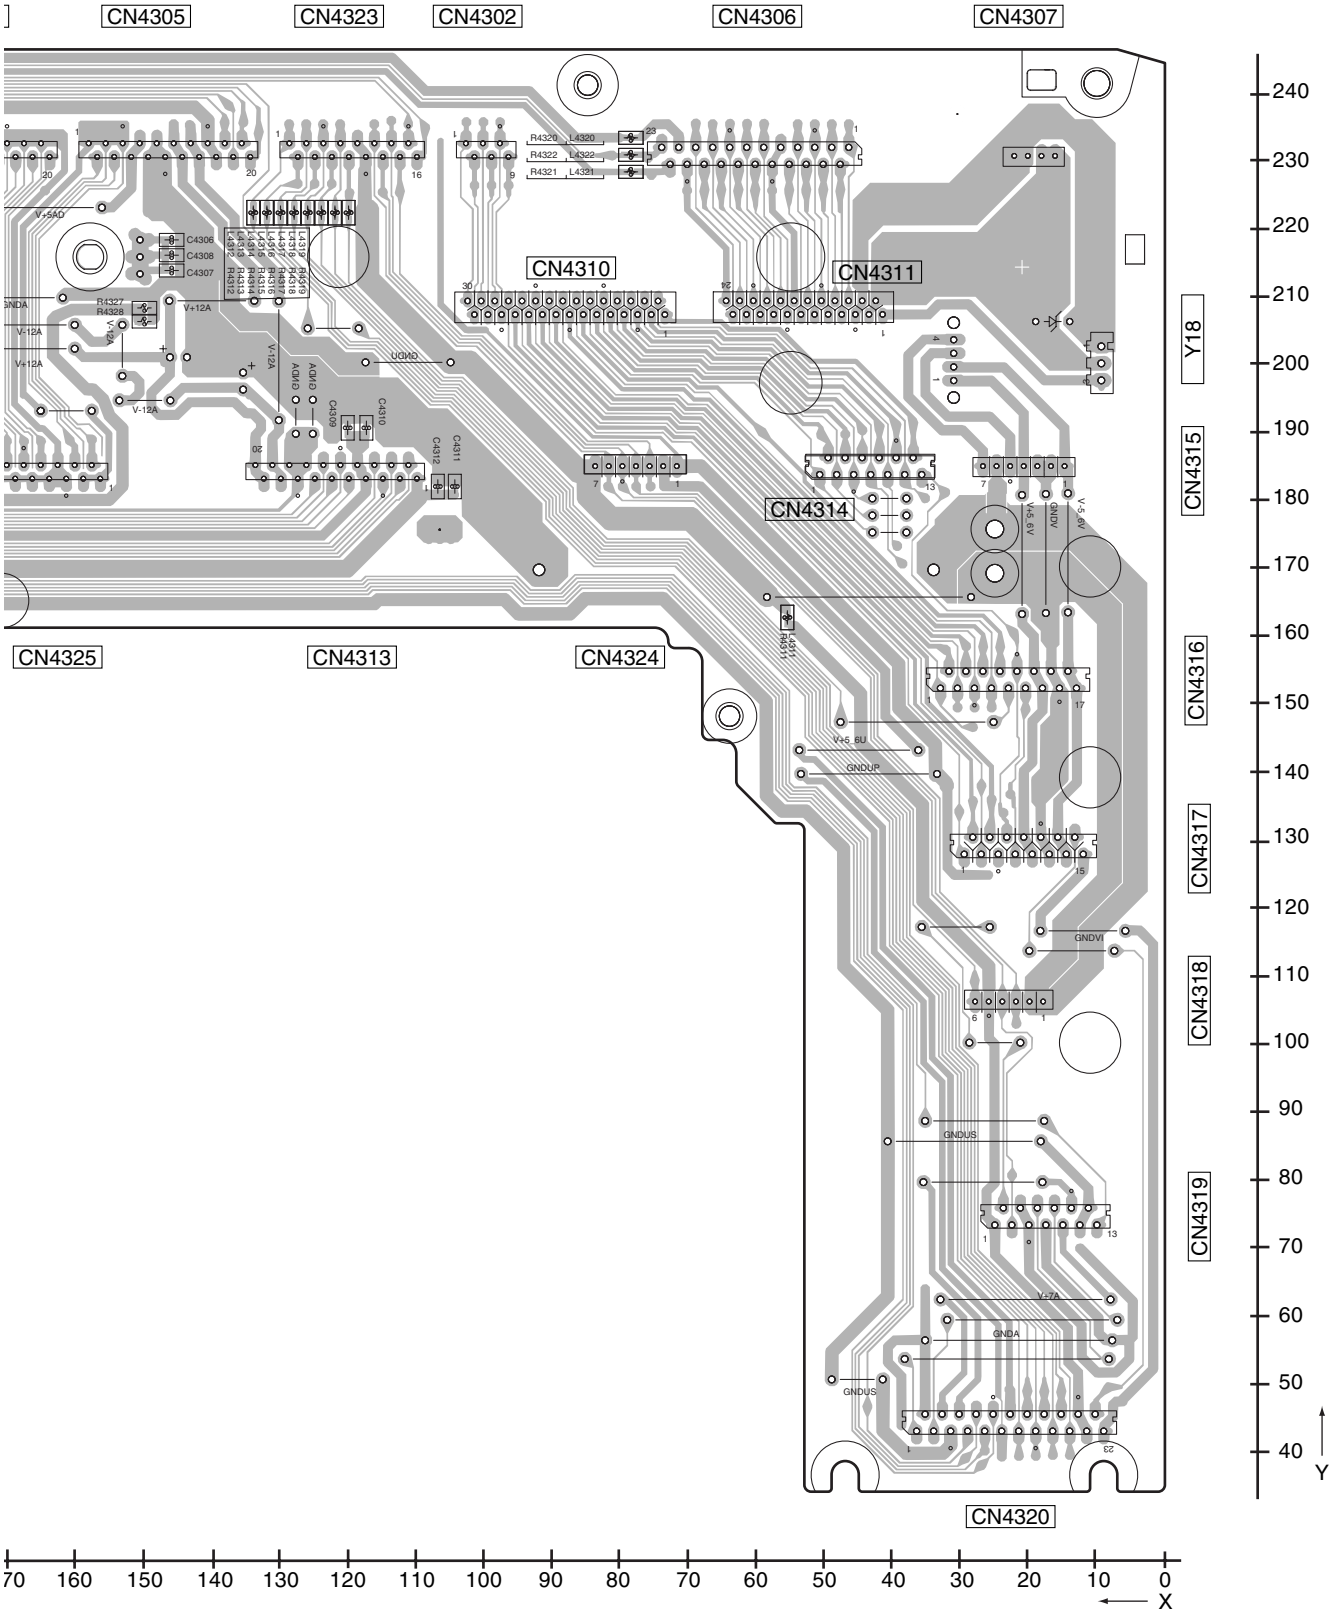

CN4305
CN4323
CN4302
CN4306
CN4307
CN4310
CN4311
CN4314
CN4325
CN4313
CN4324
CN4320
Y18
CN4315
CN4316
CN4317
CN4318
CN4319
V+5AD
V+12A
V-12A
GNDA
GNDD
V+5_8U
GNDUP
GNDVI
GNDUS
V+7A
V+5.6V
V-5.6V
GNDV
240 230 220 210 200 190 180 170 160 150 140 130 120 110 100 90 80 70 60 50 40 Y
70 160 150 140 130 120 110 100 90 80 70 60 50 40 30 20 10 0 X

4.13 POWER AMP IN ASSY

SIDE A

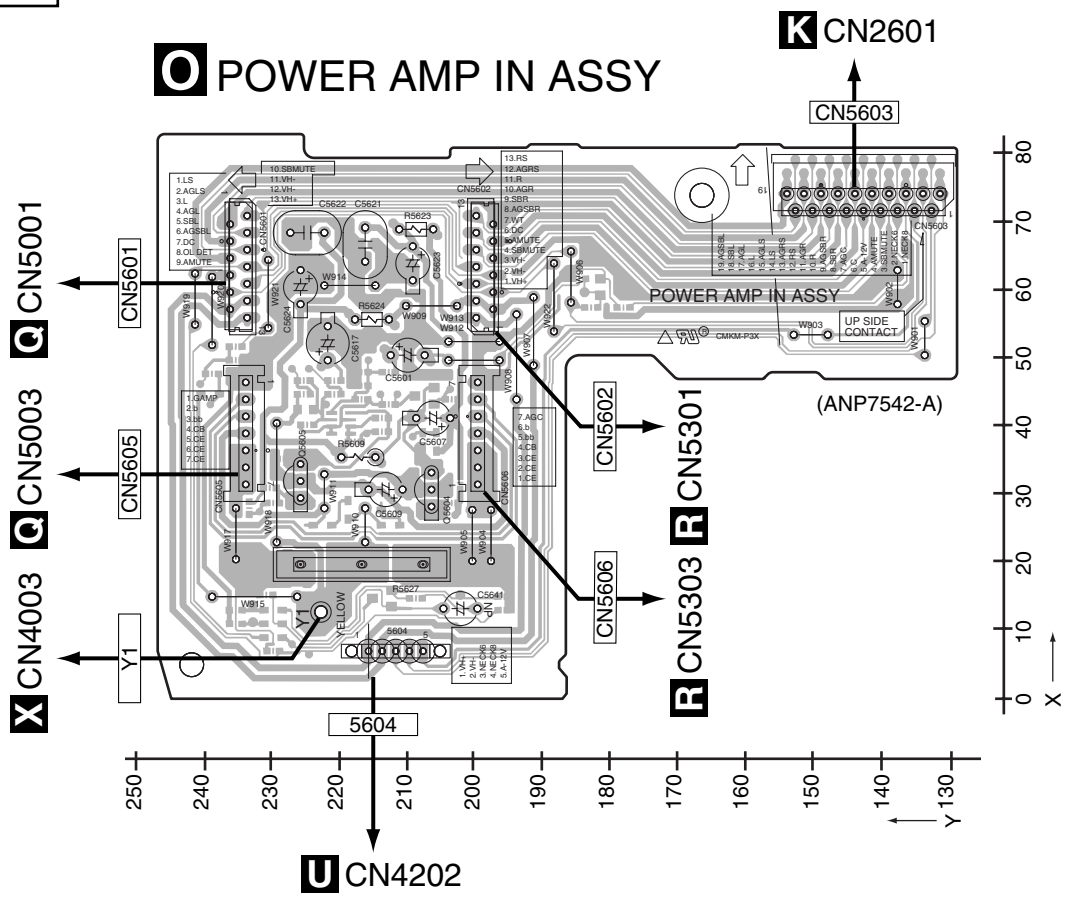


SIDE B

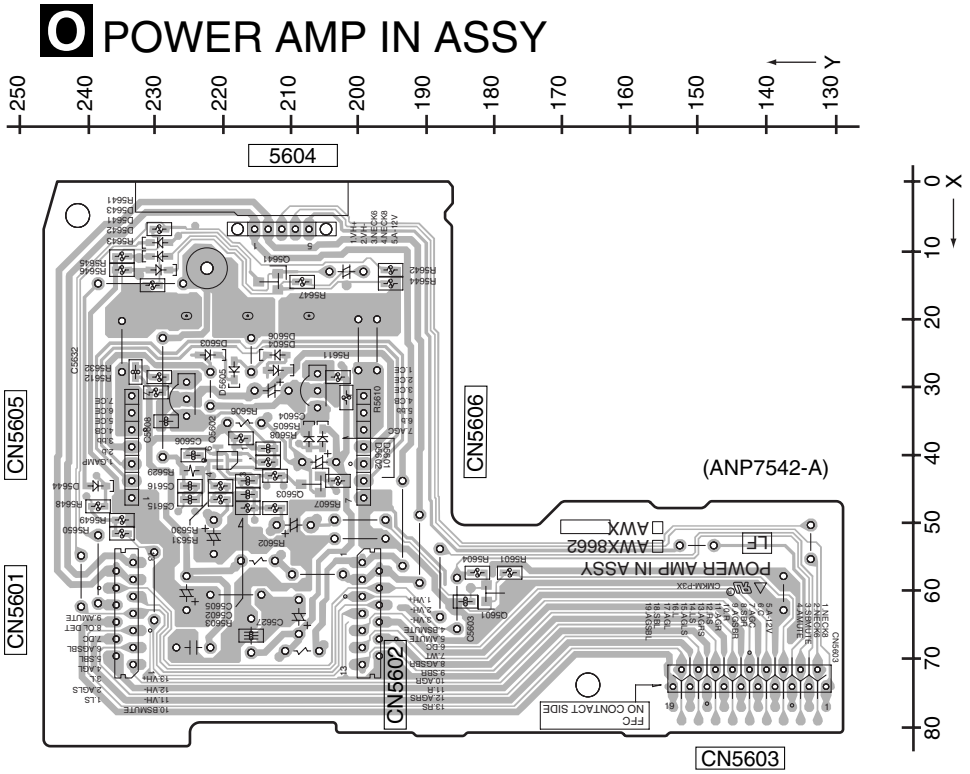

4.14 POWER PROTECT ASSY


SIDE A **SIDE A**

P POWER PROTECT ASSY

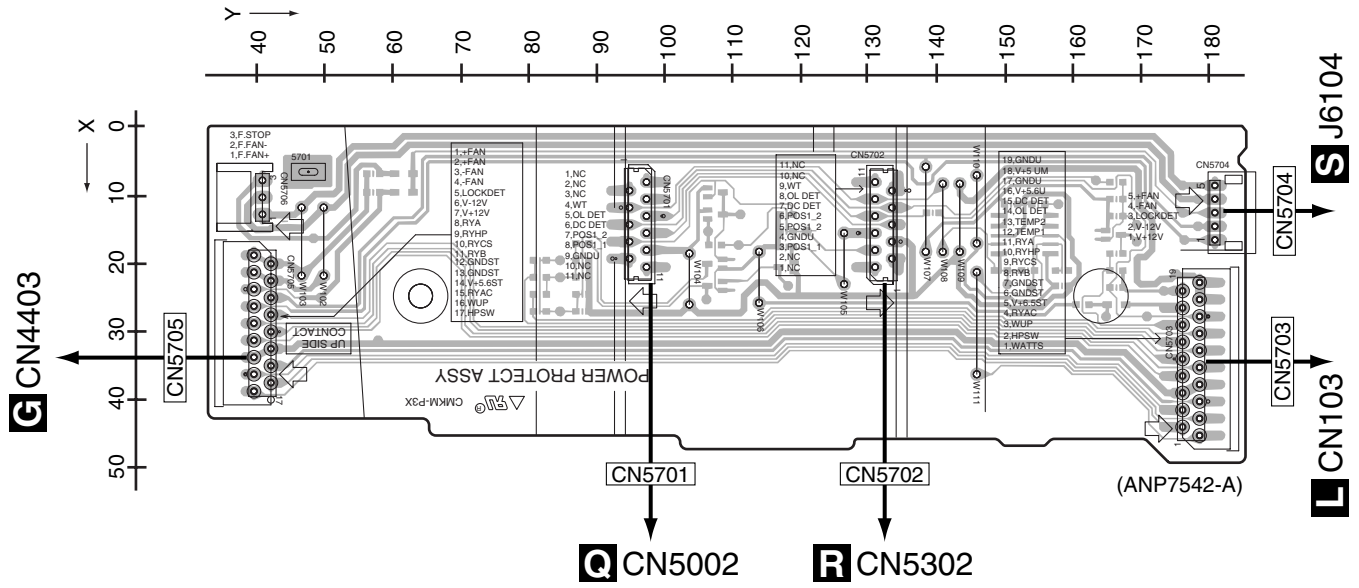


SIDE B **SIDE B**


P POWER PROTECT ASSY

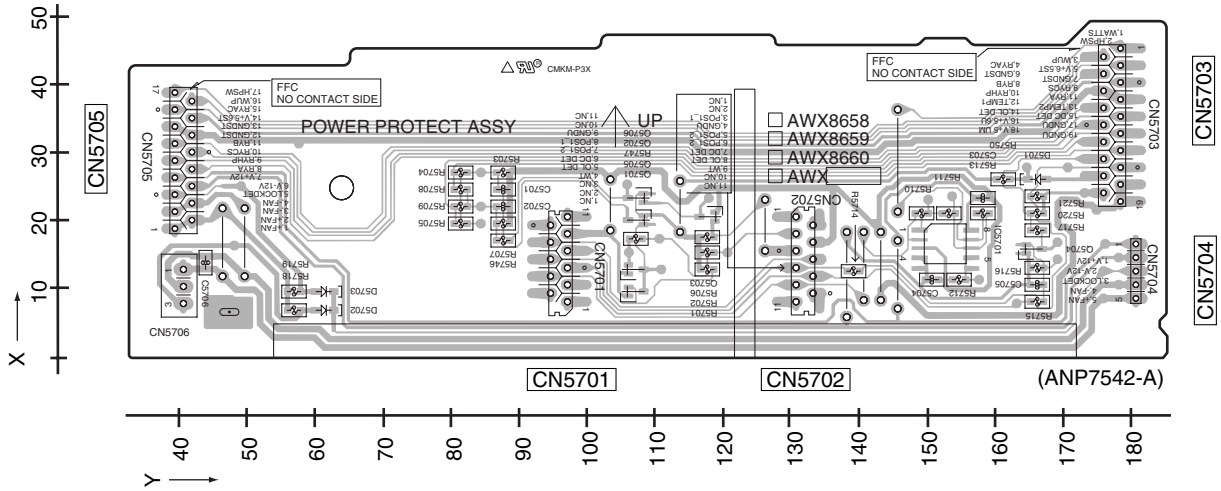

4.15 POWER AMP L and POWER AMP R ASSYS


SIDE A

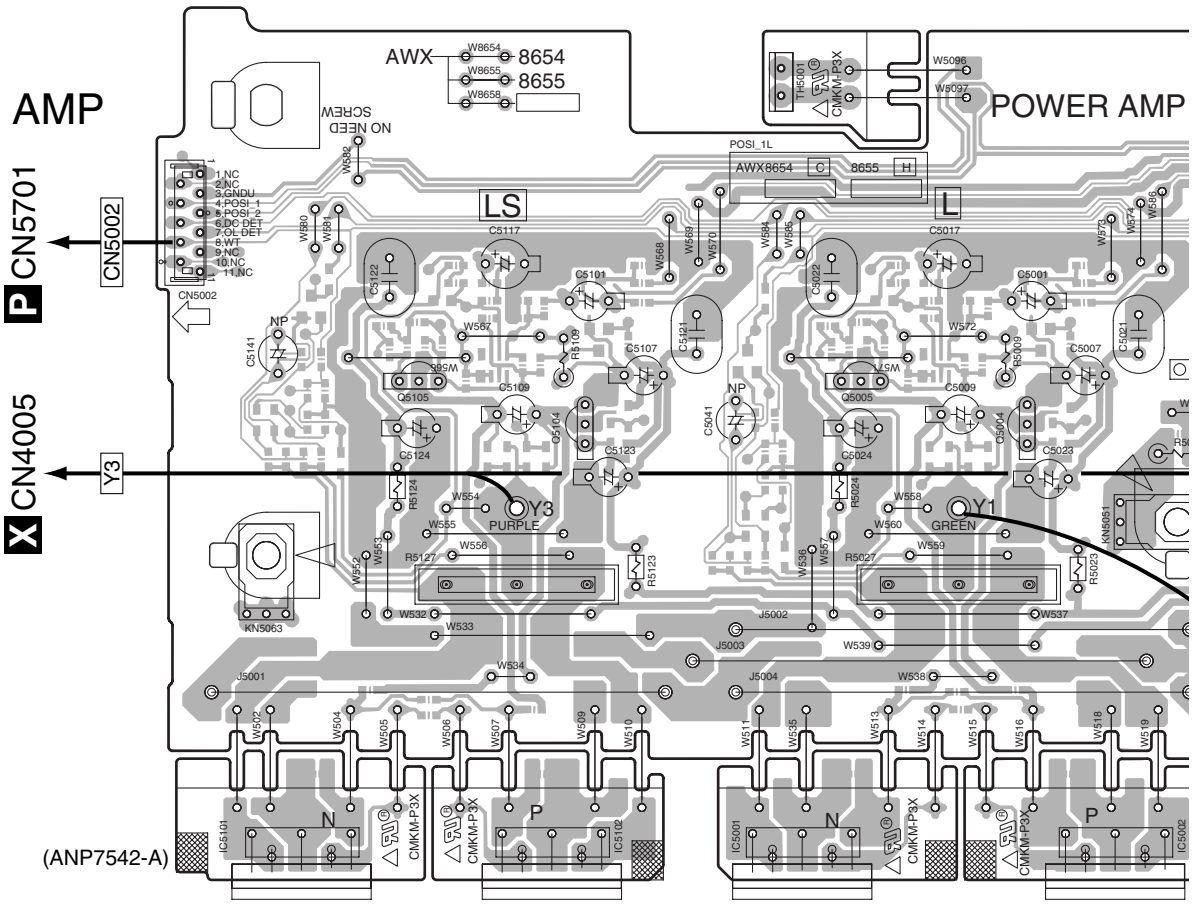

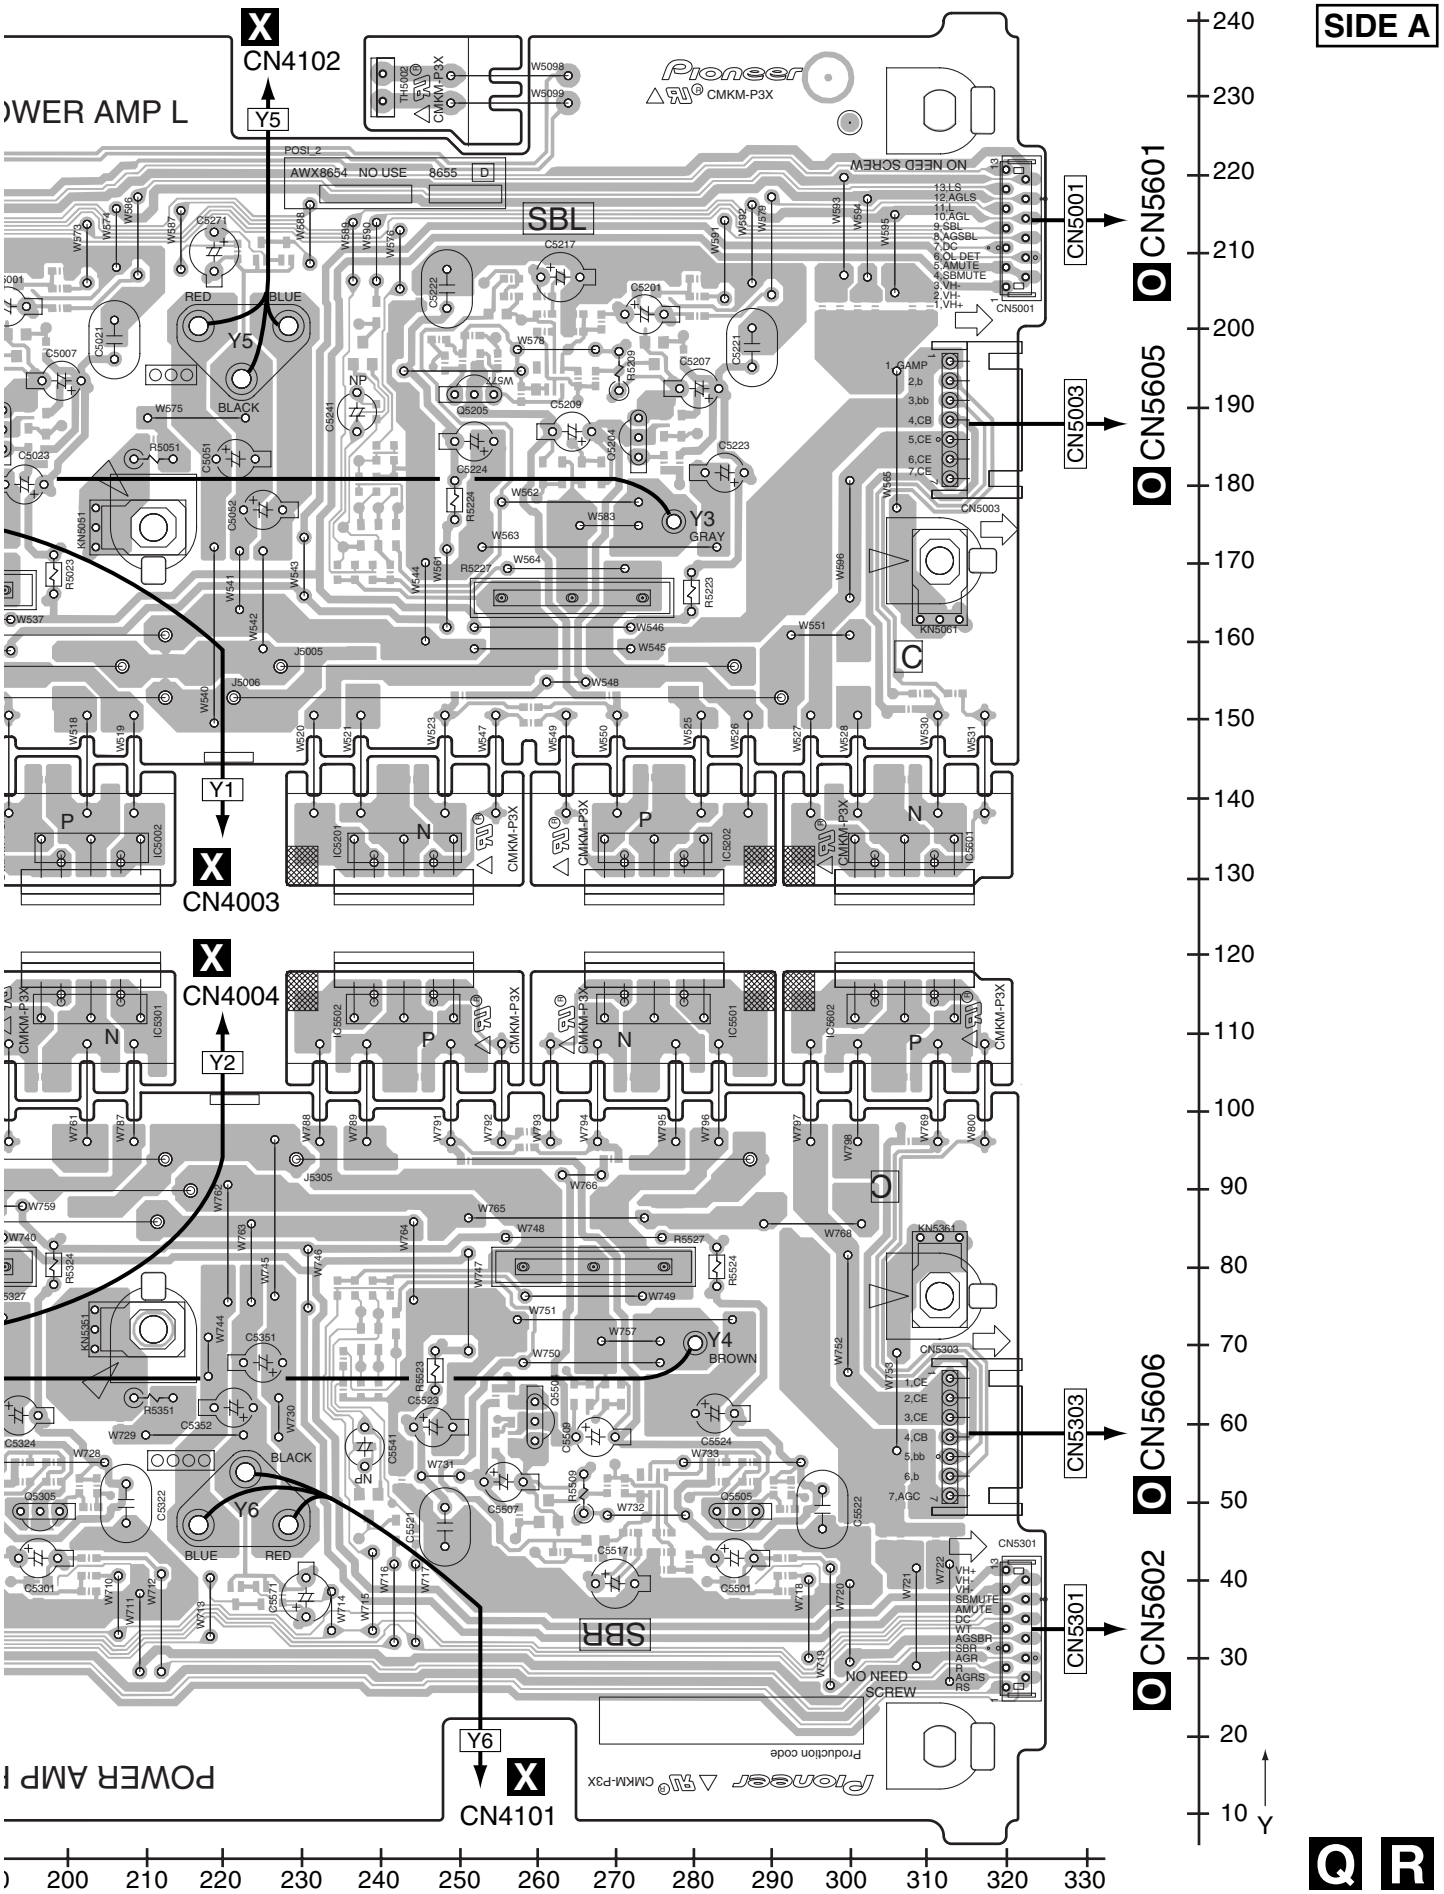
SIDE A
CN4102
CN4003
CN4004
CN4101
CN5601
CN5605
CN5606
CN5602
CN5001
CN5003
CN5303
CN5301
SBL
SBR
Y1
Y2
Y3
Y4
Y5
Y6
RED
BLUE
BLACK
GRAY
BROWN
NO NEED SCREW
POWER AMP L
CMKM-P3X
VSX-74TXVi
123


SIDE B

Q POWER AMP L ASSY

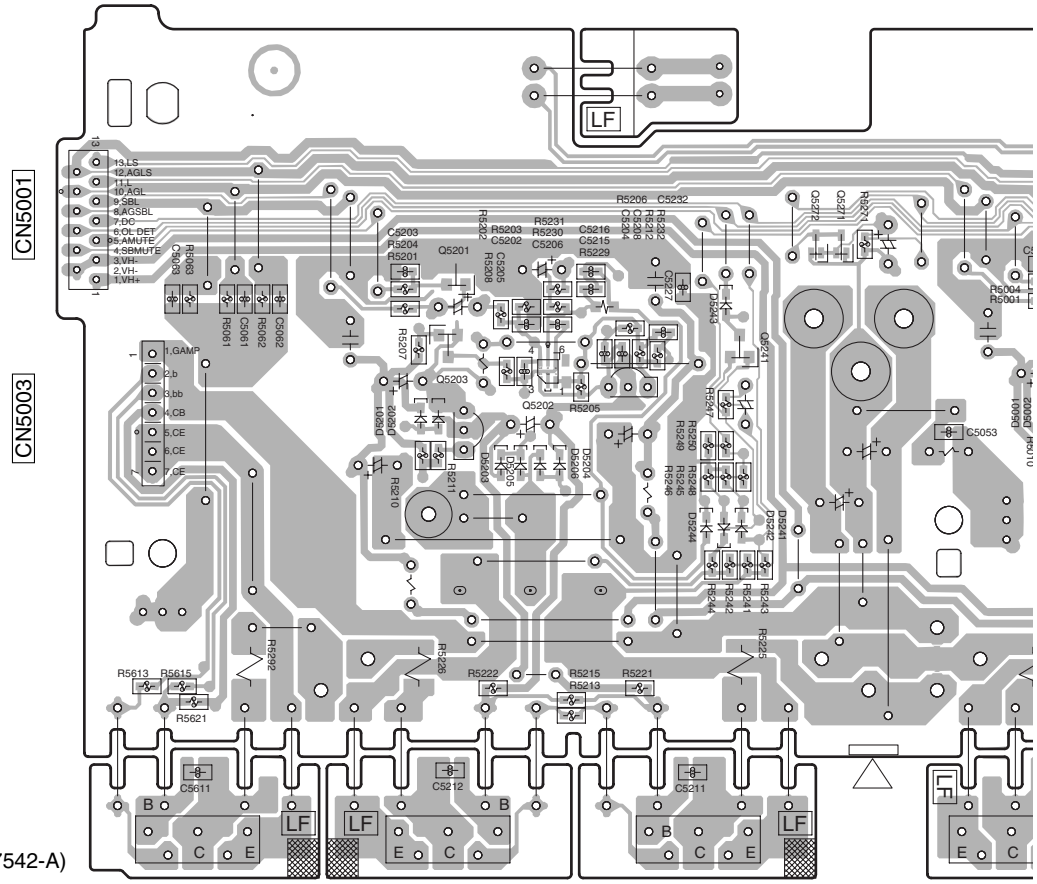

(ANP7542-A)

R POWER AMP R ASSY

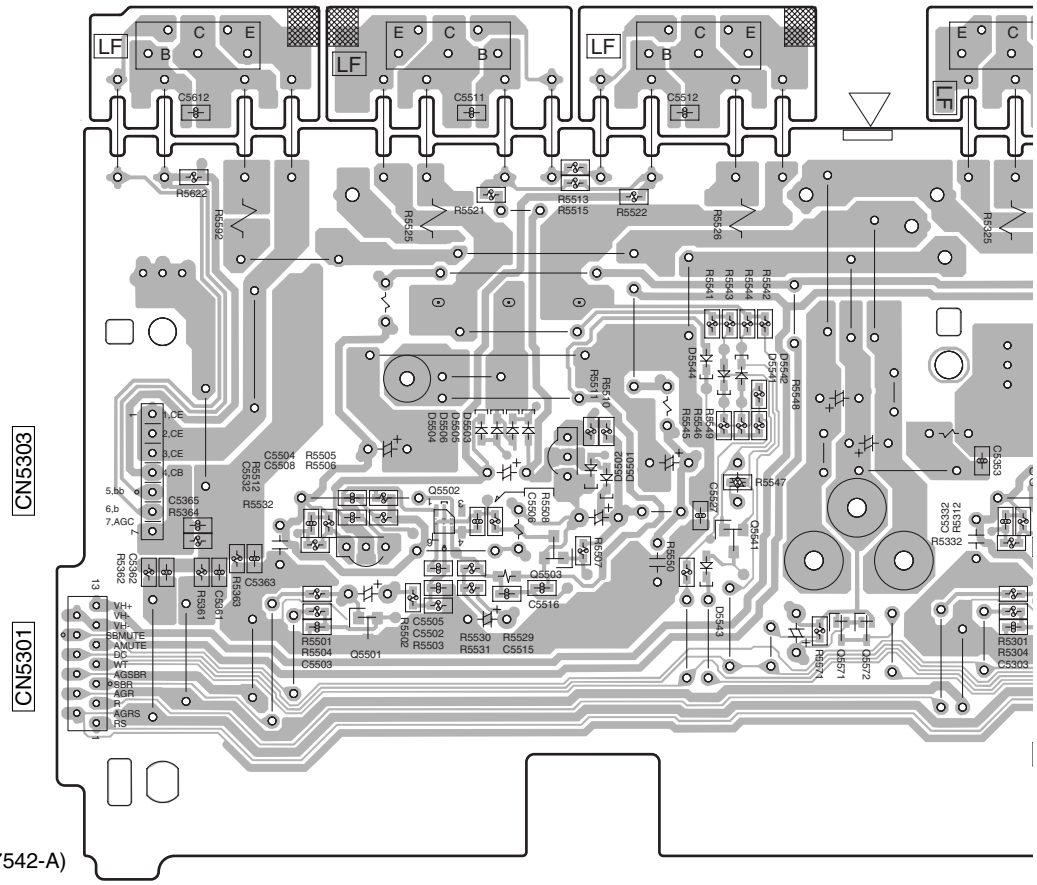


(ANP7542-A)

330 320 310 300 290 280 270 260 250 240 230 220 210 20

Q R

SIDE B

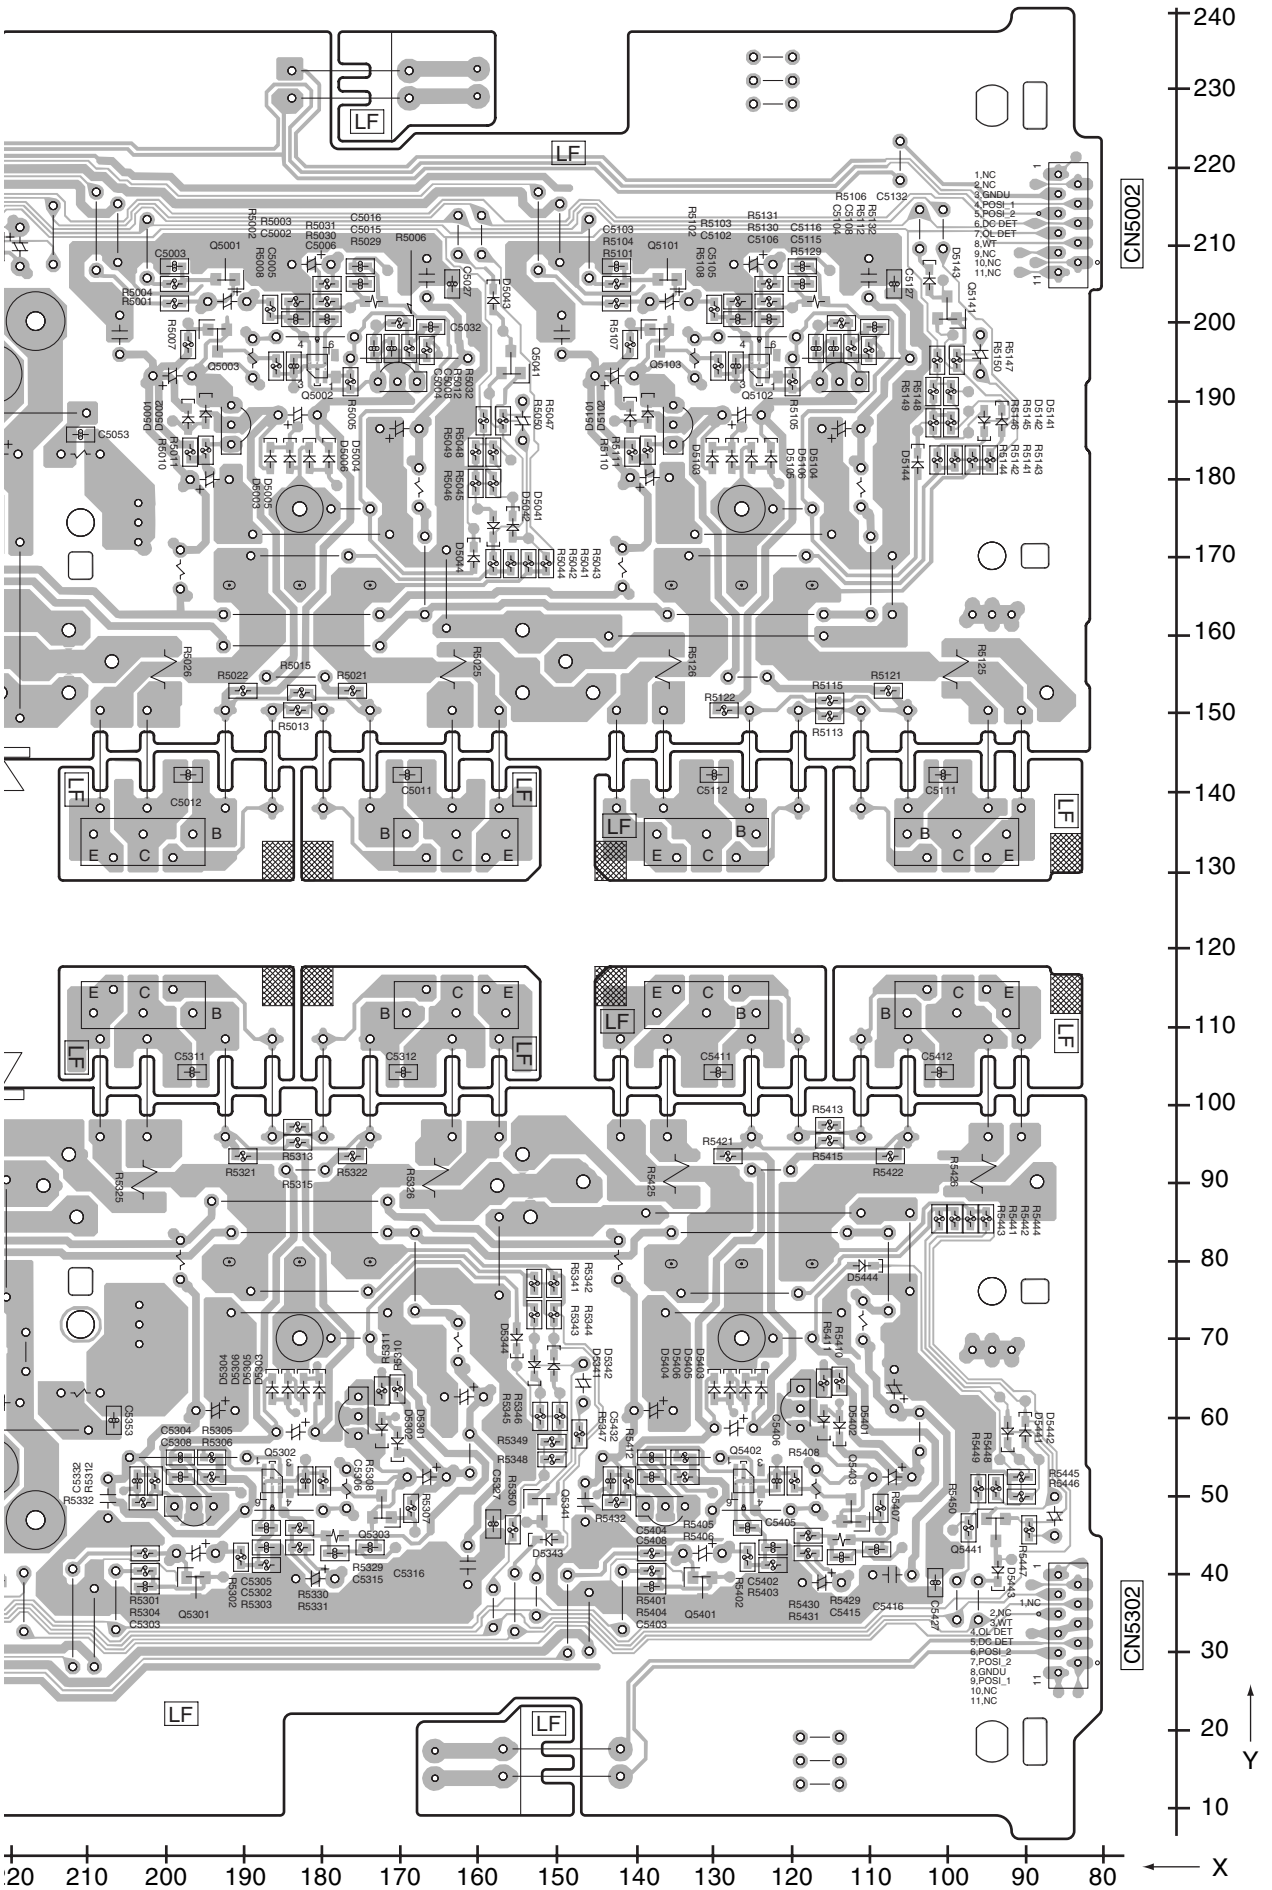

CN5002
CN5302
LF
Q5001
Q5002
Q5003
Q5101
Q5102
Q5103
Q5301
Q5302
Q5303
Q5341
Q5401
Q5402
Q5441
1,NC
2,NC
3,GNDU
4,POSI_1
5,POSI_2
6,DC DET
7,OL DET
8,WT
9,NC
10,NC
11,NC
X
Y

4.16 LOCAL SUPPLY and DC/DC ASSYS

SIDE A


SIDE A

S LOCAL SUPPLY ASSY

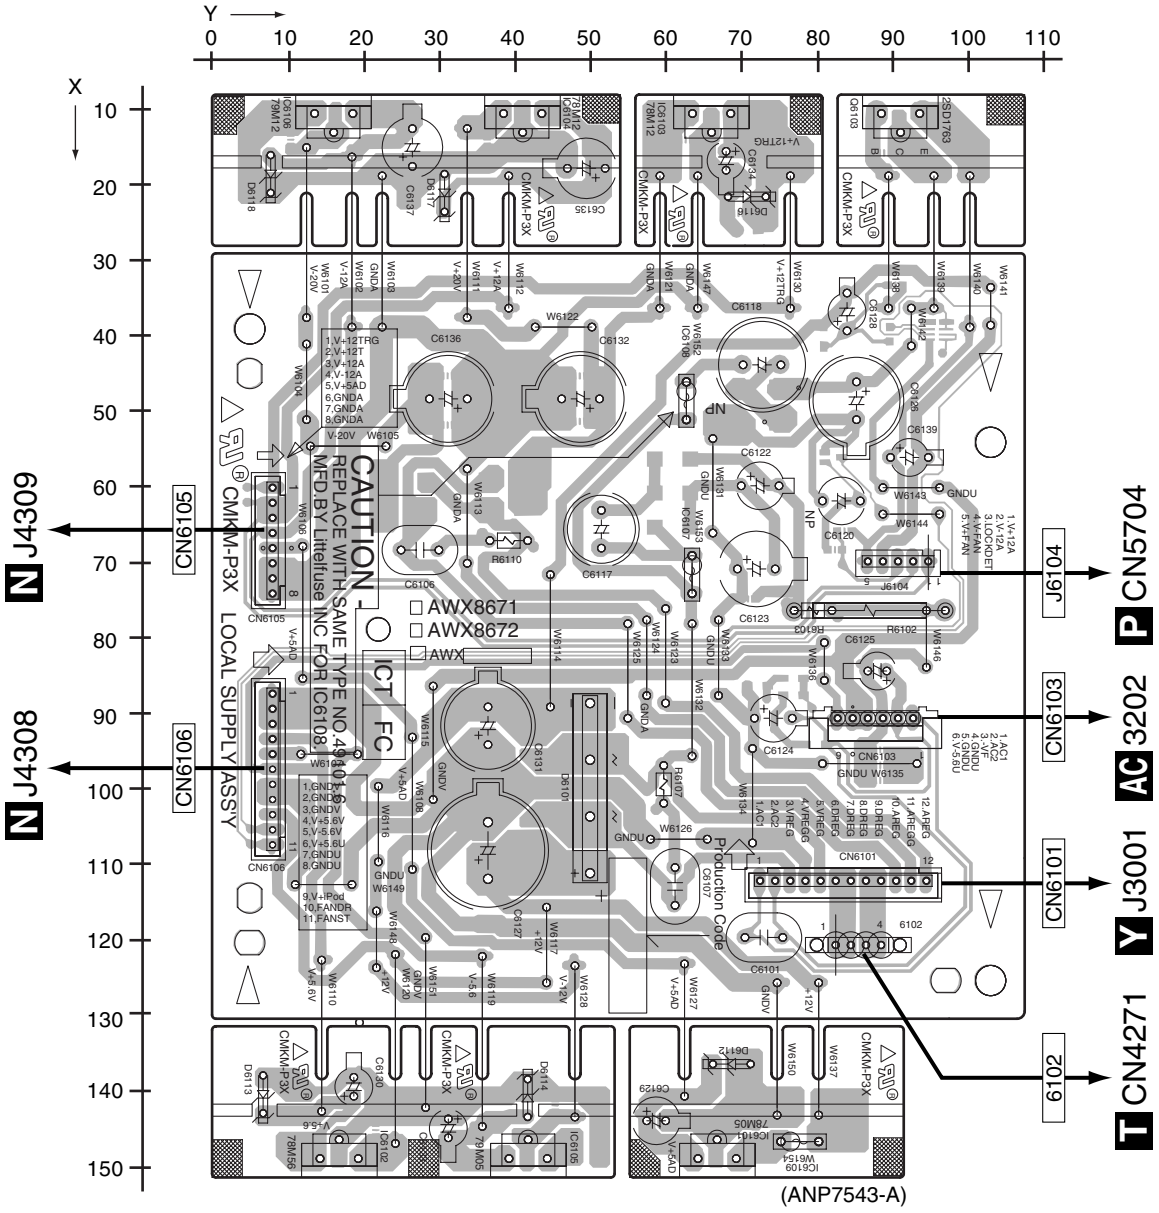

(ANP7543-A)

T DC/DC ASSY

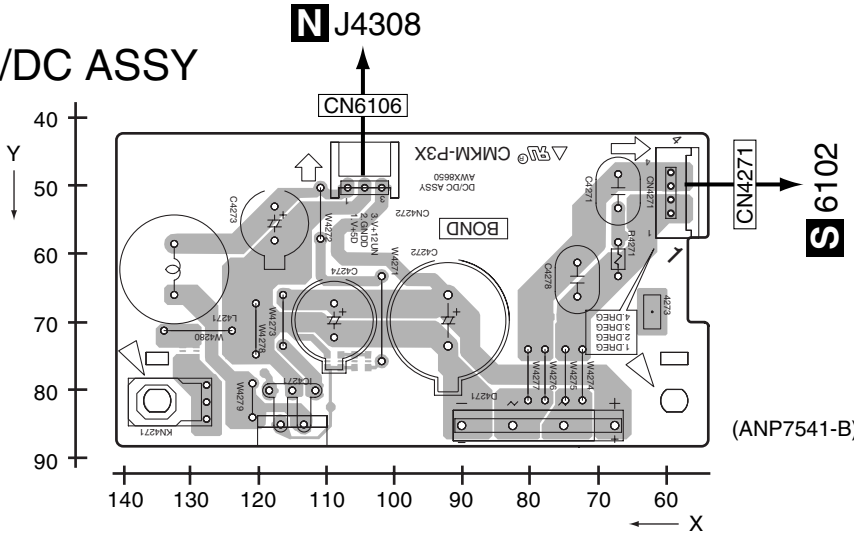

(ANP7541-B)


S T

S T


SIDE B

S LOCAL SUPPLY ASSY

SIDE B

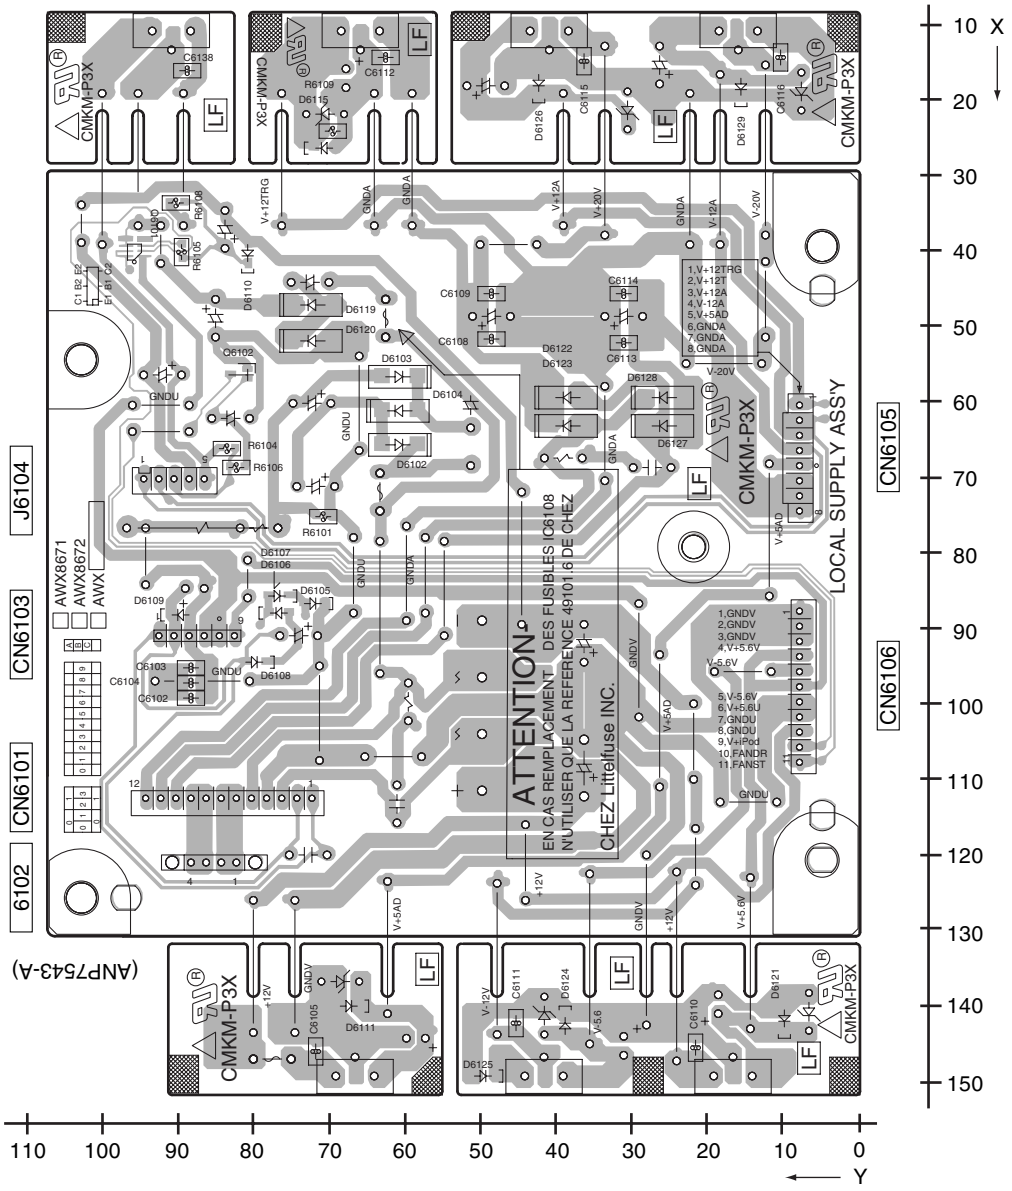


T DC/DC ASSY

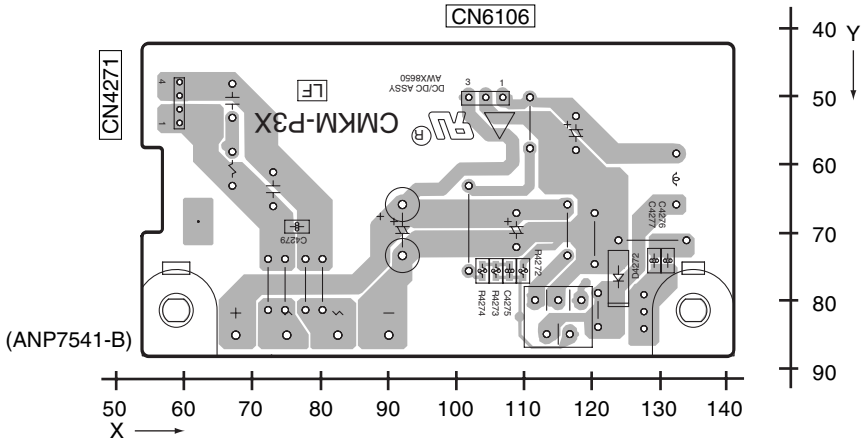

S T


S T

4.17 TRANS2-1, VH TR, DIODE and TRANS2-2 ASSYS

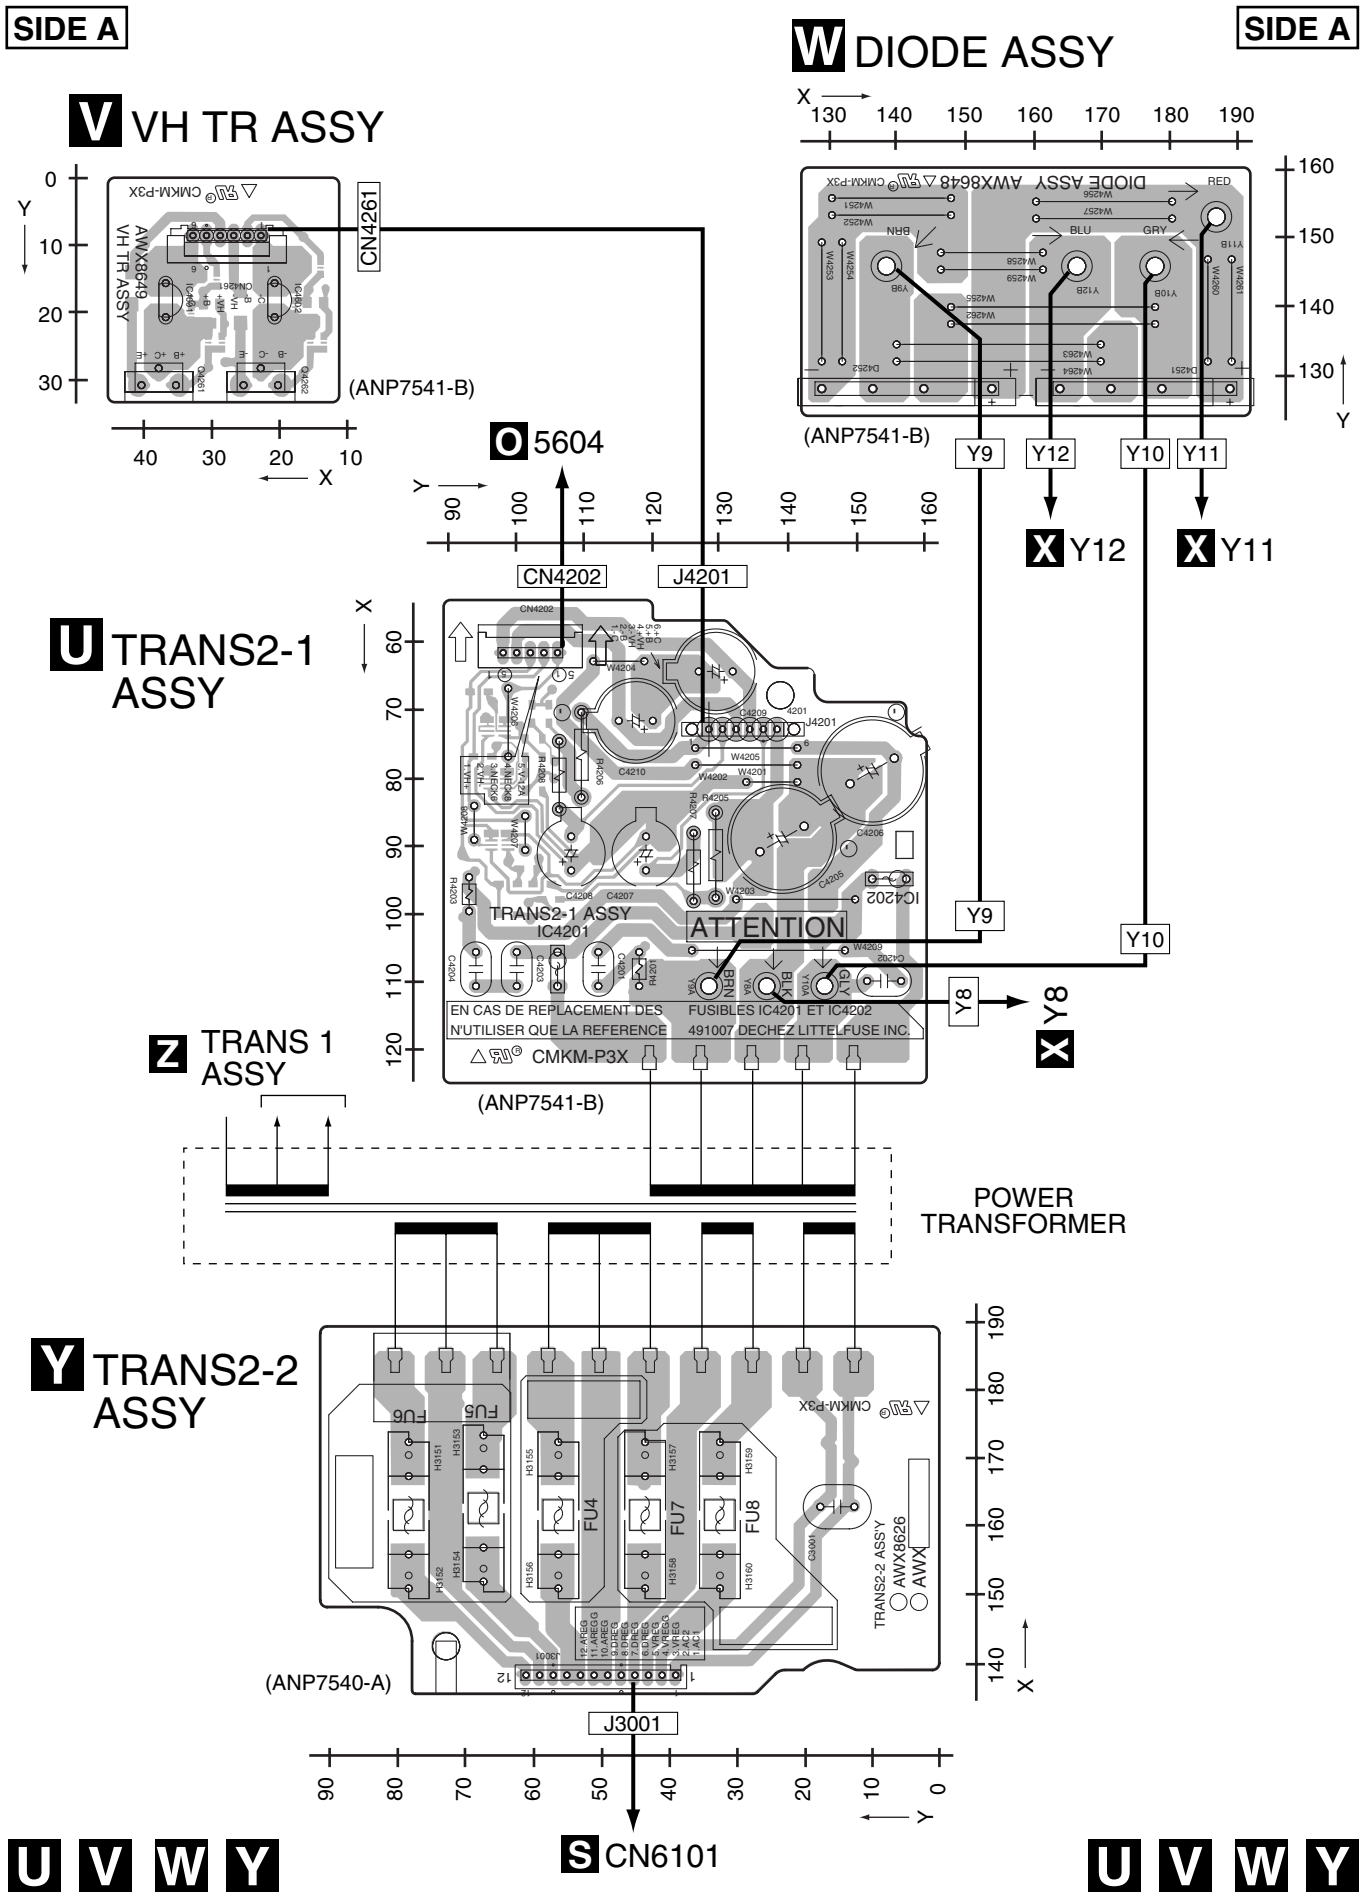

SIDE B


W DIODE ASSY

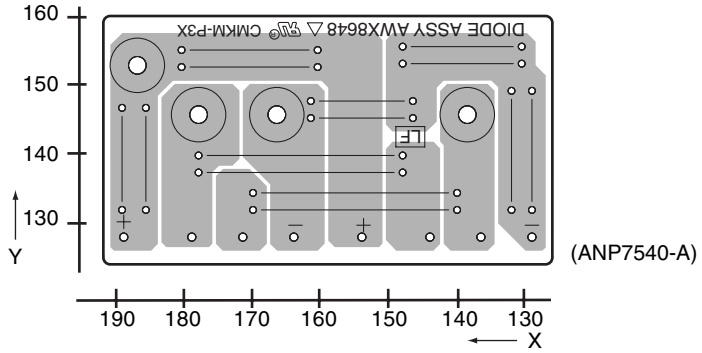

(ANP7540-A)


SIDE B

V VH TR ASSY

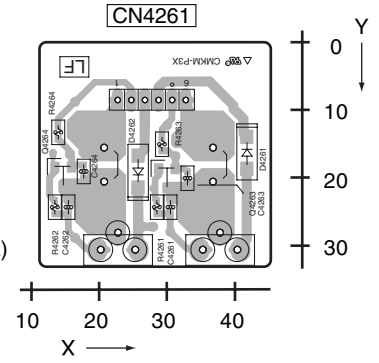


(ANP7540-A)

U TRANS2-1 ASSY

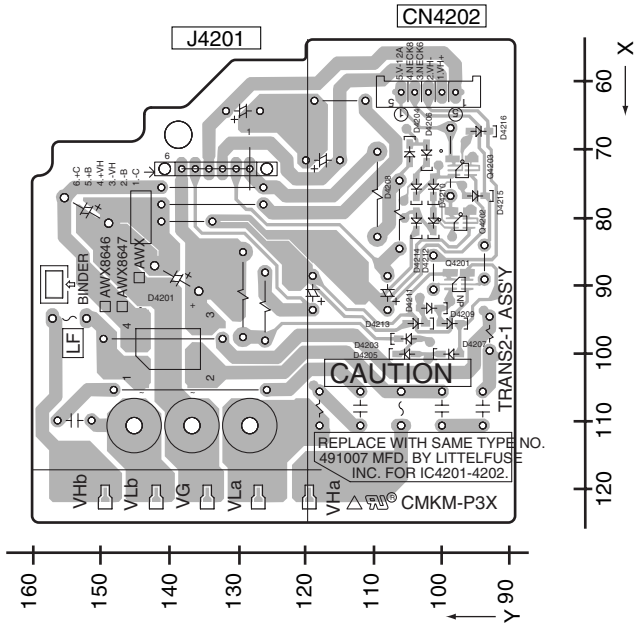

Y TRANS2-2 ASSY

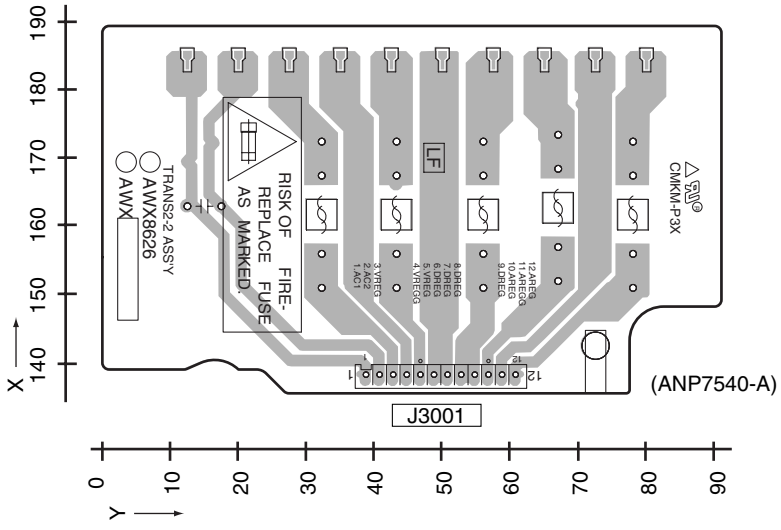

(ANP7540-A)

J3001

U V W Y


U V W Y

5 6 7 8

4.18 SP/PS ASSY

SIDE A

SIDE A

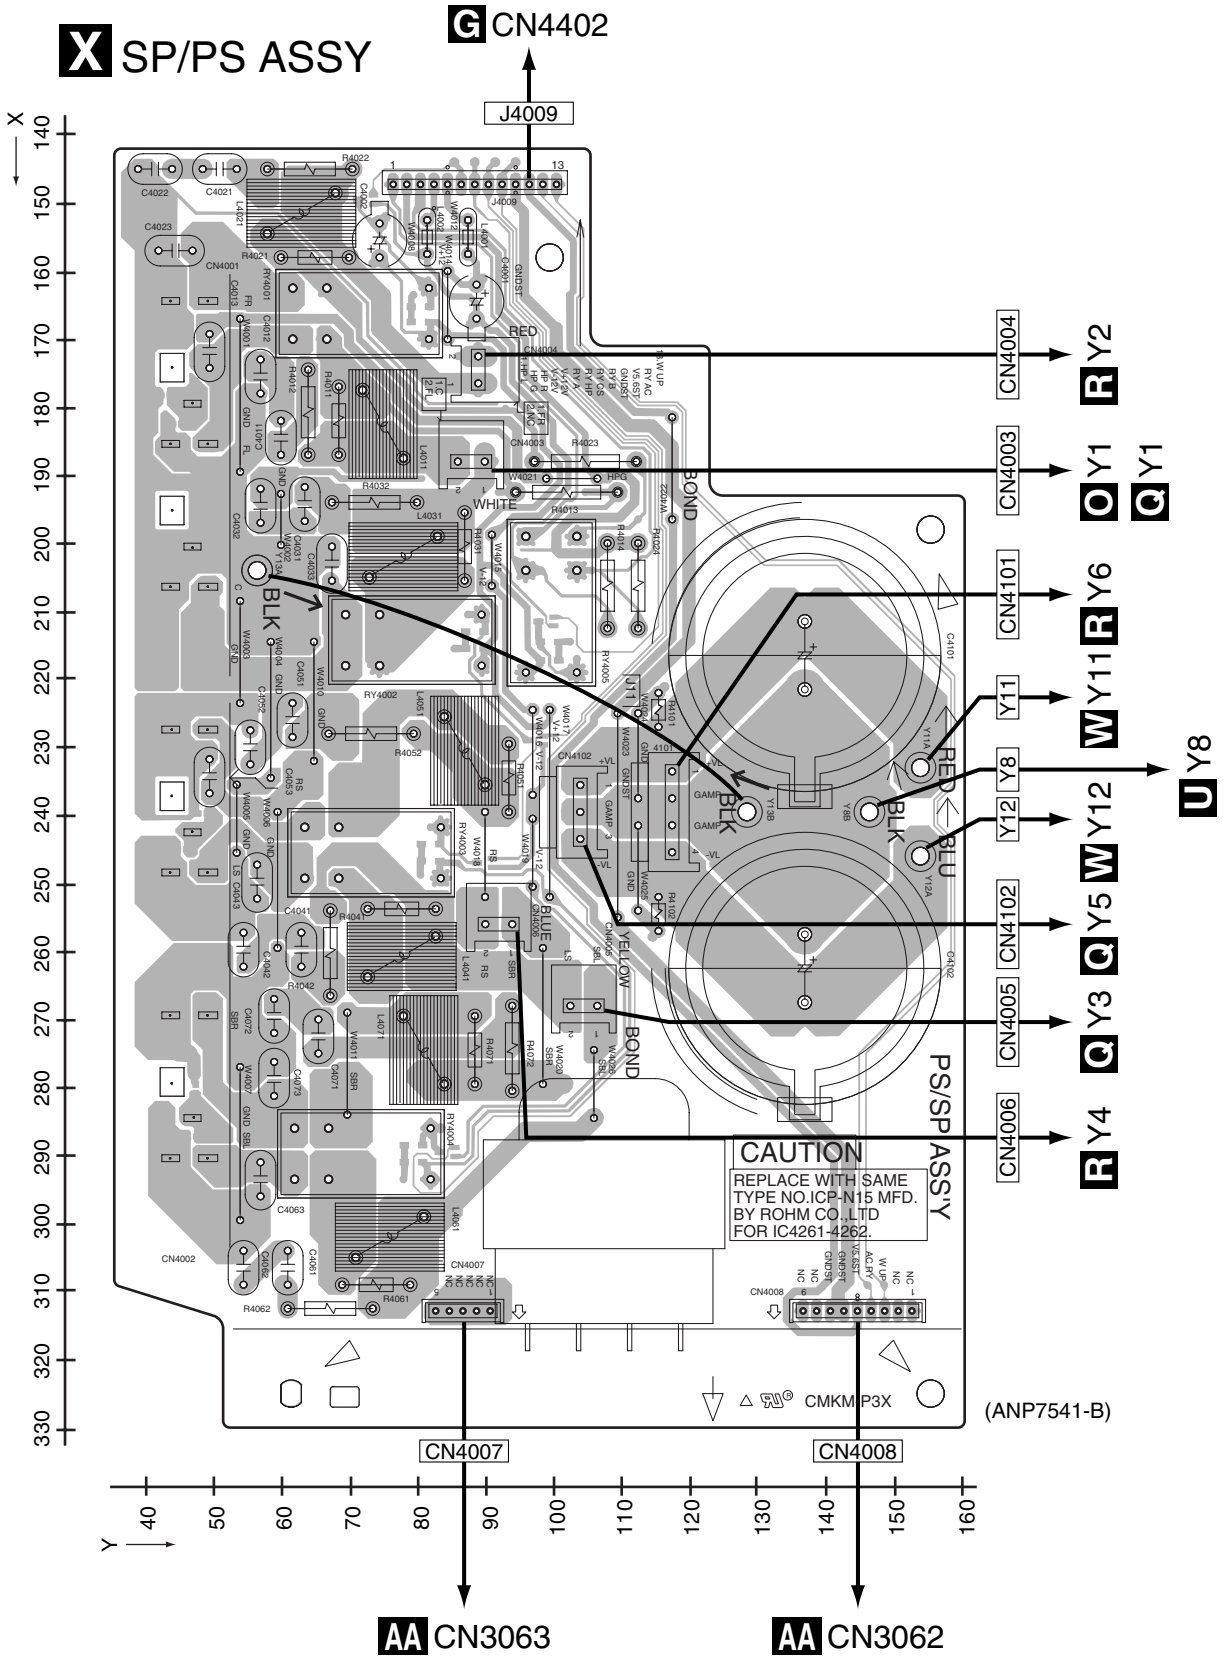


SIDE B

SIDE B


A B C D E F

X SP/PS ASSY

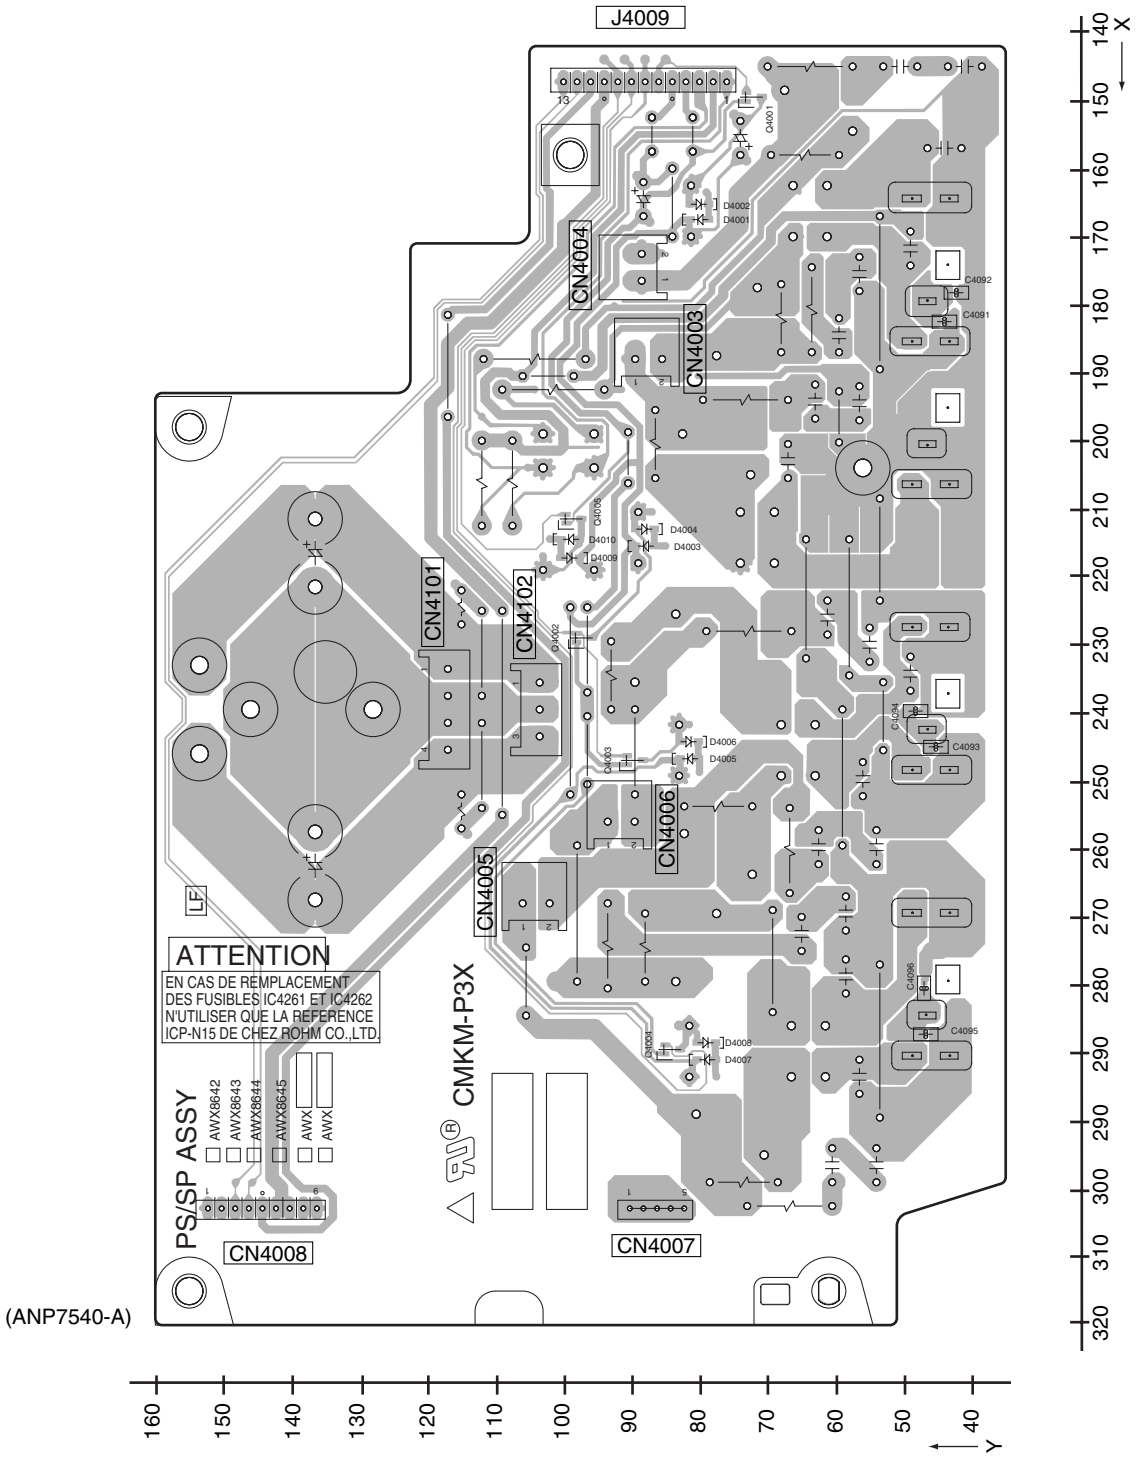

5 6 7 8


4.19 TRANS1 and PRIMARY ASSYS

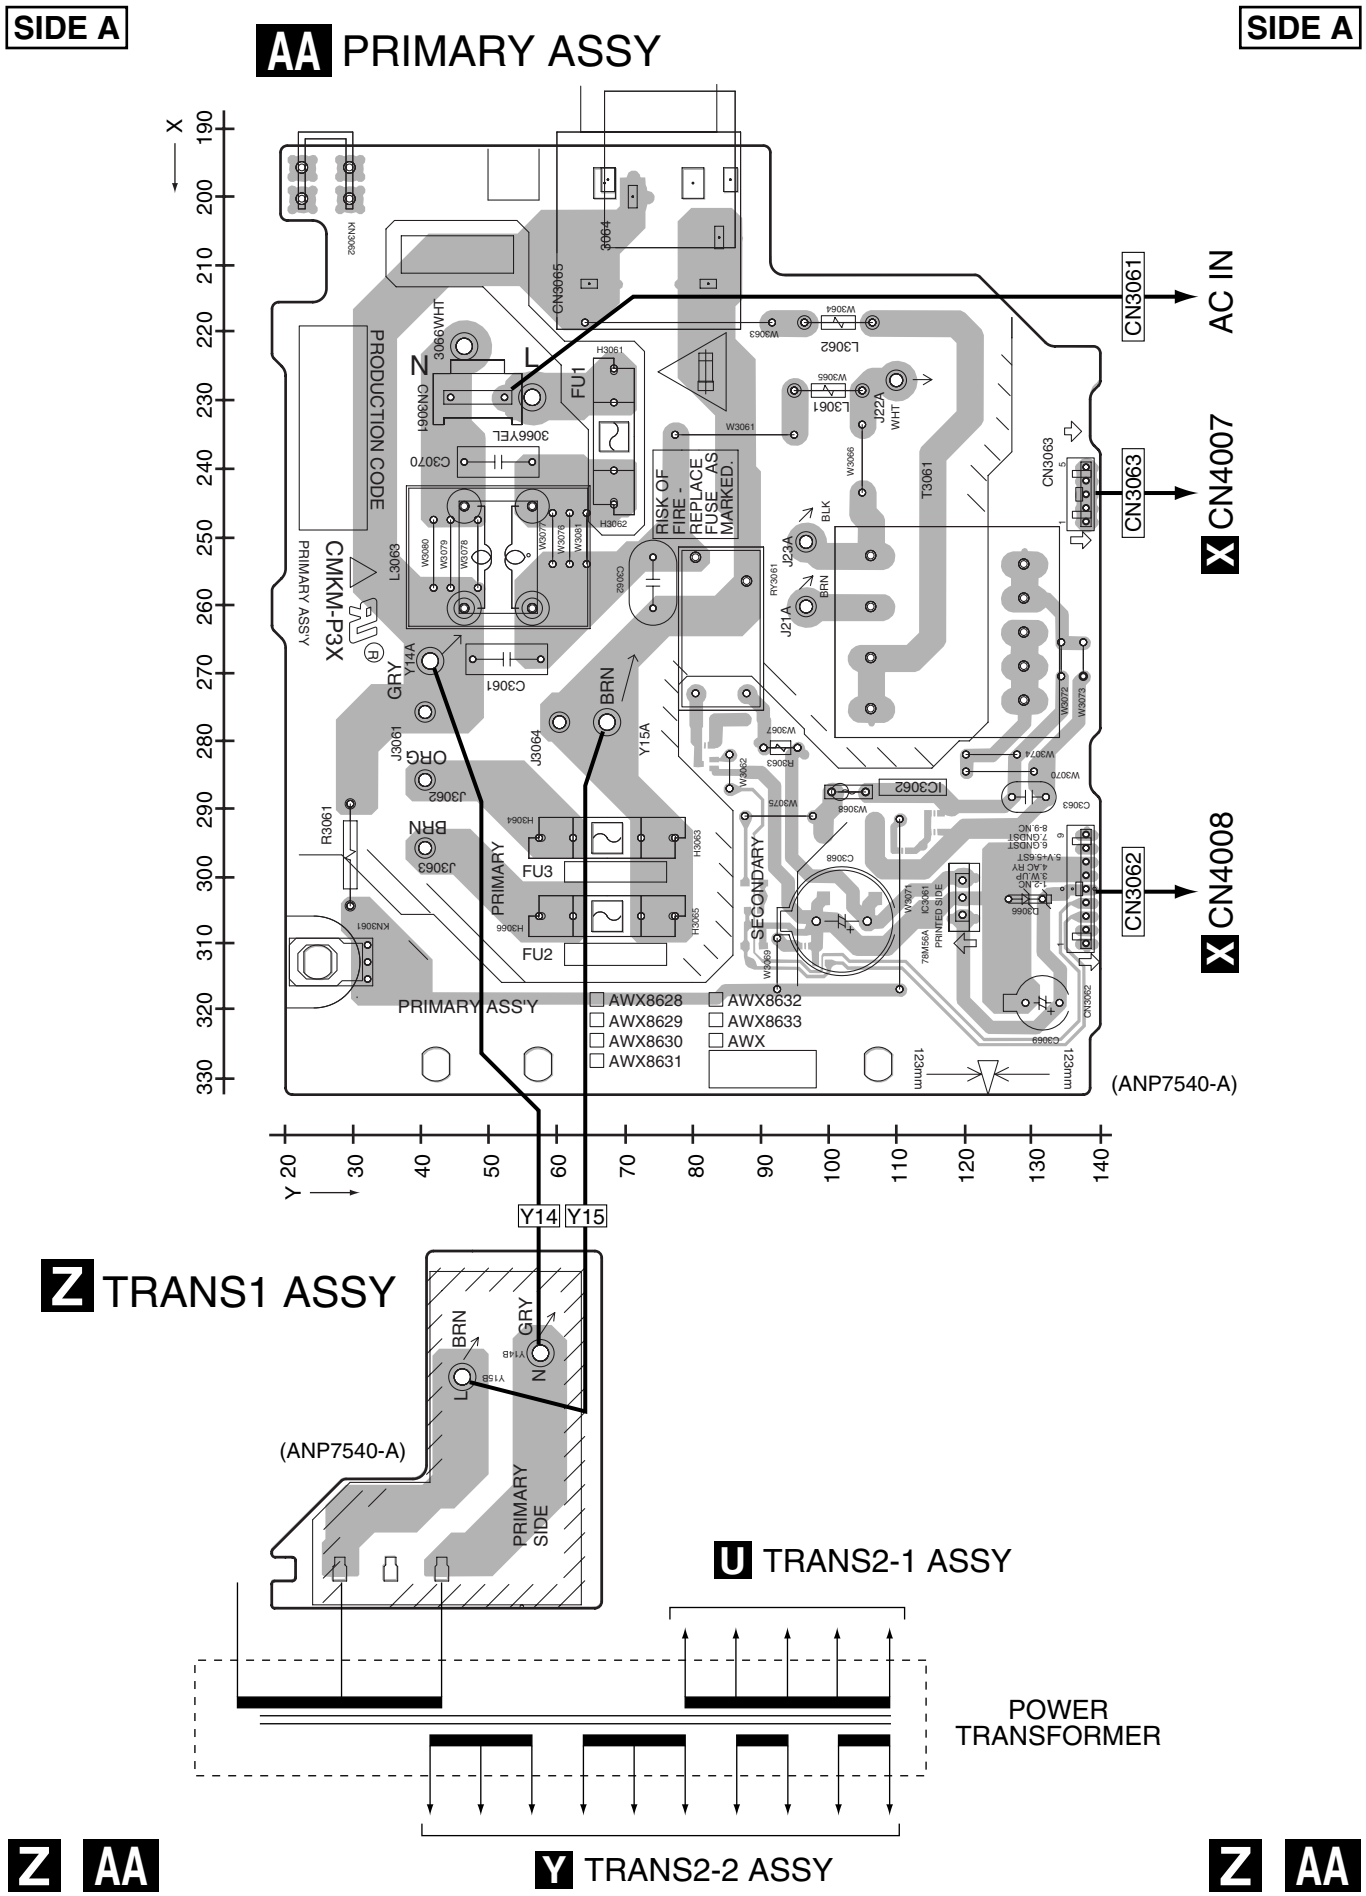


SIDE B

SIDE B

AA PRIMARY ASSY

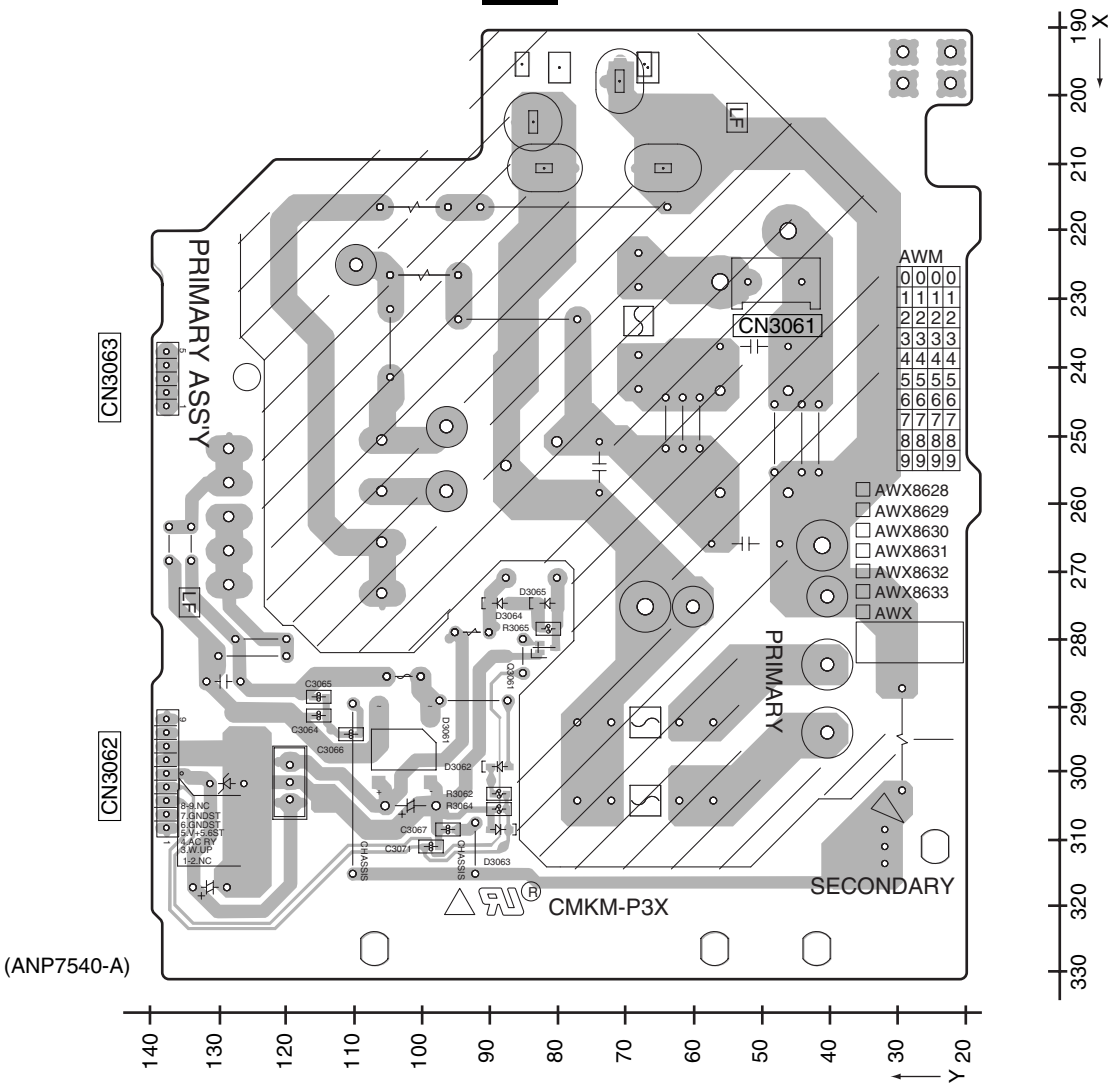

Z TRANS1 ASSY

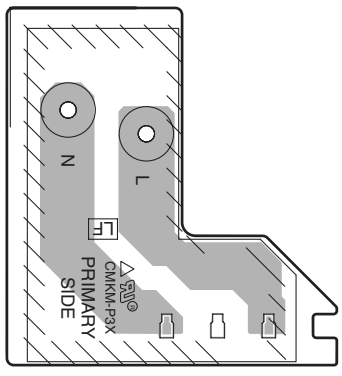


(ANP7540-A)

Z AA

Z AA


4.20 VOLUME, DISPLAY and INPUT SELECT ASSYS

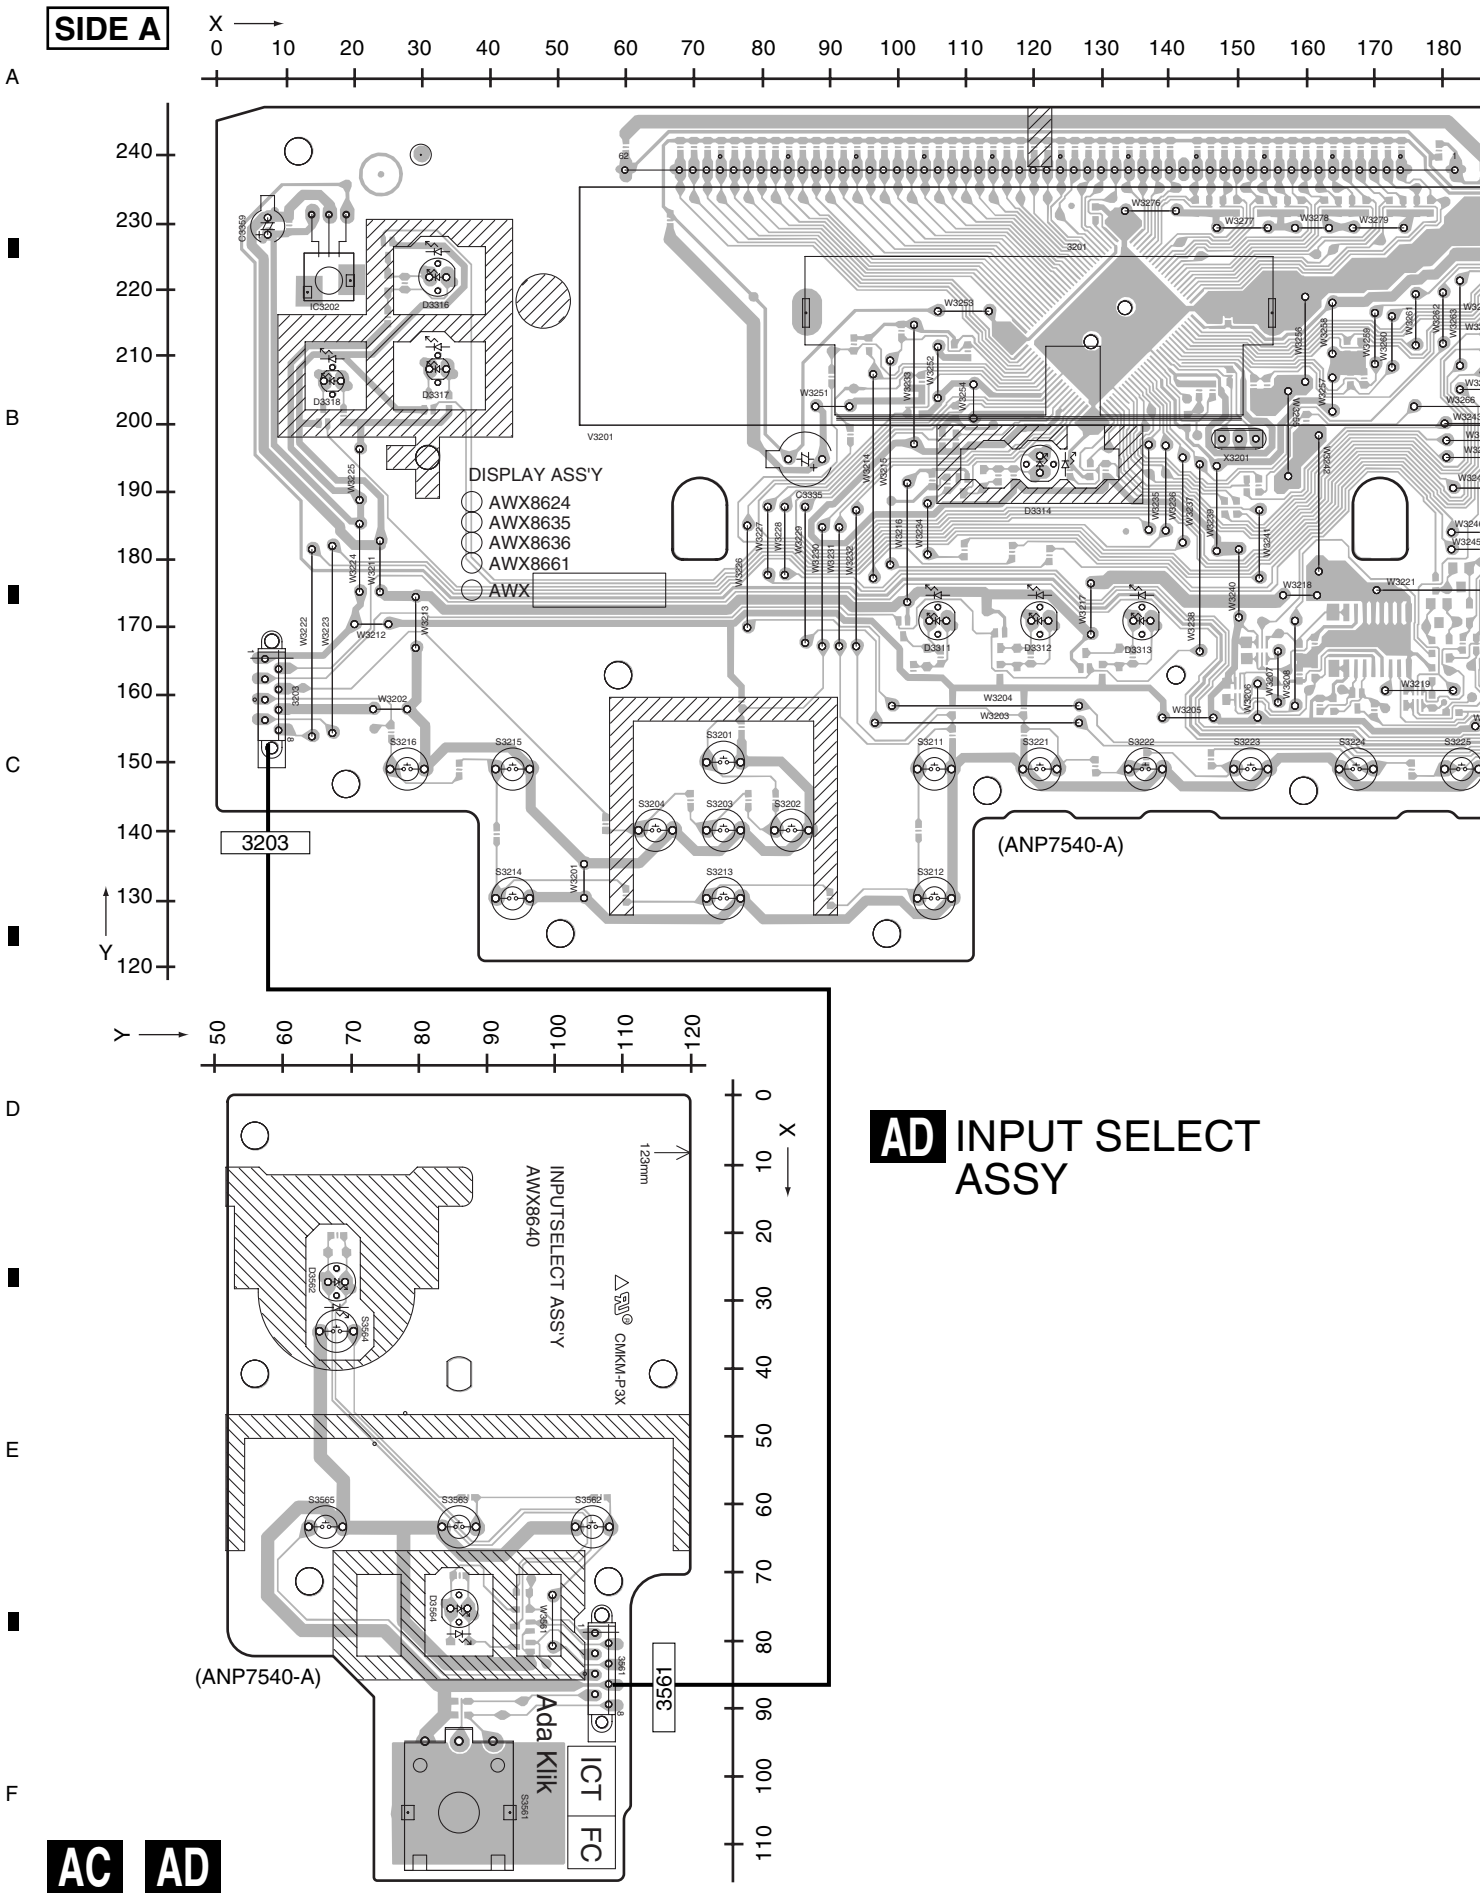

AD INPUT SELECT ASSY

AC **AD**


SIDE A

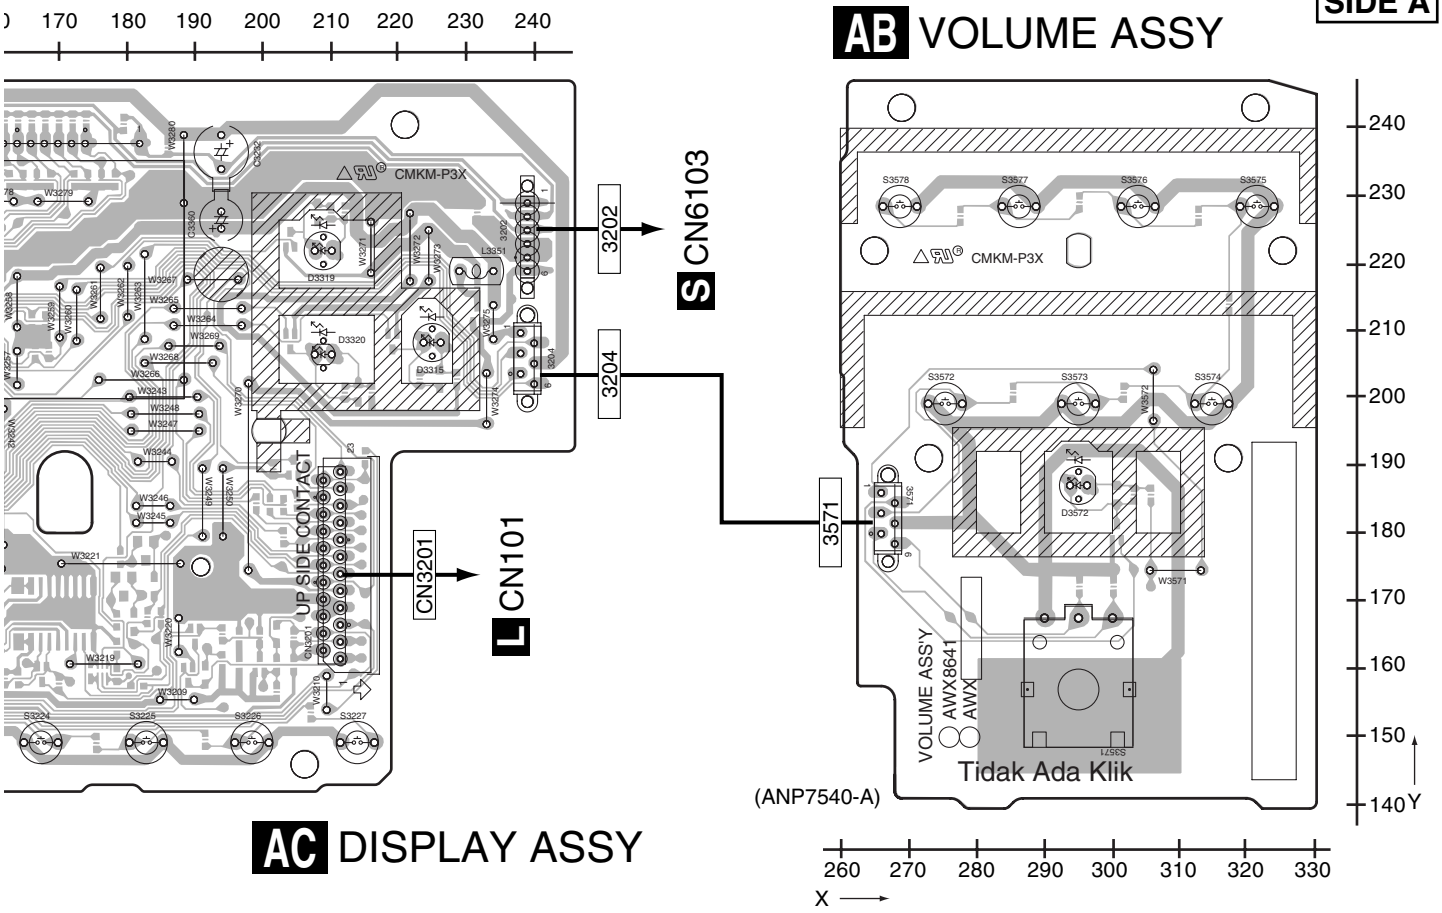

AB VOLUME ASSY
AC DISPLAY ASSY
S CN6103
L CN101
3202
3204
3571
CN3201
UP SIDE CONTACT
CMKM-P3X
VOLUME ASS'Y
AWX8641
AWX
Tidak Ada Klik
(ANP7540-A)
X
Y

AB AC

SIDE B

AB VOLUME ASSY

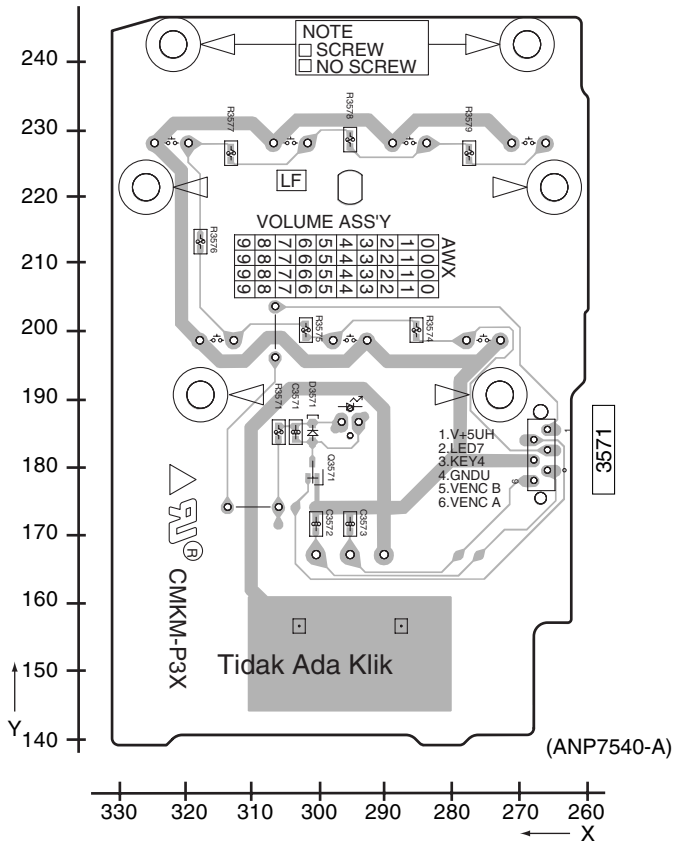


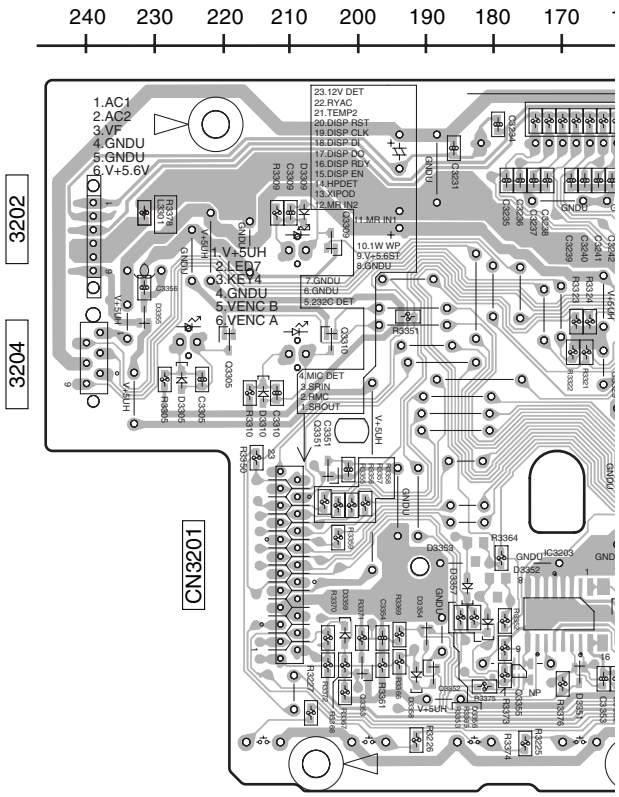


AC DISPLAY ASSY

AB **AC**

SIDE B

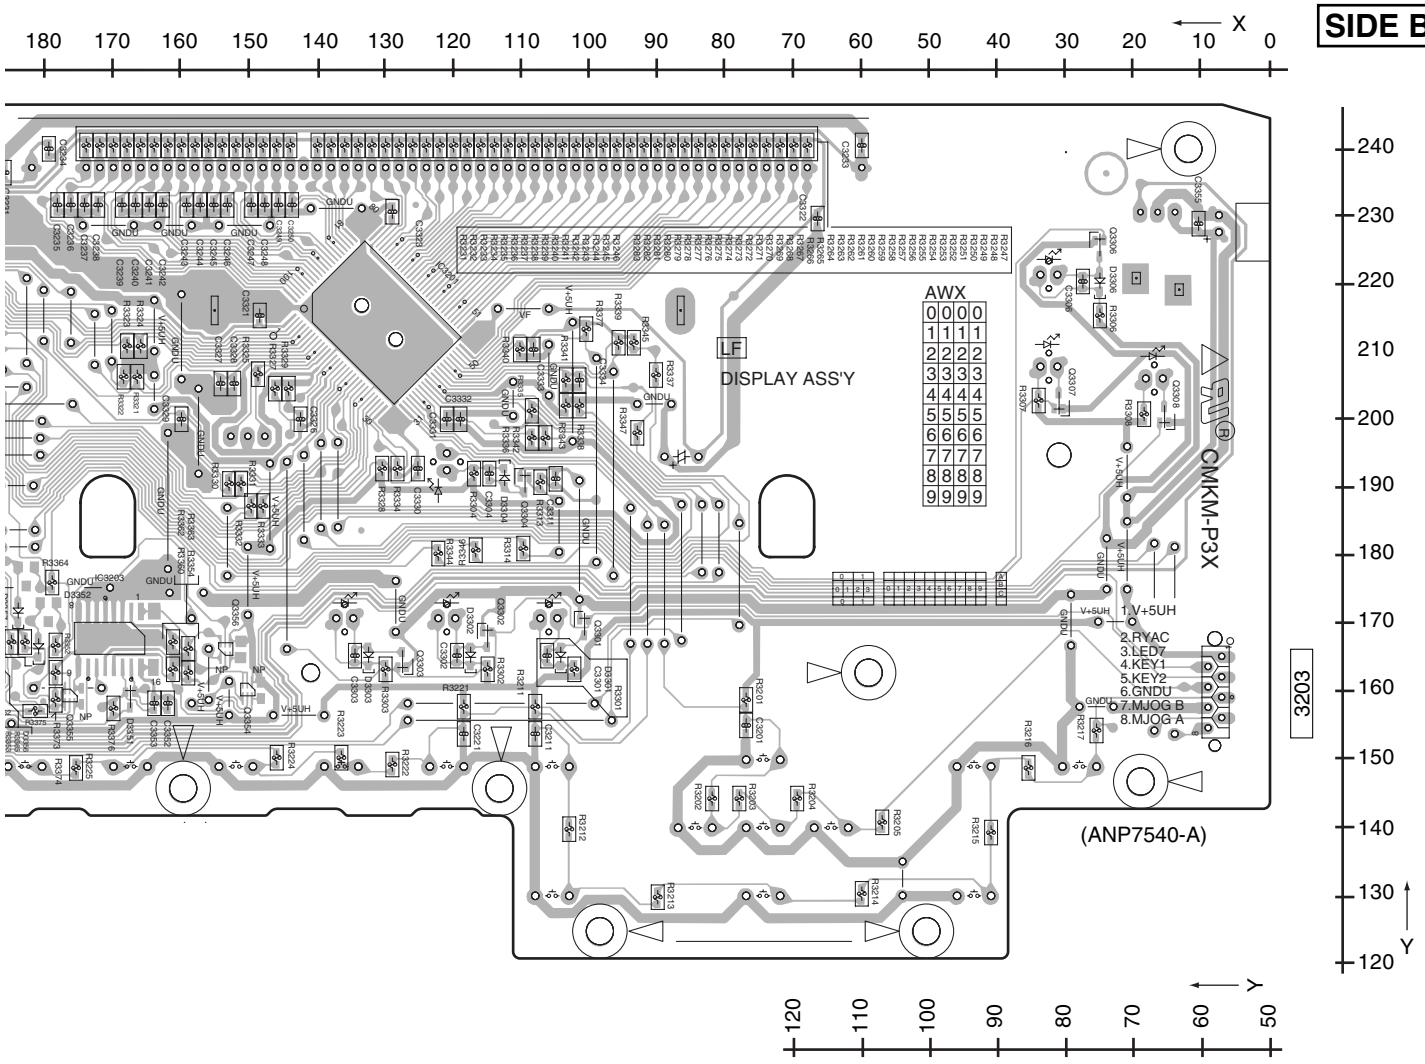


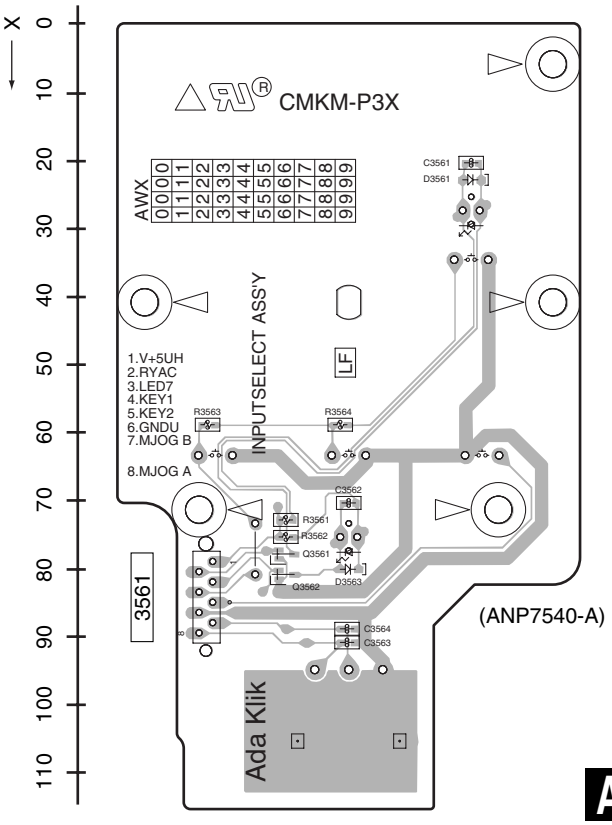

AD INPUT SELECT ASSY

AC AD


4.21 HDMI&DVC ASSY

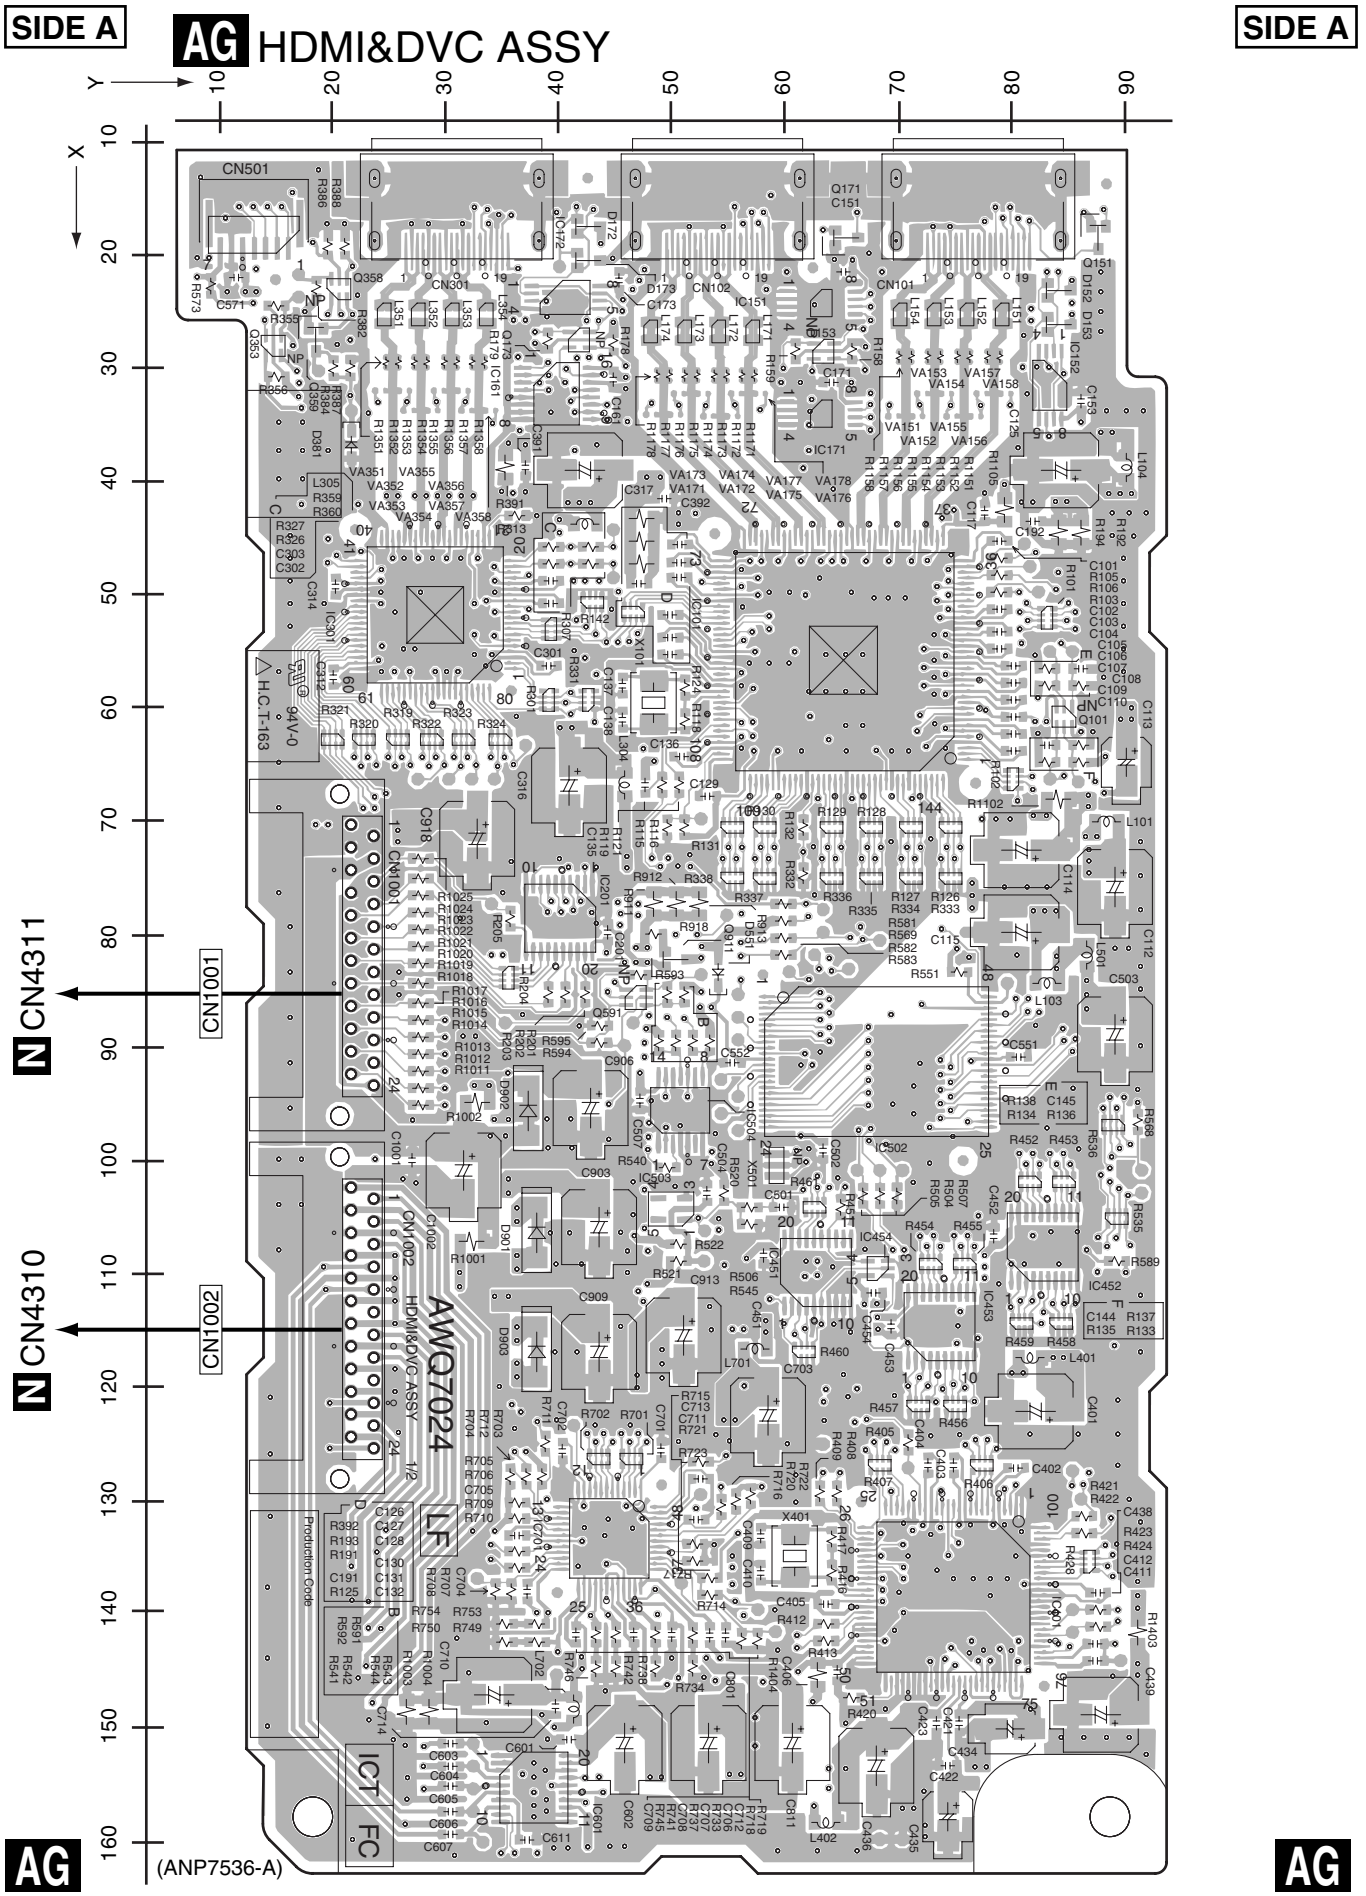

SIDE B

AG HDMI&DVC ASSY

SIDE B

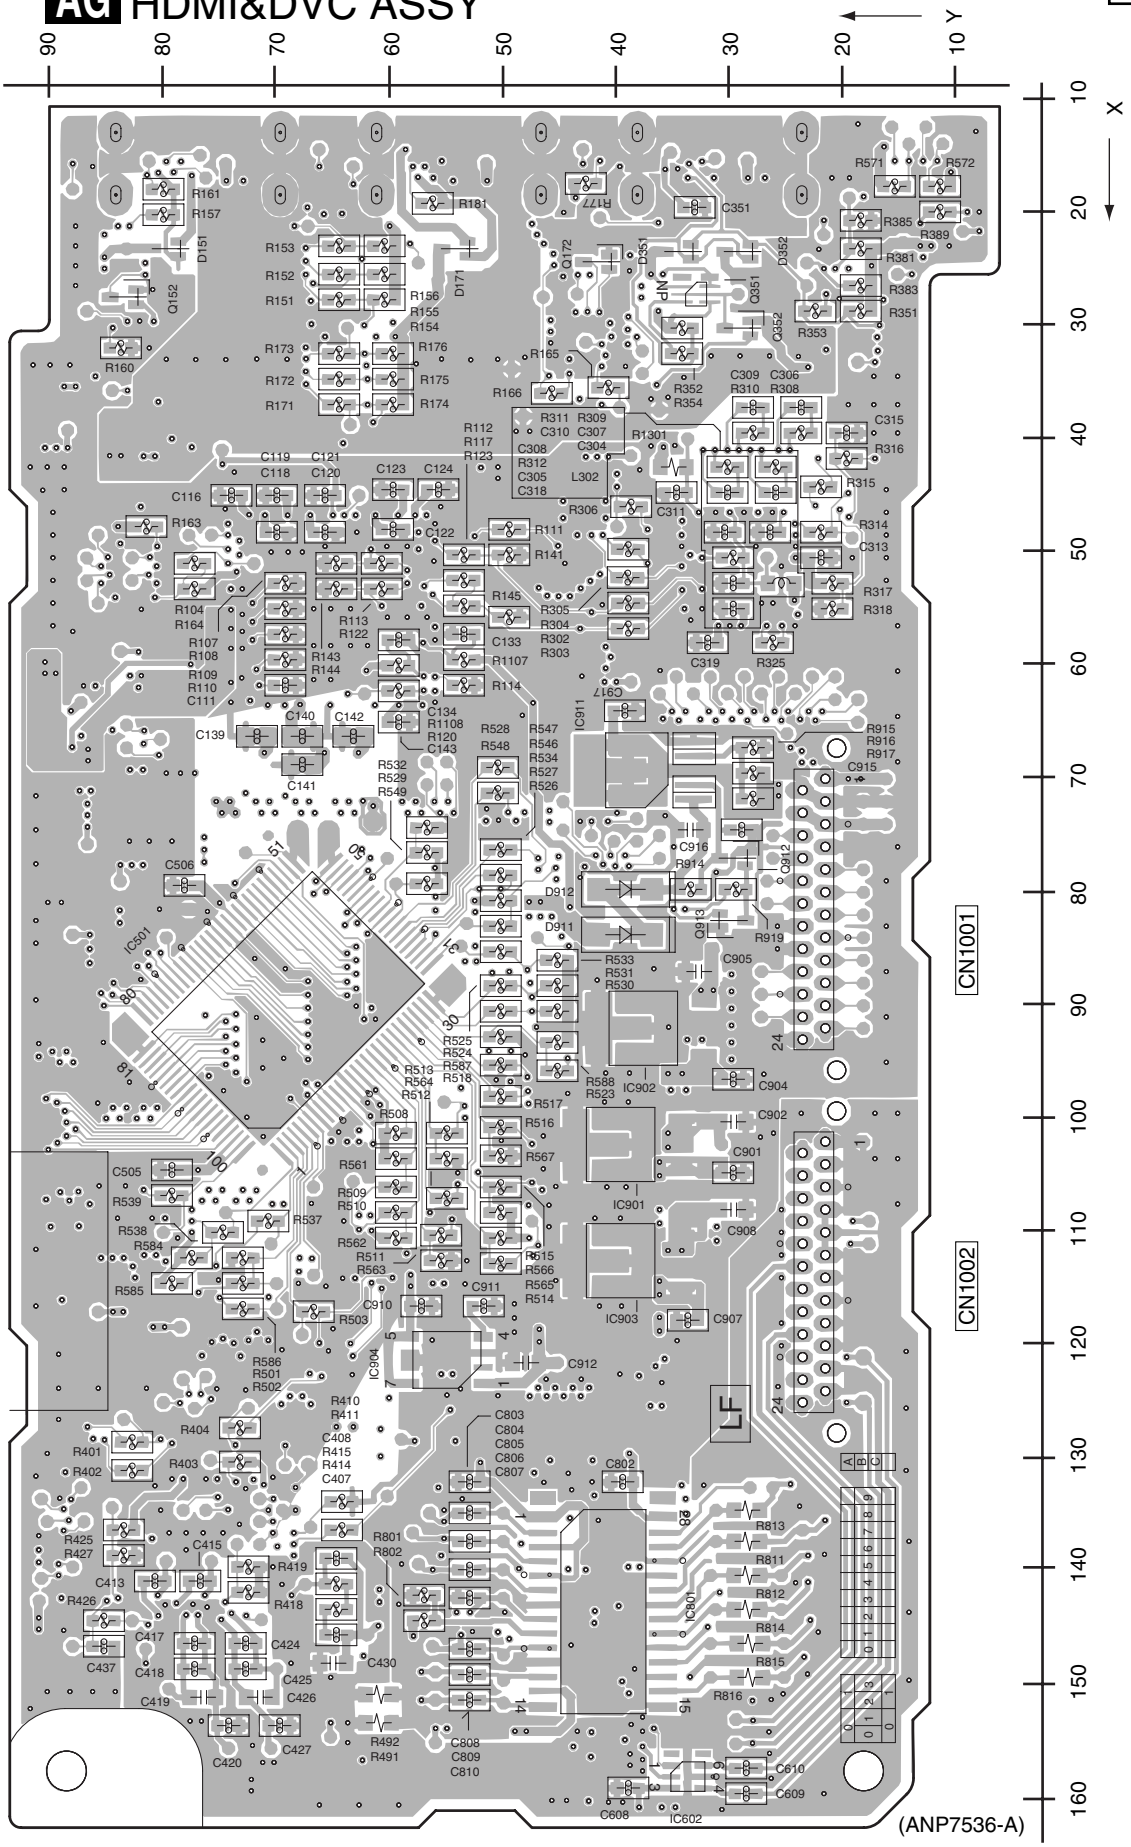



AG

AG

4.22 1394 ASSY

AF 1394 ASSY

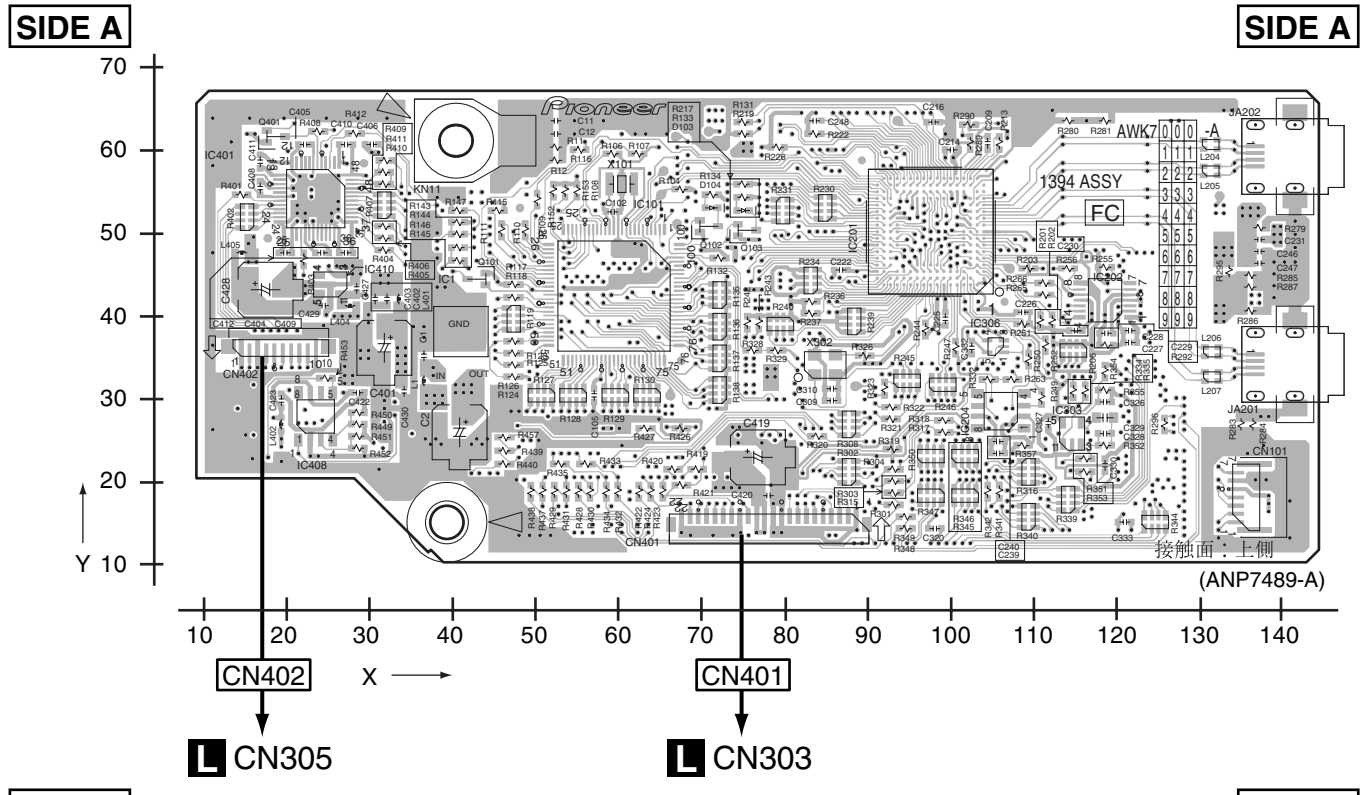

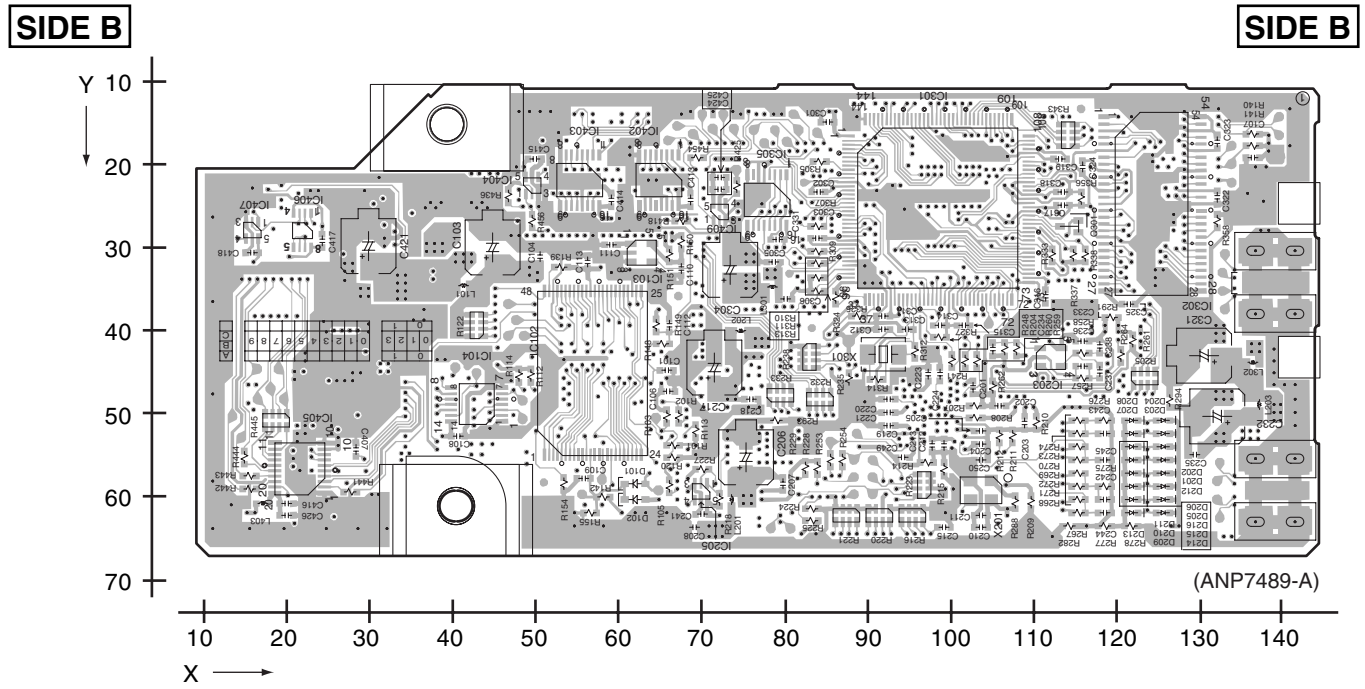

AF **AF**

5. PCB PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω → 56 x 10^1 → 561 ..... RD1/4PU 5 6 1 J
47k Ω → 47 x 10^3 → 473 ..... RD1/4PU 4 7 3 J
0.5 Ω → R50 ..... RN2H R 5 0 K
1 Ω → 1R0 ..... RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 x 10^1 → 5621 ..... RN1/4PC 5 6 2 1 F

- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

LIST OF ASSEMBLIES

Mark	Symbol and Description	VSX-74TXVi/KUXJ/CA, VSX-74TXVi-S/KUXJC	VSX-72TXV/KUXJ/CA, VSX-72TXV-S/KUXJC
NSP	1..POWER AMP ASSY	AWH7007	AWH7007
	2..POWER AMP-L ASSY	AWX8654	AWX8654
	2..POWER AMP-R ASSY	AWX8656	AWX8656
	2..POWER PROTECT ASSY	AWX8658	AWX8658
	2..POWER AMP IN ASSY	AWX8662	AWX8662
NSP	2..BRIDGE1 ASSY	AWX8667	AWX8667
NSP	2..BRIDGE2 ASSY	AWX8668	AWX8668
	1..1394 ASSY	AWK7882	Not used
NSP	1..COMPLEX ASSY	AWM7975	AWM7979
	2..TRANS 2-2 ASSY	AWX8626	AWX8626
	2..PRIMARY ASSY	AWX8628	AWX8628
NSP	2..FFC GUARD (FRONT) ASSY	AWX8634	AWX8634
	2..DISPLAY ASSY	AWX8635	AWX8636
	2..FRONT-IN ASSY	AWX8638	AWX8638
	2..HEADPHONE ASSY	AWX8639	AWX8639
	2..INPUT SELECT ASSY	AWX8640	AWX8640
	2..VOLUME ASSY	AWX8641	AWX8641
	1..DIGITAL MOTHER ASSY	AWP7037	AWP7041
	1..HDMI & DVC ASSY	AWQ7024	AWQ7024
NSP	1..VIDEO ASSY	AWQ7026	AWQ7026
	2..COMPOSITE V ASSY	AWX8620	AWX8620
	2..S VIDEO ASSY	AWX8622	AWX8622
	2..PREOUT & CONTROL ASSY	AWX8625	AWX8625
	1..COMPONENT & VOL ASSY	AWQ7028	AWQ7030
NSP	1..SECONDARY ASSY	AWR7023	AWR7026
	2..SP/PS ASSY	AWX8642	AWX8644
	2..TRANS 2-1 ASSY	AWX8646	AWX8646
NSP	2..DIODE ASSY	AWX8648	AWX8648
	2..VH TR ASSY	AWX8649	AWX8649
	2..DC/DC ASSY	AWX8650	AWX8650
	2..INTERFACE ASSY	AWX8651	AWX8651
NSP	2..TRANS SIDE ASSY	AWX8652	AWX8652
NSP	1..AUDIO ASSY	AWR7030	AWR7030
	2..V-AUDIO ASSY	AWX8637	AWX8637
NSP	2..BRIDGE3 ASSY	AWX8669	AWX8669
	2..LOCAL SUPPLY ASSY	AWX8671	AWX8671
	2..AUDIO & MULTI CH IN ASSY	AWX8674	AWX8674
NSP	2..FFC GUARD (SIDE) ASSY	AWX8696	AWX8696
	1..DSP ASSY	AWX8599	AWX8599
	1..FM/AM TUNER MODULE	AXX7172	AXX7172

■ CONTRAST OF PCB ASSEMBLIES

X SP/PS ASSY

AWX8644 and AWX8642 are constructed the same except for the following :

Mark	Symbol and Description	AWX8642	AWX8644
	C4101, C4102 (15000/71)	ACH7218	Not used
	C4101, C4102 (10000/71)	Not used	ACH7255

AC DISPLAY ASSY

AWX8636 and AWX8635 are constructed the same except for the following :

Mark	Symbol and Description	AWX8635	AWX8636
	D3315	SLR-343BBT	SLI-343URW
	R3305	RS1/16S391J	RS1/16S331J

■ PCB PARTS LIST FOR VSX-74TXVi UNLESS OTHER WISE NOTED

POWER AMP ASSY

MISCELLANEOUS

Mark	No.	Description	Part No.
	J 13	JUMPER WIRE	D20PDY0525E
	Y 6	LEAD WITH HOUSING	ADX7498
	Y 5	LEAD WITH HOUSING	ADX7404
	Y 4	LEAD WITH HOUSING	ADX7460
	Y 3	LEAD WITH HOUSING	ADX7458
	Y 2	LEAD WITH HOUSING	ADX7457
	Y 1	LEAD WITH HOUSING	ADX7459

COMPLEX ASSY

MISCELLANEOUS

Mark	No.	Description	Part No.
	J 3	JUMPER WIRE	D20PDY0620E
	J 9	JUMPER WIRE	D15A06-150-2651
	J 10	JUMPER WIRE	D15A08-150-2651
⚠	Y 14	AWG18 BOARD IN	ADX7490
⚠	Y 15	AWG18 BOARD IN	ADX7491

SECONDARY ASSY

MISCELLANEOUS

Mark	No.	Description	Part No.
	Y 8	AWG14 BOARD IN	ADX7451
	Y 9	AWG14 BOARD IN	ADX7488
	Y 11	AWG14 BOARD IN	ADX7454
	Y 10	AWG14 BOARD IN	ADX7489
	Y 12	AWG14 BOARD IN	ADX7455

FFC GUARD (FRONT) ASSY

MISCELLANEOUS

Mark	No.	Description	Part No.
	3151(A,205 ,20)	PCB BINDER	VEF1040
	3152(A,285 ,14)	PCB BINDER	VEF1040

FFC GUARD (SIDE) ASSY

MISCELLANEOUS

Mark	No.	Description	Part No.
	5862(A,171 ,32)	PCB BINDER	VEF1040
	5861(A,171 ,77)	PCB BINDER	VEF1040

A AUDIO & MULTI CH IN ASSY

MISCELLANEOUS

Mark	No.	Description	Part No.
	IC 6201(B,71 ,191)	AUDIO IC	BD3841FS
	IC 6203(B,130 ,185)	OP-AMP IC	BA4560RF
	L 6201(B,19 ,215)	CHIP SOLID INDUCTOR	QTL1013
	L 6207(B,38 ,172)	CHIP BEADS	VTL1083
	L 6208(B,83 ,178)	CHIP BEADS	VTL1083
	JA6201(A,14 ,227)	JACK	RKN1004
	CN6202(A,20 ,187)	13P SOCKET	XKP3077
	CN6203(A,109 ,174)	23P SOCKET	XKP3082
	CN6204(A,66 ,174)	17P SOCKET	XKP3079
	CN6205(A,133 ,230)	PIN JACK(4P)	AKB7172
	CN6207(A,91 ,230)	PIN JACK(4P)	AKB7172
	CN6208(A,63 ,230)	PIN JACK(4P)	AKB7172
	CN6209(A,35 ,230)	PIN JACK(4P)	AKB7172
	6201(A,141 ,173)	PCB BINDER	VEF1040

RESISTORS

Mark	No.	Description	Part No.
	R 6201(B,122 ,215)		RS1/16S473J
	R 6202(B,126 ,215)		RS1/16S473J
	R 6205(B,96 ,215)		RS1/16S104J
	R 6206(B,100 ,215)		RS1/16S104J
	R 6207(B,82 ,215)		RS1/16S473J
	R 6208(B,86 ,215)		RS1/16S473J
	R 6209(B,68 ,215)		RS1/16S473J
	R 6210(B,72 ,215)		RS1/16S473J
	R 6211(B,54 ,215)		RS1/16S473J
	R 6212(B,58 ,215)		RS1/16S473J
	R 6213(B,41 ,215)		RS1/16S473J
	R 6214(B,45 ,215)		RS1/16S473J
	R 6215(B,27 ,213)		RS1/16S473J
	R 6216(B,31 ,213)		RS1/16S473J
	R 6217(B,119 ,214)		RS1/16S331J
	R 6218(B,128 ,214)		RS1/16S331J
	R 6221(B,93 ,214)		RS1/16S222J
	R 6222(B,102 ,214)		RS1/16S222J
	R 6223(B,79 ,214)		RS1/16S331J
	R 6224(B,88 ,214)		RS1/16S331J
	R 6225(B,65 ,214)		RS1/16S331J
	R 6226(B,74 ,214)		RS1/16S331J
	R 6227(B,52 ,214)		RS1/16S331J
	R 6228(B,61 ,214)		RS1/16S331J
	R 6229(B,38 ,214)		RS1/16S331J

Mark No.	Description	Part No.
R 6230(B,47 ,214)		RS1/16S331J
R 6231(B,24 ,212)		RS1/16S331J
R 6232(B,33 ,212)		RS1/16S331J
R 6237(B,96 ,204)		RS1/16S154J
R 6238(B,100 ,204)		RS1/16S154J
R 6251(B,135 ,212)		RS1/16S104J
R 6252(B,139 ,212)		RS1/16S104J
R 6253(B,134 ,209)		RS1/16S331J
R 6254(B,140 ,209)		RS1/16S331J
R 6255(B,136 ,192)		RS1/16S104J
R 6256(B,141 ,181)		RS1/16S104J
R 6257(B,136 ,188)		RS1/16S561J
R 6258(B,136 ,182)		RS1/16S561J
R 6259(B,132 ,196)		RS1/16S394J
R 6260(B,134 ,177)		RS1/16S394J
R 6261(B,124 ,196)		RS1/16S303J
R 6262(B,126 ,177)		RS1/16S303J
R 6263(B,122 ,196)		RS1/16S471J
R 6264(B,124 ,177)		RS1/16S471J
R 6265(B,117 ,191)		RS1/16S224J
R 6266(B,117 ,176)		RS1/16S224J
R 6267(B,49 ,192)		RS1/16S101J
R 6268(B,51 ,191)		RS1/16S101J
R 6269(B,84 ,195)		RS1/16S0R0J
R 6270(B,84 ,193)		RS1/16S0R0J
R 6271(B,102 ,191)		RS1/16S473J
R 6272(B,100 ,191)		RS1/16S473J
R 6273(B,97 ,191)		RS1/16S473J
R 6274(B,95 ,191)		RS1/16S473J
R 6282(B,112 ,203)		RS1/16S105J
R 6283(B,110 ,203)		RS1/16S105J
R 6284(B,43 ,178)		RS1/16S473J
R 6285(B,41 ,176)		RS1/16S473J
R 6288(B,10 ,216)		RS1/16S0R0J
CAPACITORS		
C 6237(A,95 ,207)		CEAT100M50
C 6238(A,101 ,207)		CEAT100M50
C 6251(A,134 ,201)		CEAT100M50
C 6252(A,140 ,201)		CEAT100M50
C 6255(A,139 ,189)		CEAT470M16
C 6256(A,139 ,181)		CEAT470M16
C 6259(B,130 ,196)		CKSRYB822K50
C 6260(B,132 ,177)		CKSRYB822K50
C 6261(B,128 ,196)		CKSRYB122K50
C 6262(B,130 ,177)		CKSRYB122K50
C 6263(A,120 ,194)		CEAT100M50
C 6264(A,120 ,174)		CEAT100M50
C 6265(A,122 ,181)		CEAT470M16
C 6266(A,122 ,187)		CEAT470M16
C 6267(B,53 ,190)		CCSRCH101J50
C 6268(B,55 ,190)		CCSRCH101J50
C 6269(B,67 ,182)		CKSRYB103K50
C 6270(B,69 ,182)		CKSRYB103K50
C 6279(B,130 ,222)		CKSRYB103K50
C 6281(B,19 ,222)		CKSRYB103K50
C 6283(B,132 ,222)		CKSRYB104K16
C 6284(B,91 ,224)		CKSRYB103K50
C 6285(B,64 ,223)		CKSRYB103K50
C 6286(B,35 ,224)		CKSRYB104K16
C 6291(B,134 ,222)		CKSRYB471K50
C 6292(B,33 ,224)		CKSRYB471K50
C 6293(B,126 ,196)		CKSRYB122K50
C 6294(B,128 ,177)		CKSRYB122K50
C 6295(A,78 ,180)		CEAT470M16
C 6296(A,73 ,172)		CEAT470M16

B V-AUDIO ASSY

Mark No.	Description	Part No.
MISCELLANEOUS		
IC 6301(B,53 ,148)	AUDIO IC	BD3841FS
Q 6301(B,13 ,143)	TRANSISTOR	IMX25
JA 6301(A,26 ,107)	PIN JACK(6P)	AKB7174
CN6301(A,121 ,143)	6P SOCKET	KP200TA6L
CN6302(A,38 ,163)	23P SOCKET	XKP3082
CN6307(A,61 ,107)	PIN JACK(4P)	AKB7172
CN6308(A,89 ,107)	PIN JACK(4P)	AKB7172
CN6309(A,117 ,107)	PIN JACK(4P)	AKB7172
RESISTORS		
R 6301(B,23 ,127)		RS1/16S473J
R 6302(B,19 ,127)		RS1/16S473J
R 6303(B,26 ,128)		RS1/16S331J
R 6304(B,17 ,128)		RS1/16S331J
R 6307(B,36 ,127)		RS1/16S473J
R 6308(B,32 ,127)		RS1/16S473J
R 6309(B,39 ,128)		RS1/16S331J
R 6310(B,30 ,128)		RS1/16S331J
R 6313(B,49 ,127)		RS1/16S473J
R 6314(B,45 ,127)		RS1/16S473J
R 6315(B,52 ,128)		RS1/16S331J
R 6316(B,43 ,128)		RS1/16S331J
R 6319(B,62 ,127)		RS1/16S473J
R 6320(B,58 ,127)		RS1/16S473J
R 6321(B,65 ,128)		RS1/16S331J
R 6322(B,55 ,128)		RS1/16S331J
R 6325(B,75 ,127)		RS1/16S104J
R 6326(B,71 ,127)		RS1/16S104J
R 6327(B,78 ,128)		RS1/16S222J
R 6328(B,69 ,128)		RS1/16S222J
R 6329(B,75 ,134)		RS1/16S154J
R 6330(B,71 ,134)		RS1/16S154J
R 6331(B,88 ,127)		RS1/16S473J
R 6332(B,84 ,127)		RS1/16S473J
R 6333(B,91 ,128)		RS1/16S331J
R 6334(B,82 ,128)		RS1/16S331J
R 6337(B,101 ,127)		RS1/16S104J
R 6338(B,97 ,127)		RS1/16S104J
R 6339(B,104 ,128)		RS1/16S222J
R 6340(B,95 ,128)		RS1/16S222J
R 6341(B,101 ,134)		RS1/16S154J
R 6342(B,97 ,134)		RS1/16S154J
R 6343(B,113 ,133)		RS1/16S473J
R 6344(B,109 ,127)		RS1/16S473J
R 6345(B,113 ,135)		RS1/16S331J
R 6346(B,109 ,129)		RS1/16S331J
R 6351(B,13 ,131)		RS1/16S102J
R 6352(B,9 ,136)		RS1/16S102J
R 6353(B,18 ,149)		RS1/16S103J
R 6354(B,8 ,149)		RS1/16S103J

Mark No.	Description	Part No.
R 6355	(B,20 ,155)	RS1/16S102J
R 6356	(B,11 ,158)	RS1/16S102J
R 6361	(B,106 ,145)	RS1/16S101J
R 6362	(B,73 ,148)	RS1/16S101J
R 6367	(B,116 ,155)	RS1/16S0R0J
R 6368	(B,107 ,162)	RS1/16S0R0J
R 6369	(B,106 ,166)	RS1/16S0R0J
R 6370	(B,105 ,162)	RS1/16S0R0J
R 6371	(B,72 ,159)	RS1/16S0R0J
R 6372	(B,74 ,159)	RS1/16S0R0J
R 6373	(B,76 ,159)	RS1/16S0R0J
R 6374	(B,73 ,156)	RS1/16S0R0J
R 6375	(B,73 ,154)	RS1/16S0R0J
R 6381	(B,41 ,153)	RS1/16S473J
R 6382	(B,43 ,152)	RS1/16S473J
R 6383	(B,35 ,165)	RS1/16S0R0J
R 6384	(B,68 ,166)	RS1/16S0R0J
R 6391		RS1/16S0R0J
R 6392		RS1/16S0R0J

CAPACITORS

C 6329	(A,77 ,137)	CEAT100M50
C 6330	(A,70 ,137)	CEAT100M50
C 6341	(A,103 ,137)	CEAT100M50
C 6342	(A,96 ,137)	CEAT100M50
C 6349	(B,33 ,114)	CKSRYB104K16
C 6350	(B,61 ,114)	CKSRYB104K16
C 6351	(B,89 ,114)	CKSRYB104K16
C 6359	(B,69 ,152)	CCSRCH101J50
C 6360	(B,71 ,151)	CCSRCH101J50
C 6361	(B,61 ,156)	CKSRYB103K50
C 6362	(B,58 ,157)	CKSRYB103K50
C 6363	(A,68 ,163)	CEAT470M16
C 6364	(A,85 ,166)	CEAT470M16
C 6368	(B,19 ,114)	CKSRYB103K50
C 6369	(B,22 ,111)	CKSRYB103K50
C 6379	(B,35 ,114)	CKSRYB471K50
C 6380	(B,63 ,114)	CKSRYB471K50
C 6381	(B,91 ,114)	CKSRYB471K50

C FRONT-IN ASSY

MISCELLANEOUS

IC 3451	(B,43 ,37)	OP-AMP IC	BA4560RF
Q 3451	(B,83 ,33)	CHIP TRANSISTOR	HN1C01FU
D 3451	(B,58 ,42)	DIODE	UDZS5R1(B)
D 3452	(B,60 ,42)	DIODE	UDZS5R1(B)
D 3453	(B,24 ,36)	DIODE	UDZS5R1(B)
D 3454	(B,35 ,31)	DIODE	DAN217
L 3451	(B,88 ,65)	CHIP BEADS	VTL1083
L 3452	(B,94 ,50)	CHIP BEADS	VTL1083
L 3453	(B,30 ,26)	CHIP SOLID INDUCTOR	QTL1013
L 3455	(B,88 ,24)	CHIP BEADS	VTL1083
JA 3451	(A,12 ,11)	JACK	RKN1004
JA 3452	(A,97 ,15)	FRONT AV INPUT	AKX7019
KN 3451	(A,13 ,39)	WRAPPING TERMINAL	VNF1084
KN 3452	(A,106 ,39)	WRAPPING TERMINAL	VNF1084
CN 3451	(A,102 ,53)	CONNECTOR	52045-1545

RESISTORS

R 3451	(B,20 ,34)	RS1/16S682J
R 3452	(B,14 ,28)	RS1/16S104J
R 3453	(B,26 ,32)	RS1/16S101J
R 3454	(B,32 ,31)	RS1/16S104J
R 3455	(B,44 ,29)	RS1/16S333J
R 3456	(B,39 ,29)	RS1/16S432J
R 3457	(B,50 ,41)	RS1/16S432J
R 3458	(B,45 ,44)	RS1/16S333J
R 3459	(B,47 ,44)	RS1/16S101J
R 3460	(B,7 ,19)	RS1/16S102J
R 3461	(B,56 ,44)	RS1/16S104J
R 3462	(B,44 ,23)	RS1/16S101J
R 3463	(B,34 ,41)	RS1/16S102J
R 3465	(B,58 ,46)	RS1/16S0R0J
R 3466	(B,60 ,46)	RS1/16S0R0J
R 3467	(B,63 ,48)	RS1/16S0R0J
R 3468	(B,48 ,34)	RS1/16S0R0J
R 3471	(B,53 ,27)	RS1/16S750J
R 3472	(B,55 ,31)	RS1/16S0R0J
R 3473	(B,60 ,26)	RS1/16S750J
R 3474	(B,60 ,30)	RS1/16S0R0J
R 3475	(B,65 ,24)	RS1/16S750J
R 3476	(B,64 ,31)	RS1/16S0R0J
R 3480	(B,47 ,29)	RS1/16S101J
R 3481	(B,77 ,23)	RS1/16S104J
R 3482	(B,105 ,23)	RS1/16S104J
R 3483	(B,75 ,27)	RS1/16S221J
R 3484	(B,101 ,27)	RS1/16S221J
R 3485	(B,75 ,31)	RS1/16S104J
R 3486	(B,93 ,24)	RS1/16S104J
R 3487	(B,73 ,35)	RS1/16S221J
R 3488	(B,93 ,28)	RS1/16S221J
R 3489	(B,96 ,49)	RS1/16S101J
R 3490	(B,101 ,47)	RS1/16S101J
R 3491	(B,89 ,38)	RS1/16S153J
R 3492	(B,91 ,38)	RS1/16S153J
R 3493	(B,87 ,38)	RS1/16S470J
R 3494	(B,101 ,43)	RS1/16S470J
R 3496	(B,101 ,23)	RS1/16S0R0J
R 3497	(B,78 ,26)	RS1/16S0R0J
R 3498	(B,95 ,36)	RS1/16S0R0J
R 3499	(B,97 ,36)	RS1/16S0R0J

CAPACITORS

C 3451	(B,12 ,28)	CCSRCH471J50
C 3452	(A,29 ,36)	CEAT100M50
C 3453	(B,30 ,31)	CCSRCH101J50
C 3454	(B,45 ,29)	CCSRCH220J50
C 3455	(B,44 ,44)	CCSRCH220J50
C 3457	(A,31 ,41)	CEAT100M50
C 3459	(B,36 ,35)	CKSRYB103K50
C 3460	(B,48 ,38)	CKSRYB103K50
C 3461	(A,41 ,44)	CEAT100M50
C 3462	(A,53 ,38)	CEAT100M50
C 3463	(B,7 ,27)	CKSRYB105K6R3
C 3464	(B,8 ,34)	CKSRYB104K16
C 3465	(B,6 ,34)	CKSRYB103K50
C 3467	(B,32 ,26)	CKSRYB104K16
C 3470	(A,50 ,44)	CEAT100M50
C 3471	(B,51 ,28)	CKSRYB104K25
C 3475	(B,104 ,32)	CKSRYB104K16
C 3476	(B,104 ,35)	CKSRYB471K50

Mark	No.	Description	Part No.
C	3481(B,79 ,23)		CCSRCH221J50
C	3482(B,103 ,23)		CCSRCH221J50
C	3483(A,72 ,32)		CEAT100M50
C	3484(A,96 ,31)		CEAT100M50
C	3485(B,75 ,35)		CCSRCH101J50
C	3486(B,91 ,26)		CCSRCH101J50
C	3489(B,87 ,33)		CKSRYB103K50
C	3490(B,93 ,38)		CKSRYB103K50
C	3491(A,90 ,34)	ELECT. CAPACITOR	CEAT330M25
C	3492(A,95 ,43)	ELECT. CAPACITOR	CEAT330M25
C	3494(B,106 ,29)		CKSRYB104K16
C	3495(B,103 ,29)		CKSRYB471K50
C	3496(B,75 ,23)		CKSRYB103K50

D HEADPHONE ASSY

MISCELLANEOUS

L	3551(B,129 ,129) CHIP BEADS	VTL1083
KN	3551(A,119 ,114) WRAPPING TERMINAL	VNF1084
CN	3551(A,133 ,128) 4P JUMPER CONNECTOR	52147-0410
	3551(A,127 ,85) PHONE JACK	AKN7029

RESISTORS

R	3551(B,132 ,97)	RS1/16S102J

CAPACITORS

C	3551(B,131 ,114)	CKSRYB392K50
C	3552(B,122 ,100)	CKSRYB392K50
C	3553(B,124 ,110)	CCSRCH471J50
C	3554(B,122 ,110)	CKSRYB103K50
C	3555(B,119 ,110)	CKSRYB104K16

E BRIDGE1 ASSY

MISCELLANEOUS

CN	5431(A,51 ,120) 23P PLUG	XKP3071
CN	5432(A,77 ,72) 23P PLUG	XKP3071

F BRIDGE2 ASSY

MISCELLANEOUS

CN	5441(A,48 ,59) CONNECTOR	52045-1745
CN	5442(A,68 ,43) 11P PLUG	XKP3065
CN	5443(A,69 ,19) 13P PLUG	XKP3066

G TRANS SIDE ASSY

MISCELLANEOUS

L	4401(B,307 ,6) CHIP BEADS	VTL1083
L	4402(B,307 ,8) CHIP BEADS	VTL1083
L	4403(B,307 ,10) CHIP BEADS	VTL1083
L	4404(B,307 ,14) CHIP BEADS	VTL1083
L	4405(B,307 ,16) CHIP BEADS	VTL1083
L	4406(B,307 ,18) CHIP BEADS	VTL1083
L	4407(B,307 ,20) CHIP BEADS	VTL1083
L	4408(B,307 ,22) CHIP BEADS	VTL1083
L	4409(B,307 ,24) CHIP BEADS	VTL1083
L	4410(B,307 ,26) CHIP BEADS	VTL1083
L	4411(B,307 ,28) CHIP BEADS	VTL1083
L	4412(B,307 ,30) CHIP BEADS	VTL1083
L	4413(B,307 ,32) CHIP BEADS	VTL1083
J	5 JUMPER WIRE	D20PDY0410E
CN	4402(A,319 ,21) KR CONNECTOR	S13B-PH
CN	4403(A,79 ,28) CONNECTOR	52045-1745
	4401(A,61 ,9) 4P CABLE HOLDER	51048-0400

H BRIDGE3 ASSY

MISCELLANEOUS

CN	5451(A,169 ,100) 17P CONNECTOR	52044-1745
CN	5452(A,140 ,100) 19P CONNECTOR	52044-1945
CN	5453(A,135 ,134) 23P PLUG	XKP3071
CN	5454(A,126 ,166) 23P PLUG	XKP3071
CN	5455(A,169 ,166) 17P PLUG	XKP3068

I COMPOSITE V ASSY

MISCELLANEOUS

IC	2001(A,125 ,89) IC	CD74HC4051PW
IC	2002(A,125 ,77) IC	CD74HC4051PW
IC	2003(A,129 ,101) IC	CD74HC4053PW
IC	2004(A,134 ,89) IC	CD74HC4052PW
IC	2005(B,117 ,126) VIDEO AMP IC	TK15420M
IC	2006(A,122 ,42) VIDEO SW IC	NJM2279M
IC	2007(B,145 ,64) CHARACTER GENERATOR	PDC131A
IC	2008(A,141 ,111) LOGIC IC	CD4094BNS
IC	2009(B,132 ,97) LOGIC IC	CD4094BNS
Q	2001(B,143 ,80) TRANSISTOR	2SC4081
D	2001(A,150 ,29) DIODE	DAP202K
L	2003(A,129 ,68) AXIAL INDUCTOR	LAU330J
JA	2005(A,95 ,130) PIN JACK(1P)	AKB7175
X	2001(A,134 ,55) CRYSTAL RESONATOR (14.31818MHz)	ASS1056
CN	2001(A,144 ,24) 15P SOCKET	XKP3078
CN	2002(A,131 ,123) 13P SOCKET	XKP3077
	2001(A,95 ,109) PIN JACK(2P)	AKB7176
	2003(A,95 ,53) PIN JACK(2P)	AKB7176
	2004(A,95 ,25) PIN JACK(2P)	AKB7176
	2002(A,95 ,81) PIN JACK(2P)	AKB7176

RESISTORS

R	2001(B,103 ,116)	RS1/16S750J
R	2002(B,103 ,102)	RS1/16S750J
R	2003(B,103 ,88)	RS1/16S750J
R	2004(B,104 ,75)	RS1/16S750J
R	2005(B,103 ,46)	RS1/16S750J
R	2006(B,104 ,19)	RS1/16S750J
R	2007(B,104 ,130)	RS1/16S750J
R	2008(B,113 ,62)	RS1/16S750J
R	2009(B,114 ,36)	RS1/16S750J
R	2010(A,149 ,118)	RS1/16S0R0J
R	2012(B,141 ,35)	RS1/16S750J
R	2013(A,115 ,128)	RS1/16S472J
R	2014(A,119 ,128)	RS1/16S472J
R	2015(A,115 ,127)	RS1/16S182J
R	2016(A,119 ,127)	RS1/16S182J
R	2017(A,114 ,124)	RS1/16S202J
R	2018(A,120 ,124)	RS1/16S202J
R	2019(A,147 ,75)	RS1/16S331J
R	2020(A,147 ,77)	RS1/16S331J
R	2021(A,147 ,79)	RS1/16S331J

Mark	No.	Description	Part No.
	R 2022(A,150 ,75)		RS1/16S102J
	R 2023(B,150 ,79)		RS1/16S512J
	R 2024(B,148 ,79)		RS1/16S392J
A	R 2025(B,144 ,83)		RS1/16S102J
	R 2027(A,140 ,104)		RS1/16S473J
	R 2028(A,142 ,104)		RS1/16S473J
	R 2029(A,144 ,104)		RS1/16S473J
	R 2030(A,145 ,104)		RS1/16S473J
	R 2031(A,149 ,104)		RS1/16S473J
	R 2032(A,147 ,104)		RS1/16S473J
	R 2033(B,144 ,100)		RS1/16S473J
	R 2034(B,144 ,98)		RS1/16S473J
	R 2035(B,144 ,96)		RS1/16S473J
	R 2036(A,139 ,117)		RS1/16S0R0J
B	R 2070(A,115 ,109)		RS1/16S0R0J
	R 2082(A,133 ,40)		RS1/16S0R0J
	R 2091(A,123 ,122)		RS1/16S0R0J
	R 2092(A,124 ,26)		RS1/16S0R0J
	R 2095(B,129 ,86)		RS1/16S473J
	R 9095		RS1/16S0R0J
	CAPACITORS		
	C 2007(B,104 ,132)		CCSRCH181J50
	C 2008(B,104 ,61)		CCSRCH181J50
	C 2009(B,104 ,33)		CCSRCH181J50
	C 2012(A,141 ,33)	ELECT. CAPACITOR	CEAT102M6R3
C	C 2013(A,133 ,33)		CEAT101M10
	C 2014(A,127 ,33)		CEAT101M10
	C 2015(A,119 ,91)		CKSRYB103K50
	C 2016(A,130 ,86)		CKSRYB103K50
	C 2017(A,118 ,73)		CKSRYB103K50
	C 2018(A,128 ,81)		CKSRYB103K50
	C 2019(A,128 ,97)		CKSRYB103K50
	C 2020(A,130 ,105)		CKSRYB103K50
	C 2021(A,130 ,92)		CKSRYB103K50
	C 2022(A,139 ,86)		CKSRYB103K50
D	C 2024(A,119 ,106)		CEAT101M10
	C 2025(A,119 ,114)		CEAT101M10
	C 2026(B,119 ,122)		CKSRYB103K50
	C 2027(B,113 ,131)		CKSRYB103K50
	C 2028(A,112 ,116)		CEAT101M10
	C 2029(A,127 ,116)		CEAT101M10
	C 2034(A,130 ,39)		CKSRYB103K50
	C 2035(A,129 ,44)		CKSRYB103K50
	C 2036(A,113 ,47)		CEAT100M50
	C 2037(A,141 ,48)		CEAT101M10
	C 2038(A,150 ,49)		CEAT101M10
E	C 2039(B,142 ,54)		CKSRYB473K25
	C 2040(B,143 ,74)		CKSRYB473K25
	C 2041(B,130 ,57)		CCSRCH120J50
	C 2042(B,130 ,62)		CCSRCH120J50
	C 2043(A,139 ,63)		CCSRCH240J50
	C 2044(A,139 ,64)		CCSRCH240J50
	C 2045(A,140 ,67)		CCSRCH101J50
	C 2046(A,140 ,69)		CCSRCH101J50
	C 2047(A,140 ,70)		CCSRCH101J50
	C 2048(A,149 ,68)		CKSRYB122K50
F	C 2049(A,149 ,63)		CKSRYB122K50
	C 2050(A,149 ,58)		CCSRCH101J50
	C 2052(A,148 ,84)		CEAT101M10
	C 2053(B,132 ,112)		CKSRYB103K50

Mark	No.	Description	Part No.
	C 2054(B,131 ,105)		CKSRYB103K50
	C 2055(B,147 ,76)		CKSRYB103K50
	C 2086(B,109 ,58)		CKSRYB103K50
	C 2087(B,127 ,110)		CKSRYB103K50
	C 2088(A,132 ,120)		CKSRYB103K50
	C 2089(B,103 ,25)		CKSRYB103K50
	C 2091(B,103 ,109)		CKSRYB103K50
	C 2092(B,103 ,81)		CKSRYB103K50
	C 2093(B,103 ,53)		CKSRYB103K50
	C 2094(B,104 ,127)		CKSRYB473K25

J S VIDEO ASSY

MISCELLANEOUS

IC 2201(A,39 ,96)	IC	CD74HC4051PW
IC 2202(A,42 ,81)	IC	CD74HC4051PW
IC 2203(A,39 ,111)	IC	CD74HC4052PW
IC 2204(A,32 ,130)	VIDEO AMP IC	TK15420M
IC 2205(A,52 ,96)	IC	CD74HC4051PW
IC 2206(A,57 ,81)	IC	CD74HC4051PW
IC 2207(A,48 ,63)	IC	CD74HC4052PW
IC 2208(A,36 ,60)	VIDEO AMP IC	TK15420M
IC 2209(A,49 ,40)	IC	CD74HC4052PW
IC 2210(A,36 ,37)	VIDEO AMP IC	TK15420M
IC 2271(A,51 ,115)	IC	LA7213
IC 2281(A,67 ,58)	LOGIC IC	CD4094BPW
IC 2282(A,68 ,75)	LOGIC IC	CD4094BPW
Q 2271(B,67 ,110)	TRANSISTOR	RT1N241M
D 2271(A,65 ,107)	DIODE	1SS355
D 2272(A,61 ,106)	DIODE	1SS355
CN2201(A,64 ,24)	17P SOCKET	XKP3079
CN2202(A,62 ,123)	11P SOCKET	XKP3076
CN2203(A,12 ,116)	SOCKET	AKP7043
CN2205(A,12 ,53)	SOCKET	AKP7020
CN2206(A,12 ,25)	SOCKET	AKP7020

RESISTORS

R 2201(B,26 ,115)	RS1/16S750J
R 2202(B,28 ,117)	RS1/16S750J
R 2203(B,26 ,101)	RS1/16S750J
R 2204(B,28 ,103)	RS1/16S750J
R 2205(B,26 ,45)	RS1/16S750J
R 2206(B,28 ,49)	RS1/16S750J
R 2207(B,26 ,17)	RS1/16S750J
R 2208(B,28 ,23)	RS1/16S750J
R 2213(B,28 ,126)	RS1/16S750J
R 2214(B,28 ,133)	RS1/16S750J
R 2215(B,28 ,55)	RS1/16S750J
R 2216(B,28 ,62)	RS1/16S750J
R 2217(B,28 ,28)	RS1/16S750J
R 2218(B,28 ,35)	RS1/16S750J
R 2219(A,66 ,102)	RS1/16S0R0J
R 2220(A,59 ,118)	RS1/16S0R0J
R 2221(B,66 ,33)	RS1/16S750J
R 2222(B,60 ,32)	RS1/16S750J
R 2223(B,33 ,131)	RS1/16S472J
R 2224(A,26 ,132)	RS1/16S472J
R 2225(B,35 ,128)	RS1/16S182J
R 2226(A,26 ,127)	RS1/16S152J
R 2227(B,38 ,128)	RS1/16S202J

Mark No.	Description	Part No.
R 2228(A,26 ,124)		RS1/16S182J
R 2229(B,50 ,33)		RS1/16S0R0J
R 2250(B,50 ,31)		RS1/16S0R0J
R 2251(A,40 ,58)		RS1/16S472J
R 2252(A,31 ,58)		RS1/16S472J
R 2253(A,42 ,58)		RS1/16S182J
R 2254(A,29 ,58)		RS1/16S152J
R 2255(A,40 ,61)		RS1/16S202J
R 2256(A,29 ,61)		RS1/16S182J
R 2261(A,40 ,34)		RS1/16S472J
R 2262(A,31 ,33)		RS1/16S472J
R 2263(A,42 ,34)		RS1/16S182J
R 2264(A,29 ,33)		RS1/16S152J
R 2265(A,42 ,37)		RS1/16S202J
R 2266(A,31 ,36)		RS1/16S182J
R 2271(A,51 ,112)		RS1/16S331J
R 2272(A,53 ,110)		RS1/16S224J
R 2273(A,57 ,107)		RS1/16S472J
R 2274(A,63 ,114)		RS1/16S223J
R 2281(A,64 ,68)		RS1/16S473J
R 2282(A,64 ,66)		RS1/16S473J
R 2283(A,66 ,51)		RS1/16S473J
R 2284(A,69 ,51)		RS1/16S473J
R 2285(A,68 ,85)		RS1/16S473J
R 2286(A,68 ,86)		RS1/16S473J
R 2287(A,70 ,80)		RS1/16S0R0J
R 2289(A,64 ,69)		RS1/16S473J
R 2290(A,64 ,71)		RS1/16S473J
R 2291(A,66 ,50)		RS1/16S473J
R 2298(A,37 ,115)		RS1/16S0R0J

CAPACITORS

C 2202(B,28 ,119)		CKSRYB104K16
C 2204(B,28 ,105)		CKSRYB104K16
C 2206(B,28 ,51)		CKSRYB104K16
C 2208(B,28 ,24)		CKSRYB104K16
C 2213(B,28 ,127)		CCSRCH181J50
C 2214(B,28 ,131)		CCSRCH181J50
C 2215(B,28 ,57)		CCSRCH181J50
C 2216(B,28 ,61)		CCSRCH181J50
C 2217(B,28 ,30)		CCSRCH181J50
C 2218(B,28 ,33)		CCSRCH181J50
C 2221(A,66 ,31)	ELECT. CAPACITOR	CEAT102M6R3
C 2222(B,61 ,34)		CKSRYB104K16
C 2225(A,41 ,101)		CKSRYB104K16
C 2226(A,36 ,92)		CKSRYB104K16
C 2227(A,44 ,85)		CKSRYB104K16
C 2228(A,36 ,79)		CKSRYB104K16
C 2231(A,41 ,115)		CKSRYB103K50
C 2232(A,37 ,107)		CKSRYB103K50
C 2235(A,32 ,123)		CEAT101M10
C 2236(A,38 ,121)		CEAT101M10
C 2237(B,31 ,128)		CKSRYB103K50
C 2238(A,33 ,134)		CKSRYB103K50
C 2239(A,44 ,121)		CEAT101M10
C 2240(A,28 ,134)		CKSRYB104K16
C 2243(B,33 ,133)		CKSRYB104K16
C 2245(A,54 ,101)		CKSRYB104K16
C 2246(A,48 ,93)		CKSRYB104K16
C 2247(A,58 ,85)		CKSRYB104K16
C 2248(A,54 ,77)		CKSRYB104K16
C 2251(A,52 ,61)		CKSRYB103K50
C 2252(A,46 ,68)		CKSRYB103K50
C 2255(A,41 ,68)		CEAT101M10
C 2256(A,35 ,70)		CEAT101M10
C 2257(A,37 ,64)		CKSRYB103K50
C 2258(A,33 ,57)		CKSRYB103K50
C 2259(A,37 ,54)		CEAT101M10
C 2260(B,42 ,59)		CKSRYB104K16
C 2263(A,31 ,64)		CKSRYB104K16
C 2265(A,53 ,38)		CKSRYB103K50
C 2266(A,46 ,46)		CKSRYB103K50
C 2269(A,41 ,45)		CEAT101M10
C 2270(A,35 ,47)		CEAT101M10
C 2271(A,38 ,40)		CKSRYB103K50
C 2272(A,34 ,33)		CKSRYB103K50
C 2273(A,39 ,31)		CEAT101M10
C 2274(A,30 ,29)		CKSRYB104K16
C 2277(B,28 ,36)		CKSRYB104K16
C 2278(B,22 ,122)		CKSRYB104K16
C 2279(B,22 ,52)		CKSRYB104K16
C 2280(B,21 ,23)		CKSRYB104K16
C 2281(A,67 ,116)		CEAT101M10
C 2282(A,62 ,111)		CEAT101M10
C 2283(A,47 ,117)	ELECT. CAPACITOR	CEAT3R3M50
C 2284(A,70 ,79)		CKSRYB103K50
C 2285(A,66 ,53)		CKSRYB103K50
C 2286(B,17 ,117)		CKSRYB103K50
C 2288(B,17 ,48)		CKSRYB103K50
C 2289(B,17 ,20)		CKSRYB103K50
C 2292(B,22 ,123)		CKSRYB103K50
C 2293(B,22 ,53)		CKSRYB103K50
C 2294(B,21 ,26)		CKSRYB103K50

K COMPONENT&VOL ASSY (VSX-74TXVi)

MISCELLANEOUS

IC 2401(A,45 ,189)	MULTIPLEXER(4CH*2)	TC74LVX4052FT
IC 2402(A,36 ,189)	MULTIPLEXER(4CH*2)	TC74LVX4052FT
IC 2404(A,58 ,182)	MULTIPLEXER(2CH*3)	TC74LVX4053FT
IC 2405(B,59 ,208)	VIDEO IC	NJM2581M
IC 2407(B,94 ,175)	LOGIC IC	CD4094BNS
IC 2501(A,116 ,102)	OP-AMP IC	UPC4570G2
IC 2525(A,116 ,84)	OP-AMP IC	UPC4570G2
IC 2551(A,116 ,66)	OP-AMP IC	UPC4570G2
IC 2575(A,116 ,48)	OP-AMP IC	UPC4570G2
IC 2630(B,58 ,91)	IC	TC4066BFN
IC 2631(A,59 ,115)	IC	TC4052BFT
IC 2632(A,66 ,105)	OP-AMP IC	BA4560RF
IC 2633(A,44 ,109)	OP-AMP IC	BA4560RF
IC 2634(A,44 ,116)	OP-AMP IC	BA4560RF
IC 2635(A,44 ,93)	IC	TC4052BFT
IC 2636(A,70 ,93)	IC	TC4052BFT
IC 2637(A,62 ,73)	AUDIO IC	BD3813KS
IC 2638(A,54 ,35)	AUDIO IC	BD3813KS
IC 2639(B,75 ,51)	IC	TC4052BFN
IC 2640(A,146 ,112)	LOGIC IC	CD4094BNS
IC 2641(A,38 ,29)	IC	TC4052BFN
⚠Q 2407(B,28 ,196)	TRANSISTOR	2SC4081

Mark	No.	Description	Part No.
⚠	Q 2408(B,28 ,183)	TRANSISTOR	2SA1576A
	Q 2501(A,93 ,104)	CHIP TRANSISTOR	2SD2704K
	Q 2502(A,93 ,99)	CHIP TRANSISTOR	2SD2704K
	Q 2503(B,105 ,105)	CHIP TRANSISTOR	2SD2704K
	Q 2504(B,105 ,98)	CHIP TRANSISTOR	2SD2704K
	Q 2525(A,93 ,86)	CHIP TRANSISTOR	2SD2704K
	Q 2526(A,93 ,81)	CHIP TRANSISTOR	2SD2704K
	Q 2527(B,105 ,87)	CHIP TRANSISTOR	2SD2704K
	Q 2528(B,105 ,80)	CHIP TRANSISTOR	2SD2704K
	Q 2551(A,93 ,68)	CHIP TRANSISTOR	2SD2704K
	Q 2552(A,93 ,63)	CHIP TRANSISTOR	2SD2704K
	Q 2553(B,105 ,69)	CHIP TRANSISTOR	2SD2704K
	Q 2554(B,105 ,62)	CHIP TRANSISTOR	2SD2704K
	Q 2575(A,93 ,50)	CHIP TRANSISTOR	2SD2704K
	Q 2576(A,93 ,45)	CHIP TRANSISTOR	2SD2704K
	Q 2577(B,105 ,51)	CHIP TRANSISTOR	2SD2704K
	Q 2578(B,105 ,44)	CHIP TRANSISTOR	2SD2704K
	Q 2630(B,72 ,101)	TRANSISTOR	RT1N241M
	Q 2631(A,55 ,94)	TRANSISTOR	RT1N241M
	Q 2632(B,73 ,106)	TRANSISTOR	RT1N241M
	Q 2633(A,82 ,48)	TRANSISTOR	RT1N241M
	Q 2634(A,79 ,48)	TRANSISTOR	RT1N241M
	Q 2635(B,133 ,41)	DIGITAL TR(SC-70)	RT1P241M
	Q 2636(B,133 ,36)	DIGITAL TR(SC-70)	RT1P241M
	Q 2637(B,133 ,24)	DIGITAL TR(SC-70)	RT1P241M
	Q 2638(B,134 ,31)	DIGITAL TR(SC-70)	RT1P241M
	Q 2639(B,145 ,129)	DIGITAL TR(SC-70)	RT1P241M
	Q 2640(B,145 ,134)	DIGITAL TR(SC-70)	RT1P241M
⚠	Q 2641(A,28 ,58)	TRANSISTOR	2SD1858X
⚠	Q 2642(A,28 ,75)	TRANSISTOR	2SB1238X
	Q 2643(B,41 ,23)	TRANSISTOR	RT1N241M
	Q 2644(A,134 ,30)	TRANSISTOR	UMH1N
	Q 2645(A,58 ,96)	DIGITAL TR(SC-70)	RT1P241M
	Q 2751(B,109 ,216)	TRANSISTOR	2SA1576A
	Q 2752(B,116 ,216)	TRANSISTOR	2SA1576A
	Q 2753(A,121 ,210)	TRANSISTOR	UMH1N
	Q 2754(B,126 ,211)	TRANSISTOR	2SA1576A
	Q 2771(B,146 ,203)	TRANSISTOR	2SD1664
	D 2401(B,20 ,192)	DIODE	1SS355
	D 2402(B,21 ,208)	DIODE	1SS355
	D 2503(A,22 ,37)	DIODE	DAN217
	D 2504(A,70 ,124)	DIODE	DAN217
	D 2505(A,62 ,124)	DIODE	DAN217
	D 2517(B,20 ,64)	DIODE	UDZS7R5(B)
	D 2518(B,20 ,69)	DIODE	UDZS7R5(B)
	D 2519(B,150 ,90)	DIODE	1SS355
	D 2520(B,138 ,36)	DIODE	DAP202U
	D 2521(B,138 ,24)	DIODE	DAN202U
	D 2751(B,129 ,204)	DIODE	UDZS5R1(B)
	D 2752(A,124 ,214)	DIODE	1SS355
	D 2772(B,151 ,197)	DIODE	UDZS10(B)
	L 2751(A,127 ,202)	CHIP SOLID INDUCTOR	ATL7002
	L 2754(A,129 ,217)	CHIP SOLID INDUCTOR	QTL1013
	L 2755(A,122 ,217)	CHIP SOLID INDUCTOR	QTL1013
	L 2756(A,126 ,217)	CHIP SOLID INDUCTOR	QTL1013
	L 2757(A,134 ,191)	CHIP BEADS	VTL1083
	L 2758(A,143 ,190)	CHIP BEADS	VTL1083
	L 2759(A,80 ,201)	CHIP BEADS	VTL1083
	L 2760(B,142 ,205)	CHIP BEADS	VTL1083
	JA 2401(A,68 ,231)	6P RCA PINJACK	XKB3053
	JA 2402(A,26 ,231)	6P RCA PINJACK	XKB3053
	JA 2403(A,96 ,231)	PIN JACK(1P)	AKB7175
	JA 2702(A,125 ,231)	2P JACK	XKN3013
	KN2701(A,144 ,226)	SCREW PLATE	VNE1948
	CN2402(A,14 ,197)	7P SOCKET	KP200TA7L
	CN2403(A,18 ,176)	13P SOCKET	XKP3077
	CN2409(A,78 ,195)	CONNECTOR	52045-1745
	CN2501(A,14 ,55)	B TO B CONNCTOR	BTEM14P-1R
	CN2502(A,44 ,137)	CONNECTOR	52045-1745
	CN2503(A,14 ,102)	B TO B CONNCTOR	BTEM20P-1R
	CN2504(A,143 ,72)	23P SOCKET	XKP3082
	CN2505(A,14 ,140)	7P SOCKET	KP200TA7L
	CN2506(A,18 ,20)	11P SOCKET	XKP3076
	CN2601(A,110 ,130)	19P CONNECTOR	52045-1945
	CN2602(A,99 ,137)	26P CONNECTOR	52045-2645
	CN2603(A,70 ,137)	19P CONNECTOR	52045-1945
	CN2701(A,110 ,231)	JACK	AKN-209
	CN2702(A,151 ,178)	CONNECTOR	52045-1145
	2701(A,143 ,149)	PCB BINDER	VEF1040

RESISTORS

R 2401(B,85 ,224)		RS1/16S750J
R 2402(B,69 ,221)		RS1/16S750J
R 2403(B,56 ,223)		RS1/16S750J
R 2404(B,41 ,223)		RS1/16S750J
R 2405(B,28 ,223)		RS1/16S750J
R 2406(B,16 ,223)		RS1/16S750J
R 2407(B,36 ,222)		RS1/16S750J
R 2408(B,23 ,223)		RS1/16S750J
R 2409(B,9 ,222)		RS1/16S750J
R 2433(B,103 ,218)		RS1/16S750J
R 2439(B,65 ,215)		RS1/16S750J
R 2440(B,59 ,215)		RS1/16S750J
R 2441(B,52 ,215)		RS1/16S750J
R 2443(A,93 ,178)		RS1/16S473J
R 2444(A,95 ,178)		RS1/16S473J
R 2445(A,93 ,173)		RS1/16S473J
R 2446(A,97 ,173)		RS1/16S473J
R 2447(A,91 ,176)		RS1/16S473J
R 2448(A,95 ,173)		RS1/16S473J
R 2449(A,95 ,166)		RS1/16S473J
R 2451(B,25 ,195)		RS1/16S153J
R 2452(B,25 ,183)		RS1/16S153J
R 2453(B,25 ,191)		RS1/16S333J
R 2454(B,25 ,187)		RS1/16S333J
R 2467(B,23 ,169)		RS1/16S750J
R 2468(B,25 ,172)		RS1/16S750J
R 2469(B,23 ,176)		RS1/16S750J
R 2501(B,86 ,104)		RS1/16S563J
R 2502(B,86 ,99)		RS1/16S563J
R 2503(B,93 ,103)		RS1/16S222J
R 2504(B,93 ,100)		RS1/16S222J
R 2505(B,99 ,108)		RS1/16S751J
R 2506(B,99 ,95)		RS1/16S751J
R 2507(A,92 ,108)		RS1/16S472J
R 2508(A,92 ,96)		RS1/16S472J
R 2509(B,99 ,104)		RS1/16S104J
R 2510(B,99 ,99)		RS1/16S104J
R 2511(A,105 ,105)		RS1/16S472J
R 2512(A,105 ,98)		RS1/16S472J

Mark No.	Description	Part No.
R 2513	(B,115 ,106)	RS1/16S102J
R 2514	(B,115 ,97)	RS1/16S102J
R 2515	(B,111 ,104)	RS1/16S183J
R 2516	(B,111 ,99)	RS1/16S183J
R 2517	(B,109 ,104)	RS1/16S512J
R 2518	(B,109 ,99)	RS1/16S512J
R 2519	(A,117 ,107)	RS1/16S153J
R 2520	(A,117 ,96)	RS1/16S153J
R 2521	(B,117 ,106)	RS1/16S0R0J
R 2522	(B,117 ,97)	RS1/16S0R0J
R 2523	(B,124 ,106)	RS1/16S104J
R 2524	(B,124 ,97)	RS1/16S104J
R 2525	(B,86 ,87)	RS1/16S563J
R 2526	(B,86 ,81)	RS1/16S563J
R 2527	(B,93 ,85)	RS1/16S222J
R 2528	(B,93 ,82)	RS1/16S222J
R 2529	(B,99 ,90)	RS1/16S751J
R 2530	(B,99 ,77)	RS1/16S751J
R 2531	(A,92 ,89)	RS1/16S472J
R 2532	(A,92 ,77)	RS1/16S472J
R 2533	(B,99 ,86)	RS1/16S104J
R 2534	(B,99 ,81)	RS1/16S104J
R 2535	(A,105 ,87)	RS1/16S472J
R 2536	(A,105 ,80)	RS1/16S472J
R 2537	(B,115 ,88)	RS1/16S102J
R 2538	(B,115 ,79)	RS1/16S102J
R 2539	(B,111 ,86)	RS1/16S183J
R 2540	(B,109 ,81)	RS1/16S183J
R 2541	(B,109 ,86)	RS1/16S512J
R 2542	(B,111 ,81)	RS1/16S512J
R 2543	(A,117 ,89)	RS1/16S153J
R 2544	(A,117 ,77)	RS1/16S153J
R 2545	(B,117 ,88)	RS1/16S0R0J
R 2546	(B,117 ,79)	RS1/16S0R0J
R 2547	(B,124 ,88)	RS1/16S104J
R 2548	(B,124 ,79)	RS1/16S104J
R 2549	(A,102 ,114)	RS1/16S473J
R 2551	(B,86 ,69)	RS1/16S563J
R 2552	(B,86 ,63)	RS1/16S563J
R 2553	(B,93 ,67)	RS1/16S222J
R 2554	(B,93 ,64)	RS1/16S222J
R 2555	(B,99 ,72)	RS1/16S751J
R 2556	(B,99 ,59)	RS1/16S751J
R 2557	(A,92 ,72)	RS1/16S472J
R 2558	(A,92 ,60)	RS1/16S472J
R 2559	(B,99 ,68)	RS1/16S104J
R 2560	(B,99 ,63)	RS1/16S104J
R 2561	(A,105 ,69)	RS1/16S472J
R 2562	(A,105 ,62)	RS1/16S472J
R 2563	(B,115 ,70)	RS1/16S102J
R 2564	(B,115 ,61)	RS1/16S102J
R 2565	(B,111 ,68)	RS1/16S183J
R 2566	(B,111 ,63)	RS1/16S183J
R 2567	(B,109 ,68)	RS1/16S512J
R 2568	(B,109 ,63)	RS1/16S512J
R 2569	(A,117 ,71)	RS1/16S153J
R 2570	(A,117 ,59)	RS1/16S153J
R 2571	(B,117 ,70)	RS1/16S0R0J
R 2572	(B,117 ,61)	RS1/16S0R0J
R 2573	(B,124 ,70)	RS1/16S104J
R 2574	(B,124 ,61)	RS1/16S104J
R 2575	(B,73 ,38)	RS1/16S563J
R 2576	(B,73 ,33)	RS1/16S563J
R 2577	(B,93 ,49)	RS1/16S202J
R 2578	(B,93 ,46)	RS1/16S202J
R 2579	(B,99 ,54)	RS1/16S751J
R 2580	(B,99 ,41)	RS1/16S751J
R 2581	(A,92 ,55)	RS1/16S472J
R 2582	(A,92 ,42)	RS1/16S472J
R 2583	(B,99 ,50)	RS1/16S104J
R 2584	(B,99 ,45)	RS1/16S104J
R 2585	(A,105 ,51)	RS1/16S472J
R 2586	(A,105 ,44)	RS1/16S472J
R 2587	(B,115 ,52)	RS1/16S102J
R 2588	(B,115 ,43)	RS1/16S102J
R 2589	(B,111 ,50)	RS1/16S822J
R 2590	(B,111 ,45)	RS1/16S822J
R 2591	(B,109 ,50)	RS1/16S822J
R 2592	(B,109 ,45)	RS1/16S822J
R 2593	(A,117 ,53)	RS1/16S153J
R 2594	(A,117 ,42)	RS1/16S153J
R 2595	(B,117 ,52)	RS1/16S0R0J
R 2596	(B,117 ,43)	RS1/16S0R0J
R 2597	(B,124 ,52)	RS1/16S104J
R 2598	(B,124 ,43)	RS1/16S104J
R 2599	(A,107 ,114)	RS1/16S473J
R 2625	(A,58 ,99)	RS1/16S242J
R 2626	(A,74 ,99)	RS1/16S242J
R 2627	(A,60 ,100)	RS1/16S560J
R 2628	(A,72 ,100)	RS1/16S560J
R 2629	(A,58 ,101)	RS1/16S332J
R 2630	(A,74 ,101)	RS1/16S332J
R 2631	(A,59 ,103)	RS1/16S0R0J
R 2632	(A,73 ,103)	RS1/16S0R0J
R 2633	(A,59 ,106)	RS1/16S222J
R 2634	(A,73 ,106)	RS1/16S222J
R 2635	(A,61 ,106)	RS1/16S101J
R 2636	(A,72 ,106)	RS1/16S101J
R 2637	(B,71 ,113)	RS1/16S474J
R 2638	(B,71 ,117)	RS1/16S474J
R 2641	(A,50 ,109)	RS1/16S472J
R 2642	(A,39 ,109)	RS1/16S472J
R 2643	(B,48 ,106)	RS1/16S101J
R 2644	(B,41 ,106)	RS1/16S101J
R 2645	(A,49 ,118)	RS1/16S113J
R 2646	(A,39 ,118)	RS1/16S113J
R 2647	(A,52 ,113)	RS1/16S0R0J
R 2648	(A,37 ,113)	RS1/16S0R0J
R 2649	(A,51 ,118)	RS1/16S153J
R 2650	(A,37 ,118)	RS1/16S153J
R 2651	(A,50 ,115)	RS1/16S113J
R 2652	(A,39 ,115)	RS1/16S113J
R 2653	(A,50 ,112)	RS1/16S472J
R 2654	(A,39 ,112)	RS1/16S472J
R 2655	(B,46 ,106)	RS1/16S474J
R 2656	(B,43 ,106)	RS1/16S474J
R 2657	(B,60 ,75)	RS1/16S0R0J
R 2658	(B,57 ,74)	RS1/16S0R0J
R 2663	(B,81 ,104)	RS1/16S101J
R 2664	(B,81 ,96)	RS1/16S101J

Mark No.	Description	Part No.
R 2665(B,81 ,85)		RS1/16S101J
R 2666(B,80 ,79)		RS1/16S101J
R 2667(B,80 ,68)		RS1/16S101J
R 2668(B,80 ,64)		RS1/16S101J
R 2669(B,67 ,40)		RS1/16S101J
R 2670(B,67 ,36)		RS1/16S101J
R 2673(B,69 ,27)		RS1/16S101J
R 2674(B,69 ,22)		RS1/16S101J
R 2675(B,75 ,26)		RS1/16S563J
R 2676(B,75 ,22)		RS1/16S563J
R 2677(B,63 ,65)		RS1/16S102J
R 2678(B,67 ,65)		RS1/16S102J
R 2681(B,56 ,28)		RS1/16S102J
R 2682(B,58 ,28)		RS1/16S102J
R 2685(B,23 ,57)		RS1/16S472J
R 2686(B,23 ,76)		RS1/16S472J
R 2687(B,23 ,59)		RS1/16S101J
R 2688(B,23 ,74)		RS1/16S101J
R 2689(A,59 ,94)		RS1/16S473J
R 2690(B,75 ,100)		RS1/16S473J
R 2691(B,77 ,105)		RS1/16S473J
R 2692(B,77 ,41)		RS1/16S473J
R 2693(B,77 ,43)		RS1/16S473J
R 2694(A,133 ,41)		RS1/16S102J
R 2695(B,38 ,24)		RS1/16S473J
R 2697(A,133 ,23)		RS1/16S472J
R 2719(A,134 ,36)		RS1/16S102J
R 2720(A,104 ,114)		RS1/16S473J
R 2721(A,133 ,33)		RS1/16S473J
R 2722(A,133 ,27)		RS1/16S472J
R 2723(A,105 ,114)		RS1/16S473J
R 2751(A,118 ,210)		RS1/16S472J
R 2752(A,121 ,213)		RS1/16S472J
R 2753(B,111 ,216)		RS1/16S472J
R 2754(B,119 ,216)		RS1/16S472J
R 2755(B,121 ,211)		RS1/16S180J
R 2756(B,123 ,211)		RS1/16S180J
R 2757(B,130 ,211)		RS1/16S103J
R 2758(B,133 ,203)		RS1/16S103J
R 2759(A,125 ,210)		RS1/16S102J
R 2760(A,128 ,214)		RS1/16S0R0J
R 2771(B,140 ,197)		RS1/16S0R0J
R 2772(B,151 ,202)		RS1/16S391J
R 9761(B,130 ,143)		RS1/16S0R0J
CAPACITORS		
C 2411(A,41 ,191)		CKSRYB103K50
C 2412(A,41 ,187)		CKSRYB103K50
C 2415(A,32 ,191)		CKSRYB103K50
C 2416(A,32 ,187)		CKSRYB103K50
C 2419(A,53 ,184)		CKSRYB103K50
C 2420(A,53 ,181)		CKSRYB103K50
C 2424(A,63 ,200)		CEAT101M10
C 2425(A,57 ,200)		CEAT101M10
C 2426(A,51 ,200)		CEAT101M10
C 2427(B,65 ,211)		CKSRYB104K16
C 2428(B,65 ,205)		CKSRYB104K16
C 2431(A,69 ,213)		CEAT101M10
C 2432(A,69 ,207)		CEAT101M10
C 2434(B,99 ,222)		CCSRCH181J50

Mark No.	Description	Part No.
C 2438(B,86 ,172)		CKSRYB103K50
C 2439(B,27 ,191)		CKSRYB224K10
C 2440(B,27 ,187)		CKSRYB224K10
C 2453(B,18 ,221)		CKSRYB103K50
C 2454(B,32 ,222)		CKSRYB103K50
C 2455(B,62 ,223)		CKSRYB103K50
C 2456(B,74 ,223)		CKSRYB103K50
C 2457(B,94 ,219)		CKSRYB103K50
C 2460(A,20 ,212)		CKSRYB104K16
C 2467(A,38 ,167)	ELECT. CAPACITOR	CEAT102M6R3
C 2468(A,39 ,176)		CEAT471M6R3
C 2469(A,32 ,176)		CEAT471M6R3
C 2501(A,84 ,105)		CEAT470M25
C 2502(A,84 ,98)		CEAT470M25
C 2503(A,101 ,107)		CEAT4R7M50
C 2504(A,101 ,96)		CEAT4R7M50
C 2505(A,96 ,104)		CKSRYB103K50
C 2506(A,96 ,100)		CKSRYB103K50
C 2507(A,107 ,104)		CKSRYB223K50
C 2508(A,107 ,99)		CKSRYB223K50
C 2509(A,109 ,107)		CEAT101M16
C 2510(A,109 ,96)		CEAT101M16
C 2511(A,117 ,109)		CCSRCH101J50
C 2512(A,117 ,95)		CCSRCH101J50
C 2513(A,120 ,100)		CKSRYB103K50
C 2514(A,120 ,103)		CKSRYB103K50
C 2515(A,121 ,107)		CEAT470M25
C 2516(A,121 ,96)		CEAT470M25
C 2525(A,84 ,87)		CEAT470M25
C 2526(A,84 ,80)		CEAT470M25
C 2527(A,101 ,89)		CEAT4R7M50
C 2528(A,101 ,78)		CEAT4R7M50
C 2529(A,96 ,86)		CKSRYB103K50
C 2530(A,96 ,82)		CKSRYB103K50
C 2531(A,107 ,86)		CKSRYB223K50
C 2532(A,107 ,81)		CKSRYB223K50
C 2533(A,109 ,89)		CEAT101M16
C 2534(A,109 ,78)		CEAT101M16
C 2535(A,117 ,90)		CCSRCH101J50
C 2536(A,117 ,78)		CCSRCH101J50
C 2537(A,120 ,82)		CKSRYB103K50
C 2538(A,120 ,85)		CKSRYB103K50
C 2539(A,121 ,89)		CEAT470M25
C 2540(A,121 ,78)		CEAT470M25
C 2551(A,84 ,69)		CEAT470M25
C 2552(A,84 ,62)		CEAT470M25
C 2553(A,101 ,71)		CEAT4R7M50
C 2554(A,101 ,60)		CEAT4R7M50
C 2555(A,96 ,68)		CKSRYB103K50
C 2556(A,96 ,64)		CKSRYB103K50
C 2557(A,107 ,68)		CKSRYB223K50
C 2558(A,107 ,63)		CKSRYB223K50
C 2559(A,109 ,71)		CEAT101M16
C 2560(A,109 ,60)		CEAT101M16
C 2561(A,117 ,72)		CCSRCH101J50
C 2562(A,117 ,60)		CCSRCH101J50
C 2563(A,120 ,64)		CKSRYB103K50
C 2564(A,120 ,67)		CKSRYB103K50
C 2565(A,121 ,71)		CEAT470M25
C 2566(A,121 ,60)		CEAT470M25

Mark No.	Description	Part No.
C 2575(A,70 ,39)		CEAT470M25
C 2576(A,70 ,33)		CEAT470M25
C 2577(A,101 ,53)		CEAT4R7M50
C 2578(A,101 ,42)		CEAT4R7M50
C 2579(A,96 ,50)		CKSRYB103K50
C 2580(A,96 ,46)		CKSRYB103K50
C 2581(A,107 ,50)		CKSRYB223K50
C 2582(A,107 ,45)		CKSRYB223K50
C 2583(A,109 ,53)		CEAT101M16
C 2584(A,109 ,42)		CEAT101M16
C 2585(A,117 ,54)		CCSRCH101J50
C 2586(A,117 ,41)		CCSRCH101J50
C 2587(A,120 ,46)		CKSRYB103K50
C 2588(A,120 ,49)		CKSRYB103K50
C 2589(A,121 ,53)		CEAT470M25
C 2590(A,121 ,42)		CEAT470M25
C 2621(B,147 ,117)		CKSRYB103K50
C 2623(B,144 ,75)		CKSRYB104K16
C 2626(A,23 ,61)		CEAT2R2M50
C 2627(A,23 ,69)		CEAT2R2M50
C 2628(A,34 ,61)		CEAT100M50
C 2629(A,34 ,70)		CEAT100M50
C 2631(B,42 ,97)		CKSRYB103K50
C 2632(A,43 ,89)		CKSRYB103K50
C 2633(A,61 ,103)		CCSRCH101J50
C 2634(A,72 ,103)		CCSRCH101J50
C 2635(B,68 ,107)		CKSRYB103K50
C 2636(B,66 ,107)		CKSRYB103K50
C 2637(A,74 ,112)		CEAT100M50
C 2638(A,74 ,118)		CEAT100M50
C 2639(A,51 ,111)		CCSRCH220J50
C 2640(A,37 ,111)		CCSRCH220J50
C 2641(B,42 ,111)		CKSRYB103K50
C 2642(A,46 ,113)		CKSRYB103K50
C 2643(A,51 ,115)		CCSRCH220J50
C 2644(A,37 ,115)		CCSRCH220J50
C 2645(A,47 ,103)		CEAT100M50
C 2646(A,41 ,103)		CEAT100M50
C 2647(B,42 ,117)		CKSRYB103K50
C 2648(A,46 ,120)		CKSRYB103K50
C 2649(A,61 ,94)		CKSRYB103K50
C 2650(A,55 ,88)		CKSRYB103K50
C 2651(A,63 ,113)		CKSRYB103K50
C 2652(A,55 ,117)		CKSRYB103K50
C 2653(B,73 ,94)		CKSRYB103K50
C 2654(B,75 ,94)		CKSRYB103K50
C 2655(B,69 ,48)		CKSRYB103K50
C 2656(B,82 ,54)		CKSRYB103K50
C 2657(B,46 ,32)		CKSRYB103K50
C 2658(B,42 ,32)		CKSRYB103K50
C 2660(A,50 ,59)		CEAT100M50
C 2661(A,56 ,59)		CEAT100M50
C 2662(A,62 ,59)		CEAT100M50
C 2663(A,68 ,59)		CEAT100M50
C 2664(B,66 ,69)		CCSRCH101J50
C 2665(B,64 ,67)		CCSRCH101J50
C 2666(A,70 ,67)		CKSRYB103K50
C 2667(A,71 ,69)		CKSRYB103K50
C 2668(A,70 ,71)		CKSRYB103K50
C 2675(A,67 ,86)		CEAT100M50
C 2676(A,73 ,86)		CEAT100M50
C 2677(A,46 ,19)		CEAT100M50
C 2678(A,51 ,19)		CEAT100M50
C 2679(A,57 ,19)		CEAT100M50
C 2680(A,63 ,19)		CEAT100M50
C 2681(B,60 ,30)		CCSRCH101J50
C 2682(B,54 ,30)		CCSRCH101J50
C 2683(A,62 ,28)		CKSRYB103K50
C 2684(A,64 ,31)		CKSRYB103K50
C 2685(A,62 ,32)		CKSRYB103K50
C 2692(A,48 ,44)		CEAT100M50
C 2693(A,42 ,44)		CEAT100M50
C 2695(A,72 ,27)		CEAT470M25
C 2696(A,72 ,21)		CEAT470M25
C 2698(A,131 ,24)		CKSRYB104K16
C 2699(A,131 ,42)		CKSRYB473K25
C 2700(A,131 ,22)		CKSRYB224K16
C 2714(A,131 ,35)		CKSRYB473K25
C 2716(A,131 ,28)		CKSRYB224K16
C 2717(A,131 ,26)		CKSRYB104K16
C 2751(B,107 ,220)		CKSRYB103K50
C 2752(B,113 ,220)		CKSRYB103K50
C 2754(A,131 ,205)	ELECT. CAPACITOR	CEATR10M50
C 2771(A,148 ,198)		CEAT101M16
C 2781(B,151 ,217)		CKSRYB104K16
C 2782(B,149 ,217)		CKSRYB471K50
C 2783(B,151 ,213)		CKSRYB104K16
C 2784(B,149 ,213)		CKSRYB471K50

K COMPONENT&VOL ASSY (VSX-72TXV)

MISCELLANEOUS

IC 2401(A,45 ,189)	MULTIPLEXER(4CH*2)	TC74LVX4052FT
IC 2402(A,36 ,189)	MULTIPLEXER(4CH*2)	TC74LVX4052FT
IC 2404(A,58 ,182)	MULTIPLEXER(2CH*3)	TC74LVX4053FT
IC 2405(B,59 ,208)	VIDEO IC	NJM2581M
IC 2407(B,94 ,175)	LOGIC IC	CD4094BNS
IC 2501(A,116 ,102)	OP-AMP IC	UPC4570G2
IC 2525(A,116 ,84)	OP-AMP IC	UPC4570G2
IC 2551(A,116 ,66)	OP-AMP IC	UPC4570G2
IC 2575(A,116 ,48)	OP-AMP IC	UPC4570G2
IC 2630(B,58 ,91)	IC	TC4066BFN
IC 2632(A,66 ,105)	OP-AMP IC	BA4560RF
IC 2637(A,62 ,73)	AUDIO IC	BD3813KS
IC 2638(A,54 ,35)	AUDIO IC	BD3813KS
IC 2639(B,75 ,51)	IC	TC4052BFN
IC 2640(A,146 ,112)	LOGIC IC	CD4094BNS
⚠Q 2407(B,28 ,196)	TRANSISTOR	2SC4081
⚠Q 2408(B,28 ,183)	TRANSISTOR	2SA1576A
Q 2501(A,93 ,104)	CHIP TRANSISTOR	2SD2704K
Q 2502(A,93 ,99)	CHIP TRANSISTOR	2SD2704K
Q 2503(B,105 ,105)	CHIP TRANSISTOR	2SD2704K
Q 2504(B,105 ,98)	CHIP TRANSISTOR	2SD2704K
Q 2525(A,93 ,86)	CHIP TRANSISTOR	2SD2704K
Q 2526(A,93 ,81)	CHIP TRANSISTOR	2SD2704K
Q 2527(B,105 ,87)	CHIP TRANSISTOR	2SD2704K
Q 2528(B,105 ,80)	CHIP TRANSISTOR	2SD2704K
Q 2551(A,93 ,68)	CHIP TRANSISTOR	2SD2704K
Q 2552(A,93 ,63)	CHIP TRANSISTOR	2SD2704K

Mark	No.	Description	Part No.
	Q 2553(B,105 ,69)	CHIP TRANSISTOR	2SD2704K
	Q 2554(B,105 ,62)	CHIP TRANSISTOR	2SD2704K
	Q 2575(A,93 ,50)	CHIP TRANSISTOR	2SD2704K
	Q 2576(A,93 ,45)	CHIP TRANSISTOR	2SD2704K
	Q 2577(B,105 ,51)	CHIP TRANSISTOR	2SD2704K
	Q 2578(B,105 ,44)	CHIP TRANSISTOR	2SD2704K
	Q 2631(A,55 ,94)	TRANSISTOR	RT1N241M
	Q 2633(A,82 ,48)	TRANSISTOR	RT1N241M
	Q 2634(A,79 ,48)	TRANSISTOR	RT1N241M
	Q 2635(B,133 ,41)	DIGITAL TR(SC-70)	RT1P241M
	Q 2636(B,133 ,36)	DIGITAL TR(SC-70)	RT1P241M
	Q 2637(B,133 ,24)	DIGITAL TR(SC-70)	RT1P241M
	Q 2638(B,134 ,31)	DIGITAL TR(SC-70)	RT1P241M
	Q 2639(B,145 ,129)	DIGITAL TR(SC-70)	RT1P241M
	Q 2640(B,145 ,134)	DIGITAL TR(SC-70)	RT1P241M
⚠	Q 2641(A,28 ,58)	TRANSISTOR	2SD1858X
⚠	Q 2642(A,28 ,75)	TRANSISTOR	2SB1238X
	Q 2644(A,134 ,30)	TRANSISTOR	UMH1N
	Q 2645(A,58 ,96)	DIGITAL TR(SC-70)	RT1P241M
	Q 2751(B,109 ,216)	TRANSISTOR	2SA1576A
	Q 2752(B,116 ,216)	TRANSISTOR	2SA1576A
	Q 2753(A,121 ,210)	TRANSISTOR	UMH1N
	Q 2754(B,126 ,211)	TRANSISTOR	2SA1576A
	Q 2771(B,146 ,203)	TRANSISTOR	2SD1664
	D 2401(B,20 ,192)	DIODE	1SS355
	D 2402(B,21 ,208)	DIODE	1SS355
	D 2503(A,22 ,37)	DIODE	DAN217
	D 2504(A,70 ,124)	DIODE	DAN217
	D 2505(A,62 ,124)	DIODE	DAN217
	D 2517(B,20 ,64)	DIODE	UDZS7R5(B)
	D 2518(B,20 ,69)	DIODE	UDZS7R5(B)
	D 2519(B,150 ,90)	DIODE	1SS355
	D 2520(B,138 ,36)	DIODE	DAP202U
	D 2521(B,138 ,24)	DIODE	DAN202U
	D 2751(B,129 ,204)	DIODE	UDZS5R1(B)
	D 2752(A,124 ,214)	DIODE	1SS355
	D 2772(B,151 ,197)	DIODE	UDZS10(B)
	L 2751(A,127 ,202)	CHIP SOLID INDUCTOR	ATL7002
	L 2754(A,129 ,217)	CHIP SOLID INDUCTOR	QTL1013
	L 2755(A,122 ,217)	CHIP SOLID INDUCTOR	QTL1013
	L 2756(A,126 ,217)	CHIP SOLID INDUCTOR	QTL1013
	L 2757(A,134 ,191)	CHIP BEADS	VTL1083
	L 2758(A,143 ,190)	CHIP BEADS	VTL1083
	L 2759(A,80 ,201)	CHIP BEADS	VTL1083
	L 2760(B,142 ,205)	CHIP BEADS	VTL1083
	JA2401(A,68 ,231)	6P RCA PINJACK	XKB3053
	JA2402(A,26 ,231)	6P RCA PINJACK	XKB3053
	JA2403(A,96 ,231)	PIN JACK(1P)	AKB7175
	JA2702(A,125 ,231)	2P JACK	XKN3013
	KN2701(A,144 ,226)	SCREW PLATE	VNE1948
	CN2402(A,14 ,197)	7P SOCKET	KP200TA7L
	CN2403(A,18 ,176)	13P SOCKET	XKP3077
	CN2409(A,78 ,195)	CONNECTOR	52045-1745
	CN2501(A,14 ,55)	B TO B CONNCTOR	BTEM14P-1R
	CN2502(A,44 ,137)	CONNECTOR	52045-1745
	CN2503(A,14 ,102)	B TO B CONNCTOR	BTEM20P-1R
	CN2504(A,143 ,72)	23P SOCKET	XKP3082
	CN2505(A,14 ,140)	7P SOCKET	KP200TA7L
	CN2506(A,18 ,20)	11P SOCKET	XKP3076
	CN2601(A,110 ,130)	19P CONNECTOR	52045-1945
	CN2602(A,99 ,137)	26P CONNECTOR	52045-2645
	CN2603(A,70 ,137)	19P CONNECTOR	52045-1945
	CN2701(A,110 ,231)	JACK	AKN-209
	CN2702(A,151 ,178)	CONNECTOR	52045-1145
	2701(A,143 ,149)	PCB BINDER	VEF1040

RESISTORS

R 2401(B,85 ,224)	RS1/16S750J
R 2402(B,69 ,221)	RS1/16S750J
R 2403(B,56 ,223)	RS1/16S750J
R 2404(B,41 ,223)	RS1/16S750J
R 2405(B,28 ,223)	RS1/16S750J
R 2406(B,16 ,223)	RS1/16S750J
R 2407(B,36 ,222)	RS1/16S750J
R 2408(B,23 ,223)	RS1/16S750J
R 2409(B,9 ,222)	RS1/16S750J
R 2433(B,103 ,218)	RS1/16S750J
R 2439(B,65 ,215)	RS1/16S750J
R 2440(B,59 ,215)	RS1/16S750J
R 2441(B,52 ,215)	RS1/16S750J
R 2443(A,93 ,178)	RS1/16S473J
R 2444(A,95 ,178)	RS1/16S473J
R 2445(A,93 ,173)	RS1/16S473J
R 2446(A,97 ,173)	RS1/16S473J
R 2447(A,91 ,176)	RS1/16S473J
R 2448(A,95 ,173)	RS1/16S473J
R 2449(A,95 ,166)	RS1/16S473J
R 2451(B,25 ,195)	RS1/16S153J
R 2452(B,25 ,183)	RS1/16S153J
R 2453(B,25 ,191)	RS1/16S333J
R 2454(B,25 ,187)	RS1/16S333J
R 2467(B,23 ,169)	RS1/16S750J
R 2468(B,25 ,172)	RS1/16S750J
R 2469(B,23 ,176)	RS1/16S750J
R 2501(B,86 ,104)	RS1/16S563J
R 2502(B,86 ,99)	RS1/16S563J
R 2503(B,93 ,103)	RS1/16S222J
R 2504(B,93 ,100)	RS1/16S222J
R 2505(B,99 ,108)	RS1/16S751J
R 2506(B,99 ,95)	RS1/16S751J
R 2507(A,92 ,108)	RS1/16S472J
R 2508(A,92 ,96)	RS1/16S472J
R 2509(B,99 ,104)	RS1/16S104J
R 2510(B,99 ,99)	RS1/16S104J
R 2511(A,105 ,105)	RS1/16S472J
R 2512(A,105 ,98)	RS1/16S472J
R 2513(B,115 ,106)	RS1/16S102J
R 2514(B,115 ,97)	RS1/16S102J
R 2515(B,111 ,104)	RS1/16S183J
R 2516(B,111 ,99)	RS1/16S183J
R 2517(B,109 ,104)	RS1/16S512J
R 2518(B,109 ,99)	RS1/16S512J
R 2519(A,117 ,107)	RS1/16S153J
R 2520(A,117 ,96)	RS1/16S153J
R 2521(B,117 ,106)	RS1/16S0R0J
R 2522(B,117 ,97)	RS1/16S0R0J
R 2523(B,124 ,106)	RS1/16S104J
R 2524(B,124 ,97)	RS1/16S104J
R 2525(B,86 ,87)	RS1/16S563J
R 2526(B,86 ,81)	RS1/16S563J

Mark No.	Description	Part No.
R 2527	(B,93 ,85)	RS1/16S222J
R 2528	(B,93 ,82)	RS1/16S222J
R 2529	(B,99 ,90)	RS1/16S751J
R 2530	(B,99 ,77)	RS1/16S751J
R 2531	(A,92 ,89)	RS1/16S472J
R 2532	(A,92 ,77)	RS1/16S472J
R 2533	(B,99 ,86)	RS1/16S104J
R 2534	(B,99 ,81)	RS1/16S104J
R 2535	(A,105 ,87)	RS1/16S472J
R 2536	(A,105 ,80)	RS1/16S472J
R 2537	(B,115 ,88)	RS1/16S102J
R 2538	(B,115 ,79)	RS1/16S102J
R 2539	(B,111 ,86)	RS1/16S183J
R 2540	(B,109 ,81)	RS1/16S183J
R 2541	(B,109 ,86)	RS1/16S512J
R 2542	(B,111 ,81)	RS1/16S512J
R 2543	(A,117 ,89)	RS1/16S153J
R 2544	(A,117 ,77)	RS1/16S153J
R 2545	(B,117 ,88)	RS1/16S0R0J
R 2546	(B,117 ,79)	RS1/16S0R0J
R 2547	(B,124 ,88)	RS1/16S104J
R 2548	(B,124 ,79)	RS1/16S104J
R 2549	(A,102 ,114)	RS1/16S473J
R 2551	(B,86 ,69)	RS1/16S563J
R 2552	(B,86 ,63)	RS1/16S563J
R 2553	(B,93 ,67)	RS1/16S222J
R 2554	(B,93 ,64)	RS1/16S222J
R 2555	(B,99 ,72)	RS1/16S751J
R 2556	(B,99 ,59)	RS1/16S751J
R 2557	(A,92 ,72)	RS1/16S472J
R 2558	(A,92 ,60)	RS1/16S472J
R 2559	(B,99 ,68)	RS1/16S104J
R 2560	(B,99 ,63)	RS1/16S104J
R 2561	(A,105 ,69)	RS1/16S472J
R 2562	(A,105 ,62)	RS1/16S472J
R 2563	(B,115 ,70)	RS1/16S102J
R 2564	(B,115 ,61)	RS1/16S102J
R 2565	(B,111 ,68)	RS1/16S183J
R 2566	(B,111 ,63)	RS1/16S183J
R 2567	(B,109 ,68)	RS1/16S512J
R 2568	(B,109 ,63)	RS1/16S512J
R 2569	(A,117 ,71)	RS1/16S153J
R 2570	(A,117 ,59)	RS1/16S153J
R 2571	(B,117 ,70)	RS1/16S0R0J
R 2572	(B,117 ,61)	RS1/16S0R0J
R 2573	(B,124 ,70)	RS1/16S104J
R 2574	(B,124 ,61)	RS1/16S104J
R 2575	(B,73 ,38)	RS1/16S563J
R 2576	(B,73 ,33)	RS1/16S563J
R 2577	(B,93 ,49)	RS1/16S202J
R 2578	(B,93 ,46)	RS1/16S202J
R 2579	(B,99 ,54)	RS1/16S751J
R 2580	(B,99 ,41)	RS1/16S751J
R 2581	(A,92 ,55)	RS1/16S472J
R 2582	(A,92 ,42)	RS1/16S472J
R 2583	(B,99 ,50)	RS1/16S104J
R 2584	(B,99 ,45)	RS1/16S104J
R 2585	(A,105 ,51)	RS1/16S472J
R 2586	(A,105 ,44)	RS1/16S472J
R 2587	(B,115 ,52)	RS1/16S102J
R 2588	(B,115 ,43)	RS1/16S102J
R 2589	(B,111 ,50)	RS1/16S822J
R 2590	(B,111 ,45)	RS1/16S822J
R 2591	(B,109 ,50)	RS1/16S822J
R 2592	(B,109 ,45)	RS1/16S822J
R 2593	(A,117 ,53)	RS1/16S153J
R 2594	(A,117 ,42)	RS1/16S153J
R 2595	(B,117 ,52)	RS1/16S0R0J
R 2596	(B,117 ,43)	RS1/16S0R0J
R 2597	(B,124 ,52)	RS1/16S104J
R 2598	(B,124 ,43)	RS1/16S104J
R 2599	(A,107 ,114)	RS1/16S473J
R 2625	(A,58 ,99)	RS1/16S242J
R 2626	(A,74 ,99)	RS1/16S242J
R 2627	(A,60 ,100)	RS1/16S560J
R 2628	(A,72 ,100)	RS1/16S560J
R 2629	(A,58 ,101)	RS1/16S332J
R 2630	(A,74 ,101)	RS1/16S332J
R 2631	(A,59 ,103)	RS1/16S0R0J
R 2632	(A,73 ,103)	RS1/16S0R0J
R 2633	(A,59 ,106)	RS1/16S222J
R 2634	(A,73 ,106)	RS1/16S222J
R 2635	(A,61 ,106)	RS1/16S101J
R 2636	(A,72 ,106)	RS1/16S101J
R 2637	(B,71 ,113)	RS1/16S474J
R 2638	(B,71 ,117)	RS1/16S474J
R 2659	(A,48 ,80)	RS1/16S0R0J
R 2660	(A,46 ,85)	RS1/16S0R0J
R 2661	(B,46 ,90)	RS1/16S0R0J
R 2662	(B,43 ,93)	RS1/16S0R0J
R 2663	(B,81 ,104)	RS1/16S101J
R 2664	(B,81 ,96)	RS1/16S101J
R 2665	(B,81 ,85)	RS1/16S101J
R 2666	(B,80 ,79)	RS1/16S101J
R 2667	(B,80 ,68)	RS1/16S101J
R 2668	(B,80 ,64)	RS1/16S101J
R 2669	(B,67 ,40)	RS1/16S101J
R 2670	(B,67 ,36)	RS1/16S101J
R 2673	(B,69 ,27)	RS1/16S101J
R 2674	(B,69 ,22)	RS1/16S101J
R 2675	(B,75 ,26)	RS1/16S563J
R 2676	(B,75 ,22)	RS1/16S563J
R 2677	(B,63 ,65)	RS1/16S102J
R 2678	(B,67 ,65)	RS1/16S102J
R 2681	(B,56 ,28)	RS1/16S102J
R 2682	(B,58 ,28)	RS1/16S102J
R 2685	(B,23 ,57)	RS1/16S472J
R 2686	(B,23 ,76)	RS1/16S472J
R 2687	(B,23 ,59)	RS1/16S101J
R 2688	(B,23 ,74)	RS1/16S101J
R 2689	(A,59 ,94)	RS1/16S473J
R 2692	(B,77 ,41)	RS1/16S473J
R 2693	(B,77 ,43)	RS1/16S473J
R 2694	(A,133 ,41)	RS1/16S102J
R 2697	(A,133 ,23)	RS1/16S472J
R 2698	(A,37 ,24)	RS1/16S0R0J
R 2699	(A,38 ,36)	RS1/16S0R0J
R 2719	(A,134 ,36)	RS1/16S102J
R 2720	(A,104 ,114)	RS1/16S473J
R 2721	(A,133 ,33)	RS1/16S473J

Mark	No.	Description	Part No.
	R 2722(A,133 ,27)		RS1/16S472J
	R 2723(A,105 ,114)		RS1/16S473J
A	R 2751(A,118 ,210)		RS1/16S472J
	R 2752(A,121 ,213)		RS1/16S472J
	R 2753(B,111 ,216)		RS1/16S472J
	R 2754(B,119 ,216)		RS1/16S472J
	R 2755(B,121 ,211)		RS1/16S180J
	R 2756(B,123 ,211)		RS1/16S180J
	R 2757(B,130 ,211)		RS1/16S103J
	R 2758(B,133 ,203)		RS1/16S103J
	R 2759(A,125 ,210)		RS1/16S102J
	R 2760(A,128 ,214)		RS1/16S0R0J
	R 2771(B,140 ,197)		RS1/16S0R0J
B	R 2772(B,151 ,202)		RS1/16S391J
	R 9761(B,130 ,143)		RS1/16S0R0J
	CAPACITORS		
	C 2411(A,41 ,191)		CKSRYB103K50
	C 2412(A,41 ,187)		CKSRYB103K50
	C 2415(A,32 ,191)		CKSRYB103K50
	C 2416(A,32 ,187)		CKSRYB103K50
	C 2419(A,53 ,184)		CKSRYB103K50
	C 2420(A,53 ,181)		CKSRYB103K50
	C 2424(A,63 ,200)		CEAT101M10
	C 2425(A,57 ,200)		CEAT101M10
C	C 2426(A,51 ,200)		CEAT101M10
	C 2427(B,65 ,211)		CKSRYB104K16
	C 2428(B,65 ,205)		CKSRYB104K16
	C 2431(A,69 ,213)		CEAT101M10
	C 2432(A,69 ,207)		CEAT101M10
	C 2434(B,99 ,222)		CCSRCH181J50
	C 2438(B,86 ,172)		CKSRYB103K50
	C 2439(B,27 ,191)		CKSRYB224K10
	C 2440(B,27 ,187)		CKSRYB224K10
	C 2453(B,18 ,221)		CKSRYB103K50
	C 2454(B,32 ,222)		CKSRYB103K50
D	C 2455(B,62 ,223)		CKSRYB103K50
	C 2456(B,74 ,223)		CKSRYB103K50
	C 2457(B,94 ,219)		CKSRYB103K50
	C 2460(A,20 ,212)		CKSRYB104K16
	C 2467(A,38 ,167)	ELECT. CAPACITOR	CEAT102M6R3
	C 2468(A,39 ,176)		CEAT471M6R3
	C 2469(A,32 ,176)		CEAT471M6R3
	C 2501(A,84 ,105)		CEAT470M25
	C 2502(A,84 ,98)		CEAT470M25
	C 2503(A,101 ,107)		CEAT4R7M50
E	C 2504(A,101 ,96)		CEAT4R7M50
	C 2505(A,96 ,104)		CKSRYB103K50
	C 2506(A,96 ,100)		CKSRYB103K50
	C 2507(A,107 ,104)		CKSRYB223K50
	C 2508(A,107 ,99)		CKSRYB223K50
	C 2509(A,109 ,107)		CEAT101M16
	C 2510(A,109 ,96)		CEAT101M16
	C 2511(A,117 ,109)		CCSRCH101J50
	C 2512(A,117 ,95)		CCSRCH101J50
	C 2513(A,120 ,100)		CKSRYB103K50
	C 2514(A,120 ,103)		CKSRYB103K50
F	C 2515(A,121 ,107)		CEAT470M25
	C 2516(A,121 ,96)		CEAT470M25
	C 2525(A,84 ,87)		CEAT470M25
	C 2526(A,84 ,80)		CEAT470M25
	C 2527(A,101 ,89)		CEAT4R7M50
	C 2528(A,101 ,78)		CEAT4R7M50
	C 2529(A,96 ,86)		CKSRYB103K50
	C 2530(A,96 ,82)		CKSRYB103K50
	C 2531(A,107 ,86)		CKSRYB223K50
	C 2532(A,107 ,81)		CKSRYB223K50
	C 2533(A,109 ,89)		CEAT101M16
	C 2534(A,109 ,78)		CEAT101M16
	C 2535(A,117 ,90)		CCSRCH101J50
	C 2536(A,117 ,78)		CCSRCH101J50
	C 2537(A,120 ,82)		CKSRYB103K50
	C 2538(A,120 ,85)		CKSRYB103K50
	C 2539(A,121 ,89)		CEAT470M25
	C 2540(A,121 ,78)		CEAT470M25
	C 2551(A,84 ,69)		CEAT470M25
	C 2552(A,84 ,62)		CEAT470M25
	C 2553(A,101 ,71)		CEAT4R7M50
	C 2554(A,101 ,60)		CEAT4R7M50
	C 2555(A,96 ,68)		CKSRYB103K50
	C 2556(A,96 ,64)		CKSRYB103K50
	C 2557(A,107 ,68)		CKSRYB223K50
	C 2558(A,107 ,63)		CKSRYB223K50
	C 2559(A,109 ,71)		CEAT101M16
	C 2560(A,109 ,60)		CEAT101M16
	C 2561(A,117 ,72)		CCSRCH101J50
	C 2562(A,117 ,60)		CCSRCH101J50
	C 2563(A,120 ,64)		CKSRYB103K50
	C 2564(A,120 ,67)		CKSRYB103K50
	C 2565(A,121 ,71)		CEAT470M25
	C 2566(A,121 ,60)		CEAT470M25
	C 2575(A,70 ,39)		CEAT470M25
	C 2576(A,70 ,33)		CEAT470M25
	C 2577(A,101 ,53)		CEAT4R7M50
	C 2578(A,101 ,42)		CEAT4R7M50
	C 2579(A,96 ,50)		CKSRYB103K50
	C 2580(A,96 ,46)		CKSRYB103K50
	C 2581(A,107 ,50)		CKSRYB223K50
	C 2582(A,107 ,45)		CKSRYB223K50
	C 2583(A,109 ,53)		CEAT101M16
	C 2584(A,109 ,42)		CEAT101M16
	C 2585(A,117 ,54)		CCSRCH101J50
	C 2586(A,117 ,41)		CCSRCH101J50
	C 2587(A,120 ,46)		CKSRYB103K50
	C 2588(A,120 ,49)		CKSRYB103K50
	C 2589(A,121 ,53)		CEAT470M25
	C 2590(A,121 ,42)		CEAT470M25
	C 2621(B,147 ,117)		CKSRYB103K50
	C 2623(B,144 ,75)		CKSRYB104K16
	C 2626(A,23 ,61)		CEAT2R2M50
	C 2627(A,23 ,69)		CEAT2R2M50
	C 2628(A,34 ,61)		CEAT100M50
	C 2629(A,34 ,70)		CEAT100M50
	C 2633(A,61 ,103)		CCSRCH101J50
	C 2634(A,72 ,103)		CCSRCH101J50
	C 2635(B,68 ,107)		CKSRYB103K50
	C 2636(B,66 ,107)		CKSRYB103K50
	C 2637(A,74 ,112)		CEAT100M50
	C 2638(A,74 ,118)		CEAT100M50
	C 2649(A,61 ,94)		CKSRYB103K50

Mark	No.	Description	Part No.
	C 2650	(A,55 ,88)	CKSRYB103K50
	C 2655	(B,69 ,48)	CKSRYB103K50
	C 2656	(B,82 ,54)	CKSRYB103K50
	C 2660	(A,50 ,59)	CEAT100M50
	C 2661	(A,56 ,59)	CEAT100M50
	C 2662	(A,62 ,59)	CEAT100M50
	C 2663	(A,68 ,59)	CEAT100M50
	C 2664	(B,66 ,69)	CCSRCH101J50
	C 2665	(B,64 ,67)	CCSRCH101J50
	C 2666	(A,70 ,67)	CKSRYB103K50
	C 2667	(A,71 ,69)	CKSRYB103K50
	C 2668	(A,70 ,71)	CKSRYB103K50
	C 2675	(A,67 ,86)	CEAT100M50
	C 2676	(A,73 ,86)	CEAT100M50
	C 2677	(A,46 ,19)	CEAT100M50
	C 2678	(A,51 ,19)	CEAT100M50
	C 2679	(A,57 ,19)	CEAT100M50
	C 2680	(A,63 ,19)	CEAT100M50
	C 2681	(B,60 ,30)	CCSRCH101J50
	C 2682	(B,54 ,30)	CCSRCH101J50
	C 2683	(A,62 ,28)	CKSRYB103K50
	C 2684	(A,64 ,31)	CKSRYB103K50
	C 2685	(A,62 ,32)	CKSRYB103K50
	C 2692	(A,48 ,44)	CEAT100M50
	C 2693	(A,42 ,44)	CEAT100M50
	C 2695	(A,72 ,27)	CEAT470M25
	C 2696	(A,72 ,21)	CEAT470M25
	C 2698	(A,131 ,24)	CKSRYB104K16
	C 2699	(A,131 ,42)	CKSRYB473K25
	C 2700	(A,131 ,22)	CKSRYB224K16
	C 2714	(A,131 ,35)	CKSRYB473K25
	C 2716	(A,131 ,28)	CKSRYB224K16
	C 2717	(A,131 ,26)	CKSRYB104K16
	C 2751	(B,107 ,220)	CKSRYB103K50
	C 2752	(B,113 ,220)	CKSRYB103K50
	C 2754	(A,131 ,205) ELECT. CAPACITOR	CEATR10M50
	C 2771	(A,148 ,198)	CEAT101M16
	C 2781	(B,151 ,217)	CKSRYB104K16
	C 2782	(B,149 ,217)	CKSRYB471K50
	C 2783	(B,151 ,213)	CKSRYB104K16
	C 2784	(B,149 ,213)	CKSRYB471K50

L DIGITAL MOTHER ASSY (VSX-74TXVi)

MISCELLANEOUS

Mark	No.	Description	Part No.
	IC 101	(A,46 ,158) CPU	PEG116A
	IC 102	(A,46 ,180) RUNNING CHANGE	AYW7084
	IC1	FLASH MEMORY (4M)	MBM29F400TC-70PFTN
	IC 103	(A,89 ,94) LOGIC IC	CD4094BPW
	IC 104	(A,20 ,147) RESET IC	BU4842F
	IC 105	(A,63 ,122) LOGIC IC	SN74AHCT32PW
	IC 106	(A,63 ,133) LOGIC IC	SN74AHCT08PW
	IC 107	(A,83 ,138) IC	TC74VHCT125AFTS1
	IC 108	(A,90 ,114) LOGIC IC	SN74LV244ATPW
	IC 201	(A,114 ,133) CPU	PEG117A
	IC 202	(A,114 ,154) FLASH ROM	AYW7080
	IC2	FLASH MEMORY(4M)	MBM29LV400TC-70PFTN
	IC 203	(A,133 ,107) LOGIC IC	CD4094BPW
	IC 204	(A,107 ,109) IC	TC74VHCT125AFTS1
	IC 205	(A,115 ,107) LOGIC IC	SN74AHC02PW
	IC 206	(A,84 ,127) LOGIC IC	SN74LV125APW
	IC 207	(A,92 ,127) LOGIC IC	SN74AHC08PW
	IC 208	(A,92 ,138) LOGIC IC	SN74LV244APW
	IC 209	(A,82 ,150) LOGIC IC	SN74LV125APW
	IC 210	(A,92 ,150) LOGIC IC	SN74AHC04PW
	IC 211	(A,124 ,107) LOGIC IC	CD4094BPW
⚠	IC 221	(A,121 ,92) IC	NJM2391DL1-33
	IC 261	(A,43 ,208) USB CODEC IC	PCM2902EG
	IC 281	(A,129 ,205) XM/DT IC	F2602E-01
⚠	IC 282	(A,143 ,209) LOAD SWITCHING	AAT4618IGV-0.5-1
	IC 301	(A,105 ,200) DA I/F TRANSCEIVER	AK4114VQ
	IC 304	(A,15 ,195) LOGIC IC	SN74LVC1G97DCK
	IC 305	(A,22 ,195) LOGIC IC	SN74LVC1G97DCK
	IC 306	(A,89 ,168) LOGIC IC	SN74LV157APW
	IC 307	(A,79 ,168) LOGIC IC	SN74LV157APW
	IC 308	(A,104 ,175) LOGIC IC	SN74LV157APW
	IC 309	(A,124 ,175) LOGIC IC	SN74LV157APW
	IC 312	(A,67 ,190) LOGIC IC	SN74AHC08PW
	IC 313	(A,77 ,190) LOGIC IC	SN74AHC08PW
	IC 314	(A,86 ,190) LOGIC IC	SN74AHC08PW
	IC 315	(A,53 ,79) LOGIC IC	SN74LV157APW
	IC 316	(A,64 ,79) LOGIC IC	SN74LV157APW
	IC 318	(A,24 ,180) LOGIC IC	SN74LVC1G97DCK
⚠	IC 321	(A,139 ,183) IC	NJM2391DL1-33
	IC 481	(A,119 ,77) OP-AMP IC	BA4560RF
	IC 482	(A,98 ,76) A/D CONVERTER	PCM1803DB
	IC 551	(A,119 ,52) D/A CONVERTER IC	DSD1791DBR
	IC 552	(A,119 ,35) OP-AMP IC	BA4560RF
	IC 651	(A,98 ,52) D/A CONVERTER IC	DSD1791DBR
	IC 652	(A,98 ,35) OP-AMP IC	BA4560RF
	IC 751	(A,77 ,52) D/A CONVERTER IC	DSD1791DBR
	IC 752	(A,77 ,35) OP-AMP IC	BA4560RF
	IC 851	(A,56 ,52) D/A CONVERTER IC	DSD1791DBR
	IC 852	(A,56 ,35) OP-AMP IC	BA4560RF
	IC 951	(A,35 ,52) D/A CONVERTER IC	DSD1791DBR
	IC 952	(A,35 ,35) OP-AMP IC	BA4560RF
	IC 953	(A,114 ,175) LOGIC IC	SN74AHC08PW
⚠	IC 991	(A,136 ,54) IC	NJM2391DL1-33
	Q 101	(B,21 ,146) TRANSISTOR	DTC143TK
	Q 102	(B,24 ,134) DIGITAL TR(SC-70)	RT1P241M
	Q 103	(B,27 ,134) CHIP TR(DUAL)	RN2901
	Q 104	(B,14 ,135) CHIP TR (PNP X 2)	UMB1N
	Q 105	(A,23 ,17) CHIP TR (PNP X 2)	UMB1N
	Q 106	(A,139 ,87) TRANSISTOR	RT1N241M
	Q 107	(A,28 ,17) CHIP TR (PNP X 2)	UMB1N
	Q 108	(A,138 ,70) CHIP TR (PNP X 2)	UMB1N
	Q 201	(B,20 ,24) TRANSISTOR	2SA1036K
	Q 202	(B,21 ,36) TRANSISTOR	RT1N241M
	Q 281	(B,99 ,153) DIGITAL TR(SC-70)	RT1P441M
	Q 481	(B,129 ,77) TRANSISTOR	IMX25
	Q 482	(A,139 ,76) CHIP TRANSISTOR	RN4903
	D 101	(B,31 ,133) DIODE	DAN202U
	D 102	(A,107 ,8) DIODE	DAN202U
	D 103	(A,112 ,8) DIODE	1SS355
	D 104	(A,51 ,17) DIODE	DAP202U
	D 105	(A,48 ,17) DIODE	DAN202U
	D 106	(A,57 ,12) DIODE	UDZS5R1(B)
	D 107	(B,19 ,137) DIODE	DAN202U
	D 108	(A,110 ,8) DIODE	RB520S-30
	D 109	(B,46 ,183) CHIP DIODE	RB501V-40

Mark	No.		Description	Part No.
	D	110 (B,69 ,142)	DIODE	DAN202U
	D	114 (A,92 ,103)	DIODE	1SS355
	D	116 (A,140 ,83)	CHIP DIODE	RB501V-40
	D	201 (B,18 ,18)	DIODE	DAN202U
	D	202 (B,115 ,157)	CHIP DIODE	RB501V-40
	D	281 (B,138 ,215)	DIODE	UDZS5R6(B)
	D	282 (B,136 ,215)	DIODE	UDZS5R6(B)
	D	451 (B,108 ,74)	DIODE	DAN217
	D	452 (B,108 ,79)	DIODE	DAN217
	L	101 (A,17 ,124)	CHIP SOLID INDUCTOR	ATL7002
	L	102 (B,34 ,16)	CHIP SOLID INDUCTOR	ATL7002
	L	201 (A,129 ,98)	CHIP SOLID INDUCTOR	QTL1013
	L	281 (A,119 ,217)	CHIP SOLID INDUCTOR	QTL1013
	L	282 (A,144 ,200)	CHIP SOLID INDUCTOR	ATL7002
	L	301 (A,85 ,215)	CHIP SOLID INDUCTOR	QTL1013
	L	303 (A,99 ,208)	CHIP SOLID INDUCTOR	QTL1013
	L	304 (A,93 ,207)	CHIP SOLID INDUCTOR	QTL1013
	L	305 (A,22 ,200)	CHIP SOLID INDUCTOR	QTL1013
	L	306 (A,75 ,171)	CHIP SOLID INDUCTOR	QTL1013
	L	307 (A,80 ,82)	CHIP SOLID INDUCTOR	QTL1013
	L	308 (A,63 ,193)	CHIP SOLID INDUCTOR	QTL1013
	L	309 (A,22 ,187)	CHIP SOLID INDUCTOR	QTL1013
	L	311 (A,84 ,171)	CHIP SOLID INDUCTOR	QTL1013
	L	312 (A,100 ,178)	CHIP SOLID INDUCTOR	QTL1013
	L	313 (A,120 ,178)	CHIP SOLID INDUCTOR	QTL1013
	L	314 (A,72 ,193)	CHIP SOLID INDUCTOR	QTL1013
	L	315 (A,110 ,178)	CHIP SOLID INDUCTOR	QTL1013
	L	316 (A,81 ,193)	CHIP SOLID INDUCTOR	QTL1013
	L	481 (A,108 ,86)	CHIP SOLID INDUCTOR	QTL1013
	L	482 (A,89 ,79)	CHIP SOLID INDUCTOR	QTL1013
	L	551 (A,114 ,61)	CHIP SOLID INDUCTOR	QTL1013
	L	552 (A,128 ,48)	CHIP SOLID INDUCTOR	QTL1013
	L	651 (A,94 ,61)	CHIP SOLID INDUCTOR	QTL1013
	L	652 (A,107 ,48)	CHIP SOLID INDUCTOR	QTL1013
	L	751 (A,72 ,61)	CHIP SOLID INDUCTOR	QTL1013
	L	752 (A,86 ,48)	CHIP SOLID INDUCTOR	QTL1013
	L	851 (A,51 ,61)	CHIP SOLID INDUCTOR	QTL1013
	L	852 (A,65 ,48)	CHIP SOLID INDUCTOR	QTL1013
	L	951 (A,30 ,61)	CHIP SOLID INDUCTOR	QTL1013
	L	952 (A,44 ,48)	CHIP SOLID INDUCTOR	QTL1013
	JA	261 (A,43 ,232)	USB CONNECTOR	DKN1237
	JA	301 (A,119 ,232)	PIN JACK(2P)	AKB7173
	JA	302 (A,98 ,232)	OPT. LINK IN	AKS7001
	JA	303 (A,84 ,232)	OPT. LINK IN	AKS7001
	JA	304 (A,70 ,232)	OPT. LINK IN	AKS7001
	JA	305 (A,57 ,232)	OPT. LINK IN	AKS7001
	JA	306 (A,28 ,232)	OPT. LINK OUT	AKS7002
	JA	307 (A,15 ,232)	OPT. LINK OUT	AKS7002
	X	101 (A,46 ,146)	CERAMIC RESONATOR (15.7MHz)	XSS3004
	X	201 (A,114 ,121)	CERAMIC RESONATOR (15.7MHz)	XSS3004
	X	261 (A,38 ,198)	CRYSTAL RESONATOR (12.00MHz)	ASS7047
	X	281 (A,118 ,205)	CRYSTAL RESONATOR (45.1584MHz)	ASS7065
	X	301 (A,102 ,190)	CRYSTAL RESONATOR (24.567MHz)	XSS3003
	CN101	(A,70 ,7)	23P CONNECTOR	52045-2345
	CN102	(A,142 ,19)	11P SOCKET	XKP3076
	CN103	(A,52 ,11)	19P CONNECTOR	52045-1945
	CN104	(A,146 ,84)	B TO B CONNCTOR	BTEM16P-1R
	CN105	(A,17 ,48)	23P SOCKET	XKP3082
	CN201	(A,146 ,191)	4P SOCKET	KP200TA4L
	CN281	(A,141 ,232)	4P SOCKET	AKP7201
	CN301	(A,57 ,200)	26P PLUG	AKM7054
	CN302	(A,39 ,98)	26P PLUG	AKM7054
	CN303	(A,18 ,165)	22P CONNECTOR	RKN1063
	CN304	(A,142 ,167)	23P SOCKET	XKP3083
	CN305	(A,17 ,105)	10P CONNECTOR	AKN7041
	CN991	(A,146 ,25)	B TO B CONNCTOR	BTEM20P-1R
	CN992	(A,146 ,55)	B TO B CONNCTOR	BTEM20P-1R

RESISTORS

R	101	(A,45 ,17)	RS1/16S105J
R	102	(A,33 ,143)	RAB4C101J
R	103	(A,42 ,143)	RAB4C101J
R	104	(B,37 ,142)	RS1/16S104J
R	105	(A,35 ,143)	RS1/16S101J
R	106	(A,37 ,143)	RS1/16S101J
R	107	(B,39 ,142)	RS1/16S104J
R	108	(B,41 ,147)	RS1/16S512J
R	110	(A,38 ,143)	RS1/16S101J
R	111	(A,40 ,143)	RS1/16S101J
R	112	(B,45 ,153)	RS1/16S101J
R	113	(B,47 ,158)	RS1/16S473J
R	114	(B,54 ,143)	RS1/16S101J
R	115	(A,54 ,143)	RAB4C101J
R	116	(A,58 ,143)	RAB4C101J
R	117	(B,54 ,150)	RS1/16S104J
R	119	(B,58 ,147)	RS1/16S222J
R	120	(A,61 ,143)	RS1/16S101J
R	121	(A,30 ,162)	RS1/16S101J
R	122	(B,36 ,153)	RS1/16S474J
R	123	(A,61 ,150)	RAB4C101J
R	124	(A,61 ,155)	RAB4C101J
R	125	(B,52 ,150)	RS1/16S104J
R	126	(B,17 ,129)	RS1/16S473J
R	127	(B,51 ,155)	RS1/16S104J
R	128	(B,61 ,159)	RS1/16S473J
R	129	(A,61 ,158)	RS1/16S473J
R	131	(B,49 ,155)	RS1/16S104J
R	132	(A,61 ,162)	RAB4C101J
R	133	(A,61 ,166)	RAB4C101J
R	134	(B,61 ,163)	RS1/16S473J
R	135	(A,56 ,171)	RS1/16S101J
R	136	(B,19 ,132)	RS1/16S471J
R	137	(A,32 ,158)	RAB4C101J
R	138	(B,38 ,158)	RS1/16S474J
R	139	(B,36 ,158)	RS1/16S104J
R	140	(B,53 ,155)	RS1/16S474J
R	141	(B,41 ,158)	RS1/16S473J
R	143	(B,43 ,158)	RS1/16S473J
R	144	(B,40 ,153)	RS1/16S473J
R	145	(A,31 ,148)	RS1/16S101J
R	146	(B,46 ,179)	RS1/16S104J
R	147	(B,36 ,178)	RS1/16S473J
R	149	(B,91 ,93)	RS1/16S473J
R	150	(B,89 ,93)	RS1/16S473J
R	151	(B,50 ,150)	RS1/16S104J

Mark No.	Description	Part No.
R 153 (B,31 ,129)		RS1/16S471J
R 154 (B,29 ,129)		RS1/16S473J
R 155 (B,21 ,132)		RS1/16S102J
R 156 (B,24 ,129)		RS1/16S473J
R 157 (B,16 ,145)		RS1/16S470J
R 161 (B,54 ,17)		RS1/16S105J
R 162 (B,56 ,12)		RS1/16S223J
R 164 (A,20 ,150)		RS1/16S104J
R 165 (B,33 ,163)		RS1/16S101J
R 166 (B,88 ,116)		RS1/16S104J
R 167 (B,94 ,110)		RS1/16S104J
R 168 (B,90 ,112)		RS1/16S104J
R 169 (B,85 ,129)		RS1/16S104J
R 170 (B,85 ,140)		RS1/16S104J
R 171 (A,80 ,133)		RS1/16S101J
R 172 (B,83 ,129)		RS1/16S104J
R 173 (A,48 ,143)		RS1/16S101J
R 174 (B,50 ,143)		RS1/16S101J
R 175 (B,52 ,143)		RS1/16S101J
R 176 (A,83 ,144)		RS1/16S101J
R 179 (B,25 ,143)		RS1/16S103J
R 180 (B,27 ,153)		RS1/16S222J
R 188 (B,29 ,153)		RS1/16S103J
R 189 (B,87 ,96)		RS1/16S104J
R 190 (B,83 ,115)		RS1/16S474J
R 191 (B,106 ,129)		RS1/16S473J
R 192 (B,121 ,131)		RS1/16S473J
R 195 (B,123 ,131)		RS1/16S473J
R 196 (A,88 ,153)		RS1/16S104J
R 197 (B,83 ,140)		RS1/16S182J
R 199 (A,137 ,149)	RESISTOR ARRAY	RAB4C104J
R 201 (A,102 ,125)		RAB4C101J
R 202 (A,106 ,121)		RAB4C101J
R 203 (B,108 ,129)		RS1/16S472J
R 204 (B,108 ,133)		RS1/16S473J
R 205 (A,109 ,121)		RS1/16S101J
R 206 (B,111 ,130)		RS1/16S101J
R 207 (B,113 ,130)		RS1/16S473J
R 208 (B,115 ,130)		RS1/16S473J
R 209 (A,119 ,118)		RAB4C101J
R 210 (A,124 ,122)		RAB4C101J
R 211 (A,124 ,118)		RAB4C473J
R 214 (A,127 ,127)		RAB4C101J
R 215 (A,127 ,129)		RS1/16S101J
R 216 (A,127 ,131)		RS1/16S101J
R 217 (A,121 ,114)		RS1/16S473J
R 218 (A,127 ,133)		RAB4C101J
R 220 (A,127 ,136)		RS1/16S101J
R 221 (B,117 ,133)		RS1/16S473J
R 222 (A,127 ,137)		RS1/16S473J
R 223 (B,118 ,138)		RS1/16S473J
R 224 (B,131 ,139)		RS1/16S101J
R 225 (A,127 ,140)		RS1/16S101J
R 226 (B,133 ,139)		RS1/16S101J
R 227 (A,102 ,133)		RAB4C101J
R 228 (B,110 ,136)		RS1/16S473J
R 230 (B,104 ,129)		RS1/16S101J
R 231 (A,22 ,147)		RS1/16S104J
R 232 (B,115 ,153)		RS1/16S104J
R 234 (B,104 ,151)		RS1/16S473J

Mark No.	Description	Part No.
R 237 (A,134 ,99)		RS1/16S473J
R 238 (A,133 ,114)		RAB4C473J
R 239 (B,114 ,105)		RS1/16S104J
R 240 (B,116 ,105)		RS1/16S104J
R 241 (A,109 ,115)		RS1/16S101J
R 242 (A,29 ,176)		RS1/16S104J
R 243 (A,29 ,177)		RS1/16S104J
R 244 (B,108 ,138)		RS1/16S473J
R 246 (B,89 ,140)		RS1/16S104J
R 247 (B,87 ,140)		RS1/16S104J
R 248 (B,96 ,139)		RS1/16S104J
R 249 (B,94 ,140)		RS1/16S104J
R 250 (B,104 ,147)		RS1/16S104J
R 251 (B,115 ,140)		RS1/16S104J
R 252 (B,106 ,143)		RS1/16S104J
R 253 (A,86 ,150)		RS1/16S104J
R 255 (A,86 ,145)		RS1/16S104J
R 256 (A,102 ,138)		RS1/16S101J
R 258 (A,111 ,121)		RS1/16S101J
R 259 (B,19 ,30)		RS1/16S222J
R 260 (A,138 ,118)		RS1/16S0R0J
R 261 (A,48 ,214)		RS1/16S220J
R 262 (A,46 ,214)		RS1/16S220J
R 263 (A,48 ,200)		RS1/16S470J
R 264 (A,43 ,202)		RS1/16S105J
R 265 (A,39 ,202)		RS1/16S222J
R 266 (B,48 ,213)		RS1/16S152J
R 267 (B,41 ,225)		RS1/16S0R0J
R 268 (B,44 ,225)		RS1/16S0R0J
R 271 (B,21 ,30)		RS1/16S473J
R 272 (A,125 ,99)		RAB4C473J
R 274 (A,124 ,114)		RS1/16S473J
R 277 (A,121 ,210)		RS1/16S471J
R 281 (A,133 ,215)		RS1/16S101J
R 282 (A,136 ,215)		RS1/16S101J
R 283 (A,135 ,215)		RS1/16S102J
R 284 (A,136 ,218)		RS1/16S102J
R 285 (A,122 ,207)		RS1/16S0R0J
R 286 (A,122 ,203)		RS1/16S105J
R 287 (B,137 ,204)		RS1/16S104J
R 288 (B,133 ,204)		RS1/16S104J
R 289 (B,137 ,209)		RS1/16S104J
R 290 (B,132 ,209)		RS1/16S104J
R 291 (A,130 ,197)		RS1/16S104J
R 292 (A,132 ,197)		RS1/16S104J
R 293 (A,127 ,197)		RAB4C101J
R 294 (A,137 ,204)		RAB4C101J
R 295 (A,137 ,208)		RAB4C101J
R 298 (B,101 ,150)		RS1/16S104J
R 299 (B,104 ,138)		RS1/16S101J
R 301 (B,96 ,220)		RS1/16S101J
R 302 (B,83 ,219)		RS1/16S101J
R 303 (B,69 ,219)		RS1/16S101J
R 304 (B,56 ,219)		RS1/16S101J
R 307 (B,127 ,223)		RS1/16S750J
R 308 (B,116 ,223)		RS1/16S750J
R 309 (B,125 ,219)		RS1/16S100J
R 310 (B,112 ,223)		RS1/16S100J
R 319 (A,96 ,205)		RS1/16S101J
R 320 (A,96 ,201)		RS1/16S101J

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	R 321	(A,114 ,198)	RS1/16S1802F		R 425	(B,76 ,79)	RS1/16S0R0J
	R 322	(A,93 ,193)	RS1/16S470J		R 426	(B,68 ,192)	RS1/16S101J
	R 323	(A,95 ,193)	RS1/16S101J		R 427	(B,66 ,192)	RS1/16S101J
A	R 324	(B,91 ,193)	RS1/16S101J		R 428	(A,70 ,196)	RS1/16S220J
	R 325	(B,93 ,193)	RS1/16S101J		R 429	(A,66 ,196)	RS1/16S470J
	R 326	(B,95 ,193)	RS1/16S101J		R 430	(A,69 ,206)	RS1/16S473J
	R 327	(A,108 ,191)	RS1/16S221J		R 431	(A,137 ,161) RESISTOR ARRAY	RAB4C104J
	R 328	(A,110 ,191)	RAB4C221J		R 432	(A,137 ,157) RESISTOR ARRAY	RAB4C104J
	R 329	(A,113 ,191)	RS1/16S101J		R 433	(A,24 ,157) RESISTOR ARRAY	RAB4C104J
	R 330	(A,114 ,194)	RS1/16S0R0J		R 434	(A,24 ,161) RESISTOR ARRAY	RAB4C104J
	R 331	(A,69 ,216)	RS1/16S0R0J		R 435	(A,24 ,102)	RS1/16S104J
	R 333	(A,17 ,195)	RS1/16S101J		R 436	(A,24 ,104)	RS1/16S104J
	R 335	(A,84 ,161)	RS1/16S101J		R 437	(A,24 ,105)	RS1/16S104J
	R 336	(A,86 ,161)	RS1/16S101J		R 438	(A,24 ,108) RESISTOR ARRAY	RAB4C104J
B							
	R 337	(A,87 ,161)	RS1/16S470J		R 439	(A,69 ,184)	RS1/16S0R0J
	R 339	(A,89 ,161)	RS1/16S101J		R 440	(A,66 ,184)	RS1/16S101J
	R 340	(A,90 ,161)	RS1/16S101J		R 441	(A,70 ,184)	RS1/16S470J
	R 341	(A,92 ,161)	RS1/16S470J		R 442	(A,67 ,184)	RS1/16S470J
	R 343	(A,89 ,175)	RS1/16S101J		R 443	(A,75 ,184)	RS1/16S0R0J
	R 344	(A,90 ,175)	RS1/16S101J		R 444	(A,78 ,184)	RS1/16S0R0J
	R 345	(A,92 ,175)	RS1/16S470J		R 445	(B,78 ,195)	RS1/16S0R0J
	R 347	(A,84 ,175)	RS1/16S101J		R 446	(B,73 ,195)	RS1/16S0R0J
	R 348	(A,86 ,175)	RS1/16S101J		R 447	(A,76 ,184)	RS1/16S470J
	R 349	(A,87 ,175)	RS1/16S470J		R 448	(A,79 ,184)	RS1/16S470J
C	R 351	(A,74 ,161)	RS1/16S101J		R 449	(B,74 ,188)	RS1/16S470J
	R 352	(A,75 ,161)	RS1/16S101J		R 450	(B,76 ,188)	RS1/16S470J
	R 353	(A,77 ,161)	RS1/16S470J		R 453	(A,130 ,73)	RS1/16S752J
	R 356	(A,81 ,161)	RS1/16S470J		R 454	(A,130 ,80)	RS1/16S752J
	R 359	(A,82 ,175)	RS1/16S470J		R 455	(A,130 ,75)	RS1/16S822J
	R 360	(A,75 ,175)	RS1/16S101J		R 456	(A,130 ,78)	RS1/16S822J
	R 361	(A,76 ,175)	RS1/16S101J		R 457	(B,128 ,71)	RS1/16S392J
	R 362	(A,78 ,175)	RS1/16S470J		R 458	(B,128 ,82)	RS1/16S392J
	R 363	(A,101 ,169)	RS1/16S101J		R 461	(A,137 ,76)	RS1/16S223J
	R 364	(A,102 ,169)	RS1/16S101J		R 462	(A,137 ,77)	RS1/16S223J
	R 365	(A,104 ,169)	RS1/16S470J		R 463	(B,122 ,72)	RS1/16S104J
D	R 369	(A,108 ,169)	RS1/16S470J		R 464	(B,122 ,81)	RS1/16S104J
	R 373	(A,109 ,181)	RS1/16S470J		R 465	(A,108 ,73)	RS1/16S101J
	R 375	(A,101 ,181)	RS1/16S101J		R 466	(A,108 ,79)	RS1/16S101J
	R 376	(A,103 ,181)	RS1/16S101J		R 472	(B,95 ,114)	RS1/16S0R0J
	R 377	(A,104 ,181)	RS1/16S470J		R 473	(B,97 ,114)	RS1/16S0R0J
	R 379	(A,119 ,168)	RS1/16S101J		R 474	(B,139 ,118)	RS1/16S0R0J
	R 380	(A,121 ,168)	RS1/16S101J		R 475	(B,137 ,118)	RS1/16S0R0J
	R 381	(A,122 ,168)	RS1/16S470J		R 480	(A,144 ,172)	RS1/16S0R0J
	R 383	(A,124 ,168)	RS1/16S101J		R 481	(B,99 ,82)	RS1/16S101J
	R 384	(A,125 ,168)	RS1/16S101J		R 482	(B,96 ,82)	RS1/16S101J
E	R 385	(A,127 ,168)	RS1/16S470J		R 483	(A,91 ,76)	RS1/16S101J
	R 387	(A,123 ,182)	RS1/16S101J		R 484	(A,99 ,82)	RS1/16S470J
	R 388	(A,125 ,182)	RS1/16S101J		R 485	(A,98 ,82)	RS1/16S101J
	R 389	(A,126 ,182)	RS1/16S470J		R 487	(A,137 ,74)	RS1/16S104J
	R 395	(B,70 ,79)	RS1/16S0R0J		R 488	(A,23 ,177)	RS1/16S101J
	R 400	(B,71 ,75)	RS1/16S0R0J		R 489	(A,26 ,183)	RS1/16S470J
	R 405	(B,72 ,79)	RS1/16S0R0J		R 491	(A,83 ,184)	RS1/16S101J
	R 410	(B,73 ,75)	RS1/16S0R0J		R 493	(B,87 ,193)	RS1/16S101J
	R 411	(B,96 ,129)	RS1/16S0R0J		R 494	(B,85 ,193)	RS1/16S470J
	R 413	(B,92 ,129)	RS1/16S0R0J		R 495	(A,85 ,184)	RS1/16S470J
	R 415	(B,74 ,79)	RS1/16S0R0J		R 496	(A,88 ,184)	RS1/16S470J
F	R 416	(B,70 ,117)	RS1/16S0R0J		R 497	(B,89 ,193)	RS1/16S470J
	R 418	(B,74 ,117)	RS1/16S0R0J		R 501	(A,127 ,40)	RS1/16S222J
	R 420	(B,75 ,75)	RS1/16S0R0J		R 502	(A,111 ,40)	RS1/16S222J
	R 422	(B,19 ,197)	RS1/16S0R0J		R 503	(A,124 ,40)	RS1/16S222J

Mark No.	Description	Part No.
R 504	(A,115 ,40)	RS1/16S222J
R 505	(B,127 ,36)	RS1/16S362J
R 506	(B,111 ,36)	RS1/16S362J
R 507	(B,125 ,36)	RS1/16S101J
R 508	(B,113 ,36)	RS1/16S101J
R 509	(A,127 ,34)	RS1/16S362J
R 510	(A,111 ,34)	RS1/16S362J
R 511	(A,127 ,36)	RS1/16S101J
R 512	(A,111 ,36)	RS1/16S101J
R 513	(A,127 ,37)	RS1/16S122J
R 514	(A,111 ,37)	RS1/16S122J
R 515	(A,125 ,38)	RS1/16S122J
R 516	(A,114 ,38)	RS1/16S122J
R 517	(B,121 ,31)	RS1/16S474J
R 518	(B,117 ,31)	RS1/16S474J
R 519	(B,123 ,26)	RS1/16S221J
R 520	(B,115 ,26)	RS1/16S221J
R 551	(A,112 ,54)	RS1/16S101J
R 552	(A,112 ,58)	RS1/16S101J
R 553	(A,112 ,56)	RS1/16S101J
R 554	(A,112 ,59)	RS1/16S0R0J
R 555	(A,112 ,55)	RS1/16S101J
R 556	(A,127 ,55)	RS1/16S0R0J
R 557	(A,127 ,53)	RS1/16S0R0J
R 558	(A,127 ,59)	RS1/16S221J
R 559	(A,127 ,58)	RS1/16S221J
R 560	(A,127 ,56)	RS1/16S221J
R 561	(A,112 ,53)	RS1/16S221J
R 601	(A,106 ,40)	RS1/16S222J
R 602	(A,90 ,40)	RS1/16S222J
R 603	(A,103 ,40)	RS1/16S222J
R 604	(A,94 ,40)	RS1/16S222J
R 605	(B,106 ,36)	RS1/16S302J
R 606	(B,90 ,36)	RS1/16S682J
R 607	(B,104 ,36)	RS1/16S101J
R 608	(B,92 ,36)	RS1/16S101J
R 609	(A,106 ,34)	RS1/16S302J
R 610	(A,90 ,34)	RS1/16S682J
R 611	(A,106 ,36)	RS1/16S101J
R 612	(A,90 ,36)	RS1/16S101J
R 613	(A,106 ,37)	RS1/16S152J
R 614	(A,90 ,37)	RS1/16S102J
R 615	(A,104 ,38)	RS1/16S152J
R 616	(A,93 ,38)	RS1/16S102J
R 617	(B,100 ,31)	RS1/16S474J
R 618	(B,96 ,31)	RS1/16S474J
R 619	(B,102 ,26)	RS1/16S221J
R 620	(B,94 ,26)	RS1/16S221J
R 651	(A,91 ,54)	RS1/16S101J
R 652	(A,91 ,58)	RS1/16S101J
R 653	(A,91 ,56)	RS1/16S101J
R 654	(A,91 ,59)	RS1/16S0R0J
R 655	(A,91 ,55)	RS1/16S101J
R 656	(A,106 ,55)	RS1/16S0R0J
R 657	(A,106 ,53)	RS1/16S0R0J
R 658	(A,106 ,59)	RS1/16S221J
R 659	(A,106 ,58)	RS1/16S221J
R 660	(A,106 ,56)	RS1/16S221J
R 661	(A,91 ,53)	RS1/16S221J
R 701	(A,85 ,40)	RS1/16S222J

Mark No.	Description	Part No.
R 702	(A,69 ,40)	RS1/16S222J
R 703	(A,82 ,40)	RS1/16S222J
R 704	(A,73 ,40)	RS1/16S222J
R 705	(B,85 ,36)	RS1/16S302J
R 706	(B,69 ,36)	RS1/16S302J
R 707	(B,83 ,36)	RS1/16S101J
R 708	(B,71 ,36)	RS1/16S101J
R 709	(A,85 ,34)	RS1/16S302J
R 710	(A,69 ,34)	RS1/16S302J
R 711	(A,85 ,36)	RS1/16S101J
R 712	(A,69 ,36)	RS1/16S101J
R 713	(A,85 ,37)	RS1/16S152J
R 714	(A,69 ,37)	RS1/16S152J
R 715	(A,83 ,38)	RS1/16S152J
R 716	(A,72 ,38)	RS1/16S152J
R 717	(B,79 ,31)	RS1/16S474J
R 718	(B,75 ,31)	RS1/16S474J
R 719	(B,81 ,26)	RS1/16S221J
R 720	(B,73 ,26)	RS1/16S221J
R 751	(A,70 ,54)	RS1/16S101J
R 752	(A,70 ,58)	RS1/16S101J
R 753	(A,70 ,56)	RS1/16S101J
R 754	(A,70 ,59)	RS1/16S0R0J
R 755	(A,70 ,55)	RS1/16S101J
R 756	(A,85 ,55)	RS1/16S0R0J
R 757	(A,85 ,53)	RS1/16S0R0J
R 758	(A,85 ,59)	RS1/16S221J
R 759	(A,85 ,58)	RS1/16S221J
R 760	(A,85 ,56)	RS1/16S221J
R 761	(A,70 ,53)	RS1/16S221J
R 801	(A,64 ,40)	RS1/16S222J
R 802	(A,48 ,40)	RS1/16S222J
R 803	(A,61 ,40)	RS1/16S222J
R 804	(A,52 ,40)	RS1/16S222J
R 805	(B,64 ,36)	RS1/16S302J
R 806	(B,48 ,36)	RS1/16S302J
R 807	(B,62 ,36)	RS1/16S101J
R 808	(B,50 ,36)	RS1/16S101J
R 809	(A,64 ,34)	RS1/16S302J
R 810	(A,48 ,34)	RS1/16S302J
R 811	(A,64 ,36)	RS1/16S101J
R 812	(A,48 ,36)	RS1/16S101J
R 813	(A,64 ,37)	RS1/16S152J
R 814	(A,48 ,37)	RS1/16S152J
R 815	(A,62 ,38)	RS1/16S152J
R 816	(A,51 ,38)	RS1/16S152J
R 817	(B,58 ,31)	RS1/16S474J
R 818	(B,54 ,31)	RS1/16S474J
R 819	(B,60 ,26)	RS1/16S221J
R 820	(B,52 ,26)	RS1/16S221J
R 851	(A,49 ,54)	RS1/16S101J
R 852	(A,49 ,58)	RS1/16S101J
R 853	(A,49 ,56)	RS1/16S101J
R 854	(A,49 ,59)	RS1/16S0R0J
R 858	(A,64 ,59)	RS1/16S221J
R 859	(A,64 ,58)	RS1/16S221J
R 860	(A,64 ,56)	RS1/16S221J
R 861	(A,49 ,53)	RS1/16S221J
R 864	(B,53 ,55)	RS1/16S0R0J
R 901	(A,43 ,40)	RS1/16S222J

Mark	No.	Description	Part No.
	R 902	(A,27 ,40)	RS1/16S222J
	R 903	(A,40 ,40)	RS1/16S222J
	R 904	(A,31 ,40)	RS1/16S222J
A	R 905	(B,43 ,36)	RS1/16S302J
	R 906	(B,27 ,36)	RS1/16S302J
	R 907	(B,41 ,36)	RS1/16S101J
	R 908	(B,29 ,36)	RS1/16S101J
	R 909	(A,43 ,34)	RS1/16S302J
	R 910	(A,27 ,34)	RS1/16S302J
	R 911	(A,43 ,36)	RS1/16S101J
	R 912	(A,27 ,36)	RS1/16S101J
	R 913	(A,43 ,37)	RS1/16S152J
	R 914	(A,27 ,37)	RS1/16S152J
	R 915	(A,41 ,38)	RS1/16S152J
B	R 916	(A,30 ,38)	RS1/16S152J
	R 917	(B,37 ,31)	RS1/16S474J
	R 918	(B,33 ,31)	RS1/16S474J
	R 919	(B,39 ,26)	RS1/16S221J
	R 920	(B,31 ,26)	RS1/16S221J
	R 921	(A,113 ,181)	RS1/16S101J
	R 923	(A,115 ,169)	RS1/16S101J
	R 925	(A,114 ,181)	RS1/16S470J
	R 926	(A,114 ,169)	RS1/16S470J
	R 927	(A,117 ,169)	RS1/16S470J
C	R 928	(A,117 ,181)	RS1/16S470J
	R 945	(A,37 ,70)	RS1/16S0R0J
	R 946	(A,42 ,70)	RS1/16S0R0J
	R 947	(A,37 ,87)	RS1/16S0R0J
	R 948	(A,42 ,87)	RS1/16S0R0J
	R 949	(A,43 ,61)	RS1/16S221J
	R 951	(A,28 ,54)	RS1/16S101J
	R 952	(A,28 ,58)	RS1/16S101J
	R 953	(A,28 ,56)	RS1/16S101J
	R 954	(A,28 ,59)	RS1/16S0R0J
	R 959	(A,43 ,58)	RS1/16S221J
D	R 960	(A,43 ,56)	RS1/16S221J
	R 961	(A,28 ,53)	RS1/16S221J
	R 963	(A,16 ,191)	RS1/16S0R0J
	R 964	(B,14 ,190)	RS1/16S101J
	R 966	(B,21 ,190)	RS1/16S101J
	R 969	(B,25 ,195)	RS1/16S0R0J
	R 972	(A,50 ,73)	RS1/16S0R0J
	R 973	(A,52 ,73)	RS1/16S470J
	R 975	(A,53 ,73)	RS1/16S101J
	R 976	(A,55 ,73)	RS1/16S101J
	R 977	(A,56 ,73)	RS1/16S470J
E	R 980	(A,54 ,85)	RS1/16S0R0J
	R 981	(A,56 ,85)	RS1/16S470J
	R 984	(A,61 ,73)	RS1/16S0R0J
	R 985	(A,62 ,73)	RS1/16S470J
	R 988	(A,65 ,73)	RS1/16S0R0J
	R 989	(A,67 ,73)	RS1/16S470J
	R 990		RS1/16S0R0J
	R 992	(A,65 ,85)	RS1/16S0R0J
	R 993	(A,67 ,85)	RS1/16S470J
	R 994	(A,59 ,85)	RS1/16S0R0J
F	R 997		RS1/16S0R0J
	R 998	(A,50 ,85)	RS1/16S101J
	R 999	(A,51 ,85)	RS1/16S220J
	R 9983		RS1/16S0R0J
	R 9984		RS1/16S0R0J
	R 9989		RS1/16S0R0J
	R 9990		RS1/16S0R0J

CAPACITORS

C 101	(B,14 ,38)	CKSRYB103K50
C 102	(A,11 ,38) ELECTR.CAPACITOR	CEAT102M10
C 103	(A,18 ,126)	CKSRYB103K50
C 105	(A,33 ,148)	CKSRYB104K16
C 106	(A,34 ,148)	CKSRYB471K50
C 108	(A,46 ,141)	CKSRYB104K16
C 109	(A,46 ,143)	CKSRYB471K50
C 110	(A,59 ,148)	CKSRYB104K16
C 111	(A,57 ,148)	CKSRYB471K50
C 114	(A,45 ,170)	CKSRYB104K16
C 115	(A,45 ,169)	CKSRYB471K50
C 116	(A,33 ,181)	CKSRYB104K16
C 117	(A,34 ,181)	CKSRYB471K50
C 118	(A,86 ,94)	CKSRYB104K16
C 120	(B,26 ,129)	CKSRYB472K50
C 121	(B,21 ,129)	CKSRYB103K50
C 122	(A,16 ,141)	CEAT471M6R3
C 123	(B,52 ,17)	CKSRYB473K25
C 124	(B,46 ,17)	CKSRYB473K25
C 125	(A,62 ,13)	CEAT100M50
C 126	(A,18 ,147)	CKSRYB105K10
C 127	(B,19 ,129)	CKSRYB472K50
C 128	(A,85 ,114)	CKSRYB104K16
C 130	(A,59 ,133)	CKSRYB104K16
C 131	(A,79 ,138)	CKSRYB104K16
C 132	(A,59 ,122)	CKSRYB104K16
C 133	(A,93 ,17)	CKSRYB104K16
C 135	(B,48 ,150)	CKSRYB472K50
C 201	(A,120 ,108)	CKSRYB104K16
C 202	(A,114 ,116)	CKSRYB104K16
C 203	(A,114 ,118)	CKSRYB471K50
C 204	(A,115 ,145)	CKSRYB104K16
C 205	(A,115 ,143)	CKSRYB471K50
C 206	(A,101 ,129)	CKSRYB104K16
C 207	(A,103 ,129)	CKSRYB471K50
C 208	(A,15 ,17) ELECTR.CAPACITOR	CEAT102M10
C 209	(A,101 ,155)	CKSRYB104K16
C 210	(A,102 ,155)	CKSRYB471K50
C 211	(A,129 ,108)	CKSRYB104K16
C 212	(A,103 ,109)	CKSRYB104K16
C 213	(A,111 ,108)	CKSRYB104K16
C 215	(A,80 ,127)	CKSRYB104K16
C 216	(A,88 ,127)	CKSRYB104K16
C 217	(A,87 ,138)	CKSRYB104K16
C 218	(A,78 ,150)	CKSRYB104K16
C 219	(A,88 ,150)	CKSRYB104K16
C 221	(A,129 ,89)	CKSRYB104K16
C 222	(A,131 ,93)	CEAT331M10
C 261	(A,51 ,216)	CEAT470M16
C 262	(A,50 ,209)	CKSRYB104K16
C 263	(A,48 ,202)	CKSRYB104K16
C 264	(B,46 ,206)	CKSRYB104K16
C 265	(B,42 ,209)	CKSRYB104K16
C 266	(B,39 ,209)	CKSRYB104K16
C 267	(A,41 ,213)	CKSRYB104K16

Mark No.	Description	Part No.	Mark No.	Description	Part No.
C 269	(A,38 ,214)	CKSRYB104K16	C 363	(A,47 ,79)	CKSRYB104K16
C 270	(B,43 ,202)	CCSRCH180J50	C 364	(A,49 ,79)	CKSRYB471K50
C 271	(B,38 ,202)	CCSRCH220J50	C 365	(A,59 ,79)	CKSRYB104K16
C 272	(B,38 ,215)	CKSRYB103K50	C 366	(A,60 ,79)	CKSRYB471K50
C 281	(A,145 ,215)	CEAT470M16	C 367	(A,19 ,184)	CEAT101M10
C 282	(B,140 ,213)	CKSRYB104K16	C 368	(A,20 ,181)	CKSRYB104K16
C 283	(A,132 ,213)	CKSRYB104K16	C 369	(A,21 ,181)	CKSRYB471K50
C 284	(A,137 ,213)	CKSRYB104K16	C 371	(B,141 ,172)	CKSRYB104K16
C 285	(B,131 ,216)	CKSRYB104K16	C 372	(B,143 ,172)	CKSRYB472K50
C 286	(A,126 ,214)	CEAT470M16	C 374	(A,25 ,171)	CKSRYB104K16
C 287	(B,127 ,209)	CKSRYB104K16	C 375	(A,25 ,169)	CKSRYB472K50
C 288	(B,129 ,209)	CKSRYB471K50	C 377	(A,24 ,101)	CKSRYB104K16
C 289	(A,121 ,207)	CCSRCH100D50	C 379	(A,139 ,141)	CKSRYB104K16
C 290	(A,121 ,203)	CCSRCH100D50	C 380	(B,142 ,194)	CKSRYB104K16
C 293	(B,145 ,209)	CKSRYB105K10	C 451	(A,125 ,71)	CEAT100M50
C 301	(A,79 ,214)	CEJQ101M10	C 452	(A,125 ,82)	CEAT100M50
C 302	(B,99 ,220)	CKSRYB104K16	C 453	(A,112 ,74)	CEAT100M50
C 303	(B,86 ,219)	CKSRYB104K16	C 454	(A,112 ,80)	CEAT100M50
C 304	(B,72 ,219)	CKSRYB104K16	C 455	(A,108 ,75)	CKSRYB103K50
C 305	(B,59 ,219)	CKSRYB104K16	C 456	(A,108 ,78)	CKSRYB103K50
C 306	(B,27 ,219)	CKSRYB104K16	C 481	(A,115 ,77)	CKSRYB103K50
C 307	(B,15 ,219)	CKSRYB104K16	C 482	(A,123 ,76)	CKSRYB103K50
C 308	(B,127 ,219)	CKSRYB103K50	C 483	(A,104 ,69)	CEAT101M10
C 309	(B,114 ,223)	CKSRYB103K50	C 484	(A,99 ,72)	CKSRYB104K16
C 319	(A,119 ,195)	CEJQ101M6R3	C 485	(A,92 ,69)	CEAT101M10
C 320	(A,114 ,195)	CKSRYB104K16	C 486	(A,96 ,72)	CKSRYB104K16
C 321	(A,114 ,197)	CKSRYB471K50	C 487	(A,105 ,84)	CEAT101M10
C 322	(A,96 ,216)	CEJQ101M10	C 488	(A,104 ,77)	CKSRYB104K16
C 323	(A,98 ,205)	CKSRYB104K16	C 489	(A,91 ,80)	CKSRYB471K50
C 324	(A,98 ,204)	CKSRYB471K50	C 490	(A,91 ,78)	CKSRYB104K16
C 325	(A,88 ,210)	CEJQ101M6R3	C 491	(A,90 ,83)	CEAT101M10
C 326	(A,97 ,197)	CKSRYB104K16	C 501	(A,127 ,39)	CKSRYB102K50
C 327	(A,99 ,197)	CKSRYB471K50	C 502	(A,111 ,39)	CKSRYB102K50
C 328	(A,100 ,193)	CCSRCH120J50	C 503	(B,123 ,36)	CCSRCH331J50
C 329	(A,103 ,193)	CCSRCH120J50	C 504	(B,115 ,36)	CCSRCH331J50
C 330	(A,114 ,200)	CKSRYB474K10	C 505	(A,125 ,35)	CCSRCH331J50
C 332	(A,19 ,205)	CEAT101M10	C 506	(A,114 ,35)	CCSRCH331J50
C 333	(A,12 ,195)	CKSRYB104K16	C 507	(A,127 ,30)	CEAT100M50
C 334	(A,13 ,195)	CKSRYB471K50	C 508	(A,111 ,30)	CEAT100M50
C 335	(A,19 ,195)	CKSRYB104K16	C 509	(B,121 ,26)	CKSRYB472K50
C 336	(A,20 ,195)	CKSRYB471K50	C 510	(B,117 ,26)	CKSRYB472K50
C 338	(A,83 ,168)	CKSRYB104K16	C 551	(A,119 ,31)	CKSRYB103K50
C 339	(A,85 ,168)	CKSRYB471K50	C 552	(A,120 ,39)	CKSRYB103K50
C 340	(A,74 ,168)	CKSRYB104K16	C 553	(A,118 ,64)	CEAT101M10
C 341	(A,75 ,168)	CKSRYB471K50	C 554	(A,112 ,51)	CKSRYB104K16
C 342	(A,99 ,175)	CKSRYB104K16	C 555	(A,119 ,59)	CKSRYB103K50
C 343	(A,100 ,175)	CKSRYB471K50	C 556	(A,127 ,44)	CEAT101M10
C 344	(A,119 ,175)	CKSRYB104K16	C 557	(A,125 ,48)	CKSRYB104K16
C 345	(A,120 ,175)	CKSRYB471K50	C 558	(A,125 ,50)	CKSRYB104K16
C 346	(A,84 ,79)	CEAT331M10	C 559	(A,112 ,49)	CKSRYB104K16
C 352	(A,61 ,190)	CKSRYB104K16	C 560	(A,111 ,44)	CEAT101M10
C 353	(A,63 ,190)	CKSRYB471K50	C 561	(B,111 ,47)	CKSRYB104K16
C 354	(A,66 ,94)	CKSRYB104K16	C 601	(A,106 ,39)	CKSRYB102K50
C 355	(A,24 ,166)	CKSRYB104K16	C 602	(A,90 ,39)	CKSRYB102K50
C 357	(A,144 ,187)	CKSRYB104K16	C 603	(B,102 ,36)	CCSRCH331J50
C 358	(A,136 ,193)	CEAT331M10	C 604	(B,94 ,36)	CCSRCH221J50
C 359	(A,71 ,190)	CKSRYB104K16	C 605	(A,104 ,35)	CCSRCH331J50
C 360	(A,73 ,190)	CKSRYB471K50	C 606	(A,93 ,35)	CCSRCH221J50
C 361	(A,80 ,190)	CKSRYB104K16	C 607	(A,106 ,30)	CEAT100M50
C 362	(A,82 ,190)	CKSRYB471K50	C 608	(A,90 ,30)	CEAT100M50

Mark	No.	Description	Part No.
	C 609	(B,100 ,26)	CKSRYB472K50
	C 610	(B,96 ,26)	CKSRYB472K50
	C 651	(A,98 ,31)	CKSRYB103K50
A	C 652	(A,99 ,39)	CKSRYB103K50
	C 653	(A,97 ,64)	CEAT101M10
	C 654	(A,91 ,51)	CKSRYB104K16
	C 655	(A,98 ,59)	CKSRYB103K50
	C 656	(A,106 ,44)	CEAT101M10
	C 657	(A,104 ,48)	CKSRYB104K16
	C 658	(A,104 ,50)	CKSRYB104K16
	C 659	(A,91 ,49)	CKSRYB104K16
	C 660	(A,90 ,44)	CEAT101M10
	C 661	(B,90 ,47)	CKSRYB104K16
	C 701	(A,85 ,39)	CKSRYB102K50
B	C 702	(A,69 ,39)	CKSRYB102K50
	C 703	(B,81 ,36)	CCSRCH331J50
	C 704	(B,73 ,36)	CCSRCH331J50
	C 705	(A,83 ,35)	CCSRCH331J50
	C 706	(A,72 ,35)	CCSRCH331J50
	C 707	(A,85 ,30)	CEAT100M50
	C 708	(A,69 ,30)	CEAT100M50
	C 709	(B,79 ,26)	CKSRYB472K50
	C 710	(B,75 ,26)	CKSRYB472K50
	C 751	(A,77 ,31)	CKSRYB103K50
	C 752	(A,78 ,39)	CKSRYB103K50
C	C 753	(A,76 ,64)	CEAT101M10
	C 754	(A,70 ,51)	CKSRYB104K16
	C 755	(A,77 ,59)	CKSRYB103K50
	C 756	(A,85 ,44)	CEAT101M10
	C 757	(A,83 ,48)	CKSRYB104K16
	C 758	(A,83 ,50)	CKSRYB104K16
	C 759	(A,70 ,49)	CKSRYB104K16
	C 760	(A,69 ,44)	CEAT101M10
	C 761	(B,69 ,47)	CKSRYB104K16
	C 801	(A,64 ,39)	CKSRYB102K50
D	C 802	(A,48 ,39)	CKSRYB102K50
	C 803	(B,60 ,36)	CCSRCH331J50
	C 804	(B,52 ,36)	CCSRCH331J50
	C 805	(A,62 ,35)	CCSRCH331J50
	C 806	(A,51 ,35)	CCSRCH331J50
	C 807	(A,64 ,30)	CEAT100M50
	C 808	(A,48 ,30)	CEAT100M50
	C 809	(B,58 ,26)	CKSRYB472K50
	C 810	(B,54 ,26)	CKSRYB472K50
	C 851	(A,56 ,31)	CKSRYB103K50
	C 852	(A,57 ,39)	CKSRYB103K50
E	C 853	(A,55 ,64)	CEAT101M10
	C 854	(A,49 ,51)	CKSRYB104K16
	C 855	(A,56 ,59)	CKSRYB103K50
	C 856	(A,64 ,44)	CEAT101M10
	C 857	(A,62 ,48)	CKSRYB104K16
	C 858	(A,62 ,50)	CKSRYB104K16
	C 859	(A,49 ,49)	CKSRYB104K16
	C 860	(A,48 ,44)	CEAT101M10
	C 861	(B,48 ,47)	CKSRYB104K16
	C 901	(A,43 ,39)	CKSRYB102K50
	C 902	(A,27 ,39)	CKSRYB102K50
F	C 903	(B,39 ,36)	CCSRCH331J50
	C 904	(B,31 ,36)	CCSRCH331J50
	C 905	(A,41 ,35)	CCSRCH331J50

Mark	No.	Description	Part No.
	C 906	(A,30 ,35)	CCSRCH331J50
	C 907	(A,43 ,30)	CEAT100M50
	C 908	(A,27 ,30)	CEAT100M50
	C 909	(B,37 ,26)	CKSRYB472K50
	C 910	(B,33 ,26)	CKSRYB472K50
	C 951	(A,35 ,31)	CKSRYB103K50
	C 952	(A,36 ,39)	CKSRYB103K50
	C 953	(A,34 ,64)	CEAT101M10
	C 954	(A,28 ,51)	CKSRYB104K16
	C 955	(A,35 ,59)	CKSRYB103K50
	C 956	(A,43 ,44)	CEAT101M10
	C 957	(A,41 ,48)	CKSRYB104K16
	C 958	(A,41 ,50)	CKSRYB104K16
	C 959	(A,28 ,49)	CKSRYB104K16
	C 960	(A,27 ,44)	CEAT101M10
	C 961	(B,27 ,47)	CKSRYB104K16
	C 963	(A,109 ,175)	CKSRYB104K16
	C 964	(A,110 ,175)	CKSRYB471K50
	C 979	(B,31 ,70)	CKSRYB472K50
	C 980	(B,95 ,77)	CKSRYB472K50
	C 981	(B,67 ,15)	CKSRYB104K16
	C 982	(B,65 ,15)	CKSRYB471K50
	C 985	(B,93 ,77)	CKSRYB104K16
	C 986	(B,91 ,77)	CKSRYB471K50
	C 987	(B,34 ,70)	CKSRYB104K16
	C 988	(B,32 ,70)	CKSRYB471K50
	C 991	(A,140 ,57)	CKSRYB104K16
	C 992	(A,134 ,64)	CEAT101M10
	C 993	(B,137 ,68)	CKSRYB473K25
	C 994	(B,137 ,72)	CKSRYB473K25

L DIGITAL MOTHER ASSY (VSX-72TXV)

MISCELLANEOUS

IC 101	(A,46 ,158) CPU	PEG116A
IC 102	(A,46 ,180) FLASH ROM	AYW7076
IC1	FLASH MEMORY (4M)	MBM29F400TC-70PFTN
IC 103	(A,89 ,94) LOGIC IC	CD4094BPW
IC 104	(A,20 ,147) RESET IC	BU4842F
IC 105	(A,63 ,122) LOGIC IC	SN74AHCT32PW
IC 106	(A,63 ,133) LOGIC IC	SN74AHCT08PW
IC 107	(A,83 ,138) IC	TC74VHCT125AFTS1
IC 108	(A,90 ,114) LOGIC IC	SN74LV244ATPW
IC 201	(A,114 ,133) CPU	PEG117A
IC 202	(A,114 ,154) FLASH ROM	AYW7080
IC2	FLASH MEMORY(4M)	MBM29LV400TC-70PFTN
IC 203	(A,133 ,107) LOGIC IC	CD4094BPW
IC 204	(A,107 ,109) IC	TC74VHCT125AFTS1
IC 205	(A,115 ,107) LOGIC IC	SN74AHC02PW
IC 206	(A,84 ,127) LOGIC IC	SN74LV125APW
IC 207	(A,92 ,127) LOGIC IC	SN74AHC08PW
IC 208	(A,92 ,138) LOGIC IC	SN74LV244APW
IC 209	(A,82 ,150) LOGIC IC	SN74LV125APW
IC 210	(A,92 ,150) LOGIC IC	SN74AHC04PW
⚠IC 221	(A,121 ,92) IC	NJM2391DL1-33
IC 281	(A,129 ,205) XM/DT IC	F2602E-01
⚠IC 282	(A,143 ,209) LOAD SWITCHING	AAT4618IGV-0.5-1
IC 301	(A,105 ,200) DA I/F TRANSCEIVER	AK4114VQ
IC 307	(A,79 ,168) LOGIC IC	SN74LV157APW
IC 308	(A,104 ,175) LOGIC IC	SN74LV157APW
IC 312	(A,67 ,190) LOGIC IC	SN74AHC08PW

Mark	No.	Description	Part No.
	IC 313	(A,77 ,190) LOGIC IC	SN74AHC08PW
	IC 314	(A,86 ,190) LOGIC IC	SN74AHC08PW
	IC 315	(A,53 ,79) LOGIC IC	SN74LV157APW
	IC 316	(A,64 ,79) LOGIC IC	SN74LV157APW
⚠	IC 321	(A,139 ,183) IC	NJM2391DL1-33
	IC 481	(A,119 ,77) OP-AMP IC	BA4560RF
	IC 482	(A,98 ,76) A/D CONVERTER	PCM1803DB
	IC 551	(A,119 ,52) D/A CONVERTER IC	DSD1791DBR
	IC 552	(A,119 ,35) OP-AMP IC	BA4560RF
	IC 651	(A,98 ,52) D/A CONVERTER IC	DSD1791DBR
	IC 652	(A,98 ,35) OP-AMP IC	BA4560RF
	IC 751	(A,77 ,52) D/A CONVERTER IC	DSD1791DBR
	IC 752	(A,77 ,35) OP-AMP IC	BA4560RF
	IC 851	(A,56 ,52) D/A CONVERTER IC	DSD1791DBR
	IC 852	(A,56 ,35) OP-AMP IC	BA4560RF
⚠	IC 991	(A,136 ,54) IC	NJM2391DL1-33
	Q 101	(B,21 ,146) TRANSISTOR	DTC143TK
	Q 102	(B,24 ,134) DIGITAL TR(SC-70)	RT1P241M
	Q 103	(B,27 ,134) CHIP TR(DUAL)	RN2901
	Q 104	(B,14 ,135) CHIP TR (PNP X 2)	UMB1N
	Q 105	(A,23 ,17) CHIP TR (PNP X 2)	UMB1N
	Q 106	(A,139 ,87) TRANSISTOR	RT1N241M
	Q 107	(A,28 ,17) CHIP TR (PNP X 2)	UMB1N
	Q 108	(A,138 ,70) CHIP TR (PNP X 2)	UMB1N
	Q 201	(B,20 ,24) TRANSISTOR	2SA1036K
	Q 202	(B,21 ,36) TRANSISTOR	RT1N241M
	Q 281	(B,99 ,153) DIGITAL TR(SC-70)	RT1P441M
	Q 481	(B,129 ,77) TRANSISTOR	IMX25
	Q 482	(A,139 ,76) CHIP TRANSISTOR	RN4903
	D 101	(B,31 ,133) DIODE	DAN202U
	D 102	(A,107 ,8) DIODE	DAN202U
	D 103	(A,112 ,8) DIODE	1SS355
	D 104	(A,51 ,17) DIODE	DAP202U
	D 105	(A,48 ,17) DIODE	DAN202U
	D 106	(A,57 ,12) DIODE	UDZS5R1(B)
	D 107	(B,19 ,137) DIODE	DAN202U
	D 108	(A,110 ,8) DIODE	RB520S-30
	D 109	(B,46 ,183) CHIP DIODE	RB501V-40
	D 110	(B,69 ,142) DIODE	DAN202U
	D 114	(A,92 ,103) DIODE	1SS355
	D 116	(A,140 ,83) CHIP DIODE	RB501V-40
	D 201	(B,18 ,18) DIODE	DAN202U
	D 202	(B,115 ,157) CHIP DIODE	RB501V-40
	D 281	(B,138 ,215) DIODE	UDZS5R6(B)
	D 282	(B,136 ,215) DIODE	UDZS5R6(B)
	D 451	(B,108 ,74) DIODE	DAN217
	D 452	(B,108 ,79) DIODE	DAN217
	L 101	(A,17 ,124) CHIP SOLID INDUCTOR	ATL7002
	L 102	(B,34 ,16) CHIP SOLID INDUCTOR	ATL7002
	L 201	(A,129 ,98) CHIP SOLID INDUCTOR	QTL1013
	L 281	(A,119 ,217) CHIP SOLID INDUCTOR	QTL1013
	L 282	(A,144 ,200) CHIP SOLID INDUCTOR	ATL7002
	L 301	(A,85 ,215) CHIP SOLID INDUCTOR	QTL1013
	L 303	(A,99 ,208) CHIP SOLID INDUCTOR	QTL1013
	L 304	(A,93 ,207) CHIP SOLID INDUCTOR	QTL1013
	L 306	(A,75 ,171) CHIP SOLID INDUCTOR	QTL1013
	L 307	(A,80 ,82) CHIP SOLID INDUCTOR	QTL1013
	L 308	(A,63 ,193) CHIP SOLID INDUCTOR	QTL1013
	L 312	(A,100 ,178) CHIP SOLID INDUCTOR	QTL1013
	L 314	(A,72 ,193) CHIP SOLID INDUCTOR	QTL1013
	L 316	(A,81 ,193) CHIP SOLID INDUCTOR	QTL1013
	L 481	(A,108 ,86) CHIP SOLID INDUCTOR	QTL1013
	L 482	(A,89 ,79) CHIP SOLID INDUCTOR	QTL1013
	L 551	(A,114 ,61) CHIP SOLID INDUCTOR	QTL1013
	L 552	(A,128 ,48) CHIP SOLID INDUCTOR	QTL1013
	L 651	(A,94 ,61) CHIP SOLID INDUCTOR	QTL1013
	L 652	(A,107 ,48) CHIP SOLID INDUCTOR	QTL1013
	L 751	(A,72 ,61) CHIP SOLID INDUCTOR	QTL1013
	L 752	(A,86 ,48) CHIP SOLID INDUCTOR	QTL1013
	L 851	(A,51 ,61) CHIP SOLID INDUCTOR	QTL1013
	L 852	(A,65 ,48) CHIP SOLID INDUCTOR	QTL1013
	JA301	(A,119 ,232) PIN JACK(2P)	AKB7173
	JA302	(A,98 ,232) OPT. LINK IN	AKS7001
	JA303	(A,84 ,232) OPT. LINK IN	AKS7001
	JA304	(A,70 ,232) OPT. LINK IN	AKS7001
	JA305	(A,57 ,232) OPT. LINK IN	AKS7001
	JA307	(A,15 ,232) OPT. LINK OUT	AKS7002
	X 101	(A,46 ,146) CERAMIC RESONATOR (15.7MHz)	XSS3004
	X 201	(A,114 ,121) CERAMIC RESONATOR (15.7MHz)	XSS3004
	X 281	(A,118 ,205) CRYSTAL RESONATOR (45.1584MHz)	ASS7065
	X 301	(A,102 ,190) CRYSTAL RESONATOR (24.567MHz)	XSS3003
	CN101	(A,70 ,7) 23P CONNECTOR	52045-2345
	CN102	(A,142 ,19) 11P SOCKET	XKP3076
	CN103	(A,52 ,11) 19P CONNECTOR	52045-1945
	CN104	(A,146 ,84) B TO B CONNCTOR	BTEM16P-1R
	CN105	(A,17 ,48) 23P SOCKET	XKP3082
	CN201	(A,146 ,191) 4P SOCKET	KP200TA4L
	CN281	(A,141 ,232) 4P SOCKET	AKP7201
	CN301	(A,57 ,200) 26P PLUG	AKM7054
	CN302	(A,39 ,98) 26P PLUG	AKM7054
	CN304	(A,142 ,167) 23P SOCKET	XKP3083
	CN991	(A,146 ,25) B TO B CONNCTOR	BTEM20P-1R
	CN992	(A,146 ,55) B TO B CONNCTOR	BTEM20P-1R

RESISTORS

	R 101	(A,45 ,17)	RS1/16S105J
	R 102	(A,33 ,143)	RAB4C101J
	R 103	(A,42 ,143)	RAB4C101J
	R 104	(B,37 ,142)	RS1/16S104J
	R 105	(A,35 ,143)	RS1/16S101J
	R 106	(A,37 ,143)	RS1/16S101J
	R 108	(B,41 ,147)	RS1/16S512J
	R 111	(A,40 ,143)	RS1/16S101J
	R 112	(B,45 ,153)	RS1/16S101J
	R 113	(B,47 ,158)	RS1/16S473J
	R 114	(B,54 ,143)	RS1/16S101J
	R 115	(A,54 ,143)	RAB4C101J
	R 116	(A,58 ,143)	RAB4C101J
	R 117	(B,54 ,150)	RS1/16S104J
	R 119	(B,58 ,147)	RS1/16S222J
	R 120	(A,61 ,143)	RS1/16S101J
	R 121	(A,30 ,162)	RS1/16S101J
	R 122	(B,36 ,153)	RS1/16S474J
	R 123	(A,61 ,150)	RAB4C101J
	R 124	(A,61 ,155)	RAB4C101J

Mark	No.		Description	Part No.
	R	125	(B,52 ,150)	RS1/16S104J
	R	126	(B,17 ,129)	RS1/16S473J
	R	127	(B,51 ,155)	RS1/16S104J
A	R	128	(B,61 ,159)	RS1/16S473J
	R	129	(A,61 ,158)	RS1/16S473J
	R	131	(B,49 ,155)	RS1/16S104J
	R	132	(A,61 ,162)	RAB4C101J
	R	133	(A,61 ,166)	RAB4C101J
	R	134	(B,61 ,163)	RS1/16S473J
	R	135	(A,56 ,171)	RS1/16S101J
	R	136	(B,19 ,132)	RS1/16S471J
	R	137	(A,32 ,158)	RAB4C101J
	R	138	(B,38 ,158)	RS1/16S474J
	R	139	(B,36 ,158)	RS1/16S104J
B	R	140	(B,53 ,155)	RS1/16S474J
	R	142	(B,38 ,153)	RS1/16S473J
	R	144	(B,40 ,153)	RS1/16S473J
	R	145	(A,31 ,148)	RS1/16S101J
	R	146	(B,46 ,179)	RS1/16S104J
	R	147	(B,36 ,178)	RS1/16S473J
	R	149	(B,91 ,93)	RS1/16S473J
	R	150	(B,89 ,93)	RS1/16S473J
	R	151	(B,50 ,150)	RS1/16S104J
	R	153	(B,31 ,129)	RS1/16S471J
	R	154	(B,29 ,129)	RS1/16S473J
C				
	R	155	(B,21 ,132)	RS1/16S102J
	R	156	(B,24 ,129)	RS1/16S473J
	R	157	(B,16 ,145)	RS1/16S470J
	R	161	(B,54 ,17)	RS1/16S105J
	R	162	(B,56 ,12)	RS1/16S223J
	R	164	(A,20 ,150)	RS1/16S104J
	R	165	(B,33 ,163)	RS1/16S101J
	R	166	(B,88 ,116)	RS1/16S104J
	R	167	(B,94 ,110)	RS1/16S104J
	R	168	(B,90 ,112)	RS1/16S104J
D	R	169	(B,85 ,129)	RS1/16S104J
	R	170	(B,85 ,140)	RS1/16S104J
	R	171	(A,80 ,133)	RS1/16S101J
	R	172	(B,83 ,129)	RS1/16S104J
	R	174	(B,50 ,143)	RS1/16S101J
	R	175	(B,52 ,143)	RS1/16S101J
	R	176	(A,83 ,144)	RS1/16S101J
	R	179	(B,25 ,143)	RS1/16S103J
	R	180	(B,27 ,153)	RS1/16S222J
	R	188	(B,29 ,153)	RS1/16S103J
	R	189	(B,87 ,96)	RS1/16S104J
E	R	190	(B,83 ,115)	RS1/16S474J
	R	191	(B,106 ,129)	RS1/16S473J
	R	192	(B,121 ,131)	RS1/16S473J
	R	195	(B,123 ,131)	RS1/16S473J
	R	196	(A,88 ,153)	RS1/16S104J
	R	197	(B,83 ,140)	RS1/16S182J
	R	199	(A,137 ,149) RESISTOR ARRAY	RAB4C104J
	R	201	(A,102 ,125)	RAB4C101J
	R	202	(A,106 ,121)	RAB4C101J
	R	203	(B,108 ,129)	RS1/16S472J
	R	204	(B,108 ,133)	RS1/16S473J
F	R	205	(A,109 ,121)	RS1/16S101J
	R	206	(B,111 ,130)	RS1/16S101J
	R	207	(B,113 ,130)	RS1/16S473J

Mark	No.		Description	Part No.
	R	208	(B,115 ,130)	RS1/16S473J
	R	209	(A,119 ,118)	RAB4C101J
	R	210	(A,124 ,122)	RAB4C101J
	R	211	(A,124 ,118)	RAB4C473J
	R	214	(A,127 ,127)	RAB4C101J
	R	215	(A,127 ,129)	RS1/16S101J
	R	216	(A,127 ,131)	RS1/16S101J
	R	217	(A,121 ,114)	RS1/16S473J
	R	218	(A,127 ,133)	RAB4C101J
	R	220	(A,127 ,136)	RS1/16S101J
	R	221	(B,117 ,133)	RS1/16S473J
	R	222	(A,127 ,137)	RS1/16S473J
	R	223	(B,118 ,138)	RS1/16S473J
	R	224	(B,131 ,139)	RS1/16S101J
	R	225	(A,127 ,140)	RS1/16S101J
	R	226	(B,133 ,139)	RS1/16S101J
	R	227	(A,102 ,133)	RAB4C101J
	R	229	(B,112 ,138)	RS1/16S473J
	R	230	(B,104 ,129)	RS1/16S101J
	R	231	(A,22 ,147)	RS1/16S104J
	R	232	(B,115 ,153)	RS1/16S104J
	R	234	(B,104 ,151)	RS1/16S473J
	R	237	(A,134 ,99)	RS1/16S473J
	R	238	(A,133 ,114)	RAB4C473J
	R	239	(B,114 ,105)	RS1/16S104J
	R	240	(B,116 ,105)	RS1/16S104J
	R	241	(A,109 ,115)	RS1/16S101J
	R	242	(A,29 ,176)	RS1/16S104J
	R	243	(A,29 ,177)	RS1/16S104J
	R	244	(B,108 ,138)	RS1/16S473J
	R	246	(B,89 ,140)	RS1/16S104J
	R	247	(B,87 ,140)	RS1/16S104J
	R	248	(B,96 ,139)	RS1/16S104J
	R	249	(B,94 ,140)	RS1/16S104J
	R	250	(B,104 ,147)	RS1/16S104J
	R	251	(B,115 ,140)	RS1/16S104J
	R	252	(B,106 ,143)	RS1/16S104J
	R	253	(A,86 ,150)	RS1/16S104J
	R	255	(A,86 ,145)	RS1/16S104J
	R	256	(A,102 ,138)	RS1/16S101J
	R	258	(A,111 ,121)	RS1/16S101J
	R	259	(B,19 ,30)	RS1/16S222J
	R	267	(B,41 ,225)	RS1/16S0R0J
	R	268	(B,44 ,225)	RS1/16S0R0J
	R	269	(A,51 ,209)	RS1/16S0R0J
	R	270	(A,50 ,206)	RS1/16S0R0J
	R	271	(B,21 ,30)	RS1/16S473J
	R	274	(A,124 ,114)	RS1/16S0R0J
	R	275	(A,123 ,114)	RS1/16S0R0J
	R	277	(A,121 ,210)	RS1/16S471J
	R	281	(A,133 ,215)	RS1/16S101J
	R	282	(A,136 ,215)	RS1/16S101J
	R	283	(A,135 ,215)	RS1/16S102J
	R	284	(A,136 ,218)	RS1/16S102J
	R	285	(A,122 ,207)	RS1/16S0R0J
	R	286	(A,122 ,203)	RS1/16S105J
	R	287	(B,137 ,204)	RS1/16S104J
	R	288	(B,133 ,204)	RS1/16S104J
	R	289	(B,137 ,209)	RS1/16S104J
	R	290	(B,132 ,209)	RS1/16S104J

Mark No.	Description	Part No.
R 291	(A,130 ,197)	RS1/16S104J
R 292	(A,132 ,197)	RS1/16S104J
R 293	(A,127 ,197)	RAB4C101J
R 294	(A,137 ,204)	RAB4C101J
R 295	(A,137 ,208)	RAB4C101J
R 298	(B,101 ,150)	RS1/16S104J
R 299	(B,104 ,138)	RS1/16S101J
R 300	(A,25 ,172)	RS1/16S0R0J
R 301	(B,96 ,220)	RS1/16S101J
R 302	(B,83 ,219)	RS1/16S101J
R 303	(B,69 ,219)	RS1/16S101J
R 304	(B,56 ,219)	RS1/16S101J
R 307	(B,127 ,223)	RS1/16S750J
R 308	(B,116 ,223)	RS1/16S750J
R 309	(B,125 ,219)	RS1/16S100J
R 310	(B,112 ,223)	RS1/16S100J
R 320	(A,96 ,201)	RS1/16S101J
R 321	(A,114 ,198)	RS1/16S1802F
R 322	(A,93 ,193)	RS1/16S470J
R 323	(A,95 ,193)	RS1/16S101J
R 324	(B,91 ,193)	RS1/16S101J
R 325	(B,93 ,193)	RS1/16S101J
R 326	(B,95 ,193)	RS1/16S101J
R 327	(A,108 ,191)	RS1/16S221J
R 328	(A,110 ,191)	RAB4C221J
R 329	(A,113 ,191)	RS1/16S101J
R 330	(A,114 ,194)	RS1/16S0R0J
R 332	(B,31 ,190)	RS1/16S0R0J
R 338	(A,86 ,159)	RS1/16S0R0J
R 342	(A,91 ,159)	RS1/16S0R0J
R 346	(A,91 ,178)	RS1/16S0R0J
R 350	(A,86 ,178)	RS1/16S0R0J
R 351	(A,74 ,161)	RS1/16S101J
R 352	(A,75 ,161)	RS1/16S101J
R 353	(A,77 ,161)	RS1/16S470J
R 356	(A,81 ,161)	RS1/16S470J
R 359	(A,82 ,175)	RS1/16S470J
R 360	(A,75 ,175)	RS1/16S101J
R 361	(A,76 ,175)	RS1/16S101J
R 362	(A,78 ,175)	RS1/16S470J
R 363	(A,101 ,169)	RS1/16S101J
R 364	(A,102 ,169)	RS1/16S101J
R 365	(A,104 ,169)	RS1/16S470J
R 369	(A,108 ,169)	RS1/16S470J
R 373	(A,109 ,181)	RS1/16S470J
R 375	(A,101 ,181)	RS1/16S101J
R 376	(A,103 ,181)	RS1/16S101J
R 377	(A,104 ,181)	RS1/16S470J
R 382	(A,121 ,166)	RS1/16S0R0J
R 386	(A,125 ,166)	RS1/16S0R0J
R 390	(A,124 ,185)	RS1/16S0R0J
R 416	(B,70 ,117)	RS1/16S0R0J
R 418	(B,74 ,117)	RS1/16S0R0J
R 426	(B,68 ,192)	RS1/16S101J
R 427	(B,66 ,192)	RS1/16S101J
R 428	(A,70 ,196)	RS1/16S220J
R 429	(A,66 ,196)	RS1/16S470J
R 430	(A,69 ,206)	RS1/16S473J
R 431	(A,137 ,161) RESISTOR ARRAY	RAB4C104J
R 432	(A,137 ,157) RESISTOR ARRAY	RAB4C104J

Mark No.	Description	Part No.
R 439	(A,69 ,184)	RS1/16S0R0J
R 440	(A,66 ,184)	RS1/16S101J
R 441	(A,70 ,184)	RS1/16S470J
R 442	(A,67 ,184)	RS1/16S470J
R 443	(A,75 ,184)	RS1/16S0R0J
R 444	(A,78 ,184)	RS1/16S0R0J
R 445	(B,78 ,195)	RS1/16S0R0J
R 446	(B,73 ,195)	RS1/16S0R0J
R 447	(A,76 ,184)	RS1/16S470J
R 448	(A,79 ,184)	RS1/16S470J
R 449	(B,74 ,188)	RS1/16S470J
R 450	(B,76 ,188)	RS1/16S470J
R 453	(A,130 ,73)	RS1/16S752J
R 454	(A,130 ,80)	RS1/16S752J
R 455	(A,130 ,75)	RS1/16S822J
R 456	(A,130 ,78)	RS1/16S822J
R 457	(B,128 ,71)	RS1/16S392J
R 458	(B,128 ,82)	RS1/16S392J
R 461	(A,137 ,76)	RS1/16S223J
R 462	(A,137 ,77)	RS1/16S223J
R 463	(B,122 ,72)	RS1/16S104J
R 464	(B,122 ,81)	RS1/16S104J
R 465	(A,108 ,73)	RS1/16S101J
R 466	(A,108 ,79)	RS1/16S101J
R 472	(B,95 ,114)	RS1/16S0R0J
R 473	(B,97 ,114)	RS1/16S0R0J
R 474	(B,139 ,118)	RS1/16S0R0J
R 475	(B,137 ,118)	RS1/16S0R0J
R 480	(A,144 ,172)	RS1/16S0R0J
R 481	(B,99 ,82)	RS1/16S101J
R 482	(B,96 ,82)	RS1/16S101J
R 483	(A,91 ,76)	RS1/16S101J
R 484	(A,99 ,82)	RS1/16S470J
R 485	(A,98 ,82)	RS1/16S101J
R 487	(A,137 ,74)	RS1/16S104J
R 491	(A,83 ,184)	RS1/16S101J
R 493	(B,87 ,193)	RS1/16S101J
R 494	(B,85 ,193)	RS1/16S470J
R 495	(A,85 ,184)	RS1/16S470J
R 496	(A,88 ,184)	RS1/16S470J
R 497	(B,89 ,193)	RS1/16S470J
R 499	(A,23 ,98)	RS1/16S0R0J
R 501	(A,127 ,40)	RS1/16S222J
R 502	(A,111 ,40)	RS1/16S222J
R 503	(A,124 ,40)	RS1/16S222J
R 504	(A,115 ,40)	RS1/16S222J
R 505	(B,127 ,36)	RS1/16S362J
R 506	(B,111 ,36)	RS1/16S362J
R 507	(B,125 ,36)	RS1/16S101J
R 508	(B,113 ,36)	RS1/16S101J
R 509	(A,127 ,34)	RS1/16S362J
R 510	(A,111 ,34)	RS1/16S362J
R 511	(A,127 ,36)	RS1/16S101J
R 512	(A,111 ,36)	RS1/16S101J
R 513	(A,127 ,37)	RS1/16S122J
R 514	(A,111 ,37)	RS1/16S122J
R 515	(A,125 ,38)	RS1/16S122J
R 516	(A,114 ,38)	RS1/16S122J
R 517	(B,121 ,31)	RS1/16S474J
R 518	(B,117 ,31)	RS1/16S474J

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	R	519 (B,123 ,26)	RS1/16S221J		R	717 (B,79 ,31)	RS1/16S474J
	R	520 (B,115 ,26)	RS1/16S221J		R	718 (B,75 ,31)	RS1/16S474J
	R	551 (A,112 ,54)	RS1/16S101J		R	719 (B,81 ,26)	RS1/16S221J
A	R	552 (A,112 ,58)	RS1/16S101J		R	720 (B,73 ,26)	RS1/16S221J
	R	553 (A,112 ,56)	RS1/16S101J		R	751 (A,70 ,54)	RS1/16S101J
	R	554 (A,112 ,59)	RS1/16S0R0J		R	752 (A,70 ,58)	RS1/16S101J
	R	558 (A,127 ,59)	RS1/16S221J		R	753 (A,70 ,56)	RS1/16S101J
	R	559 (A,127 ,58)	RS1/16S221J		R	754 (A,70 ,59)	RS1/16S0R0J
	R	560 (A,127 ,56)	RS1/16S221J		R	758 (A,85 ,59)	RS1/16S221J
	R	561 (A,112 ,53)	RS1/16S221J		R	759 (A,85 ,58)	RS1/16S221J
	R	562 (B,120 ,55)	RS1/16S0R0J		R	760 (A,85 ,56)	RS1/16S221J
	R	563 (B,122 ,55)	RS1/16S0R0J		R	761 (A,70 ,53)	RS1/16S221J
	R	564 (B,116 ,55)	RS1/16S0R0J		R	762 (B,78 ,55)	RS1/16S0R0J
	R	601 (A,106 ,40)	RS1/16S222J		R	763 (B,80 ,55)	RS1/16S0R0J
B	R	602 (A,90 ,40)	RS1/16S222J		R	764 (B,74 ,55)	RS1/16S0R0J
	R	603 (A,103 ,40)	RS1/16S222J		R	801 (A,64 ,40)	RS1/16S222J
	R	604 (A,94 ,40)	RS1/16S222J		R	802 (A,48 ,40)	RS1/16S222J
	R	605 (B,106 ,36)	RS1/16S302J		R	803 (A,61 ,40)	RS1/16S222J
	R	606 (B,90 ,36)	RS1/16S682J		R	804 (A,52 ,40)	RS1/16S222J
	R	607 (B,104 ,36)	RS1/16S101J		R	805 (B,64 ,36)	RS1/16S302J
	R	608 (B,92 ,36)	RS1/16S101J		R	806 (B,48 ,36)	RS1/16S302J
	R	609 (A,106 ,34)	RS1/16S302J		R	807 (B,62 ,36)	RS1/16S101J
	R	610 (A,90 ,34)	RS1/16S682J		R	808 (B,50 ,36)	RS1/16S101J
	R	611 (A,106 ,36)	RS1/16S101J		R	809 (A,64 ,34)	RS1/16S302J
	R	612 (A,90 ,36)	RS1/16S101J		R	810 (A,48 ,34)	RS1/16S302J
C	R	613 (A,106 ,37)	RS1/16S152J		R	811 (A,64 ,36)	RS1/16S101J
	R	614 (A,90 ,37)	RS1/16S102J		R	812 (A,48 ,36)	RS1/16S101J
	R	615 (A,104 ,38)	RS1/16S152J		R	813 (A,64 ,37)	RS1/16S152J
	R	616 (A,93 ,38)	RS1/16S102J		R	814 (A,48 ,37)	RS1/16S152J
	R	617 (B,100 ,31)	RS1/16S474J		R	815 (A,62 ,38)	RS1/16S152J
	R	618 (B,96 ,31)	RS1/16S474J		R	816 (A,51 ,38)	RS1/16S152J
	R	619 (B,102 ,26)	RS1/16S221J		R	817 (B,58 ,31)	RS1/16S474J
	R	620 (B,94 ,26)	RS1/16S221J		R	818 (B,54 ,31)	RS1/16S474J
	R	651 (A,91 ,54)	RS1/16S101J		R	819 (B,60 ,26)	RS1/16S221J
	R	652 (A,91 ,58)	RS1/16S101J		R	820 (B,52 ,26)	RS1/16S221J
D	R	653 (A,91 ,56)	RS1/16S101J		R	851 (A,49 ,54)	RS1/16S101J
	R	654 (A,91 ,59)	RS1/16S0R0J		R	852 (A,49 ,58)	RS1/16S101J
	R	658 (A,106 ,59)	RS1/16S221J		R	853 (A,49 ,56)	RS1/16S101J
	R	659 (A,106 ,58)	RS1/16S221J		R	854 (A,49 ,59)	RS1/16S0R0J
	R	660 (A,106 ,56)	RS1/16S221J		R	858 (A,64 ,59)	RS1/16S221J
	R	661 (A,91 ,53)	RS1/16S221J		R	859 (A,64 ,58)	RS1/16S221J
	R	662 (B,99 ,55)	RS1/16S0R0J		R	860 (A,64 ,56)	RS1/16S221J
	R	663 (B,101 ,55)	RS1/16S0R0J		R	861 (A,49 ,53)	RS1/16S221J
	R	664 (B,95 ,55)	RS1/16S0R0J		R	864 (B,53 ,55)	RS1/16S0R0J
	R	701 (A,85 ,40)	RS1/16S222J		R	950 (A,43 ,55)	RS1/16S0R0J
	R	702 (A,69 ,40)	RS1/16S222J		R	972 (A,50 ,73)	RS1/16S0R0J
E	R	703 (A,82 ,40)	RS1/16S222J		R	973 (A,52 ,73)	RS1/16S470J
	R	704 (A,73 ,40)	RS1/16S222J		R	975 (A,53 ,73)	RS1/16S101J
	R	705 (B,85 ,36)	RS1/16S302J		R	976 (A,55 ,73)	RS1/16S101J
	R	706 (B,69 ,36)	RS1/16S302J		R	977 (A,56 ,73)	RS1/16S470J
	R	707 (B,83 ,36)	RS1/16S101J		R	980 (A,54 ,85)	RS1/16S0R0J
	R	708 (B,71 ,36)	RS1/16S101J		R	981 (A,56 ,85)	RS1/16S470J
	R	709 (A,85 ,34)	RS1/16S302J		R	984 (A,61 ,73)	RS1/16S0R0J
	R	710 (A,69 ,34)	RS1/16S302J		R	985 (A,62 ,73)	RS1/16S470J
	R	711 (A,85 ,36)	RS1/16S101J		R	988 (A,65 ,73)	RS1/16S0R0J
	R	712 (A,69 ,36)	RS1/16S101J		R	989 (A,67 ,73)	RS1/16S470J
F	R	713 (A,85 ,37)	RS1/16S152J		R	990	RS1/16S0R0J
	R	714 (A,69 ,37)	RS1/16S152J		R	992 (A,65 ,85)	RS1/16S0R0J
	R	715 (A,83 ,38)	RS1/16S152J		R	993 (A,67 ,85)	RS1/16S470J
	R	716 (A,72 ,38)	RS1/16S152J		R	994 (A,59 ,85)	RS1/16S0R0J

Mark No.	Description	Part No.
R 997		RS1/16S0R0J
R 998	(A,50 ,85)	RS1/16S101J
R 999	(A,51 ,85)	RS1/16S220J
R 9983		RS1/16S0R0J
R 9984		RS1/16S0R0J
R 9989		RS1/16S0R0J
R 9990		RS1/16S0R0J

CAPACITORS

C 101	(B,14 ,38)	CKSRYB103K50
C 102	(A,11 ,38) ELECTR.CAPACITOR	CEAT102M10
C 103	(A,18 ,126)	CKSRYB103K50
C 105	(A,33 ,148)	CKSRYB104K16
C 106	(A,34 ,148)	CKSRYB471K50
C 108	(A,46 ,141)	CKSRYB104K16
C 109	(A,46 ,143)	CKSRYB471K50
C 110	(A,59 ,148)	CKSRYB104K16
C 111	(A,57 ,148)	CKSRYB471K50
C 114	(A,45 ,170)	CKSRYB104K16
C 115	(A,45 ,169)	CKSRYB471K50
C 116	(A,33 ,181)	CKSRYB104K16
C 117	(A,34 ,181)	CKSRYB471K50
C 118	(A,86 ,94)	CKSRYB104K16
C 120	(B,26 ,129)	CKSRYB472K50
C 121	(B,21 ,129)	CKSRYB103K50
C 122	(A,16 ,141)	CEAT471M6R3
C 123	(B,52 ,17)	CKSRYB473K25
C 124	(B,46 ,17)	CKSRYB473K25
C 125	(A,62 ,13)	CEAT100M50
C 126	(A,18 ,147)	CKSRYB105K10
C 127	(B,19 ,129)	CKSRYB472K50
C 128	(A,85 ,114)	CKSRYB104K16
C 130	(A,59 ,133)	CKSRYB104K16
C 131	(A,79 ,138)	CKSRYB104K16
C 132	(A,59 ,122)	CKSRYB104K16
C 133	(A,93 ,17)	CKSRYB104K16
C 135	(B,48 ,150)	CKSRYB472K50
C 202	(A,114 ,116)	CKSRYB104K16
C 203	(A,114 ,118)	CKSRYB471K50
C 204	(A,115 ,145)	CKSRYB104K16
C 205	(A,115 ,143)	CKSRYB471K50
C 206	(A,101 ,129)	CKSRYB104K16
C 207	(A,103 ,129)	CKSRYB471K50
C 208	(A,15 ,17) ELECTR.CAPACITOR	CEAT102M10
C 209	(A,101 ,155)	CKSRYB104K16
C 210	(A,102 ,155)	CKSRYB471K50
C 211	(A,129 ,108)	CKSRYB104K16
C 212	(A,103 ,109)	CKSRYB104K16
C 213	(A,111 ,108)	CKSRYB104K16
C 215	(A,80 ,127)	CKSRYB104K16
C 216	(A,88 ,127)	CKSRYB104K16
C 217	(A,87 ,138)	CKSRYB104K16
C 218	(A,78 ,150)	CKSRYB104K16
C 219	(A,88 ,150)	CKSRYB104K16
C 221	(A,129 ,89)	CKSRYB104K16
C 222	(A,131 ,93)	CEAT331M10
C 281	(A,145 ,215)	CEAT470M16
C 282	(B,140 ,213)	CKSRYB104K16
C 283	(A,132 ,213)	CKSRYB104K16
C 284	(A,137 ,213)	CKSRYB104K16
C 285	(B,131 ,216)	CKSRYB104K16
C 286	(A,126 ,214)	CEAT470M16
C 287	(B,127 ,209)	CKSRYB104K16
C 288	(B,129 ,209)	CKSRYB471K50
C 289	(A,121 ,207)	CCSRCH100D50
C 290	(A,121 ,203)	CCSRCH100D50
C 293	(B,145 ,209)	CKSRYB105K10
C 301	(A,79 ,214)	CEJQ101M10
C 302	(B,99 ,220)	CKSRYB104K16
C 303	(B,86 ,219)	CKSRYB104K16
C 304	(B,72 ,219)	CKSRYB104K16
C 305	(B,59 ,219)	CKSRYB104K16
C 307	(B,15 ,219)	CKSRYB104K16
C 308	(B,127 ,219)	CKSRYB103K50
C 309	(B,114 ,223)	CKSRYB103K50
C 319	(A,119 ,195)	CEJQ101M6R3
C 320	(A,114 ,195)	CKSRYB104K16
C 321	(A,114 ,197)	CKSRYB471K50
C 322	(A,96 ,216)	CEJQ101M10
C 323	(A,98 ,205)	CKSRYB104K16
C 324	(A,98 ,204)	CKSRYB471K50
C 325	(A,88 ,210)	CEJQ101M6R3
C 326	(A,97 ,197)	CKSRYB104K16
C 327	(A,99 ,197)	CKSRYB471K50
C 328	(A,100 ,193)	CCSRCH120J50
C 329	(A,103 ,193)	CCSRCH120J50
C 330	(A,114 ,200)	CKSRYB474K10
C 332	(A,19 ,205)	CEAT101M10
C 340	(A,74 ,168)	CKSRYB104K16
C 341	(A,75 ,168)	CKSRYB471K50
C 342	(A,99 ,175)	CKSRYB104K16
C 343	(A,100 ,175)	CKSRYB471K50
C 346	(A,84 ,79)	CEAT331M10
C 352	(A,61 ,190)	CKSRYB104K16
C 353	(A,63 ,190)	CKSRYB471K50
C 354	(A,66 ,94)	CKSRYB104K16
C 357	(A,144 ,187)	CKSRYB104K16
C 358	(A,136 ,193)	CEAT331M10
C 359	(A,71 ,190)	CKSRYB104K16
C 360	(A,73 ,190)	CKSRYB471K50
C 361	(A,80 ,190)	CKSRYB104K16
C 362	(A,82 ,190)	CKSRYB471K50
C 363	(A,47 ,79)	CKSRYB104K16
C 364	(A,49 ,79)	CKSRYB471K50
C 365	(A,59 ,79)	CKSRYB104K16
C 366	(A,60 ,79)	CKSRYB471K50
C 371	(B,141 ,172)	CKSRYB104K16
C 372	(B,143 ,172)	CKSRYB472K50
C 375	(A,25 ,169)	CKSRYB472K50
C 379	(A,139 ,141)	CKSRYB104K16
C 380	(B,142 ,194)	CKSRYB104K16
C 451	(A,125 ,71)	CEAT100M50
C 452	(A,125 ,82)	CEAT100M50
C 453	(A,112 ,74)	CEAT100M50
C 454	(A,112 ,80)	CEAT100M50
C 455	(A,108 ,75)	CKSRYB103K50
C 456	(A,108 ,78)	CKSRYB103K50
C 481	(A,115 ,77)	CKSRYB103K50
C 482	(A,123 ,76)	CKSRYB103K50
C 483	(A,104 ,69)	CEAT101M10

Mark	No.	Description	Part No.
	C 484	(A,99 ,72)	CKSRYB104K16
	C 485	(A,92 ,69)	CEAT101M10
	C 486	(A,96 ,72)	CKSRYB104K16
A	C 487	(A,105 ,84)	CEAT101M10
	C 488	(A,104 ,77)	CKSRYB104K16
	C 489	(A,91 ,80)	CKSRYB471K50
	C 490	(A,91 ,78)	CKSRYB104K16
	C 491	(A,90 ,83)	CEAT101M10
	C 501	(A,127 ,39)	CKSRYB102K50
	C 502	(A,111 ,39)	CKSRYB102K50
	C 503	(B,123 ,36)	CCSRCH331J50
	C 504	(B,115 ,36)	CCSRCH331J50
	C 505	(A,125 ,35)	CCSRCH331J50
	C 506	(A,114 ,35)	CCSRCH331J50
B	C 507	(A,127 ,30)	CEAT100M50
	C 508	(A,111 ,30)	CEAT100M50
	C 509	(B,121 ,26)	CKSRYB472K50
	C 510	(B,117 ,26)	CKSRYB472K50
	C 551	(A,119 ,31)	CKSRYB103K50
	C 552	(A,120 ,39)	CKSRYB103K50
	C 553	(A,118 ,64)	CEAT101M10
	C 554	(A,112 ,51)	CKSRYB104K16
	C 555	(A,119 ,59)	CKSRYB103K50
	C 556	(A,127 ,44)	CEAT101M10
C	C 557	(A,125 ,48)	CKSRYB104K16
	C 558	(A,125 ,50)	CKSRYB104K16
	C 559	(A,112 ,49)	CKSRYB104K16
	C 560	(A,111 ,44)	CEAT101M10
	C 561	(B,111 ,47)	CKSRYB104K16
	C 601	(A,106 ,39)	CKSRYB102K50
	C 602	(A,90 ,39)	CKSRYB102K50
	C 603	(B,102 ,36)	CCSRCH331J50
	C 604	(B,94 ,36)	CCSRCH221J50
	C 605	(A,104 ,35)	CCSRCH331J50
	C 606	(A,93 ,35)	CCSRCH221J50
D	C 607	(A,106 ,30)	CEAT100M50
	C 608	(A,90 ,30)	CEAT100M50
	C 609	(B,100 ,26)	CKSRYB472K50
	C 610	(B,96 ,26)	CKSRYB472K50
	C 651	(A,98 ,31)	CKSRYB103K50
	C 652	(A,99 ,39)	CKSRYB103K50
	C 653	(A,97 ,64)	CEAT101M10
	C 654	(A,91 ,51)	CKSRYB104K16
	C 655	(A,98 ,59)	CKSRYB103K50
	C 656	(A,106 ,44)	CEAT101M10
E	C 657	(A,104 ,48)	CKSRYB104K16
	C 658	(A,104 ,50)	CKSRYB104K16
	C 659	(A,91 ,49)	CKSRYB104K16
	C 660	(A,90 ,44)	CEAT101M10
	C 661	(B,90 ,47)	CKSRYB104K16
	C 701	(A,85 ,39)	CKSRYB102K50
	C 702	(A,69 ,39)	CKSRYB102K50
	C 703	(B,81 ,36)	CCSRCH331J50
	C 704	(B,73 ,36)	CCSRCH331J50
	C 705	(A,83 ,35)	CCSRCH331J50
	C 706	(A,72 ,35)	CCSRCH331J50
F	C 707	(A,85 ,30)	CEAT100M50
	C 708	(A,69 ,30)	CEAT100M50
	C 709	(B,79 ,26)	CKSRYB472K50
	C 710	(B,75 ,26)	CKSRYB472K50

Mark	No.	Description	Part No.
	C 751	(A,77 ,31)	CKSRYB103K50
	C 752	(A,78 ,39)	CKSRYB103K50
	C 753	(A,76 ,64)	CEAT101M10
	C 754	(A,70 ,51)	CKSRYB104K16
	C 755	(A,77 ,59)	CKSRYB103K50
	C 756	(A,85 ,44)	CEAT101M10
	C 757	(A,83 ,48)	CKSRYB104K16
	C 758	(A,83 ,50)	CKSRYB104K16
	C 759	(A,70 ,49)	CKSRYB104K16
	C 760	(A,69 ,44)	CEAT101M10
	C 761	(B,69 ,47)	CKSRYB104K16
	C 801	(A,64 ,39)	CKSRYB102K50
	C 802	(A,48 ,39)	CKSRYB102K50
	C 803	(B,60 ,36)	CCSRCH331J50
	C 804	(B,52 ,36)	CCSRCH331J50
	C 805	(A,62 ,35)	CCSRCH331J50
	C 806	(A,51 ,35)	CCSRCH331J50
	C 807	(A,64 ,30)	CEAT100M50
	C 808	(A,48 ,30)	CEAT100M50
	C 809	(B,58 ,26)	CKSRYB472K50
	C 810	(B,54 ,26)	CKSRYB472K50
	C 851	(A,56 ,31)	CKSRYB103K50
	C 852	(A,57 ,39)	CKSRYB103K50
	C 853	(A,55 ,64)	CEAT101M10
	C 854	(A,49 ,51)	CKSRYB104K16
	C 855	(A,56 ,59)	CKSRYB103K50
	C 856	(A,64 ,44)	CEAT101M10
	C 857	(A,62 ,48)	CKSRYB104K16
	C 858	(A,62 ,50)	CKSRYB104K16
	C 859	(A,49 ,49)	CKSRYB104K16
	C 860	(A,48 ,44)	CEAT101M10
	C 861	(B,48 ,47)	CKSRYB104K16
	C 979	(B,31 ,70)	CKSRYB472K50
	C 980	(B,95 ,77)	CKSRYB472K50
	C 981	(B,67 ,15)	CKSRYB104K16
	C 982	(B,65 ,15)	CKSRYB471K50
	C 985	(B,93 ,77)	CKSRYB104K16
	C 986	(B,91 ,77)	CKSRYB471K50
	C 987	(B,34 ,70)	CKSRYB104K16
	C 988	(B,32 ,70)	CKSRYB471K50
	C 991	(A,140 ,57)	CKSRYB104K16
	C 992	(A,134 ,64)	CEAT101M10
	C 993	(B,137 ,68)	CKSRYB473K25
	C 994	(B,137 ,72)	CKSRYB473K25

M DSP ASSY

MISCELLANEOUS

	IC 101	(A,35 ,60) DSP IC	ADSP-21266SKSTZ-2D
	IC 102	(B,32 ,38) LOGIC IC (LATCHES)	TC74VHC573FTS1
	IC 103	(B,45 ,38) LOGIC IC (LATCHES)	TC74VHC573FTS1
	IC 104	(A,42 ,22) 2 TO 4 LINE DECODER	TC7W139FU
	IC 105	(B,42 ,17) FLASH ROM	AYW7081
	IC1	FLASH MEMORY IC	S29AL016D70TFI010
	IC 106	(A,25 ,17) SRAM(4M)	CY7C1049C3312VXC
	IC 107	(B,16 ,60) LOGIC IC	SN74AHC08PW
	IC 109	(A,40 ,15) LOGIC IC	SN74AHC1G32DCK
	IC 201	(B,62 ,57) DSP IC	DSPC56371AF180
	IC 301	(A,70 ,41) LOGIC IC	TC7WHU04FU
⚠	IC 351	(B,17 ,34) IC	NJM2391DL1-33

Mark	No.		Description	Part No.
⚠IC	352	(B,31 ,89)	REGULATOR IC	BA00HC5FP
⚠IC	354	(A,51 ,11)	IC	NJM2391DL1-33
⚠IC	355	(A,63 ,11)	REGULATOR IC	LM1117DT-ADJ
Q	201	(A,53 ,62)	TRANSISTOR	RT1N241M
Q	301	(A,65 ,33)	TRANSISTOR	UN5212
L	101	(A,27 ,82)	CHIP SOLID INDUCTOR	ATL7002
L	102	(B,15 ,76)	CHIP SOLID INDUCTOR	QTL1013
L	103	(B,27 ,31)	CHIP SOLID INDUCTOR	QTL1013
L	104	(B,38 ,32)	CHIP SOLID INDUCTOR	QTL1013
L	105	(A,37 ,19)	CHIP SOLID INDUCTOR	QTL1013
L	106	(A,37 ,18)	CHIP SOLID INDUCTOR	QTL1013
L	107	(B,11 ,71)	CHIP SOLID INDUCTOR	QTL1013
L	108	(A,12 ,13)	CHIP SOLID INDUCTOR	QTL1013
L	201	(B,60 ,27)	CHIP SOLID INDUCTOR	QTL1013
L	202	(A,51 ,37)	CHIP SOLID INDUCTOR	QTL1013
L	203	(A,55 ,51)	CHIP SOLID INDUCTOR	QTL1013
L	301	(A,77 ,39)	CHIP SOLID INDUCTOR	QTL1013
X	301	(A,72 ,33)	CRYSTAL RESONATOR (20MHz)	VSS1171
CN351		(A,11 ,51)	26P SOCKET	AKP7198
CN352		(A,112 ,69)	26P SOCKET	AKP7198

RESISTORS

R	101	(A,23 ,47)		RAB4C472J
R	102	(B,29 ,48)		RS1/16S101J
R	103	(B,34 ,48)		RAB4C470J
R	104	(B,38 ,48)		RAB4C470J
R	105	(A,45 ,46)		RS1/16S220J
R	106	(B,48 ,51)		RS1/16S100J
R	107	(B,49 ,46)		RS1/16S470J
R	108	(B,42 ,47)		RAB4C470J
R	109	(B,46 ,47)		RAB4C470J
R	111	(B,50 ,70)		RAB4C220J
R	113	(B,42 ,77)		RAB4C101J
R	116	(B,38 ,77)		RS1/16S220J
R	117	(B,36 ,77)		RS1/16S220J
R	118	(B,32 ,76)		RS1/16S101J
R	119	(B,32 ,78)		RS1/16S101J
R	120	(B,28 ,73)		RS1/16S101J
R	122	(B,26 ,65)		RS1/16S101J
R	123	(B,24 ,63)		RS1/16S101J
R	124	(B,24 ,61)		RS1/16S101J
R	125	(B,24 ,54)		RS1/16S101J
R	126	(B,25 ,57)		RS1/16S101J
R	127	(B,29 ,58)		RS1/16S100J
R	130	(A,12 ,29)		RAB4C472J
R	131	(B,31 ,56)		RS1/16S101J
R	132	(B,30 ,32)		RAB4C470J
R	133	(B,34 ,32)		RAB4C470J
R	134	(B,47 ,32)		RAB4C470J
R	135	(B,44 ,32)		RS1/16S470J
R	136	(A,37 ,20)		RS1/16S470J
R	137	(A,37 ,22)		RS1/16S470J
R	139	(A,45 ,16)		RS1/16S473J
R	140	(A,48 ,25)		RS1/16S473J
R	141	(B,13 ,53)		RS1/16S101J
R	142	(B,13 ,55)		RS1/16S101J
R	144	(B,21 ,58)		RS1/16S220J
R	145	(B,21 ,61)		RS1/16S220J
R	147	(B,11 ,65)		RS1/16S101J
R	148	(B,11 ,62)		RS1/16S101J
R	149	(B,19 ,66)		RS1/16S220J
R	150	(B,15 ,66)		RS1/16S220J
R	151	(A,45 ,15)		RS1/16S470J
R	158	(A,45 ,13)		RS1/16S472J
R	159	(B,34 ,58)		RS1/16S472J
R	160	(B,33 ,71)		RS1/16S472J
R	161	(B,30 ,71)		RS1/16S472J
R	202	(A,66 ,74)		RAB4C103J
R	203	(A,70 ,57)		RS1/16S473J
R	206	(B,56 ,38)		RS1/16S473J
R	207	(A,66 ,58)		RS1/16S101J
R	208	(A,62 ,58)		RAB4C101J
R	210	(A,60 ,54)		RS1/16S103J
R	211	(A,58 ,51)		RS1/16S101J
R	213	(B,47 ,60)		RS1/16S101J
R	215	(A,53 ,55)		RS1/16S472J
R	224	(B,56 ,71)		RAB4C101J
R	229	(A,63 ,65)		RS1/16S101J
R	230	(B,68 ,69)		RS1/16S101J
R	231	(B,69 ,69)		RS1/16S220J
R	232	(B,70 ,69)		RS1/16S101J
R	233	(B,71 ,69)		RS1/16S220J
R	235	(A,62 ,74)		RAB4C220J
R	236	(B,58 ,74)		RS1/16S0R0J
R	237	(B,54 ,75)		RS1/16S0R0J
R	238	(B,70 ,73)		RS1/16S0R0J
R	239	(B,73 ,72)		RS1/16S0R0J
R	240	(A,70 ,54)		RS1/16S101J
R	301	(A,69 ,37)		RS1/16S105J
R	302	(A,73 ,37)		RS1/16S152J
R	303	(A,71 ,45)		RS1/16S220J
R	304	(A,65 ,41)		RS1/16S220J
R	305	(A,66 ,39)		RS1/16S220J
R	351	(B,37 ,84)		RS1/16S1001F
R	352	(B,37 ,87)		RS1/16S2001F
R	353	(A,68 ,16)		RS1/16S102J
R	354	(B,13 ,83)		RS1/16S0R0J
R	355	(B,13 ,79)		RS1/16S0R0J
R	356	(A,30 ,33)		RS1/16S0R0J
R	357	(A,30 ,36)		RS1/16S0R0J

CAPACITORS

C	101	(A,24 ,44)		CCSRCH471J50
C	102	(A,24 ,43)		CKSRYB104K16
C	103	(A,30 ,46)		CCSRCH471J50
C	104	(A,30 ,44)		CKSRYB104K16
C	105	(A,32 ,42)		CCSRCH471J50
C	106	(A,32 ,41)		CKSRYB104K16
C	107	(A,34 ,46)		CCSRCH471J50
C	108	(A,34 ,44)		CKSRYB104K16
C	109	(A,37 ,46)		CCSRCH471J50
C	110	(A,37 ,44)		CKSRYB104K16
C	111	(A,40 ,46)		CCSRCH471J50
C	112	(A,40 ,44)		CKSRYB104K16
C	113	(A,49 ,50)		CCSRCH471J50
C	114	(A,50 ,50)		CKSRYB104K16
C	115	(A,49 ,56)		CCSRCH471J50
C	116	(A,51 ,56)		CKSRYB104K16
C	117	(A,49 ,59)		CCSRCH471J50

Mark	No.	Description	Part No.
	C 118 (A,51 ,59)		CKSRYB104K16
	C 119 (A,49 ,65)		CCSRCH471J50
	C 120 (A,51 ,65)		CKSRYB104K16
	C 121 (A,49 ,68)		CCSRCH471J50
	C 122 (A,51 ,68)		CKSRYB104K16
	C 123 (A,49 ,70)		CCSRCH471J50
	C 124 (A,51 ,70)		CKSRYB104K16
	C 125 (A,44 ,76)		CCSRCH471J50
	C 126 (A,44 ,77)		CKSRYB104K16
	C 127 (A,41 ,76)		CCSRCH471J50
	C 128 (A,41 ,77)		CKSRYB104K16
	C 129 (A,38 ,76)		CCSRCH471J50
	C 130 (A,38 ,77)		CKSRYB104K16
	C 131 (A,32 ,76)		CCSRCH471J50
	C 132 (A,32 ,77)		CKSRYB104K16
	C 133 (A,29 ,76)		CCSRCH471J50
	C 134 (A,29 ,77)		CKSRYB104K16
	C 135 (A,26 ,76)		CCSRCH471J50
	C 136 (A,26 ,77)		CKSRYB104K16
	C 137 (A,20 ,71)		CCSRCH471J50
	C 138 (A,19 ,71)		CKSRYB104K16
	C 139 (A,20 ,69)		CCSRCH471J50
	C 140 (A,19 ,69)		CKSRYB104K16
	C 141 (A,20 ,63)		CCSRCH471J50
	C 142 (A,19 ,63)		CKSRYB104K16
	C 143 (A,20 ,60)		CCSRCH471J50
	C 144 (A,19 ,60)		CKSRYB104K16
	C 145 (A,20 ,57)		CCSRCH471J50
	C 146 (A,19 ,57)		CKSRYB104K16
	C 147 (A,27 ,46)		CCSRCH471J50
	C 148 (A,27 ,44)		CKSRYB104K16
	C 149 (A,35 ,42)		CCSRCH471J50
	C 150 (A,35 ,41)		CKSRYB104K16
	C 151 (A,43 ,46)		CCSRCH471J50
	C 152 (A,43 ,44)		CKSRYB104K16
	C 153 (A,49 ,54)		CCSRCH471J50
	C 154 (A,51 ,54)		CKSRYB104K16
	C 155 (A,49 ,62)		CCSRCH471J50
	C 156 (A,51 ,62)		CKSRYB104K16
	C 157 (A,47 ,76)		CCSRCH471J50
	C 158 (A,47 ,77)		CKSRYB104K16
	C 159 (A,35 ,76)		CCSRCH471J50
	C 160 (A,35 ,77)		CKSRYB104K16
	C 161 (A,20 ,66)		CCSRCH471J50
	C 162 (A,19 ,66)		CKSRYB104K16
	C 163 (A,19 ,54)		CCSRCH471J50
	C 164 (A,18 ,54)		CKSRYB104K16
	C 165 (A,20 ,51)		CCSRCH471J50
	C 166 (A,19 ,51)		CKSRYB104K16
	C 167 (A,22 ,54)		CCSRCH471J50
	C 168 (A,21 ,54)		CKSRYB104K16
	C 169 (B,30 ,63)		CKSRYB103K50
	C 171 (B,27 ,37)		CCSRCH471J50
	C 172 (B,26 ,37)		CKSRYB104K16
	C 173 (B,40 ,36)		CCSRCH471J50
	C 174 (B,39 ,36)		CKSRYB104K16
	C 175 (A,42 ,20)		CCSRCH471J50
	C 176 (A,42 ,18)		CKSRYB104K16
	C 178 (B,41 ,30)		CCSRCH471J50
	C 179 (B,41 ,31)		CKSRYB104K16
	C 181 (A,18 ,18)		CCSRCH471J50
	C 182 (A,17 ,18)		CKSRYB104K16
	C 183 (A,32 ,17)		CCSRCH471J50
	C 184 (A,34 ,17)		CKSRYB104K16
	C 185 (B,12 ,59)		CCSRCH471J50
	C 186 (B,11 ,59)		CKSRYB104K16
	C 189 (A,38 ,15)		CCSRCH471J50
	C 190 (A,36 ,15)		CKSRYB104K16
	C 201 (B,72 ,57)		CCSRCH471J50
	C 202 (B,74 ,57)		CKSRYB104K16
	C 203 (B,63 ,47)		CCSRCH471J50
	C 204 (B,63 ,46)		CKSRYB104K16
	C 205 (B,52 ,52)		CCSRCH471J50
	C 206 (B,51 ,52)		CKSRYB104K16
	C 207 (B,51 ,58)		CCSRCH471J50
	C 208 (B,50 ,58)		CKSRYB104K16
	C 209 (B,62 ,68)		CCSRCH471J50
	C 210 (B,62 ,69)		CKSRYB104K16
	C 211 (B,72 ,62)		CCSRCH471J50
	C 212 (B,74 ,62)		CKSRYB104K16
	C 213 (B,72 ,52)		CCSRCH471J50
	C 214 (B,74 ,52)		CKSRYB104K16
	C 215 (B,67 ,47)		CCSRCH471J50
	C 216 (B,67 ,46)		CKSRYB104K16
	C 217 (B,52 ,50)		CCSRCH471J50
	C 218 (B,51 ,50)		CKSRYB104K16
	C 219 (B,59 ,68)		CCSRCH471J50
	C 220 (B,59 ,69)		CKSRYB104K16
	C 221 (B,65 ,68)		CCSRCH471J50
	C 222 (B,65 ,69)		CKSRYB104K16
	C 223 (B,56 ,47)		CCSRCH471J50
	C 224 (B,56 ,46)		CKSRYB104K16
	C 228 (B,50 ,56)		CKSRYB103K50
	C 302 (A,73 ,41)		CCSRCH471J50
	C 303 (A,74 ,41)		CKSRYB104K16
	C 304 (A,69 ,36)		CCSRCH100D50
	C 305 (A,73 ,36)		CCSRCH100D50
	C 351 (A,115 ,46)		CEVW101M16
	C 353 (B,6 ,32)		CKSRYB104K16
	C 354 (B,14 ,43)		CEVW101M16
	C 357 (A,29 ,88)	CHIP OS CAPACITOR	ACH7256
	C 360 (A,56 ,16)		CKSRYB104K16
	C 361 (A,53 ,21)		CEVW101M16
	C 364 (A,65 ,21)	CHIP ELECT.CAPACITOR	CEVW101M4

N INTERFACE ASSY

MISCELLANEOUS

Mark	No.	Description	Part No.
⚠	IC 4301(A,239 ,227)	PROTECTOR(1.6A)	AEK7066
	Q 4301(B,229 ,221)	CHIP TRANSISTOR	RSR015P03
	Q 4303(B,215 ,223)	TRANSISTOR	RT1N241C
	D 4302(A,14 ,206)	DIODE	MTZJ6R2(B)
	L 4311(B,56 ,163)	CHIP BEADS	VTL1083
	L 4312(B,134 ,222)	CHIP BEADS	VTL1083
	L 4313(B,132 ,222)	CHIP BEADS	VTL1083
	L 4314(B,130 ,222)	CHIP BEADS	VTL1083
	L 4315(B,128 ,222)	CHIP BEADS	VTL1083
	L 4316(B,126 ,222)	CHIP BEADS	VTL1083
	L 4317(B,124 ,222)	CHIP BEADS	VTL1083

Mark	No.	Description	Part No.
L	4318(B,122 ,222)	CHIP BEADS	VTL1083
L	4320(B,79 ,233)	CHIP BEADS	VTL1083
L	4321(B,79 ,228)	CHIP BEADS	VTL1083
L	4322(B,79 ,231)	CHIP BEADS	VTL1083
L	4323(B,279 ,236)	CHIP BEADS	VTL1083
L	4324(B,321 ,226)	CHIP BEADS	VTL1083
J	4	4PJUMPER WIRE	D20PDD0420E
J	4308(A,260 ,197)	CONNECTOR ASS'Y	PF11PG-R05
J	4309(A,232 ,197)	CONNECTOR ASS'Y	PF08PG-R05
KN4301(A,151 ,218)		WRAPPING TERMINAL	VNF1084
CN4301(A,285 ,231)		CONNECTOR	52045-1545
CN4302(A,194 ,232)		11P PLUG	XKP3065
CN4303(A,188 ,232)		B TO B CONNCTOR	BTEM20S-1S
CN4304(A,158 ,232)		B TO B CONNCTOR	BTEM20S-1S
CN4305(A,129 ,232)		B TO B CONNCTOR	BTEM16S-1S
CN4306(A,46 ,232)		23P PLUG	XKP3071
CN4307(A,22 ,230)		4P PLUG	KM200TA4
CN431024P SOCKET			AKP7203
CN4311(A,42 ,207)		24P SOCKET	AKP7203
CN4312(A,192 ,184)		11P PLUG	XKP3065
CN4313(A,110 ,183)		B TO B CONNCTOR	BTEM20S-1S
CN4314(A,51 ,184)		13P PLUG	XKP3066
CN4315(A,15 ,185)		7P PLUG	KM200TA7
CN4316(A,33 ,152)		17P PLUG	XKP3068
CN4317(A,30 ,128)		15P PLUG	XKP3067
CN4318(A,18 ,106)		6P PLUG	KM200TA6
CN4319(A,25 ,73)		13P PLUG	XKP3066
CN4320(A,37 ,43)		23P PLUG	XKP3071
CN4324(A,72 ,185)		7P PLUG	KM200TA7
CN4325(A,157 ,183)		B TO B CONNCTOR	BTEM14S-1S
Y	18 (A,9 ,202)	3P HOUSING WIRE ASSY	ADX7494
	4305(A,224 ,200)	PCB BINDER	VEF1040
	4304(A,203 ,184)	PCB BINDER	VEF1040
	4303(A,107 ,175)	PCB BINDER	VEF1040
	4302(A,31 ,197)	4P CABLE HOLDER	51048-0400
	4301(A,198 ,198)	4P CABLE HOLDER	51048-0400
Y	17	AWG14 BOARD IN	ADX7493

RESISTORS

R	4302(B,235 ,225)		RS1/16S103J
R	4303(B,224 ,224)		RS1/16S101J
R	4305(B,246 ,219)		RS1/16S103J
R	4319(B,120 ,222)		RS1/16S102J
R	4327(B,150 ,208)		RS1/16S0R0J
R	4328(B,150 ,206)		RS1/16S0R0J

CAPACITORS

C	4301(A,300 ,185)		CEAT470M25
C	4302(A,300 ,191)		CEAT470M25
C	4303(A,136 ,199)	ELECTR. CAPACITOR	CEAL470M25
C	4304(A,146 ,201)	ELECTR. CAPACITOR	CEAL470M25
C	4305(B,241 ,219)		CKSRYB104K25
C	4307(B,146 ,214)		CKSRYB103K50
C	4308(B,146 ,216)		CKSRYB471K50
C	4313(B,267 ,186)		CKSRYB102K50
C	4314(B,252 ,189)		CKSRYB102K50

O POWER AMP IN ASSY

MISCELLANEOUS

Q	5601(B,61 ,180)	CHIP TRANSISTOR	2SD2704K
Q	5602(B,41 ,219)	TRANSISTOR	IMT4
Q	5603(B,45 ,207)	CHIP TRANSISTOR	2SA1514K
Q	5604(A,28 ,206)	TRANSISTOR	2SA1145
Q	5605(A,30 ,225)	TRANSISTOR	2SC2705
Q	5641(B,15 ,213)	CHIP TR	2SA1255
D	5601(B,38 ,205)	CHIP ZENER DIODE	UDZS3R6(B)
D	5602(B,38 ,207)	DIODE	1SS355
D	5603(B,26 ,222)	DIODE	1SS355
D	5604(B,28 ,212)	DIODE	1SS355
D	5605(B,28 ,218)	DIODE	UDZS4R7(B)
D	5606(B,26 ,212)	DIODE	UDZS4R7(B)
D	5641(B,11 ,229)	DIODE	1SS355
D	5642(B,13 ,229)	DIODE	1SS355
D	5643(B,9 ,229)	DIODE	1SS355
D	5644(B,45 ,238)	DIODE	1SS355
CN5601(A,71 ,233)		13P PLUG	XKP3066
CN5602(A,56 ,199)		13P PLUG	XKP3066
CN5603(A,74 ,131)		19P CONNECTOR	52044-1945
CN5605(A,47 ,233)		SOCKET 7-P	KP250NA7
CN5606(A,32 ,199)		SOCKET 7-P	KP250NA7
	5604(A,7 ,215)	5P CABLE HOLDER	51048-0500

RESISTORS

R	5601(B,58 ,178)		RS1/16S102J
R	5602(B,48 ,212)		RS1/16S221J
R	5603(B,48 ,216)		RS1/16S333J
R	5604(B,58 ,182)		RS1/16S103J
R	5605(B,41 ,213)		RS1/16S152J
R	5606(B,38 ,217)		RS1/16S821J
R	5607(B,44 ,203)		RS1/16S2001F
R	5608(B,43 ,212)		RS1/16S682J
R	5609(A,36 ,214)	CARBON FILM RESISTOR	RD1/2VM473J
R	5610(B,32 ,202)		RS1/16S151J
R	5611(B,29 ,203)		RN1/16SE1201D
R	5612(B,31 ,230)		RS1/16S221J
⚠R	5623(A,69 ,206)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠R	5624(A,56 ,217)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠R	5627(A,20 ,225)	RESISTOR (0.18, 5W)	ACN7121
R	5629(B,43 ,224)		RN1/10SE3302D
R	5630(B,45 ,220)		RN1/16SE1001D
R	5631(B,47 ,220)		RN1/16SE1500D
R	5632(B,29 ,229)		RS1/16S151J
R	5641(B,7 ,229)		RS1/16S473J
R	5642(B,13 ,195)		RS1/16S223J
R	5643(B,15 ,230)		RS1/16S471J
R	5644(B,15 ,195)		RS1/16S471J
R	5645(B,11 ,235)		RS1/16S472J
R	5646(B,13 ,235)		RS1/16S472J
R	5647(B,15 ,208)		RS1/16S122J
R	5648(B,48 ,238)		RS1/16S154J
R	5649(B,50 ,235)		RS1/16S103J
R	5650(B,52 ,235)		RS1/16S103J

CAPACITORS

C	5601(A,51 ,212)		CEAT4R7M50
C	5602(B,46 ,216)		CCSRCH221J50
C	5604(B,39 ,213)		CKSRYB102K50
C	5607(A,41 ,203)		CEAT101M10
C	5608(B,35 ,228)	CAPACITOR(CERAMIC)	ACG7057
C	5609(A,31 ,210)	ELECT. CAPACITOR	CEAT100M2A
C	5615(B,47 ,225)		CCSRCH220J50

Mark	No.	Description	Part No.
	C 5616(B,45 ,225)		CCSRCH220J50
	C 5617(A,50 ,221)		CEAT331M10
	C 5623(A,67 ,209)		CEAT100M63
	C 5624(A,63 ,225)		CEAT100M63
	C 5632(B,28 ,233)		CKSRYB224K16
	C 5641(A,13 ,199)		CEANP2R2M50

P POWER PROTECT ASSY

MISCELLANEOUS

IC 5701(B,17 ,153)	OP-AMP IC	BA4560RF
Q 5701(B,10 ,107)	TRANSISTOR	RT1N241M
Q 5702(B,20 ,107)	DIGITAL TR(SC-70)	RT1P241M
Q 5704(B,16 ,166)	TRANSISTOR	2SC4081
Q 5705(B,13 ,107)	TRANSISTOR	RT1N241M
D 5701(B,26 ,166)	DIODE	1SS355
CN5701(A,8 ,97)	11P PLUG	XKP3065
CN5702(A,21 ,131)	11P PLUG	XKP3065
CN5703(A,46 ,178)	19P CONNECTOR	52044-1945
CN5704(A,17 ,181)	CONNECTOR	S5B-PH
CN5705(A,19 ,39)	17P CONNECTOR	52044-1745

RESISTORS

R 5701(B,13 ,118)	RS1/16S332J
R 5702(B,16 ,118)	RS1/16S332J
R 5703(B,27 ,88)	RS1/16S473J
R 5704(B,27 ,81)	RS1/16S0R0J
R 5707(B,20 ,88)	RS1/16S473J
R 5709(B,22 ,81)	RS1/16S0R0J
R 5710(B,21 ,149)	RS1/16S223J
R 5711(B,21 ,153)	RS1/16S103J
R 5712(B,12 ,155)	RS1/16S472J
R 5713(B,21 ,158)	RS1/16S103J
R 5714(B,13 ,139)	RS1/16S102J
R 5715(B,8 ,166)	RS1/16S473J
R 5716(B,13 ,166)	RS1/16S472J
R 5717(B,19 ,166)	RS1/16S103J
R 5720(B,21 ,166)	RS1/16S103J
R 5721(B,24 ,166)	RS1/16S683J
R 5746(B,17 ,88)	RS1/16S0R0J
R 5747(B,18 ,107)	RS1/16S0R0J
R 5750(B,26 ,161)	RS1/16S0R0J

CAPACITORS

C 5701(B,25 ,88)	CKSRYB104K50
C 5702(B,22 ,88)	CKSRYB104K50
C 5703(B,24 ,158)	CKSRYB104K50
C 5704(B,12 ,151)	CKSRYB104K50
C 5705(B,11 ,166)	CKSRYB223K50
C 5706(B,14 ,44)	CKSRYB103K50

Q POWER AMP-L ASSY

MISCELLANEOUS

⚠IC 5001(A,169 ,134)	DARLINGTON POWER IC	SAP17N(OY)
⚠IC 5002(A,209 ,134)	DARLINGTON POWER IC	SAP17P(OY)
⚠IC 5101(A,105 ,134)	DARLINGTON POWER IC	SAP17N(OY)
⚠IC 5102(A,137 ,134)	DARLINGTON POWER IC	SAP17P(OY)
⚠IC 5201(A,249 ,134)	DARLINGTON POWER IC	SAP17N(OY)
⚠IC 5202(A,281 ,134)	DARLINGTON POWER IC	SAP17P(OY)
⚠IC 5601(A,313 ,134)	DARLINGTON POWER IC	SAP17N(OY)

Mark	No.	Description	Part No.
	Q 5001(B,193 ,207)	CHIP TRANSISTOR	2SD2704K
	Q 5002(B,181 ,194)	TRANSISTOR	IMT4
	Q 5004(A,192 ,184)	TRANSISTOR	2SA1145
	Q 5005(A,168 ,192)	TRANSISTOR	2SC2705
	Q 5041(B,156 ,195)	CHIP TR	2SA1255
	Q 5101(B,136 ,207)	CHIP TRANSISTOR	2SD2704K
	Q 5102(B,124 ,194)	TRANSISTOR	IMT4
	Q 5103(B,137 ,198)	CHIP TRANSISTOR	2SA1514K
	Q 5104(A,135 ,184)	TRANSISTOR	2SA1145
	Q 5105(A,112 ,192)	TRANSISTOR	2SC2705
	Q 5141(B,100 ,202)	CHIP TR	2SA1255
	Q 5201(B,274 ,206)	CHIP TRANSISTOR	2SD2704K
	Q 5202(B,262 ,193)	TRANSISTOR	IMT4
	Q 5203(B,275 ,197)	CHIP TRANSISTOR	2SA1514K
	Q 5204(A,273 ,183)	TRANSISTOR	2SA1145
	Q 5205(A,250 ,191)	TRANSISTOR	2SC2705
	Q 5241(B,238 ,197)	CHIP TR	2SA1255
	D 5001(B,197 ,188)	CHIP ZENER DIODE	UDZS3R6(B)
	D 5002(B,195 ,188)	DIODE	1SS355
	D 5003(B,187 ,183)	DIODE	1SS355
	D 5004(B,179 ,183)	DIODE	1SS355
	D 5005(B,184 ,183)	DIODE	UDZS4R7(B)
	D 5006(B,182 ,183)	DIODE	UDZS4R7(B)
	D 5041(B,156 ,174)	DIODE	1SS355
	D 5042(B,158 ,174)	DIODE	1SS355
	D 5043(B,158 ,203)	DIODE	1SS355
	D 5044(B,161 ,170)	DIODE	1SS355
	D 5101(B,141 ,188)	CHIP ZENER DIODE	UDZS3R6(B)
	D 5102(B,139 ,188)	DIODE	1SS355
	D 5103(B,130 ,183)	DIODE	1SS355
	D 5104(B,123 ,183)	DIODE	1SS355
	D 5105(B,128 ,183)	DIODE	UDZS4R7(B)
	D 5106(B,125 ,183)	DIODE	UDZS4R7(B)
	D 5141(B,93 ,187)	DIODE	1SS355
	D 5142(B,96 ,187)	DIODE	1SS355
	D 5143(B,103 ,205)	DIODE	1SS355
	D 5144(B,104 ,182)	DIODE	1SS355
	D 5201(B,279 ,187)	CHIP ZENER DIODE	UDZS3R6(B)
	D 5202(B,276 ,187)	DIODE	1SS355
	D 5203(B,268 ,181)	DIODE	1SS355
	D 5204(B,261 ,181)	DIODE	1SS355
	D 5205(B,266 ,181)	DIODE	UDZS4R7(B)
	D 5206(B,263 ,181)	DIODE	UDZS4R7(B)
	D 5241(B,238 ,173)	DIODE	1SS355
	D 5242(B,240 ,173)	DIODE	1SS355
	D 5243(B,240 ,202)	DIODE	1SS355
	D 5244(B,242 ,173)	DIODE	1SS355
	⚠TH5001(A,160 ,229)	POSISTOR	PTFM04BC222Q2N34B0
	CN5001(A,320 ,205)	13P SOCKET	XKP3077
	CN5002(A,86 ,219)	11P SOCKET	XKP3076
	CN5003(A,313 ,196)	7-P PLUG	KM250NA7L

RESISTORS

R 5001(B,199 ,202)	RS1/16S102J
R 5002(B,187 ,202)	RS1/16S221J
R 5003(B,184 ,203)	RS1/16S333J
R 5004(B,199 ,205)	RS1/16S103J
R 5005(B,177 ,192)	RS1/16S152J
R 5006(B,170 ,200)	RS1/16S821J
R 5007(B,197 ,197)	RS1/16S2001F

Mark	No.	Description	Part No.
	R 5008(B,186 ,194)		RS1/16S682J
	R 5009(A,189 ,193)	CARBON FILM RESISTOR	RD1/2VM473J
	R 5010(B,197 ,183)		RS1/16S151J
	R 5011(B,195 ,184)		RN1/16SE1201D
	R 5012(B,169 ,197)		RS1/16S221J
	R 5013(B,183 ,150)	CHIP RESISTOR	RS1/16S62R0F
	R 5021(B,176 ,153)		RS1/16S101J
	R 5022(B,190 ,153)		RS1/16S101J
⚠	R 5023(A,198 ,166)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5024(A,168 ,176)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5025(B,163 ,156)	CHIP RESISTOR	ACN7132
⚠	R 5026(B,200 ,156)	CHIP RESISTOR	ACN7132
⚠	R 5027(A,192 ,166)	RESISTOR (0.18, 5W)	ACN7121
	R 5029(B,174 ,203)		RN1/10SE3302D
	R 5030(B,180 ,203)		RN1/16SE1001D
	R 5031(B,180 ,205)		RN1/16SE1500D
	R 5032(B,167 ,196)		RS1/16S151J
	R 5041(B,154 ,169)		RS1/16S473J
	R 5042(B,156 ,169)		RS1/16S223J
	R 5043(B,152 ,169)		RS1/16S471J
	R 5044(B,158 ,169)		RS1/16S471J
	R 5045(B,158 ,179)		RS1/16S472J
	R 5046(B,161 ,179)		RS1/16S472J
	R 5047(B,157 ,187)		RS1/16S122J
	R 5048(B,158 ,183)		RS1/16S154J
	R 5049(B,161 ,183)		RS1/16S103J
	R 5050(B,160 ,187)		RS1/16S103J
	R 5101(B,143 ,202)		RS1/16S102J
	R 5102(B,130 ,202)		RS1/16S221J
	R 5103(B,127 ,203)		RS1/16S333J
	R 5104(B,143 ,205)		RS1/16S103J
	R 5105(B,120 ,192)		RS1/16S152J
	R 5106(B,114 ,200)		RS1/16S821J
	R 5107(B,141 ,197)		RS1/16S2001F
	R 5108(B,130 ,194)		RS1/16S682J
	R 5109(A,133 ,193)	CARBON FILM RESISTOR	RD1/2VM473J
	R 5110(B,141 ,183)		RS1/16S151J
	R 5111(B,139 ,184)		RN1/16SE1201D
	R 5112(B,113 ,197)		RS1/16S221J
	R 5113(B,115 ,150)	CHIP RESISTOR	RS1/16S62R0F
	R 5121(B,108 ,153)		RS1/16S101J
	R 5122(B,129 ,150)		RS1/16S101J
⚠	R 5123(A,142 ,166)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5124(A,111 ,176)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5125(B,99 ,156)	CHIP RESISTOR	ACN7132
⚠	R 5126(B,136 ,156)	CHIP RESISTOR	ACN7132
⚠	R 5127(A,136 ,166)	RESISTOR (0.18, 5W)	ACN7121
	R 5129(B,117 ,203)		RN1/10SE3302D
	R 5130(B,123 ,203)		RN1/16SE1001D
	R 5131(B,123 ,205)		RN1/16SE1500D
	R 5132(B,110 ,196)		RS1/16S151J
	R 5141(B,97 ,182)		RS1/16S473J
	R 5142(B,99 ,182)		RS1/16S223J
	R 5143(B,95 ,182)		RS1/16S471J
	R 5144(B,102 ,182)		RS1/16S471J
	R 5145(B,100 ,187)		RS1/16S472J
	R 5146(B,102 ,187)		RS1/16S472J
	R 5147(B,99 ,195)		RS1/16S122J
	R 5148(B,100 ,191)		RS1/16S154J
	R 5149(B,102 ,191)		RS1/16S103J
	R 5150(B,102 ,195)		RS1/16S103J
	R 5201(B,281 ,201)		RS1/16S102J
	R 5202(B,268 ,201)		RS1/16S221J
	R 5203(B,265 ,202)		RS1/16S333J
	R 5204(B,281 ,204)		RS1/16S103J
	R 5205(B,258 ,191)		RS1/16S152J
	R 5206(B,252 ,199)		RS1/16S821J
	R 5207(B,279 ,196)		RS1/16S2001F
	R 5208(B,268 ,193)		RS1/16S682J
	R 5209(A,271 ,192)	CARBON FILM RESISTOR	RD1/2VM473J
	R 5210(B,278 ,183)		RS1/16S151J
	R 5211(B,276 ,183)		RN1/16SE1201D
	R 5212(B,251 ,196)		RS1/16S221J
	R 5213(B,259 ,149)	CHIP RESISTOR	RS1/16S62R0F
	R 5221(B,251 ,153)		RS1/16S101J
	R 5222(B,269 ,153)		RS1/16S101J
⚠	R 5223(A,280 ,164)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5224(A,250 ,175)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5225(B,238 ,156)	CHIP RESISTOR	ACN7132
⚠	R 5226(B,279 ,156)	CHIP RESISTOR	ACN7132
⚠	R 5227(A,274 ,165)	RESISTOR (0.18, 5W)	ACN7121
	R 5229(B,255 ,202)		RN1/10SE3302D
	R 5230(B,261 ,202)		RN1/16SE1001D
	R 5231(B,261 ,204)		RN1/16SE1500D
	R 5232(B,248 ,195)		RS1/16S151J
	R 5241(B,237 ,169)		RS1/16S473J
	R 5242(B,239 ,169)		RS1/16S223J
	R 5243(B,235 ,169)		RS1/16S471J
	R 5244(B,241 ,169)		RS1/16S471J
	R 5245(B,240 ,180)		RS1/16S472J
	R 5246(B,242 ,180)		RS1/16S472J
	R 5247(B,240 ,189)		RS1/16S122J
	R 5248(B,237 ,180)		RS1/16S154J
	R 5249(B,242 ,184)		RS1/16S103J
	R 5250(B,240 ,184)		RS1/16S103J
⚠	R 5292(B,300 ,156)	CHIP RESISTOR	ACN7132
	R 5613(B,314 ,153)	CHIP RESISTOR	RS1/16S62R0F
	R 5621(B,308 ,151)		RS1/16S101J

CAPACITORS

	C 5001(A,190 ,203)		CEAT4R7M50
	C 5002(B,184 ,200)		CCSRCH221J50
	C 5004(B,174 ,197)		CKSRYB102K50
	C 5007(A,202 ,193)		CEAT101M10
	C 5008(B,171 ,197)	CAPACITOR(CERAMIC)	ACG7057
	C 5009(A,186 ,188)	ELECT. CAPACITOR	CEAT100M2A
	C 5011(B,169 ,142)	CAPACITOR(CERAMIC)	ACG7056
	C 5012(B,197 ,142)	CAPACITOR(CERAMIC)	ACG7056
	C 5015(B,175 ,205)		CCSRCH220J50
	C 5016(B,175 ,207)		CCSRCH220J50
	C 5017(A,179 ,207)		CEAT331M10
	C 5023(A,197 ,180)		CEAT100M63
	C 5024(A,173 ,186)		CEAT100M63
	C 5032(B,166 ,199)		CKSRYB224K16
	C 5041(A,155 ,190)		CEANP2R2M50
	C 5051(A,219 ,183)	ELECT. CAPACITOR	CEAT100M2A
	C 5052(A,223 ,177)	ELECT. CAPACITOR	CEAT100M2A
	C 5101(A,133 ,203)		CEAT4R7M50
	C 5102(B,127 ,200)		CCSRCH221J50
	C 5104(B,117 ,197)		CKSRYB102K50

Mark	No.	Description	Part No.
	C 5107(A,145 ,193)		CEAT101M10
	C 5108(B,115 ,197)	CAPACITOR(CERAMIC)	ACG7057
	C 5109(A,129 ,188)	ELECT. CAPACITOR	CEAT100M2A
	C 5111(B,101 ,142)	CAPACITOR(CERAMIC)	ACG7056
	C 5112(B,130 ,142)	CAPACITOR(CERAMIC)	ACG7056
	C 5115(B,119 ,205)		CCSRCH220J50
	C 5116(B,119 ,207)		CCSRCH220J50
	C 5117(A,123 ,207)		CEAT331M10
	C 5123(A,141 ,180)		CEAT100M63
	C 5124(A,116 ,186)		CEAT100M63
	C 5132(B,110 ,199)		CKSRYB224K16
	C 5141(A,96 ,198)		CEANP2R2M50
	C 5201(A,271 ,202)		CEAT4R7M50
	C 5202(B,265 ,199)		CCSRCH221J50
	C 5204(B,255 ,196)		CKSRYB102K50
	C 5207(A,283 ,192)		CEAT101M10
	C 5208(B,253 ,196)	CAPACITOR(CERAMIC)	ACG7057
	C 5209(A,267 ,187)	ELECT. CAPACITOR	CEAT100M2A
	C 5211(B,244 ,142)	CAPACITOR(CERAMIC)	ACG7056
	C 5212(B,275 ,142)	CAPACITOR(CERAMIC)	ACG7056
	C 5215(B,257 ,204)		CCSRCH220J50
	C 5216(B,257 ,206)		CCSRCH220J50
	C 5217(A,261 ,206)		CEAT331M10
	C 5223(A,287 ,181)		CEAT100M63
	C 5224(A,255 ,185)		CEAT100M63
	C 5232(B,248 ,198)		CKSRYB224K16
	C 5241(A,237 ,192)		CEANP2R2M50
	C 5611(B,307 ,142)	CAPACITOR(CERAMIC)	ACG7056

R POWER AMP-R ASSY

MISCELLANEOUS

⚠	IC 5301(A,197 ,112)	DARLINGTON POWER IC	SAP17N(OY)
⚠	IC 5302(A,157 ,112)	DARLINGTON POWER IC	SAP17P(OY)
⚠	IC 5401(A,125 ,112)	DARLINGTON POWER IC	SAP17N(OY)
⚠	IC 5402(A,93 ,112)	DARLINGTON POWER IC	SAP17P(OY)
⚠	IC 5501(A,269 ,112)	DARLINGTON POWER IC	SAP17N(OY)
⚠	IC 5502(A,237 ,112)	DARLINGTON POWER IC	SAP17P(OY)
⚠	IC 5602(A,301 ,112)	DARLINGTON POWER IC	SAP17P(OY)
	Q 5301(B,196 ,38)	CHIP TRANSISTOR	2SD2704K
	Q 5302(B,187 ,52)	TRANSISTOR	IMT4
	Q 5303(B,173 ,49)	CHIP TRANSISTOR	2SA1514K
	Q 5304(A,176 ,63)	TRANSISTOR	2SA1145
	Q 5305(A,199 ,49)	TRANSISTOR	2SC2705
	Q 5341(B,152 ,48)	CHIP TR	2SA1255
	Q 5401(B,132 ,38)	CHIP TRANSISTOR	2SD2704K
	Q 5402(B,126 ,52)	TRANSISTOR	IMT4
	Q 5403(B,113 ,48)	CHIP TRANSISTOR	2SA1514K
	Q 5404(A,119 ,64)	TRANSISTOR	2SA1145
	Q 5405(A,139 ,49)	TRANSISTOR	2SC2705
	Q 5441(B,94 ,46)	CHIP TR	2SA1255
	Q 5501(B,285 ,38)	CHIP TRANSISTOR	2SD2704K
	Q 5502(B,276 ,52)	TRANSISTOR	IMT4
	Q 5503(B,262 ,49)	CHIP TRANSISTOR	2SA1514K
	Q 5504(A,260 ,63)	TRANSISTOR	2SA1145
	Q 5505(A,288 ,49)	TRANSISTOR	2SC2705
	Q 5541(B,239 ,49)	CHIP TR	2SA1255
	Q 5571(B,225 ,38)	TRANSISTOR	2SC4081
	Q 5572(B,222 ,38)	TRANSISTOR	2SC4081
	D 5301(B,171 ,57)	CHIP ZENER DIODE	UDZS3R6(B)
	D 5302(B,173 ,59)	DIODE	1SS355
	D 5303(B,181 ,64)	DIODE	1SS355
	D 5304(B,187 ,64)	DIODE	1SS355
	D 5305(B,183 ,64)	DIODE	UDZS4R7(B)
	D 5306(B,185 ,64)	DIODE	UDZS4R7(B)
	D 5341(B,153 ,67)	DIODE	1SS355
	D 5342(B,151 ,67)	DIODE	1SS355
	D 5343(B,151 ,44)	DIODE	1SS355
	D 5344(B,155 ,70)	DIODE	1SS355
	D 5401(B,114 ,59)	CHIP ZENER DIODE	UDZS3R6(B)
	D 5402(B,116 ,60)	DIODE	1SS355
	D 5403(B,124 ,64)	DIODE	1SS355
	D 5404(B,130 ,64)	DIODE	1SS355
	D 5405(B,126 ,64)	DIODE	UDZS4R7(B)
	D 5406(B,128 ,64)	DIODE	UDZS4R7(B)
	D 5441(B,93 ,58)	DIODE	1SS355
	D 5442(B,90 ,58)	DIODE	1SS355
	D 5443(B,94 ,40)	DIODE	1SS355
	D 5444(B,111 ,79)	DIODE	1SS355
	D 5501(B,255 ,57)	CHIP ZENER DIODE	UDZS3R6(B)
	D 5502(B,257 ,59)	DIODE	1SS355
	D 5503(B,265 ,64)	DIODE	1SS355
	D 5504(B,271 ,64)	DIODE	1SS355
	D 5505(B,267 ,64)	DIODE	UDZS4R7(B)
	D 5506(B,269 ,64)	DIODE	UDZS4R7(B)
	D 5541(B,240 ,71)	DIODE	1SS355
	D 5542(B,238 ,71)	DIODE	1SS355
	D 5543(B,242 ,46)	DIODE	1SS355
	D 5544(B,242 ,73)	DIODE	1SS355
⚠	TH5301(A,166 ,17)	POSISTOR	PTFM04BC222Q2N34B0
	CN5301(A,320 ,26)	13P SOCKET	XKP3077
	CN5302(A,86 ,40)	11P SOCKET	XKP3076
	CN5303(A,313 ,66)	7-P PLUG	KM250NA7L

RESISTORS

	R 5301(B,203 ,43)		RS1/16S102J
	R 5302(B,191 ,42)		RS1/16S221J
	R 5303(B,187 ,41)		RS1/16S333J
	R 5304(B,203 ,40)		RS1/16S103J
	R 5305(B,194 ,55)		RS1/16S152J
	R 5306(B,194 ,52)		RS1/16S821J
	R 5307(B,169 ,48)		RS1/16S2001F
	R 5308(B,180 ,52)		RS1/16S682J
	R 5309(A,177 ,48)	CARBON FILM RESISTOR	RD1/2VM473J
	R 5310(B,171 ,64)		RS1/16S151J
	R 5311(B,173 ,63)		RN1/16SE1201D
	R 5312(B,202 ,52)		RS1/16S221J
	R 5313(B,183 ,97)	CHIP RESISTOR	RS1/16S62R0F
	R 5321(B,190 ,93)		RS1/16S101J
	R 5322(B,176 ,93)		RS1/16S101J
⚠	R 5323(A,163 ,72)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5324(A,198 ,83)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5325(B,203 ,90)	CHIP RESISTOR	ACN7132
⚠	R 5326(B,166 ,91)	CHIP RESISTOR	ACN7132
⚠	R 5327(A,174 ,80)	RESISTOR (0.18, 5W)	ACN7121
	R 5329(B,179 ,45)		RN1/10SE3302D
	R 5330(B,183 ,46)		RN1/16SE1001D
	R 5331(B,183 ,43)		RN1/16SE1500D
	R 5332(B,203 ,49)		RS1/16S151J
	R 5341(B,153 ,77)		RS1/16S473J

Mark	No.	Description	Part No.
	R 5342(B,151 ,77)		RS1/16S223J
	R 5343(B,153 ,73)		RS1/16S471J
	R 5344(B,151 ,73)		RS1/16S471J
	R 5345(B,152 ,60)		RS1/16S472J
	R 5346(B,150 ,60)		RS1/16S472J
	R 5347(B,147 ,58)		RS1/16S122J
	R 5348(B,151 ,55)		RS1/16S154J
	R 5349(B,151 ,57)		RS1/16S103J
	R 5350(B,156 ,46)		RS1/16S103J
	R 5401(B,138 ,43)		RS1/16S102J
	R 5402(B,126 ,42)		RS1/16S221J
	R 5403(B,123 ,41)		RS1/16S333J
	R 5404(B,138 ,40)		RS1/16S103J
	R 5405(B,134 ,55)		RS1/16S152J
	R 5406(B,134 ,52)		RS1/16S821J
	R 5407(B,109 ,48)		RS1/16S2001F
	R 5408(B,120 ,52)		RS1/16S682J
	R 5409(A,117 ,48)	CARBON FILM RESISTOR	RD1/2VM473J
	R 5410(B,114 ,65)		RS1/16S151J
	R 5411(B,116 ,64)		RN1/16SE1201D
	R 5412(B,141 ,52)		RS1/16S221J
	R 5413(B,115 ,97)	CHIP RESISTOR	RS1/16S62R0F
	R 5421(B,128 ,93)		RS1/16S101J
	R 5422(B,108 ,93)		RS1/16S101J
⚠	R 5423(A,111 ,75)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5424(A,142 ,83)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5425(B,135 ,91)	CHIP RESISTOR	ACN7132
⚠	R 5426(B,96 ,91)	CHIP RESISTOR	ACN7132
⚠	R 5427(A,118 ,80)	RESISTOR (0.18, 5W)	ACN7121
	R 5429(B,114 ,44)		RN1/10SE3302D
	R 5430(B,118 ,45)		RN1/16SE1001D
	R 5431(B,118 ,43)		RN1/16SE1500D
	R 5432(B,143 ,49)		RS1/16S151J
	R 5441(B,99 ,85)		RS1/16S473J
	R 5442(B,97 ,85)		RS1/16S223J
	R 5443(B,101 ,85)		RS1/16S471J
	R 5444(B,95 ,85)		RS1/16S471J
	R 5445(B,91 ,52)		RS1/16S472J
	R 5446(B,91 ,50)		RS1/16S472J
	R 5447(B,90 ,46)		RS1/16S122J
	R 5448(B,94 ,51)		RS1/16S154J
	R 5449(B,96 ,51)		RS1/16S103J
	R 5450(B,98 ,46)		RS1/16S103J
	R 5501(B,292 ,43)		RS1/16S102J
	R 5502(B,280 ,42)		RS1/16S221J
	R 5503(B,276 ,41)		RS1/16S333J
	R 5504(B,292 ,40)		RS1/16S103J
	R 5505(B,283 ,55)		RS1/16S152J
	R 5506(B,283 ,52)		RS1/16S821J
	R 5507(B,258 ,48)		RS1/16S2001F
	R 5508(B,269 ,52)		RS1/16S682J
	R 5509(A,266 ,48)	CARBON FILM RESISTOR	RD1/2VM473J
	R 5510(B,255 ,63)		RS1/16S151J
	R 5511(B,257 ,63)		RN1/16SE1201D
	R 5512(B,290 ,52)		RS1/16S221J
	R 5513(B,259 ,97)	CHIP RESISTOR	RS1/16S62R0F
	R 5521(B,270 ,94)		RS1/16S101J
	R 5522(B,251 ,93)		RS1/16S101J
⚠	R 5523(A,247 ,69)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5524(A,283 ,82)	CARBON FILM RESISTOR	RD1/4MUF4R7J
⚠	R 5525(B,277 ,91)	CHIP RESISTOR	ACN7132
⚠	R 5526(B,238 ,91)	CHIP RESISTOR	ACN7132
⚠	R 5527(A,258 ,80)	RESISTOR (0.18, 5W)	ACN7121
	R 5529(B,268 ,45)		RN1/10SE3302D
	R 5530(B,272 ,46)		RN1/16SE1001D
	R 5531(B,272 ,43)		RN1/16SE1500D
	R 5532(B,292 ,49)		RS1/16S151J
	R 5541(B,241 ,77)		RS1/16S473J
	R 5542(B,235 ,77)		RS1/16S223J
	R 5543(B,239 ,77)		RS1/16S471J
	R 5544(B,237 ,77)		RS1/16S471J
	R 5545(B,240 ,64)		RS1/16S472J
	R 5546(B,238 ,64)		RS1/16S472J
	R 5547(B,238 ,57)		RS1/16S122J
	R 5548(B,235 ,68)		RS1/16S154J
	R 5549(B,235 ,64)		RS1/16S103J
	R 5550(B,245 ,45)		RS1/16S103J
	R 5571(B,228 ,38)		RS1/16S472J
⚠	R 5592(B,301 ,91)	CHIP RESISTOR	ACN7132
	R 5622(B,308 ,96)		RS1/16S101J

CAPACITORS

C 5301(A,194 ,43)		CEAT4R7M50
C 5302(B,187 ,43)		CCSRCH221J50
C 5304(B,198 ,55)		CKSRYB102K50
C 5307(A,164 ,52)		CEAT101M10
C 5308(B,198 ,52)	CAPACITOR(CERAMIC)	ACG7057
C 5309(A,181 ,58)	ELECT. CAPACITOR	CEAT100M2A
C 5311(B,197 ,104)	CAPACITOR(CERAMIC)	ACG7056
C 5312(B,170 ,104)	CAPACITOR(CERAMIC)	ACG7056
C 5315(B,179 ,43)		CCSRCH220J50
C 5316(B,174 ,43)		CCSRCH220J50
C 5317(A,179 ,39)		CEAT331M10
C 5323(A,160 ,63)		CEAT100M63
C 5324(A,191 ,61)		CEAT100M63
C 5332(B,204 ,52)		CKSRYB224K16
C 5341(A,147 ,62)		CEANP2R2M50
C 5351(A,228 ,68)	ELECT. CAPACITOR	CEAT100M2A
C 5352(A,224 ,62)	ELECT. CAPACITOR	CEAT100M2A
C 5401(A,129 ,43)		CEAT4R7M50
C 5402(B,123 ,43)		CCSRCH221J50
C 5404(B,138 ,55)		CKSRYB102K50
C 5407(A,105 ,52)		CEAT101M10
C 5408(B,138 ,52)	CAPACITOR(CERAMIC)	ACG7057
C 5409(A,125 ,59)	ELECT. CAPACITOR	CEAT100M2A
C 5411(B,130 ,104)	CAPACITOR(CERAMIC)	ACG7056
C 5412(B,101 ,104)	CAPACITOR(CERAMIC)	ACG7056
C 5415(B,114 ,42)		CCSRCH220J50
C 5416(B,109 ,43)		CCSRCH220J50
C 5417(A,114 ,39)		CEAT331M10
C 5423(A,107 ,61)		CEAT100M63
C 5424(A,135 ,61)		CEAT100M63
C 5432(B,143 ,52)		CKSRYB224K16
C 5441(A,87 ,45)		CEANP2R2M50
C 5501(A,283 ,43)		CEAT4R7M50
C 5502(B,276 ,43)		CCSRCH221J50
C 5504(B,287 ,55)		CKSRYB102K50
C 5507(A,253 ,52)		CEAT101M10
C 5508(B,287 ,52)	CAPACITOR(CERAMIC)	ACG7057
C 5509(A,265 ,58)	ELECT. CAPACITOR	CEAT100M2A

Mark	No.	Description	Part No.
	C 5511(B,272 ,104)	CAPACITOR(CERAMIC)	ACG7056
	C 5512(B,245 ,104)	CAPACITOR(CERAMIC)	ACG7056
	C 5515(B,268 ,43)		CCSRCH220J50
	C 5516(B,263 ,43)		CCSRCH220J50
	C 5517(A,268 ,39)		CEAT331M10
	C 5523(A,244 ,59)		CEAT100M63
	C 5524(A,280 ,61)		CEAT100M63
	C 5532(B,293 ,52)		CKSRYB224K16
	C 5541(A,238 ,54)		CEANP2R2M50
	C 5571(A,231 ,35)		CEAT331M10
	C 5612(B,307 ,104)	CAPACITOR(CERAMIC)	ACG7056

S LOCAL SUPPLY ASSY

MISCELLANEOUS

⚠	IC 6101(A,149 ,69)	IC	NJM78M05FA
⚠	IC 6102(A,149 ,19)	REGULATOR IC	NJM78M56FA
⚠	IC 6103(A,11 ,64)	REGULATOR IC	NJM78M12FA
⚠	IC 6104(A,11 ,39)	REGULATOR IC	NJM78M12FA
⚠	IC 6105(A,149 ,44)	IC	NJM79M05FA
⚠	IC 6106(A,11 ,14)	REGULATOR IC	NJM79M12FA
⚠	D 6101(A,111 ,50)	DIODE	D3SBA20(B)
⚠	D 6102(B,65 ,61)	DIODE	1SR154-400
⚠	D 6103(B,56 ,61)	DIODE	1SR154-400
⚠	D 6104(B,61 ,61)	DIODE	1SR154-400
	D 6105(B,86 ,72)	DIODE	UDZS6R2(B)
	D 6106(B,88 ,77)	DIODE	UDZS6R2(B)
	D 6107(B,85 ,77)	DIODE	UDZS6R2(B)
	D 6108(B,94 ,80)	DIODE	UDZS6R2(B)
	D 6109(B,88 ,90)	DIODE	UDZS6R2(B)
	D 6111(B,140 ,68)	CHIP DIODE	RB501V-40
	D 6115(B,26 ,71)	CHIP DIODE	RB501V-40
	D 6121(B,141 ,10)	CHIP DIODE	RB501V-40
⚠	D 6122(B,59 ,39)	DIODE	1SR154-400
⚠	D 6123(B,63 ,39)	DIODE	1SR154-400
	D 6124(B,142 ,39)	CHIP DIODE	RB501V-40
	D 6125(B,149 ,50)	DIODE	1SS355
	D 6126(B,18 ,43)	CHIP DIODE	RB501V-40
⚠	D 6127(B,63 ,26)	DIODE	1SR154-400
⚠	D 6128(B,59 ,26)	DIODE	1SR154-400
	D 6129(B,18 ,16)	CHIP DIODE	RB501V-40
	J 6104(A,70 ,95)	CONNECTOR ASSY	PF05PG-Q20
	CN6101(A,112 ,73)	CONNECTOR	B12B-PH
	CN6103(A,91 ,93)	6P JUMPER CONNECTOR	52147-0610
	CN6105(A,60 ,8)	CONNECTOR	B8B-PH
	CN6106(A,87 ,8)	CONNECTOR	B11B-PH
	6102(A,121 ,83)	4P CABLE HOLDER	51048-0400

RESISTORS

	R 6101(B,75 ,71)		RS1/16S473J
⚠	R 6103(A,76 ,77)	CARBON FILM RESISTOR	RD1/4MUF391J
⚠	R 6107(A,97 ,60)	CARBON FILM RESISTOR	RD1/4MUF4R7J

CAPACITORS

	C 6101(A,120 ,76)	FILM CAPACITOR	CQMBA104J50
	C 6103(B,95 ,89)		CKSRYB103K50
	C 6105(B,146 ,72)		CKSRYB103K50
	C 6107(A,110 ,61)	FILM CAPACITOR	CQMBA104J50
	C 6110(B,145 ,22)		CKSRYB103K50
	C 6111(B,142 ,46)		CKSRYB103K50
	C 6112(B,14 ,63)		CKSRYB103K50
	C 6115(B,15 ,37)		CKSRYB103K50
	C 6116(B,14 ,11)		CKSRYB103K50
	C 6117(A,68 ,52)	ELECT. CAPACITOR	CEANP101M35
	C 6122(A,60 ,70)	ELECT. CAPACITOR	CEAT101M35
	C 6123(A,71 ,70)		CEAT221M35
	C 6124(A,91 ,72)		CEAT470M50
	C 6125(A,84 ,89)		CEAT101M16
	C 6127(A,112 ,37)	ELECT. CAPACITOR	CEAT682M16
	C 6129(A,144 ,58)		CEAT221M16
	C 6130(A,141 ,19)		CEAT101M16
	C 6131(A,94 ,37)	ELECT. CAPACITOR	CEAT222M16
	C 6132(A,48 ,51)	ELECT. CAPACITOR	CEAT222M25
	C 6133(A,144 ,31)		CEAT101M16
	C 6134(A,16 ,68)		CEAT100M50
	C 6135(A,18 ,52)		CEAT221M25
	C 6136(A,48 ,34)	ELECT. CAPACITOR	CEAT222M25
	C 6137(A,18 ,27)		CEAT221M25

T DC/DC ASSY

MISCELLANEOUS

⚠	IC 4271(A,112 ,80)	REGULATOR IC	PQ1CG3032FZ
⚠	D 4271(A,68 ,85)	DIODE	D3SBA20(B)
⚠	D 4272(B,124 ,77)	DIODE	RB051L-40
	L 4271(A,133 ,58)	INDUCTOR	ATH7020
	CN4271(A,60 ,54)	4PJUMPER CONNECTOR	52151-0410
	CN4272(A,107 ,50)	3PIN CONNECTOR	S3B-EH
	4273(A,62 ,68)	PCB BINDER	VEF1040

RESISTORS

⚠	R 4271(A,67 ,58)	CARBON FILM RESISTOR	RD1/4MUF4R7J
	R 4272(B,110 ,76)		RN1/16SE1001D
	R 4273(B,106 ,76)		RN1/16SE3001D
	R 4274(B,104 ,76)		RS1/16S101J

CAPACITORS

	C 4271(A,67 ,53)	FILM CAPACITOR	CQMBA104J50
	C 4272(A,92 ,66)	ELECT. CAPACITOR	CEAT103M16
	C 4273(A,118 ,53)	ELECT. CAPACITOR	CEHAZL102M6R3
	C 4274(A,109 ,67)	ELECT. CAPACITOR	CEHAZL102M16

U TRANS2-1 ASSY

MISCELLANEOUS

⚠	IC 4201(A,111 ,106)	PROTECTOR(7A)	AEK7021
⚠	IC 4202(A,95 ,152)	PROTECTOR(7A)	AEK7021
	Q 4201(B,90 ,97)	CHIP TRANSISTOR	RN1901
	Q 4202(B,81 ,97)	TRANSISTOR	UMD2N
	Q 4203(B,73 ,97)	TRANSISTOR	UMD2N
⚠	D 4201(B,100 ,140)	BRIDGE DIODE	S1WB(A)60SD
	D 4203(B,98 ,105)	DIODE	UDZS10(B)
	D 4204(B,71 ,105)	DIODE	UDZS9R1(B)
	D 4205(B,100 ,105)	DIODE	UDZS9R1(B)
	D 4206(B,71 ,102)	DIODE	UDZS8R2(B)
	D 4207(B,100 ,99)	DIODE	UDZS9R1(B)
	D 4208(B,76 ,104)	DIODE	UDZS8R2(B)
	D 4209(B,96 ,99)	DIODE	UDZS6R8(B)
	D 4210(B,76 ,101)	DIODE	UDZS6R8(B)
	D 4211(B,94 ,102)	DIODE	UDZS13(B)
	D 4212(B,81 ,101)	DIODE	UDZS15(B)
	D 4213(B,96 ,104)	DIODE	UDZS12(B)
	D 4214(B,81 ,104)	DIODE	UDZS12(B)

Mark	No.	Description	Part No.
	D 4215(B,77 ,95)	DIODE	UDZS13(B)
	D 4216(B,68 ,94)	DIODE	UDZS13(B)
	J 4201	JUMPER WIRE	D20PDY0610E
	4201(A,73 ,128)	6P CABLE HOLDER	51048-0600

RESISTORS

⚠	R 4201(A,106 ,118)	CARBON FILM RESISTOR	RD1/4MUF100J
	R 4203(A,95 ,93)	CARBON FILM RESISTOR	RD1/4MUF470J
⚠	R 4205(A,85 ,129)	METAL OXIDE RESISTOR	RS1LMF472J
⚠	R 4206(A,71 ,109)	METAL OXIDE RESISTOR	RS1LMF472J
⚠	R 4207(A,88 ,126)	CARBON FILM RESISTOR	RD1/2LMF332J
⚠	R 4208(A,75 ,106)	CARBON FILM RESISTOR	RD1/2LMF332J

CAPACITORS

	C 4201(A,106 ,112)	FILM CAPACITOR	CFTLA104J2A
	C 4202(A,110 ,156)	FILM CAPACITOR	CFTLA104J2A
	C 4203(A,106 ,100)	PPS CAPACITOR	CQHA102J2A
	C 4204(A,106 ,94)	PPS CAPACITOR	CQHA102J2A
	C 4205(A,91 ,136)	ELECT. CAPACITOR	CEAT471M2A
	C 4206(A,81 ,149)	ELECT. CAPACITOR	CEAT471M2A
	C 4207(A,94 ,119)	ELECT. CAPACITOR	CEAT101M63
	C 4208(A,94 ,108)	ELECT. CAPACITOR	CEAT101M63
	C 4209(A,65 ,132)	ELECT. CAPACITOR	CEAT221M2A
	C 4210(A,72 ,120)	ELECT. CAPACITOR	CEAT221M2A

V VH TR ASSY

MISCELLANEOUS

⚠	IC 4261	IC PROTECTOR	ICP-N15
⚠	IC 4262	IC PROTECTOR	ICP-N15
⚠	Q 4261(A,36 ,31)	TRANSISTOR	2SD1763A
⚠	Q 4262(A,21 ,31)	TRANSISTOR	2SB1186A
	Q 4263(B,30 ,20)	CHIP TRANSISTOR	2SC3906K
	Q 4264(B,15 ,20)	CHIP TRANSISTOR	2SA1514K
⚠	D 4261(B,42 ,16)	DIODE	1SR154-400
⚠	D 4262(B,26 ,19)	DIODE	1SR154-400
	CN4261(A,23 ,9)	6P JUMPER CONNECTOR	52147-0610

RESISTORS

	R 4261(B,29 ,24)		RS1/16S100J
	R 4262(B,14 ,24)		RS1/16S100J
	R 4263(B,30 ,15)		RS1/16S471J
	R 4264(B,14 ,13)		RS1/16S471J

W DIODE ASSY

MISCELLANEOUS

⚠	D 4251(A,189 ,128)	DIODE	D5SBA20(B)
⚠	D 4252(A,154 ,128)	DIODE	D5SBA20(B)

X SP/PS ASSY (VSX-74TXVi)

MISCELLANEOUS

	Q 4001(B,150 ,72)	CHIP TRANSISTOR	DTC114TUA
	Q 4002(B,229 ,97)	CHIP TRANSISTOR	DTC114TUA
	Q 4003(B,247 ,90)	CHIP TRANSISTOR	DTC114TUA
	Q 4004(B,290 ,84)	CHIP TRANSISTOR	DTC114TUA
	Q 4005(B,212 ,99)	CHIP TRANSISTOR	DTC114TUA
	D 4001(B,168 ,80)	DIODE	1SS355
	D 4002(B,165 ,80)	DIODE	1SS355
	D 4003(B,216 ,88)	DIODE	1SS355
	D 4004(B,213 ,88)	DIODE	1SS355
	D 4005(B,247 ,82)	DIODE	1SS355
	D 4006(B,244 ,82)	DIODE	1SS355
	D 4007(B,291 ,79)	DIODE	1SS355
	D 4008(B,289 ,79)	DIODE	1SS355
	D 4009(B,217 ,99)	DIODE	1SS355
	D 4010(B,215 ,99)	DIODE	1SS355
	L 4011(A,188 ,78)	COIL	ATH1053
	L 4021(A,149 ,68)	COIL	ATH1053
	L 4031(A,199 ,83)	COIL	ATH1053
	L 4041(A,258 ,82)	COIL	ATH1053
	L 4051(A,236 ,90)	COIL	ATH1053
	L 4061(A,299 ,81)	COIL	ATH1053
	L 4071(A,280 ,84)	COIL	ATH1053
	J 4009(A,147 ,76)	CONNECTOR ASS'Y	PF13PG-R12
	RY4001(A,163 ,81)	RELAY	XSR3002
	RY4002(A,211 ,89)	RELAY	XSR3002
	RY4003(A,242 ,83)	RELAY	XSR3002
	RY4004(A,286 ,82)	RELAY	XSR3002
	RY4005(A,219 ,103)	RELAY	XSR3002
	CN4001(A,185 ,33)	SPEAKER TERMINAL 6-P	AKE7075
	CN4002(A,248 ,33)	SPEAKER TERMINAL 8-P	AKE7074
	CN4007(A,313 ,90)	5P PLUG	KM200TA5
	CN4008(A,313 ,152)	9P PLUG	KM200TA9
	Y 13	AWG14 BOARD IN	ADX7461

RESISTORS

⚠	R 4011(A,187 ,68)	METAL OXIDE RESISTOR	RS1/2LMF4R7J
⚠	R 4012(A,175 ,64)	METAL OXIDE RESISTOR	RS1LMF100J
⚠	R 4013(A,193 ,94)	METAL OXIDE RESISTOR	RS2LMF331J
⚠	R 4021(A,158 ,70)	METAL OXIDE RESISTOR	RS1/2LMF4R7J
⚠	R 4022(A,145 ,58)	METAL OXIDE RESISTOR	RS1LMF100J
⚠	R 4023(A,188 ,97)	METAL OXIDE RESISTOR	RS2LMF331J
⚠	R 4031(A,196 ,87)	METAL OXIDE RESISTOR	RS1/2LMF4R7J
⚠	R 4032(A,194 ,67)	METAL OXIDE RESISTOR	RS1LMF100J
⚠	R 4041(A,254 ,82)	METAL OXIDE RESISTOR	RS1/2LMF4R7J
⚠	R 4042(A,267 ,67)	METAL OXIDE RESISTOR	RS1LMF100J
⚠	R 4051(A,240 ,93)	METAL OXIDE RESISTOR	RS1/2LMF4R7J
⚠	R 4052(A,228 ,67)	METAL OXIDE RESISTOR	RS1LMF100J
⚠	R 4061(A,309 ,79)	METAL OXIDE RESISTOR	RS1/2LMF4R7J
⚠	R 4062(A,313 ,73)	METAL OXIDE RESISTOR	RS1LMF100J
⚠	R 4071(A,280 ,88)	METAL OXIDE RESISTOR	RS1/2LMF4R7J
⚠	R 4072(A,268 ,94)	METAL OXIDE RESISTOR	RS1LMF100J
	R 4101(A,222 ,115)	CARBON FILM RESISTOR	RD1/4MUF473J
	R 4102(A,252 ,115)	CARBON FILM RESISTOR	RD1/4MUF473J

CAPACITORS

	C 4001(A,162 ,88)		CEAT101M50
	C 4011(A,182 ,60)		CFTLA104J50
	C 4012(A,178 ,57)		CFTLA104J50
	C 4021(A,145 ,48)		CFTLA104J50
	C 4022(A,145 ,39)		CFTLA104J50
	C 4031(A,197 ,63)		CFTLA104J50
	C 4032(A,192 ,57)		CFTLA104J50
	C 4041(A,257 ,63)		CFTLA104J50
	C 4042(A,257 ,54)		CFTLA104J50
	C 4051(A,224 ,61)		CFTLA104J50
	C 4052(A,228 ,55)		CFTLA104J50
	C 4061(A,304 ,61)		CFTLA104J50
	C 4062(A,304 ,54)		CFTLA104J50
	C 4071(A,270 ,65)		CFTLA104J50
	C 4072(A,272 ,59)		CFTLA104J50

Mark	No.	Description	Part No.
	C 4101(A,212 ,137)	ELECTR.CAPACITOR	ACH7218
	C 4102(A,258 ,137)	ELECTR.CAPACITOR	ACH7218

Y TRANS2-2 ASSY

MISCELLANEOUS

H 3151(A,173 ,78)	FUSE CLIP	AKR7001
H 3152(A,151 ,78)	FUSE CLIP	AKR7001
H 3153(A,174 ,67)	FUSE CLIP	AKR7001
H 3154(A,152 ,67)	FUSE CLIP	AKR7001
H 3155(A,173 ,56)	FUSE CLIP	AKR7001
H 3156(A,151 ,56)	FUSE CLIP	AKR7001
H 3157(A,173 ,43)	FUSE CLIP	AKR7001
H 3158(A,151 ,43)	FUSE CLIP	AKR7001
H 3159(A,173 ,32)	FUSE CLIP	AKR7001
H 3160(A,151 ,32)	FUSE CLIP	AKR7001
J 3001(A,138 ,39)	CONNECTOR ASS'Y	PF12PG-R40

Z TRANS1 ASSY

TRANS1 ASSY has no service parts.

AA PRIMARY ASSY

MISCELLANEOUS

⚠IC 3061(A,299 ,119)	REGULATOR IC	NJM78M56FA
Q 3061(B,281 ,82)	DIGITAL TR(SC-70)	RT1N431M
⚠D 3061(B,296 ,103)	BRIDGE DIODE	S1WB(A)60SD
D 3062(B,299 ,89)	DIODE	1SS355
D 3063(B,308 ,89)	DIODE	UDZS5R1(B)
D 3064(B,275 ,89)	DIODE	1SS355
D 3065(B,275 ,82)	DIODE	1SS355
⚠L 3063(A,244 ,46)	LINE FILTER	XTF3004
H 3061(A,223 ,68)	FUSE CLIP	AKR7001
H 3062(A,243 ,68)	FUSE CLIP	AKR7001
KN3061(A,313 ,32)	WRAPPING TERMINAL	VNF1084
⚠RY3061(A,271 ,80)	POWER RELAY	ASR7022
⚠T 3061(A,273 ,106)	STANDBY TRANSFORMER	ATT7043
⚠CN3061(A,228 ,44)	AC CODE SOCKET	RKP1751
CN3062(A,308 ,137)	9P SOCKET	KP200TA9L
CN3063(A,246 ,137)	5P SOCKET	KP200TA5L
⚠ 3064(A,189 ,77)	AC SOCKET 1-P	AKP1033

RESISTORS

⚠R 3061(A,302 ,29)	RESISTOR(2.2M, 1/2W)	RCN1080
R 3062(B,303 ,89)		RS1/16S332J
R 3063(A,279 ,95)	CARBON FILM RESISTOR	RD1/4MUF220J
R 3064(B,305 ,89)		RS1/16S103J

CAPACITORS

⚠C 3061(A,266 ,47)	FILM CAPACITOR	ACE7013
⚠C 3062(A,251 ,74)		ACG7039
C 3063(A,286 ,132)	FILM CAPACITOR	CQMBA103J50
C 3064(B,291 ,115)		CKSRYB102K50
C 3065(B,289 ,115)		CKSRYB102K50
C 3066(B,294 ,110)		CKSRYB102K50
C 3067(B,308 ,96)		CKSRYB102K50
C 3068(A,305 ,105)	ELECT. CAPACITOR	CEAT332M25
C 3069(A,317 ,134)		CEAT221M25
C 3071(B,311 ,99)		CKSRYB103K50

AB VOLUME ASSY

MISCELLANEOUS

S 3571(A,295 ,167)	ROTARY ENCODER	ASX7005
S 3572(A,273 ,199)	SWITCH	VSG1024
S 3573(A,293 ,199)	SWITCH	VSG1024
S 3574(A,312 ,199)	SWITCH	VSG1024
3571(A,266 ,185)	CABLE HOLDER(6P)	51063-0605

RESISTORS

R 3574(B,285 ,200)		RS1/16S681J
R 3575(B,302 ,200)		RS1/16S821J

CAPACITORS

C 3572(B,300 ,172)		CKSRYB103K50
C 3573(B,295 ,172)		CKSRYB103K50

AC DISPLAY ASSY (VSX-74TXVi)

MISCELLANEOUS

IC 3201(B,131 ,214)	DISPLAY U-COM	PE5503A
IC 3202(A,17 ,221)	REMOTE RECEIVER UNIT	RPM7140-H9
IC 3203(B,171 ,168)	LOGIC IC	CD4053BNS
Q 3304(B,110 ,190)	DIGITAL TR(SC-70)	RT1N431M
Q 3305(B,219 ,208)	DIGITAL TR(SC-70)	RT1N431M
Q 3307(B,31 ,203)	DIGITAL TR(SC-70)	RT1N431M
Q 3308(B,16 ,201)	DIGITAL TR(SC-70)	RT1N431M
Q 3310(B,204 ,208)	DIGITAL TR(SC-70)	RT1N431M
Q 3351(B,205 ,189)	DIGITAL TR(SC-70)	RT1N431M
Q 3352(B,189 ,159)	DIGITAL TR(SC-70)	RT1N431M
Q 3353(B,200 ,160)	TRANSISTOR	2SA1576A
Q 3354(B,150 ,160)	CHIP TR (PNP X 2)	UMB1N
Q 3355(B,176 ,159)	TRANSISTOR	UMH1N
D 3314(A,121 ,195)	LED(BLUE)	SLR-343BBT(HJKL)
D 3315(A,224 ,208)	LED(BLUE)	SLR-343BBT(HJKL)
D 3317(A,31 ,208)	LED(ORANGE)	SLI-343DCW(STU)
D 3318(A,16 ,206)	LED(RED)	SLI-343URW(RST)
D 3320(A,208 ,206)	LED(RED)	SLI-343URW(RST)
D 3352(B,180 ,172)	DIODE	DAN217
D 3354(B,190 ,164)	DIODE	DAN202U
D 3355(B,232 ,212)	DIODE	DAN202U
D 3356(B,181 ,166)	DIODE	1SS355
D 3358(B,192 ,159)	DIODE	1SS355
D 3359(B,202 ,165)	DIODE	1SS355
L 3301(B,232 ,227)	CHIP BEADS	VTL1083
L 3351(A,234 ,218)	RADIAL INDUCTOR	LFEA2R2J
V 3201(A,182 ,237)	FL TUBE	AAV7105
S 3201(A,72 ,150)	SWITCH	VSG1024
S 3202(A,82 ,140)	SWITCH	VSG1024
S 3203(A,72 ,140)	SWITCH	VSG1024
S 3204(A,62 ,140)	SWITCH	VSG1024
S 3211(A,103 ,149)	SWITCH	VSG1024
S 3212(A,103 ,130)	SWITCH	VSG1024
S 3213(A,72 ,130)	SWITCH	VSG1024
S 3214(A,41 ,130)	SWITCH	VSG1024
S 3215(A,41 ,149)	SWITCH	VSG1024
S 3216(A,26 ,149)	SWITCH	VSG1024
S 3221(A,119 ,149)	SWITCH	VSG1024
S 3222(A,134 ,149)	SWITCH	VSG1024
S 3223(A,150 ,149)	SWITCH	VSG1024
S 3224(A,165 ,149)	SWITCH	VSG1024

Mark	No.	Description	Part No.
S	3225(A,181 ,149)	SWITCH	VSG1024
S	3226(A,196 ,149)	SWITCH	VSG1024
S	3227(A,212 ,149)	SWITCH	VSG1024
X	3201(A,148 ,197)	CERAMIC RESONATOR (6.60MHz)	VSS1142
	CN3201(A,212 ,161)	23P CONNECTOR	52044-2345
	CN3204(A,238 ,209)	CABLE HOLDER(6P)	51063-0605
	CN3203(A,7 ,165)	CABLE HOLDER(8P)	51063-0805
	CN3202(A,239 ,228)	6P CABLE HOLDER	51048-0600
	CN3201(A,113 ,110)	FL HOLDER(FE)	VNF1096
	CN3201(A,121 ,201)	FL HOLDER(FE)	VNF1096

RESISTORS

R	3201(B,77 ,159)	RS1/16S472J
R	3202(B,82 ,144)	RS1/16S681J
R	3203(B,78 ,144)	RS1/16S821J
R	3204(B,70 ,144)	RS1/16S122J
R	3205(B,57 ,141)	RS1/16S162J
R	3211(B,108 ,158)	RS1/16S472J
R	3212(B,103 ,140)	RS1/16S681J
R	3213(B,90 ,130)	RS1/16S821J
R	3214(B,60 ,130)	RS1/16S122J
R	3215(B,41 ,139)	RS1/16S162J
R	3216(B,36 ,149)	RS1/16S272J
R	3217(B,26 ,154)	RS1/16S512J
R	3221(B,119 ,158)	RS1/16S472J
R	3222(B,129 ,149)	RS1/16S681J
R	3223(B,137 ,150)	RS1/16S821J
R	3224(B,146 ,150)	RS1/16S122J
R	3225(B,176 ,149)	RS1/16S162J
R	3226(B,192 ,149)	RS1/16S272J
R	3227(B,207 ,153)	RS1/16S512J
R	3231(B,174 ,240)	RS1/16S473J
R	3232(B,172 ,240)	RS1/16S473J
R	3233(B,170 ,240)	RS1/16S473J
R	3234(B,168 ,240)	RS1/16S473J
R	3235(B,166 ,240)	RS1/16S473J
R	3236(B,164 ,240)	RS1/16S473J
R	3237(B,162 ,240)	RS1/16S473J
R	3238(B,160 ,240)	RS1/16S473J
R	3239(B,158 ,240)	RS1/16S473J
R	3240(B,156 ,240)	RS1/16S473J
R	3241(B,154 ,240)	RS1/16S473J
R	3242(B,152 ,240)	RS1/16S473J
R	3243(B,150 ,240)	RS1/16S473J
R	3244(B,148 ,240)	RS1/16S473J
R	3245(B,146 ,240)	RS1/16S473J
R	3246(B,144 ,240)	RS1/16S473J
R	3247(B,68 ,240)	RS1/16S104J
R	3248(B,70 ,240)	RS1/16S104J
R	3249(B,72 ,240)	RS1/16S104J
R	3250(B,74 ,240)	RS1/16S104J
R	3251(B,76 ,240)	RS1/16S104J
R	3252(B,78 ,240)	RS1/16S104J
R	3253(B,80 ,240)	RS1/16S104J
R	3254(B,82 ,240)	RS1/16S104J
R	3255(B,84 ,240)	RS1/16S104J
R	3256(B,86 ,240)	RS1/16S104J
R	3257(B,88 ,240)	RS1/16S104J
R	3258(B,90 ,240)	RS1/16S104J
R	3259(B,92 ,240)	RS1/16S104J

Mark	No.	Description	Part No.
R	3260(B,94 ,240)	RS1/16S104J
R	3261(B,96 ,240)	RS1/16S104J
R	3262(B,98 ,240)	RS1/16S104J
R	3263(B,100 ,240)	RS1/16S104J
R	3264(B,102 ,240)	RS1/16S104J
R	3265(B,104 ,240)	RS1/16S104J
R	3266(B,106 ,240)	RS1/16S104J
R	3267(B,108 ,240)	RS1/16S104J
R	3268(B,110 ,240)	RS1/16S104J
R	3269(B,112 ,240)	RS1/16S104J
R	3270(B,114 ,240)	RS1/16S104J
R	3271(B,116 ,240)	RS1/16S104J
R	3272(B,118 ,240)	RS1/16S104J
R	3273(B,120 ,240)	RS1/16S104J
R	3274(B,122 ,240)	RS1/16S104J
R	3275(B,124 ,240)	RS1/16S104J
R	3276(B,126 ,240)	RS1/16S104J
R	3277(B,128 ,240)	RS1/16S104J
R	3278(B,130 ,240)	RS1/16S104J
R	3279(B,132 ,240)	RS1/16S104J
R	3280(B,134 ,240)	RS1/16S104J
R	3281(B,136 ,240)	RS1/16S104J
R	3282(B,138 ,240)	RS1/16S104J
R	3283(B,140 ,240)	RS1/16S104J
R	3304(B,117 ,192)	RS1/16S221J
R	3305(B,229 ,202)	RS1/16S391J
R	3307(B,34 ,203)	RS1/16S331J
R	3308(B,19 ,201)	RS1/16S331J
R	3310(B,216 ,200)	RS1/16S331J
R	3314(B,110 ,181)	RS1/16S0R0J
R	3321(B,167 ,206)	RS1/16S473J
R	3322(B,169 ,206)	RS1/16S473J
R	3323(B,168 ,211)	RS1/16S473J
R	3324(B,166 ,211)	RS1/16S473J
R	3325(B,149 ,206)	RS1/16S105J
R	3327(B,146 ,204)	RS1/16S104J
R	3328(B,131 ,193)	RS1/16S472J
R	3329(B,144 ,204)	RS1/16S0R0J
R	3330(B,153 ,190)	RS1/16S221J
R	3331(B,151 ,190)	RS1/16S221J
R	3332(B,150 ,187)	RS1/16S221J
R	3333(B,148 ,187)	RS1/16S221J
R	3334(B,128 ,193)	RS1/16S104J
R	3336(B,109 ,197)	RS1/16S473J
R	3337(B,90 ,206)	RS1/16S101J
R	3338(B,102 ,202)	RS1/16S104J
R	3339(B,96 ,211)	RS1/16S104J
R	3341(B,104 ,206)	RS1/16S474J
R	3343(B,104 ,202)	RS1/16S0R0J
R	3344(B,122 ,180)	RS1/16S221J
R	3345(B,94 ,211)	RS1/16S474J
R	3346(B,117 ,181)	RS1/16S221J
R	3347(B,93 ,198)	RS1/16S221J
R	3350(B,215 ,191)	RS1/16S0R0J
R	3351(B,193 ,211)	RS1/16S473J
R	3352(B,179 ,167)	RS1/16S223J
R	3353(B,185 ,167)	RS1/16S103J
R	3354(B,159 ,163)	RS1/16S392J
R	3355(B,205 ,184)	RS1/16S0R0J
R	3356(B,203 ,184)	RS1/16S0R0J

Mark	No.	Description	Part No.
	R 3357(B,201 ,184)		RS1/16S0R0J
	R 3358(B,199 ,184)		RS1/16S0R0J
A	R 3359(B,203 ,179)		RS1/16S221J
	R 3360(B,161 ,163)		RS1/16S103J
	R 3361(B,197 ,160)		RS1/16S0R0J
	R 3362(B,161 ,167)		RS1/16S0R0J
	R 3363(B,159 ,166)		RS1/16S0R0J
	R 3366(B,194 ,161)		RS1/16S472J
	R 3367(B,202 ,156)		RS1/16S104J
	R 3368(B,202 ,160)		RS1/16S104J
	R 3369(B,194 ,165)		RS1/16S102J
	R 3371(B,200 ,164)		RS1/16S103J
	R 3372(B,205 ,160)		RS1/16S101J
B	R 3373(B,179 ,163)		RS1/16S0R0J
	R 3374(B,179 ,159)		RS1/16S0R0J
	R 3376(B,170 ,157)		RS1/16S0R0J
	R 3377(B,101 ,213)		RS1/16S104J
	CAPACITORS		
	C 3201(B,77 ,155)		CKSRYB102K50
	C 3211(B,108 ,154)		CKSRYB102K50
	C 3221(B,119 ,154)		CKSRYB102K50
	C 3231(B,186 ,236)		CCSRCH471J50
	C 3232(A,194 ,238)	ELECT. CAPACITOR	CEJQ101M35
	C 3235(B,178 ,231)		CCSRCH471J50
C	C 3236(B,176 ,231)		CCSRCH471J50
	C 3237(B,174 ,231)		CCSRCH471J50
	C 3238(B,172 ,231)		CCSRCH471J50
	C 3239(B,169 ,231)		CCSRCH471J50
	C 3240(B,167 ,231)		CCSRCH471J50
	C 3241(B,165 ,231)		CCSRCH471J50
	C 3242(B,163 ,231)		CCSRCH471J50
	C 3243(B,159 ,231)		CCSRCH471J50
	C 3244(B,157 ,231)		CCSRCH471J50
	C 3245(B,155 ,231)		CCSRCH471J50
	C 3246(B,153 ,231)		CCSRCH471J50
D	C 3247(B,150 ,231)		CCSRCH471J50
	C 3248(B,148 ,231)		CCSRCH471J50
	C 3249(B,146 ,231)		CCSRCH471J50
	C 3250(B,144 ,231)		CCSRCH471J50
	C 3321(B,149 ,215)		CKSRYB103K50
	C 3322(B,67 ,229)		CKSRYB103K50
	C 3323(B,129 ,230)		CKSRYB103K50
	C 3326(B,143 ,200)		CKSRYB104K25
	C 3328(B,152 ,205)		CKSRYB104K25
	C 3330(B,125 ,193)		CKSRYB102K50
E	C 3334(B,102 ,206)		CKSRYB103K50
	C 3335(A,89 ,194)	ELECT. CAPACITOR	CEJQ470M50
	C 3353(B,164 ,158)		CKSRYB153K50
	C 3354(B,197 ,164)		CKSRYB103K50
	C 3355(B,11 ,229)		CKSRYB103K50
	C 3356(B,232 ,216)		CKSRYB103K50
	C 3359(A,8 ,227)		CEJQ101M6R3
	C 3360(A,194 ,224)		CEJQ221M6R3

AD INPUT SELECT ASSY

Mark	No.	Description	Part No.
F	**MISCELLANEOUS**		
	Q 3561(B,78 ,95)	DIGITAL TR(SC-70)	RT1N431M
	D 3562(A,28 ,69)	LED(BLUE)	SLR-343BBT(HJKL)
	S 3561(A,95 ,86)	ROTARY ENCODER	ASX7047
	S 3562(A,64 ,103)	SWITCH	VSG1024
	S 3563(A,64 ,83)	SWITCH	VSG1024
	S 3564(A,35 ,65)	SWITCH	VSG1024
	S 3565(A,64 ,63)	SWITCH	VSG1024
	3561(A,79 ,106)	CABLE HOLDER(8P)	51063-0805
	RESISTORS		
	R 3561(B,73 ,95)		RS1/16S391J
	R 3563(B,59 ,106)		RS1/16S272J
	R 3564(B,59 ,87)		RS1/16S512J
	CAPACITORS		
	C 3563(B,91 ,86)		CKSRYB103K50
	C 3564(B,89 ,86)		CKSRYB103K50

AE PREOUT & CONTROL ASSY

	MISCELLANEOUS		
	IC 2931(A,192 ,118)	RS-232C TRANSCEIVER	MAX3232CPW
	IC 2932(B,167 ,69)	OP-AMP IC	BA4560RF
	Q 2801(A,197 ,14)	TRANSISTOR	IMX25
	Q 2802(A,197 ,21)	TRANSISTOR	IMX25
	Q 2821(A,197 ,27)	TRANSISTOR	IMX25
	Q 2822(A,197 ,34)	TRANSISTOR	IMX25
	Q 2841(A,197 ,40)	TRANSISTOR	IMX25
	Q 2842(A,197 ,47)	TRANSISTOR	IMX25
	Q 2861(A,197 ,53)	TRANSISTOR	IMX25
	Q 2862(A,197 ,60)	TRANSISTOR	IMX25
	Q 2931(B,193 ,126)	TRANSISTOR	2SC4081
	Q 2952(A,182 ,96)	DIGITAL TR(SC-70)	RT1N431M
	D 2901(A,199 ,131)	DIODE	1SS355
	D 2931(B,203 ,121)	DIODE	1SS355
	D 2951(B,177 ,126)	DIODE	1SS355
	D 2952(A,170 ,98)	DIODE	1SS355
	D 2957(A,199 ,89)	DIODE	UDZS6R2(B)
	D 2958(A,193 ,84)	DIODE	UDZS6R2(B)
	D 2959(A,197 ,89)	DIODE	UDZS6R2(B)
	D 2960(A,193 ,86)	DIODE	UDZS6R2(B)
	L 2901(A,203 ,134)	CHIP SOLID INDUCTOR	QTL1013
	L 2902(A,203 ,133)	CHIP SOLID INDUCTOR	QTL1013
	L 2903(A,203 ,137)	CHIP SOLID INDUCTOR	QTL1013
	L 2904(A,203 ,136)	CHIP SOLID INDUCTOR	QTL1013
	L 2931(B,174 ,119)	CHIP SOLID INDUCTOR	QTL1013
	L 2933(B,170 ,119)	CHIP BEADS	VTL1083
	L 2934(A,169 ,129)	CHIP BEADS	VTL1083
	L 2935(B,189 ,130)	CHIP BEADS	VTL1083
	JA 2901(A,219 ,142)	MINI JACK(4P) /W SW	XKN3015
	CN2801(A,164 ,23)	26P CONNECTOR	52045-2645
	CN2802(A,165 ,135)	23P SOCKET	XKP3082
	CN2804(A,220 ,93)	20P SOCKET	AKP7202
	CN2805(A,220 ,23)	PIN JACK(4P)	AKB7172
	CN2806(A,220 ,51)	PIN JACK(4P)	AKB7172
	CN2931(A,220 ,119)	9P D-SUB SOCKET	AKP1213
	RESISTORS		
	R 2801(B,203 ,14)		RS1/16S101J
	R 2802(B,203 ,21)		RS1/16S101J
	R 2803(B,197 ,14)		RS1/16S121J
	R 2804(B,197 ,21)		RS1/16S121J
	R 2805(B,191 ,14)		RS1/16S271J
	R 2806(B,191 ,21)		RS1/16S271J
	R 2807(A,202 ,16)		RS1/16S103J

Mark No.	Description	Part No.
R 2808	(A,202 ,22)	RS1/16S103J
R 2809	(A,193 ,16)	RS1/16S103J
R 2810	(A,193 ,22)	RS1/16S103J
R 2821	(B,203 ,27)	RS1/16S101J
R 2822	(B,203 ,34)	RS1/16S101J
R 2823	(B,197 ,27)	RS1/16S121J
R 2824	(B,197 ,34)	RS1/16S121J
R 2825	(B,191 ,27)	RS1/16S271J
R 2826	(B,191 ,34)	RS1/16S271J
R 2827	(A,202 ,29)	RS1/16S103J
R 2828	(A,202 ,35)	RS1/16S103J
R 2829	(A,193 ,29)	RS1/16S103J
R 2830	(A,193 ,35)	RS1/16S103J
R 2841	(B,203 ,40)	RS1/16S101J
R 2842	(B,203 ,47)	RS1/16S101J
R 2843	(B,197 ,40)	RS1/16S121J
R 2844	(B,197 ,47)	RS1/16S121J
R 2845	(B,191 ,40)	RS1/16S271J
R 2846	(B,191 ,47)	RS1/16S271J
R 2847	(A,202 ,42)	RS1/16S103J
R 2848	(A,202 ,48)	RS1/16S103J
R 2849	(A,193 ,42)	RS1/16S103J
R 2850	(A,193 ,48)	RS1/16S103J
R 2861	(B,203 ,53)	RS1/16S101J
R 2862	(B,203 ,60)	RS1/16S101J
R 2863	(B,197 ,53)	RS1/16S121J
R 2864	(B,197 ,60)	RS1/16S121J
R 2865	(B,191 ,53)	RS1/16S271J
R 2866	(B,191 ,60)	RS1/16S271J
R 2867	(A,202 ,55)	RS1/16S103J
R 2868	(A,202 ,61)	RS1/16S103J
R 2869	(A,193 ,55)	RS1/16S103J
R 2870	(A,193 ,61)	RS1/16S103J
R 2931	(A,198 ,121)	RS1/16S101J
R 2932	(B,203 ,115)	RS1/16S101J
R 2933	(B,189 ,118)	RS1/16S101J
R 2934	(A,188 ,122)	RS1/16S101J
R 2935	(B,203 ,119)	RS1/16S224J
R 2936	(B,203 ,123)	RS1/16S474J
R 2937	(B,198 ,120)	RS1/16S103J
R 2938	(B,198 ,122)	RS1/16S224J
R 2939	(B,212 ,113)	RS1/16S0R0J
R 2951	(B,187 ,90)	RS1/16S104J
R 2952	(B,187 ,86)	RS1/16S104J
R 2953	(B,184 ,89)	RS1/16S331J
R 2954	(B,184 ,86)	RS1/16S331J
R 2957	(A,185 ,100)	RS1/16S514J
R 2959	(A,182 ,100)	RS1/16S393J
R 2962	(A,175 ,97)	RS1/16S0R0J
R 2965	(B,176 ,75)	RS1/16S472J
R 2966	(B,167 ,60)	RS1/16S472J
R 2967	(B,164 ,94)	RS1/16S104J
R 2968	(B,161 ,92)	RS1/16S104J
R 2969	(B,174 ,71)	RS1/16S472J
R 2970	(B,167 ,58)	RS1/16S472J
R 2971	(A,170 ,70)	RS1/16S103J
R 2972	(A,164 ,68)	RS1/16S103J
R 2973	(A,170 ,67)	RS1/16S103J
R 2974	(A,165 ,64)	RS1/16S103J
R 2975	(B,169 ,77)	RS1/16S101J
R 2976	(B,161 ,71)	RS1/16S101J
R 2996	(B,191 ,130)	RS1/16S0R0J

CAPACITORS

C 2891	(B,214 ,23)	CKSRYB103K50
C 2892	(B,214 ,51)	CKSRYB103K50
C 2903	(B,204 ,135)	CKSRYB104K16
C 2931	(B,207 ,128)	CKSRYB103K50
C 2933	(A,192 ,112)	CKSRYB105K10
C 2934	(A,192 ,122)	CKSRYB105K10
C 2935	(A,197 ,115)	CKSRYB473K25
C 2936	(A,197 ,118)	CKSRYB224K16
C 2937	(A,186 ,115)	CKSRYB103K50
C 2938	(A,177 ,115)	CEAT101M16
C 2939	(B,203 ,117)	CKSRYB103K50
C 2940	(B,198 ,124)	CCSRCH331J50
C 2955	(A,178 ,91)	CEAT100M50
C 2956	(A,178 ,85)	CEAT100M50
C 2957	(B,178 ,132)	CKSRYB103K50
C 2958	(B,209 ,84)	CKSRYB103K50
C 2961	(A,174 ,77)	CEAT100M50
C 2962	(A,182 ,77)	CEAT100M50
C 2967	(A,167 ,85)	CEAT100M50
C 2968	(A,161 ,78)	CEAT100M50
C 2969	(B,165 ,75)	CKSRYB103K50
C 2970	(B,167 ,73)	CKSRYB103K50
C 2973	(A,206 ,105)	CKSRYB103K50
C 2974	(A,205 ,105)	CKSRYB474K10
C 2975	(B,211 ,86)	CKSRYB474K10
C 2976	(B,211 ,88)	CKSRYB103K50

AF 1394 ASSY

MISCELLANEOUS

⚠IC 1	(A,42 ,38)	IC	NJM2391DL1-33
IC 101	(A,61 ,43)	MICROCOMPUTER	PD5787A
IC 103	(B,64 ,31)	RESET IC	PST9245
IC 104	(B,44 ,50)	LOGIC IC	SN74LV125APW
IC 201	(A,99 ,51)	IEEE1394 PHY LINK	TSB43CA42ZGW
IC 205	(B,71 ,60)	LOGIC IC	SN74AHC1G08DCK
IC 301	(B,100 ,26)	FLOW CONTROL IC	PD8112A
IC 302	(B,125 ,25)	IC	K4S641632H-TC75
IC 303	(A,116 ,27)	OP AMP IC	NJU7093AF
IC 401	(A,25 ,55)	DSD/PCM CONVERTER IC	SM5819AF
IC 404	(B,51 ,23)	LOGIC IC	SN74LVC1G125DCK
IC 405	(B,23 ,57)	IC	SN74LVC541APW
IC 409	(B,73 ,26)	LOGIC IC	SN74LVC1G126DCK
⚠IC 410	(A,27 ,45)	VOLTAGE REGULATOR	S-L2980A25MC-C6K
Q 101	(A,44 ,45)	DIGITAL TR(SC-70)	RT1P241M
Q 301	(B,115 ,28)	DIGITAL TR(SC-70)	RT1P241M
Q 401	(A,20 ,62)	DIGITAL TR(SC-70)	RT1P431M
D 102	(B,63 ,61)	CHIP DIODE	RB501V-40
L 1	(A,38 ,33)	CHIP SOLID INDUCTOR	ATL7002
L 101	(B,43 ,35)	CHIP SOLID INDUCTOR	ATL7002
L 201	(B,75 ,61)	CHIP SOLID INDUCTOR	ATL7002
L 202	(B,76 ,41)	CHIP SOLID INDUCTOR	ATL7002
L 203	(B,138 ,50)	CHIP SOLID INDUCTOR	ATL7002
⚠L 204	(A,132 ,61)	COIL	ATH7015
⚠L 205	(A,132 ,58)	COIL	ATH7015
⚠L 206	(A,133 ,36)	COIL	ATH7015

Mark	No.		Description	Part No.
⚠	L	207 (A,133 ,33)	COIL	ATH7015
	L	301 (B,80 ,35)	CHIP SOLID INDUCTOR	ATL7002
	L	302 (B,138 ,45)	CHIP SOLID INDUCTOR	ATL7002
	L	401 (A,35 ,43)	CHIP SOLID INDUCTOR	ATL7002
	L	403 (B,19 ,61)	CHIP SOLID INDUCTOR	ATL7002
	L	404 (A,29 ,42)	CHIP SOLID INDUCTOR	ATL7002
	L	405 (A,16 ,48)	CHIP SOLID INDUCTOR	ATL7002
	JA	201 (A,142 ,35)	1394-TERMINAL	VKN1800
	JA	202 (A,142 ,60)	1394-TERMINAL	VKN1800
	X	101 (A,62 ,57)	CERAMIC RESONATOR (6.14MHz)	VSS1179
	X	201 (B,105 ,60)	CRYSTAL RESONATOR (24.5760MHz)	ASS7055
	X	302 (A,86 ,35)	CRYSTAL RESONATOR (22.5792MHz)	ASS7054
	CN101	(A,138 ,19)	07P CONNECTOR	RKN1048
	CN401	(A,79 ,15)	22P CONNECTOR	VKN1426
	CN402	(A,20 ,37)	10P CONNECTOR	VKN1414
	IC		FLASH MEMORY IC	MBM29LV400TC-90PFTN

RESISTORS

	R	102 (B,69 ,51)		RS1/16S101J
	R	103 (B,67 ,51)		RS1/16S472J
	R	104 (A,69 ,56)		RS1/16S472J
	R	106 (A,61 ,60)		RS1/16S472J
	R	108 (A,56 ,56)		RS1/16S472J
	R	109 (A,52 ,55)		RS1/16S101J
	R	110 (A,50 ,51)		RS1/16S101J
	R	111 (A,47 ,51)		RS1/16S101J
	R	113 (B,71 ,53)		RS1/16S103J
	R	114 (B,49 ,46)		RS1/16S103J
	R	115 (A,47 ,53)		RS1/16S472J
	R	116 (A,57 ,61)		RS1/16S101J
	R	117 (A,49 ,45)		RS1/16S103J
	R	118 (A,49 ,43)		RS1/16S101J
	R	119 (A,49 ,40)		RAB4C101J
	R	122 (B,44 ,40)		RAB4C103J
	R	123 (A,49 ,38)		RS1/16S101J
	R	124 (A,49 ,33)		RS1/16S103J
	R	125 (A,49 ,36)		RS1/16S101J
	R	126 (A,49 ,35)		RS1/16S101J
	R	127 (A,52 ,31)		RAB4C101J
	R	128 (A,56 ,31)		RAB4C101J
	R	129 (A,61 ,31)		RAB4C101J
	R	130 (A,65 ,31)		RAB4C101J
	R	131 (A,76 ,64)		RS1/16S101J
	R	132 (A,73 ,48)		RS1/16S472J
	R	135 (A,73 ,43)		RAB4C472J
	R	136 (A,73 ,39)		RAB4C472J
	R	137 (A,73 ,36)		RAB4C472J
	R	138 (A,73 ,32)		RAB4C472J
	R	139 (B,54 ,33)		RS1/16S472J
	R	140 (B,138 ,17)		RS1/16S103J
	R	141 (B,138 ,18)		RS1/16S103J
	R	142 (B,59 ,61)		RS1/16S0R0J
	R	143 (A,42 ,52)		RS1/16S103J
	R	144 (A,42 ,51)		RS1/16S470J
	R	145 (A,42 ,47)		RS1/16S472J
	R	146 (A,42 ,49)		RS1/16S470J
	R	147 (A,42 ,53)		RS1/16S472J
	R	148 (B,67 ,42)		RS1/16S101J
	R	149 (B,66 ,40)		RS1/16S472J
	R	151 (B,67 ,32)		RS1/16S0R0J
	R	201 (A,112 ,40)		RS1/16S472J
	R	202 (A,113 ,40)		RS1/16S472J
	R	203 (A,111 ,46)		RS1/16S101J
	R	204 (B,104 ,44)		RS1/16S101J
	R	205 (B,125 ,46)		RAB4C101J
	R	206 (A,116 ,37)		RAB4C472J
	R	207 (B,104 ,50)		RS1/16S472J
	R	208 (B,104 ,51)		RS1/16S472J
	R	209 (B,111 ,61)		RS1/16S0R0J
	R	210 (B,112 ,52)		RS1/16S0R0J
	R	213 (A,107 ,61)	CHIP RESISTOR	RS1/16S6341D
	R	214 (B,98 ,57)		RS1/16S0R0J
	R	215 (B,100 ,57)		RS1/16S0R0J
	R	216 (B,97 ,63)		RAB4C472J
	R	217 (A,76 ,57)		RS1/16S472J
	R	218 (B,73 ,61)		RS1/16S472J
	R	219 (A,76 ,63)		RS1/16S472J
	R	220 (B,93 ,63)		RAB4C472J
	R	221 (B,89 ,63)		RAB4C472J
	R	222 (A,85 ,63)		RS1/16S472J
	R	223 (B,98 ,59)		RAB4C472J
	R	224 (B,85 ,62)		RS1/16S472J
	R	225 (B,85 ,64)		RS1/16S472J
	R	226 (A,80 ,61)		RS1/16S472J
	R	227 (B,71 ,57)		RS1/16S472J
	R	228 (B,85 ,57)		RS1/16S472J
	R	229 (B,84 ,57)		RS1/16S472J
	R	230 (A,86 ,54)		RAB4C101J
	R	231 (A,81 ,53)		RAB4C101J
	R	232 (B,85 ,49)		RAB4C101J
	R	233 (B,81 ,48)		RAB4C101J
	R	234 (A,84 ,45)		RAB4C472J
	R	235 (B,89 ,47)		RS1/16S472J
	R	236 (A,84 ,42)		RS1/16S472J
	R	237 (A,84 ,41)		RS1/16S472J
	R	238 (B,84 ,44)		RAB4C472J
	R	239 (A,90 ,40)		RAB4C472J
	R	240 (A,81 ,40)		RAB4C472J
	R	241 (B,101 ,44)		RS1/16S101J
	R	242 (A,77 ,40)		RS1/16S472J
	R	243 (A,78 ,40)		RS1/16S472J
	R	244 (A,98 ,39)		RS1/16S472J
	R	245 (A,96 ,33)		RAB4C101J
	R	246 (A,100 ,32)		RAB4C101J
	R	247 (A,102 ,37)		RS1/16S472J
	R	251 (A,110 ,40)		RS1/16S472J
	R	252 (A,113 ,37)		RS1/16S101J
	R	253 (B,87 ,56)		RS1/16S101J
	R	254 (B,88 ,56)		RS1/16S101J
	R	261 (B,123 ,42)		RS1/16S0R0J
	R	262 (B,106 ,48)		RS1/16S0R0J
	R	265 (A,112 ,43)		RS1/16S470J
	R	266 (A,112 ,45)		RS1/16S470J
	R	267 (B,117 ,63)	CHIP RESISTOR	RS1/16S56R0D
	R	268 (B,117 ,61)	CHIP RESISTOR	RS1/16S56R0D
	R	269 (B,117 ,56)	CHIP RESISTOR	RS1/16S56R0D
	R	270 (B,117 ,55)	CHIP RESISTOR	RS1/16S56R0D
	R	271 (B,117 ,59)	CHIP RESISTOR	RS1/16S56R0D

Mark No.	Description	Part No.
R 272	(B,117 ,58) CHIP RESISTOR	RS1/16S56R0D
R 273	(B,117 ,53) CHIP RESISTOR	RS1/16S56R0D
R 274	(B,117 ,51) CHIP RESISTOR	RS1/16S56R0D
R 275	(B,120 ,59)	RS1/16S5101F
R 276	(B,120 ,51)	RS1/16S5101F
R 283	(A,136 ,28)	RS1/16S0R0J
R 284	(A,138 ,28)	RS1/16S0R0J
R 288	(B,109 ,61)	RS1/16S0R0J
R 289	(A,104 ,61)	RS1/16S101J
R 290	(A,103 ,64)	RS1/16S220J
R 291	(B,121 ,39)	RS1/16S0R0J
R 292	(A,120 ,37)	RS1/16S0R0J
R 294	(B,128 ,49)	RS1/16S0R0J
R 295	(A,135 ,46)	RS1/16S0R0J
R 301	(A,94 ,18)	RS1/16S470J
R 302	(A,89 ,22) RESISTOR ARRAY	RAB4C680J
R 303	(A,94 ,21)	RS1/16S680J
R 304	(A,94 ,22)	RS1/16S470J
R 305	(B,85 ,20)	RS1/16S220J
R 307	(B,85 ,28)	RS1/16S470J
R 308	(A,89 ,28)	RAB4C470J
R 309	(B,85 ,31)	RS1/16S470J
R 310	(B,85 ,33)	RS1/16S470J
R 311	(B,85 ,34)	RS1/16S0R0J
R 313	(B,85 ,36)	RS1/16S0R0J
R 325	(B,90 ,39)	RS1/16S470J
R 326	(A,91 ,36)	RS1/16S101J
R 327	(B,100 ,41)	RS1/16S0R0J
R 328	(A,77 ,37)	RS1/16S101J
R 329	(A,80 ,37)	RS1/16S103J
R 332	(A,106 ,33)	RS1/16S101J
R 333	(B,113 ,32)	RS1/16S101J
R 334	(A,116 ,32)	RS1/16S0R0J
R 335	(A,117 ,32)	RS1/16S0R0J
R 339	(A,115 ,19)	RAB4C470J
R 340	(A,111 ,17)	RAB4C470J
R 341	(A,107 ,20)	RS1/16S470J
R 342	(A,106 ,20)	RS1/16S470J
R 343	(B,115 ,17)	RAB4C470J
R 344	(A,126 ,16)	RAB4C470J
R 345	(A,103 ,19)	RAB4C470J
R 346	(A,103 ,24)	RAB4C470J
R 347	(A,99 ,19)	RAB4C470J
R 348	(A,96 ,15)	RS1/16S470J
R 349	(A,96 ,17)	RS1/16S470J
R 350	(A,99 ,24)	RAB4C470J
R 351	(A,117 ,24)	RS1/16S123J
R 352	(A,120 ,25)	RS1/16S271J
R 353	(A,117 ,22)	RS1/16S472J
R 354	(A,120 ,34)	RS1/16S223J
R 355	(A,120 ,32)	RS1/16S223J
R 356	(B,117 ,25)	RS1/16S0R0J
R 357	(A,110 ,25)	RS1/16S0R0J
R 401	(A,16 ,55)	RS1/16S680J
R 402	(A,17 ,53) RESISTOR ARRAY	RAB4C680J
R 403	(A,23 ,48)	RS1/16S101J
R 404	(A,33 ,49)	RS1/16S221J
R 405	(A,33 ,50)	RS1/16S221J
R 406	(A,33 ,51)	RS1/16S221J
R 407	(A,33 ,54)	RAB4C221J
R 411	(A,33 ,58)	RS1/16S101J
R 412	(A,30 ,63)	RS1/16S0R0J
R 418	(B,69 ,28)	RS1/16S101J
R 421	(A,69 ,20)	RS1/16S0R0J
R 422	(A,64 ,20)	RS1/16S0R0J
R 425	(B,75 ,23)	RS1/16S470J
R 426	(A,69 ,27)	RS1/16S0R0J
R 427	(A,65 ,27)	RS1/16S0R0J
R 428	(A,56 ,20)	RS1/16S0R0J
R 429	(A,54 ,20)	RS1/16S0R0J
R 432	(A,61 ,20)	RS1/16S0R0J
R 434	(A,60 ,20)	RS1/16S0R0J
R 436	(B,48 ,25)	RS1/16S221J
R 437	(A,52 ,20)	RS1/16S101J
R 441	(B,29 ,60)	RS1/16S101J
R 442	(B,17 ,60)	RS1/16S101J
R 443	(B,17 ,58)	RS1/16S101J
R 444	(B,16 ,56)	RS1/16S101J
R 445	(B,20 ,51)	RAB4C101J
R 454	(B,71 ,20)	RS1/16S0R0J
R 456	(B,51 ,28)	RS1/16S0R0J

CAPACITORS

C 1	(A,38 ,36)	CKSRYB104K16
C 2	(A,42 ,27)	CEVW101M16
C 101	(B,67 ,45)	CKSRYB103K50
C 102	(A,61 ,53)	CKSRYB104K16
C 103	(B,46 ,31)	CEVW101M16
C 104	(B,52 ,32)	CKSRYB104K16
C 105	(A,58 ,31)	CKSRYB104K16
C 106	(B,67 ,48)	CKSRYB104K16
C 107	(B,138 ,20)	CKSRYB104K16
C 108	(B,42 ,53)	CKSRYB104K16
C 109	(B,57 ,58)	CKSRYB104K16
C 110	(B,69 ,33)	CKSRYB104K16
C 111	(B,60 ,30)	CKSRYB103K50
C 113	(B,58 ,32)	CKSRYB102K50
C 201	(B,104 ,48)	CKSRYB104K16
C 202	(B,107 ,50)	CKSRYB104K16
C 203	(B,110 ,52)	CKSRYB104K16
C 204	(B,105 ,54)	CKSRYB104K16
C 205	(B,105 ,53)	CKSRYB104K16
C 206	(B,77 ,56)	CEVW101M16
C 207	(B,81 ,59)	CKSRYB104K16
C 209	(A,106 ,61)	CKSRYB104K16
C 210	(B,105 ,64)	CKSRYB104K16
C 211	(B,105 ,63)	CKSRYB102K50
C 212	(B,100 ,55)	CKSRYB104K16
C 213	(B,99 ,55)	CKSRYB102K50
C 214	(A,101 ,61)	CKSRYB104K16
C 215	(B,100 ,64)	CKSRYB102K50
C 216	(A,99 ,64)	CKSRYB102K50
C 217	(B,73 ,45)	CEVW101M16
C 218	(B,77 ,49)	CKSRYB104K16
C 219	(B,94 ,52)	CKSRYB104K16
C 220	(B,94 ,49)	CKSRYB104K16
C 221	(B,94 ,51)	CKSRYB104K16
C 222	(A,88 ,46)	CKSRYB104K16
C 223	(B,99 ,46)	CKSRYB104K16

Mark	No.		Description	Part No.
	C	224 (B,100 ,46)		CKSRYB104K16
	C	225 (A,101 ,40)		CKSRYB104K16
	C	226 (A,110 ,41)		CKSRYB104K16
A	C	232 (B,133 ,51)		CEVW101M16
	C	235 (B,131 ,56)		CKSRYB104K16
	C	241 (B,71 ,63)		CKSRYB104K16
	C	242 (B,120 ,61)		CCSRCH221J50
	C	243 (B,120 ,53)		CCSRCH221J50
	C	244 (B,120 ,63)		CKSRYB105K6R3
	C	245 (B,120 ,56)		CKSRYB105K6R3
	C	246 (A,138 ,48)		CKSRYB104K16
	C	247 (A,138 ,47)		CKSRYB104K16
	C	248 (A,85 ,64)		CKSRYB104K16
	C	249 (B,95 ,56)		CKSRYB104K16
B				
	C	301 (B,86 ,16)		CKSRYB104K16
	C	302 (B,85 ,24)		CKSRYB104K16
	C	303 (B,85 ,30)		CKSRYB104K16
	C	304 (B,75 ,33)		CEVW101M16
	C	305 (B,80 ,32)		CKSRYB104K16
	C	309 (A,87 ,31)		CKSRYB104K16
	C	310 (A,87 ,32)		CKSRYB102K50
	C	311 (B,93 ,39)		CKSRYB104K16
	C	315 (B,103 ,40)		CKSRYB104K16
	C	316 (B,113 ,37)		CKSRYB104K16
C	C	317 (B,115 ,26)		CKSRYB104K16
	C	318 (B,115 ,24)		CKSRYB104K16
	C	319 (B,114 ,20)		CKSRYB104K16
	C	320 (A,99 ,15)		CKSRYB104K16
	C	321 (B,132 ,44)		CEVW101M16
	C	322 (B,133 ,25)		CKSRYB104K16
	C	323 (B,133 ,18)		CKSRYB104K16
	C	324 (B,117 ,21)		CKSRYB102K50
	C	325 (B,123 ,38)		CKSRYB104K16
	C	326 (A,120 ,30)		CKSRYB105K6R3
	C	327 (A,113 ,28)		CKSRYB104K16
D	C	328 (A,120 ,27)		CKSRYB474K10
	C	329 (A,120 ,28)	ELECT. CAPACITOR	DCH1201
	C	330 (A,120 ,23)		CKSRYB472K50
	C	333 (A,122 ,16)		CKSRYB104K16
	C	401 (A,33 ,37)		CEVW101M16
	C	402 (A,33 ,43)		CCSRCH471J50
	C	404 (A,26 ,48)		CKSRYB104K16
	C	405 (A,24 ,61)		CKSRYB104K16
	C	408 (A,18 ,56)		CKSRYB104K16
	C	409 (A,29 ,48)		CKSRYB104K16
	C	410 (A,29 ,61)		CKSRYB104K16
E	C	411 (A,18 ,59)		CKSRYB104K16
	C	412 (A,21 ,48)		CKSRYB104K16
	C	415 (B,51 ,20)		CKSRYB104K16
	C	416 (B,21 ,61)		CKSRYB104K16
	C	419 (A,78 ,24)		CEVW101M16
	C	420 (A,79 ,19)		CKSRYB104K16
	C	424 (B,73 ,24)		CKSRYB104K16
	C	427 (A,30 ,44)		CKSRYB104K16
	C	428 (A,19 ,44)		CEVW101M16

Mark	No.		Description	Part No.
	IC	101 (A,56 ,65)	HDMI RECEIVER	SII9031CTU
	IC	151 (A,25 ,63)	EEPROM	BR24L02FV-W
	IC	152 (A,32 ,83)	LOGIC IC	SN74CBT3306CPW
	IC	161 (A,33 ,40)	LOGIC(MULTIPLEXER)	SN74LV4052APW
	IC	171 (A,34 ,63)	EEPROM	BR24L02FV-W
	IC	172 (A,24 ,40)	LOGIC IC	SN74CBT3306CPW
	IC	201 (A,79 ,40)	IC	SN74LVC541APW
	IC	301 (A,52 ,29)	HDMI TRANSMITER	SII9030CTU
	IC	401 (A,139 ,75)	VIDEO DECODER IC	ADV7400AKSTZ-80
	IC	452 (A,108 ,83)	IC	SN74LVC541APW
	IC	453 (A,115 ,73)	IC	SN74LVC541APW
	IC	454 (A,110 ,68)	LOGIC IC	SN74LVC1G125DCK
	IC	501 (B,91 ,69)	CPU	PEG118A
	IC	502 (A,91 ,68)	FLASH ROM	AYW7078
	IC		FLASH MEMORY(4M)	MBM29LV400TC-70PFTN
	IC	504 (A,96 ,50)	LOGIC IC	SN74LV125APW
	IC	601 (A,156 ,38)	VIDEO FILTER IC	FMS6403MTC
	IC	602 (B,159 ,34)	VIDEO SW IC	MM1503XN
	IC	701 (A,133 ,44)	VIDEO ENCODER IC	ADV7172KSTZ
	IC	801 (B,144 ,41)	DVD VIDEO AMP IC	MM1623BF
⚠	IC	901 (B,103 ,39)	REGULATOR IC	BD7802FP
⚠	IC	902 (B,93 ,37)	IC	NJM2885DL1-18
⚠	IC	903 (B,113 ,39)	REGULATOR IC	BD7802FP
⚠	IC	904 (B,122 ,55)	REGULATOR IC	MM1561JF
⚠	IC	911 (B,70 ,38)	REGULATOR IC	PQ200WNA1ZPH
	Q	101 (A,61 ,84)	NMOS FET TRANSISTOR	UM6K1N
	Q	151 (A,19 ,87)	CHIP TRANSISTOR	DTC114YUA
	Q	152 (B,28 ,83)	CHIP TRANSISTOR	DTC114YUA
	Q	153 (A,29 ,63)	NMOS FET TRANSISTOR	UM6K1N
	Q	171 (A,19 ,65)	CHIP TRANSISTOR	DTC114YUA
	Q	172 (B,25 ,42)	CHIP TRANSISTOR	DTC114YUA
	Q	173 (A,28 ,42)	NMOS FET TRANSISTOR	UM6K1N
	Q	351 (B,28 ,33)	CHIP TR (PNP X 2)	UMB1N
	Q	352 (B,31 ,29)	CHIP TRANSISTOR	DTC114YUA
	Q	353 (A,28 ,15)	NMOS FET TRANSISTOR	UM6K1N
	Q	911 (A,82 ,50)	TRANSISTOR	2SA1576A
	Q	912 (B,78 ,30)	TRANSISTOR	RT1N241M
	Q	913 (B,83 ,30)	CHIP TRANSISTOR	DTC114YUA
	D	151 (B,24 ,80)	DIODE	DAN202U
	D	171 (B,24 ,54)	DIODE	DAN202U
	D	381 (A,37 ,21)	DIODE	UDZS5R1(B)
	D	551 (A,84 ,54)	CHIP DIODE	RB501V-40
	L	101 (A,70 ,88)	CHIP BEADS	ATL7010
	L	103 (A,85 ,83)	CHIP BEADS	ATL7010
	L	104 (A,39 ,90)	CHIP BEADS	ATL7010
	L	302 (B,53 ,25)	CHIP BEADS	ATL7010
	L	304 (A,67 ,46)	CHIP BEADS	ATL7010
	L	305 (A,44 ,42)	CHIP BEADS	ATL7010
⚠	L	351 (A,26 ,24)	COIL	ATH7022
⚠	L	352 (A,26 ,27)	COIL	ATH7022
⚠	L	353 (A,26 ,30)	COIL	ATH7022
⚠	L	354 (A,26 ,33)	COIL	ATH7022
	L	401 (A,118 ,81)	CHIP BEADS	ATL7010
	L	402 (A,159 ,63)	CHIP BEADS	ATL7010
	L	501 (A,82 ,86)	CHIP BEADS	ATL7010
	L	701 (A,117 ,57)	CHIP BEADS	ATL7010
	L	702 (A,149 ,41)	CHIP BEADS	ATL7010
	X	101 (A,60 ,48)	CRYSTAL RESONATOR (27MHz)	ASS7066
	X	401 (A,135 ,61)	CRYSTAL RESONATOR (28.63636MHz)	ASS7067

F

AG HDMI&DVC ASSY

MISCELLANEOUS

Mark No.	Description	Part No.
X 501 (A,101 ,59)	CERAMIC RESONATOR (15.7MHz)	XSS3004
CN101 (A,16 ,77)	HDMI CONNECTOR	AKN7040
CN102 (A,16 ,54)	HDMI CONNECTOR	AKN7040
CN301 (A,16 ,31)	HDMI CONNECTOR	AKN7040
CN501 (A,17 ,13)	07P CONNECTOR	RKN1048
CN1001(A,71 ,21)	CONNECTOR	CKS4668
CN1002(A,103 ,21)	CONNECTOR	CKS4668

RESISTORS

R 101 (A,52 ,83)	RESISTOR ARRAY	RAB4CQ100J
R 102 (A,67 ,80)	RESISTOR ARRAY	RAB4CQ470J
R 103 (A,50 ,79)		RS1/16S100J
R 104 (B,52 ,77)		RS1/16S100J
R 105 (A,47 ,79)		RS1/16S103J
R 106 (A,49 ,79)		RS1/16S103J
R 107 (B,53 ,69)		RS1/16S750J
R 108 (B,56 ,69)		RS1/16S750J
R 109 (B,58 ,69)		RS1/16S750J
R 111 (B,49 ,49)		RS1/16S101J
R 112 (B,51 ,53)		RS1/16S470J
R 113 (B,52 ,61)		RS1/16S680J
R 114 (B,62 ,53)		RS1/16S472J
R 115 (A,71 ,49)		RS1/16S472J
R 117 (B,53 ,53)		RS1/16S330J
R 118 (A,61 ,51)		RS1/16S105J
R 119 (A,67 ,49)		RS1/16S471J
R 120 (B,63 ,59)		RS1/16S221J
R 121 (A,67 ,50)		RS1/16S221J
R 122 (B,54 ,61)		RS1/16S470J
R 123 (B,55 ,53)		RS1/16S100J
R 124 (A,58 ,51)		RS1/16S152J
R 125 (A,52 ,46)	RESISTOR ARRAY	RAB4CQ680J
R 126 (A,71 ,74)	RESISTOR ARRAY	RAB4CQ680J
R 127 (A,71 ,71)	RESISTOR ARRAY	RAB4CQ680J
R 128 (A,71 ,67)	RESISTOR ARRAY	RAB4CQ470J
R 129 (A,71 ,64)	RESISTOR ARRAY	RAB4CQ470J
R 130 (A,71 ,58)	RESISTOR ARRAY	RAB4CQ470J
R 131 (A,71 ,55)	RESISTOR ARRAY	RAB4CQ470J
R 132 (A,71 ,61)		RS1/16S330J
R 133 (A,65 ,86)		RS1/16S103J
R 134 (A,58 ,83)		RS1/16S103J
R 135 (A,65 ,83)		RS1/16S103J
R 136 (A,58 ,86)		RS1/16S103J
R 137 (A,64 ,86)		RS1/16S104J
R 138 (A,57 ,83)		RS1/16S104J
R 151 (B,28 ,64)		RS1/16S100J
R 152 (B,26 ,64)		RS1/16S100J
R 153 (B,24 ,64)		RS1/16S101J
R 154 (B,28 ,60)		RS1/16S103J
R 155 (B,26 ,60)		RS1/16S103J
R 156 (B,24 ,60)		RS1/16S103J
R 157 (B,21 ,80)		RS1/16S473J
R 158 (A,29 ,66)		RS1/16S472J
R 159 (A,29 ,61)		RS1/16S472J
R 160 (B,33 ,84)		RS1/16S103J
R 161 (B,19 ,80)		RS1/16S102J
R 163 (B,48 ,81)		RS1/16S473J
R 164 (B,54 ,77)		RS1/16S473J
R 165 (B,36 ,41)		RS1/16S102J
R 166 (B,37 ,46)		RS1/16S102J
R 171 (B,38 ,64)		RS1/16S100J
R 172 (B,35 ,64)		RS1/16S100J
R 173 (B,33 ,64)		RS1/16S101J
R 174 (B,38 ,60)		RS1/16S103J
R 175 (B,35 ,60)		RS1/16S103J
R 176 (B,33 ,60)		RS1/16S103J
R 177 (B,18 ,43)		RS1/16S473J
R 178 (A,28 ,45)		RS1/16S472J
R 179 (A,28 ,39)		RS1/16S472J
R 181 (B,20 ,56)		RS1/16S102J
R 201 (A,86 ,42)		RS1/16S470J
R 202 (A,86 ,40)		RS1/16S470J
R 203 (A,86 ,39)		RS1/16S470J
R 204 (A,84 ,35)	RESISTOR ARRAY	RAB4CQ470J
R 205 (A,79 ,35)		RS1/16S470J
R 303 (B,57 ,39)		RS1/16S100J
R 306 (B,47 ,39)		RS1/16S101J
R 312 (B,51 ,30)	CHIP RESISTOR	RS1/16S4750F
R 313 (A,43 ,36)		RS1/16S472J
R 314 (B,49 ,22)		RS1/16S100J
R 315 (B,45 ,22)		RS1/16S100J
R 316 (B,42 ,20)		RS1/16S471J
R 318 (B,56 ,21)		RS1/16S472J
R 325 (B,59 ,26)		RS1/16S330J
R 326 (A,48 ,39)		RS1/16S100J
R 327 (A,46 ,39)		RS1/16S100J
R 331 (A,60 ,42)	RESISTOR ARRAY	RAB4CQ473J
R 332 (A,75 ,61)		RS1/16S473J
R 333 (A,75 ,74)	RESISTOR ARRAY	RAB4CQ473J
R 334 (A,75 ,71)	RESISTOR ARRAY	RAB4CQ473J
R 335 (A,75 ,67)	RESISTOR ARRAY	RAB4CQ473J
R 336 (A,75 ,64)	RESISTOR ARRAY	RAB4CQ473J
R 337 (A,75 ,58)	RESISTOR ARRAY	RAB4CQ473J
R 338 (A,75 ,55)	RESISTOR ARRAY	RAB4CQ473J
R 351 (B,29 ,18)		RS1/16S472J
R 352 (B,31 ,34)		RS1/16S472J
R 353 (B,29 ,22)		RS1/16S272J
R 354 (B,33 ,34)		RS1/16S272J
R 355 (A,25 ,15)		RS1/16S472J
R 356 (A,31 ,15)		RS1/16S472J
R 386 (A,20 ,19)		RS1/16S473J
R 389 (B,21 ,11)		RS1/16S102J
R 403 (B,131 ,73)		RS1/16S330J
R 404 (B,128 ,73)		RS1/16S330J
R 405 (A,125 ,71)		RS1/16S330J
R 406 (A,127 ,77)	RESISTOR ARRAY	RAB4CQ470J
R 407 (A,127 ,68)	RESISTOR ARRAY	RAB4CQ560J
R 408 (A,130 ,64)		RS1/16S560J
R 409 (A,130 ,63)		RS1/16S560J
R 410 (B,134 ,64)		RS1/16S103J
R 411 (B,137 ,64)		RS1/16S100J
R 412 (A,141 ,63)		RS1/16S560J
R 413 (A,143 ,63)		RS1/16S560J
R 414 (B,144 ,65)		RS1/16S132J
R 415 (B,142 ,65)		RS1/16S391J
R 416 (A,137 ,64)		RS1/16S105J
R 417 (A,134 ,64)		RS1/16S101J
R 418 (B,142 ,72)		RS1/16S272J
R 419 (B,140 ,72)		RS1/16S272J

Mark	No.	Description	Part No.
	R 420 (A,148 ,66)		RS1/16S103J
	R 423 (A,140 ,87)		RS1/16S330J
A	R 424 (A,141 ,87)		RS1/16S330J
	R 425 (B,137 ,83)		RS1/16S103J
	R 426 (B,145 ,85)		RS1/16S471J
	R 428 (A,136 ,87)	RESISTOR ARRAY	RAB4CQ470J
	R 451 (A,104 ,65)		RS1/16S330J
	R 452 (A,102 ,81)	RESISTOR ARRAY	RAB4CQ680J
	R 453 (A,102 ,84)	RESISTOR ARRAY	RAB4CQ680J
	R 454 (A,109 ,73)	RESISTOR ARRAY	RAB4CQ680J
	R 455 (A,109 ,76)	RESISTOR ARRAY	RAB4CQ680J
	R 456 (A,122 ,75)	RESISTOR ARRAY	RAB4CQ473J
	R 457 (A,122 ,71)	RESISTOR ARRAY	RAB4CQ473J
B	R 458 (A,115 ,84)	RESISTOR ARRAY	RAB4CQ473J
	R 459 (A,115 ,81)	RESISTOR ARRAY	RAB4CQ473J
	R 460 (A,117 ,61)	RESISTOR ARRAY	RAB4CQ473J
	R 491 (B,154 ,61)		RS1/10S0R0J
	R 492 (B,151 ,61)		RS1/10S0R0J
	R 506 (A,104 ,57)		RS1/16S221J
	R 508 (B,102 ,59)		RS1/16S472J
	R 511 (B,111 ,55)		RS1/16S101J
	R 517 (B,99 ,50)		RS1/16S101J
	R 520 (A,103 ,54)		RS1/16S103J
	R 524 (B,91 ,50)		RS1/16S100J
C	R 525 (B,89 ,50)		RS1/16S100J
	R 526 (B,86 ,50)		RS1/16S100J
	R 527 (B,84 ,50)		RS1/16S100J
	R 528 (B,70 ,50)		RS1/16S470J
	R 529 (B,77 ,57)		RS1/16S473J
	R 530 (B,91 ,45)		RS1/16S222J
	R 531 (B,89 ,45)		RS1/16S222J
	R 533 (B,87 ,45)		RS1/16S472J
	R 534 (B,81 ,50)		RS1/16S472J
	R 537 (B,110 ,71)		RS1/16S101J
	R 538 (B,111 ,75)		RS1/16S101J
D			
	R 539 (B,107 ,79)		RS1/16S101J
	R 540 (A,101 ,49)		RS1/16S470J
	R 541 (A,90 ,49)		RS1/16S103J
	R 542 (A,90 ,50)		RS1/16S470J
	R 543 (A,90 ,53)		RS1/16S472J
	R 544 (A,90 ,52)		RS1/16S470J
	R 546 (B,79 ,50)		RS1/16S101J
	R 549 (B,80 ,57)		RS1/16S473J
	R 551 (A,84 ,75)		RS1/16S473J
	R 561 (B,104 ,59)		RS1/16S103J
E			
	R 562 (B,111 ,59)		RS1/16S103J
	R 564 (B,104 ,55)		RS1/16S103J
	R 565 (B,111 ,50)		RS1/16S103J
	R 566 (B,109 ,50)		RS1/16S103J
	R 567 (B,104 ,50)		RS1/16S103J
	R 568 (A,97 ,91)		RS1/16S103J
	R 569 (A,79 ,60)		RS1/16S103J
	R 571 (B,18 ,15)		RS1/16S103J
	R 586 (B,113 ,73)		RS1/16S103J
	R 588 (B,94 ,45)		RS1/16S103J
	R 594 (A,90 ,43)		RS1/16S0R0J
F	R 703 (A,128 ,38)		RS1/16S103J
	R 704 (A,128 ,35)		RS1/16S103J
	R 705 (A,130 ,36)		RS1/16S103J
	R 706 (A,132 ,36)		RS1/16S103J

Mark	No.	Description	Part No.
	R 707 (A,138 ,36)		RS1/16S1201F
	R 708 (A,138 ,34)		RS1/16S1201F
	R 709 (A,135 ,36)		RS1/16S470J
	R 710 (A,136 ,36)		RS1/16S470J
	R 714 (A,138 ,53)		RS1/16S470J
	R 715 (A,127 ,52)		RS1/16S470J
	R 716 (A,131 ,54)		RS1/16S471J
	R 717 (A,137 ,53)		RS1/16S103J
	R 718 (A,143 ,56)		RS1/16S1201F
	R 719 (A,143 ,57)		RS1/16S1201F
	R 720 (A,130 ,55)		RS1/16S103J
	R 722 (A,130 ,57)		RS1/16S103J
	R 733 (A,142 ,52)		RS1/16S1500F
	R 734 (A,145 ,52)		RS1/16S0R0J
	R 737 (A,142 ,48)		RS1/16S1500F
	R 738 (A,145 ,48)		RS1/16S0R0J
	R 741 (A,142 ,45)		RS1/16S1500F
	R 742 (A,145 ,45)		RS1/16S0R0J
	R 745 (A,142 ,43)		RS1/16S1500F
	R 746 (A,145 ,43)		RS1/16S0R0J
	R 749 (A,143 ,38)		RS1/16S1500F
	R 750 (A,143 ,35)		RS1/16S0R0J
	R 753 (A,141 ,38)		RS1/16S1500F
	R 754 (A,141 ,35)		RS1/16S0R0J
	R 802 (B,145 ,57)		RS1/16S103J
	R 811 (B,138 ,28)		RS1/10S75R0F
	R 812 (B,141 ,28)		RS1/10S75R0F
	R 813 (B,135 ,28)		RS1/10S75R0F
	R 814 (B,144 ,28)		RS1/10S75R0F
	R 815 (B,147 ,28)		RS1/10S75R0F
	R 816 (B,150 ,28)		RS1/10S75R0F
	R 911 (A,78 ,48)		RS1/10S6R8J
	R 912 (A,78 ,50)		RS1/10S6R8J
	R 914 (B,80 ,33)		RS1/16S103J
	R 915 (B,68 ,28)		RS1/16S2001F
	R 916 (B,70 ,28)		RS1/16S1801F
	R 918 (A,80 ,48)		RS1/16S102J
	R 919 (B,80 ,29)		RS1/16S103J
	R 1001(A,107 ,32)		RS1/10S0R0J
	R 1002(A,95 ,33)		RS1/10S100J
	R 1003(A,149 ,26)		RS1/10S0R0J
	R 1004(A,149 ,28)		RS1/10S0R0J
	R 1102(A,68 ,84)		RS1/10S0R0J
	R 1105(A,43 ,79)		RS1/10S0R0J
	R 1107(B,60 ,53)		RS1/16S0R0J
	R 1108(B,61 ,59)		RS1/16S0R0J
	R 1301(B,43 ,35)		RS1/10S0R0J
	R 1403(A,142 ,91)		RS1/10S0R0J
	R 1404(A,146 ,63)		RS1/10S0R0J

CAPACITORS

	C 101 (A,46 ,79)	CKSRYB105K10
	C 102 (A,52 ,79)	CKSRYB104K16
	C 103 (A,54 ,79)	CKSRYB104K16
	C 104 (A,55 ,79)	CKSRYB104K16
	C 105 (A,57 ,80)	CKSRYB104K16
	C 106 (A,58 ,80)	CKSRYB104K16
	C 107 (A,60 ,80)	CKSRYB104K16
	C 109 (A,63 ,80)	CKSRYB104K16
	C 110 (A,64 ,80)	CKSRYB104K16

Mark No.	Description	Part No.
C 112 (A,76 ,89)		CEVW101M16
C 115 (A,80 ,81)		CEVW101M16
C 116 (B,46 ,74)		CKSRYB105K10
C 117 (A,43 ,77)		CKSRYB105K10
C 118 (B,49 ,70)		CKSRYB104K16
C 119 (B,46 ,70)		CKSRYB104K16
C 120 (B,49 ,66)		CKSRYB104K16
C 121 (B,46 ,66)		CKSRYB105K10
C 122 (B,49 ,60)		CKSRYB104K16
C 123 (B,45 ,60)		CKSRYB104K16
C 124 (B,45 ,56)		CKSRYB104K16
C 125 (A,39 ,84)		CEVW101M16
C 126 (A,46 ,50)		CKSRYB104K16
C 127 (A,47 ,50)		CKSRYB104K16
C 128 (A,49 ,50)		CKSRYB104K16
C 129 (A,68 ,53)		CKSRYB104K16
C 130 (A,52 ,50)		CKSRYB104K16
C 131 (A,54 ,50)		CKSRYB104K16
C 132 (A,56 ,50)		CKSRYB104K16
C 133 (B,58 ,53)		CKSRYB104K16
C 134 (B,58 ,59)		CKSRYB104K16
C 135 (A,67 ,47)		CKSRYB103K50
C 136 (A,65 ,51)		CKSRYB103K50
C 137 (A,58 ,45)		CCSRCH120J50
C 138 (A,61 ,45)		CCSRCH100D50
C 139 (B,67 ,72)		CKSRYB104K16
C 140 (B,67 ,68)		CKSRYB104K16
C 141 (B,69 ,68)		CKSRYB104K16
C 142 (B,67 ,63)		CKSRYB104K16
C 143 (B,66 ,59)		CKSRYB104K16
C 144 (A,64 ,83)		CKSRYB103K50
C 145 (A,57 ,86)		CKSRYB103K50
C 151 (A,22 ,65)		CKSRYB104K16
C 153 (A,33 ,86)		CKSRYB104K16
C 161 (A,31 ,45)		CKSRYB104K16
C 171 (A,32 ,64)		CKSRYB104K16
C 173 (A,23 ,45)		CKSRYB104K16
C 191 (A,49 ,47)		CKSRYB104K16
C 192 (A,44 ,82)		CKSRYB103K50
C 201 (A,80 ,44)		CKSRYB104K16
C 301 (A,57 ,39)		CKSRYB104K16
C 302 (A,51 ,39)		CKSRYB104K16
C 303 (A,49 ,39)		CKSRYB104K16
C 304 (B,49 ,26)		CKSRYB104K16
C 305 (B,53 ,30)		CKSRYB105K10
C 308 (B,49 ,30)		CKSRYB104K16
C 311 (B,45 ,35)		CKSRYB104K16
C 312 (A,58 ,20)		CKSRYB105K10
C 313 (B,51 ,22)		CKSRYB104K16
C 314 (A,50 ,20)		CKSRYB104K16
C 315 (B,40 ,20)		CKSRYB103K50
C 316 (A,67 ,41)		CEVW101M16
C 317 (A,39 ,42)		CEVW101M16
C 318 (B,56 ,30)		CKSRYB105K10
C 319 (B,59 ,32)		CKSRYB104K16
C 351 (B,20 ,33)		CKSRYB104K16
C 391 (A,39 ,37)		CKSRYB104K16
C 392 (A,42 ,49)		CKSRYB103K50
C 401 (A,122 ,82)		CEVW101M16
C 402 (A,127 ,80)		CKSRYB104K16
C 403 (A,127 ,75)		CKSRYB104K16
C 404 (A,127 ,72)		CKSRYB104K16
C 405 (A,139 ,63)		CKSRYB104K16
C 406 (A,145 ,64)		CKSRYB104K16
C 407 (B,146 ,65)	CHIP CAPACITOR	CKSRYB823K25
C 408 (B,139 ,65)		CKSRYB103K50
C 409 (A,133 ,58)		CCSRCH100D50
C 410 (A,137 ,58)		CCSRCH8R0D50
C 411 (A,144 ,87)		CKSRYB104K16
C 412 (A,143 ,87)		CKSRYB102K50
C 413 (B,141 ,81)		CKSRYB104K16
C 415 (B,141 ,77)		CKSRYB104K16
C 417 (B,147 ,77)		CKSRYB103K50
C 418 (B,149 ,77)		CKSRYB104K16
C 419 (B,152 ,76)	ELECT. CAPACITOR	DCH1201
C 420 (B,154 ,74)		CKSRYB104K16
C 421 (A,150 ,75)		CKSRYB104K16
C 422 (A,154 ,74)		CKSRYB104K16
C 423 (A,150 ,73)		CKSRYB104K16
C 424 (B,147 ,73)		CKSRYB103K50
C 425 (B,149 ,73)		CKSRYB104K16
C 426 (B,152 ,71)	ELECT. CAPACITOR	DCH1201
C 427 (B,154 ,70)		CKSRYB104K16
C 434 (A,150 ,80)		CEVW100M16
C 435 (A,158 ,74)		CEVW100M16
C 436 (A,154 ,68)		CEVW101M16
C 437 (B,147 ,85)		CKSRYB103K50
C 438 (A,138 ,87)		CKSRYB104K16
C 439 (A,149 ,88)		CEVW101M16
C 452 (A,107 ,78)		CKSRYB104K16
C 453 (A,115 ,69)		CKSRYB104K16
C 454 (A,112 ,67)		CKSRYB104K16
C 501 (A,104 ,59)		CKSRYB103K50
C 502 (A,99 ,63)		CKSRYB104K16
C 503 (A,89 ,89)		CEVW101M16
C 505 (B,105 ,79)		CKSRYB104K16
C 506 (B,80 ,78)		CKSRYB104K16
C 507 (A,95 ,47)		CKSRYB104K16
C 551 (A,91 ,80)		CKSRYB104K16
C 552 (A,92 ,55)		CKSRYB104K16
C 571 (A,22 ,11)		CKSRYB104K16
C 601 (A,151 ,41)		CKSRYB104K16
C 602 (A,152 ,46)		CEVW101M16
C 603 (A,152 ,30)		CKSRYB104K16
C 604 (A,154 ,30)		CKSRYB104K16
C 605 (A,155 ,30)		CKSRYB104K16
C 606 (A,158 ,30)		CKSRYB104K16
C 607 (A,160 ,30)		CKSRYB104K16
C 608 (B,160 ,39)		CKSRYB104K16
C 609 (B,160 ,28)		CKSRYB105K10
C 610 (B,158 ,28)		CKSRYB105K10
C 611 (A,160 ,37)		CKSRYB104K16
C 701 (A,126 ,49)		CKSRYB104K16
C 702 (A,126 ,40)		CKSRYB104K16
C 703 (A,123 ,58)		CEVW101M16
C 704 (A,138 ,37)		CKSRYB104K16
C 705 (A,133 ,36)		CKSRYB104K16
C 706 (A,142 ,53)		CKSRYB104K16
C 707 (A,142 ,50)		CKSRYB104K16
C 708 (A,142 ,46)		CKSRYB104K16

Mark	No.	Description	Part No.
	C 709 (A,142 ,41)		CKSRYB104K16
	C 710 (A,147 ,34)		CEVW101M16
	C 711 (A,132 ,52)		CKSRYB103K50
	C 712 (A,142 ,54)		CKSRYB104K16
	C 713 (A,128 ,52)		CKSRYB104K16
	C 714 (A,148 ,39)		CKSRYB105K10
	C 801 (A,152 ,53)		CEVW101M16
	C 802 (B,133 ,39)		CKSRYB104K16
	C 804 (B,135 ,53)		CKSRYB104K16
	C 805 (B,138 ,53)		CKSRYB105K10
	C 806 (B,140 ,53)		CKSRYB105K10
	C 807 (B,143 ,53)		CKSRYB104K16
	C 808 (B,147 ,53)		CKSRYB105K10
	C 809 (B,150 ,53)		CKSRYB104K16
	C 810 (B,152 ,53)		CKSRYB104K16
	C 811 (A,152 ,60)		CEVW101M16
	C 901 (B,105 ,30)		CKSRYB105K10
	C 902 (B,101 ,30)		CKSQYB225K10
	C 904 (B,97 ,30)		CKSRYB105K10
	C 905 (B,88 ,33)	CHIP CERAMIC C.	DCG1028
	C 907 (B,118 ,34)		CKSRYB105K10
	C 908 (B,109 ,30)		CKSQYB225K10
	C 910 (B,117 ,57)		CKSRYB105K10
	C 911 (B,117 ,52)		CCSRCH471J50
	C 912 (B,122 ,48)		CKSQYB225K10
	C 915 (B,75 ,29)		CKSRYB224K16
	C 916 (B,75 ,33)		CKSQYB105K16
	C 917 (B,65 ,39)		CKSRYB104K16
	C 918 (A,72 ,33)		CEVW101M16
	C 1001(A,100 ,27)		CKSRYB104K16
	C 1002(A,101 ,31)		CEVW101M16

• FM/AM TUNER MODULE

FM/AM TUNER MODULE has no service parts.

6. ADJUSTMENT

There is no information to be shown in this chapter.

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 TEST MODE

■ Version indication

[Purpose]

The versions for various microcomputers and DSP firmware are displayed.

[How to enter/exit]

During Standby mode, simultaneously press and hold the STANDBY/ON and STANDARD SURROUND keys for 5 seconds to enter this mode. This mode is automatically exited when the indications of all versions have finished.

[Basic operations]

FL Display	Description of Version Indications	Duration (sec.)	Devices that can be considered generally normal, with the corresponding indications
POWER OFF ↓			
M1.000 F1.000 ↓	Mx.xxx : Main microcomputer Fx.xxx : Display microcomputer	5	Main microcomputer and display microcomputer
D1.000 H1.000 ↓	Dx.xxx : DSP microcomputer Hx.xxx : HDMI microcomputer	5	DSP microcomputer and HDMI microcomputer
HOST 00 ↓	HOST microcomputer (only VSX-74TXVi)	5	HOST microcomputer for iLINK connection
f1.000 s1.000 ↓	fx.xxx : 1st DSP firmware sx.xxx : 2nd DSP firmware	5	1st DSP firmware : Flash ROM (IC105) near the DSP IC 2nd DSP firmware : Flash ROM within the DSP IC (IC201)
Normal display			

[Notes]

1. If the version indication becomes "**," a failure in communications between the corresponding microcomputers or a failure in the corresponding microcomputers is likely.
2. In this submode, the user settings will not be cleared.

■ Detected protection history

[Purpose]

The numbers of detections for various protection processes are displayed.

[How to enter/exit]

During Standby mode, simultaneously press and hold the ADVANCED SURROUND and "↑" (TUNE +) keys for 5 seconds to enter this mode. This mode is automatically exited when all the indications have finished.

[Basic operations]

FL Display	Description of Indications	Duration (sec.)
POWER OFF ↓		
DC : 000	Number of DC detections	3
↓ OVER: 010	Number of overload detections	3
↓ CON : 002	Number of detections of cord disconnection (DC and OL DET line) (simultaneous detections of DC and OVERLOAD)	3
↓ FAN : 000	Number of detections of fan abnormalities *1	3
↓ TEMP: 255	Number of detections of abnormal temperature	3
↓ Normal display		

*1 The number is not counted in this North America model, because these models have no FAN.

[Description]

When the keys are pressed, the numbers of DC detections, overload detections, detections of connectors disconnection inside unit (It is detected by both DC and OVERLOAD detections.), and detections of abnormal temperature are displayed for 3 seconds each, in that order.
The maximum value of each detections is 255.

■ Error indications when an abnormality in the amplifier system is detected

[Purpose]

An error message is displayed when an abnormality in the amplifier system is detected.

[Error Messages]

FL Display	Status	Duration (sec.)
AMP ERROR	When AMP DC is detected	Flashes 3 times.
OVERHEAT	When a thermal shutdown (abnormal temperature), etc. is detected	Flashes 3 times.
12V TRG ERR	When the 12-V trigger circuit is short-circuited	Flashes

[Description]

AMP ERROR : After a failure in the amplifier block or high DC output is detected, the shutdown process starts, then the power will be shut off. Then the MCACC LED will flash. The power cannot be turned on again. If you wish to turn on the unit after a shutdown activated by DC detection, enter Test mode, by proceeding with the steps described in "How to enter release mode" below.

OVERHEAT : The temperature of the amplifier is abnormally high.

12V TRG ERR : The 12-V trigger output is short-circuited.

After a failure is detected, the shutdown process starts, then the power will be off. The power can be turned on again in Normal mode.

[How to enter release mode]


Press and hold "ADVANCED SURROUND" and "ENTER" keys on the front panel simultaneously for 5 seconds in standby mode.

7.1.2 PROTECTION CIRCUIT SPECIFICATION


● Protection Circuit Process List

Item	Purpose	Detection Method	Process	Warning Indication	Remarks
DC detection	To detect amplifier damage (defect status) A process to protect speakers (for protection of connected external devices)	Detects when the DC_PROTECT port becomes "L". (Pin 120 of IC101)	Turns muting on and speaker relay off, then turns off the power after 3 seconds. Then flashes MCACC indicator.	Flashing "AMP ERR" for 3 seconds.	Once detected and turned the power off, input a key never again. If the DC_DET port becomes "L" within 3 seconds, the unit returns to normal condition automatically.
AMP overload	To detect overloading (abnormal status) With low-load driving or a short circuit of the speaker terminals (for protection of the amplifier)	Detects when the OL_DET port becomes "L" (checks by interrupt). (Pin 28 of IC101)	Turns muting on and speaker relay off, and immediately turns off the power. Then flashes PHASE CONTROL indicator.	None	
Overheat detection	Self reset type protection feature by temperature-rise of heat sink	Detects when the TEMP2 port becomes "H" . (Pin 44 of IC3201)	Turns muting on and speaker relay off, then turns off the power after 3 seconds.	Flashing "OVERHEAT" for 3 seconds.	If the TEMP2 port becomes "L" within 3 seconds, the unit returns to normal condition automatically.
12V trigger failure detection	To detect the shortcircuit of 12V trigger output (load more than 50mA) (for protection of the amplifier)	Detects when the 12VDET port becomes "H" . (Pin 41 of IC3201)	Turns 12V trigger output to off.	Flashing "12V TRG ERR" for 3 seconds.	Continue showing warning. Release the FL indication by switching the INPUT SEL or the turns the power off.

● DC Detection Circuit

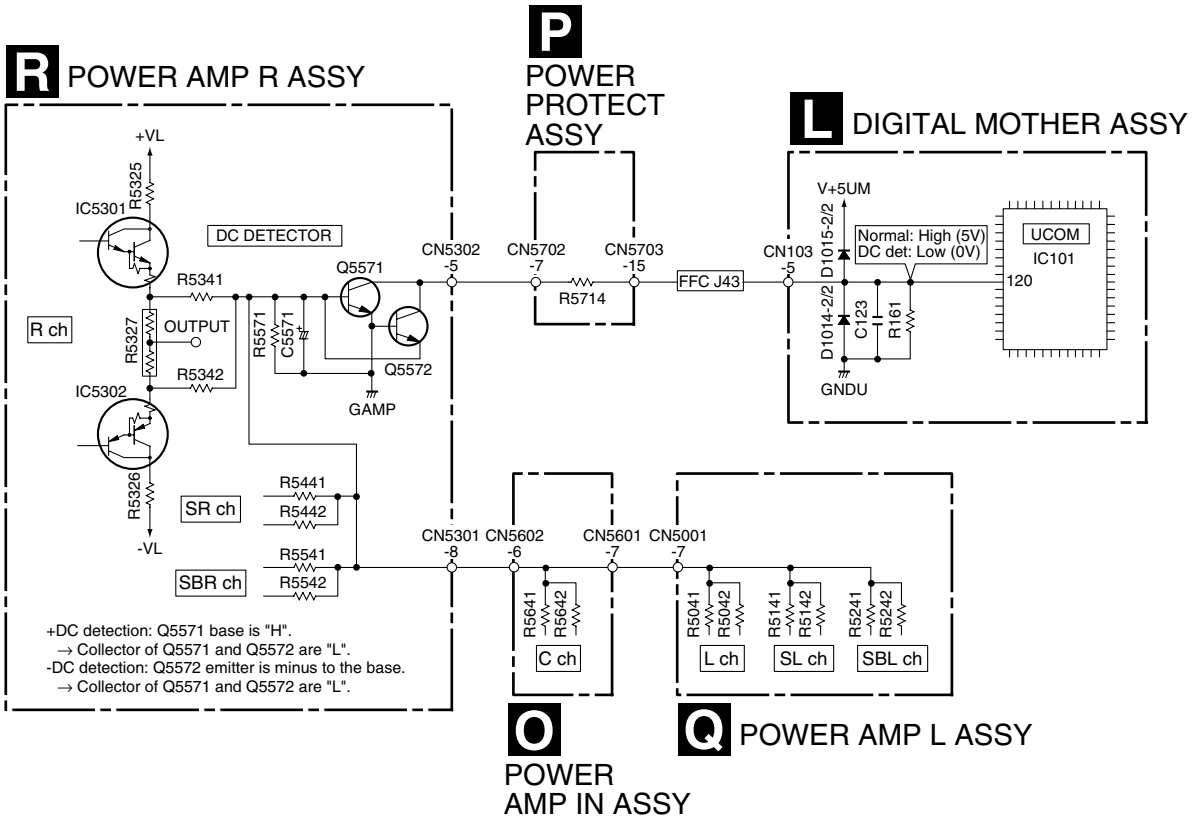

● OL (Over Load) Detection Circuit

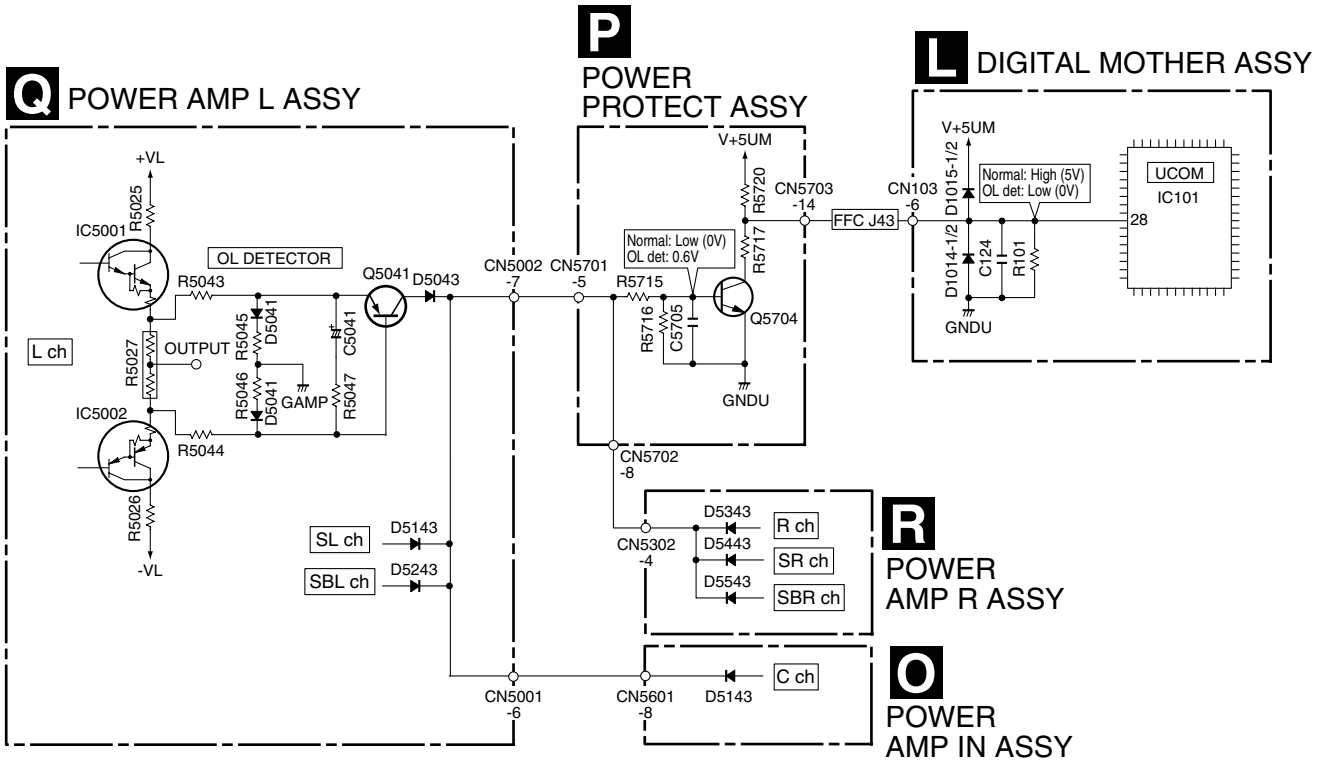

7.1.3 TROUBLESHOOTING THE DSP BLOCK

■ Simplified diagnosis

Herein is described how to easily diagnose a defective part in the DSP Assy, only with operations of the main unit.


- **Is the DSP Assy a cause of the problem?**
  Input a digital PCM signal (CD, etc.) and check if the sound is output, by switching AUTO SURR/STREAM DIRECT.
  If the sound is output in PURE DIRECT (PCM DIRECT) mode but not in AUTO SURR or DIRECT mode, the DSP Assy may be defective.

- **If the sound is not output when Sound Delay is ON**
  If the sound is output without a problem when Sound Delay is OFF (0.0 fr) but an abnormality in the sound is detected when Sound Delay is ON (0.1 - 6.0 fr), it is most likely that SRAM (IC106) or DECODER IC (IC104) in the 1st DSP block is in failure.


■ Troubleshooting


- It is assumed that there is no loose connection or damage in the LCRs.
- Refer to "DSP Block Diagram" and "DSP Assy check point" as the parts marked Ⓐ to Ⓦ in the troubleshooting are located.


Step 1: Connections

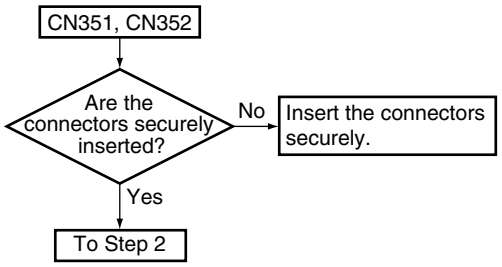


Step 2: Power supply

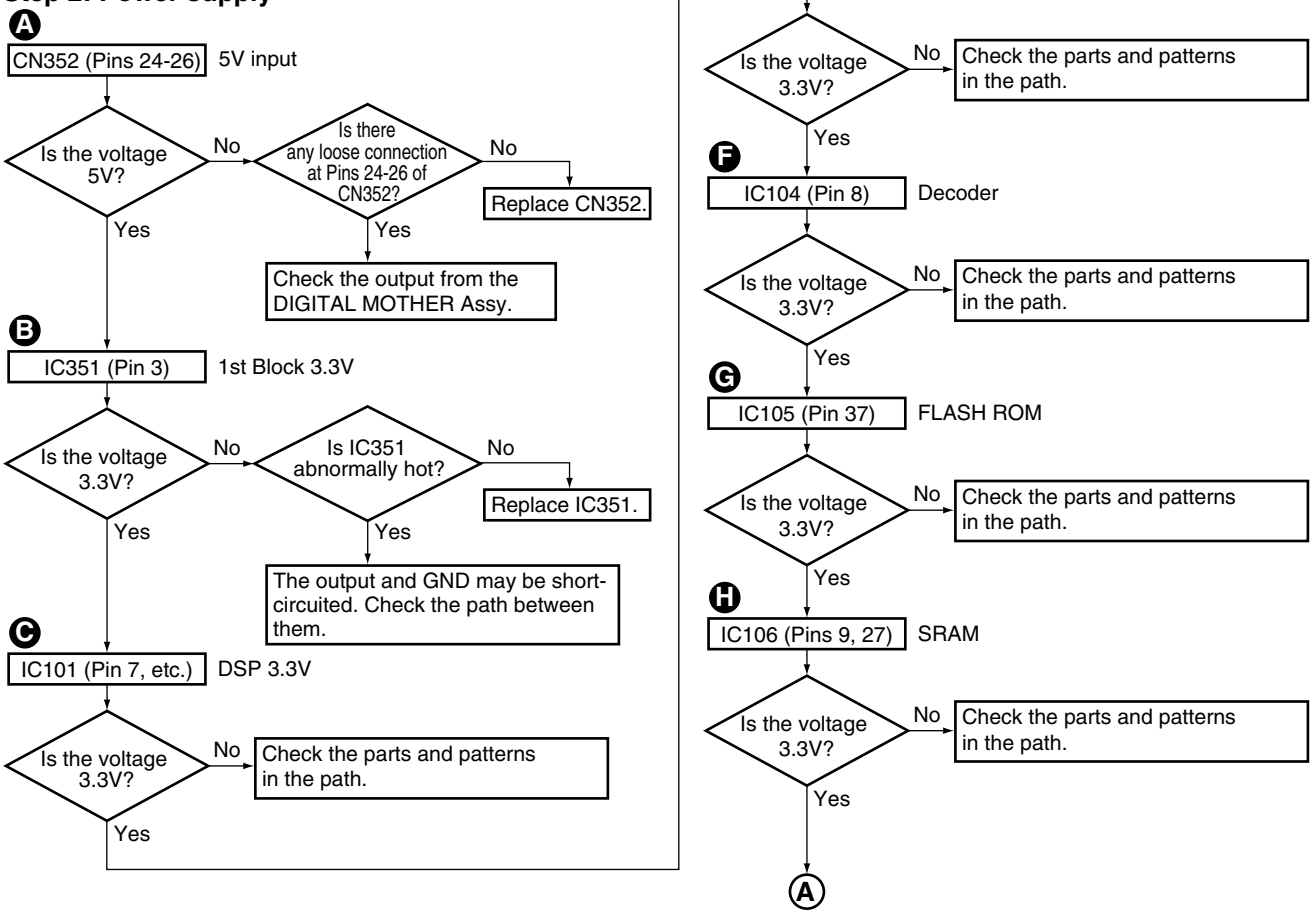

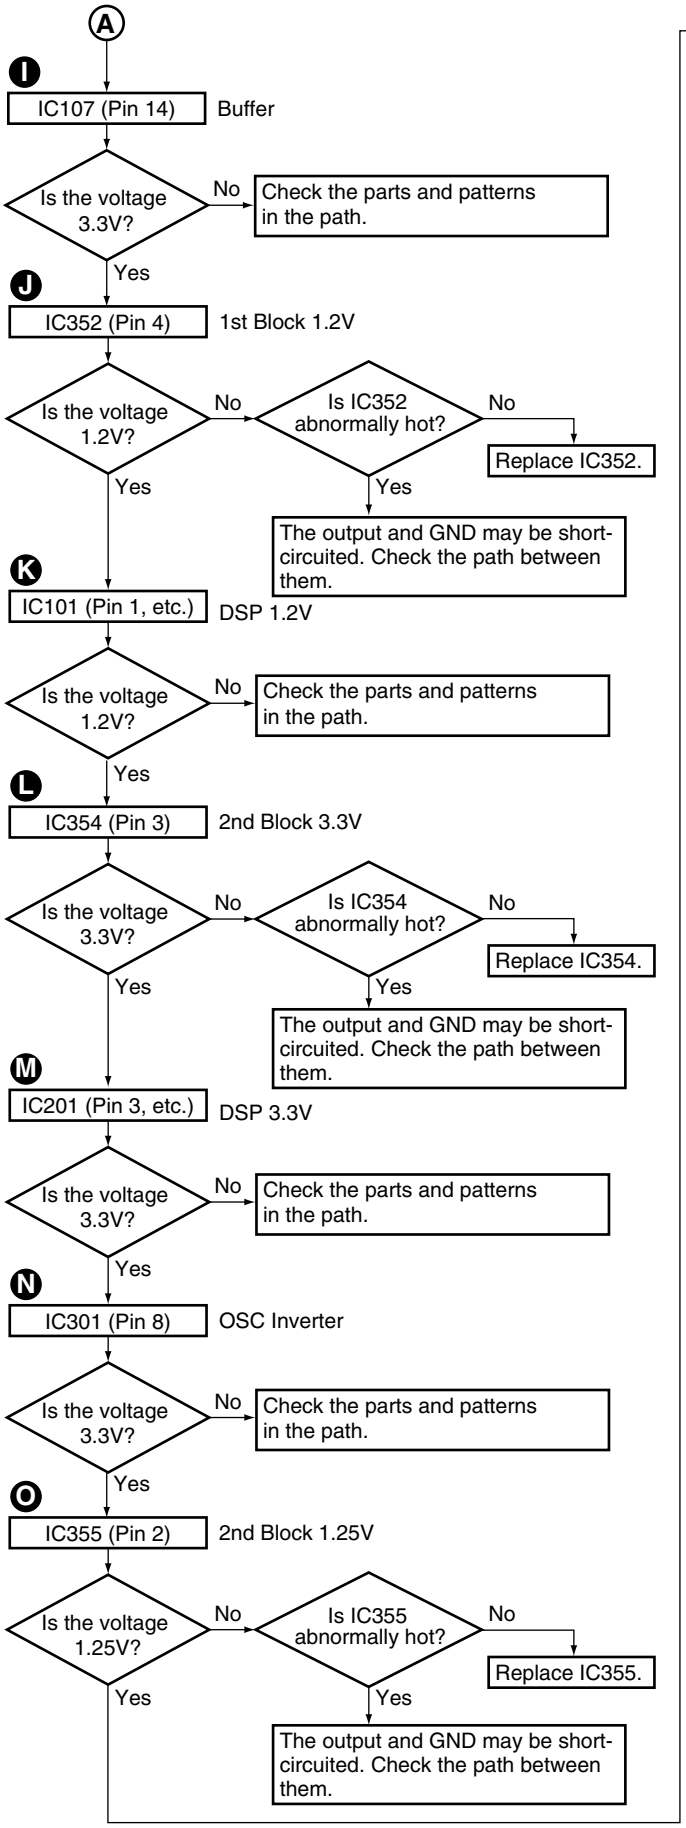


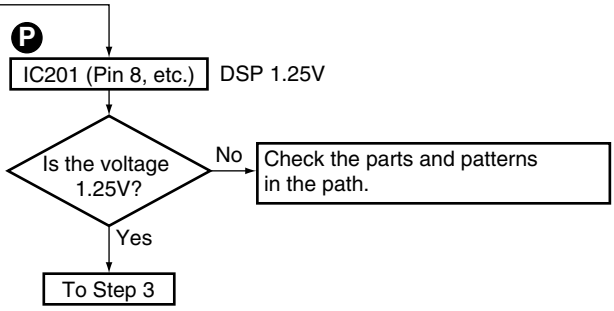


Step 3: Operation of the Master Clock

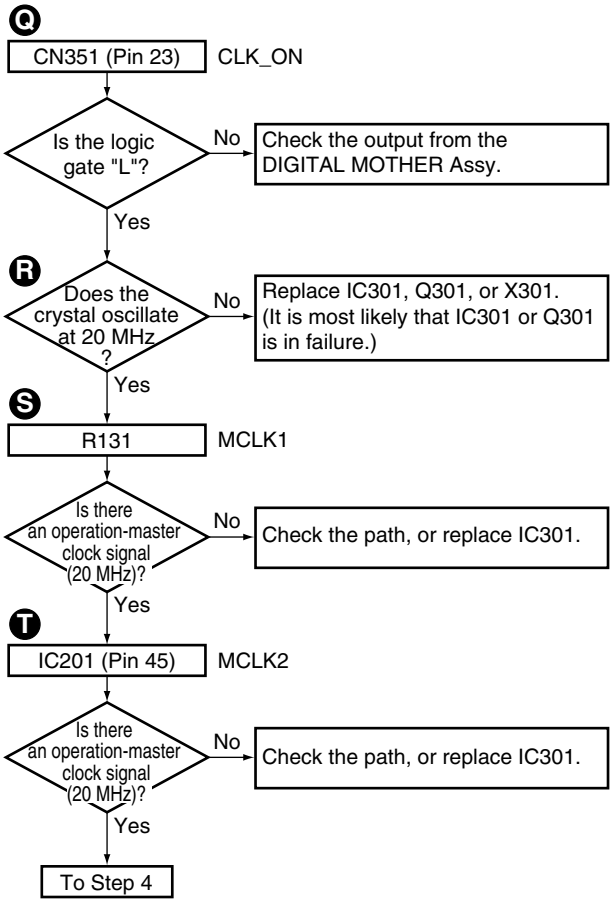


Step 4: Audio Clock

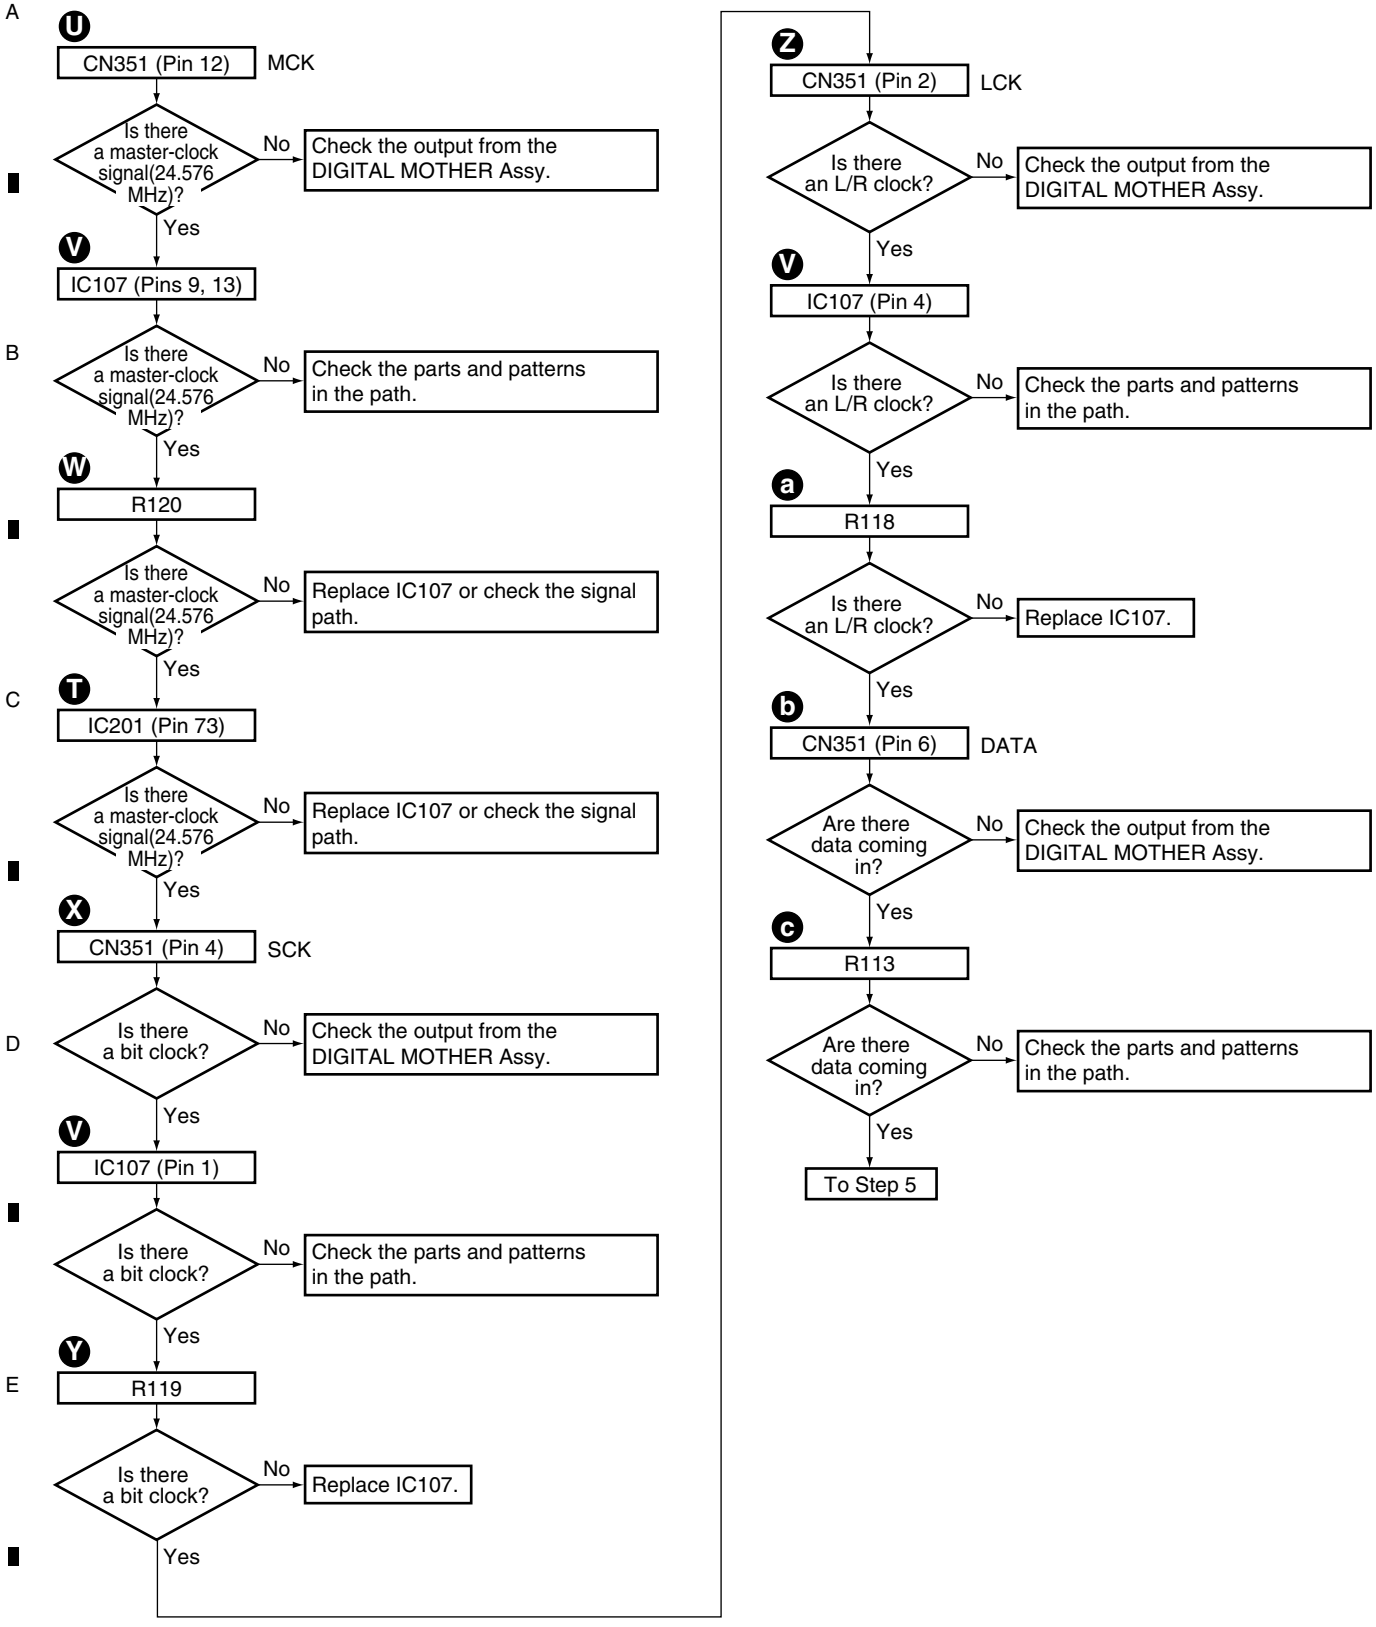


Step 5

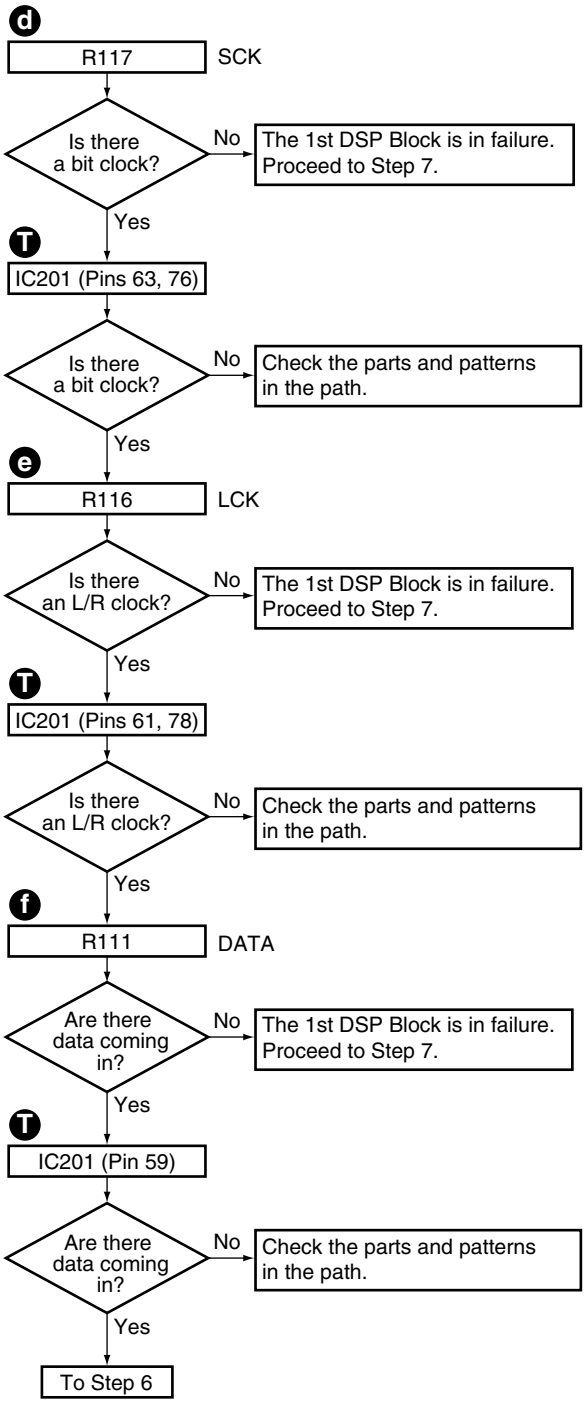
d
R117
SCK
Is there a bit clock?
No
The 1st DSP Block is in failure. Proceed to Step 7.
Yes
T
IC201 (Pins 63, 76)
Is there a bit clock?
No
Check the parts and patterns in the path.
Yes
e
R116
LCK
Is there an L/R clock?
No
The 1st DSP Block is in failure. Proceed to Step 7.
Yes
T
IC201 (Pins 61, 78)
Is there an L/R clock?
No
Check the parts and patterns in the path.
Yes
f
R111
DATA
Are there data coming in?
No
The 1st DSP Block is in failure. Proceed to Step 7.
Yes
T
IC201 (Pin 59)
Are there data coming in?
No
Check the parts and patterns in the path.
Yes
To Step 6


Step 6

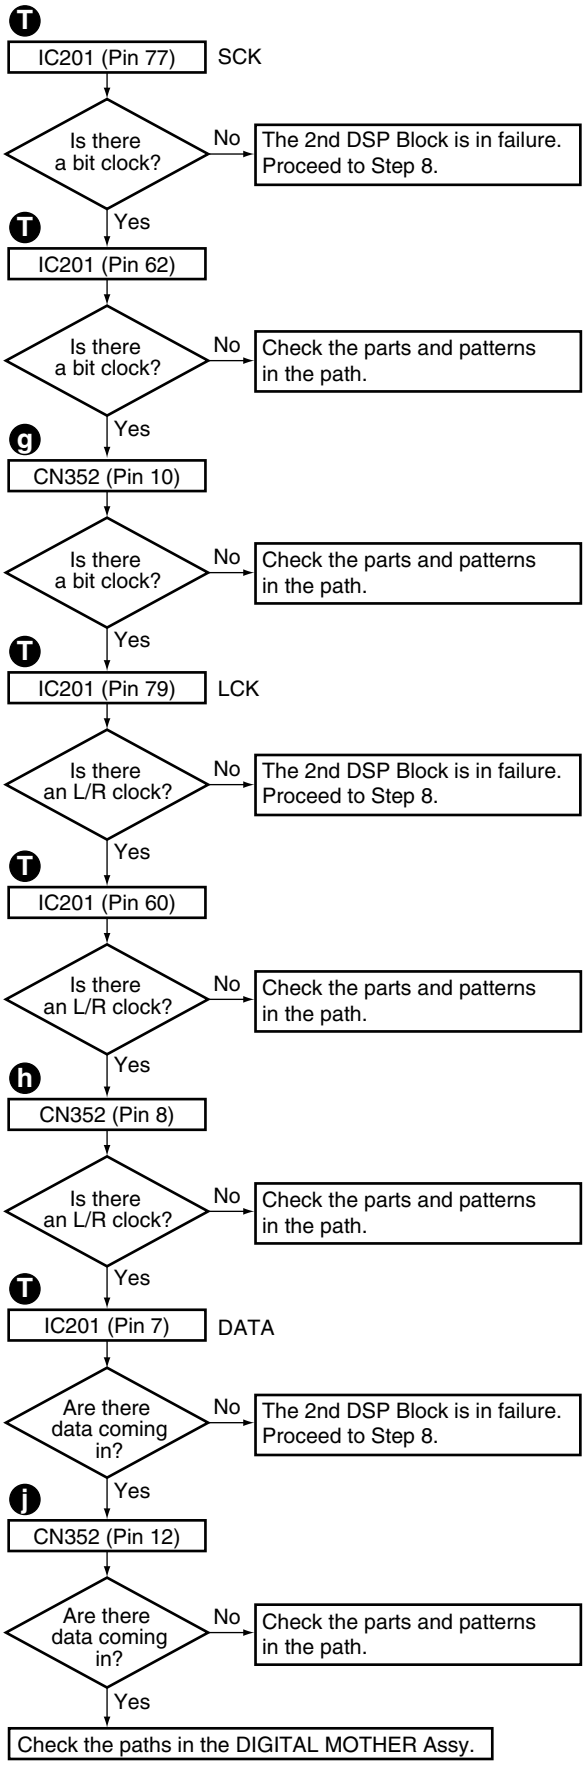
T
IC201 (Pin 77)
SCK
Is there a bit clock?
No
The 2nd DSP Block is in failure. Proceed to Step 8.
Yes
T
IC201 (Pin 62)
Is there a bit clock?
No
Check the parts and patterns in the path.
Yes
g
CN352 (Pin 10)
Is there a bit clock?
No
Check the parts and patterns in the path.
Yes
T
IC201 (Pin 79)
LCK
Is there an L/R clock?
No
The 2nd DSP Block is in failure. Proceed to Step 8.
Yes
T
IC201 (Pin 60)
Is there an L/R clock?
No
Check the parts and patterns in the path.
Yes
h
CN352 (Pin 8)
Is there an L/R clock?
No
Check the parts and patterns in the path.
Yes
T
IC201 (Pin 7)
DATA
Are there data coming in?
No
The 2nd DSP Block is in failure. Proceed to Step 8.
Yes
i
CN352 (Pin 12)
Are there data coming in?
No
Check the parts and patterns in the path.
Yes
Check the paths in the DIGITAL MOTHER Assy.

Step 7: 1st DSP

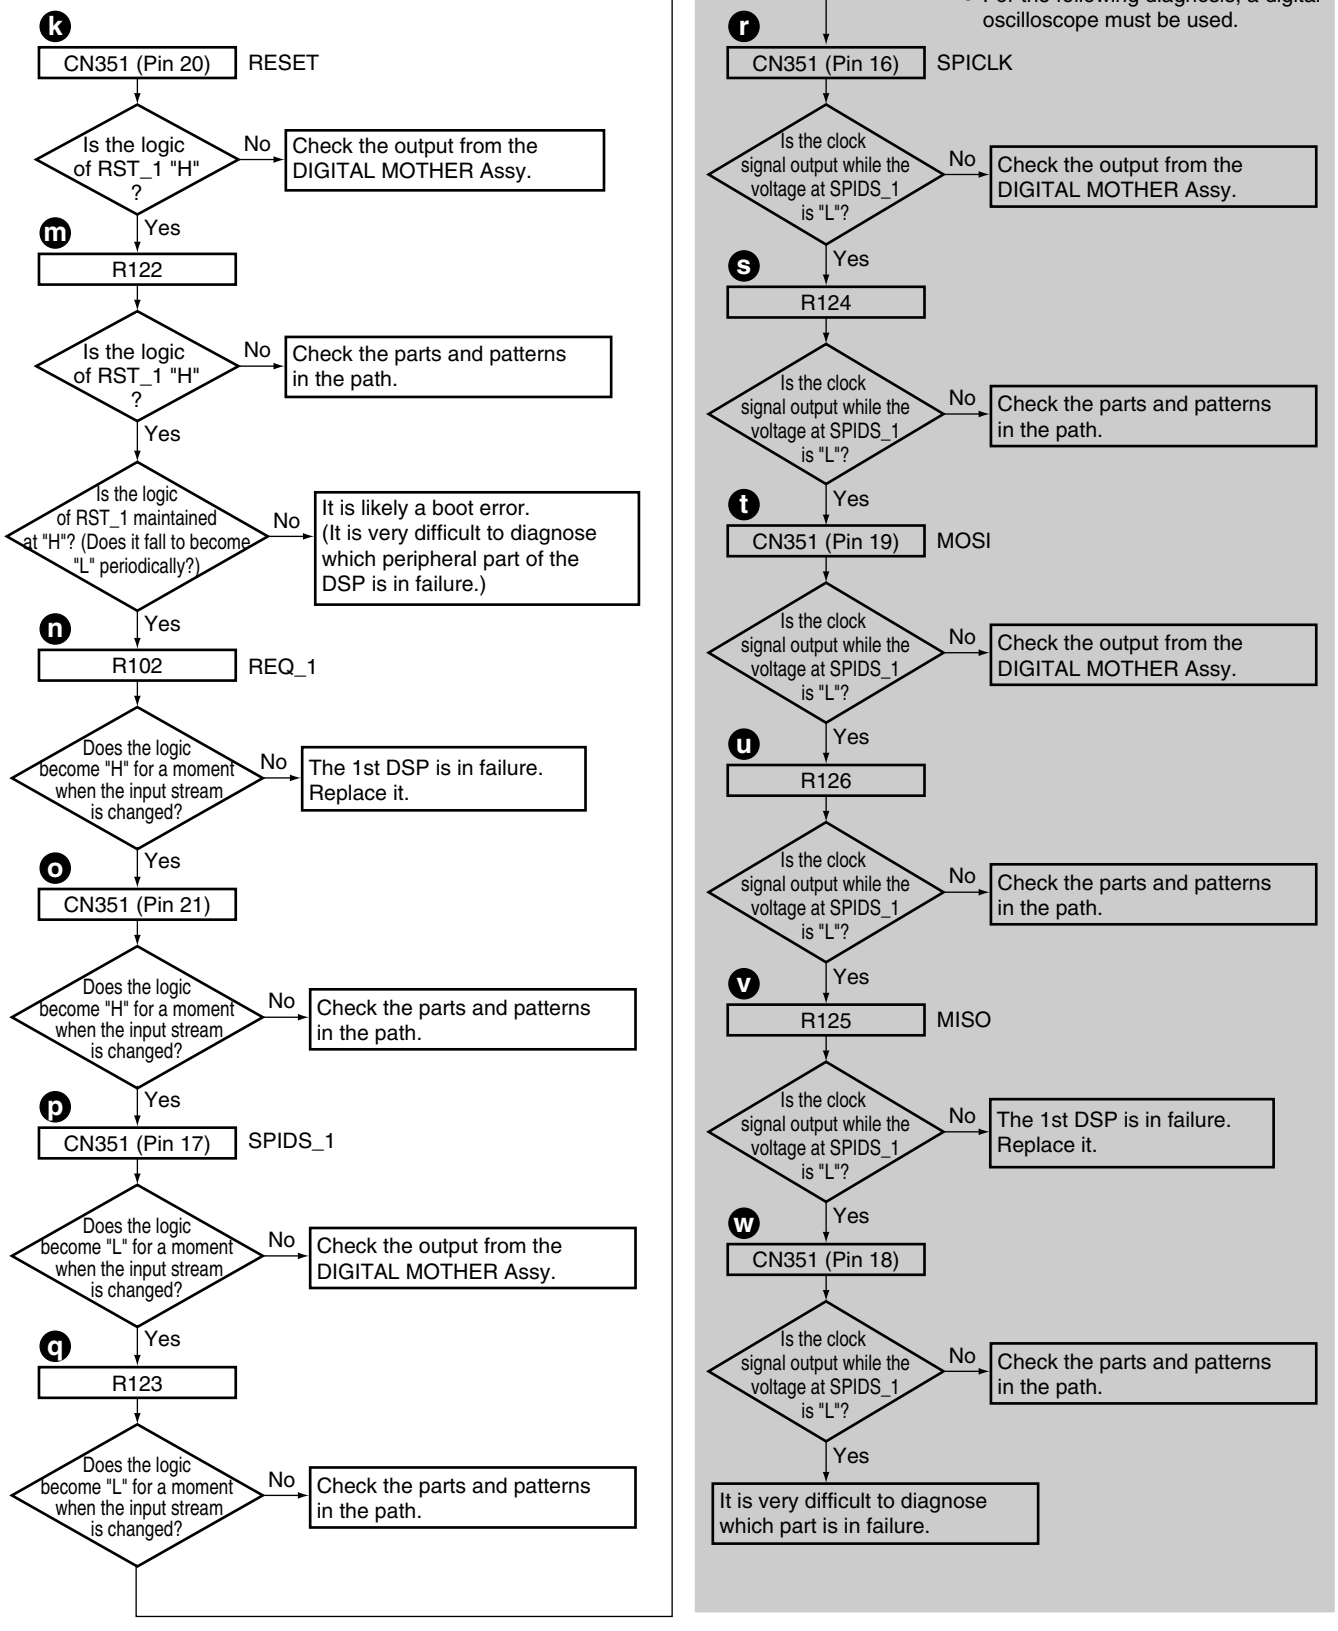


Step 8: 2nd DSP

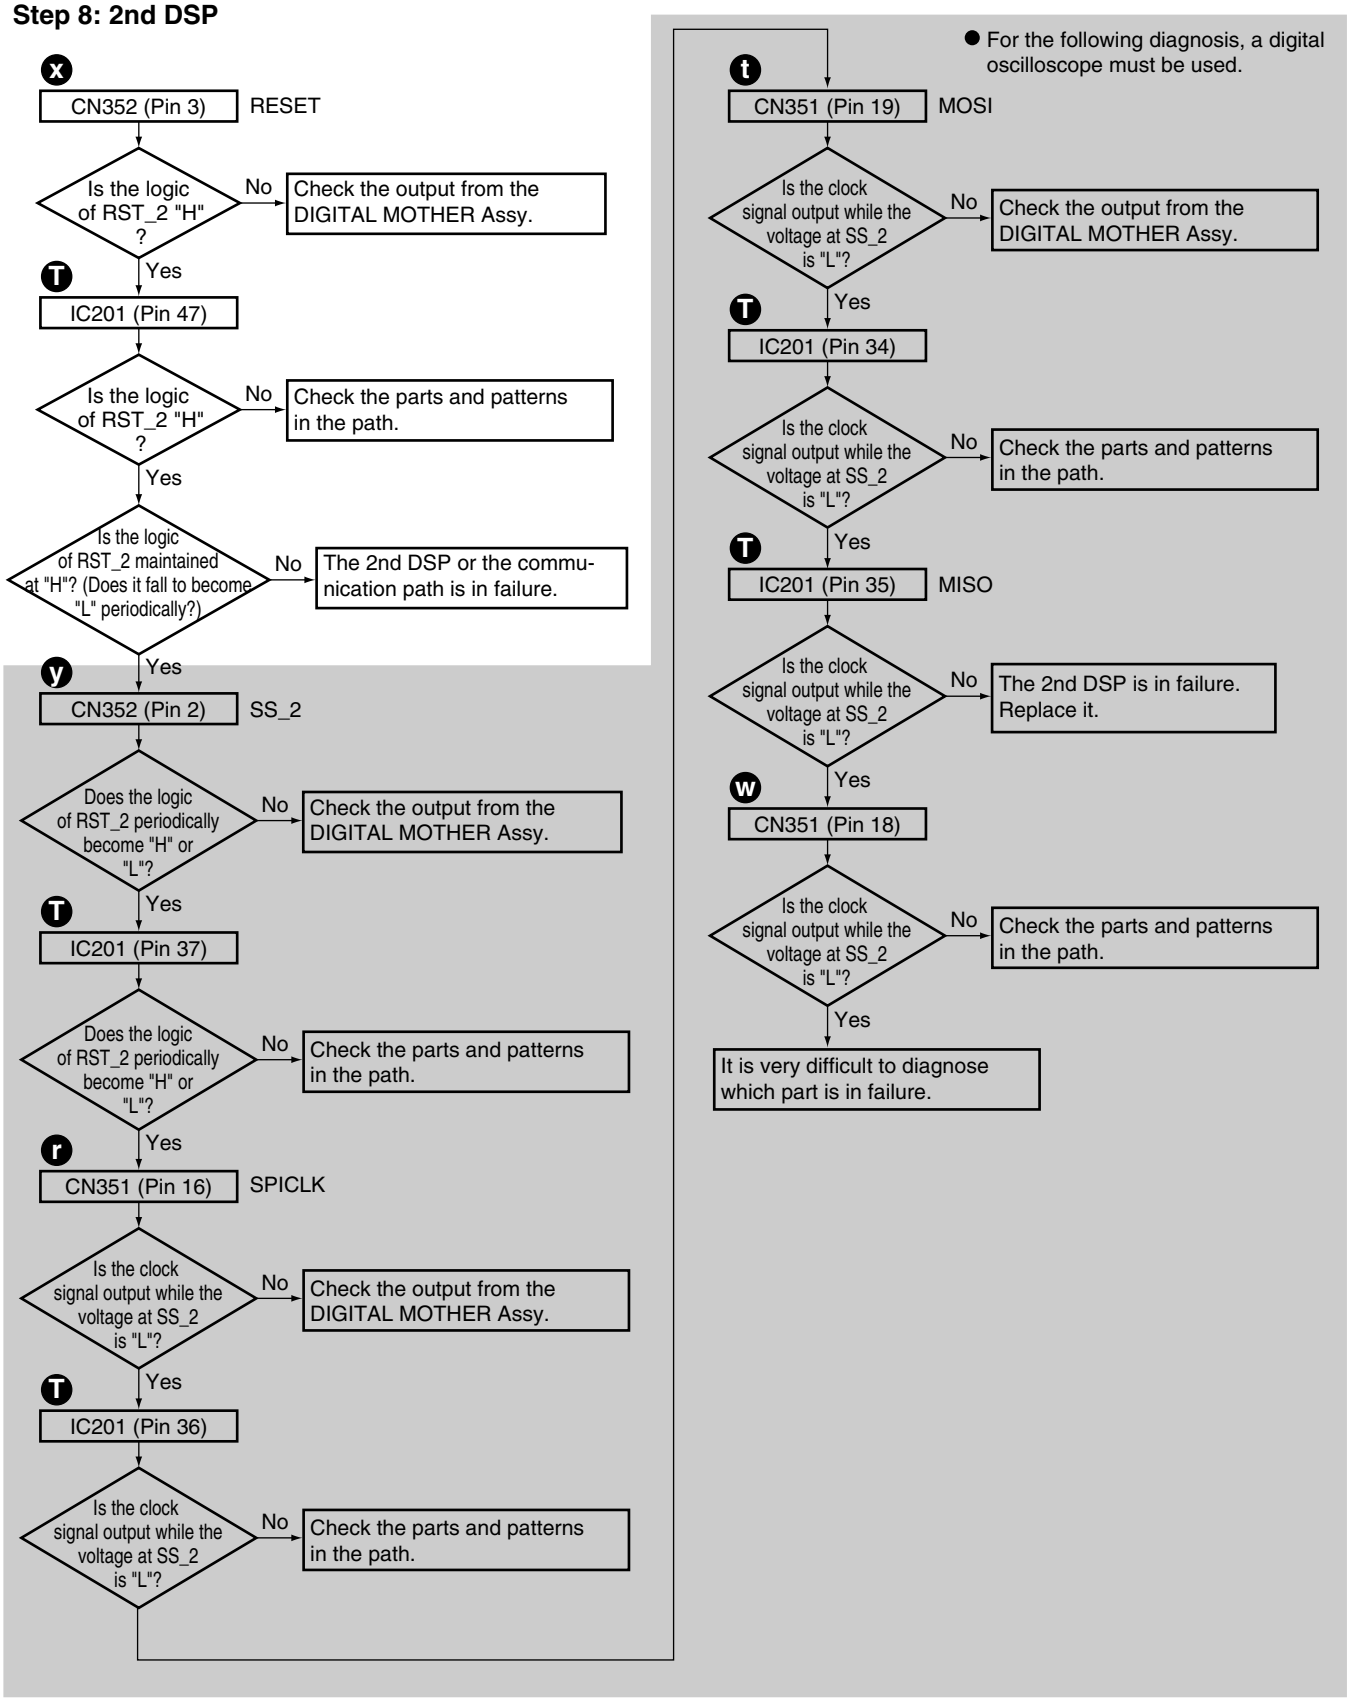


■ DSP Block Diagram


• CORE Block

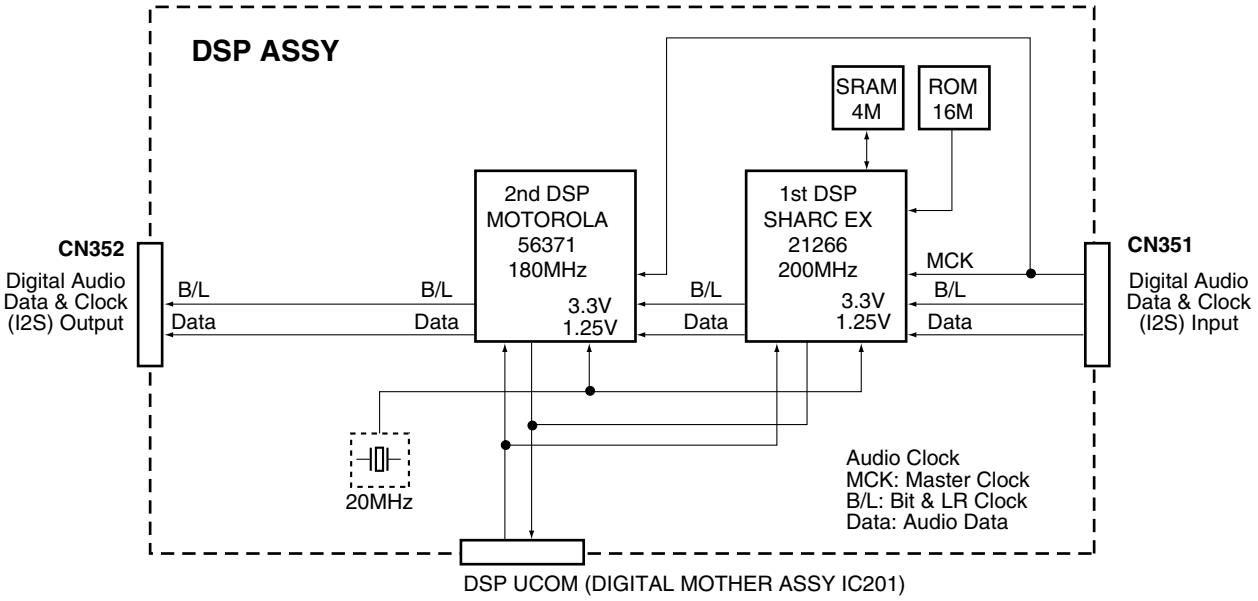

• Power Block and GND Map

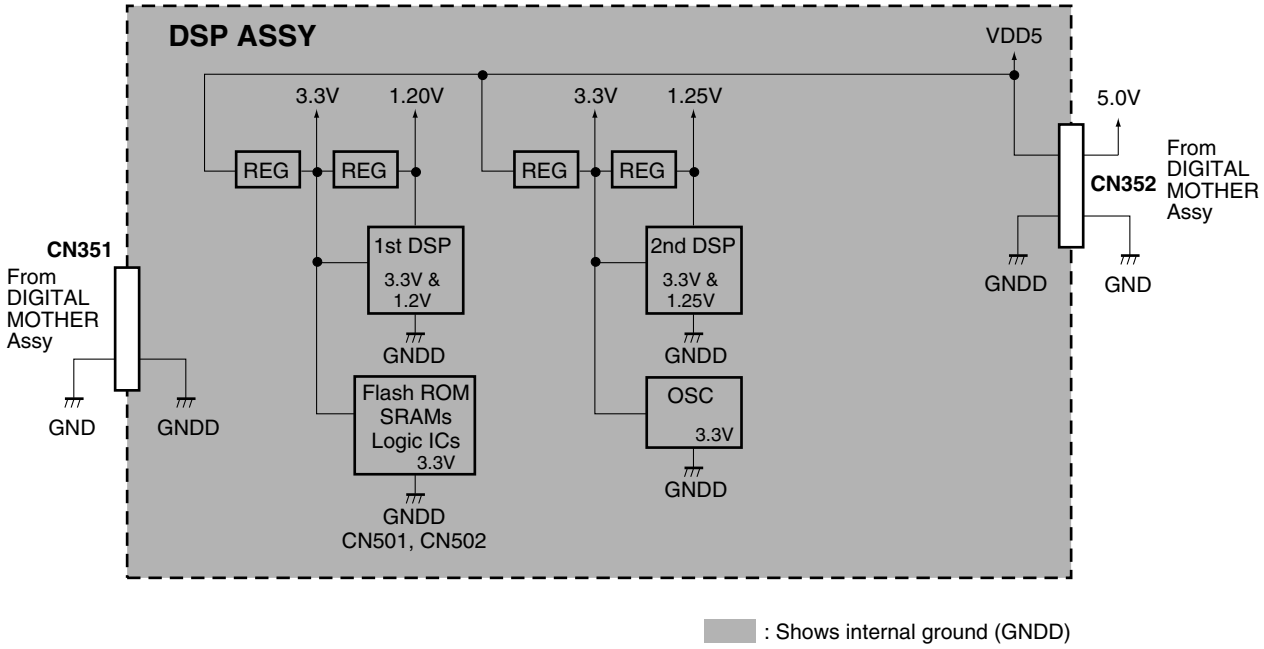

■ DSP Assy Check Points

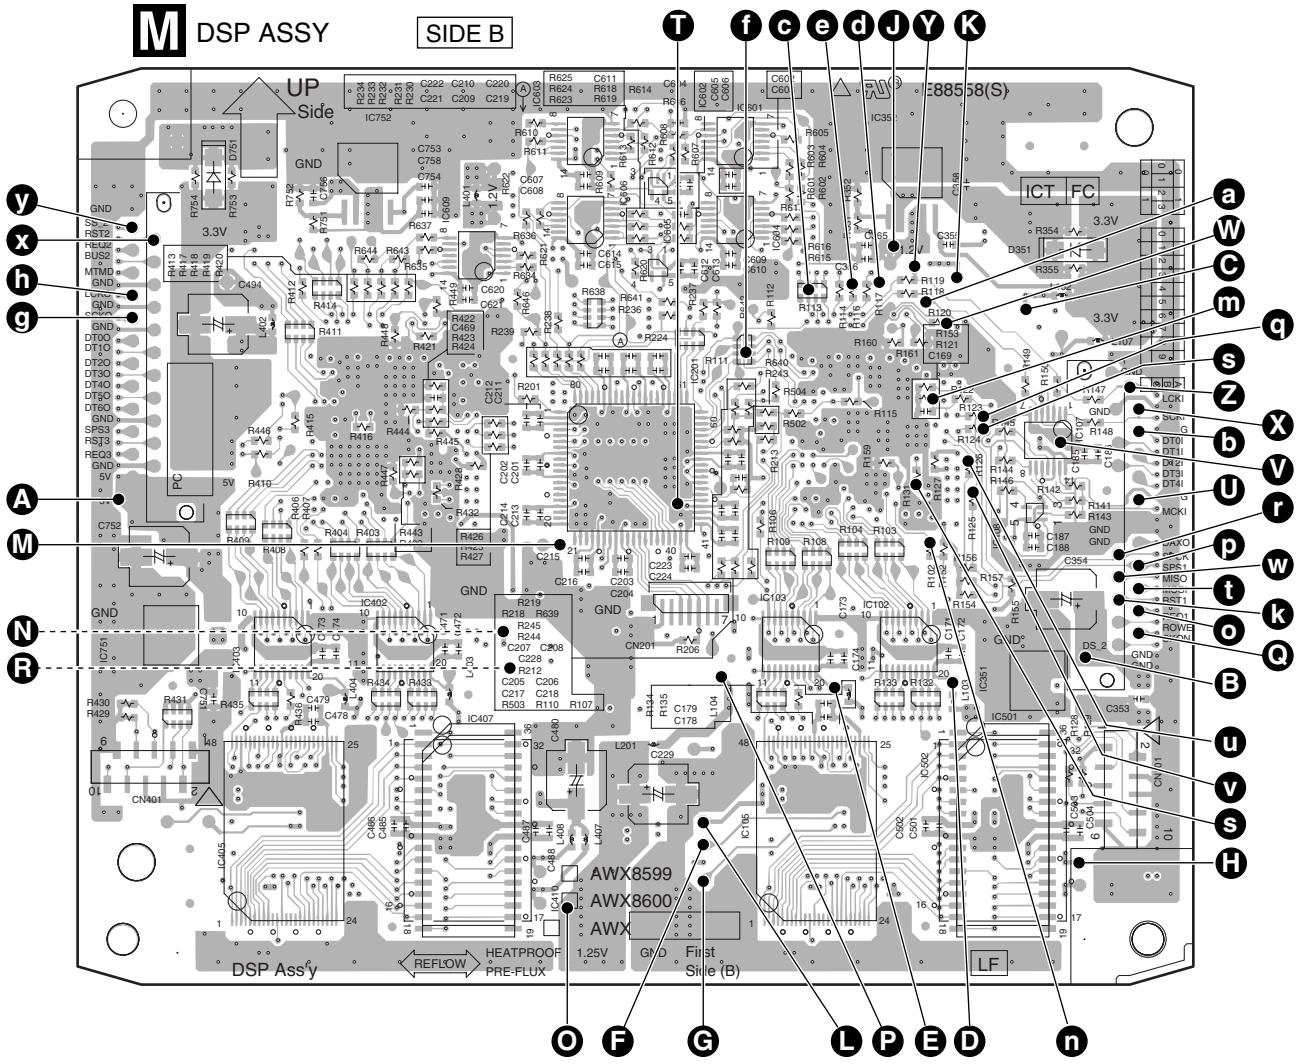

7.1.4 DIAGNOSIS OF THE HDMI BLOCK AND RELATED SYSTEMS

■ HDMI Simple Diagnosis

Please refer to the one point trouble shooting first before checking the flow chart on the next page.

HDMI

Symptom	Remedy
The HDMI indicator blinks continuously.	Check all the points below.
No picture or sound.	• This receiver is HDCP-compatible. Check that the components you are connecting are also HDCP-compatible. If they are not, please connect them using the component, S-video or composite video jacks. • Depending on the connected source component, itís possible that it will not work with this receiver (even if it is HDCP-compatible). • If the problem still persists when connecting your HDMI component directly to your monitor, please consult the component or monitor manual or contact the manufacturer for support.
No picture.	• If your display device is not SD (480i) compatible then neither the setup screens or the 480i to HDMI converted video will be displayed. In this case, connect using the component, S-video or composite video jacks. • Depending in the output settings of the source component, it may be outputting a video format that can't be displayed. Change the output settings of the source, or connect using the component, S-video or composite jacks.
No sound, or sound suddenly ceases.	• Check that the HDMI AV setting is set to **AMP/THROUGH**. • If the component is a DVI device, use a separate connection for the audio. • If analog video is being output over HDMI then there will be no HDMI audio output. Please use a separate connection for the audio. • Check the audio output settings of the source component.


Note:

1 • An HDMI connection can only be made with DVI-equipped components compatible with both DVI and High Bandwidth Digital Content Protection (HDCP). If you choose to connect to a DVI connector, you will need a separate adaptor (DVI → HDMI) to do so. A DVI connection, however, does not support audio signals. Consult your local audio dealer for more information.
• This unit has been designed to be compliant with HDMI (High Definition Multimedia Interface) Version 1.1. Depending on the component you have connected, using a DVI connection may result in unreliable signal transfers. Also, when using a component with HDMI version 1.0, it is not possible to output copy-controlled DVD-Audio CPPM sources from the HDMI connection.
• SACD playback is not possible when using the HDMI connection.

2 To see this receiver's on-screen display, monitors (or projectors) must be compatible with 480i resolution digital video.

Digital Video Converting System

The following chart is for video converting. As you can see HDMI input signal is output to HDMI output terminal only. Other analog inputs can be converted to HDMI output signal.

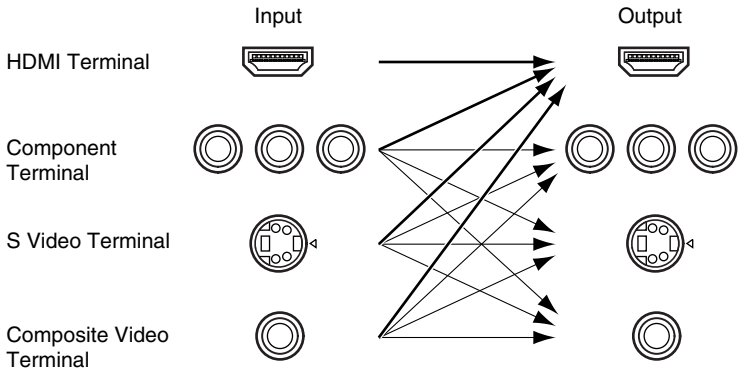

Note: Down converting for component signal is limited with contents with macro vision.


HDMI Audio routing line


As the audio out from HDMI output terminal, only HDMI input terminal is output. No audio out from other input sources.

Input		Output
HDMI	→	HDMI
		Pre out
		SP Out

■ Status confirmation


The following charts are based on the HDMI connection below.

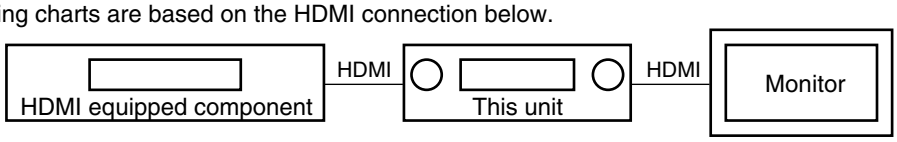

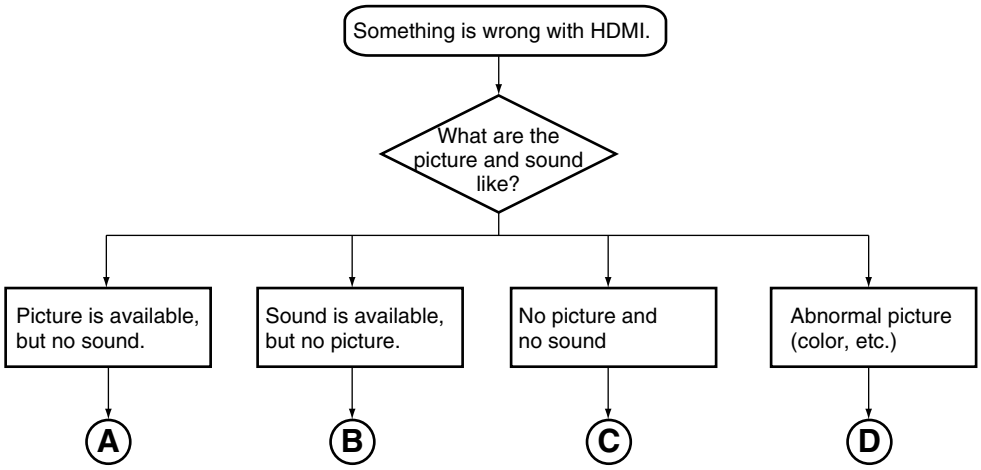


- In either case, check the connection cables, input selection, and initial settings of the unit first.
- "Analog video" hereinafter means composite, S, or component video.
- "Audio cable" hereinafter means either analog or digital audio connection cables.
- "display" hereinafter means HDMI-compatible monitor or plasma display.


■ In a case where picture is available, but no sound

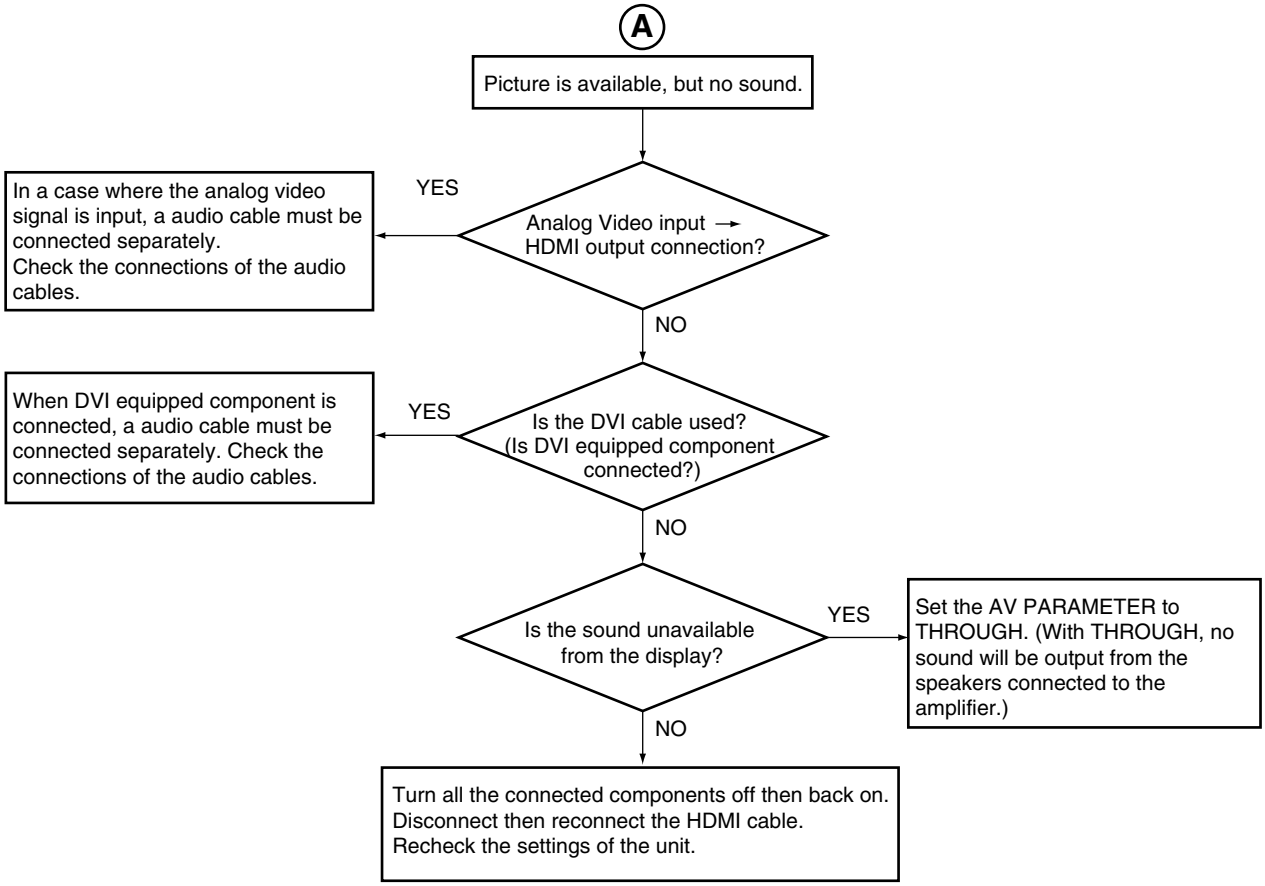

■ In a case where the sound is available, but no picture

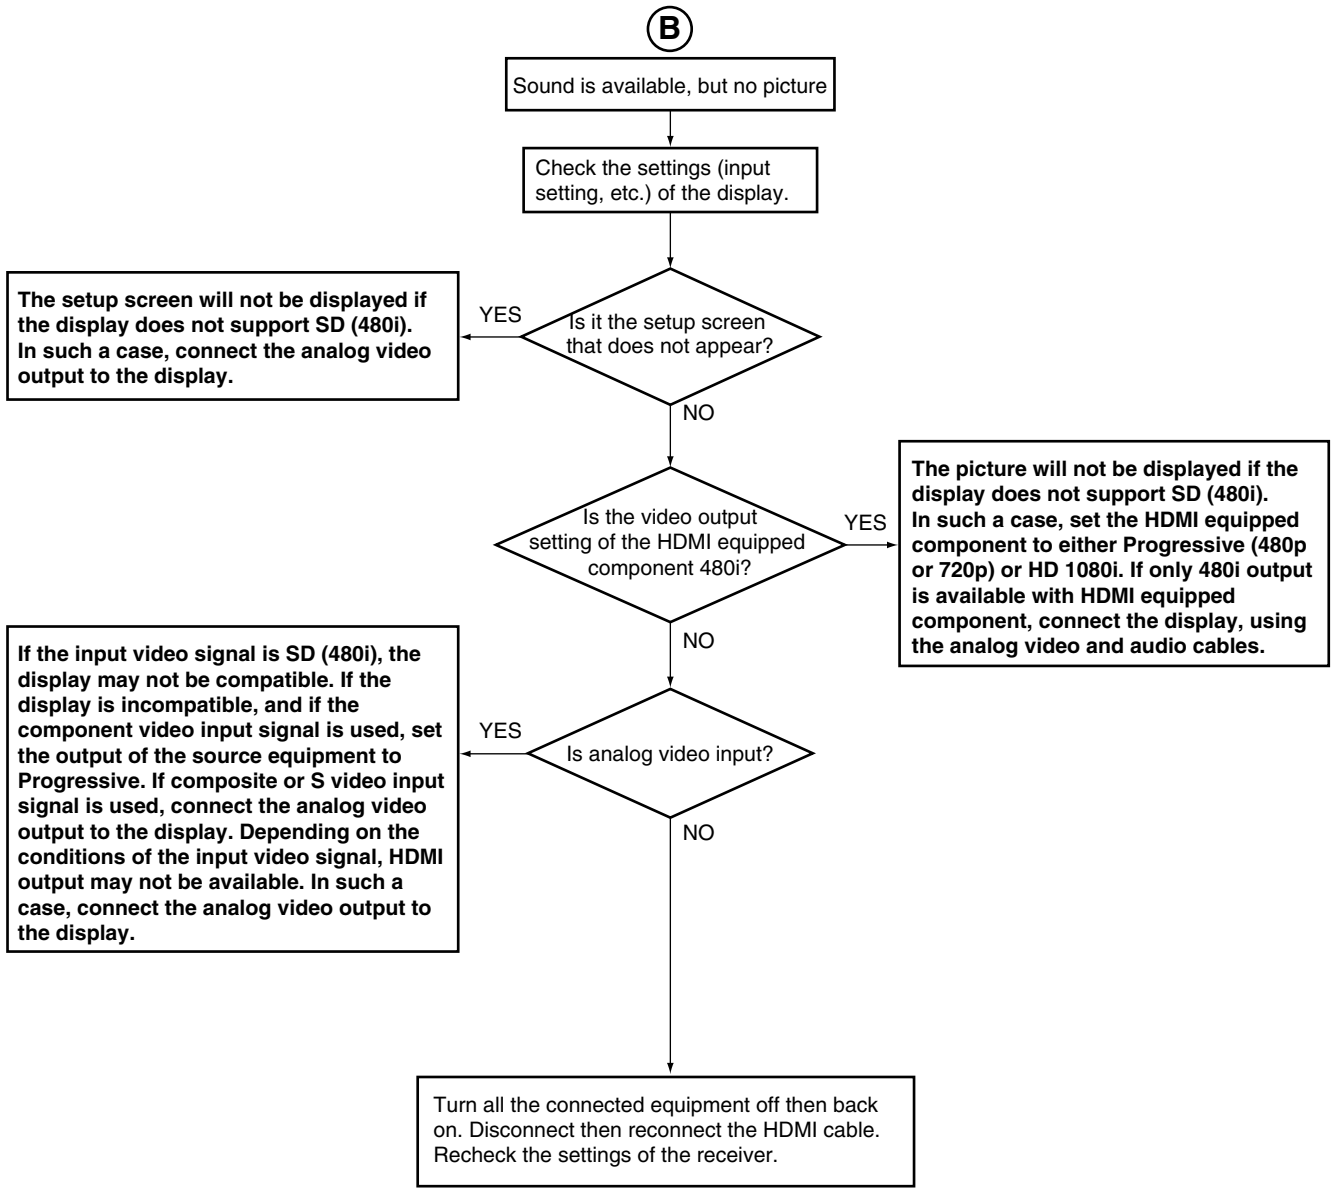


■ In a case of no picture and no sound

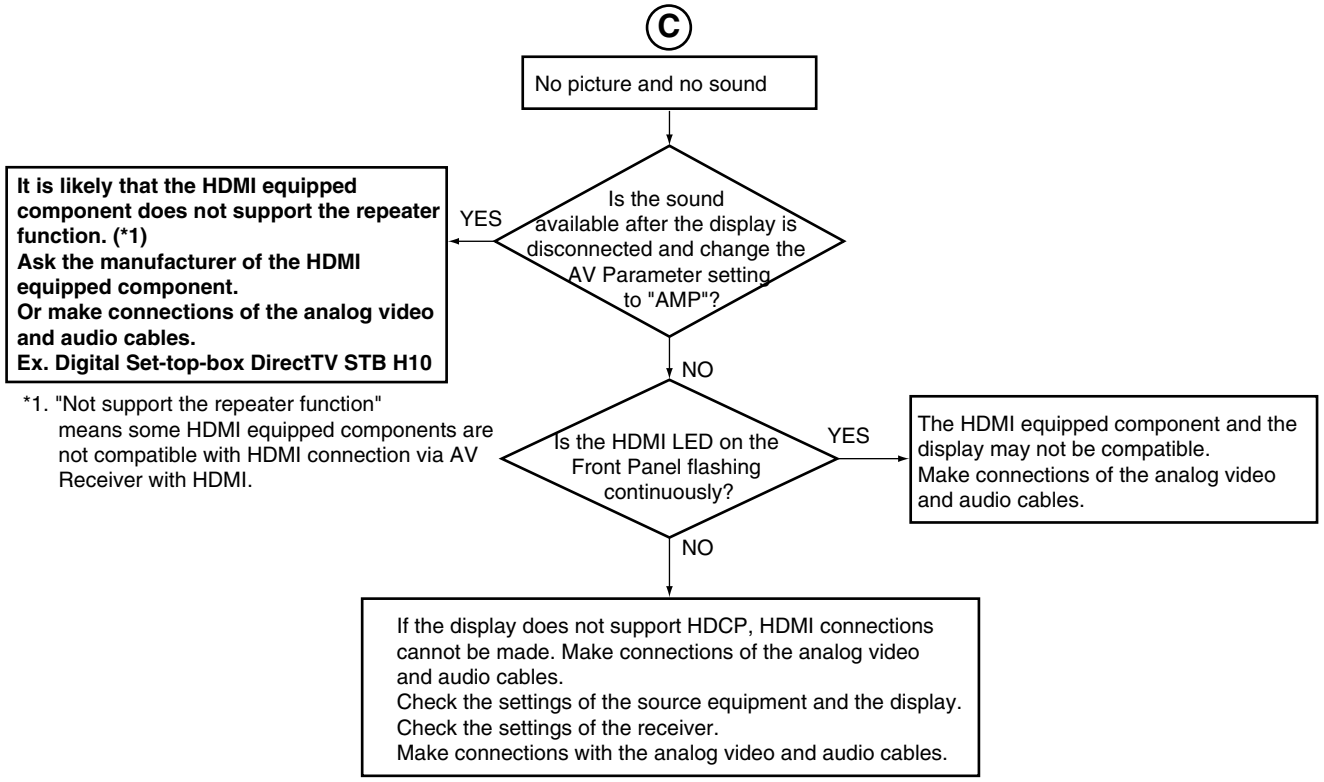


*1. "Not support the repeater function" means some HDMI equipped components are not compatible with HDMI connection via AV Receiver with HDMI.

■ In a case of abnormal picture

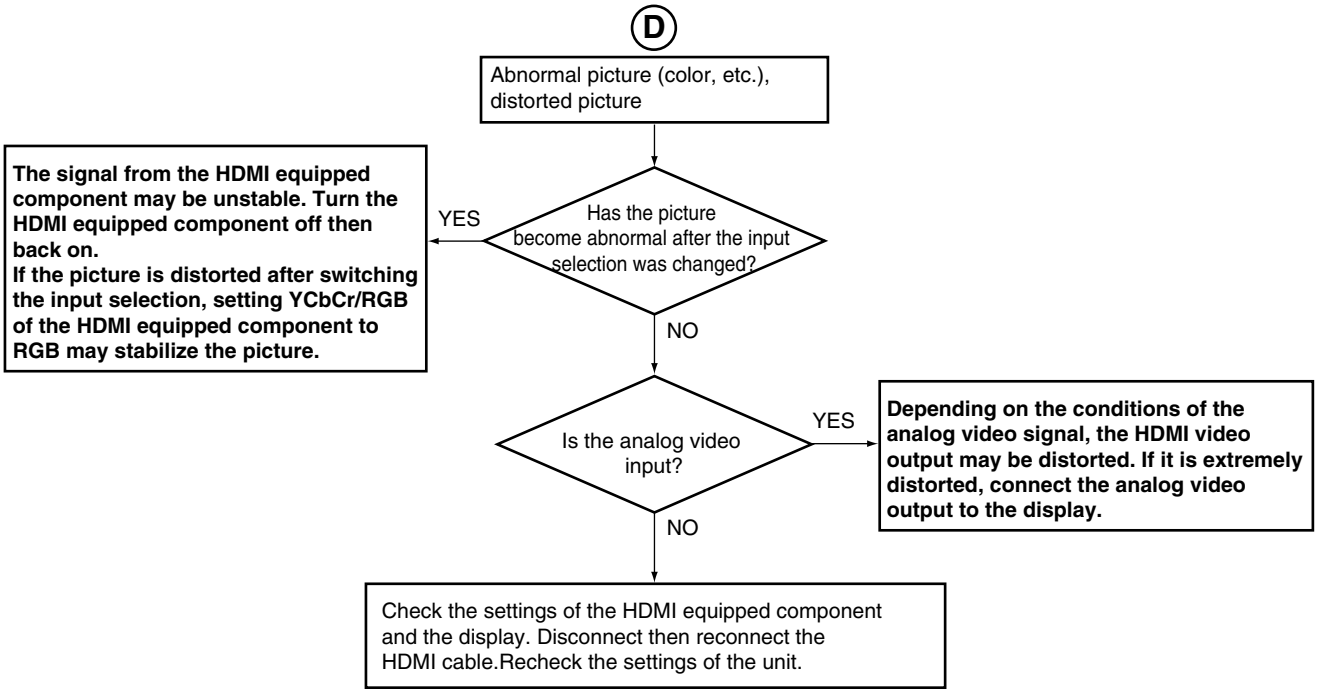


■ Flowchart of troubleshooting the HDMI block

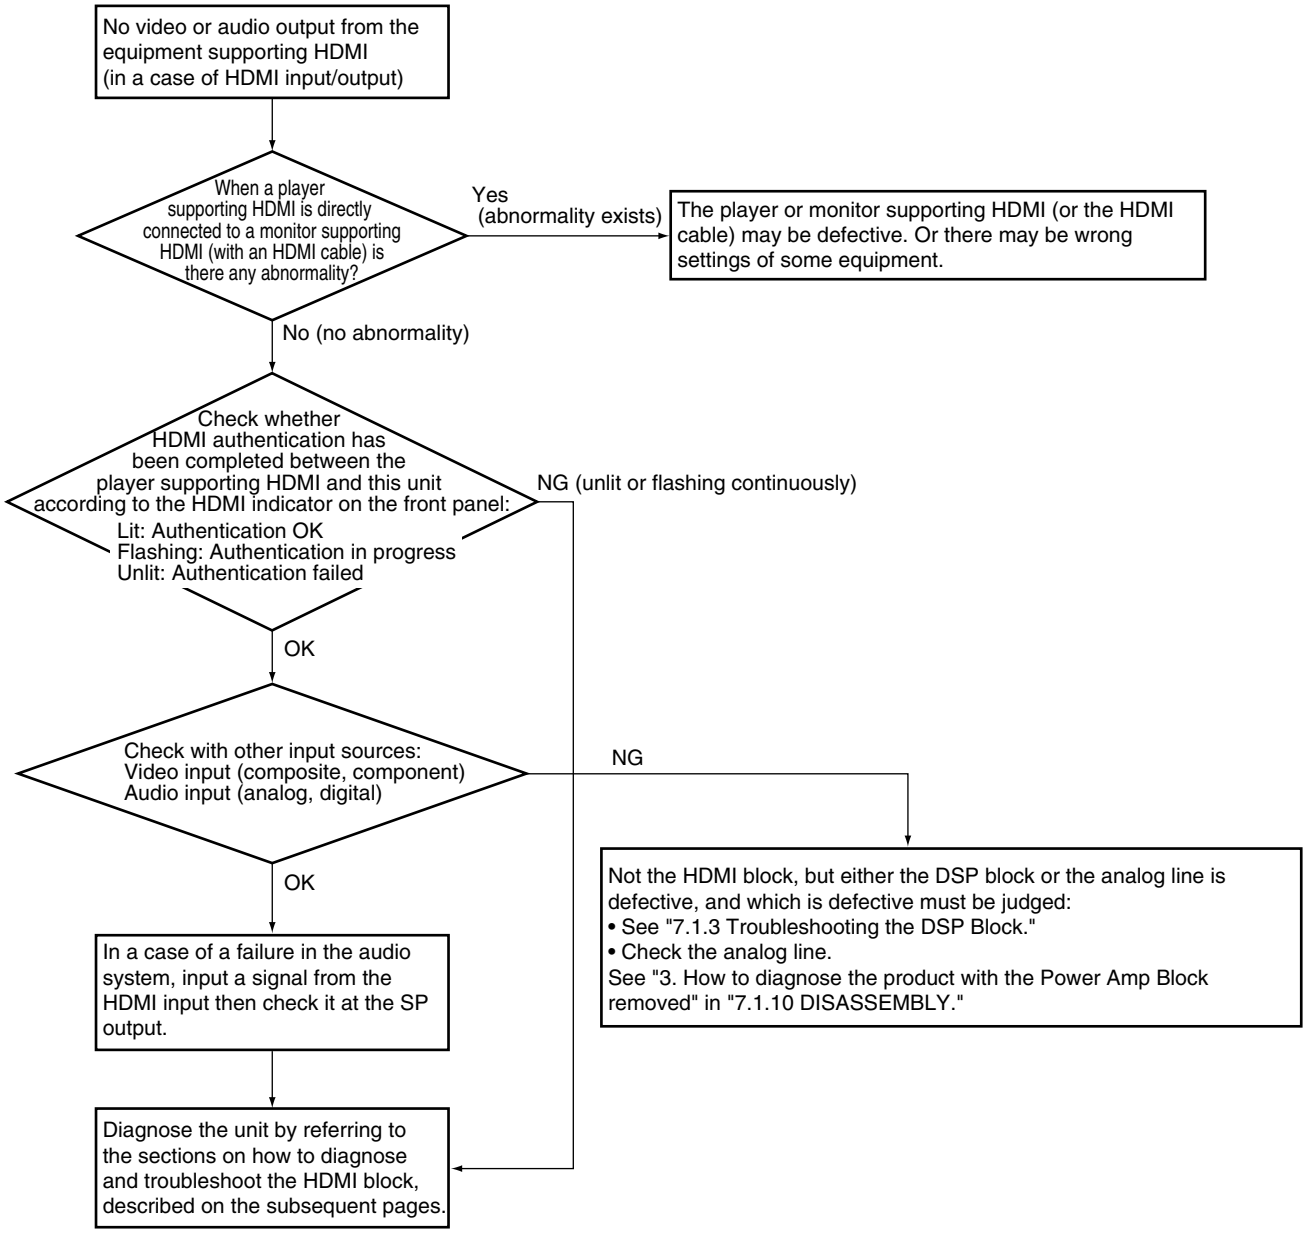

■ Preparations for diagnosis of the HDMI block and related systems

How to diagnose the HDMI audio/video input/output of this unit is explained here.

Video input terminals for HDMI output

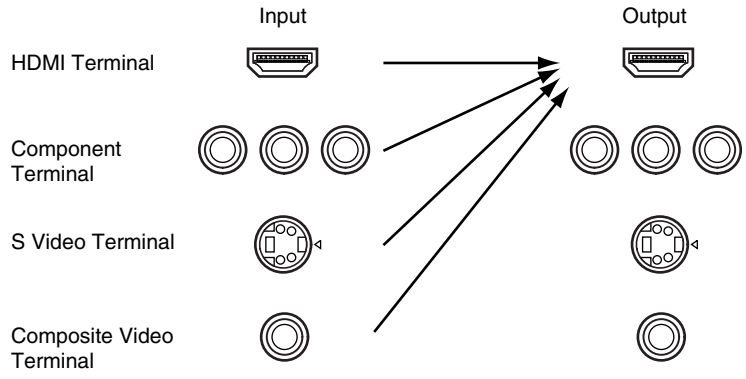

HDMI Audio routing line


Input		Output
HDMI	→	HDMI
		Pre out
		SP Out

[Procedures]

Remove the following parts and the PCB Assy, referring to "7.1.10 DISASSEMBLY."

- Power Amp Block (*1)
- Rear Panel
- Shield Case
- COMPONENT & VOL Assy
- V-AUDIO Assy
- AUDIO & MULTI CH IN Assy
- PREOUT & CONTROL Assy

(*1) Follow the steps described in "7.1.11 How to diagnose the product with the Power Amp Block removed" in "7.1.10 DISASSEMBLY." After diagnosis, be sure to remove the solder used for short-circuiting.

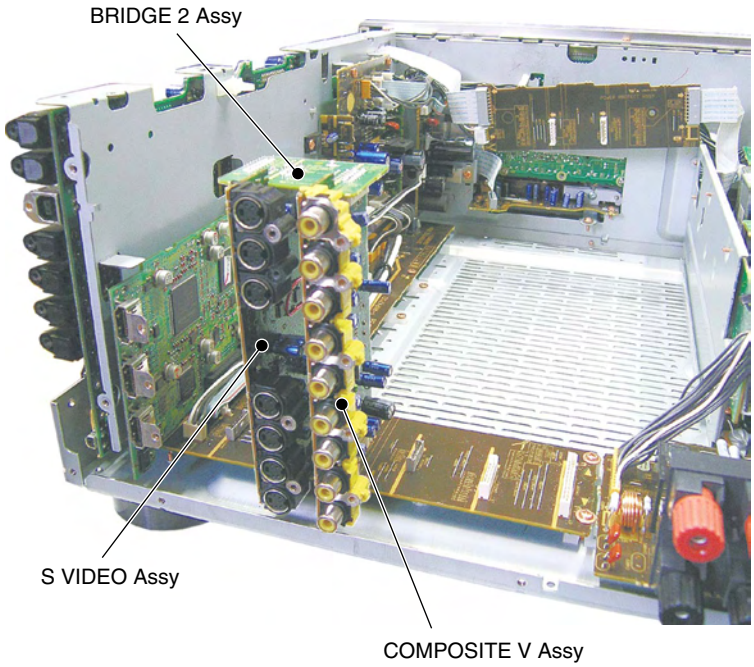

State after all the above-mentioned assys have been removed


■ Diagnosis of the video and audio lines between HDMI input and HDMI output

How to diagnose the video and audio lines between HDMI input and HDMI output is explained here.

[Procedures]

1. Make the preparations described in "Preparations for diagnosis of the HDMI block and related systems" on the previous page.
2. Remove the COMPOSITE V Assy and S VIDEO Assy.
3. Connect between the HDMI connector and the chassis to mark common GND, as indicated in the photo below. *1
4. Connect a HDMI cable from the source equipment (DVD player, etc.) to HDMI IN 1 or HDMI IN 2.
5. Connect a HDMI cable between the HDMI OUT and a TV monitor.
6. Set the INPUT SELECTOR switch to HDMI function (for the connected HDMI).

*1: Be sure to connect between the HDMI connector and the chassis. Otherwise, operations will be unstable.

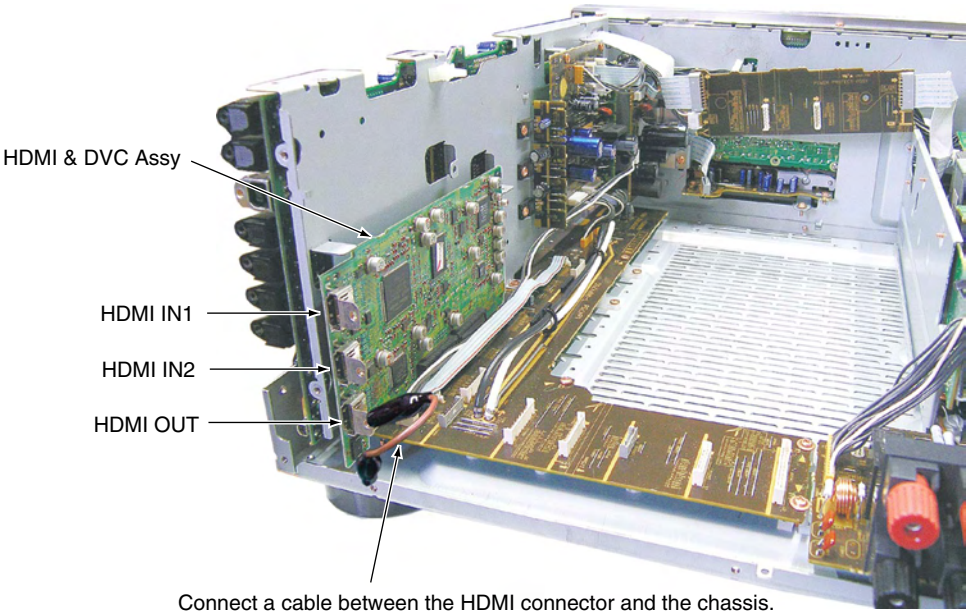

[Tips]

- The following DVD players are compatible with this AV Receiver.
  DV-79AVi, DV-59AVi (for North America)
- Use an HDMI cable with the HDMI logo.

■ Diagnosis of the line from the composite video input to the HDMI video output

How to diagnose the line from the composite video input to the HDMI video output is explained here.


[Procedures]

1. To forcibly input the composite signal to the video converter circuit, bypassing the signal-path switching IC, short-circuit the following points with a jumper: *1

   SERVICE A-1 on the COMPOSITE V Assy <-> SERVICE A-2 (See the photo below.)

2. If the video output from the COMPOSITE V Assy is to be monitored, connect a jumper between SERVICE B-1 and SERVICE B-2 on the COMPOSITE V Assy. (See the photo below.)

3. Make the preparations described in "Preparations for diagnosis of the HDMI block and related systems."

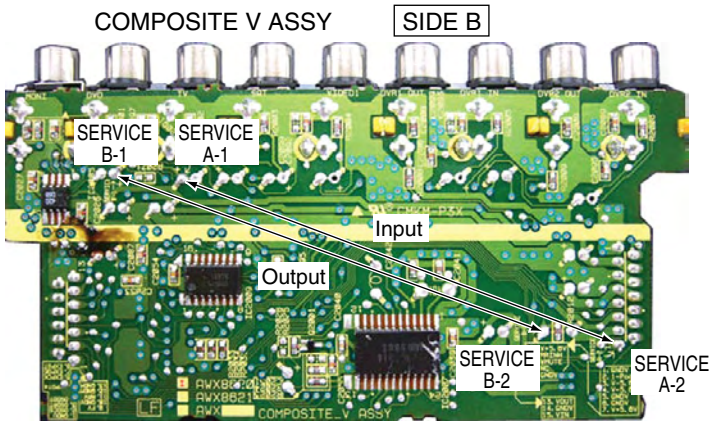

4. Remove the S VIDEO Assy.

5. Connect between the HDMI connector fitting and the chassis, and between the composite connector fitting and the chassis, separately. *2


6. Connect a composite cable from the source equipment (DVD player, etc.) to the DVD INPUT (COMPOSITE) connector.

7. Connect between the HDMI OUT connector and a TV monitor. (When Step 2 above is performed, the monitor output signal from the COMPOSITE OUT connector can be monitored.)

8. Set the INPUT SELECTOR switch to DVD function.
   Check that neither S-VIDEO nor COMPONENT is assigned to DVD function in the setting.

*1: Remove the wire used for short-circuiting after the diagnosis is finished.
*2: Be sure to connect between the HDMI connector fitting and the chassis, and the composite connector fitting and the chassis, separately. Otherwise, operations will be unstable.

[Appearance of diagnosing the composite video]

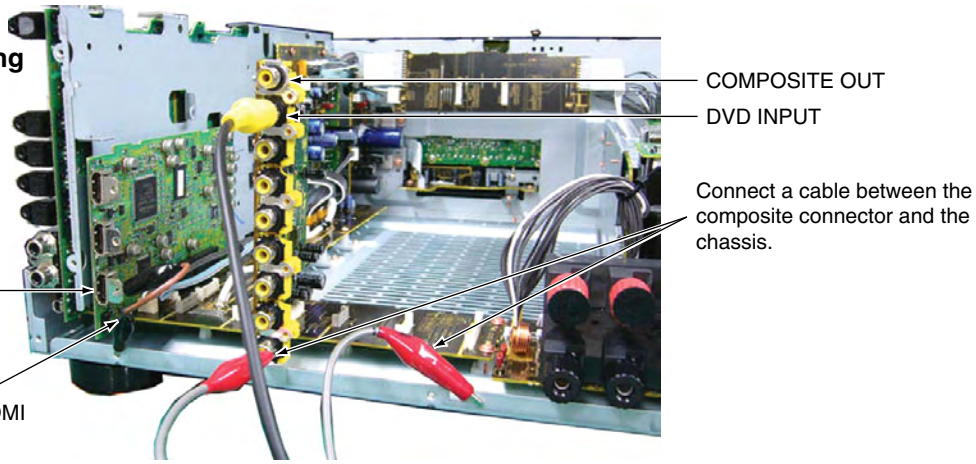

[Tips]

In this diagnosis, the DIGITAL VIDEO CONVERSION setting (ON/OFF) in the AV PARAMETER settings is invalid.

■ Diagnosis of the line from the S video input to the HDMI video output

How to diagnose the line from the S video input to the HDMI video output is explained here.


[Procedures]

1. To forcibly input the signal to the video converter circuit, short-circuit between the pads to R2231 (C input) and R2232 (Y input) on the S VIDEO Assy. *1


2. If the video output from the S VIDEO Assy is to be monitored, short-circuit between R2294 (C output) and R2295 (Y output) on the S VIDEO Assy.

3. Make the preparations described in "Preparations for diagnosis of the HDMI block and related systems."

S VIDEO ASSY SIDE A

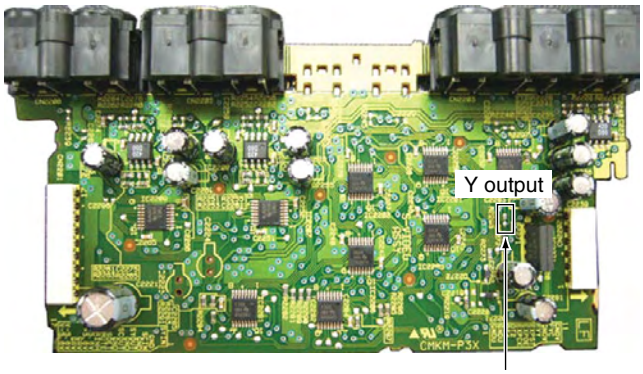

S VIDEO ASSY SIDE B

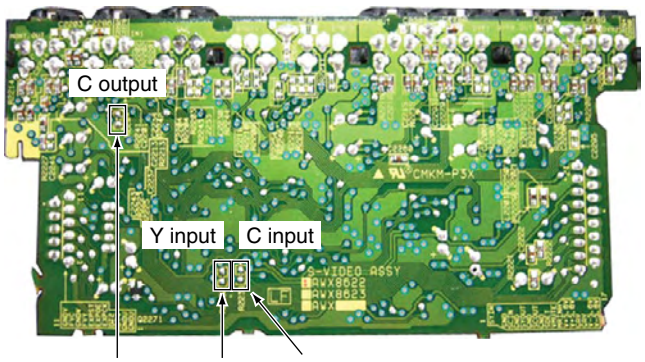

4. Connect between the HDMI connector and the chassis, and between the composite connector and the chassis, separately.*2


5. Connect a S-video cable from the source equipment (DVD player, etc.) to the S-VIDEO INPUT 1 connector.

6. Connect between the HDMI OUT connector and a TV monitor. (When Step 2 above is performed, the signal from the S-VIDEO OUT connector can be monitored. When Step 2 in "Diagnosis of the line from the composite video input to the HDMI video output" is performed, the signal from the COMPOSITE OUT connector can also be monitored.)

7. Assign S-VIDEO INPUT 1 as DVD function. Set the INPUT SELECTOR switch to DVD function.

*1: Remove the solder used for short-circuiting after the diagnosis is finished.
*2: Be sure to connect between the HDMI connector fitting and the chassis, and between the composite connector fitting and the chassis, separately. Otherwise, operations will be unstable.

[Appearance of diagnosing the S video]

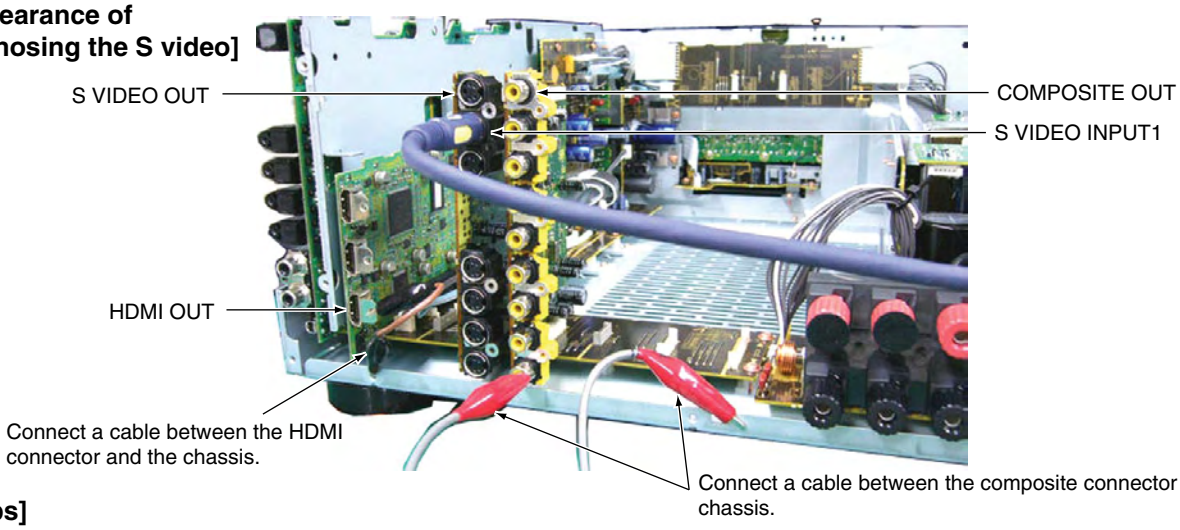

[Tips]

In this diagnosis, the DIGITAL VIDEO CONVERSION setting (ON/OFF) in the AV PARAMETER settings is invalid.

■ Diagnosis of the line from the component video input to the HDMI video output


How to diagnose the line from the component video input to the HDMI video output is explained here.

[Procedures]

1. Make the preparations described in "Preparations for diagnosis of the HDMI block and related systems" on the previous page.
2. Remove the COMPOSITE V Assy and S VIDEO Assy.
3. Connect between the HDMI connector and the chassis. *1
4. Insert 75-ohm resistors separately between W4318 and W4316, between W4319 and W4316, and between W4320 and W4316 on the INTERFACE Assy to create impedance that matches the actual input impedance.*2
5. Connect a component video cable from the source equipment (DVD player, etc.) to W4318: Y IN, W4319: Pb IN, and W4320:Pr IN, separately. *2
6. Connect a HDMI cable between the HDMI OUT connector and a TV monitor.
7. Referring to the instruction manual for this unit, assign COMPONENT INPUT 1 as DVD function. Set the INPUT SELECTOR switch to DVD function.

*1: Be sure to connect between the HDMI connector and the chassis. Otherwise, operations will be unstable.
*2: Be sure to remove the resistors or jumpers after the diagnosis is finished.

[Appearance of diagnosing the component video]

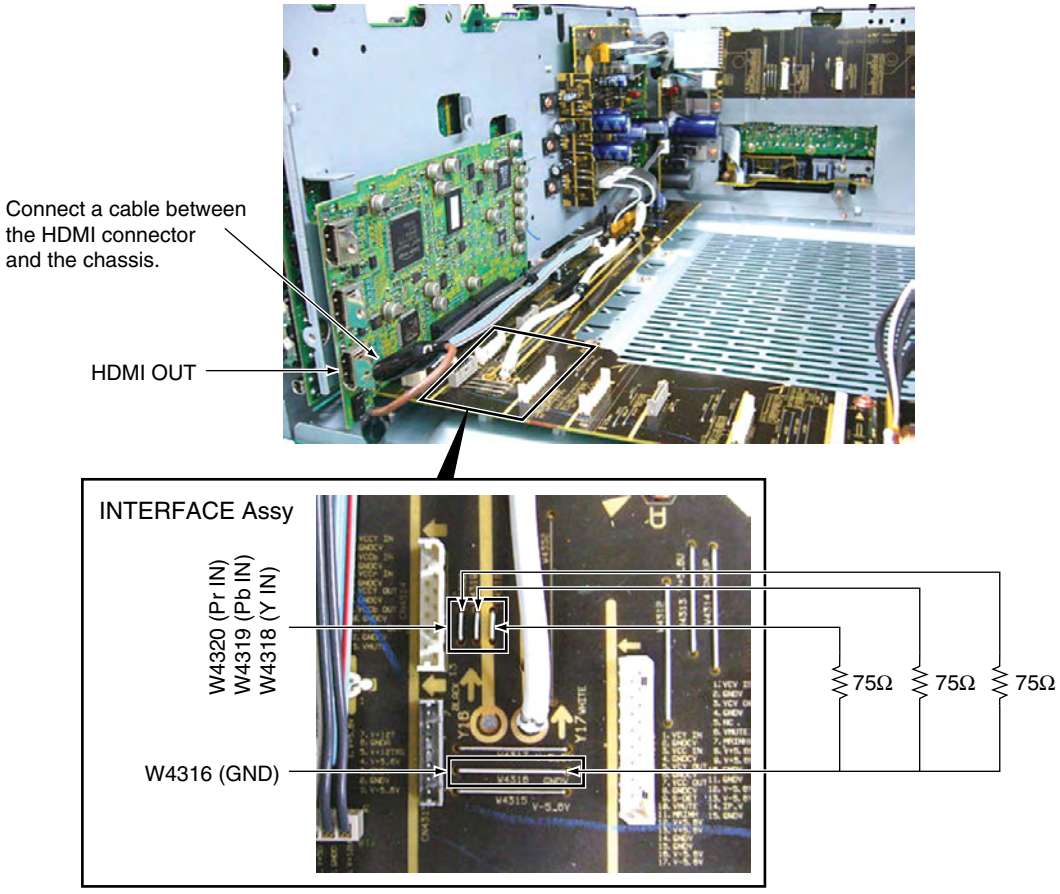


[Tips]

In this diagnosis, the DIGITAL VIDEO CONVERSION setting (ON/OFF) in the AV PARAMETER settings is invalid.


■ HDMI Troubleshooting


- It is assumed that there is no loose connection or damage in the LCRs.
- There must not be an abnormality in pattern.
- The parts marked like Ⓐ in the following chart are located in "HDMI &DVC Assy Check Points" on the Page 217.

Step 1: Connections

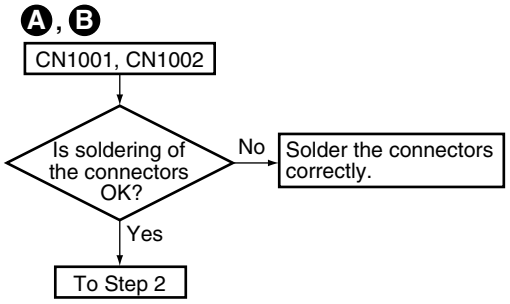



Step 2: Power supply and clock

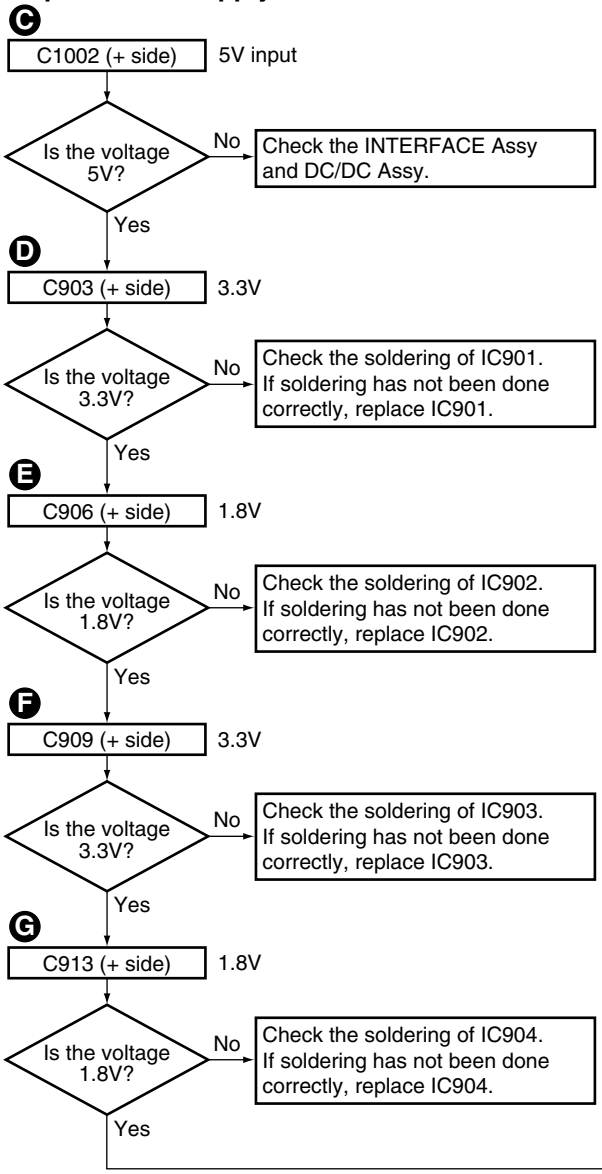


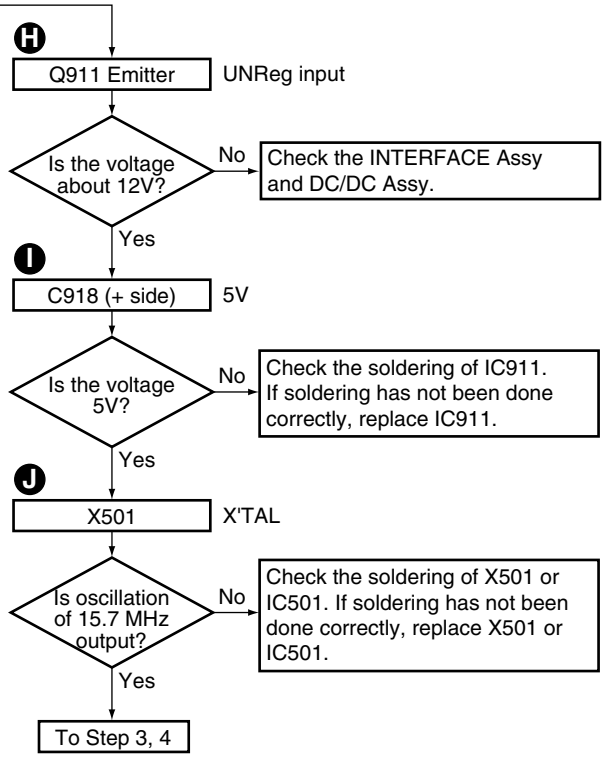


Step 3: HDMI

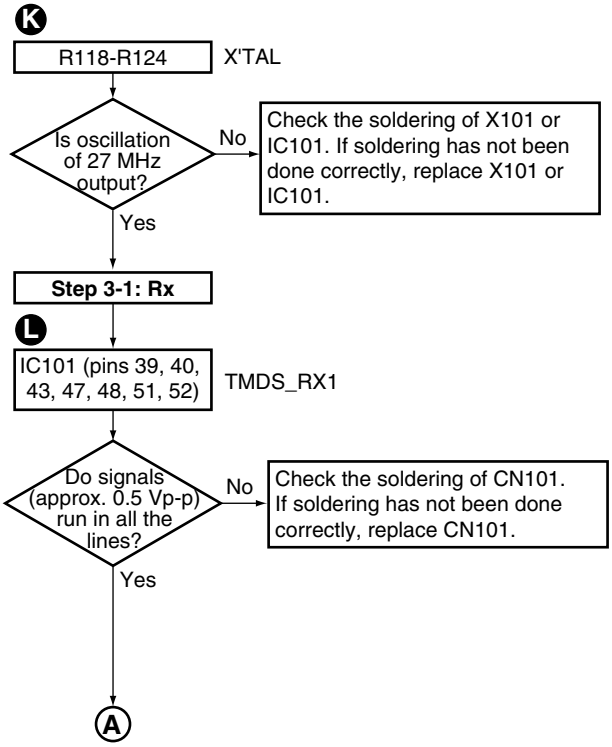

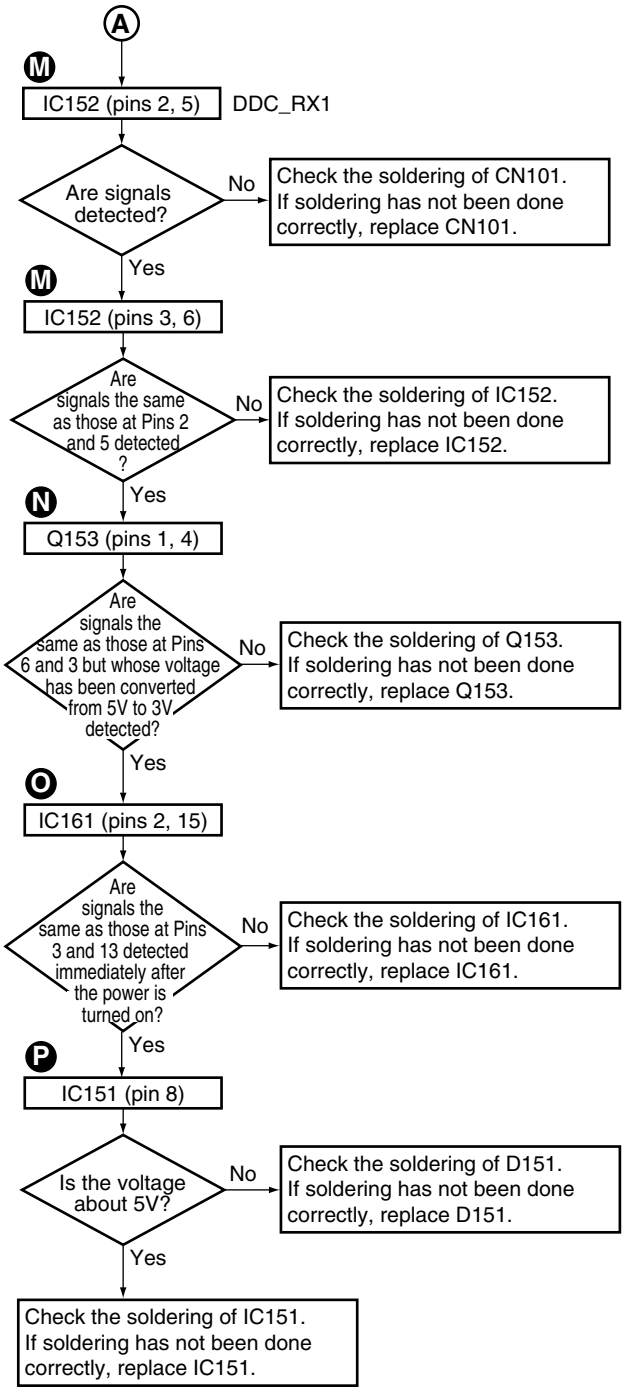

A
M
IC152 (pins 2, 5)
DDC_RX1
Are signals detected?
No
Check the soldering of CN101. If soldering has not been done correctly, replace CN101.
Yes
M
IC152 (pins 3, 6)
Are signals the same as those at Pins 2 and 5 detected ?
No
Check the soldering of IC152. If soldering has not been done correctly, replace IC152.
Yes
N
Q153 (pins 1, 4)
Are signals the same as those at Pins 6 and 3 but whose voltage has been converted from 5V to 3V detected?
No
Check the soldering of Q153. If soldering has not been done correctly, replace Q153.
Yes
O
IC161 (pins 2, 15)
Are signals the same as those at Pins 3 and 13 detected immediately after the power is turned on?
No
Check the soldering of IC161. If soldering has not been done correctly, replace IC161.
Yes
P
IC151 (pin 8)
Is the voltage about 5V?
No
Check the soldering of D151. If soldering has not been done correctly, replace D151.
Yes
Check the soldering of IC151. If soldering has not been done correctly, replace IC151.

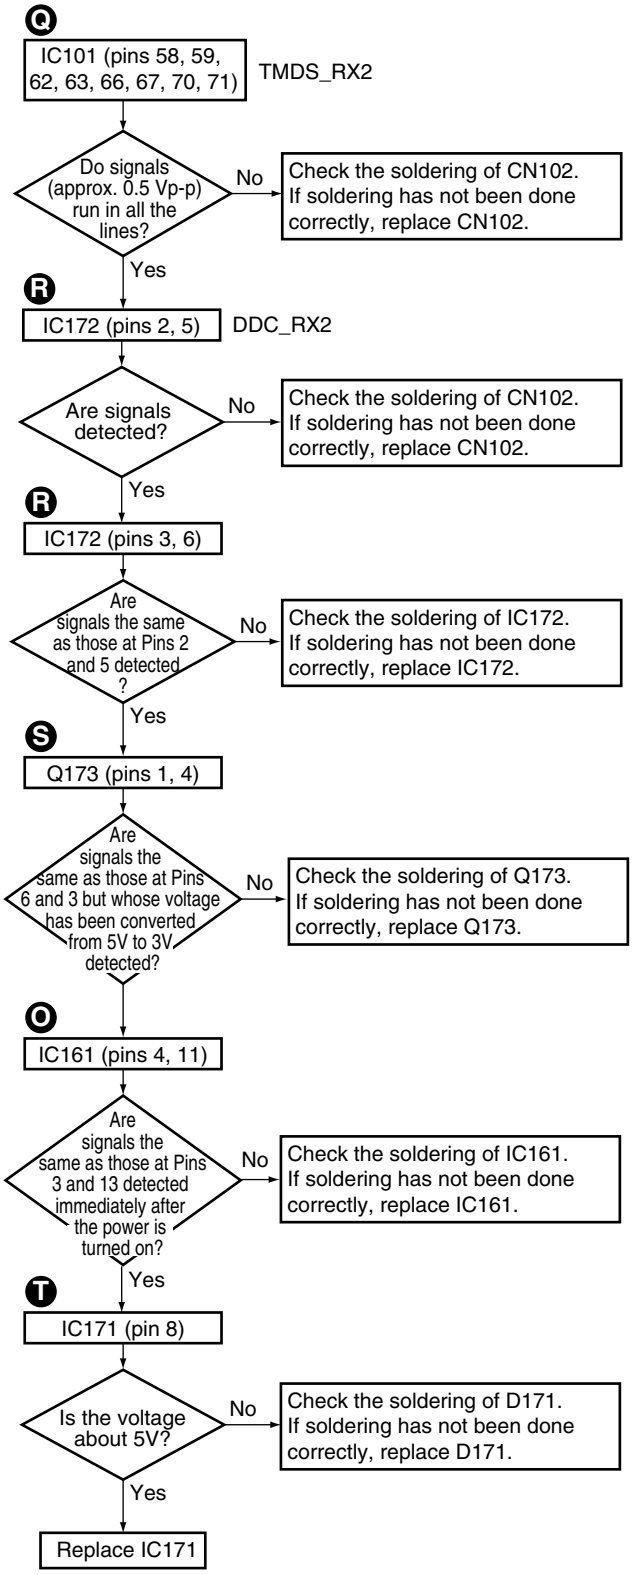

Q
IC101 (pins 58, 59, 62, 63, 66, 67, 70, 71)
TMDS_RX2
Do signals (approx. 0.5 Vp-p) run in all the lines?
No
Check the soldering of CN102. If soldering has not been done correctly, replace CN102.
Yes
R
IC172 (pins 2, 5)
DDC_RX2
Are signals detected?
No
Check the soldering of CN102. If soldering has not been done correctly, replace CN102.
Yes
R
IC172 (pins 3, 6)
Are signals the same as those at Pins 2 and 5 detected ?
No
Check the soldering of IC172. If soldering has not been done correctly, replace IC172.
Yes
S
Q173 (pins 1, 4)
Are signals the same as those at Pins 6 and 3 but whose voltage has been converted from 5V to 3V detected?
No
Check the soldering of Q173. If soldering has not been done correctly, replace Q173.
O
IC161 (pins 4, 11)
Are signals the same as those at Pins 3 and 13 detected immediately after the power is turned on?
No
Check the soldering of IC161. If soldering has not been done correctly, replace IC161.
Yes
T
IC171 (pin 8)
Is the voltage about 5V?
No
Check the soldering of D171. If soldering has not been done correctly, replace D171.
Yes
Replace IC171


Step 3: HDMI

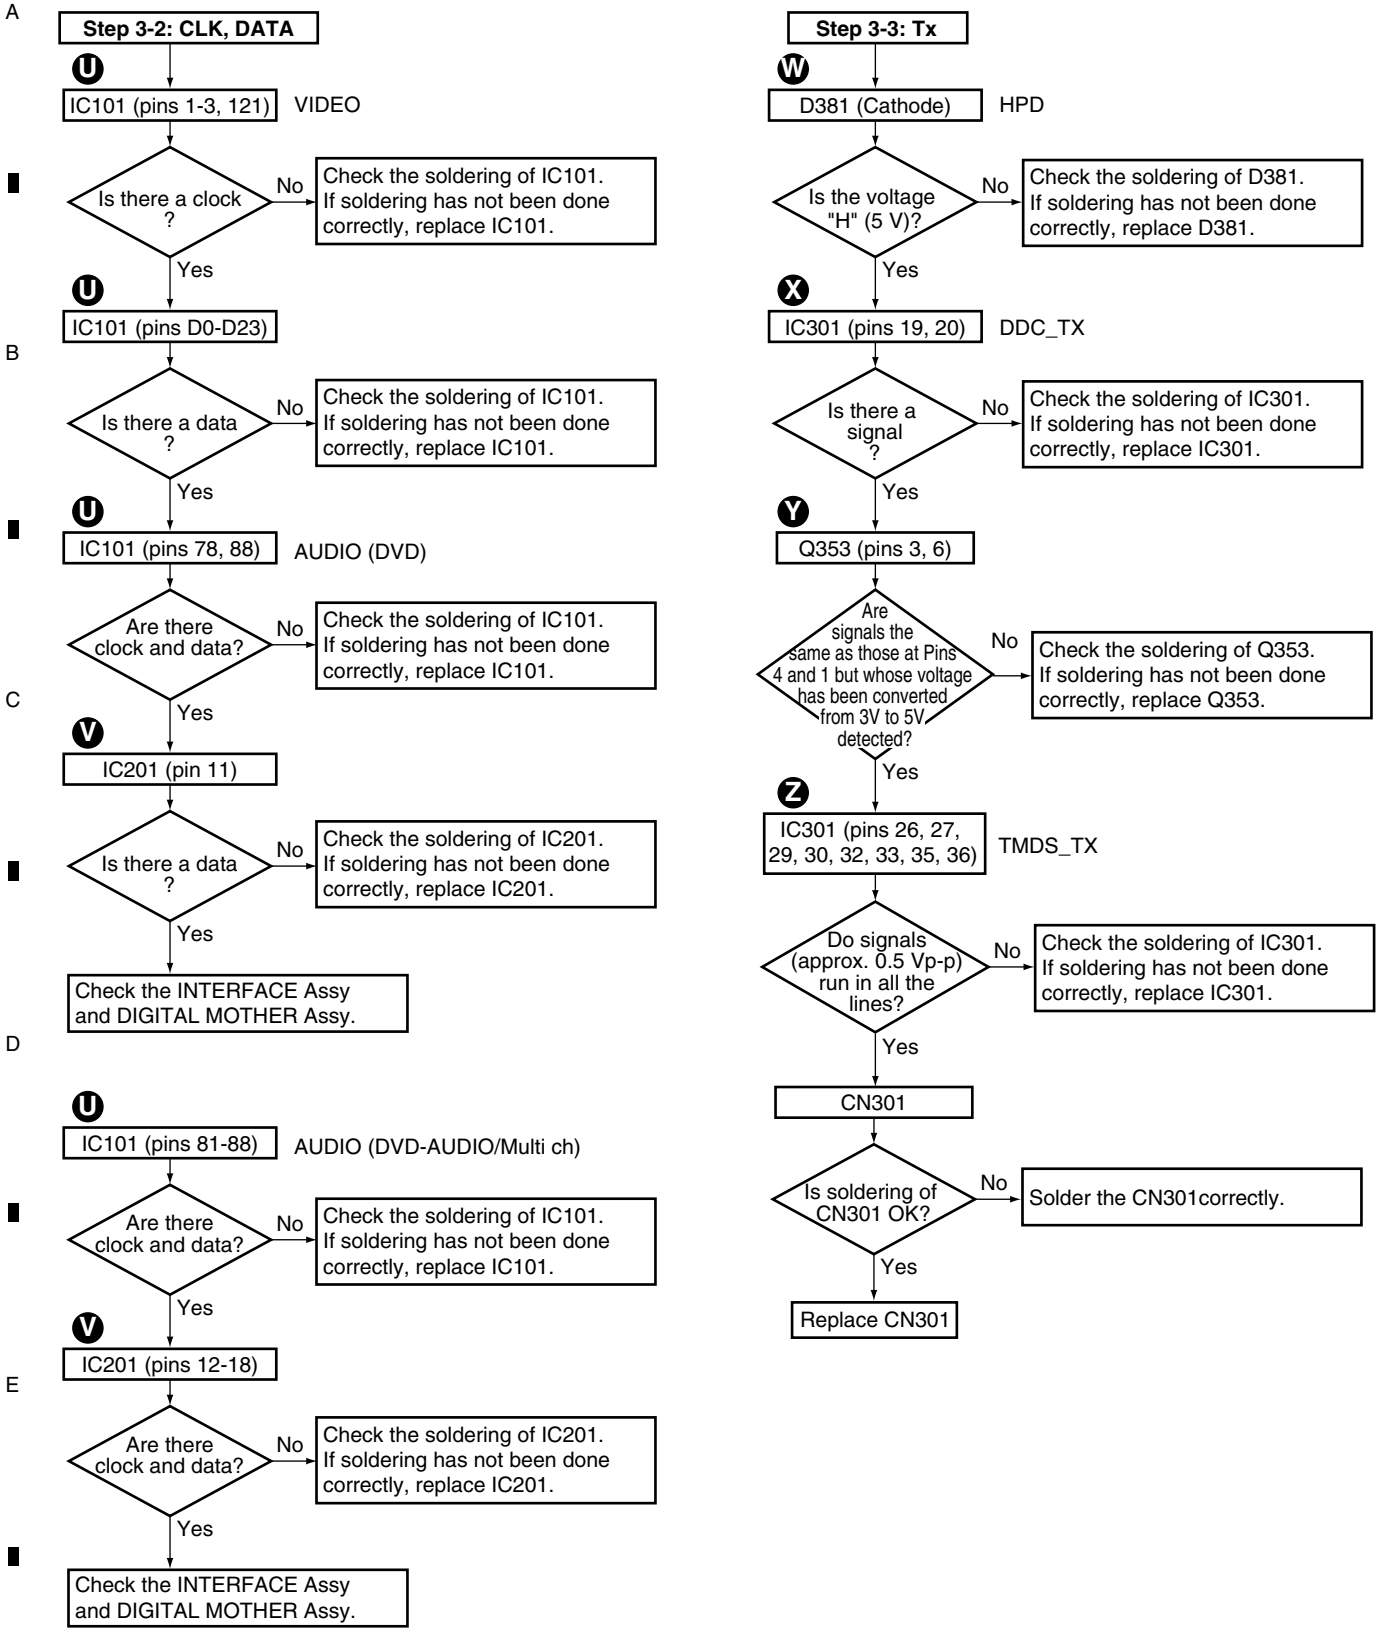

Step 3-2: CLK, DATA
U
IC101 (pins 1-3, 121)
VIDEO
Is there a clock ?
No
Check the soldering of IC101. If soldering has not been done correctly, replace IC101.
Yes
U
IC101 (pins D0-D23)
Is there a data ?
No
Check the soldering of IC101. If soldering has not been done correctly, replace IC101.
Yes
U
IC101 (pins 78, 88)
AUDIO (DVD)
Are there clock and data?
No
Check the soldering of IC101. If soldering has not been done correctly, replace IC101.
Yes
V
IC201 (pin 11)
Is there a data ?
No
Check the soldering of IC201. If soldering has not been done correctly, replace IC201.
Yes
Check the INTERFACE Assy and DIGITAL MOTHER Assy.
U
IC101 (pins 81-88)
AUDIO (DVD-AUDIO/Multi ch)
Are there clock and data?
No
Check the soldering of IC101. If soldering has not been done correctly, replace IC101.
Yes
V
IC201 (pins 12-18)
Are there clock and data?
No
Check the soldering of IC201. If soldering has not been done correctly, replace IC201.
Yes
Check the INTERFACE Assy and DIGITAL MOTHER Assy.
Step 3-3: Tx
W
D381 (Cathode)
HPD
Is the voltage "H" (5 V)?
No
Check the soldering of D381. If soldering has not been done correctly, replace D381.
Yes
X
IC301 (pins 19, 20)
DDC_TX
Is there a signal ?
No
Check the soldering of IC301. If soldering has not been done correctly, replace IC301.
Yes
Y
Q353 (pins 3, 6)
Are signals the same as those at Pins 4 and 1 but whose voltage has been converted from 3V to 5V detected?
No
Check the soldering of Q353. If soldering has not been done correctly, replace Q353.
Yes
Z
IC301 (pins 26, 27, 29, 30, 32, 33, 35, 36)
TMDS_TX
Do signals (approx. 0.5 Vp-p) run in all the lines?
No
Check the soldering of IC301. If soldering has not been done correctly, replace IC301.
Yes
CN301
Is soldering of CN301 OK?
No
Solder the CN301correctly.
Yes
Replace CN301

Step 4: DVC

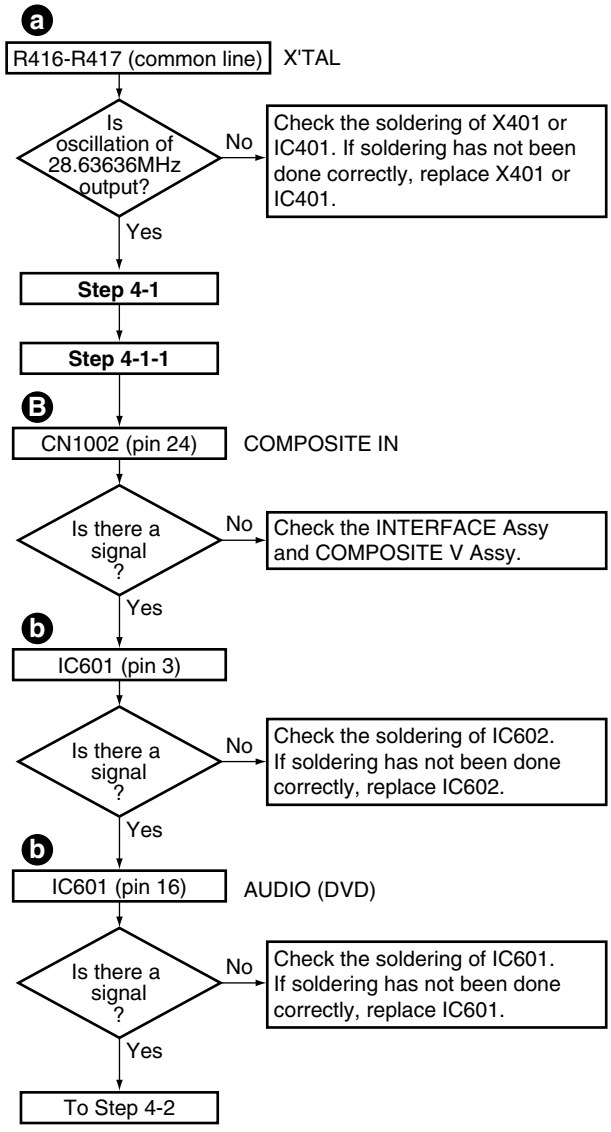

a
R416-R417 (common line)
X'TAL
Is oscillation of 28.63636MHz output?
No
Check the soldering of X401 or IC401. If soldering has not been done correctly, replace X401 or IC401.
Yes
Step 4-1
Step 4-1-1
B
CN1002 (pin 24)
COMPOSITE IN
Is there a signal ?
No
Check the INTERFACE Assy and COMPOSITE V Assy.
Yes
b
IC601 (pin 3)
Is there a signal ?
No
Check the soldering of IC602. If soldering has not been done correctly, replace IC602.
Yes
b
IC601 (pin 16)
AUDIO (DVD)
Is there a signal ?
No
Check the soldering of IC601. If soldering has not been done correctly, replace IC601.
Yes
To Step 4-2

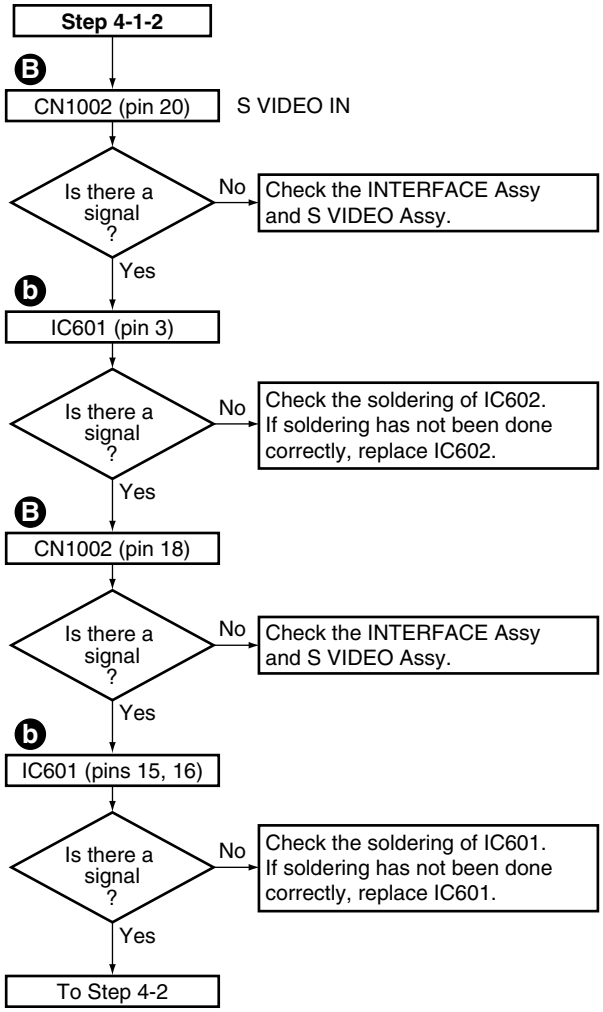
Step 4-1-2
B
CN1002 (pin 20)
S VIDEO IN
Is there a signal ?
No
Check the INTERFACE Assy and S VIDEO Assy.
Yes
b
IC601 (pin 3)
Is there a signal ?
No
Check the soldering of IC602. If soldering has not been done correctly, replace IC602.
Yes
B
CN1002 (pin 18)
Is there a signal ?
No
Check the INTERFACE Assy and S VIDEO Assy.
Yes
b
IC601 (pins 15, 16)
Is there a signal ?
No
Check the soldering of IC601. If soldering has not been done correctly, replace IC601.
Yes
To Step 4-2

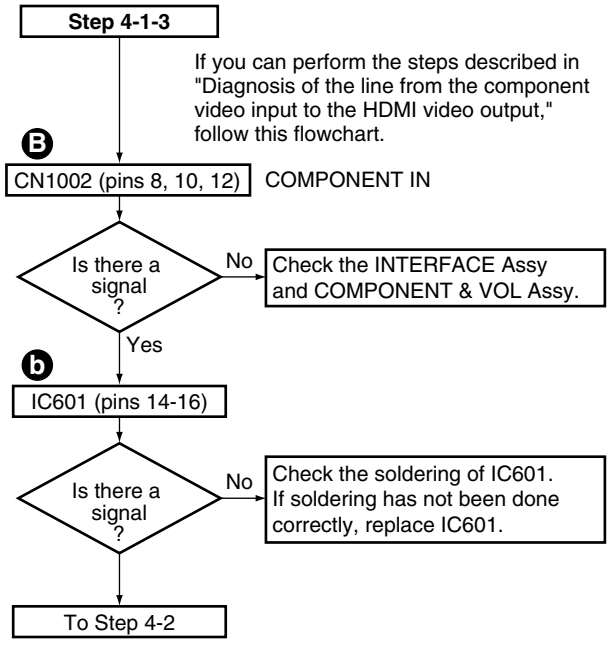
Step 4-1-3
If you can perform the steps described in "Diagnosis of the line from the component video input to the HDMI video output," follow this flowchart.
B
CN1002 (pins 8, 10, 12)
COMPONENT IN
Is there a signal ?
No
Check the INTERFACE Assy and COMPONENT & VOL Assy.
Yes
b
IC601 (pins 14-16)
Is there a signal ?
No
Check the soldering of IC601. If soldering has not been done correctly, replace IC601.
Yes
To Step 4-2

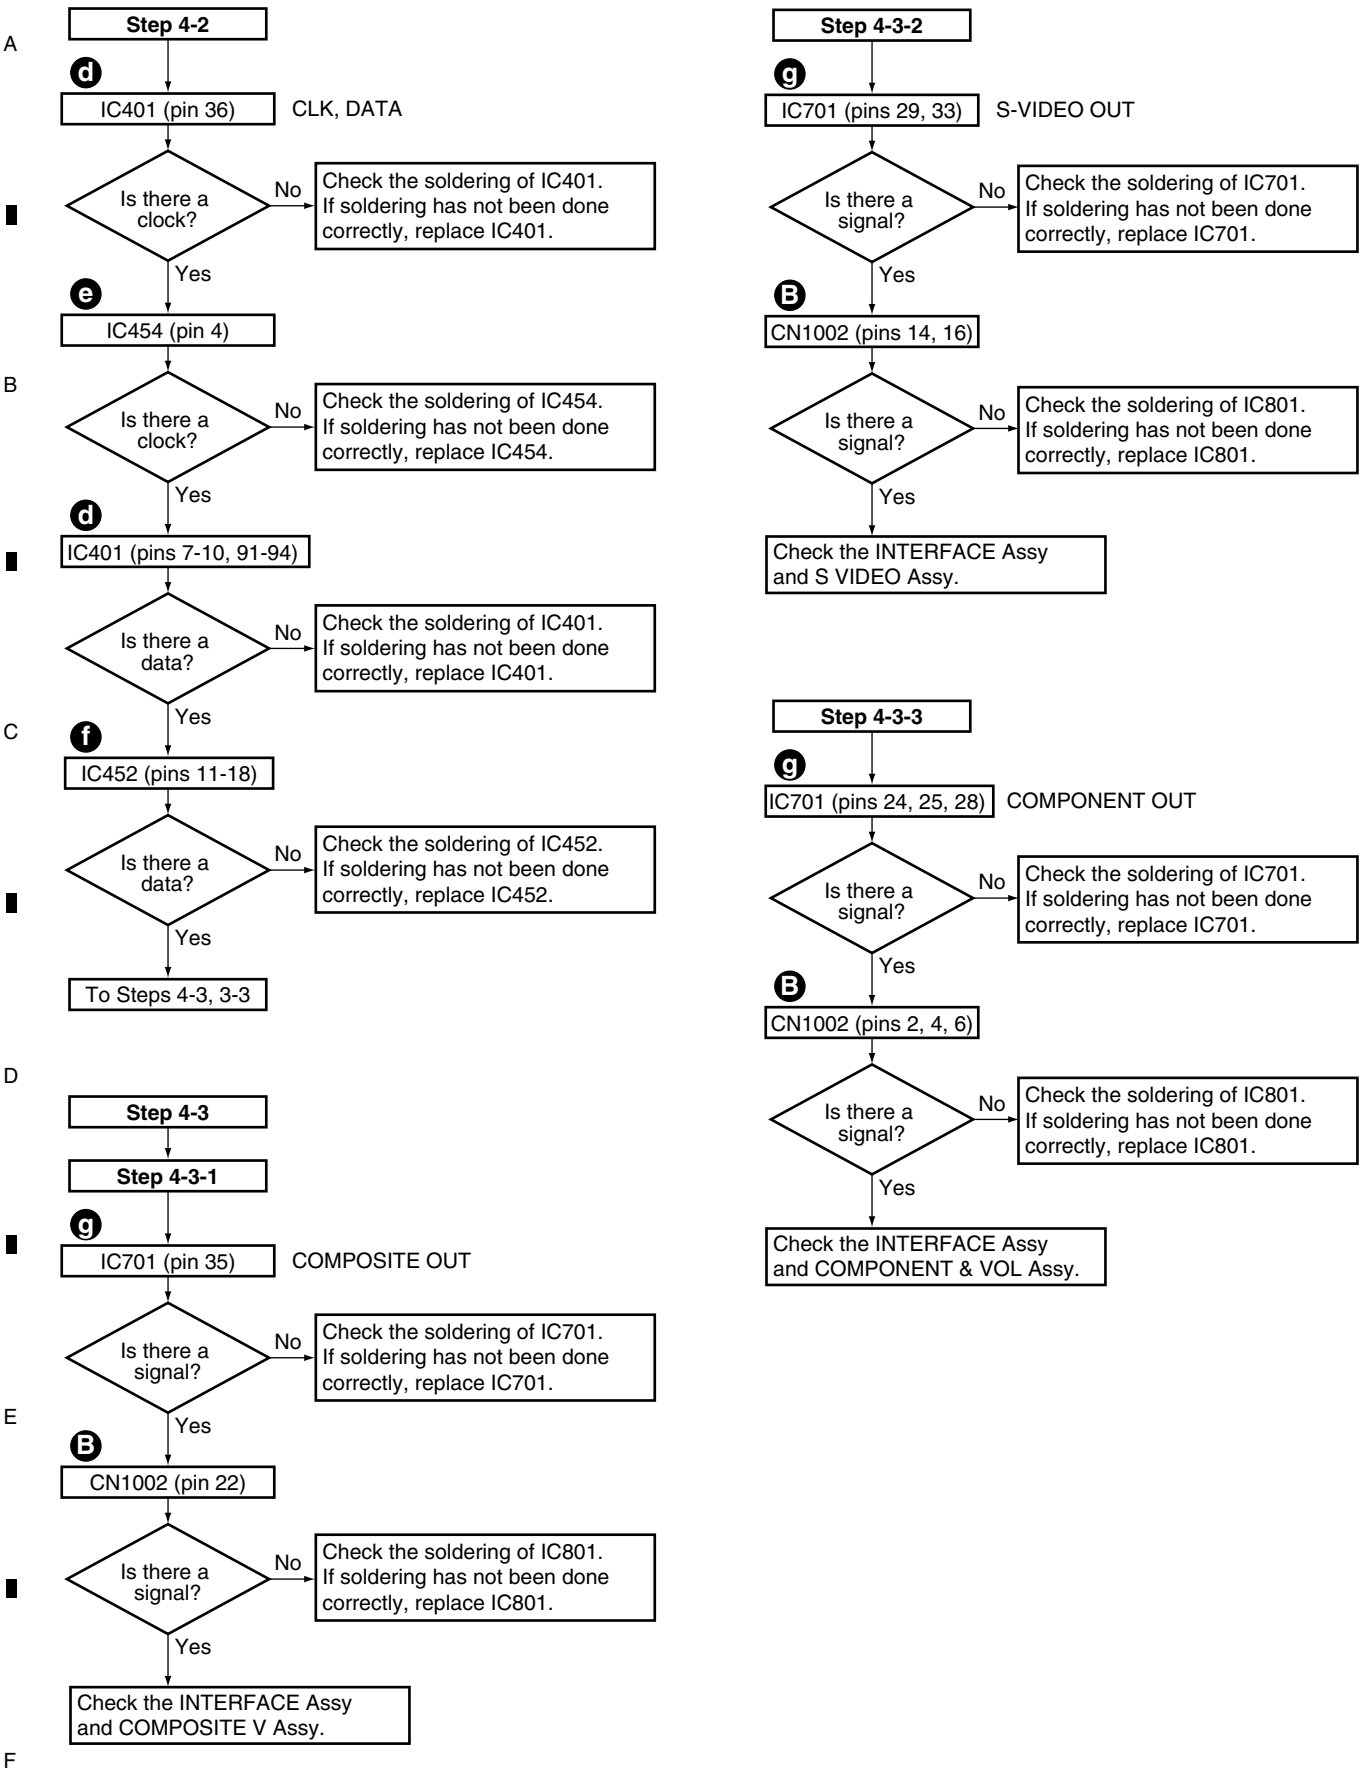
Step 4-2
d
IC401 (pin 36)
CLK, DATA
Is there a clock?
No
Check the soldering of IC401. If soldering has not been done correctly, replace IC401.
Yes
e
IC454 (pin 4)
Is there a clock?
No
Check the soldering of IC454. If soldering has not been done correctly, replace IC454.
Yes
d
IC401 (pins 7-10, 91-94)
Is there a data?
No
Check the soldering of IC401. If soldering has not been done correctly, replace IC401.
Yes
f
IC452 (pins 11-18)
Is there a data?
No
Check the soldering of IC452. If soldering has not been done correctly, replace IC452.
Yes
To Steps 4-3, 3-3
Step 4-3
Step 4-3-1
g
IC701 (pin 35)
COMPOSITE OUT
Is there a signal?
No
Check the soldering of IC701. If soldering has not been done correctly, replace IC701.
Yes
B
CN1002 (pin 22)
Is there a signal?
No
Check the soldering of IC801. If soldering has not been done correctly, replace IC801.
Yes
Check the INTERFACE Assy and COMPOSITE V Assy.
Step 4-3-2
g
IC701 (pins 29, 33)
S-VIDEO OUT
Is there a signal?
No
Check the soldering of IC701. If soldering has not been done correctly, replace IC701.
Yes
B
CN1002 (pins 14, 16)
Is there a signal?
No
Check the soldering of IC801. If soldering has not been done correctly, replace IC801.
Yes
Check the INTERFACE Assy and S VIDEO Assy.
Step 4-3-3
g
IC701 (pins 24, 25, 28)
COMPONENT OUT
Is there a signal?
No
Check the soldering of IC701. If soldering has not been done correctly, replace IC701.
Yes
B
CN1002 (pins 2, 4, 6)
Is there a signal?
No
Check the soldering of IC801. If soldering has not been done correctly, replace IC801.
Yes
Check the INTERFACE Assy and COMPONENT & VOL Assy.

■ HDMI & DVC Assy Check Points

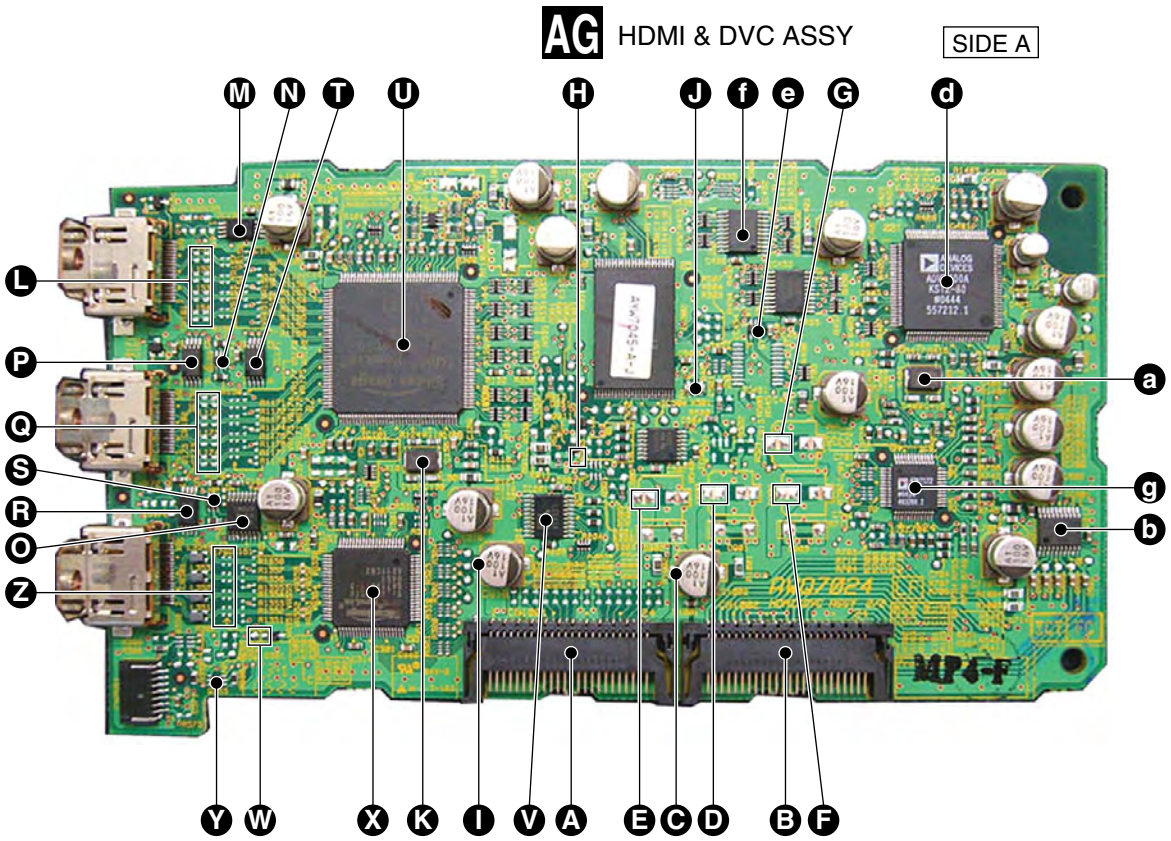

7.1.5 DIAGNOSIS OF THE 1394 ASSY

■ Before Making a Diagnosis

Please check the following Trouble shooting prior to repairing the unit.

i.LINK interface

Symptom	Remedy
No sound is output.	• Check that the source player is compatible with i.LINK audio. • Check the output settings of the source player. • Make sure that **i.LINK** or **AUTO** is selected using the **SIGNAL SELECT** button.
The i.LINK indicator does not light up even when an i.LINK-equipped component is selected.	• Make sure that **i.LINK** or **AUTO** is selected using the **SIGNAL SELECT** button. • Check the i.LINK connections; use an i.LINK cable of less than 11 feet (3.5 m). • Check that the source components conforms to the i.LINK Audio format. • Make sure that all components connected between the receiver and the source are switched on.
PQLS OFF or **PQLS ON** is displayed temporarily on your player and the sound output is discontinued.	• During playback through an i.LINK connection, if you change the settings for other i.LINK components, the sound will be discontinued momentarily. This is not a malfunction.
The program format indicators don't disappear when SACD playback stops.	• The program format indicators remain lit until another format source is input. This is not a malfunction.
You can't get i.LINK to display when using the **SIGNAL SELECT** button.	• Make sure your i.LINK source components are switched on. • Check that i.LINK is assigned correctly.
After upgrading a component, it is not recognized and cannot be selected using the i.LINK connection.	• You may need to reset the i.LINK database memory in the receiver (use the front panel): With the receiver in standby, press ⏻ **STANDBY/ON** while holding down **RETURN**. When you see **DB CLEAR?** appear in the display, press **ENTER**, then **SETUP** again to confirm. When you've reset the i.LINK database memory, **DB CLEAR SET** shows in the display. If **DB ERROR** is displayed, step through the procedure again.

i.LINK messages

You may see the following messages displayed in the front panel display when using the i.LINK interface.


Message	Explanation
BUS FULL	The i.LINK bus has reached its capacity and cannot transmit any more data.
CANNOT LINK 1	The connection between the receiver and the selected i.LINK-equipped component is unstable. If the i.LINK cables appear to be connected properly and both the receiver and i.LINK-equipped component are on, switch both units off, then on again to re-establish the connection between them.
CANNOT LINK 2	The receiver can't identify the selected i.LINK-equipped component. For example, the receiver may not be able to identify an i.LINK-equipped personal computer.
LINK CHECK	The receiver is checking the i.LINK network. It does this when components are added to, or removed from the network. The sound may be interrupted if this happens during playback.
LOOP CONNECT	The i.LINK network cannot function because the connected components form a loop.
NO NAME	When an i.LINK-equipped component has no name, this message is displayed instead of the proper component name.
NO SIGNAL	A component is outputting an i.LINK signal that the receiver cannot reproduce. This receiver can only reproduce signals from i.LINK-Audio-equipped components.
PQLS OFF	This is displayed on a playback component when PQLS turns off during playback. The sound may be interrupted momentarily when this happens.
PQLS ON	This is displayed on a playback component when PQLS turns on during playback. The sound may be interrupted momentarily when this happens.
UNKNOWN	When an i.LINK-equipped component name cannot be recognized, this message is displayed instead of the proper component name.


■ Preparations for diagnosis


Detach the 1394 Assy with the flexible cables (FFCs) connected, as shown in the photos below, then make a diagnosis.

[Procedures]

① Remove the bonnet, referring to "7.1.10 DISASSEMBLY."
② Remove the HDMI shield, first removing the three screws.
③ Remove the two screws that secure the 1394 connector to the rear panel.
④ Remove the rivet that secures the 1394 Assy.
⑤ Remove the 1394 Assy.

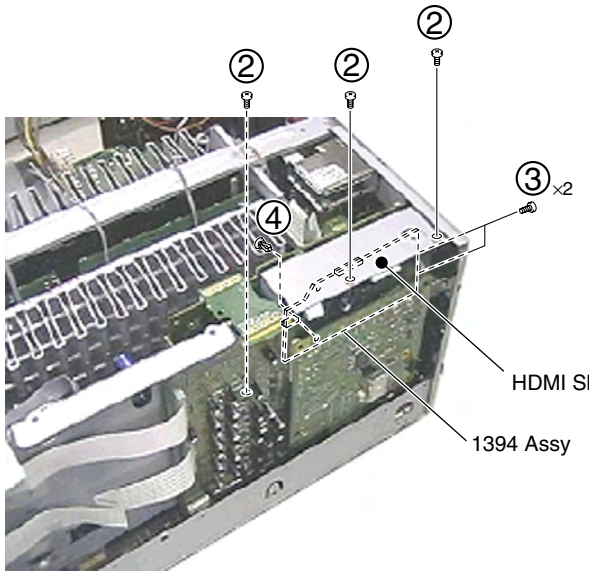

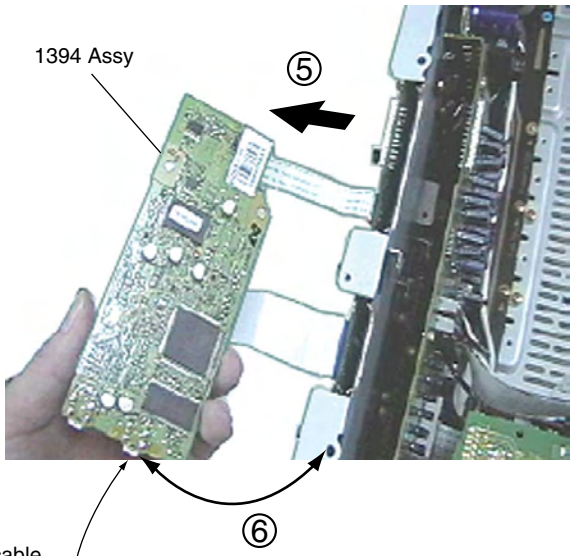

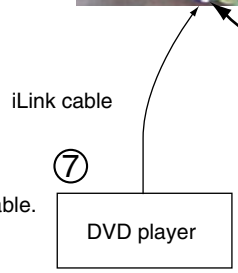


⑥ Connect a cable between the 1394 connector and the chassis.
⑦ Connect the source equipment (DVD player), using an iLink cable.


■ 1394 Assy Troubleshooting

- It is assumed that there is no loose connection or damage in the LCRs.
- There must not be an abnormality in pattern.
- The parts marked like Ⓐ are located in the "1394 Assy check points" on page 222.


Step 1: Connections

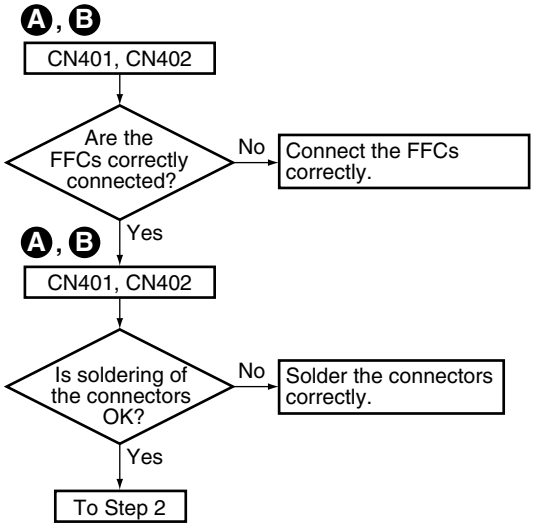


Step 2: Power supply

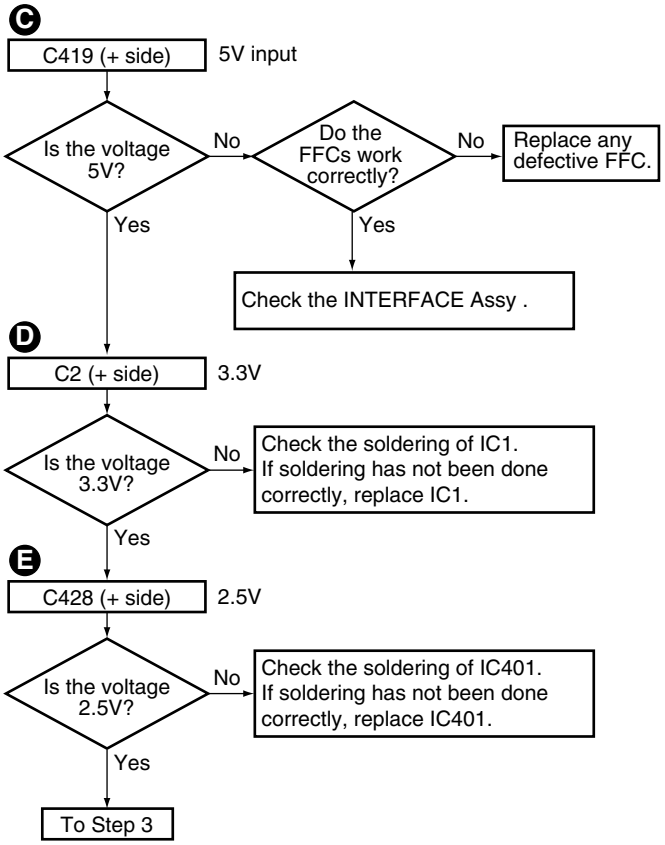


Step 3: Operation of the Master Clock

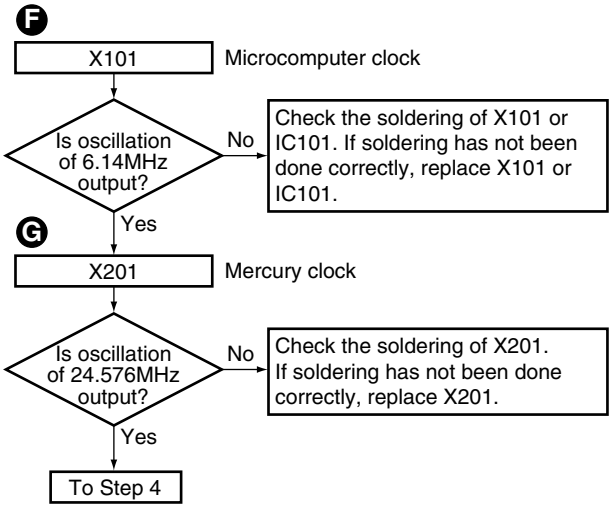



Step 4: Operation of the Master External I/F

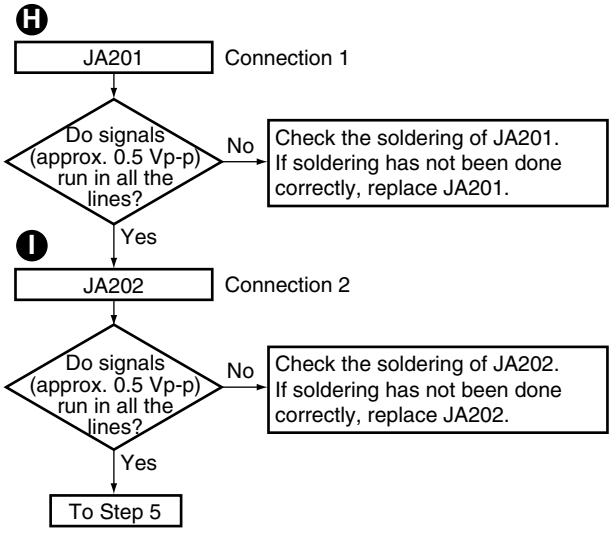



Step 5:

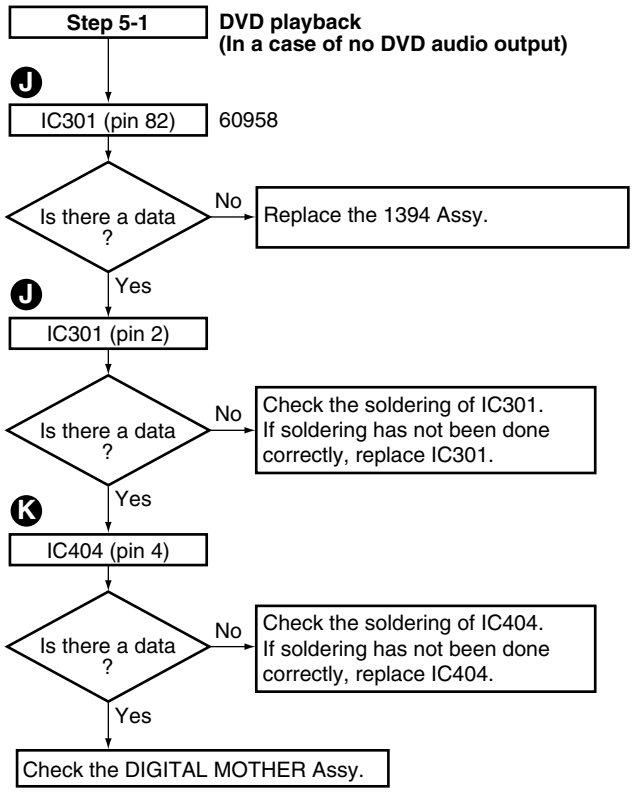
Step 5-1
DVD playback
(In a case of no DVD audio output)
J
IC301 (pin 82)
60958
Is there a data ?
No
Replace the 1394 Assy.
Yes
J
IC301 (pin 2)
Is there a data ?
No
Check the soldering of IC301. If soldering has not been done correctly, replace IC301.
Yes
K
IC404 (pin 4)
Is there a data ?
No
Check the soldering of IC404. If soldering has not been done correctly, replace IC404.
Yes
Check the DIGITAL MOTHER Assy.

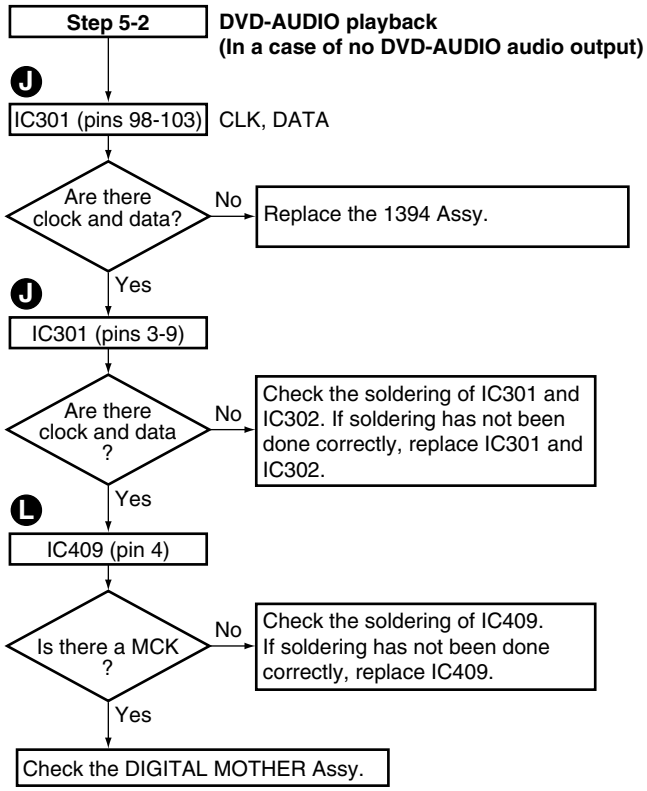

Step 5-2
DVD-AUDIO playback
(In a case of no DVD-AUDIO audio output)
J
IC301 (pins 98-103)
CLK, DATA
Are there clock and data?
No
Replace the 1394 Assy.
Yes
J
IC301 (pins 3-9)
Are there clock and data ?
No
Check the soldering of IC301 and IC302. If soldering has not been done correctly, replace IC301 and IC302.
Yes
L
IC409 (pin 4)
Is there a MCK ?
No
Check the soldering of IC409. If soldering has not been done correctly, replace IC409.
Yes
Check the DIGITAL MOTHER Assy.

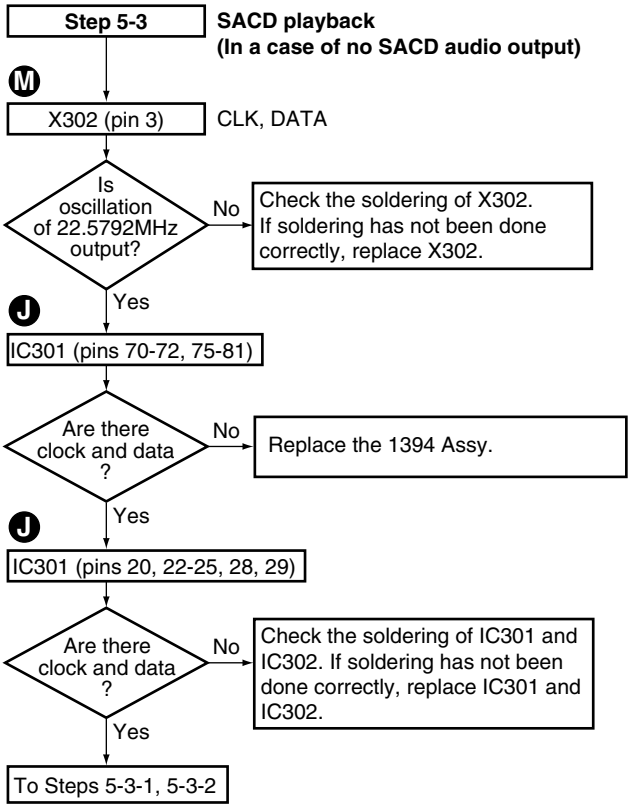

Step 5-3
SACD playback
(In a case of no SACD audio output)
M
X302 (pin 3)
CLK, DATA
Is oscillation of 22.5792MHz output?
No
Check the soldering of X302. If soldering has not been done correctly, replace X302.
Yes
J
IC301 (pins 70-72, 75-81)
Are there clock and data ?
No
Replace the 1394 Assy.
Yes
J
IC301 (pins 20, 22-25, 28, 29)
Are there clock and data ?
No
Check the soldering of IC301 and IC302. If soldering has not been done correctly, replace IC301 and IC302.
Yes
To Steps 5-3-1, 5-3-2

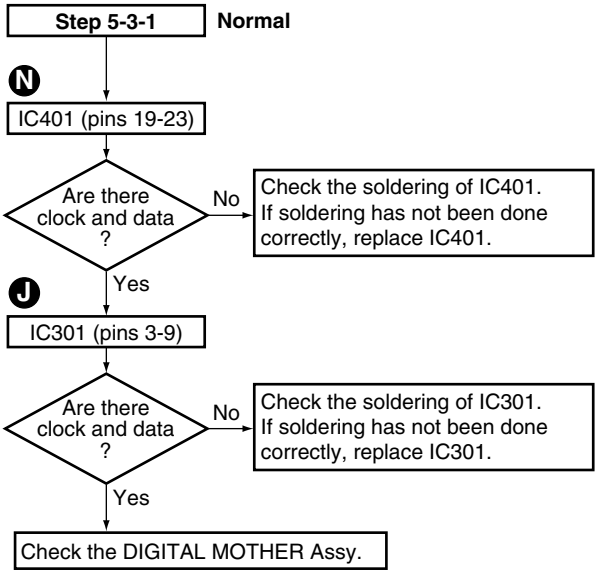
Step 5-3-1
Normal
N
IC401 (pins 19-23)
Are there clock and data ?
No
Check the soldering of IC401. If soldering has not been done correctly, replace IC401.
Yes
J
IC301 (pins 3-9)
Are there clock and data ?
No
Check the soldering of IC301. If soldering has not been done correctly, replace IC301.
Yes
Check the DIGITAL MOTHER Assy.

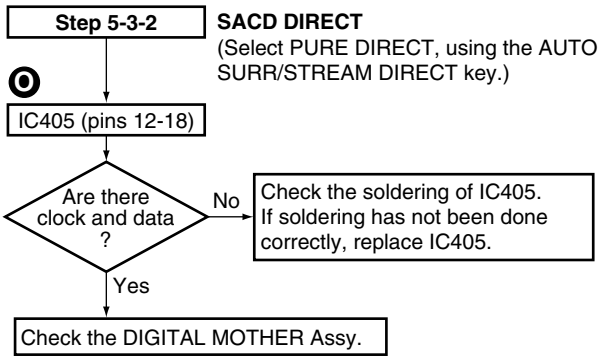
Step 5-3-2
SACD DIRECT
(Select PURE DIRECT, using the AUTO SURR/STREAM DIRECT key.)
O
IC405 (pins 12-18)
Are there clock and data ?
No
Check the soldering of IC405. If soldering has not been done correctly, replace IC405.
Yes
Check the DIGITAL MOTHER Assy.

■ 1394 Assy Check Points

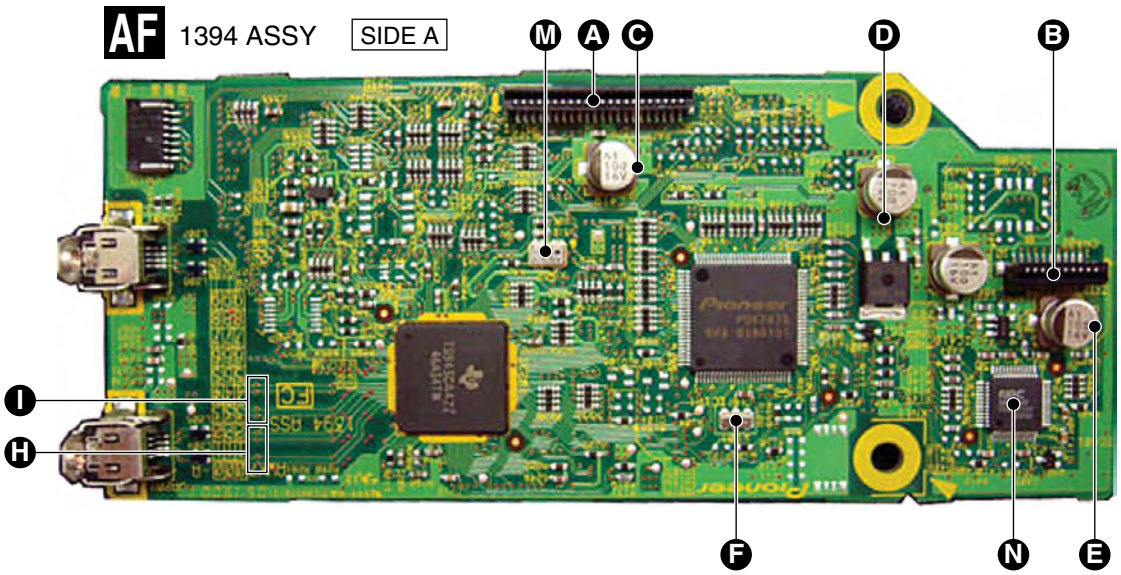

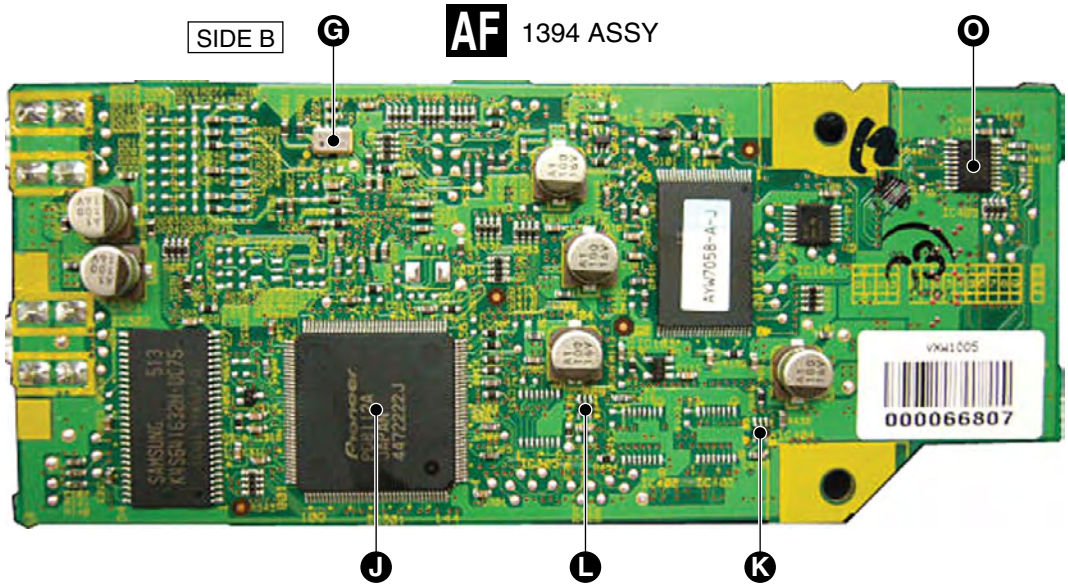

7.1.6 iPod INFORMATION

■ iPod players supported by this unit


This unit supports iPod, iPod mini, and iPod Photo players of the third or subsequent generation that have adopted the iPod Dock connector.
The iPod cable is available as parts (Part No.: ADE7119).

■ Error Messages

MONITOR OUT screen



FL display



[Cause]
There is a problem with the signal path from the iPod to the receiver.

[Measures]
Switch off the receiver and reconnect the iPod to the receiver.
If this doesn't seem to work, try resetting your iPod.

MONITOR OUT screen



FL display



[Cause]
The software version being used with the iPod needs to be updated.

[Measures]
Update the software being used with the iPod (software versions prior to iPod update 2004-10-20 are not supported).

MONITOR OUT screen




FL display



[Cause]
There are no playable songs currently stored in the iPod.

[Measures]
Input some music files compatible with iPod playback.

■ Operation check of iPod functions

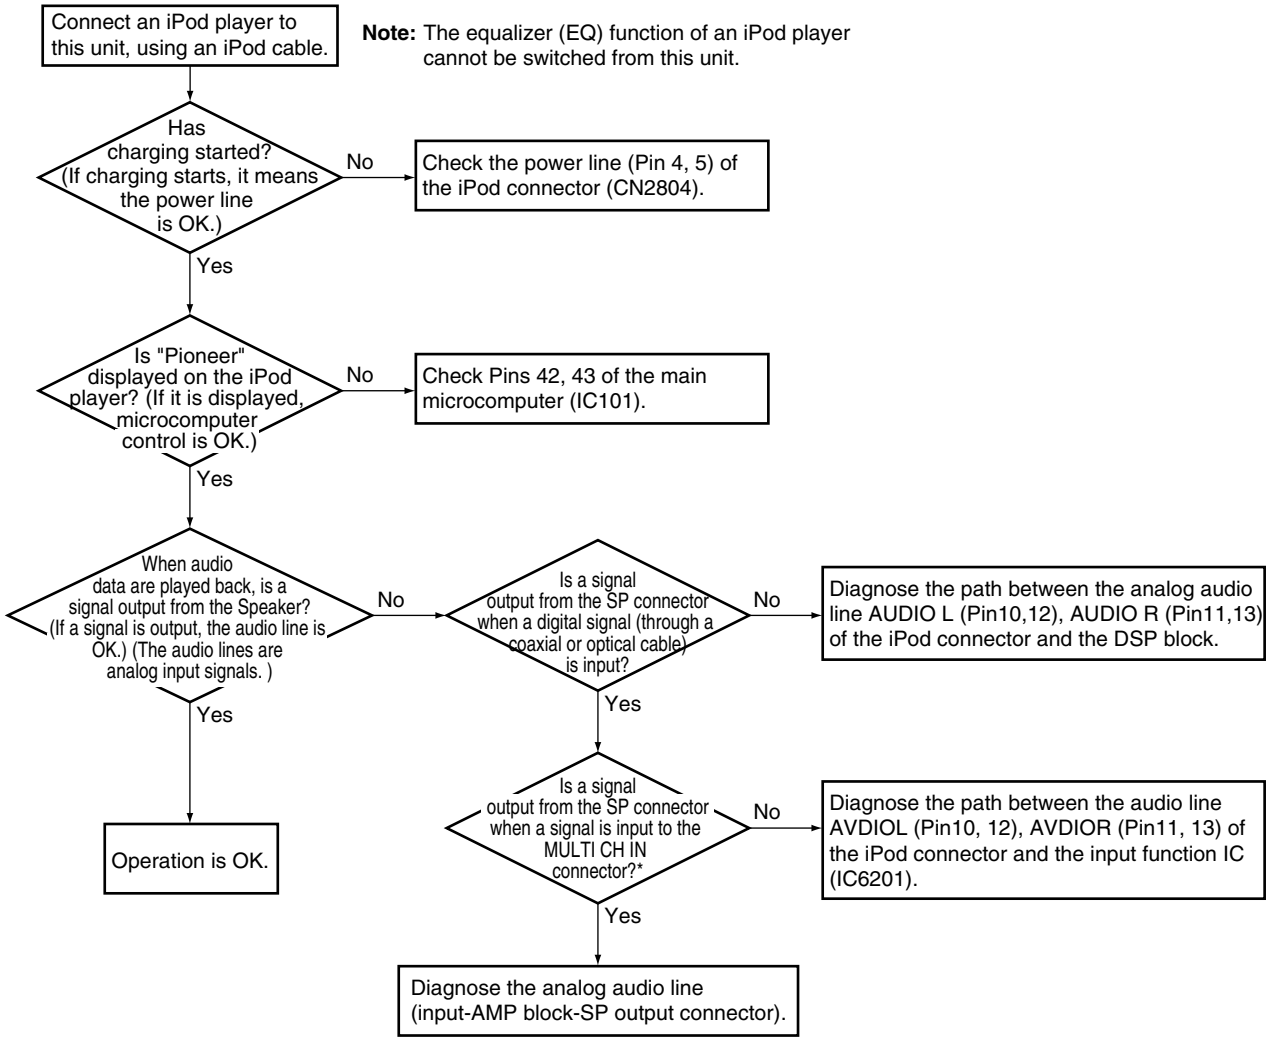

* The "DIGITAL PRECISION PROCESSING" indicator on the front panel light off when switching "AUTO SURR/STREAM DIRECT" button to "PURE DIRECT" or listening through the multichannel analogue inputs.

7.1.7 XM RADIO INFORMATION


■ Products used for receiving XM Satellite Radio service

A commercially available "Connect and Play Antenna" can be used with this unit. To activate the XM RADIO service, it is necessary to receive a broadcast using your "Connect and Play Antenna."

■ About XM messages

Symptom	Cause	Measures
Check Antenna	An XM antenna is not connected.	Check whether the XM antenna cable is securely connected.
XM ANT ERR	A short-circuit is occurring in the XM antenna or the surrounding antenna cable.	Make sure that there is nothing unusual with the XM antenna or XM antenna cable. Turn the power off then back on.
Updating	The radio is being updated with the latest encryption code.	Wait until the encryption code is updated. Channels 00 and 01 should function normally.
No Signal	The XM signal is too weak at the current location.	
Loading	The unit is acquiring audio or program information.	Wait until the unit has received the information.
Off Air	The channel currently selected has stopped broadcasting.	Select another channel.
CH - - -	The user has selected a channel number that does not exist or is not subscribed to.	The receiver automatically switches to Channel 001 or a last-selected channel.
- - - - - - - -	There is no artist name/feature (song/program title), or channel category is associated with the channel.	No action needed.

■ Operation check of XM RADIO function

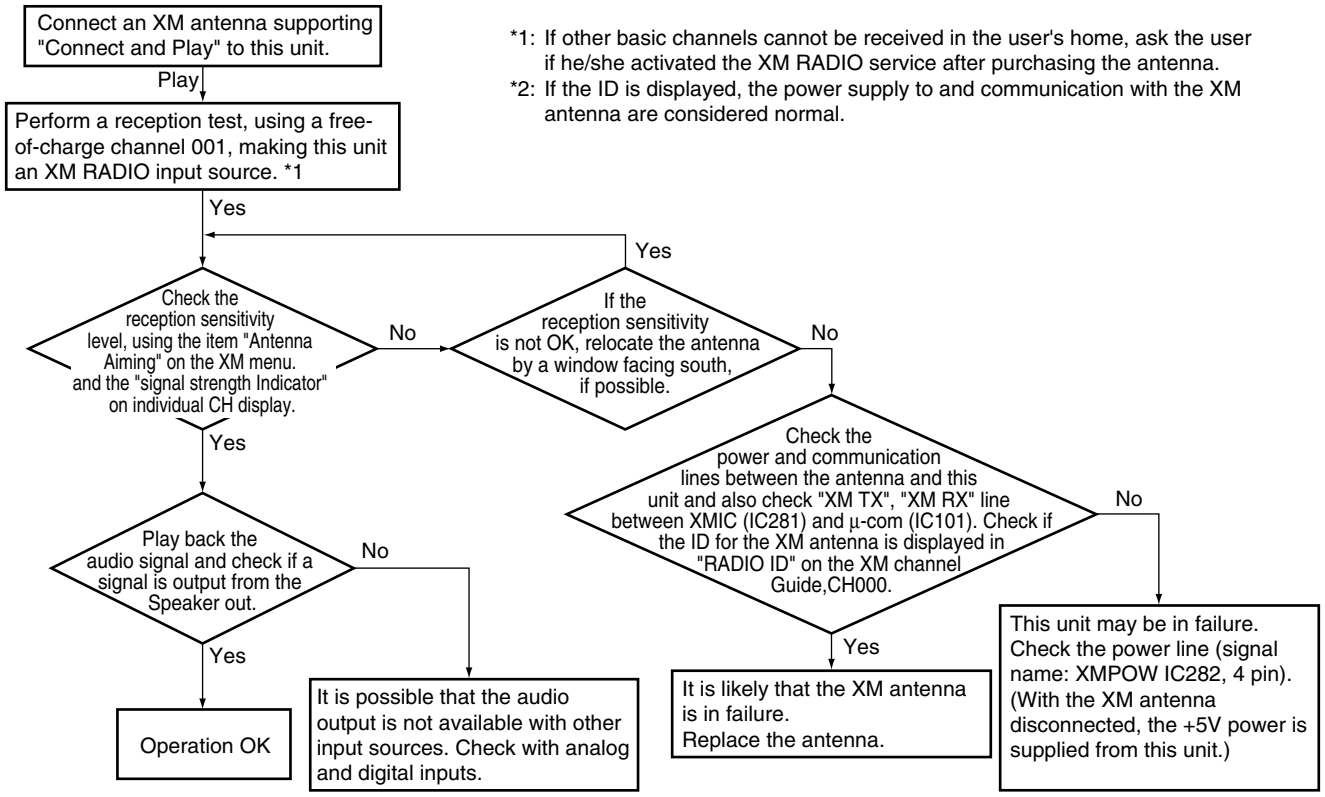

*1: If other basic channels cannot be received in the user's home, ask the user if he/she activated the XM RADIO service after purchasing the antenna.
*2: If the ID is displayed, the power supply to and communication with the XM antenna are considered normal.

7.1.8 HOW TO UPDATE THE DSP FLASH ROM BY PLAYING BACK A CD

[Purpose]

By referring to this section, rewrite the DSP Flash ROM when required. Rewriting is instructed through service information, etc. By playing back a CD-R on which a DSP program is recorded, using a normal CD player, rewriting is possible.


[Tools to be used]

Please use DVD plaer based on MTK system (DV-270, 370, 373, 575K, 280, 380, 383, etc.) ,Mitsubishi system (DV-59AVi, 868AVi, S969AVi, 668AVi, etc.) or Fujitsu system (DV-343, 444, 545, etc.) DO NOT use DVD player based on ST system (DV-353, 454, 250, 400, 555K, 260, 363, 464, 466, 563, etc.) The factory confirmed that DVD players based on ST system cannot send the correct data to the VSX unit using the update disc.
You can check the base system of our DVD players on the firmware version list at PSN web (Niis)

- Coaxial cable or Optical cable
- Update disc(CD-R disc)
- Headphone

[Connections]

Connect this unit and a player, as shown in the figure below.



[Preparations]

Burn the provided DSP program to a CD-R, using commercially available software for writing. It is necessary to select the writing format, "For music player", not "for PC data" format .

Note:

Depending on the writing format of the commercially available software to be used, data on a CD-R may not be used for DSP program rewriting. If the HDMI indicator does not flash when the disc is played back in the way indicated in Step 5 below, data burned on the CD-R are not appropriate. **To know whether the writing software is OK or not, play back the WMA9Pro stream stored on the last track of the disc. (Refer to "Troubleshooting" on next section.)**
If audio data are normally played back, the disc and the player can be used for updating. If audio data are not correctly played back (with noise, etc.), that writing software is not appropriate. Burn the DSP program on a CD-R disc, using other writing software.

[Note]

- **Do NOT disconnect the AC cords of this unit nor the CD/DVD player while rewriting is in progress.**
- **The "OK" indication displayed after updating means the checksum on the flash ROM is OK. If the "OK" indication is not displayed, updating has not been completed.**

Note that confirmation with audio check or version check is insufficient for checking if updating has been completed.
If you set the unit to STANDBY OFF without confirming of "OK" indication on the FL display, be sure to perform the updating procedures again.

[Procedures]

1. Reset the receiver.
   Note: Note that all the data the receiver retains will be cleared.

Resetting the system
Use this procedure to reset all the receiver's settings to the factory default. Use the front panel controls to do this.

1 Switch the receiver into standby.

2 While holding down the front panel AV PARAMETER button, press and hold STANDBY/ON for about three seconds.
The display shows **RESET?**.

3 Press the front panel ENTER button.
The display shows **RESET OK?**.

4 Press SETUP to confirm.
OK appears in the display to indicate that the receiver has been reset to the factory default settings.
- Note that all settings will be saved, even if the receiver is unplugged.

[Procedures]

2. Check the versions of the DSP and microcomputer.
   Check the versions by referring to "Version indication" in "7.1.1 TEST MODE."

3. Connect a CD or DVD player.
   (1) Connect the CD or DVD player to be used for updating to any digital input connector of this unit.
   (2) With the INPUT SELECTOR, select the input being used.

4. Check if the digital signal is locked (received).
   (1) Play back a stream for updating with the player.
   (2) Set the receiver to normal setting, "Signal Select" to Auto, then check on the Signal Select indicator whether the input is set to Auto and Digital.

5. Start up this unit in writing mode.
   (1) Relocate the CD playback starting point to the beginning (time: 0:00) of the track No and pause playback.
   (2) Set the volume of the receiver to - ∞ dB and set the receiver to STANDBY OFF.
   (3) Simultaneously press and hold the ↑ and VIDEO SELECT keys until "DSPF DOWNLOAD" is displayed on the FL display. The unit enters writing mode.

6. Play back the track on CD disc.
   (1) Release Pause mode of the player and play back the track where the DSP program stream signal to be burned is stored.
   (2) After 5-10 seconds, the HDMI indicator starts flashing. Be sure to check that it is flashing.
   (3) Flashing indicates that a correct stream is being received and that updating is in progress.

   Note: Do NOT turn off the unit while the HDMI indicator is flashing. If the unit is turned off, be sure to go back to Step 5. (As the Flash ROM goes into unusual status if the power is off during rewriting, the unit may not start properly.) Even in such a case, you can restore the unit by performing Steps 5 to 8.

7. Wait until rewriting is completed.
   (1) Basically, wait until "OK" is displayed on the FL display. It takes about 2 minutes for updating.
   (2) After confirming that "OK" is displayed, stop or pause the player then after 5 seconds set the player to STANDBY OFF.

8. Check the version of the program after updating.
   (1) Check the version by simultaneously pressing and holding the STANDARD SURROUND and STANDBY keys.
   (2) For confirmation, check basic operations.

■ Troubleshooting

Symptoms	Items to be checked
The HDMI indicator does not start flashing, and 10 seconds or more has elapsed after a updating stream is input.	Is DSP writing mode entered? (Simultaneously press and hold the ↑ and VIDEO SELECT keys.)
	Is DIR locked? → You can check this on the Signal Select indicator if the input is set to Auto and Digital. If DIR is not locked, check the input function and digital connections between the player and this unit.
	Is the stream (Track No., etc.) being played back correct?
	Are compressed audio signals, such as WMA, being input when or after writing mode is entered ? → As soon as the compressed audio signals are input, writing mode is exited. It is recommended that playback be paused at the beginning of the track of a updating stream then writing mode is entered by simultaneous pressing of the keys. Release Pause mode after entering of writing mode is confirmed.
	Make sure that the player being used is appropriate for updating, in the following way: • Turn the receiver off. • Connect a speaker to the front channel of the receiver. • Turn the receiver back on normally. (Normal power on, not by simultaneous pressing of the keys) • Turn the volume up moderately. • Play back the WMA9Pro stream stored on the last track of the disc. **Note:** Do not turn the volume up too much, as a large noise may be generated when this test stream is played back on some players. → If music is played back normally, that player can be used for updating. ("WMA" indication on the FL display) → If noise is output, updating cannot be done with that player. Use another player. **Tips:** The fact that PCM data can be played back or that a dts-CD can be played back does not mean that the player can be used for updating.
Writing mode is not entered upon simultaneous pressing of the ↑ and VIDEO SELECT keys.	Is the volume control of the receiver set to -∞ dB? If not, set it to -∞ dB (- - -).
	Reset the receiver then enter writing mode. **Note:** All the user data stored in the receiver are cleared when the receiver is reset.
"OK" is not displayed.	Is the track played back from the beginning to the end? → With the receiver in writing mode, be sure to play back the stream track twice.
	If an error is generated because any scratches on the disc, "OK" is not displayed. → In such a case, play back the same stream stored on another track as backup.

7.1.9 HOW TO UPDATE THE FLASH ROMS FOR VARIOUS MICROCOMPUTERS

■ HDMI, MAIN and DSP microcomputer

[Purpose]


Refer to this section when updating of a Flash ROM is required by the service information, etc.

[Tools to be used]

- PC with a serial port
- RS-232C cable (9-pin to 9- or 25-pin, cross)
- Program for updating (ufu.exe)
- RS-232C I/F jig (GGF1348)
- Firmware ("mot" extension)
- 7-pin FFC (VDA1681)


[Connections] (HDMI microcomputer)

Connect as indicated in the figure below:

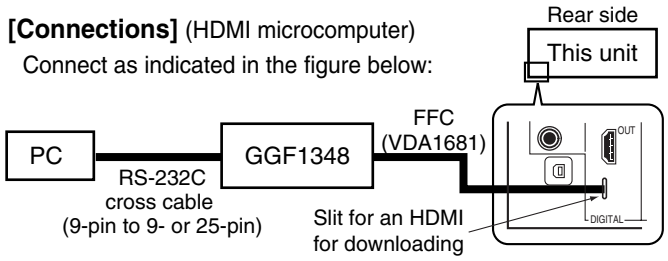

[Connections] (MAIN microcomputer)
(DSP microcomputer)

Connect as indicated in the figure below:




[Note]


Do NOT disconnect the AC power cords of this unit nor the PC.

[Procedures]

1. Turn off the power to this unit by setting the main volume level to "---dB."
2. Connect the 232C I/F jigs and the PC, as indicated in "Connections."
3. (HDMI microcomputer) :
   Simultaneously press and hold the VSEL and ← keys for about 5 seconds.
   (MAIN microcomputer) :
   Simultaneously press and hold the VSEL and ↓ keys for about 5 seconds.
   (DSP microcomputer) :
   Simultaneously press and hold the VSEL and → keys for about 5 seconds.
4. The unit is turned on, and "HDMI DOWNLOAD", "MAIN DOWNLOAD" or "DSPM DOWNLOAD" is displayed.
5. Double-click on "ufu.exe".
6. Check that "Full" is selected in MODE SELECT.
7. Select the firm ware file with "mot" extension.
8. Select the communication speed.
   - Basic speed: 19200
   - Data transfer speed: 57600
9. Click on "START" button.
10. (HDMI microcomputer) :
    "Completed" is displayed for about 1 minutes in the"ufu.exe" window.
    (MAIN microcomputer), (DSP microcomputer) :
    "Completed" is displayed for about 3 minutes in the"ufu.exe" window.
11. Disconnect then reconnect the AC power cord of the unit. If the unit is not reset, retry from Step 2.
12. Check the version.
    Following the procedures described in "Version indication" in "7.1.1 TEST MODE," check that the version has been changed to a new one.

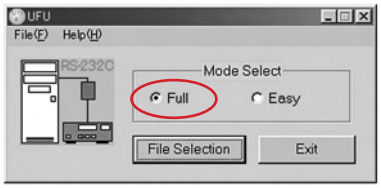

Check that "Full" is selected in MODE SELECT.

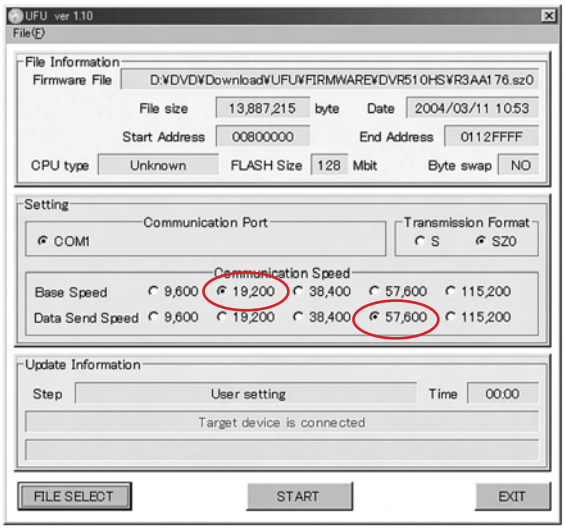

Select the communication speed.
- Basic speed: 19200
- Data transfer speed: 57600

7.1.10 DISASSEMBLY

Note : Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

1. Before the Power Amp Block is removed

Before the Power Amp Block is removed, discharge C4209 and C4210 on the TRANS 2-1 Assy, as indicated below.
If you don't, the IC protectors (IC4261 and IC4262) on the VH TR Assy may be open, and DC voltage may be generated at the power amplifier output, which will result in "AMP ERR."


[Procedure]


① Unplug the AC code.

② Discharge C4209 and C4210 on the TRANS 2-1 Assy.
Note: For discharging, use a load of 100Ω, 3W or more, to protect the IC protectors. Do NOT discharge instantly by short-circuiting.

③ Check that the voltage between the electrodes of each C4209 and C4210 is 1V or less.

④ Mount the Power Amp Block.

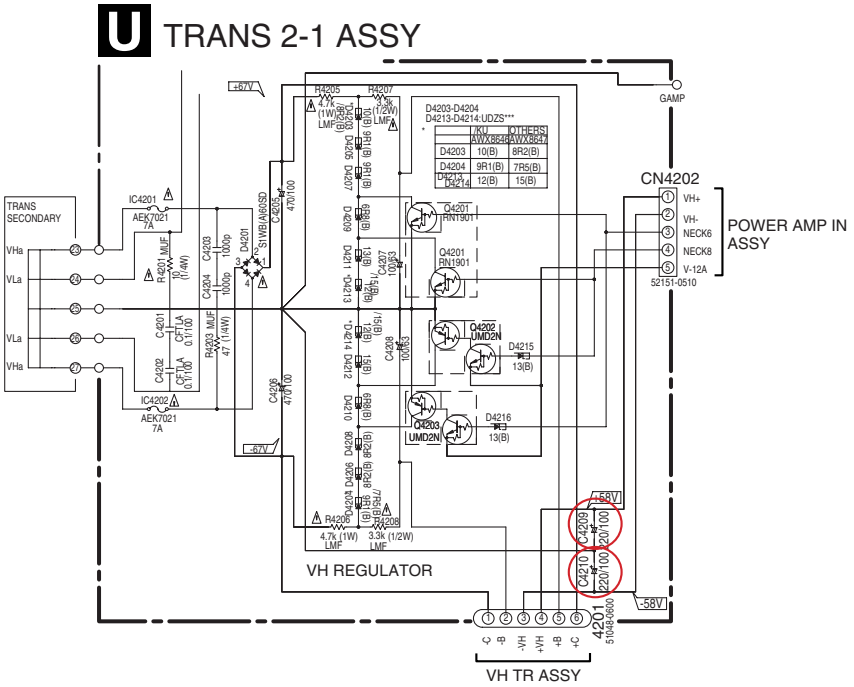


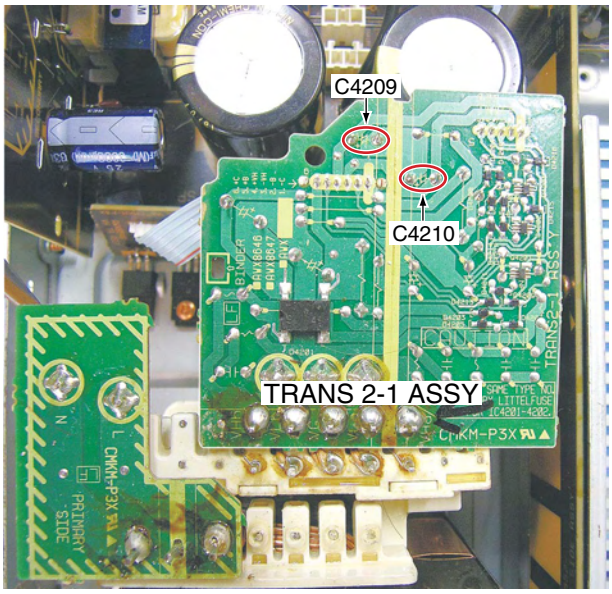


2. Disassembly

1 Bonnet

① Remove the four screws.
② Remove the four screws.

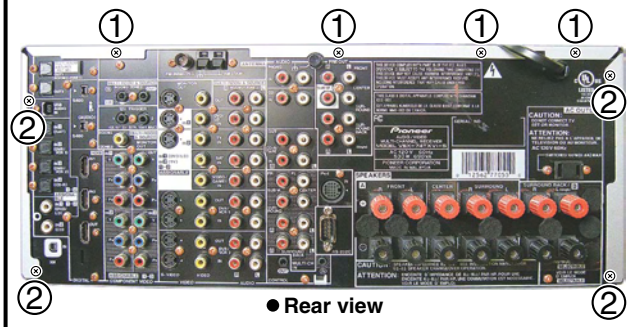


③ Remove the fourteen screws.
④ Remove the bonnet.

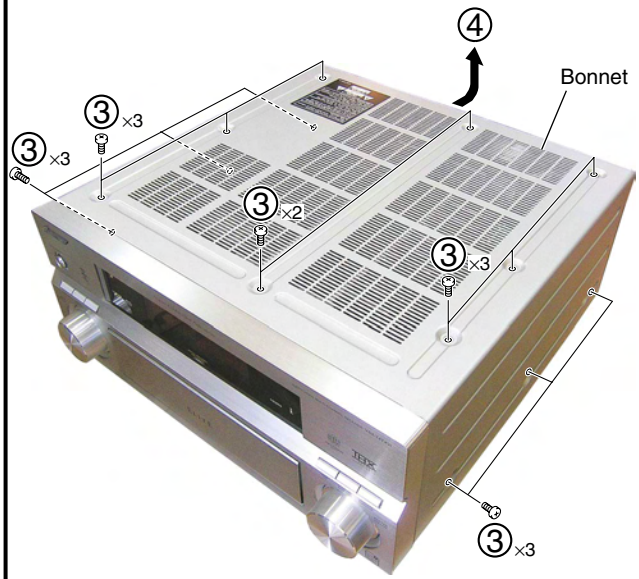


2 Power Amp Block


Before removing the power AMP Block, discharge C4209 and C4210 on TRANS 2-1 Assy.
Refer to "1. Before the Power AMP Block is removed".

① Remove the two screws.
② Remove the four screws.

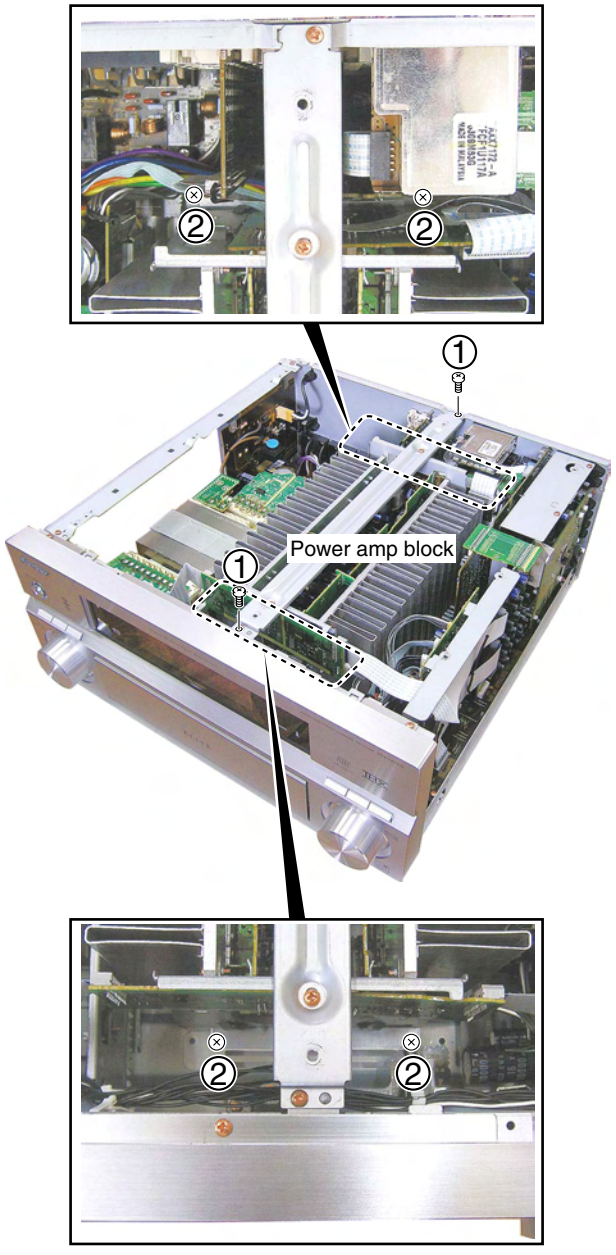

③ Disconnect the three flexible cables and one connector.
④ Disconnect the six connectors and one jumper.
⑤ Remove the power amp block.

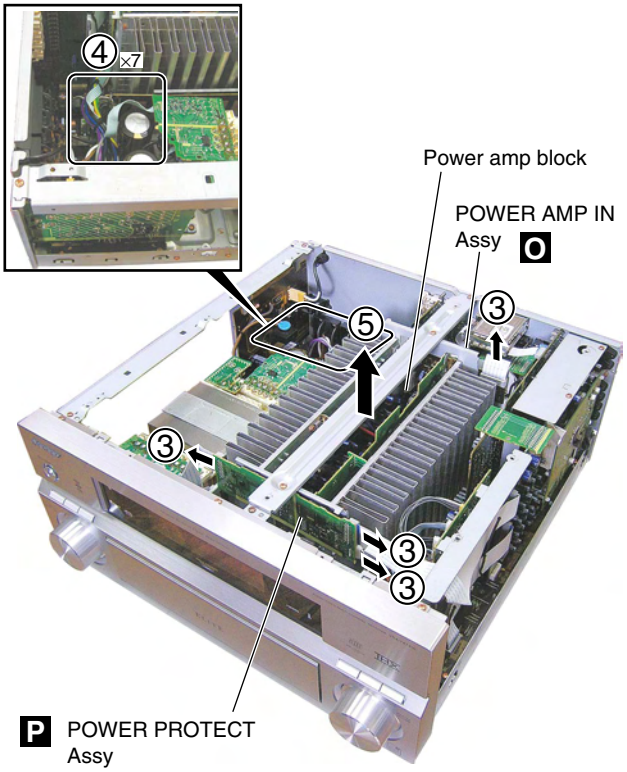


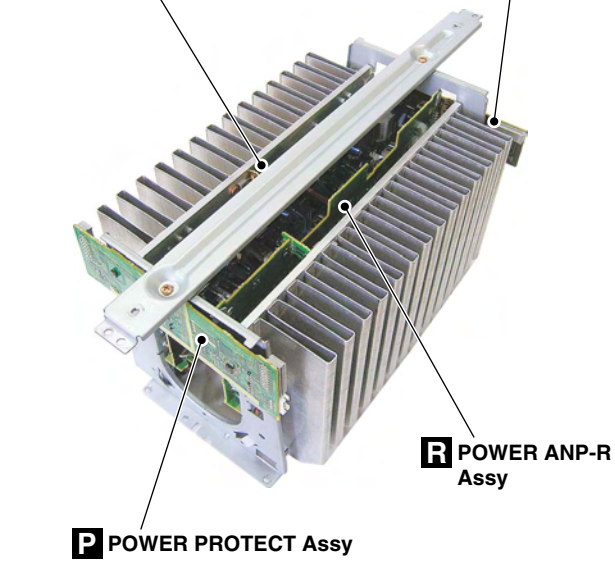

3 Replacing the Power Transistor


• Center Beam V1

① Remove the two screws.
② Remove the center beam V1.

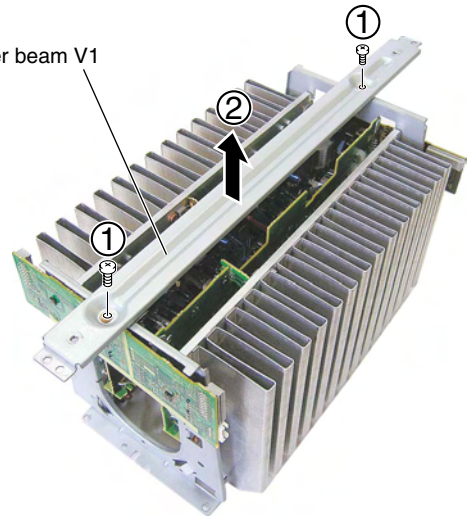

• POWER PROTECT Assy


① Remove the one nylon rivet.
② Remove the POWER PROTECT Assy by removing the two connectors.

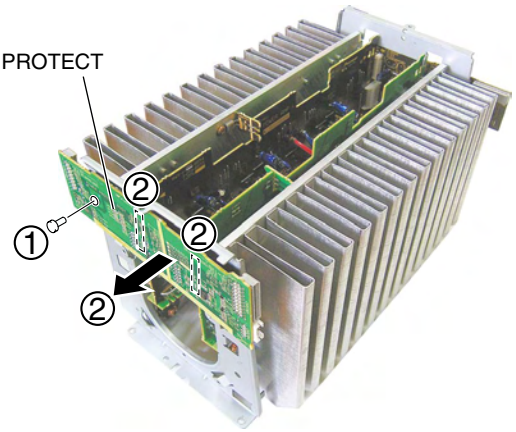

• **HS Angle 74**

① Remove the four screws.

② Remove the HS angle 74.

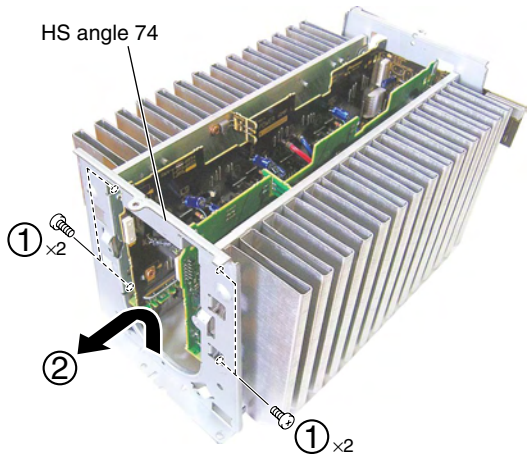


• **POWER AMP IN Assy**

① Remove the one nylon rivet.

② Remove the POWER AMP IN Assy by removing the four connectors.


O

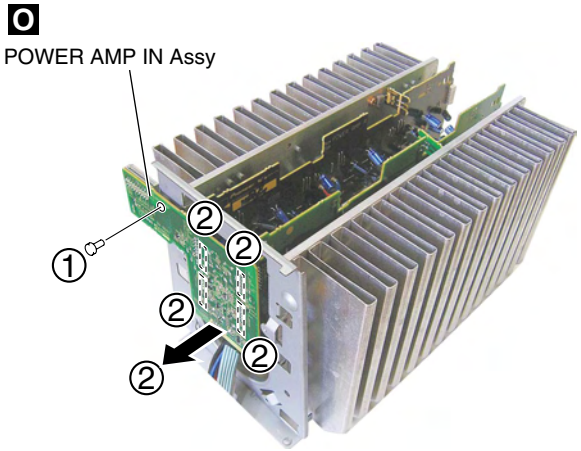

• **HS Angle 74**

① Remove the four screws.


② Remove the HS angle 74.

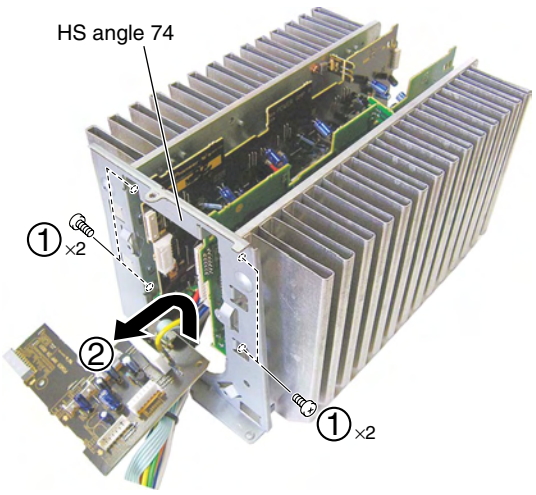

• **Replacing the Power Transistor**

① Remove the screw.

Q R

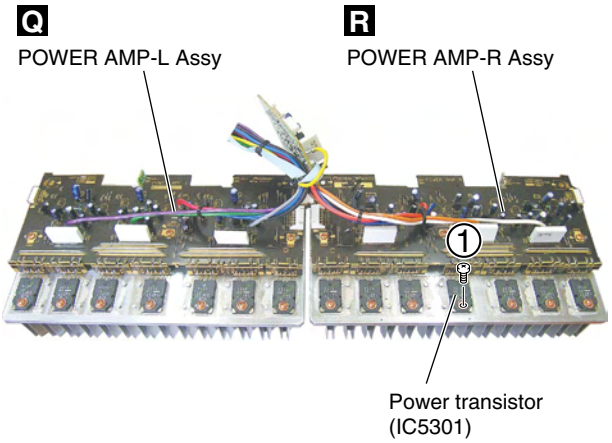


Replace


4 Replacing the HDMI & DVC ASSY

• Rear Panel

① Remove the four cushion circle 16Bs.
② Disconnect the one connector.
③ Remove the screw.
④ Remove the three screws.
⑤ Remove the two screws.
⑥ Remove the four screws.

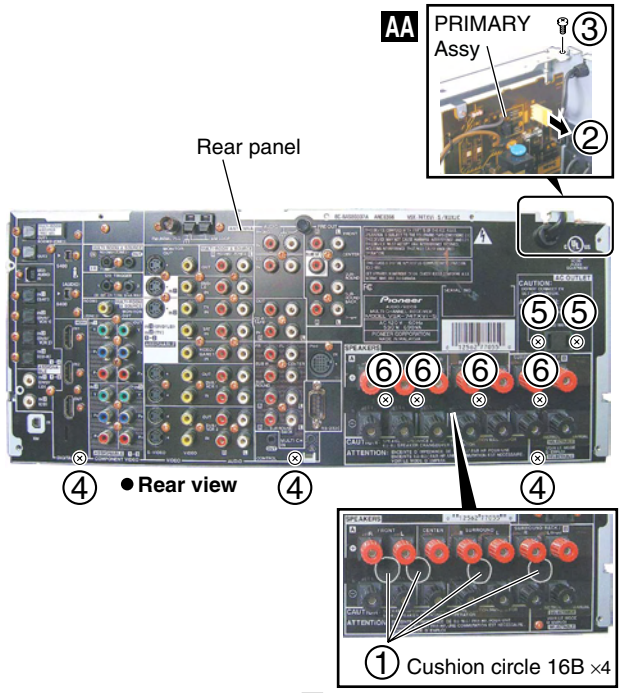


⑦ Remove the two screws.
⑧ Remove the two screws.
(VSX-74TXVi and VSX-74TXVi-S only)
⑨ Remove the 47 screws.
⑩ Remove the rear panel.

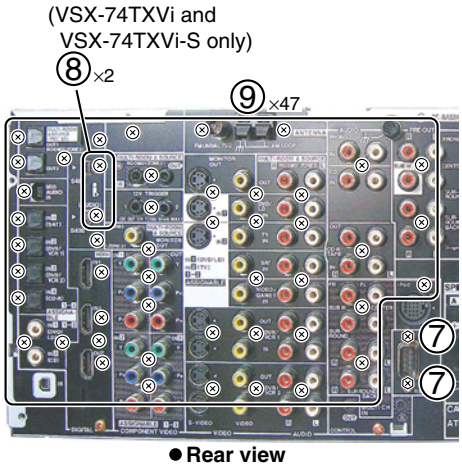


• HDMI Shield

① Remove the BRIDGE 1 Assy by removing the two connectors.
② Remove the three screws.
③ Remove the HDMI shield.

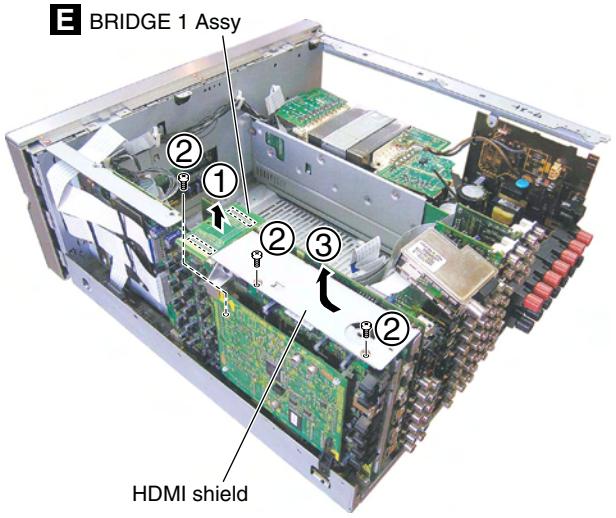


• FM/AM TUNER Unit

① Remove the FM/AM TUNER Unit by removing the one flexible cable.

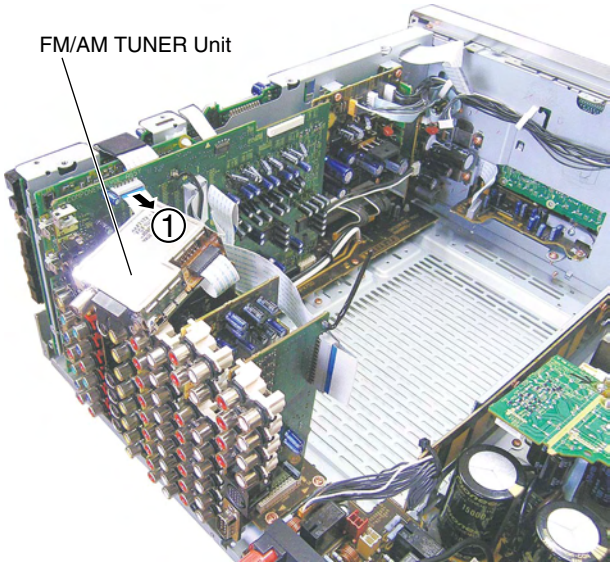


• **PCB Assys**

① Remove the PREOUT & CONTROL, AUDIO & MULTI CH IN, V-AUDIO, COMPOSITE V, S VIDEO, BRIDGE 2 and BRIDGE 3 Assys from the INTERFACE Assy.

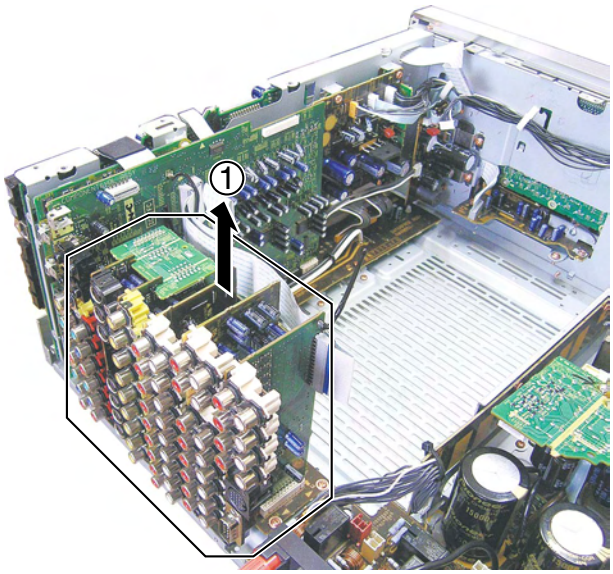

• **COMPONENT & VOL Assy**


① Remove the COMPONENT & VOL Assy from the INTERFACE Assy.

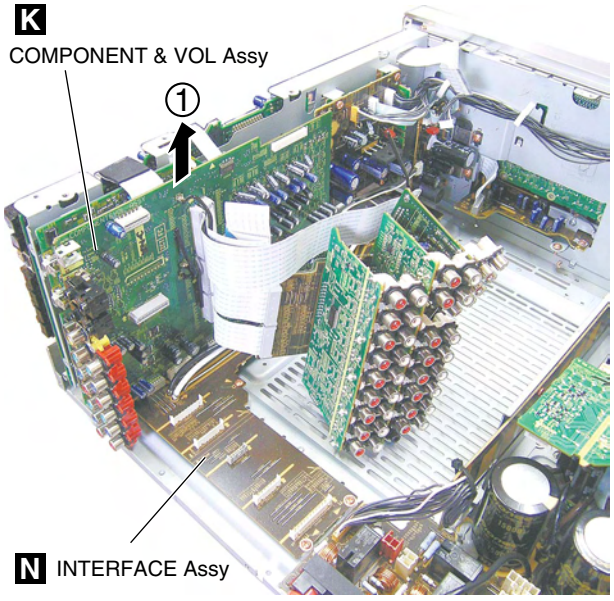

• **HDMI & DVC Assy**

① Remove the nyron rivet.

② Remove the HDMI & DVC Assy from the INTERFACE Assy.

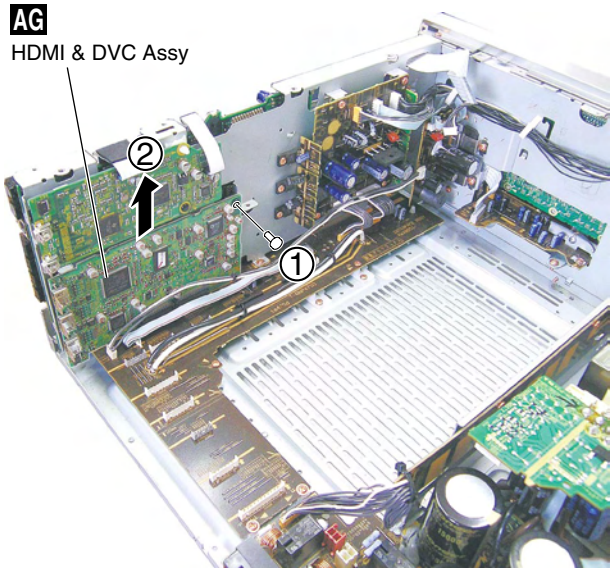

Replace

5 Replacing the INTERFACE ASSY


• DIGITAL MOTHER Assy

① Remove the nyron rivet.

② Disconnect the two flexible cables.
(VSX-74TXVi and VSX-74TXVi-S only)

③ Disconnect the two flexible cables.

④ Remove the DIGITAL MOTHER Assy with DSP Assy from the INTERFACE Assy.

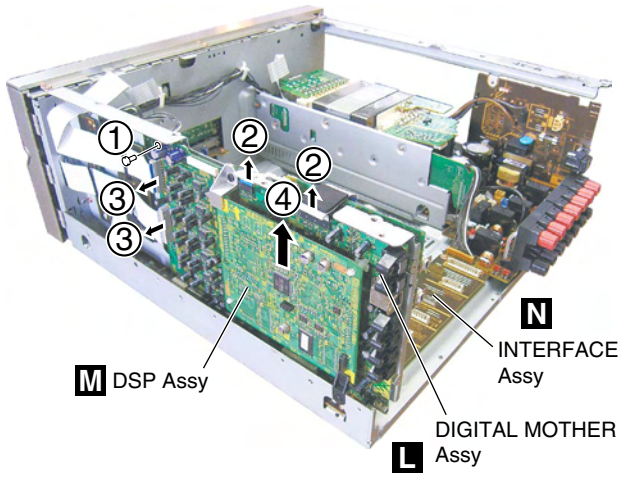


• DSP Shield 74

① Remove the three screws.

② Disconnect the two connectors.

③ Remove the DSP shield 74.

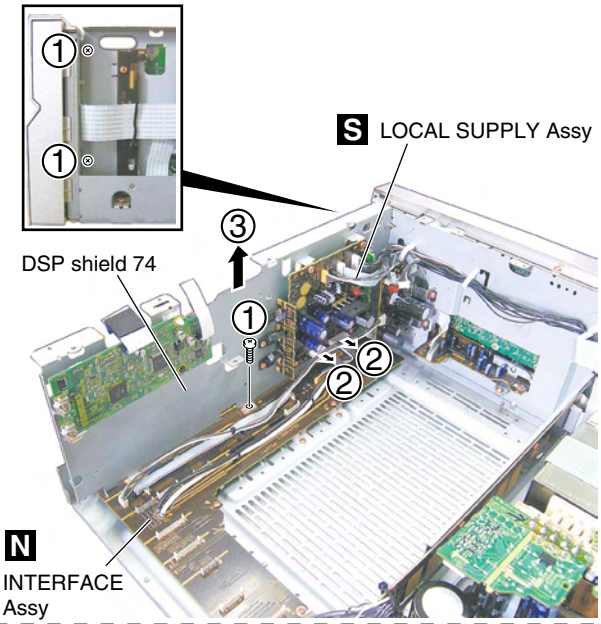


• INTERFACE Assy

① Remove the two screws.

② Remove the four screws.

③ Release the locking card spacer.

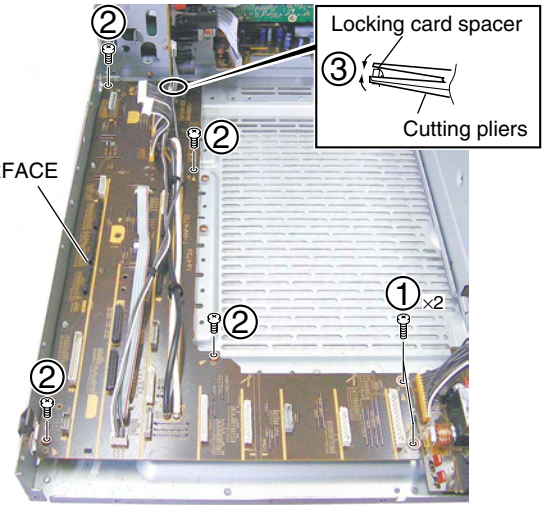

④ Remove the INTERFACE Assy.

Replace

7.1.11 HOW TO DIAGNOSE THE PRODUCT WITH THE POWER AMP BLOCK REMOVED

The failure in the Power Amp Block is suspected as shown in the table below.

Symptom that is highly suspected to be caused by a failure in the Power Amp Block	Possible cause
① The power cannot be turned on, and the MCACC LED is flashing.	The DC detection circuit is activated in order to prevent extension of the failure. **Note:** See "7.1.12 Failure Diagnosis of the Power Amp Block."
② The unit is shut down after "AMP ERR" is displayed on the FL display. Then the unit goes into the state described in ① above.	
③ "OVER HEAT" is displayed on the FL display.	The posistors (TH5001 and TH5301) in the Power Amp Block are open. **Note:** The resistance of the thermistor at normal temperature is about 330 ohms.
④ The unit is shut down without an error message on the FL display. Then the PHASE CONTROL LED flashes.	Power Amp overloaded, defective overload-detection circuit in the Power Amp Block, etc.

Failure diagnosis with the power on is not possible for some board assys, because the large Power Amp Block lies in the way. However, if the Power Amp Block is removed, the thermistor connected to the Power Amp Block is disconnected, which will activate the protection circuits.

To enable failure diagnosis of those board assys, after the Power Amp Block is removed in the manner described below.

[Procedures]


① Remove the bonnet by removing the 22 screws.

② Remove the two screws.

③ Remove the four screws.

④ Disconnect the six connectors and one jumper.


⑤ Disconnect the flexible cable.

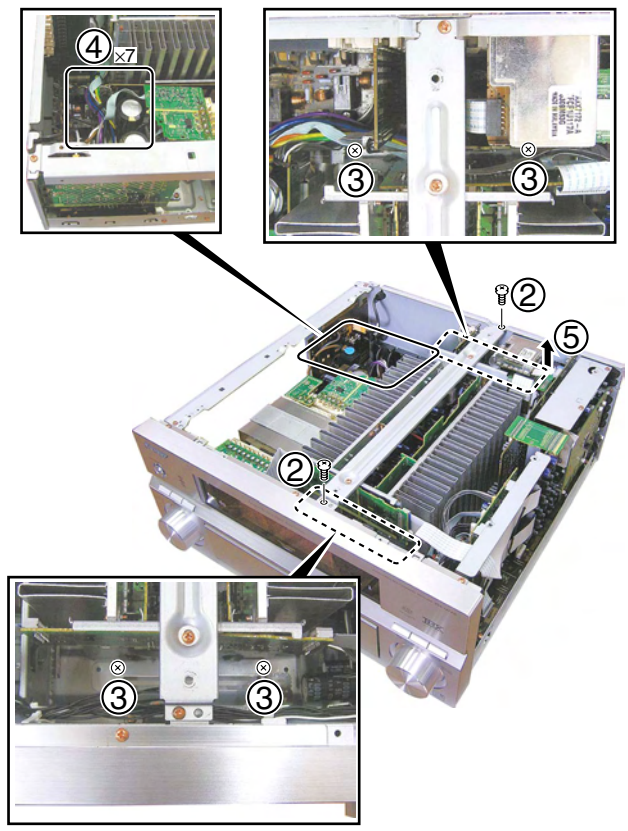

⑥ Remove the nylon rivet.

⑦ Remove the POWER PROTECT Assy from the Power Amp Block.


⑧ Remove the Power Amp Block.

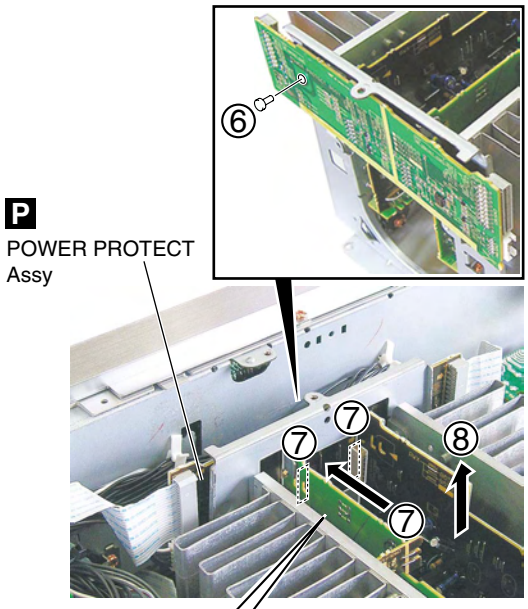


The POWER PROTECT Assy can be easily removed with no load applied to the connectors if you pull out the board by pushing on it at its center from the rear.

Note:
To prevent an electric shock hazard, after removing the Heat Sink Block, discharge the condenser of the ±VL line, by discharging CN4101 or CN4102 on the SP/PS Assy, using a discharging resistor. (It is recommended to make a resistance of 100 ohms or more in the series-parallel connection, using four or more discharging resistors of 100 ohms, 3 W.)

⑨ Short circuit between pin8 (POSI_1) and pin 9 (GND) of CN5701 of the POWER PROTECT Assy, and Pin 3 (POSI_1) and pin 4 (GND) of CN5702 .

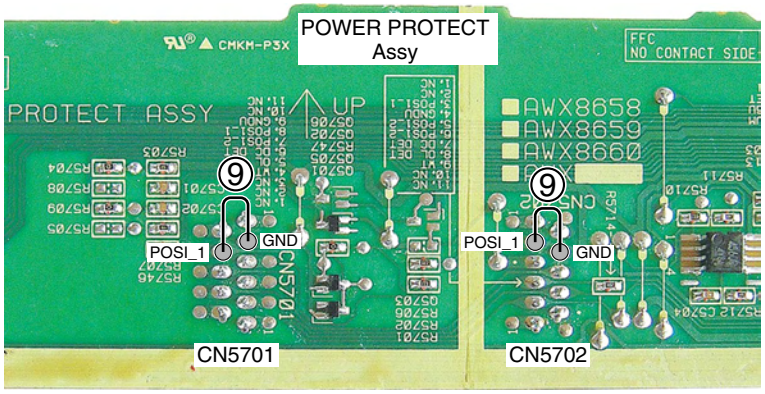

⑩ Turn the power on. (The power is on without the protection circuits activated.)

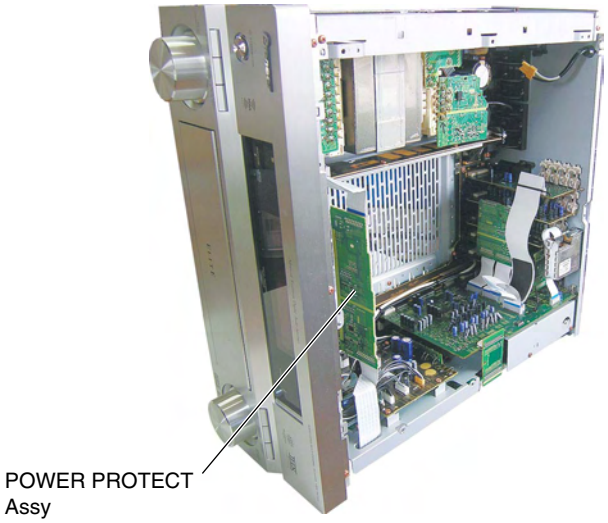

Diagnose

⚠ Warning: Before putting the Power Amp Block back


After performing a diagnosis, be sure to remove the solders at short circuit points. Also, be sure to discharge the electric charges of the VH line (charges of the electrolytic condenser) before putting the Power Amp Block back. (See "1. Before the Power Amp Block is removed.")

Note: If you connect the connectors without discharging, some parts, such as a resistor or Fuse IC on VH line, may be damaged by the inrushing current.

7.1.12 FAILURE DIAGNOSIS OF THE POWER AMP BLOCK

If "AMP ERR" flashes on the FL display immediately after the power is turned on, then the unit is shut down, the power amplifier block is damaged, and DC voltage is output. In this case, either or both of the current and voltage amplifier block(s) is(are) damaged. Herein is described how to diagnose which block is in failure.

Most cases of damage in the power amplifier block are damage on the power transistor caused by excess power consumption, such as short-circuiting of the speaker terminals and use of low-impedance speakers that are not guaranteed. The failure diagnosis is therefore conducted on the current amplifier block first, then on the voltage amplifier block.

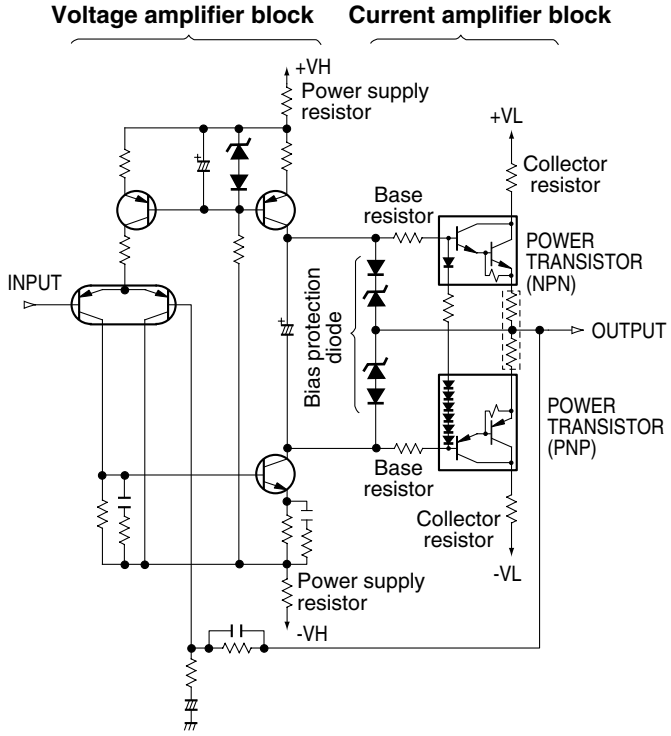

Notes:

- During diagnosis of the amplifier block with the power on, if you touch a high-impedance circuit (in particular, both ends of 100-ohm base resistance of the power transistor) with the probe of an oscilloscope or a tester, the circuit may be damaged by oscillation of an oscilloscope or a tester.
- While a failure diagnosis is being conducted with the power on, do NOT touch parts other than the power, input, and output blocks.
- Only the points with CP (check point) marks in the schematic diagram can be diagnosed while the power is on.

1. Damage on the current amplifier block

Check of the power transistor and collector resistance of each channel, using a tester

Tips:

In most cases where the current amplifier block is damaged by an excess power consumption of the power transistor, damage is caused by short-circuiting between the collector and emitter. The collector resistor is open because of large collector current.
In this case, the channel in failure can be identified by checking on which channel the resistance between C and E of the power transistor is 0 Ω (some hundreds of ohms or less) and the resistor of collector resistor is ∞ Ω. As a damage scar appears on the surface of the part when the collector resistor is open, you can also check it by visual inspection.

Note:

Even if the result of the measurement of resistance with the tester shows that the power transistor is not short-circuited, that power transistor may be damaged if the paired push-pull power transistor has been damaged. Therefore, it is recommended to replace both parts when either needs to be replaced.

2. Damage on the voltage amplifier block

Check of the base resistance (100 Ω) and Power supply (±VH) resistor (4.7 Ω) of each channel, using a tester

Tips:

In most cases, the voltage amplifier block is damaged by oscillation generated by a special load connection, a large-amplitude output at higher frequencies out of the audible range, or an influence of damage on the current amplifier block (power transistors). In many cases, the base resistance (100 Ω) is damaged. It is necessary to check each part of the voltage amplifier block, as damage may have been extended to other parts.
In most cases, the resistors are open/damaged, or the transistors or diodes are short-circuited/damaged.

- The resistors must not be open (the resistance must not be higher than the indicated value).
- The terminals of transistors or diodes must not be short-circuited (the resistance must not be extremely low).
  (If the resistance is low but you are not sure if it is extremely low, compare the value with that of the normal channel.)

If the voltage amplifier block is damaged, Power supply (±VH) resistor (4.7 Ω) may also be damaged.

3. Other damage

Check of the bias protection diodes

Tips:

If the power amplifier is damaged, the bias protection diodes may be deteriorated or open.
For a channel that has been diagnosed to be in failure, the Vf (forward descending voltage) of the four diodes must be checked to confirm that they are not deteriorated or open, using a tester, after repair of the amplifier. If these diodes are deteriorated, its distortion/frequency characteristics may be affected. If these diodes are open, the scale of damage on the power transistors may be extended if any abnormality is generated in the amplifier next time.

■ Operating temperature of the posistor assembling to the heat sink

	No.	Part No.	Operating temperature	Purpose	Operation
POS1L	TH5001	PTFM04BC222Q2N34B0	105 °C	Detection of abnormal temperature	OVERHEAT perform at more than 105 °C
POS1R	TH5301	PTFM04BC222Q2N34B0	105 °C	Detection of abnormal temperature	OVERHEAT perform at more than 105 °C
POS2	TH5002	–	–	–	–

* Operating temperature is body temperature of the posistor (the metal part).

7.2 PARTS

7.2.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

● List of IC

IC101(ADSP-21266SKSTZ-2D), IC104(TC7W139FU), IC106(CY7C1049CV33-12VXC), IC101(PEG116A), IC103,IC2281,IC2282,IC203,IC211(CD4094BPW), IC2640,IC2407,IC2008,IC2009(CD4094BNS), IC201(PEG117A), IC281(F2602E-01), IC282(AAT4618IGV-0.5-1), IC304,IC305,IC318(SN74LVC1G97DCK), IC101(Sil9031CTU) IC301(Sil9030CTU), IC401(ADV7400AKSTZ-80), IC501(PEG118A), IC3201(PE5503A), IC2007(PDC131A)

■ ADSP-21266SKSTZ-2D (DSP ASSY: IC101)

• DSP IC

● Pin Function

No.	Pin Name	I/O	Pin Function
1	VDDINT	–	Core power supply (+1.2V)
2	CLKCFG0	I	Core/CLKIN ratio control
3	CLKCFG1	I	Core/CLKIN ratio control
4	BOOTCFG0	I	Boot configuration select
5	BOOTCFG1	I	Boot configuration select
6	GND	–	Power supply return
7	VDDEXT	–	I/O power supply (+3.3V)
8	GND	–	Power supply return
9	VDDINT	–	Core power supply (+1.2V)
10	GND	–	Power supply return
11	VDDINT	–	Core power supply (+1.2V)
12	GND	–	Power supply return
13	VDDINT	–	Core power supply (+1.2V)
14	GND	–	Power supply return
15	FLAG0	I/O	Flag pin
16	FLAG1	I/O	Flag pin
17	AD7	I/O	Parrallel port address/Data
18	GND	–	Power supply return
19	VDDINT	–	Core power supply (+1.2V)
20	GND	–	Power supply return
21	VDDEXT	–	I/O power supply (+3.3V)
22	GND	–	Power supply return
23	VDDINT	–	Core power supply (+1.2V)
24	AD6	I/O	Parrallel port address/Data
25	AD5	I/O	Parrallel port address/Data
26	AD4	I/O	Parrallel port address/Data
27	VDDINT	–	Core power supply (+1.2V)
28	GND	–	Power supply return
29	AD3	I/O	Parrallel port address/Data
30	AD2	I/O	Parrallel port address/Data
31	VDDEXT	–	I/O power supply (+3.3V)
32	GND	–	Power supply return
33	AD1	I/O	Parrallel port address/Data
34	AD0	I/O	Parrallel port address/Data
35	$\overline{WR}$	I	Parallel port write enable
36	VDDINT	–	Core power supply (+1.2V)
37	VDDINT	–	Core power supply (+1.2V)
38	GND	–	Power supply return
39	$\overline{RD}$	O	Parallel port read enable
40	ALE	I	Parallel port address latch enable
41	AD15	I/O	Parrallel port address/Data
42	AD14	I/O	Parrallel port address/Data
43	AD13	I/O	Parrallel port address/Data
44	GND	–	Power supply return
45	VDDEXT	–	I/O power supply (+3.3V)
46	AD12	I/O	Parrallel port address/Data


No.	Pin Name	I/O	Function
47	VDDINT	–	Core power supply (+1.2V)
48	GND	–	Power supply return
49	AD11	I/O	Parrallel port address/Data
50	AD10	I/O	Parrallel port address/Data
51	AD9	I/O	Parrallel port address/Data
52	AD8	I/O	Parrallel port address/Data
53	DAI_P1 (SD0A)	I/O	Digital audio interface
54	VDDINT	–	Core power supply (+1.2V)
55	GND	–	Power supply return
56	DAI_P2 (SD0B)	I/O	Digital audio interface
57	DAI_P3 (SCLK0)	I/O	Digital audio interface
58	GND	–	Power supply return
59	VDDEXT	–	I/O power supply (+3.3V)
60	VDDINT	–	Core power supply (+1.2V)
61	GND	–	Power supply return
62	DAI_P4 (SFS0)	I/O	Digital audio interface
63	DAI_P5 (SD1A)	I/O	Digital audio interface
64	DAI_P6 (SD1B)	I/O	Digital audio interface
65	DAI_P7 (SCLK1)	I/O	Digital audio interface
66	VDDINT	–	Core power supply (+1.2V)
67	GND	–	Power supply return
68	VDDINT	–	Core power supply (+1.2V)
69	GND	–	Power supply return
70	DAI_P8 (SFS1)	I/O	Digital audio interface
71	DAI_P9 (SD2A)	I/O	Digital audio interface
72	VDDINT	–	Core power supply (+1.2V)
73	VDDEXT	–	I/O power supply (+3.3V)
74	GND	–	Power supply return
75	VDDINT	–	Core power supply (+1.2V)
76	GND	–	Power supply return
77	DAI_P10 (SD2B)	I/O	Digital audio interface
78	DAI_P11 (SD3A)	I/O	Digital audio interface
79	DAI_P12 (SD3B)	I/O	Digital audio interface
80	DAI_P13 (SCLK23)	I/O	Digital audio interface
81	DAI_P14 (SFS23)	I/O	Digital audio interface
82	DAI_P15 (SD4A)	I/O	Digital audio interface
83	VDDINT	–	Core power supply (+1.2V)
84	GND	–	Power supply return
85	GND	–	Power supply return
86	DAI_P16 (SD4B)	I/O	Digital audio interface
87	DAI_P17 (SD5A)	I/O	Digital audio interface
88	DAI_P18 (SD5B)	I/O	Digital audio interface
89	DAI_P19 (SCLK45)	I/O	Digital audio interface
90	VDDINT	–	Core power supply (+1.2V)
91	GND	–	Power supply return
92	GND	–	Power supply return
93	VDDEXT	–	I/O power supply (+3.3V)
94	DAI_P20 (SFS45)	I/O	Digital audio interface
95	GND	–	Power supply return

No.	Pin Name	I/O	Function
96	VDDINT	–	Core power supply (+1.2V)
97	FLAG2	I/O	Flag pin
98	FLAG3	I/O	Flag pin
99	VDDINT	–	Core power supply (+1.2V)
100	GND	–	Power supply return
101	VDDINT	–	Core power supply (+1.2V)
102	GND	–	Power supply return
103	VDDINT	–	Core power supply (+1.2V)
104	GND	–	Power supply return
105	VDDINT	–	Core power supply (+1.2V)
106	GND	–	Power supply return
107	VDDINT	–	Core power supply (+1.2V)
108	VDDINT	–	Core power supply (+1.2V)
109	GND	–	Power supply return
110	VDDINT	–	Core power supply (+1.2V)
111	GND	–	Power supply return
112	VDDINT	–	Core power supply (+1.2V)
113	GND	–	Power supply return
114	VDDINT	–	Core power supply (+1.2V)
115	GND	–	Power supply return
116	VDDEXT	–	I/O power supply (+3.3V)
117	GND	–	Power supply return
118	VDDINT	–	Core power supply (+1.2V)
119	GND	–	Power supply return
120	VDDINT	–	Core power supply (+1.2V)
121	$\overline{\text{RESET}}$	I	Processor reset
122	$\overline{\text{SPIDS}}$	I	Serial peripheral interface slave device select
123	GND	–	Power supply return
124	VDDINT	–	Core power supply (+1.2V)
125	SPICLK	I/O	Serial peripheral interface clock signal
126	MISO	I/O	SPI master in slave out
127	MOSI	I/O	SPI master out slave in
128	GND	–	Power supply return
129	VDDINT	–	Core power supply (+1.2V)
130	VDDEXT	–	I/O power supply (+3.3V)
131	AVDD	–	Analog power supply (+1.2V)
132	AVSS	–	Analog power supply return
133	GND	–	Power supply return
134	$\overline{\text{RSTOUT}}$/CLKOUT	O	Reset out/Local clock out
135	$\overline{\text{EMU}}$	O	Emulation status
136	TDO	O	Test data output (JTAG)
137	TDI	I	Test data input (JTAG)
138	$\overline{\text{TRST}}$	I	Test reset (JTAG)
139	TCK	I	Test clock (JTAG)
140	TMS	I	Test mode select (JTAG)
141	GND	–	Power supply return
142	CLKIN	I	Local clock in
143	XTAL	O	Crystal oscillator pin
144	VDDEXT	–	I/O power supply (+3.3V)

■ TC7W139FU (DSP ASSY : IC104)

• 2-to-4 Line Decoder

● Pin Arrangement (Top view)

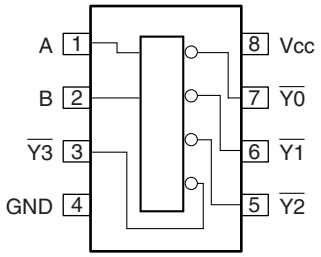


● Truth Table

Inputs		Outputs				Selected Output
Select		$\overline{Y0}$	$\overline{Y1}$	$\overline{Y2}$	$\overline{Y3}$	
B	A					
L	L	L	H	H	H	$\overline{Y0}$
L	H	H	L	H	H	$\overline{Y1}$
H	L	H	H	L	H	$\overline{Y2}$
H	H	H	H	H	L	$\overline{Y3}$


■ CY7C1049CV33-12VXC (DSP ASSY : IC106)

• 512k X 8 Static RAM

● Pin Arrangement (Top view)

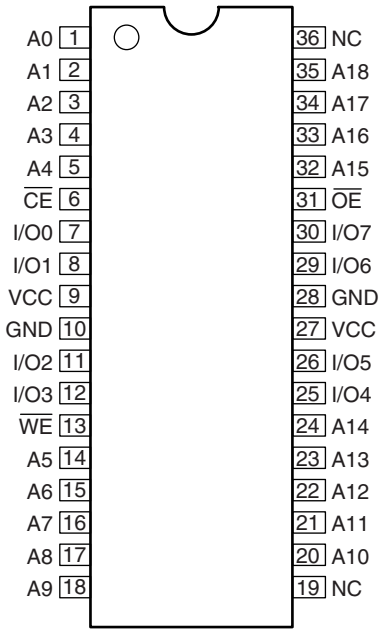


● Block Diagram

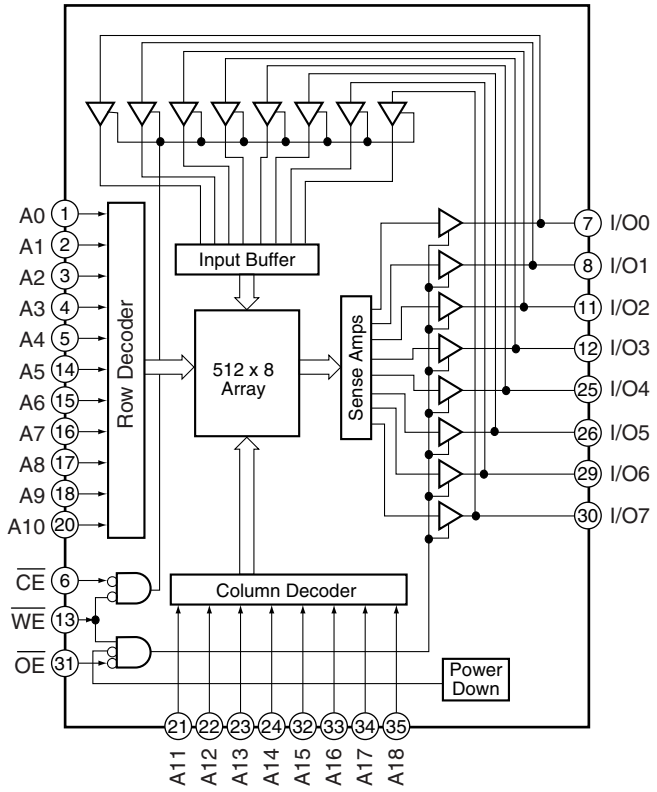

■ PEG116A (DIGITAL MOTHER ASSY : IC101)

• Main Microcomputer

● Pin Arrangement (Top view)

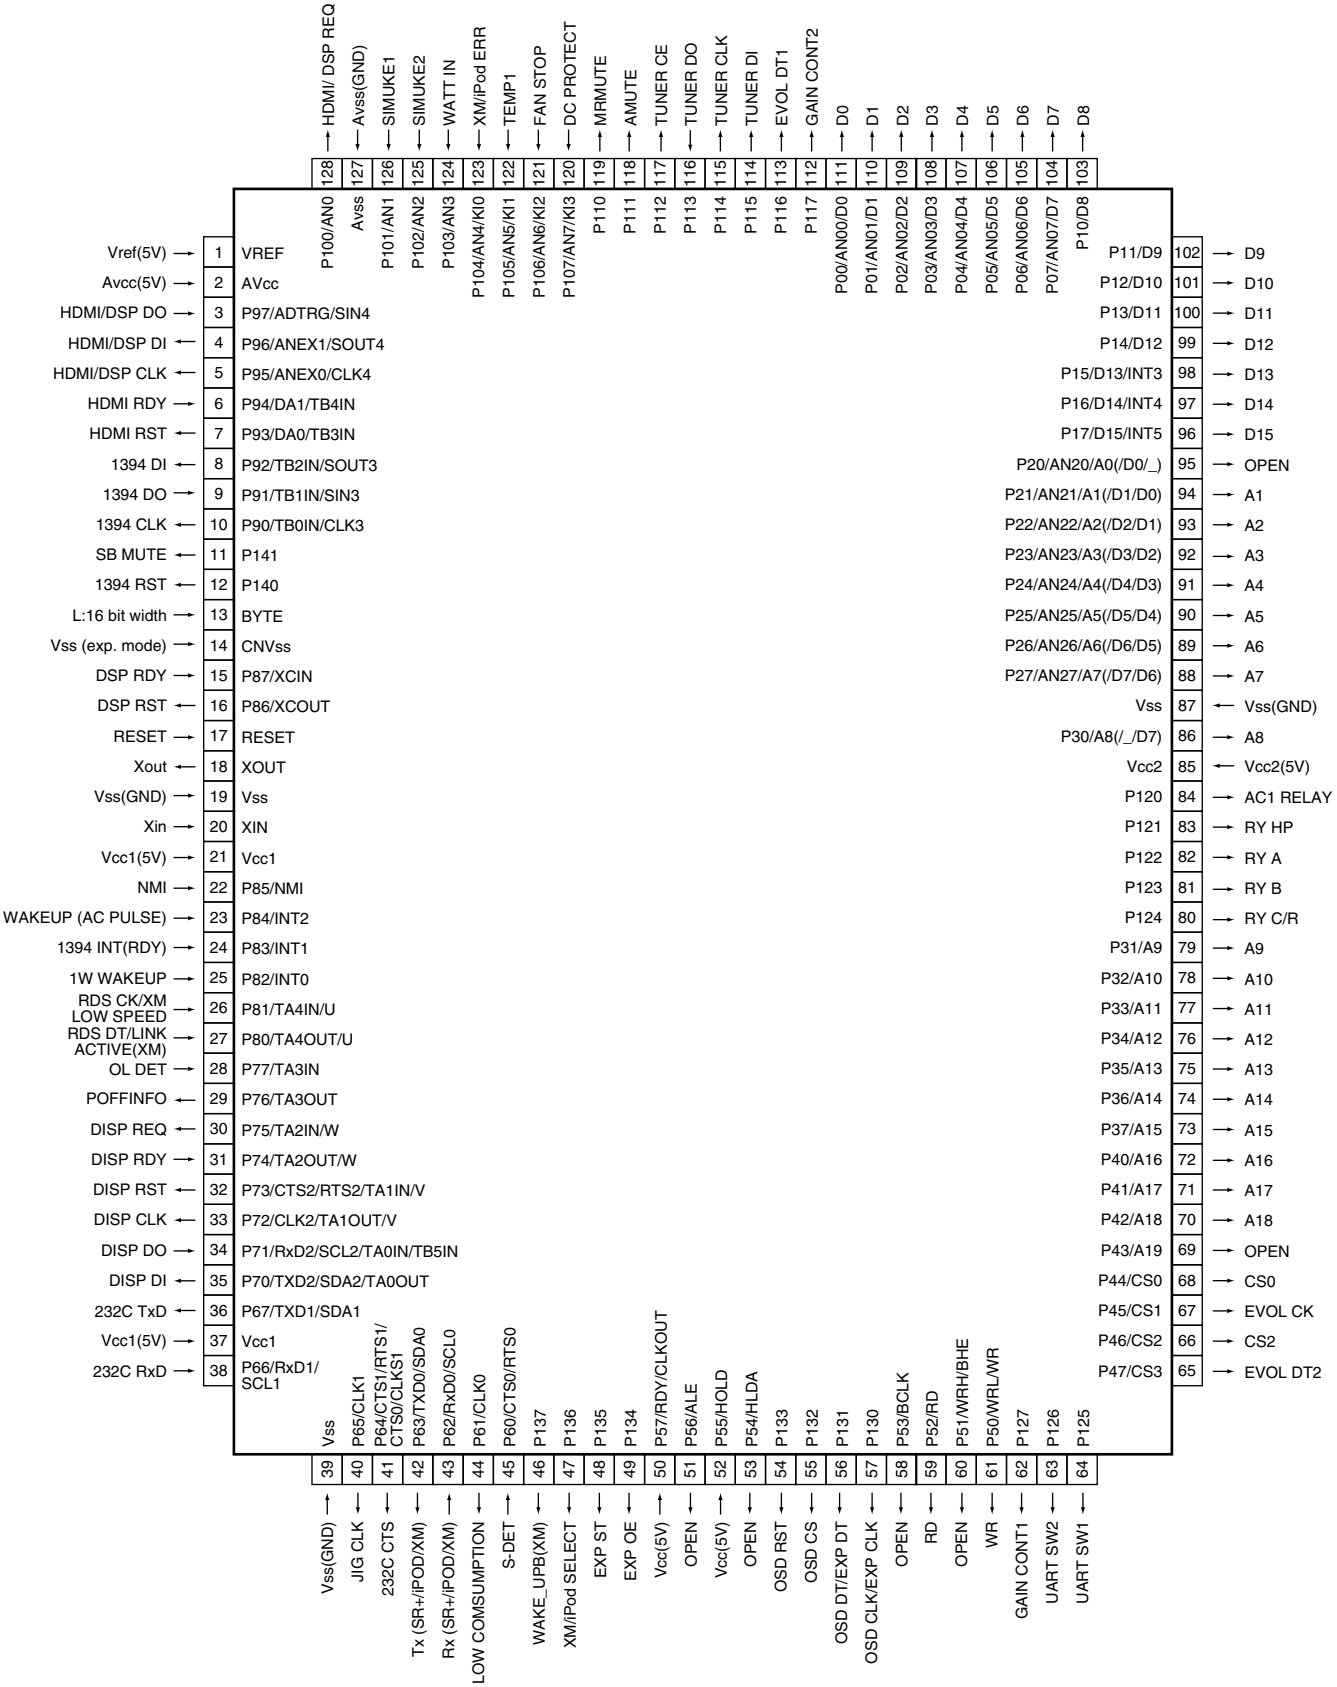

● Pin Function

No.	Mark	Pin Name	I/O	Pin Function
1	VREF	Vref(5V)	-	Reference voltage
2	AVcc	Avcc(5V)	-	Power supply (5V)
3	P97/ADTRG/SIN4	HDMI/DSP DO	I	Data input for HDMI/DSP microcomputer
4	P96/ANEX1/SOUT4	HDMI/DSP DI	O/L	Data output for HDMI/DSP microcomputer
5	P95/ANEX0/CLK4	HDMI/DSP CLK	O/L	Clock output for HDMI/DSP microcomputer
6	P94/DA1/TB4IN	HDMI RDY	I	Ready input for HDMI microcomputer
7	P93/DA0/TB3IN	HDMI RST	O/L	Reset output for HDMI microcomputer
8	P92/TB2IN/SOUT3	1394 DI	O/L	Communication with 1394 HOST controller
9	P91/TB1IN/SIN3	1394 DO	I	Communication with 1395 HOST controller
10	P90/TB0IN/CLK3	1394 CLK	O/L	Communication with 1396 HOST controller
11	P141	SB MUTE	O/L	Mute for SB ch (L:MUTE)
12	P140	1394 RST	O/L	Communication with 1396 HOST controller
13	BYTE	L:16 bit width		External flash bus width setting L= 16 bit, H= 8 bit.
14	CNVss	Vss(exp. mode)		Shift from single-chip mode to memory expanded mode.
15	P87/XCIN	DSP RDY	I	Communication with microcomputer Request input to the main
16	P86/XCOUT	DSP RST	O/L	Communication with DSP controller
17	RESET	RESET	I	Reset input from the main microcomputer
18	XOUT	Xout	O	Connect a ceramic resonator (15.7MHz).
19	Vss	Vss(GND)	-	Ground
20	XIN	Xin	I	Connect a ceramic resonator
21	Vcc1	Vcc1(5V)	-	Power supply(5V)
22	P85/NMI	NMI	I	-
23	P84/INT2	WAKEUP (AC PULSE)	(I)	AC pulse input
24	P83/INT1	1394 INT(RDY)	I	Communication with 1394 HOST controller
25	P82/INT0	1W WAKEUP	I	Communication with display microcomputer
26	P81/TA4IN/U	RDS CK/XM LOW SPEED	I	(RDS model) CLOCK IN/(XM) DATA IN
27	P80/TA4OUT/U	RDS DT/LINK ACTIVE(XM)	I	(RDS model) DATA IN/(XM) LINK signal
28	P77/TA3IN	OL DET	I	OVERLOAD detection (L: abnormality)
29	P76/TA3OUT	POFFINFO	O/L	Notice of power off to the DSP controller (Pull off an outlet)
30	P75/TA2IN/W	DISP REQ	O/L	Communication with display microcomputer
31	P74/TA2OUT/W	DISP RDY	I	Communication with display microcomputer
32	P73/CTS2/RTS2/TA1IN/V	DISP RST	O/H	Communication with display microcomputer
33	P72/CLK2/TA1OUT/V	DISP CLK	O/L	Communication with display microcomputer
34	P71/RxD2/SCL2/TA0IN/TB5IN	DISP DO	I	Communication with display microcomputer
35	P70/TXD2/SDA2/TA0OUT	DISP DI	O/L	Communication with display microcomputer
36	P67/TXD1/SDA1	232C TxD	O/L	RS-232C
37	Vcc1	Vcc1(5V)	-	Power supply (5V)
38	P66/RxD1/SCL1	232C RxD	I	RS-232C
39	Vss	Vss(GND)	-	Ground
40	P65/CLK1	JIG CLK		RS-232C
41	P64/CTS1/RTS1/CTS0/CLKS1	232C CTS	O/L	RS-232C
42	P63/TXD0/SDA0	Tx (SR+/iPOD/XM)	O/L	Communication with SR+/iPod/XM
43	P62/RxD0/SCL0	Rx (SR+/iPOD/XM)	I	Communication with SR+/iPod/XM
44	P61/CLK0	LOW COMSUMPTION	O/L	AMUTE power ON/OFF(ON: H)
45	P60/CTS0/RTS0	S-DET	I	S-VIDEO detection (H)
46	P137	WAKE_UPB(XM)	I	For XMDTcommunication
47	P136	XM/iPod SELECT	O/L	POD/XM path switch (iPod: L,XM: H)
48	P135	EXP ST	O/L	Communication with expansion IC
49	P134	EXP OE	O/L	Communication with expansion IC
50	P57/RDY/CLKOUT	Vcc(5V)	I	Vcc(5V)

No.	Mark	Pin Name	I/O	Pin Function
51	P56/ALE	OPEN	O/L	NC (Open at memory expanded mode)
52	P55/HOLD	Vcc(5V)	I	Vcc (5V)
53	P54/HLDA	OPEN	O/L	NC (Open at memory expanded mode)
54	P133	OSD RST	O/L	OSD communication
55	P132	OSD CS	O/L	OSD communication
56	P131	OSD DT/EXP DT	O/L	OSD communication & expansion IC communication
57	P130	OSD CLK/EXP CLK	O/L	OSD communication & expansion IC communication
58	P53/BCLK	OPEN	O/L	NC (Open at memory expanded mode)
59	P52/RD	RD	O/L	FLASH MEMORY I/F READ
60	P51/WRH/BHE	OPEN	O/L	FLASH MEMORY I/F WRITE
61	P50/WRL/WR	WR	O/L	FLASH MEMORY I/F WRITE
62	P127	GAIN CONT1	O/L	ANALOG GAIN CONTROL
63	P126	UART SW2	O/L	L: SR+ path, H: Select iPod or XM path
64	P125	UART SW1	O/L	L: DSP microcomputer path, H: Select HDMI microcomputer path
65	P47/CS3	EVOL DT2	O/L	Electronic VOL & function IC communication
66	P46/CS2	CS2	O/L	Electronic VOL & function IC communication
67	P45/CS1	EVOL CK	O/L	Electronic VOL & function IC communication
68	P44/CS0	CS0	O/L	FLASH MEMORY CE control
69	P43/A19	OPEN	O/L	Address output of FLASH MEMORY communication
70	P42/A18	A18	O/L	Address output of FLASH MEMORY communication
71	P41/A17	A17	O/L	Address output of FLASH MEMORY communication
72	P40/A16	A16	O/L	Address output of FLASH MEMORY communication
73	P37/A15	A15	O/L	Address output of FLASH MEMORY communication
74	P36/A14	A14	O/L	Address output of FLASH MEMORY communication
75	P35/A13	A13	O/L	Address output of FLASH MEMORY communication
76	P34/A12	A12	O/L	Address output of FLASH MEMORY communication
77	P33/A11	A11	O/L	Address output of FLASH MEMORY communication
78	P32/A10	A10	O/L	Address output of FLASH MEMORY communication
79	P31/A9	A9	O/L	Address output of FLASH MEMORY communication
80	P124	RY C/R	O/L	Center and surround SP relay (ON: H)
81	P123	RY B	O/L	SP-B relay (ON: H)
82	P122	RY A	O/L	SP-A relay (ON: H)
83	P121	RY HP	O/L	HP relay (ON: H)
84	P120	AC1 RELAY	O/L	AC relay (ON: H)
85	Vcc2	Vcc2(5V)	–	Power supply (5V)
86	P30/A8(/_/D7)	A8	O/L	Address output of FLASH MEMORY communication
87	Vss	Vss(GND)	–	Ground
88	P27/AN27/A7(/D7/D6)	A7	O/L	Address output of FLASH MEMORY communication
89	P26/AN26/A6(/D6/D5)	A6	O/L	Address output of FLASH MEMORY communication
90	P25/AN25/A5(/D5/D4)	A5	O/L	Address output of FLASH MEMORY communication
91	P24/AN24/A4(/D4/D3)	A4	O/L	Address output of FLASH MEMORY communication
92	P23/AN23/A3(/D3/D2)	A3	O/L	Address output of FLASH MEMORY communication
93	P22/AN22/A2(/D2/D1)	A2	O/L	Address output of FLASH MEMORY communication
94	P21/AN21/A1(/D1/D0)	A1	O/L	Address output of FLASH MEMORY communication
95	P20/AN20/A0(/D0/_)	OPEN	O/L	Address output of FLASH MEMORY communication
96	P17/D15/INT5	D15	O/L	Data input/output of FLASH MEMORY communication
97	P16/D14/INT4	D14	O/L	Data input/output of FLASH MEMORY communication
98	P15/D13/INT3	D13	O/L	Data input/output of FLASH MEMORY communication
99	P14/D12	D12	O/L	Data input/output of FLASH MEMORY communication
100	P13/D11	D11	O/L	Data input/output of FLASH MEMORY communication

No.	Mark	Pin Name	I/O	Pin Function
101	P12/D10	D10	O/L	Data input/output of FLASH MEMORY communication
102	P11/D9	D9	O/L	Data input/output of FLASH MEMORY communication
103	P10/D8	D8	O/L	Data input/output of FLASH MEMORY communication
104	P07/AN07/D7	D7	O/L	Data input/output of FLASH MEMORY communication
105	P06/AN06/D6	D6	O/L	Data input/output of FLASH MEMORY communication
106	P05/AN05/D5	D5	O/L	Data input/output of FLASH MEMORY communication
107	P04/AN04/D4	D4	O/L	Data input/output of FLASH MEMORY communication
108	P03/AN03/D3	D3	O/L	Data input/output of FLASH MEMORY communication
109	P02/AN02/D2	D2	O/L	Data input/output of FLASH MEMORY communication
110	P01/AN01/D1	D1	O/L	Data input/output of FLASH MEMORY communication
111	P00/AN00/D0	D0	O/L	Data input/output of FLASH MEMORY communication
112	P117	GAIN CONT2	O/L	ANALOG GAIN CONTROL
113	P116	EVOL DT1	O/L	Electronic VOL & function IC communication
114	P115	TUNER DI	O/L	TUNER module communication
115	P114	TUNER CLK	O/L	TUNER module communication
116	P113	TUNER DO	I	TUNER module communication
117	P112	TUNER CE	O/L	TUNER module communication
118	P111	AMUTE	O/L	AMUTE (L: MUTE, H: MUTE OFF)
119	P110	MRMUTE	O/L	MR MUTE (L: MUTE, H: MUTE OFF)
120	P107/AN7/KI3	DC PROTECT	I	DC abnormality detection (L detection)
121	P106/AN6/KI2	FAN STOP	I	FAN STOP detection (L at FAN turn: abnormal)
122	P105/AN5/KI1	TEMP1	I	Temperature detection (H: high temperature)
123	P104/AN4/KI0	XM/iPod ERR	I	(A/D) 0-2.0V: Normal, 2.0-3.5V: XM abnormality, 3.5-5.0V: iPod abnormality
124	P103/AN3	WATT IN	I	(A/D) Voltage detection for limitter control
125	P102/AN2	SIMUKE2	I	(A/D) Destination distinction
126	P101/AN1	SIMUKE1	I	(A/D) Destination distinction
127	Avss	Avss(GND)	–	Ground
128	P100/AN0	HDMI/ DSP REQ	O/L	REQ output for HDMI/DSP microcomputer

■ CD4094BPW (DIGITAL MOTHER ASSY: IC103)

• Expansion 2 IC

● Pin Function

No.	Pin Name	Pin Function	Active
1	232SW	Switch the RS232C path. L: MAIN controller, H: DSP controller	H
2	MRSP2	When SBch outputs MR&S: H (Movement the same as MRSP)	H
3	FAN DRIVE	When FAN turns: H	H
4	INPUT ATT	H at ATT ON	H
5	12VON/OFF	Set to H when rewriting MAIN and DSP controllers.	H
6	XMPOW	XM antenna power supply. Always H. Set to L when detecting the abnormal.	H
7	iPodPOW	iPod supply power supply. Always H. Set to L when detecting the abnormal.	H
8	RDS FM+/XM RESET	Power supply ON/OFF of RDS decoder. H at ON. XM RESET. H at RESET. Notes: RESET of XMDTIC is L, but output with the reverse logic so that inverting circuit exists.	H/H

■ CD4094BNS (COMPONENT & VOL ASSY: IC2640)

• Expansion 1 IC

● Pin Function

No.	Pin Name	Pin Function	Active
1	NECK6	Outputs for limitter control	H
2	NECK8	Outputs for limitter control	H
3	BIAMP	At BIAMP: H	H
4	MRSP	When SBch is MR&S output: H	H
5	12TRG1	12V trigger 1 output	H
6	12TRG2	12V trigger 2 output	H
7	CDMIX	Cch setting: None LISTENING MODE : PURE DIRECT Playback stream: DVD-AUDIO (fs 44.1, 48, 88.2, 96kHz ch MULTI) or DSD (MULTI) or PCM (fs 44.1, 48, 88.2, 96kHz ch MULTI) • Do not turn on in 2 ch source. • When a device name of "PCM MULTI" is 1394 PC with i.LINK, converted DVD-AUDIO information into PCM from a DSP microcomputer. Cch setting: None Function: MULTI CH IN Turn the CENTER DOWN MIX off except the above-mentioned state.	H
8	DSPIN	At DSP root: H At analog direct root: L Condition 1: At Multi-ch-In selection Condition 2: At analog input with PURE DIRECT mode	H

■ CD4094BNS (COMPONENT & VOL ASSY: IC2407)

• Expansion IC

● Pin Function

No.	Pin Name	Pin Function	Active
1	CSW1	Component Func. SW	H
2	CSW2	Component Func. SW	H
3	CINH	IC2401,2402,2403 inhibit	H
4	XMSB	MR(ROOM2) / Selector of XM	H
5	C53B	Thr./VC Select	H
6	DSW1	D Func. SW	H
7	D53A	Thr.(D)/Component Select	H
8	DINH	IC1001,1002,1003,1004 inhibit	H

■ CD4094BPW (S VIDEO ASSY: IC2281)

• Expansion IC

● Pin Function

No.	Pin Name	Pin Function	Active
1	SSW1	S-Video Main Function	H
2	SSW2	S-Video Main Function	H
3	SSW3	S-Video Main Function	H
4	S52A	S-Video Through / VC / OSD / Mute select	H
5	S52B	S-Video Through / VC / OSD / Mute select	H
6	Vacant		H
7	Vacant		H
8	SINH	IC2201,2202 inhibit	H

■ CD4094BPW (S VIDEO ASSY: IC2282)

• Expansion IC

● Pin Function

No.	Pin Name	Pin Function	Active
1	SMRA	S-Video Room2 Function	H
2	SMRB	S-Video Room2 Function	H
3	SMRC	S-Video Room2 Function	H
4	SRC1	S-Video Recout Select	H
5	SRC2	S-Video Recout Select	H
6	Vacant		H
7	Vacant		H
8	Vacant		H

■ CD4094BNS (COMPOSITE V ASSY: IC2008)

• Expansion IC

● Pin Function

No.	Pin Name	Pin Function	Active
1	VSW1	CVBS Main Function	H
2	VSW2	CVBS Main Function	H
3	VSW3	CVBS Main Function	H
4	MRA	CVBS Room2 Function	H
5	MRB	CVBS Room2 Function	H
6	MRC	CVBS Room2 Function	H
7	V52A	CVBS Room2 CVBS/OSD select	H
8	V52B	CVBS Room2 CVBS/OSD select	H

■ CD4094BNS (COMPOSITE V ASSY: IC2009)

• Expansion IC


● Pin Function

No.	Pin Name	Pin Function	Active
1	V1M	CVBS Recout Selector	H
2	V2M	CVBS Recout Selector	H
3	VINH	IC2001 inhibit	H
4	MUTE	Video Mute	H
5	MRINH	IC2002,2205,2206 inhibit	H
6	SWA	CVBS Main Through/OSD/VC/Mute select	H
7	SWB	CVBS Main Through/OSD/VC/Mute select	H
8	SWC	CVBS Main Through/OSD/VC/Mute select	H

■ PEG117A (DIGITAL MOTHER ASSY : IC201)

• DSP Microcomputer

● Pin Arrangement (Top view)

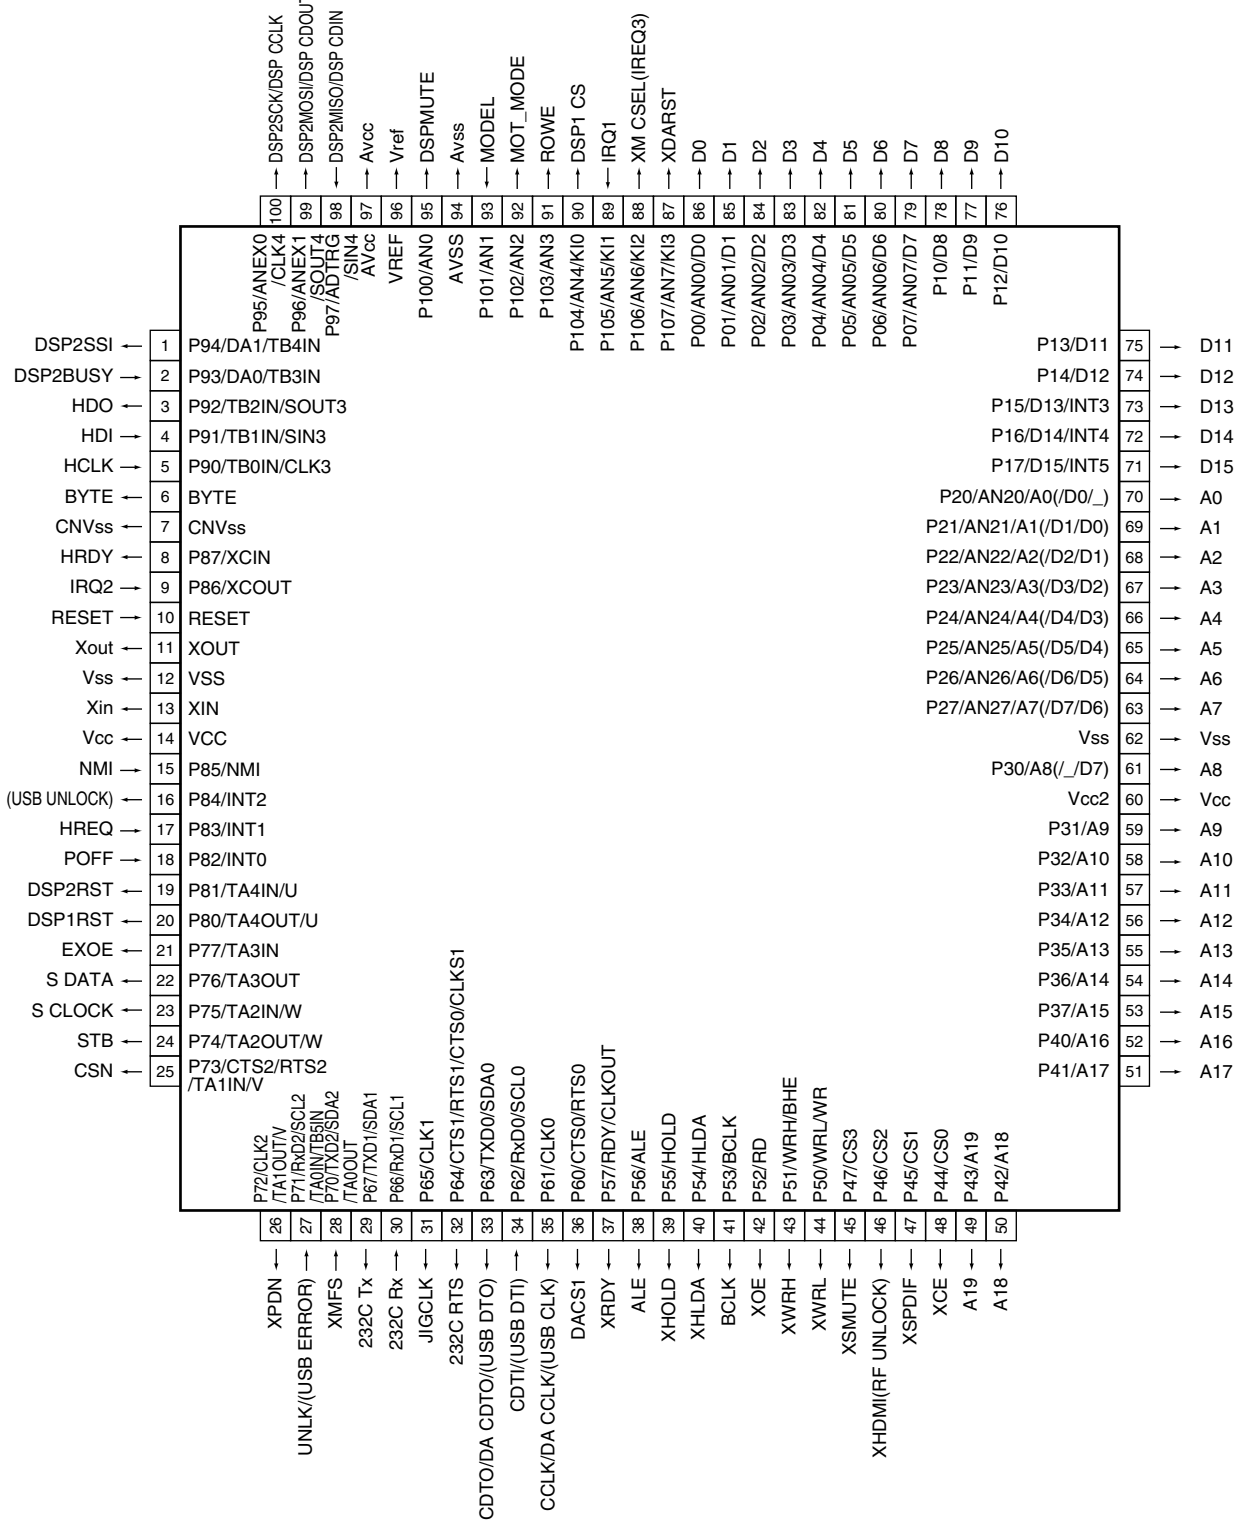

● Pin Function

No.	Mark	Pin Name	I/O	Pin Function
1	P94/DA1/TB4IN	DSP2SSI	I	Motorola DSP communication strobe
2	P93/DA0/TB3IN	DSP2BUSY	I	Motorola DSP busy input (at MCACC function)
3	P92/TB2IN/SOUT3	HDO	I	Data output of microcomputer communication to the main microcomputer
4	P91/TB1IN/SIN3	HDI	I	Data input of microcomputer communication from the main microcomputer
5	P90/TB0IN/CLK3	HCLK	I	Clock input of microcomputer communication from the main microcomputer
6	BYTE	BYTE	O	16 bit setting of the external FLASH bus-width
7	CNVss	CNVss	–	Shift from single-chip mode to memory expanded mode.
8	P87/XCIN	HRDY	I	Request output of microcomputer communication to the main microcomputer
9	P86/XCOUT	IRQ2	I	Motorola DSP busy input (at decoder function)
10	RESET	RESET	I	RESET input from the main microcomputer
11	XOUT	Xout	O	Connect a ceramic resonator (15.4MHz)
12	VSS	Vss	–	Ground
13	XIN	Xin	I	Connect a ceramic resonator
14	VCC	Vcc	–	Power supply
15	P85/NMI	NMI	I	
16	P84/INT2	(USB UNLOCK)	I	(USB communication request: Plan)
17	P83/INT1	HREQ	I	Request input of microcomputer communication from the main microcomputer
18	P82/INT0	POFF	I	Power OFF signal
19	P81/TA4IN/U	DSP2RST	I	Motorola DSP reset
20	P80/TA4OUT/U	DSP1RST	I	1st DSP reset
21	P77/TA3IN	EXOE	I	OE output of the expansion IC
22	P76/TA3OUT	S DATA	I	Data output of the expansion IC
23	P75/TA2IN/W	S CLOCK	I	Clock output of the expansion IC
24	P74/TA2OUT/W	STB	I	Strobe output of the expansion IC
25	P73/CTS2/RTS2/TA1IN/V	CSN	I	Control CS output of DIR IC
26	P72/CLK2/TA1OUT/V	XPDN	I	DIR reset
27	P71/RxD2/SCL2/TA0IN/TB5IN	UNLK/(USB ERROR)	I	UNLOCK signal input/(USB error information input)
28	P70/TXD2/SDA2/TA0OUT	XMFS	I	XM FS information
29	P67/TXD1/SDA1	232C Tx	I	RS232C communication TxD(rewriting / control)
30	P66/RxD1/SCL1	232C Rx	I	RS232C communication RxD(rewriting / control)
31	P65/CLK1	JIGCLK	I	Rewriting
32	P64/CTS1/RTS1/CTS0/CLKS1	232C RTS	I	RS232C communication RTS(rewriting / control)
33	P63/TXD0/SDA0	CDTO/DA CDTO/(USB DTO)	I	DIR/DA/(USB) serial comminication data output
34	P62/RxD0/SCL0	CDTI/(USB DTI)	I	DIR/(USB) serial comminication data input
35	P61/CLK0	CCLK/DA CCLK/(USB CLK)	I	DIR/DA/(USB) serial comminication clock output
36	P60/CTS0/RTS0	DACS1	I	Control CS output of DAC IC for F/R
37	P57/RDY/CLKOUT	XRDY	I	Vcc (3.3V)
38	P56/ALE	ALE	O	NC (open at memory expanded mode)
39	P55/HOLD	XHOLD	I	Vcc (3.3V)
40	P54/HLDA	XHLDA	O	NC (open at memory expanded mode)
41	P53/BCLK	BCLK	O	NC (open at memory expanded mode)
42	P52/RD	XOE	O	FLASH MEMORY I/F READ
43	P51/WRH/BHE	XWRH	O	FLASH MEMORY I/F WRITE
44	P50/WRL/WR	XWRL	O	FLASH MEMORY I/F WRITE
45	P47/CS3	XSMUTE	I	For last stage mute control
46	P46/CS2	XHDMI(RF UNLOCK)	I	For mute control of HDMI input (for RF UNLOCK detection)
47	P45/CS1	XSPDIF	I	For mute control of DIR input
48	P44/CS0	XCE	O	FLASH MEMORY CE control
49	P43/A19	A19	O	Address output of FLASH MEMORY communication
50	P42/A18	A18	O	Address output of FLASH MEMORY communication

No.	Mark	Pin Name	I/O	Pin Function
51	P41/A17	A17	O	Address output of FLASH MEMORY communication
52	P40/A16	A16	O	Address output of FLASH MEMORY communication
53	P37/A15	A15	O	Address output of FLASH MEMORY communication
54	P36/A14	A14	O	Address output of FLASH MEMORY communication
55	P35/A13	A13	O	Address output of FLASH MEMORY communication
56	P34/A12	A12	O	Address output of FLASH MEMORY communication
57	P33/A11	A11	O	Address output of FLASH MEMORY communication
58	P32/A10	A10	O	Address output of FLASH MEMORY communication
59	P31/A9	A9	O	Address output of FLASH MEMORY communication
60	Vcc2	Vcc	–	Power supply
61	P30/A8(/_/D7)	A8	O	Address output of FLASH MEMORY communication
62	Vss	Vss	–	Ground
63	P27/AN27/A7(/D7/D6)	A7	O	Address output of FLASH MEMORY communication
64	P26/AN26/A6(/D6/D5)	A6	O	Address output of FLASH MEMORY communication
65	P25/AN25/A5(/D5/D4)	A5	O	Address output of FLASH MEMORY communication
66	P24/AN24/A4(/D4/D3)	A4	O	Address output of FLASH MEMORY communication
67	P23/AN23/A3(/D3/D2)	A3	O	Address output of FLASH MEMORY communication
68	P22/AN22/A2(/D2/D1)	A2	O	Address output of FLASH MEMORY communication
69	P21/AN21/A1(/D1/D0)	A1	O	Address output of FLASH MEMORY communication
70	P20/AN20/A0(/D0/_)	A0	I	Do not connect at 16bit data access
71	P17/D15/INT5	D15	I	Data input/output of FLASH MEMORY communication
72	P16/D14/INT4	D14	I	Data input/output of FLASH MEMORY communication
73	P15/D13/INT3	D13	I	Data input/output of FLASH MEMORY communication
74	P14/D12	D12	I	Data input/output of FLASH MEMORY communication
75	P13/D11	D11	I	Data input/output of FLASH MEMORY communication
76	P12/D10	D10	I	Data input/output of FLASH MEMORY communication
77	P11/D9	D9	I	Data input/output of FLASH MEMORY communication
78	P10/D8	D8	I	Data input/output of FLASH MEMORY communication
79	P07/AN07/D7	D7	I	Data input/output of FLASH MEMORY communication
80	P06/AN06/D6	D6	I	Data input/output of FLASH MEMORY communication
81	P05/AN05/D5	D5	I	Data input/output of FLASH MEMORY communication
82	P04/AN04/D4	D4	I	Data input/output of FLASH MEMORY communication
83	P03/AN03/D3	D3	I	Data input/output of FLASH MEMORY communication
84	P02/AN02/D2	D2	I	Data input/output of FLASH MEMORY communication
85	P01/AN01/D1	D1	I	Data input/output of FLASH MEMORY communication
86	P00/AN00/D0	D0	I	Data input/output of FLASH MEMORY communication
87	P107/AN7/KI3	XDARST	I	DAC reset
88	P106/AN6/KI2	XM CSEL(IREQ3)	I	XM information (Control with the main microcomputer information)(3rd DSP FLAG0 input)
89	P105/AN5/KI1	IRQ1	I	1st DSP FLAG0 input
90	P104/AN4/KI0	DSP1 CS	I	1st DSP chip select
91	P103/AN3	ROWE	I	For DSP rewriting control
92	P102/AN2	MOT_MODE	I	For the Motorola operating state control
93	P101/AN1	MODEL	I	For model distinction (A/D input use)
94	AVSS	Avss	–	Ground
95	P100/AN0	DSPMUTE	I	DSP MUTE control output
96	VREF	Vref	–	Reference voltage
97	AVcc	Avcc	–	Power supply
98	P97/ADTRG/SIN4	DSP2MISO/DSP CDIN	I	DSP communication data input of Motorola/SHARC
99	P96/ANEX1/SOUT4	DSP2MOSI/DSP CDOUT	I	DSP communication data output of Motorola/SHARC
100	P95/ANEX0/CLK4	DSP2SCK/DSP CCLK	I	DSP communication clock output of Motorola/SHARC

■ CD4094BPW (DIGITAL MOTHER ASSY: IC203)

• Expansion 1 IC

● Pin Function

No.	Pin Name	Pin Function	Active
4	XPDNAD	AD IC reset H: Release the A/D reset, L: A/D reset	L
5	ADOSR	AD Over sampling setting Over-sampling at analog L: 88.2/96kHz, H: Others	H
6	DDIRECT	Digital Direct setting	H
7	XLSSN	LSSN setting H: When add a SW signal to the front in analog stage, L: Don't add	H
11	XTL0	DIR XTL0 control	H
12	DACS2	DA chip select (for C,SW,S,SB ch)	L
13	MPCM	Multi PCM input selection	H
14	XM	XM input selection	H

■ CD4094BPW (DIGITAL MOTHER ASSY: IC211)

• Expansion 2 IC


● Pin Function

No.	Pin Name	Pin Function	Active
4	DS_2_32	32 bit transmission setting (Not used, "L" fixing)	H
5	MRXM	XM input setting to DA	H
6	DACS3	DA chip select (For +2 ch)	L
7	USB(RST3)	USB select (3rd DSP reset: plan)	H
11	DAX(SP3)	DSP3 CS output	H
12	DSD DIRECT	DSD Direct setting	H
13	XON	DSP X'tal ON/OFF control Crystal clock control of DSP H: 06 High model, L: 05 middle model	H
14	XIEEE	1394 input select	L


■ F2602E-01 (DIGITAL MOTHER ASSY : IC281)

• XM/DT IC

● Pin Arrangement (Top view)

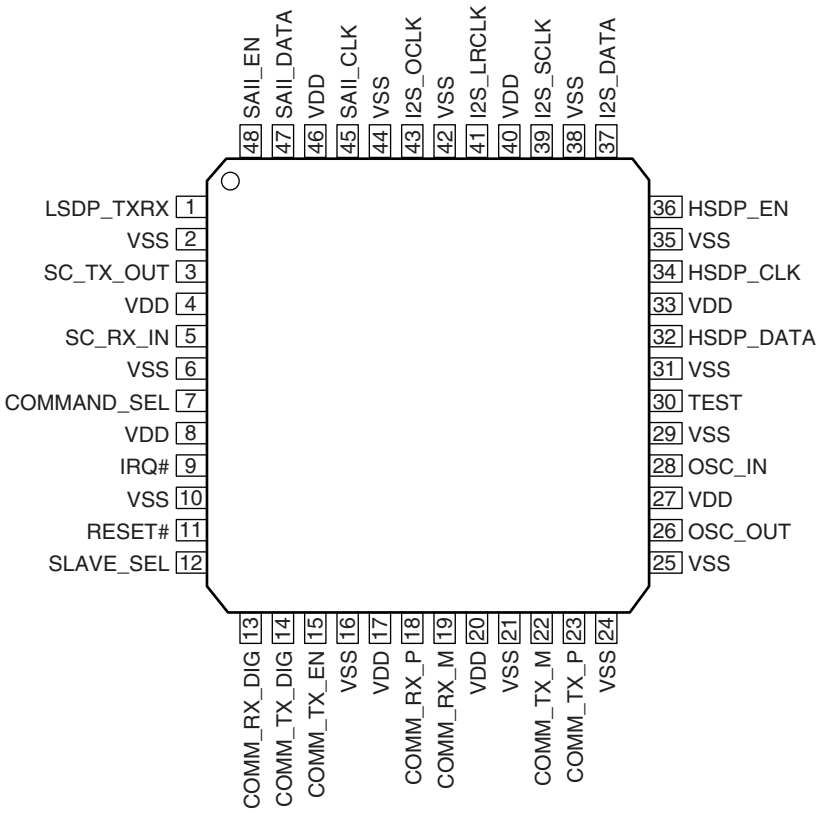

● Block Diagram

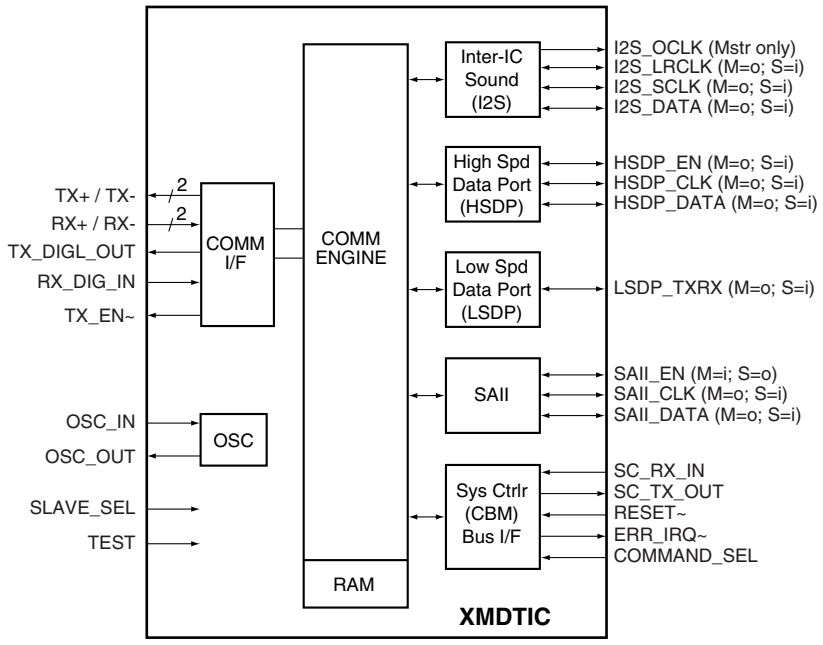


● Pin Function

No.	Pin Name	I/O	Function in Slave Mode	Function in MasterMode
1	LSDP_TXRX	S=I, M=O	Low speed data port output	Low speed data port input
2	VSS	–	Digital ground	Digital ground
3	SC_TX_OUT	S=O, M=O	System controller bus (CBM) transmit data out	System controller bus (CBM) transmit data out
4	VDD	–	+3.3V supply voltage	+3.3V supply voltage
5	SC_RX_IN	S=I, M=I	System controller bus (CBM) receive data in	System controller bus (CBM) receive data in
6	VSS	–	Digital ground	Digital ground
7	COMMAND_SEL	S=I, M=I	Command mode select in (1= Command mode, 0= Normal mode)	Command mode select in (1= Command mode, 0= Normal mode)
8	VDD	–	+3.3V supply voltage	+3.3V supply voltage
9	IRQ#	S=O, M=O	Interrupt request out (Active Low)	Interrupt request out (Active Low)
10	VSS	–	Digital ground	Digital ground
11	RESET#	S=I, M=I	Asynchronous reset in (Active Low)	Asynchronous reset in (Active Low)
12	SLAVE_SEL	S=I, M=I	M/S mode select in (High= Slave mode)	M/S mode select in (Low= Master mode)
13	COMM_RX_DIG	S=I, M=I	DT comm bus external transceiver receive data in	DT comm bus external transceiver receive data in
14	COMM_TX_DIG	O	DT comm bus external transceiver transmit data out	DT comm bus external transceiver transmit data out
15	COMM_TX_EN	O	DT comm bus external transceiver direction out (1= Transmit, 0= Receive)	DT comm bus external transceiver direction out (1= Transmit, 0= Receive)
16	VSS	–	Digital ground	Digital ground
17	VDD	–	+3.3V supply voltage	+3.3V supply voltage
18	COMM_RX_P	S=I, M=I	DT comm bus internal receiver differential positive in	DT comm bus internal receiver differential positive in
19	COMM_RX_M	S=I, M=I	DT comm bus internal receiver differential negative in	DT comm bus internal receiver differential negative in
20	VDD	–	+3.3V supply voltage	+3.3V supply voltage
21	VSS	–	Digital ground	Digital ground
22	COMM_TX_M	O	DT comm bus internal transmitter differential negative out	DT comm bus internal transmitter differential negative out
23	COMM_TX_P	O	DT comm bus internal transmitter differential positive out	DT comm bus internal transmitter differential positive out
24	VSS	–	Digital ground	Digital ground
25	VSS	–	Digital ground	Digital ground
26	OSC_OUT	O	Crystal output	Crystal output
27	VDD	–	+3.3V supply voltage	+3.3V supply voltage
28	OSC_IN	S=I, M=I	Crystal input	Crystal input
29	VSS	–	Digital ground	Digital ground
30	TEST	S=I, M=I	Factory test mode select (1= Test, 0= Normal oper.)	Factory test mode select (1= Test, 0= Normal oper.)
31	VSS	–	Digital ground	Digital ground
32	HSDP_DATA	S=I, M=O	High speed data port data input	High speed data port data output
33	VDD	–	+3.3V supply voltage	+3.3V supply voltage
34	HSDP_CLK	S=I, M=O	High speed data port clock input	High speed data port clock output
35	VSS	–	Digital ground	Digital ground
36	HSDP_EN	S=O, M=I	High speed data port enable output	High speed data port enable input
37	I2S_DATA	S=I, M=O	I2S digital port data in	I2S digital audio port data out
38	VSS	–	Digital ground	Digital ground
39	I2S_SCLK	S=I, M=O	I2S digital audio port bit clock in	I2S digital audio port bit clock out
40	VDD	–	+3.3V supply voltage	+3.3V supply voltage
41	I2S_LRCLK	S=I, M=O	I2S digital audio port L/R clock in	I2S digital audio port L/R clock out
42	VSS	–	Digital ground	Digital ground
43	I2S_OCLK	S=I, M=O	I2S digital audio port oversample clock (Not used.)	I2S digital audio port oversample clock out
44	VSS	–	Digital ground	Digital ground
45	SAII_CLK	S=O, M=I	SAII port clock output	SAII port clock input
46	VDD	–	+3.3V supply voltage	+3.3V supply voltage
47	SAII_DATA	S=O, M=I	SAII port data output	SAII port data input
48	SAII_REQ	S=I, M=O	SAII port request input	SAII port request output

■ AAT4618IGV-0.5-1 (DIGITAL MOTHER ASSY : IC282)

• Load Switching

● Pin Arrangement (Top view)

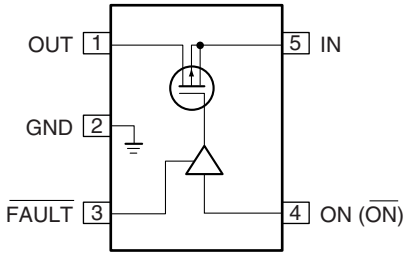


● Pin Function

No.	Pin Name	I/O	Pin Function
1	OUT	O	P-channel MOS FET drain
2	GND	–	Ground
3	$\overline{\text{FAULT}}$	O	Open-drain $\overline{\text{FAULT}}$ output
4	ON ($\overline{\text{ON}}$)	I	Enable input: 4618 active low, 4618- active high
5	IN	I	P-channel MOS FET source

■ SN74LVC1G97DCK (DIGITAL MOTHER ASSY : IC304, IC305, IC318)

• Configurable Multiple-function Gate

● Pin Arrangement (Top view)

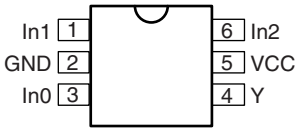


● Truth Table

INPUTS			OUTPUTS
In2	In1	In0	Y
L	L	L	L
L	L	H	L
L	H	L	H
L	H	H	H
H	L	L	L
H	L	H	H
H	H	L	L
H	H	H	H

H: High level
L: Low level


● Logic Diagram (positive logic)

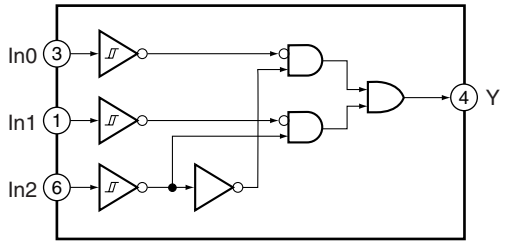


■ SiI9031CTU (HDMI & DVC ASSY : IC101)

• HDMI PanelLink Cinema Receiver

● Pin Arrangement (Top view)

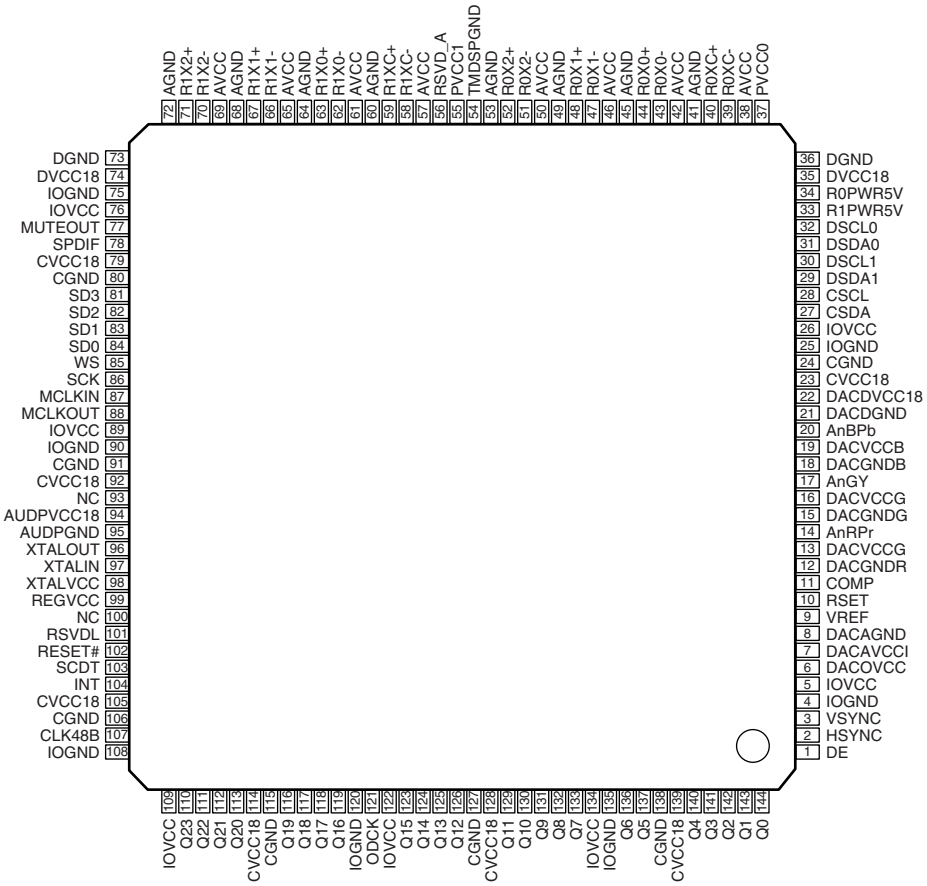

● Block Diagram

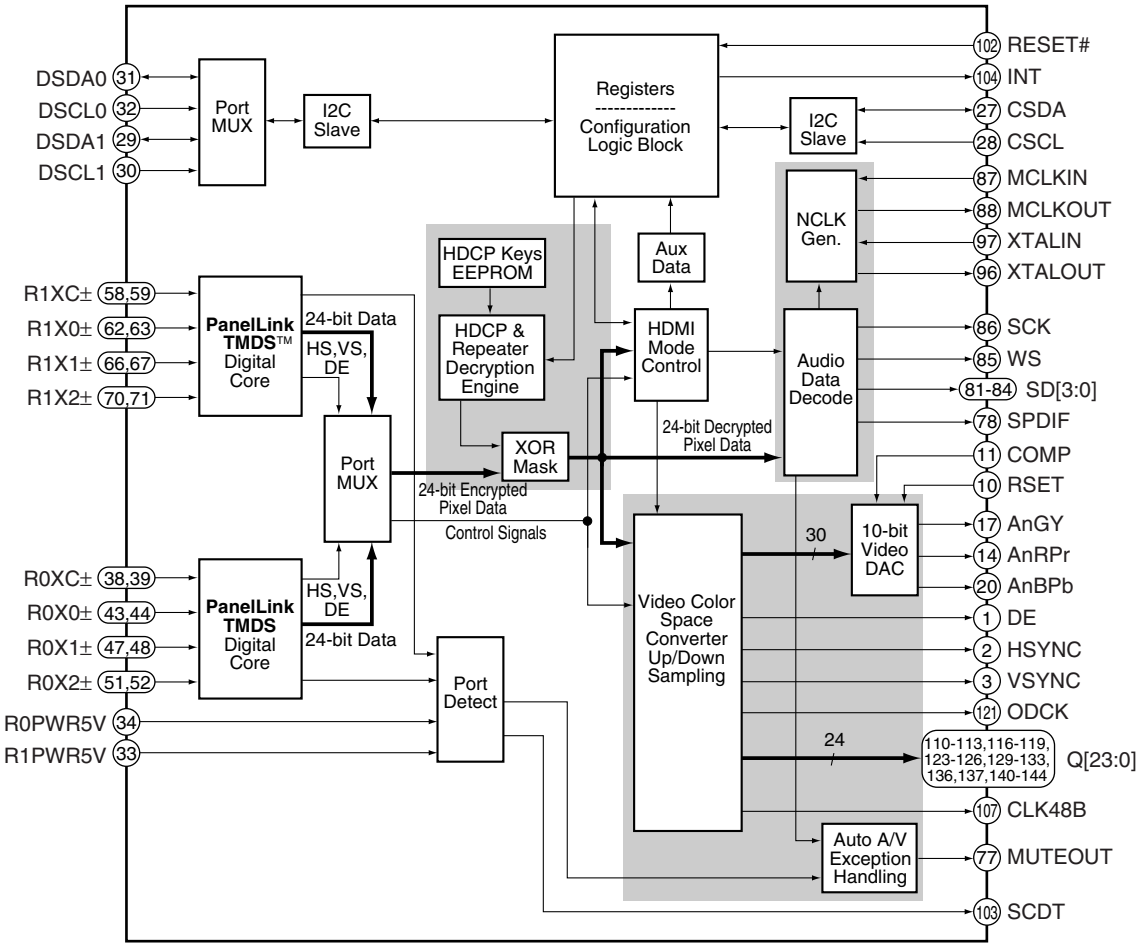

● **Pin Function**


No.	Pin Name	I/O	Function	No.	Pin Name	I/O	Function
1	DE	O	Data enable	41	AGND	–	TMDS analog GND
2	HSYNC	O	Horizontal sync output control signal	42	AVCC	–	TMDS analog VCC (3.3V)
3	VSYNC	O	Vertical sync output control signal	43	R0X0-	I	TMDS input data pair of HDMI port 0
4	IOGND	–	Input/Output pin GND	44	R0X0+	I	TMDS input data pair of HDMI port 0
5	IOVCC	–	Input/Output pin VCC (3.3V)	45	AGND	–	TMDS analog GND
6	DACOVCC	–	DAC output VCC (3.3V)	46	AVCC	–	TMDS analog VCC (3.3V)
7	DACAVCC	–	DAC Analog VCC (3.3V)	47	R0X1-	I	TMDS input data pair of HDMI port 0
8	DACAGND	–	DAC Analog GND	48	R0X1+	I	TMDS input data pair of HDMI port 0
9	VREF	–	Reference voltage	49	AGND	–	TMDS analog GND
10	RSET	I	Full scale adjust resistor	50	AVCC	–	TMDS analog VCC (3.3V)
11	COMP	I	Compensation	51	R0X2-	I	TMDS input data pair of HDMI port 0
12	DACGNDR	–	DAC Red GND	52	R0X2+	I	TMDS input data pair of HDMI port 0
13	DACVCCR	–	DAC Red VDD (3.3V)	53	AGND	–	TMDS analog GND
14	AnRPr	O	Analog video Red, Pr output	54	TMDSPGND	–	TMDS PLL GND
15	DACGNDG	–	DAC Green GND	55	PVCC1	–	TMDS port 1 PLL VCC (3.3V)
16	DACVCCG	–	DAC Green VDD (3.3V)	56	RSVD_A	–	Reserved, leave unconnected.
17	AnGY	O	Analog video Green, Y output	57	AVCC	–	TMDS analog VCC (3.3V)
18	DACGNDB	–	DAC Blue GND	58	R1XC-	I	TMDS input clock pair of HDMI port 1
19	DACVCCB	–	DAC Blue VDD (3.3V)	59	R1XC+	I	TMDS input clock pair of HDMI port 1
20	AnBPb	O	Analog video Blue, Pb output	60	AGND	–	TMDS analog GND
21	DACDGND	–	DAC Digital GND	61	AVCC	–	TMDS analog VCC (3.3V)
22	DACDVCC18	–	DAC Digital VCC (1.8V)	62	R1X0-	I	TMDS input data pair of HDMI port 1
23	CVCC18	–	Digital logic VCC (1.8V)	63	R1X0+	I	TMDS input data pair of HDMI port 1
24	CGND	–	Digital logic GND	64	AGND	–	TMDS analog GND
25	IOGND	–	Input/Output pin GND	65	AVCC	–	TMDS analog VCC (3.3V)
26	IOVCC	–	Input/Output pin VCC (3.3V)	66	R1X1-	I	TMDS input data pair of HDMI port 1
27	CSDA	Bi-Di	Configuration I2C data	67	R1X1+	I	TMDS input data pair of HDMI port 1
28	CSCL	I	Configuration I2C clock	68	AGND	–	TMDS analog GND
29	DSDA1	Bi-Di	DDC I2C data for port 1	69	AVCC	–	TMDS analog VCC (3.3V)
30	DSCL1	I	DDC I2C clock for port 1	70	R1X2-	I	TMDS input data pair of HDMI port 1
31	DSDA0	Bi-Di	DDC I2C clock for port 0	71	R1X2+	I	TMDS input data pair of HDMI port 1
32	DSCL0	I	DDC I2C data for port 0	72	AGND	–	TMDS analog GND
33	R1PWR5V	I	Port 1 transmitter detect	73	DGND	–	ACR PLL GND
34	R0PWR5V	I	Port 0 transmitter detect	74	DVCC18	–	ACR PLL Digital VCC (1.8V)
35	DVCC18	–	ACR PLL Digital VCC (1.8V)	75	IOGND	–	Input/Output pin GND
36	DGND	–	ACR PLL GND	76	IOVCC	–	Input/Output pin VCC (3.3V)
37	PVCC0	–	TMDS port 0 PLL VCC (3.3V)	77	MUTEOUT	O	Mute audio output
38	AVCC	–	TMDS analog VCC (3.3V)	78	SPDIF	O	S/PDIF audio output
39	R0XC-	I	TMDS input clock pair of HDMI port 0	79	CVCC18	–	Digital logic VCC (1.8V)
40	R0XC+	I	TMDS input clock pair of HDMI port 0	80	CGND	–	Digital logic GND

No.	Pin Name	I/O	Function	No.	Pin Name	I/O	Function
81	SD3	O	I2S serial data output	113	Q20	O	24-bit output pixel data bus
82	SD2	O	I2S serial data output	114	CVCC18	–	Digital logic VCC (1.8V)
83	SD1	O	I2S serial data output	115	CGND	–	Digital logic GND
84	SD0	O	I2S serial data output	116	Q19	O	24-bit output pixel data bus
85	WS	O	I2S word select output	117	Q18	O	24-bit output pixel data bus
86	SCK	O	I2S serial clock output	118	Q17	O	24-bit output pixel data bus
87	MCLKIN	I	Audio master clock input reference	119	Q16	O	24-bit output pixel data bus
88	MCLKOUT	O	Audio master clock output	120	IOGND	–	Input/Output pin GND
89	IOVCC	–	Input/Output pin VCC (3.3V)	121	ODCK	O	Output data clock
90	IOGND	–	Input/Output pin GND	122	IOVCC	–	Input/Output pin VCC (3.3V)
91	CGND	–	Digital logic GND	123	Q15	O	24-bit output pixel data bus
92	CVCC18	–	Digital logic VCC (1.8V)	124	Q14	O	24-bit output pixel data bus
93	NC	–	No connect	125	Q13	O	24-bit output pixel data bus
94	AUDPVCC18	–	ACR PLL VCC (1.8V)	126	Q12	O	24-bit output pixel data bus
95	AUDPGND	–	ACR PLL GND	127	CGND	–	Digital logic GND
96	XTALOUT	O	Crystal clock output	128	CVCC18	–	Digital logic VCC (1.8V)
97	XTALIN	I	Crystal clock input	129	Q11	O	24-bit output pixel data bus
98	XTALVCC	–	ACR PLL crystal input VCC (3.3V)	130	Q10	O	24-bit output pixel data bus
99	REGVCC	–	ACR PLL regulator VCC (3.3V)	131	Q9	O	24-bit output pixel data bus
100	NC	–	No connect	132	Q8	O	24-bit output pixel data bus
101	RSVDL	I	Reserved, must be tied Low.	133	Q7	O	24-bit output pixel data bus
102	RESET#	I	Reset pin Active Low.	134	IOVCC	–	Input/Output pin VCC (3.3V)
103	SCDT	O	Indicates active video at HDMI input port	135	IOGND	–	Input/Output pin GND
104	INT	O	Interrupt output	136	Q6	O	24-bit output pixel data bus
105	CVCC18	–	Digital logic VCC (1.8V)	137	Q5	O	24-bit output pixel data bus
106	CGND	–	Digital logic GND	138	CGND	–	Digital logic GND
107	CLK48B	Bi-Di	Data bus latch enable	139	CVCC18	–	Digital logic VCC (1.8V)
108	IOGND	–	Input/Output pin GND	140	Q4	O	24-bit output pixel data bus
109	IOVCC	–	Input/Output pin VCC (3.3V)	141	Q3	O	24-bit output pixel data bus
110	Q23	O	24-bit output pixel data bus	142	Q2	O	24-bit output pixel data bus
111	Q22	O	24-bit output pixel data bus	143	Q1	O	24-bit output pixel data bus
112	Q21	O	24-bit output pixel data bus	144	Q0	O	24-bit output pixel data bus


■ SiI9030CTU (HDMI & DVC ASSY : IC301)

• HDMI PanelLink Transmitter

● Pin Arrangement (Top view)

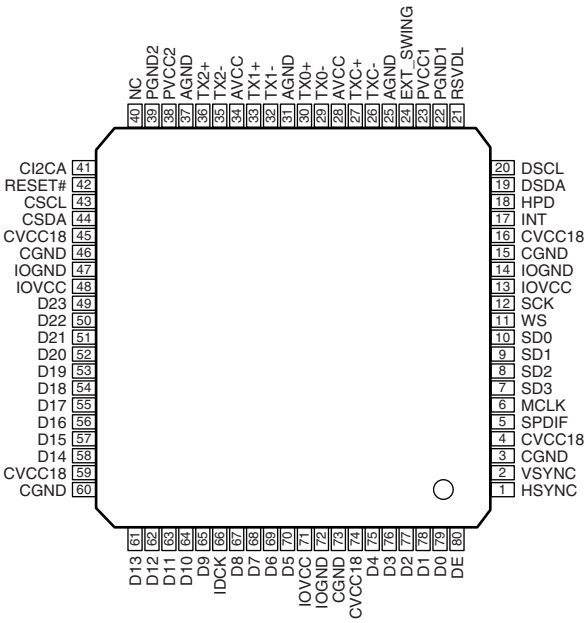

● Block Diagram

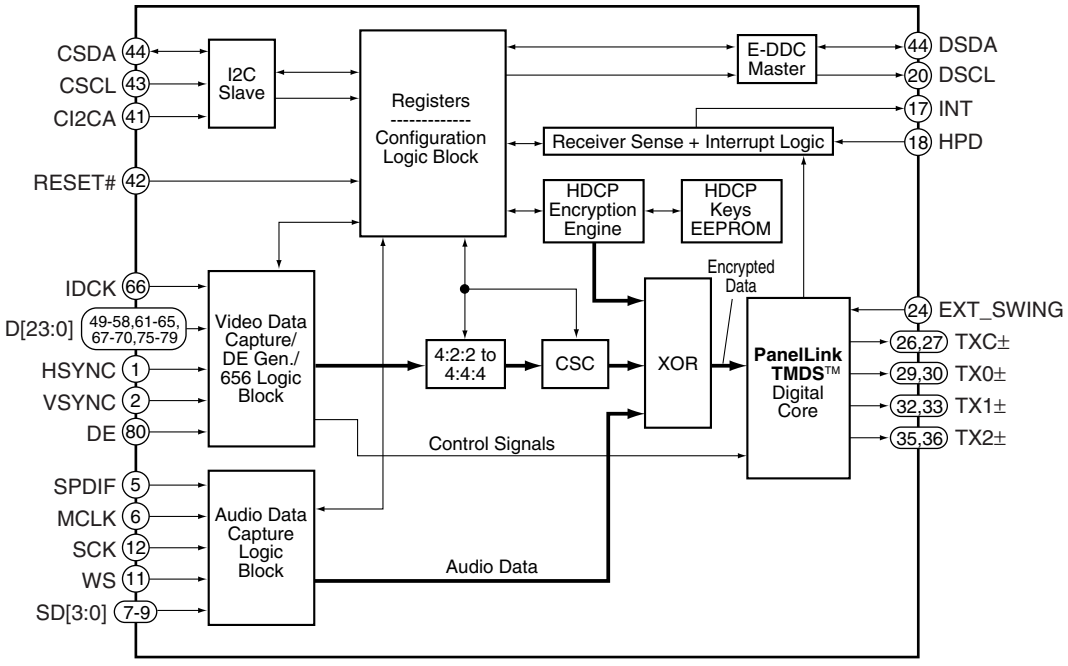


● Pin Function

No.	Pin Name	I/O	Function	No.	Pin Name	I/O	Function
1	HSYNC	I	Horizontal sync input control signal	41	CI2CA	I	I2C device address select
2	VSYNC	I	Vertical sync input control signal	42	RESET#	I	Reset pin (Active Low.)
3	CGND	–	Digital core GND	43	CSCL	I	I2C clock
4	CVCC18	–	Digital core VCC (1.8V)	44	CSDA	Bi-Di	I2C data (Open drain output)
5	SPDIF	I	S/PDIF audio input	45	CVCC18	–	Digital core VCC (1.8V)
6	MCLK	I	Audio input master clock	46	CGND	–	Digital core GND
7	SD3	I	I2S serial data	47	IOGND	–	IO pin GND
8	SD2	I	I2S serial data	48	IOVCC	–	IO pin VCC (3.3V)
9	SD1	I	I2S serial data	49	D23	I	12-bit input pixel data bus
10	SD0	I	I2S serial data	50	D22	I	12-bit input pixel data bus
11	WS	I	I2S word select	51	D21	I	12-bit input pixel data bus
12	SCK	I	I2S serial clock	52	D20	I	12-bit input pixel data bus
13	IOVCC	–	IO pin VCC (3.3V)	53	D19	I	12-bit input pixel data bus
14	IOGND	–	IO pin GND	54	D18	I	12-bit input pixel data bus
15	CGND	–	Digital core GND	55	D17	I	12-bit input pixel data bus
16	CVCC18	–	Digital core VCC (1.8V)	56	D16	I	12-bit input pixel data bus
17	INT	O	Interrupt output	57	D15	I	12-bit input pixel data bus
18	HPD	I	Hot plug detect input	58	D14	I	12-bit input pixel data bus
19	DSDA	Bi-Di	DDC data (Open drain output)	59	CVCC18	–	Digital core VCC (1.8V)
20	DSCL	Bi-Di	DDC clock	60	CGND	–	Digital core GND
21	RSVDL	I	Reserved for use by sillicon image, and must be tied Low.	61	D13	I	12-bit input pixel data bus
22	PGND1	–	TMDS core PLL ground	62	D12	I	12-bit input pixel data bus
23	PVCC1	–	TMDS core PLL power (3.3V)	63	D11	I	12-bit input pixel data bus
24	EXT_SWING	I	Voltage swing adjust	64	D10	I	12-bit input pixel data bus
25	AGND	–	Analog GND	65	D9	I	12-bit input pixel data bus
26	TXC-	O	TMDS output clock pairs	66	IDCK	I	Input data clock
27	TXC+	O	TMDS output clock pairs	67	D8	I	12-bit input pixel data bus
28	AVCC	–	Analog VCC (3.3V)	68	D7	I	12-bit input pixel data bus
29	TX0-	O	TMDS output data pairs	69	D6	I	12-bit input pixel data bus
30	TX0+	O	TMDS output data pairs	70	D5	I	12-bit input pixel data bus
31	AGND	–	Analog GND	71	IOVCC	–	IO pin VCC (3.3V)
32	TX1-	O	TMDS output data pairs	72	IOGND	–	IO pin GND
33	TX1+	O	TMDS output data pairs	73	CGND	–	Digital core GND
34	AVCC	–	Analog VCC (3.3V)	74	CVCC18	–	Digital core VCC (1.8V)
35	TX2-	O	TMDS output data pairs	75	D4	I	12-bit input pixel data bus
36	TX2+	O	TMDS output data pairs	76	D3	I	12-bit input pixel data bus
37	AGND	–	Analog GND	77	D2	I	12-bit input pixel data bus
38	PVCC2	–	Filter PLL power (3.3V)	78	D1	I	12-bit input pixel data bus
39	PGND2	–	Filter PLL ground	79	D0	I	12-bit input pixel data bus
40	NC	–	Not connected	80	DE	I	Data enable

■ ADV7400AKSTZ-80 (HDMI & DVC ASSY : IC401)

• Video Decoder IC

● Pin Arrangement (Top view)

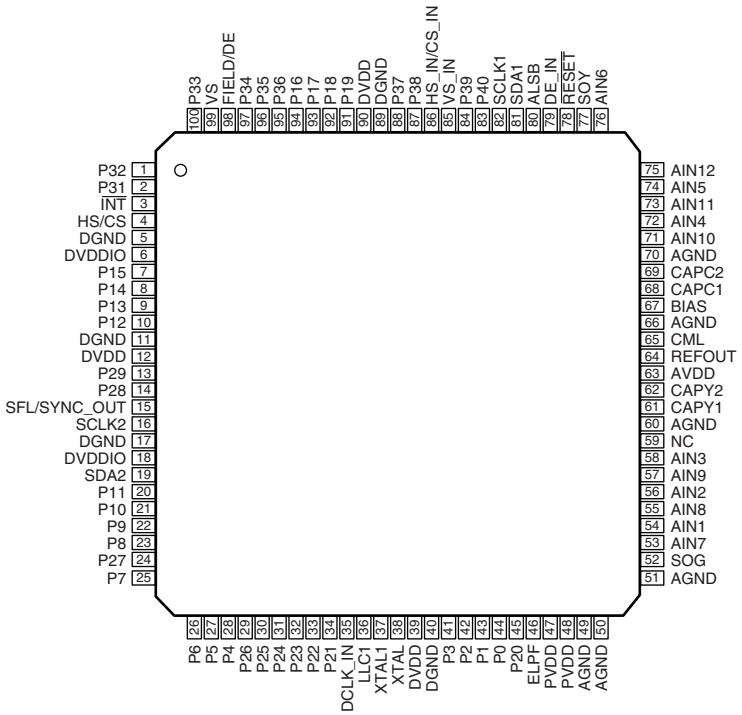

● Pin Function


No.	Pin Name	I/O	Function	No.	Pin Name	I/O	Function
1	P32	I	Video pixel input port	11	DGND	–	Digital ground
2	P31	I	Video pixel input port	12	DVDD	–	Digital core supply voltage (1.8V)
3	$\overline{\text{INT}}$	O	Interrupt pin	13	P29	I/O	Video pixel input/output port
4	HS/CS	O	H. Sync. output/digital composite sync. signal	14	P28	I/O	Video pixel input/output port
5	DGND	–	Digital ground	15	SFL/SYNC_OUT	O	Subcarrier frequency lock/SYNC_OUT is the sliced sync output signal only available in CP mode.
6	DVDDIO	–	Digital I/O supply voltage (3.3V)	16	SCLK2	I	I2C port serial clock input (max 400kHz)
7	P15	O	Video pixel output port	17	DGND	–	Digital ground
8	P14	O	Video pixel output port	18	DVDDIO	–	Digital I/O supply voltage (3.3V)
9	P13	O	Video pixel output port	19	SDA2	I/O	I2C port serial data input/output
10	P12	O	Video pixel output port	20	P11	I	Video pixel input port

No.	Pin Name	I/O	Function	No.	Pin Name	I/O	Function
21	P10	I	Video pixel input port	61	CAPY1	I	ADC capacitor network
22	P9	O	Video pixel output port	62	CAPY2	I	ADC capacitor network
23	P8	O	Video pixel output port	63	AVDD	–	Analog supply voltage (3.3V)
24	P27	I/O	Video pixel input/output port	64	REFOUT	O	Internal voltage reference output
25	P7	O	Video pixel output port	65	CML	O	Common-mode level pin for the internal ADCs
26	P6	O	Video pixel output port	66	AGND	–	Analog ground
27	P5	O	Video pixel output port	67	BIAS	O	External bias setting
28	P4	O	Video pixel output port	68	CAPC1	I	ADC capacitor network
29	P26	I/O	Video pixel input/output port	69	CAPC2	I	ADC capacitor network
30	P25	I/O	Video pixel input/output port	70	AGND	–	Analog ground
31	P24	I/O	Video pixel input/output port	71	AIN10	I	Analog video input channel
32	P23	I/O	Video pixel input/output port	72	AIN4	I	Analog video input channel
33	P22	I/O	Video pixel input/output port	73	AIN11	I	Analog video input channel
34	P21	I	Video pixel input port	74	AIN5	I	Analog video input channel
35	DCLK_IN	I	Clock input signal	75	AIN12	I	Analog video input channel
36	LLC1	O	Line-locked output clock for the pixel data output	76	AIN6	I	Analog video input channel
37	XTAL1	O	27MHz crystal connect pin	77	SOY	I	Sync on luma input
38	XTAL	I	Input pin for 27MHz crystal	78	$\overline{\text{RESET}}$	I	System reset input
39	DVDD	–	Digital core supply voltage (1.8V)	79	DE_IN	I	Data enable input signal
40	DGND	–	Digital ground	80	ALSB	I	Selects the I2C address for the ADV7400A control and VBI readback port
41	P3	O	Video pixel output port	81	SDA1	I/O	I2C port serial data input/output
42	P2	O	Video pixel output port	82	SCLK1	I	I2C port serial clock input (max 400kHz)
43	P1	I	Video pixel input port	83	P40	I	Video pixel input port
44	P0	I	Video pixel input port	84	P39	I	Video pixel input port
45	P20	I	Video pixel input port	85	VS_IN	I	VS input signal
46	ELPF	O	The recommend external loop filter must be connected to this pin	86	HS_IN/CS_IN	I	Can be configured in CP mode to be either a digital HS input signal or a digital CS input signal used to extract timing in 5-wire or 4-wire RGB mode.
47	PVDD	–	PLL supply voltage (1.8V)	87	P38	I	Video pixel input port
48	PVDD	–	PLL supply voltage (1.8V)	88	P37	I	Video pixel input port
49	AGND	–	Analog ground	89	DGND	–	Digital ground
50	AGND	–	Analog ground	90	DVDD	–	Digital core supply voltage (1.8V)
51	AGND	–	Analog ground	91	P19	O	Video pixel output port
52	SOG	I	Sync on green input	92	P18	O	Video pixel output port
53	AIN7	I	Analog video input channel	93	P17	O	Video pixel output port
54	AIN1	I	Analog video input channel	94	P16	O	Video pixel output port
55	AIN8	I	Analog video input channel	95	P36	I	Video pixel input port
56	AIN2	I	Analog video input channel	96	P35	I	Video pixel input port
57	AIN9	I	Analog video input channel	97	P34	I	Video pixel input port
58	AIN3	I	Analog video input channel	98	FIELD/DE	O	Field sync signal output/data enable
59	NC	–	No connect pin	99	VS	O	Vertical sync output signal
60	AGND	–	Analog ground	100	P33	I	Video pixel input port

■ PEG118A (HDMI & DVC ASSY : IC501)

• HDMI Microcomputer

● Pin Arrangement (Top view)

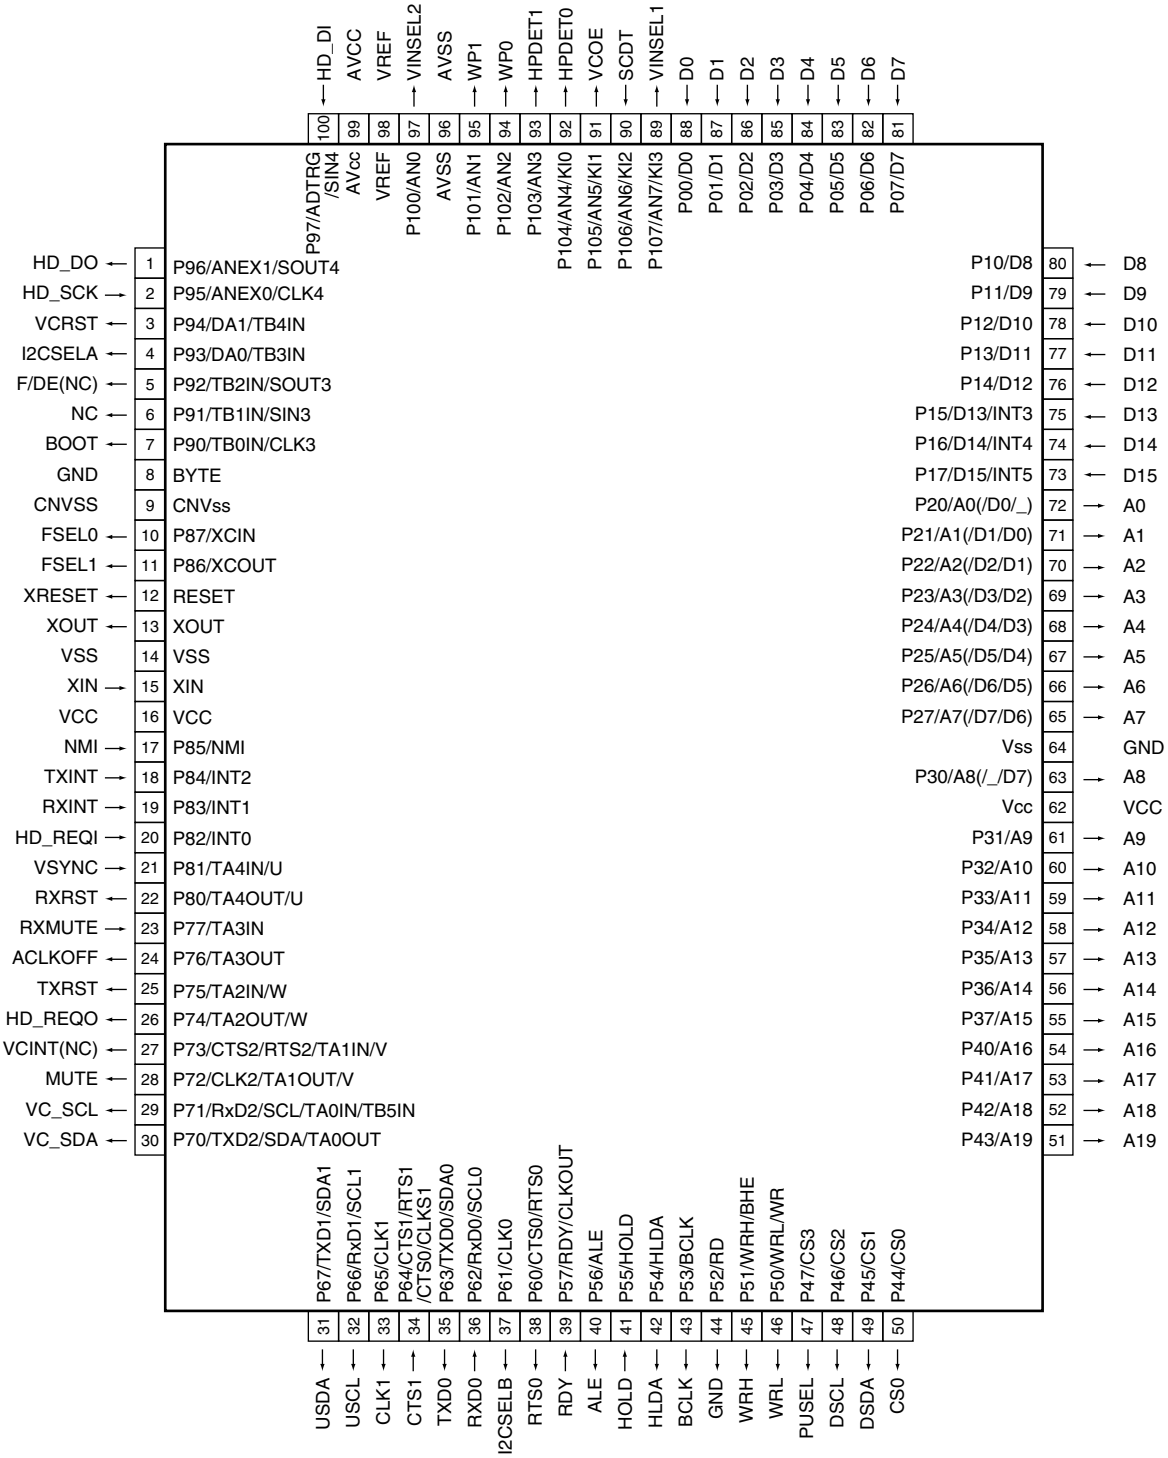

● Pin Function


No.	Mark	Pin Name	I/O	Pin Function
1	P96/ANEX1/SOUT4	HD_DO	O	Main controller communication
2	P95/ANEX0/CLK4	HD_SCK	I	Main controller communication
3	P94/DA1/TB4IN	VCRST	O	ADV7400A, ADV7172K
4	P93/DA0/TB3IN	I2CSELA	O	Access selection of EDID 1or 0 or Sil
5	P92/TB2IN/SOUT3	F/DE(NC)	O	
6	P91/TB1IN/SIN3	NC	O	Not connected
7	P90/TB0IN/CLK3	BOOT	O	
8	BYTE	GND		Ground
9	CNVss	CNVSS	–	CNVSS
10	P87/XCIN	FSEL0	O	IC601 FilterSelect
11	P86/XCOUT	FSEL1	O	IC601 FilterSelect
12	RESET	XRESET	O	Reset circuit of main controller communication
13	XOUT	XOUT	O	XTAL output
14	VSS	VSS	–	Ground
15	XIN	XIN	I	XTA input
16	VCC	VCC	–	3.3V power supply
17	P85/NMI	NMI	I	
18	P84/INT2	TXINT	I	Sil9030
19	P83/INT1	RXINT	I	Sil9031
20	P82/INT0	HD_REQI	I	REQ IN of main controller communication
21	P81/TA4IN/U	VSYNC	I	Not used
22	P80/TA4OUT/U	RXRST	O	Sil9031 RESET
23	P77/TA3IN	RXMUTE	I	Not used
24	P76/TA3OUT	ACLKOFF	O	For radio wave measures
25	P75/TA2IN/W	TXRST	O	Sil9030 reset
26	P74/TA2OUT/W	HD_REQO	O	REQ OUT of main controller communication
27	P73/CTS2/RTS2/TA1IN/V	VCINT(NC)	O	RDY_FP(INT) VIDEO DECODER
28	P72/CLK2/TA1OUT/V	MUTE	O	MUTE control
29	P71/RxD2/SCL/TA0IN/TB5IN	VC_SCL	O	Each IC (video converter)
30	P70/TXD2/SDA/TA0OUT	VC_SDA	O	Each IC
31	P67/TXD1/SDA1	USDA	O	Microcomputer rewriting connector / TX,RX
32	P66/RxD1/SCL1	USCL	O	Microcomputer rewriting connector / TX,RX
33	P65/CLK1	CLK1	O	Microcomputer rewriting connector / selector
34	P64/CTS1/RTS1/CTS0/CLKS1	CTS1	I	Microcomputer rewriting connector / 232C
35	P63/TXD0/SDA0	TXD0	O	232c
36	P62/RxD0/SCL0	RXD0	I	232c
37	P61/CLK0	I2CSELB	O	Access selection of EDID 1or 0 or Sil
38	P60/CTS0/RTS0	RTS0	O	232c
39	P57/RDY/CLKOUT	RDY	I	Open
40	P56/ALE	ALE	O	Open
41	P55/HOLD	HOLD	I	
42	P54/HLDA	HLDA	O	Open
43	P53/BCLK	BCLK	O	Open
44	P52/RD	GND	O	IC502 (for external Flash)
45	P51/WRH/BHE	WRH	O	IC502 open
46	P50/WRL/WR	WRL	O	IC502 (for external Flash)
47	P47/CS3	PUSEL	O	IC502 DDC communication 2.7k/4.7k resistor switch
48	P46/CS2	DSCL	O	IC502 I2C for DDC
49	P45/CS1	DSDA	O	IC502 I2C for DDC
50	P44/CS0	CS0	O	IC502 (for external Flash)

No.	Mark	Pin Name	I/O	Pin Function
51	P43/A19	A19	O	Address output for IC502 (open)
52	P42/A18	A18	O	Address output for IC502
53	P41/A17	A17	O	Address output for IC502
54	P40/A16	A16	O	Address output for IC502
55	P37/A15	A15	O	Address output for IC502
56	P36/A14	A14	O	Address output for IC502
57	P35/A13	A13	O	Address output for IC502
58	P34/A12	A12	O	Address output for IC502
59	P33/A11	A11	O	Address output for IC502
60	P32/A10	A10	O	Address output for IC502
61	P31/A9	A9	O	Address output for IC502
62	Vcc	VCC	–	3.3V power supply
63	P30/A8(/_/D7)	A8	O	Address output for IC502
64	Vss	GND	–	Ground
65	P27/A7(/D7/D6)	A7	O	Address output for IC502
66	P26/A6(/D6/D5)	A6	O	Address output for IC502
67	P25/A5(/D5/D4)	A5	O	Address output for IC502
68	P24/A4(/D4/D3)	A4	O	Address output for IC502
69	P23/A3(/D3/D2)	A3	O	Address output for IC502
70	P22/A2(/D2/D1)	A2	O	Address output for IC502
71	P21/A1(/D1/D0)	A1	O	Address output for IC502
72	P20/A0(/D0/_)	A0	O	Address output for IC502
73	P17/D15/INT5	D15	I	Data input for IC502
74	P16/D14/INT4	D14	I	Data input for IC502
75	P15/D13/INT3	D13	I	Data input for IC502
76	P14/D12	D12	I	Data input for IC502
77	P13/D11	D11	I	Data input for IC502
78	P12/D10	D10	I	Data input for IC502
79	P11/D9	D9	I	Data input for IC502
80	P10/D8	D8	I	Data input for IC502
81	P07/D7	D7	I	Data input for IC502
82	P06/D6	D6	I	Data input for IC502
83	P05/D5	D5	I	Data input for IC502
84	P04/D4	D4	I	Data input for IC502
85	P03/D3	D3	I	Data input for IC502
86	P02/D2	D2	I	Data input for IC502
87	P01/D1	D1	I	Data input for IC502
88	P00/D0	D0	I	Data input for IC502
89	P107/AN7/KI3	VINSEL1	O	IC602-pin 1 (MM1503XN)
90	P106/AN6/KI2	SCDT	I	Sil9031
91	P105/AN5/KI1	VCOE	O	Select RX or DVC L: Si9030, DVC output ON ,H: Si9030 Hz
92	P104/AN4/KI0	HPDET0	O	Plug
93	P103/AN3	HPDET1	O	Plug
94	P102/AN2	WP0	O	EDID
95	P101/AN1	WP1	O	EDID
96	AVSS	AVSS	–	Ground Connect to VSS.
97	P100/AN0	VINSEL2	O	
98	VREF	VREF	–	3.3V Connect to VCC.
99	AVcc	AVCC	–	3.3V Connect to VCC.
100	P97/ADTRG/SIN4	HD_DI	I	Main controller communication

PE5503A (DISPLAY ASSY : IC3201)

• Display Microcomputer

● Pin Arrangement (Top view)

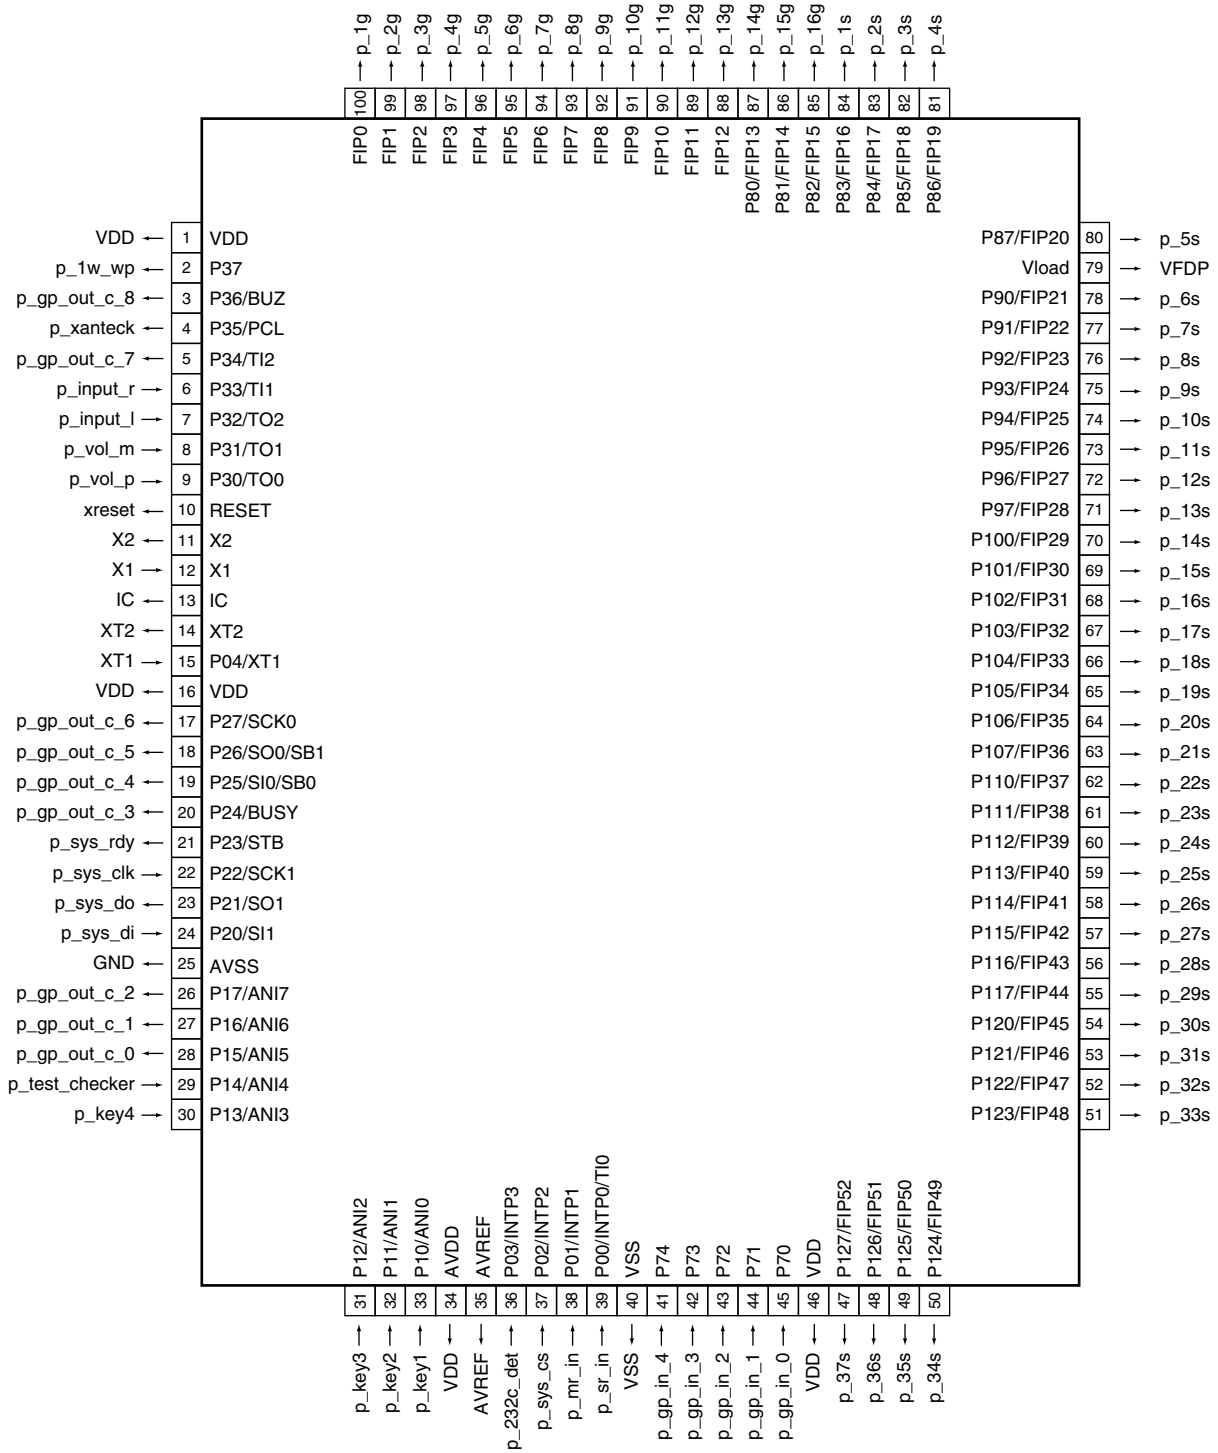

● Pin Function


No.	Mark	Pin Name	I/O	Pin Function
1	VDD	VDD	–	Positive power supply
2	P37	p_1w_wp	O	Main microcomputer start-up output corresponding to 1W
3	P36/BUZ	p_gp_out_c_8	O	General-purpose output (CMOS_8) for IR2SW (must be tied L)
4	P35/PCL	p_xanteck	O	xantec correspondence L: set2 (PIONEER), H: set1 (others)
5	P34/TI2	p_gp_out_c_7	O	General-purpose output (CMOS_7)
6	P33/TI1	p_input_r	I	MULTIJOG
7	P32/TO2	p_input_l	I	MULTIJOG
8	P31/TO1	p_vol_m	I	vol(-)
9	P30/TO0	p_vol_p	I	vol(+)
10	RESET	xreset	–	Reset input
11	X2	X2	–	Connect a 5MHz crystal for X1 input clock oscillation
12	X1	X1	I	
13	IC	IC	–	
14	XT2	XT2	–	
15	P04/XT1	XT1	I	Pull-down (100k)
16	VDD	VDD	–	Positive power supply
17	P27/SCK0	p_gp_out_c_6	O	General-purpose output (CMOS_6)
18	P26/SO0/SB1	p_gp_out_c_5	O	General-purpose output (CMOS_5) ISO PHASE LED
19	P25/SI0/SB0	p_gp_out_c_4	O	General-purpose output (CMOS_4) MCACC LED
20	P24/BUSY	p_gp_out_c_3	O	General-purpose output (CMOS_3)
21	P23/STB	p_sys_rdy	O	RDY of Main microcomputer communication
22	P22/SCK1	p_sys_clk	I	CLK of Main microcomputer communication
23	P21/SO1	p_sys_do	O	Data output of Main microcomputer communication
24	P20/SI1	p_sys_di	I	Data input of Main microcomputer communication
25	AVSS	GND	–	A/D converter GND, same electric potential as the EVSS/VSS.
26	P17/ANI7	p_gp_out_c_2	O	General-purpose output (CMOS_2) DIGITAL PROCESSING LED
27	P16/ANI6	p_gp_out_c_1	O	General-purpose output (CMOS_1) HDMI LED
28	P15/ANI5	p_gp_out_c_0	O	General-purpose output (CMOS_0) i.LINK(upper model),DVC (lower model) LED
29	P14/ANI4	p_test_checker	I	Test mode input for checker pull-down by 100K
30	P13/ANI3	p_key4	I	Front key input (A/D)
31	P12/ANI2	p_key3	I	Front key input (A/D)
32	P11/ANI1	p_key2	I	Front key input (A/D)
33	P10/ANI0	p_key1	I	Front key input (A/D)
34	AVDD	VDD	–	Power supply
35	AVREF	AVREF	–	Reference voltage input of A/Dconverter
36	P03/INTP3	p_232c_det	I	232C signal detection A model without RS232C needs pull-up.
37	P02/INTP2	p_sys_cs	I	CS of Main microcomputer communication
38	P01/INTP1	p_mr_in	I	Multi room remote control signal input A model without IR needs pull-up.
39	P00/INTP0/TI0	p_sr_in	I	Main room remote control signal input
40	VSS	VSS	–	Ground
41	P74	p_gp_in_4	I	General-purpose input 4 Pull-down to GND when does not use.
42	P73	p_gp_in_3	I	General-purpose input 3 Pull-down to GND when does not use.
43	P72	p_gp_in_2	I	General-purpose input 2 Pull-down to GND when does not use.
44	P71	p_gp_in_1	I	General-purpose input 1 Pull-down to GND when does not use.
45	P70	p_gp_in_0	I	General-purpose input 0 Pull-down to GND when does not use.
46	VDD	VDD	–	Positive power supply
47	P127/FIP52	p_37s	O	FL drive
48	P126/FIP51	p_36s	O	FL drive
49	P125/FIP50	p_35s	O	FL drive
50	P124/FIP49	p_34s	O	FL drive

No.	Mark	Pin Name	I/O	Pin Function
51	P123/FIP48	p_33s	O	FL drive
52	P122/FIP47	p_32s	O	FL drive
53	P121/FIP46	p_31s	O	FL drive
54	P120/FIP45	p_30s	O	FL drive
55	P117/FIP44	p_29s	O	FL drive
56	P116/FIP43	p_28s	O	FL drive
57	P115/FIP42	p_27s	O	FL drive
58	P114/FIP41	p_26s	O	FL drive
59	P113/FIP40	p_25s	O	FL drive
60	P112/FIP39	p_24s	O	FL drive
61	P111/FIP38	p_23s	O	FL drive
62	P110/FIP37	p_22s	O	FL drive
63	P107/FIP36	p_21s	O	FL drive
64	P106/FIP35	p_20s	O	FL drive
65	P105/FIP34	p_19s	O	FL drive
66	P104/FIP33	p_18s	O	FL drive
67	P103/FIP32	p_17s	O	FL drive
68	P102/FIP31	p_16s	O	FL drive
69	P101/FIP30	p_15s	O	FL drive
70	P100/FIP29	p_14s	O	FL drive
71	P97/FIP28	p_13s	O	FL drive
72	P96/FIP27	p_12s	O	FL drive
73	P95/FIP26	p_11s	O	FL drive
74	P94/FIP25	p_10s	O	FL drive
75	P93/FIP24	p_9s	O	FL drive
76	P92/FIP23	p_8s	O	FL drive
77	P91/FIP22	p_7s	O	FL drive
78	P90/FIP21	p_6s	O	FL drive
79	Vload	VFDP	–	Connect a pull-down resistor of FIP controller/driver
80	P87/FIP20	p_5s	O	FL drive
81	P86/FIP19	p_4s	O	FL drive
82	P85/FIP18	p_3s	O	FL drive
83	P84/FIP17	p_2s	O	FL drive
84	P83/FIP16	p_1s	O	FL drive
85	P82/FIP15	p_16g	O	FL drive
86	P81/FIP14	p_15g	O	FL drive
87	P80/FIP13	p_14g	O	FL drive
88	FIP12	p_13g	O	FL drive
89	FIP11	p_12g	O	FL drive
90	FIP10	p_11g	O	FL drive
91	FIP9	p_10g	O	FL drive
92	FIP8	p_9g	O	FL drive
93	FIP7	p_8g	O	FL drive
94	FIP6	p_7g	O	FL drive
95	FIP5	p_6g	O	FL drive
96	FIP4	p_5g	O	FL drive
97	FIP3	p_4g	O	FL drive
98	FIP2	p_3g	O	FL drive
99	FIP1	p_2g	O	FL drive
100	FIP0	p_1g	O	FL drive

■ PDC131A (COMPOSITE V ASSY : IC2007)

• Character Generator IC

● Pin Arrangement (Top view)

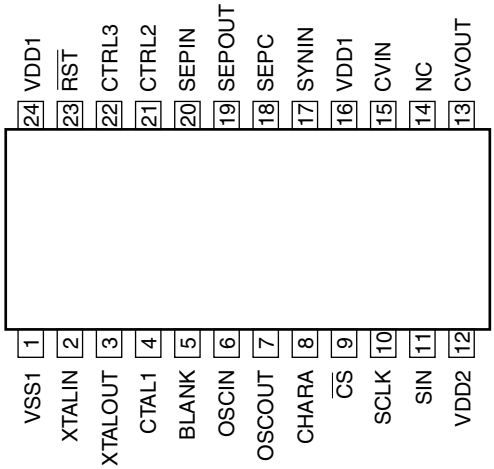


● Pin Function

No.	Pin Name	I/O	Pin Function
1	VSS1	–	Ground connection (digital system ground)
2	XtalIN	I	Crystal oscillator connection
3	XtalOUT	O	Crystal oscillator connection
4	CTRL1	I	Crystal oscillator input switching
5	BLANK	O	Outputs the blank signal
6	OSCIN	I	LC oscillator connection
7	OSCOUT	O	LC oscillator connection
8	CHARA	O	Outputs the character signal
9	$\overline{CS}$	I	Serial data input enable input
10	SCLK	I	Serial data input clock input
11	SIN	I	Serial data input
12	VDD2	–	Power supply
13	CVOUT	O	Composite video signal output
14	NC	–	Must be either connected to ground or left open.
15	CVIN	I	Composite video signal input
16	VDD1	–	Power supply (+5 V: digital system power supply)
17	SYNIN	I	Video signal input for the built-in sync separator circuit
18	SEPC	I	Built-in sync separator circuit bias voltage monitor pin
19	SEPOUT	O	Built-in sync separator circuit composite sync signal output
20	SEPIN	I	Inputs a vertical synchronization signal created by integrating the SEPOUT pin output signal
21	CTRL2	I	NTSC/PAL-M switching input
22	CTRL3	I	Control whether or not the VSYNC signal is input to the SEPIN input
23	$\overline{RST}$	I	System reset input
24	VDD1	–	Power supply (+5 V: digital system power supply)

8. PANEL FACILITIES

Front panel

Illustration shows the VSX-74TXVi front panel

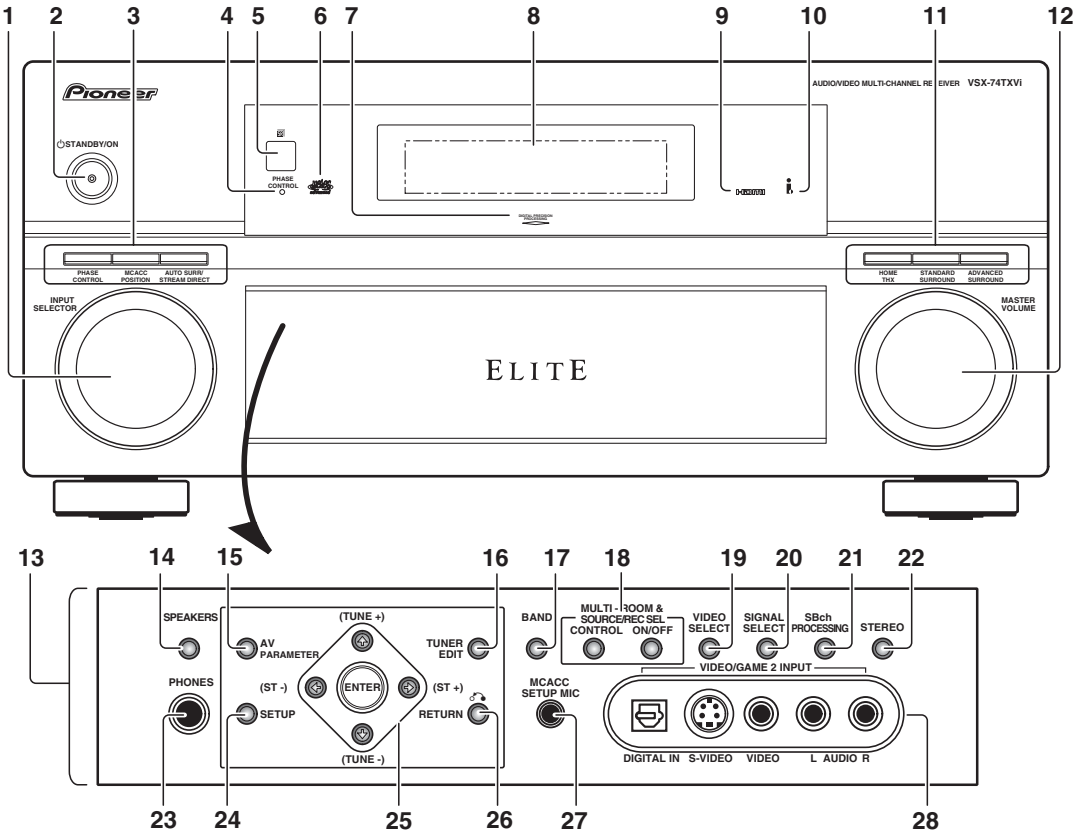

1 INPUT SELECTOR dial
Use to select an input source.

2 ⏻ STANDBY/ON
Switches the receiver between on and standby. Power indicator lights when the receiver is on.

3 PHASE CONTROL- Press to switch on/off phase correction.
MCACC POSITION - Press to switch between MCACC presets.
AUTO SURR / STREAM DIRECT - Press to select Auto Surround or Stream Direct listening.

4 PHASE CONTROL indicator
Lights when Phase Control is switched.

5 Remote sensor
Receives the signals from the remote control (see Operating range of remote control unit).

6 MCACC indicator
Lights when one of the MCACC presets is selected.

7 Digital Precision Processing indicator
Lights to indicate digital processing (for example, it disappears when Pure Direct is on, or when listening through the multichannel analog inputs).

8 Character display
See Display.

9 HDMI indicator
Blinks when connecting an HDMI-equipped component; lights when the component is connected.

10 i.LINK indicator (VSX-74TXVi only)
Lights when an i.LINK-Audio-equipped component is selected.

DIGITAL VIDEO CONVERSIONindicator (VSX-72TXV only)
Lights when digital video conversion is enabled.


11 Listening mode buttons
HOME THX - Press to select a Home THX listening mode.

STANDARD SURROUND - Press for Standard decoding and to switch between the various Pro Logic IIx and Neo:6 options.

ADVANCED SURROUND - Use to switch between the various surround modes.

12 MASTER VOLUME dial

13 Front panel controls
To access the front panel controls, push gently on the lower third portion of the panel with your finger.

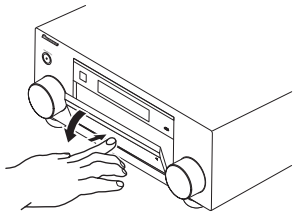

14 SPEAKERS
Use to change the speaker system.

15 AV PARAMETER
Use to access the AV options.

16 TUNER EDIT
Use with ⬅/➡ to memorize and name stations for recall.

17 BAND
Switches between AM and FM radio bands.

18 MULTI ROOM & SOURCE / REC SEL controls
If youíve made multi-room connections (see Multi-room listening) use these controls to control the sub room from the main room(see Using the multi-room controls).

You will also need to use the **REC SEL** controls when recording a source (see Making an audio or a video recording).

19 VIDEO SELECT
Press repeatedly to select the video source.

20 SIGNAL SELECT
Use to select an input signal.

21 SBch PROCESSING
Selects the surround back channel mode or virtual surround back mode.

22 STEREO
Switches to stereo playback.

23 PHONES jack
Use to connect headphones. When the headphones are connected, there is no sound output from the speakers.

24 SETUP
Press to access the System Setup menu.

25 ⬅➡⬇⬆ (TUNE/ST +/–) /ENTER
Use the arrow buttons when setting up your surround sound system. Use the **TUNE +/–** buttons to find radio frequencies and use **ST +/–** to find preset stations.

26 RETURN
Press to confirm and exit the current menu screen.


27 MCACC SETUP MIC jack
Use to connect the supplied microphone.

28 VIDEO/GAME 2 INPUT
See Connecting a component to the front panel inputs.


Operating range of remote control unit

The remote control may not work properly if:

- There are obstacles between the remote control and the receiver's remote sensor.
- Direct sunlight or fluorescent light is shining onto the remote sensor.
- The receiver is located near a device that is emitting infrared rays.
- The receiver is operated simultaneously with another infrared remote control unit.

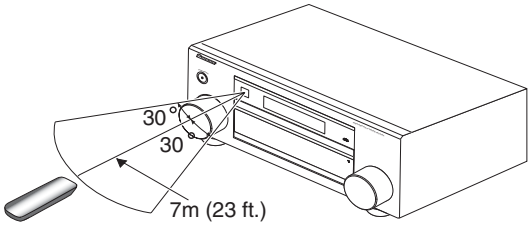

Display

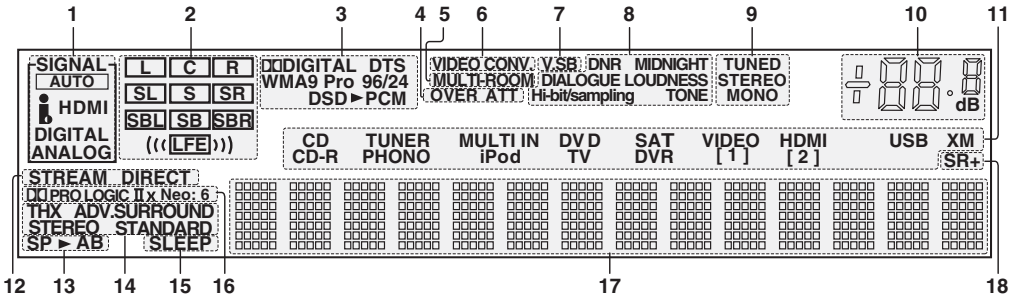

1 SIGNAL indicators
Light to indicate the currently selected input signal. **AUTO** lights when the receiver is set to select the input signal automatically.

2 Program format indicators
These change according to which channels are active in digital sources.

L - Left front channel
C - Center channel
R - Right front channel
SL- Left surround channel
S - Surround channel (mono)
SR - Right surround channel
SBL - Left surround back channel
SB - Surround back channel (mono)
SBR- Right surround back channel
LFE - Low frequency effects channel (the ((( ))) indicators light when an LFE signal is being input)

3 Digital format indicators
Light when a signal encoded in the corresponding format is detected (**DSD ► PCM** lights during DSD (Digital Stream Direct) to PCM conversion with SACDs).

4 OVER / ATT
OVER lights to indicate that the level of an analog source is too high. **ATT** lights when you use the attenuator (**ANALOG ATT**) to reduce it.

5 MULTI-ROOM
Lights when the multi-room feature is active.

6 VIDEO CONV.
Lights when digital video conversion is enabled.

7 V.SB
Lights during Virtual surround back processing

8 Sound processing indicators
Light according to the active AV parameter(s)

9 TUNER indicators
TUNED - Lights when a broadcast is being received.

STEREO - Lights when a stereo FM broadcast is being received in auto stereo mode.

MONO - Lights when the mono mode is set using the **MPX** button.

10 Master volume level
Shows the overall volume level. **–80dB** indicates the minimum level, and **+12dB** indicates the maximum level.

11 Input source indicators
Light to indicate the input source you have selected.

12 STREAM DIRECT
Lights when Direct / Pure Direct is selected.

13 Speaker indicators
Lights to indicate the current speaker system, **A** and/or **B** .

14 Listening mode indicators
THX - Lights when one of the Home THX modesis selected.

ADV. SURROUND - Lights when one of the Advanced Surround modes has been selected.

STEREO - Lights when stereo listening is switched on (see Listening in stereo).

STANDARD - Lights when one of the Standard Surround modes is switched on(see Listening in surround sound.

15 SLEEP
Lights when the receiver is in sleep mode.


16 Matrix decoding format indicators
PRO LOGIC IIx – This lights to indicate Pro Logic II / Pro Logic IIx decoding

Neo:6- When one of the Neo:6 modes of the receiver is on, this lights to indicate Neo:6 processing

17 Character display
Displays various system information.

18 SR+
Lights when the SR+ mode is switched.

Remote control

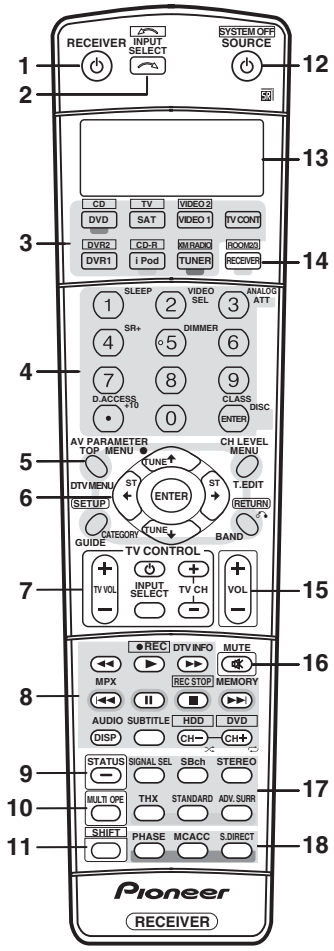

The remote has been conveniently color-coded according to component control using the following system (press the corresponding input source button to access):

- **Green** - Receiver controls (see below)
- **Red** - DVD controls
- **Blue** - Tuner/XM Radio controls
- **Yellow** - iPod controls
- **White** - Other controls

1 RECEIVER ⏻
This switches between standby and on for this receiver.

2 INPUT SELECT
Use to select the input source (use **SHIFT** for **INPUT SELECT** ⏍).

3 Input source buttons
Press to select control of other components (see Controlling the rest of your system).

4 Number buttons and other receiver/ component component controls
Use the number buttons to directly select a radio frequency or the tracks on a CD, DVD, etc.

DISC (ENTER) can be used to enter commands for TV or DTV, and also to select a disc in a multi-CD player.

Press **RECEIVER** first to access:

SLEEP - Use to put the receiver in sleep mode and select the amount of time before sleep.

VIDEO SEL - Press repeatedly to select the video source.

ANALOG ATT - Attenuates (lowers) the level of an analog input signal to prevent distortion.

SR+ - Switches the SR+ mode on/off.

DIMMER - Dims or brightens the display.

Press **TUNER** first to access:

D.ACCESS - After pressing, you can access a radio station directly using the number buttons.

CLASS - Switches between the three banks (classes) of radio station presets.

5 Tuner/component control buttons/SETUP
These button controls can be accessed after you have selected the corresponding input source button (**DVD/LD**, **TV/SAT**, etc.). The **BAND**and **T.EDIT** tuner controls are explained. Press **RECEIVER** first to access the following controls:

AV PARAMETER - Use to access the AV options.

SETUP - Use to access the System Setup menu.

CH LEVEL - Press repeatedly to select a channel, then use ⬅/➡ to adjust the level.

RETURN - Press to confirm and exit the current menu screen (also use to return to the previous menu with DVDs or to select closed captioning with DTV).

6 ⬅➡⬇⬆ (TUNE / ST) / ENTER
Use the arrow buttons when setting up your surround sound system and the AV options. Also used to control DVD menus/options and for deck 1 of a double cassette deck player. Use the **TUNE** ⬆/⬇ buttons to find radio frequencies and use **ST** ⬅/➡to find preset stations.

7 TV CONTROL buttons
These buttons are dedicated to control the TV assigned to the **TV CONT** button. Thus if you only have one TV to hook up to this system assign it to the **TV CONT** input source button. If you have two TVs, assign the main TV to the **TV CONT** button.

TV - Use to turn on/off the power of the TV.

TV VOL +/– - Use to adjust the volume on your TV.

INPUT SELECT - Use to select the TV input signal.

TV CH +/– - Use to select channels.

8 Component control buttons

The main buttons (▶, ■, etc.) are used to control a component after you have selected it using the input source buttons.

The controls above these buttons can be accessed after you have selected the corresponding input source button (for example **DVD/LD**, **DVR/VCR** or **TV/SAT** (when connected to a DTV)). The following controls can be accessed when listening to the built-in tuner:

MPX - Switches between stereo and mono reception of FM broadcasts. If the signal is weak then switching to mono will improve the sound quality.

DISP- Switches between named station presets and radio frequencies.

9 STATUS

Press to check selected receiver settings.

10 MULTIOPE

Use this button to perform multi operations.

11 SHIFT

Press to access the controls outlined in white boxes (for example, **INPUT SELECT**), or to display the currently selected input source in the remote control LCD.

12 SOURCE

Press to turn on/off other components connected to the receiver.

13 Character display (LCD)

This display shows information when transmitting control signals.

The following commands are shown when you're setting the remote to control other components (see Controlling the rest of your system):

SETUP - Indicates the setup mode, from which you choose the options below.

PRESET - See Selecting preset codes directly.

LEARNING - See Programming signals from other remote controls.

MULTI OP - See Multi Operation and System Off.

SYS OFF - See Multi Operation and System Off.

DIRECT F - See Direct function.

RENAME - See Renaming input source names.

ERASE- See Erasing one of the remote control button settings.

RESET - See Resetting the remote control presets.

READ ID - See Confirming preset codes.

14 RECEIVER

Switches the remote to control the receiver (used to select the green commands above the number buttons (**ANALOG ATT**, etc). Also use this button to set up surround sound. With SHIFT, this selects selects the multi-room control, shown in the display as **RCV/RM2**, **RCV/RM3**.

15 VOL +/–

Use to set the listening volume.

16 MUTE

Mutes the sound or restores the sound if it has been muted (adjusting the volume also restores the sound).

17 Receiver controls

SIGNAL SEL - Use to select an input signal.

SBch - Use to select the surround/virtual back channel mode.

STEREO - Switches between direct and stereo playback. Direct playback bypasses the tone controls and any other signal processing for the most accurate reproduction of a source.

THX - Press to select a Home THX listening mode.

STANDARD - Press for Standard decoding and to switch between the various Pro Logic IIx and Neo:6 options.


ADV.SURR - Use to switch between the various surround modes.

18 PHASE - Press to switch on/off phase correction.

MCACC - Press to switch between MCACC presets .

S.DIRECT - Press to select Auto Surround or Stream Direct listening.

Rear panel

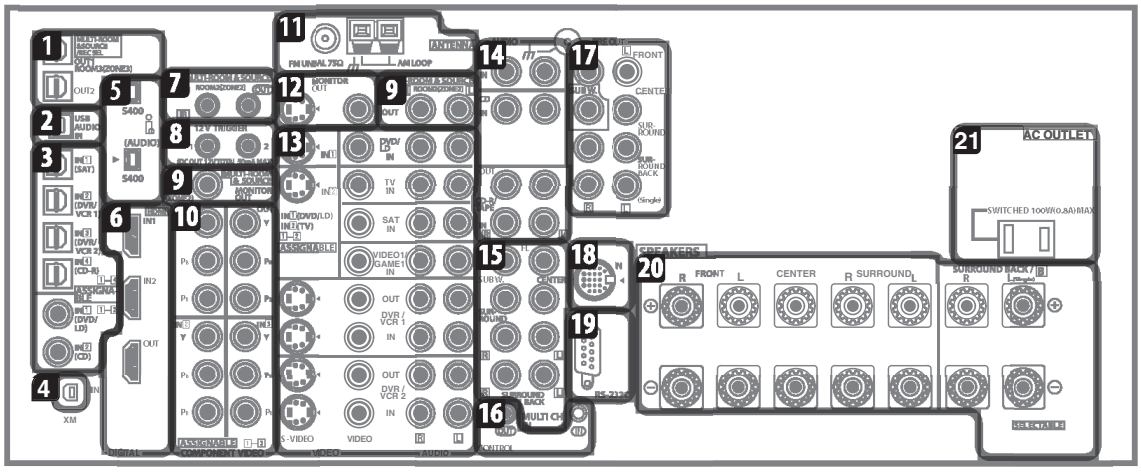

Caution

- Before making or changing the connections, switch off the power and disconnect the power cord from the power outlet. Plugging in should be the final step.

1 Optical digital audio output(s)
Use the **OUT1** and (VSX-74TXVi only) **OUT2** jack ecording to a CD or MiniDisc recorder.
→ Connecting digital audio sources.

The **OUT1** jack is also used for multi-room connections.
→ Multi-room listening.

2 USB audio input (VSX-74TXVi only)
Use to connect your PC as an audio source.
→ Using the USB interface.

3 Optical and coaxial digital audio inputs (x6)
Use for digital audio sources, including DVD players/recorders, digital satellite receivers, CD players, etc.

→ See also The Input Setup menu to assign the inputs.

4 XM Radio input
→ See Using XM Radio.

5 S-400 i.LINK connectors (x2) (VSX-74TXVi only)
Use to connect other i.LINK audio devices for high-resolution, multichannel digital audio input/output.
→ Using the i.LINK interface.

6 HDMI connectors (x3)
Two inputs and one output for high-quality audio/video connection to compatible HDMI devices.
→ Connecting using HDMI.

7 Remote input (multi-room and source)
Use for connection to an external remote control sensor for use in a multi-room setup, for example.
→ Connecting an IR receiver.

8 12V trigger jacks (total 50 mA max.) **(x2)**
Use to switch components in your system on and off according to the input function of the receiver.
→ Switching components on and off using the 12 volt trigger.

9 Multi-room and source outputs
Use to connect a second amplifier in a separate room.
→ Multi-room listening.

10 Component video connections (x4)
Use the inputs to connect any video source that has component video output, such as a DVD recorder. Use the output for connection to a monitoror TV.
→ Using the component video jacks.

11 AM and FM antenna terminals
Use to connect indoor or outdoor antennas for radio broadcasts.
→ Connecting antennas.

12 Composite and S-video monitor outputs
Use to connect monitors and TVs.
→ Connecting your TV and DVD player.

13 Audio/video source inputs/(outputs) (x6)
Use for connection to audio/visual sources, such as DVD players/recorders, VCRs, etc. Each set of inputs has jacks for composite video, S-video and stereo analog audio.
→ Connecting a DVD/HDD recorder, VCR and other video sources.

14 Stereo analog audio source inputs/ (outputs) (x3)
Use for connection to audio sources such as CD players, tape decks, turntables, etc.
→ Connecting analog audio sources.

15 Multichannel analog audio inputs
7.1 channel inputs for connection to a DVD player with multichannel analog outputs.
→ Connecting the multichannel analog inputs.

16 Control input/output
Use to connect other Pioneer components so that you can control all your equipment from a single IR remote sensor.
→ Operating other Pioneer components with this unit's sensor.

17 Multichannel pre-amplifier outputs
Use to connect separate amplifiers for center, surround, surround back and subwoofer channels.
→ Connecting additional amplifiers(see also Installing your speaker systemfor powered subwoofer connection).

18 iPod input terminal
Use to connect your Apple iPod as an audio source.
→ Connecting an iPod.

19 RS-232C connector
Use for connection to a PC for graphical output when using Advanced MCACC.
→ Connecting a PC for Advanced MCACC output.

20 Speaker terminals
Use for connection to the main front, center, surround and surround back speakers.
→ Installing your speaker system.

21 Switched AC power outlet (100W/0.8A max.)
Use to power another component in the system. Power to the outlet switches on and off with the receiver.
→ AC outlet.

■ Jigs list

Name	Jig No.	Remarks
RS-232C I/F JIG	GGF1348	Update of the flash ROM
Flexible Cable (7P)	VDA1681	Update of the flash ROM
Audio control cable for iPod	ADE7119	Check of iPod