TAPE DECK SCHEMATIC DIAGRAM

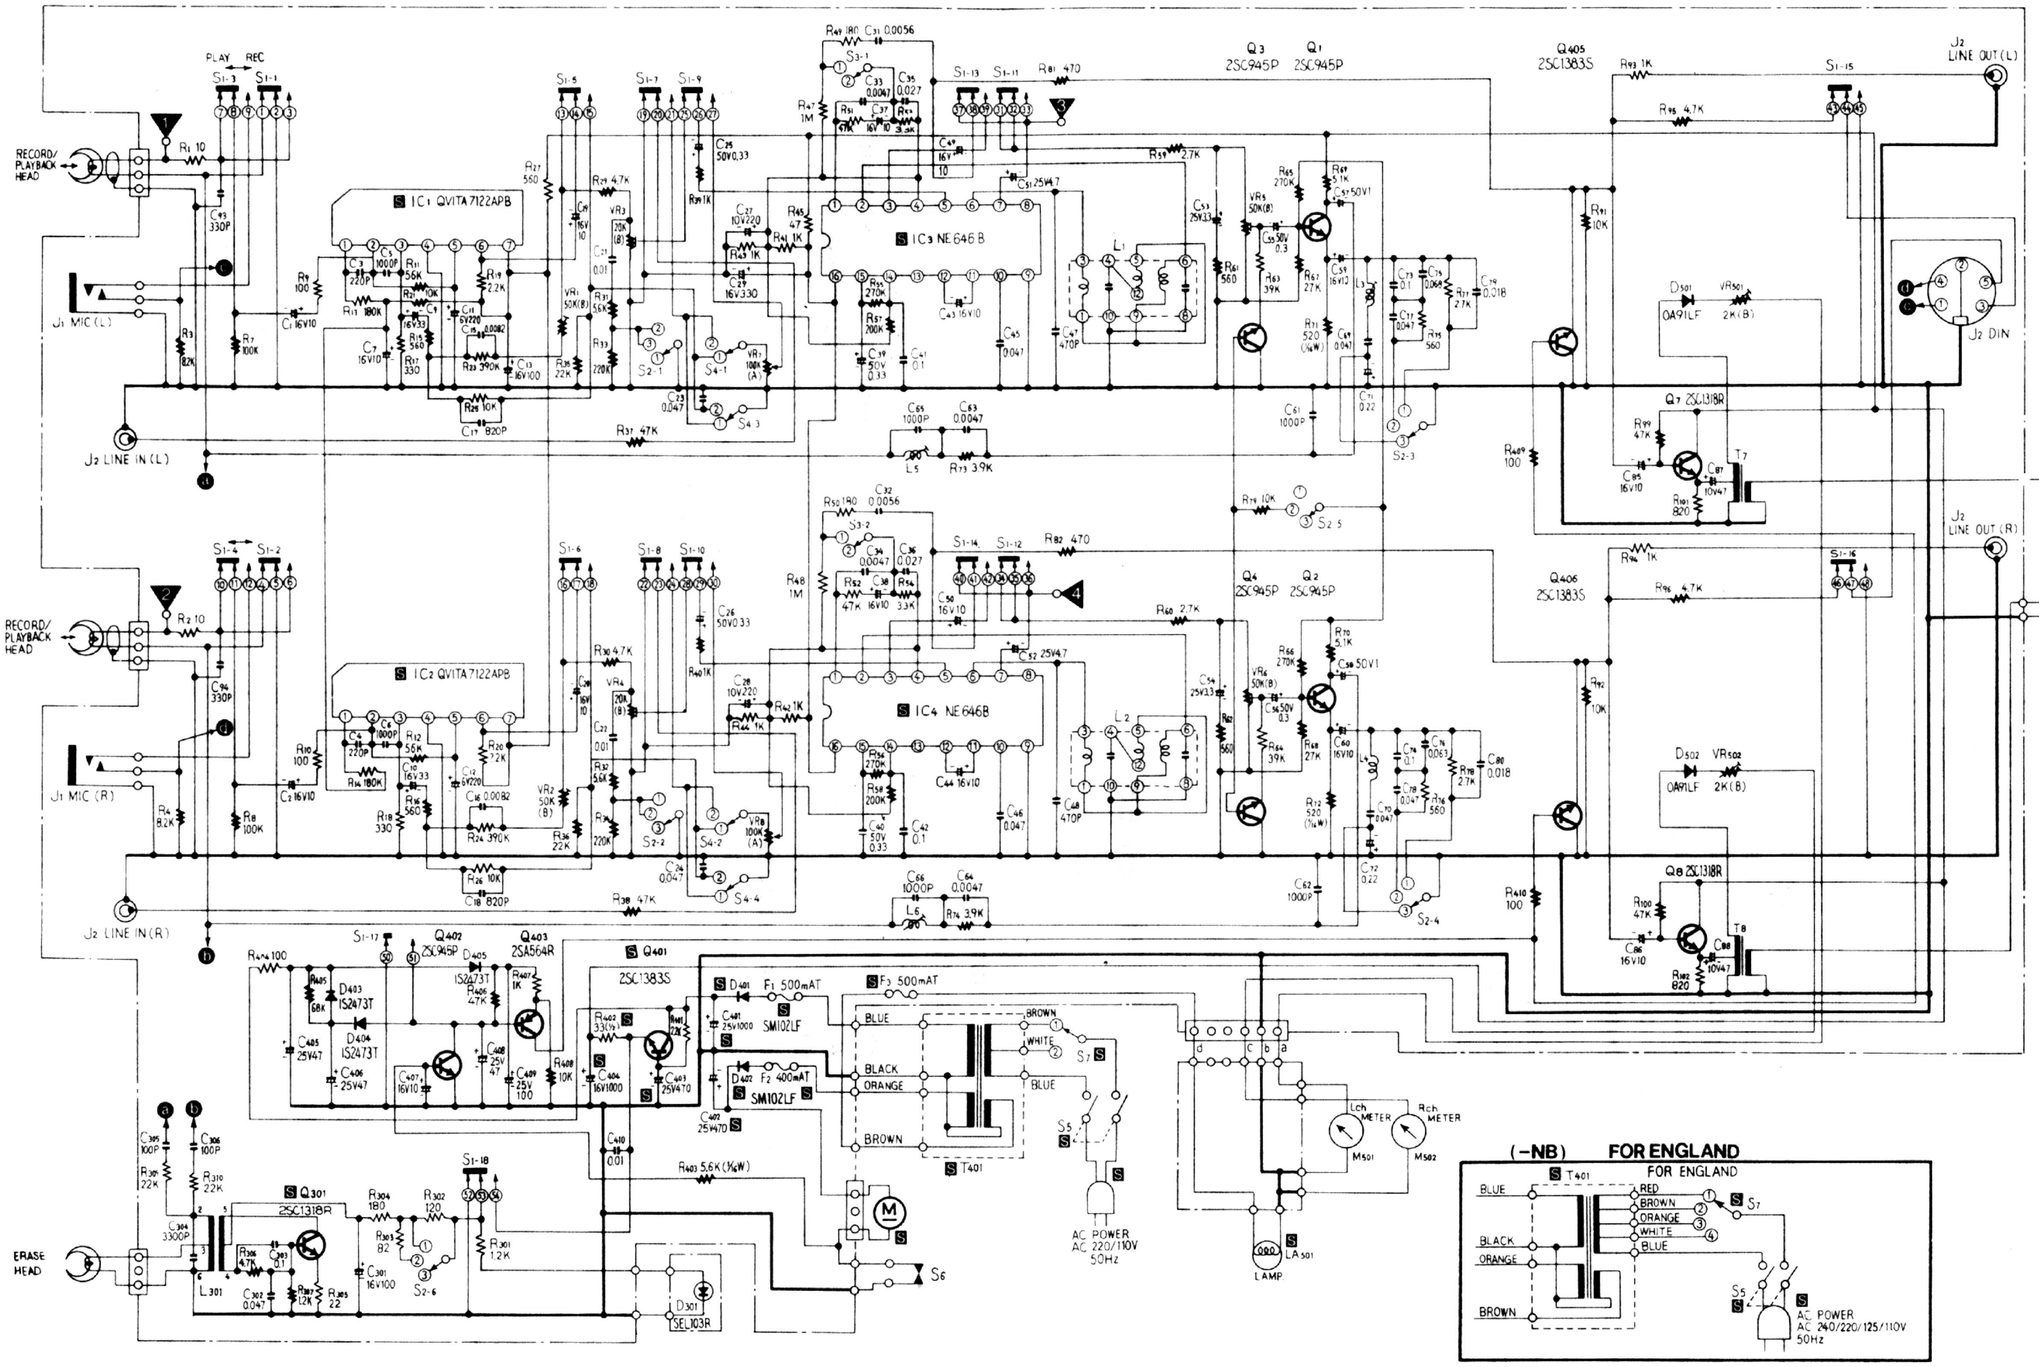

SWITCHES

1. S1-1~S1-18 : REC PB SW.(PB POS)
2. S2-1~S2-6 : EQ BIAS SELECT SW. (1.CrO_2 2.EX 3.NORMAL)
3. S3-1~S3-2 : DOLBY SW. (1.IN 2.OUT)
4. S4-1~S4-4 : IN PUT SELECT. (1.MIC 2.LINE)
5. S5 : POWER SW.(OFF POS)
6. S6 : MOTOR MUTING SW.
7. S7(-D) : VOLTAGE SELECT SW. (1.220V 2.110V)

S7(-NB) : VOLTAGE SELECT SW. (1.240V 2.220V 3.125V 4.110V)

- **S** indicates that only parts specified by used for replacement in critical circuits.
- This schematic diagram is subject to change.

Printed in Japan QQD0463