

CSD-A300

SERVICE MANUAL


Ver 1.0 2003. 06

*AEP Model
UK Model
E Model
Australian Model*



- Refer to page 27 for Waveforms.
- Refer to page 28 for Common Note on Schematic Diagrams.
- Refer to page 41 for IC Block Diagrams.


6-6. SCHEMATIC DIAGRAM — CD SECTION —

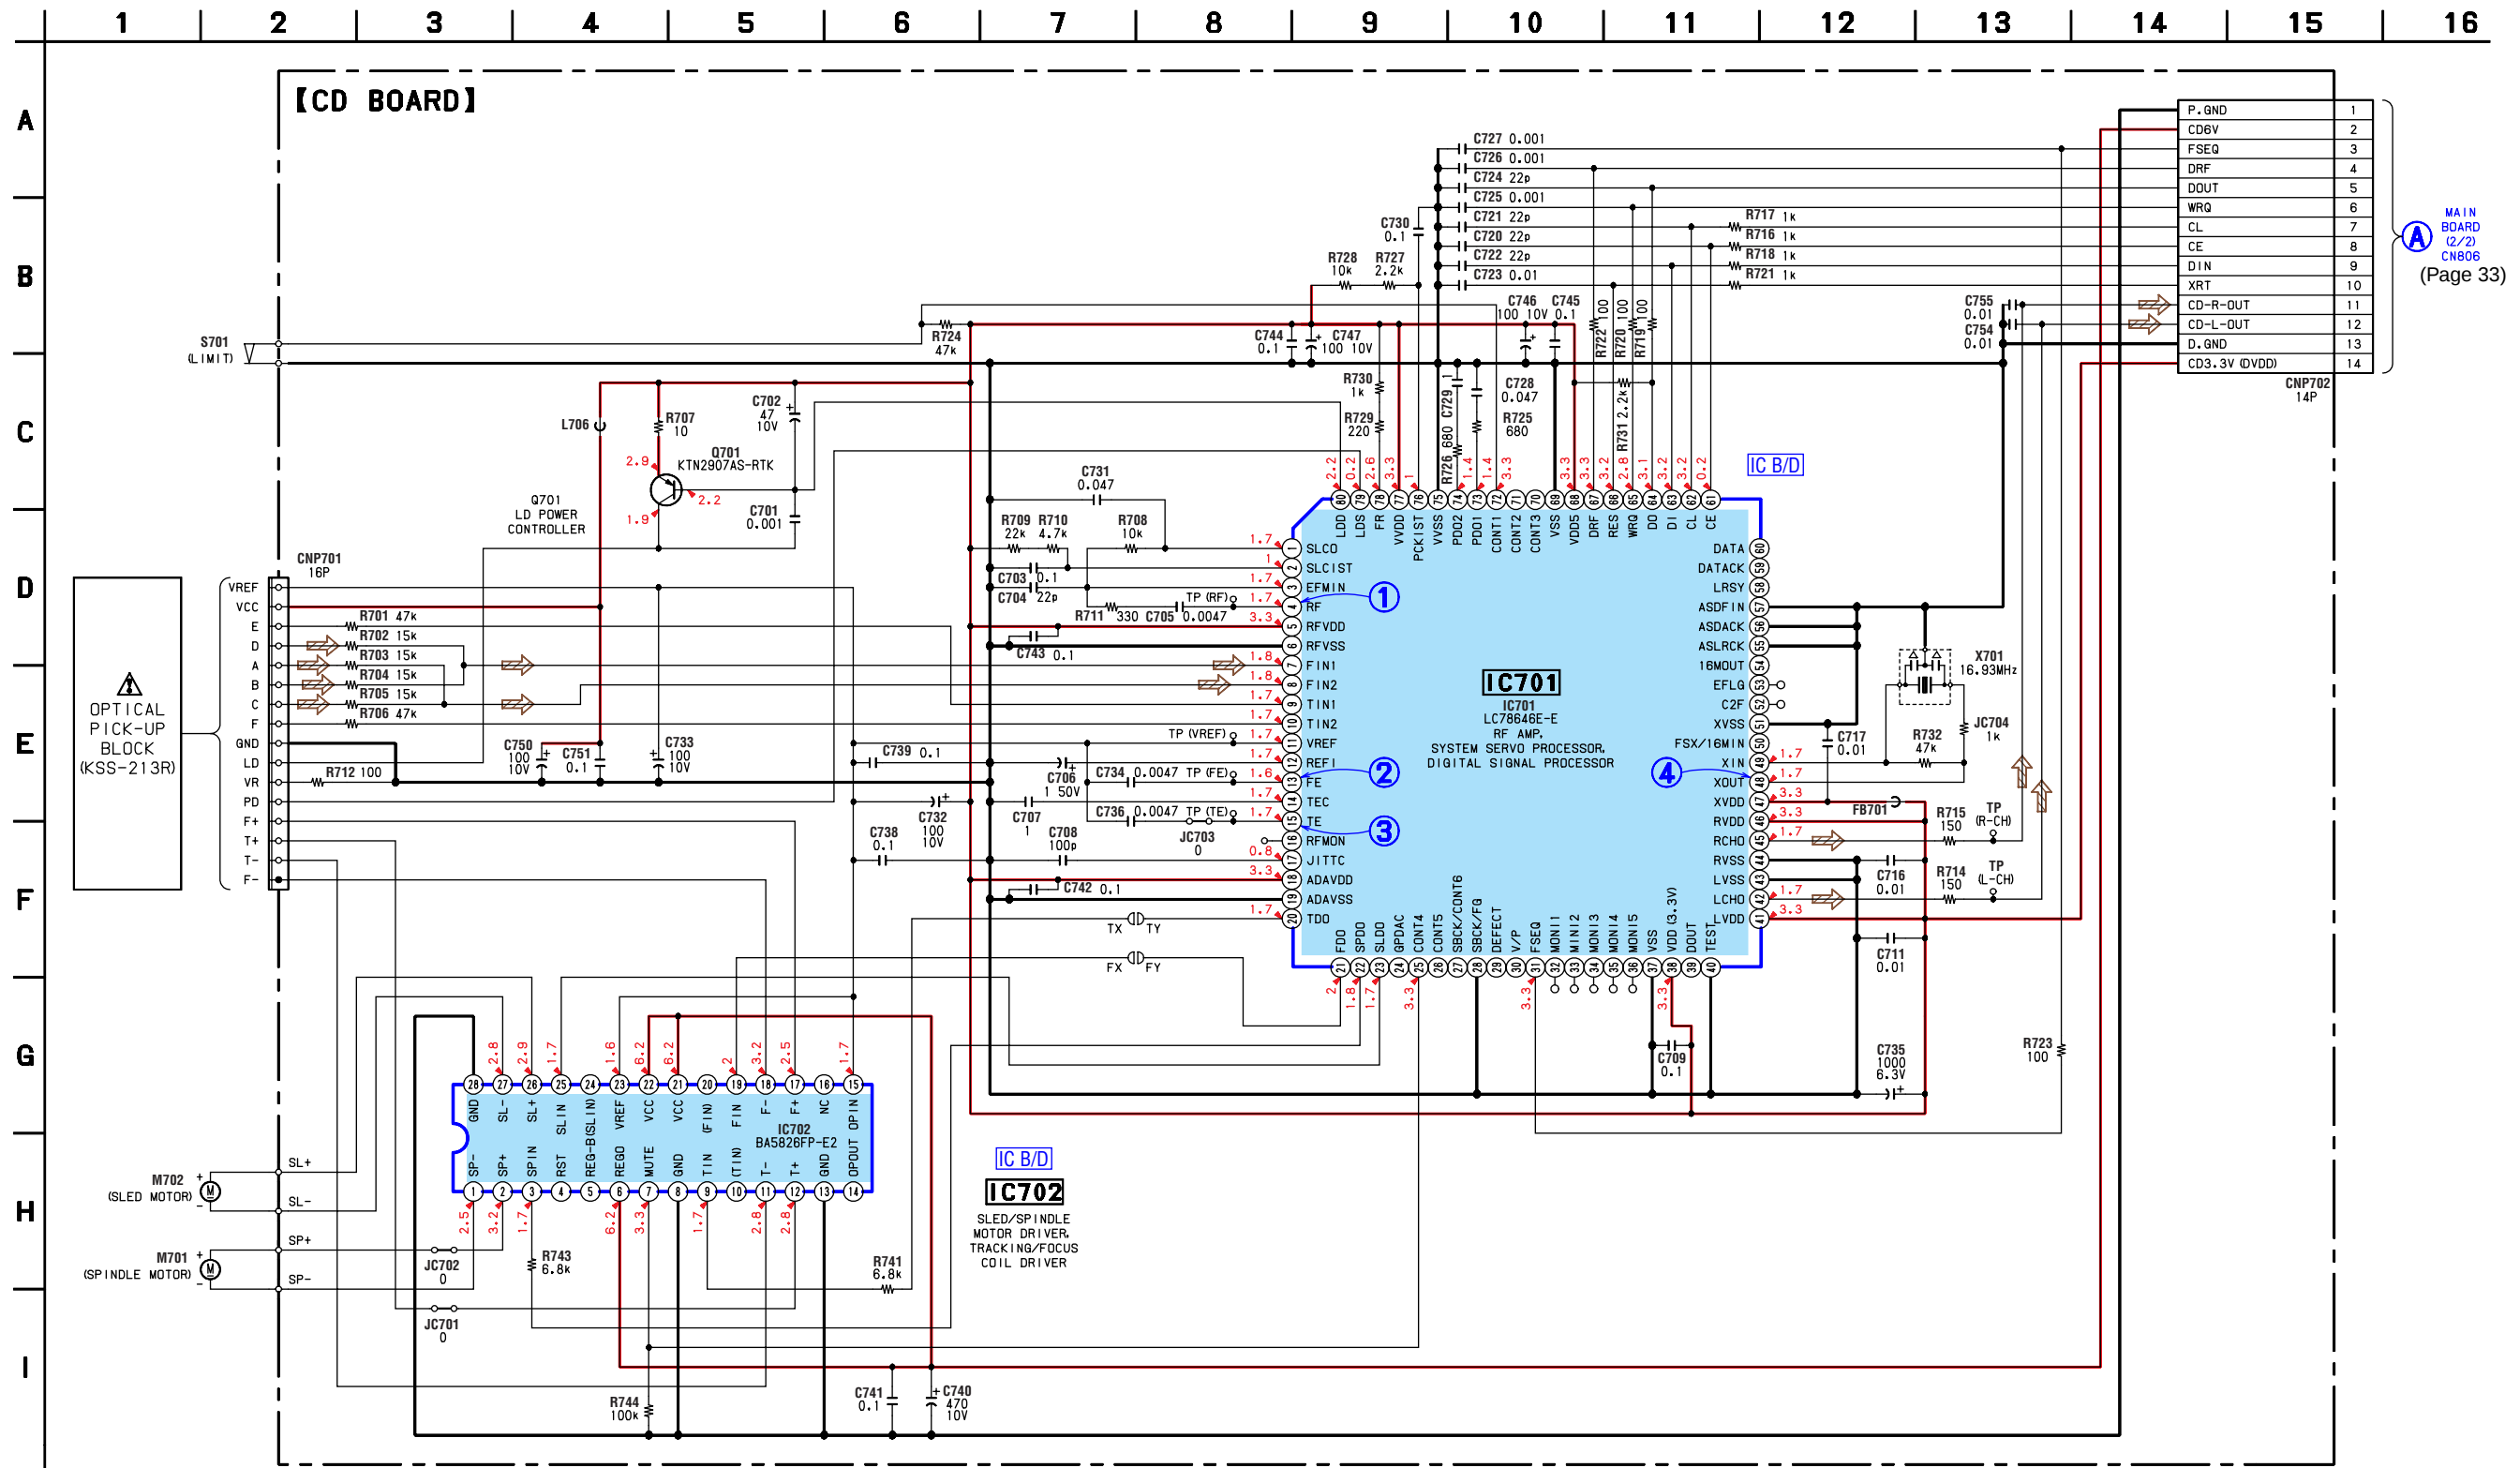

- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : CD PLAY

6-8. SCHEMATIC DIAGRAM — TUNER SECTION —

- Refer to page 27 for Waveforms.
- Refer to page 28 for Common Note on Schematic Diagrams.
- Refer to page 42 for IC Block Diagrams.

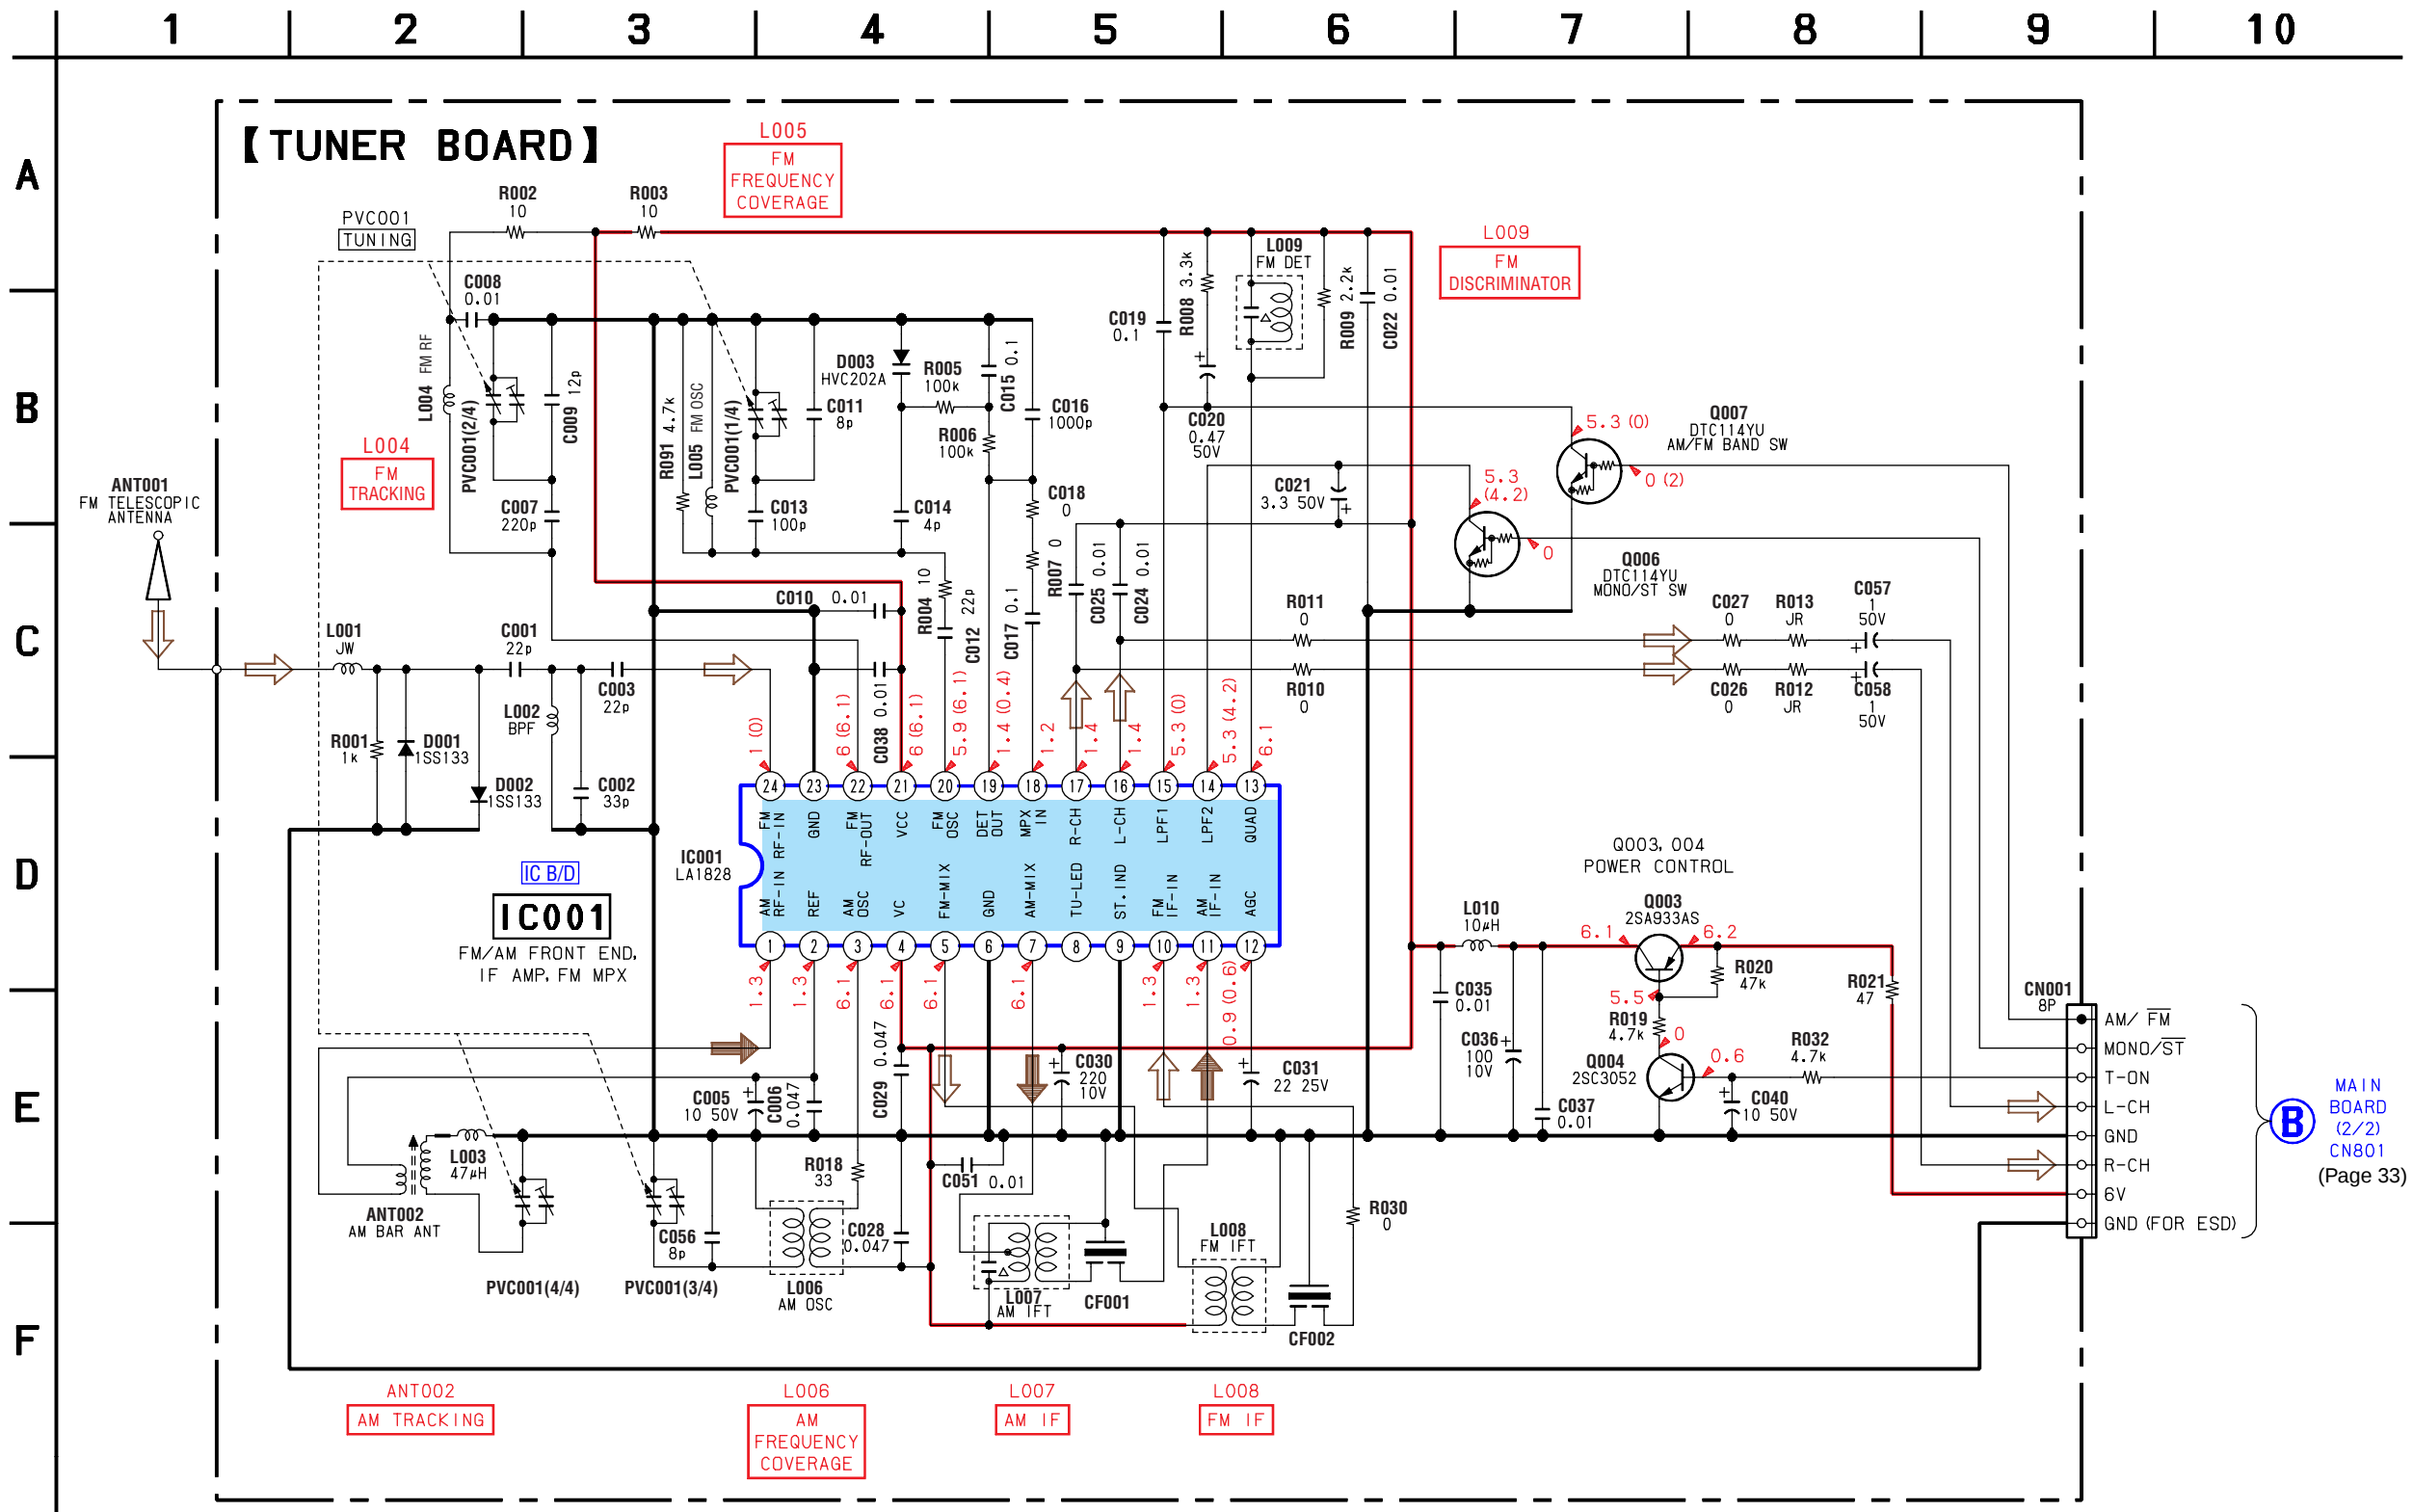


• Voltage and waveforms are dc with respect to ground
under no-signal (detuned) conditions.
no mark : FM
() : AM



6-10. SCHEMATIC DIAGRAM — MAIN SECTION (2/2)


- Refer to page 27 for Waveforms.

- Refer to page 28 for Common Note on Schematic Diagrams.

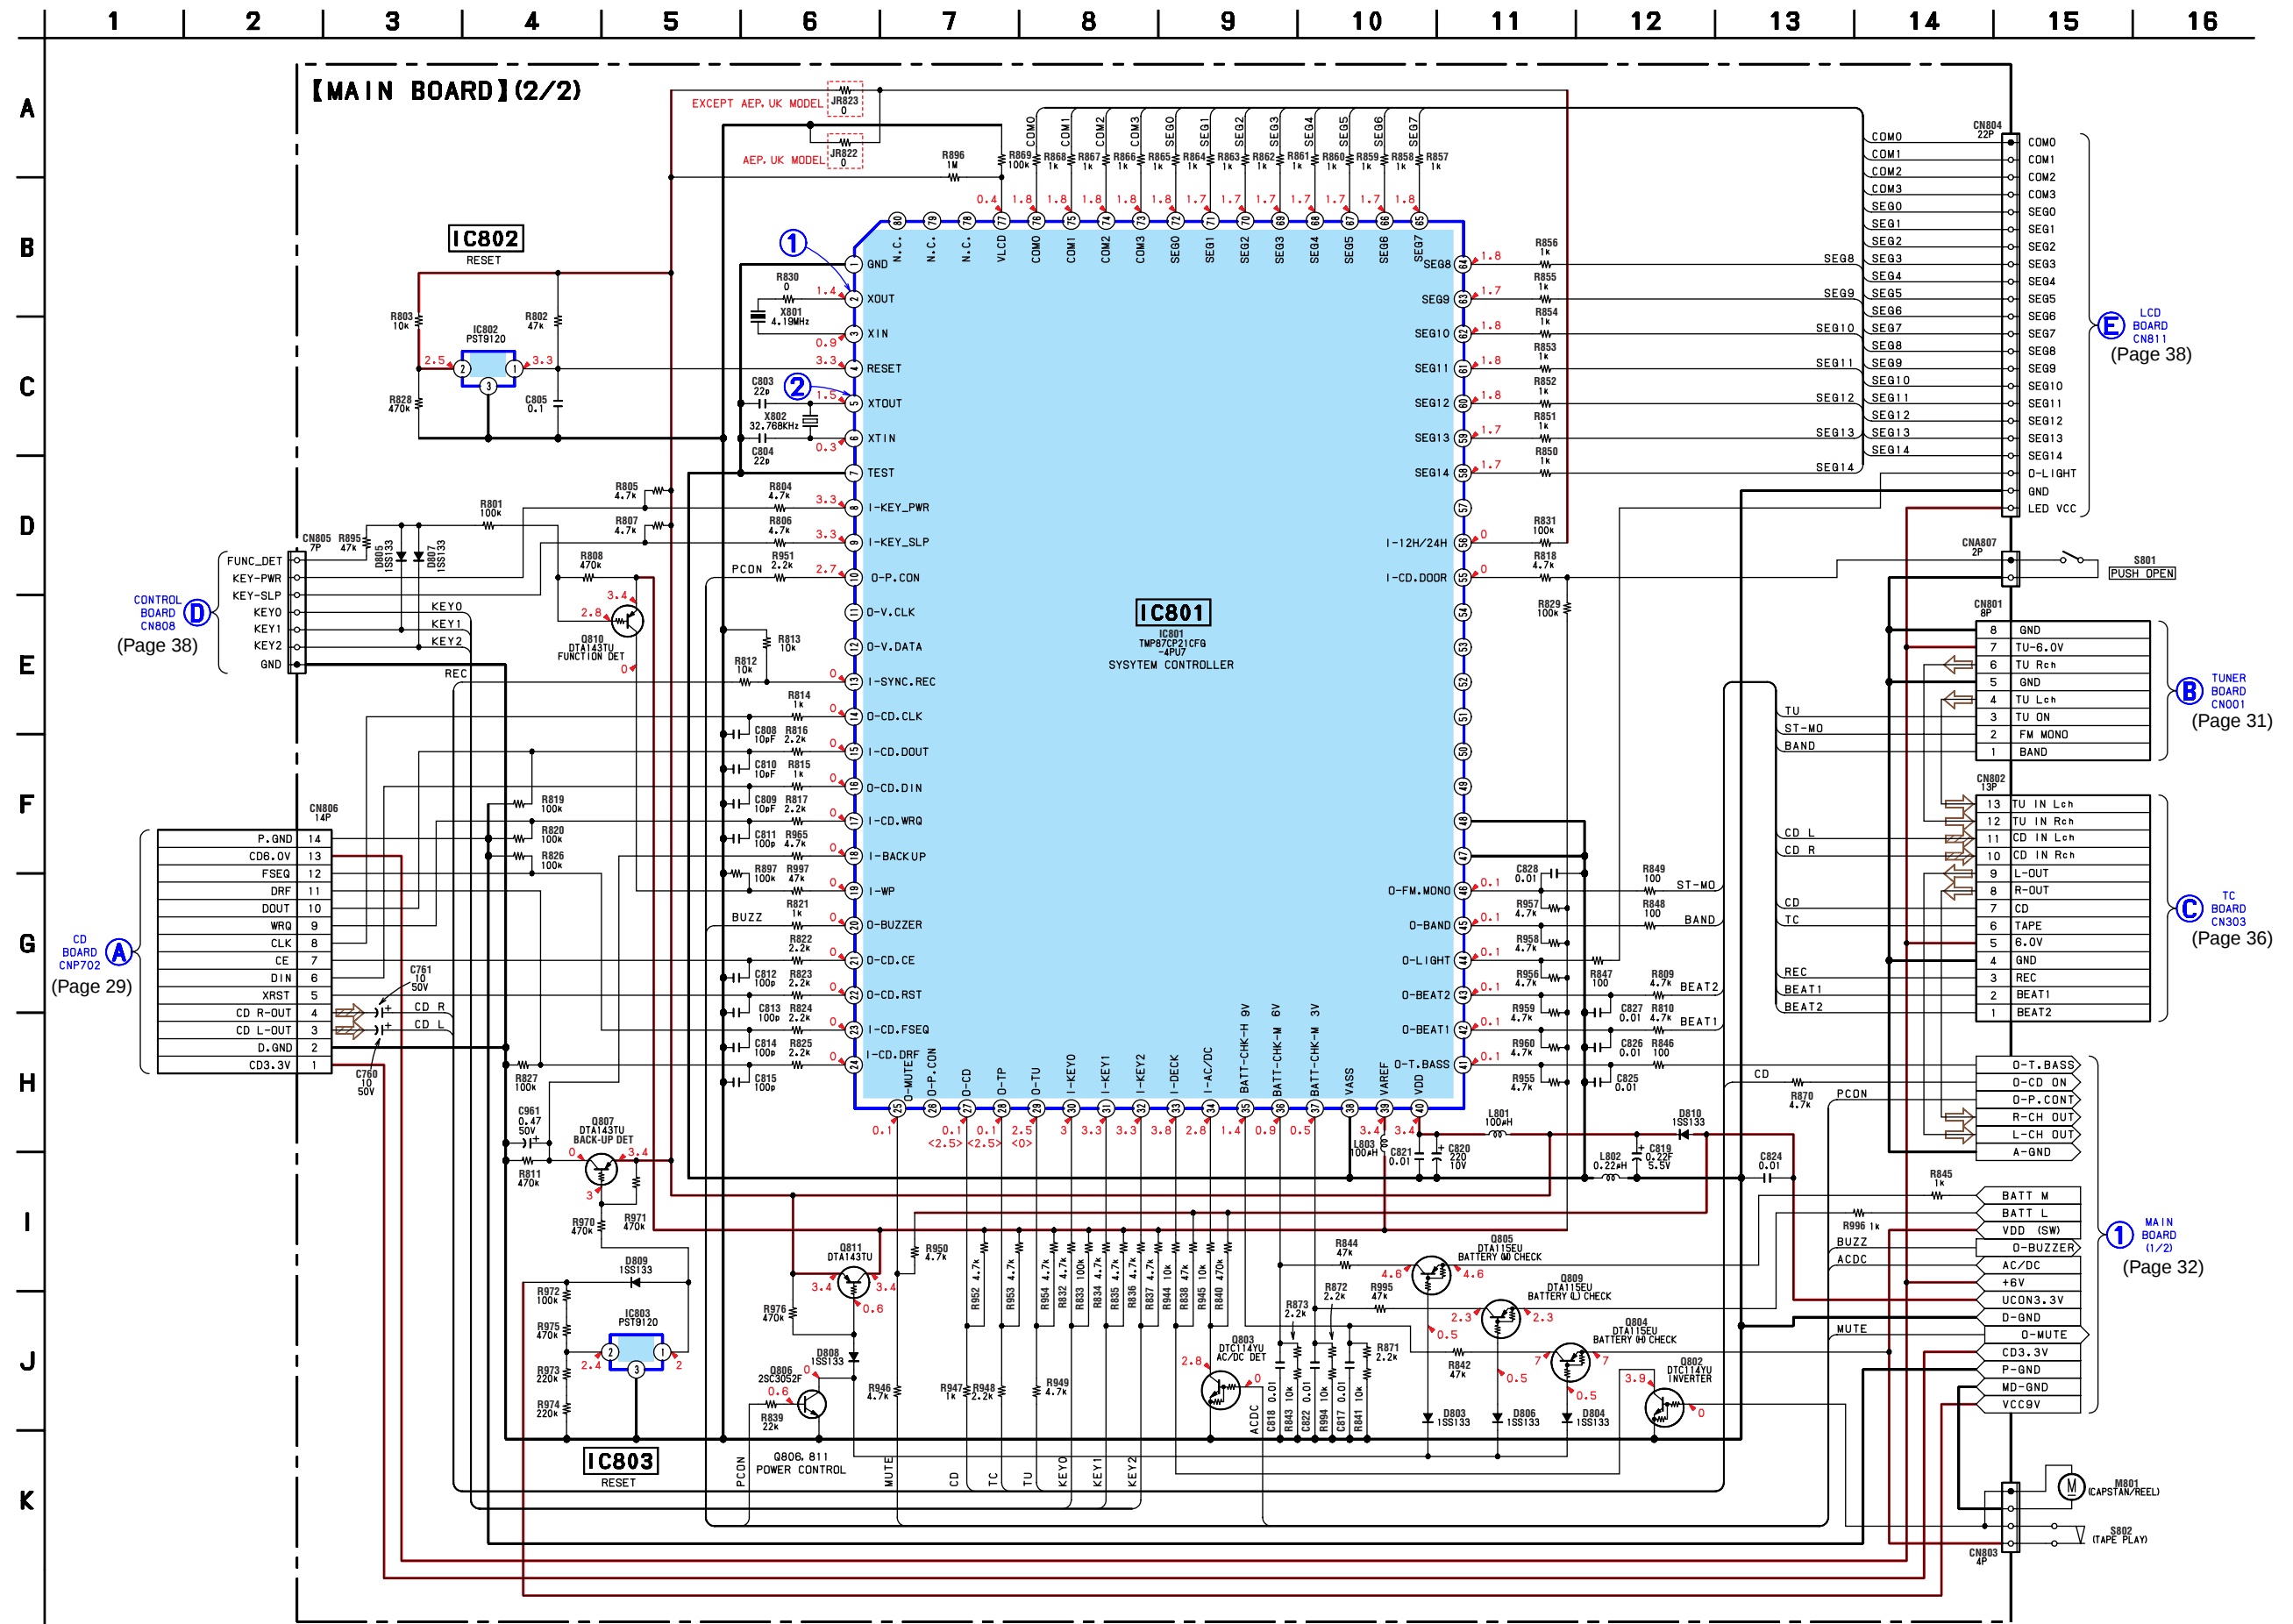


- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
 () : PB
 < > : CD PLAY

- Refer to page 43 for IC Block Diagrams.

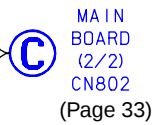

6-15. SCHEMATIC DIAGRAM — CONTROL SECTION — • Refer to page 28 for Common Note on Schematic Diagrams.

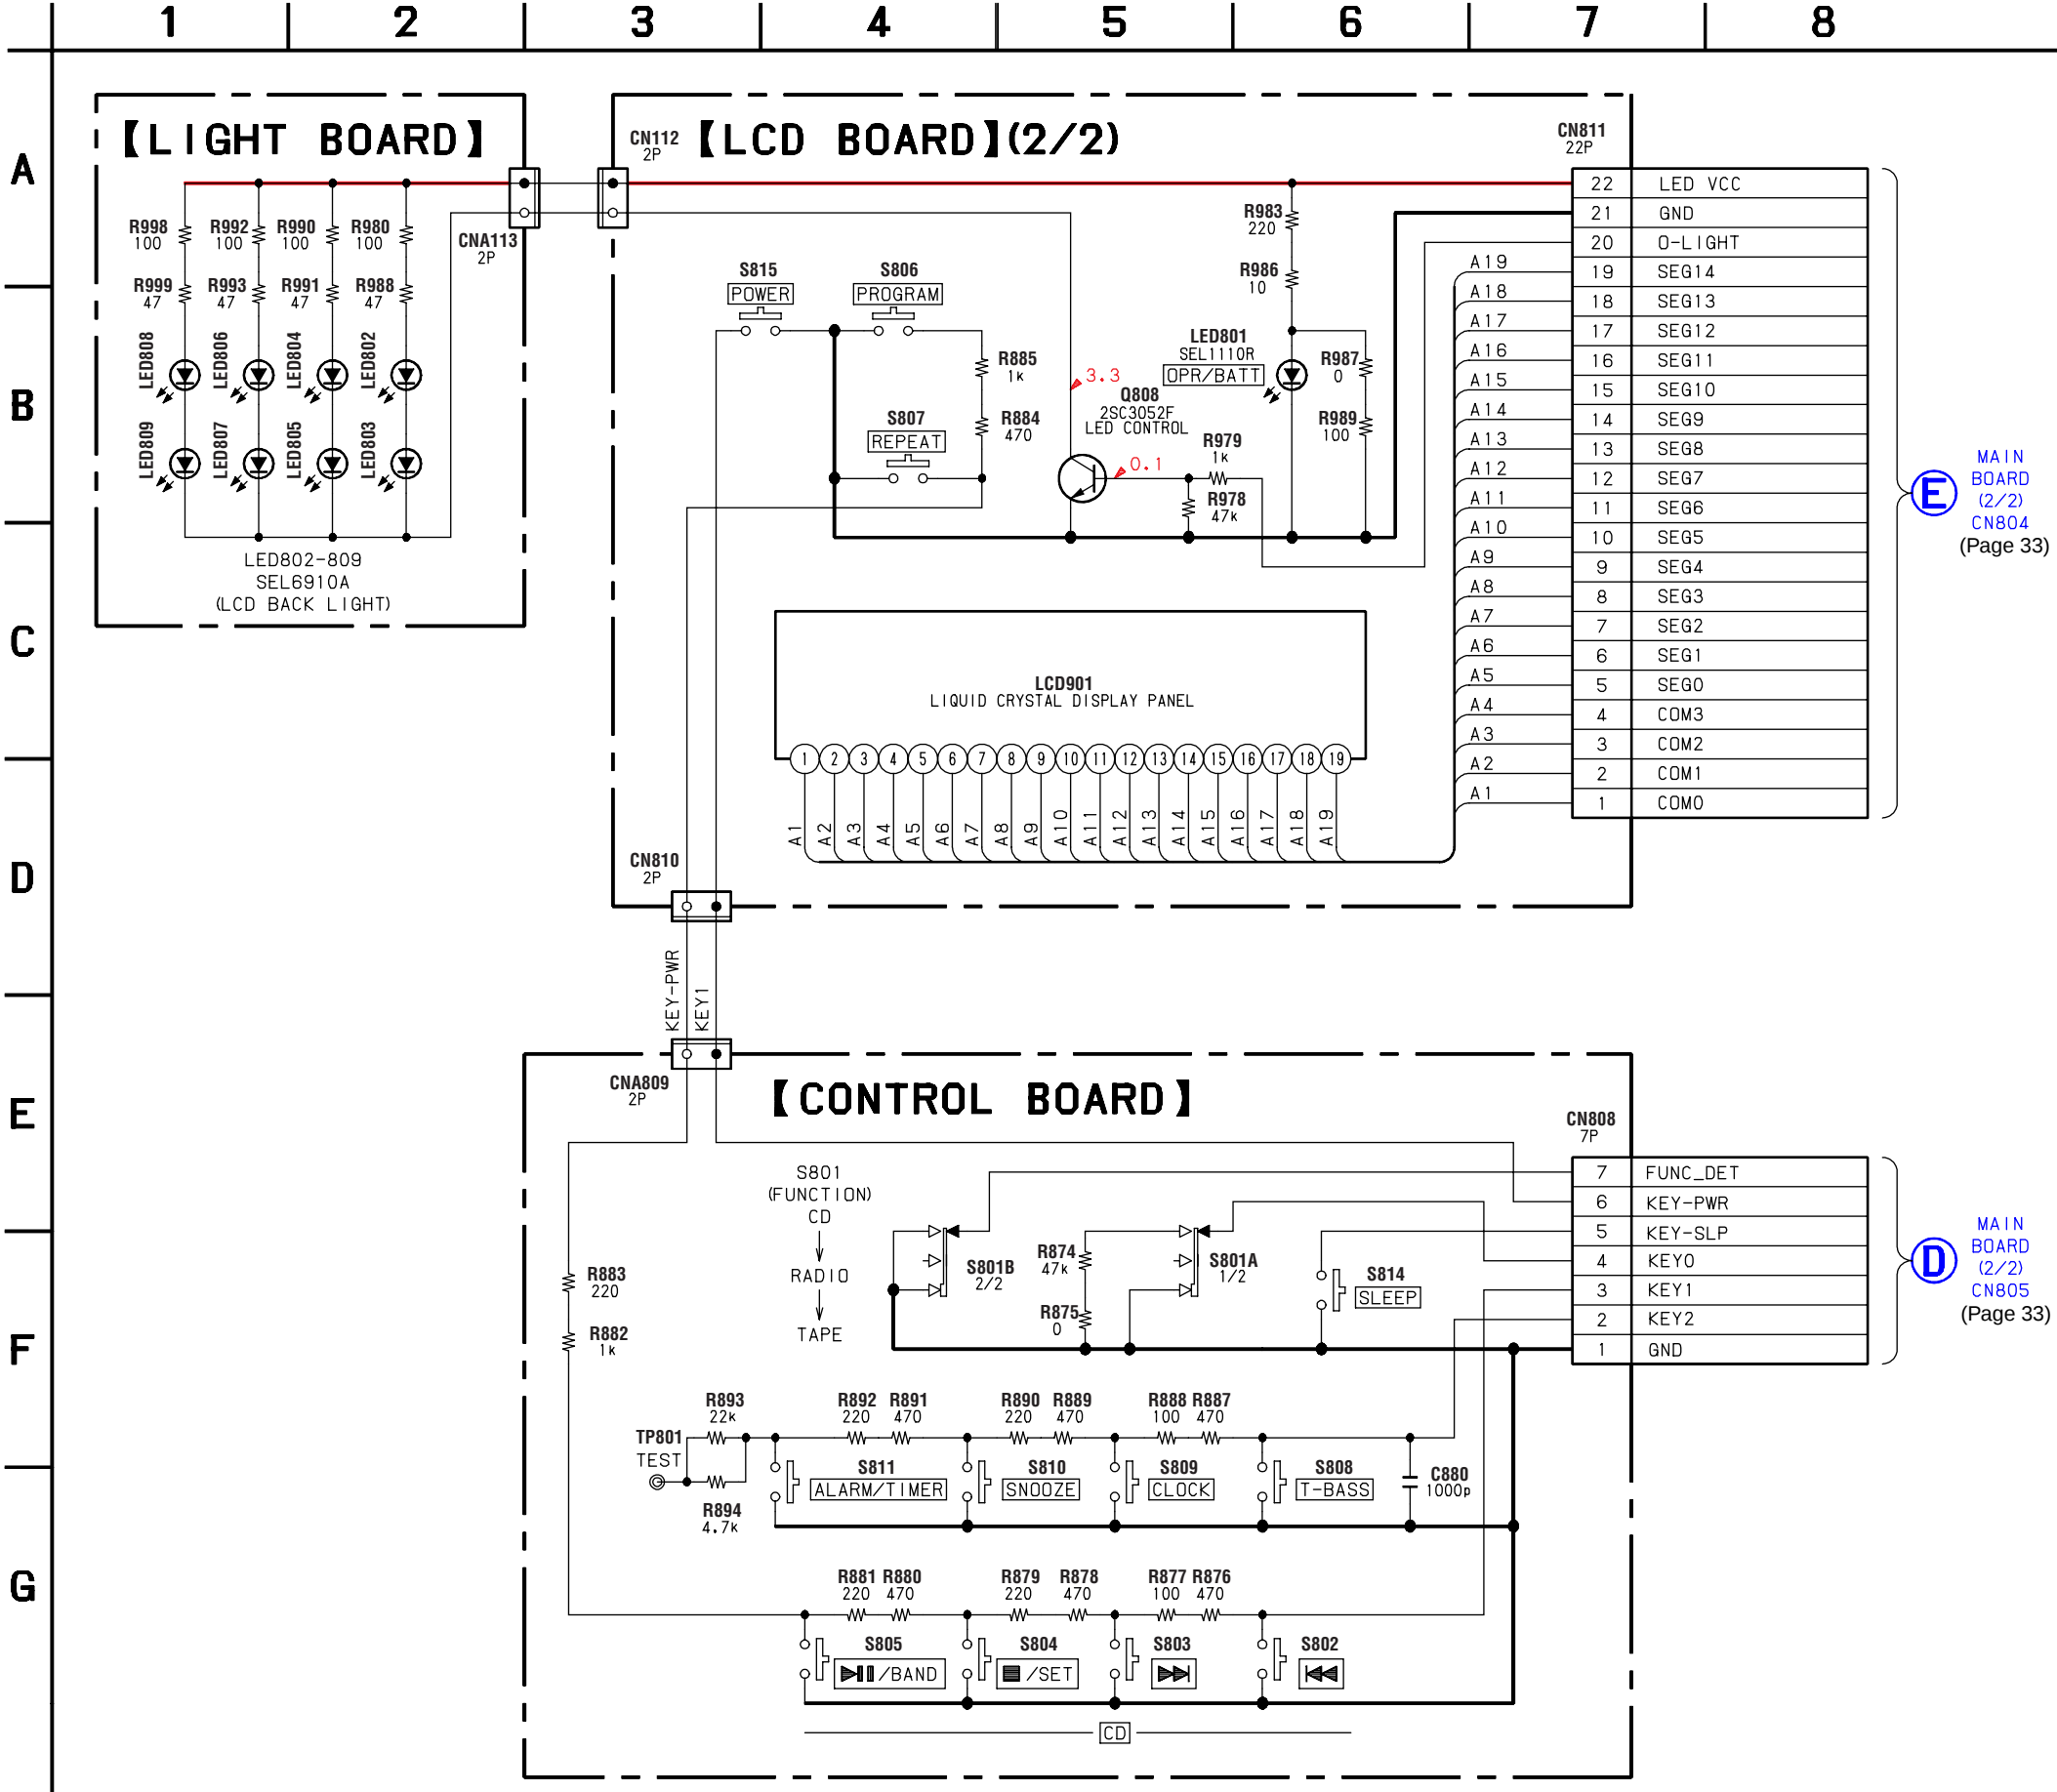

MAIN BOARD (2/2)
CN804
(Page 33)

MAIN BOARD (2/2)
CN805
(Page 33)

6-17. SCHEMATIC DIAGRAM — POWER SUPPLY SECTION — • Refer to page 28 for Common Note on Schematic Diagrams.

