



CSD-TD29

K(S),EZ(S),
EZ(L)

CSD-TD69

K(S),EZ(S)

SERVICE MANUAL

COMPACT DISC STEREO RADIO
CASSETTE RECEIVER

BASIC CD MECHANISM : KSM-213 RDM
BASIC TRAPE MECHANISM : AZM-6 YR3NC

Replace this Service Manual with "Revision Publishing" when it is issued.

aiwa

S/M Code No. 09-027-457-9T2

SIMPLE

DATA

ACCESSORIES PARTS LIST -1/1

!

= ⚠SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	!	C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD-TD29	CSD-TD29	CSD-TD29	CSD-TD69	CSD-TD69
						KSC	EZSC	EZLC	KSC	EZSC
			0	AS1001	87-099-726-010	PLUG,ADPTR CONV(K)	X	a	.	.
			0	AS1002	87-A80-081-010	AC CORD SET ASSY,EZ BLK	X	a	b	c
			0	AS1003	8C-CHE-951-010	RC UNIT,RC-CAT1	.	.	.	d
			X	AS1004	8C-CHA-971-010	LBL,POP U	a	b	c	.
			X	AS1005	8C-CHL-972-010	LBL,POP EZ	.	.	.	d
			X	AS1006	87-056-600-010	LBL,L K	a	.	.	d
			X	AS1007	87-056-926-010	LBL,COLOR L BLU	.	.	.	c
			X	AS1008	8C-CHA-851-010	CUSHION,ASSY CCHA	a	b	c	d
			X	AS1009	8C-CHA-857-010	CTN,PRINTED EZSC	a	b	c	.
			X	AS1010	8C-CHA-858-010	CTN,OUTER KSC	a	.	.	.
			X	AS1011	8C-CHA-859-010	CTN,OUTER EZSC	.	b	.	.
			X	AS1012	8C-CHA-866-010	CTN,OUTER EZLC	.	.	.	c
			X	AS1013	8C-CHL-856-010	CTN,PRINTED EZSC	.	.	.	d
			X	AS1014	8C-CHL-857-010	CTN,OUTER KSC	.	.	.	d
			X	AS1015	8C-CHL-858-010	CTN,OUTER EZSC	.	.	.	.
			X	AS1016	87-056-168-010	SH,CAUTION INF-WARR(EC)	a	b	c	d
			X	AS1017	87-B40-085-010	BAG,PV 0.04-200-350 PL	a	b	c	d
			X	AS1018	87-B50-079-010	LIST,FACILITY(B)-0007	a	b	c	d
			0	AS1019	8C-CHA-905-010	IB,K(E)FM TD29/69	a	.	.	d
			0	AS1020	8C-CHA-906-010	IB,EZ(9L)FM TD29/69	.	b	c	.

ELECTRICAL PARTS LIST -1/10

! = ⚠SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME		! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
CD		O	C	0401	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
CD		O	C	0402	87-A12-064-080	CAP,E 1000-10 SMG	a	b	c	d
CD		O	C	0404	87-012-172-080	C-CAP,U 10P-50 D CH GRM	a	b	c	d
CD		O	C	0405	87-012-169-080	C-CAP,U 7P-50 D CH GRM	a	b	c	d
CD		O	C	0407	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0408	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0409	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0410	87-010-260-080	CAP,E 47-25 M 11L SME	a	b	c	d
CD		O	C	0411	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0412	87-010-405-080	CAP,E 10-50 M 11L SME	a	b	c	d
CD		O	C	0413	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0414	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0415	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0416	87-010-403-080	CAP,E 3.3-50 M 11L SME	a	b	c	d
CD		O	C	0417	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0418	87-A10-504-080	C-CAP,U 0.047-16 K B	a	b	c	d
CD		O	C	0419	87-010-403-080	CAP,E 3.3-50 M 11L SME	a	b	c	d
CD		O	C	0420	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0421	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0422	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0423	87-A10-504-080	C-CAP,U 0.047-16 K B	a	b	c	d
CD		O	C	0424	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0425	87-012-188-080	C-CAP,U 47P-50 J CH GRM	a	b	c	d
CD		O	C	0426	87-012-282-080	C-CAP,U 4700P-50 K B GRM	a	b	c	d
CD		O	C	0427	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0428	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0429	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0430	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0431	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0432	87-010-405-080	CAP,E 10-50 M 11L SME	a	b	c	d
CD		O	C	0433	87-010-545-080	CAP,E 0.22-50 M 11L SME	a	b	c	d
CD		O	C	0434	87-012-188-080	C-CAP,U 47P-50 J CH GRM	a	b	c	d
CD		O	C	0435	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0436	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0437	87-010-405-080	CAP,E 10-50 M 11L SME	a	b	c	d
CD		O	C	0437	87-010-263-080	CAP,E 100-10 M 11L SME	.	.	.	d
CD		O	C	0438	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
CD		O	C	0439	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0440	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0441	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0442	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0443	87-A12-001-080	CAP,E 2200-10 M SMG	a	b	c	d
CD		O	C	0444	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0445	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a	b	c	d
CD		O	C	0446	87-A10-189-080	CAP,E 220-10 M	a	b	c	d
CD		O	C	0451	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
CD		O	C	0452	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
CD		O	C	0453	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
CD		O	C	0454	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
CD		O	C	0455	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
CD		O	C	0456	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a	b	c	d
CD		O	C	0457	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
CD		O	C	0458	87-010-405-080	CAP,E 10-50 M 11L SME	a	b	c	d
CD		O	C	0459	87-010-405-080	CAP,E 10-50 M 11L SME	a	b	c	d
CD		O	C	0462	87-A10-189-080	CAP,E 220-10 M	a	b	c	d
CD		O	C	0470	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
CD		O	C	0476	87-012-278-080	C-CAP,U 2200P-50 K B GRM	a	b	c	d
CD		O	C	0496	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
CD		!	O	CN	0401	87-A60-424-010	CONN,16P V TOC-B	a	b	c
CD		O	CN	0402	87-A60-619-010	CONN,2P V 2MM JMT	a	b	c	d
CD		O	CNA	0401	8C-CHA-636-010	CONN ASSY,6P CD-CDMECHA	a	b	c	d
CD		S	D	0401	87-020-465-080	DIODE,1SS133	a	b	c	d
CD		S	D	0403	87-A40-743-080	ZENER,UZ4.3BSA	a	b	c	d
CD		S	D	0404	87-A40-747-080	ZENER,UZ5.1BSB	a	b	c	d
CD		O	FB	0401	87-A90-896-080	F-BEAD, 035600STY7	a	b	c	d
CD		O	FB	0402	87-A90-896-080	F-BEAD, 035600STY7	a	b	c	d
CD		S	IC	0401	87-A22-242-030	C-IC,LC78646E	a	b	c	d
CD		S	IC	0402	87-A22-115-010	C-IC,MM1469PH	a	b	c	d
CD		S	Q	0401	89-112-965-080	TR,2SA1296GR	a	b	c	d
CD		S	Q	0402	87-026-215-080	TR,DTC114YS	a	b	c	d
CD		S	Q	0407	87-026-610-080	TR,KTC3198GR	a	b	c	d
CD		S	Q	0408	87-026-609-080	TR,KTA1266GR	a	b	c	d
CD		S	Q	0409	87-026-609-080	TR,KTA1266GR	a	b	c	d
CD		S	Q	0498	87-A30-432-040	C-TR,DTC124XKA	a	b	c	d
CD		S	Q	0499	87-A30-432-040	C-TR,DTC124XKA	a	b	c	d
CD		O	R	0401	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
CD		O	R	0402	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
CD		X	R	0403	88-108-331-080	C-RES,U 330-1/16W J	a	b	c	d
CD		X	R	0416	88-108-221-080	C-RES,U 220-1/16W J	a	b	c	d
CD		X	R	0417	88-118-470-080	C-RES,S 47-1/10W J	a	b	c	d

ELECTRICAL PARTS LIST -2/10

!

= ⚠SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME		! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
CD		X R	0418	88-118-100-080	C-RES, S 10-1/10W J	a	b	c	d	e
CD		X R	0419	88-118-101-080	C-RES, S 100-1/10W J	a	b	c	d	e
CD		X R	0420	88-118-152-080	C-RES, S 1.5K-1/10W J	a	b	c	d	e
CD		X R	0421	88-118-152-080	C-RES, S 1.5K-1/10W J	a	b	c	d	e
CD		X R	0422	88-118-102-080	C-RES, S 1K-1/10W J	a	b	c	d	e
CD		O R	0423	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
CD		O R	0424	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
CD		X R	0426	88-118-152-080	C-RES, S 1.5K-1/10W J	a	b	c	d	e
CD		X R	0427	88-118-152-080	C-RES, S 1.5K-1/10W J	a	b	c	d	e
CD		X R	0428	88-118-470-080	C-RES, S 47-1/10W J	a	b	c	d	e
CD		O R	0429	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
CD		O R	0430	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0431	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0432	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0433	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0434	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0435	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0436	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		X R	0437	88-108-681-080	C-RES, U 680-1/16W J	a	b	c	d	e
CD		X R	0438	88-108-681-080	C-RES, U 680-1/16W J	a	b	c	d	e
CD		O R	0439	88-108-123-080	C-RES, U 12K-1/16W J	a	b	c	d	e
CD		X R	0440	88-108-122-080	C-RES, U 1.2K-1/16W J	a	b	c	d	e
CD		O R	0441	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
CD		X R	0442	88-108-273-080	C-RES, U 27K-1/16W J	a	b	c	d	e
CD		X R	0443	88-108-331-080	C-RES, U 330-1/16W J	a	b	c	d	e
CD		O R	0449	88-108-473-080	C-RES, U 47K-1/16W J	a	b	c	d	e
CD		O R	0451	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
CD		X R	0452	88-108-339-080	C-RES, U 3.3-1/16W J	a	b	c	d	e
CD		X R	0453	88-108-333-080	C-RES, U 33K-1/16W J	a	b	c	d	e
CD		X R	0454	88-108-183-080	C-RES, U 18K-1/16W J	a	b	c	d	e
CD		X R	0455	88-108-183-080	C-RES, U 18K-1/16W J	a	b	c	d	e
CD		X R	0456	88-108-183-080	C-RES, U 18K-1/16W J	a	b	c	d	e
CD		X R	0457	88-108-183-080	C-RES, U 18K-1/16W J	a	b	c	d	e
CD		X R	0458	88-108-333-080	C-RES, U 33K-1/16W J	a	b	c	d	e
CD		X R	0459	88-108-181-080	C-RES, U 180-1/16W J	a	b	c	d	e
CD		O R	0463	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
CD		X R	0464	88-118-479-080	C-RES, S 4.7-1/10W J	a	b	c	d	e
CD		X R	0465	88-118-101-080	C-RES, S 100-1/10W J	a	b	c	d	e
CD		X R	0466	88-108-392-080	C-RES, U 3.9K-1/16W J	a	b	c	d	e
CD		O R	0470	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
CD		O R	0476	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0477	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0478	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0479	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0480	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0481	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
CD		O R	0497	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
CD		O R	0498	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
CD		O R	0499	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
CD		O X	0401	81-592-641-010	VIB, CER 16.93MHZ	a	b	c	d	e
DECK		O C	0501	87-010-831-080	C-CAP, U 0.1-16 Z F GRM	a	b	c	d	e
DECK		O C	0503	87-010-982-040	CAP, E 33-25 M 5L SRE	a	b	c	d	e
DECK		! O CN	0501	87-A60-080-010	CONN, 07P H 9604S-07F	a	b	c	d	e
DECK		S D	0501	87-070-345-080	DIODE, 1N4148	a	b	c	d	e
DECK		S D	0502	87-070-345-080	DIODE, 1N4148	a	b	c	d	e
DECK		S Q	0501	87-A30-427-040	C-TR, DTC114EKA	a	b	c	d	e
DECK		S Q	0502	89-112-965-080	TR, 2SA1296GR	a	b	c	d	e
DECK		S Q	0503	87-A30-273-040	C-TR, DTC124EKA	a	b	c	d	e
DECK		S Q	0504	89-109-521-080	TR, 2SA952K	a	b	c	d	e
DECK		X R	0501	88-108-122-080	C-RES, U 1.2K-1/16W J	a	b	c	d	e
DECK		O R	0502	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
DECK		O R	0503	88-108-223-080	C-RES, U 22K-1/16W J	a	b	c	d	e
DECK		X R	0504	88-108-222-080	C-RES, U 2.2K-1/16W J	a	b	c	d	e
DECK		X R	0505	88-108-683-080	C-RES, U 68K-1/16W J	a	b	c	d	e
DECK		X R	0506	88-108-154-080	C-RES, U 150K-1/16W J	a	b	c	d	e
DECK		O R	0508	88-108-153-080	C-RES, U 15K-1/16W J	a	b	c	d	e
ELECTRICAL		! O J	0101	87-A61-455-010	JACK, AC E PSE27	a	b	c	d	e
ELECTRICAL		! O PT	0701	8A-CDA-612-010	PT, E 2.5W	a	b	c	d	e
FUNC/BUFF		O C	0230	87-012-195-080	C-CAP, U 100P-50 J CH GRM	a	b	c	d	e
FUNC/BUFF		X C	0231	88-700-820-810	CAP, M 0.015-50 J AMZV	a	b	c	d	e
FUNC/BUFF		X C	0232	88-700-820-810	CAP, M 0.015-50 J AMZV	a	b	c	d	e
FUNC/BUFF		O C	0233	87-010-545-080	CAP, E 0.22-50 M 11L SME	a	b	c	d	e
FUNC/BUFF		O C	0234	87-010-545-080	CAP, E 0.22-50 M 11L SME	a	b	c	d	e
FUNC/BUFF		O C	0235	87-A10-260-080	C-CAP, U 0.1-16 K B	a	b	c	d	e
FUNC/BUFF		O C	0236	87-A10-260-080	C-CAP, U 0.1-16 K B	a	b	c	d	e
FUNC/BUFF		O C	0237	87-010-370-080	CAP, E 330-6.3 M SME	a	b	c	d	e
FUNC/BUFF		O C	0238	87-010-375-080	CAP, E 330-10 M 11L SME	a	b	c	d	e
FUNC/BUFF		O C	0241	87-010-400-080	CAP, E 0.47-50 M 11L SME	a	b	c	d	e
FUNC/BUFF		O C	0242	87-010-400-080	CAP, E 0.47-50 M 11L SME	a	b	c	d	e
FUNC/BUFF		O C	0243	87-010-400-080	CAP, E 0.47-50 M 11L SME	a	b	c	d	e

ELECTRICAL PARTS LIST -3/10

! = ⚠ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME		! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
FUNC/BUFF		O	C	0244	87-010-400-080	CAP,E 0.47-50 M 11L SME	a	b	c	d
FUNC/BUFF		O	C	0289	87-012-199-080	C-CAP,U 220P-50 J CH GRM	a	b	c	d
FUNC/BUFF		O	C	0290	87-012-199-080	C-CAP,U 220P-50 J CH GRM	a	b	c	d
FUNC/BUFF		O	C	0305	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
FUNC/BUFF		O	C	0306	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
FUNC/BUFF		O	C	0307	87-012-285-080	C-CAP,U 8200P-50 K B GRM	a	b	c	d
FUNC/BUFF		O	C	0308	87-012-285-080	C-CAP,U 8200P-50 K B GRM	a	b	c	d
FUNC/BUFF		O	C	0311	87-010-546-080	CAP,E 0.33-50 M 11L SME	a	b	c	d
FUNC/BUFF		O	C	0312	87-010-546-080	CAP,E 0.33-50 M 11L SME	a	b	c	d
FUNC/BUFF		O	C	0313	87-012-283-080	C-CAP,U 5600P-50 K B GRM	a	b	c	d
FUNC/BUFF		O	C	0314	87-012-283-080	C-CAP,U 5600P-50 K B GRM	a	b	c	d
FUNC/BUFF		O	C	0323	87-012-271-080	C-CAP,U 560P-50 K B GRM	a	b	c	d
FUNC/BUFF		O	C	0324	87-012-271-080	C-CAP,U 560P-50 K B GRM	a	b	c	d
FUNC/BUFF		O	C	0357	87-010-784-080	C-CAP,U 0.012-25 K B GRM	a	b	c	d
FUNC/BUFF		O	C	0358	87-010-784-080	C-CAP,U 0.012-25 K B GRM	a	b	c	d
FUNC/BUFF		O	C	0363	87-010-405-080	CAP,E 10-50 M 11L SME	a	b	c	d
FUNC/BUFF		O	C	0364	87-010-405-080	CAP,E 10-50 M 11L SME	a	b	c	d
FUNC/BUFF		O	C	0367	87-012-196-080	C-CAP,U 120P-50 J CH GRM	a	b	c	d
FUNC/BUFF		O	C	0368	87-012-196-080	C-CAP,U 120P-50 J CH GRM	a	b	c	d
FUNC/BUFF		S	IC	0203	87-A22-236-040	C-IC,BD3881FV	a	b	c	d
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
FUNC/BUFF		X	L	0301	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d
FUNC/BUFF		X	R	0206	88-121-101-080	RES,100-1/8W J	a	b	c	d
FUNC/BUFF		X	R	0207	88-121-101-080	RES,100-1/8W J	a	b	c	d
FUNC/BUFF		X	R	0231	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0232	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0233	88-121-271-080	RES,270-1/8W J	a	b	c	d
FUNC/BUFF		O	R	0235	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0236	88-108-000-080	C-JUMPER,U	a	b	c	d
FUNC/BUFF		X	R	0237	88-121-271-080	RES,270-1/8W J	a	b	c	d
FUNC/BUFF		O	R	0241	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
FUNC/BUFF		O	R	0242	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
FUNC/BUFF		O	R	0243	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
FUNC/BUFF		O	R	0244	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0281	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0282	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/BUFF		O	R	0285	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
FUNC/BUFF		O	R	0286	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0289	88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0290	88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0291	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
FUNC/BUFF		X	R	0292	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0305	88-108-561-080	C-RES,U 560-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0306	88-108-561-080	C-RES,U 560-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0307	88-108-561-080	C-RES,U 560-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0308	88-108-561-080	C-RES,U 560-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0309	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0310	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0311	88-108-394-080	C-RES,U 390K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0312	88-108-394-080	C-RES,U 390K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0313	88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0314	88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0315	88-108-000-080	C-JUMPER,U	a	b	c	d
FUNC/BUFF		X	R	0316	88-108-000-080	C-JUMPER,U	a	b	c	d
FUNC/BUFF		X	R	0357	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0358	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0359	88-108-681-080	C-RES,U 680-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0360	88-108-681-080	C-RES,U 680-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0361	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0362	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d
FUNC/BUFF		O	R	0363	88-108-822-080	C-RES,U 8.2K-1/16W J	a	b	c	d
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
FUNC/BUFF		O	R	0364	88-108-822-080	C-RES,U 8.2K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0367	88-108-682-080	C-RES,U 6.8K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0368	88-108-682-080	C-RES,U 6.8K-1/16W J	a	b	c	d
FUNC/BUFF		X	R	0381	88-108-000-080	C-JUMPER,U	a	b	c	d
KEY/DISP		O	C	0603	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d
KEY/DISP		O	C	0604	87-A12-062-080	CAP,E 100-10 SMG	a	b	c	d
KEY/DISP		O	C	0605	87-010-405-080	CAP,E 10-50 M 11L SME	.	.	.	d
KEY/DISP		O	C	0606	87-012-274-080	C-CAP,U 1000P-50 K B GRM	.	.	.	d
KEY/DISP		S	D	0601	87-070-345-080	DIODE,1N4148	.	.	.	d
KEY/DISP		S	D	0602	87-001-936-080	ZENER,HZS7A3L	a	b	.	d
KEY/DISP		O	D	0603	8A-CDA-645-010	LED,6224-10ID RED	a	b	c	d
KEY/DISP		S	D	0604	87-070-345-080	DIODE,1N4148	.	.	.	d
KEY/DISP		S	D	0605	87-070-345-080	DIODE,1N4148	.	.	.	d
KEY/DISP		S	IC	0601	87-A21-245-010	IC,RPM693B-V4	.	.	.	d
KEY/DISP		O	LCD	0601	8C-CHA-622-010	LCD,CCHA	a	b	c	d
KEY/DISP		S	Q	0601	87-026-462-080	TR,2SC1740SRS	a	b	c	d
KEY/DISP		S	Q	0602	87-A30-432-040	C-TR,DTC124XKA	.	.	.	d
KEY/DISP		O	R	0601	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
KEY/DISP		O	R	0602	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
KEY/DISP		X	R	0603	88-108-821-080	C-RES,U 820-1/16W J	a	b	c	d

ELECTRICAL PARTS LIST -4/10

! = ⚠ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME		! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
KEY/DISP		O R	0604	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0605	88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0606	88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0607	88-108-152-080	C-RES,U 1.5K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0608	88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0609	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d	e
KEY/DISP		O R	0610	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	e
KEY/DISP		O R	0611	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0612	88-108-821-080	C-RES,U 820-1/16W J	a	b	c	d	e
KEY/DISP		O R	0613	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0614	88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0615	88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0616	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	e
KEY/DISP		X R	0617	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	e
KEY/DISP		O R	0618	88-108-103-080	C-RES,U 10K-1/16W J	.	.	.	d	e
KEY/DISP		O R	0619	88-108-103-080	C-RES,U 10K-1/16W J	.	.	.	d	e
KEY/DISP		O R	0620	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0621	88-108-392-080	C-RES,U 3.9K-1/16W J	a	b	c	d	e
KEY/DISP		O R	0622	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	e
KEY/DISP		X R	0623	88-108-152-080	C-RES,U 1.5K-1/16W J	a	b	c	d	e
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
KEY/DISP		X R	0624	88-108-221-080	C-RES,U 220-1/16W J	.	.	.	d	e
KEY/DISP		O S	0601	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0602	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0603	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0604	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0605	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0606	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0607	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0608	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0609	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0610	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0611	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0612	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0613	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0614	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
KEY/DISP		O S	0615	87-A91-704-080	SW,TACT EVQ 214 05R	a	b	c	d	e
MCOM POWER SUPPLY		O C	0151	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d	e
MCOM POWER SUPPLY		O C	0152	87-A12-063-080	CAP,E 220-10 SMG	a	b	c	d	e
MCOM POWER SUPPLY		O C	0153	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
MCOM POWER SUPPLY		S D	0151	87-001-731-080	ZENER,HZS6C2L	a	b	c	d	e
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
MCOM POWER SUPPLY		S Q	0151	87-A30-630-080	TR,2SC5343GL	a	b	c	d	e
MCOM POWER SUPPLY		X R	0151	88-121-220-080	RES,22-1/8W J	a	b	c	d	e
MCOM POWER SUPPLY		X R	0152	88-108-682-080	C-RES,U 6.8K-1/16W J	a	b	c	d	e
MICON		O C	0651	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
MICON		O C	0656	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
MICON		O C	0661	87-010-550-040	CAP,E 100-6.3 M 5L SRE	a	b	c	d	e
MICON		O C	0663	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e
MICON		O C	0664	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
MICON		O C	0665	87-A10-047-080	C-CAP,U 1-10 Z F	a	b	c	d	e
MICON		O C	0667	87-012-178-080	C-CAP,U 18P-50 J CH GRM	a	b	c	d	e
MICON		O C	0668	87-012-180-080	C-CAP,U 22P-50 J CH GRM	a	b	c	d	e
MICON		O C	0669	87-012-186-080	C-CAP,U 39P-50 J CH GRM	a	b	c	d	e
MICON		O C	0670	87-012-176-080	C-CAP,U 15P-50 J CH GRM	a	b	c	d	e
MICON		O C	0671	87-012-186-080	C-CAP,U 39P-50 J CH GRM	a	b	c	d	e
MICON		O C	0672	87-010-549-040	CAP,E 47-6.3 M 5L SRE	a	b	c	d	e
MICON		O C	0673	87-A10-189-040	CAP,E 220-10 M 5L	a	b	c	d	e
MICON		O C	0674	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e
MICON		O C	0675	87-A10-189-040	CAP,E 220-10 M 5L	a	b	c	d	e
MICON		O C	0676	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
MICON		O C	0677	87-A12-686-040	CAP,E 2.2-50 M 5L R85S5	a	b	c	d	e
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
MICON		O C	0678	87-A12-686-040	CAP,E 2.2-50 M 5L R85S5	a	b	c	d	e
MICON		O C	0679	87-A12-683-040	CAP,E 0.47-50 M 5L R85S5	a	b	c	d	e
MICON		O C	0684	87-018-134-080	CAP,TC U 0.01-16 N Y UP050	a	b	c	d	e
MICON	!	O CN	0601	87-099-755-010	CONN,14P H 9604	a	b	c	d	e
MICON	!	O CN	0602	87-099-755-010	CONN,14P H 9604	a	b	c	d	e
MICON		O CNA	0601	8C-CHA-635-010	CONN ASSY,4P FR-TUNER	a	b	c	d	e
MICON		S D	0652	87-070-345-080	DIODE,1N4148	a	b	c	d	e
MICON		S D	0656	87-017-148-080	ZENER,HZS6A1L	a	b	c	d	e
MICON		S D	0658	87-A40-530-080	DIODE,RB721Q-40	a	b	c	d	e
MICON		S D	0659	87-A40-530-080	DIODE,RB721Q-40	a	b	c	d	e
MICON		S D	0660	87-070-345-080	DIODE,1N4148	a	b	c	d	e
MICON		S D	0661	87-070-345-080	DIODE,1N4148	a	b	c	d	e
MICON		S IC	0651	8C-CHE-631-030	C-IC,LC867132V-5Z39	a	b	c	d	e
MICON		O L	0652	87-003-097-080	COIL,1.0UH K LAL02	a	b	c	d	e
MICON		X L	0653	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
MICON		S Q	0651	87-A30-432-040	C-TR,DTC124XKA	a	b	c	d	e
MICON		S Q	0652	87-A30-216-080	TR,2SA933AS(R)	a	b	c	d	e
MICON		S Q	0653	87-A30-432-040	C-TR,DTC124XKA	a	b	c	d	e
MICON		O R	0370	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d	e
MICON		O R	0627	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	e

ELECTRICAL PARTS LIST -5/10

! = ⚠SAFTY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME		! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
MICON		O R	0628	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
MICON		X R	0641	88-108-229-080	C-RES, U 2.2-1/16W J	a	b	c	d	e
MICON		X R	0642	88-108-229-080	C-RES, U 2.2-1/16W J	a	b	c	d	e
MICON		X R	0643	88-108-334-080	C-RES, U 330K-1/16W J	a	b	c	d	e
MICON		O R	0644	88-108-224-080	C-RES, U 220K-1/16W J	a	b	c	d	e
MICON		X R	0644	88-108-274-080	C-RES, U 270K-1/16W J	.	.	.	d	e
MICON		O R	0645	88-108-473-080	C-RES, U 47K-1/16W J	a	b	c	d	e
MICON		O R	0646	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
MICON		X R	0647	88-108-333-080	C-RES, U 33K-1/16W J	a	b	c	d	e
MICON		X R	0648	88-108-334-080	C-RES, U 330K-1/16W J	a	b	c	d	e
MICON		O R	0651	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0652	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0653	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0654	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0655	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0656	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0657	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0658	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0659	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0660	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
MICON		O R	0661	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0662	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0663	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0664	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0665	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0666	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		O R	0667	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
MICON		X R	0668	88-108-104-080	C-RES, U 100K-1/16W J	a	b	c	d	e
MICON		O R	0669	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0671	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0672	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0673	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0674	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0675	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0676	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0677	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0678	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0679	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0680	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0681	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
MICON		O R	0682	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0683	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0684	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0685	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0686	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		X R	0687	88-108-100-080	C-RES, U 10-1/16W J	a	b	c	d	e
MICON		X R	0688	88-108-104-080	C-RES, U 100K-1/16W J	a	b	c	d	e
MICON		O R	0689	88-108-332-080	C-RES, U 3.3K-1/16W J	a	b	c	d	e
MICON		X R	0690	88-108-152-080	C-RES, U 1.5K-1/16W J	a	b	c	d	e
MICON		O R	0691	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		X R	0692	88-108-100-080	C-RES, U 10-1/16W J	a	b	c	d	e
MICON		X R	0693	88-108-104-080	C-RES, U 100K-1/16W J	a	b	c	d	e
MICON		O R	0694	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		X R	0695	88-108-681-080	C-RES, U 680-1/16W J	a	b	c	d	e
MICON		O R	0696	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0697	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0698	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O R	0699	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
MICON		O X	0651	87-030-364-010	VIB, XTAL 32.768KHZ CFS-308 CT	a	b	c	d	e
MICON		O X	0652	87-A70-070-080	VIB, CER 5.76MHZ CRHF	a	b	c	d	e
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
OTHERS	!	O CN	0801	87-A60-054-010	CONN, 14P V 9604S-14C	a	b	c	d	e
OTHERS	!	O CN	0802	87-A60-054-010	CONN, 14P V 9604S-14C	a	b	c	d	e
OTHERS		O CNA	0220	88-805-062-010	CONN ASSY, 6P 200MM	.	.	.	d	e
POWER		O C	0901	87-018-205-080	CAP, TC U 0.022-25 Z F TP	a	b	c	d	e
POWER		O C	0902	87-018-205-080	CAP, TC U 0.022-25 Z F TP	a	b	c	d	e
POWER		O C	0903	87-018-205-080	CAP, TC U 0.022-25 Z F TP	a	b	c	d	e
POWER		O C	0904	87-018-205-080	CAP, TC U 0.022-25 Z F TP	a	b	c	d	e
POWER		O CNA	0901	8C-CHA-641-010	CONN ASSY, 3P POWER-MAIN	a	b	c	d	e
POWER		S D	0901	87-A40-465-090	DIODE, FR202	a	b	c	d	e
POWER		S D	0902	87-A40-465-090	DIODE, FR202	a	b	c	d	e
POWER		S D	0903	87-A40-465-090	DIODE, FR202	a	b	c	d	e
POWER		S D	0904	87-A40-465-090	DIODE, FR202	a	b	c	d	e
POWER		S D	0905	87-A40-465-090	DIODE, FR202	a	b	c	d	e
POWER		X F	0101	88-100-000-010	PLATING- JW, 0.58 SN95	a	b	c	d	e
POWER		O PR	0901	87-A91-940-080	PROTECTOR, 2.5A 20P 60V	a	b	c	d	e
POWER		X W	0002	8C-CHA-642-010	WIRE, RED POWER-AC	a	b	c	d	e
POWER		X W	0003	8C-CHA-643-010	WIRE, ORANGE POWER-AC	a	b	c	d	e
POWER		X W	0004	8C-CHA-644-010	WIRE, YELLOW POWER-AC	a	b	c	d	e
POWER AMP		X *		8A-CH4-603-010	HT-SINK, MAIN 2.5W	a	b	c	d	e
POWER AMP		X *		8A-CH4-602-010	HT-SINK, REG	a	b	c	.	.

ELECTRICAL PARTS LIST -6/10

! = ⚠ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME		! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
POWER AMP		O	C	0211	87-010-546-080	CAP,E 0.33-50 M 11L SME	a	b	c	d
POWER AMP		O	C	0212	87-010-546-080	CAP,E 0.33-50 M 11L SME	a	b	c	d
POWER AMP		O	C	0255	87-010-404-080	CAP,E 4.7-50 M 11L SME	a	b	c	d
POWER AMP		O	C	0263	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
POWER AMP		O	C	0264	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d
POWER AMP		O	C	0265	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
POWER AMP		O	C	0266	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
POWER AMP		O	C	0267	87-016-251-080	CAP,E 220-16 M SMG	a	b	c	d
POWER AMP		O	C	0268	87-016-251-080	CAP,E 220-16 M SMG	a	b	c	d
POWER AMP		O	C	0271	87-A12-068-080	CAP,E 470-16 SMG	a	b	c	d
POWER AMP		O	C	0272	87-A12-068-080	CAP,E 470-16 SMG	a	b	c	d
POWER AMP		O	C	0273	87-A11-012-080	CAP,M 0.15-50 J DE	a	b	c	d
POWER AMP		O	C	0274	87-A11-012-080	CAP,M 0.15-50 J DE	a	b	c	d
POWER AMP		O	C	0278	87-010-385-080	CAP,E 220-25 M SME	a	b	c	d
POWER AMP		O	C	0279	87-A12-068-080	CAP,E 470-16 SMG	a	b	c	d
POWER AMP		O	C	0280	87-010-385-080	CAP,E 220-25 M SME	.	.	.	d
POWER AMP		!	O	CN	0203	87-049-469-010	CONN,4P V WHT EH	a	b	c
POWER AMP		O	FR	0277	87-029-124-080	RES,FUSE 2.2-1/4W J	a	b	c	d
POWER AMP		O	FR	0278	87-029-124-080	RES,FUSE 2.2-1/4W J	a	b	c	d
POWER AMP		S	IC	0202	87-A21-193-010	IC,TA8227P	a	b	c	d
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
POWER AMP		O	J	0201	8C-NF8-680-010	JACK,CKX-3.5-25 ST W/O SW	a	b	c	d
POWER AMP		X	JR	0215	88-108-000-080	C-JUMPER,U	a	b	c	d
POWER AMP		X	JR	0216	88-108-000-080	C-JUMPER,U	a	b	c	d
POWER AMP		S	Q	0243	87-026-610-080	TR,KTC3198GR	a	b	c	d
POWER AMP		S	Q	0244	87-026-610-080	TR,KTC3198GR	a	b	c	d
POWER AMP		X	R	0219	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
POWER AMP		X	R	0220	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d
POWER AMP		X	R	0251	88-108-152-080	C-RES,U 1.5K-1/16W J	a	b	c	d
POWER AMP		X	R	0252	88-108-152-080	C-RES,U 1.5K-1/16W J	a	b	c	d
POWER AMP		X	R	0253	88-108-471-080	C-RES,U 470-1/16W J	a	b	c	d
POWER AMP		X	R	0254	88-108-471-080	C-RES,U 470-1/16W J	a	b	c	d
POWER AMP		O	R	0255	88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d
POWER AMP		X	R	0270	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d
POWER AMP		X	R	0271	88-121-223-080	RES,22K-1/8W J	a	b	c	d
POWER AMP		X	R	0272	88-121-223-080	RES,22K-1/8W J	a	b	c	d
POWER AMP		O	R	0274	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
POWER AMP		O	R	0275	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
POWER AMP		X	R	0283	88-121-181-080	RES,180-1/8W J	a	b	c	d
POWER AMP		X	R	0284	88-121-181-080	RES,180-1/8W J	a	b	c	d
POWER SUPPLY		O	C	0105	87-010-405-080	CAP,E 10-50 M 11L SME	a	b	c	d
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
POWER SUPPLY		O	C	0106	87-010-404-080	CAP,E 4.7-50 M 11L SME	a	b	c	d
POWER SUPPLY		O	C	0107	87-010-265-080	CAP,E 33-16 M 11L SME	a	b	c	d
POWER SUPPLY		O	C	0108	87-010-263-080	CAP,E 100-10 M 11L SME	a	b	c	d
POWER SUPPLY		O	C	0109	87-016-459-080	CAP,E 470-10 M SMG	a	b	c	d
POWER SUPPLY		O	C	0110	87-A12-777-090	CAP,E 3300-25 M 85 SKR	a	b	c	d
POWER SUPPLY		O	C	0111	87-010-401-080	CAP,E 1-50 M 11L SME	a	b	c	d
POWER SUPPLY		!	O	CN	0101	87-049-919-010	CONN,3P V WHT EH	a	b	c
POWER SUPPLY		O	CNA	0102	8C-CHA-639-010	CONN ASSY,7P MAIN-TU	a	b	c	d
POWER SUPPLY		S	D	0106	87-020-465-080	DIODE,1SS133	a	b	c	d
POWER SUPPLY		S	D	0107	87-020-465-080	DIODE,1SS133	a	b	c	d
POWER SUPPLY		S	D	0108	87-020-465-080	DIODE,1SS133	a	b	c	d
POWER SUPPLY		S	D	0109	87-020-465-080	DIODE,1SS133	a	b	c	d
POWER SUPPLY		S	D	0110	87-017-161-080	ZENER,HZS7C2L	a	b	c	d
POWER SUPPLY		O	L	0101	87-003-097-080	COIL,1.0UH K LAL02	a	b	c	d
POWER SUPPLY		S	Q	0101	89-213-702-010	TR,2SB1370E	a	b	c	d
POWER SUPPLY		S	Q	0102	87-A30-216-080	TR,2SA933AS(R)	a	b	c	d
POWER SUPPLY		S	Q	0103	87-A30-623-080	TR,DTC124XSA	a	b	c	d
POWER SUPPLY		S	Q	0104	89-213-702-010	TR,2SB1370E	a	b	c	d
POWER SUPPLY		S	Q	0105	87-026-462-080	TR,2SC1740SRS	a	b	c	d
POWER SUPPLY		X	R	0101	88-121-102-080	RES,1K-1/8W J	a	b	c	d
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
POWER SUPPLY		X	R	0102	88-108-474-080	C-RES,U 470K-1/16W J	a	b	c	d
POWER SUPPLY		X	R	0103	88-108-471-080	C-RES,U 470-1/16W J	a	b	c	d
POWER SUPPLY		O	R	0104	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d
POWER SUPPLY		X	R	0105	88-108-152-080	C-RES,U 1.5K-1/16W J	a	b	c	d
POWER SUPPLY		O	R	0106	88-108-101-080	C-RES,U 100-1/16W J	a	b	c	d
POWER SUPPLY		X	R	0107	88-108-471-080	C-RES,U 470-1/16W J	a	b	c	d
POWER SUPPLY		O	R	0109	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d
TAPE		O	C	0300	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	.
TAPE		O	C	0300	87-018-134-080	CAP,TC U 0.01-16 N Y UP050	.	.	.	d
TAPE		O	C	0301	87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d
TAPE		O	C	0302	87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d
TAPE		O	C	0321	87-018-205-080	CAP,TC U 0.022-25 Z F TP	a	b	c	d
TAPE		O	C	0331	87-018-126-080	CAP,TC U 390P-50 K B UP050	a	b	c	d
TAPE		O	C	0332	87-018-126-080	CAP,TC U 390P-50 K B UP050	a	b	c	d
TAPE		O	C	0333	87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d
TAPE		O	C	0334	87-012-278-080	C-CAP,U 2200P-50 K B GRM	a	b	c	d
TAPE		X	C	0335	88-700-730-810	CAP,M 5600P-50 J AMZV	a	b	c	d
TAPE		O	C	0336	87-018-134-080	CAP,TC U 0.01-16 N Y UP050	a	b	c	d
TAPE		O	C	0337	87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d
TAPE		O	C	0338	87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d

ELECTRICAL PARTS LIST -7/10

! = ⚠ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME		! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL					
						CSD- TD29 KSC	CSD- TD29 EZSC	CSD- TD29 EZLC	CSD- TD69 KSC	CSD- TD69 EZSC	
TAPE		O	C	0339	87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0340	87-A12-691-040	CAP, E 22-16 M 5L R85S5	a	b	c	d	e
TAPE		O	C	0342	87-012-266-080	C-CAP,U 220P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0343	87-012-284-080	C-CAP,U 6800P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0345	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0346	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0347	87-010-374-080	CAP, E 47-10 M 11L SME	a	b	c	d	e
TAPE		O	C	0348	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0350	87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0351	87-012-278-080	C-CAP,U 2200P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0352	87-012-284-080	C-CAP,U 6800P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0355	87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0356	87-012-279-080	C-CAP,U 2700P-50 K B GRM	a	b	c	d	e
TAPE		O	C	0387	87-012-266-080	C-CAP,U 220P-50 K B GRM	a	b	c	d	e
TAPE	!	O	CN	0302	87-099-832-010	CONN, 8P V S2M-8W	a	b	c	d	e
TAPE		X	JR	0347	88-108-000-080	C- JUMPER, U	a	b	c	d	e
TAPE		O	L	0331	87-007-342-010	COIL, OSC 85KHZ BIAS	a	b	c	d	e
TAPE		S	Q	0311	89-110-155-080	TR, 2SA1015GR	a	b	c	d	e
TAPE		S	Q	0312	89-110-155-080	TR, 2SA1015GR	a	b	c	d	e
TAPE		S	Q	0320	87-026-610-080	TR, KTC3198GR	a	b	c	d	e
TAPE		S	Q	0331	87-026-610-080	TR, KTC3198GR	a	b	c	d	e
TAPE		S	Q	0332	87-026-610-080	TR, KTC3198GR	a	b	c	d	e
TAPE		S	Q	0333	87-026-610-080	TR, KTC3198GR	a	b	c	d	e
TAPE		S	Q	0334	87-026-610-080	TR, KTC3198GR	a	b	c	d	e
TAPE		S	Q	0335	86-NFZ-664-040	C- TR, DTC143TKA	a	b	c	d	e
TAPE		S	Q	0336	87-A30-435-040	C- TR, DTC144EKA	a	b	c	d	e
TAPE		S	Q	0341	89-110-155-080	TR, 2SA1015GR	a	b	c	d	e
TAPE		S	Q	0342	89-110-155-080	TR, 2SA1015GR	a	b	c	d	e
TAPE		S	Q	0343	89-110-155-080	TR, 2SA1015GR	a	b	c	d	e
TAPE		S	Q	0344	87-A30-435-040	C- TR, DTC144EKA	a	b	c	d	e
TAPE		X	R	0301	88-108-334-080	C-RES, U 330K-1/16W J	a	b	c	d	e
TAPE		X	R	0302	88-108-334-080	C-RES, U 330K-1/16W J	a	b	c	d	e
TAPE		X	R	0321	88-108-471-080	C-RES, U 470-1/16W J	a	b	c	d	e
TAPE		X	R	0322	88-108-471-080	C-RES, U 470-1/16W J	a	b	c	d	e
TAPE		O	R	0331	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
TAPE		O	R	0332	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
TAPE		X	R	0333	88-121-829-080	RES, 8.2-1/8W J	a	b	c	d	e
TAPE		X	R	0334	88-108-183-080	C-RES, U 18K-1/16W J	a	b	c	d	e
TAPE		X	R	0335	88-108-183-080	C-RES, U 18K-1/16W J	a	b	c	d	e
TAPE		X	R	0336	88-108-472-080	C-RES, U 4.7K-1/16W J	a	b	c	d	e
TAPE		X	R	0337	88-121-479-080	RES, 4.7-1/8W J	a	b	c	d	e
TAPE		O	R	0338	88-108-473-080	C-RES, U 47K-1/16W J	a	b	c	d	e
TAPE		X	R	0339	88-121-150-080	RES, 15-1/8W J	a	b	c	d	e
TAPE		X	R	0340	88-121-150-080	RES, 15-1/8W J	a	b	c	d	e
TAPE		X	R	0341	88-108-471-080	C-RES, U 470-1/16W J	a	b	c	d	e
TAPE		X	R	0342	88-108-471-080	C-RES, U 470-1/16W J	a	b	c	d	e
TAPE		O	R	0343	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
TAPE		O	R	0345	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
TAPE		O	R	0348	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
TAPE		X	R	0349	88-108-222-080	C-RES, U 2.2K-1/16W J	a	b	c	d	e
TAPE		X	R	0350	88-108-222-080	C-RES, U 2.2K-1/16W J	a	b	c	d	e
TAPE		O	R	0351	88-108-123-080	C-RES, U 12K-1/16W J	a	b	c	d	e
TAPE		O	R	0352	88-108-123-080	C-RES, U 12K-1/16W J	a	b	c	d	e
TAPE		O	R	0353	88-108-223-080	C-RES, U 22K-1/16W J	a	b	c	d	e
TAPE		O	R	0354	88-108-223-080	C-RES, U 22K-1/16W J	a	b	c	d	e
TAPE		X	R	0375	88-108-472-080	C-RES, U 4.7K-1/16W J	a	b	c	d	e
TUNER		O	C	0002	87-A10-047-080	C-CAP, U 1-10 Z F	a	b	c	d	e
TUNER		O	C	0003	87-012-286-080	C-CAP, U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0005	87-A10-039-080	C-CAP, U 470P-50 J CH	a	b	c	d	e
TUNER		O	C	0006	87-012-172-080	C-CAP, U 10P-50 D CH GRM	a	b	c	d	e
TUNER		O	C	0007	87-012-286-080	C-CAP, U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0008	87-012-286-080	C-CAP, U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0009	87-A10-915-080	C-CAP, U 1000P-25 J CH	a	b	c	d	e
TUNER		O	C	0010	87-012-286-080	C-CAP, U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0011	87-012-170-080	C-CAP, U 8P-50 D CH GRM	a	b	c	d	e
TUNER		O	C	0012	87-012-286-080	C-CAP, U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0013	87-A10-039-080	C-CAP, U 470P-50 J CH	a	b	c	d	e
TUNER		O	C	0014	87-012-286-080	C-CAP, U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0015	87-012-286-080	C-CAP, U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0016	87-012-286-080	C-CAP, U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0017	87-012-174-080	C-CAP, U 12P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0018	87-012-162-080	C-CAP, U 1P-50 C CH GRM	a	b	c	d	e
TUNER		O	C	0019	87-A12-173-080	C-CAP, U 330P-50 CH	a	b	c	d	e
TUNER		O	C	0020	87-A10-260-080	C-CAP, U 0.1-16 K B	a	b	c	d	e
TUNER		O	C	0021	87-A10-260-080	C-CAP, U 0.1-16 K B	a	b	c	d	e
TUNER		O	C	0022	87-A11-049-080	C-CAP, U 1-6.3 K B	a	b	c	d	e
TUNER		O	C	0023	87-A10-260-080	C-CAP, U 0.1-16 K B	a	b	c	d	e
TUNER		O	C	0024	87-012-286-080	C-CAP, U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0025	87-010-785-080	C-CAP, U 0.015-25 K B GRM	a	b	c	d	e
TUNER		O	C	0026	87-010-785-080	C-CAP, U 0.015-25 K B GRM	a	b	c	d	e

ELECTRICAL PARTS LIST -8/10

! = ⚠SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	!	C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL					
						CSD- TD29 KSC	CSD- TD29 EZSC	CSD- TD29 EZLC	CSD- TD69 KSC	CSD- TD69 EZSC	
TUNER		O	C	0027	87-A10-025-000	C-CAP,U 0.22-16 Z F	a	b	c	d	e
TUNER		O	C	0028	87-A10-025-000	C-CAP,U 0.22-16 Z F	a	b	c	d	e
TUNER		O	C	0029	87-012-176-000	C-CAP,U 15P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0030	87-012-184-000	C-CAP,U 33P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0031	87-012-176-000	C-CAP,U 15P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0032	87-012-274-000	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
TUNER		O	C	0033	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0034	87-012-274-000	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
TUNER		X	C	0035	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		O	C	0036	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0037	87-A10-260-000	C-CAP,U 0.1-16 K B	a	b	c	d	e
TUNER		O	C	0038	87-012-195-000	C-CAP,U 100P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0039	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0040	87-012-166-000	C-CAP,U 4P-50 C CH GRM	a	b	c	d	e
TUNER		O	C	0041	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0042	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0043	87-012-191-000	C-CAP,U 68P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0045	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0046	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0047	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
							CSD- TD29 KSC	CSD- TD29 EZSC	CSD- TD29 EZLC	CSD- TD69 KSC	CSD- TD69 EZSC
TUNER		O	C	0049	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0050	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0051	87-012-195-000	C-CAP,U 100P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0052	87-012-195-000	C-CAP,U 100P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0055	87-012-174-000	C-CAP,U 12P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0056	87-012-176-000	C-CAP,U 15P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0057	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0058	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0059	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0060	87-010-404-000	CAP,E 4.7-50 M 11L SME	a	b	c	d	e
TUNER		O	C	0061	87-010-263-000	CAP,E 100-10 M 11L SME	a	b	c	d	e
TUNER		O	C	0062	87-010-404-000	CAP,E 4.7-50 M 11L SME	a	b	c	d	e
TUNER		O	C	0063	87-010-263-000	CAP,E 100-10 M 11L SME	a	b	c	d	e
TUNER		O	C	0064	87-010-263-000	CAP,E 100-10 M 11L SME	a	b	c	d	e
TUNER		O	C	0071	87-012-184-000	C-CAP,U 33P-50 J CH GRM	a	b	c	d	e
TUNER		O	C	0072	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0073	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0074	87-A10-978-000	C-CAP,U 820P-25 J CH	a	b	c	d	e
TUNER		O	C	0075	87-012-286-000	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
TUNER		O	C	0076	87-012-176-000	C-CAP,U 15P-50 J CH GRM	a	b	c	d	e
							CSD- TD29 KSC	CSD- TD29 EZSC	CSD- TD29 EZLC	CSD- TD69 KSC	CSD- TD69 EZSC
TUNER		O	CF	0002	87-A91-729-110	FLTR,SFE10.7 MS2C20-A	a	b	c	d	e
TUNER		O	CF	0003	87-A91-730-110	FLTR,CDA10.7 MG77A-A	a	b	c	d	e
TUNER		!	O	CN	0001	87-A60-621-010	CONN,4P V 2MM JMT	a	b	c	d
TUNER		!	O	CN	0002	87-A60-624-010	CONN,7P V 2MM JMT	a	b	c	d
TUNER		X	CN	0003	8Z-CT4-623-010	PIN,TESTDIA0.9-10	a	b	c	d	e
TUNER		X	CN	0004	8Z-CT4-623-010	PIN,TESTDIA0.9-10	a	b	c	d	e
TUNER		X	CN	0005	8Z-CT4-623-010	PIN,TESTDIA0.9-10	a	b	c	d	e
TUNER		X	CN	0011	8Z-CT4-623-010	PIN,TESTDIA0.9-10	a	b	c	d	e
TUNER		O	D	0001	87-A41-143-040	C-VARI-CAP,SVC383	a	b	c	d	e
TUNER		O	D	0002	87-A40-916-040	C-VARI-CAP,HVC202A	a	b	c	d	e
TUNER		O	D	0003	87-A40-916-040	C-VARI-CAP,HVC202A	a	b	c	d	e
TUNER		S	D	0004	87-070-345-000	DIODE,1N4148	a	b	c	d	e
TUNER		S	D	0005	87-070-345-000	DIODE,1N4148	a	b	c	d	e
TUNER		S	IC	0001	87-A20-851-040	C-IC,TA2111F	a	b	c	d	e
TUNER		S	IC	0002	87-A21-928-010	IC,LC72131D-N	a	b	c	d	e
TUNER		X	JR	0003	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0004	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0005	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0006	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0007	88-108-000-000	C-JUMPER,U	a	b	c	d	e
							CSD- TD29 KSC	CSD- TD29 EZSC	CSD- TD29 EZLC	CSD- TD69 KSC	CSD- TD69 EZSC
TUNER		X	JR	0008	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0009	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0010	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0011	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0012	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0013	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0014	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0015	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0016	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0017	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0018	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0019	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0020	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JR	0021	88-108-000-000	C-JUMPER,U	a	b	c	d	e
TUNER		X	JW	0001	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER		X	JW	0002	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER		X	JW	0003	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER		X	JW	0004	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER		X	JW	0005	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER		X	JW	0006	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e

ELECTRICAL PARTS LIST -9/10

! = ⚠ SAFTY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
					CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
TUNER	X	JW 0007	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0008	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0009	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0010	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0011	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0012	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0013	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0014	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0015	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0016	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0017	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0018	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0019	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0020	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0021	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0022	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0023	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0024	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0025	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0026	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0027	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0028	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	X	JW 0029	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	O	L 0001	87-A50-420-010	COIL,MW OSC(SYN)	a	b	c	d	e
TUNER	O	L 0002	87-A50-772-010	COIL,FM RF EX(CCH)	a	b	c	d	e
TUNER	X	L 0004	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e
TUNER	O	L 0005	87-A50-560-010	COIL,FM BPF(ACD)	a	b	c	d	e
TUNER	O	L 0006	87-A91-308-010	FLTR,PCFAZH- 450T (TOK)	a	b	c	d	e
TUNER	O	L 0008	87-A50-770-010	COIL,FM OSC(CCH)	a	b	c	d	e
TUNER	O	L 0071	87-A50-421-010	COIL,LW OSC(SYN)	a	b	c	d	e
TUNER	S	Q 0001	87-A30-288-040	C-TR,DTC114YKA	a	b	c	d	e
TUNER	S	Q 0002	87-026-447-080	TR,2SC1740SR	a	b	c	d	e
TUNER	S	Q 0003	89-111-624-080	C-TR,2SA1162Y	a	b	c	d	e
TUNER	S	Q 0004	87-A30-283-040	C-TR,DTA114YKA	a	b	c	d	e
TUNER	S	Q 0005	87-A30-076-080	C-TR,2SC3052F	a	b	c	d	e
TUNER	S	Q 0006	87-A30-076-080	C-TR,2SC3052F	a	b	c	d	e
TUNER	S	Q 0007	89-327-143-080	C-TR,2SC27140	a	b	c	d	e
TUNER	S	Q 0008	89-327-143-080	C-TR,2SC27140	a	b	c	d	e
TUNER	S	Q 0009	87-A30-283-040	C-TR,DTA114YKA	a	b	c	d	e
TUNER	S	Q 0010	87-A30-283-040	C-TR,DTA114YKA	a	b	c	d	e
TUNER	S	Q 0011	87-A30-282-040	C-TR,DTA114TKA	a	b	c	d	e
TUNER	S	Q 0071	89-503-025-080	C-FET,2SK302GR	a	b	c	d	e
TUNER	S	Q 0072	87-026-447-080	TR,2SC1740SR	a	b	c	d	e
TUNER	S	Q 0073	89-320-011-080	TR,2SC2001K	a	b	c	d	e
TUNER	S	Q 0074	87-A30-283-040	C-TR,DTA114YKA	a	b	c	d	e
TUNER	O	R 0001	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	e
TUNER	X	R 0002	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	e
TUNER	X	R 0003	88-108-330-080	C-RES,U 33-1/16W J	a	b	c	d	e
TUNER	O	R 0004	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	e
TUNER	O	R 0005	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	e
TUNER	X	R 0006	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	e
TUNER	X	R 0007	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R 0008	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	e
TUNER	X	R 0009	88-108-221-080	C-RES,U 220-1/16W J	a	b	c	d	e
TUNER	X	R 0010	88-108-221-080	C-RES,U 220-1/16W J	a	b	c	d	e
TUNER	O	R 0011	88-108-223-080	C-RES,U 22K-1/16W J	a	b	c	d	e
TUNER	O	R 0012	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	e
TUNER	X	R 0013	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R 0014	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	e
TUNER	X	R 0015	88-108-221-080	C-RES,U 220-1/16W J	a	b	c	d	e
TUNER	O	R 0016	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	e
TUNER	X	R 0017	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d	e
TUNER	X	R 0018	88-108-222-080	C-RES,U 2.2K-1/16W J	a	b	c	d	e
TUNER	X	R 0019	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R 0020	88-108-000-080	C-JUMPER,U	a	b	c	d	e
TUNER	X	R 0021	88-108-331-080	C-RES,U 330-1/16W J	a	b	c	d	e
TUNER	X	R 0022	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	e
TUNER	X	R 0023	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	e
TUNER	O	R 0024	88-108-473-080	C-RES,U 47K-1/16W J	a	b	c	d	e
TUNER	X	R 0025	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R 0026	88-121-472-080	RES,4.7K-1/8W J	a	b	c	d	e
TUNER	X	R 0028	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R 0029	88-108-472-080	C-RES,U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R 0030	88-108-271-080	C-RES,U 270-1/16W J	a	b	c	d	e
TUNER	X	R 0031	88-108-121-080	C-RES,U 120-1/16W J	a	b	c	d	e
TUNER	O	R 0032	88-108-562-080	C-RES,U 5.6K-1/16W J	a	b	c	d	e
TUNER	O	R 0033	88-108-102-080	C-RES,U 1K-1/16W J	a	b	c	d	e
TUNER	X	R 0034	88-108-681-080	C-RES,U 680-1/16W J	a	b	c	d	e
TUNER	X	R 0036	88-121-104-080	RES,100K-1/8W J	a	b	c	d	e
TUNER	X	R 0037	88-108-104-080	C-RES,U 100K-1/16W J	a	b	c	d	e

ELECTRICAL PARTS LIST -10/10

!

= ⚠SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.


However, please note that not all components will be available as spare parts for after-sales service.


Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.


Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.


UNIT-NAME		! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD-TD29 KSC	CSD-TD29 EZSC	CSD-TD29 EZLC	CSD-TD69 KSC	CSD-TD69 EZSC
TUNER	X	R	0041	88-108-472-080	C-RES, U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R	0042	88-108-472-080	C-RES, U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R	0043	88-108-472-080	C-RES, U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R	0044	88-108-472-080	C-RES, U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R	0045	88-108-472-080	C-RES, U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R	0046	88-108-472-080	C-RES, U 4.7K-1/16W J	a	b	c	d	e
TUNER	X	R	0047	88-108-222-080	C-RES, U 2.2K-1/16W J	a	b	c	d	e
TUNER	X	R	0049	88-108-000-080	C- JUMPER, U	a	b	c	d	e
TUNER	O	R	0050	88-108-332-080	C-RES, U 3.3K-1/16W J	a	b	c	d	e
TUNER	X	R	0071	88-108-471-080	C-RES, U 470-1/16W J	a	b	c	d	e
TUNER	O	R	0073	88-108-101-080	C-RES, U 100-1/16W J	a	b	c	d	e
TUNER	O	R	0074	88-108-103-080	C-RES, U 10K-1/16W J	a	b	c	d	e
TUNER	O	R	0075	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
TUNER	X	R	0076	88-108-472-080	C-RES, U 4.7K-1/16W J	a	b	c	d	e
TUNER	O	R	0077	88-108-102-080	C-RES, U 1K-1/16W J	a	b	c	d	e
TUNER	X	R	0079	88-108-334-080	C-RES, U 330K-1/16W J	a	b	c	d	e
TUNER	O	TC	0001	87-011-254-080	TRIMMER, CER 20P 4.0X4.5 ECR	a	b	c	d	e
TUNER	O	TC	0071	87-A92-234-080	TRIMMER, 50P 4-4.5 LAR	a	b	c	d	e
TUNER	O	X	0001	87-A70-306-010	VIB, XTAL 4.500MHZ CSA-309ST	a	b	c	d	e


SCHEMATIC DIAGRAM -1/5 (MAIN)

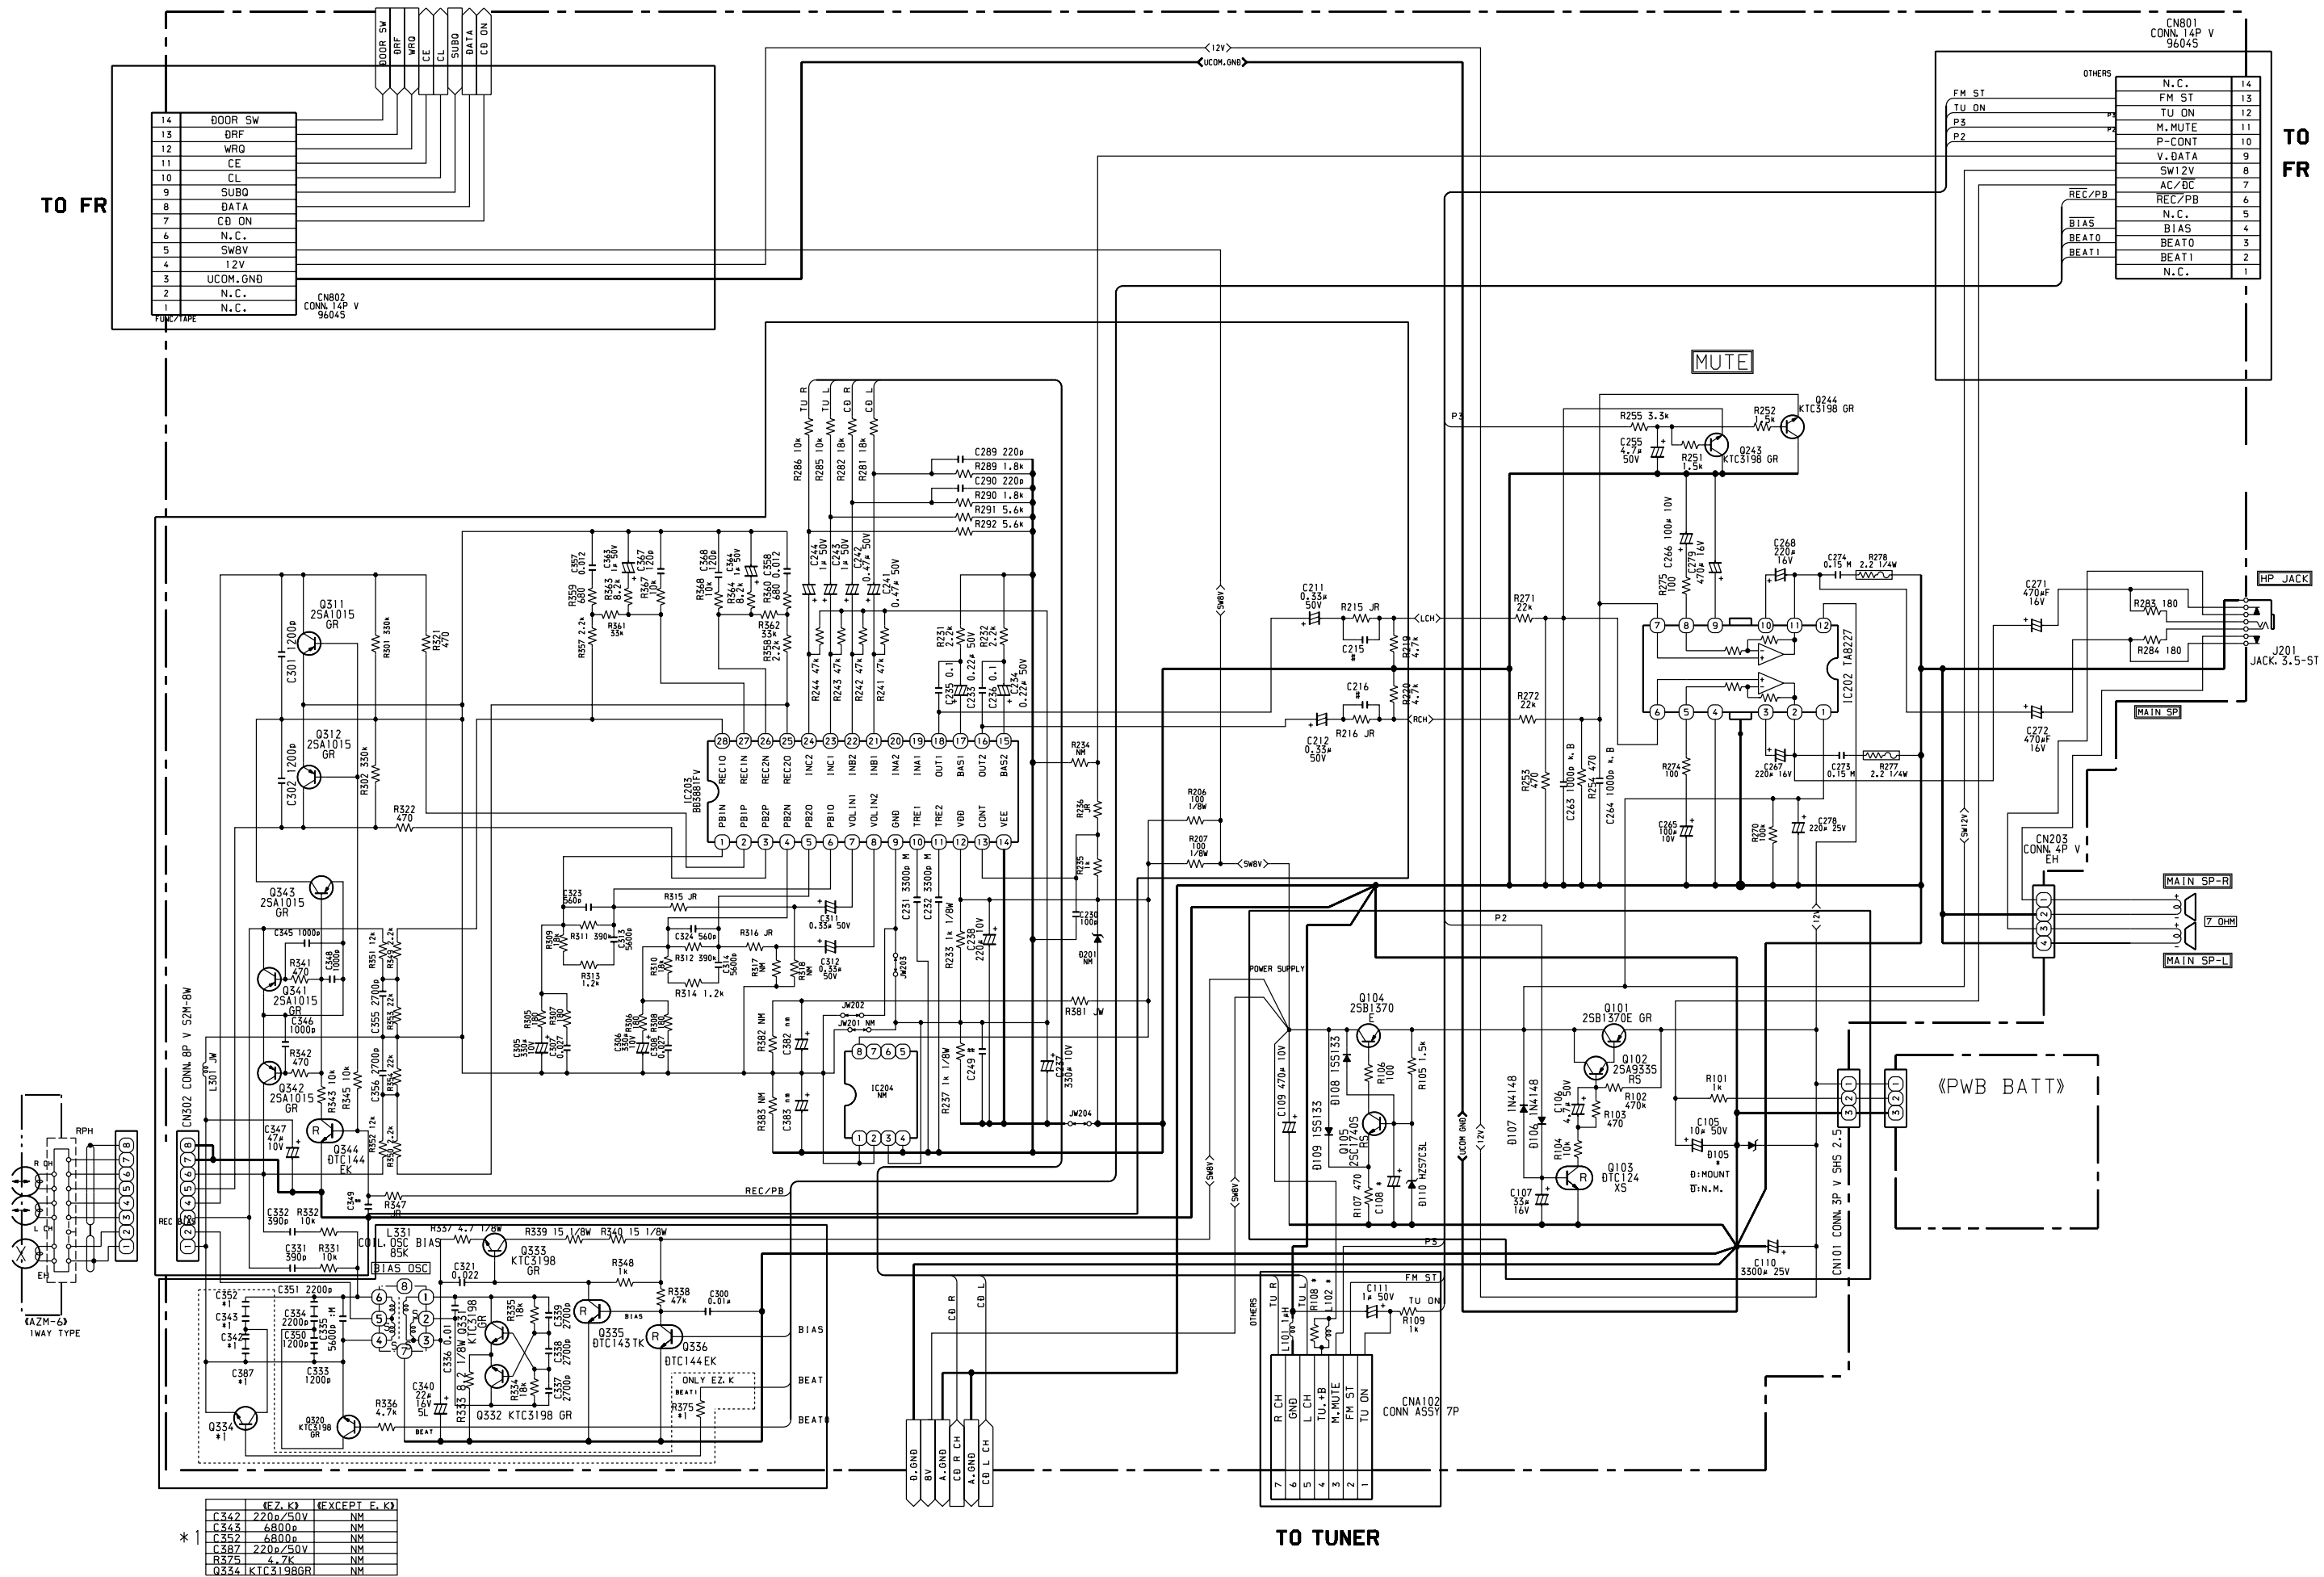

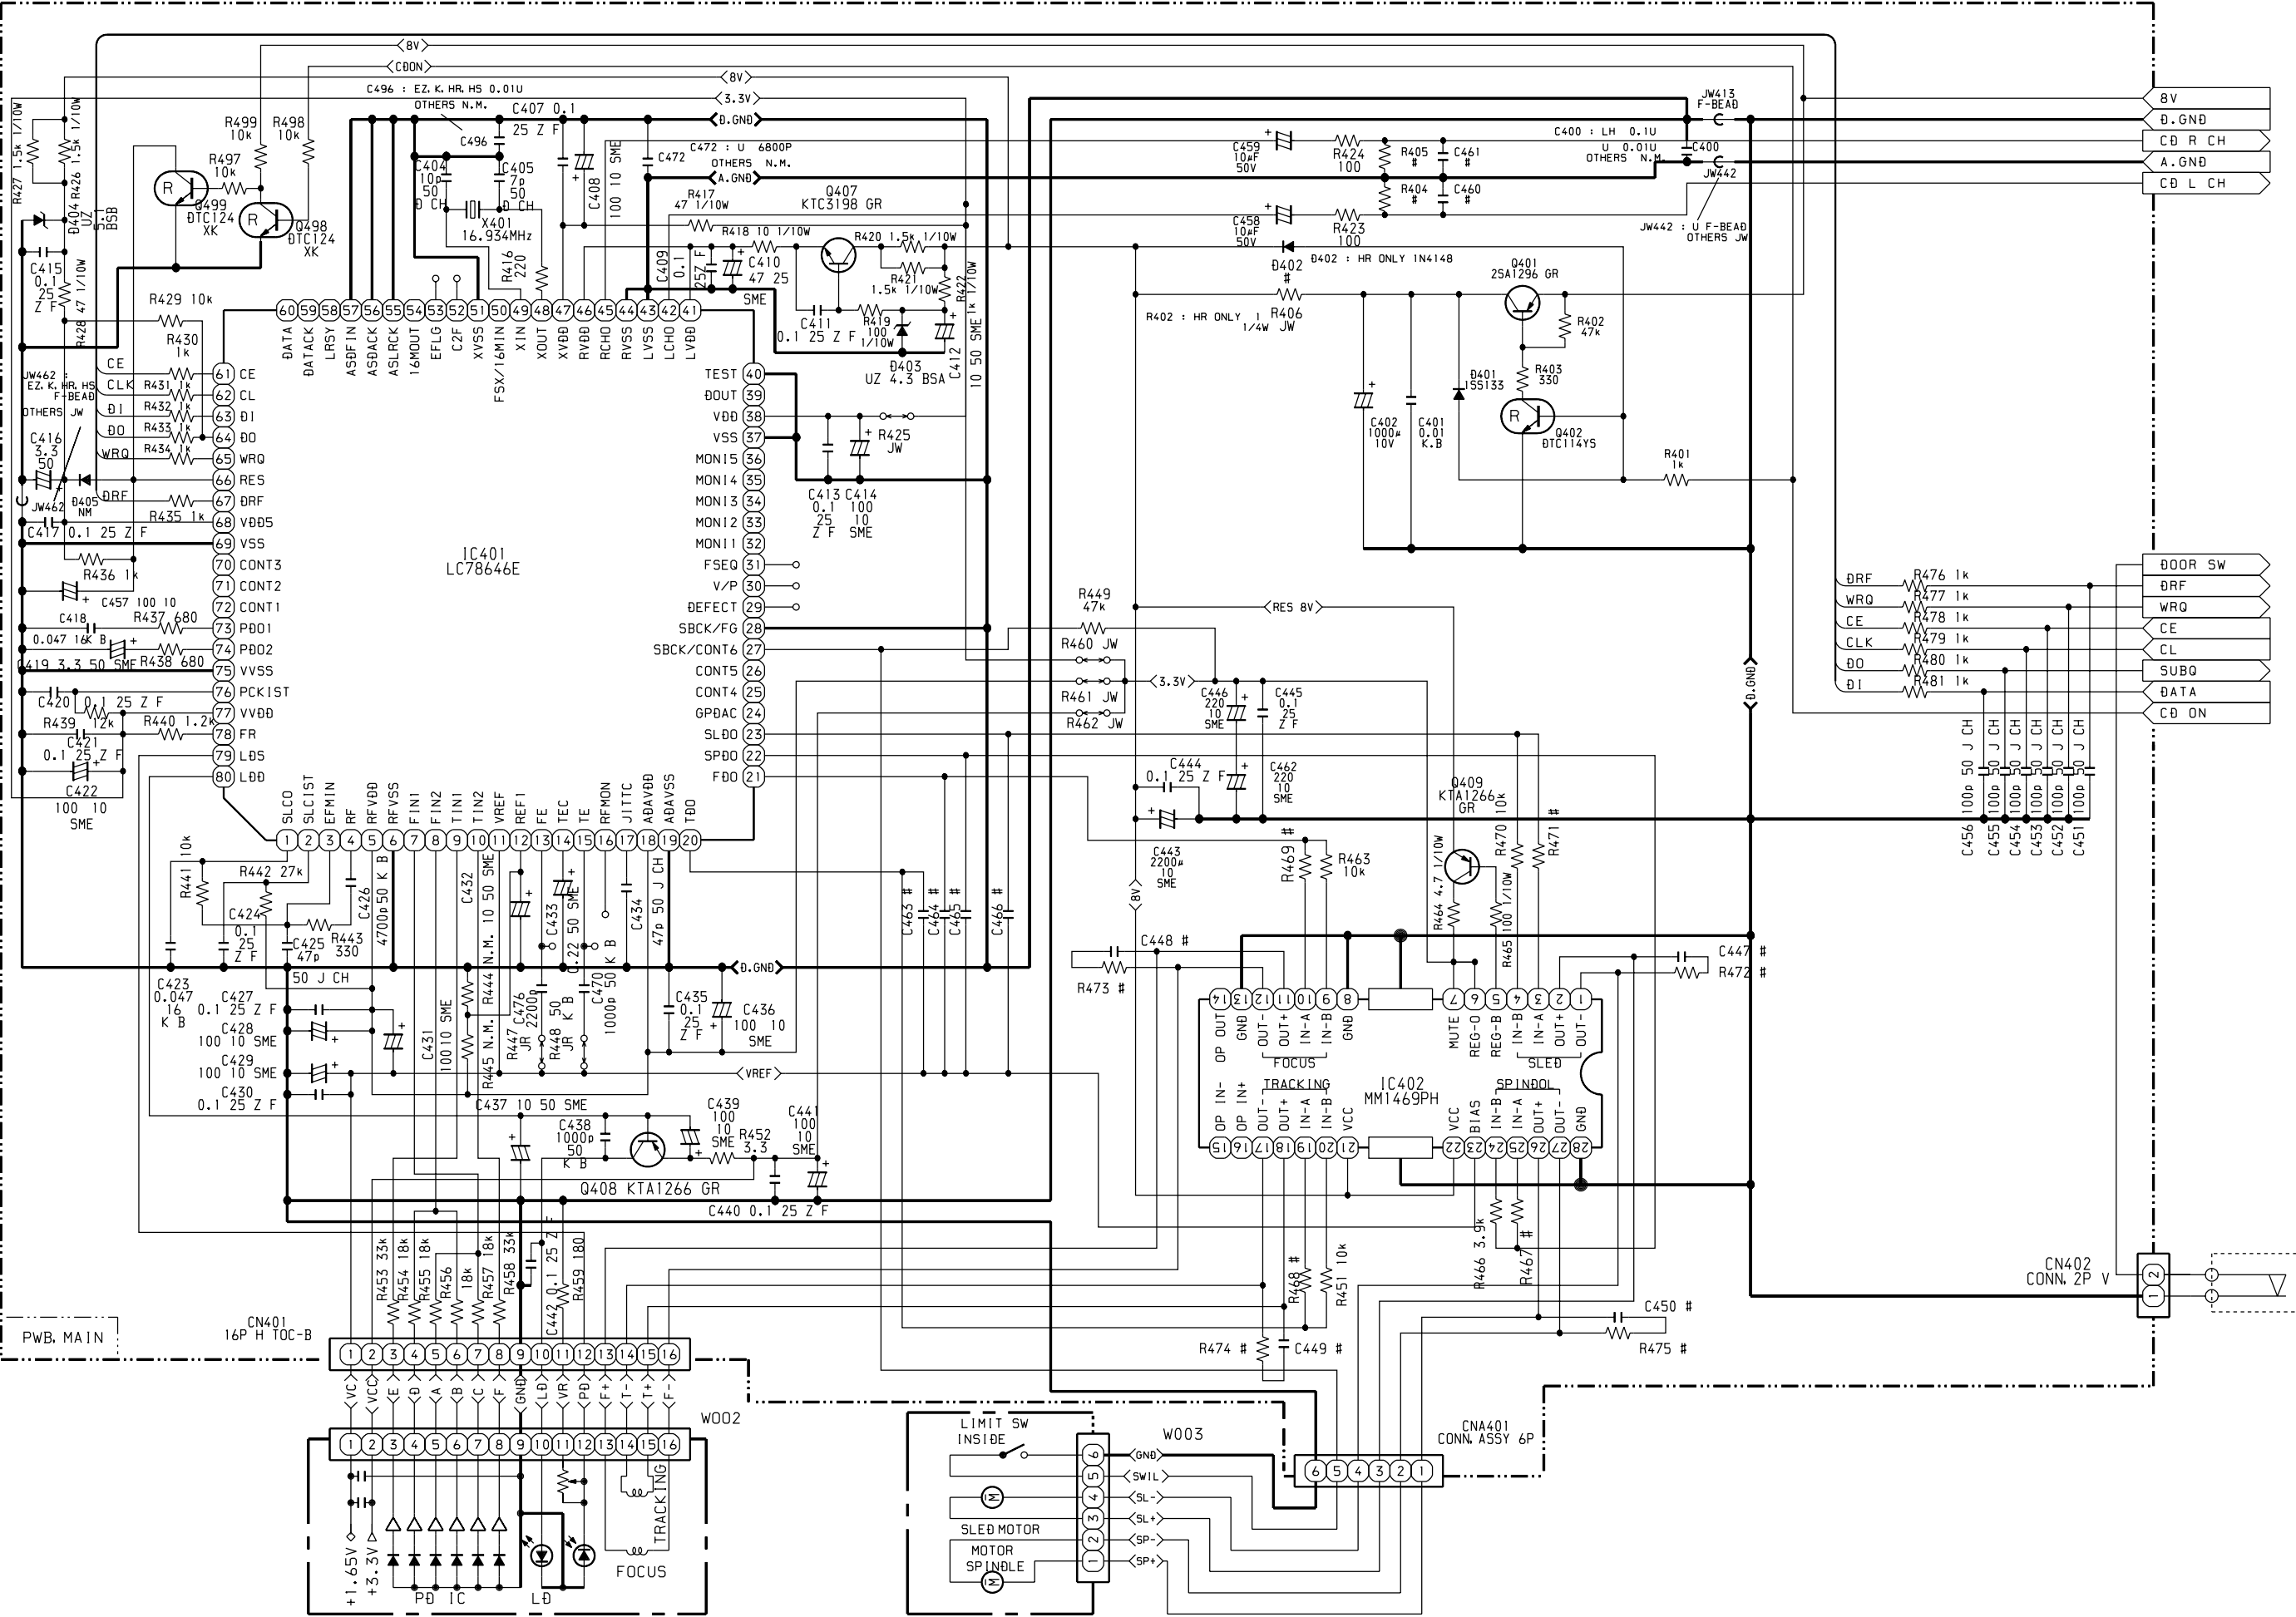

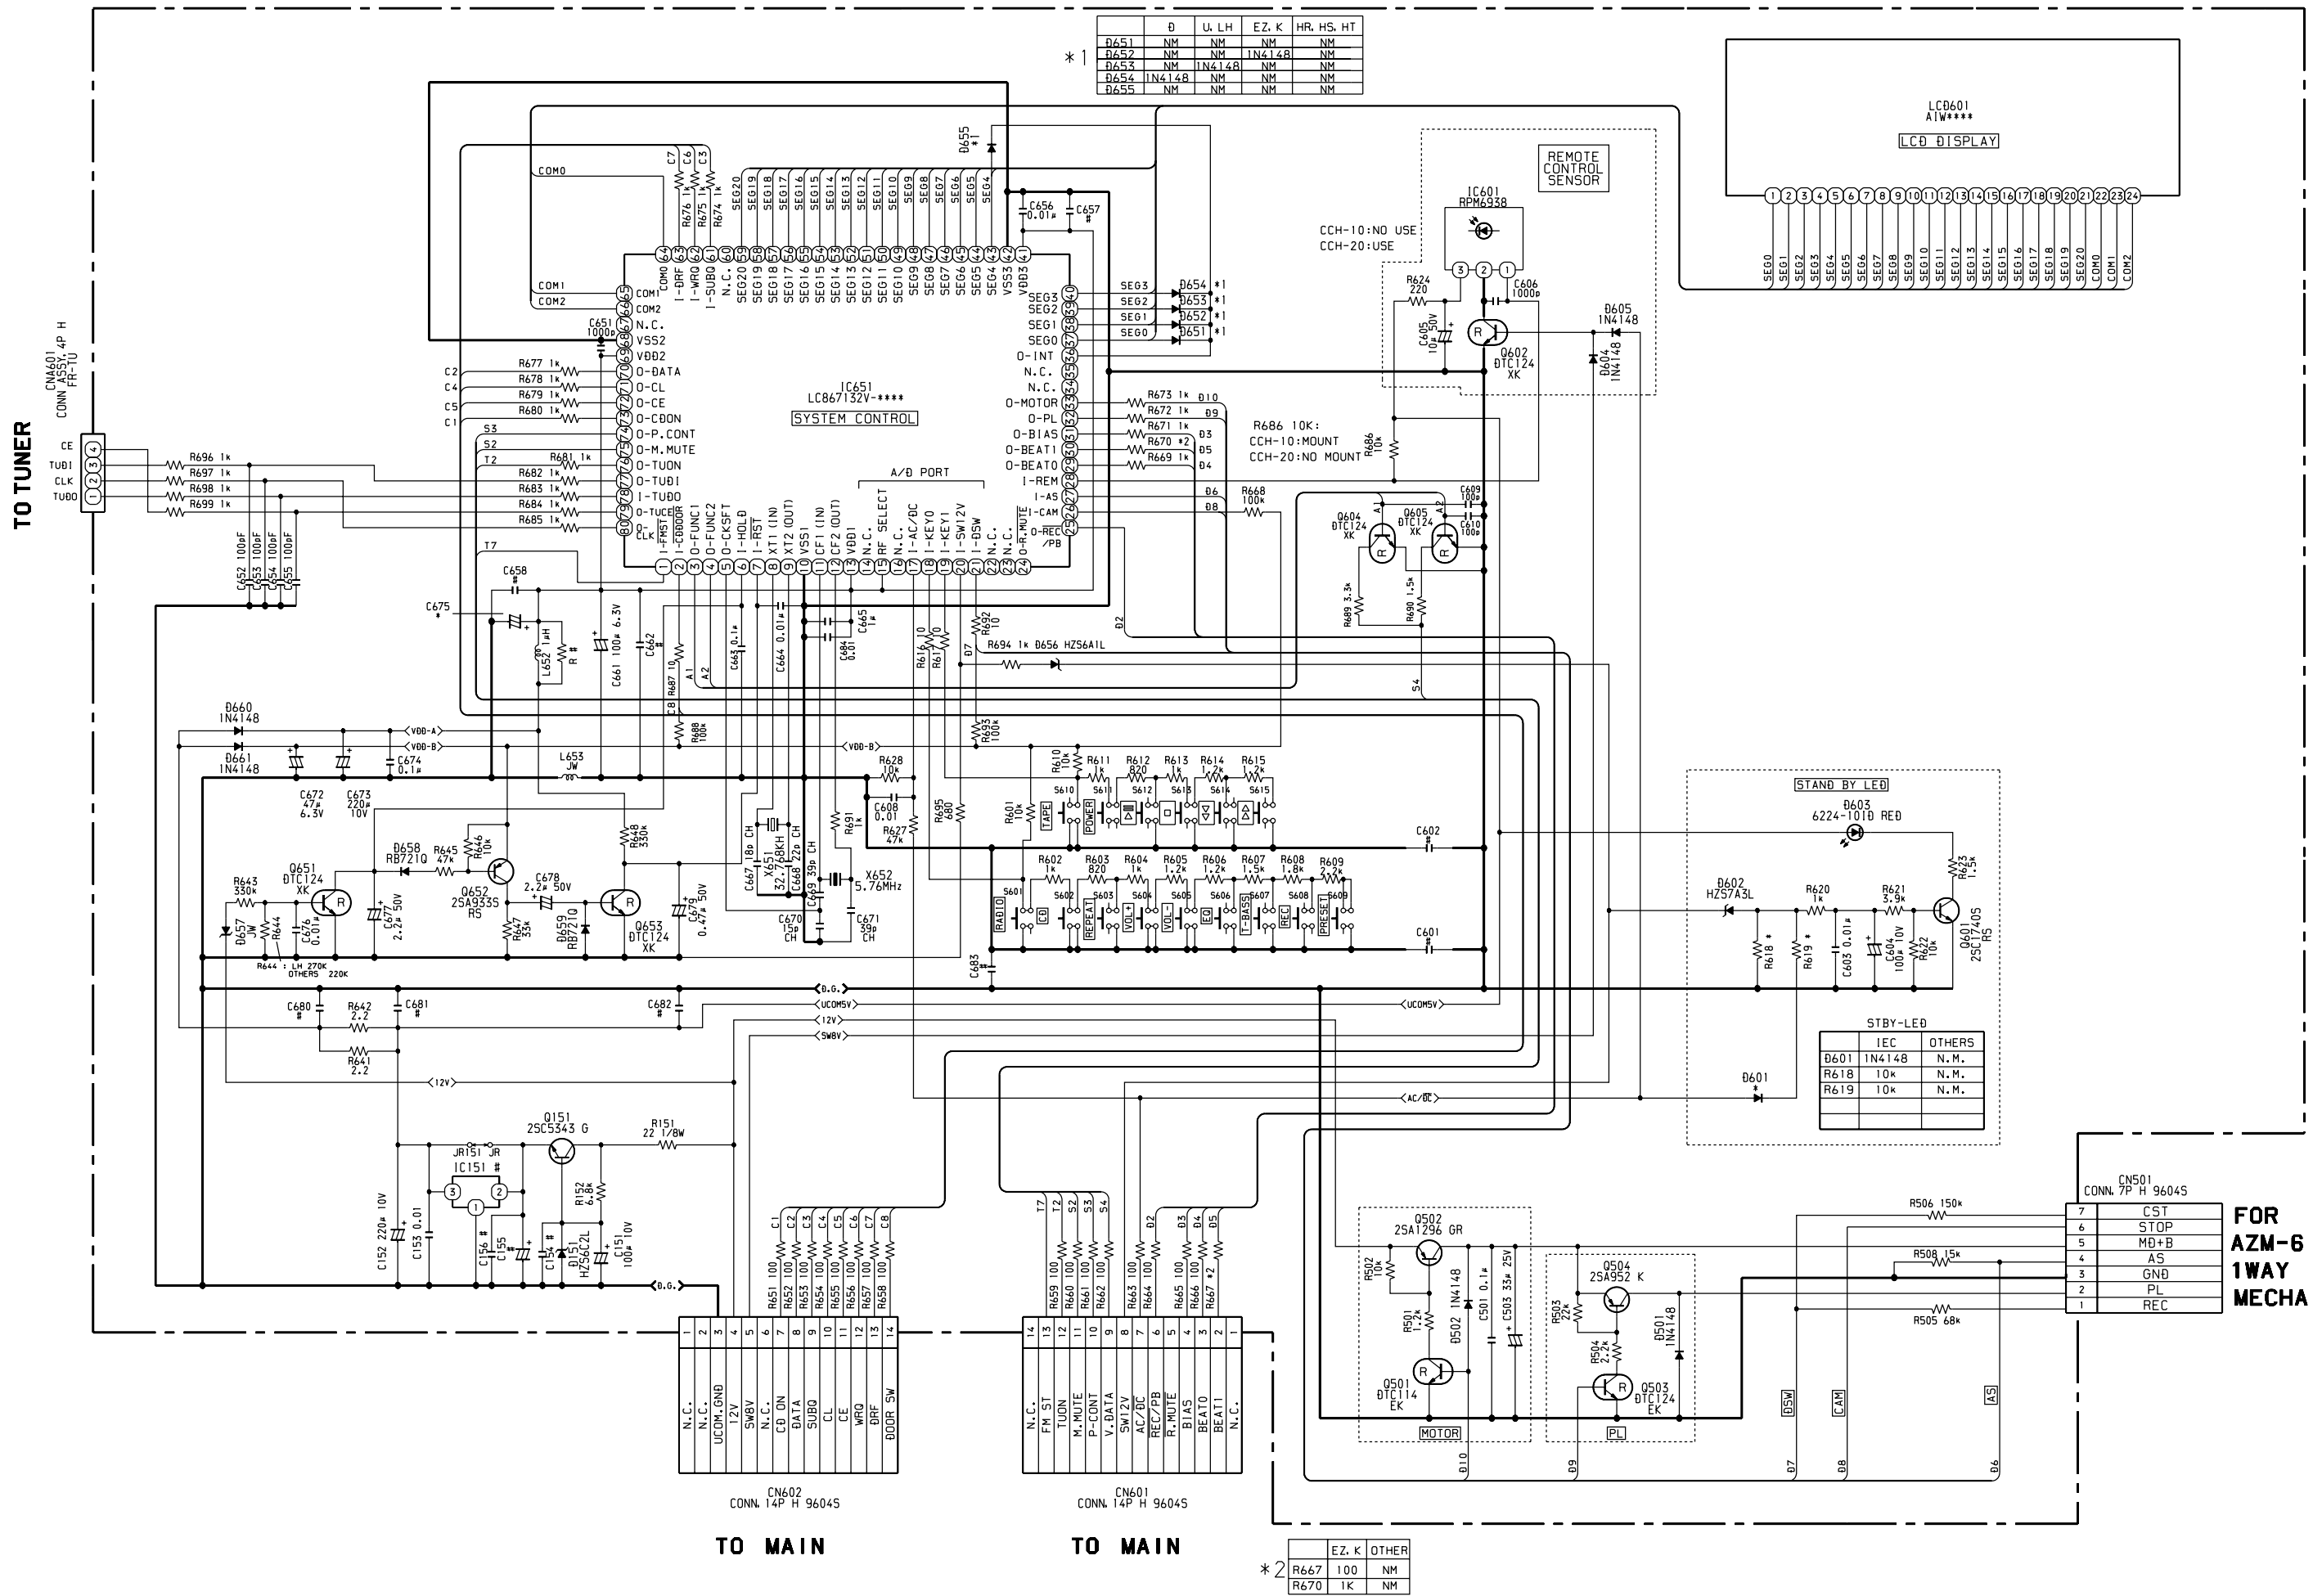

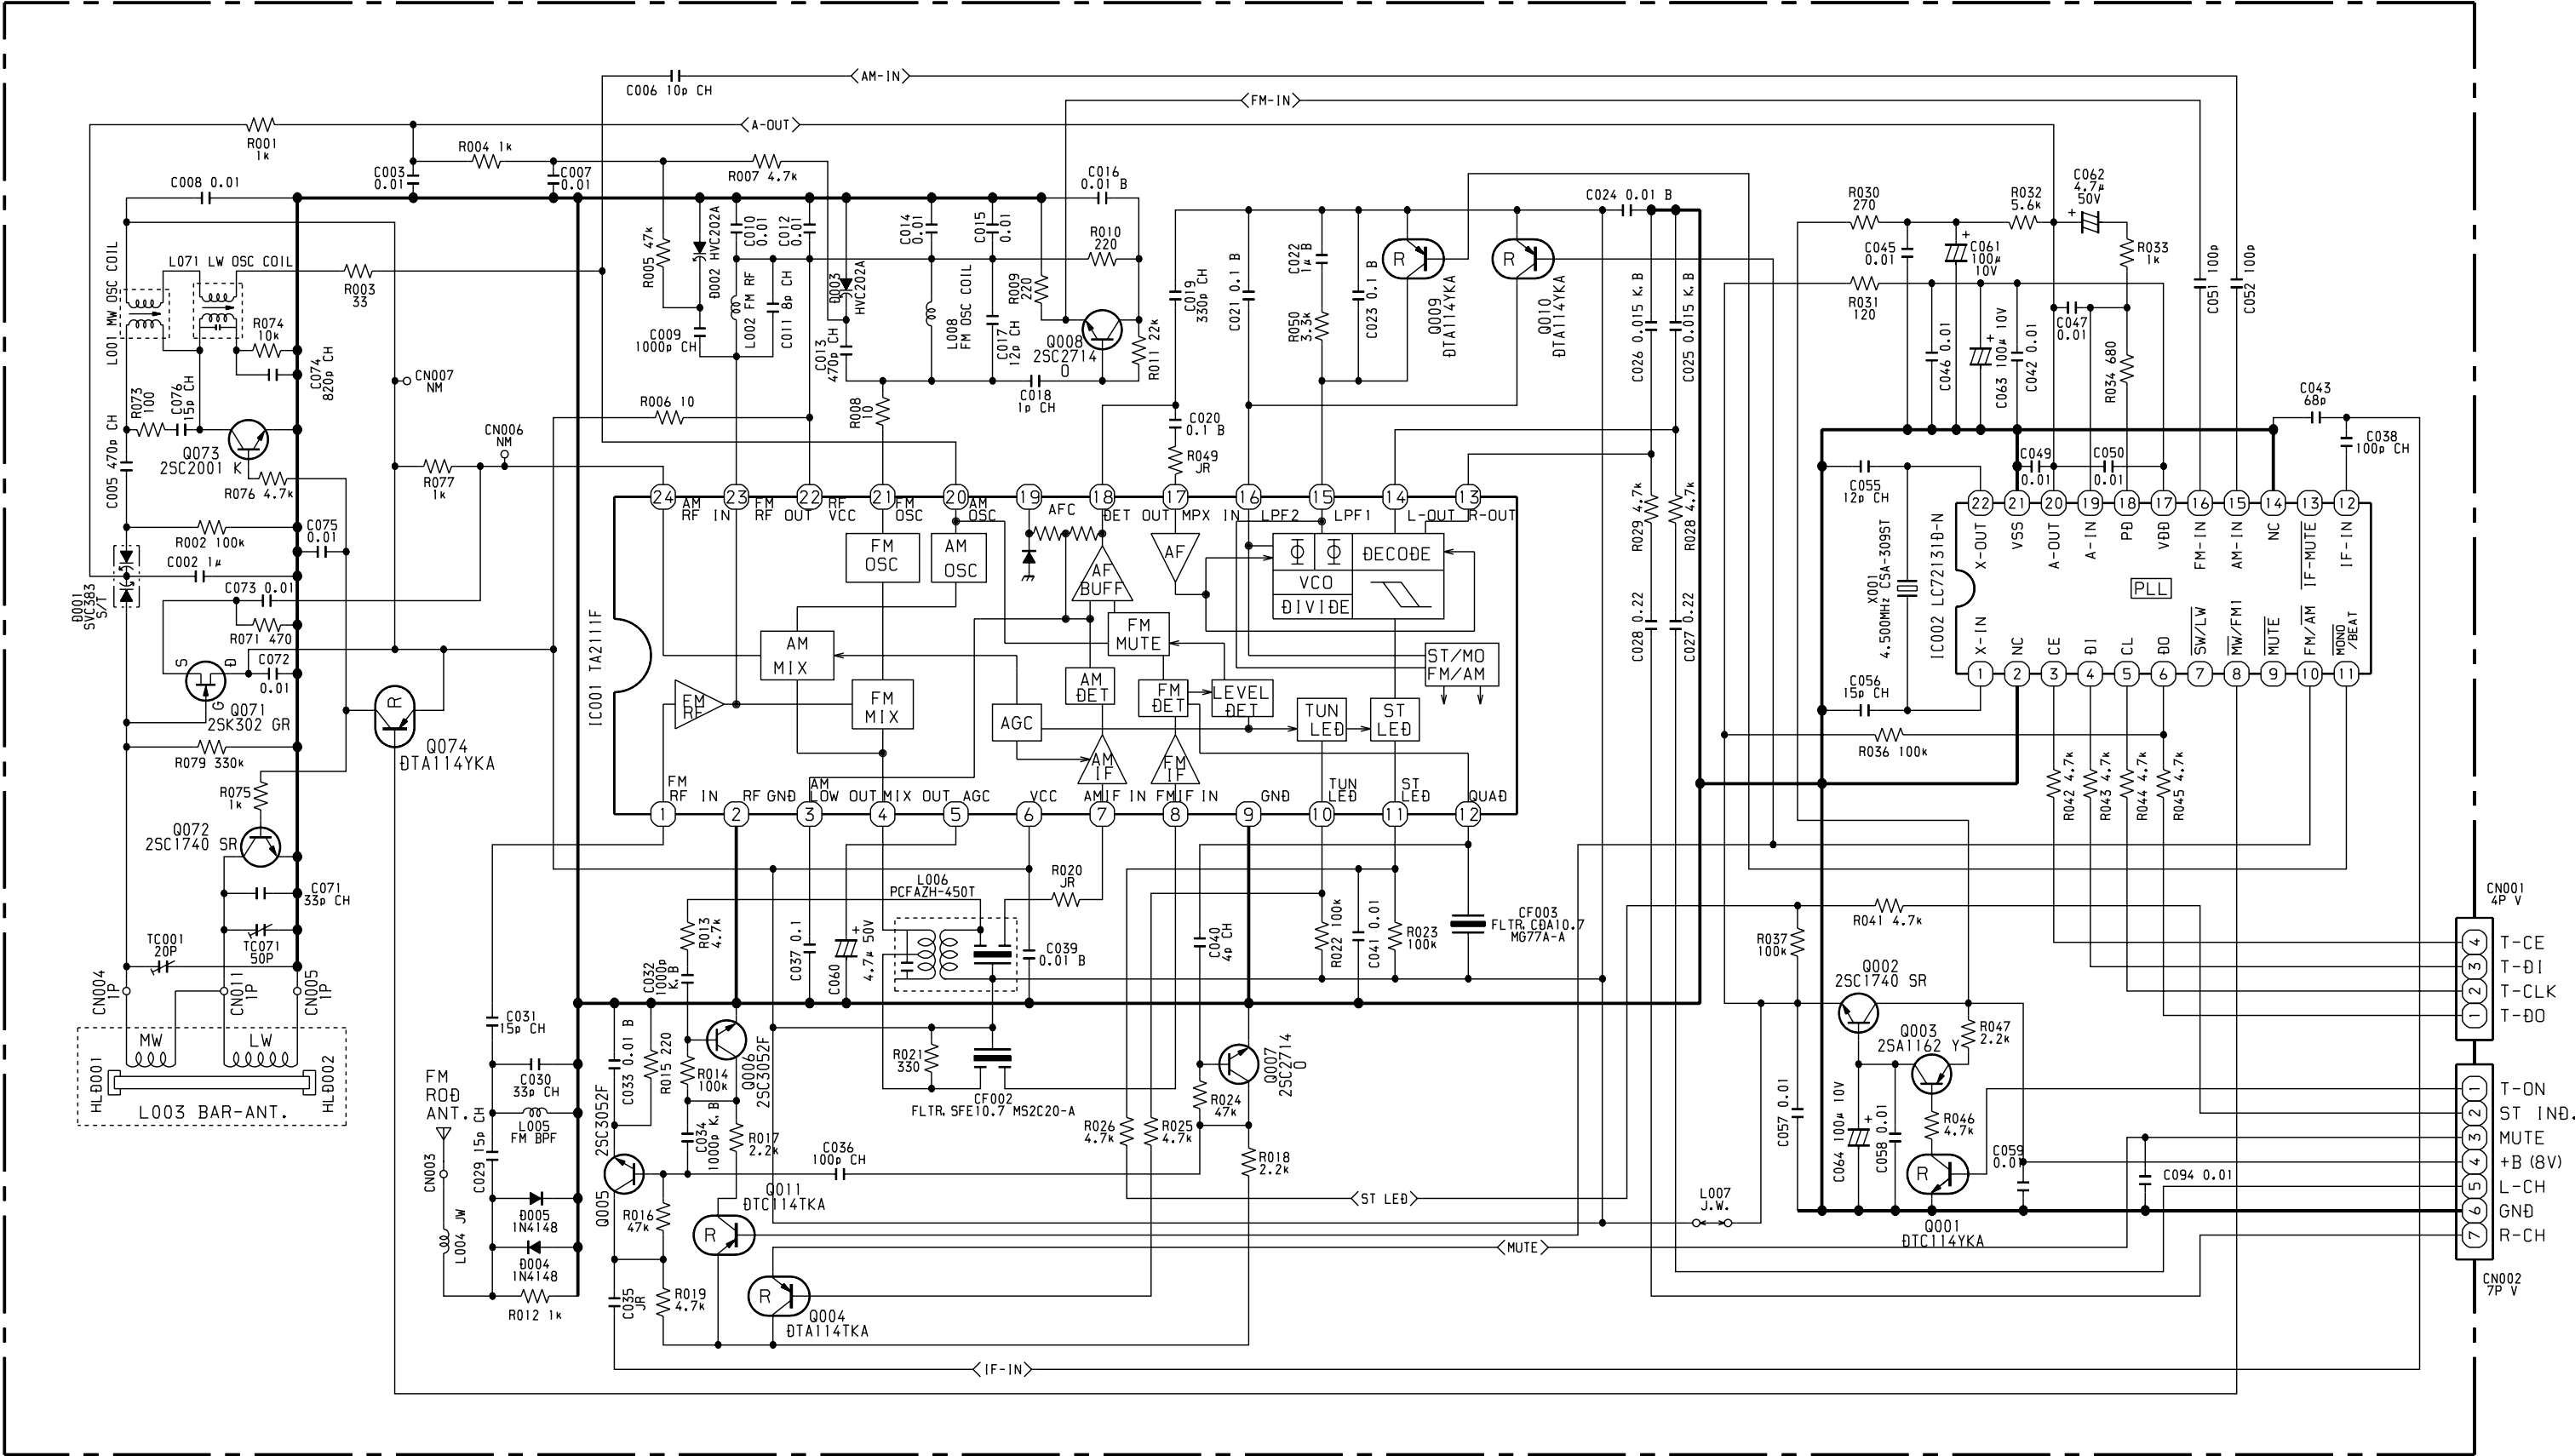

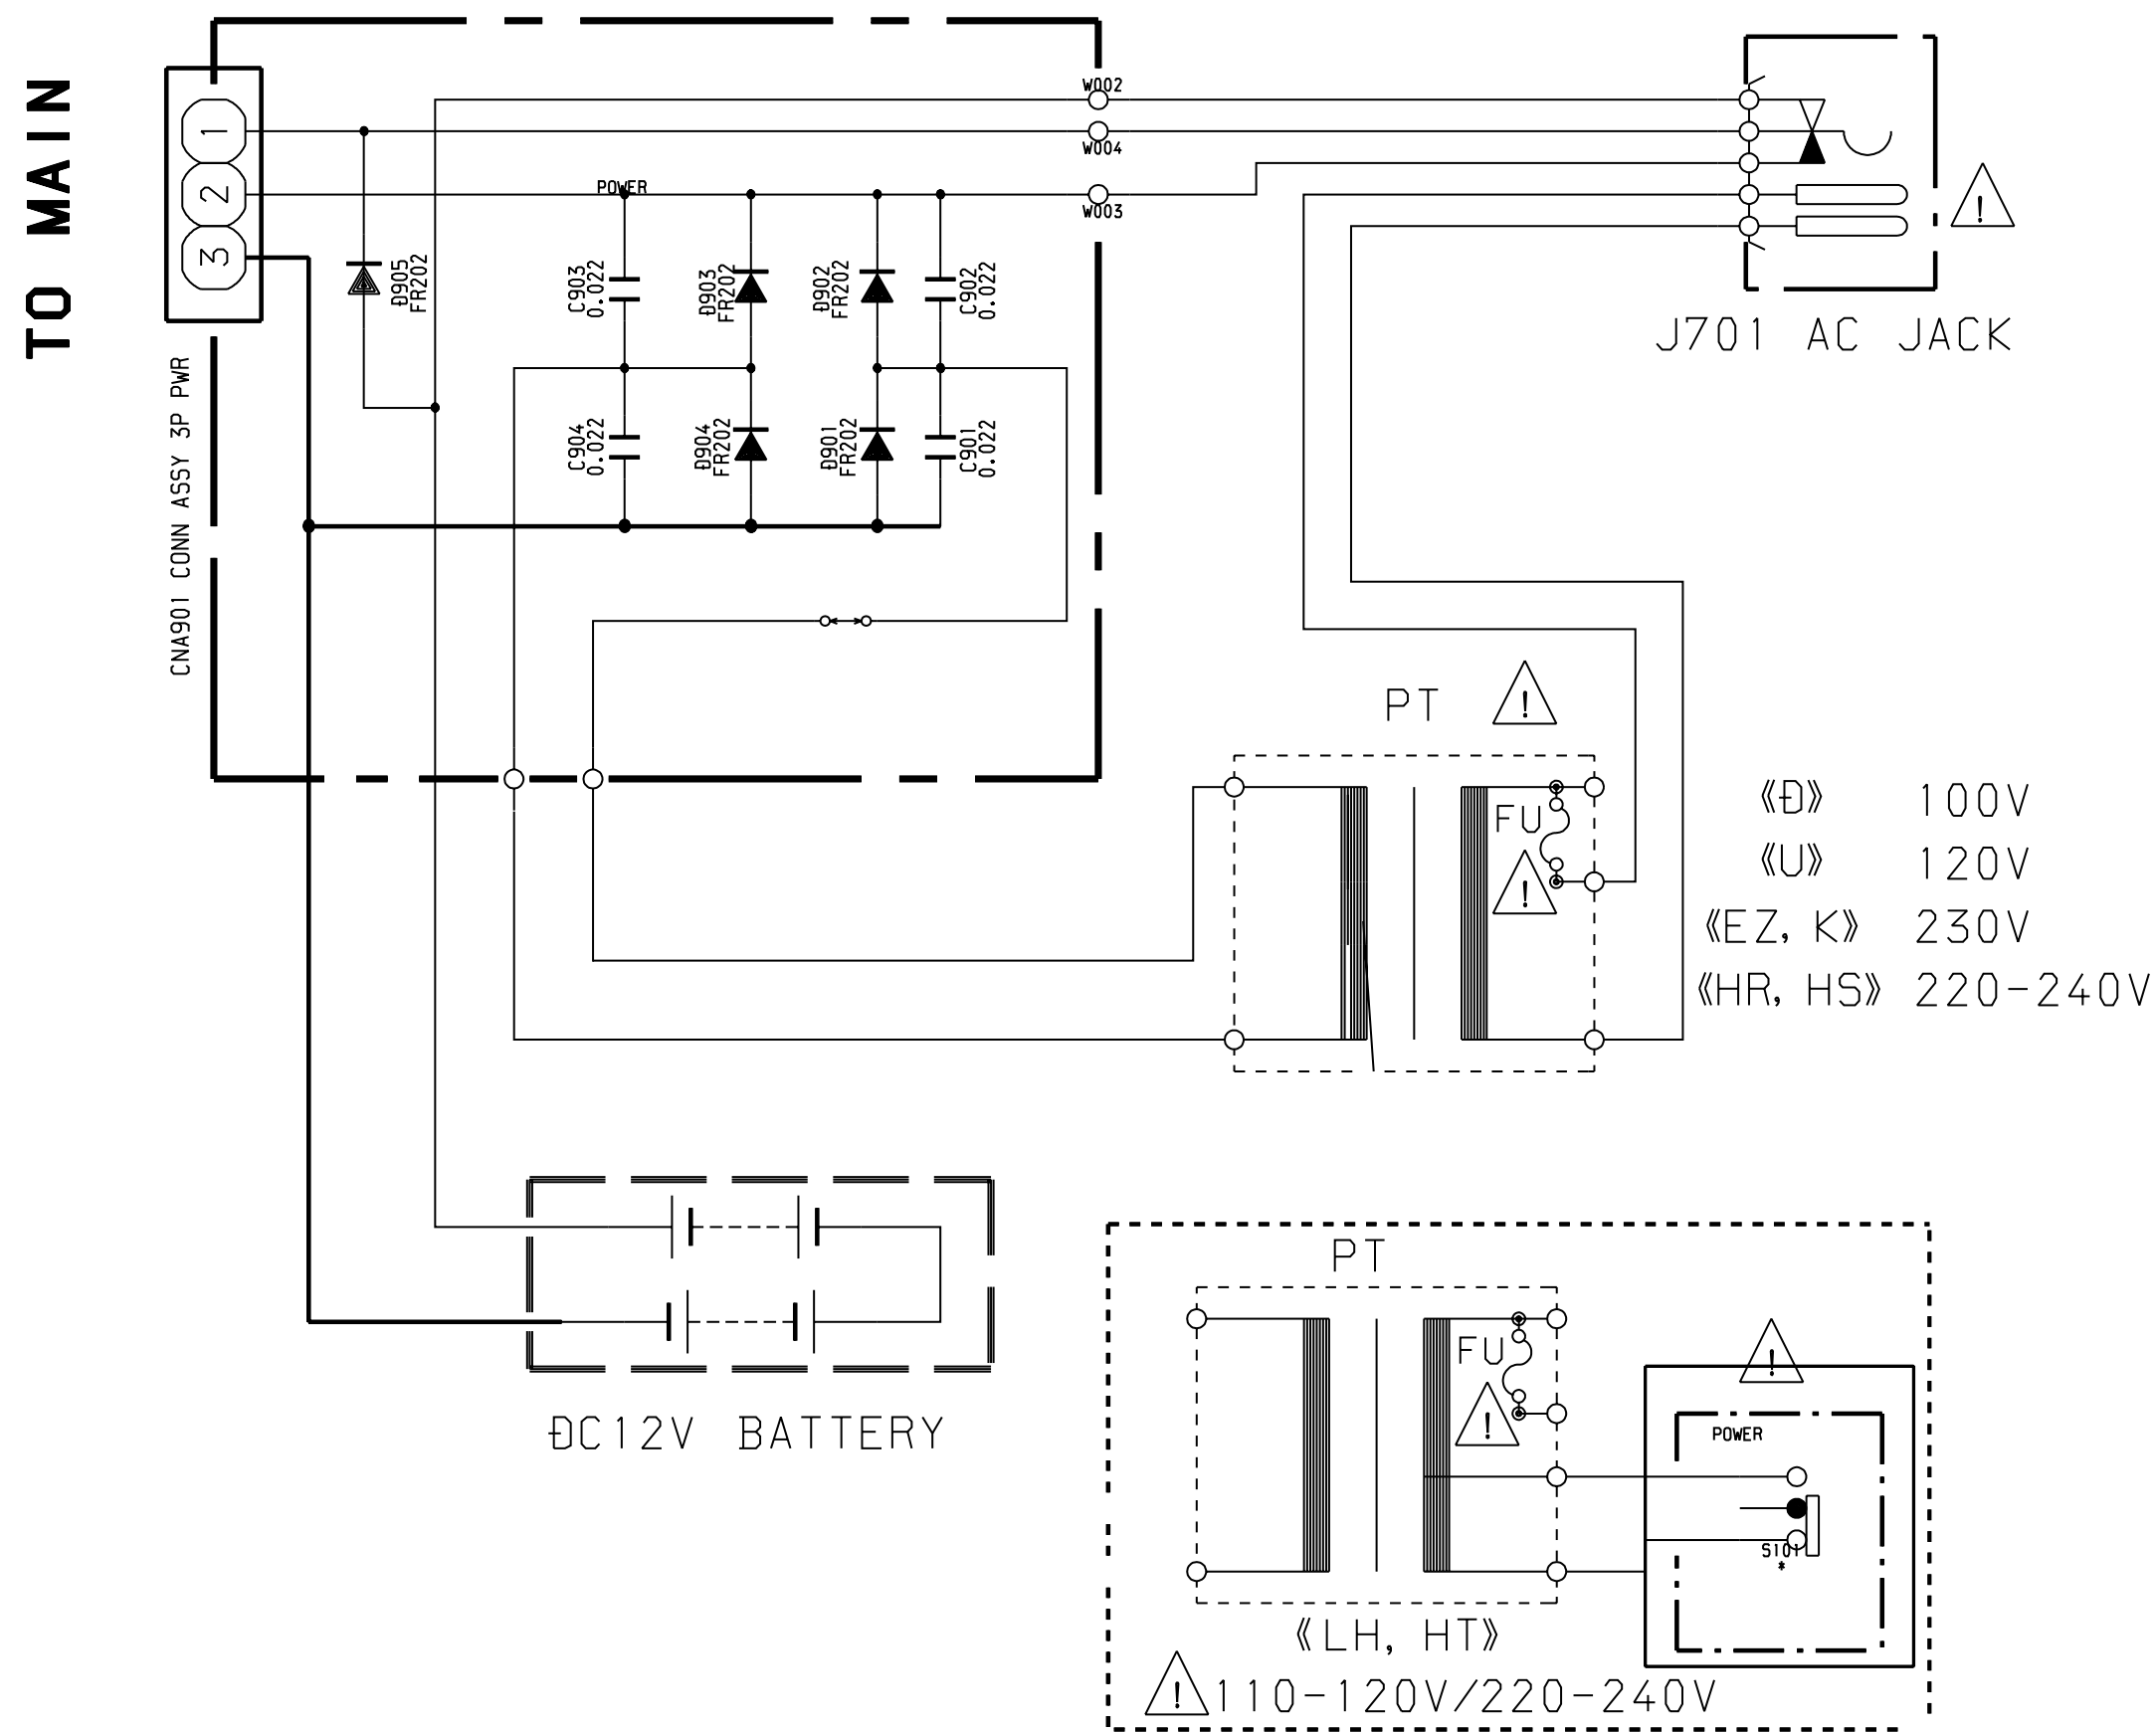

MECHANICAL PARTS LIST -1/2

!

= ⚠SAFTY PARTS

C

= Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME		! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD- TD29 KSC	CSD- TD29 EZSC	CSD- TD29 EZLC	CSD- TD69 KSC	CSD- TD69 EZSC
			X	MC1001	8C-CHA-003-010	GRILLE,SPKR A (B)	a	b	.	e
			X	MC1002	8C-CHA-004-010	GRILLE,SPKR B (B)	a	b	.	e
			O	MC1003	8C-CHA-005-010	CABI,REAR	.	c	d	e
			O	MC1004	8C-CHA-007-010	CHAS,CD	.	c	d	e
			O	MC1005	8C-CHA-009-010	ARM-HANDL,MAIN (S)	a	b	c	e
			O	MC1006	8C-CHA-034-010	LID,CD EX (S)	.	.	c	e
			O	MC1007	8C-CHA-036-010	BOX,CASS EX (S)	a	b	c	e
			O	MC1008	8C-CHA-038-010	WINDOW,CASS EX	a	b	.	.
			O	MC1009	8C-CHA-041-010	CABI ASSY,FR EX (S)	a	b	.	e
			X	MC1010	8C-CHA-042-010	CABI,FR EX (S)	a	b	.	e
			O	MC1011	8C-CHA-043-010	WINDOW,DISP EX (S)	a	b	c	.
			O	MC1012	8C-CHA-106-010	CABI ASSY,FR EX (L)	.	.	c	.
			X	MC1013	8C-CHA-115-010	CABI,FR EX (L)	.	.	c	.
			O	MC1014	8C-CHA-128-010	WINDOW,CASS EX (L)	.	.	c	.
			X	MC1015	8C-CHA-130-010	GRILLE,SPKR A (L)	.	.	c	.
			X	MC1016	8C-CHA-133-010	GRILLE,SPKR B (L)	.	.	c	.
			O	MC1017	8C-CHL-003-010	WINDOW,DISP EX RC (S)	.	.	.	e
			O	MC1018	8C-CHL-004-010	WINDOW,CASS EX RC	.	.	d	e
			O	MC1019	8C-CHA-012-010	BTN,POWER (S)	a	b	.	e
			O	MC1020	8C-CHA-013-010	BTN,FUNC (S)	a	b	.	e
			O	MC1021	8C-CHA-137-010	BTN,POWER (L)	.	.	c	.
			O	MC1022	8C-CHA-140-010	BTN,FUNC (L)	.	.	c	.
			X	MC1023	87-057-930-010	LBL,CAUTION TRIANG	a	b	c	e
			X	MC1024	87-057-995-010	LBL,CAUTION EFSD	a	b	c	e
			X	MC1025	87-B40-154-010	LBL,BAR-CODE CU	a	b	c	e
			X	MC1026	87-B40-281-010	LBL,BAR-CODE A 35X8	a	b	c	e
			X	MC1027	8A-CH2-072-010	LBL,CAUTION CASS.EX	a	b	c	e
			X	MC1028	8C-CHA-044-010	LBL,SPEC TD29 K	a	.	.	.
			X	MC1029	8C-CHA-051-010	LBL,SPEC TD29 EZ	.	b	.	.
			X	MC1030	8C-CHA-206-010	PLATE,SHLD CASS	a	b	c	e
			X	MC1031	8C-CHL-005-010	LBL,SPEC TD69 K	.	.	.	d
			X	MC1032	8C-CHL-031-010	LBL,SPEC TD69 EZ	.	.	.	e
			O	MC1033	M8-CZK-490-070	KSM-213RDM	a	b	c	d
			X	MC1034	M8-AZM-695-070	AZM-6 YR3NC	a	b	c	d
			O	MC1035	82-NF5-229-010	PLATE,LOCK(*)	a	b	c	d
			O	MC1036	86-CD4-225-110	HLDR,CHUCK A	a	b	c	d
			O	MC1037	86-CT9-222-010	PLATE,MAGNET	a	b	c	d
			O	MC1038	86-NF9-224-010	SPR-C, LOCK	a	b	c	d
			O	MC1039	87-NF4-217-110	HLDR, LOCK 2	a	b	c	d
			O	MC1040	88-CH6-019-010	PANEL, CD	a	b	c	d
			O	MC1041	88-CH6-220-010	CUSHION,CD A	a	b	c	d
			X	MC1042	8B-CDA-204-010	PLATE,ANT	a	b	c	d
			X	MC1043	8B-CDA-209-010	PLATE,PT 2.5W	a	b	c	d
			O	MC1044	8B-CH4-223-010	BASE,CHUCK N	a	b	c	d
			O	MC1045	8C-CH4-212-010	HLDR,DAMP GEAR F/M	a	b	c	d
			O	MC1046	8C-CH4-213-010	GEAR,OIL DAMP F/M	a	b	c	d
			X	MC1047	8C-CHA-201-010	HLDR,PwB TU	a	b	c	d
			X	MC1048	8C-CHA-202-010	HLDR,LCD	a	b	c	d
			O	MC1049	8C-CHA-203-010	SPR-T, CD	a	b	c	d
			O	MC1050	8C-CHA-204-010	SPR-T, CASS	a	b	c	d
			X	MC1051	8C-CHA-205-010	CUSH,DITCH	a	b	c	d
			O	MC1052	8C-CHE-220-010	MAGNET,CD F/M	a	b	c	d
			O	MC1053	87-254-097-410	U+3-12 CR	a	b	c	d
			O	MC1054	87-661-100-010	VFT1+3-16	a	b	c	d
			O	MC1055	87-721-097-410	QT2+3-12 W/O SLOT	a	b	c	d
			O	MC1056	87-745-095-410	UT2+3-8 W/O SLOT NI	a	b	c	d
			O	MC1057	87-751-076-410	VT2+2.6-12	a	b	c	d
			O	MC1058	87-B10-242-010	UT2+3-30 W/O CR	a	b	c	d
			O	MC1059	87-B10-269-010	UT2+3-12 W/O CR	a	b	c	d
			O	MC1060	87-B10-365-010	UT2+3-10 W/O CR	a	b	c	.
			O	MC1061	8A-CK4-223-010	S-SCREW,CD	a	b	c	d
			O	MC1062	87-036-389-010	SW,PUSH 1-1-1 R8120125	a	b	c	d
			O	MC1063	87-099-726-010	PLUG,ADPTR CONV(K)	X .	.	.	d
			O	MC1064	87-A80-081-010	AC CORD SET ASSY,EZ BLK	X a	b	c	d
			X	MC1065	8C-CHA-651-010	SH,PLATE MOT	a	b	c	d
			X	MC1066	8C-CHA-652-010	PLATE,SHIELD	a	b	c	d
			X	MC1067	8C-CHA-653-010	SH,FR EZ	a	b	c	d
			X	MC1068	8C-CHA-654-010	SH,BIAS	a	b	c	d
			X	MC1069	8C-CHA-660-010	CUSH,RUBBER PLATE	a	b	c	d
			O	MC1070	87-099-726-010	PLUG,ADPTR CONV(K)	X a	.	.	.
			O	MC1071	87-A91-857-010	ANT,ROD 5SEC700	a	b	c	d
			O	MC1072	87-A92-285-010	COVER,AC SOCKET COVER PSU27-MC	a	b	c	d
			O	MC1073	8A-CH4-671-010	BAR-ANT,MW/LW 3B-ACH(COI)	a	b	c	d
			O	MC1074	8B-CH4-683-110	HLDR,BER ANT	a	b	c	d
			O	MC1075	8C-CHA-615-010	SPKR,100MM 70HM 2.5W CCHA	a	b	c	d
			O	MC1076	8C-CHA-631-010	FF-CABLE,7P 1.25 FR-TAPE	a	b	c	d
			O	MC1077	8C-CHA-632-010	FF-CABLE,14P 1.25 FR-MAIN1	a	b	c	d
			O	MC1078	8C-CHA-633-010	FF-CABLE,14P 1.25 FR-MAIN2	.	.	.	d
			O	MC1079	8C-CHA-634-010	FF-CABLE,16P 1.0 CD-PU	a	b	c	d
			O	MC1080	8C-CHA-637-010	CONN ASSY,2P CD-D00RSW	a	b	c	d

MECHANICAL PARTS LIST -2/2

!

C

= ⚠SAFTY PARTS

= Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	!	C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL				
						CSD-TD29	CSD-TD29	CSD-TD29	CSD-TD69	CSD-TD69
						KSC	EZSC	EZLC	KSC	EZSC
						a	b	c	d	e
						a	b	c	d	e
						a	b	c	d	e
						a	b	c	d	e
						a	b	c	d	e
						a	b	c	d	e
						a	b	c	d	e
						a	b	c	d	e
						a	b	c	d	e



アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110-8710, JAPAN TEL:03 (3827) 3111
