



ONKYO SERVICE MANUAL

SOLID STATE STEREO PRE MAIN AMPLIFIER

model A-7055

SOLID STATE AM/FM STEREO TUNER

model T-4055

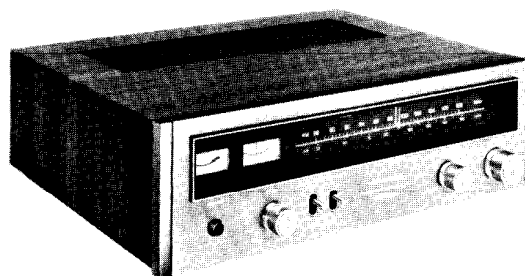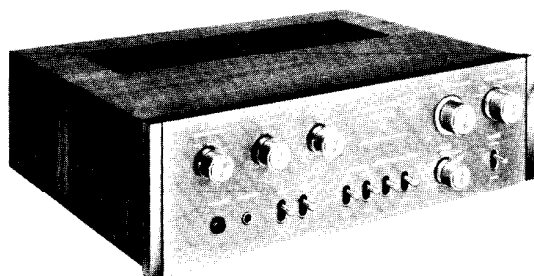

INDEX

Item	Page	Item	Page
model A-7055		model T-4055	
Specifications	1 ~ 2	Specifications	10
Component Locations	2	Component Locations	11
Adjustment of the Idling Current	3	Chassis Layout	12
Caution	3	Dial Cord Arrangement	12
Parts List	4 ~ 5	Alignment Procedure	13~14
Circuit Board-Component Location	6 ~ 7	Caution	14
Circuit Diagram	8 ~ 9	Parts List	15~16
		Circuit Board Component Location	17~18
		Circuit Diagram	20~21
		Line Voltage and Fuse	22
		Packing Procedure	22




model A-7055

SPECIFICATIONS


Main amplifier section		
Power Output, Dynamic	125W (IHF 4Ω) 82W (IHF 8Ω)	VOLUME/BALANCE
Continuous	45W/45W (4Ω each channel driven)	TREBLE
	33W/33W (8Ω each channel driven)	BASS
	36W + 36W (4Ω both channel driven)	FREQUENCY SHIFT SWITCH
	26W + 26W (8Ω both channel driven)	BASS: 400Hz, 125Hz
Total Harmonic distortion	0.1% at Rated Output	TREBLE: 2kHz, 8kHz
	0.03% at 10W Output	LOW FILTER
Intermodulation distortion	0.05% at Rated Output	HIGH FILTER
Frequency Response	10-70,000Hz (+0, -1dB)	LOUDNESS
Power Bandwidth	10-100,000Hz (IHF -3dB, THD 0.2%)	MODE (STEREO-MONO)
Signal to Noise Ratio	110dB (IHF A network)	MUTING
Damping Factor	80	PHONO GAIN (+6dB, NOR, -6dB)
Rated Input	1V	PRE MAIN SEPARABLE SWITCH
Input Impedance	100kΩ	(UNITE-SEPARATE)
Load Impedance	4-16Ω	PHONO-1, PHONO-2,
		TUNER, AUX,
		TAPE PLAY-1, TAPE PLAY-2,
		MAIN IN
Pre amplifier section		Outputs
Input sensitivity	PHONO-1/2: 1.2/2.4/4.8mV (50kΩ)	SPEAKER-A, SPEAKER-B
	TUNER/AUX/TAPE PLAY: 100mV (100kΩ)	TAPE REC-1, TAPE REC-2
Total Harmonic Distortion	0.03% at Rated Output	PRE OUT
Intermodulation Distortion	0.05% at Rated Output	AC OUTLET UNSWITCHED × 2,
Frequency Response	PHONO-1/2: ±0.5dB at	SWITCHED
	30-15,000Hz	PHONES
	TUNER/AUX: 10-70,000Hz	Features
	(+0, -1dB)	2 Phono inputs
Phono Overload	230mV RMS at 1kHz, 1.1V RMS at 10kHz	2 Tape Monitor and Printing
Signal to Noise Ratio	PHONO-1/2: 75dB (IHF A Network)	2dB Step Tone Controller
	TUNER/AUX/TAPE PLAY: 90dB (IHF A Network)	2 Choice of Turn over Frequency
Output Voltage	1V (2, 2kΩ) REC OUT: 100mV (10kΩ)	ASO type protection circuit
Tone Control with 2dB/step Switch and Frequency Shift type		Transient Killer Circuit
Frequency Shift	BASS: 400Hz, 125Hz	Main Amplifier incorporating
	TREBLE: 2kHz, 8kHz	OCL circuit
Bass Control	±5 steps Boost and Cut	Semiconductors
Filter HIGH	7kHz (6dB/oct)	39 TR, 18 Diode, 2 Thermistor
LOW	30Hz (6dB/oct)	Dimension
Muting	-20dB	423W × 136H × 358Dmm. 9.3kg.
Loudness	+5dB at 70Hz	(16 ³ / ₈ " W × 5 ³ / ₈ " H × 14 ¹ / ₈ " D 20.4lbs.)
	+5dB at 10kHz	
Power Supply Rating	AC 110/120/220/240V 50/60Hz	
Controls	POWER	
	SPEAKERS (OFF, A, B, A+B)	
	SELECTOR (AUX, TUNER,	
	PHONO-1, PHONO-2)	
	TAPE MONITOR (PRINT 1-2,	
	TAPE-1, SOURCE, TAPE-2,	
	PRINT 2-1)	

1. COMPONENT LOCATIONS

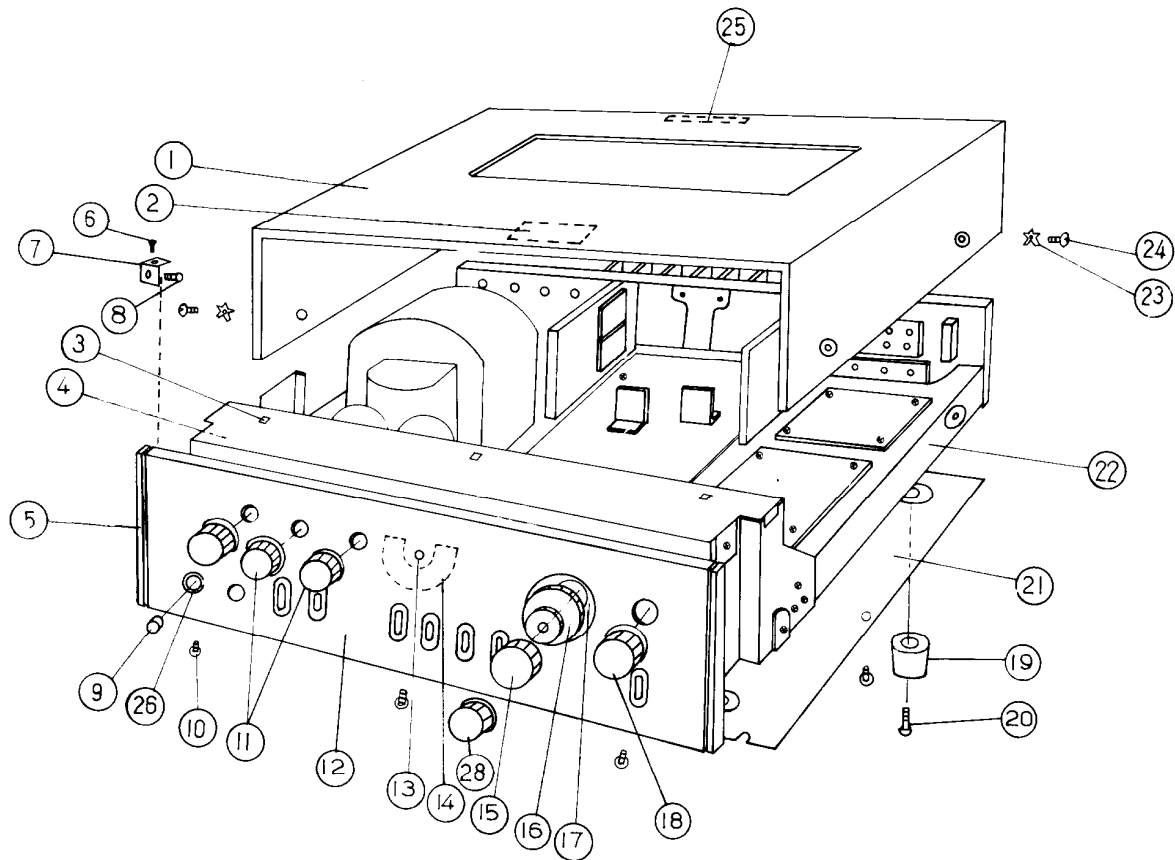

KEY NO.	DESCRIPTION	KEY NO.	DESCRIPTION
1	Amp Box assembly	15	Knob-Volume
2	Soft Block	16	Knob-Balance
3	Front Fiber Board	17	Knob Sheet
4	Front Cover	18	Knob-Selector
5	End Cap	19	Rubber Cushion
6	Flat Screw (3 S + 5 F)	20	Tapping Screw (4 + 12)
7	Joiner	21	Bottom Cover
8	Pan head Screw (3 P + 8 F)	22	Chassis
9	Knob Push Switch	23	Toothed Lock Washer
10	Binder Screw (3 + 6)	24	Truss Screw (4 + 20)
11	Knob-Tone	25	Soft Block
12	Front Panel	26	Knob Guide
13	Facet	28	Knob-Tape
14	Soft Block		

2. ADJUSTMENT OF THE IDLING CURRENT

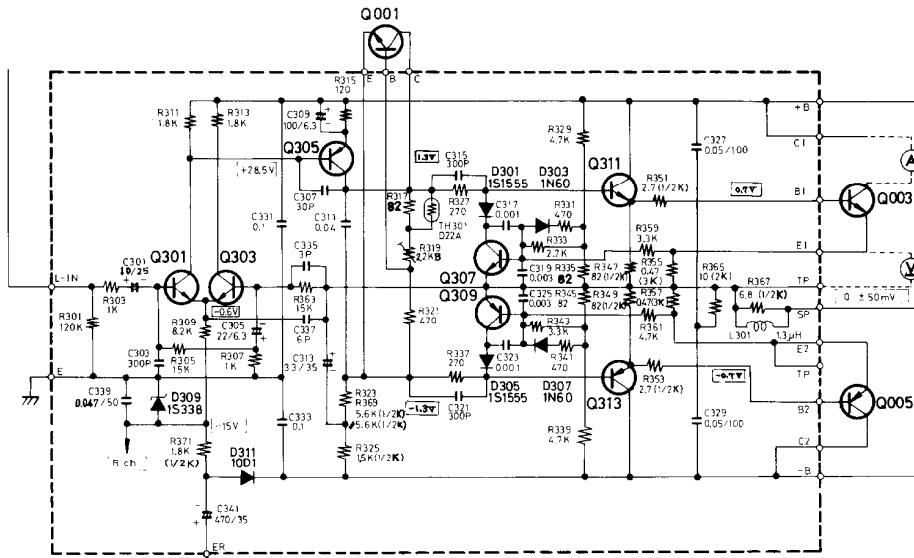

Instrument required; DC Ammeter 50mA or 100mA

When replacing POWER transistor(Q003, Q004, Q005, Q006) or DRIVER transistor(Q311, Q312, Q313, Q314), check the idling current of POWER transistor.

To adjust to normal value($35 \pm 5\text{mA}$), proceed as follows:
(Lch)

- (1) Cut the connection between B+ and collector of Q003 on Main Amp. assembly and connect DC Ammeter.
- (2) Adjust the current to ($35 \pm 5\text{mA}$) with R319.
- (3) After adjusting, connect original wiring.

If a DC voltmeter(50mV) or VTVM is available, connect the voltmeter between E1 and TP.

Adjust the voltage between 15 and 20mV with R319.

(Rch)

Using R320, adjust in the same manner as indicated above.

*Note: Volume—Minimum. Open Load.

3. CAUTION

If there is an abnormal rise in the inside cabinet temperature, the thermal switch will cut off the AC power.

If this occurs, turn off the power switch.

Let the unit cool off approximately 30 minutes.

Then begin repair procedure.

After repairs are completed, turn on the power switch.


(Abnormal operation indicates operation with a load below 4 ohms, or operation under conditions of high power and insufficient air circulation.)

4. PARTS LIST

CIRCUIT NO.	DESCRIPTION	SPECIFICATION	QTY	STOCK NO.	
U 1	Equalizer Amp assembly	NAEQ-185	1	12969585	
U 2	Tone Amp assembly	NATC-186	1	12969586	
U 3	Main Amp assembly	NAMA-187	1	12969587	
U 4	Power Supply assembly	NAFI-188	1	12969588	
Q001, Q002	Transistor	2SC828(S)	2	2210033	
Q003, Q004	"	2SD188M(orN)	2	2200052or2200053	
Q005, Q006	"	2SA627M(orN)	2	2200062or2200063	
D001	Silicon Diode	5B3	1	223810	
	Pilot Lamp	6.3V 0.15A	1	210003	
T001	Transformer-Power	NPT-542ADGQ	1	230048	
C007, C009	Electrolytic	CE62W35V4700 μ F	2	3504030A	
R011, R012 R015, R016	Variable Resistor	N24RDG500KMN250KB2T	1	5104006	(Double gang)
S 1	Switch-Rotary	NRS-284-20Y	1	250114	(Selector)
S 3	"	NRS-465-20Y	1	250115	(Tape monitor)
S8, S9	"	NRS-2211-20Yb	2	250117	(Tone)
S13	"	NRS-124-20Y	1	250118-1	(Speakers)
S2	Switch-Slide	NSS-2323	1	250121	(Equalizer sensitivity)
S12	"	NSS-4224	1	250122	(Pre-main)
S4, S5, S10 S11, S15	Switch-Lever	NLS-122-29-SL	5	250119-1	(Loudness, Muting) (Mode, Filters)
S14	Switch-Power	NPS-111LA2	1	250157	(Power)
S6, S7	Switch-Lever	NLS-142-29-SL	2	250120-1	(Frequency shift)
	Socket-Pilot Lamp	VE-0202	1	250124	
	Socket-Transistor	SA-3905	4	250144	
	Jack-Stereo Head Phone	3P64M	1	250126	
	Fuse	2A-T	2	252002	(AC line)
	"	2.5A-T(A)	4	252008	(B \pm)
	"	1.5A-T	1	252007	(Lamp)
	Bottom cover		1	270295	
	Rubber Cushion		4	280379	
	Slim Cloth Piece		1	270560	
	Front Panel		1	280707	
	End Cap		2	280367	
	Facet		1	280375	
	Knob Sheet		1	280377	
	Soft Block		2	270559	
	Rating Plate		1	282974	
	Knob-Volume		1	283063	
	Knob-Balance		1	283064-1	
	Knob-Selector		1	283062	
	Knob-Tone(Speakers, Tape monitor)		4	283061	
	Knob-Push Switch		1	283071	
	Knob Guide		1	280374	
	Joiner		4	280376	
	Amp Box assembly		1	280708	
	Master Carton Box		1	290332	
	Side Pad		2	290203	
	Fuse	4A-T	2	252014	(AC line)
NAEQ-185					
Q101, Q102	Transistor	2SA493(GR)	2	2210235	
Q103, Q104		2SC1000(0-1)	2	2210280	
Q105, Q106		2SC853(K)	2	2210290	

PARTS LIST

CIRCUIT NO.	DESCRIPTION	SPECIFICATION	QTY	STOCK NO.
D101, D102	Silicon Diode	1S1555	2	223105
C127	Capacitor-Electrolytic	CE04W 25V220 μ F	1	352752211A
C107, C108	"	CE04W6.3V47 μ F	2	352724701A
C111, C112	"	CE04W 6.3V100 μ F	2	352721011A
C113, C114	"	CE04W 25V22 μ F	2	352752201A
C101, C102	Capacitor-Aluminum Electrolytic	AL0413 16V2.2 μ F	2	3500002A
NATC-186				
Q201 ~ Q204	Transistor	2SA493(GR)	4	2210235
Q205, Q206	"	2SC10000(0-1)	2	2210280
Q207, Q208	"	2SC733(GR)	2	2210085
Q 209	"	2SC734(0-1)	1	2210060
D201, D203	Silicon Diode	1S1554	2	223106
C205, C206	Capacitor-Electrolytic	CE04W6.3V100 μ F	2	352721011A
C211, C212	"	" 16V47 μ F	4	352744701A
C234, C235	"	" 25V0.47 μ F	2	352754791A
C201, C202	"	" 25V220 μ F	1	352752211A
C237	"	" 25V220 μ F	1	352752211A
C231, C232	Capacitor-Super	SP25V2.2 μ F	4	3504014A
C229, C230	"	SNP25V2.2 μ F	2	3504015A
C233, C234	" Bipolar	SNP25V2.2 μ F	2	3504015A
NAMA-187				
Q301 ~ Q304	Transistor	2SC1000(0-1)	4	2210280
Q305, Q306	"	2SA706(0-0211)or(52)	4	2200033or2200032
Q313, Q314	"	2SC735(GR)	2	2210245
Q307, Q308	"	2SA562(GR)	2	2210255
Q309, Q310	"	2SC1124(2)	2	2200016
Q311, Q312	"	1S1555	4	223105
D301, D302	Silicon Diode	10D1	2	223801
D305, D306	"	1S338orYZ-147	1	223914
D311, D312	Zener Diode	1N60(N)FM	4	2231031
D309	Germanium Diode	S-1.3B	2	231001
D303, D304	Coil-Compensation	SP25V10 μ F	2	3504021A
D307, D308	Capacitor-Super	CE04W6.3V22 μ F	2	352722201A
L301, L302	Capacitor-Electrolytic	" 6.3V100 μ F	2	352721011A
C301, C302	"	" 35V33 μ F	2	352763301A
C305, C306	"	" 35V470 μ F	1	352764711A
C309, C310	"	R-HK 2.2KB	2	5225005
C313, C314	Resistor-Semi Fixed	D-22A	2	4000003
C341	Thermistor		2	270187
R319, R320	Radiator		6	
TH301				
TH302				
NAFI-188				
Q401, Q407	Transistor	2SD235(O)or(Y)	2	2200014or2200013
Q403	"	2SC828(S)	1	2210033
Q405	"	2SA561(Y)	1	2210074
D403	Silicon Diode	10DC 2 R	1	223813
D405	"	10D1	1	223801
D401	Zener Diode	BZ-192	1	223913
C405	Capacitor-Electrolytic	CE04W 25V47 μ F	1	352754701A
C401	"	" 35V220 μ F	3	352762211A
C407, C409	"	" 35V100 μ F	1	352761011A
C411	"	" 25V220 μ F	2	352752211A
C403, C413	"	" 25V220 μ F	2	352752211A
	Radiator		2	270187
	Fuse Holder	S-N5051	2	250113

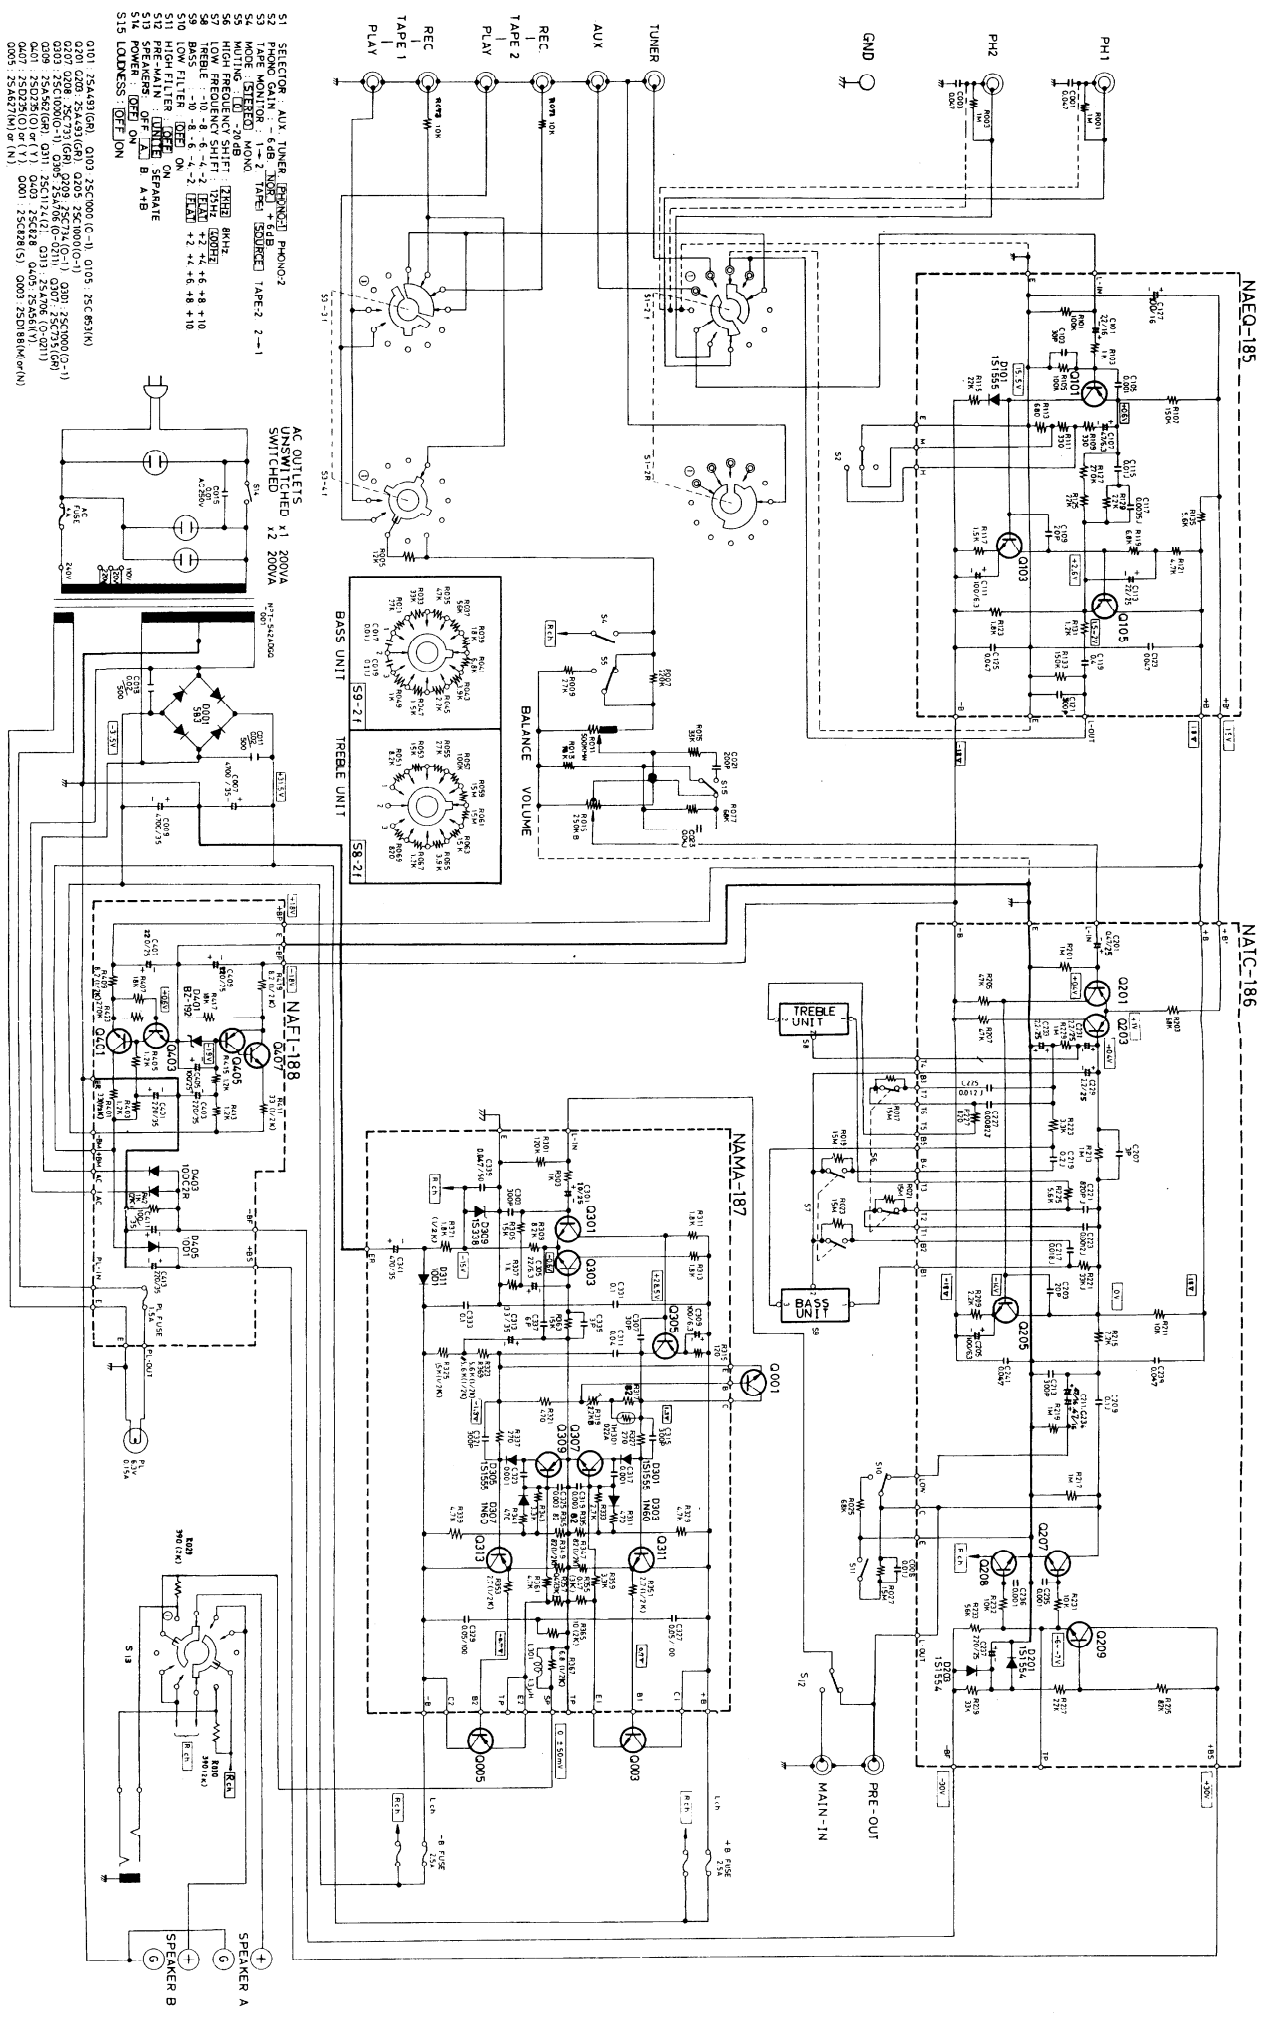

- S1 SELECTOR: AUX, TAPE, (RESERVED), PHONO-2
- S2 PHONO GAIN: 100, 200, 300, 400, 500, 600, 700, 800, 900, 1000
- S3 TAPE MONITOR: 1-2 TAPE (RESERVED) TAPE-2 -1
- S4 MODE: (STEREO) MONO
- S5 HIGH FREQUENCY SHIFT: 7.5KHz 8kHz
- S6 LOW FREQUENCY SHIFT: 7.5KHz 8kHz
- S7 BASS: -8 -6 -4 -2 0 2 4 6 8 +10
- S8 TREBLE: -8 -6 -4 -2 0 2 4 6 8 +10
- S9 LOW FILTER: OFF ON
- S10 HIGH FILTER: OFF ON
- S11 SPEAKERS: OFF LEFT B A+B
- S12 POWER: OFF ON
- S13 ADDRESS: OFF ON

AC OUTLETS
 UNCHANGED 1 200VA
 SWITCHED 2 200VA

0101 354.81(GN) 0103 25C000(C-N) 0105 25C051(K)
 0201 0208 25C733(GR) 0202 25C734(GR) 0203 25C735(GR)
 0204 25C736(GR) 0205 25C737(GR) 0206 25C738(GR)
 0207 25C739(GR) 0208 25C740(GR) 0209 25C741(GR)
 0210 25C742(GR) 0211 25C743(GR) 0212 25C744(GR)
 0213 25C745(GR) 0214 25C746(GR) 0215 25C747(GR)
 0216 25C748(GR) 0217 25C749(GR) 0218 25C750(GR)
 0219 25C751(GR) 0220 25C752(GR) 0221 25C753(GR)
 0222 25C754(GR) 0223 25C755(GR) 0224 25C756(GR)
 0225 25C757(GR) 0226 25C758(GR) 0227 25C759(GR)
 0228 25C760(GR) 0229 25C761(GR) 0230 25C762(GR)
 0231 25C763(GR) 0232 25C764(GR) 0233 25C765(GR)
 0234 25C766(GR) 0235 25C767(GR) 0236 25C768(GR)
 0237 25C769(GR) 0238 25C770(GR) 0239 25C771(GR)
 0240 25C772(GR) 0241 25C773(GR) 0242 25C774(GR)
 0243 25C775(GR) 0244 25C776(GR) 0245 25C777(GR)
 0246 25C778(GR) 0247 25C779(GR) 0248 25C780(GR)
 0249 25C781(GR) 0250 25C782(GR) 0251 25C783(GR)
 0252 25C784(GR) 0253 25C785(GR) 0254 25C786(GR)
 0255 25C787(GR) 0256 25C788(GR) 0257 25C789(GR)
 0258 25C790(GR) 0259 25C791(GR) 0260 25C792(GR)
 0261 25C793(GR) 0262 25C794(GR) 0263 25C795(GR)
 0264 25C796(GR) 0265 25C797(GR) 0266 25C798(GR)
 0267 25C799(GR) 0268 25C800(GR) 0269 25C801(GR)
 0270 25C802(GR) 0271 25C803(GR) 0272 25C804(GR)
 0273 25C805(GR) 0274 25C806(GR) 0275 25C807(GR)
 0276 25C808(GR) 0277 25C809(GR) 0278 25C810(GR)
 0279 25C811(GR) 0280 25C812(GR) 0281 25C813(GR)
 0282 25C814(GR) 0283 25C815(GR) 0284 25C816(GR)
 0285 25C817(GR) 0286 25C818(GR) 0287 25C819(GR)
 0288 25C820(GR) 0289 25C821(GR) 0290 25C822(GR)
 0291 25C823(GR) 0292 25C824(GR) 0293 25C825(GR)
 0294 25C826(GR) 0295 25C827(GR) 0296 25C828(GR)
 0297 25C829(GR) 0298 25C830(GR) 0299 25C831(GR)
 0300 25C832(GR) 0301 25C833(GR) 0302 25C834(GR)
 0303 25C835(GR) 0304 25C836(GR) 0305 25C837(GR)
 0306 25C838(GR) 0307 25C839(GR) 0308 25C840(GR)
 0309 25C841(GR) 0310 25C842(GR) 0311 25C843(GR)
 0312 25C844(GR) 0313 25C845(GR) 0314 25C846(GR)
 0315 25C847(GR) 0316 25C848(GR) 0317 25C849(GR)
 0318 25C850(GR) 0319 25C851(GR) 0320 25C852(GR)
 0321 25C853(GR) 0322 25C854(GR) 0323 25C855(GR)
 0324 25C856(GR) 0325 25C857(GR) 0326 25C858(GR)
 0327 25C859(GR) 0328 25C860(GR) 0329 25C861(GR)
 0330 25C862(GR) 0331 25C863(GR) 0332 25C864(GR)
 0333 25C865(GR) 0334 25C866(GR) 0335 25C867(GR)
 0336 25C868(GR) 0337 25C869(GR) 0338 25C870(GR)
 0339 25C871(GR) 0340 25C872(GR) 0341 25C873(GR)
 0342 25C874(GR) 0343 25C875(GR) 0344 25C876(GR)
 0345 25C877(GR) 0346 25C878(GR) 0347 25C879(GR)
 0348 25C880(GR) 0349 25C881(GR) 0350 25C882(GR)
 0351 25C883(GR) 0352 25C884(GR) 0353 25C885(GR)
 0354 25C886(GR) 0355 25C887(GR) 0356 25C888(GR)
 0357 25C889(GR) 0358 25C890(GR) 0359 25C891(GR)
 0360 25C892(GR) 0361 25C893(GR) 0362 25C894(GR)
 0363 25C895(GR) 0364 25C896(GR) 0365 25C897(GR)
 0366 25C898(GR) 0367 25C899(GR) 0368 25C900(GR)
 0369 25C901(GR) 0370 25C902(GR) 0371 25C903(GR)
 0372 25C904(GR) 0373 25C905(GR) 0374 25C906(GR)
 0375 25C907(GR) 0376 25C908(GR) 0377 25C909(GR)
 0378 25C910(GR) 0379 25C911(GR) 0380 25C912(GR)
 0381 25C913(GR) 0382 25C914(GR) 0383 25C915(GR)
 0384 25C916(GR) 0385 25C917(GR) 0386 25C918(GR)
 0387 25C919(GR) 0388 25C920(GR) 0389 25C921(GR)
 0390 25C922(GR) 0391 25C923(GR) 0392 25C924(GR)
 0393 25C925(GR) 0394 25C926(GR) 0395 25C927(GR)
 0396 25C928(GR) 0397 25C929(GR) 0398 25C930(GR)
 0399 25C931(GR) 0400 25C932(GR) 0401 25C933(GR)
 0402 25C934(GR) 0403 25C935(GR) 0404 25C936(GR)
 0405 25C937(GR) 0406 25C938(GR) 0407 25C939(GR)
 0408 25C940(GR) 0409 25C941(GR) 0410 25C942(GR)
 0411 25C943(GR) 0412 25C944(GR) 0413 25C945(GR)
 0414 25C946(GR) 0415 25C947(GR) 0416 25C948(GR)
 0417 25C949(GR) 0418 25C950(GR) 0419 25C951(GR)
 0420 25C952(GR) 0421 25C953(GR) 0422 25C954(GR)
 0423 25C955(GR) 0424 25C956(GR) 0425 25C957(GR)
 0426 25C958(GR) 0427 25C959(GR) 0428 25C960(GR)
 0429 25C961(GR) 0430 25C962(GR) 0431 25C963(GR)
 0432 25C964(GR) 0433 25C965(GR) 0434 25C966(GR)
 0435 25C967(GR) 0436 25C968(GR) 0437 25C969(GR)
 0438 25C970(GR) 0439 25C971(GR) 0440 25C972(GR)
 0441 25C973(GR) 0442 25C974(GR) 0443 25C975(GR)
 0444 25C976(GR) 0445 25C977(GR) 0446 25C978(GR)
 0447 25C979(GR) 0448 25C980(GR) 0449 25C981(GR)
 0450 25C982(GR) 0451 25C983(GR) 0452 25C984(GR)
 0453 25C985(GR) 0454 25C986(GR) 0455 25C987(GR)
 0456 25C988(GR) 0457 25C989(GR) 0458 25C990(GR)
 0459 25C991(GR) 0460 25C992(GR) 0461 25C993(GR)
 0462 25C994(GR) 0463 25C995(GR) 0464 25C996(GR)
 0465 25C997(GR) 0466 25C998(GR) 0467 25C999(GR)
 0468 25C1000(GR)



0DC VOLTAGE (V) MEASURED WITH DC VTVM TO CHASSIS
 ALL RESISTORS ARE IN Ω UNLESS OTHERWISE NOTED.
 ALL CAPACITORS ARE IN pF UNLESS OTHERWISE NOTED.
 ELECTROLYTIC CAPACITORS (-) ARE IN μF/WV

model T-4055

SPECIFICATIONS


Tuning Range	FM:88-108MHz AM:530-1605kHz	LEVEL
Sensitivity	FM:1.7 μ V(IHF) AM:20 μ V,150 μ V/m	MUTING
Intermediate Frequency	FM:10.7MHz AM:455kHz	NOISE FILTER
Capture Ratio	FM:1.2dB	AUDIBLE SWITCH(MULTIPATH)
Image Rejection Ratio	FM:90dB(108MHz) AM:50dB(1MHz)	Antenna
IF Rejection Ratio	FM:95dB(98MHz) AM:33dB(1MHz)	FM:300 & 75ohm AM:Ferrite Core antenna
AM Suppression Ratio	FM:55dB	Outputs
Signal to Noise Ratio	FM:70dB(IHF) AM:50dB(30%,1mV input)	OUTPUT FIXED & VARIABLE
Alternate Channel Att.	FM:80dB	FM DET
Harmonic Distortion	FM MONO:0.2% AM:0.5%	Inputs
	FM ST :0.5%	MULTIPATH-OSCILLOSCOPE VERT. HOR.
Frequency Response	FM:20-15,000Hz(+0, -2dB)	FM ANTENNA 300ohm, 75ohm, 75ohm M type Connector
MPX Separation	FM:40dB(400Hz), 35dB(100-10,000Hz)	AM ANTENNA
Carrier Leakage	FM: -70dB	Special Features
Output Impedance	2,5k Ω (Fixed), 1.5k Ω (Variable Max)	2 MOS FET, 4 Ganged Variavle Capacitor and
Output Variable	FM:0-2V AM:0-0.6V	Linear Scale Front End
Fixed	FM:0.75V AM:0.2V	2 Tuning Meters(Strength and Center tuning)
Power Supply Rating	AC110/120/220/240V 50/60Hz	Multipath Terminal W/Audible Switch
Controls	POWER	Blight Dial and Illuminated Pointer
	TUNING	75ohm M type Connector
	SELECTOR(AM-FM AUTO-FM MONO)	FM DET terminal for 4 Channel receiving
		Semiconductors
		39 TR.(2 FET) 36 Diode
		Dimension
		423W×355D×136Hmm 7.6kgr.
		(16 5/8"W×14"D×5 3/8"H 16.7lbs.)

1. COMPONENT LOCATIONS

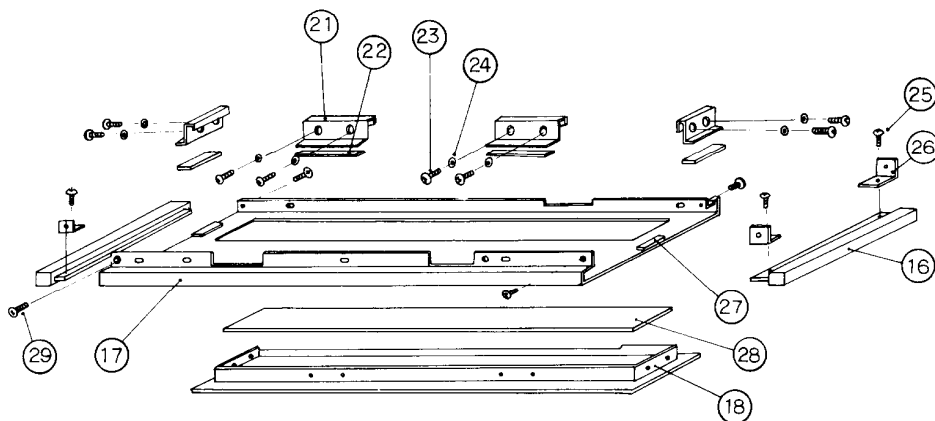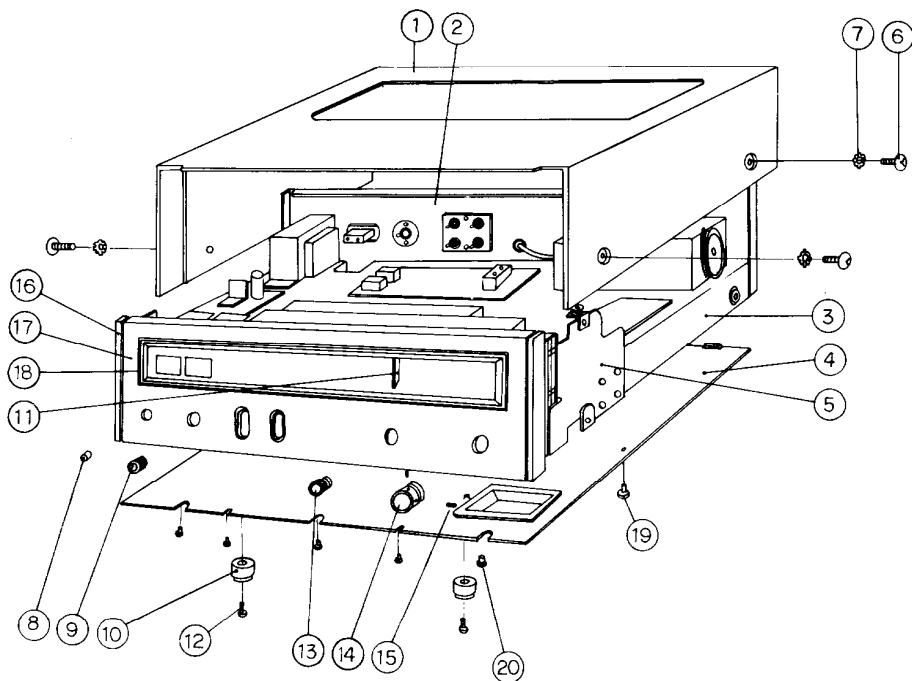


KEY NO.	DESCRIPTION	KEY NO.	DESCRIPTION
1	Amp Box assembly	16	End Cap
2	Rear Panel	17	Front Panel
3	Chassis	18	Dial Flame
4	Bottom Cover	19	Toothed Lock Screw(8W3P+6F)
5	Side Bracket	20	Binder Screw(3B+6F-N)
6	Truss Screw(3T+10F-N)	21	Flame Holder
7	Toothed Lock Washer(M5×AB)	22	Neoprene Sheet
8	Knob-Push Switch	23	Pan Screw(3P+4-N)
9	Knob-Tone(LEVEL)	24	Washer(W3×8B)
10	Rubber Cushion	25	Pan Screw(3P+8F-N)
11	Dial Pointer	26	Joiner
12	Tapping Screw	27	Fiber Board
13	Knob-Selector	28	Glass Plate
14	Knob-Tuning	29	Flat Screw(3S+5F-N)
15	Screw(M4×10)		

2. CHASSIS LAYOUT

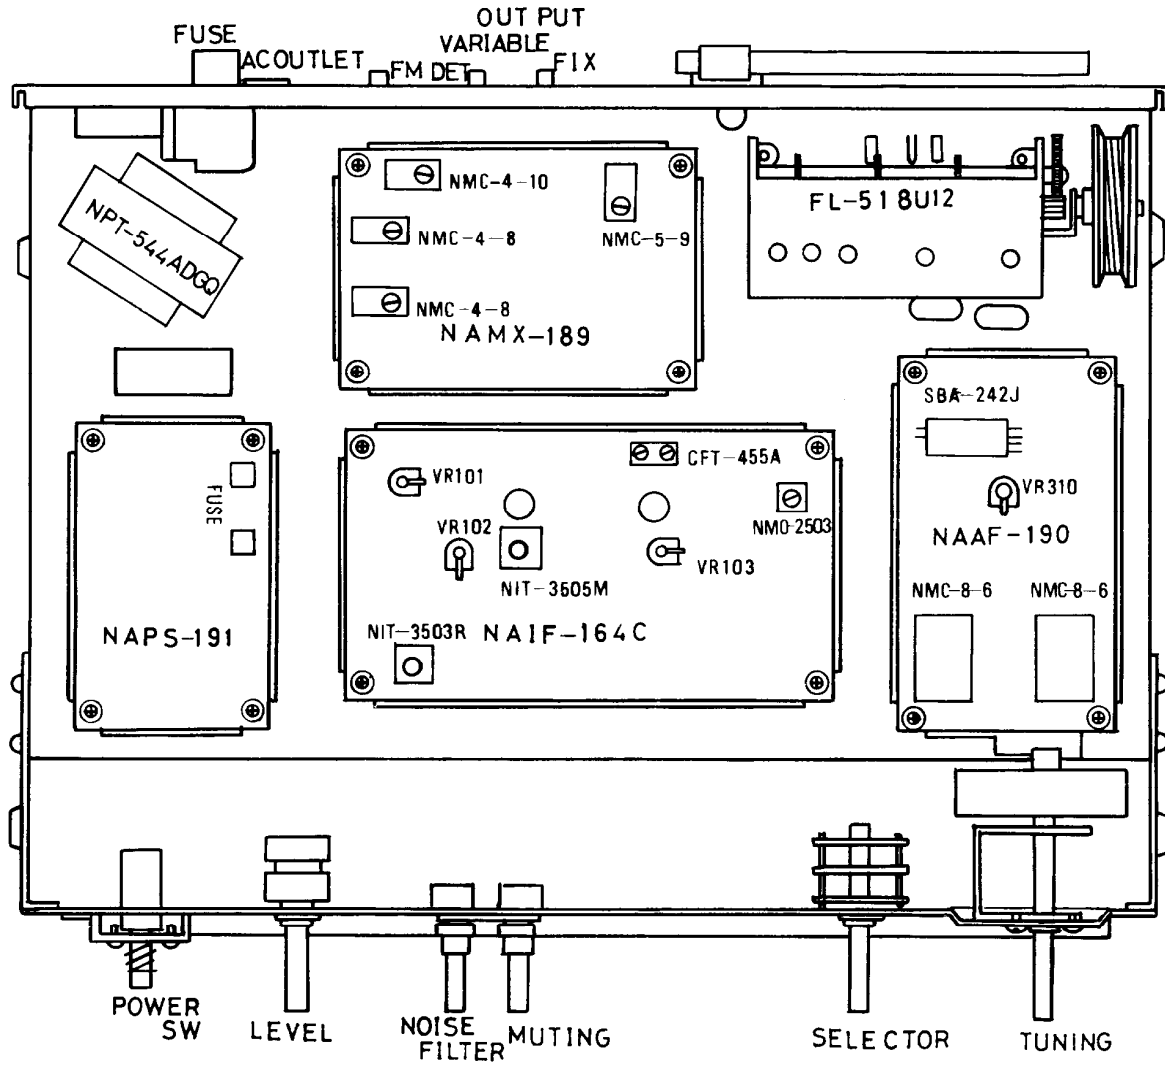

3. DIAL CORD ARRANGEMENT

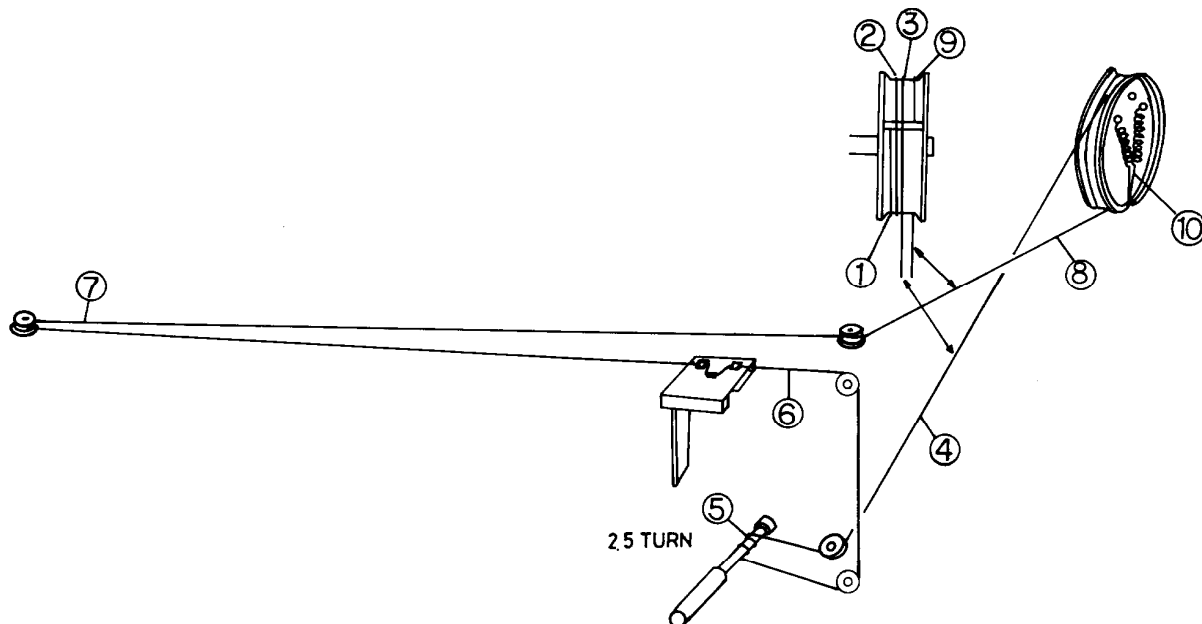

4. ALIGNMENT PROCEDURE

INSTRUMENT REQUIRED

1. AM and FM sweep generator
2. AM and FM signal generator
3. Vacuum tube voltmeter (V. T. V. M.) AC/DC
4. Oscilloscope
5. Distortion meter
6. Stereo Modulator

GENERAL ALIGNMENT CONDITIONS

1. Signal input should be kept low as possible.
2. Standard modulation is 400Hz 30% (AM)
400Hz 100% (FM.MONO), pilot 10% Sub & Main 90% (FM.ST)
3. Standard output is 500mW (2.0V, 8 Ω)

STEP	CONNECT SIGNAL SOURCE TO-	SET SIGNAL TO-	CONNECT OUTPUT INDICATOR TO-	SET RADIO DIAL TO-	ADJUST	ADJUST FOR	REMARKS	STEP
1	Set Radio Selector Switch to "AM"							1
2	AM Sweep Generator to- AM Ant.	455KHz	Oscilloscope to- across "AM OUT" terminal (NAIF-164C)	Quiet Point on Band	CFT 455A	Maximum Symmetrical response	Usually not necessary to adjust	2
3	AM Signal generator to- AM Ant. through a standard radiating loop	515KHz (modulated)	V. T. V. M. or oscilloscope to- across "VARIABLE" terminal	Lower end	NMO 2503 'Red'	Maximum	Repeat steps 3 and 4 as necessary to obtain Maximum sensitivity on stations	3
4		1680KHz (modulated)		Upper end	AM Trimmer (OSC. side)	Maximum		4
5	"	600KHz (modulated)	"	600KHz (Tuned to Signal)	NMA-2507 (Coil Antenna)	Maximum	Repeat steps 5 and 6 as necessary	5
6		1400KHz (modulated)		1400KHz (Tuned to Signal)	AM Trimmer (Ant. side)	Maximum		6
7	Set Radio Selector Switch to "FM" Set Muting Switch to "OFF"							7
8	FM Sweep Generator to- TP terminal on FM Tuner	± 0.3 MHz Sweep Centered at 10.7MHz	Oscilloscope to- across "FMOUT" terminal (NAIF-164C)	Quiet Point on Band	NIT-3503R Top Bottom	Maximum "S" curve Lineality	Not necessary to adjust for Symmetrical response or Zero Voltage	8
9	"	"	Oscilloscope to- across "SQL" terminal (NAIF-164C)	"	NIT-3505M Top	Symmetrical response		9
10	FM Signal Generator to- across FM Ant. terminal through a matching network	88MHz (100% Mod.)	V. T. V. M. to- across "VARIABLE" terminal	88MHz	LO on FM Tuner	Maximum	Repeat Steps 10 and 11 as necessary	10
11		108MHz (100% Mod.)		108MHz	TCO on FM Tuner	Maximum		11
12		90MHz (100% Mod.)		Tuned to Signal	LA LR (2 points) on FM Tuner	Maximum	Repeat Steps 12 and 13 as necessary	12
13		106MHz (100% Mod.)		"	TCA TCR (2 points) on FM Tuner	Maximum		13
14	No Signal		Tuning Indicator may be used as the output indicator	Quiet Point Where FM Signals are not received	NIT-3503R Top	The needle of tuning indicator comes to the center		14
15	FM Signal Generator to- across FM Ant. terminal through a matching network	98MHz (100% Mod.)	Distortion meter to- across "VARIABLE" terminal	Tuned to Signal	NIT-3503R Bottom	Minimum Distortion	Less than 0.2%	15
16					NIT-3505M	Minimum		16

STEP	CONNECT SIGNAL SOURCE TO-	SET SIGNAL TO-	CONNECT OUTPUT INDICATOR TO-	SET RADIO DIAL TO-	ADJUST	ADJUST FOR	REMARKS	STEP
17	Set Radio Selector Switch to "FM"		Set Muting Switch to "ON"					17
18	"	"	Oscilloscope to across "VARIABLE" terminal	Tuned and Detuned to Signal	Variable Resistor VR102	No noise when Detuned but less effective for Signal Output when tuned	Signals are not necessarily Squelching by turning VR102 counterclockwise	18
19	Set Radio Selector Switch to "FM AUTO"		Set Muting Switch to "OFF"					19
20	"	98MHz (Pilot Sig. 19KHz 10%) 1mV input	V. T. V. M. to - across TP terminal (NAMX 189)	Tuned to Signal	NMC - 4-8 (2 points) NMC-4 -10	Maximum		20
21	"	98MHz (Pilot Sig. 19KHz 10%) 10KHz R ch 90%	V. T. V. M. to - across "VARIABLE" terminal (R ch)	"	NMC 4-8 NMC-4 10 NMC5-9	Maximum		21
22	"	98MHz (Pilot Sig. 19KHz 10%) 1KHz R ch 90%	"	"	NMC-5-9	Maximum		22
23	"	98MHz (Pilot Sig. 19KHz 10%) Main & Sub Sig. 1KHz L ch 90%	" (R ch)	"	Variable Resistor R310	Minimum	Retouch slightly Repeat Steps 23 and 24 as necessary	23
24	"	" R ch 90%	" (L ch)	"	"	"		24

The movement of Signal Indicator may be adjusted by Variable Resistor VR101(AM) or VR103(FM)

5. CAUTION

(1) Muting relay(S7)

The muting relay switch (S7) is stored in the slender glass tube. Any twisting of leads will easily damage the relay and can easily cause the glass tube to crack. It is important to isolate the relay from shock and lead twists.

Do not cut the lead wire as it causes undesirable effects to the function of muting switch at actuating current.

(2) Tuning meter adjustment.

Adjust the Tuning meter to the center position using the variable transformer (NIT-3503R).

When changing or adjusting this variable transformer, check distortion factor, separation and muting balance.

(3)

This tuner has been factory set a de-emphasis rating of $50\mu s$.

If the local de-emphasis rating is $75\mu s$ (mainly in the USA), open the bottom cover and push the slide switch is adjacent to the front end to $75\mu s$.

For USA shipment, this tuner has been set a de-emphasis rating of $75\mu s$ before shipment.

6. PARTS LIST

CIRCUIT NO.	DESCRIPTION	SPECIFICATION	QTY	STOCK NO.	
U 1	FM Front End	FL-518U12	1	240017	
U 2	IF Amp assembly	NAIF-164C	1	13969564C	
U 3	MPX assembly	NAMX-189	1	13969589	
U 4	Audio Amp assembly	NAAF-190	1	13969590	
U 5	Power Supply assembly	NAPS-191	1	13969591	
D001	Silicon Diode	10D1	1	223801	
	Pilot lamp	6.3V0.25A	6	210001	
	"	6.3V0.05AW-2	1	210014	
	"	6.3V0.05AW-3	2	210015	
	"	6.3V0.05AW-3S	1	210016	
T901	Transformer-Power	NPT-544ADGQ	1	230047	
T002	Coil-Antenna	NMA-2507(UL)	1	232018	
T001	Transformer-Balloon	NBLN-1	1	233026	
C002	Electrolytic	CE02D16V1 μ F	1	351340101A	
C005	"	CE02D25V33 μ F	1	351353301A	
VR004 VR005	Variable Resistor	N24RG10KB35	1	5172010	
S 2	Switch-Rotary	NRS-263-35-Y-A	1	250135	(Selector)
S 3, 4	Switch-lever	NLS-122-29-S1	2	250119-1	(Muting Noise Filter)
S 5, S 6	Switch-Slide	NSS-2225	2	250142	(Audible De-emphasis)
S 1	Switch-Power	NPS-1221.N2	1	250149	(Power)
	Socket-Pilot Lamp	PLS-G1	6	213002	
	Fuse	0.5A-T	2	252023	(AC line)
	"	2A-T	1	252002	(Lamp)
	"	0.5A T	1	252030	
	Tuning Indicator	NIND-0200S21	1	243012	S METER
	"	NIND-0200S22	1	243013	T METER
	Dial Drum		1	270220-1	
	Drive Shaft assembly	G-3	1	270349	
	Slide Switch Bracket		1	270536	
	Dial Plate		1	270537	
	Back Plate		1	270321-1	
	Rating Plate				
	Dial Pointer		1	270273	
	Dial Pointer Case		1	270172-2	
	Front Panel		1	280692	
	Glass Plate		1	280395	
	Dial Flame		1	280394	
	End Cap		2	280367	
	Bottom cover		1	270324-1	
	Rubber Cushion		4	280379	
	Knob-Tone (LEVEL)		2	283061	
	Knob-Tuning		1	280420	
	Knob-Push Switch		1	283066	
	Amp Box assembly		1	280693	
	Master Carton Box		1	290331	
	Side Pad		2	290203	
	FM ANT AS	TFD-2US	1	253071	
	Fuse	1A-T	2	252001	
					(AC line)
NAIF-164C					
Q101 ~ Q110 Q151, Q153 Q171 ~ Q174	Transistor	2SC380(0)	16	2210122	
D101 ~ D104 D108 ~ D109	Silicon Diode	1S1555	6	223105	
D105 ~ D106 D151 ~ D157 D171, D173, D175, D176	Germanium Diode	1N60(N)FM	13	2231031	

PARTS LIST

CIRCUIT NO.	DESCRIPTION	SPECIFICATION	QTY	STOCK NO.	
CH101 ~ CH104	Transformer-IF	NIT-3503R	1	233022	
	"	NIT-3503M	1	233023	
	"	NIT-5501D	1	232012	
	Coil-OSC	NMO-2503	1	232013	
	Coil-Choke	NCCH-1501	4	233024	
	Ceramic Filter	CFT-455A	1	3010001	
	CF1 ~ CF3	"	CF-10M-12	3	3010002
	C180, C194	Capacitor-Electrolytic	CE04W16V100 μ F	2	358341011
	C113	"	" 16V10 μ F	3	358341001
	C120, C157	"	" 16V0.47 μ F	1	358344791
	C192	"	" 6.3V100 μ F	1	358321011
	C196	"	" 6.3V33 μ F	1	358323301
	C154	"	" 16V3.3 μ F	1	352740331A
	C193	"	"	1	352740331A
	CR-1, CR-2 CR-151, CR-153	CR Composite	B44TS-1	4	3020001
CR-3 ~ CR-6	"	B44TS-2	4	3020002	
VR101 VR103	Resistor-Semi Fixed	R-HK10KB3L	2	5245002	
VR102	"	R-HK100KB3L	1	5245003	
NAMX-189					
Q201 ~ Q205 Q207 ~ Q211	Transistor	2SC733(GR)	10	2210082	
Q206	"	2SC734(Y)	1	2210064	
D201 ~ D205 D207 ~ D210	Germanium Diode	1N60(N)FM	9	2231031	
	Coil-MPX	NMC-4-8	2	233016	
	"	NMC-4-10	1	233017	
	"	NMC-4-11	2	233018	
	"	NMC-5-9	1	233019	
	"	NMC-6-6	1	233020	
L201	Coil-Choke	NCCH-1503	1	233025	
C222	Capacitor-Electrolytic	CE04W25V100 μ F	1	358351011	
C308	"	" 3.3 μ F	1	358350331	
C213	"	CE04W16V100 μ F	1	358341011	
C201, C206, C207 C211, C217, C218	"	" 0.47 μ F	6	35834791	
C219, C220	"	" 4.7 μ F	2	358340471	
C221	"	" 2.2 μ F	1	358340221	
NAAF-190					
Q301 ~ Q304	Transistor	2SC1000(BL)	4	2210282	
Q305, Q306	"	2SC733(GR)	2	2210082	
Q307	"	2SC734(Y)	1	2210064	
	Low pass Filter	NMC-8-6	2	233030	
C303, C304	Capacitor-Electrolytic	CE04W16V1 μ F	2	358340101	
C302	"	" 6.3V100 μ F	1	358321011	
C309, C310	"	" 33 μ F	2	358320631	
C311, C312	"	" 25V3.3 μ F	3	358350331	
C317	"	" 1 μ F	1	358350101	
C318	"	"	1	358350101	
R310	Resistor-Semi Fixed	R-HK5KB3L	1	5245004	
	Lead Relay	SBA-242J	1	250138	
NAPS-191					
Q401	Transistor	2SD235(Y)	1	2200014	
Q402	"	2SC734(Y)	1	2210064	
D401 ~ D403	Silicon Diode	10D1	3	223801	
D404	Zener Diode	WZ-240	1	223916	
D405	"	WZ-150	1	223915	
D406	"	WZ-120	1	223910	
C403	Capacitor-Electrolytic	CE04W35V1000 μ F	1	358361021	
C404	"	CE04W25V470 μ F	1	358354711	
C405	"	" 220 μ F	1	358352211	
C410	"	" 16V470 μ F	1	358344711	
C407	"	" 100 μ F	1	358341011	
	Radiator		1	270187	
	Fuse Holder	S-N5051	2	250113	

LINE VOLTAGE AND FUSE

Model T-4055 and Model A-7055 operate on one of the four line voltages, 110V, 120V, 220V and 240V.

Set the unit to the proper line voltage by following the procedure described below.

CHANGING LINE VOLTAGE SETTING AND FUSE

To remove the fuse, turn the fuse cap located on the line voltage selector in the direction of the arrow.

Then remove the fuse plug from the unit. Put the fuse plug back so that the proper line voltage marking can be seen through the cut in the edge of the plug.

Whenever the position of the selector is changed, check the rating of the fuse. A 0.5A fuse is to be used for either 220V or 240V operation and a 1A fuse for 110V or 120V operation. (Model T-4055)

A 2A fuse is to be used for either 220V or 240V operation and a 4A fuse for 110V or 120V operation. (Model A-7055)

If the rating of the fuse is correct, replace cap.

FUSE REPLACEMENT

When the fuse blows, remove the fuse cap and replace the fuse with a new one.

See Fig. 1.

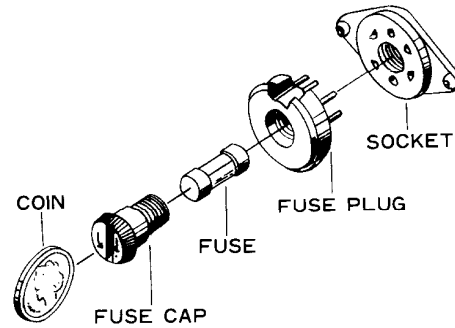


Fig 1

REPACKING PROCEDURE

Packing procedure is as follows.

- (1) Wrap the power cord with AC cord wrapper and bind it with rubber band.
- (2) Make sure to write serial number on the carton, to same as unit coincide with S.N on bottom or back of unit.
- (3) Wrap unit with the special plastic cover wrapper (AMP COVER) and attach foamed plastic pads (SIDE PAD) to both sides.
- (4) Place in carton box, make sure the front marks of the carton matches the unit front.
- (5) Put the accessory bag with all parts included into the box.
- (6) Close the carton box and seal.