

CDR570
CDR770
CDR775
CDR930
CDR950

Service Service Service

Service Manual



Contents

Page

1	Introduction	2
2	Safety- and maintenance instructions, warnings and notes	3
3	Directions for use	6
4	<i>Mechanical instructions</i>	7
	Loader CDL4009	7
	CDL3800	8
	Demounting CDL3800	9
	Exploded view CDM3800	11
	Cleaning lens	12
	Lubricating	13
5	<i>Service modes, faultfindingtrees and repair tips</i>	14
	Service modes	14
	Faultfindingtrees	18
6	Blockdiagrams	33
7	Electrical diagrams and PWB's	34
8	Alignments, Adjustments	75
9	Circuit description	76
	List of abbreviations	77
10	Sparepart list	85

©Copyright reserved 2000 Philips Consumer Electronics B.V. Eindhoven, The Netherlands. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.



PHILIPS

1. Technical Specifications/Introduction.

In this document the important issues for the mechanical and electrical testing, adjusting, checking and diagnosing of the Digital Audio CDR Module such as applied in so-called 3rd generation CDR recorders is described.

In this first chapter is presented the introduction of the repair manual for 2nd line repair workshops. It contains the repair instructions of the CDR Module CDL4009 + Mainboard 4228. All modules consist of the same loader + CDM part, the mounting of the components on the Mainboard deviates from each other. For that reason a separate CDR-module has been defined for each type/modelnumber.

On top of that: Each mainboard connected to another CDM has to be adjusted before that module can be used. To have this module on component level repaired this second line service (repair) manual has to be used in combination with the "first" line service manual of mentioned typenumber. As long as the adjustment instructions can not be carried out, the module has to be exchanged by an adjusted one from Service stock in case of repairs concerning CDM and/or Servo circuits.

Chapter 2 contains the required safety instructions, in chapter 3 a referring to the directions for use, as published in the typenumber Service Manual, is made.

In chapter 4 the mechanical exploded view of the complete module, the loading part and the CDM3800 is presented. This chapter also includes the mounting, demounting, cleaning and greasing instruction.

In chapter 5 the internal selfdiagnostics without opening the set and use of other tools is described in the service modes. The faultfinding trees and repair suggestions like the power supply voltages for proper functioning of the mainboard are indicated there too. This chapter also contains initialising and reset, concerned measuring points are highlighted. For proper functioning of all ICs the clockfrequencies have to be tested and the importance of derived clockfrequencies is shown. and how to operate with the menu driven diagnostics. Via a PC connection (serial input socket RS232C) the Menu Driven Diagnostics feature is started.

To improve the interactivity and communication with the set/module the COMPAIR (the for service designed computer aided repair) tool is supported too by this CDR generation. Details to be defined soonest and will be published by a service information bulletin later on.

Via blockdiagrams of applied boards the common issues of all boards are shown and in short explained in chapter 6.

In chapter 7 the circuit diagrams and printed wiring boards with important measuring points are shown.

The adjustment of the laser current (only one important and necessary adjustment has to be carried out, the rest of the adjustments are calculated from that parameter onwards) will be presented in chapter 8. The needed PC program is under investigation now and with the implementation of COMPAIR this adjustment action will be explained. The method how to align the software, if needed, is indicated here.

In chapter 9 reference is made to existing 3rd generation circuit description in which publication a lot of details about the functioning of the set is explained.

Also the list of abbreviations is inserted here.

Finally a survey of applied components and corresponding service ordering numbers is given in chapter 10.

As the Mainboard 4228 is designed to be applied for several modelnumbers this board contains a lot of optional components.

The most extended board is modelnumber CDR775 where double speed dubbing feature is applied too.

2. Safety and Maintenance instructions warnings and notes

GB

WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.

ESD



NL

WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor elektrostatische ontladingen (ESD).

Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen.

Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.

Houd componenten en hulpmiddelen ook op hetzelfde potentiaal.

F

ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD).

Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfiler le bracelet serti d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

D

WARNUNG

Alle IC und viele andere Halbleiter sind empfindlich gegen elektrostatische Entladungen (ESD).

Unvorsichtige Behandlung bei der Reparatur kann die Lebensdauer drastisch vermindern. Sorgen sie dafür, das Sie im Reparaturfall über ein Pulsarmband mit Widerstand mit dem Massepotential des Gerätes verbunden sind.

Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

I

AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).

La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cauzione alla loro manipolazione.

Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.

Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

GB

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

NL

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt terug gebracht en dat onderdelen, identiek aan de gespecificeerde worden toegepast.

D

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Gerats darf nicht verändert werden. Für Reparaturen sind Original-Ersatzteile zu verwenden.

I

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati pezzi di ricambio identici a quelli specificati.

F

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.



**CAUTION
VARO!
VARNING
ADVERSEL
DANGER
VORSICHT**

INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.

AVATTAESSA OLET ALTIINA NÄKYMÄTTÖMÄLLÄ LASER SÄTEILYLLE ÄLÄ KATSO SÄTEESÄN.

ÖSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD BETRÄKTA EJ STRÅLEN.

USYNLIG LASERSTRÅLNING VED ÅBNING. UNDGÅ UNSÆTTELSE FOR STRÅLING.

INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.

UNSICHTBARE LASERSTRAHLUNG WENN ABOECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.

SHOCK, FIRE HAZARD SERVICE TEST:

CAUTION: After servicing this appliance and prior to returning to customer, measure the resistance between either primary AC cord connector pins (with unit NOT connected to AC mains and its Power switch ON), and the face or Front Panel of product and controls and chassis bottom,


Any resistance measurement less than 1 Megohms should cause unit to be repaired or corrected before AC power is applied, and verified before return to user/customer.

Ref.UL Standard NO.1492.

NOTE ON SAFETY:


Symbol  : Fire or electrical shock hazard. Only original parts should be used to replace any part with symbol . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne."

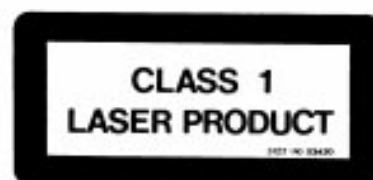

SERVICING HINTS

In the set, chip components have been applied. For disassembly and assembly check the figure below.

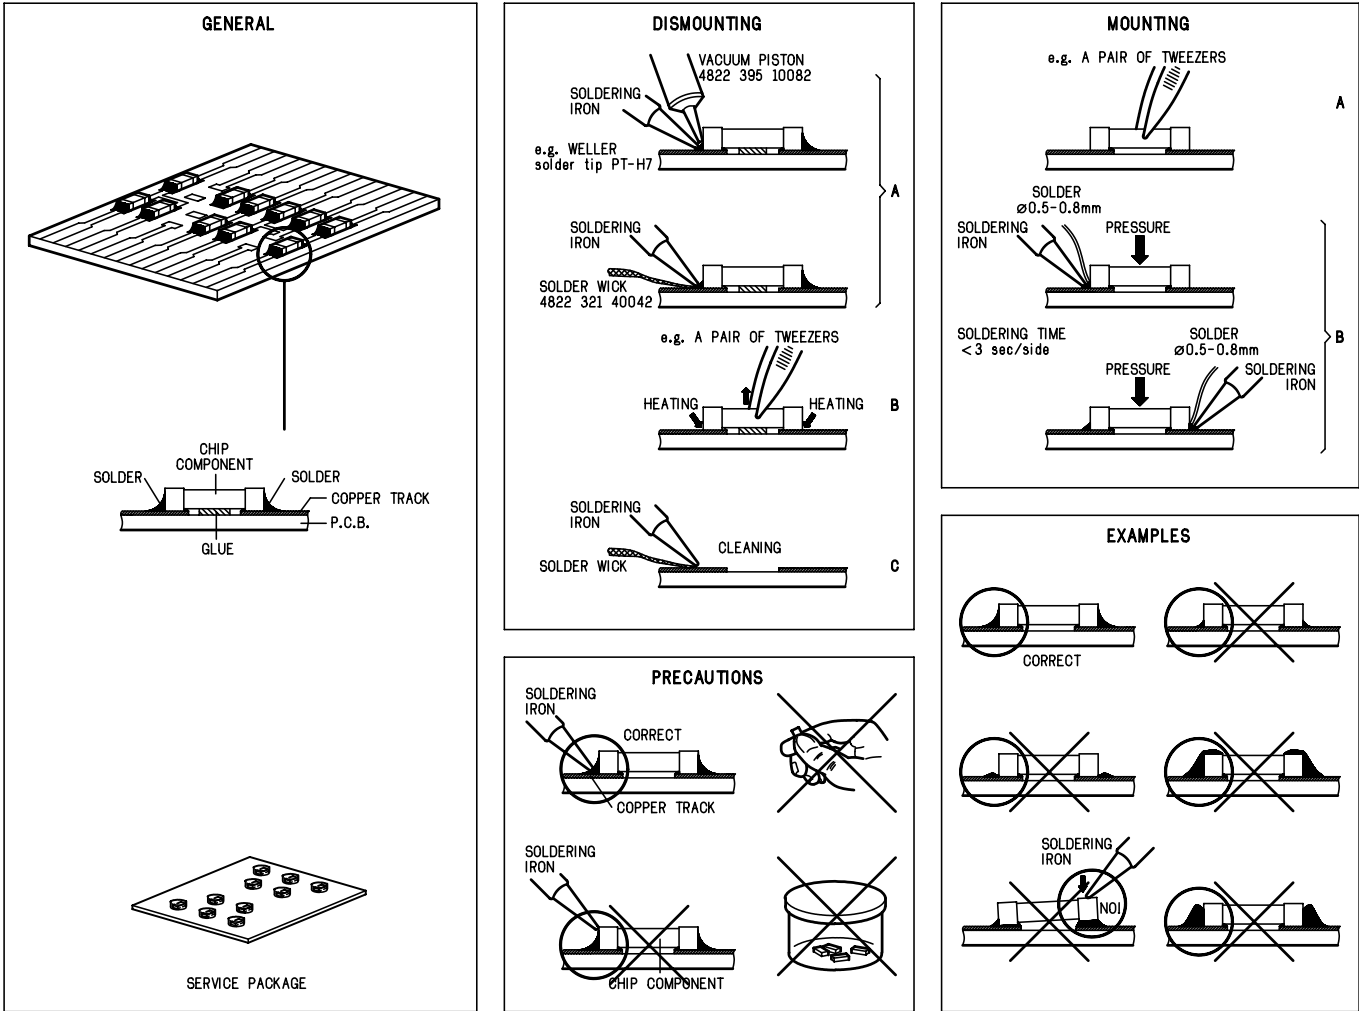

SAFETY GUIDELINES FOR THE PROFESSIONAL SERVICE TECHNICIAN

Important

Proper service and repair is important to the safe, reliable operation of all Philips equipment. The service procedures recommended by Philips and described in this service manual are effective methods of performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tools should be used when and as recommended.

It is important to note that this manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Philips could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Philips has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Philips must first satisfy himself thoroughly that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

Safety Checks

After the original service problem has been corrected, a complete safety check should be made. Be sure to check over the entire set, not just the areas where you have worked. Some previous servicer may have left an unsafe condition, which could be unknowingly passed on to your customer. Be sure to check all of the following:

Fire and Shock Hazard

1. Be sure all components are positioned in such a way as to avoid the possibility of adjacent component shorts. This is especially important on those units which are transported to and from the service shop.
2. Never release a repaired unit unless all protective devices such as insulators, barriers, covers, strain reliefs, and other hardware have been installed according to the original design.
3. Soldering and wiring must be inspected to locate possible cold solder joints, solder splashes, sharp solder points, frayed leads, pinched leads, or damaged insulation (including the ac cord). Be certain to remove loose solder balls and all other loose foreign particles.
4. Check across-the-line components and other components for physical evidence of damage or deterioration and replace if necessary. Follow original layout, lead length, and dress.
5. No lead or component should touch a resistor rated at 1 watt or more. Lead tension around protruding metal surfaces or edges must be avoided.
6. Critical components having special safety characteristics are identified with a Δ by the Ref. No. in the parts list and enclosed within a broken line* (where several critical components are grouped in one area) along with the safety symbol Δ on the schematic diagrams and/or exploded views.

Replacement parts without the same safety characteristics may create shock, fire, or other hazards.

7. When servicing any unit, always use a separate isolation transformer for the chassis. Failure to use a separate isolation transformer may expose you to possible shock hazard, and may cause damage to servicing instruments.
8. Many electronic products use a polarized ac line cord (one wide pin on the plug). Defeating this safety feature may create a potential hazard to the servicer and the user. Extension cords which do not incorporate the polarizing feature should never be used.


Fire and Shock Hazard (Continued)

9. After reassembly of the unit, always perform an ac leakage test or resistance test from the line cord to all exposed metal parts of the cabinet. Also, check all metal control shafts (with knobs removed), antenna terminals, handles, screws, etc. to be sure the unit is safe to operate without danger of electrical shock.

* Broken line: 

Leakage Current Cold Check

1. Unplug the ac line cord and connect a jumper between the two prongs of the plug.
2. Turn on the power switch.
3. Measure the resistance value between the jumpered ac plug and all exposed cabinet parts of the receiver, such as screw heads, antennas, and control shafts. When the exposed metallic part has a return path to the chassis, the reading should be between 1 megohm and 5.2 megohms. When the exposed metal does not have a return path to the chassis, the reading must be infinity. Remove the jumper from the ac line cord.

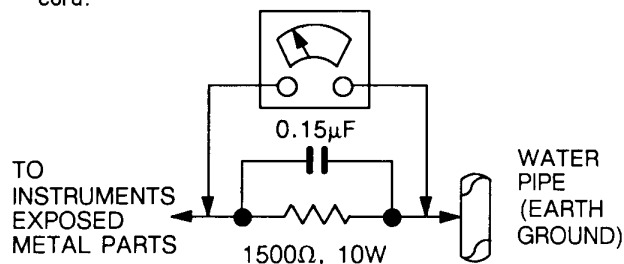

Leakage Current Hot Check

1. Do not use an isolation transformer for this test. Plug the completely reassembled unit directly into the ac outlet.
2. Connect a 1.5k, 10W resistor paralleled by a 0.15µF capacitor between each exposed metallic cabinet part and a good earth ground such as a water pipe, as shown above.
3. Use an ac voltmeter with at least 5000 ohms/volt sensitivity to measure the potential across the resistor.
4. The potential at any point should not exceed 0.75 volts. A leakage current tester may be used to make this test; leakage current must not exceed 0.5 millamps. If a measurement is outside of the specified limits, there is a possibility of shock hazard. The receiver should be repaired and rechecked before returning it to the customer.
5. Repeat the above procedure with the ac plug reversed. (Note: An ac adapter is necessary when a polarized plug is used. Do not defeat the polarizing feature of the plug.)

Parts Replacement

1. Many electrical and mechanical parts in Philips equipment have special safety related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. The use of a substitute part which does not have the same safety characteristics as the Philips recommended replacement part shown in this service manual may create shock, fire, or other hazards. Under no circumstances should the original design be modified or altered without written permission from Philips. Philips assumes no liability, express or implied, arising out of any unauthorized modification of design. Servicer assumes all liability.
2. All ICs and many other semiconductor parts are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce the life of the part drastically.

LASER NOTE:

DANGER - Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

CAUTION - Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION - The use of optical instruments with this product will increase eye hazard.

3. Instructions for use


See service manual of concerned modelnumber in which the instructions for use has been inserted. This chapter has not been filled as this module of CDR Module CDL4009 + Mainboard 4228 is only a part of a complete set.

4. Mechanical instructions

4.1 Loader CDL4009

CDL4009 consists of metal loader bracket item 82 and glued on it an identification sticker (on which the module production number and production code is printed); 4 suspension rubbers items 76, 77, 78 and 79 which carry loader assembly item 81;

and on the bottom side the CDR mainboard 1001 is mounted. Notice that mainboard is dependant to the applied set and has to be adjusted to mounted CDM in loader in case of exchange. See next figure, Loader CDL4009

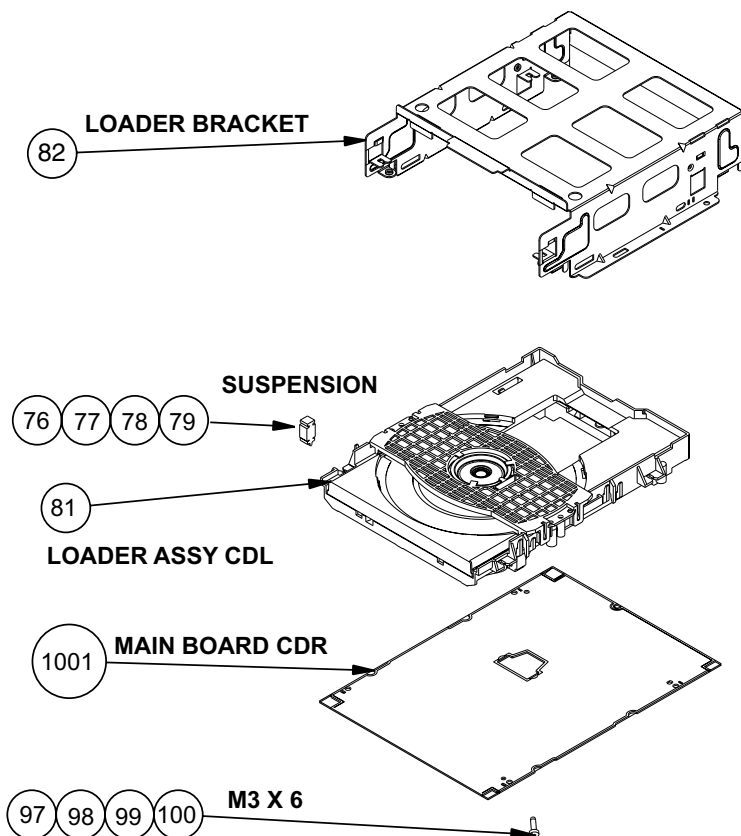

82: LOADER BRACKET
81: LOADER ASSY CDL
76: SUSPENSION

3104 121 23900
9305 043 20900
3104 144 05730


CL06532018_001.eps
090300

Figure 4-1

To demount loader module CDL4009:

1. Mainboard item 1001. Beware of connections to CDM.
Optical pick-up unit has to be ESD protected!
2. Loosen suspensions 76, 77, 78 and 79 from metal loader bracket 81
3. Take out Loader assy CDL

4.2 Exploded view CDL3800

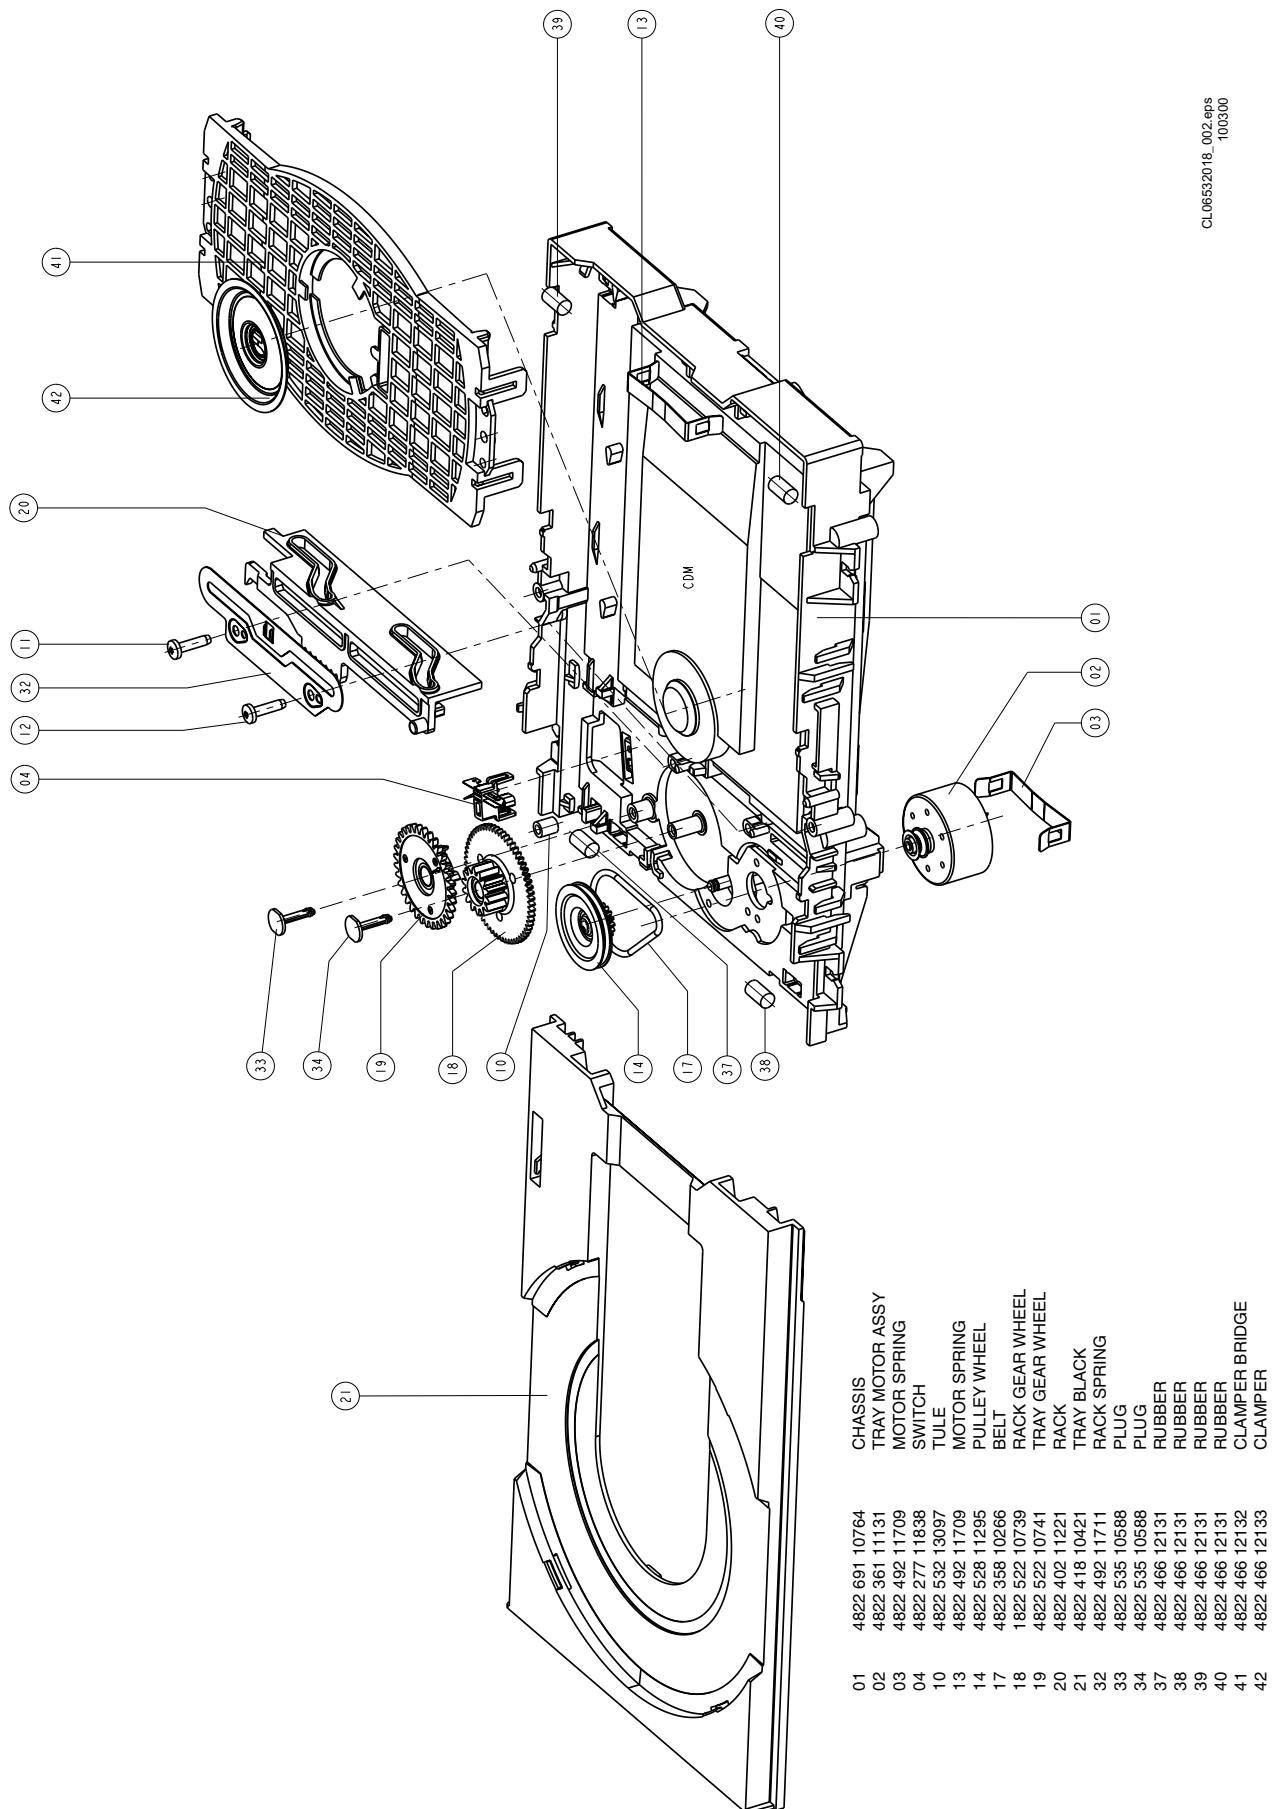

CL06532018_002.eps
100300

Figure 4-2

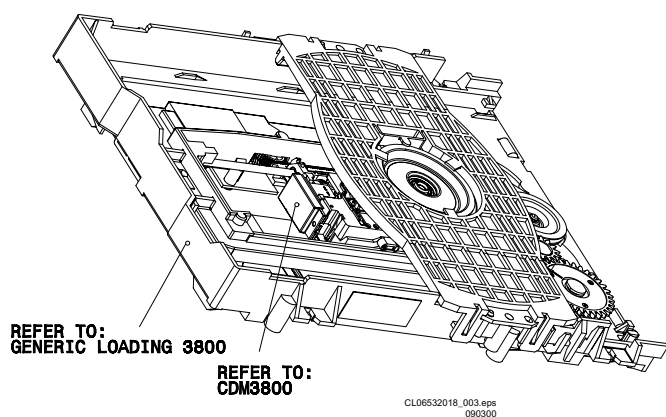


Figure 4-3

4.3 DEMOUNTING LOADER CDL3800

Remove the following items starting with:
(For the item numbers refer to the Exploded Views CDL3800, figure 4.2)

4.3.1 Release and remove tray

Push to open the tray on the rack (item 20)

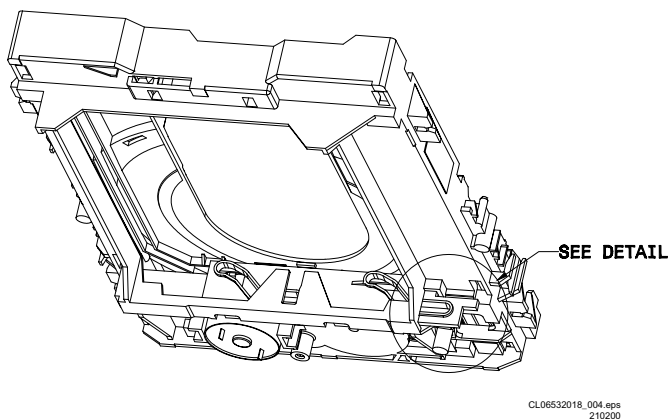


Figure 4-4

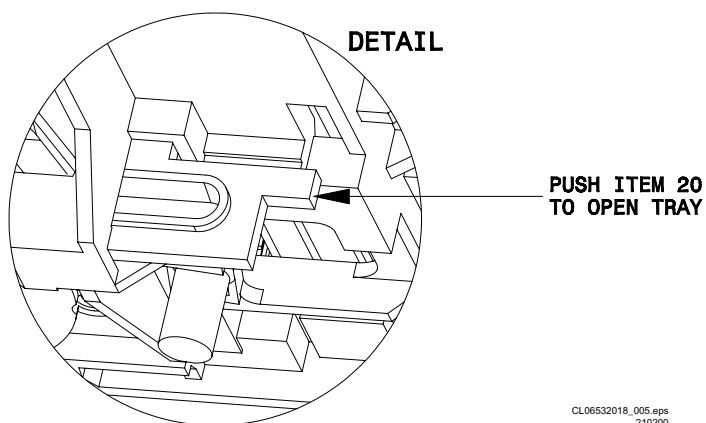


Figure 4-5

Tray

Pull out the tray (item 21) until it sticks. Press the lock at the left side of the tray upwards. Pull out the tray.

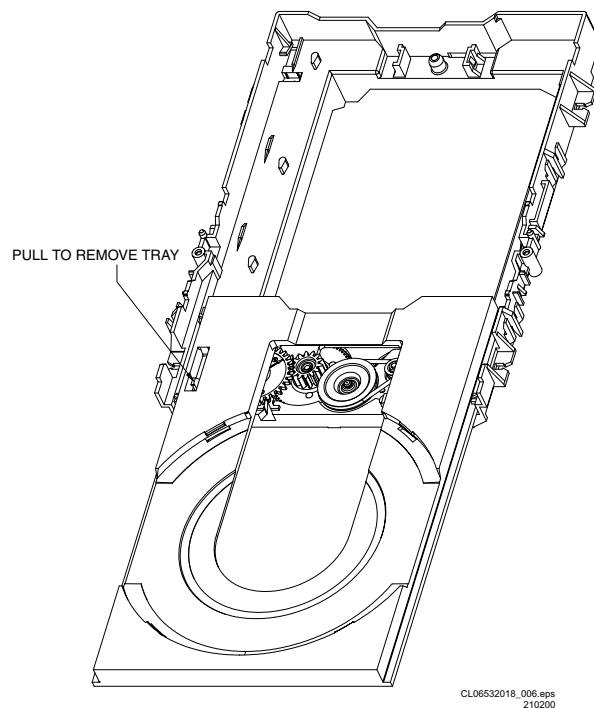


Figure 4-6

Tray motor assey

Remove the tray motor belt (item 17).
Loosen the motorspring (item 3) with a pair of tweezers or a screwdriver via the rectangular hole at the right side of the tray motor.

Clamper bridge


Bend the locks-profiles on both sides of the clamper bridge (item 41) carefully to the outside and lift up the clamper bridge.

CDM

Place the loader upside down and remove the motorspring (item 13) with a pair of tweezers or a screwdriver, but hold the CDM so it can't fall down.

Rack

First remove the rack spring (item 32) by unscrewing items 11 and 12.

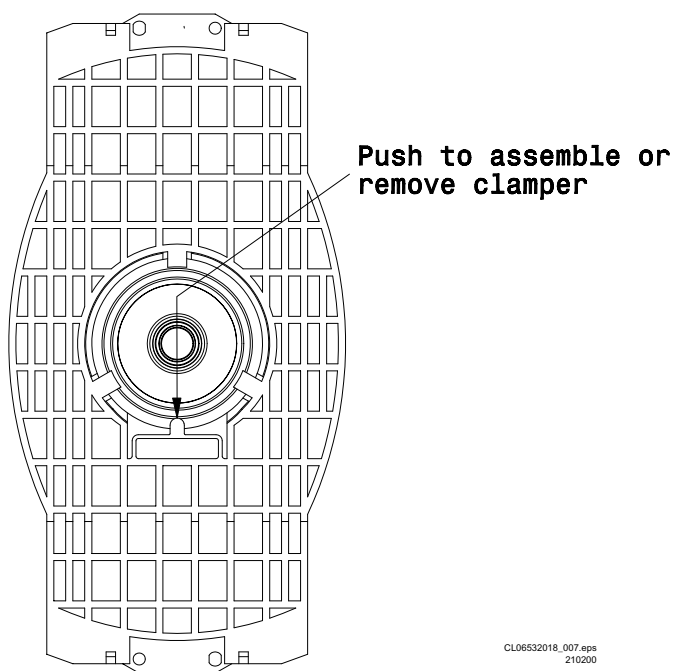Clamper

CL06532018_007.eps
210200

Figure 4-7

4.4 Exploded view CDM3800


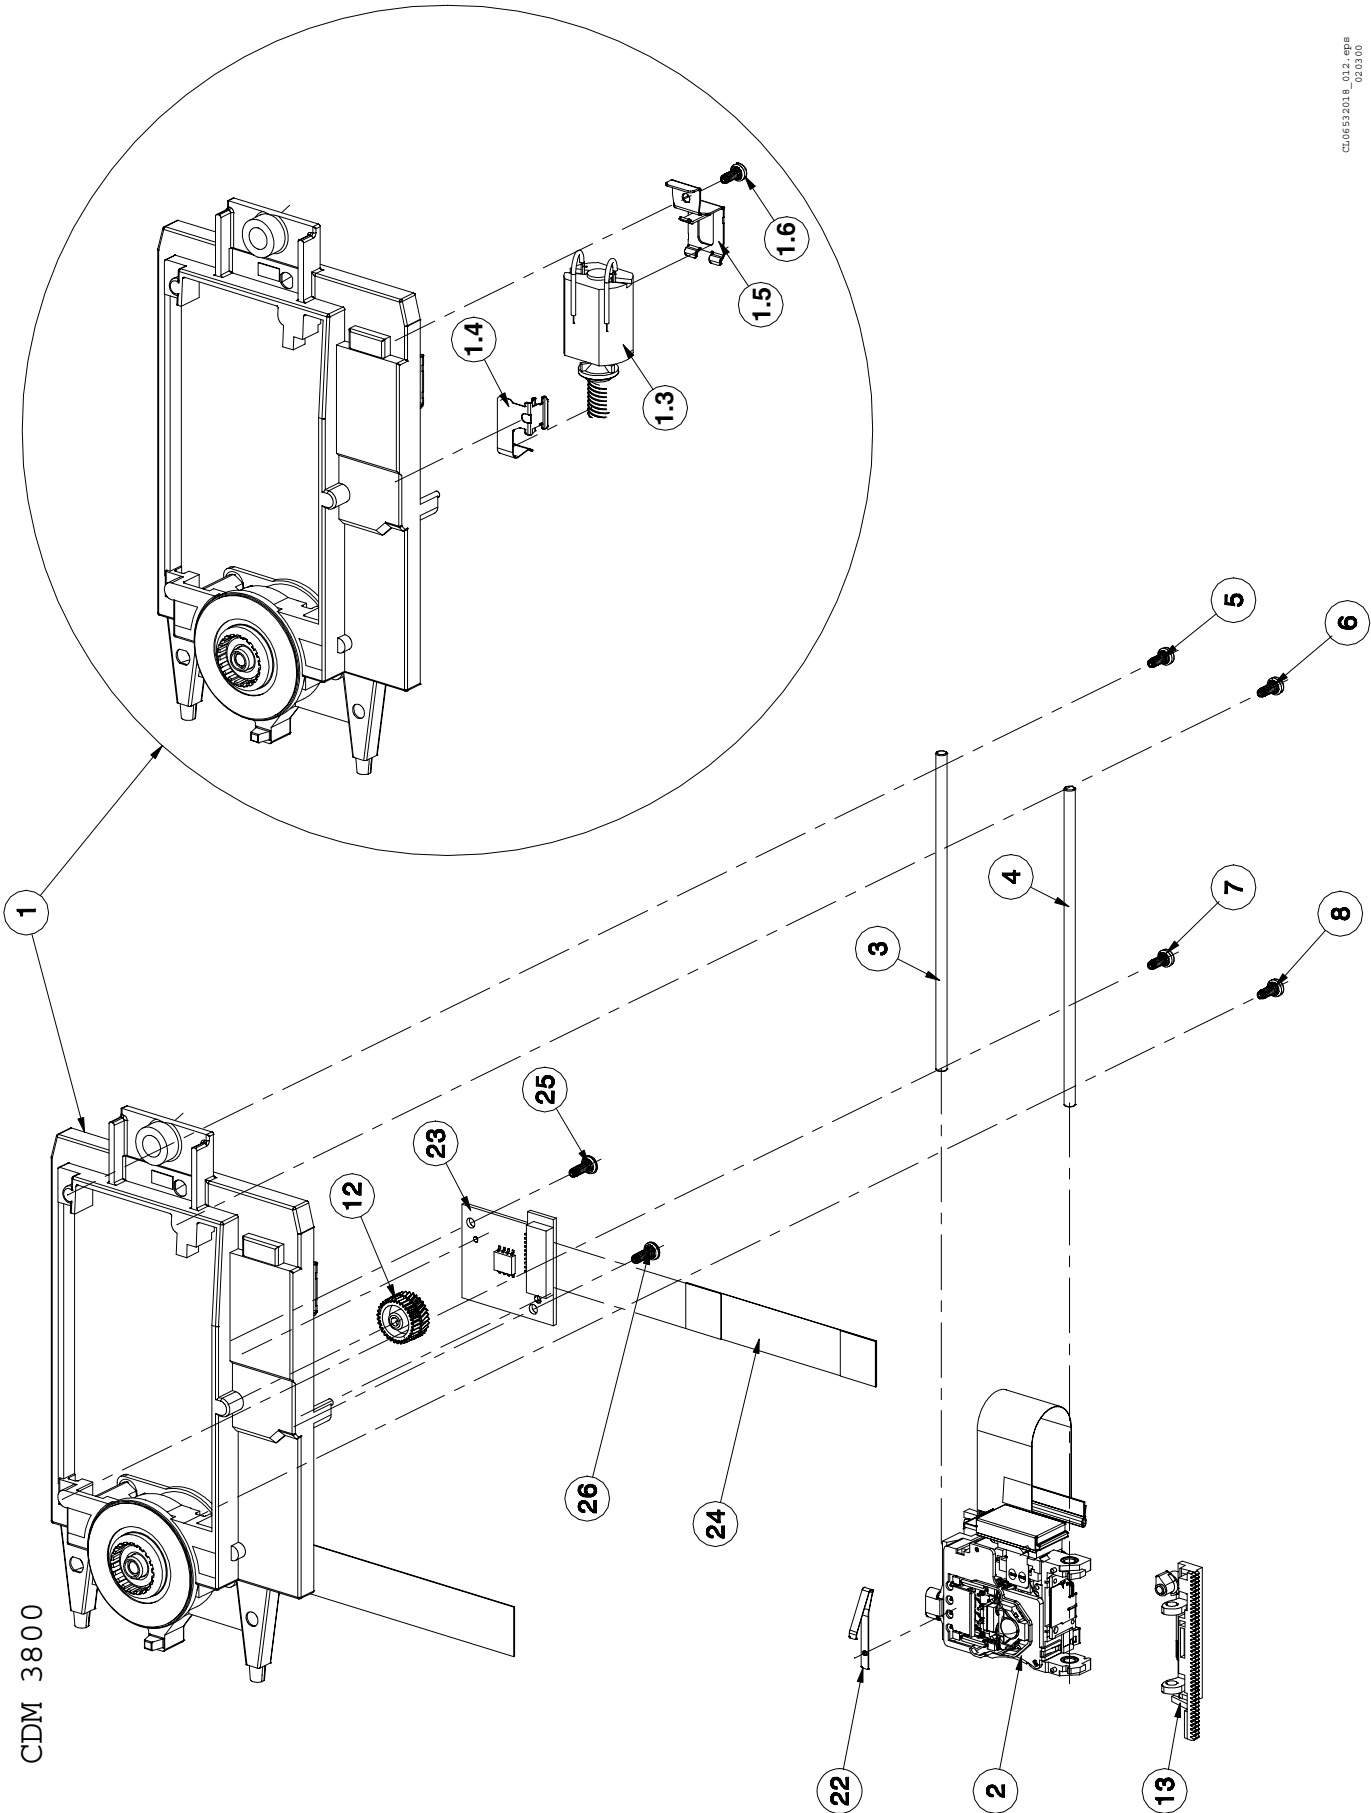


Figure 4-8

3104 147 01580 CDM3800 COMPLETE

1: 4822 691 10765 MOUNTING PLATE ASSY
 1.3: 4822 361 11132 SLEDGE MOTOR ASSY
 2: 3104 147 12890 OPU-24.24
 3: 4822 535 10591 THIRD BEARING AXLE
 4: 4822 535 10591 AXLE
 12: 4822 528 11297 COMBI WHEEL
 13: 4822 522 10742 GEAR RACK ASSY
 22: 3104 141 21830 THIRD BEARING SPRING

2100: 4822 126 13196 100nF 10% 25V
 3100: Δ 4822 051 20101 100 Ω 5% 0,1W
 5101: 4822 130 11531 SENSOR LT125A

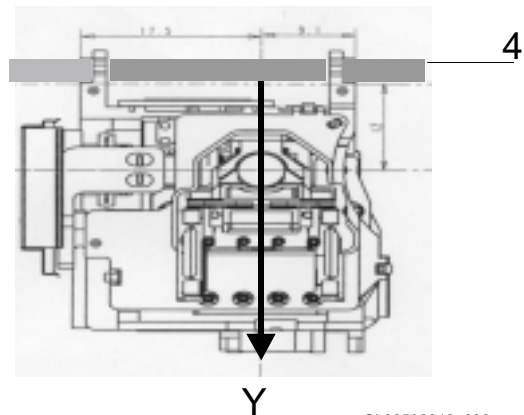

CL06532018_008.eps
 210200

4.5 Cleaning objective lens

4.5.1 CLEANING PRESCRIPTION OBJECTIVE LENS

- Cleaning fluid

The lens cleaner codenumber reads 4822 389 10026

- Procedure

- Take a clean cotton wool tipped stick and put Lens-cleaner on the wool.
- Wipe the lens very softly with the wet wool end of the stick by moving it forwards and backwards in the Y-direction. (see drawing)
- Take a dry cotton wool tipped stick and remove the Lens-cleaner from the lens by moving it very softly back and forth in the Y-direction (see drawing)
- During cleaning, take the necessary precautions in order to prevent damage to the*Actuator (hinges, lens, litze-wires) or OPU (ESD, ...) Do not remove axle (item 4, see drawing) from OPU, because the fixing screws of axle are deforming it at it's end. On their turn these deformings are damaging the hinges of the OPU when loosening the axle.

- Application

This cleaning procedure is only applicable for the flat side (upside) of the lens.

Never try to clean the round side (underside) of the lens (replica-side).

With this cleaning procedure, fingerprints and dust can easily be removed with very soft and gently movements of the cotton wool tipped stick.

- Limitation

This cleaning procedure is only applicable in cases of malfunctions of the product, due to lens-problems. It's not ment to be applied on 100% of the actuators, OPU's.

After cleaning, the product must be re-checked on it's functionality.

Figure 4-9

4.6 Lubricating

4.6.1 LUBRICATING INSTRUCTIONS FOR GENERIC LOADING CDL3800

USE TRIBOL GREASE (1322 523 78101)

Be careful when lubricating the parts.

For parts and points to apply grease, refer to the drawing figure 4-10.

Avoid excess grease.

B. The bearing of the gearwheel. Grease on upper part of cylindrical surface.[°]

C. Guiding and 2 guiding pins of the rack on the chassis.[°]

D. The guiding of the rackspring.*

E. The 2 guiding profiles of the rack*

F. 10 guiding surface of the chassis on the tray.*

G. The guiding pin on the rack.*


H. On top (in the middle) of the 4 rubbers.*

I. Guiding on the chassis of the tray. Grease around the 5 guiding pins.*

J. The guiding ribs of the chassis for guiding the CDM-nose.*

[°]=Lubricated with dosing apparatus.

*=Lubricated with a brush.

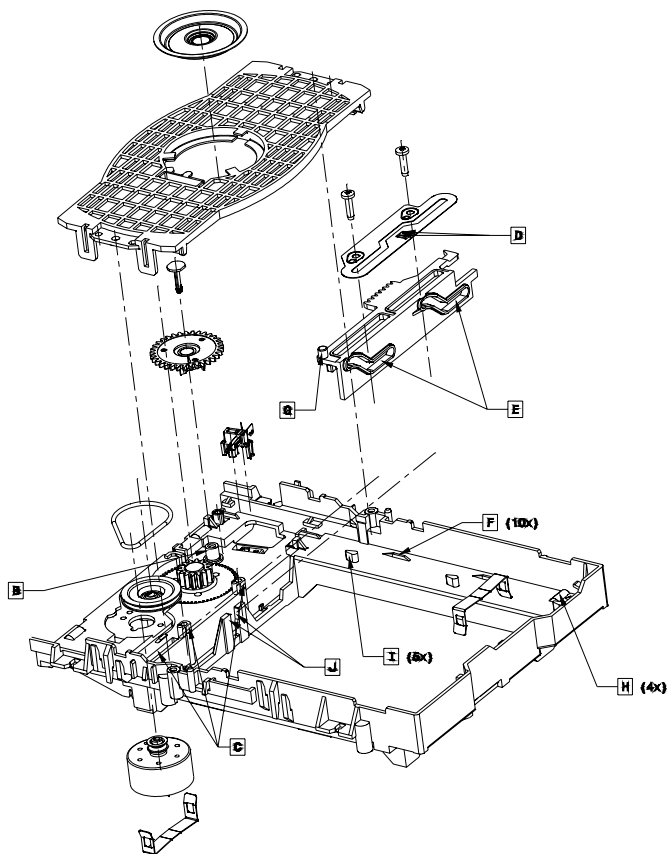

CL06532018_009.eps
210200

Figure 4-10

4.6.2 Lubricating instructions for CDM3800

USE TRIBOL GREASE (1322 523 78101)

The third bearing axle (item 3, 4822 535 10591) on the upperside of the axle 2x

The third bearing axle on the bottomside of the axle 2x


The OPU bearing with Mobil Oil SHC 629 (see next paragraph)

The top of the worm

The pressed in axle on the top

The gear rack assy (item 13, 4822 522 10742) on the teeth 2x

Between worm and combiwheel (item 12, 4822 528 11297) 2x

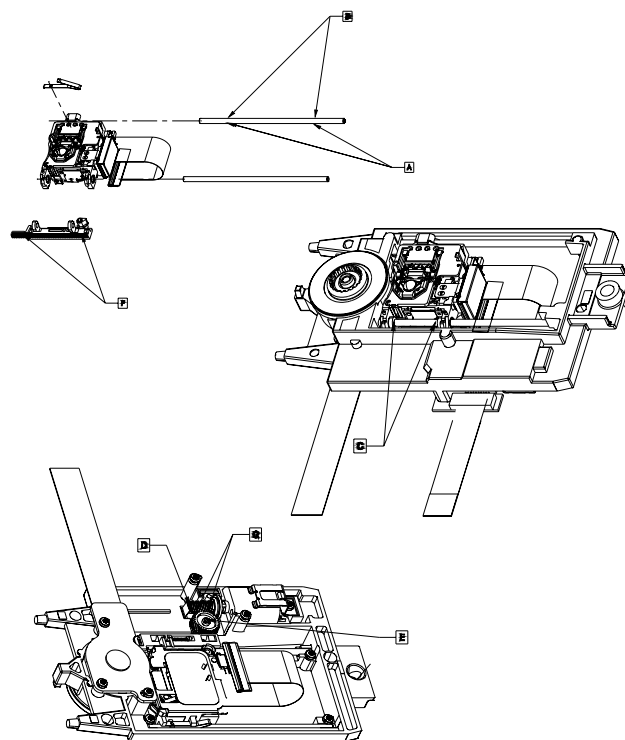

CL06532018_010.eps
020300

Figure 4-11

Oiling the centrifuged bearings

USE MOBIL OIL SHC 629 (3104 129 52260)

Use dose apparatus

Place the needle against the bearing and axle.

Dose one (1) drop of oil there where the bearing touches the axle (see drawing figure 4-12)


Repeat this handling for the second bearing

Move the OPU for a few times up and down.

REMARKS:

Do not use the oil on the axle alone. Always place the oil drop against the bearing.

No oil on top of the OPU.

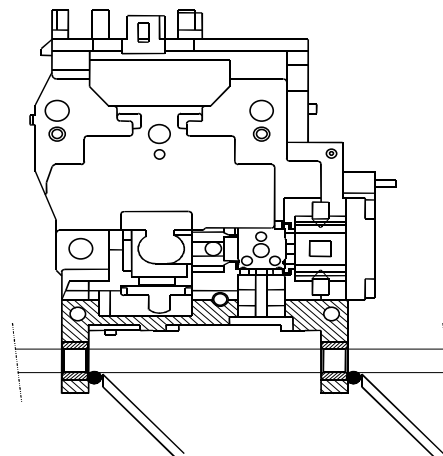

2x 1 DROP OF OIL

CL06532018_011.eps
020300

Figure 4-12

5. Service modes, repair tips and faultfinding trees

5.1 Service modes

In this paragraph the internal selfdiagnostics without opening the set and use of other tools is described.

Notice: Module is mounted in a set

5.1.1 Dealer mode

The purpose of the dealer mode is to prevent people taking out the CD inside the player at exhibitions, showrooms etc.. This mode disables the open/close function of the player. The dealer mode can be switched on and off pressing keys [OPEN/CLOSE] and [STOP] of the CDR player simultaneously while switching on the unit. The dealer mode is stored in the flash memory and can only be changed by executing the above actions.


5.1.2 Dealer diagnostics

display. Pressing keys [F FWD] and [REWIND] simultaneously while switching on the unit, starts the test. Switching off the unit ends the test.

Requirements to perform the test

- Working keyboard to start up the test.
- Working local display to check the output messages.

DEALER DIAGNOSTICS
(status of player)

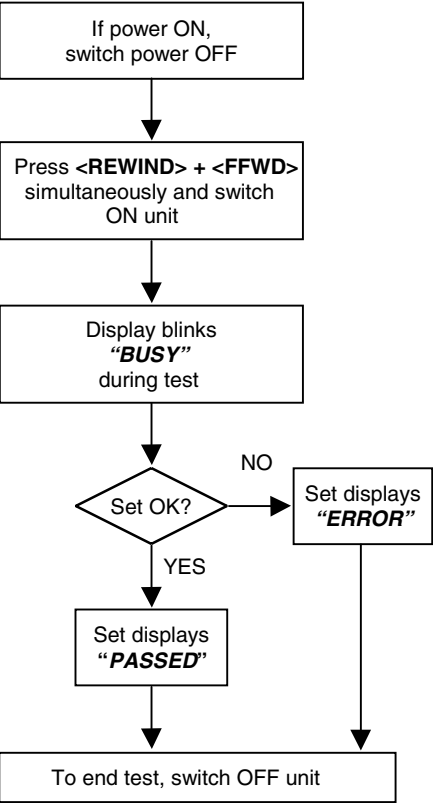

CL96532086-024.eps
090999

Figure 5-1

Description

The intention of the dealer diagnostics is to give an indication of the CDR player status. An inexperienced, even non-technical dealer will/can perform the test. Tests are executed automatically without need for external tools or disassembly of the unit. This test checks the CDR main board using the same tests as the electrical service diagnostics program. Only the result of the test, "PASSED" or "ERROR", will be shown on the

5.1.3 Electrical service diagnostics

ELECTRICAL SERVICE DIAGNOSTICS

(software versions, test for defective components)

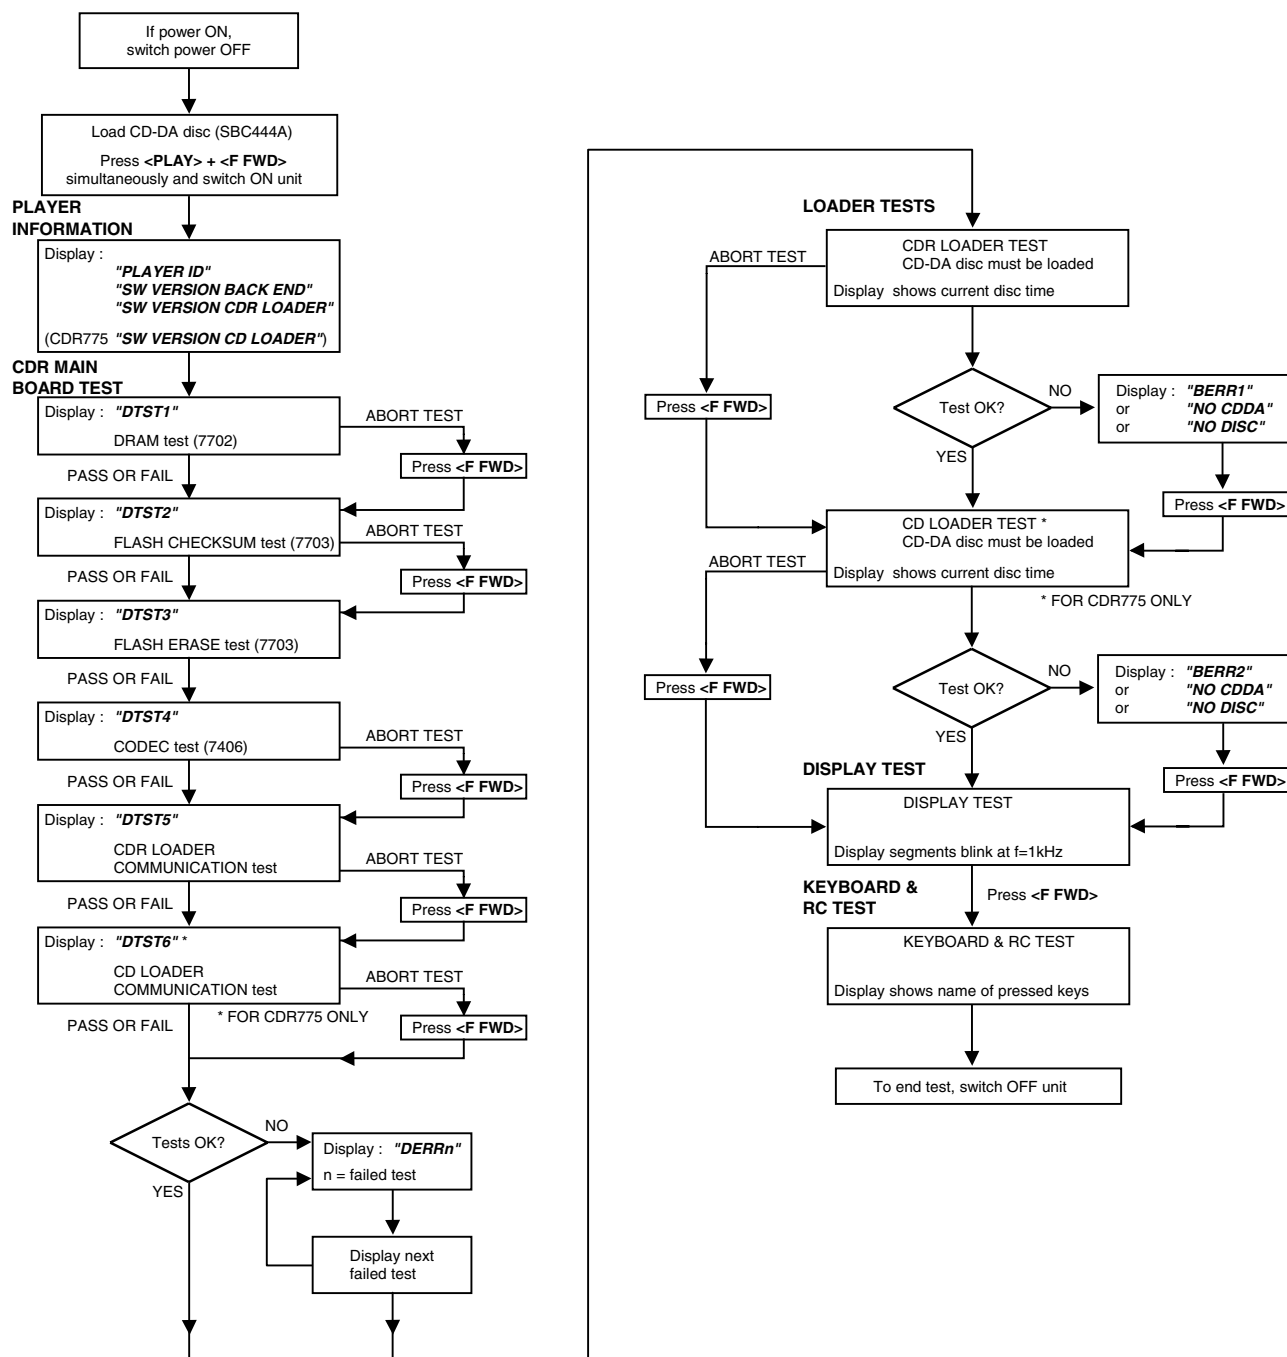


Figure 5-2

Description

The intention of the electrical service diagnostics is to show the software versions present in the player and to direct the dealer towards defective internal units. The units are : the CDR main board, the CDR loader, the CD loader in case of a CDR775 and the keyboard/display board. A sequence of tests is executed automatically. Some of the tests can be aborted or skipped without the result being taken into account. External tools or disassembly of the unit is not necessary to get the diagnostic information. Pressing keys [PLAY/PAUSE] and [F FWD] simultaneously while switching on the unit, starts the test. Switching off the unit ends the test.

Requirements to perform the test

- Working keyboard to start up the test.
- Working local display to check the output messages.
- A CD-DA disc with a minimum of 3 tracks in all trays to perform the disc test.

Description of the tests**Player information**

In this part of the test the following important information can be checked without removing the cover :

- Recorder ID.
- SW-version back end of player.
- SW-version CDR loader.
- SW-version CD loader (only for CDR775).

CDR main board test

[F FWD] key. The message "DERRn" will be displayed with n indicating the faulty test number.

If one of the tests is aborted with the [F FWD] key, no error message will be displayed for this test. The flash data erase test ("DTST3") can not be aborted !

The CDR main board test consists out of :

DRAM test

Display : "DTST1". The DRAM used for buffer management is tested by writing, reading and verifying test patterns.

Flash checksum test

Display : "DTST2". This test checks the checksum of the player's SW stored in the flash.

Flash data erase

Display : "DTST3". During this test, all temporary information (CDtxt) in the flash is erased.

CODEC (ADC/DAC) test

Display : "DTST4". This test checks the CODEC IC by writing, reading and verifying test patterns. The test is not applicable for CDR950.

CDR communication test

Display : "DTST5". The communication between the host processor (DASP) and the CDR loader via the DSA-R-bus is tested.

CD communication test

Display : "DTST6". The communication between the host processor (DASP) and the CD loader is tested. The test is only applicable for CDR775.

Loader tests

These tests determine if the CDR loader and the CD loader in case of a CDR775 work correctly. A CD-DA disc with a minimum of 3 tracks needs to be inserted in both loaders. A disc test is executed to check focus control, disc motor control, radial control and jump grooves control. The disc test is

performed by audio play-back of 5 seconds at the beginning, middle and end of the disc.

CDR loader test

During the test, the current disc time is shown. In case of an error the message "BERR1" will be displayed and the [F FWD] key must be pressed to continue with the following test. Pressing the [F FWD] key also aborts this test.

CD loader test


For CDR775 only. During the test, the current disc time is shown. In case of an error the message "BERR2" will be displayed and the [F FWD] key must be pressed to continue with the following test. Pressing the [F FWD] key also aborts this test.

Display test

All segments will blink at a frequency of 1 Hz. Pressing the [F FWD] key will start the next test because the user has to check for himself if all segments work properly.

Keyboard and remote control tests

The test will give the user the ability to test every key without executing the function assigned to it. Therefore, the user needs to press every key on the keyboard and the remote control. The display will show the name of the key being pressed. Pressing more than one key at once will give an unpredictable result except for the service combinations : [PLAY/PAUSE] + [STOP], [PLAY/PAUSE] + [F FWD], [F FWD] + [REWIND], [ERASE] + [RECORD], [PLAY/PAUSE] + [RECORD], [OPEN/CLOSE] + [PROGRAM].

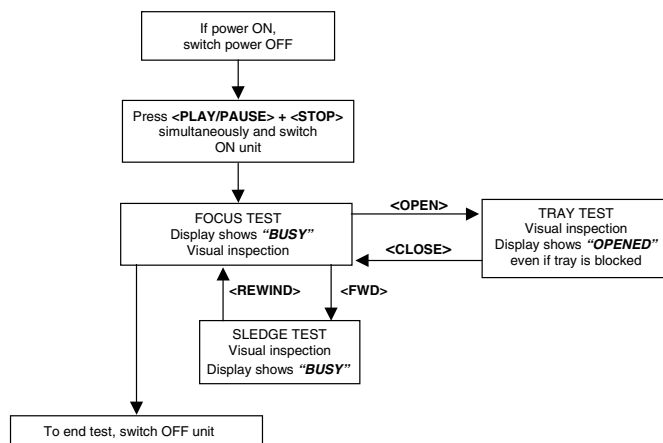5.1.4 Mechanical service diagnostics**MECHANICAL SERVICE DIAGNOSTICS**
(test for defective components)CL96532086_026.eps
080999**Figure 5-3****Description**

No external tools are required to perform this test. The cover needs to be removed because the user has to check the movements of the tray, focus and sledge visually. Pressing keys [PLAY/PAUSE] and [STOP] simultaneously while switching on the unit, starts the test. Switching off the unit ends the test. In case of a CDR775, one can check the CD loader mechanics in the same way by pressing the above key combination on the CD player keys.

Requirements to perform the test

- Working keyboard to cycle through the tests and to start up the test.
- Working local display to check the output messages.

Description of the tests**Focus control test**

The focussing lens is continuously moving up and down. The display reads "BUSY".

Sledge control test


After pressing [F FWD] the sledge continuously moves up and down. Pressing [REWIND] stops the sledge at the position it is in and the focus control test resumes. The display reads "BUSY".

Tray control test

This test starts from within the focus control test routine. Pressing [OPEN/CLOSE] moves the tray in or out. In the tray open position one can initiate focus and sledge tests by pressing [F FWD]. One has to stop these tests pressing [REWIND] before it is possible to close the tray again. Depending on the action the display reads "OPEN", "OPENED", "CLOSE" or "BUSY".

5.1.5 DC-erase service mode

DC ERASE SERVICE MODE (erasure of complete CD-RW)

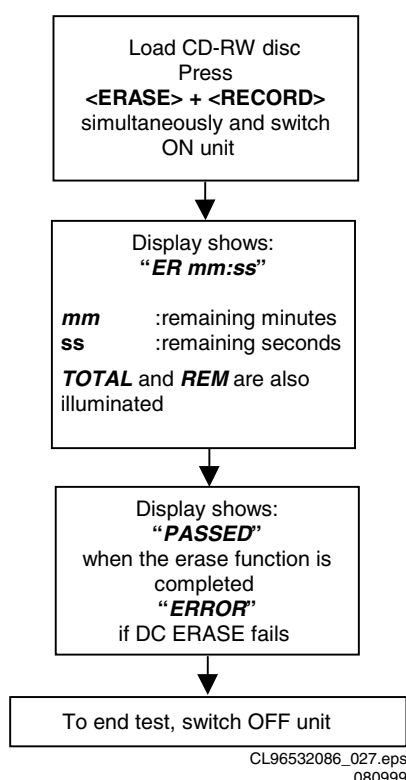**Figure 5-4****Description**

This test is initiated by pressing [ERASE] and [RECORD] simultaneously while switching on the unit. The player will erase a complete CD-RW disc (including PMA and ATIP lead out area) at speed N=2. The display shows the countdown of the remaining time required for the operation to complete. The format is "ER mm:ss", where "mm" are the remaining minutes and "ss" the remaining seconds. After completion the message "PASSED" is shown, and the player has to be switched off and on again to start up in normal operating mode. Switching off the

unit before completion of the test, leaves the disc in an unpredictable state. In such case only a complete DC-erase procedure can recover the CD-RW disc.

Requirements to perform the test

- Functional CDR player.
- A CD-RW audio disc must be present in the tray.

5.1.6 Burn in mode**Description:**

The Burn In mode is an endless cycle of:

- DC-Erase to erase the CDRW disc with maximum laser power.
- Recording a CDRW disc
- Finalising at double speed

The Burn In mode is used to test intermittent faults of the loader.

Requirements to perform the test:

- Working Local Keyboard: needed to start up the test.
- Working Local Display: all output messages must be displayed on the local display.
- Analog source connected to the CDR99 player
- CDRW disc in tray


Burn in sequence

- Initialisation

The 'Burn In' mode is initiated by pressing the PAUSE> and key on the local keyboard at the same time, and then switching the POWER switch on.

- Continuous loop

The following picture shows the burn in sequence.

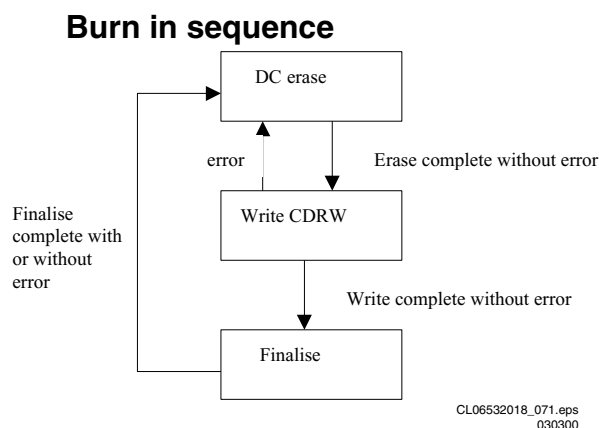**Figure 5-5**

Continuously do DC erase, record complete CDRW and then finalise until the player is powered off.

When an error is detected during writing, the DC erase procedure is called again., the disc will be DC erased and the cycle starts again.

During the test the display shows the number of hours for which the test is running and the number of errors detected during the test. The display looks as follows : "HH BI RE FE"

HH	: number of hours on digits 1 and 2
"BI"	: burn in mode, digits 3 and 4
RE	: number of errors detected during DC erase and write CDRW modes on digits 7 and 8

FE : number of errors detected during finalise modes on digits 10 and 11

If started up with a disc other than a CDRW disc the display shows : "WRONG DISC", if no disc is inserted display : "NO DISC".

– End of test

To exit the Burn In mode, power off the player.

5.2 Faultfinding Trees

The faultfinding trees and repair suggestions like the power supply voltages for proper functioning of the mainboard are indicated here.

5.2.1 CDR-Module

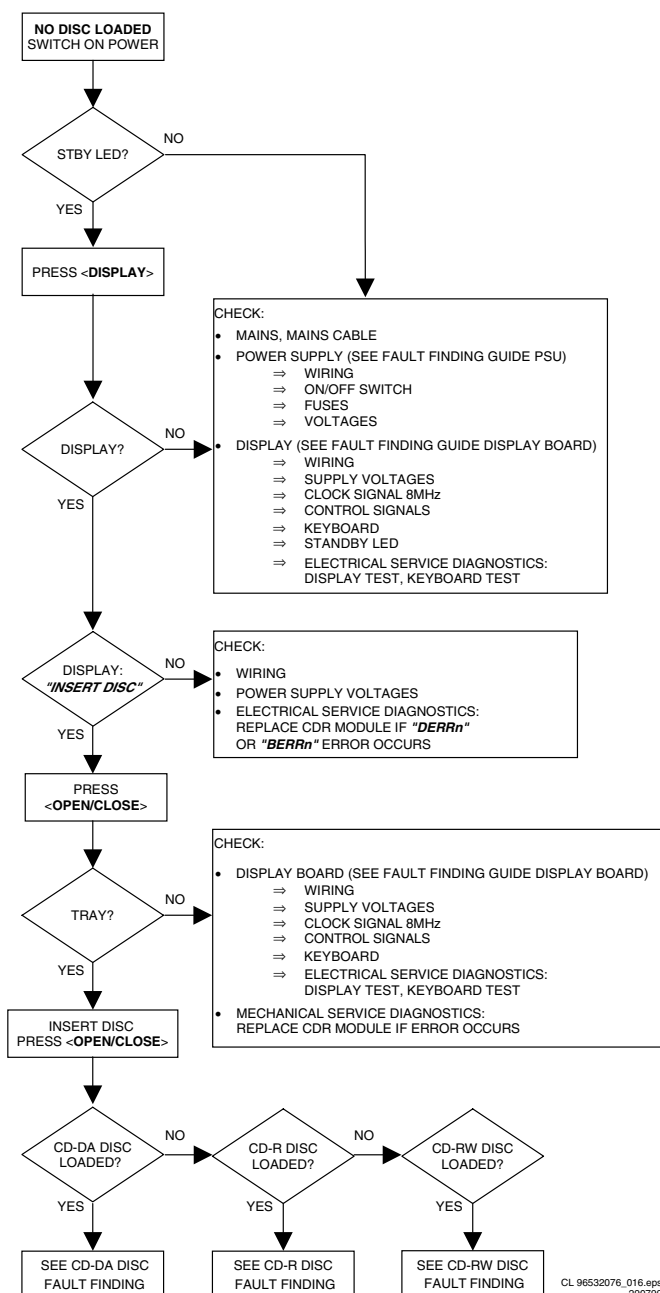


Figure 5-6

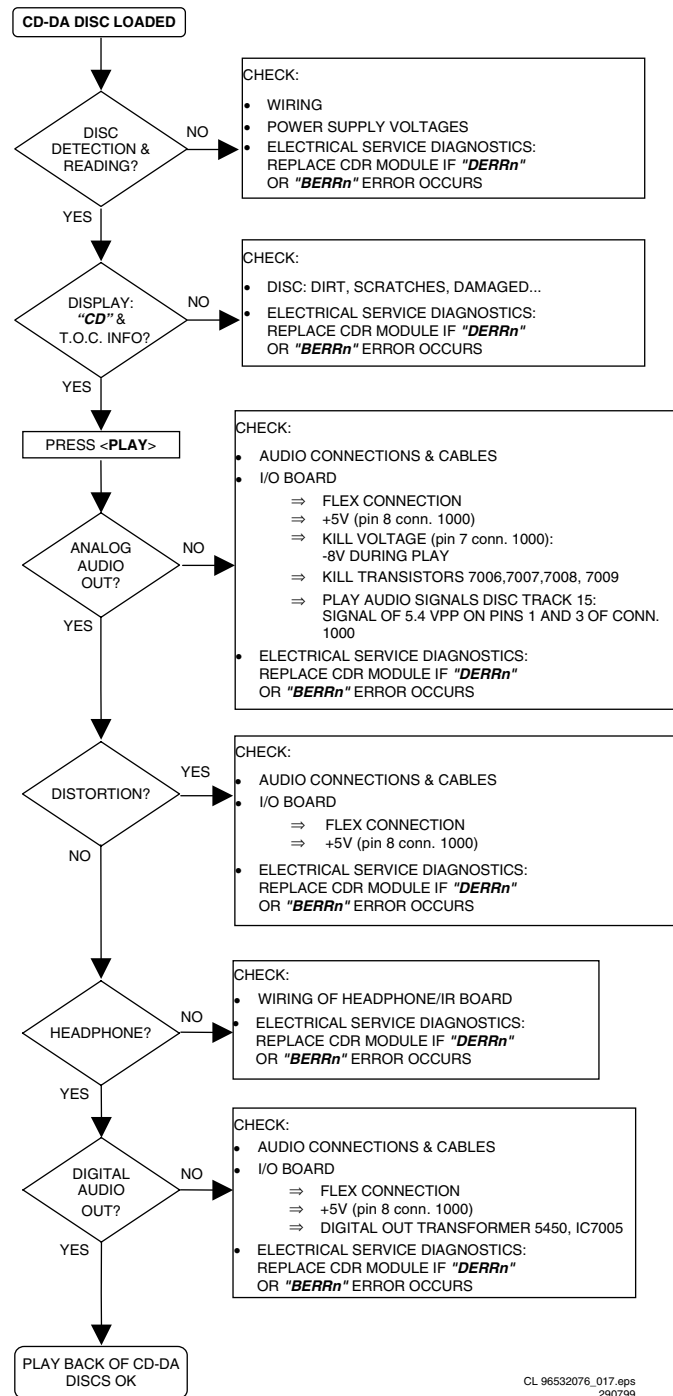


Figure 5-7

CL 96532076_017.eps
290799

CL 96532076_016.eps
290799

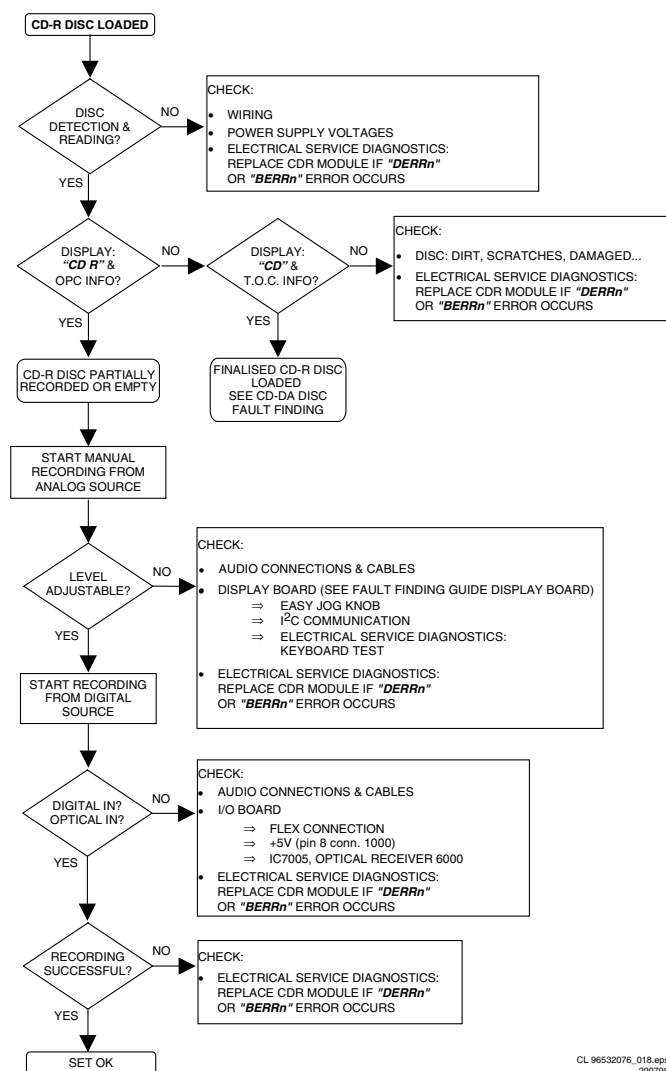


Figure 5-8

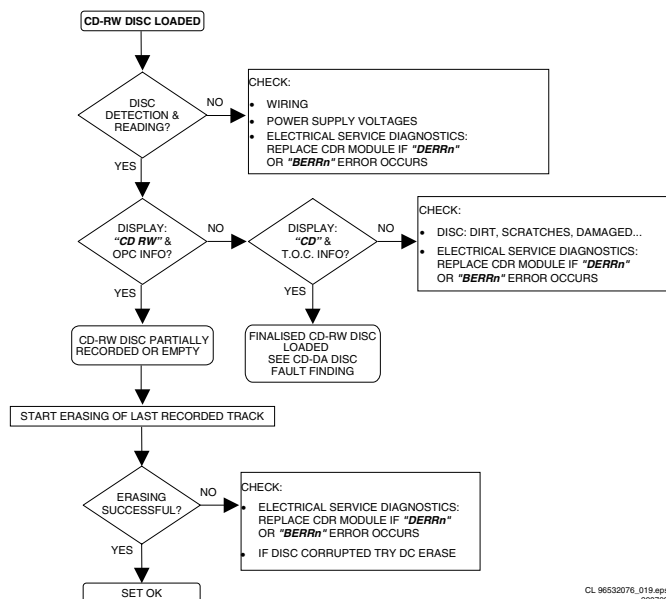


Figure 5-9

5.2.2 Mainboard

Power supply part on mainboard

• Description.

The most important part of an electrical function is the power supply. Without it will never operate. The power supplies as well analog as digital equipment. For these reasons the power supply is split-up in different sections. One for the digital electronics, one for the servo controls and one for the AUDIO part. The servo controls are the big consuming parts with high peak-currents, also introducing disturbances in the power lines. The audio part needs very "clean" power, because noise and ripples have there reflection in the audio signals, specially in S/ N and THD+N. Some of the power supplies are switched off, this to reduce consumption in case of standby.

The different power supplies are delivered to the PCB via connector 1500 This is a 11 pole connector with following voltages on it: +5V, +12V, -8V, VFTD, VDC1 and VDC2. The last 3 voltages are not used on the main PCB, but are meant for the FTD (Fluorescent Tube Display). They are directly routed to connector 1705.

The other voltages are split up in different functions on the PCB. The following block-diagram gives an indication of that implementation.

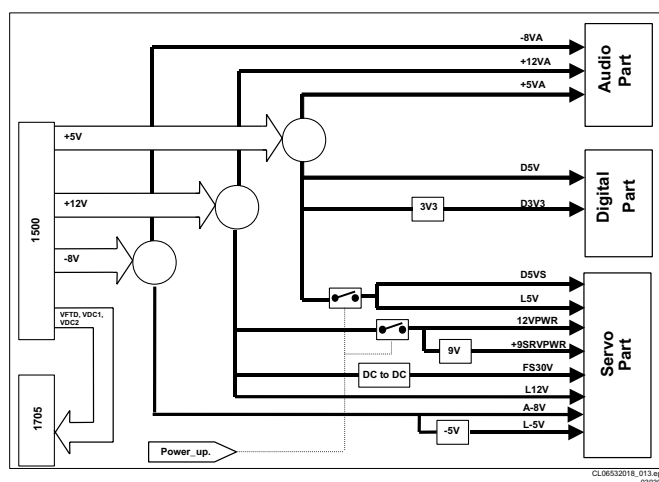


Figure 5-10

• Power supply to main board.

Power supply enters the BOARD via connector 1500. Pinning as follows:

Connector 1500

- pin 1: VDC2 : 3V8 (10%)
- pin 2: VFTD : -38V (5%)
- pin 3: VDC1 : 3V8 (10%)
- pin 4: GND : Ground.
- pin 5: D5V : +5V (5%)
- pin 6: D5V : +5V (5%)
- pin 7: GND : Ground.
- pin 8: GND : Ground.
- pin 9: GND : Ground.
- pin 10: 12V : 12V (10%)
- pin 11: -8V : -8V (10%)

POWER PART CHECK

USE CDR MAIN BOARD CIRCUIT DIAGRAM 7 AND CDR MAIN BOARD BOTTOM VIEW : POWER PART TEST POINTS

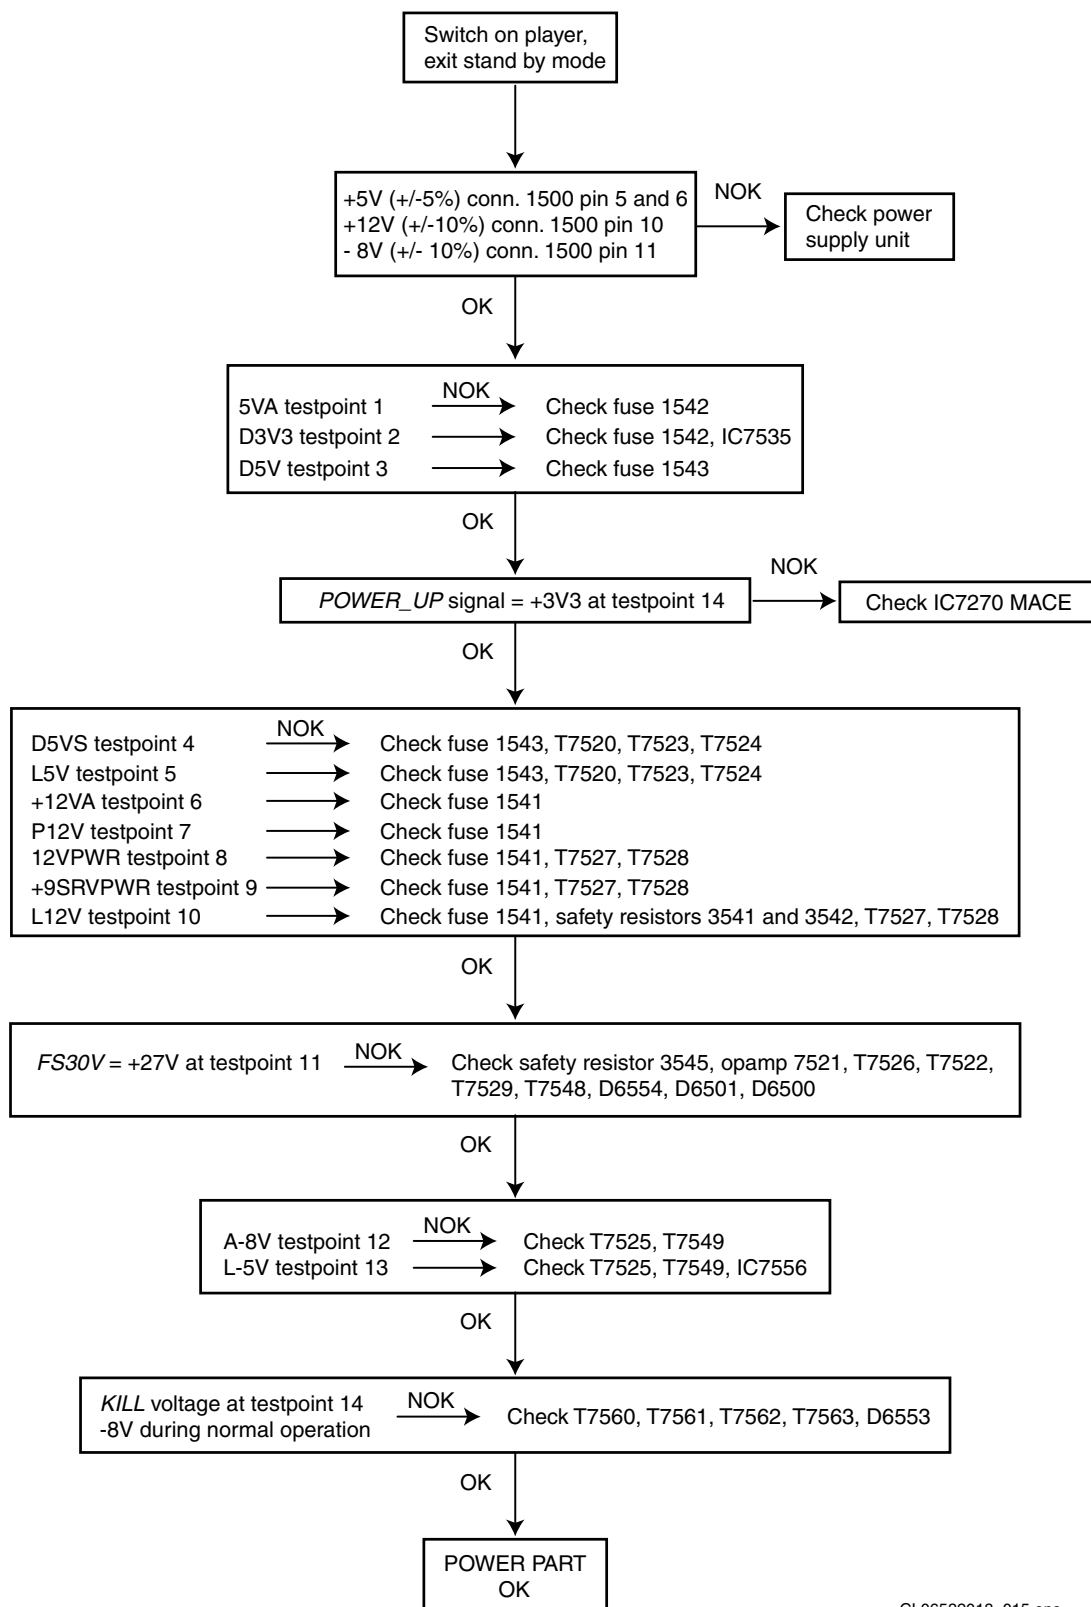



Figure 5-11

Reset & Clock*Master reset.*

Since the Mainboard is more or less mix-mode between +3V3 and +5V devices, special treatment for the RESET behavior is wishful. Controlling the RESET only from 1 power supply could lead to collisions between different devices, damaging the internal I/O structure of the devices. To avoid this the +3V3 and the +5V are guarded by a special device. These devices keep the output low as long as the power supply is not stable or is not above the required level. As soon as the power supply is stable it switches the output to "HIGH-Z". The output is an open collector type. From then onwards the line can be controlled by means of external pull-up resistors. Benefit of the open-collector devices is that several of those devices can be tight together at the outputs. In our case we used a device on the +5V and one on the +3V3. This means that both power supplies need to be stable before the RESET of the Master processor is released.

Resetting several processors in the same structure by means of the power supplies invokes certain risks. The duration of initialization after reset is processor and Code depending. It can lead to hang-up in those cases that communication between the processors is "time" driven. Meaning that only in a certain time frame the establishment of the communication-bus must take place. If not successful the Bus hangs!


To avoid these kinds of problems, only 1 RESET is depending on the power supply, and this is the RESET of the Master controller. The same master controller will then take care of the RESET of the other devices. In the next figure this is explained.

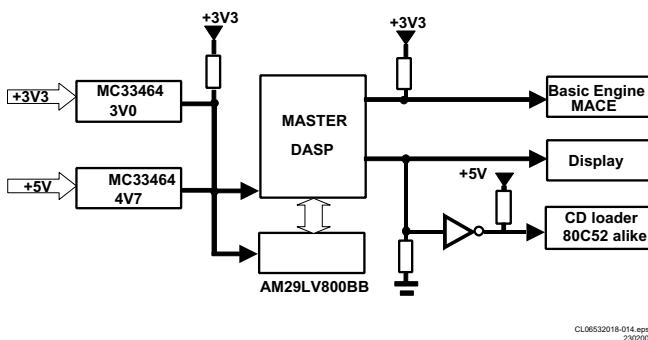**Figure 5-12**

For further measurements see next reset and clock flowcharts.

RESET & CLOCK CHECK

USE CDR MAIN BOARD CIRCUIT DIAGRAMS 4, 9 AND 10 AND CDR MAIN BOARD BOTTOM VIEW : RESET & CLOCK TESTPOINTS

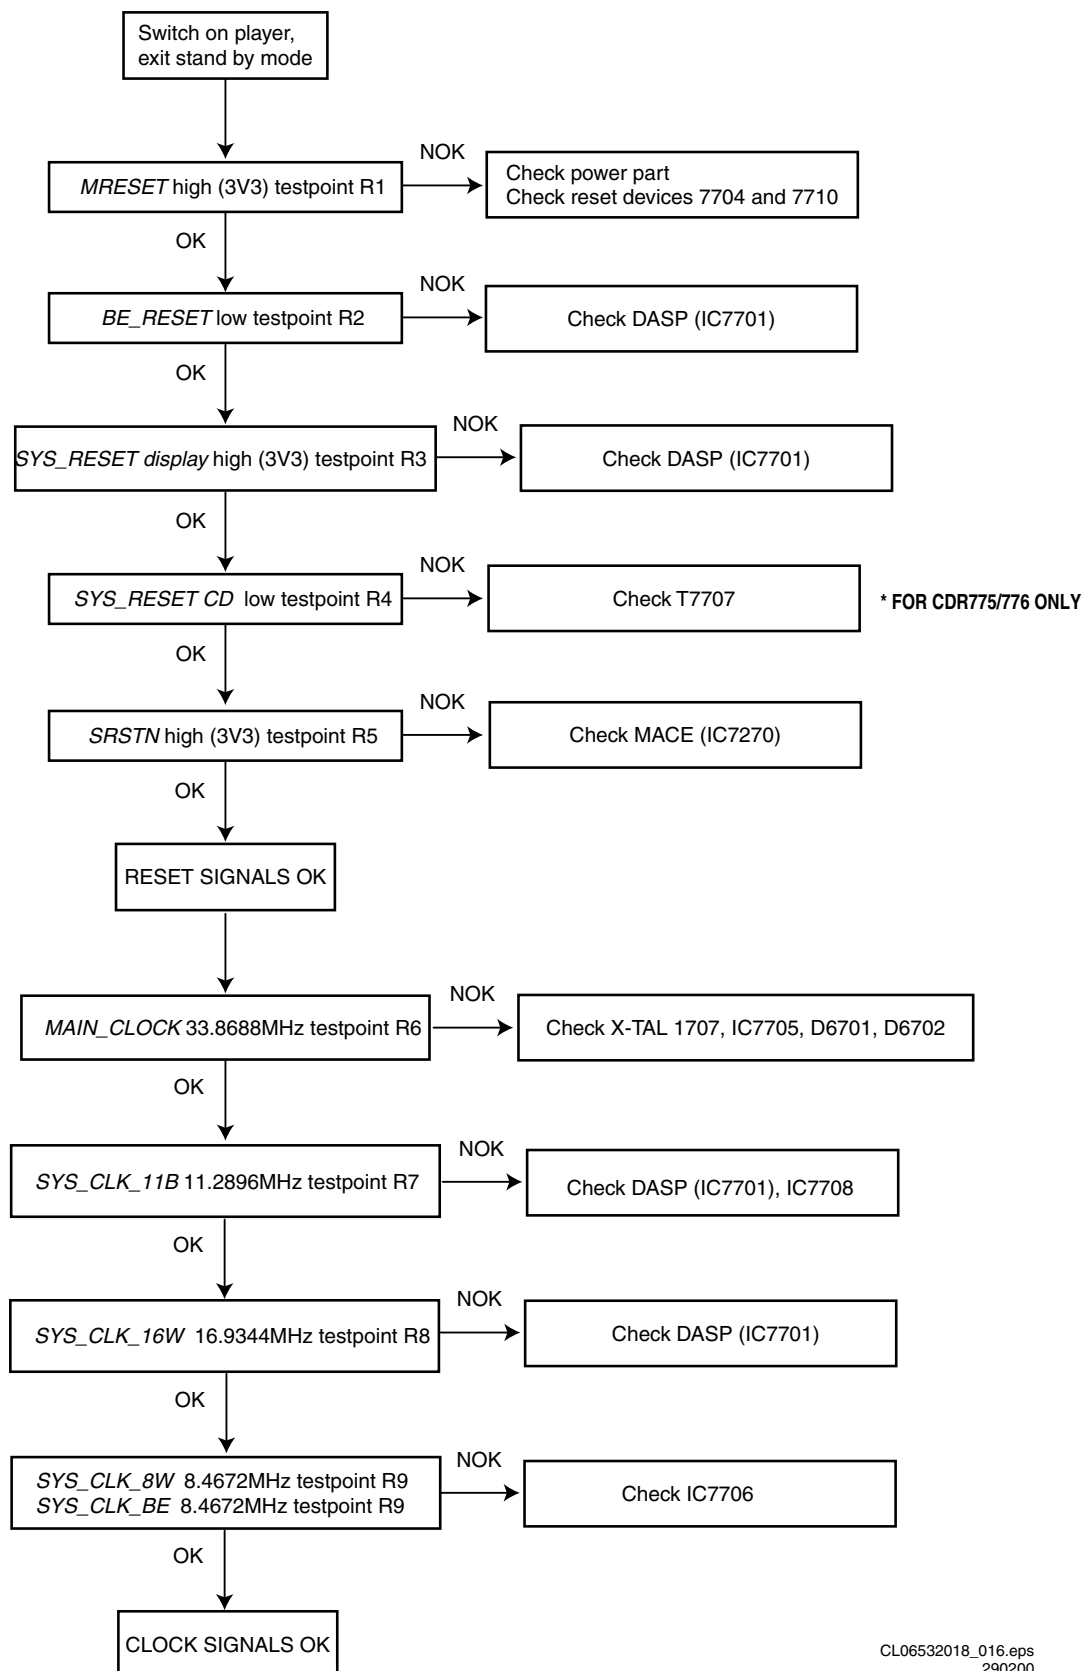

CL06532018_016.eps
290200

Figure 5-13

The clockgeneration

All microprocessors or digital devices need a clock. The clock is usually made by means of resonators or crystals depending on the speed and the accuracy that is requested. The clock can also differ from device to device so that more than one crystal is needed. The cheapest and "system wise" best way is only 1 crystal. The derived clocks are then Phase related to each other.

On the CDR MAIN 99 the DASP is generating all clock signals. Not only the systemclock for the processor itself, but also for the basic engine processor and even the systemclock for the ADDA part which is directly related to the 44.1kHz. sample frequency. To be able to do this a 33.8688Mhz. crystal with 25ppm accuracy is connected to the internal oscillator of the DASP. Internal the clock signal is multiplied by means of a PLL. This gives the systemclock on which the processor runs internally. This systemclock is then again divided internally to have the systemclock for the ADDA, which is 11.2896Mhz, and the 16.9344Mhz. which divided by 2 gives the systemclock for the BE part. In this way only 1 crystal is required. The same 8.4672Mhz. is also routed to the CD-module in case of a CDR775 player.

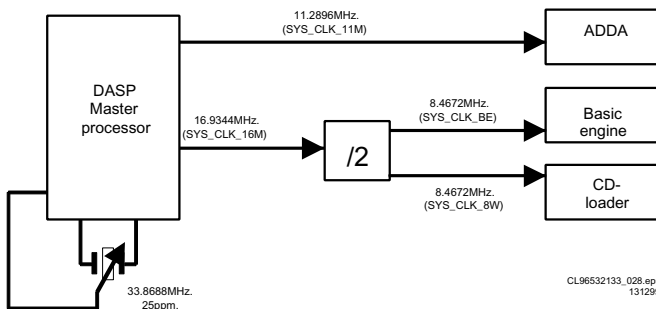


Figure 5-14

PC help on mainboard diagnostics

A couple of the diagnostics are only possible with the help of a PC. The DASP micro controller will contain an interface with the external world; this interface is realised via a serial RS232 connector that is accesible inside the player. It can be accessed from the outside world by means of test pins and connector 1818 and interface board 7104 086 91111.

Via those test pins a terminal emulator can be connected. Then menus will come up that give the opportunity to enter all Audio Engine commands. This includes the commands on Bit Engine Level (transparent). This terminal emulator functionality is part of the embedded software, so no external software is needed. It can also read out the User Profile Logging of Bit Engine. This can show the hours that the loader really was in recording mode.

This diagnostic tool is activated if communication is detected on the RS232 interface during power up. The baud rate for both is 19k2 baud.

Details of the diagnostic tool are given in chapter 5.2.3 of this publication: Menu Driven Diagnostics.

Also in preparation is the interactive COMPAIR tool. Then the PC communicates in an active form with the set and compares the result for making the next decision. With MDD the technician has to take the next active step from his experiences onwards.

5.2.3 Menu Driven Diagnostics

In this paragraph the specification of the software requirements for the Menu Driven Fault Finding Diagnostics is given. It will give a clear and unambiguous description of what the Menu Driven Diagnostics (MDD) do.

NOTICE: THE TESTS, AS PROVIDED BY THE MENU DRIVEN DIAGNOSTICS, ARE NOT SUPPOSED TO BE MIXED RANDOMLY, ESPECIALLY TESTS LIKE 'LASER ON' AND 'FOCUS ON'. IT IS ASSUMED THAT THE PERSON THAT USES THE MDD KNOWS IN WHICH ORDER THESE TESTS CAN BE EXECUTED.

The MDD module communicates with two entities: the terminal emulator on the PC. The MDD receives instructions (test to be executed) and transmits the menu to be shown and the test results; the Audio Engine module. It instructs the Audio Engine via the interface field which test should be executed. The test result is retrieved from the interface field.

Requirements

The functionality of the Menu Driven Diagnostics module is to implement Menu Driven Diagnostics for service purposes. When the CDR recorder is connected to a PC via an interface board 7104 086 91111, connection cable 3104 157 11122 and a RS232 cable (available at PC shop), the service technician can select via a menu on the PC screen which test should be performed. The result of the test is also shown on the PC screen. No special test tool is needed for the PC; any terminal emulation program can be used (for example, HyperTerminal under Windows95/NT).

The last occurred error during a test session can be retrieved via the menu.

The RS232 connector should be soldered to pins:

1818-1 = Rx

1818-4 = Gnd

1818-2 = Tx

General Constraints

It is advised to connect the connection cable 3104 157 11122 to the Mainboard connector 1818 mounted just under the loader (topview). Via this cable also the powersupply for the interface board 7104 086 91111 is arranged when it is connected to connector 1000 on interfaceboard. To start this application at powering on; for 5 seconds the Rx and Tx output pin of the mainboard connector should be short circuited. This temporarily short circuit indicates the internal CDR software program to switch onto Menu Driven Diagnostics. This short cut can easily be done via the switch (1009) on the interface board. To communicate with the PC the RS232 cable has to be connected to output connector 1010 on the interface board and the switch (1009) should be released.

When switching on the CDR, two possibilities exist: the RS232 cable is not connected. The application is executed (no MDD mode); the RS232 connector is connected; Rx and Tx are short circuited for more than 5 seconds then the Menu Driven Diagnostics is started. By connecting via connection cable to interface and from there via the RS232 cable onto the PC, so the MDD can transmit the main menu to the PC.

User Interfaces**RS232 interface**

The CDR recorder transmits the menu to be shown and the test results to the PC via connection cable 3104 157 11122, interface board 7104 086 91111 and a RS232 cable. It receives the selection of the user, chosen in the menu.

Hardware Interfaces**RS232 interface**

The communication via RS232 should be set to the following settings:

Baudrate:19200

Databits:8

Stopbits1

Parity:none

Handshaking:none

Data Communication Interfaces

Communication between the CDR recorder and the PC is straightforward: everything the CDR recorder transmits to the PC is shown on the PC screen. Data, transmitted from the PC to the CDR775, is treated as a choice from the currently shown menu.

All functionality of the MDD has to be part of the CDR775 software; the PC can only use a terminal emulation program.

Menu Structure and Test Results

This chapter describes the structure of the menus and the results of the tests, as shown on the PC screen.

Menu Structure

When starting up, the PC screen is cleared and the software version and the main menu (level 1) are shown. From the main menu, one of the sub menus (level 2) can be selected. These sub menus contain other sub menus and/or a number of tests that can be executed. The menus are shown below. '>>' indicates that when this option is selected, a new menu will be shown.

*Level 1 Mainmenu:***MAIN MENU**

- 1 General tests >>
- 2 Retrieve last occurred error
- 3 Recorder module test >>
- 4 Playback module test >>* *Only used for the CDR775
- 5 Select adjust program CDM
- 6 Download new program

When a test is running, a 'test running indicator' (a dot) is showed on the screen every second, When a test has been executed, the screen is cleared and the result of the test (if any) and the menu, separated by one empty line, are showed.

Three types of tests exist:

Tests that return PASSED or FAILED, like the DRAM test.

When a test has been executed, the result is showed on the PC screen;

Tests that return a value, the message 'PASSED, xxx' (with xxx is the returned value) is showed on the PC screen;

Tests that don't return anything, like the 'laser on' test. Most of these tests require a visual check of the service person. When one of these tests is executed, 'PASSED, visual check' is showed on the PC.

Level 2 menus

When a submenu is selected in the main menu, the level 2 menus are showed. These sub menus contain other sub menus and/or a number of tests that can be executed.

GENERAL TESTS MENU

- 1 Check DRAM
- 2 CHECK FLASH>>
- 3 Check ADC/DAC
- 4 Check LCD

RECORDER MODULE TEST MENU

- 1 communication test
- 2 Tray >>
- 3 Laser >>
- 4 Focus >>
- 5 Radial >>
- 6 Sledge >>
- 7 Miscellaneous >>
- 8 Jump grooves >>

PLAYBACK MODULE TEST MENU

- 1 communication test
- 2 Tray >>
- 3 Laser >>
- 4 Focus >>

- 5 Turntable motor >>
- 6 Radial >>
- 7 Sledge >>
- 8 Miscellaneous >>

*Level 3 menus***CHECK FLASH MENU**

- 1 Check FLASH
- 2 Manufacturar-ID and
- 3 Device ID

TRAY MENU

- 1 Open tray
- 2 Close tray

LASER MENU

- 1 Laser off
- 2 Laser on, read
- 3 Laser on, write*-----*Laser on, write' only used for the recorder module

FOCUS MENU

- 1 Focus on
- 2 Focus off

TURNTABLE MOTOR

- 1 Turntable motor ON
- 2 Turntable motor OFF

RADIAL MENU

- 1 Radial control on
- 2 Radial control off

SLEDGE MENU

- 1 Sledge inwards
- 2 Sledge outwards* -----*Sledge stays outwards for the recorder module; sledge moves inwards after 300 ms for playback module

JUMP GROOVES MENU

- 1 Jump grooves to inside
- 2 Jump grooves to middle
- 3 Jump grooves to outside

MISCELLANEOUS MENU

- 1 Start player
- 2 Stop player
- 3 Calibrate CD >>* -----*Only used for recorder module
- 4 Get user profile logging
- 5 Erase CD-RW*-----*Only used for recorder module
- 6 Read firmware version**-----**CD firmware version for CD-module, CDR firmware version for CDR-module

CALIBRATE CD MENU *-----*Only used for recorder module

- 1 Calibrate CD, N=1
- 2 Calibrate CD, N=2
- 3 Get last OPC values

End of test

These diagnostics can be quitted by powering off the player

5.2.4 Servo drivers check

SERVO DRIVERS CHECK

USE CDR MAIN BOARD CIRCUIT DIAGRAMS 1, 3 AND 4 AND CDR MAIN BOARD BOTTOM VIEW : SERVO DRIVERS TESTPOINTS

FOCUS SERVO


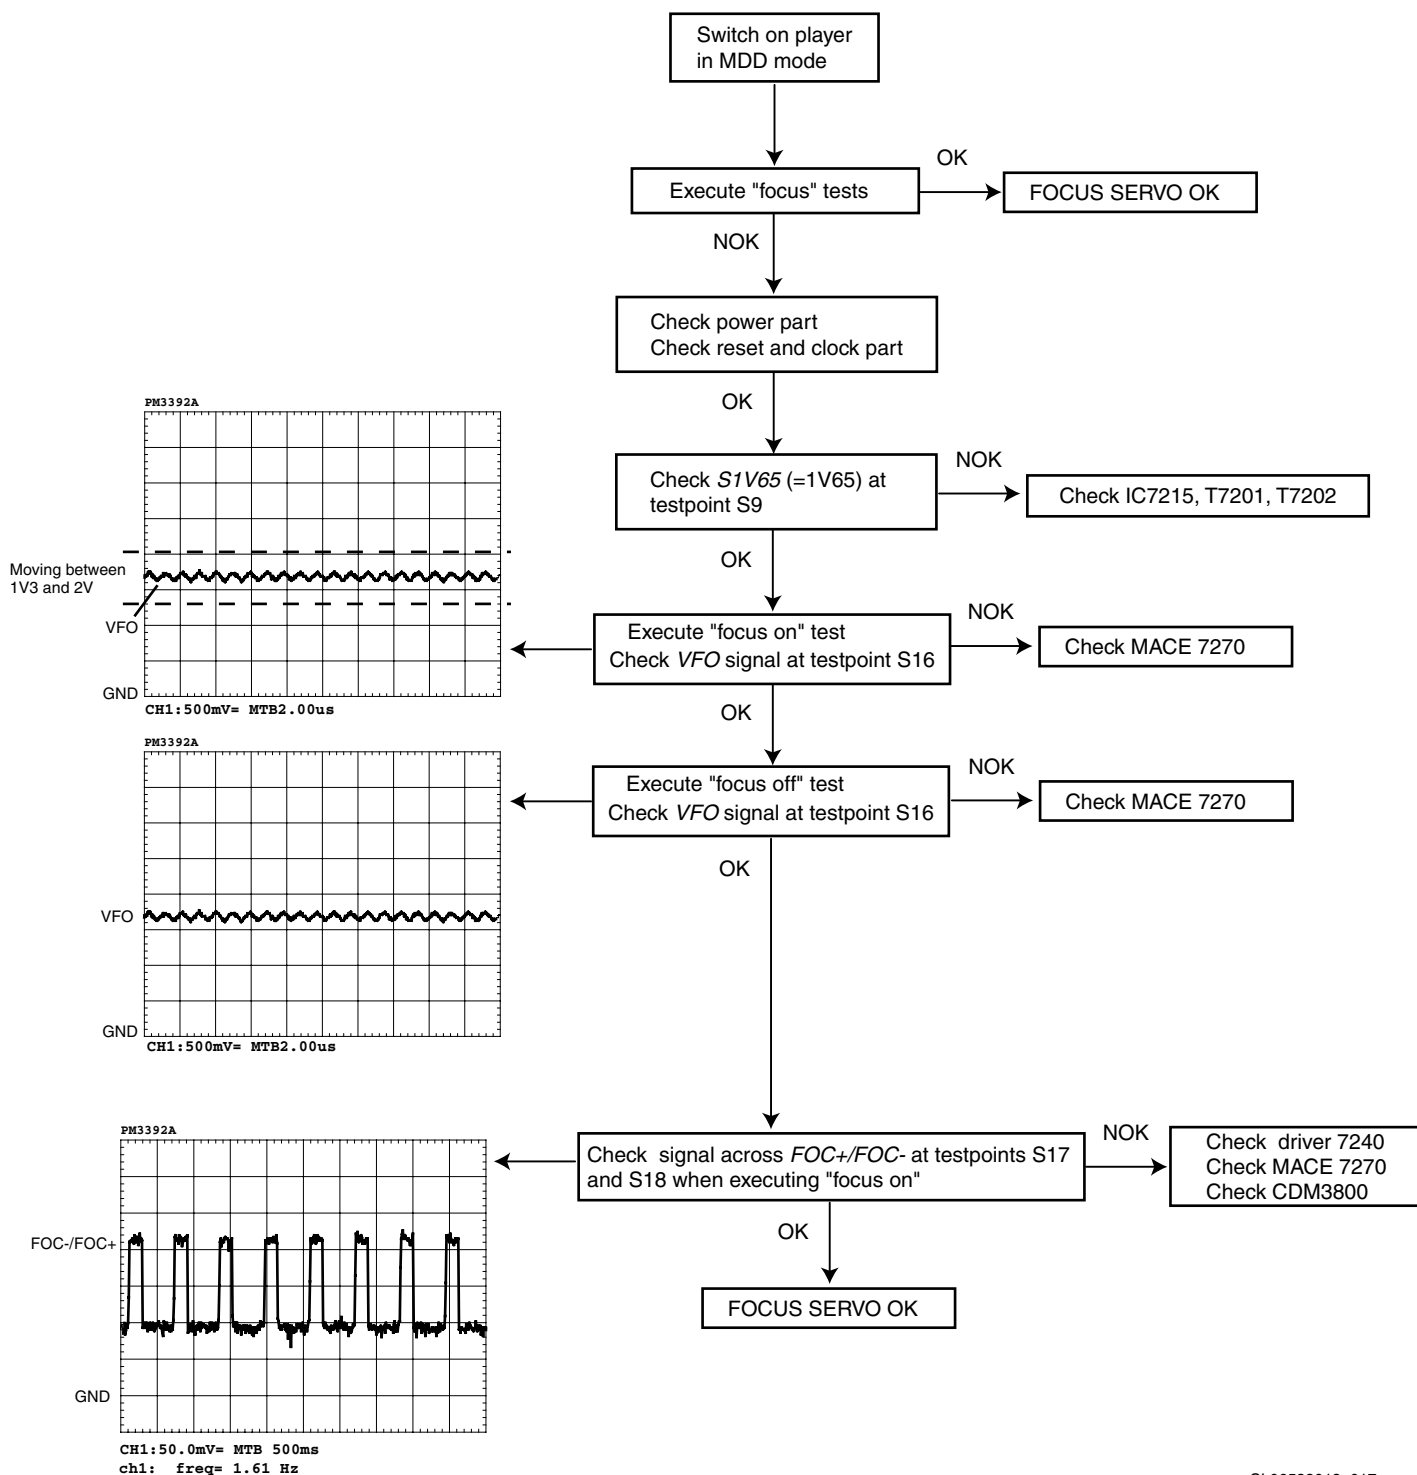


Figure 5-15

SERVO DRIVERS CHECK

USE CDR MAIN BOARD CIRCUIT DIAGRAMS 1, 3 AND 4 AND CDR MAIN BOARD BOTTOM VIEW : SERVO DRIVERS TESTPOINTS

RADIAL SERVO

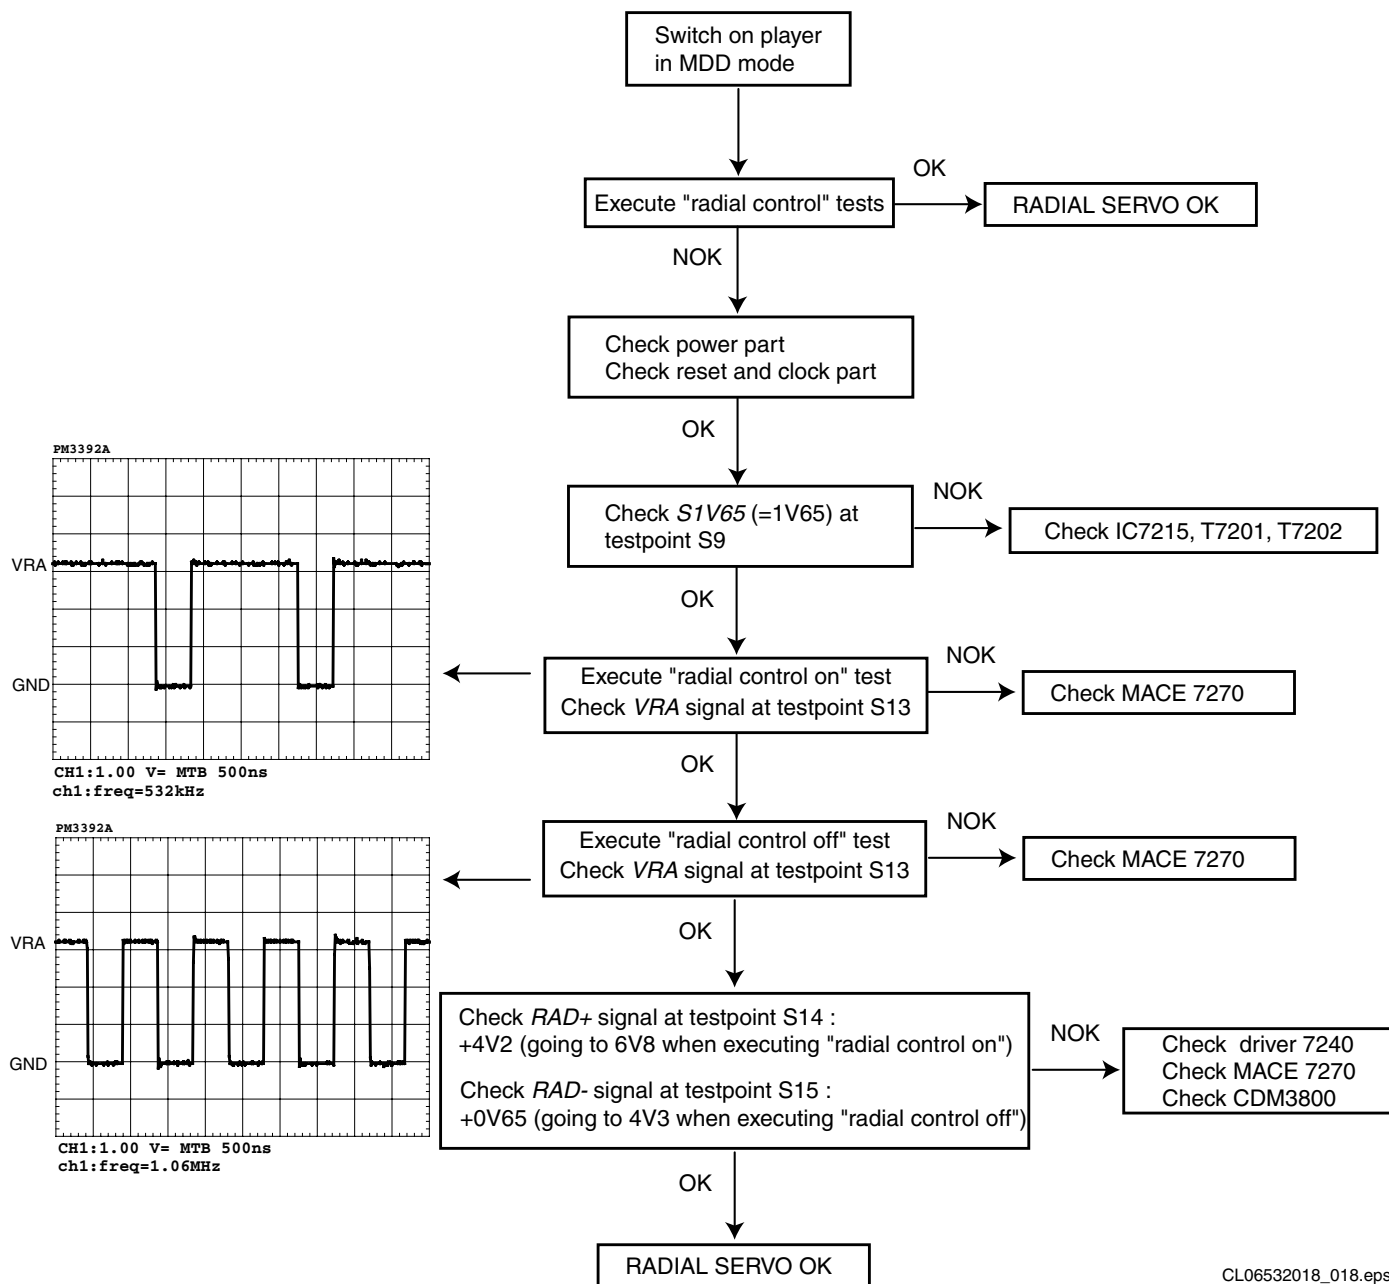


CL06532018_018.eps
290200

Figure 5-16

SERVO DRIVERS CHECK

USE CDR MAIN BOARD CIRCUIT DIAGRAMS 3 AND 4 AND CDR MAIN BOARD BOTTOM VIEW : SERVO DRIVERS TESTPOINTS

SLEDGE SERVO

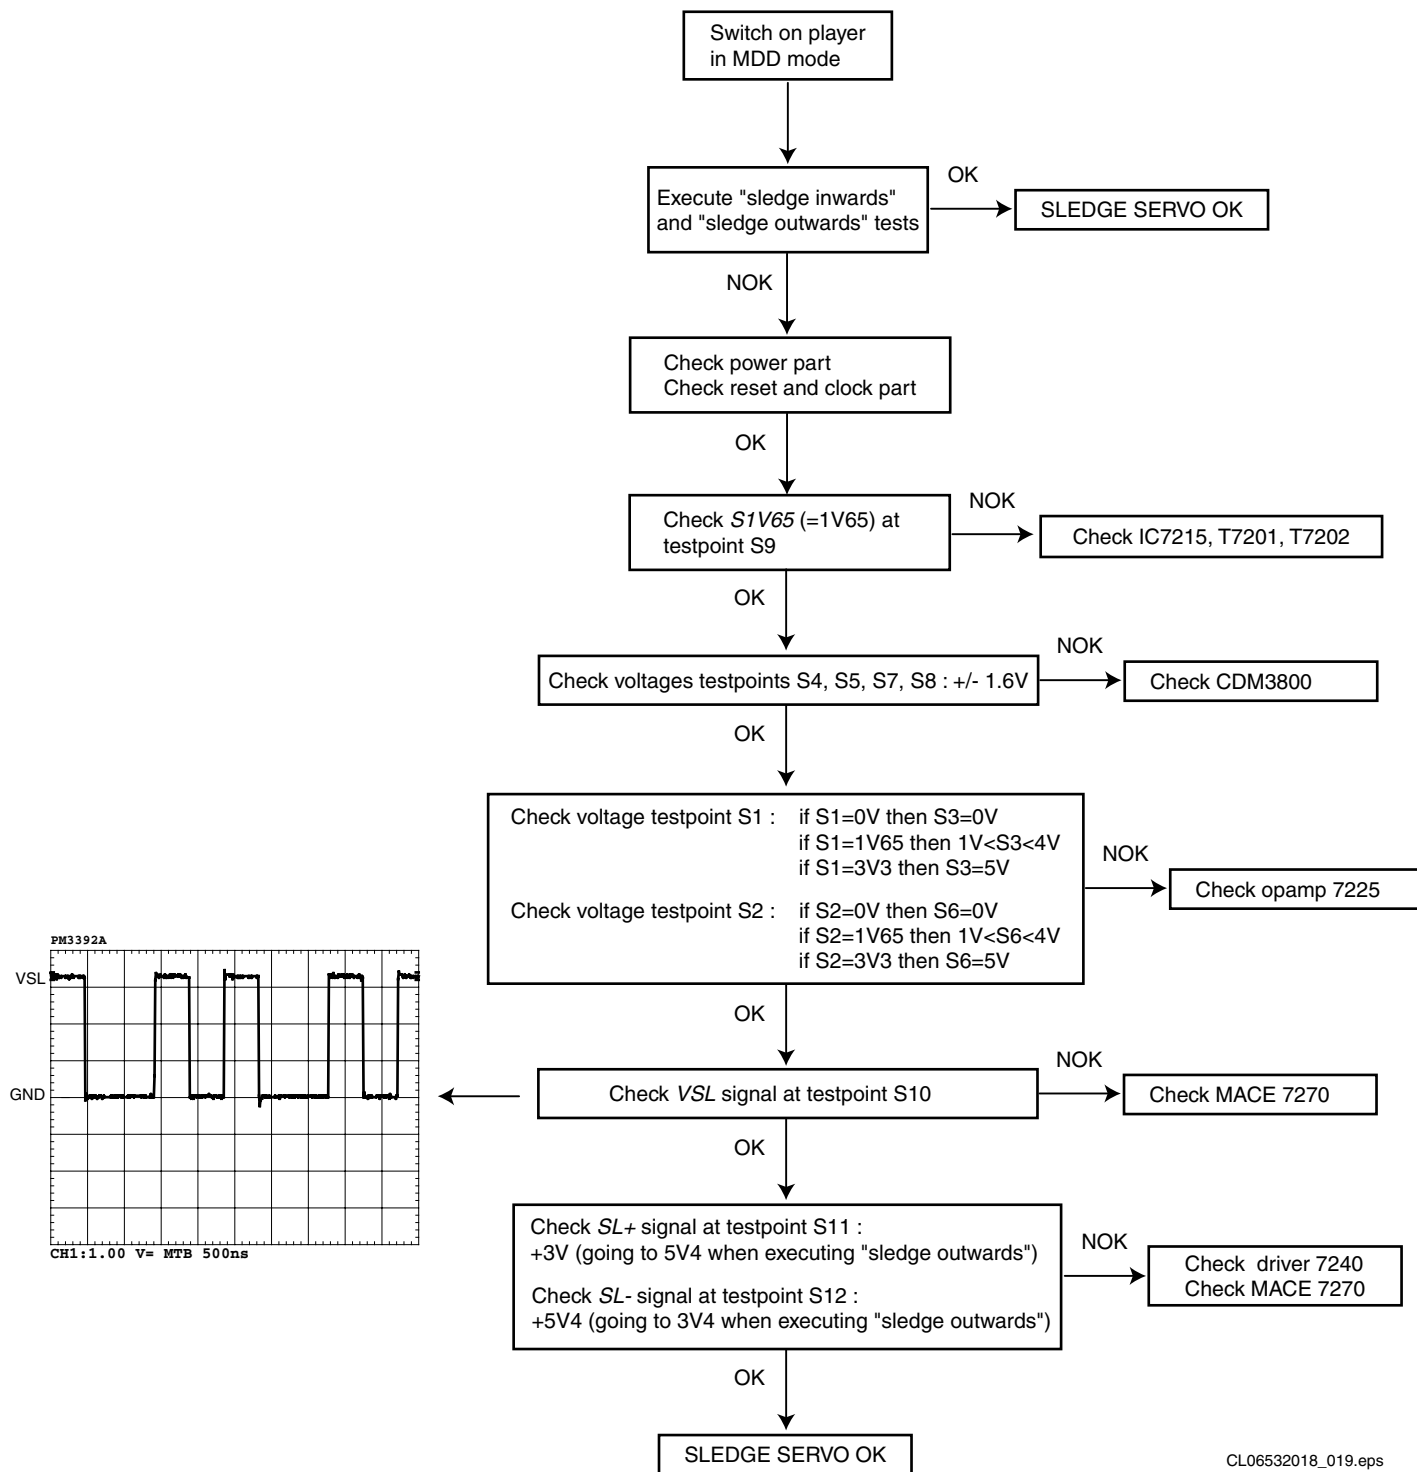

CL06532018_019.eps
290200

Figure 5-17

SERVO DRIVERS CHECK

USE CDR MAIN BOARD CIRCUIT DIAGRAMS 3 AND 4 AND CDR MAIN BOARD BOTTOM VIEW : SERVO DRIVERS TESTPOINTS

TRAY SERVO

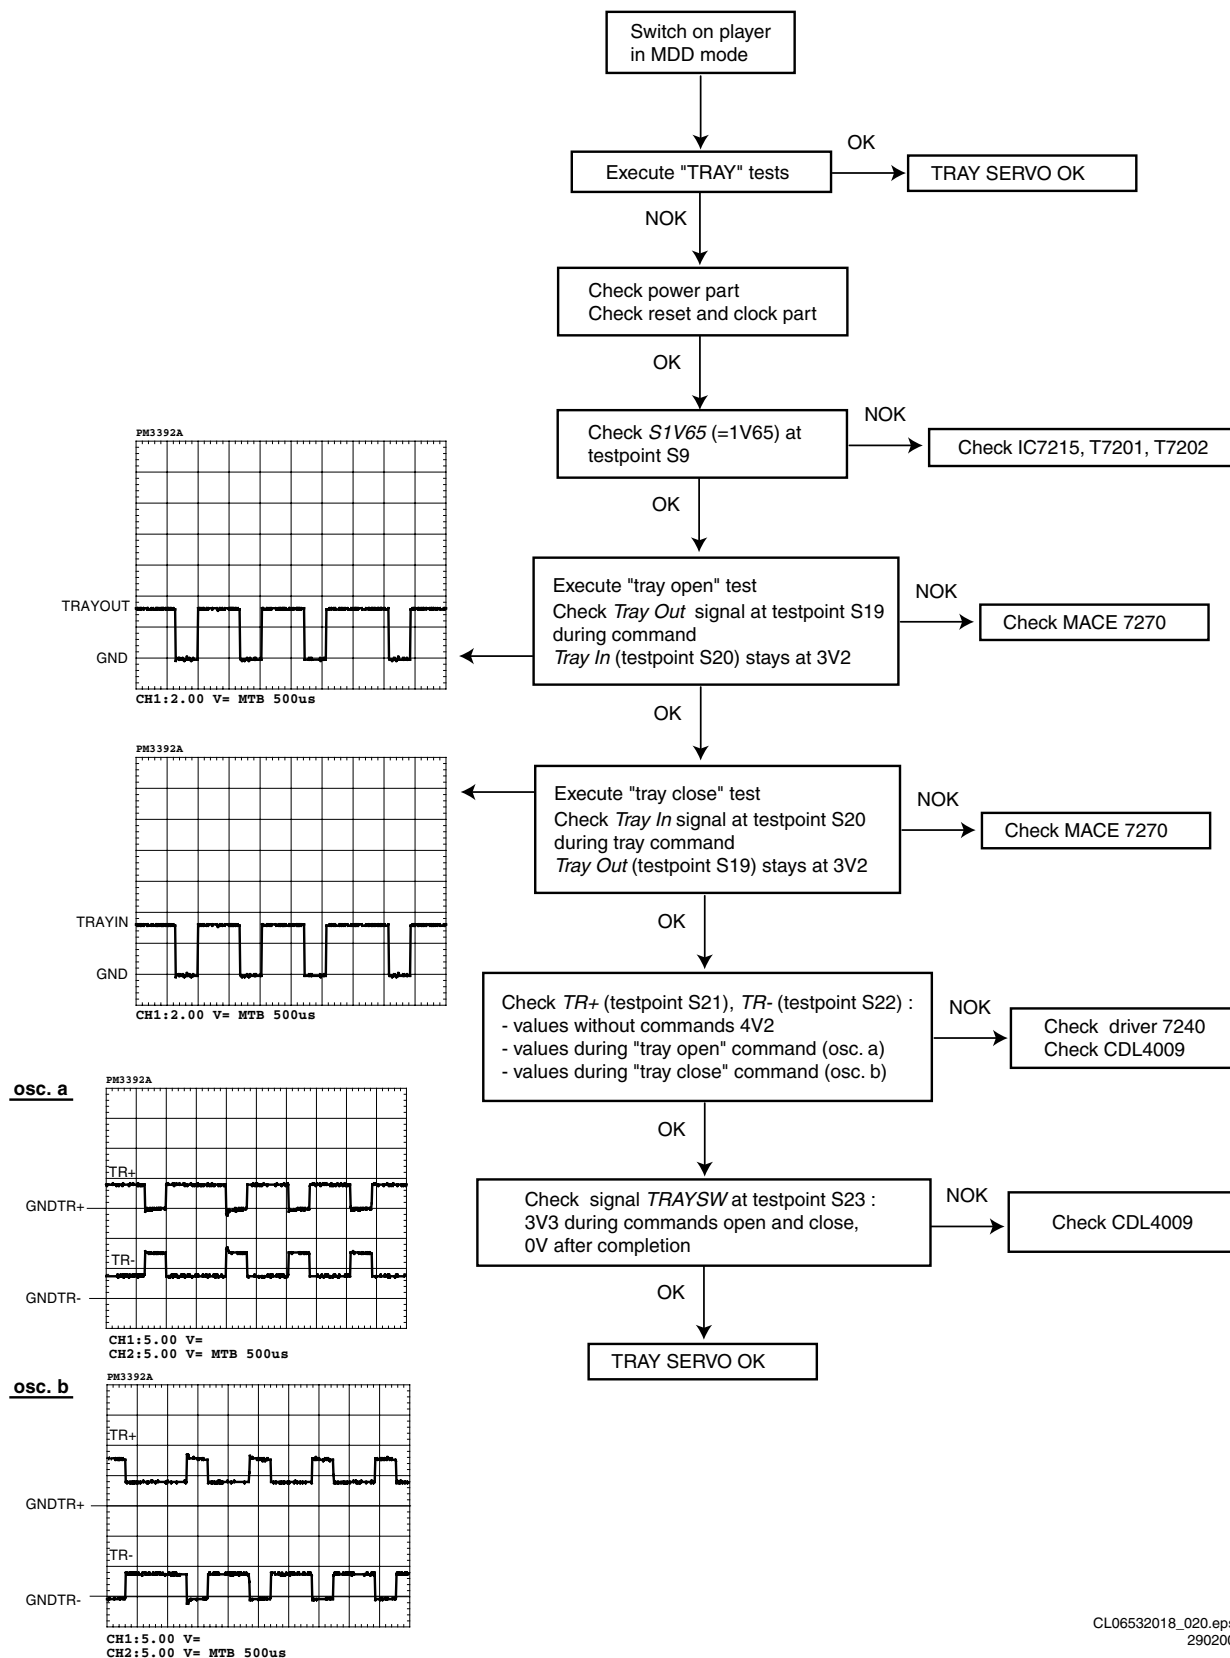


Figure 5-18

5.2.5 Audio signal check

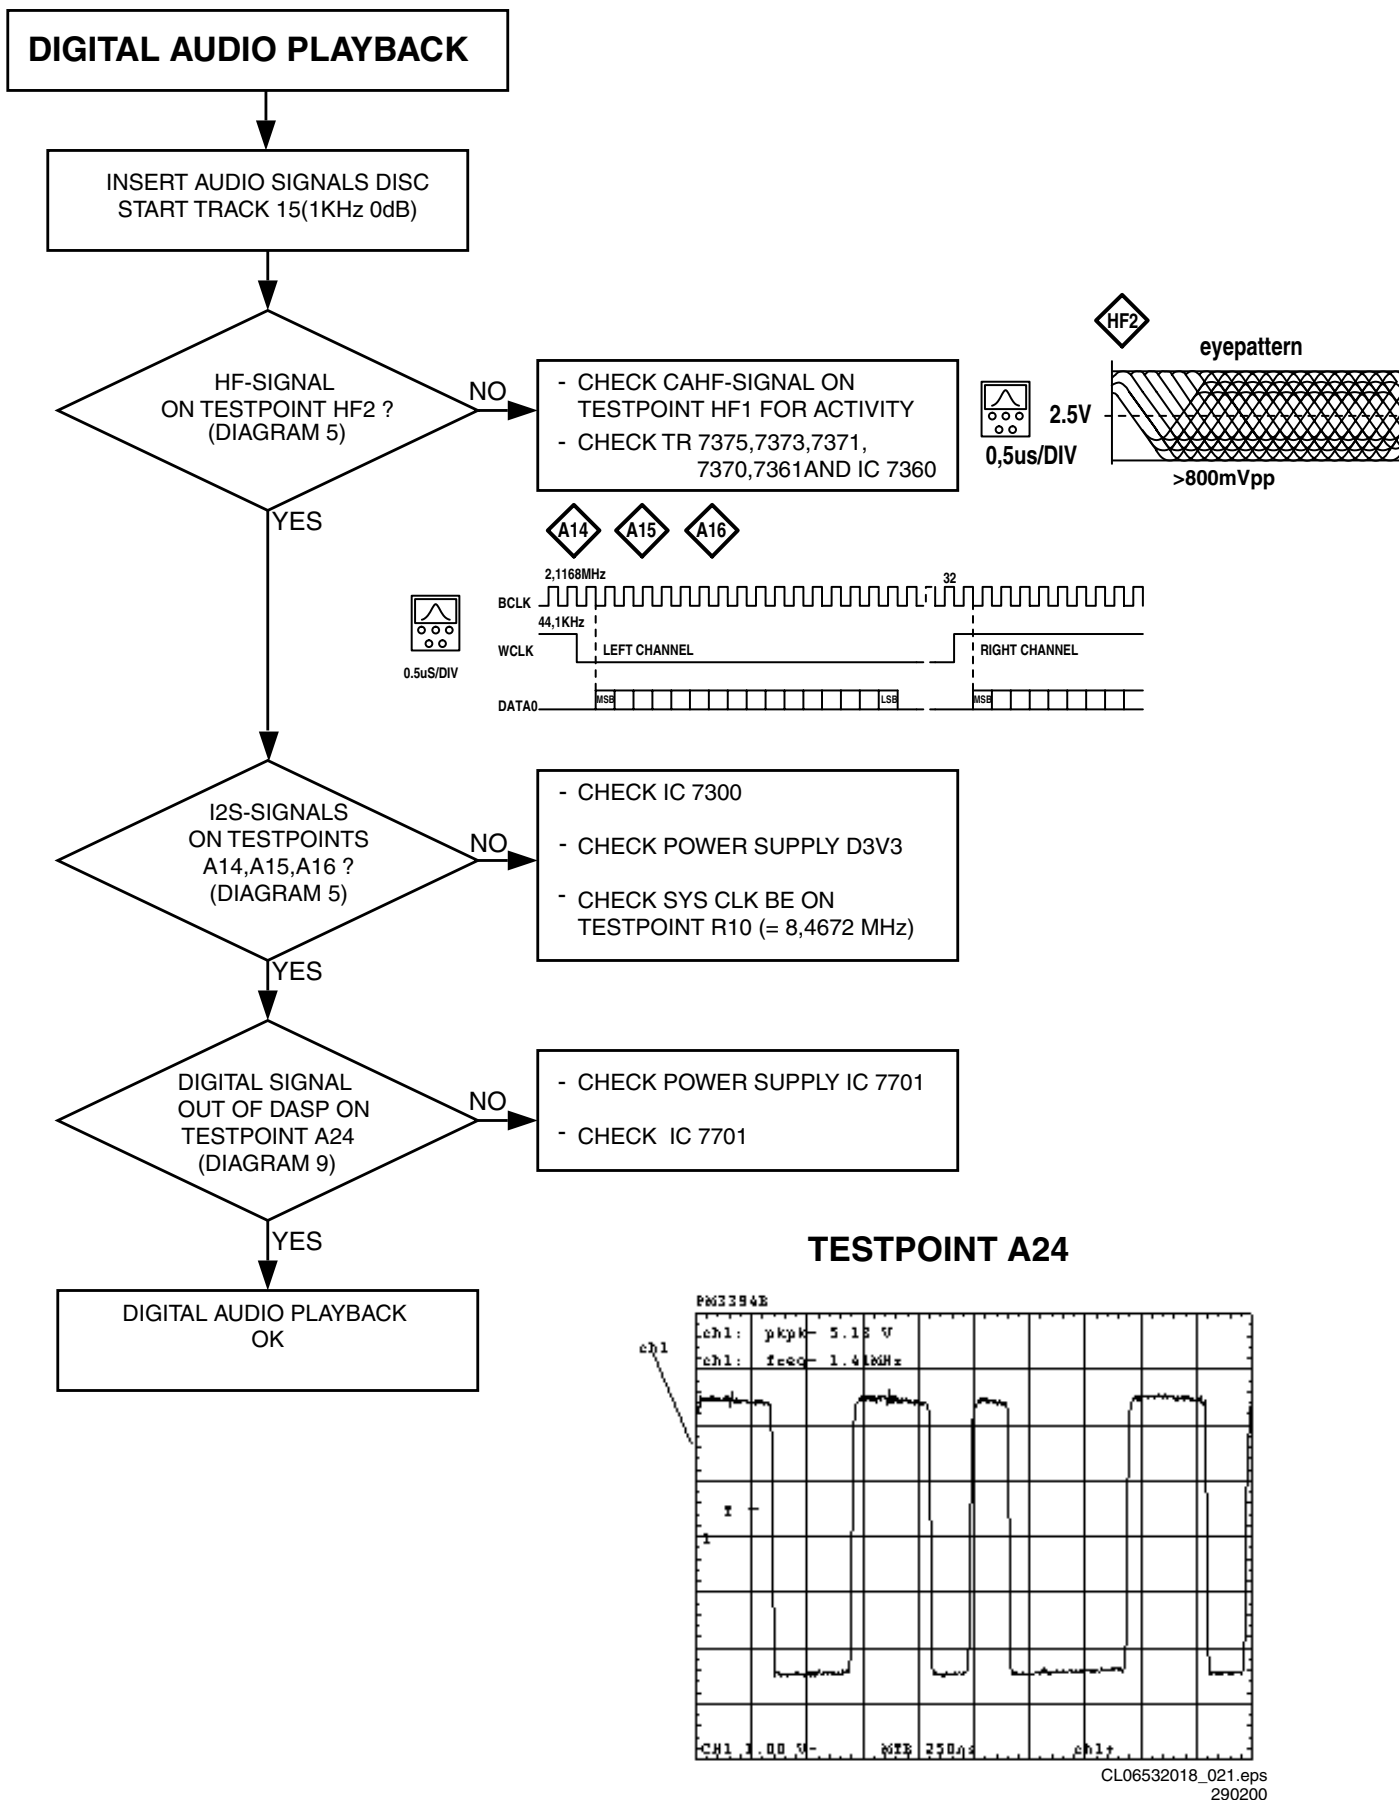


Figure 5-19

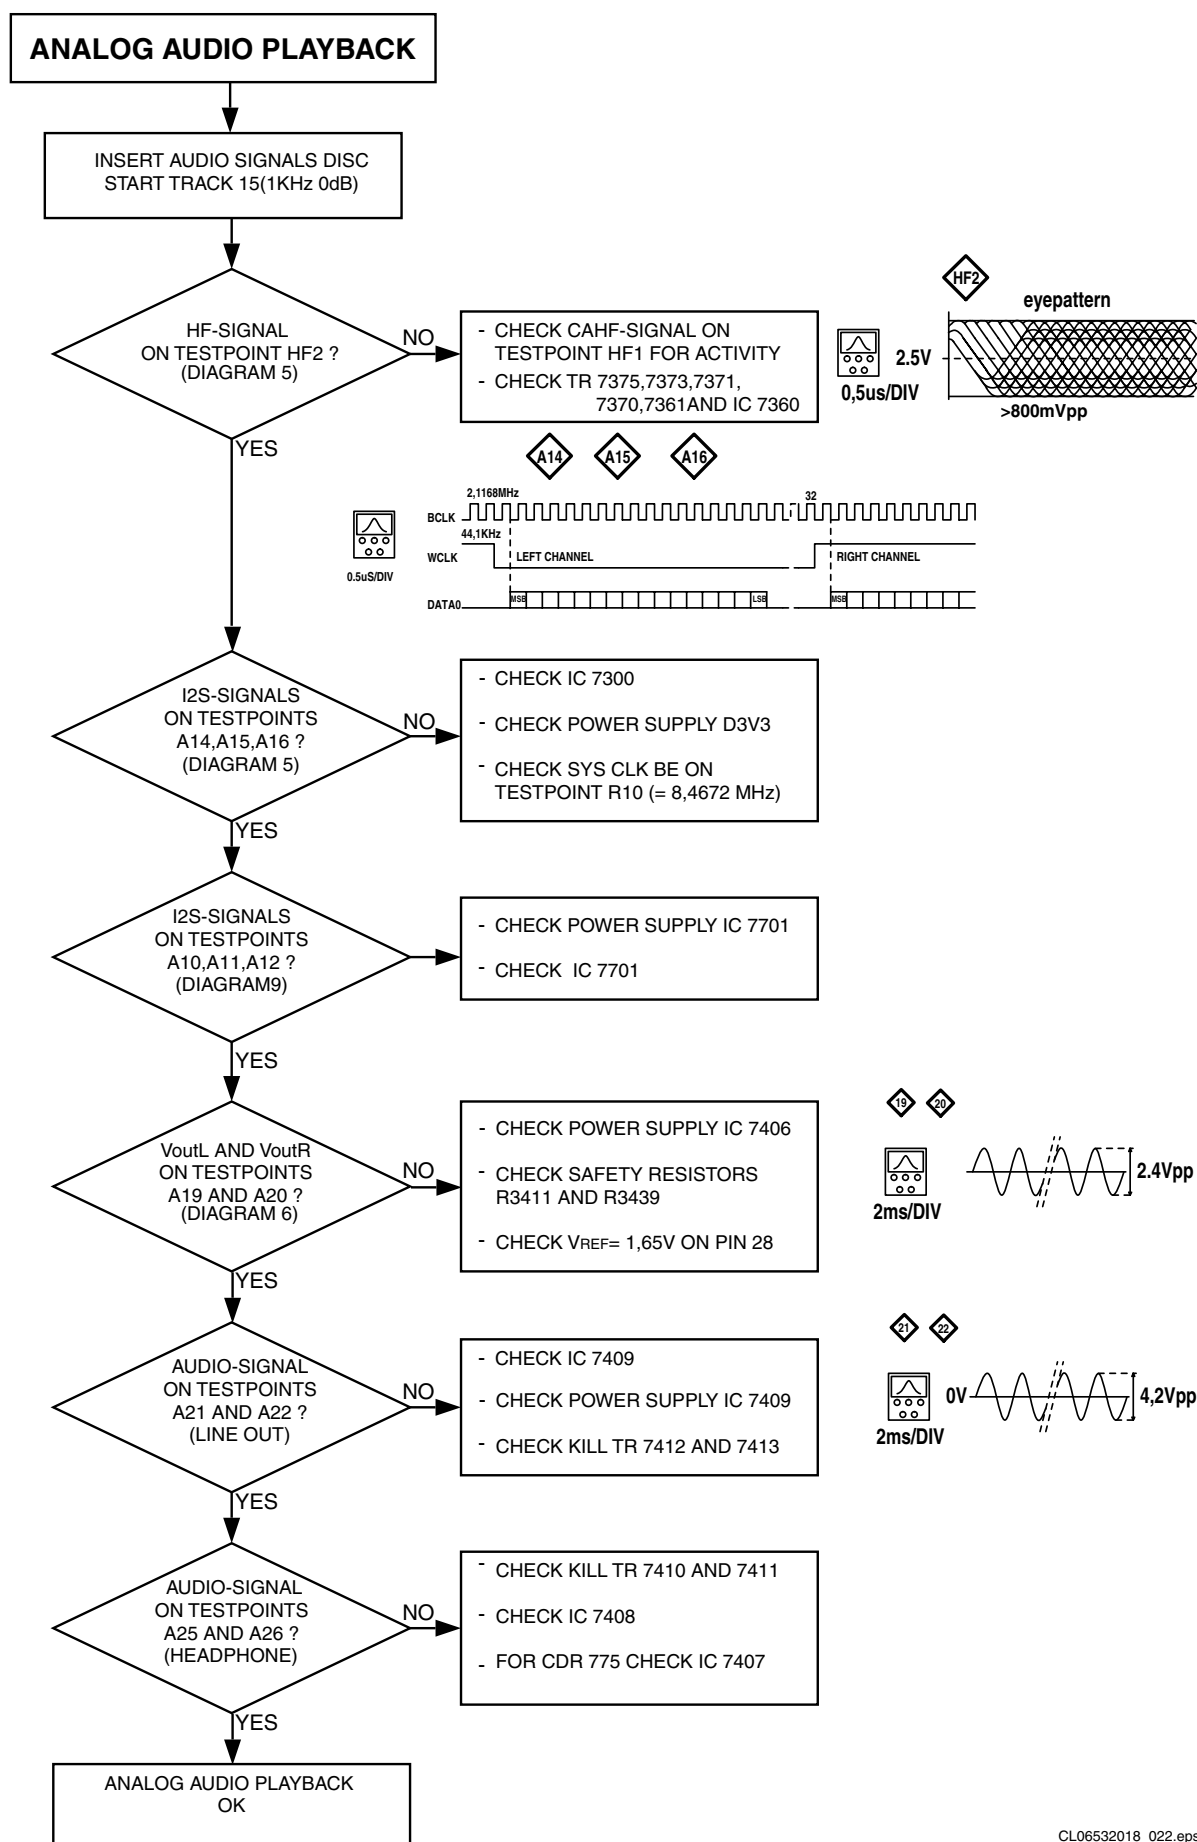


Figure 5-20


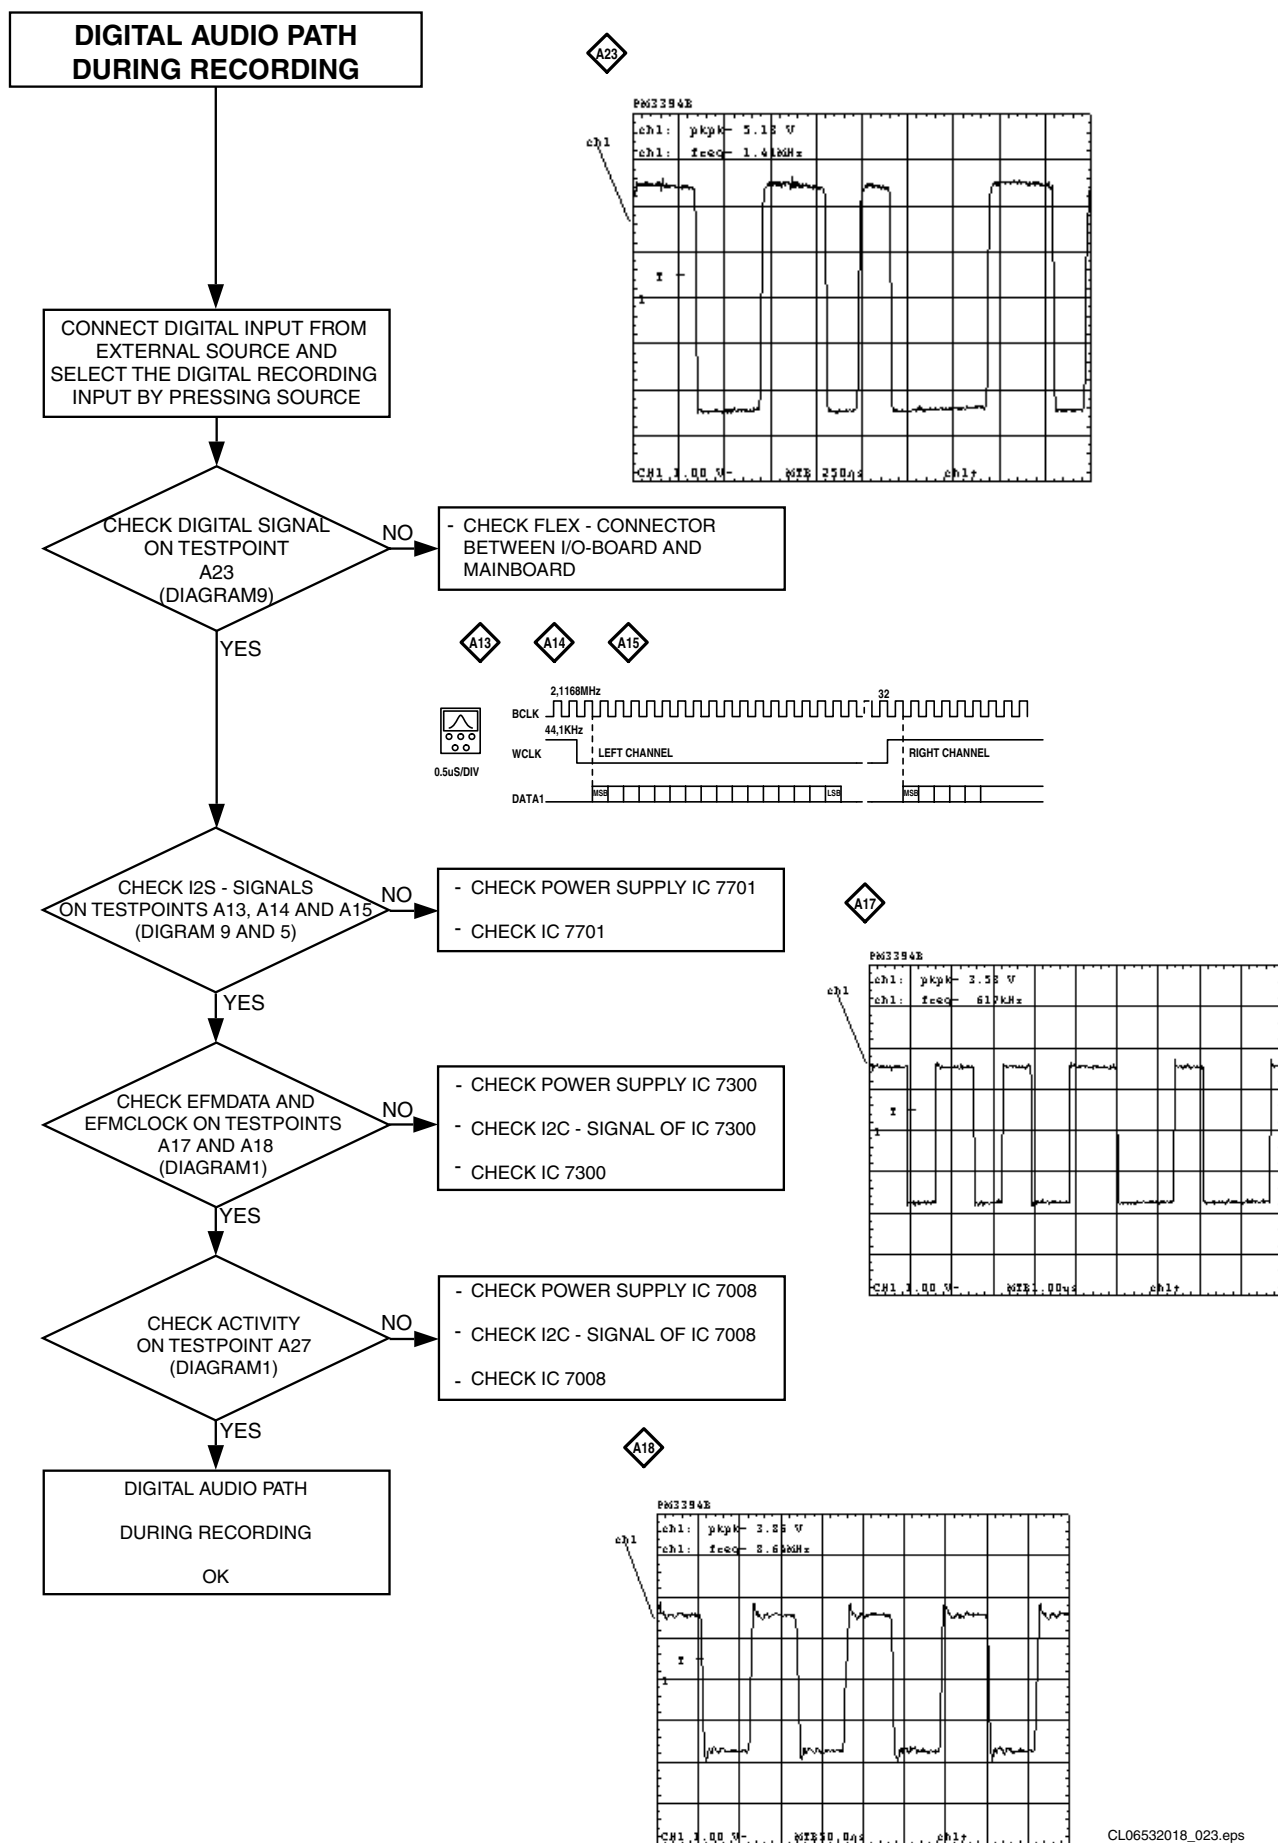


Figure 5-21

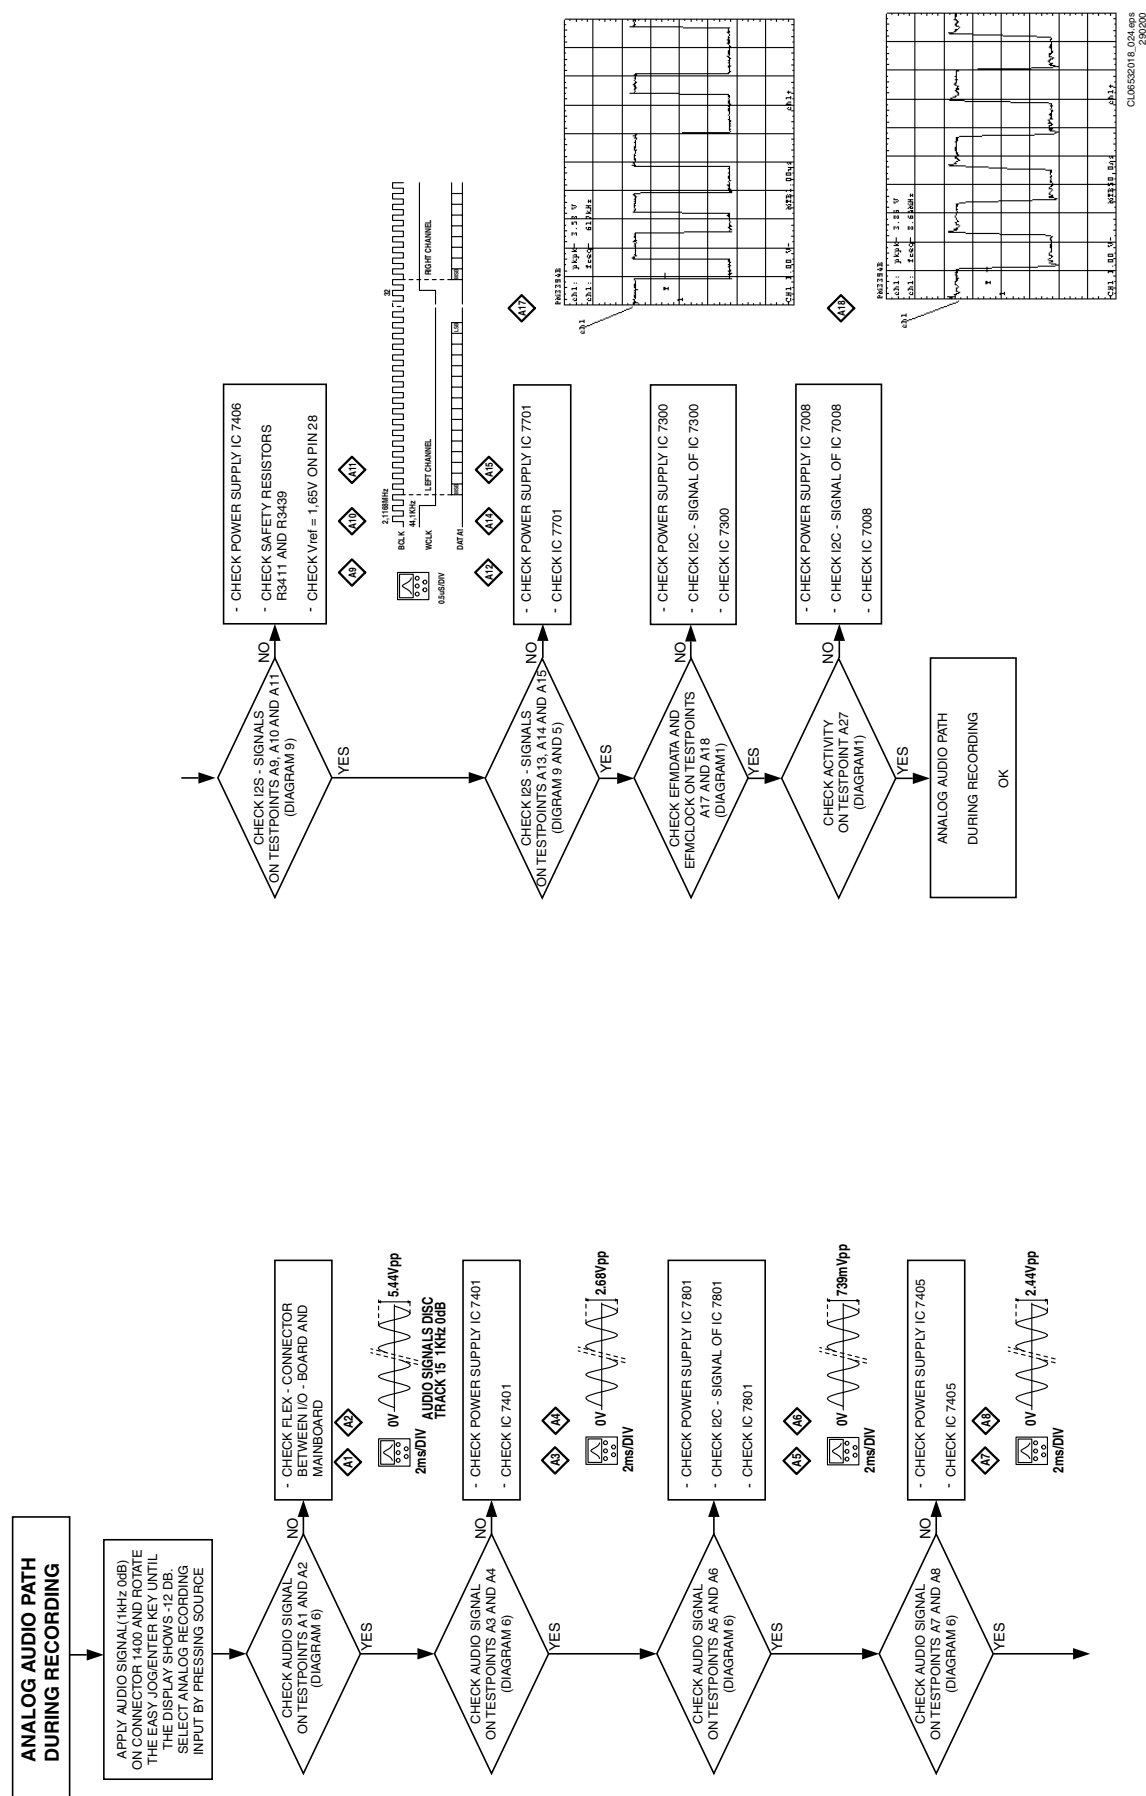

8. Alignments & Adjustments

Each CDR-module composed from CDRloader and CDRmainboard has to be matched via SW filled parameters. This adjustment processed in the factory is under investigation to have it implemented into the COMPAIR tool. As long as this adjustment is not possible to be executed in secondline service workshop, the swop of modules and a central repair has to be continued. Adjustment only has to be done at replacement of CDM and concerned servo circuits. Other repairs (audio signals, replacement of adapted Flash roms etc) can be done without infringing the adjusted components.

As soon as COMPAIR CDR is installed this chapter will be adapted via a service information.

Flash Rom IC 7208 (MACE-ROM) is mounted on a socket and can be replaced after lifting up the loader part above it. Flash Rom IC 7703 (DASP-ROM) has to be soldered.

Take care for both ICs Firmware loaded components are mounted.

In case a module is offered with SW versions 1.4 and 91.48, the complete CDR-module should be replaced.

For SW versions 1.23 and 91.63, IC7703 and IC7208 have to be replaced by the latest SW versions.

9. Circuit description

9.1 Description

A separate circuit description concerning the 3rd generation
CDR recorders is available with order number 3104 125 40100

9.2 List of Abbreviations

SIGNAL NAME	SIGNAL FLOW	FUNCTION AND DESCRIPTION
+12V	main supply voltage from PSU	+12V supply voltage from PSU
+12VA	supply voltage	+12V supply voltage for Audio part
+5V	main supply voltage from PSU	+5V supply voltage from PSU
+5VA	supply voltage	+5V supply voltage for Audio part
+9SRVPWR	IC7558 → IC7240	PoWeR supply for SeRVo driver IC
12VPWR	supply voltage	+12V supply voltage for servo part
-8V	main supply voltage from PSU	-8V supply voltage from PSU
-8VA	supply voltage	-8V supply voltage for Audio part
A(1:20)	IC7701 → R3818,R3819, R3820, R3821, R3897 → IC7703	Address lines 1 to 20 between DASP and flash ROM
A(10:20)	IC7701 → R3819, R3820, R3821 → IC7702	Address lines 10 to 20 between DASP and DRAM
A1	IC7010 → IC7270	amplitude of the “land” reflection relative to the average EFM, voltage output, OPC input
A1LF, A2LF	CONN1000 → IC7010	satellite photo diodes A1, A2 current output
A2	IC7010 → IC7270	amplitude of the “pit” reflection relative to the average EFM, voltage output, OPC input
A-8V	supply voltage	-8V supply voltage for servo part
AEGER		Analog Error signal GEnerator for Recordable
ANTON	IC7008 → IC7010	Alpha INTegrator ON (to AEGER)
ALE	* IC7270 → R3213 → IC7209, IC7300 * IC7270 → R3230	Address Latch Enable; external address latch strobe line, freeze address when low
ALPHA0	IC7270 → IC7010	analog voltage mode output from OPC D/A converter
ALS	IC7008 → IC7010	Alpha Loop Switch (to AEGER)
ASTROBE	IC7008 → IC7010	Alpha STROBE (to AEGER)
ATIP		Absolute Time In Pre-groove (sync signal)
ATIPSYNC	IC7300 → IC7270	ATIP SYNC signal
ATT	* IC7270 → R3717, R3722 * IC7270 → IC7701	ATTenuation request from MACE2 to audio DAC, active low; means that the output can be attenuated in case of search activities
B1LF, B2LF	CONN1000 → IC7010	satellite photo diodes B1, B2 current output
BCLK	IC7701 → R3898A → IC7300	I ² S1 BitCLOCK from DASP to CDR60 (playback and record)
BE_RESET	* IC7701 → R3261 → IC7270 * IC7701 → R3716	Basic Engine RESET, active high
BIASC	IC7008 → R3056	BIAS Current switch CDRW output
BKPT	CONN1819, R3907 → IC7701	JTAG mode select / debug mode BreakPoint
C1LF, .. , C4LF	CONN1000 → IC7010	Central photo diodes C1, C2, C3, C4 current output
CAGAIN	R3016,R3115 → IC7010	set-point laser power on disc, current input
CAHF	CONN1000 → C2374	Central Aperture (central photo diodes) High Frequency current output (C1+C2+C3+C4)
CALF	IC7010 → IC7270	Central Aperture (central photo diodes) Low-pass Filtered signal (DC coupled EFM signal), voltage output, OPC input
CAS0	IC7701 → IC7702	Column Address Strobe DRAM for upper byte

SIGNAL NAME	SIGNAL FLOW	FUNCTION AND DESCRIPTION
CAS1	IC7701 → IC7702	Column Address Strobe DRAM for lower byte
CDR	IC7008 → IC7355	CDR strategy detected output (active high)
CDR60CFLG	IC7300 → R3382B → CONN1812	serial output of error corrector status information of the CDR60-decoder, to be measured at test connector
CDR60CL1	IC7300 → R3382C → CONN1812	output of CLock signal for testing system clock of IC CDR60 at test connector
CDR60CS	IC7270 → R3235B → R3702, IC7300	CDR60 Chip Select, active high
CDR60INT	IC7300 → IC7270	CDR60 INTerrupt line, active low
CDR60LWRT	IC7300 → R3048	CDR60 Laser WRiTe control output
CDR60MEAS1	IC7300 → R3382A → CONN1812	serial output of information about jitter, PLL frequency and asymmetry of bit recovery block in CDR60, to be measured at test connector
CDR60PLL	IC7270 → R3305 → IC7300	CDR60 clock multiplier enable, active high
CDRW	* IC7355D → IC7355C * IC7355D → CONN1000	inverted CDR-strategy-detected signal
CLK_OUT	IC7701 → R3771 → CONN1819	system CLock OUT
CLK_SYS	IC7701 → R3727, R3731	oscillator output
COS-	CONN1220 → IC7225B	Hall feedback signal from sledge motor
COS+	CONN1220 → IC7225B	Hall feedback signal from sledge motor
CSFLASH	IC7701 → IC7703	Chip Select for FLASH or boot device
CSRAM	IC7270 → R3235A → R3703, IC7802	Chip Select SRAM, active low
D(16:31)	IC7701 ↔ R3822, R3823, R3824, R3825 ↔ IC7703, IC7702	Databus bit 16 to 31 between DASP, flash ROM and DRAM
D3V3	supply voltage	+3,3V supply voltage for Digital part
D5V	supply voltage	+5V supply voltage for Digital part
D5VS	supply voltage	+5V supply voltage for Servo part
DALPHA	IC7010 → R3037	ALPHA error signal for laser power control
DASP		Digital Audio Signal Processor
DATAI	IC7701 → R3898C → IC7300	I ² S1 DATA In from DASP to CDR60 (recording)
DATAO	IC7300 → R3314 → IC7701	I ² S1 DATA Out from CDR60 to DASP (playback)
DEEMP	* IC7270 → R3719, R3724 * IC7270 → IC7701	DE-EMphasis control for audio DAC from MACE2, active high; means that de-emphasis is needed in digital filter
DELTAP	IC7016 → R3126	DELTA Power current source drive signal from XDAC
DIG_OUT_C	IC7701 → R3706 → C2707, CONN1400	Common DIGital OUTput (consumer)
DISPLAY_INT	F934 → R3812, IC7701	DISPLAY INTerrupt
DMON	IC7270 → R3324	power save at stop, active low
DOBM_CD	CONN1708, C2731 → R3757 → R3903 → IC7701	Digital Output (EBU output) from CD player in CDR775 to DASP
DOBM_CDR	IC7300 → R3382D → C2379, IC7701	Digital Output (EBU output) from CDR60 to DASP
DRAM_RW	IC7701 → IC7702	Read/Write strobe for DRAM
DSA_ACK_CD	* IC7701 ↔ R3830 ↔ R3831	Data/Strobe/Acknowledge serial communication

SIGNAL NAME	SIGNAL FLOW	FUNCTION AND DESCRIPTION
	↔ CONN1708 * IC7701 ↔ R3830 ↔ C2735	between DASP and CD-player in CDR775
DSA_ACK_CDR	* IC7701 → R3729 → IC7270, CONN1830 * IC7701 → R3729 → R3769	Data/Strobe/Acknowledge serial communication between MACE2 and DASP for CDR; acknowledge input for MACE2 is strobe output for DASP
DSA_DATA_CD	* IC7701 ↔ R3828 ↔ R3829 ↔ CONN1708 * IC7701 ↔ R3828 ↔ C2733	Data/Strobe/Acknowledge serial communication between DASP and CD-player in CDR775
DSA_DATA_CDR	* IC7270↔R3246 ↔ R3813 ↔ IC7701, CONN1830 * IC7270↔R3246 ↔ R3767	Data/Strobe/Acknowledge serial communication between MACE2 and DASP for CDR
DSA_STR_CD	* IC7701 ↔ R3835 ↔ R3832 ↔ CONN1708 * IC7701 ↔ R3835 ↔ C2734	Data/Strobe/Acknowledge serial communication between DASP and CD-player in CDR775
DSA_STR_CDR	* IC7270 → R3245 → IC7701, CONN1830 * IC7270 → R3245 → R3768	Data/Strobe/Acknowledge serial communication between MACE2 and DASP for CDR (strobe output for MACE2 is acknowledge input for DASP)
DSCLK	CONN1819, R3908 → IC7701	reset in / Debug Serial CLoCK in
DSI	CONN1819, R3909 → IC7701	JTAG reset in / Debug Serial clock In
EFM		Eight to Fourteen Modulation = modulation method used for CD storage, also the actual raw CD signal as written or read on or from the CD disc
EFMCLK	IC7300 → IC7008	EFM CLoCK output
EFMDATA	IC7300 → IC7008	EFM DATA output
EFMTIM3		EFM TIMing generator
EPON	IC7008 → R3010 IC7008 → C2010	Erase Power ON
EPONO	IC7008 → R3107	Erase Power ON Open drain output
EPONRC	R3004 → CONN1000	Erase Power ON (after RC circuit)
ERASEC	IC7008 → R3087	ERASE Current switch CDRW output
ERON	IC7008 → IC 7010	ERror ON (to AEGER)
EXT_DIG_IN1	CONN1400 → IC7701	EXTeRnal DIGital Input 1
EXT_DIG_IN2	CONN1702, C2767, C2721 → R3701 → IC7701	EXTeRnal DIGital Input 2 (CDR950 only)
EXT_OPT_IN	CONN1400, C2722 → R3708 → IC7701	EXTeRnal OPTical Input
F_READY	* IC7703 → R3817 → IC7701 * CONN1701 → IC7701	Flash READY detection, this line is forced low as long as the flash is busy with erase or program algorithm
F_RW	IC7701 → IC7708B	Read/Write strobe for Flash ROM
FEN	IC7010 → IC7270	Focus Error Normalized current output
FOC-	IC7240 → CONN1000	FOCus actuator drive signal negative connection
FOC+	IC7240 → CONN1000	FOCus actuator drive signal positive connection
FS30V	D6500 → CONN1000	Forward Sense diode 30V power supply
FSA	CONN1000 → T7119, T7120	Forward Sense photo diode current output
FSCLR	IC7008 → IC7126	Forward Sense signals CLear switch
FSOF	IC7008 → R3052	Forward Sense photo diode sampling OFf

SIGNAL NAME	SIGNAL FLOW	FUNCTION AND DESCRIPTION
FSON	IC7008 → R3051	Forward Sense photo diode sampling ON
FSR	R3040 → IC7270	Forward Sense signal while Reading for read control loop
FSRS	IC7008 → IC7126D	Forward Sense photo diode Read Sampling
FSW	R3050 → IC7270	Forward Sense signal while Writing for write control loop
FSWS	IC7008 → IC7126C	Forward Sense photo diode Write Sampling
FWEN	IC7270 → IC7208, R3806	Flash EPROM Write ENable
HALL_U, HALL_V, HALL_W	IC7330 → IC7300, CONN1812	HALL feedback signals from turn table motor via hall motor driver
HFS0	IC7270 → R3249 → IC7360	select HF circuit
I ² C		Inter IC
I ² C_CLK	* IC7701, R3711 → R3715 → C2709 → F934 * IC7701, R3711 → IC7801	I ² C CLoCK line used for display slave processor and digital potmeter
I ² C_DATA	* IC7701, R3712 ↔ R3713 ↔ C2708, R3714 ↔ F934 * IC7701, R3712 ↔ IC7801	I ² C DATA line used for display slave processor and digital potmeter
I ² CL	R3248B → IC7207, R3247C	I ² C CLoCK line
I ² CSCL	* IC7207 → IC7008 * IC7207 → IC7010 * IC7207 → R3248B	I ² C Serial CLoCK line
I ² CSDA	* IC7207 ↔ IC7008 * IC7207 ↔ IC7010 * IC7207 ↔ R3248A	I ² C Serial DATA line
I ² DA	R3248A ↔ IC7270, R3247D	I ² C DATA line
I ² S_BCLK_AI	IC7701 → R3814 → IC7406	I ² S4 Bit CLoCK for CODEC (ADC for CDR950) Analog Input (record from analog source)
I ² S_BCLK_AO	IC7701 → R3894A → IC7406	I ² S2 Bit CLoCK for CODEC (DAC for CDR950) Analog Output
I ² S_BCLK_CD	CONN1708, C2739 → R3834 → IC7701	I ² S3 Bit CLoCK from CD player (record n=2) (CDR775 only)
I ² S_BCLK_MIC	CONN1708, C2739 → R3834 → IC7701	I ² S3 Bit CLoCK from MICrophone (CDR950 only)
I ² S_DATA_AI	IC7406 → IC7701	I ² S4 DATA from CODEC (ADC for CDR950) Analog Input (record from analog source)
I ² S_DATA_AO	IC7701 → R3894C → IC7406	I ² S2 DATA for CODEC (DAC for CDR950) Analog Output
I ² S_DATA_CD	CONN1708, C2738 → R3836 → IC7701	I ² S3 DATA from CD player (record n=2) (CDR775 only)
I ² S_DATA_MIC	CONN1708, C2738 → R3836 → IC7701	I ² S3 DATA from MICrophone (CDR950 only)
I ² S_WS_AI	IC7701 → R3743 → IC7406	I ² S4 Word CLoCK for CODEC (ADC for CDR950) Analog Input (record from analog source)
I ² S_WS_AO	IC7701 → R3894B → IC7406	I ² S2 Word CLoCK for CODEC (DAC for CDR950) Analog Output
I ² S_WS_CD	CONN1708, C2740 → R3833 → IC7701	I ² S3 Word CLoCK from CD player (record n=2) (CDR775 only)

SIGNAL NAME	SIGNAL FLOW	FUNCTION AND DESCRIPTION
I ² S_WS_MIC	CONN1708, C2740 → R3833 → IC7701	I ² S3 Word CLoCK from MICrophone (CDR950 only)
I ² S1_MS	IC7270 → R3910, IC7701	I ² S1 Master-Slave interrupt from MACE2
IE	T7121 → CONN1000	laser Erase drive current signal
INT_COPY_ANA	* IC7701 → R3721 → IC7401 * IC7701 → R3721 → R3410	select INTernal COPY ANALog (in case of copy protected disc or track on CD drive) (CDR775 only)
IR	* T7135 → CONN1000 * T7135 → R3056 * T7135 → IC7008	laser Read drive current signal
IW	* T7122 → CONN1000 * T7122 → D6003	laser Write drive current signal
KEY_PRESSED	IC7706B → R3816 → IC7701	KEY PRESSED interrupt
KILL	T7560, T7561, R3560 → CONN1400, R3424, R3428	KILL signal from power supply part to audio outputs
KILL_OUT	IC7701 → R3532	disables the KILL activity from the PSU; 1 = no kill, 0 = kill active
L12V	supply voltage	+12V supply voltage for servo/Laser part
L3_CLK	IC7701 → R3725 → IC7406	L3 interface CLoCK line / control CODEC (not for CDR950)
L3_DATA	IC7701 ↔ R3728 ↔ IC7406	L3 interface DATA line with CODEC (not for CDR950)
L3_MODE	IC7701 → R3735 → IC7406	L3 interface MODE line selects data or address transfer mode for CODEC (not for CDR950)
L5V	supply voltage	+5V supply voltage for servo/Laser part
L-5V	supply voltage	-5V supply voltage for servo/Laser part
LASCK	IC7270 ↔ R3248D	CloCK line DAC LASer control
LASDACCK	R3248D ↔ IC7016	CloCK line DAC LASer control
LASDACDI	R3248C ↔ IC7016	Data line DAC LASer control
LASDACLD	R3212 ↔ IC7016	LoaD line DAC LASer control
LASDD	IC7270 ↔ R3248C	Data line DAC LASer control
LASLD	* IC7270 ↔ R3238 ↔ R3212 * IC7270 ↔ R3232	LoaD line DAC LASer control
LEFT	CONN1708, C2743 → IC7401C, IC7407C	audio output LEFT channel from CD-player in CDR775
LLP	IC7270 → IC7300	Laser Low Power (active high), switches the laser from write to read power whenever the device tends to go offtrack
LWRT	R3048 → IC7008	Laser WRiTe control input
MA(16:17)	IC7270 ↔ IC7208	bank switch higher address lines
MA(8:15)	IC7270 ↔ IC7802 ↔ IC7208	address bus high byte
MACE2		Mini All Cd Engine (minus decoder + OPC + PCS + extra RAM)
MAD(0:7)	IC7270 ↔ IC7209 ↔ IC7802 ↔ IC7208 ↔ IC7300	bi-directional data bus / address bus low byte
MIRN	IC7010 → IC7270	MIRror Normalized (disc reflection) current output
MOTO1	IC7300 → IC7355A	turn table MOTOr control output

SIGNAL NAME	SIGNAL FLOW	FUNCTION AND DESCRIPTION
MRDN	IC7270 → R3276 → R3242A, IC7802, IC7300	Master ReaD, read strobe for external peripherals, active low
MUTE	* IC7270 → R3718, R3723 * IC7270 → IC7701	MUTE control from MACE2 to DASP, active low
MWRN	IC7270 → R3280 → R3242B, IC7802, IC7300	Master WRite, write strobe for external peripherals, active low
NMUTE	IC7701 → R3726, IC7406	MUTE output, low active
OFFTRACK	IC7270 → IC7300	OFFTRACK detection flag
OPC		Optimum Power Calibration
P12VKILL	supply voltage	+12V supply voltage for KILL-circuit
PCS		Position Control Sledge
PCSCOS	IC7225B, C2229 → IC7270, CONN1812	Position Control Sledge COS feedback signal
PCSSIN	IC7225A, C2227 → IC7270, CONN1812	Position Control Sledge SIN feedback signal
PDAR		Photo Diode Amplifier Recordable
PERASE	R3036, R3031, R3030, R3029, R3028, R3027, R3020 → IC7002C, R3043, T7113	laser Power switch for ERASE
POWER_UP	IC7270 → R3243C, R3556, R3538	standby pin, high level activates essential powers necessary for full function; overrules HI_POWER setting
PPN	IC7010 → IC7050C	Push-Pull signal, Normalized, balanced, voltage output
PRCOARSE	IC7016 → R3057	drive signal from Power Read COARSE DAC for read current source
PRFINE	IC7016 → R3058	drive signal from Power Read FINE DAC for read current source
PROF_EBU	IC7701 → CONN1820	PROFessional digital output (CDR950 only)
PSEn	* IC7270 → R3260 → IC7208 * IC7270 → R3231	Program Store ENable; external ROM output enable line, active low
PW	R3081 → IC7008	Write Power signal to OPC input of MACE2
PWB	IC7001C → IC7016	drive signal to XDAC's for write and erase current sources and VCAGAIN
PWD	* IC7016 → IC7002B * IC7016 → IC7002C	drive signal from XDAC for write and erase current sources
PWMAX	IC7016 → R3073	PW MAXimum signal from DAC used for determining set point for laser power during writing
PWMIN	IC7016 → R3072	PW MINimum signal from DAC used for determining set point for laser power during writing
PWRITE	R3035, R3026, R3025, R3024, R3023, R3022, R3021 → IC7002B, R3044, T7124	laser Power switch for WRITE
RAD-	IC7240 → CONN1000	Radial actuator drive signal negative connection
RAD+	IC7240 → CONN1000	Radial actuator drive signal positive connection
RAS0	IC7701 → IC7702	Row Address Strobe DRAM
RCK	IC7300 → R3319 → IC7701	EIAJ subcode clock from CDR60 to DASP (CD text interface)
RDGAIN1	IC7008 → R3054	forward sense ReaD GAIN switch 1

SIGNAL NAME	SIGNAL FLOW	FUNCTION AND DESCRIPTION
RDGAIN2	IC7008 → C2027	forward sense ReaD GAIN switch 2
RDGAIN3	IC7008 → C2060	forward sense ReaD GAIN switch 3
RE	IC7010 → IC7215A	Radial Error signal for fast track counting, voltage output
RECORDING	* IC7008 → IC7010 * IC7008 → CONN1000 * IC7008 → IC7355C	RECORDING output (active high)
REN	IC7010 → IC7270	Radial Error Normalized current output
RIGHT	CONN1708, C2742 → IC7401A, IC7407A	audio output RIGHT channel from CD-player in CDR775
RXD_TOOL	CONN1818 → IC7701	Receive of UART for test TOOL
S1V65	Reference Voltage	1.65V delivered by IC7215B for Servo part
S2V9	Reference Voltage	2.9V delivered by IC7010 for Servo part
SEL_HP_OUT	* IC7701 → R3720 → IC7407	SElect HeadPhone OUTput in DJ-mode (for CDR775 only)
SFSY	IC7701 → R3756 → IC7300	EIAJ subcode synchronisation from DASP to CDR60 (CD text interface)
SIN-	CONN1220 → IC7225A	Hall feedback signal from sledge motor
SIN+	CONN1220 → IC7225A	Hall feedback signal from sledge motor
SL-	IC7240 → R3265 → CONN1220	SLedge motor drive signal negative connection
SL+	IC7240 → CONN1220	SLedge motor drive signal positive connection
SRSTN	IC7270 → R3243B, IC7300	Slave ReSeT out (CDR60 reset), active low
STANDBY	IC7270 → R3807 → R3887 → IC7701	STANDBY pin, high level activates essential powers necessary for full function; overrules HI_POWER setting
SUB	IC7701 → R3710 → IC7300	EIAJ subcode data from DASP to CDR60 (CD text interface)
SYS_CLK_11W	IC7701 → R3732 → IC7406	11.2896 MHz SYStem CLock for AD/DA datapath
SYS_CLK_16W	IC7701 → R3894D → IC7706A	16.9344 MHz SYStem CLock for producing SYS_CLK_BE
SYS_CLK_8W	IC7706A → R3815 → CONN1708	SYStem CLock CD player (8.4672 MHz) (CDR775 only)
SYS_CLK_BE	IC7706A → R3826 → IC7270	SYStem CLock Basic Engine (8.4672 MHz)
SYS_RESET	* IC7701 → R3758 → CONNF934 * IC7701 → R3770 → T7707 → CONN1708	SYStem RESET to display assy (and CD player for CDR775)
TCK	CONN1819 → R3906, IC7701	JTAG CLock signal
TDSO	IC7701 → CONN1819	JTAG Serial Data Out / debug data out
TERMB	IC7270 ↔ CONN1818	UART connection with MACE
TLN	IC7010 → IC7270	Track Loss Normalized current output
TR-	IC7240 → CONN1200	TRay motor drive signal negative connection
TR+	IC7240 → CONN1200	TRay motor drive signal positive connection
TRACE99_RXD	CONN1818 → R3838, IC7701	TRACE99 test tool receive data
TRACE99_TXD	IC7701 → CONN1818	TRACE99 test tool transmit data
TRAYIN	IC7270 → IC7240	move TRAY IN line, active low

SIGNAL NAME	SIGNAL FLOW	FUNCTION AND DESCRIPTION
TRAYOUT	IC7270 → IC7240	move TRAY OUT line, active low
TRAYSW	* CONN1200 → R3747 * CONN1200 → R3748	TRAY SWitch signal from loader assy
TRAYSWF	R3748, C2214 → IC7270	Filtered TRAY SWitch signal, low is completely out or in
TXD_TOOL	IC7701 → CONN1818	Transmit of UART for test TOOL
U+, U-, V+, V-, W+, W-	CONN1330 → IC7330	hall feedback signals from turn table motor to hall motor driver
UCOIL, VCOIL, WCOIL	IC7330 → CONN1330	drive signals for turn table motor
VCAGAIN	IC7016 → IC7005A	set-point laser power on disc, voltage output
VDC1	CONN1500 → CONNF934	supply voltage for display assy
VDC2	CONN1500 → CONNF934	supply voltage for display assy
VFO	IC7270 → R3295 → R3244	FOcus actuator drive output
VFTD	CONN1500 → CONNF934	Voltage Fluorescent Tube Display (display assy)
VRA	IC7270 → R3297 → R3254	RAdial actuator drive output
VSL	IC7270 → R3299 → IC7240	SLedge actuator drive output
WCLK	IC7701 → R3898B → IC7300	I ² S1 WordCLOCK from DASP to CDR60 (playback and record)
WOBBLE	IC7050C → IC7300	analog WOBBLE signal of pre-groove detected by PPN-signal
WPON	* IC7008 → R3009 * IC7008 → C2009	Write Power ON
WPONO	IC7008 → R3106	Write Power ON Open drain output
WPONRC	R3003 → CONN1000	Write Power ON (after RC circuit)
XDAC		multiplying DAC

10. Spareparts List

ELECTRICAL PARTSLIST MAINBOARD CDR'99

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
1000	482226710666	30 P. FEM.	+	+	+	+
1541	482225251173	19398E1(1,000A)	+	+	+	+
1542	482225251173	19398E1(1,000A)	+	+	+	+
1543	482225251173	19398E1(1,000A)	+	+	+	+
1707	482224210757	33.868 000MHZ SM 20P CX-11F	+	+	+	+
1708	482226760409	CONN 22P FEMALE	+	-	-	-
1820	482226710666	30 P. FEM.	-	-	-	+
2001	482212612105	CER2 0805 X7R 50V 33NF PM5	+	+	+	+
2002	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2003	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2009	482212233753	150PF 5%NP0 50V	+	+	+	+
2010	482212233753	150PF 5%NP0 50V	+	+	+	+
2011	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2012	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2013	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2014	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2015	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2016	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2018	482212613694	68PF 1% NP0 63V	+	+	+	+
2019	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2020	482212613188	15NF 5% X7R 63V	+	+	+	+
2021	482212233177	10NF 20% X7R 50V	+	+	+	+
2022	482212233177	10NF 20% X7R 50V	+	+	+	+
2023	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2024	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2025	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2026	222286115272	CER1 0805 NP0 50V	+	+	+	+
2027	222286115272	CER1 0805 NP0 50V	+	+	+	+
2028	532212232531	100PF 5%NP0 50V	+	+	+	+
2029	532212232531	100PF 5%NP0 50V	+	+	+	+
2030	532212231647	1NF10%X7R 63V	+	+	+	+
2031	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2032	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2033	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2037	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2038	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2039	482212233177	10NF 20% X7R 50V	+	+	+	+
2040	482212233172	390PF 5% NP0 50V	+	+	+	+
2041	532212234099	470PF10%X7R 63V	+	+	+	+
2042	532212233538	150PF 2%NP0 63V	+	+	+	+
2043	532212231647	1NF10%X7R 63V	+	+	+	+
2044	482212613486	15PF 2% NP0 63V	+	+	+	+
2045	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2046	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2047	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2048	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2049	532212611579	3,3NF10%X7R 63V	+	+	+	+
2050	482212614238	CER2 0603 X7R 50V 2N2 COL R	+	+	+	+
2052	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2053	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2054	482212614238	CER2 0603 X7R 50V 2N2 COL R	+	+	+	+
2056	532212611579	3,3NF10%X7R 63V	+	+	+	+
2057	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2058	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2059	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2060	532212611579	3,3NF10%X7R 63V	+	+	+	+
2061	482212411947	10UF 20% 16V	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
2063	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2078	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2080	482212614238	CER2 0603 X7R 50V 2N2 COL R	+	+	+	+
2081	532211680853	560PF 5%NP0 63V	+	+	+	+
2082	482212614238	CER2 0603 X7R 50V 2N2 COL R	+	+	+	+
2083	482212613956	68PF 5% NP0 63V CASE 0603	+	+	+	+
2084	482212232627	2.7NF10%X7R 50V	+	+	+	+
2126	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2207	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2208	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2209	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2214	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2216	482212233777	47PF 5%NP0 63V	+	+	+	+
2217	482212614494	22NF 10% X7R 25V 0603	+	+	+	+
2218	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2220	319801734730	CER2 0603 X7R 16V 47N COL	+	+	+	+
2221	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2222	482212614226	82PF 5% NP0 50V 0603	+	+	+	+
2224	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2225	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2226	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2227	319801631020	CER1 0603 NP0 25V 1N	+	+	+	+
2228	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2229	319801631020	CER1 0603 NP0 25V 1N	+	+	+	+
2230	482212614494	22NF 10% X7R 25V 0603	+	+	+	+
2231	482212614494	22NF 10% X7R 25V 0603	+	+	+	+
2232	482212614494	22NF 10% X7R 25V 0603	+	+	+	+
2233	319801631020	CER1 0603 NP0 25V 1N	+	+	+	+
2234	319801631020	CER1 0603 NP0 25V 1N	+	+	+	+
2235	319801631020	CER1 0603 NP0 25V 1N	+	+	+	+
2240	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2241	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2242	482212441796	22UF20% 16V	+	+	+	+
2243	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2255	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2256	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2272	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2273	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2274	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2275	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2276	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2277	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2278	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2283	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2284	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2285	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2286	482212233127	2,2NF10%X7R 63V	+	+	+	+
2287	482212233127	2,2NF10%X7R 63V	+	+	+	+
2288	532212232654	22NF10%X7R 63V	+	+	+	+
2289	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2291	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2300	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2302	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2303	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2304	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2305	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2306	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2308	222286115222	CER1 0805 NP0 50V 2N2 PM5	+	+	+	+
2309	222286115222	CER1 0805 NP0 50V 2N2 PM5	+	+	+	+
2310	222286115222	CER1 0805 NP0 50V 2N2 PM5	+	+	+	+
2314	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
2315	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2316	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2317	532212611579	3,3NF10%X7R 63V	+	+	+	+
2318	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2319	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2320	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2321	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2322	532212611579	3,3NF10%X7R 63V	+	+	+	+
2333	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2335	319801734730	CER2 0603 X7R 16V 47N COL	+	+	+	+
2336	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2337	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2355	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2359	482212613692	47PF 1% NP0 63V	+	+	+	+
2360	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2362	482212613751	47NF10% X7R 63V	+	+	+	+
2364	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2368	223886115182	CER1 0805 NP0 50V 1N8 PM5 R	+	+	+	+
2369	532212232268	470PF 10% 50V	+	+	+	+
2370	482212441796	22UF20% 16V	+	+	+	+
2371	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2372	532212232447	1PF 5% NP0 63V CASE 0805	+	+	+	+
2373	482212441796	22UF20% 16V	+	+	+	+
2374	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2375	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2378	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2379	482212613692	47PF 1% NP0 63V	+	+	+	+
2401	482212614585	100NF 10% X7R 0805 50V	+	+	+	-
2402	482205120008	0R00 JUMP. (0805)	+	+	+	+
2404	482212412245	ELCAP 10V 220U PM20	+	+	+	-
2405	482212614585	100NF 10% X7R 0805 50V	+	+	+	-
2406	532212411919	47UF 20% 6,3V	+	+	+	-
2407	482212614585	100NF 10% X7R 0805 50V	+	+	+	-
2408	532212411919	47UF 20% 6,3V	+	+	+	-
2409	482212614585	100NF 10% X7R 0805 50V	+	+	+	-
2411	319803074780	ELCAP SM 35V 4U7 PM20 COL R	+	+	+	-
2413	482212613838	100NF Y5V 0805 50V P80M20	+	+	+	-
2414	482212480483	47UF20% 6,3V	+	+	+	-
2415	482212614585	100NF 10% X7R 0805 50V	+	+	+	-
2417	319803074780	ELCAP SM 35V 4U7 PM20 COL R	+	+	+	-
2419	482212613838	100NF Y5V 0805 50V P80M20	+	+	+	-
2421	482212614585	100NF 10% X7R 0805 50V	+	+	+	-
2422	482212614585	100NF 10% X7R 0805 50V	+	+	+	-
2424	482212480483	47UF20% 6,3V	+	+	+	-
2425	482212233216	270PF 5%NP0 50V	+	+	-	-
2430	482212480483	47UF20% 6,3V	+	+	+	-
2431	482212233216	270PF 5%NP0 50V	+	-	-	-
2433	482212614585	100NF 10% X7R 0805 50V	+	-	-	-
2434	482212614585	100NF 10% X7R 0805 50V	+	+	+	-
2435	482212614585	100NF 10% X7R 0805 50V	+	+	+	-
2437	202002490264	ELCAP MA 4V S 470U PM20 A	+	+	+	-
2438	202002490264	ELCAP MA 4V S 470U PM20 A	+	+	+	-
2440	482212480483	47UF20% 6,3V	+	+	+	-
2441	482212480483	47UF20% 6,3V	+	+	+	-
2442	532212231647	1NF10%X7R 63V	+	+	+	-
2443	532212231647	1NF10%X7R 63V	+	+	+	-
2450	482212233216	270PF 5%NP0 50V	+	+	+	-
2451	482212233216	270PF 5%NP0 50V	+	+	+	-
2460	482212611663	12PF	+	+	+	-
2463	482212233926	12PF 50V	+	+	+	-
2464	482212611663	12PF	+	+	+	-

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
2465	482212611663	12PF	+	+	+	-
2500	482212614238	CER2 0603 X7R 50V 2N2 COL R	+	+	+	+
2501	482212614238	CER2 0603 X7R 50V 2N2 COL R	+	+	+	+
2502	482212614238	CER2 0603 X7R 50V 2N2 COL R	+	+	+	+
2504	482212412245		+	+	+	+
2505	482212412255	10UF 20% 50V	+	+	+	+
2506	482212612105	CER2 0805 X7R 50V 33NF PM5	+	+	+	+
2507	482212412255	10UF 20% 50V	+	+	+	+
2508	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2509	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2535	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2536	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2537	532212411919	47UF 20% 6,3V	+	+	+	+
2541	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2543	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2544	482212480483	47UF20% 6,3V	+	+	+	+
2546	482212480483	47UF20% 6,3V	+	+	+	+
2547	482212481286	47UF20% 16V	+	+	+	+
2548	482212441643	100UF 20% 16V DIM:6,3X11MM	+	+	+	+
2550	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2551	482212441796	22UF20% 16V	+	+	+	+
2552	532212231647	1NF10%X7R 63V	+	+	+	+
2553	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2555	482212233177	10NF 20% X7R 50V	+	+	+	+
2556	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2557	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2558	482212441584	100UF 20% 10V	+	+	+	+
2561	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2562	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2563	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2565	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2568	482212441643	100UF 20% 16V DIM:6,3X11MM	+	+	+	+
2571	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2572	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2574	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2575	482212412245	ELCAP 220U 16V 20%	+	+	+	+
2576	482212613838	100NF Y5V 0805 50V P80M20	+	+	+	+
2577	482212614305	100NF 10% X7R 16V 0603 CER2	+	+	+	+
2700	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2701	532212411919	47UF 20% 6,3V	+	+	+	+
2702	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2703	532212411919	47UF 20% 6,3V	+	+	+	+
2704	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2705	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2706	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2707	482212613692	47PF 1% NP0 63V	+	+	+	+
2708	482212613692	47PF 1% NP0 63V	+	+	+	+
2709	482212613692	47PF 1% NP0 63V	+	+	+	+
2710	532212411919	47UF 20% 6,3V	+	+	+	+
2711	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2712	482212612105	CER2 0805 X7R 50V 33NF PM5	+	+	+	+
2713	532212611583	10NF 10% X7R 50V 0603 CER2	+	+	+	+
2714	482212614549	33N 16V X7R O6O3	+	+	+	+
2715	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2716	532212611583	10NF 10% X7R 50V 0603 CER2	+	+	+	+
2717	319801741050	CER2 0603 Y5V 10V 1U COL R	+	+	+	+
2718	532211680853	560PF 5%NP0 63V	+	+	+	+
2719	532211680853	560PF 5%NP0 63V	+	+	+	+
2720	532212231647	1NF10%X7R 63V	+	+	+	+
2721	482212613692	47PF 1% NP0 63V	+	+	+	+
2722	482212613692	47PF 1% NP0 63V	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
2723	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2725	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2726	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2727	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2728	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2731	482212613692	47PF 1% NP0 63V	+	-	-	-
2733	482212233777	47PF 5%NP0 63V	+	-	-	-
2734	482212233777	47PF 5%NP0 63V	+	-	-	-
2735	482212233777	47PF 5%NP0 63V	+	-	-	-
2736	482212614305	100NF 10% X7R 16V 0603 CER2	+	-	-	-
2737	482212614305	100NF 10% X7R 16V 0603 CER2	+	-	-	-
2738	482212233777	47PF 5%NP0 63V	+	-	-	-
2739	482212233777	47PF 5%NP0 63V	+	-	-	-
2740	482212233777	47PF 5%NP0 63V	+	-	-	-
2741	482212233777	47PF 5%NP0 63V	+	-	-	-
2742	482212233777	47PF 5%NP0 63V	+	-	-	-
2743	482212233777	47PF 5%NP0 63V	+	-	-	-
2750	319801741050	CER2 0603 Y5V 10V 1U COL R	+	+	+	+
2751	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2752	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2760	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2761	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2762	482212612105	CER2 0805 X7R 50V 33NF PM5	+	+	+	+
2763	482212614585	100NF 10% X7R 0805 50V	+	+	+	+
2764	482212612105	CER2 0805 X7R 50V 33NF PM5	+	+	+	+
2765	482212612105	CER2 0805 X7R 50V 33NF PM5	+	+	+	+
2766	482212612105	CER2 0805 X7R 50V 33NF PM5	+	+	+	+
2901	319802190030	RST JUMPER 0603 0.05 OHM	+	+	+	+
2902	482205120008	0R00 JUMP. (0805)	+	+	+	+
2903	319802190030	RST JUMPER 0603 0.05 OHM	+	+	-	+
2904	319802190030	RST JUMPER 0603 0.05 OHM	+	+	+	+
2905	319802190030	RST JUMPER 0603 0.05 OHM	+	+	+	+
2906	482205120008	0R00 JUMP. (0805)	+	+	+	+
2907	482205120008	0R00 JUMP. (0805)	+	+	+	+
2908	319802190030	RST JUMPER 0603 0.05 OHM	+	+	+	+
2909	319801741050	CER2 0603 Y5V 10V 1U COL R	+	+	+	+
2910	482212412245	ELCAP 220U 16V 20%	+	+	+	+
3000	482205120101	100R00 5% 0,1W	+	+	+	+
3001	482211711151	1R 5%	+	+	+	+
3002	482205120122	1K20 5% 0,1W	+	+	+	+
3003	482205130121	120R00 5% 0,062W	+	+	+	+
3004	482205130121	120R00 5% 0,062W	+	+	+	+
3006	482205130008	0R00 JUMPER	+	+	+	+
3007	482205120154	150K00 5% 0,1W	+	+	+	+
3009	482205130681	680R00 5% 0,062W	+	+	+	+
3010	482205130681	680R00 5% 0,062W	+	+	+	+
3011	482205120829	82R00 5% 0,1W	+	+	+	+
3012	482205130154	150K00 5% 0,062W	+	+	+	+
3013	482205120105	1M00 5% 0,1W	+	+	+	+
3014	482211711139	1K5 1% 0,1W	+	+	+	+
3015	482211683933	15K 1% 0,1W	+	+	+	+
3016	482211713172	62K 1% RC12H 0805 0,1W	+	+	+	+
3017	482205130392	3K9 5% 0.063W 0603	+	+	+	+
3019	482205130105	1M00 5% 0,062W	+	+	+	+
3020	482211683933	15K 1% 0,1W	+	+	+	+
3021	482211683933	15K 1% 0,1W	+	+	+	+
3022	482211711456	30K 1% 0,1W	+	+	+	+
3023	482211713172	62K 1% RC12H 0805 0,1W	+	+	+	+
3024	482211711374	120K 1% RC12H 0805	+	+	+	+
3025	482211713569	240K 1% 0805 RC12H	+	+	+	+
3026	482205120474	470K00 5% 0,1W	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
3027	482211711456	30K 1% 0,1W	+	+	+	+
3028	482211713172	62K 1% RC12H 0805 0,1W	+	+	+	+
3029	482211711374	120K 1% RC12H 0805	+	+	+	+
3030	482211713569	240K 1% 0805 RC12H	+	+	+	+
3031	482205120474	470K00 5% 0,1W	+	+	+	+
3035	482211713571	910K 1% 0805 RC12H	+	+	+	+
3036	482211713571	910K 1% 0805 RC12H	+	+	+	+
3037	482211710833	10K 1% 0,1W	+	+	+	+
3039	482205130183	18K00 5% 0,062W	+	+	+	+
3040	482205130101	100R00 5% 0,062W	+	+	+	+
3041	482205130103	10K00 5% 0,062W	+	+	+	+
3043	482205130105	1M00 5% 0,062W	+	+	+	+
3044	482205120105	1M00 5% 0,1W	+	+	+	+
3048	482205130103	10K00 5% 0,062W	+	+	+	+
3049	482205110102	1K00 2% 0,25W	+	+	+	+
3050	482205130101	100R00 5% 0,062W	+	+	+	+
3051	482211712902	8K2 1% 0.063W 0603	+	+	+	+
3052	482211712902	8K2 1% 0.063W 0603	+	+	+	+
3053	482205130102	1K00 5% 0,062W	+	+	+	+
3054	482211711188	20K 1% 0,1W	+	+	+	+
3055	482205130102	1K00 5% 0,062W	+	+	+	+
3056	482205130102	1K00 5% 0,062W	+	+	+	+
3057	482205120472	4K70 5% 0,1W	+	+	+	+
3058	482205120154	150K00 5% 0,1W	+	+	+	+
3059	482205130682	6K80 5% 0,062W	+	+	+	+
3060	482205130103	10K00 5% 0,062W	+	+	+	+
3061	482205130102	1K00 5% 0,062W	+	+	+	+
3063	482211713572	22R 5% 1206	+	+	+	+
3064	482205130221	220R00 5% 0,062W	+	+	+	+
3065	482205120393	39K00 5% 0,1W	+	+	+	+
3066	482211712367	33K 1% 0.10W	+	+	+	+
3067	482205130102	1K00 5% 0,062W	+	+	+	+
3068	482205120472	4K70 5% 0,1W	+	+	+	+
3069	482205120392	3K90 5% 0,1W	+	+	+	+
3070	482205110102	1K00 2% 0,25W	+	+	+	+
3071	482205130222	2K20 5% 0,062W	+	+	+	+
3072	482205120472	4K70 5% 0,1W	+	+	+	+
3073	482205120472	4K70 5% 0,1W	+	+	+	+
3074	482211711151	1R 5%	+	+	+	+
3075	482205120154	150K00 5% 0,1W	+	+	+	+
3076	482205120154	150K00 5% 0,1W	+	+	+	+
3077	482205120154	150K00 5% 0,1W	+	+	+	+
3078	482205130102	1K00 5% 0,062W	+	+	+	+
3079	482211711751	16K RC12H 1% 0805	+	+	+	+
3081	482205110102	1K00 2% 0,25W	+	+	+	+
3082	482205130102	1K00 5% 0,062W	+	+	+	+
3085	482211713568	6R8 5% 1206	+	+	+	+
3086	482211711503	220R 1% 0,1W	+	+	+	+
3087	482205130222	2K20 5% 0,062W	+	+	+	+
3088	482205130152	1K50 5% 0,062W	+	+	+	+
3090	482205130479	47R00 5% 0,062W	+	+	+	+
3091	482211712903	1K8 1% 0.063W 0603	+	+	+	+
3092	482205130103	10K00 5% 0,062W	+	+	+	+
3094	482205130221	220R00 5% 0,062W	+	+	+	+
3095	482211713568	6R8 5% 1206	+	+	+	+
3097	482205130479	47R00 5% 0,062W	+	+	+	+
3098	482205130103	10K00 5% 0,062W	+	+	+	+
3100	482205120472	4K70 5% 0,1W	+	+	+	+
3101	482211713572	22R 5% 1206	+	+	+	+
3102	482211711148	56K 1% 0,1W	+	+	+	+
3103	482211710833	10K 1% 0,1W	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
3104	482211710833	10K 1% 0,1W	+	+	+	+
3105	482205120182	1K80 5% 0,1W	+	+	+	+
3106	482205130008	0R00 JUMPER	+	+	+	+
3107	482205130008	0R00 JUMPER	+	+	+	+
3110	482205130103	10K00 5% 0,062W	+	+	+	+
3111	482211712902	8K2 1% 0.063W 0603	+	+	+	+
3112	482205130479	47R00 5% 0,062W	+	+	+	+
3113	482211711503	220R 1% 0,1W	+	+	+	+
3114	482211713577	330R 1% RC12H 0805 1,25W	+	+	+	+
3115	482211712521	68R 1% 0,1W	+	+	+	+
3116	482211711817	1K2 1% 1/16W	+	+	+	+
3117	482205130103	10K00 5% 0,062W	+	+	+	+
3118	482205130561	560R00 5% 0,062W	+	+	+	+
3119	482205130221	220R00 5% 0,062W	+	+	+	+
3120	532211711726	10R 5%	+	+	+	+
3123	482205130472	4K70 5% 0,062W	+	+	+	+
3126	482205130682	6K80 5% 0,062W	+	+	+	+
3127	482211712903	1K8 1% 0.063W 0603	+	+	+	+
3128	482205130479	47R00 5% 0,062W	+	+	+	+
3129	482205130102	1K00 5% 0,062W	+	+	+	+
3130	482205130103	10K00 5% 0,062W	+	+	+	+
3131	482205130103	10K00 5% 0,062W	+	+	+	+
3200	482205120479	47R00 5% 0,1W	+	+	+	+
3201	482205120479	47R00 5% 0,1W	+	+	+	+
3202	482205120479	47R00 5% 0,1W	+	+	+	+
3203	482205120479	47R00 5% 0,1W	+	+	+	+
3204	482205120479	47R00 5% 0,1W	+	+	+	+
3205	482205120479	47R00 5% 0,1W	+	+	+	+
3206	482205120479	47R00 5% 0,1W	+	+	+	+
3207	482205120479	47R00 5% 0,1W	+	+	+	+
3208	482211710833	10K 1% 0,1W	+	+	+	+
3209	482215771206	BLM21A601SPT	+	+	+	+
3210	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3211	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3212	482211711503	220R 1% 0,1W	+	+	+	+
3213	482205130008	0R00 JUMPER	+	+	+	+
3215	482205130153	15K00 5% 0,062W	+	+	+	+
3216	482205130153	15K00 5% 0,062W	+	+	+	+
3217	482211712925	47K 1% 0.063W 0603	+	+	+	+
3218	482205130103	10K00 5% 0,062W	+	+	+	+
3219	482205130223	22K00 5% 0,062W	+	+	+	+
3220	482205130103	10K00 5% 0,062W	+	+	+	+
3221	482205130223	22K00 5% 0,062W	+	+	+	+
3222	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3223	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3224	482211711374	120K 1% RC12H 0805	+	+	+	+
3225	482211712367	33K 1% 0.10W	+	+	+	+
3226	482211710833	10K 1% 0,1W	+	+	+	+
3227	482211712367	33K 1% 0.10W	+	+	+	+
3228	482211710833	10K 1% 0,1W	+	+	+	+
3229	482211711374	120K 1% RC12H 0805	+	+	+	+
3230	482211713632	100K 1% 0603 0.62W	+	+	+	+
3231	482211713632	100K 1% 0603 0.62W	+	+	+	+
3232	482211710833	10K 1% 0,1W	+	+	+	+
3233	482205120101	100R00 5% 0,1W	+	+	+	+
3234	482205110102	1K00 2% 0,25W	+	+	+	+
3235	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3237	482205130562	5K6 5% 0,063W 0603 RC21 RST SM	+	+	+	+
3238	482205130221	220R00 5% 0,062W	+	+	+	+
3239	482205130102	1K00 5% 0,062W	+	+	+	+
3240	482205130103	10K00 5% 0,062W	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
3241	482205130008	0R00 JUMPER	+	+	+	+
3242	235003510103	RST NETW SM ARV24 4X10K PM5 R	+	+	+	+
3243	235003510103	RST NETW SM ARV24 4X10K PM5 R	+	+	+	+
3244	482205130008	0R00 JUMPER	+	+	+	+
3245	482205130221	220R00 5% 0,062W	+	+	+	+
3246	482205130221	220R00 5% 0,062W	+	+	+	+
3248	482211713523	220R 5% RESN 0.63W	+	+	+	+
3249	482211711503	220R 1% 0.1W	+	+	+	+
3252	482211711145	4K70 1% 0,1W	+	+	+	+
3253	482211711145	4K70 1% 0,1W	+	+	+	+
3254	482205130008	0R00 JUMPER	+	+	+	+
3255	482211710833	10K 1% 0,1W	+	+	+	+
3256	482205130008	0R00 JUMPER	+	+	+	+
3260	482205130008	0R00 JUMPER	+	+	+	+
3261	482205130222	2K20 5% 0,062W	+	+	+	+
3265	482205130008	0R00 JUMPER	+	+	+	+
3271	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3273	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3274	482211710837	100K 1% 0.1W	+	+	+	+
3276	482205130479	47R00 5% 0,062W	+	+	+	+
3280	482205130479	47R00 5% 0,062W	+	+	+	+
3281	482211713579	220K 1% 0.1W RC12H 0805	+	+	+	+
3284	482211711151	1R 5%	+	+	+	+
3286	482205130223	22K00 5% 0,062W	+	+	+	+
3287	482205130103	10K00 5% 0,062W	+	+	+	+
3288	482205130563	56K00 5% 0,062W	+	+	+	+
3289	482205130563	56K00 5% 0,062W	+	+	+	+
3290	482205130683	68K00 5% 0,062W	+	+	+	+
3291	482205130563	56K00 5% 0,062W	+	+	+	+
3295	482205130332	3K30 5% 0,062W	+	+	+	+
3297	482205130332	3K30 5% 0,062W	+	+	+	+
3299	482205130332	3K30 5% 0,062W	+	+	+	+
3300	482205110102	1K00 2% 0,25W	+	+	+	+
3301	482205110102	1K00 2% 0,25W	+	+	+	+
3303	482211713572	22R 5% 1206	+	+	+	+
3305	482211710833	10K 1% 0,1W	+	+	+	+
3308	482205120008	0R00 JUMP. (0805)	+	+	+	+
3309	482211712367	33K 1% 0.10W	+	+	+	+
3312	482205130479	47R00 5% 0,062W	+	+	+	+
3313	482205130479	47R00 5% 0,062W	+	+	+	+
3314	482205120479	47R00 5% 0,1W	+	+	+	+
3315	482205130102	1K00 5% 0,062W	+	+	+	+
3316	482205120472	4K70 5% 0,1W	+	+	+	+
3317	482205120472	4K70 5% 0,1W	+	+	+	+
3319	482205120479	47R00 5% 0,1W	+	+	+	+
3322	482205130102	1K00 5% 0,062W	+	+	+	+
3323	482205130562	5K6 5% 0,063W 0603 RC21 RST SM	+	+	+	+
3324	482205130562	5K6 5% 0,063W 0603 RC21 RST SM	+	+	+	+
3325	482205130103	10K00 5% 0,062W	+	+	+	+
3333	482211713574	1R5 5% 1206	+	+	+	+
3334	482211713574	1R5 5% 1206	+	+	+	+
3335	482211713574	1R5 5% 1206	+	+	+	+
3337	482205130563	56K00 5% 0,062W	+	+	+	+
3338	532211712487	1K RC12G 1% 0,125W	+	+	+	+
3339	532211712487	1K RC12G 1% 0,125W	+	+	+	+
3340	482211713632	100K 1% 0603 0.62W	+	+	+	+
3341	232273468209	RST SM 0805 RC12H 82R PM1	+	+	+	+
3346	482211711507	6K8 1% 0,1W	+	+	+	+
3347	482211711507	6K8 1% 0,1W	+	+	+	+
3348	482211711507	6K8 1% 0,1W	+	+	+	+
3349	482211713632	100K 1% 0603 0.62W	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
3350	232273468209	RST SM 0805 RC12H 82R PM1	+	+	+	+
3351	482211711151	1R 5%	+	+	+	+
3352	482205130008	0R00 JUMPER	+	+	+	+
3360	482211710354	22K 1% 0,1W	+	+	+	+
3361	482211712139	22R 5% 0,062W	+	+	+	+
3362	482211712708	39K 1% 0,1W 0805 RC12G	+	+	+	+
3363	482211712968	820R 5% 0,62W	+	+	+	+
3365	482205130101	100R00 5% 0,062W	+	+	+	+
3368	482205130479	47R00 5% 0,062W	+	+	+	+
3370	482205130561	560R00 5% 0,062W	+	+	+	+
3371	482205130152	1K50 5% 0,062W	+	+	+	+
3372	482205120122	1K20 5% 0,1W	+	+	+	+
3373	482211712903	1K8 1% 0.063W 0603	+	+	+	+
3374	482211713572	22R 5% 1206	+	+	+	+
3375	482205130222	2K20 5% 0,062W	+	+	+	+
3376	482205130221	220R00 5% 0,062W	+	+	+	+
3377	482205130479	47R00 5% 0,062W	+	+	+	+
3378	482205130273	27K00 5% 0,062W	+	+	+	+
3379	482205130183	18K00 5% 0,062W	+	+	+	+
3381	482205120008	0R00 JUMP. (0805)	+	+	+	+
3382	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3402	482211711503	220R 1% 0.1W	+	+	+	-
3403	482211712024	27K 1% 0.1W	+	+	+	-
3404	482211710833	10K 1% 0,1W	+	+	+	-
3405	482211712024	27K 1% 0.1W	+	+	+	-
3407	482205120101	100R00 5% 0,1W	+	+	+	-
3408	482211710833	10K 1% 0,1W	+	+	+	-
3409	482211712367	33K 1% 0.10W	+	+	+	-
3410	482211710833	10K 1% 0,1W	+	+	+	-
3411	482211711152	4R7 5%	+	+	+	-
3412	482211712024	27K 1% 0.1W	+	+	+	-
3413	482211710833	10K 1% 0,1W	+	+	+	-
3414	482211712024	27K 1% 0.1W	+	+	+	-
3415	482211710833	10K 1% 0,1W	+	+	+	-
3416	482211712367	33K 1% 0.10W	+	+	+	-
3418	482205120008	0R00 JUMP. (0805)	+	+	+	-
3420	482211710833	10K 1% 0,1W	+	+	+	-
3421	482211711383	12K 1% 0,1W	+	+	+	-
3422	482211710834	47K 1% 0,1W	+	+	+	-
3423	482211713629	120R 1% 0.1W RC12H 0805	+	-	+	-
3424	482205120225	2M20 5% 0,1W	+	-	+	-
3427	482211713629	120R 1% 0.1W RC12H 0805	+	-	+	-
3428	482205120225	2M20 5% 0,1W	+	-	+	-
3429	482211710834	47K 1% 0,1W	+	+	+	-
3432	482211710833	10K 1% 0,1W	+	+	+	-
3433	482205120008	0R00 JUMP. (0805)	+	+	+	-
3435	482211710833	10K 1% 0,1W	+	+	+	-
3436	482211711383	12K 1% 0,1W	+	+	+	-
3439	482211711152	4R7 5%	+	+	+	-
3441	482205120101	100R00 5% 0,1W	+	+	+	-
3447	482205120008	0R00 JUMP. (0805)	-	+	+	-
3448	482205120008	0R00 JUMP. (0805)	-	+	+	-
3449	482205120008	0R00 JUMP. (0805)	-	+	+	-
3450	319802153311	330R 5%	+	-	-	-
3451	482211711383	12K 1% 0,1W	+	+	+	-
3452	482211711383	12K 1% 0,1W	+	+	+	-
3453	482211713579	220K 1% 0.1W RC12H 0805	+	+	+	-
3454	482211713579	220K 1% 0.1W RC12H 0805	+	+	+	-
3455	319802190030	RST JUMPER 0603 0.05 OHM	+	+	+	-
3460	319802190030	RST JUMPER 0603 0.05 OHM	+	+	+	-
3531	482205120562	5K6 5% 0,1W 0805	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
3532	482205120562	5K6 5% 0,1W 0805	+	+	+	+
3533	482211710837	100K 1% 0,1W	+	+	+	+
3536	482211710837	100K 1% 0,1W	+	+	+	+
3537	482211710833	10K 1% 0,1W	+	+	+	+
3538	482211710833	10K 1% 0,1W	+	+	+	+
3539	482211710837	100K 1% 0,1W	+	+	+	+
3540	482211710833	10K 1% 0,1W	+	+	+	+
3541	482211711747	12R 1206 5% FUSE	+	+	+	+
3542	482211711747	12R 1206 5% FUSE	+	+	+	+
3544	482211710834	47K 1% 0,1W	+	+	+	+
3545	482211713568	6R8 5% 1206	+	+	+	+
3546	482205120101	100R00 5% 0,1W	+	+	+	+
3547	482211683933	15K 1% 0,1W	+	+	+	+
3548	482211710834	47K 1% 0,1W	+	+	+	+
3549	482205120101	100R00 5% 0,1W	+	+	+	+
3550	482205120101	100R00 5% 0,1W	+	+	+	+
3551	482205120332	3K30 5% 0,1W	+	+	+	+
3552	482211710834	47K 1% 0,1W	+	+	+	+
3553	482205120101	100R00 5% 0,1W	+	+	+	+
3554	482211710833	10K 1% 0,1W	+	+	+	+
3555	482205120122	1K20 5% 0,1W	+	+	+	+
3556	482211710833	10K 1% 0,1W	+	+	+	+
3557	482211710837	100K 1% 0,1W	+	+	+	+
3559	482205120562	5K6 5% 0,1W 0805	+	+	+	+
3560	482211710837	100K 1% 0,1W	+	+	+	+
3562	482205120562	5K6 5% 0,1W 0805	+	+	+	+
3563	482205130563	56K00 5% 0,062W	+	+	+	+
3566	482211710837	100K 1% 0,1W	+	+	+	+
3567	482205120223	22K00 5% 0,1W	+	+	+	+
3570	482205120101	100R00 5% 0,1W	+	+	+	+
3701	482205120101	100R00 5% 0,1W	+	+	+	+
3702	482205130472	4K70 5% 0,062W	+	+	+	+
3703	482205130472	4K70 5% 0,062W	+	+	+	+
3704	482205120008	0R00 JUMP. (0805)	+	+	+	+
3705	482205130223	22K00 5% 0,062W	+	+	+	+
3706	482205120479	47R00 5% 0,1W	+	+	+	+
3708	482205120479	47R00 5% 0,1W	+	+	+	+
3710	482205130101	100R00 5% 0,062W	+	+	+	+
3711	482211710833	10K 1% 0,1W	+	+	+	+
3712	482211710833	10K 1% 0,1W	+	+	+	+
3713	482205120479	47R00 5% 0,1W	+	+	+	+
3714	482205120479	47R00 5% 0,1W	+	+	+	+
3715	482205120479	47R00 5% 0,1W	+	+	+	+
3716	482211710833	10K 1% 0,1W	+	+	+	+
3717	482211710833	10K 1% 0,1W	-	+	+	+
3718	482211710833	10K 1% 0,1W	+	+	+	-
3719	482205130103	10K00 5% 0,062W	+	+	-	+
3720	482205130101	100R00 5% 0,062W	+	+	+	+
3721	482205130101	100R00 5% 0,062W	+	+	+	+
3722	482211710833	10K 1% 0,1W	+	-	-	-
3723	482211710833	10K 1% 0,1W	-	-	-	+
3724	482205130103	10K00 5% 0,062W	+	-	+	-
3725	482205130101	100R00 5% 0,062W	+	+	+	+
3726	482205130103	10K00 5% 0,062W	+	+	+	+
3727	482205120105	1M00 5% 0,1W	+	+	+	+
3728	482205130101	100R00 5% 0,062W	+	+	+	+
3729	482205130101	100R00 5% 0,062W	+	+	+	+
3731	482205130391	390R00 5% 0,062W	+	+	+	+
3732	482205130479	47R00 5% 0,062W	+	+	+	+
3735	482205120479	47R00 5% 0,1W	+	+	+	+
3742	482205130102	1K00 5% 0,062W	+	+	+	+


ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
3743	482205130479	47R00 5% 0,062W	+	+	+	+
3744	482205120274	270K00 5% 0,1W	+	+	+	+
3745	482205120274	270K00 5% 0,1W	+	+	+	+
3746	482205130153	15K00 5% 0,062W	+	+	+	+
3747	482205130103	10K00 5% 0,062W	+	+	+	+
3748	482205130103	10K00 5% 0,062W	+	+	+	+
3749	482205130103	10K00 5% 0,062W	+	+	+	+
3750	482205130123	12K00 5% 0,062W	+	+	+	+
3751	482205120472	4K70 5% 0,1W	+	-	-	-
3752	482211710353	150R 1% 0,1W	+	+	+	+
3753	482205120472	4K70 5% 0,1W	+	-	-	-
3754	482205110102	1K00 2% 0,25W	+	+	+	+
3755	482211710353	150R 1% 0,1W	+	+	+	+
3756	482205130101	100R00 5% 0,062W	+	+	+	+
3757	482205120479	47R00 5% 0,1W	+	-	-	-
3758	482205120101	100R00 5% 0,1W	+	+	+	+
3759	482205110102	1K00 2% 0,25W	+	+	+	+
3760	482205120472	4K70 5% 0,1W	+	+	+	+
3761	482205130472	4K70 5% 0,062W	+	+	+	+
3762	482205130472	4K70 5% 0,062W	+	+	+	+
3763	482205130102	1K00 5% 0,062W	+	+	+	+
3764	482205120472	4K70 5% 0,1W	+	+	+	+
3766	482205130472	4K70 5% 0,062W	+	+	+	+
3767	482205130472	4K70 5% 0,062W	+	+	+	+
3768	482205120472	4K70 5% 0,1W	+	+	+	+
3769	482205130472	4K70 5% 0,062W	+	+	+	+
3770	482205120472	4K70 5% 0,1W	+	+	+	+
3771	482205130101	100R00 5% 0,062W	+	+	+	+
3780	482211710837	100K 1% 0,1W	+	+	+	+
3806	482205130103	10K00 5% 0,062W	+	+	+	+
3807	482205120008	0R00 JUMP. (0805)	+	+	+	+
3808	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3809	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3810	482205130472	4K70 5% 0,062W	+	+	+	+
3811	482205130103	10K00 5% 0,062W	+	+	+	+
3813	482205130101	100R00 5% 0,062W	+	+	+	+
3814	482205130479	47R00 5% 0,062W	+	+	+	+
3817	482205110102	1K00 2% 0,25W	+	+	+	+
3818	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3819	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3820	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3821	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3822	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3823	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3824	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3825	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3826	482205120101	100R00 5% 0,1W	+	+	+	+
3828	482205130479	47R00 5% 0,062W	+	-	-	-
3829	482205130479	47R00 5% 0,062W	+	-	-	-
3830	482205130479	47R00 5% 0,062W	+	-	-	-
3831	482205130479	47R00 5% 0,062W	+	-	-	-
3832	482205130479	47R00 5% 0,062W	+	-	-	-
3833	482205130479	47R00 5% 0,062W	+	-	-	-
3834	482205130479	47R00 5% 0,062W	+	-	-	-
3835	482205130479	47R00 5% 0,062W	+	-	-	-
3836	482205130479	47R00 5% 0,062W	+	-	-	-
3837	482211710833	10K 1% 0,1W	+	+	+	+
3838	482211710833	10K 1% 0,1W	+	+	+	+
3841	482205120101	100R00 5% 0,1W	+	+	+	+
3843	482211710833	10K 1% 0,1W	+	+	+	+
3844	482211710833	10K 1% 0,1W	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
3845	482211710833	10K 1% 0,1W	+	+	+	+
3886	482205120008	0R00 JUMP. (0805)	-	+	+	-
3889	482211711151	1R 5%	+	+	+	+
3891	482211710833	10K 1% 0,1W	+	+	+	-
3892	482211710833	10K 1% 0,1W	+	+	+	-
3894	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3897	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3898	482211713573	NETW 4 X 47R 5% MNR14	+	+	+	+
3900	319802190030	RST JUMPER 0603 0.05 OHM	-	-	-	+
3902	319802190030	RST JUMPER 0603 0.05 OHM	-	-	-	+
3903	482205130008	0R00 JUMPER	+	+	+	+
3904	482205110102	1K00 2% 0,25W	-	+	-	+
3906	482205120472	4K70 5% 0,1W	+	+	+	+
3907	482205130472	4K70 5% 0,062W	+	+	+	+
3908	482205130102	1K00 5% 0,062W	+	+	+	+
3909	482205130472	4K70 5% 0,062W	+	+	+	+
3910	482205120472	4K70 5% 0,1W	+	+	+	+
3911	482205120472	4K70 5% 0,1W	+	+	+	+
5008	482215771206	BLM21A601SPT	+	+	+	+
5201	482215771206	BLM21A601SPT	+	+	+	+
5202	482215771206	BLM21A601SPT	+	+	+	+
5203	482215771206	BLM21A601SPT	+	+	+	+
5301	482215771206	BLM21A601SPT	+	+	+	+
5302	482215771206	BLM21A601SPT	+	+	+	+
5303	482215771206	BLM21A601SPT	+	+	+	+
5401	482215771206	BLM21A601SPT	+	+	+	-
5403	482215771206	BLM21A601SPT	+	+	+	-
5404	482215771206	BLM21A601SPT	+	+	+	-
5406	482215771206	BLM21A601SPT	+	+	+	-
5407	482215771206	BLM21A601SPT	+	+	+	-
5413	482215771206	BLM21A601SPT	+	+	+	-
5414	482215771206	BLM21A601SPT	+	+	+	-
5500	482215711716	BLM21P300SPT	+	+	+	+
5501	242254942103	IND FXD SM EMI 100MHZ 2K2 R	+	+	+	+
5502	242254942103	IND FXD SM EMI 100MHZ 2K2 R	+	+	+	+
5503	242254942103	IND FXD SM EMI 100MHZ 2K2 R	+	+	+	+
5541	242254942103	IND FXD SM EMI 100MHZ 2K2 R	+	+	+	+
5542	242254942103	IND FXD SM EMI 100MHZ 2K2 R	+	+	+	+
5543	482215711716	BLM21P300SPT	+	+	+	+
5544	482215711716	BLM21P300SPT	+	+	+	+
5546	482215771206	BLM21A601SPT	+	+	+	+
5551	482215771206	BLM21A601SPT	+	+	+	+
5554	482215710548	47UH 5%	+	+	+	+
5555	482215771206	BLM21A601SPT	+	+	+	+
5556	482215771206	BLM21A601SPT	+	+	+	+
5557	482215771206	BLM21A601SPT	+	+	+	+
5701	482215771206	BLM21A601SPT	+	+	+	+
5709	242254942103	IND FXD SM EMI 100MHZ 2K2 R	+	+	+	+
5710	482215710477	COIL 47UH	+	+	+	+
5712	482215771206	BLM21A601SPT	+	+	+	+
5713	482215771206	BLM21A601SPT	+	+	+	+
5715	482215771206	BLM21A601SPT	+	+	+	+
5716	482215771206	BLM21A601SPT	+	+	+	+
6002	532213030691	BAW56	+	+	+	+
6003	482213083757	BAS216	+	+	+	+
6007	532213034337	BAV99	+	+	+	+
6373	482213083757	BAS216	+	+	+	+
6374	482213083757	BAS216	+	+	+	+
6375	482213083757	BAS216	+	+	+	+
6400	482213010648	BZX284-C5V6	+	-	-	-
6500	532213083777	BAV70W	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
6501	532213034337	BAV99	+	+	+	+
6502	482213034441	BZX79-B22	+	+	+	+
6553	482213083757	BAS216	+	+	+	+
6554	532213034337	BAV99	+	+	+	+
6555	482213083757	BAS216	+	+	+	+
6556	482213083757	BAS216	+	+	+	+
6557	482213083757	BAS216	+	+	+	+
6701	934042250135	DIO VAR SM BB147 (PHSE) R	+	+	+	+
6702	934042250135	DIO VAR SM BB147 (PHSE) R	+	+	+	+
7001	482220963709	LM324DTR	+	+	+	+
7002	482220963709	LM324DTR	+	+	+	+
7005	482220990331	TL084CDT	+	+	+	+
7008	482220917223	EFM TIM3	+	+	+	+
7010	935261972518	IC SM TZA1020HP/M1 (PHSE) R	+	+	+	+
7016	482220917225	M62364FP	+	+	+	+
7050	482220990331	TL084CDT	+	+	+	+
7104	482213060373	BC856B	+	+	+	+
7110	482213060511	BC847B	+	+	+	+
7111	482213060511	BC847B	+	+	+	+
7112	482213042804	BC817-25	+	+	+	+
7113	482213060511	BC847B	+	+	+	+
7119	482213060383	BF824	+	+	+	+
7120	482213060383	BF824	+	+	+	+
7121	532213060123	BC807-40	+	+	+	+
7122	532213060123	BC807-40	+	+	+	+
7124	482213060511	BC847B	+	+	+	+
7126	933714420653	IC SM 74HC4066D	+	+	+	+
7127	482213060373	BC856B	+	+	+	+
7133	482213060511	BC847B	+	+	+	+
7135	532213060123	BC807-40	+	+	+	+
7201	482213060511	BC847B	+	+	+	+
7202	482213060511	BC847B	+	+	+	+
7207	932213040668	IC SM M24C16-WMN (ST00) R	+	+	+	+
7208	310412394850	FLASH EPROM ASSY CDR-AUDIO	+	+	+	+
7209	482220917227	MC74LCX573	+	+	+	+
7215	482220932073	MC34072D	+	+	+	+
7225	532220971553	NE532D	+	+	+	+
7240	482220917229	BA5938FM	+	+	+	+
7270	482220917231	SAA7399HL	+	+	+	+
7300	935263368557	IC SM SAA7392HL/M3 (PHSE) Y	+	+	+	+
7330	482220916877	BA6856FP	+	+	+	+
7355	933713370653	IC SM 74HCT00D (PHSE) R	+	+	+	+
7360	933715300118	IC SM 74HCT4051D (PHSE) R	+	+	+	+
7361	482213060511	BC847B	+	+	+	+
7370	482213060511	BC847B	+	+	+	+
7371	482213011527	BFS540	+	+	+	+
7373	482213011527	BFS540	+	+	+	+
7375	482213011527	BFS540	+	+	+	+
7401	482220960792	74HC4053D	+	-	-	-
7405	482220930095	LM833D	+	+	+	-
7406	935254530118	IC SM UDA1341TS/N1 (PHSE) R	+	+	+	-
7407	482220960792	74HC4053D	+	-	-	-
7408	482220982362	NJM4556D	+	-	+	-
7409	482220930095	LM833D	+	+	+	-
7410	482213042804	BC817-25	+	-	+	-
7411	482213042804	BC817-25	+	-	+	-
7520	820405604480	FET POW STD16NE06L	+	+	+	+
7521	482220932073	MC34072D	+	+	+	+
7522	482213060373	BC856B	+	+	+	+
7523	482213060511	BC847B	+	+	+	+
7524	482213060511	BC847B	+	+	+	+

ITEM	CODENUMBER	DESCRIPTION	CDR775	CDR570	CDR770	CDR950
7525	482213060373	BC856B	+	+	+	+
7526	482213060511	BC847B	+	+	+	+
7527	482213011379	BCP69	+	+	+	+
7528	482213060511	BC847B	+	+	+	+
7529	482213060373	BC856B	+	+	+	+
7535	482220917398	LD1117DT33	+	+	+	+
7548	482213060511	BC847B	+	+	+	+
7549	482213060511	BC847B	+	+	+	+
7556	482220990332	MC79L05ABD	+	+	+	+
7558	482220915083	AN78M09	+	+	+	+
7560	482213060373	BC856B	+	+	+	+
7561	482213060373	BC856B	+	+	+	+
7562	482213060511	BC847B	+	+	+	+
7563	482213060511	BC847B	+	+	+	+
7701	820405603460	USER PROCESSOR DASP CF5244PU	+	+	+	+
7702	482220917375	GM71V18163CJ-6	+	+	+	+
7703	932213814668	IC SM AM29LV800BB-70REC (AMD)R	+	+	+	+
7704	482220916318	MC33464-30A	+	+	+	+
7705	482220932073	MC34072D	+	+	+	+
7706	482220917236	74LV74D	+	+	+	+
7707	482213060511	BC847B	+	-	-	-
7708	932214178668	IC SM 74LCX00M (ST00) R	+	+	+	+
7710	932213967685	IC SM MC33464N-45A (MOTA) R	+	+	+	+
7801	820405603520	LEVEL DIG POTMETER DS1807S-T/R	+	+	+	-
7802	820405603910	IC SM CY7C199-15ZC	+	+	+	+
7803	482213060511	BC847B	+	+	+	+
7804	482213060511	BC847B	+	+	+	+
PCINT-DASP	710408691110	PC-INTERFACE BOARD DASP	+	+	+	+
PCINT-MACE	710408683110	PC-INTERFACE BOARD MACE	+	+	+	+


CDR MAIN BOARD BLOCK DIAGRAM



7. Electrical diagrams and PWB's

CDR-Mainboard Version 4228.5


CDR MAIN BOARD - CIRCUIT DIAGRAM 1 : AEGER, EFMTIM, FORWARD SENSE CIRCUIT TESTPOINTS

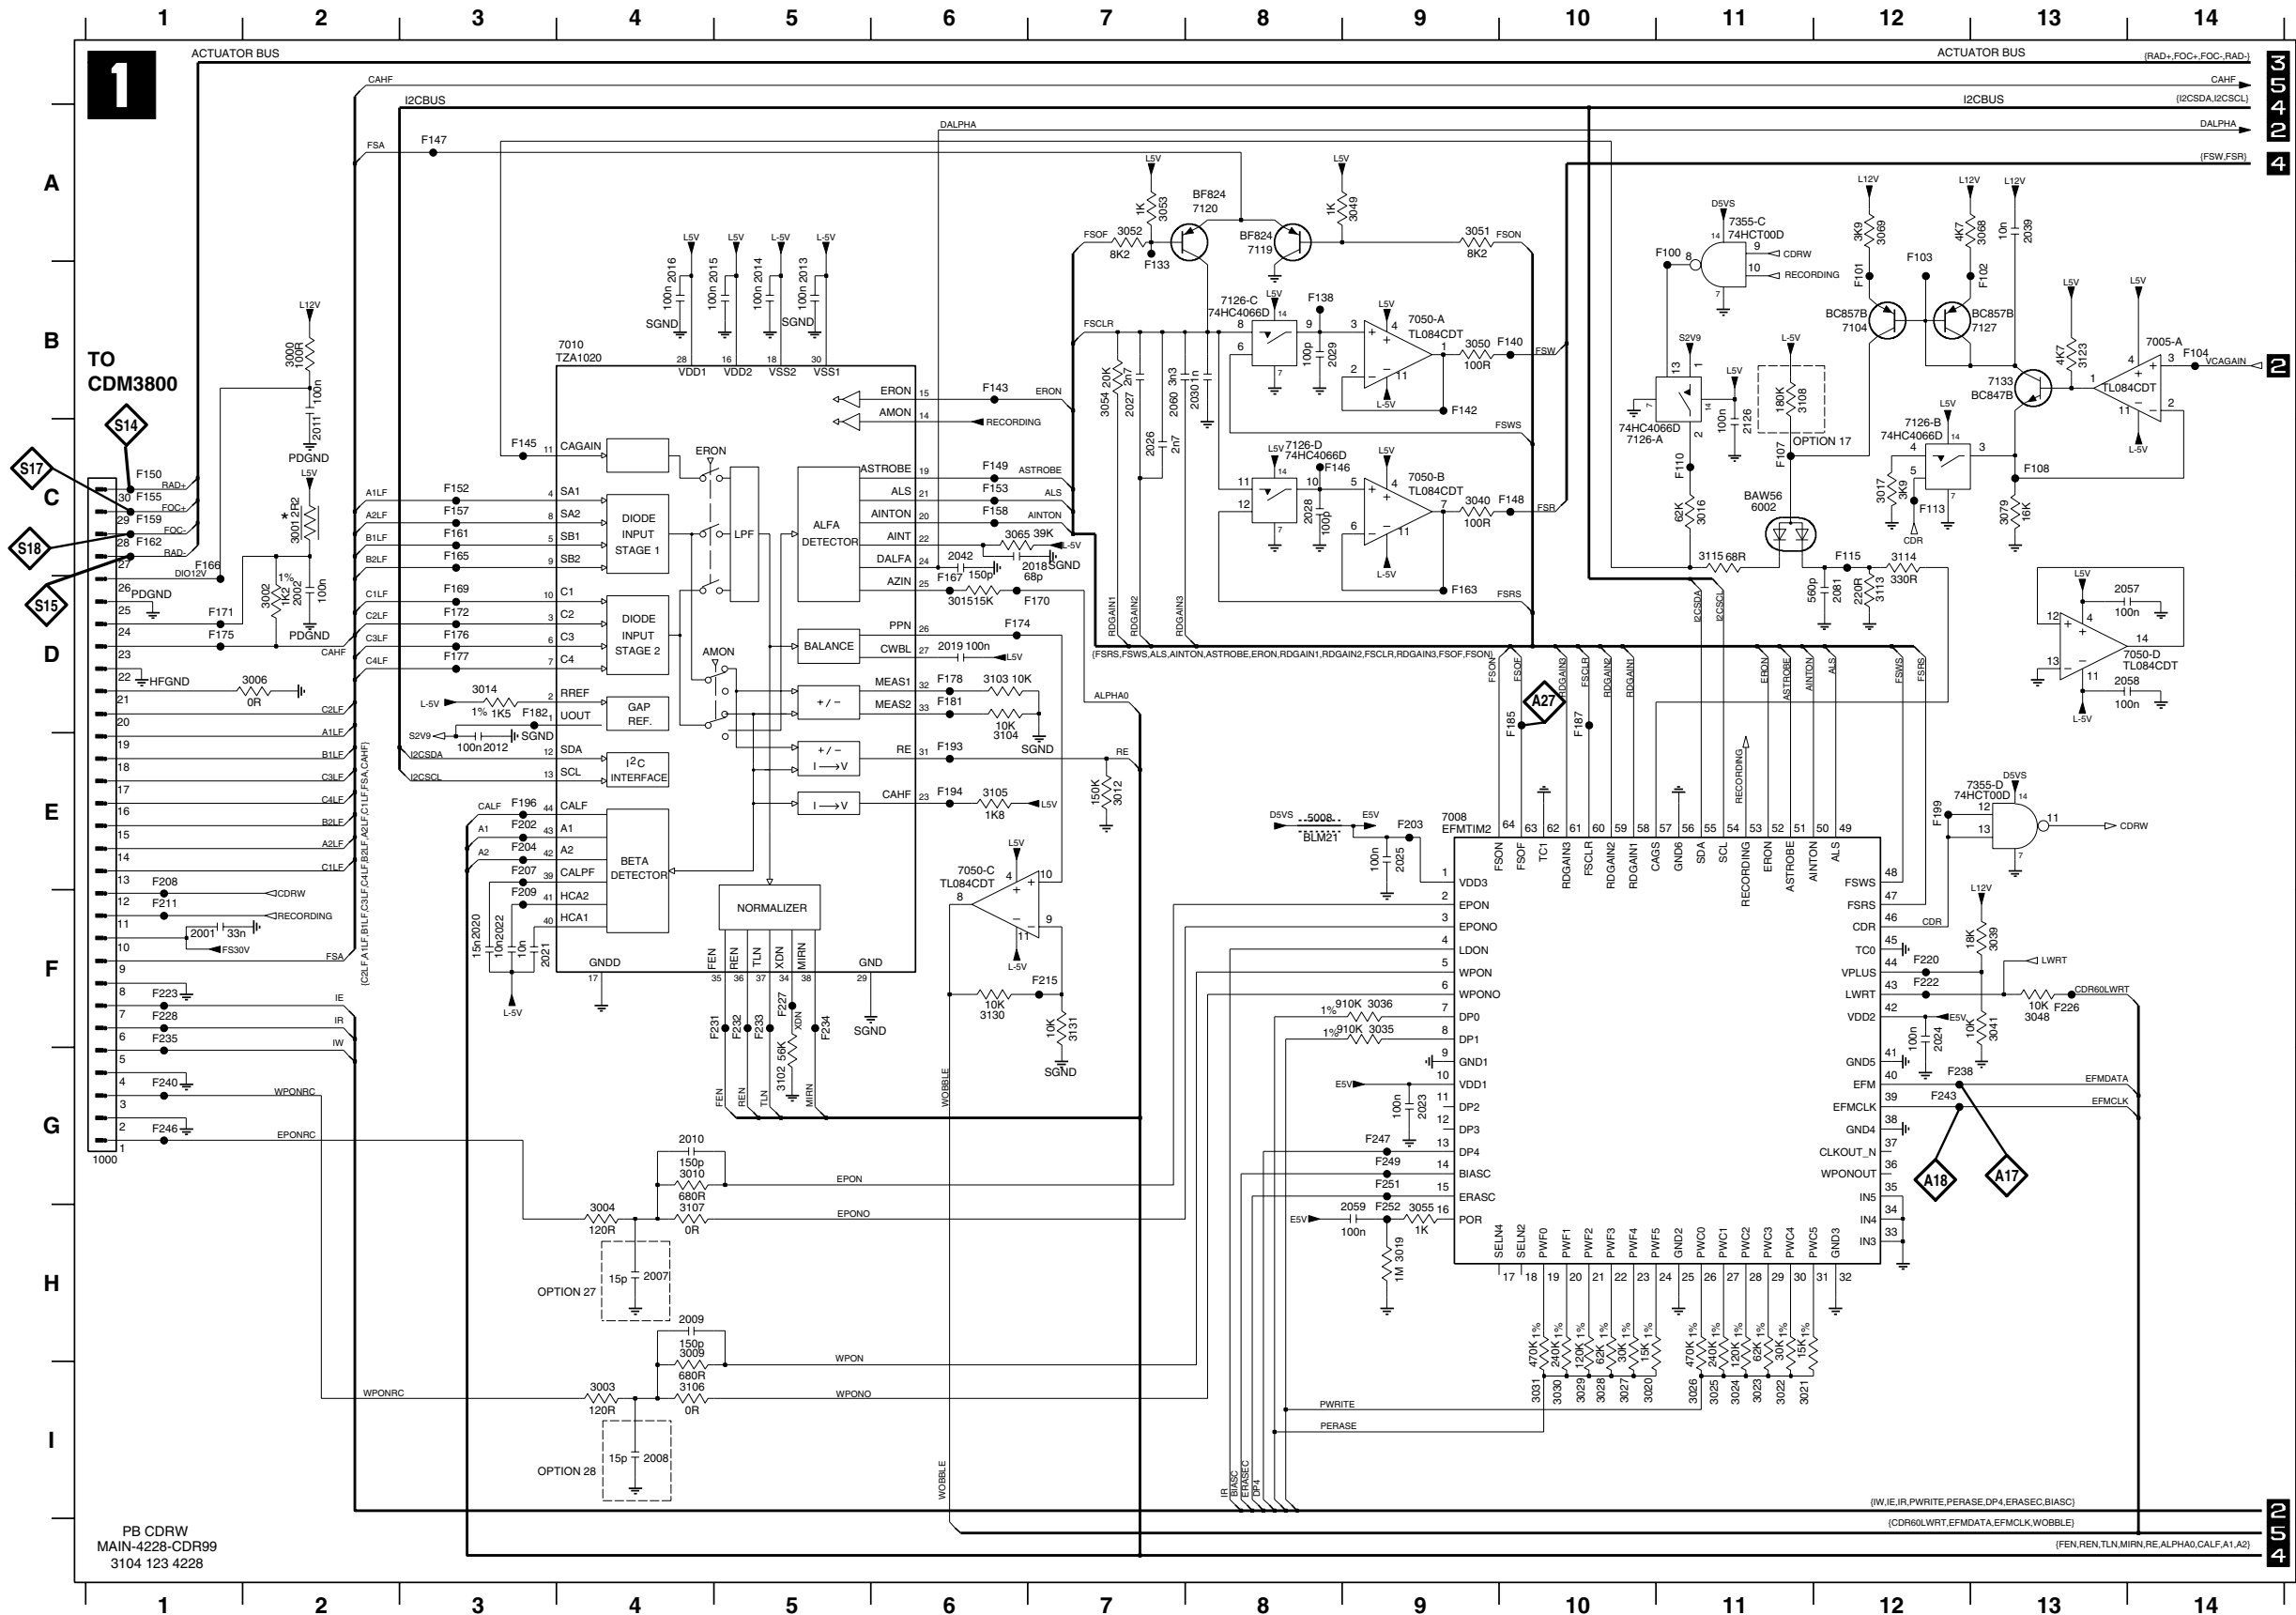

1000 G1	F110 C11
2001 F1	F113 C12
2002 D2	F115 C12
2007 H4	F133 B7
2008 I4	F138 B8
2009 H4	F140 B10
2010 G4	F142 B9
2011 C2	F143 B6
2012 E3	F145 C3
2013 B5	F146 C8
2014 B5	F147 A3
2015 B4	F148 C10
2016 B4	F149 C6
2018 C7	F150 C1
2019 D6	F152 C3
2020 F3	F153 C6
2021 F3	F155 C1
2022 F3	F157 C3
2023 G9	F158 C6
2024 F12	F159 C1
2025 E9	F161 C3
2026 C7	F162 C1
2027 B7	F163 D9
2028 C8	F165 C3
2029 B8	F166 C1
2030 B8	F167 D6
2039 A13	F169 D3
2042 C5	F170 D7
2057 D13	F171 D1
2058 D13	F172 D3
2059 H9	F174 D6
2060 B7	F175 D1
2081 D12	F176 D3
2126 C11	F177 D3
3000 B2	F178 D6
3001 C2	F181 D6
3002 D2	F182 D3
3003 I4	F185 D10
3004 H4	F187 D10
3006 D2	F193 E6
3009 H4	F194 E6
3010 G4	F196 E3
3012 E7	F199 E12
3014 D3	F202 E3
3015 D6	F203 E9
3016 C11	F204 E3
3017 C12	F207 E3
3019 H9	F208 E1
3020 I10	F209 F3
3021 I11	F211 F1
3022 I11	F215 F7
3023 I11	F220 F12
3024 I11	F222 F12
3025 I11	F223 F1
3026 I11	F226 F13
3027 I10	F227 F5
3028 I10	F228 F1
3029 I10	F231 F4
3030 I10	F232 F5
3031 I10	F233 F5
3035 F9	F234 F5
3036 F9	F235 F1
3039 F13	F238 G12
3040 C9	F240 G1
3041 F13	F243 G12
3048 F13	F246 G1
3049 A9	F247 G9
3050 B9	F249 G9
3051 A9	F251 G9
3052 A7	F252 H9
3053 A7	
3054 B7	
3055 H9	
3056 C6	
3058 A13	
3059 A13	
3069 A12	
3079 C13	
3102 G5	
3103 D6	
3104 E6	
3105 E6	
3106 H4	
3107 H4	
3108 B11	
3113 D12	
3114 C12	
3115 C11	
3123 B13	
3130 F6	
3131 F7	
5008 E6	
6002 C11	
7005-A B14	
7008 E9	
7010 B4	
7050-A B9	
7050-B C9	
7050-C E6	
7050-D D13	
7104 B12	
7119 A8	
7120 A8	
7126-A C11	
7126-B C12	
7126-C B8	
7126-D C8	
7127 B13	
7133 B13	
7355-C A11	
7355-D E12	
F100 A11	
F101 B12	
F102 B13	
F103 A12	
F104 B14	
F107 C11	
F108 C13	


2003 A3	F120 A7
2031 B6	F121 A5
2032 A8	F122 B4
2033 A8	F123 B7
2034 C9	F124 B4
2037 D6	F125 B3
2038 D6	F126 B3
2040 C6	F128 B3
2041 E7	F129 B7
2043 E5	F130 B4
2044 E9	F131 C4
2045 F11	F132 C4
2046 F11	F136 C4
2047 E12	F139 C4
2048 E12	F141 C6
2049 E10	F144 C7
2050 E11	F151 D8
2051 E7	F154 D6
2052 G7	F156 D5
2053 G8	F160 D7
2054 F7	F164 D7
2055 H8	F168 D8
2056 G6	F173 E5
2061 A5	F180 E6
2063 H8	F183 E7
2078 F7	F195 F5
2080 B7	F200 F10
2082 I6	F201 F11
2083 I7	F205 F12
2084 A7	F206 F10
3007 C4	F218 G13
3008 C4	F224 G13
3042 E6	F229 G7
3043 G9	F236 G7
3044 H5	F237 G6
3045 E5	F241 G7
3046 D5	F242 G7
3042 E6	F244 G5
3056 B9	F245 H4
3057 A5	F253 H6
3058 B5	F260 I8
3059 B5	F269 I6
3060 B7	F268 I8
3062 B9	F271 I8
3063 A9	
3064 A3	
3065 A5	
3067 A4	
3070 E7	
3071 D7	
3072 E5	
3073 D3	
3075 E5	
3076 C8	
3077 E9	
3078 H5	
3081 F5	
3082 F10	
3083 D5	
3086 E12	
3087 G13	
3088 E13	
3093 F12	
3091 E11	
3092 F12	
3093 G12	
3094 G8	
3095 F8	
3097 G7	
3098 G7	
3099 H8	
3100 D9	
3101 A9	
3110 B7	
3111 A6	
3112 A8	
3116 B6	
3117 I7	
3118 H7	
3119 I7	
3120 I8	
3126 I5	
3127 G6	
3128 I7	
3129 H7	
3899 F9	
6003 H8	
6007 D7	
6015 C5	
7001-A F6	
7002-B D6	
7001-C E9	
7001-D C8	
7002-A B6	
7002-C F10	
7002-D A6	
7005-B G6	
7005-C F11	
7005-D F7	
7016 A4	
7110 A7	
7111 H8	
7112 I8	
7113 F10	
7121 F12	
7122 G8	
7124 G5	
7135 A9	
7106 A4	
7112 G3	
7114 A7	
7116 A6	
7117 A4	
7118 A9	
7119 A8	

CDR MAIN BOARD - CIRCUIT DIAGRAM 3 : SERVO DRIVERS, MACE-RAM, -FLASH, -DEMUX TEST POINTS

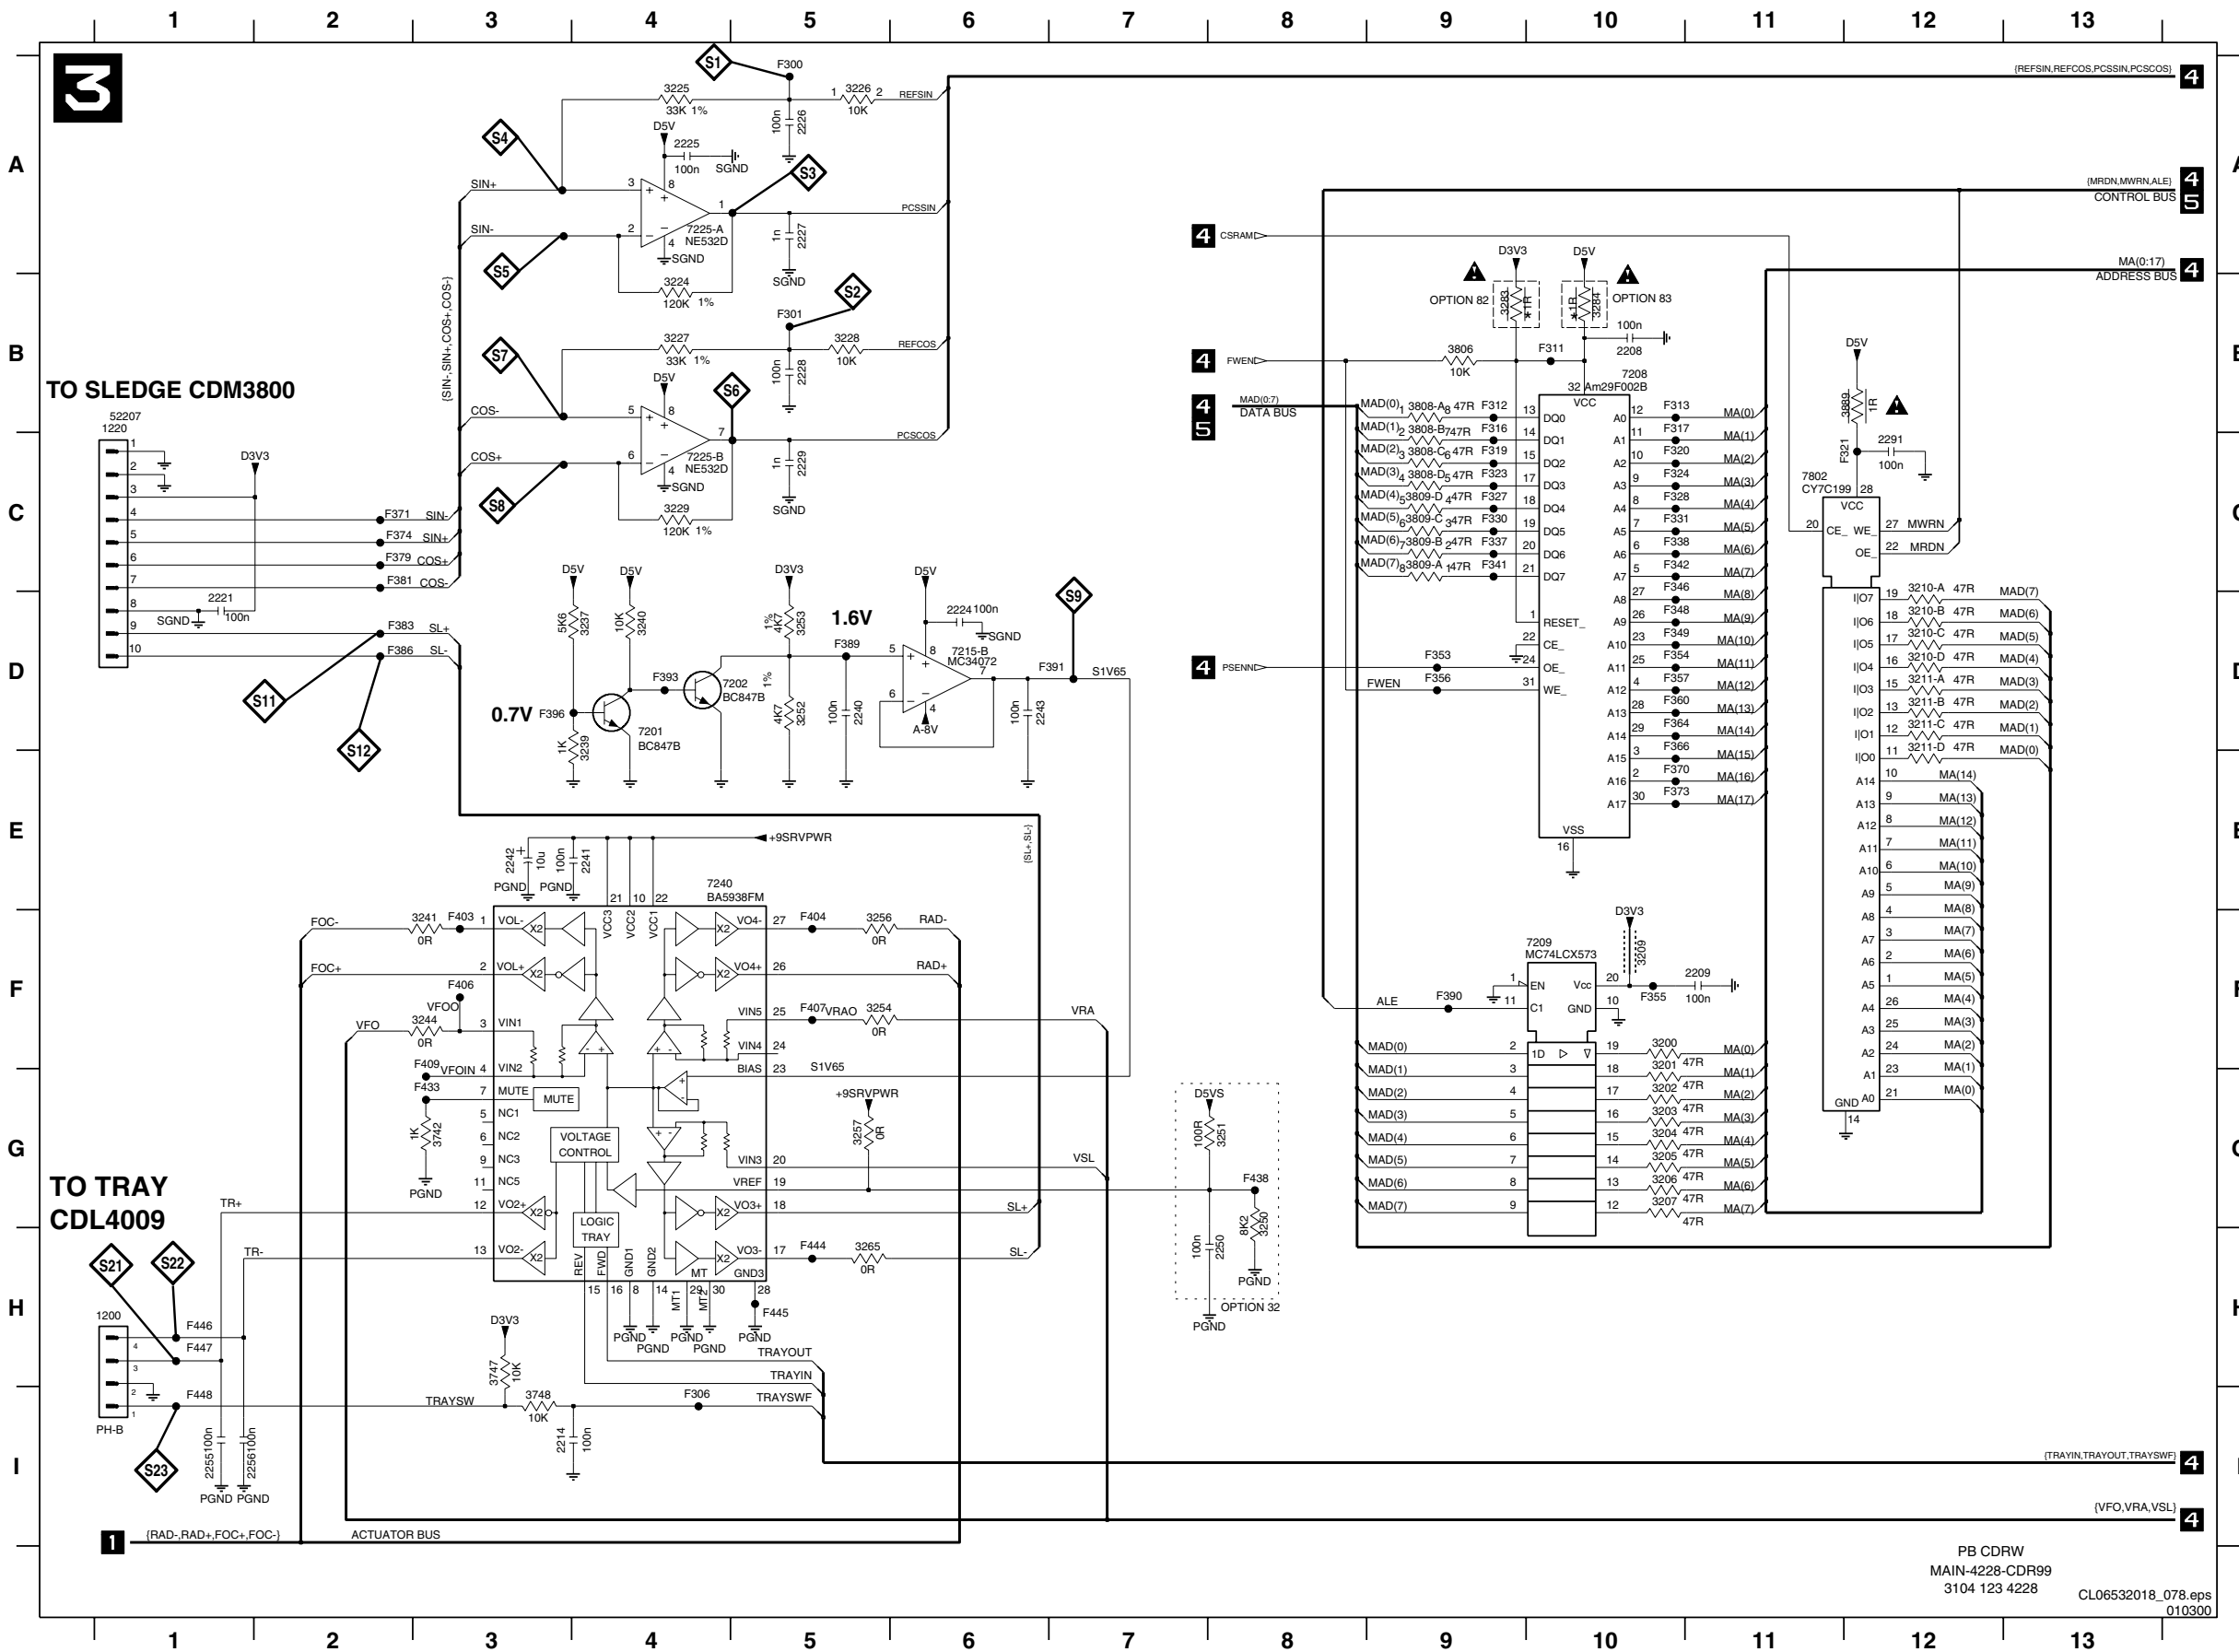


1200 H1	F383 D2
1220 B1	F386 D2
2208 B10	F389 D5
2209 F11	F390 F9
2214 I3	F391 D7
2221 D1	F393 D4
2224 D6	F396 D3
2225 A4	F403 F3
2226 A5	F404 F5
2227 A5	F406 F3
2228 B5	F407 F5
2229 C5	F409 F3
2240 D5	F433 G3
2241 E4	F438 G8
2242 E3	F444 H5
2243 D6	F445 H5
2250 H8	F446 H1
2255 I1	F447 H1
2256 I1	F448 I1
2291 C12	
3200 F10	
3201 G10	
3202 G10	
3203 G10	
3204 G10	
3205 G10	
3206 G10	
3207 G10	
3209 F10	
3210-A D12	
3210-B D12	
3210-C D12	
3210-D D12	
3211-A D12	
3211-B D12	
3211-C D12	
3211-D E12	
3224 B4	
3225 A4	
3226 A5	
3227 B4	
3228 B5	
3229 C4	
3237 D4	
3239 D4	
3240 D4	
3241 F3	
3244 F3	
3250 G8	
3251 G8	
3252 D5	
3253 D5	
3254 F5	
3255 F5	
3257 G5	
3265 H5	
3283 B9	
3284 B10	
3742 G3	
3747 H5	
3748 I3	
3806 B9	
3808-A B9	
3808-B C9	
3808-C C9	
3808-D C9	
3809-A C9	
3809-B C9	
3809-C C9	
3809-D C9	
3889 B12	
7201 D4	
7202 D4	
7208 B10	
7209 F10	
7215-B D6	
7225-A A4	
7240 E4	
7802 C11	
F300 A5	
F301 B5	
F306 H4	
F311 B10	
F312 B9	
F313 B10	
F316 B9	
F317 B10	
F319 C9	
F320 C10	
F321 C12	
F323 C9	
F324 C10	
F327 C9	
F328 C10	
F330 C9	
F331 C10	
F337 C9	
F338 C10	
F341 C9	
F342 C10	
F346 C10	
F348 D10	
F349 D10	
F353 D9	
F354 D10	
F355 F10	
F356 D9	
F357 D10	
F360 D10	
F364 D10	
F366 D10	
F370 E10	
F371 C2	
F373 E10	
F374 C2	
F379 C2	
F381 C2	

CDR MAIN BOARD - CIRCUIT DIAGRAM 4 : MACE BE-PROCESSOR TESTPOINTS

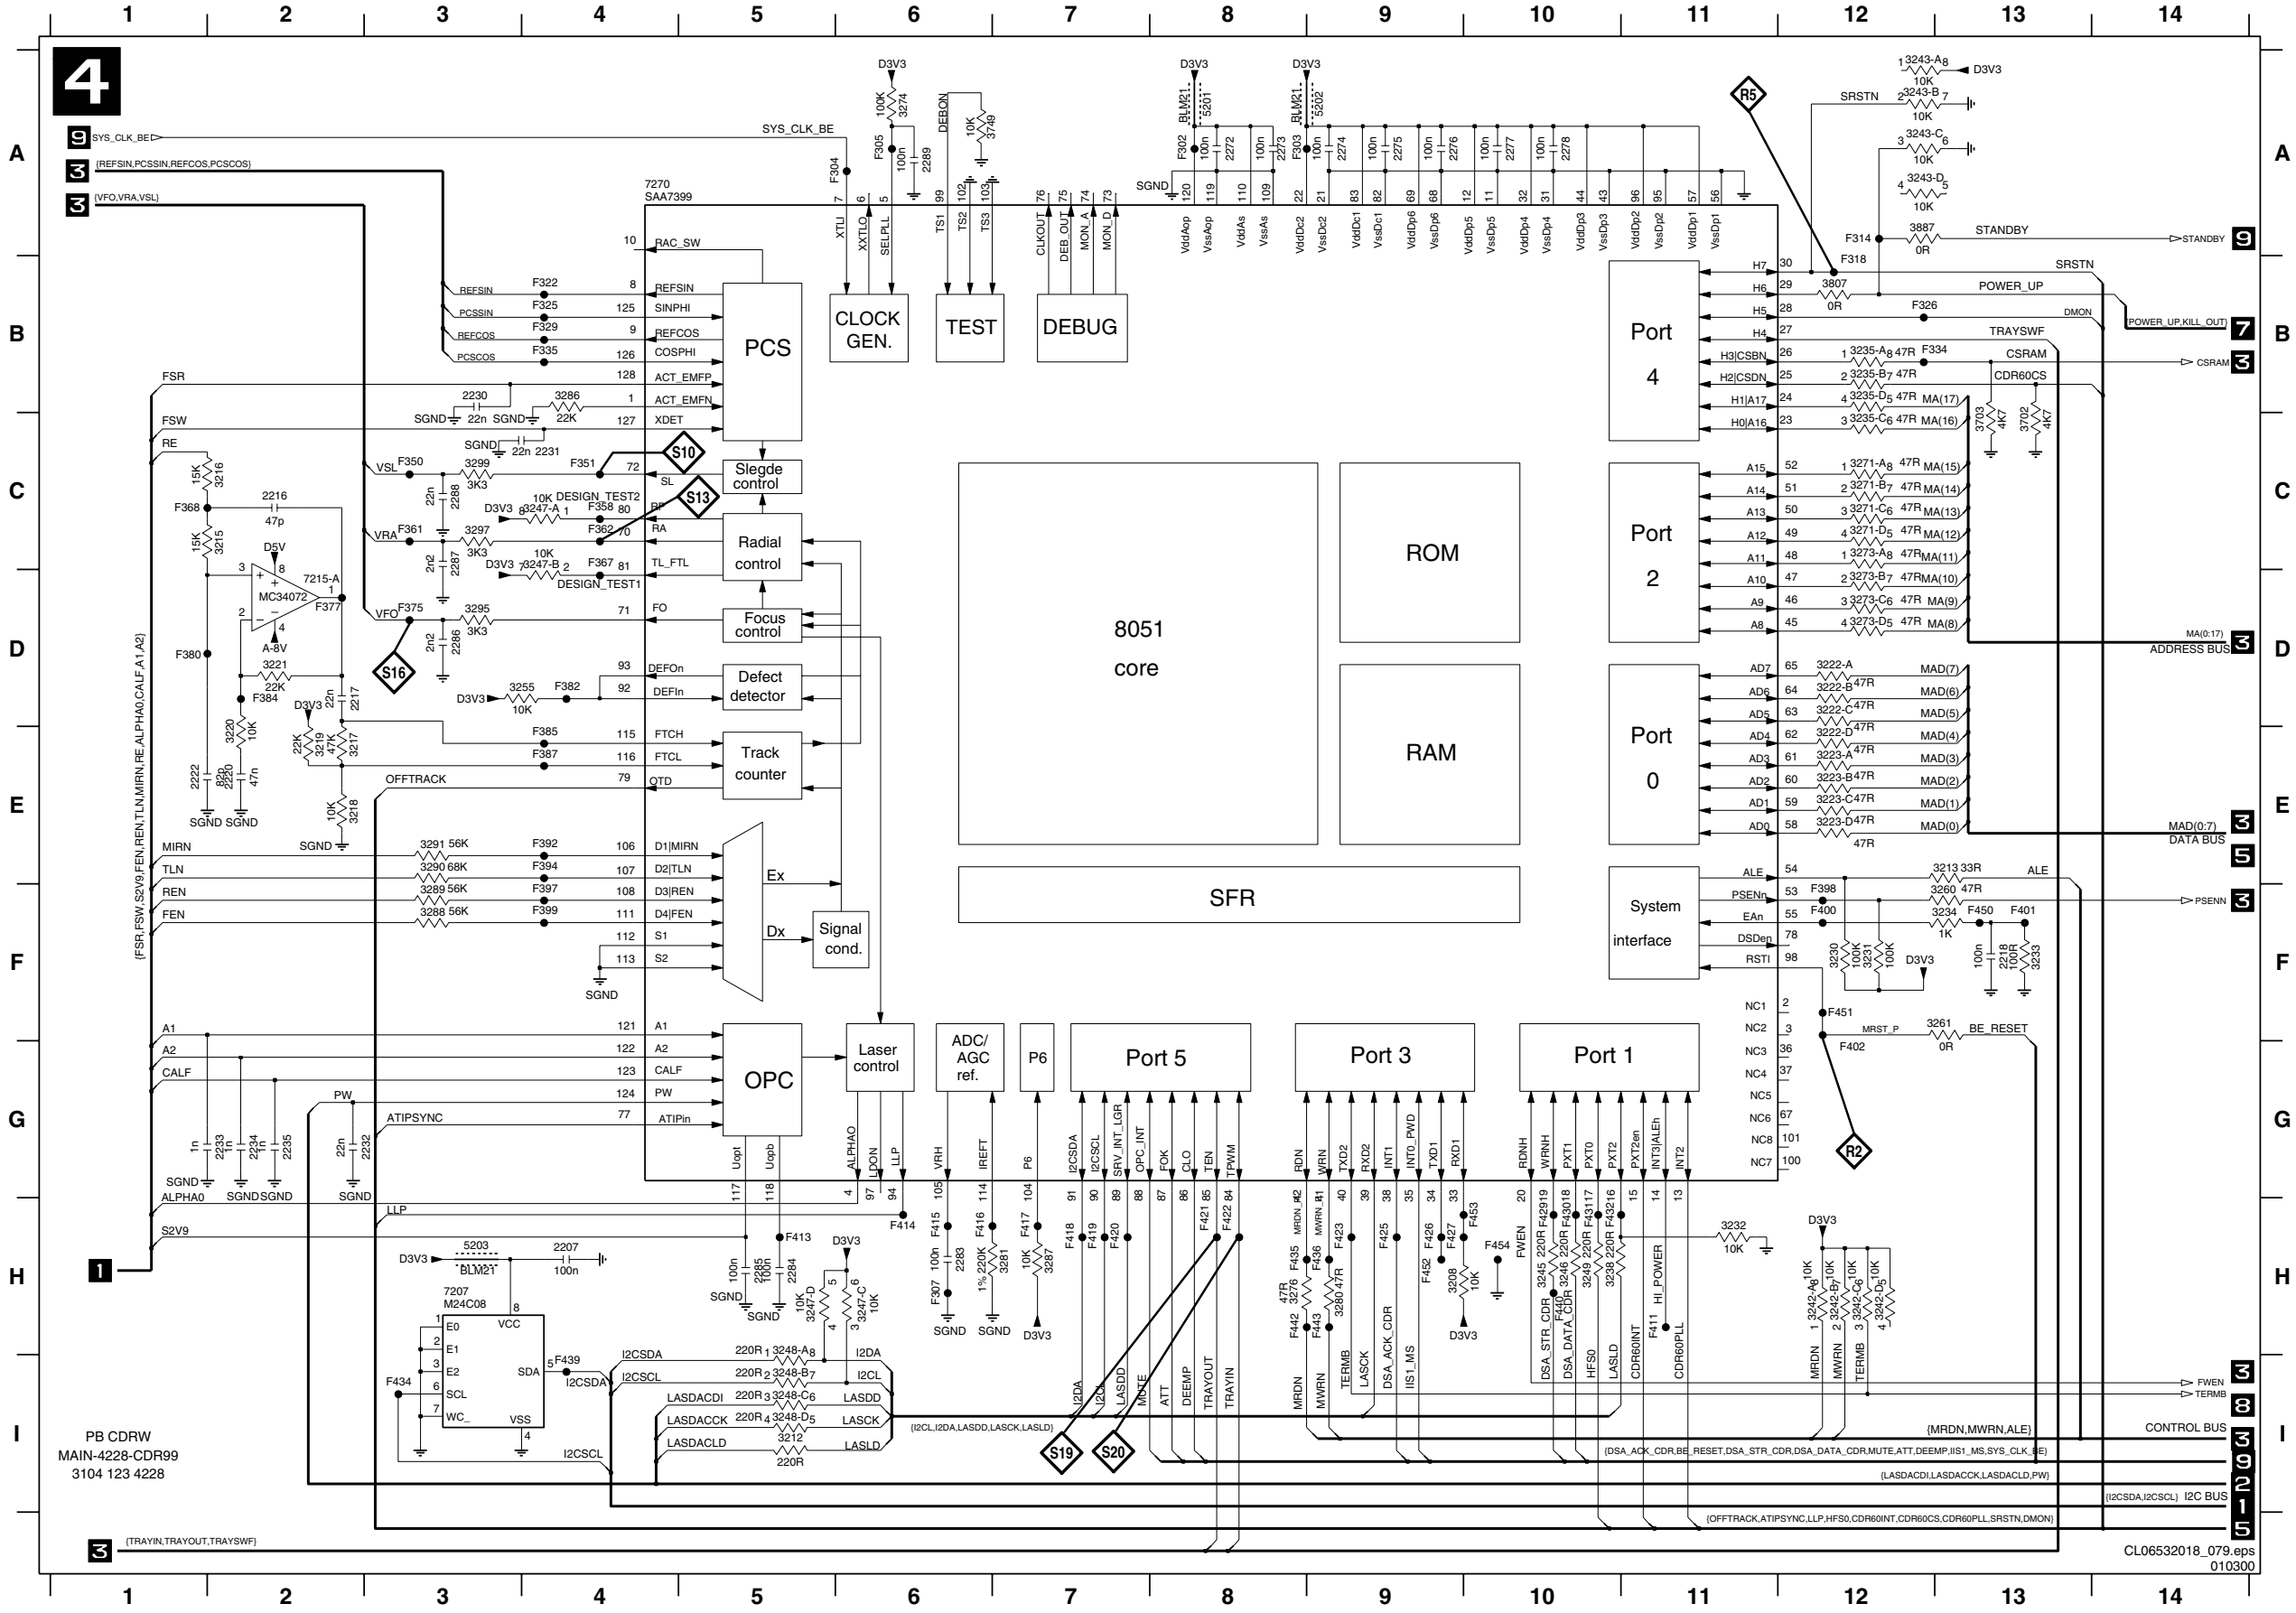

- 2207 H4
- 2216 C2
- 2217 D2
- 2218 G12
- 2220 E2
- 2222 E1
- 2230 B3
- 2231 C4
- 2232 G2
- 2233 G2
- 2234 G2
- 2235 G2
- 2272 A8
- 2273 A8
- 2274 A9
- 2275 A9
- 2276 A9
- 2277 A10
- 2278 A10
- 2283 H6
- 2284 H5
- 2285 H5
- 2286 D3
- 2287 C3
- 2288 C3
- 2289 A6
- 3208 H9
- 3212 I5
- 3213 E12
- 3215 C2
- 3216 C2
- 3217 E2
- 3218 E2
- 3219 E2
- 3220 E2
- 3221 D2
- 3222-A D12
- 3222-B D12
- 3222-C D12
- 3222-D E12
- 3223-A E12
- 3223-B E12
- 3223-C E12
- 3223-D E12
- 3230 G12
- 3231 G12
- 3232 H11
- 3233 G12
- 3234 G12
- 3235-A B12
- 3235-B B12
- 3235-C C12
- 3235-D B12
- 3238 H10
- 3242-A H12
- 3242-B H12
- 3242-C H12
- 3242-D H12
- 3243-A A12
- 3243-B A12
- 3243-C A12
- 3243-D A12
- 3245 H10
- 3246 H10
- 3247-A C4
- 3247-B C4
- 3247-C H6
- 3247-D H5
- 3248-A H5
- 3248-B I5
- 3248-C I5
- 3248-D I5
- 3249 H10
- 3255 D4
- 3260 F12
- 3261 F13
- 3271-A C12
- 3271-B C12
- 3271-C C12
- 3271-D C12
- 3273-A C12
- 3273-B D12
- 3273-C D12
- 3273-D D12
- 3274 A6
- 3276 H8
- 3280 H9
- 3281 H7
- 3286 B4
- 3287 H7
- 3288 F3
- 3289 F3
- 3290 E3
- 3291 E3
- 3295 D3
- 3297 C3
- 3299 C3
- 3302 C13
- 3303 C13
- 3749 A6
- 3807 B12
- 3887 A12
- 5201 A8
- 5202 A9
- 5203 H3
- 7207 H3
- 7215-A D2
- 7270 A4
- F302 A8
- F303 A8
- F304 A6
- F305 A6
- F307 H6
- F314 A12
- F318 B12
- F322 B4
- F326 B12
- F329 B4
- F334 B12
- F335 B4
- F350 C3
- F351 C4
- F358 C4
- F361 C3
- F362 C4
- F367 C4
- F368 C1
- F375 D3
- F377 D2
- F380 D1
- F382 D4
- F384 D2
- F385 E4
- F387 E4
- F392 A4
- F394 E4
- F397 F4
- F398 F12
- F399 F4
- F400 F12
- F401 G12
- F402 F12
- F411 H11
- F413 H5
- F414 H6
- F415 H6
- F416 H6
- F417 H7
- F418 H7
- F419 H7
- F420 H7
- F421 H8
- F422 H8
- F423 H9
- F425 H9
- F426 H9
- F427 H9
- F429 H10
- F430 H10
- F431 H10
- F432 H10
- F433 I3
- F435 H8
- F436 H9
- F439 I4
- F440 H10
- F442 H8
- F443 H9

CDR MAIN BOARD - CIRCUIT DIAGRAM 5 : CD ENCODING-DECODING PART

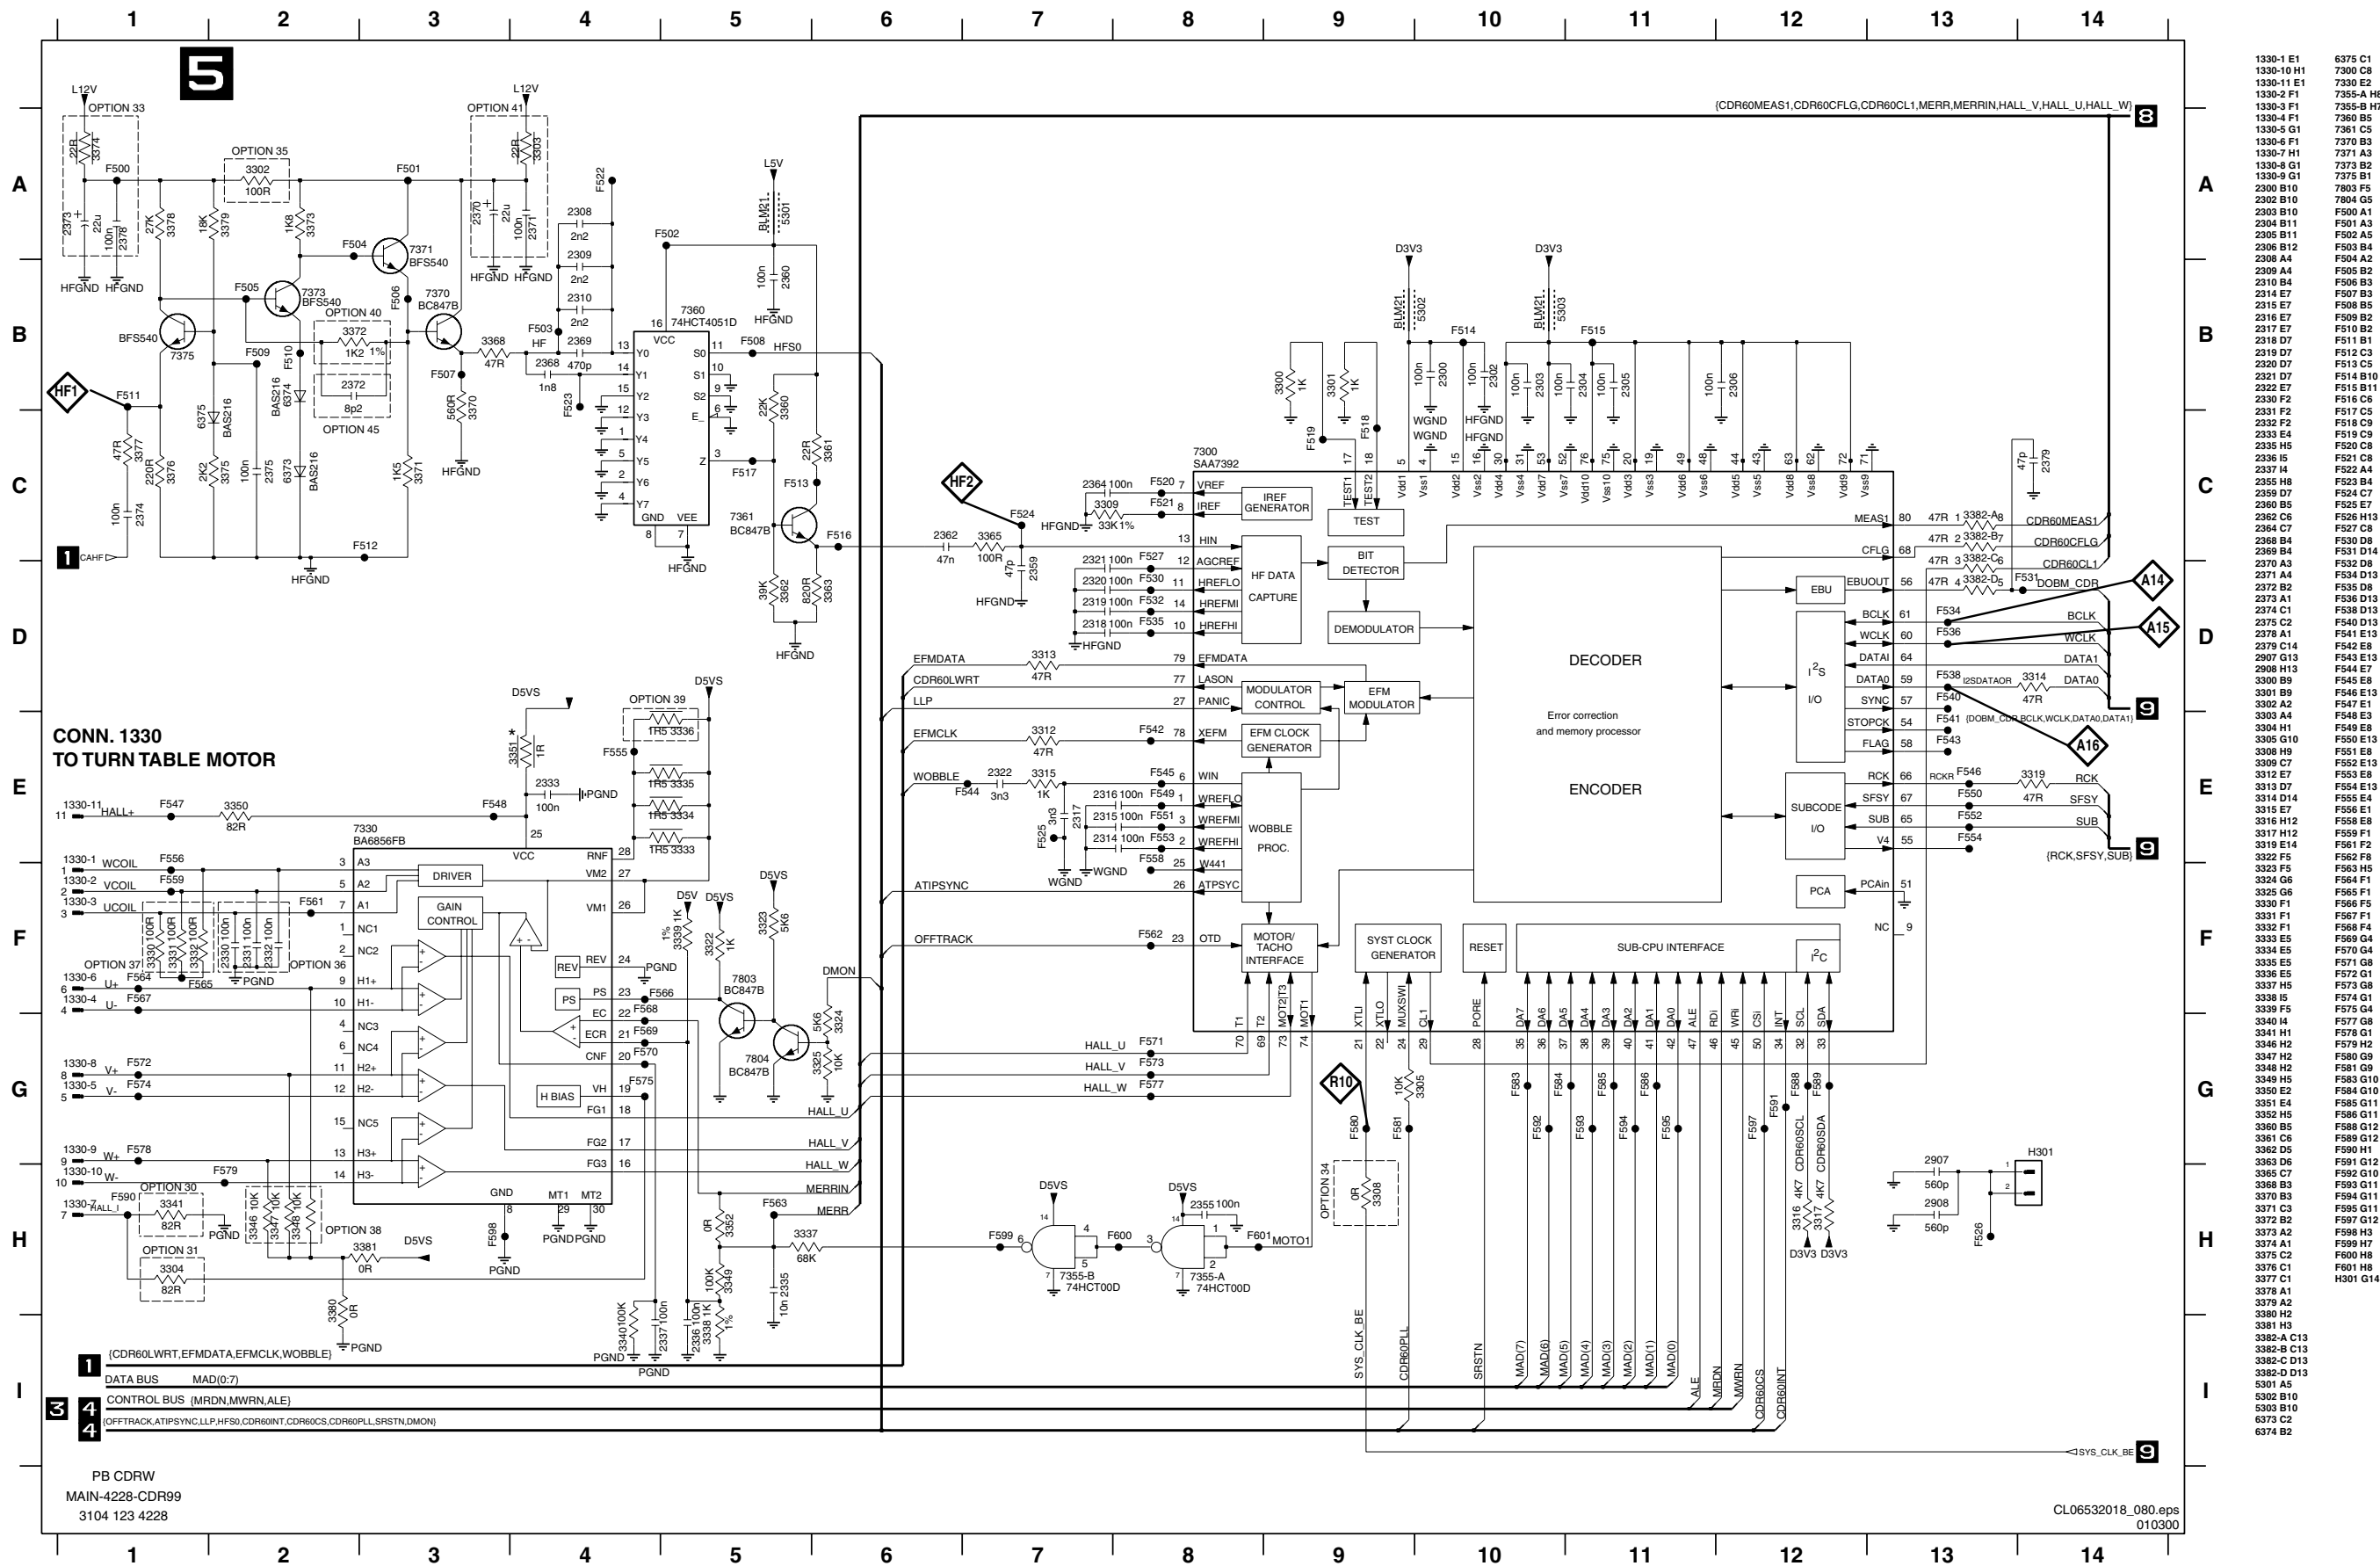


1330-1 E1	6375 C1
1330-10 H1	7300 C8
1330-11 E1	7330 E2
1330-2 F1	7355-A H8
1330-3 F1	7355-B H7
1330-4 F1	7360 B5
1330-5 G1	7361 C5
1330-6 F1	7370 B3
1330-7 H1	7371 A3
1330-8 G1	7373 B2
1330-9 G1	7375 B1
2300 B10	7803 F5
2302 B10	7804 G5
2303 B10	F500 A1
2304 B11	F501 A3
2305 B11	F502 A5
2306 B12	F503 A4
2308 A4	F504 A2
2309 A4	F505 B2
2310 B4	F506 B3
2314 E7	F507 B3
2315 E7	F508 B5
2316 E7	F509 B2
2317 E7	F510 B2
2318 D7	F511 B1
2319 D7	F512 C7
2320 D7	F513 C5
2321 D7	F514 B10
2322 E7	F515 B11
2323 F2	F516 C1
2324 F2	F517 C5
2325 F2	F518 C9
2326 F2	F519 C9
2327 F2	F520 C8
2328 F2	F521 C8
2329 F2	F522 A4
2330 F2	F523 B4
2331 F2	F524 C7
2332 F2	F525 E7
2333 F2	F526 C6
2334 F2	F527 C8
2335 F2	F528 D8
2336 F2	F529 D8
2337 F2	F530 D8
2338 F2	F531 D14
2339 F2	F532 D6
2340 F2	F533 D13
2341 F2	F534 D13
2342 F2	F535 D8
2343 F2	F536 D13
2344 F2	F537 C1
2345 F2	F538 D13
2346 F2	F539 C2
2347 F2	F540 D13
2348 F2	F541 E13
2349 F2	F542 E8
2350 F2	F543 E13
2351 F2	F544 E7
2352 F2	F545 E8
2353 F2	F546 E13
2354 F2	F547 E1
2355 F2	F548 E3
2356 F2	F549 E8
2357 F2	F550 E13
2358 F2	F551 E8
2359 F2	F552 E13
2360 F2	F553 E8
2361 F2	F554 E13
2362 F2	F555 E4
2363 F2	F556 E1
2364 F2	F557 E8
2365 F2	F558 E8
2366 F2	F559 F1
2367 F2	F560 F2
2368 F2	F561 F2
2369 F2	F562 F8
2370 F2	F563 H5
2371 F2	F564 F1
2372 F2	F565 F1
2373 F2	F566 F5
2374 F2	F567 F1
2375 F2	F568 F4
2376 F2	F569 G4
2377 F2	F570 G4
2378 F2	F571 G8
2379 F2	F572 G1
2380 F2	F573 G8
2381 F2	F574 G1
2382 F2	F575 G4
2383 F2	F576 G8
2384 F2	F577 G1
2385 F2	F578 G1
2386 F2	F579 H2
2387 F2	F580 G9
2388 F2	F581 G9
2389 F2	F582 G10
2390 F2	F583 G10
2391 F2	F584 G10
2392 F2	F585 G11
2393 F2	F586 G11
2394 F2	F587 G12
2395 F2	F588 G12
2396 F2	F589 G12
2397 F2	F590 H1
2398 F2	F591 G12
2399 F2	F592 G10
2400 F2	F593 G11
2401 F2	F594 G11
2402 F2	F595 G11
2403 F2	F596 G12
2404 F2	F597 H2
2405 F2	F598 H3
2406 F2	F599 H7
2407 F2	F600 H8
2408 F2	F601 H8
2409 F2	H301 G14


1400-10 C1	7407-A G9
1400-11 D1	7407-B I9
1400-12 H14	7407-C F9
1400-13 F14	7408-A H11
1400-14 E14	7408-B F11
1400-8 E1	7408-A E11
1400-9 B1	7408-B I11
1410-1 G14	7410 G13
1410-2 F14	7411 H13
1410-3 H14	7412 F13
1420-1 B1	7413 H13
1420-2 C1	7801 B6
1420-3 F14	7800 B8
1420-4 H14	7701 A6
1420-5 E14	7702 A14
2401 F2	7703 B6
2402 A8	7704 B1
2403 B6	7706 C5
2405 B8	7707 H7
2406 A13	7708 A13
2407 A13	7709 B8
2408 A11	7710 B7
2409 A14	7711 C7
2411 C8	7712 B1
2413 A12	7713 C3
2414 A11	7714 C2
2415 A11	7715 A11
2417 D8	7716 G1
2419 A12	7717 D1
2421 F7	7718 A12
2422 F2	7719 D12
2423 D12	7720 D8
2425 G13	7721 D6
2430 I12	7723 D1
2431 H13	7724 B4
2432 B1	7725 B9
2434 F6	7727 D4
2435 F7	7728 E7
2437 B4	7729 E2
2438 D4	7730 E11
2439 B1	7731 E13
2441 D3	7732 E13
2442 F13	7733 H13
2443 I13	7734 F2
2444 E13	7735 F6
2445 I13	7736 F7
2446 C1	7737 F9
2447 E1	7738 F10
2448 D1	7739 H13
2449 B2	7740 G13
2451 D2	7741 F12
2460 I11	7742 G10
2463 F11	7743 I13
2464 D8	7744 G9
2465 C8	7745 H11
2903 G7	7748 I12
2904 H7	7750 H3
2905 G5	7753 I13
2906 H5	7401 G7
3402 A6	7402 G6
3403 A4	
3404 B4	
3405 B5	
3407 B10	
3408 C7	
3409 C8	
3410 C3	
3411 C14	
3412 C1	
3413 D4	
3415 D7	
3416 D4	
3418 E12	
3419 F12	
3420 F11	
3421 F11	
3422 C12	
3423 G12	
3424 G12	
3427 H12	
3428 H12	
3429 I12	
3432 H10	
3433 I12	
3434 I12	
3435 I11	
3436 I11	
3439 A12	
3441 A12	
3447 E3	
3448 F10	
3449 H10	
3450 H2	
3451 D4	
3452 D4	
3885 A2	
3891 D12	
3892 D12	
5401 F2	
5402 F7	
5404 G2	
5406 E7	
5407 E2	
5413 F5	
5414 F7	
5444 E13	
5445 H13	
5446 B1	
5447 B1	
6400 H2	
7401-A D3	
7401-B C3	
7401-C B8	
7405-B D8	
7406 A11	

15000 I01	F499 I
1541 D4	F800 J
1542 A4	F801 J
1543 B4	F802 J
2500 E2	F803 I
2501 F2	F804 I
2502 F2	F805 I
2504 A11	F806 I
2505 H12	F807 I
2506 H12	F808 I
2507 H9	F809 I
2508 I8	F810 I
2509 I8	F811 I
2535 B5	F812 I
2536 B4	F813 I
2537 B5	F814 I
2541 D5	F815 I
2543 B4	F816 I
2544 B4	F817 I
2546 C7	F818 I
2547 F6	F819 I
2550 D5	F820 I
2550 H8	F821 I
2551 G4	F822 I
2552 H3	F823 I
2553 H8	F824 I
2555 F12	F825 I
2556 G3	F826 I
2557 F14	F827 I
2558 F12	F828 I
2561 F11	F829 I
2562 H8	F830 I
2563 H8	F831 I
2565 D6	F832 I
2568 A5	F834 I
2571 D3	F835 I
2572 H8	F836 I
2574 E8	F837 I
2575 E9	F838 I
2577 F2	F839 I
3531 C12	F840 I
3532 C12	F841 I
3533 A13	F842 I
3535 C6	F843 I
3536 G4	F844 I
3538 C4	F845 I
3539 D5	F846 I
3540 E10	
3541 F6	
3542 E6	
3544 F3	
3545 G4	
3546 G4	
3547 H5	
3548 H6	
3549 I7	
3550 H10	
3551 I6	
3552 F5	
3553 I6	
3554 E5	
3555 E5	
3556 E4	
3557 F4	
3559 B12	
3560 F14	
3562 B13	
3566 E10	
3567 E11	
3570 A12	
5000 D2	
5501 E2	
5502 E2	
5503 E2	
5541 D4	
5542 D4	
5543 B3	
5544 B3	
5546 C7	
5551 F11	
5554 H10	
5555 H6	
5556 A5	
5709 F2	
6000 G11	
6001 G9	
6002 I11	
6553 A11	
6552 A10	
7200 C6	
7521-A G4	
7521-B I6	
7522 H5	
7523 C5	
7524 C5	
7525 E11	
7526 H5	
7527 E5	
7528 F4	
7529 I8	
7535 A4	
7548 I8	
7549 F11	
7556 F13	
7557 H8	
7558 E8	
7560 B12	
7561 B14	
7562 C13	
7563 E12	
7564 H8	
7565 A10	
7566 I8	
7567 H8	
7568 I8	
7569 I8	
7570 I8	
7571 I8	
7572 I8	
7573 I8	
7574 I8	
7575 I8	
7576 I8	
7577 I8	
7578 I8	
7579 I8	
7580 I8	
7581 I8	
7582 I8	
7583 I8	
7584 I8	
7585 I8	
7586 I8	
7587 I8	
7588 I8	
7589 I8	
7590 I8	
7591 I8	
7592 I8	
7593 I8	
7594 I8	
7595 I8	
7596 I8	
7597 I8	
7598 I8	
7599 I8	
7600 I8	
7601 I8	
7602 I8	
7603 I8	
7604 I8	
7605 I8	
7606 I8	
7607 I8	
7608 I8	
7609 I8	
7610 I8	
7611 I8	
7612 I8	
7613 I8	
7614 I8	
7615 I8	
7616 I8	
7617 I8	
7618 I8	
7619 I8	
7620 I8	
7621 I8	
7622 I8	
7623 I8	
7624 I8	
7625 I8	
7626 I8	
7627 I8	
7628 I8	
7629 I8	
7630 I8	
7631 I8	
7632 I8	
7633 I8	
7634 I8	
7635 I8	
7636 I8	
7637 I8	
7638 I8	
7639 I8	
7640 I8	
7641 I8	
7642 I8	
7643 I8	
7644 I8	
7645 I8	
7646 I8	
7647 I8	
7648 I8	
7649 I8	
7650 I8	
7651 I8	
7652 I8	
7653 I8	
7654 I8	

CDR MAIN BOARD - CIRCUIT DIAGRAM 8 : TEST & CONNECTOR PART

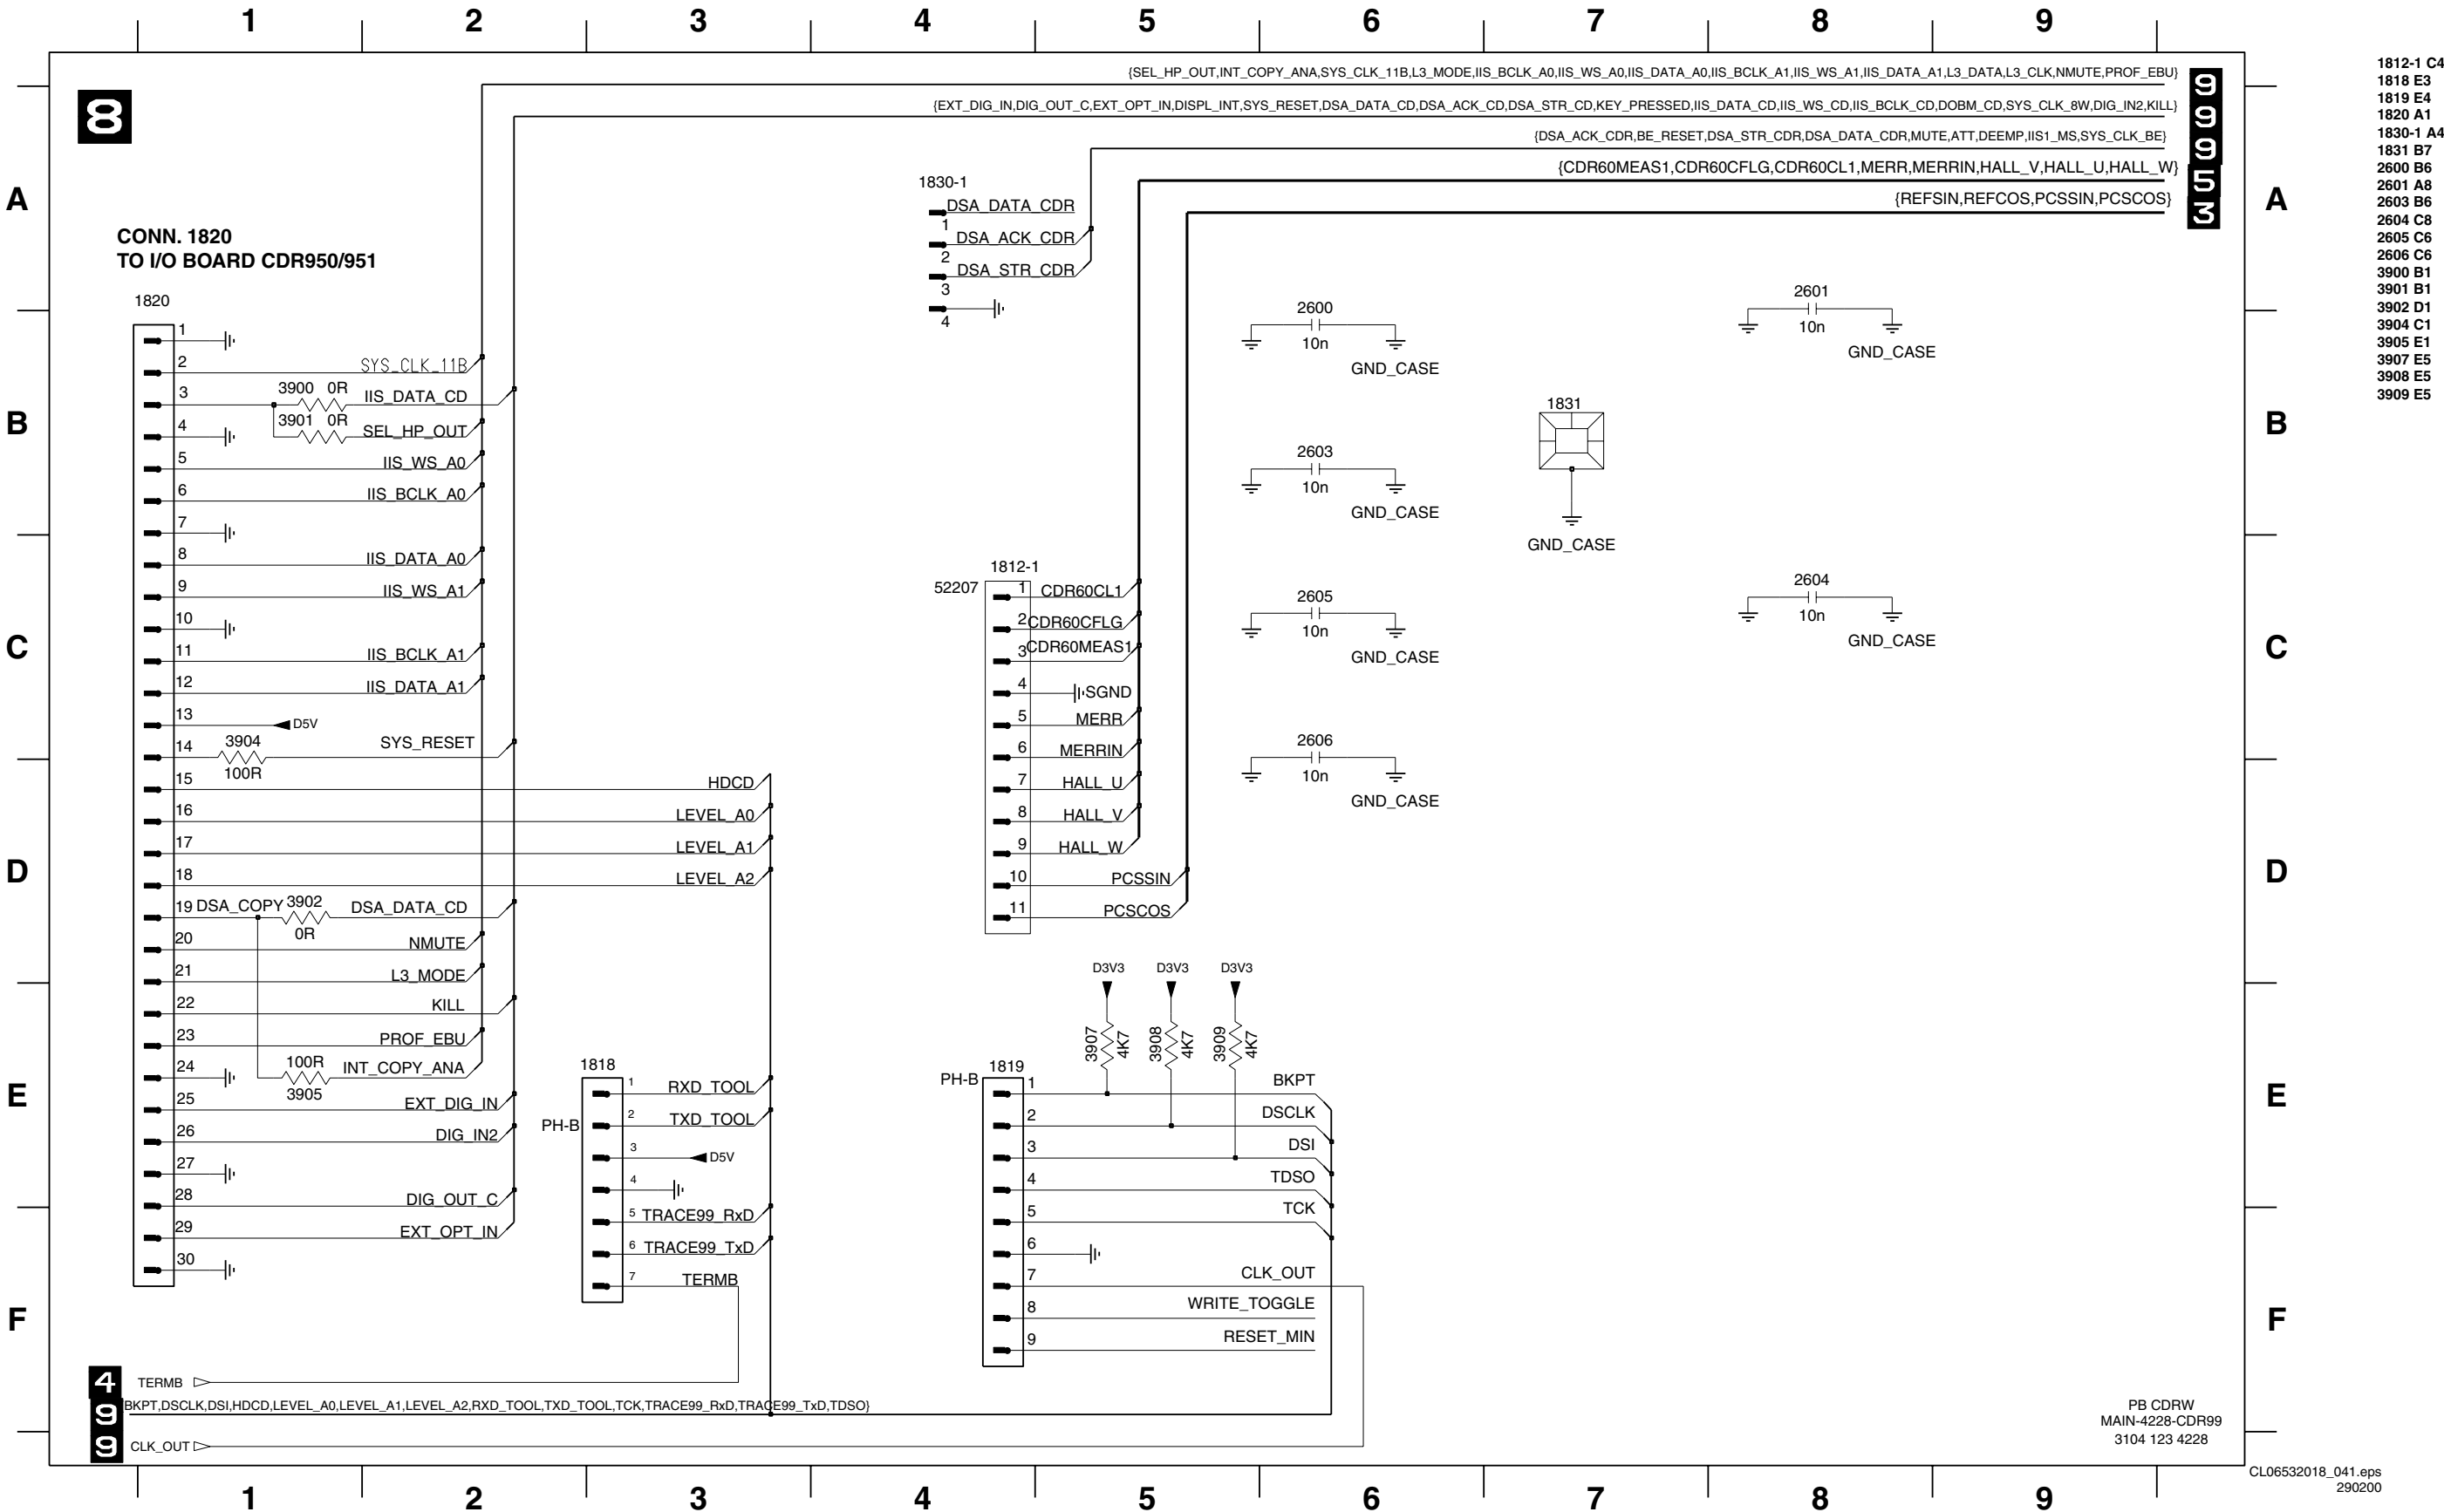


CDR MAIN BOARD - CIRCUIT DIAGRAM 9 : DASP MASTER PROCESSOR TESTPOINTS

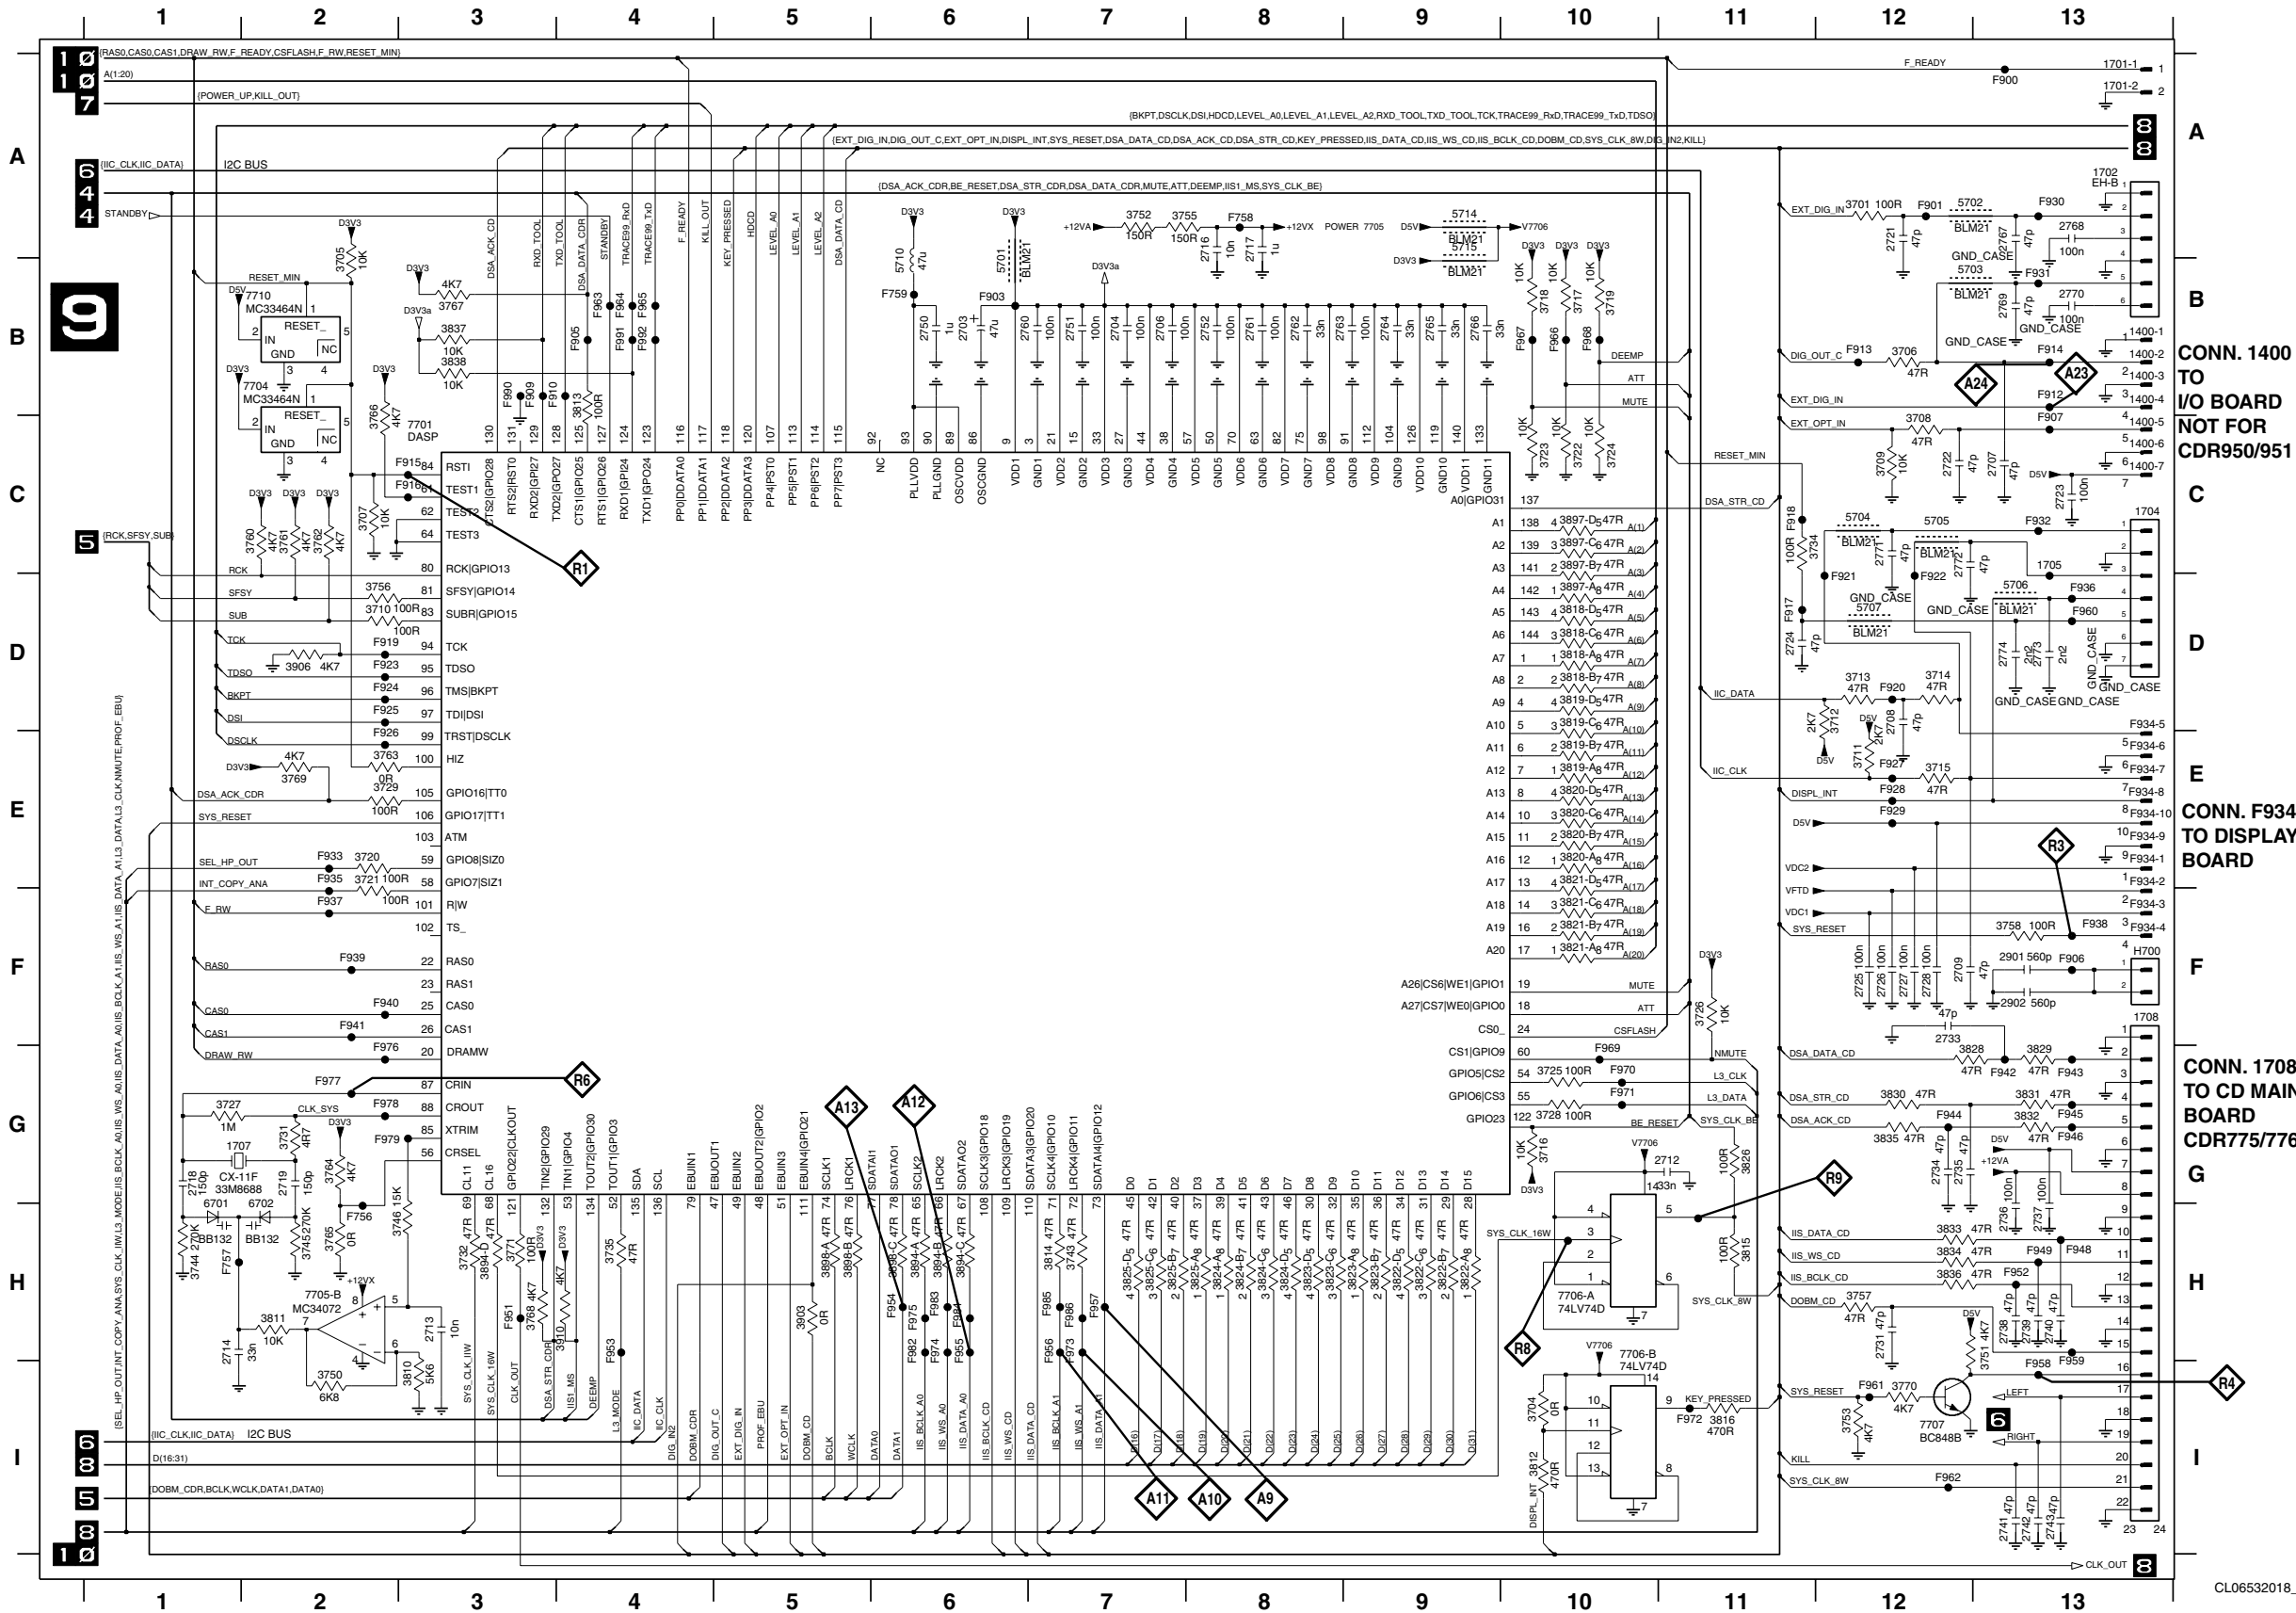

1400-1 B13	3767 B3
1400-2 B13	3768 H3
1400-3 B13	3769 E2
1400-4 B13	3770 I12
1400-5 C13	3771 H3
1400-6 C13	3810 I3
1400-7 C13	3811 H2
1701-1 A13	3812 I10
1701-2 A13	3813 B4
1702 A13	3814 H7
1704 C13	3815 H11
1707 G1	3816 I11
1708 F13	3818-A D10
2703 B6	3818-B D10
2704 B7	3818-C D10
2706 B7	3818-D D10
2707 C13	3819-A E10
2708 D12	3819-B E10
2709 F12	3819-C D10
2712 G11	3819-D D10
2713 H3	3820-A E10
2714 H1	3820-B E10
2716 A8	3820-C E10
2717 A8	3820-D E10
2718 G1	3821-A F10
2719 G2	3821-B F10
2721 A12	3821-C F10
2722 C12	3821-D E10
2723 H3	3822-A H9
2724 D11	3822-B H9
2725 F12	3822-C H9
2726 F12	3822-D H9
2727 F12	3823-A H9
2728 F12	3823-B H9
2729 H12	3823-C H8
2730 F12	3823-D H8
2731 G12	3824-A H8
2732 G12	3824-B H8
2733 H12	3824-C H8
2734 G12	3824-D H8
2735 G12	3825-A H8
2736 H13	3825-B H7
2737 H13	3825-C H7
2738 H13	3825-D H7
2739 H13	3826-G11
2740 H13	3827-G11
2741 H13	3828 G11
2742 H13	3829 B6
2743 H13	3830 G12
2744 H13	3831 G13
2745 H13	3832 G13
2746 H13	3833 H12
2747 H13	3834 H12
2748 H13	3835 G12
2749 H13	3836 H12
2750 H13	3837 B3
2751 B7	3838 B3
2752 B8	3839-A H6
2753 B8	3839-B H6
2754 B8	3839-C H6
2755 B8	3839-D H6
2756 B8	3839-E H6
2757 B8	3839-F H6
2758 B8	3839-G H6
2759 B8	3839-H H6
2760 B8	3839-I H6
2761 B8	3839-J H6
2762 B8	3839-K H6
2763 B8	3839-L H6
2764 B8	3839-M H6
2765 B8	3839-N H6
2766 B8	3839-O H6
2767 B8	3839-P H6
2768 B8	3839-Q H6
2769 B8	3839-R H6
2770 B8	3839-S H6
2771 B8	3839-T H6
2772 B8	3839-U H6
2773 B8	3839-V H6
2774 B8	3839-W H6
2775 B8	3839-X H6
2776 B8	3839-Y H6
2777 B8	3839-Z H6
2778 B8	3839-AA H6
2779 B8	3839-AB H6
2780 B8	3839-AC H6
2781 B8	3839-AD H6
2782 B8	3839-AE H6
2783 B8	3839-AF H6
2784 B8	3839-AG H6
2785 B8	3839-AH H6
2786 B8	3839-AI H6
2787 B8	3839-AJ H6
2788 B8	3839-AK H6
2789 B8	3839-AL H6
2790 B8	3839-AM H6
2791 B8	3839-AN H6
2792 B8	3839-AO H6
2793 B8	3839-AP H6
2794 B8	3839-AQ H6
2795 B8	3839-AR H6
2796 B8	3839-AS H6
2797 B8	3839-AT H6
2798 B8	3839-AU H6
2799 B8	3839-AV H6
2800 B8	3839-AW H6
2801 B8	3839-AX H6
2802 B8	3839-AY H6
2803 B8	3839-AZ H6
2804 B8	3839-BA H6
2805 B8	3839-BB H6
2806 B8	3839-BB H6
2807 B8	3839-BB H6
2808 B8	3839-BB H6
2809 B8	3839-BB H6
2810 B8	3839-BB H6
2811 B8	3839-BB H6
2812 B8	3839-BB H6
2813 B8	3839-BB H6
2814 B8	3839-BB H6
2815 B8	3839-BB H6
2816 B8	3839-BB H6
2817 B8	3839-BB H6
2818 B8	3839-BB H6
2819 B8	3839-BB H6
2820 B8	3839-BB H6
2821 B8	3839-BB H6
2822 B8	3839-BB H6
2823 B8	3839-BB H6
2824 B8	3839-BB H6
2825 B8	3839-BB H6
2826 B8	3839-BB H6
2827 B8	3839-BB H6
2828 B8	3839-BB H6
2829 B8	3839-BB H6
2830 B8	3839-BB H6
2831 B8	3839-BB H6
2832 B8	3839-BB H6
2833 B8	3839-BB H6
2834 B8	3839-BB H6
2835 B8	3839-BB H6
2836 B8	3839-BB H6
2837 B8	3839-BB H6
2838 B8	3839-BB H6
2839 B8	3839-BB H6
2840 B8	3839-BB H6
2841 B8	3839-BB H6
2842 B8	3839-BB H6
2843 B8	3839-BB H6
2844 B8	3839-BB H6
2845 B8	3839-BB H6
2846 B8	3839-BB H6
2847 B8	3839-BB H6
2848 B8	3839-BB H6
2849 B8	3839-BB H6
2850 B8	3839-BB H6
2851 B8	3839-BB H6
2852 B8	3839-BB H6
2853 B8	3839-BB H6
2854 B8	3839-BB H6
2855 B8	3839-BB H6
2856 B8	3839-BB H6
2857 B8	3839-BB H6
2858 B8	3839-BB H6
2859 B8	3839-BB H6
2860 B8	3839-BB H6
2861 B8	3839-BB H6
2862 B8	3839-BB H6
2863 B8	3839-BB H6
2864 B8	3839-BB H6
2865 B8	3839-BB H6
2866 B8	3839-BB H6
2867 B8	3839-BB H6
2868 B8	3839-BB H6
2869 B8	3839-BB H6
2870 B8	3839-BB H6
2871 B8	3839-BB H6
2872 B8	3839-BB H6
2873 B8	3839-BB H6
2874 B8	3839-BB H6
2875 B8	3839-BB H6
2876 B8	3839-BB H6
2877 B8	3839-BB H6
2878 B8	3839-BB H6
2879 B8	3839-BB H6
2880 B8	3839-BB H6
2881 B8	3839-BB H6
2882 B8	3839-BB H6
2883 B8	3839-BB H6
2884 B8	3839-BB H6
2885 B8	3839-BB H6
2886 B8	3839-BB H6
2887 B8	3839-BB H6
2888 B8	3839-BB H6
2889 B8	3839-BB H6
2890 B8	3839-BB H6
2891 B8	3839-BB H6
2892 B8	3839-BB H6
2893 B8	3839-BB H6
2894 B8	3839-BB H6
2895 B8	3839-BB H6
2896 B8	3839-BB H6
2897 B8	3839-BB H6
2898 B8	3839-BB H6
2899 B8	3839-BB H6
2900 B8	3839-BB H6
2901 B8	3839-BB H6
2902 B8	3839-BB H6
2903 B8	3839-BB H6
2904 B8	3839-BB H6
2905 B8	3839-BB H6
2906 B8	3839-BB H6
2907 B8	3839-BB H6
2908 B8	3839-BB H6
2909 B8	3839-BB H6
2910 B8	3839-BB H6
2911 B8	3839-BB H6
2912 B8	3839-BB H6
2913 B8	3839-BB H6
2914 B8	3839-BB H6
2915 B8	3839-BB H6
2916 B8	3839-BB H6
2917 B8	3839-BB H6
2918 B8	3839-BB H6
2919 B8	3839-BB H6
2920 B8	3839-BB H6
2921 B8	3839-BB H6
2922 B8	3839-BB H6
2923 B8	3839-BB H6
2924 B8	3839-BB H6
2925 B8	3839-BB H6
2926 B8	3839-BB H6
2927 B8	3839-BB H6
2928 B8	3839-BB H6
2929 B8	3839-BB H6
2930 B8	3839-BB H6
2931 B8	3839-BB H6
2932 B8	3839-BB H6
2933 B8	3839-BB H6
2934 B8	3839-BB H6
2935 B8	3839-BB H6
2936 B8	3839-BB H6
2937 B8	3839-BB H6
2938 B8	3839-BB H6
2939 B8	3839-BB H6
2940 B8	3839-BB H6
2941 B8	3839-BB H6
2942 B8	3839-BB H6
2943 B8	3839-BB H6
2944 B8	3839-BB H6
2945 B8	3839-BB H6
2946 B8	3839-BB H6
2947 B8	3839-BB H6
2948 B8	3839-BB H6
2949 B8	3839-BB H6
2950 B8	3839-BB H6
2951 B8	3839-BB H6
2952 B8	3839-BB H6
2953 B8	3839-BB H6
2954 B8	3839-BB H6
2955 B8	3839-BB H6
2956 B8	3839-BB H6
2957 B8	3839-BB H6
2958 B8	3839-BB H6
2959 B8	3839-BB H6
2960 B8	3839-BB H6
2961 B8	3839-BB H6
2962 B8	3839-BB H6
2963 B8	3839-BB H6
2964 B8	3839-BB H6
2965 B8	3839-BB H6
2966 B8	3839-BB H6
2967 B8	3839-BB H6
2968 B8	3839-BB H6
2969 B8	3839-BB H6
2970 B8	3839-BB H6
2971 B8	3839-BB H6
2972 B8	3839-BB H6
2973 B8	3839-BB H6
2974 B8	3839-BB H6
2975 B8	3839-BB H6
2976 B8	3839-BB H6
2977 B8	3839-BB H6
2978 B8	3839-BB H6
2979 B8	3839-BB H6
2980 B8	3839-BB H6
2981 B8	3839-BB H6
2982 B8	3839-BB H6
2983 B8	3839-BB H6
2984 B8	3839-BB H6
2985 B8	3839-BB H6
2986 B8	3839-BB H6
2987 B8	3839-BB H6
2988 B8	3839-BB H6
2989 B8	3839-BB H6
2990 B8	3839-BB H6
2991 B8	3839-BB H6
2992 B8	3839-BB H6
2993 B8	3839-BB H6
2994 B8	3839-BB H6
2995 B8	3839-BB H6
2996 B8	3839-BB H6
2997 B8	3839-BB H6
2998 B8	3839-BB H6
2999 B8	3839-BB H6
3000 B8	3839-BB H6

CDR MAIN BOARD - CIRCUIT DIAGRAM 10 : DASP FLASH & DRAM TESTPOINTS

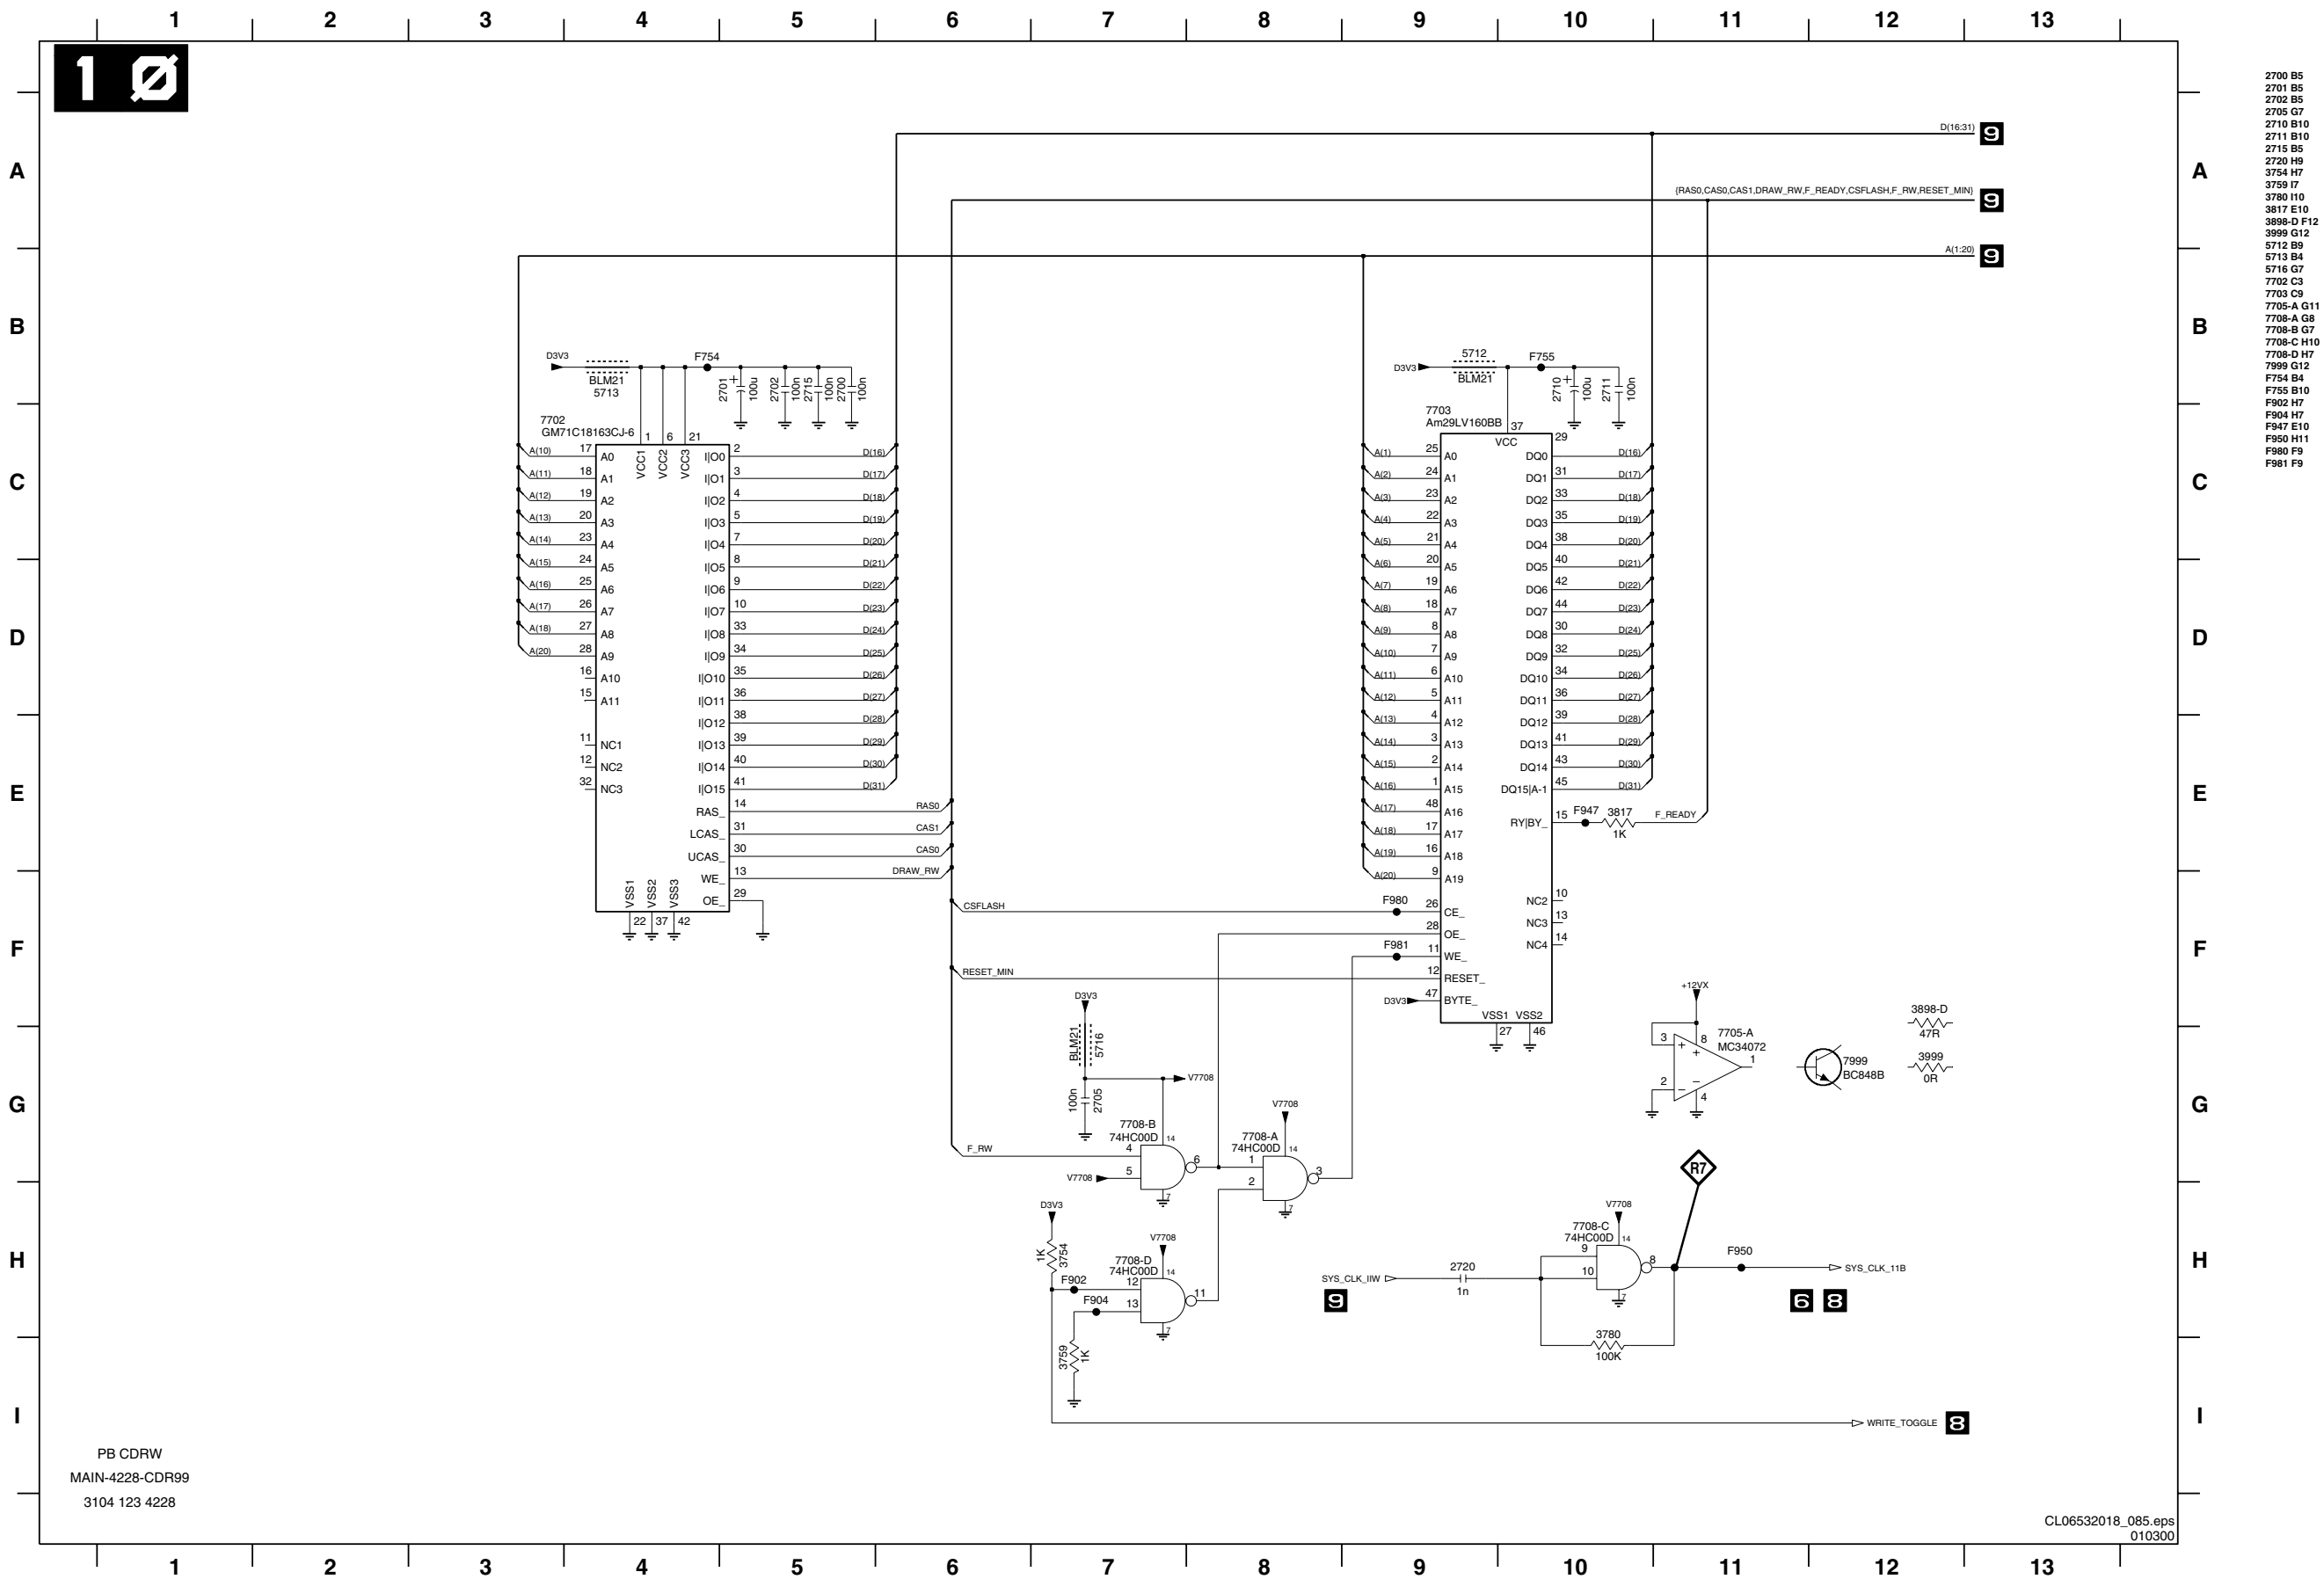



CL06532018_044.eps
290200

[illegible]

2801	C	A	3	2	7	B	4
2802	C	C	3	2	7	B	4
2803	C	C	3	2	7	B	4
2804	C	C	3	2	7	B	4
2805	C	C	3	2	7	B	4
2806	C	C	3	2	7	B	4
2807	C	C	3	2	7	B	4
2808	C	C	3	2	7	B	4
2809	C	C	3	2	7	B	4
2810	C	C	3	2	7	B	4
2811	C	C	3	2	7	B	4
2812	C	C	3	2	7	B	4
2813	C	C	3	2	7	B	4
2814	C	C	3	2	7	B	4
2815	C	C	3	2	7	B	4
2816	C	C	3	2	7	B	4
2817	C	C	3	2	7	B	4
2818	C	C	3	2	7	B	4
2819	C	C	3	2	7	B	4
2820	C	C	3	2	7	B	4
2821	C	C	3	2	7	B	4
2822	C	C	3	2	7	B	4
2823	C	C	3	2	7	B	4
2824	C	C	3	2	7	B	4
2825	C	C	3	2	7	B	4
2826	C	C	3	2	7	B	4
2827	C	C	3	2	7	B	4
2828	C	C	3	2	7	B	4
2829	C	C	3	2	7	B	4
2830	C	C	3	2	7	B	4
2831	C	C	3	2	7	B	4
2832	C	C	3	2	7	B	4
2833	C	C	3	2	7	B	4
2834	C	C	3	2	7	B	4
2835	C	C	3	2	7	B	4
2836	C	C	3	2	7	B	4
2837	C	C	3	2	7	B	4
2838	C	C	3	2	7	B	4
2839	C	C	3	2	7	B	4
2840	C	C	3	2	7	B	4
2841	C	C	3	2	7	B	4
2842	C	C	3	2	7	B	4
2843	C	C	3	2	7	B	4
2844	C	C	3	2	7	B	4
2845	C	C	3	2	7	B	4
2846	C	C	3	2	7	B	4
2847	C	C	3	2	7	B	4
2848	C	C	3	2	7	B	4
2849	C	C	3	2	7	B	4
2850	C	C	3	2	7	B	4
2851	C	C	3	2	7	B	4
2852	C	C	3	2	7	B	4
2853	C	C	3	2	7	B	4
2854	C	C	3	2	7	B	4
2855	C	C	3	2	7	B	4
2856	C	C	3	2	7	B	4
2857	C	C	3	2	7	B	4
2858	C	C	3	2	7	B	4
2859	C	C	3	2	7	B	4
2860	C	C	3	2	7	B	4
2861	C	C	3	2	7	B	4
2862	C	C	3	2	7	B	4
2863	C	C	3	2	7	B	4
2864	C	C	3	2	7	B	4
2865	C	C	3	2	7	B	4
2866	C	C	3	2	7	B	4
2867	C	C	3	2	7	B	4
2868	C	C	3	2	7	B	4
2869	C	C	3	2	7	B	4
2870	C	C	3	2	7	B	4
2871	C	C	3	2	7	B	4
2872	C	C	3	2	7	B	4
2873	C	C	3	2	7	B	4
2874	C	C	3	2	7	B	4
2875	C	C	3	2	7	B	4
2876	C	C	3	2	7	B	4
2877	C	C	3	2	7	B	4
2878	C	C	3	2	7	B	4
2879	C	C	3	2	7		

CDR MAIN BOARD - CIRCUIT DIAGRAM 1 : AEGER, EFMTIM, FORWARD SENSE CIRCUIT TESTPOINTS

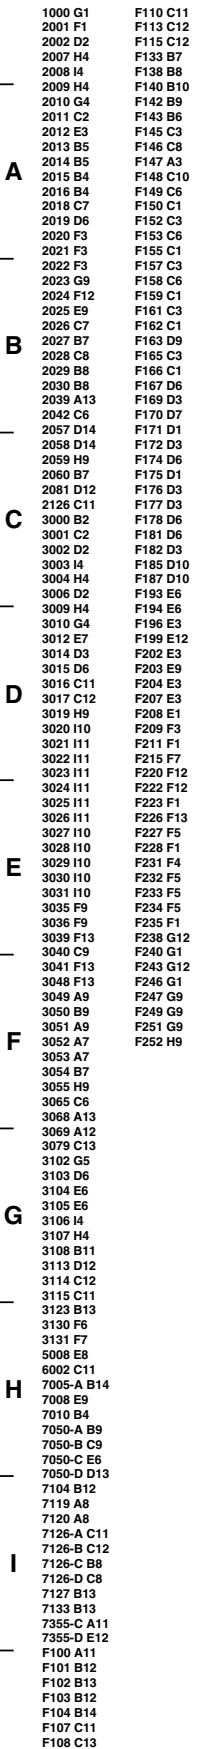

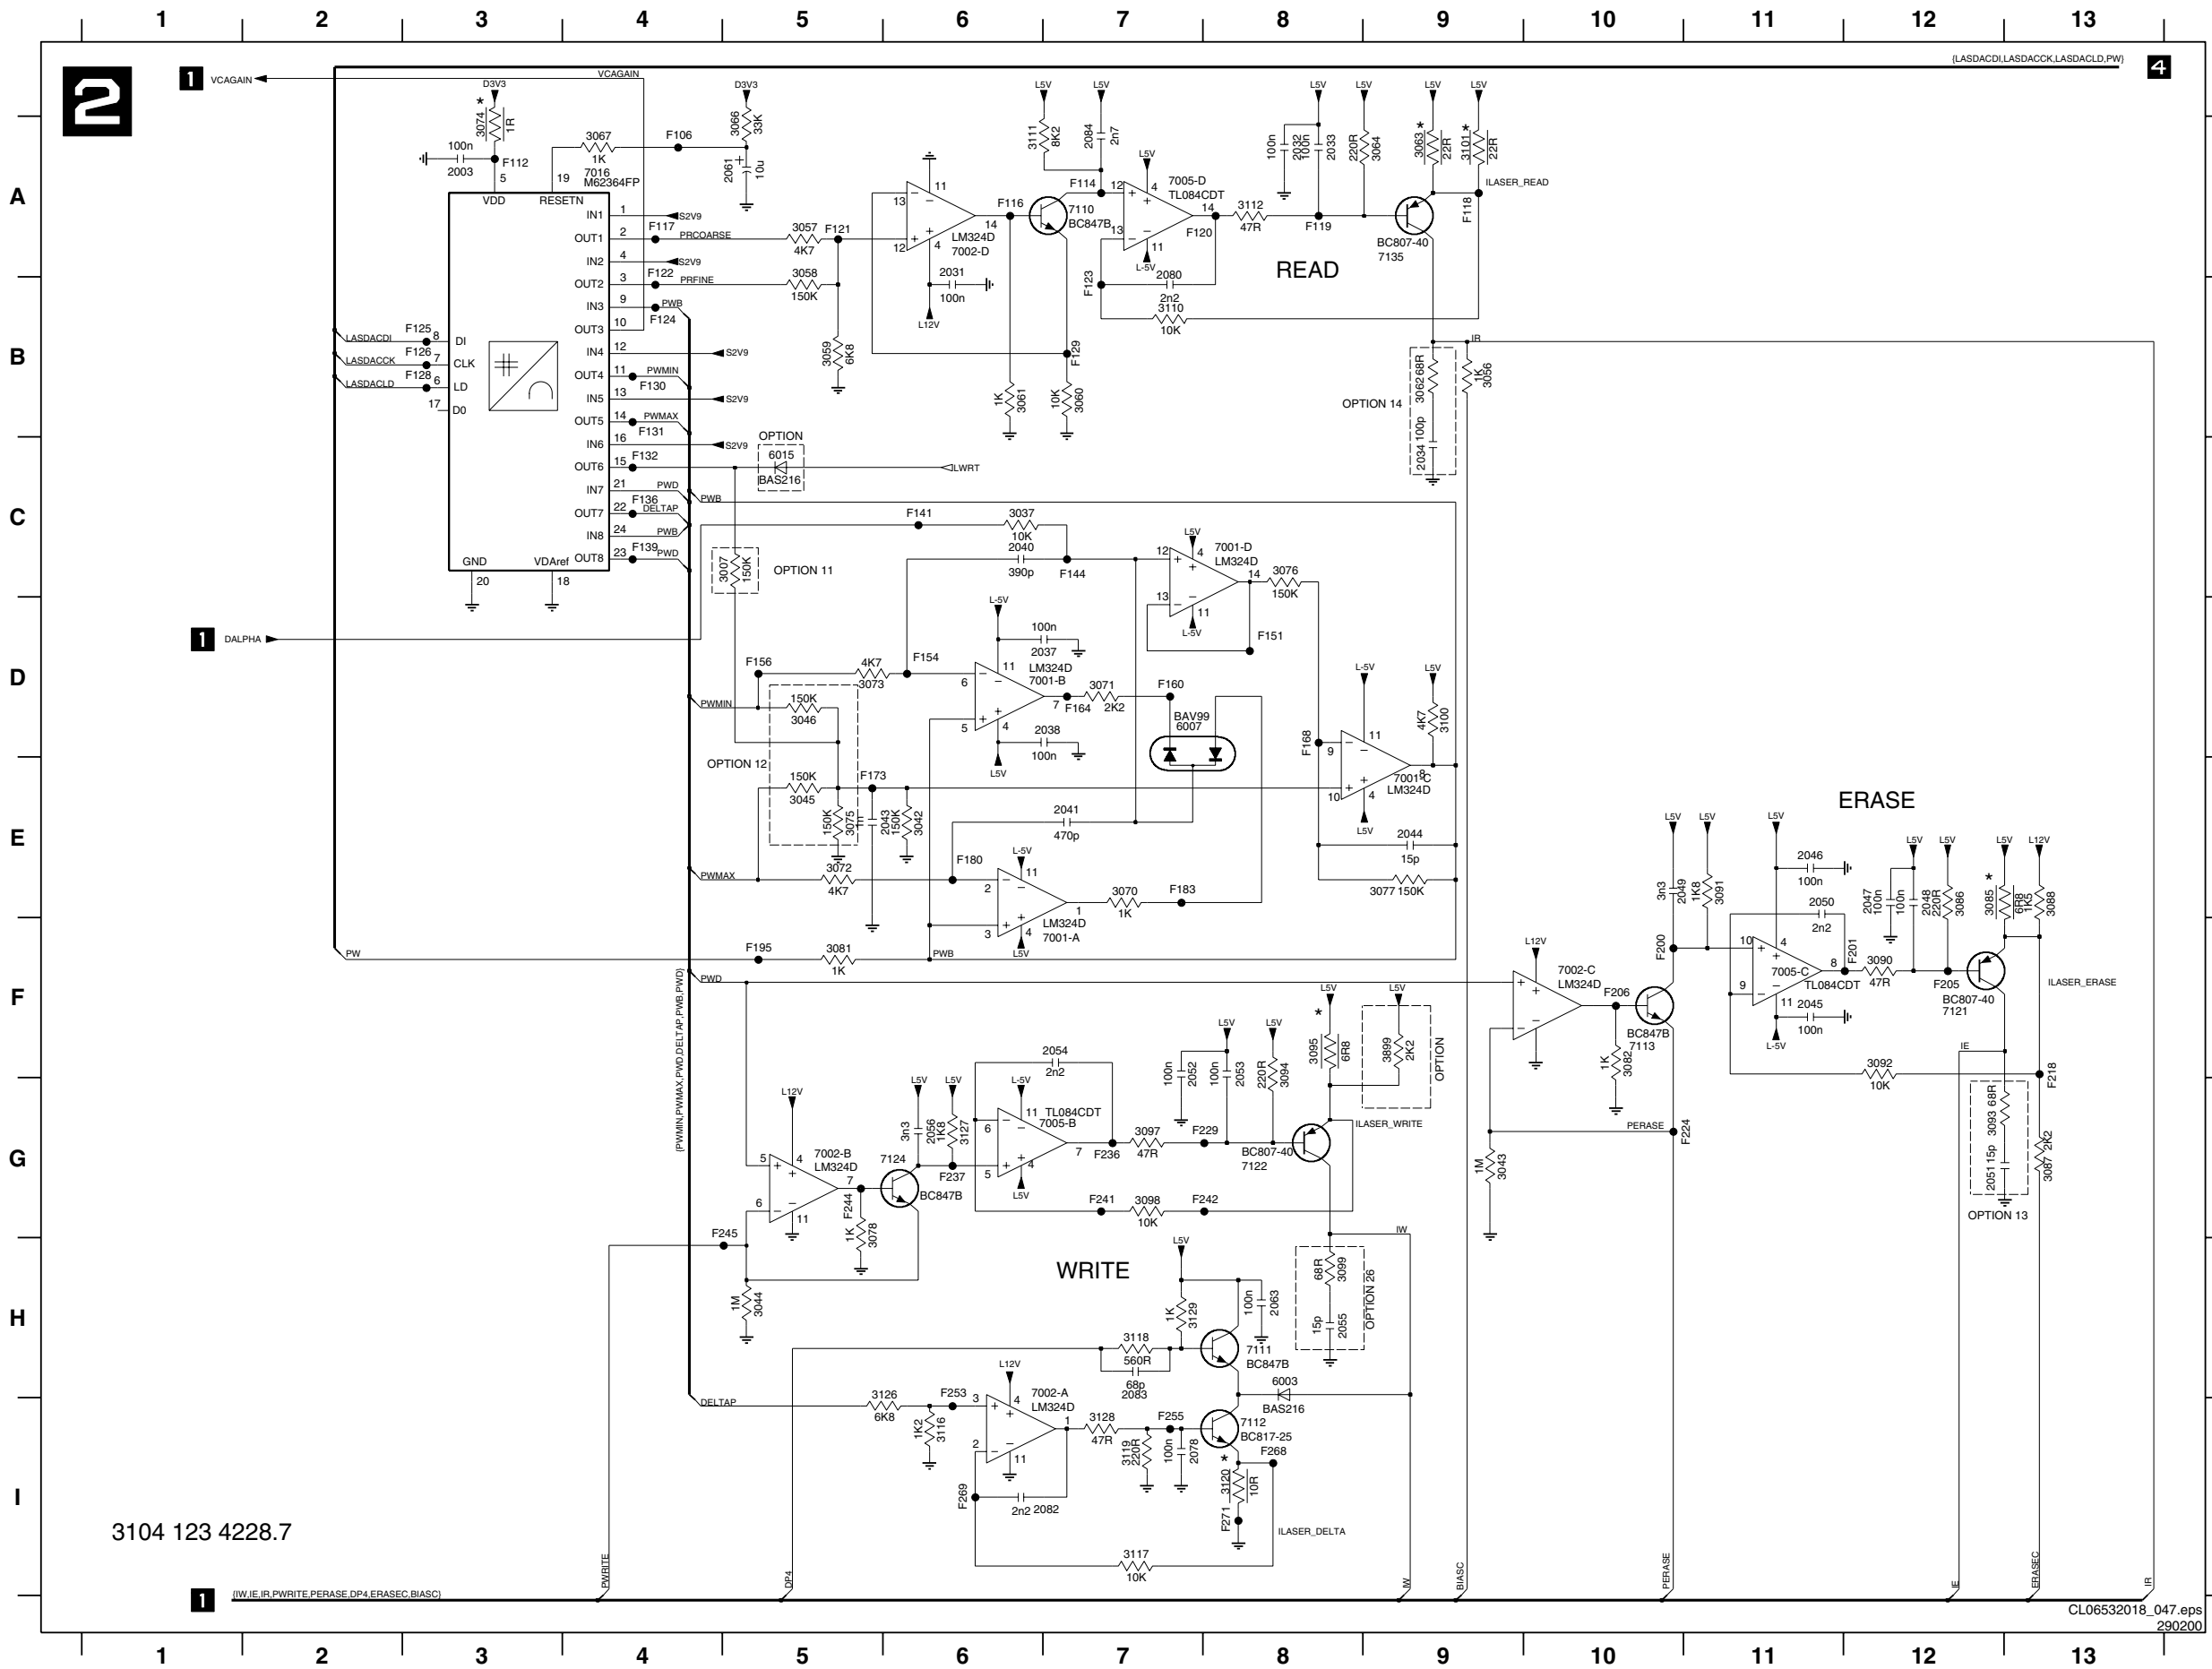


- | | |
|------------|----------|
| 2003 A3 | F121 A5 |
| 2031 A6 | F122 A4 |
| 2032 A8 | F123 B7 |
| 2033 A8 | F124 B4 |
| 2034 C9 | F125 B3 |
| 2037 D7 | F126 B3 |
| 2038 D7 | F128 B3 |
| 2040 C6 | F129 B7 |
| 2041 E7 | F130 B4 |
| 2043 E5 | F131 B4 |
| 2044 E9 | F132 C4 |
| 2045 F11 | F136 C4 |
| 2046 E11 | F139 C4 |
| 2047 E12 | F141 C6 |
| 2048 E12 | F144 C7 |
| 2049 E10 | F151 D8 |
| 2050 E11 | F154 D6 |
| 2051 G12 | F156 D5 |
| 2052 F7 | F160 D7 |
| 2053 F8 | F164 D7 |
| 2054 F7 | F168 D8 |
| 2055 H8 | F173 E5 |
| 2056 G6 | F180 E6 |
| 2061 A5 | F183 E7 |
| 2063 H8 | F195 F5 |
| 2078 I7 | F200 F10 |
| 2080 B7 | F201 F12 |
| 2082 I7 | F205 F12 |
| 2083 I7 | F206 F10 |
| 2084 A7 | F218 F13 |
| 3007 C5 | F224 G10 |
| 3037 C6 | F229 G8 |
| 3042 E6 | F236 G7 |
| 3043 G9 | F237 G6 |
| 3044 H5 | F241 G7 |
| 3045 E5 | F242 G8 |
| 3046 D5 | F244 G5 |
| 3056 B9 | F245 G5 |
| 3057 A5 | F253 H6 |
| 3058 B5 | F255 I7 |
| 3059 B5 | F268 I8 |
| 3060 B7 | F269 I6 |
| 3061 B6 | F271 I8 |
| 3062 B9 | |
| 3063 A9 | |
| 3064 A9 | |
| 3066 A5 | |
| 3067 A4 | |
| 3070 E7 | |
| 3071 D7 | |
| 3072 E5 | |
| 3073 D5 | |
| 3074 A3 | |
| 3075 E5 | |
| 3076 C8 | |
| 3077 E9 | |
| 3078 G5 | |
| 3081 F5 | |
| 3082 F10 | |
| 3085 E12 | |
| 3086 E12 | |
| 3087 G13 | |
| 3088 E13 | |
| 3090 F12 | |
| 3091 E11 | |
| 3092 F12 | |
| 3093 G12 | |
| 3094 F8 | |
| 3095 F8 | |
| 3097 G7 | |
| 3098 G7 | |
| 3099 H6 | |
| 3100 D9 | |
| 3101 A9 | |
| 3110 B7 | |
| 3111 A6 | |
| 3112 A8 | |
| 3116 I6 | |
| 3117 I7 | |
| 3118 H7 | |
| 3119 I7 | |
| 3120 I8 | |
| 3126 I6 | |
| 3127 G6 | |
| 3128 I7 | |
| 3129 H7 | |
| 3899 F9 | |
| 6003 H8 | |
| 6007 D7 | |
| 6015 C5 | |
| 7001-A F7 | |
| 7001-B D6 | |
| 7001-C E9 | |
| 7001-D C8 | |
| 7002-A H6 | |
| 7002-B G5 | |
| 7002-C F10 | |
| 7002-D A6 | |
| 7005-B G6 | |
| 7005-C F11 | |
| 7005-D A7 | |
| 7016 A4 | |
| 7110 A7 | |
| 7111 H8 | |
| 7112 I8 | |
| 7113 F10 | |
| 7121 F12 | |
| 7122 G8 | |
| 7124 G5 | |
| 7135 A9 | |
| F106 A4 | |
| F112 A3 | |
| F114 A7 | |
| F116 A6 | |
| F117 A4 | |
| F118 A9 | |
| F119 A8 | |
| F120 A7 | |

3104 123 4228.7

(I/I, I/E, I/R, P/WRITE, PERASE, DP4, ERASE, BIASC)


CL06532018_047.eps
290200

CDR MAIN BOARD - CIRCUIT DIAGRAM 3 : SERVO DRIVERS, MACE-RAM, -FLASH, -DEMUX TEST POINTS

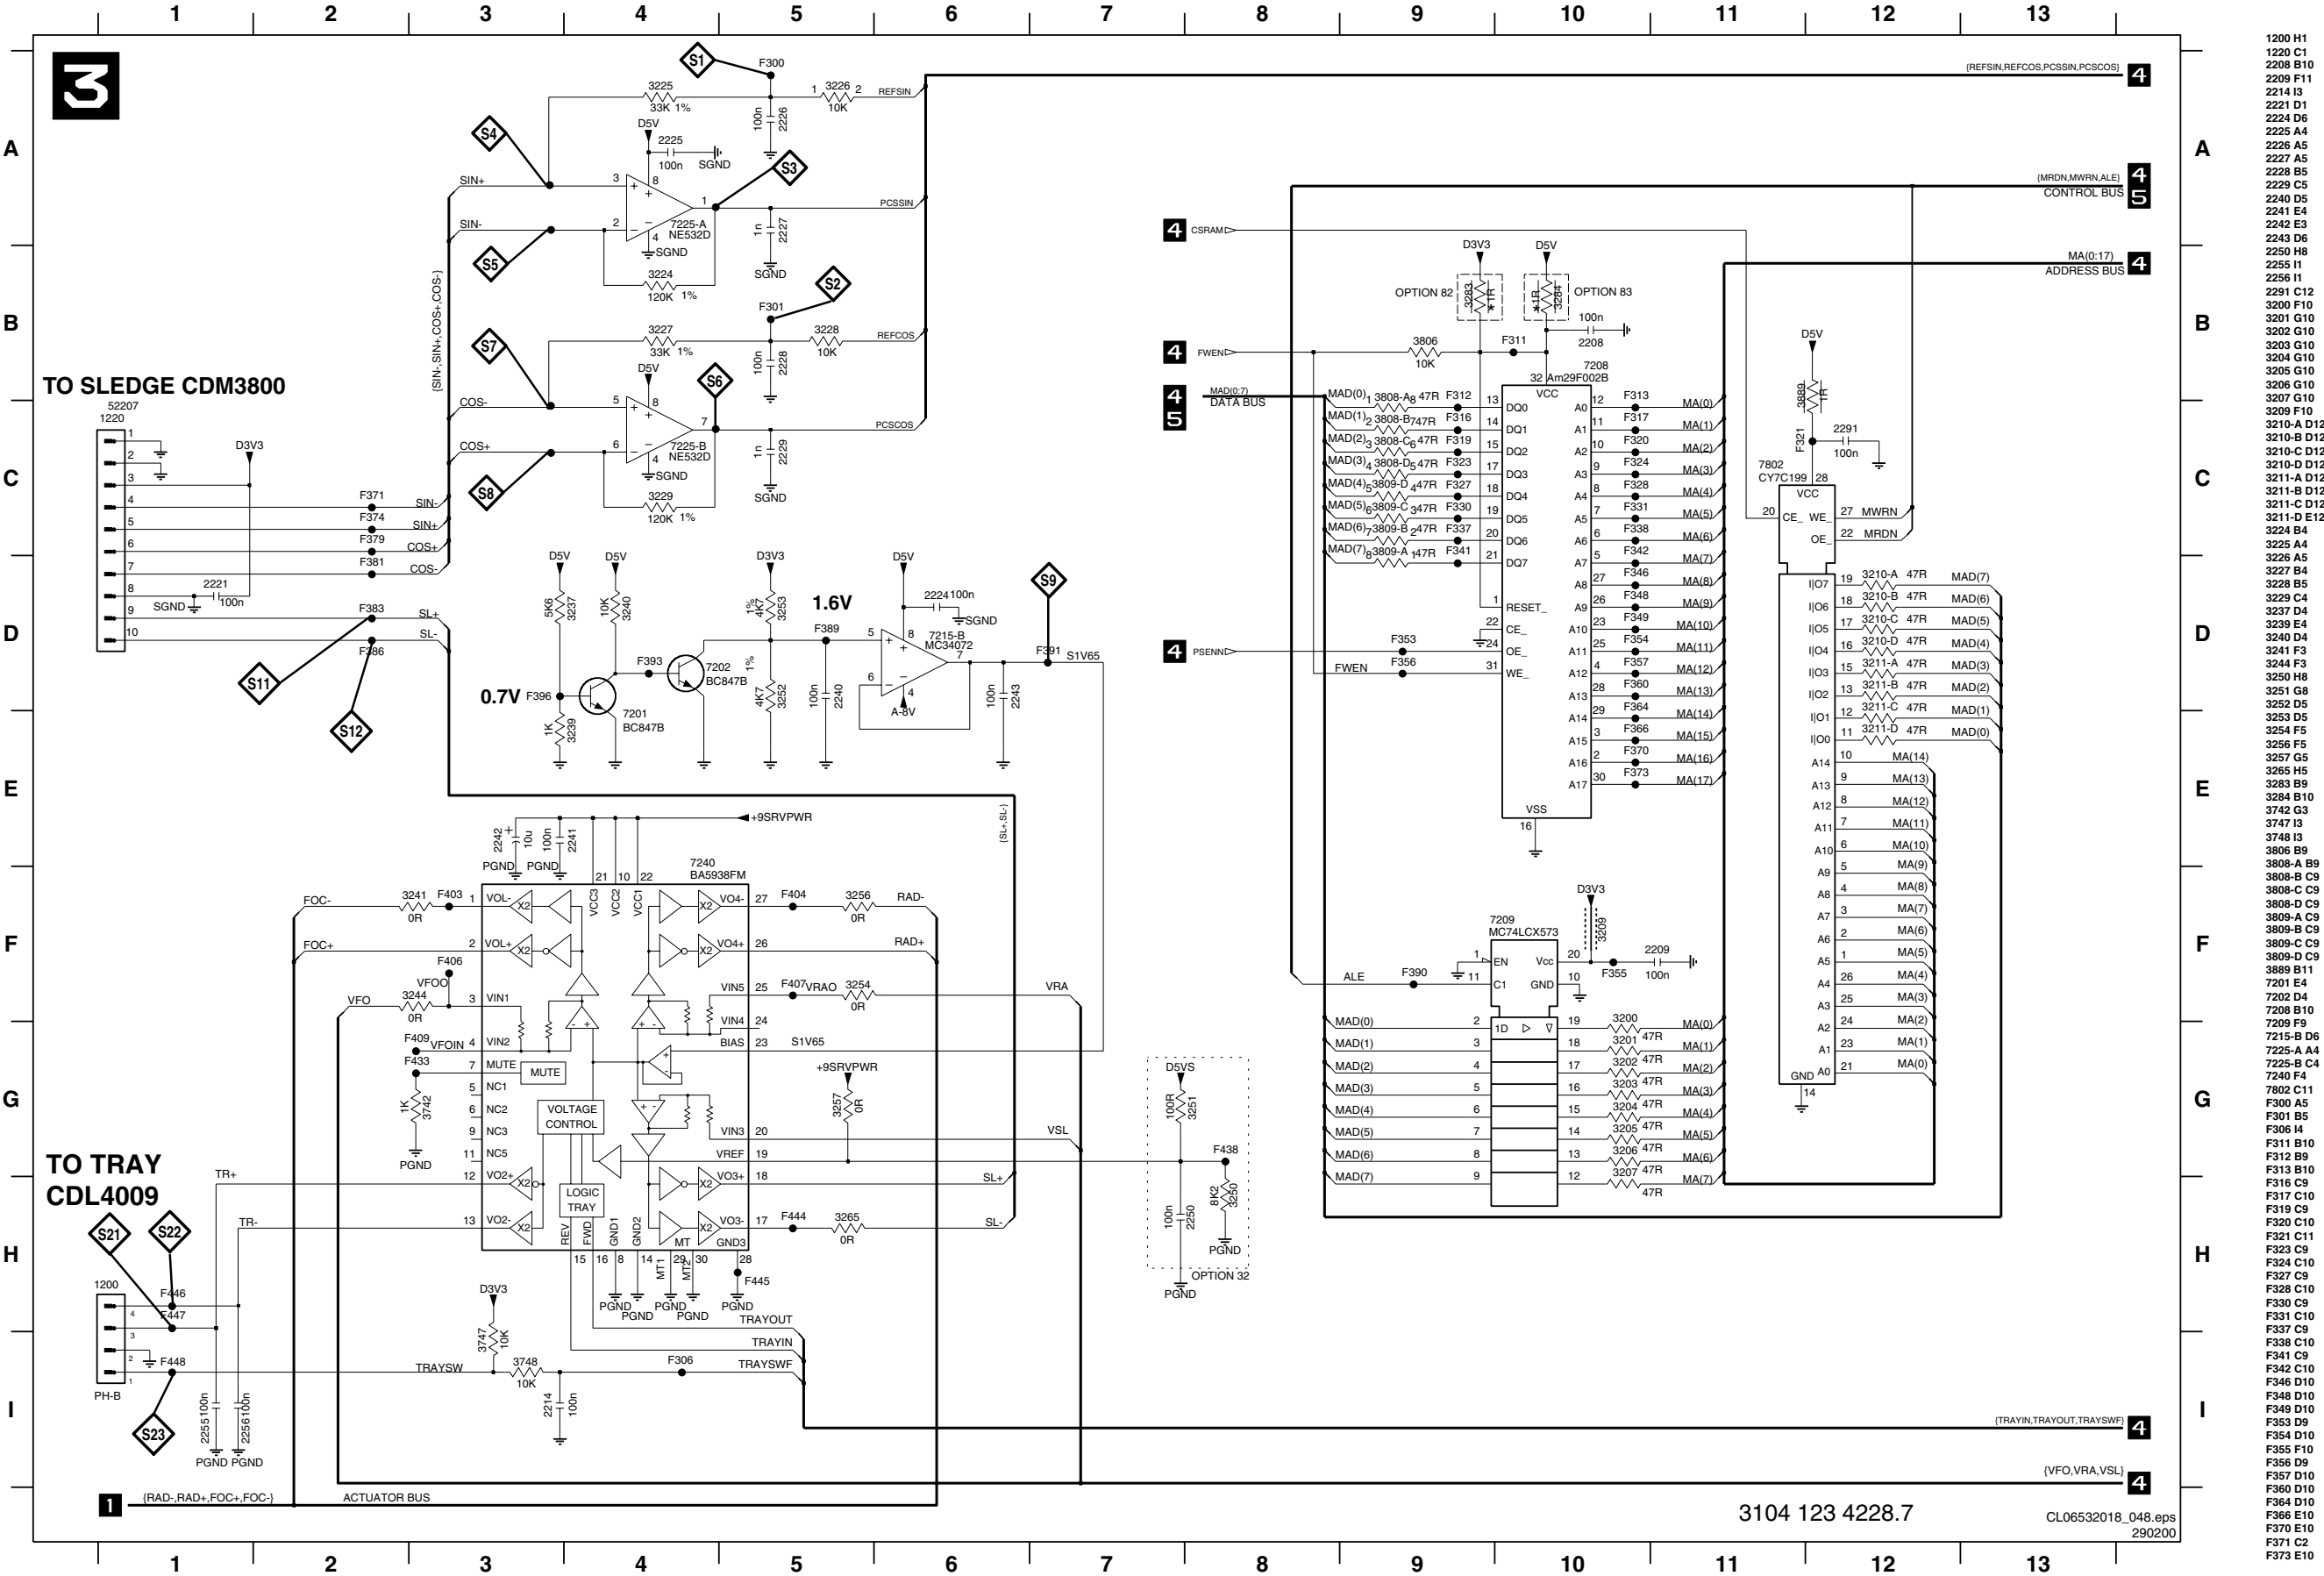


- 1200 H1
- 1220 C1
- 2208 B10
- 2209 F11
- 2214 I3
- 2221 D1
- 2224 D6
- 2225 A4
- 2226 A5
- 2227 A5
- 2228 B5
- 2229 C5
- 2240 D5
- 2241 E4
- 2242 E3
- 2243 D6
- 2250 H8
- 2255 I1
- 2256 I1
- 2291 C12
- 3200 F10
- 3201 G10
- 3202 G10
- 3203 G10
- 3204 G10
- 3205 G10
- 3206 G10
- 3207 G10
- 3209 F10
- 3210-A D12
- 3210-B D12
- 3210-C D12
- 3210-D D12
- 3211-A D12
- 3211-B D12
- 3211-C D12
- 3211-D E12
- 3224 B4
- 3225 A4
- 3227 B4
- 3228 B5
- 3229 C4
- 3237 D4
- 3239 E4
- 3240 D4
- 3241 F3
- 3244 F3
- 3250 H8
- 3251 G8
- 3252 D5
- 3253 D5
- 3254 F5
- 3255 F5
- 3257 G5
- 3265 H5
- 3283 B9
- 3284 B10
- 3742 G3
- 3747 I3
- 3748 I3
- 3806 B9
- 3808-A B9
- 3808-B C9
- 3808-C C9
- 3808-D C9
- 3809-A C9
- 3809-B C9
- 3809-C C9
- 3809-D C9
- 3889 B11
- 7201 E4
- 7202 D4
- 7208 B10
- 7209 F9
- 7215-B D6
- 7225-A A4
- 7225-B C4
- 7240 F4
- 7802 C11
- F300 A5
- F301 B5
- F306 I4
- F311 B10
- F312 B9
- F313 B10
- F316 C9
- F317 C10
- F319 C9
- F320 C10
- F321 C11
- F323 C9
- F324 C10
- F327 C9
- F328 C10
- F330 C9
- F331 C10
- F337 C9
- F338 C10
- F341 C9
- F342 C10
- F346 D10
- F348 D10
- F349 D10
- F353 D9
- F354 D10
- F355 F10
- F356 D9
- F357 D10
- F360 D10
- F364 D10
- F366 E10
- F370 E10
- F371 C2
- F373 E10
- F374 C2
- F379 C2
- F381 D2
- F383 D2
- F386 D2
- F389 D5
- F390 F9
- F391 D7
- F393 D4
- F396 D3
- F403 F3
- F404 F5
- F406 F3
- F407 F5
- F409 G3
- F433 G3
- F438 G8
- F444 H5
- F445 H5
- F446 H1
- F447 H1
- F448 I1

CDR MAIN BOARD - CIRCUIT DIAGRAM 4 : MACE BE-PROCESSOR TESTPOINTS

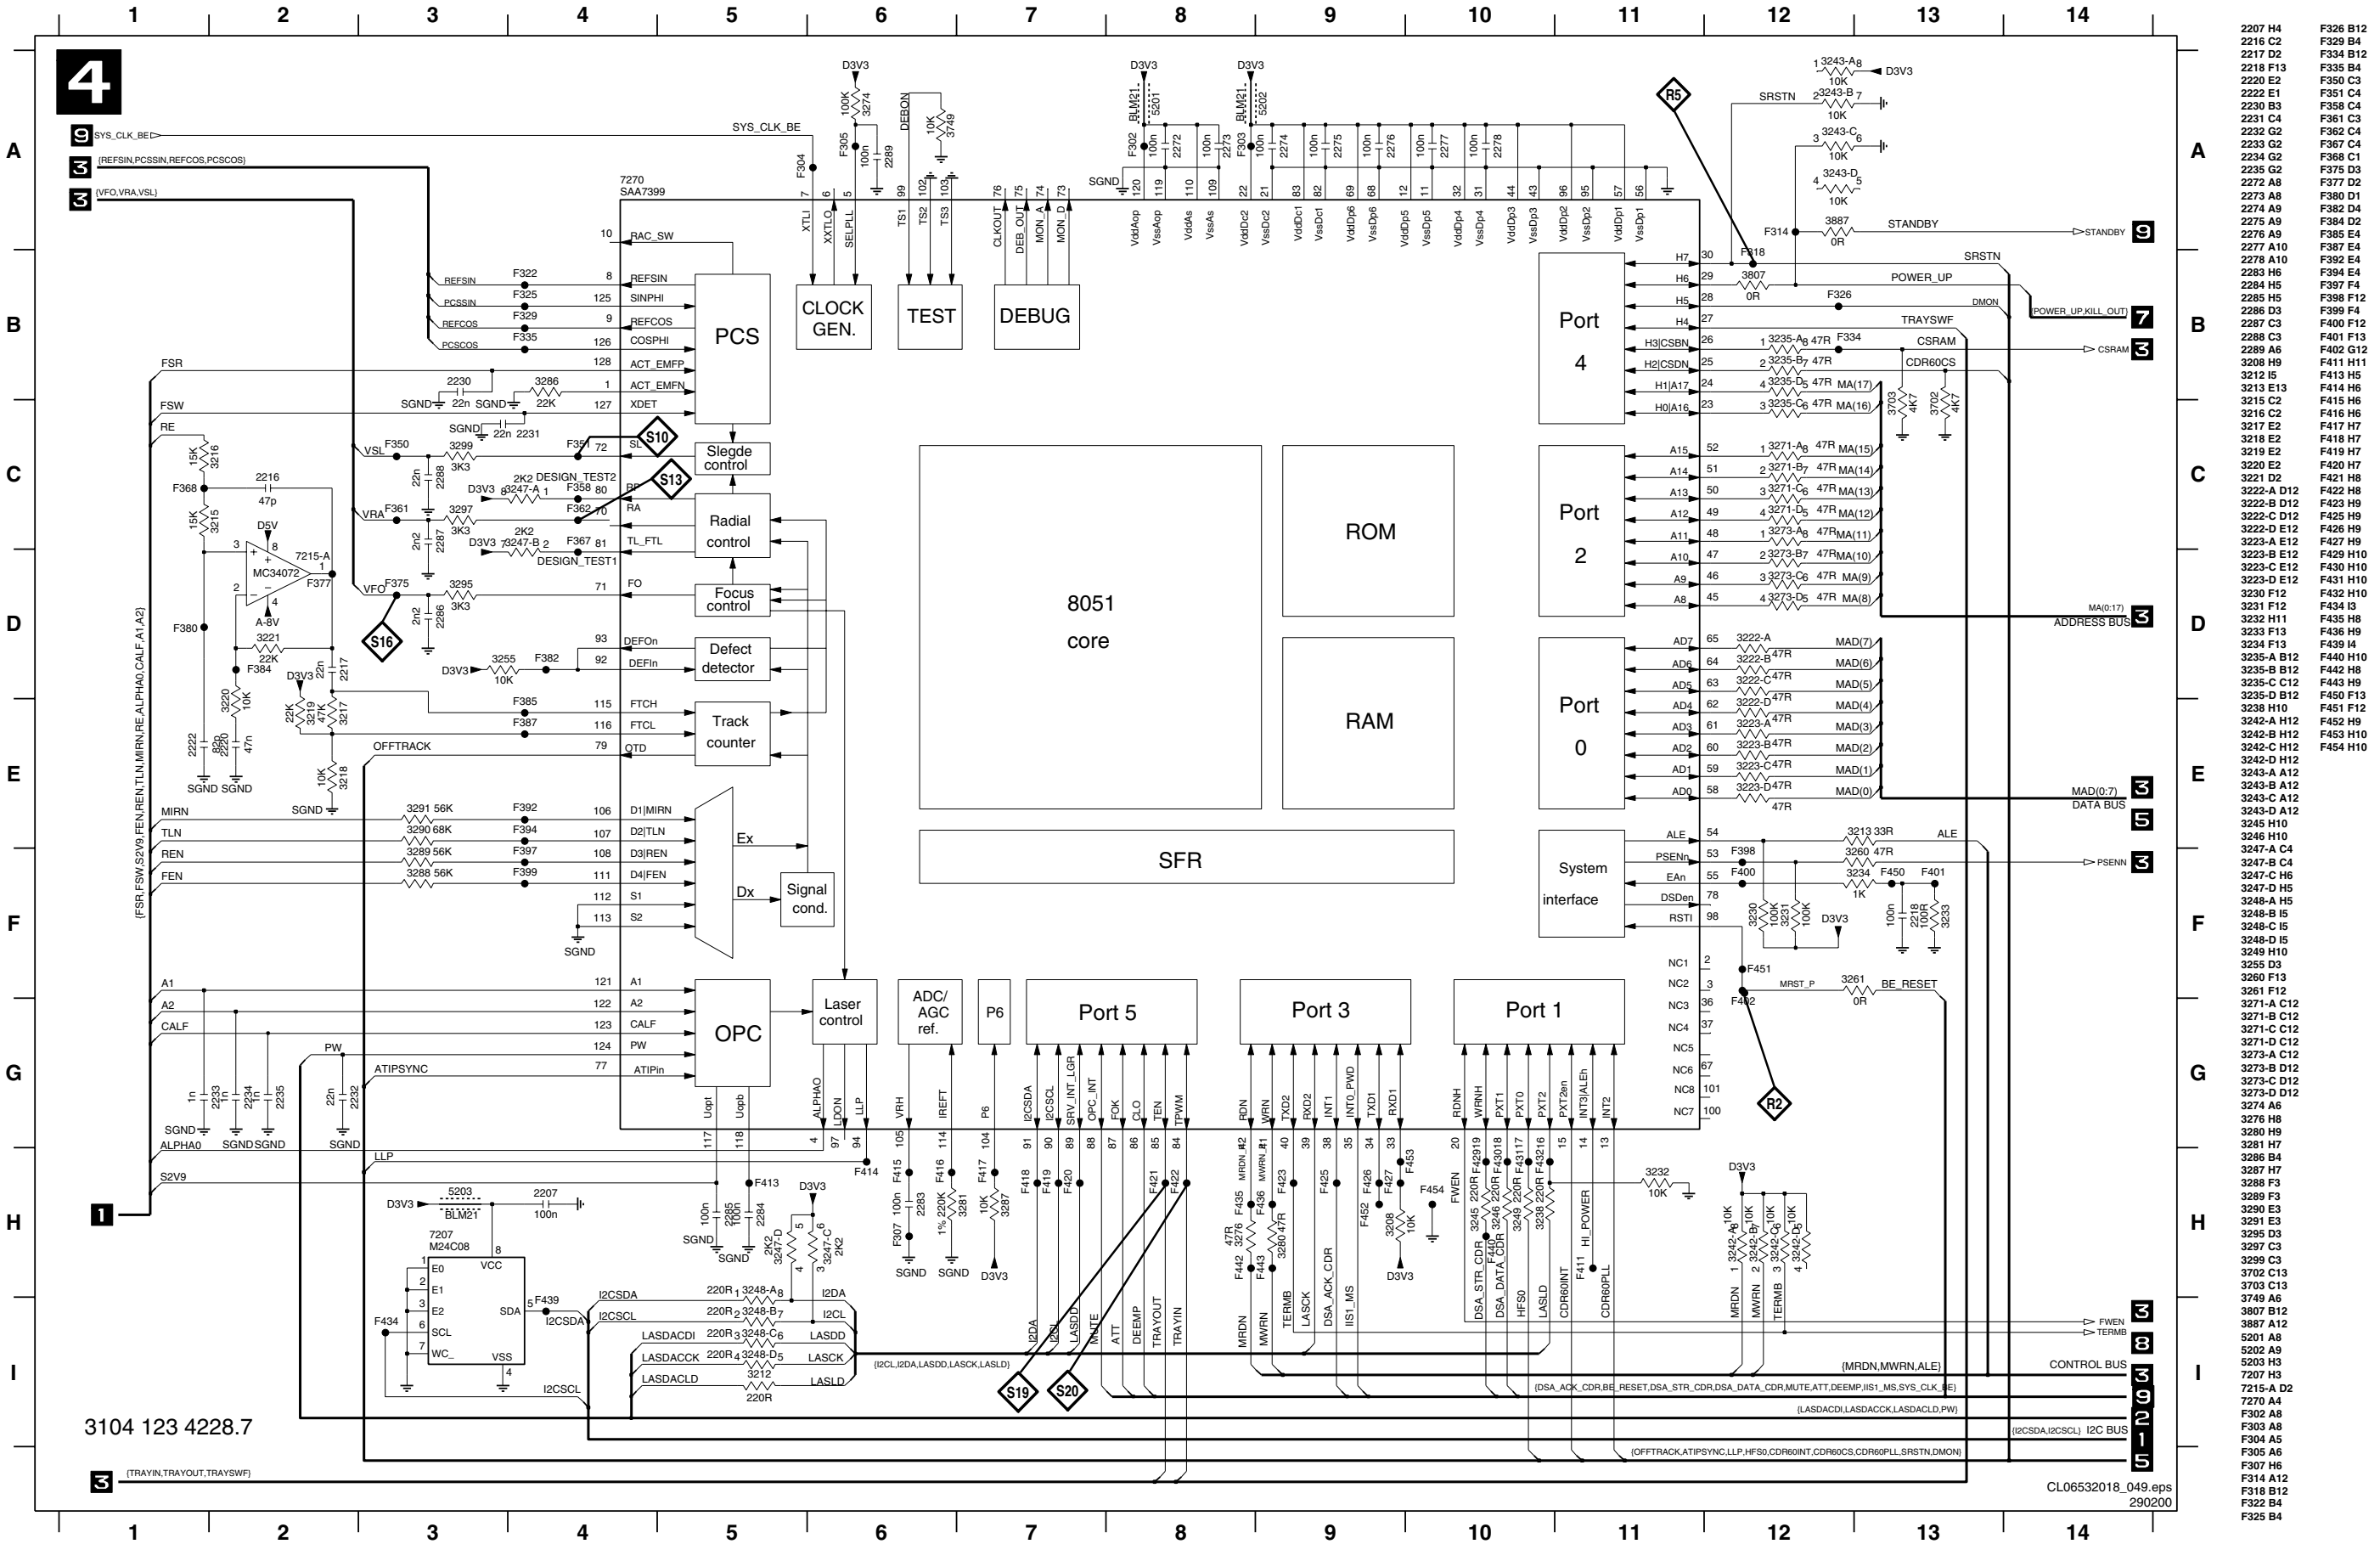



1330-1 F	5303 B10
1330-10 H1	6373 C2
1330-11 E1	6374 C2
1330-2 F1	6375 C2
1330-3 F1	7300 C8
1330-4 G1	7330 E2
1330-5 G1	7355-A H8
1330-6 F1	7355-B H7
1330-7 H1	7360 B5
1330-8 G1	7361 C5
1330-9 H1	7370 B3
2300 B10	7371 B3
2302 B10	7373 B2
2303 C10	7375 B1
2304 C11	7303 F5
2305 C11	7804 F5
2306 C12	7805 A3
2307 A4	7805 C3
2309 B4	7802 B5
2310 B4	7803 B4
2314 F7	7804 B2
2315 E7	7805 B2
2316 E7	7806 B3
2317 E7	7807 B3
2318 D7	7808 B5
2319 D7	7809 B2
2321 D7	7810 B3
2321 D7	7811 C1
2322 E7	7812 D3
2330 F2	7813 C5
2331 F2	7814 B10
2332 F2	7815 B11
2333 E4	7816 D6
2335 H5	7817 C5
2336 H5	7818 C5
2337 I5	7819 C9
2355 H8	7820 C8
2359 D7	7821 C8
2360 B5	7822 A4
2362 D6	7823 C4
2364 C7	7824 C7
2368 B4	7825 F7
2369 B4	7826 H13
2371 A3	7827 D8
2372 C2	7828 D3
2373 A1	7829 D8
2374 C1	7830 D3
2375 C2	7831 D8
2378 B1	7832 D3
2379 C14	7833 D3
2903 H13	7834 C3
2908 H13	7835 E13
3000 C9	7842 E8
3001 C9	7843 E13
3002 A2	7844 E7
3003 A4	7845 E8
3004 H1	7846 E13
3005 G10	7847 E1
3008 H9	7848 E3
3009 C7	7849 E5
3112 E7	7850 E13
3113 D7	7851 E8
3114 D14	7852 D3
3115 E7	7853 F8
3116 H12	7854 F13
3117 H12	7855 E4
3119 E4	7856 F1
3121 F5	7857 F8
3122 F5	7858 F1
3124 G6	7859 F2
3125 G6	7860 F8
3330 F1	7861 H5
3331 F1	7862 F1
3332 F1	7863 G1
3333 F5	7864 G5
3334 E5	7865 G1
3335 E5	7866 G4
3336 E5	7867 G4
3337 H5	7868 G9
3338 I5	7869 G8
3339 F5	7870 G1
3440 I4	7871 G8
3441 H1	7872 G1
3446 H2	7873 G4
3447 H2	7874 G8
3448 H2	7875 H2
3449 H5	7876 H2
3500 E2	7877 G9
3501 E4	7878 G9
3502 H5	7879 G10
3503 H5	7880 G11
3504 F5	7881 G11
3505 D6	7882 G11
3506 D6	7883 H12
3507 D6	7884 H12
3508 D6	7885 H12
3509 D6	7886 H11
3510 D6	7887 H12
3511 D6	7888 H12
3512 D6	7889 H12
3513 D6	7890 H11
3514 D6	7891 G12
3515 D6	7892 G10
3516 D6	7893 G11
3517 D6	7894 G11
3518 D6	7895 G11
3519 D6	7896 G12
3520 D6	7897 G12
3521 D6	7898 H3
3522 D6	7899 H7
3523 D6	7900 H8
3524 D6	7901 H8
3525 D6	7902 H14
3526 D6	
3527 D6	
3528 D6	
3529 D6	
3530 D6	
3531 D6	
3532 D6	
3533 D6	
3534 D6	
3535 D6	
3536 D6	
3537 D6	
3538 D6	
3539 D6	
3540 D6	
3541 D6	
3542 D6	
3543 D6	
3544 D6	
3545 D6	
3546 D6	
3547 D6	
3548 D6	
3549 D6	
3550 D6	
3551 D6	
3552 D6	
3553 D6	
3554 D6	
3555 D6	
3556 D6	
3557 D6	
3558 D6	
3559 D6	
3560 D6	
3561 D6	
3562 D6	
3563 D6	
3564 D6	
3565 D6	
3566 D6	
3567 D6	
3568 D6	
3569 D6	
3570 D6	
3571 D6	
3572 D6	
3573 D6	
3574 D6	
3575 D6	
3576 D6	
3577 D6	
3578 D6	
3579 D6	
3580 D6	
3581 D6	
3582 D6	
35	

CDR MAIN BOARD - CIRCUIT DIAGRAM 6 : AUDIO PART (NOT FOR CDR950/951)

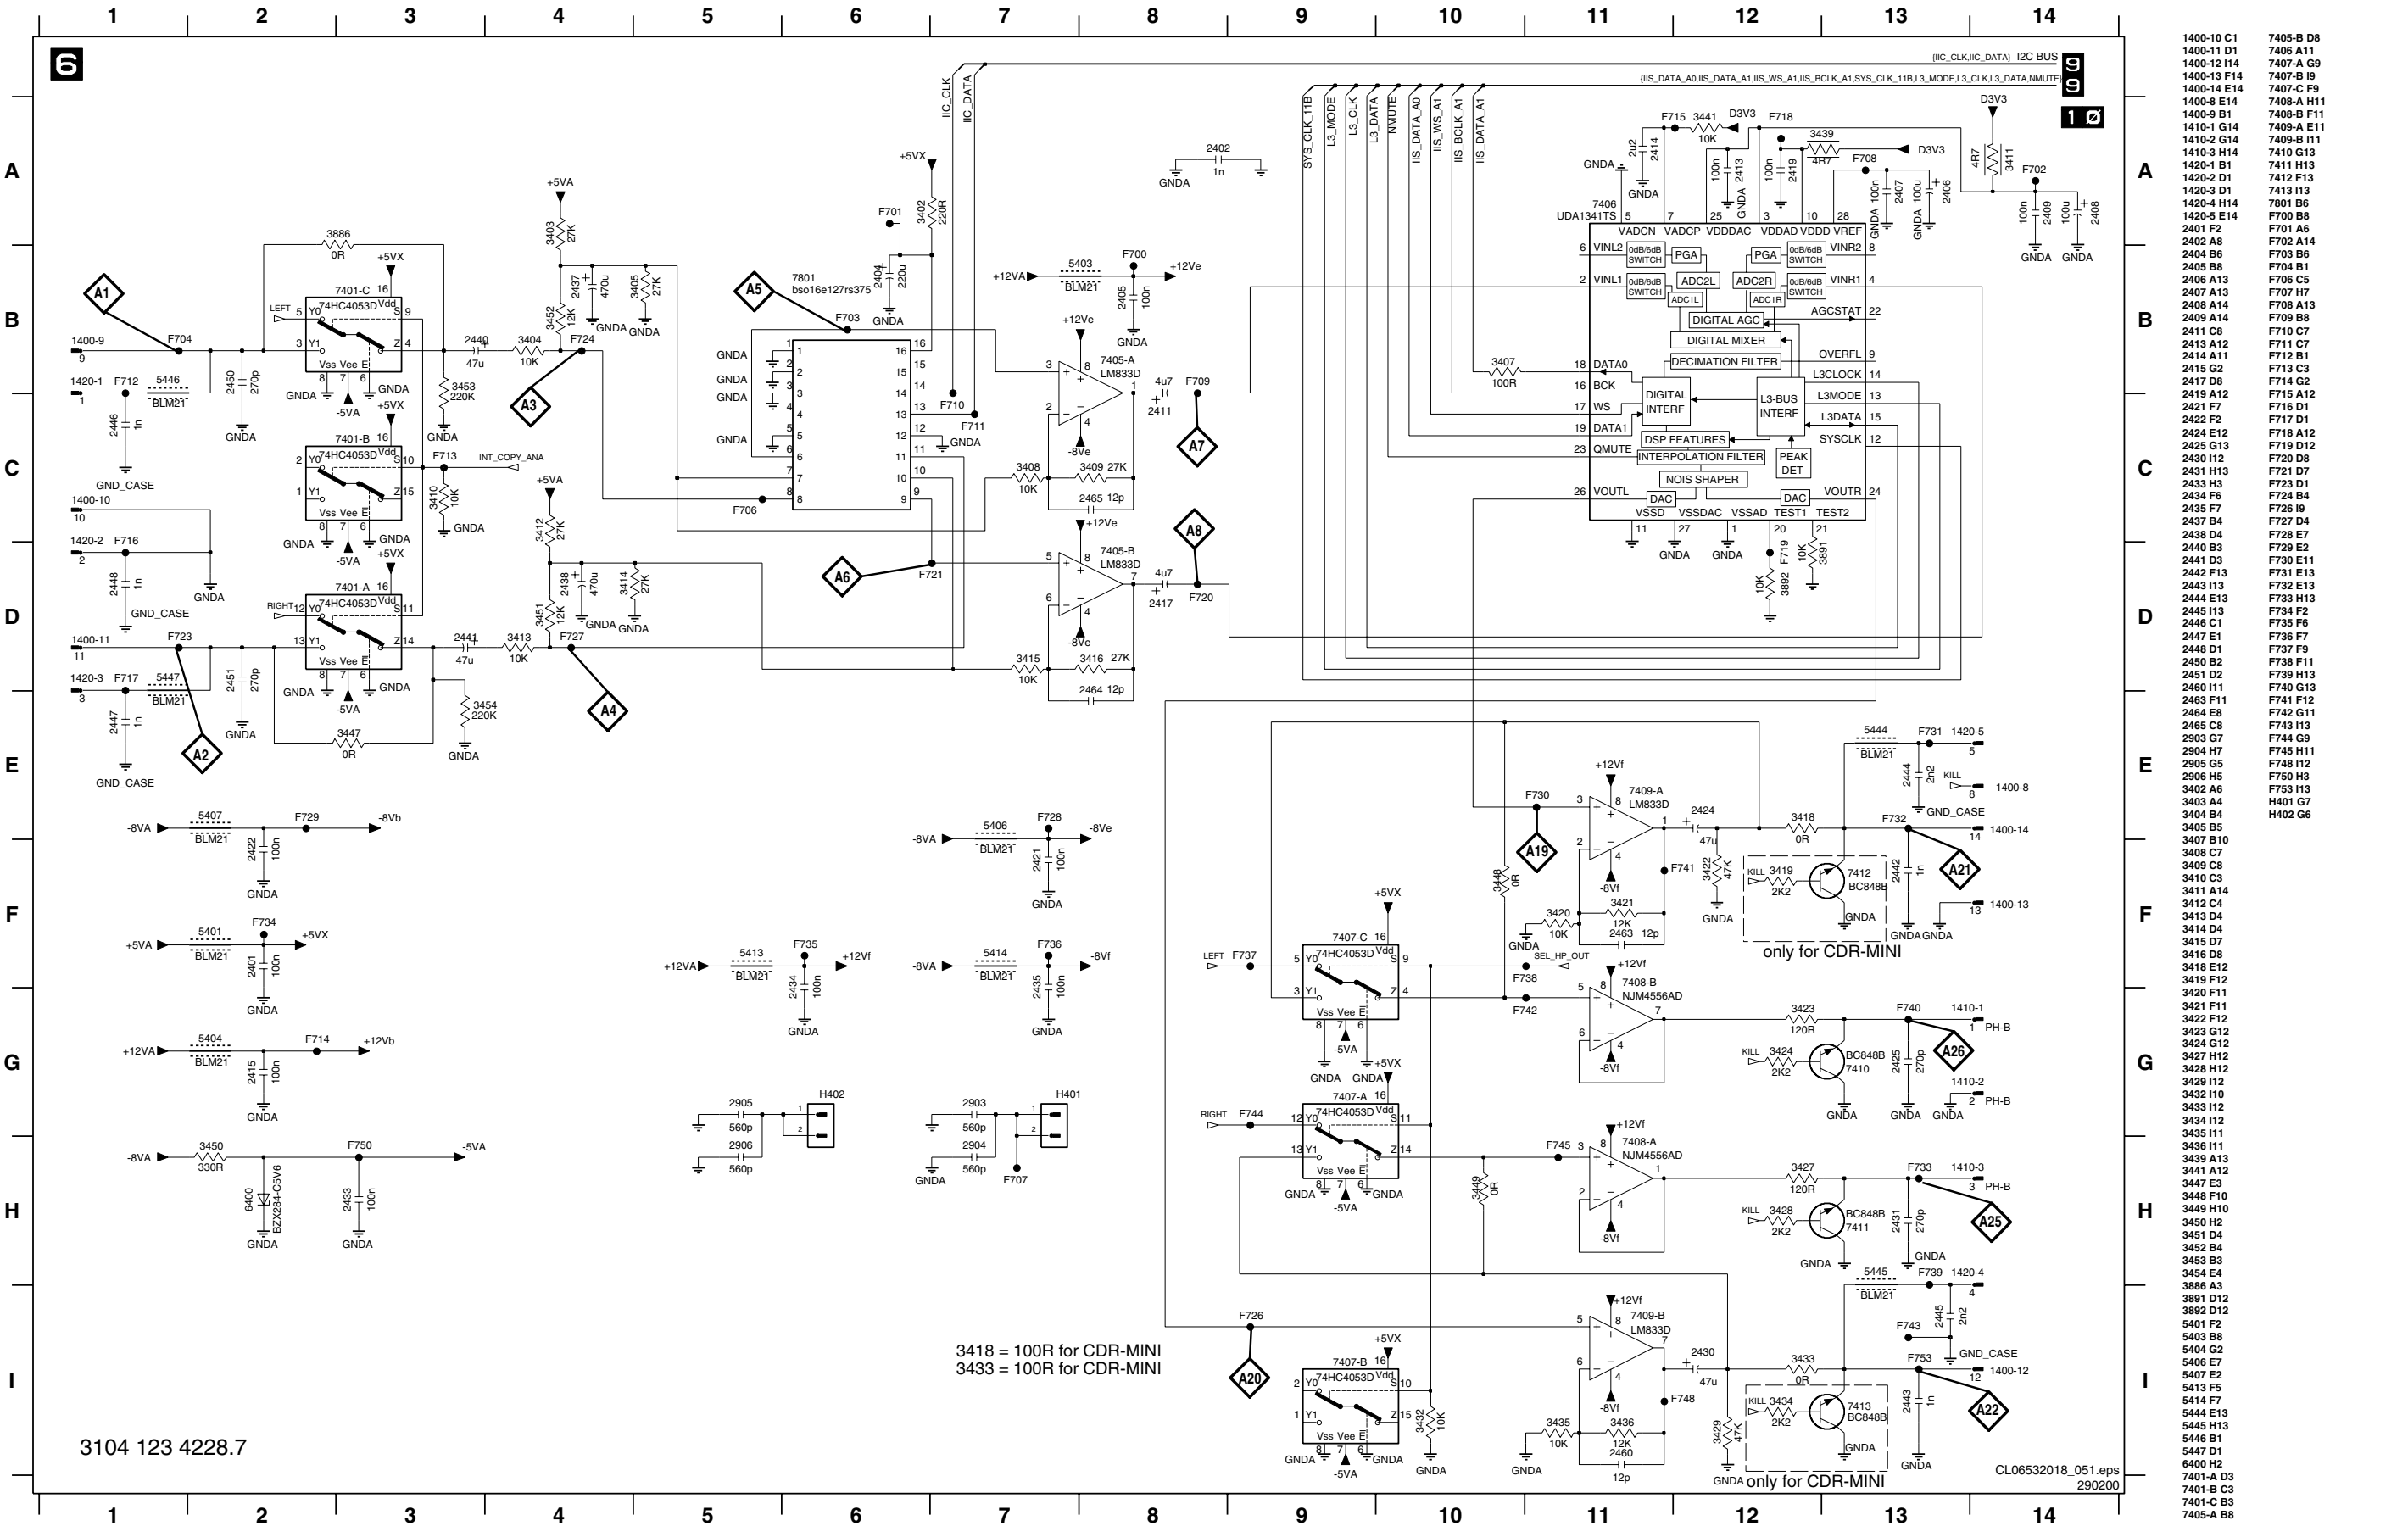


7 POWER PART

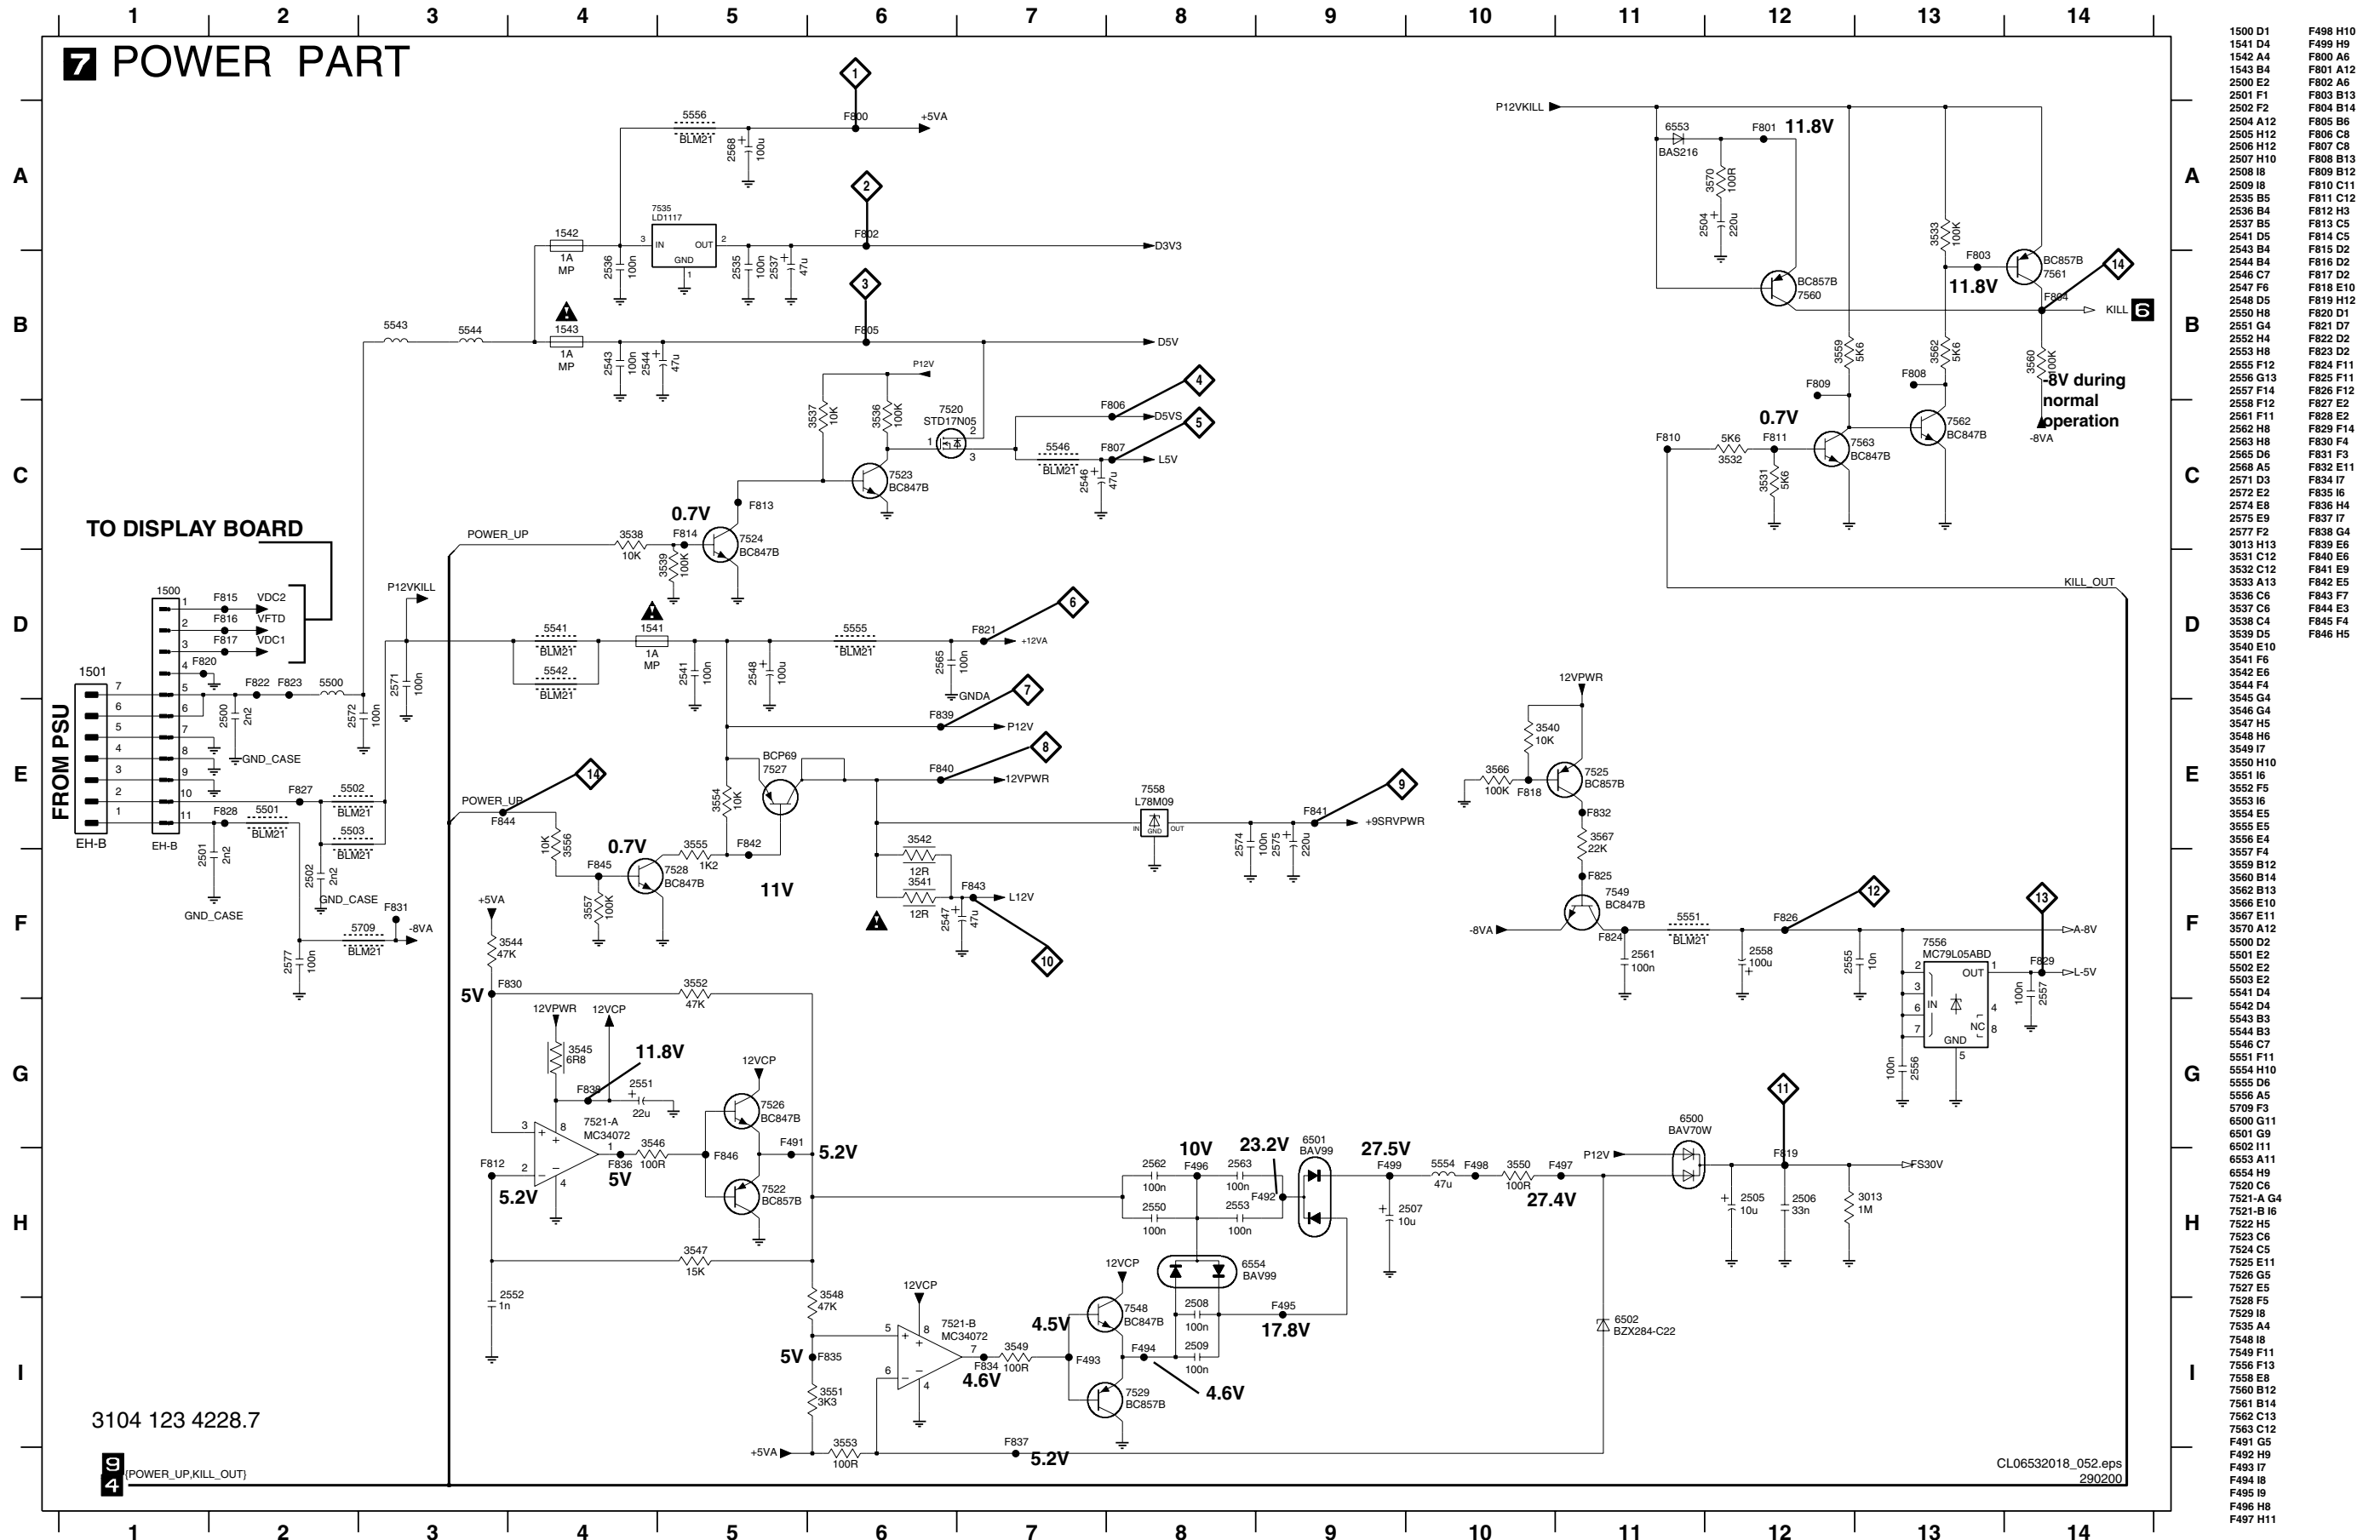

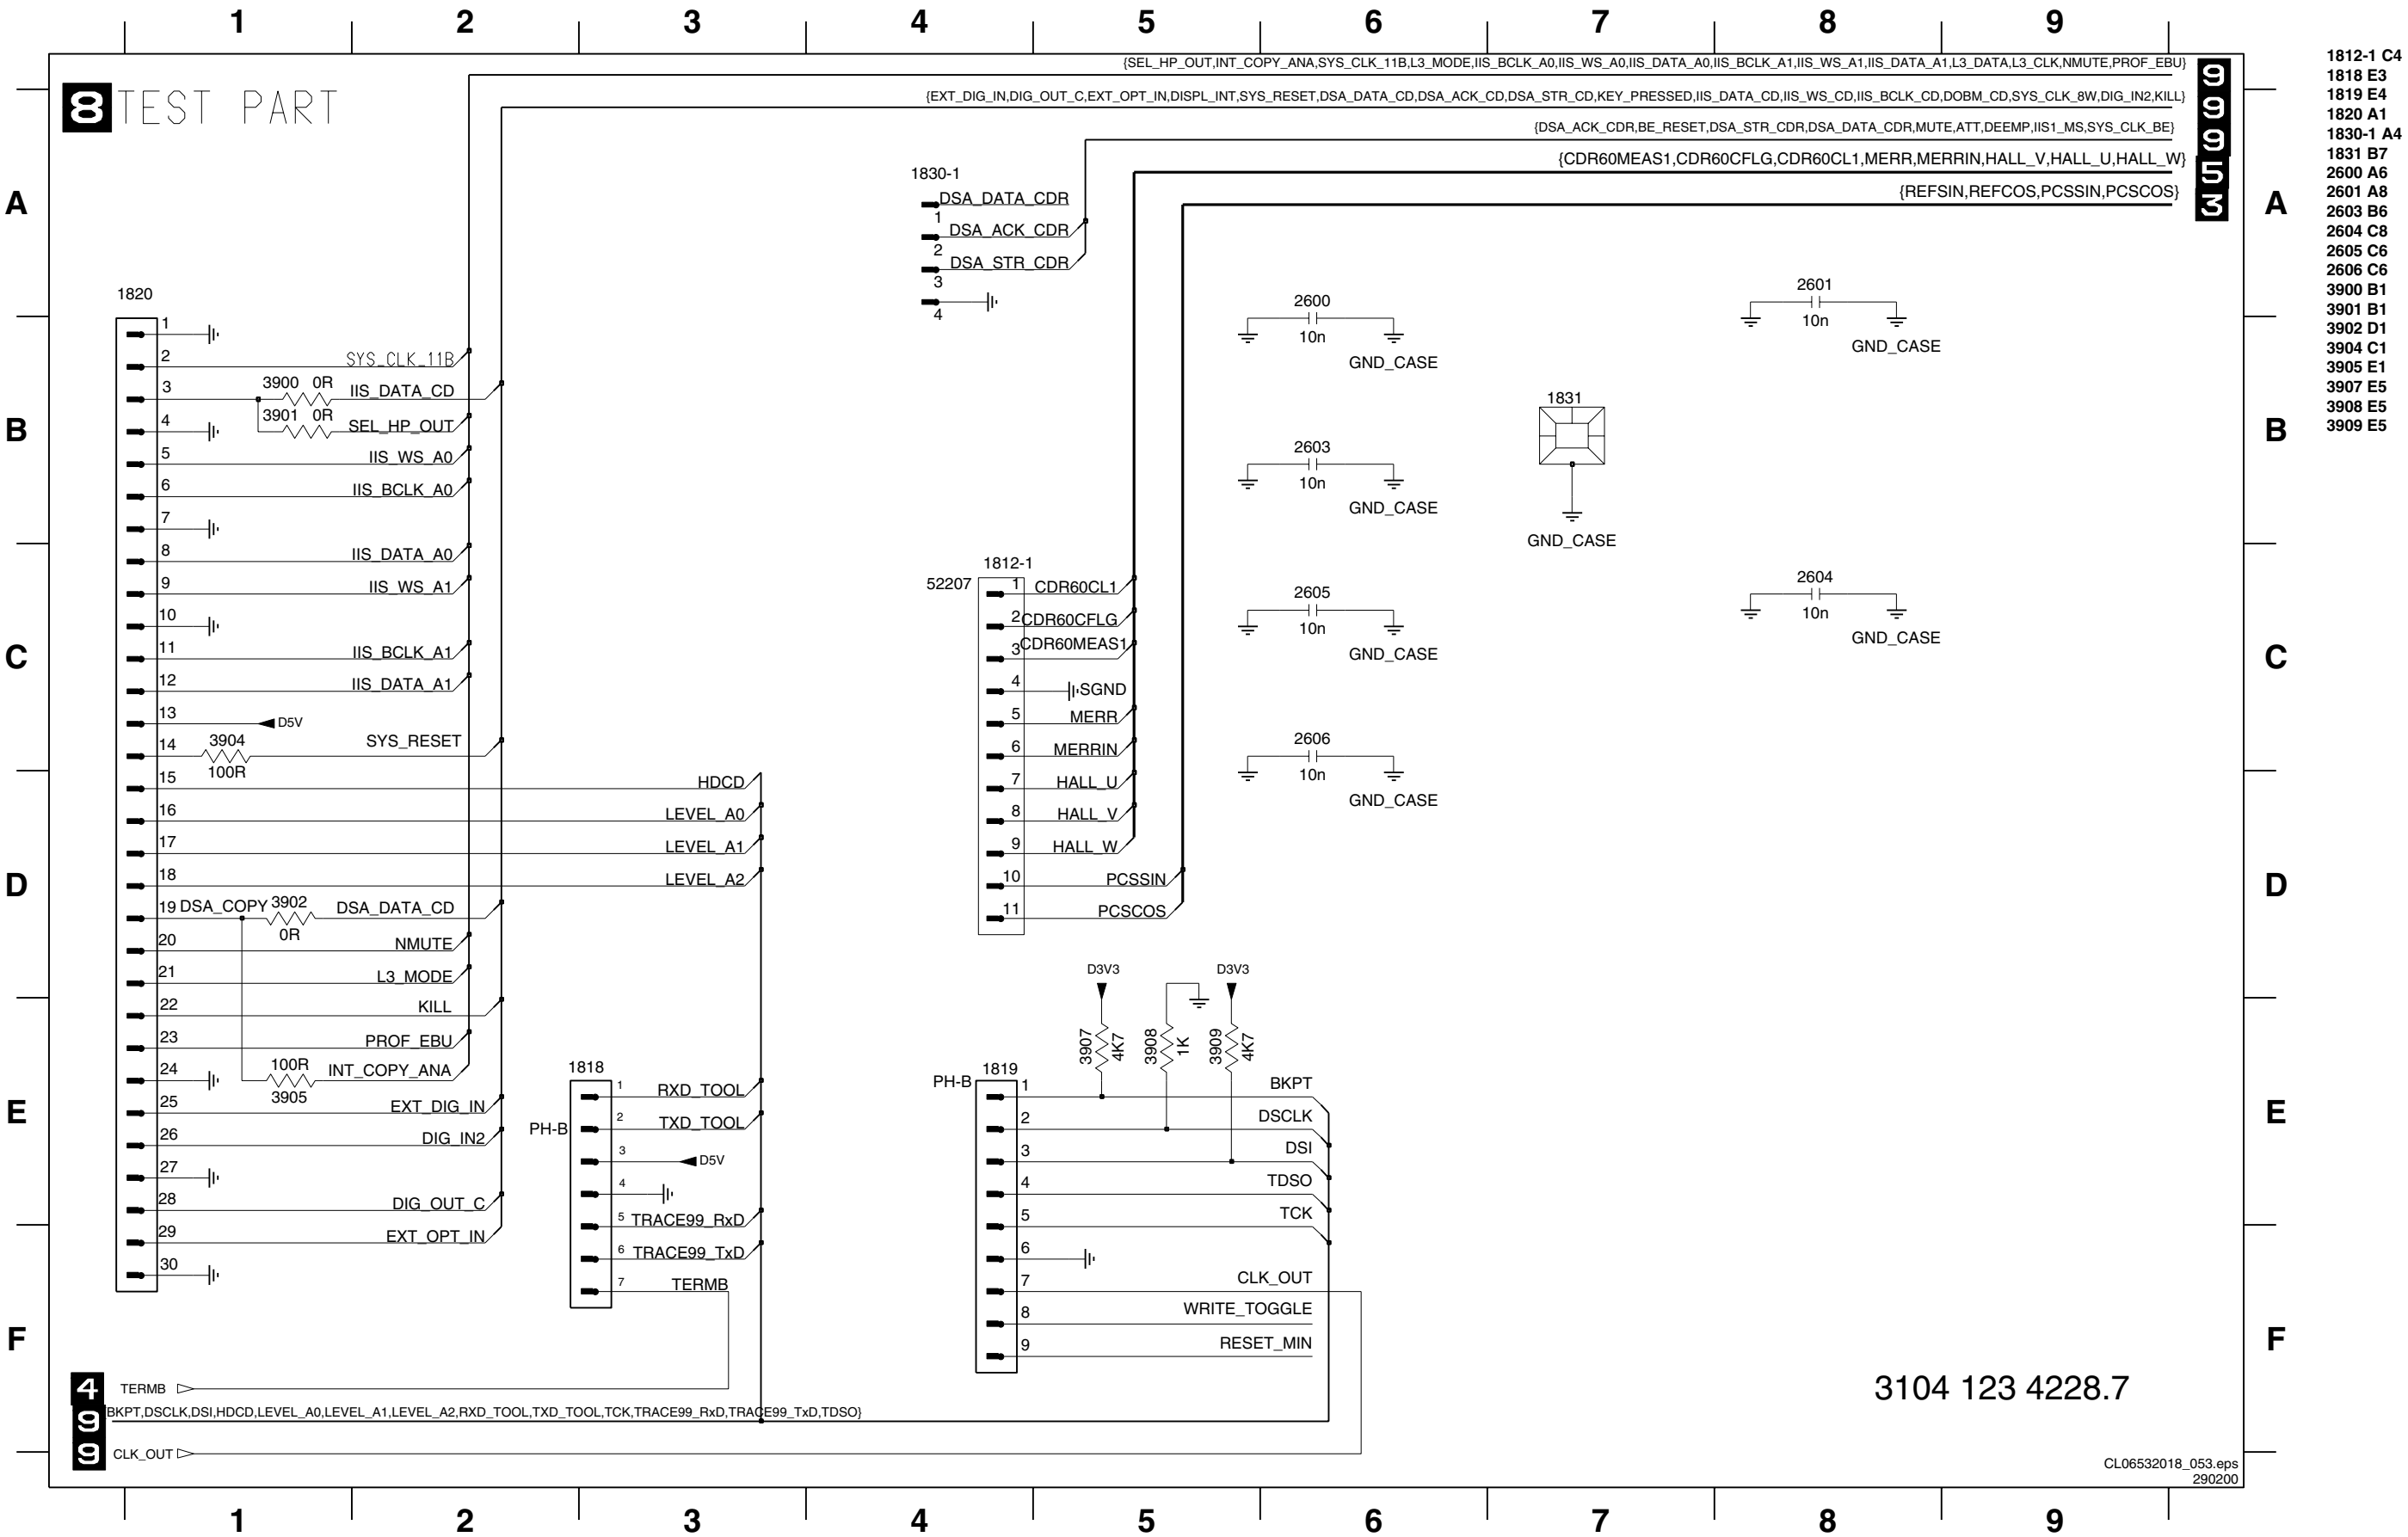


1400-1 B13	3768 H3	F928 E12
1400-2 B13	3769 E2	F929 E12
1400-3 B13	3770 I12	F930 A13
1400-4 B13	3771 H3	F931 B13
1400-5 C13	3810 I3	F932 C13
1400-6 C13	3811 H2	F933 E2
1401-7 C13	3812 I10	F934-1 E13
1701-1 A13	3813 A14	F934-10 E13
1701-2 A13	3814 H7	F934-2 E13
1702 A13	3815 H11	F934-3 F13
1704 C13	3816 I11	F934-4 F13
1705 C13	3818-A D10	F934-5 D13
1707 G1	3818-B D10	F934-6 E13
1708 F13	3818-C D10	F934-7 E13
2706 B7	3819-B D10	F934-8 E13
2704 B7	3819-A E10	F934-9 E13
2706 B7	3819-B E10	F935 E2
2707 C13	3819-C D10	F936 D13
2708 D12	3819-D E10	F937 F2
2709 F12	3820-A D10	F938 F13
2712 G11	3820-B E10	F939 F2
2713 H3	3820-C E10	F940 F2
2714 H1	3820-D E10	F941 F2
2715 H1	3821-C F10	F942 G13
2717 A8	3821-B F10	F943 G13
2718 G1	3821-C F10	F944 G13
2719 G2	3821-D E10	F945 G12
2721 A12	3822-A H9	F946 G13
2722 C12	3822-B H9	F948 H13
2723 C13	3822-C H9	F949 H13
2724 D11	3822-D H9	F951 H3
2725 D12	3823-B H8	F952 H13
2726 F12	3823-B H9	F953 H4
2727 F12	3823-C H8	F954 H6
2728 F12	3823-D H8	F955 H6
2731 H12	3824-A H8	F956 H7
2733 F12	3824-B H8	F957 H7
2734 G12	3824-C H8	F958 H13
2735 G12	3824-D H8	F959 H13
2736 H13	3825-B H8	F960 D13
2737 H13	3825-B H7	F961 I12
2738 H13	3825-C H7	F962 I12
2739 H13	3825-D H7	F963 B4
2740 H13	3826 G11	F964 B4
2741 H13	3826 G12	F965 B4
2742 H13	3829 G13	F966 B10
2743 H13	3830 G12	F967 B10
2745 B6	3831 G13	F968 B10
2751 B7	3832 G13	F969 F10
2752 B8	3833 H12	F970 G10
2760 B6	3834 H12	F971 G10
2761 B8	3835 G12	F972 I11
2762 B8	3836 H12	F973 H7
2763 B8	3837 B3	F974 H6
2764 B9	3838 B3	F975 H6
2765 B9	3839-A H6	F976 F2
2766 B9	3894-A H6	F977 G2
2767 A13	3894-B H6	F978 G2
2768 A13	3894-D H3	F979 G2
2769 B13	3897-A D10	F982 H6
2770 B13	3897-B C10	F983 H6
2771 C12	3897-C C10	F984 H6
2772 C12	3897-D C10	F985 H7
2773 C13	3898-B H5	F986 H7
2774 D13	3898-B H5	F990 B3
2901 F13	3898-C H6	F991 B4
2902 F13	3903 H5	F992 B4
2905 C2	3906 D2	H700 F13
3701 A12	3910 H4	
3704 I10	3911 I7	
3705 A2	5701 B1	
3706 B12	5702 H12	
3708 B12	5703 B12	
3709 C12	5704 C12	
3710 D2	5705 C12	
3711 E12	5706 D13	
3712 D12	5707 D12	
3713 D12	5710 A6	
3714 D12	5714 A9	
3715 E12	5715 E9	
3716 G10	6701 G1	
3717 B10	6702 G2	
3718 B10	7701 C3	
3719 B10	7704 B1	
3720 E2	7705-B H2	
3721 E2	7706-A H10	
3722 C10	7706-B H10	
3723 C10	7707 H12	
3724 C10	7710 B1	
3725 G10	F105 H7	
3726 F11	F756 H2	
3727 G1	F757 H1	
3728 G10	F758 A8	
3729 E2	F759 B6	
3731 G2	F760 B12	
3732 H3	F761 H12	
3734 C11	F903 B6	
3735 H4	F905 B4	
3743 H7	F906 F13	
3744 H1	F907 B13	
3745 H2	F908 B3	
3746 H2	F910 B3	
3750 I2	F912 B13	
3751 H13	F913 H12	
3752 A7	F914 B13	
3753 I12	F915 C3	
3755 A7	F916 C3	
3756 D2	F917 D11	
3757 H12	F918 C11	
3758 F13	F919 D2	
3760 C2	F920 D12	
3761 C2	F921 D12	
3762 C2	F922 D12	
3763 E2	F923 D2	
3764 G2	F924 D2	
3765 H2</		

CDR MAIN BOARD - CIRCUIT DIAGRAM 10 : DASP FLASH & DRAM TESTPOINTS

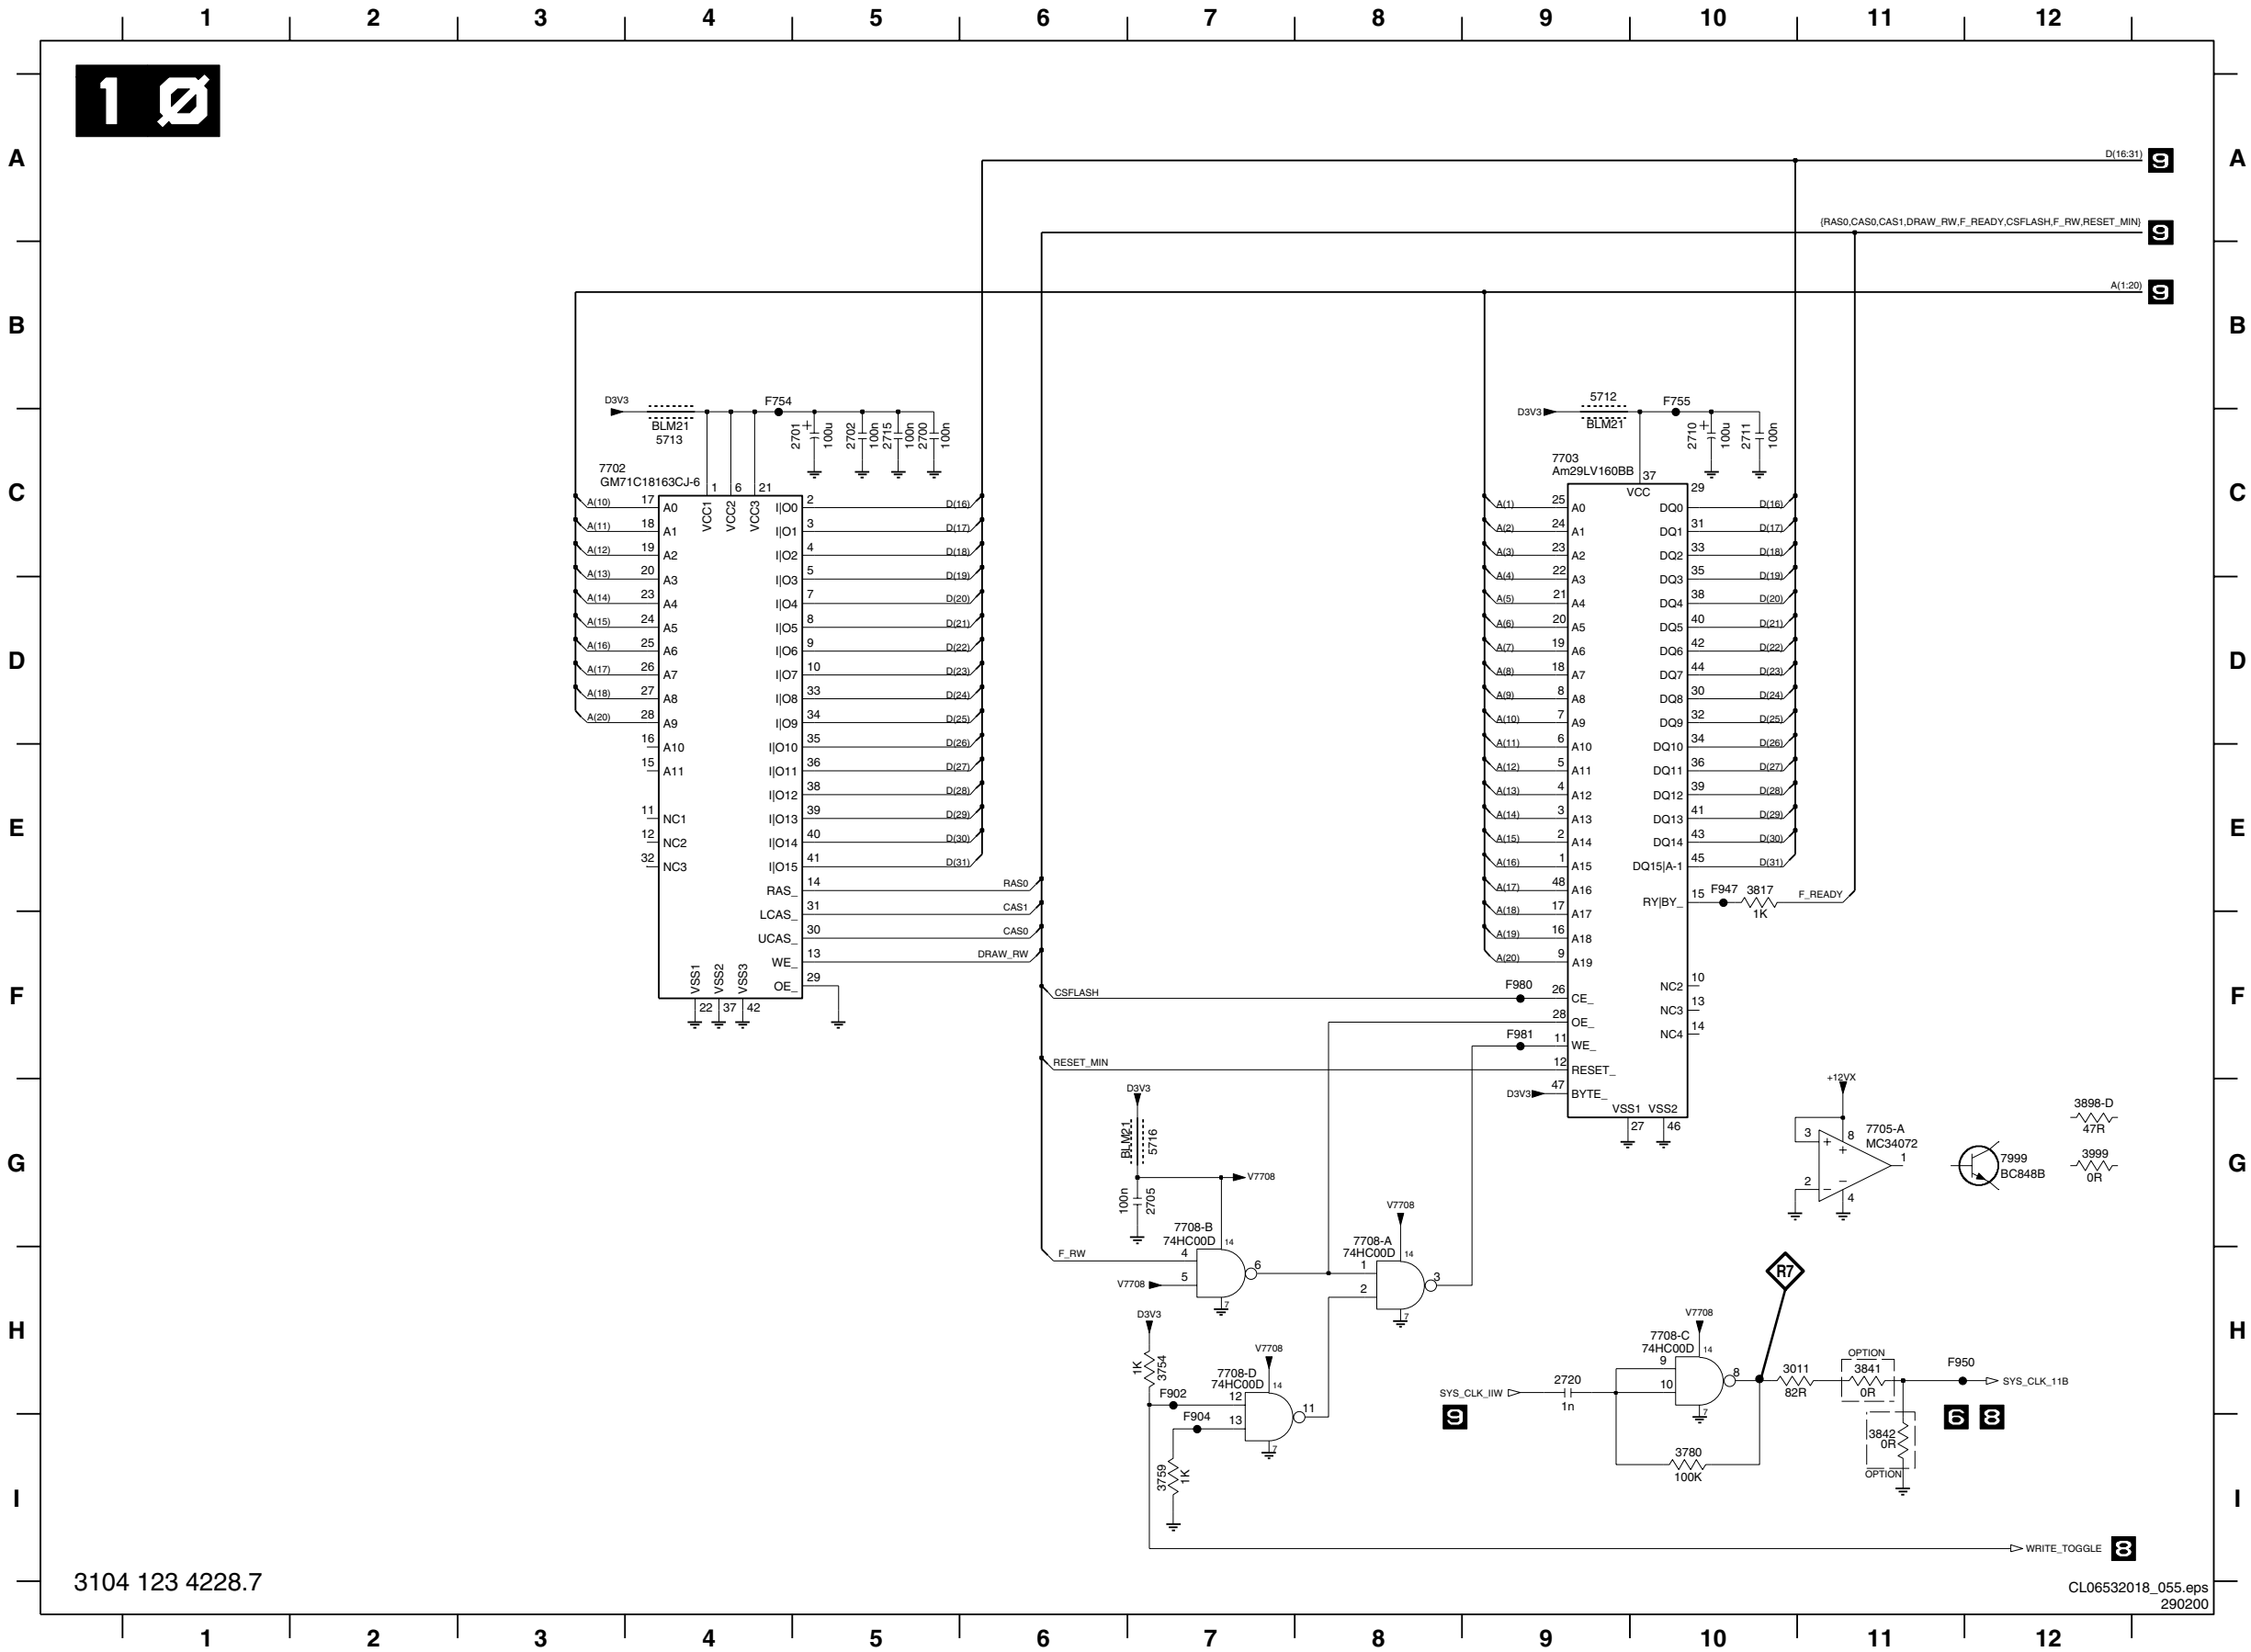

- 2700 C5
- 2701 C5
- 2702 C5
- 2705 G7
- 2710 C10
- 2711 C10
- 2715 C5
- 2720 H9
- 3011 H10
- 3754 H7
- 3759 I7
- 3780 I10
- 3817 E10
- 3841 H11
- 3842 I11
- 3898-D G12
- 3999 G12
- 5712 B9
- 5713 C4
- 5716 G7
- 7702 C3
- 7703 C9
- 7705-A G11
- 7708-A G8
- 7708-B G7
- 7708-C H10
- 7708-D H7
- 7999 G12
- F754 B4
- F755 B10
- F902 H7
- F904 I7
- F947 E10
- F950 H11
- F980 F9
- F981 F9

1 2 3 4 5


[illegible]

5

[illegible]

CDR-Mainboard Version 4228.8

CDR MAIN BOARD - CIRCUIT DIAGRAM 1 : AEGER, EFMTIM, FORWARD SENSE CIRCUIT TESTPOINTS

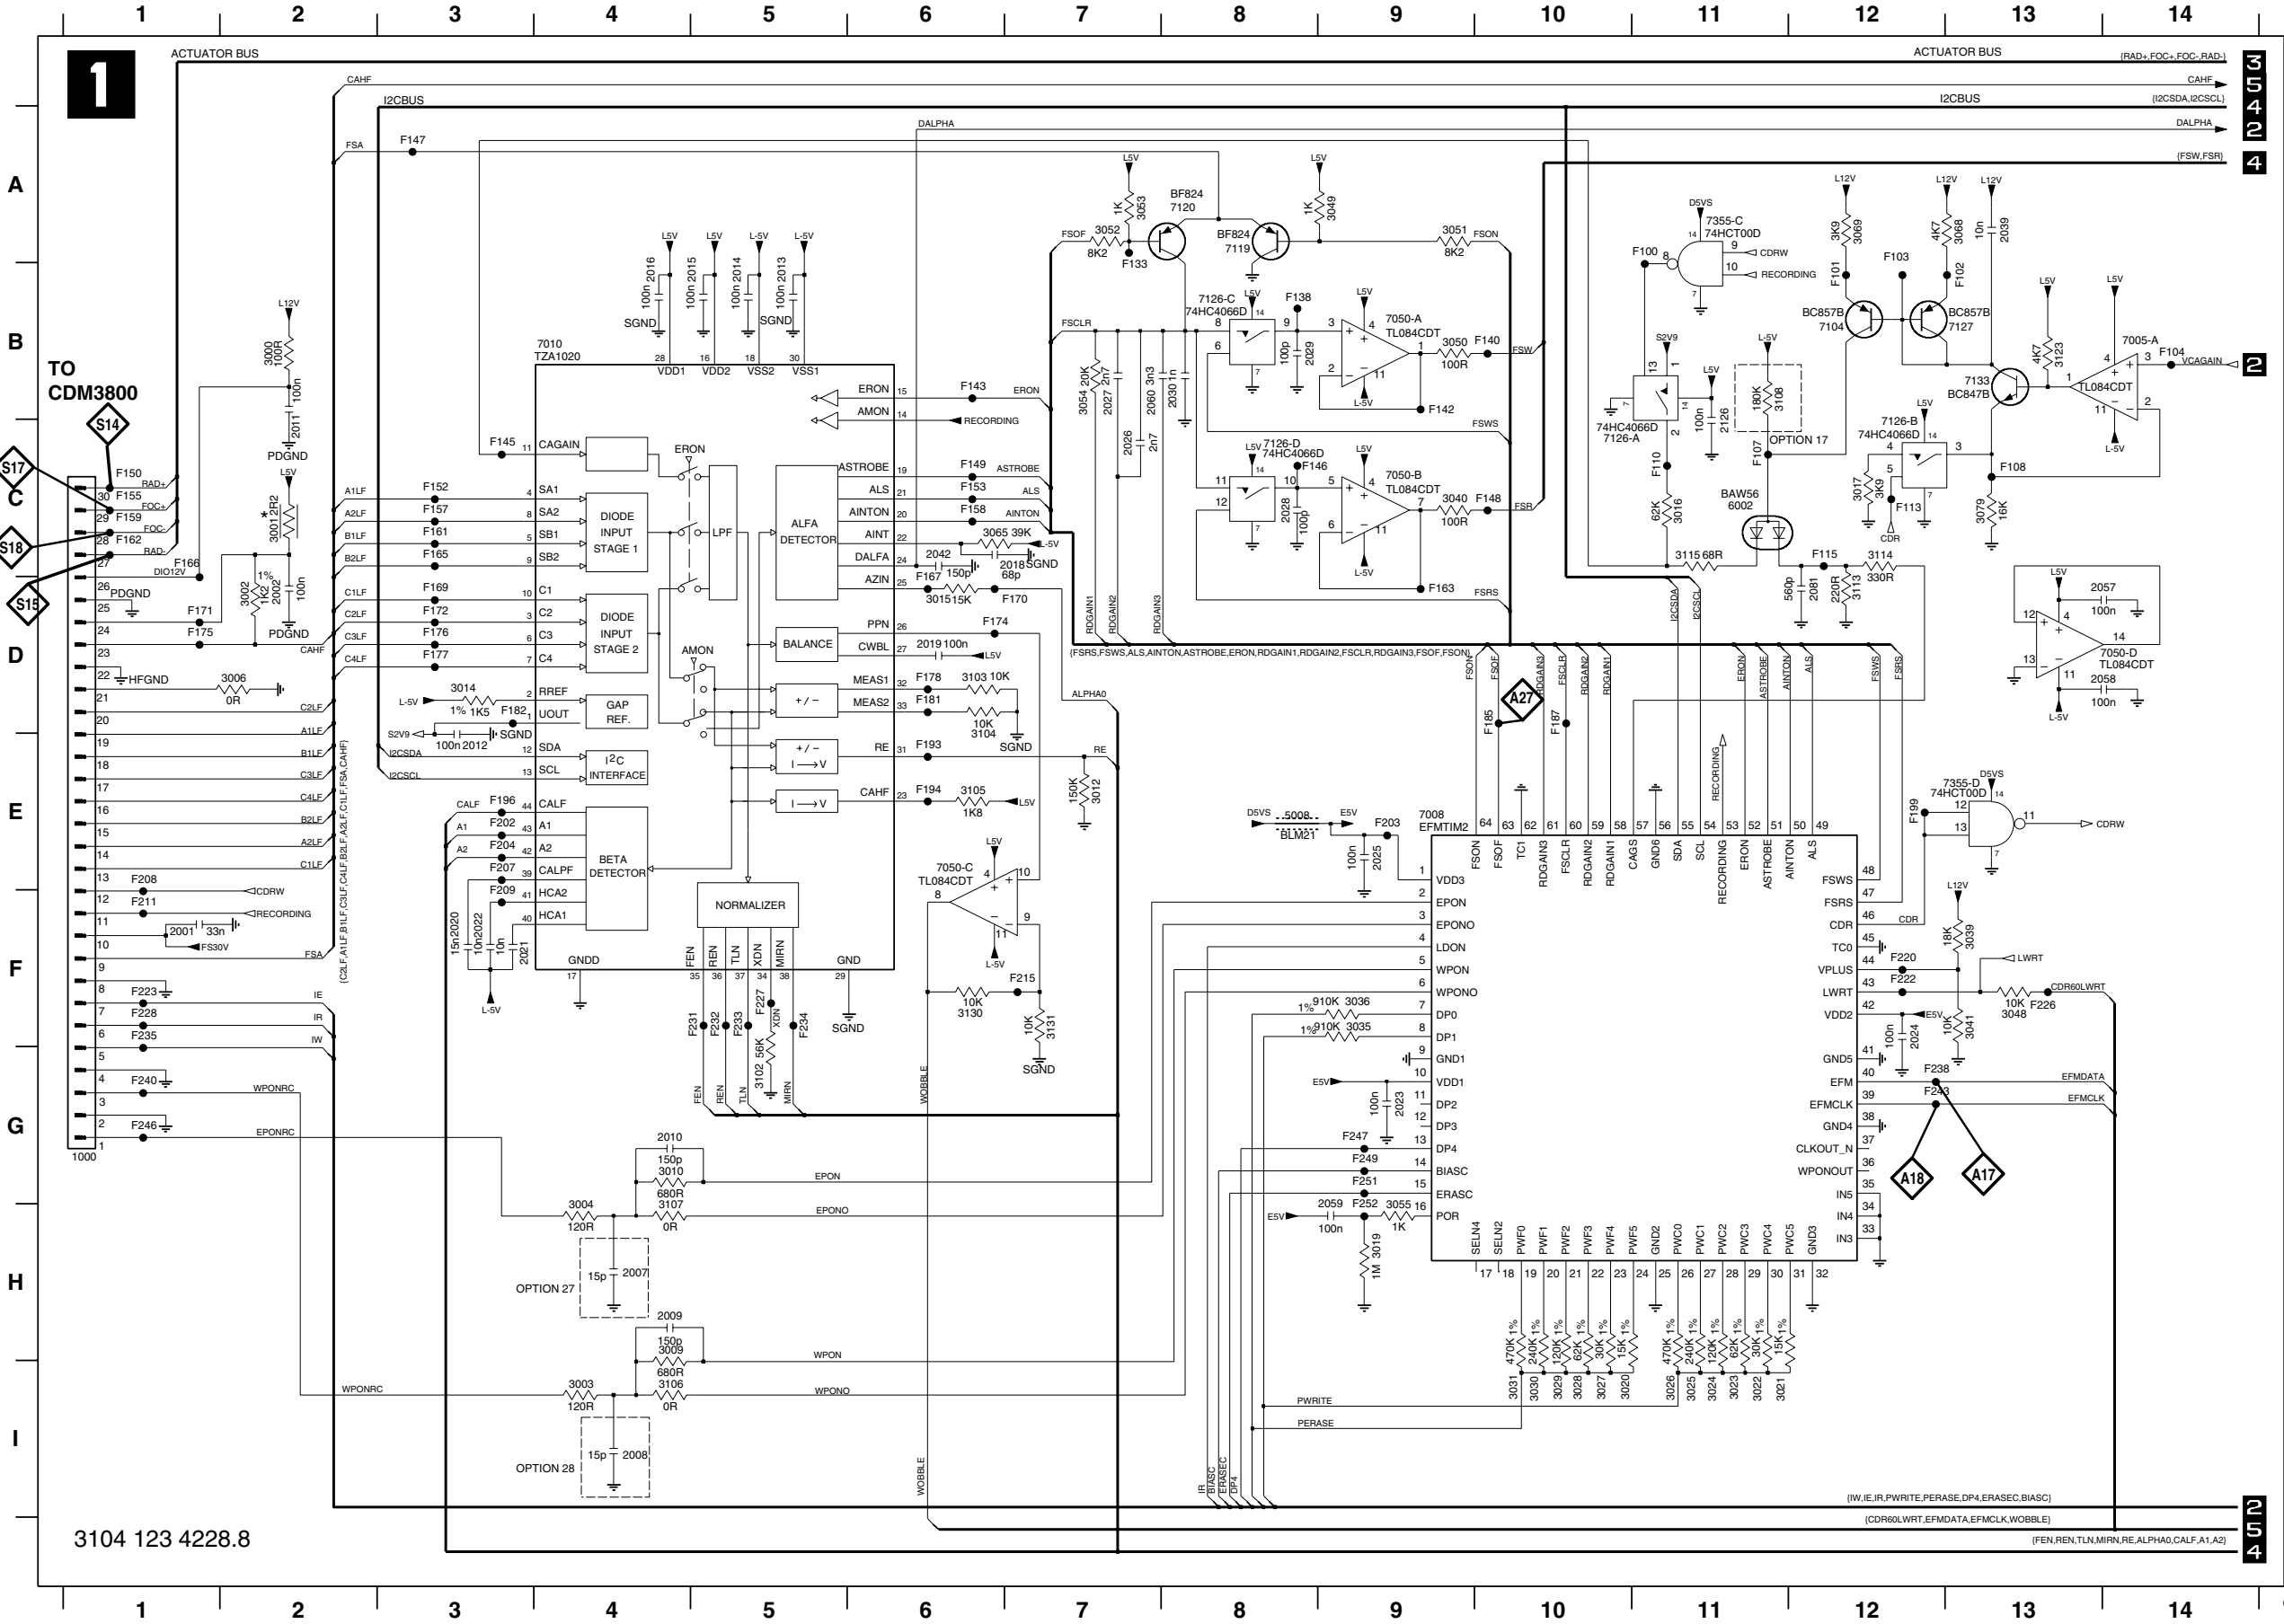


1000 G1	F110 C11
2001 F1	F113 C12
2002 D2	F115 C12
2007 H4	F133 B7
2008 I4	F138 B8
2009 H4	F140 B10
2010 G4	F142 B9
2011 C2	F143 B6
2012 E3	F145 C3
2013 B5	F146 C8
2014 B5	F147 A3
2015 B4	F148 C10
2016 B4	F149 C6
2018 C7	F150 C1
2019 D6	F152 C3
2020 F3	F153 C6
2021 F3	F155 C1
2022 F3	F157 C3
2023 G9	F158 C6
2024 F12	F159 C1
2025 E9	F161 C3
2026 C7	F162 C1
2027 B7	F163 D9
2028 C8	F165 C3
2029 B8	F166 C1
2030 B8	F167 D6
2039 A13	F169 D3
2042 C6	F170 D7
2057 D14	F171 D1
2058 D14	F172 D3
2059 H9	F174 D6
2060 B7	F175 D1
2081 D12	F176 D3
2126 C11	F177 D3
3000 B2	F178 D6
3001 C2	F181 D6
3002 D2	F182 D3
3003 I4	F185 D10
3004 H4	F187 D10
3006 D2	F193 E6
3009 H4	F196 E3
3010 G4	F199 E12
3012 E7	F202 E3
3014 D3	F203 E9
3015 D6	F204 E3
3016 C11	F207 E3
3017 C12	F208 E1
3019 H9	F209 F3
3020 I10	F211 F1
3021 I11	F215 F7
3022 I11	F220 F12
3023 I11	F222 F12
3024 I11	F223 F1
3025 I11	F226 F13
3026 I11	F227 F5
3027 I10	F228 F1
3028 I10	F231 F4
3029 I10	F232 F5
3030 I10	F233 F5
3031 I10	F234 F5
3035 F9	F235 F1
3036 F9	F238 G12
3039 F13	F240 G1
3040 C9	F243 G12
3041 F13	F246 G1
3048 F13	F247 G9
3049 A9	F249 G9
3050 B9	F251 G9
3051 A9	F252 H9
3052 A7	
3053 A7	
3054 B7	
3055 H9	
3065 C8	
3068 A13	
3069 A12	
3079 C13	
3102 G5	
3103 D6	
3104 E6	
3105 E6	
3106 I4	
3107 H4	
3108 B11	
3113 D12	
3114 C12	
3115 C11	
3123 B13	
3130 F6	
3131 F7	
5008 E8	
6002 C11	
7005-A B14	
7008 E9	
7010 B4	
7050-A B9	
7050-B C9	
7050-C E6	
7050-D D13	
7104 B12	
7119 A8	
7120 A8	
7126-A C11	
7126-B C12	
7126-C B8	
7126-D C8	
7127 B13	
7133 B13	
7355-C A11	
7355-D E12	
F100 A11	
F101 B12	
F102 B13	
F103 A12	
F104 B14	
F107 C11	
F108 C13	




CL06532018_060.eps
010300


CDR MAIN BOARD - CIRCUIT DIAGRAM 3 : SERVO DRIVERS, MACE-RAM, -FLASH, -DEMUX TEST POINTS

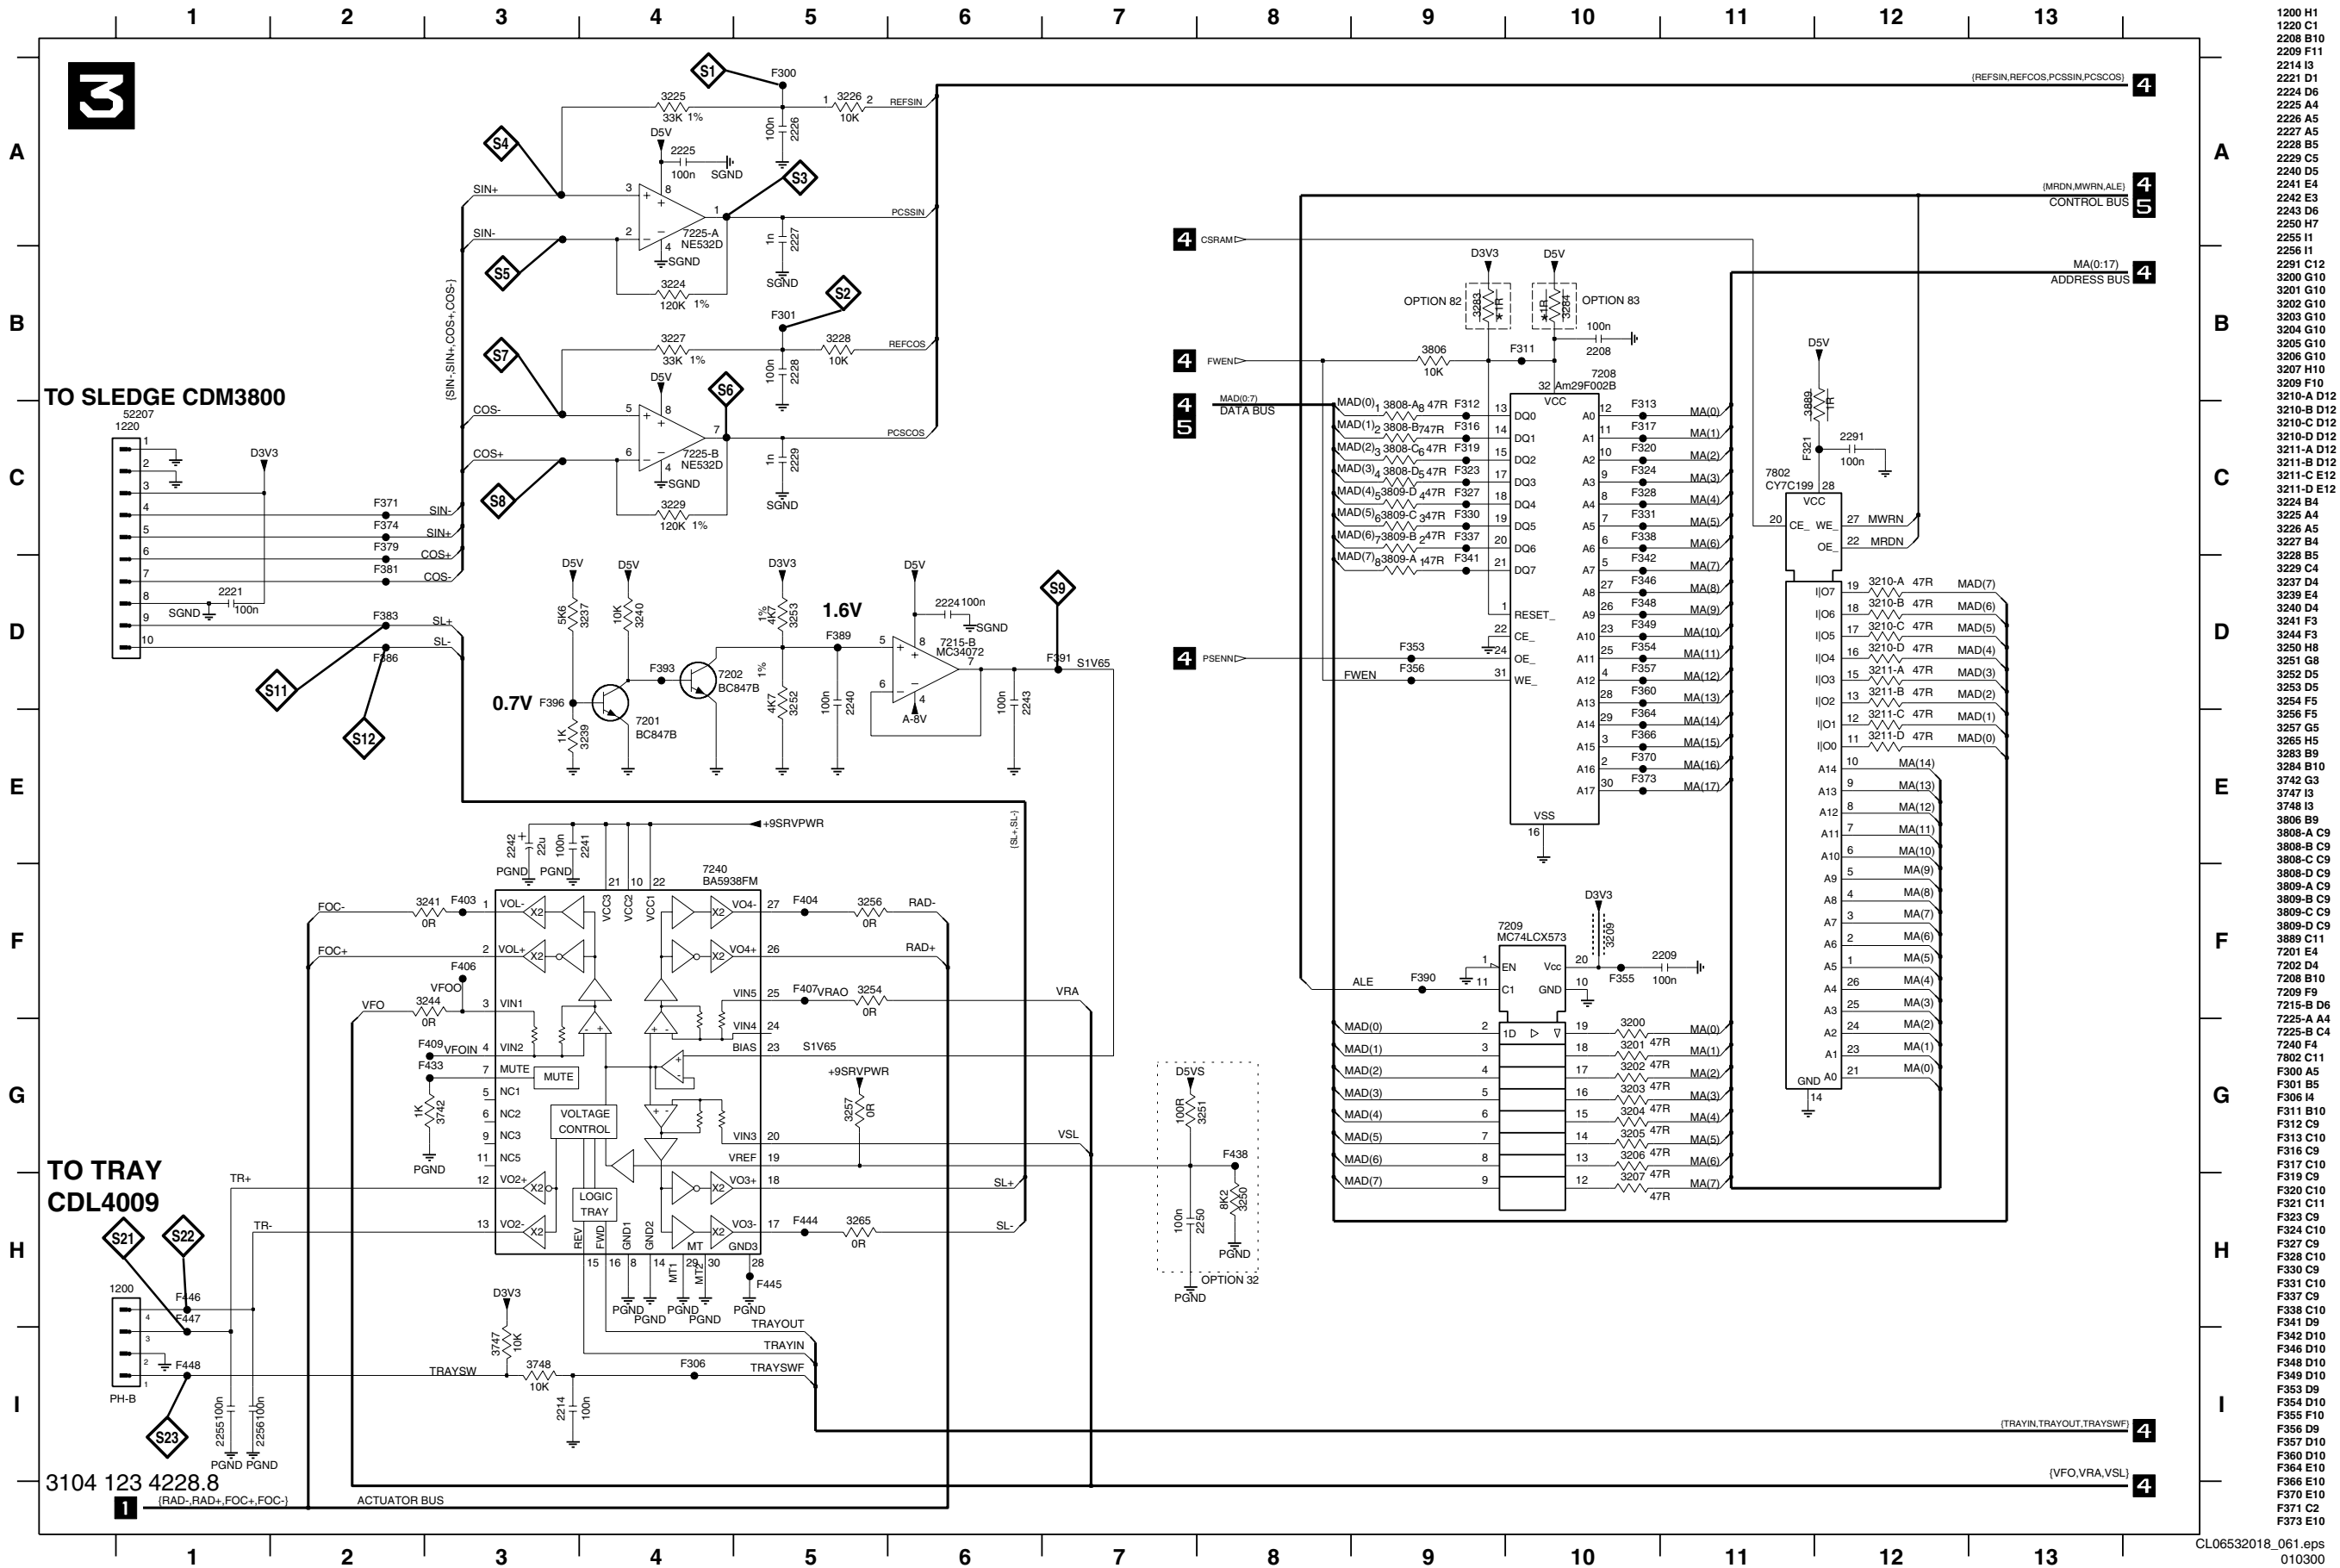


CDR MAIN BOARD - CIRCUIT DIAGRAM 4 : MACE BE-PROCESSOR TESTPOINTS

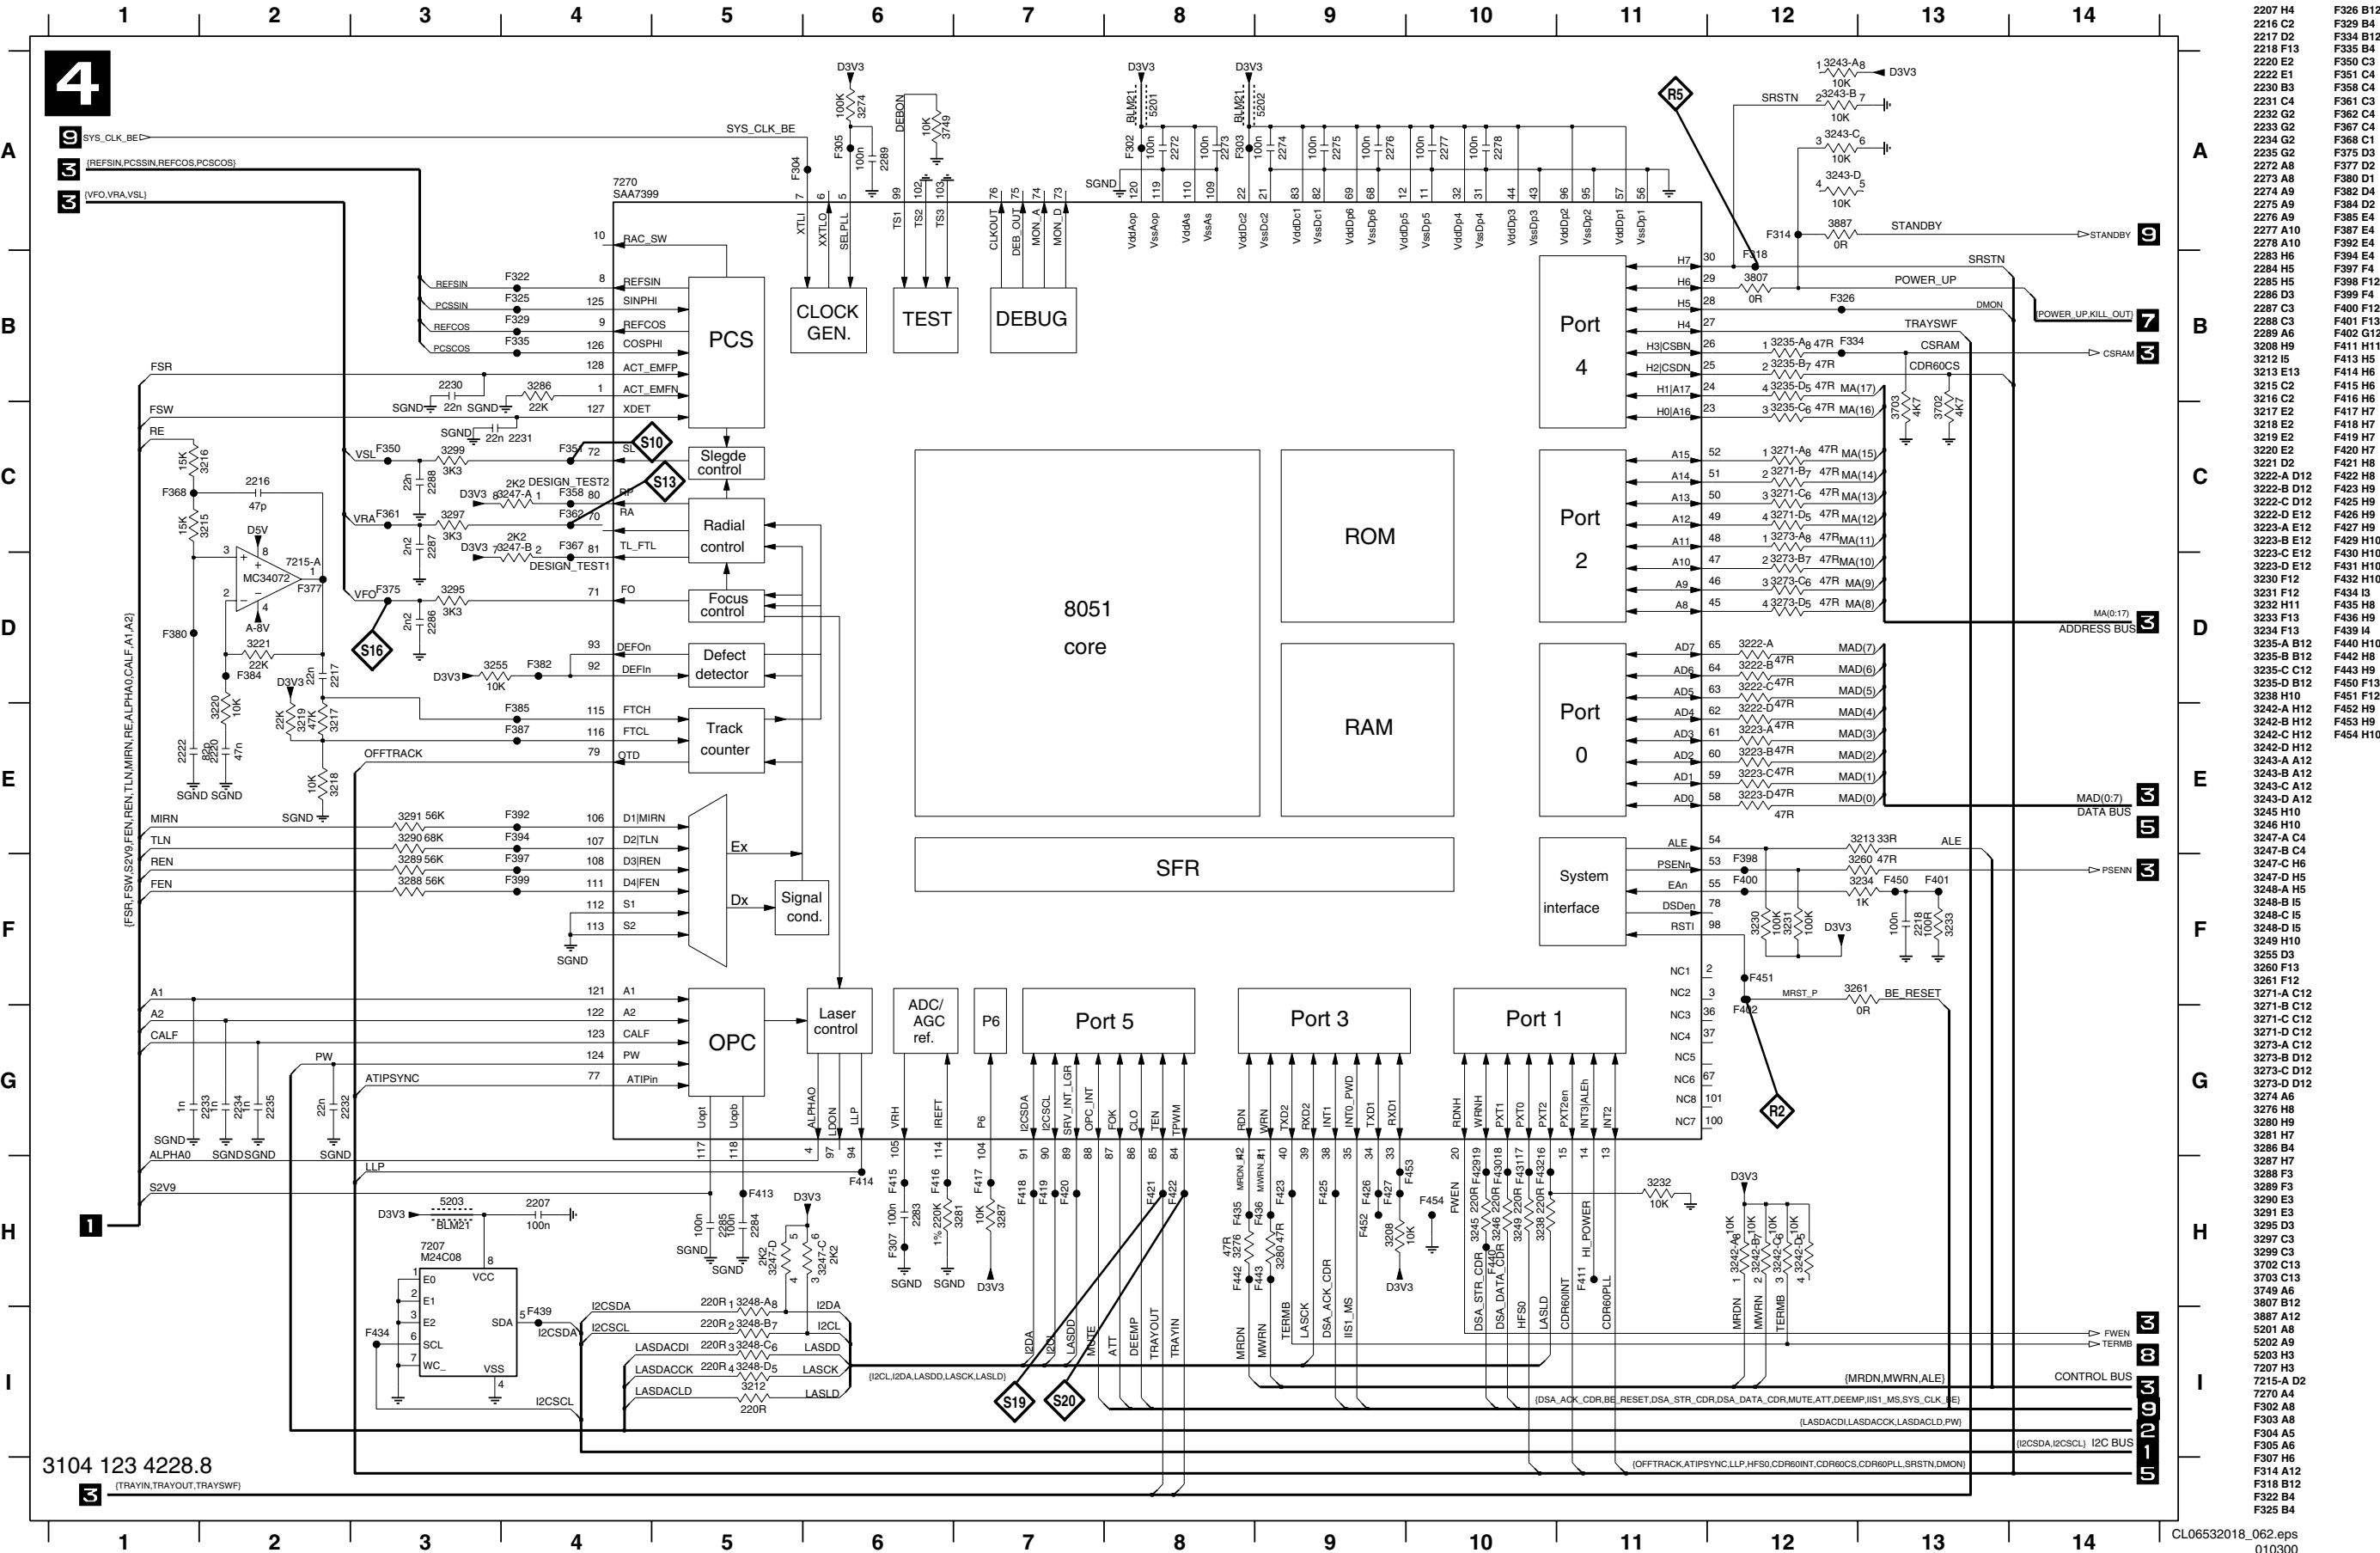

CDR MAIN BOARD - CIRCUIT DIAGRAM 5 : CD ENCODING-DECODING PART

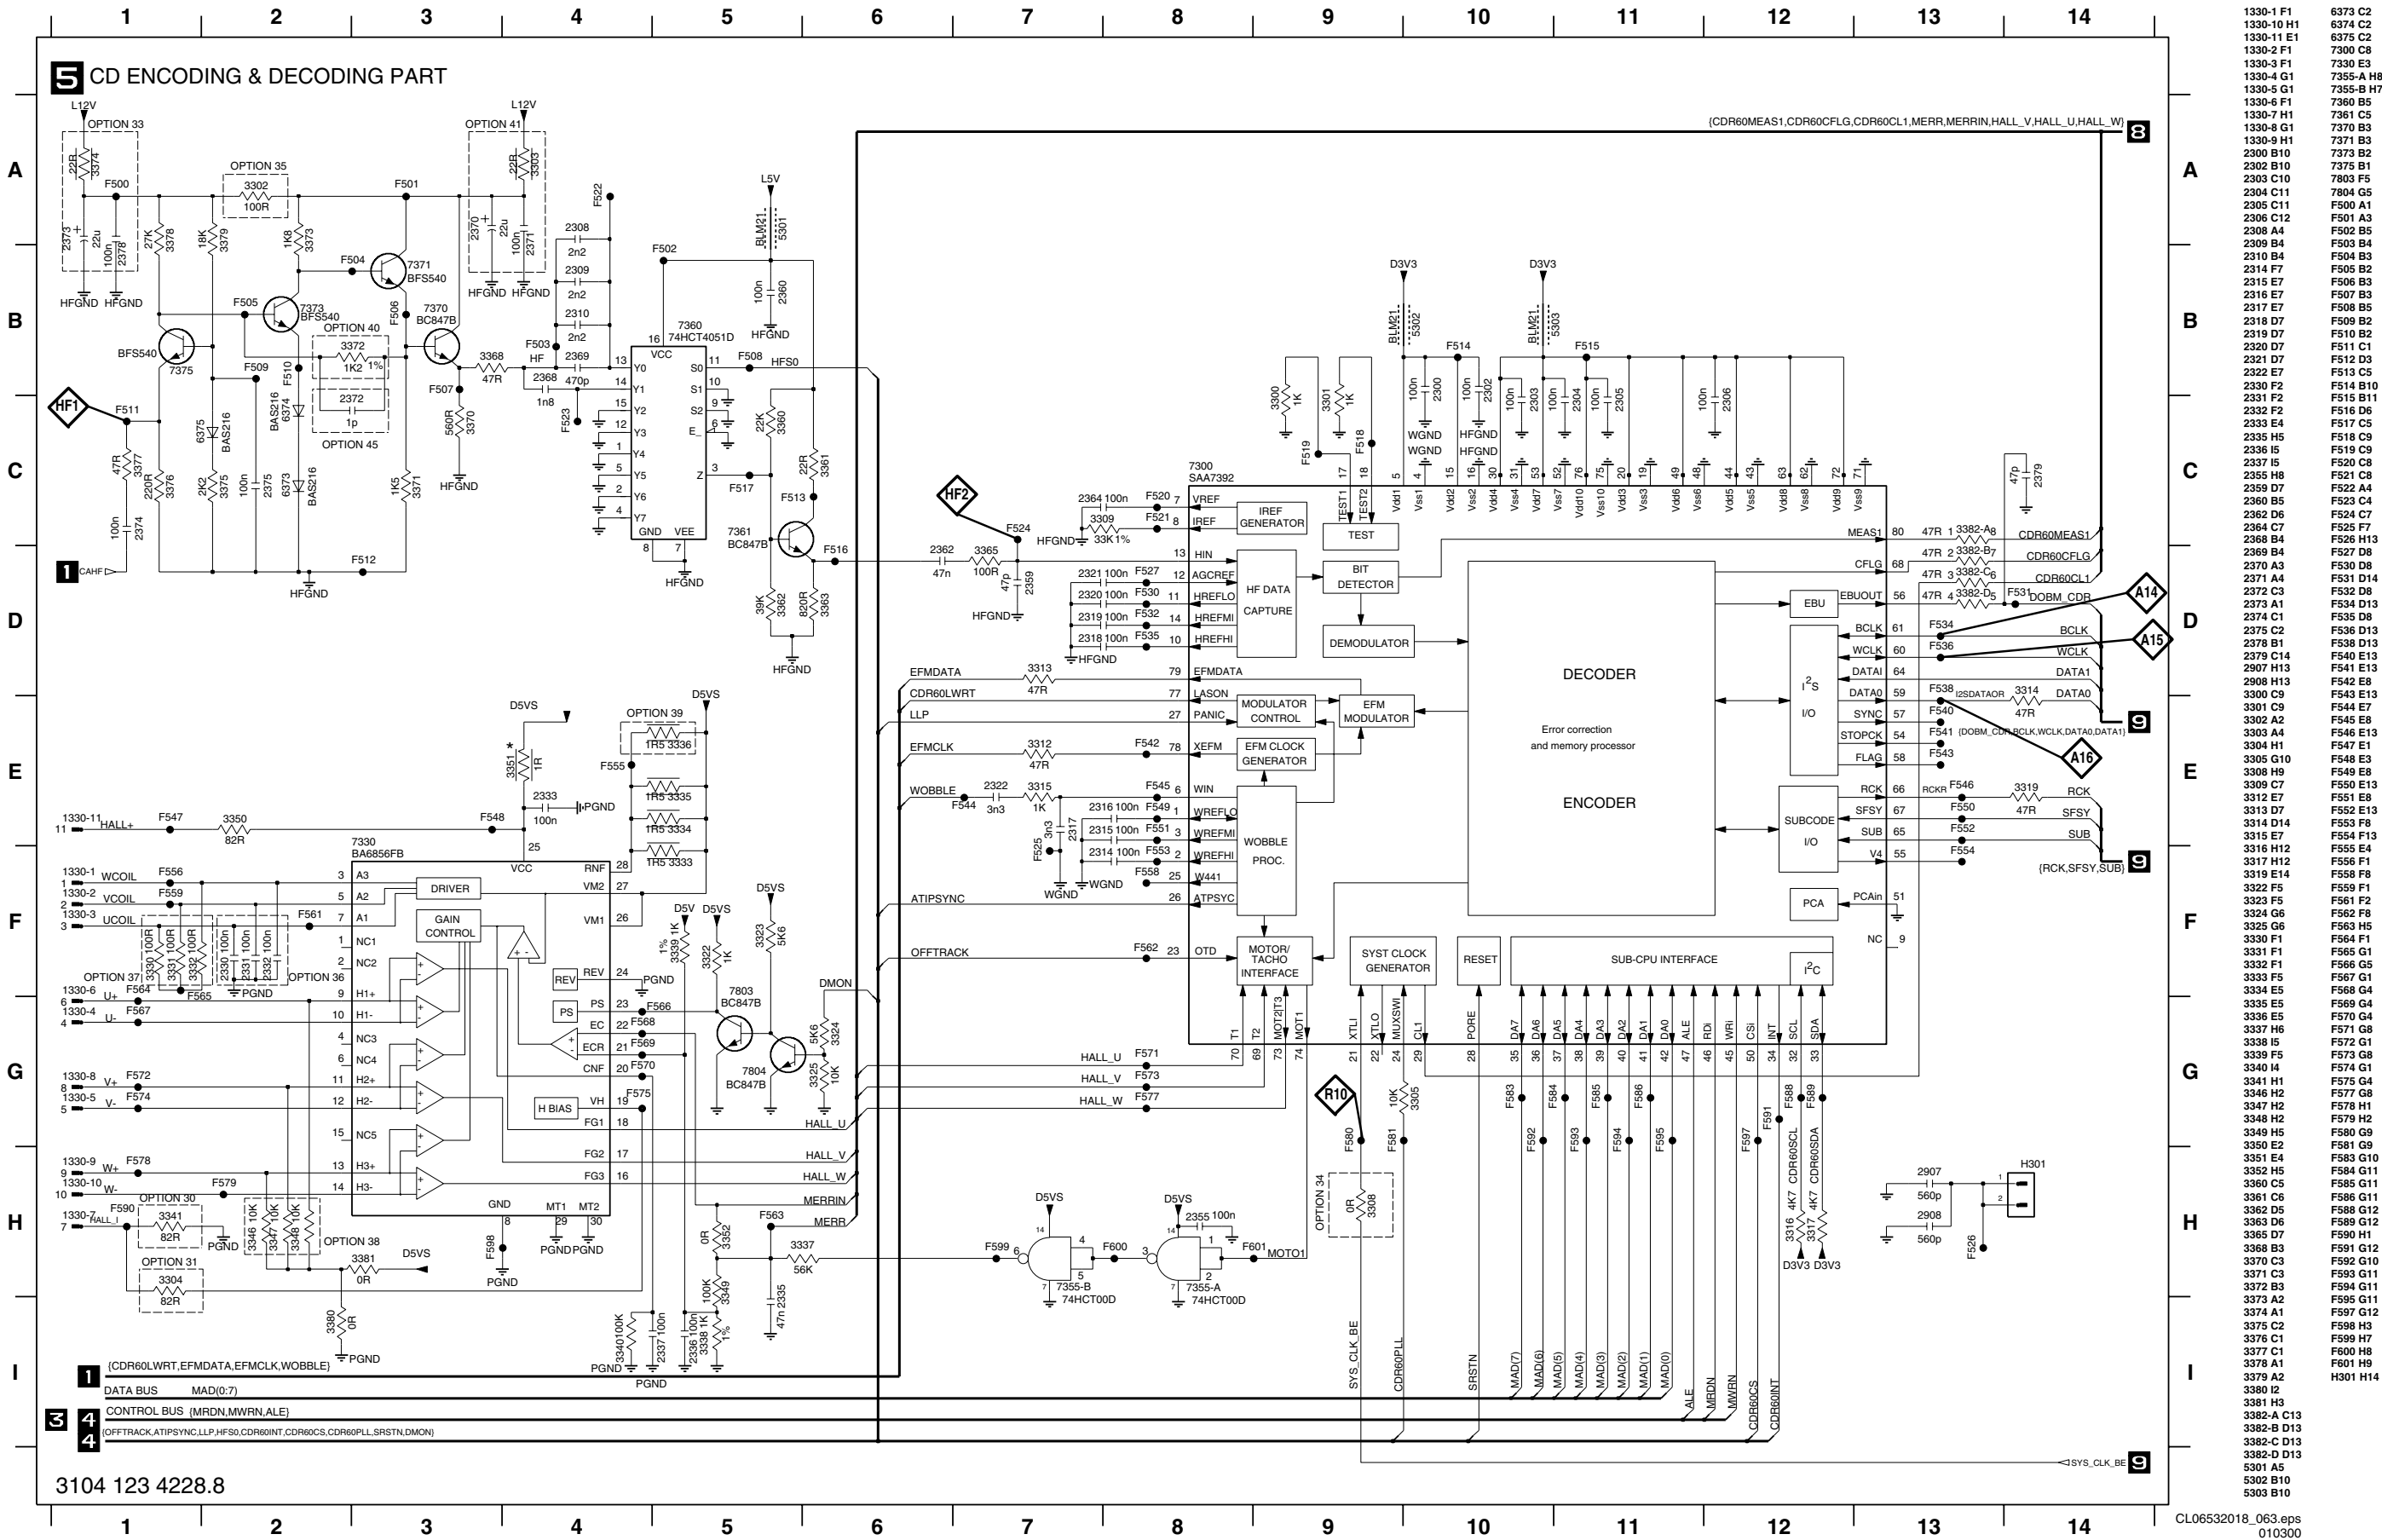


CDR MAIN BOARD - CIRCUIT DIAGRAM 6 : AUDIO PART (NOT FOR CDR950/951)

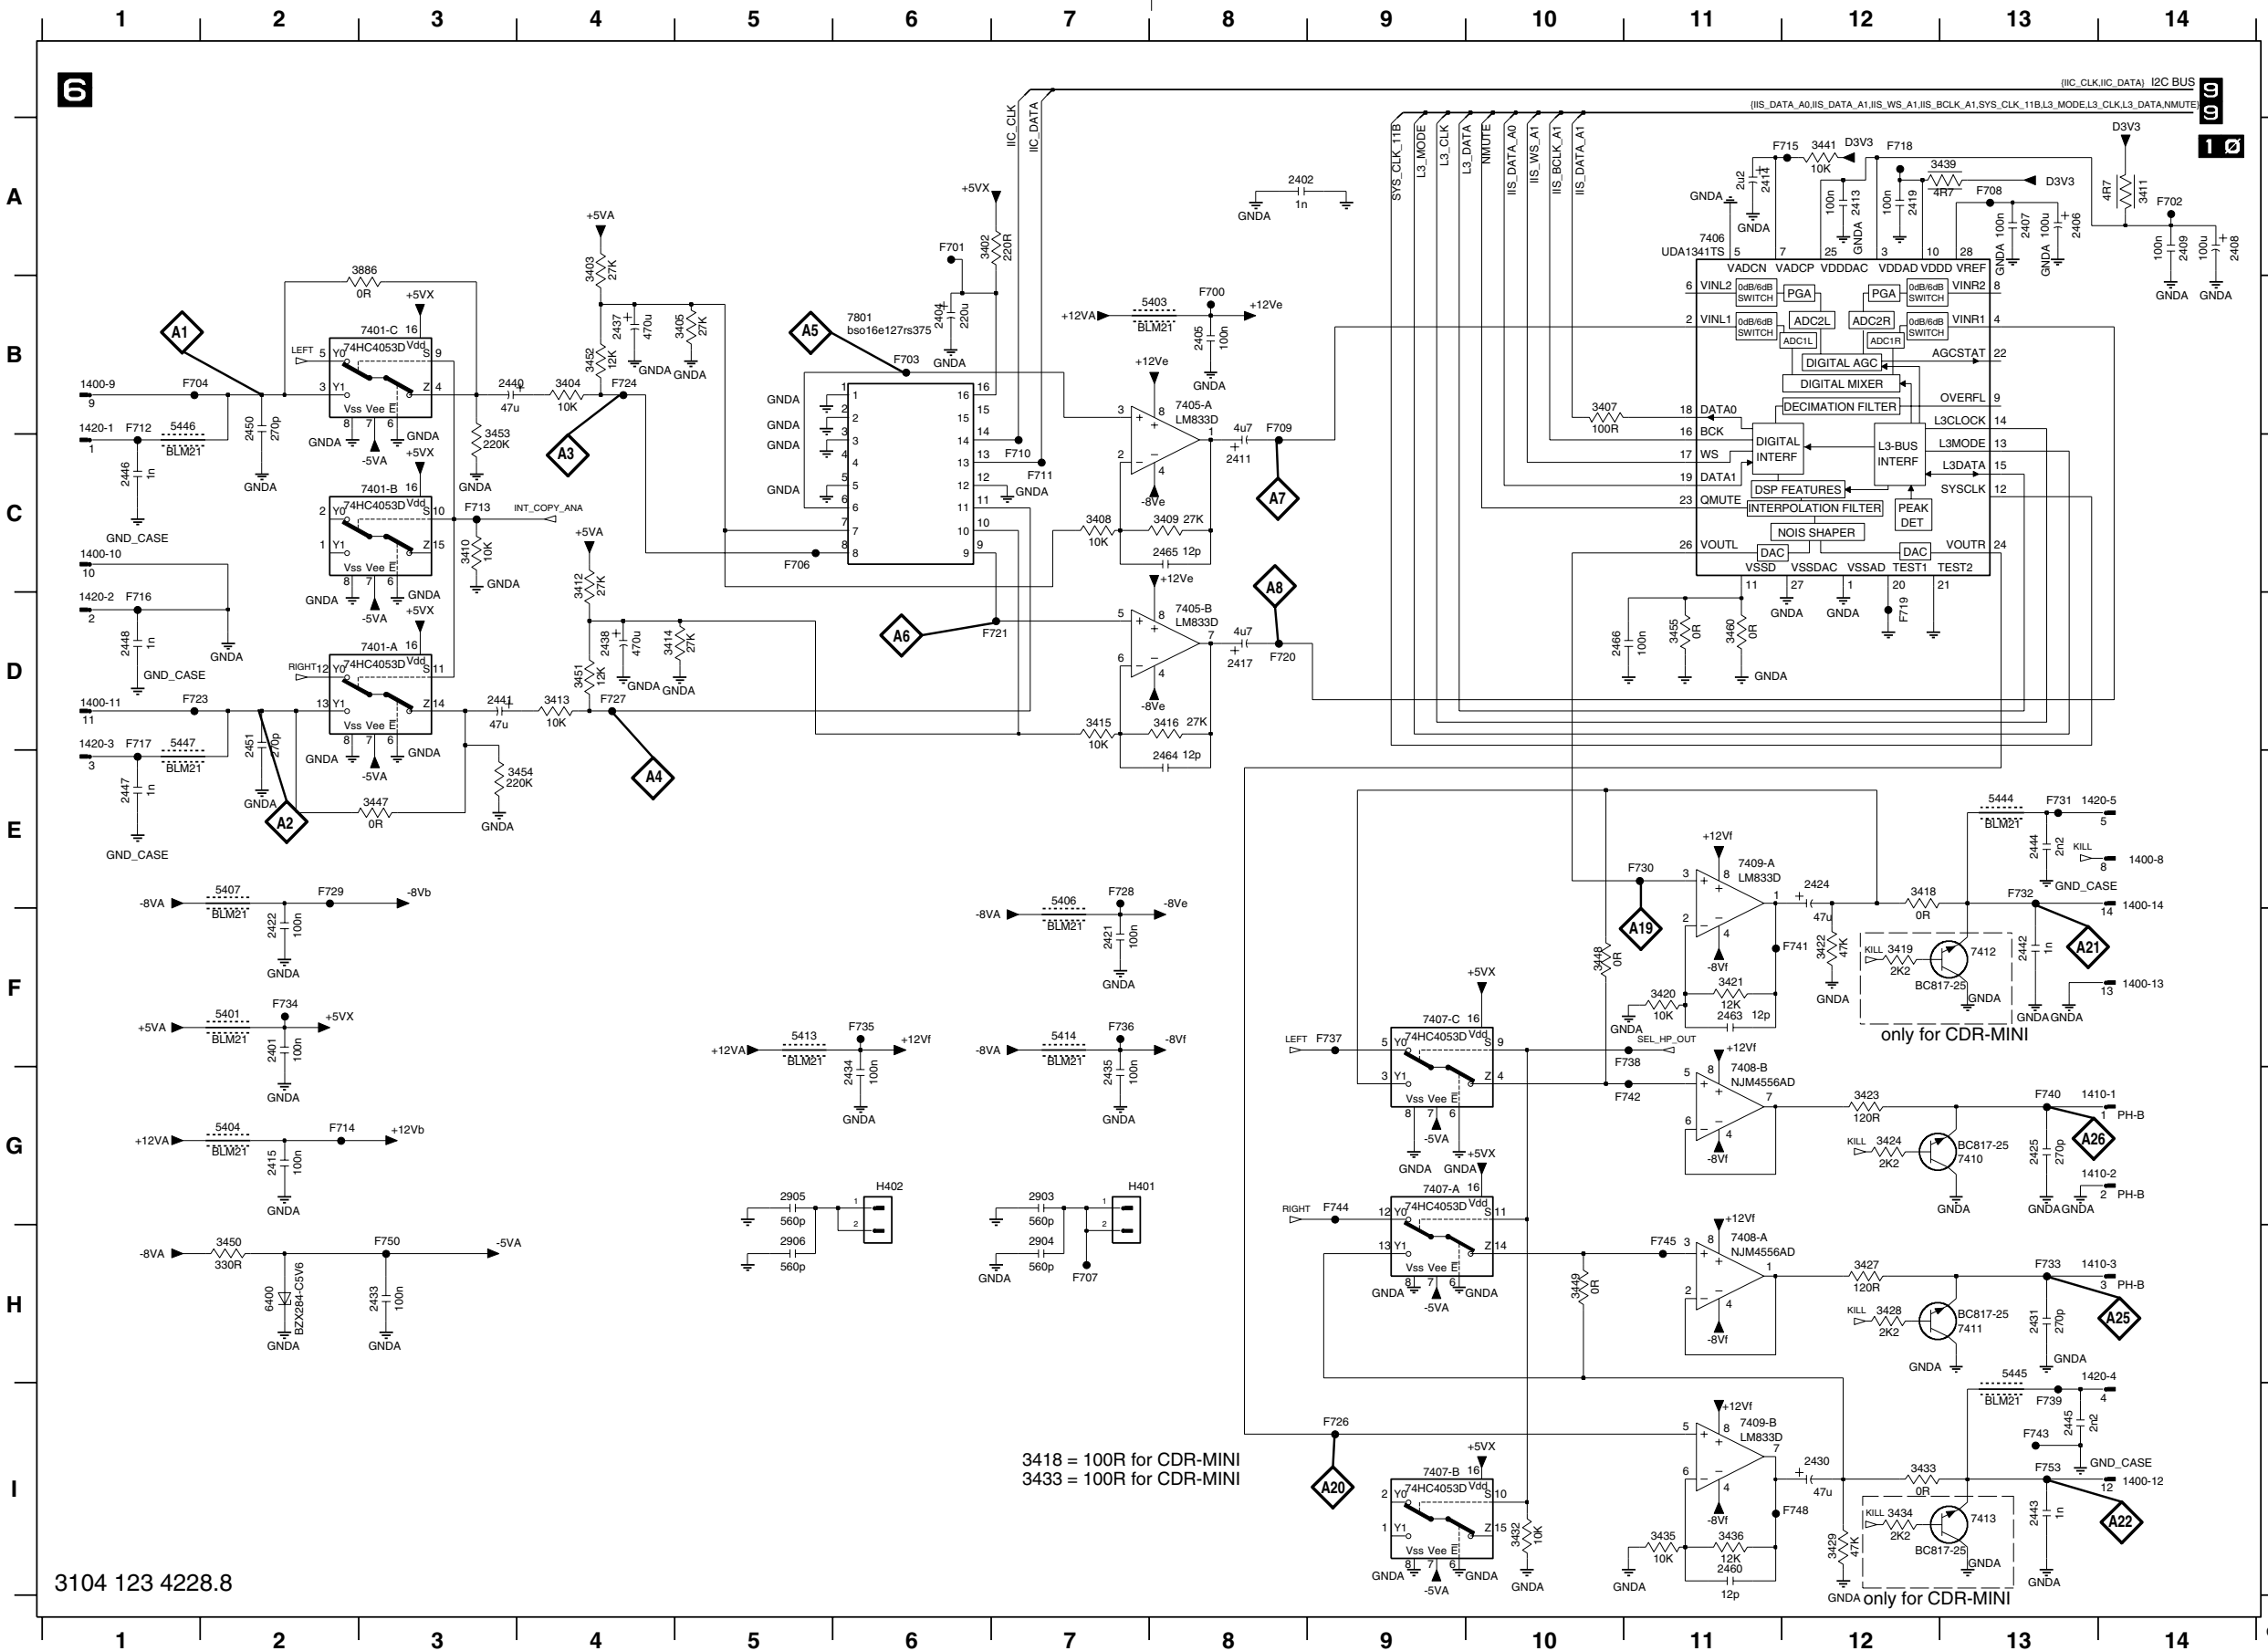


1400-10 C1	7405-B D8
1400-11 D1	7406 A11
1400-12 I14	7407-A G9
1400-13 F14	7407-B I9
1400-14 F14	7407-C F9
1400-8 E14	7408-A H11
1400-9 B1	7408-B G11
1410-1 G14	7409-A E11
1410-2 G14	7409-B I11
1410-3 H14	7410 G13
1420-1 B1	7411 H13
1420-2 D1	7412 F13
1420-3 D1	7413 I13
1420-4 H14	7801 B6
1420-5 E14	7700 B8
2401 F2	7701 A6
2402 A8	7702 A14
2404 B6	7703 B6
2405 B8	7704 B1
2406 A13	7706 C5
2407 A13	7707 H7
2408 A14	7708 A13
2409 A14	7709 B8
2411 C8	7710 C7
2413 A12	7711 C7
2414 A11	7712 B1
2415 G2	7713 C3
2417 D8	7714 G2
2419 A12	7715 A12
2421 F7	7716 D1
2422 F2	7717 D1
2424 E12	7718 A12
2425 G13	7719 D12
2430 I12	7720 D8
2431 H13	7721 D7
2433 H3	7723 D1
2434 G6	7724 B4
2435 G7	7726 B9
2437 B4	7727 D4
2438 D4	7728 E7
2440 B3	7729 E2
2441 D3	7730 E11
2442 F13	7731 E13
2443 I13	7732 I13
2444 E13	7733 H13
2445 I13	7734 F2
2446 C1	7735 F6
2447 E1	7736 F7
2448 D1	7737 F9
2450 B2	7738 F11
2451 D2	7739 I13
2460 I11	7740 G13
2463 F11	7741 F12
2464 E8	7742 G11
2465 C8	7743 I13
2466 D10	7744 G9
2903 G7	7745 H11
2904 H7	7748 I2
2905 G5	7750 H3
2906 H5	7753 I13
3402 A6	H401 G7
3403 A4	H402 G6
3404 B4	
3405 B5	
3407 B10	
3408 C7	
3409 C8	
3410 C3	
3411 A14	
3412 C4	
3413 D4	
3414 D4	
3415 D7	
3416 D8	
3418 E12	
3419 F12	
3420 F11	
3421 F11	
3422 F12	
3423 G12	
3424 G12	
3427 H12	
3428 H12	
3429 I12	
3432 I10	
3433 I12	
3434 I12	
3435 I11	
3436 I11	
3439 A13	
3441 A12	
3447 E3	
3448 F10	
3449 H10	
3450 H2	
3451 D4	
3452 B4	
3453 B3	
3454 E4	
3455 D11	
3460 D11	
3886 A3	
5401 F2	
5403 B8	
5404 G2	
5406 E7	
5407 E2	
5413 F5	
5414 F7	
5444 E13	
5445 H13	
5446 B1	
5447 D1	
6400 H2	
7401-A D3	
7401-B C3	
7401-C B3	
7405-A B8	


3104 123 4228.8

7 POWER PART

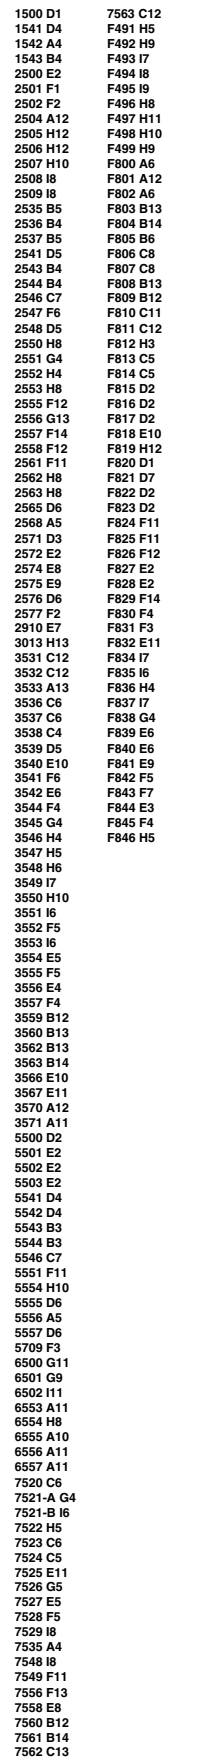


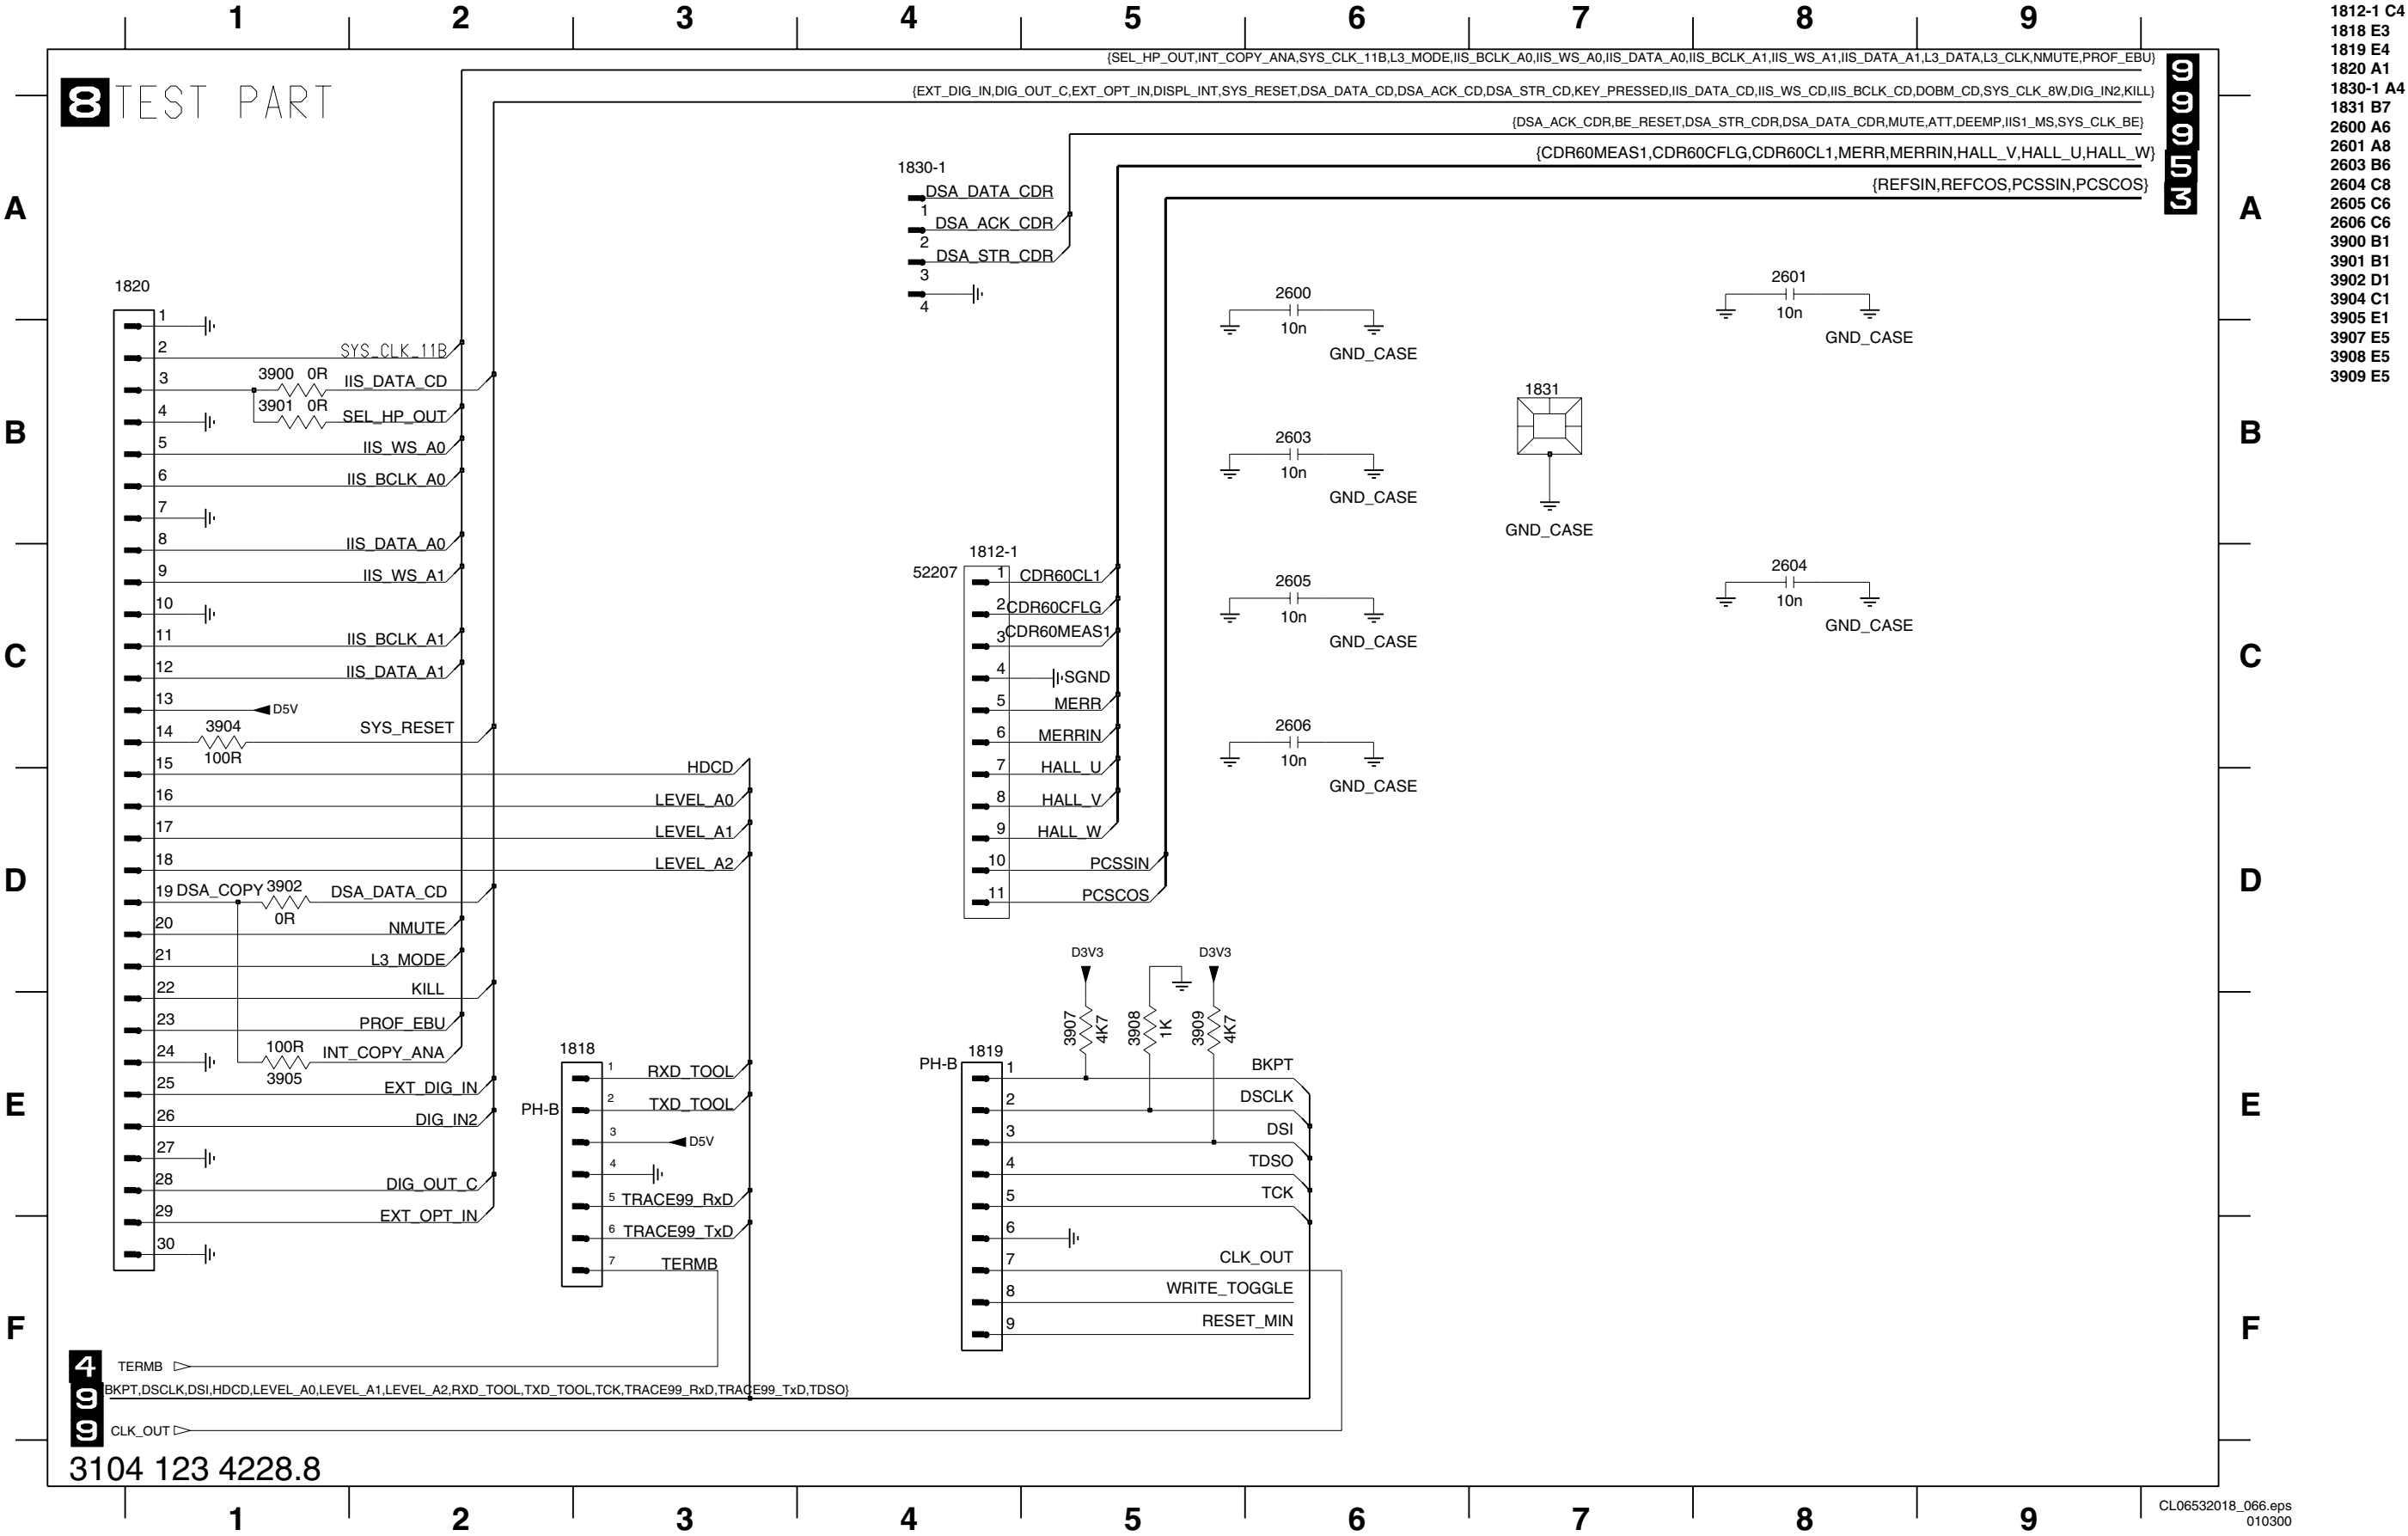

CDR MAIN BOARD - CIRCUIT DIAGRAM 9 : DASP MASTER PROCESSOR TESTPOINTS

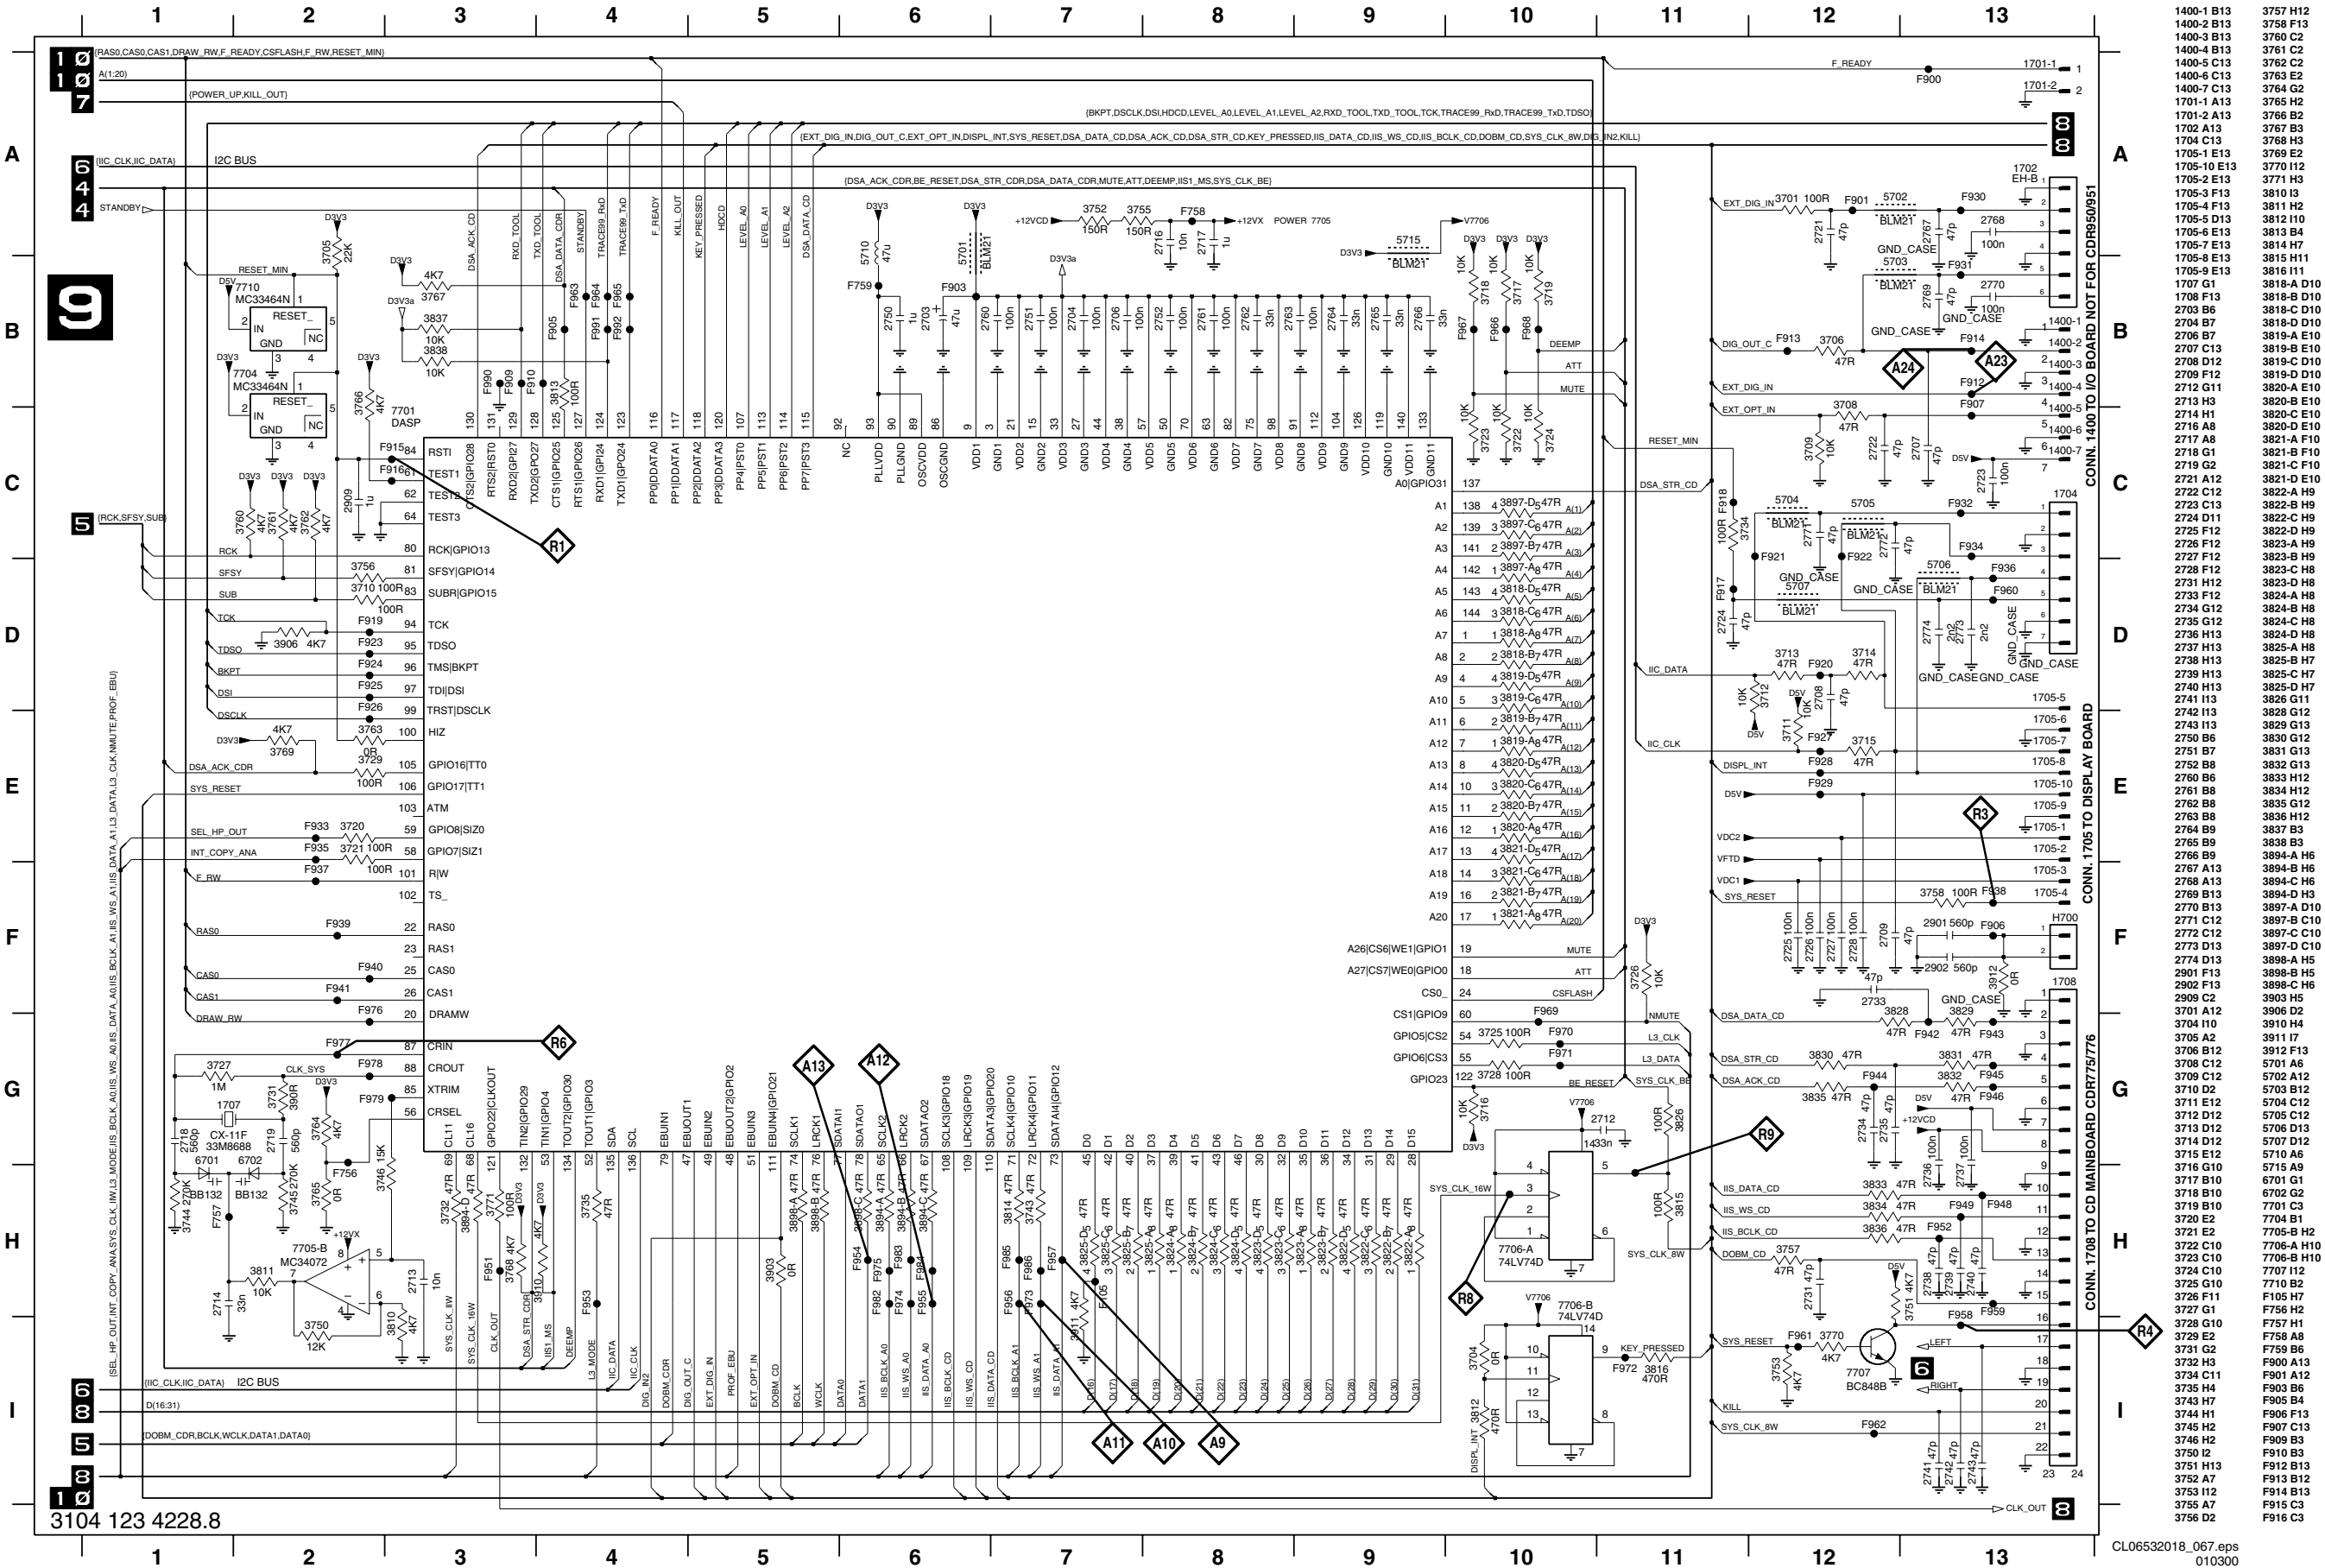

CDR MAIN BOARD - CIRCUIT DIAGRAM 10 : DASP FLASH & DRAM TESTPOINTS

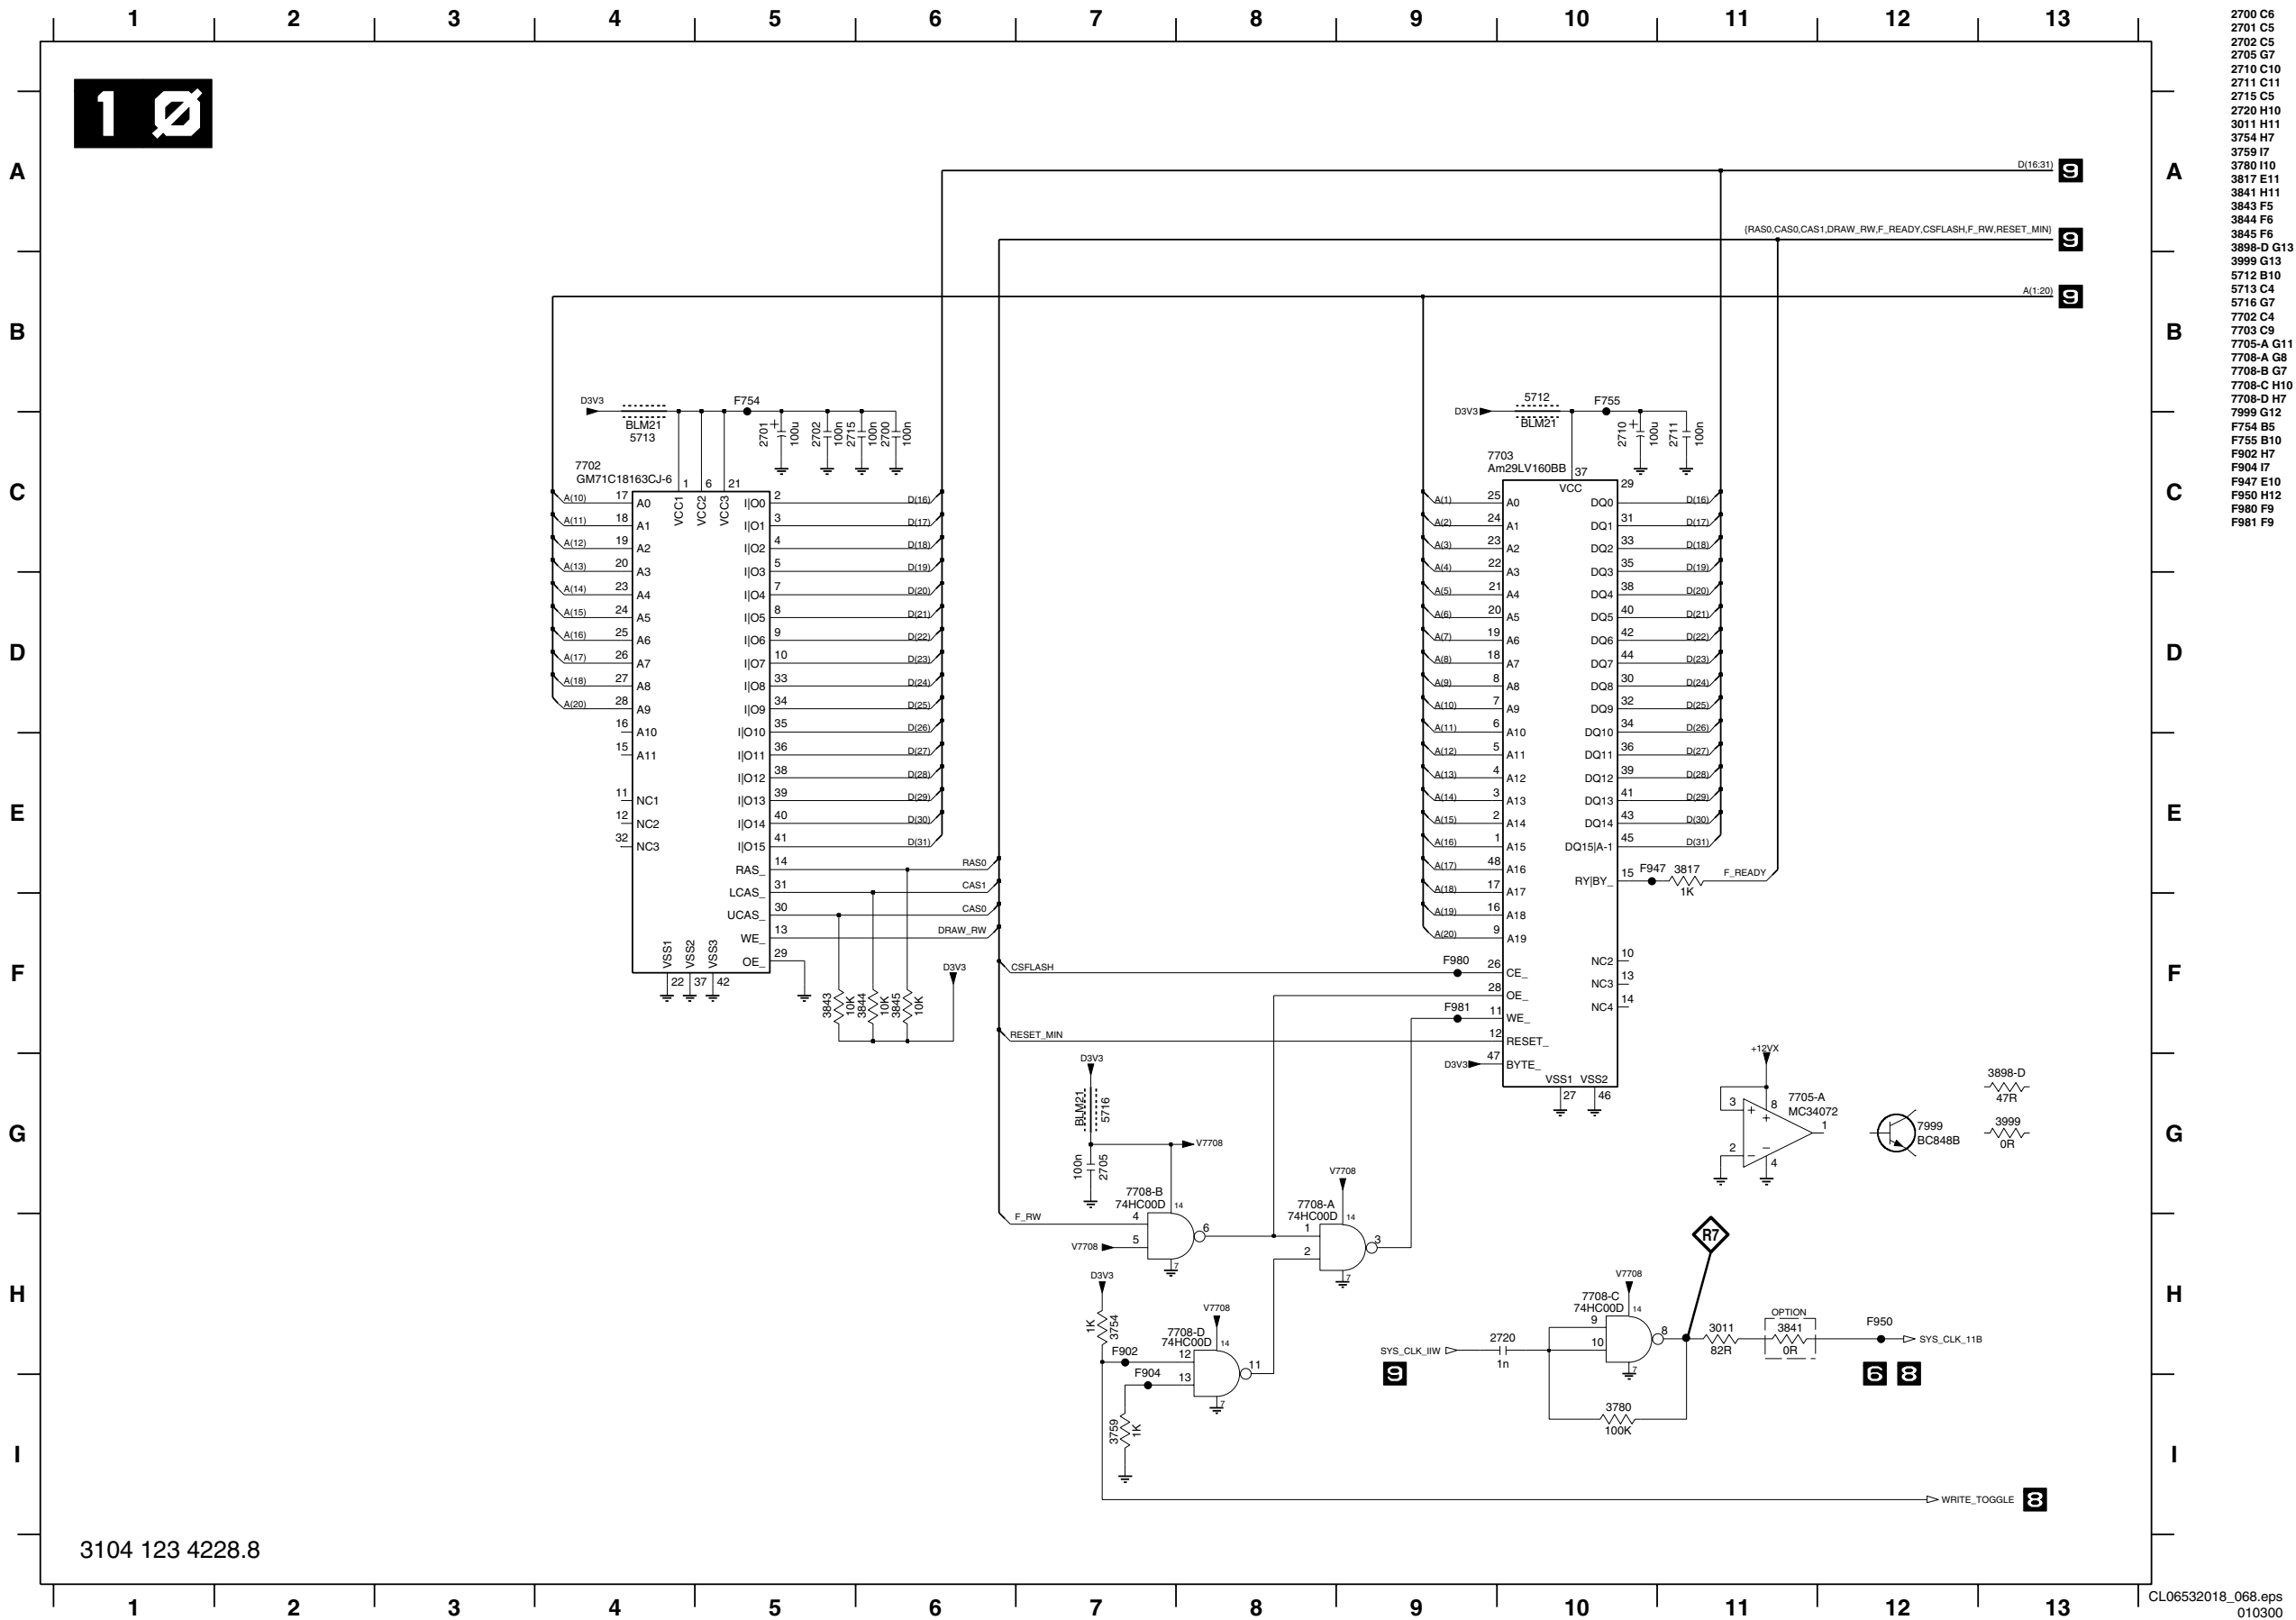

- 2700 C6
- 2701 C5
- 2702 C5
- 2705 G7
- 2710 C10
- 2711 C11
- 2715 C5
- 2720 H10
- 3011 H11
- 3754 H7
- 3759 I7
- 3780 I10
- 3817 E11
- 3841 H11
- 3843 F5
- 3844 F6
- 3845 F6
- 3898-D G13
- 3999 G13
- 5712 B10
- 5713 C4
- 5716 G7
- 7702 C4
- 7703 C9
- 7705-A G11
- 7708-A G8
- 7708-B G7
- 7708-C H10
- 7708-D H7
- 7999 G12
- F754 B5
- F755 B10
- F902 H7
- F904 I7
- F947 E10
- F950 H12
- F980 F9
- F981 F9


3104 123 4228.8

CL06532018_069.eps
010300

1000	2601	3291	B4	5446	A6
1001	2602	3292	B4	5447	A6
1002	2603	3293	B4	5448	A6
1003	2604	3294	B4	5449	A6
1004	2605	3295	B4	5450	A6
1005	2606	3296	B4	5451	A6
1006	2607	3297	B4	5452	A6
1007	2608	3298	B4	5453	A6
1008	2609	3299	B4	5454	A6
1009	2610	3300	B4	5455	A6
1010	2611	3301	B4	5456	A6
1011	2612	3302	B4	5457	A6
1012	2613	3303	B4	5458	A6
1013	2614	3304	B4	5459	A6
1014	2615	3305	B4	5460	A6
1015	2616	3306	B4	5461	A6
1016	2617	3307	B4	5462	A6
1017	2618	3308	B4	5463	A6
1018	2619	3309	B4	5464	A6
1019	2620	3310	B4	5465	A6
1020	2621	3311	B4	5466	A6
1021	2622	3312	B4	5467	A6
1022	2623	3313	B4	5468	A6
1023	2624	3314	B4	5469	A6
1024	2625	3315	B4	5470	A6
1025	2626	3316	B4	5471	A6
1026	2627	3317	B4	5472	A6
1027	2628	3318	B4	5473	A6
1028	2629	3319	B4	5474	A6
1029	2630	3320	B4	5475	A6
1030	2631	3321	B4	5476	A6
1031	2632	3322	B4	5477	A6
1032	2633	3323	B4	5478	A6
1033	2634	3324	B4	5479	A6
1034	2635	3325	B4	5480	A6
1035	2636	3326	B4	5481	A6
1036	2637	3327	B4	5482	A6
1037	2638	3328	B4	5483	A6
1038	2639	3329	B4	5484	A6
1039	2640	3330	B4	5485	A6
1040	2641	3331	B4	5486	A6
1041	2642	3332	B4	5487	A6
1042	2643	3333	B4	5488	A6
1043	2644	3334	B4	5489	A6
1044	2645	3335	B4	5490	A6
1045	2646	3336	B4	5491	A6
1046	2647	3337	B4	5492	A6
1047	2648	3338	B4	5493	A6
1048	2649	3339	B4	5494	A6
1049	2650	3340	B4	5495	A6
1050	2651	3341	B4	5496	A6
1051	2652	3342	B4	5497	A6
1052	2653	3343	B4	5498	A6
1053	2654	3344	B4	5499	A6
1054	2655	3345	B4	5500	A6
1055	2656	3346	B4	5501	A6
1056	2657	3347	B4	5502	A6
1057	2658	3348	B4	5503	A6
1058	2659	3349	B4	5504	A6
1059	2660	3350	B4	5505	A6
1060	2661	3351	B4	5506	A6
1061	2662	3352	B4	5507	A6
1062	2663	3353	B4	5508	A6
1063	2664	3354	B4	5509	A6
1064	2665	3355	B4	5510	A6
1065	2666	3356	B4	5511	A6
1066	2667	3357	B4	5512	A6
1067	2668	3358	B4	5513	A6
1068	2669	3359	B4	5514	A6
1069	2670	3360	B4	5515	A6
1070	2671	3361	B4	5516	A6
1071	2672	3362	B4	5517	A6
1072	2673	3363	B4	5518	A6
1073	2674	3364	B4	5519	A6
1074	2675	3365	B4	5520	A6
1075	2676	3366	B4	5521	A6
1076	2677	3367	B4	5522	A6
1077	2678	3368	B4	5523	A6
1078	2679	3369	B4	5	

[illegible]CL06532018_070.eps
010300[illegible]

CDR MAIN BOARD - BOTTOM VIEW : POWER PART TESTPOINTS

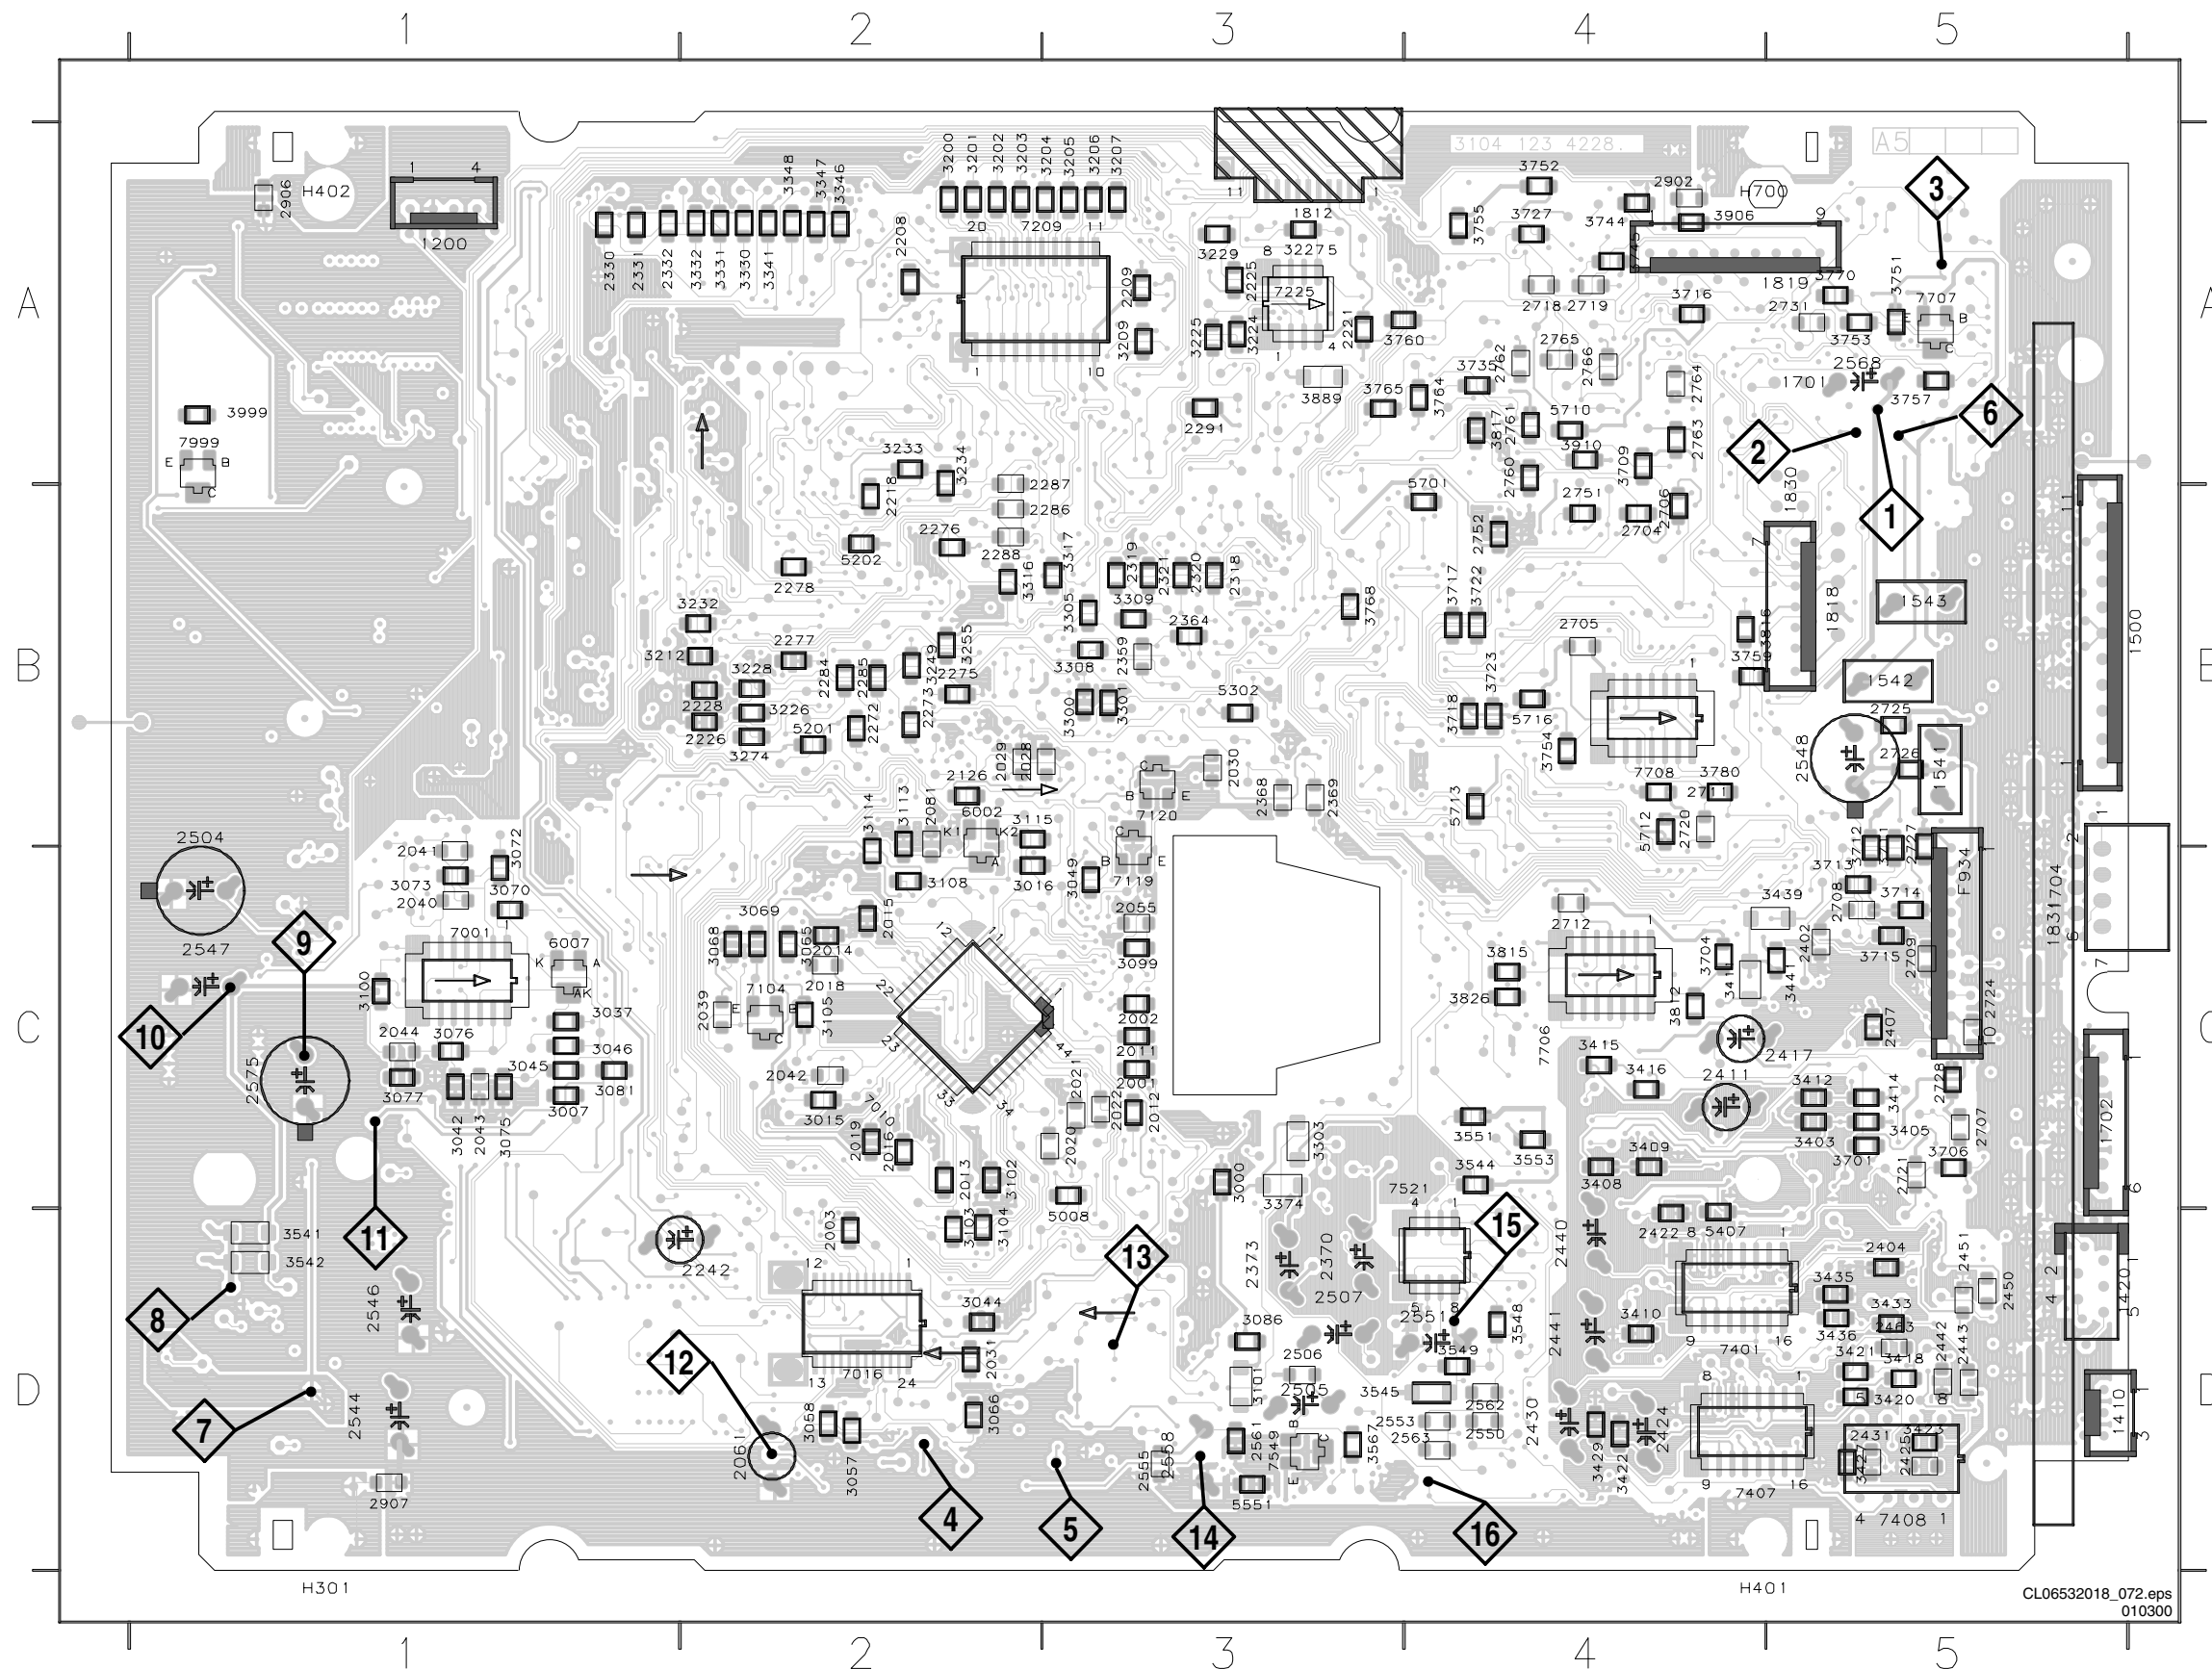


2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095	2096	2097	2098	2099	2100	2101	2102	2103	2104	2105	2106	2107	2108	2109	2110	2111	2112	2113	2114	2115	2116	2117	2118	2119	2120	2121	2122	2123	2124	2125	2126	2127	2128	2129	2130	2131	2132	2133	2134	2135	2136	2137	2138	2139	2140	2141	2142	2143	2144	2145	2146	2147	2148	2149	2150	2151	2152	2153	2154	2155	2156	2157	2158	2159	2160	2161	2162	2163	2164	2165	2166	2167	2168	2169	2170	2171	2172	2173	2174	2175	2176	2177	2178	2179	2180	2181	2182	2183	2184	2185	2186	2187	2188	2189	2190	2191	2192	2193	2194	2195	2196	2197	2198	2199	2200	2201	2202	2203	2204	2205	2206	2207	2208	2209	2210	2211	2212	2213	2214	2215	2216	2217	2218	2219	2220	2221	2222	2223	2224	2225	2226	2227	2228	2229	2230	2231	2232	2233	2234	2235	2236	2237	2238	2239	2240	2241	2242	2243	2244	2245	2246	2247	2248	2249	2250	2251	2252	2253	2254	2255	2256	2257	2258	2259	2260	2261	2262	2263	2264	2265	2266	2267	2268	2269	2270	2271	2272	2273	2274	2275	2276	2277	2278	2279	2280	2281	2282	2283	2284	2285	2286	2287	2288	2289	2290	2291	2292	2293	2294	2295	2296	2297	2298	2299	2300	2301	2302	2303	2304	2305	2306	2307	2308	2309	2310	2311	2312	2313	2314	2315	2316	2317	2318	2319	2320	2321	2322	2323	2324	2325	2326	2327	2328	2329	2330	2331	2332	2333	2334	2335	2336	2337	2338	2339	2340	2341	2342	2343	2344	2345	2346	2347	2348	2349	2350	2351	2352	2353	2354	2355	2356	2357	2358	2359	2360	2361	2362	2363	2364	2365	2366	2367	2368	2369	2370	2371	2372	2373	2374	2375	2376	2377	2378	2379	2380	2381	2382	2383	2384	2385	2386	2387	2388	2389	2390	2391	2392	2393	2394	2395	2396	2397	2398	2399	2400	2401	2402	2403	2404	2405	2406	2407	2408	2409	2410	2411	2412	2413	2414	2415	2416	2417	2418	2419	2420	2421	2422	2423	2424	2425	2426	2427	2428	2429	2430	2431	2432	2433	2434	2435	2436	2437	2438	2439	2440	2441	2442	2443	2444	2445	2446	2447	2448	2449	2450	2451	2452	2453	2454	
------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	--

CL06532018_073.eps
010300[illegible]

2801	12	A3	2720	B4	3333	A2	5571	B4
2802	01	D3	2721	C5	3334	A2	5712	B4
2803	02	D3	2722	C5	3335	A2	7136	B4
2804	03	D3	2723	C5	3336	A2	6002	B4
2805	04	D3	2724	C5	3337	A2	6004	B4
2806	05	D3	2725	C5	3338	A2	7001	C1
2807	06	D3	2726	C5	3339	A2	7001	C1
2808	07	D3	2727	C5	3340	A2	7016	C3
2809	08	D3	2728	C5	3341	A2	7016	C3
2810	09	D3	2729	C5	3342	A2	7104	C3
2811	10	D3	2730	C5	3343	A2	7120	A5
2812	11	D3	2731	C5	3344	A2	7225	A5
2813	12	D3	2732	C5	3345	A2	7401	D3
2814	13	D3	2733	C5	3346	A2	7407	D3
2815	14	D3	2734	C5	3347	A2	7521	C4
2816	15	D3	2735	C5	3348	A2	7521	C4
2817	16	D3	2736	C5	3349	A2	7706	C5
2818	17	D3	2737	C5	3350	A2	7706	C5
2819	18	D3	2738	C5	3351	A2	7999	B4
2820	19	D3	2739	C5	3352	A2	7999	B4
2821	20	D3	2740	C5	3353	A2	7999	B4
2822	21	D3	2741	C5	3354	A2	7999	B4
2823	22	D3	2742	C5	3355	A2	7999	B4
2824	23	D3	2743	C5	3356	A2	7999	B4
2825	24	D3	2744	C5	3357	A2	7999	B4
2826	25	D3	2745	C5	3358	A2	7999	B4
2827	26	D3	2746	C5	3359	A2	7999	B4
2828	27	D3	2747	C5	3360	A2	7999	B4
2829	28	D3	2748	C5	3361	A2	7999	B4
2830	29	D3	2749	C5	3362	A2	7999	B4
2831	30	D3	2750	C5	3363	A2	7999	B4
2832	31	D3	2751	C5	3364	A2	7999	B4
2833	32	D3	2752	C5	3365	A2	7999	B4
2834	33	D3	2753	C5	3366	A2	7999	B4
2835	34	D3	2754	C5	3367	A2	7999	B4
2836	35	D3	2755	C5	3368	A2	7999	B4
2837	36	D3	2756	C5	3369	A2	7999	B4
2838	37	D3	2757	C5	3370	A2	7999	B4
2839	38	D3	2758	C5	3371	A2	7999	B4
2840	39	D3	2759	C5	3372	A2	7999	B4
2841	40	D3	2760	C5	3373	A2	7999	B4
2842	41	D3	2761	C5	3374	A2	7999	B4
2843	42	D3	2762	C5	3375	A2	7999	B4
2844	43	D3	2763	C5	3376	A2	7999	B4
2845	44	D3	2764	C5	3377	A2	7999	B4
2846	45	D3	2765	C5	3378	A2	7999	B4
2847	46	D3	2766	C5	3379	A2	7999	B4
2848	47	D3	2767	C5	3380	A2	7999	B4
2849	48	D3	2768	C5	3381	A2	7999	B4
2850	49	D3	2769	C5	3382	A2	7999	B4
2851	50	D3	2770	C5	3383	A2	7999	B4
2852	51	D3	2771	C5	3384	A2	7999	B4
2853	52	D3	2772	C5	3385	A2	7999	B4
2854	53	D3	2773	C5	3386	A2	7999	B4
2855	54	D3	2774	C5	3387	A2	7999	B4
2856	55	D3	2775	C5	3388	A2	7999	B4
2857	56	D3	2776	C5	3389	A2	79	

CL06532018_075.eps
010300

5

[illegible]