

SERVICE MANUAL

HI-COMPACT STEREO

C-5600D

FV

CONTENTS

1. SPECIFICATIONS	3
2. SCHEMATIC DIAGRAMS, P.C. BOARD and PARTS LISTS	
2.1 Circuit Connection Diagram	5
2.2 Tuner Assembly (W35-028)	9
2.3 Equalizer Amplifier Assembly (W15-065)	16
2.4 Switch Circuit Assembly (W15-072)	18
2.5 Head Phone Amplifier Assembly (W15-057)	20
2.6 Control Amplifier Assembly (W22-003)	22
2.7 Power Amplifier Assembly (W36-006)	25
2.8 Power Supply Assembly (W16-016)	30
3. PARTS LOCATION	
3.1 Front Panel	32
3.2 Rear Panel	33
3.3 Assembly Board	34
3.4 Speaker System	35
4. SPEAKER CONNECTION	36
TURNTABLE ASSEMBLY and PARTS LISTS of C-5600D/FV	
1. EXPLODED VIEW	38
2. AUTO-RETURN ASSEMBLY	41
3. TONEARM ASSEMBLY	44
4. PU-LINKING PLATE ASSEMBLY	44
5. CENTER SHAFT BEARING ASSEMBLY	45
6. ELEVATION SHAFT GUIDE PIN ASSEMBLY	45
7. SPEED SELECTOR ASSEMBLY	46
8. FUNCTION LEVER ASSEMBLY	47
9. ELEVATION ASSEMBLY	48
10. PHONO MOTOR ASSEMBLY	49
11. CIRCUIT BOARD ASSEMBLY	50
12. SPEAKER SYSTEM PACKING	51
13. CONTROL CENTER PACKING	52
14. DIAL CORD STRINGING	55
15. 8P-PLUG CONNECTIONS	55

1. SPECIFICATIONS

SEMICONDUCTORS

FET	1
Transistors	53
Diodes, etc.	30

AUDIO SECTION

2-channel, 2-way multi-amplifier system

Music Power Output:	HIGH Range	30W (IHF rating)
	LOW Range	30W (IHF rating)

Total Music Power Output: 60W

Frequency Response: ± 3 dB, from 20Hz to 60kHz (AUX)

Hum & Noise Ratio: PHONO MAG better than 80dB
AUX better than 95dB
(at volume control max., tone control flat, IHF rating)

Input Impedance & Sensitivity:

(at 1kHz, rated output) PHONO MAG: 2mV 50k Ω

TAPE MONITOR: 160mV 100k Ω

AUX: 160mV 100k Ω

Output Terminals & Jacks:

Output connector (8P)

Stereo Headphones Jack

Tape Recording Jack

Tape Rec/P.B. Connector (DIN type)

Preamplifier Output Jack

Bass Control: -13dB to +14dB (at 50Hz)

Treble Control: -10dB to +9dB (at 10kHz)

Loudness Contour: Switchable to ON-OFF, +12dB at 50Hz, +5dB at 10kHz, with VOLUME control set at -40dB

FM SECTION

Frequency Range: 87.5 to 108MHz

IHF Sensitivity: 2.5 μ V

Image Rejection: 55dB (at 98MHz)

Muting: Switchable to ON-OFF

Antenna Input: 300 Ω , balanced

FM MULTIPLEX SECTION

Circuitry: Time-switching type demodulator, FM Mono Stereo Automatic Selection

Channel Separation: 35dB (at 1kHz)

AM SECTION

Frequency Range: 525 to 1605kHz

IHF Sensitivity: 10 μ V

Image Rejection: 47dB (at 1000kHz)

Antenna Input: Built-in ferrite loopstick antenna

TURNTABLE

Belt-driven, full-automatic system (with auto-cut, auto-lead-in, repeat and V-shaped stylus protector)

Cartridge (PC-35)

Induced magnet type

Diamond stylus (tipped: 0.5mil); PN-35 for replacement use

Stylus pressure range: 2 to 3g

Frequency response: 10 to 25,000Hz

Tonearm

Static balance system, pipe arm

Cartridge attaching dimensions: EIA and JIS standards

Phono motor

4-pole hysteresis synchronous type

Speed: 2 speeds (33-1/3 and 45 rpm)

Turntable platter: 12-inch(30cm) aluminum die-cast

Wow: 0.1%

Synchronizing voltage: 100V or higher

Working voltage: 120V AC, 50 or 60Hz (capstan exchangeable)

Power consumption 12W

RECEIVER AND TURNTABLE SECTION

Walnut enclosure oil finished

External dimensions: 8-1/18" (H) x 21-11/16" (W) x 14-3/16" (D) (including dust cover)

Weight: 33 lb (including receiver and turntable)

SPEAKER SYSTEM

Enclosure:

Closed type surface: oil finished

Speakers:

2-way system

Low range 8" Woofer

High range 2-1/2" Tweeter

Impedance: 8 Ω

Frequency response: 35 to 20,000Hz

External dimensions: 22" (H) x 12-3/16" (W) x 9-3/4" (D)

Weight: 18lb 14oz

Total weight: 70lb 7oz

MISCELLANEOUS


Power requirements: 110V, 120V, 130V, 220V and 240V
50 or 60Hz

Power consumption: 85W (Receiver and Turntable)

ACCESSORIES

Indoor AM lead antenna	1
T-type FM antenna	1
Polishing cloth	1
Pin-plug	4
1A Fuse	2
0.5A Fuse	1
Operating instructions	1
For turntable use	
EP adaptor	1
Lubricant	1
Screwdriver for unpacking	1
Small screwdriver	1
Capstan	1
Rubber bush	1


Specifications and the design subject to possible modification without notice due to improvements.

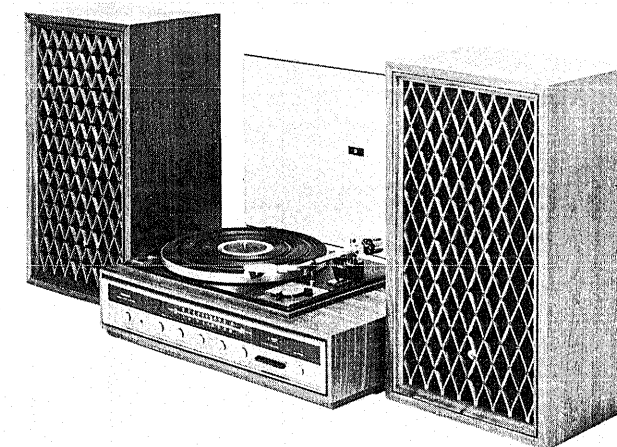

2. SCHEMATIC DIAGRAMS P.C.BOARD AND PARTS LISTS

2.1 CIRCUIT CONNECTION DIAGRAM

C-5600D

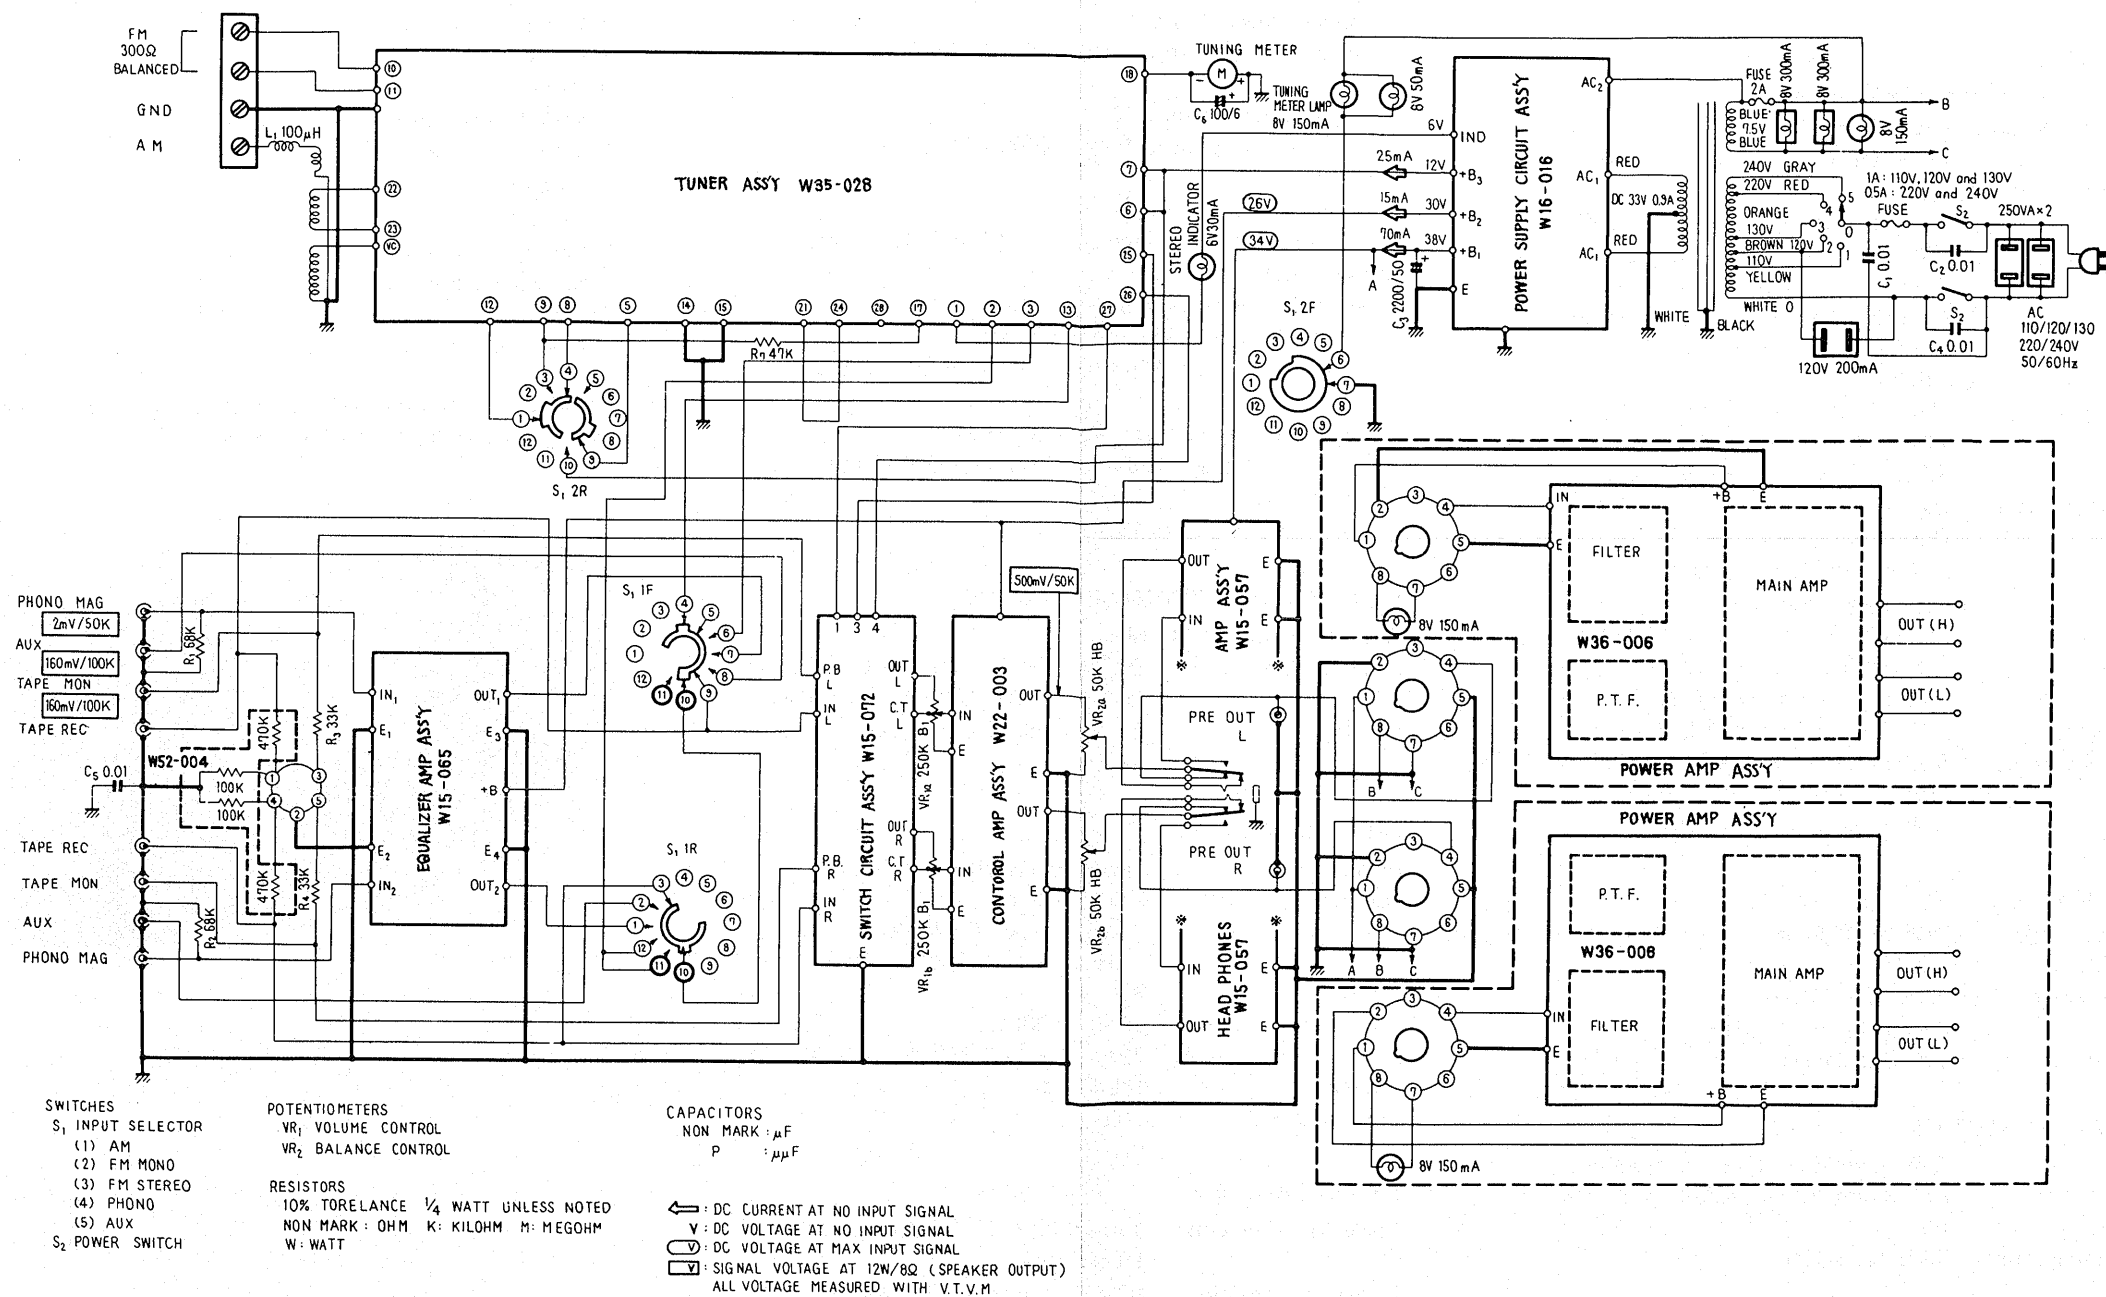

MISCELLANEOUS PARTS LIST

CAPACITORS

- CAPACITORS: IN μF UNLESS OTHERWISE NOTED p: pF
- RESISTORS: IN Ω , $\frac{1}{2}\text{W}$ UNLESS OTHERWISE NOTED k: k Ω , M: M Ω

Symbol	Description	Part No.	
C1	Ceramic 0.01 DC 1.4kV	C43-003-0	
C2	Ceramic 0.01 DC 1.4kV	C43-003-0	
C3	Electrolytic 2200 50V	C52-078-0	
C4	Ceramic 0.01 DC 1.4kV	C43-003-0	
C5	Ceramic 0.01 50V	CKDYF 103Z 50	
C6	Electrolytic 100 6V	CEA 101P 6	

RESISTORS

Symbol	Description	Part No.	
VR1	Volume control 250k Ω -B1	C82-042-0	
VR2	Balance control 50k Ω -HB	C82-041-0	
R1	Carbon film 68k	RD $\frac{1}{4}$ PS 683KNL	
R2	Carbon film 68k	RD $\frac{1}{4}$ PS 683KNL	
R3	Carbon film 33k	RD $\frac{1}{4}$ PS 333KNL	
R4	Carbon film 33k	RD $\frac{1}{4}$ PS 333KNL	

TRANSFORMER AND COILS

Symbol	Description	Part No.	
T1	Power transformer	T52-144-B	
T2	Ferrite antenna coil	T42-022-C	
L1	Choke coil	T24-030-0	

SELECTORS

Symbol	Description	Part No.	
S1	Selector switch	S13-021-C	
S2	Power switch	S11-016-A	
S3	Line voltage selector	S11-018-0	


OTHERS

Symbol	Description	Part No.	
	Tuner assembly	W35-028-C	
	Equalizer amplifier assembly	W15-065-B	
	Control amplifier assembly	W22-003-0	
	Headphone amplifier assembly	W15-057-0	
	Switch circuit assembly	W15-072-0	
	Power supply assembly	W16-016-B	
	Power amplifier assembly	W36-006-A	
	Front panel	KNF-003-B	
	Dial pulley	M42-041-F	
	Dial scale	A33-130-0	


Symbol	Description	Part No.	
	Tuning meter assembly	A91-015-0	
	Stereo indicator bracket	A62-049-B	
	Power lamp bracket	A62-059-A	
	Knob(power, bass, treble, balance, volume, selector)	A12-154-A	
	Knob (tuning)	A12-156-A	
	Push knob (demi switch)	A19-078-0	
	Input terminal 6P socket	K22-013-0	
	Output terminal 2P socket	K21-009-D	
	Antenna terminal 4P	K11-018-0	
	AC outlet	K82-007-A	
	Headphone jack	K72-020-0	
	Connector socket 8P	K24-002-0	
	Connector socket (DIN)	K93-003-B	

SPEAKER SYSTEM

Symbol	Description	Part No.	
	Wooden grille (with grille net)	A66-008-A	
	Pilot lamp plate	A45-031-B	
	Speaker cord (8P-plug)	D53-021-B	
	Speaker cord holder	M63-023-B	
	Woofers	20-32F	
	Tweeter	66-47F	
	Pilot lamp 8V 150mA	E22-002-0	
	Power amplifier assembly	W36-006-A	

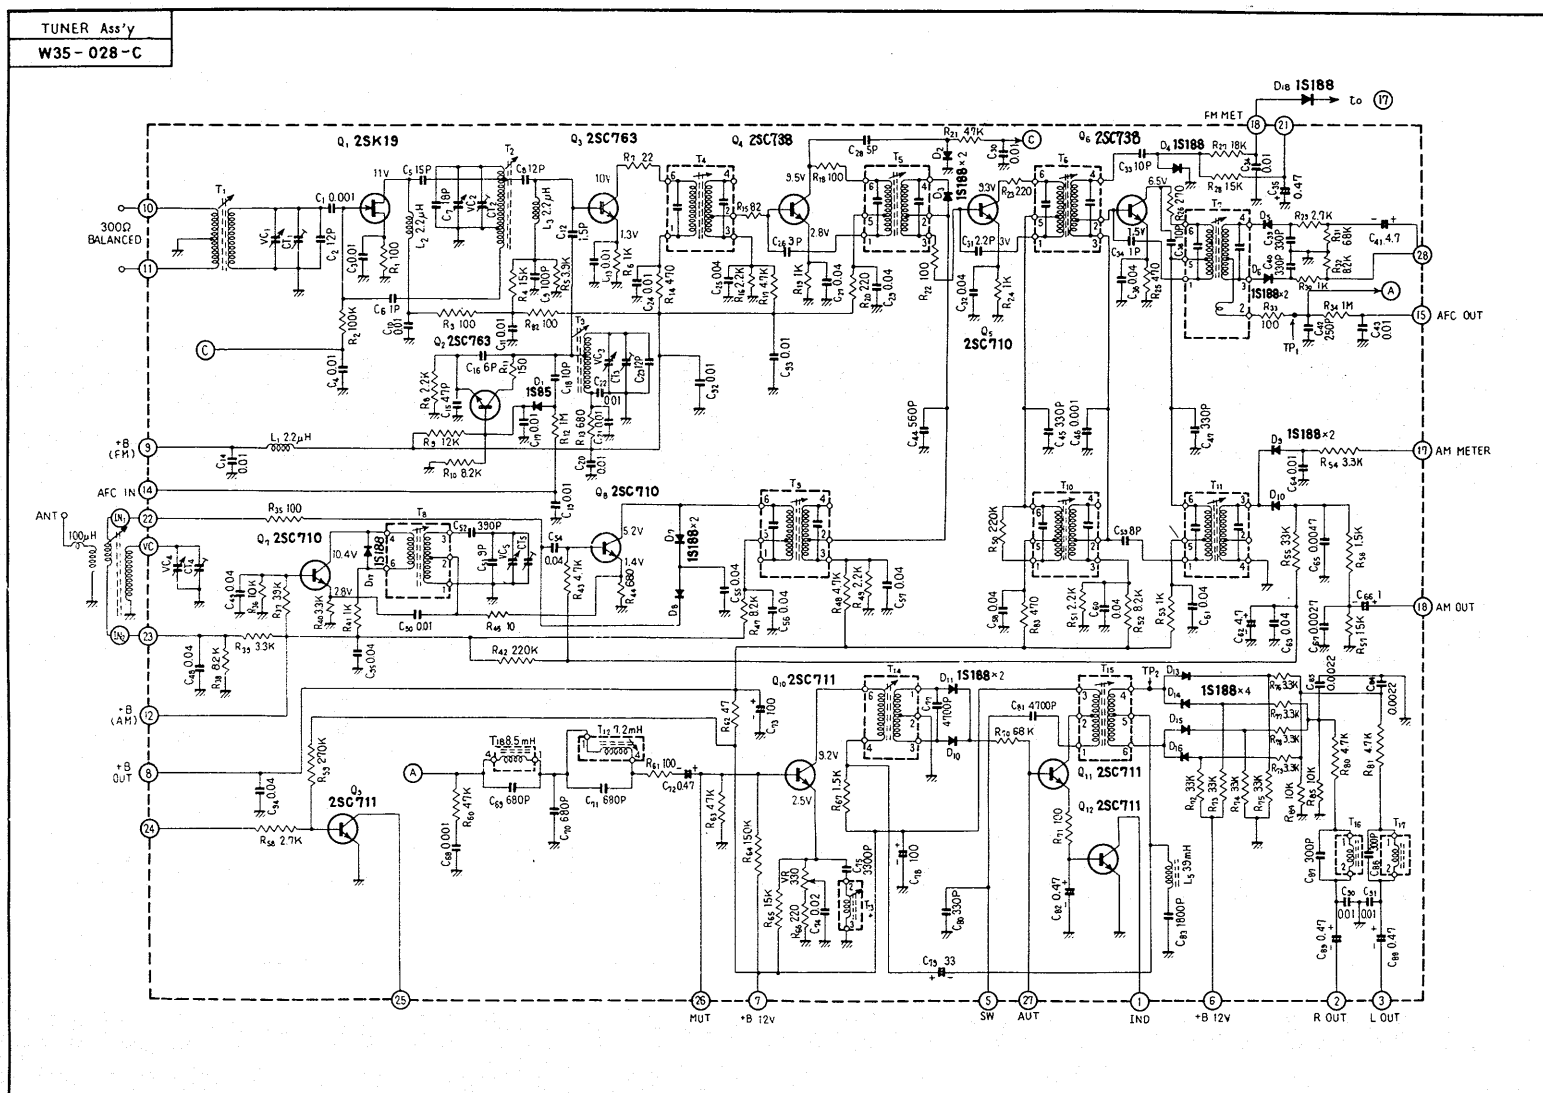


Foil Side

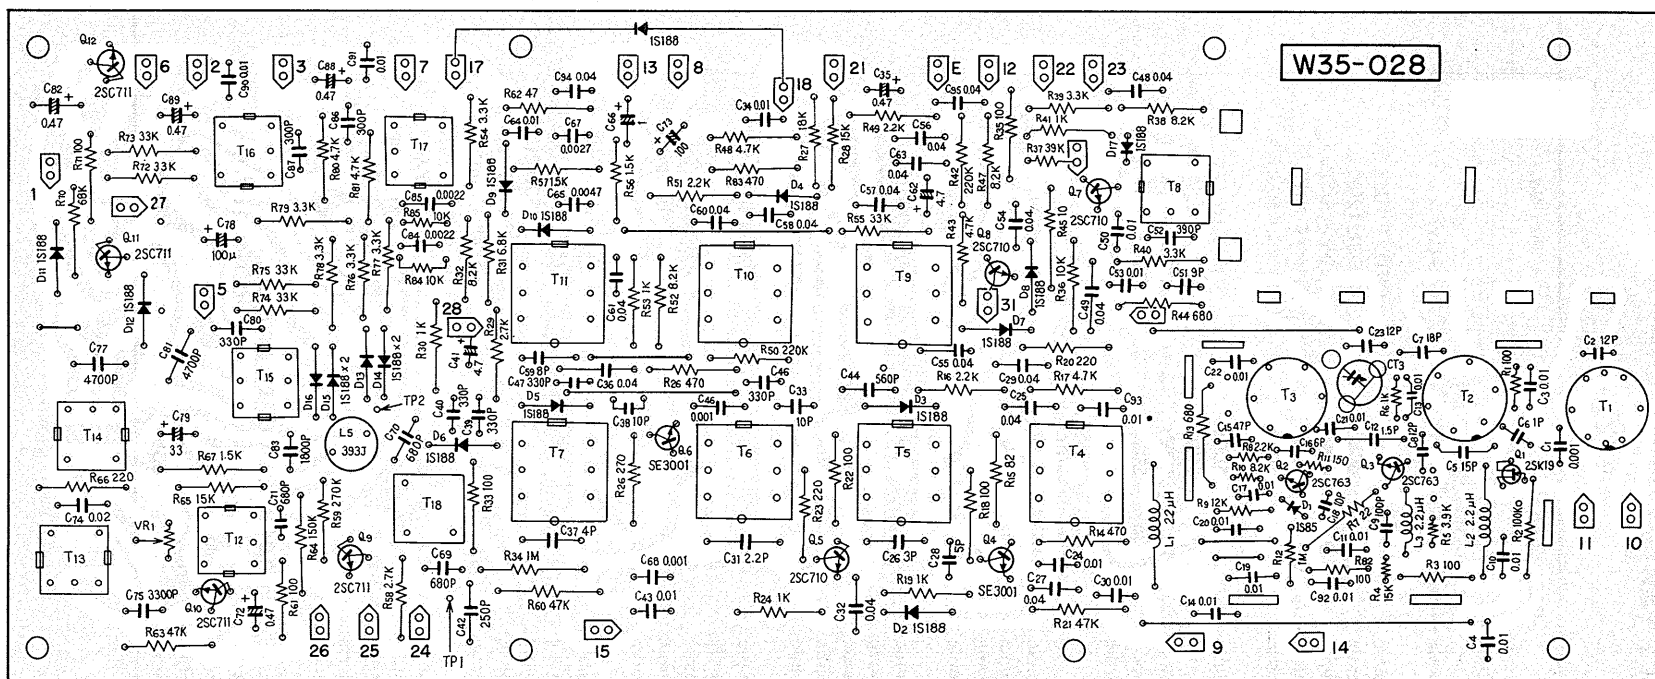

2SC763
2SC710
2SC711
2SC738

2SK19



TUNER ASSEMBLY PARTS LIST

CAPACITORS

Symbol	Description			Part No.
VC	Tuning capacitors			C64-042-B
CT3	Ceramic trimmer			C43-007-A
C1	Ceramic	0.001	50V	CKDYF 102Z 50
C2	Ceramic	12p	50V	CCDSL 120K 50
C3	Ceramic	0.01	50V	CKDYF 103Z 50
C4	Ceramic	0.01	50V	CKDYF 103Z 50
C5	Ceramic	15p	50V	CCDSL 150K 50
C6	Ceramic	1	500V	CGB 010K 500
C7	Ceramic	18p	50V	CCDSL 180K 50
C8	Ceramic	12p	50V	CCDSL 120K 50
C9	Ceramic	100p	50V	CCDSL 101K 50
C10	Ceramic	0.01	50V	CKDYF 103Z 50
C11	Ceramic	0.01	50V	CKDYF 103Z 50
C12	Ceramic	1.5	500V	CGB 1R5K 500
C13	Ceramic	0.01	50V	CKDYF 103Z 50
C14	Ceramic	0.01	50V	CKDYF 103Z 50
C15	Ceramic	47p	50V	CCDSL 470K 50
C16	Ceramic	6p	50V	CCDTJ 060D 50
C17	Ceramic	0.01	50V	CKDYF 103Z 50
C18	Ceramic	10p	50V	CCDTJ 100F 50
C19	Ceramic	0.01	50V	CCDYF 103Z 50
C20	Ceramic	0.01	50V	CKDYF 103Z 50
C21	Ceramic	0.01	50V	CKDYB 103K 50
C22	Ceramic	0.01	50V	CKDYB 103K 50
C23	Ceramic	12p	50V	CCDTJ 120K 50
C24	Ceramic	0.01	50V	CKDYF 103Z 50
C25	Ceramic	0.04	50V	CKDYF 403Z 50
C26	Ceramic	3p	50V	CCDSL 030D 50
C27	Ceramic	0.04	50V	CKDYF 403Z 50
C28	Ceramic	5p	50V	CCDSL 050D 50
C29	Ceramic	0.04	50V	CKDYF 403Z 50
C30	Ceramic	0.01	50V	CKDYF 103Z 50
C31	Ceramic	2.2	500V	CGB 2R2K 500
C32	Ceramic	0.047	25V	CKDBC 473Z 25
C33	Ceramic	10p	50V	CCDSL 100K 50
C34	Ceramic	0.01	50V	CKDYF 103Z 50
C35	Electrolytic	0.47	50V	CEA R47P 50
C36	Ceramic	0.047	25V	CKDBC 473Z 25
C37	Ceramic	4p	50V	CCDSL 040D 50
C38	Ceramic	10p	50V	CCDSL 100D 50
C39	Ceramic	330p	50V	CKDYB 331K 50
C40	Ceramic	330p	50V	CKDYB 331K 50

Symbol	Description			Part No.
C41	Electrolytic	4.7	25V	CEA 4R7P 25
C42	Ceramic	250p	50V	CCDSL 251K 50
C43	Ceramic	0.01	50V	CKDYF 103Z 50
C44	Ceramic	560p	50V	CKDYB 561K 50
C45	Ceramic	330p	50V	CKDYB 331K 50
C46	Ceramic	0.001	50V	CKDYB 102K 50
C47	Ceramic	330p	50V	CKDYB 331K 50
C48	Ceramic	0.04	50V	CKDYF 403Z 50
C49	Ceramic	0.04	50V	CKDYF 403Z 50
C50	Mylar	0.01	50V	CQMA 103K 50
C51	Ceramic	9p	50V	CCDSL 090D 50
C52	Styrol	390p	50V	COSA 391K 50
C53	Mylar	0.01	50V	CQMA 103K 50
C54	Ceramic	0.04	50V	CKDYF 403Z 50
C55	Ceramic	0.04	50V	CKDYF 403Z 50
C56	Ceramic	0.04	50V	CKDYF 403Z 50
C57	Ceramic	0.04	50V	CKDYF 403Z 50
C58	Ceramic	0.04	50V	CKDYF 403Z 50
C59	Ceramic	8p	50V	CCDSL 080F 50
C60	Ceramic	0.04	50V	CKDYF 403Z 50
C61	Ceramic	0.04	50V	CKDYF 403Z 50
C62	Electrolytic	4.7	25V	CEA 4R7P 25
C63	Ceramic	0.04	50V	CKDYF 403Z 50
C64	Ceramic	0.01	50V	CKDYF 103Z 50
C65	Mylar	0.0047	50V	CQMA 472K 50
C66	Electrolytic	1	50V	CEA 010P 50
C67	Mylar	0.0027	50V	CQMA 272K 50
C68	Ceramic	0.001	50V	CKDYB 102K 50
C70	Styrol	680p	50V	COSA 681J 50
C72	Electrolytic	0.47	50V	CEA R47P 50
C73	Electrolytic	100	16V	CEA 101P 16
C74	Mylar	0.02	50V	CQMA 203K 50
C75	Styrol	0.0033	50V	C15-011-A
C77	Styrol	0.0047	50V	C15-013-A
C78	Electrolytic	100	16V	CEA 101P 16
C79	Electrolytic	33	16V	CEA 330P 16
C80	Ceramic	330p	50V	CKDYB 331K 50
C81	Styrol	0.0047	50V	C15-013-A
C82	Electrolytic	0.47	50V	CEA R47P 50
C83	Styrol	0.0018	50V	COSA 182J 50
C84	Mylar	0.0022	50V	CQMA 222K 50
C85	Mylar	0.0022	50V	CQMA 222K 50
C88	Electrolytic	0.47	50V	CEA R47P 50
C89	Electrolytic	0.47	50V	CEA R47P 50
C90	Mylar	0.01	50V	CQMA 103K 50
C91	Mylar	0.01	50V	CQMA 103K 50
C92	Ceramic	0.01	50V	CKDYF 103Z 50
C93	Ceramic	0.01	50V	CKDYF 103Z 50
C94	Ceramic	0.04	50V	CKDYF 403Z 50
C95	Ceramic	0.04	50V	CKDYF 403Z 50

RESISTORS

Symbol	Description	Part No.
VR1	Semi-fixed	C92-065-A
R1	Carbon film 100	RD¼VS 101J
R2	Carbon film 100	RD¼PS 101J
R3	Carbon film 100	RD¼VS 101J
R4	Carbon film 15k	RD¼VS 153J
R5	Carbon film 3.9k	RD¼VS 392J
R6	Carbon film 1k	RD¼VS 102J
R7	Carbon film 22	RD¼PS 220J
R8	Carbon film 2.2k	RD¼VS 222J
R9	Carbon film 12k	RD¼VS 123J
R10	Carbon film 8.2k	RD¼VS 822J
R11	Carbon film 150	RD¼VS 151J
R12	Carbon film 1M	RD¼VS 105J
R13	Carbon film 680	RD¼PS 681J
R14	Carbon film 470	RD¼PS 471J
R15	Carbon film 82	RD¼PS 820J
R16	Carbon film 2.2k	RD¼PS 222J
R17	Carbon film 4.7k	RD¼PS 472J
R18	Carbon film 100	RD¼PS 101J
R19	Carbon film 1k	RD¼PS 102J
R20	Carbon film 220	RD¼PS 221J
R21	Carbon film 47k	RF¼PS 473J
R22	Carbon film 100	RD¼PS 101J
R23	Carbon film 220	RD¼PS 221J
R24	Carbon film 1k	RD¼PS 102J
R25	Carbon film 470	RD¼PS 471J
R26	Carbon film 270	RD¼PS 271J
R27	Carbon film 18k	RD¼PS 183J
R28	Carbon film 1.5k	RD¼PS 152J
R29	Carbon film 2.7k	RD¼PS 272J
R30	Carbon film 1k	RD¼PS 102J
R31	Carbon film 6.8k	RD¼PS 682J
R32	Carbon film 8.2k	RD¼PS 822J
R33	Carbon film 100	RD¼PS 101J
R34	Carbon film 1M	RD¼PS 105J
R35	Carbon film 100	RD¼PS 101J
R36	Carbon film 10k	RD¼PS 103J
R37	Carbon film 39k	RD¼VS 393J
R38	Carbon film 6.8k	RD¼PS 682J
R39	Carbon film 3.3k	RD¼PS 332J
R40	Carbon film 3.3k	RD¼PS 332J
R41	Carbon film 1k	RD¼PS 102J
R42	Carbon film 220k	RD¼PS 224J
R43	Carbon film 4.7k	RD¼PS 472J
R44	Carbon film 680	RD¼PS 681J
R45	Carbon film 10	RD¼PS 100J

Symbol	Description		Part No.
R47	Carbon film	8.2k	RD¼PS 822J
R48	Carbon film	4.7k	RD¼PS 472J
R49	Carbon film	2.2k	RD¼PS 222J
R50	Carbon film	220k	RD¼PS 224J
R51	Carbon film	2.2k	RD¼PS 222J
R52	Carbon film	8.2k	RD¼PS 822J
R53	Carbon film	1k	RD¼PS 102J
R54	Carbon film	3.3k	RD¼PS 332J
R55	Carbon film	33k	RD¼PS 333J
R56	Carbon film	1.5k	RD¼PS 152J
R57	Carbon film	1.5k	RD¼PS 152J
R58	Carbon film	2.7k	RD¼PS 272J
R59	Carbon film	270k	RD¼PS 274J
R60	Carbon film	47k	RD¼PS 473J
R61	Carbon film	100	RD¼PS 101J
R62	Carbon film	47	RD¼PS 470J
R63	Carbon film	47k	RD¼PS 473J
R64	Carbon film	150k	RD¼PS 154J
R65	Carbon film	1.5k	RD¼PS 152J
R66	Carbon film	220	RD¼PS 221J
R67	Carbon film	1.5k	RD¼PS 152J
R70	Carbon film	4.7k	RD¼PS 472J
R71	Carbon film	100	RD¼PS 101J
R72	Carbon film	33k	RD¼PS 333J
R73	Carbon film	33k	RD¼PS 333J
R74	Carbon film	33k	RD¼PS 333J
R75	Carbon film	33k	RD¼PS 333J
R76	Carbon film	3.3k	RD¼PS 332J
R77	Carbon film	3.3k	RD¼PS 332J
R78	Carbon film	3.3k	RD¼PS 332J
R79	Carbon film	3.3k	RD¼PS 332J
R80	Carbon film	4.7k	RD¼PS 472J
R81	Carbon film	4.7k	RD¼PS 472J
R82	Carbon film	100	RD¼VS 101J
R83	Carbon film	470	RD¼PS 471J
R84	Carbon film	10k	RD¼VS 103J
R85	Carbon film	10k	RD¼VS 103J

SEMICONDUCTORS


Symbol	Description		Part No.
Q1	2SK19-Y	FET	
Q2	2SC763-D	Transistor	
Q3	2SC763-D	Transistor	
Q4	2SC738-D	Transistor	
Q5	2SC710R-D	Transistor	
Q6	2SC738-D	Transistor	
Q7	2SC710-D	Transistor	
Q8	2SC710-D	Transistor	
Q9	2SC711-F	Transistor	
Q10	2SC711-E	Transistor	

Symbol	Description	Part No.	
Q11	2SC711-E	Transistor	
Q12	2SC711-F	Transistor	
D1	1S85	Diode	
D2	1S188 FM-1	Diode	
D3	1S188 FM-1	Diode	
D4	1S188 FM-1	Diode	
D5	1S188 FM-1	Diode	
D6	1S188 FM-1	Diode	
D7	1S188 FM-1	Diode	
D8	1S188 FM-1	Diode	
D9	1S188 FM-1	Diode	
D10	1S188 FM-1	Diode	
D11	1S188 FM-1	Diode	
D12	1S188 FM-1	Diode	
D13	1S188 FM-1	Diode	
D14	1S188 FM-1	Diode	
D15	1S188 FM-1	Diode	
D16	1S188 FM-1	Diode	
D17	1S188 FM-1	Diode	
D18	1S188 FM-1	Diode	


TRANSFORMERS and COILS

Symbol	Description	Part No.	
T1	FM antenna coil	T22-020-A	
T2	FM RF coil	T21-023-A	
T3	FM osc coil	T23-043-B	
T4	FM IF transformer	T73-034-0	
T5	FM IF transformer	T73-035-A	
T6	FM IF transformer	T73-036-0	
T7	FM IF transformer	T74-011-0	
T8	AM osc coil	T43-006-0	
T9	AM IF transformer	T71-028-0	
T10	AM IF transformer	T71-028-0	
T11	AM IF transformer	T72-022-0	
T12	SCA filter	ATM-006-0	
T13	19kHz transformer	T75-023-B	
T14	19kHz transformer	T75-024-B	
T15	38kHz transformer	T75-025-B	
T16	38kHz leak filter	ATM-004-0	
T17	38kHz leak filter	ATM-004-0	
T18	SCA filter	ATM-007-0	
L1	RF choke coil	T24-028-A	
L2	RF choke coil	T24-028-A	
L3	RF choke coil	T24-028-A	
L5	Coil 39 mH	T75-006-B	


2.3 EQUALIZER AMPLIFIER ASSEMBLY (W15-065)

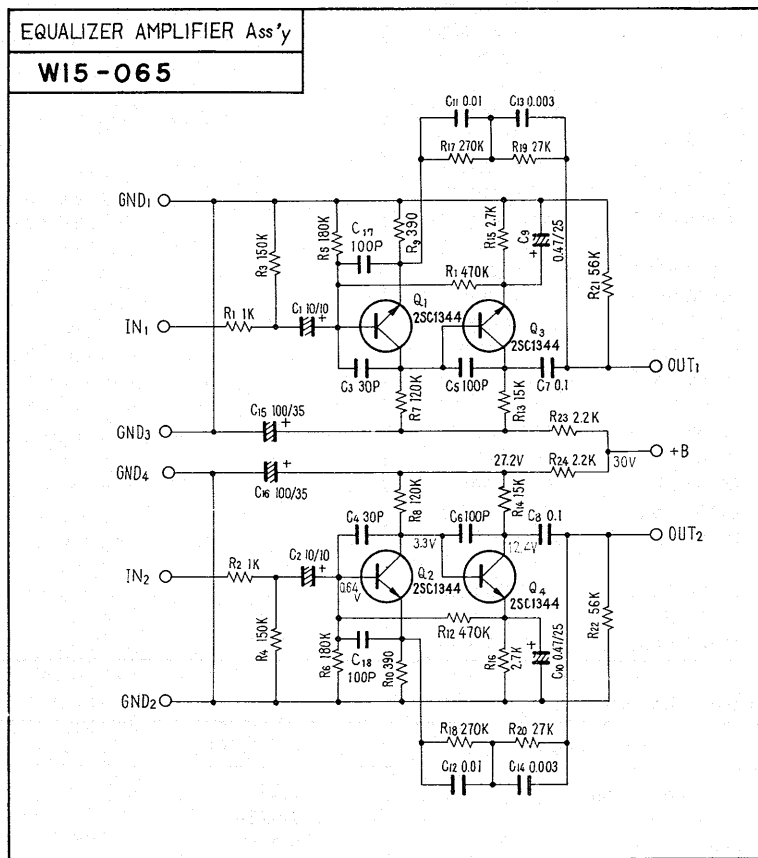

Foil Side

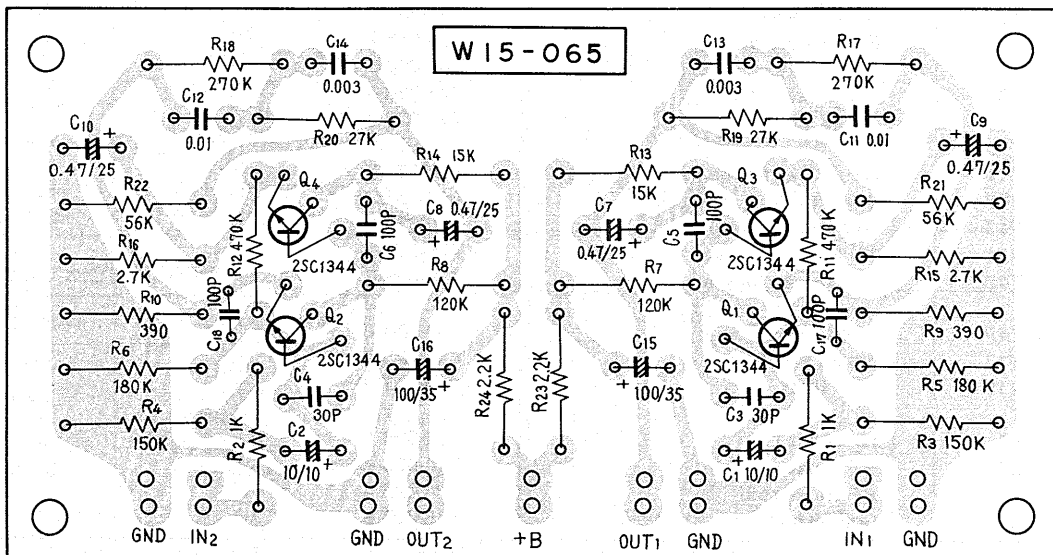

2SC1344



CAPACITORS

Symbol	Description			Part No.	
C1	Electrolytic	10	10V	CEA 100P 10	
C2	Electrolytic	10	10V	CEA 100P 10	
C3	Ceramic	30p	50V	CCDSL 300K 50	
C4	Ceramic	30p	50V	CCDSL 300K 50	
C5	Ceramic	100p	50V	CCDSL 101K 50	
C6	Ceramic	100p	50V	CCDSL 101K 50	
C7	Mylar	0.1	50V	CQMA 104K 50	
C8	Mylar	0.1	50V	CQMA 104K 50	
C9	Electrolytic	0.47	25V	CSYA R47M 25	
C10	Electrolytic	0.47	25V	CSYA R47M 25	
C11	Mylar	0.01	50V	CQMA 103M 50	
C12	Mylar	0.01	50V	CQMA 103M 50	
C13	Mylar	0.003	50V	CQMA 302M 50	
C14	Mylar	0.003	50V	CQMA 302M 50	
C15	Electrolytic	100	35V	CEA 101P 35	
C16	Electrolytic	100	35V	CEA 101P 35	
C17	Ceramic	100p	50V	CCDSL 101K 50	
C18	Ceramic	100p	50V	CCDSL 101K 50	


RESISTORS

Symbol	Description			Part No.	
R1	Carbon film	1k		RD¼PS 102J	
R2	Carbon film	1k		RD¼PS 102J	
R3	Carbon film	150k		RD¼PS 154J	
R4	Carbon film	150k		RD¼PS 154J	
R5	Carbon film	180k		RD¼PS 184J	
R6	Carbon film	180k		RD¼PS 184J	
R7	Carbon film	120k		RD¼PS 124J	
R8	Carbon film	120k		RD¼PS 124J	
R9	Carbon film	390		RD¼PS 391J	
R10	Carbon film	390		RD¼PS 391J	
R11	Carbon film	470k		RD¼PS 474J	
R12	Carbon film	470k		RD¼PS 474J	
R13	Carbon film	15k		RD¼PS 153J	
R14	Carbon film	15k		RD¼PS 153J	
R15	Carbon film	2.7k		RD¼PS 272J	
R16	Carbon film	2.7k		RD¼PS 272J	
R17	Carbon film	270k		RD¼PS 274J	
R18	Carbon film	270k		RD¼PS 274J	
R19	Carbon film	27k		RD¼PS 273J	
R20	Carbon film	27k		RD¼PS 273J	
R21	Carbon film	56k		RD¼PS 563J	
R22	Carbon film	56k		RD¼PS 563J	
R23	Carbon film	2.2k		RD¼PS 222J	
R24	Carbon film	2.2k		RD¼PS 222J	


TRANSISTORS

Symbol	Description			Part No.	
Q1	2SC1344-E	Transistor			
Q2	2SC1344-E	Transistor			
Q3	2SC1344-E	Transistor			
Q4	2SC1344-E	Transistor			

2.4 SWITCH CIRCUIT ASSEMBLY (W15-072)

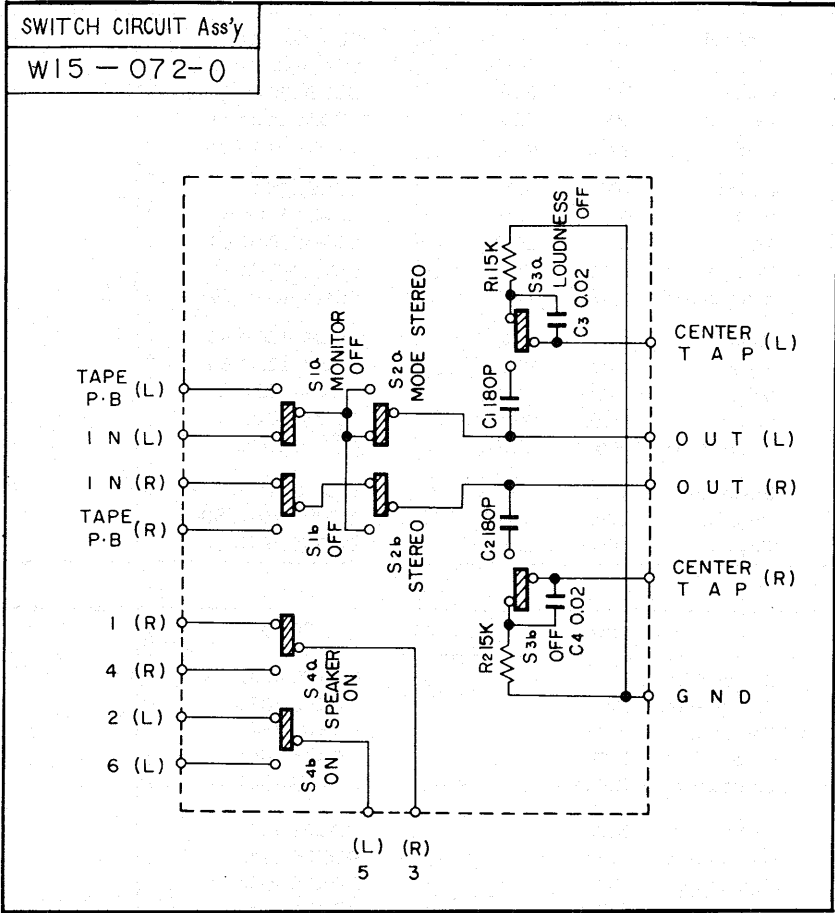


Foil Side

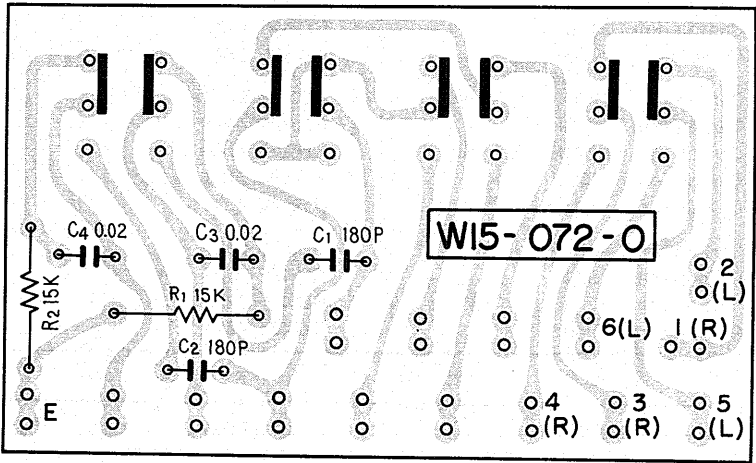


PARTS LIST

Symbol	Description			Part No.	
C1	Ceramic	180p	50V	CCDSL 181K 50	
C2	Ceramic	180p	50V	CCDSL 181K 50	
C3	Mylar	0.02	50V	CQMA 203K 50	
C4	Mylar	0.02	50V	CQMA 203K 50	
R1	Carbon film	15k		RD¼PS 153K	
R2	Carbon film	15k		RD¼PS 153K	
S1	Demi Switch			S31-016-A	
S2	Demi Switch			S31-016-A	
S3	Demi Switch			S31-016-A	
S4	Demi Switch			S31-016-A	


2.5 HEADPHONE AMPLIFIER ASSEMBLY (W15-057)

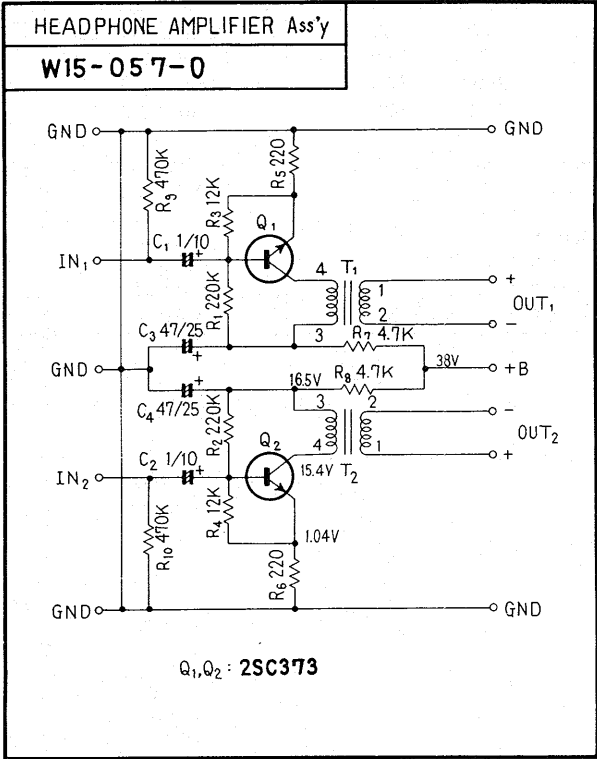

Foil Side

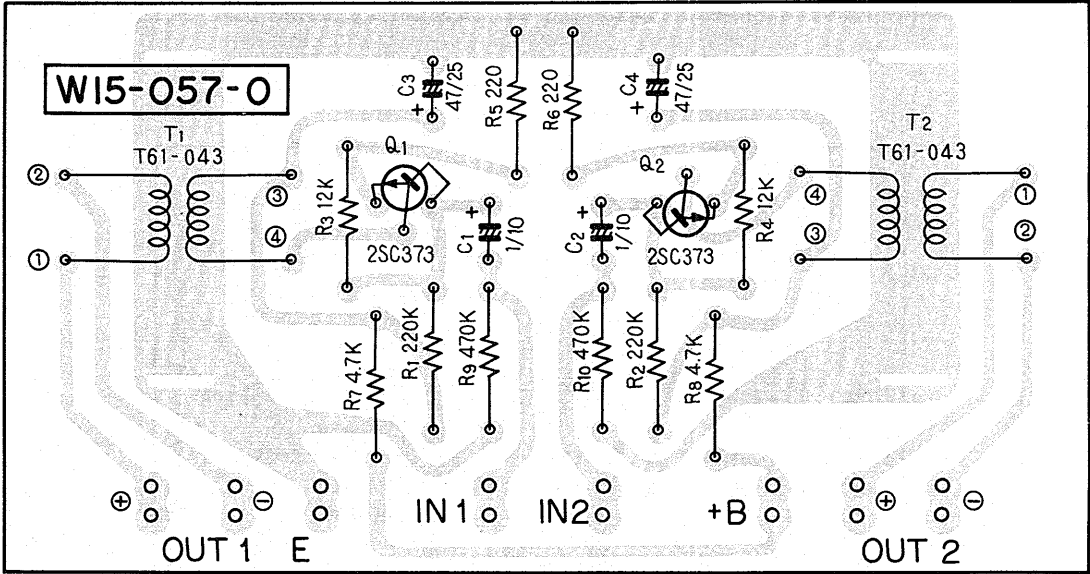

2SC373



CAPACITORS

Symbol	Description	Part No.	
C1	Electrolytic 1 10V	CEA 010P 10	
C2	Electrolytic 1 10V	CEA 010P 10	
C3	Electrolytic 47 25V	CEA 470P 25	
C4	Electrolytic 47 25V	CEA 470P 25	

RESISTORS

Symbol	Description	Part No.	
R1	Carbon film 220k	RD%PS 224K	
R2	Carbon film 220k	RD%PS 224k	
R3	Carbon film 12k	RD%PS 123k	
R4	Carbon film 12k	RD%PS 123K	
R5	Carbon film 220	RD%PS 221K	
R6	Carbon film 220	RD%PS 221K	
R7	Carbon film 2.7k	RD%PS 272K	
R8	Carbon film 2.7k	RD%PS 272K	
R9	Carbon film 470k	RD%PS 474K	
R10	Carbon film 470k	RD%PS 474K	


TRANSISTORS

Symbol	Description	Part No.	
Q1	2SC373 Transistor		
Q2	2SC373 Transistor		


TRANSFORMERS

Symbol	Description	Part No.	
T1	Transformer	T61-043-B	
T2	Transformer	T61-043-B	


2.6 CONTROL AMPLIFIER ASSEMBLY (W22-003)

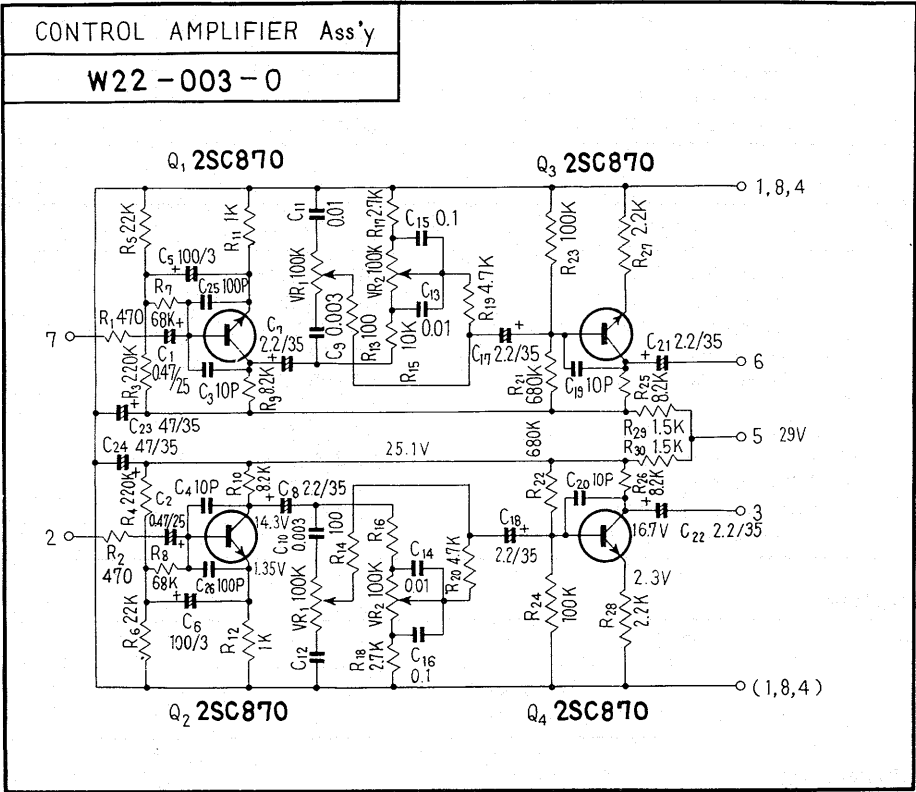

Foil Side

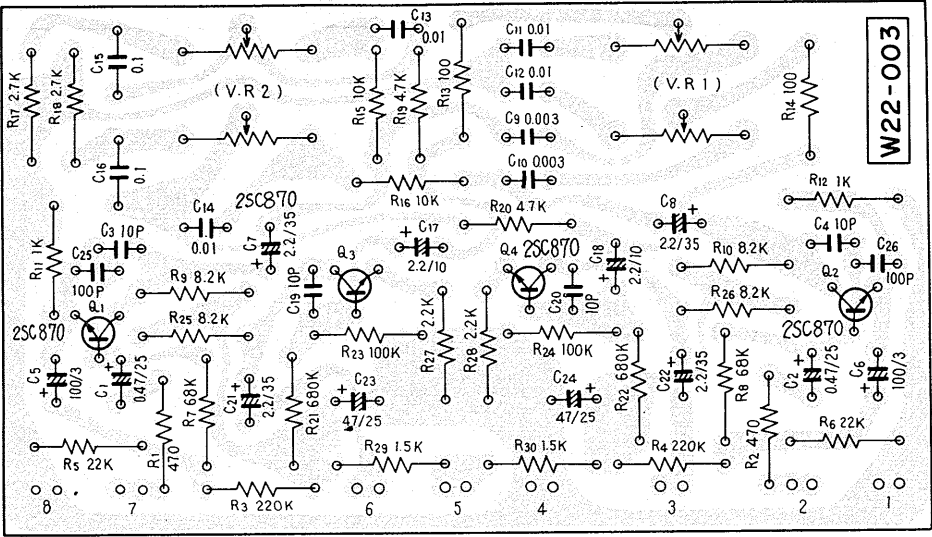

2SC870



CAPACITORS

Symbol	Description			Part No.	
C1	Electrolytic	0.47	25V	CEA R47P 25	
C2	Electrolytic	0.47	25V	CEA R47P 25	
C3	Ceramic	10p	50V	CCDSL 100K 50	
C4	Ceramic	10p	50V	CCDSL 100K 50	
C5	Electrolytic	100	3V	CEA 101P 3	
C6	Electrolytic	100	3V	CEA 101P 3	
C7	Electrolytic	2.2	35V	CEA 2R2P 35	
C8	Electrolytic	2.2	35V	CEA 2R2P 35	
C9	Mylar	0.003	50V	CQMA 302M 50	
C10	Mylar	0.003	50V	CQMA 302M 50	
C11	Mylar	0.01	50V	CQMA 103M 50	
C12	Mylar	0.01	50V	CQMA 103M 50	
C13	Mylar	0.01	50V	CQMA 103M 50	
C14	Mylar	0.01	50V	CQMA 103M 50	
C15	Mylar	0.1	50V	CQMA 104M 50	
C16	Mylar	0.1	50V	CQMA 104M 50	
C17	Electrolytic	2.2	35V	CEA 2R2P 35	
C18	Electrolytic	2.2	35V	CEA 2R2P 35	
C19	Ceramic	10p	50V	CCDSL 100K 50	
C20	Ceramic	10p	50V	CCDSL 100K 50	
C21	Electrolytic	2.2	35V	CEA 2R2P 35	
C22	Electrolytic	2.2	35V	CEA 2R2P 35	
C23	Electrolytic	47	35V	CEA 470P 35	
C24	Electrolytic	47	35V	CEA 470P 35	
C25	Ceramic	100p	50V	CCDSL 101K 50	
C26	Ceramic	100p	50V	CCDSL 101K 50	

RESISTORS


Symbol	Description			Part No.	
VR1	Dual	100K-B		C82-046-A	
VR2	Dual	100K-B		C82-046-A	
R1	Carbon film	470		RD%PS 471K	
R2	Carbon film	470		RD%PS 471K	
R3	Carbon film	220k		RD%PS 224K	
R4	Carbon film	220k		RD%PS 224K	
R5	Carbon film	22k		RD%PS 223K	
R6	Carbon film	22k		RD%PS 223K	
R7	Carbon film	68k		RD%PS 683K	
R8	Carbon film	68k		RD%PS 683K	
R9	Carbon film	8.2k		RD%PS 822K	
R10	Carbon film	8.2k		RD%PS 822K	
R11	Carbon film	1k		RD%PS 102K	
R12	Carbon film	1k		RD%PS 102K	
R13	Carbon film	100		RD%PS 101K	
R14	Carbon film	100		RD%PS 101K	
R15	Carbon film	10k		RD%PS 103K	


Symbol	Description		Part No.	
R16	Carbon film	10k	RD¼PS 103K	
R17	Carbon film	2.7k	RD¼PS 272k	
R18	Carbon film	2.7k	RD¼PS 272K	
R19	Carbon film	4.7k	RD¼PS 472K	
R20	Carbon film	4.7k	RD¼PS 472K	
R21	Carbon film	680k	RD¼PS 684K	
R22	Carbon film	680k	RD¼PS 684K	
R23	Carbon film	100k	RD¼PS 104K	
R24	Carbon film	100k	RD¼PS 104K	
R25	Carbon film	8.2k	RD¼PS 822K	
R26	Carbon film	8.2k	RD¼PS 822K	
R27	Carbon film	2.2k	RD¼PS 222K	
R28	Carbon film	2.2k	RD¼PS 222K	
R29	Carbon film	1.5k	RD¼PS 152K	
R30	Carbon film	1.5k	RD¼PS 152K	




TRANSISTORS

Symbol	Description		Part No.	
Q1	2SC870-BL	Transistor		
Q2	2SC870-BL	Transistor		
Q3	2SC870-BL	Transistor		
Q4	2SC870-BL	Transistor		

25

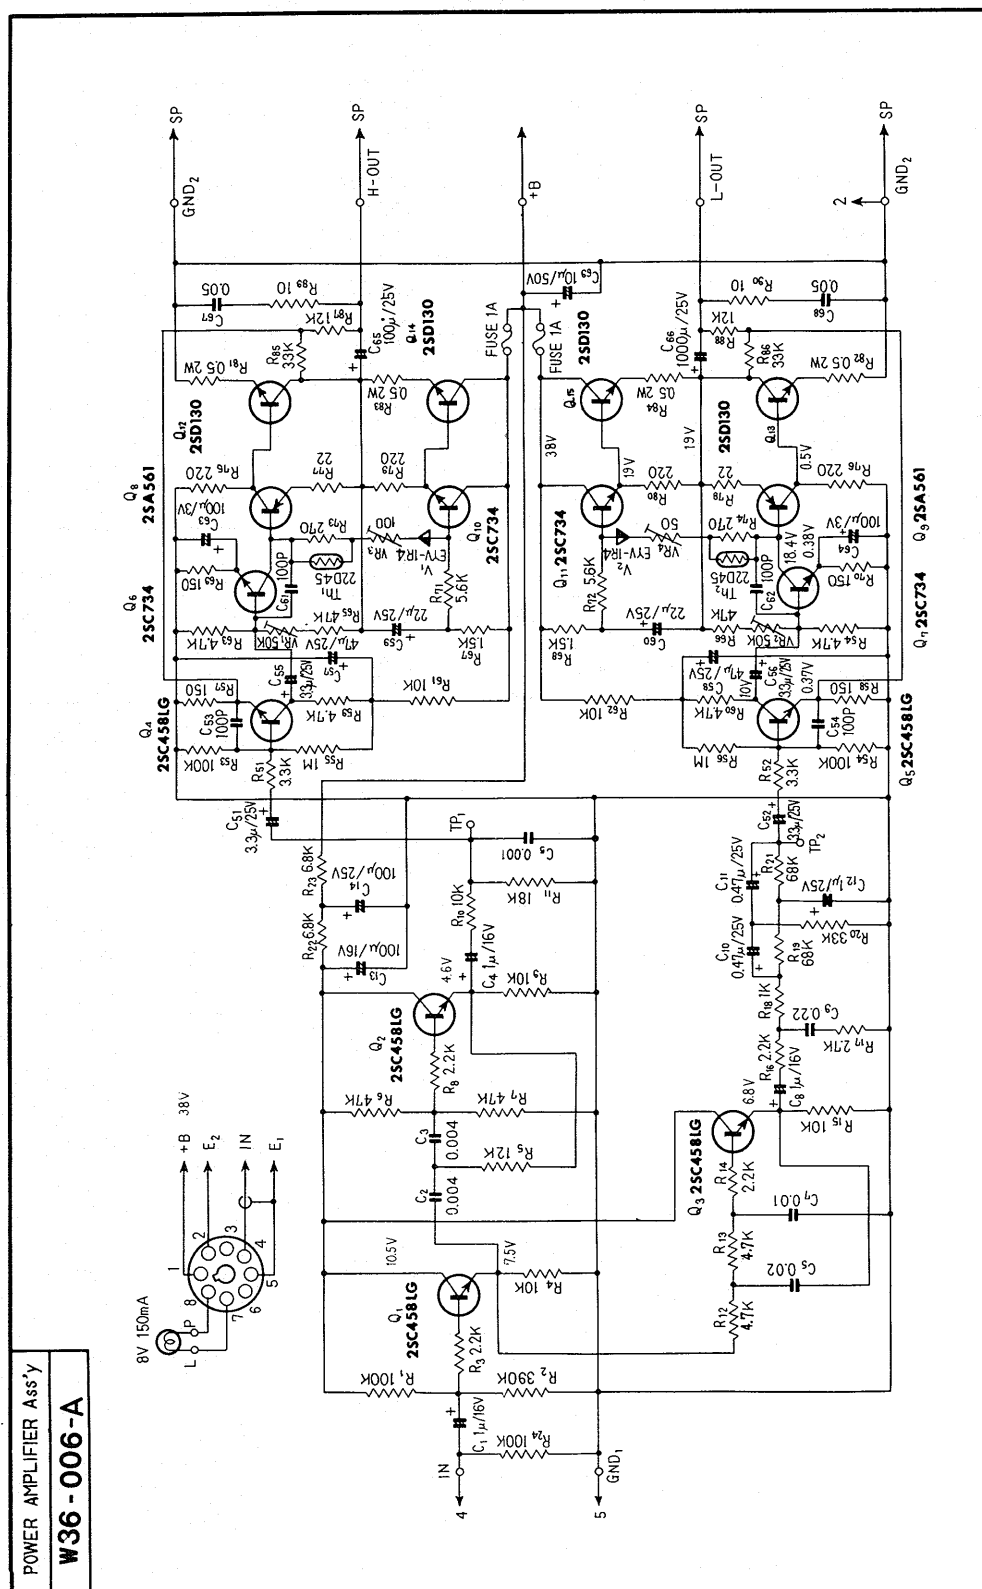

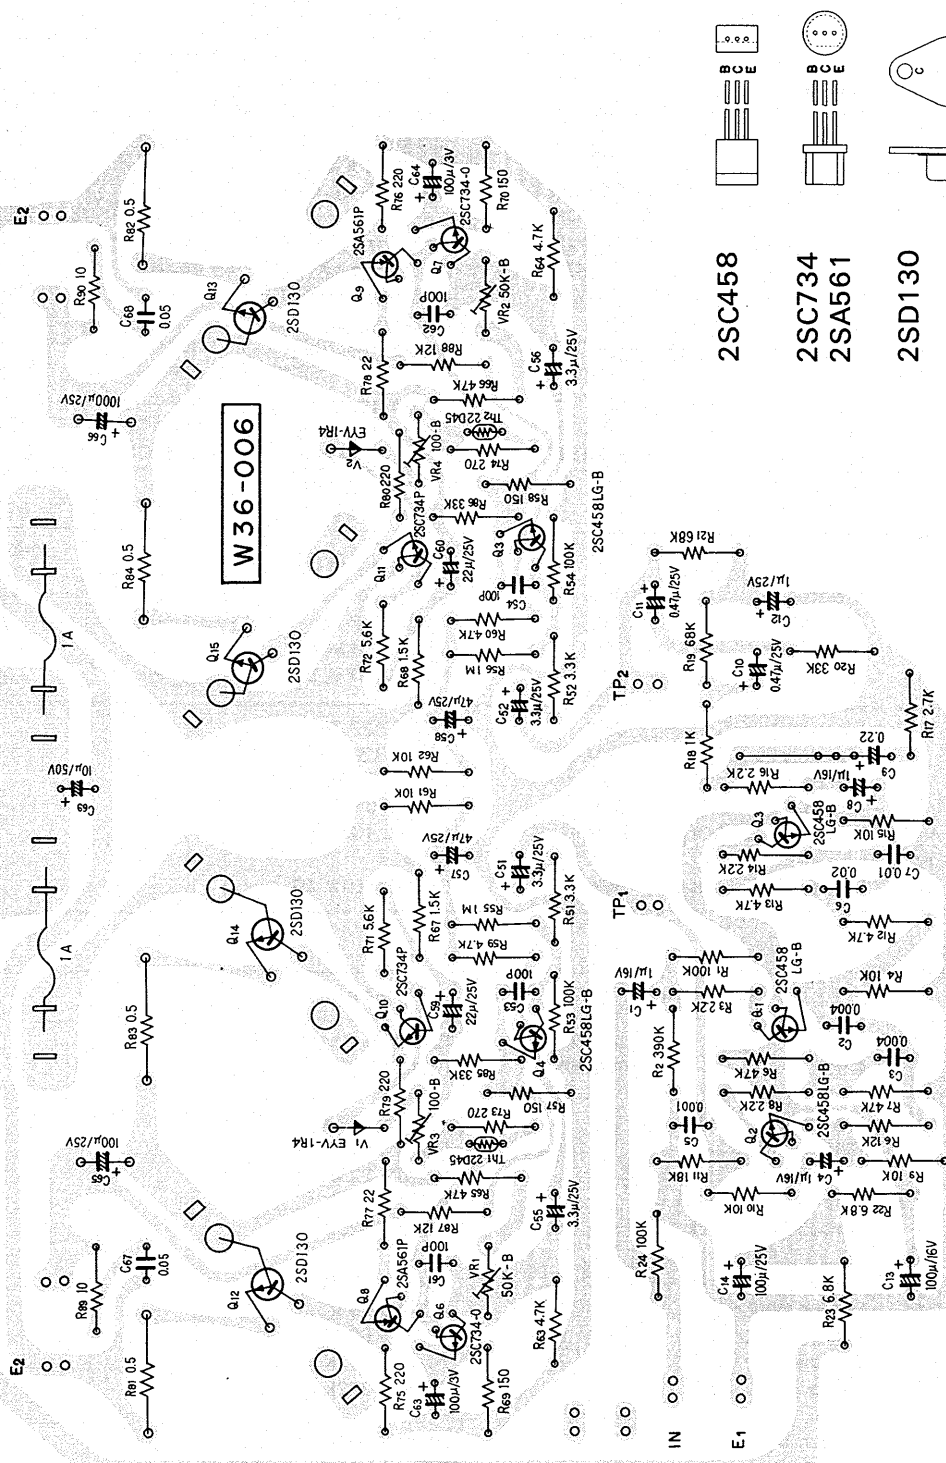

-  **2SC458**
-  **2SC734**
2SA561
-  **2SD130**

CAPACITORS

Symbol	Description			Part No.	
C1	Electrolytic	1	16V	CEA 010P 16	
C2	Mylar	0.004	50V	CQMA 402K 50	
C3	Mylar	0.004	50V	CQMA 402K 50	
C4	Electrolytic	1	16V	CEA 010P 16	
C5	Mylar	0.001	50V	CQMA 102K 50	
C6	Mylar	0.02	50V	CQMA 203K 50	
C7	Mylar	0.01	50V	CQMA 103K 50	
C8	Electrolytic	1	16V	CEA 010P 16	
C9	Electrolytic	0.22	25V	CSYA R22M 25	
C10	Electrolytic	0.47	25V	CSYA R47M 25	
C11	Electrolytic	0.47	25V	CSYA R47M 25	
C12	Electrolytic	1	25V	CSYA 010M 25	
C13	Electrolytic	10	16V	CEA 100P 16	
C14	Electrolytic	10	25V	CEA 100P 25	
C51	Electrolytic	3.3	25V	CEA 3R3P 25	
C52	Electrolytic	3.3	25V	CEA 3R3P 25	
C53	Ceramic	100p	50V	CCDSL 101K 50	
C54	Ceramic	100p	50V	CCDSL 101K 50	
C55	Electrolytic	3.3	25V	CEA 3R3P 25	
C56	Electrolytic	3.3	25V	CEA 3R3P 25	
C57	Electrolytic	47	25V	CEA 470P 25	
C58	Electrolytic	47	25V	CEA 470P 25	
C59	Electrolytic	22	25V	CEA 220P 25	
C60	Electrolytic	22	25V	CEA 220P 25	
C61	Ceramic	100p	50V	CCDSL 101K 50	
C62	Ceramic	100p	50V	CCDSL 101K 50	
C63	Electrolytic	100	3V	CEA 101P 3	
C64	Electrolytic	100	3V	CEA 101P 3	
C65	Electrolytic	10	25V	CEA 100P 25	
C66	Electrolytic	1000	25V	CEA 102P 25	
C67	Mylar	0.05	50V	CQMA 503K 50	
C68	Mylar	0.05	50V	CQMA 503K 50	

RESISTORS

Symbol	Description		Part No.	
VR1	Semi-fixed	(50K-B)	C92-040-0	
VR2	Semi-fixed	(50K-B)	C92-040-0	
VR3	Semi-fixed	(100-B)	C92-032-D	
VR4	Semi-fixed	(100-B)	C92-032-D	
R1	Carbonfilm	100k	RD¼PS 104J	
R2	Carbon film	390k	RD¼PS 394J	
R3	Carbon film	2.2k	RD¼PS 222J	
R4	Carbon film	10k	RD¼PS 103J	
R5	Carbon film	12k	RD¼PS 123J	
R6	Carbon film	47k	RD¼PS 473J	
R7	Carbon film	47k	RD¼PS 473J	
R8	Carbon film	2.2k	RD¼PS 222J	
R9	Carbon film	10k	RD¼PS 103J	
R10	Carbon film	10k	RD¼PS 103J	


Symbol	Description			Part No.	
R11	Carbon film	18k		RD4PS 183J	
R12	Carbon film	4.7k		RD4PS 4R7J	
R13	Carbon film	4.7k		RD4PS 4R7J	
R14	Carbon film	2.2k		RD4PS 2R2J	
R15	Carbon film	10k		RD4PS 103J	
R16	Carbon film	2.2k		RD4PS 222J	
R17	Carbon film	2.7k		RD4PS 272J	
R18	Carbon film	1k		RD4PS 102J	
R19	Carbon film	68k		RD4PS 683J	
R20	Carbon film	33k		RD4PS 333J	
R21	Carbon film	68k		RD4PS 683J	
R22	Carbon film	6.8k		RD4PS 682J	
R23	Carbon film	6.8k		RD4PS 682J	
R24	Carbon film	100k		RD4PS 104J	
R51	Carbon film	3.3k		RD4PS 332J	
R52	Carbon film	3.3k		RD4PS 332J	
R53	Carbon film	100k		RD4PS 104J	
R54	Carbon film	100k		RD4PS 104J	
R55	Carbon film	1M		RD4PS 105J	
R56	Carbon film	1M		RD4PS 105J	
R57	Carbon film	150		RD4PS 151J	
R58	Carbon film	150		RD4PS 151J	
R59	Carbon film	4.7k		RD4PS 472J	
R60	Carbon film	4.7k		RD4PS 472J	
R61	Carbon film	10k		RD4PS 103J	
R62	Carbon film	10k		RD4PS 103J	
R63	Carbon film	4.7k		RD4PS 472J	
R64	Carbon film	4.7k		RD4PS 472J	
R65	Carbon film	47k		RD4PS 473J	
R66	Carbon film	47k		RD4PS 473J	
R67	Carbon film	1.5k		RD4PS 152J	
R68	Carbon film	1.5k		RD4PS 152J	
R69	Carbon film	150		RD4PS 151J	
R70	Carbon film	150		RD4PS 151J	
R71	Carbon film	5.6k		RD4PS 562J	
R72	Carbon film	5.6k		RD4PS 562J	
R73	Carbon film	270		RD4PS 271J	
R74	Carbon film	270		RD4PS 271J	
R75	Carbon film	220		RD4PS 221J	
R76	Carbon film	220		RD4PS 221J	
R77	Carbon film	22		RD4PS 220J	
R78	Carbon film	22		RD4PS 220J	
R79	Carbon film	220		RD4PS 221J	
R80	Carbon film	220		RD4PS 221J	
R81	Metal oxide	0.5	2W	RS2P OR5K	
R82	Metal oxide	0.5	2W	RS2P OR5K	
R83	Metal oxide	0.5	2W	RS2P OR5K	
R84	Metal oxide	0.5	2W	RS2P OR5K	
R85	Carbon film	33k		RD4PS 333J	
R86	Carbon film	33k		RD4PS 333J	

Symbol	Description	Part No.	
R87	Carbon film 12k	RD%PS 123J	
R88	Carbon film 12k	RD%PS 123J	
R89	Carbon film 10	RD%PS 100J	
R90	Carbon film 10	RD%PS 100J	


SEMICONDUCTORS

Symbol	Description	Part No.	
Q1	2SC458LG-C Transistor		
Q2	2SC458LG-C Transistor		
Q3	2SC458LG-C Transistor		
Q4	2SC458LG-C Transistor		
Q5	2SC458LG-C Transistor		
Q6	2SC734-Y Transistor		
Q7	2SC734-Y Transistor		
Q8	2SA561P Transistor		
Q9	2SA561P Transistor		
Q10	2SC734P Transistor		
Q11	2SC734P Transistor		
Q12	2SD130 Transistor		
Q13	2SD130 Transistor		
Q14	2SD130 Transistor		
Q15	2SD130 Transistor		
V1	Varistor EYV-1R4		
V2	Varistor EYV-1R4		
Th1	Thermistor 22D45		
Th2	Thermistor 22D45		


2.8 POWER SUPPLY CIRCUIT ASSEMBLY (W16-016)

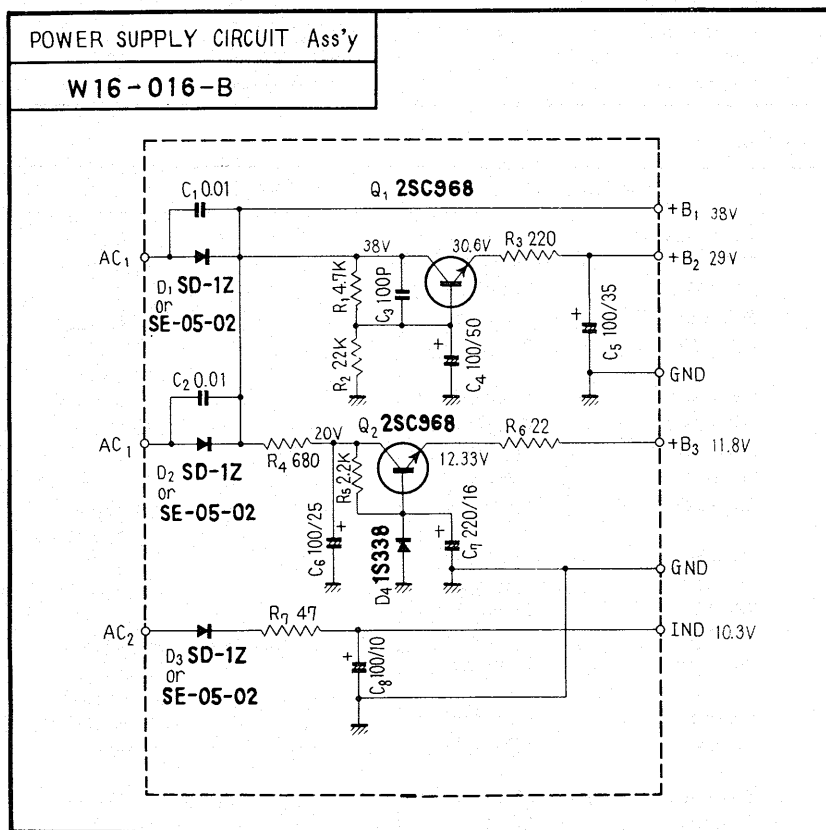

Foil Side

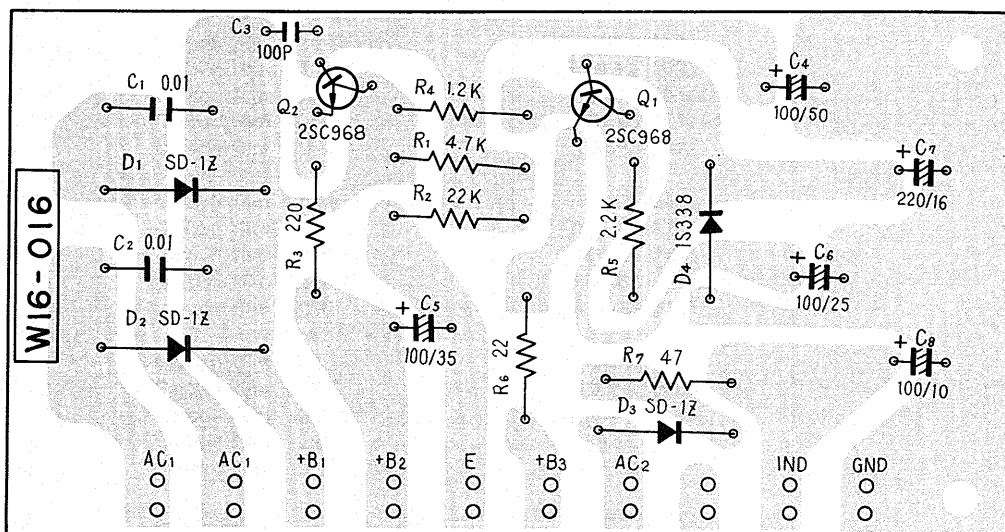

2SC968



CAPACITORS

Symbol	Description			Part No.	
C1	Ceramic	0.01	DC 1.4kV	ACG-004-0	
C2	Ceramic	0.01	DC 1.4kV	ACG-004-0	
C3	Ceramic	100p	50V	CCDSL 101K 50	
C4	Electrolytic	100	50V	CEA 101P 50	
C5	Electrolytic	100	35V	CEA 101P 35	
C6	Electrolytic	100	25V	CEA 101P 25	
C7	Electrolytic	220	16V	CEA 221P 16	
C8	Electrolytic	100	10V	CEA 101P 10	

RESISTORS

Symbol	Description			Part No.	
R1	Carbon film	4.7k		RD¼PS 472K	
R2	Carbon film	22k		RD¼PS 223K	
R3	Carbon film	220		RD¼PS 221K	
R4	Carbon film	1.2k		RD¼PS 122K	
R5	Carbon film	2.2k		RD¼PS 222K	
R6	Carbon film	22		RD¼PS 220K	
R7	Carbon film	47		RD¼PS 470K	
R8	Metal oxide	680	1W	RS 1P 681K	

TRANSISTORS


Symbol	Description		Part No.	
Q1	2SC968	Transistor		
Q2	2SC968	Transistor		

DIODES


Symbol	Description		Part No.	
D1	SD-1Z	Diode		
D2	SD-1Z	Diode		
D3	SD-1Z	Diode		
D4	WZ-130	Zener diode		

3.PART LOCATION


3.1 FRONT PANEL

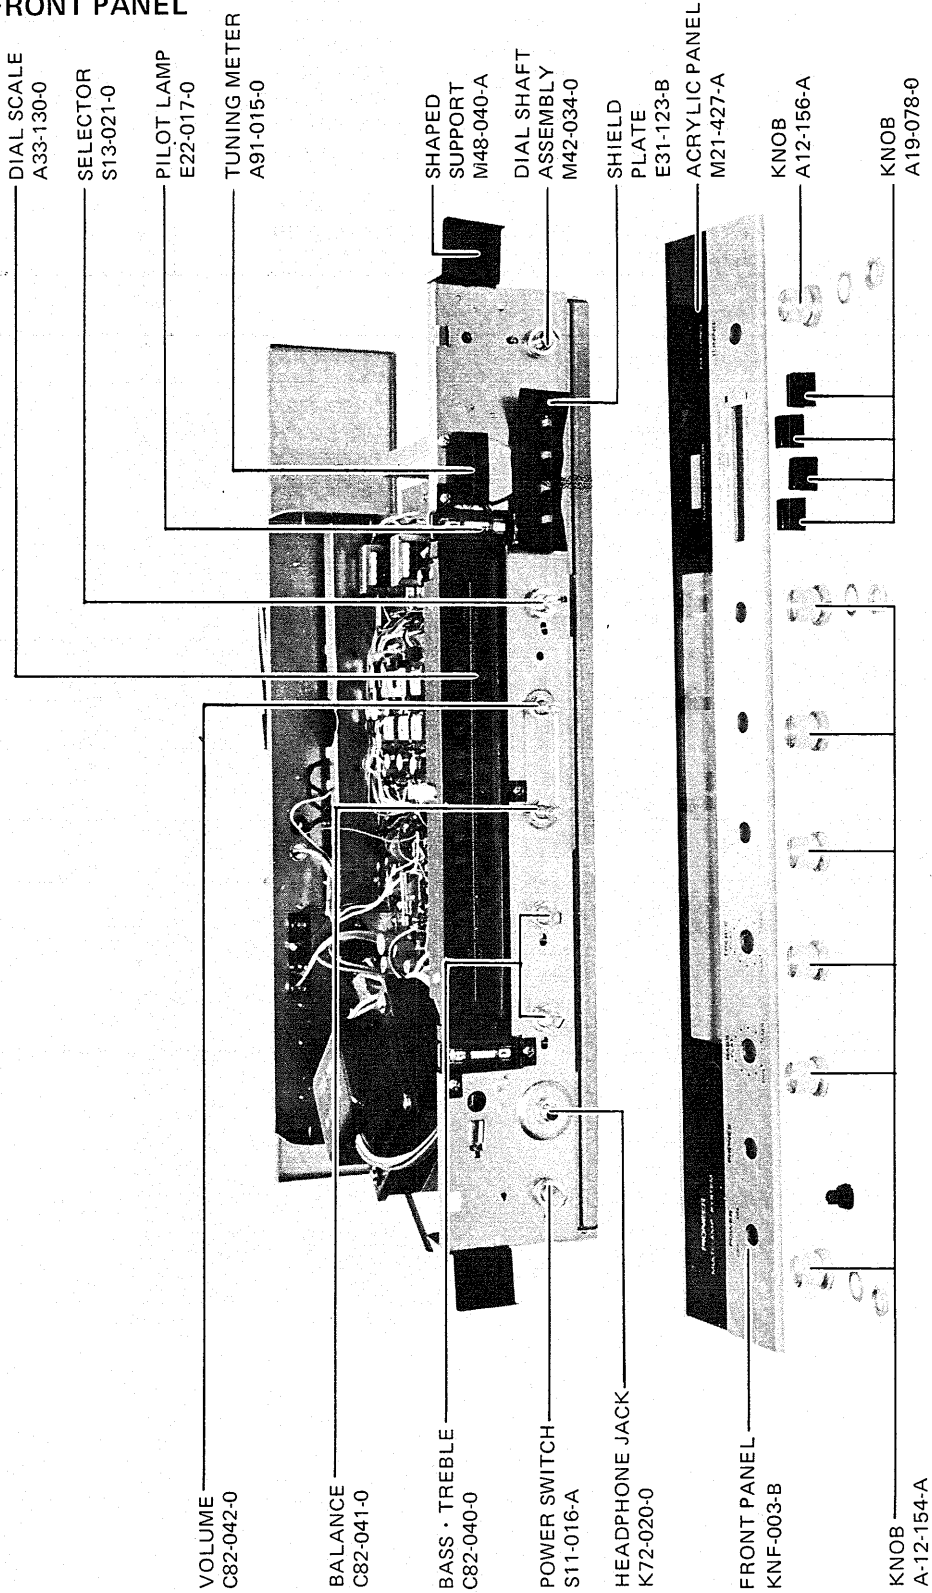


3.2 REAR PANEL

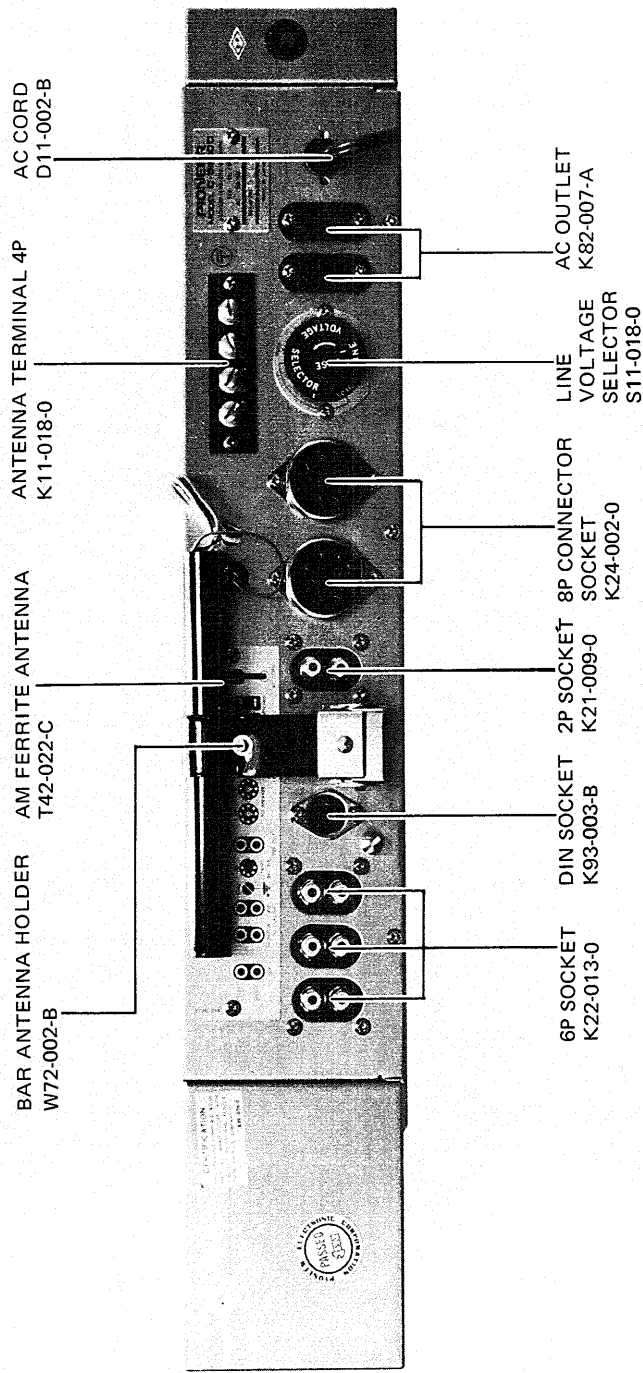


3.3 ASSEMBLY BOARD

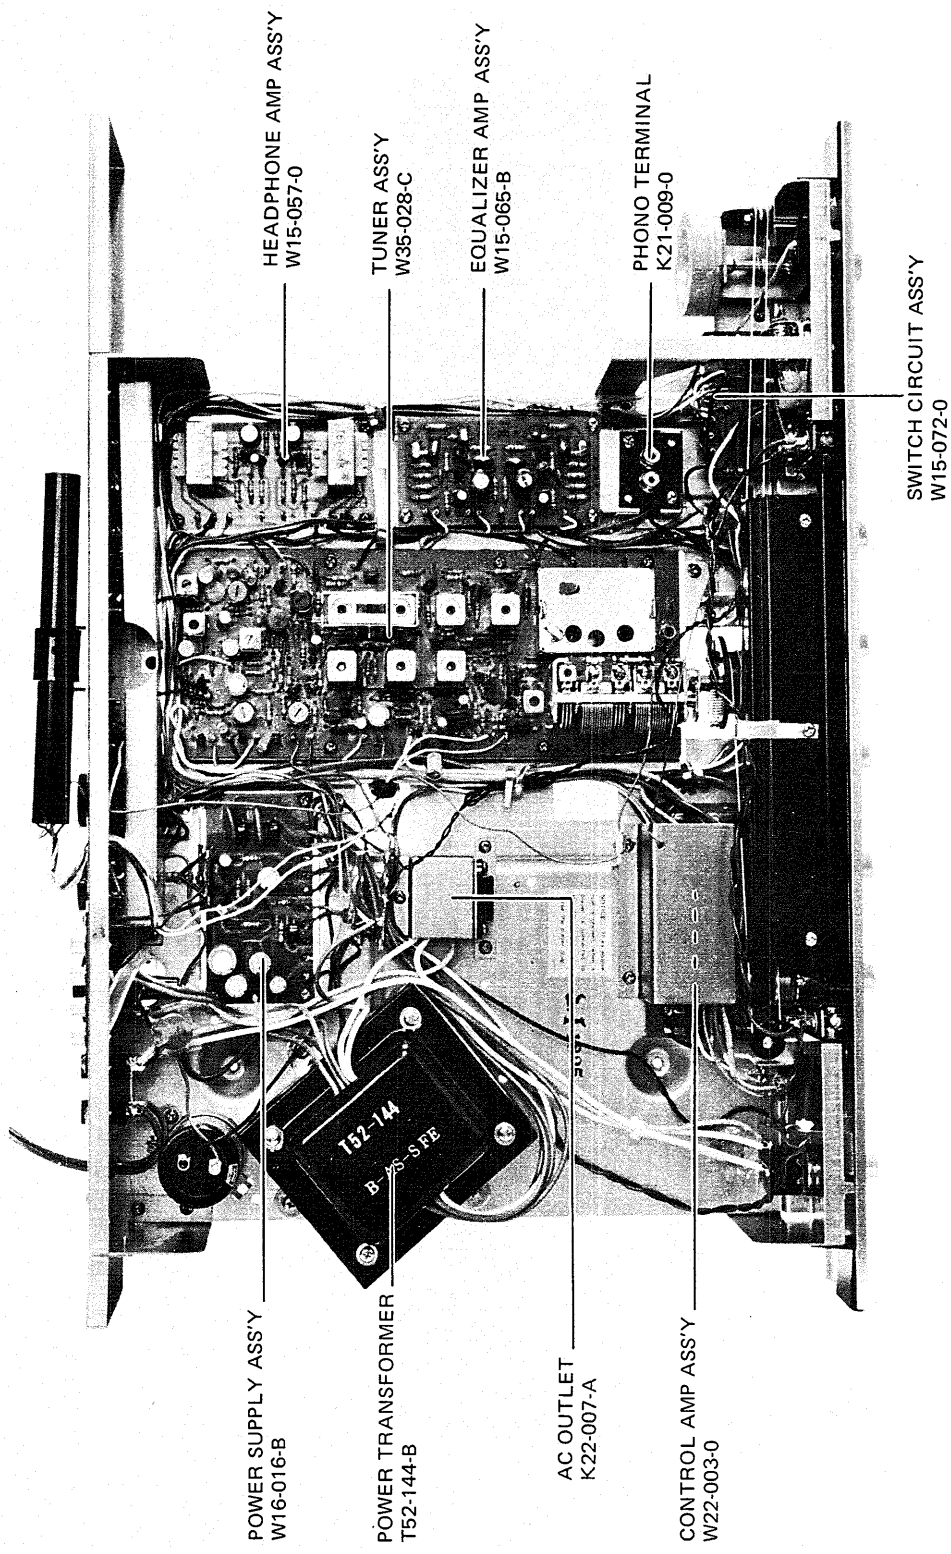

3.4 SPEAKER SYSTEM

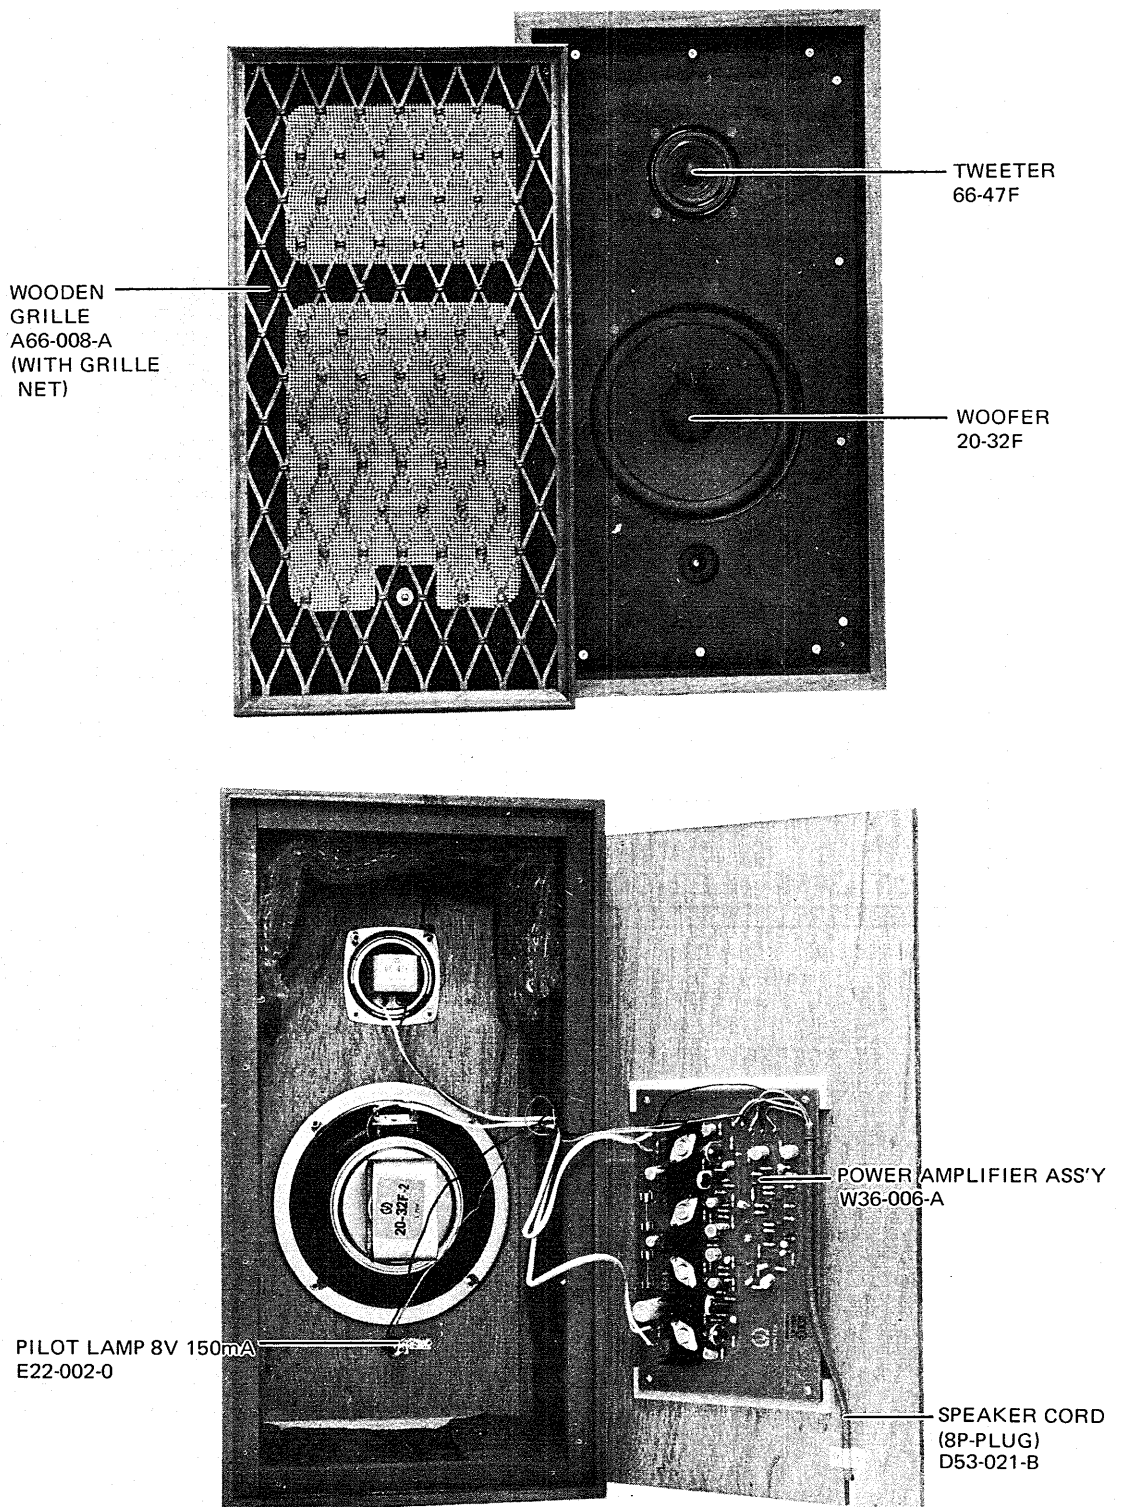

4. SPEAKER CONNECTION

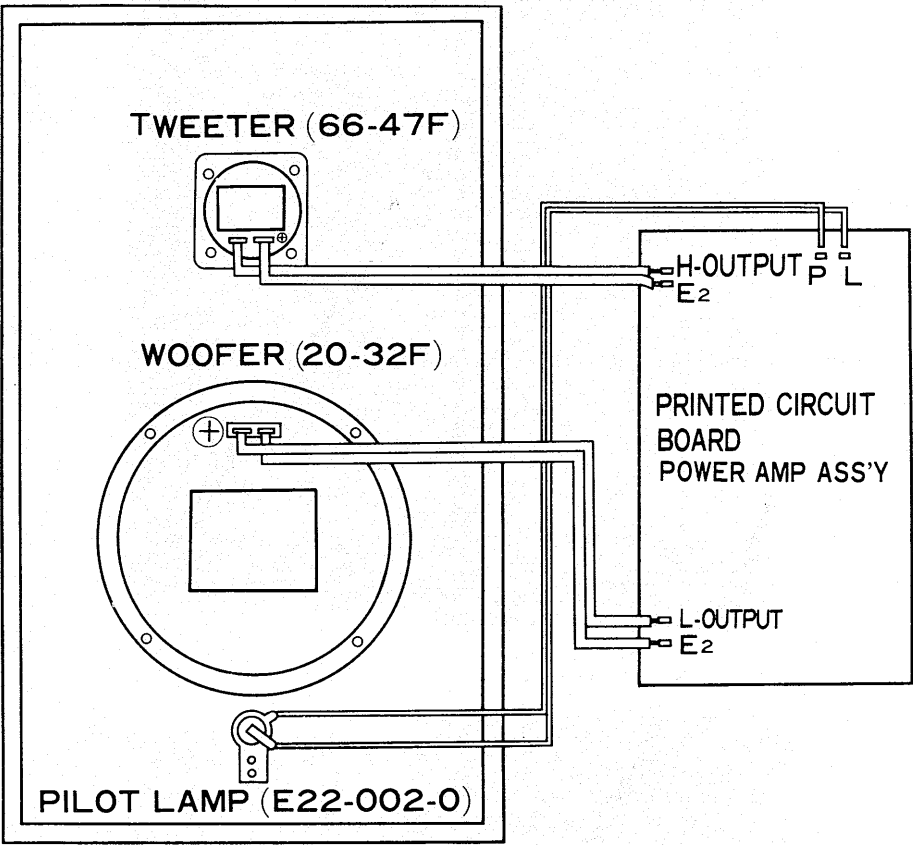


TURNTABLE ASSEMBLY
and PARTS LISTS

C-5600D
FV


1. EXPLODED VIEW

NOTICE: Any parts asterisked (*) are subject to being not supplied.

Key No.	Description	Part No.	
1	Center ring plate	A61-602-A	
2	Rubber mat	E31-166-A	
3	Turntable platter	KXA-180-B	
4*	Panel		
5	Belt	KEB-004-0	
6	Speed selector template	A51-011-0	
7	Function lever knob	N93-044-C	
8*	Angle plate	KNA-027-0	
9*	Oil cap		
10	Spring Washer 4 ϕ		
11	Screw	N51-065-0	
12	Nut	B71-656-A	
13	Washer	B22-650-0	
14	⊕ M3 x 8 machine screw		
15	Pin	KNK-071-B	
16	⊕ M5 x 6 machine screw		
17	⊕ M4 x 10 machine screw		
20	Machine screw assembly (MOTOR)	KBA-025-0	
21	⊕ M3 x 6 machine screw		
22	Flat washer 4 ϕ		
23	Function lever template	KAK-004-0	
24	Boss	KNK-186-A	
25	⊕ M4 x 6 machine screw		
26	Retaining washer E-type(E-2)		
27	Stopper	W71-755-D	
28	Adaptor catch	N93-007-A	
29	Elevator knob	A19-618-A	
30	Rubber grommet (B)	E31-744-0	
31	Elevator lever template	A51-012-0	
32	Rubber grommet (A)	E31-743-0	
35	Spring washer 3 ϕ		
36	⊕ M3 x 8 machine screw		
38	⊕ M3 x 5 machine screw		
40	Elevation arm assembly	N93-045-F	
41	Spring(A)	KXA-237-D	
42	Spring(B)	KXA-238-D	
43	Spring(C)	KXA-239-D	
44	Spring(D)	KXA-240-D	
45	Rubber cushion	E33-001-0	
46	Tonearm rest	KXA-201-0	
47	Rest stand	N55-639-A	
48	M3 nut		
53	Output cord	KDE-018-B	
55	Terminal strip lug-type	KKC-008-0	
56	⊕ M3 x 4 machine screw		
57	Power cord	D54-640-A	
58	Select lever lod		

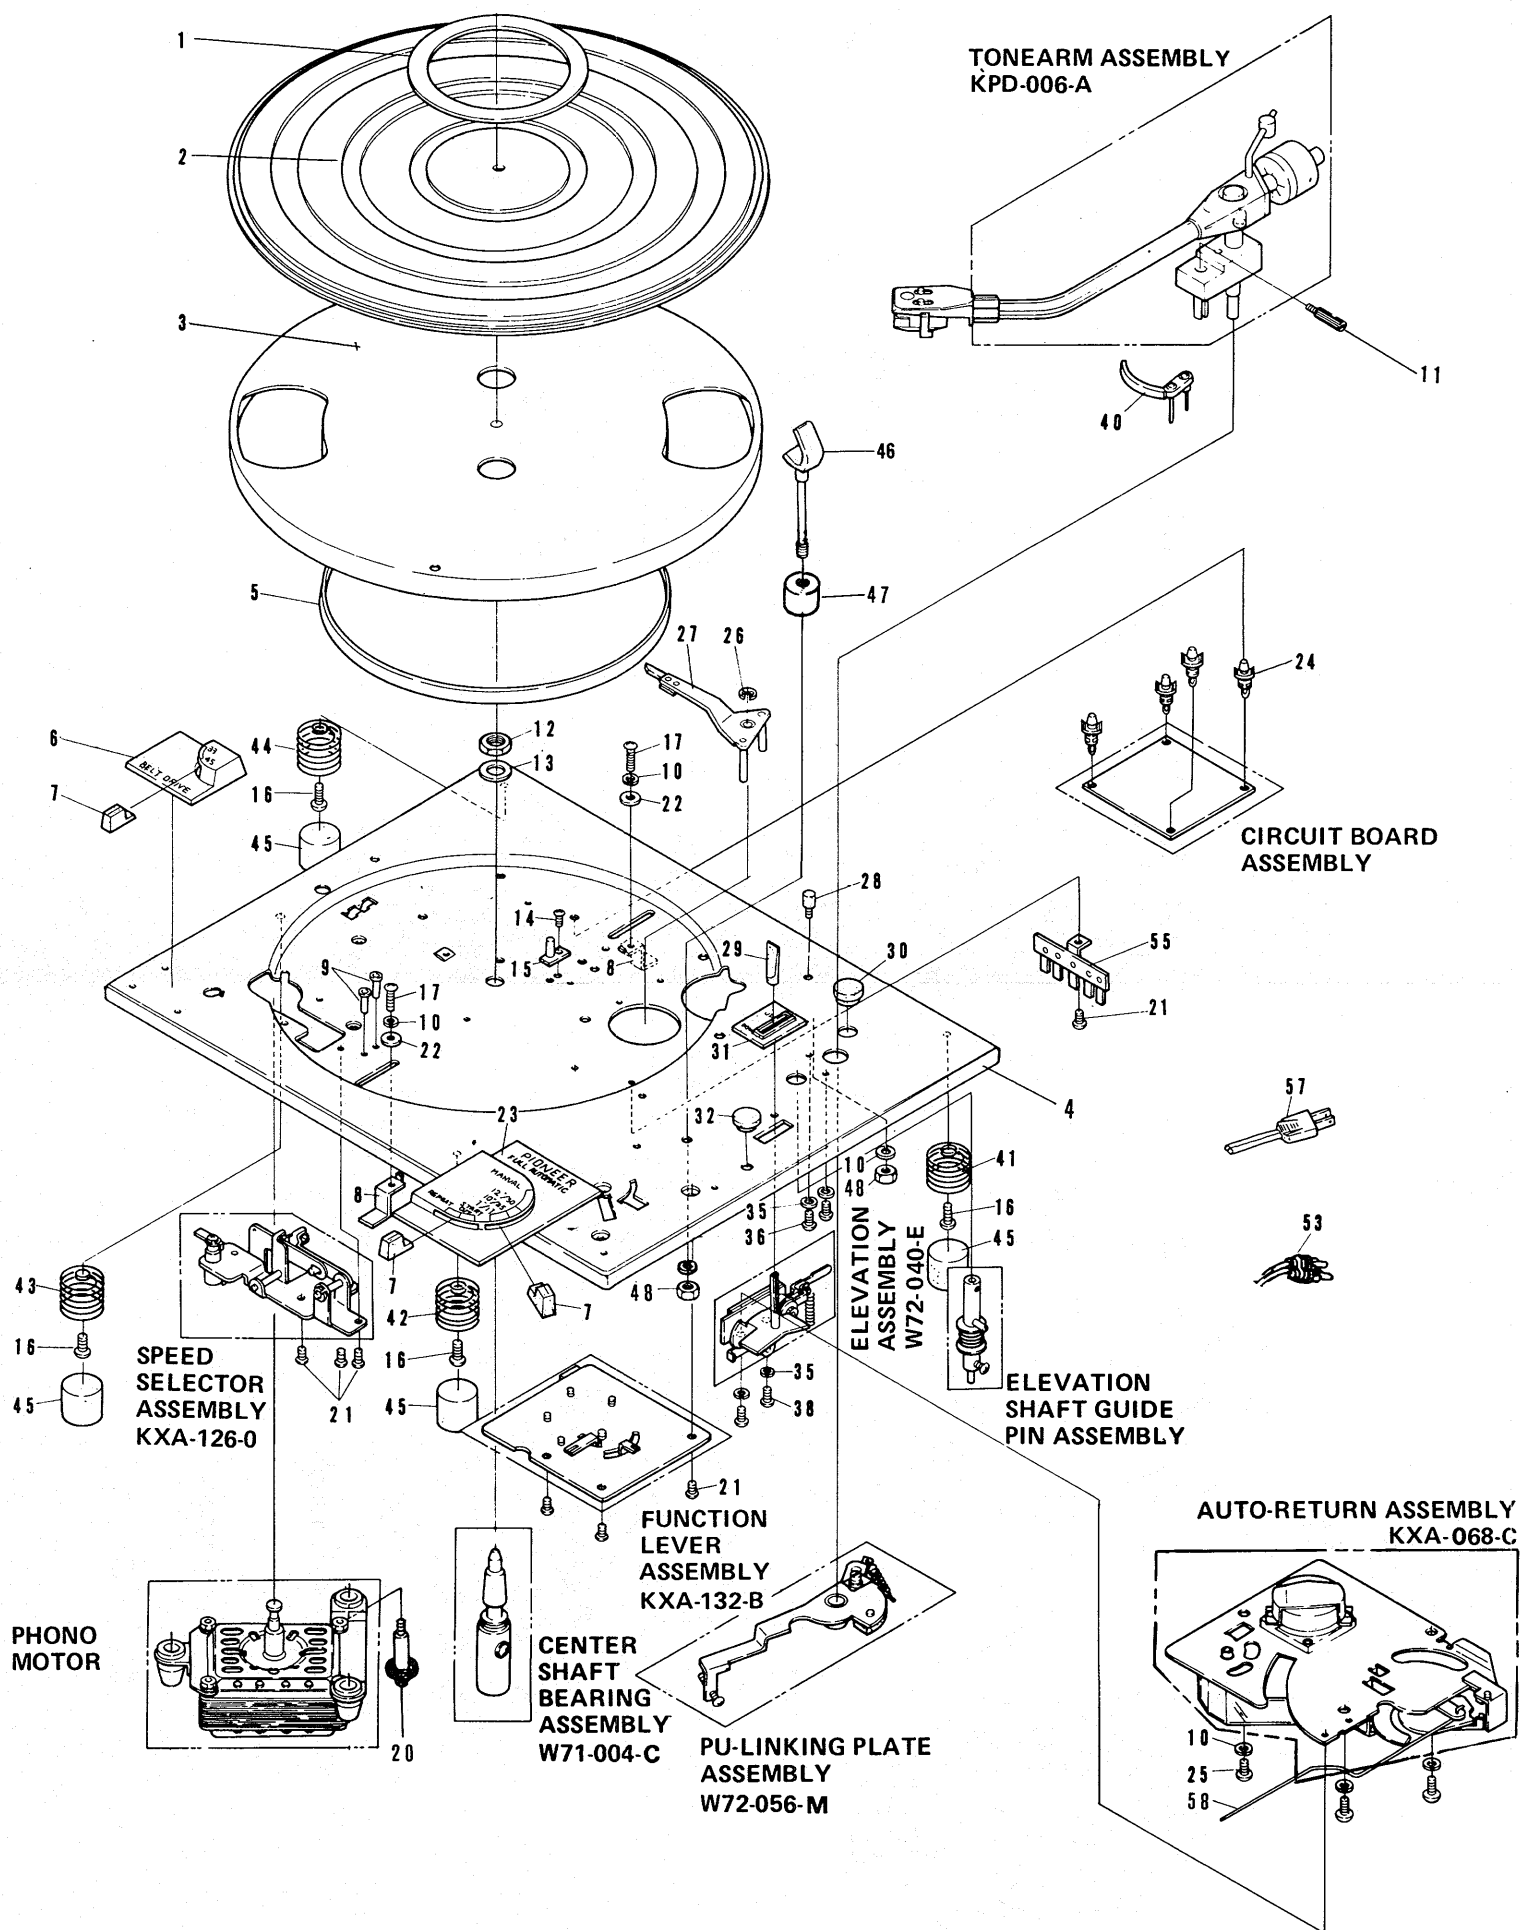

2. AUTO-RETURN ASSEMBLY (KXA-068-C)

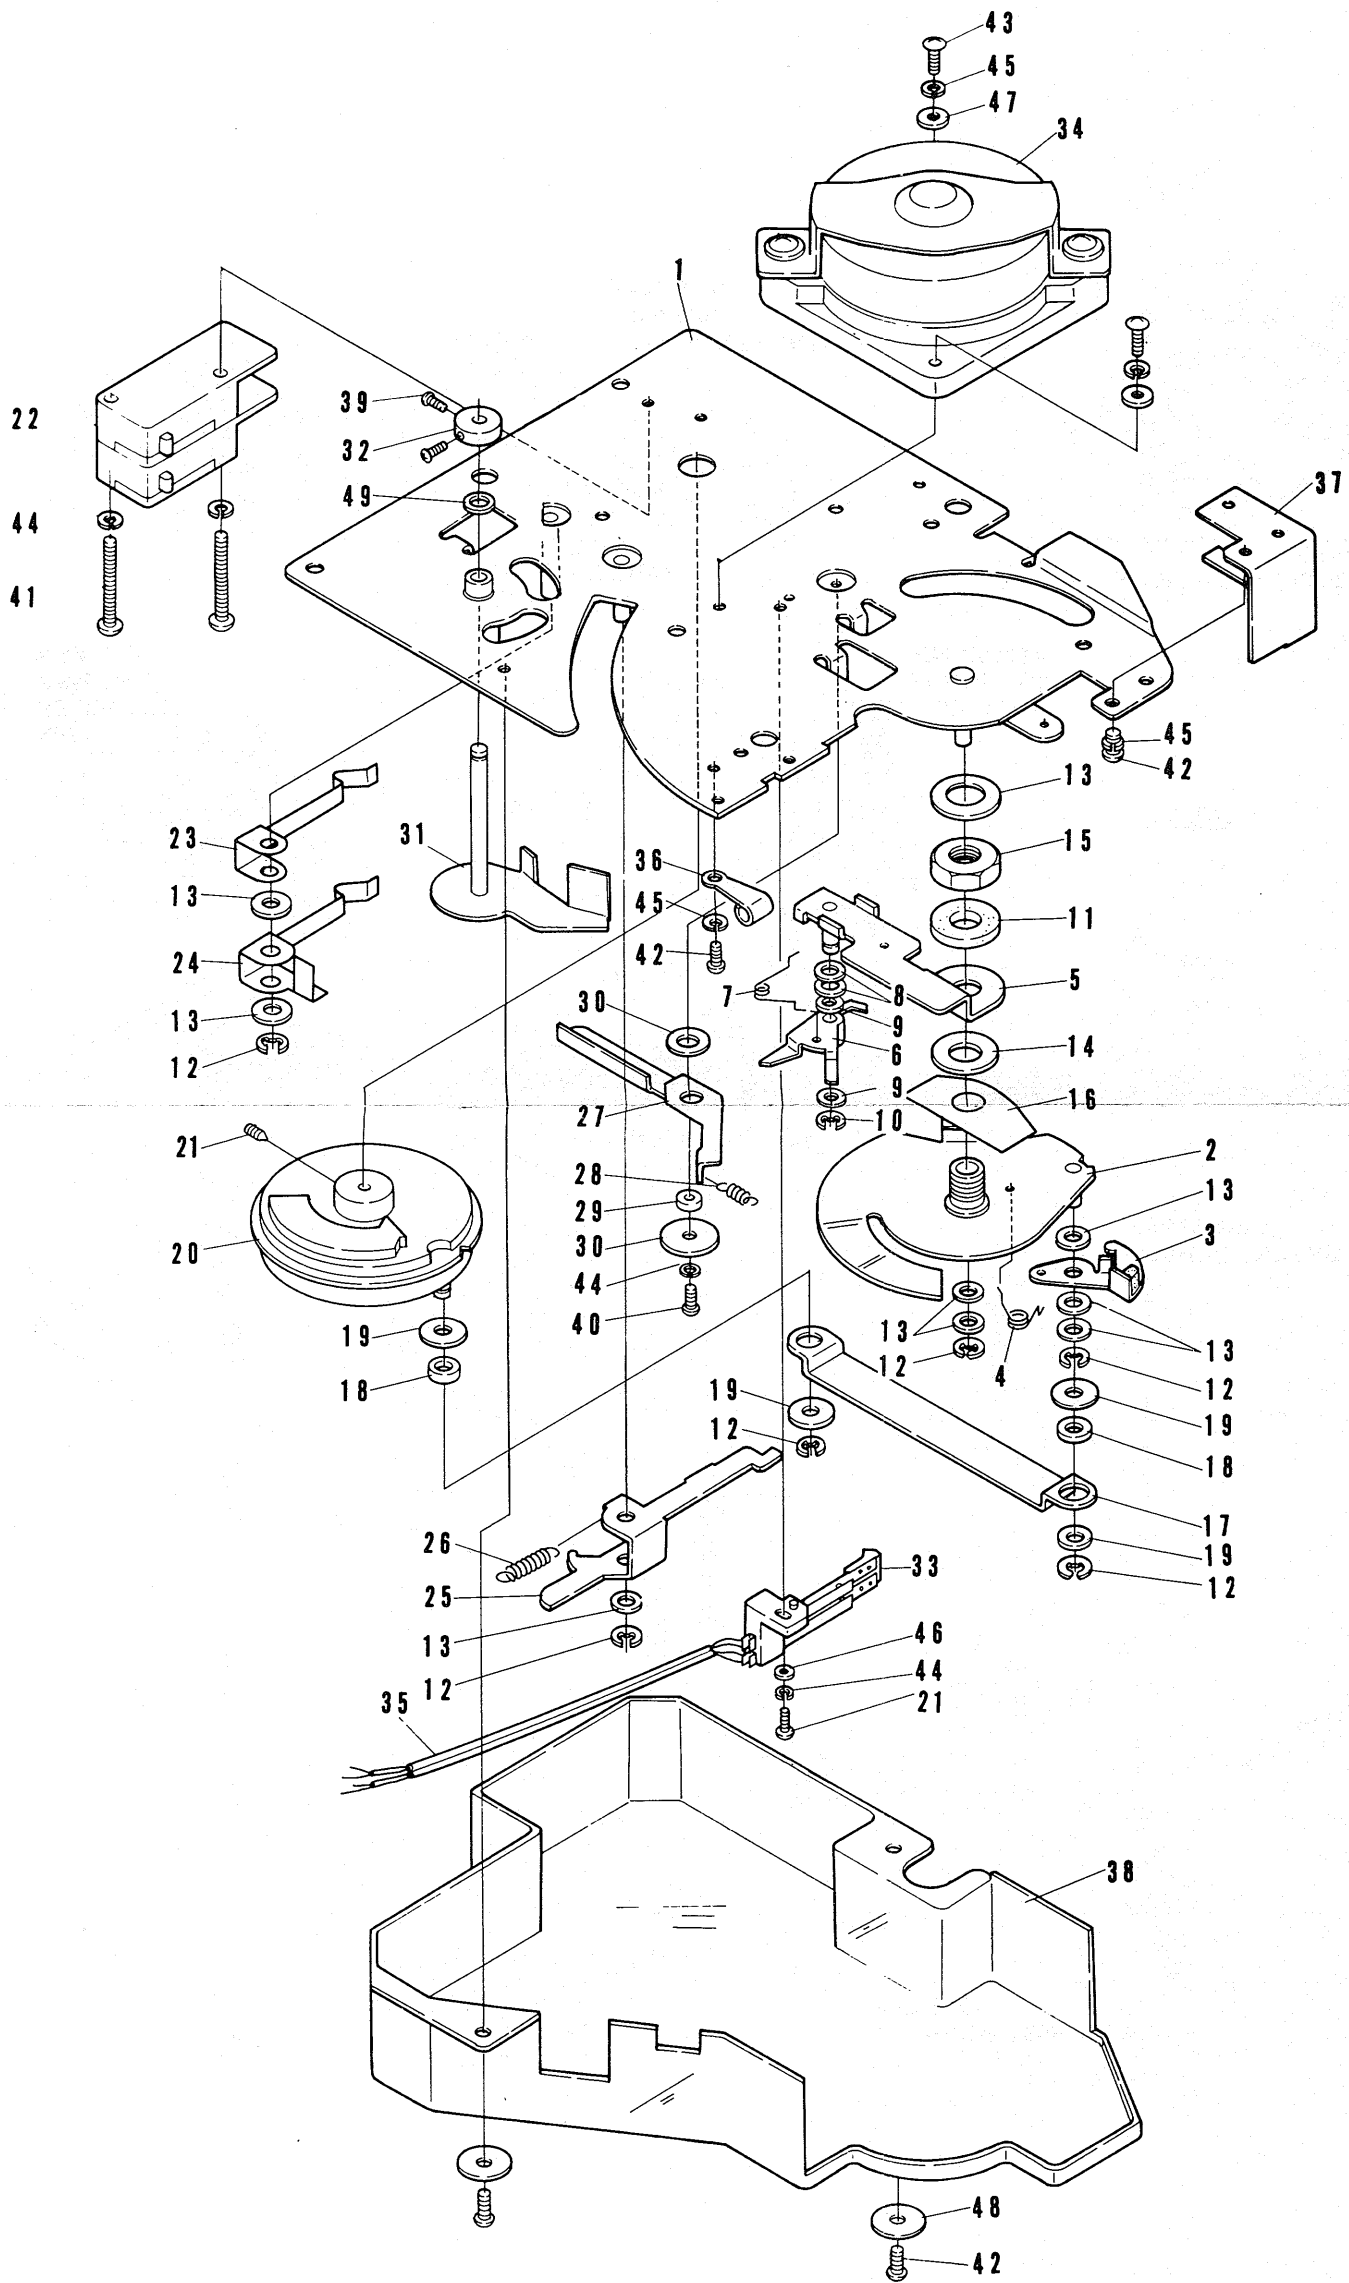


NOTICE: Any parts asterisked (*) are subject to being not supplied.

Key No.	Description	Part No.	
1*	Auto-return panel unit	KWM-010-D	
2	Cam plate	KWM-011-A	
3	Return lever unit	KWM-012-B	
4	Spring	B33-609-A	
5*	Starting lever unit	KWM-013-0	
6	Lock lever unit	KWM-005-0	
7	Spring	B33-635-A	
8	Flat washer 3.2φ x 6φ x 0.5t		
9	Teflon washer 3.2φ x 6φ x 0.3t		
10	Retaining washer E-type (E-2.1)		
11	Rubber washer	KNA-097-0	
12	Retaining washer E-type (E-3)		
13	Teflon washer 4.2φ x 8φ x 0.5t		
14	Teflon washer	B23-629-0	
15	Nut	KLA-159-0	
16	Plate spring (D)	KNA-099-B	
17*	Crank lever	KNA-100-A	
18	Spacer	W73-660-0	
19	Nylon washer 4.2φ x 8φ x 0.3t		
20	Cum unit	KWM-014-C	
21	⊕ M2.6 x 6 set screw		
22	Microswitch	KSF-009-0	
23	Actuator (A)	KNA-101-A	
24	Actuator (B)	KNA-102-B	
25*	Break lever	KNA-103-A	
26	Spring	KBH-040-0	
27*	Return lever	KNA-104-C	
28	Spring	KBH-027-B	
29	Return lever hub	KLA-068-A	
30	Washer	KNA-170-0	
31	Aluminum plate	KWM-015-A	
32	Retaining collar	N51-786-B	
33	Switch	KSN-001-A	
34	Warren motor	KXM-002-A	
35*	Cable	KDA-006-0	
36*	Cable cramp	K16-602-0	
37*	Stop angle	KNA-217-0	
38	Plastic cover	KNK-047-B	
39	⊕ M2.6 x 3 machine screw		
40	⊕ M2.6 x 5 machine screw		
41	⊕ M2.6 x 25 machine screw		
42	⊕ M3 x 5 machine screw		
43	⊕ M3 x 8 machine screw		
44	Spring washer 2.6φ		
45	Spring washer 3φ		
46	Flat washer M2.6		
47	Flat washer M3		
48	Cushion washer 3.2φ x 8φ x 0.5t		
49	Teflon washer 3.2φ x 8φ x 0.3t		

3. TONEARM ASSEMBLY (KPD-006-A)

NOTICE: Any parts asterisked (*) are subject to being not supplied.


Key No.	Description	Part No.	
1	Main weight	W73-013-0	
2	Screw	B11-657-C	
3	Washer	B23-642-0	
4*	Arm head		
5	Rateral balance	W73-166-0	
6*	Cartridge (PC-35)		
7	Nut	B71-653-0	

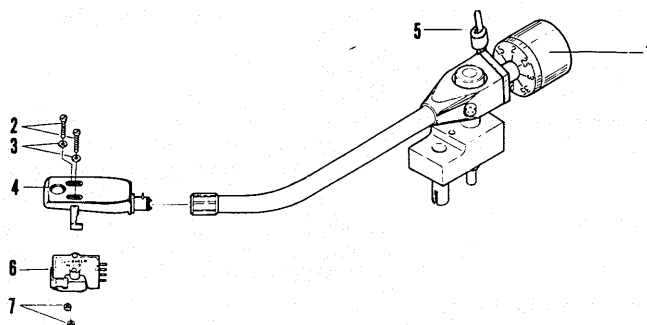

4. PU-LINKING PLATE ASSEMBLY (W72-056-M)

NOTICE: Any parts asterisked (*) are subject to being not supplied.


Key No.	Description	Part No.	
1*	Pu-linking plate unit	W72-081-J	
2	Spring	B31-749-B	
3*	Screw	N54-048-0	
4	Spring	B31-745-B	
5	⌀ M4 x 6 machine screw	KBA-002-0	
6*	Weight	N82-001-0	
7	Flat washer 3φ		
8	Spring washer 3φ		
9	⌀ M3 x 10 machine screw		
10	Nut M3		
11	⌀ M3 x 12 machine screw		

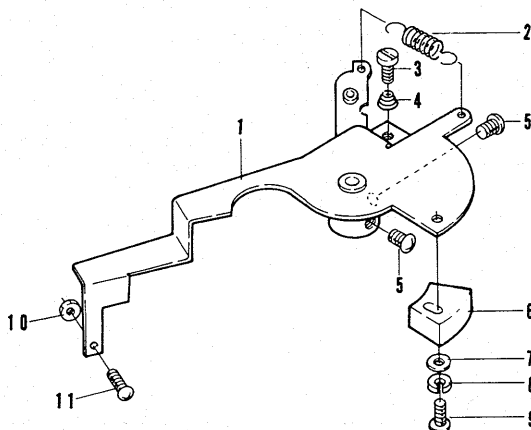

5. CENTER SHAFT BEARING ASSEMBLY (W71-004-C)

NOTICE: Any parts asterisked (*) are subject to being not supplied.


Key No.	Description	Part No.	
1*	Center shaft	N54-786-B	
2*	Steelball 1/8"		
3*	Center shaft bearing	N23-614-C	
4	Spring washer 3φ		
5	⌀ M3 x 5 machine screw		

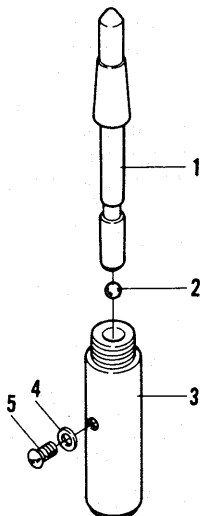

6. ELEVATION SHAFT GUIDE PIN ASSEMBLY

NOTICE: Any parts asterisked (*) are subject to being not supplied.


Key No.	Description	Part No.	
1	Washer (M)	B22-612-0	
2	Spring	B31-645-A	
3	Washer (M)	B22-612-0	
4	Retaining washer E-type		
5	Pin	N51-791-A	
6	⌀ M2.6 x 4 machine screw		
7	Elevation shaft	N51-073-B	
8	Pin	N92-602-0	

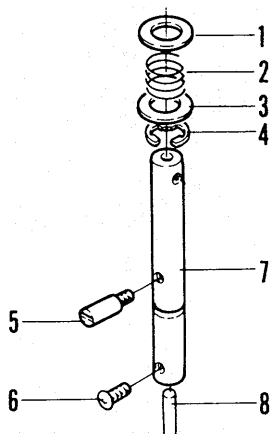

7. SPEED SELECTOR ASSEMBLY (KXA-126-0)

NOTICE: Any parts asterisked (*) are subject to being not supplied.


Key No.	Description	Part No.	
1*	Belt shifter	W72-051-C	
2	Spring	B31-028-B	
3*	Speed selector plate unit	W72-050-A	
4	Flat washer 4φ		
5*	Speed selector panel unit	W72-049-A	
6	Retaining washer E-type (E-3)		
7	Washer	N64-031-A	
8	Spring	B31-029-A	
9*	Cam unit	W72-052-A	
10	Flat washer 4φ		
11	Retaining washer E-type (E-3)		
12*	Speed selector lever	N64-030-B	
13	Spring washer 2.6φ		
14	⊕ M2.6 × 5 machine screw		

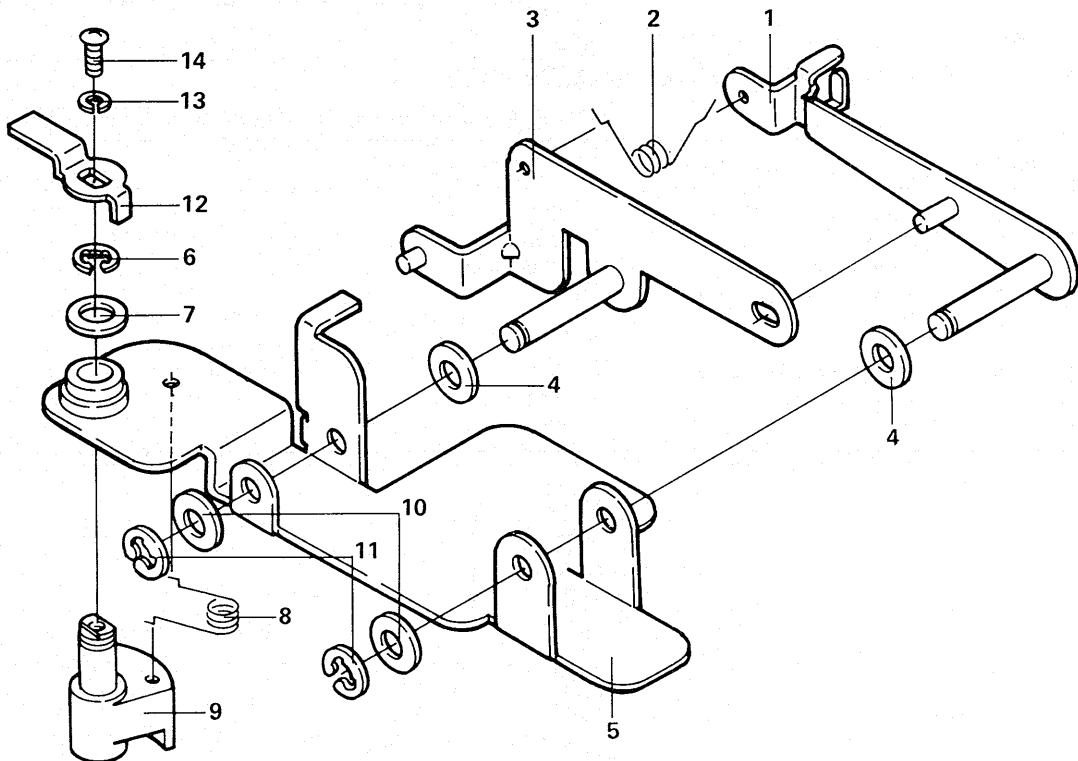

8. FUNCTION LEVER ASSEMBLY (KXA-132-B)

NOTICE: Any parts asterisked (*) are subject to being not supplied.


Key No.	Description	Part No.	
1*	Function board assembly	W72-054-B	
2*	Washer	B22-642-0	
3*	Start lever plate	W71-757-0	
4*	Start lever washer	N51-795-0	
5*	Start lever	N64-029-0	
6*	Selector lever washer	B51-794-0	
7*	Selector lever spring	B31-746-0	
8*	Selector lever	W72-059-A	
9*	Washer	B22-643-0	
10	Switch	S48-624-E	
11*	Switch cover	E32-685-C	

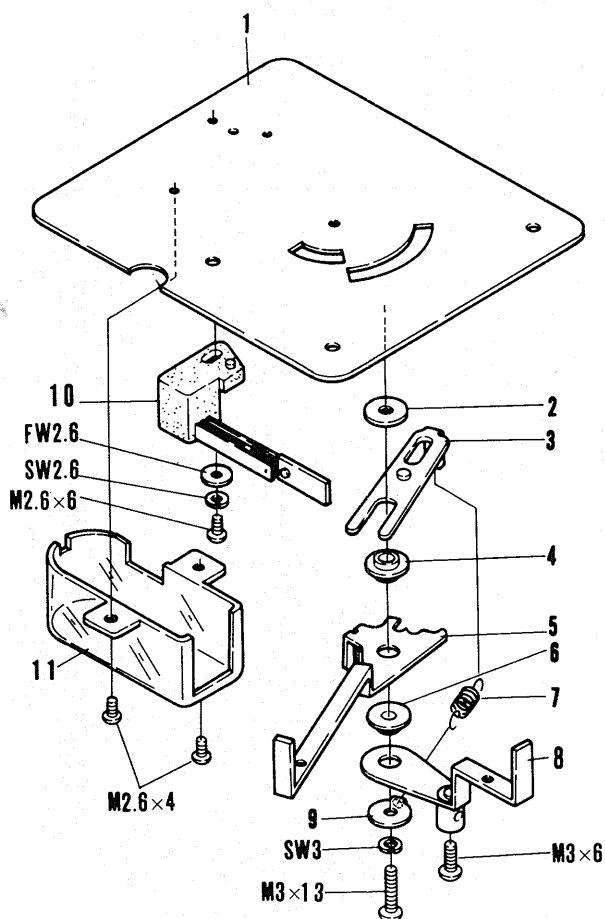

9. ELEVATION ASSEMBLY (W72-040-E)

NOTICE: Any parts asterisked (*) are subject to being not supplied.


Key No.	Description	Part No.	
1*	Elevation plate	N62-799-B	
2*	Rubber cushion	E31-736-A	
3*	Lifter unit	W71-763-B	
4*	Elevator plate unit	W72-041-0	
5	Spring washer 2φ		
6	⌀ M2 x 5 machine screw		
7*	Lever (A) for tonearm elevator	N62-770-0	
8	Spring washer 3φ		
9*	Nut	B71-636-0	
10*	Spacer	B21-659-0	
11*	Lever (B) for tonearm elevator	N64-013-0	
12	Spring	B31-748-0	
13	M3 nut		
14	Spring washer 3φ		
15*	Washer	B21-661-0	
16	Spring	B33-608-B	
17*	Lever	N51-064-B	
18	Nut M2.6		
19*	Elevator cam	N93-035-B	
20	Washer 4.2φ x 8φ x 0.3t		
21	Retaining washer E-type (E-3)		
22	Spring	B31-026-B	

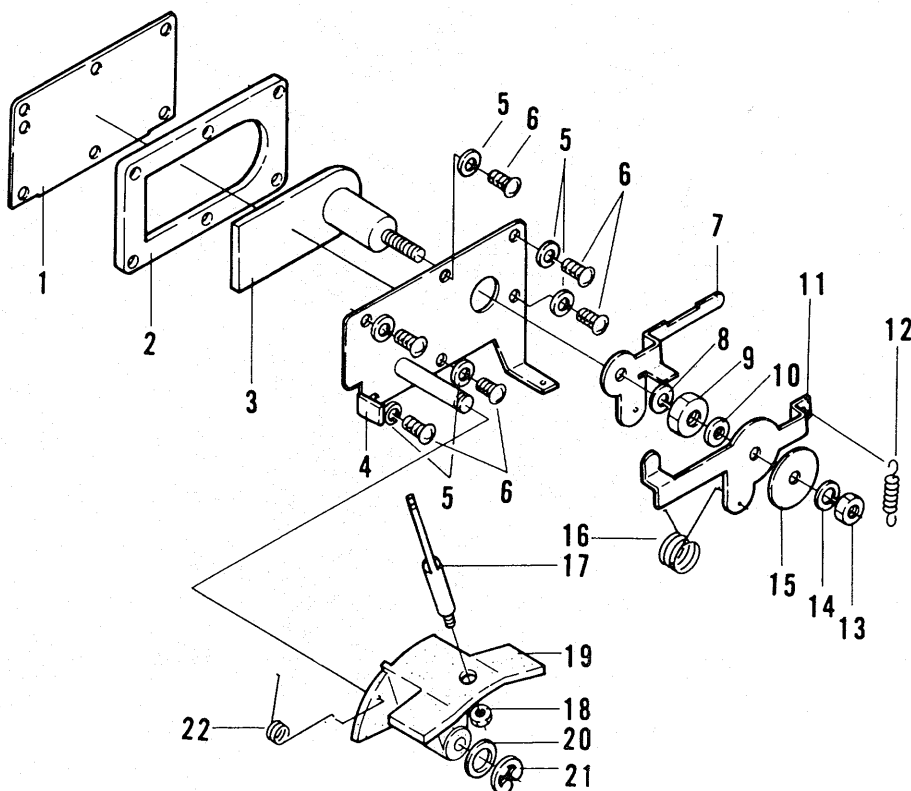

10 . PHONO MOTOR ASSEMBLY

NOTICE: Any parts asterisked (*) are subject to being not supplied.


Key No.	Description	Part No.	
1	Nut M4		
2	Spring washer 4φ		
3*	Motor cushion (B)	N64-018-0	
4*	Motor cushion (A)	N61-017-0	
5	Motor pulley 50Hz 60Hz	N24-005-E N24-006-E	
6	Rubber cushion	E31-605-A	
7	Phono motor	N11-006-D	

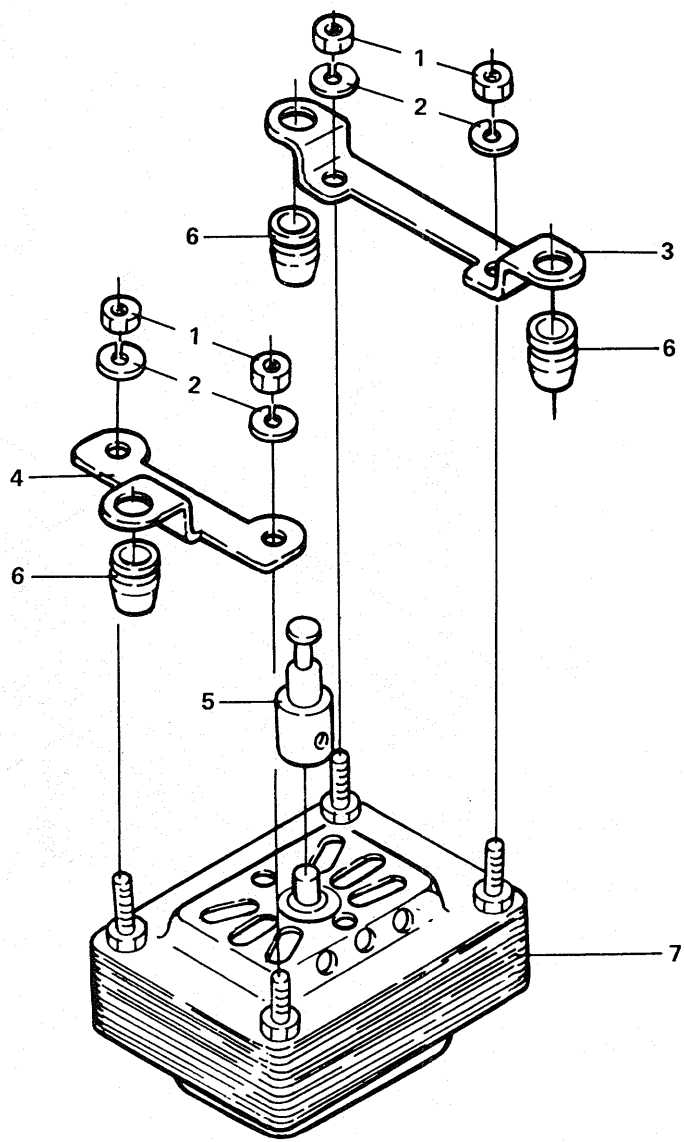


11. CIRCUIT BOARD ASSEMBLY

NOTICE: Any parts asterisked (*) are subject to being not supplied.

Key No.	Description	Part No.	
1	Fuse 0.3A	E21-017-0	
2	Fuse holder	K91-006-0	
3	Circuit board	KNP-033-0	
4	Terminal A	KNA-036-0	
5	Terminal B	K28-005-A	
6	Capacitor 0.047μF	KCE-003-0	

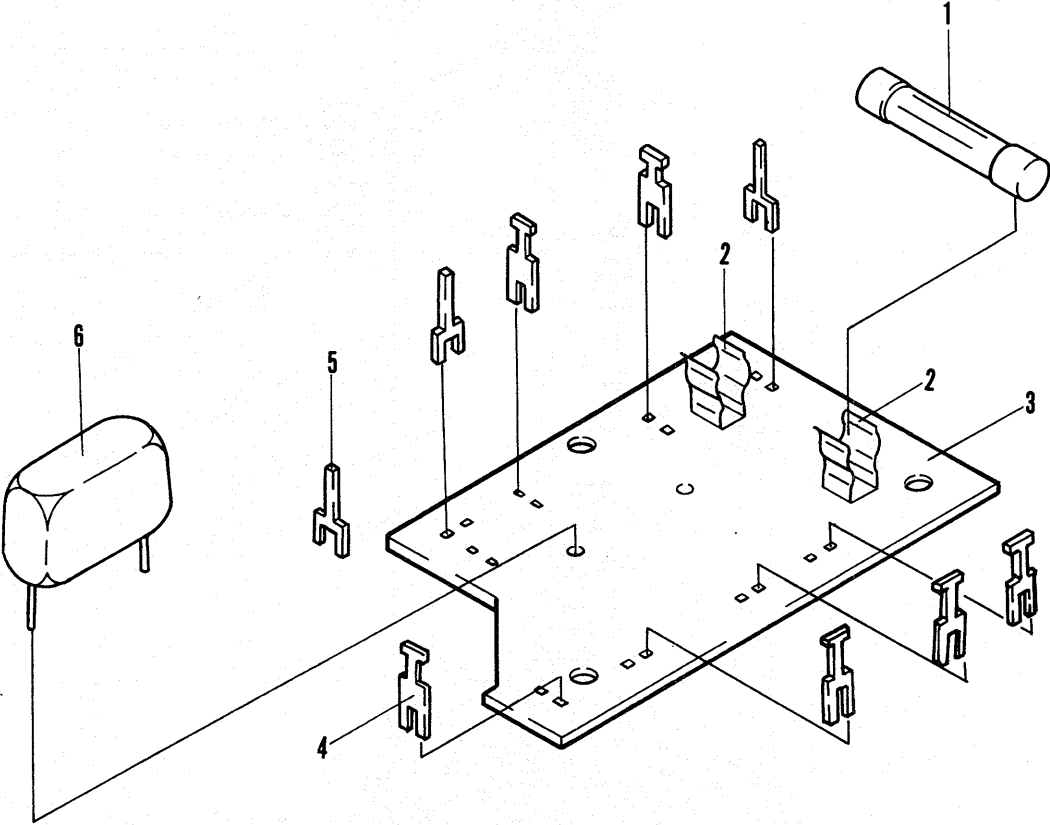

12. SPEAKER SYSTEM PACKING

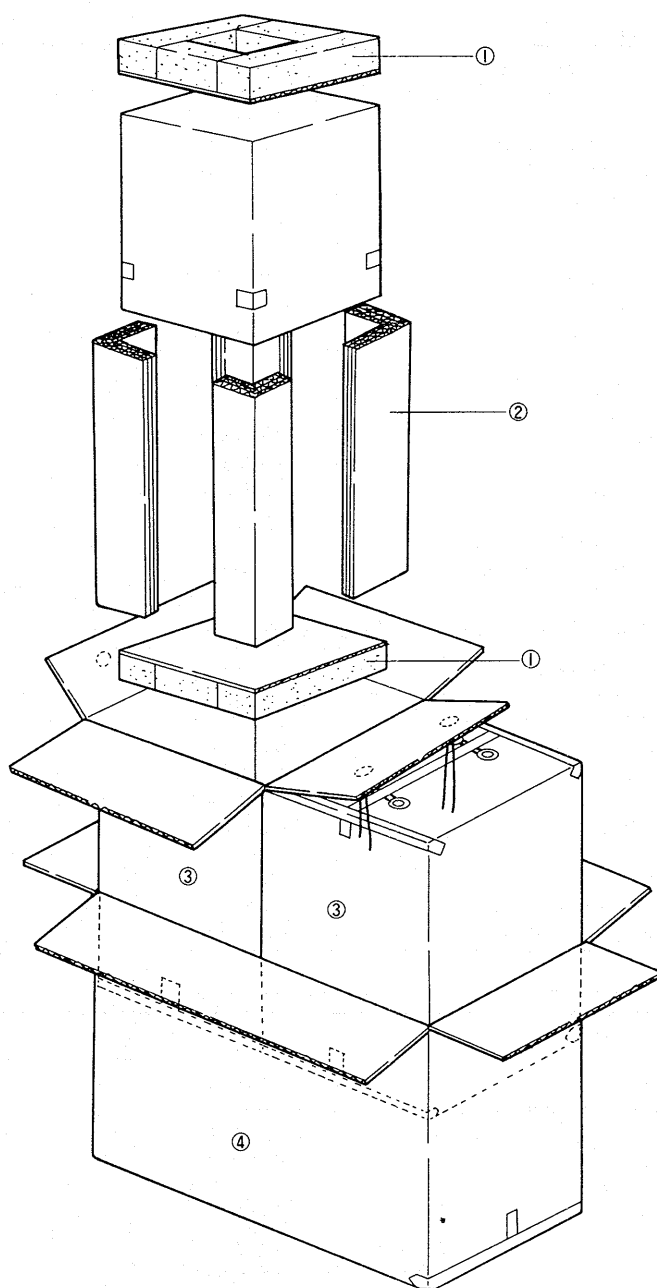

NOTICE: Any parts asterisked (*) are subject to being not supplied.

Key No.	Description	Part No.	
1	Pad A	KHK-012-0	
2	Pad B	KHK-011-A	
3	Packing case A	KHF-006-0	
4	Packing case B	KHG-025-0	
	PACKING CASE ASSEMBLY WITH 1,2,3, and 4	KHK-038-0	

13. CONTROL CENTER PACKING

PACKING CASE IN CENTER BOX

Key No.	Description	Part No.	
1	Pad A	KHA-014-0	
2	Dust cover packing case	H22-037-A	
3	Dust cover assembly	M63-022-B	
4	Accessory parts A		
5	Pad B	H22-036-0	
6	Cabinet assembly	KMN-003-0	
7	Metal frame A	KAP-003-A	
8	Metal frame B	KAP-004-A	
9	Accessory parts B		
10	Rubber mat assembly	E31-166-A	
11	Card board case	KHF-005-B	
12	Pad C	KHA-013-0	
13	Packing case A	KHG-024-0	
14	Packing case B	KHP-003-0	
	PACING CASE ASSEMBLY WITH 1,5,11,12,13, and 14	KHK-037-B	

ACCESSORY PARTS A indicates key No. 4 (See the next page.)


Key No.	Description	Part No.	
	FM T-type antenna	D53-001-A	
	AM read antenna	D53-022-A	
	Pin plug	K72-015-A	
	Fuse 1A	E21-004-0	
	Fuse 0.5A	E21-007-0	
	Felt pad	E33-008-0	
	Polishing cloth	E33-009-0	
	Operating instructions	KRB-005-A	

ACCESSORY PARTS B indicates key No. 9 (See the next page.)


Key No.	Description	Part No.	
	EP adaptor	M93-603-A	
	Screwdriver for unpacking	P25-607-A	
	Oil	N93-665-0	
	Rubber bush A	E31-743-0	
	Small screw driver	E11-125-A	
	Rubber bush B	E31-744-0	
	Capstan 50Hz	N24-005-E	
	60Hz	N24-006-E	

OTHERS

Key No.	Description	Part No.	
	Center box assembly	KMN-003-0	
	Hinge B with stopper	M62-078-A	
	Hinge C	M62-079-A	
	Accessory parts B box	KHX-001-D	
	Accessory parts B box cover	KHX-002-D	
	Tonearm cover A	H52-003-A	
	Tonearm cover B	H52-004-A	

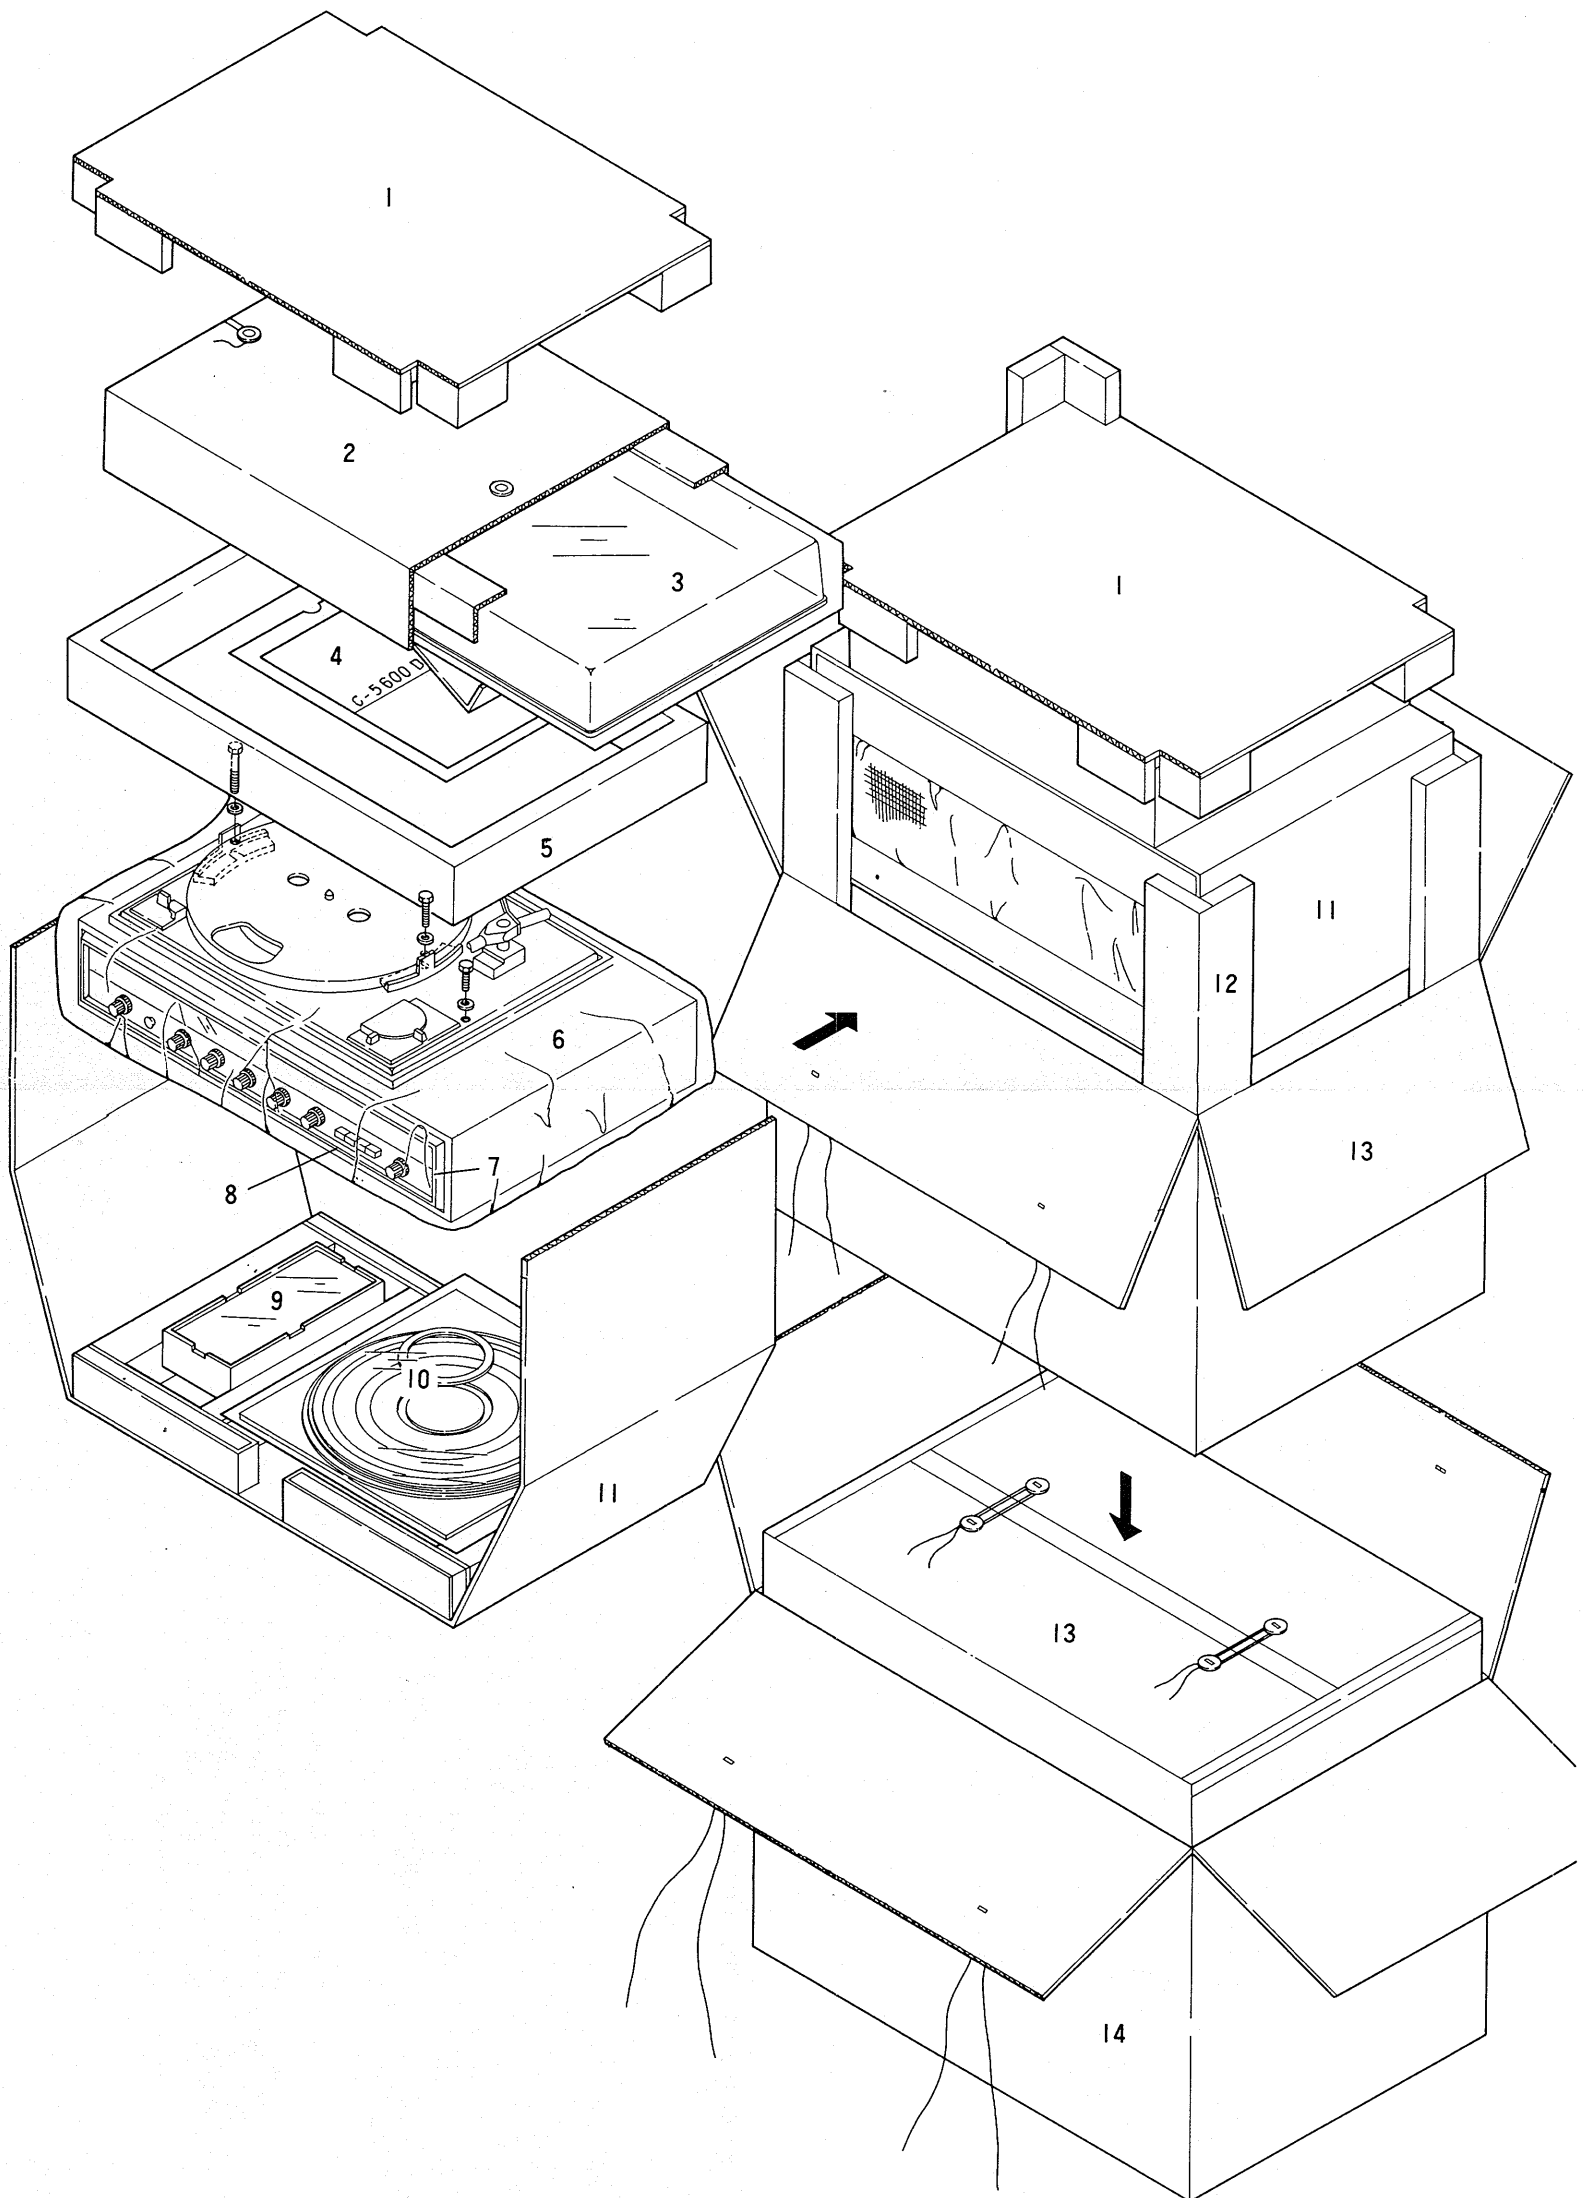


14. DIAL CORD STRINGING

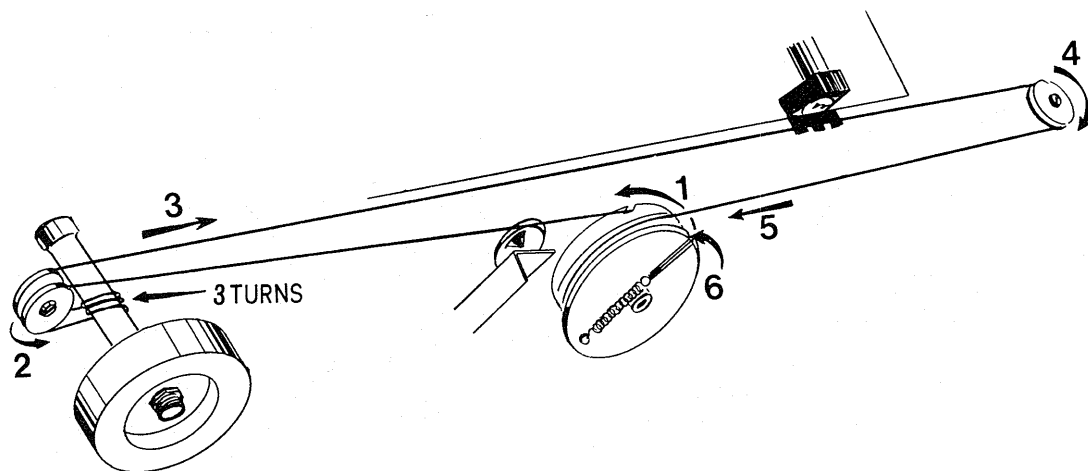

15. 8P-PLUG CONNECTIONS

8P-PLUG

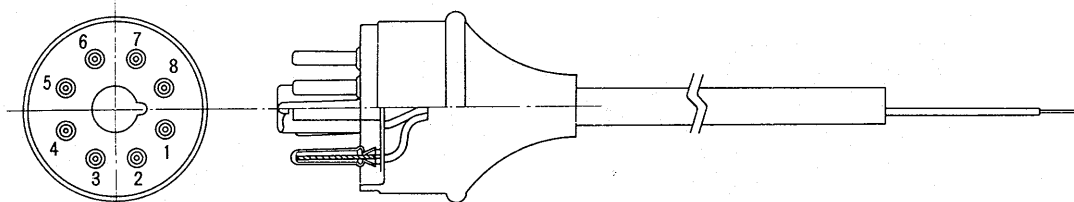

- Shield wire(-). To be connected to 5 of the 8P-PLUG.
- Braid wire(+). To be connected to 4.
- Red wire. To be connected to 1.
- Black wire. To be connected to 2.
- Yellow wire. To be connected to 8.
- Blue wire. To be connected to 7.

PIONEER ELECTRONIC CORPORATION

15-5, 4-Chome, Ohmori-nishi, Ohra-ku, Tokyo, Japan

U.S. PIONEER ELECTRONICS CORPORATION

178 Commerce Road, Carlstadt New Jersey 07072 U.S.A.

PIONEER ELECTRONIC (EUROPE) N.V.

Meir-center, Meir 21, 2000 Antwerp, Belgium

© MAR. 1973

PRINTED IN JAPAN