

**CONTROL / DISPLAY SCHEMATIC DIAGRAM - SCHEMA COMMANDES / AFFICHEUR - SCHALTBIL
ESQUEMA MANDOS / INDICADOR**

KDB




1: HAVE DIODE

0: NO DIODE VMAY

	VINAX
LOCATION	

MODEL	D726
-------	------

2520	0
------	---

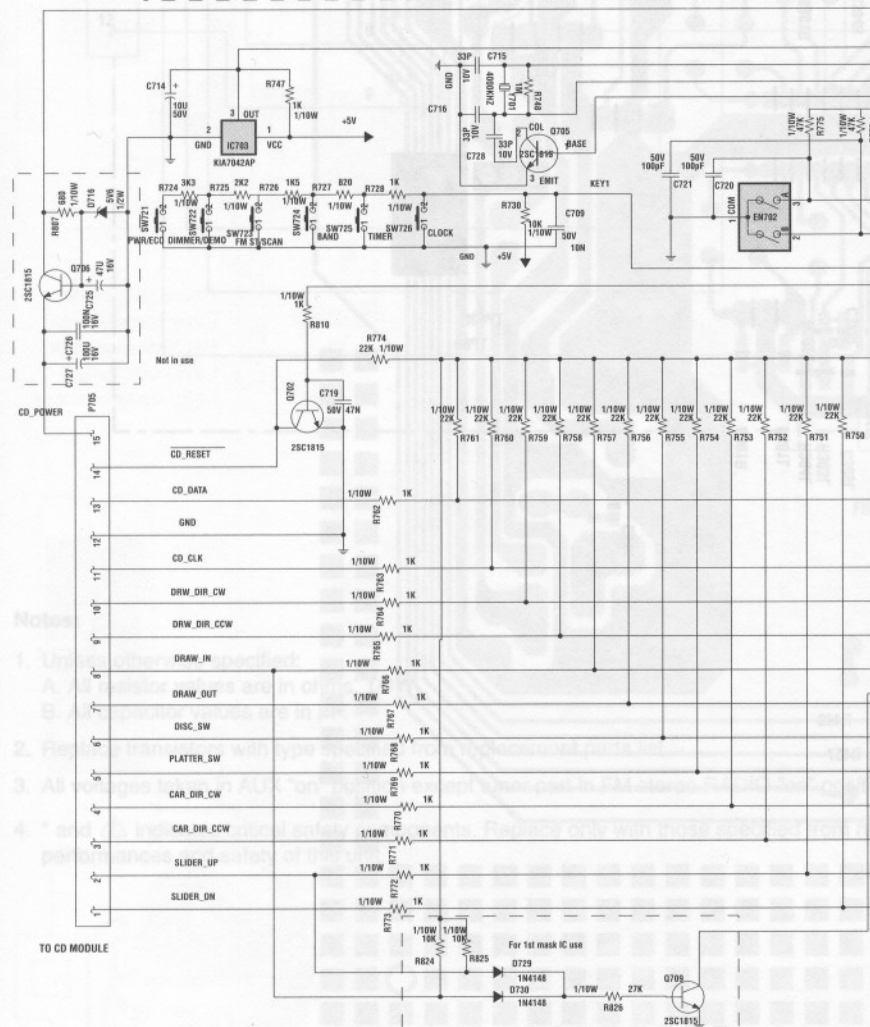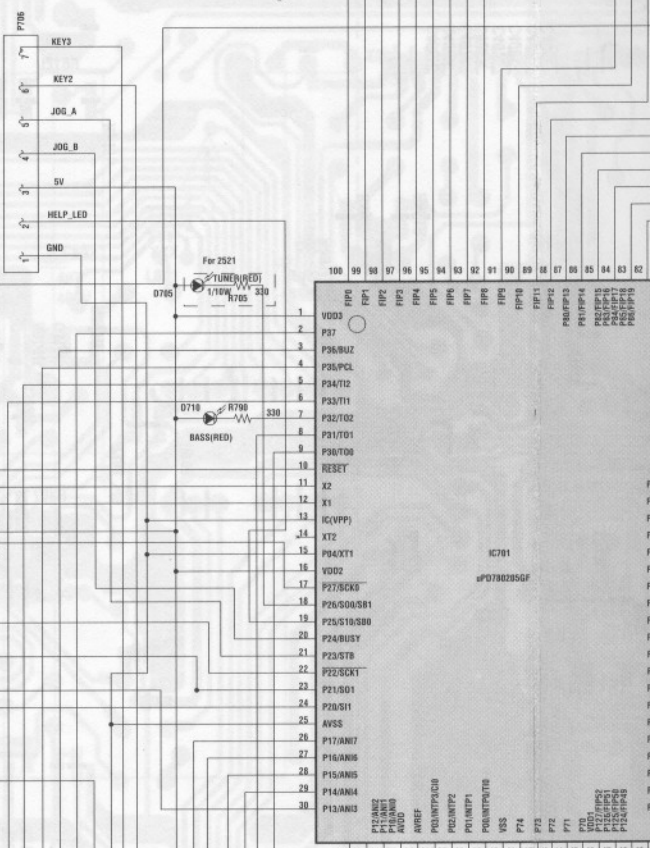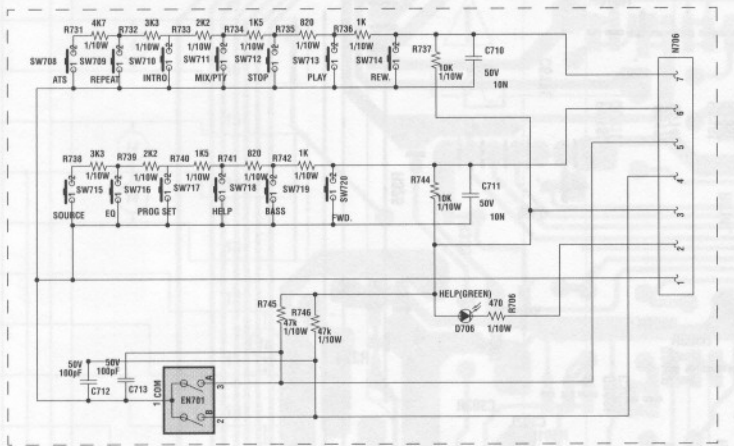


CRKD2520

First issue 05 / 00





POWER SUPPLY SCHEMATIC DIAGRAM - ALIMENTATION -
SCHALTBILD NETZTEIL - ALIMENTAZIONE - ESQUEMA ALIMENTACIÓN

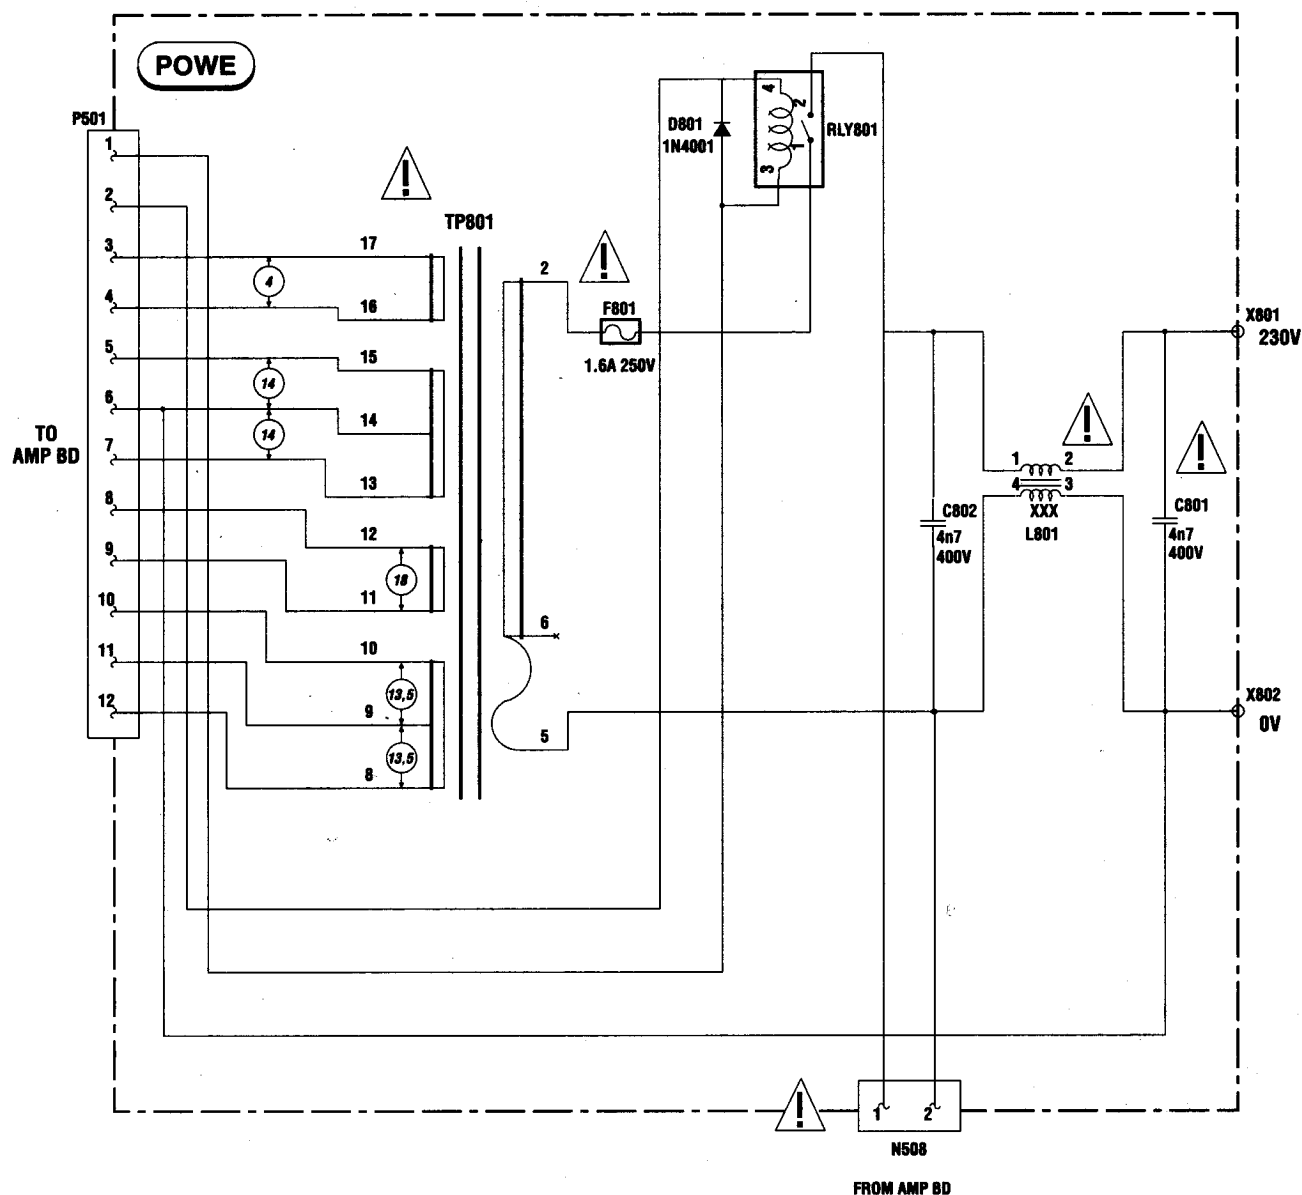


- Notes:
- 1. Unless otherwise specified:
 - A. All resistor values are in ohms, 1/4W.
 - B. All capacitor values are in μF .
 - 2. Replace transistors with type specified from replacement parts list.
 - 3. All voltages taken in AUX "on" position except tuner part in FM stereo RADIO "on" position.
 - 4. * and $\triangle$ indicates critical safety components. Replace only with those specified from replacement parts list to maintain proper performances and safety of this unit.

MAIN SCHEMATIC DIAGRAM - SCHEMA DE LA PLATINE PRINCIPALE - SCHALTBILD HAUPTPLATINE - ESQUEMA DE LA PLATINA PRINCIPAL (TAPE PART)

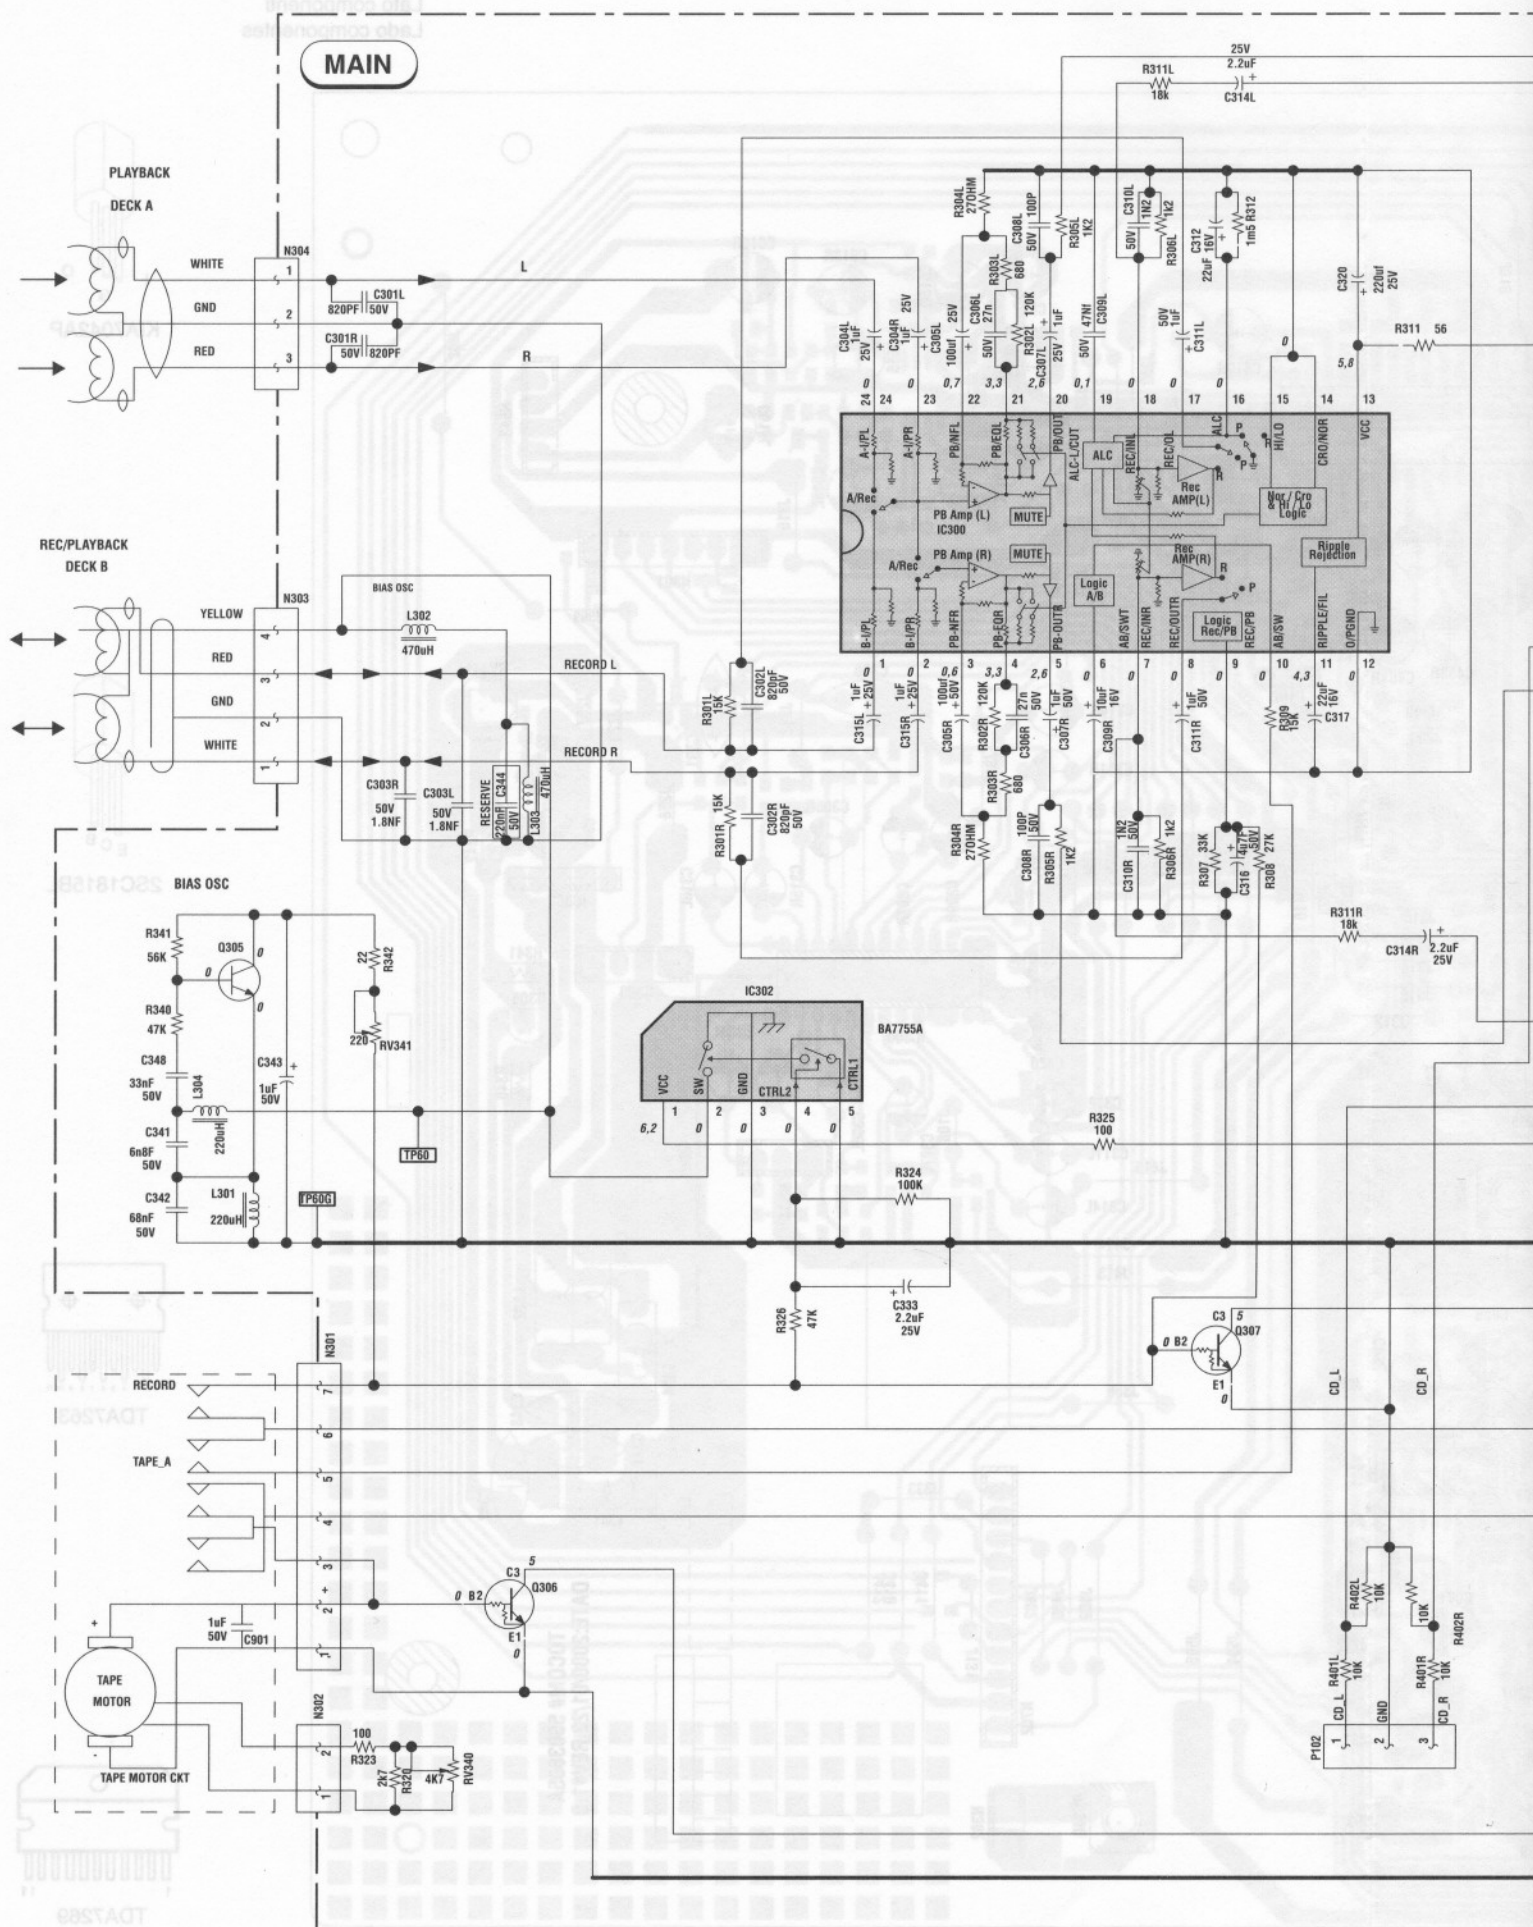

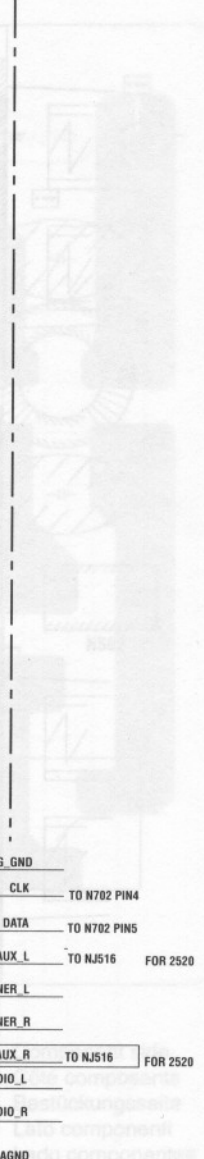


MAIN SCHEMATIC DIAGRAM - SCHEMA DE LA PLATINE PRINCIPALE -
SCHALTBILD HAUPTPLATINE - SCHEMA DELLA PIASTRA PRINCIPALE -
ESQUEMA DE LA PLATINA PRINCIPAL (AUDIO PART)

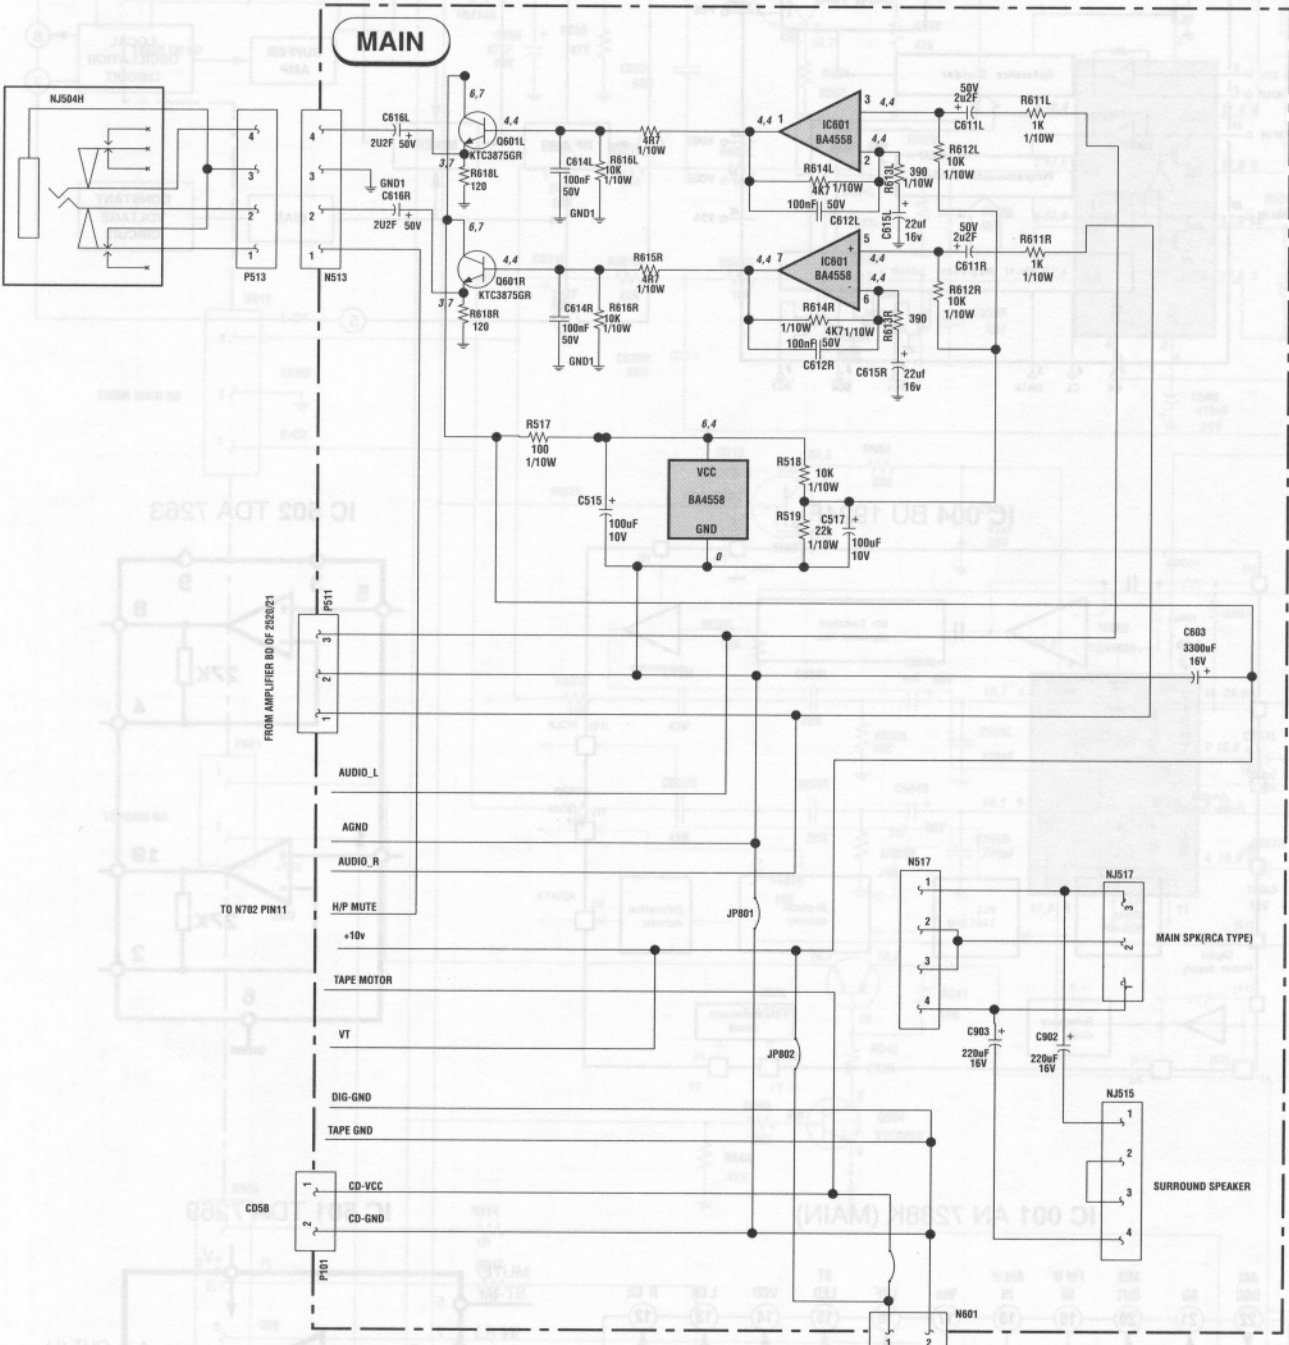


MAIN SCHEMATIC DIAGRAM - SCHEMA DE LA PLATINE PRINCIPALE - SCHALTBILD HAUPTPLATINE - ESQUEMA DE LA PLATINA PRINCIPAL (TUNER PART)

MAIN


MODE	PINS OF IC002		
	7	8	9
FM-STR	1	0	1
FN-MONO	1	0	0
MW	0	1	X
LW	1	1	X

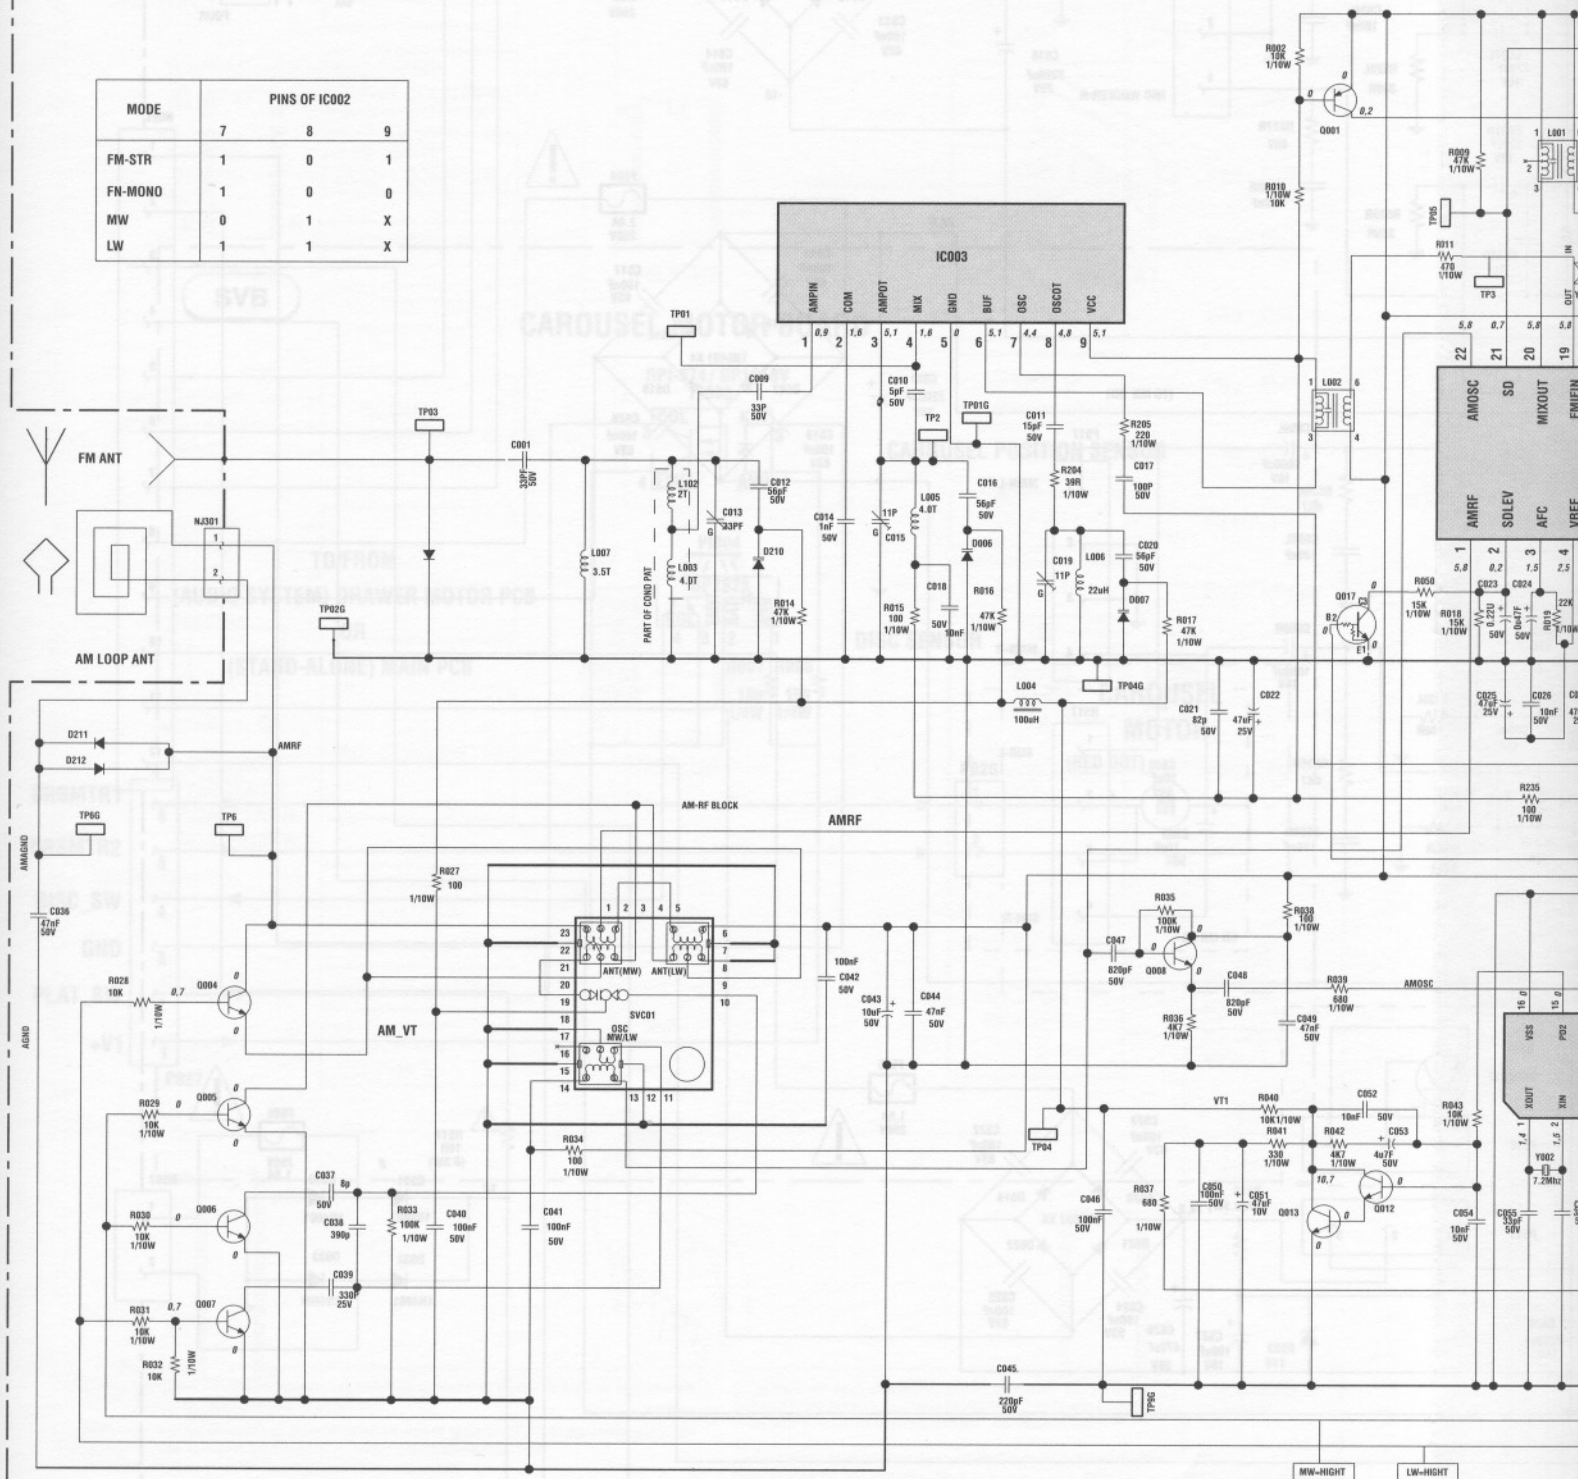

TBILD HAUPTPLATINE - SCHEMA DELLA PIASTRA PRINCIPALE -

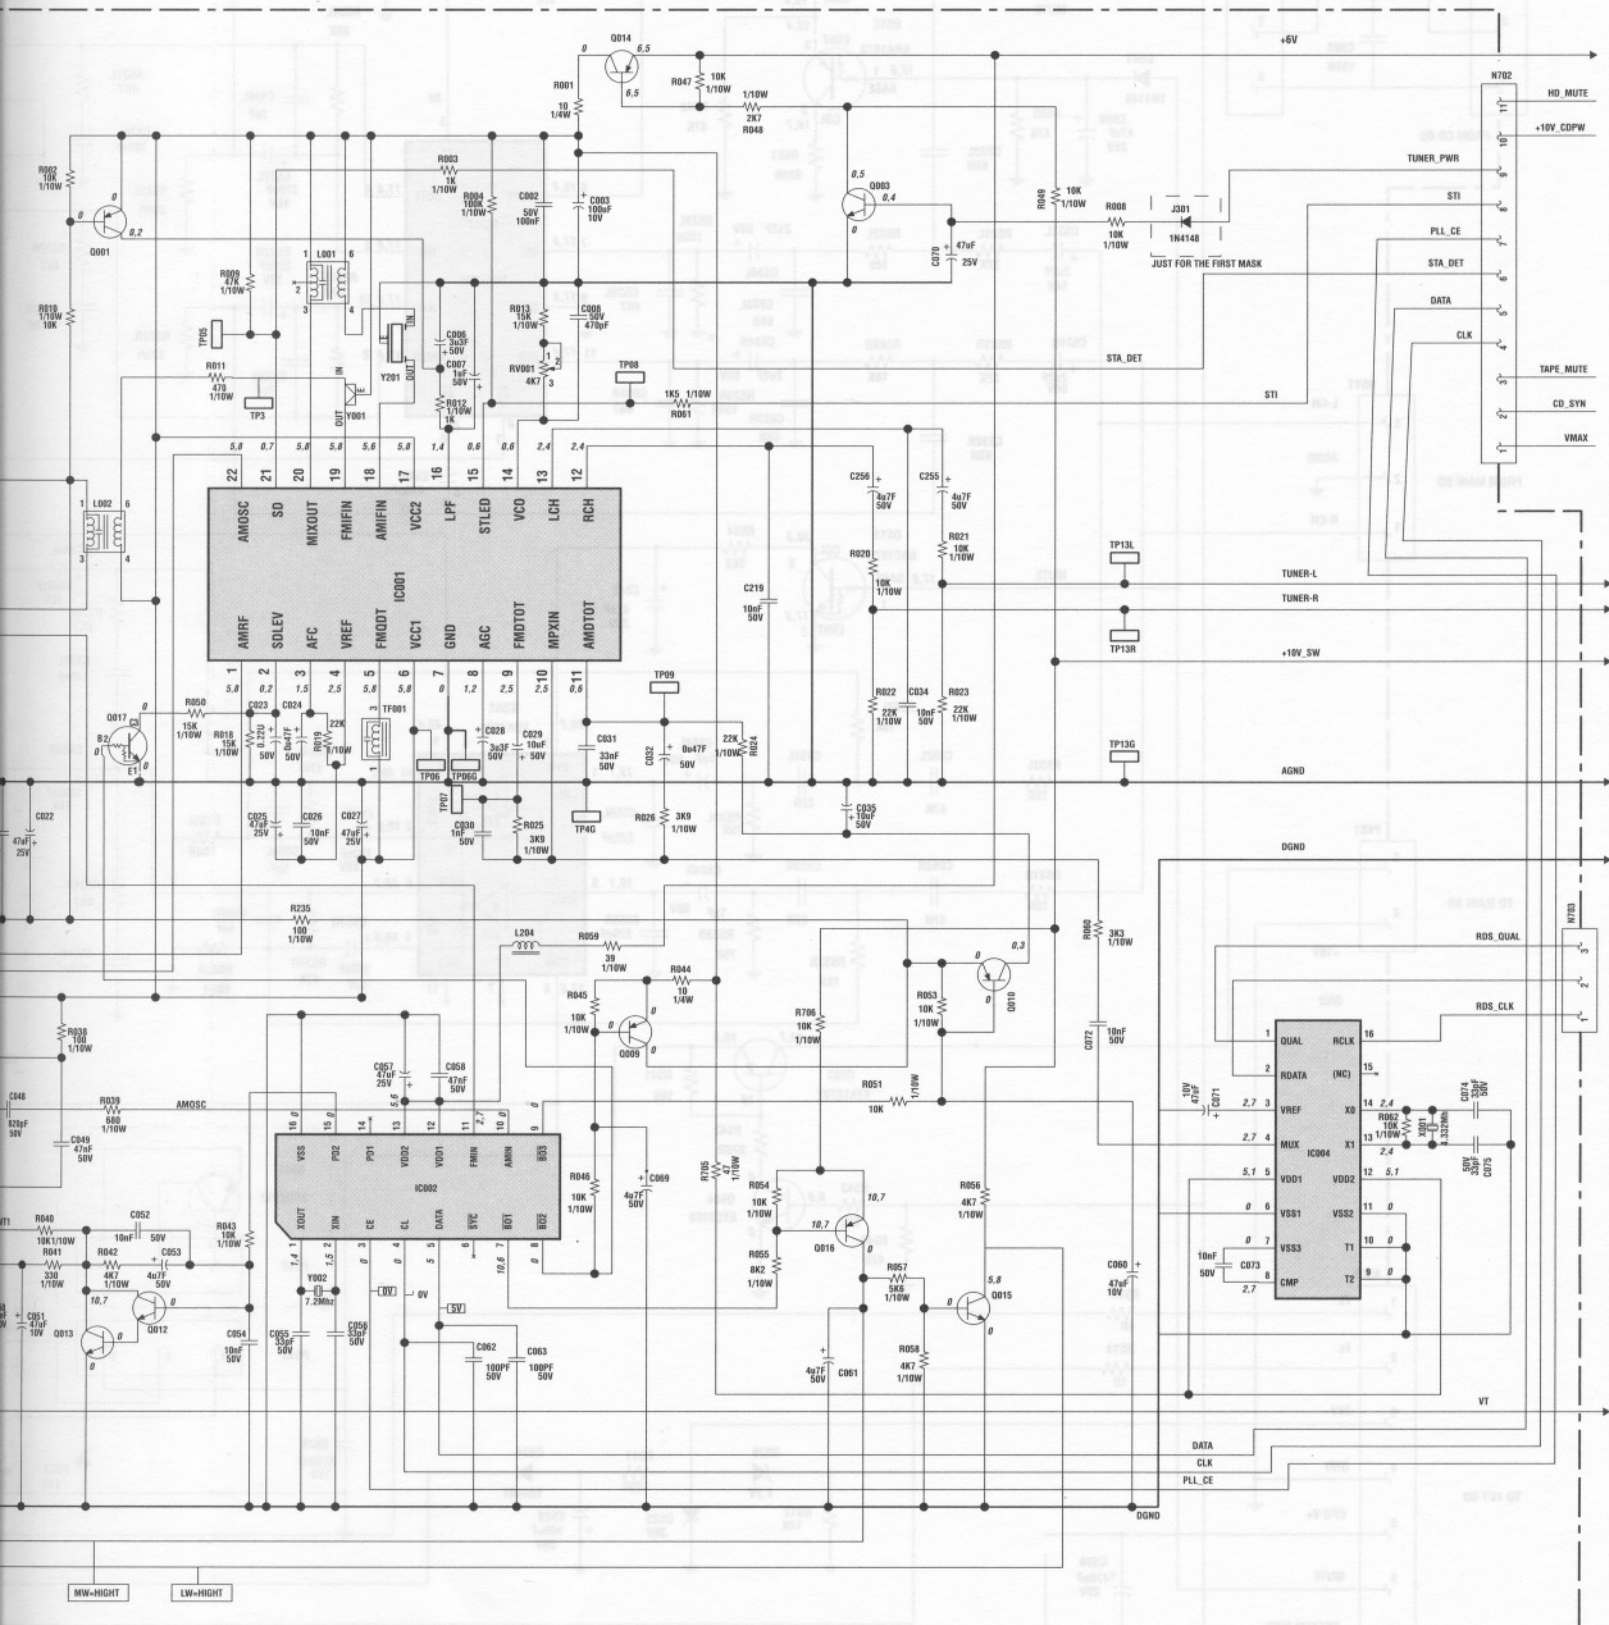

AMPLIFIER AND POWER SUPPLY SCHEMATIC DIAGRAM - SCHEMA DE L'AMPLIFICATEUR ET DE L'ALIMENTATION - SCHEMA DEL AMPLIFICATORE E DELL'ALIMENTAZIONE - ESQUEMA DEL AMPLIFICADOR Y DE LA ALIMENTACION

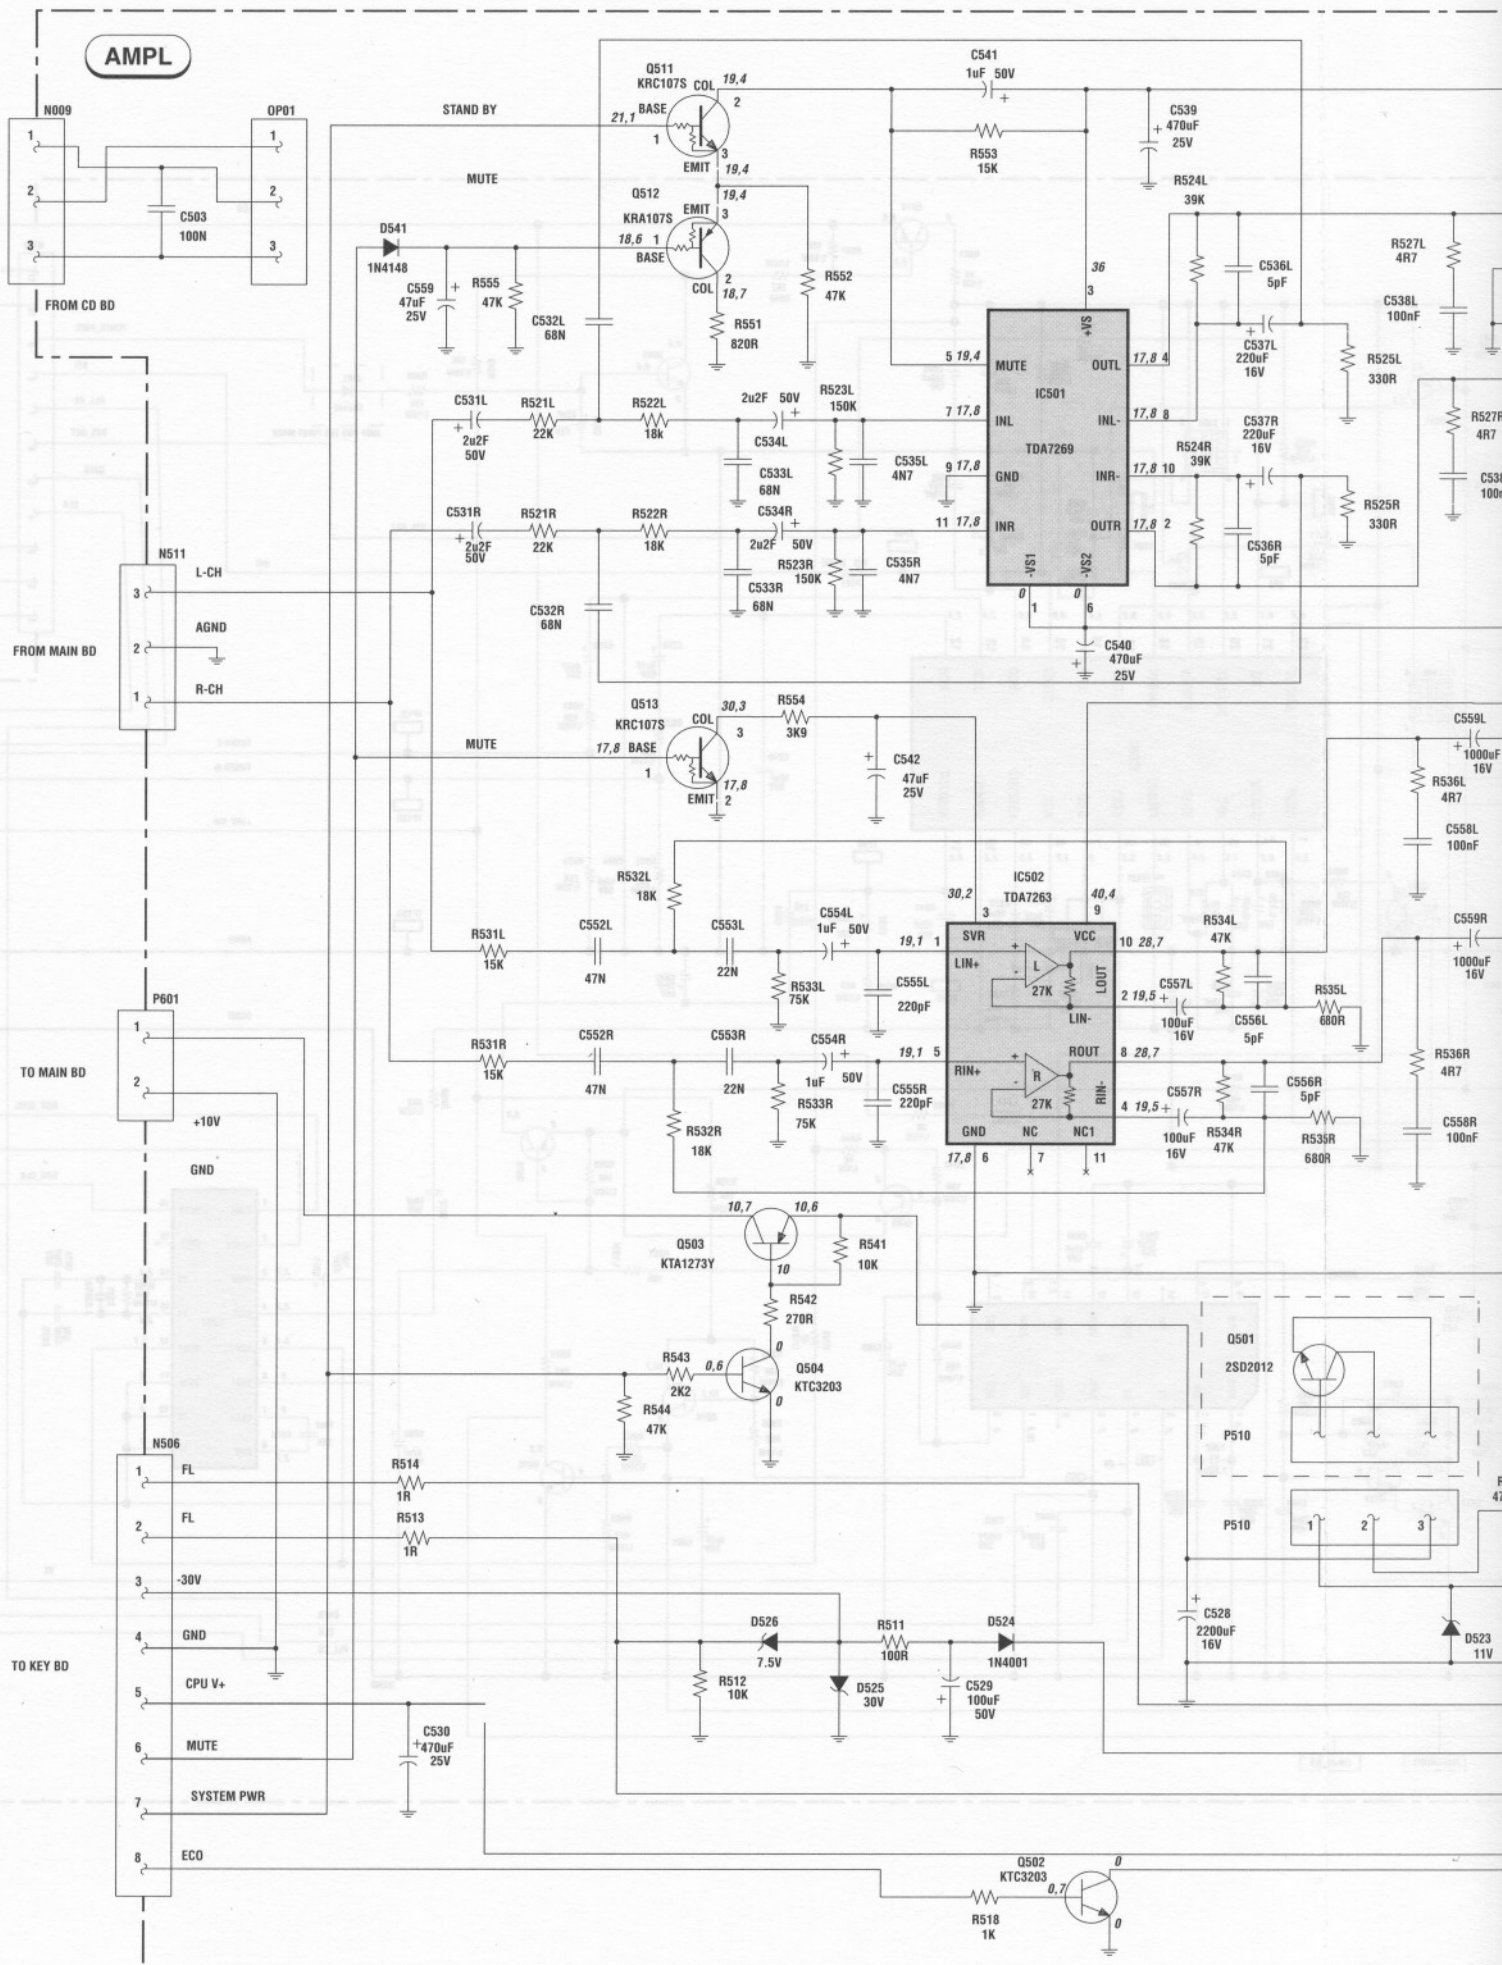



SENSOR SCHEMATIC DIAGRAM - SCHEMA CAPTEURS CD - SCHALTBILD CD
SENSOR - SCHEMA SENSORI CD - ESQUEMA SENSORES CD

