

marantz®

Service Bulletin

No. : MZ08-US01

Date: March 5, 2008

Model: SR4002, SR5002, SR7002, SR8002


Subject: Reset Procedure

Symptom: These units have been modified to never be powered ON by any means once they go into standby with the standby led flickering every 125m sec., unless the specialized procedure (*1) described below is performed.

Solution: *1: If the unit cannot be powered on after being plugged in again (with the STANDBY LED flickering every 125m seconds), the power amp has failed. The unit still can be powered on again through the following method, but it can further damage the power amplifier. Please never let end-users perform this procedure.

SR8002, SR7002:

Can be powered on by "FACTORY KEY" = [PURE DIRECT]+[7.1 CH INPUT]+[CLEAR]

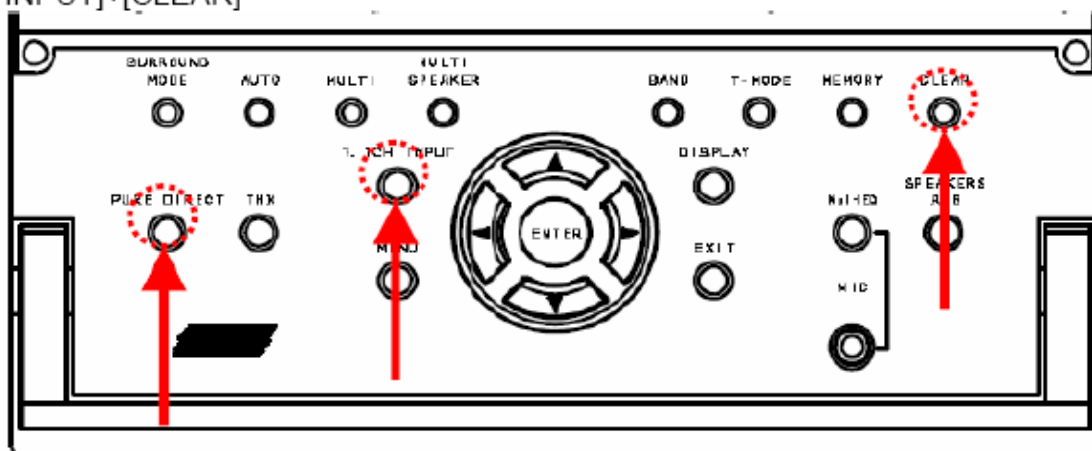


CONFIDENTIALITY NOTICE:

The information contained in this document is intended for the exclusive use by MARANTZ Authorized Service Centers and their employees. This document may contain information that is privileged, confidential and may be protected from disclosure under applicable laws and terms of the MARANTZ Service Agreement. Any distribution, disclosure, dissemination or copying of this document and the information it contains is prohibited. No responsibility will be accepted by MARANTZ for any damage, injury or loss resulting from the misuse of the information contained in this document.

SR5002, SR4002:

"FACTORY" KEY = SR5001: [MULTI SPEAKER] + [EXIT] + [ATT] SR4001:
[S.SPEAKER B] + [EXIT] + [ATT] However, this can further damage the POWER
AMP. Never let end users do this.

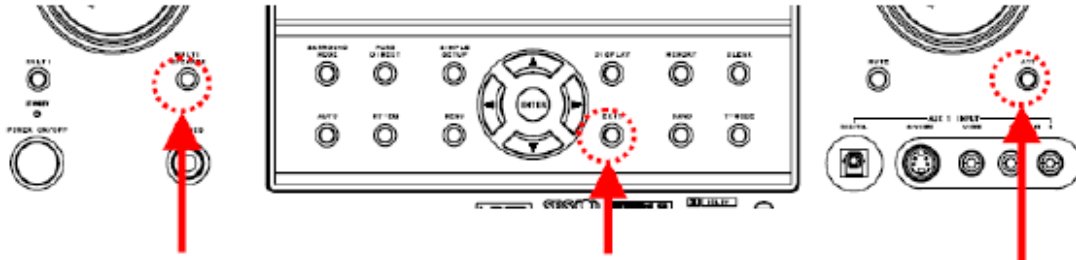

Serial Number Range:

All

CONFIDENTIALITY NOTICE:

The information contained in this document is intended for the exclusive use by MARANTZ Authorized Service Centers and their employees. This document may contain information that is privileged, confidential and may be protected from disclosure under applicable laws and terms of the MARANTZ Service Agreement. Any distribution, disclosure, dissemination or copying of this document and the information it contains is prohibited. No responsibility will be accepted by MARANTZ for any damage, injury or loss resulting from the misuse of the information contained in this document.