


Integra SERVICE MANUAL

Ref. No. 3829


Sep., 2004

AV RECEIVER MODEL DTR-6.5

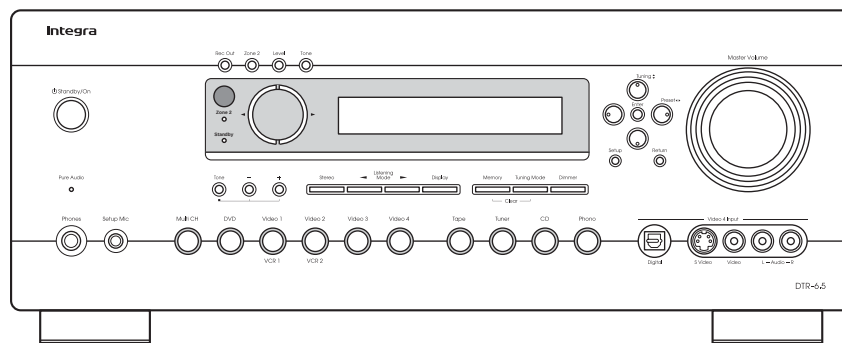

Black model

BMDD	120V AC, 60Hz
BMPPA	230V~240V AC, 50Hz

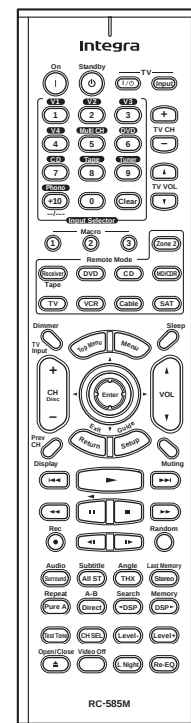

RC-585M

SAFETY-RELATED COMPONENT WARNING!!

THE MARK  FOUND ON SOME COMPONENT PARTS INDICATES THE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK.

WHEN REPLACING, BE SURE TO USE PARTS OF IDENTICAL DESIGNATION.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

SPECIFICATIONS

Amplifier Section

Power Output (2 channels driven):	100 W + 100 W (8Ω,20Hz–20kHz,FTC) 130 W + 130 W (6 Ω ,1kHz,DIN) 160 W + 160 W (6 Ω ,1kHz,JEITA)
Dynamic Power	230 W + 230 W (3 Ω ,Front) 170 W + 170 W (4 Ω ,Front) 115 W + 115 W (8 Ω ,Front)
THD (Total Harmonic Distortion)	0.08 % (Power Rated)
Damping Factor	60 (Front,1kHz,8 Ω)
Input Sensitivity and Impedance	200 mV/ 47 k Ω (LINE) 2.5 mV/ 4.7 k Ω (PHONO MM)
Output Level and Impedance	200 mV/ 470 Ω (REC OUT)
Phono Overload	70 mV (MM 1kHz 0.5 %)
Frequency Response	10 Hz–100 kHz/ +1 dB-3 dB (Direct mode)
Tone Control	$\pm$ 10 dB, 50 Hz (BASS) $\pm$ 10 dB, 10 kHz (TREBLE)
SN Ratio	106 dB (LINEIHF-A) 80 dB (PHONO,IHF-A)
Speaker Impedance	American : 6 Ω ~ other :4 Ω ~

Video Section

Input Sensitivity/Output Level and Impedance	1 Vp-p /75 Ω (Component and S-Video Y) 0.7 Vp-p /75 Ω (Component Pb/Cb,Pr/Cr) 0.28 Vp-p /75 Ω (S-Video C) 1 Vp-p /75 Ω (Composite)
Component Video Frequency Response	5 Hz – 50 MHz

Tuner Section

FM

Tuning Frequency Range	American: 87.5 MHz– 107.9 MHz Other : 87.5 MHz– 108.0 MHz
Usable Sensitivity	Stereo; 17.2 dBf 2 μ V(75 Ω IHF) Mono; 11.2 dBf 1 μ V(75 Ω IHF)
S/N Ratio	Stereo; 70 dB (IHF-A) Mono; 76 dB (IHF-A)
THD	Stereo; 0.3 % (1kHz) Mono 0.2 % (1kHz)
Frequency Response	30 Hz–15 kHz / $\pm$ 1 dB
Stereo Separation	45 dB (1kHz)

AM

Tuning Frequency Range	American: 530 kHz–1700 kHz Others: 522 kHz–1611 kHz
Usable Sensitivity	30 μ V
S/N Ratio	40 dB
THD	0.70%

General

Power Supply	American: AC 120 V, 60 Hz Australian: AC 230-240 V, 50 Hz
Power Consumption	American : 8.1A Others : 700 W
Stand-by Power Consumption	1.0 W
Dimensions(W x H x D)	435 W x 175 H x 428 D mm 17-1/8" W x 6-7/8" H x 16-7/8" D inches
Weight	15.2 kg 33.5 lbs

Video Inputs

Component Video Input	1,2,3
S-Video Compatible Jack Input	DVD,VIDEO1,VIDEO2,VIDEO3, VIDEO4
A/V Input	DVD,VIDEO1,VIDEO2,VIDEO3, VIDEO4

Video Outputs

Component Video Output	OUT
S-Video Compatible Jack Output	MONITOR OUT,VIDEO1,VIDEO2
A/V Output	MONITOR OUT,VIDEO1,VIDEO2

Audio Inputs

Digital Inputs	Optical : 5 , 1 (Front Panel) Coaxial : 2
Analog Inputs	DVD(MULTICHANNEL),VIDEO1,VID EO2,VIDEO3,VIDEO4,TAPE,CD,PHO NO
Multichannel Inputs	6

Audio Outputs

Digital Outputs	Optical : 1 Coaxial : 1
Analog Outputs	TAPE,VIDEO1,VIDEO2
Multichannel Pre Outputs	7
Subwoofer Pre Outputs	1
Speaker Outputs	9
Phones	1

Other Jacks

RS-232 Control	1
IR Input/Output	1
12V Trigger Out	3

Specifications and features are subject to change without notice.

SERVICE PROCEDURES

1. Replacing the fuses



This symbol located near the fuses indicates that the fuse used is fast operating type. For continued protection against fire hazard, replace with same type fuse. For fuse rating refer to the marking adjacent to the symbol.



Ce symbole indique que le fusible utilise est a rapide. Pour une protection permanente, n'utiliser que fusibles de meme type. Ce dernier est la qu le present symbol est appse.

CIRCUIT NO.	PART NO.	DESCRIPTION
F6901,F6902	252303 or 252197	15A-TUL-250V or 15A-UL/T-314,Fuse
F901	252196 or 252301	12A-UL/T-314 or 12A-TUL-250V <D>
F902	252079 or 252245 or 252279	6.3A-SE-EAK or 6.3A-SE-TL250V or 6.3A-SE-TL250V,Fuse <A>
F903	252164 or 252258 252075 or 252241 or 252275	5A-UL/T-237 or 5A-T/UL-ST2 <D> 2.5A-SE-EAK or 2.5A-SE-TL250V or 2.5A-SE-TL250V <A>
F9501	252160 or 252254 252075 or 252241 or 252275	2.5A-UL/T-237 or 2.5A-T/UL-ST2,Fuse <D> 2.5A-SE-EAK or 2.5A-SE-TL250V or 2.5A-SE-TL250V <A>

Note: <D>:120V model only
<A>: Australian model only

2. To initialize the unit

This device employs a microprocessor to perform various functions and operations. If interference generated by an external power supply, radio wave, or other electrical source results in accident which causes the specified operations and functions to operate abnormally.

To perform a result, please follow the procedure below.

- 1.Press and hold down the VIDEO-1 button, then press the STANDBY/ON button.
- 2.After "CLEAR" is displayed, the preset memory and each mode stored in the memory, such as surround, are initialized and will return to the factory setting.
3. Unplug the power supply cord.

3. Safety-check out


(U.S.A. model only)

After correcting the original service problem, perform the following safety check before releasing the set to the customer.


Leakage Current Check

Measure leakage current to a known earth ground(water pipe, conduit, etc.) by connecting a leakage current tester between the earth ground and exposed metal parts of the appliance (input/output terminals, screwheads,metal overlays, etc.). Plug the power supply cord directly into a 120V AC 60 Hz outlet and turn Standby switch on. Any current meaused must not exceed 0.5mA.


4

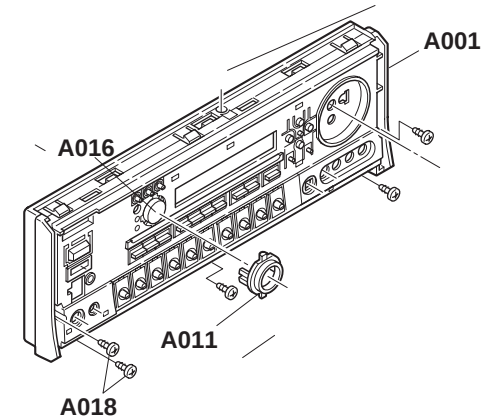

BLOCK DIAGRAM

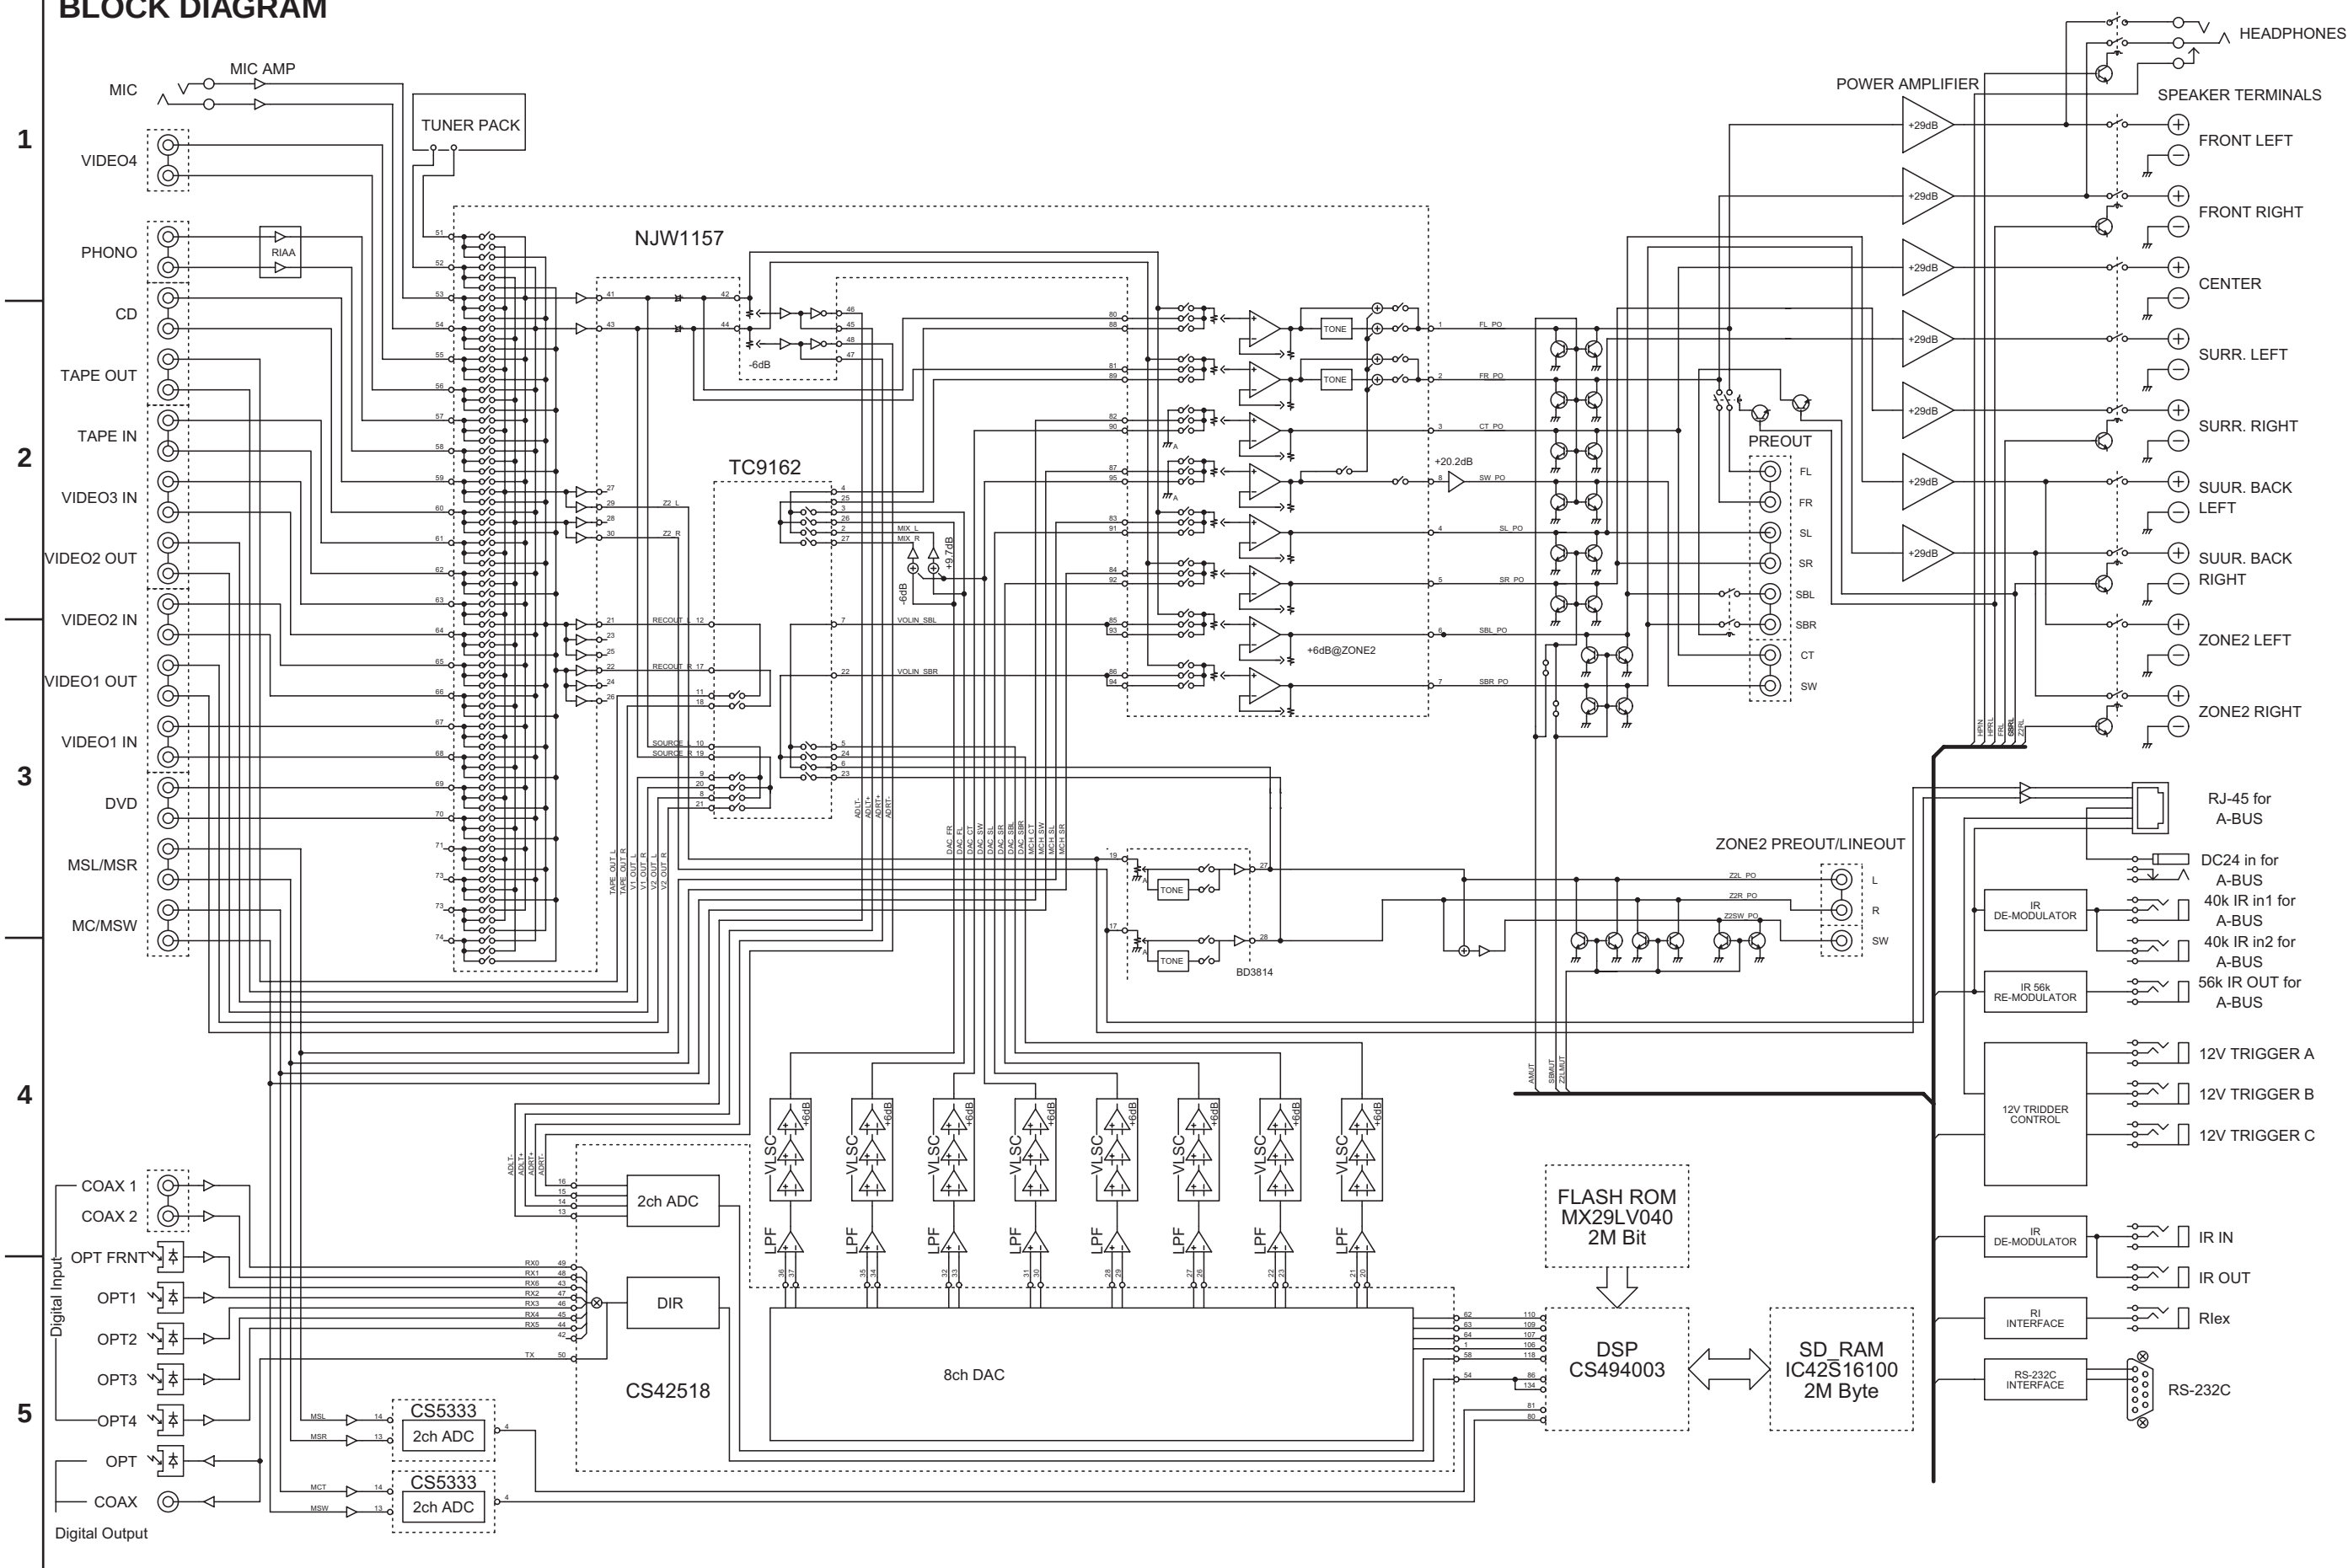

BLOCK DIAGRAM

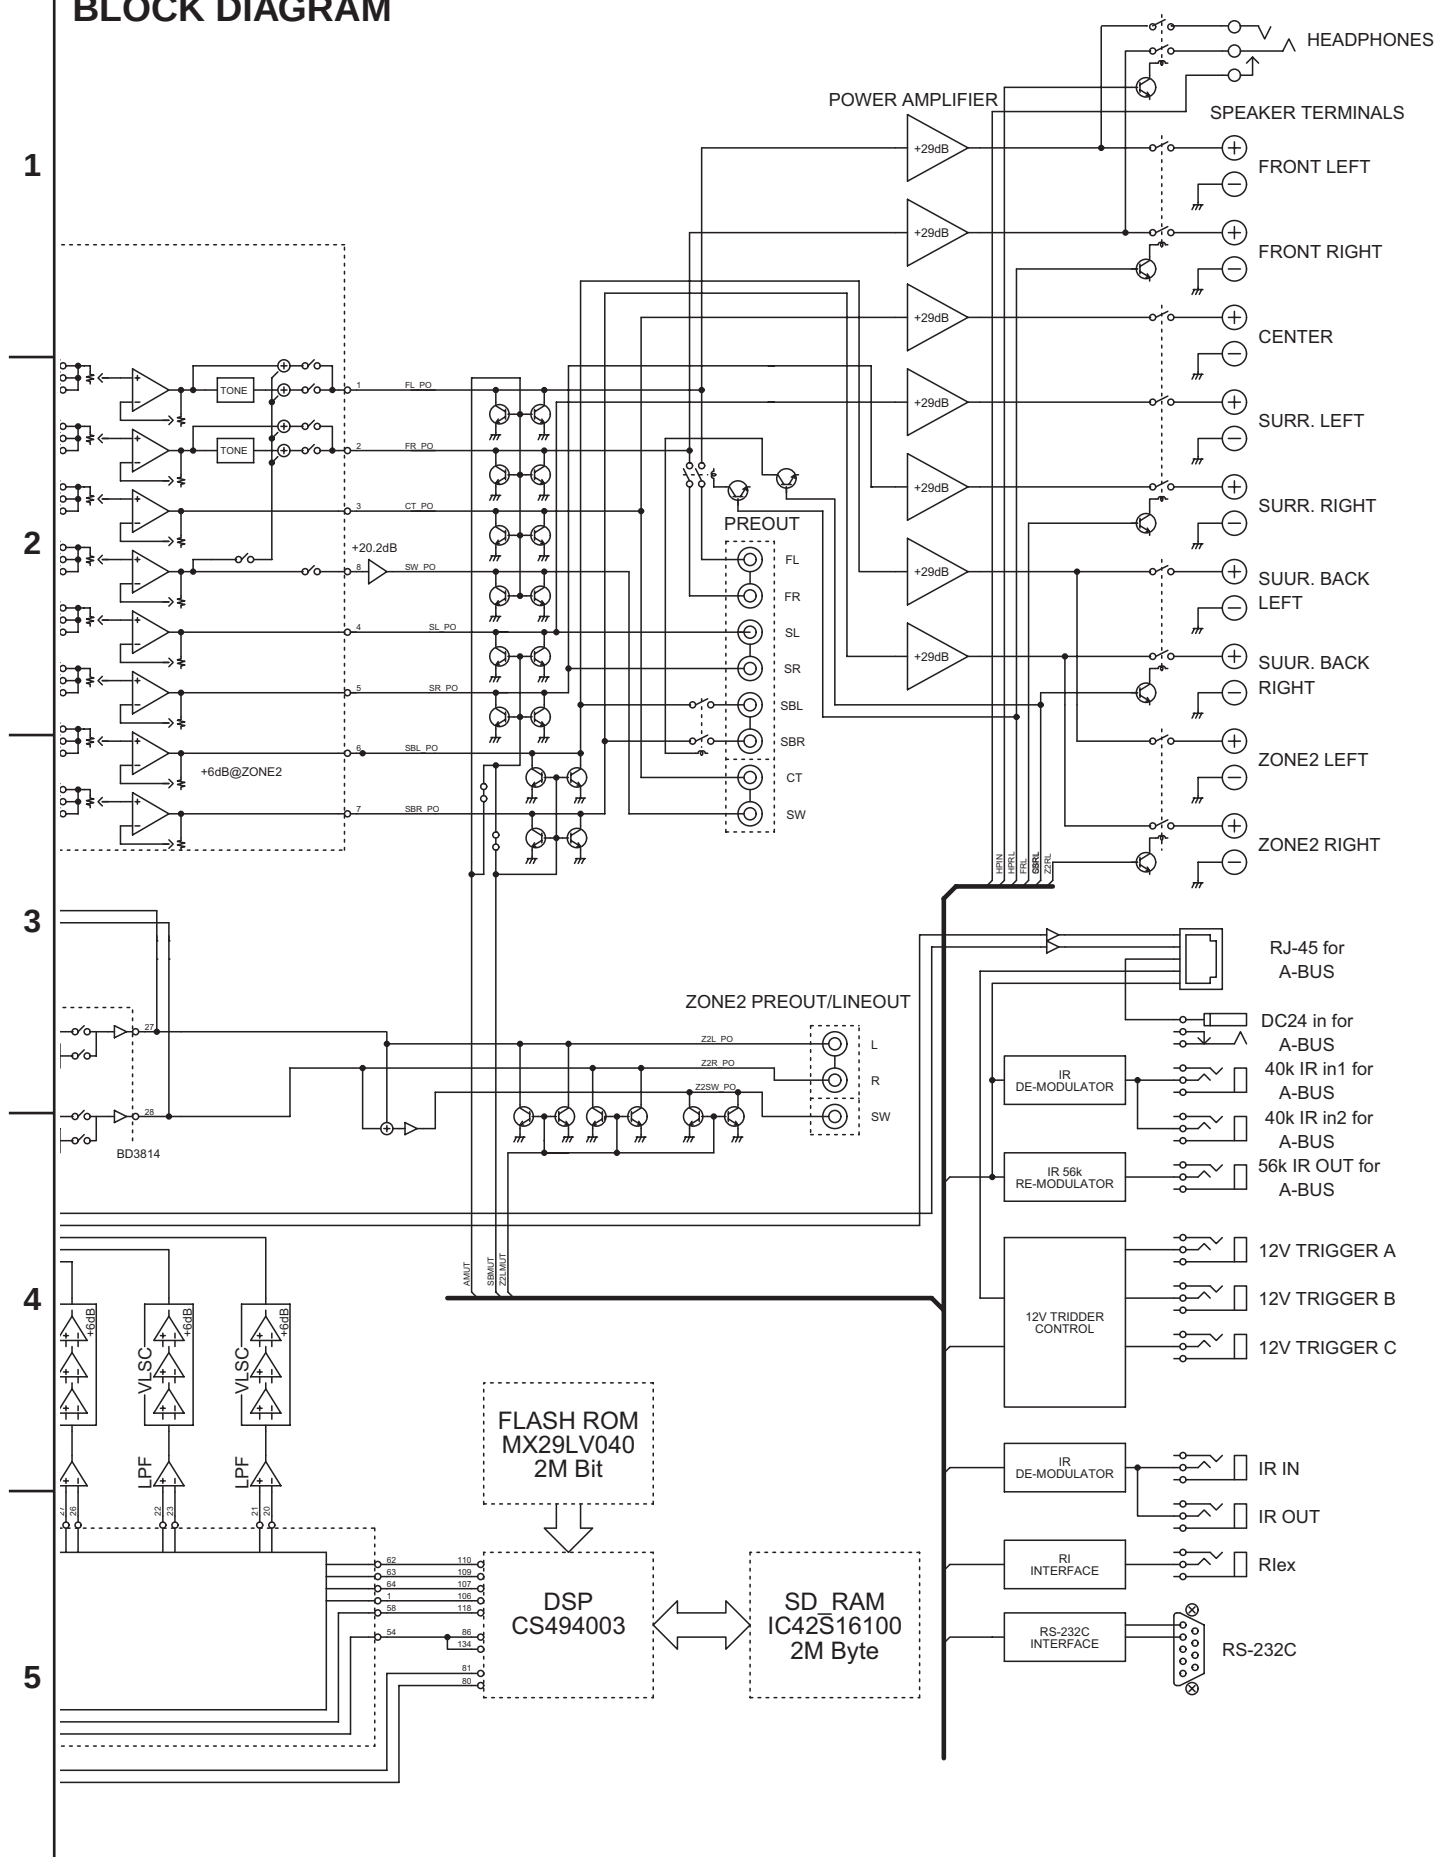

A

B

C

D

BLOCK DIAGRAM Video section

1

COMPONENT VIDEO INPUT

Y1

CB1

CR1

Y2

CB2

CR2

2

Y3

CB3

CR3

3

COMPOSITE VIDEO INPUT

DVD

VIDEO1

VIDEO2

VIDEO3

VIDEO4

4

S VIDEO INPUT

DVD

VIDEO1

VIDEO2

5

VIDEO3

VIDEO4

NJM2595

6dB

6dB

6dB

NJM2595

6dB

6dB

6dB

NJM2595

6dB

6dB

6dB

 $\overline{\text{SDET}} \cdot (\overline{\text{OSD}} + (\text{OSD} \cdot \text{SI}))$
 LC74763-9836
 $\text{SDET} \cdot (\overline{\text{OSD}} + (\text{OSD} \cdot \text{SI}))$

OSD

0dB

0dB

 $\text{OSD} \cdot (\text{SDET} + \text{SI})$ $\text{SDET} \cdot \text{OSD}$

DIGITAL VIDEO DECODER

ADV7183A

AIN1 Y1

AIN2 COMPOSITE / Y2

AIN3 COMPOSITE

AIN4 C1

AIN5 C2

DIGITAL VIDEO ENCODER

ADV7172

DACA Y

DACB Cl


DACC Cl

DACD V

DACE Y

DACF C

BLOCK DIAGRAM Video section

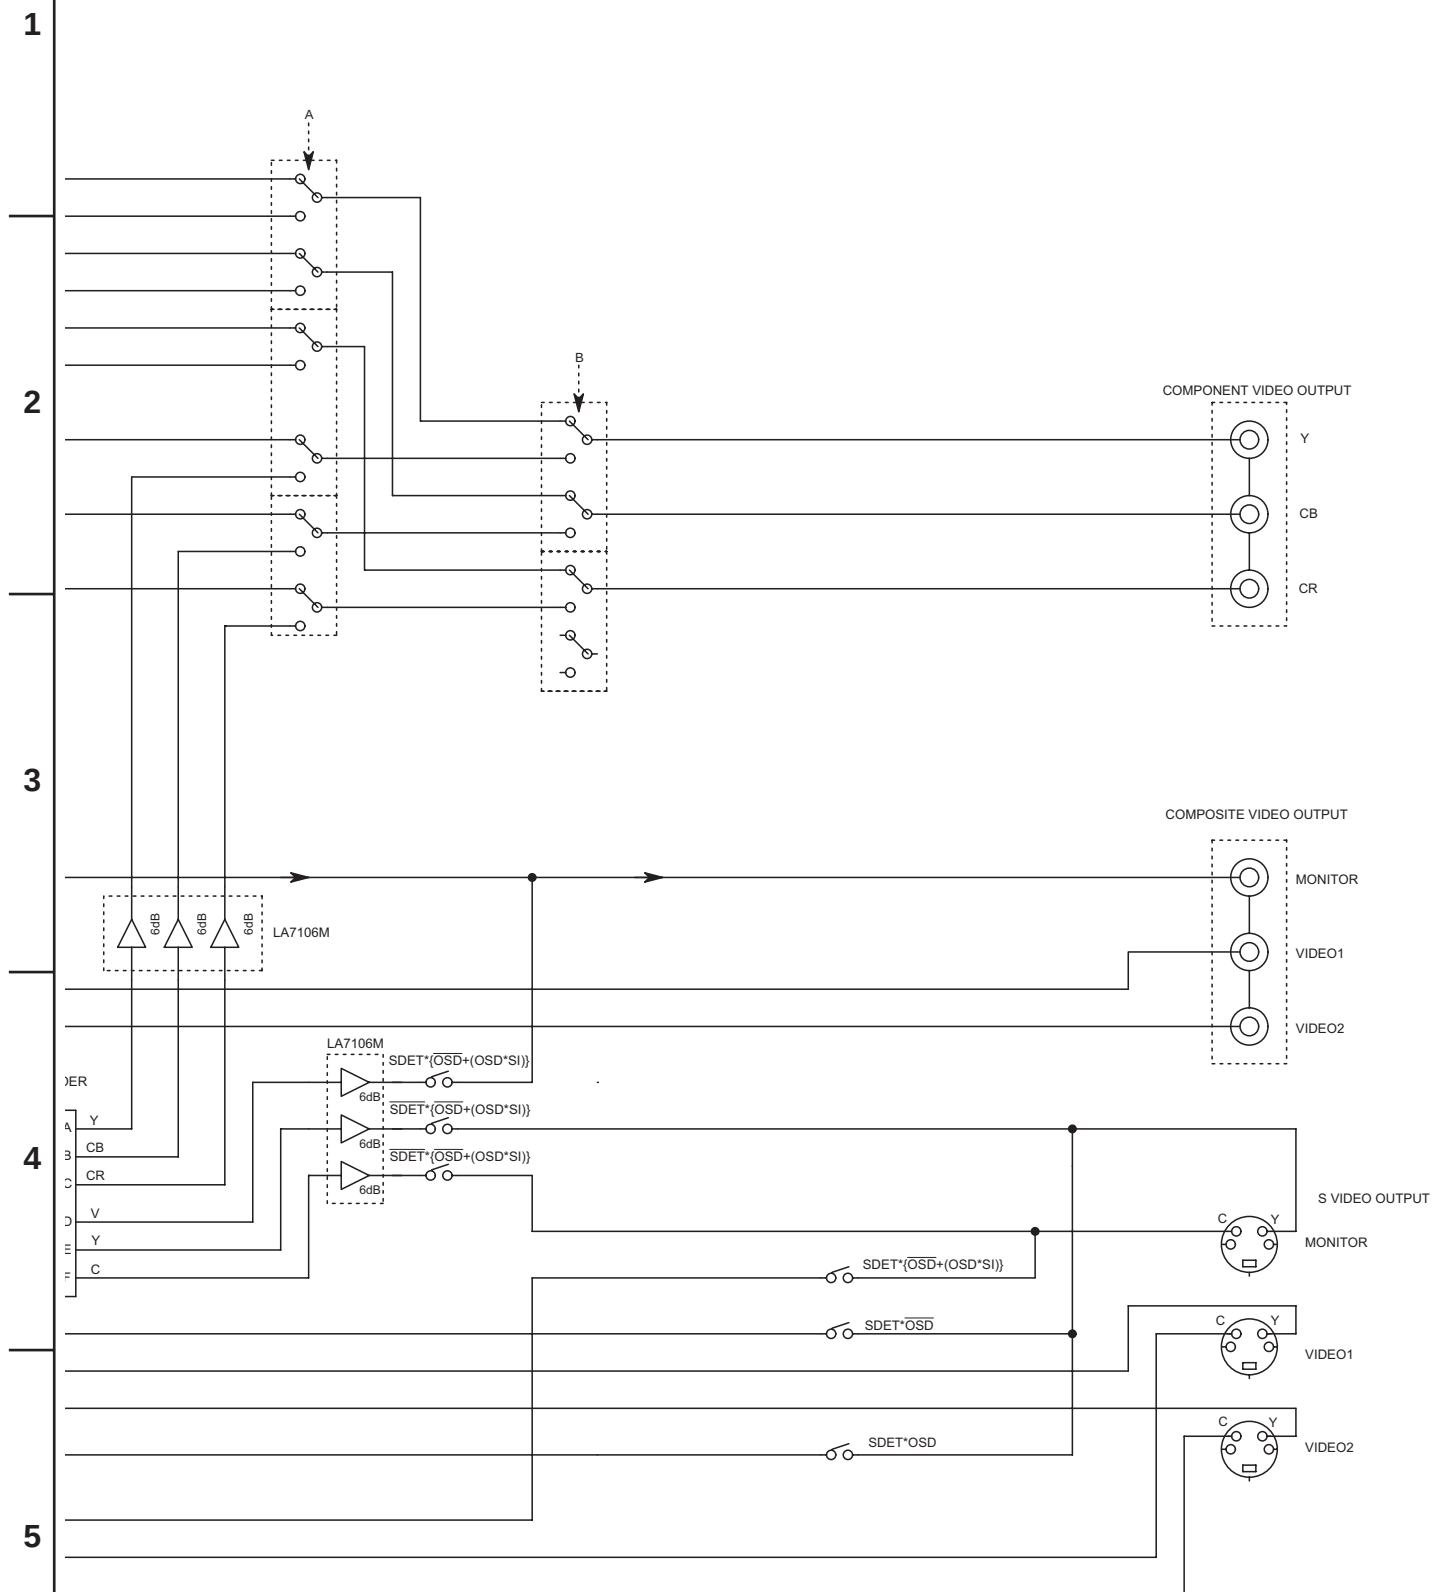


SCHEMATIC DIAGRAM 3

Driver section


NAAF-8383

U6

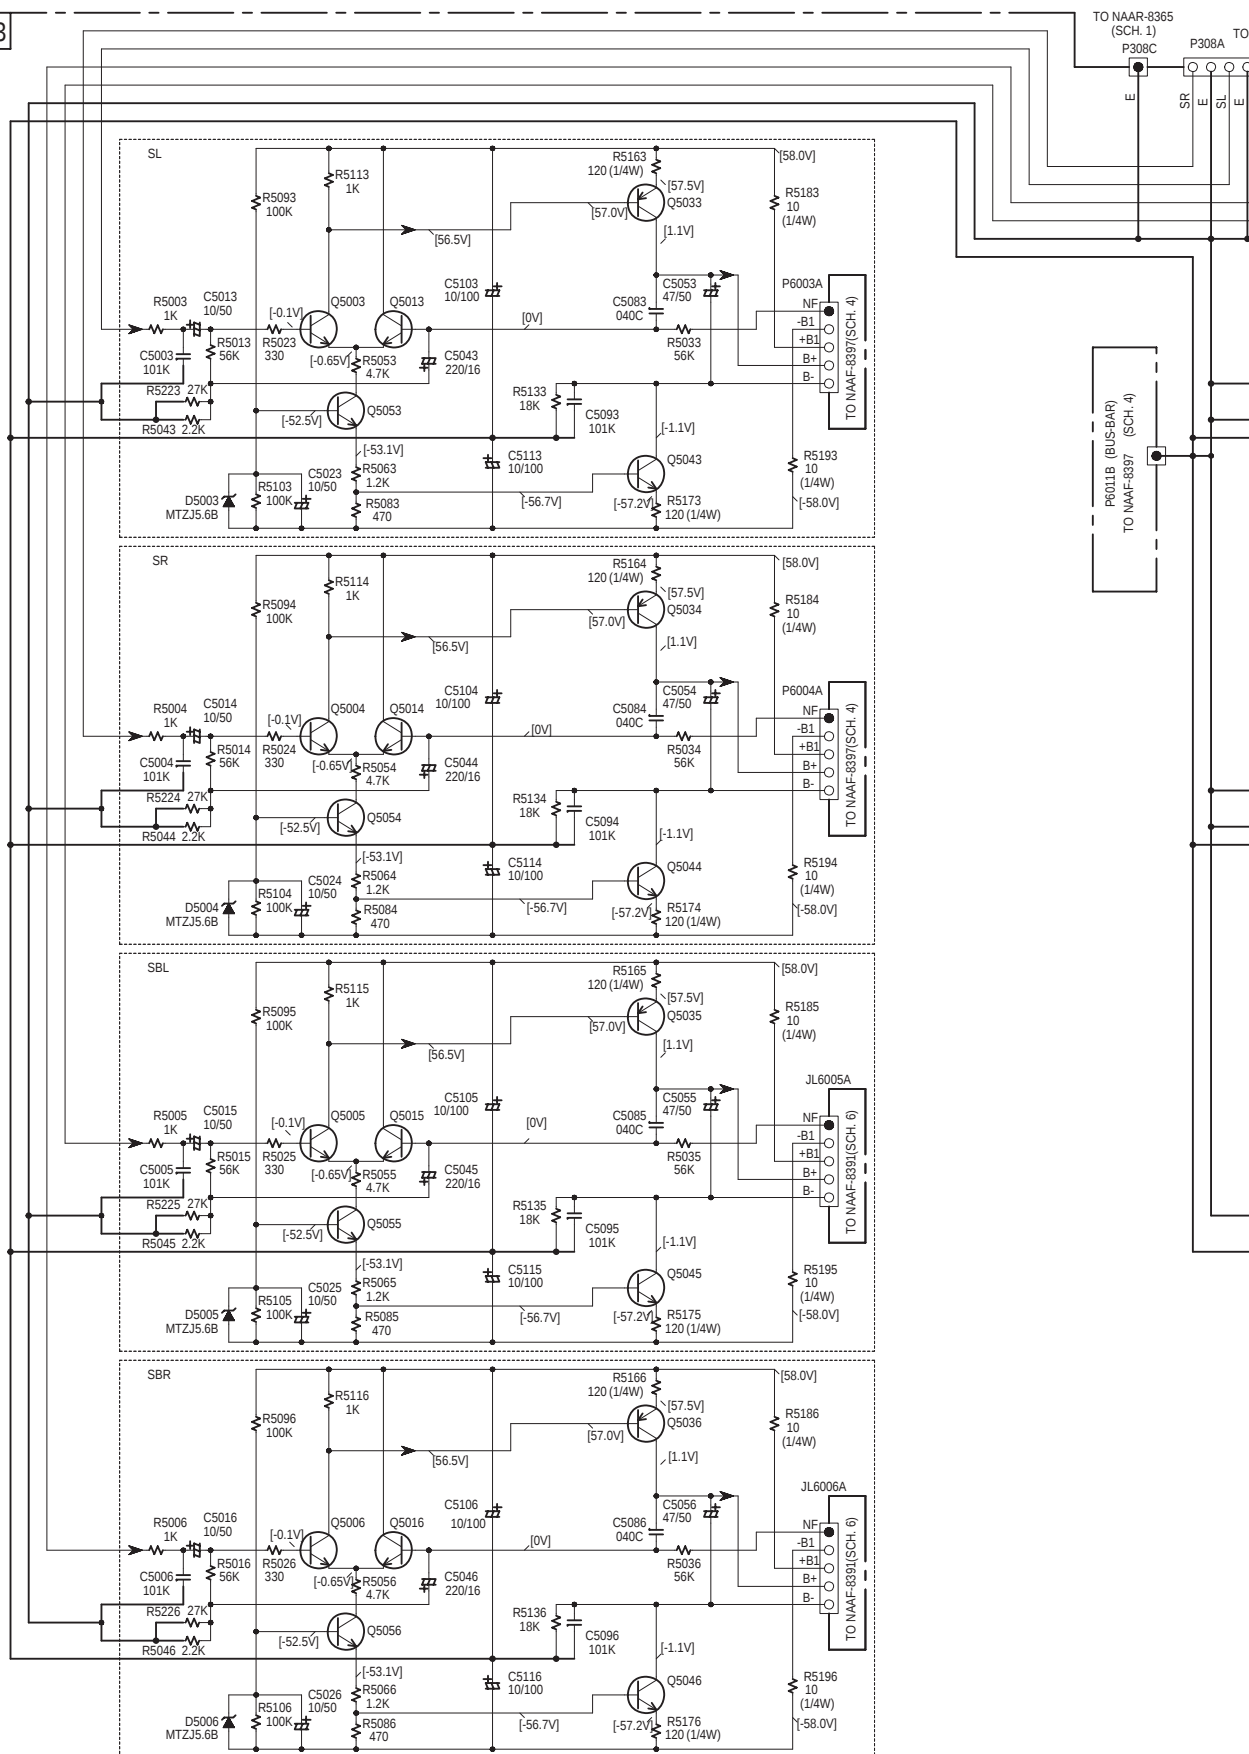

SCHEMATIC DIAGRAM 3


Driver section

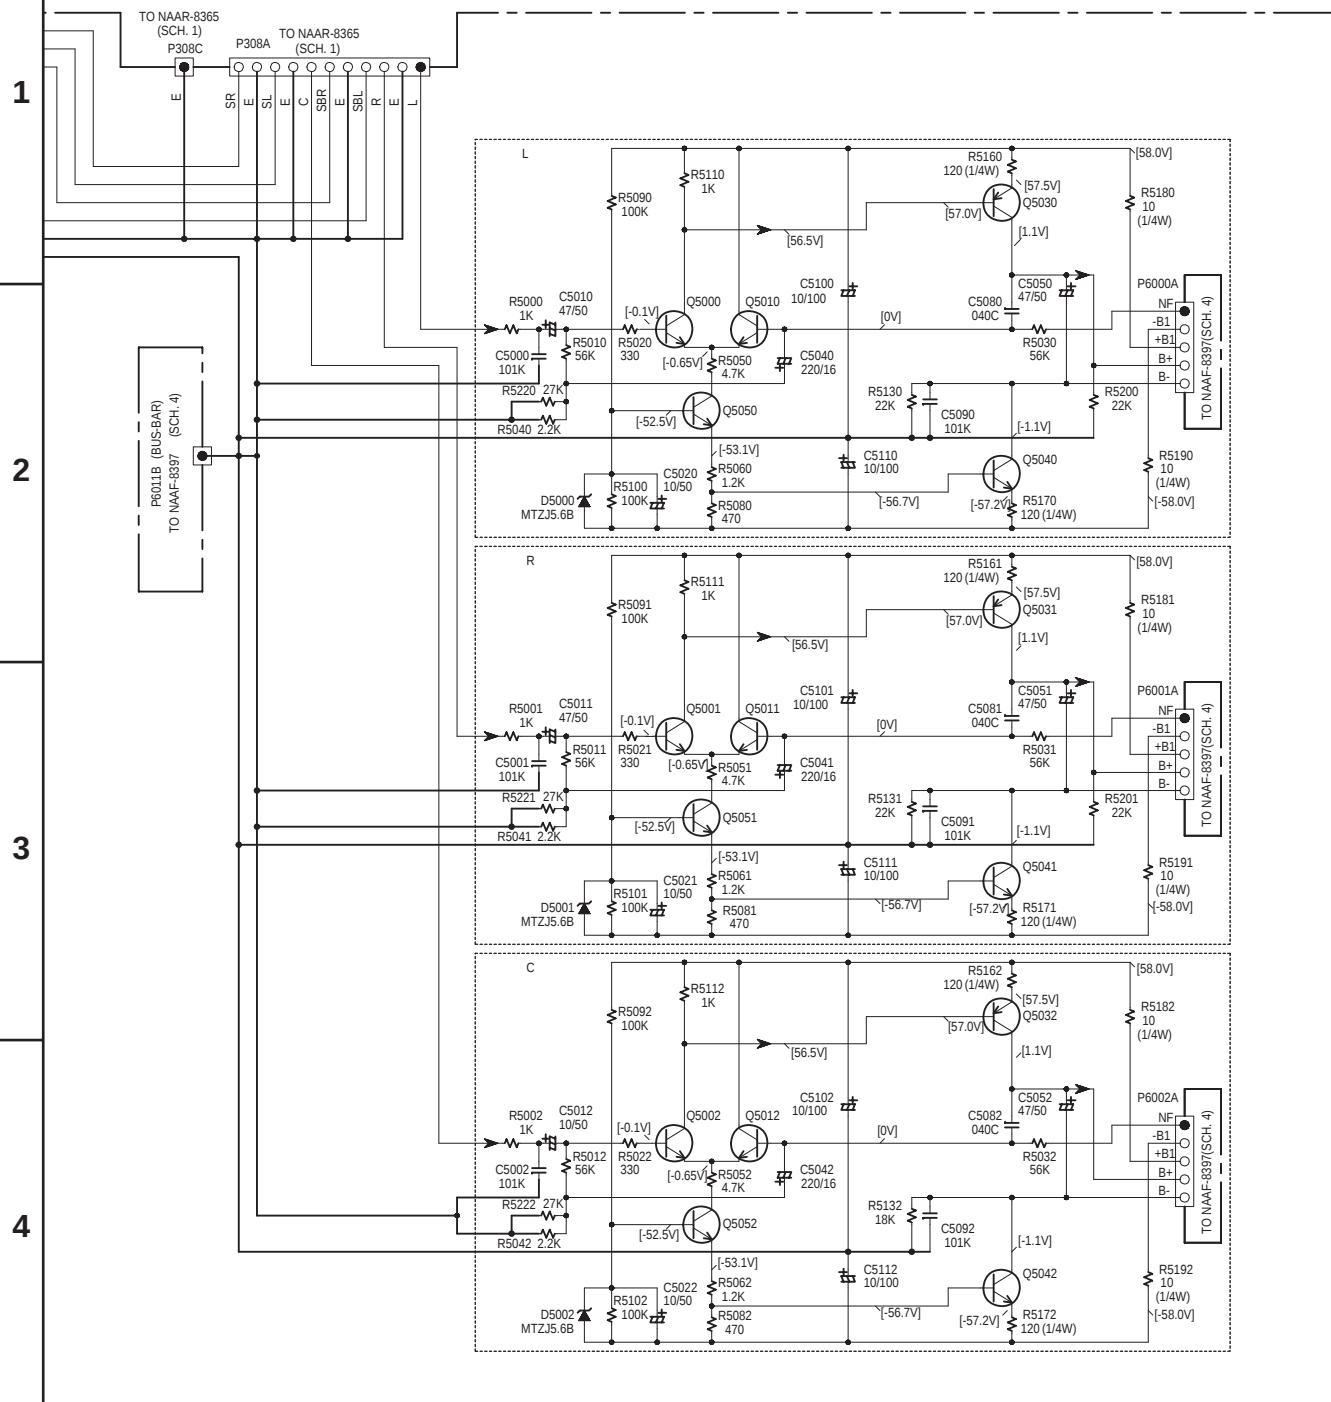

SEMICONDUCTORS


NO.	X=0.1,2 (0.1, 1R, 2-C)	X=3,4,5,6 (3-SL, 4-SR, 5-SBL, 6-SBR)
Q500X, Q501X	2SC1775A-E.F. OR 2SC1845-E	KTC3200-BL OR 2SC1775A-E.F. OR 2SC1845-E
Q503X	2SA1360-Y.O	KT1024-Y.O OR 2SA949-Y.O
Q504X	2SC3423-Y.O	KTC3206-Y.O OR 2SC2229-Y.O
Q505X	KTC3200-BL GR OR 2SC1775A-E.F. OR 2SC1845-E.F	KTC3200-BL GR OR 2SC1775A-E.F. OR 2SC1845-E.F

Power amplifier section

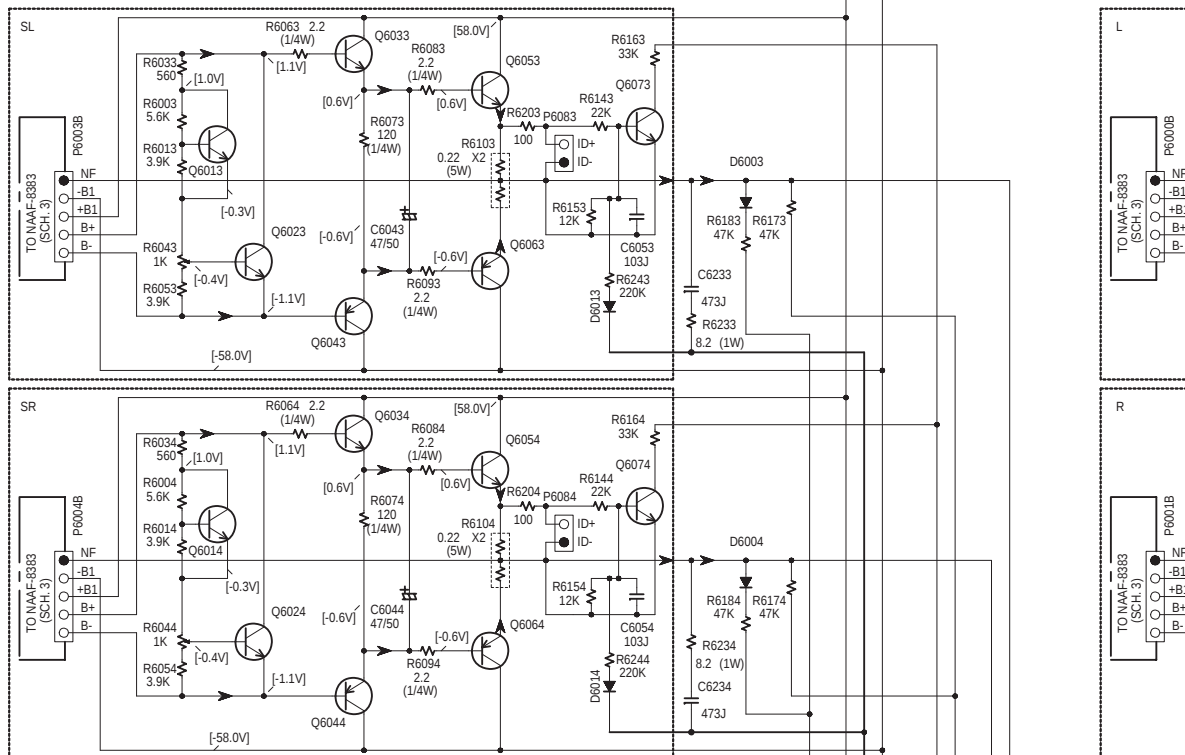


SEMICONDUCTORS	
NO.	PARTS
Q6010-6016	25C1740S-R,S
Q6020-6026	25C1740DS-R,S
Q6601-6604, Q6901	KTC3199-GR OR 25C1740S-R,S OR 25C2458-GR
Q6701, 6702	KTC3200-BL,GR OR 25C1775A-E,F OR 25C1845-E,F
Q6703	KA1268-BL,GR OR 25A992-E
Q6303, 6304	KA1267-GR OR 25A933S-R,S
Q6501	25C1845-GR
Q6070, 76	25C2631-R,S

SEMICONDUCTORS		
NO.	CH-L(0) / R(1) / C(2)	SL(3) / SR(4) / SBL(5) / SBR(6)
Q6030-36	2SC5171	2SC5171 OR KTD0261-Y
Q6040-46	2SA1930	2SA1930 OR KTB1369-Y
Q6050-56	2SC5200-R, O	MN150S-O, Y, P
Q6060-66	2SA1943-R, O	MP150S-O, Y, P

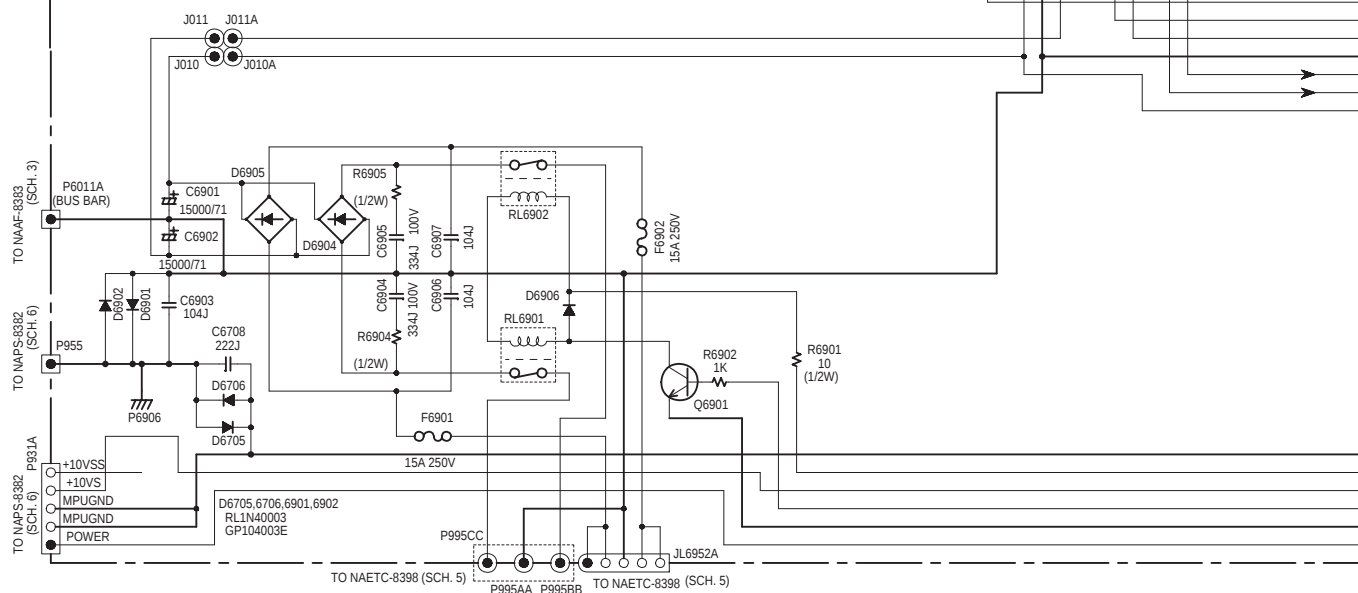

SCHEMATIC DIAGRAM 4

Power amplifier section

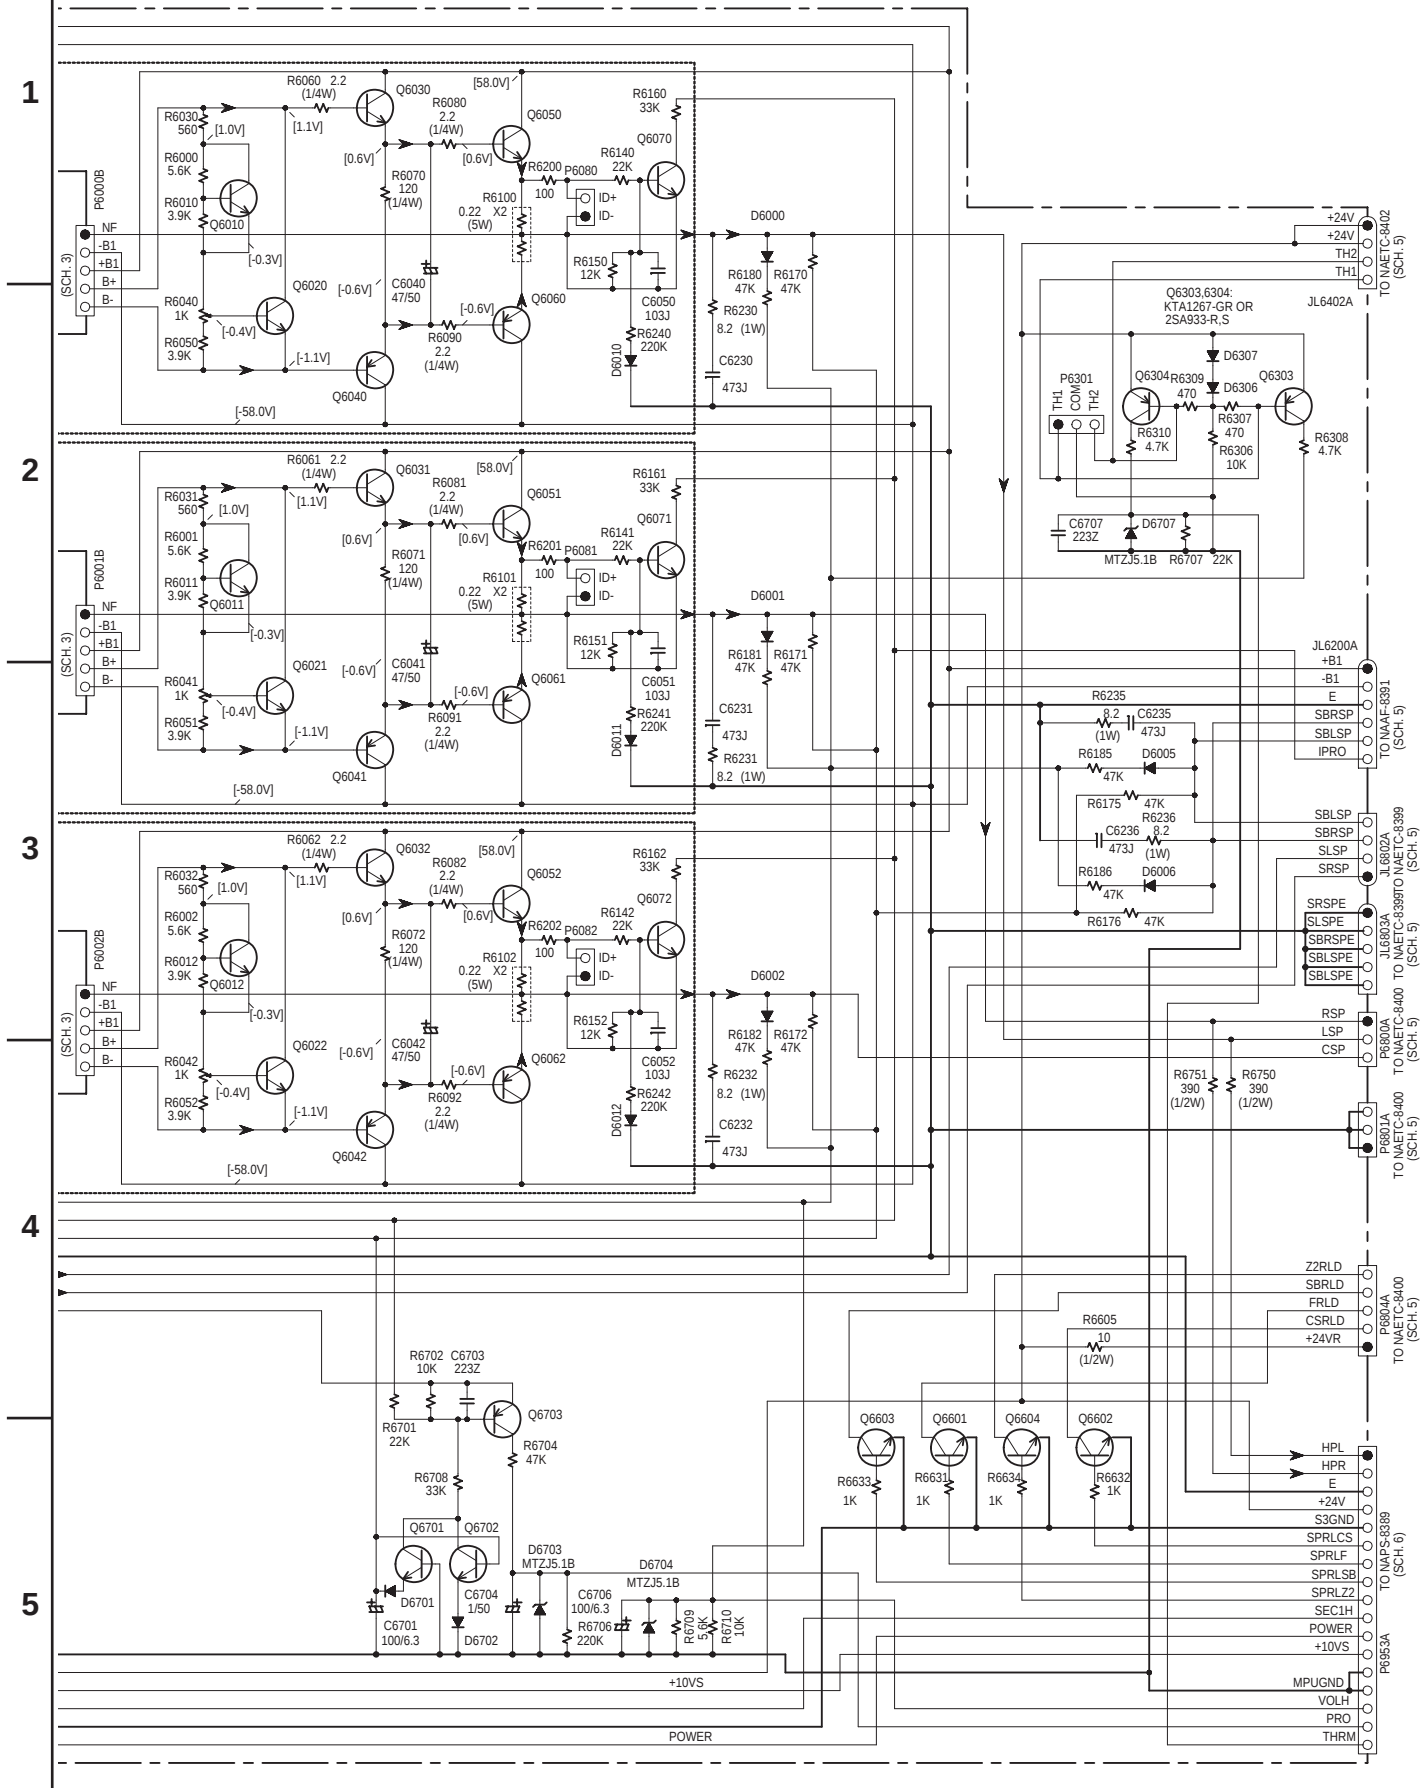

Power amplifier and Speaker terminal sections

Refer to the list of SCH. 4 for semiconductors.

[illegible]

Wiring diagram for the NAETC-8400 unit, showing connections for RSP, LSP, and CSP signals. The diagram includes two identical signal paths, each featuring a relay (RL6600 and RL6602), a diode (D6600 and D6602), and a capacitor (C6600 and C6602). The signals are connected to a terminal block labeled "TO NAAF-8397 (SCH. 4)" and a terminal block labeled "JL6805A". The diagram also shows connections for ZZRILD, SBRILD, CSRLD, and H24VR signals.

SCHEMATIC DIAGRAM 1

Preamplifier section

TO NAVD-8409 (SCH. 7)

TO NADG-8366 (SCH. 9)

Front

NAAR-8365 (1)

U1

PHONO

CD

TAPE OUT

TAPE IN

VIDEO3 IN

VIDEO2 OUT

VIDEO2 IN

VIDEO1 OUT

VIDEO1 IN

DVD

MSL/MSR

MC/MSW

AIN L

AIN R

SOURCE R

SOURCE L

ADRT+

ADRT-

ADLT+

ADLT-

VSR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR

VDR


VDR

VDR

VDR

VDR


VDR

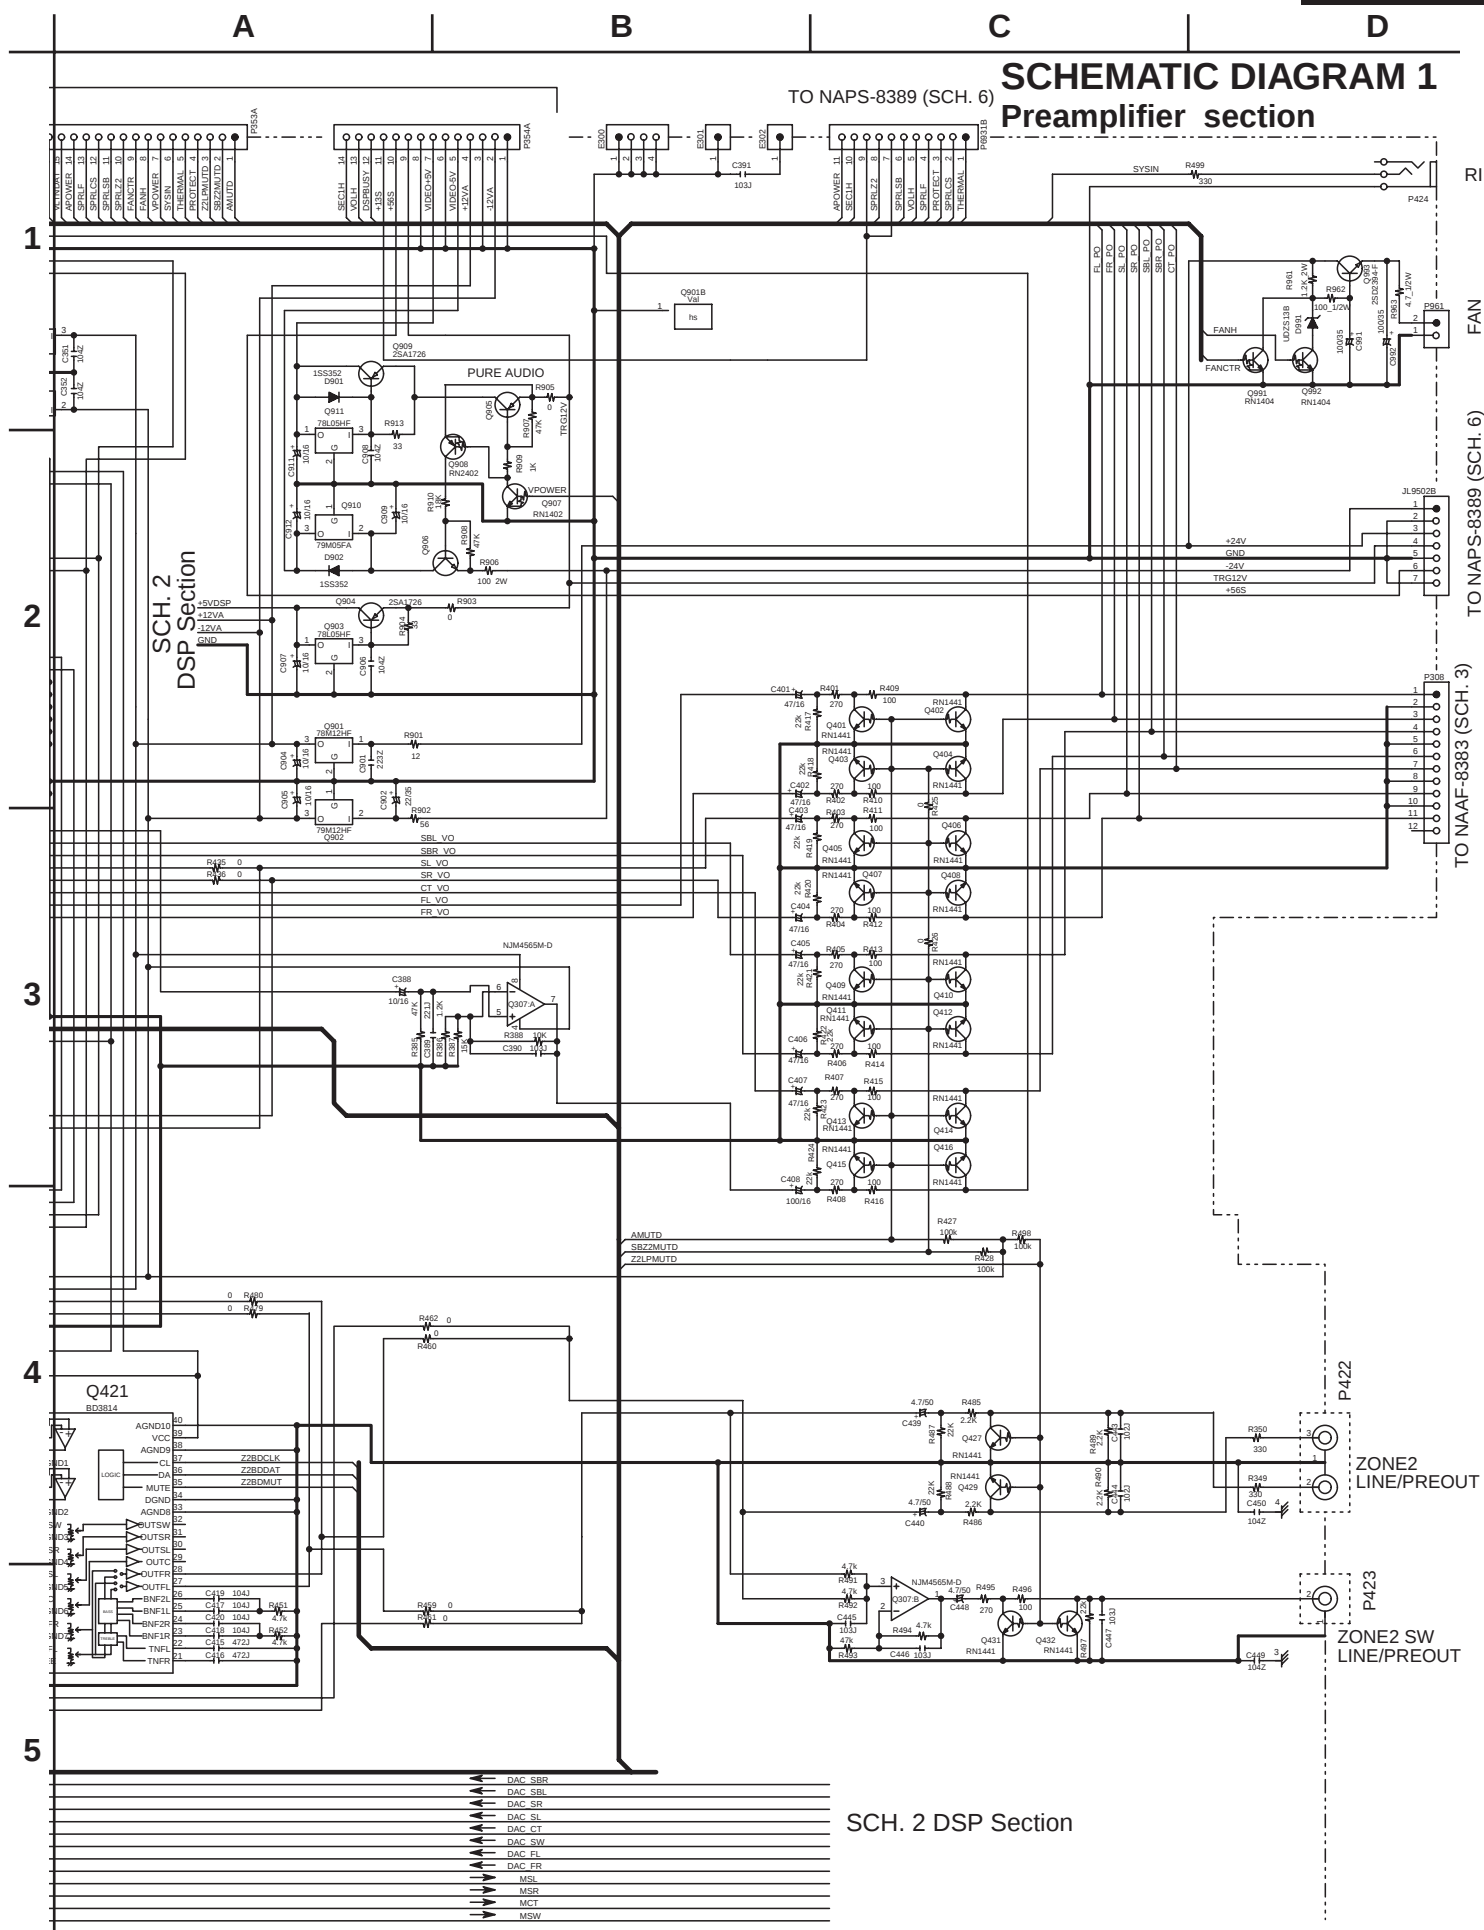


SCHEMATIC DIAGRAM 2 DSP section

NAAR-8365(2)

U1

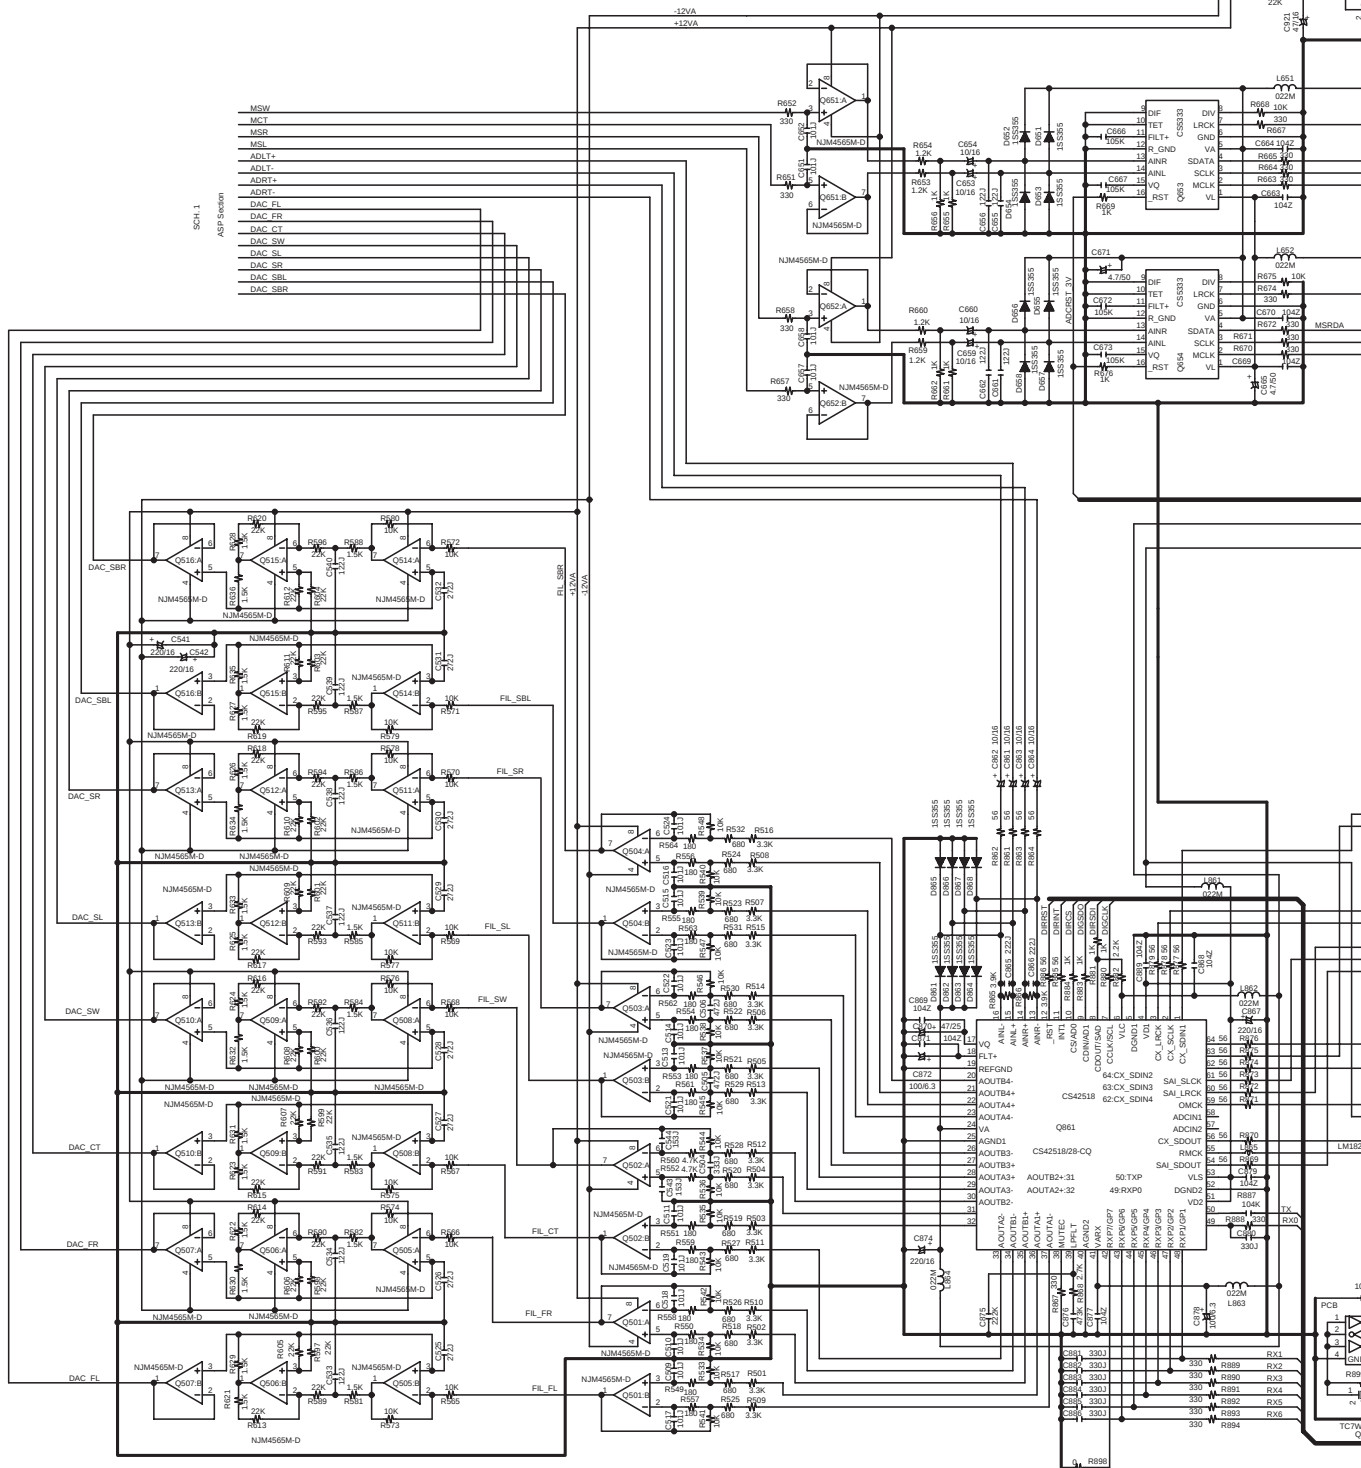

SCHEMATIC DIAGRAM 2 DSP section

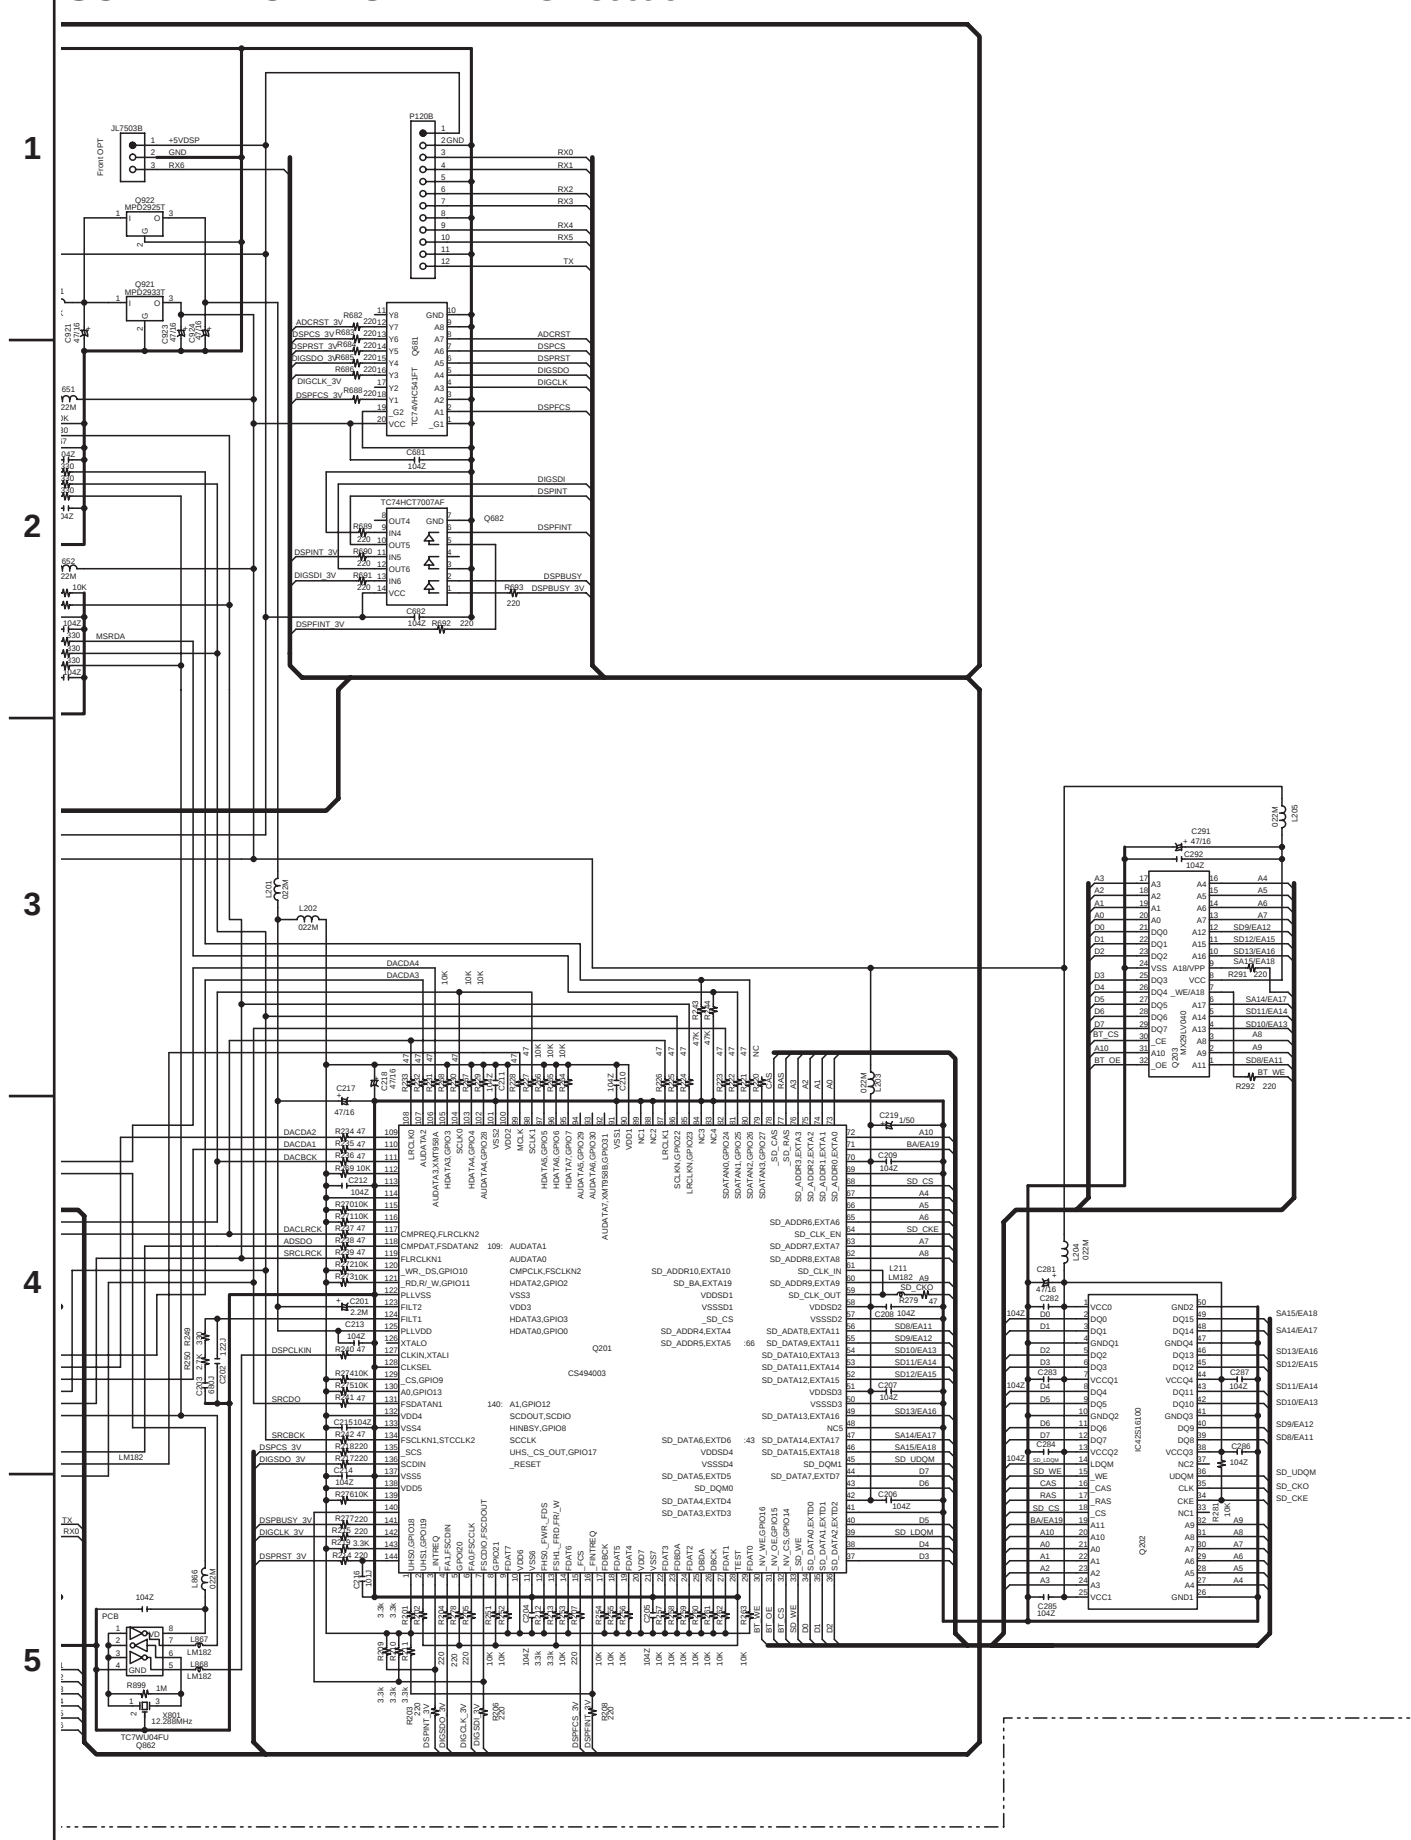

SCHEMATIC DIAGRAM 6
Power supply section

NOTE

- THE COMPONENTS IDENTIFIED BY MARK  ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLT METER)  IS DC VOLTAGE (NO INPUT SIGNAL).
- ELECTROLYTIC CAPACITORS () ARE IN μ F/WV.
- ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED.
EX) 030-3pF 330-33pF 331-330pF 333-0.033uF
- ALL RESISTORS ARE IN OHMS 1/4WATT UNLESS OTHERWISE NOTED.
- THE THICK LINES ON PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
EX)  PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

CAUTION



FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH FUSE OF SAME TYPE AND RATING INDICATED.



THIS SYMBOL LOCATED NEAR THE FUSE INDICATES THAT THE FUSE USED IS SLOW OPERATING TYPE FOR CONTINUED PROTECTION AGAINST FIRE HAZARD. REPLACE WITH SAME TYPE FUSE. FOR FUSE RATING REFER TO THE MARKING ADJACENT TO THE SYMBOL.



ATTENTION



AFIN D'ASSURER UNE PROTECTION PERMANENTE CONTRE LES RISQUES D'INCENDIE, REMPLACER UNIQUEMENT PAR UN FUSIBLE DE MEME TYPE ET CALIBRATION COMME INDIQUE.



CE SYMBOLE INDIQUE QUE LE FUSIBLE UTILISE EST LENT. POUR UNE PROTECTION PERMANENTE, UTILISER QUE DES FUSIBLES DE MEME TYPE. CE DERNIER EST INDIQUE LA QU LE PRESENT SYMBOLE EST APPOSE.


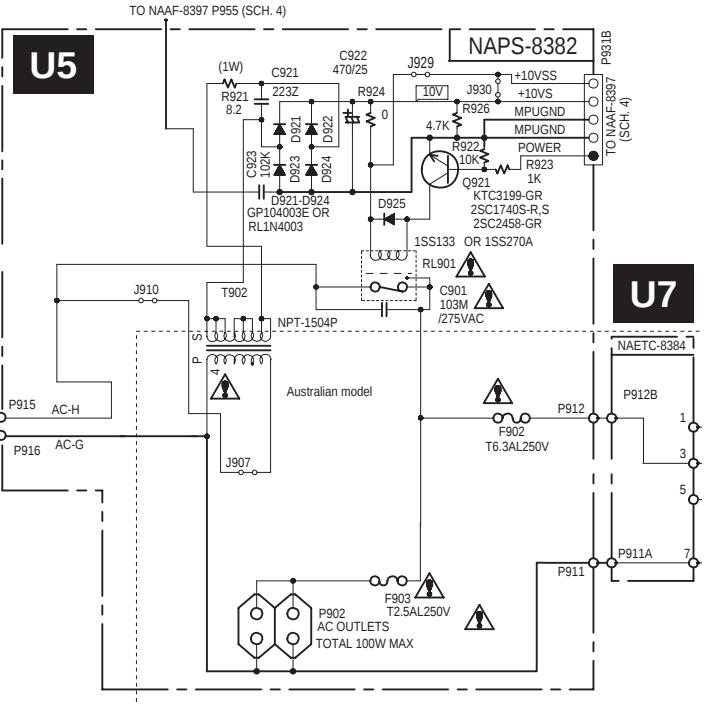
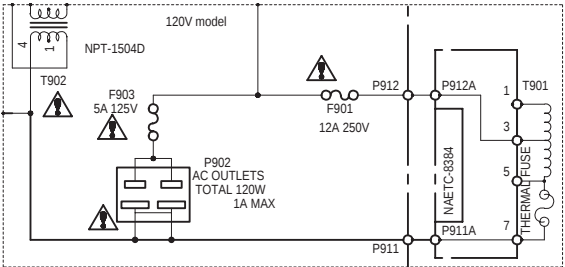


TYPE	AC
D	120V/60HZ
P	230V/50HZ

Power supply section

4

5

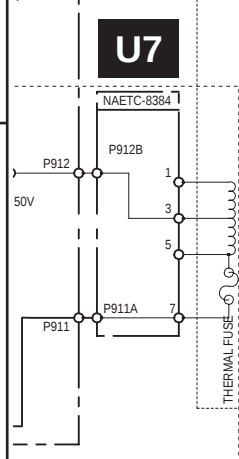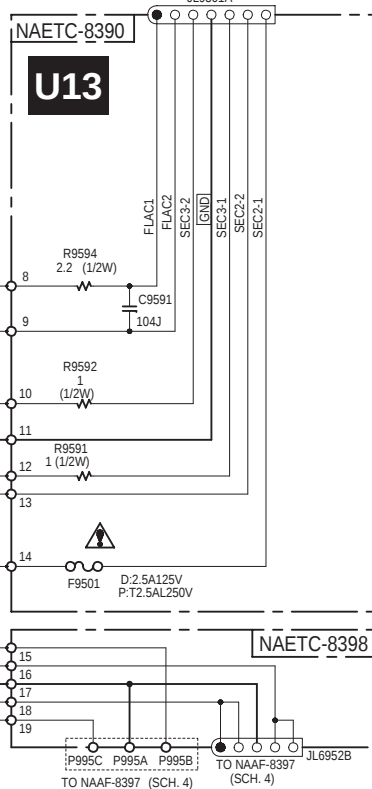

1

U26

Q7501
HNA-16SM10T

2

3

4

5

U31

18

1A

[illegible]

--	--

--	--

--	--


[illegible]


L

1

TO NADG-8366 (SCH. 9)

P7502A TO NAPS-8389 (SCH. 6)

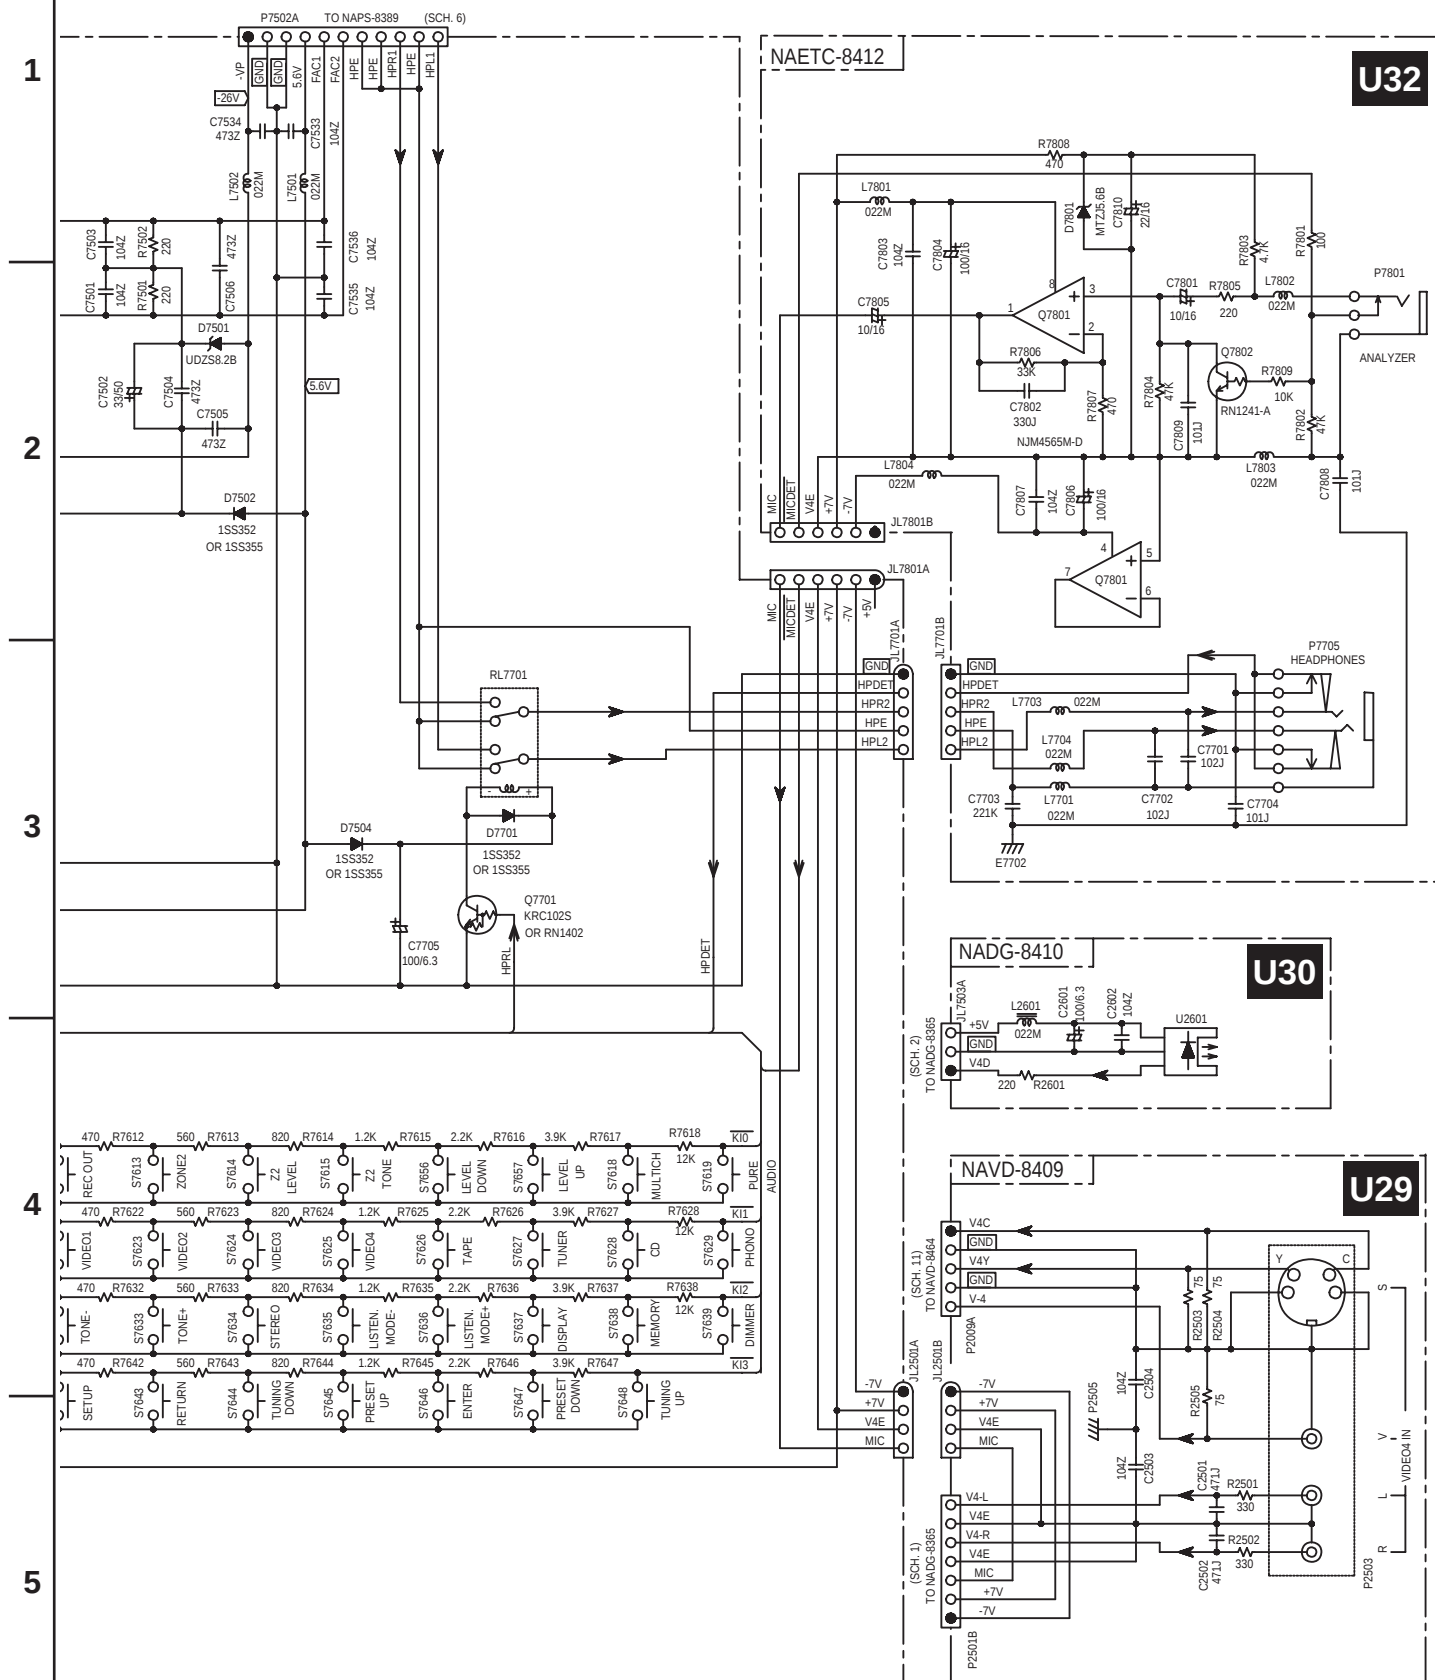

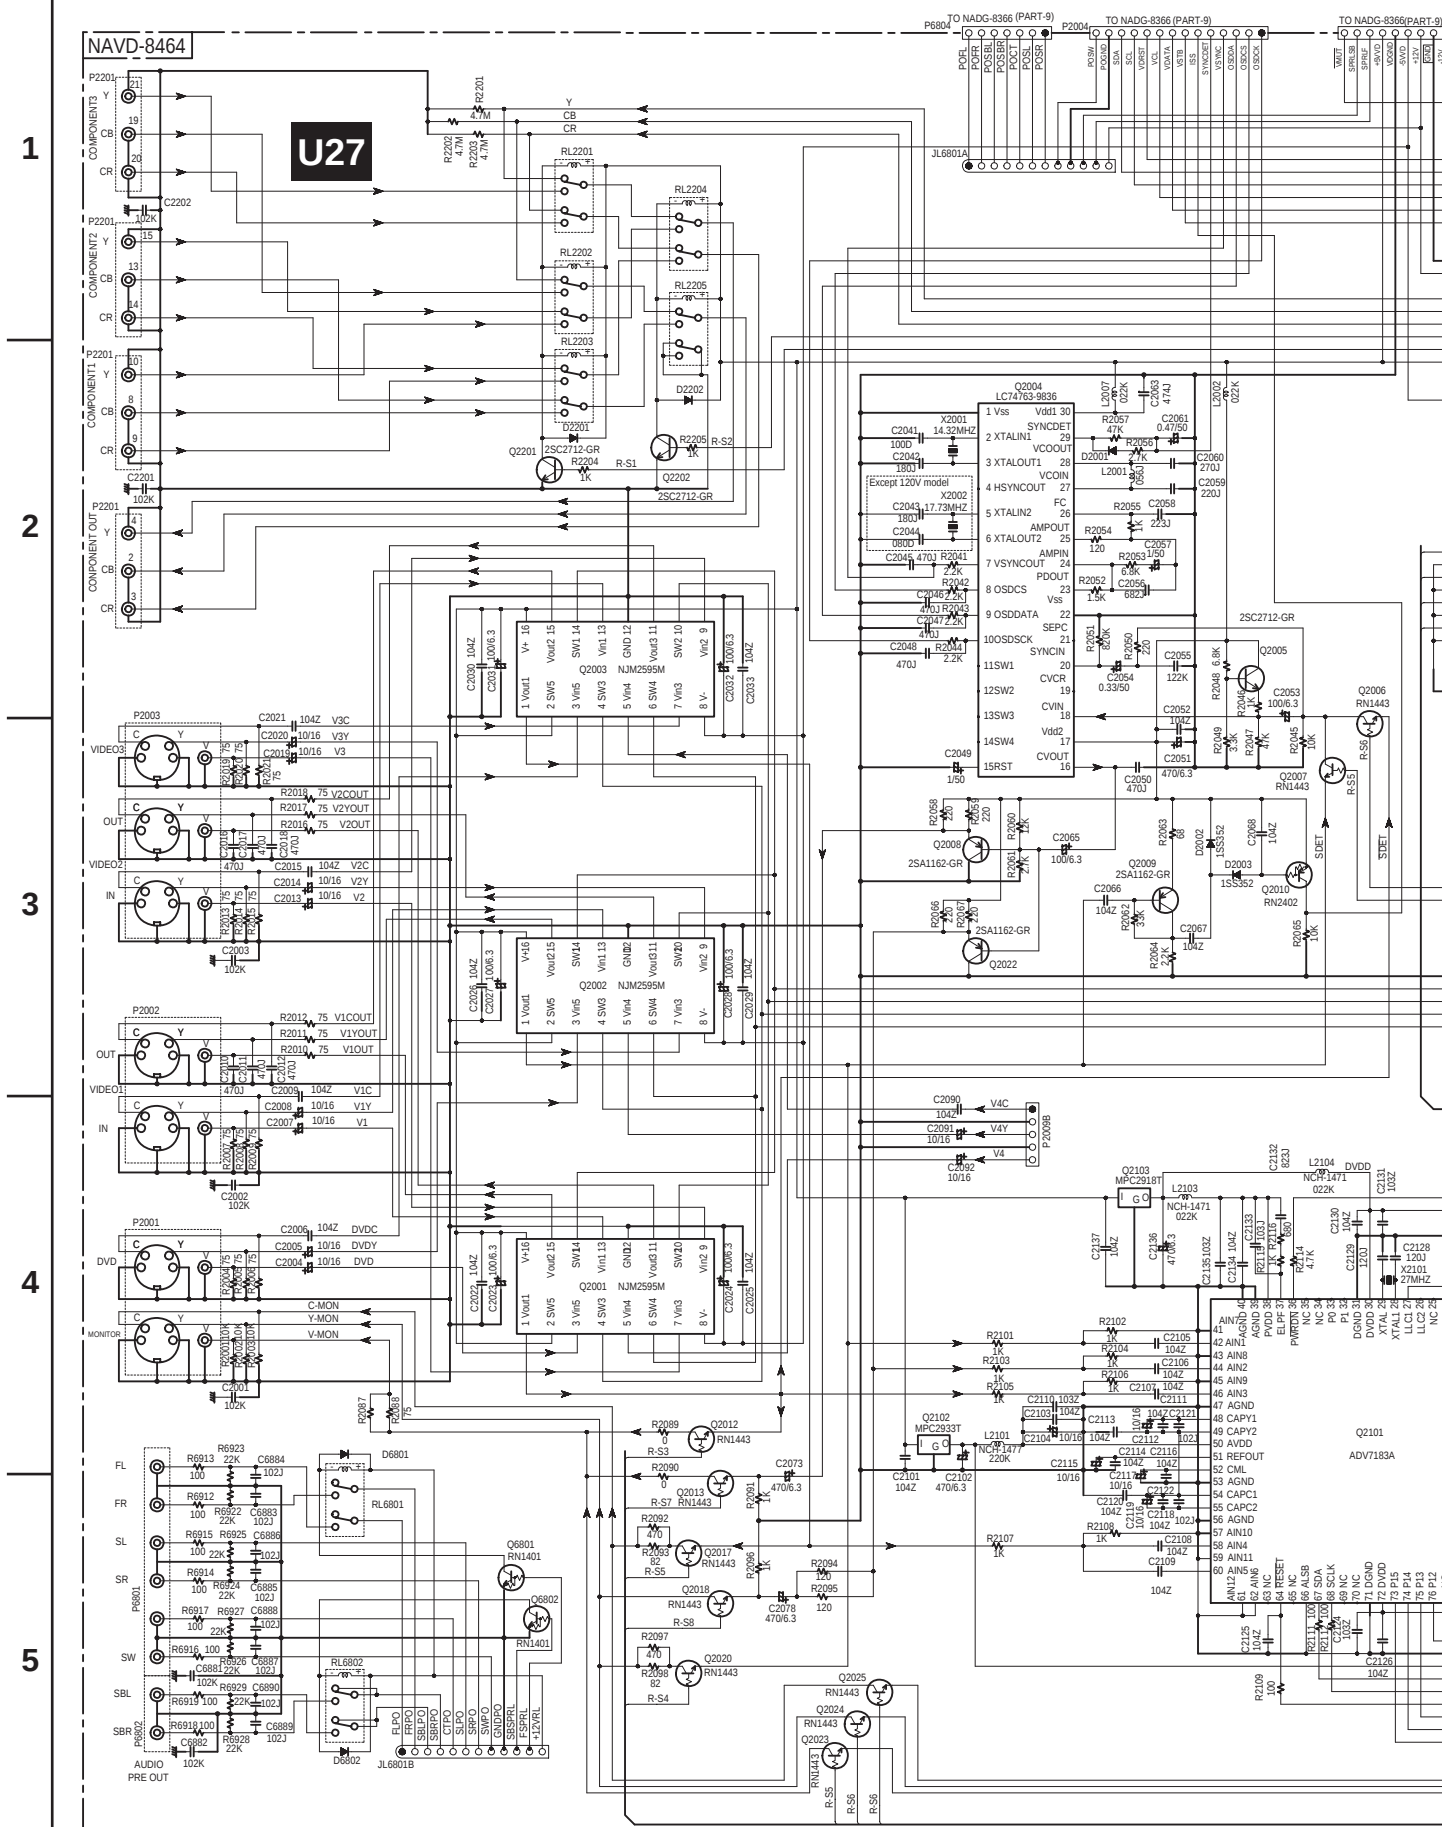


1

2


3

4


5

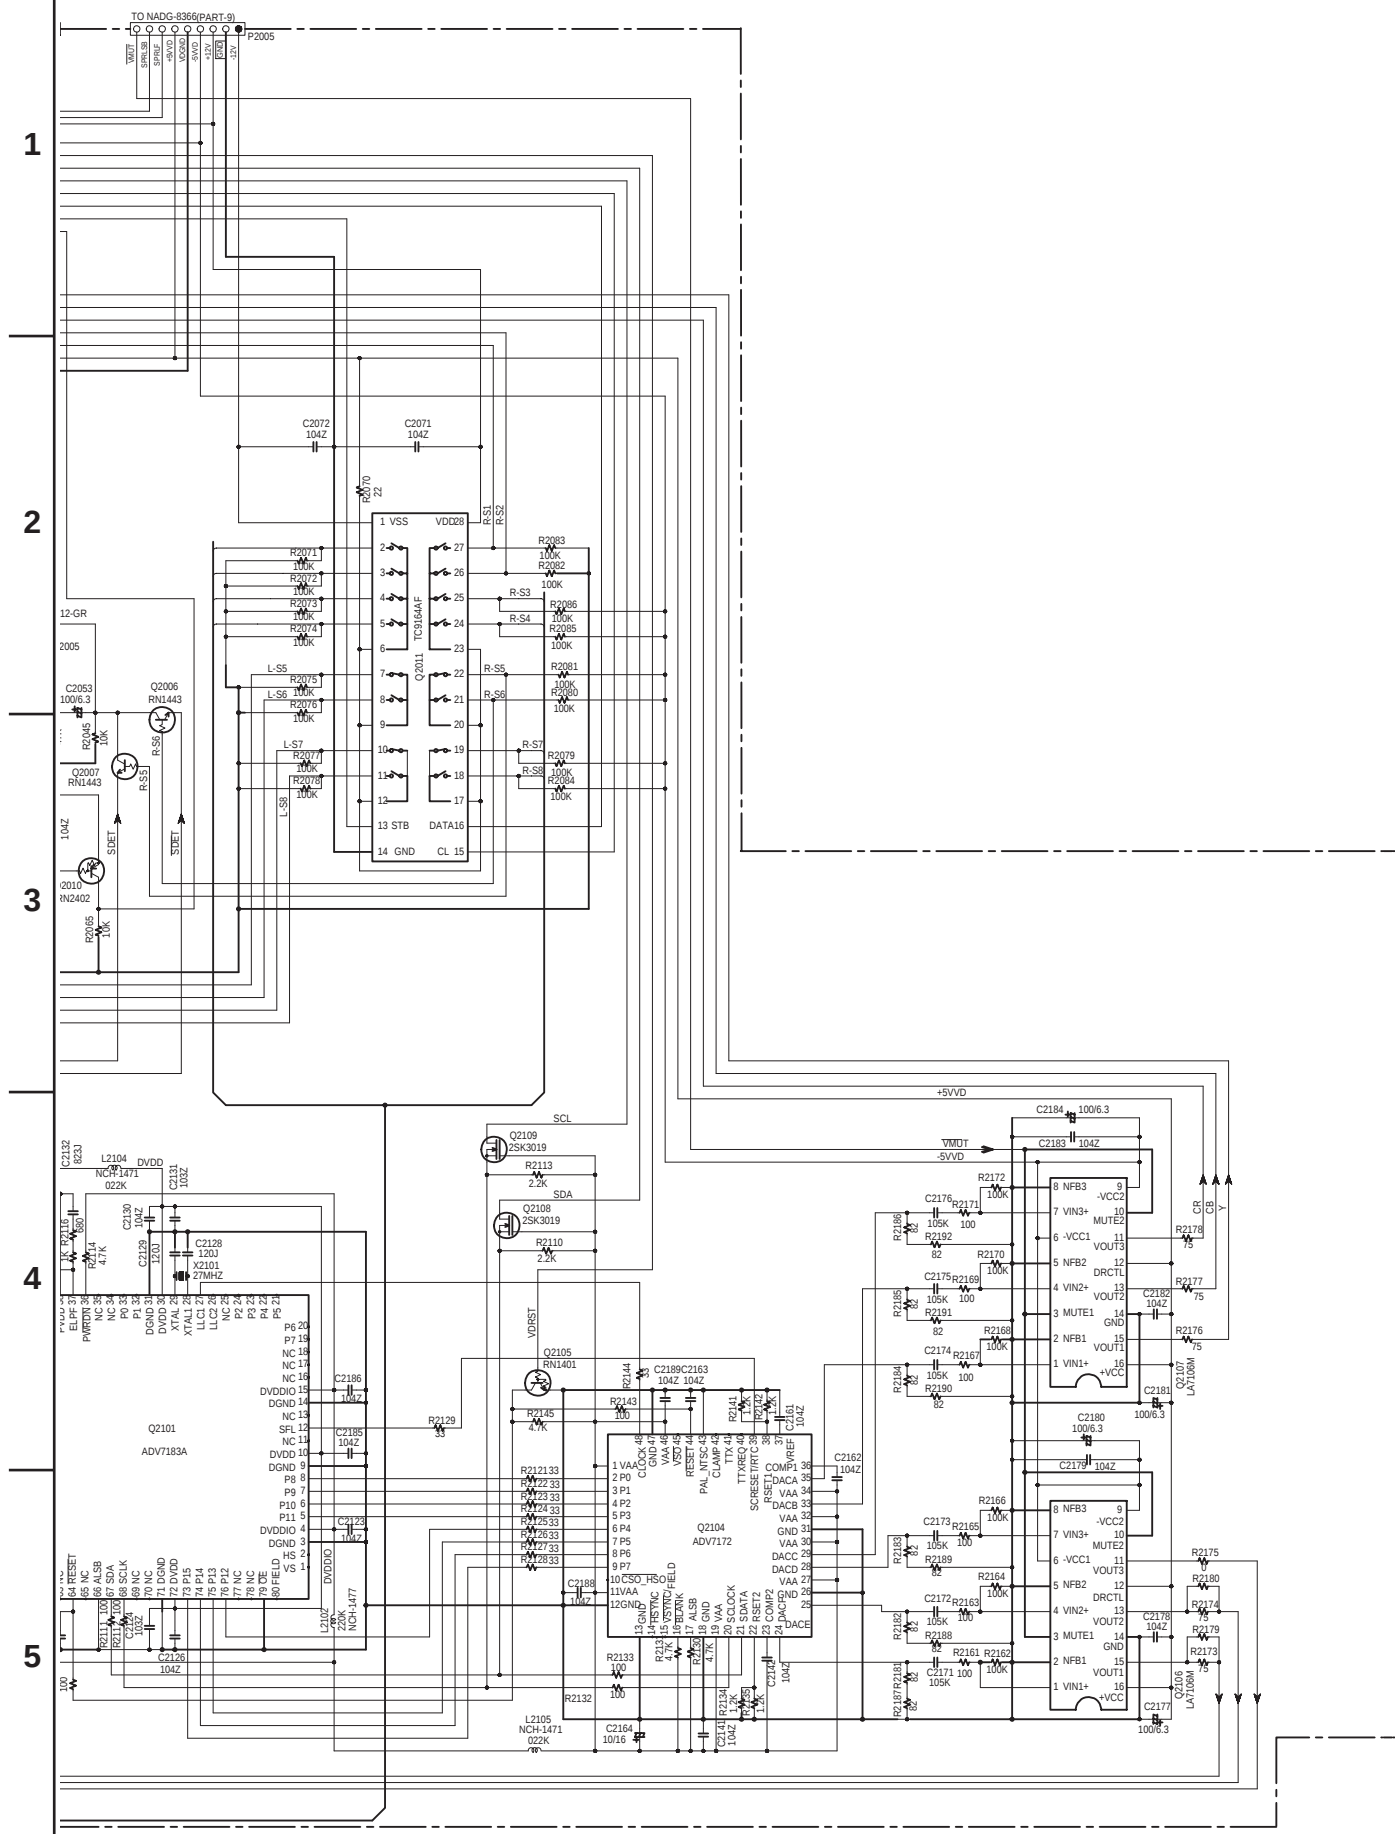


SCHEMATIC DIAGRAM 9 Microprocessor section

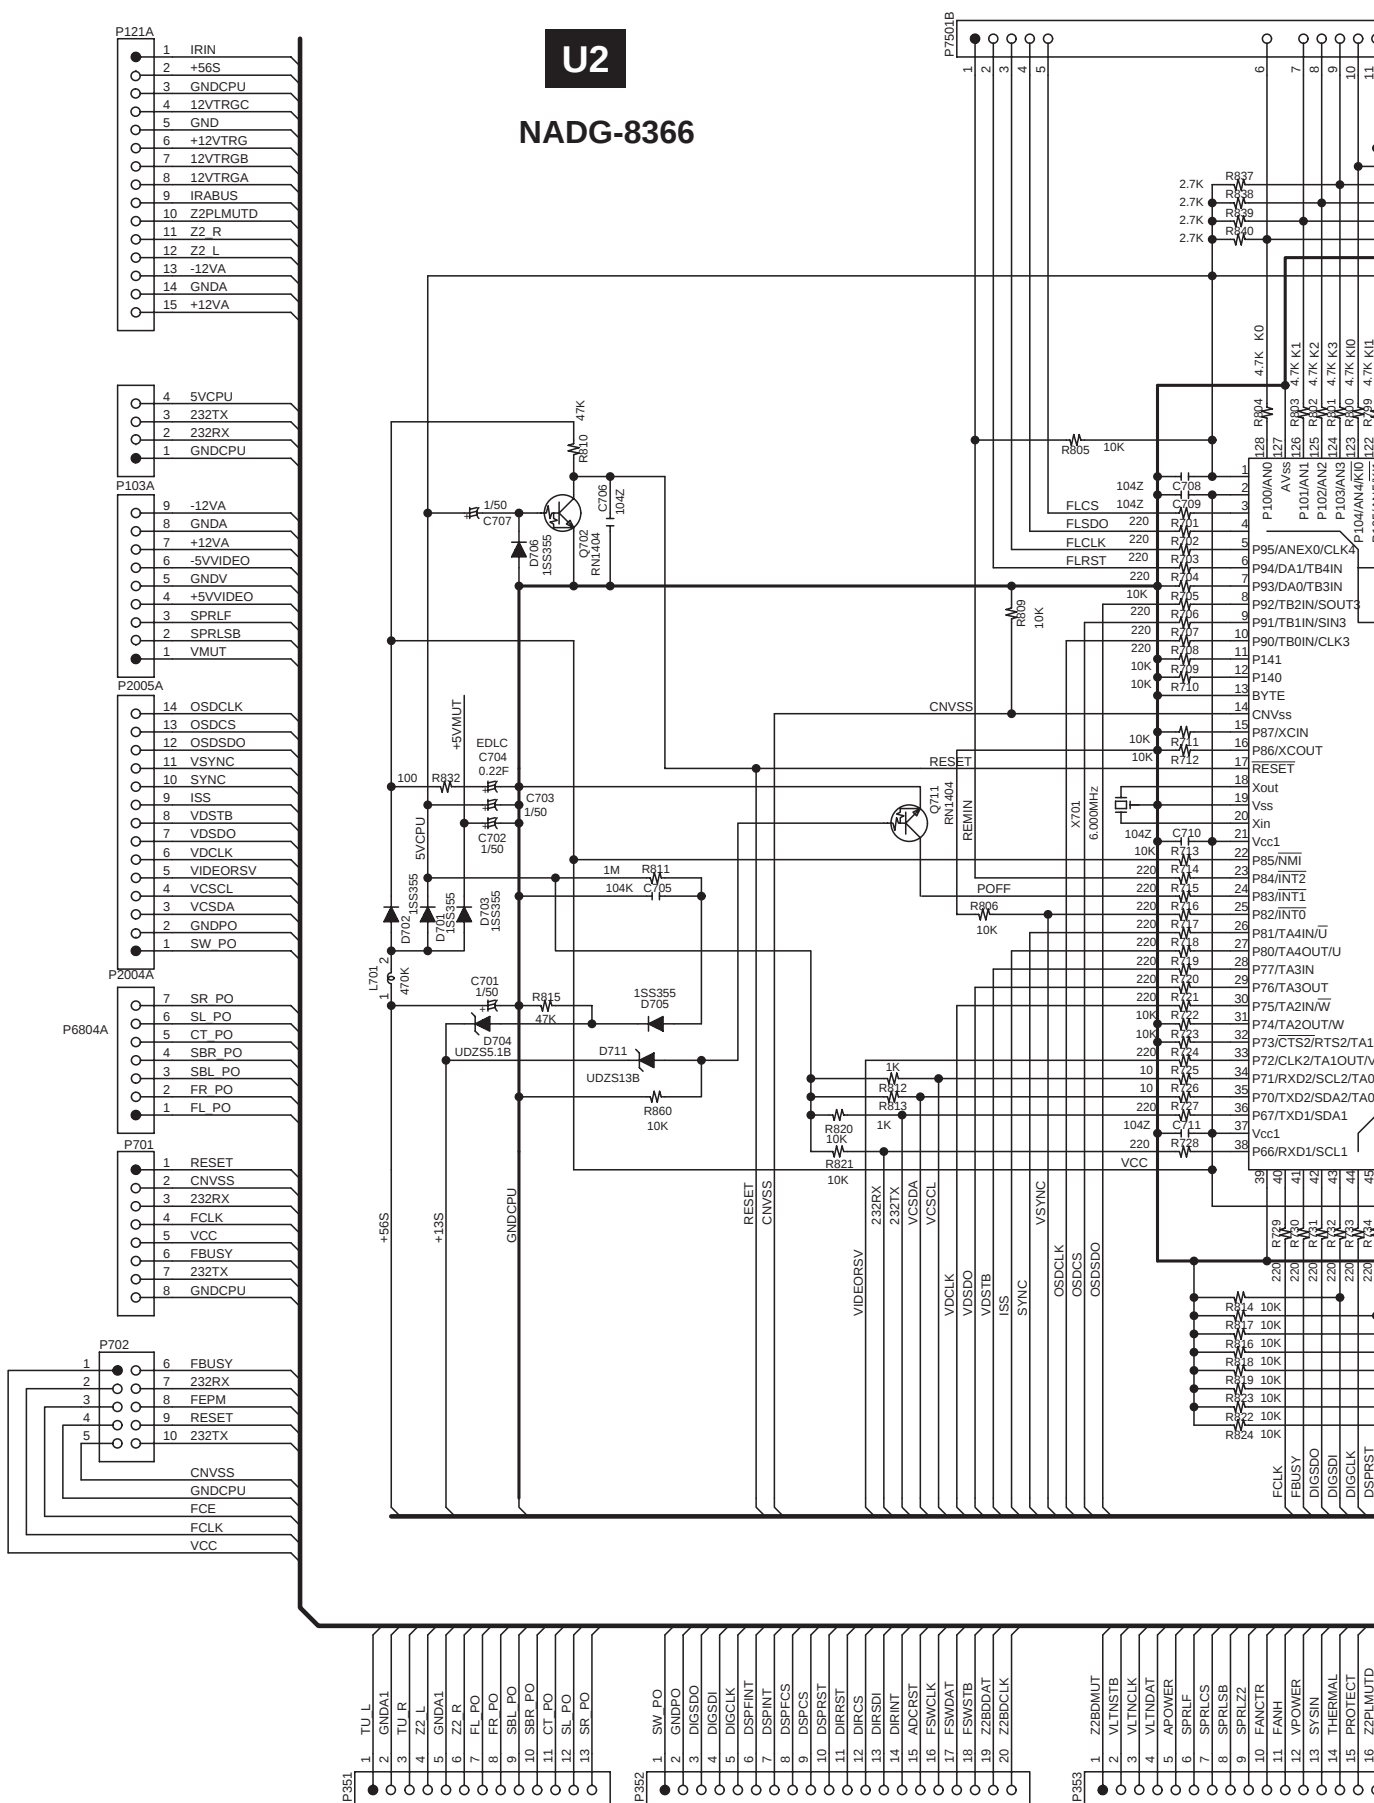

SCHEMATIC DIAGRAM 9 Microprocessor section

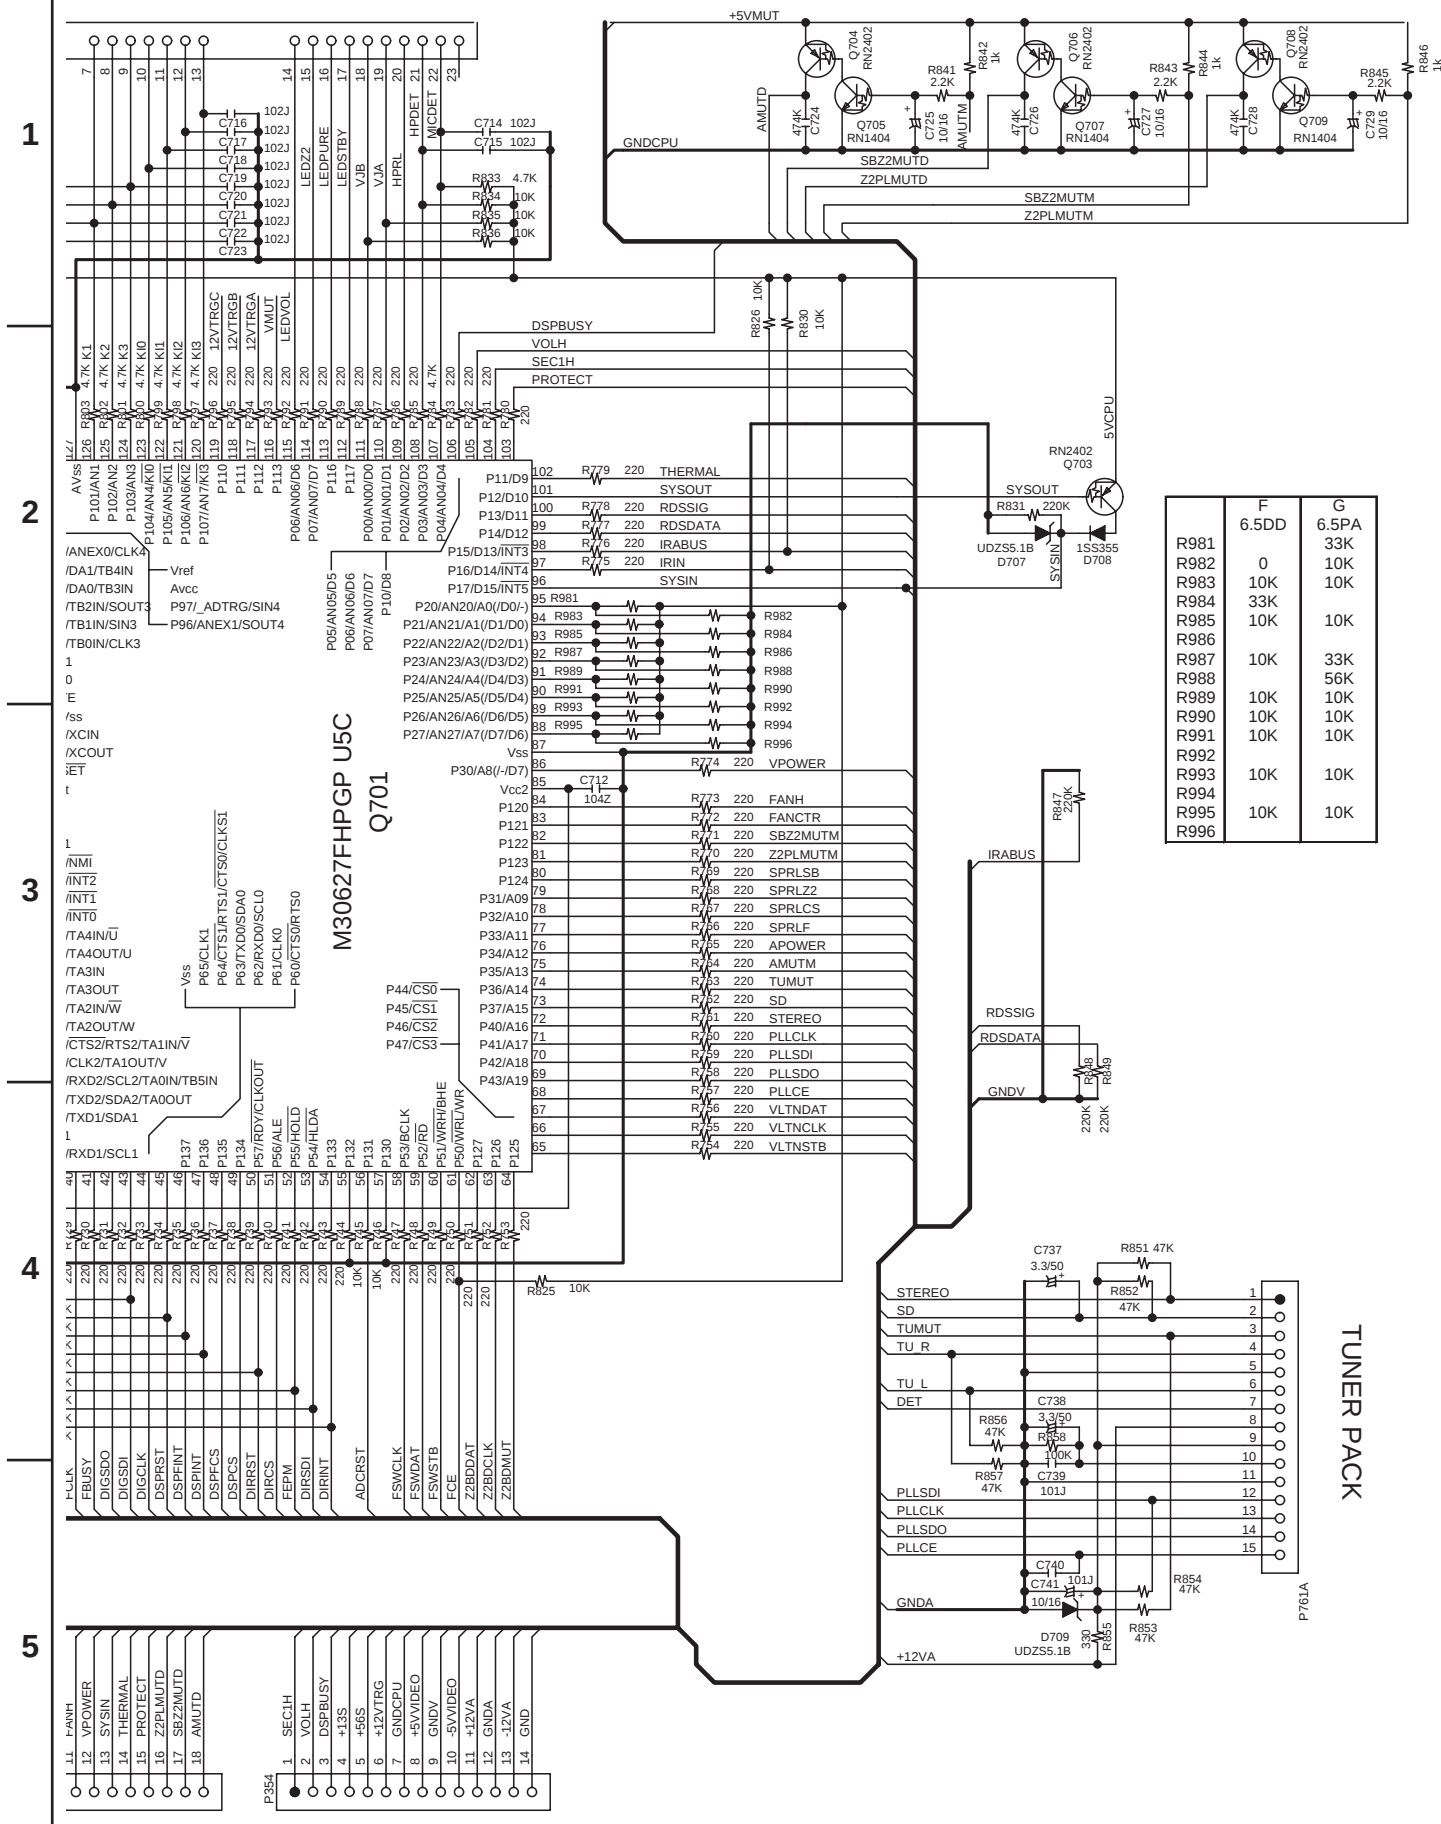


I/O terminal sections

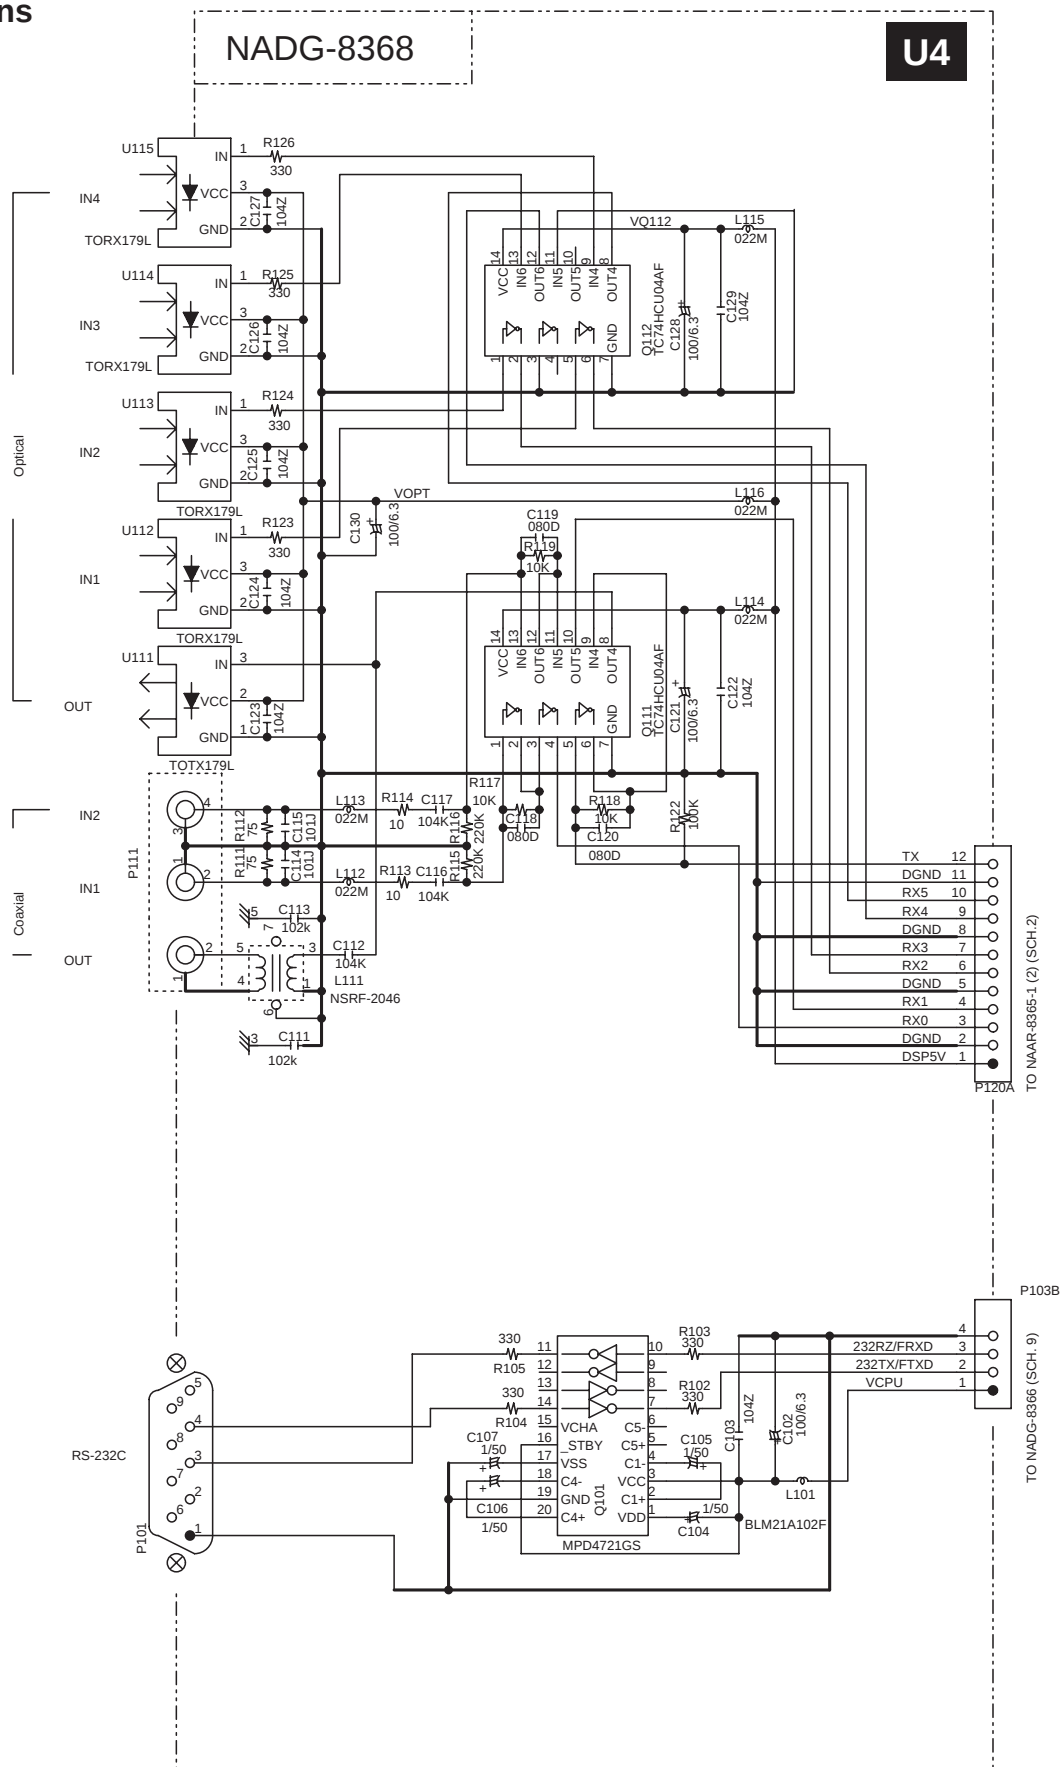

I/O terminal sections


TO NADG-8366 (SCH. 9)

WIRING VIEW

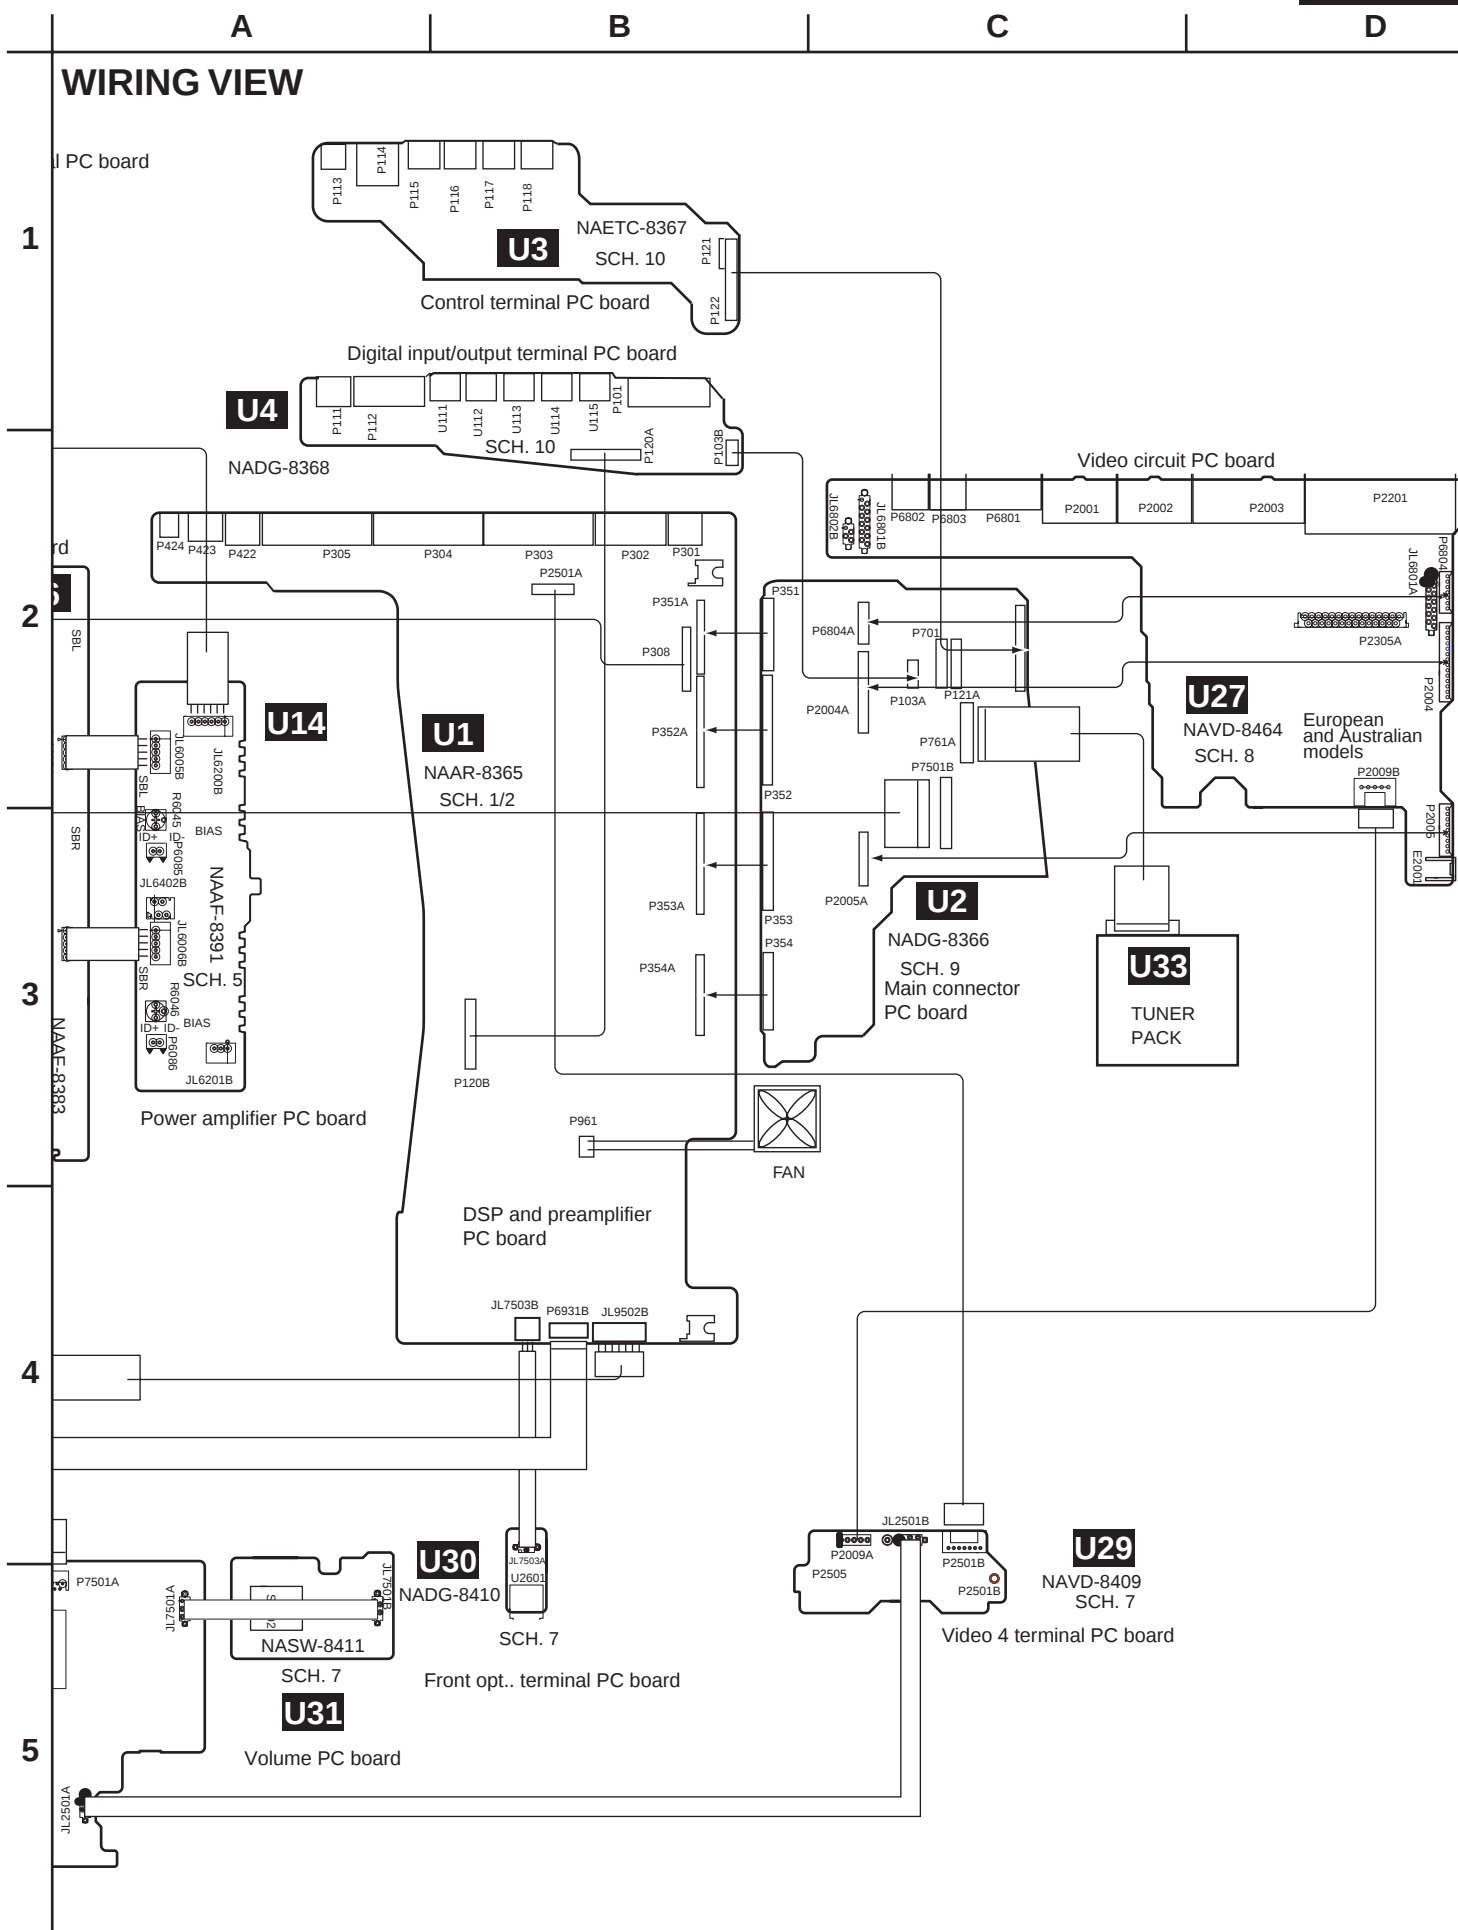

A B C D

PRINTED CIRCUIT BOARD VIEW 1 FROM COMPONENT SIDE

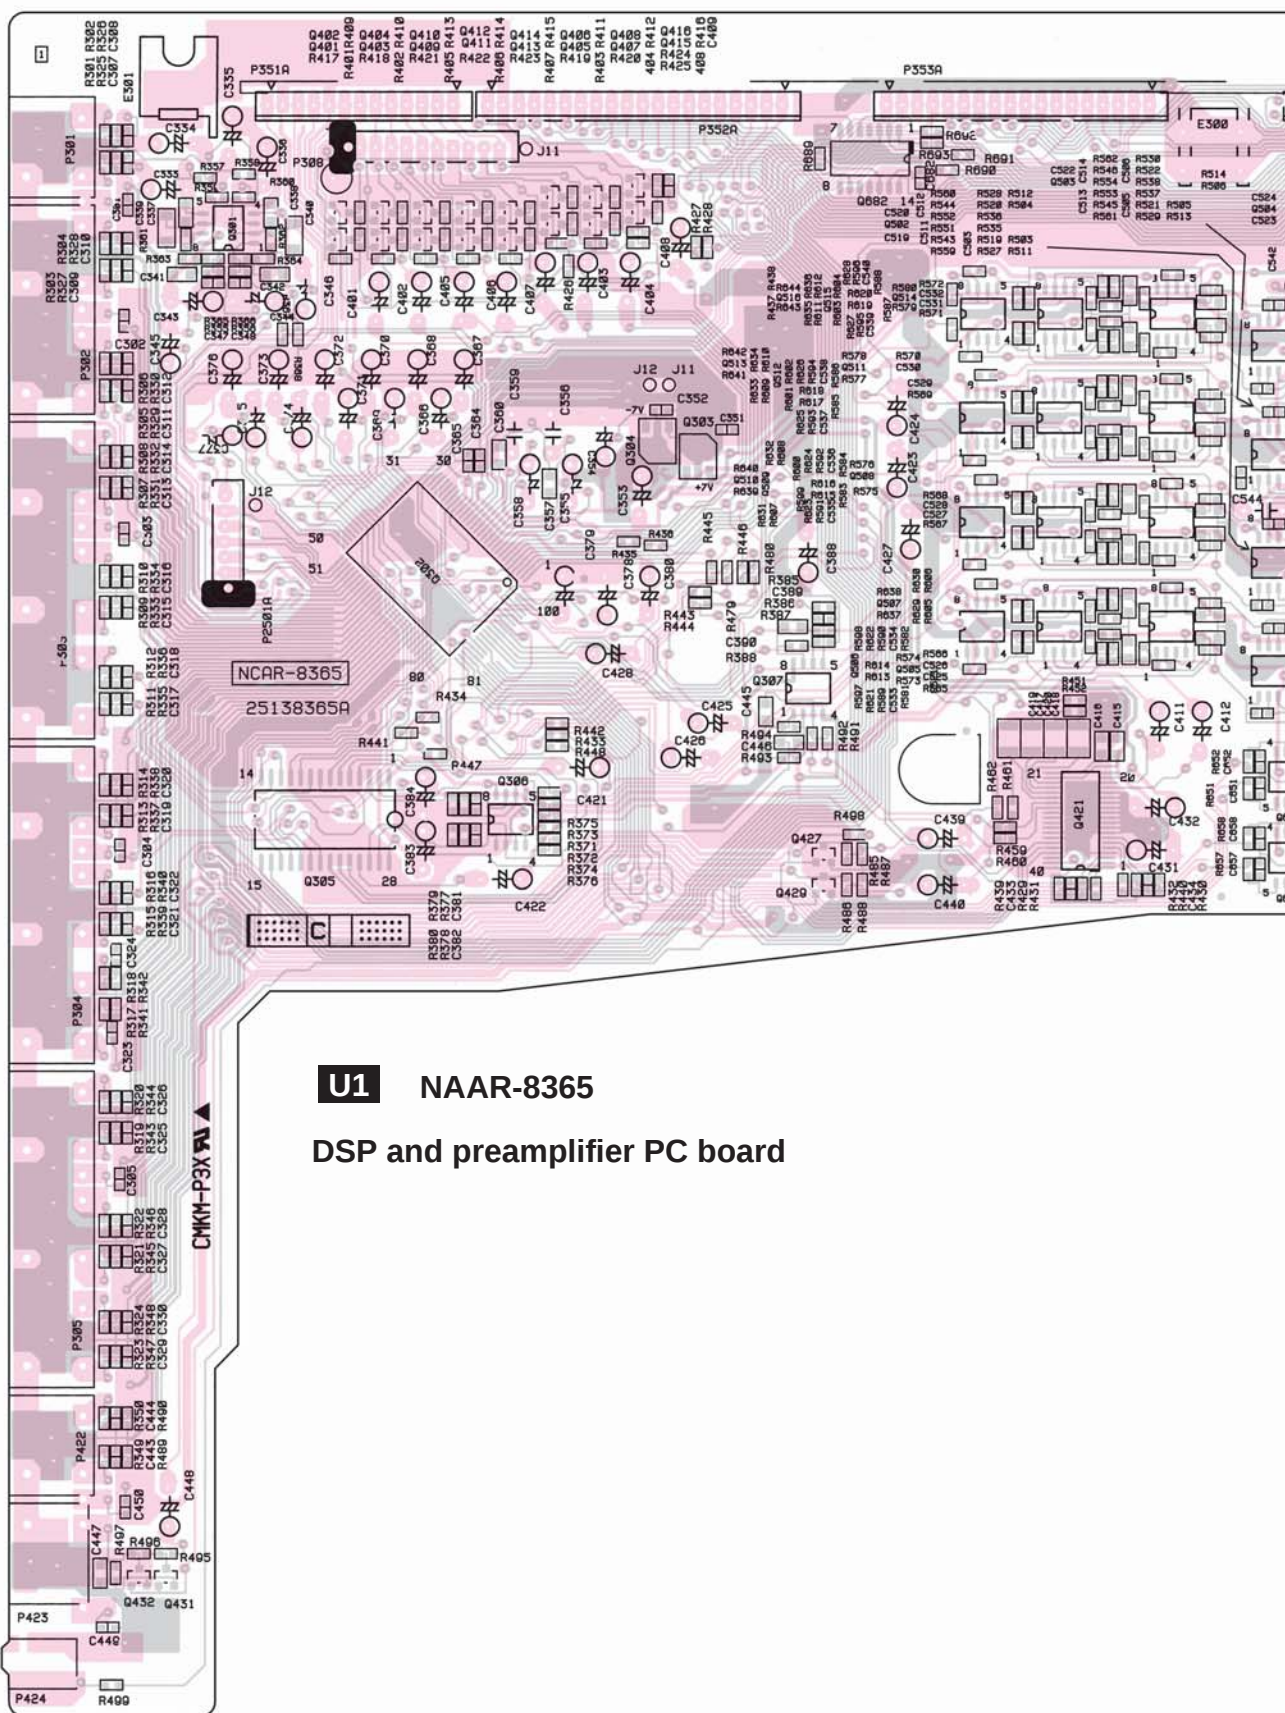


A

B



C

D

PRINTED CIRCUIT BOARD VIEW 5 FROM SOLDERING SIDE

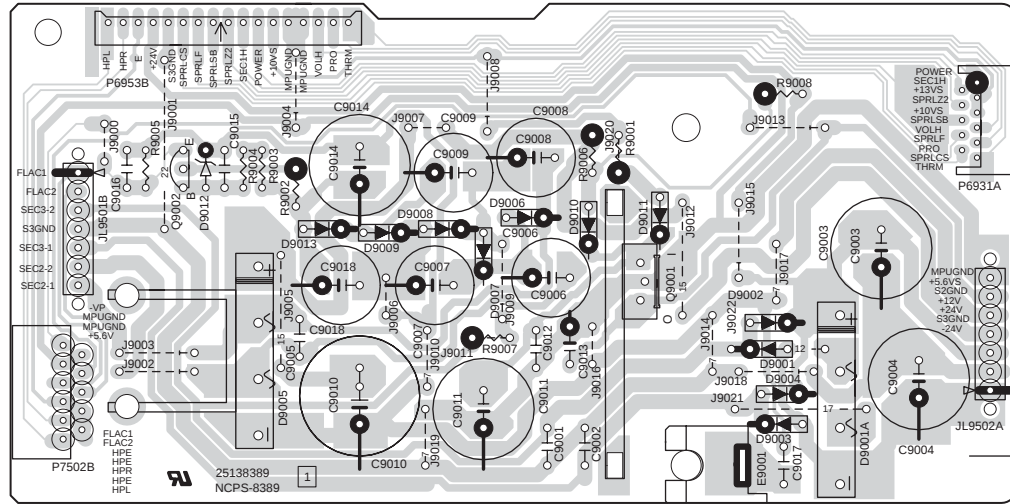
**U12** NAPS-8389

Secondary circuit PC board

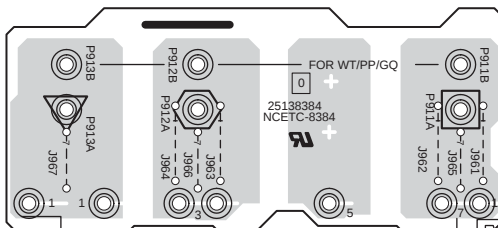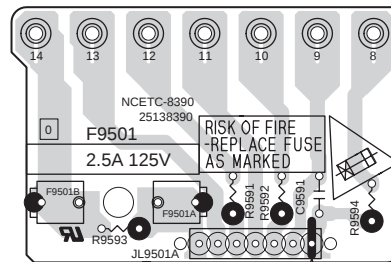**U7** NAETC-8384Transformer terminal
PC board**U13**

NAETC-8390


Fuse terminal PC board

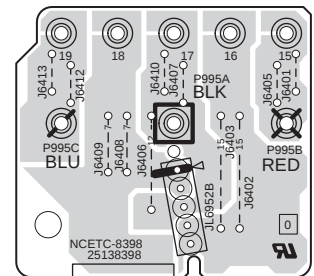**U17**

NAETC-8398

Secondary circuit
PC board

U6

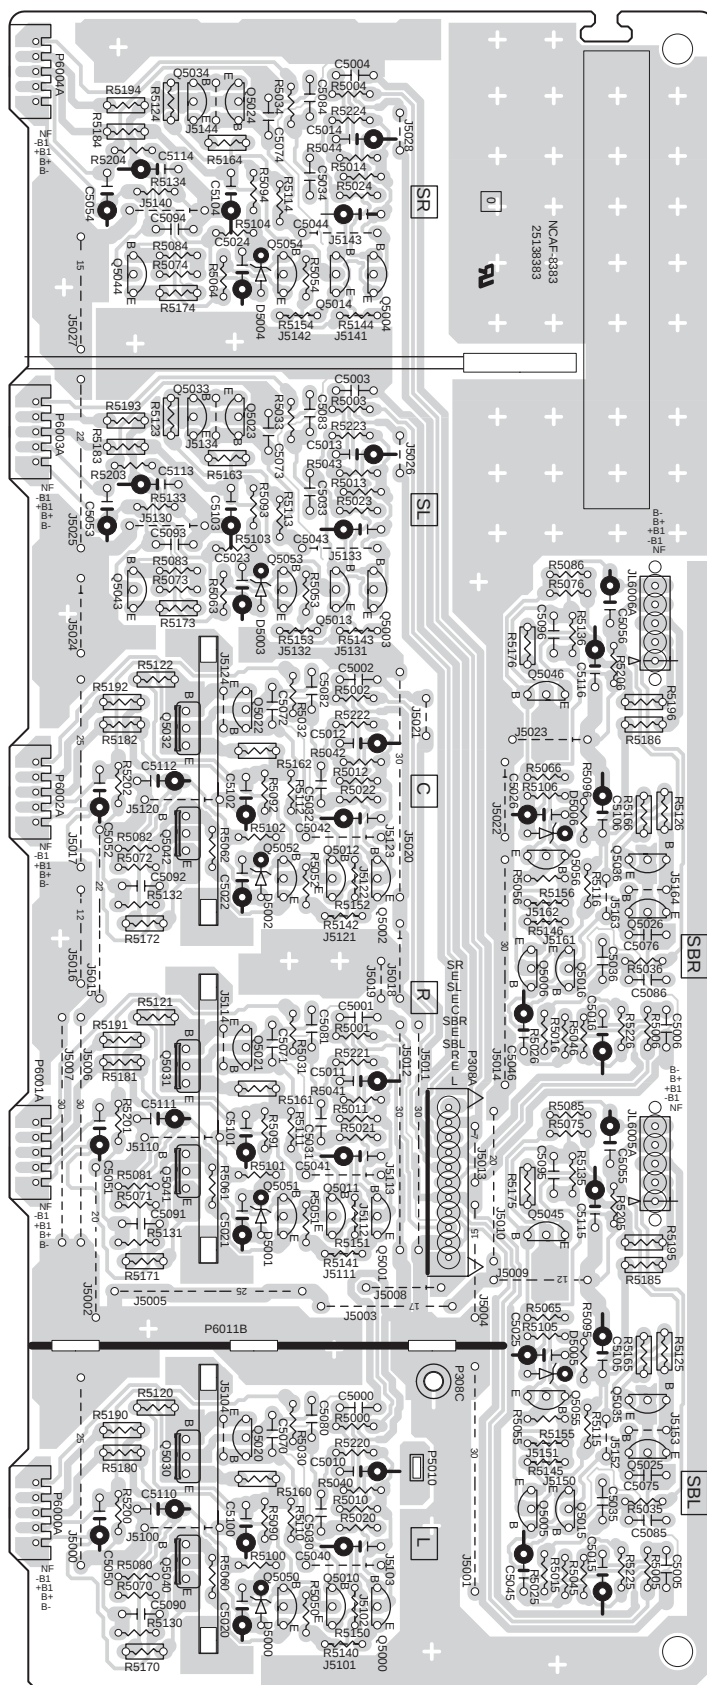

Driver circuit PC board

5



A

B

C

D

PRINTED CIRCUIT BOARD VIEW 3 FROM SOLDERING SIDE


1

2

3

4

5

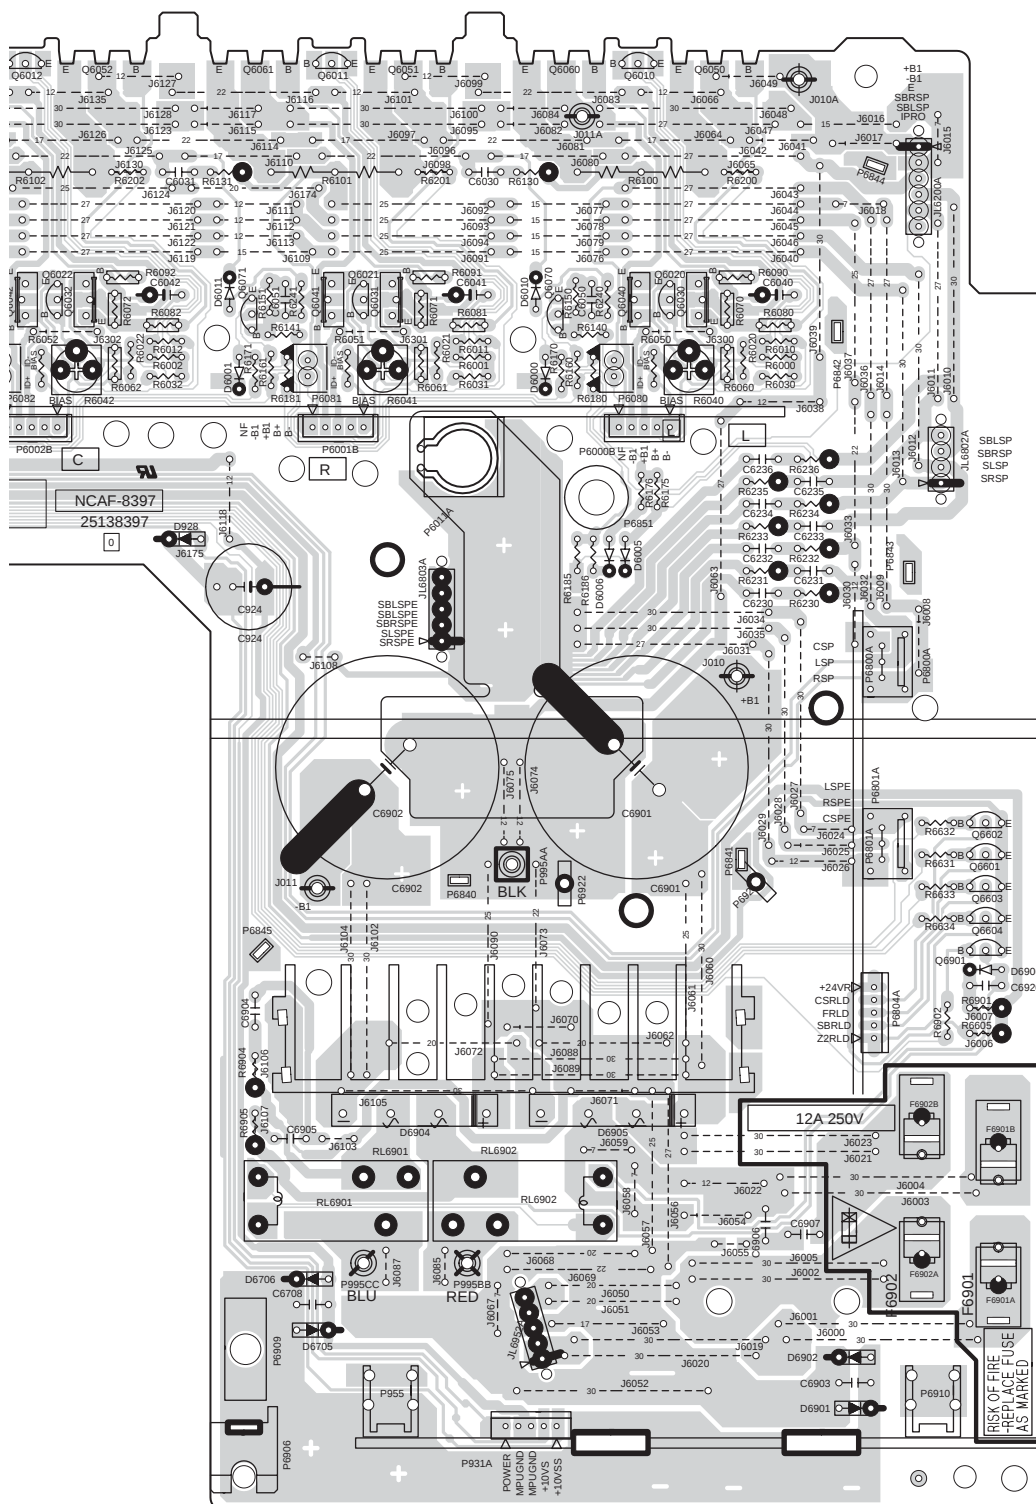**U16** NAAF-8397

Power amplifier PC board


A

B


C

D

PRINTED CIRCUIT BOARD VIEW 4 FROM SOLDERING SIDE

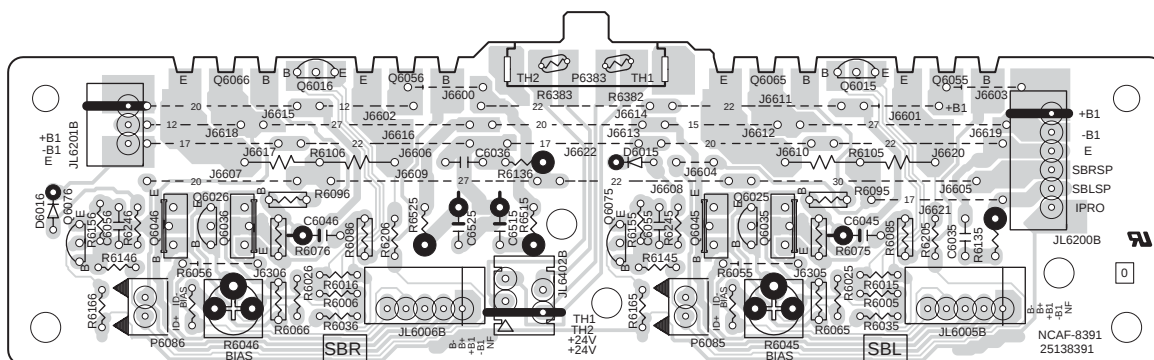**U14** NAAF-8391

Power amplifier PC board

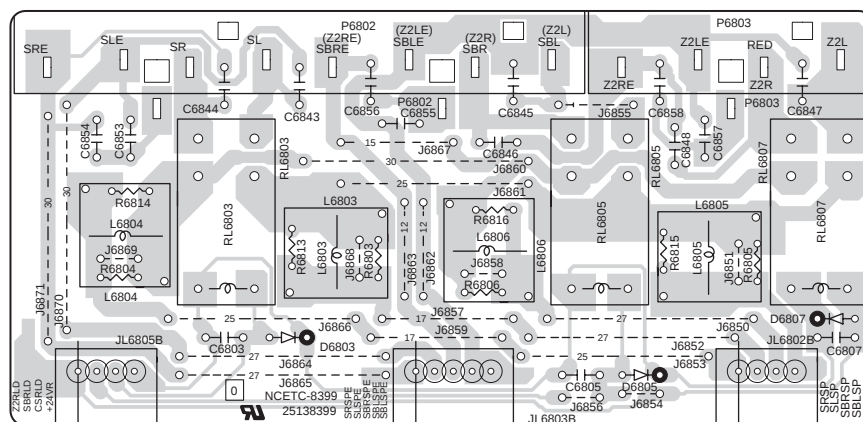**U18** NAETC-8399

Speaker terminal PC board



A

B

C

D

PRINTED CIRCUIT BOARD VIEW 4 FROM SOLDERING SIDE

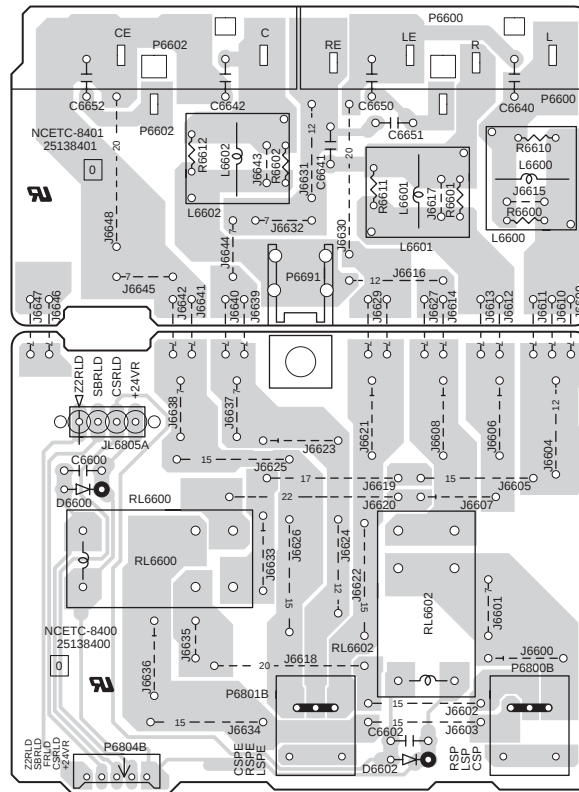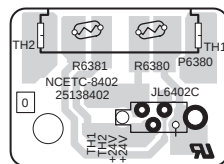**U19** NAETC-8400Speaker terminal
F/C PC board**U21** NAETC-8402

Thermal detector PC board

A


B

C

D

PRINTED CIRCUIT BOARD VIEW 5 FROM SOLDERING SIDE


U5

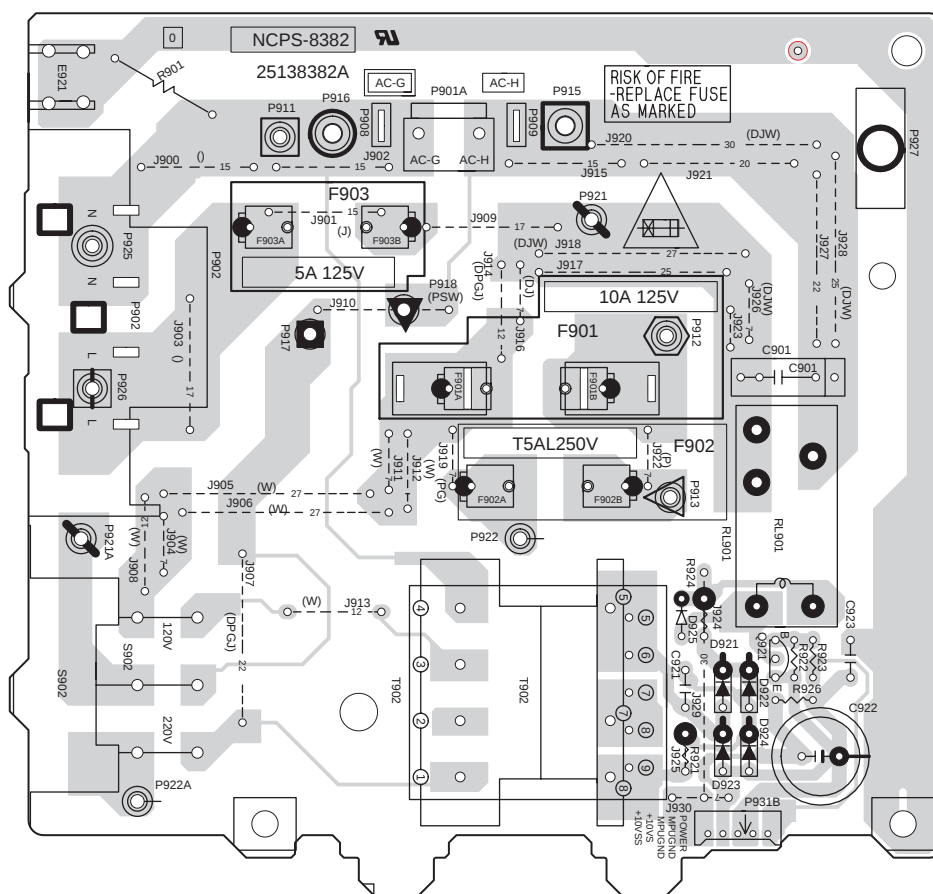

NAPS-8382

Primary circuit
PC board

U11

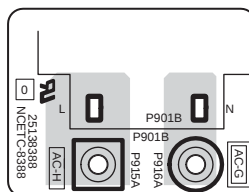NAETC-8388
AC inlet terminal
PC board

A

B


C

D


PRINTED CIRCUIT BOARD VIEW 6

Side A

U26

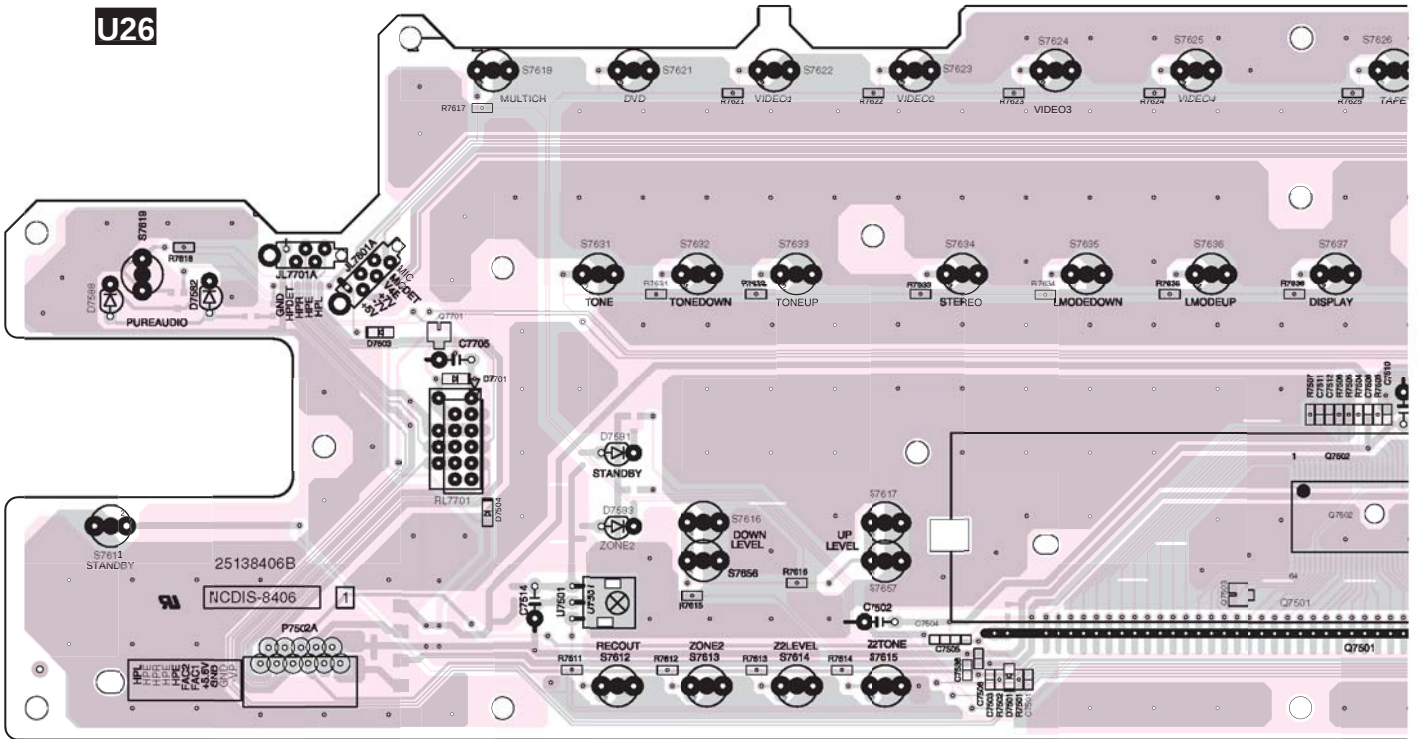

Side B

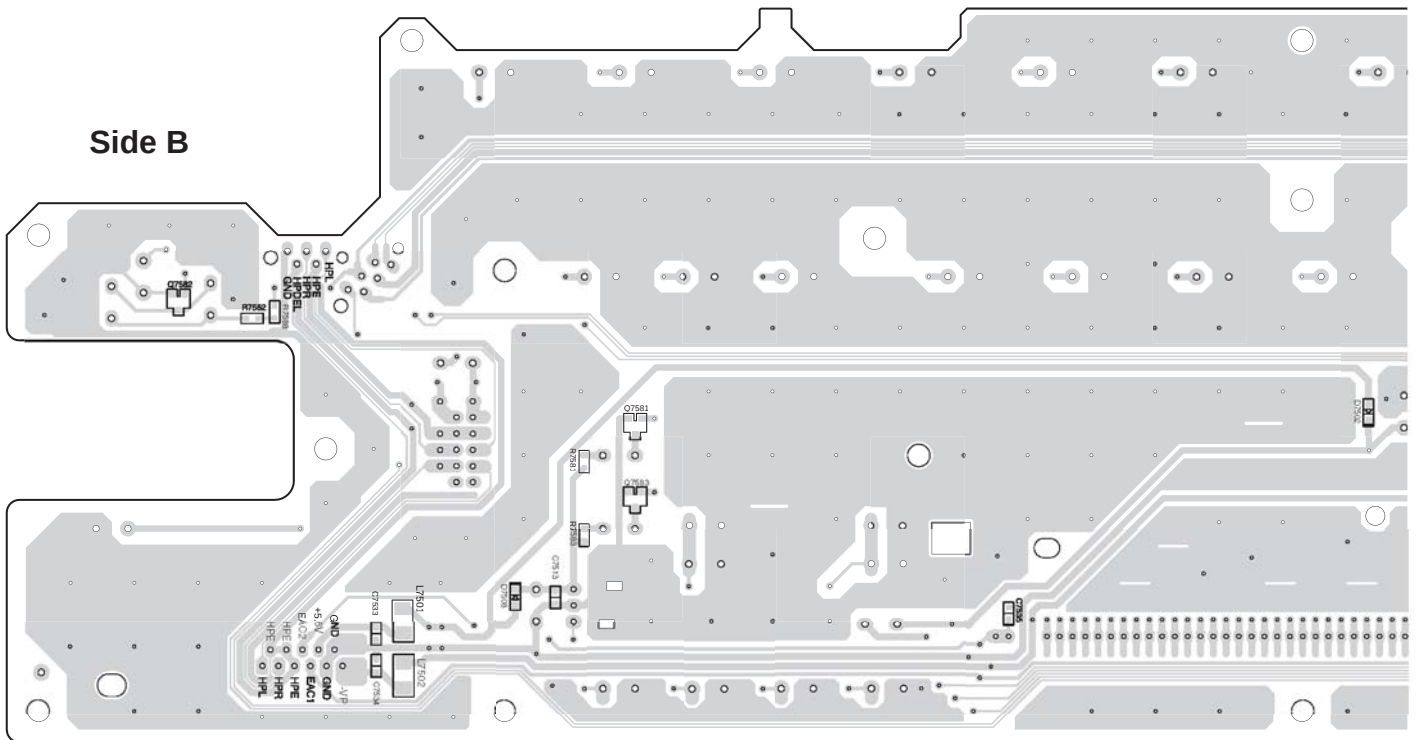

NADIS-8406
Display circuit PC board

A

B

C

D

PRINTED CIRCUIT BOARD VIEW 6

Side A

1

U26

U31

2

NASW-8411

Side B

Volume PC board

3

Side A

Side B

U32

Side A

4

5

NADIS-8406

Display circuit PC board

Side B

NAETC-8412

Headphone terminal PC board

A

B


C

D

PRINTED CIRCUIT BOARD VIEW 7


1

U29

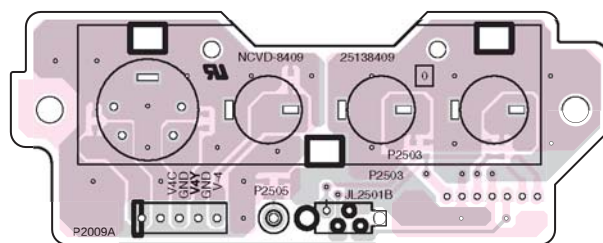

Side A

2

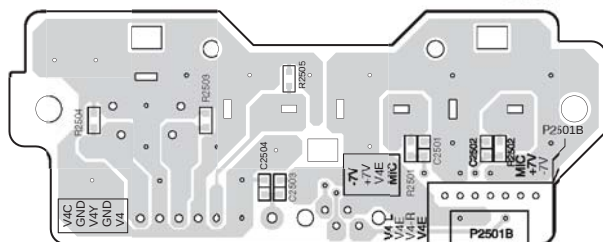


Side B

NAVD-8409

Video 4 terminal PC board


3

U30



Side A

NADG-8410



Side B

Front optical terminal PC board

4

5

5



D

U27

5


A

B

C

D

PRINTED CIRCUIT BOARD VIEW 8 FROM COMPONENT SIDE

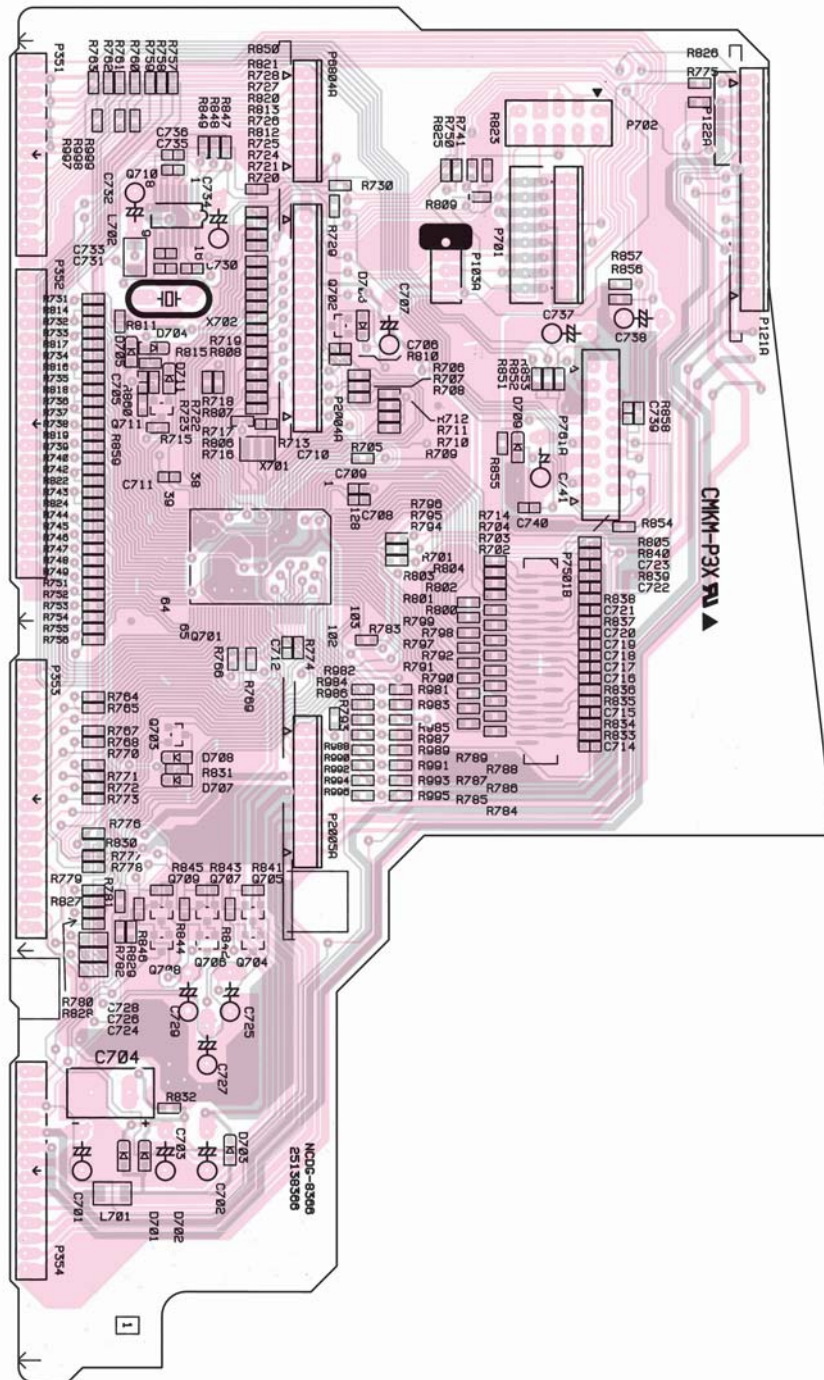**U2** NADG-8366Main connector
PC board

5



NAETC-8367
Control terminal PC board

	A	B	C	D
	PRINTED CIRCUIT BOARD VIEW 9 FROM COMPONENT SIDE			

1

2

3


4

5

U4

NADG-8368


Digital input/output terminal PC board

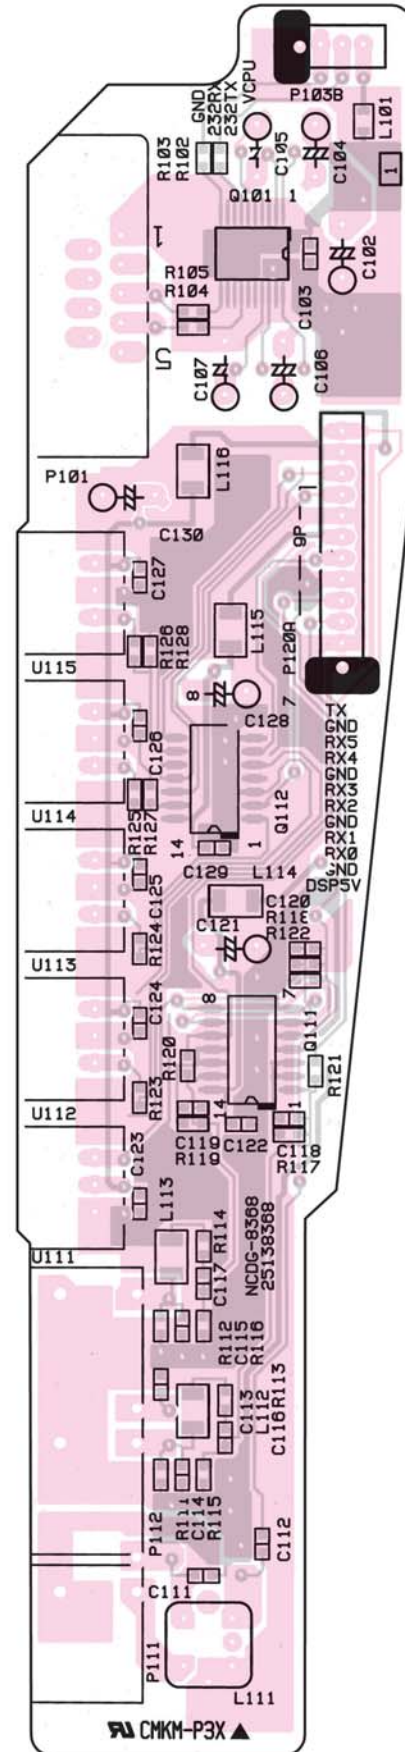


IC BLOCK DIAGRAMS AND DESCRIPTIONS

ADV7172KSTZ(Digital PAL/NTSC Video Encoder with Six DACs)

FUNCTIONAL BLOCK DIAGRAM

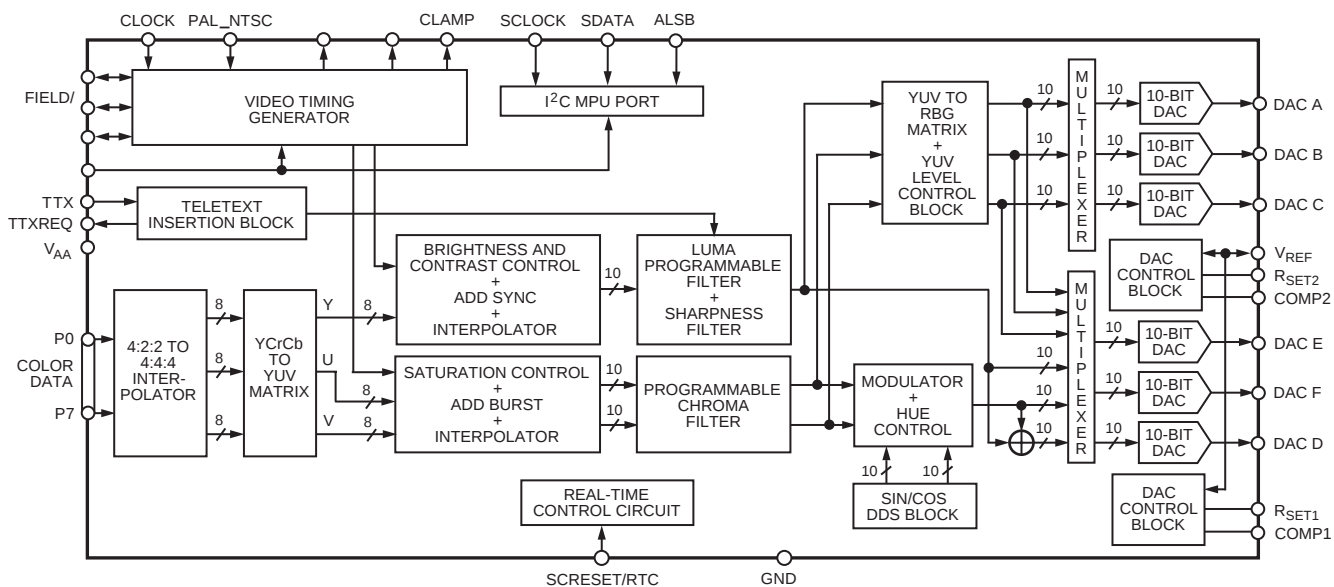

PIN CONFIGURATION

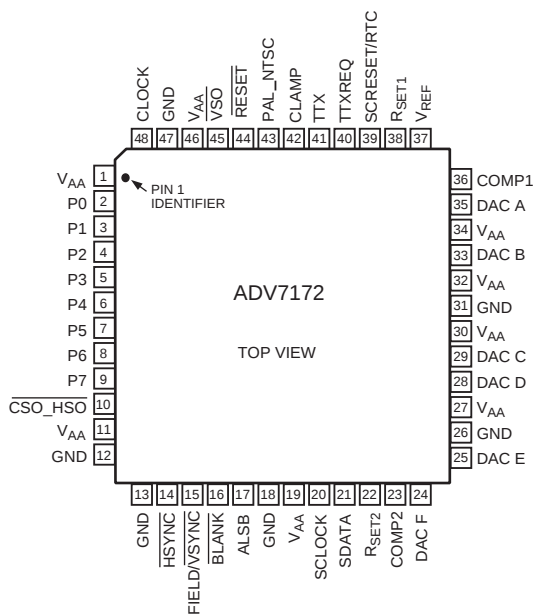

IC BLOCK DIAGRAMS AND DESCRIPTIONS



ADV7172KSTZ(Digital PAL/NTSC Video Encoder with Six DACs)

PIN FUNCTION DESCRIPTION

Mnemonic	Input/Output	Function
P7–P0	I	8-Bit 4:2:2 Multiplexed YCrCb Pixel Port (P7DP0) P0 represents the LSB.
CLOCK	I	TTL Clock Input. Requires a stable 27 MHz reference clock for standard operation. Alternatively, a 24.5454 MHz (NTSC) or 29.5 MHz (PAL) can be used for square pixel operation.
$\overline{\text{HSYNC}}$	I/O	$\overline{\text{HSYNC}}$ (Modes 1 and 2) Control Signal. This pin may be configured to output (Master Mode) or as an input and accept (Slave Mode) Sync signals.
$\overline{\text{FIELD/VSYNC}}$	I/O	Dual Function $\overline{\text{FIELD}}$ (Mode 1) and $\overline{\text{VSYNC}}$ (Mode 2) Control Signal. This pin may be configured to output (Master Mode) or as an input (Slave Mode) and accept these control signals.
$\overline{\text{BLANK}}$	I/O	Video Blanking Control Signal. The pixel inputs are ignored when this is Logic Level "0." This signal is optional.
SCRESET/RTC	I	This pin can be configured as an input by setting MR42 and MR41 of Mode Register 4. It can be configured as a subcarrier reset pin, in which case a low-to-high transition on this pin will reset the subcarrier phase to Field 0. Alternatively it may be configured as a Real-Time Control (RTC) Input.
V_{REF}	I/O	Voltage Reference Input for DACs or Voltage Reference Output (1.235 V).
R_{SET1}	I	A 150 Ω resistor connected from this pin to GND is used to control full-scale amplitudes of the Video Signals from DACs A, B, and C (the "large" DACs).
R_{SET2}	I	A 600 Ω resistor connected from this pin to GND is used to control full-scale amplitudes of the Video Signals from DACs D, E, and F (the "small" DACs).
COMP1	O	Compensation Pin for DACs A, B, and C. Connect a 0.1 μF Capacitor from COMP to V_{AA} . For Optimum Dynamic Performance in Low Power Mode, the value of the COMP1 capacitor can be lowered to as low as 2.2 nF.
COMP2	O	Compensation Pin for DACs D, E, and F. Connect a 0.1 μF Capacitor from COMP to V_{AA} .
DAC A	O	GREEN/Composite/Y Analog Output. This DAC is capable of providing 34.66 mA output.
DAC B	O	BLUE/S-Video Y/U Analog Output. This DAC is capable of providing 34.66 mA output.
DAC C	O	RED/S-Video C/V Analog Output. This DAC is capable of providing 34.66 mA output.
DAC D	O	GREEN/Composite/Y Analog Output. This DAC is capable of providing 8.66 mA output.
DAC E	O	BLUE/S-Video Y/U Analog Output. This DAC is capable of providing 8.66 mA output.
DAC F	O	RED/S-Video C/V Analog Output. This DAC is capable of providing 8.66 mA output.
SCLOCK	I	MPU Port Serial Interface Clock Input.
SDATA	I/O	MPU Port Serial Data Input/Output.
CLAMP	O	TTL Output Signal to external circuitry to enable clamping of all video signals.
$\overline{\text{PAL_NTSC}}$	I	Input signal to select PAL or NTSC mode of operation, pin set to Logic "1" selects PAL.
$\overline{\text{VSO}}$	O	$\overline{\text{VSO}}$ TTL Output Sync Signal.
$\overline{\text{CSO_HSO}}$	O	Dual Function $\overline{\text{CSO}}$ or $\overline{\text{HSO}}$ TTL Output Sync Signal.
$\overline{\text{ALSB}}$	I	TTL Address Input. This signal sets up the LSB of the MPU address.
RESET	I	The input resets the on-chip timing generator and sets the ADV7172/ADV7173 into default mode. This is NTSC operation, Timing Slave Mode 0, DACs A, B, and C powered OFF, DACs D, E, and F powered ON, Composite and S-Video out.
TTX	I	Teletext Data Input Pin.
TTXREQ	O	Teletext Data Request output signal used to control teletext data transfer.
V_{AA}	P	Power Supply (3 V to 5 V).
GND	G	Ground Pin.

IC BLOCK DIAGRAMS AND DESCRIPTIONS

ADV7183AKST(Multiformat SDTV Video Decoder)

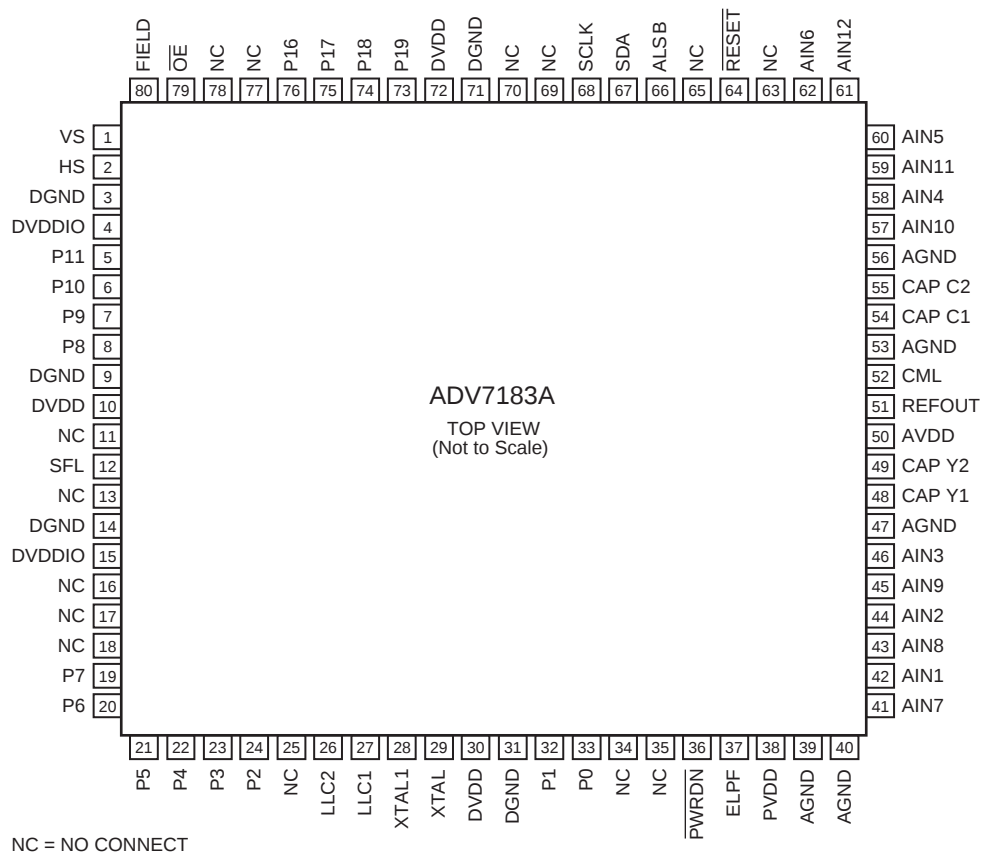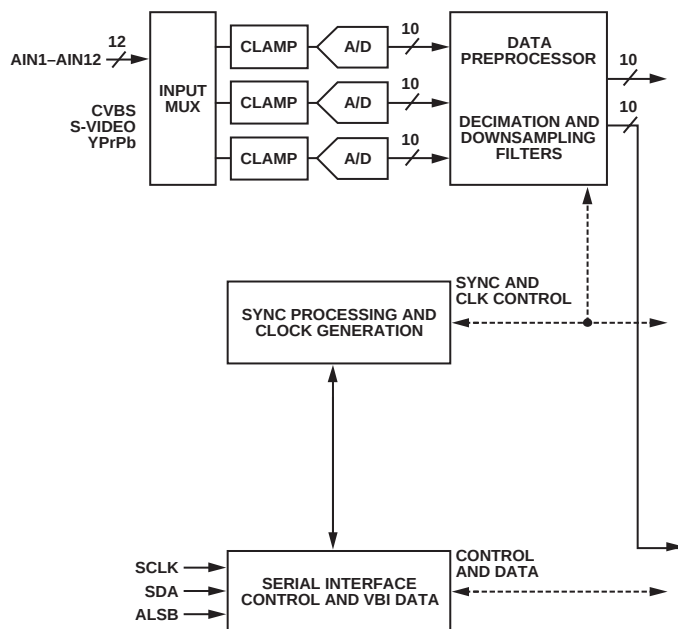

80-lead LQFP pin configuration

IC BLOCK DIAGRAMS AND DESCRIPTIONS


ADV7183AKST(Multiformat SDTV Video Decoder)

Pin Function Descriptions


Pin No.	Mnemonic	Type	Function
3, 9, 14, 31, 71	DGND	G	Digital Ground.
39, 40, 47, 53, 56	AGND	G	Analog Ground.
4, 15	DVDDIO	P	Digital I/O Supply Voltage (3.3 V).
10, 30, 72	DVDD	P	Digital Core Supply Voltage (1.8 V).
50	AVDD	P	Analog Supply Voltage (3.3 V).
38	PVDD	P	PLL Supply Voltage (1.8 V).
41...46, 57...62	AIN1...AIN12	I	Analog Video Input Channels.
11, 13, 16...18, 25, 34, 35, 63, 65, 69, 70, 77, 78	NC		No Connect Pins.
5...8, 19...24, 32, 33, 73...76	P0...P15	O	Video Pixel Output Port.
2	HS	O	HS is a horizontal synchronization output signal.
1	VS	O	VS is a vertical synchronization output signal.
80	FIELD	O	FIELD is a field synchronization output signal.
67	SDA	I/O	I ² C Port Serial Data Input/Output Pin.
68	SCLK	I	I ² C Port Serial Clock Input (Max Clock Rate of 400 kHz).
66	ALSB	I	This pin selects the I ² C address for the ADV7183A. ALSB set to Logic 0 sets the address for a write as 0x40; for ALSB set to logic high, the address selected is 0x42.
64	$\overline{\text{RESET}}$	I	System Reset Input, Active Low. A minimum low reset pulse width of 5 ms is required to reset the ADV7183A circuitry.
27	LLC1	O	This is a line-locked output clock for the pixel data output by the ADV7183A. Nominally 27 MHz, but varies up or down according to video line length.
26	LLC2	O	This is a divide-by-2 version of the LLC1 output clock for the pixel data output by the ADV7183A. Nominally 13.5 MHz, but varies up or down according to video line length.
29	XTAL	I	This is the input pin for the 27 MHz crystal, or can be overdriven by an external 3.3 V, 27 MHz clock oscillator source. In crystal mode, the crystal must be a fundamental crystal.
28	XTAL1	O	This pin should be connected to the 27 MHz crystal or left as a no connect if an external 3.3 V, 27 MHz clock oscillator source is used to clock the ADV7183A. In crystal mode, the crystal must be a fundamental crystal.
36	$\overline{\text{PWRDN}}$	I	A logic low on this pin places the ADV7183A in a power-down mode. Refer to the I ² C Control Register Map for more options on power-down modes for the ADV7183A.
79	$\overline{\text{OE}}$	I	When set to a logic low, $\overline{\text{OE}}$ enables the pixel output bus, P15...P0 of the ADV7183A. A logic high on the $\overline{\text{OE}}$ pin places Pins P15...P0, HS, VS, SE/SYNC_OUT into a high impedance state.
37	ELPF	I	The recommended external loop filter must be connected to this ELPF pin, as shown in Figure 42.
12	SFL	O	Subcarrier Frequency Lock. This pin contains a serial output stream that can be used to lock the subcarrier frequency when this decoder is connected to any Analog Devices, Inc. digital video encoder.
51	REFOUT	O	Internal Voltage Reference Output. Refer to Figure 42 for a recommended capacitor network for this pin.
52	CML	O	The CML pin is a common-mode level for the internal ADCs. Refer to Figure 42 for a recommended capacitor network for this pin.
48, 49	CAPY1, CAPY2	I	ADC s Capacitor Network. Refer to Figure 42 for a recommended capacitor network for this pin.
54, 55	CAPC1, CAPC2	I	ADC s Capacitor Network. Refer to Figure 42 for a recommended capacitor network for this pin.

IC BLOCK DIAGRAMS AND DESCRIPTIONS

CS42518(110dB,192kHz 8-Ch Codec with S/PDIF Receiver)

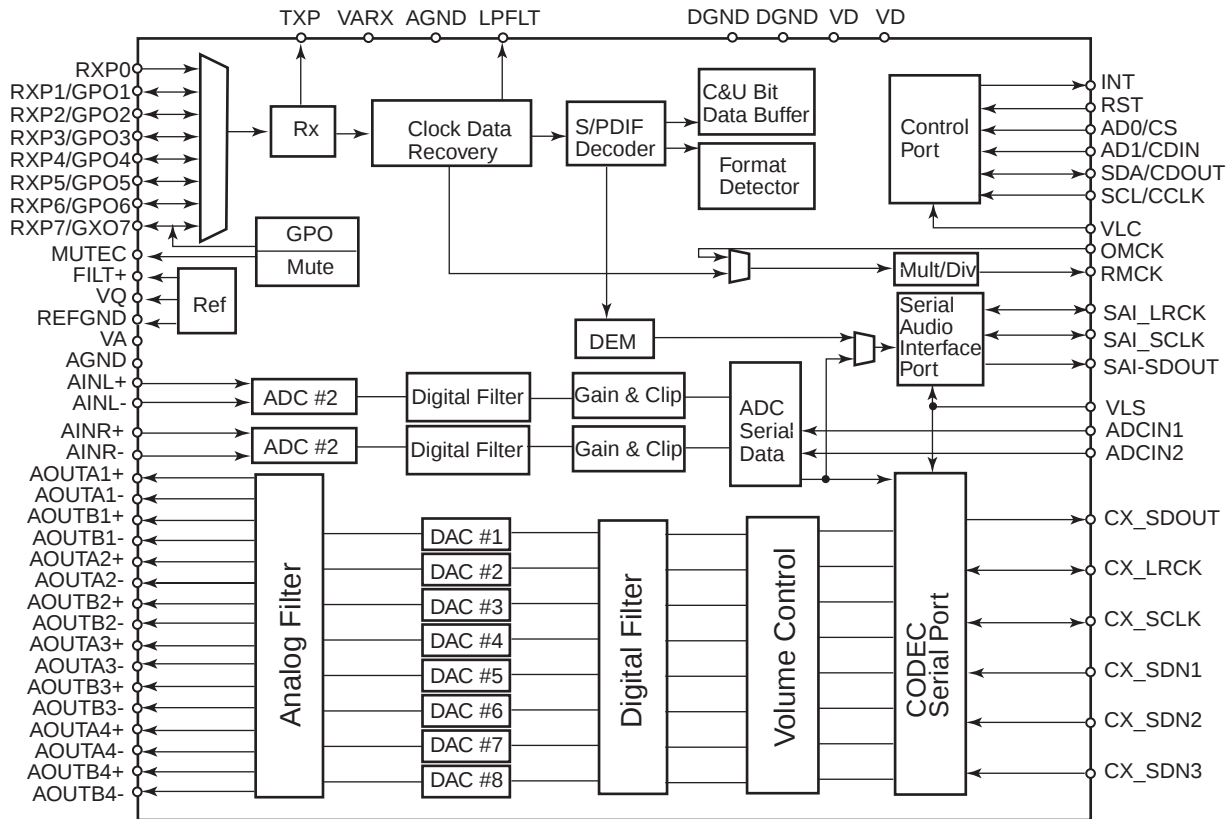


CS5333(24-Bit,96kHz Stereo A/D Converter)

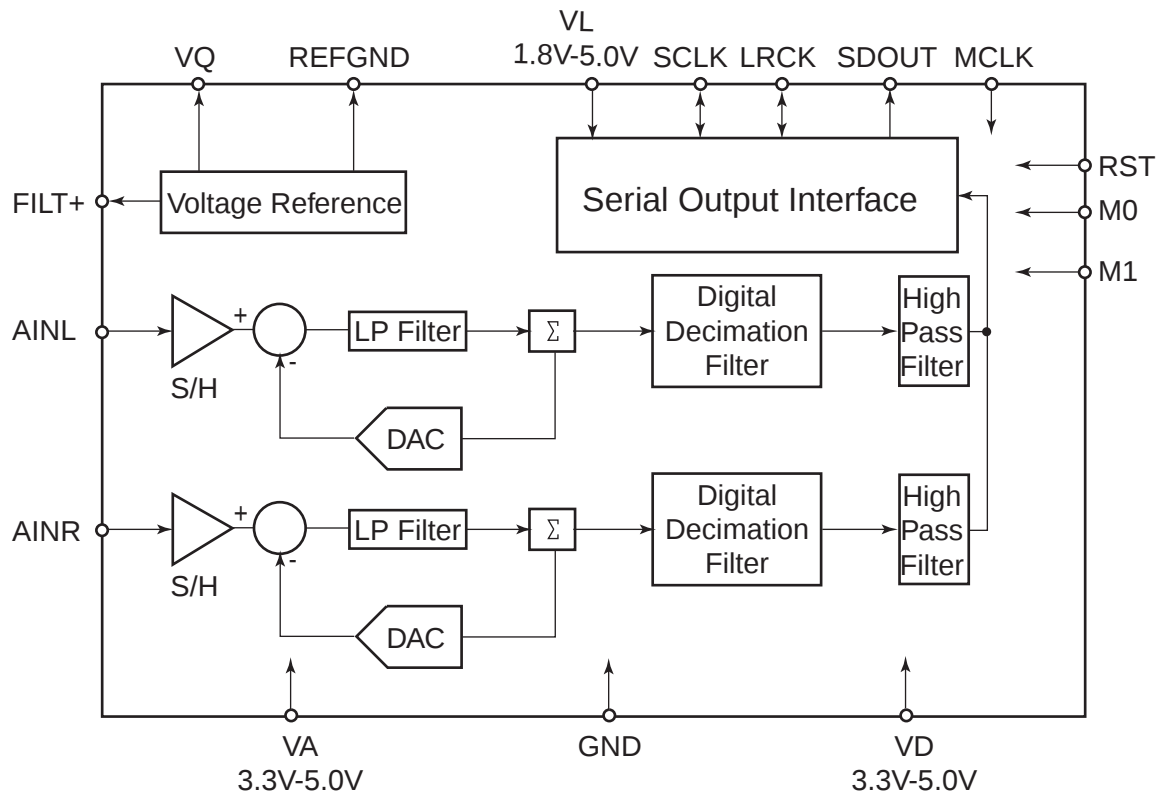


IC BLOCK DIAGRAMS AND TERMINAL DESCRIPTIONS

IC42S16100 (16-Mbit Synchronous Dynamic RAM)

BLOCK DIAGRAM

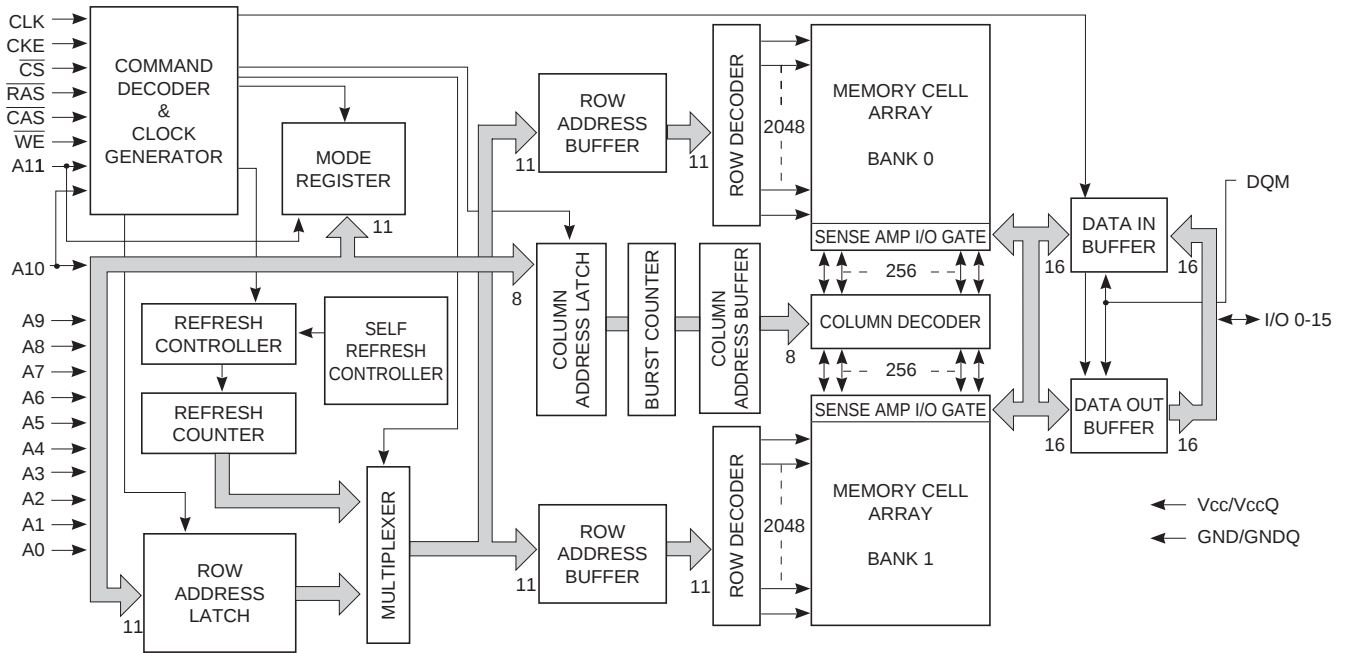

PIN LAYOUT

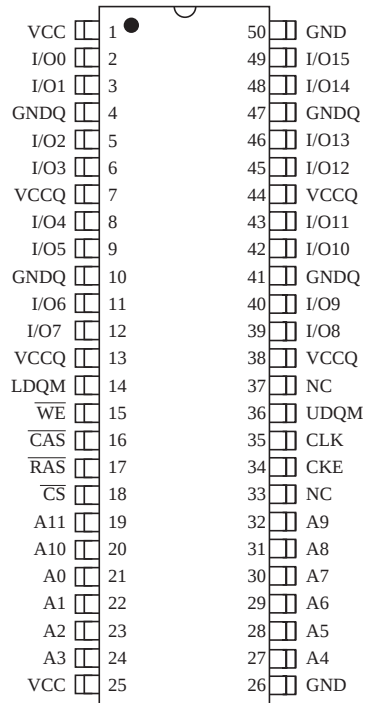

IC BLOCK DIAGRAMS AND TERMINAL DESCRIPTIONS


IC42S16100 (16-Mbit Synchronous Dynamic RAM)

TERMINAL DESCRIPTION


Pin No.	Pin name	Function
20 to 24 27 to 32	A0-A10	A0 to A10 are address inputs. A0-A10 are used as row address inputs during active command input and A0-A7 as column address inputs during read or write command input. A10 is also used to determine the precharge mode during other commands. If A10 is LOW during precharge command, the bank selected by A11 is precharged, but if A10 is HIGH, both banks will be precharged. When A10 is HIGH in read or write command cycle, the precharge starts automatically after the burst access. These signals become part of the OP CODE during mode register set command input.
19	A11	A11 is the bank selection signal. When A11 is LOW, bank 0 is selected and when high, bank 1 is selected. This signal becomes part of the OP CODE during mode register set command input.
16	$\overline{\text{CAS}}$	$\overline{\text{CAS}}$, in conjunction with the $\overline{\text{RAS}}$ and $\overline{\text{WE}}$, forms the device command. See the "Command Truth Table" item for details on device commands.
34	CKE	The CKE input determines whether the CLK input is enabled within the device. When is CKE HIGH, the next rising edge of the CLK signal will be valid, and when LOW, invalid. When CKE is LOW, the device will be in either the power-down mode, the clock suspend mode, or the self refresh mode. The CKE is an asynchronous input.
35	CLK	CLK is the master clock input for this device. Except for CKE, all inputs to this device are acquired in synchronization with the rising edge of this pin.
18	$\overline{\text{CS}}$	The $\overline{\text{CS}}$ input determines whether command input is enabled within the device. Command input is enabled when $\overline{\text{CS}}$ is LOW, and disabled with $\overline{\text{CS}}$ is HIGH. The device remains in the previous state when $\overline{\text{CS}}$ is HIGH.
2, 3, 5, 6, 8, 9, 11, 12, 39, 40, 42, 43, 45, 46, 48, 49	I/O0 to I/O15	I/O0 to I/O15 are I/O pins. I/O through these pins can be controlled in byte units using the LDQM and UDQM pins.
14, 36	LDQM, UDQM	LDQM and UDQM control the lower and upper bytes of the I/O buffers. In read mode, LDQM and UDQM control the output buffer. When LDQM or UDQM is LOW, the corresponding buffer byte is enabled, and when HIGH, disabled. The outputs go to the HIGH impedance state when LDQM/UDQM is HIGH. This function corresponds to $\overline{\text{OE}}$ in conventional DRAMs. In write mode, LDQM and UDQM control the input buffer. When LDQM or UDQM is LOW, the corresponding buffer byte is enabled, and data can be written to the device. When LDQM or UDQM is HIGH, input data is masked and cannot be written to the device.
17	$\overline{\text{RAS}}$	$\overline{\text{RAS}}$, in conjunction with $\overline{\text{CAS}}$ and $\overline{\text{WE}}$, forms the device command. See the "Command Truth Table" item for details on device commands.
15	$\overline{\text{WE}}$	$\overline{\text{WE}}$, in conjunction with $\overline{\text{RAS}}$ and $\overline{\text{CAS}}$, forms the device command. See the "Command Truth Table" item for details on device commands.
7, 13, 38, 44	V _{CCQ}	V _{CCQ} is the output buffer power supply.
1, 25	V _{CC}	V _{CC} is the device internal power supply.
4, 10, 41, 47	GNDQ	GNDQ is the output buffer ground.
26, 50	GND	GND is the device internal ground.

IC BLOCK DIAGRAMS AND DESCRIPTIONS

LA7106MFP(75 ohm video driver)

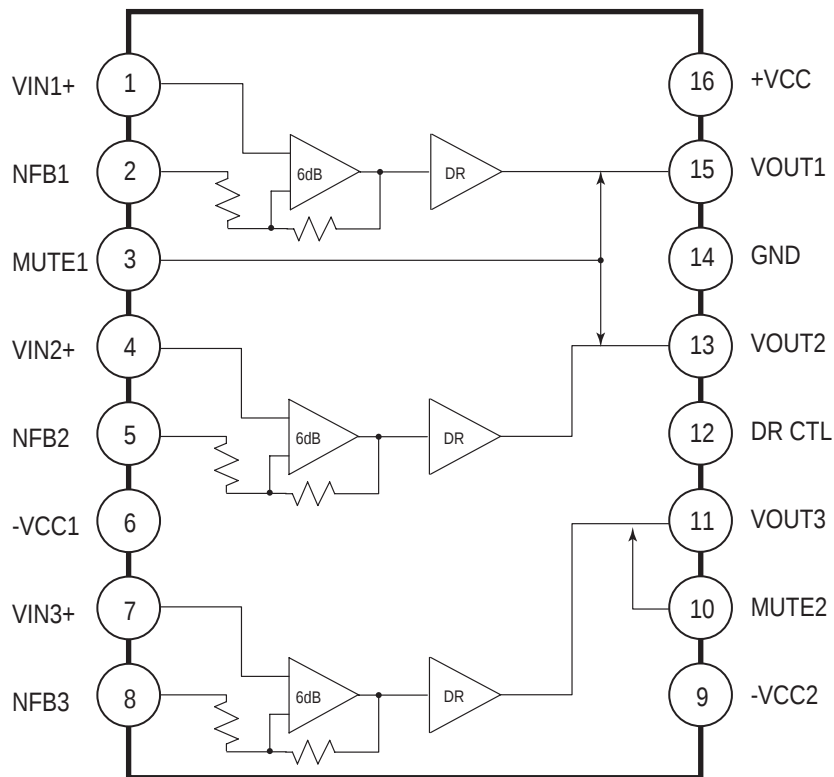


NJM2595M(Video Selector Switch)

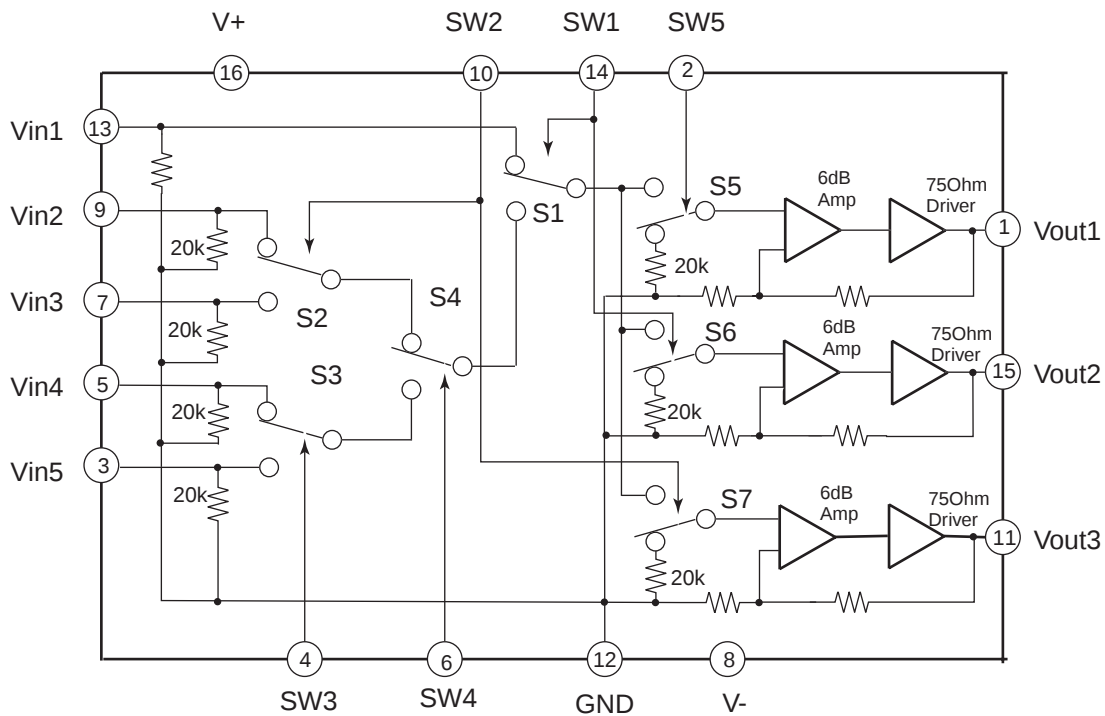

IC BLOCK DIAGRAMS AND DESCRIPTIONS


LC74763-9836(On-screen and controller)

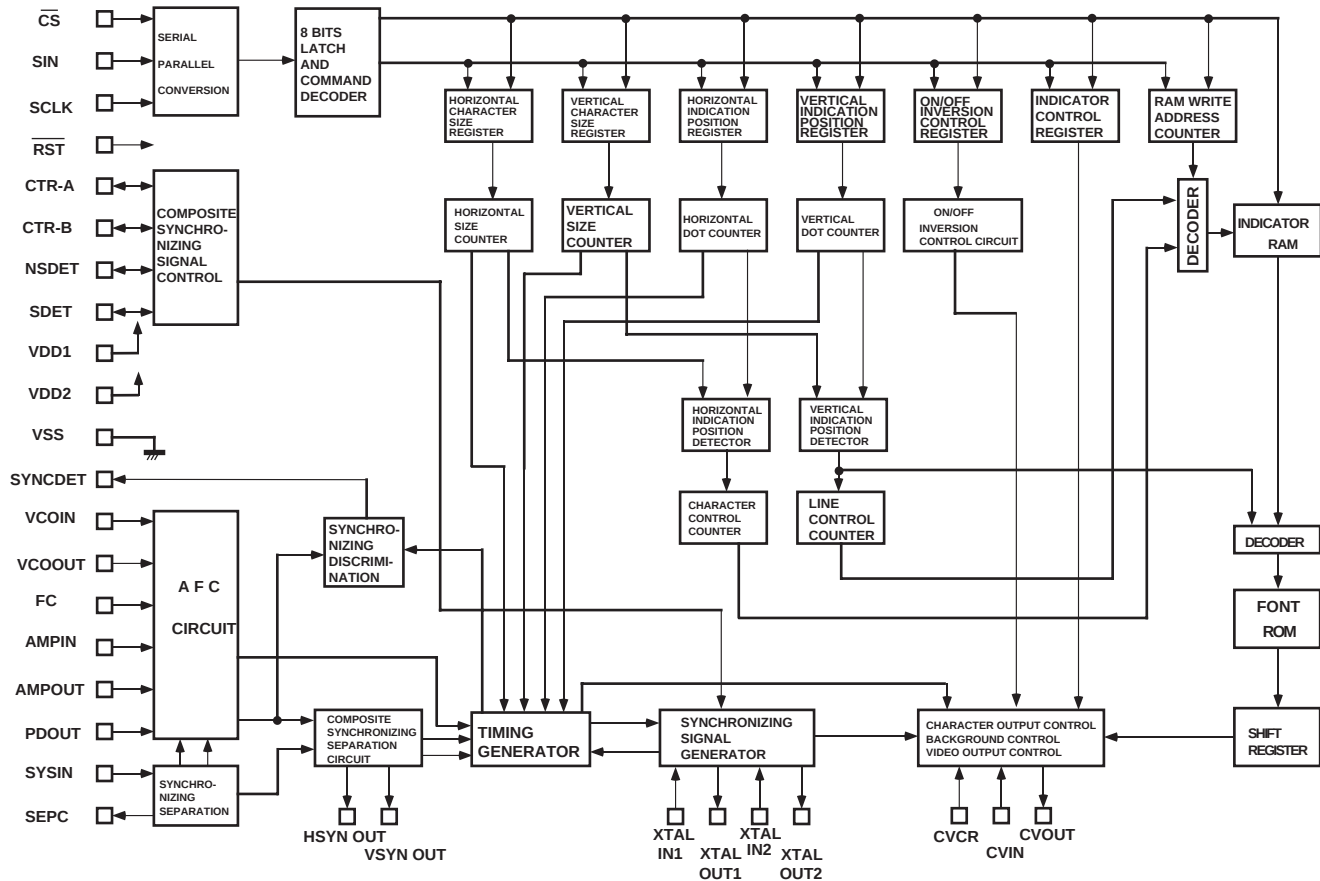

No.	Symbol	Description	No.	Symbol	Description
1	VSS	Ground terminal	16	CVOUT	Composite video output terminal
2	XTALIN1	Crystal oscillator connection terminals for.	17	VDD2	Power supply terminal for composite video signal
3	XTALOUT1	internal synchronizing signal generator	18	CVIN	Composite video signal input terminal
4	HSYNOUT	Horizontal synchronizing signal output terminal	19	CVCR	Cromatic signal input terminal
5	XTALIN2	Crystal oscillator connection terminals for	20	SYNDET	Video signal input terminal for internal synchronizing separation circuit
6	XTALOUT2	internal synchronizing signal generator	21	SEPC	Bias output pin for internal synchronizing separation circuit
7	VSYNOUT	Vertical synchronizing signal output terminal	22	VSS	Ground terminal
8	CS	Chip enable input terminal	23	PDOUT	Power supply output terminal for AFC circuit
9	SIN	Serial data input terminal	24	AMPIN	Filter connection terminals
10	SCLK	Clock input terminal for serial data	25	AMPOUT	
11	CTR-A	Video control output terminal	26	FC	Power supply output terminal
12	CTR-B	Video control output terminal	27	VCOIN	LC resonator connection terminals for VCO
13	NSDET	Selection pin for PAL or NTSC	28	VCOOUT	
14	SDET	Signal detection terminal	29	SYNDET	External synchronizing signal discrimination output terminal
15	RST	System reset input terminal	30	VDD1	Power supply terminal


IC BLOCK DIAGRAMS AND DESCRIPTIONS

M66005-0001AFP(FL tube drive IC)

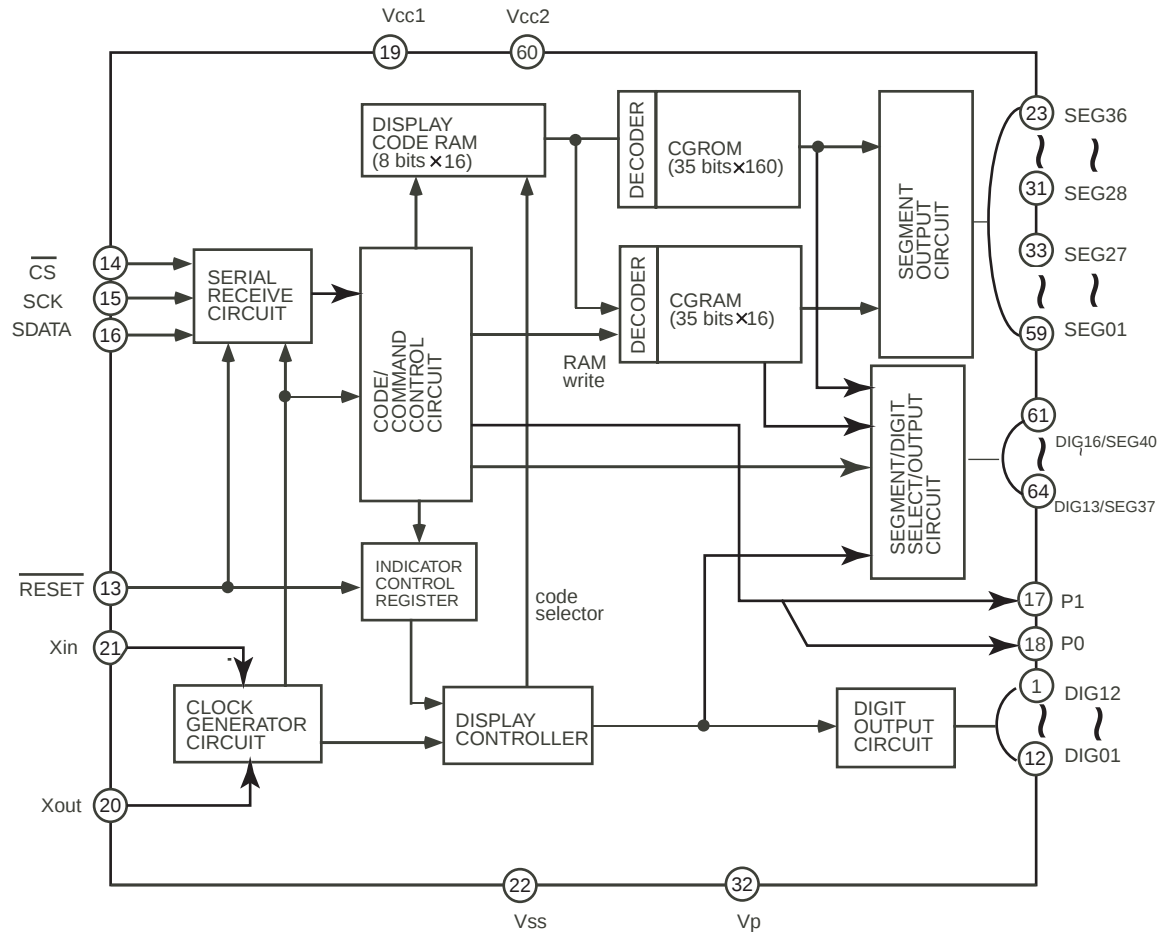

IC BLOCK DIAGRAMS AND TERMINAL DESCRIPTIONS

uPD4721GS (RS-232C Driver/ Receiver)

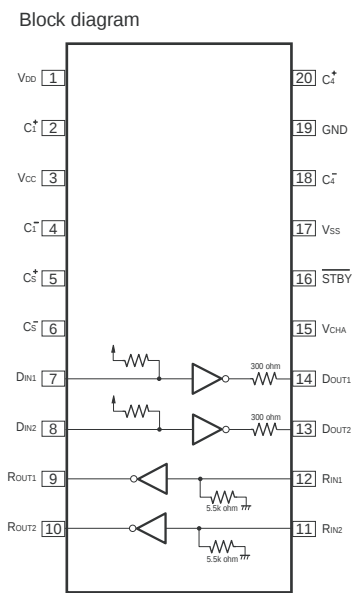

Truth table

Driver

STBY	DIN	DOUT	Remarks
L	X	Z	Standby mode (DC/DC converter is stopped)
H	L	H	Space level output
H	H	L	Mark level output

Receiver

STBY	RIN	ROUT	Remarks
L	X	H	Standby mode (DC/DC converter is stopped)
H	L	H	Space level input
H	H	L	Space level input


3 V/5 V switching

VCHA	Operating mode
L	5 V mode (double step-up)
H	3 V mode (3 times step-up)

IC BLOCK DIAGRAMS AND TERMINAL DESCRIPTIONS

MX29LV040 (4M-Bit CMOS Single Voltage 3V Only Equal Sector Flash Memory)

BLOCK DIAGRAM

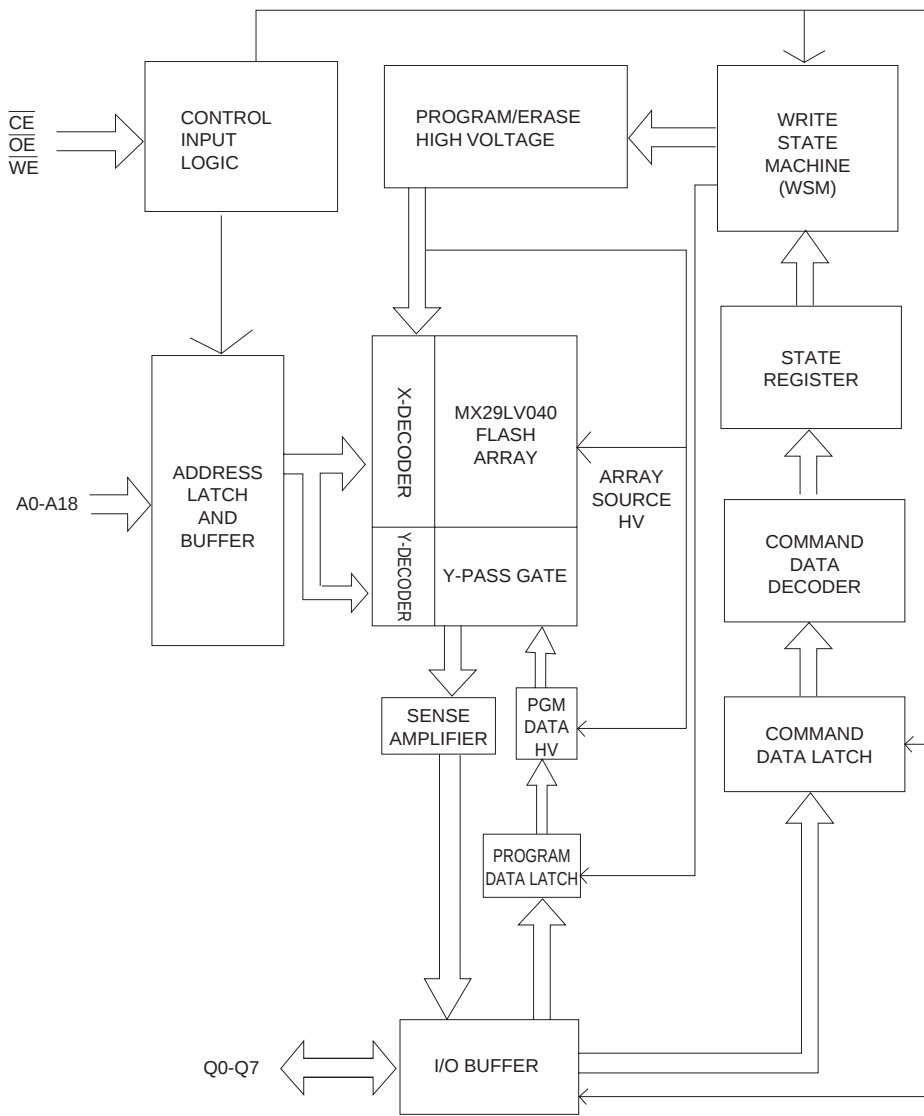

TERMINAL DESCRIPTION


PIN LAYOUT



Pin Name	Description
A0~A18	Address Input
Q0~Q7	Data Input/Output
$\overline{CE}$	Chip Enable Input
$\overline{WE}$	Write Enable Input
$\overline{OE}$	Output Enable Input
GND	Ground Pin
VCC	+3.0V single power supply

IC BLOCK DIAGRAMS AND DESCRIPTIONS


NJW1157(8-Channel Electronic Volume with Input Selector)

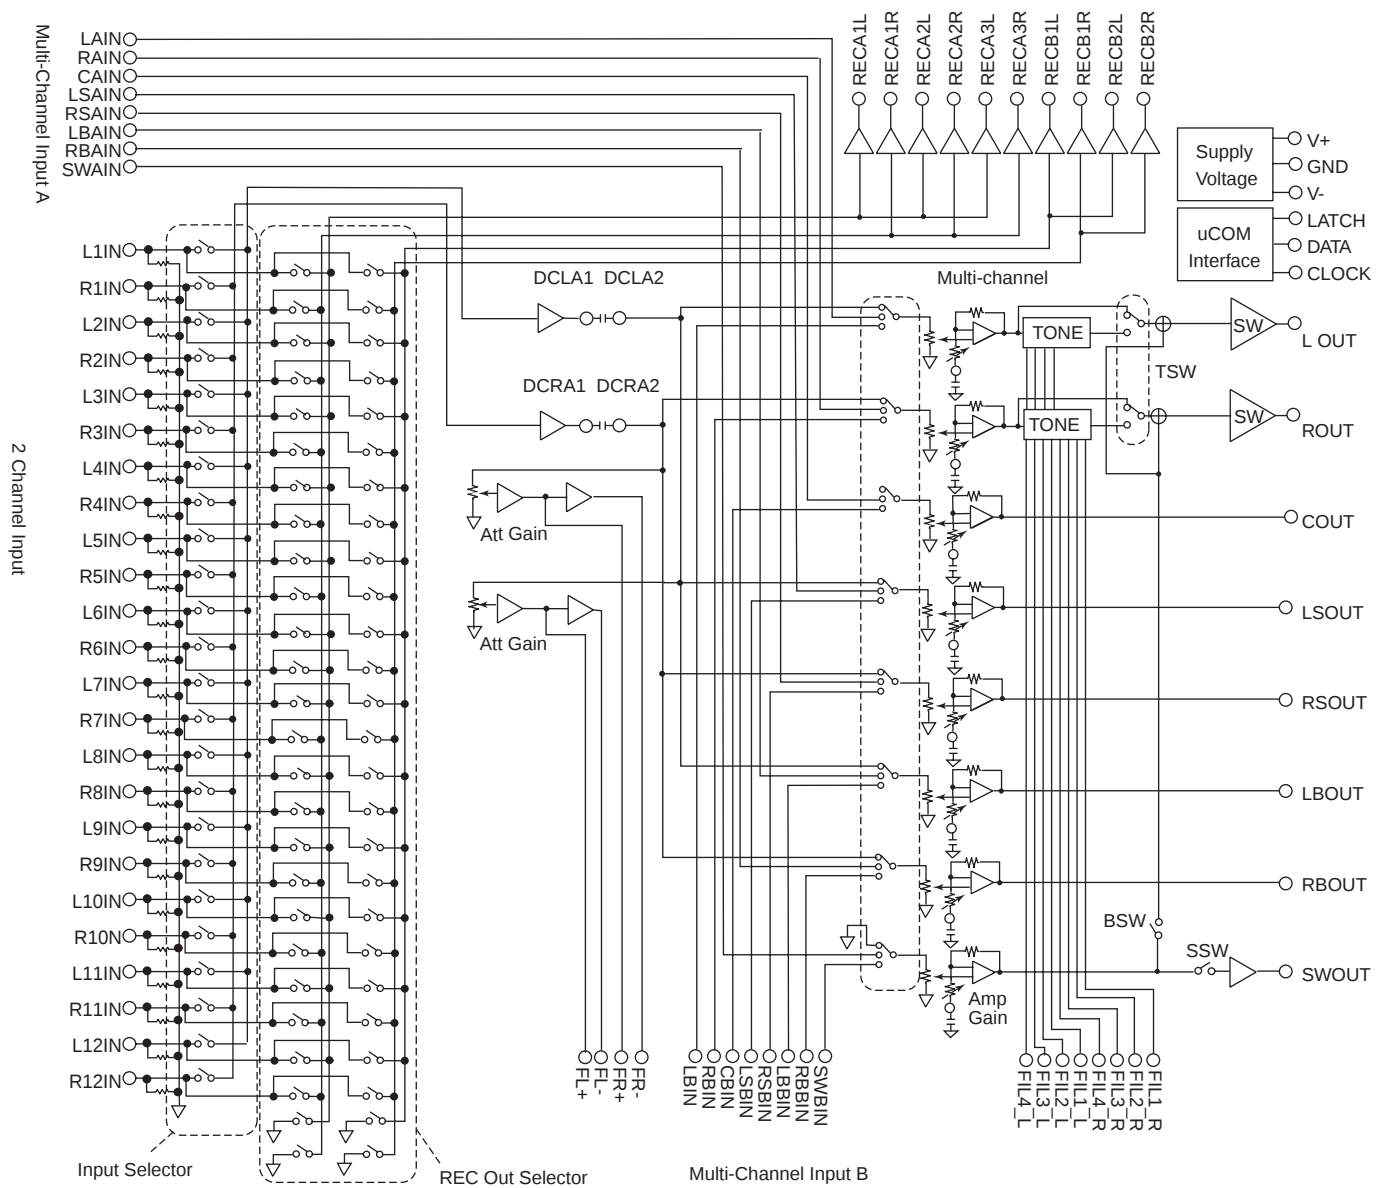

IC BLOCK DIAGRAMS AND DESCRIPTIONS

NJW1157(8-Channel Electronic Volume with Input Selector)


PIN FUNCTION

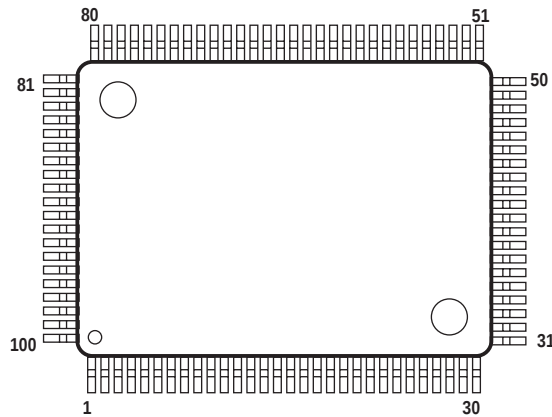

No.	SYMBOL	FUNCTION	No.	SYMBOL	FUNCTION
1	LOUT	Lch output	51	L1IN	"Input selector" Lch input 1
2	ROUT	Rch output	52	R1IN	"Input selector" Rch input 1
3	COOUT	Cch output	53	L2IN	"Input selector" Lch input 2
4	LSOUT	LSch output	54	R2IN	"Input selector" Rch input 2
5	RSOUT	RSch output	55	L3IN	"Input selector" Lch input 3
6	LBOUT	LBch output	56	R3IN	"Input selector" Rch input 3
7	RBOUT	RBch output	57	L4IN	"Input selector" Lch input 4
8	SWOUT	SWch output	58	R4IN	"Input selector" Rch input 4
9	DC_L1	Lch Bass filter DC cut capacitor output terminal	59	L5IN	"Input selector" Lch input 5
10	DC_L2	Lch Bass filter DC cut capacitor input terminal	60	R5IN	"Input selector" Rch input 5
11	FIL_BL	Lch Bass filter terminal	61	L6IN	"Input selector" Lch input 6
12	FIL_TL	Lch Treble filter terminal	62	R6IN	"Input selector" Rch input 6
13	DC_R1	Rch Bass filter DC cut capacitor output terminal	63	L7IN	"Input selector" Lch input 7
14	DC_R2	Rch Bass filter DC cut capacitor input terminal	64	R7IN	"Input selector" Rch input 7
15	FIL_BR	Rch Bass filter terminal	65	L8IN	"Input selector" Lch input 8
16	FIL_TR	Rch Treble filter terminal	66	R8IN	"Input selector" Rch input 8
17	N.C.	No connect	67	L9IN	"Input selector" Lch input 9
18	N.C.	No connect	68	R9IN	"Input selector" Rch input 9
19	V+	+ Power supply voltage input	69	L10IN	"Input selector" Lch input 10
20	V-*	- Power supply voltage input	70	R10IN	"Input selector" Rch input 10
21	REC_A1L	"Input selector" Lch REC output A1	71	L11IN	"Input selector" Lch input 11
22	REC_A1R	"Input selector" Rch REC output A1	72	R11IN	"Input selector" Rch input 11
23	REC_A2L	"Input selector" Lch REC output A2	73	L12IN	"Input selector" Lch input 12
24	REC_A2R	"Input selector" Rch REC output A2	74	R12IN	"Input selector" Rch input 12
25	REC_A3L	"Input selector" Lch REC output A3	75	NC	No connect
26	REC_A3R	"Input selector" Rch REC output A3	76	DGND	Digital Ground
27	REC_B1L	"Input selector" Lch REC output B1	77	DATA	Control data signal input
28	REC_B1R	"Input selector" Rch REC output B1	78	CLOCK	Clock signal input
29	REC_B2L	"Input selector" Lch REC output B2	79	LATCH	Latch signal input
30	REC_B2R	"Input selector" Rch REC output B2	80	LAIN	Multi-channel Lch input A
31	DCCAP_L	Switching noise rejection capacitor	81	RAIN	Multi-channel Rch input A
32	DCCAP_R	Switching noise rejection capacitor	82	CAIN	Multi-channel Cch input A
33	DCCAP_C	Switching noise rejection capacitor	83	LSAIN	Multi-channel LSch input A
34	GND	Ground	84	RSAIN	Multi-channel RSch input A
35	GND	Ground	85	LBAIN	Multi-channel LBch input A
36	DCCAP_LS	Switching noise rejection capacitor	86	RBAIN	Multi-channel RBch input A
37	DCCAP_RS	Switching noise rejection capacitor	87	SWAIN	Multi-channel SWch input A
38	DCCAP_LB	Switching noise rejection capacitor	88	LBIN	Multi-channel Lch input B
39	DCCAP_RB	Switching noise rejection capacitor	89	RBIN	Multi-channel Rch input B
40	DCCAP_SW	Switching noise rejection capacitor	90	CBIN	Multi-channel Cch input B
41	DCL_OUT	"Input selector" Lch output	91	LSBIN	Multi-channel LSch input B
42	DCL_IN	"Multi-channel selector" Lch output	92	RSBIN	Multi-channel RSch input B
43	DCR_OUT	"Input selector" Rch output	93	LBBIN	Multi-channel LBch input B
44	DCR_IN	"Multi-channel selector" Rch output	94	RBBIN	Multi-channel RBch input B
45	FL+	"Input selector gain control" Lch no-inverted output	95	SWBIN	Multi-channel SWch input B
46	FL-	"Input selector gain control" Lch inverted output	96	GND	Ground
47	FR+	"Input selector gain control" Rch no-inverted output	97	GND	Ground
48	FR-	"Input selector gain control" Rch inverted output	98	VSSOUT2	Internal Digital -Power Supply Output 2
49	VDDOUT	Internal Digital +Power Supply Output	99	VDDOUT2	Internal Digital +Power Supply Output 2
50	VSSOUT	Internal Digital -Power Supply Output	100	TCCAP	Switching noise rejection capacitor

IC BLOCK DIAGRAMS AND DESCRIPTIONS


TC9162BFG(Function Switch)

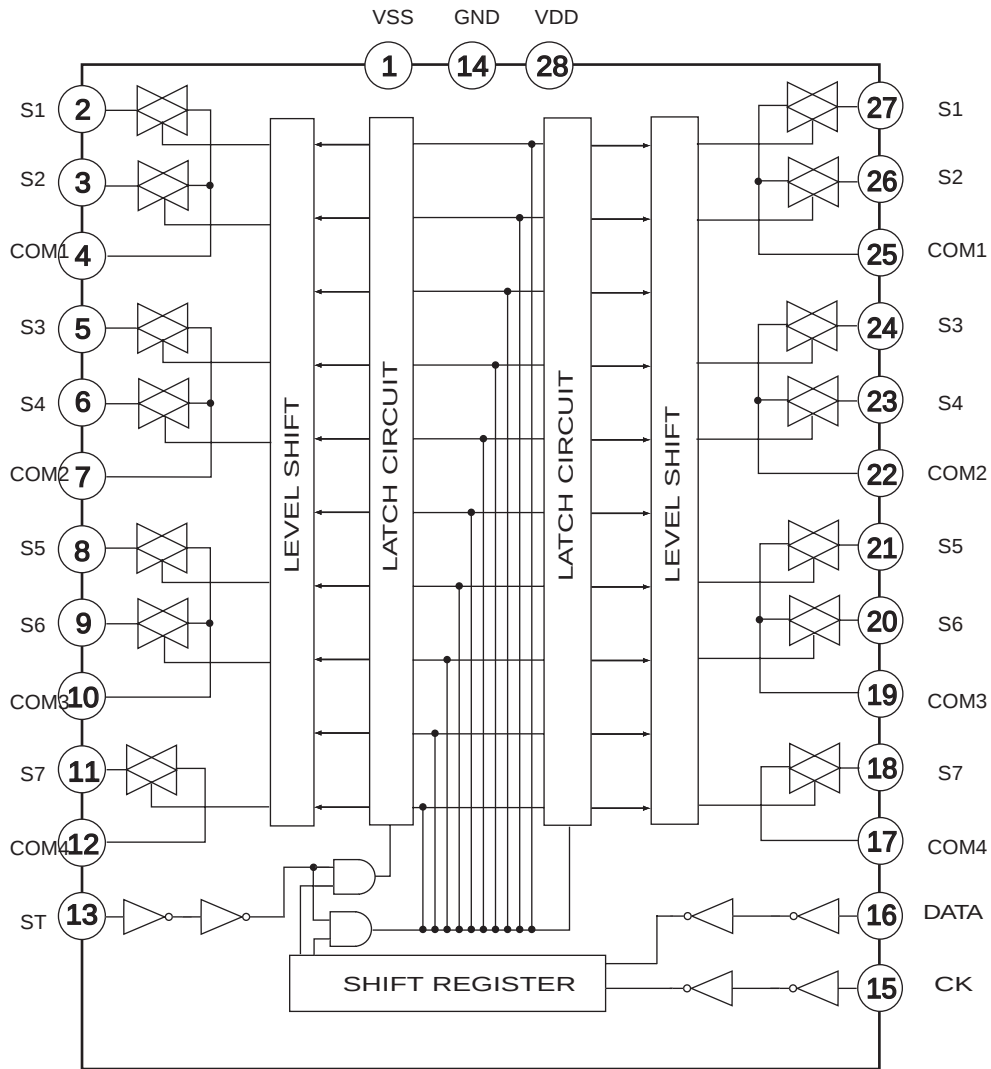

Pin No.	Symbol	Function
1	VSS	Negative power supply
14	GND	Ground
28	VDD	Positive power supply
2,3,5,6,8,9,11	S1~S7	Input/output terminals
27,26,24,23,21,20,18	S1~S7	Input/output terminals
4,7,10,12	COM1 ~COM4	Common terminals
25,22,19,17	COM1 ~COM4	Common terminals
13	ST	Strobe input terminal for data reading
15	C K	Clock input terminal for data transfer
16	D A T A	Data input terminal for switch

IC BLOCK DIAGRAMS AND DESCRIPTIONS


TC9164AF(Function switch)

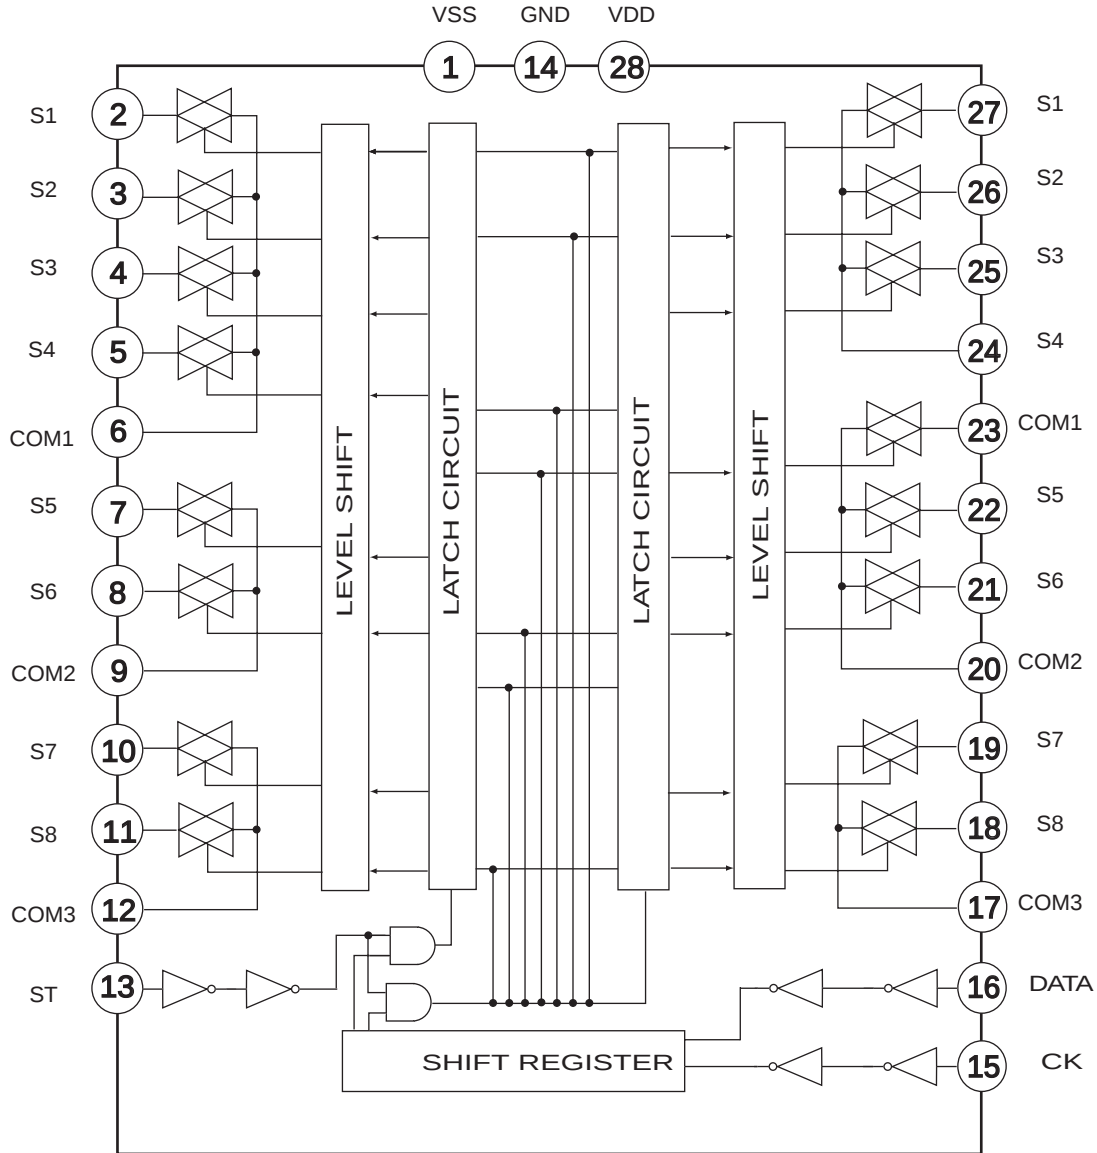


Pin No.	Symbol	Function
1	Vss	Negative power supply
14	GND	Ground
28	VDD	Positive power supply
2,3,4,6,7,8,10,11	S1~S8	Input/output terminals
27,26,25,23,22,21,19,18	S1~S8	Input/output terminals
5,9,12	COM1~COM3	Common terminals
24,20,17	COM1~COM3	Common terminals
13	ST	Strobe input terminal for data reading
15	C K	Clock input terminal for data transfer
16	DATA	Data input terminal for switch

IC BLOCK DIAGRAMS AND DESCRIPTIONS


TC74HCT7007AF(Hex buffer)

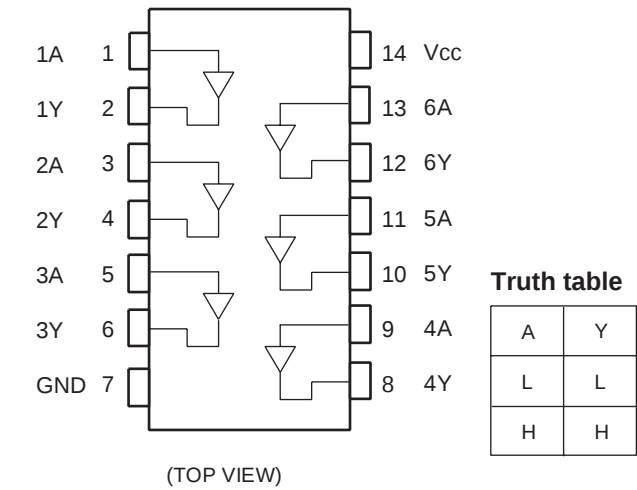

TC74VHC541FT(Octal bus buffer)

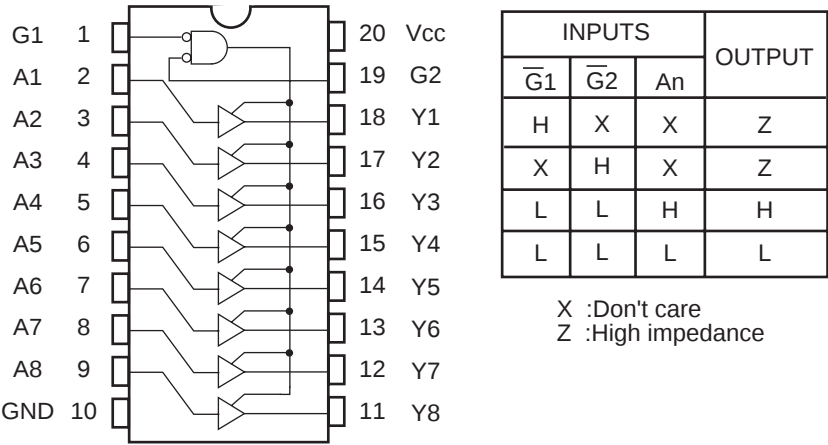


74HCU04F(Hex Inverters)

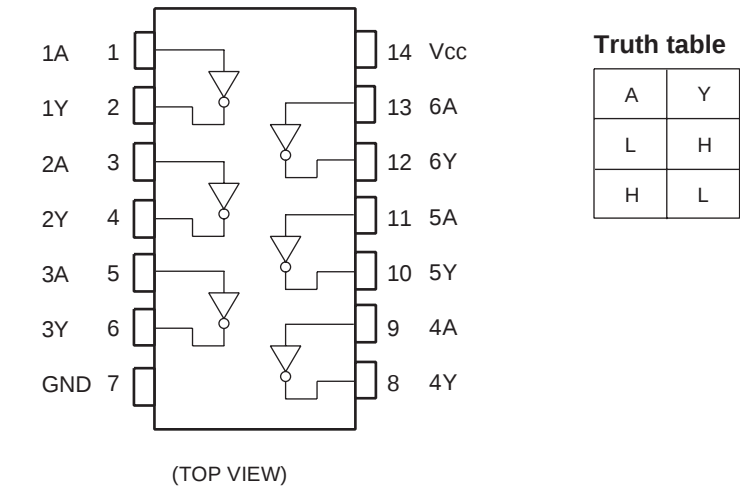

1



MICROPROCESSOR-CONNECTION DIAGRAM

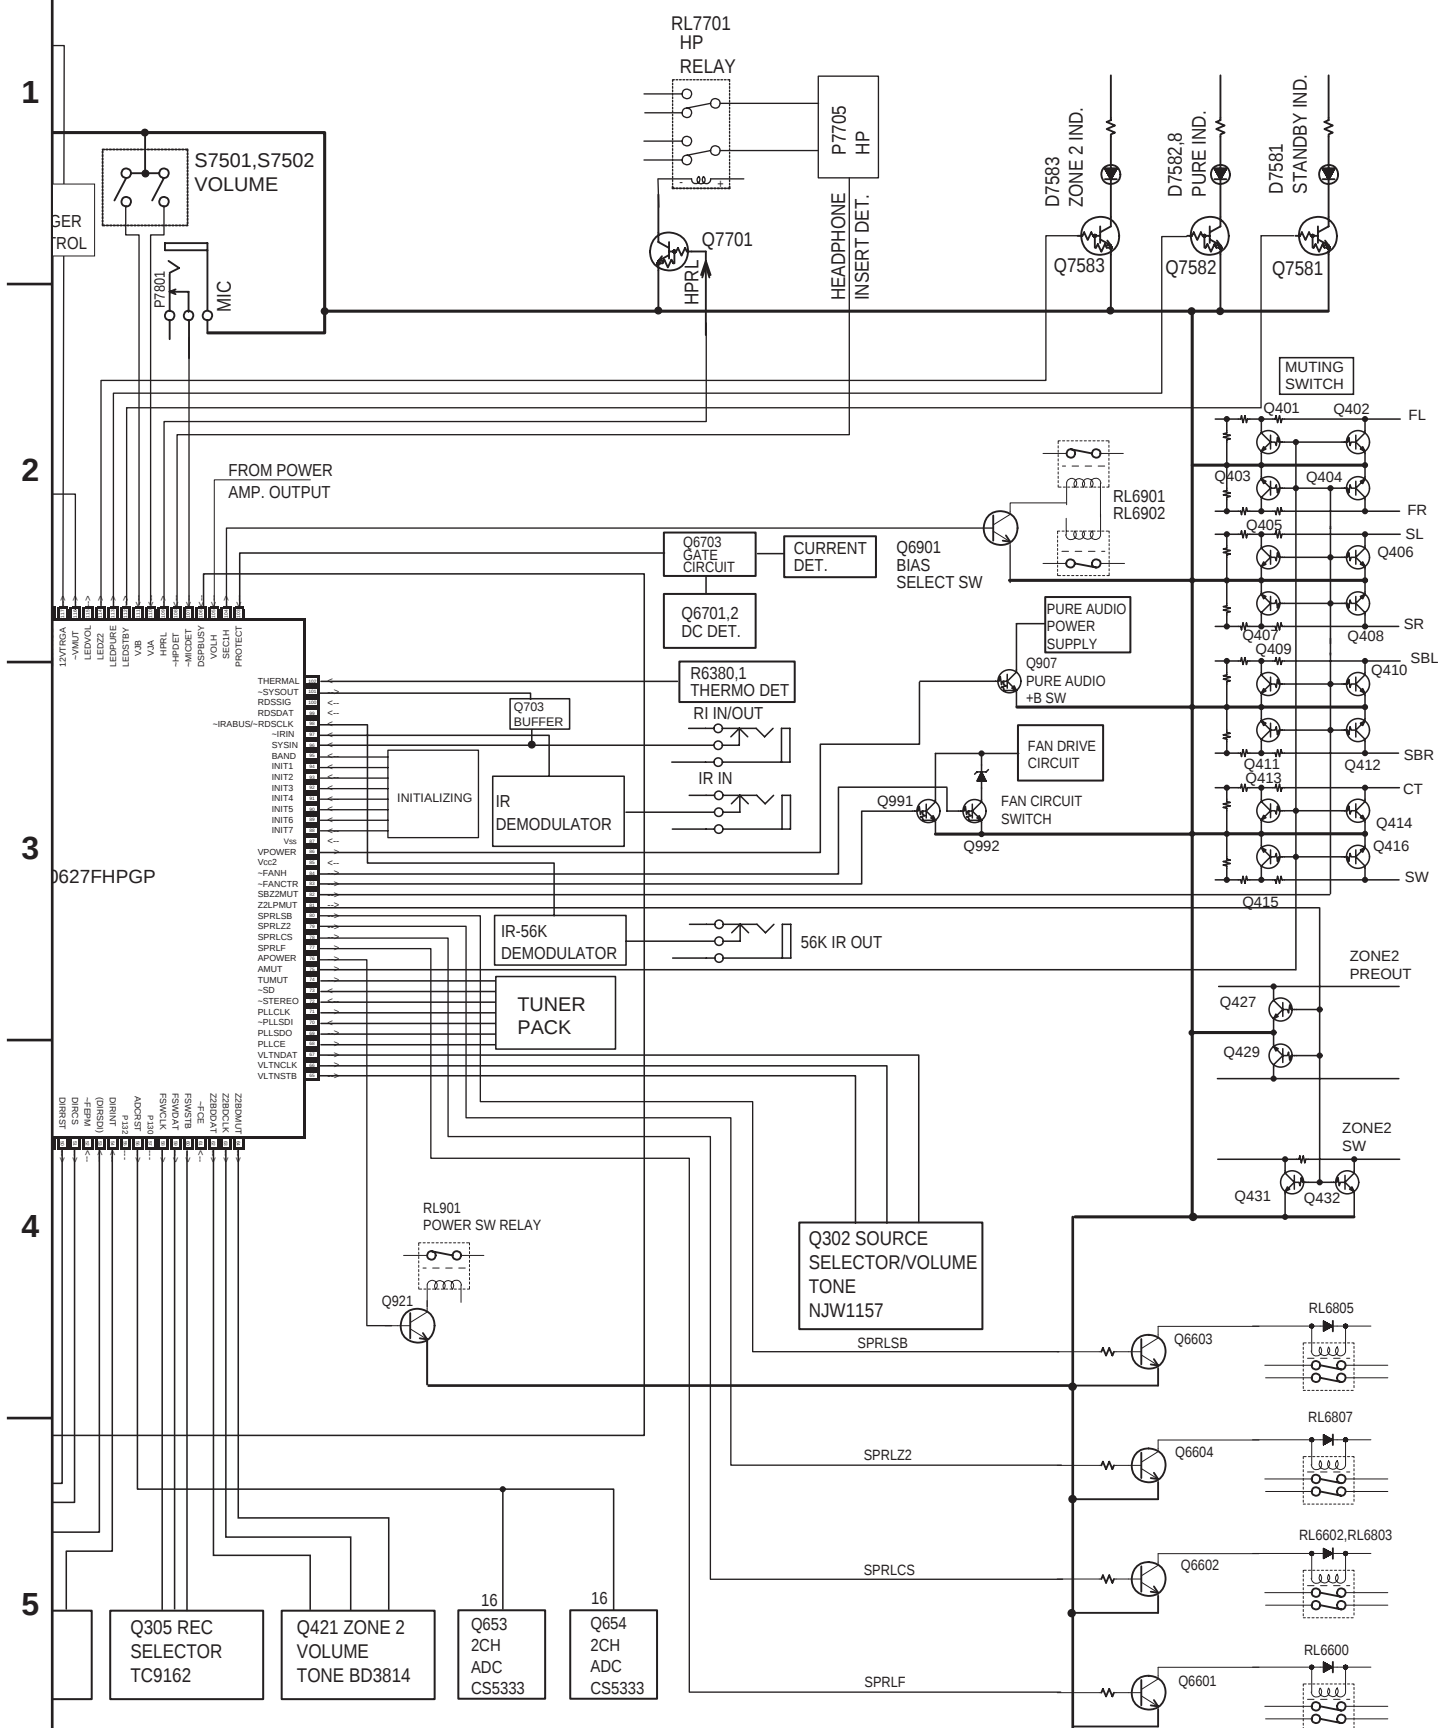


MICROPROCESSOR-TERMINAL DESCRIPTIONS

No.	Terminal	Symbol	I/O	Act.	Description
1	Vref	Vref	I		Connect to Vcc. Reference voltage input terminal for A/D converter.
2	AVcc	AVcc	I		Connect to Vcc. Power supply terminal for A/D converter.
3	P97/~ADTRG/SIN4	FLCS	O	L	Chip selector output terminal for FL tube driver
4	P96/ANEX1/SOUT4	FLSDO	O	H	Data output terminal for FL tube driver
5	P95/ANEX0/CLK4	FLCLK	O	CLK	Clock output terminal for FL tube driver
6	P94/DA1/TB4IN	~FLRST	O	L	Reset signal output terminal for FL tube driver
7	P93/DA0/TB3IN				
8	P92/TB2IN/SOUT3	OSDSO	O	H	Data output terminal for on-screen display IC
9	P91/TB1IN/SIN3	OSDCS	O	H	Chip select output terminal for on-screen display IC
10	P90/TB0IN/CLK3	OSDCLK	O	CLK	Clock output terminal for on-screen display IC
11	P141				
12	P140				
13	BYTE	BYTE	I		Connect to Vss. Change over input terminal of external data bus width.
14	CNVss	CNVss	I		Connect to Vss via a resistor. Change over terminal of processor mode.
15	P87/XCIN				
16	P86/XCOUT				
17	~RESET	~RESET	I		Reset signal input terminal for microprocessor.
18	Xout	Xout	O		Oscillation circuit output terminal of main clock.
19	Vss	Vss	I		Connect to a ground terminal.
20	Xin	Xin	I		Oscillation circuit input terminal for main clock
21	Vcc1	Vcc1	I		$2.7V < Vcc2 \leq Vcc1 < 5.5V$
22	P85/~NMI	~NMI	I	L	Connect to Vcc via a resistor.
23	P84/~INT2	REMIN	I	L	Remote control signal input terminal
24	P83/~INT1	POFF	I	L	Power failure detection input terminal
25	P82/~INT0	~VSYNC	I	L	Vertical synchronization detection input terminal
26	P81/TA4IN/~U	SYNC	I	H	Synchronization detection input terminal
27	P80/TA4OUT/U	~ISS	I	L	
28	P77/TA3IN	VDSTB	O	H	Strobe signal output terminal for video switch
29	P76/TA3OUT	VDSDO	O	H	Data output terminal for video switch
30	P75/TA2IN/~W	VDCLK	O	CLK	Clock output terminal for video switch
31	P74/TA2OUT/W				
32	P73/~CTS2/~RTS2/TA1IN/~V				
33	P72/CLK2/TA1OUT/V	VCRST	O	H	Reset signal output terminal for Y/C separation and video converter ICs.
34	P71/RXD2/SCL2/TA0IN/TB5IN	VCSCS	I/O	H	Clock signal input/output terminal for Y/C separation and video converter ICs.
35	P70/TXD2/SDA2/TA0OUT	VCSDA	I/O	H	Data input/output terminal for Y/C separation and video converter ICs.
36	P67/TXD1/SDA1	232TX/FTXD	O	H	Data transfer terminal for RS-232C and flash writer.
37	Vcc1	Vcc1	I		$2.7V < Vcc2 \leq Vcc1 < 5.5V$
38	P66/RXD1/SCL1	232RX/FRXD	I	H	Data received terminal for RS-232C and flash writer.
39	Vss	Vss	I		Connect to ground terminal.
40	P65/CLK1	FCLK	I	CLK	Clock input terminal for flash writer
41	P64/~CTS1/~RTS1/~CTS0/CLKS1	FBUSY	I	H	Busy terminal for flash writer
42	P63/TXD0/SDA0	DIGSDO	O	H	Common data output terminal for digital section
43	P62/RXD0/SCL0	DIGSDI	I	H	Data input terminal from DSP IC
44	P61/CLK0	DIGCLK	O	CLK	Common clock output terminal for digital section
45	P60/~CTS0/~RTS0	~DSPRST	O	L	Reset signal output terminal for DSDP IC
46	P137	~DSPFINT	I	H	Input terminal to inform the status change of DSP IC.
47	P136	~DSPINT	I	H	Input terminal to inform the status change of DSP IC.
48	P135	DSPFCS	O	H	Chip select output terminal of DSP IC
49	P134	DSPCS	O	H	Chip select output terminal of DSP IC
50	P57/~RDY/CLKOUT	DIRRST	O	L	Reset signal output terminal of DIR IC
51	P56/ALE	DIRCS	O	L	Chip select output terminal for DIR IC
52	P55/~HOLD	~FEPM	I	L	Connect to ground terminal via resistor. Setting terminal of flash writer.
53	P54/~HLDA	(DIRSDI)	I	H	Data input terminal of DIR IC
54	P133	DIRINT	I	H	Unlock detection terminal of DIR IC
55	P132				
56	P131	ADCRST	O	L	Reset input terminal for multi channel A/D converter
57	P130				
58	P53/BCLK	FSWCLK	O	CLK	Clock signal output terminal of function switch
59	P52/~RD	FSWDAT	O	H	Data output terminal of function switch
60	P51/~WRH/~BHE	FSWSTB	O	H	Strobe signal output terminal of function switch
61	P50/~WRL/~WR	~FCE	I	L	Connect to Vcc2 terminal via resistor. Setting terminal of flash writer.
62	P127	Z2BDDAT	O	H	Data output terminal to volume and tone control IC for zone 2.
63	P126	Z2BDCLK	O	H	Clock output terminal to volume and tone control IC for zone 2.
64	P125	Z2BDMUT	O	H	Muting signal output terminal to volume and tone control IC for zone 2.

MICROPROCESSOR-TERMINAL DESCRIPTIONS

No.	Terminal	Symbol	I/O	Act.	Description
65	P47/~CS3	VLNSTB	O	H	Strobe signal output terminal for selector, volume and tone control IC.
66	P46/~CS2	VLNCLK	O	CLK	Clock output terminal for selector, volume and tone control IC.
67	P45/~CS1	VLNDAT	O	H	Data output terminal for selector, volume and tone control IC.
68	P44/~CS0	PLLCE	O	H	Chip enable out terminal for tuner unit
69	P43/A19	PLLSDO	O	H	Data output terminal for tuner unit
70	P42/A18	~PLLSDI	I	L	Data input terminal from tuner unit
71	P41/A17	PLLCLK	O	CLK	Clock output terminal for tuner unit
72	P40/A16	~STEREO	I	L	Stereo detection input terminal from tuner unit
73	P37/A15	~SD	I	L	broadcast detection input terminal from tuner unit
74	P36/A14	TUMUT	O	H	Mute control output terminal for tuner unit
75	P35/A13	AMUT	O	H	Muting control output terminal of audio section
76	P34/A12	APOWER	O	H	Power supply relay control output terminal
77	P33/A11	SPRLF	O	H	Speaker relay control output terminal of front channel
78	P32/A10	SPRLCS	O	H	Speaker relay control output terminal of center and surround channels
79	P31/A09	SPRLZ2	O	H	Speaker relay control output terminal of zone 2
80	P124	SPRLSB	O	H	Speaker relay control output terminal of surround back channel
81	P123	Z2LPMUT	O	H	Muting control output terminal of zone 2 and pre output terminal
82	P122	SBZ2MUT	O	H	Muting control output terminal of zone 2 and surround back channels.
83	P121	~FANCTR	O	L	Lower speed or off setting output terminal of fun
84	P120	~FANH	O	L	High speed setting output terminal of fun
85	Vcc2	Vcc2	I		Connect to $2.7V < Vcc2 \leq Vcc1 < 5.5V$
86	P30/A8(/-/D7)	VPOWER	O	H	Power supply control output terminal of video section
87	Vss	Vss	I		Connect to ground terminal
88	P27/AN27/A7(/D7/D6)	INIT7	I	A/D	Initializing terminal
89	P26/AN26/A6(/D6/D5)	INIT6	I	A/D	Initializing terminal
90	P25/AN25/A5(/D5/D4)	INIT5	I	A/D	Initializing terminal
91	P24/AN24/A4(/D4/D3)	INIT4	I	A/D	Initializing terminal
92	P23/AN23/A3(/D3/D2)	INIT3	I	A/D	Initializing terminal
93	P22/AN22/A2(/D2/D1)	INIT2	I	A/D	Initializing terminal
94	P21/AN21/A1(/D1/D0)	INIT1	I	A/D	Initializing terminal
95	P20/AN20/A0(/D0/-)	BAND	I	A/D	Band area setting input terminals of tuner section
96	P17/D15/~INT5	SYSIN	I	H	RI input terminal
97	P16/D14/~INT4	~IRIN	I	L	IOR IN input terminal
98	P15/D13/~INT3	~IRABUS	I	L	IR ABUS input terminal
99	P14/D12	RDSDAT	I	L	RDS IC data input terminal
100	P13/D11	RDSSIG	I	L	RDS IC demodulator signal input terminal
101	P12/D10	~SYSOUT	O	H	RI output terminal
102	P11/D9	THERMAL	I	H	Thermal detection input terminal
103	P10/D8	PROTECT	I	H	Voltage protect input terminal
104	P07/AN07/D7	SEC1H	O	H	Power amplifier voltage select terminal
105	P06/AN06/D6	VOLH	I	A/D	Power amplifier voltage detection input terminal
106	P05/AN05/D5	DSPBUSY	I	H	DSP BUSY signal detection terminal
107	P04/AN04/D4	~MICDET	I	L	Microphone signal detection input terminal
108	P03/AN03/D3	~HPDET	I	L	Headphone detection input terminal
109	P02/AN02/D2	HPRL	O	H	Headphone relay control output terminal
110	P01/AN01/D1	VJA	I	H	Rotary encoder input terminal for volume
111	P00/AN00/D0	VJB	I	H	Rotary encoder input terminal for volume
112	P117	LEDSTBY	O	L	STANDBY/RECV indicator control output terminal
113	P116	LEDPURE	O	H	PURE AUDIO indicator control output terminal
114	P115	LEDZ2	O	H	ZONE2 indicator control; output terminal
115	P114	LEDVOL	O	H	VOLUME control output terminal
116	P113	~VMUT	O	L	Muting control output terminal of video section
117	P112	12VTRGA	O	H	12V Trigger A control output terminal
118	P111	12VTRGB	O	H	12V Trigger B control output terminal
119	P110	12VTRGC	O	H	12V Trigger C/Z2 control output terminal
120	P107/AN7/~KI3	~KI3	I	L	Key input interrupter input terminal
121	P106/AN6/~KI2	~KI2	I	L	Key input interrupter input terminal
122	P105/AN5/~KI1	~KI1	I	L	Key input interrupter input terminal
123	P104/AN4/~KI0	~KI0	I	L	Key input interrupter input terminal
124	P103/AN3	K3	I	A/D	Key input terminal
125	P102/AN2	K2	I	A/D	Key input terminal
126	P101/AN1	K1	I	A/D	Key input terminal
127	AVss	AVss	I		Connect to Vss. Power supply terminal for A/D converter.
128	P100/AN0	K0	I	A/D	Key input terminal

PACKING PROCEDURES

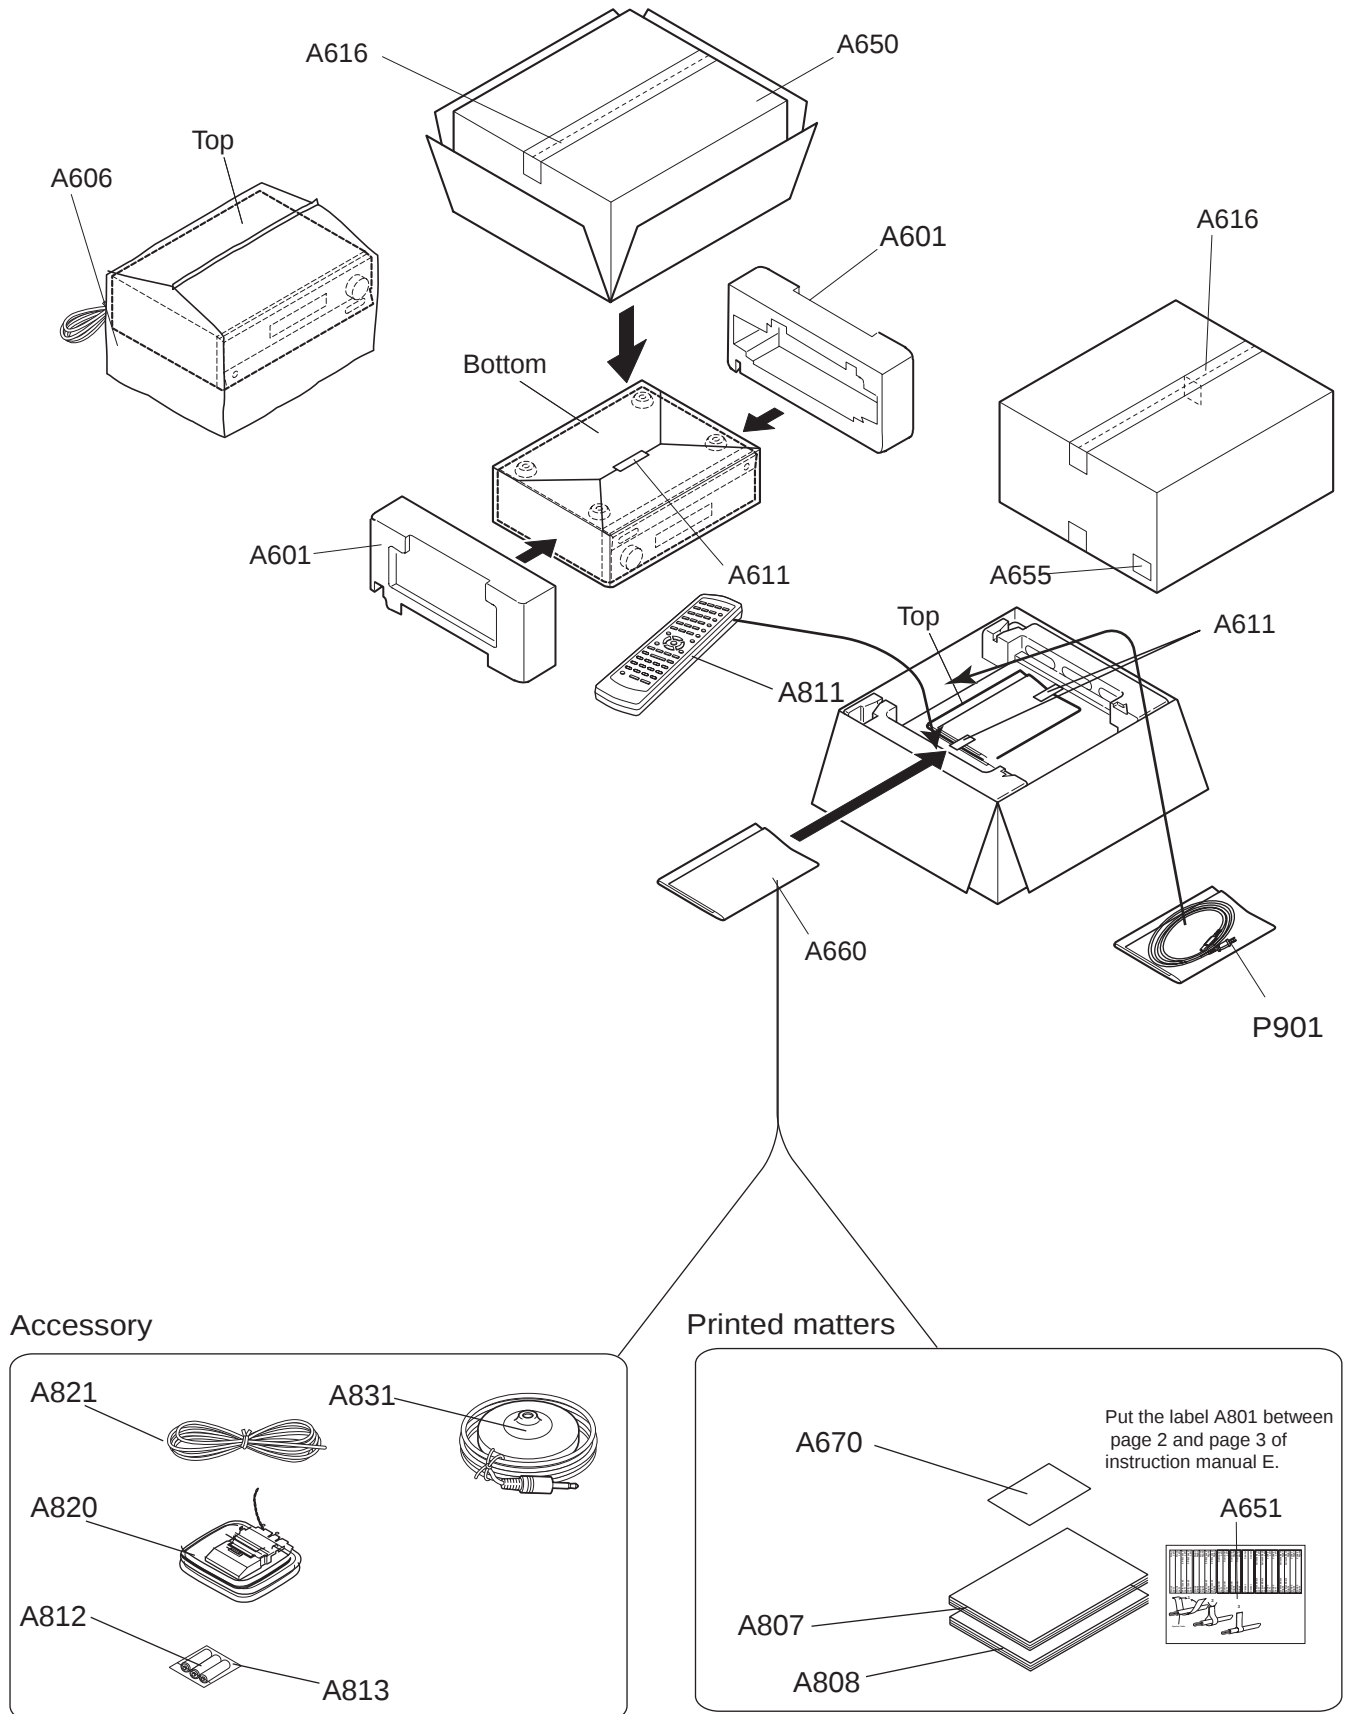

ADJUSTMENT AND CONFIRMATION PROCEDURES

1. Idling current adjustment

Before Idling adjustment, turn the trimming resistors R6040 to R6045 counter-clockwise fully.

Connect the DC voltmeter to sockets P6080 to P6086.

After turn POWER to ON, adjust the trimming resistors R6040, R6041 and R6042 so that the reading of voltmeter becomes 1.25mV. (Front and center channels)

Adjust the trimming resistors R6043, R6044, R6045 and R6046 so that the reading of voltmeter becomes 0.75 mV. (Surround and surround back channels)

After adjustment, attach the top cover.

Confirm the voltage of points above after about five minutes.

Front and center channels

When less than 5.0 mV, readjust the resistors above so that the voltage becomes 5.0 mV.

When 5.0 mV to 6.0 mV, it is not necessary to adjust.

When more than 6.0 mV, readjust the resistors above so that the voltage becomes 6.0 mV.


Surround and surround back channels

When less than 3.5 mV, readjust the resistors above so that the voltage becomes 3.5 mV.

When 3.5 mV to 4.5 mV, it is not necessary to adjust.

When more than 4.5 mV, readjust the resistors above so that the voltage becomes 4.5 mV.

Note: No load and No signal

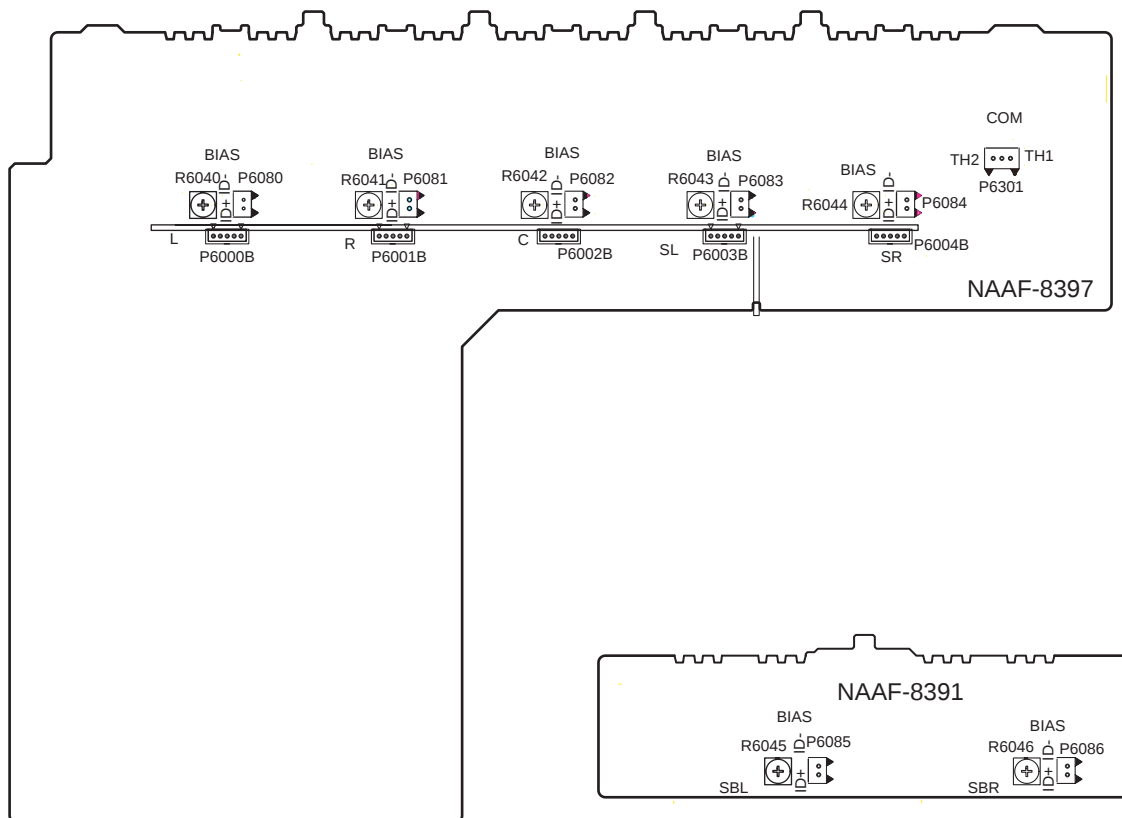


Confirmation of protection circuit

1. Confirmation of speaker relay

Confirm that the speaker relays turn ON approximately 5 seconds after the power switch is turned ON.
Confirm that the speaker relays turn OFF immediately after the power switch is turned OFF.

2. How to enter Test Mode

1. To enter a test mode (Test 1 to 4), when the unit is turned on, hold down "CD" + "DISPLAY" buttons and then press "STANDBY/ON" button.
2. Press the respective designated buttons and make sure that your target mode starts.

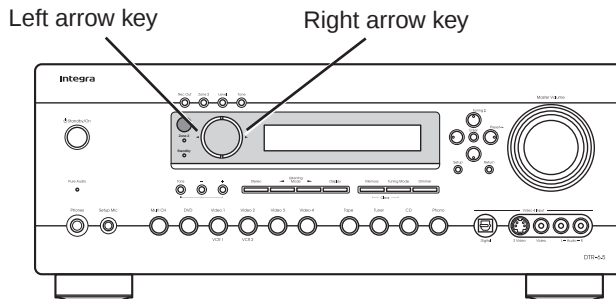

Mode	Button to be pressed	Message to be shown on the Front display
Test-1	"DVD"	"Test-1-00"
Test-2	"VIDEO 1"	"Test-2-00"
Test-3	"VIDEO 2"	"TUNER 82"
Test-4	"VIDEO 3"	"Test-4-00"

To move to the next step, press the right arrow key.

When you enter Test-3, it is necessary to press this button once to see "Test-3-00" is shown.

To move to the previous step, press the left arrow key.

To exit, press "STANDBY/ON" button.

3. Confirmation of protection circuit

Check of Voltage detection

1. Enter Test-4 mode.
2. Press and release the right arrow key repeatedly until "TEST-4-21" is shown on the Front display.
3. See your unit automatically start to check each channel.

During the check, the message on the display is changing as follows:

Channel	1st Message	2nd Message
FL+	TEST-4-21	Protect OK
FR-	TEST-4-22	Protect OK
C+	TEST-4-23	Protect OK
SL-	TEST-4-24	Protect OK
SR+	TEST-4-25	Protect OK
SBL-	TEST-4-26	Protect OK
SBR+	TEST-4-27	Protect OK

When the whole check is completed, "TEST-4-35" is shown.

4. Exit from the test mode.

Check of Current detection

1. Enter Test-4 mode.
2. Press and release the right arrow key repeatedly until "TEST-4-35" is shown on the Front display.
3. Connect a 3 ohm hollow resistor to a speaker terminal for each channel and make sure that the speaker relay would not cut off.
4. Connect a 1.5 ohm hollow resistor to a speaker terminal for each channel and make sure that the speaker relay would cut off.
5. Exit from the test mode.

4. Operation check of voltage sensor and thermal protector


1. Enter Test-4 mode.
2. Press and release the right arrow key repeatedly until "TEST-4-36" is shown on the front display.
3. Confirm that the FM STEREO indicator lights on and the relays of RL6901 and RL6902 turn OFF.
4. Press the right arrow key to set "TEST-4-37".
5. Confirm that the FM STEREO indicator lights on and the relays of RL6901 and RL6902 turn OFF.
6. Exit from the test mode.
7. Connect a metal oxide resistor 1.8 kohm/1W between "COM" and "TH2" terminals of P6302 with no input signal.
8. Set the unit to the test mode "TEST-1-00".
9. Confirm that "Thermal Protect" is displayed on the front display.

Test Mode of FL tube

To enter a test mode (Test 1 to 4), when the unit is turned on, hold down "CD" + "DISPLAY" buttons and then press "STANDBY/ON" button.

After "TEST" on the FL tube is displayed, press CD button to set the unit to the test mode of FL tube.

Test mode of FL tube
Right arrow key....UP
Left arrow key.....DOWN

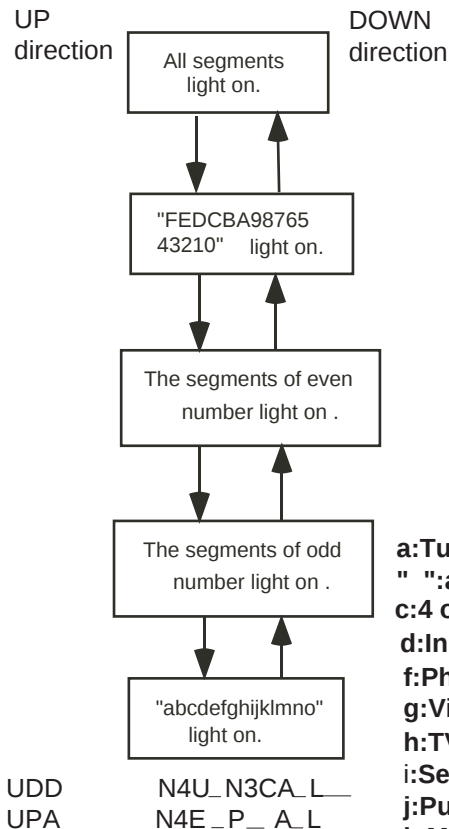

a:Tuner "U":USA and Canada "E":Europe "W":Worldwide "J":Japan
 " ":avaiaable b:Amplifier ch, "5":5 ch "7":7 ch
 c:4 ohm correspondence "4":Yes "6":No
 d:Input numbers e:Front video: "F":Yes "N":No
 f:Phono: "P":avaiaable
 g:Video converer function: "C":avaiaable
 h:TV format function : "N":NTSC "P":PAL/NTSC
 i:Setup mic. function : "Y":avaiaable
 j:Pure audio function : "P":avaiaable
 k:Multi-ch. function "M":avaiaable
 l: Zone 2 output function "L":LINE "P": LINE/Preout
 m12V trigger function:"Z":ZONE2 "A":A/B/C
 n:IR input function:"i":Yes o:RS232C function:"R":Yes
 Note: All functions " ": No avaiaable

EXPLODED VIEW-PARTS LIST

NOTE: THE COMPONENTS IDENTIFIED BY MARK !

ARE CRITICAL FOR RISK OF FIRE AND
ELECTRIC SHOCK. REPLACE ONLY WITH
PART NUMBER SPECIFIED.

CAUTION: Replacement for transistor of mark *, if necessary
must be made from the same beta group (h **FE**) as
the original type.

NOTE: <D>: 120V model only <A>: Australian model only

REF. NO.	PART NO.	DESCRIPTION
A001	27111359	Front bracket
A002	28325756	Knob, standby
A003	28198905	Facet
A006	28326235A	Knob,ring
A011	28192039	Clear plate, ring
A013	27212678	Front panel
A017	28135278	Badge
A018	801618	3TTB+8B(CU)SR,Self-tapping screw
A026	801618	3TTB+8B(CU)SR,Self-tapping screw
A027	27268128	Knob,guide
A029	838430088	3TTB+8B(BC),Self-tapping screw
A031	801618	3TTB+8B(CU)SR,Self-tapping screw
A033	27123332	Rear panel <D>
	27123333	Rear panel <A>
A036	27255004	CS-1U,Clip
A037	838430088	3TTB+8B(BC),Self-tapping screw
A038	27130973	Bracket PT-2
A039	838930088	3TTB+8B(UN),Self-tapping screw
A040	87643010	W3*10F(BC),Washer
A041	27100451A	Chassis
A042	29110083	Tape, cloth
A043	28141620	Cushion
A044	838440089	4TTB+8C(BC),Self-tapping screw
A045	29362772	Label, cover
A046	27190369	KGLS-22S,Holder
A047	29363195	Label, hook-up <D>
A050	28326231	Knob,volume
A051	27191112	KGPS-6RF,Holder
A056	27190926	KGPS-18RF,Holder
A057	27190965	Holder
A061	880016	P3035B,Plastic rivet
A062	838450108	5TTB+10B(BC),Self-tapping screw
A063	27130967A	Bracket,fan
A064	27150494	Shield plate,fan
A070	830440089	4TTC+8C(BC),Self-tapping screw
A081	27130970	Bracket PT
A083	27270147	8X3X0.188,Spacer
A084	27270439	Spacer
A085	838430068	3TTB+6B(BC),Self-tapping screw
A091	27160557B	Heat sink
A101	801606	3SMH10W.SW+15B(CU),Special screw
A151	27130745	Bracket
A176	28192038A	Clear plate
A177	28133412	Back plate
A186	838430088	3TTB+8B(BC),Self-tapping screw
A187	28184903	Top cover
A196	27175405	Leg
A201	28141599	Cushion
A206	801618	3TTB+8B(CU)SR,Self-tapping screw
A216	29363409-1	Label PT
E800	260208	BSK-1,Binder
F6901,F6902	252303 or	! 15A-TUL-250V or
	252197	! 15A-UL/T-314,Fuse
F901	252196 or	! 12A-UL/T-314 or
	252301	! 12A-TUL-250V,Fuse <D>

REF. NO.	PART NO.	DESCRIPTION
F902	252079 or	! 6.3A-SE-EAK or
	252245 or	! 6.3A-SE-TL250V or
	252279	! 6.3A-SE-TL250V,Fuse <A>
F903	252164 or	! 5A-UL/T-237 or
	252258	! 5A-T/UL-ST2,Fuse <D>
	252075 or	! 2.5A-SE-EAK or
	252241 or	! 2.5A-SE-TL250V or
	252275	! 2.5A-SE-TL250V,Fuse <A>
F9501	252160 or	! 2.5A-UL/T-237 or
	252254	! 2.5A-T/UL-ST2,Fuse <D>
	252075 or	! 2.5A-SE-EAK or
	252241 or	! 2.5A-SE-TL250V or
	252275	! 2.5A-SE-TL250V,Fuse <A>
P6931	2045111012	NCFC5-111012,Flexible flat cable
P7501	2045235012	NCFC5-235012,Flexible flat cable
P7502	2047112012	NCFC7-112012,Flexible flat cable
P761	2047152512	NCFC7-152512,Flexible flat cable
P901	253297KAW or	! AS-UC-2 or
	253352TES	! AS-UC-2,Power supply cord <D>
	253311VOL	! AS-SAA,Power supply cord <A>
P961A	24502310	D09T-24PG10(EX),Fan
Q6050,Q6051	2202823 or	* 2SC5200-O or
Q6052	2202822	* 2SC5200-R,Transistor
Q6050A	223025	AC262,Isolated sheet
Q6053,Q6054	2203683 or	* MN150S-O or
Q6055,Q6056	2203684 or	* MN150S-Y or
	2203686	* MN150S-P,Transistor
Q6053A	223024	AC238,Isolated sheet
Q6060,Q6061	2202813 or	* 2SA1943-O or
Q6062	2202812	* 2SA1943-R,Transistor
Q6063,Q6064	2203693 or	* MP150S-O or
Q6065,Q6066	2203694 or	* MP150S-Y or
	2203696	* MP150S-P,Transistor
T901	2301765	! NPT-1501D,Power transformer <D>
	2301766	! NPT-1501P,Power transformer <A>
U1	1B041565-1F	NAAR-8365-1F,DSP and main microprocessor PC board ass'y <D>
	1B041565-1G	NAAR-8365-1G,DSP and main microprocessor PC board ass'y <A>
U2	1B041566-1F	NADG-8366-1F,Main connector PC board ass'y <D>
	1B041566-1G	NADG-8366-1G,Main connector PC board ass'y <A>
U3	1B041567-1F	NAETC-8367-1F,Control terminal PC board ass'y <D>
	1B041567-1G	NAETC-8367-1G,Control terminal PC board ass'y <A>
U4	1B041568-1F	NADG-8368-1F,Digital input/output terminal PC board ass'y <D>
	1B041568-1G	NADG-8368-1G,Digital input/output terminal PC board ass'y <A>
U5	1B041582-1J	NAPS-8382-1J,Primary circuit PC board ass'y <D>
	1B041582-1K	NAPS-8382-1K,Primary circuit PC board ass'y <A>
U6	1B041583-1J	NAAF-8383-1J,Driver circuit PC board ass'y <D>
	1B041583-1K	NAAF-8383-1K,Driver circuit PC board ass'y <A>
U7	1B041584-1J	NAETC-8384-1J,Transformer terminal PC board ass'y <D>
	1B041584-1K	NAETC-8384-1K,Transformer terminal PC board ass'y <A>
U11	1B041588-1J	NAETC-8388-1J,AC inlet terminal PC board ass'y <D>
	1B041588-1K	NAETC-8388-1K,AC inlet terminal PC board ass'y <A>
U12	1B041589-1J	NAPS-8389-1J,Secondary circuit PC board ass'y <D>
	1B041589-1K	NAPS-8389-1K,Secondary circuit PC board ass'y <A>
U13	1B041590-1J	NAETC-8390-1J,Fuse terminal PC board ass'y <D>
	1B041590-1K	NAETC-8390-1K,Fuse terminal PC board ass'y <A>
U14	1B041591-1J	NAAF-8391-1J,Power amplifier PC board ass'y <D>
	1B041591-1K	NAAF-8391-1K,Power amplifier PC board ass'y <A>
U16	1B041597-1D	NAAF-8397-1D,Power amplifier PC board ass'y <D>
	1B041597-1E	NAAF-8397-1E,Power amplifier PC board ass'y <A>
U17	1B041598-1D	NAETC-8398-1D,Secondary circuit PC board ass'y <D>
	1B041598-1E	NAETC-8398-1E,Secondary circuit PC board ass'y <A>
U18	1B041599-1D	NAETC-8399-1D,Speaker terminal PC board ass'y <D>
	1B041599-1E	NAETC-8399-1E,Speaker terminal PC board ass'y <A>
U19	1B041500-1D	NAETC-8400-1D,Speaker terminal F/C PC board ass'y <D>
	1B041500-1E	NAETC-8400-1E,Speaker terminal F/C PC board ass'y <A>

REF. NO.	PART NO.	DESCRIPTION
U21	1B041502-1D	NAETC-8402-1D,Thermal detector PC board ass'y <D>
	1B041502-1E	NAETC-8402-1E,Thermal detector PC board ass'y <A>
U22	1B041503-1D	NAETC-8403-1D,Holder PC board ass'y <D>
	1B041503-1E	NAETC-8403-1E,Holder PC board ass'y <A>
U23	1B041504-1D	NAETC-8404-1D,PC board for cord clamp <D>
	1B041504-1E	NAETC-8404-1E,PC board for cord clamp <A>
U26	1B041506-1D	NADIS-8406-1D,Display circuit PC board ass'y <D>
	1B041506-1E	NADIS-8406-1E,Display circuit PC board ass'y <A>
U27	1B041564-1D	NAVD-8464-1D,Video terminal PC board ass'y <D>
	1B041564-1E	NAVD-8464-1E,Video terminal PC board ass'y <A>
U29	1B041509-1D	NAVD-8409-1D,Video 4 terminal PC board ass'y <D>
	1B041509-1E	NAVD-8409-1E,Video 4 terminal PC board ass'y <A>
U30	1B041510-1D	NADG-8410-1D,Front opt.. terminal PC board ass'y <D>
	1B041510-1E	NADG-8410-1E,Front opt.. terminal PC board ass'y <A>
U31	1B041511-1D	NASW-8411-1D,Volume PC board ass'y <D>
	1B041511-1E	NASW-8411-1E,Volume PC board ass'y <A>
U32	1B041512-1D	NAETC-8412-1D,Headphone terminal PC board ass'y <D>
	1B041512-1E	NAETC-8412-1E,Headphone terminal PC board ass'y <A>
U33	1B041513-1D	NAETC-8413-1D,Holder PC board <D>
	1B041513-1E	NAETC-8413-1E,Holder PC board <A>
U36	240138A,	ENG06501QR,
	240146 or	FAE385-A02F or
	240134A	TFCE1U114B,Tuner unit <D>
	240147,	FAE485-E02F,
	240139A or	ENG07501QR or
	240135	TFCE1E512A,Tuner unit <A>

PACKING VIEW-PARTS LIST

NOTE: <D>: 120V model only <A>:Australian model only

REF. NO.	PART NO.	DESCRIPTION
A601	29092213A	Pad
A606	29100153	1020x770,Polybag
A611	29110149	Cellophane tape
A616	29110148	Tape PP
A650	29054246	Carton box
A651	29363059A	Label,speaker cable
A655	29363888	Label UPC <D>
	29363885	Label EAN <A>
A660	29100097-1A	350*250,Polybag
A670	29365089A	Warranty card <D>
A807	29343827A	Instruction manual
A808	29355497	Instruction sheet,digest <D>
A811	24140585	RC-585M,Remote controller
A812	3010054	R6/AA(UM-3),Battery
A813	29100217	t0.1*70*100,Polybag for battery
A820	232140	NMA-3057,AM loop antenna
A821	292191	FM antenna
A831	245038	MIC-4000,Microphone
P901	253297KAW or	AS-UC-2 or
	253352TES	! AS-UC-2,Power supply cord <D>
	253311VOL	! AS-SAA,Power supply cord <A>

PRINTED CIRCUIT BOARD-PARTS LIST

NOTE: THE COMPONENTS IDENTIFIED BY MARK !
ARE CRITICAL FOR RISK OF FIRE AND
ELECTRIC SHOCK. REPLACE ONLY WITH
PART NUMBER SPECIFIED.

CAUTION: Replacement for transistor of mark *, if necessary
must be made from the same beta group (h_{FE}) as
the original type.

NOTE: <D>:120V model only <A>:Australian model only

DSP and preamplifier PC board (NAAR-8365-1F/1G)

CIRCUIT NO.	PART NO.	DESCRIPTION
ICs		
Q201	22242165R3	CS494003CQZ(CSSS)
Q202	22242123R3 or 22242152R2 or 22242123R2	IC42S16100 or K4S161622H-UC60 or IC42S16100
Q203	W0023R301386M100	MX29LV040TC-90
Q301,Q306,Q307	22241383R2 or 22240581R2	NJM4565M-D or NJM4565M
Q302	22242193R3	NJW1157B (After change)
Q303	222780073R2	78L07(SMT)
Q304	222790073R2	79L07(SMT)
Q305	22242099R2	TC9162BFG
Q421	22242157R2	BD3814FV
Q501,Q502,Q503	22241383R2 or	NJM4565M-D or
Q504,Q505,Q506	22240581R2	NJM4565M
Q507,Q508,Q509	22241383R2 or	NJM4565M-D or
Q510,Q511,Q512	22240581R2	NJM4565M
Q513,Q514	22241383R2 or	NJM4565M-D or
Q515,Q516	22240581R2	NJM4565M
Q651,Q652	22241383R2 or 22240581R2	NJM4565M-D or NJM4565M
Q653,Q654	22241943R2	CS5333-KZ
Q681	22274541ER2TO or 22274541IR2TI	TC74VHC541FT or SN74AHC541PWR
Q682	222740077R2TO	TC74HCT7007AF
Q861	22242168R3 or 22242168R2	CS42518-CQZR-C or CS42518-CQZR-C
Q862	22240935R2	TC7WU04FU
Q901	222780124TOS or 222780125	TA7812S or 78M12HF
Q902	222790124TOS or 222790125	TA79012S or 79M12HF
Q903	222780053R2JR	NJM78L05UA
Q910	222790054TOS or 222790055	TA79005S or 79M05FA
Q911	222780053R2JR	NJM78L05UA
Q921	22278033DR2JR or 22278033DR2NE	NJM2391DL1-33 or MPC2933T
Q922	22278025DR2JR or 22278025DR2NE	NJM2391DL1-25 or MPC2925T
Q991,Q992	2216190R2 or 2214470R2	KRC102S or RN1402
Q993	2202706 or 2202705	2SD2394-F or 2SD2394-E
Transistors		
Q401,Q402,Q403	2215410R2	RN1441
Q404,Q405,Q406	2215410R2	RN1441
Q407,Q408,Q409	2215410R2	RN1441
Q410,Q411	2215410R2	RN1441
Q412,Q413	2215410R2	RN1441
Q414,Q415,Q416	2215410R2	RN1441
Q427,Q429	2215410R2	RN1441

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q431,Q432	2215410R2	RN1441
Q904	2202314	2SA1726-Y
Q905	2212855 or	2SB1068-U or
	2212853	2SB1068-K
Q906	2215024	2SD1468S-R
Q907	2216190R2 or	KRC102S or
	2214470R2	RN1402
Q908	2216220R2 or	KRA102S or
	2214530R2	RN2402
Q909	2202314	2SA1726-Y
	Diodes	
D651,D652,D653	223234R2 or	1SS352 or
D654,D655,D656	223269R2	1SS355
D657,D658	223234R2 or	1SS352 or
	223269R2	1SS355
D861,D862,D863	223234R2 or	1SS352 or
D864,D865,D866	223269R2	1SS355
D867,D868,D901	223234R2 or	1SS352 or
D902	223269R2	1SS355
D991	224551300R2 or	UDZS13B or
	224661304R2	HZU13B
	Coils	
L201,L202	231237K022R2	NCH-1471
L203,L204,L205	233533M022R2 or	NCH-1587-022M or
L651,L652	231237K022R2	NCH-1471
L211	230959R1	BK1608LL241-T
L861,L862	233533M022R2 or	NCH-1587-022M or
L863,L864	231237K022R2	NCH-1471
L865	230958R1	BK1608LM182-T
L866	233533M022R2 or	NCH-1587-022M or
	231237K022R2	NCH-1471
L867,L868	230958R1	BK1608LM182-T
L921	233533K022R2 or	NCH-1587-022K or
	231237K022R2	NCH-1471
	Oscillator	
X801	3010324R2	CSTCV12.2MTJ0C4
	Capacitors	
C201	395640227R2	CS772SB1C-2.2M,Chip tantal
C202	347341224R2	CC732CH1H-122J,Chip ceramic
C203	342106804R1	CC725CH1H-680J1,Chip ceramic
C204,C205,C206	332161040R1	CK725F1E-104Z1,Chip ceramic
C207,C208,C209	332161040R1	CK725F1E-104Z1,Chip ceramic
C210,C211,C212	332161040R1	CK725F1E-104Z1,Chip ceramic
C213,C214,C215	332161040R1	CK725F1E-104Z1,Chip ceramic
C216	342101014R1	CC725CH1H-101J1,Chip ceramic
C217,C218,C281	394644707 or	CE04W16V-47M(VR) or
	394744707	CE04W16V47M(SC),Elect.
C219	394680107 or	CE04W50V-1M(VR) or
	394780107	CE04W50V1.0M(SC),Elect.
C282,C283,C284	332161040R1	CK725F1E-104Z1,Chip ceramic
C285,C286,C287	332161040R1	CK725F1E-104Z1,Chip ceramic
C291	394644707 or	CE04W16V-47M(VR) or
	394744707	CE04W16V47M(SC),Elect.
C292	332161040R1	CK725F1E-104Z1,Chip ceramic
C301	332161040R1	CK725F1E-104Z1,Chip ceramic
C303,C304,C305	332161040R1	CK725F1E-104Z1,Chip ceramic
C307,C308	342102214R1	CC725CH1H-221J1,Chip ceramic
C309,C310,C313	342102214R1	CC725CH1H-221J1,Chip ceramic
C314,C315,C316	342102214R1	CC725CH1H-221J1,Chip ceramic
C319,C320,C323	342102214R1	CC725CH1H-221J1,Chip ceramic
C324,C325,C326	342102214R1	CC725CH1H-221J1,Chip ceramic
C327,C328	342102214R1	CC725CH1H-221J1,Chip ceramic

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C329,C330	342102214R1	CC725CH1H-221J1,Chip ceramic
C333,C334	393384707	CE04W50V-47M(VX),Elect.
C335,C336	393322217	CE04W6.3V-220M(VX),Elect.
C337,C338	373021524R2	ECHU50V-152J,Chip film
C339,C340	373041234R2	ECHU16V-123J,Chip film
C341,C342	373043924R2	ECHU16V-392J,Chip film
C343,C344	394644707 or 394744707	CE04W16V-47M(VR) or CE04W16V47M(SC),Elect.
C345,C346	393341007	CE04W16V-10M(VX),Elect.
C351,C352	332161040R1	CK725F1E-104Z1,Chip ceramic
C353,C354	394642217 or 394742217	CE04W16V-220M(VR) or CE04W16V220M(SC),Elect.
C355,C358	393380477	CE04W50V-4.7M(VX),Elect.
C356,C359	375522244	MMT50V-224J,Plastic
C357,C360	373044724R2	ECHU16V-472J,Chip film
C364,C365	332161040R1	CK725F1E-104Z1,Chip ceramic
C366,C367,C368	393344707	CE04W16V-47M(VX),Elect.
C369,C370,C371	393344707	CE04W16V-47M(VX),Elect.
C372,C373	393344707	CE04W16V-47M(VX),Elect.
C374,C375	393341007	CE04W16V-10M(VX),Elect.
C376,C377	394641007 or	CE04W16V-10M(VR) or
C378,C379	394741007	CE04W16V10M(SC),Elect.
C380	394680107 or 394780107	CE04W50V-1M(VR) or CE04W16V10M(SC),Elect.
C381,C382	342103304R1	CC725CH1H-330J1,Chip ceramic
C383,C384	394644707 or 394744707	CE04W16V-47M(VR) or CE04W16V47M(SC),Elect.
C388	393341007	CE04W16V-10M(VX),Elect.
C389	342102214R1	CC725CH1H-221J1,Chip ceramic
C390	373041034R2	ECHU16V-103J,Chip film
C391	375521034	MMT50V-103J,Plastic
C401,C402	393344707	CE04W16V-47M(VX),Elect.
C403,C404	393344707	CE04W16V-47M(VX),Elect.
C405,C406,C407	393344707	CE04W16V-47M(VX),Elect.
C408	393381007	CE04W50V-10M(VX),Elect.
C411,C412	393341007	CE04W16V-10M(VX),Elect.
C415,C416	373044724R2	ECHU16V-472J,Chip film
C417,C418	373041044R2	ECHU16V-104J,Chip film
C419,C420	373041044R2	ECHU16V-104J,Chip film
C421,C422,C423	393341007	CE04W16V-10M(VX),Elect.
C424,C425,C426	393341007	CE04W16V-10M(VX),Elect.
C427,C428	393341007	CE04W16V-10M(VX),Elect.
C431,C432	394644707 or 394744707	CE04W16V-47M(VR) or CE04W16V47M(SC),Elect.
C439,C440	393380477	CE04W50V-4.7M(VX),Elect.
C443,C444	342111024R1	CC725CH1E-102J1,Chip ceramic
C445,C446,C447	373041034R2	ECHU16V-103J,Chip film
C448	393380477	CE04W50V-4.7M(VX),Elect.
C449,C450	332161040R1	CK725F1E-104Z1,Chip ceramic
C504	374723334	ECQ-V50V-333J,Plastic
C509,C510,C511	342101014R1	CC725CH1H-101J1,Chip ceramic
C513,C514,C515	342101014R1	CC725CH1H-101J1,Chip ceramic
C516,C517,C518	342101014R1	CC725CH1H-101J1,Chip ceramic
C519,C521,C522	342101014R1	CC725CH1H-101J1,Chip ceramic
C523,C524	342101014R1	CC725CH1H-101J1,Chip ceramic
C525,C526,C527	373022724R2	ECHU50V-272J,Chip film
C528,C529,C530	373022724R2	ECHU50V-272J,Chip film
C531,C532	373022724R2	ECHU50V-272J,Chip film
C533,C534,C535	373021224R2	ECHU50V-122J,Chip film
C536,C537,C538	373021224R2	ECHU50V-122J,Chip film
C539,C540	373021224R2	ECHU50V-122J,Chip film

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C541,C542	394642217 or 394742217	CE04W16V-220M(VR) or CE04W16V220M(SC),Elect.
C543,C544	374721534	ECQ-B50V-153J,Plastic
C651,C652	342101014R1	CC725CH1H-101J1,Chip ceramic
C653,C654	393341007	CE04W16V-10M(VX),Elect.
C655,C656	373021224R2	ECHU50V-122J,Chip film
C657,C658	342101014R1	CC725CH1H-101J1,Chip ceramic
C659,C660	393341007	CE04W16V-10M(VX),Elect.
C661,C662	373021224R2	ECHU50V-122J,Chip film
C663,C664	332161040R1	CK725F1E-104Z1,Chip ceramic
C665,C671	394680477 or 394780477	CE04W50V-4.7M(VR) or CE04W50V4.7M(SC),Elect.
C666,C667	337361055R2	CK732B1A-105K,Chip ceramic
C669,C670	332161040R1	CK725F1E-104Z1,Chip ceramic
C672,C673	337361055R2	CK732B1A-105K,Chip ceramic
C681,C682	332161040R1	CK725F1E-104Z1,Chip ceramic
C861,C862	393341007	CE04W16V-10M(VX),Elect.
C863,C864	393341007	CE04W16V-10M(VX),Elect.
C865,C866	373022224R2	ECHU50V-222J,Chip film
C867	394642217	CE04W16V-220M(VR),Elect.
C868,C869,C871	332161040R1	CK725F1E-104Z1,Chip ceramic
C870	395954707	CE04W25V-47M(RFS),Elect.
C872	394621017	CE04W6.3V-100M(VR),Elect.
C874	394642217	CE04W16V-220M(VR),Elect.
C875	332102225R1	CK725B1H-222K1,Chip ceramic
C876	332104735R1	CK725B1H-473K1,Chip ceramic
C877	332161040R1	CK725F1E-104Z1,Chip ceramic
C878	394621017	CE04W6.3V-100M(VR),Elect.
C879	332161040R1	CK725F1E-104Z1,Chip ceramic
C880,C881,C882	342103304R1	CC725CH1H-330J1,Chip ceramic
C883,C884	342103304R1	CC725CH1H-330J1,Chip ceramic
C885,C886	342103304R1	CC725CH1H-330J1,Chip ceramic
C888,C889	332161040R1	CK725F1E-104Z1,Chip ceramic
C901	332152230R1	CK725F1H-223Z1,Chip ceramic
C902	394662207 or 394762207	CE04W35V-22M(VR) or CE04W35V22M(SC),Elect.
C904,C905,C907	394641007 or 394741007	CE04W16V-10M(VR) or CE04W16V10M(SC),Elect.
C906,C908	332161040R1	CK725F1E-104Z1,Chip ceramic
C909	394681007 or 394781007 or 393381007	CE04W50V-10M(VR) or CE04W50V10M(SC) or CE04W50V-10M(VX),Elect.
C911,C912	394641007 or 394741007	CE04W16V-10M(VR) or CE04W16V10M(SC),Elect.
C921,C923,C924	394644707 or 394744707	CE04W16V-47M(VR) or CE04W16V47M(SC),Elect.
C991,C992	394661017 or 394761017	CE04W35V-100M(VR) or CE04W35V100M(SC),Elect.
C993	354762219	CE04W35V220M(SC),Elect.
	Resistors	
R201,R202	435033324R1	RN72K1J-332JE,Chip carbon
R203,R204,R205	435032214R1	RN72K1J-221JE,Chip carbon
R206,R207,R208	435032214R1	RN72K1J-221JE,Chip carbon
R209,R210,R211	435033324R1	RN72K1J-332JE,Chip carbon
R212,R213	435033324R1	RN72K1J-332JE,Chip carbon
R214,R215	435032214R1	RN72K1J-221JE,Chip carbon
R217,R218	435032214R1	RN72K1J-221JE,Chip carbon
R219	435033324R1	RN72K1J-332JE,Chip carbon
R221,R222,R223	435034704R1	RN72K1J-470JE,Chip carbon
R224,R225,R226	435034704R1	RN72K1J-470JE,Chip carbon
R227,R228	435034704R1	RN72K1J-470JE,Chip carbon
R229	435031034R1	RN72K1J-103JE,Chip carbon

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R230,R231,R232	435034704R1	RN72K1J-470JE,Chip carbon
R233,R234,R235	435034704R1	RN72K1J-470JE,Chip carbon
R236,R237,R238	435034704R1	RN72K1J-470JE,Chip carbon
R239,R240	435034704R1	RN72K1J-470JE,Chip carbon
R241,R242	435034704R1	RN72K1J-470JE,Chip carbon
R243,R244	435034734R1	RN72K1J-473JE,Chip carbon
R249	435033314R1	RN72K1J-331JE,Chip carbon
R250	435032724R1	RN72K1J-272JE,Chip carbon
R251,R252,R253	435031034R1	RN72K1J-103JE,Chip carbon
R254,R255,R256	435031034R1	RN72K1J-103JE,Chip carbon
R257,R258,R259	435031034R1	RN72K1J-103JE,Chip carbon
R260,R261,R262	435031034R1	RN72K1J-103JE,Chip carbon
R263,R264,R265	435031034R1	RN72K1J-103JE,Chip carbon
R266,R267,R268	435031034R1	RN72K1J-103JE,Chip carbon
R269,R270,R271	435031034R1	RN72K1J-103JE,Chip carbon
R272,R273,R274	435031034R1	RN72K1J-103JE,Chip carbon
R275,R276,R277	435031034R1	RN72K1J-103JE,Chip carbon
R278	435032214R1	RN72K1J-221JE,Chip carbon
R279	435034704R1	RN72K1J-470JE,Chip carbon
R281	435031034R1	RN72K1J-103JE,Chip carbon
R291,R292	435032214R1	RN72K1J-221JE,Chip carbon
R301,R302	435033314R1	RN72K1J-331JE,Chip carbon
R303,R304,R305	435033314R1	RN72K1J-331JE,Chip carbon
R306,R307,R308	435033314R1	RN72K1J-331JE,Chip carbon
R309,R310,R311	435033314R1	RN72K1J-331JE,Chip carbon
R312,R313,R314	435033314R1	RN72K1J-331JE,Chip carbon
R315,R316,R317	435033314R1	RN72K1J-331JE,Chip carbon
R318,R319,R320	435033314R1	RN72K1J-331JE,Chip carbon
R321,R322,R323	435033314R1	RN72K1J-331JE,Chip carbon
R324	435033314R1	RN72K1J-331JE,Chip carbon
R325,R326	435035634R1	RN72K1J-563JE,Chip carbon
R329,R330,R335	435035634R1	RN72K1J-563JE,Chip carbon
R336,R339,R340	435035634R1	RN72K1J-563JE,Chip carbon
R345,R346,R347	435035634R1	RN72K1J-563JE,Chip carbon
R348	435035634R1	RN72K1J-563JE,Chip carbon
R349,R350	435033314R1	RN72K1J-331JE,Chip carbon
R355,R356	435030004R1	RN72K1J-000JE,Chip carbon
R357,R358	435034744R1	RN72K1J-474JE,Chip carbon
R359,R360	435035614R1	RN72K1J-561JE,Chip carbon
R361,R362	435032744R1	RN72K1J-274JE,Chip carbon
R363,R364	435032234R1	RN72K1J-223JE,Chip carbon
R365,R366	435031224R1	RN72K1J-122JE,Chip carbon
R367,R368	435031004R1	RN72K1J-100JE,Chip carbon
R371,R372	435031224R1	RN72K1J-122JE,Chip carbon
R373,R374	435034714R1	RN72K1J-471JE,Chip carbon
R375,R376,R377	435031034R1	RN72K1J-103JE,Chip carbon
R378,R379,R380	435031034R1	RN72K1J-103JE,Chip carbon
R385	435034734R1	RN72K1J-473JE,Chip carbon
R386	435031224R1	RN72K1J-122JE,Chip carbon
R387	435031534R1	RN72K1J-153JE,Chip carbon
R388	435031034R1	RN72K1J-103JE,Chip carbon
R401,R402,R403	435032714R1	RN72K1J-271JE,Chip carbon
R404,R405,R406	435032714R1	RN72K1J-271JE,Chip carbon
R407,R408	435032714R1	RN72K1J-271JE,Chip carbon
R409,R410,R411	435031014R1	RN72K1J-101JE,Chip carbon
R412,R413,R414	435031014R1	RN72K1J-101JE,Chip carbon
R415,R416	435031014R1	RN72K1J-101JE,Chip carbon
R417,R418,R419	435032234R1	RN72K1J-223JE,Chip carbon
R420,R421	435032234R1	RN72K1J-223JE,Chip carbon
R422,R423	435032234R1	RN72K1J-223JE,Chip carbon
R425	435030004R1	RN72K1J-000JE,Chip carbon
R427,R428	435031044R1	RN72K1J-104JE,Chip carbon

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R433,R434,R435	435030004R1	RN72K1J-000JE,Chip carbon
R436,R437,R438	435030004R1	RN72K1J-000JE,Chip carbon
R451,R452	435034724R1	RN72K1J-472JE,Chip carbon
R459,R460	435030004R1	RN72K1J-000JE,Chip carbon
R479,R480	435030004R1	RN72K1J-000JE,Chip carbon
R485,R486	435032224R1	RN72K1J-222JE,Chip carbon
R487,R488	435032234R1	RN72K1J-223JE,Chip carbon
R491,R492,R494	435034724R1	RN72K1J-472JE,Chip carbon
R493	435034734R1	RN72K1J-473JE,Chip carbon
R495	435032714R1	RN72K1J-271JE,Chip carbon
R496	435031014R1	RN72K1J-101JE,Chip carbon
R497	435032224R1	RN72K1J-222JE,Chip carbon
R498	435031044R1	RN72K1J-104JE,Chip carbon
R499	435033314R1	RN72K1J-331JE,Chip carbon
R501,R502,R503	435033324R1	RN72K1J-332JE,Chip carbon
R504,R505,R506	435033324R1	RN72K1J-332JE,Chip carbon
R507,R508,R509	435033324R1	RN72K1J-332JE,Chip carbon
R510,R511,R512	435033324R1	RN72K1J-332JE,Chip carbon
R513,R514,R515	435033324R1	RN72K1J-332JE,Chip carbon
R516	435033324R1	RN72K1J-332JE,Chip carbon
R517,R518,R519	435036814R1	RN72K1J-681JE,Chip carbon
R520,R521,R522	435036814R1	RN72K1J-681JE,Chip carbon
R523,R524,R525	435036814R1	RN72K1J-681JE,Chip carbon
R526,R527,R528	435036814R1	RN72K1J-681JE,Chip carbon
R529,R530	435036814R1	RN72K1J-681JE,Chip carbon
R531,R532	435036814R1	RN72K1J-681JE,Chip carbon
R533,R534,R535	435031034R1	RN72K1J-103JE,Chip carbon
R536,R537,R538	435031034R1	RN72K1J-103JE,Chip carbon
R539,R540,R541	435031034R1	RN72K1J-103JE,Chip carbon
R542,R543,R544	435031034R1	RN72K1J-103JE,Chip carbon
R545,R546	435031034R1	RN72K1J-103JE,Chip carbon
R547,R548	435031034R1	RN72K1J-103JE,Chip carbon
R549,R550,R551	435031814R1	RN72K1J-181JE,Chip carbon
R552	435034724R1	RN72K1J-472JE,Chip carbon
R553,R554,R555	435031814R1	RN72K1J-181JE,Chip carbon
R556,R557	435031814R1	RN72K1J-181JE,Chip carbon
R558,R559	435031814R1	RN72K1J-181JE,Chip carbon
R560	435034724R1	RN72K1J-472JE,Chip carbon
R561,R562	435031814R1	RN72K1J-181JE,Chip carbon
R563,R564	435031814R1	RN72K1J-181JE,Chip carbon
R565,R566,R567	435031034R1	RN72K1J-103JE,Chip carbon
R568,R569,R570	435031034R1	RN72K1J-103JE,Chip carbon
R571,R572,R573	435031034R1	RN72K1J-103JE,Chip carbon
R574,R575,R576	435031034R1	RN72K1J-103JE,Chip carbon
R577,R578	435031034R1	RN72K1J-103JE,Chip carbon
R579,R580	435031034R1	RN72K1J-103JE,Chip carbon
R581,R582,R583	435031524R1	RN72K1J-152JE,Chip carbon
R584,R585,R586	435031524R1	RN72K1J-152JE,Chip carbon
R587,R588	435031524R1	RN72K1J-152JE,Chip carbon
R589,R590,R591	435032234R1	RN72K1J-223JE,Chip carbon
R592,R593,R594	435032234R1	RN72K1J-223JE,Chip carbon
R595,R596,R597	435032234R1	RN72K1J-223JE,Chip carbon
R598,R599,R600	435032234R1	RN72K1J-223JE,Chip carbon
R601,R602,R603	435032234R1	RN72K1J-223JE,Chip carbon
R604,R605,R606	435032234R1	RN72K1J-223JE,Chip carbon
R607,R608,R609	435032234R1	RN72K1J-223JE,Chip carbon
R610,R611,R612	435032234R1	RN72K1J-223JE,Chip carbon
R613,R614,R615	435032234R1	RN72K1J-223JE,Chip carbon
R616,R617,R618	435032234R1	RN72K1J-223JE,Chip carbon
R619,R620	435032234R1	RN72K1J-223JE,Chip carbon
R621,R622,R623	435031524R1	RN72K1J-152JE,Chip carbon
R624,R625,R626	435031524R1	RN72K1J-152JE,Chip carbon

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R627,R628,R629	435031524R1	RN72K1J-152JE,Chip carbon
R630,R631,R632	435031524R1	RN72K1J-152JE,Chip carbon
R633,R634	435031524R1	RN72K1J-152JE,Chip carbon
R635,R636	435031524R1	RN72K1J-152JE,Chip carbon
R651,R652	435033314R1	RN72K1J-331JE,Chip carbon
R653,R654	435031224R1	RN72K1J-122JE,Chip carbon
R655,R656	435031024R1	RN72K1J-102JE,Chip carbon
R657,R658	435033314R1	RN72K1J-331JE,Chip carbon
R659,R660	435031224R1	RN72K1J-122JE,Chip carbon
R661,R662	435031024R1	RN72K1J-102JE,Chip carbon
R663,R664	435033314R1	RN72K1J-331JE,Chip carbon
R665,R667	435033314R1	RN72K1J-331JE,Chip carbon
R668	435031034R1	RN72K1J-103JE,Chip carbon
R669	435031024R1	RN72K1J-102JE,Chip carbon
R670,R671	435033314R1	RN72K1J-331JE,Chip carbon
R672,R674	435033314R1	RN72K1J-331JE,Chip carbon
R675	435031034R1	RN72K1J-103JE,Chip carbon
R676	435031024R1	RN72K1J-102JE,Chip carbon
R682,R683,R684	435032214R1	RN72K1J-221JE,Chip carbon
R685,R686	435032214R1	RN72K1J-221JE,Chip carbon
R688,R689,R690	435032214R1	RN72K1J-221JE,Chip carbon
R691,R692,R693	435032214R1	RN72K1J-221JE,Chip carbon
R859	435031034R1	RN72K1J-103JE,Chip carbon
R861,R862	435035604R1	RN72K1J-560JE,Chip carbon
R863,R864	435035604R1	RN72K1J-560JE,Chip carbon
R865,R866	435033924R1	RN72K1J-392JE,Chip carbon
R867	435033314R1	RN72K1J-331JE,Chip carbon
R868	435032724R1	RN72K1J-272JE,Chip carbon
R869,R870,R871	435035604R1	RN72K1J-560JE,Chip carbon
R872,R873,R874	435035604R1	RN72K1J-560JE,Chip carbon
R875,R876,R877	435035604R1	RN72K1J-560JE,Chip carbon
R878,R879	435035604R1	RN72K1J-560JE,Chip carbon
R880,R881	435031024R1	RN72K1J-102JE,Chip carbon
R882	435032224R1	RN72K1J-222JE,Chip carbon
R883,R884	435031024R1	RN72K1J-102JE,Chip carbon
R885,R886	435035604R1	RN72K1J-560JE,Chip carbon
R887	332121045R1	CK725B1C-104K1,Chip ceramic
R888,R889	435033314R1	RN72K1J-331JE,Chip carbon
R890,R891	435033314R1	RN72K1J-331JE,Chip carbon
R892,R893,R894	435033314R1	RN72K1J-331JE,Chip carbon
R898	435030004R1	RN72K1J-000JE,Chip carbon
R899	435031054R1	RN72K1J-105JE,Chip carbon
R901	441721204F	RS2WBJ-12,Metal oxide
R902	441725604F	RS2WBJ-56,Metal oxide
R904	435033304R1	RN72K1J-330JE,Chip carbon
R906	441721014F	RS2WBJ-100,Metal oxide
R907,R908	435034734R1	RN72K1J-473JE,Chip carbon
R909	435031024R1	RN72K1J-102JE,Chip carbon
R910	435031834R1	RN72K1J-183JE,Chip carbon
R913	435033304R1	RN72K1J-330JE,Chip carbon
R961	441721224F	RS2WBJ-1.2K,Metal oxide
R962	443521014	RS1/2WBJ-100,Metal oxide
R963	453530474	RNU1/2WCJ-4.7,Metal
	Terminals	
P301,P303,P304	25045565	NPJ-6PDBL380
P305	25045734	NPJ-6PDWRLEGP522
P422	25045424	NPJ-2PDBL249
P423	25045738	NPJ-1PDP526
P424	25045696	LGY2502-0200C
	Sockets	
JL9502B	25050271	NSCT-7P99
P2501A	2009990920UL	NSAS-14P1449

CIRCUIT NO.	PART NO.	DESCRIPTION
	Sockets	
P308	2009990918UL	NSAS-24P1447
P6931B	25052577R2	NSCT-11P2474
	Plugs	
JL7503B	25055624	NPLG-3P586
P351A	25055709	NPLG-13P665
P352A	25055712	NPLG-20P668
P353A	25055807	NPLG-18P763
P354A	25055710	NPLG-14P666
P961	25055099	NPLG-2P83
	Isolated sheets	
Q904B,Q909B	223026	ISO SHEET
	Transistor accessory	
Q904C,Q909C	223034	MT-25
	Heat sink	
Q901B	27160500	RAD-165
	Screws	
Q901A,Q904A	82143010	3P+10FN(BC),Pan head
Q909A,Q910A	82143010	3P+10FN(BC),Pan head

Main connector PC board (NADG-8366-1F/1G)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q701	W0025R301150M105	M30627FHPGP U5C
	Transistors	
Q702,Q705,Q707	2216210R2 or	KRC104S or
Q709,Q711	2214490R2	RN1404
Q703,Q704,Q706	2216220R2 or	KRA102S or
Q708	2214530R2	RN2402
	Diodes	
D701,D702,D703	223234R2 or	1SS352 or
D705,D706,D708	223269R2	1SS355
D704,D707,D709	224660514R2 or	HZU5.1B or
	224550510R2	UDZS5.1B
D711	224551300R2 or	UDZS13B or
	224661304R2	HZU13B
	Oscillator	
X701	3010397R2	CSTCR6M0055-R0
	Choke coil	
L701	233533K470R2 or	NCH-1587-470K or
	231237K470R2	NCH-1479
	Capacitors	
C701,C702,C703	394680107 or	CE04W50V-1M(VR) or
C707	394780107	CE04W50V1.0M(SC),Elect.
C704	3000126 or	FM0H224Z or
	3000079	DX-5R5L224,Super
C705	332121045R1	CK725B1C-104K1,Chip ceramic
C706	332161040R1	CK725F1E-104Z1,Chip ceramic
C708,C709,C710	332161040R1	CK725F1E-104Z1,Chip ceramic
C711,C712	332161040R1	CK725F1E-104Z1,Chip ceramic
C714,C715,C716	342111024R1	CC725CH1E-102J1,Chip ceramic
C717,C718,C719	342111024R1	CC725CH1E-102J1,Chip ceramic
C720,C721,C722	342111024R1	CC725CH1E-102J1,Chip ceramic
C723,C724	342111024R1	CC725CH1E-102J1,Chip ceramic
C725,C741	394641007 or	CE04W16V-10M(VR) or
	394741007	CE04W16V10M(SC),Elect.
C726	337394745R1	CK732B1C-474K,Chip ceramic
C727,C729	394641007 or	CE04W16V-10M(VR) or
	394741007	CE04W16V10M(SC),Elect.
C728	337394745R1	CK732B1C-474K,Chip ceramic
C737,C738	394680337 or	CE04W50V-3.3M(VR) or
	394780337	CE04W50V3.3M(SC),Elect.
C739,C740	342101014R1	CC725CH1H-101J1,Chip ceramic

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R701,R702	435032214R1	RN72K1J-221JE,Chip carbon
R703,R704	435032214R1	RN72K1J-221JE,Chip carbon
R705	435031034R1	RN72K1J-103JE,Chip carbon
R706,R707,R708	435032214R1	RN72K1J-221JE,Chip carbon
R709,R710,R711	435031034R1	RN72K1J-103JE,Chip carbon
R712,R713	435031034R1	RN72K1J-103JE,Chip carbon
R714,R715,R716	435032214R1	RN72K1J-221JE,Chip carbon
R717,R718,R719	435032214R1	RN72K1J-221JE,Chip carbon
R720,R721	435032214R1	RN72K1J-221JE,Chip carbon
R722,R723	435031034R1	RN72K1J-103JE,Chip carbon
R724	435032214R1	RN72K1J-221JE,Chip carbon
R725,R726	435031004R1	RN72K1J-100JE,Chip carbon
R727,R728,R729	435032214R1	RN72K1J-221JE,Chip carbon
R730,R731,R732	435032214R1	RN72K1J-221JE,Chip carbon
R733,R734,R735	435032214R1	RN72K1J-221JE,Chip carbon
R736,R737,R738	435032214R1	RN72K1J-221JE,Chip carbon
R739,R740,R741	435032214R1	RN72K1J-221JE,Chip carbon
R742,R743,R744	435032214R1	RN72K1J-221JE,Chip carbon
R745,R746	435031034R1	RN72K1J-103JE,Chip carbon
R747,R748	435032214R1	RN72K1J-221JE,Chip carbon
R749,R750	435032214R1	RN72K1J-221JE,Chip carbon
R751,R752,R753	435032214R1	RN72K1J-221JE,Chip carbon
R754,R755,R756	435032214R1	RN72K1J-221JE,Chip carbon
R757,R758,R759	435032214R1	RN72K1J-221JE,Chip carbon
R760,R761	435032214R1	RN72K1J-221JE,Chip carbon
R762,R763	435032214R1	RN72K1J-221JE,Chip carbon
R764	435030004R1	RN72K1J-000JE,Chip carbon
R765,R766,R767	435032214R1	RN72K1J-221JE,Chip carbon
R768,R769	435032214R1	RN72K1J-221JE,Chip carbon
R770,R771	435030004R1	RN72K1J-000JE,Chip carbon
R772,R773,R774	435032214R1	RN72K1J-221JE,Chip carbon
R775,R776,R777	435032214R1	RN72K1J-221JE,Chip carbon
R778,R779,R780	435032214R1	RN72K1J-221JE,Chip carbon
R781,R782,R783	435032214R1	RN72K1J-221JE,Chip carbon
R784	435034724R1	RN72K1J-472JE,Chip carbon
R785,R786,R787	435032214R1	RN72K1J-221JE,Chip carbon
R788,R789,R790	435032214R1	RN72K1J-221JE,Chip carbon
R791,R792,R793	435032214R1	RN72K1J-221JE,Chip carbon
R794,R795,R796	435032214R1	RN72K1J-221JE,Chip carbon
R797,R798,R799	435034724R1	RN72K1J-472JE,Chip carbon
R800,R801,R802	435034724R1	RN72K1J-472JE,Chip carbon
R803,R804	435034724R1	RN72K1J-472JE,Chip carbon
R805,R806,R809	435031034R1	RN72K1J-103JE,Chip carbon
R810	435034734R1	RN72K1J-473JE,Chip carbon
R811	435031054R1	RN72K1J-105JE,Chip carbon
R812,R813	435031024R1	RN72K1J-102JE,Chip carbon
R814	435031034R1	RN72K1J-103JE,Chip carbon
R815	435034734R1	RN72K1J-473JE,Chip carbon
R816,R817,R818	435031034R1	RN72K1J-103JE,Chip carbon
R819,R820,R821	435031034R1	RN72K1J-103JE,Chip carbon
R822,R823,R824	435031034R1	RN72K1J-103JE,Chip carbon
R825,R826	435031034R1	RN72K1J-103JE,Chip carbon
R830	435031034R1	RN72K1J-103JE,Chip carbon
R831	435032244R1	RN72K1J-224JE,Chip carbon
R832	435031014R1	RN72K1J-101JE,Chip carbon
R834,R835,R836	435031034R1	RN72K1J-103JE,Chip carbon
R837,R838,R839	435032724R1	RN72K1J-272JE,Chip carbon
R840	435032724R1	RN72K1J-272JE,Chip carbon
R841	435032224R1	RN72K1J-222JE,Chip carbon
R842,R844,R846	435031024R1	RN72K1J-102JE,Chip carbon
R843,R845	435032224R1	RN72K1J-222JE,Chip carbon
R847,R848,R849	435032244R1	RN72K1J-224JE,Chip carbon

CIRCUIT NO.	PART NO.	DESCRIPTION
Resistors		
R851,R852	435034734R1	RN72K1J-473JE,Chip carbon
R853,R854	435034734R1	RN72K1J-473JE,Chip carbon
R855	435033314R1	RN72K1J-331JE,Chip carbon
R856,R857	435034734R1	RN72K1J-473JE,Chip carbon
R858	435031044R1	RN72K1J-104JE,Chip carbon
R860	435031034R1	RN72K1J-103JE,Chip carbon
R981	435033334R1	RN72K1J-333JE,Chip carbon <A>
R982	435030004R1	RN72K1J-000JE,Chip carbon <D>
	435031034R1	RN72K1J-103JE,Chip carbon <A>
R983,R985	435031034R1	RN72K1J-103JE,Chip carbon
R984	435033334R1	RN72K1J-333JE,Chip carbon <D>
R987	435031034R1	RN72K1J-103JE,Chip carbon <D>
	435033334R1	RN72K1J-333JE,Chip carbon <A>
R988	435035634R1	RN72K1J-563JE,Chip carbon <A>
R989,R990,R991	435031034R1	RN72K1J-103JE,Chip carbon
R993,R995	435031034R1	RN72K1J-103JE,Chip carbon
Sockets		
P103A	200AA390815UL	NSAS-8P0834
P351	25051238	NSCT-13P1028
P352	25051241	NSCT-20P1031
P353	25051529	NSCT-18P1316
P354	25051239	NSCT-14P1029
P7501B	25052589R2	NSCT-23P2486
P761A	25052211 or	NSCT-15P2108 or
	25051822	NSCT-15P1609
Plugs		
P121A	25055711	NPLG-15P667
P2004A	25055710	NPLG-14P666
P2005A	25055705	NPLG-9P661
P6804A	25055703	NPLG-7P659
P701	25055704	NPLG-8P660

Control terminal PC board (NAETC-8367-1F/1G)

CIRCUIT NO.	PART NO.	DESCRIPTION
ICs		
Q133	22241383R2 or	NJM4565M-D or
	22240581R2	NJM4565M
Q151	222780053R2JR	NJM78L05UA
Photo coupler		
Q177	24120080	PC817X
Transistors		
Q131,Q132	2215410R2	RN1441
Q152,Q154,Q155	2216190R2 or	KRC102S or
	2214470R2	RN1402
Q153,Q156,Q157	2216175R2 or	KTC3875-GR or
Q158	2213145R2	2SC2712-GR
Q159	2216185R2 or	KTA1504-GR or
	2214375R2	2SA1162-GR
Q171,Q172,Q173	2212855 or	2SB1068-U or
	2212853	2SB1068-K
Q174,Q175,Q176	2216190R2 or	KRC102S or
Q178,Q179	2214470R2	RN1402
Diodes		
D131,D133	22380260 or	RL1N4003 or
	22380035	GP104003E
D132	223234R2 or	1SS352 or
	223269R2	1SS355
Capacitors		
C131,C132	394641007 or	CE04W16V-10M(VR) or
C133,C134	393341007	CE04W16V-10M(VX),Elect.
C135,C136	393380227	CE04W50V-2.2M(VX),Elect.
C137,C138	342101014R1	CC725CH1H-101J1,Chip ceramic

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C139,C140	342111024R1	CC725CH1E-102J1,Chip ceramic
C141,C142	393361007	CE04W35V-10M(VX),Elect.
C151,C178	332112235R1	CK725B1E-223K1,Chip ceramic
C152,C153	342111024R1	CC725CH1E-102J1,Chip ceramic
C154,C156	332161040R1	CK725F1E-104Z1,Chip ceramic
C155	394641007 or 393341007	CE04W16V-10M(VR) or CE04W16V-10M(VX),Elect.
C171,C172,C173	394644707 or 394744707	CE04W16V-47M(VR) or CE04W16V47M(SC),Elect.
C174,C175,C176	332101025R1	CK725B1H-102K1,Chip ceramic
C179	394621017 or 394721017	CE04W6.3V-100M(VR) or CE04W6.3V100M(SC),Elect.
	Resistors	
R131,R132	435032244R1	RN72K1J-224JE,Chip carbon
R133,R134,R159	435032234R1	RN72K1J-223JE,Chip carbon
R135,R136,R143	435032244R1	RN72K1J-224JE,Chip carbon
R137,R138	435036824R1	RN72K1J-682JE,Chip carbon
R139,R140	435036824R1	RN72K1J-682JE,Chip carbon
R141,R142	435033314R1	RN72K1J-331JE,Chip carbon
R151,R152	435033314R1	RN72K1J-331JE,Chip carbon
R153,R154	435031024R1	RN72K1J-102JE,Chip carbon
R155,R156	435031034R1	RN72K1J-103JE,Chip carbon
R157	435033324R1	RN72K1J-332JE,Chip carbon
R158,R169	435031024R1	RN72K1J-102JE,Chip carbon
R160	435031234R1	RN72K1J-123JE,Chip carbon
R161,R162,R163	435031024R1	RN72K1J-102JE,Chip carbon
R164	435036814R1	RN72K1J-681JE,Chip carbon
R166	443524714	RS1/2WBJ-470,Metal oxide
R168	435032224R1	RN72K1J-222JE,Chip carbon
R171,R172,R173	4000195	RXE030,Thermistor
R174,R175,R176	435032224R1	RN72K1J-222JE,Chip carbon
R177,R178,R179	435031024R1	RN72K1J-102JE,Chip carbon
R182,R184,R185	435030004R1	RN72K1J-000JE,Chip carbon
R183	435031014R1	RN72K1J-101JE,Chip carbon
R188,R189	435031034R1	RN72K1J-103JE,Chip carbon
	Terminals	
P113	25045598	HEC0470-01-630
P115,P116	25045647	HSJ1002-01-1020
P117,P118	25045647	HSJ1002-01-1020
	Sockets	
P114	25052662	NSCT-8P2558
P121	25051240	NSCT-15P1030

Digital input/output terminal PC board (NADG-8368-1F/1G)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q101	22241537R2	MPD4721GS
Q111,Q112	222740046R2	74HCU04F
	Photo couplers	
U111	24120102	TOTX179L
U112,U113	24120101	TORX179L
U114,U115	24120101	TORX179L
	Coils	
L101	230948R2	BLM21A102F
L111	232136	NSRF-2046,MPX
L112,L113,L114	233533M022R2 or	NCH-1587-022M or
L115,L116	231237K022R2	NCH-1471
	Capacitors	
C102,C121	394621017 or	CE04W6.3V-100M(VR) or
C128,C130	394721017	CE04W6.3V100M(SC),Elect.
C103	332161040R1	CK725F1E-104Z1,Chip ceramic

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C104,C105	394680107 or	CE04W50V-1M(VR) or
C106,C107	394780107	CE04W50V1.0M(SC),Elect.
C111,C113	332101025R1	CK725B1H-102K1,Chip ceramic
C112,C116,C117	332121045R1	CK725B1C-104K1,Chip ceramic
C114,C115	342101014R1	CC725CH1H-101J1,Chip ceramic
C118,C119,C120	342100802R1	CC725CH1H-080D1,Chip ceramic
C122,C123,C124	332161040R1	CK725F1E-104Z1,Chip ceramic
C125,C126,C127	332161040R1	CK725F1E-104Z1,Chip ceramic
C129	332161040R1	CK725F1E-104Z1,Chip ceramic
	Resistors	
R102,R103,R104	435033314R1	RN72K1J-331JE,Chip carbon
R105,R123,R124	435033314R1	RN72K1J-331JE,Chip carbon
R111,R112	435037504R1	RN72K1J-750JE,Chip carbon
R113,R114	435031004R1	RN72K1J-100JE,Chip carbon
R115,R116	435032244R1	RN72K1J-224JE,Chip carbon
R117,R118,R119	435031034R1	RN72K1J-103JE,Chip carbon
R122	435031044R1	RN72K1J-104JE,Chip carbon
R125,R126	435033314R1	RN72K1J-331JE,Chip carbon
	Terminals	
P111	25045624	NPJ-3PDO431
	Sockets	
P101	25052379	NSCT-9P2277
P120A	2009990917UL	NSAS-24P1446

Primary circuit PC board (NAPS-8382-1J/1K)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q921	2215864 or	KTC3199-GR or
	2213284 or	2SC1740S-R or
	2213285 or	2SC1740S-S or
	2212115	2SC2458-GR
	Diodes	
D921,D922	22380260 or	RL1N4003 or
D923,D924	22380035	GP104003E
D925	223163 or	1SS133 or
	223205 or	1SS270A or
	223222	WG713A
	Capacitors	
C901	3800039S or	! ECQU2A103MLC or
	3500196S	! RE275V-103M,IS
C921	335622230	CK45F50V-223Z,Ceramic
C922	394654717	CE04W25V-470M(VR),Elect.
C923	335321025	CK45B50V-102K,Ceramic
	Resistors	
R921	453630824	RNU1WCJ-8.2,Metal
R922	417341034	R16J-10K,Carbon
R923	417341024	R16J-1K,Carbon
R926	417344724	R16J-4.7K,Carbon
	Power transformer	
T902	2301775	! NPT-1504D <D>
	2301776	! NPT-1504P <A>
	Fuse holders	
F901A,F901B	250113	! SN5051 <D>
F902A,F902B	25052133	! NSCT-1P2031 <A>
F903A,F903B	25052133	! NSCT-1P2031
	Labels	
F901C	29362325	12A/250V <D>
F902C	29361681	T6.3AL/250V <A>
F903C	29361747	T2.5AL250V <A>
	AC outlet	
P902	25051126	! NSCT-4P913 <D>
	25052115	! NSCT-2P2013 <A>

CIRCUIT NO.	PART NO.	DESCRIPTION
	Socket	
P931B	25051230	NSCT-5P1020
	Relay	
RL901	25065670 or	! NRL-1P10A-DC9-180 or
	25065671	! NRL-1P10A-DC9-181

Driver circuit PC board (NAAF-8383-1J/1K)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q5000,Q5001	2210755 or	2SC1775A-E or
Q5002,Q5010	2210756 or	2SC1775A-F or
Q5011,Q5012	2211733	2SC1845-E
Q5003,Q5004	2215896 or	KTC3200-BL or
Q5005,Q5006	2210755 or	2SC1775A-E or
Q5013,Q5014	2210756 or	2SC1775A-F or
Q5015,Q5016	2211733	2SC1845-E
Q5030,Q5031	2202094 or	2SA1360-Y or
Q5032	2202093	2SA1360-O
Q5033,Q5034	2215844 or	KTA1024-Y or
Q5035,Q5036	2215843 or	KTA1024-O or
	2211354 or	2SA949-Y or
	2211353	2SA949-O
Q5040,Q5041	2202104 or	2SC3423-Y or
Q5042	2202103	2SC3423-O
Q5043,Q5044	2215854 or	KTC3206-Y or
Q5045,Q5046	2215853 or	KTC3206-O or
	2211634 or	2SC2229-Y or
	2211633	2SC2229-O
Q5050,Q5051	2215896 or	KTC3200-BL or
Q5052,Q5053	2215895 or	KTC3200-GR or
Q5054,Q5055	2210755 or	2SC1775A-E or
Q5056	2210756 or	2SC1775A-F or
	2211733 or	2SC1845-E or
	2211732	2SC1845-F
	Diodes	
D5000,D5001,D5002	224470562	MTZJ5.6B
D5003,D5004	224470562	MTZJ5.6B
D5005,D5006	224470562	MTZJ5.6B
	Capacitors	
C5000,C5001,C5002	374721015	ECQ-B50V-101K,Plastic
C5003,C5004,C5005	374721015	ECQ-B50V-101K,Plastic
C5006	374721015	ECQ-B50V-101K,Plastic
C5010,C5011	393384707	CE04W50V-47M(VX),Elect.
C5012,C5013,C5014	393381007	CE04W50V-10M(VX),Elect.
C5015,C5016	393381007	CE04W50V-10M(VX),Elect.
C5020,C5021,C5022	394681007	CE04W50V-10M(VX),Elect.
C5023,C5024,C5025	394681007	CE04W50V-10M(VX),Elect.
C5026	394681007	CE04W50V-10M(VX),Elect.
C5040,C5041,C5042	393342217	CE04W16V-220M(VX),Elect.
C5043,C5044,C5045	393342217	CE04W16V-220M(VX),Elect.
C5046	393342217	CE04W16V-220M(VX),Elect.
C5050,C5051,C5052	394684707	CE04W50V-47M(VR),Elect.
C5053,C5054,C5055	394684707	CE04W50V-47M(VR),Elect.
C5056	394684707	CE04W50V-47M(VR),Elect.
C5080,C5081,C5082	345020401	CC45SL50V-040C,Ceramic
C5083,C5084,C5085	345020401	CC45SL50V-040C,Ceramic
C5086	345020401	CC45SL50V-040C,Ceramic
C5090,C5091,C5092	374721015	ECQ-B50V-101K,Plastic film
C5093,C5094,C5095	374721015	ECQ-B50V-101K,Plastic film
C5096	374721015	ECQ-B50V-101K,Plastic film
C5100,C5101,C5102	394591007	CE04W100V-10M(VZ),Elect.
C5103,C5104	394691007	CE04W100V-10M(VR),Elect.
C5105,C5106	394691007	CE04W100V-10M(VR),Elect.

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C5110,C5111,C5112	394591007	CE04W100V-10M(VZ),Elect.
C5113,C5114	394691007	CE04W100V-10M(VR),Elect.
C5115,C5116	394691007	CE04W100V-10M(VR),Elect.
	Resistors	
R5000,R5001,R5002	417341024	R16J-1K,Carbon
R5003,R5004,R5005	417341024	R16J-1K,Carbon
R5006	417341024	R16J-1K,Carbon
R5010,R5011,R5012	417345634	R16J-56K,Carbon
R5013,R5014,R5015	417345634	R16J-56K,Carbon
R5016,R5036	417345634	R16J-56K,Carbon
R5020,R5021,R5022	417343314	R16J-330,Carbon
R5023,R5024,R5025	417343314	R16J-330,Carbon
R5026	417343314	R16J-330,Carbon
R5030,R5031,R5032	417345634	R16J-56K,Carbon
R5033,R5034,R5035	417345634	R16J-56K,Carbon
R5040,R5041,R5042	417342224	R16J-2.2K,Carbon
R5043,R5044,R5045	417342224	R16J-2.2K,Carbon
R5046	417342224	R16J-2.2K,Carbon
R5050,R5051,R5052	417344724	R16J-4.7K,Carbon
R5053,R5054,R5055	417344724	R16J-4.7K,Carbon
R5056	417344724	R16J-4.7K,Carbon
R5060,R5061,R5062	417341224	R16J-1.2K,Carbon
R5063,R5064,R5065	417341224	R16J-1.2K,Carbon
R5066	417341224	R16J-1.2K,Carbon
R5080,R5081,R5082	417344714	R16J-470,Carbon
R5083,R5084,R5085	417344714	R16J-470,Carbon
R5086	417344714	R16J-470,Carbon
R5090,R5091,R5092	417341044	R16J-100K,Carbon
R5093,R5094,R5095	417341044	R16J-100K,Carbon
R5096	417341044	R16J-100K,Carbon
R5100,R5101,R5102	417341044	R16J-100K,Carbon
R5103,R5104,R5105	417341044	R16J-100K,Carbon
R5106	417341044	R16J-100K,Carbon
R5110,R5111,R5112	417341024	R16J-1K,Carbon
R5113,R5114,R5115	417341024	R16J-1K,Carbon
R5116	417341024	R16J-1K,Carbon
R5130,R5131	417342234	R16J-22K,Carbon
R5132,R5133,R5134	417341834	R16J-18K,Carbon
R5135,R5136	417341834	R16J-18K,Carbon
R5160,R5161,R5162	415471214	R25J-120,NF carbon
R5163,R5164,R5165	415471214	R25J-120,NF carbon
R5166,R5176	415471214	R25J-120,NF carbon
R5170,R5171,R5172	415471214	R25J-120,NF carbon
R5173,R5174,R5175	415471214	R25J-120,NF carbon
R5180,R5181,R5182	415471004	R25J-10,NF carbon
R5183,R5184,R5185	415471004	R25J-10,NF carbon
R5186,R5196	415471004	R25J-10,NF carbon
R5190,R5191,R5192	415471004	R25J-10,NF carbon
R5193,R5194,R5195	415471004	R25J-10,NF carbon
R5200,R5201	417342234	R16J-22K,Carbon
R5220,R5221,R5222	417342734	R16J-27K,Carbon
R5223,R5224,R5225	417342734	R16J-27K,Carbon
R5226	417342734	R16J-27K,Carbon
	Sockets	
JL6005A,JL6006A	25051109	NSCT-5P896
P6000A,P6001A	25052288	NSCT-5P2185
P6002A,P6003A	25052288	NSCT-5P2185
P6004A	25052288	NSCT-5P2185
	Plug	
P308A	25055155	NPLG-11P139
	Retainer	
P6011B	27141859	(BUS-U)

AC inlet terminal PC board (NAETC-8388-1J/1K)

CIRCUIT NO.	PART NO.	DESCRIPTION
	AC inlet	
P901B	25055960	! NPLG-2P913

Secondary circuit PC board (NAPS-8389-1J/1K)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q9001	222780565JRC or 222780574TOS	NJM78M56FA or TA78057S
	Transistor	
Q9002	2215975 or 2211455	KTA1266-GR or 2SA1015-GR
	Diodes	
D9001,D9002	22380260 or	RL1N4003 or
D9003,D9004	22380035	GP104003E
D9005	22380271 or 22380285 or 22380022	D3SBA20 or RS403M or RBV402
D9009,D9010	22380260 or	RL1N4003 or
D9011,D9013	22380035	GP104003E
D9012	224472704	MTZJ27D
	Capacitors	
C9001,C9002	375523344	MMT50V-334J,Plastic
C9003	394661027S	CE04W35V-1000M(VR),Elect.
C9004	394664717	CE04W35V-470M(VR),Elect.
C9005	375523344	MMT50V-334J,Plastic
C9009	394662217	CE04W35V-220M(VR),Elect.
C9010	394644727S	CE04W16V-4700M(VR),Elect.
C9011	394651027S	CE04W25V-1000M(VR),Elect.
C9012,C9015,C9016	335622230	CK45F50V-223Z,Ceramic
C9013	394641007	CE04W16V-10M(VR),Elect.
C9014	394674717S	CE04W63V-470M(VR),Elect.
C9017	374721024	ECQ-B50V-102J,Plastic
	Resistors	
R9002	443522204	RS1/2WBJ-22,Metal oxide
R9003,R9004	417348224	R16J-8.2K,Carbon
R9005	417343334	R16J-33K,Carbon
R9006	453530474	RNU1/2WCJ-4.7,Metal
	Sockets	
JL9501B,JL9502A	25051111	NSCT-7P898
P6931A	25052532 or 25052348	NSCT-11P2429 or NSCT-11P2245
P6953B	25051528	NSCT-17P1315
P7502B	25052244	NSCT-11P2141
	Screw	
D9002B	838430107	3TTB+10S(BC)
	Radiator	
D9005A	27160211	RAD-68

Fuse terminal PC board (NAETC-8390-1J/1K)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitor	
C9591	374721044	ECQ-V50V-104J
	Resistors	
R9591,R9592	453530104	RNU1/2WCJ-1
R9594	453530224	RNU1/2WCJ-2.2
	Fuse holders	
F9501A,F9501B	25052133	NSCT-1P2031
	Label	
F9501C	29361747	T2.5AL250V
	Socket	
JL9501A	25051111	NSCT-7P898

Power amplifier PC board (NAAF-8391-1J/1K)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q6015,Q6016	2213284 or	2SC1740S-R or
Q6025,Q6026	2213285	2SC1740S-S
Q6035,Q6036	2203010 or	2SC5171 or
	2203434	KTD2061-Y
Q6045,Q6046	2203000 or	2SA1930 or
	2203424	KTB1369-Y
Q6075,Q6076	2214984 or	2SC2631-R or
	2214985	2SC2631-S
	Diodes	
D6015,D6016	223163 or	1SS133 or
	223205 or	1SS270A or
	223222	WG713A
	Capacitors	
C6045,C6046	394584707	CE04W50V-47M(VZ),Elect.
C6055,C6056	374721034	ECQ-B50V-103J,Plastic
	Resistors	
R6005,R6006	417345624	R16J-5.6K,Carbon
R6015,R6016	417343924	R16J-3.9K,Carbon
R6035,R6036	417345614	R16J-560,Carbon
R6045,R6046	5210258	N06HR1KBC,Trimming
R6055,R6056	417343924	R16J-3.9K,Carbon
R6065,R6066	415470224	R25J-2.2,NF carbon
R6075,R6076	415472214	R25J-220,NF carbon
R6085,R6086	415470224	R25J-2.2,NF carbon
R6095,R6096	415470224	R25J-2.2,NF carbon
R6105,R6106	4000201 or	RF-5EGKR22 or
	4000132 or	RGC55 0.22 or
	4500245	BPR55FK0.22,Metal plate
R6145,R6146	417342234	R16J-22K,Carbon
R6155,R6156	417341234	R16J-12K,Carbon
R6165,R6166	417343334	R16J-33K,Carbon
R6205,R6206	417341014	R16J-100,Carbon
R6245,R6246	417342244	R16J-220K,Carbon
	Sockets	
JL6005B,JL6006B	25050269	NSCT-5P97
JL6200B	25050270	NSCT-6P98
	Plugs	
P6085,P6086	25055038	NPLG-2P29

Power amplifier PC board (NAAF-8397-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q6010,Q6011	2213284 or	2SC1740S-R or
Q6012,Q6013	2213285	2SC1740S-S
Q6014	2213284 or	2SC1740S-R or
Q6020,Q6021	2213285	2SC1740S-S
Q6022,Q6023	2213284 or	2SC1740S-R or
Q6024	2213285	2SC1740S-S
Q6030,Q6031	2203010	2SC5171
Q6032	2203010	2SC5171
Q6033,Q6034	2203010 or	2SC5171 or
	2203434	KTD2061-Y
Q6040,Q6041	2203000	2SA1930
Q6042	2203000	2SA1930
Q6043,Q6044	2203000 or	2SA1930 or
	2203424	KTB1369-Y
Q6070,Q6071	2214984 or	2SC2631-R or
Q6072,Q6073	2214985	2SC2631-S
Q6074	2214984 or	2SC2631-R or
	2214985	2SC2631-S

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q6303,Q6304	2215995 or 2213354 or 2213355	KTA1267-GR or 2SA933S-R or 2SA933S-S
Q6601,Q6602 Q6603,Q6604 Q6901	2215864 or 2212115 or 2213284 or 2213285	KTC3199-GR or 2SC2458-GR or 2SC1740S-R or 2SC1740S-S
Q6701,Q6702	2215896 or 2210755 or 2210756 or 2211732 or 2211733 or 2215895	KTC3200-BL or 2SC1775A-E or 2SC1775A-F or 2SC1845-F or 2SC1845-E or KTC3200-GR
Q6703	2215886 or 2211792 or 2211793 or 2215885	KTA1268-BL or 2SA992-F or 2SA992-E or KTA1268-GR
	Diodes	
D6000,D6001 D6002,D6003 D6004 D6005,D6006	223163 or 223205 or 223222 223163 or 223205 or 223222	1SS133 or 1SS270A or WG713A 1SS133 or 1SS270A or WG713A
D6010,D6011 D6012,D6013 D6014 D6306,D6307 D6701,D6702 D6906 D6703,D6704 D6705,D6706 D6901,D6902 D6707 D6904,D6905	223163 or 223205 or 223222 223163 or 223205 or 223222 224470512 22380260 or 22380035 224470512 22380337	1SS133 or 1SS270A or WG713A 1SS133 or 1SS270A or WG713A MTZJ5.1B RL1N4003 or GP104003E MTZJ5.1B D10XB60H
	Capacitors	
C6040,C6041 C6042,C6043 C6044 C6050,C6051 C6052,C6053 C6054 C6230,C6231 C6232,C6233 C6234 C6235,C6236 C6701,C6706 C6703,C6707 C6704 C6708 C6901,C6902 C6903 C6904,C6905 C6906,C6907	394584707 394584707 394584707 374721034 374721034 374721034 374724734 374724734 374724734 374724734 394621017 335622230 394680107 374722224 3504410 374721044 374733344 374721044	CE04W50V-47M(VZ),Elect. CE04W50V-47M(VZ),Elect. CE04W50V-47M(VZ),Elect. ECQ-B50V-103J,Plastic film ECQ-B50V-103J,Plastic film ECQ-B50V-103J,Plastic film ECQ-V50V-473J,Plastic film ECQ-V50V-473J,Plastic film ECQ-V50V-473J,Plastic film ECQ-V50V-473J,Plastic film CE04W6.3V-100M(VR),Elect. CK45F50V-223Z,Ceramic CE04W50V-1M(VR),Elect. ECQ-B50V-222J,Plastic film CE69W71V-15000M,Elect. ECQ-V50V-104J,Plastic film ECQ-V100-334J,Plastic film ECQ-V50V-104J,Plastic film
	Resistors	
R6000,R6001 R6002,R6003 R6004 R6010,R6011 R6012,R6013 R6014 R6030,R6031	417345624 417345624 417345624 417343924 417343924 417343924 417345614	R16J-5.6K,Carbon R16J-5.6K,Carbon R16J-5.6K,Carbon R16J-3.9K,Carbon R16J-3.9K,Carbon R16J-3.9K,Carbon R16J-560,Carbon

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R6032,R6033	417345614	R16J-560,Carbon
R6034	417345614	R16J-560,Carbon
R6040,R6041	5210258	N06HR1KBC,Trimming
R6042,R6043	5210258	N06HR1KBC,Trimming
R6044	5210258	N06HR1KBC,Trimming
R6050,R6051	417343924	R16J-3.9K,Carbon
R6052,R6053	417343924	R16J-3.9K,Carbon
R6054	417343924	R16J-3.9K,Carbon
R6060,R6061	415470224	R25J-2.2,NF carbon
R6062,R6063	415470224	R25J-2.2,NF carbon
R6064	415470224	R25J-2.2,NF carbon
R6070,R6071	415471214	R25J-120,NF carbon
R6072,R6073	415471214	R25J-120,NF carbon
R6074	415471214	R25J-120,NF carbon
R6080,R6081	415470224	R25J-2.2,NF carbon
R6082,R6083	415470224	R25J-2.2,NF carbon
R6084,R6090	415470224	R25J-2.2,NF carbon
R6091,R6092	415470224	R25J-2.2,NF carbon
R6093,R6094	415470224	R25J-2.2,NF carbon
R6100,R6101	4000201 or	RF-5EGKR22 or
R6102,R6103	4500245 or	BPR55FK0.22 or
R6104	4000132	RGC55 0.22,Metal plate
R6140,R6141	417342234	R16J-22K,Carbon
R6142,R6143	417342234	R16J-22K,Carbon
R6144	417342234	R16J-22K,Carbon
R6150,R6151	417341234	R16J-12K,Carbon
R6152,R6153	417341234	R16J-12K,Carbon
R6154	417341234	R16J-12K,Carbon
R6160,R6161	417343334	R16J-33K,Carbon
R6162,R6163	417343334	R16J-33K,Carbon
R6164	417343334	R16J-33K,Carbon
R6170,R6171	417344734	R16J-47K,Carbon
R6172,R6173	417344734	R16J-47K,Carbon
R6174,R6184	417344734	R16J-47K,Carbon
R6175,R6176	417344734	R16J-47K,Carbon
R6180,R6181	417344734	R16J-47K,Carbon
R6182,R6183	417344734	R16J-47K,Carbon
R6185,R6186	417344734	R16J-47K,Carbon
R6200,R6201	417341014	R16J-100,Carbon
R6202,R6203	417341014	R16J-100,Carbon
R6204	417341014	R16J-100,Carbon
R6230,R6231	453630824	RNU1WCJ-8.2,Metal
R6232,R6233	453630824	RNU1WCJ-8.2,Metal
R6234	453630824	RNU1WCJ-8.2,Metal
R6235,R6236	453630824	RNU1WCJ-8.2,Metal
R6240,R6241	417342244	R16J-220K,Carbon
R6242,R6243	417342244	R16J-220K,Carbon
R6244	417342244	R16J-220K,Carbon
R6306	417341034	R16J-10K,Carbon
R6307,R6309	417344714	R16J-470,Carbon
R6308,R6310	417344724	R16J-4.7K,Carbon
R6605,R6901	443521004	RS1/2WBJ-10,Metal oxide
R6631,R6632	417341024	R16J-1K,Carbon
R6633,R6634	417341024	R16J-1K,Carbon
R6701,R6707	417342234	R16J-22K,Carbon
R6702,R6710	417341034	R16J-10K,Carbon
R6704	417344734	R16J-47K,Carbon
R6706	417342244	R16J-220K,Carbon
R6708	417343334	R16J-33K,Carbon
R6709	417345624	R16J-5.6K,Carbon
R6750,R6751	443523914	RS1/2WBJ-390,Metal oxide
R6902	417341024	R16J-1K,Carbon

CIRCUIT NO.	PART NO.	DESCRIPTION
RL6901,RL6902	Relays	
	25065584 or 25065516	NRL-1P10A-DC12-140 or NRL-1P10A-DC12-097
F6901A,F6901B F6902A,F6902B	Fuse holders	
	250113	SN5051
	250113	SN5051
F6901C	Label	
	29362252	15A/250V
JL6200A	Sockets	
	25051110	NSCT-6P897
JL6402A	25051088	NSCT-4P875
JL6802A	25051108	NSCT-4P895
JL6803A,JL6952A	25051109	NSCT-5P896
P6800A,P6801A	25051255	NSCT-3P1045
P995	2009990875UL	NSAS-6P1334
P6000B,P6001B	Plugs	
	25056010	NPLG-5P0960
P6002B,P6003B	25056010	NPLG-5P0960
P6004B	25056010	NPLG-5P0960
P6080,P6081	25055038	NPLG-2P29
P6082,P6083	25055038	NPLG-2P29
P6084	25055038	NPLG-2P29
P6301	25055042	NPLG-3P32
P6804A	25055701	NPLG-5P657
P6953A	25055806	NPLG-17P762
P931A	25055701	NPLG-5P657
P6011A	Retainer	
	27141860	(BUS-D)
D6904A	Heat sink	
	27160499	RAD-164
D6904B,D6905B	Screws	
	82143010	3P+10FN(BC)

Secondary circuit PC board (NAETC-8398-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
JL6952B	25051109	NSCT-5P896,Socket

Speaker terminal PC board (NAETC-8399-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
D6803,D6805 D6807	Diodes	
	223163 or	1SS133 or
	223205 or 223222	1SS270A or WG713A
L6803,L6804 L6805,L6806	Coils	
	231176S	S-1.3C <A>
	231176S	S-1.3C <A>
C6803,C6805	Capacitors	
	374721034	ECQ-B50V-103J,Plastic film
C6807	374721034	ECQ-B50V-103J,Plastic film
C6843,C6844	374721034	ECQ-B50V-103J,Plastic film <A>
C6845,C6846	374721034	ECQ-B50V-103J,Plastic film <A>
C6847,C6848	374721034	ECQ-B50V-103J,Plastic film <A>
C6853,C6854	374721024	ECQ-B50V-102J,Plastic film <A>
C6855,C6856	374721024	ECQ-B50V-102J,Plastic film <A>
C6857,C6858	374721024	ECQ-B50V-102J,Plastic film <A>
R6803,R6804	Resistors	
	417342204	R16J-22,Carbon <A>
R6805,R6806	417342204	R16J-22,Carbon <A>
R6813,R6814	417342204	R16J-22,Carbon <A>
R6815,R6816	417342204	R16J-22,Carbon <A>
RL6803,RL6805 RL6807	Relays	
	25065618	NRL-2P5A-DC24-158
	25065618	NRL-2P5A-DC24-158

CIRCUIT NO.	PART NO.	DESCRIPTION
	Terminals	
P6802	25060391	NTM-8PDMN322 <D>
	25060392	NTM-8PDMN323 <A>
P6803	25060389	NTM-4PDMN320 <D>
	25060385	NTM-4PDMN316 <A>
	Sockets	
JL6802B,JL6805B	25050281	NSCT-4P109
JL6803B	25050282	NSCT-5P110
	Holders	
P6850,P6851	27190926	KGPS-18RF

Speaker terminal F/C PC board (NAETC-8400-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Diodes	
D6600,D6602	223163 or	1SS133 or
	223205 or	1SS270A or
	223222	WG713A
	Coils	
L6600,L6601	231176S	S-1.3C <A>
L6602	231176S	S-1.3C <A>
	Capacitors	
C6600,C6602	374721034	ECQ-B50V-103J,Plastic film
C6640,C6641	374721034	ECQ-B50V-103J,Plastic film <A>
C6642	374721034	ECQ-B50V-103J,Plastic film <A>
C6650,C6651	374721024	ECQ-B50V-102J,Plastic film <A>
C6652	374721024	ECQ-B50V-102J,Plastic film <A>
	Resistors	
R6600,R6601	417342204	R16J-22,Carbon <A>
R6602,R6610	417342204	R16J-22,Carbon <A>
R6611,R6612	417342204	R16J-22,Carbon <A>
	Relays	
RL6600,RL6602	25065618	NRL-2P5A-DC24-158
	Terminals	
P6600	25060389	NTM-4PDMN320 <D>
	25060385	NTM-4PDMN316 <A>
P6602	25060387	NTM-2PDMN318 <D>
	25060388	NTM-2PDMN319 <A>
	Sockets	
P6804B	25051230	NSCT-5P1020
JL6805A	25051108	NSCT-4P895
	Plugs	
P6800B,P6801B	25055722	NPLG-3P678

Thermal detector PC board (NAETC-8402-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R6380	4000217	PTFL04BF471Q2N34B0 (80) ,Thermistor
R6381	4000220	PTFL04BC471Q2N34B0 (110) ,Thermistor
	Socket	
JL6402C	25051088	NSCT-4P875

Video terminal PC board ass'y (NAVD-8464-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q2001,Q2002,Q2003	22241946R2	NJM2595M
Q2004	22241779	LC74763-9836
Q2011	22241221R2	TC9164AF
Q2101	22242154R3	ADV7183A
Q2102	22278033DR2NE or	MPC2933T or
	22278033DR2JR	NJM2391DL1-33
Q2103	22278018ER2NE	MPC2918T
Q2104	22242155R3	ADV7172
Q2106,Q2107	22241465R2	LA7106MFP

CIRCUIT NO.	PART NO.	DESCRIPTION
Transistors		
Q2005,Q2201,Q2202	2216175R2 or 2213145R2	KTC3875-GR or 2SC2712-GR
Q2006,Q2007	2215510R2	RN1443
Q2008,Q2009,Q2022	2216185R2 or 2214375R2	KTA1504-GR or 2SA1162-GR
Q2010	2214530R2 or 2216220R2	RN2402 or KRA102S
Q2012,Q2013,Q2017	2215510R2	RN1443
Q2018,Q2020	2215510R2	RN1443
Q2023,Q2024,Q2025	2215510R2	RN1443
Q2105,Q6801,Q6802	2216330R2 or 2214460R2	KRC101S or RN1401
Q2108,Q2109	2216520R2	2SK3019
Diodes		
D2001,D2002,D2003	223234R2 or	1SS352 or
D2201,D2202	223269R2	1SS355
D6801,D6802	223234R2 or 223269R2	1SS352 or 1SS355
Coils		
L2001	231292J056R2	NCH-1572
L2002,L2007,L2101	231237K022R2 or	NCH-1471 or
L2104,L2105	233533K022R2	NCH-1587-022K
L2102,L2103	231237K220R2 or 233533K220R2	NCH-1477 or NCH-1587-220K
Oscillators		
X2001	3010363	HC-49/U0314.318M
X2002	3010364	HC-49/U0317.734M <A>
X2101	3010353R2	FCX-03-27MHz
Capacitors		
C2001,C2002,C2003	332101025R1	CK725B1H-102K1,Chip ceramic
C2004,C2005	394641007 or	CE04W16V-10M(VR) or
C2007,C2008	394741007	CE04W16V10M(SC),Elect.
C2006,C2009	332161040R1	CK725F1E-104Z1,Chip ceramic
C2010,C2011,C2012	342104704R1	CC725CH1H-470J1,Chip ceramic
C2013,C2014	394641007 or	CE04W16V-10M(VR) or
C2019,C2020	394741007	CE04W16V10M(SC),Elect.
C2015,C2021,C2022	332161040R1	CK725F1E-104Z1,Chip ceramic
C2016,C2017,C2018	342104704R1	CC725CH1H-470J1,Chip ceramic
C2023,C2024	394621017 or	CE04W6.3V-100M(VR) or
C2027,C2028	394721017	CE04W6.3V100M(SC),Elect.
C2025,C2026	332161040R1	CK725F1E-104Z1,Chip ceramic
C2029,C2030,C2033	332161040R1	CK725F1E-104Z1,Chip ceramic
C2031,C2032	394621017 or	CE04W6.3V-100M(VR) or
C2031,C2032	394721017	CE04W6.3V100M(SC),Elect.
C2041	342101002R1	CC725CH1H-100D1,Chip ceramic
C2042	342101804R1	CC725CH1H-180J1,Chip ceramic
C2043	342101804R1	CC725CH1H-180J1,Chip ceramic <A>
C2044	342100802R1	CC725CH1H-080D1,Chip ceramic <A>
C2045,C2046	342104704R1	CC725CH1H-470J1,Chip ceramic
C2047,C2048	342104704R1	CC725CH1H-470J1,Chip ceramic
C2049,C2057	394680107 or 394780107	CE04W50V-1M(VR) or CE04W50V1.0M(SC),Elect.
C2050	342104704R1	CC725CH1H-470J1,Chip ceramic
C2051,C2102	394624717 or 394724717	CE04W6.3V-470M(VR) or CE04W6.3V470M(SC),Elect.
C2052	332161040R1	CK725F1E-104Z1,Chip ceramic
C2053,C2065	394621017 or 394721017	CE04W6.3V-100M(VR) or CE04W6.3V100M(SC),Elect.
C2054	394683397	CE04W50V-0.33M(VR),Elect.
C2055	332101225R1	CK725B1H-122K1,Chip ceramic
C2056	374726824	ECQ-B50V-682J,Plastic film
C2058	374722234	ECQ-B50V-223J,Plastic film

CIRCUIT NO.	PART NO.	DESCRIPTION
Capacitors		
C2059	342102204R1	CC725CH1H-220J1,Chip ceramic
C2060	342102704R1	CC725CH1H-270J1,Chip ceramic
C2061	394684797 or 394784797	CE04W50V-0.47M(VR) or CE04W50V0.47M(SC),Elect.
C2063	375524744	MMT50V-474J,Plastic film
C2066,C2067,C2068	332161040R1	CK725F1E-104Z1,Chip ceramic
C2071,C2072	332161040R1	CK725F1E-104Z1,Chip ceramic
C2073,C2078,C2102	394624717 or 394724717	CE04W6.3V-470M(VR) or CE04W6.3V470M(SC),Elect.
C2090,C2101	332161040R1	CK725F1E-104Z1,Chip ceramic
C2091,C2092	394641007 or 394741007	CE04W16V-10M(VR) or CE04W16V10M(SC),Elect.
C2103	332161040R1	CK725F1E-104Z1,Chip ceramic
C2104,C2112,C2115	395541007R2 or 396041007R2	F93-16V-10M or TCFGA-1C106M8R,Chip tantal
C2105,C2106,C2107	332161040R1	CK725F1E-104Z1,Chip ceramic
C2108,C2109,C2111	332161040R1	CK725F1E-104Z1,Chip ceramic
C2110	332151030R1	CK725F1H-103Z1,Chip ceramic
C2113,C2214,C2216	332161040R1	CK725F1E-104Z1,Chip ceramic
C2118,C2120	332161040R1	CK725F1E-104Z1,Chip ceramic
C2121,C2122	342111024R1	CC725CH1E-102J1,Chip ceramic
C2123,C2125,C2126	332161040R1	CK725F1E-104Z1,Chip ceramic
C2124,C2131,C2135	332151030R1	CK725F1H-103Z1,Chip ceramic
C2128,C2129	342101204R1	CC725CH1H-120J1,Chip ceramic
C2130	332161040R1	CK725F1E-104Z1,Chip ceramic
C2132	373048234R2	ECHU16V-823J,Chip ceramic
C2133	373041034R2	ECHU16V-103J,Chip ceramic
C2134	332161040R1	CK725F1E-104Z1,Chip ceramic
C2136	394624717 or 394724717	CE04W6.3V-470M(VR) or CE04W6.3V470M(SC),Elect.
C2137,C2141,C2142	332161040R1	CK725F1E-104Z1,Chip ceramic
C2161,C2162,C2163	332161040R1	CK725F1E-104Z1,Chip ceramic
C2164,C2184	395541007R2 or 396041007R2	F93-16V-10M or TCFGA-1C106M8R,Chip tantal
C2171,C2172,C2173	337361055R2	CK732B1A-105K,Chip ceramic
C2174,C2175,C2176	337361055R2	CK732B1A-105K,Chip ceramic
C2177,C2180,C2181	394621017 or 394721017	CE04W6.3V-100M(VR) or CE04W6.3V100M(SC),Elect.
C2178,C2179	332161040R1	CK725F1E-104Z1,Chip ceramic
C2182,C2183	332161040R1	CK725F1E-104Z1,Chip ceramic
C2185,C2186	332161040R1	CK725F1E-104Z1,Chip ceramic
C2188,C2189	332161040R1	CK725F1E-104Z1,Chip ceramic
C2201,C2202	332101025R1	CK725B1H-102K1,Chip ceramic
C6881,C6882	332101025R1	CK725B1H-102K1,Chip ceramic
C6883,C6884,C6885	342111024R1	CC725CH1E-102J1,Chip ceramic
C6886,C6887,C6888	342111024R1	CC725CH1E-102J1,Chip ceramic
C6889,C6890	342111024R1	CC725CH1E-102J1,Chip ceramic
Resistors		
R2001,R2002,R2003	435031034R1	RN72K1J-103JE,Chip carbon
R2004,R2005,R2006	435037504R1	RN72K1J-750JE,Chip carbon
R2007,R2008,R2009	435037504R1	RN72K1J-750JE,Chip carbon
R2010,R2011,R2012	435037504R1	RN72K1J-750JE,Chip carbon
R2013,R2014,R2015	435037504R1	RN72K1J-750JE,Chip carbon
R2016,R2017,R2018	435037504R1	RN72K1J-750JE,Chip carbon
R2019,R2020,R2021	435037504R1	RN72K1J-750JE,Chip carbon
R2041,R2042	435032224R1	RN72K1J-222JE,Chip carbon
R2043,R2044	435032224R1	RN72K1J-222JE,Chip carbon
R2045,R2065	435031034R1	RN72K1J-103JE,Chip carbon
R2046,R2055	435031024R1	RN72K1J-102JE,Chip carbon
R2047,R2057	435034734R1	RN72K1J-473JE,Chip carbon
R2048,R2053	435036824R1	RN72K1J-682JE,Chip carbon
R2049	435033324R1	RN72K1J-332JE,Chip carbon

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R2050,R2058,R2059	435032214R1	RN72K1J-221JE,Chip carbon
R2051	435038244R1	RN72K1J-824JE,Chip carbon
R2052	435031524R1	RN72K1J-152JE,Chip carbon
R2054	435031214R1	RN72K1J-121JE,Chip carbon
R2056,R2061	435032724R1	RN72K1J-272JE,Chip carbon
R2060	435031234R1	RN72K1J-123JE,Chip carbon
R2062	435033334R1	RN72K1J-333JE,Chip carbon
R2063	435036804R1	RN72K1J-680JE,Chip carbon
R2064,R2110,R2113	435032224R1	RN72K1J-222JE,Chip carbon
R2066,R2067	435032214R1	RN72K1J-221JE,Chip carbon
R2070	435032204R1	RN72K1J-220JE,Chip carbon
R2071,R2072,R2073	435031044R1	RN72K1J-104JE,Chip carbon
R2074,R2075,R2076	435031044R1	RN72K1J-104JE,Chip carbon
R2077,R2078,R2079	435031044R1	RN72K1J-104JE,Chip carbon
R2080,R2081,R2082	435031044R1	RN72K1J-104JE,Chip carbon
R2083,R2084	435031044R1	RN72K1J-104JE,Chip carbon
R2085,R2086	435031044R1	RN72K1J-104JE,Chip carbon
R2088,R2173,R2174	435037504R1	RN72K1J-750JE,Chip carbon
R2089,R2090,R2175	435030004R1	RN72K1J-000JE,Chip carbon
R2091,R2096	435031024R1	RN72K1J-102JE,Chip carbon
R2092,R2097	435034714R1	RN72K1J-471JE,Chip carbon
R2093,R2098	435038204R1	RN72K1J-820JE,Chip carbon
R2094,R2095	435031214R1	RN72K1J-121JE,Chip carbon
R2101,R2102,R2103	435031024R1	RN72K1J-102JE,Chip carbon
R2104,R2105,R2106	435031024R1	RN72K1J-102JE,Chip carbon
R2107,R2108,R2115	435031024R1	RN72K1J-102JE,Chip carbon
R2109,R2111,R2112	435031014R1	RN72K1J-101JE,Chip carbon
R2114,R2145	435034724R1	RN72K1J-472JE,Chip carbon
R2116	435036814R1	RN72K1J-681JE,Chip carbon
R2121,R2122,R2123	435033304R1	RN72K1J-330JE,Chip carbon
R2124,R2125,R2126	435033304R1	RN72K1J-330JE,Chip carbon
R2127,R2128,R2129	435033304R1	RN72K1J-330JE,Chip carbon
R2130,R2131	435034724R1	RN72K1J-472JE,Chip carbon
R2132,R2133,R2143	435031014R1	RN72K1J-101JE,Chip carbon
R2134,R2135	435031224R1	RN72K1J-122JE,Chip carbon
R2141,R2142	435031224R1	RN72K1J-122JE,Chip carbon
R2144	435033304R1	RN72K1J-330JE,Chip carbon
R2161,R2163,R2165	435031014R1	RN72K1J-101JE,Chip carbon
R2162,R2164,R2166	435031044R1	RN72K1J-104JE,Chip carbon
R2167,R2169,R2171	435031014R1	RN72K1J-101JE,Chip carbon
R2168,R2170,R2172	435031044R1	RN72K1J-104JE,Chip carbon
R2176,R2177,R2178	435037504R1	RN72K1J-750JE,Chip carbon
R2181,R2182,R2183	435038204R1	RN72K1J-820JE,Chip carbon
R2184,R2185,R2186	435038204R1	RN72K1J-820JE,Chip carbon
R2187,R2188,R2189	435038204R1	RN72K1J-820JE,Chip carbon
R2190,R2191,R2192	435038204R1	RN72K1J-820JE,Chip carbon
R2201,R2202,R2203	435034754R1	RN72K1J-475JE,Chip carbon
R2204,R2205	435031024R1	RN72K1J-102JE,Chip carbon
R6912,R6913,R6914	435031014R1	RN72K1J-101JE,Chip carbon
R6915,R6916	435031014R1	RN72K1J-101JE,Chip carbon
R6917,R6918,R6919	435031014R1	RN72K1J-101JE,Chip carbon
R6922,R6923,R6924	435032234R1	RN72K1J-223JE,Chip carbon
R6925,R6926,R6927	435032234R1	RN72K1J-223JE,Chip carbon
R6928,R6929	435032234R1	RN72K1J-223JE,Chip carbon
	Relays	
RL2201,RL2202	25065645 or	NPL-2P1A-DC4.5-169 or
RL2203,RL2204	25065654 or	NRL-2P2A-DC4.5-172 or
RL2205	25065658	NRL-2P2A-DC4.5-173
RL6801,RL6802	25065664	NRL-2P2A-DC12-178

CIRCUIT NO.	PART NO.	DESCRIPTION
	Terminals	
P2001,P2002	25045730	NPJ-10PDBY518
P2003	25045728	NPJ-15PDBY516
P2201	25045814	NPJ-12PDGLR594
P6801	25045790 or 25045734 or 25045811	NPJ-6PDWRLEGP570 or NPJ-6PDWRLEGP522 or NPJ-6PDWRLEGP591
P6802	25045735	NPJ-2PDNT523
	Sockets	
JL6801A,JL6801B	25051096	NSCT-12P883
P2004	25051239	NSCT-14P1029
P2005	25051234	NSCT-9P1024
P6804	25051232	NSCT-7P1022
	Plug	
P2009B	25055236	NPLG-5P220

Display circuit PC board (NADIS-8406-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q7502	22241680AR2	M66005-0001AFP
	FL tube	
Q7501	212249A	HNA-16SM10T
	Remote sensor	
U7501	241336	PIC-37043TH2
	Transistors	
Q7503	2216175R2 or 2213145R2	KTC3875-GR or 2SC2712-GR
Q7581,Q7582 Q7583,Q7701	2216190R2 or 2214470R2	KRC102S or RN1402
	Diodes	
D7501	224550820R2 or 224660824R2	UDZS8.2B or HZU8.2B
D7502,D7504 D7508,D7701	223234R2 or 223269R2	1SS352 or 1SS355
D7581	225290T	SEL4110R
D7583	225291DT	SEL4910D-D
D7588	225374	SEL2E10C
	Coils	
L7501,L7502	233533M022R2 or 231237M022R2	NCH-1587-022M or NCH-1471
	Capacitors	
C7501,C7503 C7502	332161040R1 355783309	CK725F1E-104Z1,Chip ceramic CE04W50V-33M,Elect.
C7504,C7505 C7506	332154730R1 332154730R1	CK725F1H-473Z1,Chip ceramic CK725F1H-473Z1,Chip ceramic
C7507	375524744	MMT50V-474J,Plastic film
C7508,C7511 C7509	332161040R1 353721019	CK725F1E-104Z1,Chip ceramic CE04W6.3V-100M(S),Elect.
C7510,C7512	342101014R1	CC725CH1H-101J1,Chip ceramic
C7513,C7533 C7514,C7705	332161040R1 353721019	CK725F1E-104Z1,Chip ceramic CE04W6.3V-100M(S),Elect.
C7534	332154730R1	CK725F1H-473Z1,Chip ceramic
C7535,C7536	332161040R1	CK725F1E-104Z1,Chip ceramic
	Resistors	
R7501,R7502 R7503	435032214R1 435032734R1	RN72K1J-221JE,Chip carbon RN72K1J-273JE,Chip carbon
R7504,R7505 R7506,R7507	435033324R1 435031024R1	RN72K1J-332JE,Chip carbon RN72K1J-102JE,Chip carbon
R7581	435032214R1	RN72K1J-221JE,Chip carbon
R7582,R7588	435038204R1	RN72K1J-820JE,Chip carbon
R7583	435031814R1	RN72K1J-181JE,Chip carbon
R7611,R7621 R7612,R7622	435033314R1 435034714R1	RN72K1J-331JE,Chip carbon RN72K1J-471JE,Chip carbon

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R7613,R7623	435035614R1	RN72K1J-561JE,Chip carbon
R7614,R7624	435038214R1	RN72K1J-821JE,Chip carbon
R7615,R7625	435031224R1	RN72K1J-122JE,Chip carbon
R7616,R7626	435032224R1	RN72K1J-222JE,Chip carbon
R7617,R7627	435033924R1	RN72K1J-392JE,Chip carbon
R7618,R7628	435031234R1	RN72K1J-123JE,Chip carbon
R7631,R7641	435033314R1	RN72K1J-331JE,Chip carbon
R7632,R7642	435034714R1	RN72K1J-471JE,Chip carbon
R7633,R7643	435035614R1	RN72K1J-561JE,Chip carbon
R7634,R7644	435038214R1	RN72K1J-821JE,Chip carbon
R7635,R7645	435031224R1	RN72K1J-122JE,Chip carbon
R7636,R7646	435032224R1	RN72K1J-222JE,Chip carbon
R7637,R7647	435033924R1	RN72K1J-392JE,Chip carbon
R7638	435031234R1	RN72K1J-123JE,Chip carbon
	Relay	
RL7701	25065610 or 25065645 or 25065654 or 25065658	NRL-2P1A-DC4.5-156 or NPL-2P1A-DC4.5-169 or NRL-2P2A-DC4.5-172 or NRL-2P2A-DC4.5-173
	Switches	
S7611,S7612,S7613	25035714 or	NPS-111-S677 or
S7614,S7615,S7618	25035718	NPS-111-S681
S7621,S7622,S7623	25035714 or	NPS-111-S677 or
S7624,S7625,S7626	25035718	NPS-111-S681
S7627,S7628,S7629	25035714 or	NPS-111-S677 or
S7631,S7632,S7633	25035718	NPS-111-S681
S7634,S7635,S7636	25035714 or	NPS-111-S677 or
S7637,S7638,S7639	25035718	NPS-111-S681
S7641,S7642,S7643	25035714 or	NPS-111-S677 or
S7644,S7645,S7646	25035718	NPS-111-S681
S7647,S7648	25035714 or	NPS-111-S677 or
S7656,S7657	25035718	NPS-111-S681
	Sockets	
JL2501A	25051088	NSCT-4P875
JL7701A	25051089	NSCT-5P876
JL7801A	25051090	NSCT-6P877
P7501A	25052360 or 25052544	NSCT-23P2257 or NSCT-23P2441
P7502A	25052244 or 25052057 or 25051855	NSCT-11P2141 or NSCT-11P1844 or NSCT-11P1642
	Holder	
Q7501A	27191222A	(FL)

Vidoe 4 terminal PC board (NAVD-8409-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
C2501,C2502	342104714R1	CC725CH1H-471J1,Chip ceramic
C2503,C2504	332161040R1	CK725F1E-104Z1,Chip ceramic
	Resistors	
R2501,R2502	435033314R1	RN72K1J-331JE,Chip carbon
R2503,R2504,R2505	435037504R1	RN72K1J-750JE,Chip carbon
	Terminal	
P2503	25045823	NPJ-7PDB603
	Sockets	
JL2501B	25051088	NSCT-4P875
P2009A	2009990792UL	NSAS-10P1159
	Plug	
P2501B	25055371	NPLG-7P354

Front optical terminal PC board (NADG-8410-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Photo coupler	
U2601	24120108	GP1FA513RZ
	Coil	
L2601	233533M022R2 or 231237M022R2	NCH-1587-022M or NCH-1471
	Capacitors	
C2601	394621017 or 394721017	CE04W6.3V-100M(VR) or CE04W6.3V100M(SC),Elect.
C2602	332161040R1	CK725F1E-104Z1,Chip ceramic
	Resistor	
R2601	435032214R1	RN72K1J-221JE,Chip carbon
	Socket	
JL7503A	25051087	NSCT-3P874

Volume PC board (NASW-8411-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
C7515,C7516	332161040R1	CK725F1E-104Z1,Chip ceramic capacitor
S7502	25065611	EC16B24C25,Rotary encoder
JL7501B	25051089	NSCT-5P876,Socket

Headphone terminal PC board (NAETC-8412-1D/1E)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q7801	22241383R2	NJM4565M-D
	Transistor	
Q7802	2213631	RN1241-A
	Diode	
D7801	224470562	MTZJ5.6B
	Coils	
L7701,L7703	233533M022R2 or	NCH-1587-022M or
L7704	231237M022R2	NCH-1471
L7801,L7802	233533M022R2 or	NCH-1587-022M or
L7803,L7804	231237M022R2	NCH-1471
	Capacitors	
C7701,C7702	342111024R1	CC725CH1E-102J1,Chip ceramic
C7703	374722215	ECQ-B50V-221K,Plastic film
C7704	342101014R1	CC725CH1H-101J1,Chip ceramic
C7801,C7805	394641007 or 394741007	CE04W16V-10M(VR) or CE04W16V10M(SC),Elect.
C7802	342103304R1	CC725CH1H-330J1,Chip ceramic
C7803,C7807	332161040R1	CK725F1E-104Z1,Chip ceramic
C7804,C7806	394641017 or 394741017	CE04W16V-100M(VR) or CE04W16V100M(SC),Elect.
C7808,C7809	342101014R1	CC725CH1H-101J1,Chip ceramic
C7810	394642207 or 394742207	CE04W16V-22M(VR) or CE04W16V22M(SC),Elect.
	Resistors	
R7801	435031014R1	RN72K1J-101JE,Chip carbon
R7802,R7804	435034734R1	RN72K1J-473JE,Chip carbon
R7803	435034724R1	RN72K1J-472JE,Chip carbon
R7805	435032214R1	RN72K1J-221JE,Chip carbon
R7806	435033334R1	RN72K1J-333JE,Chip carbon
R7807	435034714R1	RN72K1J-471JE,Chip carbon
R7808	417344714	R16J-470,Carbon
R7809	417341034	R16J-10K,Carbonm
	Terminal	
P7705	25045385	YKB26-5153
P7801	25045698	YKB21-5296
	Plugs	
JL7701B	25055626	NPLG-5P588
JL7801B	25055627	NPLG-6P589
P2009B	25055236	NPLG-5P220