



SERVICE MANUAL

CD-95DR

4822 725 50906

This service manual explains them by extracting the different specifications from those of the CD-12LE(W), based on the CD-12LE(W). For both electrical and mechanical information on the after-sales service which is not stated, all information is described in the CD-12(W) service manual (Codenummer 4822 725 50872). The dispatch of the parts for after-sales service has to be referred to this service manual, with the first priority.


For this reason, please use this service manual with referring to the CD-12(W) service manual, without fail.

marantz®


Different Parts between MODEL CD-12(W) and MODEL CD-95DR(W)

PAGE	REF. DESIG.	CD-12LE(W)	CD-95DR(W)	DESCRIPTION
See Schematic Diagram	DY06	---	4822 130 32635	Chip Diode, MA151K
	DY51	---	4822 130 32508	Diode, RL103E/DSF10C
	DY52	---	4822 130 32508	Diode, RL103E/DSF10C
	QY10	---	4822 130 42737	Chip TR, 2SD1328(S) PKG TW
	QY11	---	4822 130 42737	Chip TR, 2SD1328(S) PKG TW
	QY12	---	4822 130 43398	Chip TR, 2SC2712 G
	QY13	---	4822 130 43398	Chip TR, 2SC2712 G
	QY14	---	4822 130 43398	Chip TR, 2SC2712 G
	SY09	---	4822 276 12455	Push Switch, Shuffle
	SY12	---	4822 276 12455	Push Switch, AMS
	VY51	---	4822 134 40865	Lamp, Play 12V 100MA Blue
	VY52	---	4822 134 40864	Lamp, Pause
	SS16	---	4822 277 30883	Slide Switch, SSS322 2C-2P
43	R231	4822 111 41271	4822 115 90166	Fuse Resister, 10 Ω G $\frac{1}{4}$ W
	R232	4822 111 41271	4822 115 90166	Fuse Resister, 10 Ω G $\frac{1}{4}$ W
45	SY01	4822 276 11559	4822 276 12455	Push Switch, Stop
	SY02	4822 276 11559	4822 276 12455	Push Switch, Pause
	SY03	4822 276 11559	4822 276 12455	Push Switch, Play
	SY05	4822 276 11559	4822 276 12455	Push Switch, Prev. Track
	SY06	4822 276 11559	4822 276 12455	Push Switch, Next
	SY07	4822 276 11559	4822 276 12455	Push Switch, FTS
	SY08	4822 276 11559	4822 276 12455	Push Switch, Time
	SY10	4822 276 11559	4822 276 12455	Push Switch, A B
	SY11	4822 276 11559	4822 276 12455	Push Switch, Repeat
	SY13	4822 276 11559	4822 276 12455	Push Switch, Reverse
	SY14	4822 276 11559	4822 276 12455	Push Switch, F F
	SY15	4822 276 11559	4822 276 12455	Push Switch, Previous Index
	SY16	4822 276 11559	4822 276 12455	Push Switch, Next Index
	T100	---	4822 218 10247	RC-5 IR Comander

CD-95DR(W) SCHEMATIC DIAGRAM

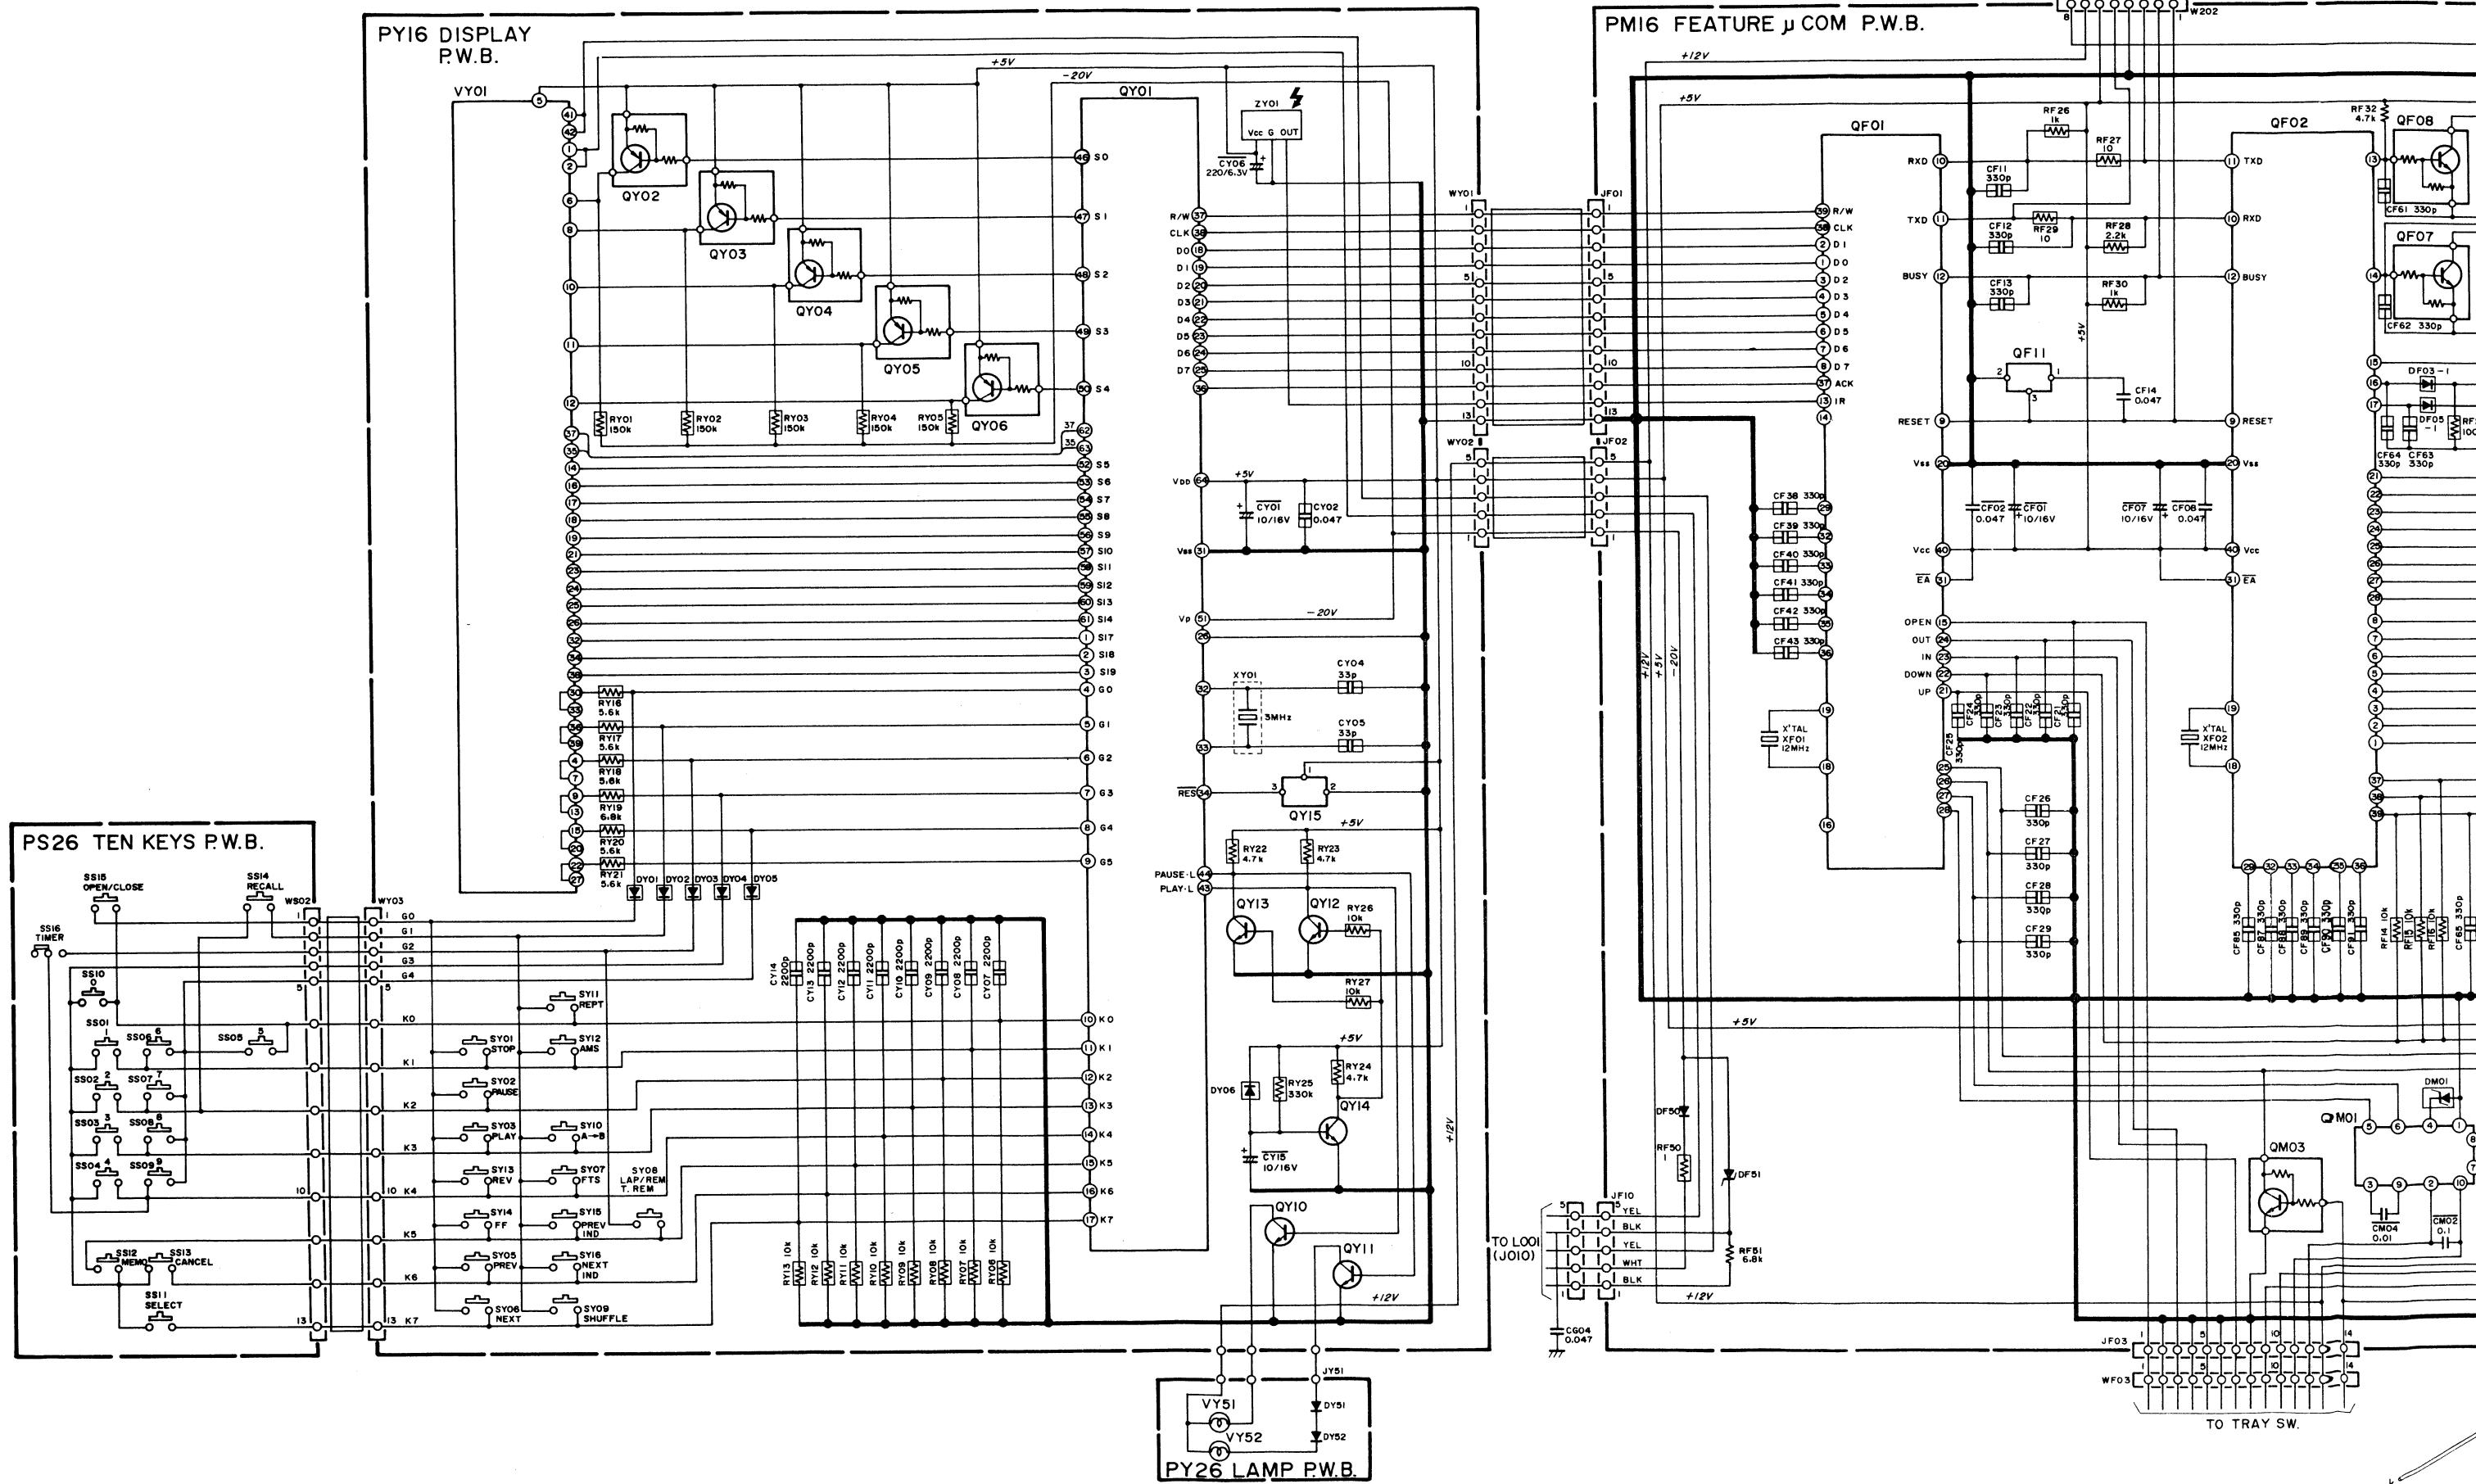

CD-95DR(W) SCHEMATIC DIAGRAM

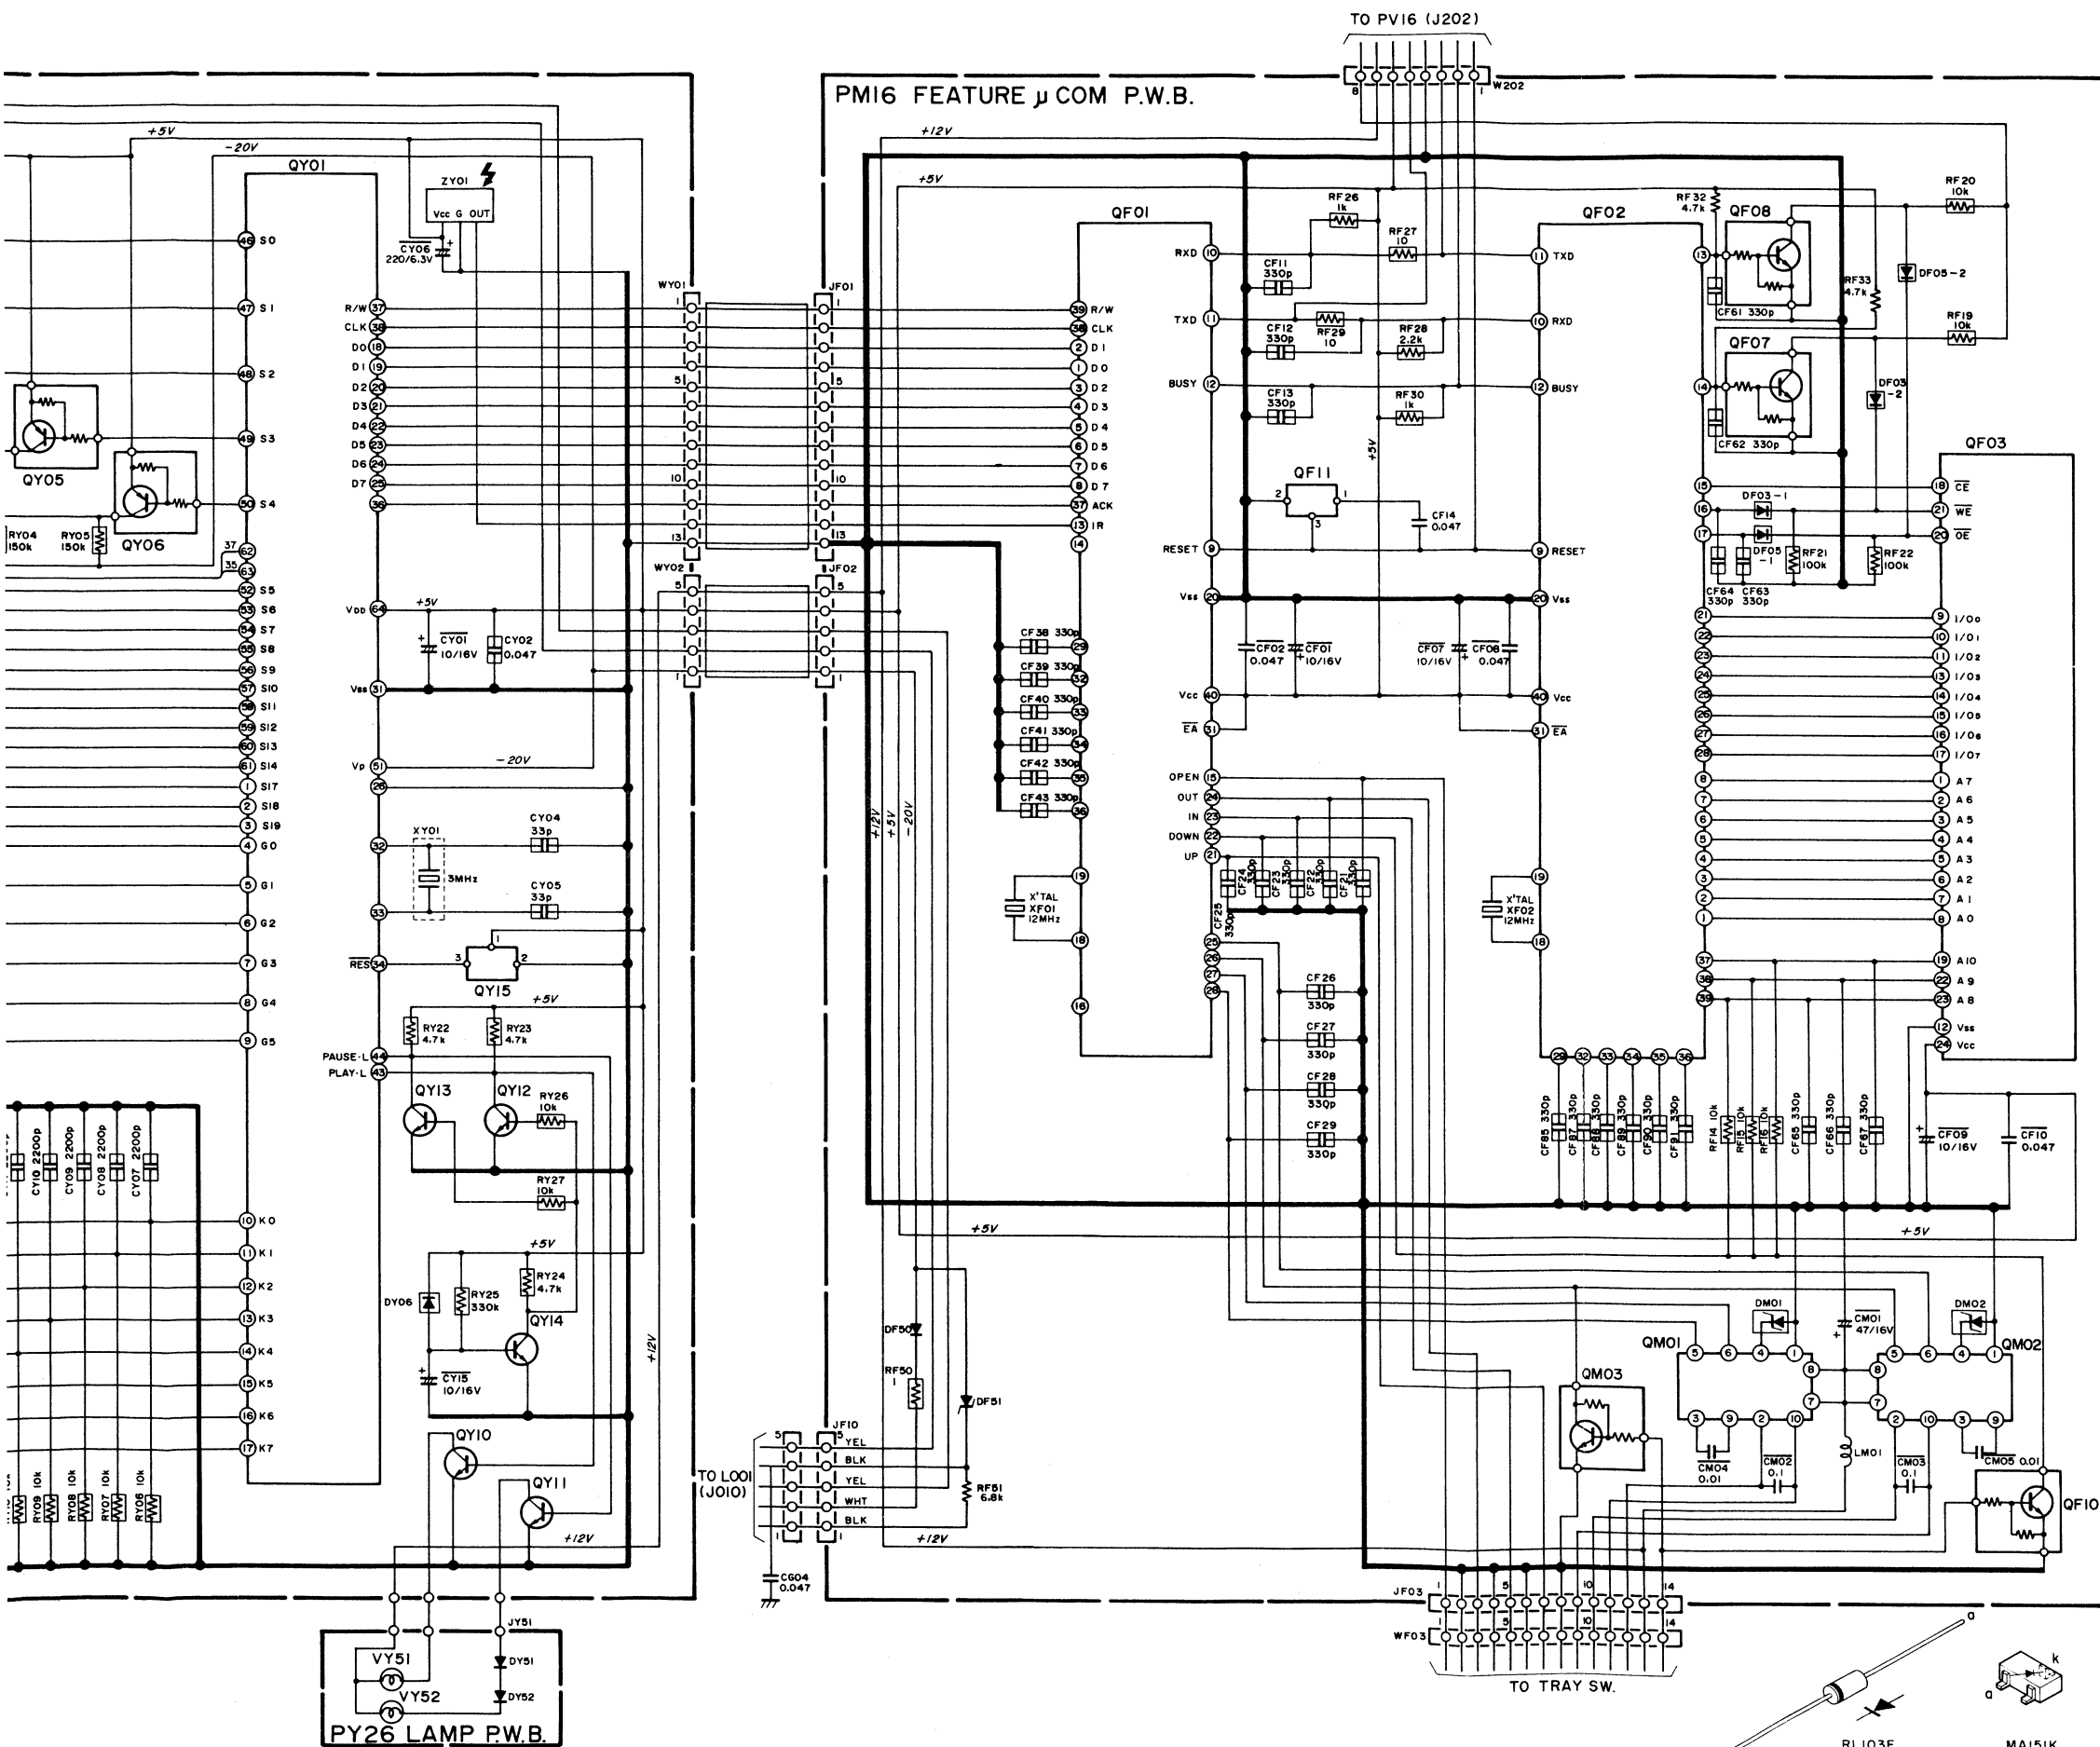

QY01
HC10212030
LC6554D

QY02~QY06
BA10005210
DTA114YK

QY10,QY11
HX413281S0
2SD1328(S)

QY12~QY14
HX327121A0
2SC2712(G)

QMO1,QMO2
HC10148030
LB1645N

QF01
HC10016260
MSM80C59

QF02
HC10015260
MSM80C51

QF03
HC10011000
MSM2816A,XL2816A

QF07,QF08,QF10,QMO3
BA20007210
DTC114YK

DF03,DF05
HZ20001020
MA151WK

DY01~DY06
HZ20003020
MA151K









DY51,DY52,DF50,DF53
HD20003000
RL103E,DSF10C

DMO1,DMO2
HZ30004050
02CZ8.2


DF51
HD30561000
5.6V ZENER

QY15
HC10010550
PST523D

QF11
HC10004550
PST524D

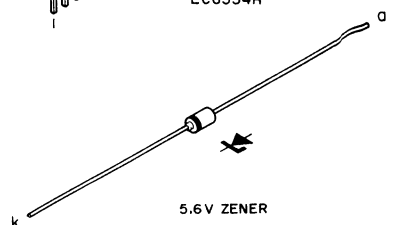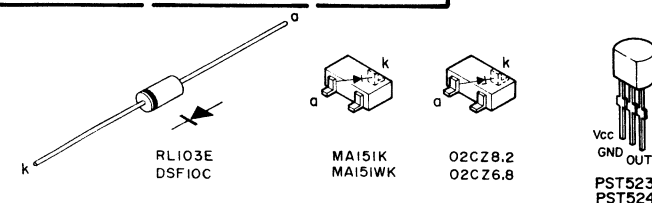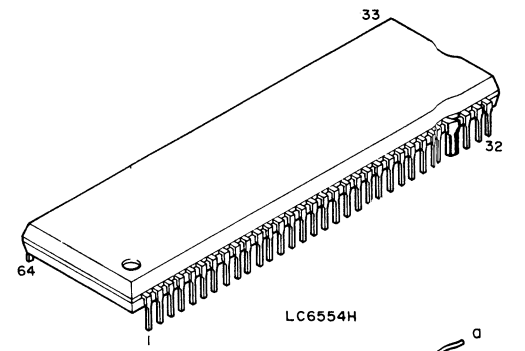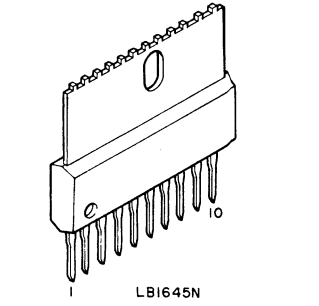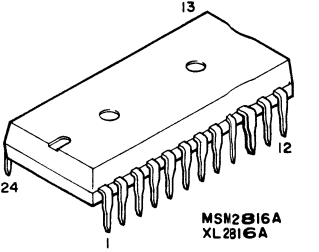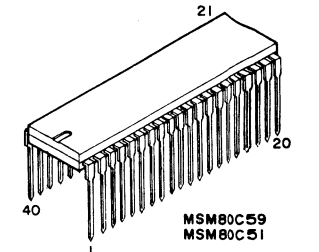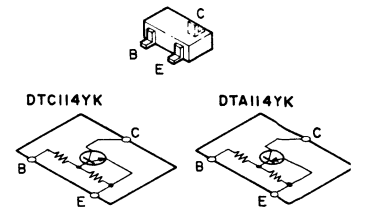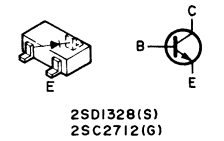

CD-95DR(W) EXPLODED VIEW

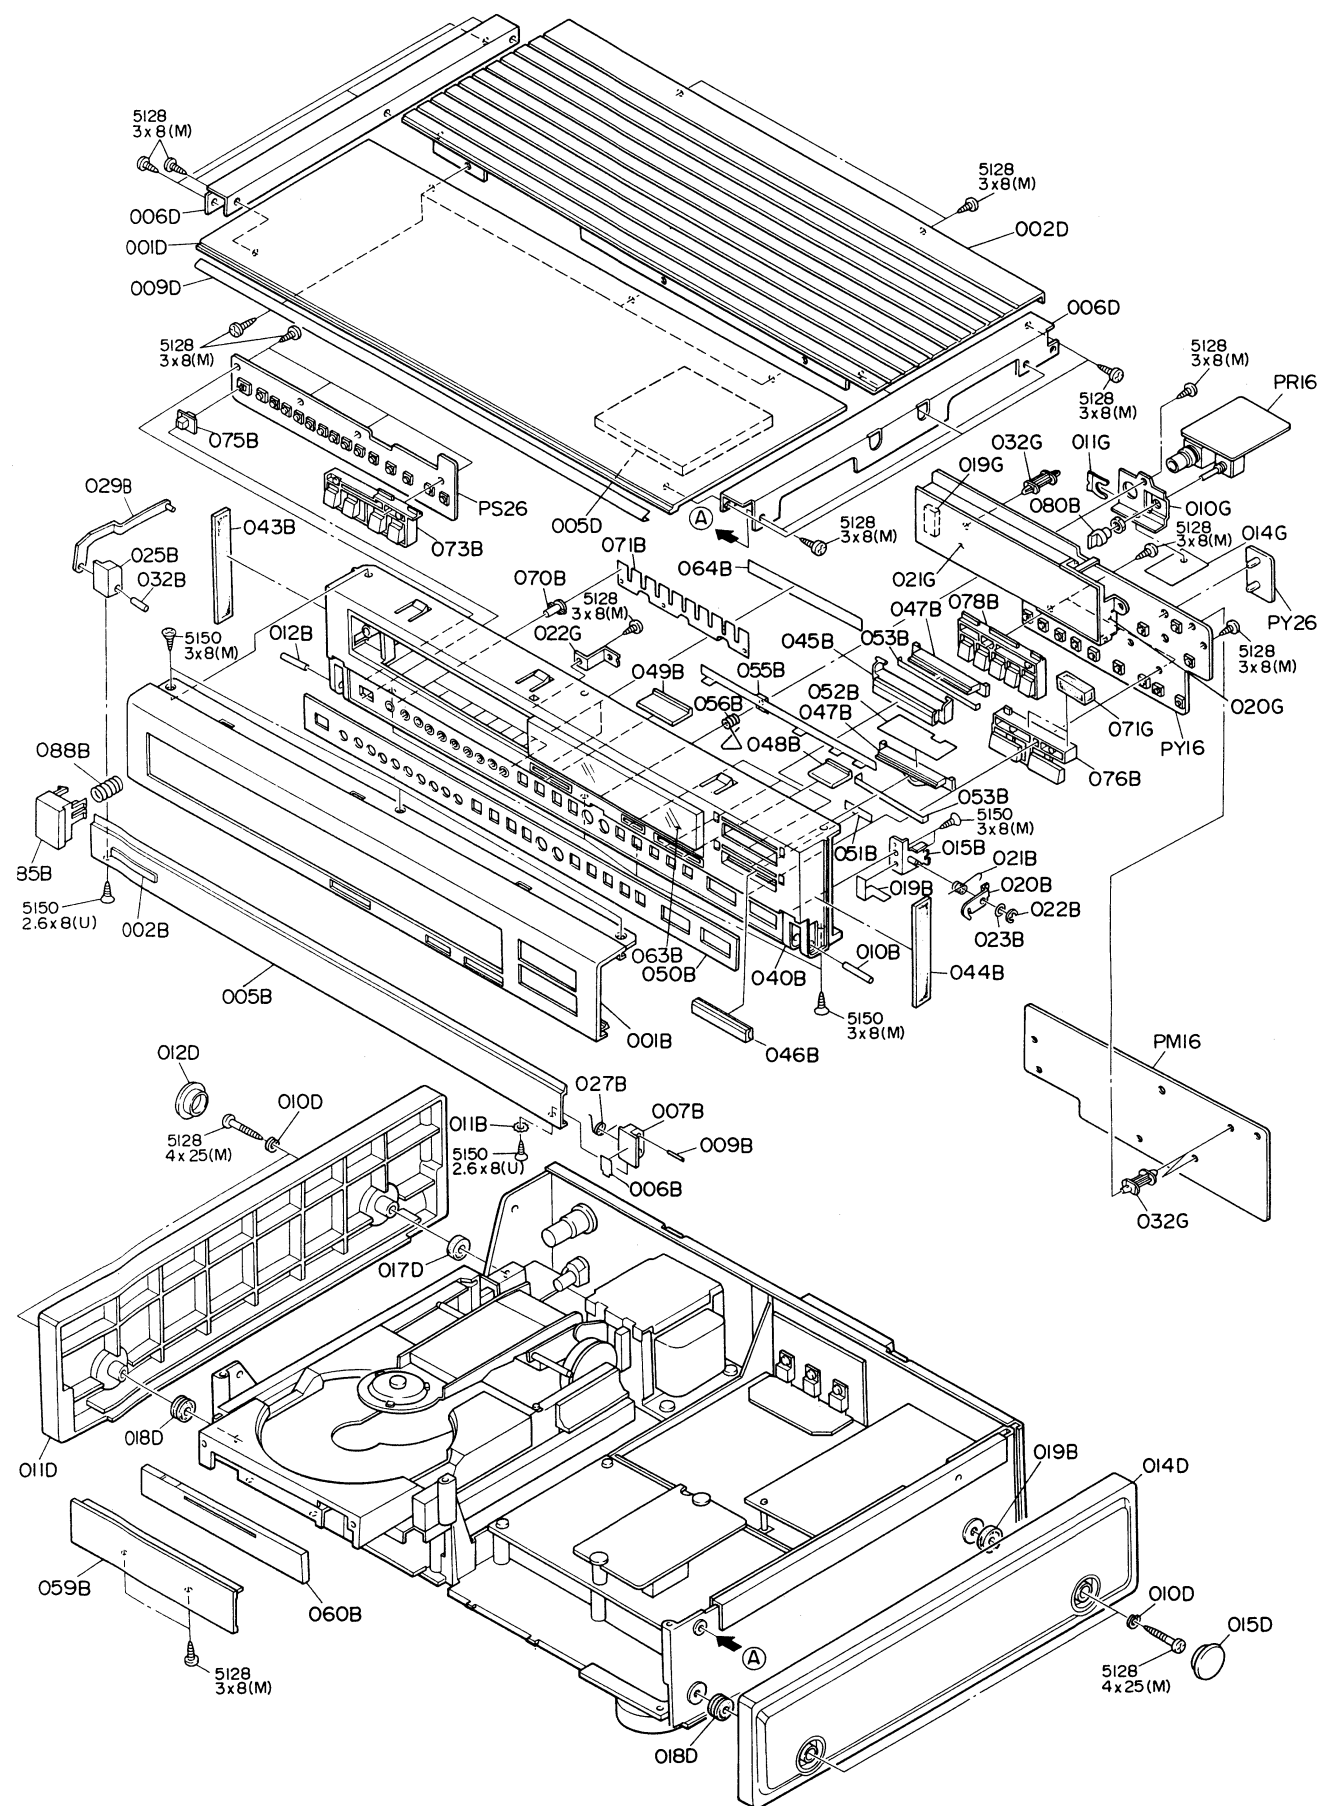

Different Parts between MODEL CD-12(W) and MODEL CD-95DR(W)

PAGE	REF. DESIG.	CD-12LE(W)	CD-95DR(W)	DESCRIPTION
See Exploded View	001B	---	4822 444 40286	Front Panel
	005B	---	4822 460 20781	Escutcheon, Front Panel (Door) Gold
	045B	---	4822 410 26885	Button, Play (Gold)
	046B	---	4822 410 26886	Button, Stop (Gold)
	047B	---	4822 381 10904	Lens
	048B	---	4822 410 26281	Button, FTS Track
	049B	---	4822 410 26283	Button, Open/Close (Gold)
	050B	---	4822 460 20782	Escutcheon, For Door
	055B	---	4822 492 70153	Leaf Spring
	056B	---	4822 460 70562	Spring, Earth
	075B	---	4822 462 41336	Knob, Timer
37	063B	4822 450 61315	4822 450 61022	Window
39	060G	4822 462 71577	4822 462 41336	Leg
	001T	---	4822 736 20572	User Manual, CD-95DR(W)
	L001	---	4822 146 21512	Transformer

Different Parts between MODEL CD-12(W) and MODEL CD-95DR(W)

PAGE	REF. DESIG.	CD-12LE(W)	CD-95DR(W)	DESCRIPTION
See Exploded View	001B	---	4822 444 40286	Front Panel
	005B	---	4822 460 20781	Escutcheon, Front Panel (Door) Gold
	045B	---	4822 410 26885	Button, Play (Gold)
	046B	---	4822 410 26886	Button, Stop (Gold)
	047B	---	4822 381 10904	Lens
	048B	---	4822 410 26281	Button, FTS Track
	049B	---	4822 410 26283	Button, Open/Close (Gold)
	050B	---	4822 460 20782	Escutcheon, For Door
	055B	---	4822 492 70153	Leaf Spring
	056B	---	4822 460 70562	Spring, Earth
	075B	---	4822 462 41336	Knob, Timer
37	063B	4822 450 61315	4822 450 61022	Window
39	060G	4822 462 71577	4822 462 41336	Leg
	001T	---	4822 736 20572	User Manual, CD-95DR(W)
	L001	---	4822 146 21512	Transformer



marantz®



V06610

SERVICE
MANUAL

CD-12LE

4822 725 50872

CD-12/DA-12/RC-12CD



marantz®

model CD-12LE

Compact Disc Player System

MARANTZ DESIGN AND SERVICE

Using superior design and selected high grade components, MARANTZ company has created the ultimate in stereo sound.

Only **original MARANTZ parts** can insure that your MARANTZ product will continue to perform to the specifications for which it is famous.

Parts for your MARANTZ equipment are generally available to our National Marantz Subsidiary or Agent.

ORDERING PARTS:

Parts can be ordered either by mail or by telex. In both cases, correct part number has to be specified.

The following information must be supplied to eliminate delays in processing your order:

1. Complete address
2. Complete part numbers and quantities required
3. Description of parts
4. Model number for which part is required
5. Way of shipment
6. Signature: any order form or telex must be signed otherwise such part order will be considered as null and void.

PARTS ORDERING

Parts may be ordered at the following addresses:

AUSTRIA HORNYPHON Vertriebsgesellschaft GmbH Wienerbergstrasse 1 A-1101 Wien Austria Telex: 132.332	FINLAND MARANTZ DIVISION OF OY PHILIPS Ab Kaivokatu 8 00100 Helsinki Finland Telex: 124611	GREAT BRITAIN MARANTZ AUDIO U.K. Ltd Unit 15/16 Saxon Way Industrial Estate Moor Lane Harmondsworth UB7 0LW Great Britain Telex: 935196	SAUDI ARABIA AL ALAMIAH ELECTRONICS P.O.Box 5954 University Street Riyadh 11482 Saudi Arabia Telex: 401530	SWITZERLAND DYNAVOX ELECTRONICS Route de Villars 105 1701 Fribourg Switzerland Telex: 942377
BELGIUM SVD DIVISION MARANTZ Industrialaan 1 1720 Groot-Bijgaarden Belgium Telex: 24466	FRANCE MARANTZ FRANCE 4 Rue Bernard Palissy 92600 Asnières France Telex: 611651	GREECE SHERTON ELECTRONICS S.A. P.O.Box 21025 Hippokratous Street 188 Athens 11471 Greece Telex: 216.795	SOUTH AFRICA MARANTZ DIVISION OF PHILIPS S.A. Main Road Martindale P.O. Box 58088 Newville 21114 South Africa	TURKEY DOGRUOL Ltd. I.M.C. 6 Blok N°6310 Unkapani Istanbul Turkey Telex: 22085
CHILE MARANTZ DIVISION OF PHILIPS S.A. AV. Santa Maria, 0760 Casilla 2687 Santiago Telex: 240.239	GERMANY MARANTZ GERMANY GmbH Max-Planck-Strasse 22 6072 Dreieich 1 Germany Telex: 529821	JAPAN MARANTZ JAPAN, Inc. 35-1, 7-chome, Sagami-cho Sagami-hara-shi, Kanagawa Japan	SPAIN PHONO S.A. Ignacio Iglesias 10 Badalona (Barcelona) Spain Telex: 58355	MALTA CACHIA & GALEA Republic Street, 68D Valletta Telex: 1682
DENMARK MARANTZ DIVISION OF PHILIPS SERVICE A/S Prags Boulevard 80 Postboks 1919 DK-2300 København S Denmark Telex: 31201	THE NETHERLANDS Eipro Marantz Wint Hortlaan 28 3526 KV Utrecht The Netherlands Telex: 4748	KUWAIT AL ALAMIAH ELECTRONICS Ussama Building Fahd al Saleem Street P.O.Box 23781 Safat-Kuwait Telex: 22694	SWEDEN MARANTZ DIVISION OF PHILIPS Försäljning AB Tegeluddsvägen 1 S-115 84 Stockholm Sweden Telex: 14060	PORTUGAL MARANTZ Divisao philips S.A. service Ourela-carnaxide 2795 LinDA-A-VELHA Telex: 43906
	NORWAY MARANTZ DIVISION OF PHILIPS A/S Sandstuvøien 40 0680 Oslo 6 Norway Telex: 72640	ITALY MARANTZ ITALIANA S.P.A. Via Chiesa, 74 20126 Milano Italy		

All of the above locations are fully equipped to take care of your total service needs. Because various countries have differing configuration requirements, it is necessary that you contact the service facility in your particular country. In the event that there is no service location listed for your country, please, contact the nearest facility for the necessary assistance.

In case of difficulties, do not hesitate to contact the Technical Department at abovementioned address.

TABLE OF CONTENTS


INTRODUCTION	3
1. P.W. BOARDS	4
2. LASER RADIATION SAFETY	4
3. NOTES ON ELECTROSTATIC DAMAGE	5
4. TRANSPORTATION SCREWS	5
5. CD-12	6
ELECTRICAL MEASUREMENT AND DJUSTMENTS	6
INITIATION OF THE SERVICEING ROGRAMME OF THE μ P.	6
FAULTFINDING METHOD	7
PRACTICAL HINTS	7
DETAILED TROUBLESHOOTING METHOD	8
LOADING TRAY MECHANISM	20
6. DA-12	22
ANALOGUE MUTING	22
INPUT/TAPE MONITOR CHANGEOVER	24
JITTER KILLER CIRCUIT	25
7. CD-12 COMPONENT LOCATIONS	27
8. DA-12 COMPONENT LOCATIONS	30
9. RC-12CD COMPONENT LOCATIONS	34
10. CD-12 EXPLODED VIEW AND PARTS LIST	36
11. CD-12 ELECTRICAL PARTS LIST	42
12. DA-12 EXPLODED VIEW AND PARTS LIST	46
13. DA-12 ELECTRICAL PARTS LIST	50
14. RC-12CD EXPLODED VIEW AND PARTS LIST	54
15. RC-12CD ELECTRICAL PARTS LIST	56
16. TECHNICAL SPECIFICATIONS	58
17. SCHEMATIC DIAGRAM	59

How to use this service manual

- The "Common parts" which Marantz Japan, Inc. has established are eliminated from this service manual.
- These "Common parts" are applied to all models in the service manuals arranged and issued by MJJ.
- To indicate clearly the common parts in the schematic diagram, a line is drawn above or under the Ref. Desig. No. of applicable parts.
- "Common parts" can be supplied from the Marantz service center as ever.
In case of ordering, please establish the parts number of 12 N/C'S following the procedure mentioned in this service manual "How to establish the parts number for common parts".

- 1) Please correctly write the parts number of 12 N/C'S following the rule.

COMPACT DISC SYSTEM CD-12LE

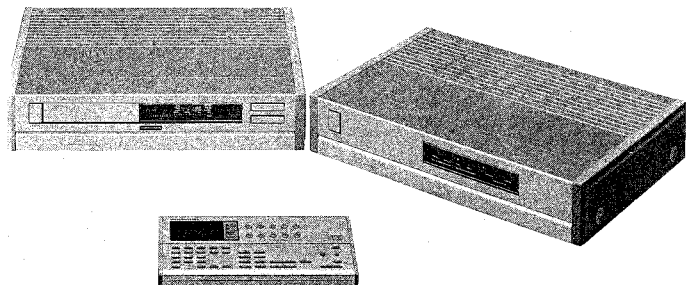

**CLASS 1
LASER PRODUCT**

INTRODUCTION

This service manual are prepared for use by Authorized Warranty Station and contains service information for Marantz Compact Disc System.

Servicing information and voltage data included in this manual are intended for use by the knowledgeable and experienced technician only. All instructions should be read carefully. No attempt should be made to proceed without a good understanding of the operation of the Compact Disc System.

The parts list furnishes information by which replacement parts may be ordered from the Marantz Company. A simple description is included for parts which can be usually obtained through local suppliers.

1. P.W.BOARDS

As can be seen from the circuit diagram, the chassis of your Compact Disc System consists of the following units. Each unit mounted on a printed circuit board is described within the square enclosed by a bold dotted line on the circuit diagram.

Model CD-12

- 1. POWER/DEMO mounted on P.W. Board PD16
- 2. FEATURE μ -COM mounted on P.W. Board PM16
- 3. POWER SWITCH mounted on P.W. Board PP46
- 4. TEN KEYS mounted on P.W. Board PS26
- 5. SERVO mounted on P.W. Board PV16
- 6. SERVO MODULE mounted on P.W. Board PV26
- 7. DISPLAY mounted on P.W. Board PY16

Model DA-12

- 1. AUDIO DAC mounted on P.W. Board PA16
- 2. BALANCE AMP mounted on P.W. Board PA26
- 3. DEMO mounted on P.W. Board PD16
- 4. POWER SWITCH mounted on P.W. Board PP26
- 5. DIGITAL IN/OUT mounted on P.W. Board PJ16
- 6. POWER SUPPLY mounted on P.W. Board PP16
- 7. FUNCTION SWITCH/
PHONE mounted on P.W. Board PS16

Model RC-12CD

- 1. MAIN mounted on P.W. Board P506
- 2. KET mounted on P.W. Board P606

MEASURING EQUIPMENT AND TEST DISC REQUIRED FOR SERVICING

- DC voltmeter
- Distortion meter
- Low pass filter
- Spectrum analyzer
- Oscilloscope
- Phase meter
- Frequency counter
- Test disc

2. LASER RADIATION SAFETY

Protection of eyes from laser beam during servicing. This set employs a laser. Therefore, be sure to carefully follow the instructions below when servicing.

1. Laser Diode Properties

- Material: Al Ga As
- Wave Length: 0.78 μ m
- Emission Duration: Continuous
- Laser Output: Max. 0.11 mW

This output is the value measured at the objective lens surface on the light pen assembly.

- Classification: Class IIIB

2. During service, do not take the subchassis block apart and do not adjust the H F amp circuit. If there is a breakdown in the H F circuit (including laser diode), replace the entire subchassis block (including H F amp circuit board).

WARNING!!


When servicing, do not approach the laser exit with the eye too closely.

In case it is necessary to confirm laser beam emission, be sure to observe from a distance of more than 30 cm from the surface of the objective lens on the light pen assembly.

3. NOTES ON ELECTROSTATIC DAMAGE

When handling the laser diode or the MOS IC, be sure not to damage them with electrostatic. The electrostatic level charged in the human body and clothing varies with ambient conditions. However, simply walking will produce an electrostatic charge of more than several kV. With synthetic fiber clothing, an electrostatic charge of about 10 — 30 kV will be produced on a dry day. If the charged electrostatic voltage is applied to the electrode of the semi-conductor, the electrode may be damaged easily. When handling the laser diode or the MOS IC, pay attention to the following points.


1. Lay a conductive sheet on the work bench and ground it.
2. Ground the soldering iron.
3. Do not wear synthetic fiber gloves or clothing. During operation, be sure to put on the wrist strap shown below.

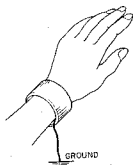

4. Use a conductive material to store the semi-conductors and short-circuit the electrodes or wrap them in aluminium foil to keep the potential at each electrode the same.

4. TRANSPORTATION SCREWS

To prevent the laser pick-up from damage during transportation, the pick-up is secured with two screws. After unpacking, be sure to remove two screws. After servicing, do not forget to fix the laser pick-up with two screws.

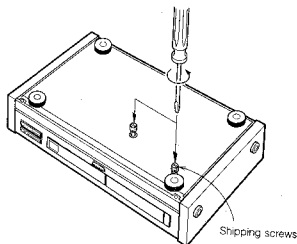

5. CD-12

ELECTRICAL MEASUREMENTS AND ADJUSTMENTS

Specification measurement



To measure the specification use can be made of audio test disc 4822 397 30085.

Use a 7th order filter, e.g. 4822 395 30204 (see Figure), to measure:

- Total harmonic distortion (THD).
- Intermodulation distortion.
- Signal-to-noise (S/N).

Laser power supply (POS. VOLT. SH.)

For check and preliminary adjustment of the laser supply see service manual C.D.M.-1.


Adjusting the laser supply

Play track 1 of test disc 4822 397 300096 (disc without defects).

Connect a DC voltmeter across resistor R309 on the servo PCB (= on emitter of transistor Q315 and ground).

Adjust the laser power supply with resistor 3180 until the voltage across resistor R309 is 575 ± 75 mV.

Adjusting the focus bandwidth

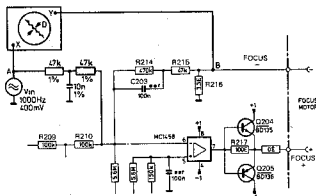

Make a measuring arrangement according to the figure.

Play track 1 of test disc 4822 397 300096 (disc without defects).

Adjust trimming resistor 3158 on PRE. AMPL + LASER PCB for a 180° phase difference between signals A and B. This corresponds with a minimum distance D in the Lissajous pattern.

R=47 k Ω - 1% 5322 116 54671

C=10 nF - 1% 5322 121 54154

Check of the AGC and offset circuits

(See SERVO PCB)

Play track 1 of test disc 4822 397 80096 (Disc without defects).

The voltage between pin 7 of IC Q303 (4/4) and $\perp$ should be $-4 \text{ V} \pm 2 \text{ V}$.

The voltage between pin 8 of IC Q302 (2/4) and $\perp$ should be $0 \text{ V} \pm 2 \text{ V}$.

INITIATION OF THE SERVICING PROGRAMME OF THE μ P

— Servicing position "0"

Simultaneously depress the STOP, PLAY and SEARCH $\Rightarrow$ buttons. Keep these three buttons depressed while the mains voltage is switched on. This is the STAND-BY mode, "0" appears on the display.

In this state it is possible to move the arm by means of the SEARCH FORW and SEARCH REV keys with a minimum torque to the outside and the inside resp.

This enables a check of the free motion of the arm across the disc.

— Servicing position "1"

From servicing position "0" the player can be brought in servicing position "1" by depressing the NEXT key.

In this state the laser emits light and the objective starts to focus. When the focal point has been reached, "1" appears on the display.

When no disc has been inserted the objective goes 16 x to and fro. Then the player reassumes servicing position "0".

As in servicing position "0" the arm can be moved across the diameter of the disc by means of the SEARCH FORW and SEARCH REV keys.

— Servicing position "2"

To be reached by depressing the NEXT key after servicing position "1" has been reached.

The turntable motor starts to run

On the display appears "2".

In preparation of the transition to servicing position "3" the arm is sent to the centre of the disc.

— Servicing position "3"

To be reached by depressing the NEXT key after servicing position "2" has been reached.

The radial control is switched on. The subcode information is ignored. MUSB is high so that the music information is released.

On the display appears "3".

(Dependent on the length of the lead-in track music will be reproduced after approx 1 min.)

In this state it is possible to move the arm by means of the SEARCH FORW and the SEARCH REV keys to the outside and to the inside resp. Now the motion is controlled by the μ and the arm moves by steps of 64 tracks as long as the key is depressed.

If one of the servicing positions 1, 2 or 3 is disturbed (e.g. braking or removing the disc) the player reassumes servicing position "0".

The servicing programme can be left by switching the mains switch (POWER ON/OFF) off and on. (Hardware reset).

FAULTFINDING METHOD

Preface

In course of the development of the troubleshooting guide for the Compact Disc it has become clear that a different approach from the one applied so far was required.

For, it is no longer possible to use the classic strategy, i.e. basing the troubleshooting method on a number of possible faults in the unit.

Practice has shown that a certain fault, with the associated symptom, can have a wide variety of causes. The reason is that this player incorporates a number of feedback loop configurations—which, moreover, might affect each other—and this impedes the obvious measurements.

The method below divides the player from diagram point of view into nine clearly distinguishable sub-groups and by performing some measurements, the sub-group being in failure can be isolated. Later the defective circuit can be further examined according to the method given.

PRACTICAL HINTS

Test discs

It is important to handle the test discs with great care. For, the troubles (black dots, fingerprints, etc.) are exclusively and unambiguously positioned. Damage can cause additional drop-outs etc. and as a result the conscious fault on this disc is no longer exclusive.

In that case it is no longer possible to check e.g. whether the track detector is working correctly.

Measurements on op-amps

In the electronic circuits of the servo systems op-amps are frequently being applied. These op-amps can be used as amplifiers, as filters, as invertors, as buffers, etc.

In those cases where feedback is applied in one way or the other, the voltage difference at the differential inputs inclines to zero. This applies both to DC and to AC.

The cause can be traced back to the properties of an ideal op-amp ($Z_i = \infty$; $G = \infty$; $Z_o = 0$).

In practice this means that it is nearly impossible to perform measurements on the inverting and non-inverting inputs of op-amps if one input is directly connected to ground.

In those cases only the output signal will be measurable.

That is why in most cases no AC voltages can be given to the inputs.

The DC voltages at the inputs are equal.

Stimulating with "0" and "1"

In the troubleshooting method certain pins should in a number of cases be connected to ground or be connected to the power supply voltage.

This way of acting offers the possibility to overrule certain circuits and to stimulate others.

In this way the diagnose time can be reduced.

In a number of cases the relevant pins appear to be op-amp outputs.

In this respect it should be mentioned that the outputs of the used op-amps are short-circuit protected.

This implies that the output of an op-amp can be made low (= usually ground potential) without consequences.

On the other hand should be pointed out that it is **not allowed** to connect the output of an op-amp directly to the power supply voltage.

I/Os of microprocessors should not be connected directly to power supply voltage.

These I/Os are allowed to be brought to "0" in case this is mentioned explicitly.

Selection of ground point

It is very important to select a ground point as close as possible to the test point.

Conditions for injecting

- It should be pointed out that injection of levels or signals from a strange source is **never** allowed to occur when the power supply voltage is lacking in the circuit in question.
- Naturally, the injected level is never allowed to exceed the power supply voltage of the circuit in question.

Continuous burning of the laser

- Disconnect plug J203 on the servo PCB and connect pin J203-9 (laser) of the cable connector to ground.

Now the focus loop and the radial loop are interrupted as well:

J203-7 (RE1 = Radial Error 1), J203-8 (RE2 = Radial Error 2) and J203-10 (FE = Focus Error).

The laser also burns continuously when the set is in service loop 2.

Irregular working of the display

Irregular working of the display when the set is opened and playing, might have been caused by incidental body effect in the region of the crystal oscillators.

Switching "off" and "on" of the mains voltage will eliminate this effect.

Indication of checkpoint

In the circuit diagram the checkpoints have been given a serial number (e.g. 12), to which the troubleshooting method will refer.

For oscillograms, amplitudes, time bases and position of set, see tables of checkpoints.

GENERAL CHECKPOINTS

In the detailed troubleshooting method following below a number of general conditions, required for proper functioning of the player, will **not** be repeated. Before starting the detailed troubleshooting method these general points should be checked.

- Ensure that disc and objective are clean (remove dust, fingerprints, etc.) and use undamaged discs.
- Convince yourself of the presence of the clock frequencies, viz:
 - 12 MHz for μP servo (pin 18)
 - 11.2896 MHz for FILTER-B IC (pin 19)
 - 2.82-5.64 MHz for free-running PLL circuit on the DECODER-A IC (pin 27)
 - 3 MHz for control and display μP (pin 33).
- Check whether all power supply voltages are present and have the correct level.
See PCB drawings.
- Check whether the two mutes (KILL and MUSB are inactive so that data are nowhere interrupted.
This should go high about 2 seconds after the mains voltage is switched on.
MUSB=pin 23 of the FILTER-B IC on the decoder PCB.
Normally this pin is high during play and low during search.

DETAILED TROUBLESHOOTING METHOD

A number of quick and efficient checks immediately give a definite answer on poorly functioning sections of the player.

To check the servo systems four service loops have been built in μP Q271.

Before calling in service loops, it should be checked (position power on) whether the bus (clock, data: pin 17 and 10 or 11 of μP Q271 resp.) is free. In other words, checking whether these lines do not have a short circuit to ground or supply voltage (level low or "high"). In such a case the buttons cannot be operated.

For troubleshooting the step-by-step method below is followed.

First step (with disc on turntable)

Bring the player in service loop 1 or 2

If one of the conditions for service loop 1 or 2 is not met, the questions below should be answered positively in the sequence given.

In practice this means that when one question has been answered positively, all the preceding circuits, to which the questions refer, are functioning well.

Example: if the eye pattern is present, we may conclude that the laser is working, the laser is in focus and that the turntable motor is running.

Note:

In some situations, certain faults in the radial servo circuit affect the focus servo circuit (e.g. if supply voltage +1 of IC Q301 in the radial circuit fails, the focus coil starts oscillating).

To determine if this situation exists, connect point 46 on the servo PCB to ground.

In this way, the influence of the radial servo circuit on the focus servo circuit can be eliminated.

- Is the laser giving light?
(Test method: see sub A)
- Is the angle disc-light pin within the tolerance, i.e. $90^\circ \pm 0.5^\circ$?
(Test method: see description mentioned in chapter "Mechanical measurements and adjustments" of the C.D.M. manual).
- Is the laser giving sufficient light?
(Test method: see sub C).
- Does the objective come in focus?
(Test method: see sub D).
- Is the turntable motor running and, if so, is it running at the correct speed?
(Test method: see sub E).

If the answers to questions 1 or 2 through E are positive, it should be possible to bring the player in service loop 1 or 2.

Second step (with disc on turntable)

Bring the player in service loop 3.

This means that the eye pattern on point 46 (on the decoder PCB has to be stable, while MSC on point 47 on the servo PCB has to be more stable too).

(Test method: see DECODER-A IC)

Note that the set is not only tracking a song in loop 3, but also playing the song, provided the digital circuit is working (however music cannot be heard).

If this does not work, return to service loop 2 and answer the questions below positively in the sequence given.

- Are $\overline{DO}$ and HFL detectors functioning?
(test method: see sub F)
- Is track detector functioning?
(test method: see sub G)

H. Is the radial control functioning properly?
(test method: see sub H)

If the answers to questions F, G and H are positive, it should be possible to bring the player in service loop 3.

Third step (with disc on turntable)

Note that the set is not only tracking a song in loop 3, but also playing the song, provided the digital circuit is working (music cannot be heard).

If this does not work, return to service loop 3 and answer the question below positively.

I. Is TL functioning, i.e. polarity of RE?
(test method: see sub I)

J. Is information transmission subcode functioning?
(test method: see DECODER-AIC)

Check the Q-channel signals.

If the answers to questions I and J are positive, it should be possible to bring the player in the Play mode.

Fourth step (with disc on turntable)

If no music is heard in position "play" or service loop 3 answer the last question.

K. Is digital decoder circuit functioning according to specification (test method: see II, FILTER-B IC and V. KILL CIRCUIT)

Sub. A. IS THE LASER GIVING LIGHT?

Test method

Bring the player in service loop 1 without placing a disc on the turntable. Now the laser is giving light for an unlimited period of time.

Another method for which the laser gives light during an unlimited period of time and the objective is standing still, is disconnecting plug J203 on the servo PCB and connecting point J203-9 of the cable connector to ground.

In case of power-on the laser should burn. This is checked with the aid of a light-sensitive component which is slightly screened from ambient light.

Hereafter follow some examples:

a. Connect photosensitive diode type BPW4, code number 4822 12032108, with correct polarity to an analogue multimeter (e.g. PM2412) at range 10 k Ω .

If the laser is burning, the meter will give virtually full scale deflection.

b. Connect LDR, code number 4822 116 10002, to digital multimeter PM2517E.

If the laser is burning, the resistance will drop to approx. 8 k Ω .

If the laser is not giving any light, proceed to Annex 1.

Sub. C. IS THE LASER GIVING SUFFICIENT LIGHT?

Test method (Test points on Pre-amp PCB)

— Interrupt the collector of Q203 on the servo PCB or ground the side of electrolytic capacitor C201. Disconnect plug J203 on the servo PCB and connect pin J203-9 (laser) of the cable connector to ground.

Now the laser should continue to give light while FE, RE1 and RE2 are interrupted.

— Place disc on turntable and switch power on.

— Directly inject with AF generator ($Z_i \leq 600$ Ohms) to test point ① FE a sine-wave signal between 25 and 60 Hz (exact frequency is player-dependent) and 2V_{pp}.

— Select such a frequency that the monitor diodes of the light pin give output signals as indicated on test points ⑤, ⑥, ⑦ and ⑧. Amplitude 40–80 mV.

— If the amplitude is not sufficient, proceed to Annex 1.

Sub. D. IS THE OBJECTIVE COMING INTO FOCUS?

Test method

● No disc on turntable

Switch power on and actuate Play button.

Now the arm should move inwards. Immediately after that the objective should move two times up-and-downwards (this happens during searching of the focusing point).

After this the action will stop.

These actions are software-controlled from the servo μ P. If this is not working, check μ P servo, end stage focus circuit or focus coil.

● With disc on turntable

Quick test procedure:

For a rough check on the working of the focus circuit, proceed as follows:

— place disc on turntable.

— set player in service loop 1.

— remove disc from turntable.

— now examine if the objective focuses by bringing a reflective object (e.g. mirror) above it.

Detailed test procedure

— Check Q203 (on servo PCB) as follows:

Check whether FN becomes, with each passage of the nominal focusing **low for a short period of time**. Only when focusing point FN has been found, FE will be released via Q203 (base will become negative).

Check whether base of Q202 is driven low from servo μ P (= FCO). If not, check servo μ P.

If so, proceed.

— Test focusing circuit as follows:

Interrupt the collector of Q203 on the servo PCB and disconnect **plug J203** on the servo PCB. Con-

nect pin J203-9 (laser) of the cable connector to ground.

Now the laser is burning continuously, FE has been released and the focus loop has been interrupted at test point ① (=FE) on servo PCB.

Testing of circuit, between test point ① and focusing coil

(Test points on servo PCB)

- Directly inject a sine-wave signal of 10 Hz, $2V_{pp}$, to test point ① by means of an AF generator ($Z_1 \leq 600 \Omega$).
- Check visually whether focusing coil "—" and thus objective too "—" responds.
- Check whether this voltage is $0.6 V_{pp}$ on test point ②.
- Check whether this voltage is $6 V_{pp}$ on test point ③.
- Check whether this voltage is $5 V_{pp}$ on test point ④.

Testing the subchassis (Test points on Pre Amp PCB, injection point on servo PCB)

- Place a disc on the turntable.
- Directly inject to test point ① a sine-wave signal between 25 Hz and 60 Hz at $2 V_{pp}$ by means of an AF generator ($Z_1 \leq 600 \Omega$). The exact frequency is player-dependent.
- Select such a frequency that the monitor diodes of the light pin give output signals as indicated on test points ⑤, ⑥, ⑦ and ⑧.
- Check test points ⑨, ⑩, ⑪ and ⑫.
- Check test point ⑬.
- Check test point ⑭.

Is the same as signal on test point ⑬ but amplitude is dependent on position of potentiometer 3138.

If all the checks are positive, close focus loop (insert plug J203). Now the focusing circuit should be able to operate. Reconnect transistor Q203.

It should be noted here that the amplitudes on test points ⑤ through ⑭ are slightly dependent on the characteristic of the monitor diodes.

Sub. E. IS TURNTABLE MOTOR RUNNING AND, IF SO, IS IT RUNNING AT THE CORRECT SPEED?

Test method (Test points on servo PCB)

- Place disc on turntable and bring set in service loop 2.
- If focusing point is found, check whether FCO is low on point ①.
If not, check focus circuit sub D.
If so, proceed.
- Now only power on, disconnect plug J201 on the servo PCB and check MSC=point ⑬ of cable connector J201 or point ④ on the decoder PCB.

If not, check Decoder-A IC (Q501) circuit.
If so, proceed.

- Reconnect plug J201, disconnect plug 15 on the preamplifier PCB and inject a DC signal to the cable connector of the motor or directly to the turntable motor.

The turntable motor should be running now.

(A DC voltage of 2.5 V approximately corresponds with the rpm during scanning of the innermost tracks).

In this condition the player should be brought in service loop 2 (depress Stop button while mains voltage is switched on).

If $DC < 2.5 V$ Figure G should be visible on test point ① (servo PCB).

If $DC > 2.5 V$ Figure H should be visible on test point ①.

If so, check turntable control circuit (circuit from point ① to turntable motor).

If not, check whether MSC is released by means of SSM at pin 16 of IC Q271.

This connecting plug J201 on the servo PCB and measure on pin 12 of cable connector J201.

If MSC is working now, check circuit around IC Q271.

- Take player out of service loop 2, depress Power-on button and then Play button and check eye pattern on point ⑬ (on decoder PCB).

To stabilize the eye pattern, bring light pin above tracks by hand, or by briefly (5 s) depressing Fast Forward button.

If eye pattern not point ⑬ is not present or unstable, check RF pre amplifier (see Annex IV).

- If eye pattern is correct, proceed.
- Check whether point ⑬ (=HFLS) on the servo PCB is correct in service loop 2 (see Figure Y). If not, check HFLS detector circuit (is circuit between point ⑬ and ⑭). If so, proceed.
Take player out of service loop 2 by depressing the power button.
- Check locking-in of PLL circuit of Decoder-A IC. (See CEFM signal pin 27: point ⑬)
If PLL is locking-in, proceed.
- Check timing signals on output of Decoder-A IC as indicated in "DECODER-A IC".
Is the digital decoder circuit functioning according to specification? If timing signals are correct, proceed.
- If MSC is still not functioning properly, replace the relevant specific digital IC according to the trial and error method with the aid of service IC box.
- MSC has to be present now.

Sub. F. ARE THE DO AND HFLS DETECTORS FUNCTIONING?

Test method (Test points on servo PCB)

- Starting point is:
HFLS = 1 when spot is exactly on track
HFLS = 0 between tracks (e.g. during track jumping)
DO = 0, or DO = 1 in case of drop-out
DO = 1, or DO = 0 when there is no drop-out.

Approximative method

(applicable in service loop 2)

- Place disc on turntable.
- Bring player in service loop 2.
- Check whether DO (test point ④) is not continuously "high". Normally test point ④ is "low", however small spikes of approximately 100mV are present in case of scratches on the disc.
- Check HFLS (test point ⑤).

Precise method

(can be checked in playing set only)

- Place test disc 5A on turntable. Switch power on and depress Play button.
- Select track no. 10: Check point ④.
HFLS pulses should be present.
- Select track no. 15: Check point ④.
DO pulses should be present. With this track the HFLS pulses on point ④ should also be present.
- In case of track jumping HFLS pulses are always present on point ④.

Sub. G. IS TRACK DETECTOR FUNCTIONING WELL?

Test method (Test points on servo PCB)

Switch off the offset circuit:

Loosen resistor 3315 (at the side where it is in contact with pin 8 of IC Q302).
Mount a 47 kΩ trimming potentiometer between +1 and -1 supply voltage (for example between pins 4 and 11 of IC Q302). Connect the wiper of the trimming potentiometer to the loose side of resistor 3315.

- Place a disc on the turntable.
- Bring the set in service loop 2.
- Adjust the signal on test point ④ symmetrically round 0V by means of the external 47 kΩ trimming potentiometer. The amplitude of the signal may change during this adjustment.
- Measure F.S. on point ④.
Here too the frequency variation depends on the eccentricity of the disc.
- Check point ④.
- Check point ④. Signal cannot be triggered.
- Check point ④.
- Switch the offset circuit on again.

Sub. H. IS THE RADIAL CONTROL FUNCTIONING PROPERLY?

Attention: The offset circuit (d-multiplier) and the AGC circuit (k-multiplier) are correction circuits. This means that under optimal conditions (new disc, minimum tolerances of components) the set may be working properly even if a fault is preset in offset or AGC circuit.

Test method (Testpoints on servo PCB)

- Place disc on turntable.
- Switch off AGC circuit (k-multiplier) and switch off offset circuit (d-multiplier).

Method:

Switching off AGC circuit: interconnect points ⑤ and ⑥ of IC Q309.

- Place a disc on the turntable.
- Bring the set in service loop 2.
- Adjust the signal on test point ④ symmetrically round 0V by means of the external 47 kΩ trimming pot. The amplitude of the signal may change during this adjustment.

- Bring set in service loop 3.
At this moment there is a high probability that the set is working.
If so, check d and k factor (see Annexes II and III).
If not, proceed.

- Bring set in service loop 2 and check signal on point ④.

The AC-component has to be 12-14 V symmetrically, around a DC level of zero volt.

If this is correct, proceed to e).

If this is not correct check following testpoints

- ②: value should be 0.7 V_{pp}
- ③: value should be 0.2 V_{pp}
- ⑤: value should be 0.25 V_{pp}
- ⑥: value should be 20 mV_{pp}
- ⑦: value should be 800 mV_{pp}

Note:

The frequency variation strongly depends on the eccentricity of the disc.

If points ② + ③ are OK, check point ④ again.

If ④ is OK, proceed.

- Check point ② (is RE + 650 Hz).
Value should be V_{pp} if so, proceed.
When the set is in the normal stand-by position 650 Hz at 300 mV is present on point ②.
- To check radial output stage, do not use a disc, only power on. Inject on points ④ and ⑤ respectively a sine-wave signal of 8 to 10 Hz 3 V_{pp}.
Then the radial motor will go back and forth.

At this moment radial tracking must be possible in service loop 3.

- Switch the AGC circuit on again.
If the original fault symptom is still present proceed

to Annex III:

Check of the k-factor.

- Switch the offset circuit on again.

If the original fault symptom is still present, proceed to Annex II:

Check of the d-factor.

Sub. I IS INT FUNCTIONING. O.E. POLARITY OF RE?
(Measure points on servo PCB)

Test method

Bring player in service loop 3 and measure INT on pin 12 of μP servo IC Q271.

A square-wave voltage (0-5V) should be measured on this pin. As a result of the frequency variation this square-wave is hard to trigger.

I DECODER-A IC

● Check the MC signal (pin 17; test point ④)

- In stand-by mode, the MC signal (Motor Control) corresponds to the figure below.

Note:

The repetition time of the MC signals is 11.3 μsec .

- Place a disc on the turntable.
- In position PLAY or SERVICE POSITION 3, the MC signal corresponds to the figure below.


Note:

During start-up the duty cycle is 98%, then the duty cycle of the signal becomes about 50%.

See also Service Manual CDM-1: "Check of the motor control".



POSITION: STAND BY



POSITION: PLAY (SECURING)



POSITION: PLAY (NORMAL)

● Check the HF signal on test point ⑤ (eye pattern)

- Place a disc on the turntable.
- The HF signal should be present and be stable in the PLAY mode and in: SERVICE POSITION 3 after the run-in track has been read.
- In SERVICE POSITION 2 and during reading of the lead-in track the HF signal is not stable.

Position of oscilloscope 0.5 $\mu\text{s}/\text{DIV}$.


Amplitude $\approx 1.5 \text{ V}_{\text{pp}}$



● Check the HFLD signal on test point ⑥

- Place a disc on the turntable.
- In the PLAY mode and in SERVICE POSITION 3 the HFLD signal is "high"; however, minor pulses may be present and in cause of disorders on the disc.
- In SERVICE POSITION 2 and during playback of track no. 15 of test disc 5A HFLD pulses are visible.

Position of the oscilloscope 5 ms/DIV



● Check if the MUTE signal (pin 11; test point ⑦) is "high"

When Filter-B IC is applied, the MUTE input will not be used.

● Check the CEFM signal (pin 27; test point ⑧)

- Place a disc on the turntable.
- In stand-by mode (only the main switch is depressed), the frequency lies between 2.82 MHz and 5.64 MHz.
- In the position PLAY and SERVICE POSITIONS 2 and 3, the frequency is 4.32 MHz.

● Check the Xin signal (pin 19; test point ⑨)

- The Xin frequency is 11.2896 MHz.
- If this frequency deviates, check test point 70; Xout signal, on Filter-B IC.
This frequency should also be 11.2896 MHz.

● Check the timing signals meant for Filter-B IC

- Place a disc on the turntable.
- Select one of the following positions: SERVICE POSITION 2 or 3, or position PLAY.
- Trigger the oscilloscope with the WSAB signal (test point ⑩, pin 39).
- Check signals:
 - WSAB at test point ⑩ (pin 39)
(Word Select from Decoder-A to Filter-B)
 - CLAB at test point ⑪ (pin 38)
(Clock from Decoder-A to Filter-B)and their interrelation.
- There must be activity at test point ⑫ (pin 37), DAAB signal (DATA from Decoder-A to Filter-B).




● **Check the EFAB signal (Error Flag from Decoder-A to Filter-B) at test point ④ (pin 36)**

- Place test disc 5A on the turntable.
- During playback, EFAB pulses should be present at test point ④ for soft braking of the disc and during fast search (F.Forward, F.Reverse).

Note:

Filter-B IC is capable of interpolating linearly 8 successive EFAB pulses.

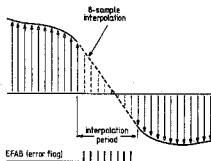

● **Check the Q-channel signals**

- Place a disc on the turntable.
- Select one of the following positions: SERVICE POSITION 3 or position PLAY.
- Trigger on the QRA signal (Q-channel Request Acknowledge) test point ③; pin 30.
- Check signals QRA at test point ③ (pin 30).

QCL at test point ④ (pin 31).

(Q-channel-clock)

and their interrelation.

- There should then be activity at test point ④ (pin 29) QDA (Q-channel Data).

Note:

The QRA request is initiated by decoder μ P (QRA "high"). Then Decoder-A answers this request (QRA goes "low"). With the next leading clock pulse (QCL) the QRA signal is rendered "high" again by the decoder μ P.

As soon as the decoder μ P has taken in enough information via QDA, QRA will go low again. That is why the QRA times vary each time.



● **Check the SSM signal (test point ⑤; pin 33) = Start-Stop turntable motor**

- Motor start pulse when test point ⑤ is "high" for ≥ 0.2 sec.
- Motor start pulse when test point ⑤ is "low" for ≥ 0.2 sec.

Note:

After the motor start pulse, SWAB information (Subcoding Word clock) will become visible at this point. The period time of that signals is 136 μ sec.

● **Check the subcode clock signals**

- Place a disc on the turntable.
- Select one of the following positions: SERVICE POSITION 3 or position PLAY.
- Trigger the oscilloscope with the SWAB signal at test point ⑤.

— Check the following signals:

SWAB at test point ⑤; pin 33

SCAB at test point ⑥; pin 35 (Subcode Clock from Decoder-A to Filter B)


SDAB at test point ⑥; pin 34 (Subcode Data from Decoder-A to Filter B)

and their interrelations.

Note:

While the burst of 10 clock pulses, appear on SCAB the Q-channel information is transferred on SDAB. Hereafter the P-bit indication follows.

The P-bit "high" between two bursts of 10 clock pulses in case of pause indication and "low" in case of music indication.

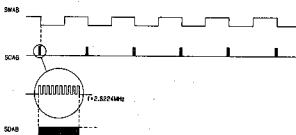

● **Check the CRI signal**

The CRI is "low" in case of track jumping. Player in position SEARCH.

II FILTER-B IC


● Check the signals between Decoder-A IC and Filter-B IC

See sub. "I Decoder-A IC".

- Check the X IN signal (test points ④ and ⑤)
- Check the timing signals meant for Filter B (WSAB, CLAB, DAAB signals; test points ①, ② and ③)
- Check the EFAB signal (test point ④)
- Check the subcode clock signals (SWAB, SCAB, SDAB signals; test points ⑧, ⑨ and ⑩).

● Check the DOBM signal (Digital Output)

- Place a disc on the turntable.
- Select the stand-by mode (only mains switch depressed).
- Trigger the oscilloscope with the SWAB signal (test point ⑧).
- Check the DOBM signal (test point ⑩; pin 14). An empty audio signal has a fixed pattern. See drawing, "Stand-by".
- Select the PLAY mode.
- Check the DOBM signal. See drawing "PLAY".

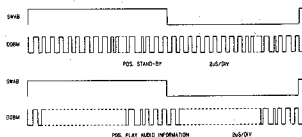

● In position SEARCH the ATSB signal is "low" test point ⑩; pin 22 (Attenuation Audio Signal)

- When the "μP panel" is applied, (a sub-printed circuit board) that houses IC Q271, test point ⑩ is not connected.

● Check the MUSB signal test point ⑩; pin 23 (Soft Mute)

This signal is "low" in positions: PAUSE

NEXT or PREVIOUS when jumping from one track to another.

Fast SEARCH when the Search button is kept depressed for some time.

VI FAVOURITE TRACK SELECT (FTS)

Attention:

When repairing a CD player it is important that the contents of the FTS memory (EEPROM) should not unnecessarily be damaged.

If no complaints are reported about the functioning of the FTS, a check of the functions of the EEPROM should be left undone.

The EEPROM IC is in the Stand-by mode when CE and RDY are both high.

Selftest of the FTS μP

During the self-test of the FTS μP, I/O Gate will not be tested.

Therefore this self-test can be executed without damage to the memory as indicated in General Test Points.

Annex I: LASER IS GIVING NO OR INSUFFICIENT LIGHT

Together with laser supply and the monitor diode the laser forms a feedback system.

A defect in the laser supply might thus result in destruction of the laser. Replacement of the laser (=new light pin) will not solve anything. The new laser will also be destroyed since the original fault in the laser supply is still present.

On the other hand it is impossible to check and repair a feedback system when one link is missing.

For this reason the so-called laser simulator, 3 is supplied. Code number 4822 395 30229.

This laser simulator consists of a PCB which contains the laser and monitor simulation, a switch to test the On/Off position and a number of sockets.

This PCB can be connected to the laser supply instead of the light pin so that the feedback system is closed.

Repair procedure:

Since the light pin is very sensitive to static charges, care should be taken that during measurements and adjustments of the laser power supply the potential of the aids and yourself equal the potential of the CD mechanism.

Detach light pin and connect laser simulator as follows: (connections on pre-amp PCB).

Take the flex PCB out of socket 11 and connect the simulator PCB with the socket.

Remove plug 16 and insert it in the socket on the simulator PCB.

Connect the plug with 4 wires to socket 16. Take out plug 17 and insert the plug with 1 wire in socket 17.

- Switch on the mains switch and ensure that the drawer is closed or else that the tray-end-in switch on the tray PCB (S004) is depressed. Now press the play key and check if the L-line of the servo μ P, pin 21-2 on the pre-amplifier PCB, goes "low".
- In rest position the current through the laser diode should be ≤ 1 mA. For NEG. VOLT. lasers this can be checked as follows:
Set the switch on the simulator PCB in the OFF position and the mains switch in the ON position. Turn trimming resistor 3180 counterclockwise (min. R) and measure the voltage across resistor 3194 on the pre-amp. PCB.
On pre-amplifier PCBs with discrete components turn resistor 3180 clockwise (min. R) and measure the voltage across resistor 3194.
The voltage should be ≤ 15 V.

Check of laser supply control

Set the switch on the simulator PCB in the ON position and measure the voltages between points +V and =V on the simulator PCB.

Resistor 3180 clockwise (max. R): $U_{+V-V} = 225 \text{ mV} \pm 45 \text{ mV}$.
On pre-amplifier PCBs with discrete components resistor 3180 counterclockwise (max. R): $U_{+V-V} = 225 \text{ mV} \pm 45 \text{ mV}$.

R3180 counterclockwise (min. R): $U_{+V-V} = 750 \text{ mV} \pm 150 \text{ mV}$.

On preamplifier PCBs with discrete components resistor 3180 clockwise (min. R): $U_{+V-V} = 750 \text{ mV} \pm 150 \text{ mV}$.

Set resistor 3180 in the mid-position.

This is a preliminary adjustment. After the simulator PCB has been removed the laser current must be adjusted.

Fine adjustment of laser current

- Playback track 1 of test disc 4822 397 30096 (Disc without defects). Connect a DC voltmeter across resistor 3308 on the SERVO PCB circuit diagram D. Adjust the laser power supply with resistor 3308 is $575 \text{ mV} \pm 50 \text{ mV}$.

Annex II: CHECKING d-FACTOR

(Test points on servo PCB)

- Switch off AGC circuit (k-multiplier) and switch off offset circuit (d-multiplier). See sub G and H.

Place disc on turntable and set player in service loop 2.

- Check points 42 and 43.
Value should be $0.7 V_{pp}$.
Frequency variation strongly depends on the eccentricity of the disc.
- Check points 44 and 45.
Value should be 250 mV_{pp} .
- Check point 46.
Value should be 200 mV_{pp} .
- Check point 47.
Value should be $2 V_{pp}$.
- Check points 48 and 49.
Value should be $10 V_{pp}$.
The signals are more sine-shaped now due to filtering out of 650 Hz.
- Point 49 is hard to measure since switch is in position Yoc and thus connected with input of op-amp Q302 (pin 9).
However, a signal of 200 mV_{pp} is present.
- Check point 50.
Value should be $9 V_{pp}$.
Bring the player in service loop 3. With a disc on turntable and the AGC and offset-circuits are still switched off.
- Check point 51.
- Check point 40 on beam A of oscilloscope and check point 49 on beam B of oscilloscope while oscilloscope is triggered with point 41.
- Switch on the AGC-circuit and offset circuit.

Annex III: CHECKING k-FACTOR

(Test points on Servo PCB)

a. Static

Switch power on **without** depressing the Play button. i.e. RC0=high; RC0=low so switch Ya is in position 0 and switch Yc is in position 0.

- Check point 43.
Value should be $9 V_{pp}$.
- Check point 46.
- On point 49 now appears a sine-wave signal of 650 Hz, 300 mV , and $180-45=135^\circ$ shifted in phase relative to signal on point 45.
- Check point 47.
Value should be $1.5 V_{pp}$.
- Check point 48.
Value should be $1 V_{pp}$.
- Check points 49, 50, 51 and 45 relative to each other.
Amplitudes are 5V.
- Check integrator IC Q303 (4/4)

b. Dynamic

Insert disc, select service loop 2 and check if the signal on point ④ equals to $7 V_{pp}$.

— Select service loop 3.

Now $RC0$ =high and $RC0$ =low.

So switch Y_a is in position 1.

Switch Y_c switches at $f=650$ Hz.

Point ④ is low; so point ⑤ is in phase point ⑤a.

Now fig. U should be present on point ⑤ with duty cycle jittering round 50%.

Annex IV: CHECKING RF PRE-AMPLIFIER

(measure points on pre-amp. PCB)










a. Check DC-voltages on transistor 6103, 6104, 6105, 6109, 6110, 6111.

b. For checking sensitivity, frequency and delay characteristic, proceed as follows:

— Take flex PCBs of sockets 10 and 11.

— Take plugs 18, 17, 12, 13, 14 and 15 out of sockets.

SERVO

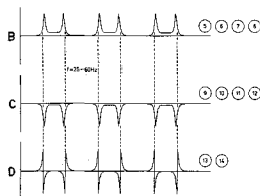

SERVO

Nr.	See	Position	Amplitude	f	Time base
1		see fault finding meth.			
2	P	see fault finding meth.	0.6 Vp-p	10 Hz	
3	P	see fault finding meth.	6 Vp-p	10 Hz	
4	P	see fault finding meth.	5 Vp-p	10 Hz	
5	B	see fault finding meth.	40-80 mV	25-60 Hz	
6	B	see fault finding meth.	40-80 mV	25-60 Hz	
7	B	see fault finding meth.	40-80 mV	25-60 Hz	
8	B	see fault finding meth.	40-80 mV	25-60 Hz	
9	C	see fault finding meth.	-2 V	25-60 Hz	
10	C	see fault finding meth.	-2 V	25-60 Hz	
11	C	see fault finding meth.	-2 V	25-60 Hz	
12	C	see fault finding meth.	-2 V	25-60 Hz	
13	D	see fault finding meth.	-8 V, +8 V	25-60 Hz	
14	D	see fault finding meth.	depends on R3158	25-60 Hz	
15		see fault finding meth.			
20		see fault finding meth.			
21	J	see fault finding meth.	12-14 Vp-p		
22	J	see fault finding meth.	0.7 Vp-p		
23	J	see fault finding meth.	0.7 Vp-p		
24	J	see fault finding meth.	0.2 Vp-p		
25	J	see fault finding meth.	0.25 Vp-p		
26	J	see fault finding meth.	20 mVp-p		
27	J	see fault finding meth.	800 mVp-p		
28	J	see fault finding meth.	800 mVp-p		
29	J	see fault finding meth.	6 Vp-p		
29	P	ON	0.3 Vp-p		
30		see fault finding meth.			
31		see fault finding meth.			
32	.	see fault finding meth.			
33	.	see fault finding meth.			
35	J	see fault finding meth.	200 mVp-p		
36	J	see fault finding meth.	2 Vp-p		
37	K	see fault finding meth.	10 Vp-p		
38	K	see fault finding meth.	10 Vp-p		
39	L	see fault finding meth.	0-4 Vp-p		A = 769 μ s B = 769 μ s
40	K	see fault finding meth.	9 Vp-p		A = 769 μ s B = 769 μ s
40	M	see fault finding meth.	0-4 Vp-p		A = 769 μ s B = 769 μ s
41	N	see fault finding meth.	6 Vp-p		A = 769 μ s B = 769 μ s
45	P	ON	9 Vp-p	650 Hz	
46	Q	ON	0-5 V	650 Hz	
47	P	ON	1.5 Vp-p	650 Hz	
48	P	ON	1 Vp-p	650 Hz	
49	R	ON	0-5 V	650 Hz	
50	S	ON	0-5 V	650 Hz	
51	T	ON	5-0 V	650 Hz	
52	U	service loop B	5 V	650 Hz	
52		see fault finding meth.			
55	Y	service loop A	5-0 V		
55	W	play (with test disc)	5-0 V		
56	W	play (with test disc)	5-0 V		
57		see fault finding meth.			
60	X	service loop A	5-3 V		
61	Y	service loop A	5-0 V		
62	Y	service loop A	5-0 V		
65	A	play	1 Vp-p		
66	G	see fault finding meth.	5-0 V		
66	H	see fault finding meth.	0-5 V		
67	J	see fault finding meth.			

BLOCK DIAGRAM WARDS INFOMATION

DAC0 - DAC3	Control bit for radial circuit	<u>SSM</u>	Motor Start-Stop signal
DAC	Current output for track jumping	<u>MUTE</u>	Mute signal
<u>DO</u>	Drop out detector signal	<u>MUSB</u>	Soft Mute signal
D1 - 4	Photodiode Currents	PD/OC	Phase detector-oscillator control
FE	Focus error signal	QCL	Q-channel Clock signal
HF	HF output for DEMOD	ODA	Q-channel Data signal
<u>HFLD</u>	HF detector output for DEMOD	QRA	Q-channel Request Acknowledge
MSC	Motor control signal	SCAB	Subcode clock Decoder-A to Filter-B
RE	Radial error signal (Amplified RE2 - RE1 currents)	SDAB	Subcode data Decoder-A to Filter-B
RE1	Radial error signal 1 (Summation of amplified currents D3 and D4)	SWAB/ <u>SSM</u>	Subcode Word/Start-Stop Motor signal
RE2	Radial error signal 2 (Summation of amplified currents D1 and D2)	WSAB	Word select Decoder-A to Filter-B
<u>TL/INT</u>	Track loss signal	WSBD	Word select Filter-B to DAC
Vc	Control voltage for turntable motor	XIN	Oscillator signal in Decoder-A
<u>ATSB</u>	Attenuation of Audio level in search position (cuesing)	XSYS	Oscillator signal OUT Filter-B
CEFM	Clock 4.3218 MHz	RDIR	Radial current switch control signal Normal, or Revers
CLAB	Clock signal Decoder-A to Filter-B	RP	Radial puls after Track Jump
CLBD	Clock signal Filter-B to DAC	FN	Focus Neutral
CRI	Counter Reset Inhibit	ANIN	
DAAB	Data signal Decoder-A to Filter-B	<u>HFLS</u>	HF Loss signal
DABD	Data signal Filter-B to DAC	<u>SRDO</u>	Signal Radial ON/OFF for Track jump
<u>DEEM</u>	Deemphasis ON-OFF signal	RCO	Switch Digital to Analogue
DOBM	Digital out signal	FC1, FC2	Focus UP/DOWN signal
EFAB	Error flag Decoder-A to Filter-B	<u>FCO</u>	Focus ON/OFF signal
IREF	Reference current	L	Laser ON/OFF signal
		BUSY	μ -COM Communication Clock
		RXD	μ -COM Communication Receive Data
		TXD	μ -COM Communication Telex Data


Loading Tray Mechanism

Cautions When Servicing


1. Installation of Tray and Tray Case

(Upon replacement of the tray case due to breakage, etc.)

- ① If the position with respect to the tray's front panel window is incorrect, loosen screws (A) and move the tray within the range of play of the hole to adjust. For the inclination of the tray, refer to diagram below.

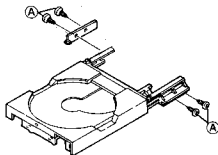


The tray should not be more than 0.4 mm above the rollers on the bottom side.




Adjust the inclination as well with screws (A).

- ② The tray's working force should be set to between 200 and 400 gr (when power is off).



2. If Tray has become detached downward




Take care in the following instances as the tray will become detached downward.

- The tray will become detached if pressed downward when there is no subchassis (CDM-1). (The same is true when the tray is closed with no subchassis.)

Use the following procedure to reinstall.

- ① Lower the lever and place the tray on the projection.



- ② Next, with the tray pressed down, lower the other lever and place the tray on its projection.



NOTE:


Be sure to lower only one lever at a time as the tray cannot be lifted if they are both lowered.

NOTE:


If the tray is forced back to its original position, the two pins in the tray case may bend.

3. If Subchassis (CDM-1) has been replaced

- ① The height of the subchassis turntable differs from one unit to the next, so it is necessary to adjust according to the height of the turntable so that the magnet clasper is not in contact with the clasper fitting. (Standard 2 ± 0.3 mm)



Clasper fitting height adjust screw

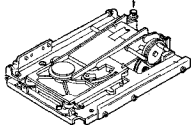


- ② When the height of the clasper fitting is adjusted, the position when the clasper is up must be readjusted. Use the following procedure.


Disc
clasper
position

When up Max. 43 mm
(Tray and clasper should not come
into contact when tray is opened and
closed.)

To the eye, this fitting appears
parallel to the chassis.




Clasper up position adjust screw

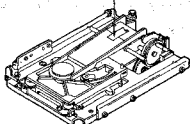

4. Others

- ① Refer to the diagram below to install the loading wire.

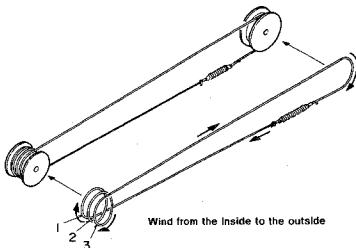


- ② All switches on the mechanism are of the socket type. If a switch breaks, remove the socket to replace.
- ③ Use to the structure of the hooks of the magnet clasper (094M), incline as indicated below to remove and install the magnet clasper when replacing it.



The narrowest hook inclines

- ④ When the tray is disassembled, take care of the up/down and front/rear directions of the POWER SW button and aluminum panels of the tray.

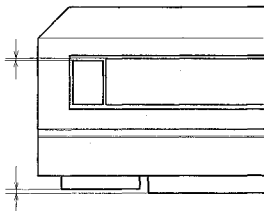

3. Twin PLL with memory method

PLL has reciprocal characteristics that low-speed (narrow-band) is preferable in the view of sound quality and high-speed (broad-band) is better in the view of decoder responsibility. Thus, we set two lines of PLL, high-speed and low-speed types. Clock with much jitter made by high-speed PLL (1st PLL) controls decoder, and clock with less jitter made by low-speed PLL (2nd PLL) controls digital filter and DAC, easily influenced by sound quality (clock for DAC is not supplied directly from low-speed PLL but through digital filter).

The method for making jitter margin high is:

- to position word memory which consists of 16 bit shift register before digital filter,
- store once the data with jitter from decoder in the memory,
- at the time that the data was stored for 1 word (16 bit), read out with less-jitter clock made by low-speed 2nd PLL to send to digital filter.

That is, jitter in data is to be cut by storing once the data in memory per word.

4. Circuits motion

1) Preamble detector (Q463-1/4 - 4/4, Q464-1/2, 2/2)
Detect head signal per sample of 16 bit data to output to phase comparator (Q465) as a synchronizing signals. The frequency is 88.2 kHz at 44.1 kHz sampling.

2) Second PLL (low speed)

It consists of:


- Phase comparator (Q465)
- Low pass filter for band-pass restriction (Q455, Q456)
- VCO (Q457) which changes oscillation frequency by voltage output of L.P.F.
- Frequency divider (Q465-2/1, 2/2) which works (1/128 freq. division) with duty ratio of 50% accurately.

The basic operation is:


- First VCO starts oscillation with free-run frequency set up in advance.
- Then phase comparator with work to compare phase of signal divided by freq. divider and phase of synchronizing signal of received data.
- Voltage corresponding to the phase difference is made out, which will be fed back through L.P.F. to VCO, to change the oscillation frequency in order to reduce the phase difference.
- Then soon it will be locked at the point where the frequency of freq. divided signal and the phase are almost equal.
- Master clock (11.2896 MHz) synchronizing with received data will output VCO output to digital filter via AND gate IC (Q473 4/4).

7. CD-12 PARTS LOCATIONS(Pattern Side)


PM16-FEATURE μ -COM

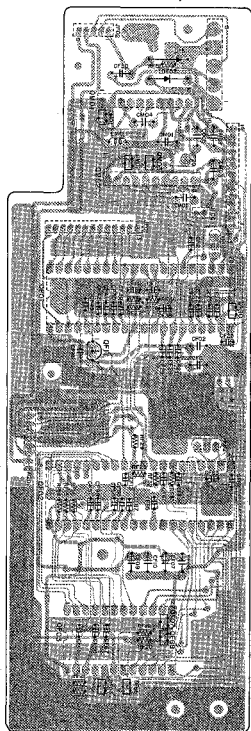

PY16-DISPLAY

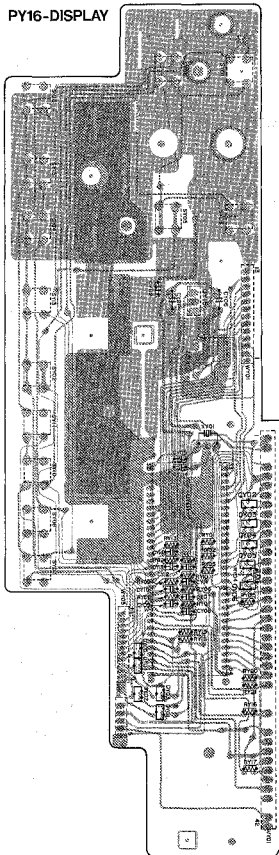

PV26-SERVO MODULE

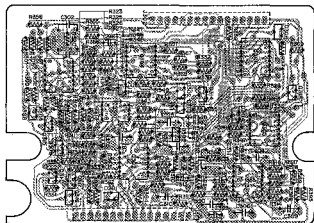


2. Digital signal error muting

In the event of digital signal error, potential is discharged at point B and the muting time of approx. 1.5 ms is provided by R809 and C812.

3. Input selector switching muting

1. The selector switches are of the non-shorting type. DS07 and DS08 are combined to generate a High


pulse at the instant one of the switches is selected. This signal, S MUTE, is applied to Q478 (monostable multivibrator) which generates a muting pulse of approx. 700 ms. The muting pulse performs digital muting by cutting off CLOCK at pin 11 XTAL IN of IB (Q407) in the end. On the other hand, audio muting is also performed in the same way, but the operation speed is slower with audio muting.

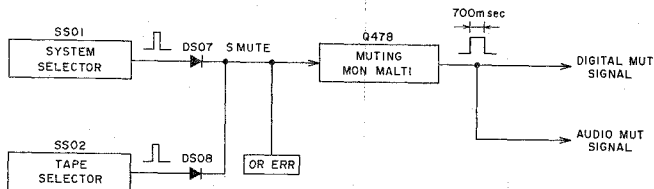

2. The timing chart is as shown below.

The difference between the digital muting time and analogue muting time, which is 800 ms, is a marginal


time for preventing noise due to unstable data output at the moment of rise of the PLL.

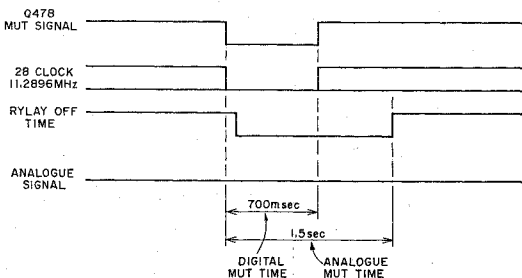


JITTER KILLER CIRCUIT

Jitter (sway or lag of time axis, a kind of distortion) which occurs in optical transmission line.

The circuit method is "memory twin PLL" method. This circuit is especially effective for improving distortion rate in high frequency band.

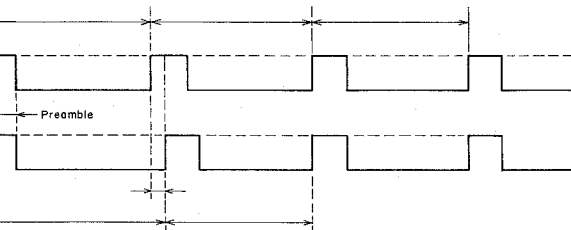

Jitter killer circuit diagram

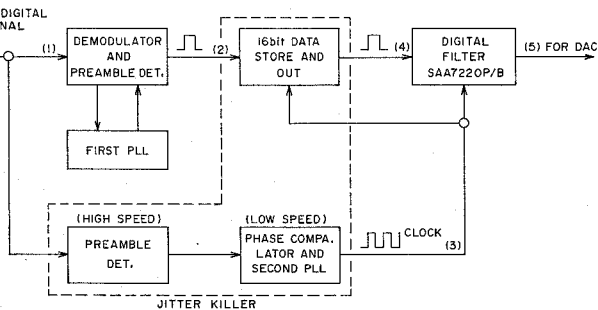



6. DA-12

ANALOGUE MUTING

1. Power ON/OFF muting

When the power is switched ON, the collector of Q807 outputs the muting pulse for approx. 1.5 s according to the time constant of C811 and R807. Q808 then generates the inverted pulse, which cuts off Q809 and

Q810 to turn the muting relay OFF. When the power is switched OFF, the Muting-On time of approx. 60 ms is delayed by R805 and C810. This is performed by delaying the relay operation by 60 ms which corresponds to the lack of 3 cycles in 50 Hz frequency. However, the audio operation is normal during this period because the discharge characteristics of the audio and other circuitry are longer than the time constant.

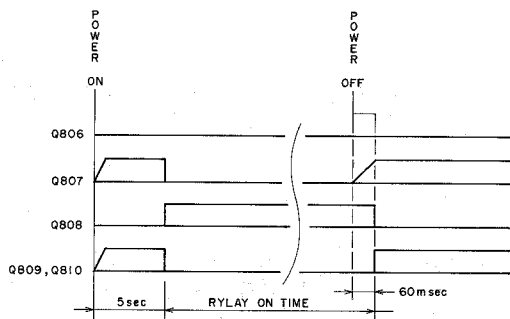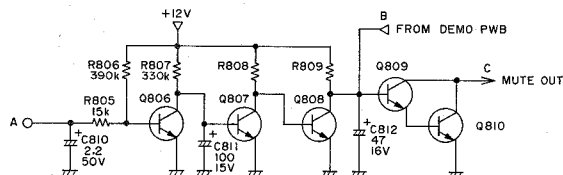


2. Digital signal error muting

In the event of digital signal error, potential is discharged at point B and the muting time of approx. 1.5 ms is provided by R809 and C812.

3. Input selector switching muting

1. The selector switches are of the non-shorting type. DS07 and DS08 are combined to generate a High


pulse at the instant one of the switches is selected. This signal, S MUTE, is applied to Q478 (monostable multivibrator) which generates a muting pulse of approx. 700 ms. The muting pulse performs digital muting by cutting off CLOCK at pin 11 XTAL IN of IB (Q407) in the end. On the other hand, audio muting is also performed in the same way, but the operation speed is slower with audio muting.

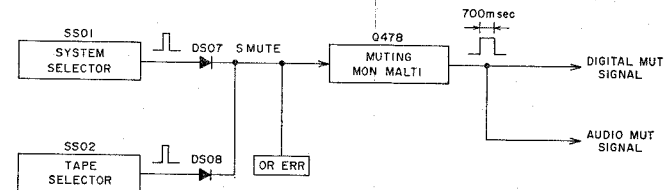

2. The timing chart is as shown below.

The difference between the digital muting time and analogue muting time, which is 800 ms, is a marginal

time for preventing noise due to unstable data output at the moment of rise of the PLL.

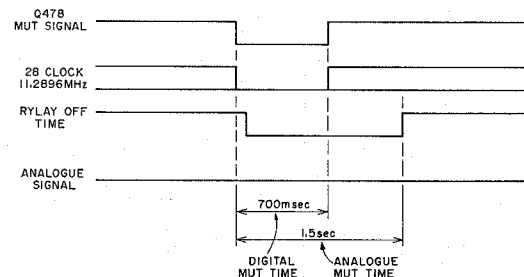


1. The input selectors generate signals A and B respectively with the diode matrices. These signals are used for the control of IC Q301 and Q318.

- a. The inputs to Q318 at pins 10, 11, 12 and 13 are selected according to the control signal inputs A1 and B1, and one of D0 to D3 is output at Yb (pin 9).
- b. Q301 switches the TAPE MONITOR signal with the same logic as above.



POSSION	A ₁	B ₁	OUT (9 PIN)
1	L	H	D ₁
2	L	L	D ₀
3	H	L	D ₂
4	H	H	D ₃

POSSION	A ₂	B ₂	OUT (9 PIN)
1	L	H	D ₁
2	H	H	D ₃
3	H	L	D ₂
—			

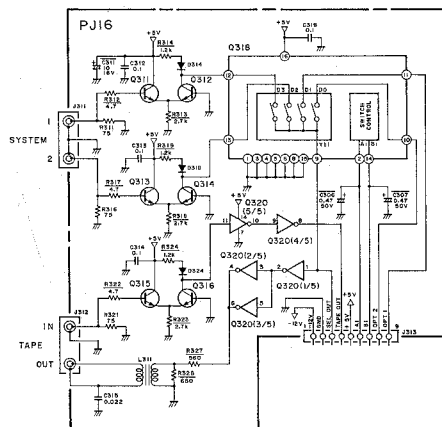


It is to kill jitter (sway or lag of time axis, a kind of distortion) which occur in optical transmission line.


The circuit method is "memory twin PLL" method. This circuit is especially effective for improving distortion rate in high frequency band.

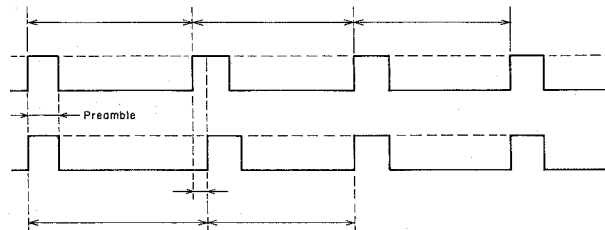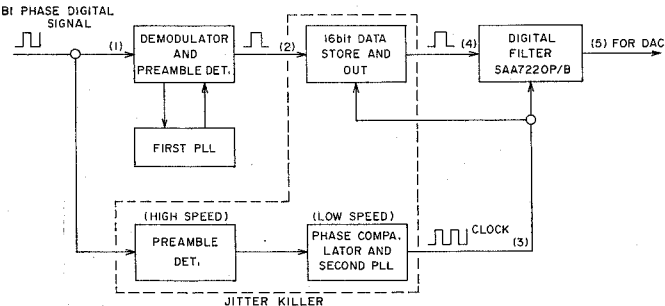BI PHASE DIGITAL
SIGNAL


PD16-POWER/DEMO

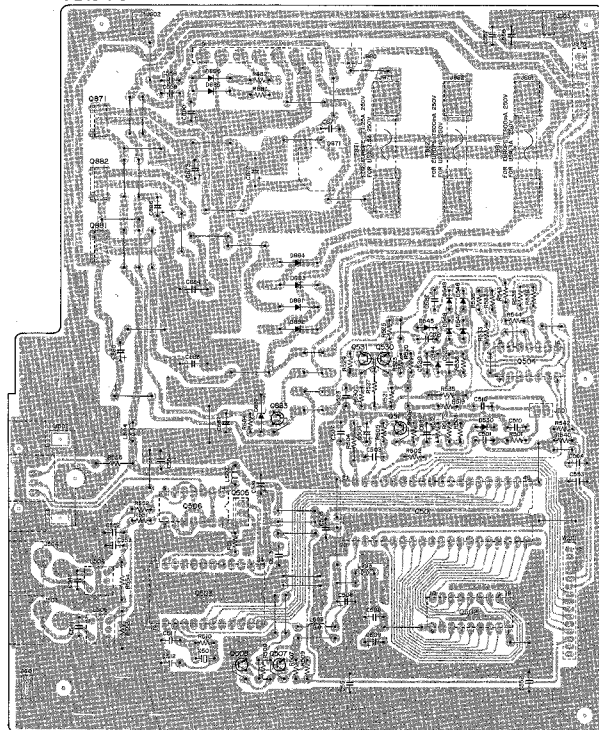


PV16-SERVO

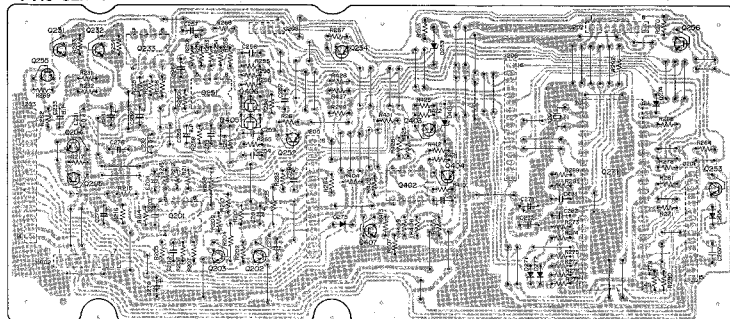

PS26-TEN KEYS

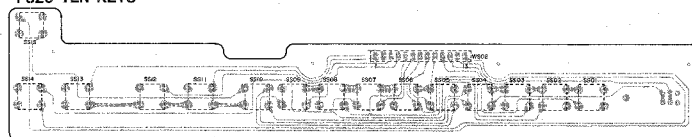


PP46-POWER SWITCH

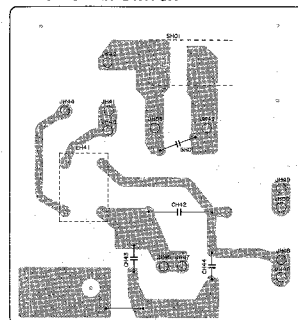


8. DA-12 PARTS LOCATIONS(Pattern Side)


PA16-AUDIO/DAC

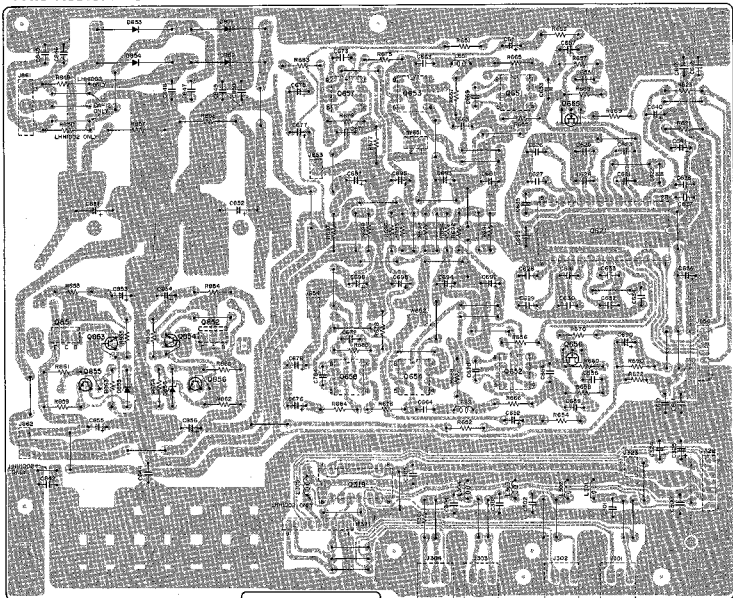


PP16-POWER SUPPLY

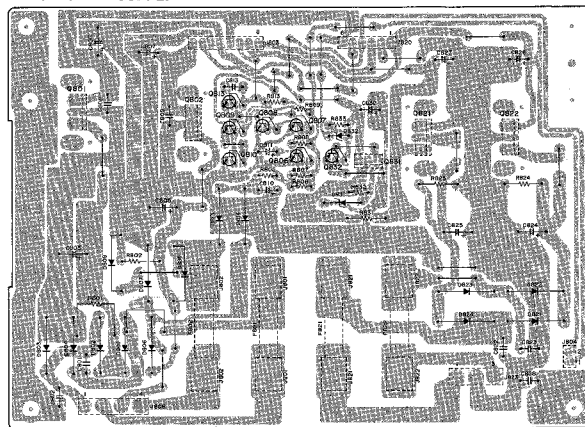


PD16-DEMO

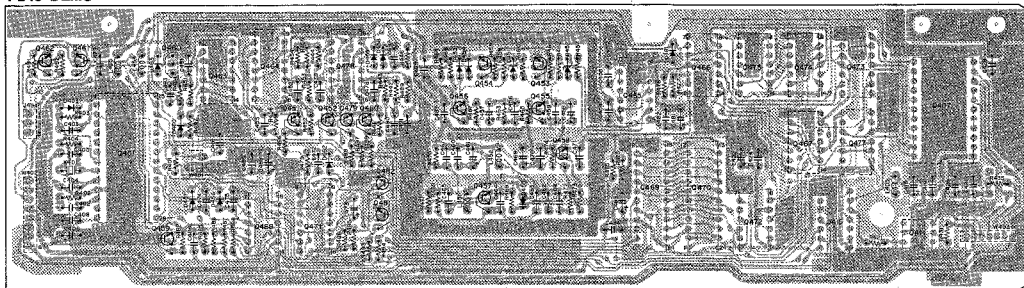


PA26-BALANCE AMP

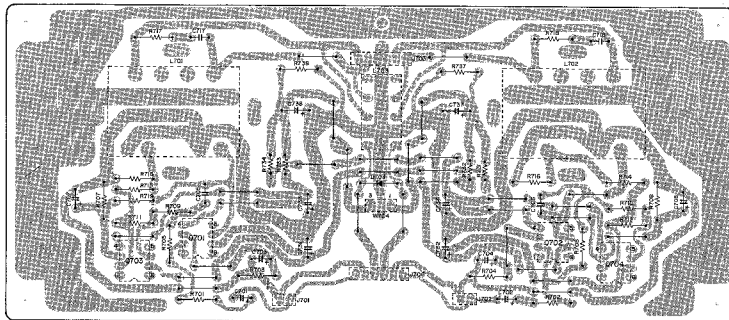


PJ16-DIGITAL IN/OUT JACK

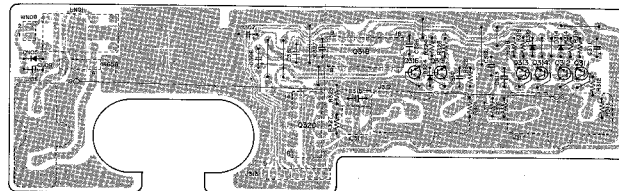


PL16-LAMP





PP26-POWER SWITCH

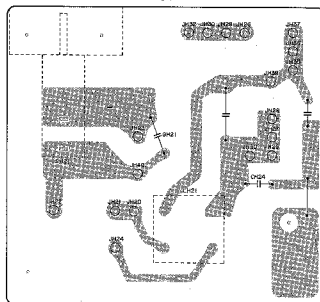

PS16-FUNCTION SWITCH/PHONE

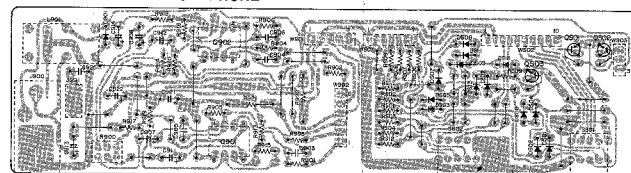


9. RC-12CD PARTS LOCATIONS(Pattern Side)

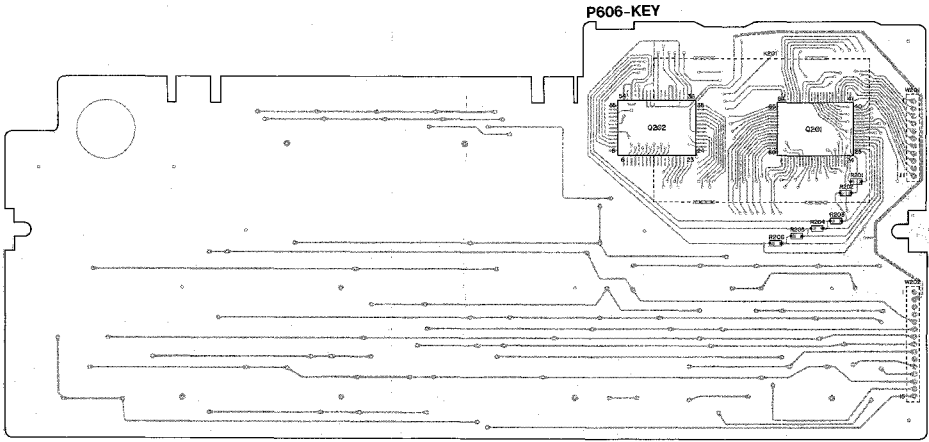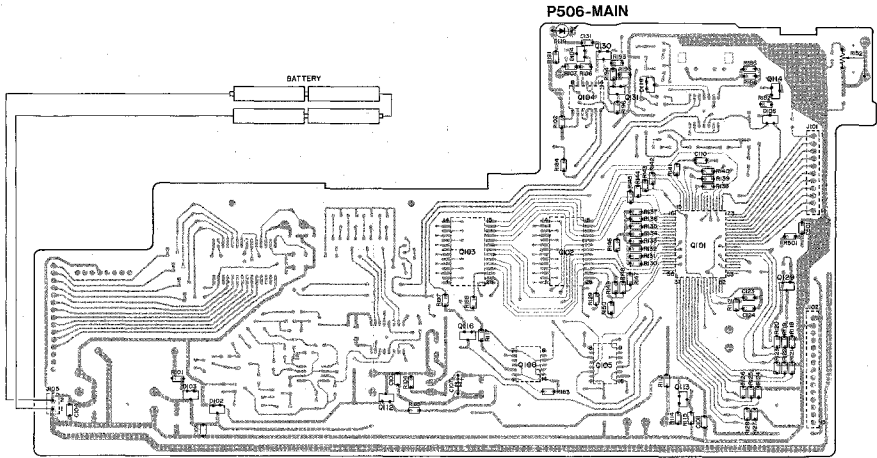


REF. DESIG.	PART NO.	DESCRIPTION	
0026	4822 459 10855	Badge	
003B	4822 532 52078	Spacer	
007B	4822 417 11032	Hinge (R)	
008B	4822 535 92367	Shaft, Lock	
010B	4822 535 92368	Shaft, Hinge (R)	
012B	4822 535 92368	Shaft, Hinge (L)	
015B	4822 462 61225	Bracket (K), Lock Hook	
020B	4822 402 61096	Hook, Lock	
021B	4822 482 42171	Spring, Lock	
022B	4822 532 11301	RG Ring, E Type	ø 2.5
023B	4822 532 52051	Washer	
025B	4822 417 11033	Hinge (L)	
027B	4822 492 42172	Spring, Open	
029B	4822 402 50243	Joint	
032B	4822 535 92369	Shaft	
056B	4822 460 20758	Escutcheon, Drawer	
063B	4822 450 61315	Window	
070B	4822 410 25892	Button, 10 Key	
071B	4822 492 83757	Leaf Spring, Earth	
073B	4822 410 25886	Button, Sel/Cancel	
075B	4822 410 25894	Button, FF/REV	
078B	4822 410 25885	Button, FTS/Pause	
088B	4822 492 51927	Spring, Power SW.	
001D	4822 444 30615	Lid, Top Cover, Front	
002D	4822 444 30412	Lid, Top Cover, Rear	
005D	4822 462 41094	Buffer	
010D	4822 530 70385	Spring Washer	
011D	4822 444 40285	Side Panel (L)	
012D	4822 444 60607	Cap (L)	
014D	4822 444 40285	Side Panel (R)	
015D	4822 444 60607	Cap (R)	
017D	4822 462 71578	Buffer	
019D	4822 532 52077	Collar (K)	
022D	4822 462 71578	Buffer	
071G	4822 459 20545	Mask, FL	
071G	4822 530 8055	RG Ring, CS Type	ø 3
071G	4822 462 42011	Buffer	

MZ 2112

Model CD-12

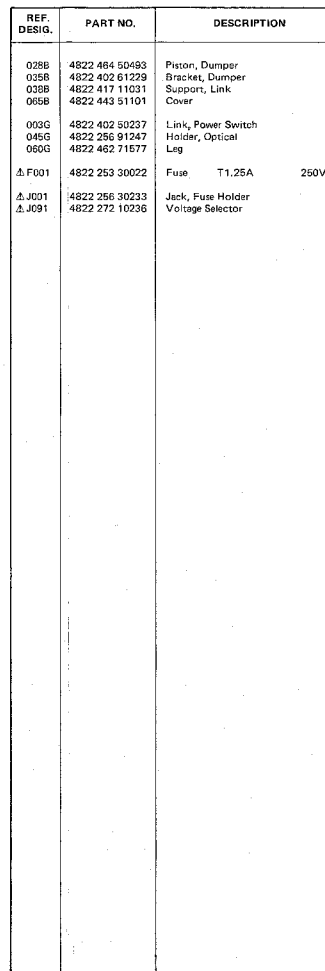

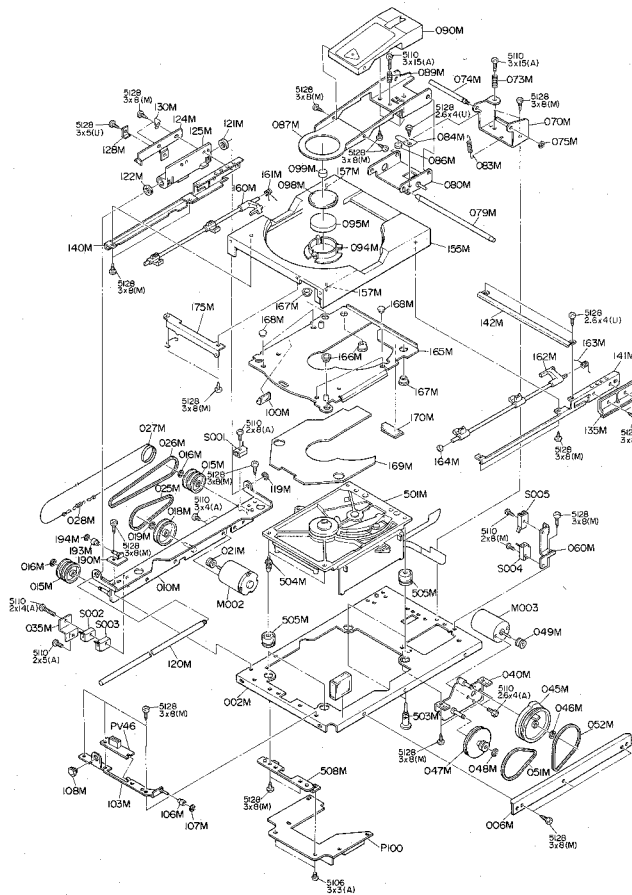

REF. DESIG.	PART NO.	DESCRIPTION
015M	4822 528 81163	Pulley, Wire
016M	4822 532 11301	RG Ring, E Type
018M	4822 528 81238	Pulley, Tray Drive
019M	4822 532 11301	RG Ring, E Type
021M	4822 528 81186	Pulley, Motor
025M	4822 358 30762	Belt, Motor
026M	4822 358 30903	Belt, Tray Drive
027M	4822 321 30338	Joint, Wire
028M	4822 492 32719	Spring
040M	4822 402 61228	Bracket (K), Motor
045M	4822 528 30331	Cam, Clamper Drive
046M	4822 532 11301	RG Ring, E Type
047M	4822 528 81164	Pulley, Clamper Drive
048M	4822 532 11301	RG Ring, E Type
049M	4822 528 81166	Pulley, Motor
051M	4822 358 30762	Belt, Motor
052M	4822 358 30763	Belt, Cam Drive
073M	4822 492 63706	Spring
074M	4822 535 92332	Shaft
075M	4822 532 11301	RG Ring, E Type
079M	4822 535 92575	Shaft
083M	4822 492 63706	Spring
084M	4822 492 63708	Leaf Spring
086M	4822 466 61549	Buffer
087M	4822 402 30161	Lever, Clamper
089M	4822 492 63706	Spring
090M	4822 256 91378	Holder
094M	4822 402 61097	Clamper
106M	4822 528 90645	Roller
107M	4822 530 70119	RG Ring, E Type
108M	4822 532 21323	Bushing
118M	4822 530 80307	RG Ring, E Type
120M	4822 535 92331	Shaft, Tray Guide
121M	4822 466 61548	Buffer
122M	4822 462 71576	Buffer
160M	4822 402 61089	Lever, Tray Lift (L)
161M	4822 492 63707	Spring
162M	4822 402 61091	Lever, Tray Lift (R)
163M	4822 492 63708	Spring
164M	4822 532 11432	Washer
166M	4822 532 11697	Bushing, Tray Guide
167M	4822 532 21323	Bushing, Tray Guide
168M	4822 532 11698	Bushing, Disc Buffer
193M	4822 528 90646	Roller
194M	4822 530 70119	RG Ring, E Type
501M	4822 691 30221	Mechanism Assembly, CDM-1
503M	4822 535 92574	Shaft
504M	4822 535 92577	Shaft
505M	4822 532 52076	Bushing
M002	4822 361 60467	D.C. Motor, Tray Drive
M003	4822 361 60447	D.C. Motor, Clamper Drive
S001	4822 277 21132	Slide Switch, Tray IN
S002	4822 277 21132	Slide Switch, Tray OUT
S003	4822 277 21132	Slide Switch, Pump IN
S004	4822 277 21132	Slide Switch, Clamper Down
S005	4822 277 21132	Slide Switch, Clamper Up

11. CD-12 ELECTRICAL PARTS LIST

ASSIGNMENT OF COMMON PARTS CODES.

- RESISTOR**
R*** (1) G005 --- 140. Carbon film fixed resistor, $\pm 5\%$, 1/4W
R** (2) G005 --- 160. Carbon film fixed resistor, $\pm 5\%$, 1/8W
 (1) --- Resistance value

- Examples**
 (1) Resistance value
 0.1 Ω ...001 10 Ω ...100 1k Ω ...102 100k Ω ...104
 0.5 Ω ...005 18 Ω ...180 2.7k Ω ...272 680k Ω ...684
 1 Ω ...010 100 Ω ...101 10k Ω ...103 1M Ω ...105
 6.8k Ω ...068 391 22k Ω ...223 4.7M Ω ...475

(Note) Please distinguish 1/4W from 1/8W by the shape of parts used actually.

C* CERAMIC CAP.**

- (1) DD1 --- 370. Ceramic condenser
 Disc type
 Temp. coeff. P350 ~ N1000, 50V
 Capacity value
 Tolerance

- Examples**
 (1) Tolerance (Capacity deviation)
 $\pm 0.25\mu\text{F}$...0
 $\pm 0.5\mu\text{F}$...1
 $\pm 5\%$...3
 * Tolerance of COMMON PARTS handled here are as follows:
 0.5 μF ~ 5 μF ... $\pm 0.25\mu\text{F}$
 6 μF ~ 10 μF ... $\pm 0.5\mu\text{F}$
 12 μF ~ 500 μF ... $\pm 5\%$
 (2) Capacity value
 0.5 μF ...005 3 μF ...030 100 μF ...101
 1 μF ...010 10 μF ...100 220 μF ...221
 1.5 μF ...015 47 μF ...470 560 μF ...561

C* CERAMIC CAP.**

- (1) DK16 --- 300. High dielectric constant ceramic condenser
 Disc type
 Temp. chara. 2B4, 50V
 Capacity value

- Example**
 (1) Capacity value
 100 μF ...101 1000 μF ...102 10000 μF ...103
 470 μF ...471 2200 μF ...222

- C*** ELECTROLYTIC CAP. (E) FILM CAP. (F)**
 (1) EA --- 10. Electrolytic condenser
 One-way lead type, Tolerance $\pm 20\%$
 Dielectric strength
 Capacity value

- Examples**
 (1) Capacity value
 0.1 μF ...104 4.7 μF ...475 100 μF ...107
 0.33 μF ...334 10 μF ...106 330 μF ...337
 1 μF ...105 22 μF ...226 1100 μF ...108
 2200 μF ...228
 (2) Working voltage
 6.3V...006 25V...025
 10V...010 35V...035
 16V...016 50V...060

- (2) DF15 --- 350. Plastic film condenser
 One-way type, Mylar $\pm 5\%$, 50V
 Capacity value

- Examples**
 (1) Capacity value
 0.001 μF (1000pF)...102 0.1 μF ...104
 0.001 μF ...102 0.5 μF ...504
 0.01 μF ...103 1 μF ...105
 0.01 μF ...103

REF. DESIG.	PART NO.	DESCRIPTION
		PD16-POWER/DEMO CIRCUIT BOARD
		PD16-CAPACITORS
C504	4822 124 22289	Elect 6.8 μ F 50V
C505	4822 122 40617	Ceramic 0.1 μ F +80% -20%
C506	4822 122 40617	Ceramic 0.1 μ F +80% -20%
C511	4822 122 40528	Ceramic 27 μ F 45%
C512	4822 122 40528	Ceramic 27 μ F 45%
C513	4822 122 40617	Ceramic 0.1 μ F +80% -20%
C520	4822 121 42327	Film 470 μ F 45%
C521	4822 121 42327	Film 470 μ F 45%
C541	4822 122 40491	Ceramic 0.022 μ F +80% -20%
C542	4822 122 40491	Ceramic 0.022 μ F +80% -20%
C551	4822 122 40491	Ceramic 0.022 μ F +80% -20%
C555	4822 122 40491	Ceramic 0.022 μ F +80% -20%
C559	4822 122 40491	Ceramic 0.022 μ F +80% -20%
C582	4822 124 22243	Elect 6800 μ F 16V
C583	4822 124 22239	Elect 3300 μ F 25V
C584	4822 124 22239	Elect 3300 μ F 25V
		PD16-SEMICONDUCTORS
D530	4822 130 80302	Varistor MA27A
D544	4822 130 33306	Diode 1S5133, etc.
D549	4822 130 33306	Diode 1S5133, etc.
D571	4822 130 80907	Diode S2V820
D581	4822 130 32508	Diode RL103E, etc.
D586	4822 130 32508	Diode RL103E, etc.
Q501	4822 209 71001	IC SAA7210
Q502	4822 209 70422	IC μ PD41416C-20
Q503	4822 209 72545	IC SAA7220A
Q504	4822 209 83641	IC IR2339
Q506	4822 209 72323	IC 74HC004
Q507	4822 130 42052	Transistor 2SC7285(FF, EF)
Q508	4822 130 42052	Transistor 2SC7285(FF, EF)
Q511	4822 130 61438	Transistor 2SA1005(K, L)
Q520	4822 130 42052	Transistor 2SC7285(FF, EF)
Q531	4822 130 42052	Transistor 2SC7285(FF, EF)
Q581	4822 209 83824	IC NJM7905FA
Q581	4822 209 70084	IC NJM7812FA
Q582	4822 209 73954	IC NJM7912FA
Q583	4822 130 60353	Transistor 2SA1358(O, Y)
		PD16-MISCELLANEOUS
F571	4822 253 30022	Fuse T1.25A 250V
F581	4822 253 20017	Fuse T800mA 250V
F582	4822 253 20017	Fuse T800mA 250V
JG01	4822 290 40296	Terminal, Earth
JG02	4822 290 40296	Terminal, Earth
JG03	4822 290 40296	Terminal, Earth
J501	4822 265 20289	Plug, 2P
J502	4822 321 22588	Jack, Optical
J503	4822 265 20354	Terminal, 1P, RCA
J504	4822 265 20354	Terminal, 1P, RCA

REF. DESIG.	PART NO.	DESCRIPTION
J871	4822 256 30239	Jack, Fuse Holder
J880	4822 256 40504	Plug, 3P
J881	4822 256 30239	Jack, Fuse Holder
J882	4822 256 30239	Jack, Fuse Holder
L505	4822 142 60388	Pulse Transformer
L506	4822 142 60388	Pulse Transformer
X501	4822 242 72395	Crystal 11.2896MHz
		PM16-FEATURE μ-COM CIRCUIT BOARD
CF11	4822 122 32703	Ceramic 330pF $\pm 10\%$, Chip
CF12	4822 122 33117	Ceramic 330pF $\pm 10\%$, Chip
CF13	4822 122 32703	Ceramic 330pF $\pm 10\%$, Chip
CF14	4822 122 32689	Ceramic 0.047 μF +80% -20%
CF21	4822 122 32703	Ceramic 330pF $\pm 10\%$, Chip
CF29	4822 122 32703	Ceramic 330pF $\pm 10\%$, Chip
CF38	4822 122 32703	Ceramic 330pF $\pm 10\%$, Chip
CF43	4822 122 32703	Ceramic 330pF $\pm 10\%$, Chip
CF51	4822 122 40306	Ceramic 0.047 μF +80% -20%
CF61	4822 122 32703	Ceramic 330pF $\pm 10\%$, Chip
CF67	4822 122 32703	Ceramic 330pF $\pm 10\%$, Chip
CF85	4822 122 32703	Ceramic 330pF $\pm 10\%$, Chip
CF87	4822 133 32703	Ceramic 330pF $\pm 10\%$, Chip
CF91	4822 133 32703	Ceramic 330pF $\pm 10\%$, Chip
		PM16-RESISTORS, CHIP (All Resistors are $\pm 5\%$ and 1/10W)
RF14	4822 111 90895	10K Ω
RF15	4822 111 90895	10K Ω
RF16	4822 111 90895	10K Ω
RF19	4822 111 90895	10K Ω
RF20	4822 111 90895	10K Ω
RF21	4822 111 90895	100K Ω
RF22	4822 111 90895	10K Ω
RF26	4822 111 90894	1K Ω
RF27	4822 111 91414	10 Ω
RF28	4822 111 90906	2.2K Ω
RF29	4822 111 91414	10 Ω
RF30	4822 111 90894	1K Ω
RF32	4822 111 90918	4.7K Ω
RF33	4822 111 90918	4.7K Ω
RF51	4822 111 91139	6.8K Ω
		PM16-SEMICONDUCTORS
DF03	4822 130 43408	Diode MA151WK, Chip
DF05	4822 130 43408	Diode MA151WK, Chip
DF51	4822 130 33948	Zener 5.6V
DM01	4822 130 80346	Zener 8.2V, Chip
DM02	4822 130 80346	Zener 8.2V, Chip
OF01	4822 209 11497	IC MSM83C154
OF02	4822 209 11496	IC MSM80C51
OF03	4822 209 51273	IC MSM2816A
OF07	4822 130 60712	Transistor UN2214, Digital
OF08	4822 130 60712	Transistor UN2214, Digital
OF10	4822 130 60713	Transistor UN2214, Digital
OF11	4822 209 73949	IC P8T524D

REF. DESIG.	PART NO.	DESCRIPTION
OM01	4822 209 83803	IC L81645N
OM02	4822 209 83803	IC L81645N
OM03	4822 130 60712	Transistor UN2214, Digital
		PM16-MISCELLANEOUS
JF10	4822 265 10117	Plug, 5P
JF21	4822 265 10158	Plug, 2P
LM01	4822 156 10676	Choke Coil 47 μF
W202	4822 321 22412	Connective Cord, 7P
XF01	4822 242 71781	Ceramic Vibrator 12.0MHz
XF02	4822 242 71781	Ceramic Vibrator 12.0MHz
		PP46-POWER SWITCH CIRCUIT BOARD
GH01	4822 122 40305	Ceramic Cap. 0.01 μF 400V
SH01	4822 276 11141	Push Switch, Power
		PS26-TEN KEYS CIRCUIT BOARD
SS01	4822 276 11559	Push Switch
SS15	4822 276 11559	Push Switch
		PV16-SERVO CIRCUIT BOARD
		PV16-CAPACITORS
C201	4822 124 90357	Elect 2.2 μF 50V
C257	4822 124 40464	Elect 4.7 μF 35V (BP)
C282	4822 122 40491	Ceramic 0.022 μF +80% -20%
		PV16-RESISTORS
R211	4822 116 80256	5.62M Ω $\pm 1\%$ 1/6W
R212	4822 116 80256	5.62M Ω $\pm 1\%$ 1/6W
R231	4822 111 41271	10 Ω $\pm 5\%$ 1/6W
R232	4822 111 41271	10 Ω $\pm 5\%$ 1/6W
R233	4822 116 83696	120 Ω $\pm 5\%$ 1/6W, Fusible
R234	4822 116 83696	120 Ω $\pm 5\%$ 1/6W, Fusible
R254	4822 116 80261	91K Ω $\pm 1\%$ 1/6W
R274	4822 116 80262	13K Ω $\pm 1\%$ 1/6W
R275	4822 116 80261	90.9K Ω $\pm 1\%$ 1/6W
R277	4822 116 80265	357K Ω $\pm 1\%$ 1/6W
		PV16-SEMICONDUCTORS
D205	4822 130 33305	Diode 1S5133, etc.
D263	4822 130 32191	Zener RD7.5E 63
D271	4822 130 33305	Diode 1S5133, etc.
D272	4822 130 33305	Diode 1S5133, etc.
D274	4822 130 33305	Diode 1S5133, etc.
D275	4822 130 33305	Diode 1S5133, etc.
D401	4822 130 32356	Zener 6.6V
Z201	4822 209 80401	IC NJM4558D
Z202	4822 130 42891	Transistor 2SA1175(FF, EF)
Z203	4822 130 42892	Transistor 2SC7285(FF, EF)
Z204	4822 130 60354	Transistor 2SC3421(O, Y)
Z205	4822 130 60353	Transistor 2SA1358(O, Y)
Z231	4822 130 60353	Transistor 2SA1358(O, Y)
Z232	4822 130 60354	Transistor 2SC3421(O, Y)
Z233	4822 209 83643	IC IR3741
Z251	4822 209 80401	IC NJM4558D
Z262	4822 130 42891	Transistor 2SA1175(FF, EF)

REF. DESIG.	PART NO.	DESCRIPTION
Q253	4822 130 42052	Transistor 2SC2785(FF, EF)
Q254	4822 130 42591	Transistor 2SA1175(FF, EF)
Q255	4822 130 42052	Transistor 2SA1175(FF, EF)
Q256	4822 130 42052	Transistor 2SA1175(FF, EF)
Q271	4822 209 71674	IC 80C51
Q402	4822 209 80401	IC NJM4558D
Q403	4822 130 42591	Transistor 2SA1175(FF, EF)
Q404	4822 130 42591	Transistor 2SA1175(FF, EF)
Q405	4822 130 42842	F.E.T. 2SK372(GR, BL)
Q406	4822 130 42842	F.E.T. 2SK372(GR, BL)
Q407	4822 130 61441	Transistor 2SD1962(Q, R)
PV16-MISCELLANEOUS		
J203	4822 265 40772	Plug, 14P
J205	4822 265 40773	Plug, 16P
J206	4822 265 40773	Plug, 16P
J208	4822 267 50894	Jack, 4P
L231	4822 157 53801	Choke Coil 47 μ F
L232	4822 157 53801	Choke Coil 47 μ F
X201	4822 242 71781	Ceramic Vibrator 12MHz
PV26-SERVO MODULE CIRCUIT BOARD		
PV26-CAPACITORS		
C305	4822 121 42985	Film 5600pF $\pm 2\%$
C306	4822 121 42985	Film 5600pF $\pm 2\%$
C308	4822 122 33084	Ceramic 390pF $\pm 5\%$
C310	4822 121 42987	Film 680pF $\pm 2\%$
C316	4822 122 32804	Ceramic 0.1 μ F $\pm 10\%$
PV26-RESISTORS, CHIP (All Resistors are $\pm 5\%$ and 1/10W)		
R300	4822 111 90883	10K Ω $\pm 1\%$
R301	4822 111 90883	10K Ω $\pm 1\%$
R302	4822 111 90885	2.7K Ω $\pm 1\%$
R303	4822 111 91365	470 Ω $\pm 1\%$
R304	4822 111 90906	2.2K Ω
R306	4822 111 90883	10K Ω $\pm 1\%$
R307	4822 111 90883	10K Ω $\pm 1\%$
R308	4822 111 90885	2.7K Ω $\pm 1\%$
R309	4822 111 91365	470 Ω $\pm 1\%$
R310	4822 111 90906	2.2K Ω
R311	4822 111 90895	10K Ω
R312	4822 111 90895	10K Ω
R313	4822 111 90925	68K Ω
R314	4822 111 90919	47K Ω
R315	4822 111 90819	47K Ω
R316	4822 111 90918	4.7K Ω
R317	4822 111 90919	47K Ω
R318	4822 111 90925	68K Ω
R320	4822 111 91368	5.6K Ω $\pm 1\%$
R321	4822 111 91355	13K Ω $\pm 1\%$
R323	4822 111 91361	330K Ω $\pm 1\%$
R324	4822 111 90916	3.9K Ω
R325	4822 111 91369	1.5K Ω
R326	4822 111 90907	22K Ω
R327	4822 111 90907	22K Ω
R328	4822 111 90923	56K Ω
R329	4822 111 90923	56K Ω
R330	4822 111 91192	470 Ω
R331	4822 111 91192	470 Ω
R332	4822 111 91372	820 Ω

REF. DESIG.	PART NO.	DESCRIPTION
R333	4822 111 91369	1.5K Ω
R334	4822 111 91192	470 Ω
R335	4822 111 91373	82K Ω
R336	4822 111 90925	68K Ω
R337	4822 111 91356	130K Ω $\pm 1\%$
R338	4822 111 90923	56K Ω
R339	4822 111 90907	22K Ω
R340	4822 111 90896	100K Ω
R341	4822 111 91371	470K Ω
R342	4822 111 90895	10K Ω
R343	4822 111 90918	4.7K Ω
R345	4822 111 90918	4.7K Ω
R346	4822 111 91371	470K Ω
R347	4822 111 90896	100K Ω
R348	4822 111 90913	33K Ω
R349	4822 111 90926	8.2K Ω
R351	4822 111 90926	8.2K Ω
R352	4822 111 90925	68K Ω
R355	4822 111 90923	56K Ω
R356	4822 111 91358	24K Ω $\pm 1\%$
R357	4822 111 90897	1M Ω
R358	4822 111 91363	360K Ω $\pm 1\%$
R359	4822 111 90907	22K Ω
R360	4822 111 90887	6.8K Ω $\pm 1\%$
R361	4822 111 90887	6.8K Ω $\pm 1\%$
R362	4822 111 90889	82K Ω $\pm 1\%$
R363	4822 111 90889	82K Ω $\pm 1\%$
R364	4822 111 90918	4.7K Ω
R365	4822 111 90895	10K Ω
R366	4822 111 91371	470K Ω
R367	4822 111 90913	33K Ω
R368	4822 111 90895	10K Ω
R369	4822 111 90918	4.7K Ω
R370	4822 111 91362	36K Ω $\pm 1\%$
R371	4822 111 91364	3.9K Ω $\pm 1\%$
R372	4822 111 91363	360K Ω $\pm 1\%$
R373	4822 111 90909	2.7K Ω
R374	4822 111 90896	100K Ω
R375	4822 111 90918	4.7K Ω
R376	4822 111 90913	33K Ω
R379	4822 111 90911	27K Ω
R380	4822 111 90918	4.7K Ω
R381	4822 111 90925	68K Ω
R382	4822 111 90918	4.7K Ω
R385	4822 111 91359	27K Ω $\pm 1\%$
R386	4822 111 91357	180K Ω $\pm 1\%$
R387	4822 111 90919	47K Ω
R388	4822 111 90919	47K Ω
R389	4822 111 90896	100K Ω
R390	4822 111 91367	75K Ω $\pm 1\%$
R391	4822 111 91367	75K Ω $\pm 1\%$
R393	4822 111 91361	330K Ω $\pm 1\%$
R394	4822 111 90908	220K Ω
R395	4822 111 90896	100K Ω
R396	4822 111 91368	120K Ω
R397	4822 111 90919	47K Ω
R398	4822 111 90919	47K Ω


REF. DESIG.	PART NO.	DESCRIPTION
PV26-SEMICONDUCTORS		
D301	4822 130 80274	Zener 2.4V, Chip
D302	4822 130 43408	Diode MA151WK, Chip
D303	4822 130 43408	Diode MA151WK, Chip
D304	4822 130 32868	Diode MA153, Chip
D305	4822 130 32955	Zener 5.1V, Chip
D306	4822 130 32635	Diode MA151K, Chip
Q301	4822 209 71675	IC NJM2902M
Q302	4822 209 71675	IC NJM2902M
Q303	4822 209 71675	IC NJM2902M
Q304	4822 209 71676	IC NJM2901M
Q305	4822 209 11607	IC 4030
Q306	4822 209 83368	IC 4053
Q307	4822 209 71451	IC NJM4558M
Q308	4822 130 60658	Transistor 2SC2351, Chip
Q309	4822 209 83363	IC FMW1
Q311	4822 209 83363	IC FMW1
Q312	4822 130 42733	Transistor 2SA1162(G), Chip
Q314	4822 130 60656	Transistor UN2210, Digital
Q315	4822 130 43398	Transistor 2SC2712(GR), Chip
Q316	4822 130 60657	Transistor 2SC1009, Chip
Q317	4822 130 60657	Transistor 2SC1009, Chip
Q318	4822 130 60656	Transistor UN2210, Digital
PV26-MISCELLANEOUS		
J301	4822 267 50871	Jack, 4P
J302	4822 267 50871	Jack, 16P
PY16-DISPLAY CIRCUIT BOARD		
PY16-CAPACITORS		
CY02	4822 122 32669	Ceramic 0.047 μ F $\pm$ 80% $\pm$ 20%, Chip
CY04	4822 122 32693	Ceramic 33pF $\pm$ 5%, Chip
CY05	4822 133 32693	Ceramic 33pF $\pm$ 5%, Chip
CY07	4822 122 32697	Ceramic 2200pF $\pm$ 10%, Chip
CY14		
PY16-RESISTORS, CHIP (All Resistors are $\pm$ 5% and 1/10W)		
RY01	4822 111 90901	150K Ω
RY05		
RY06	4822 111 90895	10K Ω
RY13		
RY16	4822 111 90922	5.6K Ω
RY17	4822 111 90922	5.6K Ω
RY18	4822 111 90922	5.6K Ω
RY19	4822 111 91139	6.8K Ω
RY20	4822 111 90922	5.6K Ω
RY21	4822 111 90922	5.6K Ω
PY16-SEMICONDUCTORS		
DY01	4822 130 32635	Diode MA151K, Chip
DY05		
QY01	4822 209 71677	IC LC6554D
QY02	4822 130 42731	Transistor UN2114, Chip
QY06		
QY15	4822 209 73951	IC PST523D

REF. DESIG.	PART NO.	DESCRIPTION
PY16-MISCELLANEOUS		
SY01	4822 276 11559	Push Switch, Stop
SY02	4822 276 11559	Push Switch, Pause
SY03	4822 276 11559	Push Switch, Play
SY05	4822 276 11559	Push Switch, PREV
SY06	4822 276 11559	Push Switch, NEXT
SY07	4822 276 11559	Push Switch, FTS
SY08	4822 276 11559	Push Switch, Time
SY10	4822 276 11559	Push Switch, A B
SY11	4822 276 11559	Push Switch, Repeat
SY13	4822 276 11559	Push Switch, Revers
SY14	4822 276 11559	Push Switch, FF
SY15	4822 276 11559	Push Switch, Previous
SY16	4822 276 11559	Push Switch, Next
VY01	4822 130 90441	Display Unit
XY01	4822 242 71495	Ceramic Vibrator 3MHz
ZY01	4822 130 81183	Photo Unit

NOTE ON SAFETY:


Symbol Δ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol Δ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Model DA-12

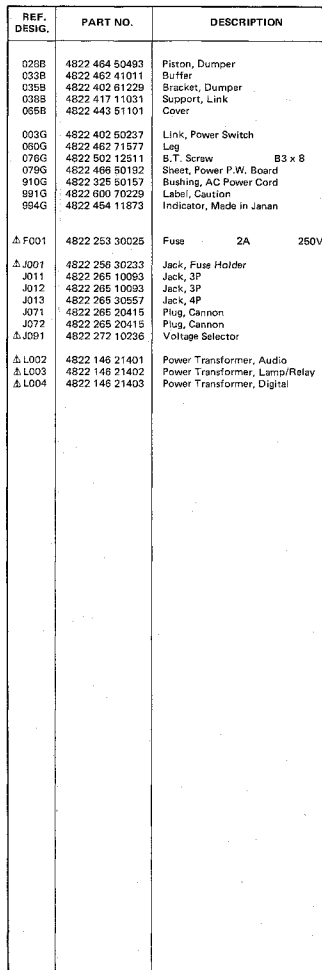

12. DA-12 EXPLODED VIEW AND PARTS LIST

Model DA-12

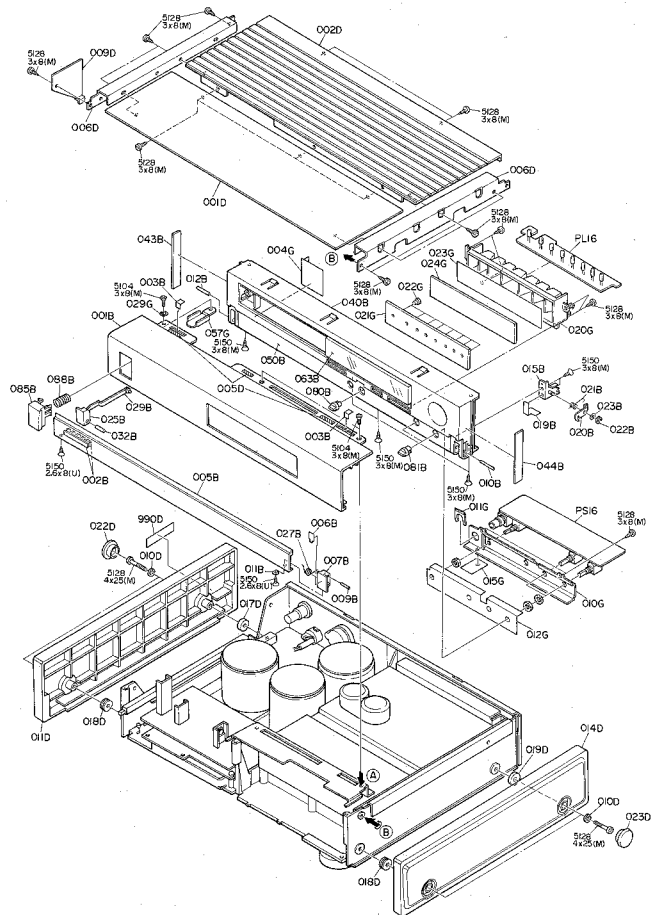

REF. DESIG.	PART NO.	DESCRIPTION
001B	4822 444 40287	Front Panel
002B	4822 459 10855	Badge
005B	4822 532 52078	Spacer
005B	4822 454 30427	Escutcheon, Front Door
007B	4822 417 11032	Hinge (R)
009B	4822 535 92367	Shaft, Lock
010B	4822 535 92368	Shaft, Hinge (R)
012B	4822 535 92368	Shaft, Hinge (L)
015B	4822 402 61225	Bracket (K), Lock Hook
020B	4822 402 61096	Hook, Lock
021B	4822 492 42171	Spring, Lock
022B	4822 532 11301	RG Ring, E Type $\phi 2.5$
023B	4822 532 52081	Washer
025B	4822 417 11033	Hinge (L)
027B	4822 492 42172	Spring, Open
029B	4822 402 50243	Joint
032B	4822 535 92369	Shaft
050B	4822 454 30428	Escutcheon, Front
063B	4822 450 61315	Window
080B	4822 412 21006	Knob, Level
081B	4822 412 21007	Knob, Rotary SW.
088B	4822 492 51927	Spring, Power SW.
001D	4822 444 50615	Lid, Top Cover; Front
002D	4822 444 20412	Lid, Top Cover; Rear
005D	4822 462 41094	Buffer
010D	4822 530 70385	Spring Washer
011D	4822 444 40285	Side Panel (L)
014D	4822 444 40285	Side Panel (R)
017D	4822 462 71578	Buffer
018D	4822 532 52077	Collar (K)
019D	4822 462 71578	Buffer
022D	4822 444 60607	Cap (L)
023D	4822 444 60607	Cap (R)
990D	4822 600 70337	Label
011G	4822 462 41037	Stopper, Photo Jack
021G	4822 459 40646	Mask
022G	4822 381 11041	Lens
029G	4822 530 80311	RG Ring, CS Type $\phi 3$

13. DA-12 ELECTRICAL PARTS LIST

ASSIGNMENT OF COMMON PARTS CODES.

RESISTOR

- R***: (1) GD05 --- 140, Carbon film fixed resistor, $\pm 5\%$, 1/4W
 R***: (2) GD05 --- 160, Carbon film fixed resistor, $\pm 5\%$, 1/6W

① --- Resistance value

Examples

- ① Resistance value
 0.1 Ω ...001 10 Ω ...100 1k Ω ...102 100k Ω ...104
 0.5 Ω ...005 18 Ω ...180 2.7k Ω ...272 680k Ω ...684
 1 Ω ...010 100 Ω ...101 10k Ω ...103 1Mk Ω ...105
 8.8 Ω ...068 390 Ω ...391 22k Ω ...223 4.7Mk Ω ...475

(Note) Please distinguish 1/4W from 1/6W by the shape of parts used actually.

C***: CERAMIC CAP.

- (1) DD1 --- 370, Ceramic condenser
 Disc type
 Temp. coeff. P350 ~ N1000, 50V
 Capacity value
 Tolerance

Examples

- ① Tolerance (Capacity deviation)
 $\pm 0.25\mu\text{F}$...0
 $\pm 0.5\mu\text{F}$...1
 $\pm 5\%$...5
 * Tolerance of COMMON PARTS handled here are as follows:
 0.5 μF ...5 μF ... $\pm 0.25\mu\text{F}$
 6 μF ...10 μF ... $\pm 0.5\mu\text{F}$
 12 μF ...50 μF ... $\pm 5\%$
 Capacity value
 0.5 μF ...005 3 μF ...030 100 μF ...101
 1 μF ...010 10 μF ...100 220 μF ...221
 1.5 μF ...015 47 μF ...470 560 μF ...561

C***: CERAMIC CAP.

- (1) DK16 --- 300, High dielectric constant ceramic condenser
 Disc type
 Temp. chara. 2B4, 50V
 Capacity value

Example

- ① Capacity value
 100 μF ...101 1000 μF ...102 10000 μF ...103
 470 μF ...471 2200 μF ...222

C***: ELECTROLY CAP. ($\frac{\square}{\square}$), FILM CAP. ($\frac{\square}{\square}$)

- (1) EA --- 10, Electrolytic condenser
 One-way lead type, Tolerance $\pm 20\%$
 Dielectric strength
 Capacity value

Examples

- ① Capacity value
 0.1 μF ...104 4.7 μF ...475 100 μF ...107
 0.33 μF ...334 10 μF ...106 330 μF ...337
 1 μF ...105 22 μF ...226 1100 μF ...108
 2200 μF ...228
 Working voltage
 6.3V...006 25V...025
 10V...010 35V...035
 18V...016 50V...050

- (2) DF15 --- 350, Plastic film condenser
 One-way type, Mylar $\pm 5\%$, 50V
 Capacity value

Examples

- ① Capacity value
 0.001 μF (1000pF) ...102 0.1 μF ...104
 0.0015 μF ...182 0.56 μF ...564
 0.01 μF ...103 1 μF ...105
 0.015 μF ...153

REF. DESIG.	PART NO.	DESCRIPTION
PA16-AUDIO DAC CIRCUIT BOARD		
PA16-CAPACITORS		
C301	4822 122 40491	Ceramic 0.022 μF +80% -20%
C305		
C810	4822 122 40617	Ceramic 0.1 μF +80% -20%
C811	4822 122 40617	Ceramic 0.1 μF +80% -20%
C835	4822 121 42713	Film 680pF $\pm 5\%$
C836	4822 124 90058	Elect 47 μF 25V
C837	4822 122 40617	Ceramic 0.1 μF +80% -20%
C838	4822 122 40617	Ceramic 0.1 μF +80% -20%
C839	4822 122 40617	Ceramic 0.1 μF +80% -20%
C840	4822 124 90058	Elect 47 μF 25V
C841	4822 124 90058	Elect 47 μF 25V
C851	4822 124 90386	Elect 10 μF 25V
C852	4822 124 90386	Elect 10 μF 25V
C853	4822 121 51282	Film 2400pF $\pm 2\%$
C854	4822 121 51282	Film 2400pF $\pm 2\%$
C855	4822 121 51281	Film 0.018 μF $\pm 2\%$
C856	4822 121 51281	Film 0.018 μF $\pm 2\%$
C857	4822 121 51283	Film 5600pF $\pm 2\%$
C858	4822 121 51283	Film 5600pF $\pm 2\%$
C863	4822 121 51126	Film 2200pF $\pm 2\%$
C864	4822 121 51126	Film 2200pF $\pm 2\%$
C865	4822 121 51144	Film 1000pF $\pm 2\%$
C866	4822 121 51144	Film 1000pF $\pm 2\%$
C869	4822 123 30093	Mica 5pF $\pm 0.5\mu\text{F}$
C870	4822 123 30093	Mica 5pF $\pm 0.5\mu\text{F}$
C871	4822 123 30096	Mica 47pF $\pm 5\%$
C872	4822 123 30096	Mica 47pF $\pm 5\%$
C873	4822 123 30093	Mica 5pF $\pm 0.5\mu\text{F}$
C874	4822 123 30093	Mica 5pF $\pm 0.5\mu\text{F}$
C875	4822 124 90387	Elect 220 μF 6.3V
C876	4822 124 90387	Elect 220 μF 6.3V
C877	4822 124 90387	Elect 220 μF 6.3V
C878	4822 124 90387	Elect 220 μF 6.3V
C890	4822 124 90386	Elect 10 μF 25V
C891		
C898	4822 124 22238	Elect 100 μF 25V
C842	4822 122 40617	Ceramic 0.1 μF +80% -20%
C844	4822 122 40617	Ceramic 0.1 μF +80% -20%
C845	4822 122 40617	Ceramic 0.1 μF +80% -20%
C846	4822 122 40617	Ceramic 0.1 μF +80% -20%
C853	4822 124 90058	Elect 47 μF 25V
C854	4822 124 90058	Elect 47 μF 25V
C855	4822 124 22242	Elect 470 μF 25V
C856	4822 124 22242	Elect 470 μF 25V
PA16-RESISTORS		
R622	4822 116 52891	10 Ω $\pm 2\%$ $\frac{\square}{\square}$ W
R661	4822 116 53212	4.64K Ω $\pm 2\%$ $\frac{\square}{\square}$ W
R652	4822 116 53212	4.64K Ω $\pm 2\%$ $\frac{\square}{\square}$ W
R653	4822 116 53377	2.74K Ω $\pm 2\%$ $\frac{\square}{\square}$ W
R654	4822 116 53377	2.74K Ω $\pm 2\%$ $\frac{\square}{\square}$ W
R655	4822 116 53185	1.47K Ω $\pm 2\%$ $\frac{\square}{\square}$ W
R656	4822 116 53185	1.47K Ω $\pm 2\%$ $\frac{\square}{\square}$ W
R657	4822 116 53393	825 Ω $\pm 2\%$ $\frac{\square}{\square}$ W
R658	4822 116 53393	825 Ω $\pm 2\%$ $\frac{\square}{\square}$ W
R665	4822 116 80262	2.37K Ω $\pm 2\%$ $\frac{\square}{\square}$ W

REF. DESIG.	PART NO.	DESCRIPTION
R666	4822 116 80262	2.37K Ω $\pm 2\%$ $\frac{1}{4}W$
R667	4822 116 80262	2.37K Ω $\pm 2\%$ $\frac{1}{4}W$
R668	4822 116 80262	2.37K Ω $\pm 2\%$ $\frac{1}{4}W$
R675	4822 116 53772	3.32K Ω $\pm 2\%$ $\frac{1}{4}W$
R676	4822 116 53772	3.32K Ω $\pm 2\%$ $\frac{1}{4}W$
R677	4822 116 53241	21.5K Ω $\pm 2\%$ $\frac{1}{4}W$
R678	4822 116 53241	21.5K Ω $\pm 2\%$ $\frac{1}{4}W$
R679	4822 116 53791	1.54K Ω $\pm 2\%$ $\frac{1}{4}W$
R680	4822 116 53791	1.54K Ω $\pm 2\%$ $\frac{1}{4}W$
R683	4822 116 53781	56.2 Ω $\pm 2\%$ $\frac{1}{4}W$
R684	4822 116 53781	56.2 Ω $\pm 2\%$ $\frac{1}{4}W$
R691	4822 116 52892	100 Ω $\pm 5\%$ $\frac{1}{4}W$
R698	4822 116 52892	100 Ω $\pm 5\%$ $\frac{1}{4}W$
R853	5322 116 53214	562 Ω $\pm 2\%$ $\frac{1}{4}W$
R854	5322 116 53214	562 Ω $\pm 2\%$ $\frac{1}{4}W$
R855	4822 116 53079	3.83K Ω $\pm 2\%$ $\frac{1}{4}W$
R856	4822 116 53079	3.83K Ω $\pm 2\%$ $\frac{1}{4}W$
R857	4822 116 60331	1K Ω $\pm 5\%$ 1W
R858	4822 116 60331	1K Ω $\pm 5\%$ 1W
R859	4822 116 52956	1.21K Ω $\pm 2\%$ $\frac{1}{4}W$
R860	4822 116 52956	1.21K Ω $\pm 2\%$ $\frac{1}{4}W$
R861	4822 116 53297	1.78K Ω $\pm 2\%$ $\frac{1}{4}W$
R862	4822 116 53297	1.78K Ω $\pm 2\%$ $\frac{1}{4}W$
R863	4822 116 52956	1.21K Ω $\pm 2\%$ $\frac{1}{4}W$
R864	4822 116 52956	1.21K Ω $\pm 2\%$ $\frac{1}{4}W$
PA16-SEMICONDUCTORS		
D851	4822 130 33074	Diode 30DF2
D854	4822 130 33664	Zener HZ6L
D855	4822 130 33664	Zener HZ6L
D856	4822 130 33664	Zener HZ6L
Q319	4822 209 73985	IC TC74HC153P
Q521	4822 209 72969	IC TDA1541A
Q551	4822 130 70226	IC NJM5534D
Q552	4822 130 70226	IC NJM5534D
Q553	4822 130 70226	IC NJM5534D
Q554	4822 130 70226	IC NJM5534D
Q555	4822 130 70226	IC NJM5534D
Q556	4822 130 42842	F.E.T. 2SK372(GR, BL)
Q557	4822 130 42842	F.E.T. 2SK372(GR, BL)
Q558	4822 209 70226	IC NJM5534D
Q559	4822 209 70226	IC NJM5534D
Q551	4822 130 43031	Transistor 2SB507(D)
Q552	4822 130 43323	Transistor 2SD313(D)
Q553	4822 130 43076	Transistor 2SA1048(GR)
Q554	4822 130 60839	Transistor 2SC2458(D, Y)
Q555	4822 130 42591	Transistor 2SA1175(FF, EF)
Q556	5322 130 42052	Transistor 2SC2785(FF, EF)
PA16-MISCELLANEOUS		
J301	4822 264 30217	Jack, Optical Input
J302	4822 264 30217	Jack, Optical Input
J303	4822 264 30217	Jack, Optical Input
J304	4822 264 22588	Jack, Optical Output
J322	4822 265 40771	Jack, 7P
J323	4822 265 30641	Plug, 2P
J650	4822 265 40771	Jack, 7P
J653	4822 265 30641	Plug, 2P
J654	4822 265 30641	Plug, 2P
J861	4822 265 20205	Plug, 3P
J862	4822 265 30639	Plug, 3P

REF. DESIG.	PART NO.	DESCRIPTION
JG31	4822 290 40296	Terminal, Earth
JG61	4822 290 40296	Terminal, Earth
JG82	4822 290 40296	Terminal, Earth
L301	4822 157 53801	Choke Coil 47 μ H
L302	4822 157 53801	Choke Coil 47 μ H
L303	4822 157 53801	Choke Coil 47 μ H
W321	4822 265 30661	Jack, 7P
PA26-BALANCE AMP CIRCUIT BOARD		
PA26-CAPACITORS		
C701	4822 124 90389	Elect 4.7 μ F 25V
C702	4822 124 90389	Elect 4.7 μ F 25V
C703	4822 124 90389	Elect 4.7 μ F 25V
C704	4822 124 90389	Elect 4.7 μ F 25V
C705	4822 121 51144	Film 1000pF $\pm 2\%$
C706	4822 121 51144	Film 1000pF $\pm 2\%$
C707	4822 124 22238	Elect 100 μ F 25V
C708	4822 124 22238	Elect 100 μ F 25V
C717	4822 121 51209	Film 0.015 μ F $\pm 2\%$
C718	4822 121 51209	Film 0.015 μ F $\pm 2\%$
C731	4822 124 22238	Elect 100 μ F 25V
C732	4822 124 22238	Elect 100 μ F 25V
C733	4822 124 22238	Elect 100 μ F 25V
C734	4822 124 22238	Elect 100 μ F 25V
C737	4822 124 22736	Elect 1000 μ F 25V
C738	4822 124 22736	Elect 1000 μ F 25V
PA26-RESISTORS (All Resistors are $\pm 2\%$ and $\frac{1}{4}W$)		
R701	4822 116 53387	5.62K Ω
R702	4822 116 53387	5.62K Ω
R703	5322 116 53212	4.64K Ω
R704	5322 116 53212	4.64K Ω
R705	4822 116 53387	5.62K Ω
R706	4822 116 53387	5.62K Ω
R709	4822 116 53108	1K Ω
R710	4822 116 53108	1K Ω
R711	4822 116 53387	5.62K Ω
R712	4822 116 53387	5.62K Ω
R713	4822 116 53387	5.62K Ω
R714	4822 116 53387	5.62K Ω
R715	4822 116 53214	562 Ω
R716	4822 116 53214	562 Ω
R717	4822 116 53214	562 Ω
R718	4822 116 53214	562 Ω
R719	4822 116 53784	68.1K Ω
R720	4822 116 53784	68.1K Ω
R731	4822 116 52892	100 Ω $\pm 5\%$
R732	4822 116 52892	100 Ω $\pm 5\%$
R733	4822 116 52892	100 Ω $\pm 5\%$
R734	4822 116 52892	100 Ω $\pm 5\%$
R737	4822 116 53387	5.62K Ω
R738	4822 116 53387	5.62K Ω
PA26-SEMICONDUCTORS		
D703	4822 130 31018	Diode 1S1555, etc.
Q701	4822 209 70226	IC NJM5534D
Q702	4822 209 70226	IC NJM5534D
Q703	4822 209 70226	IC NJM5534D
Q704	4822 209 70226	IC NJM5534D

REF. DESIG.	PART NO.	DESCRIPTION
PA26-MISCELLANEOUS		
J701	4822 265 30641	Plug, 2P
J702	4822 265 30641	Plug, 2P
J703	4822 265 30662	Plug, 6P
J706	4822 265 30662	Plug, 6P
L701	4822 148 80787	Output Transformer (L)
L702	4822 148 80787	Output Transformer (R)
L703	4822 280 20285	Relay SV-12
PD16-DEMO CIRCUIT BOARD		
PD16-CAPACITORS		
C401	5322 122 32143	Ceramic 22pF ±5%
C404	4822 122 32185	Ceramic 10pF ±0.5pF
C405	4822 122 32185	Ceramic 10pF ±0.5pF
C408	4822 122 40617	Ceramic 0.1μF +80% -20%
C419	4822 122 40617	Ceramic 0.1μF +80% -20%
C421	4822 122 40617	Ceramic 0.1μF +80% -20%
C424	4822 122 40617	Ceramic 0.1μF +80% -20%
C428	4822 122 40617	Ceramic 0.1μF +80% -20%
C429	4822 122 40617	Ceramic 0.1μF +80% -20%
C451	4822 122 33656	Ceramic 39pF ±5%
C452	4822 122 33657	Ceramic 56pF ±5%
C453	4822 121 42713	Film 680pF ±5%
C455	4822 122 32143	Ceramic 22pF ±5%
C459	4822 122 40617	Ceramic 0.1μF +80% -20%
C462	4822 122 32896	Ceramic 680pF ±5%
C464	5322 122 31626	Ceramic 100pF ±5%
C467	4822 122 32486	Ceramic 0.01μF +80% -20%
C468	5322 122 32143	Ceramic 22pF ±5%
C470	4822 122 32486	Ceramic 0.01μF +80% -20%
C472	4822 121 51382	Film 560pF ±5%
C482	4822 122 40617	Ceramic 0.1μF +80% -20%
C484	4822 122 40616	Ceramic 0.1μF +80% -20%
C485	4822 122 40617	Ceramic 0.1μF +80% -20%
C487	4822 122 40617	Ceramic 0.1μF +80% -20%
C489	4822 122 40617	Ceramic 0.1μF +80% -20%
C490	4822 122 40617	Ceramic 0.1μF +80% -20%
C491	4822 122 40491	Ceramic 0.022μF +80% -20%
C494	4822 122 32486	Ceramic 0.01μF +80% -20%
PD16-RESISTORS		
R452	4822 116 80958	20KΩ ±1% 1/6W
R453	4822 116 80957	13.3KΩ ±1% 1/6W
R454	4822 116 80251	100KΩ ±1% 1/6W
R455	4822 116 80959	7.5KΩ ±1% 1/6W
PD16-SEMICONDUCTORS		
D403	4822 130 33305	Diode 1SS133, etc.
D451	4822 130 80061	Zener 12V
D452	4822 130 80061	Zener 12V
D453	4822 130 80302	Varistor MA27A
D454	4822 130 80302	Varistor MA27A
D455	4822 130 31542	Varicap 5VC321SP
D456		
D463	4822 130 33305	Diode 1SS133, etc.
D495	4822 130 33305	Diode 1SS133, etc.
D496	4822 130 33305	Diode 1SS133, etc.

REF. DESIG.	PART NO.	DESCRIPTION
Q401	4822 209 73666	IC YM2637B
Q407	4822 209 72545	IC SAA7220P/B
Q411	4822 209 72339	IC TLP570
Q416	4822 209 72323	IC TC74HC04P
Q451	4822 130 42591	Transistor 2SA1175(FF, EF)
Q452	4822 130 42591	Transistor 2SA1175(FF, EF)
Q453	5322 130 42052	Transistor 2SC2785(FF, EF)
Q454	5322 130 42052	Transistor 2SC2785(FF, EF)
Q455	4822 130 43536	F.E.T. 2SK30ATM(GR)
Q456	4822 130 43792	Transistor 2SC1815(Y)
Q457	4822 130 61357	F.E.T. 2SK161(GR)
Q458	4822 130 61464	Transistor 2SC2347
Q459	5322 130 42052	Transistor 2SC2785(FF, EF)
Q460	4822 130 61188	Transistor DTC144TS, Digital
Q461	4822 130 61321	Transistor DTC124EX, Digital
Q462	4822 130 61321	Transistor DTC124EX, Digital
Q463	4822 209 73676	IC TC74HC56P
Q464	4822 209 73677	IC TC74HC123P
Q465	4822 209 73984	IC MC4044P
Q466	4822 209 72323	IC TC74HC04P
Q467	4822 209 73678	IC TC74HC393P
Q468	4822 209 72322	IC TC74HC00P
Q469	4822 209 73679	IC HD74HC673
Q470	4822 209 73681	IC HD74HC674
Q471	4822 209 73677	IC TC74HC123P
Q472	4822 209 72333	IC TC74HC74P
Q473	4822 209 73675	IC TC74HC08P
Q474	4822 209 72333	IC TC74HC74P
Q475	4822 209 72333	IC TC74HC74P
Q477	4822 209 72333	IC TC74HC74P
Q478	4822 209 73677	IC TC74HC123P
Q481	5322 130 42052	Transistor 2SC2785(FF, EF)
Q482	5322 130 42052	Transistor 2SC2785(FF, EF)
PD16-MISCELLANEOUS		
JG41	4822 290 40296	Terminal, Earth
JG42	4822 290 40296	Terminal, Earth
J404	4822 265 30639	Plug, 3P
L451	4822 152 20562	Choke Coil 150μH
L452	4822 157 53799	Choke Coil 1.5μH
L454	4822 157 53801	Choke Coil 47μH
L455	4822 157 53801	Choke Coil 47μH
X401	4822 242 72334	Crystal 16.9344MHz
PP26-POWER SWITCH CIRCUIT BOARD		
Δ GH01	4822 122 40305	Ceramic Cap 0.01μF 400V
Δ SH01	4822 276 11141	Push Switch, Power
PJ16-DIGITAL IN/OUT CIRCUIT BOARD		
PJ16-CAPACITORS		
C312	4822 122 40617	Ceramic 0.1μF +80% -20%
C313	4822 122 40617	Ceramic 0.1μF +80% -20%
C314	4822 122 40617	Ceramic 0.1μF +80% -20%
C315	4822 122 40491	Ceramic 0.022μF +80% -20%
C319	4822 122 40617	Ceramic 0.1μF +80% -20%

REF. DESIG.	PART NO.	DESCRIPTION
PJ16-RESISTORS		
R311	4822 116 80417	75Ω ±1% 1/6W
R316	4822 116 80417	75Ω ±1% 1/6W
R321	4822 116 80417	75Ω ±1% 1/6W
PJ16-SEMICONDUCTORS		
D314	4822 130 33305	Diode 1SS133, etc.
D319	4822 130 33305	Diode 1SS133, etc.
D324	4822 130 33305	Diode 1SS133, etc.
DN05	4822 130 33305	Diode 1SS133, etc.
Q311 }	4822 130 61447	Transistor 2SC3732(L)
Q316		
Q318	4822 209 73985	IC TC74HC153P
Q320	4822 209 72323	IC TC74HCU04P
PJ16-MISCELLANEOUS		
J311	4822 267 31032	Terminal, 2P; RCA
J312	4822 267 31031	Terminal, 2P; RCA
J651	4822 267 31032	Terminal, 2P; RCA
L311	4822 142 60388	Pulse Transformer
LN01	4822 280 20285	Relay SV-12
PL16-LAMP CIRCUIT BOARD		
JL01	4822 265 10221	Jack, 10P
LL01 }	4822 134 40928	Lamp 75mA 12V
LL08		
PP16-POWER SUPPLY CIRCUIT BOARD		
PP16-CAPACITORS		
C802	4822 122 40491	Ceramic 0.022μF +80% -20%
ΔC803	4822 124 22243	Elect 6800μF 18V
C807	4822 124 90051	Elect 220μF 25V
ΔC824	4822 124 22239	Elect 3300μF 25V
ΔC825	4822 124 22239	Elect 3300μF 25V
C826	4822 124 90051	Elect 220μF 25V
C827	4822 124 90051	Elect 220μF 25V
C828	4822 122 40491	Ceramic 0.022μF +80% -20%
C832	4822 124 90051	Elect 220μF 25V
PP16-SEMICONDUCTORS		
ΔD801	4822 130 33056	Diode U058
ΔD802	4822 130 33056	Diode U058
ΔD803	4822 130 33056	Diode U058
ΔD804	4822 130 33056	Diode U058
ΔD805	4822 130 32155	Diode W06B
ΔD806	4822 130 32155	Diode W06B
ΔD807	4822 130 32155	Diode W06B
ΔD808	4822 130 32155	Diode W06B
ΔD813	4822 130 32155	Diode W06B
ΔD814	4822 130 32155	Diode W06B
ΔD821	4822 130 32155	Diode W06B
ΔD822	4822 130 32155	Diode W06B
ΔD823	4822 130 32155	Diode W06B
ΔD824	4822 130 32155	Diode W06B
ΔD831	4822 130 33095	Zener RD6.8E92
D832	4822 130 33799	Zener 4.7V


REF. DESIG.	PART NO.	DESCRIPTION
ΔQ801	4822 209 83824	IC NJM7805
ΔQ802	4822 209 83824	IC NJM7805
Q806	4822 130 42298	Transistor 2SC5365P, etc.
Q810		
ΔQ821	4822 209 70086	IC NJM79M12A
ΔQ822	4822 209 70084	IC NJM7812
ΔQ831	4822 130 60353	Transistor 2SA135E(O, Y)
Q832	4822 130 42591	Transistor 2SA1175(FF, EF)
PP16-MISCELLANEOUS		
ΔF801	4822 265 20205	Plug, 3P
ΔF802	4822 265 20017	Fuse 800mA 250V
ΔF821	4822 265 20017	Fuse 800mA 250V
ΔF822	4822 265 20017	Fuse 800mA 250V
JG81	4822 290 40296	Terminal, Earth
ΔJ801	4822 266 30239	Jack, Fuse Holder
ΔJ802	4822 266 30239	Jack, Fuse Holder
J804	4822 265 30641	Plug, 2P
J806	4822 265 30643	Plug, 4P
J820	4822 265 30662	Plug, 6P
ΔJ821	4822 266 30239	Jack, Fuse Holder
ΔJ822	4822 266 30239	Jack, Fuse Holder
J823	4822 265 20205	Plug, 3P
PS16-FUNCTION SW./PHONE CIRCUIT BOARD		
C925	4822 122 40617	Ceramic Cap. 0.1μF +80% -20%
R900	4822 100 20632	Resistor 10KΩ(A)x2, Variable
R821	4822 111 20384	Resistor 6.8Ω ±5% 1/4W, Fusible
R922	4822 111 20384	Resistor 6.8Ω ±5% 1/4W, Fusible
D901	4822 130 33305	Diode 1SS133, etc.
DS01	4822 130 33305	Diode 1SS133, etc.
DS13		
Q901	4822 209 83654	IC NJM4556D
Q902	4822 209 83654	IC NJM4556D
QS01	4822 130 60839	Transistor 2SC2458(O, Y)
QS02	4822 130 60839	Transistor 2SC2458(O, Y)
QS03	4822 130 42052	Transistor 2SC2785(FF, EF)
JG81	4822 265 10158	Plug, 2P
J900	4822 267 31026	Jack, Phone
L901	4822 280 20285	Relay SV-12
SS01	4822 273 20312	Rotary Switch
SS02	4822 273 50297	Rotary Switch

NOTE ON SAFETY:

Symbol Δ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol Δ. Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

14. RC-12CD EXPLODED VIEW AND PARTS LIST

Model RC-12CD

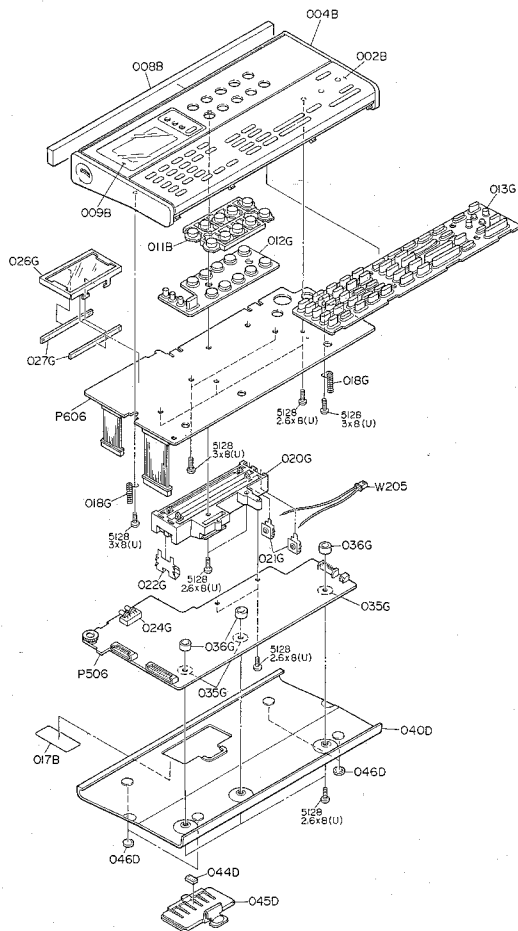

REF. DESIG.	PART NO.	DESCRIPTION
0028	4822 432 30345	Front Panel
0048	4822 432 30344	Case Assembly
0088	4822 450 61307	Window, Front Side
0098	4822 381 11039	Window, LCD
0119	4822 276 80346	Button, Function
040D	4822 432 30346	Lid, Bottom
045D	4822 432 30347	Lid, Battery
046D	4822 462 41084	Leg
012G	4822 276 80344	Connector, Key
013G	4822 276 80345	Connector, Key
018G	4822 482 33876	Spring
020G	4822 256 60301	Holder, Battery
021G	4822 290 80846	Connector (L)
022G	4822 290 80847	Connector (R)
038G	4822 520 10573	Sustainer

15. RC-12CD ELECTRICAL PARTS LIST

Model DA-12

ASSIGNMENT OF COMMON PARTS CODES.

RESISTOR
R*** (1) GD05...142 Carbon film fixed resistor, ±5%, 1/4W
R*** (2) GD06...160 Carbon film fixed resistor, ±5%, 1/6W
① Resistance value

Examples
① Resistance value
0 111...001 100...100 1k1...102 100k1...104
0.51...005 181...180 2.7k1...272 680k1...684
111...010 100k1...101 10k1...103 1Mk1...105
6.81...068 390k1...391 22k1...223 4.7Mk1...475

(Note) Please distinguish 1/4W from 1/6W by the shape of parts used actually.

C*** CERAMIC CAP.
(1) DD1...370. Ceramic condenser
Disc type
Temp. coeff. P360 ~ N1000, 50V
① Capacity value
Tolerance

Examples
① Tolerance (Capacity deviation)
±0.25pF...0
±0.5pF...1
±5%...5
* Tolerance of COMMON PARTS handled here are as follows:
0.5pF ~ 5pF...±0.25pF
5pF ~ 10pF...±0.5pF
12pF ~ 500pF...±5%
② Capacity value
0.5pF...005 3pF...030 100pF...101
1pF...010 10pF...100 220pF...221
1.5pF...015 47pF...470 560pF...561

C*** CERAMIC CAP.
(1) DK16...300. High dielectric constant ceramic condenser
Disc type
Temp. chara. 2B4, 50V
① Capacity value

Example
① Capacity value
100pF...101 1000pF...102 10000pF...103
470pF...471 220pF...222

C*** ELECTROLY CAP. (E) 1 FILM CAP. (F)
(1) EA...10. Electrolytic condenser
One-way lead type, Tolerance ±20%
① Dielectric strength
Capacity value

Examples
① Capacity value
0.1pF...104 4.7pF...475 100pF...107
0.33pF...334 10pF...108 330pF...337
1pF...106 22pF...226 1100pF...108
2200pF...228
② Working voltage
6.3V...008 25V...025
10V...010 35V...035
16V...016 50V...050

(2) DF15...3F0. Plastic film condenser
One-way type, Mylar ±5% 50V
① Capacity value

Examples
① Capacity value
0.001pF(1000pF)...102 0.1pF...104
0.0015pF...182 0.56pF...564
0.01pF...103 1pF...105
0.015pF...153

REF. DESIG.	PART NO.	DESCRIPTION
P506-MAIN CIRCUIT BOARD		
C101	4822 124 22319	P506-CAPACITORS
C106	4822 124 22319	Elect. 1000pF 6.3V
C107	4822 124 22476	Elect. 1000pF 6.3V
C107	4822 124 22476	Elect. 4.7pF 25V
C131	4822 122 32685	Ceramic 0.001pF ±10%
P506-RESISTORS, CHIP (All Resistors are ±5% and 1/10W)		
R101	4822 111 90896	10KΩ
R102	4822 111 90896	100KΩ
R103	4822 111 90892	5.6KΩ
R104	4822 111 90918	4.7KΩ
R106	4822 111 90895	10KΩ
R107	4822 111 90895	68KΩ
R112	4822 111 90897	1MΩ
R113	4822 111 90895	10KΩ
R114	4822 111 90919	47KΩ
R115	4822 111 90896	100KΩ
R117	4822 111 90895	10KΩ
R118	4822 111 90896	100KΩ
R150	4822 100 11451	20KΩ(B), Variable
R152	4822 111 90906	2.2KΩ
R183	4822 111 90896	100KΩ
R184	4822 111 90896	100KΩ
R185	4822 111 91459	22Ω
R186	4822 111 91459	22Ω
R181	4822 111 90907	22KΩ
R192	4822 111 91461	680KΩ
R193	4822 111 90811	27KΩ
R194	4822 111 90907	22KΩ
R195	4822 111 90919	47KΩ
R196	4822 111 90913	33KΩ
R197	4822 111 90896	100KΩ
R198	4822 111 90918	4.7KΩ
R501	4822 116 90603	150Ω
R502	4822 111 90893	100Ω
P506-SEMICONDUCTORS		
D101	4822 130 81052	Zener HZ5ALL
D102	4822 130 32635	Diode, Chip MA-151K
D103	4822 130 32635	Diode, Chip MA-151K
D104	4822 130 32635	Diode, Chip MA-151K
D106	4822 130 32635	Diode, Chip MA-151K
D109	4822 130 81053	L.E.D. TLN1058
D110	4822 130 81053	L.E.D. TLN1058
D119	4822 130 81054	L.E.D. TP5703
Q101	4822 209 73593	Microprocessor M50747-FF
Q102	4822 209 51607	IC TC54256AF
Q103	4822 209 73588	IC 64K
Q104	4822 209 71322	IC 74HC14P
Q105	4822 209 73592	IC 74HC139P
Q106	4822 209 72642	IC 74HC74P
Q111	4822 209 73587	IC RS7520(D)
Q112	4822 130 42733	Transistor 2SA1162(G), Chip
Q113	4822 130 42733	Transistor 2SA1162(G), Chip
Q114	4822 130 61405	Transistor 2SC2411(R), Chip
Q116	4822 130 43398	Transistor 2SC2712(G), Chip
Q129	4822 130 42733	Transistor 2SA1162(G), Chip
Q130	4822 130 43398	Transistor 2SC2712(G), Chip
Q131	4822 130 43398	Transistor 2SC2712(G), Chip

REF. DESIG.	PART NO.	DESCRIPTION
P506-MISCELLANEOUS		
B101	4822 138 10297	Battery CR2032-1HF
J101	4822 265 20413	Jack, 11P
J102	4822 265 20414	Jack, 15P
J105	4822 265 20412	Jack, 2P
X101	4822 242 72321	Crystal 8MHz
P506-KEY CIRCUIT BOARD		
R201	4822 116 80974	91KΩ ±1% 1/10W
R202	4822 111 91139	6.8KΩ ±5% 1/10W
R206		
P506-SEMICONDUCTORS		
Q201	4822 209 73591	IC HD44780
Q202	4822 209 73589	IC HD44100H
K201	4822 130 90627	Display Unit

Model DA-12 Specifications

Number of Channels	2 stereo
D/A Converter	16-bit, Fourfold oversampling
Sampling Rate	Compatible with 44.1 KHz and 48 KHz (Automatic Selection)
Frequency Response (with a 44.1 KHz input signal)	
Unbalanced Outputs	2 Hz ~ 20 KHz ± 0.1 dB
BALANCED Outputs	20 Hz ~ 20 KHz ± 0.3 , -0.6 dB
Signal-to-noise Ratio	101 dB
Dynamic Range	96 dB
Channel Separation	100 dB
Total Harmonic Distortion	0.0015% (at 1 KHz)
Digital Input Terminals	
COAXIAL 1 and COAXIAL 2	Input Level 0.5 V P-P Input Impedance 70 Ohms
OPTICAL 1 and OPTICAL 2	Input Level $-15 \sim -23$ dBm
Digital Audio Taperecorder Terminals	
COAXIAL Input Terminals	Input Level 0.5 V P-P Input Impedance 75 Ohms
OPTICAL Input Terminals	Input Level $-15 \sim -23$ dBm
COAXIAL Output Terminals	Output Level 0.5 V P-P Output Impedance 75 Ohms
OPTICAL Output Terminals	Output Level $-15 \sim -23$ dBm
Analogue Output Terminals	
Unbalanced Output Terminals	Output Level 2 V rms Output Impedance 100 Ohms Matching Load Impedance: More than 10 K Ohms
BALANCED Output Terminals	Output Level (open load) 3 V rms Output Impedance 100 Ohms Matching Load Impedance: Balanced: 600 Ohms Unbalanced: 600 Ohms ~ 50 K Ohms
HEADPHONE Output Terminal (THD: 0.1%)	Output Level 32 Ohms, 45 mW Matching Load Impedance: 8 Ohms ~ 1000 Ohms
Power Supply	
Voltage	220/240 V
Line Frequency	50 Hz or 60 Hz
Power Consumption	18 W
Dimensions and Weight	
Width	455 mm
Height	103 mm
Depth	345 mm
Weight	14 kg
Accessories	
XLR Connection cord	1 pair

16. TECHNICAL SPECIFICATIONS


Model CD-12 Specifications


Optical Readout System	
Laser	Semi-conductor AlGaAs
Wave Length	780 nm
Digital Output Terminals	
Coaxial 1, 2	Output Level 0.5 V P-P
	Output Impedance 75 Ohms
Optical 1, 2	Output Level -15 ~ -23 dBm
Power Supply	
Voltage	220/240 V
Line Frequency	50 Hz or 60 Hz
Power Consumption	15 W
Temperature Range	5°C ~ 35°C
Humidity Range	Without Dew 5% ~ 90%
Dimensions and Weight	
Width	455 mm
Height	103 mm
Depth	345 mm
Weight	14 kg
Accessories	
Coaxial Connection Cord	1 pc.
Optical Fiber Cable	1 pc.

Model RC-12CD Specifications

IR Wave Length	950 nm
IR Reach Distance (at 25°C)	7 m
Power Supply	4 pcs. of (R6/SUM-3/Size AA) batteries
Learning Specifications	
Condition: Aline two remote control units head to head	
Distance between Two Units	50 mm
Maximum Number of Learning Codes	
D-BUS	296 codes
Others	Approx. 150 codes
Battery Life	
	More than one year (30 times transmit/day)
Battery Replacement Time	Within 5 minutes
Dimensions and Weight	
Width	260 mm
Height	31 mm
Depth	126 mm
Weight	680 g

17. SCHEMATIC DIAGRAM

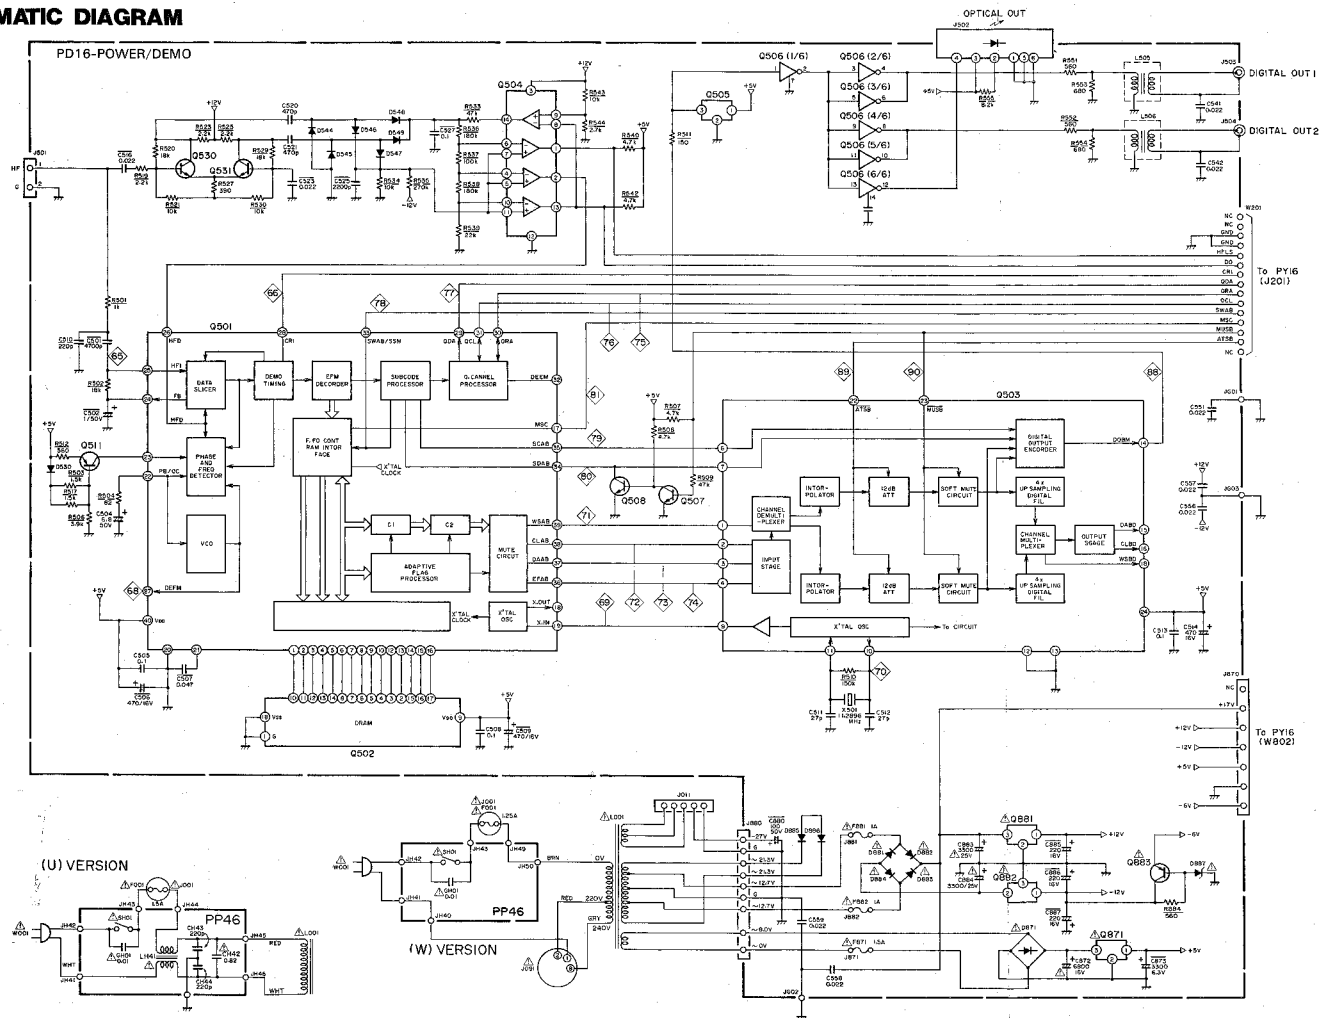

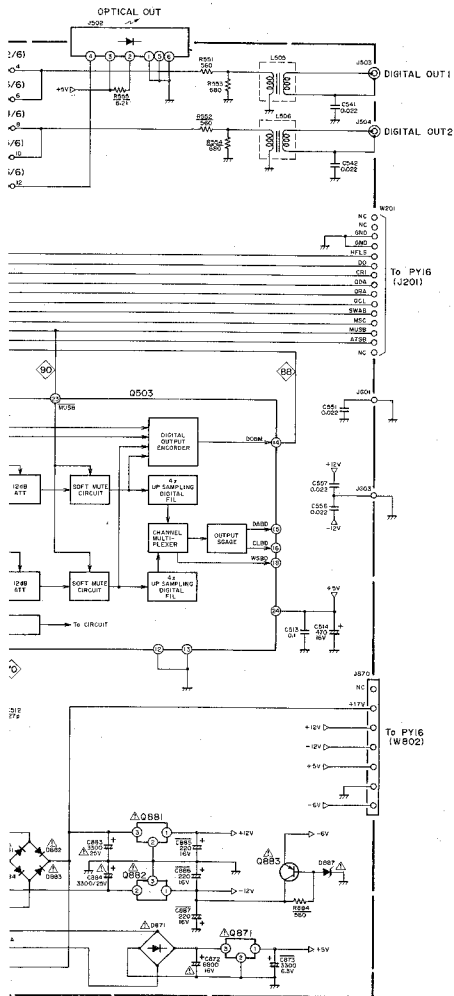

Q501
SAA7210

Q502
μPD4146C-20

Q503
SAA7220A

Q504
1R2339

Q505
PST529C

Q506
74HC004

Q507, Q508, Q530, Q531
2SC2785 (FF, EF)

Q511
2SA1005 (K, L)

Q871
NJM7805FA

Q881
NJM7812FA

Q882
NJM7912FA

Q883
2SA1358 (O, Y)



D530
MA27A

D544 ~ D549
30V

D871
92V820

D881 ~ D886
RL103E

D887
6.8V

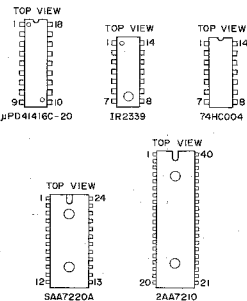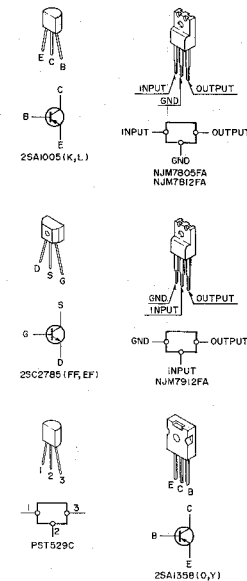

Kind of Common Parts

RESISTOR

R*** (1) GD05 -- 140, Carbon film fixed resistor, ±5% 1/4W
R*** (2) GD05 -- 160, Carbon film fixed resistor, ±5% 1/6W
C*** : CERAMIC CAP.

C*** (1) DD1 -- 370, Ceramic condenser, disc type (titan condenser)
Temp. coeff. P350 -- N1000 50V

C*** : CERAMIC CAP.
(1) DK16 -- 300, High dielectric constant ceramic condenser, disc type (titan variable)
Temp. chara. 2B4 50V

C*** : ELECTROLY CAP. () / FILM CAP. ()
(1) EA ----- 10, Electrolytic condenser, one-way lead type, tolerance ±20%
(2) DF15 -- 350, Plastic film condenser, one-way type, Mylar, ±5% 50V

* In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"



"SERVICE INFORMATION IS FOR USE BY QUALIFIED PERSONNEL ONLY -- ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER--"

NOTE ON SAFETY:


Symbol  Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.


PS26 TEN KEYS P.W.B.

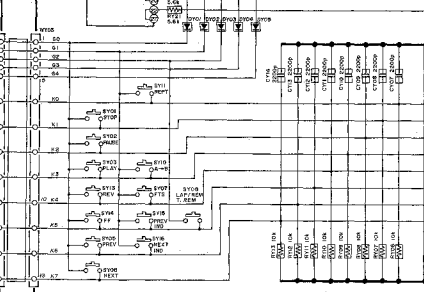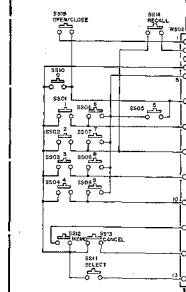


PM16 DISPLAY R.W.B.



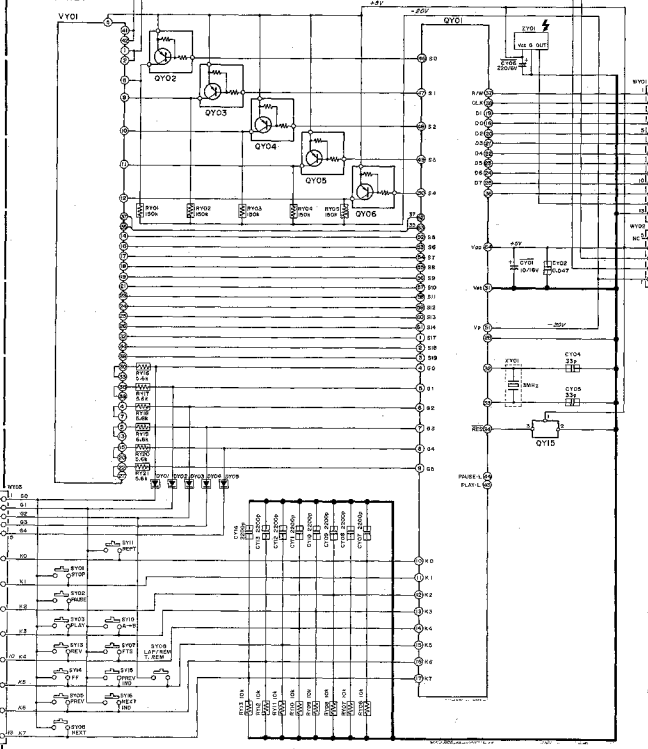


PM16 FEATURE μ COM P.W.B.

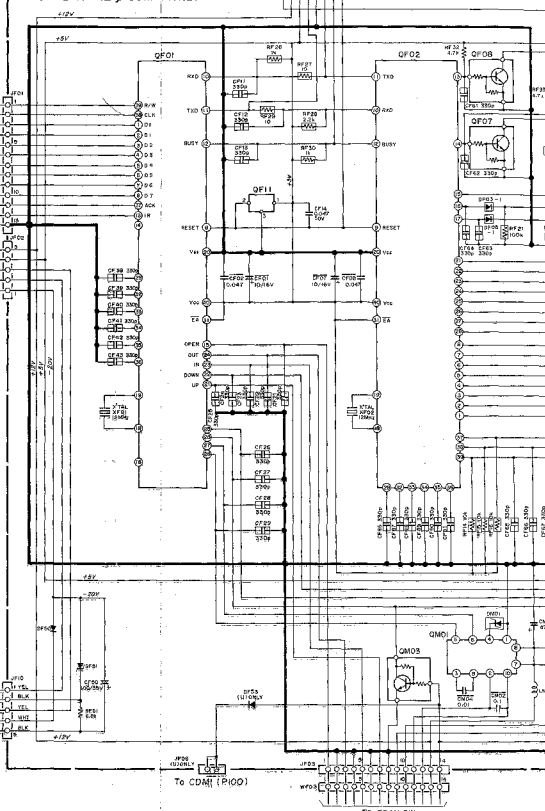

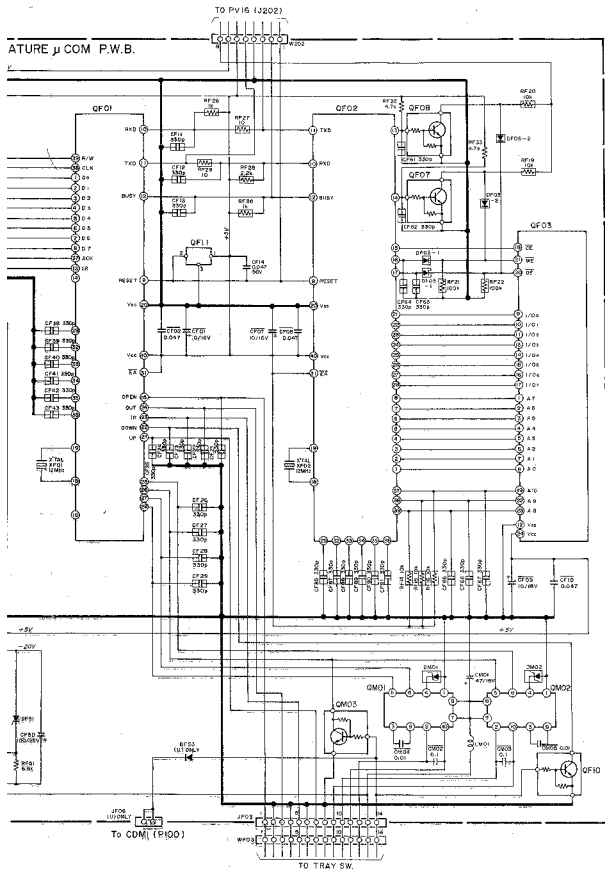ATURE μ COM P.W.B.QV01
LC6554DQV02 ~ QV08
DTA114YK 10W/47KQF11
PST524DQV15
PST523DQM01, QM02
LB1645NQF01
MSM83C154QF02
MSM80C51QF03
MSM2816A, XL2816AQF07, QF08, QF10, QM03
UN2214 10W/47KDV01 ~ DV06
QF03, QF05MA151K
DV51, DV52, DF50, DF53

RL103E, DSF10C

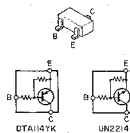QM01, QM02
OC28-2DF51
5.6V ZENER

Kind of Common Parts

RESISTOR

- R*** (1) GD05 -- 140, Carbon film fixed resistor, $\pm 5\%$ 1/4W
 R*** (2) GD05 -- 160, Carbon film fixed resistor, $\pm 5\%$ 1/6W
 C*** CERAMIC CAP.
 (1) DD1 --- 370, Ceramic condenser, disc type (titan condenser)
 Temp. coeff. P390 -- N1000 50V

C*** CERAMIC CAP.

- (1) DK16 -- 300, High dielectric constant ceramic condenser, disc type (titan variable)
 Temp. chara. 284 50V

C*** ELECTROLY CAP. ($\pm$) / FILM CAP. ($\pm$)

- (1) EA ----- 10, Electrolytic condenser, one-way lead type, tolerance $\pm 20\%$
 (2) DF15 --- 350, Plastic film condenser, one-way type, Mylar, $\pm 5\%$ 50V


* In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"


"SERVICE INFORMATION IS FOR USE BY QUALIFIED PERSONNEL ONLY -- ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER--"

NOTE ON SAFETY:

Symbol Δ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol Δ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice. 5

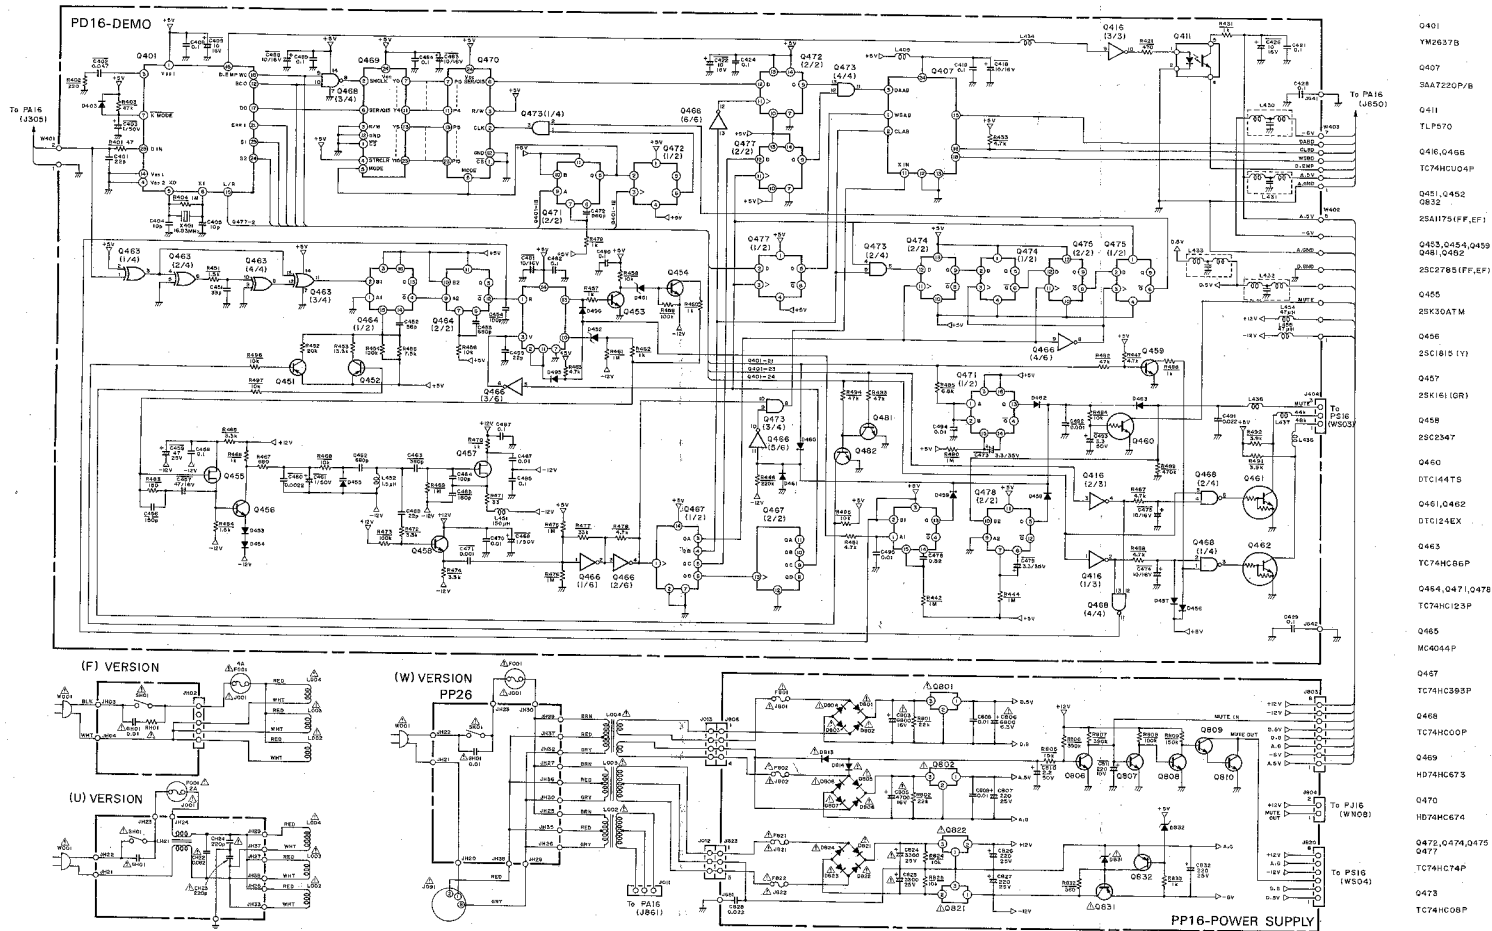


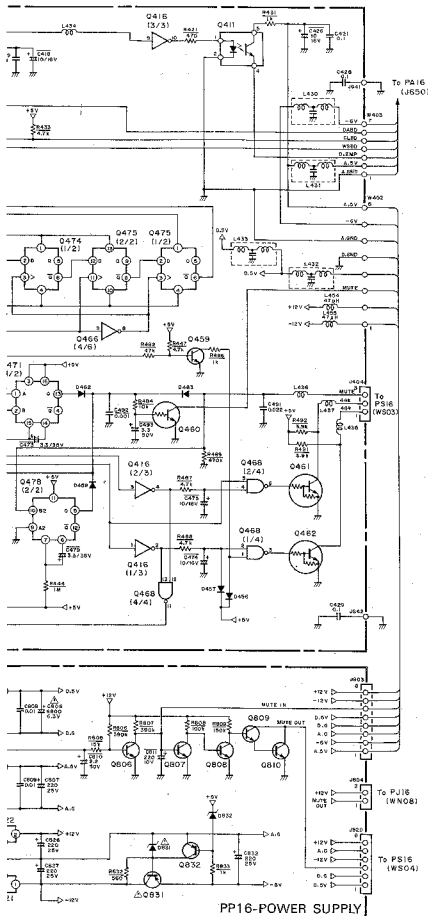

Q401
YM26378
Q407
5AA7220P/B
Q411
TLP570
Q416, Q466
TC74HC04P
Q451, Q452
Q832
2SA1175(FF, EF)

Q453, Q454, Q459
Q481, Q482
2SC2785(FF, EF)
Q455
2SK30A7M
Q456
2SC1815(Y)
MA2TA
Q457
2SK1618R1
Q458
D801~D804
2SC2347




Q460
D805~D808, D813
D814, D821~D824
W068
Q461, Q462
DTC124EX
Q463
TC74HC86P
Q464, Q471, Q478
TC74HC123P
Q465
MC4044P
Q467
TC74HC595P
Q468
TC74HC00P
Q469
HD74HC673
Q470
HD74HC674
Q472, Q474, Q475
Q477
TC74HC74P
Q473
TC74HC08P



TOP VIEW
Q801, Q802
NJM7805
TLP570







TOP VIEW
Q821
NJM79M12A
Q822
NJM7812
Q831
TC74HC08P
TC74HC74P
TC74HC08P



TOP VIEW
Q801, Q802
NJM7805
TLP570







TOP VIEW
Q821
NJM79M12A
Q822
NJM7812
Q831
TC74HC08P
TC74HC74P
TC74HC08P



TOP VIEW
Q801, Q802
NJM7805
TLP570



TOP VIEW
Q821
NJM79M12A
Q822
NJM7812
Q831
TC74HC08P
TC74HC74P
TC74HC08P



TOP VIEW
Q801, Q802
NJM7805
TLP570



TOP VIEW
Q821
NJM79M12A
Q822
NJM7812
Q831
TC74HC08P
TC74HC74P
TC74HC08P



Kind of Common Parts

RESISTOR

- R*** (1) GD05 --- 140, Carbon film fixed resistor, $\pm 5\%$ 1/4W
R*** (2) GD05 --- 160, Carbon film fixed resistor, $\pm 5\%$ 1/6W

CAPACITOR

- (1) DD1 --- 370, Ceramic condenser,
disc type (titan condenser)
Temp. coeff. P350 ~ N1000 50V

CAPACITOR

- (1) DK16 --- 300, High dielectric constant ceramic
condenser, disc type (titan variable)
Temp. chara. 2B4 50V

ELECTROLYTIC CAPACITOR

- (1) EA --- 10, Electrolytic condenser,
one-way lead type, tolerance $\pm 20\%$
(2) DF15 --- 350, Plastic film condenser,
one-way type, Mylar, $\pm 5\%$ 50V

* In case of ordering the common parts, please establish the correct parts
number of 10 figures by the procedure "ASSIGNMENT OF COMMON
PARTS CODES"


"SERVICE INFORMATION IS FOR USE BY QUALIFIED PERSONNEL ONLY -
ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A
NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER."

NOTE ON SAFETY:

Symbol Δ Fire or electrical shock hazard. Only original parts
should be used to replace any part marked with symbol Δ .
Any other component substitution (other than original
type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.

[illegible]

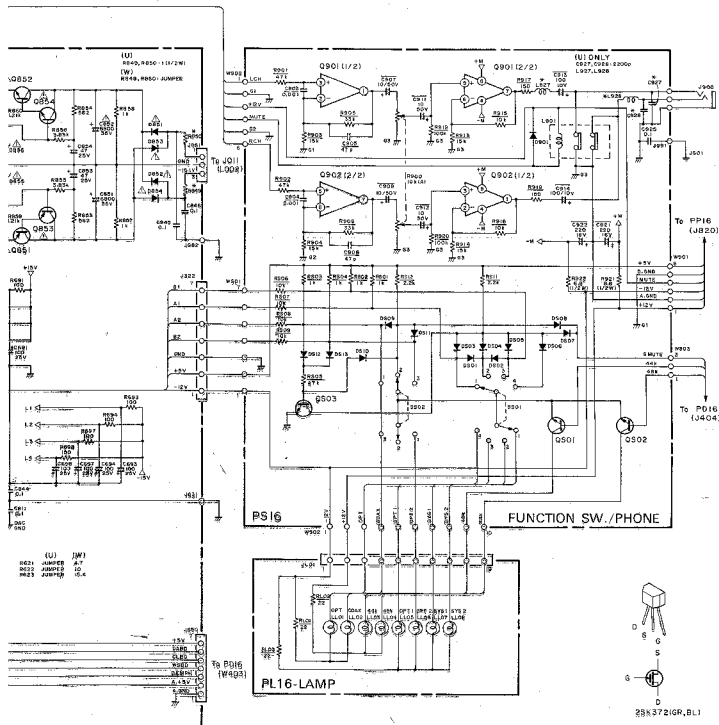

Q311-Q316
2SC3732 (L)

Q319, Q319
TC74HC153P

Q350
TC74HC04P

Q621
TDA1541A/S1

Q651-Q654, Q657
Q658, Q659, Q660

NJM5534D
Q655, Q656

2SK372 (GR, BL)

Q851
2SB507 (D)

Q852
2SD313 (D)

Q853
2SA1048 (GR)

Q854, Q850, Q852
2SC2456 (O, Y)

Q855
2SA1175 (FF, EF)

Q856, Q850
2SC2785 (FF, EF)

Q901, Q902
NJM4558D

D314, D319, D324
PK11 (MCR, D301-D313)

IS5176, etc.
D703

IS5195, etc.
D851-Q854

300PF
D855, D856

H2EL (3)

TOP VIEW

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

TOP VIEW

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

TOP VIEW

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

TOP VIEW

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

TOP VIEW

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

2SC3732 (L)

2SC2456 (O, Y)

2SC2785 (FF, EF)

2SA1048 (GR)

2SA1175 (FF, EF)

2SA175 (FF, EF)

2SA1175 (FF, EF)

2SA1175 (FF, EF)

2SA1175 (FF, EF)

2SA1175 (FF, EF)

2SA1175 (FF, EF)

2SA1175 (FF, EF)

2SA1175 (FF, EF)

2SA1175 (FF, EF)

2SA1175 (FF, EF)

2SA1175 (FF, EF)

Kind of Common Parts

RESISTOR

R*** (1) GD05 --- 140, Carbon film fixed resistor, $\pm 5\%$ 1/4W
R*** (2) GD05 --- 160, Carbon film fixed resistor, $\pm 5\%$ 1/8W

CAPACITOR

C*** (1) DD1 --- 370, Ceramic condenser, disc type (titan condenser)
Temp. coeff. P350 ~ N1000 50V

CAPACITOR

(1) DK16 --- 300, High dielectric constant ceramic condenser, disc type (titan variable)
Temp. chara. 2B4 50V

ELECTROLYTIC CAP. (E) / FILM CAP. (F)

(1) EA --- 10, Electrolytic condenser, one-way lead type, tolerance $\pm 20\%$
(2) DF15 --- 350, Plastic film condenser, one-way type, Mylar, $\pm 5\%$ 50V


* In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"

"SERVICE INFORMATION IS FOR USE BY QUALIFIED PERSONNEL ONLY - ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER."

NOTE ON SAFETY:

Symbol Δ : Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol Δ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.



RESISTOR


- | | | |
|-------------|---|--|
| A*** | (1) GD05 --- 140. | Carbon film fixed resistor, $\pm 5\%$ 1/4W |
| B*** | (2) GD05 --- 160. | Carbon film fixed resistor, $\pm 5\%$ 1/6W |
| C*** | CERAMIC CAP. | |
| | (1) DD1 --- 370. | Ceramic condenser,
disc type (titan condenser)
Temp. coeff. P350 ~ N1000 50V |
| C*** | (1) DK16 --- 300. | High dielectric constant ceramic
condenser, disc type (titan variable)
Temp. char. 284 50V |
| C*** | ELECTROLY CAP. ($\frac{\square}{\square}$)/FILM CAP. ($\frac{\square}{\square}$) | |
| | (1) EA --- 100. | Electrolytic condenser,
one-way lead type, tolerance $\pm 20\%$ |
| | (2) DF15 --- 350. | Plastic film condenser,
one-way type, Mylar, $\pm 5\%$ 50V |

* In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"


NOTE ON SAFETY:

Symbol . Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.








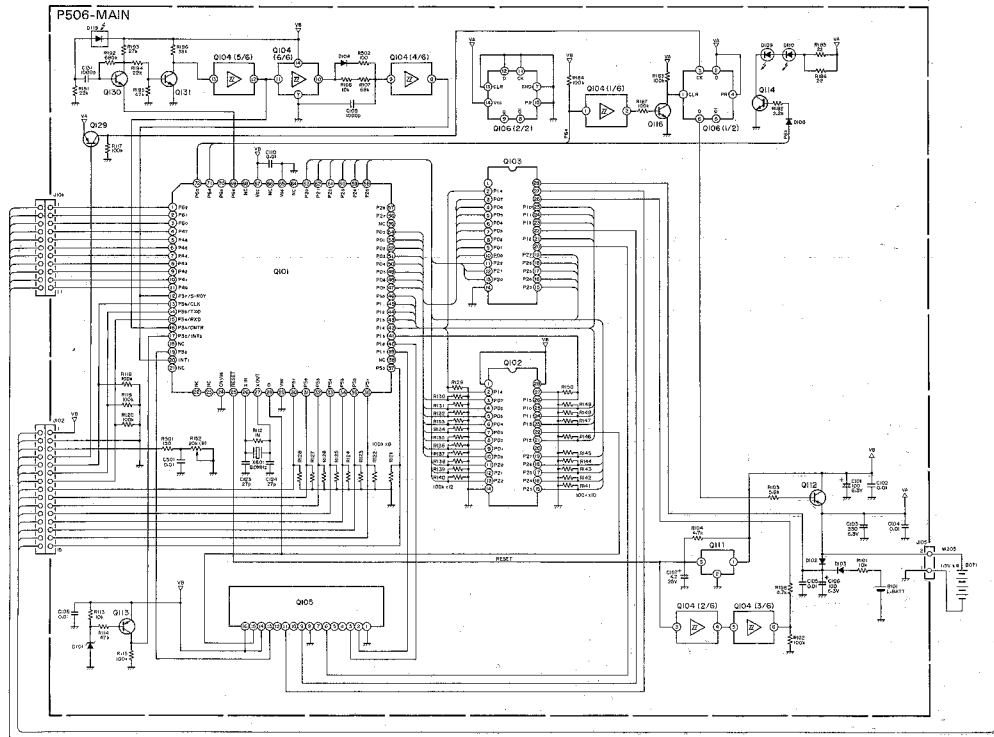


Q101	Q104	Q111	Q116, Q130, Q131	Q101	D106
M50747-776FP	74HC14	PST5200	25C2712 (0.1)	5.0V ZENER	MA151T
Q102	Q105	Q112, Q113, Q129	Q201	Q102, D105, D104	D109, D110
TC54226AF	74HC158	23A162 (0.1)	HD44780	MA-151K	TLN105B
Q103	Q106	Q114	Q202	D30N	D119
TC5565	74HC74	25C2411K	HD44100H	MA-15K	TPS703

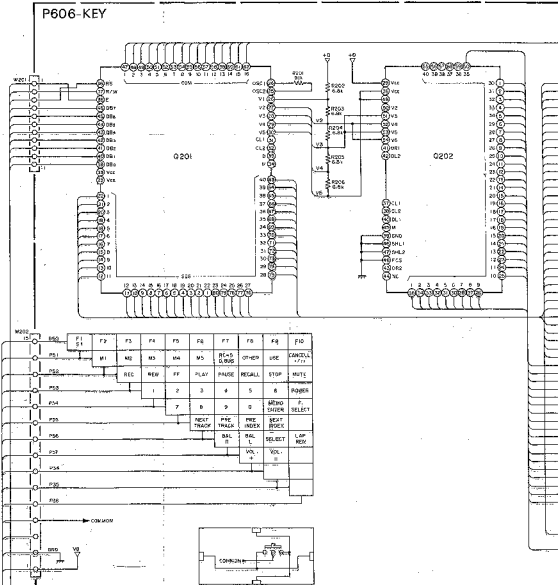

1	Q104	Q111	Q116, Q130, Q131	D101	D106
1747-776FP	74HC14	PST520D	25C2712(5,R)	5.0V ZENER	MAISIT
2	Q105	Q112, Q113, Q119	Q201	D102, D103, D104	D109, D110
4256AF	74HC39	25A162(5,R)	HD44780	MA-151K	TLN955B
3	Q106	Q114	Q202	D301	D119
565	74HC74	25C241K	HD44100H	MA-151K	TPS703

606-KEY

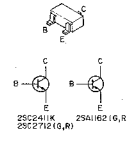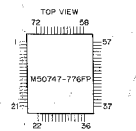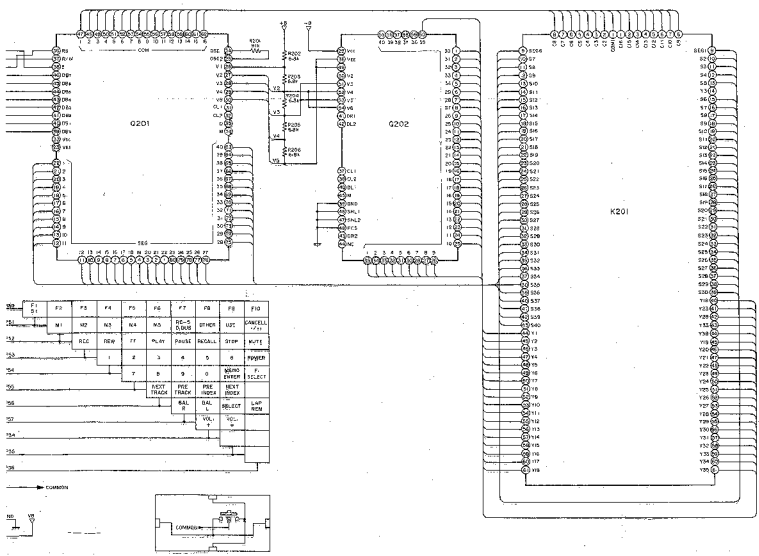

Kind of Common Parts

RESISTOR

- R*** (1) GD05 -- 140, Carbon film fixed resistor, $\pm 5\%$ 1/4W
 R*** (2) GD05 -- 160, Carbon film fixed resistor, $\pm 5\%$ 1/6W
 C*** : CERAMIC CAP.

- (1) DD1 -- 370, Ceramic condenser, disc type (titan condenser)
 Temp. coeff. P350 ~ N1000 50V

- C*** : CERAMIC CAP.
 (1) DK16 -- 300, High dielectric constant ceramic condenser, disc type (titan variable)
 Temp. chara. 2B4 50V

- C*** : ELECTROLYTIC CAP. ($\neq$)/FILM CAP. ($\neq$)
 (1) EA ----- 10, Electrolytic condenser, one-way lead type, tolerance $\pm 20\%$
 (2) DF15 -- 350, Plastic film condenser, one-way type, Mylar, $\pm 5\%$ 50V

* In case of ordering the common parts, please establish the correct parts number of 10 figures by the procedure "ASSIGNMENT OF COMMON PARTS CODES"

"SERVICE INFORMATION IS FOR USE BY QUALIFIED PERSONNEL ONLY - ANY MISADJUSTMENT OR MISALIGNMENT MAY BE TREATED AS A NON-WARRANTY REPAIR BY ANY MARANTZ SERVICE CENTER--"

NOTE ON SAFETY:

Symbol Δ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol Δ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.