

Date 13.06.03	Ref. No. 03AH003	Model AM-LM918, LCX-MT22, XR-FD1, XR-FD5, XR-V10MD	HA
Subject "Disc Error" Indication			IRIS C625

SYMPTOM


"Disc Error" may be displayed with specific discs such as Sony MD (Neige series), i.e. 5MD74NEA, 5MD80NEA, 10MD74NEA, 10MD80NEA.

CAUSE

Unstable reading when using low-reflectivity MO discs.

SOLUTION

Using the test disc **"MDW-74/AU1" (8-892-341-41)**, only perform the "Auto Sequence Adj. MO" (step 5 of the "Adjustment Procedure Flowchart" below).

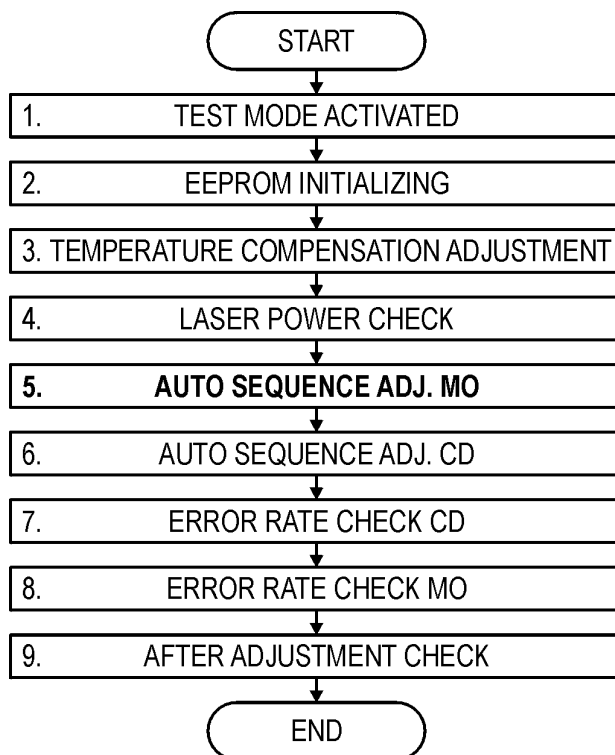

NOTE

If the message "Failed" appears during the adjustment, perform the complete adjustment procedure as described in the Service Manual.