


CX-JN331/JPK331

SERVICE MANUAL

E Model

Ver. 1.0 2005.05

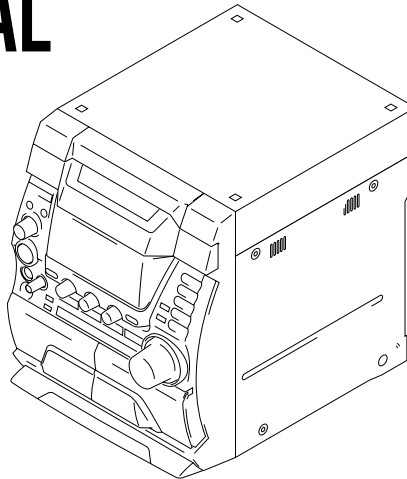

CX-JN331 is the amplifier, CD player, tape deck and tuner section in JAX-N331.

CX-JPK331 is the amplifier, CD player, tape deck and tuner section in JAX-PK331.

CD Section	Model Name Using Similar Mechanism	CX-JN33/JPK33
	CD Mechanism Type	CDM74KS-F1BD81C
	Base Unit Name	BU-F1BD81C
	Optical Pick-up Name	KSM-215DCP
Tape deck Section	Model Name Using Similar Mechanism	CX-JN33/JPK33
	Tape Transport Mechanism Type	CWM43FF13 (JPK331) CWM43FR34 (JN331)

SPECIFICATIONS

Amplifier section

CX-JN331

The following measured at AC 120, 127, 220, 240 V 50/60 Hz

DIN power output (rated): 48 + 48 watts (6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):
60 + 60 watts (6 ohms at 1 kHz, 10% THD)

CX-JPK331

The following measured at AC 120, 127, 220, 240 V 50/60 Hz

DIN power output (rated): 48 + 48 watts (6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):
60 + 60 watts (6 ohms at 1 kHz, 10% THD)

Inputs

VIDEO/MD IN (phono jacks):

voltage 450/250 mV,

impedance 47 kilohms

MIC (phone jack)

chilean and peruvian model
sensitivity 1 mV,
impedance 10 kilohms

Outputs

PHONES (stereo mini jack):

accepts headphones of
8 ohms or more

SPEAKER:

accepts impedance of 6 to
16 ohms

CD player section

System

Compact disc and digital audio system

Laser Diode Properties

Emission duration:

continuous

Laser Output: Less than
44.6 μ W

(This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture)

2 Hz – 20 kHz (± 0.5 dB)

More than 90 dB

More than 90 dB

Frequency response

Signal-to-noise ratio

Dynamic range

Tape deck section

Recording system

4-track 2-channel, stereo

Frequency response

50 – 13,000 Hz (± 3 dB),
using Sony TYPE I
cassettes

$\pm 0.15\%$ W. Peak (IEC)

0.1% W. RMS (NAB)

$\pm 0.2\%$ W. Peak (DIN)

Wow and flutter

Tuner section

FM stereo, FM/AM superheterodyne tuner

FM tuner section

Tuning range

87.5 – 108.0 MHz
(50-kHz step)

Antenna

Antenna terminals

FM lead antenna

Intermediate frequency

10.7 MHz

AM tuner section

Tuning range

2 Band type:

530 – 1,710 kHz
(with the tuning interval
set at 10 kHz)
531 – 1,602 kHz
(with the tuning interval
set at 9 kHz)

Antenna

Antenna terminals

AM loop antenna

Intermediate frequency

External antenna terminal
450 kHz

– Continued on next page –

9-879-731-01

2005E05-1
© 2005.05

Sony Corporation

Personal Audio Group

Published by Sony Engineering Corporation

COMPACT DISC DECK RECEIVER



CX-JN331/JPK331

General

Power requirements	
Mexican models:	127 V AC, 60 Hz
Other models:	120 V, 22.0 V or 230 – 240 V AC, 50/60 Hz Adjustable with voltage selector
Power consumption	110 watts
Dimensions (w/h/d) incl. projecting parts and controls	
Amplifier/Tuner/Tape/CD section:	Approx. 280 × 325 × 425 mm
Mass	Approx. 8.3 kg

Design and specifications are subject to change without notice.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This appliance is classified as a CLASS 1 LASER product.

This label is located on the rear exterior.



SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

1. SERVICING NOTES	4	8. EXPLODED VIEWS	56
2. GENERAL	7	8-1. Case Section	56
3. DISASSEMBLY		8-2. Tape Mechanism Deck Section (CWM43FF13: JPK331)/(CWM43FR34: JN331)	57
3-1. Disassembly Flow	9	8-3. Panel Board Section	58
3-2. Case (Side-L/R)	10	8-4. Cassette Box Section	59
3-3. Case (Top)	10	8-5. Front Panel Section	60
3-4. Tray Panel	11	8-6. Back Panel Section	61
3-5. CD Mechanism Deck (CDM74KS-F1BD81C)	11	8-7. Chassis Section	62
3-6. Front Pack Block	12	8-8. CD Mechanism deck Section-1 (CDM74KS-F1BD81C)	63
3-7. Back Panel Section	12	8-9. CD Mechanism deck Section-2 (CDM74KS-F1BD81C)	64
3-8. MAIN Board	13	8-10. CD Mechanism deck Section-3 (CDM74KS-F1BD81C)	65
3-9. Tape Mechanism Deck (CWM43FF13: JPK331)/(CWM43FR34: JN331)	13	8-11. Base Unit (BU-F1BD81C)	66
3-10. Table Assy	14	9. ELECTRICAL PARTS LIST	67
3-11. MOTOR (TB) Board	14		
3-12. MOTOR (LD) Board	15		
3-13. Base Unit (BU-F1BD81C)	15		
3-14. Motor Gear Assy (Sled) (M102), CD BOARD	16		
3-15. Optical Pick-up (KSM-215DCP)	16		
4. TEST MODE	17		
5. MECHANICAL ADJUSTMENTS	21		
6. ELECTRICAL ADJUSTMENTS	21		
7. DIAGRAMS			
7-1. Block Diagram – SERVO Section –	24		
7-2. Block Diagram – MAIN Section –	25		
7-3. Block Diagram – PANEL/POWER SUPPLY Section –	26		
7-4. Printed Wiring Board – CD Board –	28		
7-5. Schematic Diagram – CD Board –	29		
7-6. Printed Wiring Boards – CHANGER Section –	30		
7-7. Schematic Diagram – CHANGER Section –	31		
7-8. Printed Wiring Board – CDMP3 CONNECT Board –	32		
7-9. Schematic Diagram – CDMP3 CONNECT Board –	33		
7-10. Schematic Diagram – MAIN Section (1/4) –	34		
7-11. Schematic Diagram – MAIN Section (2/4) –	35		
7-12. Schematic Diagram – MAIN Section (3/4) –	36		
7-13. Schematic Diagram – MAIN Section (4/4) –	37		
7-14. Printed Wiring Boards – MAIN Section –	38		
7-15. Printed Wiring Boards – PANEL Section –	39		
7-16. Schematic Diagram – PANEL Section (1/2) –	40		
7-17. Schematic Diagram – PANEL Section (2/2) –	41		
7-18. Printed Wiring Board – POWER AMP Section –	42		
7-19. Schematic Diagram – POWER AMP Section –	43		
7-20. Printed Wiring Boards – TRANS Section –	44		
7-21. Schematic Diagram – TRANS Section –	45		

SECTION 1
SERVICING NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP
BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.
The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH OPERATION
CHECK

Carry out the “S curve check” in “CD section adjustment” and check that the S curve waveforms is output three times.

UNLEADED SOLDER


Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.
(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

LF: LEAD FREE MARK



Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.


• MODEL IDENTIFICATION
– Rear View –

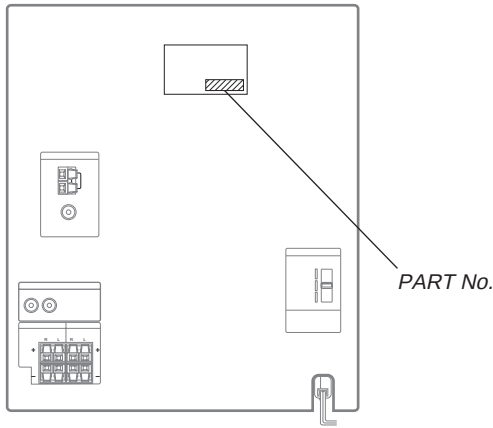


MODEL	PART No.
CX-JPK331: Mexican model	4-252-231-2□
CX-JN331/JPK331: Chilean and Peruvian models	4-252-231-3□

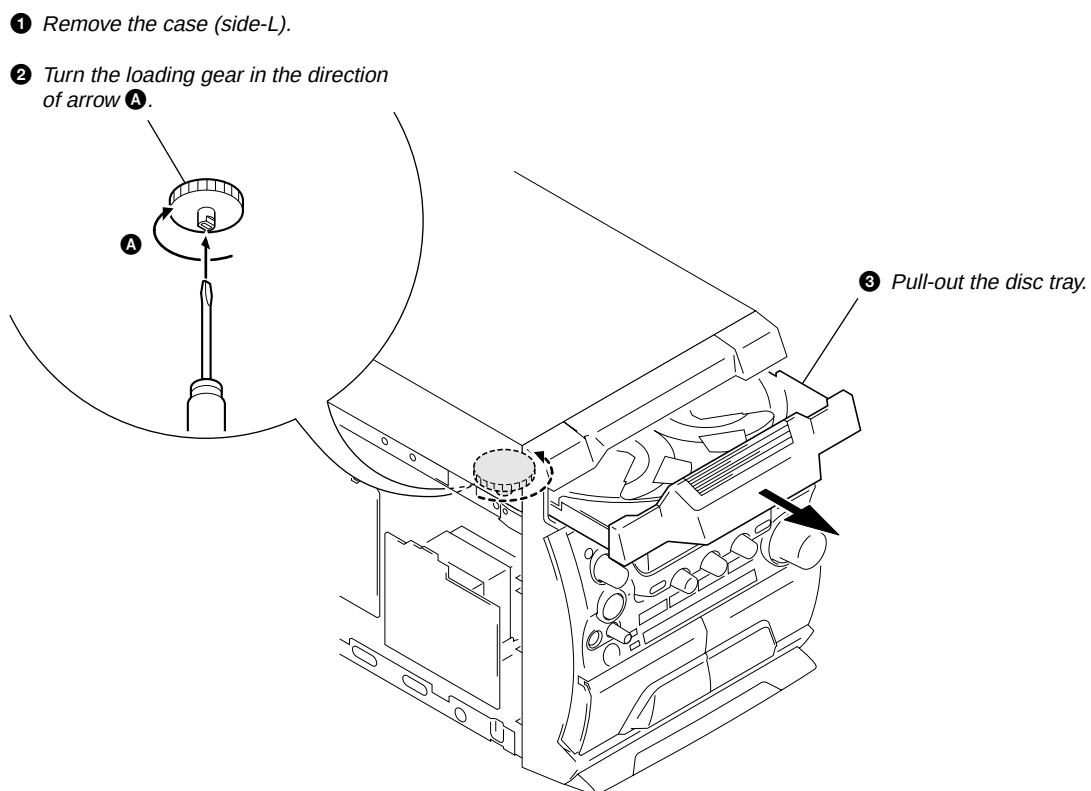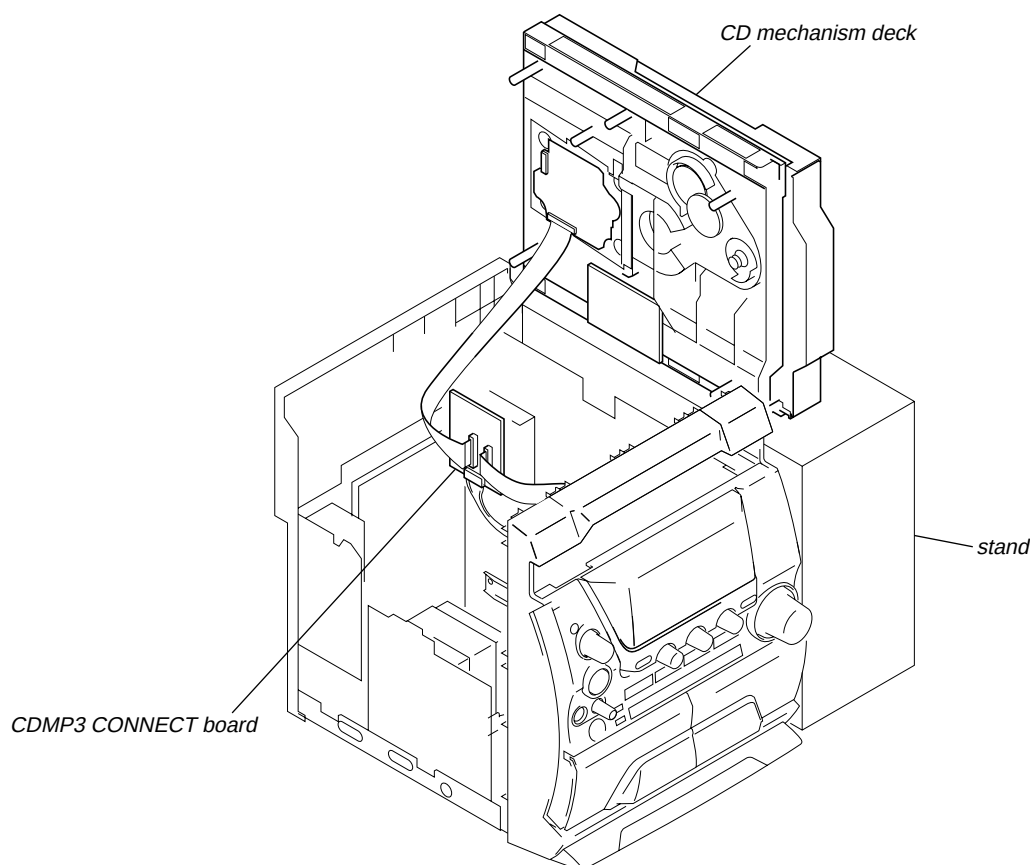HOW TO OPEN THE DISC TRAY WHEN POWER SWITCH TURNS OFF.**SERVICE POSITION
– CD MECHANISM DECK –**

– FRONT PANEL SECTION –

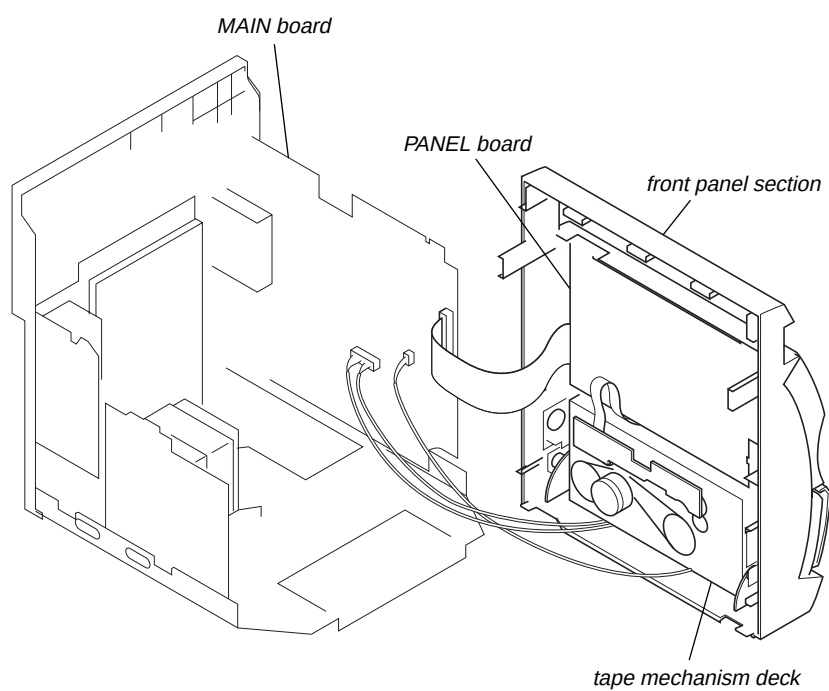

– AMP BOARD –

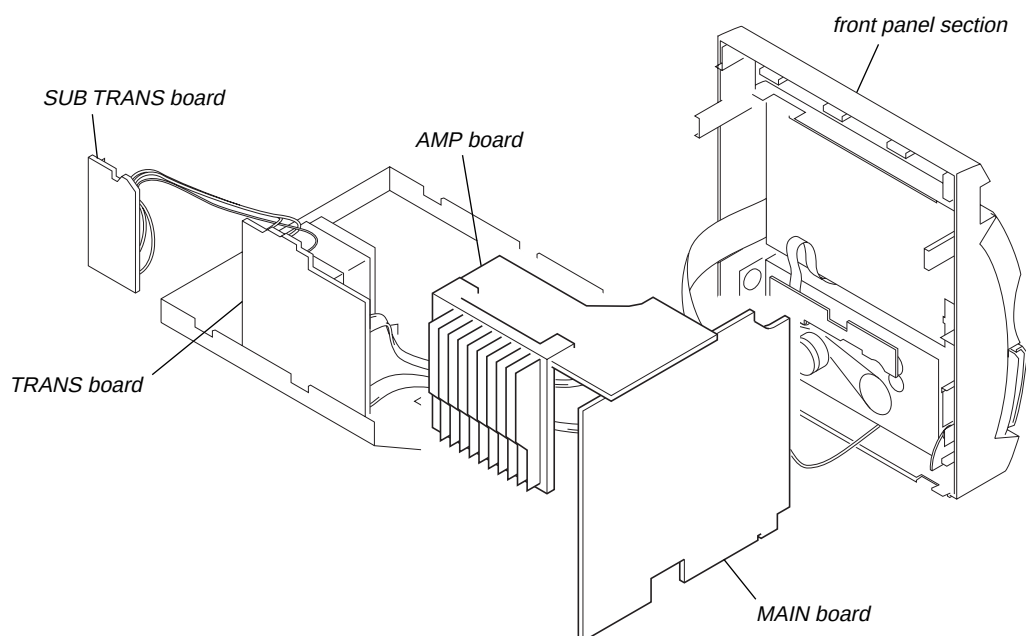

SECTION 2 GENERAL

This section is extracted from instruction manual.

• LOCATION OF CONTROLS

Main unit

ALPHABETICAL ORDER

A – N

ALBUM + [28]
ALBUM – [28]
BASS control [5]
CD [16]
CD SYNC [12]
Deck A [9]
Deck B [29]
DISC 1 – 3 [23]
DISC SKIP/EX-CHANGE [24]
Disc tray [22]
DISPLAY [15]
Display window [4]
ENTER [2]
i-Bass [13]
MIC jack²⁾ [30]
MIC LEVEL²⁾ [30]
MIDDLE control [5]

O – Z


Operation Dial
(AMS/TUNING) [14]
P FILE [6]
PHONES jack [11]
PLAY MODE [20]
PRESET EQ [3]
REC PAUSE/START [8]
Remote sensor [7]
SURROUND [21]
TAPE A/B [18]
TREBLE control [5]
TUNER/BAND [17]
TUNING MODE [20]
VIDEO/MD [19]
VOLUME control [26]

BUTTON DESCRIPTIONS

I/⏻ (power) [1]
▲ PUSH (deck A) (eject) [10]
▲ (eject) [25]
PUSH ▲ (deck B) (eject) [27]
◀◀ (rewind) [28]
■ (stop) [28]
▷ or ◀▷¹⁾ (play) [28]
|| (pause) [28]
▶▶ (fast forward) [28]

¹⁾ CX-JN331 only

²⁾ CX-JPK331 chilean and peruvian model only

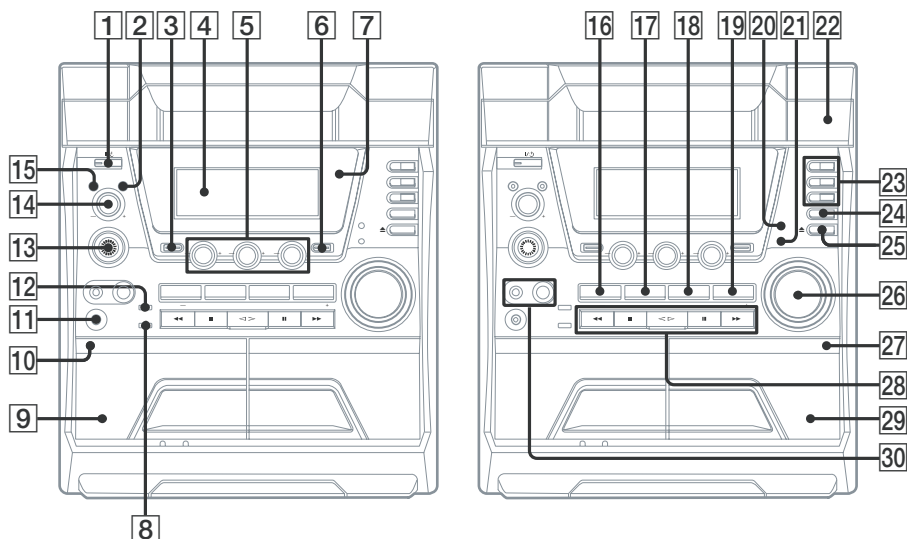

Remote control

ALPHABETICAL ORDER

A – E


- ALBUM + 11
- ALBUM – 13
- CD 18
- CLEAR 15
- CLOCK/TIMER SELECT 2
- CLOCK/TIMER SET 3
- DISC SKIP 10
- DISPLAY 21
- ENTER 9
- EQ 14

F – Z

- FM MODE 4
- FUNCTION 6
- PLAY MODE 20
- REPEAT 4
- SLEEP 22
- TAPE 17
- TUNER BAND 5
- TUNER MEMORY 19
- TUNING MODE 20
- VOLUME +/- 12

BUTTON DESCRIPTIONS

- I/⏻ (power) 1
- ◀◀/▶▶ (rewind/fast forward) 7
- ▶ (play) 8
- ⏸ (pause) 8
- (stop) 8
- /+ (tuning) 16
- ◀◀/▶▶ (go back/go forward) 16

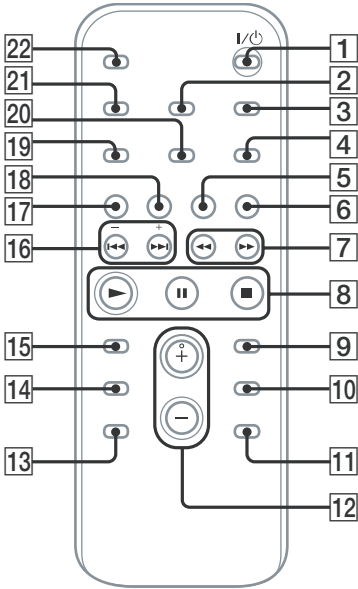


SECTION 3 DISASSEMBLY

- This set can be disassembled in the order shown below.

3-1. DISASSEMBLY FLOW


Note 1: The process described in  can be performed in any order.

Note 2: Without completing the process described in , the next process can not be performed.

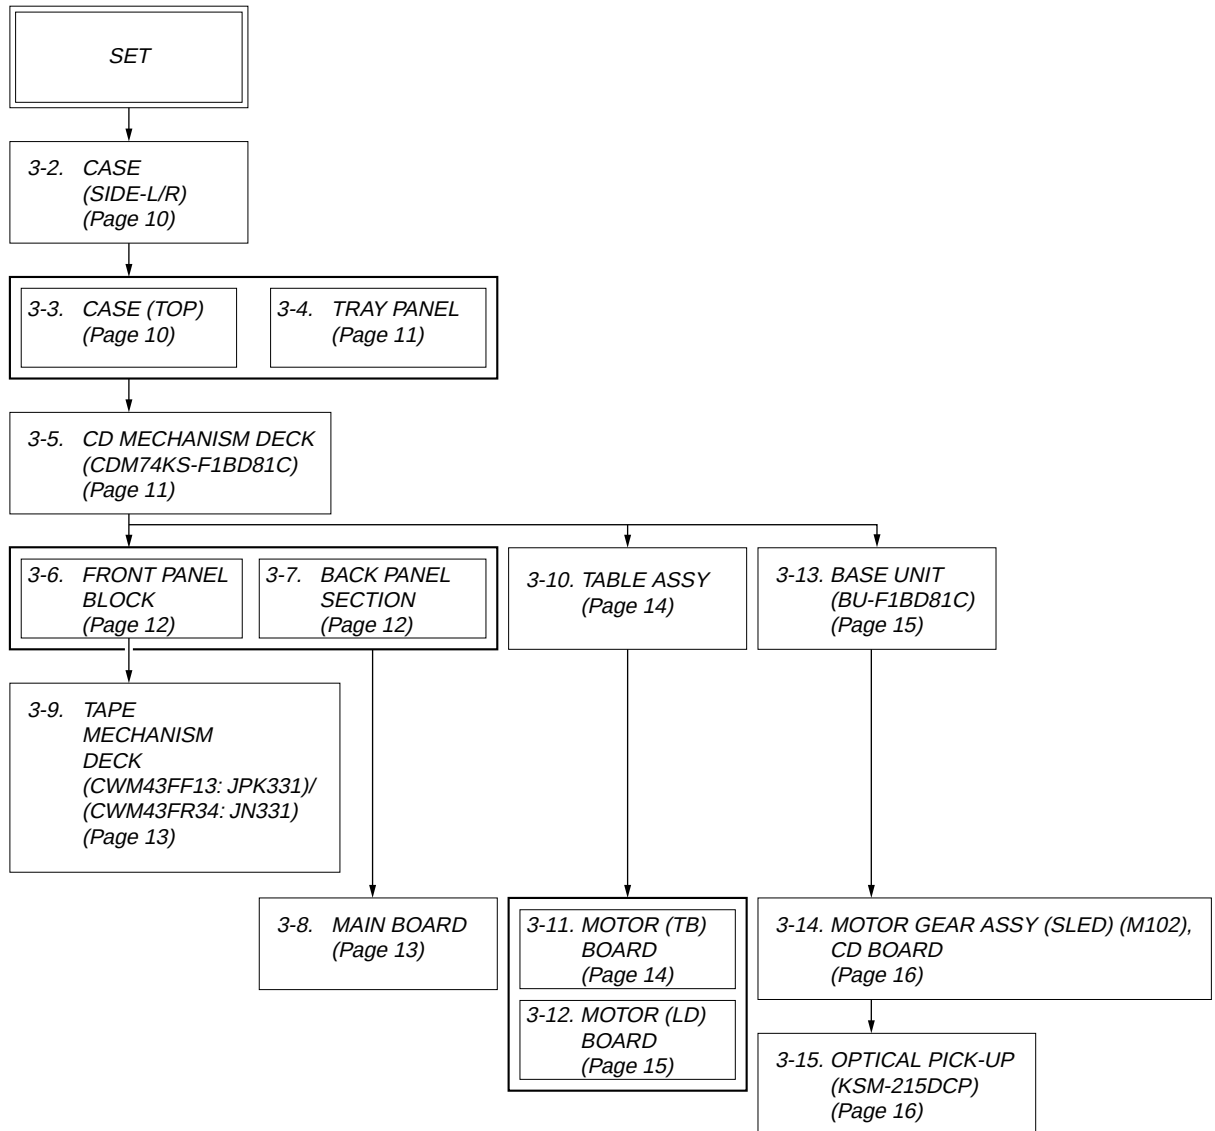


Note: Follow the disassembly procedure in the numerical order given.


3-2. CASE (SIDE-L/R)

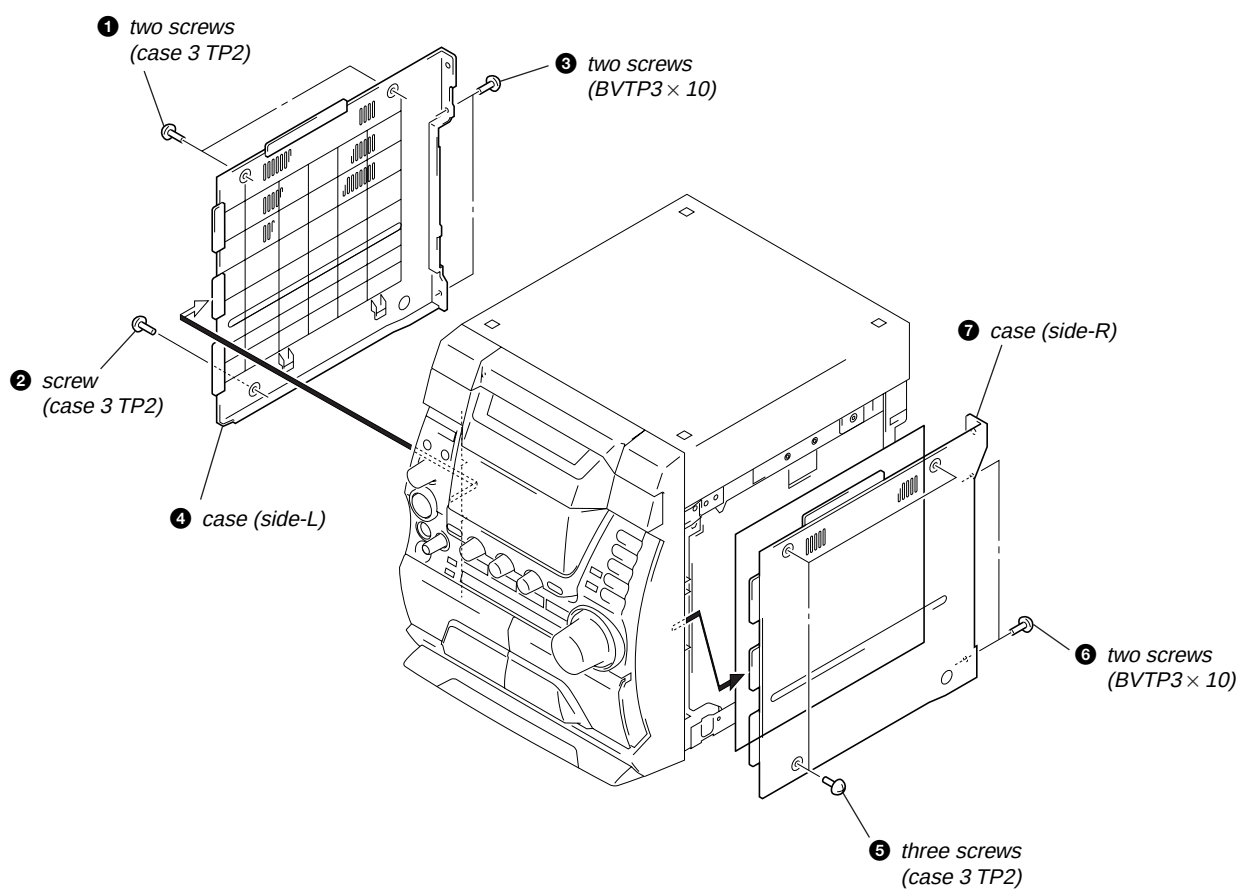


3-3. CASE (TOP)

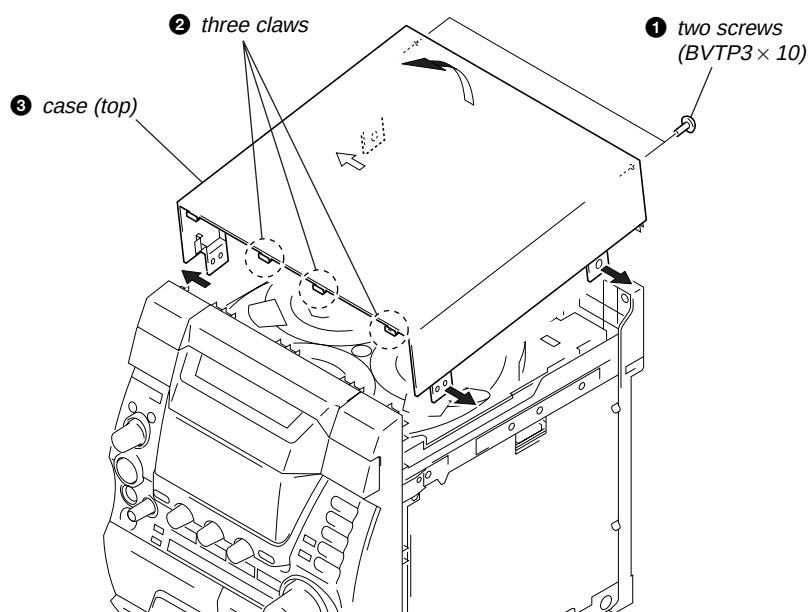


3-4. TRAY PANEL

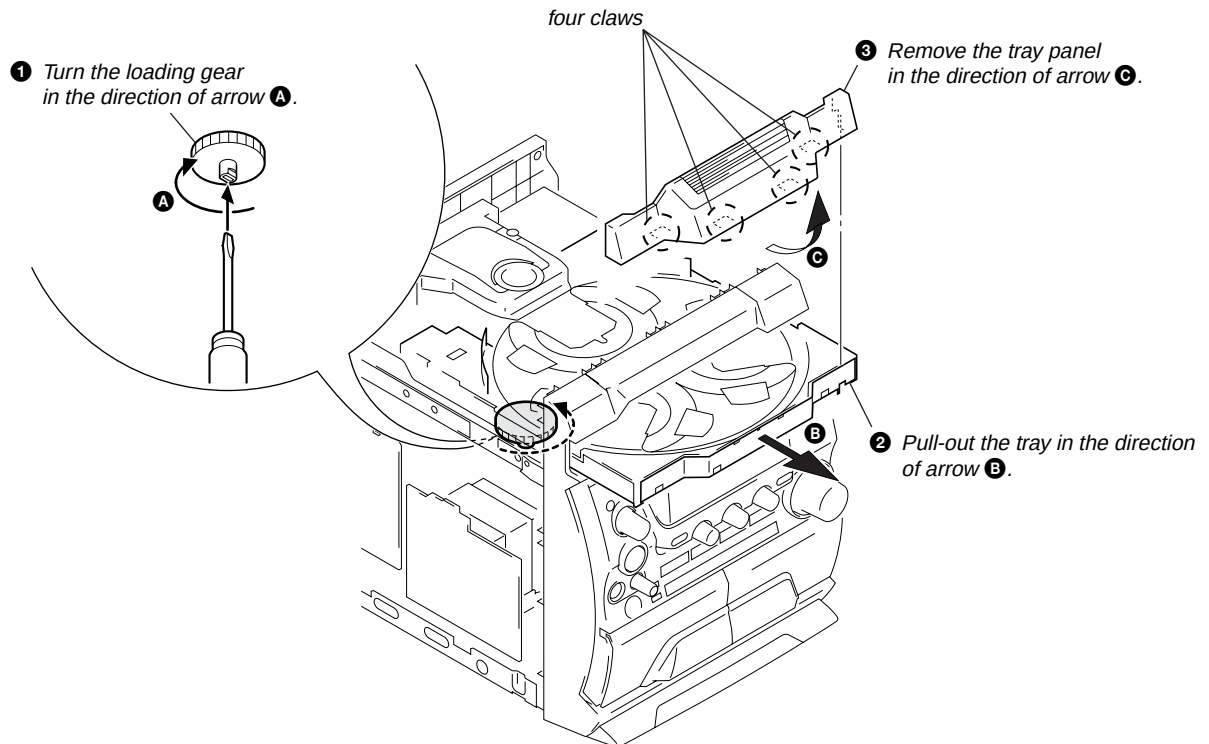


3-5. CD MECHANISM DECK (CDM74KS-F1BD81C)

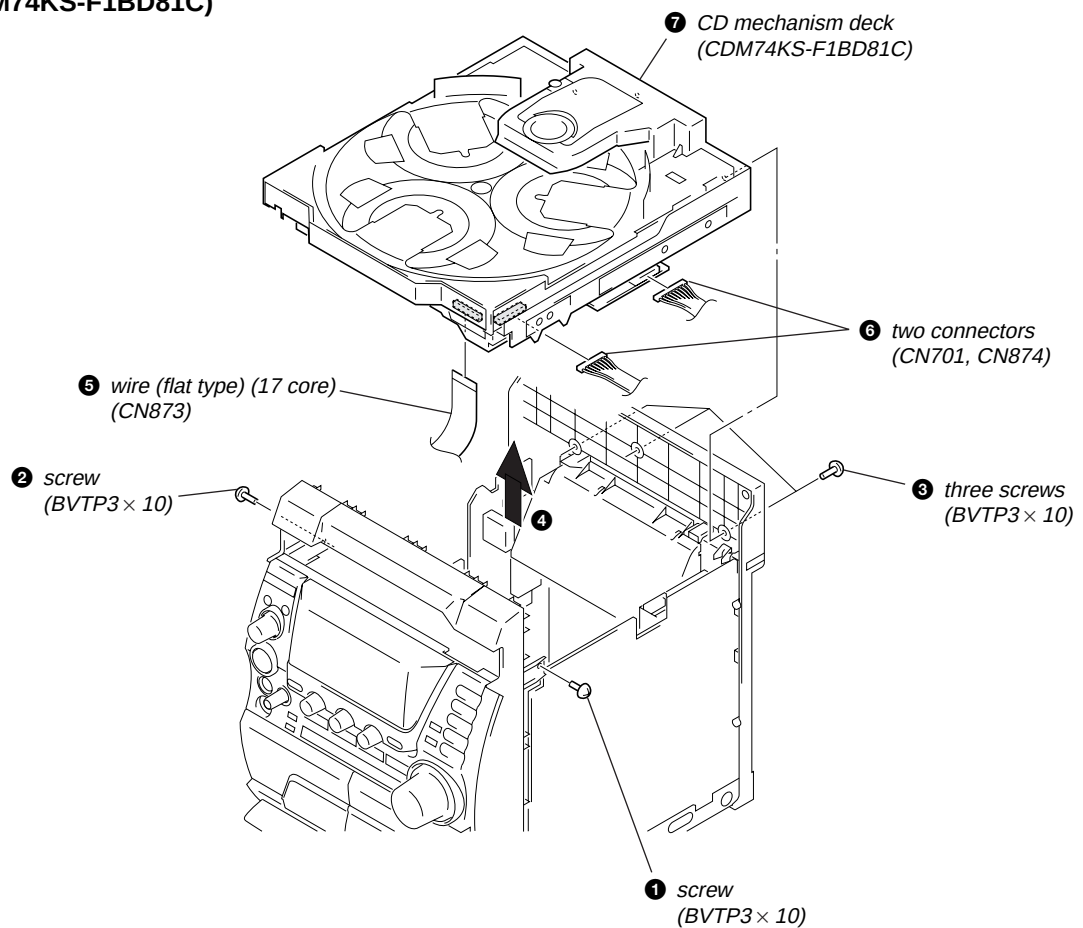


3-6. FRONT PANEL BLOCK

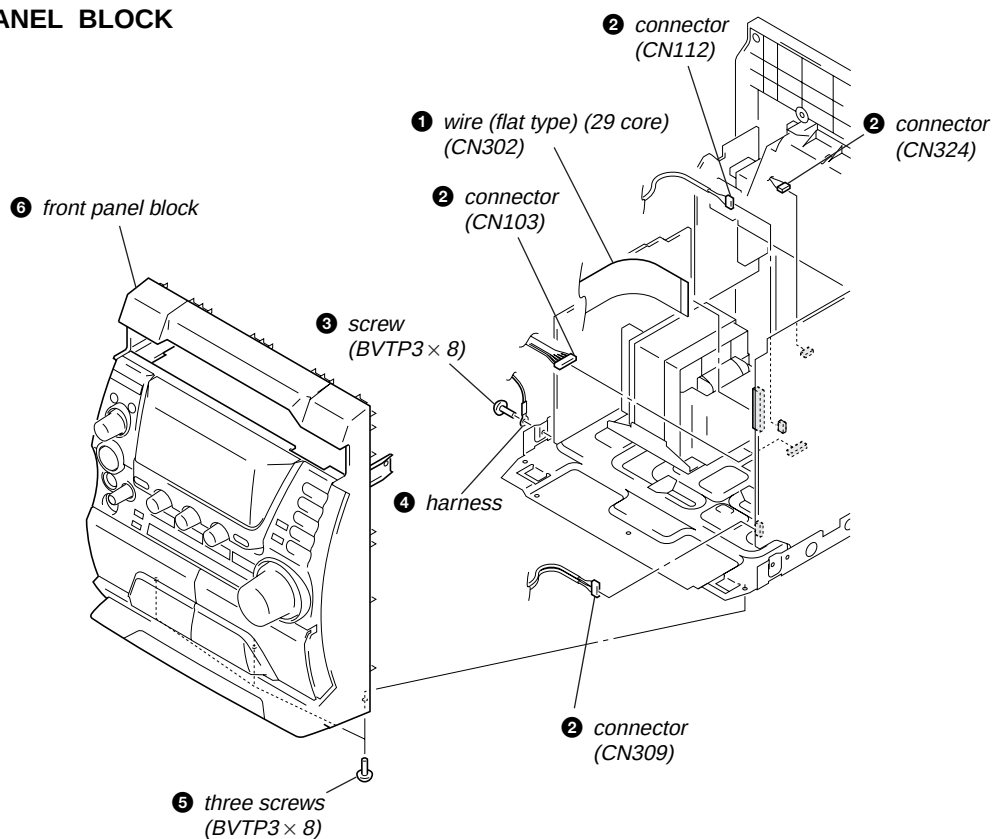


3-7. BACK PANEL SECTION

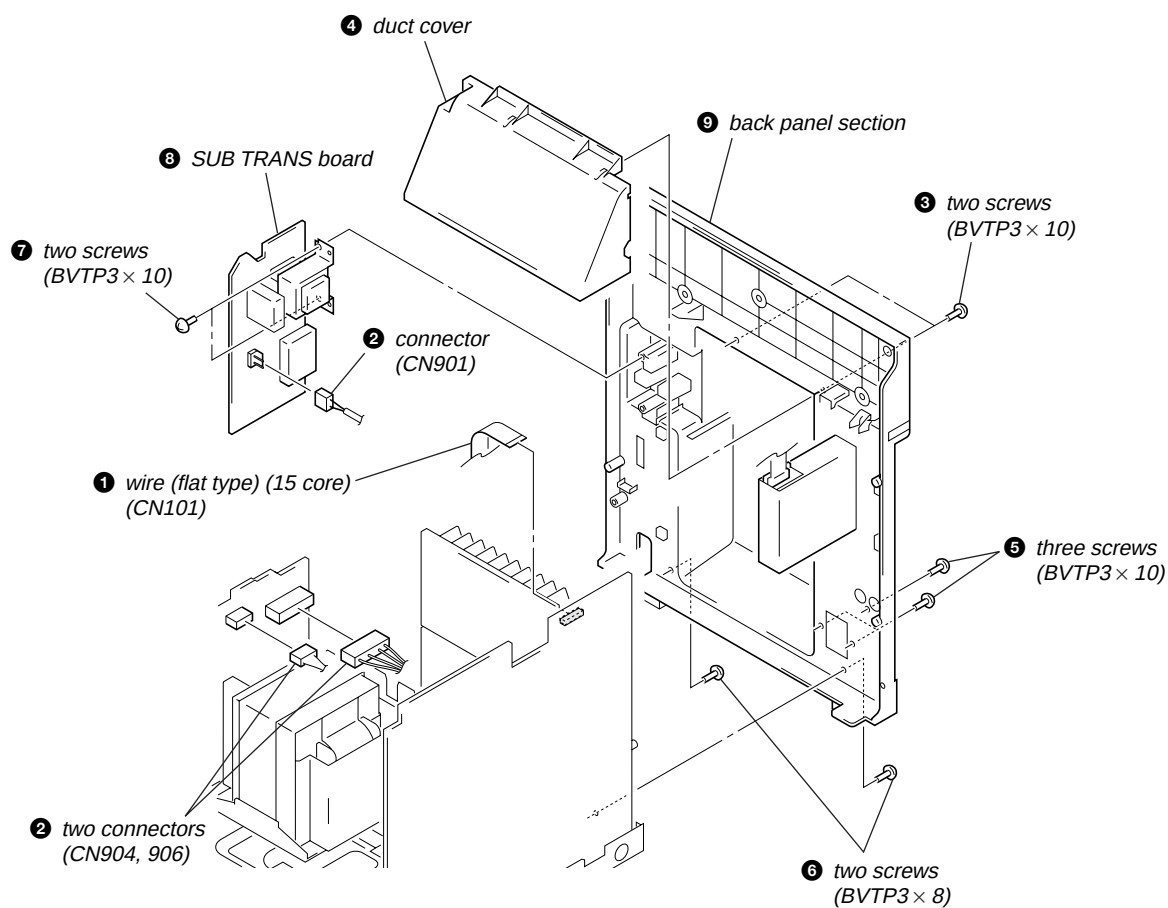


3-8. MAIN BOARD

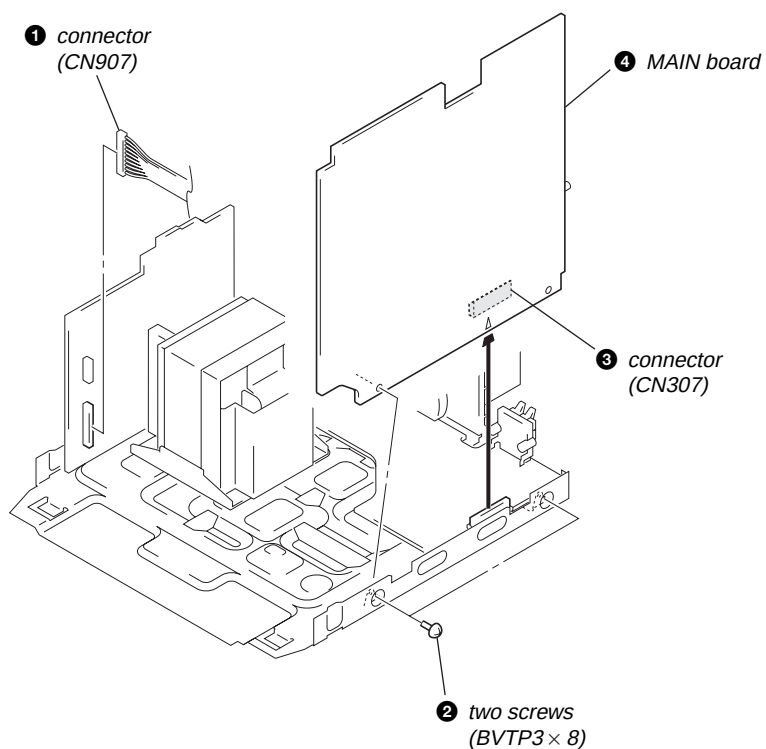


3-9. TAPE MECHANISM DECK (CWM43FF13: JPK331)/ (CWM43FR34: JN331)

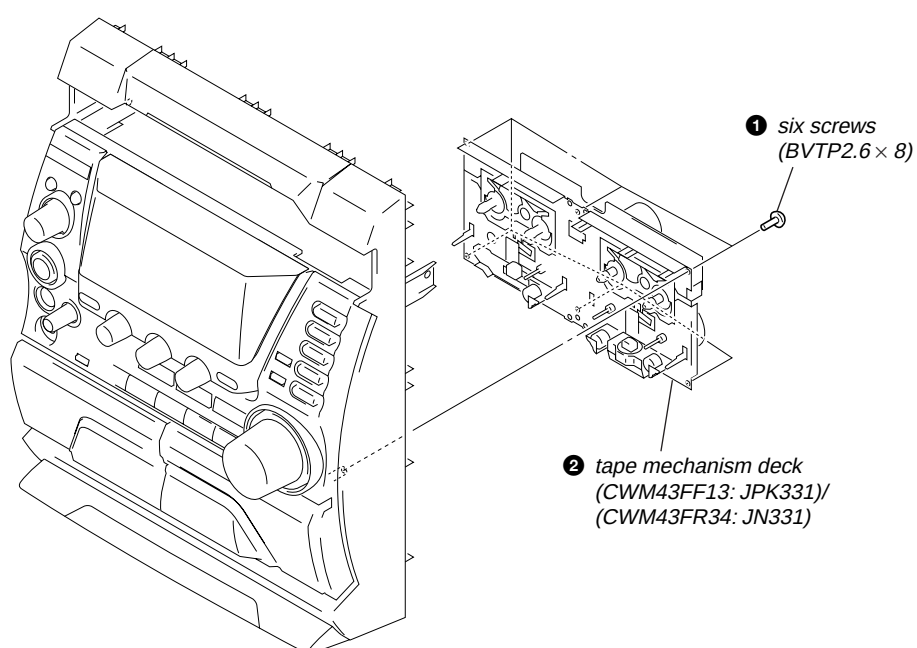


3-10. TABLE ASSY

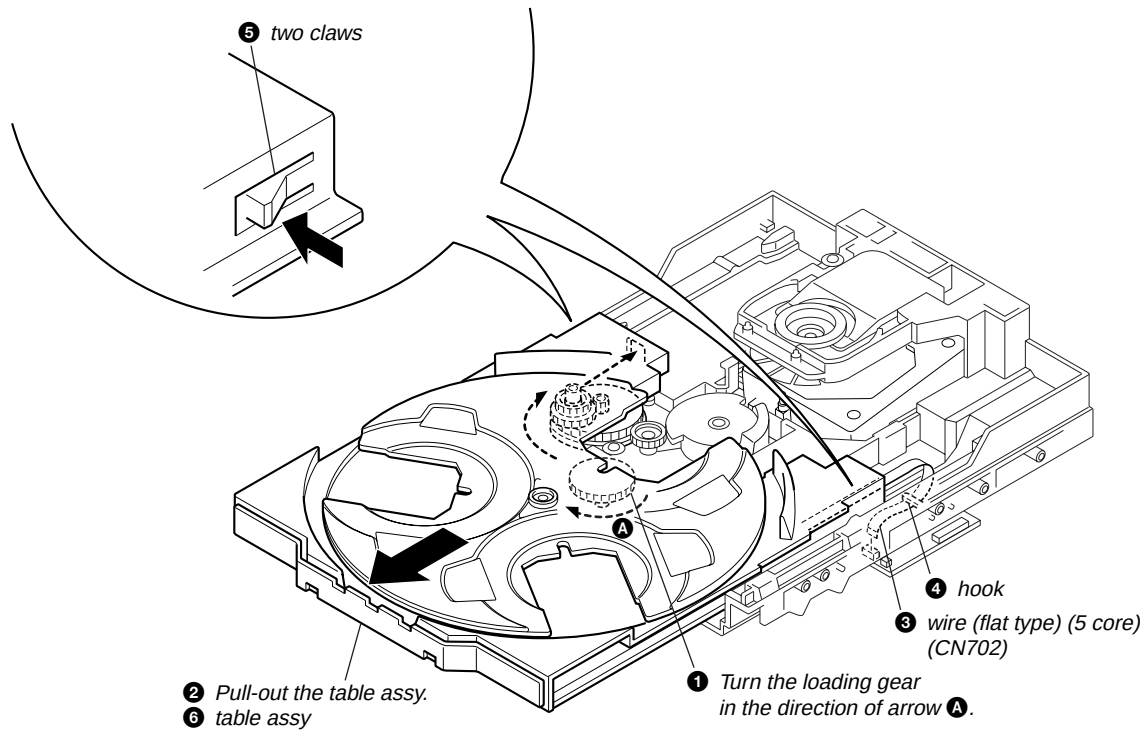


3-11. MOTOR (TB) BOARD

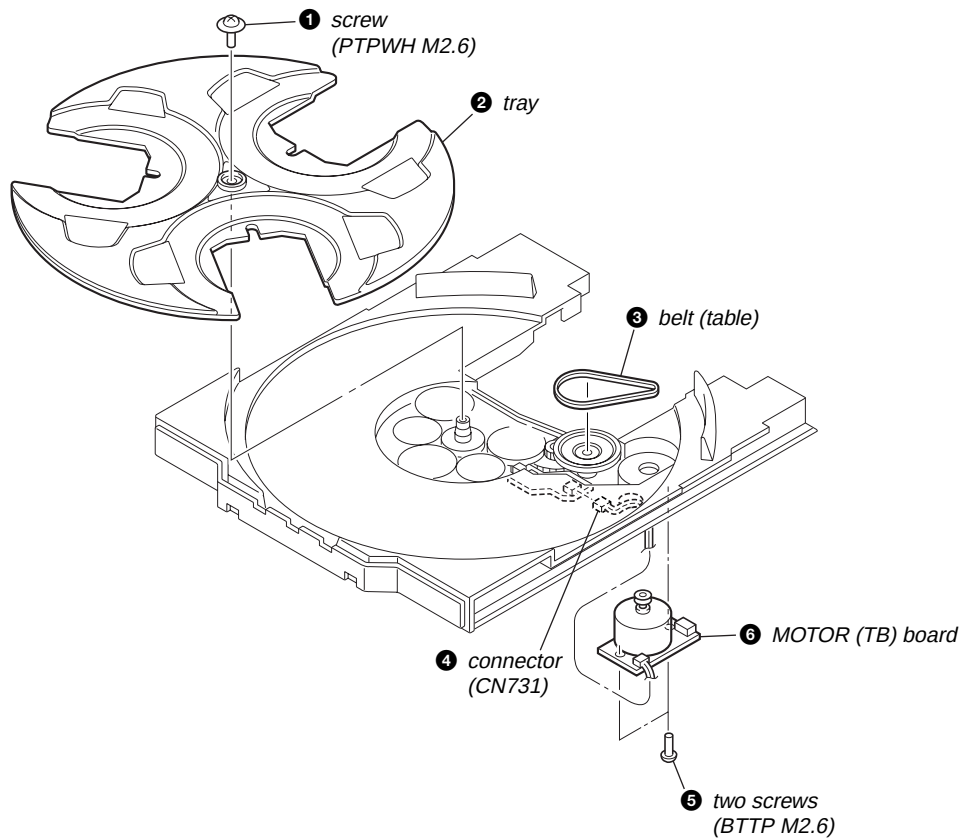


3-12. MOTOR (LD) BOARD

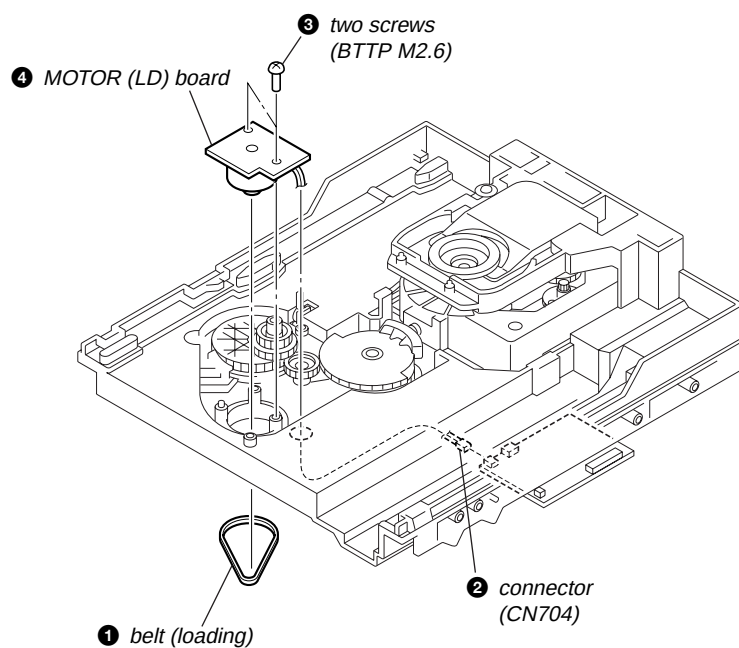


3-13. BASE UNIT (BU-F1BD81C)

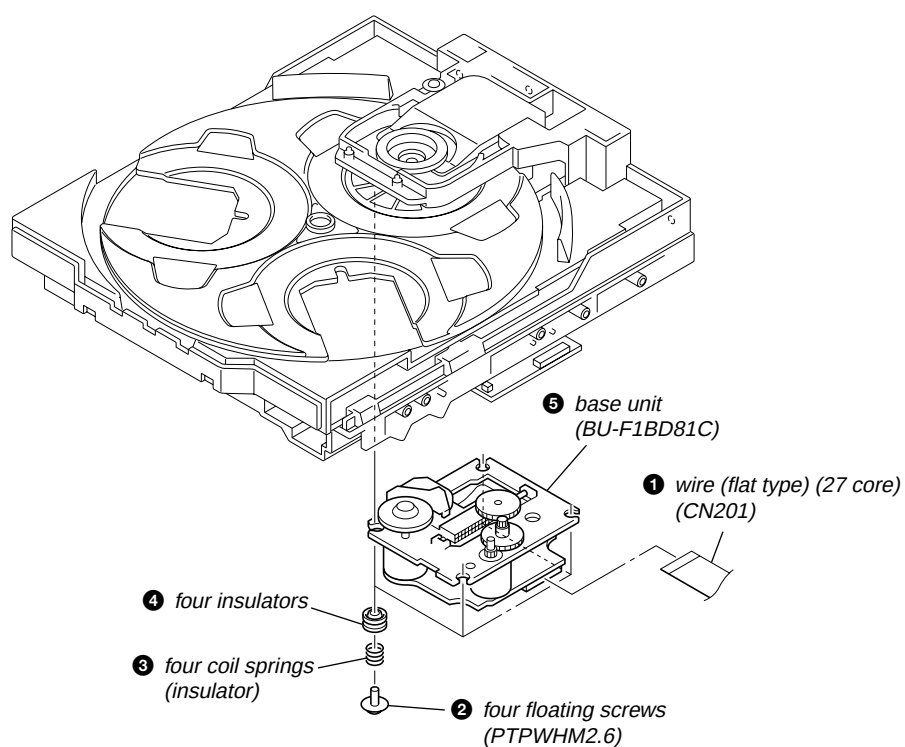

3-14. MOTOR GEAR ASSY (SLED) (M102), CD BOARD

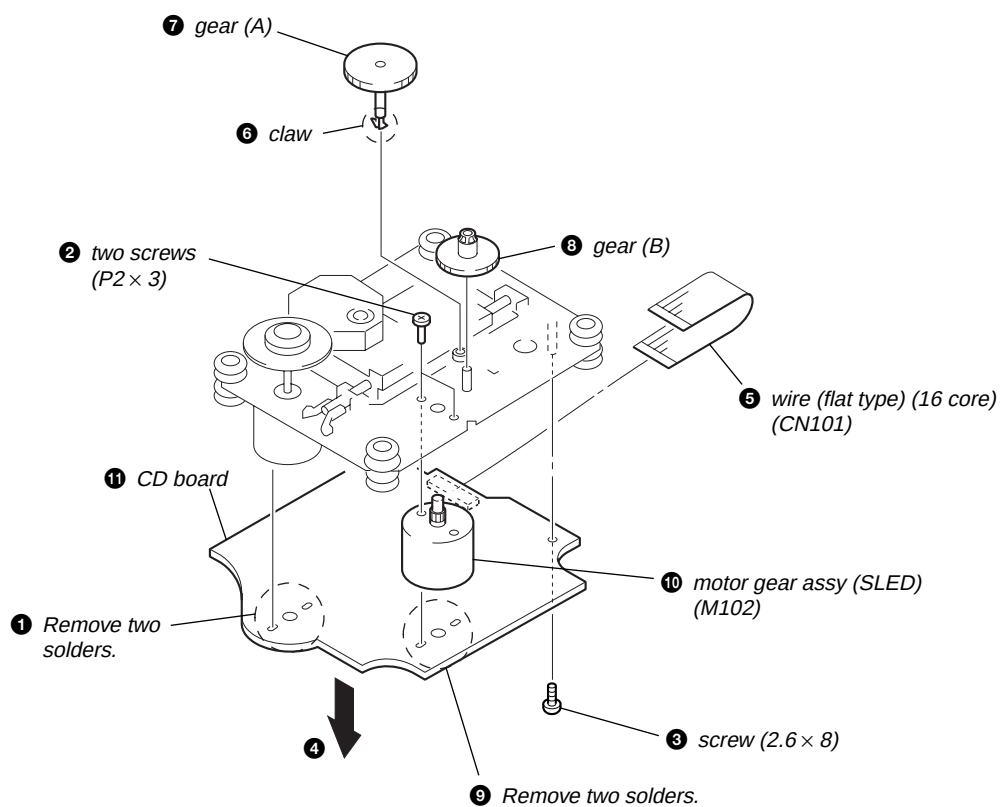

3-15. OPTICAL PICK-UP (KSM-215DCP)

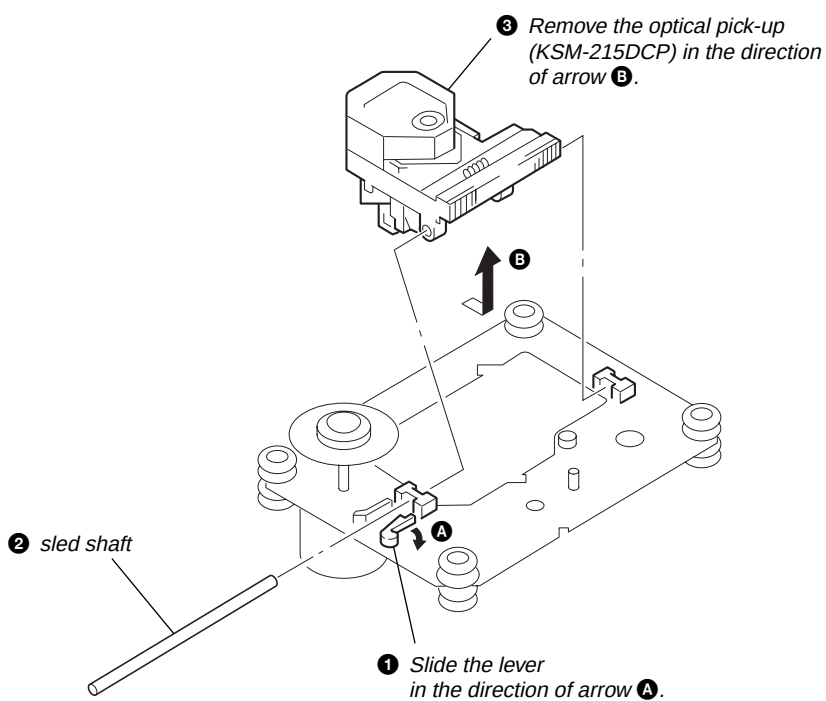

SECTION 4

TEST MODE

MC COLD RESET

- The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press three buttons of **[■]**, **[P FILE]** and **[DISC 1]** simultaneously.
- The message "COLD RESET" is displayed on the fluorescent indicator tube momentarily, then becomes standby states.

TUNER STEP CHANGE-OVER

- A step of AM channels can be changed over between 9 kHz and 10 kHz.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press the **[TUNER/BAND]** button to select "AM".
- Press the **[I/⏻]** button to turn the power OFF.
- Press two buttons of **[PLAY MODE/TUNING MODE]** and **[I/⏻]** simultaneously.
- The message "AM 9K STEP" or "AM 10K STEP" is displayed on the fluorescent indicator tube, and thus the channel step is changed over.

CD SHIP (LOCK) MODE

- This mode moves the optical pick-up to the position durable to vibration. Use this mode when returning the set to the customer after repair.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press the **[CD]** button to select "CD".
- Press two buttons of **[CD]** and **[POWER]** simultaneously.
- The message "LOCK" is displayed on the fluorescent indicator tube, and the CD ship mode is set.

CD SHIP (LOCK) MODE & COLD RESET

- This mode is used to perform CD chip (lock) mode and cold reset simultaneously.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press the **[CD]** button to select "CD".
- Press three buttons of **[■]**, **[CD]** and **[DISPLAY]** simultaneously.
- The message "COLD RESET" is displayed on the fluorescent indicator tube momentarily, then becomes standby states.

CHANGE-OVER FUNCTION OF MD/VIDEO

- This mode is used to enable function of external input to change over between MD and VIDEO.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press two buttons of **[VIDEO (MD)]** and **[I/⏻]** simultaneously.
- The message "MD" or "VIDEO" is displayed on the fluorescent indicator tube, and the function of external input is changed over.

CD TRAY LOCK MODE

- This mode is used to be unable to take sample disc out of tray in the shop.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press the **[CD]** button to select "CD".
- Set disc on the CD tray, press two buttons of **[■]** and **[▲]** for 5 seconds.
- The message "LOCKED" is displayed on the fluorescent indicator tube and the CD tray is locked. (Even if pressing the **[▲]** button, the message "LOCKED" is displayed on the fluorescent indicator tube and the CD tray is locked)
- To release from this mode, press two buttons of **[■]** and **[▲]** for 5 seconds.
- The message "UNLOCKED" is displayed on the fluorescent indicator tube and the CD tray is unlocked.

AMP TEST MODE

- This mode is used to display the parameter of amplifier IC and display the VACS status.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press three buttons of **[■]**, **[P FILE]** and **[PLAY MODE/TUNING MODE]** simultaneously.
- When the AMP test mode is activated, the message "AMP TEST IN" is displayed on the fluorescent indicator tube momentarily, then amplifier adjustment mode is displayed on the fluorescent indicator tube.
- Press the **[DISPLAY]** button to changed over between VACS status display mode and the amplifier IC parameter display mode.
- In the amplifier IC parameter display mode, press the **[i-BASS]** button to changed over DBFB ON/OFF, and when it is ON, the character "D" is displayed on the fluorescent indicator tube.
- In the amplifier IC parameter display mode, press the **[SURROUND]** button to changed over surround ON/OFF, and when it is ON, the character "S" is displayed on the fluorescent indicator tube.
- In the amplifier IC parameter display mode, turn each knob of **[BASS]**, **[MIDDLE]** and **[TREBLE]** causes respective parameters to be changed, as well as change-over of the display on the fluorescent indicator tube.

AGING MODE

- This mode can be used for operation check of CD section and tape deck section.
CD section and tape deck section work in parallel.

If an error occurred:

The aging operation stops only an error occurred sections and display then status.

If no error occurs:

The aging operation continues repeatedly.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press the **[CD]** button to select "CD".
- Set disc on the CD tray and set tape into the deck.
- Press three buttons of **[■]**, **[P FILE]** and **[DISC SKIP/EX-CHANGE]** simultaneously.
- Aging operations of CD and tape are started at the same time.
- To release from this mode, press the **[I/⏻]** button to turn the power OFF and press the function buttons.

1. Display at the Aging Mode

Display operating state of CD section and tape deck section alternately.


If an error occurred, stop display which that section.

2. CD Section

The sequence during the aging mode is following as below.

Display at the aging mode is the same as the normal operation.

Aging mode sequence (CD section) :

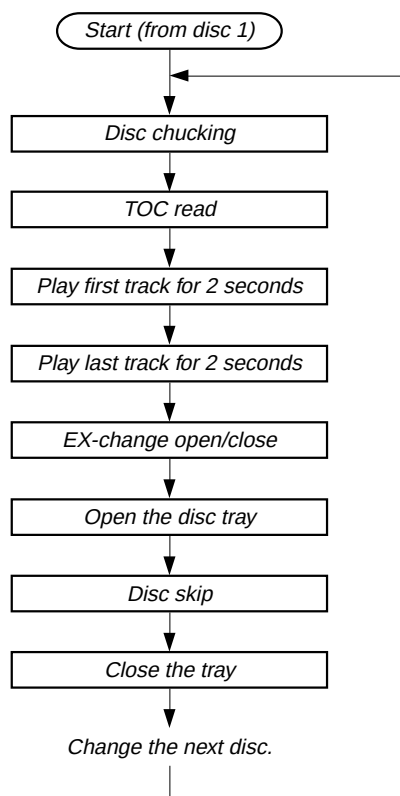


3. Tape Deck Section

The sequence during the aging mode is following as below.

If an error occurred, stop display that step.

Aging mode sequence (tape deck section) :

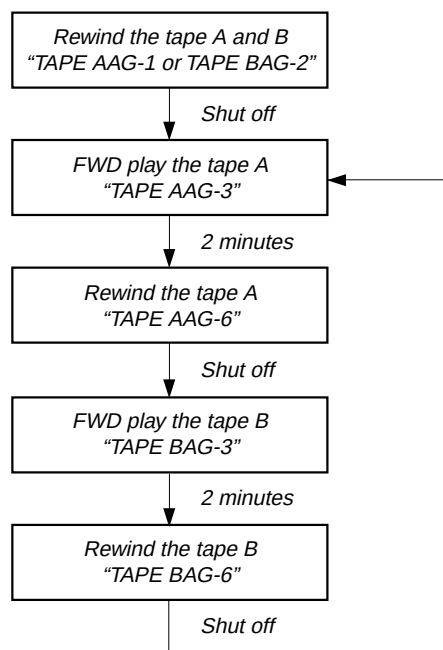

Note: "TAPE *AG-*" is display of each step.

PANEL TEST MODE

- This mode is used to check the fluorescent indicator tube, LEDs and buttons.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press three buttons of **[■]**, **[P FILE]** and **[ENTER]** simultaneously.
- Fluorescent indicator tube and LEDs are all turned ON.
- Press two buttons of **[II]** and **[ENTER]** simultaneously, mode is changed over.
- In the key check mode, press each key, the defined key number of every each key list is displayed on the fluorescent indicator tube.
- In the key count check mode, "KEYCNT 0" is displayed on the fluorescent indicator tube. Each time a key is pressed, "K" value increases. However, once a key is pressed, it is no longer taken into account.
- In the headphone input check mode, connect the headphone, the message "H_P ON" is displayed on the fluorescent indicator tube, and disconnect the headphone, the message "H_P OFF" is displayed on the fluorescent indicator tube.
- In the volume check mode, "VOLUME FLAT" is displayed on the fluorescent indicator tube. Turn the **[VOLUME]** knob clockwise, the message "VOLUME UP" is displayed on the fluorescent indicator tube momentarily and turn the **[VOLUME]** knob counterclockwise, the message "VOLUME DOWN" is displayed on the fluorescent indicator tube momentarily.

MC TEST MODE

- This mode is used to check operations of microprocessor.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press three buttons of **[■]**, **[P FILE]** and **[DISC 3]** simultaneously.
- When the MC test mode is activated, VACS level is displayed on the fluorescent indicator tube momentarily.
- Turn the **[AMS/TUNING]** knob clockwise, the message "ALL EQ MAX" is displayed on the fluorescent indicator tube momentarily and turn the **[AMS/TUNING]** knob counterclockwise, the message "ALL EQ MIN" is displayed on the fluorescent indicator tube momentarily.
- Press the **[PRESET EQ]** button, the message "ALL EQ FLAT" is displayed on the fluorescent indicator tube momentarily.
- Turn the **[VOLUME]** knob clockwise, the message "VOLUME MAX" is displayed on the fluorescent indicator tube momentarily and turn the **[VOLUME]** knob counterclockwise, the message "VOLUME MIN" is displayed on the fluorescent indicator tube momentarily.
- Press the **[i-BASS]** button to changed over VACS ON/OFF.
- When the **[REC PAUSE/START]** button is pressed twice with a tape set in the deck-B, the function is switched "MD" or "VIDEO" and recording starts. When the **[◀▶]** or **[▶▶]** button is pressed during recording, the tape is rewound back to the beginning of recording, the function is switched to "TAPE B", then playback starts.
- When the **[CD SYNC]** key is pressed with the test tape (AMS-100, AMS-110A) in the deck, number of space between tunes is counted, then if AMS-110A is set, "OK" is displayed on the fluorescent indicator tube and if AMS-100 is set, "NG" is displayed on the fluorescent indicator tube.
- Press the **[I/⏻]** button to release from this mode, then cold reset is performed.

VERSION DISPLAY MODE

- This mode is used to check the model, destination and software version.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press three buttons of **[■]**, **[P FILE]** and **[DISC 2]** simultaneously.
- When this mode is activated, model and destination is displayed on the fluorescent indicator tube.
- Press the **[DISPLAY]** button to changed over between software version and year, month, day of the software creation display mode and model and destination display mode.
- To release from this mode, press three buttons of **[■]**, **[P FILE]** and **[DISC 2]** simultaneously.

CD ERROR CODE DISPLAY MODE

- This mode can be used for error code display of CD section.

Procedure:

- Press the **[I/⏻]** button to turn the power ON.
- Press the **[CD]** key to select "CD".
- Press three buttons of **[■]**, **[CD]** and **[DISC 1]** simultaneously.
- When this mode is activated, mechanism deck error code is displayed on the fluorescent indicator tube.
- Press the **[i-BASS]** button to changed over between optical pick-up error code display mode and mechanism deck error code mode.
- Turn the **[AMS/TUNING]** knob to change over display of error history.

1. Mechanism Deck Error Code Mode

- When this mode is entered, mechanism deck error code is displayed with the 10-character format on the fluorescent indicator tube.

The first digit from the left indicates:

The first digit from the left indicates which mode the error history is. In the mechanism deck error code mode, "M" is displayed on the fluorescent indicator tube.

The second digit from the left indicates:

(Error history No. display)

The second digit from the left indicates which order the error history is. "1" indicates the latest error history, and each time the number increases by one, the error history goes back to one-previous error.

The third and 4th digit from the left indicates:

(Error status display)

The third and 4th digit from the left indicates which error status is indicated.

Display	Status
0 0	No error
0 8	Table operation time-out (Table does not move to the target position within the specified time)
1 6	In the chucking down operation, the operation was retried by the maximum number of times but the operation could not be completed
1 7	In the chucking up and down operation, the reverse recovery processing was attempted but it could not be recovered
1 8	In the chucking up operation, the operation was retried by the maximum number of times but the operation could not be completed
2 0	Loading operation time-out (Table does not move to the target position within the specified time)
2 2	As the chuck was in the ex-open status at the initialization, the closing was attempted but could not be completed

The 5th and 6th digit from the left indicates:

(Present status display)

The 5th and 6th digit from the left indicates which operating status when an error occurred is indicated.

Display	Status
0 1	Open completion status
0 2	From open status, the movement to chucking down position is under way
0 3	From chucking down position, the open operation is under way
0 4	Chucking down completion status
1 0	The chucking down operation is under way
1 1	The chucking up operation is under way
1 2	Close completion status
1 3	From close status, the ex-open operation is under way
1 4	From ex-open status, the close operation is under way
1 8	Ex-pen completion status

The 7th and 8th digit from the left indicates:

(Motor status display)

The 7th and 8th digit from the left indicates which motor output status when an error occurred is indicated.

Display	Status
× 0	No table motor output
× 1	Table motor forward output
× 2	Table motor backward output
× 3	Table motor break output
0 ×	No loading motor output
1 ×	Loading motor forward output
2 ×	Loading motor backward output
3 ×	Loading motor break output

The 9th and 10 th digit from the left indicates:

(Tray status display)

The 9th and 10th digit from the left indicates which target processing when an error occurred is indicated.

Display	Status
0 1	Open operation
1 2	Close operation
1 8	Ex-open operation

2. Optical Pick-up Error Code Mode

- When this mode is entered, optical pick-up error code is displayed with the 8-character format on the fluorescent indicator tube.

The first digit from the left indicates:

The first digit from the left indicates which mode the error history is. In the optical pick-up error code mode, “D” is displayed on the fluorescent indicator tube.

The second digit from the left indicates:

(Error history No. display)

The second digit from the left indicates which order the error history is. “1” indicates the latest error history, and each time the number increases by one, the error history goes back to one-previous error.

The third and 4th digit from the left indicates:

(Error status display)

The third and 4th digit from the left indicates which error status is indicated.

Display	Status
0 1	Not focused (TOC read without a disc)
0 2	GFS NG (TOC read with a disc chucked)
0 3	Start operation time-over
0 4	Defocused continuously (Defocused during TOC reading)
0 5	Q code not entered for specified time
0 6	Tracking not turned ON
0 7	Blank disc (Blank disc TOC read)

The 5th and 6th digit from the left indicates:

(Error step display)

The 5th and 6th digit from the left indicates which processing when a trouble occurred

Display	Contents
0 1	Power OFF in progress
0 2	Initialize in progress
0 3	Oscillation stopping
0 4	From oscillation stop, oscillation starting
0 5	Stopping
0 6	Stop operation is under way
0 7	Start operation in progress
0 8	TOC read in progress
0 9	Search operation is under way
0 A	Playback operation is under way
0 B	Pause operation is under way
0 C	Playback manual search operation is under way
0 D	Pause manual search operation is under way
0 E	—

The 7th and 8th digit from the left indicates:

The 7th and 8th digit from the left indicates which operation in progress when a trouble occurred. (Step of each processing of the 5th and 6th digits is indicated)

5 REPEAT LIMIT CANCEL MODE

- Number of repeat for CD playback is 5 times when the repeat mode is “REPEAT”. This mode is used to enables CD to repeat playback for limitless times.

Procedure:

- Press the  button to turn the power ON.
- Press the  button to select “CD”.
- Press three buttons of ,  and  simultaneously.
- The message “LIMIT OFF” is displayed on the fluorescent indicator tube momentarily, CD repeat 5 limit is cancelled.

SECTION 5 MECHANICAL ADJUSTMENTS

PRECAUTION

1. Clean the following parts with a denatured alcohol-moistened swab:
record/playback heads pinch rollers
erase head rubber belts
capstan idlers
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

TORQUE MEASUREMENT

Mode	Torque meter	Meter reading
FWD	FCQ-102C	3.06 N • m to 6.96 N • m 31 to 71 g • cm (0.43 – 0.98 oz • inch)
FWD back tension	CQ-102C	0.19 N • m to 0.58 N • m 2 to 6 g • cm (0.02 – 0.08 oz • inch)
REV	CQ-102RC	3.06 N • m to 6.96 N • m 31 to 71 g • cm (0.43 – 0.98 oz • inch)
REV back tension	CQ-102RC	0.19 N • m to 0.58 N • m 2 to 6 g • cm (0.02 – 0.08 oz • inch)
FF/REW	CQ-201B	6.96 N • m to 14.02 N • m 71 to 143 g • cm (0.98 – 1.99 oz • inch)
FWD tension	CQ-403A	9.80 N • m 100 g or more (3.53 oz or more)
REV tension	CQ-403R	9.80 N • m 100 g or more (3.53 oz or more)

SECTION 6 ELECTRICAL ADJUSTMENTS

DECK SECTION

0 dB = 0.775 V

1. Demagnetize the record/playback head with a head demagnetizer.
2. Do not use a magnetized screwdriver for the adjustments.
3. After the adjustments, apply suitable locking compound to the parts adjust.

• Test Tape

Tape	Signal	Used for
P-4-A100	10 kHz, -10 dB	Azimuth Adjustment

RECORD/PLAYBACK HEAD AZIMUTH ADJUSTMENT


DECK A

DECK B


Note: Perform this adjustments for both decks

Procedure:


1. Mode: Playback

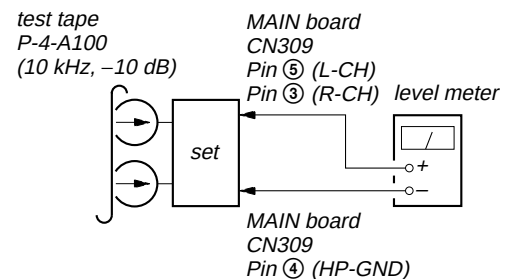

2. Turn the adjustment screw and check output peaks. If the peaks do not match for L-CH and R-CH, turn the adjustment screw so that outputs match within 1dB of peak.

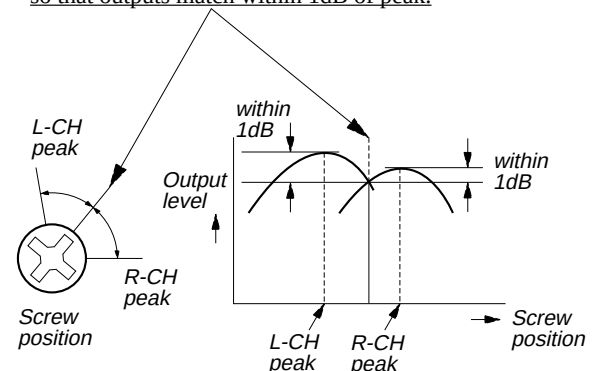


3. Mode: Playback

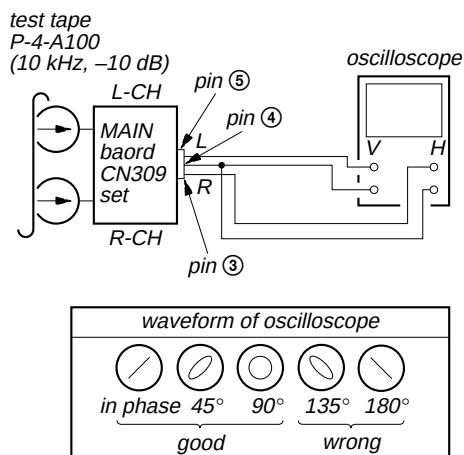

- After the adjustments, apply suitable locking compound to the parts adjusted.

Adjustment Location: Playback Head (Deck A).
Record/Playback/Erase Head (Deck B).

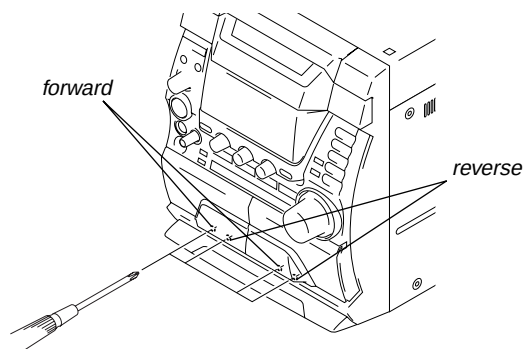


CD SECTION

Note:

- CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
- Use YEDS-18 (3-702-101-01) unless otherwise indicated.
- Use an oscilloscope with more than 10MW impedance.
- Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.


S-CURVE CHECK

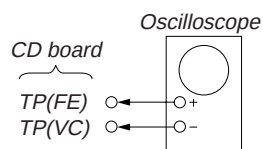

Procedure :

- Connect an oscilloscope to TP (FE) and TP (VC) on the CD board.
- Press the button to turn the power ON.
- Load a disc (YEDS-18) and actuate the focus search. (In consequence of open and close the disc tray, actuate the focus search)
- Confirm that the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3 ± 0.5 Vp-p.


S-curve waveform

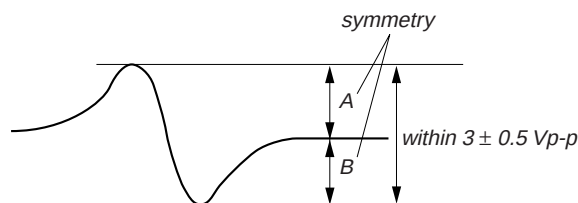

- Note:**
- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
 - Take sweep time as long as possible and light up the brightness to obtain best waveform.

Connecting Location: CD board

RFAC LEVEL CHECK

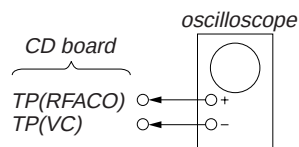


Procedure :


- Connect an oscilloscope to TP (RFACO) and TP (VC) on the CD board.
- Press the button to turn the power ON.
- Load a disc (YEDS-18) and playback.
- Confirm that oscilloscope waveform is clear and check if RFAC signal level is correct or not.

Note: Clear RFAC signal waveform means that the shape “ $\diamond$ ” can be clearly distinguished at the center of the waveform.

Connecting Location: CD board

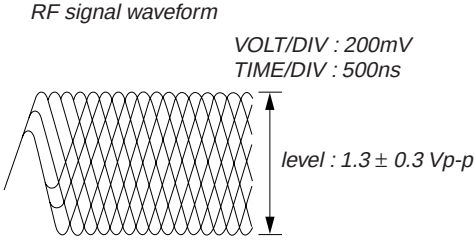


- CD BOARD (Conductor Side) -

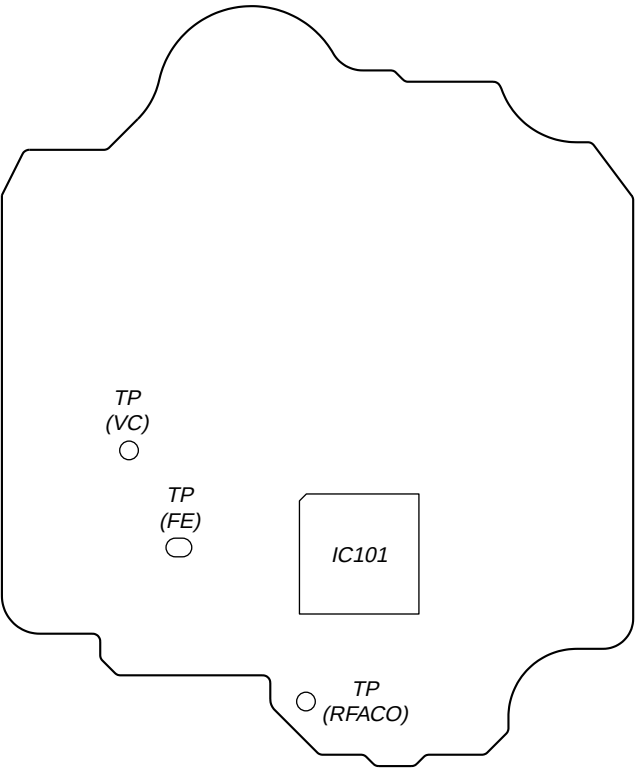


SECTION 7
DIAGRAMS


7-1. BLOCK DIAGRAM – SERVO Section –

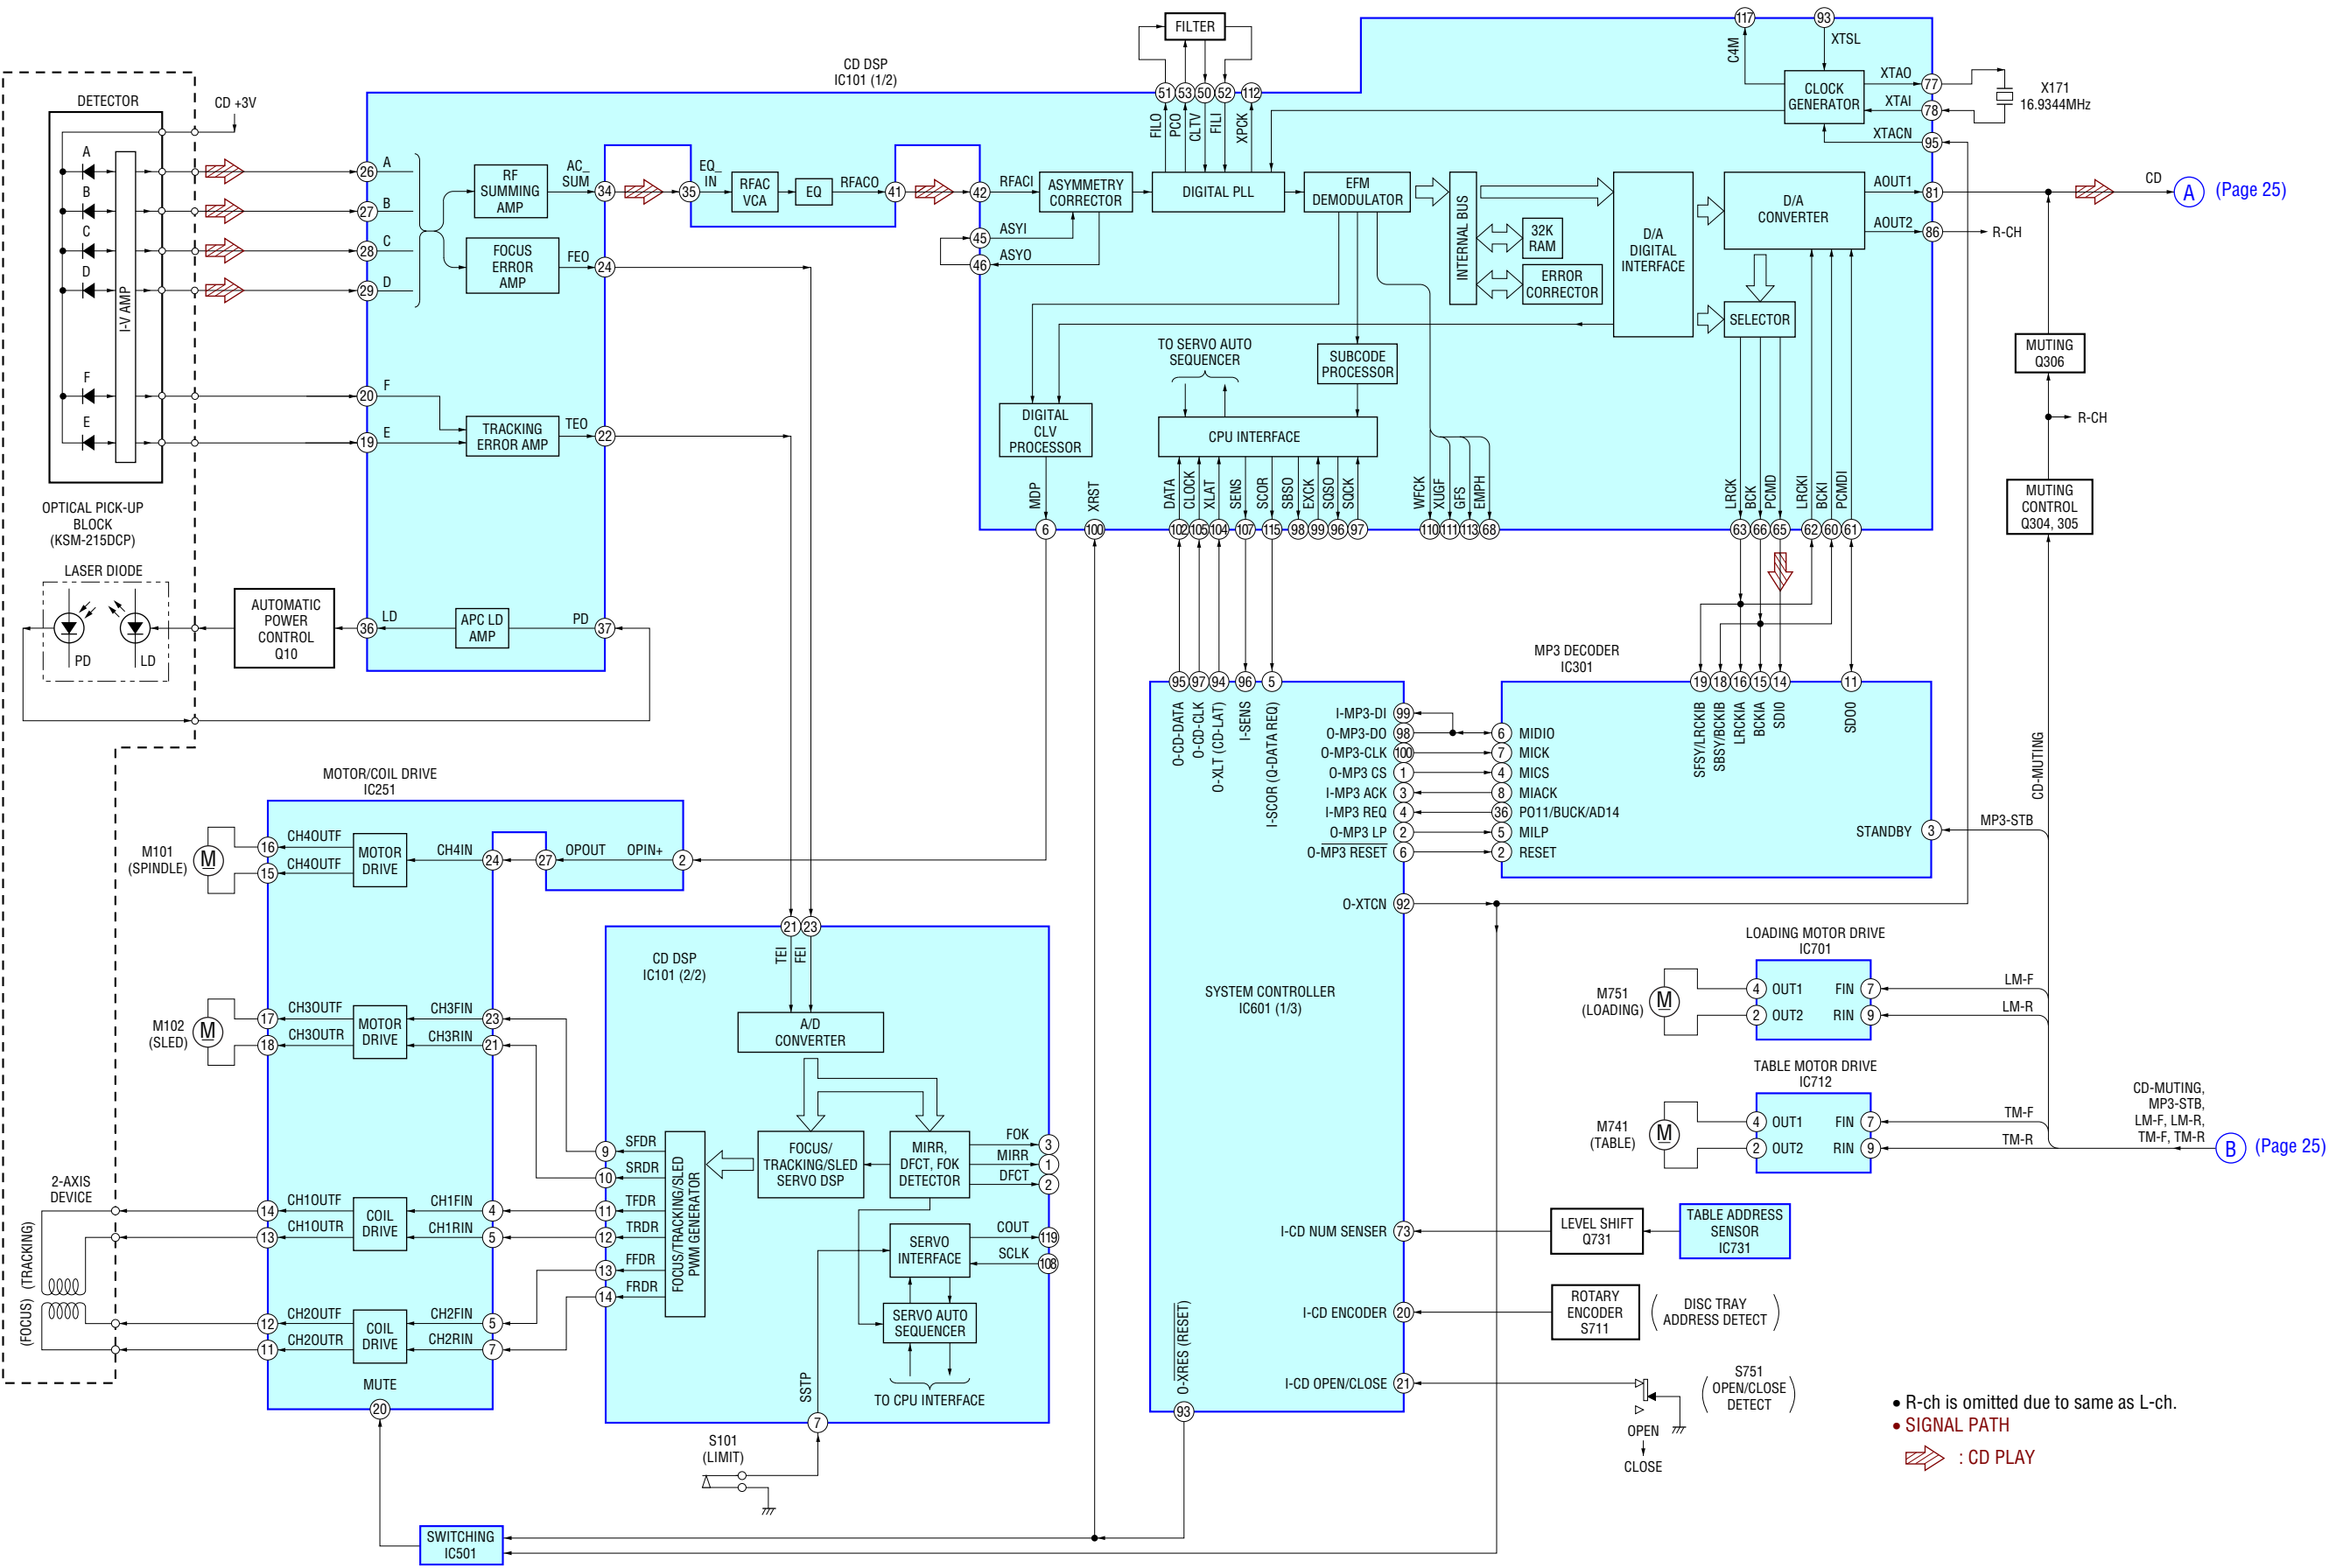

7-2. BLOCK DIAGRAM – MAIN Section –

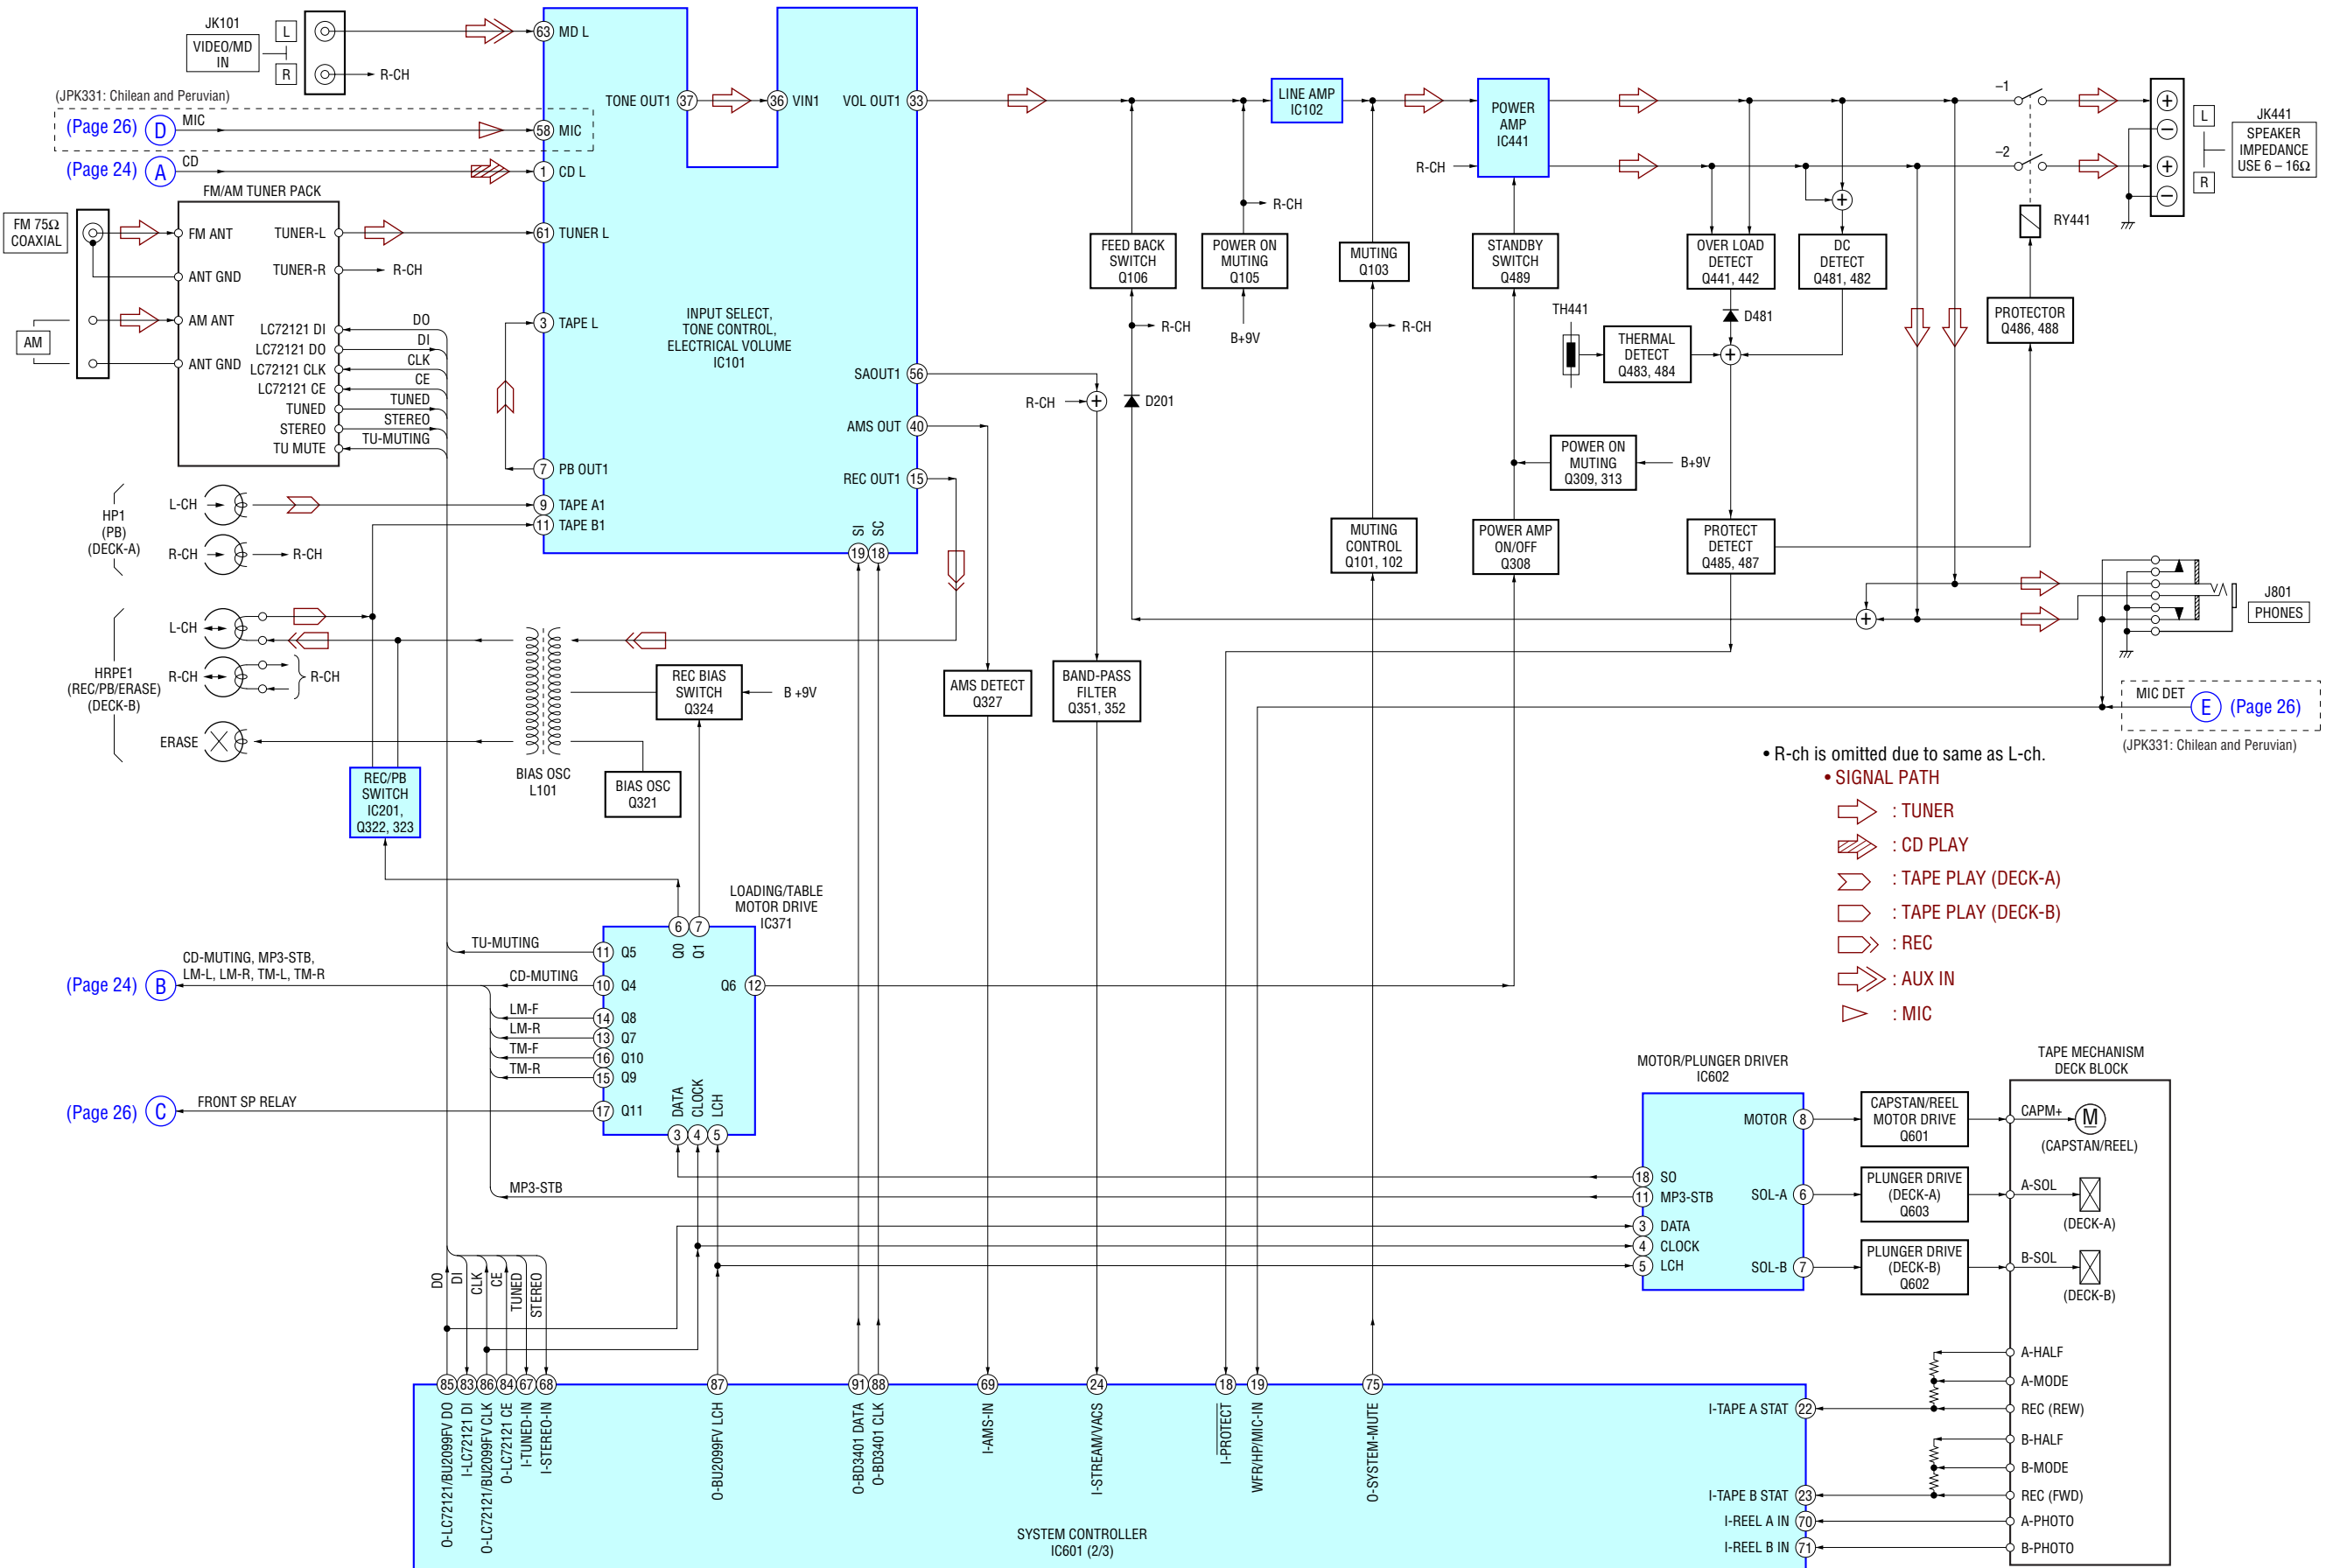



7-3. BLOCK DIAGRAM – PANEL/POWER SUPPLY Section –

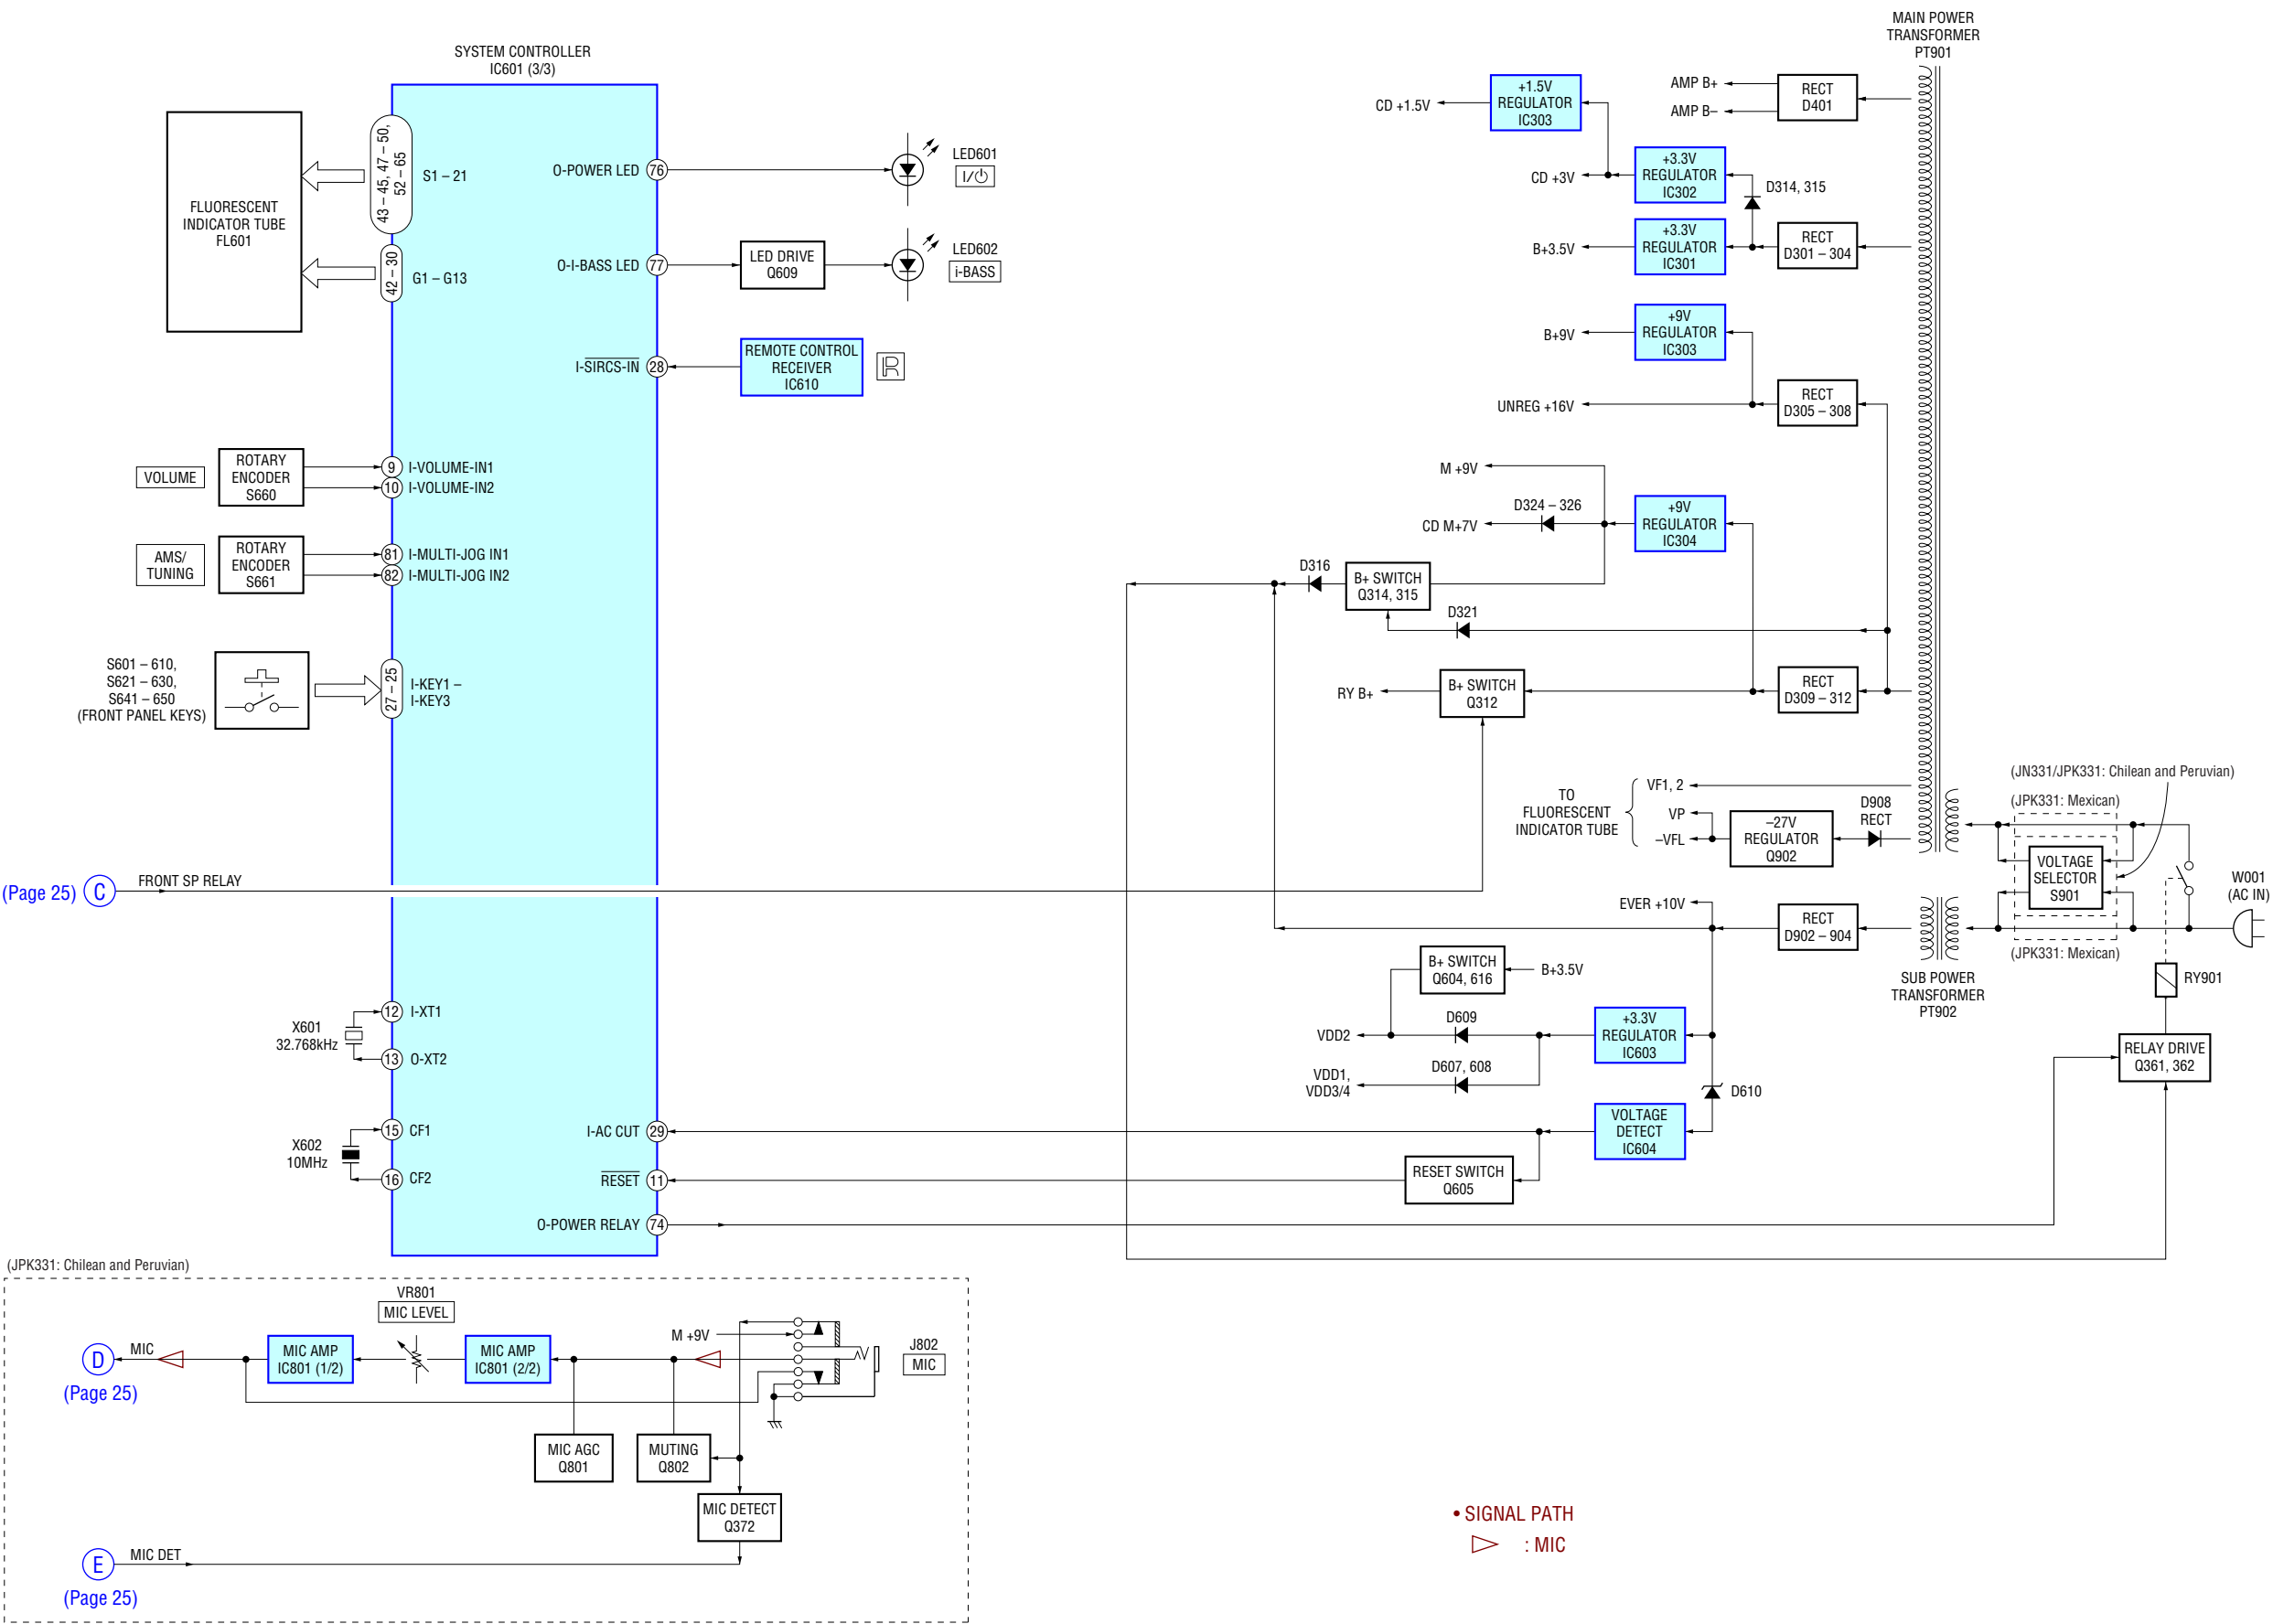

• Note for Printed Wiring Boards and Schematic Diagrams

Note on Printed Wiring Board:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)
- Indication of transistor

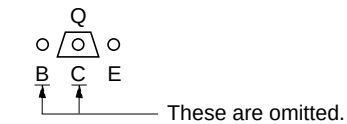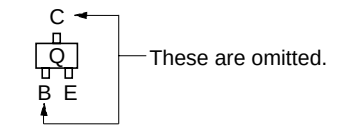

Note on Schematic Diagram:



- All capacitors are in μF unless otherwise noted. (p: pF) 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- $\triangle$: internal component.
- $\square$: nonflammable resistor.
- $\square$: fusible resistor.
- $\square$: panel designation.

Note: The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
Replace only with part number specified.


- : B+ Line.
- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
 - BD Section —
no mark : CD PLAY
 - Other Sections —
no mark : FM
 - () : TAPE PLAY
 - << >> : TAPE REC
 - [] : CD PLAY
 - * : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M Ω).
Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 - $\Rightarrow$: TUNER (FM/AM)
 - $\Rightarrow$: TAPE PLAY (DECK A)
 - $\Rightarrow$: TAPE PLAY (DECK B)
 - $\Rightarrow$: REC
 - $\Rightarrow$: CD PLAY
 - $\Rightarrow$: AUX IN
 - $\Rightarrow$: MIC
- Abbreviation
 - E51 : Chilean and Peruvian models
 - MX : Mexican model

• Circuit Boards Location


- Abbreviation
 - E51 : Chilean and Peruvian models

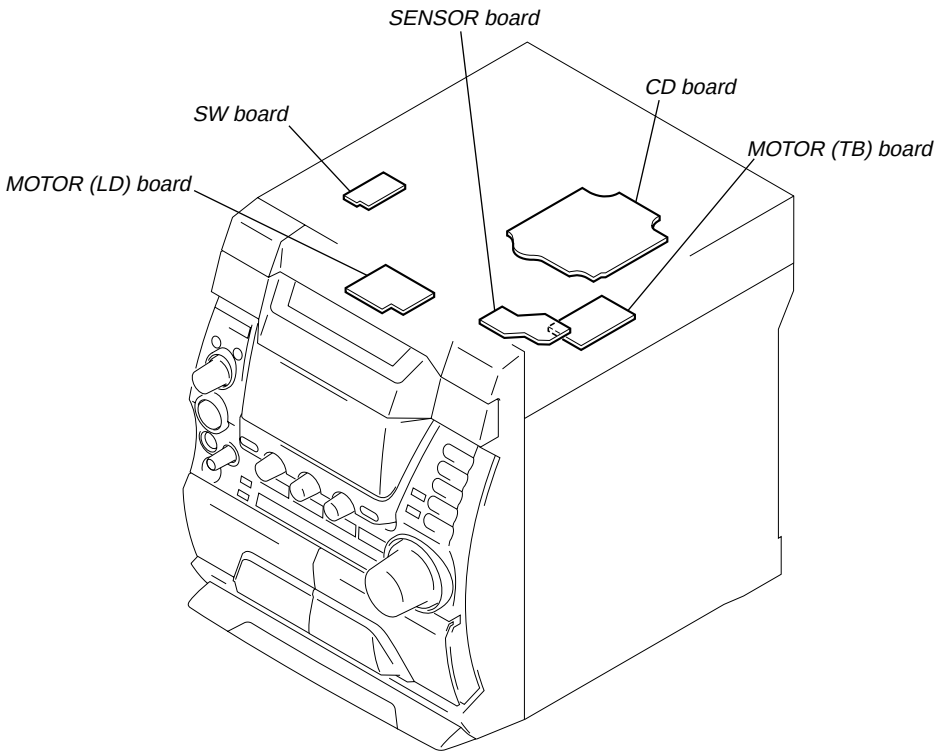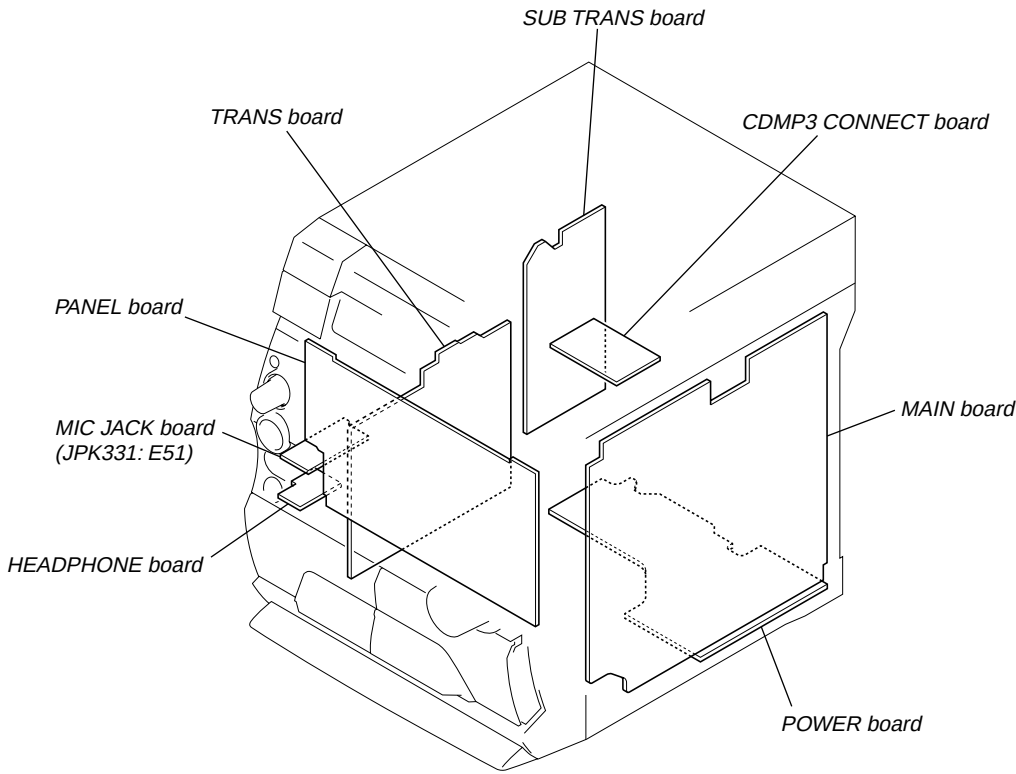


7-4. PRINTED WIRING BOARD – CD Board – • See page 27 for Circuit Boards Location. : Uses unleaded solder.

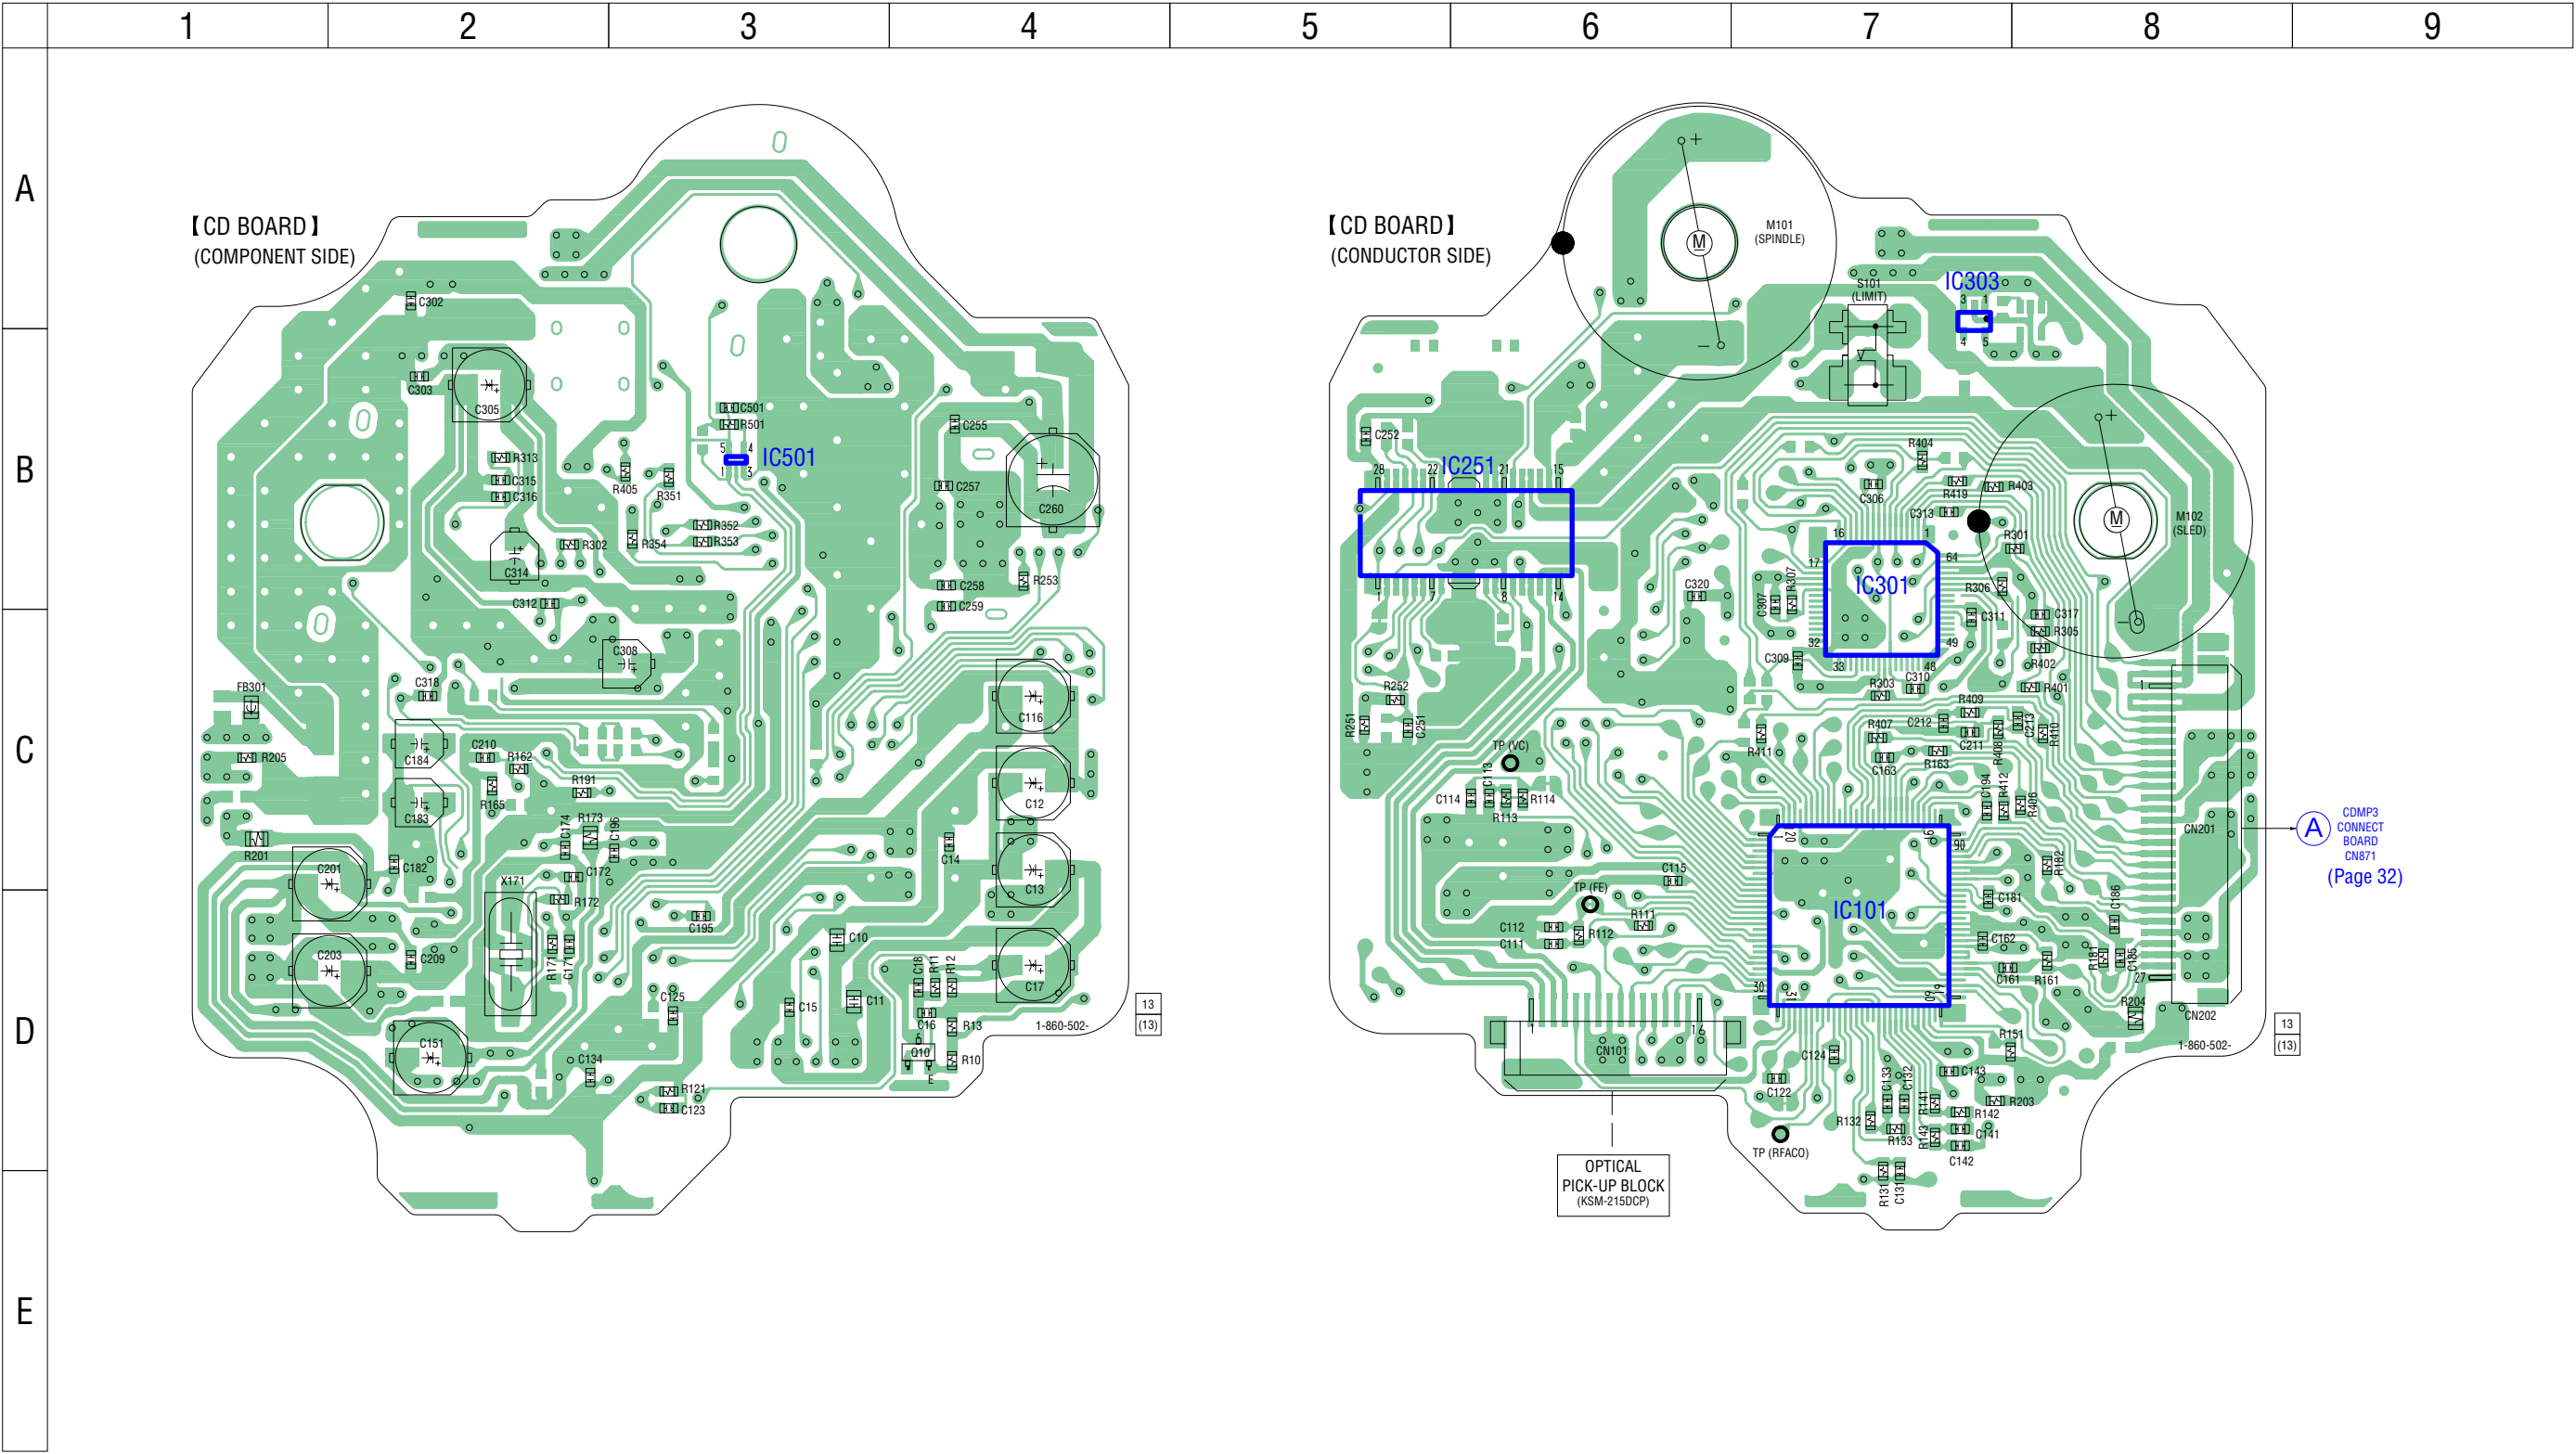


29 29




7-6. PRINTED WIRING BOARDS – CHANGER Section – • See page 27 for Circuit Boards Location. : Uses unleaded solder.

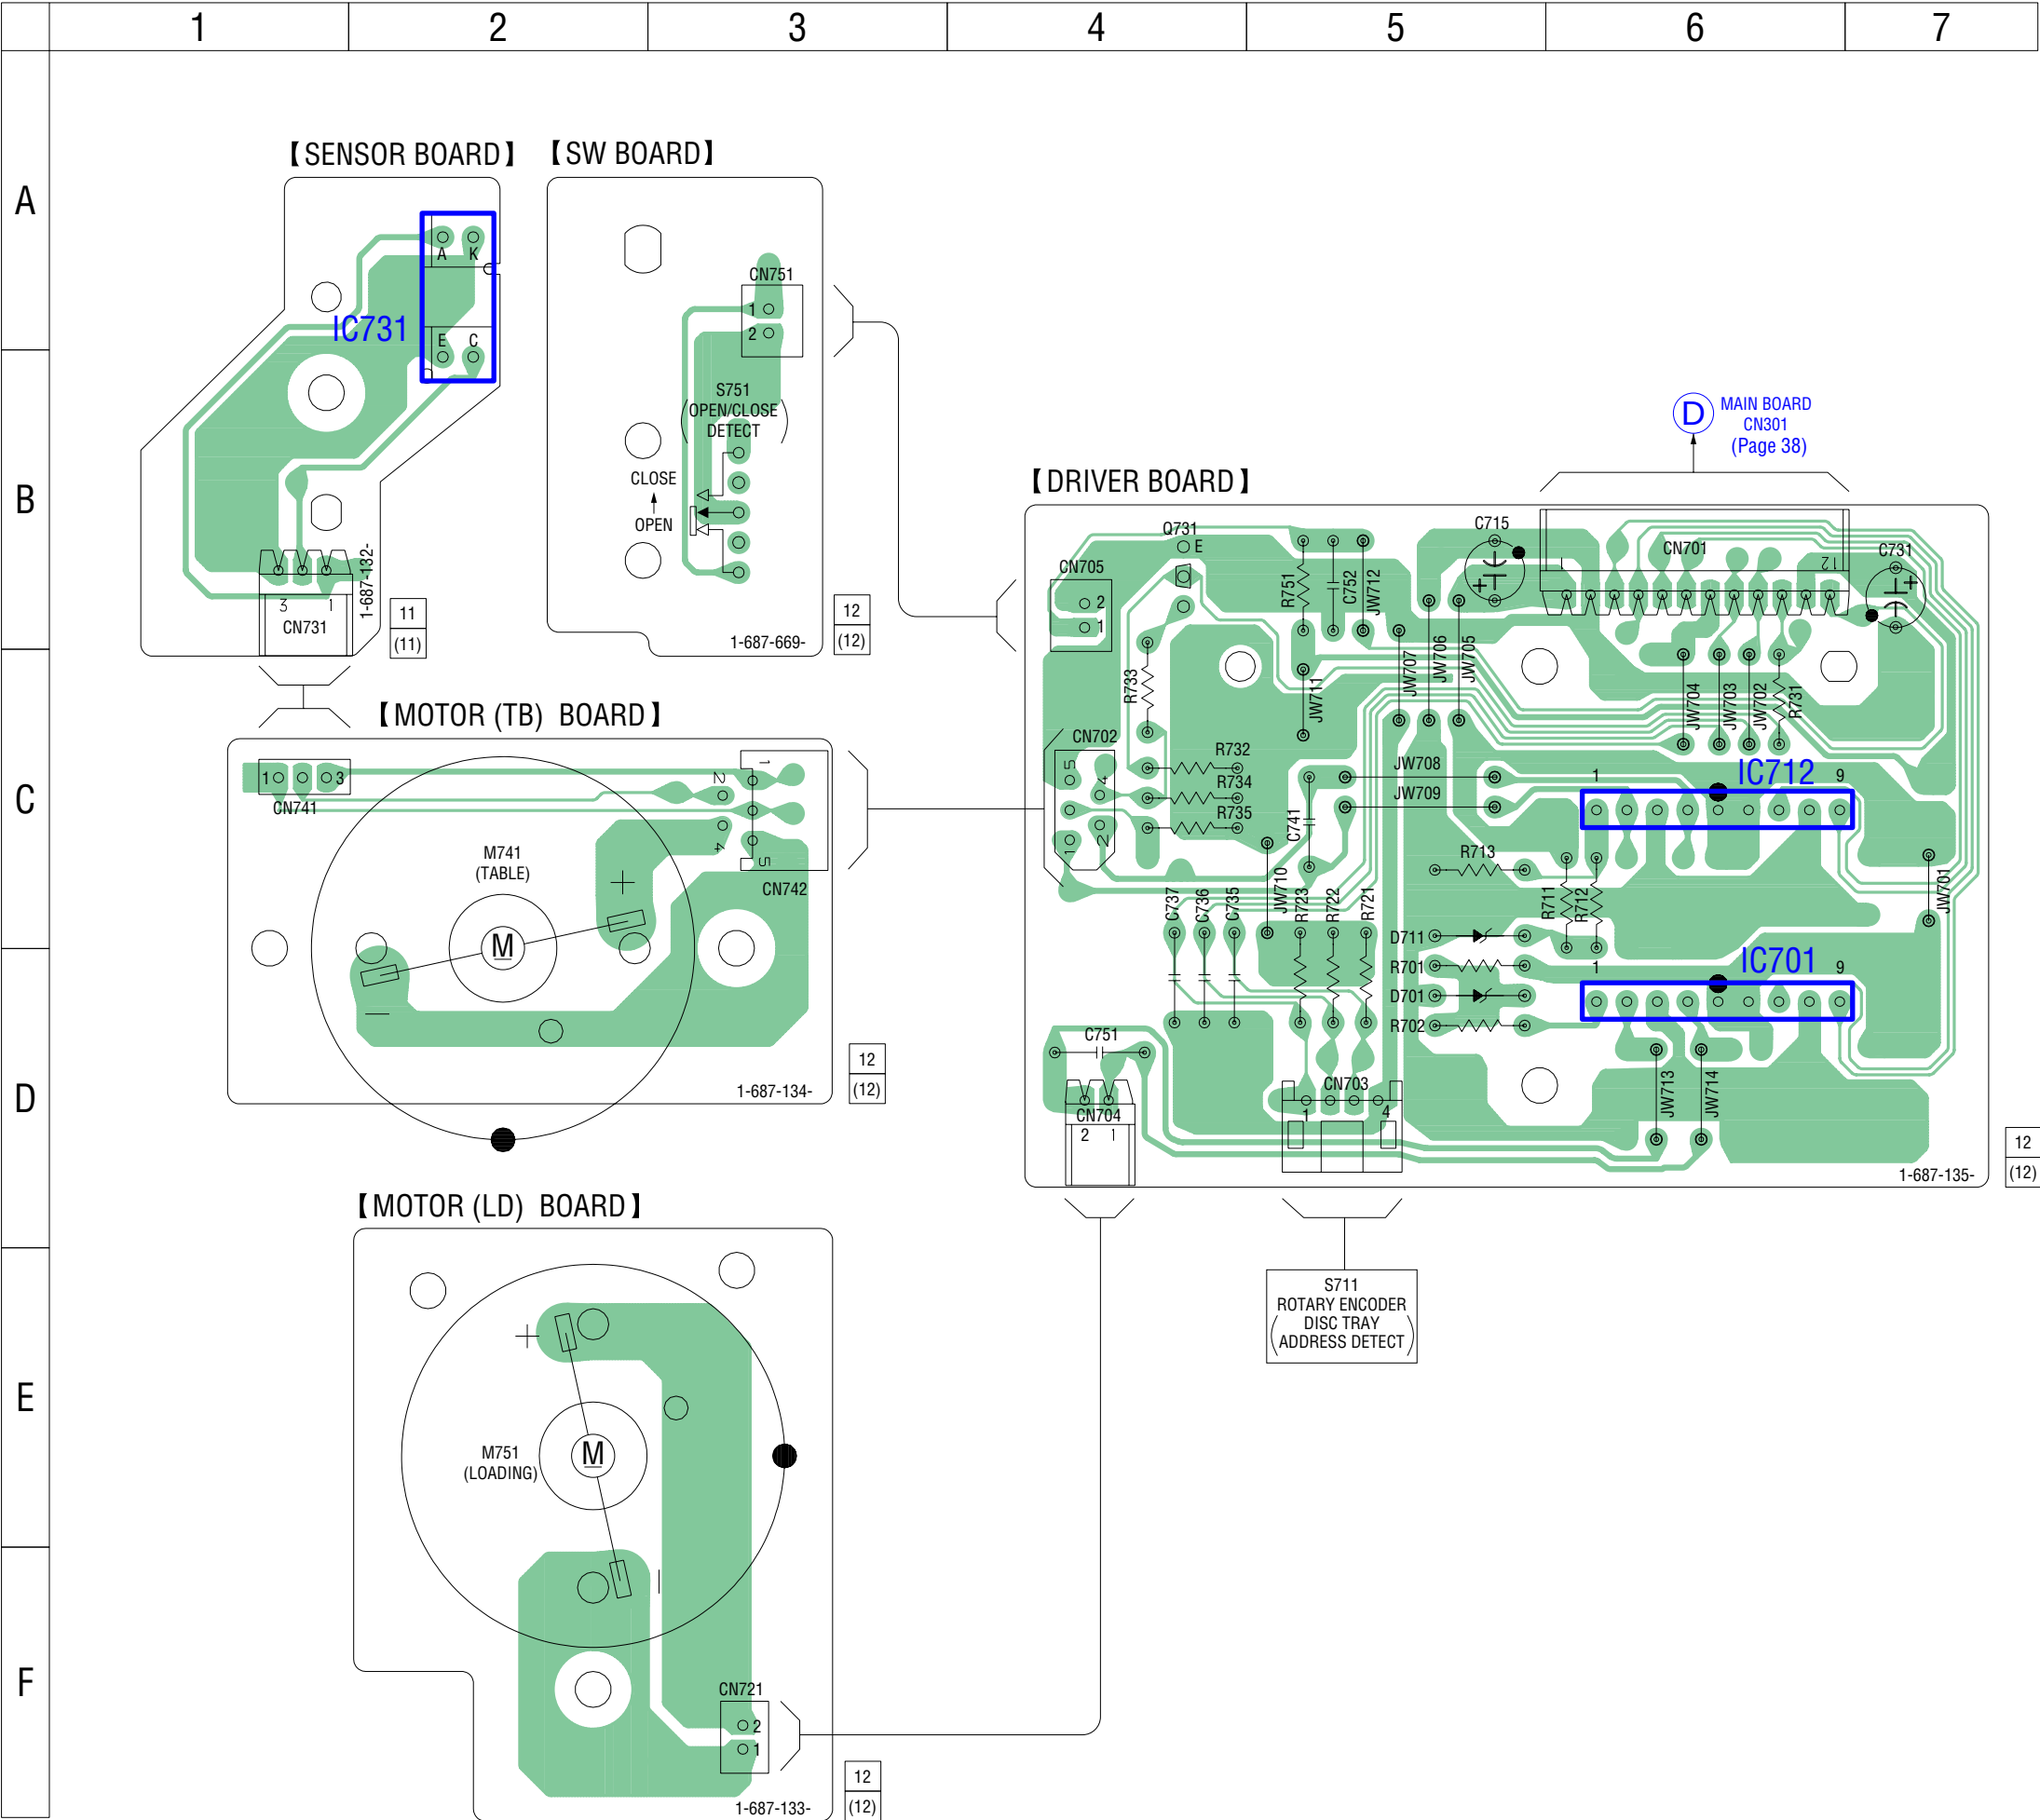


7-7. SCHEMATIC DIAGRAM – CHANGER Section – • See page 46 for IC Block Diagrams.

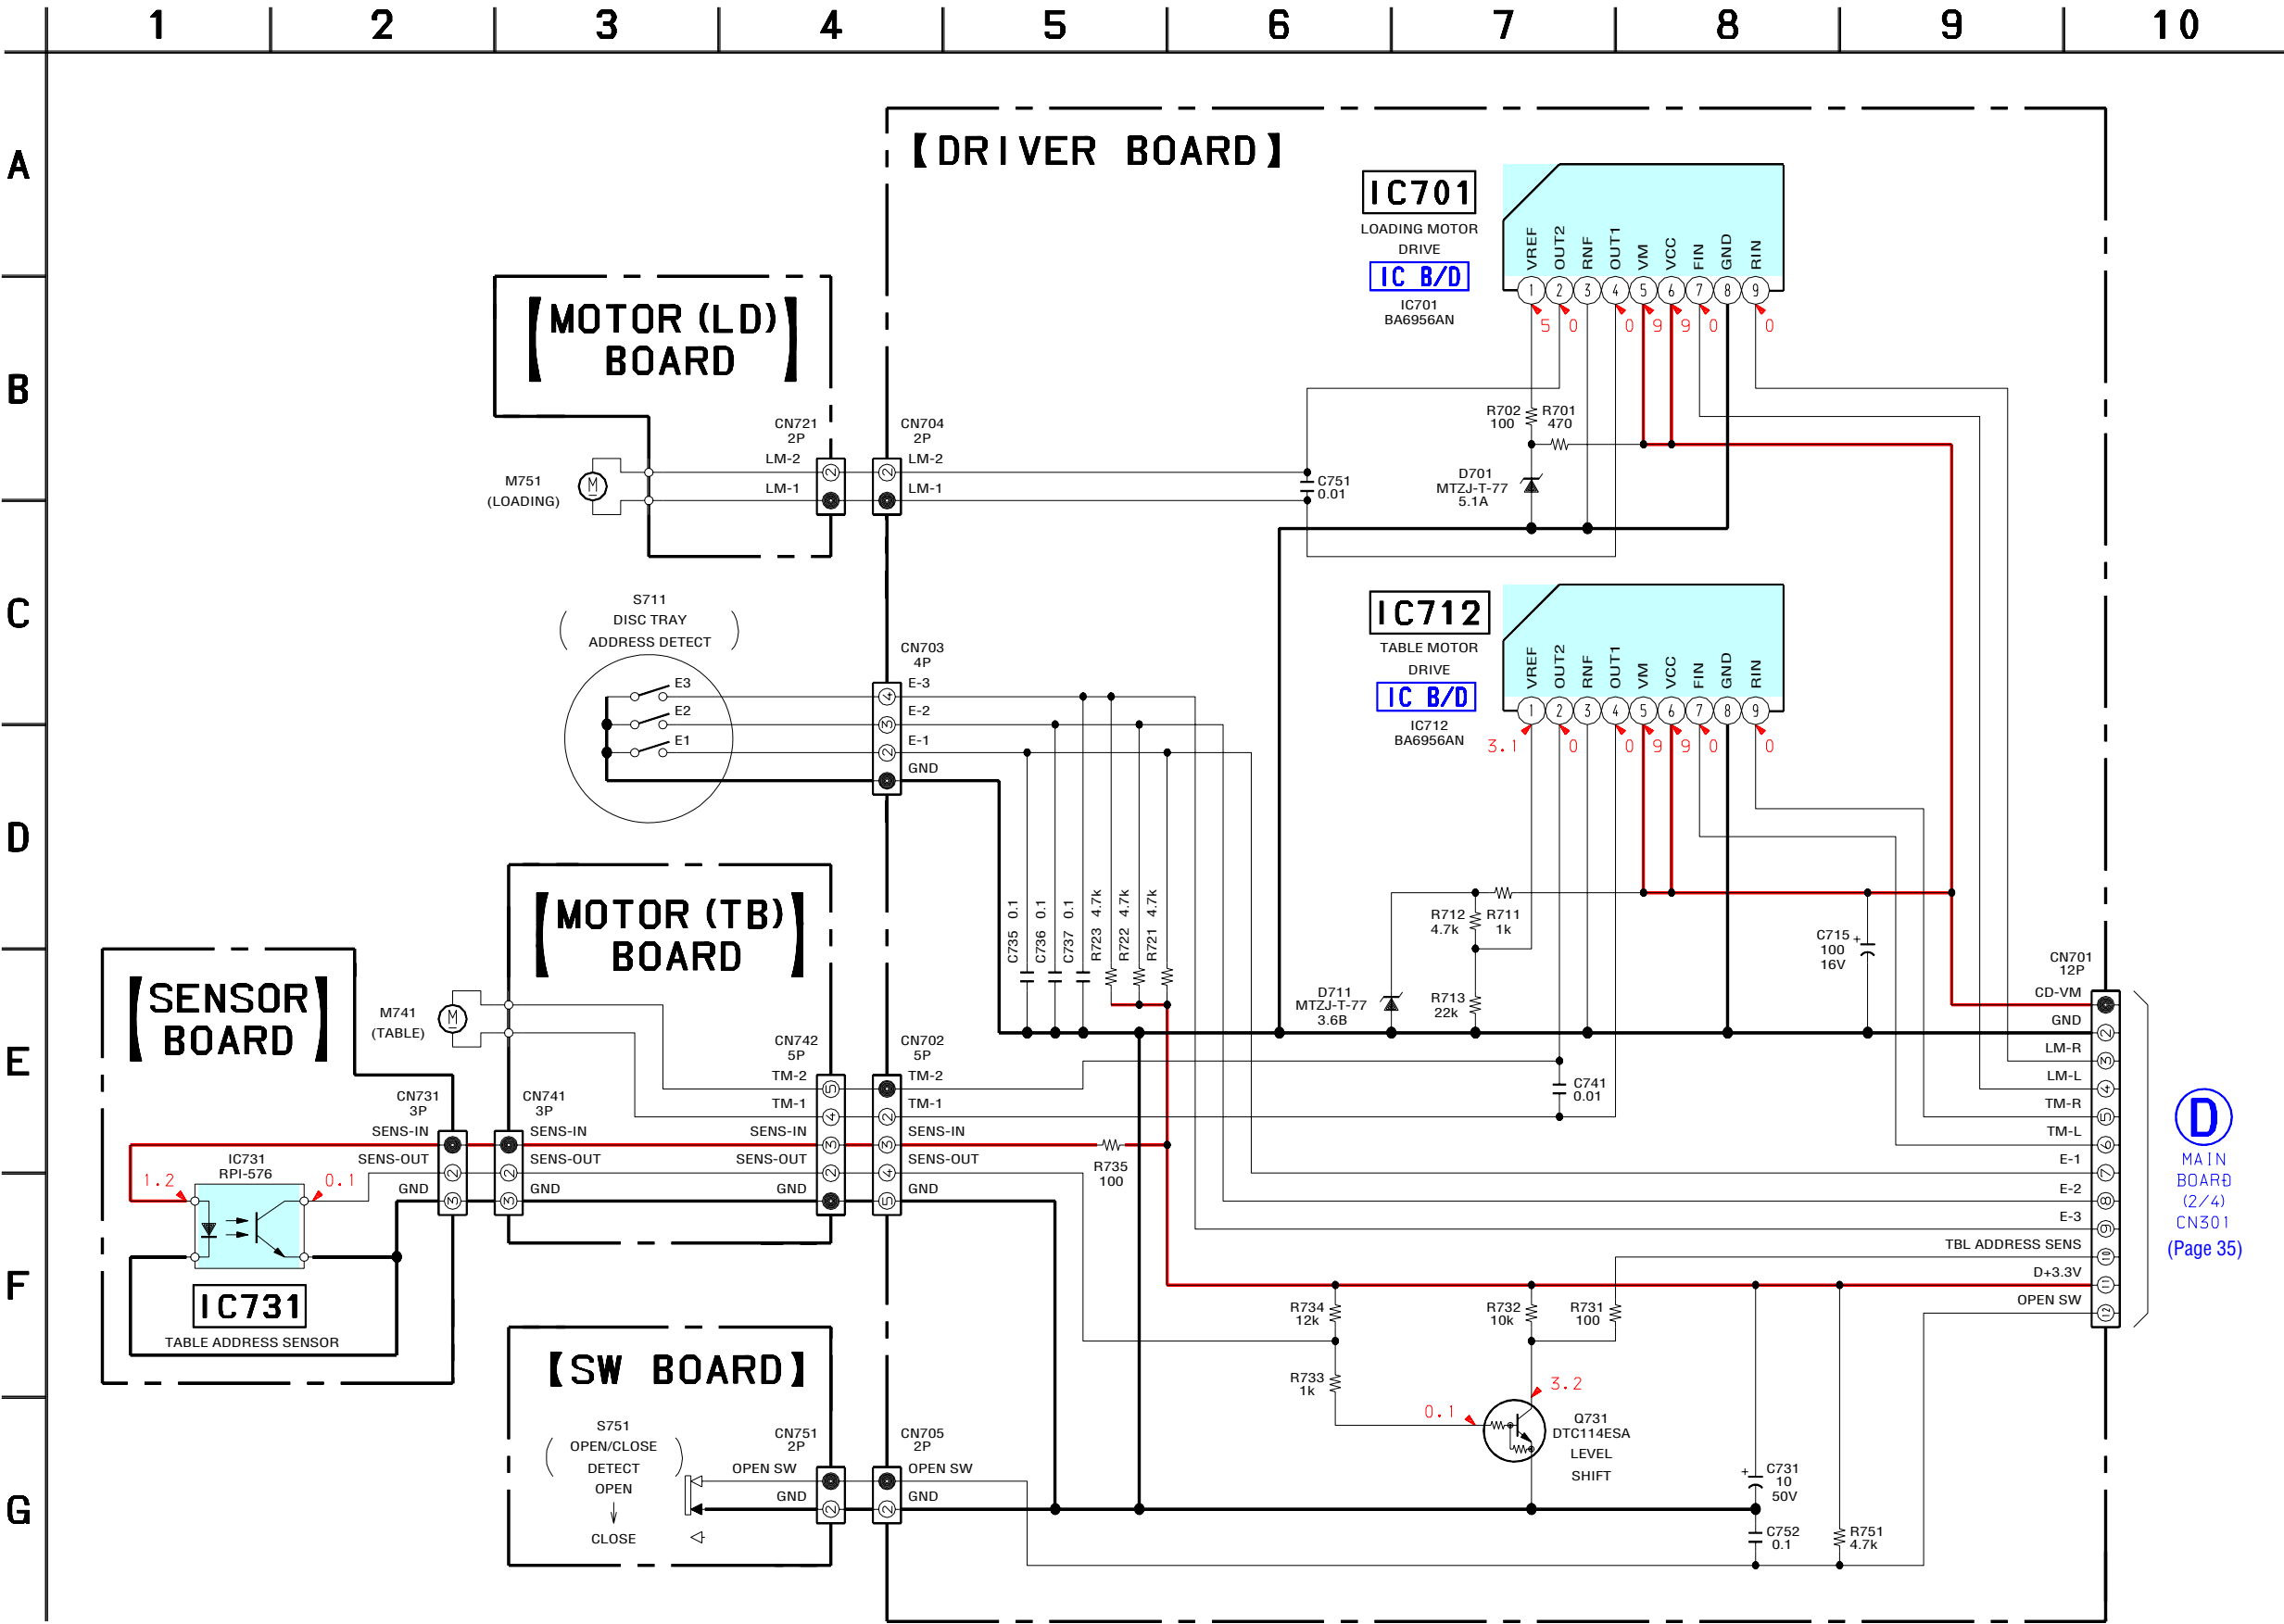

D
MAIN
BOARD
(2/4)
CN301
(Page 35)

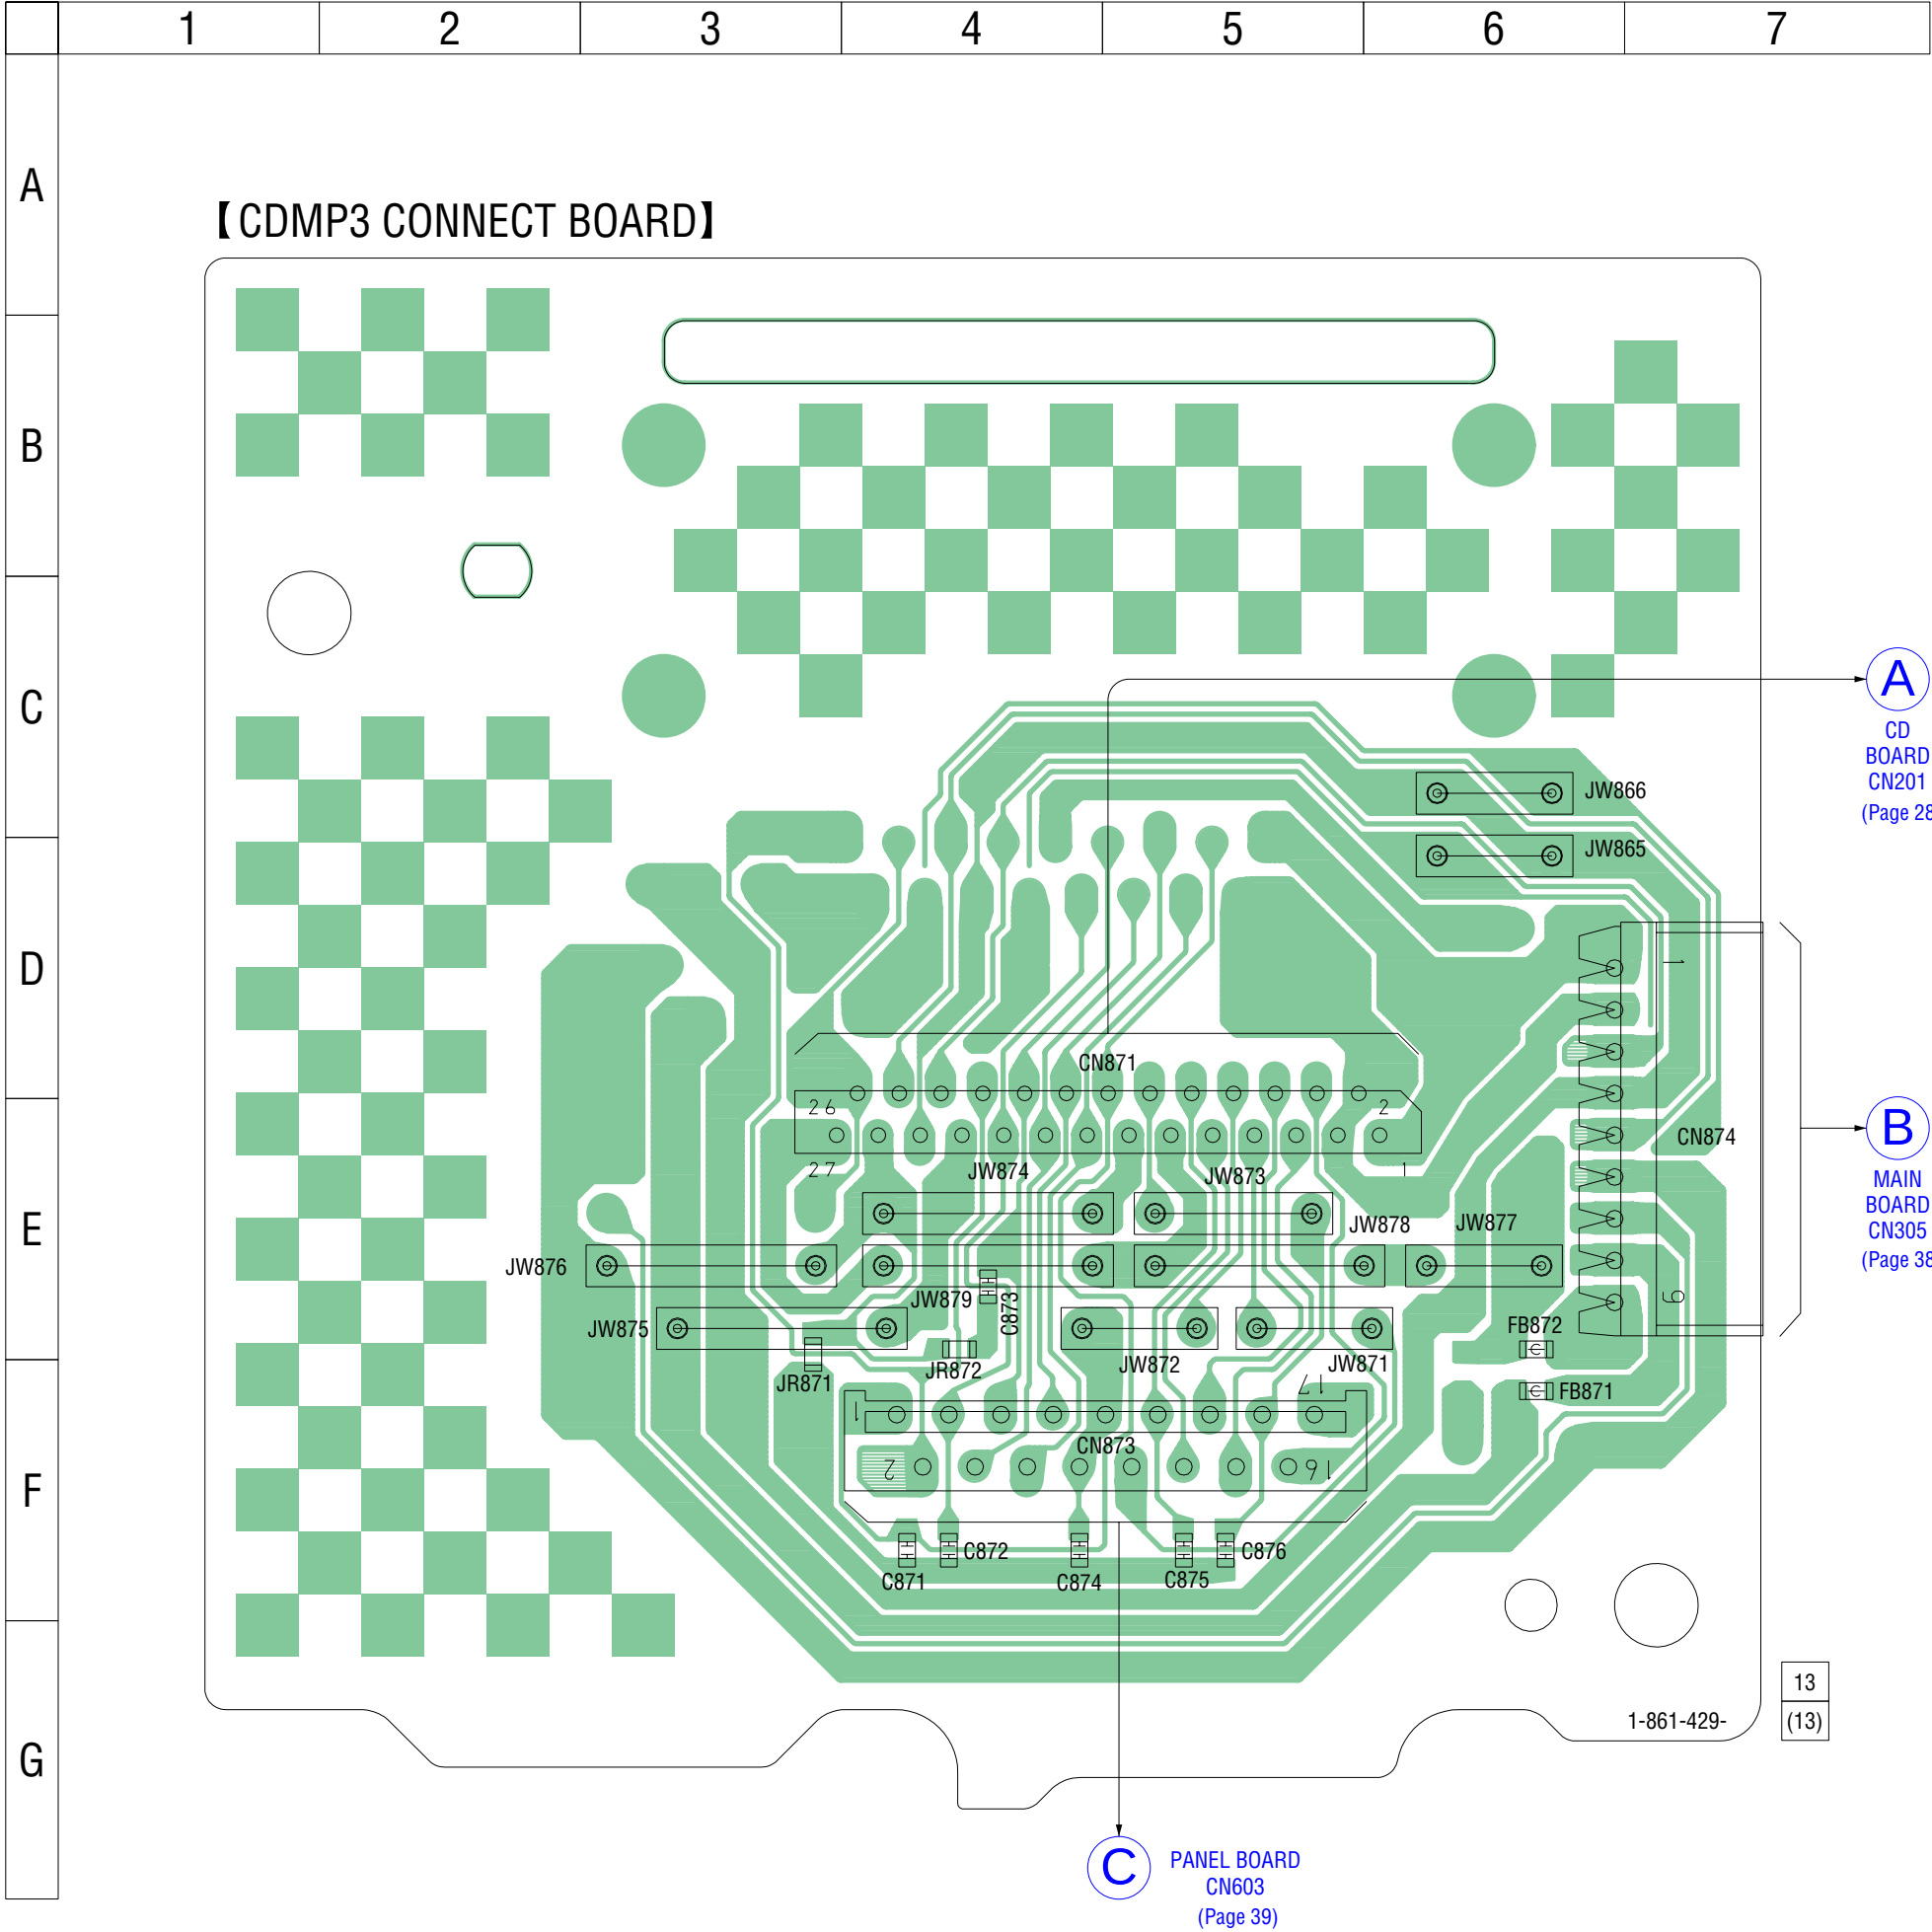

7-9. SCHEMATIC DIAGRAM – CDMP3 CONNECT Board –

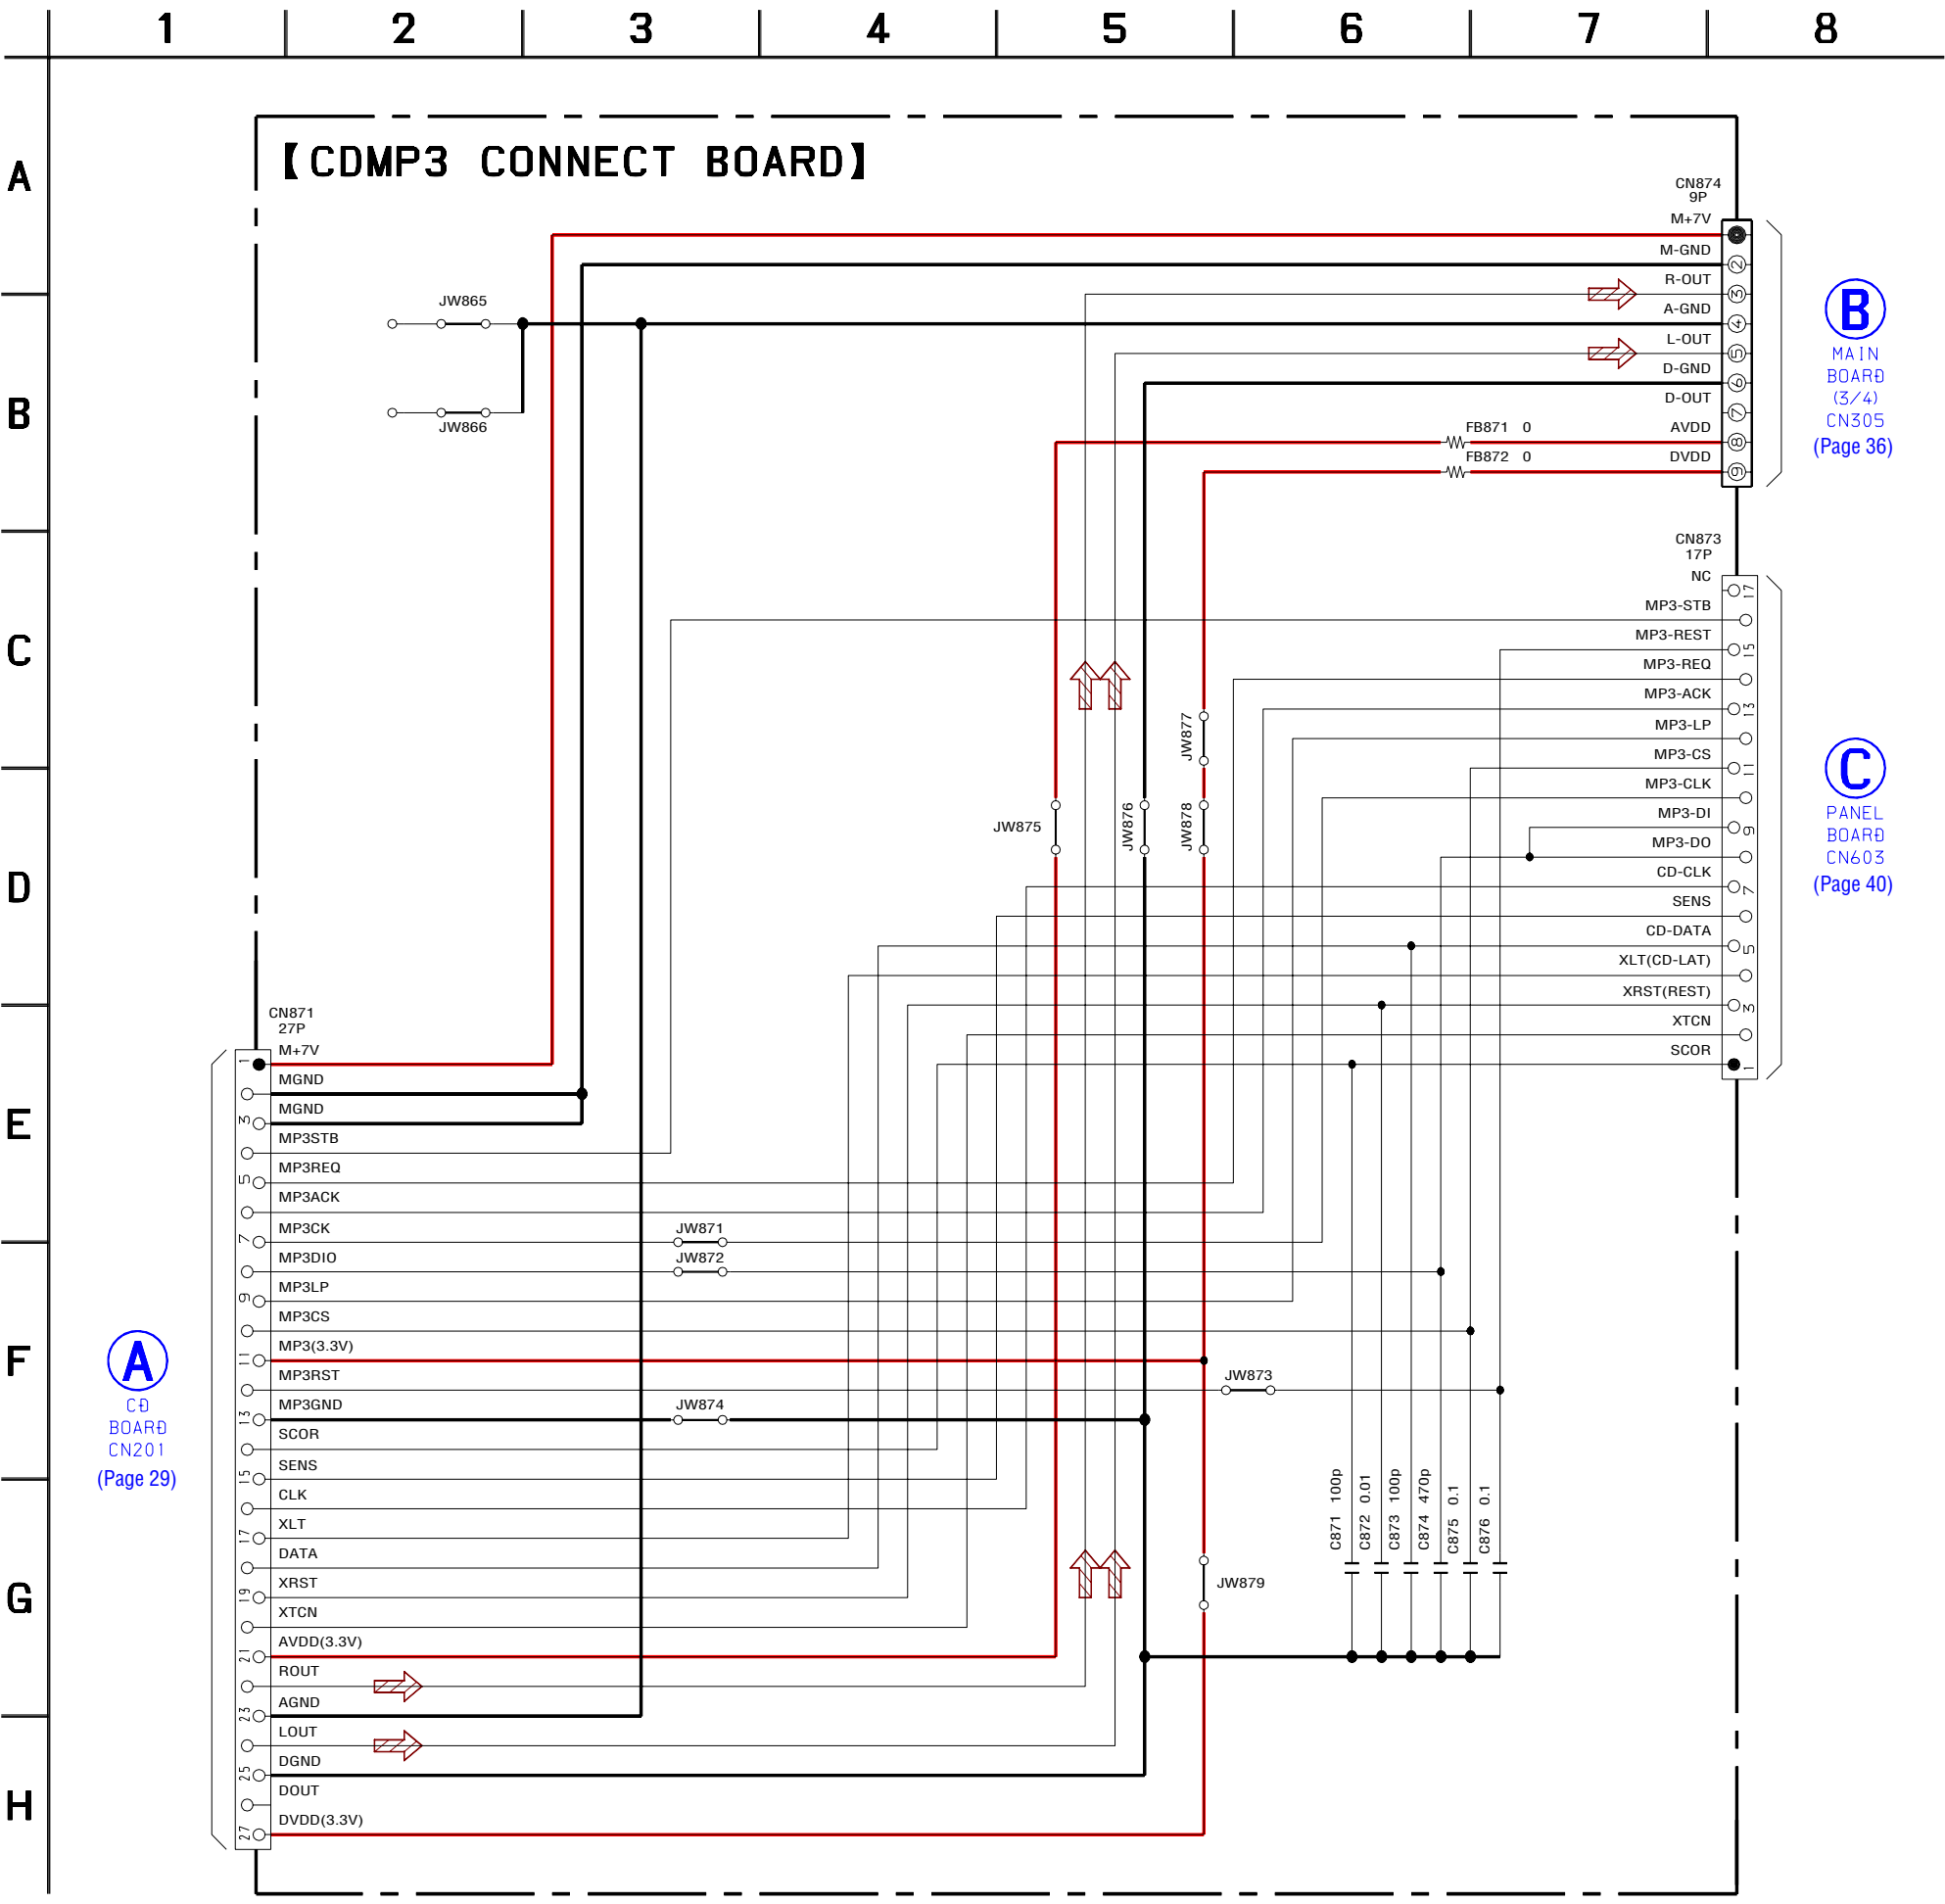


A
CD
BOARD
CN201
(Page 29)

B
MAIN
BOARD
(3/4)
CN305
(Page 36)


C
PANEL
BOARD
CN603
(Page 40)


34 34





7-12. SCHEMATIC DIAGRAM – MAIN Section (3/4) –

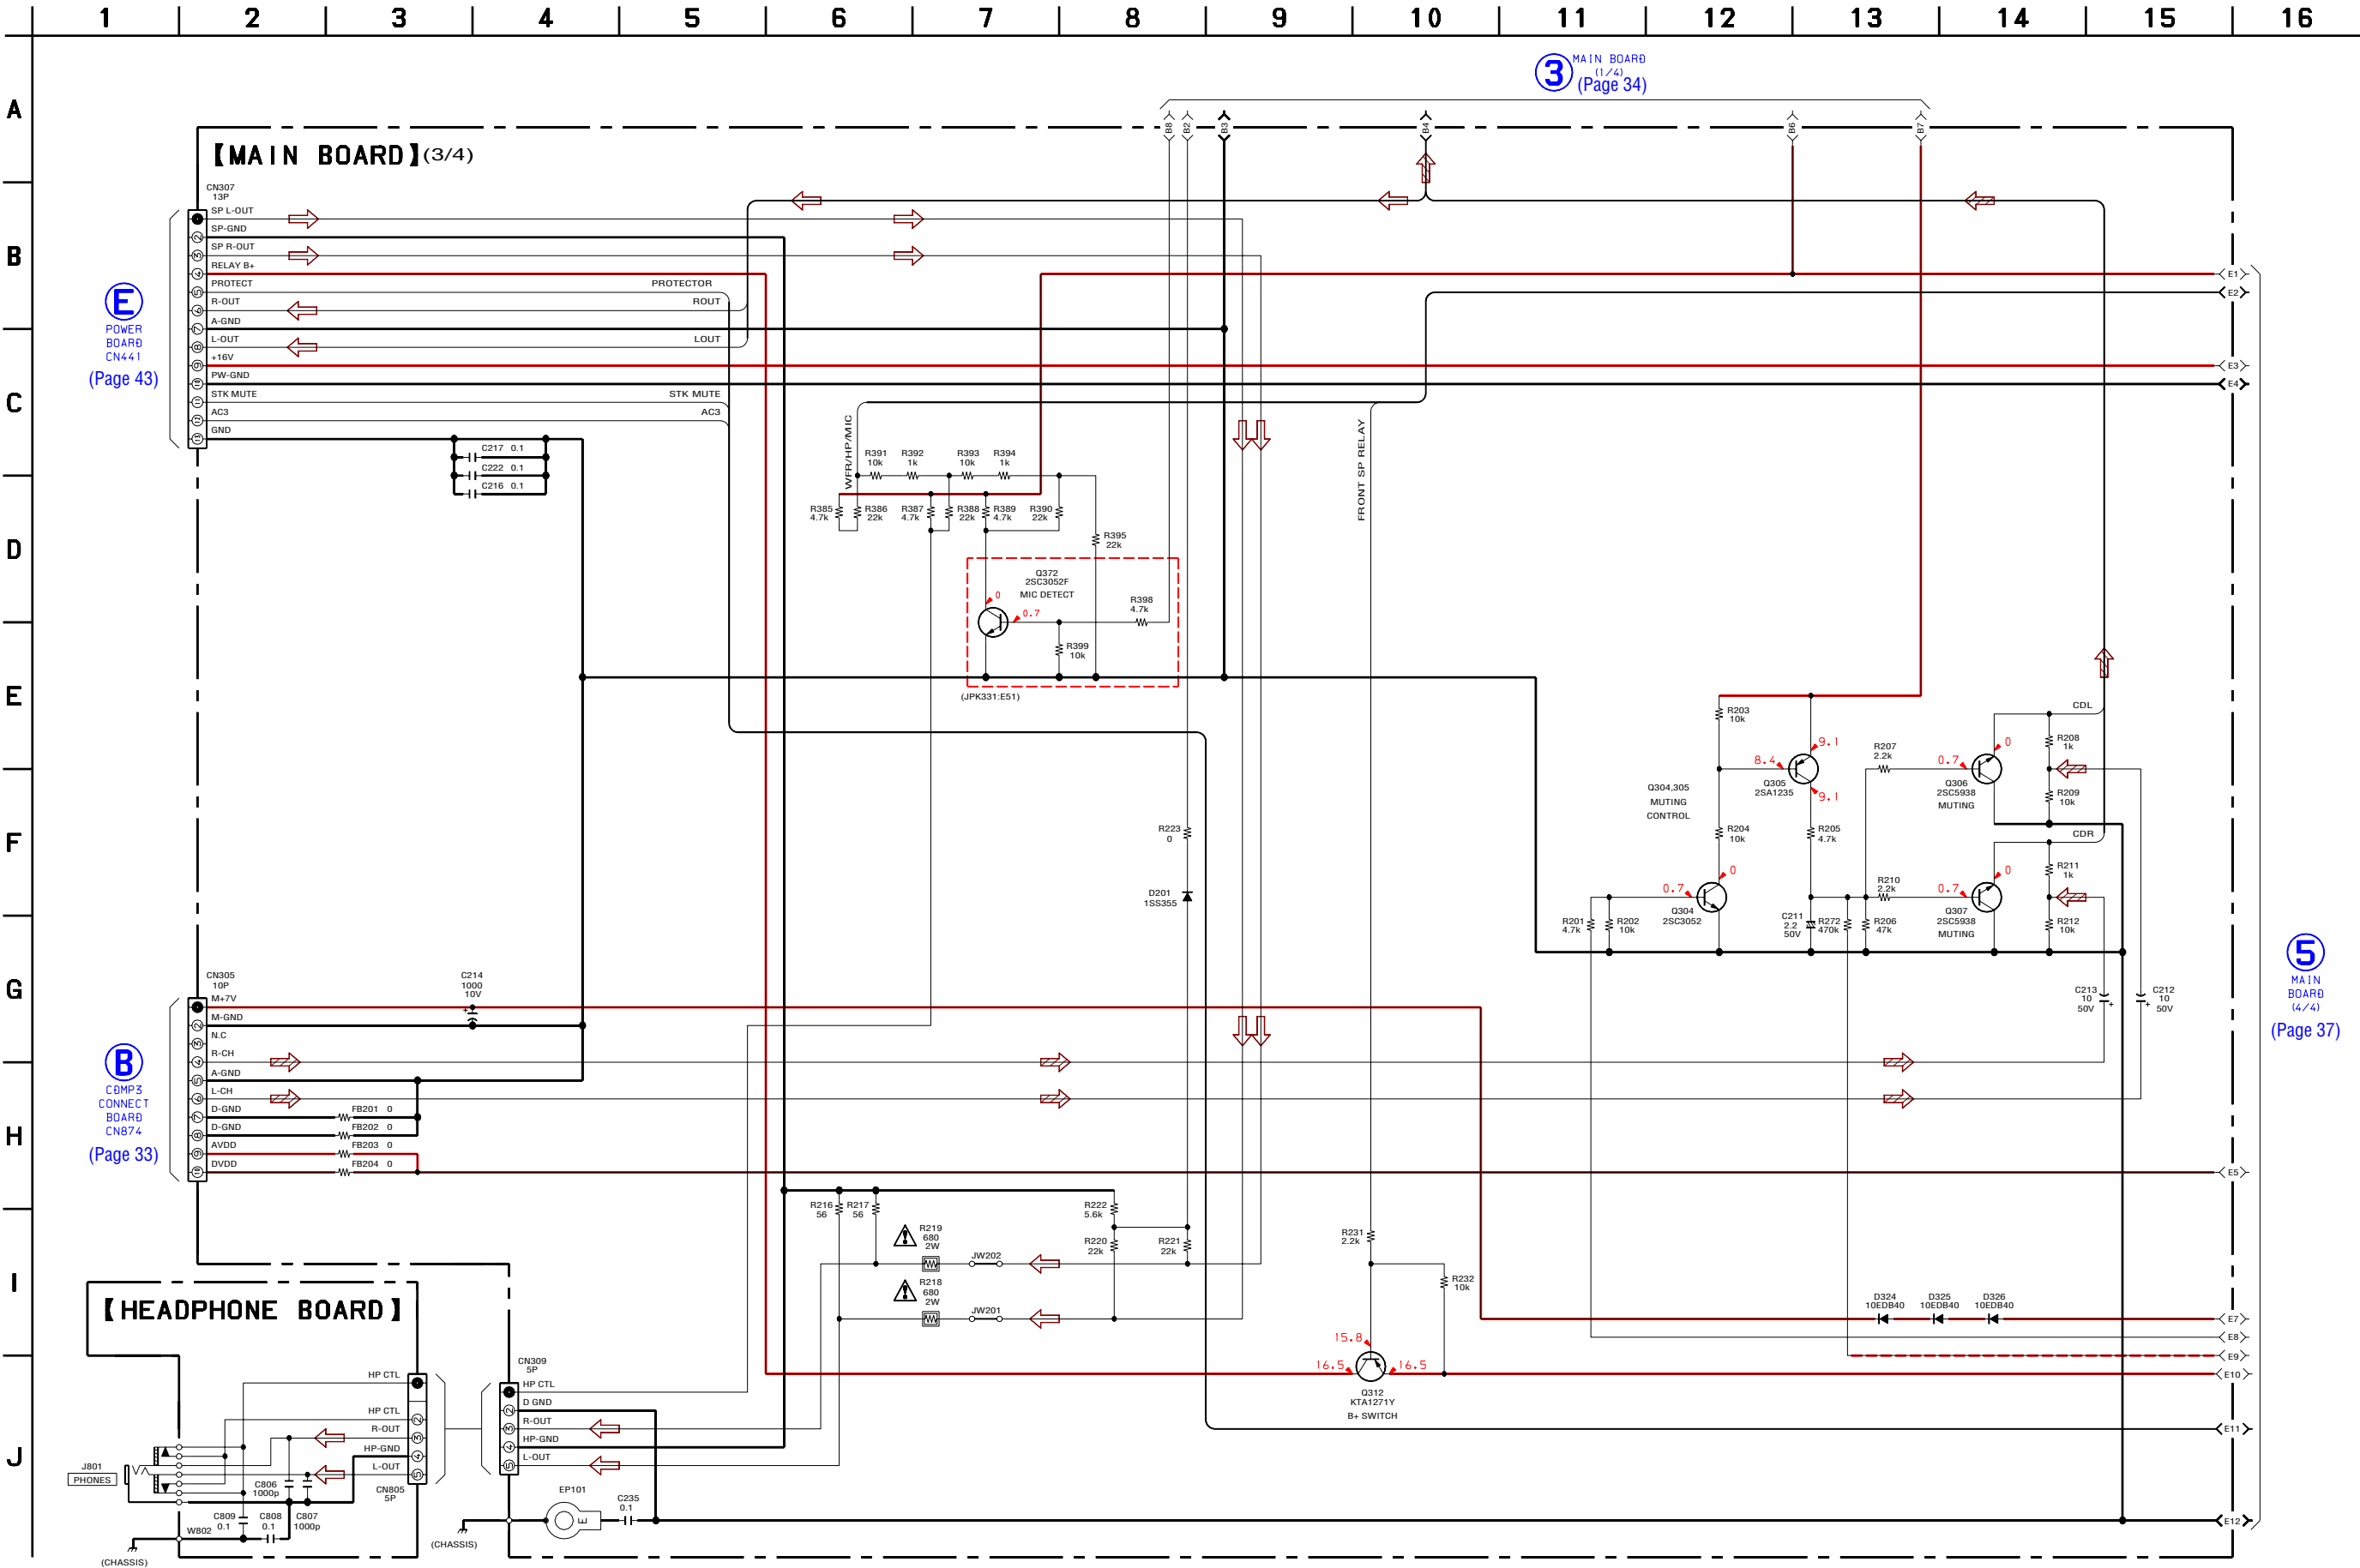





7-14. PRINTED WIRING BOARDS – MAIN Section – • See page 27 for Circuit Boards Location.

4 : Uses unleaded solder.


- **Semiconductor Location**

Ref. No.	Location
D201	H-9
D211	F-3
D212	G-5
D213	G-4
D214	G-4
D215	G-4
D301	H-7
D302	H-7
D303	H-7
D304	H-7
D305	H-6
D306	H-7
D307	H-6
D308	H-7
D309	H-6
D310	H-6
D311	H-6
D312	H-6
D313	F-7
D316	G-5
D321	H-5
D322	H-4
D324	E-3
D325	E-3
D326	E-3
IC101	D-5
IC102	D-8
IC201	E-4
IC301	F-7
IC302	E-8
IC303	F-7
IC304	F-6
IC371	B-4
Q101	G-8
Q102	G-8
Q103	G-9
Q104	G-9
Q105	E-10
Q106	D-7
Q107	D-7
Q304	D-4
Q305	D-4
Q306	D-4
Q307	D-4
Q308	A-3
Q309	B-3
Q312	H-10
Q313	B-2
Q314	G-5
Q315	G-5
Q321	E-6
Q322	E-4
Q323	E-4
Q324	F-4
Q327	F-4
Q351	G-4
Q352	G-3
Q361	G-6
Q362	G-5
Q372	H-4

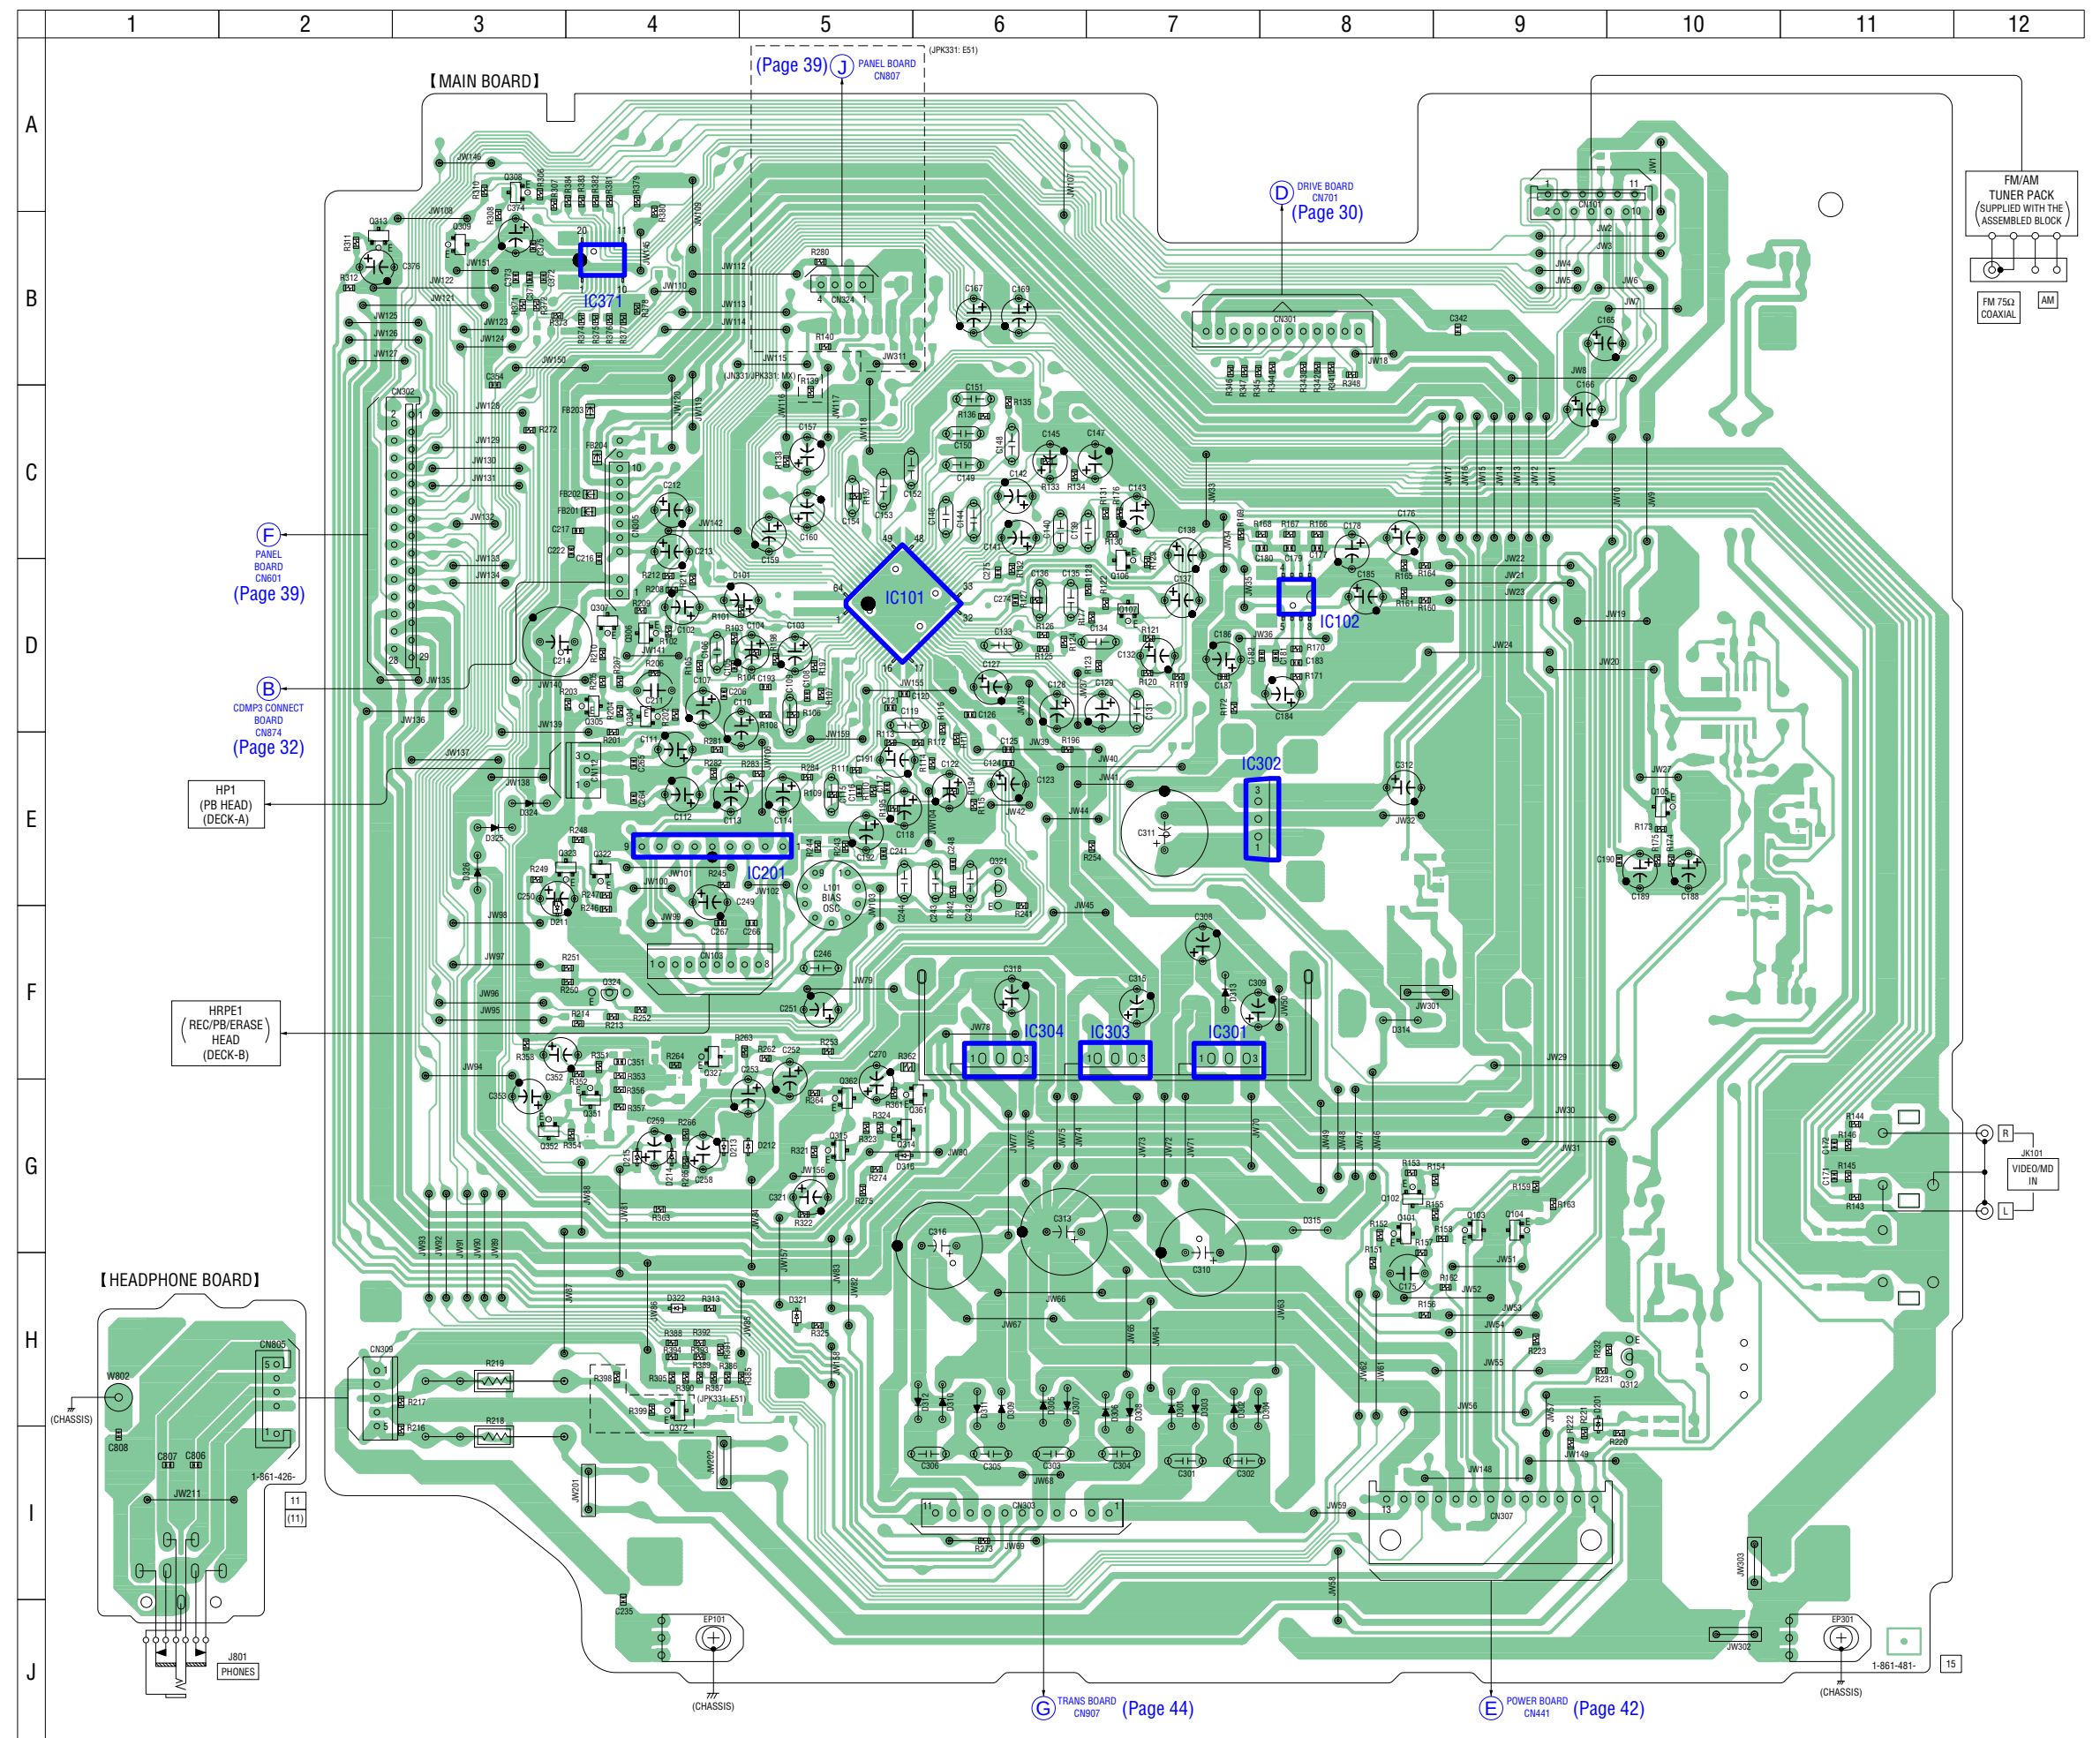

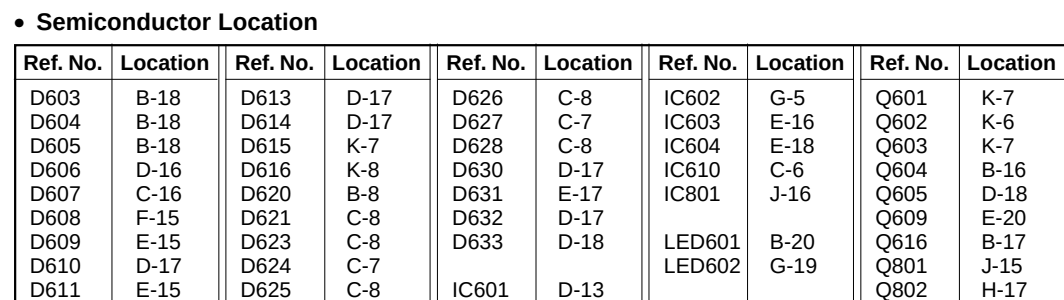

7-16. SCHEMATIC DIAGRAM – PANEL Section (1/2) – • See page 46 for Waveforms.

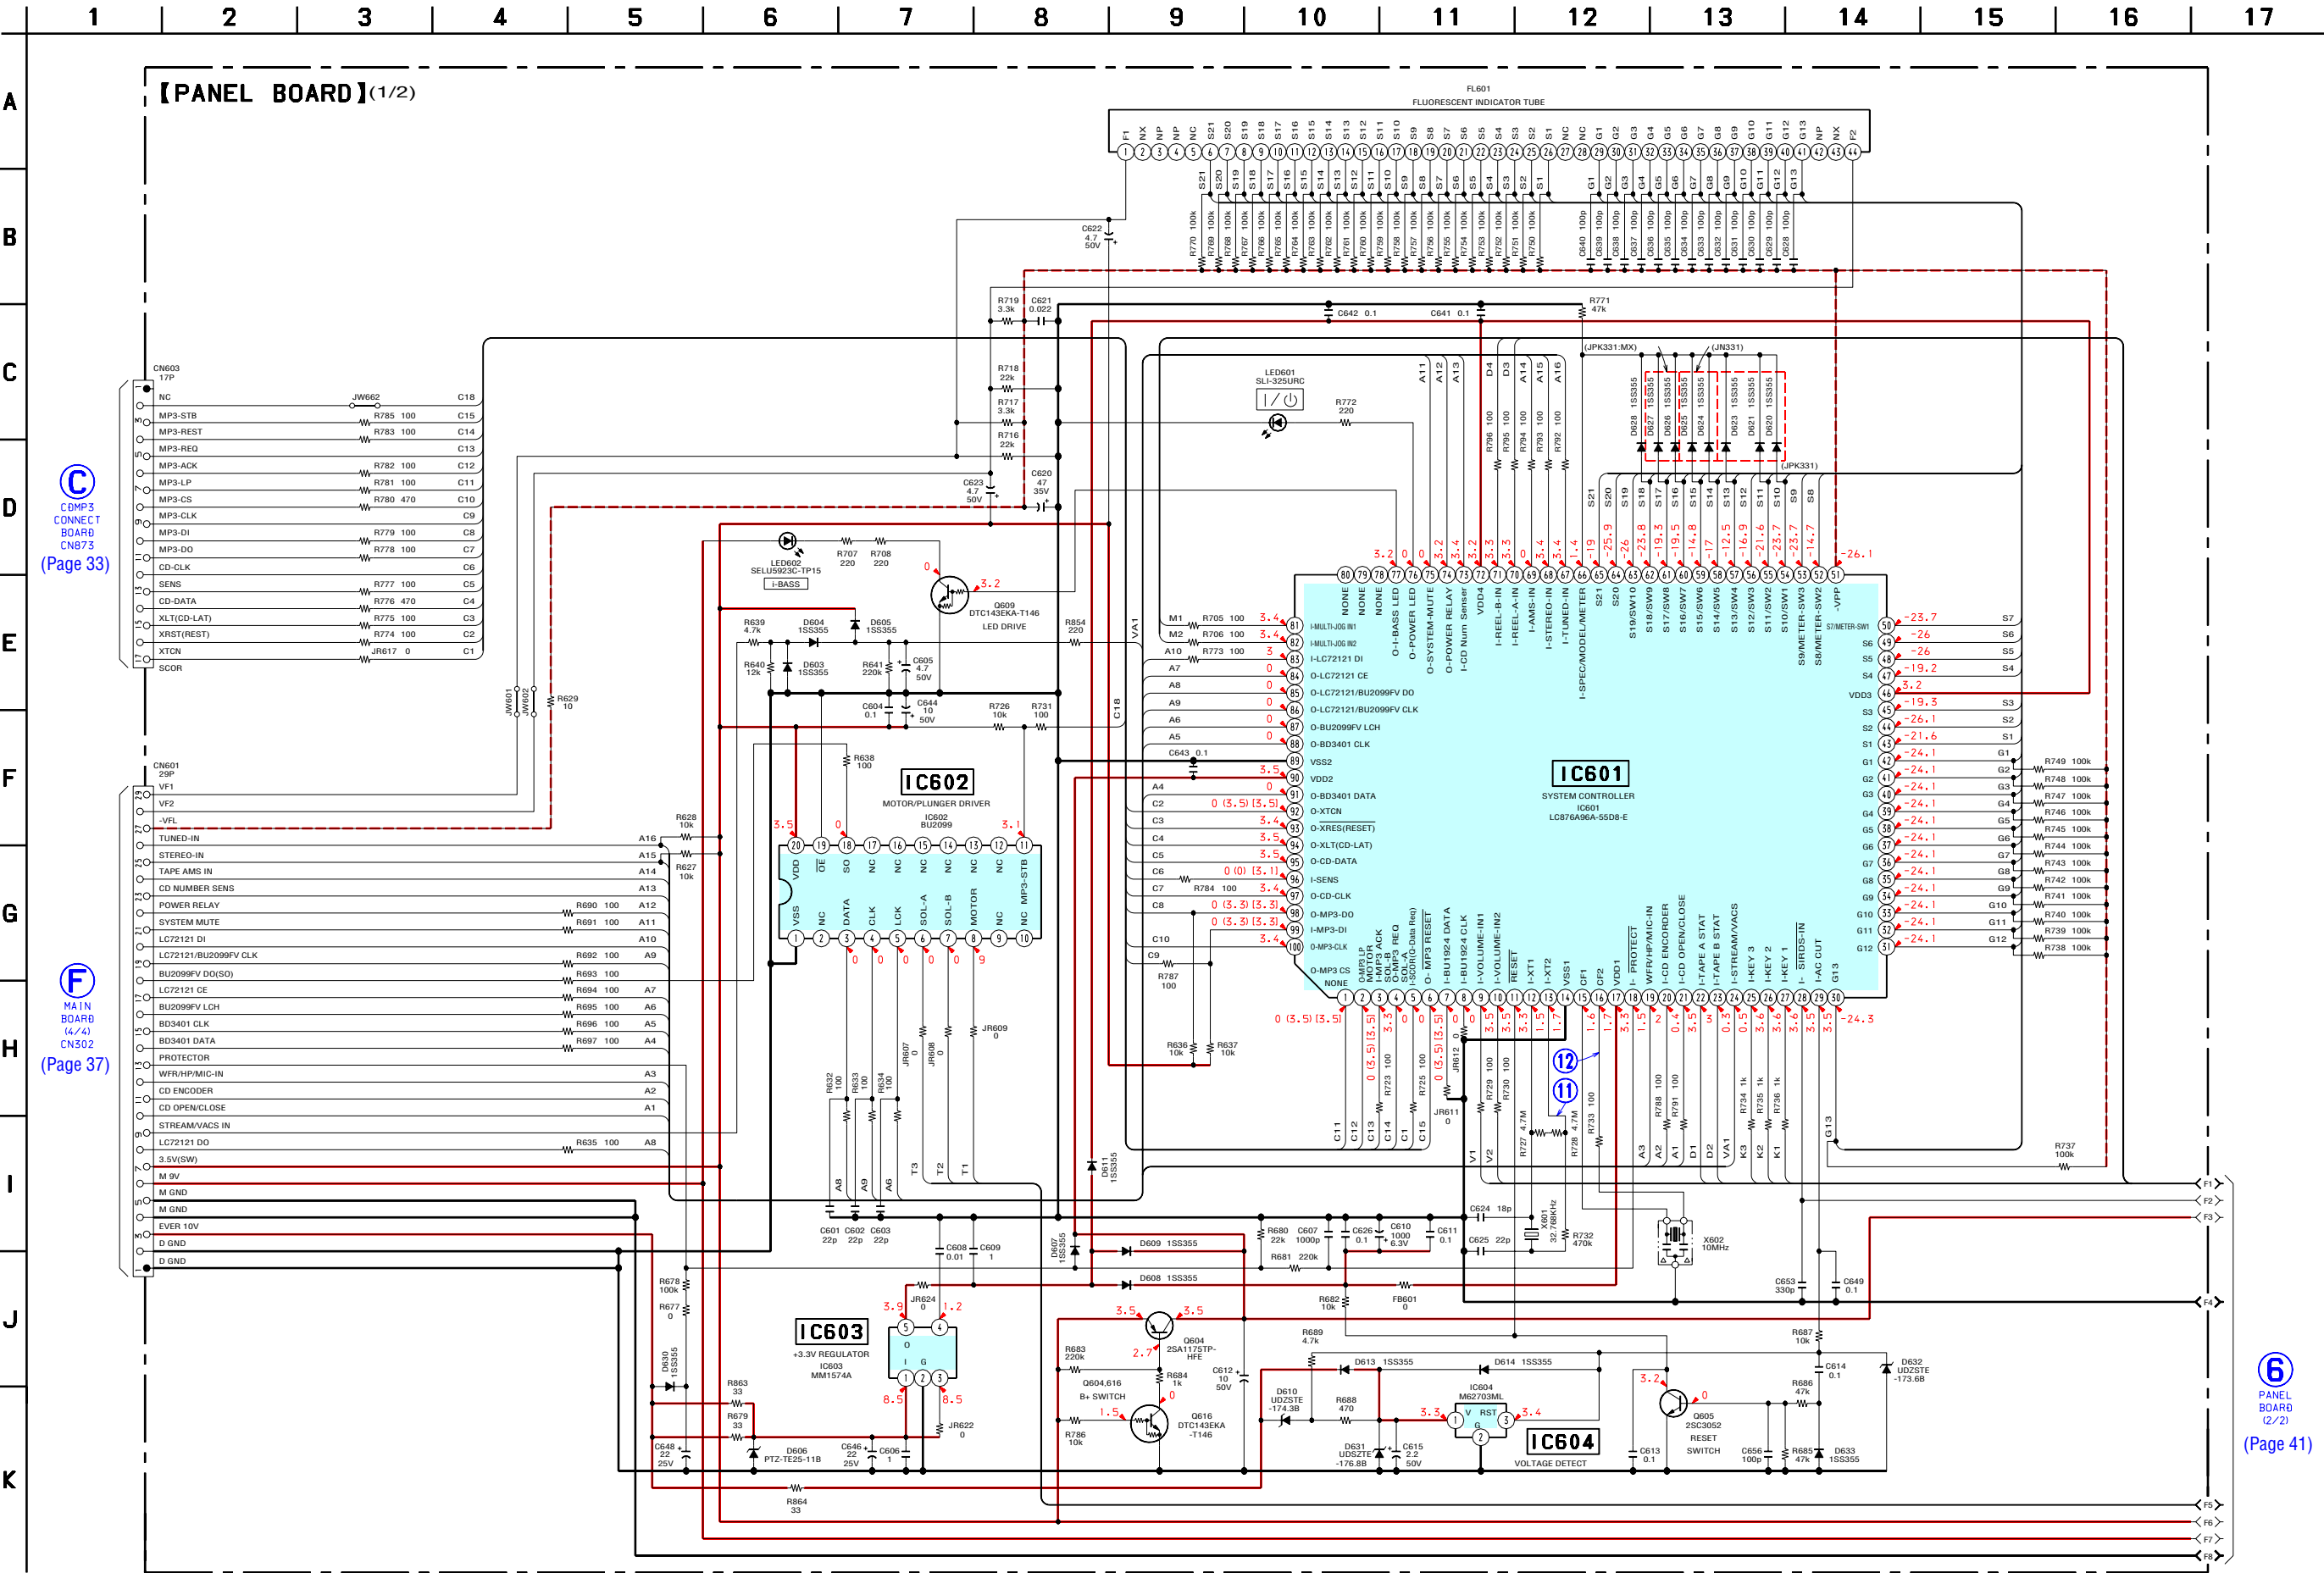


41 41




7-18. PRINTED WIRING BOARD – POWER AMP Section – • See page 27 for Circuit Boards Location.  : Uses unleaded solder.


• Semiconductor Location

Ref. No.	Location
D401	E-3
D441	C-6
D442	C-6
D443	C-1
D481	C-5
D482	C-4
D483	C-8
IC441	B-6
Q441	C-6
Q442	C-6
Q481	C-8
Q482	C-8
Q483	C-8
Q484	C-8
Q485	B-4
Q486	B-4
Q487	B-4
Q488	C-5
Q489	C-8

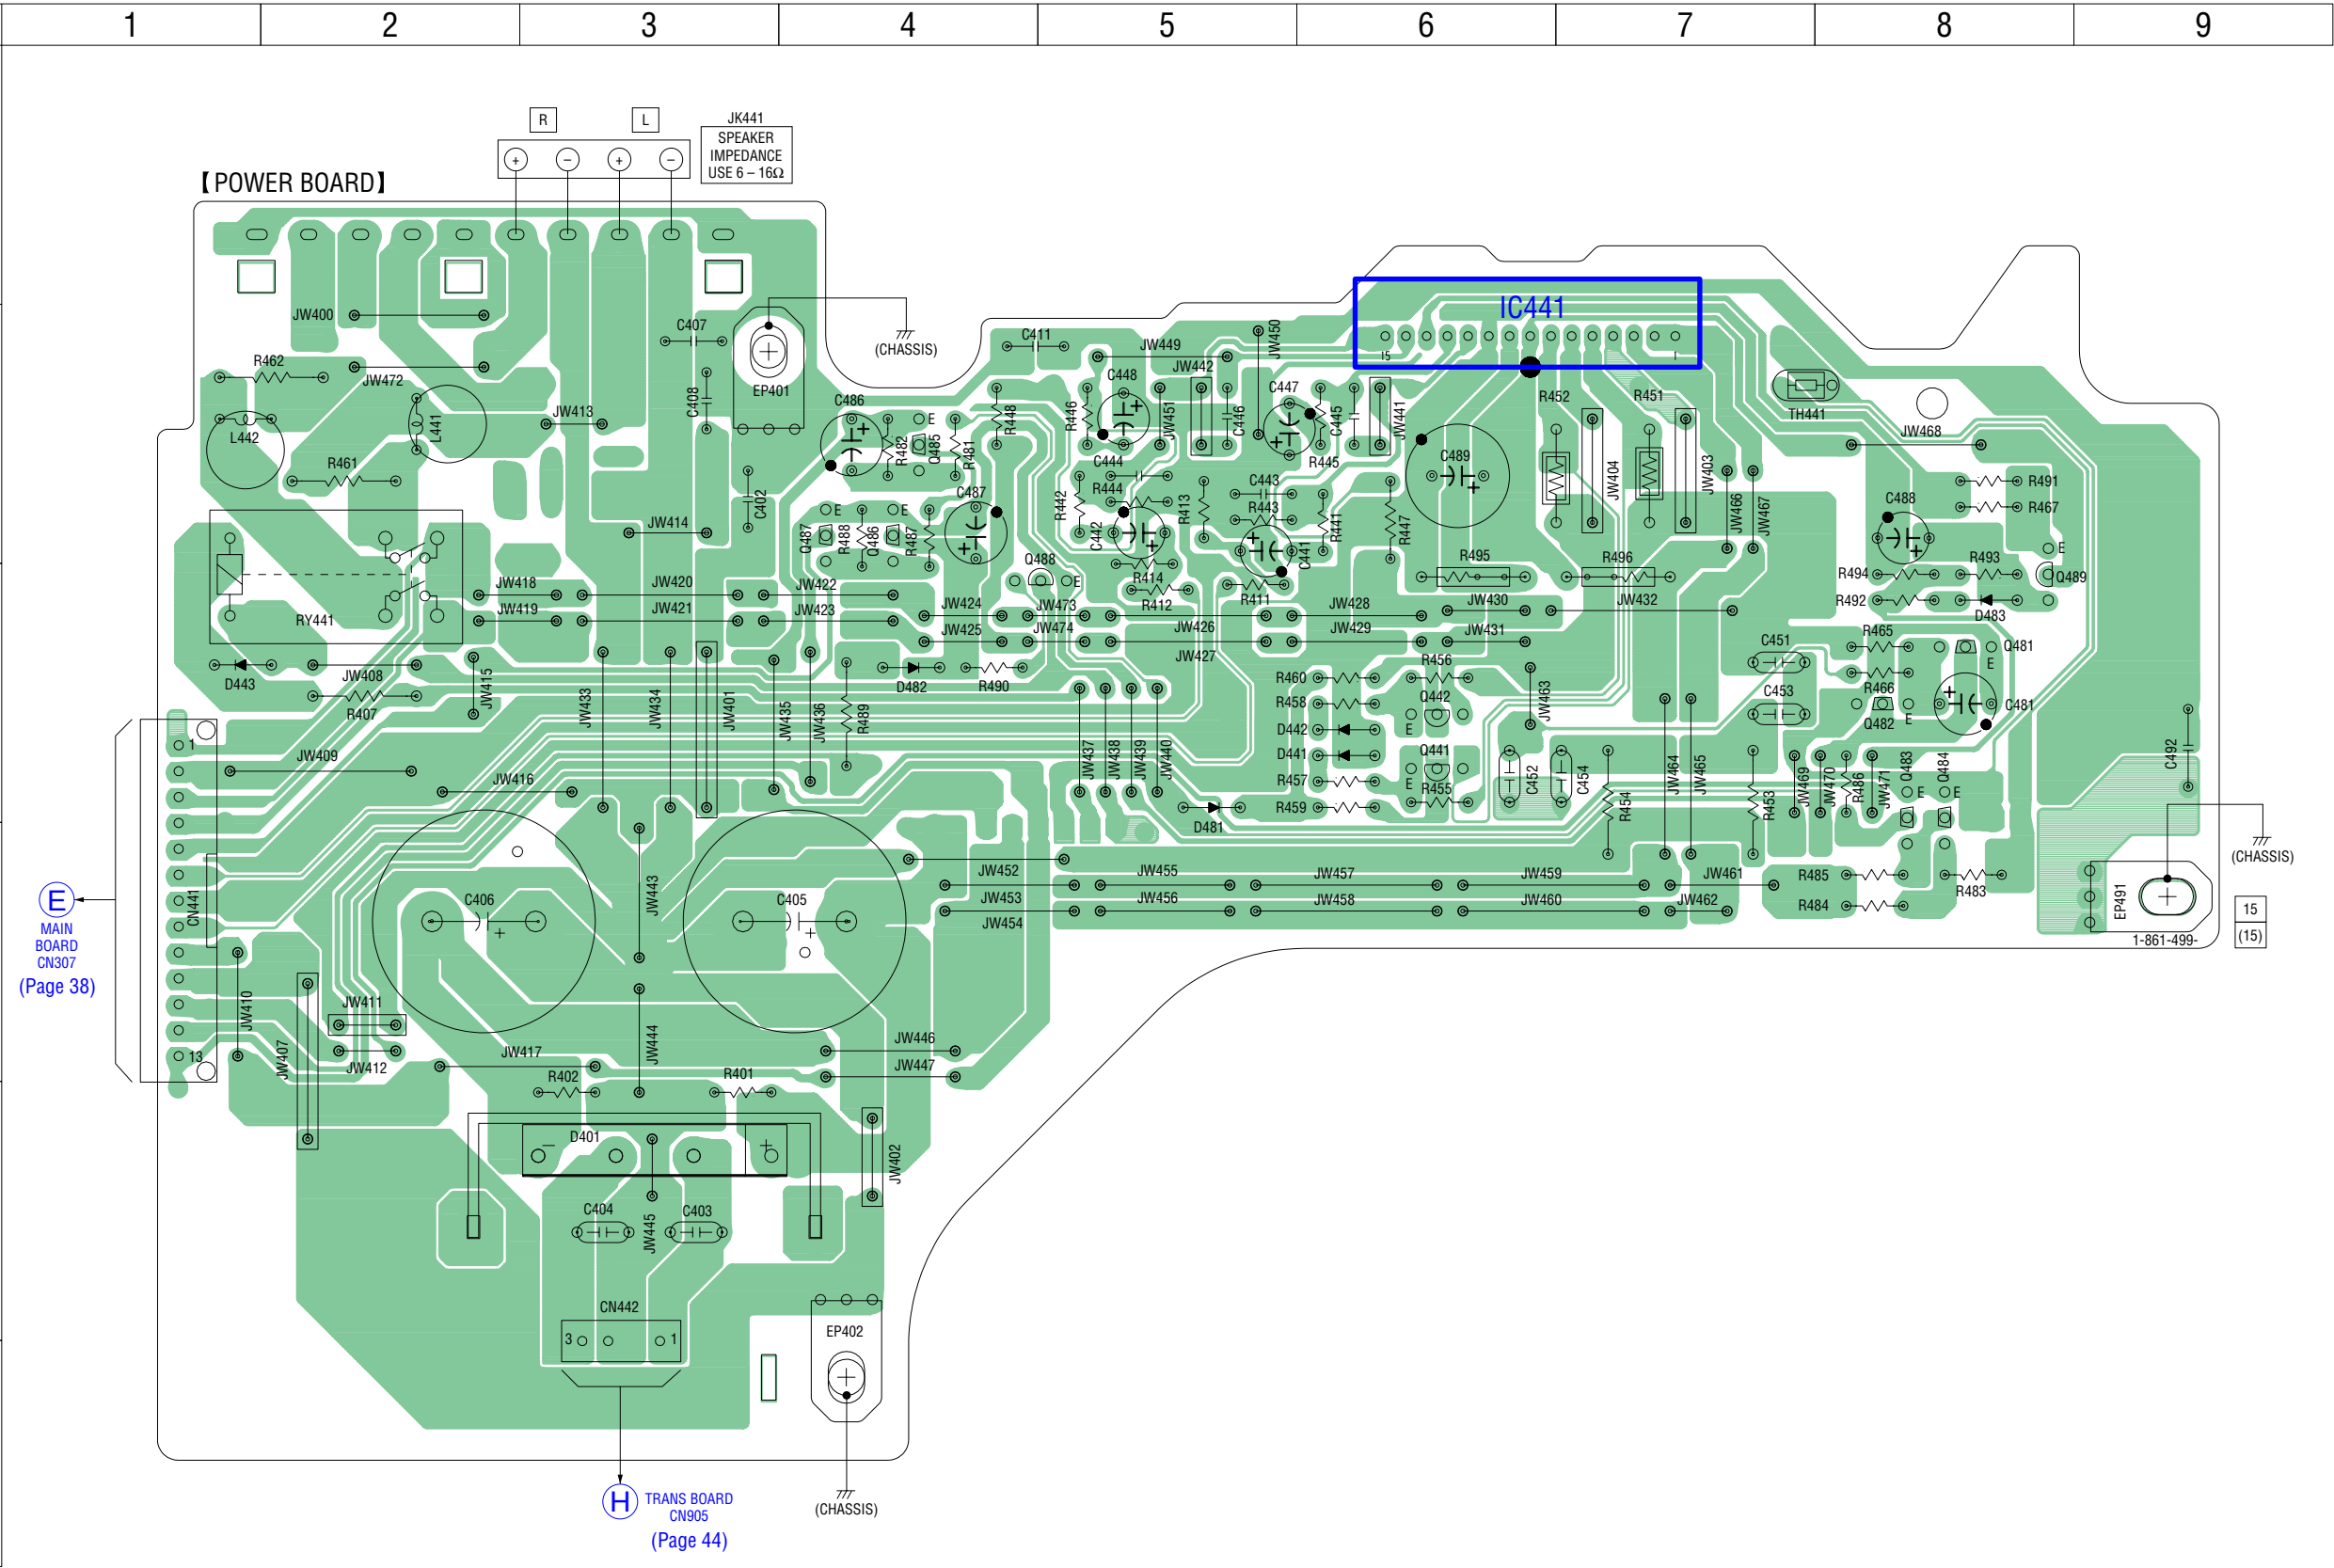


7-19. SCHEMATIC DIAGRAM – POWER AMP Section –

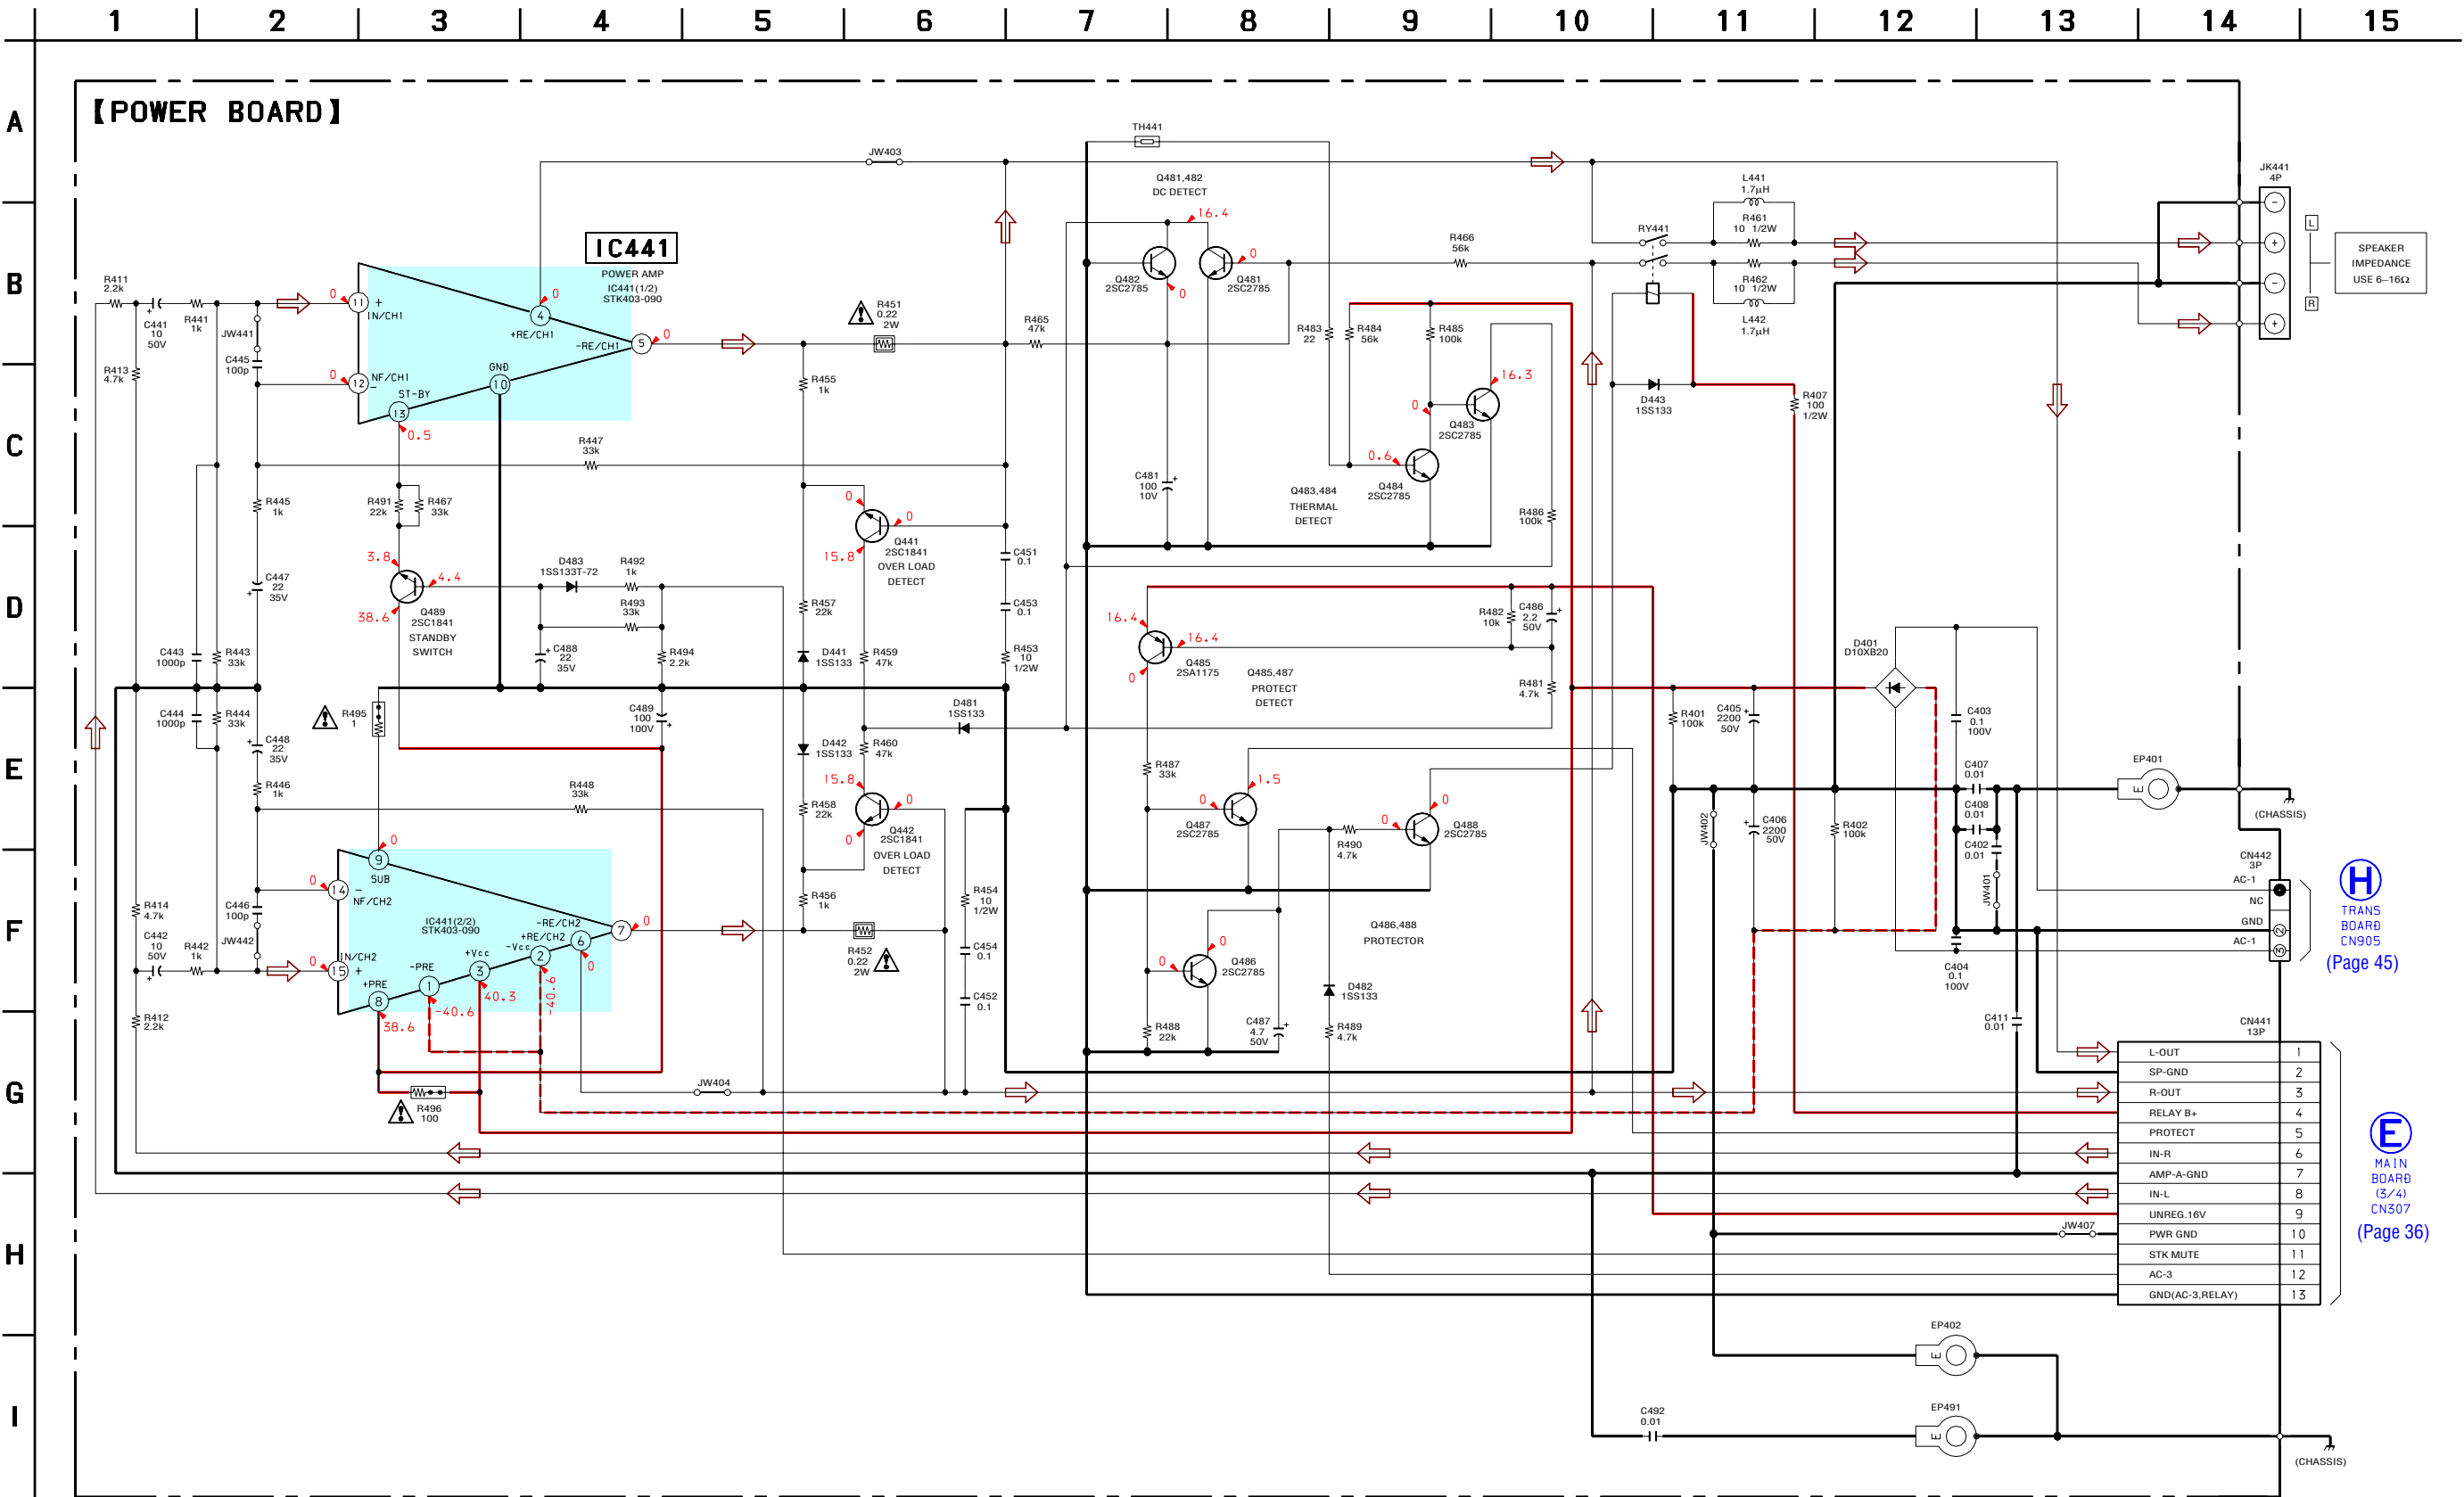

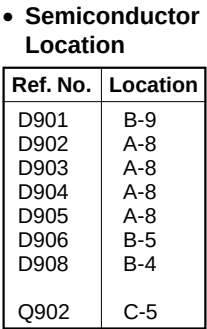


7-21. SCHEMATIC DIAGRAM –TRANS Section –

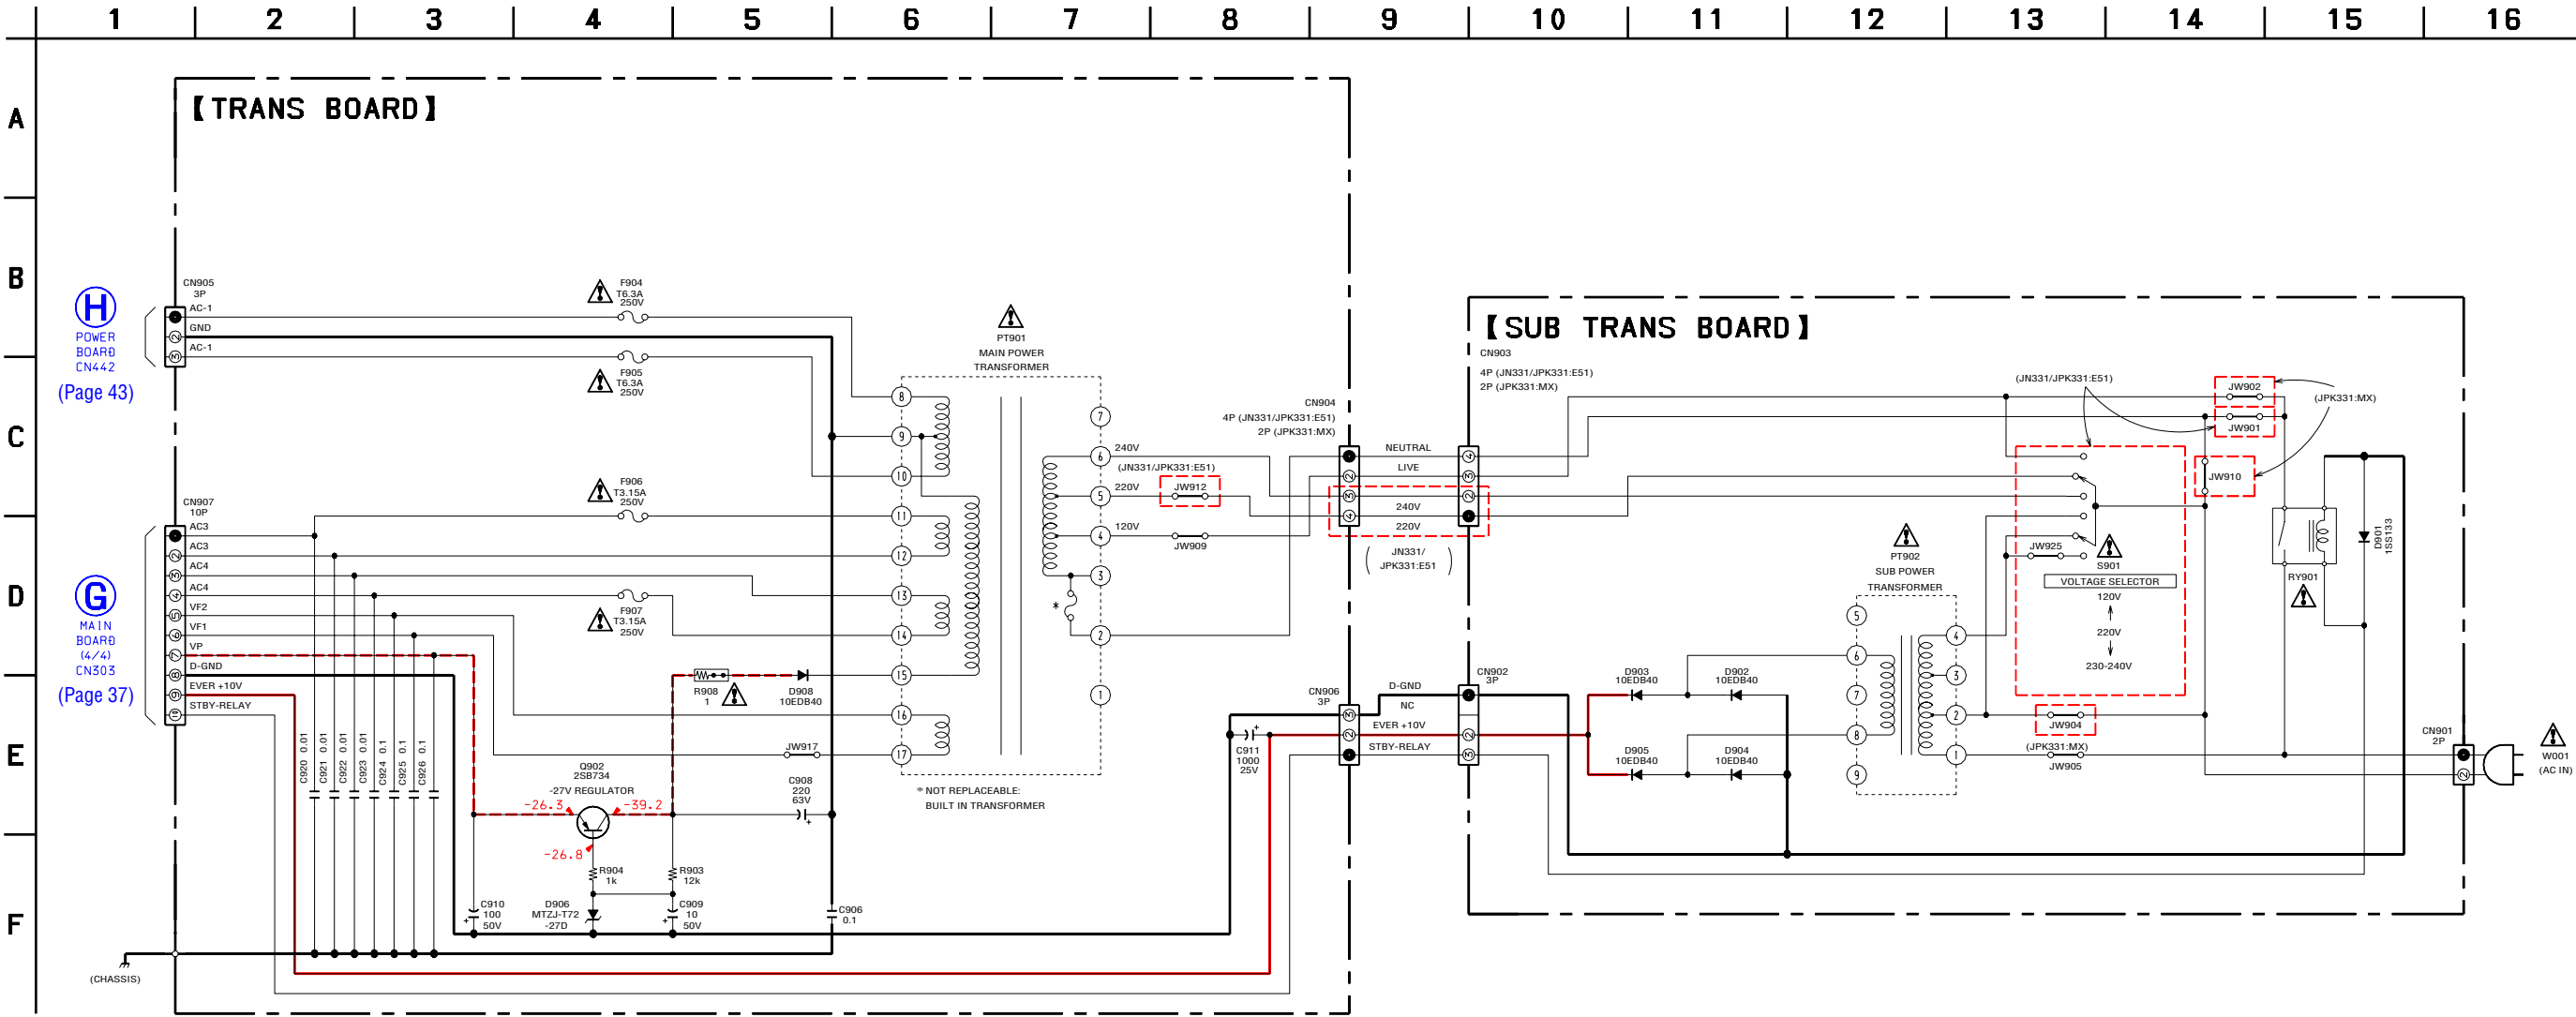


• Waveforms


– CD Board –

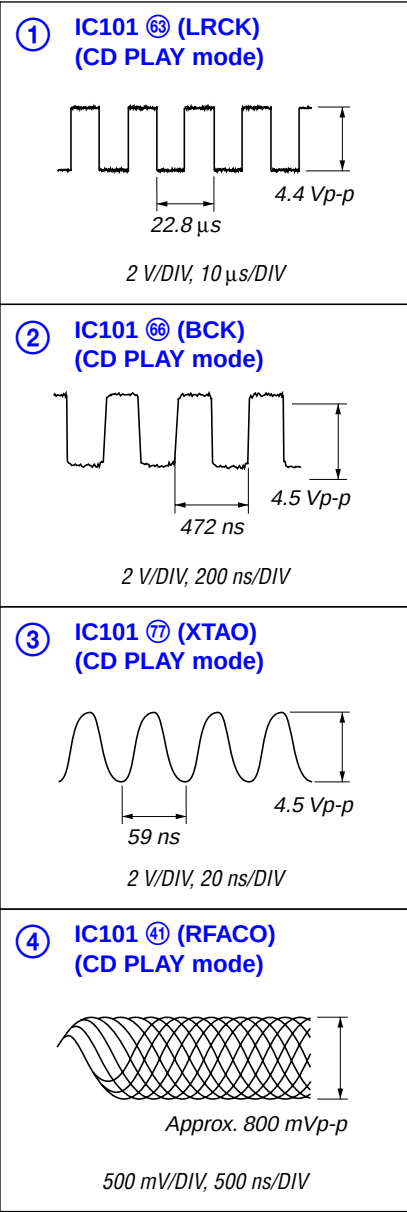

– MAIN Board –

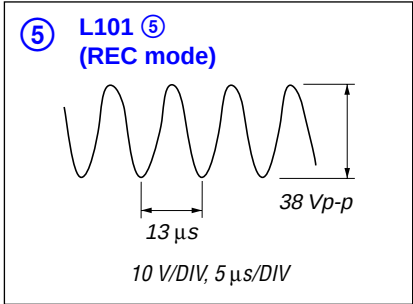


– PANEL Board –

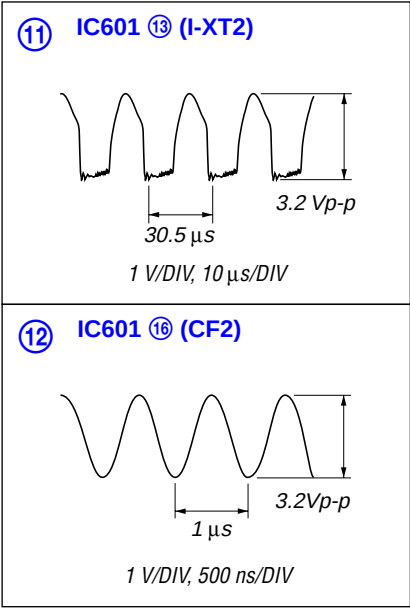


• IC Block Diagrams


– CD Board –

IC101 CXD3059AR

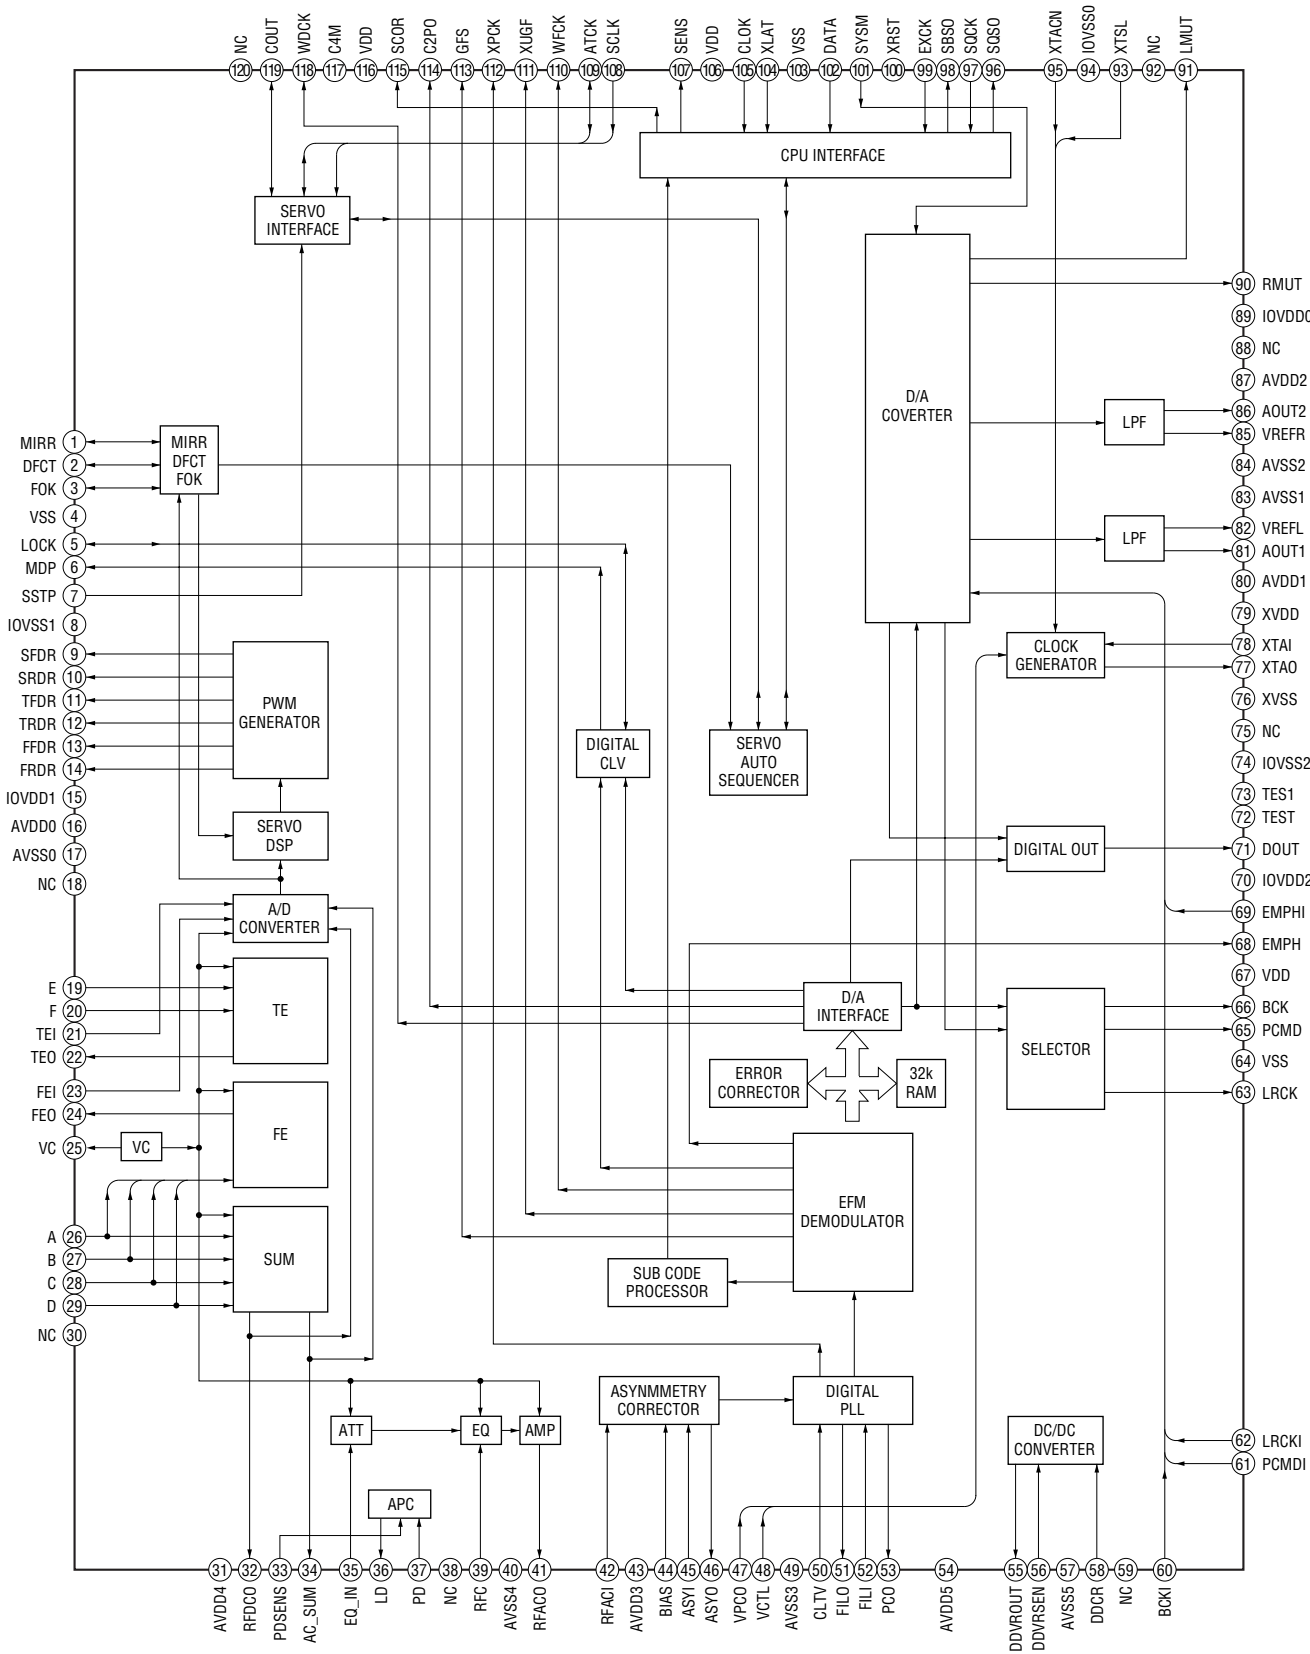


IC251 BA5947FM-E2

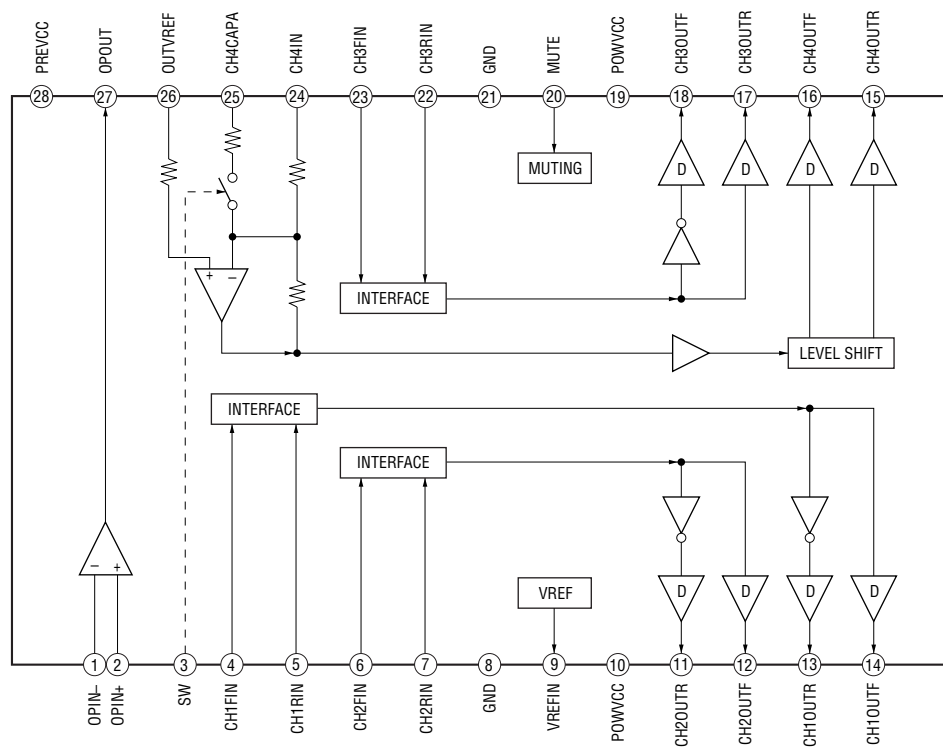

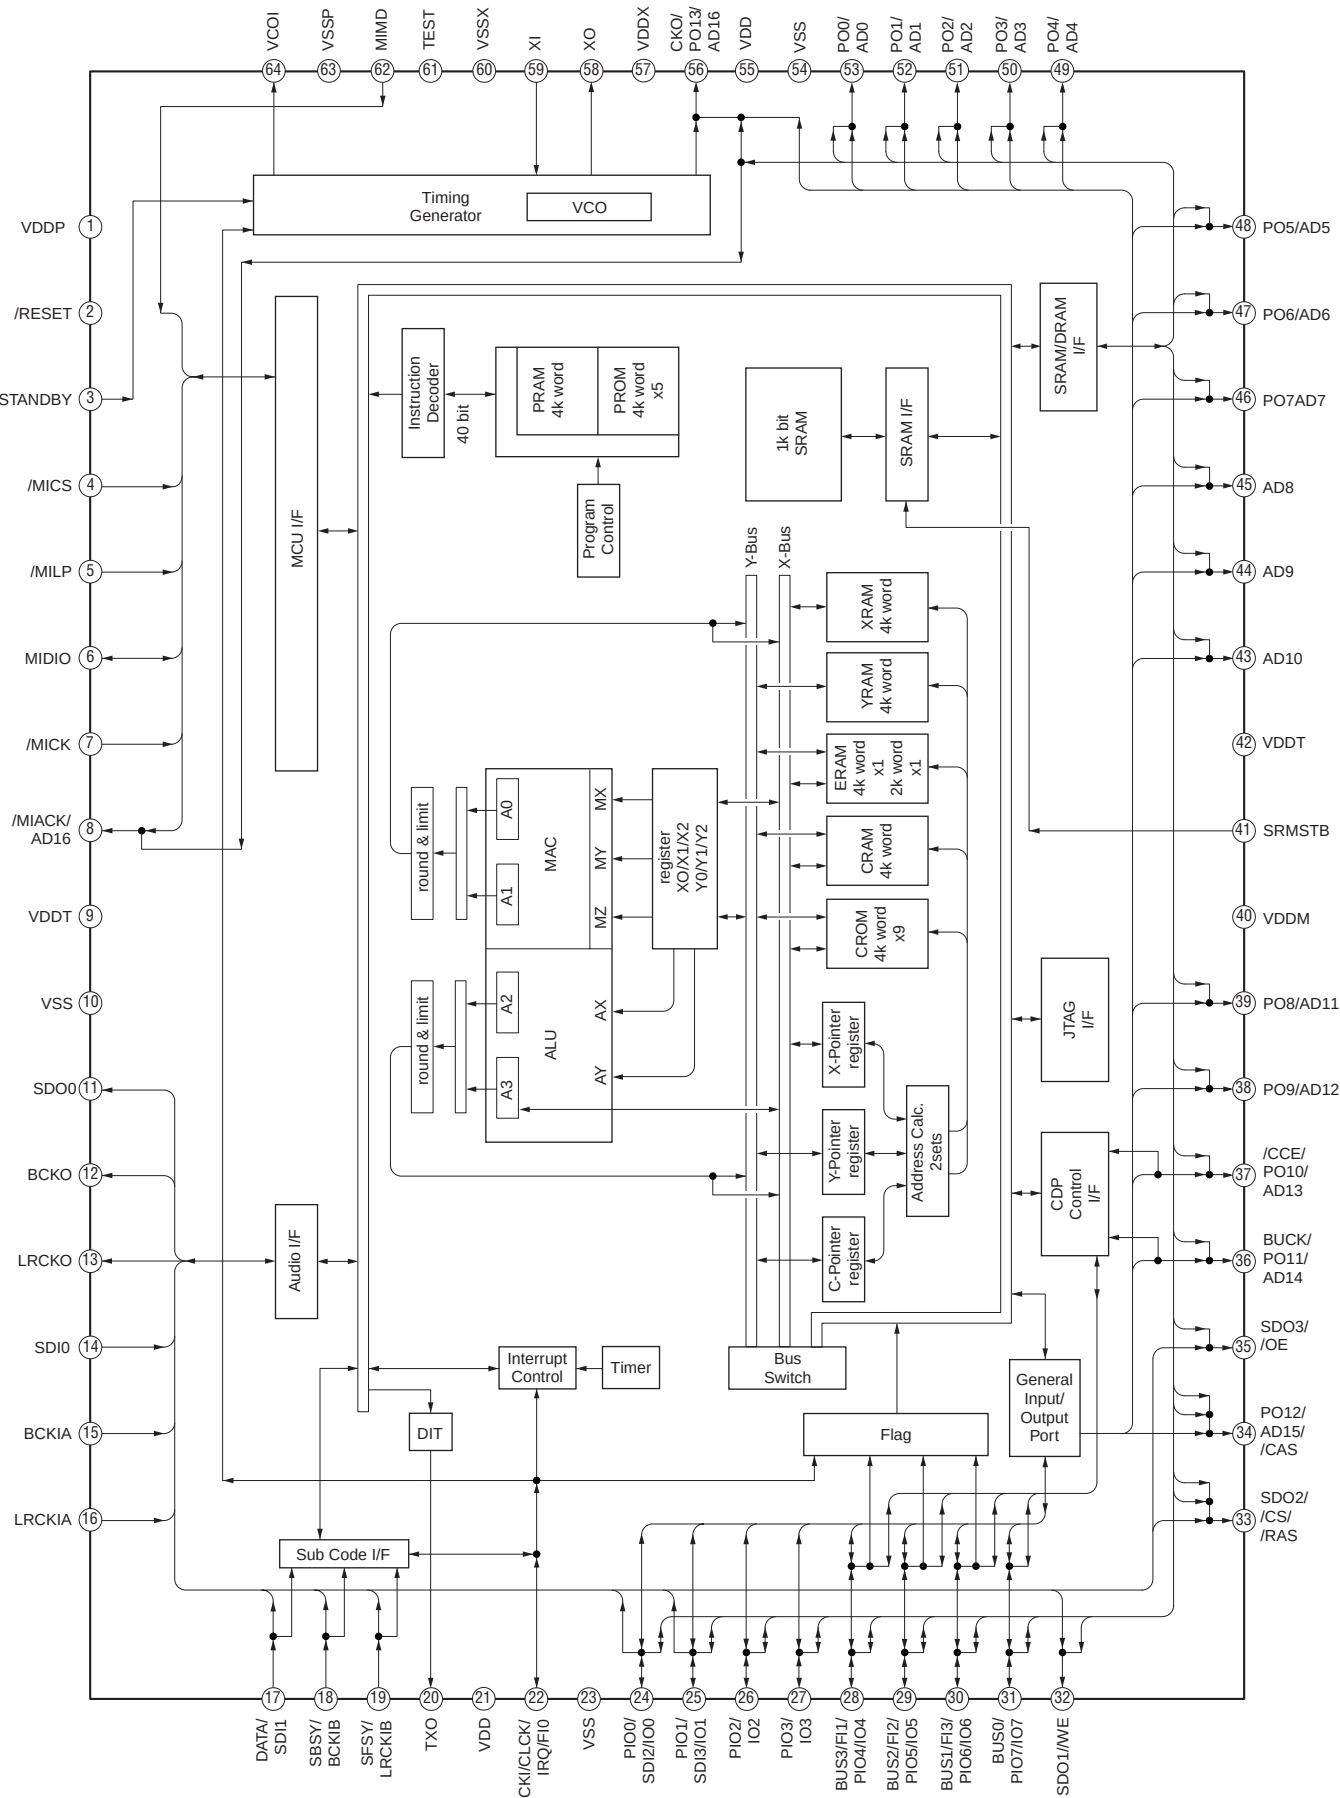


IC303 BH15FB1WG

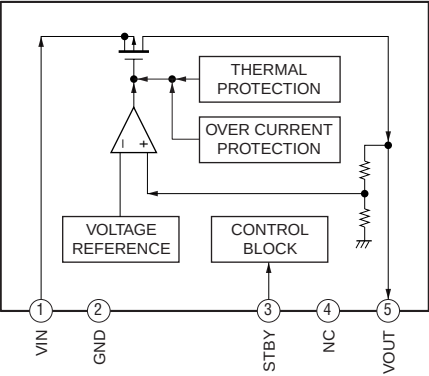


– DRIVER Board –

IC701, 712 BA6956AN

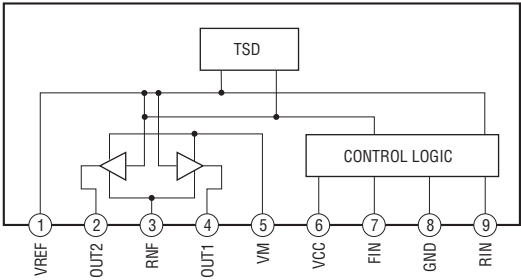


– MAIN Board –

IC101 BD3401KS2

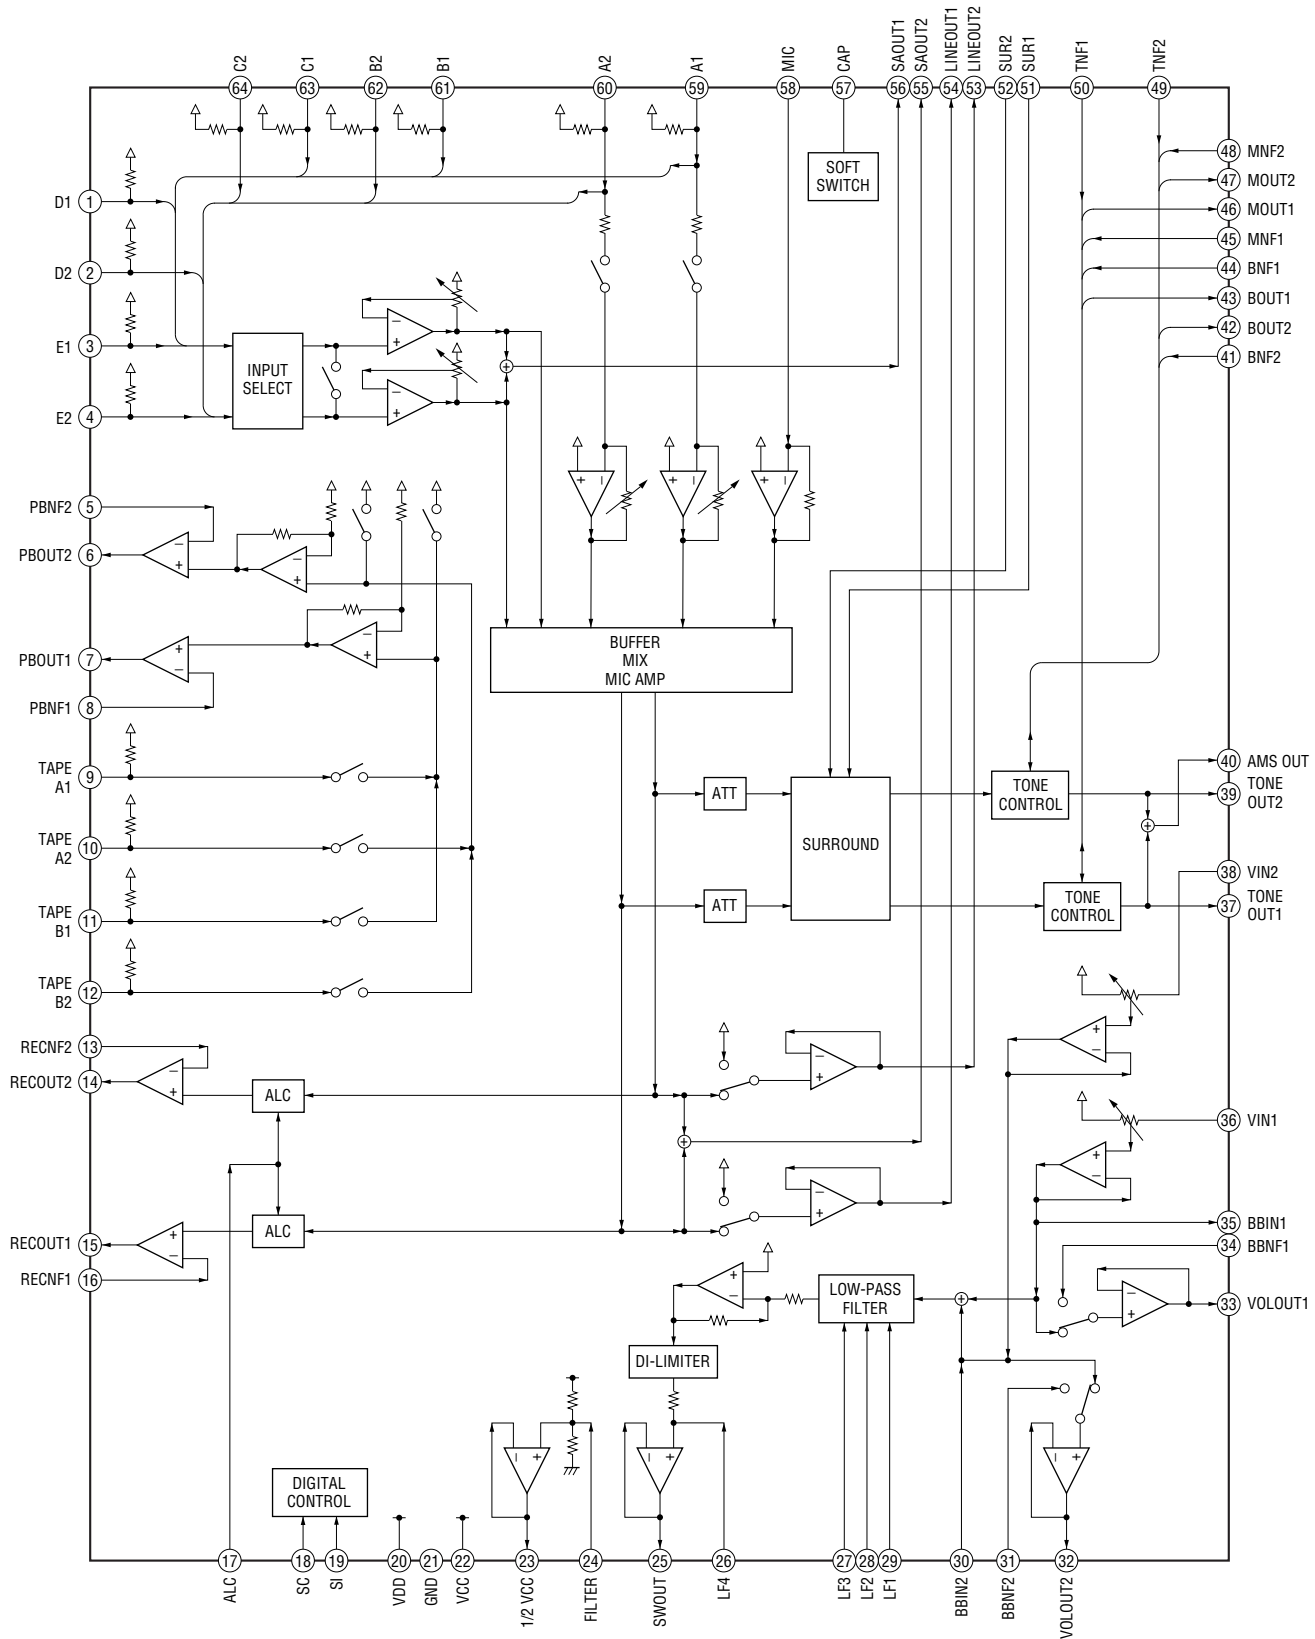

IC201 BA3126N

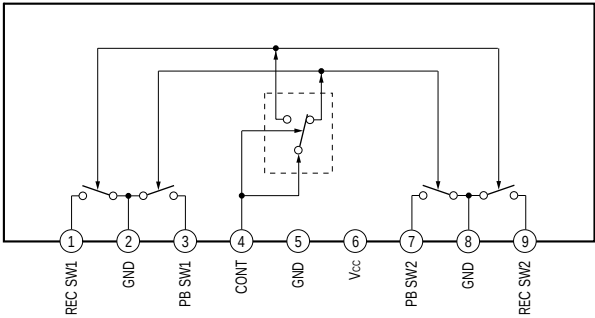

• IC Pin Function Description

MAIN BOARD IC371 BU2099FV (LOADING/TABLE MOTOR DRIVER)

Pin No.	Pin Name	I/O	Description
1	VSS	-	Ground terminal
2	N.C.	-	Not used
3	DATA	I	Serial data input from the motor/plunger driver
4	CLOCK	I	Serial data transfer clock signal input from the system controller
5	LCH	I	Latch pulse signal input from the system controller
6	Q0	O	Recording/playback selection signal output terminal
7	BIAS	O	Recording bias control signal output terminal
8, 9	Q2, Q3	O	Not used
10	Q4	O	CD muting on/off control signal output terminal
11	Q5	O	Tuner muting on/off control signal output to the FM/AM tuner pack
12	Q6	O	Power amplifier on/off control signal output terminal
13	Q7	O	Loading motor drive signal output terminal
14	Q8	O	Loading motor drive signal output terminal
15	Q9	O	Table motor drive signal output terminal
16	Q10	O	Table motor drive signal output terminal
17	Q11	O	Front speaker on/off relay drive control signal output terminal
18	SO	O	Serial data output terminal Not used
19	OE	-	Not used
20	VDD	-	Power supply terminal (+3.3V)

PANEL BOARD IC601 LC876A96A-55D8-E (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	O-MP3 CS	O	Chip select signal output to the MP3 decoder
2	O-MP3 LP	O	Latch pulse signal output to the MP3 decoder
3	I-MP3 ACK	I	Acknowledge signal input from the MP3 decoder
4	I-MP3 REQ	I	Request signal input from the MP3 decoder
5	I-SCOR (Q-DATA REQ)	I	Subcode Q data request signal input from the CD DSP
6	O-MP3 RESET	O	Reset signal output to the MP3 decoder "L": reset
7	I-BU1924 DATA	I	RDS serial data input from the FM/AM tuner pack Not used
8	I-BU1924 CLK	I	RDS serial data transfer clock signal input from the FM/AM tuner pack Not used
9	I-VOLUME-IN1	I	Jog dial pulse input terminal (VOLUME)
10	I-VOLUME-IN2	I	Jog dial pulse input terminal (VOLUME)
11	RESET	I	System reset signal input terminal "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
12	I-XT1	I	System clock input terminal (32.768 kHz)
13	O-XT2	O	System clock output terminal (32.768 kHz)
14	VSS1	-	Ground terminal
15	CF1	I	System clock input terminal (10 MHz)
16	CF2	O	System clock output terminal (10 MHz)
17	VDD1	-	Power supply terminal (+3.3V)
18	I-PROTECT	I	Protect signal input from the amplifier circuit
19	WFR/HP/MIC-IN	I	Headphone/microphone detection signal input from the electrical volume
20	I-CD ENCODER	I	Disc tray address detection signal input terminal
21	I-CD OPEN/CLOSE	I	Disc tray open/close detection signal input terminal
22	I-TAPE A STAT	I	Deck-A cassette detection signal, deck-A mode detection signal and recording (reverse direction) detection signal input terminal (A/D input)
23	I-TAPE B STAT	I	Deck-B cassette detection signal, deck-B mode detection signal and recording (forward direction) detection signal input terminal (A/D input)
24	I-STREAM/VACS	I	VACS/stream signal input terminal (A/D input)
25 to 27	I-KEY3 to I-KEY1	I	Front panel key input terminal (A/D input)
28	I-SIRCS IN	I	Remote control signal input terminal
29	I-AC CUT	I	AC detection signal input terminal "L": AC off
30 to 42	G13 to G1	O	Grid drive signal output to the fluorescent indicator tube
43 to 45	S1 to S3	O	Segment drive signal output to the fluorescent indicator tube
46	VDD3	-	Power supply terminal (+3.3V)
47 to 50	S4 to S7	O	Segment drive signal output to the fluorescent indicator tube
51	-VPP	-	Power supply terminal (-27V)
52 to 65	S8 to S21	O	Segment drive signal output to the fluorescent indicator tube
66	I-SPEC/ MODEL/METER	I	Destination setting signal, model setting signal and VACS/stream gain control signal input terminal
67	I-TUNED-IN	I	Tuning detection signal input from the FM/AM tuner pack "L": tuned
68	I-STEREO-IN	I	FM stereo detection signal input from the FM/AM tuner pack "L": stereo
69	I-AMS-IN	I	Auto music sensor detection signal input from the electrical volume "L": music is present, "H": music is not present
70	I-REEL-A-IN	I	Deck-A tape reel rotating detection signal input terminal
71	I-REEL-B-IN	I	Deck-B tape reel rotating detection signal input terminal

Pin No.	Pin Name	I/O	Description
72	VDD4	-	Power supply terminal (+3.3V)
73	I-CD NUM SENSOR	I	CD table address detection signal input terminal
74	O-POWER RELAY	O	Power on/off control signal output terminal "H": power on
75	O-SYSTEM-MUTE	O	System muting on/off control signal output terminal "H": muting on
76	O-POWER LED	O	LED drive signal output of the I/1 (power) indicator "H": LED on
77	O-I-BASS LED	O	LED drive signal output of the i-BASS indicator "H": LED on
78 to 80	NONE	O	Not used
81	I-MULTI-JOG IN1	I	Jog dial pulse input terminal (MULTI JOG)
82	I-MULTI-JOG IN2	I	Jog dial pulse input terminal (MULTI JOG)
83	I-LC72121 DI	I	Serial data input from the FM/AM tuner pack
84	O-LC72121 CE	O	Chip enable signal output to the FM/AM tuner pack
85	O-LC72121/ BU2099FV DO	O	Serial data output to the FM/AM tuner pack and motor/plunger drive
86	O-LC72121/ BU2099FV CLK	O	Serial data transfer clock signal output to the FM/AM tuner pack, loading/table motor driver and motor/plunger driver
87	O-BU2099FV LCH	O	Latch pulse signal output to the loading/table motor driver and motor/plunger driver
88	O-BU3401 CLK	O	Serial data transfer clock signal output to the electrical volume
89	VSS2	-	Ground terminal
90	VDD2	-	Power supply terminal (+3.3V)
91	O-BU3401 DATA	O	Serial data output to the electrical volume
92	O-XTCN	O	Oscillator control signal output to the CD DSP and motor/coil driver
93	O-X-RES (RESET)	O	Reset signal output to the CD DSP and motor/coil driver "L": reset
94	O-XLT (CD-LAT)	O	Latch pulse signal output to the CD DSP
95	O-CD-DATA	O	Serial data output to the CD DSP
96	I-SENS	I	Serial data input from the CD DSP
97	O-CD-CLK	O	Serial data transfer clock signal output to the CD DSP
98	O-MP3-DO	O	Serial data output to the MP3 decoder
99	I-MP3-DI	I	Serial data input from the MP3 decoder
100	O-MP3-CLK	O	Serial data transfer clock signal output to the MP3 decoder

PANEL BOARD IC602 BU2099FV (MOTOR/PLUNGER DRIVER)

Pin No.	Pin Name	I/O	Description
1	VSS	-	Ground terminal
2	NC	-	Not used
3	DATA	I	Serial data input from the system controller
4	CLOCK	I	Serial data transfer clock signal input from the system controller
5	LCH	I	Latch pulse signal input from the system controller
6	SOL-A	O	Deck-A side trigger plunger drive signal output terminal
7	SOL-B	O	Deck-B side trigger plunger drive signal output terminal
8	MOTOR	O	Capstan/reel motor drive signal output terminal
9, 10	NC	-	Not used
11	MP3-STB	O	Standby signal output to the MP3 decoder
12 to 17	NC	-	Not used
18	SO	O	Serial data output to the loading/table motor driver
19	$\overline{\text{OE}}$	-	Not used
20	VDD	-	Power supply terminal (+3.3V)

SECTION 8

EXPLODED VIEWS

NOTE:

- XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)

↑


↑

Parts ColorCabinet's Color
- Abbreviation
E51 : Chilean and Peruvian models
MX : Mexican model

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories are given in the last of the electrical parts list.


The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

8-1. CASE SECTION

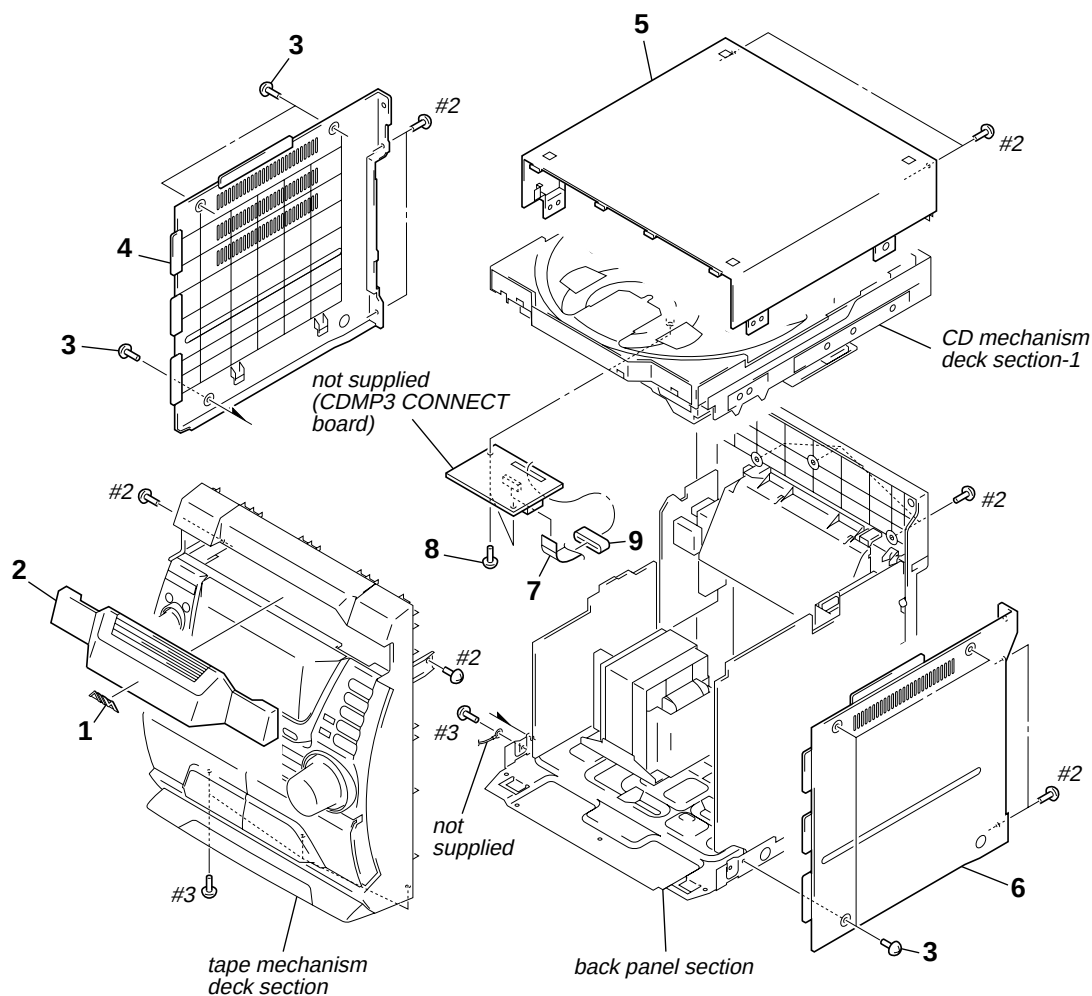


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-245-158-01	EMBLEM		7	1-775-251-11	WIRE (FLAT TYPE) (27 CORE)	
2	4-252-696-61	PANEL, TRAY		8	4-951-620-01	SCREW (2.6X8), +BVTP	
3	3-363-099-32	SCREW (CASE 3 TP2)		9	1-469-854-11	CORE, FERRITE	
4	4-245-183-92	CASE (SIDE-L)		#2	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
5	4-244-849-91	CASE (TOP)					
6	4-245-184-92	CASE (SIDE-R)		#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

8-2. TAPE MECHANISM DECK SECTION
(CWM43FF13: JPK331)/
(CWM43FR34: JN331)

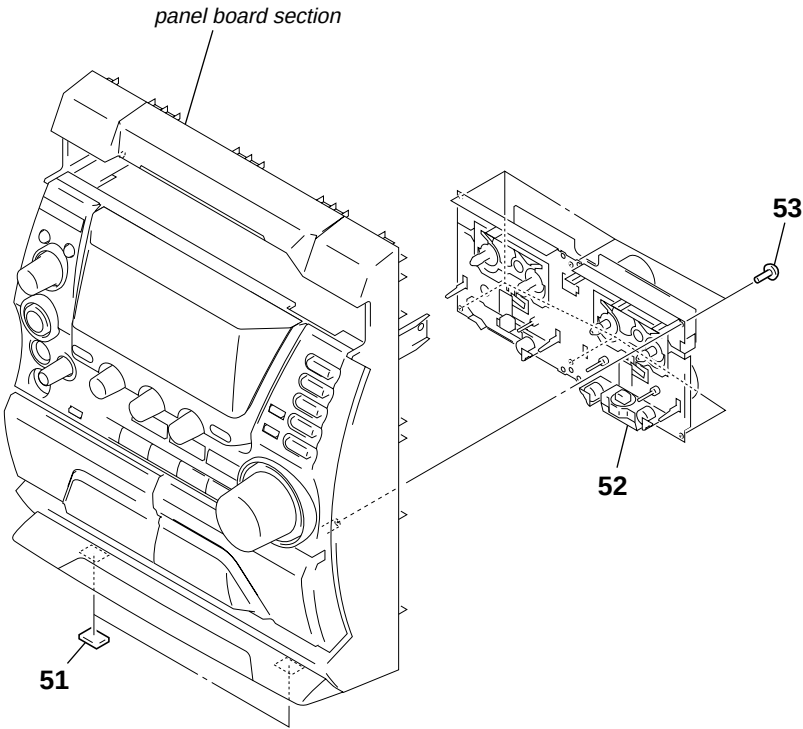

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-225-252-01	CUSHION (FOOT)		52	1-796-486-71	DECK, MECHANICAL (CWM43FR34) (JN331)	
52	1-796-485-51	DECK, MECHANICAL (CWM43FF13) (JPK331)		53	4-951-620-01	SCREW (2.6X8), +BVTP	


8-3. PANEL BOARD SECTION

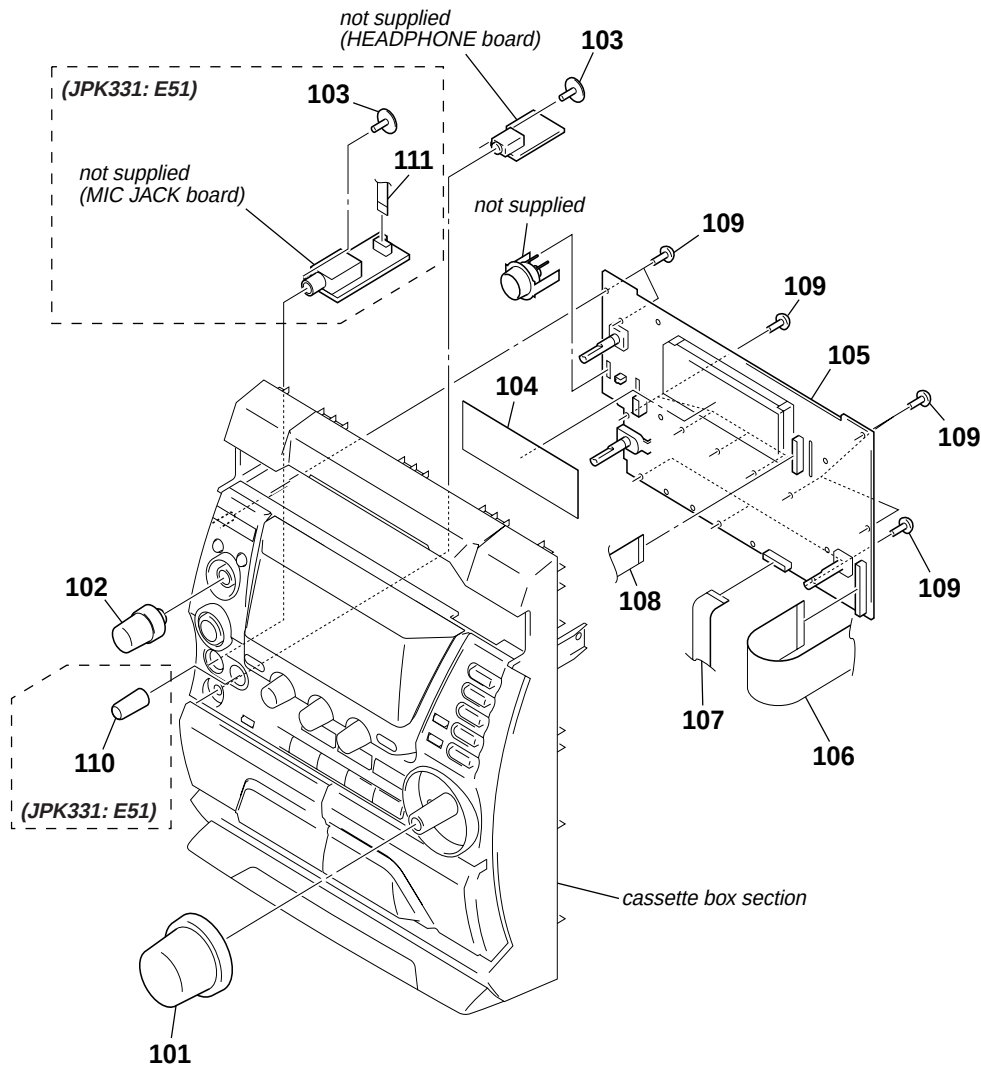

Ref. No.	Part No.	Description	Remark
101	4-252-707-11	KNOB (VOL), PLATING ROTARY	
102	4-252-709-01	KNOB (AMS), PLATING ROTARY	
103	3-229-336-11	SCREW, +BVWH TAPPING	
104	4-252-718-01	SHEET, FL	
105	A-1113-356-A	PANEL BOARD, COMPLETE (JN331)	
105	A-1113-384-A	PANEL BOARD, COMPLETE (JPK331: E51)	
105	A-1113-402-A	PANEL BOARD, COMPLETE (JPK331: MX)	


Ref. No.	Part No.	Description	Remark
106	1-773-288-11	WIRE (FLAT TYPE) (29 CORE)	
107	1-827-145-11	WIRE (FLAT TYPE) (13 CORE)	
108	1-773-048-11	WIRE (FLAT TYPE) (17 CORE)	
109	4-951-620-01	SCREW (2.6X8), +BVTP	
110	4-253-575-01	KNOB (MIC), ROTARY (JPK331: E51)	
111	1-769-842-11	WIRE (FLAT TYPE) (5 CORE) (JPK331: E51)	

8-4. CASSETTE BOX SECTION

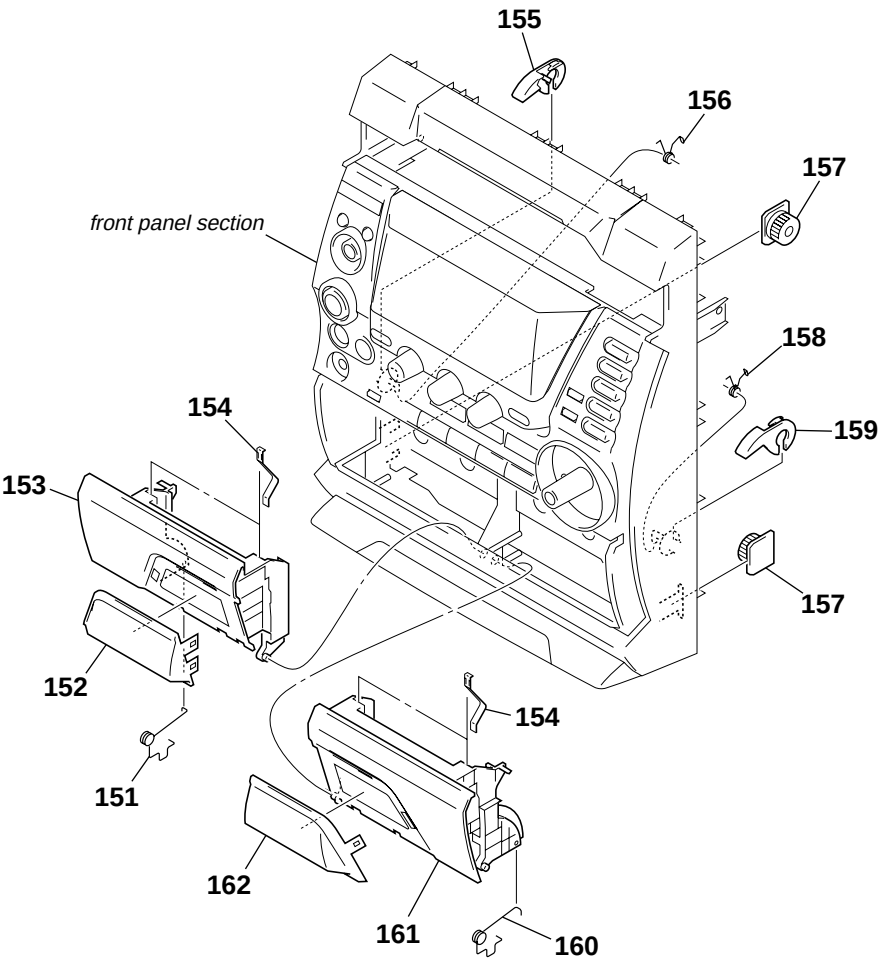


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	4-252-715-01	S-PRING (BOX CASS L), TORSION		158	4-231-841-01	SPRING (HEART CAM-B)	
152	4-252-698-01	WINDOW (L), CASSETTE		159	4-231-825-01	CAM (B), HEART	
153	4-252-695-01	BOX (L), CASSETTE		160	4-252-716-01	SPRING (BOX CASS R), TORSION	
154	4-238-631-11	TAPE SPRING		161	4-252-694-01	BOX (R), CASSETTE	
155	4-231-824-01	CAM (A), HEART		162	4-252-699-01	WINDOW (R), CASSETTE (JN331)	
156	4-231-836-01	SPRING (HEART CAM-A)		162	4-252-699-11	WINDOW (R), CASSETTE (JPK331)	
157	4-224-104-41	DAMPER					

8-5. FRONT PANEL SECTION

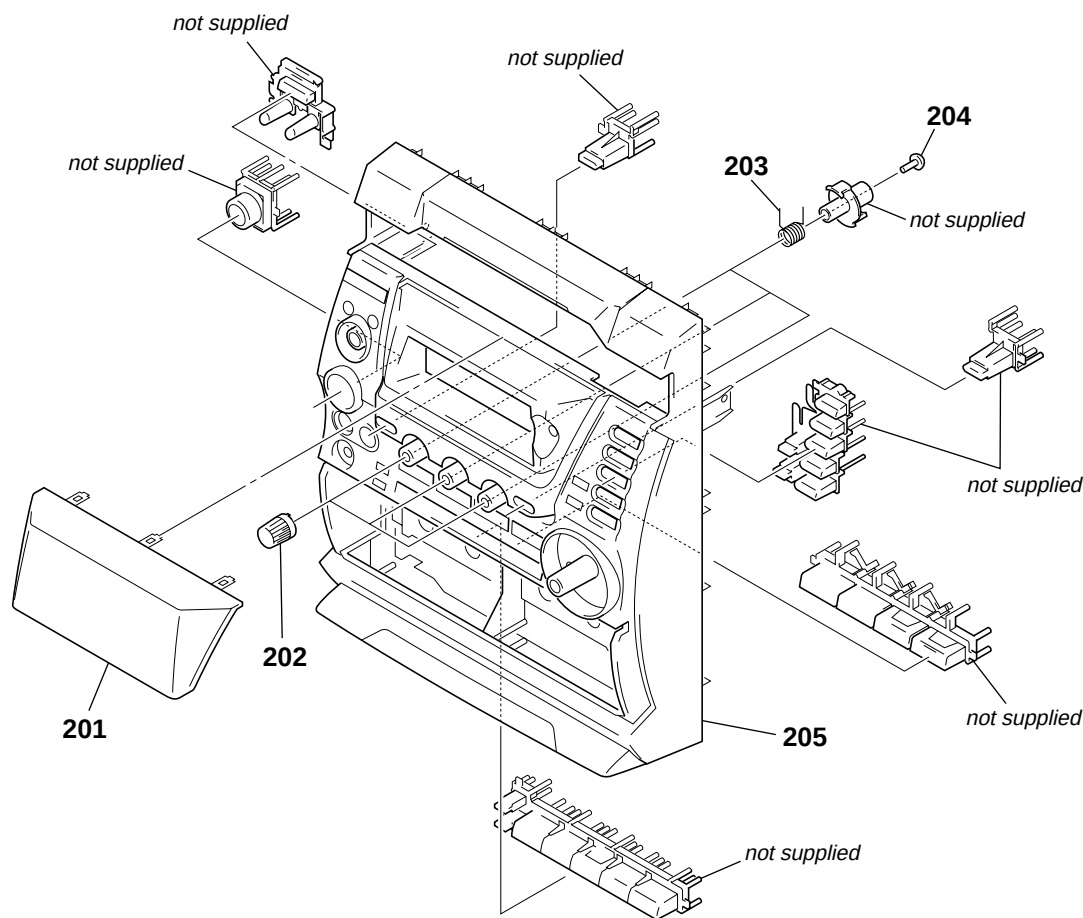

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
201	2-594-140-01	WINDOW, DISPLAY (JPK331: E51)		204	4-218-253-72	SCREW (M2.6), +BTTP	
201	2-594-140-11	WINDOW, DISPLAY (JPK331: MX)		205	2-594-139-01	PANEL, FRONT (JPK331: E51)	
201	2-594-140-21	WINDOW, DISPLAY (JN331)		205	4-252-693-01	PANEL, FRONT (JN331/JPK331: MX)	
202	4-252-776-01	KNOB (BASS), ROTARY					
203	4-252-717-01	SPRING (BASS), TORSION					


8-7. CHASSIS SECTION

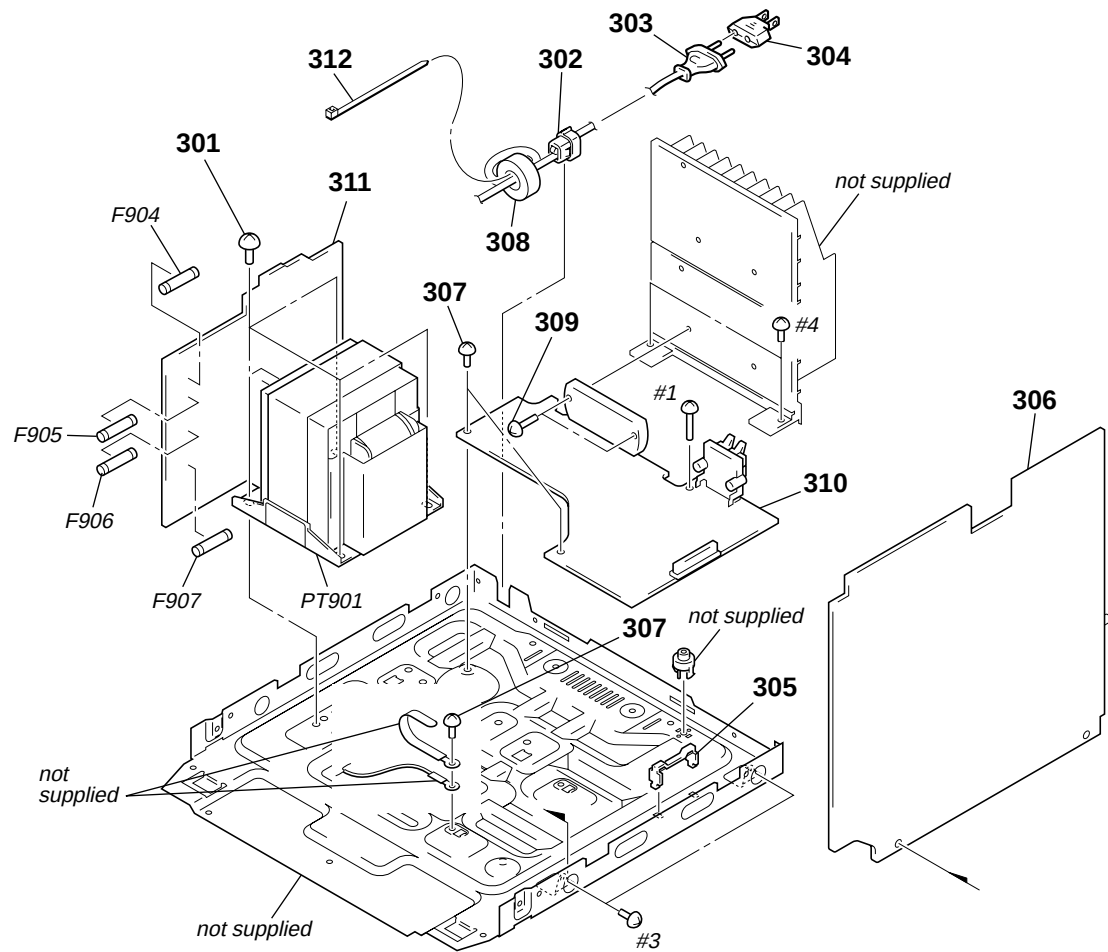

Ref. No.	Part No.	Description	Remark
301	4-900-386-01	SCREW	
302	3-703-244-00	BUSHING (2104), CORD (JN331/JPK331: E51)	
* 302	3-703-571-12	BUSHING (S) (4516), CORD (JPK331: MX)	
△ 303	1-777-071-83	CORD, POWER (JN331/JPK331: E51)	
△ 303	1-827-226-31	CORD, POWER (JPK331: MX)	
304	1-569-007-11	ADAPTOR, CONVERSION 2P (JN331/JPK331: E51)	
305	4-988-533-01	HOLDER, PWB	
306	A-1113-365-A	MAIN BOARD, COMPLETE (JPK331: E51)	
306	A-4750-727-A	MAIN BOARD, COMPLETE (JPK331: MX)	
306	A-4750-735-A	MAIN MOUNTED PC BOARD (JN331)	
307	3-077-331-01	+BV3 (3-CR)	
308	1-400-285-11	F-BEAD, E2515MRT	
309	3-905-609-41	SCREW (TRANSISTOR)	
310	A-4750-730-A	POWER BOARD, COMPLETE (JPK331: E51)	
310	A-4750-738-A	POWER MOUNTED PC BOARD (JN331)	


Ref. No.	Part No.	Description	Remark
310	A-4752-992-A	POWER BOARD, COMPLETE (JPK331: MX)	
311	A-4750-801-A	TRANSFORMER BOARD, COMPLETE (JN331/JPK331: E51)	
311	A-4752-897-A	TRANSFORMER BOARD, COMPLETE (JPK331: MX)	
312	4-059-585-01	TIE, CABLE	
△ F904	1-533-473-12	FUSE, GLASS TUBE (DIA. 5) (T6.3AL/250V)	
△ F905	1-533-473-12	FUSE, GLASS TUBE (DIA. 5) (T6.3AL/250V)	
△ F906	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
△ F907	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
△ PT901	1-443-238-12	TRANSFORMER, POWER (JN331/JPK331: E51)	
△ PT901	1-443-283-11	TRANSFORMER, POWER (JPK331: MX)	
#1	7-685-649-79	SCREW +BVTP 3X14 TYPE2 IT-3	
#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#4	7-685-881-09	SCREW +BVTT 4X8 (S)	

8-8. CD MECHANISM DECK SECTION-1 (CDM74KS-F1BD81C)

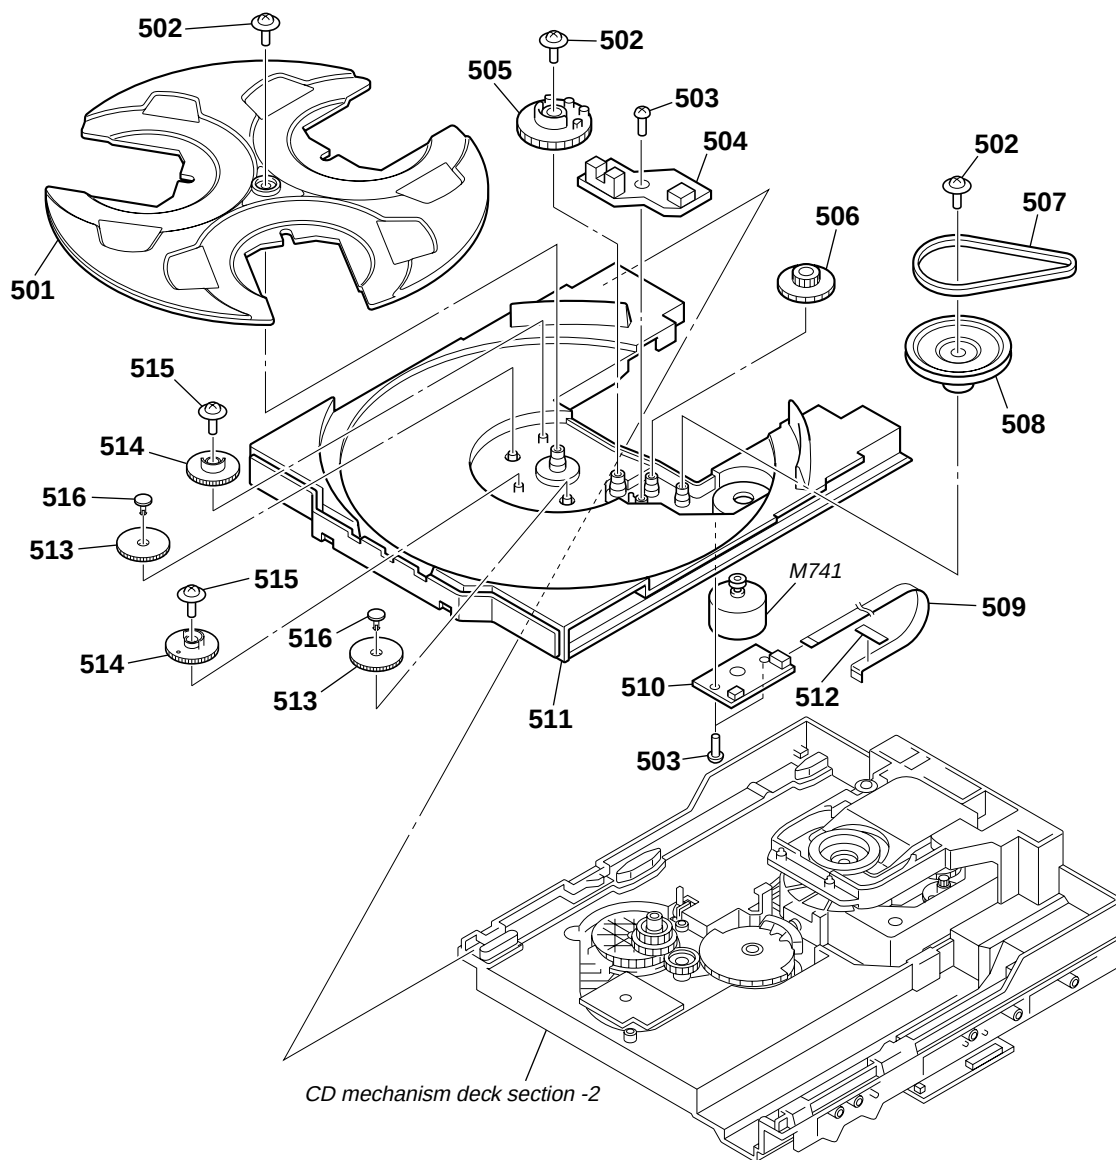

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
501	4-243-816-11	TRAY		510	1-687-134-12	MOTOR (TB) BOARD	
502	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		511	4-243-815-11	TABLE (LOADING)	
503	4-218-253-62	SCREW (M2.6), +BTTP		512	3-321-598-01	SHEET (BA)	
504	1-687-132-12	SENSOR BOARD		513	4-245-570-01	GEAR (JOINT)	
505	4-243-819-01	GEAR (GENEVA)		514	4-245-571-02	GEAR (STOPPER)	
506	4-243-820-01	GEAR (TABLE)		515	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
507	4-243-823-11	BELT (TABLE)		516	4-245-572-01	BUSHING (GEAR)	
508	4-243-821-01	PULLEY (TABLE)		M741	A-1108-965-A	MOTOR ASSY, TABLE	
509	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)					


8-9. CD MECHANISM DECK SECTION-2
(CDM74KS-F1BD81C)

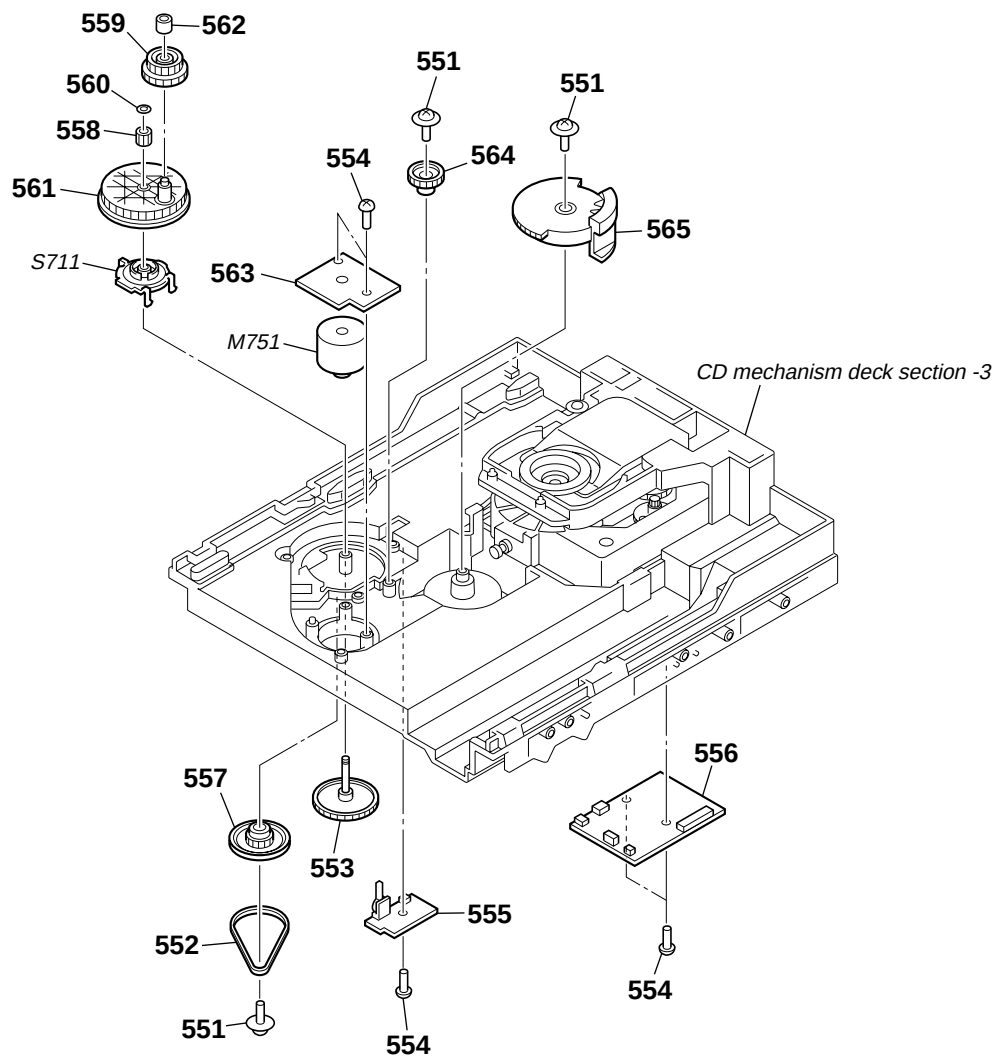

Ref. No.	Part No.	Description	Remark
551	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
552	4-244-034-11	BELT (LOADING)	
553	4-224-613-11	GEAR (SHAFT)	
554	4-218-253-52	SCREW (M2.6), +BTTP	
555	1-687-669-12	SW BOARD	
556	1-687-135-12	DRIVER BOARD	
557	4-225-844-01	GEAR (LOADING A)	
558	4-224-611-01	GEAR (LOADING B)	
559	4-224-609-01	GEAR (LOADING C)	
560	3-016-533-11	WASHER (FR), STOPPER	


Ref. No.	Part No.	Description	Remark
561	4-244-108-01	GEAR, SWING	
562	4-224-608-01	COLLAR, SWING	
563	1-687-133-12	MOTOR (LD) BOARD	
564	4-224-606-01	GEAR (RV)	
565	4-243-818-01	GEAR (U/D)	
M751	A-1108-966-A	MOTOR ASSY, LOADING	
S711	1-477-680-12	ENCODER, ROTARY (DISC TRAY ADDRESS DETECT)	

8-10. CD MECHANISM DECK SECTION-3
(CDM74KS-F1BD81C)

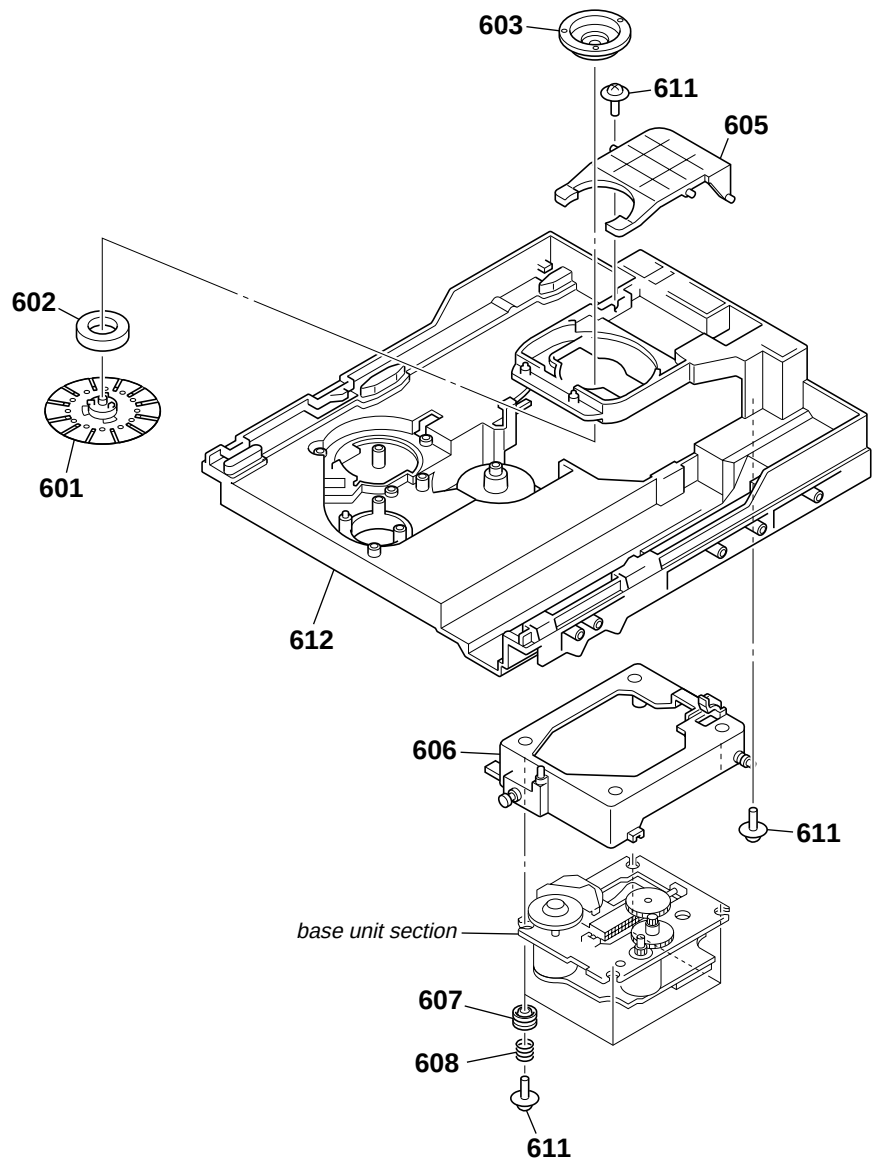

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
601	X-2025-123-1	CHACKING PULLEY (KH) ASSY		607	4-227-549-11	INSULATOR	
602	1-471-035-11	MAGNET ASSY		608	4-227-045-31	SPRING (INSULATOR), COIL	
603	4-231-189-01	PULLEY (B), CHUCKING		611	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
605	4-243-822-02	LEVER (LIFTER)		612	4-243-817-22	CHASSIS	
606	X-2055-190-1	HOLDER (213) ASSY					

8-11. BASE UNIT SECTION
(BU-F1BD81C)

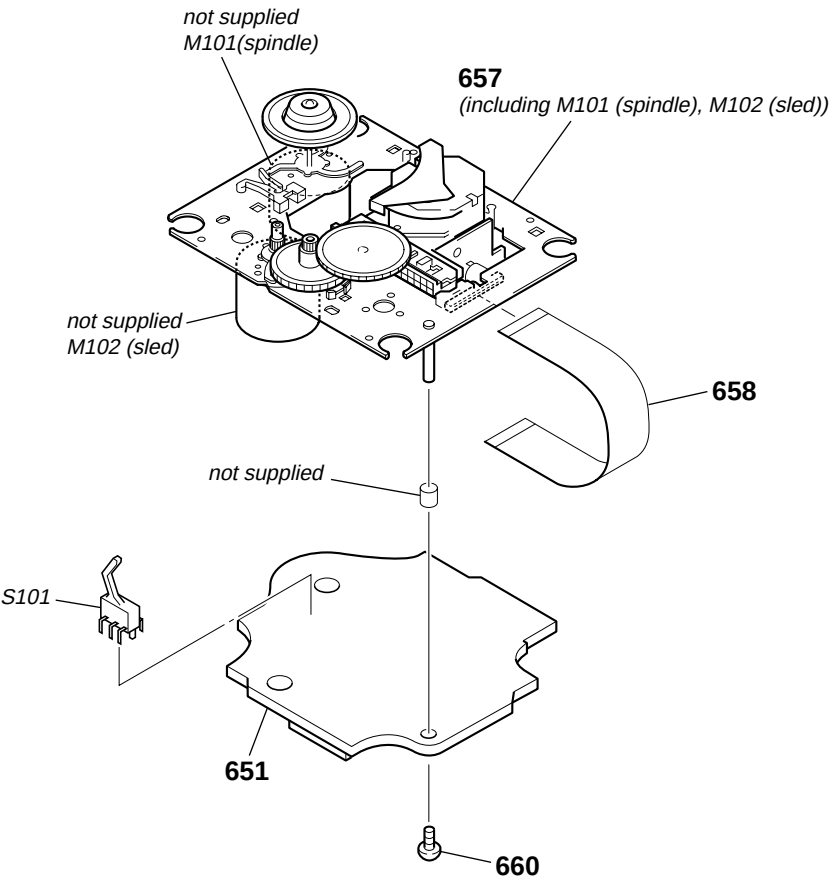

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
651	A-1091-086-A	CD BOARD, COMPLETE		660	3-087-053-01	+BVTP2.6 (3CR)	
△ 657	8-820-244-01	OPTICAL PICK-UP KSM-215DCP/C2NP		S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
658	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)					

SECTION 9

ELECTRICAL PARTS LIST

CD

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Abbreviation
E51 : Chilean and Peruvian models
MX : Mexican model

- Items marked “*” are not stocked since they are seldom required for routine service.
Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA... : μ A... uPA... : μ PA...
uPB... : μ PB... uPC... : μ PC...
uPD... : μ PD...
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
	A-1091-086-A	CD BOARD, COMPLETE *****									
		< CAPACITOR >									
C10	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V	C201	1-128-995-21	ELECT CHIP	100uF	20%	10V
C11	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V	C203	1-128-995-21	ELECT CHIP	100uF	20%	10V
C14	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C209	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C15	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C210	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C16	1-115-156-11	CERAMIC CHIP	1uF		10V	C211	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C17	1-126-246-11	ELECT CHIP	220uF	20%	4V	C212	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C18	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C213	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C111	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V	C251	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C112	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C252	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C113	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V	C255	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C114	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C257	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C115	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C258	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C116	1-128-995-21	ELECT CHIP	100uF	20%	10V	C259	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C122	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C260	1-128-394-11	ELECT CHIP	220uF	20%	10V
C123	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C302	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C124	1-162-959-11	CERAMIC CHIP	330PF	5%	50V	C303	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C125	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C305	1-126-246-11	ELECT CHIP	220uF	20%	4V
C131	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C306	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C132	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V	C307	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C133	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C308	1-126-208-21	ELECT CHIP	47uF	20%	4V
C134	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C309	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C141	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C310	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C142	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V	C311	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C143	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C312	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C151	1-128-995-21	ELECT CHIP	100uF	20%	10V	C313	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C161	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C314	1-126-208-21	ELECT CHIP	47uF	20%	4V
C162	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C315	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C163	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C316	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C171	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	C317	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C172	1-162-920-11	CERAMIC CHIP	27PF	5%	50V	C318	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C174	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C320	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C181	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C501	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C182	1-164-360-11	CERAMIC CHIP	0.1uF		16V			< CONNECTOR >			
C183	1-124-778-00	ELECT CHIP	22uF	20%	6.3V	CN101	1-770-425-11	CONNECTOR, FFC/FPC 16P			
C184	1-124-778-00	ELECT CHIP	22uF	20%	6.3V	CN201	1-818-350-11	CONNECTOR (FFC) 27P			
C185	1-164-315-11	CERAMIC CHIP	470PF	5%	50V			< FERRITE BEAD >			
C186	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	FB301	1-500-445-21	FERRITE, EMI (SMD) (2012)			
C194	1-164-360-11	CERAMIC CHIP	0.1uF		16V			< IC >			
C195	1-164-360-11	CERAMIC CHIP	0.1uF		16V	IC101	8-752-425-12	IC CXD3059AR			
C196	1-164-360-11	CERAMIC CHIP	0.1uF		16V						

CX-JN331/JPK331

CD CDMP3 CONNECT DRIVER

Ref. No.	Part No.	Description	Remark		
IC251	6-705-808-01	IC BA5947FM-E2			
IC301	6-705-365-01	IC TC94A34FG-002			
IC303	6-705-807-01	IC BH15FB1WG			
IC501	8-759-058-62	IC TC7S08FU (TE85R)			
< TRANSISTOR >					
Q10	6-551-120-01	TRANSISTOR	2SA2119K		
< RESISTOR/FERRITE BEAD >					
R10	1-216-791-11	METAL CHIP	3.3	5%	1/10W
R11	1-216-864-11	SHORT CHIP	0		
R12	1-216-845-11	METAL CHIP	100K	5%	1/10W
R13	1-218-446-11	METAL CHIP	1	5%	1/10W
R111	1-216-821-11	METAL CHIP	1K	5%	1/10W
R112	1-216-835-11	METAL CHIP	15K	5%	1/10W
R113	1-216-821-11	METAL CHIP	1K	5%	1/10W
R114	1-216-835-11	METAL CHIP	15K	5%	1/10W
R121	1-216-835-11	METAL CHIP	15K	5%	1/10W
R131	1-216-857-11	METAL CHIP	1M	5%	1/10W
R132	1-216-833-11	METAL CHIP	10K	5%	1/10W
R133	1-216-848-11	METAL CHIP	180K	5%	1/10W
R141	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R142	1-216-821-11	METAL CHIP	1K	5%	1/10W
R143	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R151	1-216-864-11	SHORT CHIP	0		
R161	1-216-809-11	METAL CHIP	100	5%	1/10W
R162	1-216-841-11	METAL CHIP	47K	5%	1/10W
R163	1-216-809-11	METAL CHIP	100	5%	1/10W
R165	1-216-864-11	SHORT CHIP	0		
R171	1-216-817-11	METAL CHIP	470	5%	1/10W
R172	1-216-857-11	METAL CHIP	1M	5%	1/10W
R173	1-216-295-00	SHORT CHIP	0		
R181	1-216-809-11	METAL CHIP	100	5%	1/10W
R182	1-216-809-11	METAL CHIP	100	5%	1/10W
R191	1-216-864-11	SHORT CHIP	0		
R201	1-500-445-21	FERRITE, EMI (SMD) (2012)			
R203	1-216-864-11	SHORT CHIP	0		
R204	1-216-864-11	SHORT CHIP	0		
R205	1-216-864-11	SHORT CHIP	0		
R251	1-216-833-11	METAL CHIP	10K	5%	1/10W
R252	1-216-837-11	METAL CHIP	22K	5%	1/10W
R253	1-216-833-11	METAL CHIP	10K	5%	1/10W
R301	1-216-845-11	METAL CHIP	100K	5%	1/10W
R302	1-216-833-11	METAL CHIP	10K	5%	1/10W
R303	1-216-845-11	METAL CHIP	100K	5%	1/10W
R305	1-216-845-11	METAL CHIP	100K	5%	1/10W
R306	1-216-864-11	SHORT CHIP	0		
R307	1-216-833-11	METAL CHIP	10K	5%	1/10W
R313	1-216-813-11	METAL CHIP	220	5%	1/10W
R351	1-216-809-11	METAL CHIP	100	5%	1/10W
R352	1-216-809-11	METAL CHIP	100	5%	1/10W
R353	1-216-809-11	METAL CHIP	100	5%	1/10W
R354	1-216-809-11	METAL CHIP	100	5%	1/10W
R401	1-216-809-11	METAL CHIP	100	5%	1/10W
R402	1-216-809-11	METAL CHIP	100	5%	1/10W
R403	1-216-809-11	METAL CHIP	100	5%	1/10W
R404	1-216-809-11	METAL CHIP	100	5%	1/10W
R405	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description	Remark		
R406	1-216-809-11	METAL CHIP	100	5%	1/10W
R407	1-216-809-11	METAL CHIP	100	5%	1/10W
R408	1-216-809-11	METAL CHIP	100	5%	1/10W
R409	1-216-809-11	METAL CHIP	100	5%	1/10W
R410	1-216-809-11	METAL CHIP	100	5%	1/10W
R411	1-216-809-11	METAL CHIP	100	5%	1/10W
< VIBRATOR >					
X171	1-767-408-21	VIBRATOR, CRYSTAL (16.9344MHz)			

CDMP3 CONNECT BOARD					

< CAPACITOR >					
C871	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C872	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C873	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C874	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C875	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C876	1-164-156-11	CERAMIC CHIP	0.1uF		25V
< CONNECTOR >					
CN871	1-779-295-11	CONNECTOR, FFC (LIF (NON-ZIF)) 27P			
CN873	1-784-778-11	CONNECTOR, FFC 17P			
* CN874	1-564-725-11	PIN, CONNECTOR (SMALL TYPE) 9P			
< JUMPER RESISTOR >					
FB871	1-216-864-11	SHORT CHIP	0		
FB872	1-216-864-11	SHORT CHIP	0		
JR871	1-216-864-11	SHORT CHIP	0		
JR872	1-216-864-11	SHORT CHIP	0		

1-687-135-12 DRIVER BOARD					

< CAPACITOR >					
C715	1-126-933-11	ELECT	100uF	20%	16V
C731	1-126-964-11	ELECT	10uF	20%	50V
C735	1-164-159-21	CERAMIC	0.1uF		50V
C736	1-164-159-21	CERAMIC	0.1uF		50V
C737	1-164-159-21	CERAMIC	0.1uF		50V
C741	1-162-306-11	CERAMIC	0.01uF	20%	16V
C751	1-162-306-11	CERAMIC	0.01uF	20%	16V
C752	1-164-159-21	CERAMIC	0.1uF		50V
< CONNECTOR >					
CN701	1-785-338-11	PIN, CONNECTOR (LIGHT ANGLE) 12P			
CN702	1-784-766-11	CONNECTOR, FFC 5P			
* CN703	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P			
CN704	1-785-328-11	PIN, CONNECTOR (LIGHT ANGRE) 2P			
< DIODE >					
D701	8-719-921-42	DIODE MTZJ-5.1A			

DRIVER	HEADPHONE	MAIN
--------	-----------	------

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
D711	8-719-109-69	DIODE RD3.6ESB2				C113	1-126-960-11	ELECT	1uF	20%	50V
		< IC >				C114	1-126-960-11	ELECT	1uF	20%	50V
IC701	8-759-598-69	IC BA6956AN				C115	1-131-679-31	FILM	0.01uF	5%	50V
IC712	8-759-598-69	IC BA6956AN				C116	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
		< TRANSISTOR >				C116	1-164-392-11	CERAMIC CHIP	390PF	5%	50V
											(JPK331)
											(JN331)
Q731	8-729-029-66	TRANSISTOR DTC114ESA				C117	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
		< RESISTOR >				C118	1-126-964-11	ELECT	10uF	20%	50V
						C119	1-131-679-31	FILM	0.01uF	5%	50V
R701	1-249-413-11	CARBON	470	5%	1/4W	C120	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
R702	1-247-807-31	CARBON	100	5%	1/4W						(JPK331)
R711	1-249-417-11	CARBON	1K	5%	1/4W	C120	1-164-392-11	CERAMIC CHIP	390PF	5%	50V
R712	1-249-425-11	CARBON	4.7K	5%	1/4W						(JN331)
R713	1-249-433-11	CARBON	22K	5%	1/4W	C121	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
						C122	1-126-964-11	ELECT	10uF	20%	50V
R721	1-249-425-11	CARBON	4.7K	5%	1/4W	C123	1-126-965-11	ELECT	22uF	20%	50V
R722	1-249-425-11	CARBON	4.7K	5%	1/4W	C124	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
R723	1-249-425-11	CARBON	4.7K	5%	1/4W	C125	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
R731	1-247-807-31	CARBON	100	5%	1/4W	C126	1-165-112-11	CERAMIC CHIP	0.33uF		16V
R732	1-249-429-11	CARBON	10K	5%	1/4W	C127	1-104-665-11	ELECT	100uF	20%	25V
						C128	1-104-665-11	ELECT	100uF	20%	25V
R733	1-249-417-11	CARBON	1K	5%	1/4W	C129	1-126-947-11	ELECT	47uF	20%	35V
R734	1-249-430-11	CARBON	12K	5%	1/4W	C132	1-126-947-11	ELECT	47uF	20%	35V
R735	1-247-807-31	CARBON	100	5%	1/4W	C135	1-136-165-00	FILM	0.1uF	5%	50V
R751	1-249-425-11	CARBON	4.7K	5%	1/4W	C136	1-136-165-00	FILM	0.1uF	5%	50V
*****						C137	1-126-964-11	ELECT	10uF	20%	50V
*****						C138	1-126-964-11	ELECT	10uF	20%	50V
*****						C139	1-136-165-00	FILM	0.1uF	5%	50V
*****						C140	1-136-165-00	FILM	0.1uF	5%	50V
*****						C141	1-126-964-11	ELECT	10uF	20%	50V
*****						C142	1-126-964-11	ELECT	10uF	20%	50V
*****						C143	1-126-960-11	ELECT	1uF	20%	50V
*****						C144	1-136-165-00	FILM	0.1uF	5%	50V
*****						C145	1-126-964-11	ELECT	10uF	20%	50V
*****						C146	1-136-165-00	FILM	0.1uF	5%	50V
*****						C147	1-126-964-11	ELECT	10uF	20%	50V
*****						C148	1-131-679-31	FILM	0.01uF	5%	50V
*****						C149	1-131-679-31	FILM	0.01uF	5%	50V
*****						C150	1-131-679-31	FILM	0.01uF	5%	50V
*****						C151	1-131-679-31	FILM	0.01uF	5%	50V
*****						C152	1-130-475-00	MYLAR	0.0022uF	5%	50V
*****						C153	1-130-475-00	MYLAR	0.0022uF	5%	50V
*****						C154	1-131-700-31	FILM	0.47uF	5%	50V
*****						C157	1-126-960-11	ELECT	1uF	20%	50V
*****						C159	1-126-960-11	ELECT	1uF	20%	50V
*****						C160	1-126-960-11	ELECT	1uF	20%	50V
*****						C165	1-126-960-11	ELECT	1uF	20%	50V
*****						C166	1-126-960-11	ELECT	1uF	20%	50V
*****						C167	1-126-960-11	ELECT	1uF	20%	50V
*****						C169	1-126-960-11	ELECT	1uF	20%	50V
*****						C171	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
*****						C172	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
*****						C175	1-109-953-11	ELECT	2.2uF	20%	50V
*****						C176	1-126-964-11	ELECT	10uF	20%	50V
*****						C177	1-162-945-11	CERAMIC CHIP	22PF	5%	50V
*****						C178	1-126-947-11	ELECT	47uF	20%	35V
*****						C179	1-162-949-11	CERAMIC CHIP	47PF	5%	50V

C101	1-126-960-11	ELECT	1uF	20%	50V						
C102	1-126-960-11	ELECT	1uF	20%	50V						
C103	1-126-956-11	ELECT	0.1uF	20%	50V						
C104	1-126-956-11	ELECT	0.1uF	20%	50V						
C105	1-164-230-11	CERAMIC CHIP	220PF	5%	50V						
C106	1-131-679-31	FILM	0.01uF	5%	50V						
C107	1-126-964-11	ELECT	10uF	20%	50V						
C108	1-164-230-11	CERAMIC CHIP	220PF	5%	50V						
C109	1-131-679-31	FILM	0.01uF	5%	50V						
C110	1-126-964-11	ELECT	10uF	20%	50V						
C111	1-126-960-11	ELECT	1uF	20%	50V						
C112	1-126-960-11	ELECT	1uF	20%	50V						

CX-JN331/JPK331

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C181	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	C313	1-126-943-11	ELECT	2200uF	20%	25V
C183	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	C315	1-126-933-11	ELECT	100uF	20%	16V
C184	1-126-947-11	ELECT	47uF	20%	35V	C316	1-126-943-11	ELECT	2200uF	20%	25V
C185	1-126-964-11	ELECT	10uF	20%	50V	C318	1-126-933-11	ELECT	100uF	20%	16V
						C321	1-126-961-11	ELECT	2.2uF	20%	50V
C186	1-126-947-11	ELECT	47uF	20%	35V						
C187	1-162-974-11	CERAMIC CHIP	0.01uF		50V	C342	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C188	1-126-965-11	ELECT	22uF	20%	50V	C351	1-164-357-11	CERAMIC CHIP	0.001uF	5%	50V
C189	1-126-965-11	ELECT	22uF	20%	50V	C352	1-126-965-11	ELECT	22uF	20%	50V
C190	1-162-974-11	CERAMIC CHIP	0.01uF		50V	C353	1-126-961-11	ELECT	2.2uF	20%	50V
						C354	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C191	1-126-961-11	ELECT	2.2uF	20%	50V						
C192	1-126-961-11	ELECT	2.2uF	20%	50V	C371	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C193	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C372	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C206	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C373	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C211	1-109-953-11	ELECT	2.2uF	20%	50V	C374	1-126-947-11	ELECT	47uF	20%	35V
						C375	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C212	1-126-964-11	ELECT	10uF	20%	50V						
C213	1-126-964-11	ELECT	10uF	20%	50V	C376	1-126-961-11	ELECT	2.2uF	20%	50V
C214	1-126-926-11	ELECT	1000uF	20%	10V						
C216	1-164-156-11	CERAMIC CHIP	0.1uF		25V	< CONNECTOR >					
C217	1-164-156-11	CERAMIC CHIP	0.1uF		25V	CN101	1-568-830-11	CONNECTOR, FFC 11P			
						* CN103	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P			
C222	1-164-156-11	CERAMIC CHIP	0.1uF		25V	* CN112	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
C235	1-164-156-11	CERAMIC CHIP	0.1uF		25V	CN302	1-568-844-11	CONNECTOR, FFC 29P			
C241	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	CN307	1-778-982-21	CONNECTOR, BOARD TO BOARD 13P			
C242	1-130-479-00	MYLAR	0.0047uF	5%	50V						
C243	1-130-479-00	MYLAR	0.0047uF	5%	50V	CN309	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P			
					(JN331)	* CN324	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P			(JPK331: E51)
C243	1-131-681-31	FILM	0.015uF	5%	50V						
					(JPK331)	< DIODE >					
C244	1-131-681-31	FILM	0.015uF	5%	50V	D201	8-719-988-61	DIODE 1SS355TE-17			
C246	1-131-681-31	FILM	0.015uF	5%	50V	D211	8-719-988-61	DIODE 1SS355TE-17			
					(JPK331)	D212	8-719-988-61	DIODE 1SS355TE-17			
C246	1-136-157-00	FILM	0.022uF	5%	50V	D213	8-719-988-61	DIODE 1SS355TE-17			
					(JN331)	D214	8-719-988-61	DIODE 1SS355TE-17			
C248	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V						
C249	1-126-964-11	ELECT	10uF	20%	50V	D215	8-719-988-61	DIODE 1SS355TE-17			
C250	1-126-947-11	ELECT	47uF	20%	35V	D301	6-500-522-21	DIODE 10EDB40-TB3			
C251	1-126-947-11	ELECT	47uF	20%	35V	D302	6-500-522-21	DIODE 10EDB40-TB3			
C252	1-126-933-11	ELECT	100uF	20%	16V	D303	6-500-522-21	DIODE 10EDB40-TB3			
C253	1-126-956-11	ELECT	0.1uF	20%	50V	D304	6-500-522-21	DIODE 10EDB40-TB3			
C258	1-126-959-11	ELECT	0.47uF	20%	50V	D305	6-500-522-21	DIODE 10EDB40-TB3			
C259	1-126-957-11	ELECT	0.22uF	20%	50V	D306	6-500-522-21	DIODE 10EDB40-TB3			
C264	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V	D307	6-500-522-21	DIODE 10EDB40-TB3			
C265	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V	D308	6-500-522-21	DIODE 10EDB40-TB3			
C266	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V	D309	6-500-522-21	DIODE 10EDB40-TB3			
C267	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V	D310	6-500-522-21	DIODE 10EDB40-TB3			
C270	1-126-964-11	ELECT	10uF	20%	50V	D311	6-500-522-21	DIODE 10EDB40-TB3			
C274	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	D312	6-500-522-21	DIODE 10EDB40-TB3			
C275	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	D313	8-719-085-36	DIODE 11EQS04-TB5			
C301	1-136-165-00	FILM	0.1uF	5%	50V	D316	8-719-988-61	DIODE 1SS355TE-17			
C302	1-136-165-00	FILM	0.1uF	5%	50V	D321	8-719-988-61	DIODE 1SS355TE-17			
C303	1-136-165-00	FILM	0.1uF	5%	50V	D322	8-719-988-61	DIODE 1SS355TE-17			
C304	1-136-165-00	FILM	0.1uF	5%	50V	D324	6-500-522-21	DIODE 10EDB40-TB3			
C305	1-136-165-00	FILM	0.1uF	5%	50V	D325	6-500-522-21	DIODE 10EDB40-TB3			
C306	1-136-165-00	FILM	0.1uF	5%	50V	D326	6-500-522-21	DIODE 10EDB40-TB3			
C308	1-126-965-11	ELECT	22uF	20%	50V	< EARTH TERMINAL >					
C309	1-126-965-11	ELECT	22uF	20%	50V	EP101	1-537-771-21	TERMINAL BOARD, GROUND			
C310	1-126-936-11	ELECT	3300uF	20%	16V	EP301	1-537-771-21	TERMINAL BOARD, GROUND			
C311	1-126-964-11	ELECT	10uF	20%	50V						
C312	1-126-964-11	ELECT	10uF	20%	50V						

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< FERRITE BEAD >				R103	1-216-851-11	METAL CHIP 330K 5%	1/10W
FB201	1-216-864-11	SHORT CHIP 0		R104	1-216-835-11	METAL CHIP 15K 5%	1/10W
FB202	1-216-864-11	SHORT CHIP 0		R105	1-216-816-11	METAL CHIP 390 5%	1/10W
FB203	1-216-864-11	SHORT CHIP 0		R106	1-216-851-11	METAL CHIP 330K 5%	1/10W
FB204	1-216-864-11	SHORT CHIP 0		R107	1-216-835-11	METAL CHIP 15K 5%	1/10W
FB205	1-216-864-11	SHORT CHIP 0		R108	1-216-816-11	METAL CHIP 390 5%	1/10W
< IC >				R109	1-216-853-11	METAL CHIP 470K 5%	1/10W
IC101	6-705-852-01	IC BD3401KS2		R110	1-216-851-11	METAL CHIP 330K 5%	1/10W
IC102	8-759-710-97	IC NJM4565M-D		R111	1-216-843-11	METAL CHIP 68K 5%	1/10W (JN331)
IC201	8-759-508-69	IC BA3126N		R111	1-216-846-11	METAL CHIP 120K 5%	1/10W (JPK331)
IC301	6-702-771-01	IC TA78033LS		R112	1-216-853-11	METAL CHIP 470K 5%	1/10W
IC302	6-702-771-01	IC TA78033LS		R113	1-216-851-11	METAL CHIP 330K 5%	1/10W
IC303	8-759-701-59	IC NJM78M09FA		R114	1-216-843-11	METAL CHIP 68K 5%	1/10W (JN331)
IC304	8-759-701-59	IC NJM78M09FA		R114	1-216-846-11	METAL CHIP 120K 5%	1/10W (JPK331)
IC371	6-704-046-01	IC BU2099FV		R115	1-216-857-11	METAL CHIP 1M 5%	1/10W
< JACK >				R116	1-216-809-11	METAL CHIP 100 5%	1/10W
JK101	1-793-987-11	JACK, PIN 2P (VIDEO/MD IN)		R117	1-216-809-11	METAL CHIP 100 5%	1/10W
< COIL >				R119	1-216-841-11	METAL CHIP 47K 5%	1/10W
L101	1-424-849-11	COIL, OSCILLATION (BIAS) (JPK331)		R120	1-216-857-11	METAL CHIP 1M 5%	1/10W
L101	1-437-220-11	TRANSFORMER, BIAS OSCILLATION (JN331)		R121	1-216-841-11	METAL CHIP 47K 5%	1/10W
< TRANSISTOR >				R122	1-216-849-11	METAL CHIP 220K 5%	1/10W
Q101	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R127	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q102	6-550-580-01	TRANSISTOR 2SA1235TP-1F		R128	1-216-835-11	METAL CHIP 15K 5%	1/10W
Q103	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R129	1-216-841-11	METAL CHIP 47K 5%	1/10W
Q104	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R130	1-216-849-11	METAL CHIP 220K 5%	1/10W
Q105	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R131	1-216-835-11	METAL CHIP 15K 5%	1/10W
Q106	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R132	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q107	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R133	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q304	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R134	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q305	6-550-580-01	TRANSISTOR 2SA1235TP-1F		R135	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q306	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R136	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q307	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R137	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q308	6-550-580-01	TRANSISTOR 2SA1235TP-1F		R138	1-216-821-11	METAL CHIP 1K 5%	1/10W
Q309	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R139	1-216-864-11	SHORT CHIP 0 (JN331/JPK331: MX)	
Q312	8-729-037-13	TRANSISTOR KTA1271Y		R140	1-216-821-11	METAL CHIP 1K 5%	1/10W (JPK331: E51)
Q313	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R143	1-216-821-11	METAL CHIP 1K 5%	1/10W
Q314	6-550-580-01	TRANSISTOR 2SA1235TP-1F		R144	1-216-821-11	METAL CHIP 1K 5%	1/10W
Q315	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R145	1-216-845-11	METAL CHIP 100K 5%	1/10W
Q321	8-729-142-46	TRANSISTOR 2SC2001-LK		R146	1-216-845-11	METAL CHIP 100K 5%	1/10W
Q322	6-550-580-01	TRANSISTOR 2SA1235TP-1F		R151	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q323	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R152	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q324	8-729-037-13	TRANSISTOR KTA1271Y		R153	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q327	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R154	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q351	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R155	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q352	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R156	1-216-853-11	METAL CHIP 470K 5%	1/10W
Q361	6-550-580-01	TRANSISTOR 2SA1235TP-1F		R157	1-216-841-11	METAL CHIP 47K 5%	1/10W
Q362	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R158	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
Q372	8-729-120-28	TRANSISTOR 2SC1623-L5L6	(JPK331: E51)	R159	1-216-833-11	METAL CHIP 10K 5%	1/10W
< RESISTOR >				R160	1-216-821-11	METAL CHIP 1K 5%	1/10W
R101	1-216-833-11	METAL CHIP 10K 5%	1/10W	R161	1-216-833-11	METAL CHIP 10K 5%	1/10W
R102	1-216-833-11	METAL CHIP 10K 5%	1/10W	R162	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
				R163	1-216-833-11	METAL CHIP 10K 5%	1/10W
				R164	1-216-821-11	METAL CHIP 1K 5%	1/10W

CX-JN331/JPK331

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R165	1-216-833-11	METAL CHIP	10K	5%	1/10W	R245	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R166	1-216-833-11	METAL CHIP	10K	5%	1/10W	R246	1-216-809-11	METAL CHIP	100	5%	1/10W
R167	1-216-837-11	METAL CHIP	22K	5%	1/10W	R247	1-216-833-11	METAL CHIP	10K	5%	1/10W
R168	1-216-845-11	METAL CHIP	100K	5%	1/10W	R248	1-216-833-11	METAL CHIP	10K	5%	1/10W
R169	1-216-845-11	METAL CHIP	100K	5%	1/10W	R249	1-216-841-11	METAL CHIP	47K	5%	1/10W
R170	1-216-833-11	METAL CHIP	10K	5%	1/10W	R250	1-216-833-11	METAL CHIP	10K	5%	1/10W
R171	1-216-837-11	METAL CHIP	22K	5%	1/10W	R251	1-216-833-11	METAL CHIP	10K	5%	1/10W
R172	1-216-809-11	METAL CHIP	100	5%	1/10W	R252	1-216-807-11	METAL CHIP	68	5%	1/10W
R173	1-216-833-11	METAL CHIP	10K	5%	1/10W						(JN331)
R174	1-216-833-11	METAL CHIP	10K	5%	1/10W	R252	1-216-864-11	SHORT CHIP	0 (JPK331)		
R175	1-216-833-11	METAL CHIP	10K	5%	1/10W	R253	1-216-809-11	METAL CHIP	100	5%	1/10W
R176	1-216-849-11	METAL CHIP	220K	5%	1/10W	R254	1-216-809-11	METAL CHIP	100	5%	1/10W
R177	1-216-849-11	METAL CHIP	220K	5%	1/10W	R262	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R194	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R263	1-216-857-11	METAL CHIP	1M	5%	1/10W
R194	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R264	1-216-821-11	METAL CHIP	1K	5%	1/10W
					(JPK331)	R265	1-216-833-11	METAL CHIP	10K	5%	1/10W
R195	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R266	1-216-845-11	METAL CHIP	100K	5%	1/10W
R195	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R272	1-216-853-11	METAL CHIP	470K	5%	1/10W
					(JPK331)	R273	1-216-864-11	SHORT CHIP	0		
R197	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R274	1-216-864-11	SHORT CHIP	0		
R198	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R275	1-216-864-11	SHORT CHIP	0		
R201	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R280	1-216-797-11	METAL CHIP	10	5%	1/10W
R202	1-216-833-11	METAL CHIP	10K	5%	1/10W						(JPK331: E51)
R203	1-216-833-11	METAL CHIP	10K	5%	1/10W	R281	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R204	1-216-833-11	METAL CHIP	10K	5%	1/10W	R282	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R205	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R283	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R206	1-216-841-11	METAL CHIP	47K	5%	1/10W	R284	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R207	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R306	1-216-833-11	METAL CHIP	10K	5%	1/10W
R208	1-216-821-11	METAL CHIP	1K	5%	1/10W	R307	1-216-833-11	METAL CHIP	10K	5%	1/10W
R209	1-216-833-11	METAL CHIP	10K	5%	1/10W	R308	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R210	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R310	1-216-833-11	METAL CHIP	10K	5%	1/10W
R211	1-216-821-11	METAL CHIP	1K	5%	1/10W	R311	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R212	1-216-833-11	METAL CHIP	10K	5%	1/10W	R312	1-216-837-11	METAL CHIP	22K	5%	1/10W
R213	1-216-821-11	METAL CHIP	1K	5%	1/10W	R313	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R214	1-216-821-11	METAL CHIP	1K	5%	1/10W	R321	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R216	1-216-806-11	METAL CHIP	56	5%	1/10W	R322	1-216-837-11	METAL CHIP	22K	5%	1/10W
R217	1-216-806-11	METAL CHIP	56	5%	1/10W	R323	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
△ R218	1-215-891-11	METAL OXIDE	680	5%	2W F	R324	1-216-833-11	METAL CHIP	10K	5%	1/10W
△ R219	1-215-891-11	METAL OXIDE	680	5%	2W F	R325	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R220	1-216-837-11	METAL CHIP	22K	5%	1/10W	R341	1-216-833-11	METAL CHIP	10K	5%	1/10W
R221	1-216-837-11	METAL CHIP	22K	5%	1/10W	R342	1-216-821-11	METAL CHIP	1K	5%	1/10W
R222	1-216-830-11	METAL CHIP	5.6K	5%	1/10W	R343	1-216-837-11	METAL CHIP	22K	5%	1/10W
R223	1-216-864-11	SHORT CHIP	0			R344	1-216-837-11	METAL CHIP	22K	5%	1/10W
R231	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R345	1-216-833-11	METAL CHIP	10K	5%	1/10W
R232	1-216-833-11	METAL CHIP	10K	5%	1/10W	R346	1-216-821-11	METAL CHIP	1K	5%	1/10W
R241	1-216-801-11	METAL CHIP	22	5%	1/10W	R347	1-216-837-11	METAL CHIP	22K	5%	1/10W
R242	1-216-837-11	METAL CHIP	22K	5%	1/10W	R348	1-216-837-11	METAL CHIP	22K	5%	1/10W
					(JN331)	R351	1-216-835-11	METAL CHIP	15K	5%	1/10W
R242	1-216-838-11	METAL CHIP	27K	5%	1/10W	R352	1-216-845-11	METAL CHIP	100K	5%	1/10W
					(JPK331)	R353	1-216-841-11	METAL CHIP	47K	5%	1/10W
R243	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	R354	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
					(JPK331)	R356	1-216-817-11	METAL CHIP	470	5%	1/10W
R243	1-216-833-11	METAL CHIP	10K	5%	1/10W	R357	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
					(JN331)	R358	1-216-809-11	METAL CHIP	100	5%	1/10W
R244	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	R361	1-216-833-11	METAL CHIP	10K	5%	1/10W
					(JPK331)	R362	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R244	1-216-833-11	METAL CHIP	10K	5%	1/10W	R363	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
					(JN331)						

MAIN

MIC JACK

MOTOR (LD)

MOTOR (TB)

PANEL

Ref. No.	Part No.	Description	Remark
R364	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R371	1-216-809-11	METAL CHIP 100 5%	1/10W
R372	1-216-809-11	METAL CHIP 100 5%	1/10W
R373	1-216-809-11	METAL CHIP 100 5%	1/10W
R374	1-216-833-11	METAL CHIP 10K 5%	1/10W
R375	1-216-833-11	METAL CHIP 10K 5%	1/10W
R376	1-216-833-11	METAL CHIP 10K 5%	1/10W
R377	1-216-833-11	METAL CHIP 10K 5%	1/10W
R378	1-216-833-11	METAL CHIP 10K 5%	1/10W
R379	1-216-833-11	METAL CHIP 10K 5%	1/10W
R380	1-216-833-11	METAL CHIP 10K 5%	1/10W
R381	1-216-833-11	METAL CHIP 10K 5%	1/10W
R382	1-216-833-11	METAL CHIP 10K 5%	1/10W
R383	1-216-833-11	METAL CHIP 10K 5%	1/10W
R384	1-216-833-11	METAL CHIP 10K 5%	1/10W
R385	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R386	1-216-837-11	METAL CHIP 22K 5%	1/10W
R387	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R388	1-216-837-11	METAL CHIP 22K 5%	1/10W
R389	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R390	1-216-837-11	METAL CHIP 22K 5%	1/10W
R391	1-216-833-11	METAL CHIP 10K 5%	1/10W
R392	1-216-821-11	METAL CHIP 1K 5%	1/10W
R393	1-216-833-11	METAL CHIP 10K 5%	1/10W
R394	1-216-821-11	METAL CHIP 1K 5%	1/10W
R395	1-216-837-11	METAL CHIP 22K 5%	1/10W
R398	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R399	1-216-833-11	METAL CHIP 10K 5%	(JPK331: E51)

MIC JACK BOARD (JPK331: E51)			

< CAPACITOR >			
C805	1-165-112-11	CERAMIC CHIP 0.33uF	16V
< CONNECTOR >			
CN802	1-784-766-11	CONNECTOR, FFC 5P	
< JACK >			
J802	1-770-226-11	JACK (LARGE TYPE) (MIC)	

	1-687-133-12	MOTOR (LD) BOARD	

	1-687-134-12	MOTOR (TB) BOARD	

< CONNECTOR >			
CN742	1-784-727-11	CONNECTOR, FFC 5P	

Ref. No.	Part No.	Description	Remark
	A-1113-356-A	PANEL BOARD, COMPLETE (JN331)	
	A-1113-384-A	PANEL BOARD, COMPLETE (JPK331: E51)	
	A-1113-402-A	PANEL BOARD, COMPLETE (JPK331: MX)	

< CAPACITOR >			
C601	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
C602	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
C603	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
C604	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C605	1-126-963-11	ELECT 4.7uF 20%	50V
C606	1-115-156-11	CERAMIC CHIP 1uF	10V
C607	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C608	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C609	1-115-156-11	CERAMIC CHIP 1uF	10V
C610	1-126-916-11	ELECT 1000uF 20%	6.3V
C611	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C612	1-126-964-11	ELECT 10uF 20%	50V
C613	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C614	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C615	1-126-961-11	ELECT 2.2uF 20%	50V
C617	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C618	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C619	1-126-947-11	ELECT 47uF 20%	35V
C620	1-126-947-11	ELECT 47uF 20%	35V
C621	1-162-995-11	CERAMIC CHIP 0.022uF	50V
C622	1-126-963-11	ELECT 4.7uF 20%	50V
C623	1-126-963-11	ELECT 4.7uF 20%	50V
C624	1-162-918-11	CERAMIC CHIP 18PF 5%	50V
C625	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
C626	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C628	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C629	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C630	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C631	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C632	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C633	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C634	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C635	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C636	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C637	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C638	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C639	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C640	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C641	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C642	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C643	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C644	1-126-964-11	ELECT 10uF 20%	50V
C646	1-104-662-91	ELECT 22uF 20%	25V
C648	1-104-662-91	ELECT 22uF 20%	25V
C649	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C650	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C651	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C653	1-162-959-11	CERAMIC CHIP 330PF 5%	50V
C656	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C811	1-131-681-31	FILM 0.015uF 5%	50V
(JPK331: E51)			

CX-JN331/JPK331

PANEL

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C812	1-124-463-00	ELECT	0.1uF 20% 50V (JPK331: E51)	D627	8-719-988-61	DIODE 1SS355TE-17 (JPK331: MX)	
C813	1-124-261-00	ELECT	10uF 20% 50V (JPK331: E51)	D628	8-719-988-61	DIODE 1SS355TE-17	
C814	1-124-261-00	ELECT	10uF 20% 50V (JPK331: E51)	D630	8-719-988-61	DIODE 1SS355TE-17	
C815	1-124-257-00	ELECT	2.2uF 20% 50V (JPK331: E51)	D631	8-719-978-33	DIODE DTZ-TT11-6.8B	
C816	1-124-257-00	ELECT	2.2uF 20% 50V (JPK331: E51)	D632	8-719-083-57	DIODE UDZSTE-173.6B	
C817	1-124-584-00	ELECT	100uF 20% 10V (JPK331: E51)	D633	8-719-988-61	DIODE 1SS355TE-17	
C818	1-124-584-00	ELECT	100uF 20% 10V (JPK331: E51)	< JUMPER RESISTOR >			
C819	1-162-927-11	CERAMIC CHIP	100PF 5% 50V (JPK331: E51)	FB601	1-216-864-11	SHORT CHIP 0	
C820	1-162-923-11	CERAMIC CHIP	47PF 5% 50V (JPK331: E51)	< FLUORESCENT INDICATOR >			
C821	1-164-156-11	CERAMIC CHIP	0.1uF 25V (JPK331: E51)	FL601	1-518-977-11	INDICATOR TUBE, FLUORESCENT	
C822	1-164-315-11	CERAMIC CHIP	470PF 5% 50V (JPK331: E51)	< IC >			
C823	1-115-416-11	CERAMIC CHIP	0.001uF 5% 25V (JPK331: E51)	IC601	6-805-469-01	IC LC876A96A-55D8-E	
C824	1-115-416-11	CERAMIC CHIP	0.001uF 5% 25V (JPK331: E51)	IC602	6-704-046-01	IC BU2099FV	
C825	1-164-816-11	CERAMIC CHIP	220PF 2% 50V (JPK331: E51)	IC603	6-704-045-01	IC MM1574ANLE	
C829	1-124-261-00	ELECT	10uF 20% 50V (JPK331: E51)	IC604	8-759-533-04	IC M62703ML-E1	
C830	1-124-261-00	ELECT	10uF 20% 50V (JPK331: E51)	IC610	6-600-174-01	IC RPM7240-H4	
C862	1-164-245-11	CERAMIC CHIP	0.015uF 10% 25V (JPK331: E51)	IC801	8-759-710-97	IC NJM4565M-D (JPK331: E51)	
< CONNECTOR >				< JUMPER RESISTOR >			
CN601	1-568-844-11	CONNECTOR, FFC 29P		JR601	1-216-296-11	SHORT CHIP 0	
CN602	1-784-735-11	CONNECTOR, FFC 13P		JR602	1-216-864-11	SHORT CHIP 0	
CN603	1-784-778-11	CONNECTOR, FFC 17P		JR603	1-216-864-11	SHORT CHIP 0	
CN801	1-784-766-11	CONNECTOR, FFC 5P (JPK331: E51)		JR607	1-216-864-11	SHORT CHIP 0	
< DIODE >				JR608	1-216-864-11	SHORT CHIP 0	
D603	8-719-988-61	DIODE 1SS355TE-17		JR609	1-216-864-11	SHORT CHIP 0	
D604	8-719-988-61	DIODE 1SS355TE-17		JR610	1-216-296-11	SHORT CHIP 0	
D605	8-719-988-61	DIODE 1SS355TE-17		JR611	1-216-864-11	SHORT CHIP 0	
* D606	6-500-486-01	DIODE PTZ-TE25-11B		JR612	1-216-864-11	SHORT CHIP 0	
D607	8-719-988-61	DIODE 1SS355TE-17		JR614	1-216-864-11	SHORT CHIP 0	
D608	8-719-988-61	DIODE 1SS355TE-17		JR615	1-216-864-11	SHORT CHIP 0	
D609	8-719-988-61	DIODE 1SS355TE-17		JR617	1-216-864-11	SHORT CHIP 0	
D610	8-719-056-78	DIODE UDZ-TE-17-4.3B		JR621	1-216-864-11	SHORT CHIP 0	
D611	8-719-988-61	DIODE 1SS355TE-17		JR622	1-216-864-11	SHORT CHIP 0	
D613	8-719-988-61	DIODE 1SS355TE-17		JR624	1-216-864-11	SHORT CHIP 0	
D614	8-719-988-61	DIODE 1SS355TE-17		JR626	1-216-864-11	SHORT CHIP 0	
D615	8-719-988-61	DIODE 1SS355TE-17		JR627	1-216-864-11	SHORT CHIP 0	
D616	8-719-988-61	DIODE 1SS355TE-17		JR628	1-216-864-11	SHORT CHIP 0	
D620	8-719-988-61	DIODE 1SS355TE-17 (JPK331)		JR629	1-216-864-11	SHORT CHIP 0	
D621	8-719-988-61	DIODE 1SS355TE-17 (JPK331)		JR801	1-216-296-11	SHORT CHIP 0 (JPK331: E51)	
D623	8-719-988-61	DIODE 1SS355TE-17 (JPK331)		JR803	1-216-296-11	SHORT CHIP 0 (JPK331: E51)	
D624	8-719-988-61	DIODE 1SS355TE-17 (JN331)		< LED >			
D625	8-719-988-61	DIODE 1SS355TE-17 (JN331)		LED601	8-719-063-93	LED SLR325VC-N-T32 (I/⌚)	
D626	8-719-988-61	DIODE 1SS355TE-17 (JPK331: MX)		LED602	6-500-810-01	LED SELU5923C-STP15 (i-BASS)	
				< TRANSISTOR >			
				Q601	8-729-040-76	TRANSISTOR KTA1273-Y-AT	
				Q602	8-729-037-13	TRANSISTOR KTA1271Y	
				Q603	8-729-037-13	TRANSISTOR KTA1271Y	
				Q604	8-729-119-76	TRANSISTOR 2SA1175-HFE	
				Q605	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
				Q609	8-729-027-55	TRANSISTOR DTC143EKA-T146	
				Q616	8-729-027-55	TRANSISTOR DTC143EKA-T146	

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark	
Q801	8-729-120-28	TRANSISTOR	2SC1623-L5L6	(JPK331: E51)			R656	1-216-823-11	METAL CHIP	1.5K	5%	1/10W		
									R657	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
Q802	8-729-120-28	TRANSISTOR	2SC1623-L5L6						R658	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
< RESISTOR >														
R601	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R659	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		
R602	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R660	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		
R603	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R661	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		
R604	1-216-841-11	METAL CHIP	47K	5%	1/10W		R662	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R605	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R664	1-216-817-11	METAL CHIP	470	5%	1/10W		
R606	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R665	1-216-819-11	METAL CHIP	680	5%	1/10W		
R607	1-216-841-11	METAL CHIP	47K	5%	1/10W		R666	1-216-821-11	METAL CHIP	1K	5%	1/10W		
R608	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R667	1-216-823-11	METAL CHIP	1.5K	5%	1/10W		
R609	1-216-837-11	METAL CHIP	22K	5%	1/10W		R668	1-216-823-11	METAL CHIP	1.5K	5%	1/10W		
R610	1-216-833-11	METAL CHIP	10K	5%	1/10W		R669	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		
R611	1-216-837-11	METAL CHIP	22K	5%	1/10W		R670	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		
R612	1-216-833-11	METAL CHIP	10K	5%	1/10W		R671	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		
R613	1-216-837-11	METAL CHIP	22K	5%	1/10W		R672	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		
R614	1-216-837-11	METAL CHIP	22K	5%	1/10W		R673	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R615	1-216-837-11	METAL CHIP	22K	5%	1/10W		R674	1-216-835-11	METAL CHIP	15K	5%	1/10W		
R616	1-216-833-11	METAL CHIP	10K	5%	1/10W		R675	1-216-835-11	METAL CHIP	15K	5%	1/10W		
R617	1-216-837-11	METAL CHIP	22K	5%	1/10W		R676	1-216-835-11	METAL CHIP	15K	5%	1/10W		
R618	1-216-833-11	METAL CHIP	10K	5%	1/10W		R677	1-216-864-11	SHORT CHIP	0				
R619	1-216-837-11	METAL CHIP	22K	5%	1/10W		R678	1-216-845-11	METAL CHIP	100K	5%	1/10W		
R620	1-216-837-11	METAL CHIP	22K	5%	1/10W		R679	1-216-162-00	RES-CHIP	33	5%	1/8W		
R621	1-216-833-11	METAL CHIP	10K	5%	1/10W		R680	1-216-838-11	METAL CHIP	27K	5%	1/10W		
R622	1-216-049-11	RES-CHIP	1K	5%	1/10W		R681	1-216-849-11	METAL CHIP	220K	5%	1/10W		
R623	1-216-833-11	METAL CHIP	10K	5%	1/10W		R682	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R624	1-216-049-11	RES-CHIP	1K	5%	1/10W		R683	1-216-849-11	METAL CHIP	220K	5%	1/10W		
R625	1-216-833-11	METAL CHIP	10K	5%	1/10W		R684	1-216-821-11	METAL CHIP	1K	5%	1/10W		
R626	1-216-049-11	RES-CHIP	1K	5%	1/10W		R685	1-216-841-11	METAL CHIP	47K	5%	1/10W		
R627	1-216-833-11	METAL CHIP	10K	5%	1/10W		R686	1-216-841-11	METAL CHIP	47K	5%	1/10W		
R628	1-216-833-11	METAL CHIP	10K	5%	1/10W		R687	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R629	1-216-150-11	RES-CHIP	10	5%	1/8W		R688	1-216-817-11	METAL CHIP	470	5%	1/10W		
R632	1-216-809-11	METAL CHIP	100	5%	1/10W		R689	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		
R633	1-216-809-11	METAL CHIP	100	5%	1/10W		R690	1-216-809-11	METAL CHIP	100	5%	1/10W		
R634	1-216-809-11	METAL CHIP	100	5%	1/10W		R691	1-216-809-11	METAL CHIP	100	5%	1/10W		
R635	1-216-809-11	METAL CHIP	100	5%	1/10W		R692	1-216-809-11	METAL CHIP	100	5%	1/10W		
R636	1-216-833-11	METAL CHIP	10K	5%	1/10W		R693	1-216-809-11	METAL CHIP	100	5%	1/10W		
R637	1-216-833-11	METAL CHIP	10K	5%	1/10W		R694	1-216-809-11	METAL CHIP	100	5%	1/10W		
R638	1-216-809-11	METAL CHIP	100	5%	1/10W		R695	1-216-809-11	METAL CHIP	100	5%	1/10W		
R639	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R696	1-216-809-11	METAL CHIP	100	5%	1/10W		
R640	1-216-834-11	METAL CHIP	12K	5%	1/10W		R697	1-216-809-11	METAL CHIP	100	5%	1/10W		
R641	1-216-849-11	METAL CHIP	220K	5%	1/10W		R701	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R642	1-216-817-11	METAL CHIP	470	5%	1/10W		R702	1-216-797-11	METAL CHIP	10	5%	1/10W		
R643	1-216-819-11	METAL CHIP	680	5%	1/10W		R703	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R644	1-216-821-11	METAL CHIP	1K	5%	1/10W		R704	1-216-797-11	METAL CHIP	10	5%	1/10W		
R645	1-216-823-11	METAL CHIP	1.5K	5%	1/10W		R705	1-216-809-11	METAL CHIP	100	5%	1/10W		
R646	1-216-823-11	METAL CHIP	1.5K	5%	1/10W		R706	1-216-809-11	METAL CHIP	100	5%	1/10W		
R647	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		R707	1-216-182-00	RES-CHIP	220	5%	1/8W		
R648	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		R708	1-216-182-00	RES-CHIP	220	5%	1/8W		
R649	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R710	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R650	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		R711	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R651	1-216-833-11	METAL CHIP	10K	5%	1/10W		R712	1-216-797-11	METAL CHIP	10	5%	1/10W		
R653	1-216-817-11	METAL CHIP	470	5%	1/10W		R713	1-216-797-11	METAL CHIP	10	5%	1/10W		
R654	1-216-819-11	METAL CHIP	680	5%	1/10W		R714	1-216-809-11	METAL CHIP	100	5%	1/10W		
R655	1-216-821-11	METAL CHIP	1K	5%	1/10W		R715	1-216-805-11	METAL CHIP	47	5%	1/10W		
							R716	1-216-837-11	METAL CHIP	22K	5%	1/10W		
							R717	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		
							R718	1-216-837-11	METAL CHIP	22K	5%	1/10W		

CX-JN331/JPK331

PANEL

Ref. No.	Part No.	Description			Remark
R719	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R723	1-216-809-11	METAL CHIP	100	5%	1/10W
R725	1-216-809-11	METAL CHIP	100	5%	1/10W
R726	1-216-833-11	METAL CHIP	10K	5%	1/10W
R727	1-220-397-11	METAL CHIP	4.7M	5%	1/10W
R728	1-220-397-11	METAL CHIP	4.7M	5%	1/10W
R729	1-216-809-11	METAL CHIP	100	5%	1/10W
R730	1-216-809-11	METAL CHIP	100	5%	1/10W
R731	1-216-809-11	METAL CHIP	100	5%	1/10W
R732	1-216-853-11	METAL CHIP	470K	5%	1/10W
R733	1-216-809-11	METAL CHIP	100	5%	1/10W
R734	1-216-821-11	METAL CHIP	1K	5%	1/10W
R735	1-216-821-11	METAL CHIP	1K	5%	1/10W
R736	1-216-821-11	METAL CHIP	1K	5%	1/10W
R737	1-216-845-11	METAL CHIP	100K	5%	1/10W
R738	1-216-845-11	METAL CHIP	100K	5%	1/10W
R739	1-216-845-11	METAL CHIP	100K	5%	1/10W
R740	1-216-845-11	METAL CHIP	100K	5%	1/10W
R741	1-216-845-11	METAL CHIP	100K	5%	1/10W
R742	1-216-845-11	METAL CHIP	100K	5%	1/10W
R743	1-216-845-11	METAL CHIP	100K	5%	1/10W
R744	1-216-845-11	METAL CHIP	100K	5%	1/10W
R745	1-216-845-11	METAL CHIP	100K	5%	1/10W
R746	1-216-845-11	METAL CHIP	100K	5%	1/10W
R747	1-216-845-11	METAL CHIP	100K	5%	1/10W
R748	1-216-845-11	METAL CHIP	100K	5%	1/10W
R749	1-216-845-11	METAL CHIP	100K	5%	1/10W
R750	1-216-845-11	METAL CHIP	100K	5%	1/10W
R751	1-216-845-11	METAL CHIP	100K	5%	1/10W
R752	1-216-845-11	METAL CHIP	100K	5%	1/10W
R753	1-216-845-11	METAL CHIP	100K	5%	1/10W
R754	1-216-845-11	METAL CHIP	100K	5%	1/10W
R755	1-216-845-11	METAL CHIP	100K	5%	1/10W
R756	1-216-845-11	METAL CHIP	100K	5%	1/10W
R757	1-216-845-11	METAL CHIP	100K	5%	1/10W
R758	1-216-845-11	METAL CHIP	100K	5%	1/10W
R759	1-216-845-11	METAL CHIP	100K	5%	1/10W
R760	1-216-845-11	METAL CHIP	100K	5%	1/10W
R761	1-216-845-11	METAL CHIP	100K	5%	1/10W
R762	1-216-845-11	METAL CHIP	100K	5%	1/10W
R763	1-216-845-11	METAL CHIP	100K	5%	1/10W
R764	1-216-845-11	METAL CHIP	100K	5%	1/10W
R765	1-216-845-11	METAL CHIP	100K	5%	1/10W
R766	1-216-845-11	METAL CHIP	100K	5%	1/10W
R767	1-216-845-11	METAL CHIP	100K	5%	1/10W
R768	1-216-845-11	METAL CHIP	100K	5%	1/10W
R769	1-216-845-11	METAL CHIP	100K	5%	1/10W
R770	1-216-845-11	METAL CHIP	100K	5%	1/10W
R771	1-216-841-11	METAL CHIP	47K	5%	1/10W
R772	1-216-813-11	METAL CHIP	220	5%	1/10W
R773	1-216-809-11	METAL CHIP	100	5%	1/10W
R774	1-216-809-11	METAL CHIP	100	5%	1/10W
R775	1-216-809-11	METAL CHIP	100	5%	1/10W
R776	1-216-817-11	METAL CHIP	470	5%	1/10W
R777	1-216-809-11	METAL CHIP	100	5%	1/10W
R778	1-216-809-11	METAL CHIP	100	5%	1/10W
R779	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description			Remark
R780	1-216-817-11	METAL CHIP	470	5%	1/10W
R781	1-216-809-11	METAL CHIP	100	5%	1/10W
R782	1-216-809-11	METAL CHIP	100	5%	1/10W
R783	1-216-809-11	METAL CHIP	100	5%	1/10W
R784	1-216-809-11	METAL CHIP	100	5%	1/10W
R785	1-216-809-11	METAL CHIP	100	5%	1/10W
R786	1-216-833-11	METAL CHIP	10K	5%	1/10W
R787	1-216-809-11	METAL CHIP	100	5%	1/10W
R788	1-216-809-11	METAL CHIP	100	5%	1/10W
R790	1-216-821-11	METAL CHIP	1K	5%	1/10W
R791	1-216-809-11	METAL CHIP	100	5%	1/10W
R792	1-216-809-11	METAL CHIP	100	5%	1/10W
R793	1-216-809-11	METAL CHIP	100	5%	1/10W
R794	1-216-809-11	METAL CHIP	100	5%	1/10W
R795	1-216-809-11	METAL CHIP	100	5%	1/10W
R796	1-216-809-11	METAL CHIP	100	5%	1/10W
R797	1-216-821-11	METAL CHIP	1K	5%	1/10W
R798	1-216-821-11	METAL CHIP	1K	5%	1/10W
R799	1-216-821-11	METAL CHIP	1K	5%	1/10W
R801	1-216-821-11	METAL CHIP	1K	5%	1/10W (JPK331: E51)
R807	1-216-833-11	METAL CHIP	10K	5%	1/10W (JPK331: E51)
R808	1-216-845-11	METAL CHIP	100K	5%	1/10W (JPK331: E51)
R809	1-216-821-11	METAL CHIP	1K	5%	1/10W (JPK331: E51)
R810	1-216-837-11	METAL CHIP	22K	5%	1/10W (JPK331: E51)
R811	1-216-809-11	METAL CHIP	100	5%	1/10W (JPK331: E51)
R812	1-216-845-11	METAL CHIP	100K	5%	1/10W (JPK331: E51)
R813	1-216-809-11	METAL CHIP	100	5%	1/10W (JPK331: E51)
R814	1-216-849-11	METAL CHIP	220K	5%	1/10W (JPK331: E51)
R815	1-216-833-11	METAL CHIP	10K	5%	1/10W (JPK331: E51)
R816	1-216-833-11	METAL CHIP	10K	5%	1/10W (JPK331: E51)
R817	1-216-821-11	METAL CHIP	1K	5%	1/10W (JPK331: E51)
R818	1-216-834-11	METAL CHIP	12K	5%	1/10W (JPK331: E51)
R821	1-216-833-11	METAL CHIP	10K	5%	1/10W (JPK331: E51)
R830	1-216-845-11	METAL CHIP	100K	5%	1/10W (JPK331: E51)
R831	1-216-845-11	METAL CHIP	100K	5%	1/10W (JPK331: E51)
R854	1-216-813-11	METAL CHIP	220	5%	1/10W
R863	1-216-162-00	RES-CHIP	33	5%	1/8W
R864	1-216-162-00	RES-CHIP	33	5%	1/8W
< SWITCH >					
S601	1-762-875-21	SWITCH, KEYBOARD (I/⏏)			
S602	1-762-875-21	SWITCH, KEYBOARD (DISPLAY)			
S603	1-762-875-21	SWITCH, KEYBOARD (ENTER)			
S604	1-762-875-21	SWITCH, KEYBOARD (DISC 1)			
S605	1-762-875-21	SWITCH, KEYBOARD (DISC 2)			

PANEL

POWER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
S606	1-762-875-21	SWITCH, KEYBOARD (DISC 3)		C441	1-126-964-11	ELECT 10uF 20% 50V	
S607	1-762-875-21	SWITCH, KEYBOARD (DISC SKIP, EX-CHANGE)		C442	1-126-964-11	ELECT 10uF 20% 50V	
S608	1-762-875-21	SWITCH, KEYBOARD (▲)		C443	1-162-294-31	CERAMIC 0.001uF 10% 50V	
S609	1-762-875-21	SWITCH, KEYBOARD (SURROUND)		C444	1-162-294-31	CERAMIC 0.001uF 10% 50V	
S610	1-762-875-21	SWITCH, KEYBOARD (PLAY MODE/TUNING MODE)		C445	1-162-282-31	CERAMIC 100PF 10% 50V	
S621	1-762-875-21	SWITCH, KEYBOARD (CD)		C446	1-162-282-31	CERAMIC 100PF 10% 50V	
S622	1-762-875-21	SWITCH, KEYBOARD (TUNER/BAND)		C447	1-126-965-11	ELECT 22uF 20% 50V	
S623	1-762-875-21	SWITCH, KEYBOARD (TAPE A/B)		C448	1-126-965-11	ELECT 22uF 20% 50V	
S624	1-762-875-21	SWITCH, KEYBOARD (VIDEO (MD))		C451	1-136-497-81	FILM 0.1uF 5% 50V	
S625	1-762-875-21	SWITCH, KEYBOARD (P FILE)		C452	1-136-497-81	FILM 0.1uF 5% 50V	
S626	1-762-875-21	SWITCH, KEYBOARD (TREBLE -)		C453	1-136-497-81	FILM 0.1uF 5% 50V	
S627	1-762-875-21	SWITCH, KEYBOARD (TREBLE +)		C454	1-136-497-81	FILM 0.1uF 5% 50V	
S628	1-762-875-21	SWITCH, KEYBOARD (MIDDLE -)		C481	1-104-665-11	ELECT 100uF 20% 25V	
S629	1-762-875-21	SWITCH, KEYBOARD (MIDDLE +)		C486	1-126-961-11	ELECT 2.2uF 20% 50V	
S630	1-762-875-21	SWITCH, KEYBOARD (BASS -)		C487	1-126-963-11	ELECT 4.7uF 20% 50V	
S641	1-762-875-21	SWITCH, KEYBOARD (▶▶ ALBUM +)		C488	1-126-965-11	ELECT 22uF 20% 50V	
S642	1-762-875-21	SWITCH, KEYBOARD (■)		C489	1-128-563-11	ELECT 100uF 20% 100V	
S643	1-762-875-21	SWITCH, KEYBOARD (<▶) (JN331)		C492	1-162-306-11	CERAMIC 0.01uF 20% 16V	
S643	1-762-875-21	SWITCH, KEYBOARD (▶) (JPK331)				< CONNECTOR >	
S644	1-762-875-21	SWITCH, KEYBOARD (■)		CN441	1-778-981-21	CONNECTOR, BOARD TO BOARD 13P	
S645	1-762-875-21	SWITCH, KEYBOARD (m ALBUM -)				< DIODE >	
S646	1-762-875-21	SWITCH, KEYBOARD (REC/PAUSE/START)		D401	6-500-360-01	DIODE D10XB20	
S647	1-762-875-21	SWITCH, KEYBOARD (CD SYNC)		D441	8-719-991-33	DIODE 1SS133T-77	
S648	1-762-875-21	SWITCH, KEYBOARD (i-BASS)		D442	8-719-991-33	DIODE 1SS133T-77	
S649	1-762-875-21	SWITCH, KEYBOARD (PRESET EQ)		D443	8-719-991-33	DIODE 1SS133T-77	
S650	1-762-875-21	SWITCH, KEYBOARD (BASS +)		D481	8-719-991-33	DIODE 1SS133T-77	
S660	1-786-417-11	SW, RTRY RE012307PVB30F (VOLUME)		D482	8-719-991-33	DIODE 1SS133T-77	
S661	1-786-418-11	SWITCH, ROTARY (ENCODER) (AMS/TUNING)		D483	8-719-991-33	DIODE 1SS133T-77	
		< VARIABLE RESISTOR >				< EARTH TERMINAL >	
VR801	1-227-656-11	RES, VAR 50K (ROTATIONAL TYPE) (MIC LEVEL) (JPK331: E51)		EP401	1-537-771-21	TERMINAL BOARD, GROUND	
		< VIBRATOR >		EP402	1-537-771-21	TERMINAL BOARD, GROUND	
X601	1-760-252-12	VIBRATOR, CRYSTAL (32.768kHz)		EP491	1-537-771-21	TERMINAL BOARD, GROUND	
X602	1-795-004-21	VIBRATOR, CERAMIC (10MHz)				< IC >	
		*****		IC441	6-705-845-01	IC STK403-090	
A-4750-730-A		POWER BOARD, COMPLETE (JPK331: E51)				< JACK >	
A-4750-738-A		POWER MOUNTED PC BOARD (JN331)					
A-4752-992-A		POWER BOARD, COMPLETE (JPK331: MX)		JK441	1-694-884-11	TERMINAL BOARD (4P) (SPEAKER IMPEDANCE USE 6-16Ω)	
		*****				< COIL >	
		< CAPACITOR >				< TRANSISTOR >	
C402	1-162-306-11	CERAMIC 0.01uF 20% 16V		Q441	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA	
C403	1-137-749-11	MYLAR 0.1uF 100V		Q442	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA	
C404	1-137-749-11	MYLAR 0.1uF 100V		Q481	8-729-119-79	TRANSISTOR 2SC2785-FEK	
C405	1-135-832-11	ELECT 2200uF 20% 50V (JN331)		Q482	8-729-119-79	TRANSISTOR 2SC2785-FEK	
C405	1-137-839-11	ELECT 2200uF 20% 50V (JPK331)		Q483	8-729-119-79	TRANSISTOR 2SC2785-FEK	
C406	1-135-832-11	ELECT 2200uF 20% 50V (JN331)		Q484	8-729-119-79	TRANSISTOR 2SC2785-FEK	
C406	1-137-839-11	ELECT 2200uF 20% 50V (JPK331)		Q485	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C407	1-162-306-11	CERAMIC 0.01uF 20% 16V		Q486	8-729-119-79	TRANSISTOR 2SC2785-FEK	
C408	1-162-306-11	CERAMIC 0.01uF 20% 16V					
C411	1-162-306-11	CERAMIC 0.01uF 20% 16V					

CX-JN331/JPK331

POWER	SENSOR	SUB TRANS	SW	TRANS
-------	--------	-----------	----	-------

Ref. No.	Part No.	Description				Remark
Q487	8-729-119-79	TRANSISTOR	2SC2785-FEK			
Q488	8-729-119-79	TRANSISTOR	2SC2785-FEK			
Q489	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA			
< RESISTOR >						
R401	1-249-441-11	CARBON	100K	5%	1/4W	
R402	1-249-441-11	CARBON	100K	5%	1/4W	
R407	1-260-316-51	CARBON	100	5%	1/2W	
R411	1-249-421-11	CARBON	2.2K	5%	1/4W	
R412	1-249-421-11	CARBON	2.2K	5%	1/4W	
R413	1-247-847-91	CARBON	4.7K	5%	1/4W	
R414	1-247-847-91	CARBON	4.7K	5%	1/4W	
R441	1-249-417-11	CARBON	1K	5%	1/4W	
R442	1-249-417-11	CARBON	1K	5%	1/4W	
R443	1-249-435-11	CARBON	33K	5%	1/4W	
R444	1-249-435-11	CARBON	33K	5%	1/4W	
R445	1-249-417-11	CARBON	1K	5%	1/4W	
R446	1-249-417-11	CARBON	1K	5%	1/4W	
R447	1-249-435-11	CARBON	33K	5%	1/4W	
R448	1-249-435-11	CARBON	33K	5%	1/4W	
△ R451	1-220-755-11	METAL	0.22	10%	2W F	
△ R452	1-220-755-11	METAL	0.22	10%	2W F	
R453	1-260-076-11	CARBON	10	5%	1/2W	
R454	1-260-076-11	CARBON	10	5%	1/2W	
R455	1-249-417-11	CARBON	1K	5%	1/4W	
R456	1-249-417-11	CARBON	1K	5%	1/4W	
R457	1-247-863-11	CARBON	22K	5%	1/4W	
R458	1-247-863-11	CARBON	22K	5%	1/4W	
R459	1-249-437-11	CARBON	47K	5%	1/4W	
R460	1-249-437-11	CARBON	47K	5%	1/4W	
R461	1-260-076-11	CARBON	10	5%	1/2W	
R462	1-260-076-11	CARBON	10	5%	1/2W	
R465	1-249-437-11	CARBON	47K	5%	1/4W	
R466	1-247-873-91	CARBON	56K	5%	1/4W	
R467	1-249-435-11	CARBON	33K	5%	1/4W	
R481	1-247-847-91	CARBON	4.7K	5%	1/4W	
R482	1-249-429-11	CARBON	10K	5%	1/4W	
R483	1-249-397-11	CARBON	22	5%	1/4W	
R484	1-247-873-91	CARBON	56K	5%	1/4W	
R485	1-249-441-11	CARBON	100K	5%	1/4W	
R486	1-249-441-11	CARBON	100K	5%	1/4W	
R487	1-249-435-11	CARBON	33K	5%	1/4W	
R488	1-247-863-11	CARBON	22K	5%	1/4W	
R489	1-247-847-91	CARBON	4.7K	5%	1/4W	
R490	1-247-847-91	CARBON	4.7K	5%	1/4W	
R491	1-247-863-11	CARBON	22K	5%	1/4W	
R492	1-249-417-11	CARBON	1K	5%	1/4W	
R493	1-249-435-11	CARBON	33K	5%	1/4W	
R494	1-249-421-11	CARBON	2.2K	5%	1/4W	
△ R495	1-202-972-61	FUSIBLE	1	5%	1/4W F	
△ R496	1-212-881-11	FUSIBLE	100	5%	1/4W F	
< RELAY >						
RY441	1-755-373-11	RELAY				

Ref. No.	Part No.	Description	Remark		
< THERMISTOR >					
TH441	1-807-796-11	THERMISTOR	*****		
	1-687-132-12	SENSOR BOARD	*****		
< CONNECTOR >					
CN731	1-785-329-21	PIN, CONNECTOR (LIGHT ANGLE) 3P			
< IC >					
IC731	6-600-022-01	IC RPI-576	*****		
SUB TRANS BOARD					

< CONNECTOR >					
CN901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P			
< DIODE >					
D901	8-719-991-33	DIODE 1SS133T-77			
D902	6-500-522-21	DIODE 10EDB40-TB3			
D903	6-500-522-21	DIODE 10EDB40-TB3			
D904	6-500-522-21	DIODE 10EDB40-TB3			
D905	6-500-522-21	DIODE 10EDB40-TB3			
< TRANSFORMER >					
△ PT902	X-4956-294-1	TRANS ASSY, SUB (JN331/JPK331: E51)			
△ PT902	X-4956-322-1	SUB TRANS ASSY (MX)			
< RELAY >					
△ RY901	1-755-276-11	RELAY, POWER			
< SWITCH >					
△ S901	1-786-055-21	SELECTOR, VOLTAGE (VOLTAGE SELECT) (JN331/JPK331: E51)	*****		
	1-687-669-12	SW BOARD	*****		
< SWITCH >					
S751	1-786-514-11	SWITCH, LEVER (SLIDE) (OPEN/CLOSE DETECT)	*****		
A-4750-801-A	TRANSFORMER BOARD, COMPLETE (JN331/JPK331: E51)				
A-4752-897-A	TRANSFORMER BOARD, COMPLETE (JPK331: MX)				

	1-533-233-11	FUSE HOLDER			
< CAPACITOR >					
C906	1-164-159-11	CERAMIC	0.1uF		50V
C908	1-128-553-11	ELECT	220uF	20%	63V
C909	1-126-964-11	ELECT	10uF	20%	50V

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark
C910	1-126-968-11	ELECT	100uF	20%	50V	M751	A-1108-966-A	MOTOR ASSY, LOADING	
C911	1-126-942-61	ELECT	1000uF	20%	25V	△ PT901	1-443-238-12	TRANSFORMER, POWER (JN331/JPK331: E51)	
						△ PT901	1-443-283-11	TRANSFORMER, POWER (JPK331: MX)	
C920	1-131-679-31	FILM	0.01uF	5%	50V	S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
C921	1-131-679-31	FILM	0.01uF	5%	50V				
C922	1-131-679-31	FILM	0.01uF	5%	50V	S711	1-477-680-12	ENCODER, ROTARY	
C923	1-131-679-31	FILM	0.01uF	5%	50V			(DISC TRAY ADDRESS DETECT)	
C924	1-136-165-00	FILM	0.1uF	5%	50V				
C925	1-136-165-00	FILM	0.1uF	5%	50V				
C926	1-164-159-11	CERAMIC	0.1uF		50V				
< CONNECTOR >									
CN904	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P (JPK331: MX)							
CN904	1-568-106-11	PIN, CONNECTOR (3.96mm PITCH) 4P (JN331/JPK331: E51)							
CN905	1-564-506-11	PLUG, CONNECTOR 3P							
* CN906	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P							
* CN907	1-764-333-11	PLUG, CONNECTOR 10P							
< DIODE >									
D906	8-719-983-79	DIODE MTZJ-T-72-27D							
D908	6-500-522-21	DIODE 10EDB40-TB3							
< TRANSISTOR >									
Q902	8-729-140-97	TRANSISTOR 2SB734-34							
< RESISTOR >									
R903	1-249-430-11	CARBON	12K	5%	1/4W				
R904	1-249-417-11	CARBON	1K	5%	1/4W				
△ R908	1-202-972-61	FUSIBLE	1	5%	1/4W F				

MISCELLANEOUS									

7	1-775-251-11	WIRE (FLAT TYPE) (27 CORE)							
9	1-469-854-11	CORE, FERRITE							
52	1-796-485-51	DECK MECHANICAL (CWM43FF13) (JPK331)							
52	1-796-486-71	DECK MECHANICAL (CWM43FR34) (JN331)							
106	1-773-288-11	WIRE (FLAT TYPE) (29 CORE)							
107	1-827-145-11	WIRE (FLAT TYPE) (13 CORE)							
108	1-773-048-11	WIRE (FLAT TYPE) (17 CORE)							
111	1-769-842-11	WIRE (FLAT TYPE) (5 CORE) (JPK331: E51)							
251	1-769-940-11	WIRE (FLAT TYPE) (15 CORE)							
252	1-693-615-11	TUNER (FM/AM)							
△ 303	1-777-071-83	CORD, POWER (JN331/JPK331: E51)							
△ 303	1-827-226-31	CORD, POWER (JPK331: MX)							
304	1-569-007-11	ADAPTOR, CONVERSION 2P (JN331/JPK331: E51)							
308	1-400-285-11	F-BEAD, E2515MRT							
509	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)							
602	1-471-035-11	MAGNET ASSY							
△ 657	8-820-244-01	OPTICAL PICK-UP KSM-215DCP/C2NP							
658	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)							
△ F904	1-533-473-12	FUSE, GLASS TUBE (DIA. 5) (T6.3AL/250V)							
△ F905	1-533-473-12	FUSE, GLASS TUBE (DIA. 5) (T6.3AL/250V)							
△ F906	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)							
△ F907	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)							
M741	A-1108-965-A	MOTOR ASSY, TABLE							

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]