


aiwa



NSX-A707 NSX-S707 NSX-S708

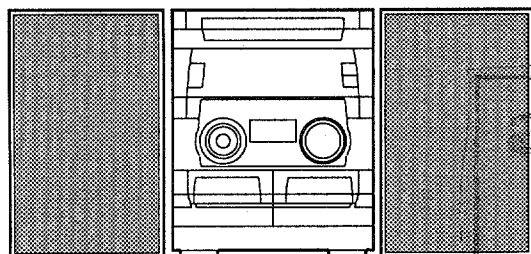

COMPACT DISC STEREO
CASSETTE RECEIVER

- BASIC TAPE MECHANISM : 2ZM-3MK2 PR4NM
- BASIC CD MECHANISM : 4ZG-1 Z3DSHNM

- TYPE : 707(U,LH),
708LH

SYSTEM	CD CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX-A707	CX-NA707 (TYPE : U)	SX-NA702	RC - 7AS06
NSX-S707	CX-NS707 (TYPE : LH)	SX-FNS705	
NSX-S708	CX-NS708 (TYPE : LH)	SX-ANS707	

- If requiring information about the CD mechanism, see Service Manual of 4ZG-1, S/M Code No. 09-983-249-3OT.

SPECIFICATIONS

<FM Tuner section>

Tuning range	87.5 MHz to 108 MHz
Usable sensitivity(IHF)	13.2 dBf
Antenna terminals	75 ohms (unbalanced)

<MW Tuner section>

Tuning range	531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity	350 uV/m
Antenna	Loop antenna

<Amplifier section>

Power output	U : 80 W + 80 W (50 Hz - 20 kHz, T.H.D. less than 1%, 6 ohms) LH : 140 W + 140 W (6 ohms, T.H.D.10%, 1 kHz)
Total harmonic distortion	U : 0.1% (40 W, 1 kHz, 6 ohms, DIN AUDIO) LH : 0.1% (70 W, 1 kHz, 6 ohms, DIN AUDIO)
Inputs	VIDEO/AUX : 210 mV(adjustable) MD : 210mV (adjustable) MIC1, MIC2 : 1.4mV (10 kohms)
Outputs	U : SUPER WOOFERS: 2.2 V LH : SUPER WOOFERS: 2.6 V LINE OUT: 280 mV SPEAKERS: accept speakers of 6 ohms or more SURROUND SPEAKERS: accept speakers of 8 ohms to 16 ohms PHONES (stereo jack) : accepts headphones of 32 ohms or more

<Cassette deck section>

Track format	4 tracks, 2 channels stereo
Frequency response	CrO ₂ tape : 50 Hz - 16000 Hz Normal tape : 50 Hz - 15000 Hz
Recording system	AC bias
Heads	Deck 1 : playback head x 1 Deck 2 : Recording/Playback head x 1/ erase head x 1

<Compact disc player section>

Laser	Semiconductor laser ($\lambda = 780$ nm)
D-A converter	1 bit dual
Signal-to-noise ratio	85 dB (1 kHz, 0 dB)
Harmonic distortion	0.05 % (1 kHz, 0 dB)
Wow and flutter	Unmeasurable

<Speaker system SX-NA702 (For NSX-A707)>

Cabinet type	3 way, bass reflex (magnetic shielded type)
Speakers	Woofer : 160 mm (6 ³ / ₈ in.) cone type Tweeter : 60 mm (2 ³ / ₈ in.) ceramic type Super tweeter: 20 mm (1 ³ / ₁₆ in.) ceramic type
Impedance	6 ohms
Output sound pressure level	87 dB/W/m
Dimensions (W x H x D)	235 x 324 x 250mm (9 ³ / ₈ X 12 ⁷ / ₈ X 9 ⁷ / ₈ in.)
Weight	3.2 kg (7 lbs 11 oz.)

<Speaker system SX-FNS705 (For NSX-S707)>

Cabinet type	3 way, bass reflex with surround speaker (magnetic shielded type)
Speakers	Woofer : 160 mm cone type Tweeter : 80 mm ceramic type Super tweeter : 20 mm ceramic type Surround speaker : 80 mm cone type Front speaker : 6 ohms Surround speaker : 8 ohms
Impedance	87 dB/W/m
Output sound pressure level	250 x 324 x 275 mm
Dimensions (W x H x D)	3.9 kg
Weight	

<Speaker system SX-ANS707 (For NSX-S708)>

Cabinet type	4 way, bass reflex with surround speaker (magnetic shielded type)
Speakers	Woofer : 160 mm cone type Mid-range : 80 mm cone type Tweeter : 50 mm cone type Super tweeter: 20 mm ceramic type Surround speaker : 60 mm cone type Front speaker : 6 ohms Surround speaker : 8 ohms
Impedance	87 dB/W/m
Output sound pressure level	250 x 427 x 294 mm
Dimensions (W x H x D)	5.8 kg
Weight	

<General>

Power requirements	U : 120 V AC, 60 Hz LH : 120 V/220-230 V/240 V AC (switchable), 50/60 Hz
Power consumption	U : 125 W LH : 170 W
Dimensions of main unit	260 x 324 x 348 mm (10 ¹ / ₄ X 12 ⁷ / ₈ X 13 ³ / ₄ in.)
Weight	U : 7.1 kg (15 lbs 10 oz.) LH : 8.1 kg

• Design and specifications are subject to change without notice.

• The word "BBE"and the "BBE symbol" are trademarks of BBE Sound, Inc.
Under license from BBE Sound,Inc.

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NF6-902-010	IB, LH (ESP) M<LH>	
1	88-NF6-903-010	IB, U (ESF) M<U>	
2	87-006-225-010	AM LOOP ANT NC2	

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
3	87-A90-064-010		FEEDER-ANT, FM (SHS)
4	87-A90-312-010		PLUG, CONVERSION WTN-1157R1<LH>
5	87-NF6-635-010		RC UNIT, RC-7AS06

NOTE ON BEFORE STARTING REPAIR

1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, the secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connector the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased 1 V or less using a multimeter or an oscilloscope.

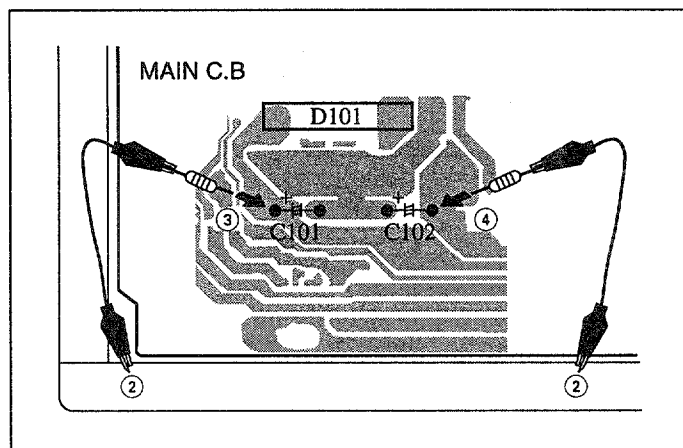


Fig-1

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor (Ω)	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitor on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

• Good or no good judgment of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
- ③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

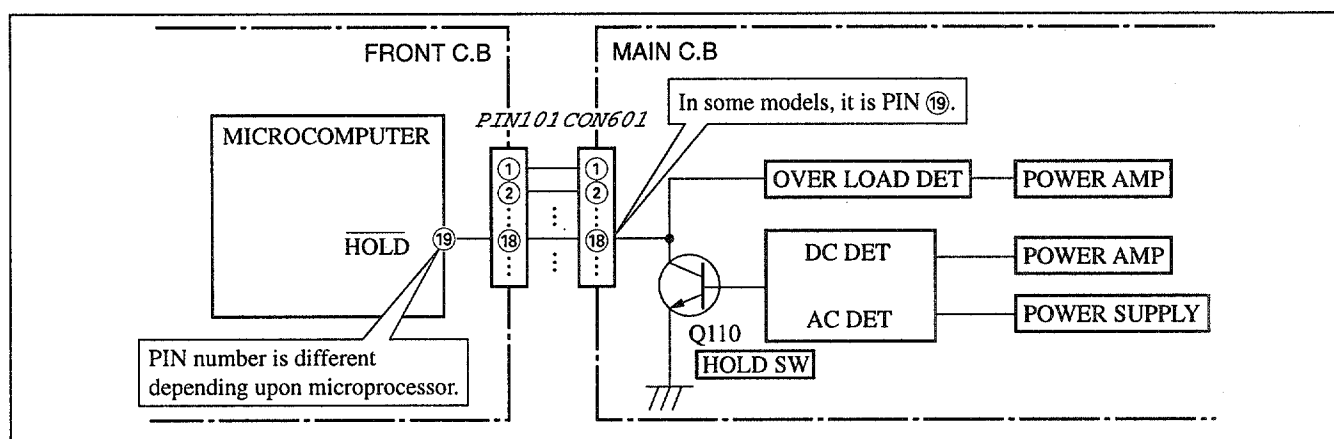


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgment as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

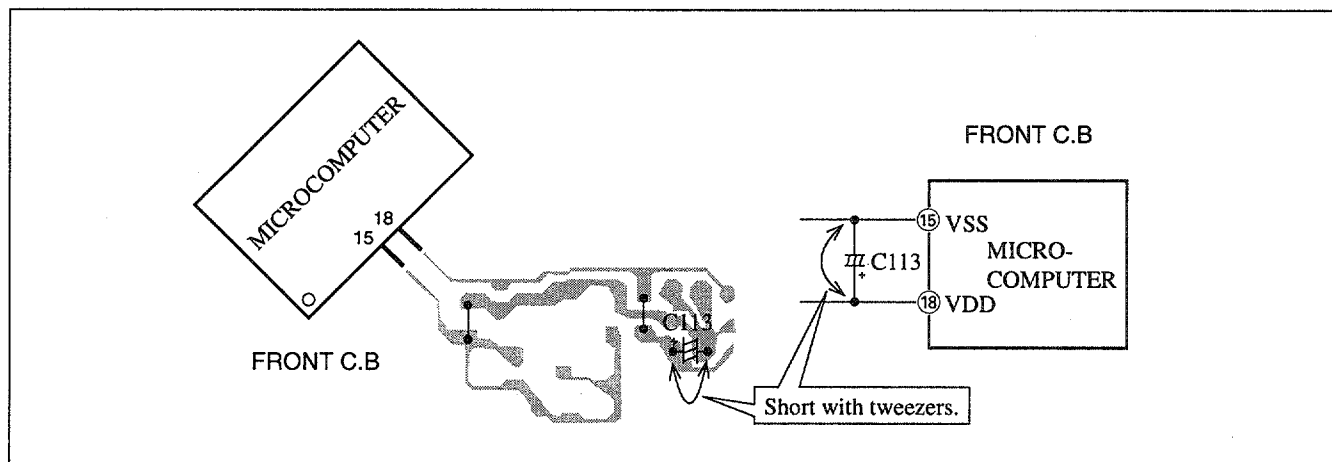


Fig-2-2

- ② Short the both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.



- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylit-tävälle näkymättömälle lasersäteilylle.

WARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

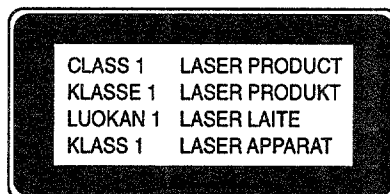


Precaution to replace Optical block

(KSS – 213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in right figure.

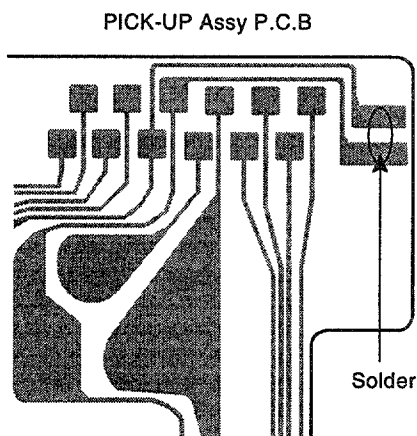

ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC				C105	87-012-368-080		C-CAP,S 0.1-50 F
	88-NF5-615-040		C-IC,MSM6654A-521GS-KR1	C106	87-012-368-080		C-CAP,S 0.1-50 F
	88-NF7-690-010		C-IC,LC866560W-5G73	C107	87-012-368-080		C-CAP,S 0.1-50 F
	87-070-083-010		IC,GP1U281X	C108	87-012-368-080		C-CAP,S 0.1-50 F
	87-A20-783-040		C-IC,BA7762AFS	C109	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A20-083-010		IC,BA3835S	C110	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A20-804-040		C-IC,NJM2152M	C111	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-017-915-080		IC,BU4094BCF	C112	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A20-613-040		C-IC,BU9262AFS	C113	87-010-247-080		CAP, ELECT 100-50V
	87-A20-954-040		C-IC,M62445FP-601	C116	87-010-247-080		CAP, ELECT 100-50V
	87-017-888-080		IC,NJM4558MD	C117	87-010-430-080		CAP, ELECT 100-63
	86-NFZ-655-010		IC,LC72131D(Z)	C118	87-010-263-080		CAP, ELECT 100-10V
	87-A20-438-010		IC,LA1837	C119	87-010-260-080		CAP, ELECT 47-25V
	87-020-454-010		IC,DN6851	C120	87-010-403-080		CAP, ELECT 3.3-50V
	87-070-289-040		C-IC,BU2092F	C121	87-012-140-080		CAP 470P
TRANSISTOR				C122	87-010-263-080		CAP, ELECT 100-10V<U>
	87-A30-087-080		C-FET,2SK2158	C123	87-010-247-080		CAP, ELECT 100-50V
	89-213-702-010		TR,2SB1370 (1.8W)	C124	87-010-112-080		CAP, ELECT 100-16V
	87-026-263-080		C-TR,RN1410	C125	87-010-235-080		CAP,E 470-16 SME
	87-A30-071-080		C-TR,RT1N 144C	C151	87-016-520-090		CAP,E 3300-65
	87-026-610-080		TR,KTC3198GR	C152	87-016-520-090		CAP,E 3300-65
	87-A30-076-080		C-TR,2SC3052F	C209	87-010-546-080		CAP, ELECT 0.33-50V
	87-A30-196-080		TR,2SC4115SRS	C210	87-010-546-080		CAP, ELECT 0.33-50V
	87-A30-075-080		C-TR,2SA1235F	C211	87-010-183-080		C-CAP,S 2700P-50 B
	87-026-609-080		TR,KTA1266GR	C212	87-010-183-080		C-CAP,S 2700P-50 B
	87-A30-107-070		C-TR,CMBT5401	C213	87-010-186-080		CAP,CHIP 4700P
	87-A30-190-080		TR,CC5551	C214	87-010-186-080		CAP,CHIP 4700P
	87-A30-097-010		TR,FN 1016	C215	87-010-403-080		CAP, ELECT 3.3-50V
	87-A30-098-010		TR,FP 1016	C216	87-010-403-080		CAP, ELECT 3.3-50V
	87-A30-106-070		C-TR,CMBT5551	C217	87-010-260-080		CAP, ELECT 47-25V
	87-A30-072-080		C-TR,RT1P 144C	C218	87-010-260-080		CAP, ELECT 47-25V
	87-A30-074-080		C-TR,RT1P 141C	C223	87-010-197-080		CAP,CHIP 0.01 DM
	87-026-232-080		C-TR,DTA 144WK	C224	87-010-197-080		CAP,CHIP 0.01 DM
	87-A30-073-080		C-TR,RT1N 141C	C229	87-A10-812-080		C-CAP,S 220P-200 J CH
	87-A30-105-080		C-TR,RT1P 441C	C230	87-A10-812-080		C-CAP,S 220P-200 J CH
	89-112-965-080		TR,2SA1296 (0.75W)	C233	87-010-544-080		CAP, ELECT 0.1-50V
	87-A30-085-070		C-TR,CSA1362GR	C234	87-010-544-080		CAP, ELECT 0.1-50V
	89-327-143-080		TR,2SC2714 (0.1W)	C235	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-026-463-080		TR,2SA933SRS	C237	87-012-368-080		C-CAP,S 0.1-50 F
	87-A30-162-010		FET,2SK2937	C238	87-012-368-080		C-CAP,S 0.1-50 F
	87-026-580-080		C-TR,DTA123JK	C239	87-012-368-080		C-CAP,S 0.1-50 F
DIODE				C240	87-012-368-080		C-CAP,S 0.1-50 F
	87-A40-470-080		DIODE,1SS254	C243	87-010-178-080		CHIP,CAP 1000P
	87-017-654-060		DIODE,GBU6JL 6131<LH>	C244	87-010-178-080		CHIP,CAP 1000P
	87-A40-269-080		C-DIODE,MC2836	C247	87-012-154-080		C-CAP,S 150P-50 CH
	87-A40-509-080		ZENER,MTZJ6.8C	C248	87-012-154-080		C-CAP,S 150P-50 CH
	87-070-136-080		ZENER,MTZJ5.1B	C280	87-010-182-080		C-CAP,S 2200P-50 B
	87-A40-270-080		C-DIODE,MC2838	C298	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-070-274-080		DIODE,1N4003 SEM	C301	87-010-318-080		C-CAP,S 47P-50 CH
	87-A40-341-080		ZENER,MTZJ 36 A	C302	87-010-318-080		C-CAP,S 47P-50 CH
	87-A40-004-080		ZENER,MTZJ16A	C303	87-012-157-080		C-CAP,S 330P-50 CH
	87-A40-488-080		DIODE,1SS244	C304	87-012-157-080		C-CAP,S 330P-50 CH
	87-A40-345-080		ZENER,MTZJ10C	C305	87-012-145-080		CAP, CHIP S 270P CH
	87-A40-184-090		DIODE,RF34	C306	87-012-145-080		CAP, CHIP S 270P CH
	87-A40-002-080		ZENER,MTZJ5.1C	C307	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A40-438-080		ZENER,MTZJ4.7A	C309	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A40-234-080		ZENER,MTZJ5.6A	C310	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A40-115-060		DIODE,RS603M	C311	87-010-198-080		CAP, CHIP 0.022
	87-017-931-080		ZENER,MTZJ5.6B	C312	87-010-198-080		CAP, CHIP 0.022
MAIN C.B				C313	87-010-178-080		CHIP CAP 1000P
C101	87-016-657-090		CAP,E 3300-71<LH>	C314	87-010-178-080		CHIP CAP 1000P
C102	87-016-657-090		CAP,E 3300-71<LH>	C315	87-010-178-080		CHIP CAP 1000P
C103	87-016-658-090		CAP,E 4700-35 SMG	C316	87-010-178-080		CHIP CAP 1000P
C104	87-016-658-090		CAP,E 4700-35 SMG	C321	87-016-492-080		C-CAP,S 0.33-16 FZ
				C322	87-016-492-080		C-CAP,S 0.33-16 FZ
				C324	87-010-260-080		CAP, ELECT 47-25V
				C325	87-010-370-080		CAP,E 330-6.3 SME
				C327	87-010-404-080		CAP, ELECT 4.7-50V
				C328	87-010-404-080		CAP, ELECT 4.7-50V
				C332	87-010-196-080		CHIP CAPACITOR,0.1-25

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C335	87-010-401-080		CAP, ELECT 1-50V	C712	87-010-196-080		CHIP CAPACITOR,0.1-25
C336	87-010-401-080		CAP, ELECT 1-50V	C713	87-010-197-080		CAP, CHIP 0.01 DM
C337	87-010-196-080		CHIP CAPACITOR,0.1-25	C714	87-010-197-080		CAP, CHIP 0.01 DM
C339	87-010-196-080		CHIP CAPACITOR,0.1-25	C721	87-010-312-080		C-CAP,S 15P-50 CH
C340	87-010-196-080		CHIP CAPACITOR,0.1-25	C722	87-010-312-080		C-CAP,S 15P-50 CH
C351	87-012-140-080		CAP 470P	C723	87-010-178-080		CHIP CAP 1000P
C352	87-012-140-080		CAP 470P	C725	87-010-178-080		CHIP CAP 1000P
C354	87-010-175-080		CAP 560P	C727	87-010-196-080		CHIP CAPACITOR,0.1-25
C355	87-012-349-080		C-CAP,S 1000P-50 CH	C728	87-010-248-080		CAP, ELECT 220-10V
C356	87-010-260-080		CAP, ELECT 47-25V	C755	87-010-197-080		CAP, CHIP 0.01 DM
C357	87-010-197-080		CAP, CHIP 0.01 DM	C756	87-010-197-080		CAP, CHIP 0.01 DM
C358	87-010-183-080		C-CAP,S 2700P-50 B	C757	87-010-318-080		C-CAP,S 47P-50 CH
C359	87-010-183-080		C-CAP,S 2700P-50 B	C758	87-010-149-080		C-CAP,S 5P-50 CH
C360	87-010-183-080		C-CAP,S 2700P-50 B	C759	87-012-156-080		C-CAP,S 220P-50 CH
C370	87-010-196-080		CHIP CAPACITOR,0.1-25	C760	87-012-156-080		C-CAP,S 220P-50 CH
C373	87-016-083-080		C-CAP,S 0.15-16 RK	C761	87-010-196-080		CHIP CAPACITOR,0.1-25
C374	87-016-083-080		C-CAP,S 0.15-16 RK	C762	87-010-197-080		CAP, CHIP 0.01 DM
C378	87-010-196-080		CHIP CAPACITOR,0.1-25	C763	87-010-194-080		CAP, CHIP 0.047
C379	87-010-382-080		CAP, ELECT 22-25V	C764	87-010-319-080		C-CAP,S 56P-50 CH
C380	87-010-382-080		CAP, ELECT 22-25V	C765	87-010-197-080		CAP, CHIP 0.01 DM
C381	87-010-197-080		CAP, CHIP 0.01 DM	C766	87-010-197-080		CAP, CHIP 0.01 DM
C382	87-010-312-080		C-CAP,S 15P-50 CH	C767	87-010-405-080		CAP, ELECT 10-50V
C383	87-010-197-080		CAP, CHIP 0.01 DM	C768	87-010-197-080		CAP, CHIP 0.01 DM
C384	87-010-402-080		CAP, ELECT 2.2-50V	C769	87-010-408-080		CAP, ELECT 47-50V
C386	87-010-196-080		CHIP CAPACITOR,0.1-25	C770	87-015-821-080		C-CAP 0.047
C387	87-012-145-080		CAP, CHIP S 270P CH	C771	87-010-407-080		CAP, ELECT 33-50V
C401	87-010-405-080		CAP, ELECT 10-50V	C772	87-010-194-080		CAP, CHIP 0.047
C402	87-010-405-080		CAP, ELECT 10-50V	C773	87-010-196-080		CHIP CAPACITOR,0.1-25
C403	87-010-182-080		C-CAP,S 2200P-50 B	C774	87-010-263-080		CAP, ELECT 100-10V
C404	87-010-182-080		C-CAP,S 2200P-50 B	C775	87-010-404-080		CAP, ELECT 4.7-50V
C405	87-010-193-080		CHIP CAPACITOR,0.033	C776	87-010-197-080		CAP, CHIP 0.01 DM
C406	87-010-193-080		CHIP CAPACITOR,0.033	C777	87-010-400-080		CAP, ELECT 0.47-50V
C407	87-010-405-080		CAP, ELECT 10-50V	C778	87-010-401-080		CAP, ELECT 1-50V
C408	87-010-405-080		CAP, ELECT 10-50V	C779	87-010-401-080		CAP, ELECT 1-50V
C409	87-010-380-080		CAP, ELECT 47-16V	C780	87-010-196-080		CHIP CAPACITOR,0.1-25
C410	87-010-380-080		CAP, ELECT 47-16V	C781	87-010-405-080		CAP, ELECT 10-50V
C411	87-010-405-080		CAP, ELECT 10-50V	C782	87-010-405-080		CAP, ELECT 10-50V
C412	87-010-112-080		CAP, ELECT 100-16V	C783	87-015-819-080		CAPACITOR,0.01
C415	87-010-184-080		CHIP CAPACITOR 3300P (K)	C784	87-010-197-080		CAP, CHIP 0.01 DM
C416	87-010-184-080		CHIP CAPACITOR 3300P (K)	C785	87-010-403-080		CAP, ELECT 3.3-50V
C457	87-010-400-080		CAP, ELECT 0.47-50V	C786	87-010-403-080		CAP, ELECT 3.3-50V
C458	87-010-400-080		CAP, ELECT 0.47-50V	C787	87-010-181-080		CAP,CHIP S 1800P
C516	87-010-196-080		CHIP CAPACITOR,0.1-25	C788	87-010-181-080		CAP,CHIP S 1800P
C601	87-010-180-080		C-CER 1500P	C789	87-010-179-080		CAP,CHIP S B1200P
C602	87-010-180-080		C-CER 1500P	C790	87-010-179-080		CAP,CHIP S B1200P
C613	87-016-081-080		C-CAP,S 0.1-16 RK	C791	87-010-405-080		CAP, ELECT 10-50V
C614	87-016-081-080		C-CAP,S 0.1-16 RK	C793	87-010-177-080		C-CAP,S 820P-50 SL
C619	87-010-185-080		C-CAP,S 3900P-50 B	C794	87-010-406-080		CAP, ELECT 22-50
C620	87-010-185-080		C-CAP,S 3900P-50 B	C795	87-010-596-080		CAP, S 0.047-16
C621	87-010-401-080		CAP, ELECT 1-50V	C796	87-010-403-080		CAP, ELECT 3.3-50V
C622	87-010-401-080		CAP, ELECT 1-50V	C799	87-010-194-080		CAP, CHIP 0.047
C625	87-010-405-080		CAP, ELECT 10-50V	C812	87-010-197-080		CAP, CHIP 0.01 DM
C626	87-010-405-080		CAP, ELECT 10-50V	C814	87-010-197-080		CAP, CHIP 0.01 DM
C629	87-010-405-080		CAP, ELECT 10-50V	C820	87-010-408-080		CAP, ELECT 47-50V
C630	87-010-213-080		CAP, CHIP 0.015-25 KB GRM	C821	87-010-197-080		CAP, CHIP 0.01 DM
C631	87-010-992-080		CHIP-CAP,S 0.047-25B	C822	87-010-197-080		CAP, CHIP 0.01 DM
C632	87-010-263-080		CAP, ELECT 100-10V	C823	87-010-197-080		CAP, CHIP 0.01 DM
C633	87-010-263-080		CAP, ELECT 100-10V	C828	87-010-196-080		CHIP CAPACITOR,0.1-25
C634	87-010-196-080		CHIP CAPACITOR,0.1-25	C829	87-010-196-080		CHIP CAPACITOR,0.1-25
C635	87-010-196-080		CHIP CAPACITOR,0.1-25	C959	87-010-196-080		CHIP CAPACITOR,0.1-25
C636	87-010-194-080		CAP, CHIP 0.047	C960	87-010-196-080		CHIP CAPACITOR,0.1-25
C637	87-010-183-080		C-CAP,S 2700P-50 B	C961	87-010-152-080		C-CAP,S 8P-50 CH
C641	87-010-196-080		CHIP CAPACITOR,0.1-25	CF801	87-008-261-010		FILTER, SFE10.7MA5-A
C667	87-010-196-080		CHIP CAPACITOR,0.1-25	CF802	87-008-261-010		FILTER, SFE10.7MA5-A
C701	87-010-381-080		CAP, ELECT 330-16V	FB601	87-A50-190-080		C-COIL,S BLM21A102S
C702	87-010-404-080		CAP, ELECT 4.7-50V	FC602	88-906-241-110		FF-CABLE,6P 1.25
C703	87-010-197-080		CAP, CHIP 0.01 DM	FFE801	A8-8ZA-190-030		8ZA-1 FEUNM
C704	87-010-197-080		CAP, CHIP 0.01 DM	J201	87-A60-488-010		JACK,DIA6.3 BLK ST W/SW KM16AT
C709	87-010-322-080		C-CAP,S 100P-50 CH	J202	87-A60-547-010		JACK,PIN 4P R/W/B
C711	87-010-263-080		CAP, ELECT 100-10V	J203	87-033-240-010		TERMINAL,SP 4P32SV1-05

REF.NO.	PART NO.	KANRI NO.	DESCRIPTION
J601	87-A60-402-010		JACK,PIN 6P R/W HSP-246V30
J801	87-033-239-010		TERMINAL,HSP-154V-2
L201	87-003-383-010		COIL,1UH-S
L202	87-003-383-010		COIL,1UH-S
L301	87-A50-049-010		COIL,TRAP 85K(COI)
L302	87-A50-049-010		COIL,TRAP 85K(COI)
L351	87-007-342-010		COIL,OSC 85K BIAS
L771	87-A50-266-010		COIL,FM DET-2N(TOK)
L772	87-A90-733-010		FLTR,PCFAZH-450 (TOK)
L781	87-005-847-080		COIL,2.2UH(CECS)
L832	86-NFZ-694-080		COIL,2.2UH K CECS
L981	87-NF4-650-010		COIL,AM PACK 4N(TOK)
R123	87-022-200-080		RESISTOR, METAL 0.56 1W<U>
R237	87-A00-262-080		RES,M/F 0.15-2W J
R238	87-A00-262-080		RES,M/F 0.15-2W J
R239	87-A00-262-080		RES,M/F 0.15-2W J
R240	87-A00-262-080		RES,M/F 0.15-2W J
RY101	87-045-389-010		RELAY, 12V OSA-SS-212DM5
RY201	87-A90-713-010		RELAY, 12V DQ12D1
SFR351	87-A90-433-080		SFR,50K H NVZ6TLTA
SFR352	87-A90-433-080		SFR,50K H NVZ6TLTA
W104	85-NF5-628-010		F-CABLE 7P-2.5
X721	87-A70-061-010		VIB,XTAL 4.500MHZ CSA-309

FRONT C.B


C101	87-010-075-040		CAP,E 10-16 5L
C102	87-010-196-080		CHIP CAPACITOR,0.1-25
C103	87-010-196-080		CHIP CAPACITOR,0.1-25
C104	87-010-494-040		CAP,E 1-50 GAS
C105	87-010-178-080		CHIP CAP 1000P
C106	87-A10-189-040		CAP,E 220-10
C107	87-010-197-080		CAP, CHIP 0.01 DM
C108	87-010-196-080		CHIP CAPACITOR,0.1-25
C109	87-010-194-080		CAP, CHIP 0.047
C110	87-012-157-080		C-CAP,S 330P-50 CH
C111	87-010-320-080		CHIP CAP 68P
C112	87-010-312-080		C-CAP,S 15P-50 CH
C113	87-010-316-080		C-CAP,S 33P-50 CH
C114	87-010-182-080		C-CAP,S 2200P-50 B
C115	87-010-182-080		C-CAP,S 2200P-50 B
C116	87-010-405-040		CAP,E 10-50
C117	87-012-157-080		C-CAP,S 330P-50 CH
C118	87-010-196-080		CHIP CAPACITOR,0.1-25
C119	87-010-196-080		CHIP CAPACITOR,0.1-25
C120	87-010-196-080		CHIP CAPACITOR,0.1-25
C121	87-010-194-080		CAP, CHIP 0.047
C122	87-010-194-080		CAP, CHIP 0.047
C125	87-010-196-080		CHIP CAPACITOR,0.1-25
C151	87-010-197-080		CAP, CHIP 0.01 DM
C201	87-010-178-080		CHIP CAP 1000P
C202	87-010-194-080		CAP, CHIP 0.047
C203	87-010-408-040		CAP,E 47-50 SME
C204	87-010-404-040		CAP,E 4.7-50 SME
C205	87-010-404-040		CAP,E 4.7-50 SME
C371	87-010-196-080		CHIP CAPACITOR,0.1-25
C372	87-010-196-080		CHIP CAPACITOR,0.1-25
C373	87-010-196-080		CHIP CAPACITOR,0.1-25
C375	87-010-196-080		CHIP CAPACITOR,0.1-25
C376	87-012-158-080		C-CAP,S 390P-50 CH
C377	87-010-196-080		CHIP CAPACITOR,0.1-25
C378	87-010-196-080		CHIP CAPACITOR,0.1-25
C402	87-010-196-080		CHIP CAPACITOR,0.1-25
C404	87-010-196-080		CHIP CAPACITOR,0.1-25
C406	87-010-196-080		CHIP CAPACITOR,0.1-25
C408	87-010-196-080		CHIP CAPACITOR,0.1-25
C501	87-010-319-080		C-CAP,S 56P-50 CH
C502	87-010-319-080		C-CAP,S 56P-50 CH
C503	87-012-393-080		C-CAP,S 0.22-16 R K
C504	87-010-197-080		CAP, CHIP 0.01 DM

C505	87-010-180-080		C-CER 1500P
C506	87-010-213-080		C-CAP,S 0.015-50 B
C507	87-010-213-080		C-CAP,S 0.015-50 B
C508	87-010-197-080		CAP, CHIP 0.01 DM
C509	87-010-181-080		CAP,CHIP S 1800P
C510	87-010-196-080		CHIP CAPACITOR,0.1-25
C511	87-010-544-040		CAP,E 0.1-50 SME
C512	87-010-374-040		CAP,E 47-10
C513	87-010-401-040		CAP,E 1-50 SME
C514	87-010-401-040		CAP,E 1-50 SME
C515	87-010-183-080		C-CAP,S 2700P-50 B
C516	87-010-183-080		C-CAP,S 2700P-50 B
C518	87-010-196-080		CHIP CAPACITOR,0.1-25
C519	87-010-263-040		CAP,E 100-10
C523	87-012-141-080		CHIP-CAPACITOR,0.22-16F
C601	87-010-405-040		CAP,E 10-50
C602	87-010-186-080		CAP,CHIP 4700P
C603	87-010-405-040		CAP,E 10-50
C604	87-010-406-040		CAP,E 22-50 SME
C605	87-010-196-080		CHIP CAPACITOR,0.1-25
C606	87-010-322-080		C-CAP,S 100P-50 CH
C607	87-010-321-080		CHIP CAPACITOR,82P(J)
C608	87-010-196-080		CHIP CAPACITOR,0.1-25
C609	87-010-545-040		CAP,E 0.22-50 SME
C611	87-010-177-080		C-CAP,S 820P-50 SL
C614	87-010-248-040		CAP,E 220-10 SME
C651	87-010-401-040		CAP,E 1-50 SME
C652	87-010-196-080		CHIP CAPACITOR,0.1-25
C653	87-010-196-080		CHIP CAPACITOR,0.1-25
C901	87-010-263-040		CAP,E 100-10
C902	87-010-196-080		CHIP CAPACITOR,0.1-25
C903	87-010-313-080		CAP, CHIP 18P
C904	87-012-155-080		C-CAP 180P-50CH
C905	87-010-400-040		CAP,E 0.47-50
FB601	87-008-372-080		FILTER, EMI BL OIRNI
FC301	88-906-241-110		FF-CABLE,6P-1.25
FC501	88-915-221-110		FF-CABLE,15P-1.25 220MM
FC801	85-NF5-618-010		CABLE,FFC 13P-1.25
FL201	88-NF6-611-010		FL,BJ610GK
J601	87-A60-284-010		JACK,3.5MO (MSC)
J602	87-A60-284-010		JACK,3.5MO (MSC)
L501	87-005-212-080		COIL,220UH
L901	87-007-340-010		COIL,CLOCK 4.19MHZ
LED401	87-070-197-080		LED,SLP7118C-51-S-T1
LED402	87-070-197-080		LED,SLP7118C-51-S-T1
LED403	87-070-197-080		LED,SLP7118C-51-S-T1
LED404	87-070-197-080		LED,SLP7118C-51-S-T1
LED405	87-070-197-080		LED,SLP7118C-51-S-T1
LED406	87-070-197-080		LED,SLP7118C-51-S-T1
LED407	87-070-197-080		LED,SLP7118C-51-S-T1
LED408	87-070-197-080		LED,SLP7118C-51-S-T1
LED409	87-070-197-080		LED,SLP7118C-51-S-T1
LED410	87-070-197-080		LED,SLP7118C-51-S-T1
LED411	87-070-201-080		LED,SLP9118C-51-S-T1
LED412	87-070-201-080		LED,SLP9118C-51-S-T1
LED413	87-070-201-080		LED,SLP9118C-51-S-T1
LED414	87-070-201-080		LED,SLP9118C-51-S-T1
LED415	87-070-201-080		LED,SLP9118C-51-S-T1
LED417	87-070-281-080		LED,SLZ736A-25-S-T1
LED419	87-070-281-080		LED,SLZ736A-25-S-T1
LED421	87-070-281-080		LED,SLZ736A-25-S-T1
LED423	87-070-281-080		LED,SLZ736A-25-S-T1
LED425	87-070-281-080		LED,SLZ736A-25-S-T1
LED427	87-070-281-080		LED,SLZ736A-25-S-T1
LED428	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED429	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED430	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED431	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED432	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED433	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
LED434	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN	△ PT101	88-NF6-624-010		PT,8NF-6 LH<LH>
LED435	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN	△ PT101	88-NF6-621-010		PT,8NF-6 U<U>
LED436	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN	△ SW101	87-A90-165-010		SW,SL 1-2-3 SWS2301<LH>
LED437	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN	△ T1	87-A60-317-010		TERMINAL, 1P MSC<LH>
LED444	87-070-278-010		LED,SLZ-738A-24-S	△ T101	87-A60-317-010		TERMINAL, 1P MSC<U>
LED445	87-070-290-010		LED,SLZ 936-30-S	△ T102	87-A60-317-010		TERMINAL, 1P MSC<U>
LED446	87-070-278-010		LED,SLZ-738A-24-S	△ T2	87-A60-317-010		TERMINAL, 1P MSC<LH>
LED447	87-070-278-010		LED,SLZ-738A-24-S				
LED448	87-070-290-010		LED,SLZ 936-30-S				
LED449	87-070-278-010		LED,SLZ-738A-24-S		AC2 C.B		
S101	87-A90-792-010		SW,RTRY EC12E12244 ENCODER	△ PR101	87-026-691-080		FUSE,10A 125V 251<U>
S102	87-A90-535-010		SW,RTRY EC16B24304	△ PR101	87-026-682-080		PROTECTOR,10A 60V491<LH>
S301	87-A90-095-080		SW,TACT EVQ11G04M	△ PR102	87-026-691-080		FUSE,10A 125V 251<U>
S302	87-A90-095-080		SW,TACT EVQ11G04M	△ PR102	87-026-682-080		PROTECTOR,10A 60V491<LH>
S303	87-A90-095-080		SW,TACT EVQ11G04M	△ PR103	87-026-691-080		FUSE,10A 125V 251<U>
S304	87-A90-095-080		SW,TACT EVQ11G04M	△ PR103	87-026-682-080		PROTECTOR,10A 60V491<LH>
S305	87-A90-095-080		SW,TACT EVQ11G04M	△ PR104	87-026-691-080		FUSE,10A 125V 251<U>
S306	87-A90-095-080		SW,TACT EVQ11G04M	△ PR104	87-026-682-080		PROTECTOR,10A 60V491<LH>
S307	87-A90-095-080		SW,TACT EVQ11G04M	△ W104	85-NF5-628-010		F-CABLE,7P-2.5
S308	87-A90-095-080		SW,TACT EVQ11G04M				
S309	87-A90-095-080		SW,TACT EVQ11G04M		DECK C.B		
S310	87-A90-095-080		SW,TACT EVQ11G04M				
S311	87-A90-095-080		SW,TACT EVQ11G04M	CON105	87-099-756-019		CONN, 15P 9604 S F
S312	87-A90-095-080		SW,TACT EVQ11G04M	SFR1	87-024-581-019		SFR,3.3K DIA 6H
S313	87-A90-095-080		SW,TACT EVQ11G04M	SOL1	82-ZM1-618-410		SOL ASSY, 27
S321	87-A90-095-080		SW,TACT EVQ11G04M	SOL2	82-ZM1-618-410		SOL ASSY, 27
S322	87-A90-095-080		SW,TACT EVQ11G04M	SW1	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S323	87-A90-095-080		SW,TACT EVQ11G04M	SW2	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S324	87-A90-095-080		SW,TACT EVQ11G04M	SW3	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S325	87-A90-095-080		SW,TACT EVQ11G04M	SW4	87-036-110-010		SW,MICRO SPPB62
S326	87-A90-095-080		SW,TACT EVQ11G04M	SW5	87-036-110-010		SW,MICRO SPPB62
S327	87-A90-095-080		SW,TACT EVQ11G04M	SW6	87-036-110-010		SW,MICRO SPPB62
S333	87-A90-095-080		SW,TACT EVQ11G04M	SW8	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S341	87-A90-095-080		SW,TACT EVQ11G04M	SW9	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S342	87-A90-095-080		SW,TACT EVQ11G04M	W001	82-ZM3-601-019		RBN,CORD,4P-75
S343	87-A90-095-080		SW,TACT EVQ11G04M				
S344	87-A90-095-080		SW,TACT EVQ11G04M		HEAD-1 C.B		
S345	87-A90-095-080		SW,TACT EVQ11G04M				
S346	87-A90-095-080		SW,TACT EVQ11G04M				
S347	87-A90-095-080		SW,TACT EVQ11G04M		HEAD-2 C.B		
S348	87-A90-095-080		SW,TACT EVQ11G04M				
S349	87-A90-095-080		SW,TACT EVQ11G04M	CON351	87-NF6-616-010		CONN ASSY,8P-RPB
S350	87-A90-095-080		SW,TACT EVQ11G04M				
X101	87-A70-070-080		VIB,CER 5.76MHZ CRHF				
SW C.B							
LED438	87-070-197-080		LED,SLP7118C-51-S-T1				
LED439	87-070-197-080		LED,SLP7118C-51-S-T1				
LED440	87-070-197-080		LED,SLP7118C-51-S-T1				
LED441	87-070-197-080		LED,SLP7118C-51-S-T1				
LED442	87-070-197-080		LED,SLP7118C-51-S-T1				
LED443	87-070-197-080		LED,SLP7118C-51-S-T1				
S351	87-A90-095-080		SW,TACT EVQ11G04M				
S352	87-A90-095-080		SW,TACT EVQ11G04M				
S353	87-A90-095-080		SW,TACT EVQ11G04M				
S354	87-A90-095-080		SW,TACT EVQ11G04M				
S355	87-A90-095-080		SW,TACT EVQ11G04M				
AC1 C.B							
FC1	87-033-147-010		FUSE CLAMP,MT-20<LH>				
F101	87-035-368-010		FUSE,4A 250V<LH>				
F101	87-035-491-010		FUSE,6A 125V D UL<U>				
F102	87-035-368-010		FUSE,4A 250V<LH>				
FC2	87-033-147-010		FUSE CLAMP,MT-20<LH>				
FC3	87-033-147-010		FUSE CLAMP,MT-20<LH>				
FC4	87-033-147-010		FUSE CLAMP,MT-20<LH>				
FC101	87-A90-505-080		FUSE CLAMP,TP00351-51<U>				
FC102	87-A90-505-080		FUSE CLAMP,TP00351-51<U>				

○ チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

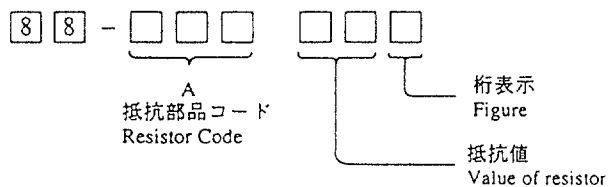

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm)				抵抗コード : A Resistor Code: A
				外形／Form	L	W	t	
1／16W	1608	±5%	CJ		1.6	0.8	0.45	108
1／10W	2125	±5%	CJ		2	1.25	0.45	118
1／8W	3216	±5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION



E C B

KTA1266GR
KTC3198GR



E C B

CC5551




E C B

2SA1296



B C E

2SB1370
FN1016
FP1016




E C B

2SA933
2SC4115




G D S

2SK2937

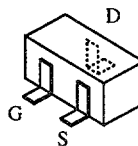


2SK2158

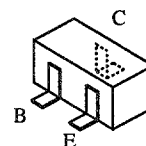


2SA1235F
2SC2714
2SC3052F
CMBT5401
CMBT5551
CSA1362GR
DTA123JK


DTA144WK
RN1410
RT1N141C
RT1N144C
RT1P141C
RT1P144C
RT1P441C


BLOCK DIAGRAM (MAIN / FRONT)

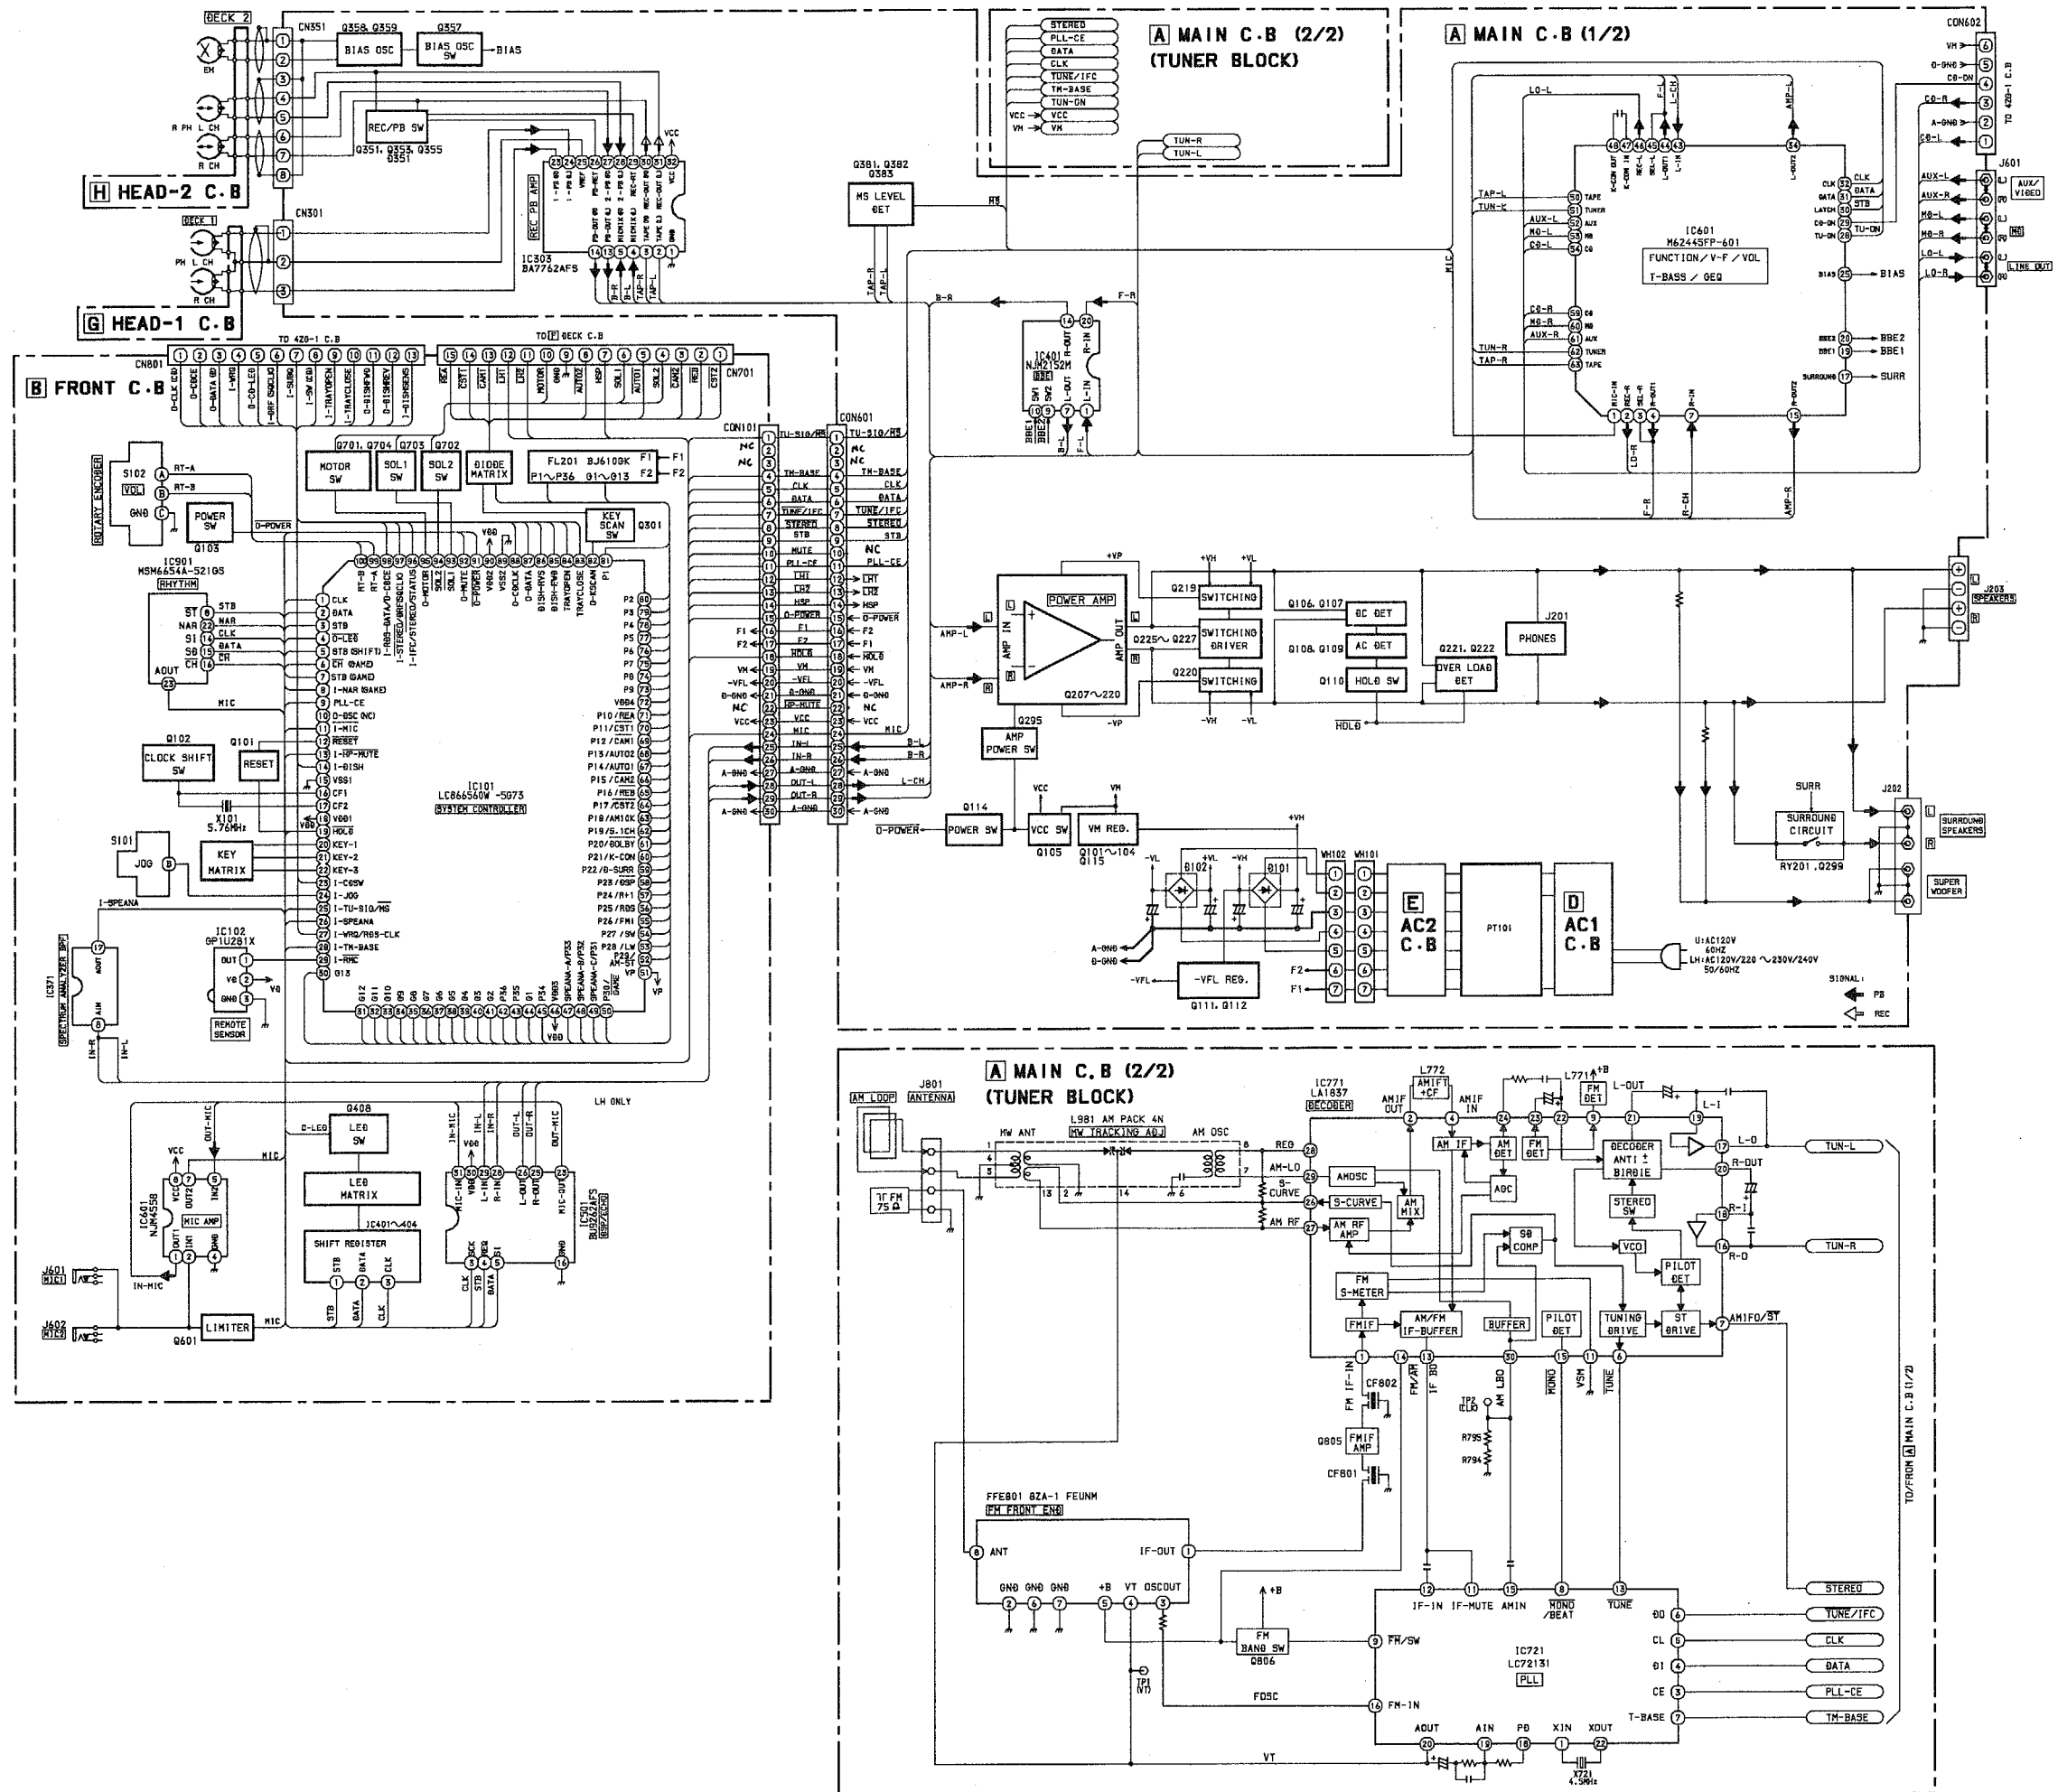


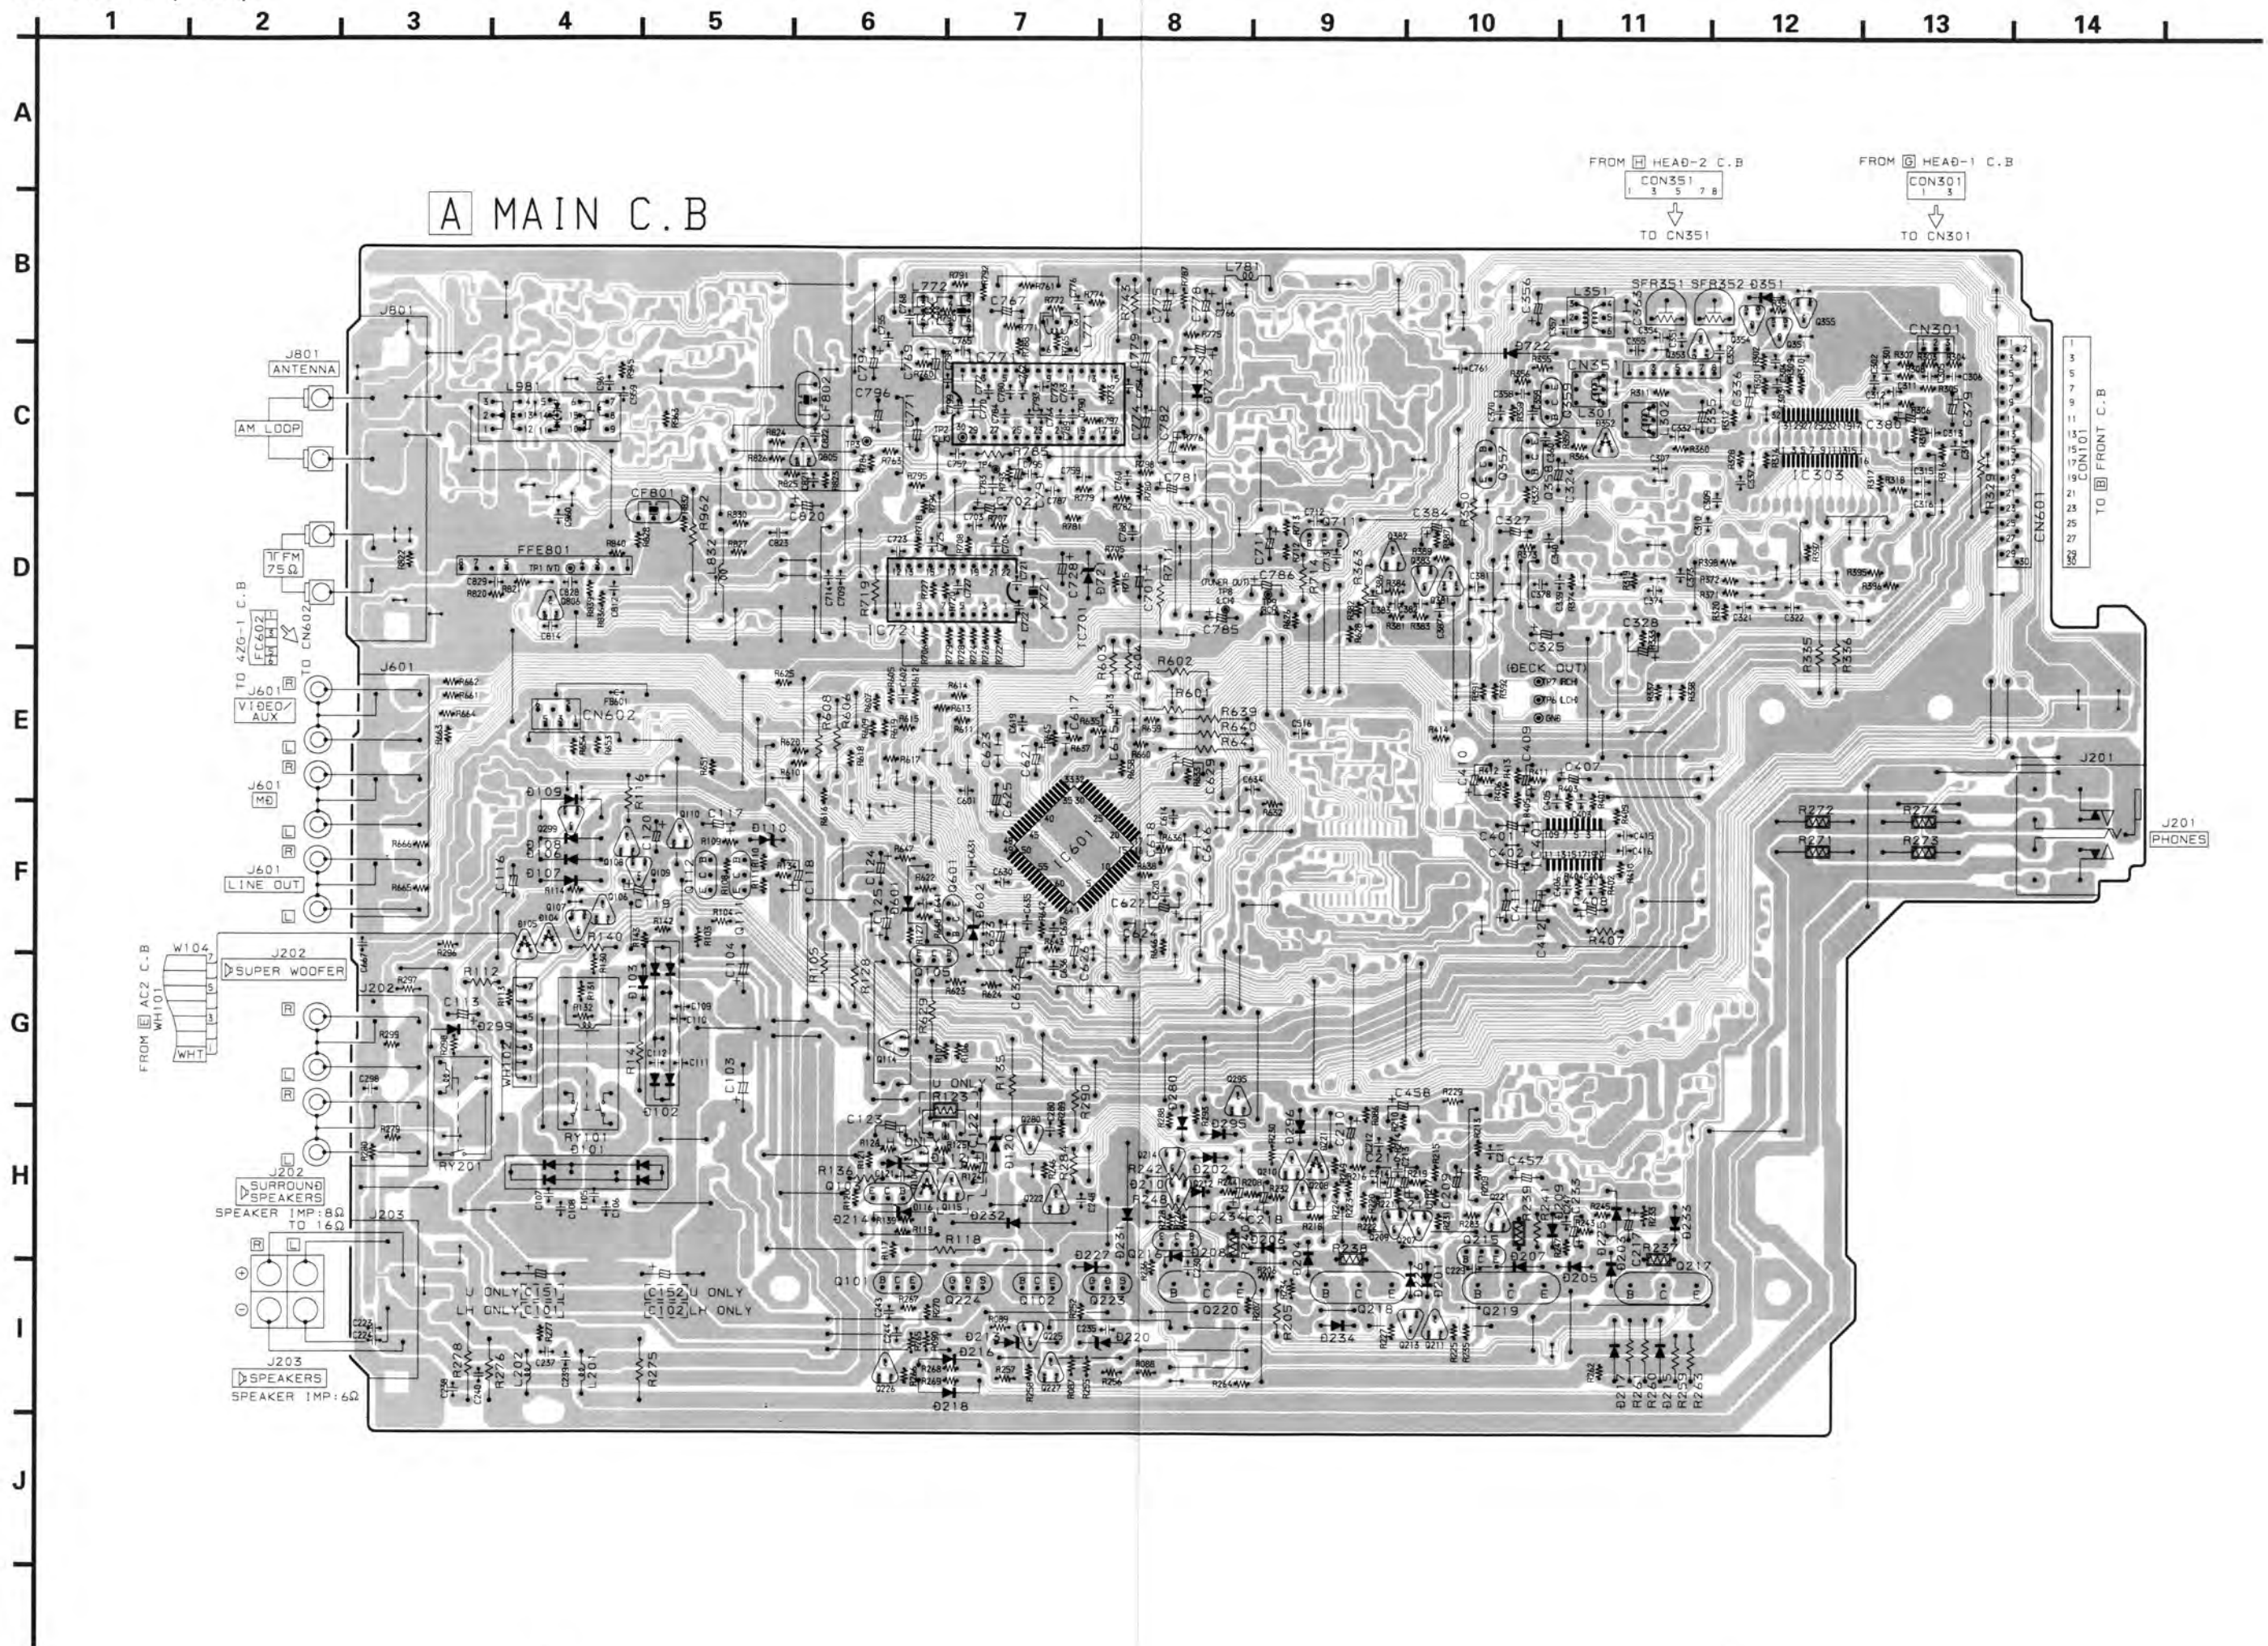




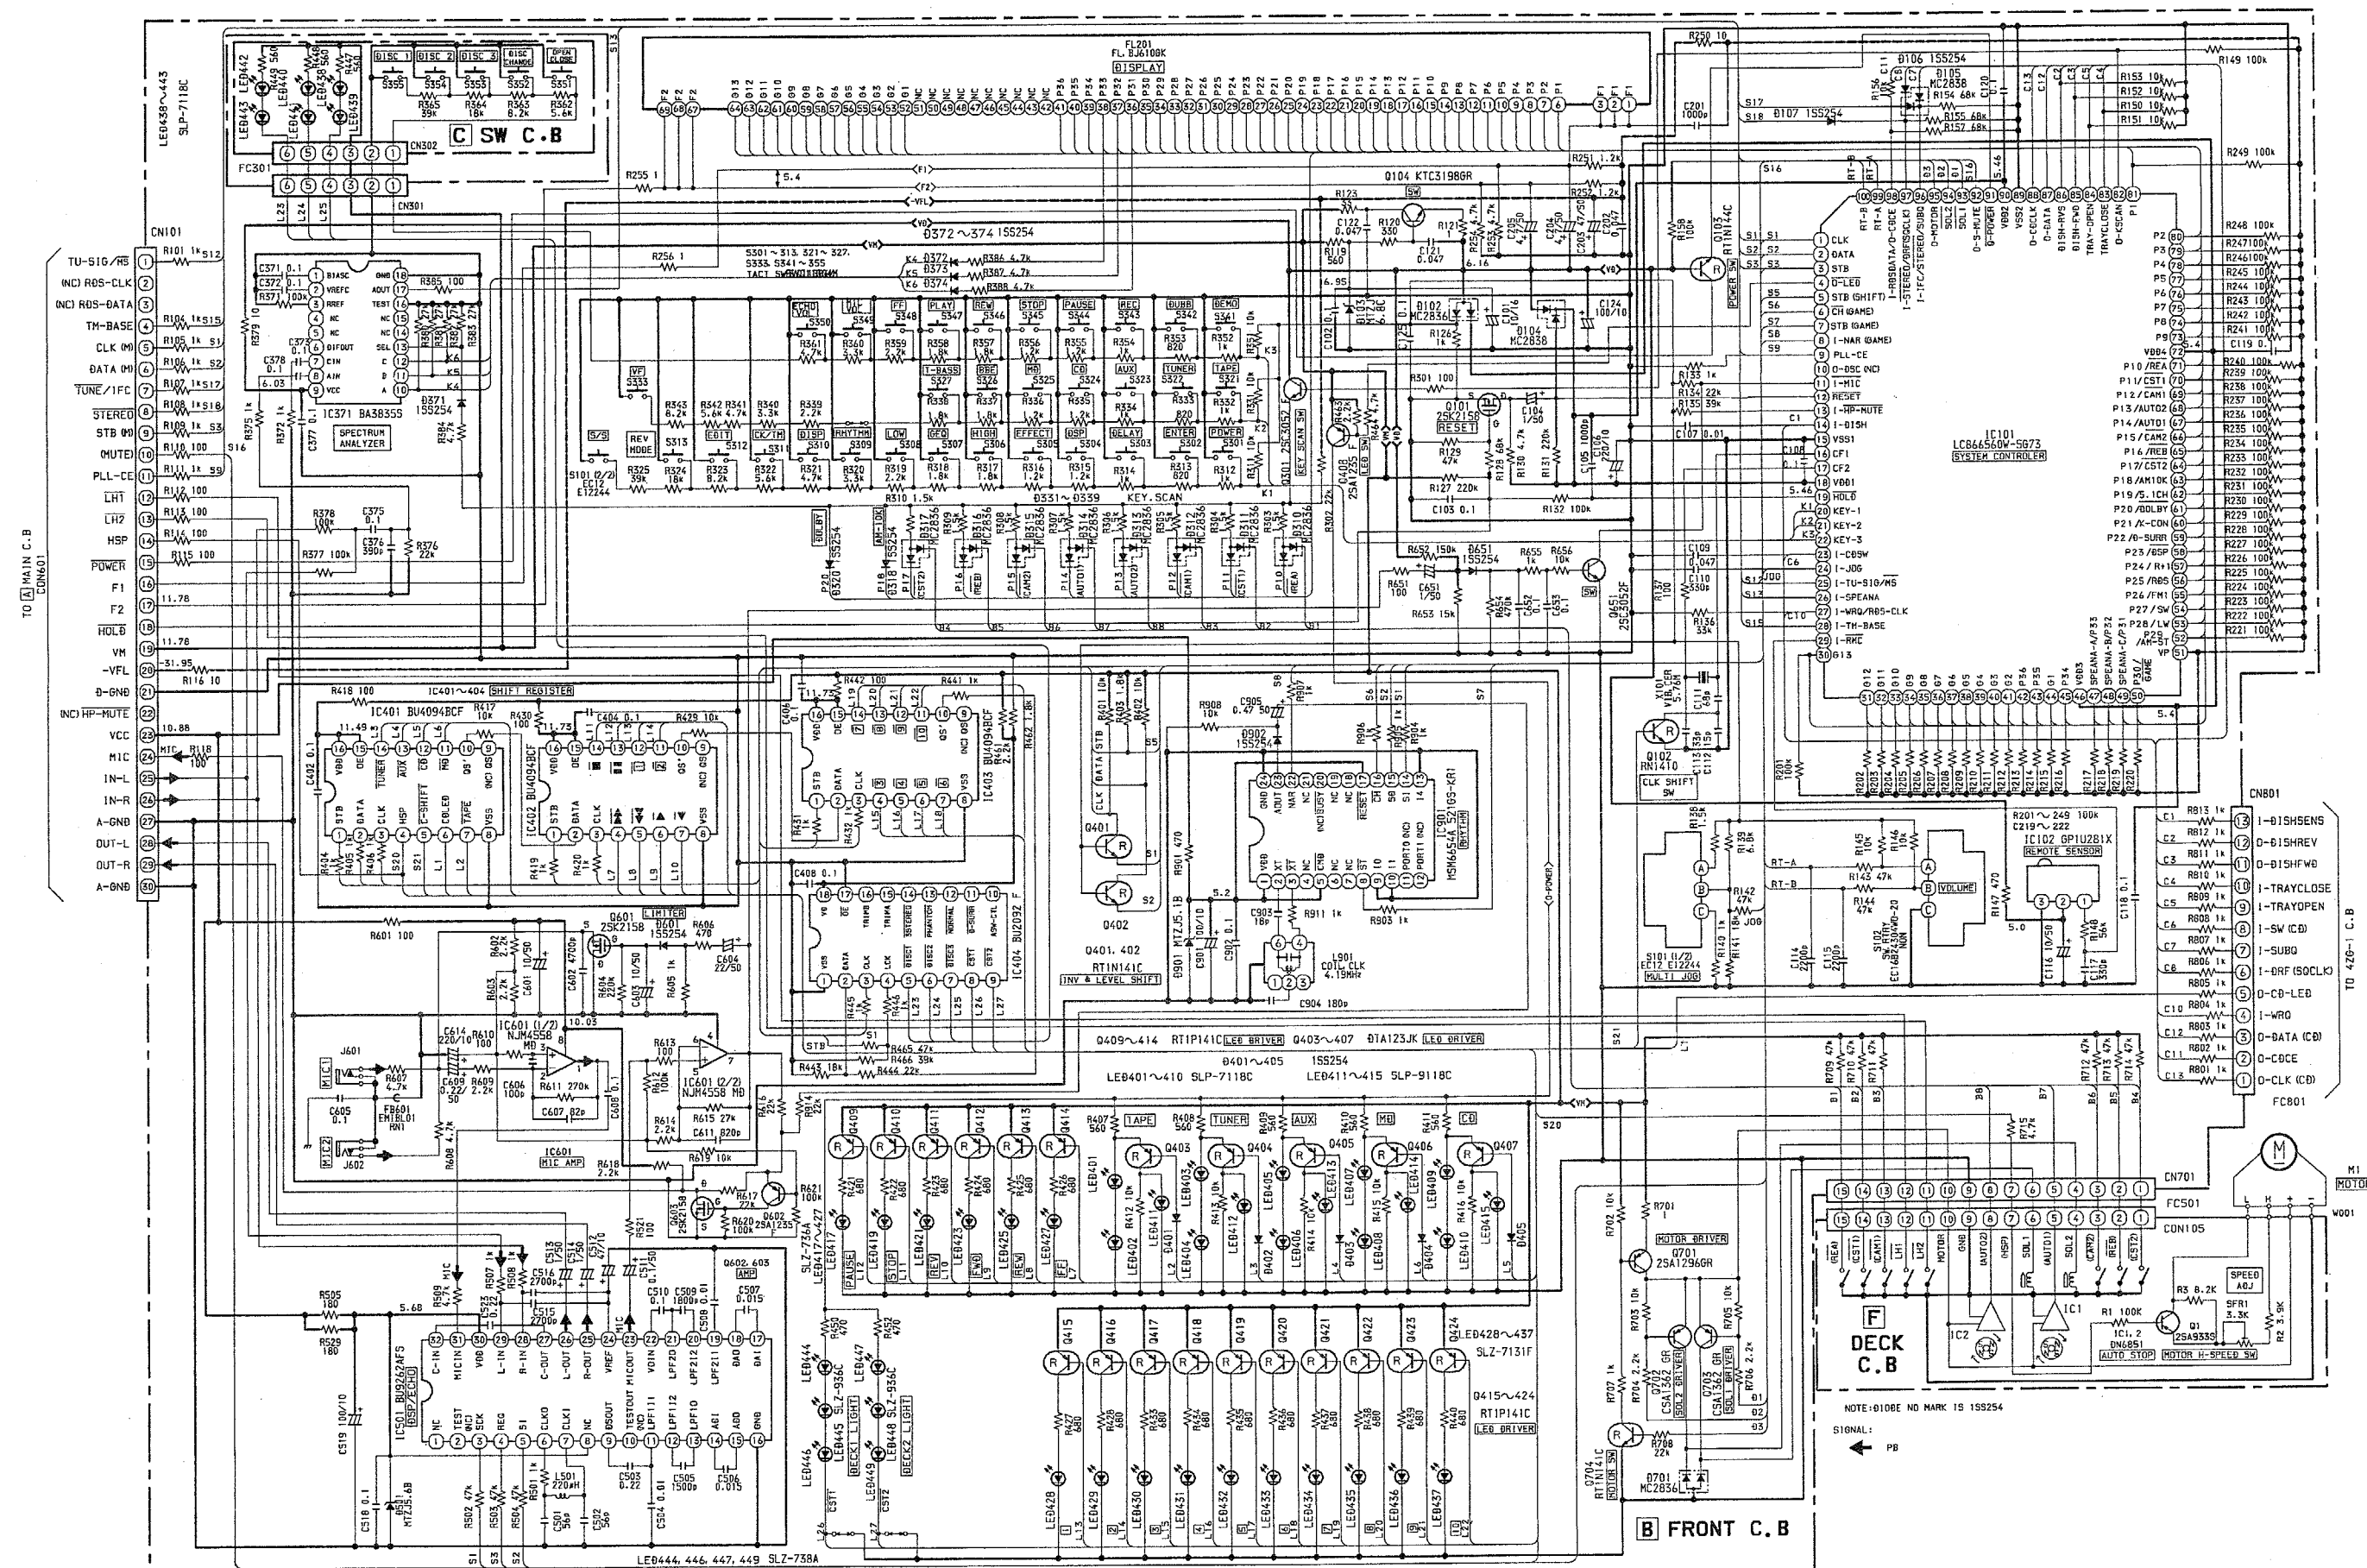


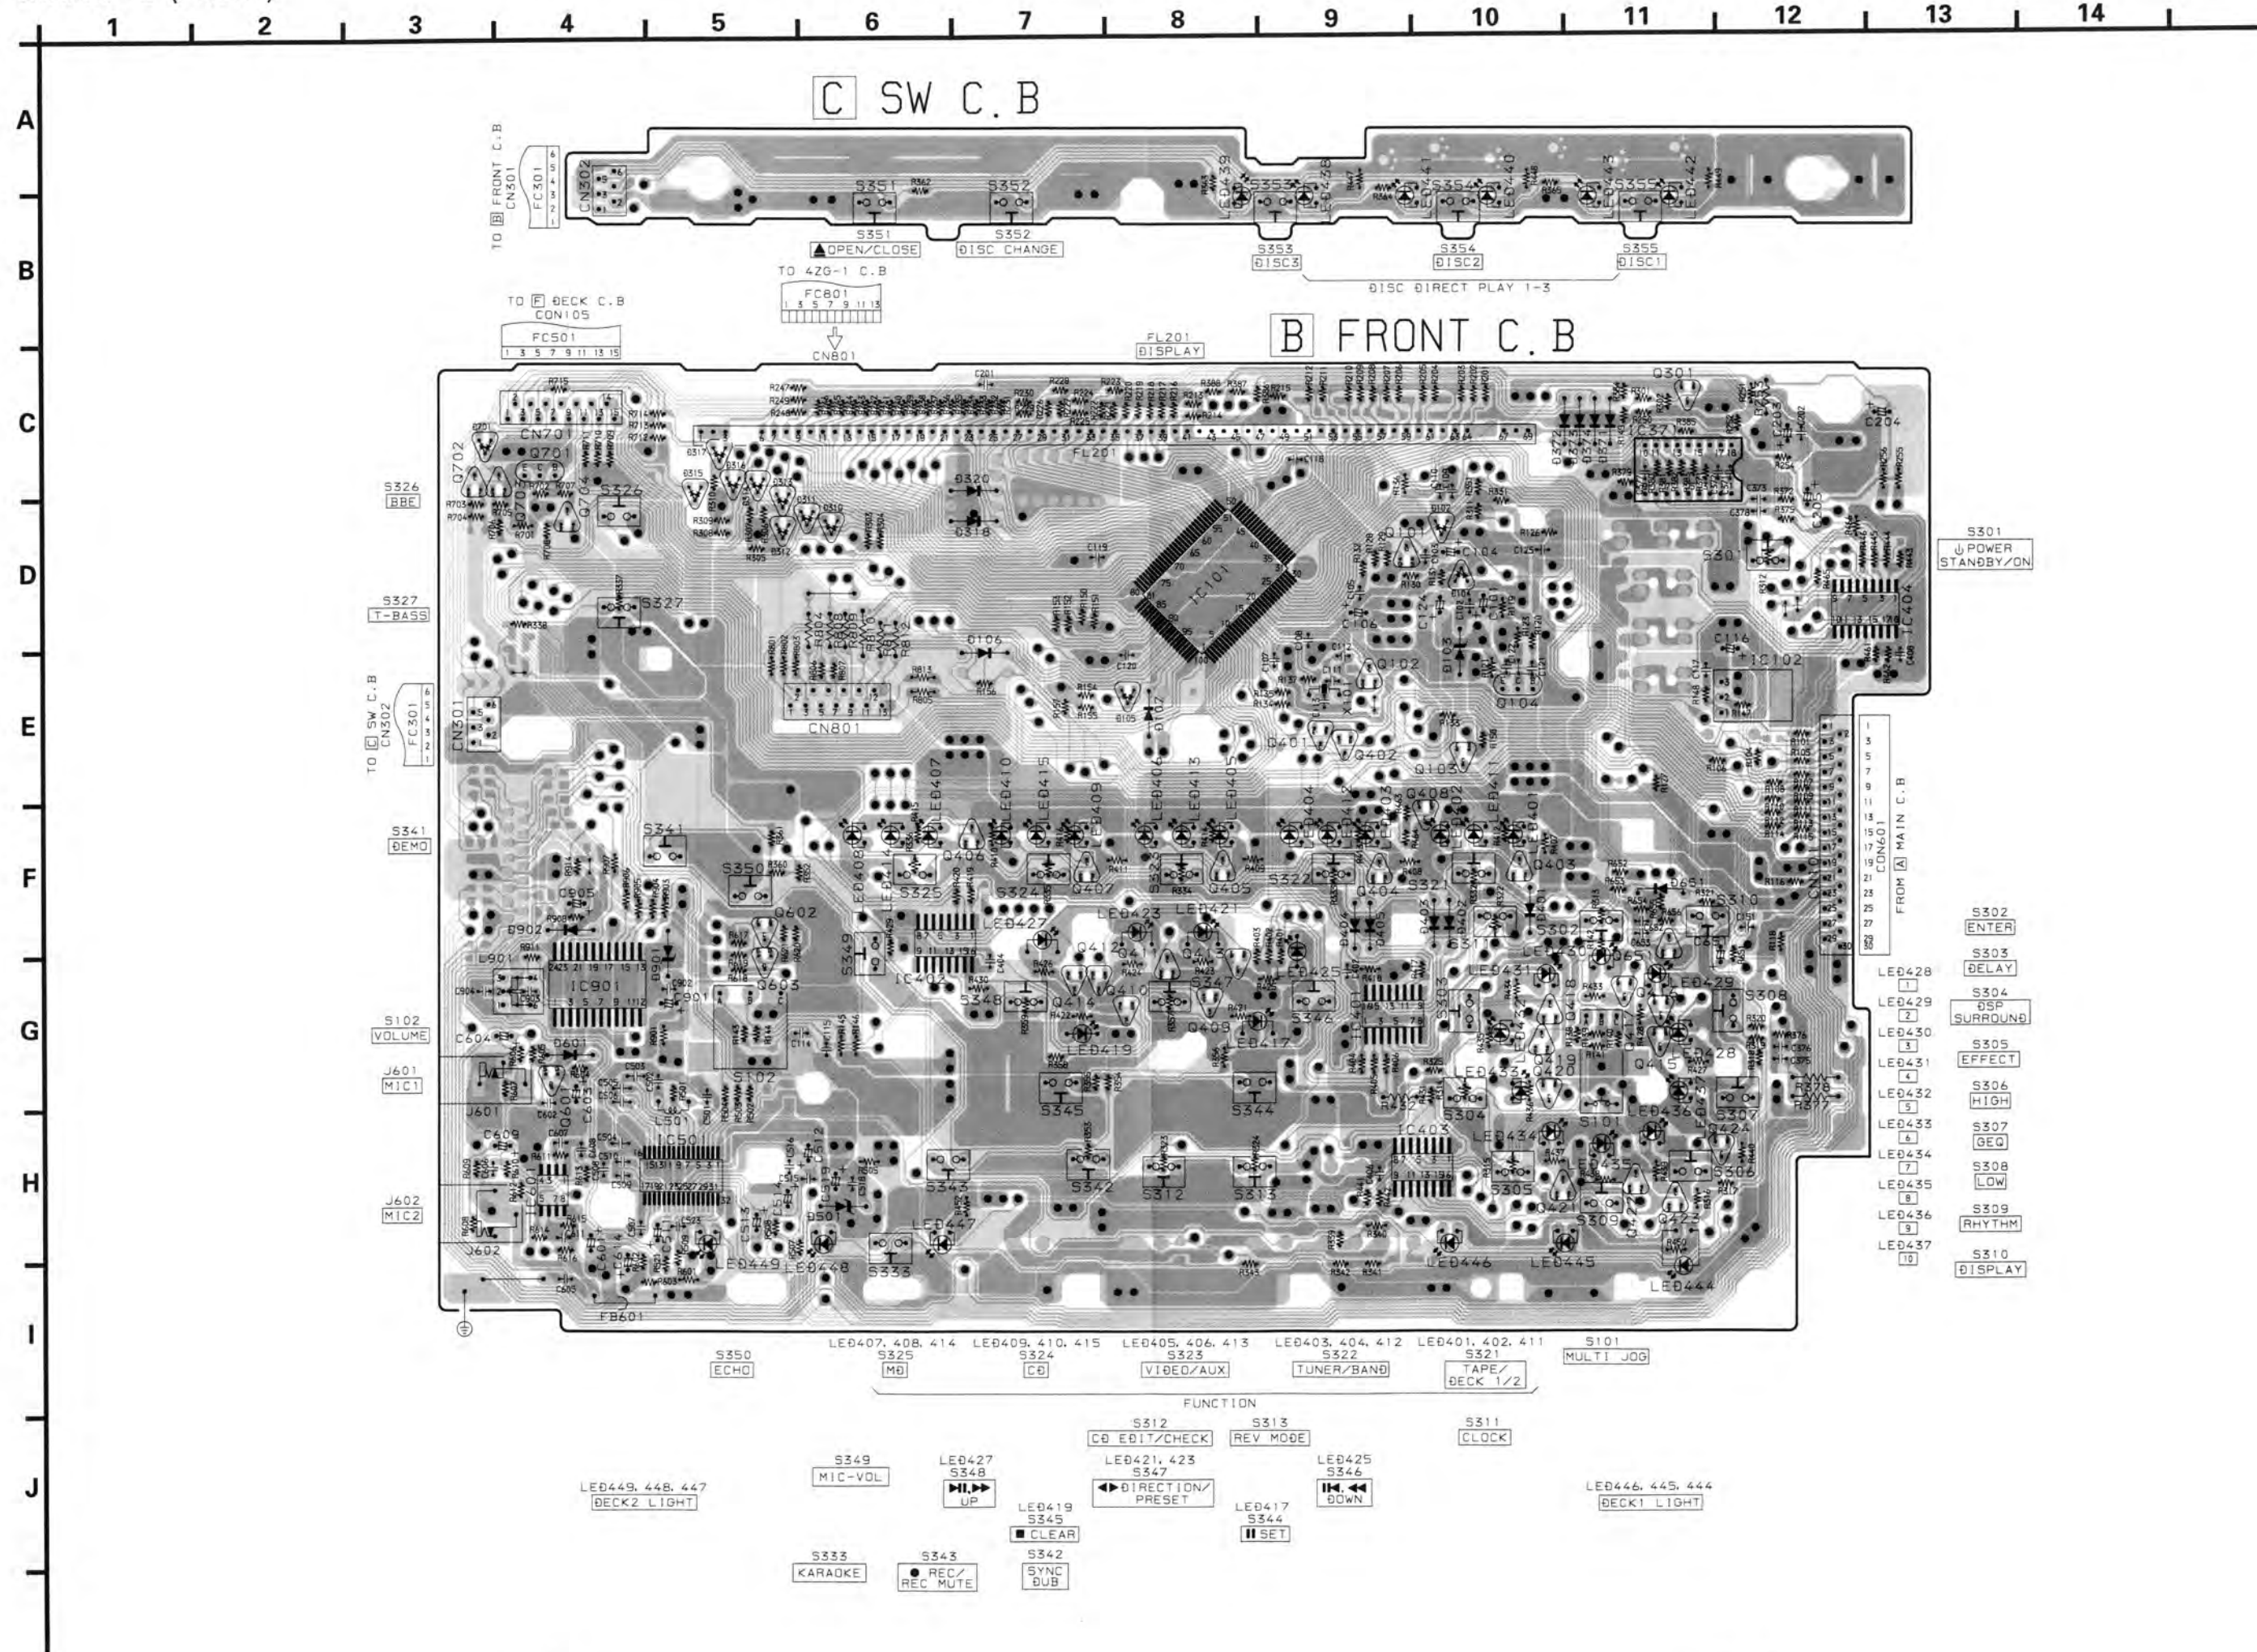

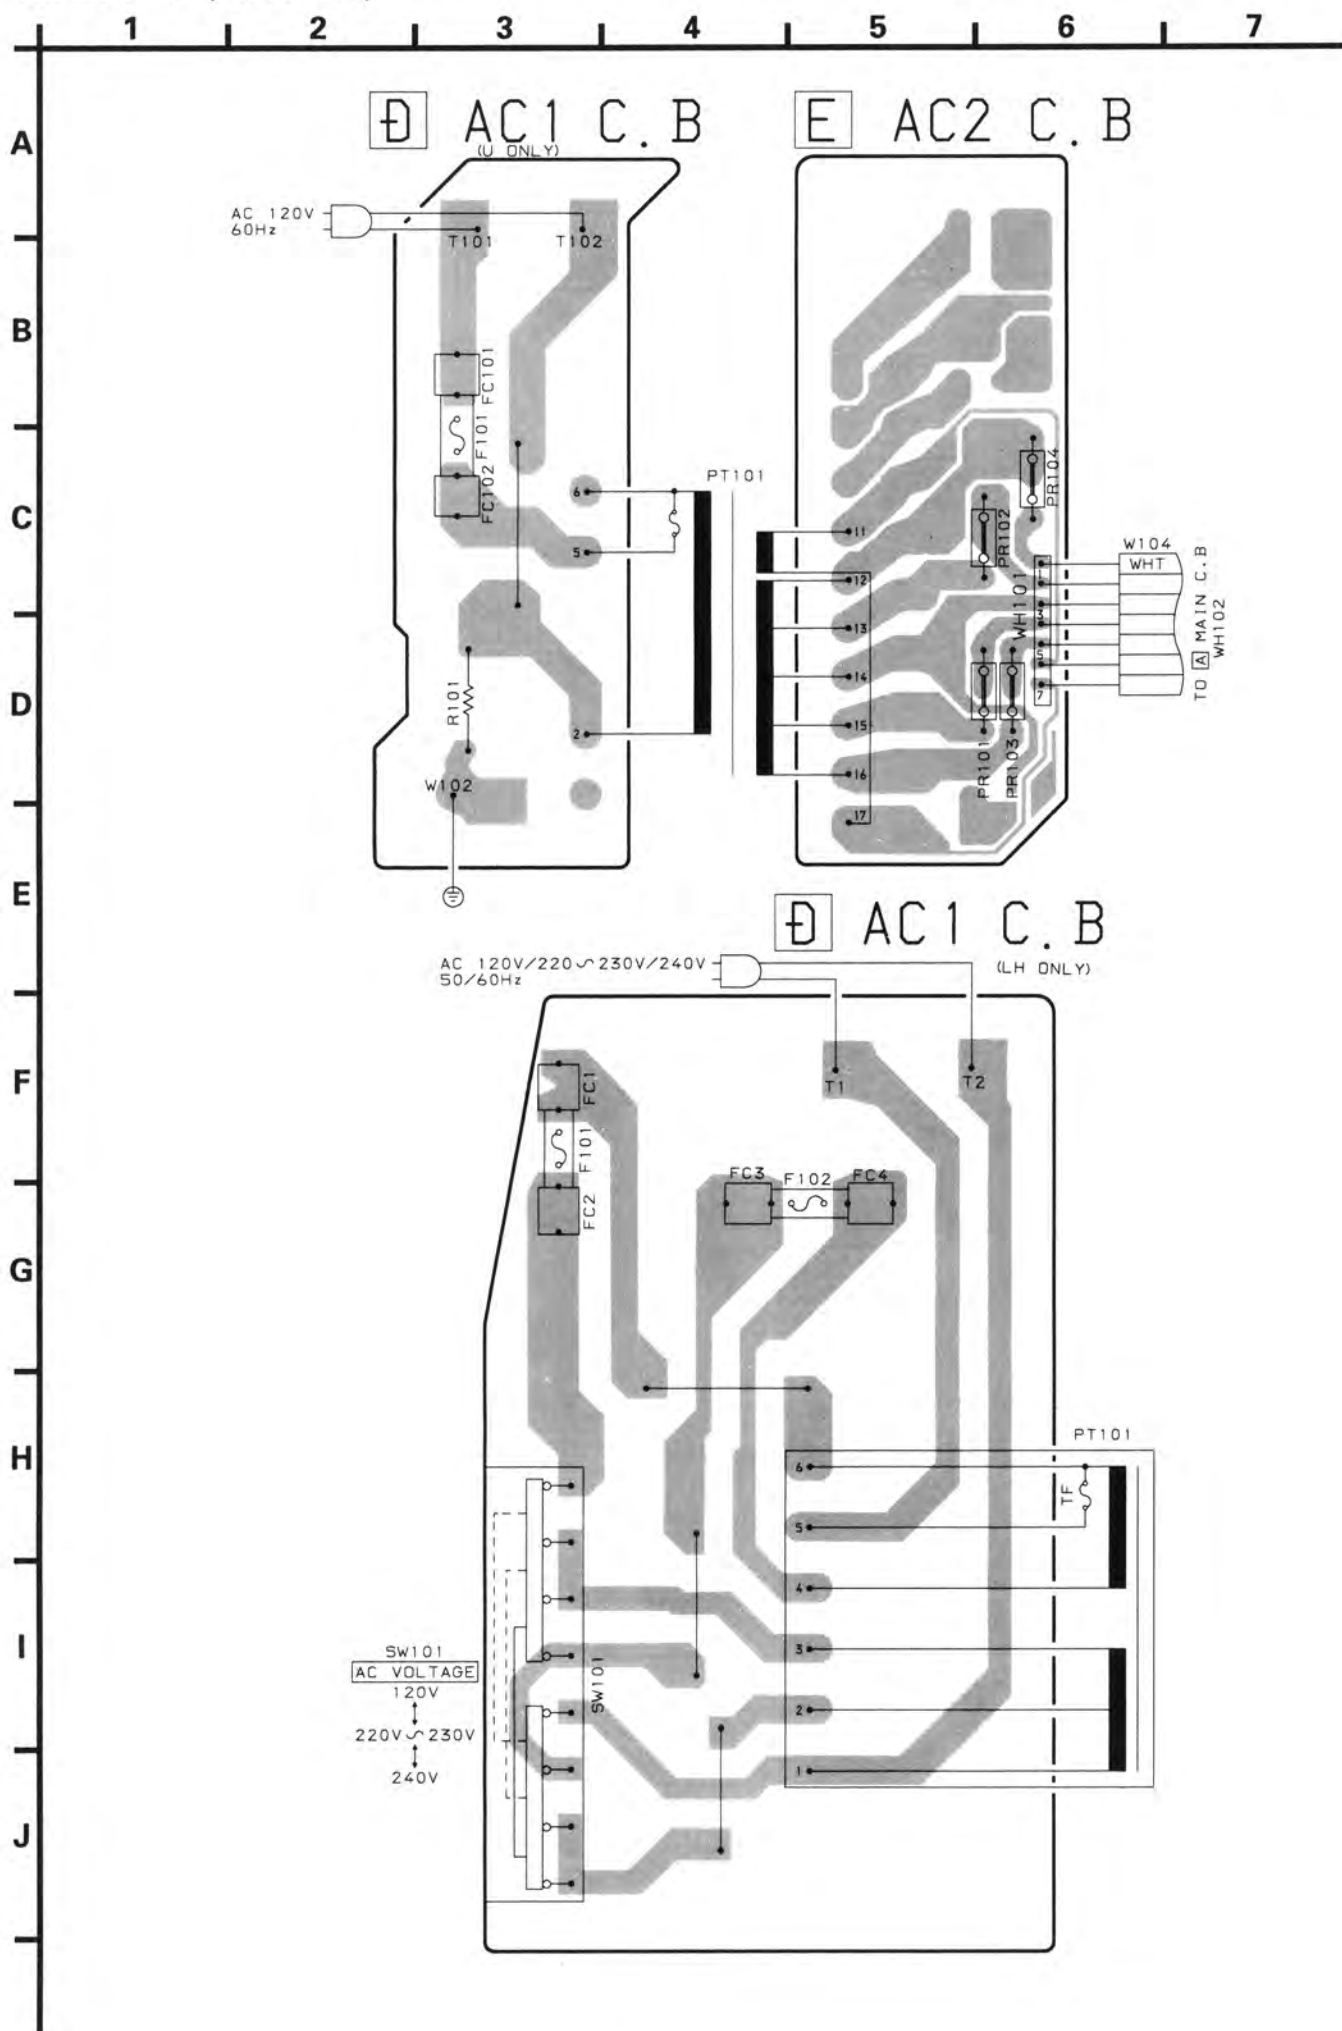


SCHEMATIC DIAGRAM - 3 (TUNER FRONT END)

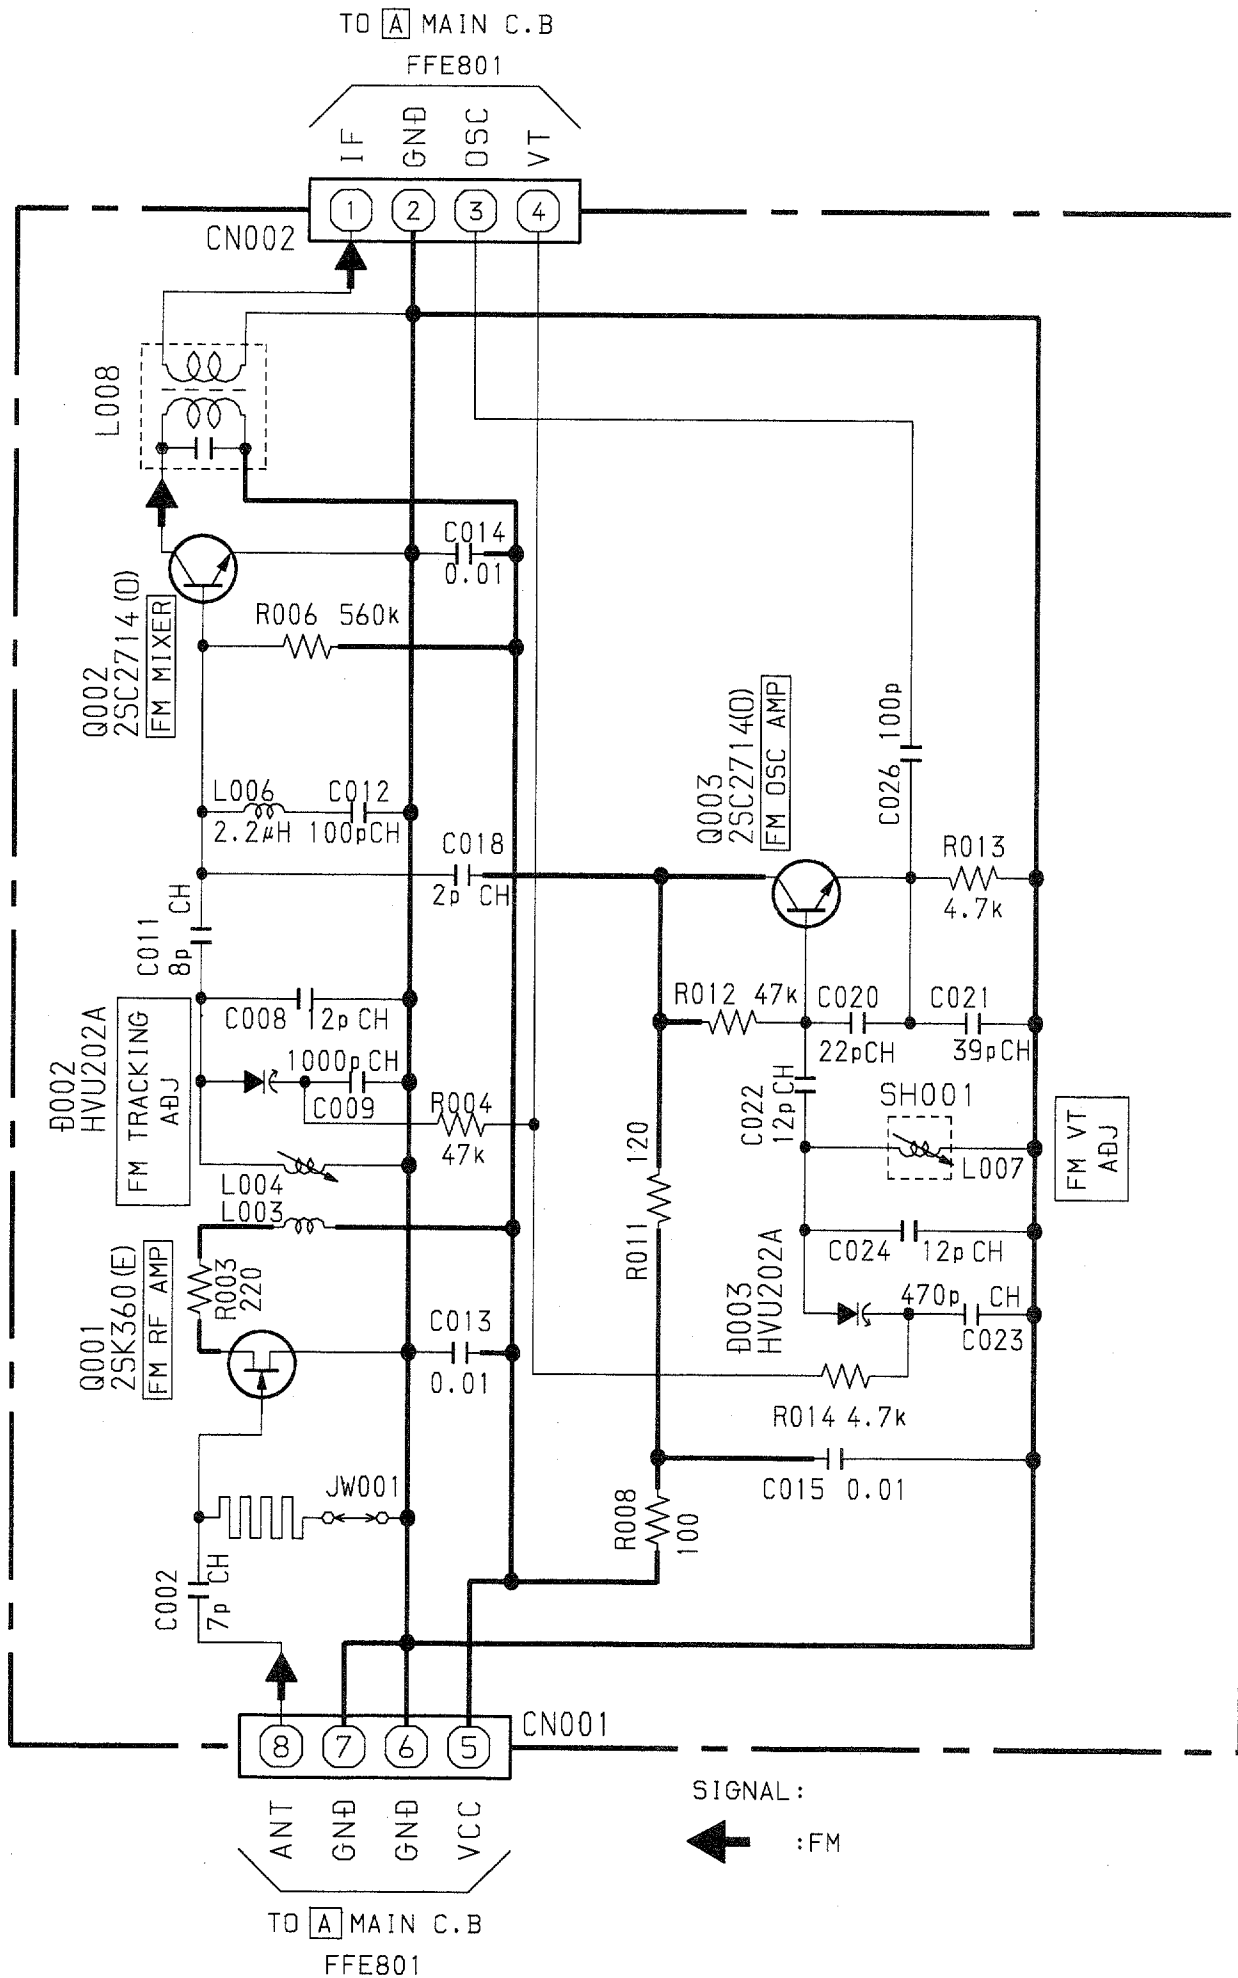





WIRING - 4 (DECK)

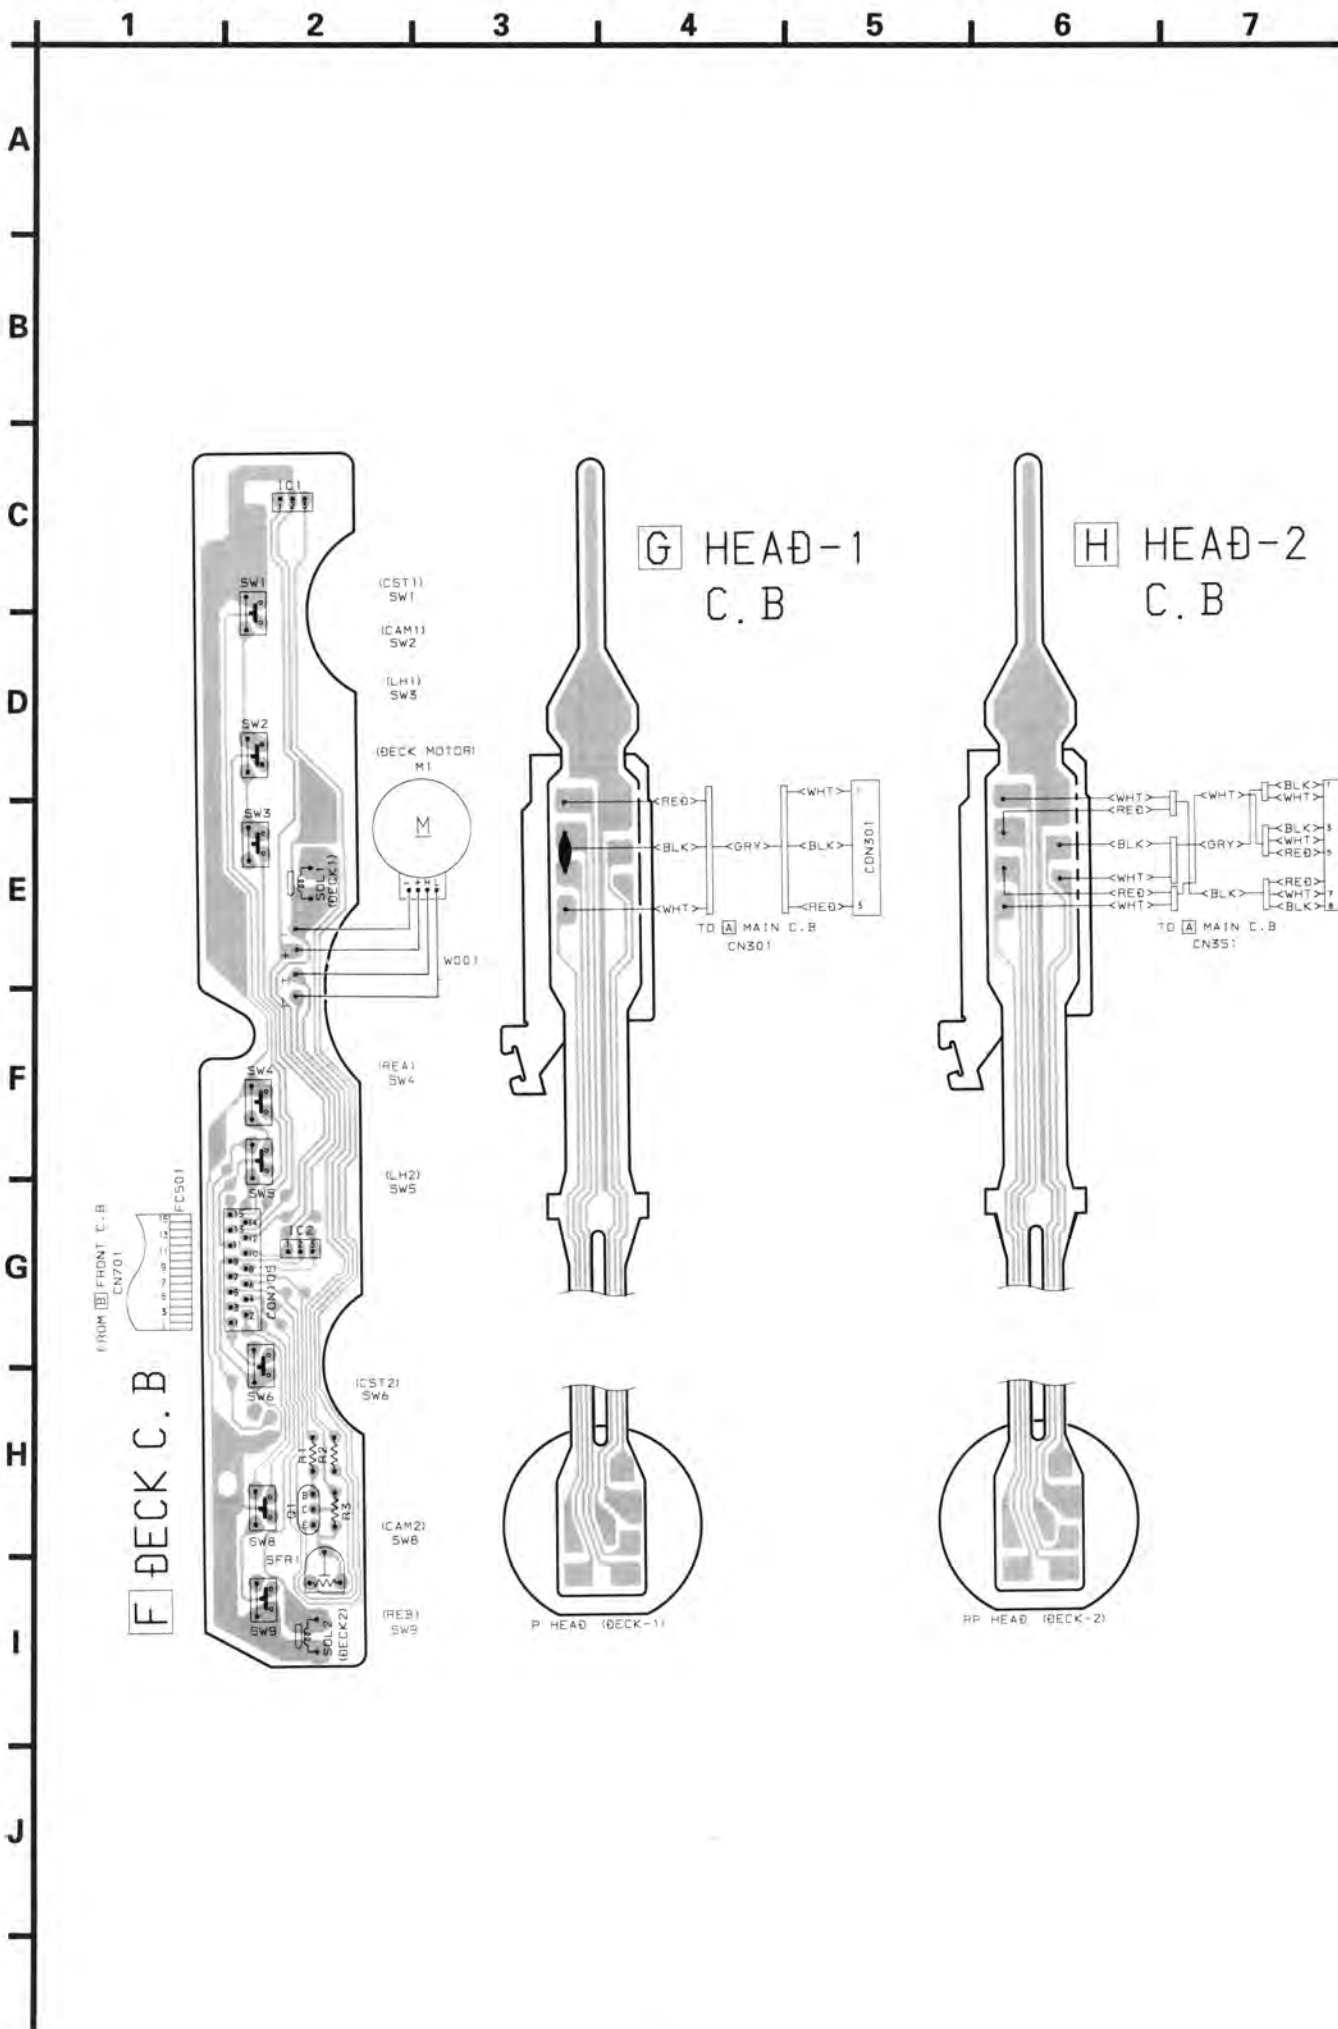


FL GRID ASSIGNMENT & ANODE CONNECTION
FL, BJ610GK

GRID ASSIGNMENT

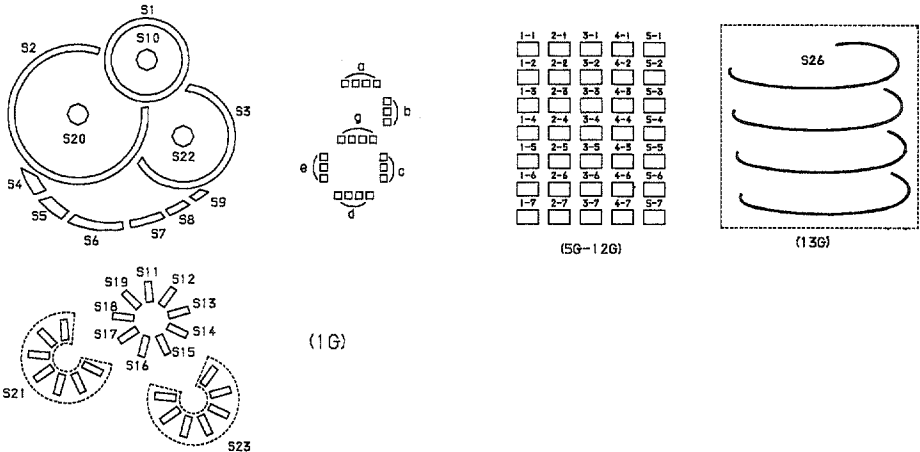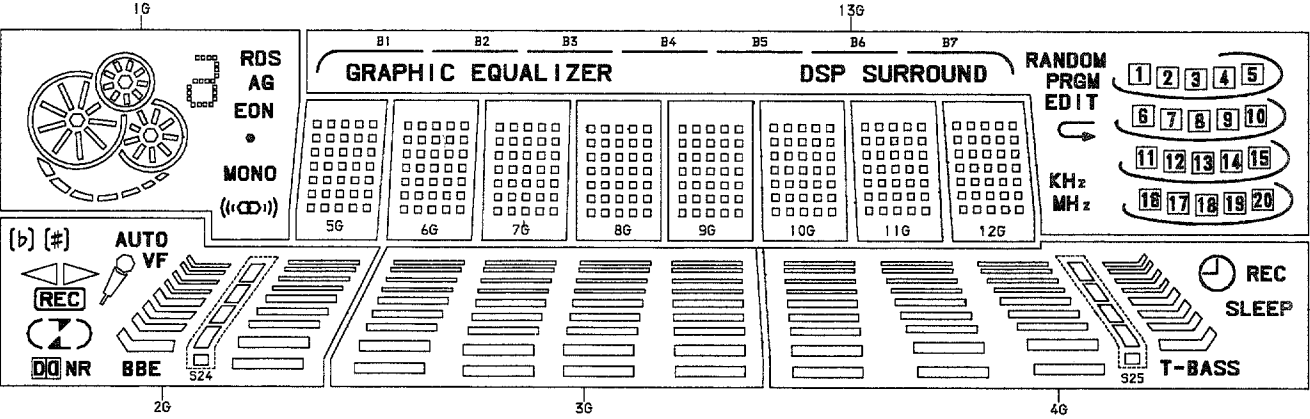

GRID ASSIGNMENT

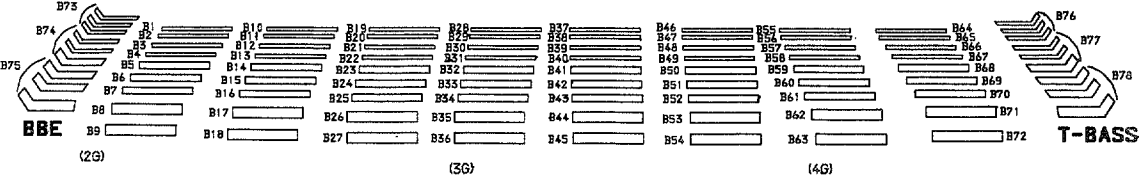


ANODE CONNECTION


	1G	2G	3G	4G	5G-12G	13G
P1	EON	B9	B45	REC	1-1	DSP SURROUND
P2	AG	DO NR	B36	B72	2-1	GRAPHIC EQUALIZER
P3	○	BBE	B27	B63	3-1	B7
P4	MONO	S24	B18	B54	4-1	B6
P5	(⊕⊖)	B8	B44	⊖	5-1	B5
P6	RDS	⌒	B35	B71	1-2	B4
P7	b	Σ	B26	B62	2-2	B3
P8	c	⌒	B17	B53	3-2	B2
P9	a, d, g	B7	B43	SLEEP	4-2	B1
P10	e	REC	B34	B70	5-2	RANDOM
P11	S1	◁	B25	B61	1-3	PRGM
P12	S11	▷	B16	B52	2-3	EDIT
P13	S12	B6	B42	T-BASS	3-3	⌒
P14	S19	b #	B33	B69	4-3	KHz
P15	S13	(b)	B24	B60	5-3	MHz
P16	S10	(#)	B15	B51	1-4	S26
P17	S18	B5	B41	B78	2-4	16
P18	S14	B75	B32	B68	3-4	11

	1G	2G	3G	4G	5G-12G	13G
P19	S17	B74	B23	B59	4-4	6
P20	S15	B73	B14	B50	5-4	1
P21	S16	B4	B40	B77	1-5	17
P22	S3	VF	B31	B67	2-5	12
P23	S23	AUTO	B22	B58	3-5	7
P24	S22	—	B13	B49	4-5	2
P25	S9	B3	B39	B76	5-5	18
P26	S8	—	B30	B66	1-6	13
P27	S7	—	B21	B57	2-6	8
P28	S6	—	B12	B48	3-6	3
P29	S5	B2	B38	S25	4-6	19
P30	S4	—	B29	B65	5-6	14
P31	S2	—	B20	B56	1-7	9
P32	S21	—	B11	B47	2-7	4
P33	S20	B1	B37	—	3-7	20
P34	—	—	B28	B64	4-7	15
P35	—	—	B19	B55	5-7	10
P36	—	—	B10	B46	—	5


ADJUSTMENT <TUNER / DECK>

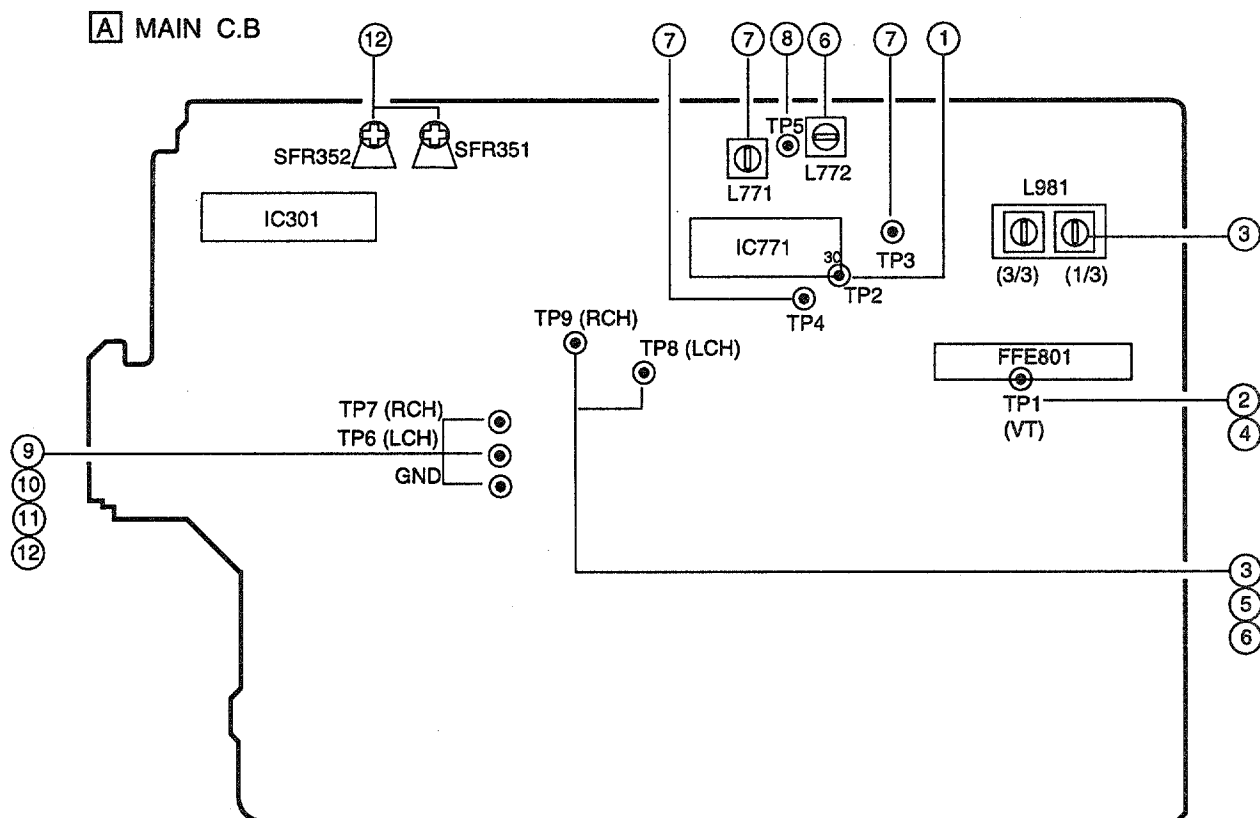

F DECK C.B

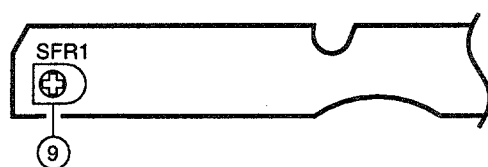

DECK-1 P, DECK-2 R/P/E HEAD

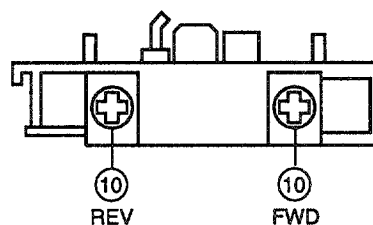

< TUNER SECTION >

1. Clock Frequency Check
Settings : • Test point : TP2
Method : Set to AM 1710kHz and check that the test point is 2160kHz $\pm$ 45Hz.
2. AM VT Check
Settings : • Test point : TP1
Method : Set to AM 1710kHz and AM 530kHz and check that the test point is less than 8.5V(1710kHz) and more than 0.6V(530kHz).
3. AM Tracking Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L981(1/3) 1000kHz
Method : Set to AM 1000kHz and adjust L981(1/3) to MAX.
4. FM VT Check
Settings : • Test point : TP1
Method : Set to FM 108.0MHz and check that the test point is less than 8.0V.
Set to FM 87.5MHz and check that the test point is more than 0.5V.

5. FM Tracking Check
 Settings : • Test point : TP8(Lch), TP9(Rch)
 Method : Set to FM 98.0MHz and check that the test point is less than 9.0dB.
6. AM IF Adjustment
 Settings : • Test point : TP8(Lch), TP9(Rch)
 • Adjustment location :
 L772 450kHz
7. DC Balance / Mono Distortion Adjustment
 Settings : • Test point : TP3, TP4
 • Adjustment location : L771
 • Input level : 54dB
 Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes $0V \pm 0.04V$.
 Next, check that the distortion is less than 1.3%
8. Auto Stop Level Check
 AM
 Settings : • Input level : 52dB
 • Test point : TP5
 Method : Set to AM 1000kHz and check that the auto stop is at 52dB +10dB / -15dB.
 FM
 Settings : • Input level : 25dB
 • Test point : TP5
 Method : Set to FM 98.0MHz and check that the auto stop is at 25dB $\pm$ 10dB.

< DECK SECTION >

9. Tape Speed Adjustment (DECK 1, DECK 2)
 Settings : • Test tape : TTA-100
 • Test point : TP6(Lch), TP7(Rch)
 • Adjustment location : SFR1
 Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz $\pm$ 5Hz.

10. Head Azimuth Adjustment (DECK 1, DECK 2)
 Settings : • Test tape : TTA-300
 • Test point : TP6(Lch), TP7(Rch)
 • Adjustment location : Head azimuth adjustment screw
 Method : Play back (FWD) the 10kHz signal of the test tape and adjust screw so that the output becomes maximum.
 Next, perform on REV PLAY mode.
11. PB Frequency Response Check (DECK 1, DECK 2)
 Settings : • Test tape : TTA-300
 • Test point : TP6(Lch), TP7(Rch)
 Method : Play back the 315Hz and 10kHz signals of the test tape and check that the output ratio of the 10kHz signal with respect to that of the 315Hz signal is within 5dB.
12. REC/PB Frequency Response Adjustment
 Settings : • Test tape : TTA-602
 • Test point : TP6(Lch), TP7(Rch)
 • Input signal : 1kHz / 10kHz (LINE IN)
 • Adjustment location : SFR351 (Lch)
 SFR352 (Rch)
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes -28dBV. Record and play back the 1kHz and 10kHz signals and adjust SFRs so that the output of the 10kHz signals becomes 0dB $\pm$ 0.5dB with respect to that of the 1kHz signal.

PRACTICAL SERVICE FIGURE

<TUNER SECTION>

<FM SECTION>

IHF Sensitivity : Less than 10 / 9 / 9dB
 (THD 3%) [at 87.5 / 98.0 / 108.0MHz]
 S/N 50dB Quieting sensitivity :
 Less than 35dB
 [at 98.0MHz]
 Signal to noise ratio : Mono : More than 72dB
 Stereo : More than 66dB
 [at 98.0MHz]
 Distortion : Mono : Less than 1.2%
 Stereo : Less than 2.0%
 [at 98.0MHz]
 Auto stop level : 25dB $\pm$ 10dB [at 98.0MHz]
 Stereo separation : More than 30dB [at 98.0MHz]
 Intermediate frequency : 10.7MHz

<MW SECTION>

Sensitivity : Less than 60dB
 (S/N 20 dB) [at 600kHz]
 Less than 58dB
 [at 1000kHz]
 Less than 58dB
 [at 1400kHz]
 Signal to noise ratio : More than 36dB
 [at 1000kHz]
 Distortion : Less than 1.5%
 [at 1000kHz]
 Auto stop level : 52dB +10/-15dB
 [at 1000kHz]
 Intermediate frequency : 450kHz

<DECK SECTION>

Tape speed : 3000Hz $\pm$ 45Hz
 Wow & flutter : Less than 0.21%
 (W.R.M.S)
 Take-up torque : 30 ~ 55g-cm
 (FWD, REV)
 F.F torque : 75 ~ 160g-cm
 REW torque : 75 ~ 160g-cm
 Back tension : 2 ~ 7g-cm
 (FWD, REV)
 PB output level : 300mV $\pm$ 3dB
 (SP OUT 2V, TTA-200)
 REC/PB output level : 0dB $\pm$ 3dB
 (SP OUT 2V, NORM)
 Distortion (REC/PB) : Less than 2.0%
 (NORM)
 Noise level (PB) : Less than 2.0mV
 (NORM, SP OUT 2V)
 Noise level (REC/PB) : Less than 3.0mV
 (NORM, SP OUT 2V)
 Erasing ratio : More than 60dB
 (at 125Hz, +10VU)
 Test tape : TTA-200
 TTA-602 (NORMAL)

IC DESCRIPTION


IC, LC866560W-5G73

Pin No.	Pin Name	I/O	Description
1	CLK	O	CLOCK output for MAIN,FRONT PWB.
2	DATA	O	DATA output for MAIN, FRONT PWB.
3	STB	O	Latch strobe output for MAIN PWB.
4	O-LED	O	LED ON/OFF output.
5	STB (SHIFT)	O	Latch strobe output for FRONT shift register.
6	RESET (GAME)	I	Reset input for Sound IC.
7	STB (GAME)	O	Latch strobe output for Sound IC.
8	I-NAR (GAME)	I	Sound IC NAR input.
9	PLL-CE	O	PLL IC chip enable output.
10	O-DSC	O	Serial data output for PROLOGIC PWB. (Not connected)
11	I-MIC	I	Microphone input for AUTO VF display.
12	RESET	I	Reset input.
13	I-HP-MUTE	I	Headphone input for MUTE by PROLOGIC.
14	I-DISH	I	CD turntable photo sensor A/D converter input.
15	VSS 1	–	GND.
16	CF 1	–	5.76MHz oscillator circuit.
17	CF 2	–	
18	VDD 1	–	Power supply input.
19	HOLD	I	Power failure detection input. "H" normal operation, "L" main power cannot be turned on.
20	KEY-1	I	KEY input.(A/D)
21	KEY-2	I	
22	KEY-3	I	
23	I-CD SW	I	CD mechanical switch A/D converter input.
24	I-JOG	I	JOG dial A/D level input.
25	I-TU-SIG/MS	I	Tuner signal and deck music sensor signal input.
26	I-SPEANA	I	A/D input for spectrum analyzer display.
27	I-WRQ/RDS-CLK	I	CD WRQ input. TUNER RDS CLOCK input.
28	I-TM-BASE	I	REFERENCE CLOCK input for timer watch.
29	I-RMC	I	System remote control signal input.
30~41	G13~G2	O	FL GRID output G2~G13.
42, 43	P36, P35	O	FL SEGMENT output P35, P36.
44	G1	O	FL GRID output G1.
45	P34	O	FL SEGMENT output P34.
46	VDD3	–	Power supply input.
47	SPEANA-A/P33	O	Spectrum analyzer band switching output /FL segment P33 output.
48	SPEANA-B/P32	O	Spectrum analyzer band switching output /FL segment P32 output.
49	SPEANA-C/P31	O	Spectrum analyzer band switching output /FL segment P31 output.
50	P30/GAME	I/O	FL segment P30 output / GAME input to diode.
51	VP	–	Power supply input for FL display.
52	P29/AM-ST	I/O	FL segment P29 output / AM-ST input to diode.
53	P28/LW	I/O	FL segment P28 output / LW input to diode.
54	P27/SW	I/O	FL segment P27 output / SW input to diode.


Pin No.	Pin Name	I/O	Description
55	P26/FM 1	I/O	FL segment P26 output / FM1 (OIRT) input to diode.
56	P25/RDS	I/O	FL segment P25 output / RDS input to diode.
57	P24/R+1	I/O	FL segment P24 output / RVS+1 way input to diode.
58	P23/DSP	I/O	FL segment P23 output / DSP input to diode.
59	P22/D-SURR	I/O	FL segment P22 output / SURR input to diode.
60	P21/K-CON	I/O	FL segment P21 output / K-CON input to diode.
61	P20/DOLBY	I/O	FL segment P20 output / DOLBY input to diode.
62	P19/5.1CH	I/O	FL segment P19 output / 5.1CH input to diode.
63	P18/AM10K	I/O	FL segment P18 output / AM 10kHz input to diode.
64	P17/CST 2	I/O	FL segment P17 output / DECK2 cassette detect switch data input.
65	P16/REB	I/O	FL segment P16 output / DECK2 side-B record OK switch data input.
66	P15/CAM 2	I/O	FL segment P15 output / DECK2 CAM switch data input.
67	P14/AUTO 1	I/O	FL segment P14 output / DECK1 AUTO stop signal input.
68	P13/AUTO 2	I/O	FL segment P13 output / DECK2 AUTO stop signal input.
69	P12/CAM 1	I/O	FL segment P12 output / DECK1 CAM switch data input.
70	P11/CST 1	I/O	FL segment P11 output / DECK1 cassette detect switch data input.
71	P10/REA	I/O	FL segment P10 output / DECK2 side A record OK switch data input.
72	VDD 4	-	Power supply input.
73 ~ 81	P9 ~ P1	O	FL segment P1 ~ P9 output.
82	O-KSCAN	O	Switch SCAN timing output.
83	TRAY-CLS	O	CD TRAY CLOSE data output.
84	TRAY-OPEN	O	CD TRAY OPEN data output.
85	DISH-FWD	O	CD turntable forward rotation output.
86	DISH-RVS	O	CD turntable reverse rotation output.
87	O-DATA	O	CD data output.
88	O-CDCLK	O	CD clock output.
89	VSS2	-	GND.
90	VDD2	-	Power supply input.
91	O-POWER	O	System power supply ON/OFF output.
92	O-MUTE	O	System mute ON/OFF output.
93	SOL 1	O	DECK 1 solenoid output.
94	SOL 2	O	DECK 2 solenoid output.
95	O-MOTOR	O	DECK MOTOR ON/OFF output.
96	I-IFC/STEREO/SUBQ	I	Tune IF count serial data input /CD SUBQ data input.
97	I-STEREO/ DRF(SQCLK)	I/O	Tuner stereo detected input / CD SQ CLOCK output.
98	I-RDS-DATA/ O-CDCE	I/O	RDS data input / CD chip enable output.
99	RT-A	I	Rotary encoder A input.
100	RT-B	I	Rotary encoder B input.

IC BLOCK DIAGRAM


IC, M62445FP-601

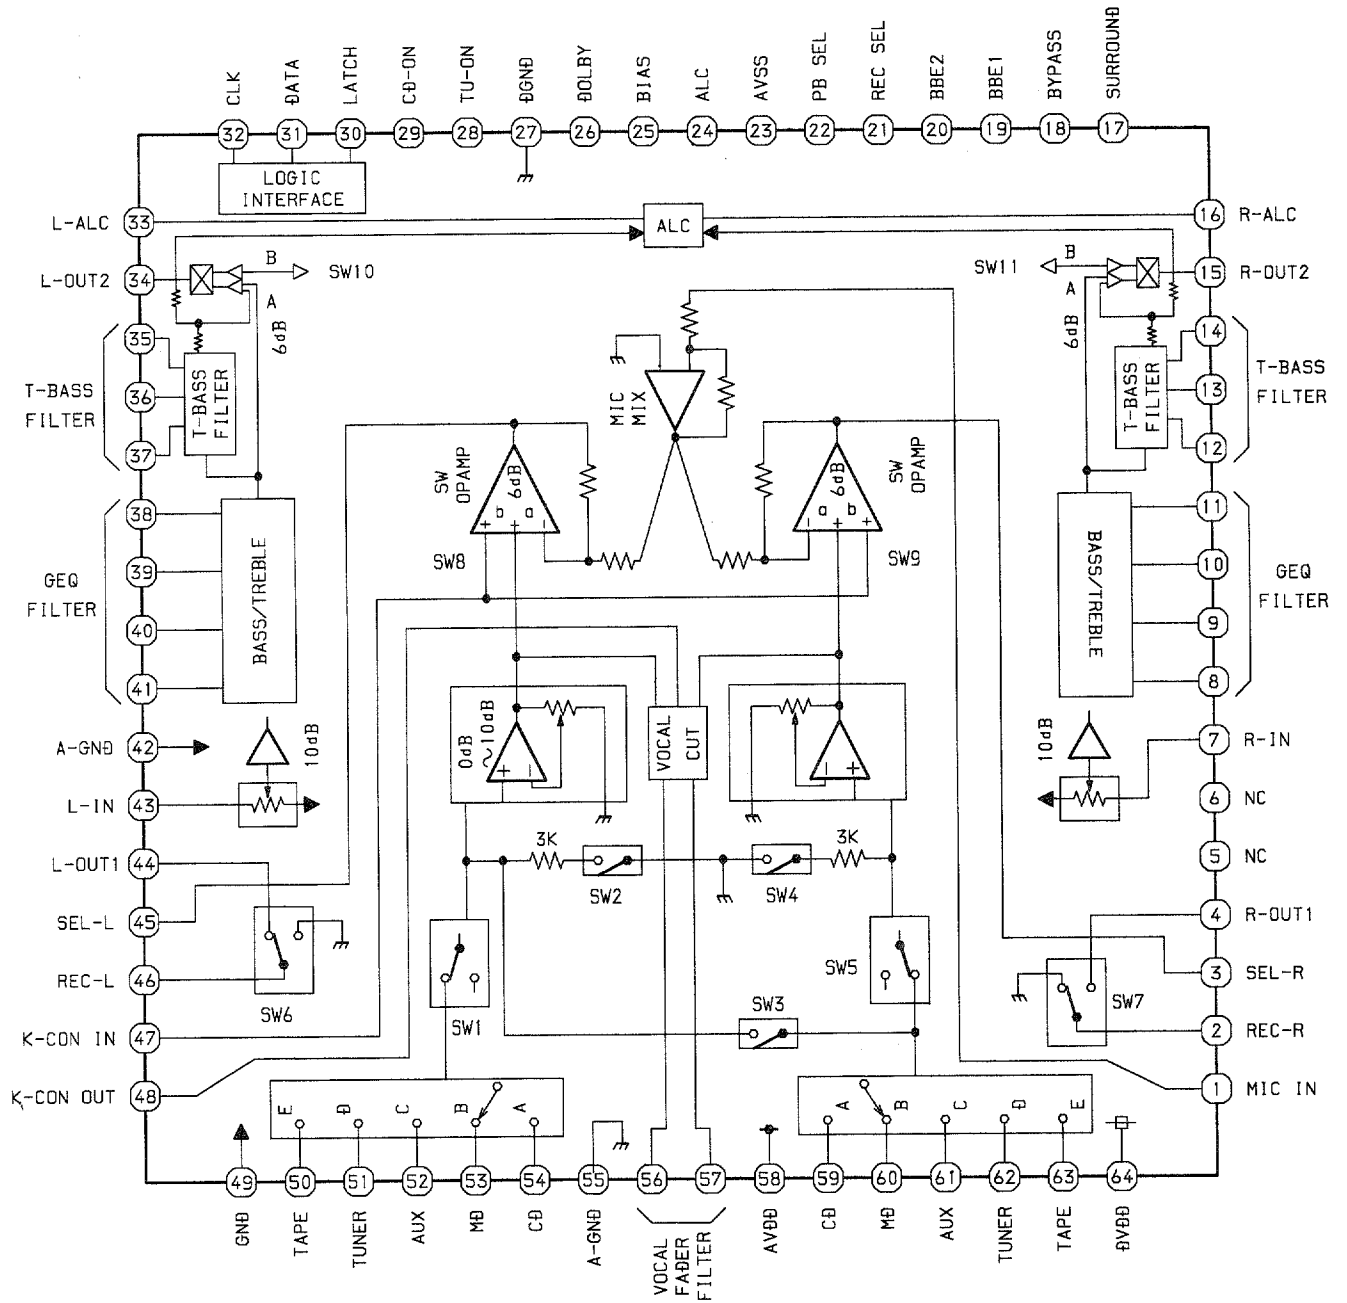


IC, BU2092F

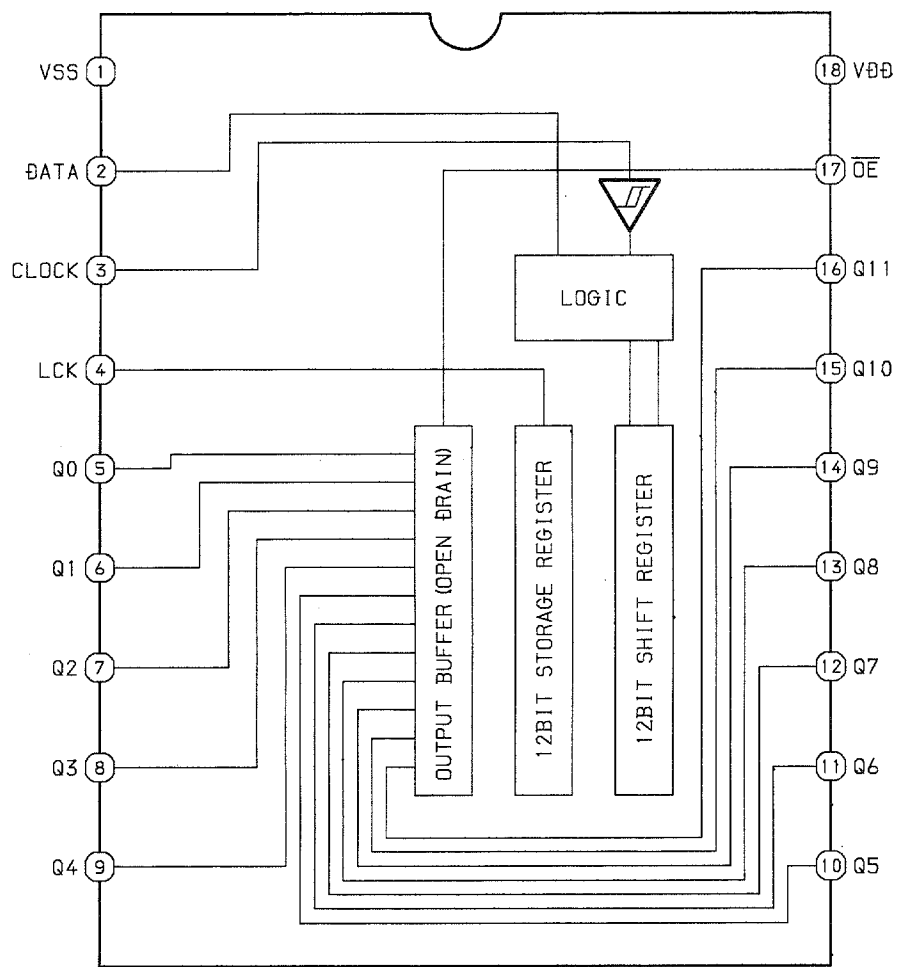


IC, LC72131D

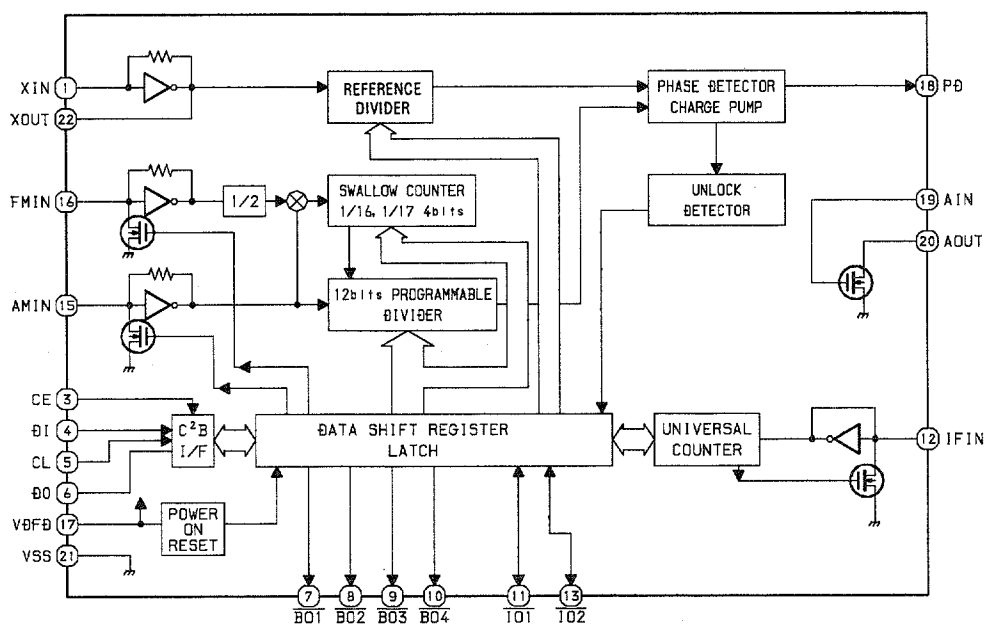

IC, BU9262AFS

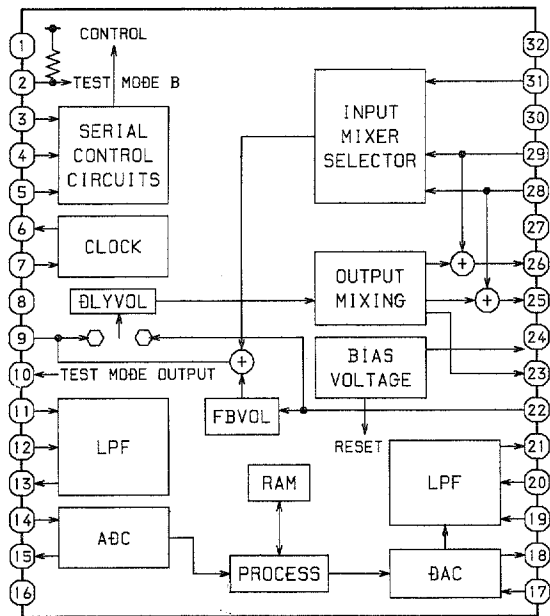

IC, BU4094BCF

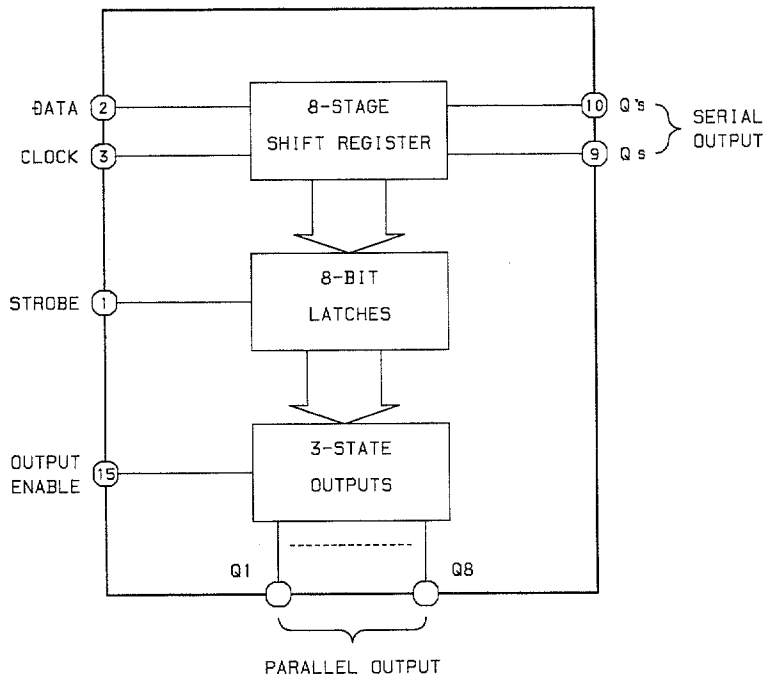


TRUTH TABLE

CLOCK	OUTPUT ENABLE	STROBE	DATA	PARALLEL OUTPUTS		SERIAL OUTPUTS	
				Q1	Qn	Qs	Q's
	L	X	X	Z	Z	Q7	NO Chg.
	L	X	X	Z	Z	No Chg.	Qs
	H	L	X	No Chg.	No Chg.	Q7	No Chg.
	H	H	L	L	Qn-1	Q7	No Chg.
	H	H	H	H	Qn-1	Q7	No Chg.
	H	X	X	No Chg.	No Chg.	No Chg.	Qs


Z=High Impedance

X=Don't Care


IC, NJM2152M

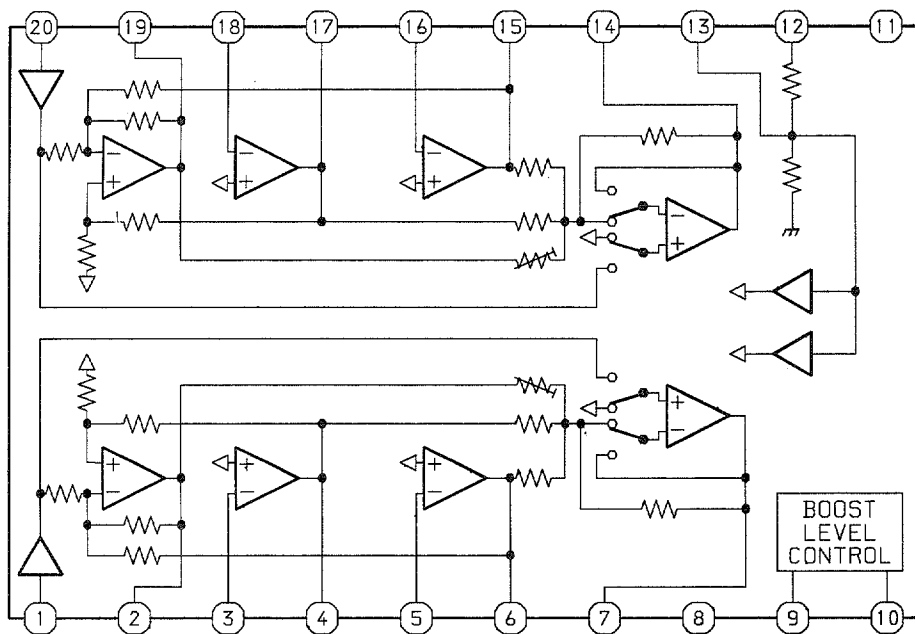


IC, BA3835S

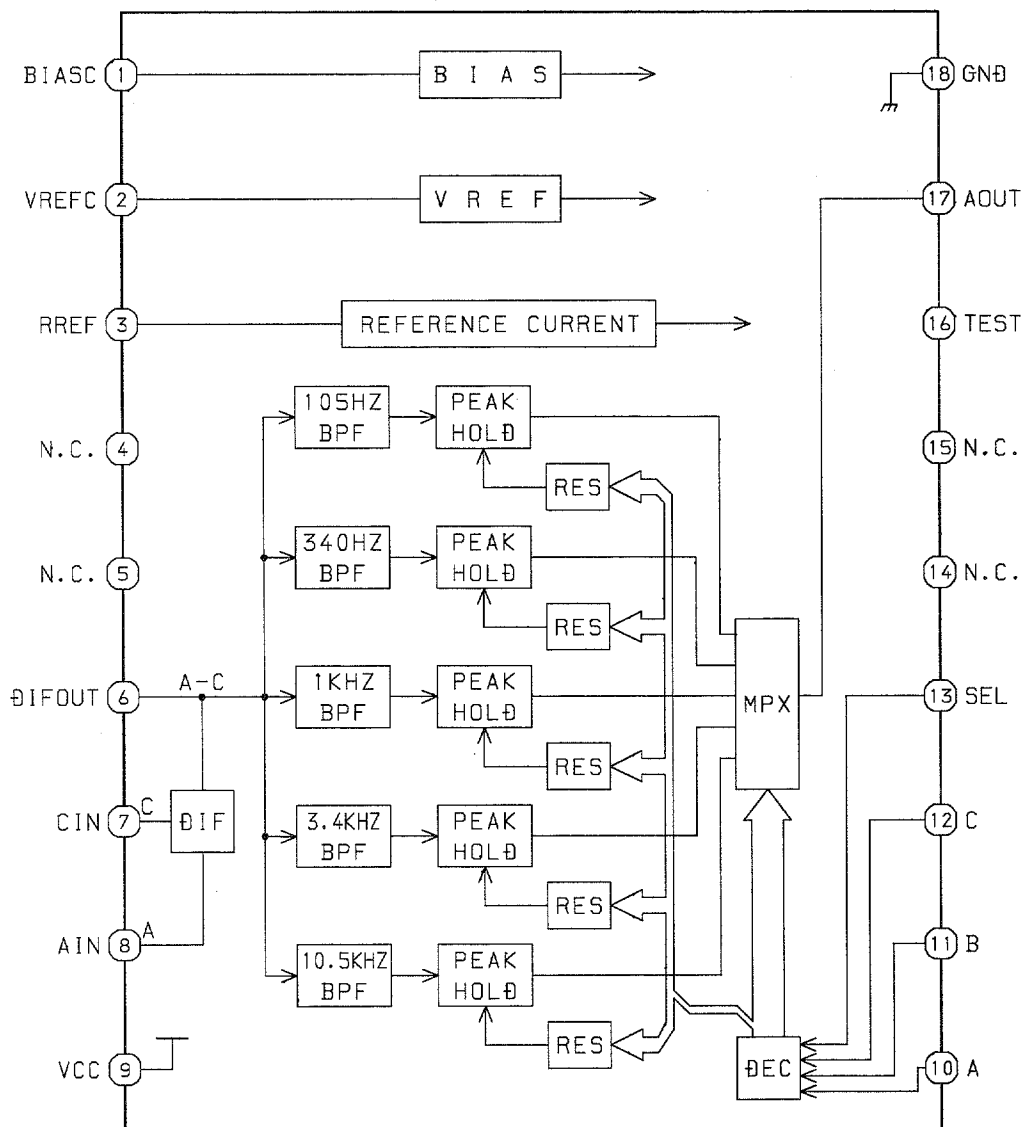


IC, MSM6654A-521GS-KR1

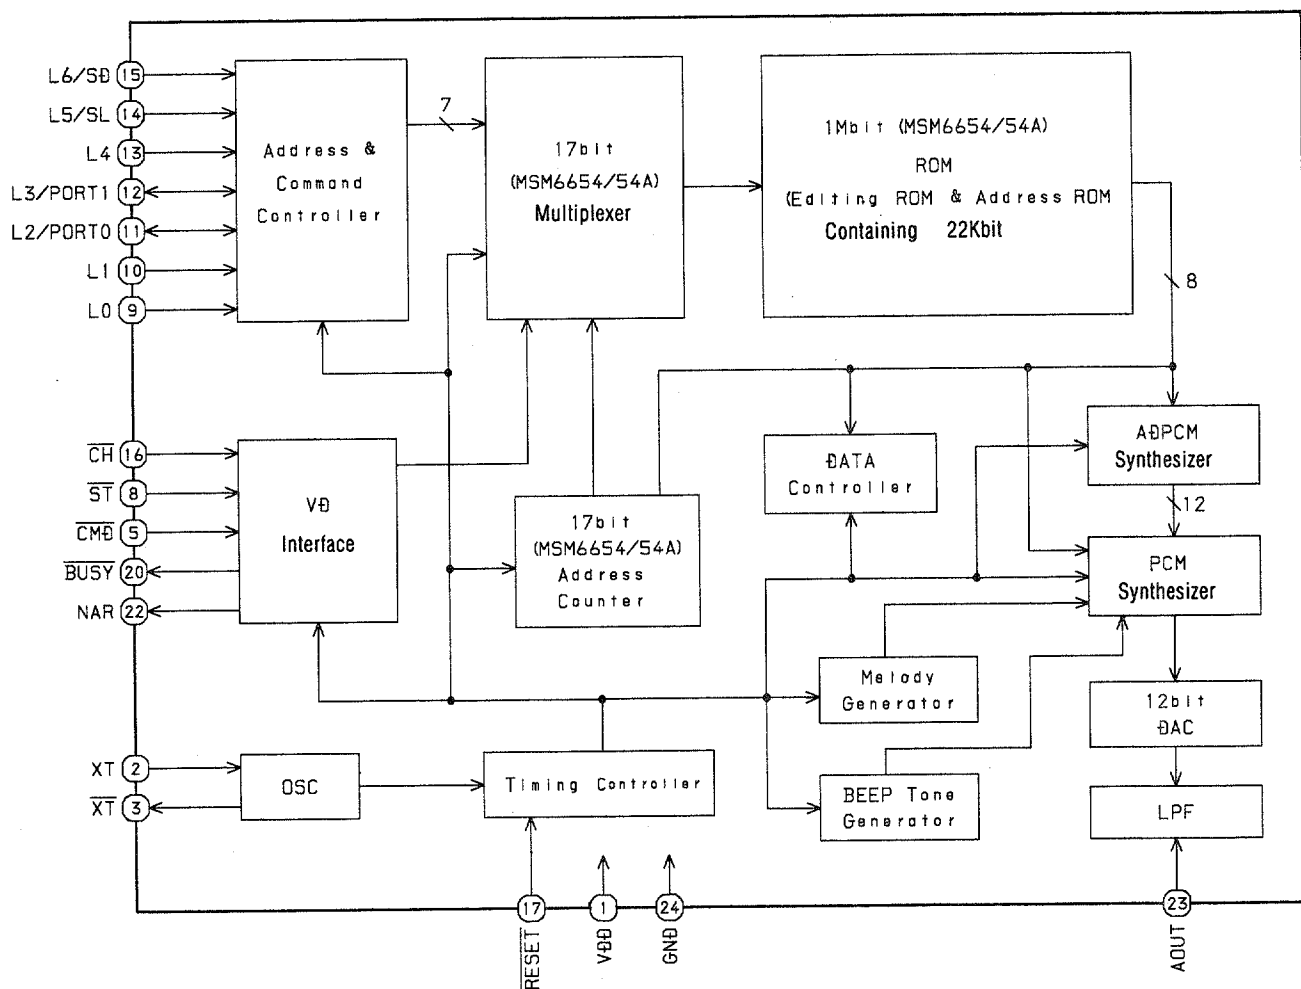


IC, BA7762AFS

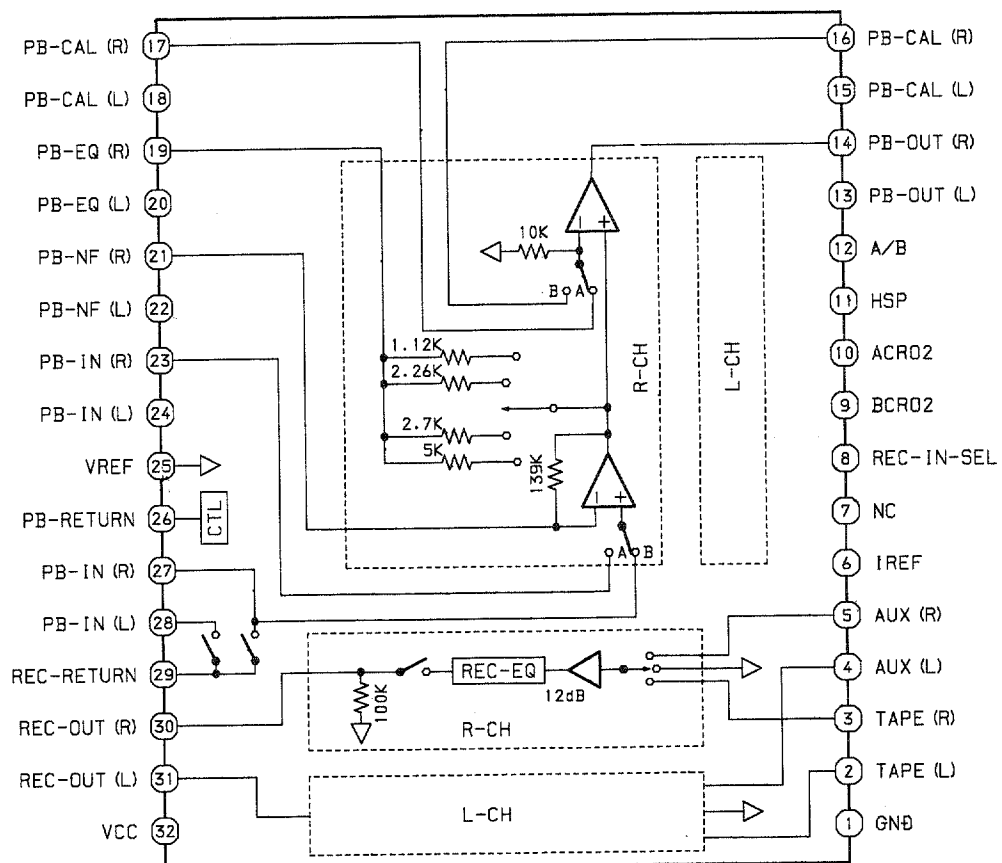

IC, LA1837

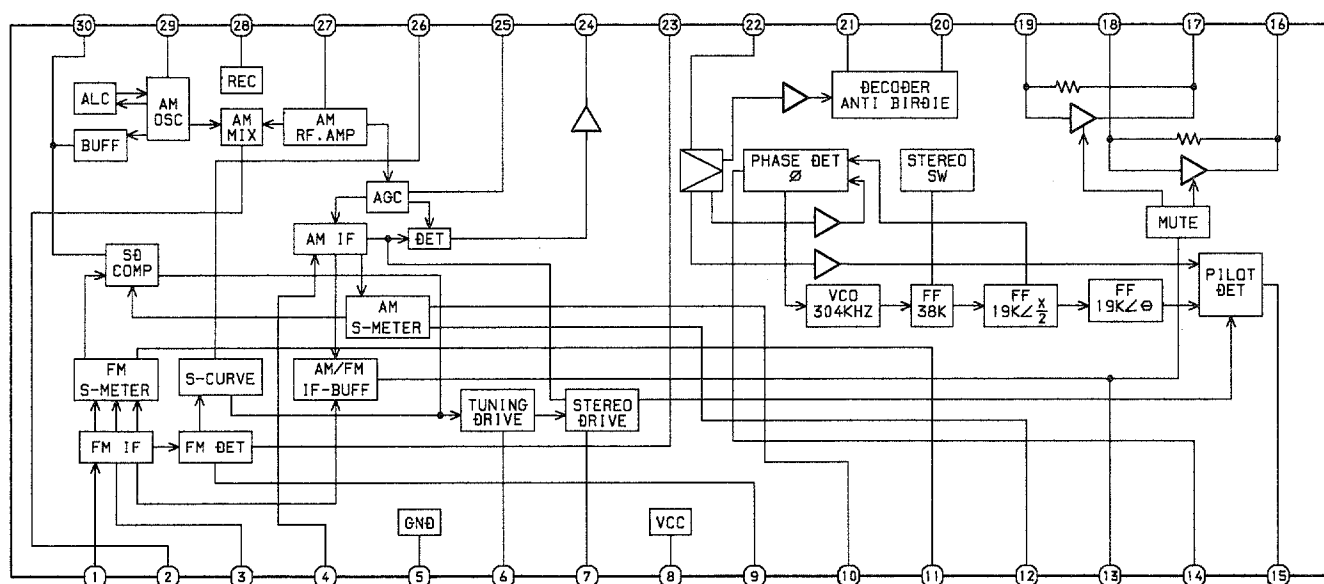

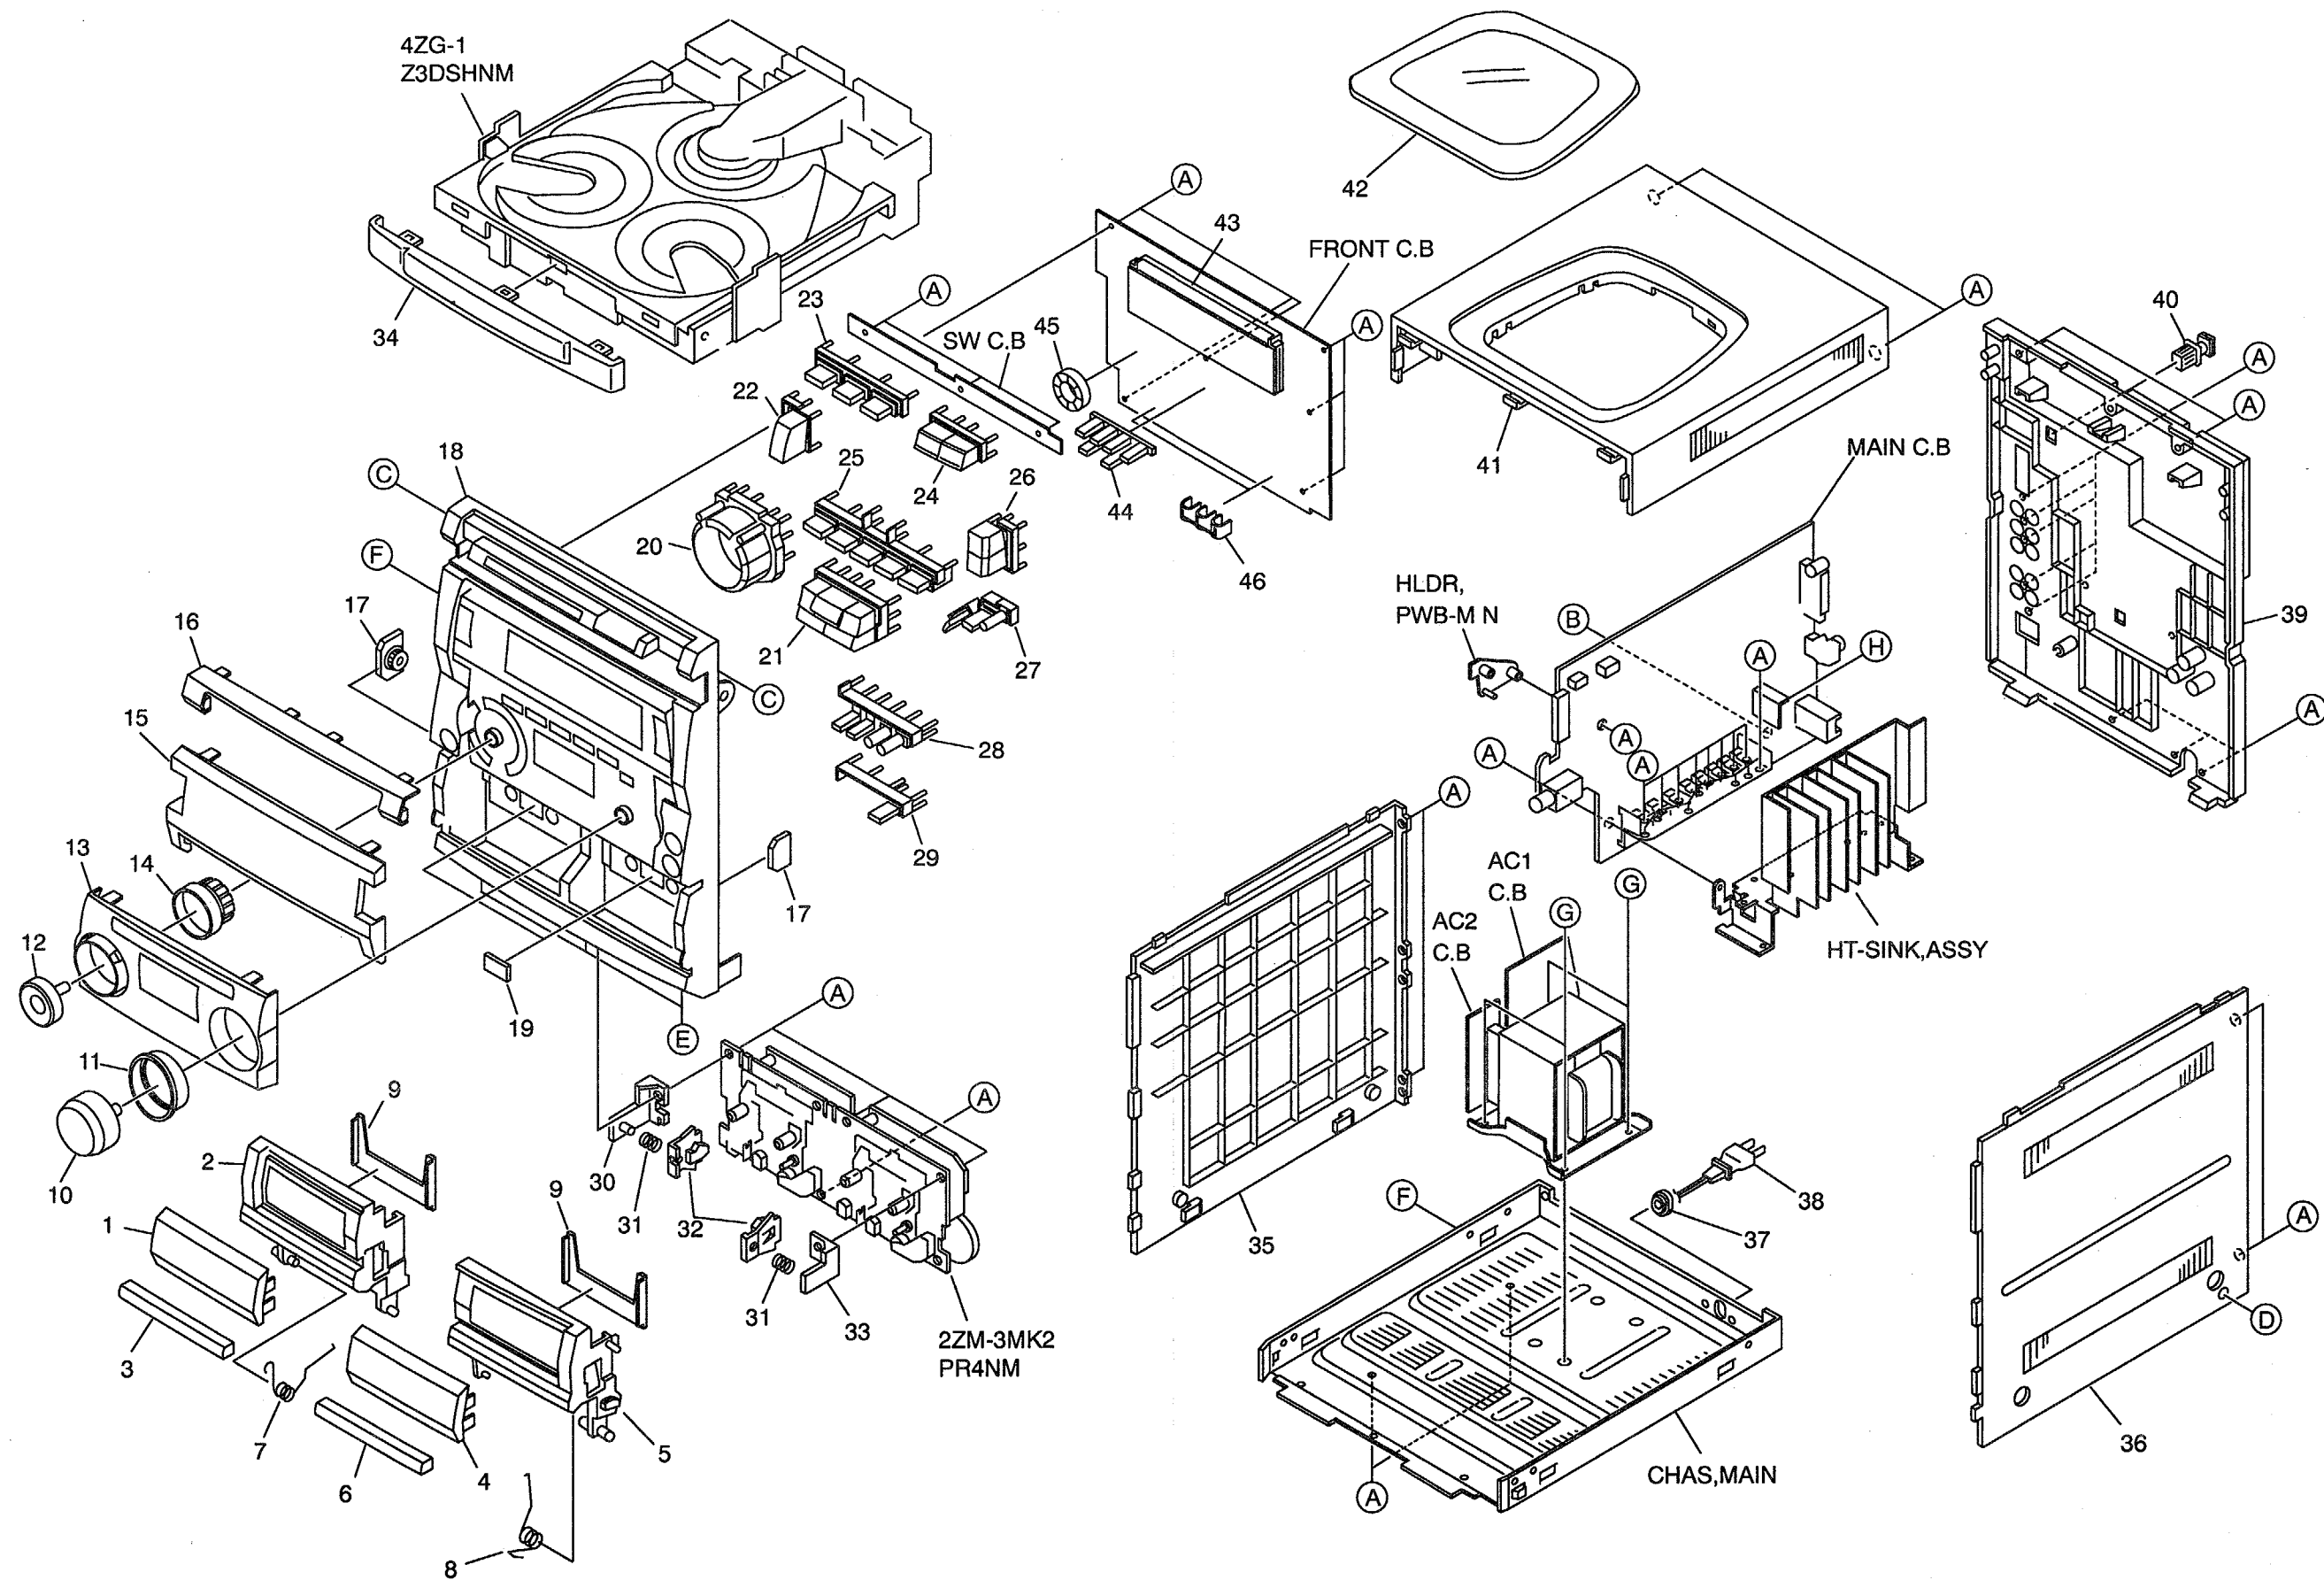



MECHANICAL PARTS LIST 1 / 1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NF6-013-010		WINDOW,CASS 1	34	88-NF6-006-010		PANEL,TRAY
2	88-NF6-003-010		BOX,CASS 1	35	87-NB8-005-010		PANEL,LEFT<LH>
3	88-NF6-008-010		PLATE,CASS 1	35	87-NB8-051-010		PANEL,LEFT U<U>
4	88-NF6-014-010		WINDOW,CASS 2	36	88-NF8-047-010		PANEL,RIGHT 2<LH>
5	88-NF6-004-010		BOX,CASS 2	36	88-NF8-048-010		PANEL,RIGHT 2 U<U>
6	88-NF6-009-010		PLATE,CASS 2	37	87-085-185-010		BUSHING, AC CORD (E)<LH>
7	82-NF5-218-010		SPR-T,EJECT 1 (SIN)	37	87-085-189-010		BUSHING, CORD (U)<U>
8	82-NF5-219-010		SPR-T,EJECT 2 (SIN)	38	87-050-053-010		AC CORD ASSY,U-2<U>
9	86-NF6-061-010		REFLECTOR,CASS	38	87-050-079-010		AC-CORD ASSY,E<LH>
10	88-NF6-015-010		KNOB,RTRY VOL	39	88-NF6-058-010		CABI,REAR LHSTNM<LH>
11	88-NF6-017-010		RING,VOL	39	88-NF6-002-010		CABI,REAR USTNM<U>
12	88-NF6-016-010		KNOB,RTRY JOG	40	84-2G1-245-210		CAP,OPTICAL
13	88-NF6-005-010		PANEL,FR	41	87-NF6-021-010		PANEL,TOP
14	88-NF6-050-010		REFLECTOR,JOG	42	86-NF6-101-010		WINDOW TOP UL<U>
15	88-NF6-012-010		WINDOW,DISPLAY<U>	42	86-NF6-007-010		WINDOW,TOP<LH>
15	88-NF6-073-010		WINDOW,DSPLY H 707<LH>	43	88-NF6-205-010		GUIDE,FL 40-150- 9
16	88-NF6-007-010		PANEL,CD	44	88-NF6-204-010		GUIDE,LED OPE
17	87-NF8-220-010		DMPR,150	45	88-NF6-203-010		GUIDE,LED JOG
18	88-NF6-018-010		CABI,FR H<LH>	46	87-NF5-210-010		GUIDE,LED
18	88-NF6-001-010		CABI,FR U<U>	A	87-067-703-010		TAPPING SCREW, BVT2+3-10
19	81-532-080-010		LABEL, CASS. COMPT	B	87-NF4-224-010		S-SCREW,IT3B+3-8 CU
20	88-NF6-029-010		KEY,JOG	C	87-721-097-410		QT2+3-12 GLD
21	88-NF6-041-010		KEY,ASSY OPE	D	87-067-641-010		UTT2+3-8(W/O SLOT)BL
22	88-NF6-026-010		KEY,POWER	E	87-067-688-010		BVTT+3-6
23	88-NF6-021-010		KEY,ASSY DISC	F	87-721-096-410		QT2+3-10 GLD
24	88-NF6-025-010		KEY,OPEN	G	87-078-019-010		S-SCREW,IT+4-6
25	88-NF6-030-010		KEY,ASSY FUN	H	87-067-579-010		TAPPING SCREW, BVT2+3-8
26	88-NF6-027-010		KEY,BBE				
27	88-NF6-036-010		KEY,MIC				
28	88-NF6-037-010		KEY,REC				
29	88-NF6-038-010		KEY,KARAOKE				
30	87-NF4-216-010		HLDR,LOCK 1				
31	86-NF9-224-010		SPR-C,LOCK				
32	82-NF5-229-010		PLATE,LOCK				
33	87-NF4-217-010		HLDR,LOCK 2				

TAPE MECHANISM EXPLODED VIEW 1 / 1

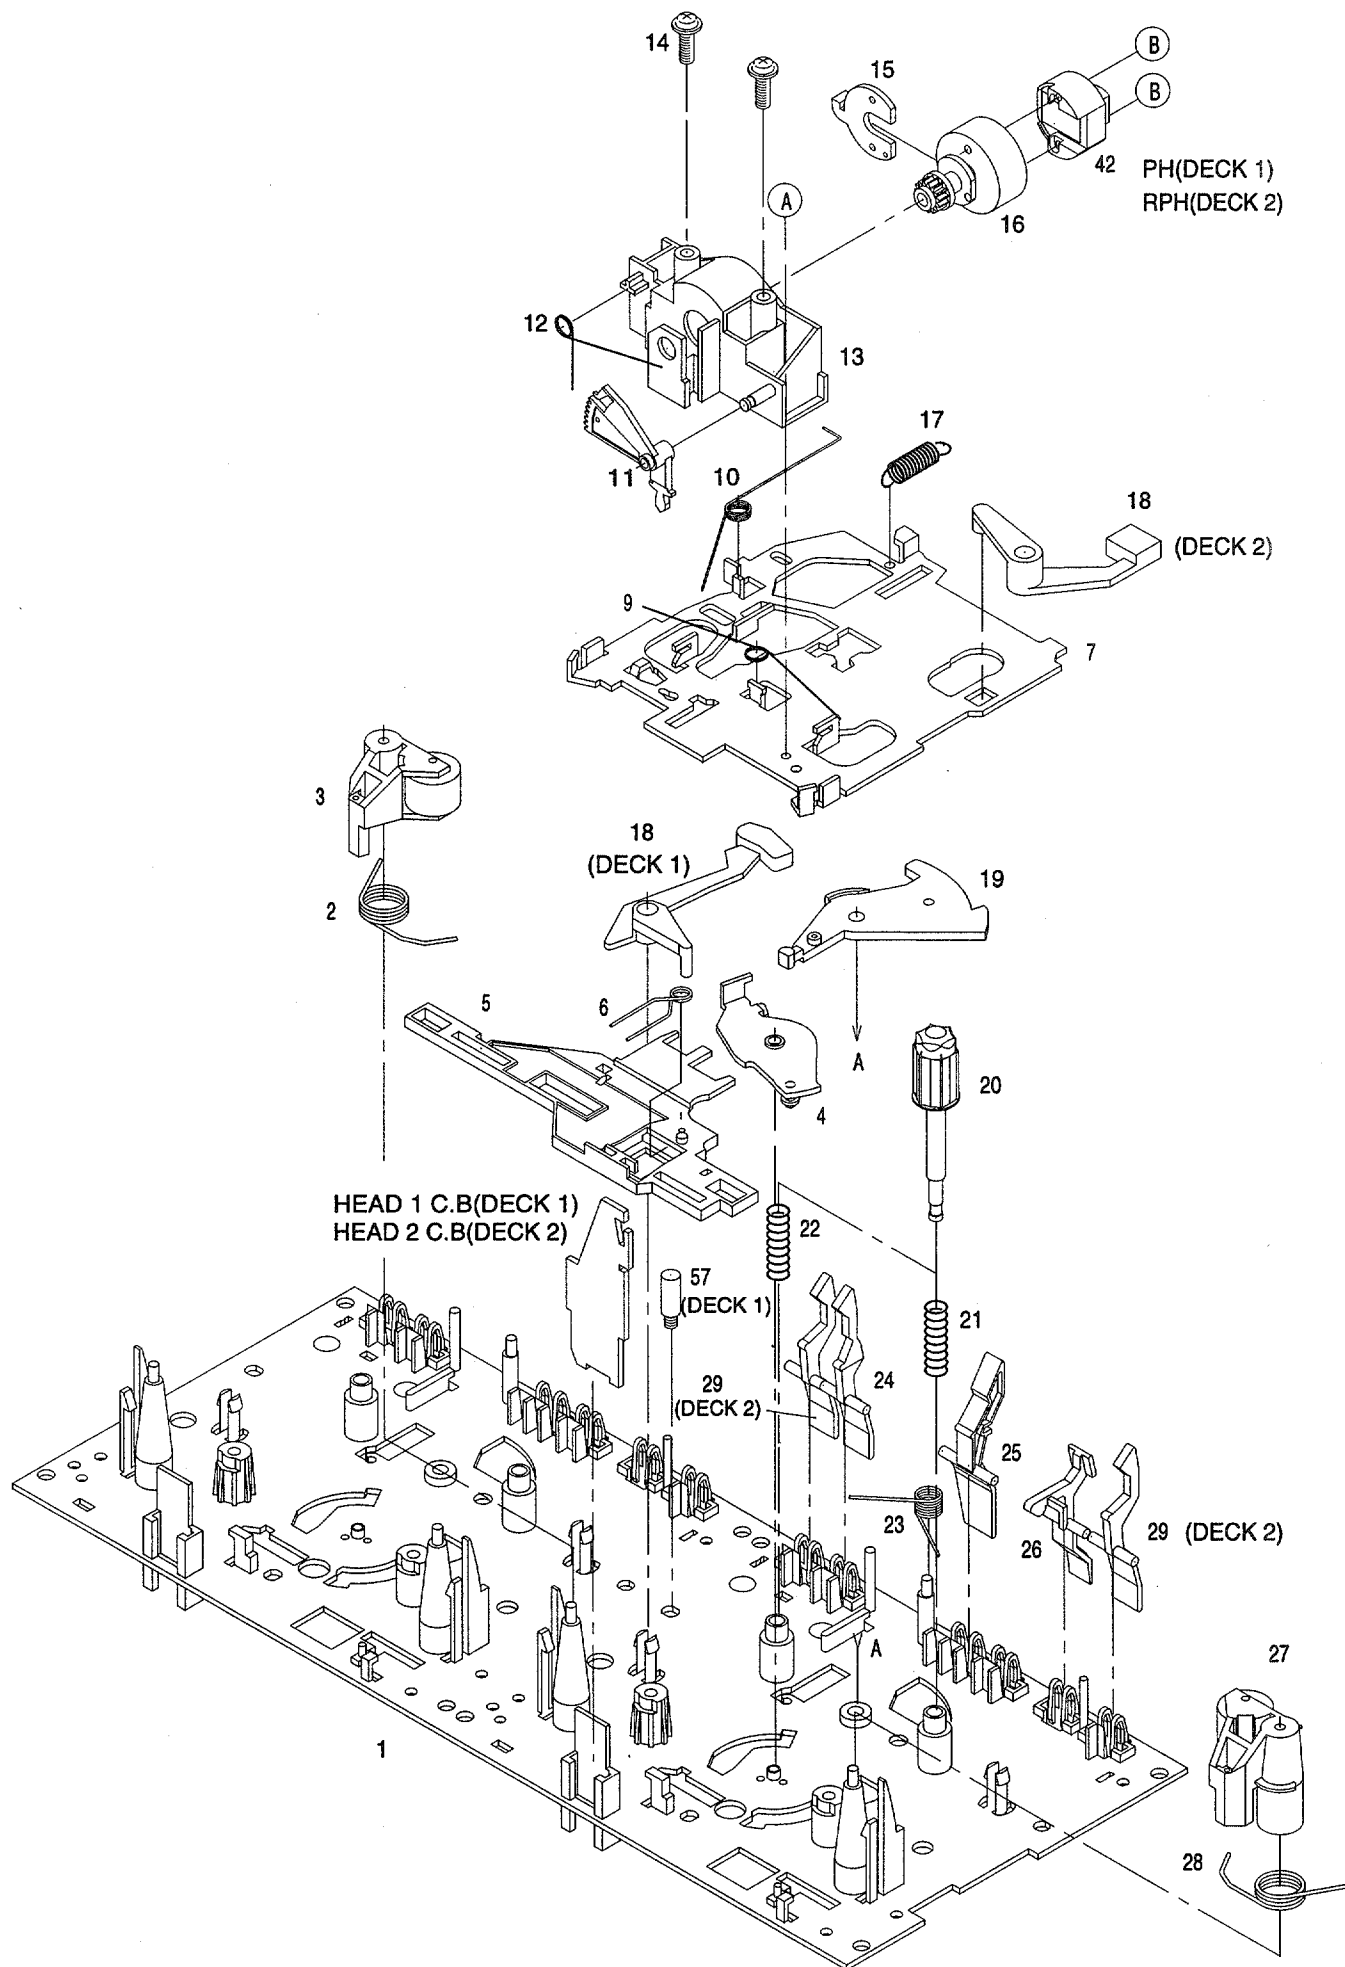

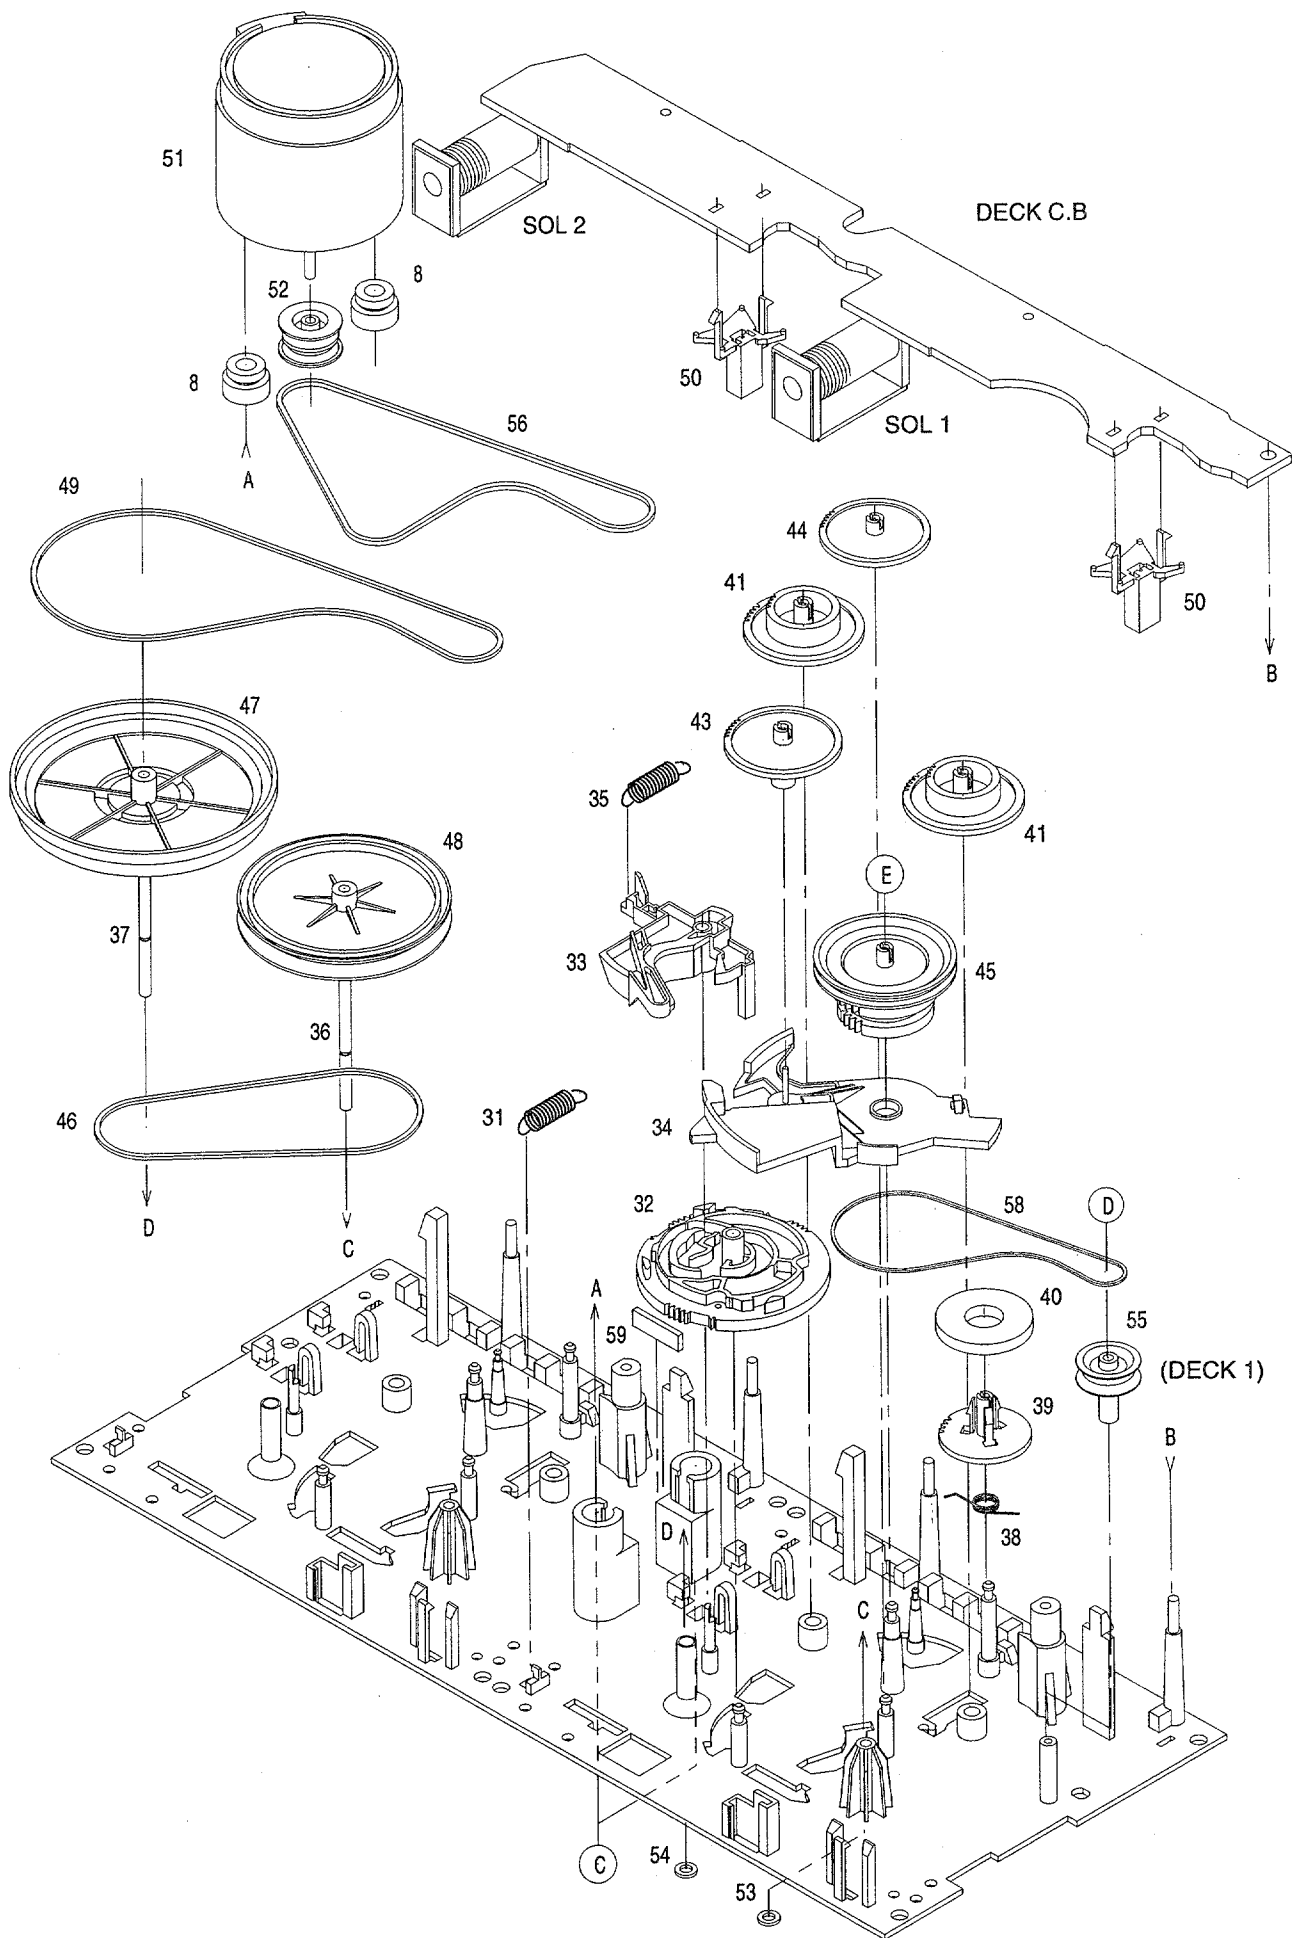


TAPE MECHANISM PARTS LIST 1 / 1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	82-ZM3-301-519		CHAS ASSY,M2	36	82-ZM1-236-019		CAPSTAN N 2-41.5
2	82-ZM1-258-110		SPR-T,PINCH L	37	82-ZM1-239-019		CAPSTAN N 2.2-41.7
3	82-ZM1-341-110		LVR ASSY,PINCH L2	38	82-ZM1-322-019		SPR-T,FR60
4	82-ZM1-333-010		PLATE,LINK 2	39	82-ZM1-220-219		GEAR, IDLER
5	82-ZM1-266-11K		LVR,DIR	40	82-ZM3-616-019		RING MAGNET 4
6	82-ZM1-214-010		SPR-T,DIR	41	82-ZM1-216-31K		GEAR,REEL
7	82-ZM1-206-81K		CHAS,HEAD	42	87-A90-319-010		HEAD,PH HADKH2 FPC
8	82-ZM3-307-019		CUSH-G,DIA3.7-8-3.2	42	87-A90-320-010		HEAD,RPH HADKH5 FPC
9	82-ZM1-269-219		SPR-T,BRG	43	82-ZM1-225-21K		GEAR,FR
10	82-ZM1-219-119		SPR-T,LINK	44	82-ZM1-226-019		GEAR,REW
11	82-ZM1-210-119		GEAR,H T	45	82-ZM3-333-310		SLIP DISK ASSY 2
12	82-ZM1-213-019		SPR-T,HEAD	46	82-ZM1-338-010		BELT FR4
13	82-ZM1-207-619		GUIDE,TAPE	47	82-ZM1-349-110		FLY-WHL,R W(DECK 2)
14	86-ZM4-206-010		S-SCREW,AZIMUTH	47	82-ZM3-338-110		FLY-WHL,R3 W(DECK 1)
15	82-ZM1-314-119		PLATE,HEAD	48	82-ZM1-348-010		FLY-WHL,L W(DECK 2)
16	82-ZM1-208-119		HLDR,HEAD	48	82-ZM1-348-010		FLY-WHL,L W(DECK 1)
17	82-ZM1-218-019		SPR-E,HB	49	82-ZM3-329-210		BELT,SBU R2
18	82-ZM1-263-110		LVR,EJECT L (DECK 1)	50	82-ZM1-245-210		HLDR,IC
18	82-ZM1-264-010		LVR,EJECT R (DECK 2)	51	87-045-347-019		MOT,SHU2L 70(M1)
19	82-ZM1-222-21K		LVR,PLAY	52	82-ZM3-221-010		PULLEY,MOT 2M
20	82-ZM1-217-319		REEL TABLE	53	82-ZM1-288-019		SH,1.63-3.2-0.5 SLT
21	82-ZM1-244-510		SPR-C,BT	54	80-ZM6-243-019		SH,1.75-3.6-0.5 SLT
22	82-ZM1-285-310		SPR-C,BT L	55	82-ZM3-335-210		PULLEY,COUPLER M3(DECK 1)
23	82-ZM1-257-019		SPR-T,CAS	56	82-ZM3-337-010		BELT,SBU MOT 2
24	82-ZM1-241-319		LVR,MC	57	82-ZM3-339-010		SHAFT,COUPLER N3(DECK 1)
25	82-ZM1-242-019		LVR,CAS	58	86-ZM1-206-010		BELT,MAIN L
26	82-ZM1-243-019		LVR,STOP	59	82-ZM3-340-010		SH,BELT D2
27	82-ZM1-344-110		LVR ASSY,PINCH R2	A	85-ZM3-202-010		S-SCREW,TG
28	82-ZM1-259-110		SPR-T,PINCH R	B	80-ZM6-207-019		V+1.6-7
29	82-ZM1-240-11K		LVR,REC (DECK 2)	C	82-ZM3-318-019		S-SCRW MOTOR M2
31	82-ZM1-255-319		SPR-E,LVR DIR	D	87-B10-043-010		W-P,0.99-4-0.25 SLT
32	82-ZM3-305-01K		GEAR,CAM M2	E	82-ZM3-334-010		PW,2.16-6-0.4
33	82-ZM1-227-21K		LVR,TRIG				
34	82-ZM3-306-11K		LVR,FR M2				
35	82-ZM1-265-119		SPR-E,TRIG				

SPRING APPLICATION POSITION

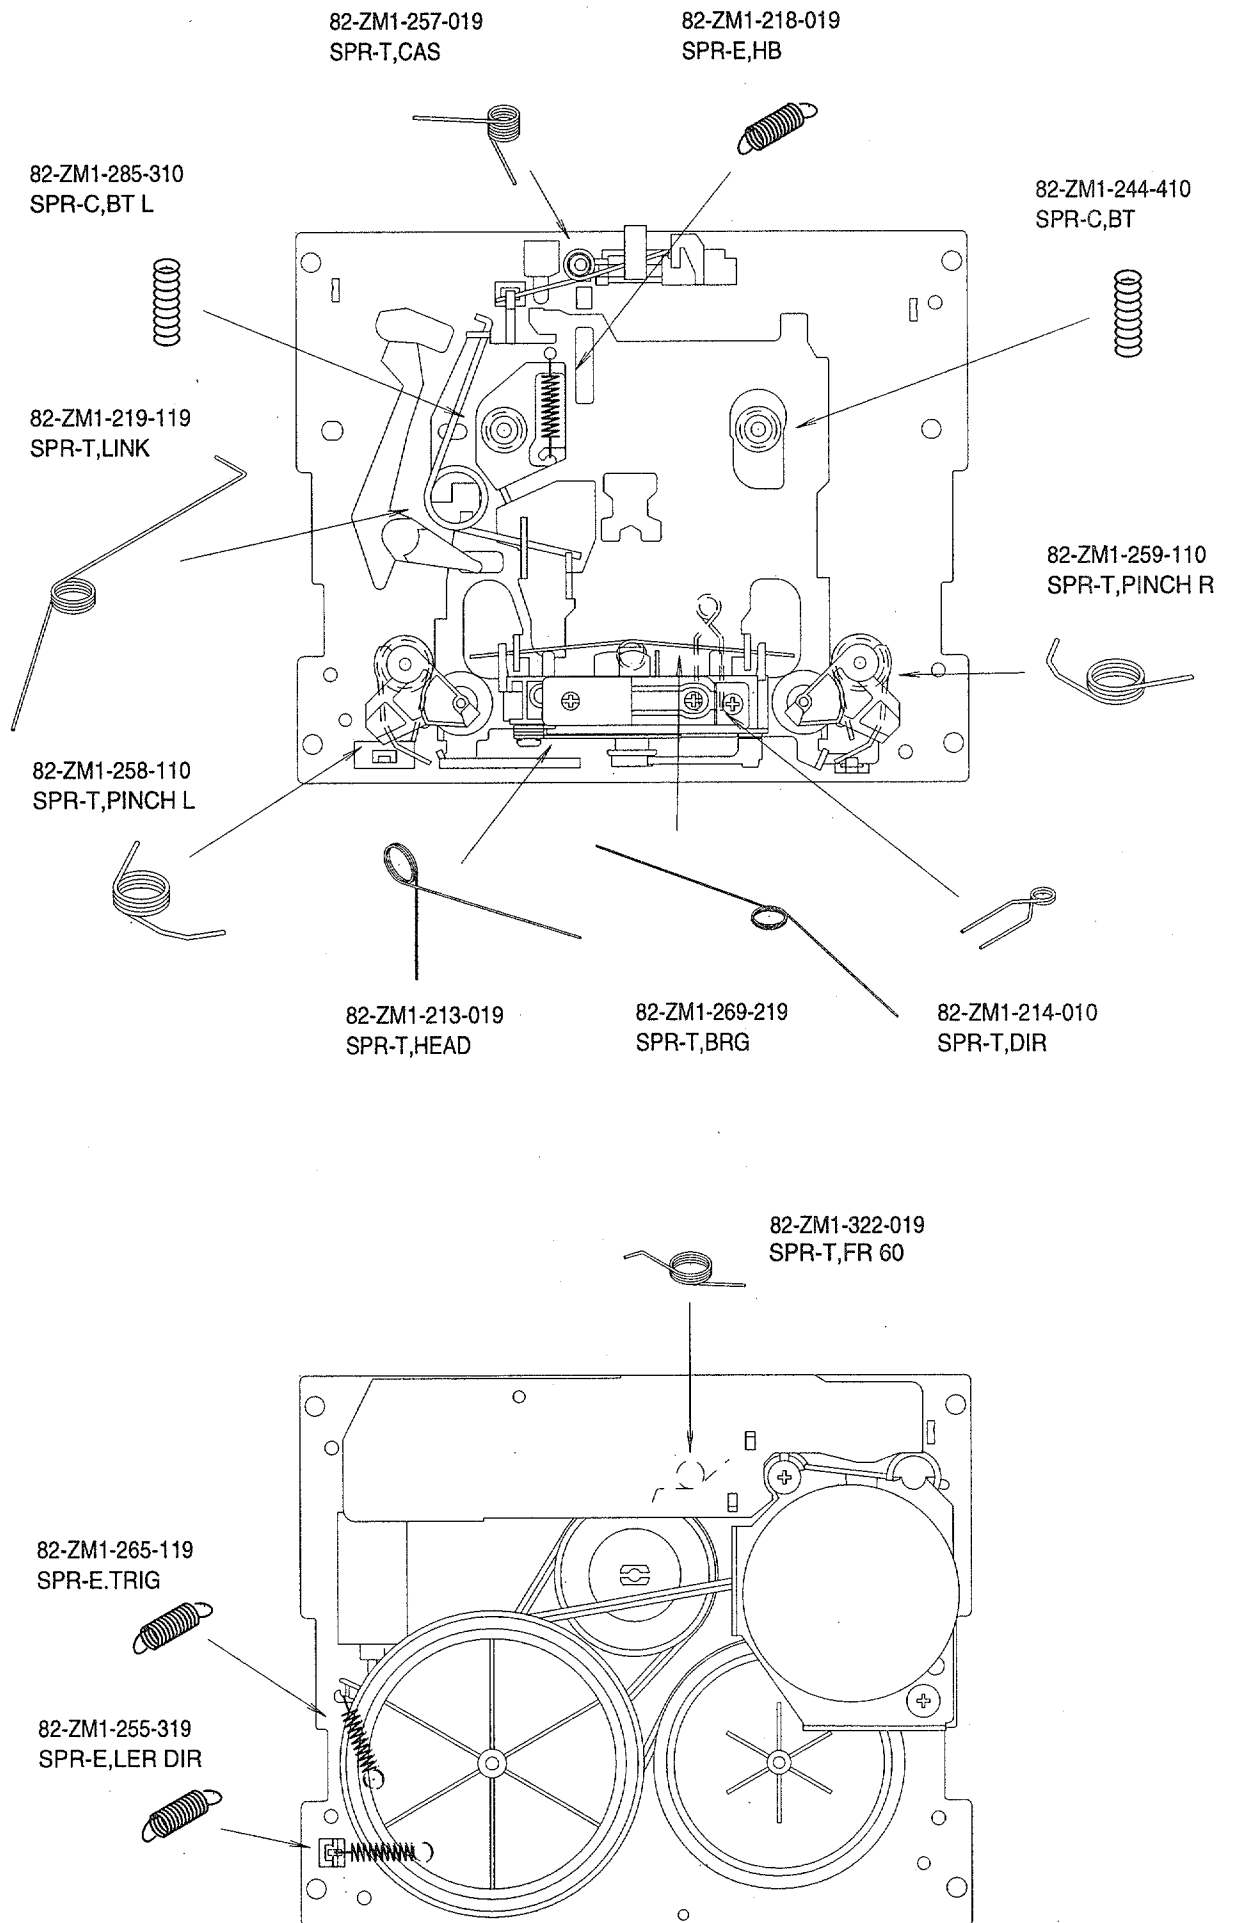


SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

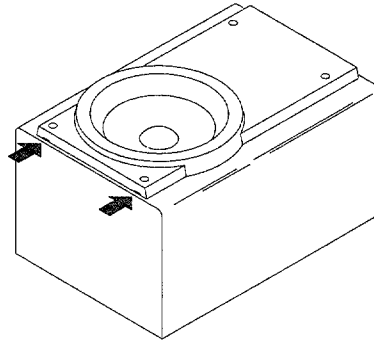

Type.2

グリルフレームを外し、4個のゴムキャップをマイナスドライバーで端の方から持ち上げて外すと中にビスが有りますので、ビスを取り外します。矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

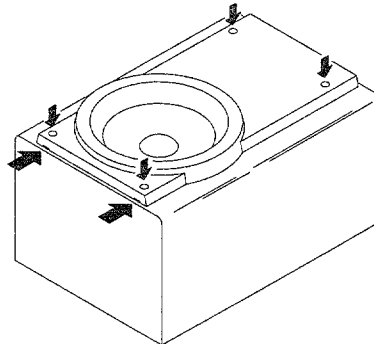

Type.3

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットの凹にマイナスドライバーを差し込んで、反時計方向に回転させスピーカーユニットを外してください。スピーカーユニット交換後は時計方向にクリック音がするまで、回転させて取り付けます。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

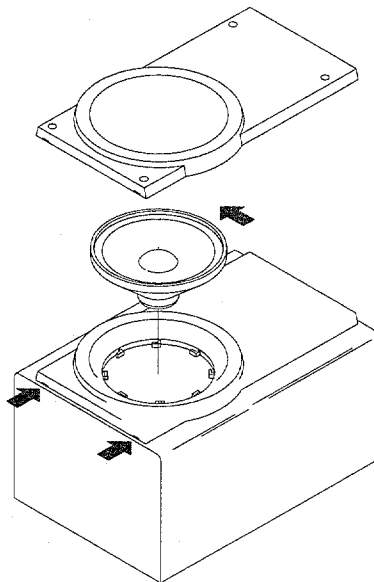

SX-NA702 (YUSTNL) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NSF-604-010	SPKR, T 80	
2	87-NSF-602-010	SPKR, W 160	
3	87-NSF-610-010	SPKR, CORD	
4	88-NSG-001-010	PANEL, FR R	
5	88-NSG-002-010	PANEL, FR L	
6	88-NSG-004-010	GRILLE, FRAME ASSY	
7	88-NSG-610-010	SPKR, CERAMIC ASSY	

SX-FNS705 (YLSTCC) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NSA-001-010	PANEL, FR	
2	87-NSA-002-010	PANEL, SP	
3	87-NSA-004-010	GRILLE, FRAME ASSY	
4	87-NSA-005-010	GRILLE, FRAME	
5	87-NSA-010-010	PROTECTOR	
6	87-NSA-007-010	HLDR SQ	
7	87-NS4-611-010	SPKR, CORD	
8	85-NS6-611-010	SPKR, CORD Y/B	
9	87-NSA-610-010	SPKR, CERAMIC	
10	87-NSA-611-010	SPKR, CAP	
11	86-NSA-608-010	SPKR, W 160H	
12	86-NSA-610-010	SPKR, T 60H	
13	86-NS5-606-010	SPKR, 80	
14	87-NS5-602-010	SPKR, W 160	

SX-ANS707 (YLSTNL) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NS6-001-010	PANEL, FR R	
2	88-NS6-002-010	PANEL, FR L	
3	88-NS6-005-010	PANEL, PLATE L	
4	88-NS6-006-010	PANEL, PLATA R	
5	88-NS6-007-010	PANEL, TOP	
6	88-NS6-008-010	CABI, TOP L	
7	88-NS6-009-010	CABI, TOP R	
8	88-NS6-010-010	PANEL, SP L	
9	88-NS6-011-010	PANEL, SP R	
10	88-NS6-012-010	GRILLE, FRAME ASSY	
11	88-NS6-015-010	GRILLE, TOP ASSY	
12	88-NS6-020-010	PROTECTOR, L	
13	87-NS4-611-010	SPKR, CORD	
14	87-NS4-610-010	SPKR, CORD Y1B	
15	86-NSA-608-010	SPKR, W 160H	
16	87-NS4-605-010	SPKR, T 50	
17	88-NS6-610-010	SPKR, CERAMIC	
18	88-NS6-606-010	SPKR, S 60	
19	88-NS6-604-010	SPKR, T 80	

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G- -	
G- -	
G- -	

アイワ株式会社
AIWA CO.,LTD.

9301978, 750038

Tokyo Japan