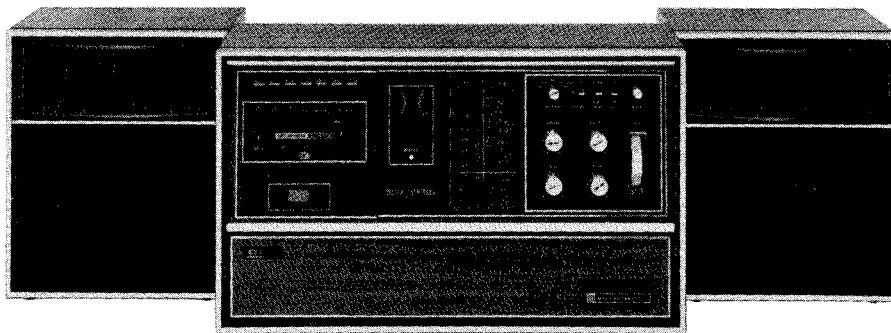


Service Manual

NATIONAL**TAPE RECORDER****PANASONIC**

DELUXE STEREO CASSETTE WITH AUTOMATIC REVERSE SYSTEM AND BUILT-IN FM/AM/FM STEREO RADIO

**RS-272US MECHANISM SERIES****RS-282S**

SPECIFICATIONS

Power Source: AC: 90~109, 110~125, 200~219,
220~250 volts; 50/60 Hz

Power Consumption: Approx. 35 watt

Motor: Mechanical governor motor

Maximum Output: Approx. 20 watt (PMPO) (10×2)

Transistors: 2SK33(1) 2SC920R(6) 2SC710C(4)
2SB178(1) 2SB348(2) 2SB175B(4)
2SA564(2) 2SB346(4) 2SB473(5)
2SC945R(3)

Diodes: SC15(1) KB265A(1) OA90Z(2)
2OA90Z(6) OA90(5) 1S1211(3)
FR204(4) SD1Y(1)

Rectifier: SIB0201B(1)

Recording System: AC bias 30 kHz, AC erase

Track System: 4-track, 2-channel stereo

Tape Speed: 1-7/8 ips

Fast Forward Time: Approx. 100 seconds with C-60 cassette

Rewind Time: Approx. 100 seconds with C-60 cassette

Frequency Response: 30~12,000 Hz

Inputs: 2 "MIC" -80 dB 200Ω~3 kΩ
2 "AUX" -30 dB 180 kΩ
2 "PHONO" -20 dB 800 kΩ

Outputs: 2 "LINE OUT" 4 kΩ
2 "EXT SP" 8Ω
1 "HEADPHONE" 8Ω

Recording Time: One hour (two-way, using C-60 cassette)

Speakers: 2 -6-1/2" PM dynamic speaker
2 -2-3/4" PM dynamic speaker

Dimensions: (main body) 21-1/4"(W)×13-1/4"(H)×6-5/8"(D)
(each speaker box) 10-5/8"(W)×13-1/4"(H)×7"(D)

Weight: (main body) 25-1/4 lbs.
(each speaker box) 6-1/2 lbs.

—AUDIO SECTION—

Frequency Response: 20~25,000 Hz

Bass Control: ±10 dB at 100 Hz

Treble Control: ±10 dB at 15 kHz

—RADIO SECTION—

Frequency Range: AM: 525~1,605 kHz
FM: 87.5~108 MHz

Intermediate Frequency: AM: 455 kHz
FM: 10.7 MHz

Sensitivity: AM: 60μV/m/50 mV
FM: 3μV/50 mW

These specifications are subject to change in order to accommodate improvements in design.

MATSUSHITA ELECTRIC
MATSUSHITA ELECTRIC TRADING CO., LTD.

P. O. Box 288 Central, Osaka, Japan



ORDER NO. ARD-7111202

LOCATION OF PARTS

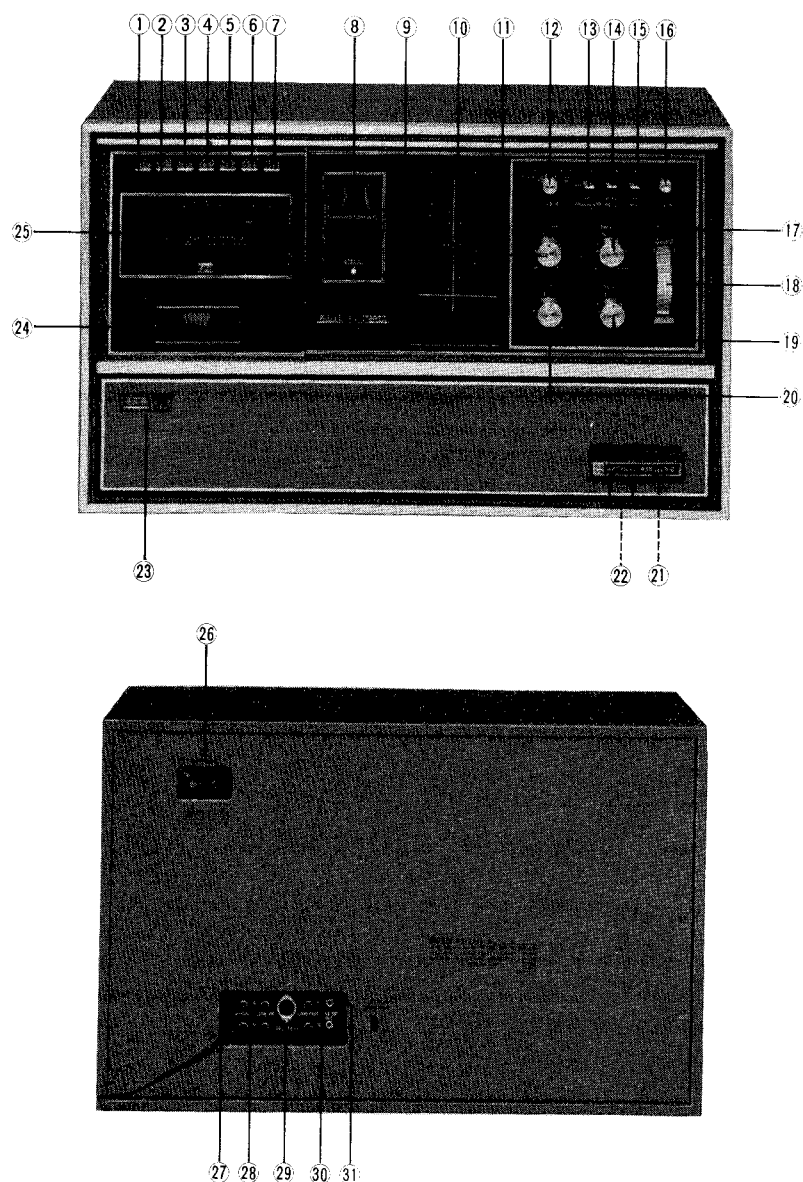


Fig. 1


- | | |
|------------------------------|------------------------------|
| ① Stop button | ①⑦ Balance control |
| ② Fast forward button | ①⑧ Tuning control |
| ③ Playback button | ①⑨ Treble control |
| ④ Rewind button | ②⑩ Bass control |
| ⑤ Record button | ②① Headphone jack |
| ⑥ Direction button (Forward) | ②② Microphone jacks |
| ⑦ Direction button (Reverse) | ②③ Tape counter |
| ⑧ VU meter | ②④ Cassette lid |
| ⑨ FM stereo eye | ②⑤ Ejection button |
| ⑩ Radio dial scale | ②⑥ FM antenna input terminal |
| ⑪ Volume control | ②⑦ Phono jacks |
| ⑫ Program selector | ②⑧ Auxiliary input jacks |
| ⑬ Speaker monitor switch | ②⑨ Record/playback connector |
| ⑭ Stereo/mono selector | ③⑩ Line output jacks |
| ⑮ AFC switch | ③① External speaker jacks |
| ⑯ Power switch | |

STANDARD VALUE TO BE ADJUSTED

ITEM	VALUE	PARTS TO BE ADJUSTED	REMARKS
Recording bias current.	0.56 mA	L11 (CH1) L12 (CH2)	Set the volume control to minimum.
Input level.	MIC -81 ± 4 dB AUX IN -30 ± 3 dB	VR9 (CH1) VR10 (CH2) (Refer to fig. 11)	To obtain $50 \pm 10 \mu\text{A}$ of recording current through the recording head. Set the volume control to maximum.
Bias oscillation frequency.	30 ± 10 kHz	—	—
Erase current.	110 ± 10 mA	VR11 (Refer to fig. 10)	—
Takeup tension.	55 ± 15 gr-cm	—	—
Pressure of pressure roller.	350 ± 50 gr	Pressure roller lever spring M93 (for Forward) M102 (for Reverse)	—

ALIGNMENT INSTRUCTIONS OF RADIO

DIAL CORD THREADING

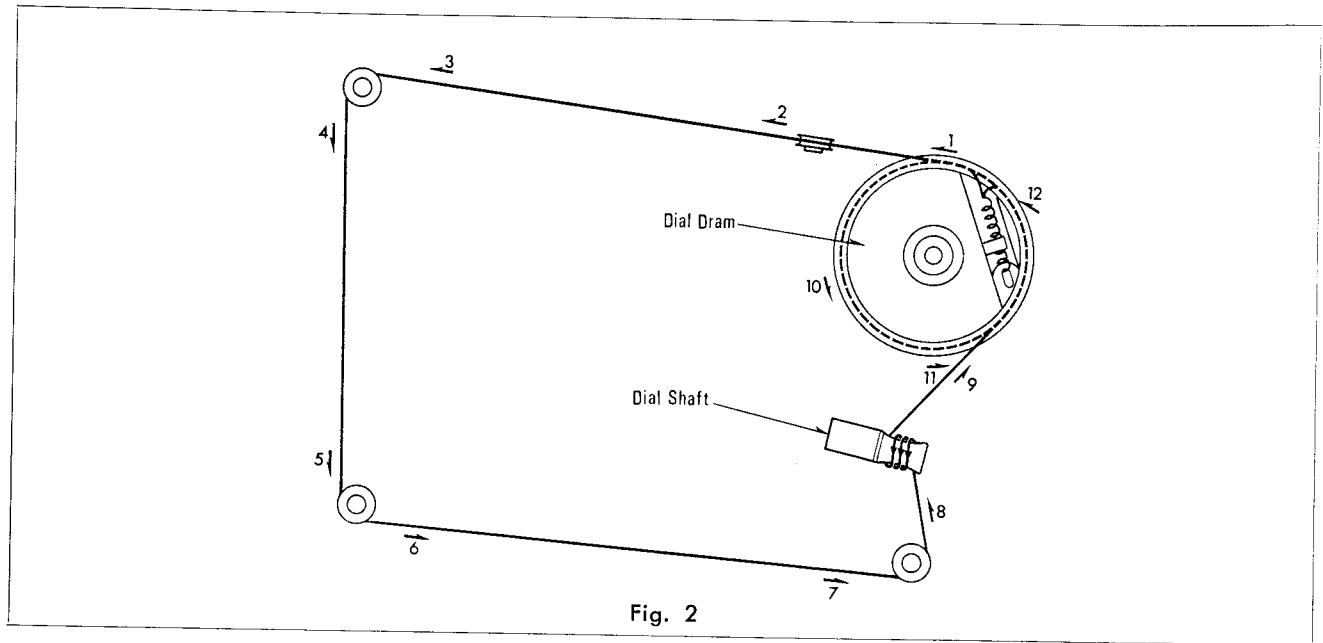

AM, FM IF & RF ALIGNMENT

AM IF & RF ALIGNMENT

Output of signal generator should be no higher than necessary to obtain an output reading.

Set band selector to AM.

Note:

1. Seal antenna bobbin with wax after completing alignment.
2. Remove line cord antenna from FM external antenna terminal when aligning.
3. Make certain that speaker system or 8Ω dummy load is connected to the EXT SP jack when aligning.

FM IF & DETECTOR ALIGNMENT WITH OSCILLOSCOPE

EQUIPMENT REQUIRED

Signal generator that provides 10.7 MHz marker.

Sweep generator that provides 10.7 MHz center frequency and 400 kHz sweep width.

OSCILLOSCOPE

Set sweep selector of oscilloscope to external sweep. Apply 60 Hz sweep signal from sweep generator to horizontal input terminals of oscilloscope.

Set band selector to FM.

Set volume control to minimum.

Set tone control to treble.

Set balance control to center.

Set AFC switch to OFF.

Maintain line voltage at 120 volts.

Note: Unsolder lead between test point TP3 and point [A] before alignment, and resolder it after alignment.

	SWEEP GENERATOR COUPLING	SIGNAL GENERATOR COUPLING	RADIO DIAL SETTING	INDICATOR	ADJUSTMENT	REMARKS
1	High side thru. 0.001 μ F to point TP2 (fig. 8). Common to chassis.	High side thru. 0.001 μ F to point TP2 (fig. 8). Common to chassis.	Point of non-interference (on/about 90 MHz).	Connect vert. amp. of scope to point TP3 (fig. 9). Common to chassis.	T1 (FM 1st IFT) T2 (FM 1st IFT) T3 (FM 2nd IFT) T5 (FM 3rd IFT) T7 (FM 4th IFT) (fig. 8 & 9)	Adjust for maximum amplitude and proper linearity between ± 100 kHz markers. (Refer to fig. 3)
2	High side thru. 0.001 μ F to point TP2 (fig. 8). Common to chassis.	High side thru. 0.001 μ F to point TP2 (fig. 8). Common to chassis.	Point of non-interference (on/about 90 MHz).	Connect vert. amp. of scope to point TP4 (fig. 9). Common to chassis.	T8 (FM 4th IFT) (fig. 9)	Adjust T8 so that 10.7 MHz marker is at the center. (Refer to fig. 4)

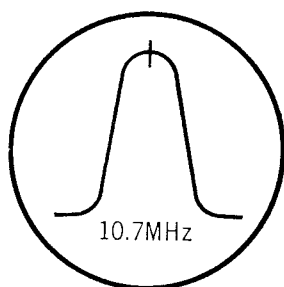


Fig. 3


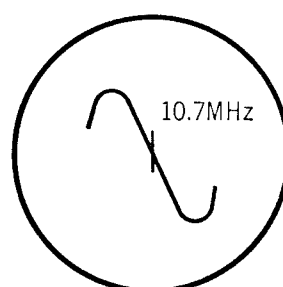


Fig. 4

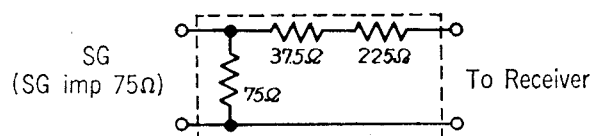

FM Dummy Antenna

Fig. 5


FM RF ALIGNMENT


Output of signal generator should be no higher than necessary to obtain an output reading.

Set band selector to FM.
Set volume control to maximum.
Set tone control to treble.
Set balance control to center.
Set AFC switch to OFF.
Maintain line voltage at 120 volts.

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	INDICATOR	ADJUSTMENT	REMARKS
3	Connect to EXT FM antenna terminal through FM dummy antenna. Common to chassis. (Refer to fig. 5)	90 MHz (400 Hz Mod.)	90 MHz	Output meter across EXT SP jack (L).	L4 (FM OSC coil) L1 (FM ANT coil) L2 (FM collector coil) (Refer to fig. 8)	Adjust for maximum output.
4	Connect to EXT FM antenna terminal through FM dummy antenna. Common to chassis. (Refer to fig. 5)	106 MHz (400 Hz Mod.)	106 MHz	Output meter across EXT SP jack (L).	C17 (FM OSC trimmer) C1 (FM ANT trimmer) C8 (FM collector trimmer) (Refer to fig. 8)	Adjust for maximum output. Repeat steps (3) and (4).


Note: Three output responses will be present; proper tuning is the center frequency.

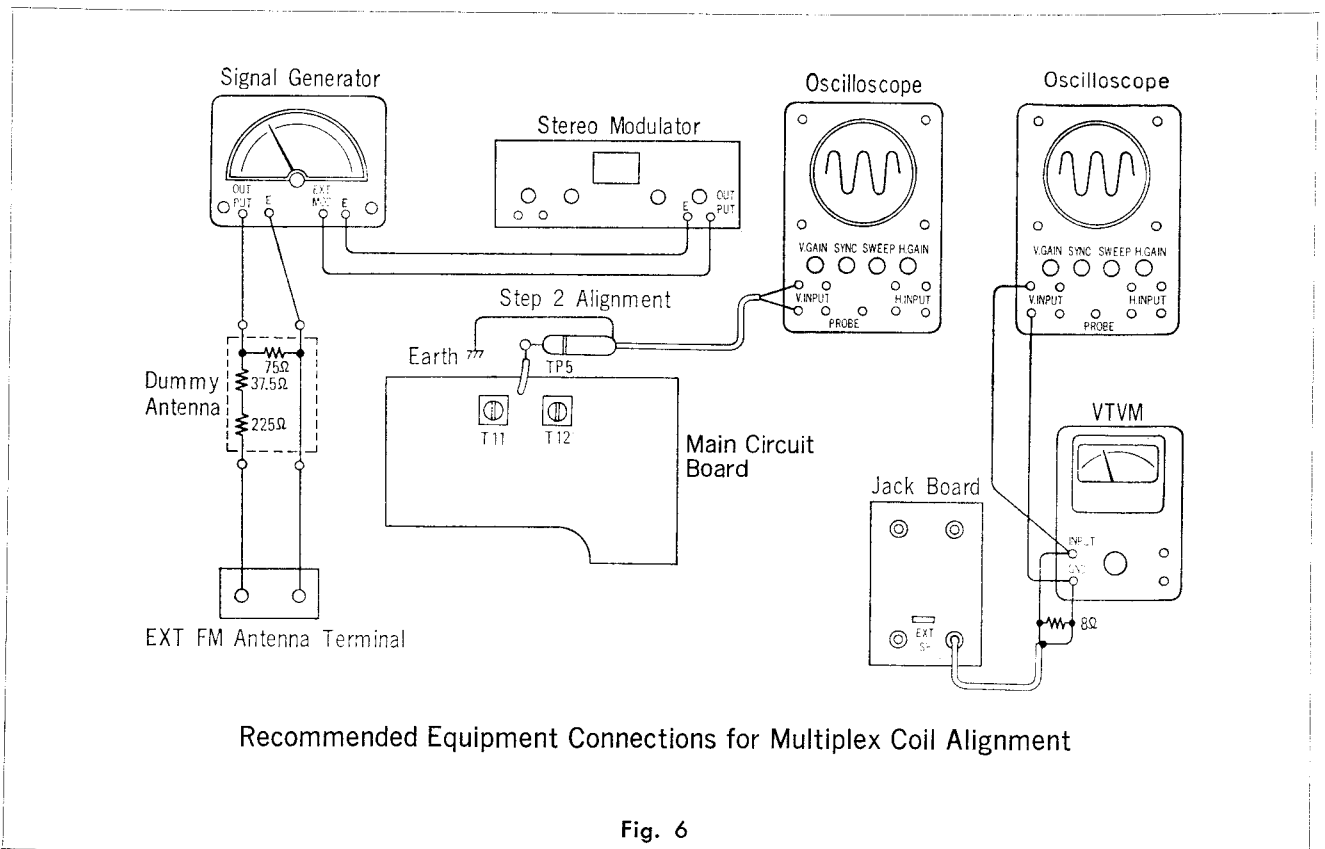

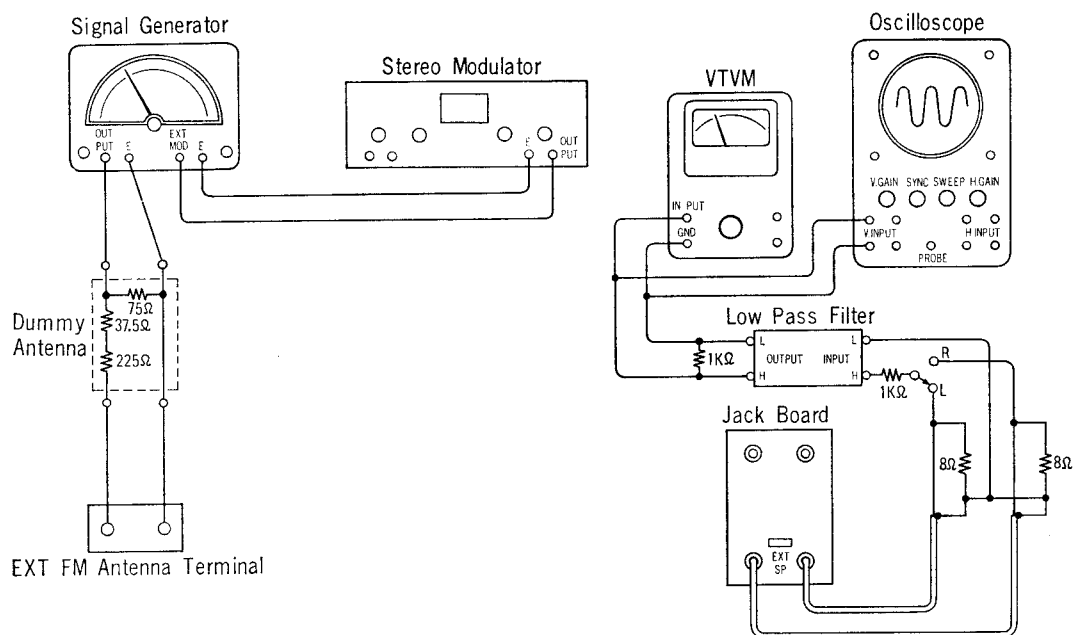




Recommended Equipment Connections for Separation Alignment

Fig. 7

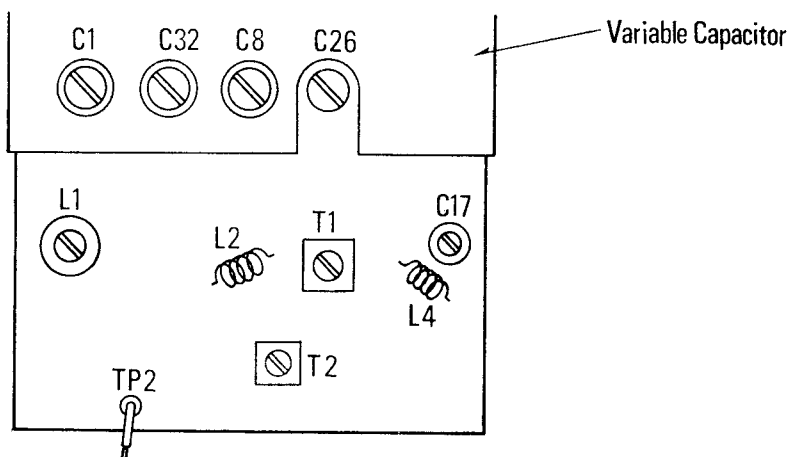

RF Circuit Board

Fig. 8

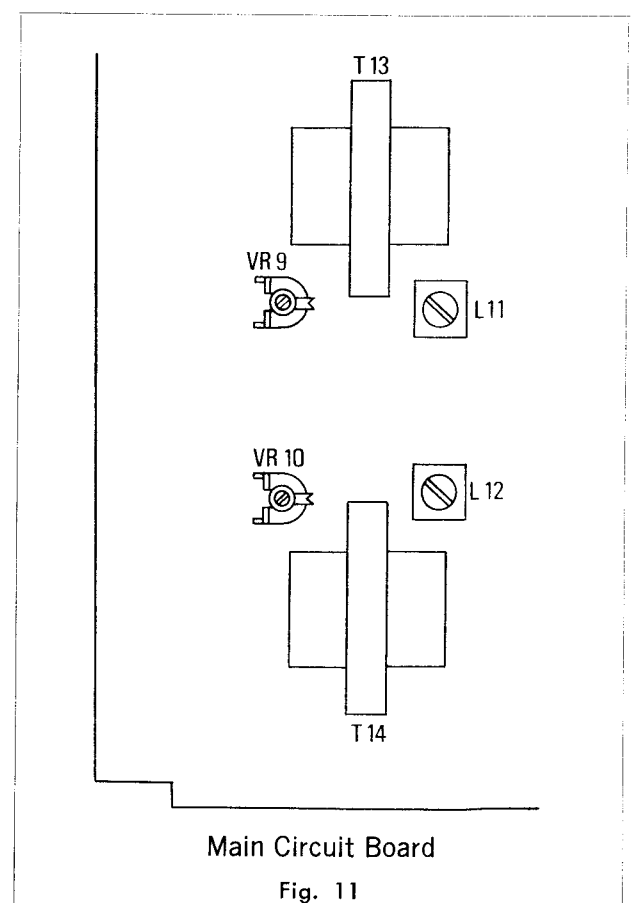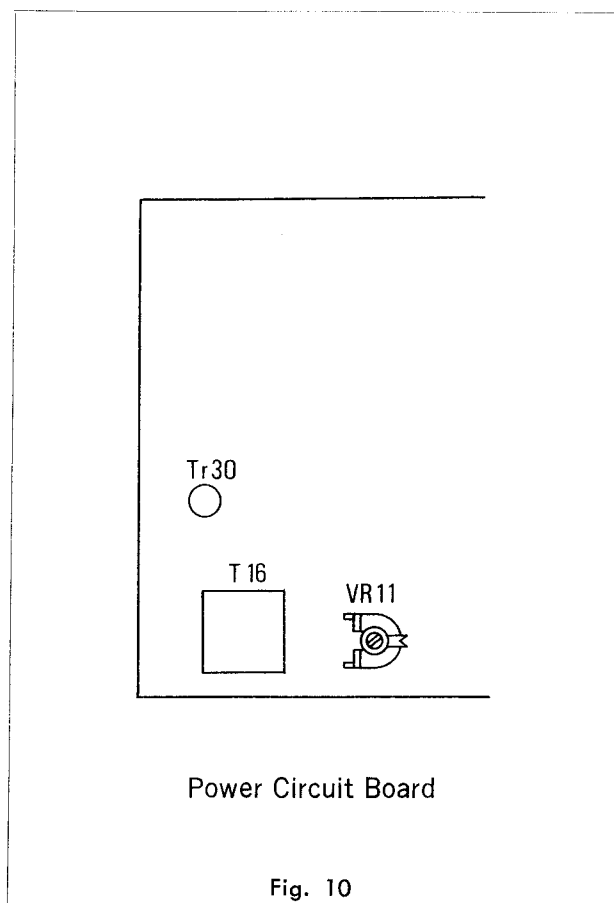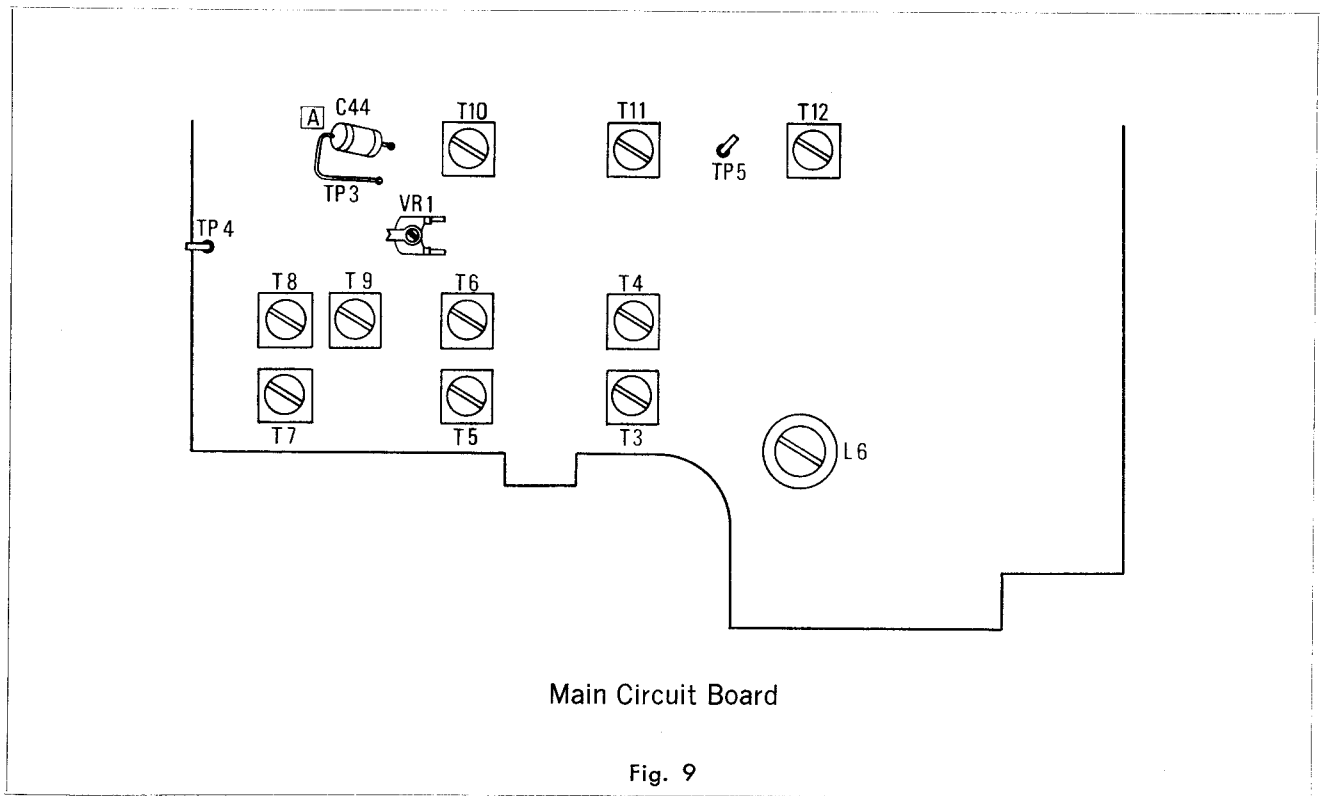

FM STEREO ALIGNMENT

MULTIPLEX COIL ALIGNMENT

Equipment required:

Stereo modulator Connect stereo modulator output to EXT MOD. terminal of signal generator.

Signal generator..... Modulation rate of 19 kHz pilot signal 8~10%

Output level 60 dB

Frequency Approx. 98 MHz

Oscilloscope

Dummy antenna

VTVM

Procedure:

Tuner..... Selector switch to FM STEREO, dial setting to approx. 98 MHz, AFC switch to OFF, tone control to TREBLE, balance control to CENTER, volume control to audible level of speaker sound.

SEPARATION ALIGNMENT

Equipment required:

Stereo modulator Connect stereo modulator output to EXT MOD. terminal of signal generator.

Signal generator..... Modulation rate by 19 kHz pilot signal 8~10%

Modulator rate by left signal 27%

Output level..... 60 dB

Oscilloscope

Dummy antenna

VTVM

Low pass filter


Procedure:

Tuner..... Selector switch to FM STEREO, dial setting to approx. 98 MHz, AFC switch to OFF, tone control to TREBLE, balance control to CENTER. Adjust volume control so that output levels from both units becomes equal.


ITEM	SIGNAL SOURCE CNECTION	EQUIPMENT CONNECTION	ADJUSTMENT	REMARKS
Adjustment of pilot signal.	98 MHz, 30 dB (fig. 6)	TP5 (fig. 9)	T10 T11 T12 (fig. 9)	* Set stereo (L+R) modulation to zero. * Measure pilot signal only, and adjust for maximum.
Adjustment of separation.	98 MHz, 60 dB modulation by L signal. (fig. 7)	Connect VTVM and 8Ω resistor to EXT SP jack. (fig. 7)	T10 VR1 (fig. 9)	* Adjust VR control so that CH1 output becomes 0.63 V. * Slightly adjust T10 so that this output becomes maximum. * Then change the modulation by R signal only, and adjust semi-fixed volume VR1 so that CH1 output becomes minimum. * Likewise modulate by L signal only, and adjust VR1 so that CH2 output becomes minimum.
Measurement of stereo eye lighting level.	98 MHz (fig. 6)	—	—	* Adjust output of signal generator, and make sure that stereo eye lights at 13~30 dB.


Note: When aligning, remove line cord antenna attached to external FM antenna terminal.

ELECTRICAL PARTS LOCATION

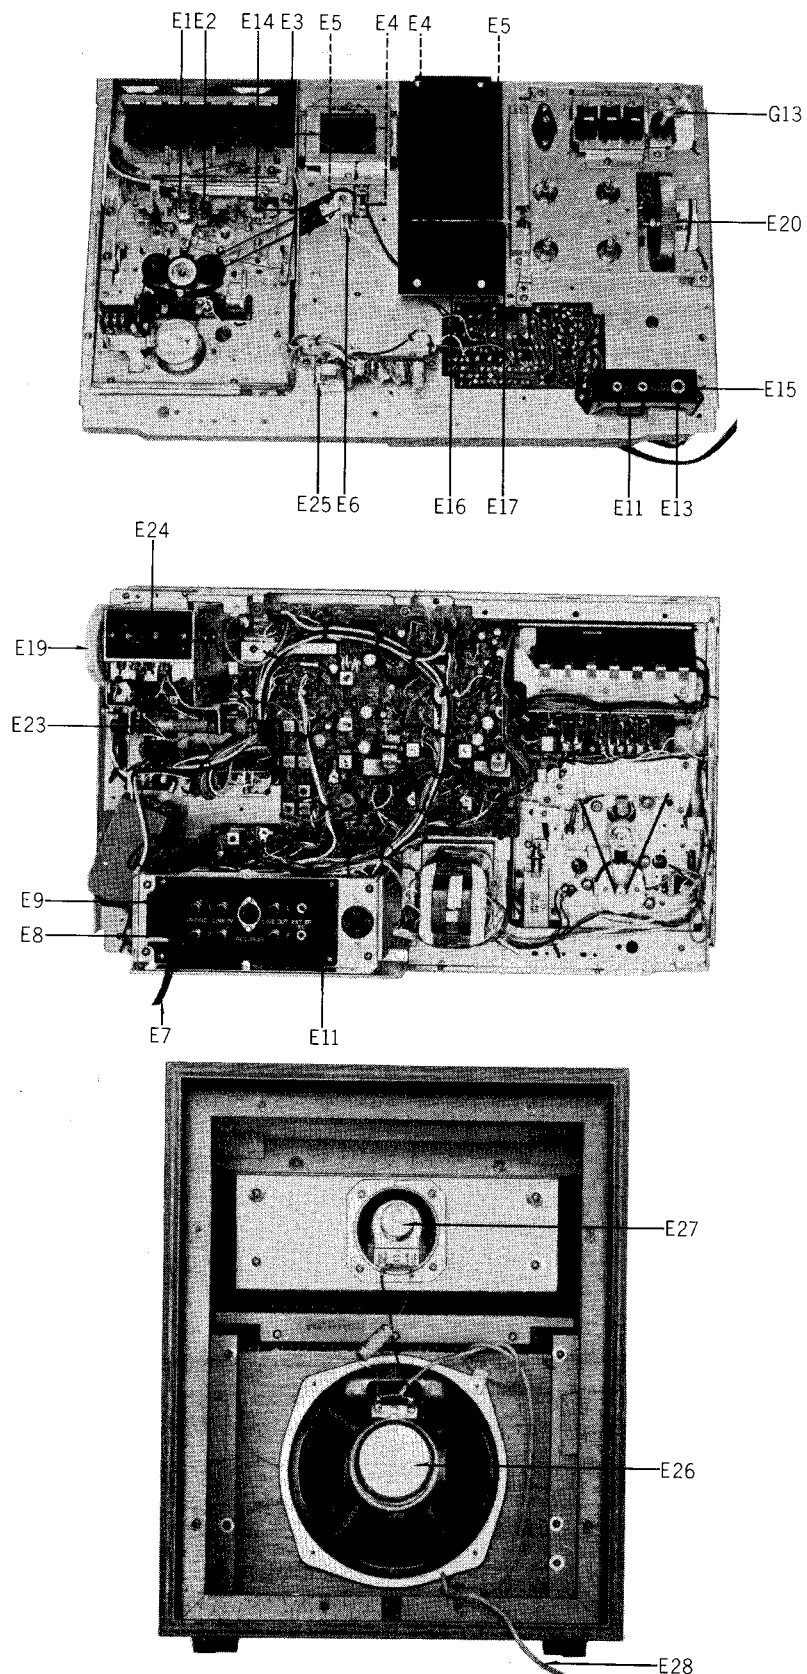


CABINET PARTS

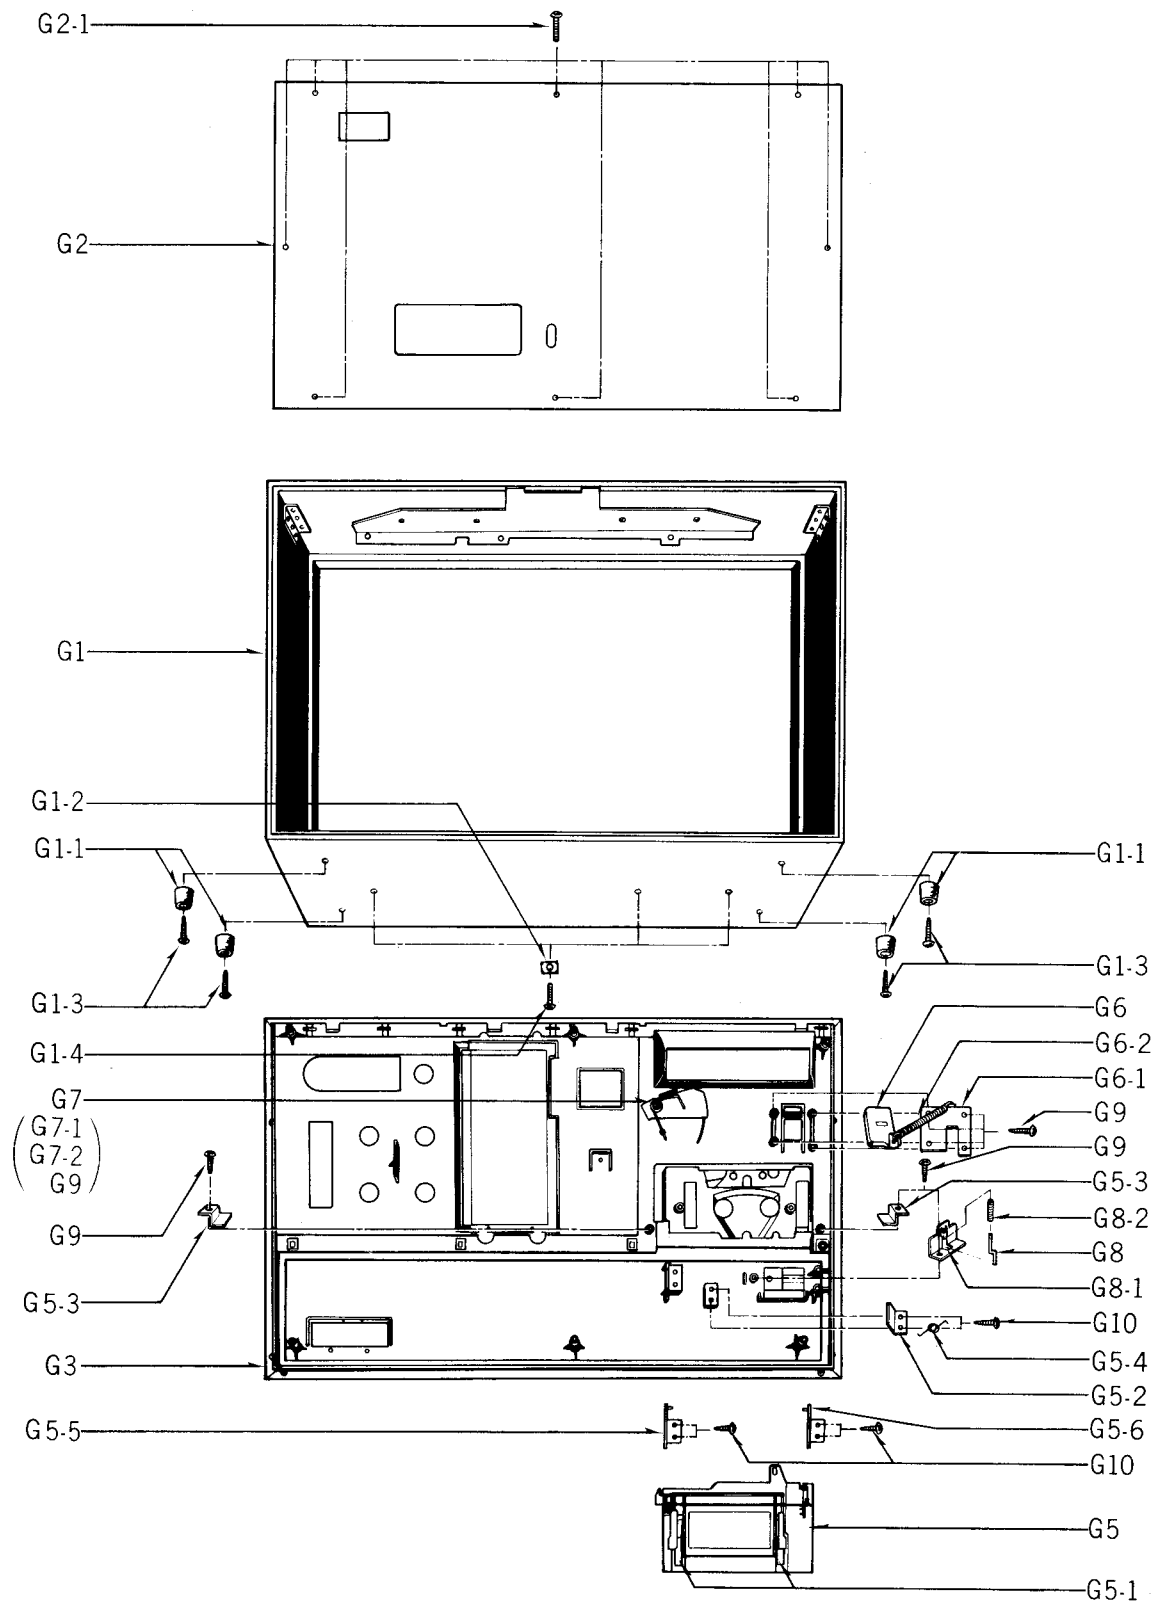

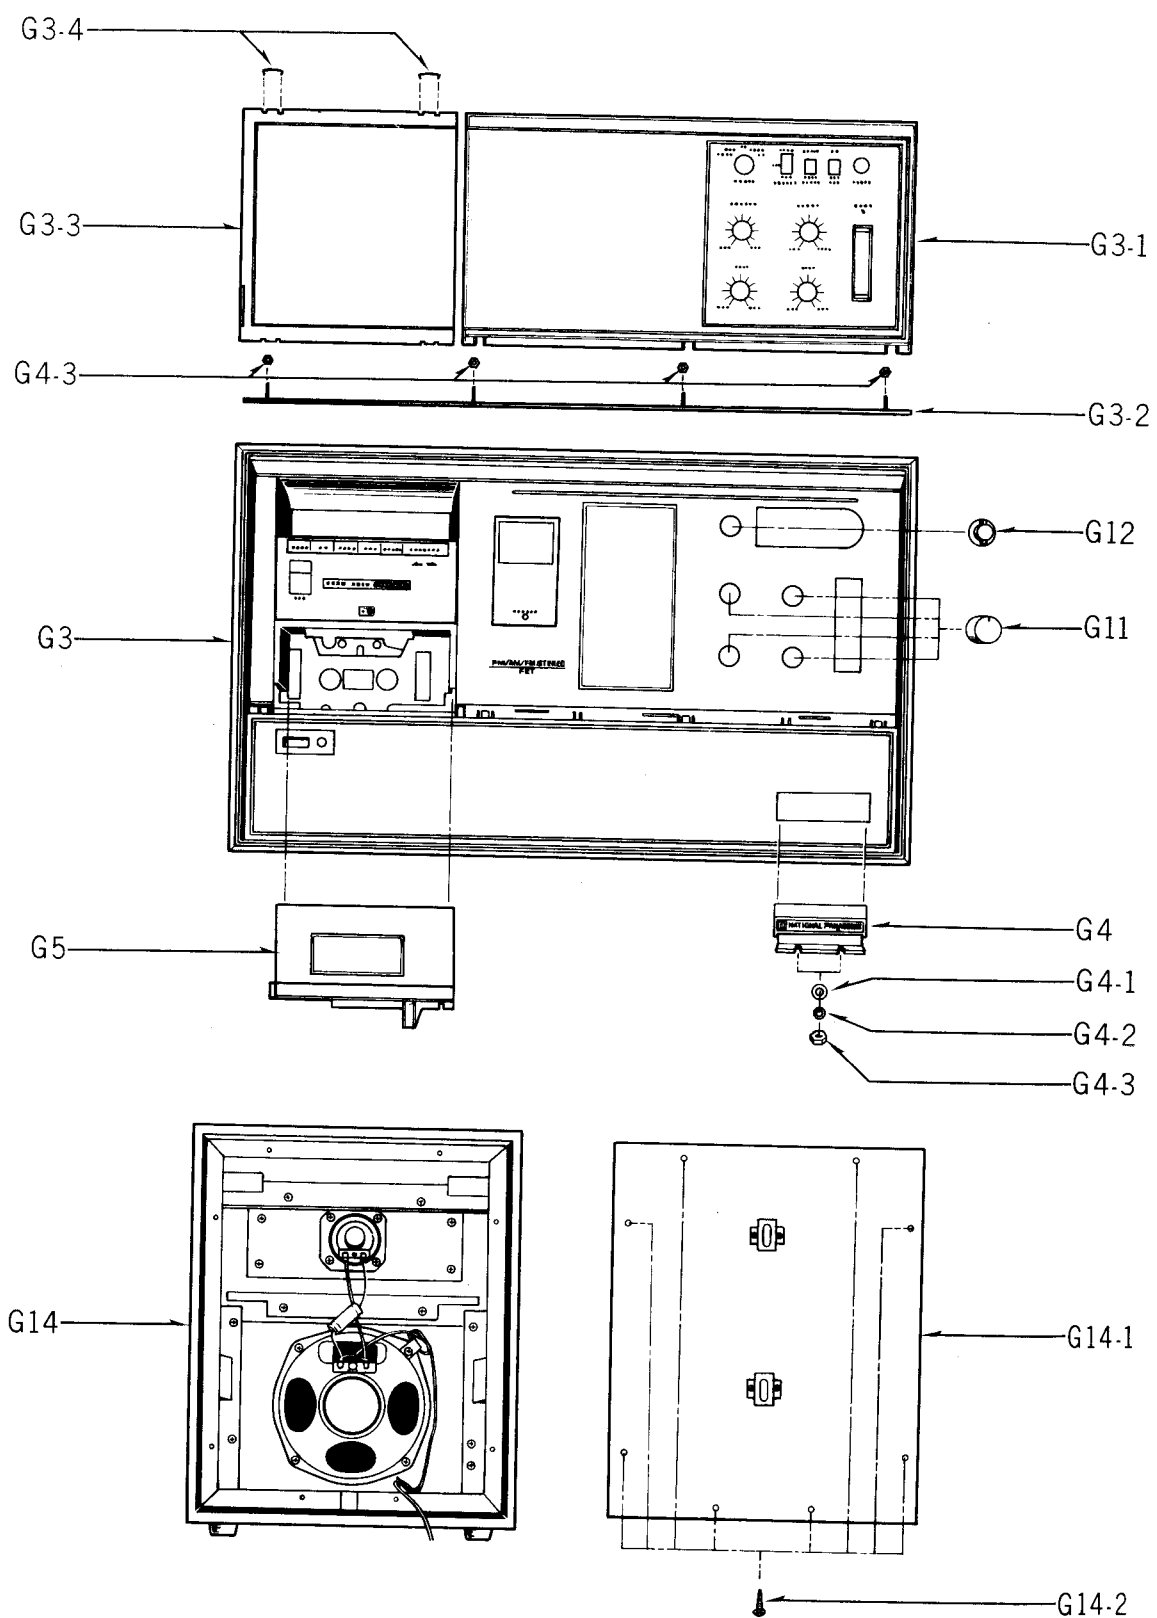

SCHEMATIC DIAGRAM MODEL RS-282S

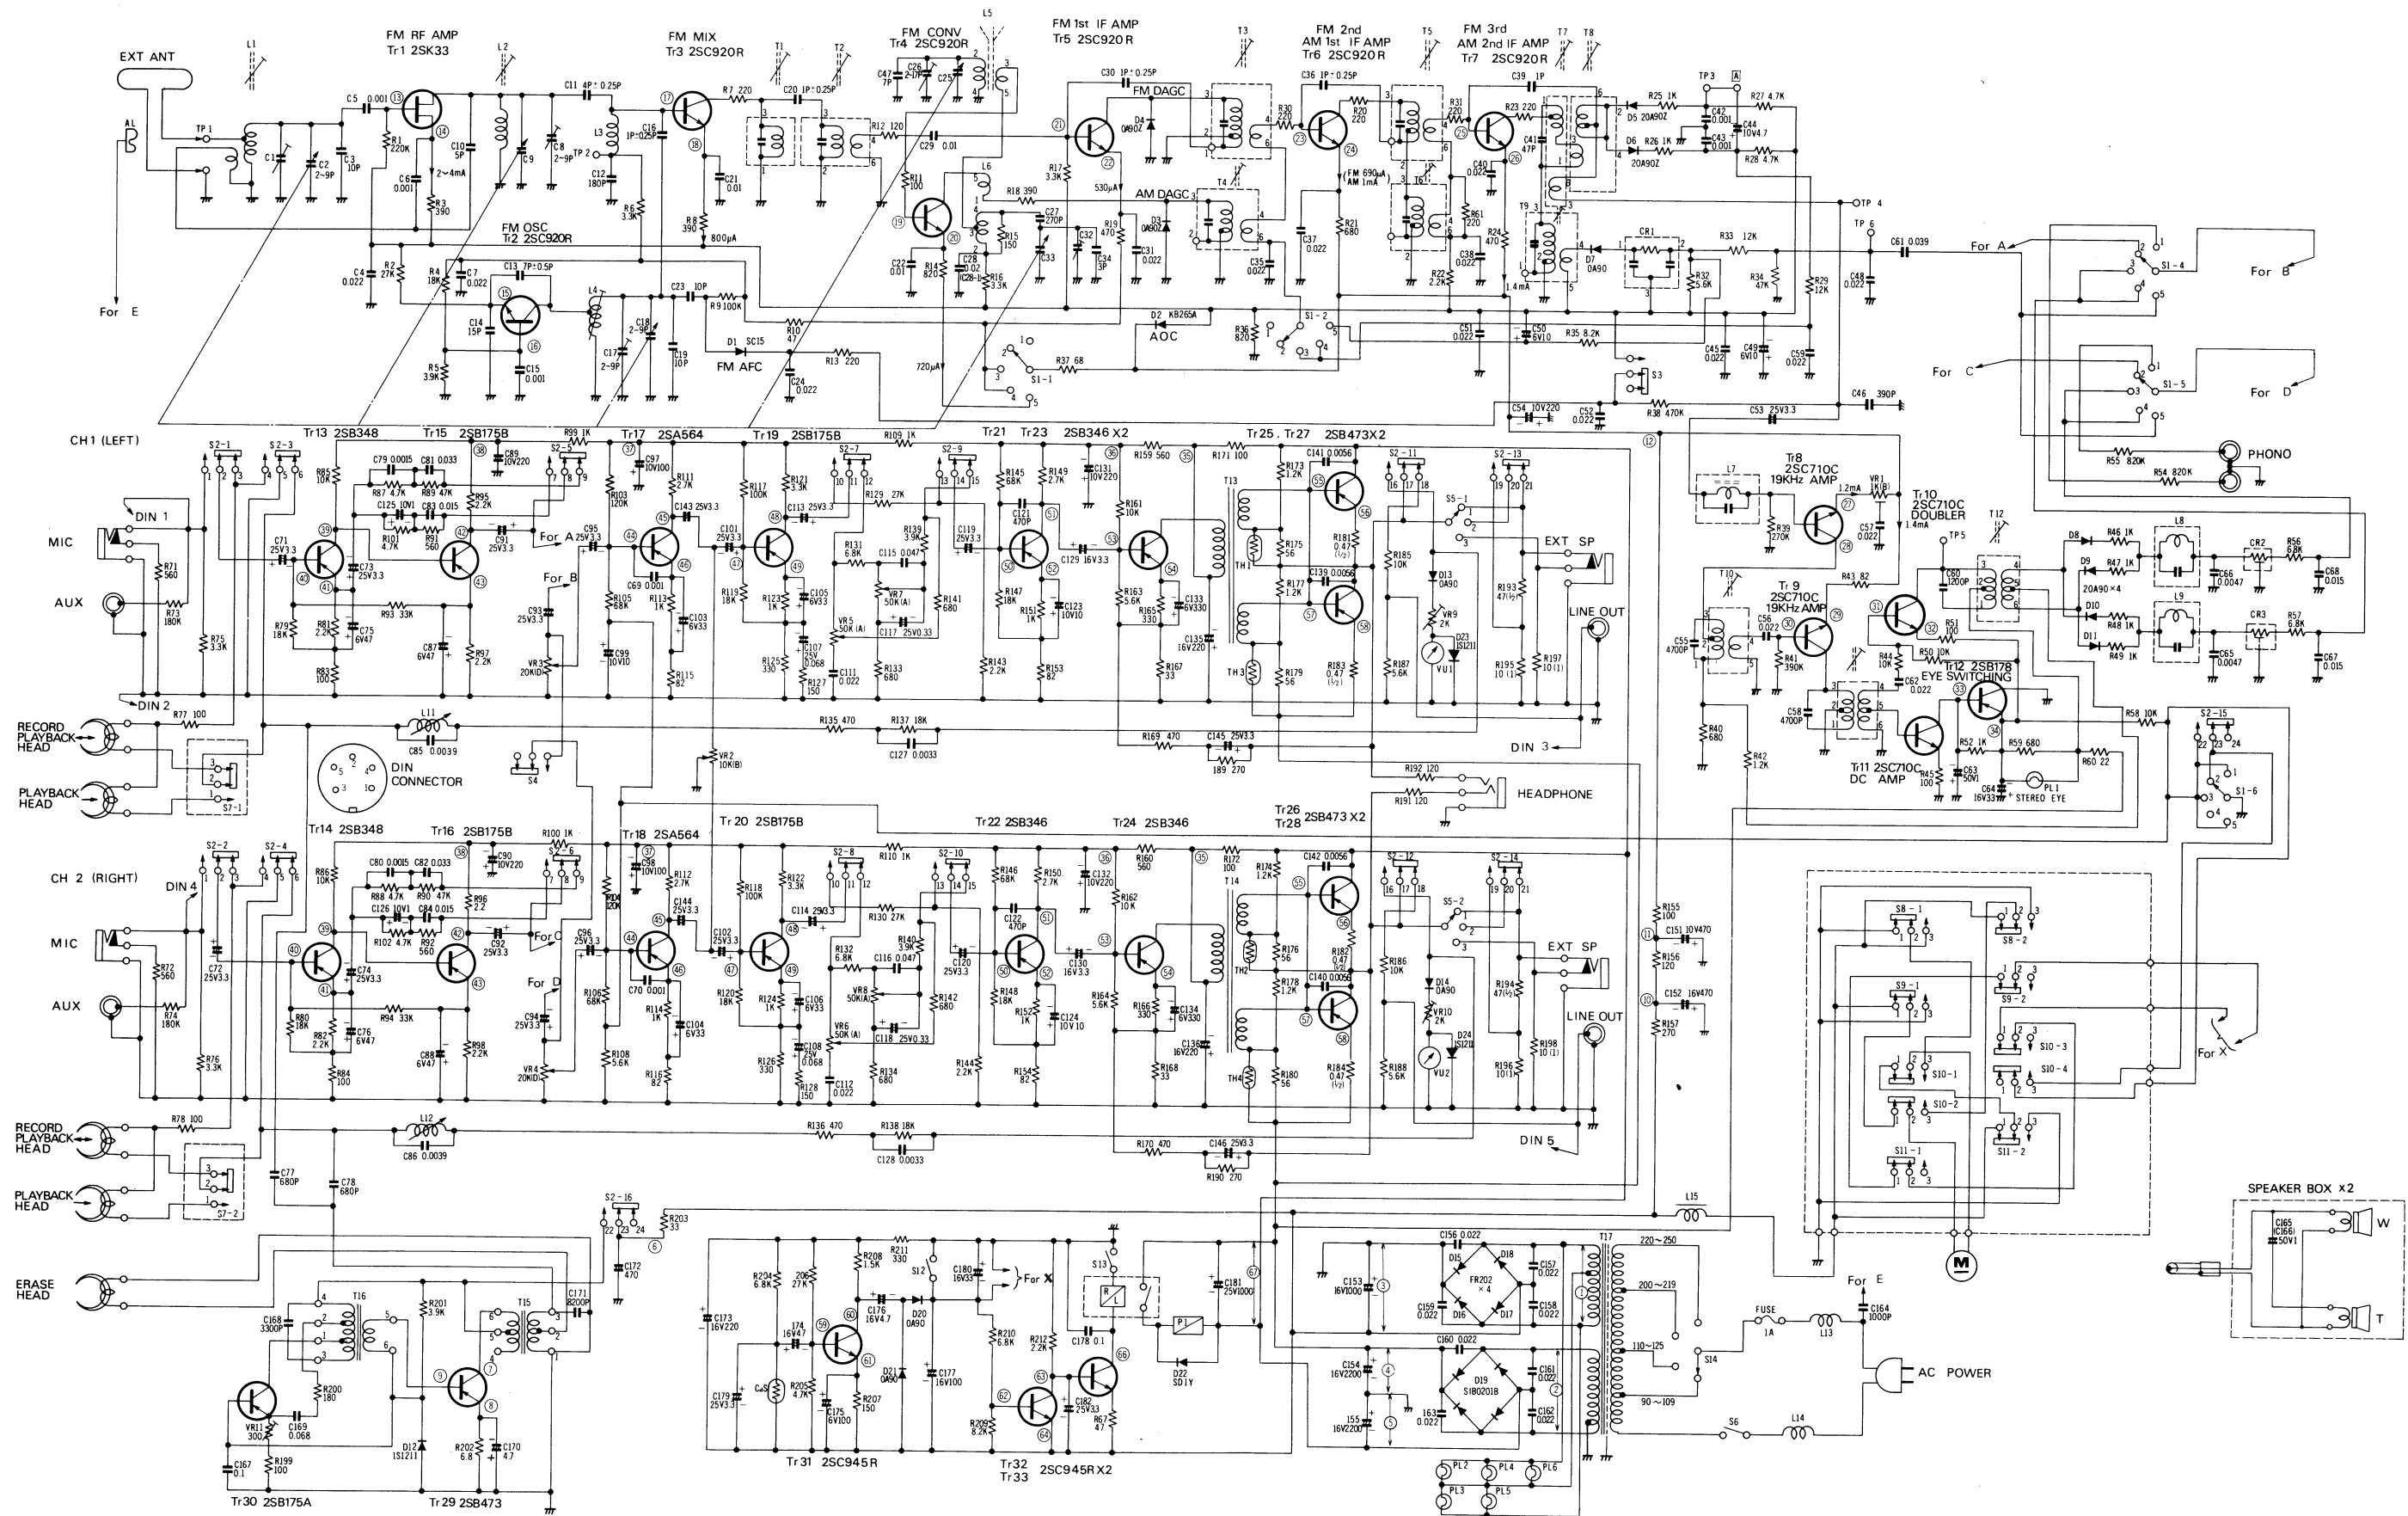


Check Point	PHONO
①	AC 12
②	AC 16.2
③	-15.3
④	+10.6
⑤	+10.6
⑥	-17.0
⑦	
⑧	
⑨	
⑩	-11.5
⑪	-10.8
⑫	-9.8
⑬	
⑭	
⑮	
⑯	
⑰	
⑱	
⑲	
⑳	
㉑	
㉒	
㉓	
㉔	
㉕	
㉖	
㉗	
㉘	
㉙	
㉚	
㉛	
㉜	
㉝	

NOTE: All m Use

NOTE:

1. S1-1~S1-5
2. S2-1~S2-16
3. S3
4. S4
5. S5-1, S5-2
6. S6
7. S7-1, S7-2
8. S8-1, S8-2
9. S9-1, S9-2
10. S10-1~S10-4
11. S11-1, S11-2
12. S12

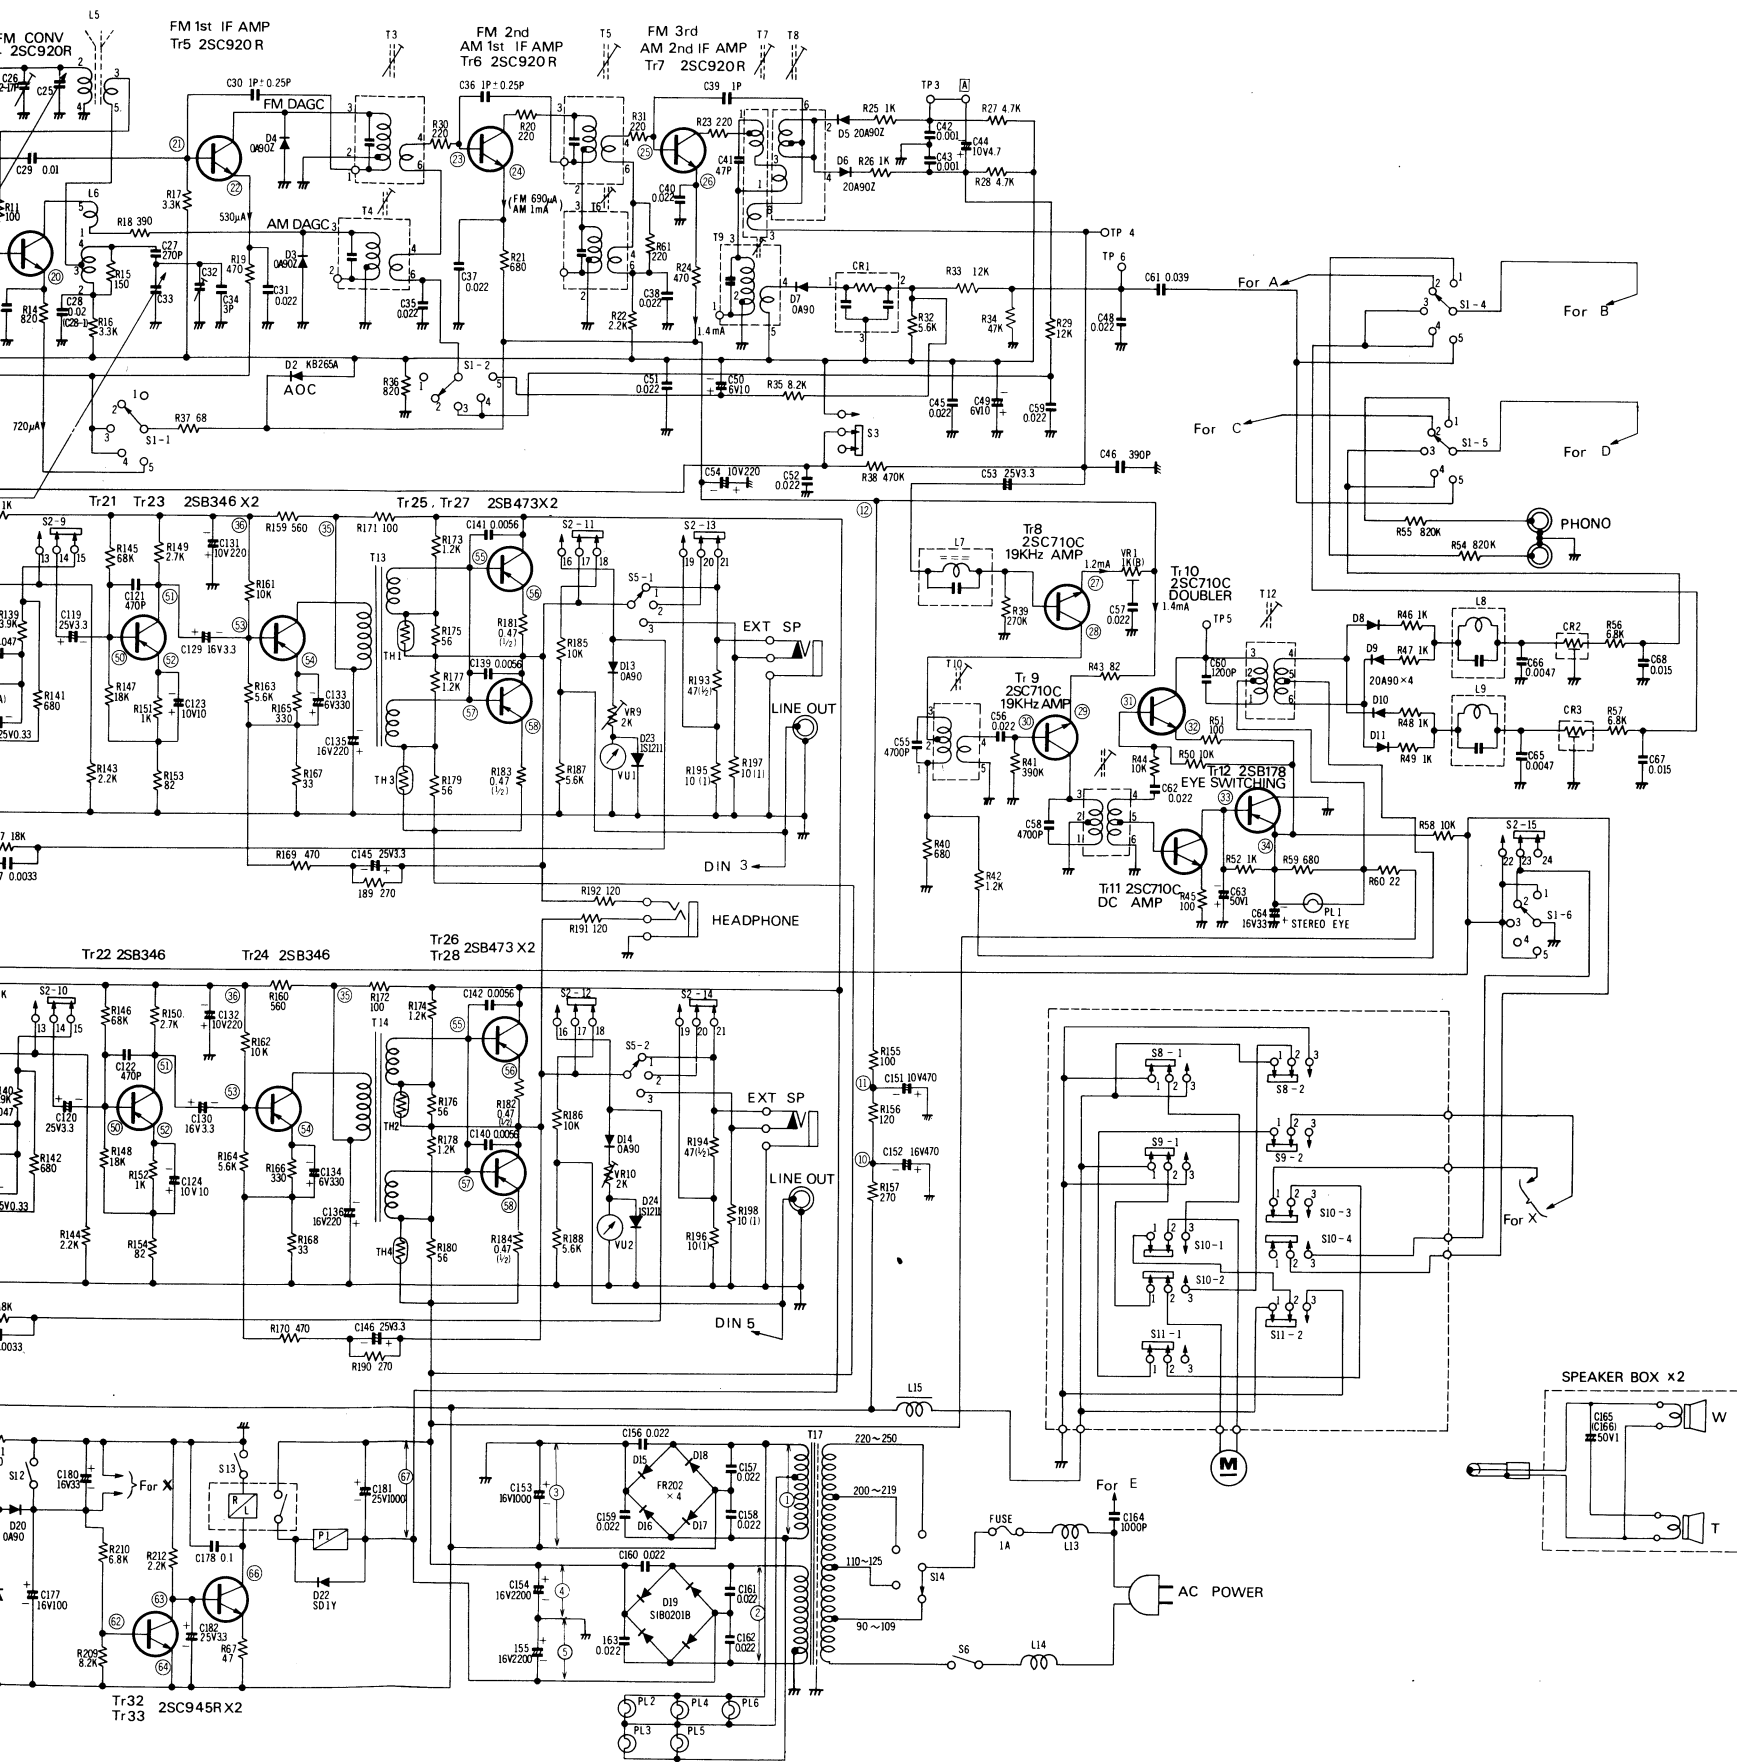

STANDARD VOLTAGE CHART

Check Point	PHONO	Playback	Recording	FM	FM ST	AM	Check Point	PHONO	Playback	Recording	FM	FM ST	AM
1	AC 12 V	AC 12 V	AC 11.5 V	AC 12 V	AC 12 V	AC 12 V	34	-9.4 V	-9.4 V		+10.6 V	+10.6 V	
2	AC 16.2 V	AC 16.2 V	AC 16.0 V	AC 16.2 V	AC 16.2 V	AC 16.2 V	35	-7.1 V	-7.0 V				
3	-15.3 V	-15.3 V	-14.3 V	-15.3 V	-15.3 V	-15.3 V	36	-4.7 V	-4.7 V				
4	+10.6 V	+10.6 V	+10.5 V	+10.6 V	+10.6 V	+10.6 V	37	-3.8 V	-3.8 V				
5	+10.6 V	+10.6 V	+10.5 V	+10.6 V	+10.6 V	+10.6 V	38	-1.7 V	-1.7 V				
6	-17.0 V	-17.0 V	-14.0 V	-17.0 V	-17.0 V	-17.0 V	39	-0.54 V	-0.54 V				
7			-14.2 V				40	-0.46 V	-0.46 V				
8			-0.47 V				41	-2.09 V	-2.09 V				
9			-1.35 V				42	-1.61 V	-1.61 V				
10	-11.5 V	-11.5 V	-11.0 V	-10.8 V	-10.8 V	-11.5 V	43	-1.58 V	-1.58 V				
11	-10.8 V	-10.8 V	-10.8 V	-8.8 V	-8.8 V	-9.8 V	44	-2.35 V	-2.35 V				
12	-9.8 V	-9.8 V	-9.5 V	-7.2 V	-7.2 V	-8.4 V	45	-0.94 V	-0.94 V				
13				-6.4 V	-6.4 V		46	-0.82 V	-0.82 V				
14				-5.8 V	-5.8 V		47	-3.0 V	-3.0 V				
15				-1.67 V	-1.67 V		48	-0.7 V	-0.7 V				
16				-1.17 V	-1.17 V		49	-1.52 V	-1.52 V				
17				-5.9 V	-5.9 V		50	-3.45 V	-3.45 V				
18				-6.4 V	-6.4 V		51	-1.45 V	-1.45 V				
19						-7.0 V	52	-2.55 V	-2.55 V				
20						-7.6 V	53	-2.42 V	-2.42 V				
21				-5.9 V	-5.9 V		54	-0.15 V	-0.15 V				
22				-6.6 V	-6.6 V		55	+0.005 V	+0.005 V				
23				-6.05 V	-6.05 V	-6.8 V	56	+10.5 V	+10.5 V				
24				-6.85 V	-6.85 V	-7.55 V	57	+10.6 V	+10.6 V				
25				-5.9 V	-5.9 V	-6.95 V	58	-14.8 V	-14.8 V				
26				-6.6 V	-6.6 V	-7.7 V	59	-10 V	-10 V				
27				-6.6 V	-6.6 V		60	-15.0 V	-15.0 V				
28				-0.46 V	-0.46 V		61	-15.8 V	-15.8 V				
29				-7.1 V	-7.1 V		62	-15.8 V	-15.8 V				
30				-6.4 V	-6.4 V		63	-15.8 V	-15.8 V				
31				+10.6 V	+10.6 V		64	-15.8 V	-15.8 V				
32				+10.6 V	+10.6 V		65	-23.2 V	-23.2 V				
33				+10.6 V	+10.6 V		66						

NOTE: All measurements are under no signal with volume at minimum position.
Use M-type VTVM for AC voltage measurement and P-type VTVM for DC voltage measurement.


NOTE:

- S1-1~S1-5 Function switch (shown in TAPE position).
1...PHONO, 2...TAPE, 3...FM, 4...FM STEREO, 5...AM.
- S2-1~S2-16 Record/playback select switch (shown in PLAYBACK position).
- S3 Automatic frequency control switch.
- S4 STEREO/MONO select switch.
- S5-1, S5-2 Monitor switch.
1...HIGH, 2...LOW, 3...OFF.
- S6 Power switch.
- S7-1, S7-2 Reverse switch coupled with S8.
- S8-1, S8-2 Forward switch coupled with S7.
- S9-1, S9-2 Fast reverse switch.
- S10-1~S10-4 Play switch.
- S11-1, S11-2 Fast forward switch.
- S12 Plunger cut switch coupled with S8, S9 (shown in OFF position).


- S13 Plunger cut switch (shown in OFF position).
- S14 AC voltage select switch.
- VR1 Separation adjustment VR.
- VR2 Balance control.
- VR3, VR4 Volume control.
- VR5, VR6 Bass control.
- VR7, VR8 Treble control.
- VR9, VR10 Level indicator adjustment VR.
- VR11 Erase current adjustment VR.
- Resistor are ohms (Ω), 1/4 watt unless specified otherwise.
K=1,000 Ω , M=1,000,000 Ω .
The bracket numbers followed the resistors show the wattage of the resistor.
- Capacitors are microfarads (μ F) unless specified otherwise.
P=Micro-microfarads.
- Encircled numbers (○) show the checkpoints for voltage.
The values are marked in the standard voltage chart.

CIRCUIT BOARD


MAIN CIRCUIT BOARD

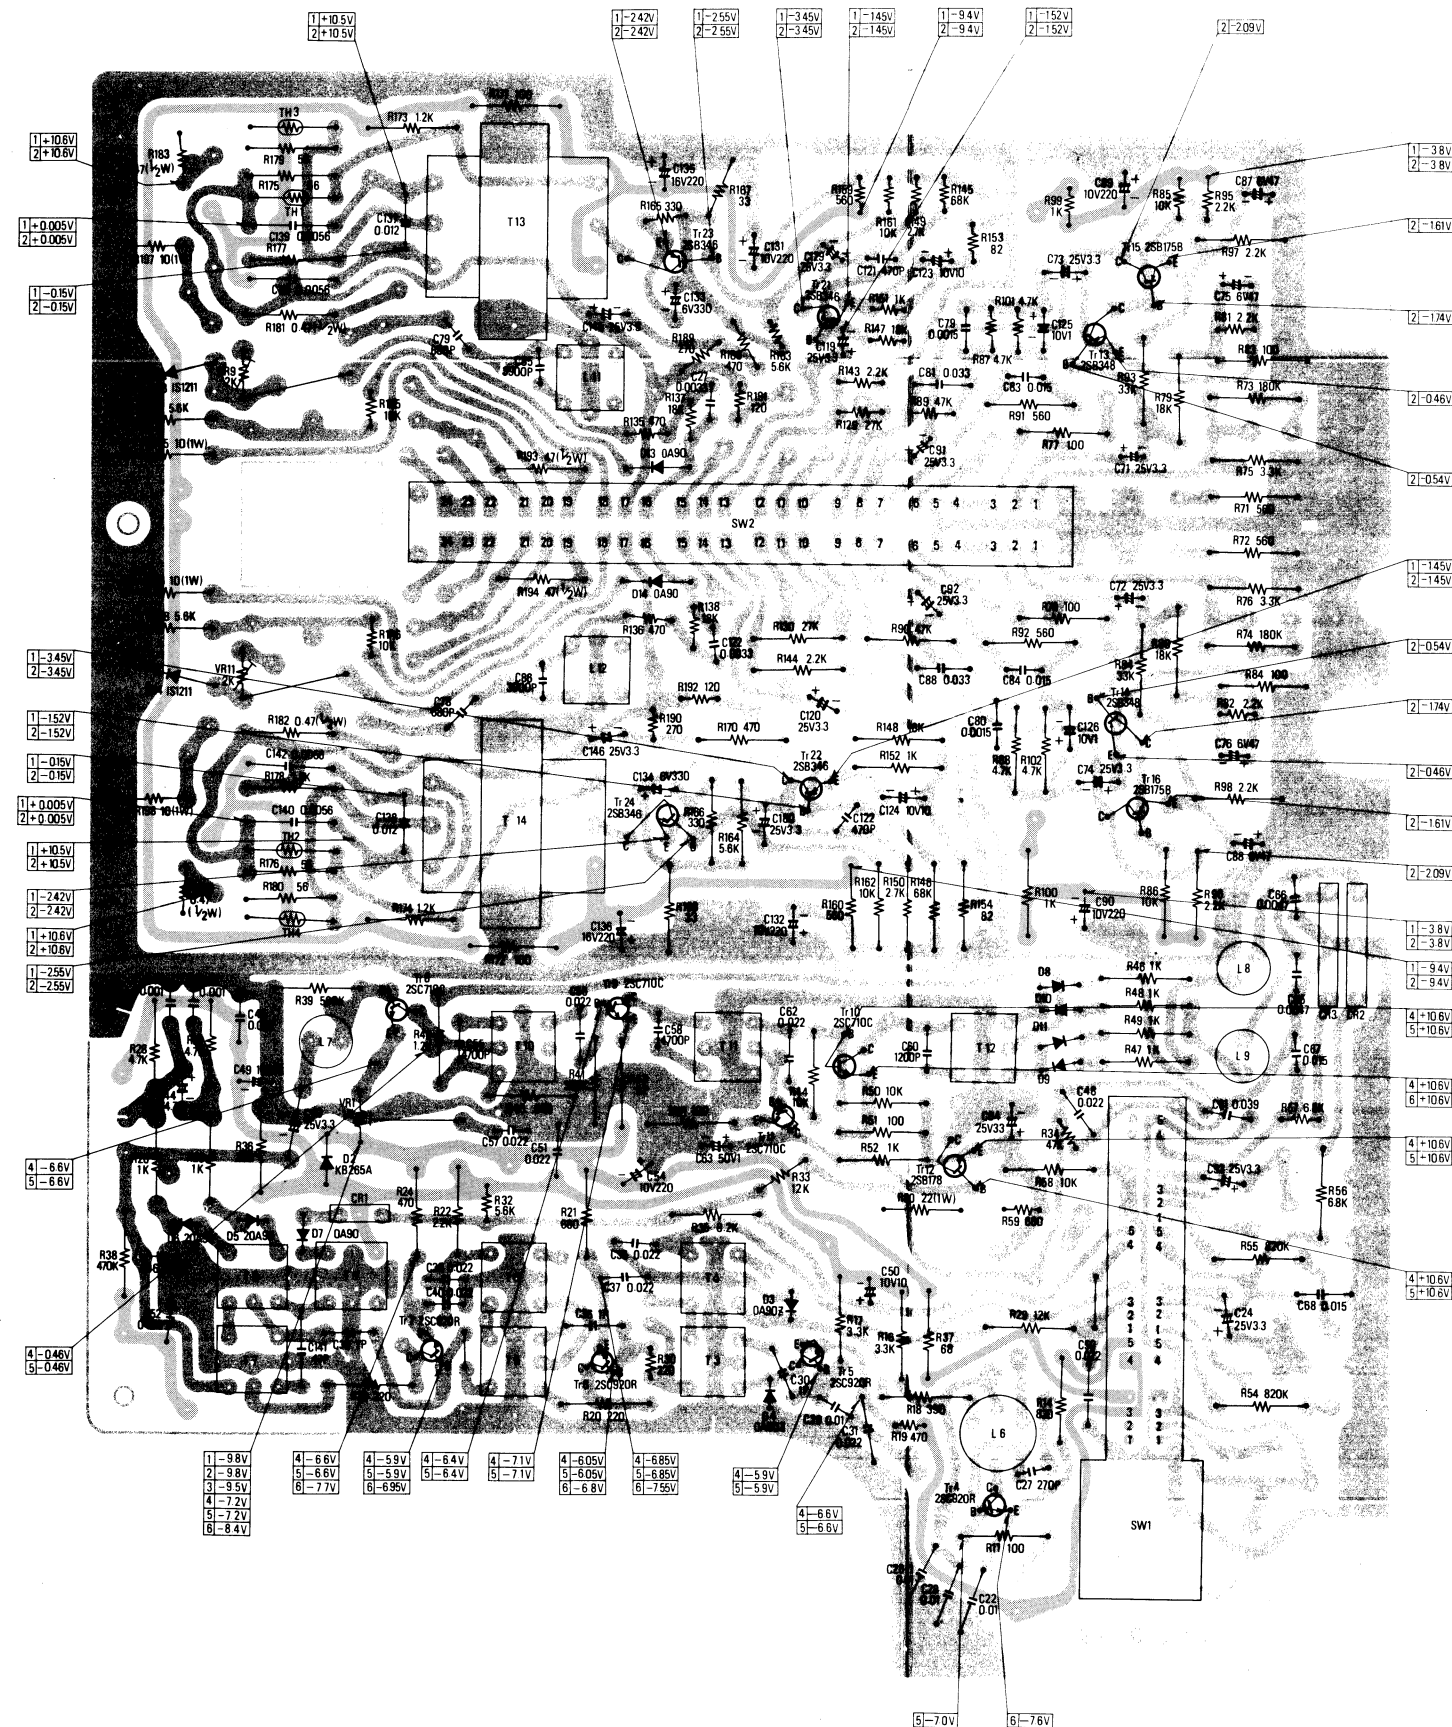


RF CIRCUIT BOARD

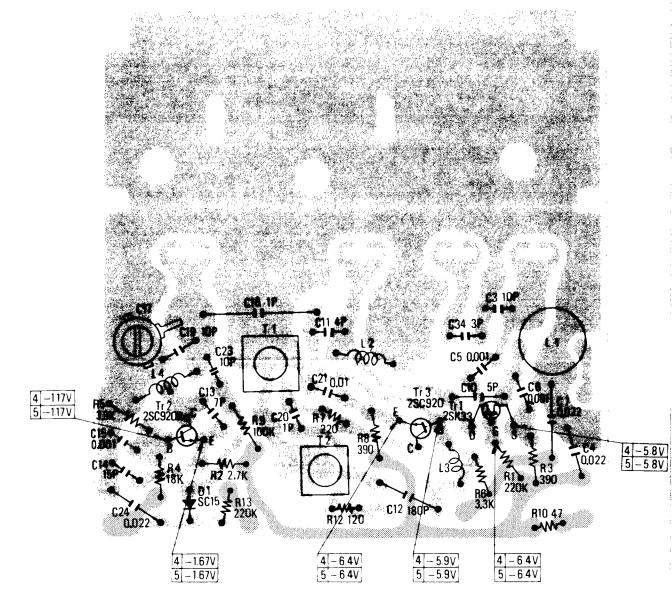

TONE CONTROL CIRCUIT BOARD

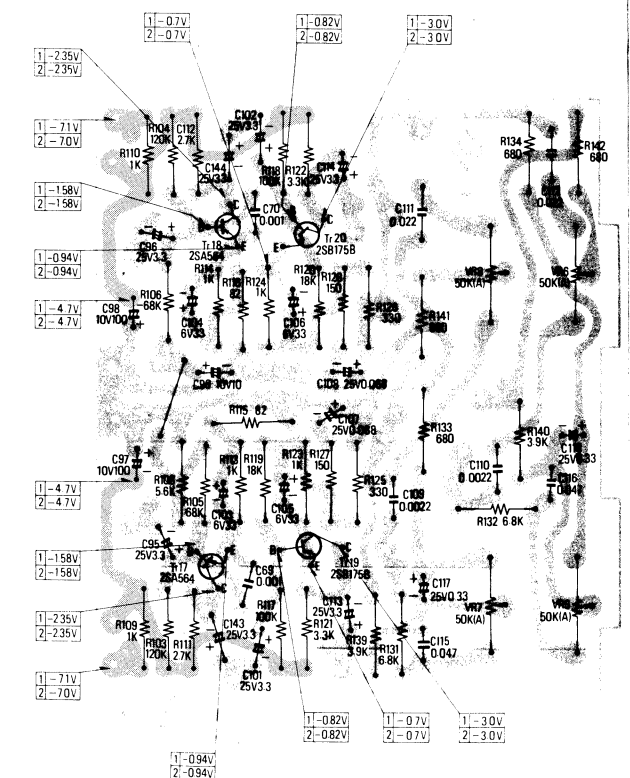

POWER

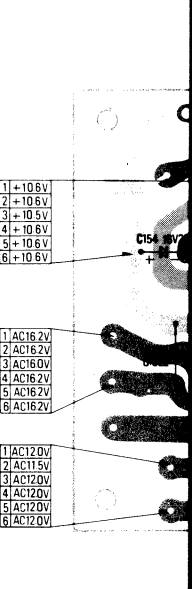


AUTO S




NOTE:
The circ
The circ
Values in
parts.
Numerals
1...Ph
respec

CIRCUIT BOARD


MAIN CIRCUIT BOARD

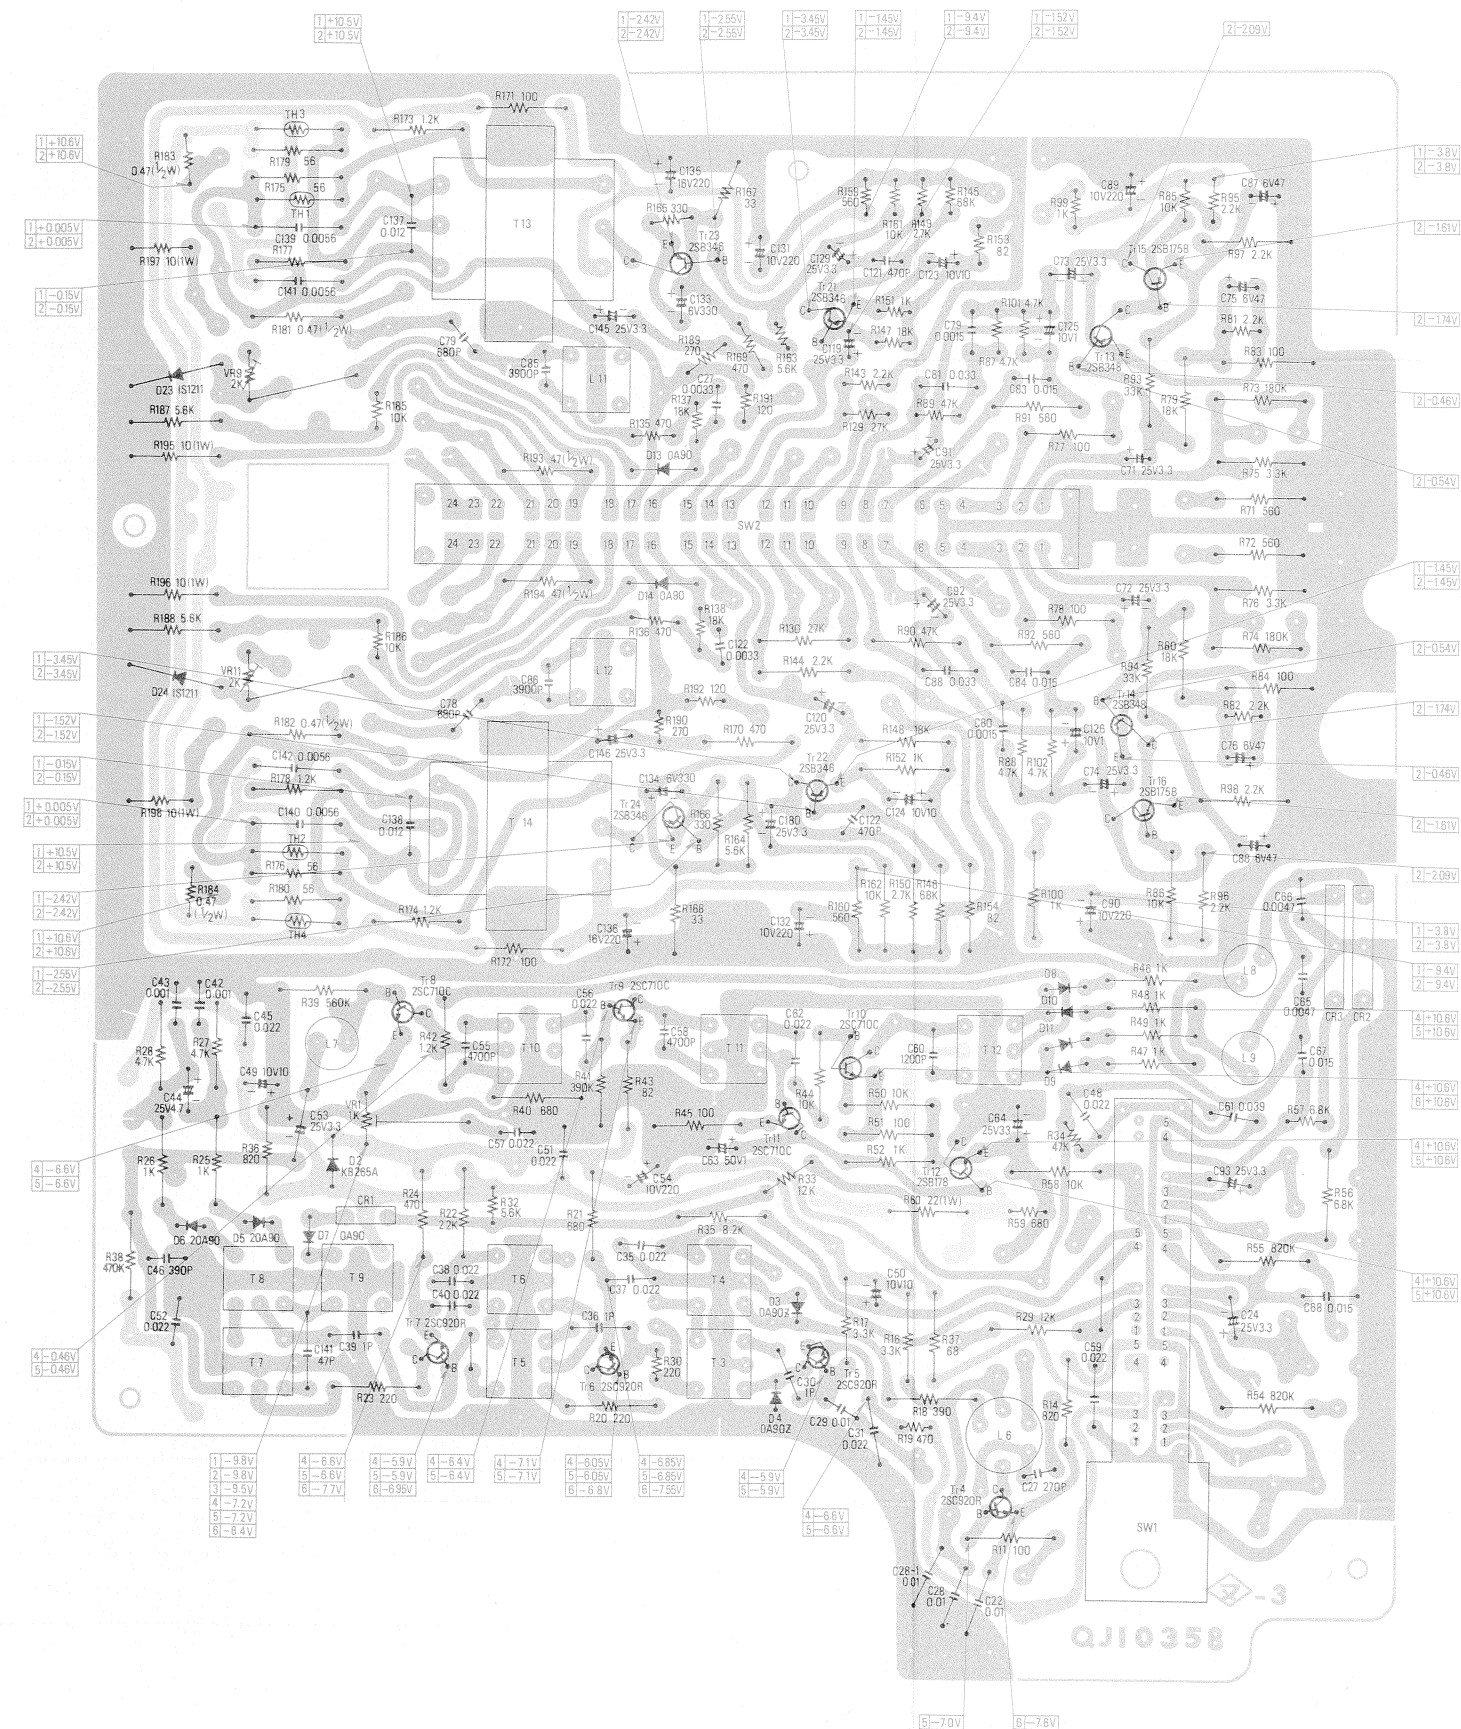


RF CIRCUIT BOARD

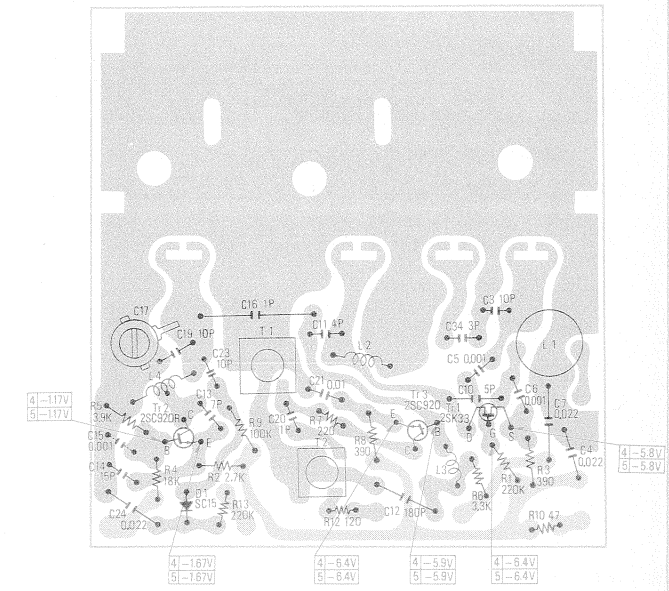

TONE CONTROL CIRCUIT BOARD

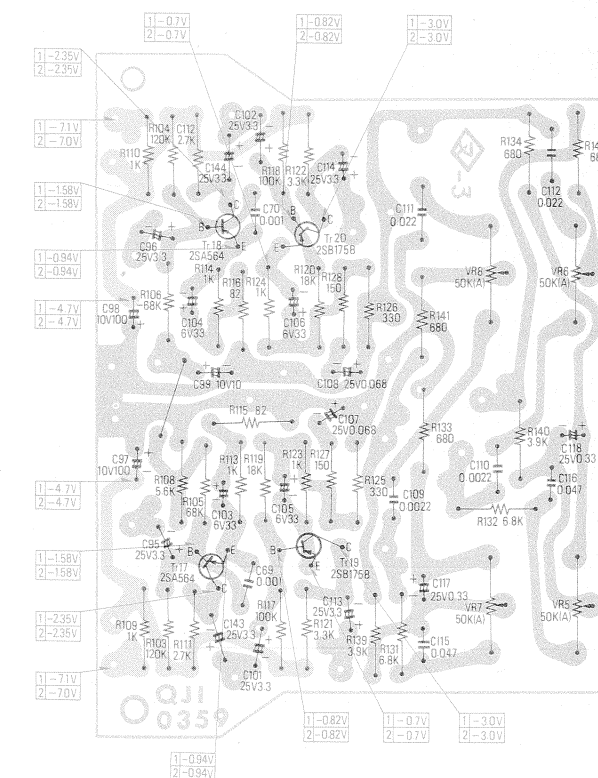

POWER

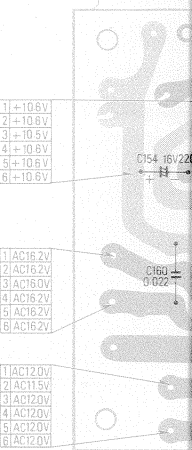


AUTO S




NOTE:
The circuit
The circuit
values in
parts.
numerals
1...Pho
respect


The circuit shown in green on the conductor is +B circuit.
The circuit shown in red on the conductor is -B circuit.
Values indicated in are DC voltages between the chassis and electrical parts.
Numerals show values of voltage at.....
1...Phono, 2...Playback, 3...Recording, 4...FM, 5...FM stereo, and 6...AM respectively.

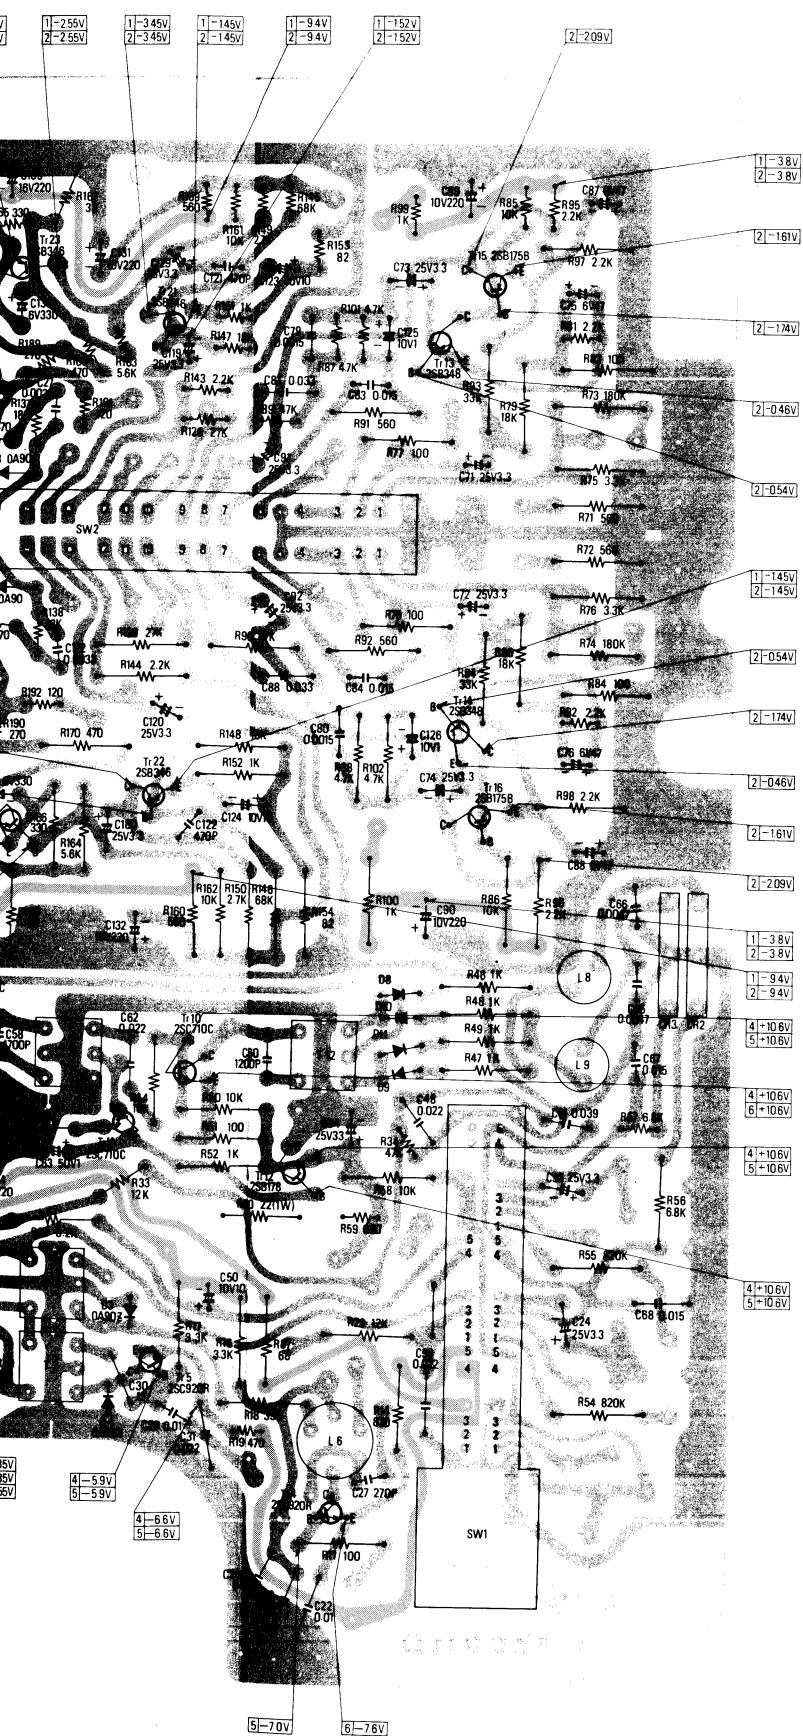


RF CIRCUIT BOARD

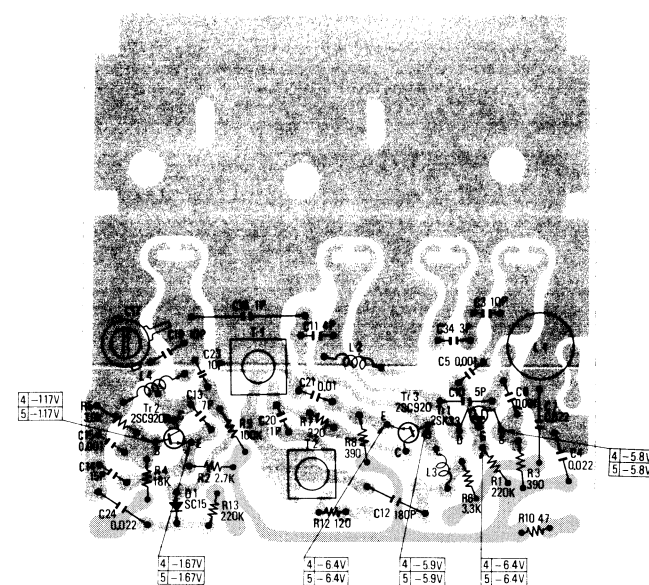


POWER CIRCUIT BOARD

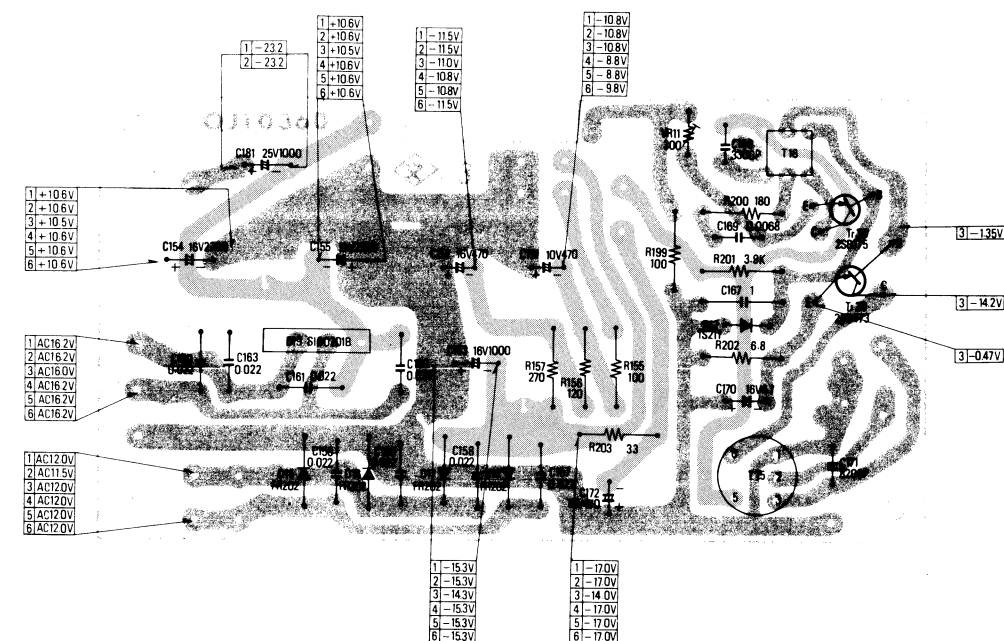

TONE CONTROL CIRCUIT BOARD

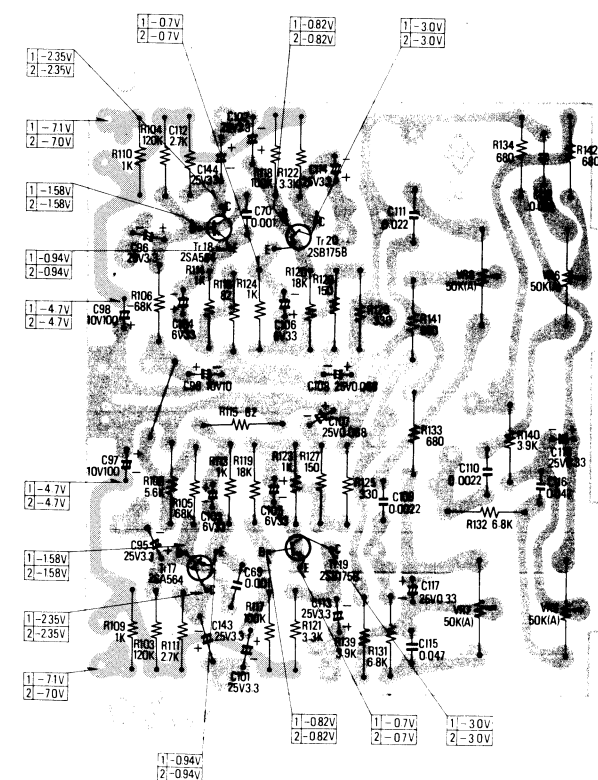


AUTO STOP CIRCUIT BOARD

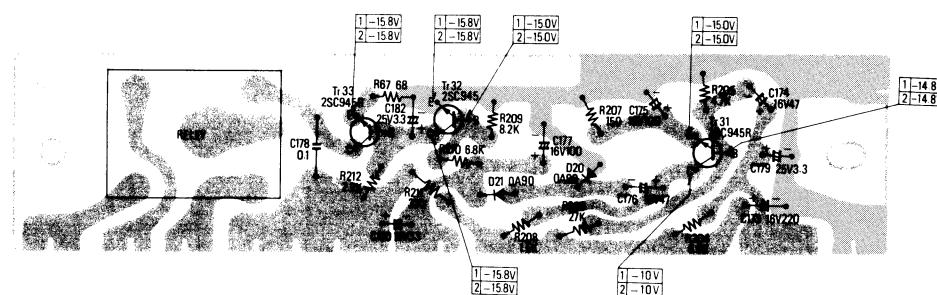

NOTE:

The circuit shown in green on the conductor is +B circuit.
The circuit shown in red on the conductor is -B circuit.
Values indicated in are DC voltages between the chassis and electrical parts.
Numerals show values of voltage at.....
1...Phono, 2...Playback, 3...Recording, 4...FM, 5...FM stereo, and 6...AM respectively.

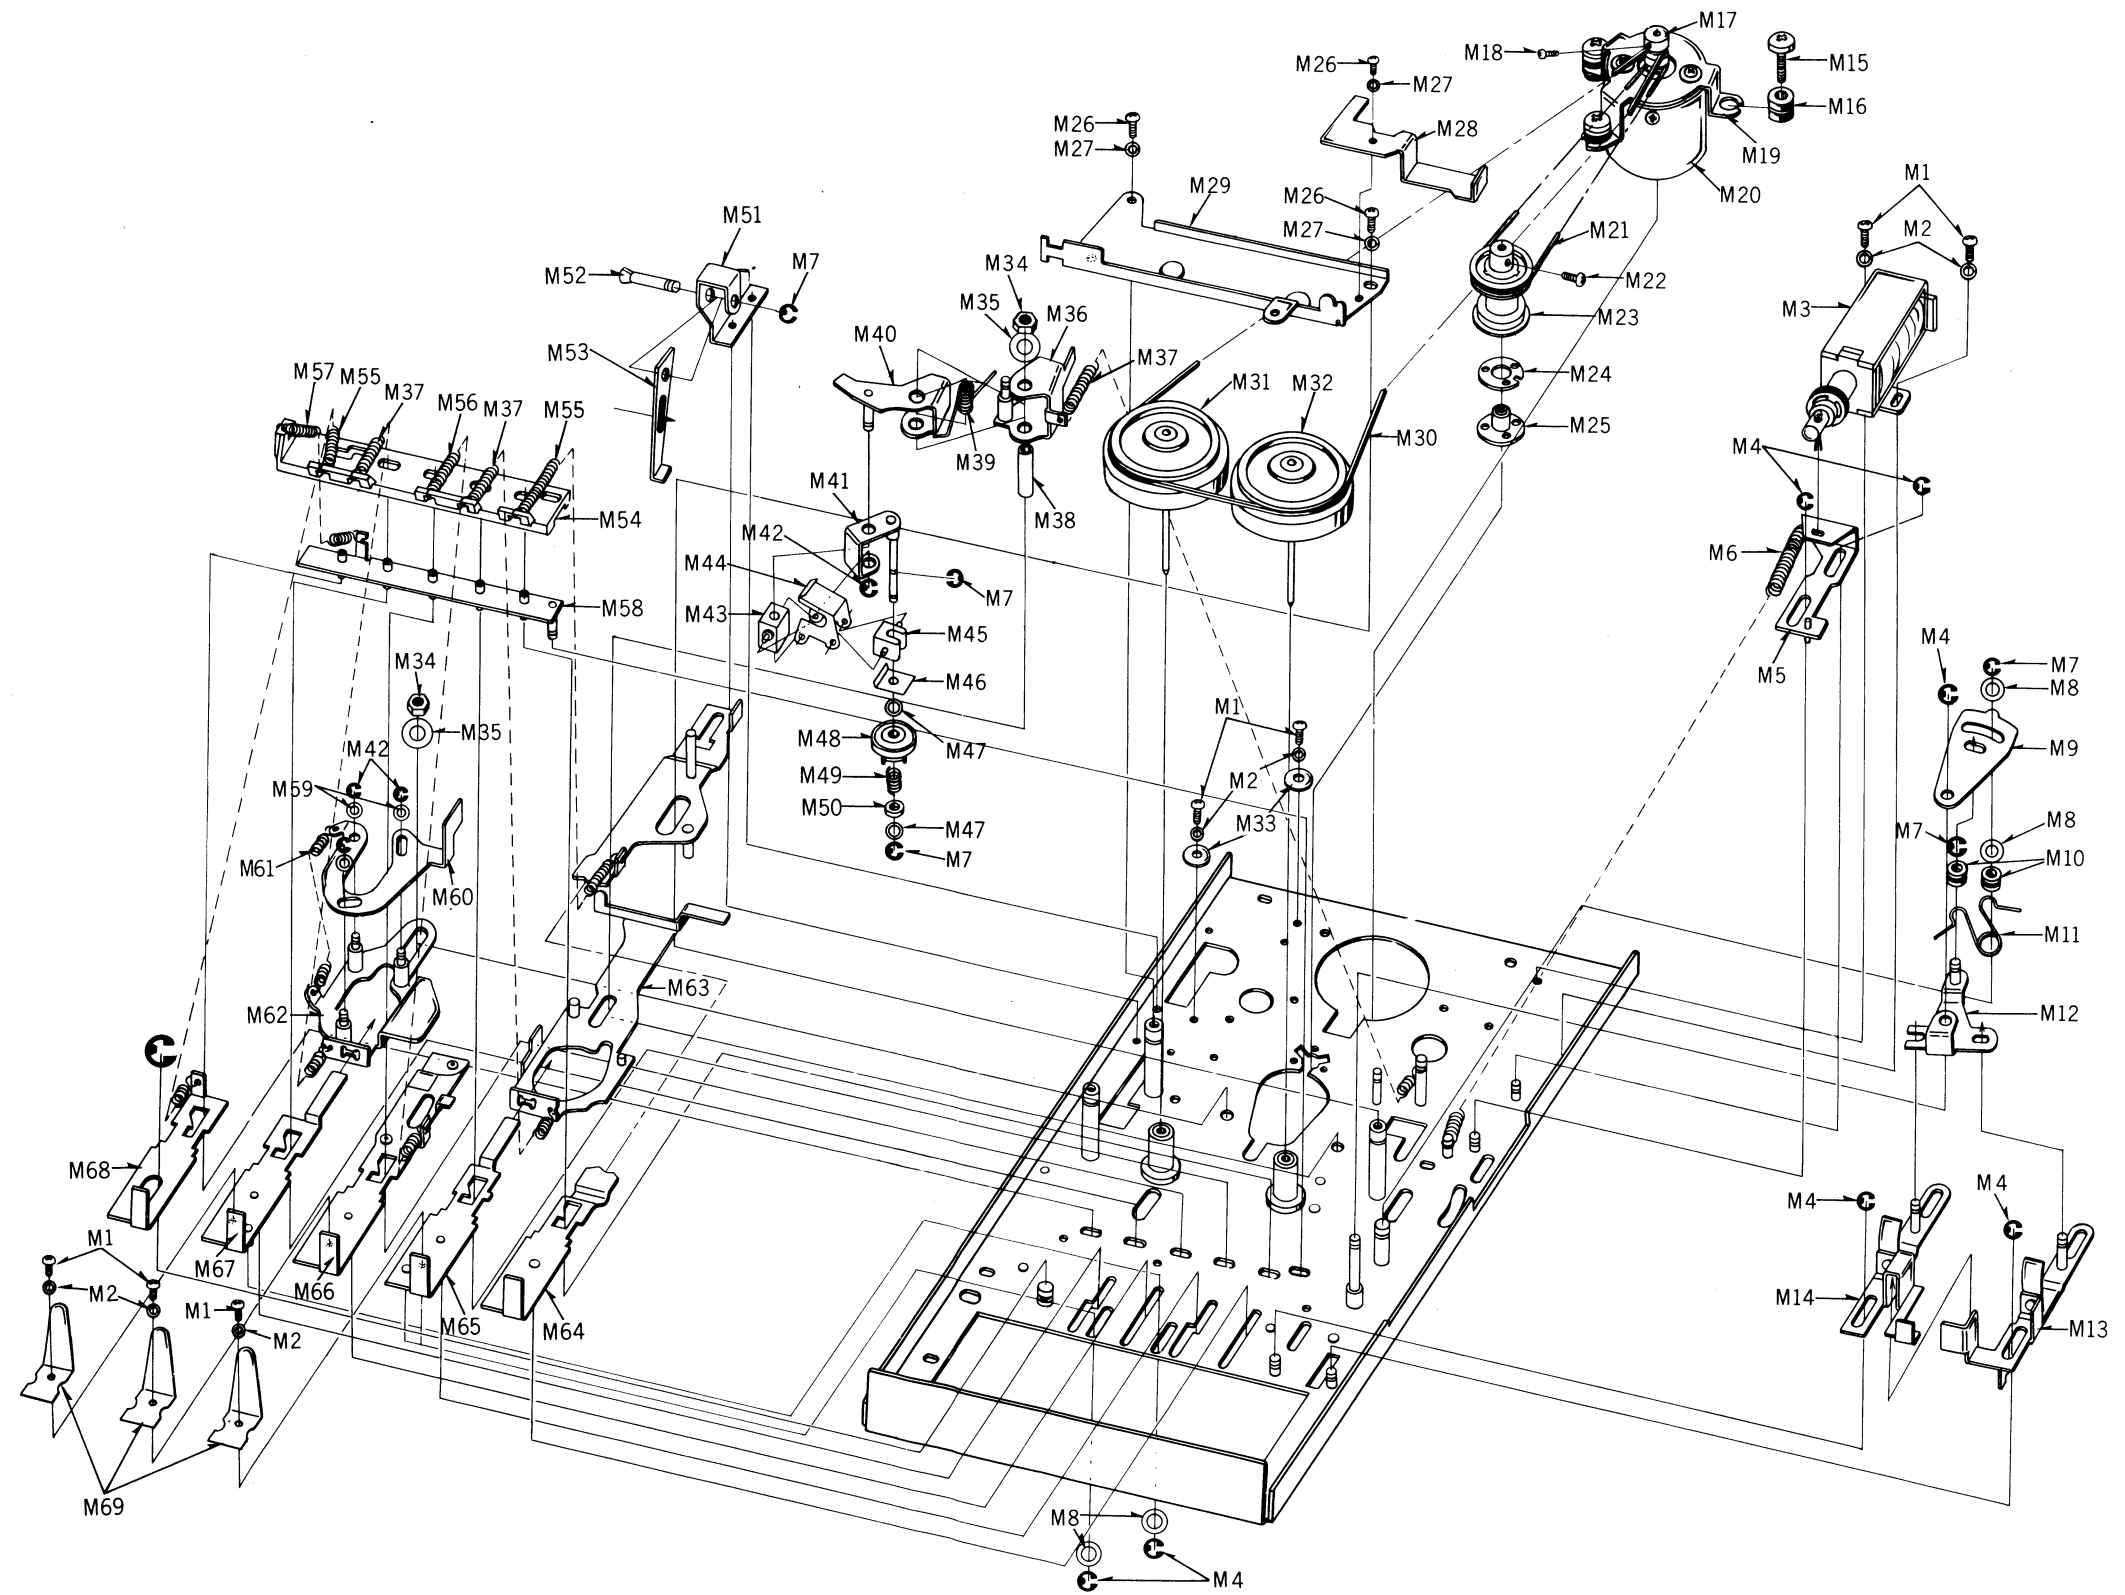

This diagram illustrates the exploded view of a complex mechanical assembly, likely a control panel or a specialized machine component. The assembly is composed of numerous parts, each labeled with a unique identifier (e.g., M1, M2, M3, etc.). The parts are arranged in a hierarchical manner, showing their relative positions and how they fit together. Key components include a base plate (M1), a central control unit (M2), and various sub-assemblies (e.g., M3, M4, M5, etc.). The diagram uses dashed lines to indicate the assembly path and alignment of the parts. The labels are distributed throughout the diagram, with some parts having multiple labels indicating different views or configurations. The overall layout is a top-down perspective, providing a clear view of the internal structure and the arrangement of the components.

Service Manual

Modification Report

Date. Sep. 30, 1975

No. MN-329

TAPE RECORDER


Model No. RS-283S

SUBJECT: Employment of back tension spring

In order to stabilize tape movement, a spring system is employed for applying back tension to the supply reel table.

MODIFICATION:

Ref. No.	Description	Part No.		Remarks
		Old	New	
M45	Reel Table Base Plate	QXK1424	QXK1735	
M130	Back Tension Spring	—	QBC1272	Added
M131	Washer	—	QBW2013	"

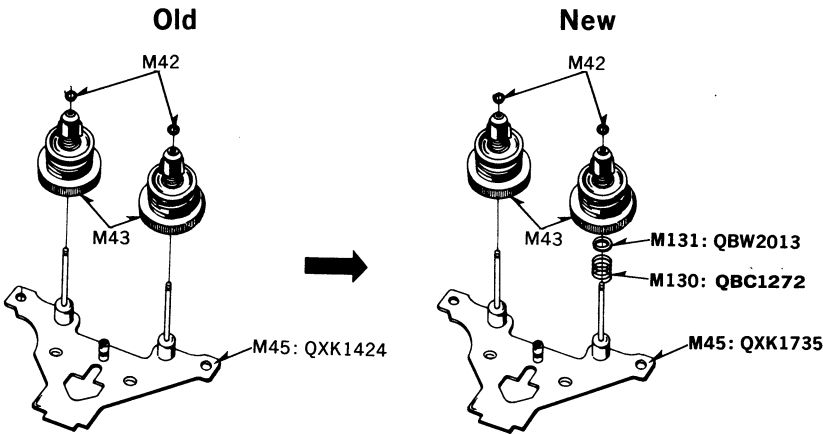

INTERCHANGEABILITY:

Old and new parts are not interchangeable individually, but when changing these parts together listed above, they are mutually interchangeable.

CHANGEOVER:

From the production of July, 1975 (From serial No. RG5...onward).