


Service Manual

Pioneer

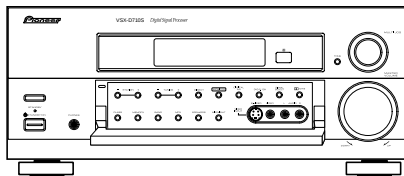

ORDER NO.
RRV2425

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D710S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	Remarks
	VSX-D710S		
KUXJI	○	AC120V	
KCXJI	○	AC120V	

CONTENTS

1. SAFETY INFORMATION	2	7. GENERAL INFORMATION	52
2. EXPLODED VIEWS AND PARTS LIST	3	7.1 DISASSEMBLY AND DIAGNOSIS	52
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	8	7.2 PARTS	54
4. PCB CONNECTION DIAGRAM	28	7.2.1 IC	54
5. PCB PARTS LIST	43	7.2.2 DISPLAY	57
6. ADJUSTMENT	51	8. PANEL FACILITIES AND SPECIFICATIONS	59

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
© **PIONEER CORPORATION** 2001

T – ZZK JAN. 2001 Printed in Japan

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

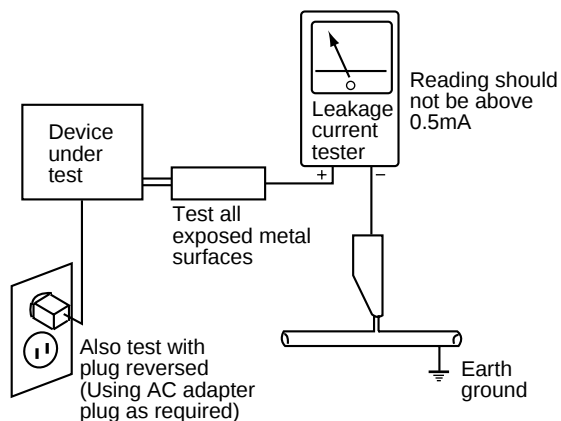

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.


The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 ● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 ● Screws adjacent to $\blacktriangledown$ mark on the product are used for disassembly.

2.1 PACKING

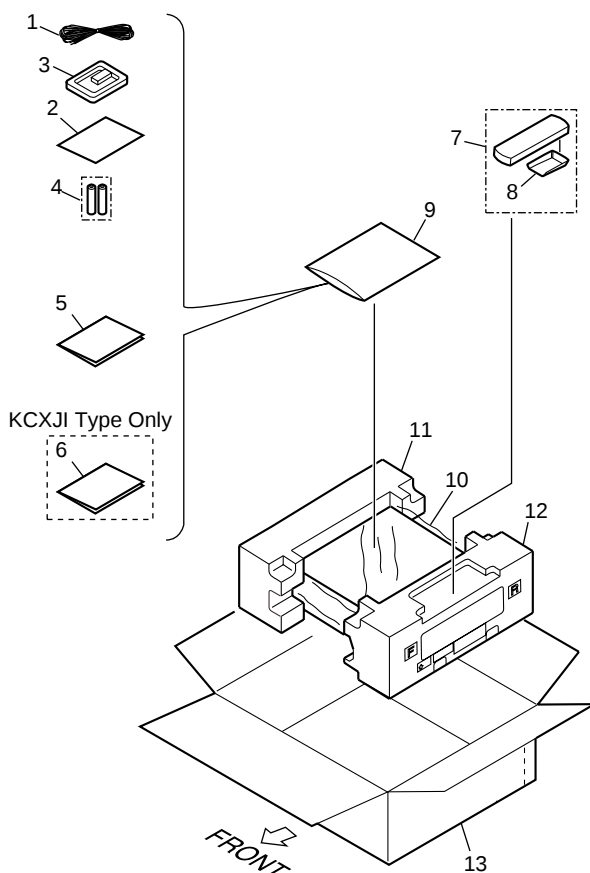

(1) PACKING PARTS LIST


Mark	No.	Description	Part No.
NSP	1	FM Wire Antenna	ADH7004
	2	Warranty Card	ARY7045
	3	AM Loop Antenna	ATB7009
NSP	4	Dry Cell Battery (R6P, AA)	VEM-013
	5	Operating Instructions (English)	XRB3004
	6	Operating Instructions (French)	See Contrast table (2)
	7	Remote Control Unit	XXD3028
	8	Battery Cover	XZA3002
NSP	9	Polyethylene Bag (0.03 × 230 × 340)	Z21-038
	10	Packing Sheet	AHG7069
	11	Left Pad R4	XHA3024
	12	Right Pad R4	XHA3025
	13	Packing Case 710/KC	XHD3146

(2) CONTRAST TABLE

VSX-D710S/KUXJI and KCXJI are constructed the same except for the following :

Mark	No.	Symbol and Description	Part No.		Remarks
			VSX-D710S /KUXJI	VSX-D710S /KCXJI	
	6	Operating Instructions (French)	Not used	XRC3030	


2.2 EXTERIOR SECTION

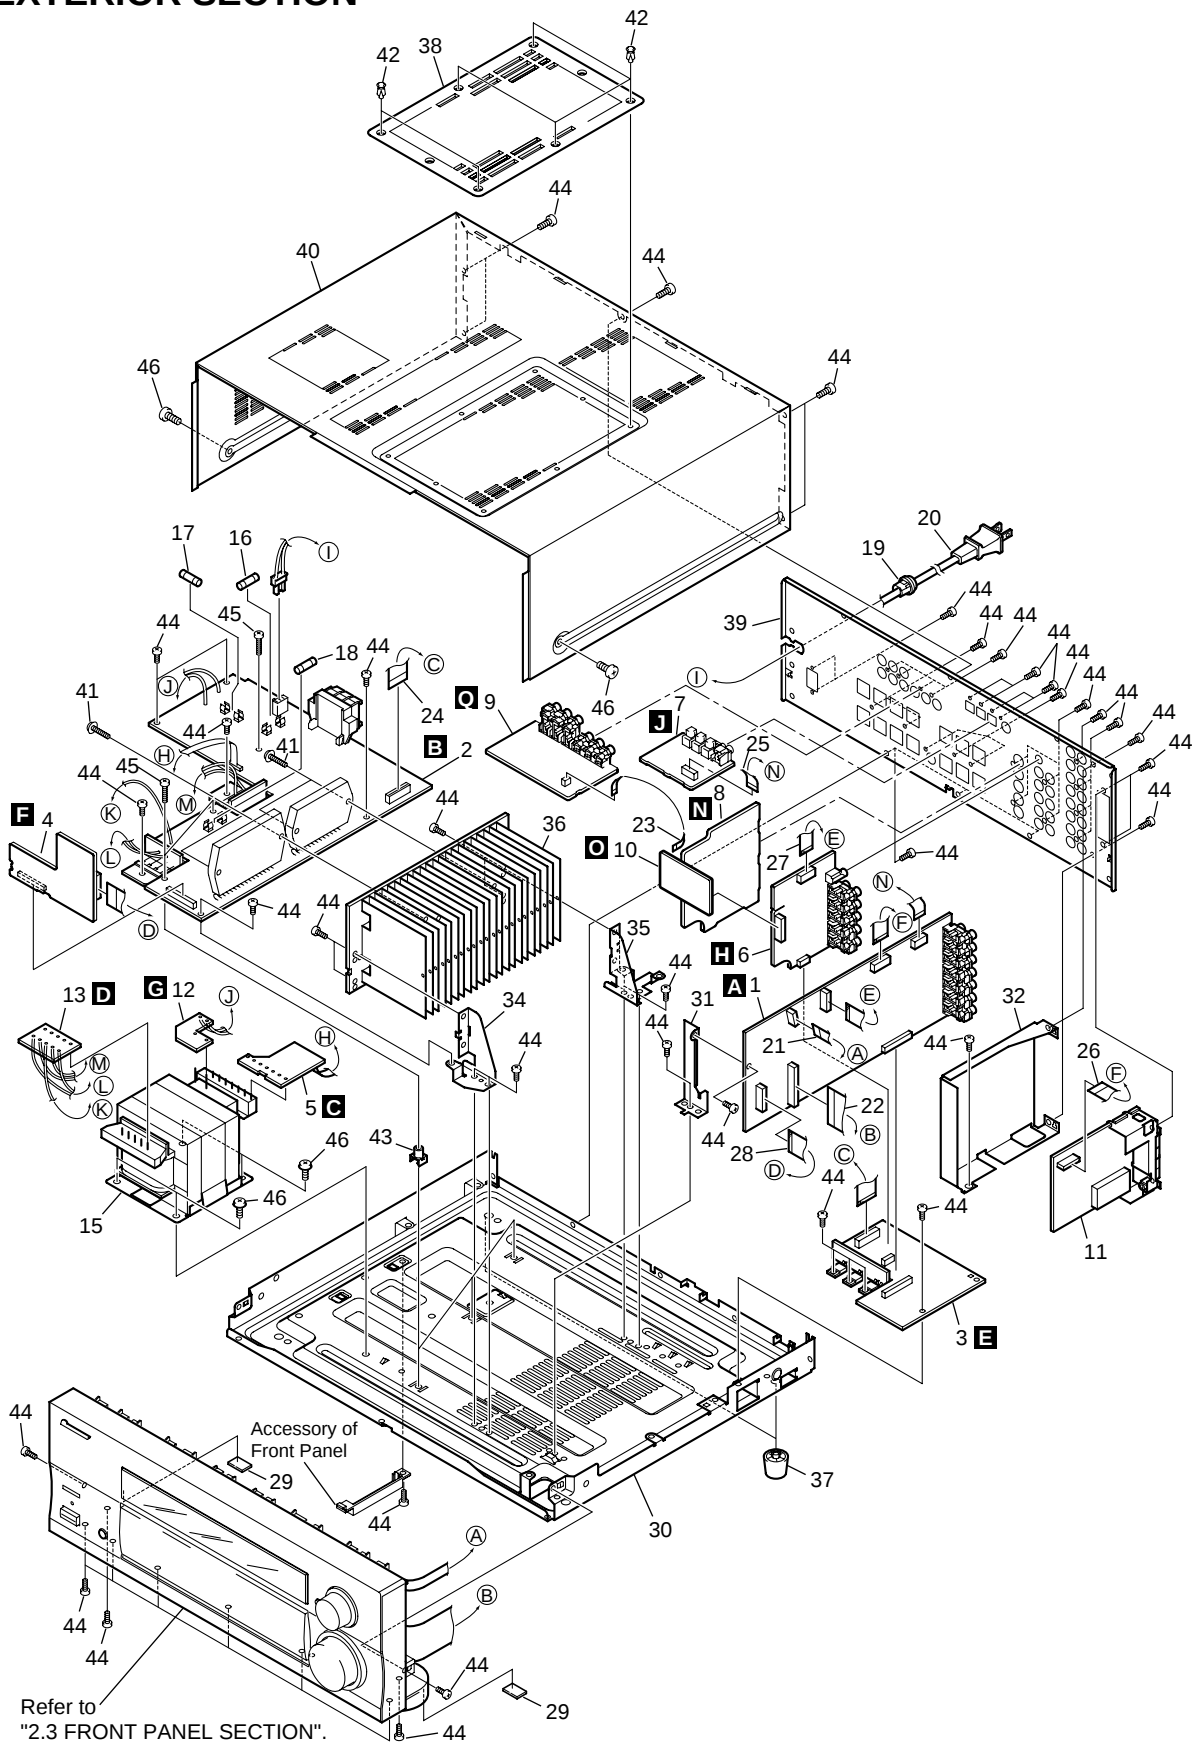

● EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	D.D & INPUT Assy	XWX3026		27	FFC (J33 : 14P/30V)	XDD3060
	2	AMP&PRIMARY Assy	XWZ3376		28	(D.D & INPUT CN104 ↔ VIDEO&6CH IN CN303)	
	3	REGULATOR Assy	XWZ3385		28	FFC (J35 : 17P/30V)	XDD3072
	4	AMP INPUT Assy	XWZ3388			(D.D & INPUT CN106 ↔ AMP INPUT CN254)	
	5	TRANS 2 Assy	XWZ3391	NSP	29	Rubber Sheet	AEB1111
	6	VIDEO&6CH IN Assy	XWZ3334		30	Under Base 409	ANA7094
	7	DIGITAL IN Assy	XWZ3361		31	PCB Angle	ANG7253
	8	S. VIDEO Assy	XWZ3362		32	Shield R3	ANG7277
	9	COMPONENT Assy	XWZ3365	NSP	33	Heat Sink Assy 0.4	ANH7112
	10	BOARD TO BOARD Assy	XWZ3370		34	Heat Sink Angle F	ANG7251
					35	Heat Sink Angle R	ANG7252
NSP	11	FM/AM TUNER Unit	AXX7046	NSP	36	Heat Sink 0.4	ANH7109
NSP	12	TRANS 1 Assy	XWZ3390		37	Foot Assy	REC1263
	13	TRANS 3 Assy	XWZ3392		38	Top Cover R4UL	XME3004
	14	•••••			39	Rear Panel 710/KC	XNC3076
△	15	Power Transformer (AC120V)	XTS3043		40	Bonnet Case	XZN3111
△	16	Fuse (FU1 : 10A)	REK1087		41	Screw	ABA7043
△	17	Fuse (FU2 : 8A)	REK1086		42	Push Rivet	AEC7025
△	18	Fuse (FU701 : 10A)	REK1087		43	PCB Mold	AMR2533
	19	Strain Relief	CM-22C		44	Screw	BBZ30P080FMC
△	20	AC Power Cord	VDG1075		45	Screw	BBZ30P200FMC
	21	FFC (J32 : 19P/30V)	XDD3054		46	Screw	FBT40P080FZK
		(D.D & INPUT CN103 ↔ FRONT CN401)					
	22	FFC (J31 : 31P/30V)	XDD3055				
		(D.D & INPUT CN102 ↔ FRONT CN402)					
	23	FFC (J38 : 5P/30V)	XDD3056				
		(BOARD TO BOARD CN392 ↔ COMPONENT CN5501)					
	24	FFC (J36 : 22P/30V)	XDD3057				
		(REGULATOR CN801 ↔ AMP&PRIMARY CN53)					
	25	FFC (J37 : 6P/30V)	XDD3058				
		(D.D & INPUT CN1501 ↔ DIGITAL IN CN1901)					
	26	FFC (J34 : 13P/30V)	XDD3059				
		(D.D & INPUT CN105 ↔ FM/AM TUNER UNIT)					

2.3 FRONT PANEL SECTION

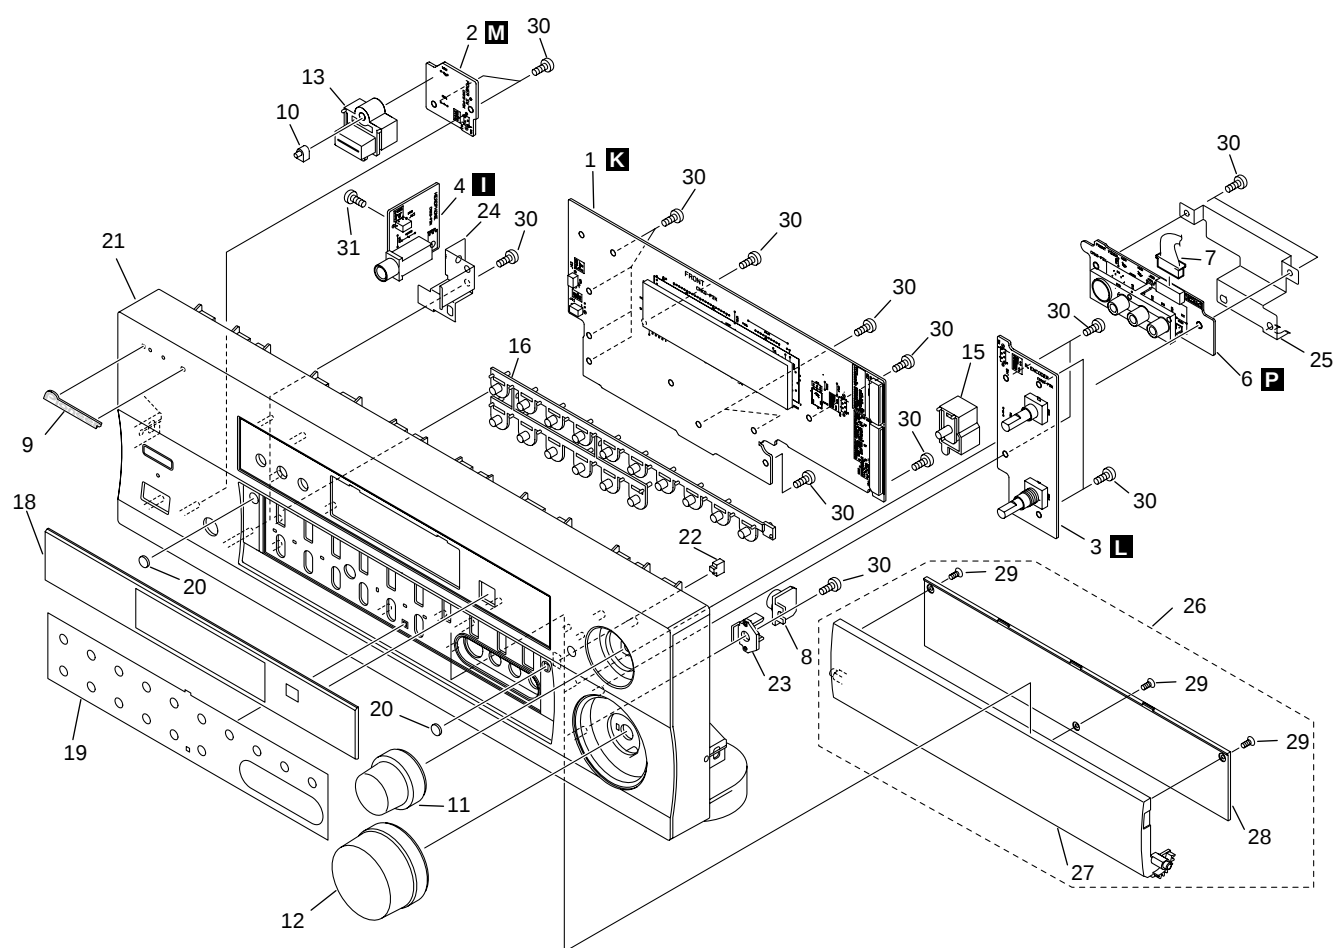


● FRONT PANEL SECTION PARTS LIST



Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	FRONT Assy	XWZ3340		16	Door Button R4B	XAD3070
	2	POWER SW Assy	XWZ3352		17		
	3	R. ENCODER Assy	XWZ3353		18	Display Panel O/KC	XAK3172
	4	H.P. Assy	XWZ3356		19	Button Cover R4UL	XAK3252
	5				20	Cushion R4B	XED3001
NSP	6	FRONT VIDEO Assy	XWZ3359		21	Front Panel 710/KC	XMB3032
	7	8P Shield Cable	XDX3012		22	Magnet 35	AMF7007
	8	Damper Assy	AXA7052		23	Holder L R4	XMR3016
	9	Name Plate	PAM1776		24	Earth Plate A R4	XNG3044
	10	LED Lens	PNW2019		25	Earth Plate B R4	XNG3045
	11	Select Knob R4B	XAB3008	NSP	26	Door Assy R4B	XXG3068
	12	Volume Knob R4B	XAB3011		27	Door R4B	XAK3173
	13	Power Button R4B	XAD3062		28	Door Cover R4B	XAK3175
	14				29	Screw	XBA3001
	15	Jog Button R4B	XAD3065		30	Screw	PPZ30P080FMC
					31	Screw	BBZ30P080FMC

This page was intentionally left blank.


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

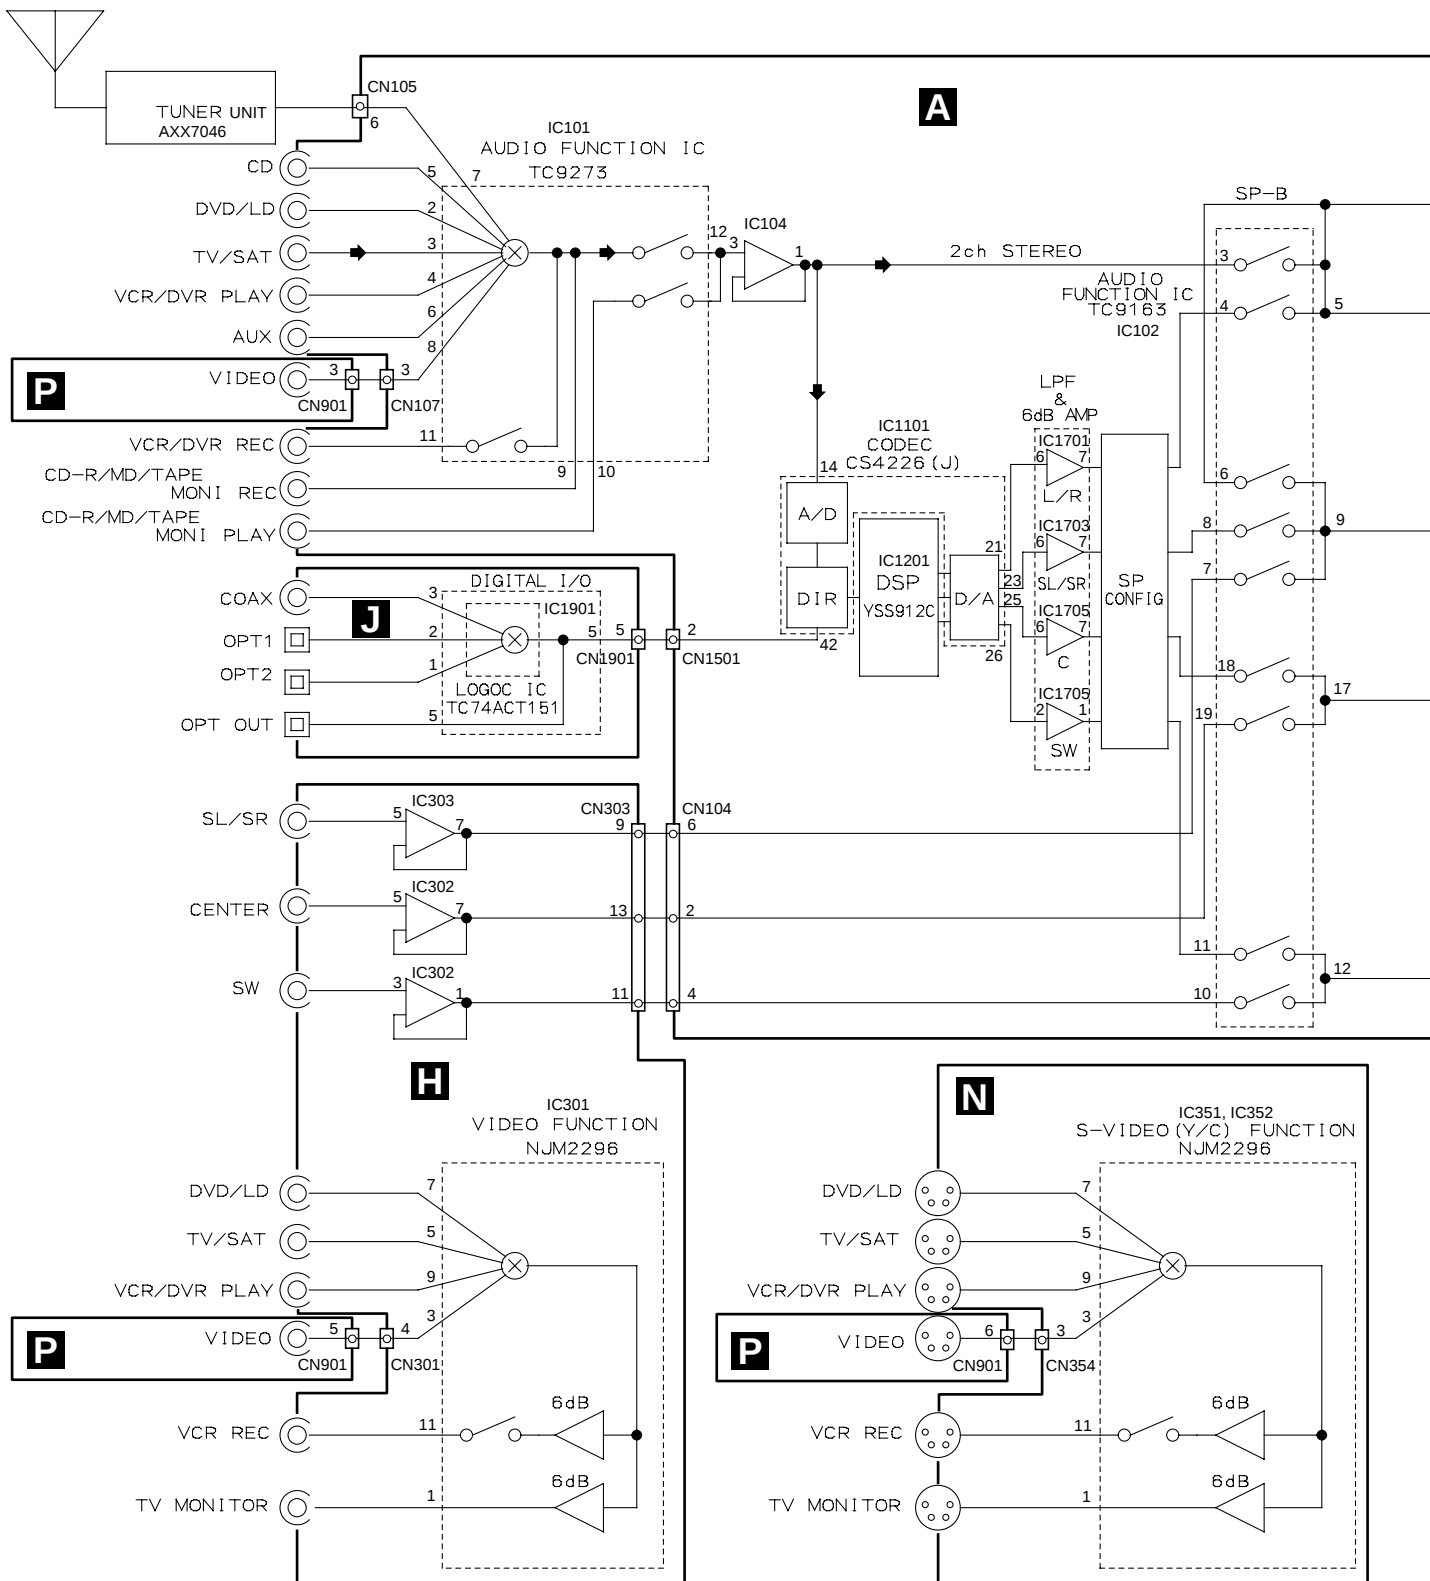


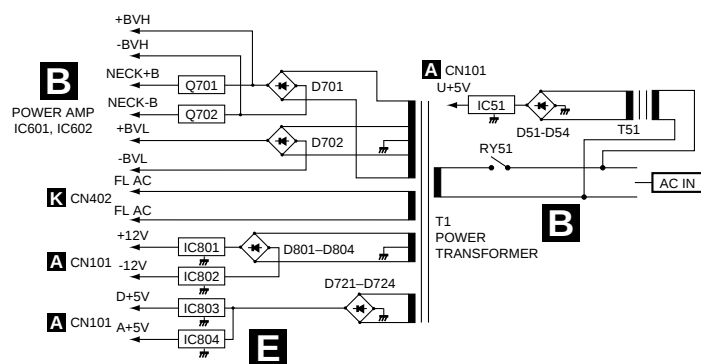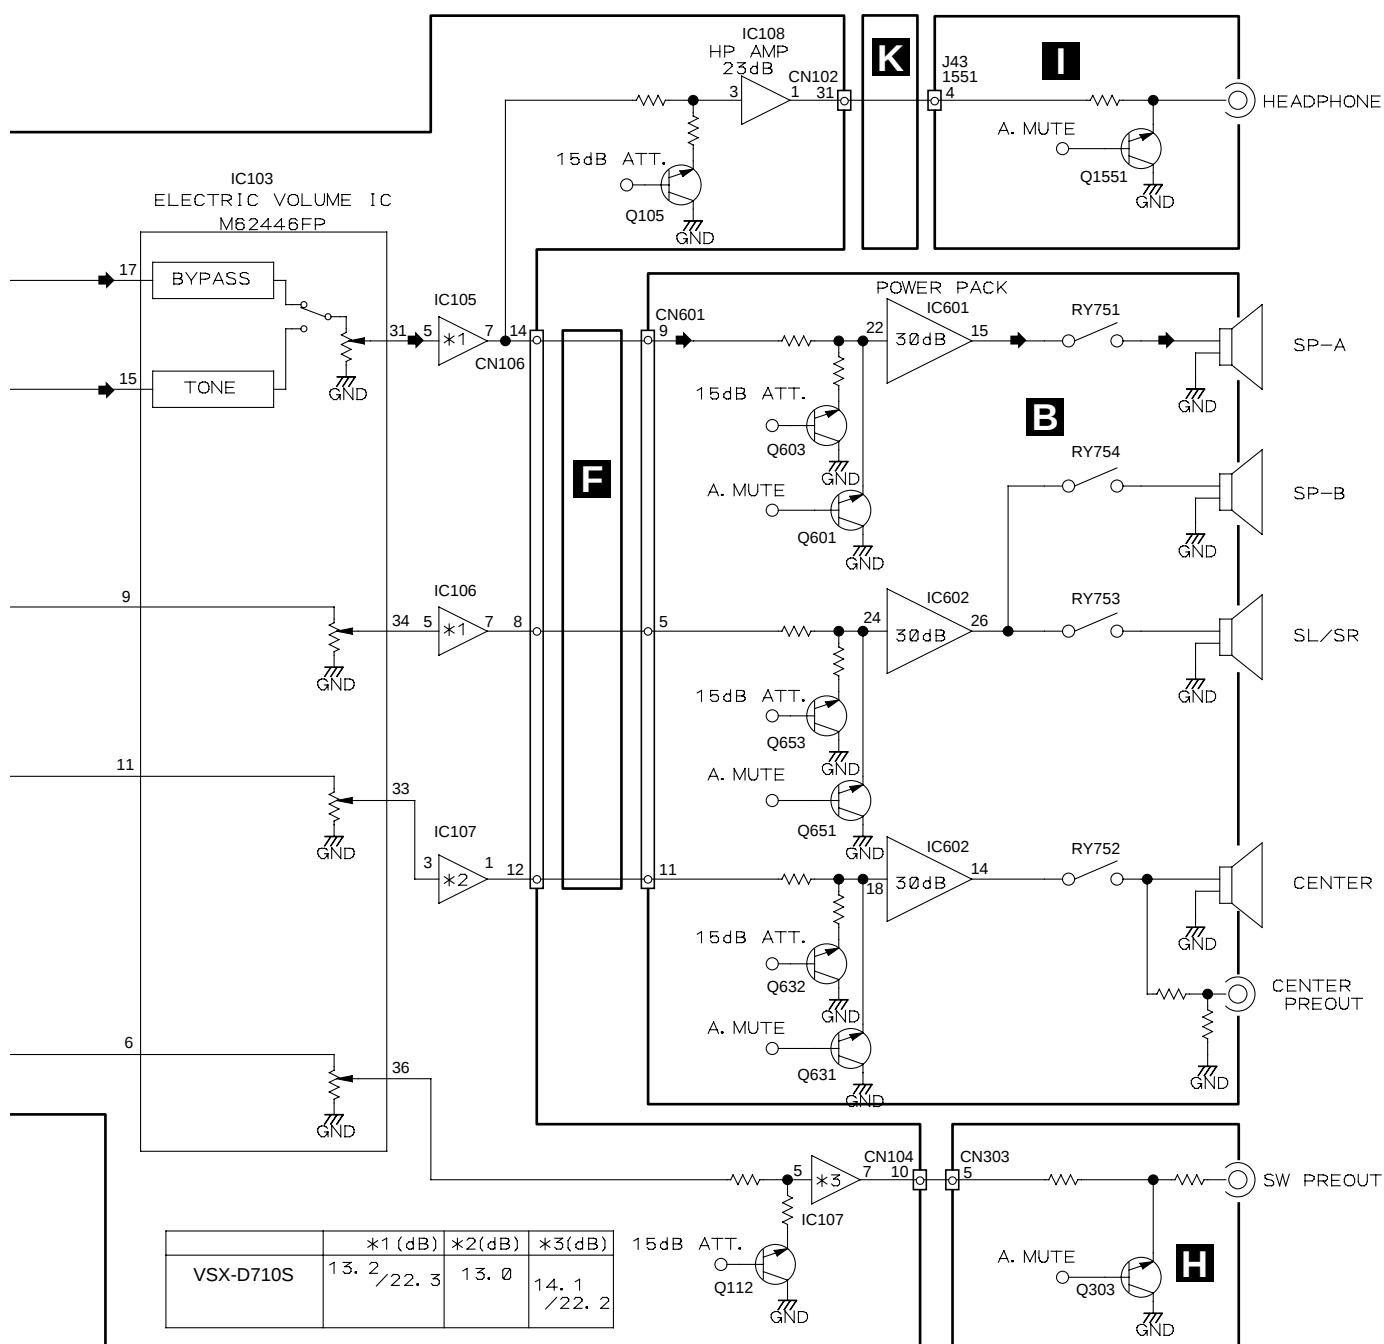

3.2 OVERALL WIRING CONNECTION DIAGRAM

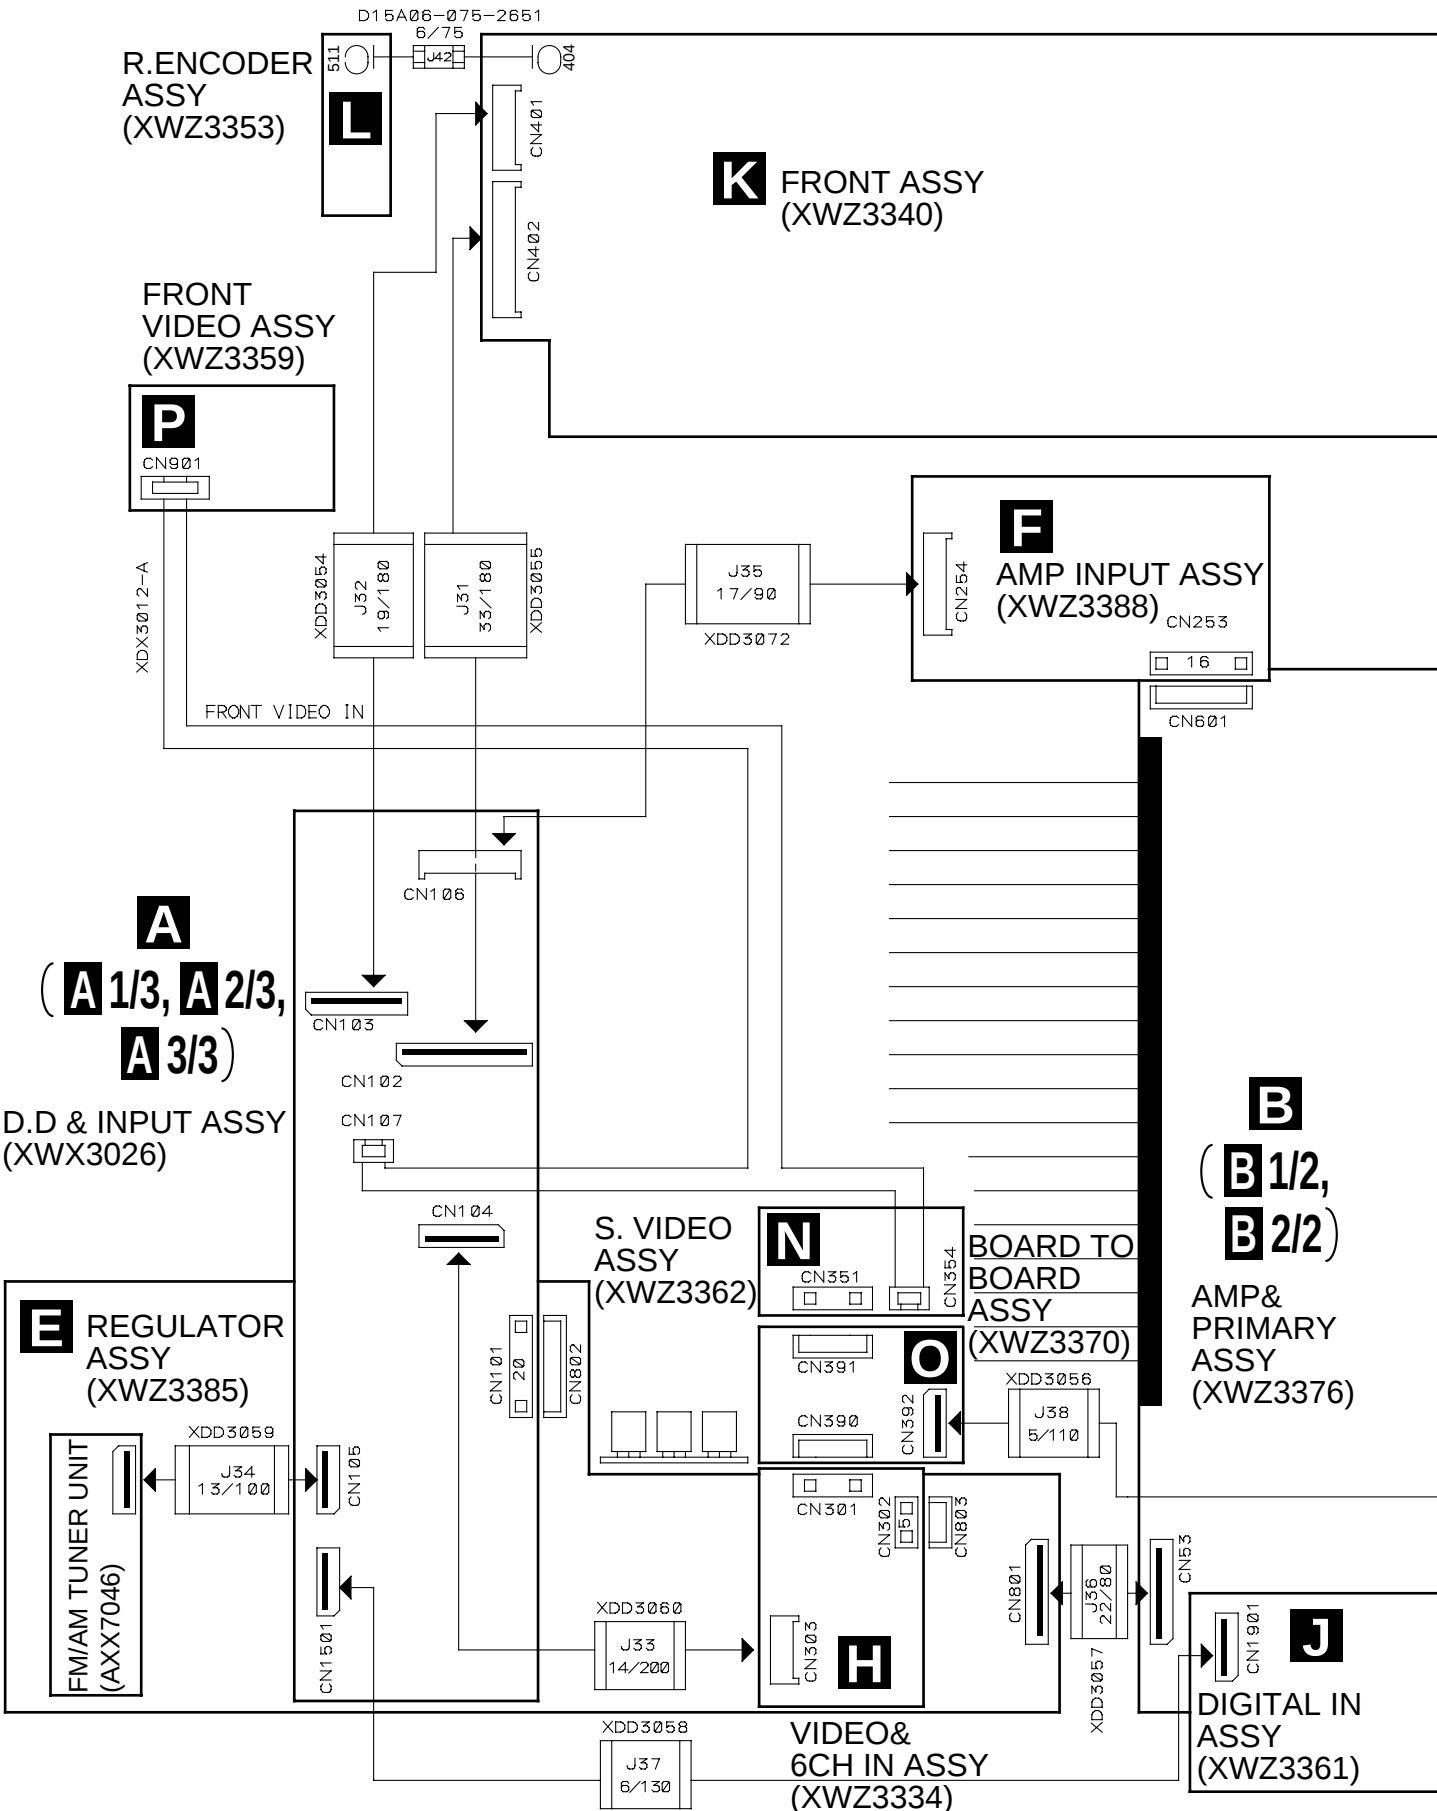



Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

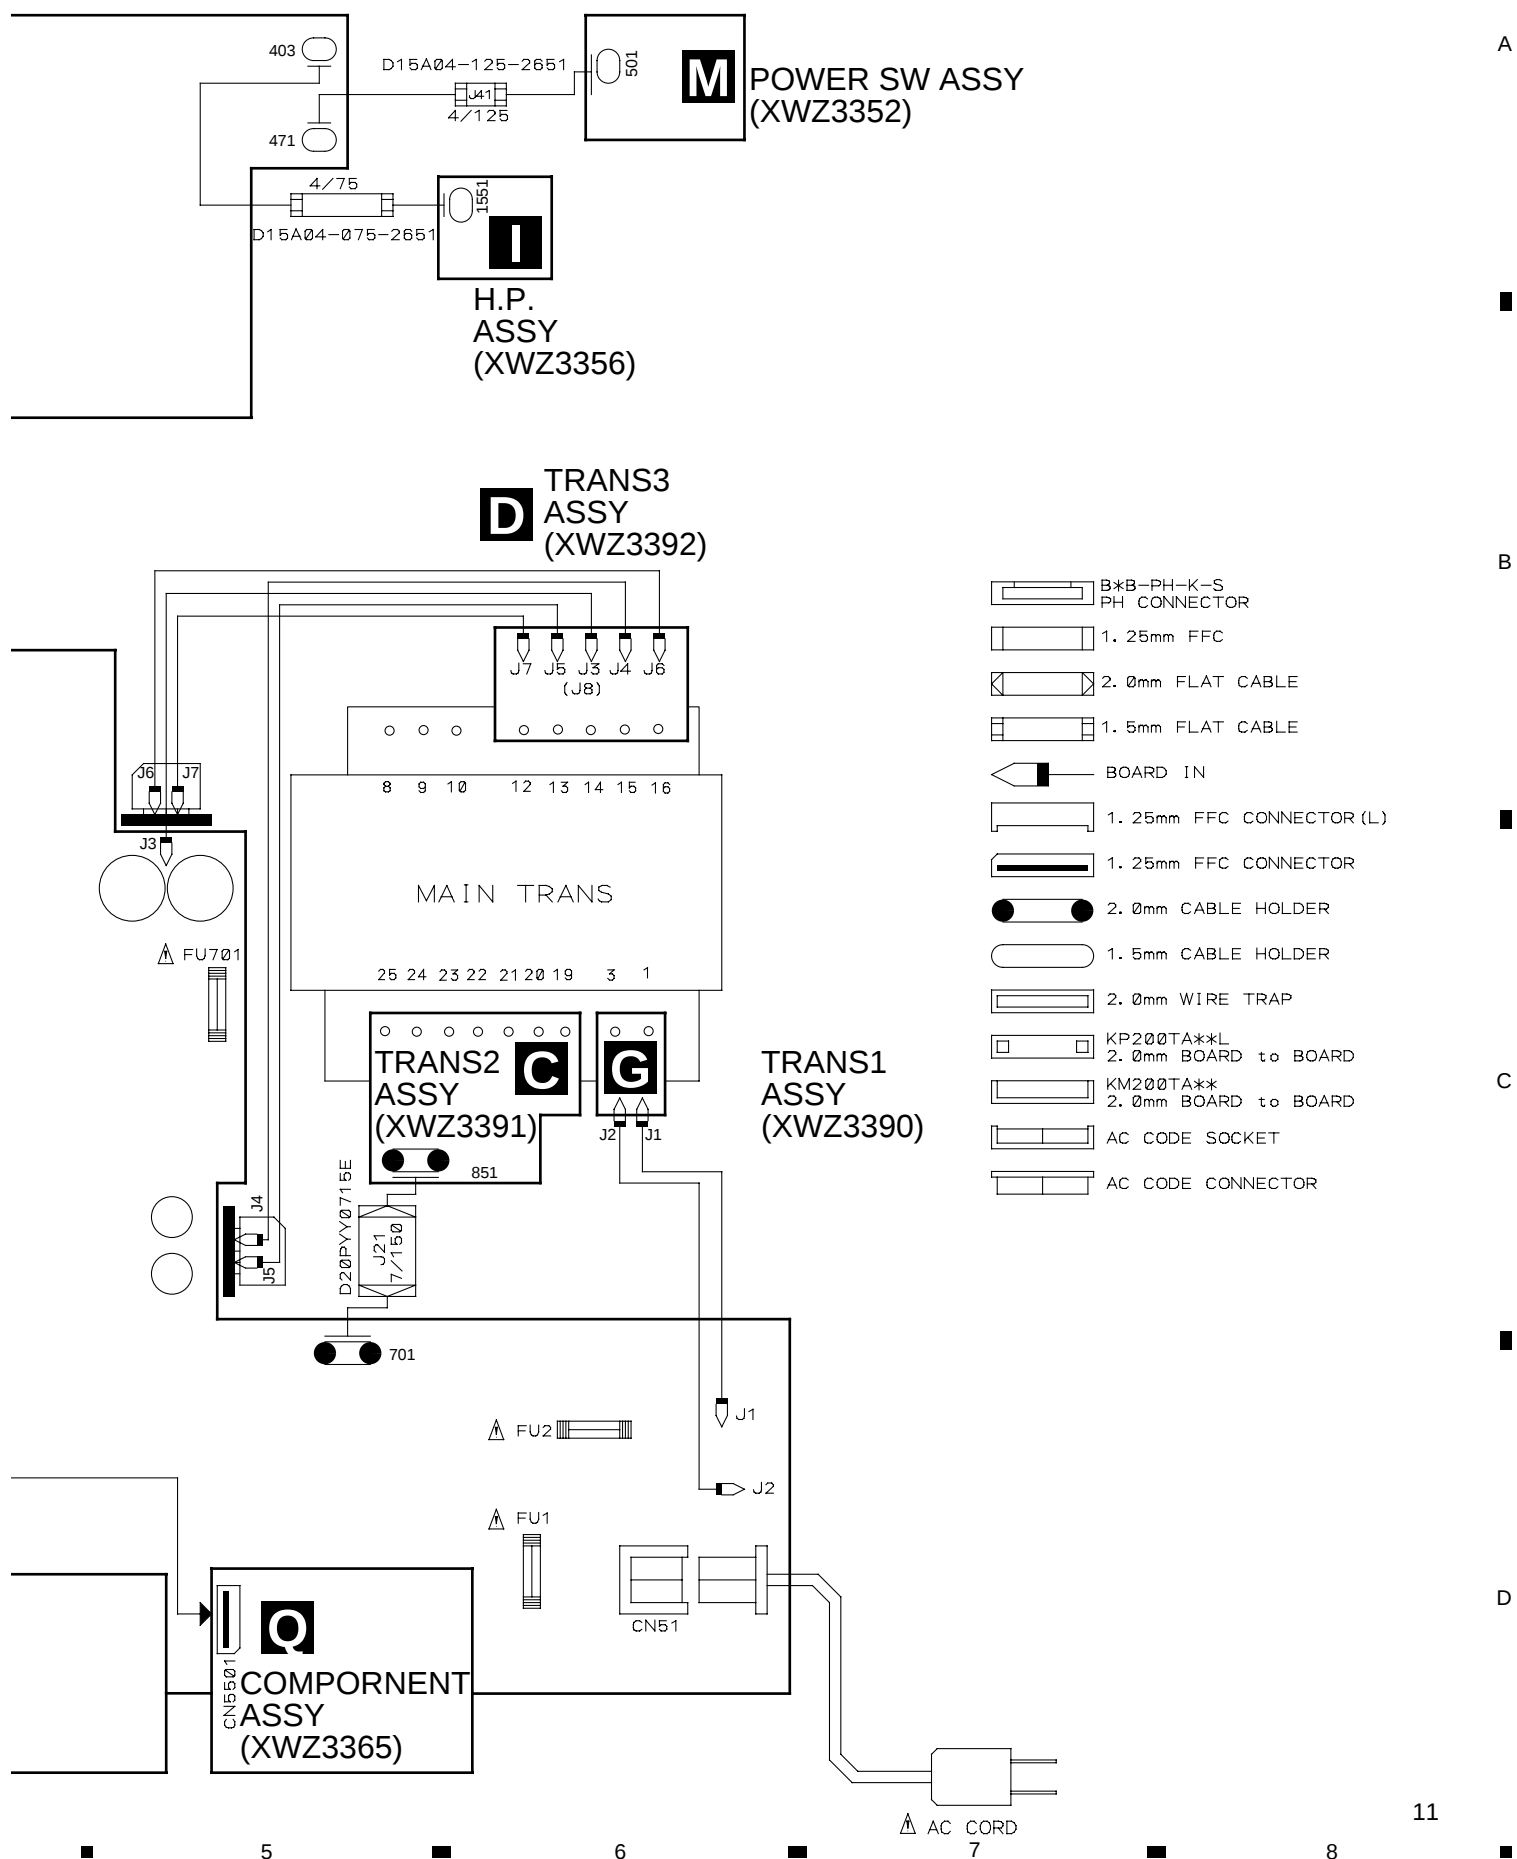


3.3 D.D & INPUT (1/3) ASSY

A 1/3 D.D & INPUT ASSY (XWX3026)

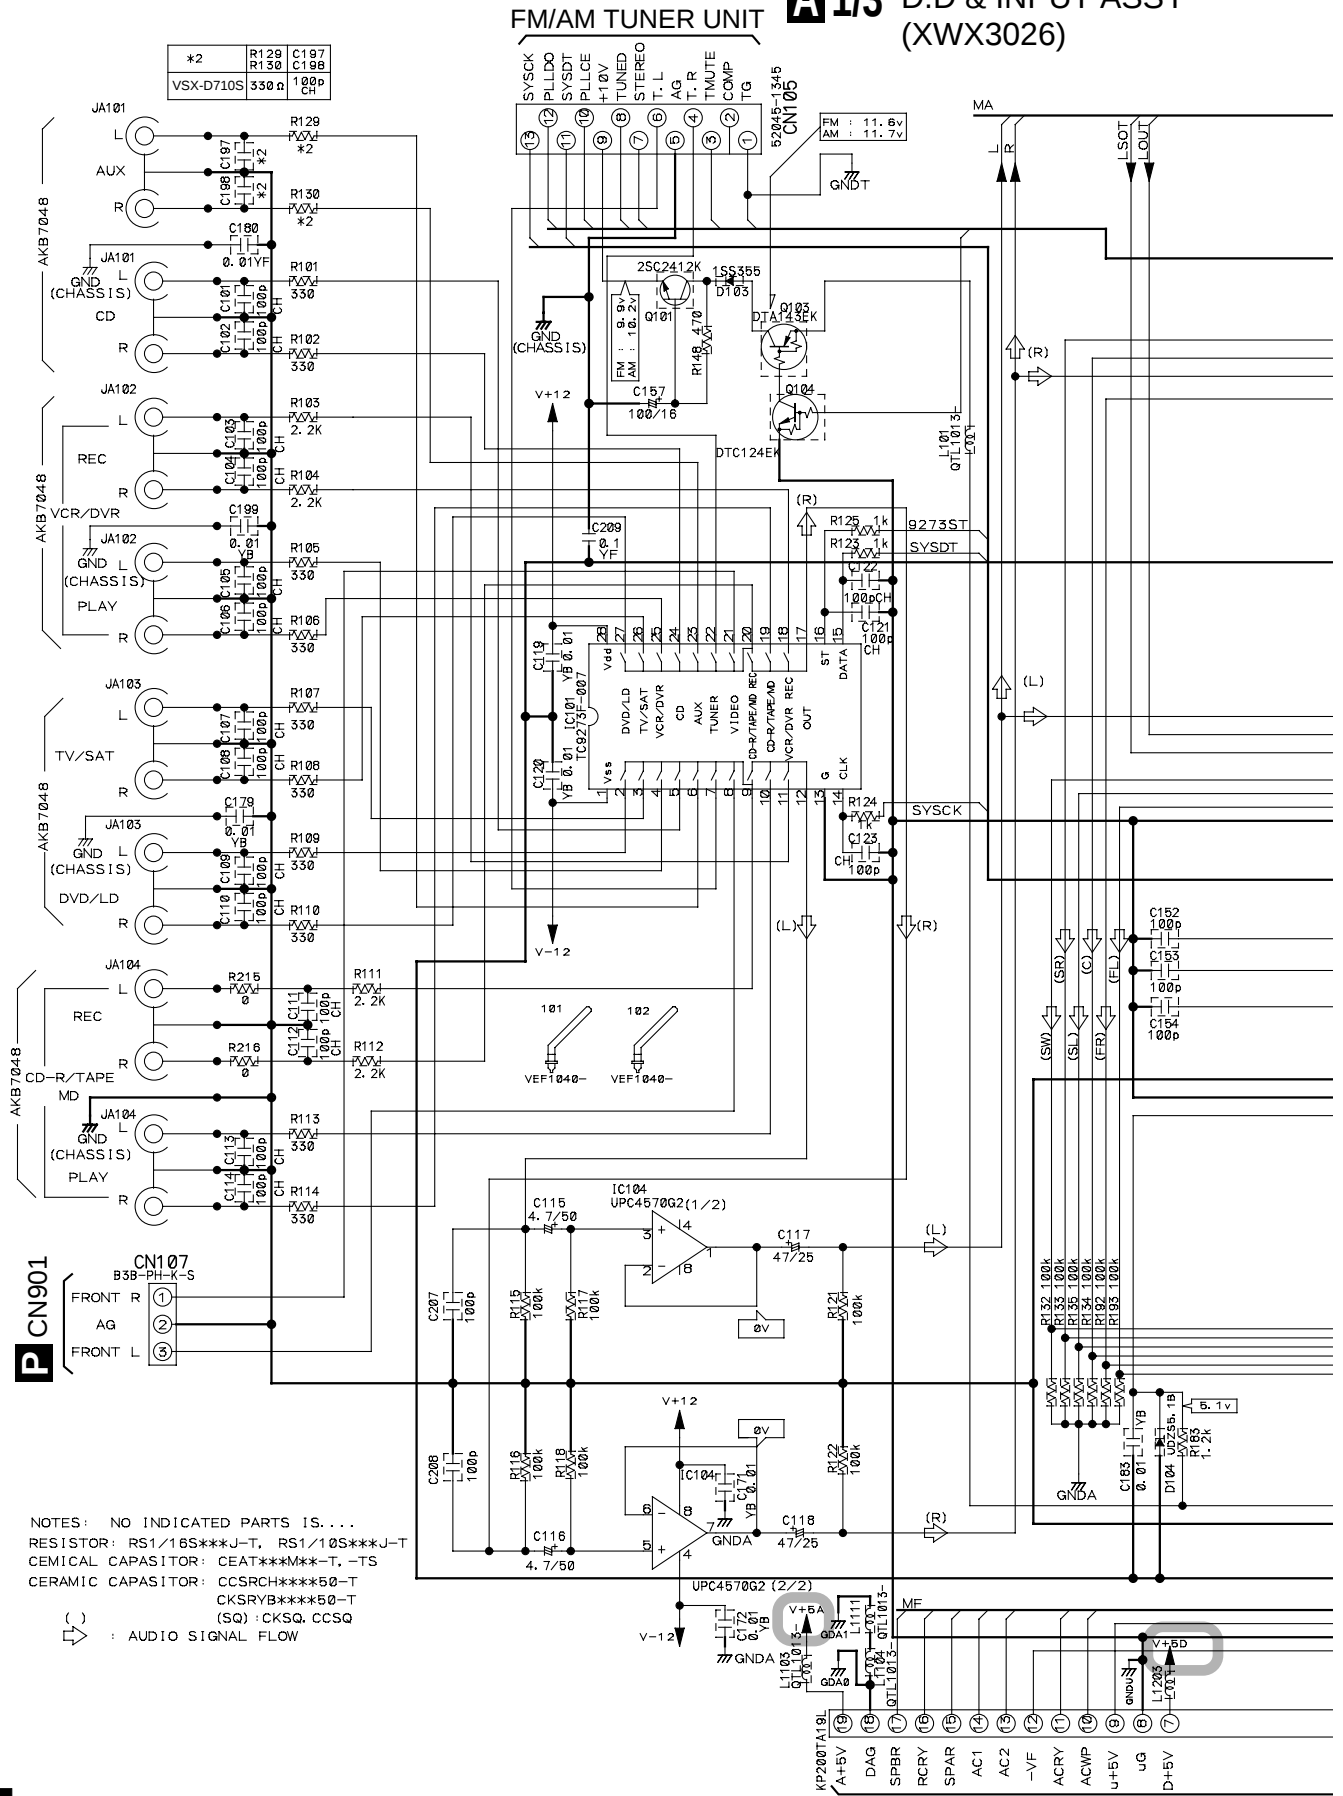


H CN303


3.4 D.D & INPUT ASSY (2/3)

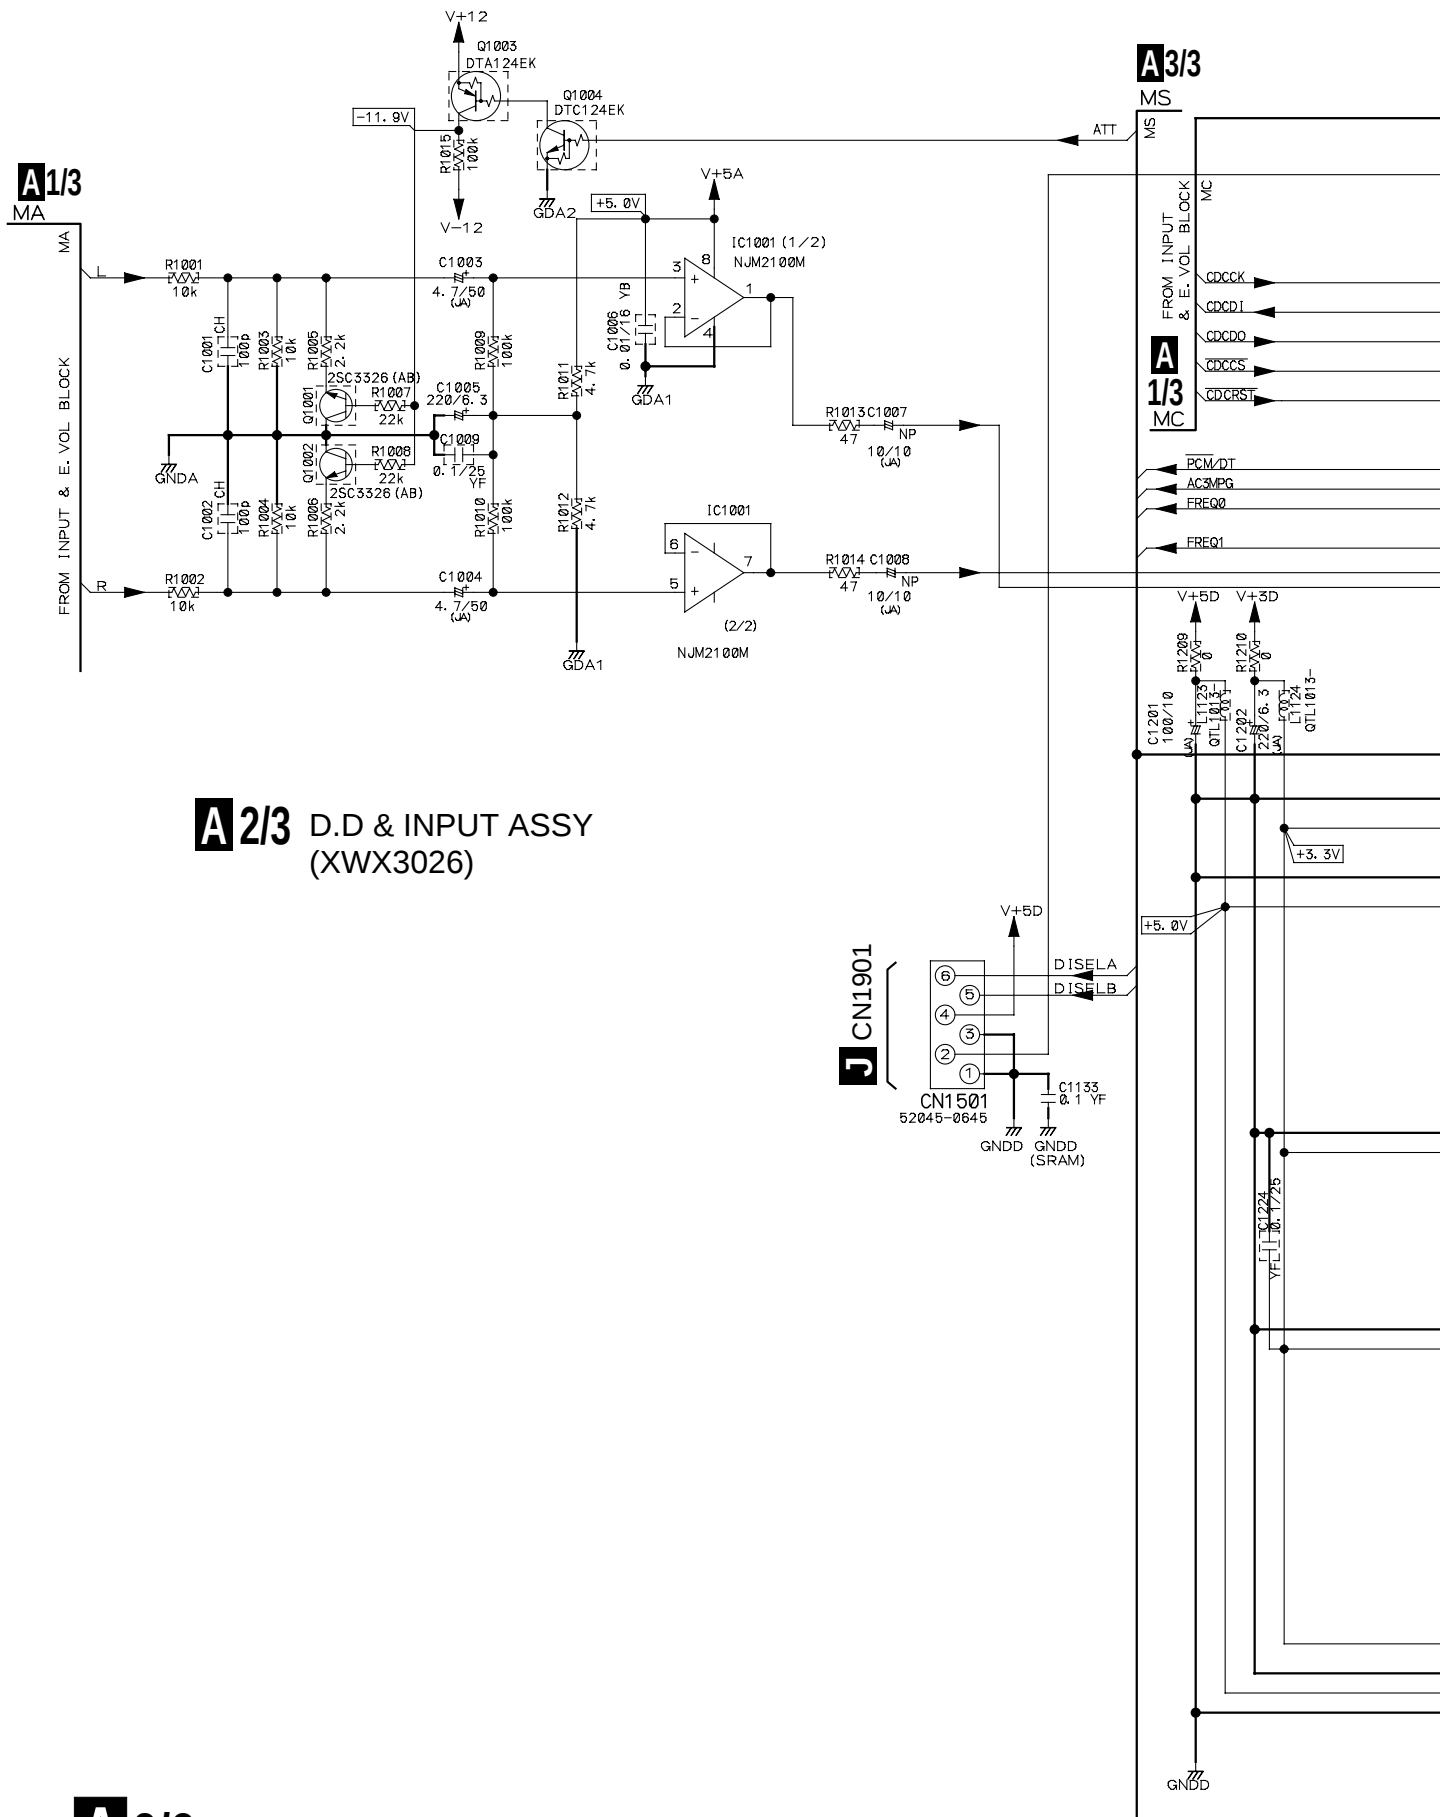

 : The power supply is shown with the marked box.

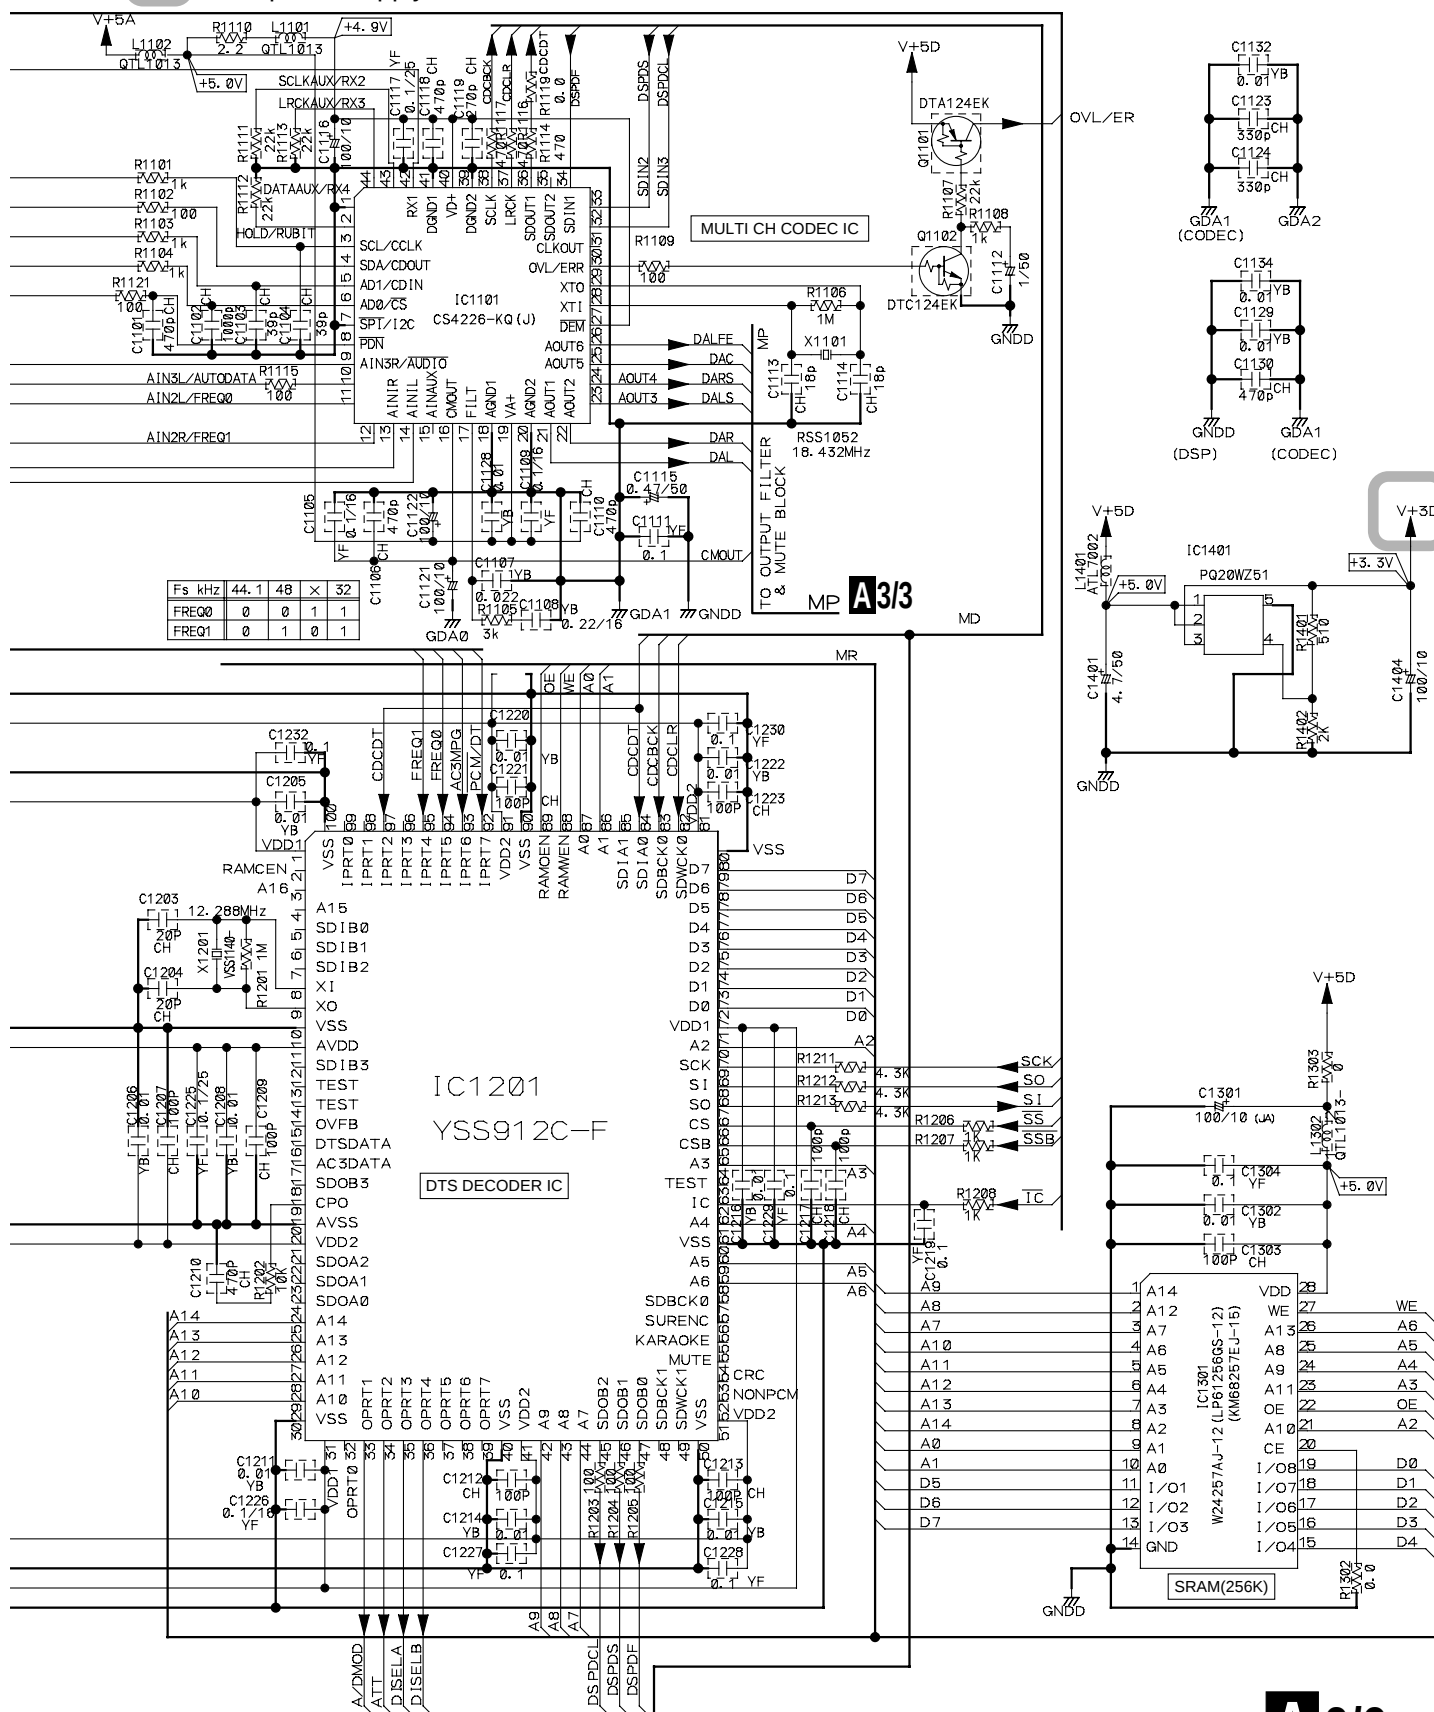

A 3/3 D.D & INPUT ASSY
(XWX3026)

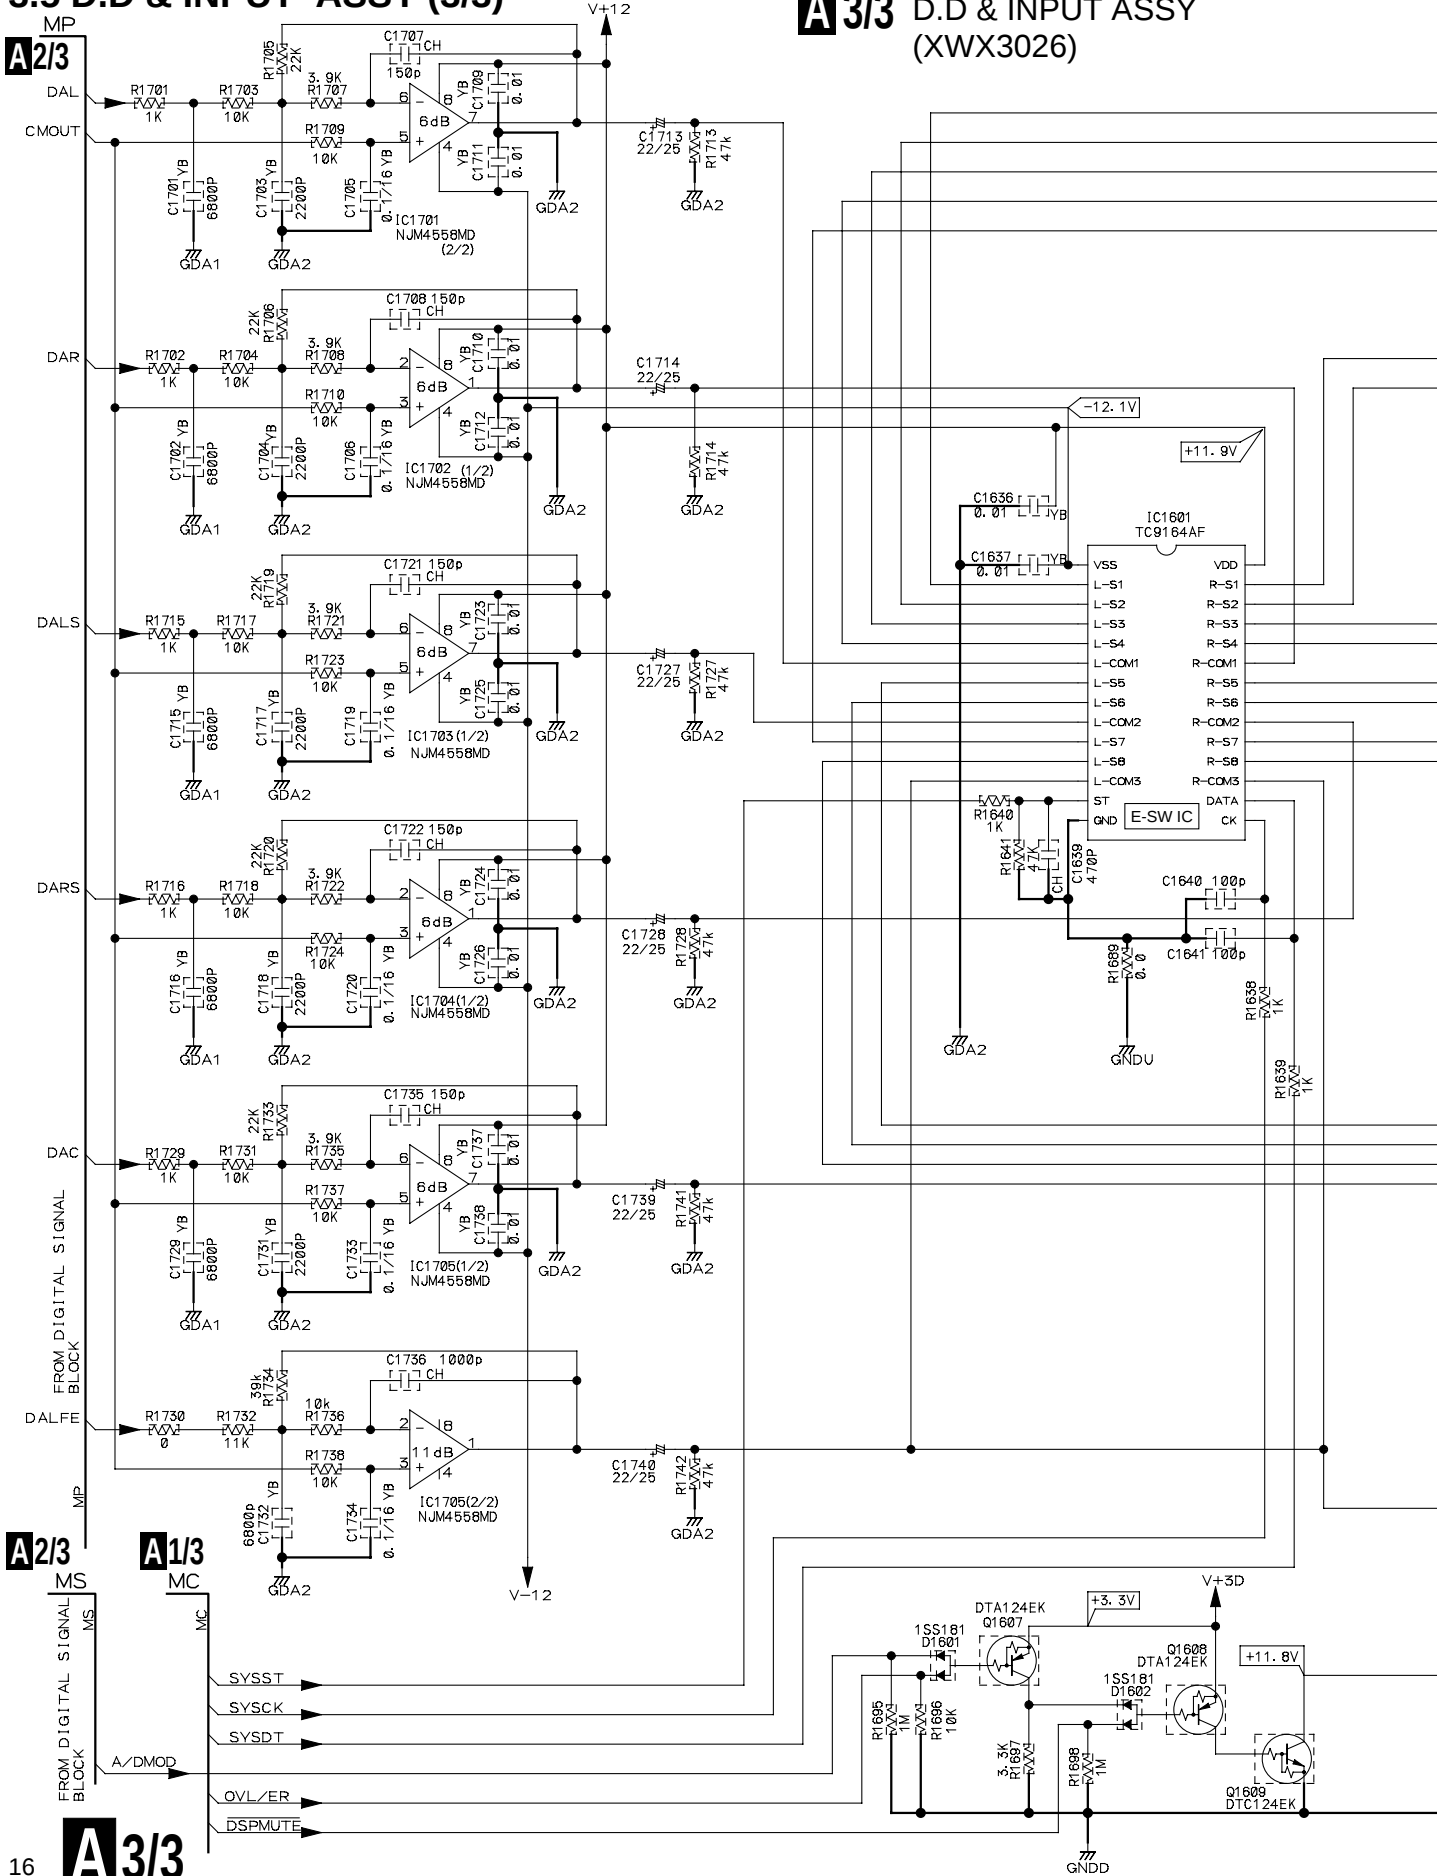




3.6 AMP&PRIMARY (1/2), TRANS2 and TRANS3 ASSYS

B 1/2 AMP&PRIMARY ASSY (XWZ3376)

E CN253

- CN601 KM200TA16
- SB ①
- AG ②
- SR ③
- AG ④
- SL ⑤
- AG ⑥
- FR ⑦
- AG ⑧
- FL ⑨
- AG ⑩
- C ⑪
- AG ⑫
- A. MUTE ⑬
- ATT. ⑭
- OL ⑮
- DC DET. ⑯
- NECK ⑰
- UG ⑱

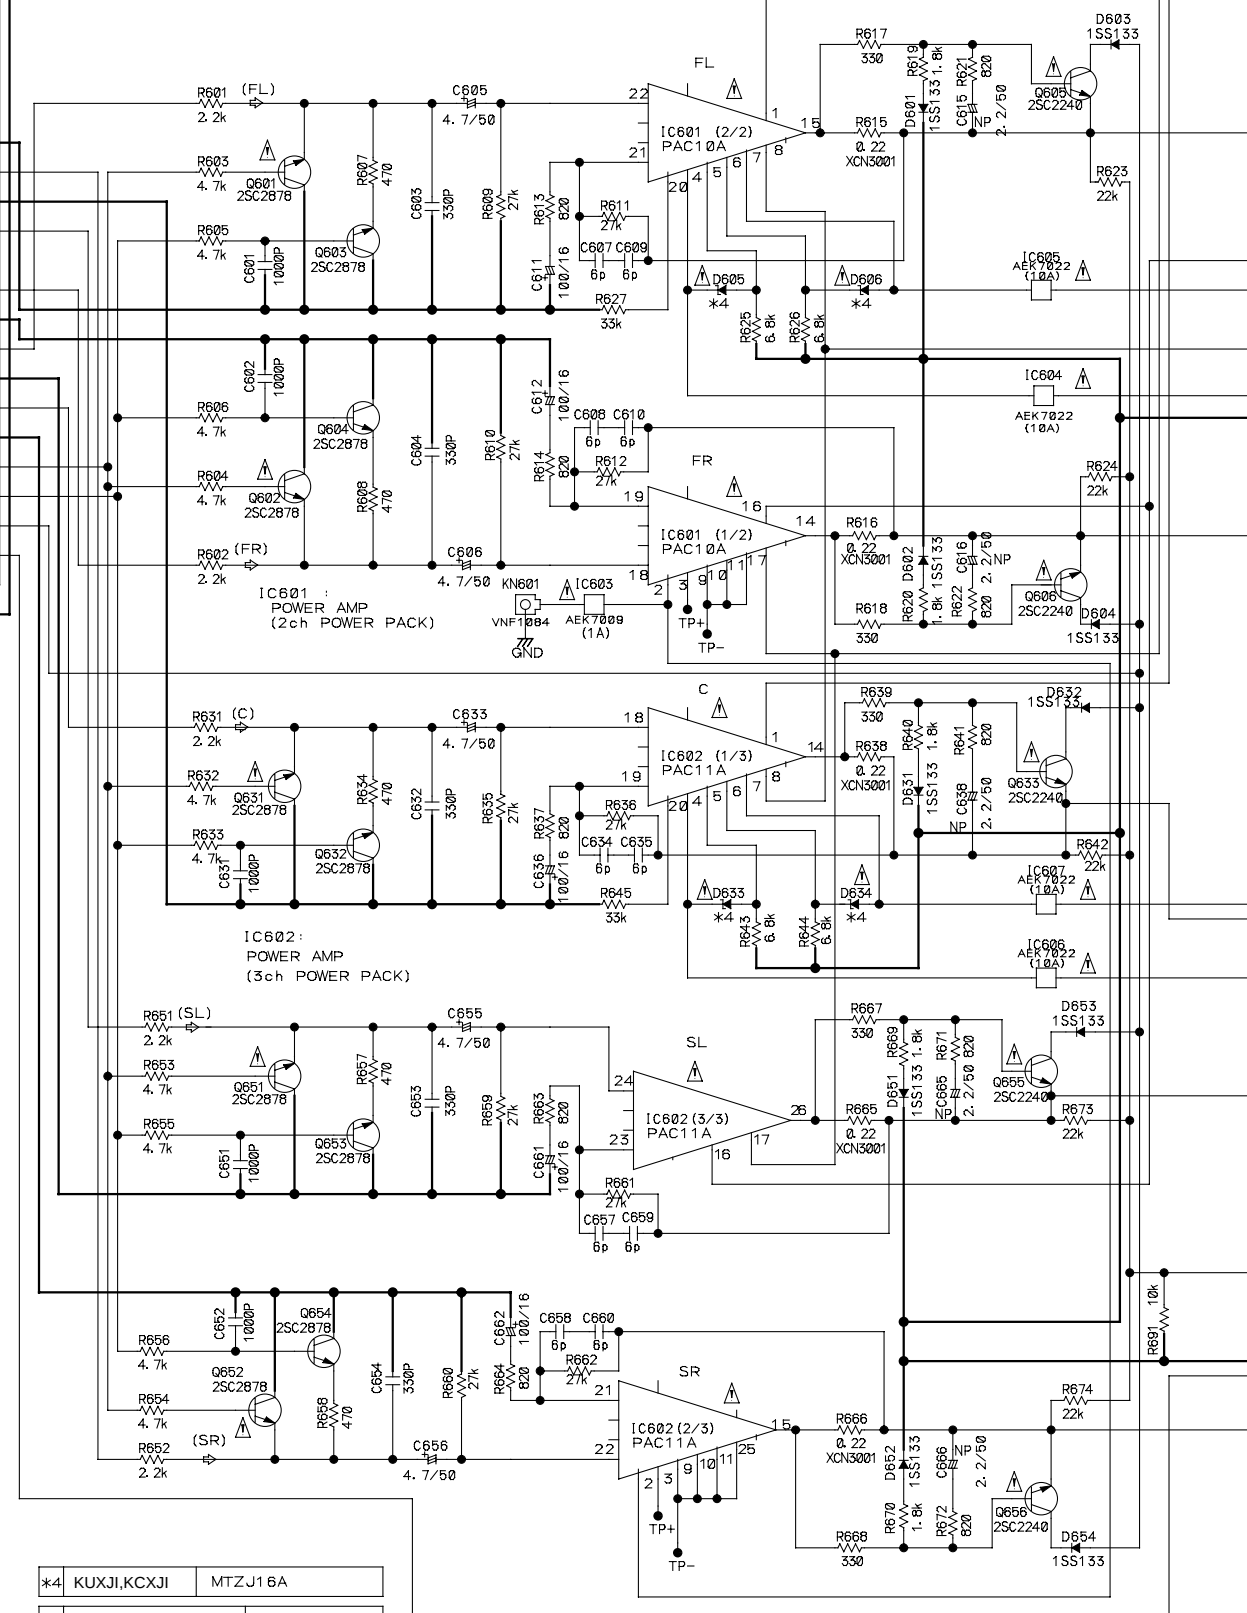

*4	KUXJI, KCXJI	MTZJ15A
*5	KUXJI, KCXJI	0.1 YA

*6	KUXJI, KCXJI	R711
		3.9k/2W




3.7 AMP&PRIMARY (2/2), REGULATOR, AMP INPUT and TRANS1 ASSYS


A

B

C

D

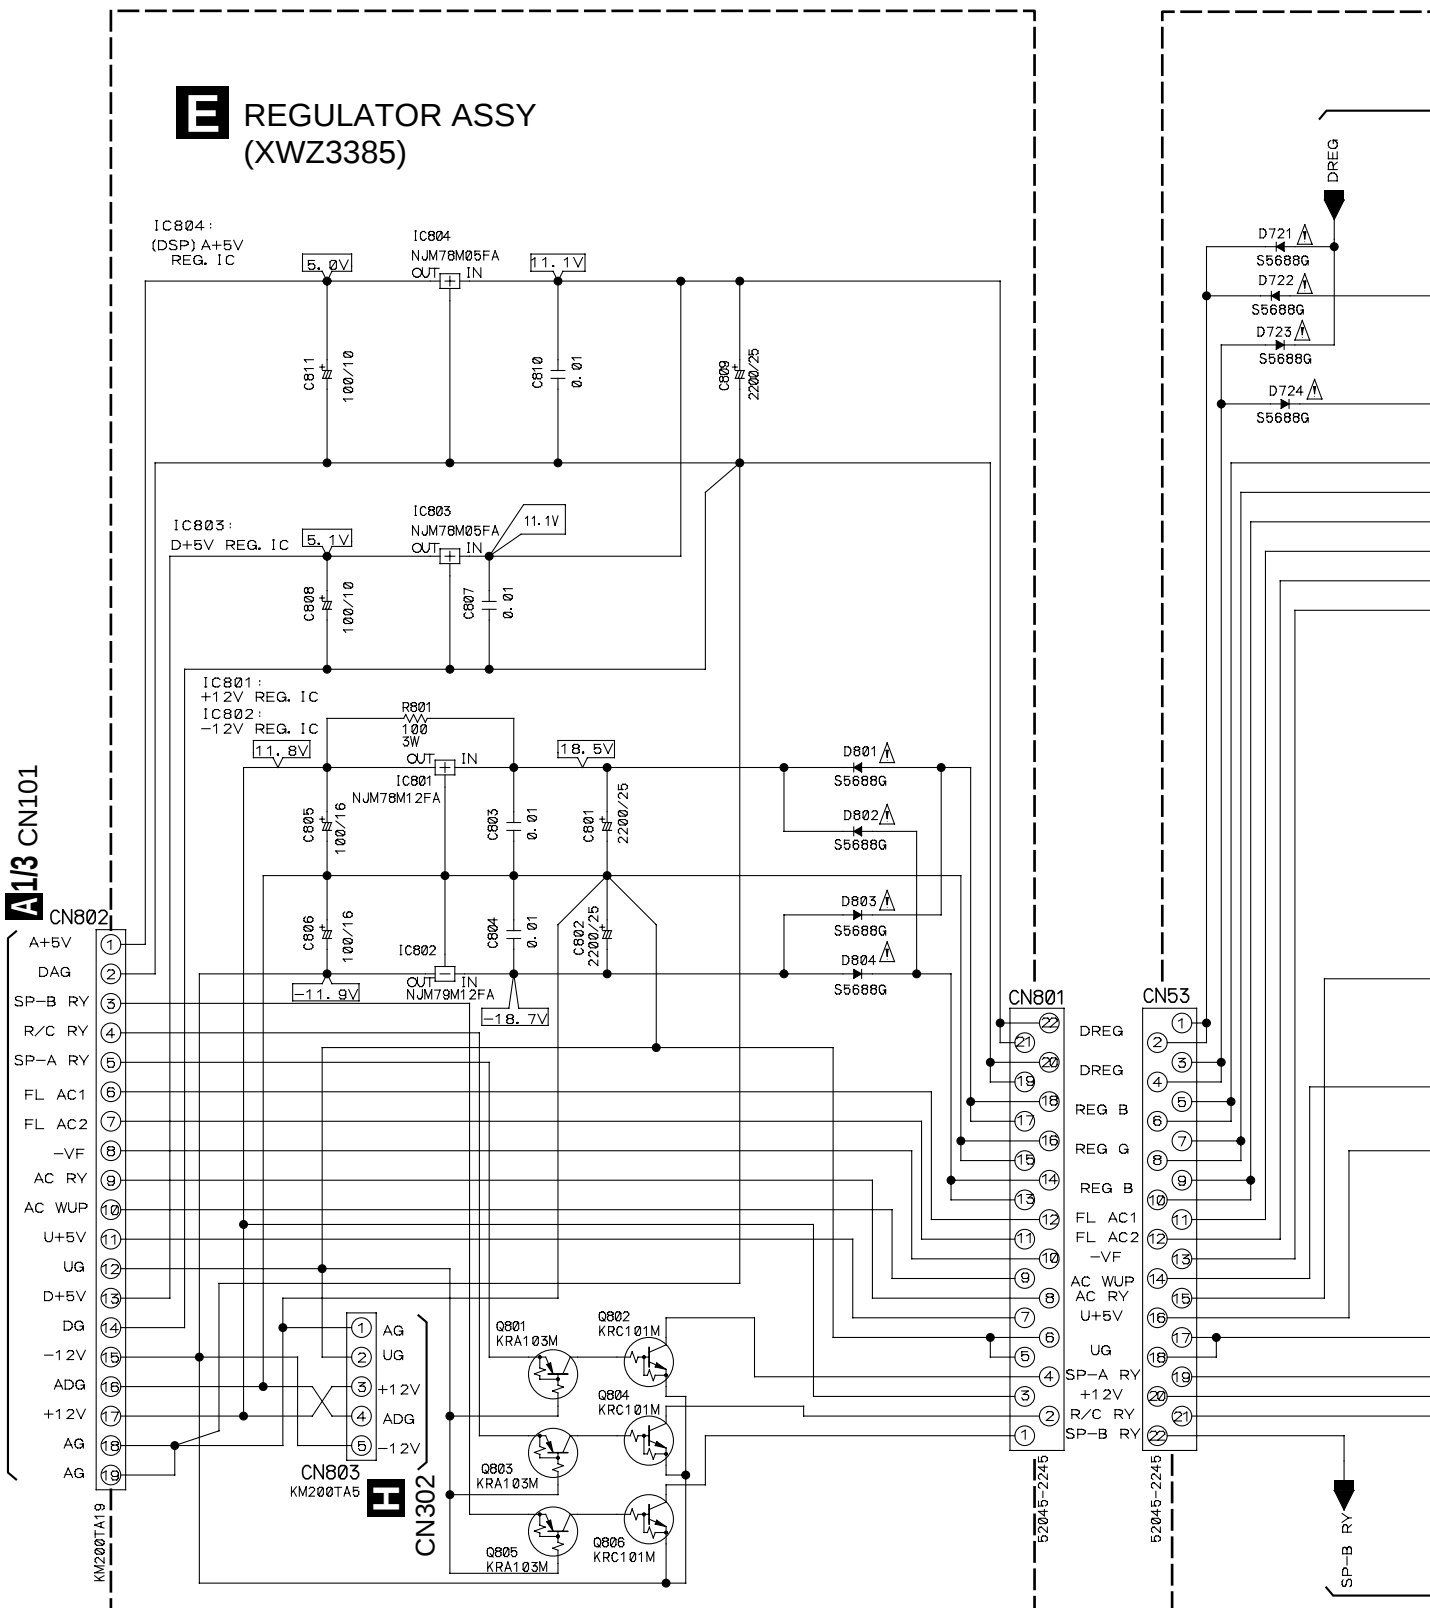

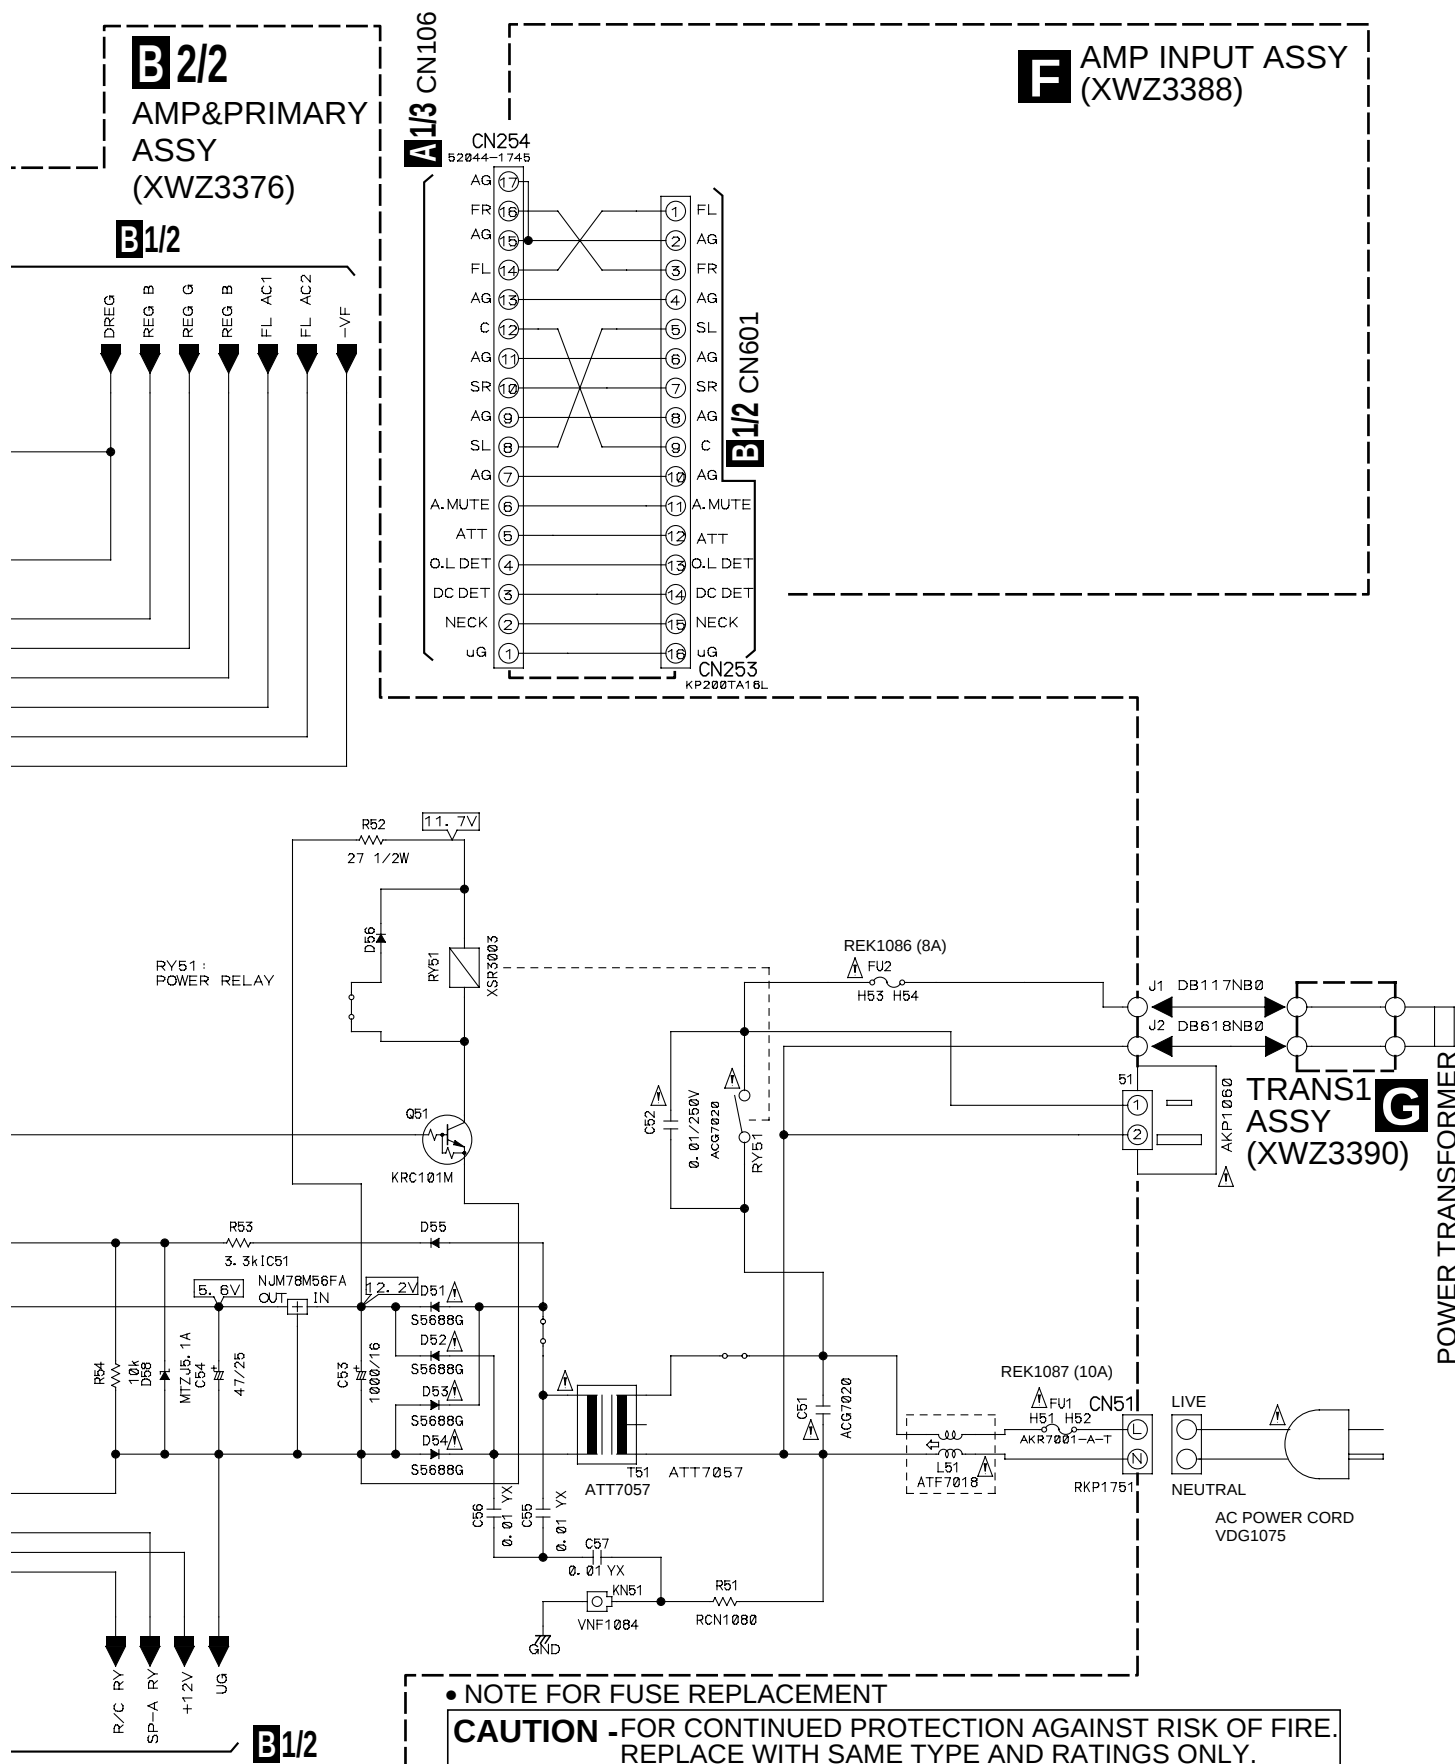

3.8 VIDEO&6CH IN, H. P. and DIGITAL IN ASSYS


VIDEO&6CH IN ASSY (XWZ3334)

A

B

C

D

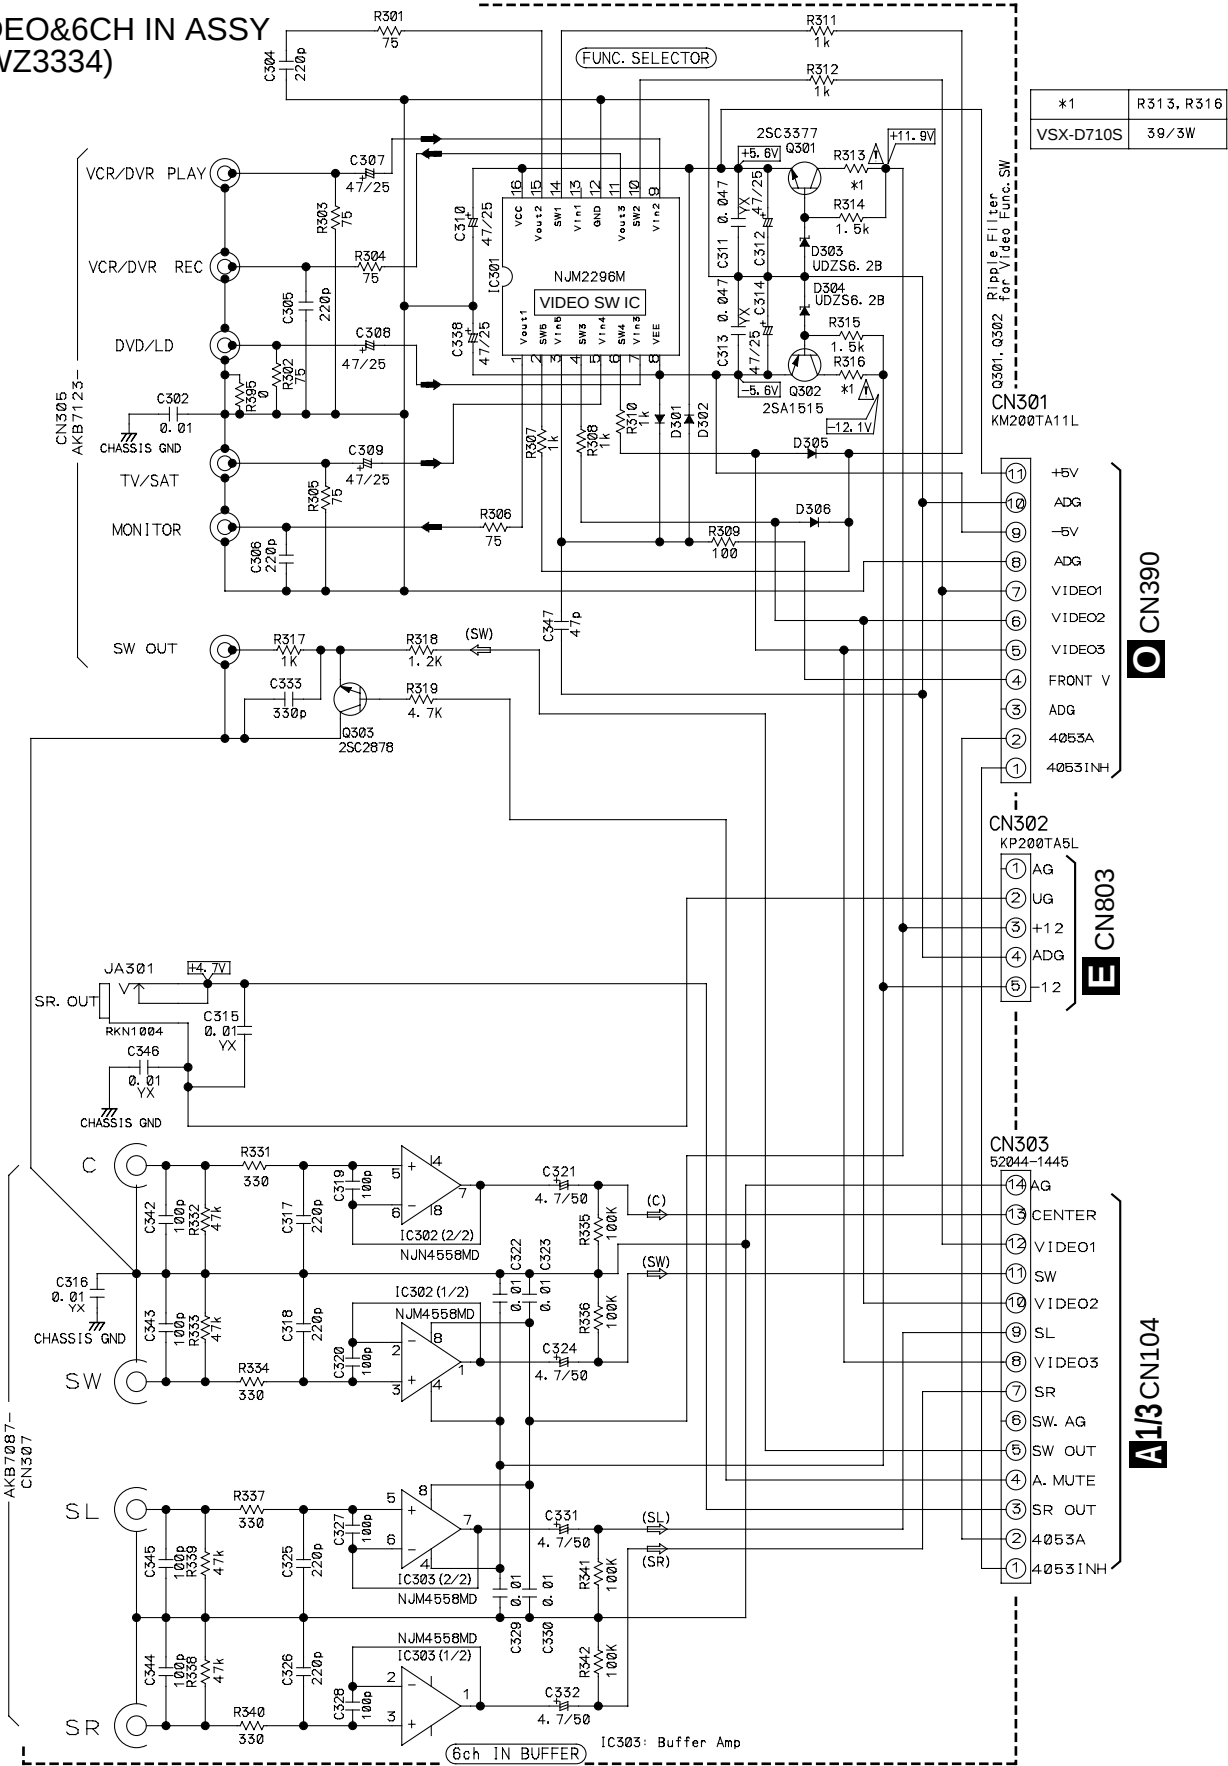


3.9 FRONT, R. ENCODER and POWER SW ASSYS


A

B

C

D

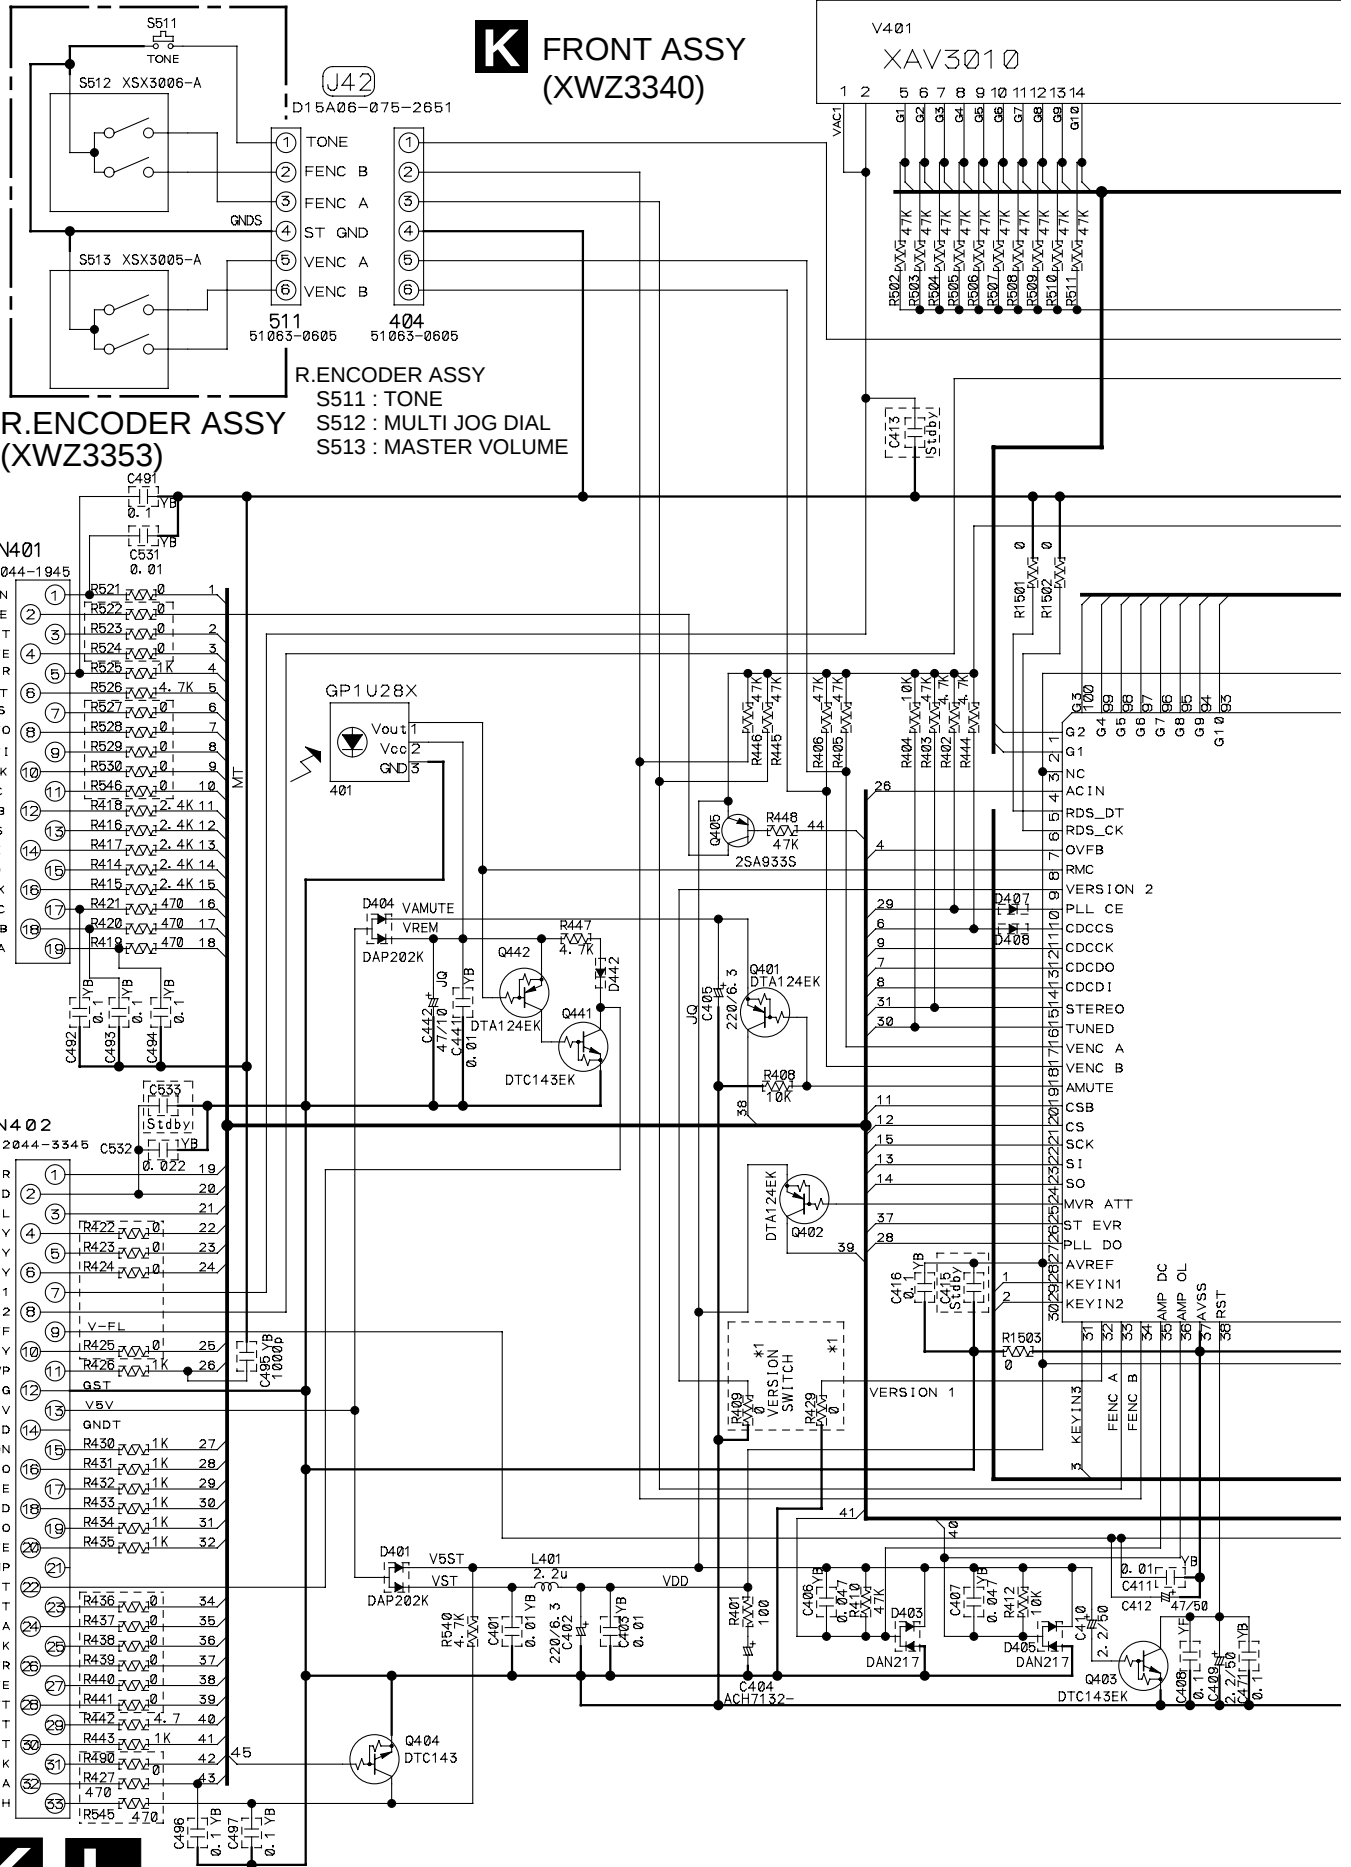

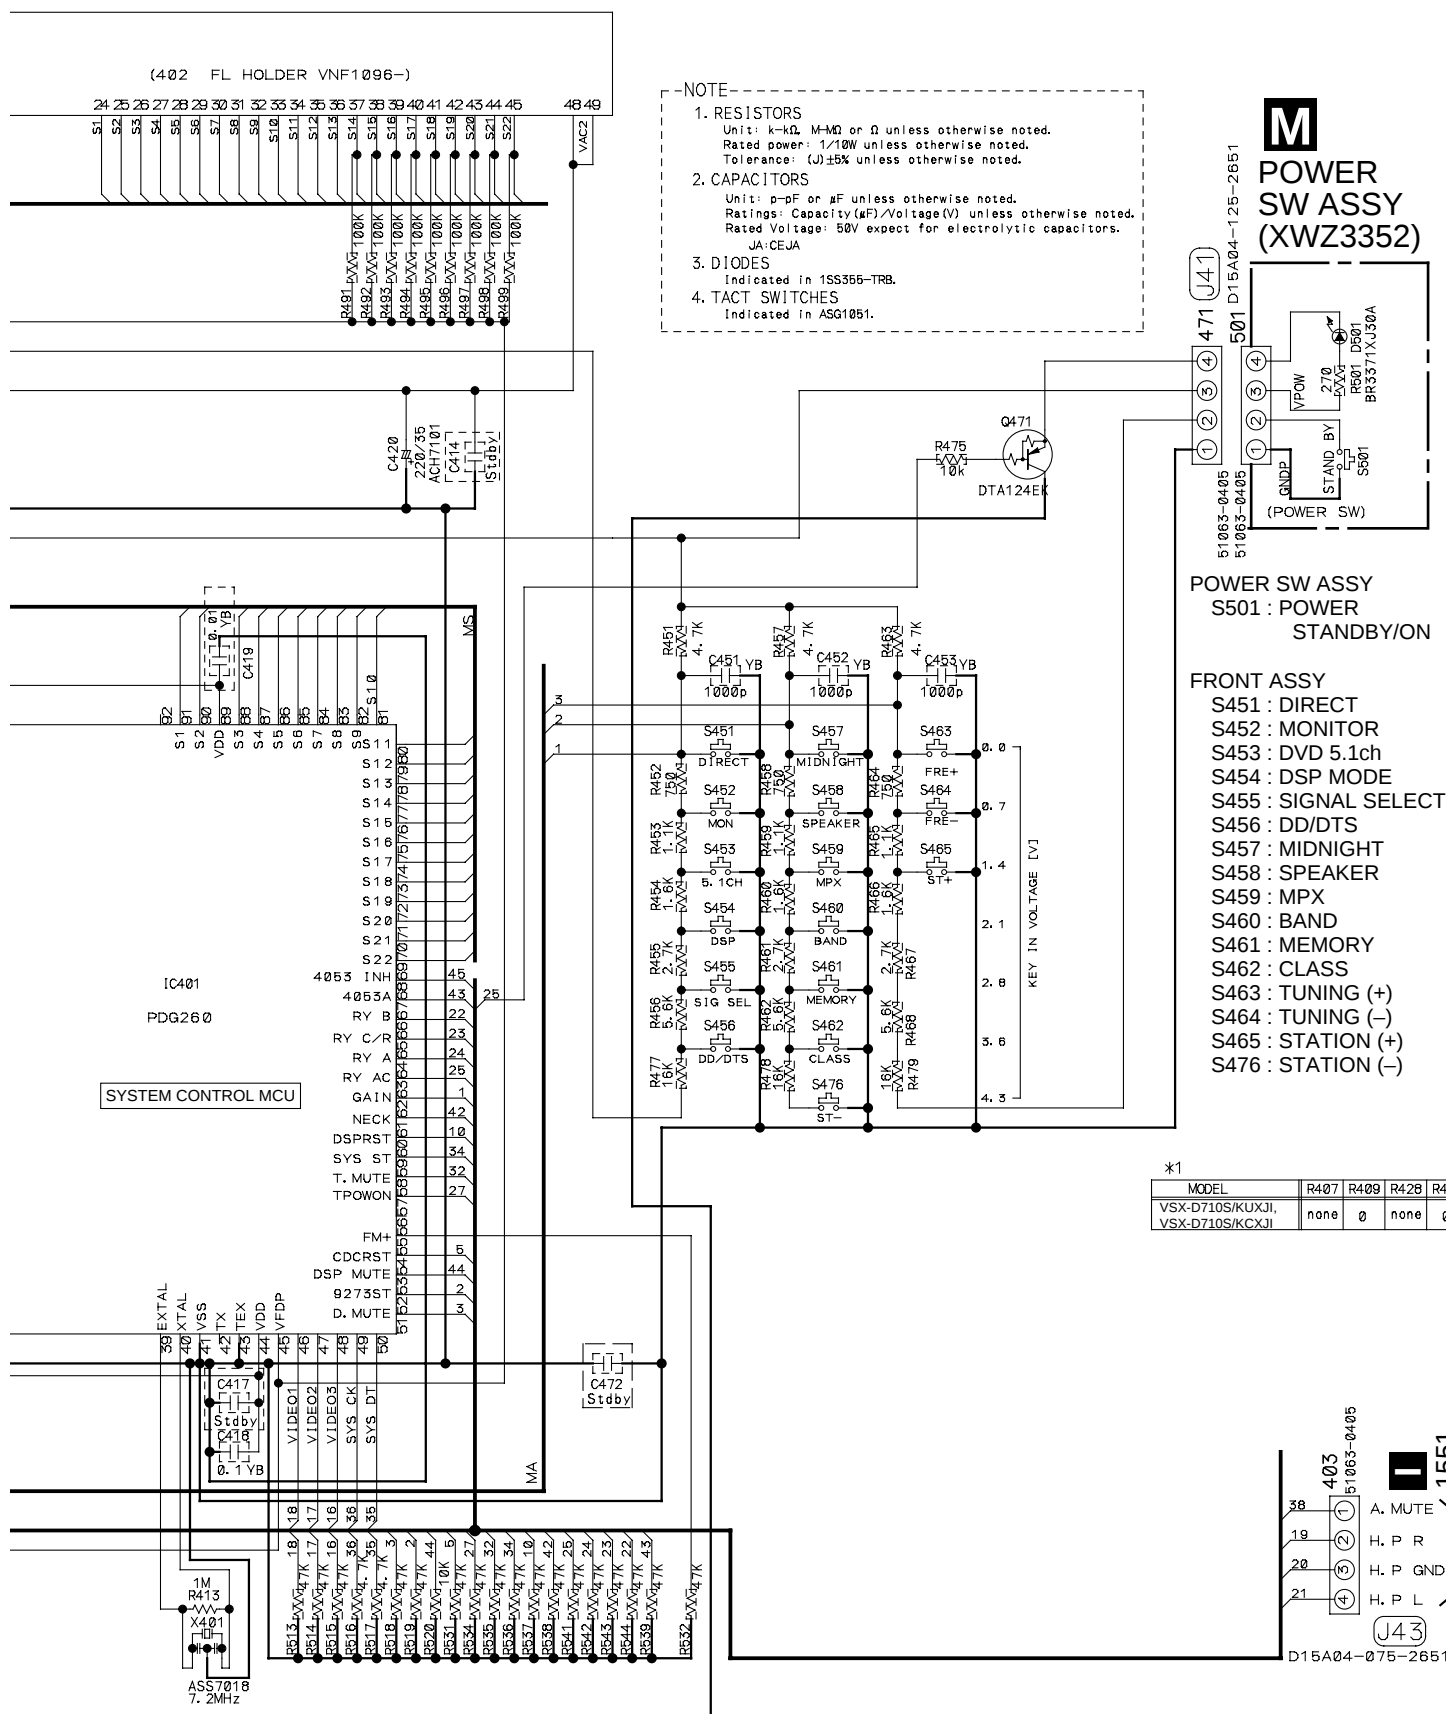

3.10 S. VIDEO, BOARD TO BOARD, FRONT VIDEO and COMPORNENT ASSYS

NJM2296D control port status

SW1	SW2	SW3	SW4	SW5	Vout1	Vout2	Vout3
1	0	(1)	0	1	Vin2	Vin2	mute
1	1	(1)	0	1	Vin3	Vin3	Vin3
1	1	0	1	1	Vin4	Vin4	Vin4
1	1	1	1	1	Vin5	Vin5	Vin5
0	0	(0)	(0)	0	mute	mute	mute


VIN 2. VCR/DVR Vout1. MONITOR out
VIN 3. DVD/LD Vout2. MR out
VIN 4. TV/SAT Vout3. VCR/DVR out
VIN 5. FRONT VIDEO

Video Signal Flow
Audio Signal Flow



- NOTE
- 1. RESISTORS
Unit: k- Ω , M- Ω or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J) $\pm 5\%$ unless otherwise noted.
 - 2. CAPACITORS
Unit: p-pF or μ F unless otherwise noted.
Ratings: Capacity(μ F)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.
 - 3. DIODES
Indicated in 1SS355-TR8

BOARD TO BOARD ASSY (XWZ3370)



S. VIDEO ASSY (XWZ3362)

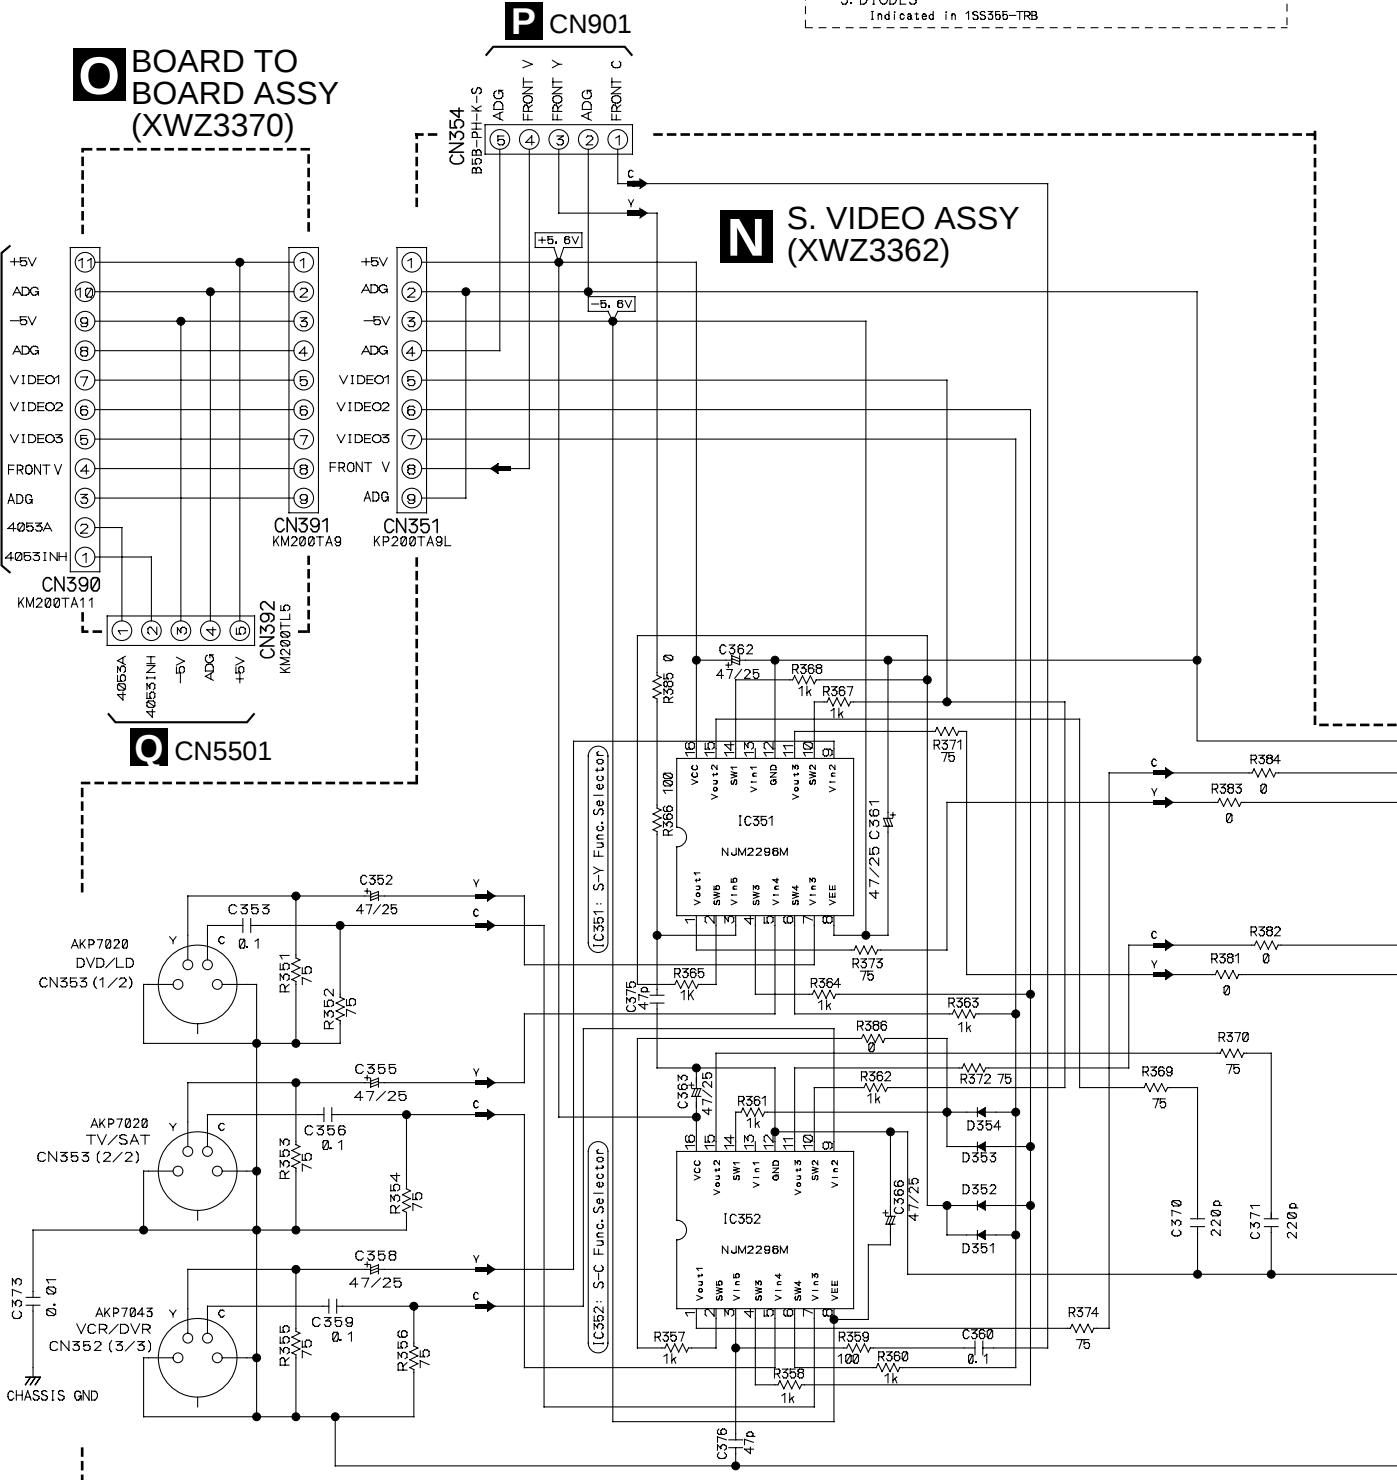

4.2 TRANS2, TRANS3, REGULATOR and TRANS1 ASSYS

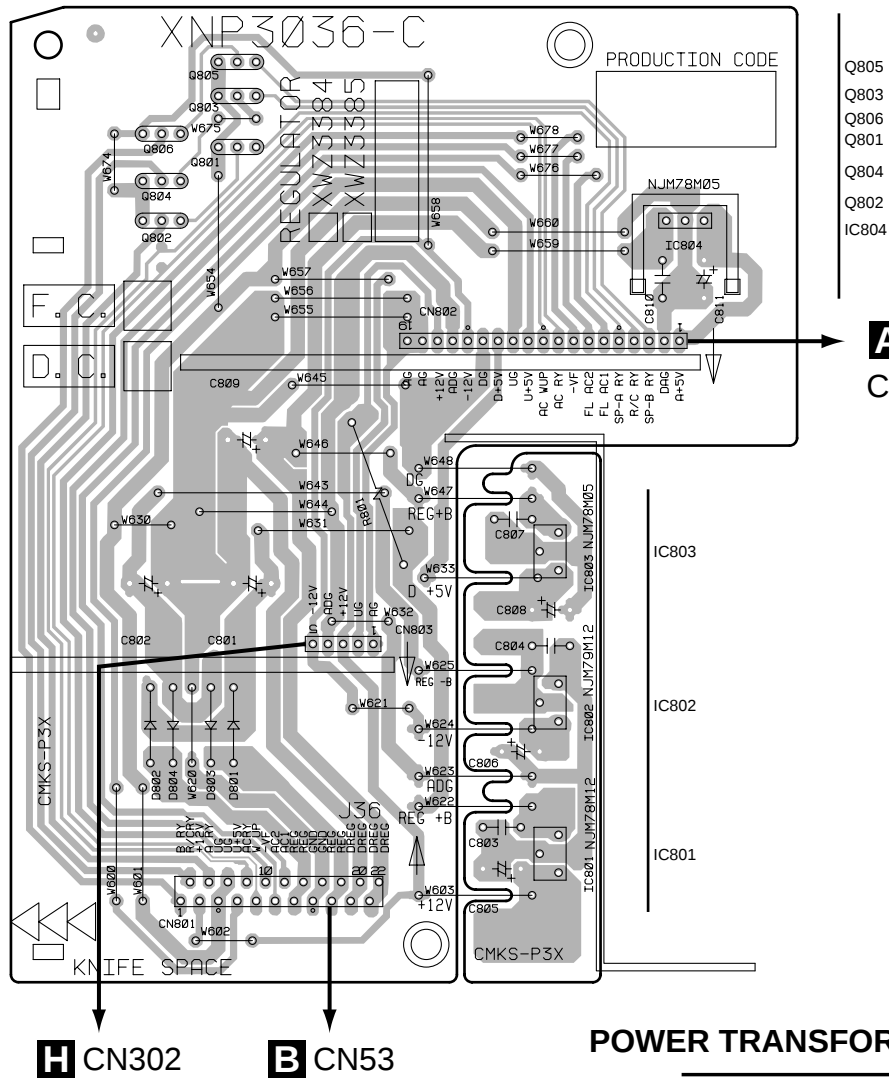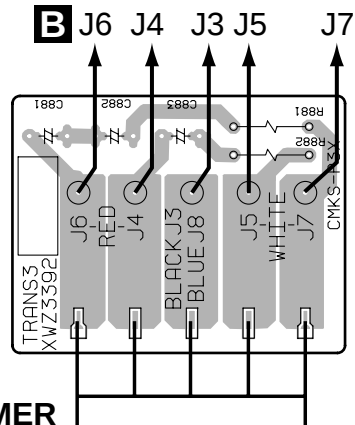E REGULATOR ASSY**D** TRANS3 ASSY

POWER TRANSFORMER

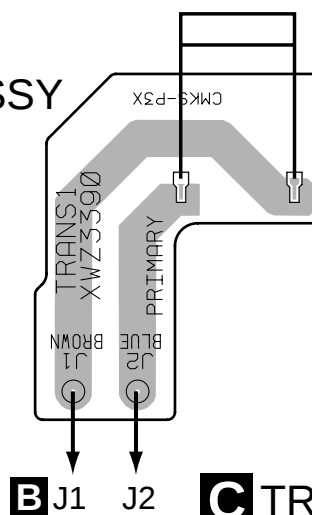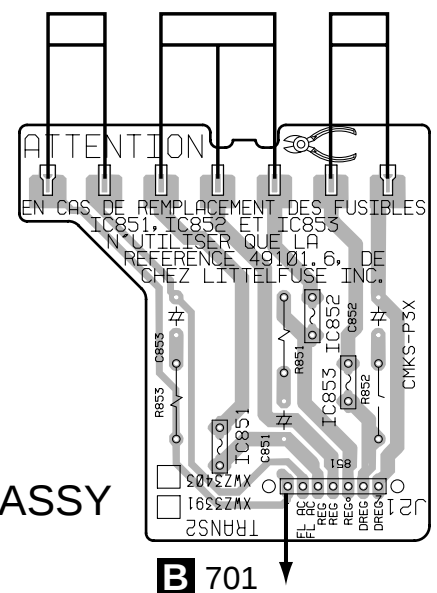G TRANS1 ASSY(XNP3036-C)
SIDE A**C** TRANS2 ASSY

A



SIDE A

D J3

**SIDE A**




A D.D & INPUT ASSY




FM/AM TUNER UNIT **J** CN1901**SIDE A****E** CN802

A D.D & INPUT ASSY

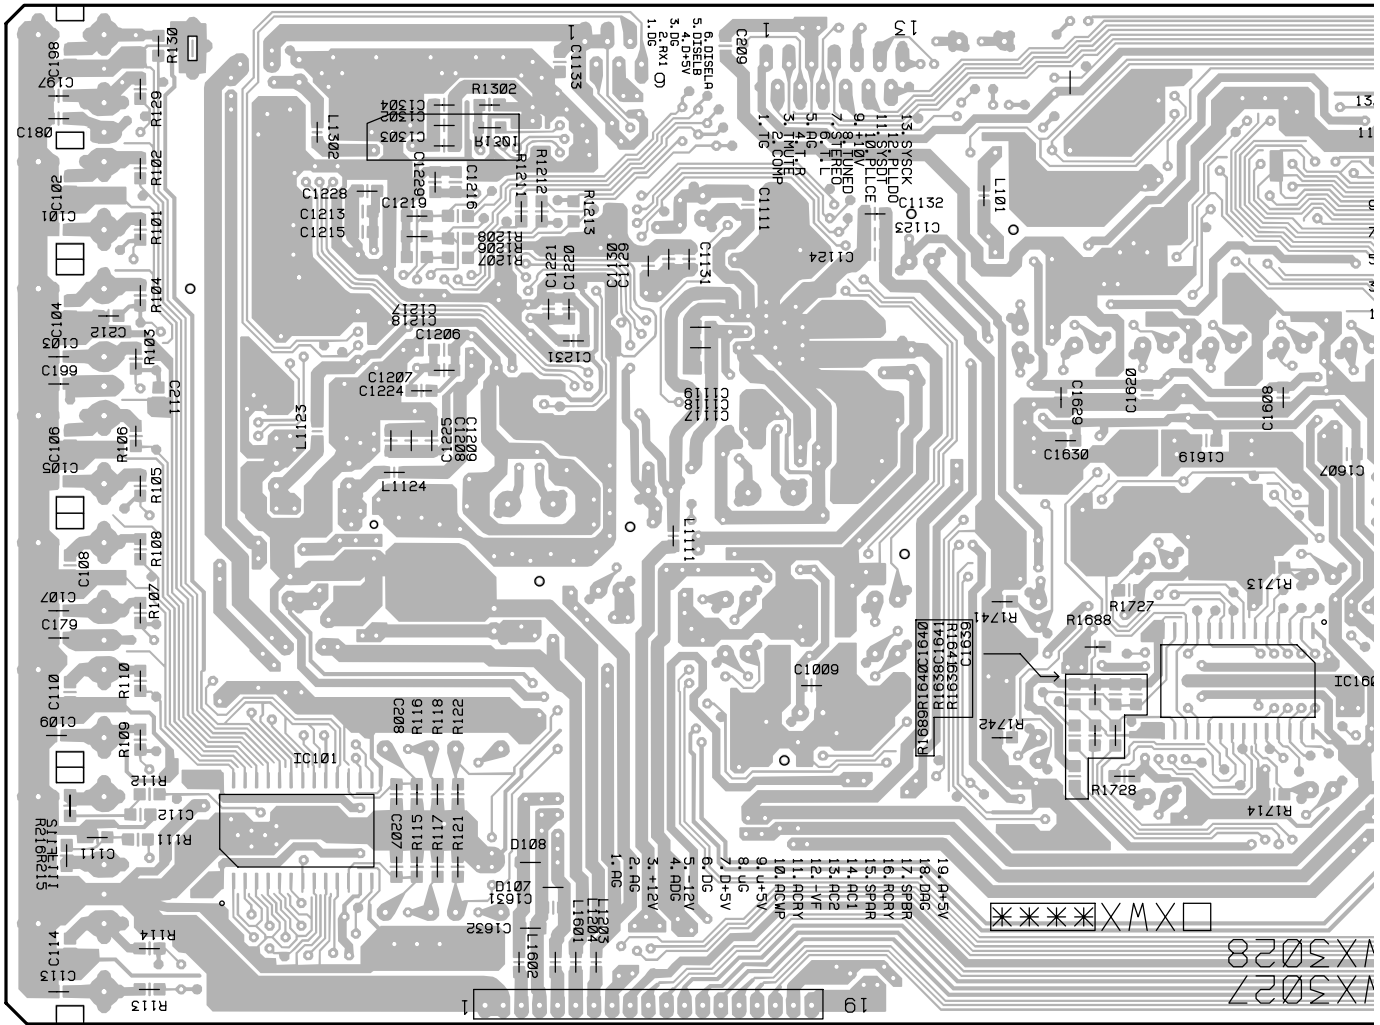

IC101

IC1801

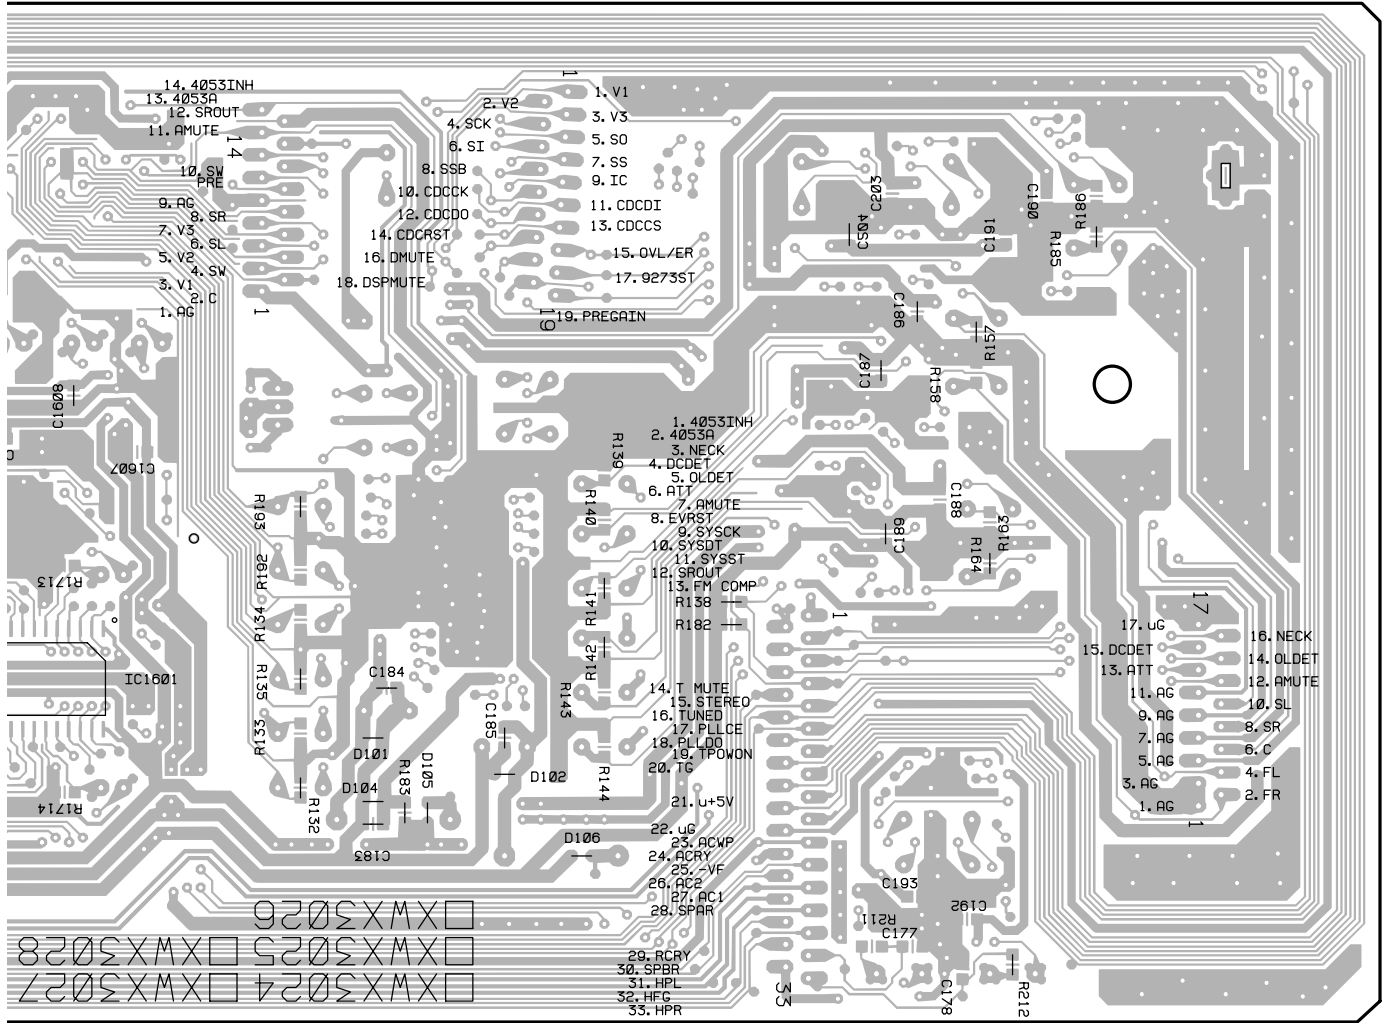


1801

(XNP3037-A)


SIDE B

4.5 H.P., FRONT, R.ENCODER and POWER SW ASSYS

K FRONT ASSY

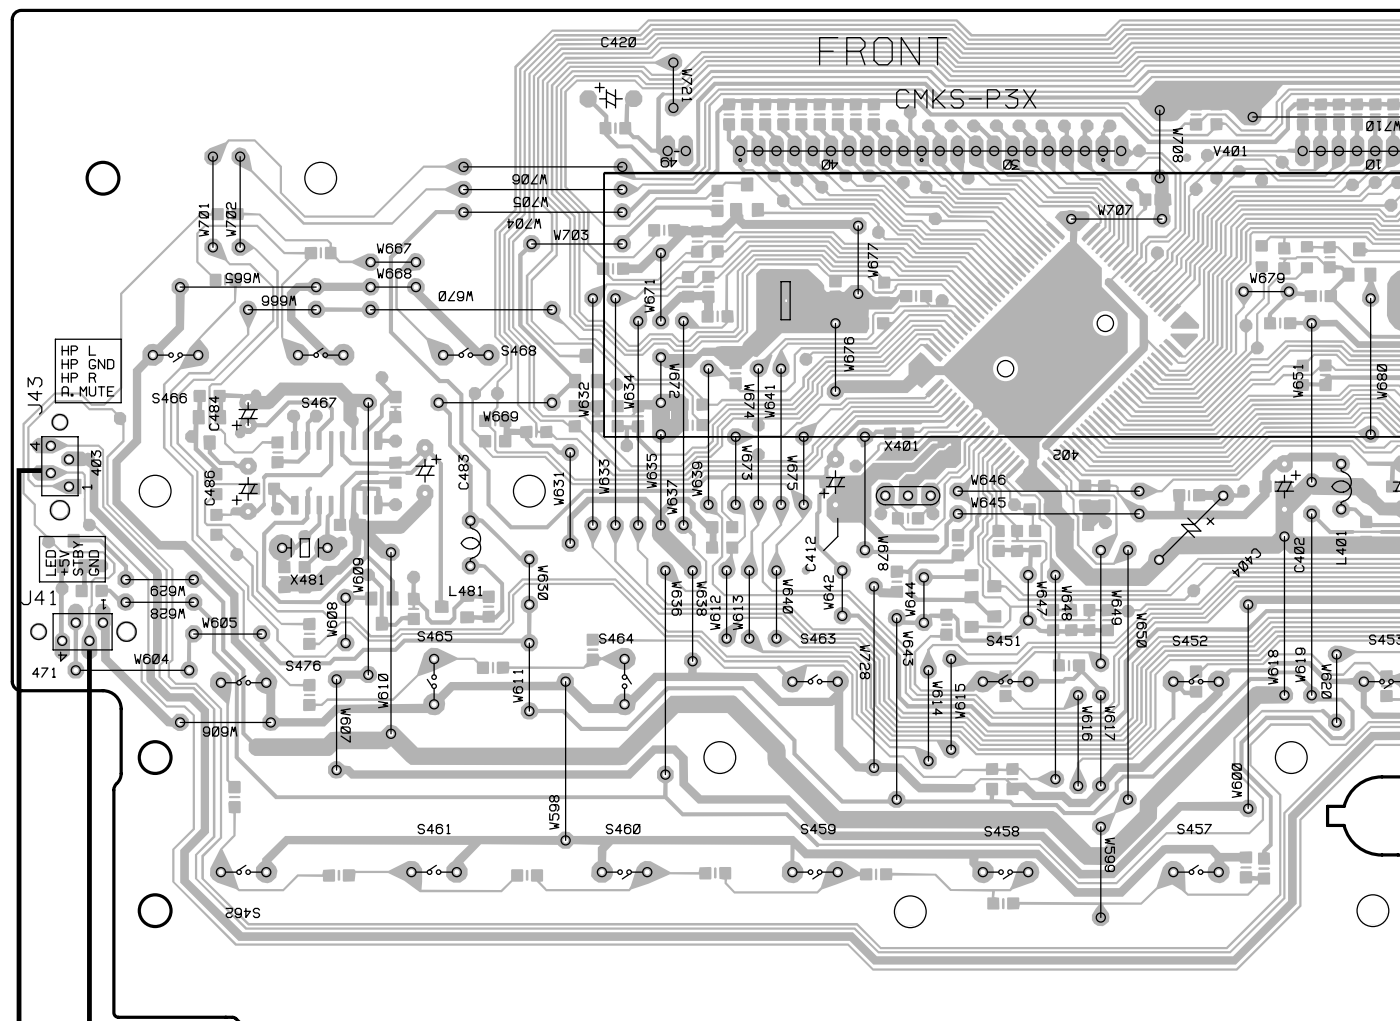


I H.P. ASSY


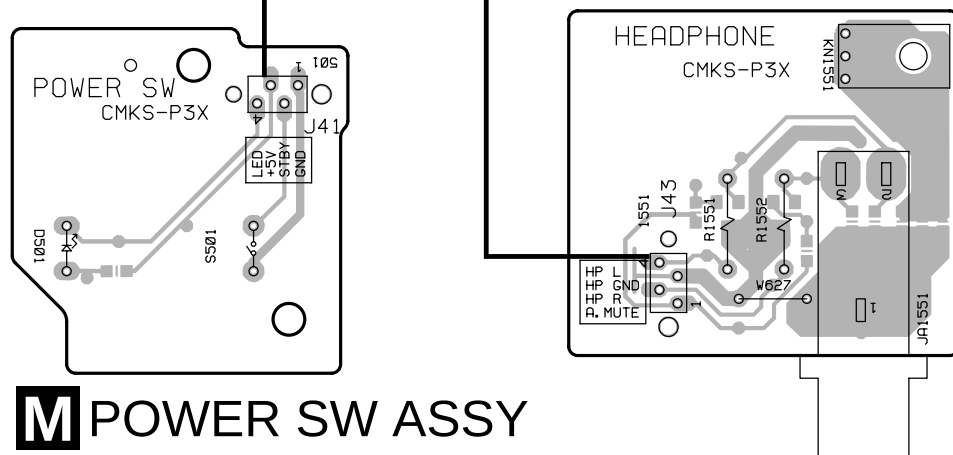


M POWER SW ASSY





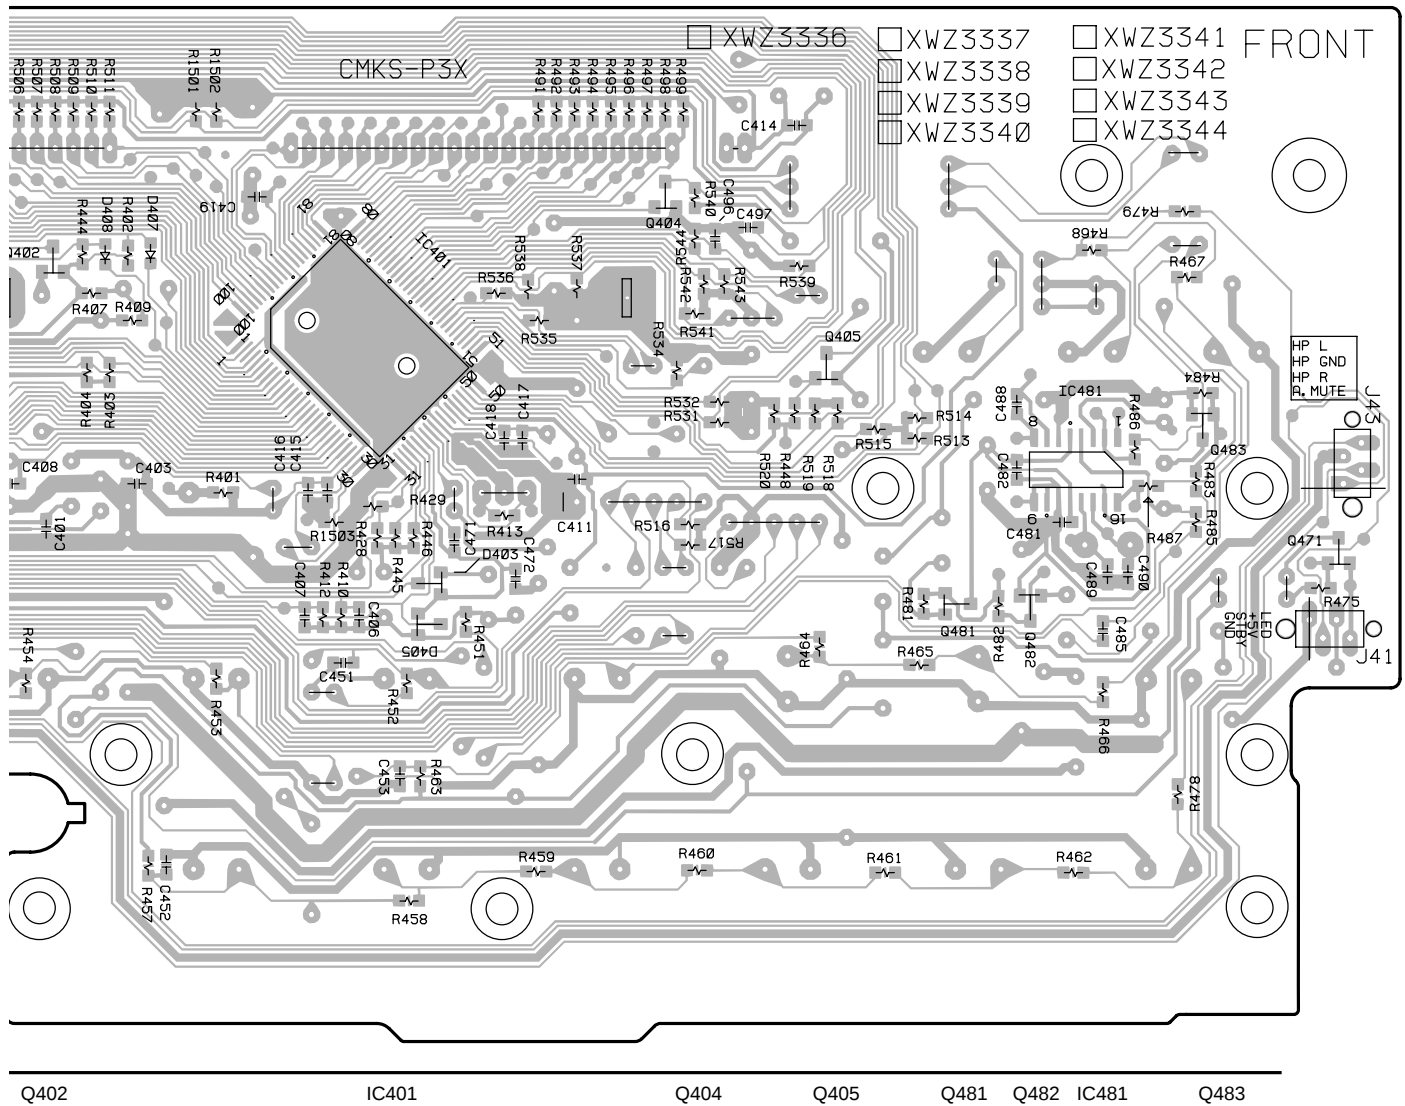


H.P. ASSY

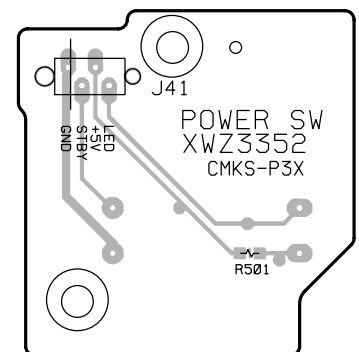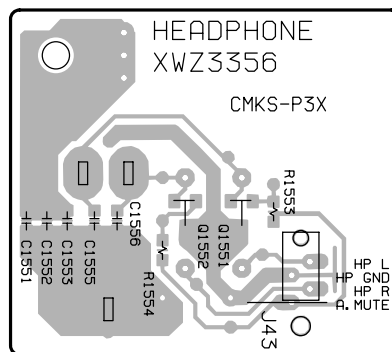

POWER SW ASSY

4.7 S.VIDEO, BOARD TO BOARD and FRONT VIDEO ASSYS

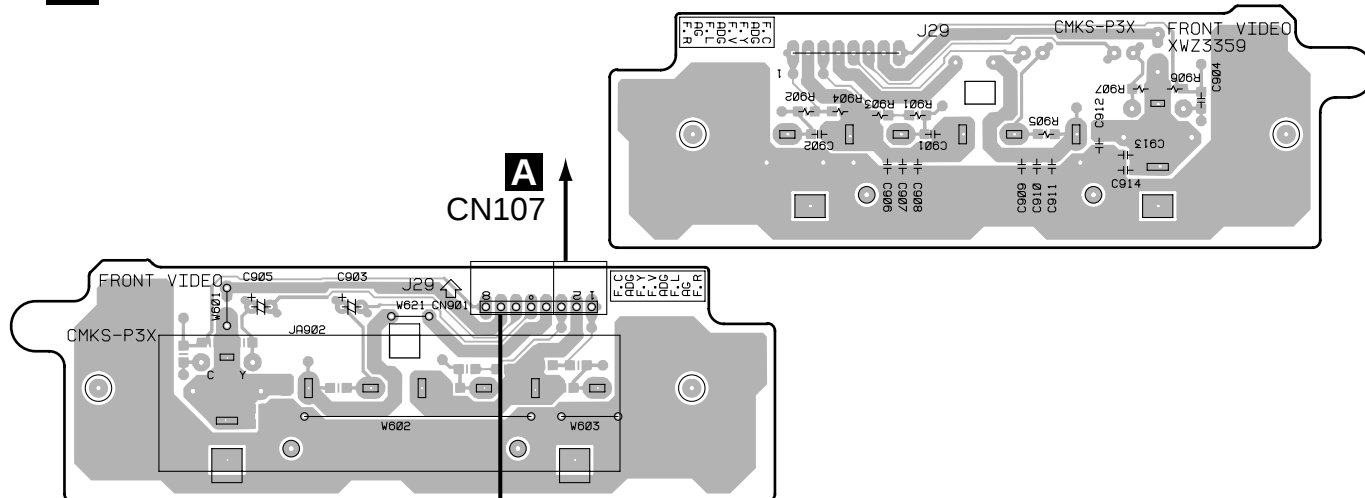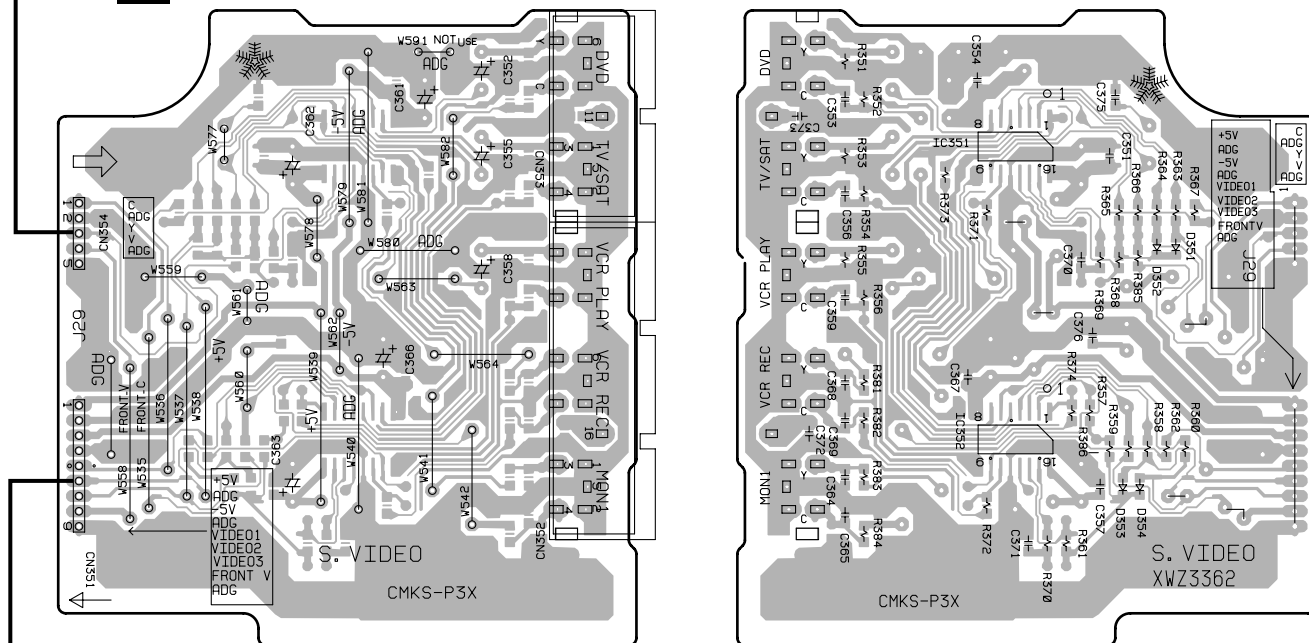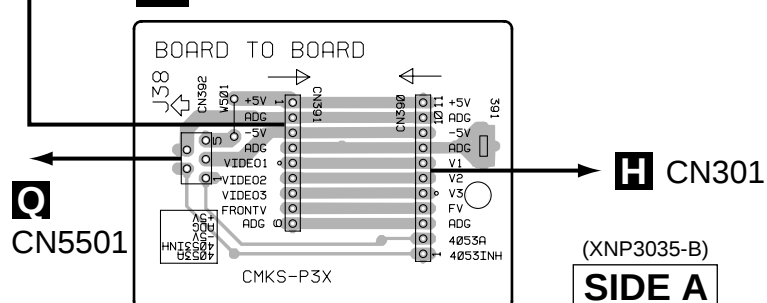P FRONT VIDEO ASSY**N** S. VIDEO ASSY**O** BOARD TO BOARD ASSY

(XNP3035-B)



SIDE B

(XNP3035-B)

SIDE A

4.8 COMPORNT ASSY

Q COMPORNENT ASSY

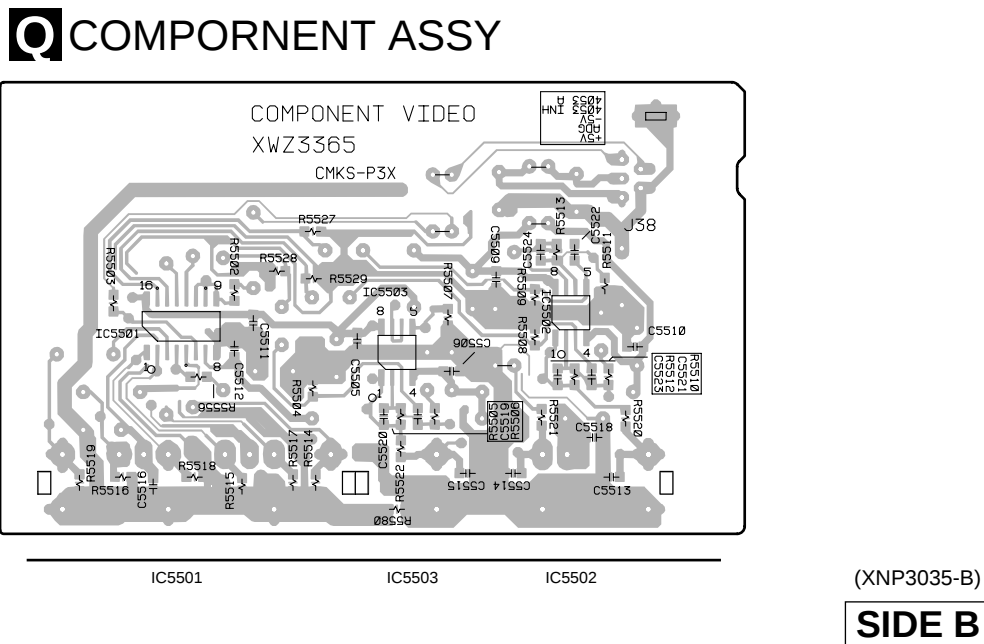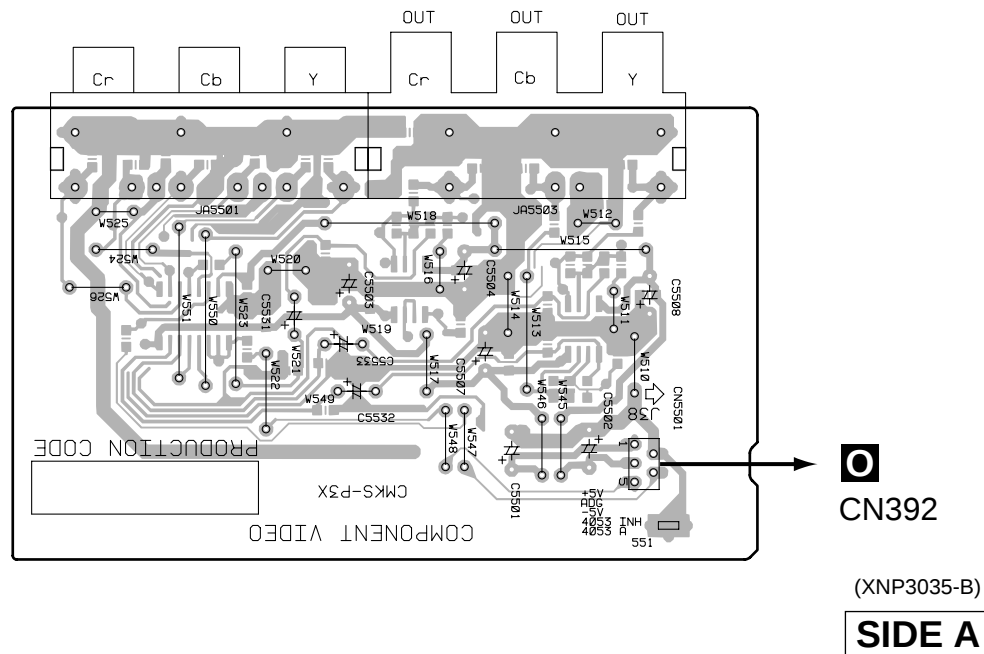

5. PCB PARTS LIST

NOTES: ● The Δ mark found on some component parts indicates the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

$560\ \Omega \rightarrow 56 \times 10^1 \rightarrow 561 \dots\dots\dots RD1/4PU \begin{array}{|c|c|c|} \hline 5 & 6 & 1 \\ \hline \end{array} J$
 $47k\ \Omega \rightarrow 47 \times 10^3 \rightarrow 473 \dots\dots\dots RD1/4PU \begin{array}{|c|c|c|} \hline 4 & 7 & 3 \\ \hline \end{array} J$
 $0.5\ \Omega \rightarrow R50 \dots\dots\dots RN2H \begin{array}{|c|c|c|} \hline R & 5 & 0 \\ \hline \end{array} K$
 $1\ \Omega \rightarrow 1R0 \dots\dots\dots RS1P \begin{array}{|c|c|c|} \hline 1 & R & 0 \\ \hline \end{array} K$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

$5.62k\ \Omega \rightarrow 562 \times 10^1 \rightarrow 5621 \dots\dots\dots RN1/4PC \begin{array}{|c|c|c|c|c|} \hline 5 & 6 & 2 & 1 & \\ \hline \end{array} F$

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
NSP		COMPLEX ASSY	XWK3005		IC1201	DTS DECORDER IC	YSS912C
		— VIDEO&6CH IN ASSY	XWZ3334		IC1301	SRAM	IS61C256AH-15J
		— FRONT ASSY	XWZ3340		IC1401	REGULATOR IC	PQ20WZ51
		— POWER SW ASSY	XWZ3352		IC1601	E-SW IC	TC9164AF
		— R.ENCODER ASSY	XWZ3353		IC1602	IC	NJM4558MD
		— H.P. ASSY	XWZ3356				
		— FRONT VIDEO ASSY	XWZ3359		IC1603	IC	NJM4558MD
		— DIGITAL IN ASSY	XWZ3361		IC1604	IC	NJM4558MD
		— S.VIDEO ASSY	XWZ3362		IC1701	IC	NJM4558MD
		— COMPORNENT ASSY	XWZ3365		IC1702	IC	NJM4558MD
		— BOARD TO BOARD ASSY	XWZ3370		IC1703	IC	NJM4558MD
NSP		AMP&PS ASSY	XWK3019		IC1704	IC	NJM4558MD
		— AMP&PRIMARY ASSY	XWZ3376		IC1705	IC	NJM4558MD
		— REGULATOR ASSY	XWZ3385		Q1001	CHIP MUTING TR	2SC3326
		— AMP INPUT ASSY	XWZ3388		Q1002	CHIP MUTING TR	2SC3326
		— TRANS2 ASSY	XWZ3391		Q1003	CHIP DIGITAL TRANS.	DTA124EK
NSP		— TRANS1 ASSY	XWZ3390				
NSP		— TRANS3 ASSY	XWZ3392		Q1004	DIGITAL TRANSISTOR	DTC124EK
					Q101	CHIP TRANSISTOR	2SC2412K
		D.D & INPUT ASSY	XWX3026		Q103	TRANSISTOR	DTA143EK
					Q104	DIGITAL TRANSISTOR	DTC124EK
					Q105	CHIP MUTING TR	2SC3326
					Q106	CHIP MUTING TR	2SC3326
					Q107	CHIP MUTING TR	2SC3326
					Q108	CHIP MUTING TR	2SC3326
					Q109	CHIP MUTING TR	2SC3326
					Q110	CHIP MUTING TR	2SC3326
					Q1101	CHIP DIGITAL TRANS.	DTA124EK
					Q1102	DIGITAL TRANSISTOR	DTC124EK
					Q111	CHIP MUTING TR	2SC3326
					Q112	CHIP MUTING TR	2SC3326
					Q1601	CHIP MUTING TR	2SC3326
					Q1602	CHIP MUTING TR	2SC3326
					Q1603	CHIP MUTING TR	2SC3326
					Q1604	CHIP MUTING TR	2SC3326
					Q1605	CHIP MUTING TR	2SC3326
					Q1606	CHIP MUTING TR	2SC3326
					Q1607	CHIP DIGITAL TRANS.	DTA124EK
					Q1608	CHIP DIGITAL TRANS.	DTA124EK
					Q1609	DIGITAL TRANSISTOR	DTC124EK
					Q1610	CHIP DIGITAL TRANS.	DTA124EK
					D101	CHIP ZENER DIODE	UDZS6.8B
					D102	CHIP ZENER DIODE	UDZS6.8B
					D103	DIODE	1SS355
					D104	CHIP ZENER DIODE	UDZS5.1B
					D105	DIODE	1SS355
					D106	DIODE	1SS355
					D1601	DIODE	1SS181
					D1602	DIODE	1SS181

COMPLEX ASSY

OTHERS

J 43	JUMPER WIRED	15A04-075-2651
J 41	JUMPER WIRED	15A04-125-2651
J 42	JUMPER WIRED	15A06-075-2651

AMP&PS ASSY

OTHERS

J 21	JUMPER WIRE	D20PYY0715E
J 6	LEAD WIRE UNIT	DB215NB0

A D.D & INPUT ASSY

SEMICONDUCTORS

IC1001	OP-AMP IC	NJM2100M
IC101	ANALOG SWITCH IC	TC9273F-007
IC102	E-SW IC	TC9163AF
IC103	E-VR IC	M62446FP
IC104	OP-AMP IC	UPC4570G2-TFB
IC105	OP-AMP IC	UPC4570G2-TFB
IC106	OP-AMP IC	UPC4570G2-TFB
IC107	OP-AMP IC	UPC4570G2-TFB
IC108	OP-AMP IC	M5216FP
IC1101	MULTI CH CODEC IC	CS4226-KQ(J)

VSX-D710S

Mark	No.	Description	Part No.
COILS AND FILTERS			
	L101	CHIP SOLID INDUCTOR	QTL1013
	L1101	CHIP SOLID INDUCTOR	QTL1013
	L1102	CHIP SOLID INDUCTOR	QTL1013
	L1103	CHIP SOLID INDUCTOR	QTL1013
	L1104	CHIP SOLID INDUCTOR	QTL1013
	L1111	CHIP SOLID INDUCTOR	QTL1013
	L1123	CHIP SOLID INDUCTOR	QTL1013
	L1124	CHIP SOLID INDUCTOR	QTL1013
	L1203	CHIP SOLID INDUCTOR	QTL1013
	L1204	CHIP SOLID INDUCTOR	QTL1013
	L1302	CHIP SOLID INDUCTOR	QTL1013
	L1401	CHIP SOLID INDUCTOR	ATL7002
	L1601	CHIP SOLID INDUCTOR	QTL1013
	L1602	CHIP SOLID INDUCTOR	QTL1013

CAPACITORS

	C1001	CERAMIC CAPACITOR	CCSRCH101J50
	C1002	CERAMIC CAPACITOR	CCSRCH101J50
	C1003	ELECT. CAPACITOR	CEAT4R7M50
	C1004	ELECT. CAPACITOR	CEAT4R7M50
	C1005	ELECT. CAPACITOR	CEAT221M6R3
	C1006	CHIP CERAMIC C.	CKSRYB103K50
	C1007	ELECT. CAPACITOR	CEJQNP100M10
	C1008	ELECT. CAPACITOR	CEJQNP100M10
	C1009	CERAMIC CAPACITOR	CKSRYF104Z25
	C101	CERAMIC CAPACITOR	CCSRCH101J50
	C102	CERAMIC CAPACITOR	CCSRCH101J50
	C103	CERAMIC CAPACITOR	CCSRCH101J50
	C104	CERAMIC CAPACITOR	CCSRCH101J50
	C105	CERAMIC CAPACITOR	CCSRCH101J50
	C106	CERAMIC CAPACITOR	CCSRCH101J50
	C107	CERAMIC CAPACITOR	CCSRCH101J50
	C108	CERAMIC CAPACITOR	CCSRCH101J50
	C109	CERAMIC CAPACITOR	CCSRCH101J50
	C110	CERAMIC CAPACITOR	CCSRCH101J50
	C1101	CHIP CERAMIC C.	CCSRCH471J50
	C1102	CERAMIC CAPACITOR	CCSRCH102J50
	C1103	CERAMIC CAPACITOR	CCSRCH390J50
	C1104	CERAMIC CAPACITOR	CCSRCH390J50
	C1105	CERAMIC CAPACITOR	CKSRYF104Z16
	C1106	CHIP CERAMIC C.	CCSRCH471J50
	C1107	CHIP CERAMIC C.	CKSRYB223K50
	C1108	CERAMIC CAPACITOR	CKSQYB224K16
	C1109	CERAMIC CAPACITOR	CKSRYF104Z16
	C111	CERAMIC CAPACITOR	CCSRCH101J50
	C1110	CHIP CERAMIC C.	CCSRCH471J50
	C1111	CERAMIC CAPACITOR	CKSRYF104Z25
	C1112	ELECT. CAPACITOR	CEAT1R0M50
	C1113	CERAMIC CAPACITOR	CCSRCH180J50
	C1114	CERAMIC CAPACITOR	CCSRCH180J50
	C1115	ELECT. CAPACITOR	CEATR47M50
	C1116	ELECT. CAPACITOR	CEAT101M10
	C1117	CERAMIC CAPACITOR	CKSRYF104Z25
	C1118	CHIP CERAMIC C.	CCSRCH471J50
	C1119	CHIP CERAMIC C.	CCSRCH271J50
	C112	CERAMIC CAPACITOR	CCSRCH101J50
	C1121	ELECT. CAPACITOR	CEAT101M10
	C1122	ELECT. CAPACITOR	CEAT101M10
	C1123	CHIP CERAMIC C.	CCSRCH331J50
	C1124	CHIP CERAMIC C.	CCSRCH331J50
	C1128	CHIP CERAMIC C.	CKSRYB103K50

Mark	No.	Description	Part No.
	C1129	CHIP CERAMIC C.	CKSRYB103K50
	C113	CERAMIC CAPACITOR	CCSRCH101J50
	C1130	CHIP CERAMIC C.	CCSRCH471J50
	C1132	CHIP CERAMIC C.	CKSRYB103K50
	C1133	CERAMIC CAPACITOR	CKSRYF104Z25
	C1134	CHIP CERAMIC C.	CKSRYB103K50
	C1135	CERAMIC CAPACITOR	CKSRYB104K16
	C1136	CERAMIC CAPACITOR	CKSRYB104K16
	C114	CERAMIC CAPACITOR	CCSRCH101J50
	C115	ELECT. CAPACITOR	CEAT4R7M50
	C116	ELECT. CAPACITOR	CEAT4R7M50
	C117	ELECT. CAPACITOR	CEAT470M25
	C118	ELECT. CAPACITOR	CEAT470M25
	C119	CHIP CERAMIC C.	CKSRYB103K50
	C120	CHIP CERAMIC C.	CKSRYB103K50
	C1201	ELECT. CAPACITOR	CEAT101M10
	C1202	ELECT. CAPACITOR	CEAT221M6R3
	C1203	CHIP CERAMIC C.	CCSRCH200J50
	C1204	CHIP CERAMIC C.	CCSRCH200J50
	C1205	CHIP CERAMIC C.	CKSRYB103K50
	C1206	CHIP CERAMIC C.	CKSRYB103K50
	C1207	CERAMIC CAPACITOR	CCSRCH101J50
	C1208	CHIP CERAMIC C.	CKSRYB103K50
	C1209	CERAMIC CAPACITOR	CCSRCH101J50
	C121	CERAMIC CAPACITOR	CCSRCH101J50
	C1210	CHIP CERAMIC C.	CCSRCH471J50
	C1211	CHIP CERAMIC C.	CKSRYB103K50
	C1212	CERAMIC CAPACITOR	CCSRCH101J50
	C1213	CERAMIC CAPACITOR	CCSRCH101J50
	C1214	CHIP CERAMIC C.	CKSRYB103K50
	C1215	CHIP CERAMIC C.	CKSRYB103K50
	C1216	CHIP CERAMIC C.	CKSRYB103K50
	C1217	CERAMIC CAPACITOR	CCSRCH101J50
	C1218	CERAMIC CAPACITOR	CCSRCH101J50
	C1219	CERAMIC CAPACITOR	CKSRYF104Z25
	C122	CERAMIC CAPACITOR	CCSRCH101J50
	C1220	CHIP CERAMIC C.	CKSRYB103K50
	C1221	CERAMIC CAPACITOR	CCSRCH101J50
	C1222	CHIP CERAMIC C.	CKSRYB103K50
	C1223	CERAMIC CAPACITOR	CCSRCH101J50
	C1224	CERAMIC CAPACITOR	CKSRYF104Z25
	C1225	CERAMIC CAPACITOR	CKSRYF104Z25
	C1226	CERAMIC CAPACITOR	CKSRYF104Z16
	C1227	CERAMIC CAPACITOR	CKSRYF104Z16
	C1228	CERAMIC CAPACITOR	CKSRYF104Z25
	C1229	CERAMIC CAPACITOR	CKSRYF104Z25
	C123	CERAMIC CAPACITOR	CCSRCH101J50
	C1230	CERAMIC CAPACITOR	CKSRYF104Z16
	C1231	CERAMIC CAPACITOR	CKSRYF104Z25
	C1232	CERAMIC CAPACITOR	CKSRYF104Z16
	C124	CHIP CERAMIC C.	CKSRYB103K50
	C125	CHIP CERAMIC C.	CKSRYB103K50
	C126	CERAMIC CAPACITOR	CCSRCH101J50
	C127	CERAMIC CAPACITOR	CCSRCH101J50
	C128	CERAMIC CAPACITOR	CCSRCH101J50
	C130	ELECT. CAPACITOR	CEAT100M50
	C1301	ELECT. CAPACITOR	CEJQ101M10
	C1302	CHIP CERAMIC C.	CKSRYB103K50
	C1303	CERAMIC CAPACITOR	CCSRCH101J50
	C1304	CERAMIC CAPACITOR	CKSRYF104Z25

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	C131	ELECT. CAPACITOR	CEAT100M50		C163	CERAMIC CAPACITOR	CCSRCH101J50
	C132	ELECT. CAPACITOR	CEAT100M50		C1630	CHIP CERAMIC C.	CKSRYB103K50
	C133	ELECT. CAPACITOR	CEAT100M50		C1631	CERAMIC CAPACITOR	CKSRYF104Z25
	C134	ELECT. CAPACITOR	CEAT100M50		C1632	CERAMIC CAPACITOR	CKSRYF104Z25
	C135	ELECT. CAPACITOR	CEAT100M50		C1636	CHIP CERAMIC C.	CKSRYB103K50
	C136	ELECT. CAPACITOR	CEAT100M50		C1637	CHIP CERAMIC C.	CKSRYB103K50
	C137	ELECT. CAPACITOR	CEAT100M50		C1639	CHIP CERAMIC C.	CCSRCH471J50
	C138	CHIP CERAMIC C.	CKSRYB822K50		C164	CERAMIC CAPACITOR	CCSRCH101J50
	C139	CHIP CERAMIC C.	CKSRYB153K50		C1640	CERAMIC CAPACITOR	CCSRCH101J50
	C140	CERAMIC CAPACITOR	CKSQYB224K16		C1641	CERAMIC CAPACITOR	CCSRCH101J50
	C1401	ELECT. CAPACITOR	CEAT4R7M50		C1642	CHIP CERAMIC C.	CKSRYB103K50
	C1404	ELECT. CAPACITOR	CEAT101M10		C165	ELECT. CAPACITOR	CEAT470M25
	C141	CHIP CERAMIC C.	CKSRYB822K50		C166	ELECT. CAPACITOR	CEAT470M25
	C142	CHIP CERAMIC C.	CKSRYB153K50		C167	CHIP CERAMIC C.	CCSRCH221J50
	C143	CERAMIC CAPACITOR	CKSQYB224K16		C168	CERAMIC CAPACITOR	CKSRYB152K50
	C144	ELECT. CAPACITOR	CEAT3R3M50		C169	ELECT. CAPACITOR	CEAT470M25
	C145	ELECT. CAPACITOR	CEAT3R3M50		C170	ELECT. CAPACITOR	CEAT4R7M50
	C146	ELECT. CAPACITOR	CEAT100M50		C1701	CERAMIC CAPACITOR	CKSRYB682K50
	C147	ELECT. CAPACITOR	CEAT3R3M50		C1702	CERAMIC CAPACITOR	CKSRYB682K50
	C148	ELECT. CAPACITOR	CEAT3R3M50		C1703	CHIP CERAMIC C.	CKSRYB222K50
	C149	ELECT. CAPACITOR	CEAT3R3M50		C1704	CHIP CERAMIC C.	CKSRYB222K50
	C150	ELECT. CAPACITOR	CEAT3R3M50		C1705	CERAMIC CAPACITOR	CKSRYB104K16
	C151	ELECT. CAPACITOR	CEAT3R3M50		C1706	CERAMIC CAPACITOR	CKSRYB104K16
	C152	CERAMIC CAPACITOR	CCSRCH101J50		C1707	CHIP CERAMIC C.	CCSRCH151J50
	C153	CERAMIC CAPACITOR	CCSRCH101J50		C1708	CHIP CERAMIC C.	CCSRCH151J50
	C154	CERAMIC CAPACITOR	CCSRCH101J50		C1709	CHIP CERAMIC C.	CKSRYB103K50
	C155	ELECT. CAPACITOR	CEAT471M10		C171	CHIP CERAMIC C.	CKSRYB103K50
	C156	ELECT. CAPACITOR	CEAT471M10		C1710	CHIP CERAMIC C.	CKSRYB103K50
	C157	ELECT. CAPACITOR	CEAT101M16		C1711	CHIP CERAMIC C.	CKSRYB103K50
	C159	CERAMIC CAPACITOR	CCSRCH101J50		C1712	CHIP CERAMIC C.	CKSRYB103K50
	C160	CERAMIC CAPACITOR	CCSRCH101J50		C1713	ELECT. CAPACITOR	CEAT220M25
	C1601	CHIP CERAMIC C.	CCSRCH221J50		C1714	ELECT. CAPACITOR	CEAT220M25
	C1602	CHIP CERAMIC C.	CCSRCH221J50		C1715	CERAMIC CAPACITOR	CKSRYB682K50
	C1603	CHIP CERAMIC C.	CCSRCH471J50		C1716	CERAMIC CAPACITOR	CKSRYB682K50
	C1604	CHIP CERAMIC C.	CCSRCH471J50		C1717	CHIP CERAMIC C.	CKSRYB222K50
	C1605	ELECT. CAPACITOR	CEAT4R7M50		C1718	CHIP CERAMIC C.	CKSRYB222K50
	C1606	ELECT. CAPACITOR	CEAT4R7M50		C1719	CERAMIC CAPACITOR	CKSRYB104K16
	C1607	CHIP CERAMIC C.	CKSRYB103K50		C172	CHIP CERAMIC C.	CKSRYB103K50
	C1608	CHIP CERAMIC C.	CKSRYB103K50		C1720	CERAMIC CAPACITOR	CKSRYB104K16
	C1609	CHIP CERAMIC C.	CCSRCH221J50		C1721	CHIP CERAMIC C.	CCSRCH151J50
	C161	ELECT. CAPACITOR	CEAT470M25		C1722	CHIP CERAMIC C.	CCSRCH151J50
	C1610	CHIP CERAMIC C.	CCSRCH221J50		C1723	CHIP CERAMIC C.	CKSRYB103K50
	C1611	CHIP CERAMIC C.	CCSRCH471J50		C1724	CHIP CERAMIC C.	CKSRYB103K50
	C1612	CHIP CERAMIC C.	CCSRCH471J50		C1725	CHIP CERAMIC C.	CKSRYB103K50
	C1613	ELECT. CAPACITOR	CEAT4R7M50		C1726	CHIP CERAMIC C.	CKSRYB103K50
	C1614	ELECT. CAPACITOR	CEAT4R7M50		C1727	ELECT. CAPACITOR	CEAT220M25
	C1615	CHIP CERAMIC C.	CKSRYB222K50		C1728	ELECT. CAPACITOR	CEAT220M25
	C1616	CHIP CERAMIC C.	CKSRYB222K50		C1729	CERAMIC CAPACITOR	CKSRYB682K50
	C1617	CHIP CERAMIC C.	CKSRYB222K50		C173	CHIP CERAMIC C.	CCSRCH151J50
	C1618	CHIP CERAMIC C.	CKSRYB222K50		C1731	CHIP CERAMIC C.	CKSRYB222K50
	C1619	CHIP CERAMIC C.	CKSRYB103K50		C1732	CERAMIC CAPACITOR	CKSRYB682K50
	C162	ELECT. CAPACITOR	CEAT470M25		C1733	CERAMIC CAPACITOR	CKSRYB104K16
	C1620	CHIP CERAMIC C.	CKSRYB103K50		C1734	CERAMIC CAPACITOR	CKSRYB104K16
	C1621	CHIP CERAMIC C.	CKSRYB122K50		C1735	CHIP CERAMIC C.	CCSRCH151J50
	C1623	CHIP CERAMIC C.	CCSRCH271J50		C1736	CERAMIC CAPACITOR	CCSRCH102J50
	C1625	ELECT. CAPACITOR	CEAT4R7M50		C1737	CHIP CERAMIC C.	CKSRYB103K50
	C1626	ELECT. CAPACITOR	CEAT4R7M50		C1738	CHIP CERAMIC C.	CKSRYB103K50
	C1627	CHIP CERAMIC C.	CKSRYB222K50		C1739	ELECT. CAPACITOR	CEAT220M25
	C1628	CERAMIC CAPACITOR	CKSRYF104Z50		C174	CHIP CERAMIC C.	CCSRCH151J50
	C1629	CHIP CERAMIC C.	CKSRYB103K50		C1740	ELECT. CAPACITOR	CEAT220M25

VSX-D710S

Mark	No.	Description	Part No.
	C175	ELECT. CAPACITOR	CEAT101M16
	C176	ELECT. CAPACITOR	CEAT101M16
	C177	CHIP CERAMIC C.	CKSRYB103K50
	C178	CHIP CERAMIC C.	CKSRYB103K50
	C179	CHIP CERAMIC C.	CKSRYB103K50
	C180	CHIP CERAMIC C.	CKSRYB103K50
	C183	CHIP CERAMIC C.	CKSRYB103K50
	C184	CERAMIC CAPACITOR	CKSRYF473Z50
	C185	CERAMIC CAPACITOR	CKSRYF473Z50
	C186	CHIP CERAMIC C.	CKSRYB103K50
	C187	CHIP CERAMIC C.	CKSRYB103K50
	C188	CHIP CERAMIC C.	CKSRYB103K50
	C189	CHIP CERAMIC C.	CKSRYB103K50
	C190	CHIP CERAMIC C.	CKSRYB103K50
	C191	CHIP CERAMIC C.	CKSRYB103K50
	C192	CHIP CERAMIC C.	CKSRYB103K50
	C193	CHIP CERAMIC C.	CKSRYB103K50
	C194	ELECT. CAPACITOR	CEAT4R7M50
	C195	ELECT. CAPACITOR	CEAT4R7M50
	C197	CERAMIC CAPACITOR	CCSRCH101J50
	C198	CERAMIC CAPACITOR	CCSRCH101J50
	C199	CHIP CERAMIC C.	CKSRYB103K50
	C201	ELECT. CAPACITOR	CEAT4R7M50
	C202	CERAMIC CAPACITOR	CKSRYF104Z16
	C205	ELECT. CAPACITOR	CEAT3R3M50
	C207	CERAMIC CAPACITOR	CCSRCH101J50
	C208	CERAMIC CAPACITOR	CCSRCH101J50
	C209	CERAMIC CAPACITOR	CKSRYF104Z25

RESISTORS

△	R174	METAL OXIDE RESISTOR	RS1LMF101J
△	R175	METAL OXIDE RESISTOR	RS1LMF101J
	Other Resistors		RS1/16S□□□J

OTHERS

	CN101	19P SOCKET	KP200TA19L
	CN102	CONNECTOR	52045-3345
	CN103	20P CONNECTOR	52045-1945
	CN104	CONNECTOR	52045-1445
	CN105	CONNECTOR	52045-1345
	CN106	CONNECTOR	52045-1745
	CN107	CONNECTOR POST	B3B-PH-K
	CN1501	CONNECTOR 6P	52045-0645
	JA101	PIN JACK(4P)	AKB7048
	JA102	PIN JACK(4P)	AKB7048
	JA103	PIN JACK(4P)	AKB7048
	JA104	PIN JACK(4P)	AKB7048
	101	PCB BINDER	VEF1040
	102	PCB BINDER	VEF1040
	X1101	CRYSTAL RESONATOR (18.432MHz)	RSS1052
	X1201	CRYSTAL RESONATOR (12.288MHz)	VSS1140

Mark	No.	Description	Part No.
B AMP&PRIMARY ASSY			
SEMICONDUCTORS			
△	IC51	REGULATOR IC	NJM78M56FA
△	IC601	AUDIO IC	PAC010A
△	IC602	AUDIO IC	PAC011A
△	IC603	PROTECTOR(1A)	AEK7009
△	IC604	PROTECTOR(10A)	AEK7022
△	IC605	PROTECTOR(10A)	AEK7022
△	IC606	PROTECTOR(10A)	AEK7022
△	IC607	PROTECTOR(10A)	AEK7022
△	IC701	PROTECTOR(125mA)	AEK7020
△	IC702	PROTECTOR(125mA)	AEK7020
	Q51	TRANSISTOR	KRC101M
	Q601	TRANSISTOR	2SC2878
	Q602	TRANSISTOR	2SC2878
	Q603	TRANSISTOR	2SC2878
	Q604	TRANSISTOR	2SC2878
	Q605	TRANSISTOR	2SC2240
	Q606	TRANSISTOR	2SC2240
	Q631	TRANSISTOR	2SC2878
	Q632	TRANSISTOR	2SC2878
	Q633	TRANSISTOR	2SC2240
	Q651	TRANSISTOR	2SC2878
	Q652	TRANSISTOR	2SC2878
	Q653	TRANSISTOR	2SC2878
	Q654	TRANSISTOR	2SC2878
	Q655	TRANSISTOR	2SC2240
	Q656	TRANSISTOR	2SC2240
	Q691	TRANSISTOR	2SC1740S
	Q692	TRANSISTOR	2SC1740S
	Q701	TRANSISTOR	2SC4793
	Q702	TRANSISTOR	2SA1837
	Q703	TRANSISTOR	2SA1145
	Q704	TRANSISTOR	2SC1845
△	D51	DIODE	S5688G
△	D52	DIODE	S5688G
△	D53	DIODE	S5688G
△	D54	DIODE	S5688G
△	D55	DIODE	S5688G
	D56	DIODE	1SS133
	D58	ZINER DIODE	MTZJ5.1A
	D601	DIODE	1SS133
	D602	DIODE	1SS133
	D603	DIODE	1SS133
	D604	DIODE	1SS133
	D605	ZENER DIODE	MTZJ16A
	D606	ZENER DIODE	MTZJ16A
	D631	DIODE	1SS133
	D632	DIODE	1SS133
	D633	ZENER DIODE	MTZJ16A
	D634	ZENER DIODE	MTZJ16A
	D651	DIODE	1SS133
	D652	DIODE	1SS133
	D653	DIODE	1SS133
	D654	DIODE	1SS133
△	D701	DIODE	D5SBA20(B)
△	D702	DIODE	D5SBA20(B)

Mark	No.	Description	Part No.
	D711	ZENER DIODE	MTZJ22D
	D712	ZENER DIODE	MTZJ5.1B
△	D721	DIODE	S5688G
△	D722	DIODE	S5688G
△	D723	DIODE	S5688G
△	D724	DIODE	S5688G
	D752	DIODE	1SS133
	D756	DIODE	1SS133
	D758	DIODE	1SS133

COILS AND FILTERS

△	L51	LINE FILTER	ATF7018
	L751	COIL	ATH1004
	L752	COIL	ATH1004
	L753	COIL	ATH1004
	L761	COIL	ATH1004
	L762	COIL	ATH1004

SWITCHES AND RELAYS

△	RY51	JOE LOWPOWER RELAY	XSR3003
	RY751	RELAY	XSR3002
	RY752	RELAY	XSR3002
	RY753	RELAY	XSR3002
	RY754	RELAY	XSR3002

CAPACITORS

△	C51	CKA (10000pF/AC250V)	ACG7020
△	C52	CKA (10000pF/AC250V)	ACG7020
	C53	ELECT. CAPACITOR	CEAT102M16
	C54	ELECT. CAPACITOR	CEAT470M25
	C55	CERAMIC CAPACITOR	CGCYX103M25
	C56	CERAMIC CAPACITOR	CGCYX103M25
	C57	CERAMIC CAPACITOR	CGCYX103M25
	C601	CERAMIC CAPACITOR	CKCYB102K50
	C602	CERAMIC CAPACITOR	CKCYB102K50
	C603	CERAMIC CAPACITOR	CKCYB331K50
	C604	CERAMIC CAPACITOR	CKCYB331K50
	C605	ELECT. CAPACITOR	CEAT4R7M50
	C606	ELECT. CAPACITOR	CEAT4R7M50
	C607	CERAMIC CAPACITOR	CCCSL6R0D50
	C608	CERAMIC CAPACITOR	CCCSL6R0D50
	C609	CERAMIC CAPACITOR	CCCSL6R0D50
	C610	CERAMIC CAPACITOR	CCCSL6R0D50
	C611	ELECT. CAPACITOR	CEAT101M16
	C612	ELECT. CAPACITOR	CEAT101M16
	C615	ELECT. CAPACITOR	CEANP2R2M50
	C616	ELECT. CAPACITOR	CEANP2R2M50
	C631	CERAMIC CAPACITOR	CKCYB102K50
	C632	CERAMIC CAPACITOR	CKCYB331K50
	C633	ELECT. CAPACITOR	CEAT4R7M50
	C634	CERAMIC CAPACITOR	CCCSL6R0D50
	C635	CERAMIC CAPACITOR	CCCSL6R0D50
	C636	ELECT. CAPACITOR	CEAT101M16
	C638	ELECT. CAPACITOR	CEANP2R2M50
	C651	CERAMIC CAPACITOR	CKCYB102K50
	C652	CERAMIC CAPACITOR	CKCYB102K50
	C653	CERAMIC CAPACITOR	CKCYB331K50
	C654	CERAMIC CAPACITOR	CKCYB331K50
	C655	ELECT. CAPACITOR	CEAT4R7M50
	C656	ELECT. CAPACITOR	CEAT4R7M50
	C657	CERAMIC CAPACITOR	CCCSL6R0D50

Mark	No.	Description	Part No.
	C658	CERAMIC CAPACITOR	CCCSL6R0D50
	C659	CERAMIC CAPACITOR	CCCSL6R0D50
	C660	CERAMIC CAPACITOR	CCCSL6R0D50
	C661	ELECT. CAPACITOR	CEAT101M16
	C662	ELECT. CAPACITOR	CEAT101M16
	C665	ELECT. CAPACITOR	CEANP2R2M50
	C666	ELECT. CAPACITOR	CEANP2R2M50
	C691	CERAMIC CAPACITOR	CKCYB102K50
	C692	ELECT. CAPACITOR	CEAT221M10
	C701	E.CAPACITOR(4700μF/71V)	ACH7137
	C702	E.CAPACITOR(4700μF/71V)	ACH7137
	C703	E.CAPACITOR(3300μF/42V)	ACH7135
	C704	E.CAPACITOR(3300μF/42V)	ACH7135
	C705	ELECT. CAPACITOR	CEAT100M2A
	C706	ELECT. CAPACITOR	CEAT100M2A
	C707	CKA (0.01μF/AC250V)	ACG1005
	C708	CKA (0.01μF/AC250V)	ACG1005
	C711	ELECT. CAPACITOR	CEAT101M35
	C712	ELECT. CAPACITOR	CEAT101M10
	C751	AUDIO FILM CAPACITOR	CFTYA104J50
	C752	AUDIO FILM CAPACITOR	CFTYA104J50
	C755	AUDIO FILM CAPACITOR	CFTYA104J50
	C761	AUDIO FILM CAPACITOR	CFTYA104J50
	C762	AUDIO FILM CAPACITOR	CFTYA104J50

RESISTORS

△	R51	RESISTOR (2.2MΩ/ 1/2W)	RCN1080
△	R52	CARBON FILM RESISTOR	RD1/2PM270J
△	R615	RESISTOR (0.22Ω/5W)	XCN3001
△	R616	RESISTOR (0.22Ω/5W)	XCN3001
△	R638	RESISTOR ((0.22Ω/5W)	XCN3001
△	R665	RESISTOR (0.22Ω/5W)	XCN3001
△	R666	RESISTOR (0.22Ω/5W)	XCN3001
△	R711	METAL OXIDE RESISTOR	RS2LMF392J
△	R751	CARBON FILM RESISTOR	RD1/4PUF101J
△	R752	CARBON FILM RESISTOR	RD1/4PUF101J
△	R753	METAL OXIDE RESISTOR	RS1LMF4R7J
△	R754	METAL OXIDE RESISTOR	RS1LMF4R7J
△	R755	CARBON FILM RESISTOR	RD1/4PUF101J
△	R756	METAL OXIDE RESISTOR	RS1LMF4R7J
△	R761	CARBON FILM RESISTOR	RD1/4PUF101J
△	R762	CARBON FILM RESISTOR	RD1/4PUF101J
△	R763	METAL OXIDE RESISTOR	RS1LMF4R7J
△	R764	METAL OXIDE RESISTOR	RS1LMF4R7J
	Other Resistors		RD1/4PU□□□□

OTHERS

51	AC SOCKET 1-P	AKP1060
701	7P CABLE HOLDER	51048-0700
CN51	AC CODE SOCKET	RKP1751
CN53	22P CONNECTOR	52045-2245
CN601	16P PLUG	KM200TA16
CN751	SPEAKER TERMINAL 6-P	AKE7060
CN752	SPEAKER TERMINAL 8-P	AKE7058
CN753	PIN JACK 1-P	XKB3008
H51	FUSE CLIP	AKR7001
H52	FUSE CLIP	AKR7001
H53	FUSE CLIP	AKR7001
H54	FUSE CLIP	AKR7001
H701	FUSE CLIP	AKR7001
H702	FUSE CLIP	AKR7001
△ T51	STANDBY TRANSFORMER	ATT7057
KN51	EARTH METAL FITTING	VNF1084
KN601	EARTH METAL FITTING	VNF1084

VSX-D710S

Mark	No.	Description	Part No.
------	-----	-------------	----------

C TRANS2 ASSY

SEMICONDUCTORS

△	IC851	PROTECTOR(1.6A)	AEK7012
△	IC852	PROTECTOR(1.6A)	AEK7012
△	IC853	PROTECTOR(1.6A)	AEK7012

OTHERS

851	7P CABLE HOLDER	51048-0700
-----	-----------------	------------

D TRANS3 ASSY

TRANS3 ASSY has no service part.

E REGULATOR ASSY

SEMICONDUCTORS

IC801	REGULATOR IC	NJM78M12FA
IC802	REGULATOR IC	NJM79M12FA
IC803	REGULATOR IC	NJM78M05FA
IC804	REGULATOR IC	NJM78M05FA
Q801	TRANSISTOR	KRA103M
Q802	TRANSISTOR	KRC101M
Q803	TRANSISTOR	KRA103M
Q804	TRANSISTOR	KRC101M
Q805	TRANSISTOR	KRA103M
Q806	TRANSISTOR	KRC101M

△	D801	DIODE	S5688G
△	D802	DIODE	S5688G
△	D803	DIODE	S5688G
△	D804	DIODE	S5688G

CAPACITORS

C801	ELECT. CAPACITOR	CEAT222M25
C802	ELECT. CAPACITOR	CEAT222M25
C803	CERAMIC CAPACITOR	CGCYX103M25
C804	CERAMIC CAPACITOR	CGCYX103M25
C805	ELECT. CAPACITOR	CEAT101M16
C806	ELECT. CAPACITOR	CEAT101M16
C807	CERAMIC CAPACITOR	CGCYX103M25
C808	ELECT. CAPACITOR	CEAT101M10
C809	ELECT. CAPACITOR	CEAT222M16
C810	CERAMIC CAPACITOR	CGCYX103M25
C811	ELECT. CAPACITOR	CEAT101M10

RESISTORS

R801	METAL OXIDE RESISTOR	RS3LMF101J
------	----------------------	------------

OTHERS

CN801	22P CONNECTOR	52045-2245
CN802	19P PLUG	KM200TA19
CN803	5P PLUG	KM200TA5

F AMP INPUT ASSY

OTHERS

CN253	16P SOCKET	KP200TA16L
CN254	17P CONNECTOR	52044-1745

Mark	No.	Description	Part No.
------	-----	-------------	----------

G TRANS1 ASSY

TRANS1 ASSY has no service part.

H VIDEO&6CH IN ASSY

SEMICONDUCTORS

IC301	VIDEO SW IC	NJM2296M
IC302	IC	NJM4558MD
IC303	IC	NJM4558MD
Q301	TRANSISTOR	2SC3377
Q302	TRANSISTOR	2SA1515
Q303	TRANSISTOR	2SC2878
D301	DIODE	1SS355
D302	DIODE	1SS355
D303	CHIP ZENER DIODE	UDZS6.2B
D304	CHIP ZENER DIODE	UDZS6.2B
D305	DIODE	1SS355
D306	DIODE	1SS355

CAPACITORS

C302	CHIP CERAMIC C.	CKSRYB103K50
C304	CERAMIC CAPACITOR	CKSRYB221K50
C305	CERAMIC CAPACITOR	CKSRYB221K50
C306	CERAMIC CAPACITOR	CKSRYB221K50
C307	ELECT. CAPACITOR	CEAT470M25
C308	ELECT. CAPACITOR	CEAT470M25
C309	ELECT. CAPACITOR	CEAT470M25
C310	ELECT. CAPACITOR	CEAT470M25
C311	CERAMIC CAPACITOR	CKSRYB473K25
C312	ELECT. CAPACITOR	CEAT470M25
C313	CERAMIC CAPACITOR	CKSRYB473K25
C314	ELECT. CAPACITOR	CEAT470M25
C315	CHIP CERAMIC C.	CKSRYB103K50
C316	CHIP CERAMIC C.	CKSRYB103K50
C317	CERAMIC CAPACITOR	CKSRYB221K50
C318	CERAMIC CAPACITOR	CKSRYB221K50
C319	CERAMIC CAPACITOR	CCSRCH101J50
C320	CERAMIC CAPACITOR	CCSRCH101J50
C321	ELECT. CAPACITOR	CEAT4R7M50
C322	CHIP CERAMIC C.	CKSRYB103K50
C323	CHIP CERAMIC C.	CKSRYB103K50
C324	ELECT. CAPACITOR	CEAT4R7M50
C325	CERAMIC CAPACITOR	CKSRYB221K50
C326	CERAMIC CAPACITOR	CKSRYB221K50
C327	CERAMIC CAPACITOR	CCSRCH101J50
C328	CERAMIC CAPACITOR	CCSRCH101J50
C329	CHIP CERAMIC C.	CKSRYB103K50
C330	CHIP CERAMIC C.	CKSRYB103K50
C331	ELECT. CAPACITOR	CEAT4R7M50
C332	ELECT. CAPACITOR	CEAT4R7M50
C333	CERAMIC CAPACITOR	CKSRYB331K50
C338	ELECT. CAPACITOR	CEAT470M25
C339	CERAMIC CAPACITOR	CKSRYB104K25
C340	CERAMIC CAPACITOR	CKSRYB104K25
C342	CERAMIC CAPACITOR	CCSRCH101J50
C343	CERAMIC CAPACITOR	CCSRCH101J50
C344	CERAMIC CAPACITOR	CCSRCH101J50
C345	CERAMIC CAPACITOR	CCSRCH101J50
C346	CHIP CERAMIC C.	CKSRYB103K50
C347	CHIP CAPACITOR	CCSRCH470J50

Mark	No.	Description	Part No.
RESISTORS			
	R313	METAL OXIDE RESISTOR	RS3LMF390J
	R316	METAL OXIDE RESISTOR	RS3LMF390J
	Other Resistors		RS1/16S□□□J

OTHERS

CN301	11P SOCKET	KP200TA11L
CN302	5P SOCKET	KP200TA5L
CN303	14P CONNECTOR	52044-1445
CN305	6P PIN JACK	AKB7123
CN307	PIN JACK(4P)	AKB7087
JA301	JACK	RKN1004

I H.P. ASSY**SEMICONDUCTORS**

Q1551	CHIP MUTING TR	2SC3326
Q1552	CHIP MUTING TR	2SC3326

CAPACITORS

C1551	CERAMIC CAPACITOR	CKSRYB104K16
C1552	CHIP CERAMIC C.	CKSRYB103K50
C1553	CHIP CERAMIC C.	CCSRCH471J50
C1555	CHIP CERAMIC C.	CKSRYB223K50
C1556	CHIP CERAMIC C.	CKSRYB223K50

RESISTORS

△	R1551	METAL OXIDE RESISTOR	RS1/2LMF121J
△	R1552	METAL OXIDE RESISTOR	RS1/2LMF121J
	Other Resistors		RS1/16S□□□J

OTHERS

1551	CABLE HOLDER(4P)	51063-0405
JA1551	JACK	RKN1002
KN1551	EARTH METAL FITTING	VNF1084

J DIGITAL IN ASSY**SEMICONDUCTORS**

IC1901	LOGIC IC	TC74ACT151F
IC1902	LOGIC IC	TC74HCU04AF

COILS AND FILTERS

F1901	CHIP BEAD	DTF1067
F1902	CHIP BEAD	DTF1067
F1903	CHIP BEAD	DTF1067
F1904	CHIP BEAD	DTF1067

CAPACITORS

C1901	CERAMIC CAPACITOR	CKSRYB104K25
C1902	CERAMIC CAPACITOR	CKSRYB104K25
C1903	CERAMIC CAPACITOR	CKSRYB104K25
C1904	ELECT. CAPACITOR	CEAT101M10
C1905	ELECT. CAPACITOR	CEAT101M10
C1906	CHIP CERAMIC C.	CKSRYB103K50
C1907	CHIP CERAMIC C.	CCSRCH271J50
C1908	CERAMIC CAPACITOR	CKSRYB104K25
C1909	CERAMIC CAPACITOR	CKSRYB104K25
C1910	CHIP CERAMIC C.	CKSRYB103K50
C1911	CERAMIC CAPACITOR	CCSRCH560J50
C1912	ELECT. CAPACITOR	CEAT101M10
C1913	CHIP CERAMIC C.	CKSRYB103K50
C1914	CHIP CERAMIC C.	CCSRCH271J50
C1915	CHIP CERAMIC C.	CKSRYB102K50

Mark	No.	Description	Part No.
	C1916	CHIP CERAMIC C.	CCSRCH471J50
	C1917	CHIP CERAMIC C.	CCSRCH220J50
	C1918	CHIP CERAMIC C.	CCSRCH221J50
	C1919	CHIP CERAMIC C.	CKSRYB103K50
	C1920	CHIP CERAMIC C.	CKSRYB103K50

C1921	CERAMIC CAPACITOR	CKSRYB104K25
C1922	CERAMIC CAPACITOR	CKSRYB104K25

RESISTORS

All Resistors	RS1/16S□□□J
---------------	-------------

OTHERS

CN1901	CONNECTOR 6P	52045-0645
JA1901	JACK	VKB1077
JA1902	OPTICAL RECEIV MOD.	GP1F32R
JA1903	OPTICAL RECEIV MOD.	GP1F32R
JA1904	OPTICAL LINK OUT	GP1F32T

K FRONT ASSY**SEMICONDUCTORS**

IC401	CONTROL MCU	PDG260A
Q401	CHIP DIGITAL TRANS.	DTA124EK
Q402	CHIP DIGITAL TRANS.	DTA124EK
Q403	DIGITAL TRANSISTOR	DTC143EK
Q404	DIGITAL TRANSISTOR	DTC143EK

Q405	CHIP TANSISTOR	2SA1037K
Q441	DIGITAL TRANSISTOR	DTC143EK
Q442	CHIP DIGITAL TRANS.	DTA124EK
Q471	CHIP DIGITAL TRANS.	DTA124EK
D401	CHIP DIODE ARRAY	DAP202K

D403	DIODE	DAN217
D404	CHIP DIODE ARRAY	DAP202K
D405	DIODE	DAN217
D407	DIODE	1SS355
D408	DIODE	1SS355

D442	DIODE	1SS355
------	-------	--------

COILS AND FILTERS

L401	RADIAL INDUCTOR	LFEA2R2J
------	-----------------	----------

SWITCHES AND RELAYS

S451	SWITCH	ASG1051
S452	SWITCH	ASG1051
S453	SWITCH	ASG1051
S454	SWITCH	ASG1051
S455	SWITCH	ASG1051

S456	SWITCH	ASG1051
S457	SWITCH	ASG1051
S458	SWITCH	ASG1051
S459	SWITCH	ASG1051
S460	SWITCH	ASG1051

S461	SWITCH	ASG1051
S462	SWITCH	ASG1051
S463	SWITCH	ASG1051
S464	SWITCH	ASG1051
S465	SWITCH	ASG1051

S476	SWITCH	ASG1051
------	--------	---------

VSX-D710S

Mark	No.	Description	Part No.
------	-----	-------------	----------

CAPACITORS

C401	CHIP CERAMIC C.	CKSRYB103K50
C402	ELECT. CAPACITOR	CEAT221M6R3
C403	CHIP CERAMIC C.	CKSRYB103K50
C404	EDL C. (0.047F/5.5V)	ACH7132
C405	ELECT. CAPACITOR	CEJQ221M6R3
C406	CERAMIC CAPACITOR	CKSRYB473K16
C407	CERAMIC CAPACITOR	CKSRYB473K16
C408	CERAMIC CAPACITOR	CKSRYB104K16
C409	ELECT. CAPACITOR	CEAT2R2M50
C410	ELECT. CAPACITOR	CEAT2R2M50
C411	CHIP CERAMIC C.	CKSRYB103K50
C412	ELECT. CAPACITOR	CEAT470M50
C416	CERAMIC CAPACITOR	CKSRYB104K16
C418	CERAMIC CAPACITOR	CKSRYB104K16
C419	CHIP CERAMIC C.	CKSRYB103K50
C420	E. CAPACIT(220μF/35V)	ACH7101
C441	CHIP CERAMIC C.	CKSRYB103K50
C442	ELECT. CAPACITOR	CEJQ470M10
C451	CHIP CERAMIC C.	CKSRYB102K50
C452	CHIP CERAMIC C.	CKSRYB102K50
C453	CHIP CERAMIC C.	CKSRYB102K50
C471	CERAMIC CAPACITOR	CKSRYB104K16
C491	CERAMIC CAPACITOR	CKSRYB104K16
C492	CERAMIC CAPACITOR	CKSRYB104K16
C493	CERAMIC CAPACITOR	CKSRYB104K16
C494	CERAMIC CAPACITOR	CKSRYB104K16
C495	CHIP CERAMIC C.	CKSRYB102K50
C496	CERAMIC CAPACITOR	CKSRYB104K25
C497	CERAMIC CAPACITOR	CKSRYB104K16
C531	CHIP CERAMIC C.	CKSRYB103K50
C532	CERAMIC CAPACITOR	CKSRYB223K25

RESISTORS

All Resistors	RS1/16S□□□J
---------------	-------------

OTHERS

401	REMOTE RECEIVER UNIT	GP1U28X
403	CABLE HOLDER(4P)	51063-0405
404	CABLE HOLDER(6P)	51063-0605
471	CABLE HOLDER(4P)	51063-0405
CN401	19P CONNECTOR	52044-1945
CN402	33P CONNECTOR	52044-3345
V401	FL TUBE	XAV3010
X401	CERAMIC RESONATOR (7.2MHz)	ASS7018

R.ENCODER ASSY

SWITCHES AND RELAYS

S511	SWITCH	ASG1051
S512	ROTARY ENCODER	XSX3006
S513	ROTARY ENCODER	XSX3005

OTHERS

511	CABLE HOLDER(6P)	51063-0605
-----	------------------	------------

Mark	No.	Description	Part No.
------	-----	-------------	----------

POWER SW ASSY

SEMICONDUCTORS

D501	LED	BR3371XJ30A
------	-----	-------------

SWITCHES AND RELAYS

S501	SWITCH	ASG1051
------	--------	---------

RESISTORS

All Resistors	RS1/16S□□□J
---------------	-------------

OTHERS

501	CABLE HOLDER(4P)	51063-0405
-----	------------------	------------

S. VIDEO ASSY

SEMICONDUCTORS

IC351	VIDEO SW IC	NJM2296M
IC352	VIDEO SW IC	NJM2296M
D351	DIODE	1SS355
D352	DIODE	1SS355
D353	DIODE	1SS355
D354	DIODE	1SS355

CAPACITORS

C351	CERAMIC CAPACITOR	CKSRYB104K25
C352	ELECT. CAPACITOR	CEAT470M25
C353	CERAMIC CAPACITOR	CKSRYB104K25
C354	CERAMIC CAPACITOR	CKSRYB104K25
C355	ELECT. CAPACITOR	CEAT470M25
C356	CERAMIC CAPACITOR	CKSRYB104K25
C357	CERAMIC CAPACITOR	CKSRYB104K25
C358	ELECT. CAPACITOR	CEAT470M25
C359	CERAMIC CAPACITOR	CKSRYB104K25
C361	ELECT. CAPACITOR	CEAT470M25
C362	ELECT. CAPACITOR	CEAT470M25
C363	ELECT. CAPACITOR	CEAT470M25
C364	CERAMIC CAPACITOR	CKSRYB221K50
C365	CERAMIC CAPACITOR	CKSRYB221K50
C366	ELECT. CAPACITOR	CEAT470M25
C367	CERAMIC CAPACITOR	CKSRYB104K25
C368	CERAMIC CAPACITOR	CKSRYB221K50
C369	CERAMIC CAPACITOR	CKSRYB221K50
C370	CERAMIC CAPACITOR	CKSRYB221K50
C371	CERAMIC CAPACITOR	CKSRYB221K50
C372	CHIP CERAMIC C.	CKSRYB103K50
C373	CHIP CERAMIC C.	CKSRYB103K50
C375	CHIP CAPACITOR	CCSRCH470J50
C376	CHIP CAPACITOR	CCSRCH470J50

RESISTORS

All Resistors	RS1/16S□□□J
---------------	-------------

OTHERS

CN351	9P SOCKET	KP200TA9L
CN352	SOCKET	AKP7043
CN353	SOCKET	AKP7020
CN354	CONNECTOR POST	B5B-PH-K

Mark	No.	Description	Part No.
------	-----	-------------	----------



BOARD TO BOARD ASSY

OTHERS

CN390	11P PLUG	KM200TA11
CN391	9P PLUG	KM200TA9
CN392	CONNECTOR	52045-0545



FRONT VIDEO ASSY

CAPACITORS

C901	CERAMIC CAPACITOR	CKSRYB221K50
C902	CERAMIC CAPACITOR	CKSRYB221K50
C903	ELECT. CAPACITOR	CEJQ470M25
C904	CERAMIC CAPACITOR	CKSRYB104K25
C905	ELECT. CAPACITOR	CEJQ470M25
C906	CERAMIC CAPACITOR	CKSRYB104K25
C907	CERAMIC CAPACITOR	CKSRYB471K50
C908	CHIP CERAMIC C.	CKSRYB103K50
C909	CERAMIC CAPACITOR	CKSRYB104K25
C910	CERAMIC CAPACITOR	CKSRYB471K50
C911	CHIP CERAMIC C.	CKSRYB103K50
C912	CERAMIC CAPACITOR	CKSRYB104K25
C913	CERAMIC CAPACITOR	CKSRYB471K50
C914	CHIP CERAMIC C.	CKSRYB103K50

RESISTORS

All Resistors	RS1/16S□□□J
---------------	-------------

OTHERS

JA902	PIN JACK(4P)	AKX7014
-------	--------------	---------



COMPONENT ASSY

SEMICONDUCTORS

IC5501	LOGIC IC	TC74HC4053AF
IC5502	VIDEO AMP IC	TK15420M
IC5503	VIDEO AMP IC	TK15420M

CAPACITORS

C5501	ELECT. CAPACITOR	CEAT101M10
C5502	ELECT. CAPACITOR	CEAT101M10
C5503	ELECT. CAPACITOR	CEAT101M10
C5504	ELECT. CAPACITOR	CEAT101M10
C5505	CHIP CERAMIC C.	CKSRYB103K50
C5506	CHIP CERAMIC C.	CKSRYB103K50
C5507	ELECT. CAPACITOR	CEAT101M10
C5508	ELECT. CAPACITOR	CEAT101M10
C5509	CHIP CERAMIC C.	CKSRYB103K50
C5510	CHIP CERAMIC C.	CKSRYB103K50
C5511	CHIP CERAMIC C.	CKSRYB103K50
C5512	CHIP CERAMIC C.	CKSRYB103K50
C5516	CHIP CERAMIC C.	CKSRYB103K50
C5518	CHIP CERAMIC C.	CKSRYB103K50

RESISTORS

All Resistors	RS1/16S□□□J
---------------	-------------

OTHERS



CN5501	CONNECTOR	52045-0545
JA5501	6P RCA PINJACK	AKB7128
JA5503	3P RCA PINJACK	AKB7124

6. ADJUSTMENT

There is no information to be shown in this chapter.


7. GENERAL INFORMATION
7.1 DISASSEMBLY AND DIAGNOSIS

■ Diagnosis

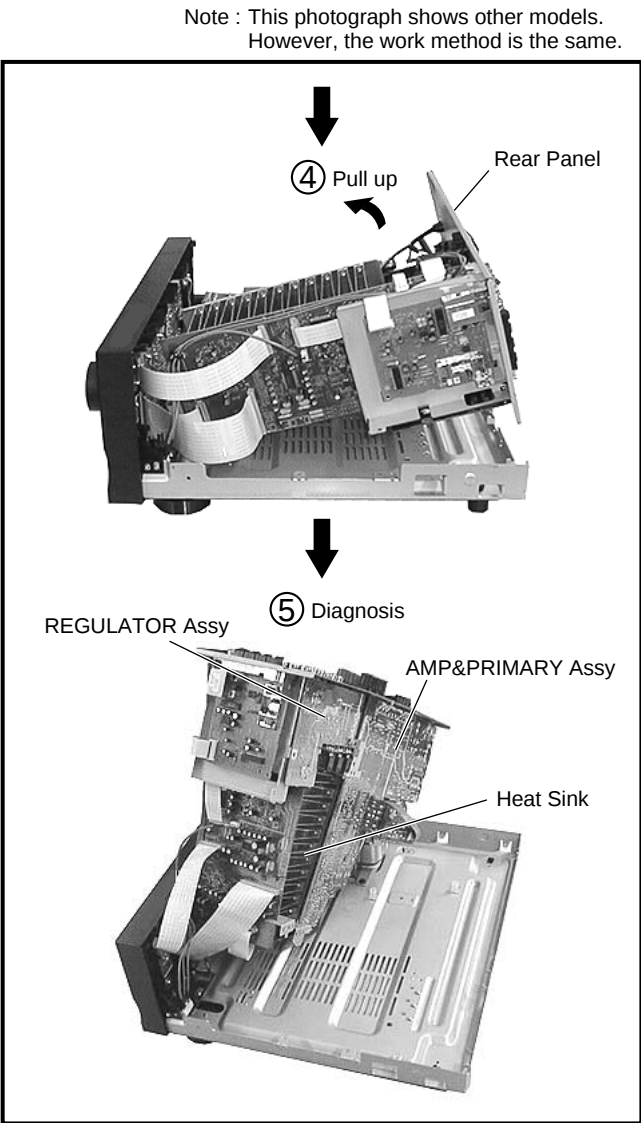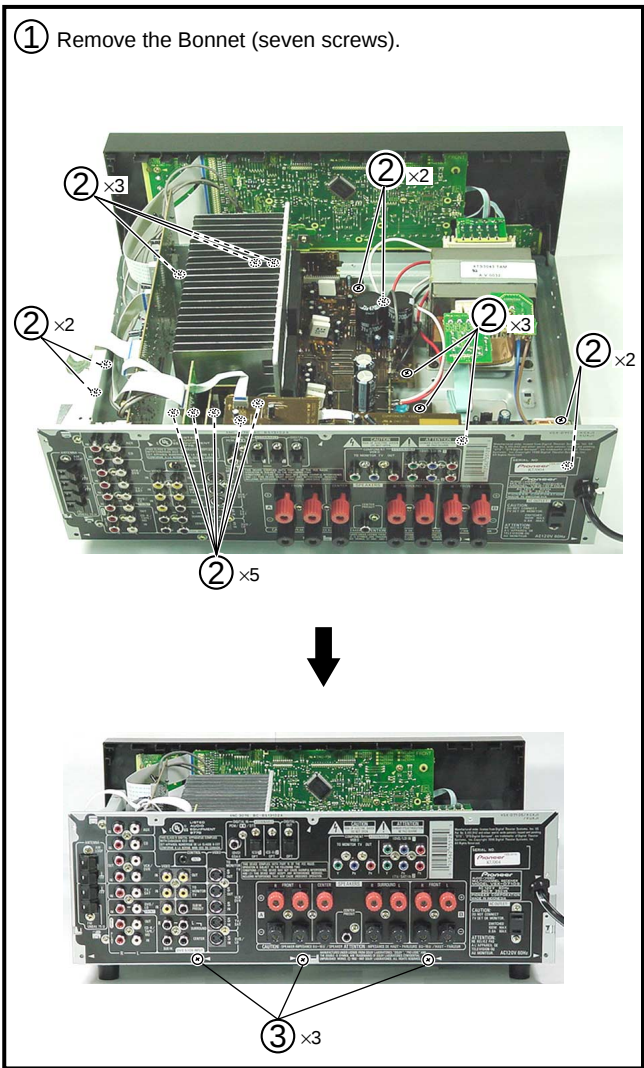

Note : The product does not operate when took off the screws of
Speaker Terminal from Rear Panel.

■ PCB Location

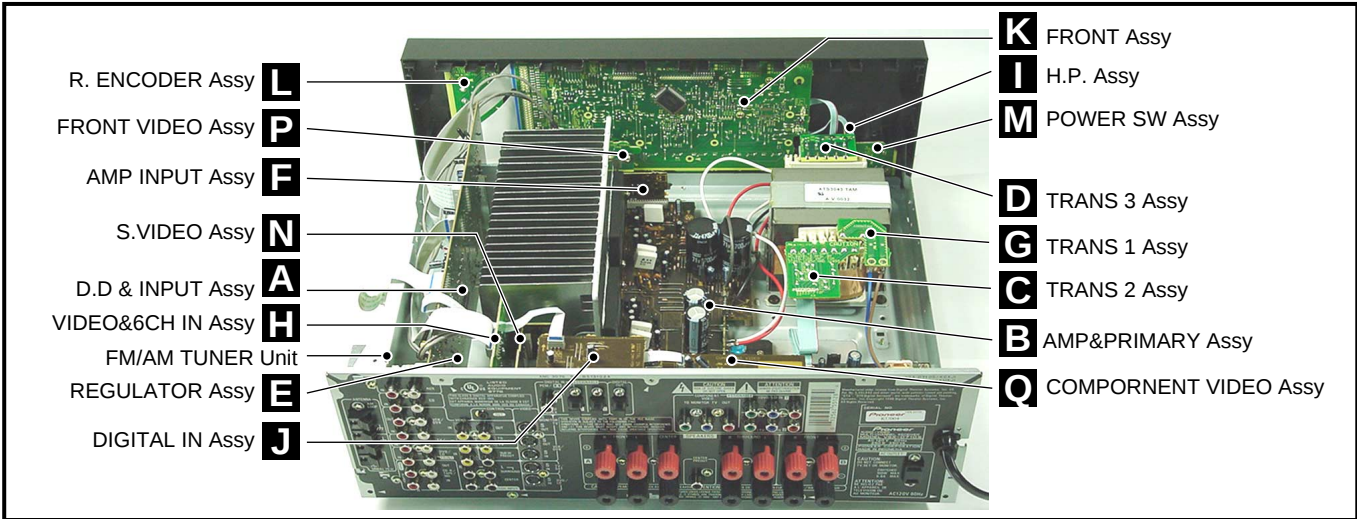


■ Diagnosis of D.D & INPUT Assy

- ① Remove FM/AM TUNER Unit and Shield R3 (five screws).
Please check SIDE A of the D.D & INPUT Assy on this status.

Note : When FM/AM TUNER Unit was removed, the product operates except FM/AM TUNER.

Please check IC101 mounted on SIDE B from SIDE A.
The Pin number points on SIDE A of IC 101 are shown as follows.

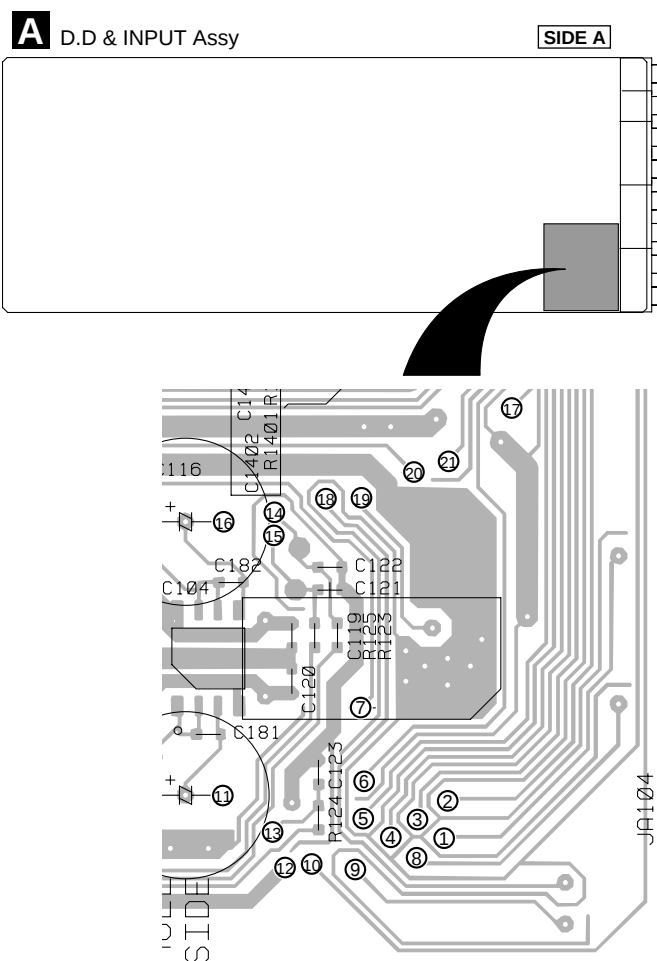

7.2 PARTS


7.2.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ PDG260A (FRONT ASSY : IC401)

• System Control MCU

• Pin Arrangement (Top View)

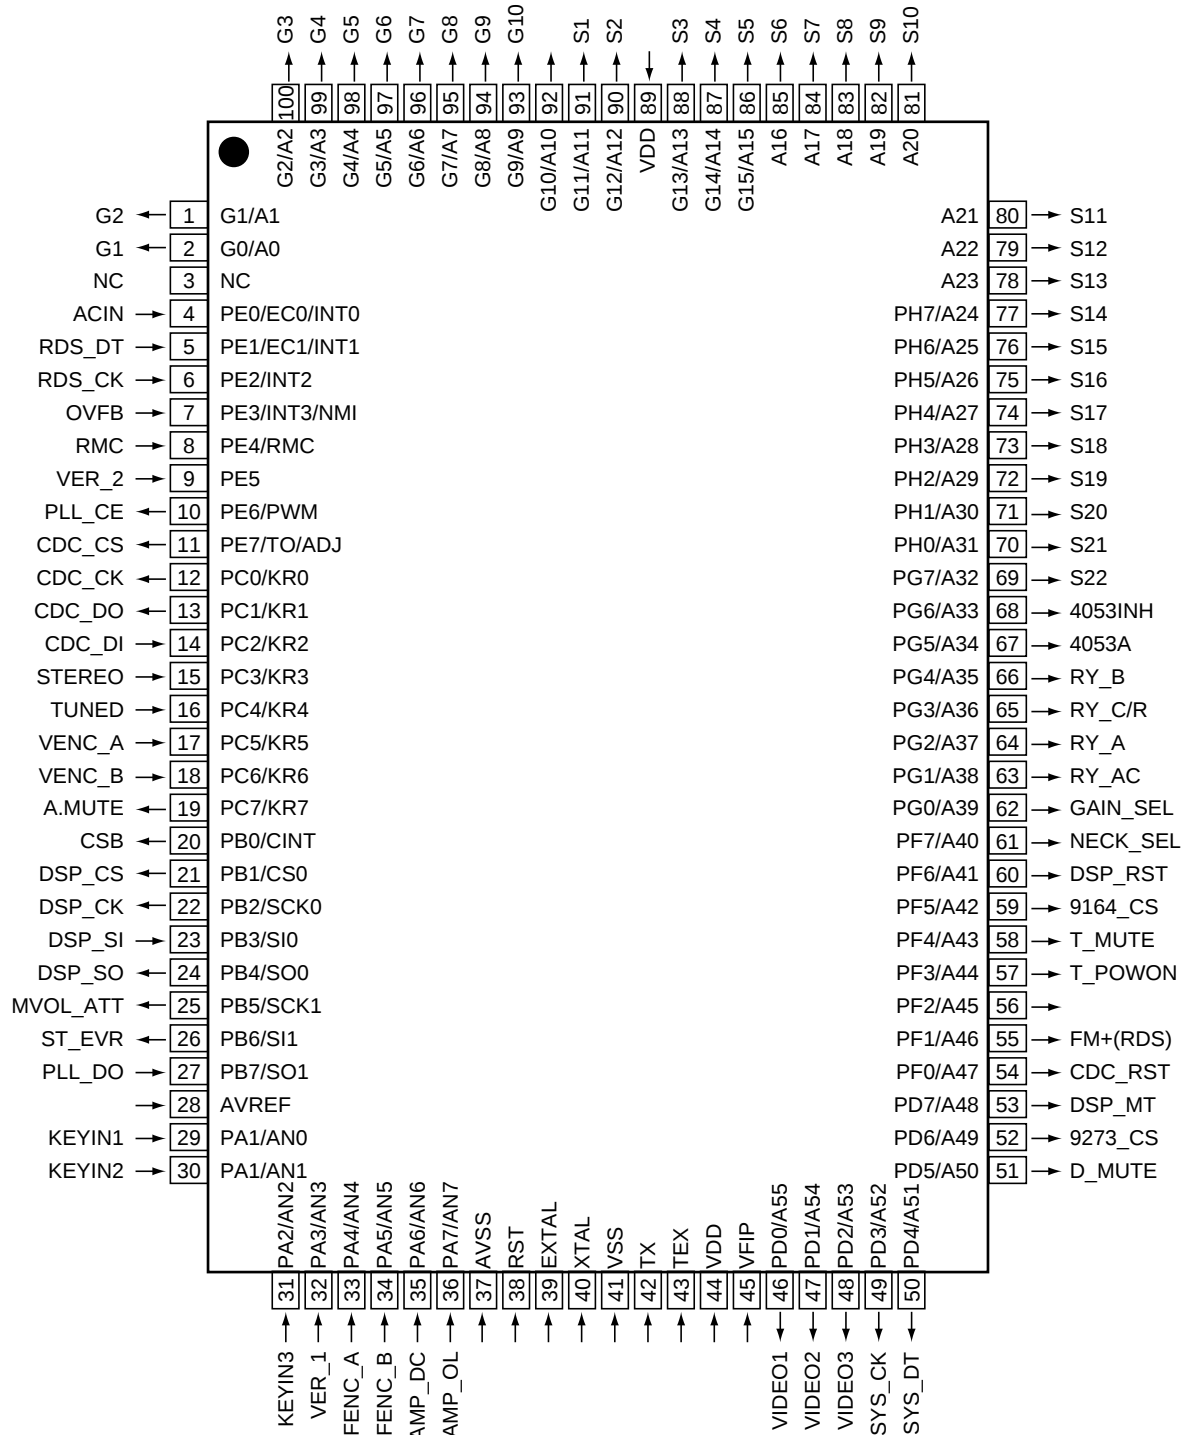

● Pin Function

No.	Pin Name	I/O	Pin Function	Active
1	G2	O	Grid output 2	H
2	G1	O	Grid output 1	H
3	NC	–	Connect to VDD	
4	ACIN	I	AC pulse input	
5	RDS_DT	I	Serial control DATA signal of RDS communication	
6	RDS_CK	I	Serial control CLOCK signal of RDS communication	
7	DIRLOCK	I	ERR/OVER input from CODEC	
8	RMC	I	Remote control signal input (no-carrier signal)	
9	VER_2	I	Destination switch 2	
10	PLL_CE	O	Chip select signal for communication with LC72131 (tuner)	H
11	CDC_CS	O	CODEC chip select	
12	CDC_CK	O	CODEC, TC9164 control clock	
13	CDC_DO	O	CODEC, TC9164 control data output	
14	CDC_DI	I	Data input from CODEC	
15	STEREO	I	Stereo/Monoral signal judgment signal	
16	TUNED	I	TUNED information	
17	ENC_A	I	EVOL Rotary encoder signal input A	
18	ENC_B	I	EVOL Rotary encoder signal input B	
19	AMUTE	O	Audio mute	L
20	CSB	O	Chip select for control of YSS912 sub DSP	L
21	DSP_CS	O	Chip select for control of YSS912 main DSP	L
22	DSP_CK	O	Clock signal for communication with YSS912	H
23	DSP_SI	I	DATA input signal for communication with YSS912	
24	DSP_SO	O	DATA output signal for communication with YSS912	H
25	MVRATT	O	ATT control of master volume (L : Less than -15dB)	H
26	ST_EVR	O	Strobe signal for communication with electric volume IC	H
27	PLL_DO	I	Data input signal for communication with LC72131 (tuner)	
28	AVref	–	Connect to VDD	
29	KEYIN1	I	Key input A/D conversion port 1	
30	KEYIN2	I	Key input A/D conversion port 2	
31	KEYIN3	I	Key input A/D conversion port 3	
32	VER_1	I	Destination switch (A/D input)	
33	FENC_A	I	FUNC Rotary encoder signal input A	
34	FENC_B	I	FUNC Rotary encoder signal input B	
35	AMP_DC	I	DC abnormality detection of protection circuit (L : Abnormality detection) *1	L
36	AMP_OL	I	Over-load detection of protection circuit (L : Abnormality detection) *2	L
37	AVSS	–	Connect to VSS	
38	RST	–	Reset	
39	EXTAL	–	Connect to the oscillator (7.2MHz)	
40	XTAL	–		
41	VSS	–	Connect to VSS	
42	TX	–	Open	
43	TEX	–	Connect to VSS	
44	VDD	–	+5V	
45	VFDP	–	-30V	
46	VIDEO1	O	NJM2296D control	H
47	VIDEO2			
48	VIDEO3			
49	SYS_DT	O	Data signal for communication with M62446, TC9163, TC9164 and PLL	H
50	SYS_CK	O	Clock signal for communication with M62446, TC9163, TC9164 and PLL	H

*1 : When DC voltage was output from amplifier, "POWER OFF" is displayed at FL display.

*2 : When the output of amplifier became overload state, "OVER LOAD" is displayed at FL display.


No.	Pin Name	I/O	Pin Function	Active
51	D_MUTE	O	Digital mute (Not used)	H
52	9273_CS	O	TC9273 Chip select	H
53	DSP_MT	O	DSP mute (ASSY mute)	H
54	CDC_RST	O	CODEC reset	H
55	FM+(RDS)	O	Tr switch ON/OFF for power supply of RDS decoder (L : AM, power OFF , H : Other)	H
56	Not used	–		
57	T_POWON	O	Tuner module ON/OFF (North America model only)	H
58	T_MUTE	O	Tuner mute	H
59	9164_CS	O	TC9163, TC9164 Chip select	
60	DSP_RST	O	YSS912 reset	
61	NECK_SEL	O	5.1ch, surround mode and A+B Stereo : H / Stereo : L	
62	GAIN_SEL	O	Gain select (5.1ch and Stereo of analog input : H)	H
63	RY_AC	O	AC relay ON/OFF	H
64	RY_A	O	Speaker A relay ON/OFF	H
65	RY_C/R	O	Rear/Center Speaker relay ON/OFF	H
66	RY_B	O	Speaker B relay ON/OFF	H
67	4053A	O	Component terminal control	H
68	4053INH	O	Component terminal control	H
69	S22	O	Segment output 22	H
70	S21		Segment output 21	
71	S20		Segment output 20	
72	S19		Segment output 19	
73	S18		Segment output 18	
74	S17		Segment output 17	
75	S16		Segment output 16	
76	S15		Segment output 15	
77	S14		Segment output 14	
78	S13		Segment output 13	
79	S12		Segment output 12	
80	S11		Segment output 11	
81	S10		Segment output 10	
82	S9		Segment output 9	
83	S8		Segment output 8	
84	S7		Segment output 7	
85	S6		Segment output 6	
86	S5		Segment output 5	
87	S4		Segment output 4	
88	S3		Segment output 3	
89	VDD	–	5V	
90	S2	O	Segment output 2	H
91	S1		Segment output 1	
92	Not used	O	Not used (Fixed Vfdp)	
93	G10	O	Grid output 10	H
94	G9		Grid output 9	
95	G8		Grid output 8	
96	G7		Grid output 7	
97	G6		Grid output 6	
98	G5		Grid output 5	
99	G4		Grid output 4	
100	G3		Grid output 3	

7.2.2 DISPLAY


■ XAV3010 (FRONT ASSY : V401)

• FL DISPLAY


• Pin Assignment

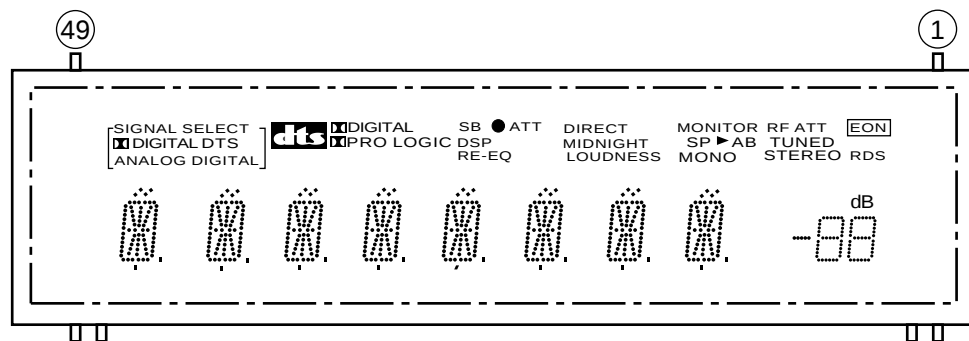

• Grid Assignment

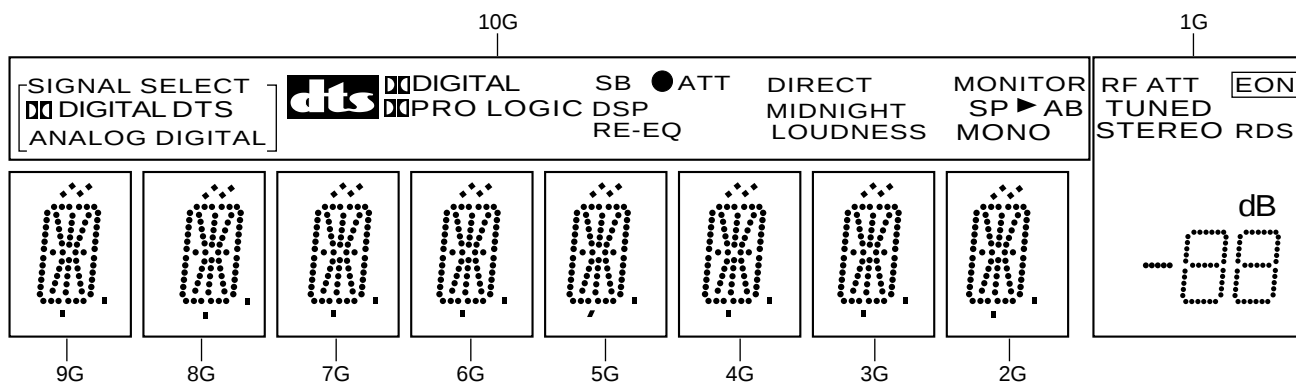

• Segment Designation

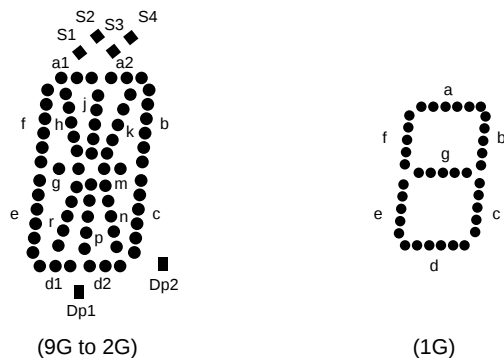

• Pin Connection

Pin No.	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25
Connection	F2	F2	NP	NP	P22	P21	P20	P19	P18	P17	P16	P15	P14	P13	P12	P11	P10	P9	P8	P7	P6	P5	P4	P3	P2
Pin No.	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
Connection	P1	NX	NX	NX	NX	NX	NX	NX	NX	NX	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G	NP	NP	F1	F1	

NOTE 1) F1, F2..... Filament
 2) NP..... No pin
 3) NX..... No extend pin
 4) DL..... Datum Line
 5) 1G to 10G..... Grid
 6) Field of vision is a minimum of 29° from the lower side.


• Anode Connection

	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	MONO	a1	a1	a1	a1	a1	a1	a1	a1	dB
P2	B	a2	a2	a2	a2	a2	a2	a2	a2	2a
P3	A	h	h	h	h	h	h	h	h	2b
P4	SP ►	j	j	j	j	j	j	j	j	2f
P5	MONITOR	k	k	k	k	k	k	k	k	2g
P6	LOUDNESS	b	b	b	b	b	b	b	b	2c
P7	MIDNIGHT	f	f	f	f	f	f	f	f	2e
P8	DIRECT	m	m	m	m	m	m	m	m	2d
P9	DNR	g	g	g	g	g	g	g	g	1a
P10	ATT	c	c	c	c	c	c	c	c	1b
P11	●	e	e	e	e	e	e	e	e	1f
P12	DSP	r	r	r	r	r	r	r	r	1g
P13	SB	p	p	p	p	p	p	p	p	1c
P14	PRO LOGIC	n	n	n	n	n	n	n	n	1e
P15	DIGITAL	d1	d1	d1	d1	d1	d1	d1	d1	1d
P16	DS	d2	d2	d2	d2	d2	d2	d2	d2	
P17	ANALOG	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	RDS
P18	DIGITAL	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	RF ATT
P19	[]	S1	S1	S1	S1	S1	S1	S1	S1	EON
P20	DTS	S4	S4	S4	S4	S4	S4	S4	S4	
P21	DIGITAL	S2	S2	S2	S2	S2	S2	S2	S2	TUNED
P22	SIGNAL SELECT	S3	S3	S3	S3	S3	S3	S3	S3	STEREO

8. PANEL FACILITIES AND SPECIFICATIONS


8.1 PANEL FACILITIES

Front Panel

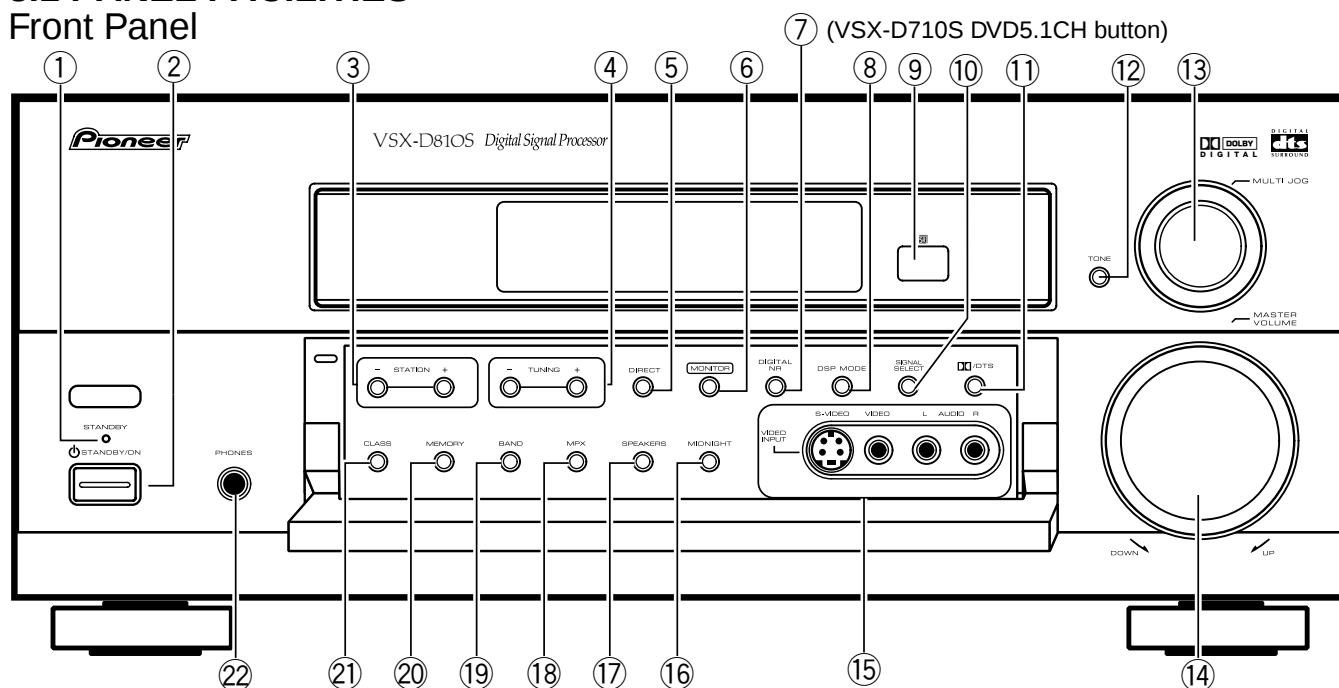

- ① **STANDBY indicator**
Lights when the receiver is in standby mode (note that the receiver consumes a small amount of power (1W) in standby mode).
- ② **STANDBY/ON button**
Switches the receiver between on and standby (note that the receiver consumes a small amount of power (1W) in standby mode).
- ③ **STATION (+/-) buttons**
Selects station memories when using the tuner.
- ④ **TUNING (+/-) buttons**
Selects the frequency when using the tuner.
- ⑤ **DIRECT button**
Use to switch DIRECT playback on or off. This mode bypasses the tone controls, channel levels, DOLBY/DTS and DSP modes for the most accurate reproduction of a program source.
- ⑥ **MONITOR button**
Press to switch tape monitoring on/off.
- ⑦ **DVD5.1CH button (VSX-D710S)**
On the VSX-D710S this button switches between DVD5.1CH input and regular DVD input.
- ⑧ **DSP MODE button**
Use to switch between the various DSP modes available (**HALL1**, **HALL 2**, **JAZZ**, **DANCE**, **THEATER1**, **THEATER 2**, and **DSP off**). Use this button to create different surround sound effects from any stereo source.
- ⑨ **Remote sensor**
Receives the signals from the remote control.
- ⑩ **SIGNAL SELECT button**
Use to select an analog or digital signal.
- ⑪ **DOLBY /DTS button**
Use to switch between the various Dolby/DTS surround modes.
- ⑫ **TONE button**
This button allows you to activate the **BASS & TREBLE** controls. To adjust the **BASS** and/or **TREBLE** use the
- MULTI JOG DIAL.** Tone can only be used in 2 channel stereo sound mode. The tones controls have no effect on the **B** speaker system.
- ⑬ **MULTI JOG dial**
You can use this dial for two purposes. Firstly, in normal mode turn it to select a source component. Secondly, use it to adjust the **BASS** and/or **TREBLE** levels when the **TONE** button has been activated (as explained above).
- ⑭ **MASTER VOLUME**
Use to set the overall listening volume.
- ⑮ **VIDEO INPUT jacks**
Connect a video camera, video game system, etc. to the **VIDEO INPUT** jacks.
- ⑯ **MIDNIGHT button**
Use when listening to movie soundtracks at low volume. This feature will enable you to hear quiet sounds and not get jolted by loud or sudden sound effects.
- ⑰ **SPEAKERS button**
Use to switch the speaker system **A** → **B** → **A+B** → **off**. In **B** and **A+B** speaker modes you hear only 2 channel stereo sound.
- ⑱ **MPX button**
If the **TUNED** or **STEREO** indicators don't light when tuning to an FM station because the signal is weak, press the **MPX** button to switch the receiver into mono reception mode. This should improve the sound quality and allow you to enjoy the broadcast.
- ⑲ **BAND button**
Press to select the **AM** or **FM** band.
- ⑳ **MEMORY button**
Press to memorize a station for recall using the **STATION (+/-)** buttons.
- ㉑ **CLASS button**
Switches between the three banks (classes) of station memories.
- ㉒ **PHONES jack**
Use to connect headphones but this does not switch the speakers off.

Display

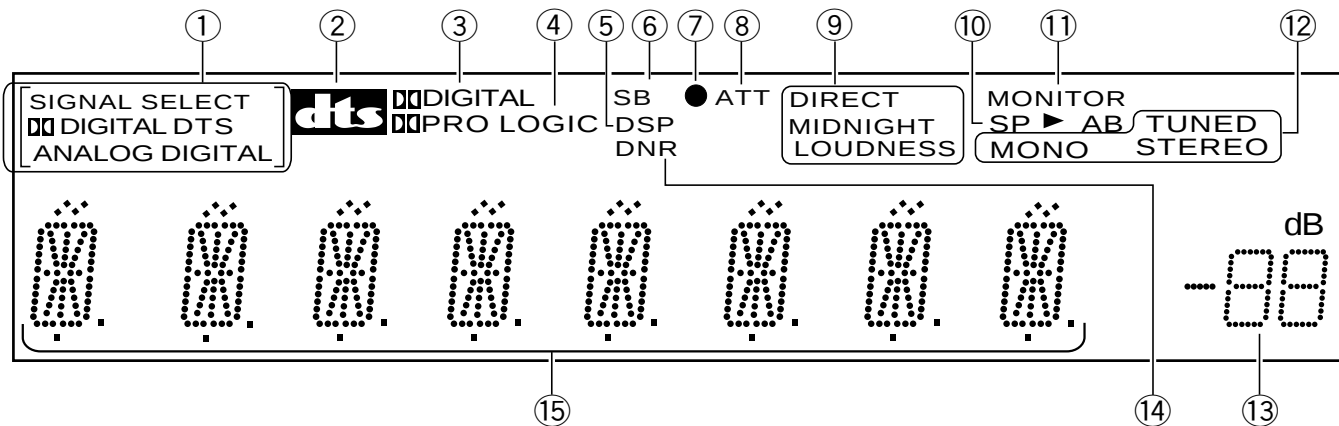

① SIGNAL SELECT indicators

Light to indicate the type of input signal assigned for the current component (see "Front Panel", ⑩ SIGNAL SELECT).

DIGITAL : Lights when a DOLBY DIGITAL signal is played.

DTS: Lights when a source with DTS audio signals is played.

ANALOG : Lights when an analog signal is selected.

DIGITAL : Lights when a digital audio signal is selected.

② DTS indicator

Lights when DTS mode is being used.

③ DIGITAL indicator

When the **DIGITAL** (DOLBY)/DTS mode of the receiver is on, this lights to indicate playback of a Dolby Digital signal. However, **PRO LOGIC** lights during **DIGITAL** channel playback of Dolby Digital.

④ PRO LOGIC indicator

When the **DIGITAL** (DOLBY)/DTS mode of the receiver is on, this lights to indicate playback of a Dolby Pro Logic source.

⑤ DSP indicator

Lights when any Advanced Theater or DSP mode is selected.

⑥ Surround Back indicator (Not used for VSX-D710S)

Lights when most Surround Back channel flag encoded (6.1channel) software is playing. (With some Surround Back channel software the surround back indicator won't light because there is no flag encoded in the software.) If you play DTS 5.1/6.1 channel software surround sound will be heard whether it is encoded with a surround back channel flag or not.

⑦ OVERLOAD indicator

This lights when an analog signal is too strong (the SIGNAL SELECT needs to be on ANALOG). It indicates the sound is distorting and the input signal should be reduced.

⑧ ATT indicator

Lights when ATT is used to attenuate (reduce) the level of the input signal (can only be used in ANALOG mode).

⑨ DIRECT indicator

Lights when source DIRECT is in use. This function bypasses all tone, channel levels, DSP and Dolby Surround effects.

MIDNIGHT indicator

Lights when MIDNIGHT listening mode is in use.

LOUDNESS indicator

Lights when the LOUDNESS is on. LOUDNESS is used to boost the bass and treble when listening at low levels.

⑩ SPEAKER indicator

Shows if the speaker system is on or not. SP ► A (and/or) B means speakers are switched on. SP ► means speakers are switched off.

⑪ MONITOR indicator

Lights when **MONITOR** is selected to hear a recording as it's being made.

⑫ TUNER indicators

MONO:

Lights when the mono mode is set using the MPX MODE button.

TUNED:

Lights when a broadcast is being received.

STEREO:

Lights when a stereo FM broadcast is being received in auto stereo mode.

⑬ MASTER VOLUME LEVEL

Shows the overall volume level. Volume level is maintained even when the power is off. ---dB indicates the minimum level, and 0dB indicates the maximum level.

- Depending on the level settings you make for individual channels, the MAX level can range between -10dB and 0dB.


⑭ DNR indicator (Not used for VSX-D710S)

Lights when the digital noise reduction is on. Use to reduce extraneous noise. It can be used with any sound mode.

⑮ CHARACTER display

Shows the radio frequency or function (DVD/LD, CD, etc.) receiver is using.

Remote Control

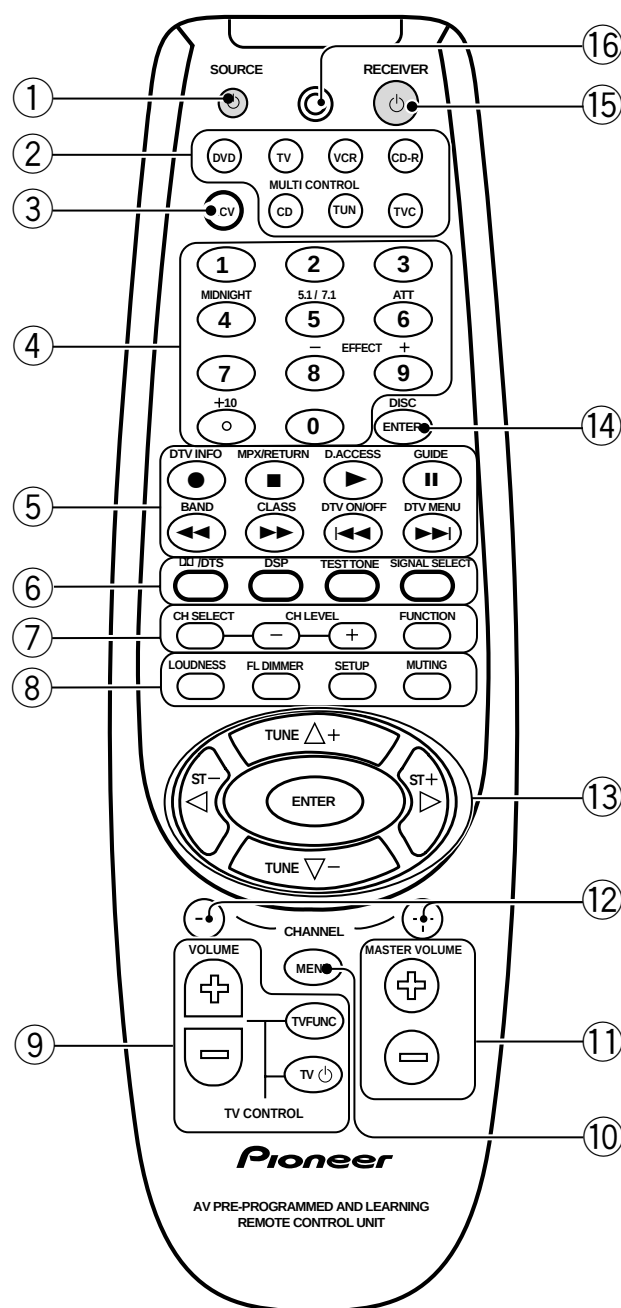① **SOURCE** button

Use to turn on/off other components connected to the receiver.

② **MULTI CONTROL** buttons

Use to put the receiver/remote control in the stated mode.

③ **RCV** button

Use this button when setting up the surround sound for the receiver. Also press it if you want to use special features attached to some of the number buttons, for example MIDNIGHT, 5.1/7.1, or ATT.

④ **NUMBER/MODE** buttons

Use the number buttons to select the radio frequency in tuner DIRECT ACCESS mode or the tracks in CD, DVD mode etc.

Also, buttons marked with the following names have special functions. If you try to use one of these functions but the display flashes it means that function cannot be used in the current mode (for example DSP modes cannot be used when 5.1 Ch setting is on).

MIDNIGHT

Use to put receiver in MIDNIGHT mode. To use first press the **RCV** button then operate this button.

5.1 Ch (VSX-D710S)

When the DVD/LD or DVD 5.1/7.1 Ch function is selected each press switches the DVD/LD input between DVD/LD and DVD 5.1/7.1 Ch. To use first press the **RCV** button then operate this button.

ATT

When the overload indicator lights use this button to attenuate (lower) the level of an analog input signal and prevent distortion. To use first press the **RCV** button then operate this button.

EFFECT +/- buttons

Use to add or subtract the amount of effect in different DSP sound modes (except 6 Ch Stereo) or advanced listening modes.

To use first press the **RCV** button then operate these buttons.

⑤ **THE FOLLOWING BUTTONS ARE BOTH CONTROLS FOR OTHER COMPONENTS (LIKE A DVD PLAYER) AND DEDICATED TUNER CONTROLS. THE TUNER CONTROLS ARE EXPLAINED HERE. YOU CAN USE THEM AFTER YOU HAVE PUSHED THE TUNER MULTI CONTROL BUTTON.**

BAND button

Use to switch between the AM and FM band when in TUNER mode.

CLASS button

Use to switch between the three banks (classes) of station memories.

MPX/RETURN button

Use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to MONO will improve the sound quality. Also, this is the pause button for CDs, tapes, DVDs, etc.

D. ACCESS button

Use to directly access a radio station by pressing the number of the station you want.

DTV INFO button

Use to bring up information screens on a digital TV.

DTV MENU button

Use to bring up menus on a digital TV.

DTV ON/OFF button

Use to turn a digital TV on/off.

GUIDE button

Use to bring up the guides on a digital TV.

⑥ **DD /DTS button**

Use to put receiver in DOLBY DIGITAL, DOLBY SURROUND and DTS modes.

DSP button

Use to put receiver in one of the DSP modes.

TEST TONE button

Use to sound the TEST TONE when setting up the surround sound of the receiver (the DD /DTS mode must be on).

SIGNAL SELECT

Use to select the proper signal (analog, digital) for the source you are inputting.

⑦ **CH SELECT button**

Use to select a speaker when setting up the surround sound of the receiver. To use first press the RCV button then operate this button.

CH LEVEL +/-

Use to set up the levels of the surround sound of the receiver. To use first press the RCV button then operate this button.

FUNCTION button

Use to select the playback or recording source. This button lets you cycle through the different functions of the receiver in the following order: CD, TUNER, AUX, CDR/TAPE, VCR/DVR, DVD/LD, VIDEO, and TV/SAT.

⑧ **LOUDNESS button**

Use to switch on the loudness. This feature is useful for getting good bass and treble sounds listening at low volumes.

FL DIMMER button

Use this button to make the fluorescent display (FL) dimmer or brighter. There are three brightness settings as well as an off setting.

SETUP button

Use this button when setting up the remote control to control other components.

MUTING button

Use to mute the sound or restore the sound if it has been muted.

⑨ **THE FOLLOWING BUTTONS ARE DEDICATED TV CONTROL. THEY ARE ONLY USED FOR CONTROLLING YOUR TV.**

TV FUNC button

Use select the TV function.

TV $\odot$ button

Use to turn on/off the power of the TV.

TV VOLUME +/- buttons

Use to adjust the volume on your TV.

⑩ **MENU button**

Use to access different menus associated with your DVD player.

⑪ **MASTER VOLUME +/- buttons**

Use to set the overall listening volume.

⑫ **CHANNEL +/- buttons**

Use to select the stations of memorized radio frequencies. Also use to skip tracks backward or forward on CDs, DVDs, etc.

⑬ **$\triangleleft \triangleright \triangle \nabla$ (TUNE/ST +/-) & ENTER buttons**

Use these arrow buttons when setting up your surround sound system. These buttons are also used to control DVD menus/options and for deck 1 of a double cassette deck player. The TUNE/ST +/- buttons can be used to find radio frequencies and preset stations, respectively.

⑭ **DISC (ENTER) button**

Use to select a disc in a multi-CD player. To use first press the RCV button then operate this button.


⑮ **RECEIVER $\odot$ (POWER) button**

This switches between STANDBY mode and power ON for this receiver.

⑯ **LED DISPLAY**

This display flashes when a command is sent from the remote control to the receiver. It also flashes at other times, for example when teaching the receiver preset codes, with specific meanings.

Rear Panel

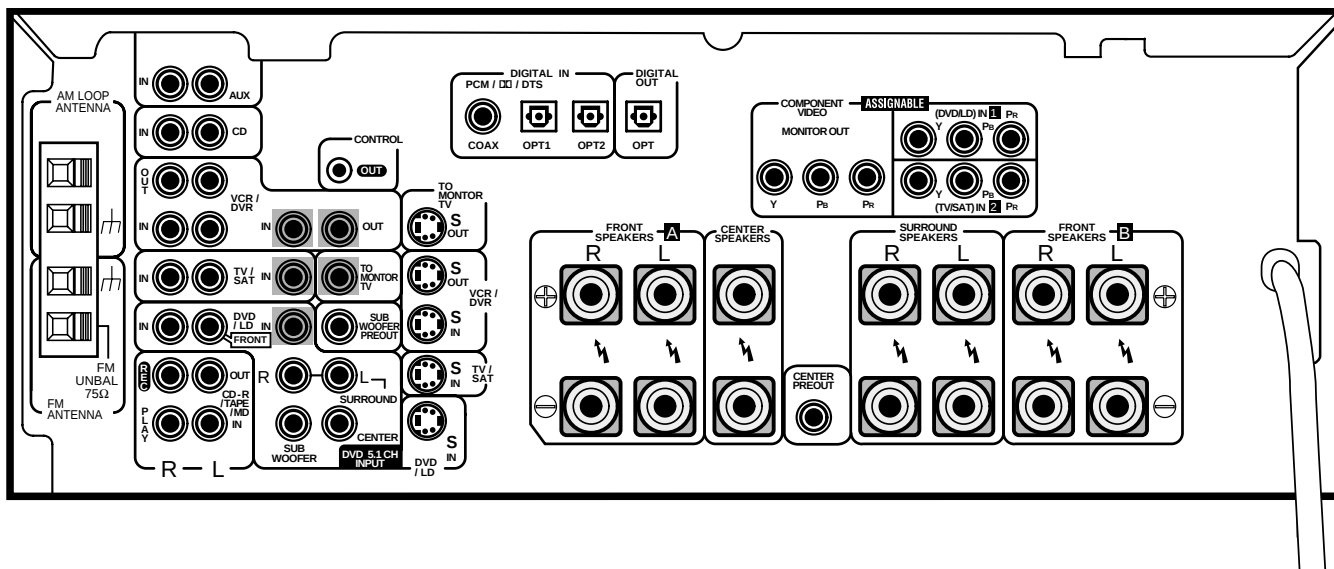

8.2 SPECIFICATIONS

Amplifier Section

Continuous average power output of 100 watts per channel, min., at 8 ohms, from 20 Hz to 20,000 Hz with no more than 0.2 % total harmonic distortion (front).**

Continuous Power Output

Front 100 W per channel (1kHz, 1.0 %, 8 Ω)
Center 100 W (1kHz, 1.0 %, 8 Ω)
Surround 100 W per channel (1kHz, 1.0 %, 8 Ω)

Input (Sensitivity/Impedance)

CD, AUX, VCR/DVR, CD-R/TAPE/MD, DVD/LD,
TV/SAT, VIDEO 200 mV/47 k Ω

Frequency Response

CD, AUX, VCR/DVR, CD-R/TAPE/MD, DVD/LD,
TV/SAT, VIDEO 5 Hz to 100,000 Hz ± 0.5 dB

Output (Level/Impedance)

VCR/DVR REC, CD-R/TAPE/MD REC 200 mV/2.2 k Ω

Tone Control

BASS ± 6 dB (100 Hz)
TREBLE ± 6 dB (10 kHz)
LOUDNESS +9 dB (100 Hz/10 kHz)

Signal-to-Noise Ratio (IHF, short circuited, A network)

CD, AUX, VCR/DVR, CD-R/TAPE/MD, DVD/LD,
TV/SAT, VIDEO 96 dB

Signal-to Noise Ratio [EIA, at 1 W (1 kHz)]

CD, AUX, VCR/DVR, CD-R/TAPE/MD, DVD/LD,
TV/SAT, VIDEO 79 dB

Video Section

Input (Sensitivity/Impedance)

VCR/DVR, DVD/LD, TV/SAT, VIDEO 1 Vp-p/75 Ω

Output (Level/Impedance)

VCR/DVR 1 Vp-p/75 Ω

Frequency Response

VCR/DVR, DVD/LD, TV/SAT, VIDEO $\rightarrow$ MONITOR
..... 5 Hz to 7 MHz ± 0.5 dB

Signal-to-Noise Ratio 55 dB

Cross Talk 55 dB

FM Tuner Section

Frequency Range 87.5 MHz to 108 MHz

Usable Sensitivity Mono:13.2 dBf, IHF (1.3 μ V/ 75 Ω)

50 dB Quieting Sensitivity Mono: 20.2 dB
Stereo: 38.6 dBf

Signal-to-Noise Ratio Mono: 73 dB (at 85 dBf)
Stereo: 70 dB (at 85 dBf)

Distortion Stereo: 0.5 % (1 kHz)

Alternate Channel Selectivity 60 dB (400 kHz)

Stereo Separation 40 dB (1 kHz)

Frequency Response 30 Hz to 15 kHz (± 1) dB

Antenna Input (DIN) 75 Ω unbalanced

AM Tuner Section

Frequency Range 530 kHz to 1,700 kHz

Sensitivity (IHF, Loop antenna) 350 μ V/m

Selectivity 25 dB

Signal-to-Noise Ratio 50 dB

Antenna Loop antenna

Miscellaneous

Power Requirements AC 120 V, 60 Hz

Power Consumption 250 W
350 VA

In Standby 1 W

AC Outlet 100 W MAX. (SWITCHED)

Dimensions 420 (W) x 158 (H) x 401 (D) mm
(16-9/16 (W) x 6-4/16 (H) x 15-13/16 (D) in.)

Weight (without package) 8.8 kg (19 lb 7 oz)

Furnished Parts

FM wire Antenna 1

AM loop Antenna 1

Dry Cell Batteries : AA Size / IEC R6P 2

Remote Control Unit 1

Operating Instructions 1

NOTE:


- Specifications and the design are subject to possible modifications without notice, due to improvements.

** Measured by Audio Spectrum Analyzer.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

"DTS", "ES" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. Manufactured under license from Digital Theater Systems, Inc.


Accessories

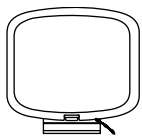


AM loop antenna
(ATB7009)



FM wire antenna
(ADH7004)




AA size IEC R6P
Dry cell batteries (x2)



Remote control unit
(XXD3028)

Service Manual

Pioneer

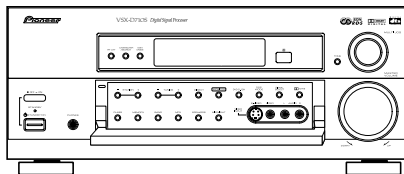

ORDER NO.
RRV2432

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D710S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	Remarks
	VSX-D710S		
MYXJIEW	○	AC220-230V	
MYXJIGR	○	AC220-230V	
MVXJI	○	AC230V	

CONTENTS

1. SAFETY INFORMATION	2	7. GENERAL INFORMATION	48
2. EXPLODED VIEWS AND PARTS LIST	3	7.1 DISASSEMBLY AND DIAGNOSIS	48
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	8	7.2 PARTS	50
4. PCB CONNECTION DIAGRAM	28	7.2.1 IC	50
5. PCB PARTS LIST	43	7.2.2 DISPLAY	53
6. ADJUSTMENT	47	8. PANEL FACILITIES AND SPECIFICATIONS	55

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
 © PIONEER CORPORATION 2001

T – ZZK MAR. 2001 Printed in Japan

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

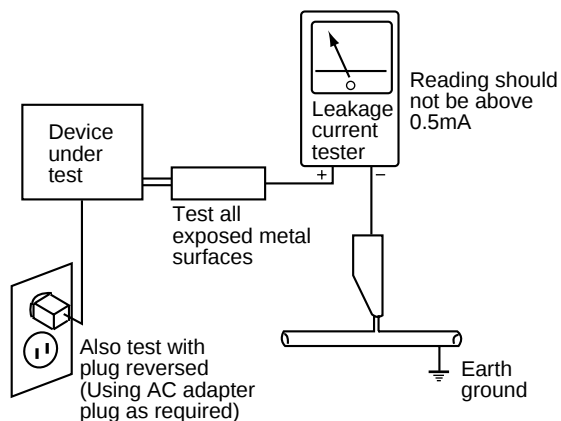

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.


The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 ● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 ● Screws adjacent to ∇ mark on the product are used for disassembly.

2.1 PACKING

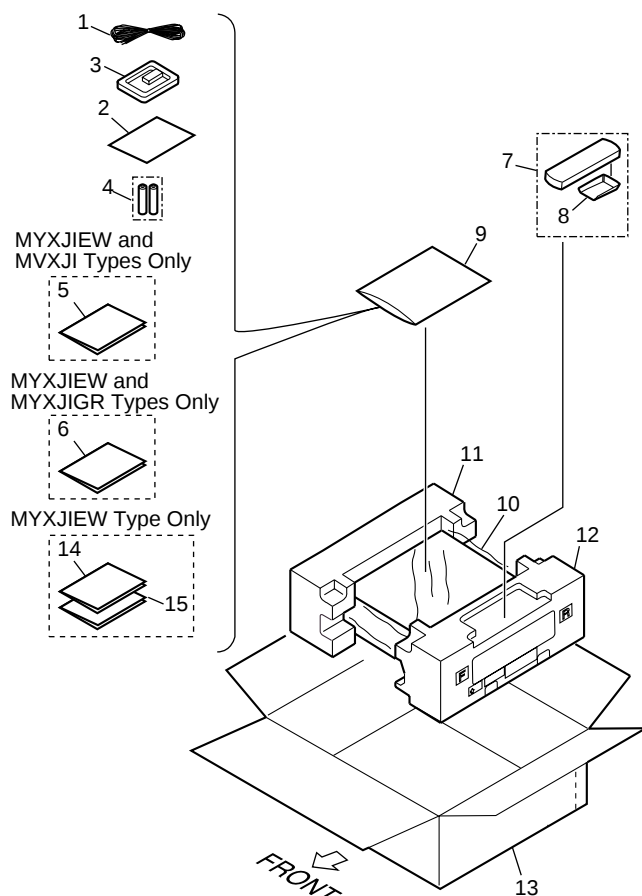

(1) PACKING PARTS LIST


Mark	No.	Description	Part No.
NSP	1	FM Wire Antenna	ADH7005
	2	Warranty Card	ARY7022
	3	AM Loop Antenna	ATB7009
NSP	4	Dry Cell Battery (R6P, AA)	VEM-013
	5	Operating Instructions (English)	See Contrast table (2)
	6	Operating Instructions (German)	See Contrast table (2)
	7	Remote Control Unit	XXD3029
	8	Battery Cover	XZA3002
NSP	9	Polyethylene Bag (0.03 x 230 x 340)	Z21-038
	10	Packing Sheet	AHG7069
	11	Left Pad R4	XHA3024
	12	Right Pad R4	XHA3025
	13	Packing Case 710/MY	XHD3151
	14	Operating Instructions (Dutch/Swedish/Portuguese)	See Contrast table (2)
	15	Operating Instructions (French/Italian/Spanish)	See Contrast table (2)

(2) CONTRAST TABLE

VSX-D710S/MYXJIEW, MYXJIGR and MVXJI are constructed the same except for the following :

Mark	No.	Symbol and Description	Part No.			Remarks
			VSX-D710S /MYXJIEW	VSX-D710S /MYXJIGR	VSX-D710S /MVXJI	
	5	Operating Instructions (English)	XRB3005	Not used	XRB3005	
	6	Operating Instructions (German)	XRC3031	XRC3031	Not used	
	14	Operating Instructions (Dutch/Swedish/Portuguese)	XRC3032	Not used	Not used	
	15	Operating Instructions (French/Italian/Spanish)	XRC3033	Not used	Not used	

2.2 EXTERIOR SECTION

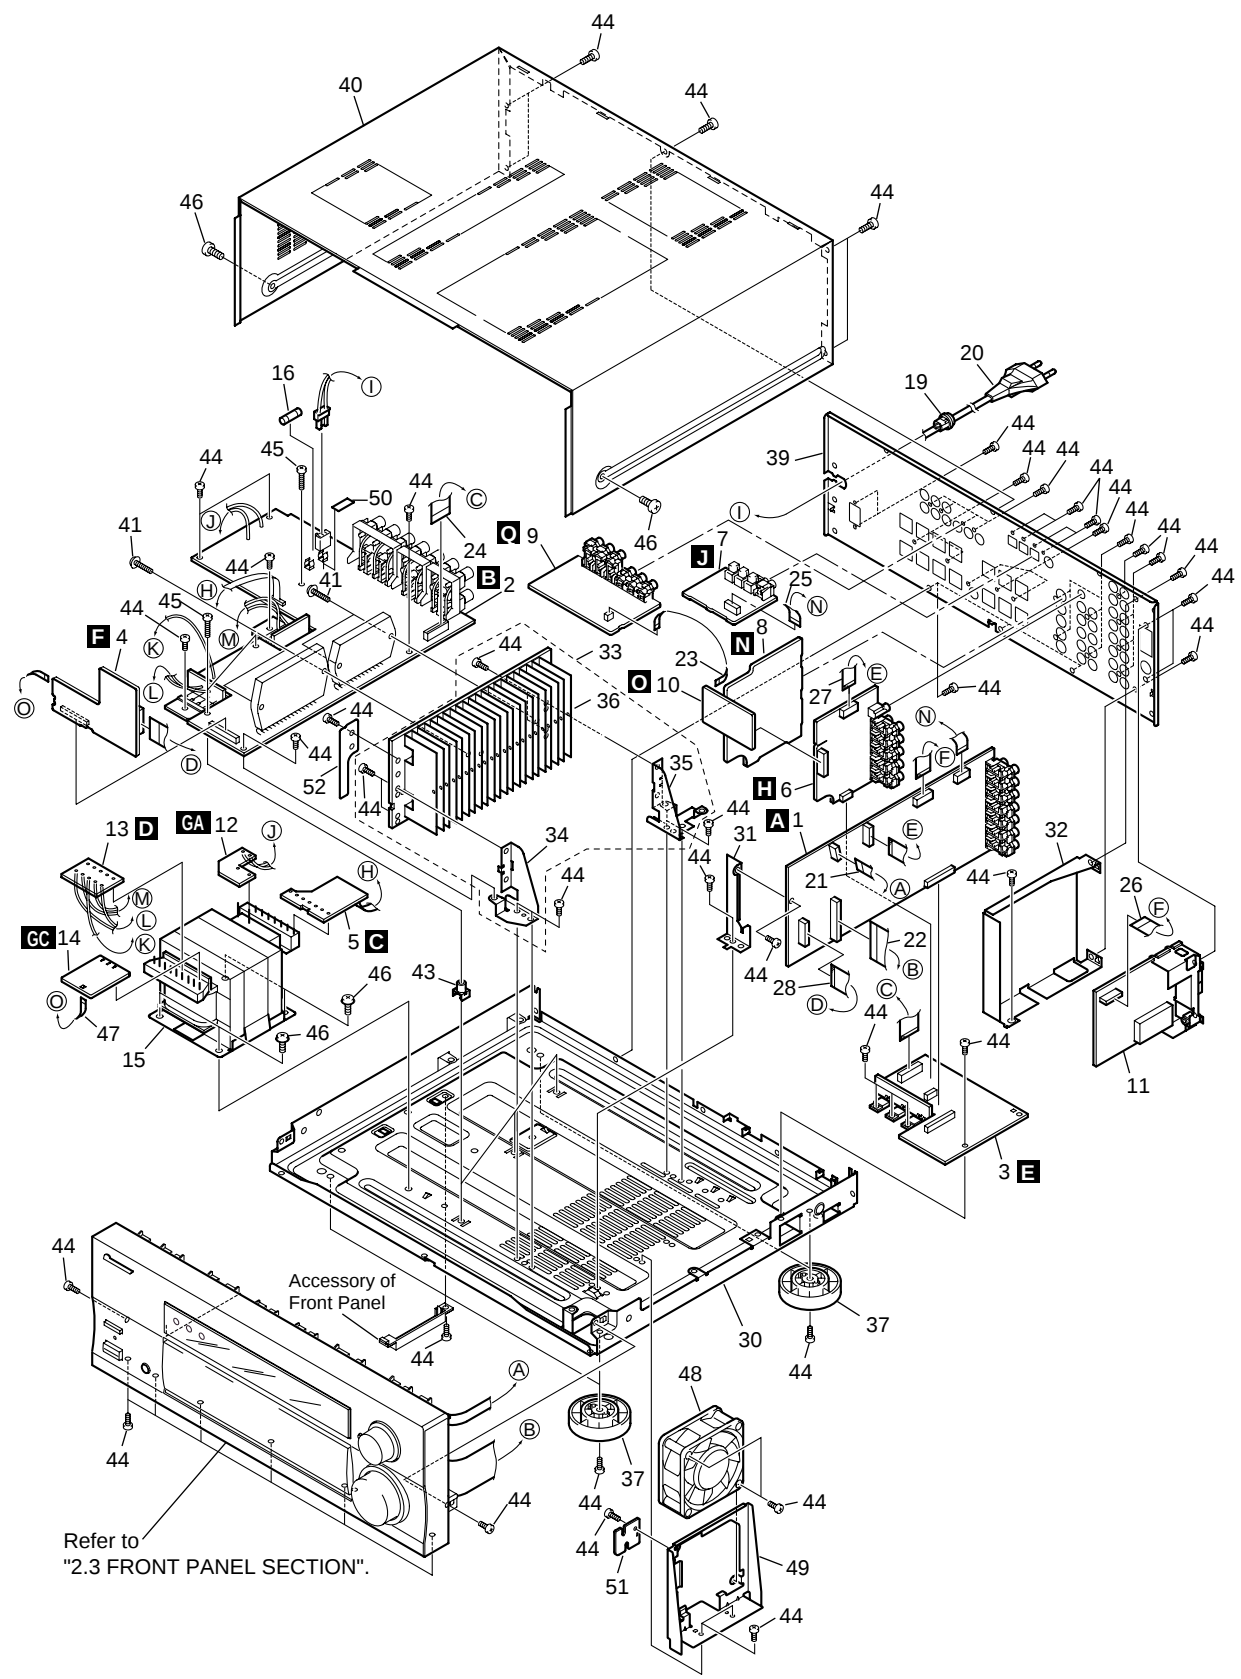

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	D.D & INPUT Assy	XWX3027		26	FFC (J34 : 13P/30V) (D.D & INPUT CN105 ↔ FM/AM TUNER UNIT)	XDD3059
	2	AMP&PRIMARY Assy	XWZ3377		27	FFC (J33 : 14P/30V) (D.D & INPUT CN104 ↔ VIDEO&6CH IN CN303)	XDD3060
	3	REGULATOR Assy	XWZ3385		28	FFC (J35 : 17P/30V) (D.D & INPUT CN106 ↔ AMP INPUT CN254)	XDD3072
	4	AMP INPUT Assy	XWZ3387		29	*****	
	5	TRANS 2 Assy	XWZ3403	NSP	30	Under Base 409	ANA7094
	6	VIDEO&6CH IN Assy	XWZ3334		31	PCB Angle	ANG7253
	7	DIGITAL IN Assy	XWZ3361		32	Shield R3	ANG7277
	8	S. VIDEO Assy	XWZ3362	NSP	33	Heat Sink Assy R4BX	XNH3023
	9	COMPONENT Assy	XWZ3365		34	Heat Sink Angle F	ANG7251
	10	BOARD TO BOARD Assy	XWZ3370		35	Heat Sink Angle R	ANG7252
NSP	11	FM/AM TUNER Unit	AXX7048	NSP	36	Heat Sink R4BX	XNH3022
NSP	12	TRANS 1 Assy	XWZ3390		37	Insulator	PNW2766
	13	TRANS 3 Assy	XWZ3392		38	*****	
	14	TRANS 4 Assy	XWZ3369		39	Rear Panel 710/MY	XNC3072
△	15	Power Transformer (T1) (AC220-230V)	XTS3046		40	Bonnet Case	XZN3112
△	16	Fuse (FU1 : T2.5A)	REK1026	NSP	41	Screw	ABA7043
	17	*****			42	*****	
	18	*****			43	PCB Mold	AMR2533
	19	Strain Relief	CM-22B		44	Screw	BBZ30P080FMC
△	20	AC Power Cord	See Contrast table (2)		45	Screw	BBZ30P200FMC
	21	FFC (J32 : 19P/30V) (D.D & INPUT CN103 ↔ FRONT CN401)	XDD3054		46	Screw	FBT40P080FZK
	22	FFC (J31 : 33P/30V) (D.D & INPUT CN102 ↔ FRONT CN402)	XDD3055		47	FFC (J22 : 3P/30V) (TRANS 4 CN891 ↔ AMP INPUT CN251)	XDD3061
	23	FFC (J38 : 5P/30V) (BOARD TO BOARD CN392 ↔ COMPONENT CN5501)	XDD3056		48	Fan Motor	XXM3002
	24	FFC (J36 : 22P/30V) (REGULATOR CN801 ↔ AMP&PRIMARY CN53)	XDD3057	NSP	49	Fan Holder R4	XNG3040
	25	FFC (J37 : 6P/30V) (D.D & INPUT CN1501 ↔ DIGITAL IN CN1901)	XDD3058	NSP	50	Fuse Card	AAX7277
				NSP	51	Binder Assy	XWZ3401
				NSP	52	Hold Assy	XWZ3402

(2) CONTRAST TABLE

VSX-D710S/MYXJIEW, MYXJIGR and MVXJI are constructed the same except for the following :

Mark	No.	Symbol and Description	Part No.			Remarks
			VSX-D710S /MYXJIEW	VSX-D710S /MYXJIGR	VSX-D710S /MVXJI	
△	20	AC Power Cord	VDG1077	VDG1077	VDG1076	

2.3 FRONT PANEL SECTION

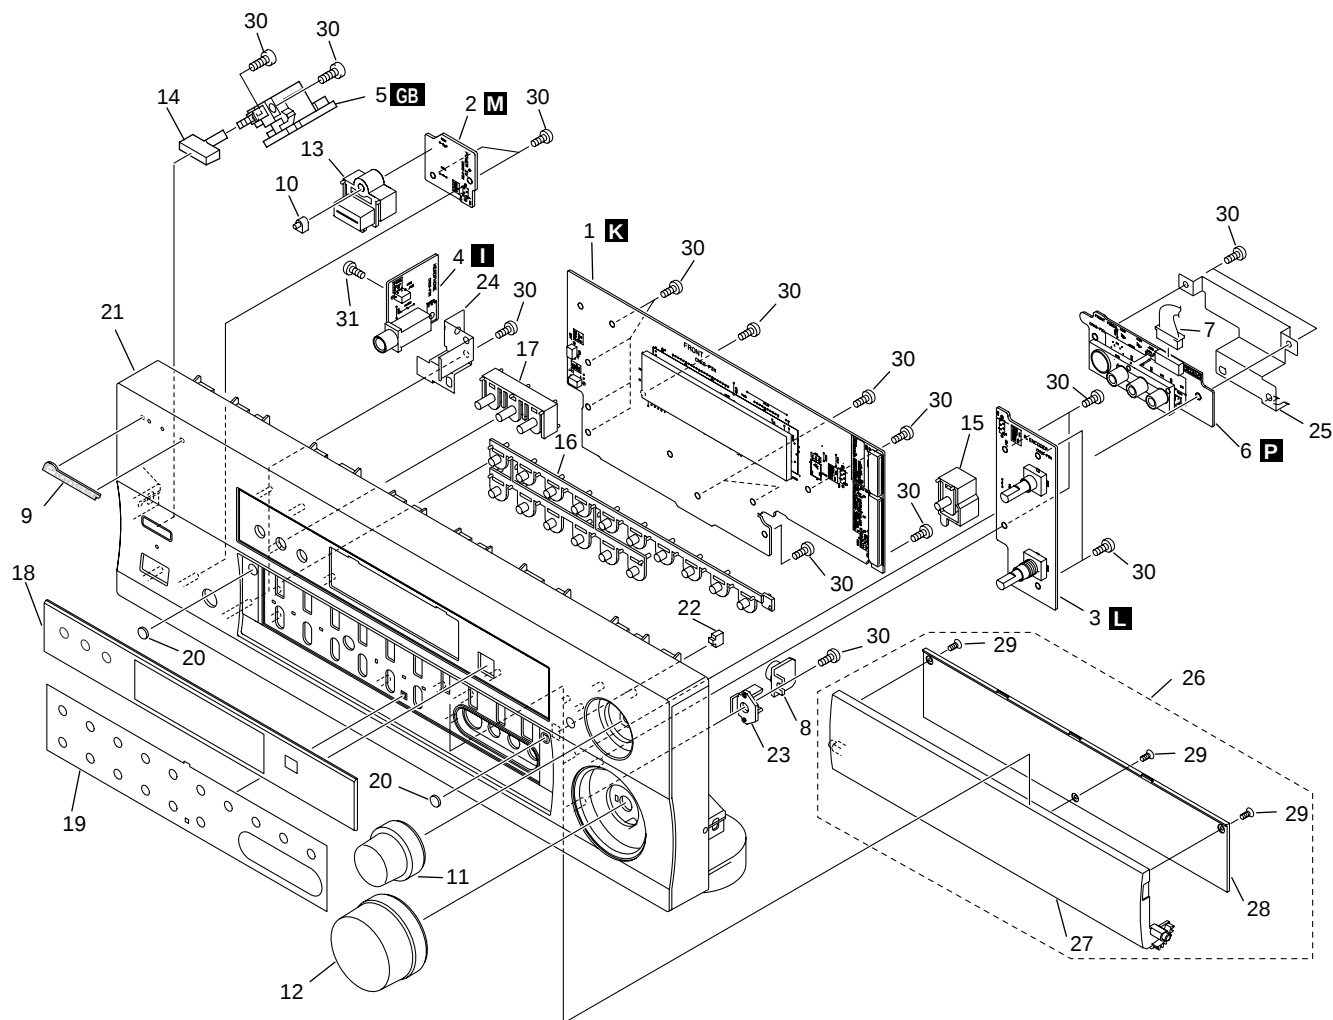


● FRONT PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	FRONT Assy	XWZ3341		16	Door Button R4B	XAD3070
	2	POWER SW Assy	XWZ3352		17	RDS Button R4B	XAD3072
	3	R. ENCODER Assy	XWZ3353		18	Display Panel W/MY	XAK3171
	4	H.P. Assy	XWZ3356		19	Button Cover R4B	XAK3178
	5	MECHA SW Assy	XWZ3358		20	Cushion R4B	XED3001
NSP	6	FRONT VIDEO Assy	XWZ3359		21	Front Panel 710/MY	XMB3036
	7	8P Shield Cable	XDX3012		22	Magnet 35	AMF7007
	8	Damper Assy	AXA7052		23	Holder L R4	XMR3016
	9	Name Plate	PAM1776		24	Earth Plate A R4	XNG3044
	10	LED Lens	PNW2019		25	Earth Plate B R4	XNG3045
	11	Select Knob R4B	XAB3008	NSP	26	Door Assy R4B	XXG3068
	12	Volume Knob R4B	XAB3011		27	Door R4B	XAK3173
	13	Power Button R4B	XAD3062		28	Door Cover R4B	XAK3175
	14	Power Button M	AAD7442		29	Screw	XBA3001
	15	Jog Button R4B	XAD3065		30	Screw	PPZ30P080FMC
					31	Screw	BBZ30P080FMC

This page was intentionally left blank.


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

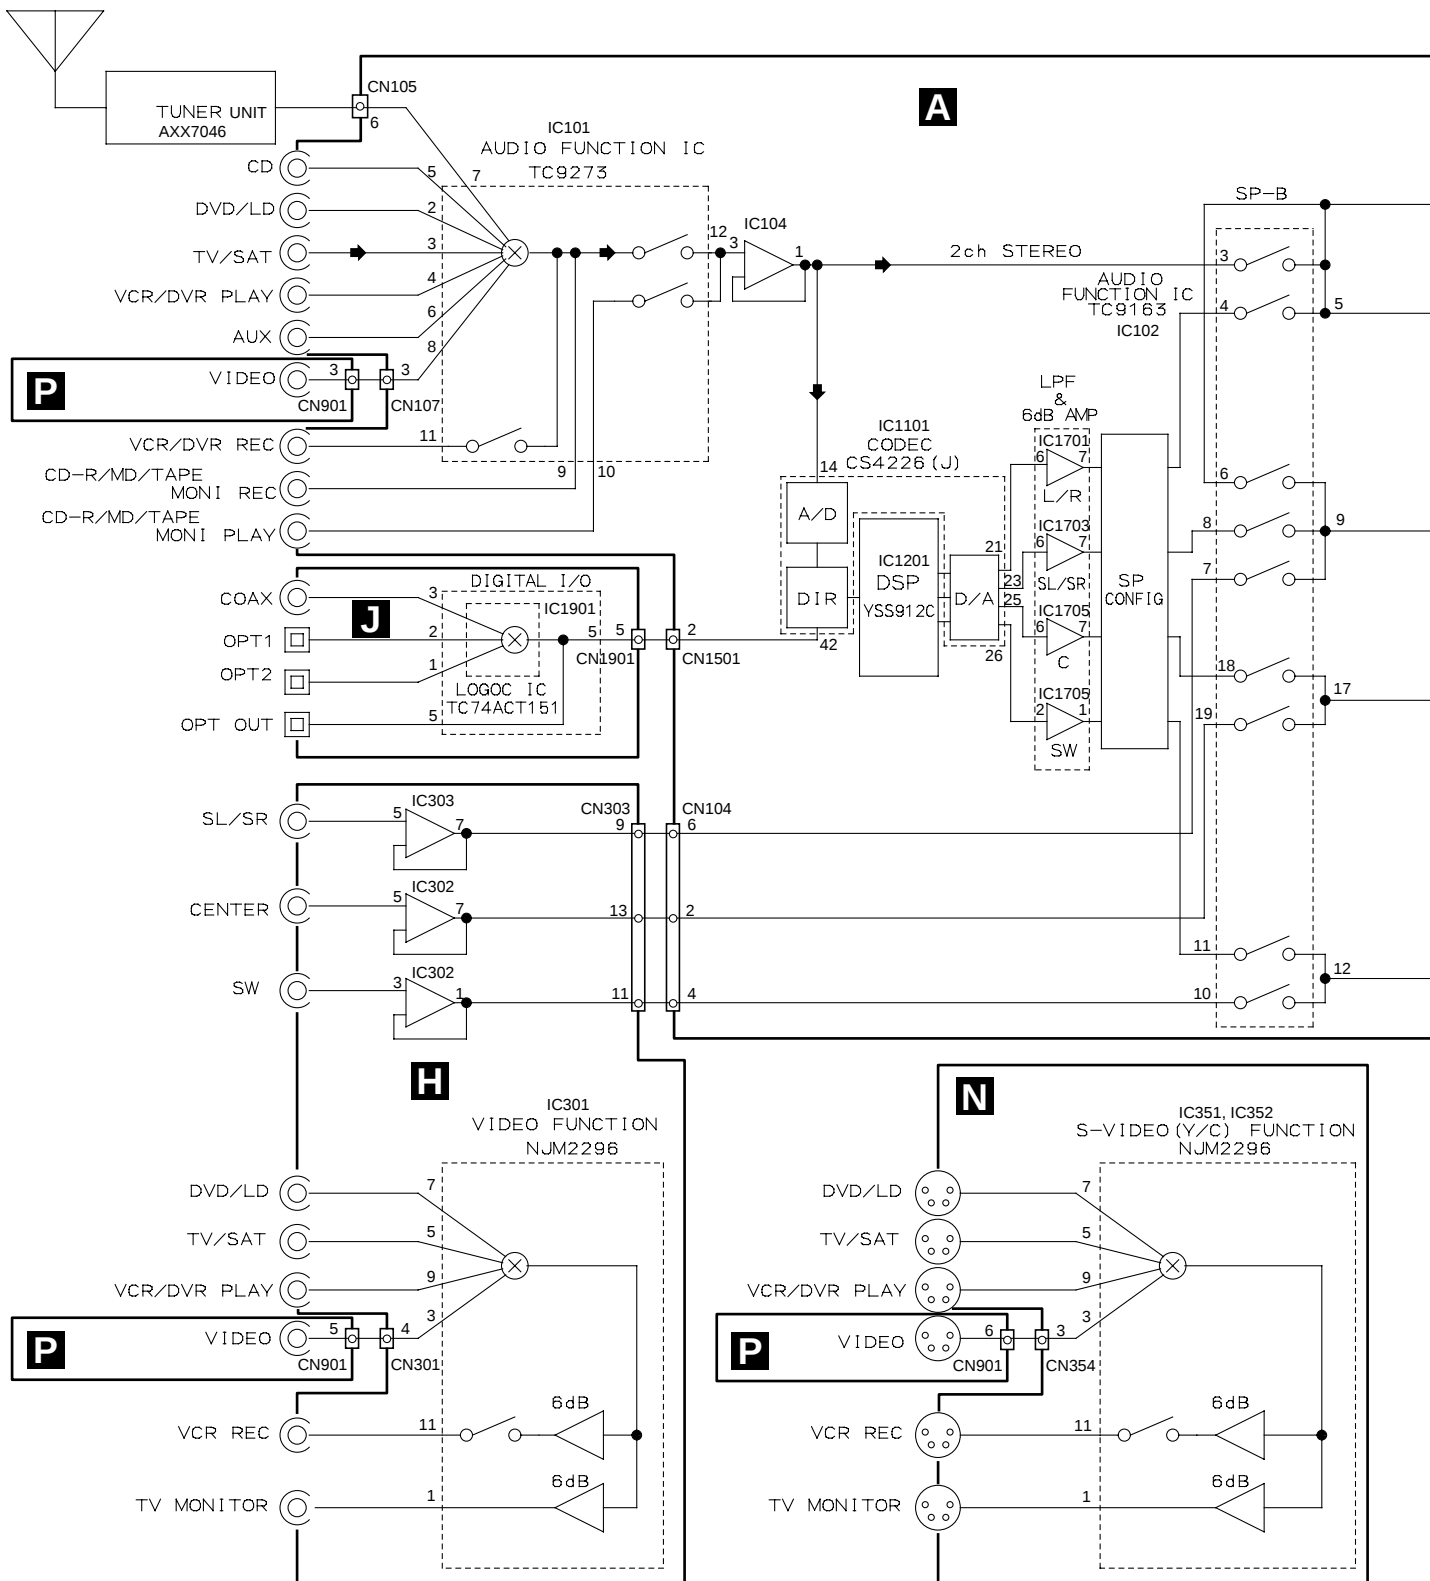




3.2 OVERALL WIRING CONNECTION DIAGRAM

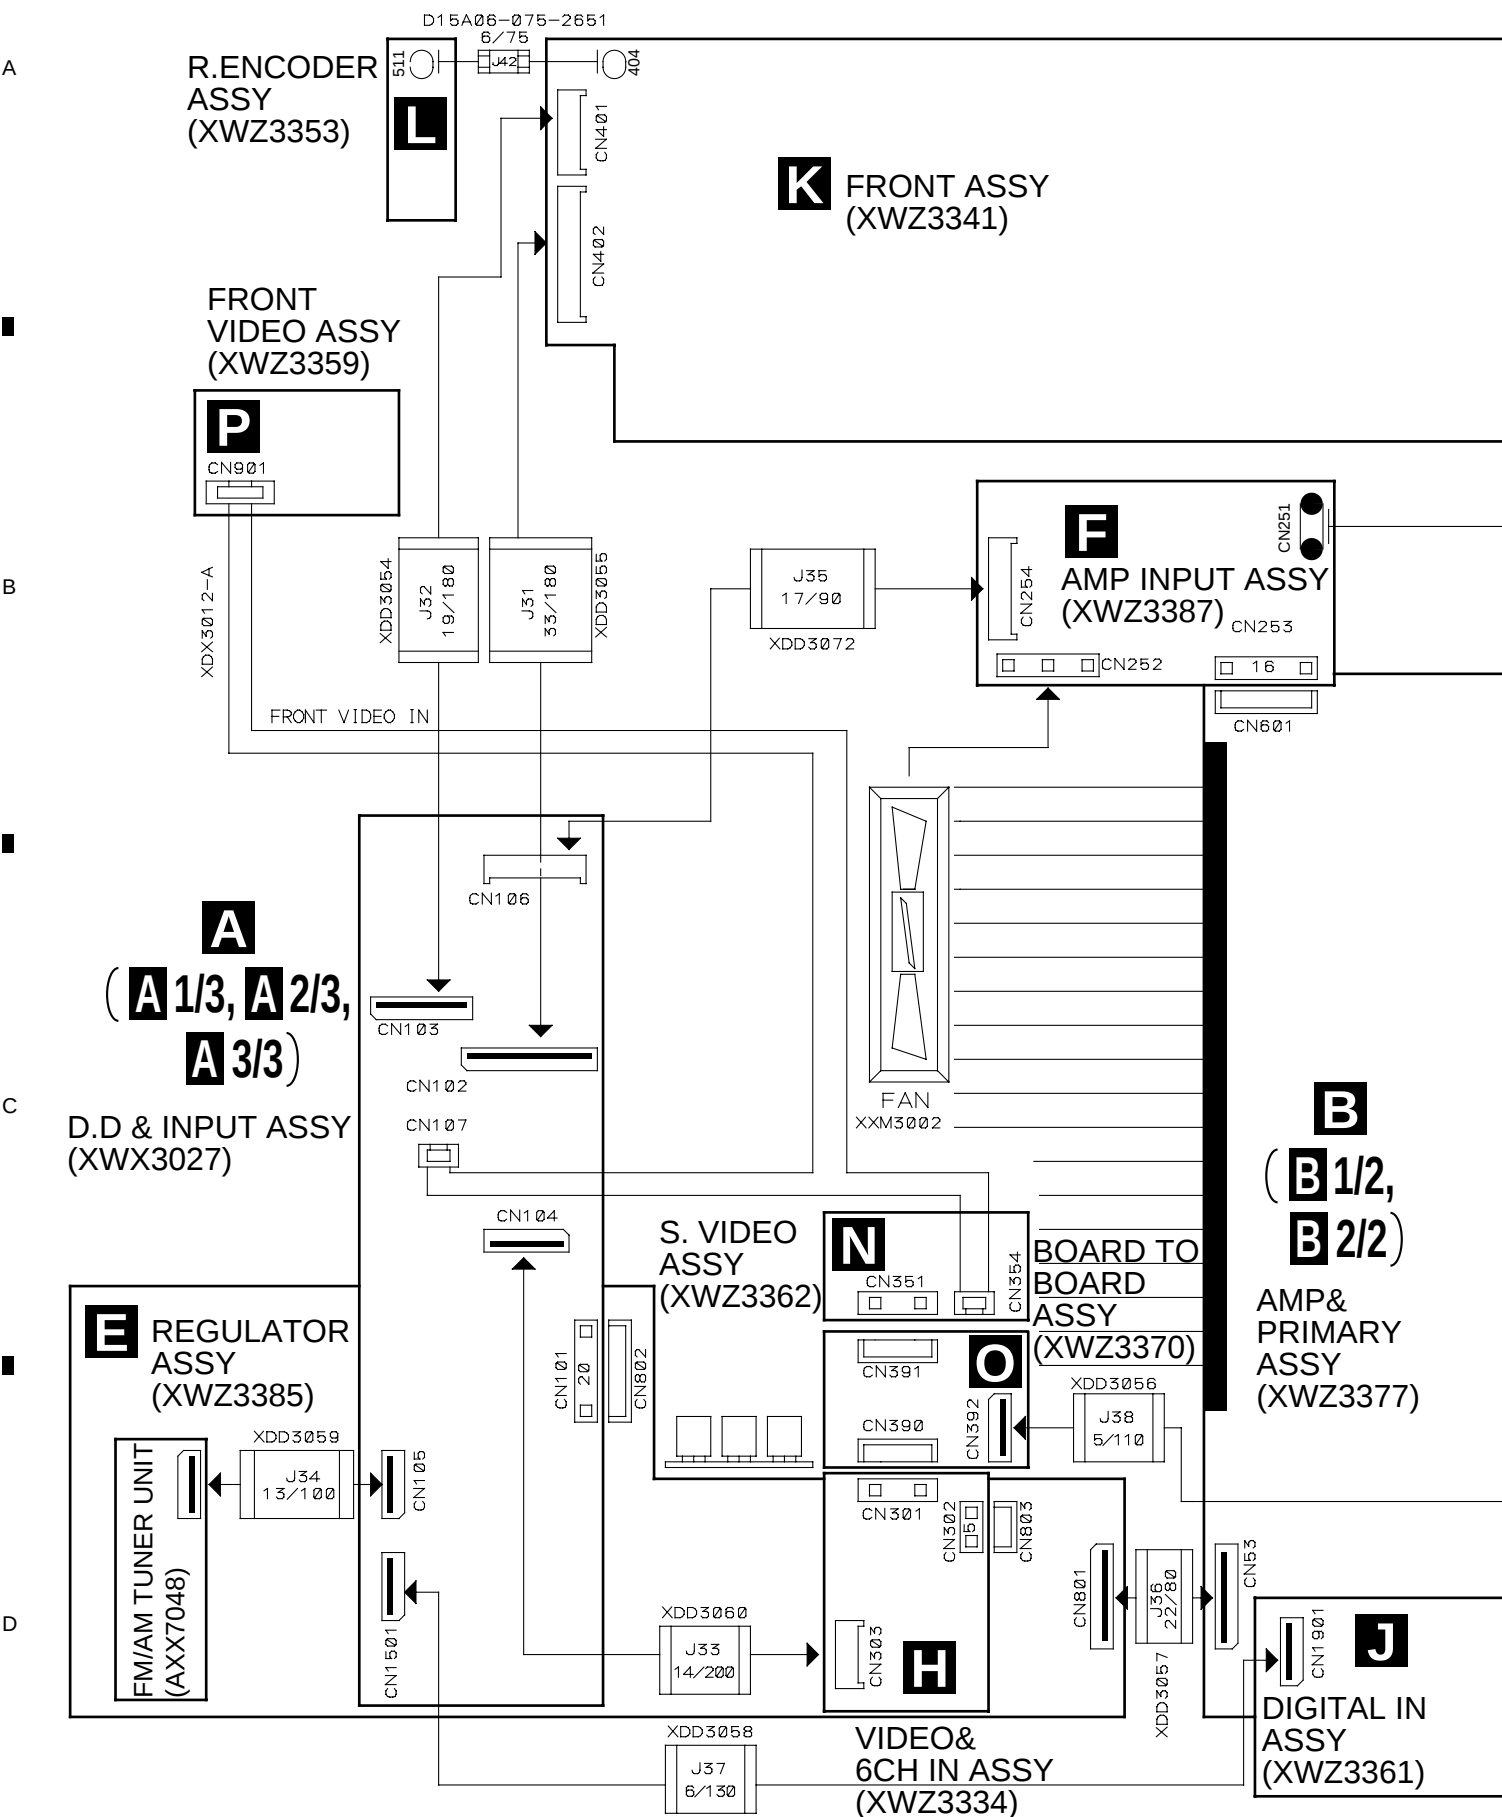

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

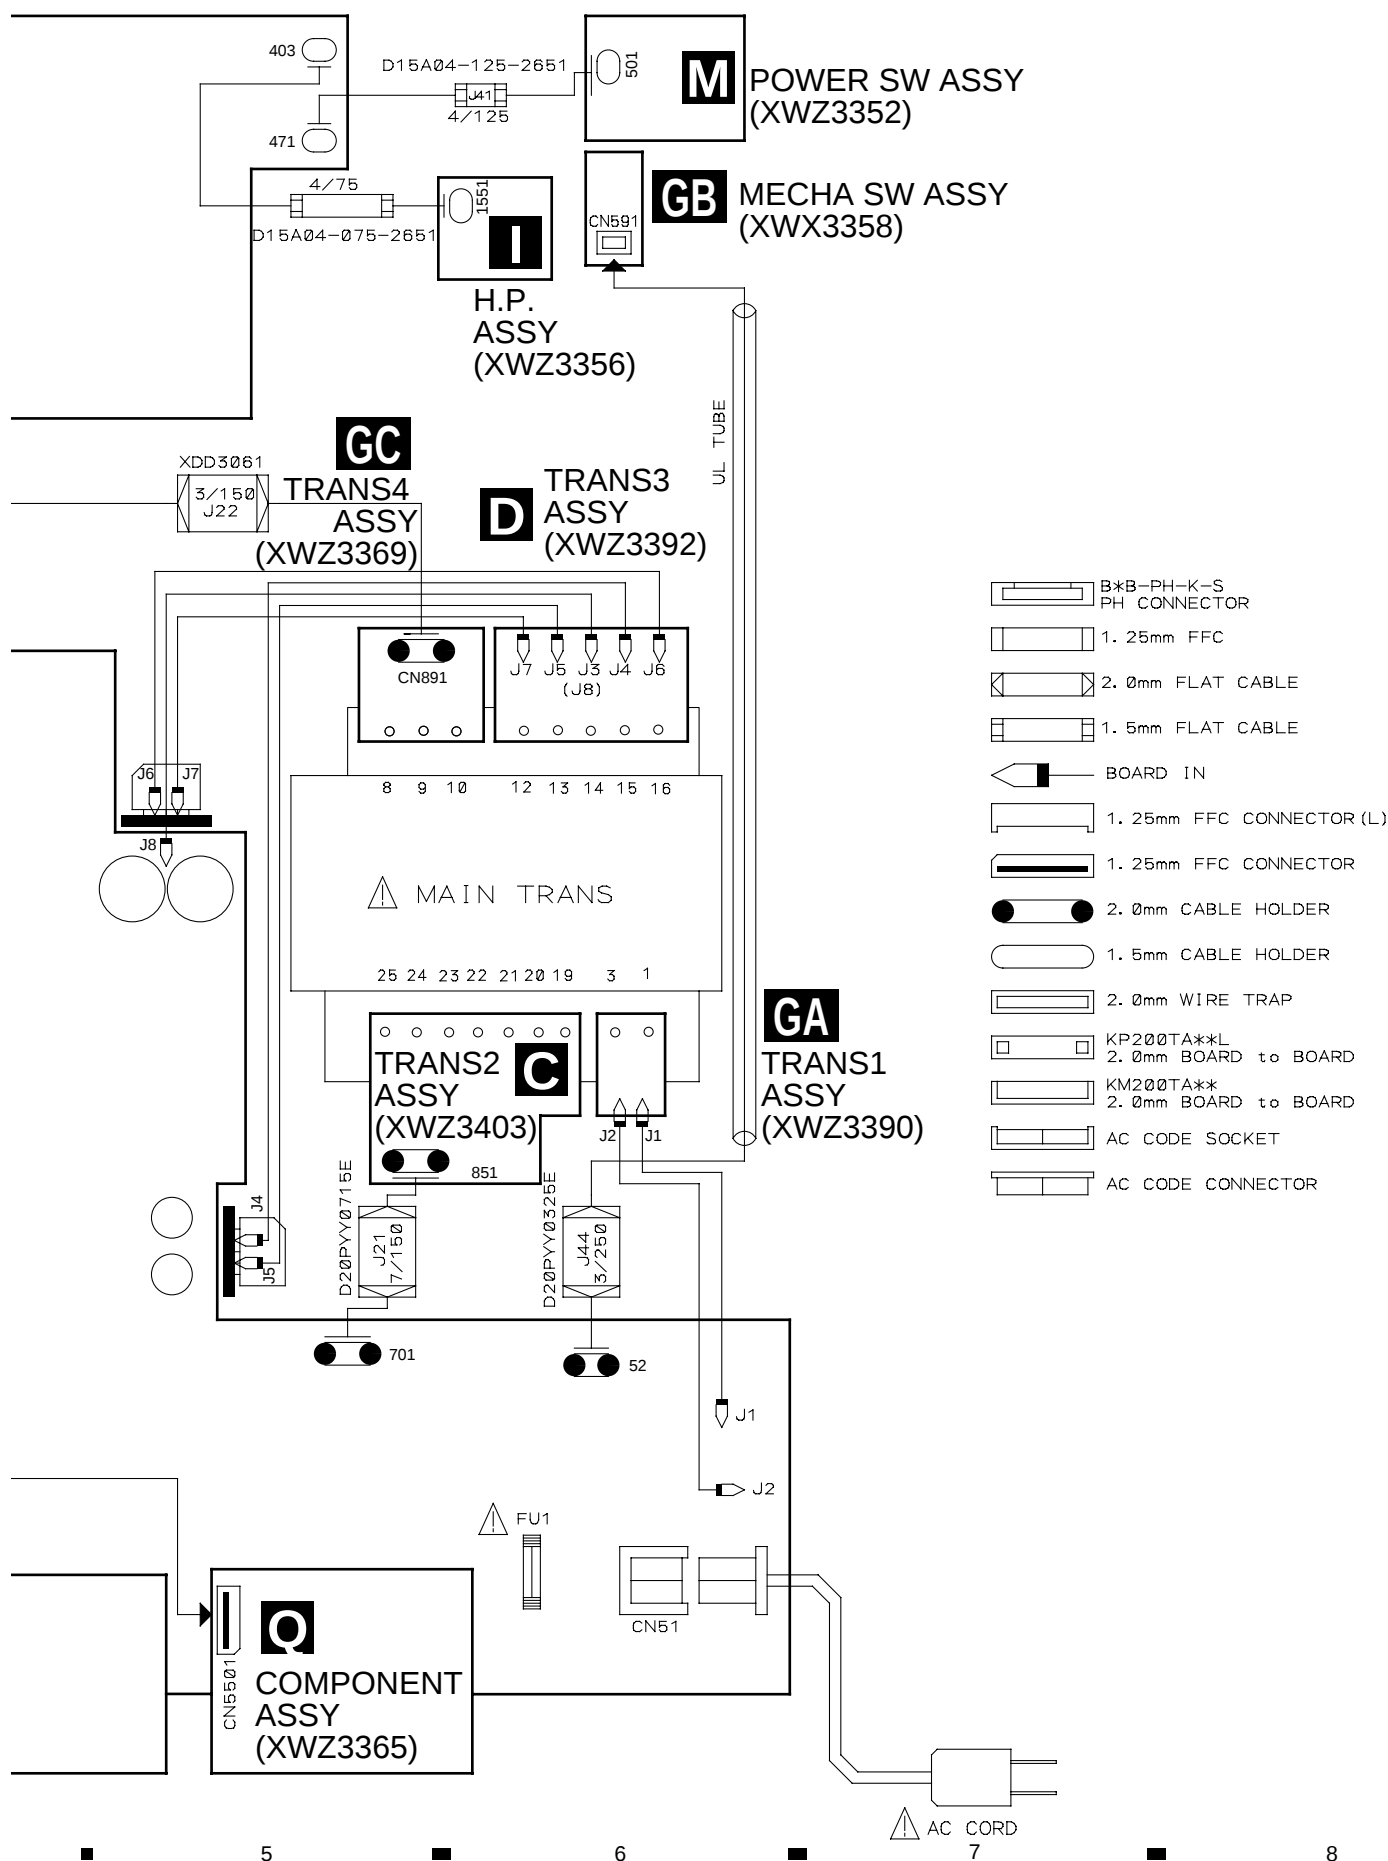

A

B

C

D

3.3 D.D & INPUT ASSY (1/3)


A 1/3 D.D & INPUT ASSY (XWX3027)


A

B

C

D

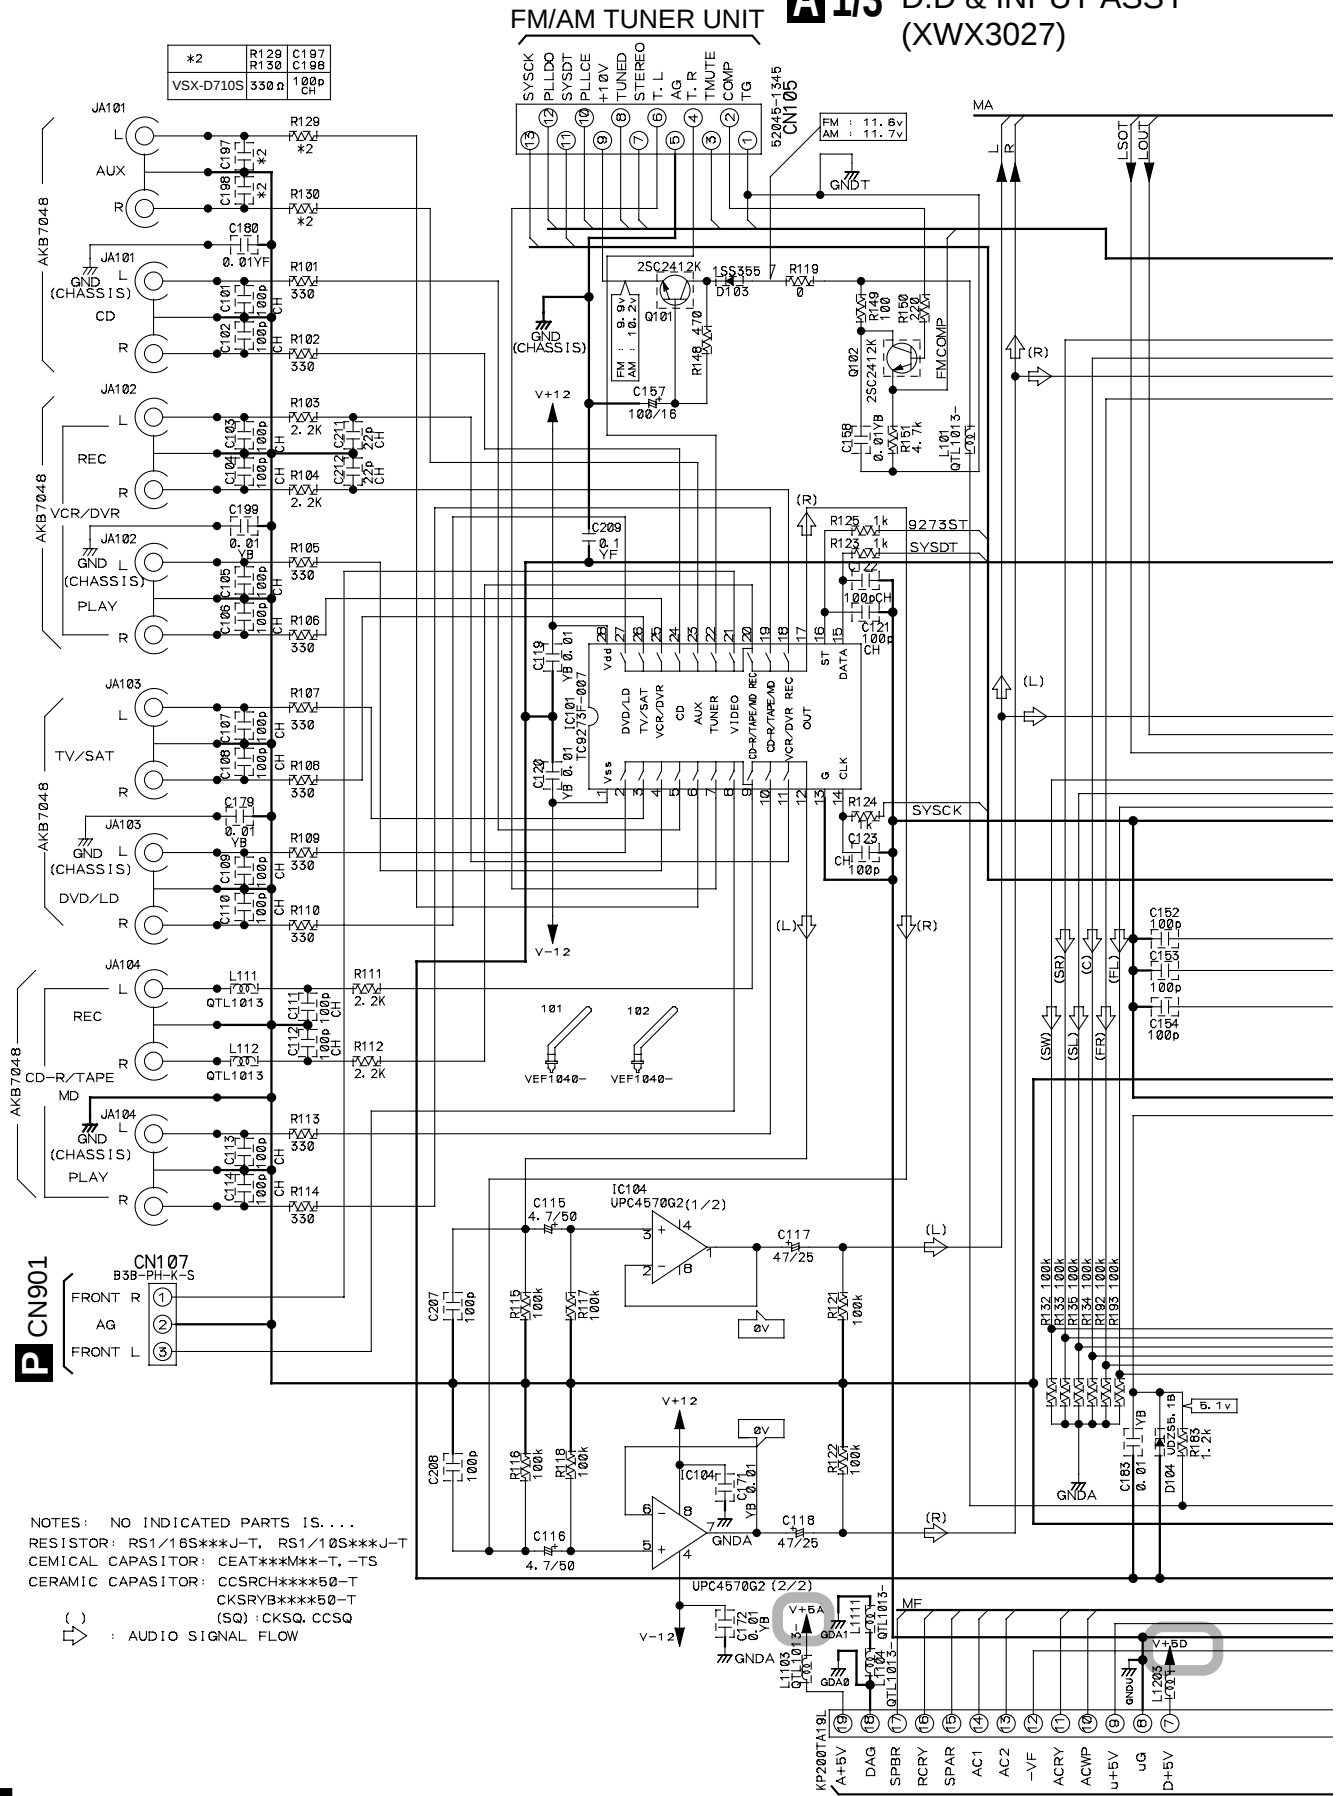

H CN303


3.4 D.D & INPUT ASSY (2/3)

A

B


C

D

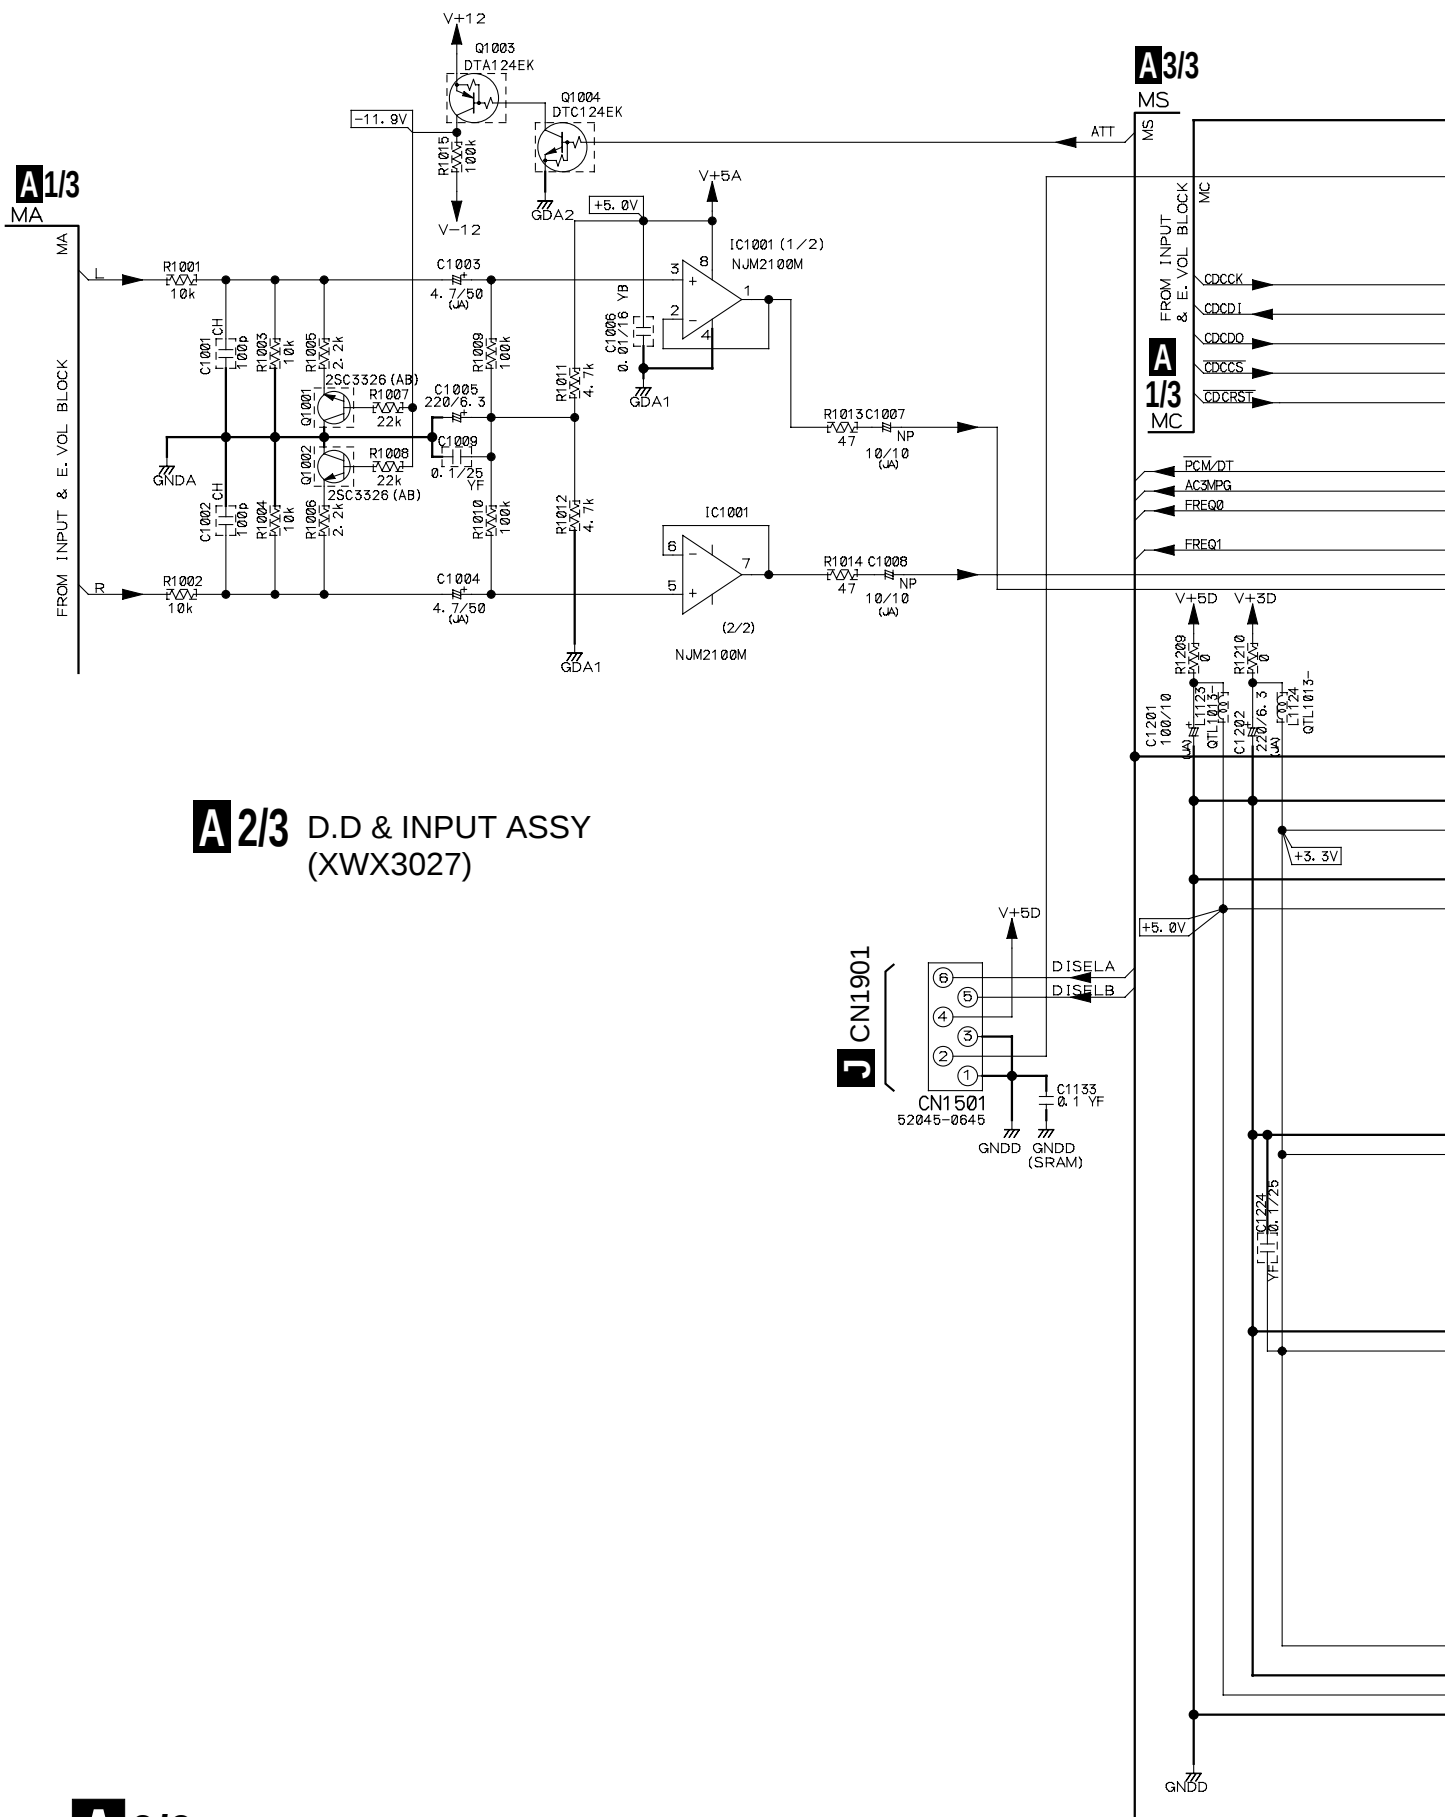


A 2/3 D.D & INPUT ASSY (XWX3027)

 : The power supply is shown with the marked box.

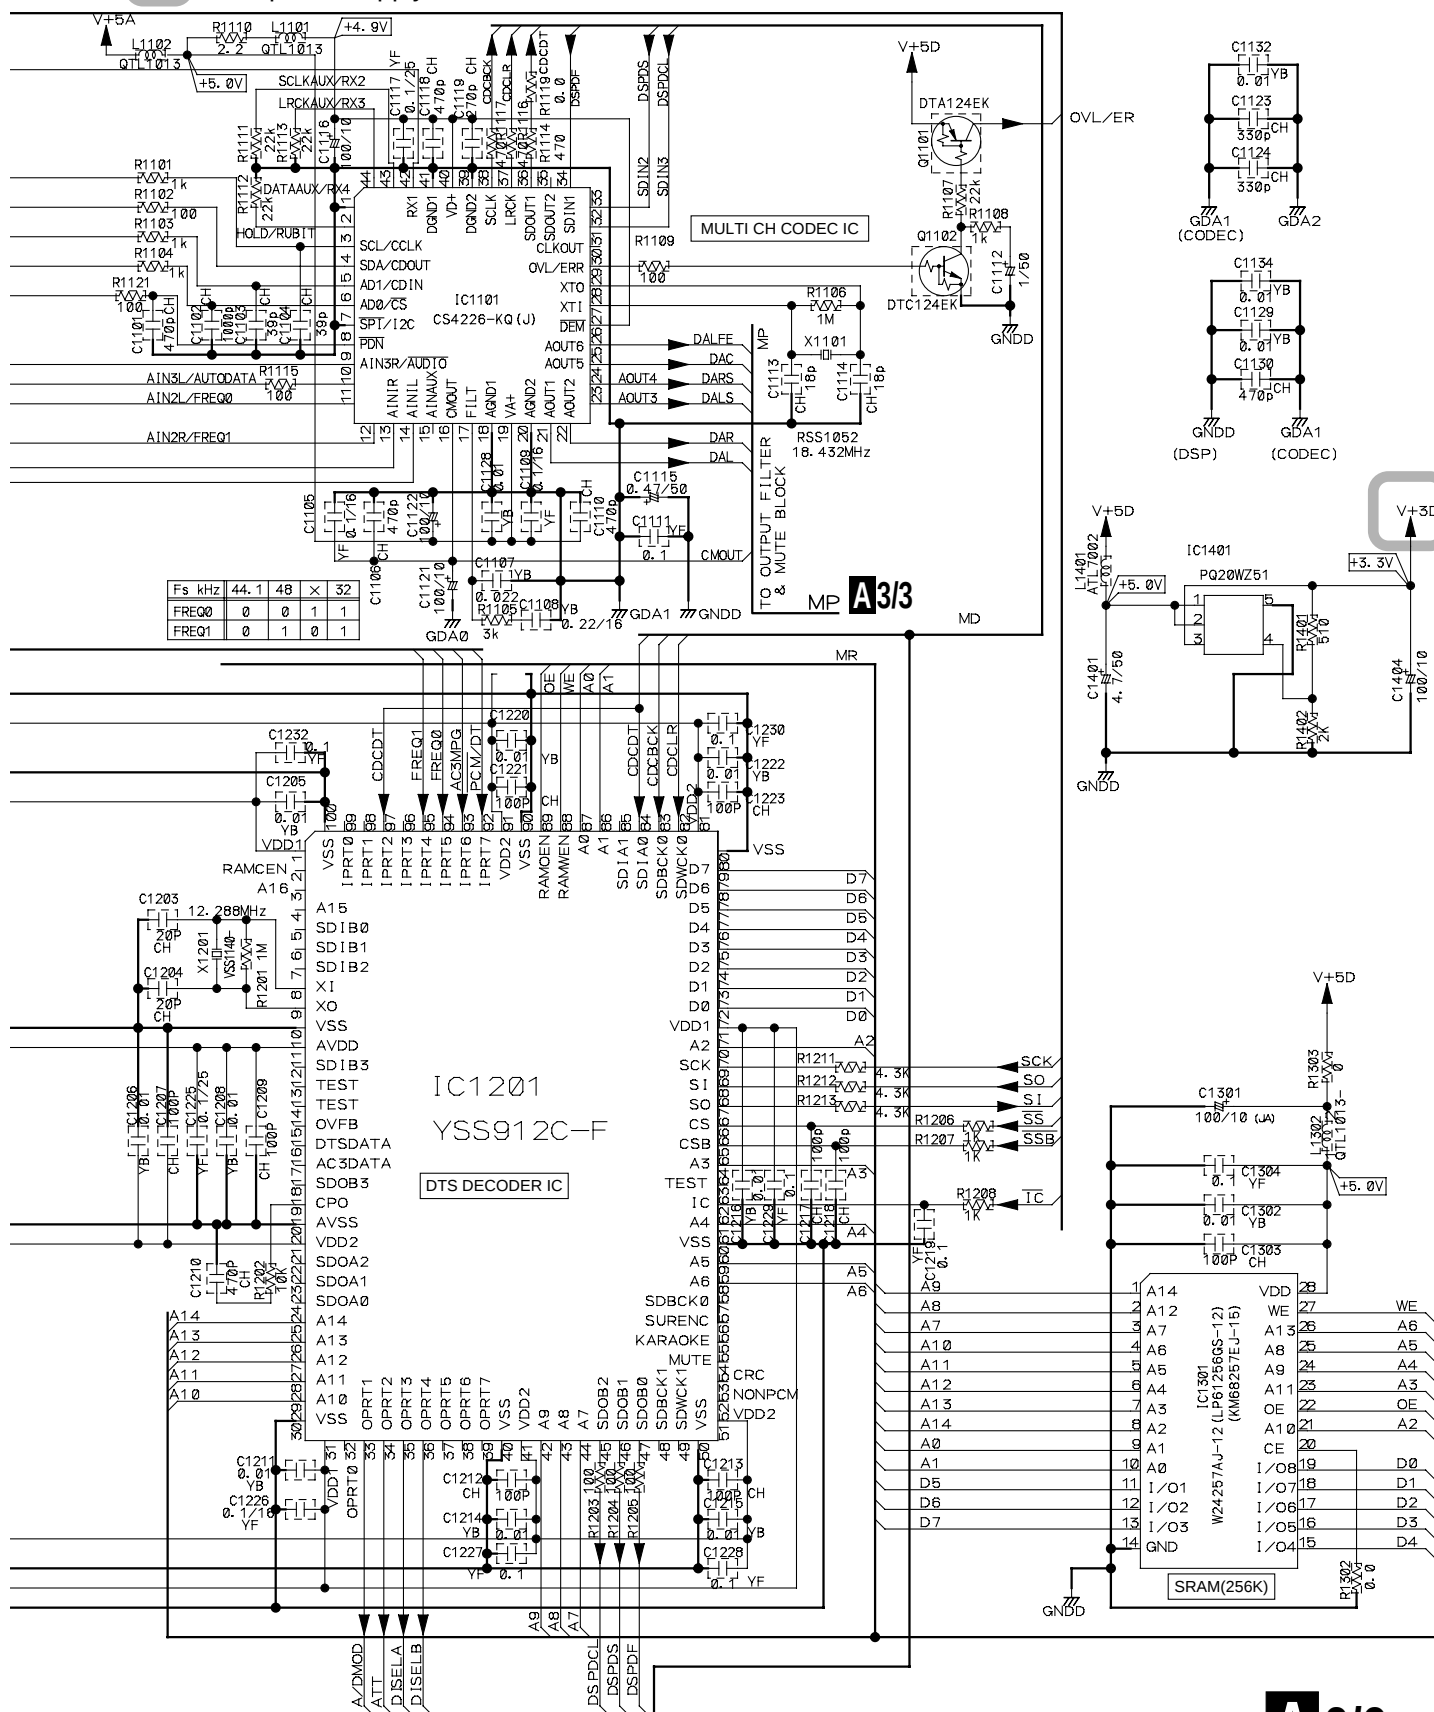

A 3/3 D.D & INPUT ASSY
(XWX3027)

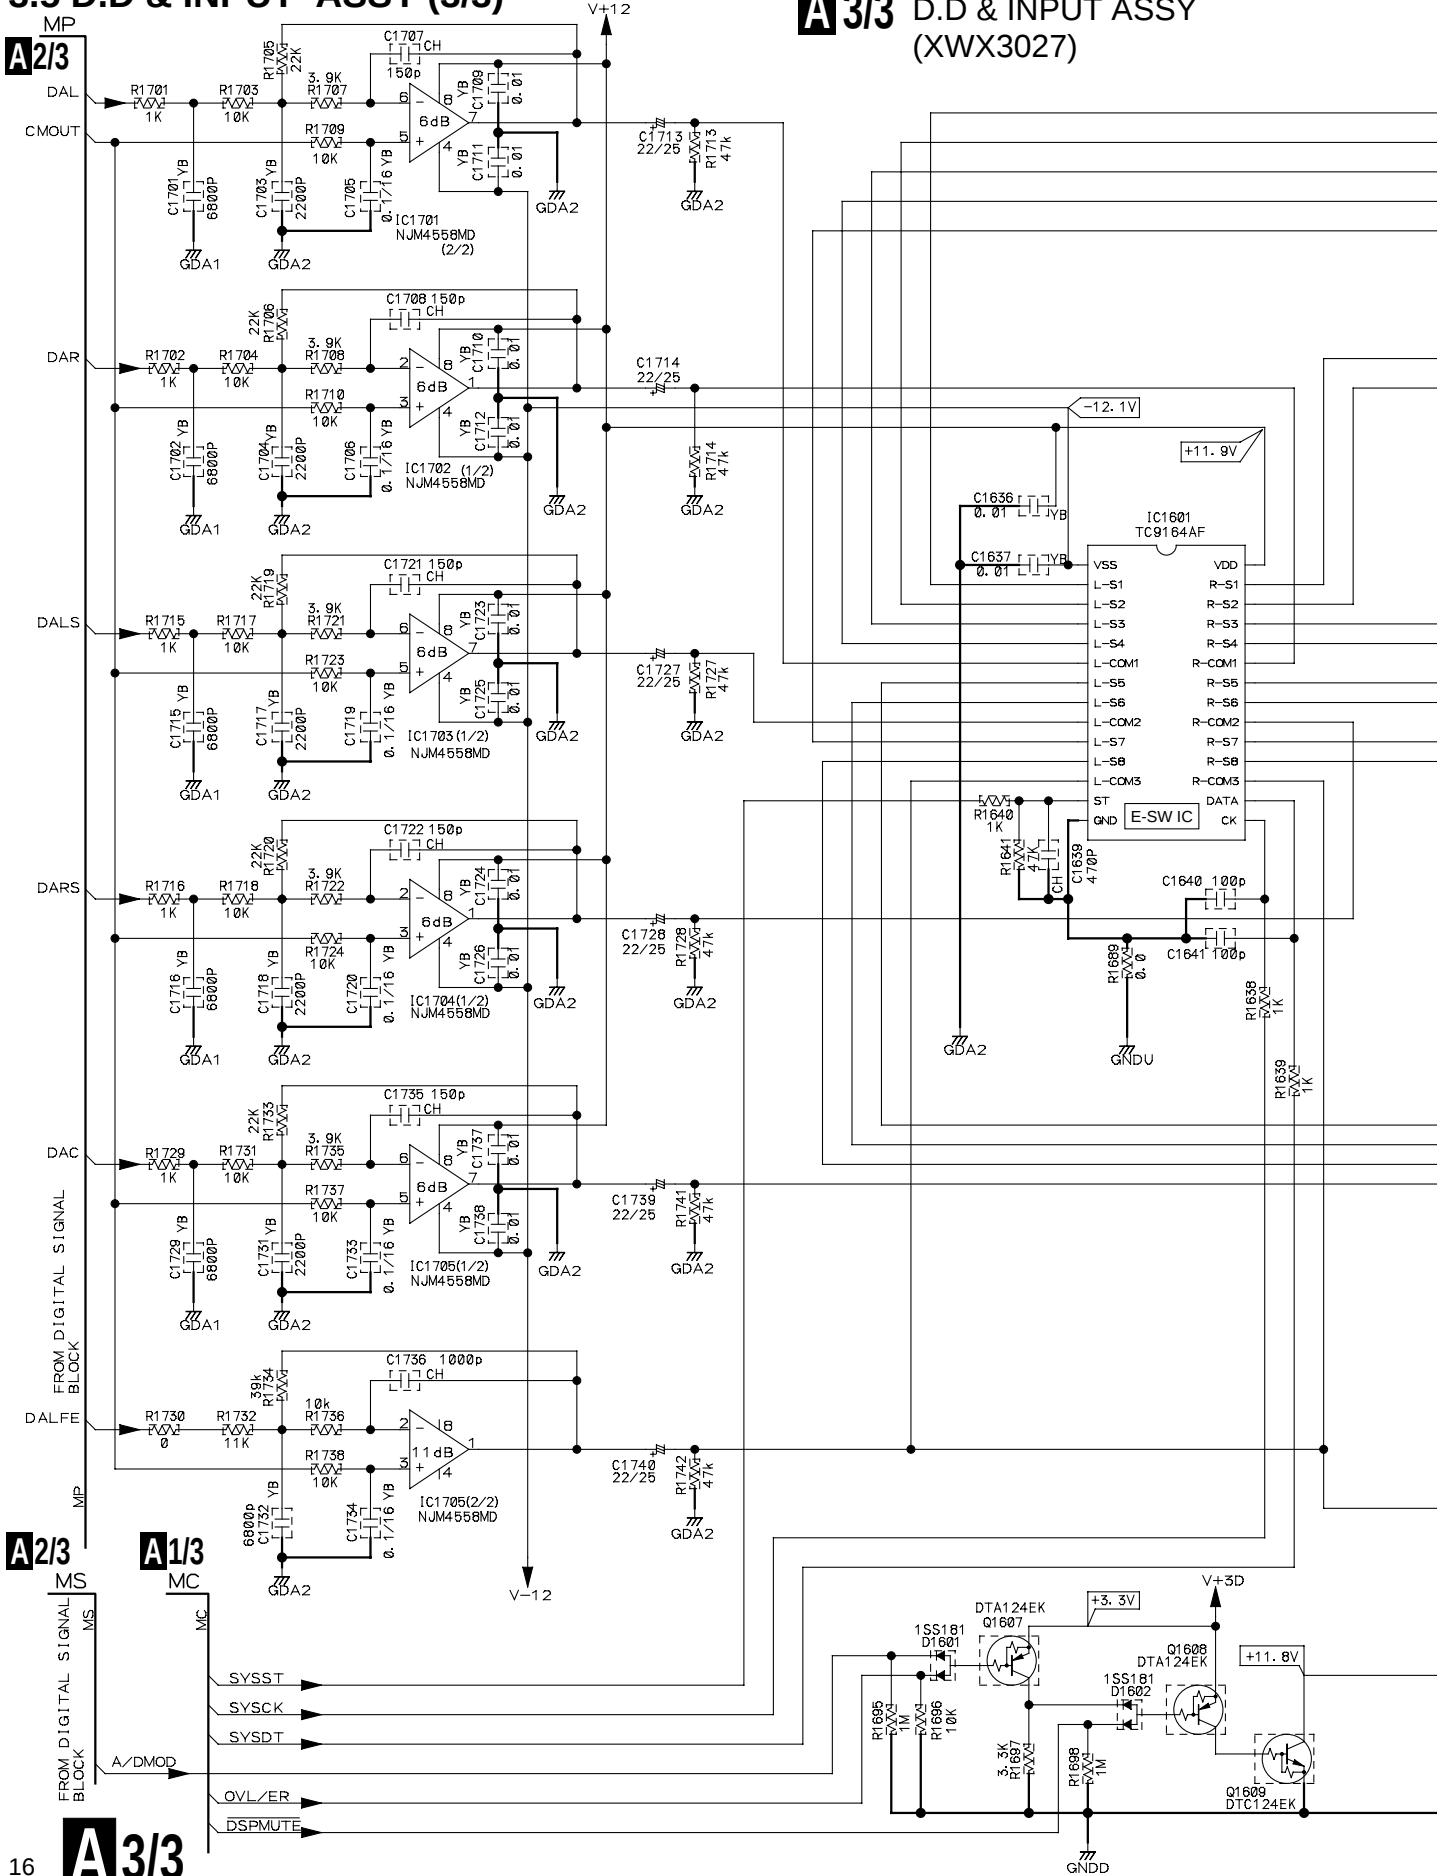



3.6 AMP&PRIMARY (1/2), TRANS2 and TRANS3 ASSYS

B 1/2 AMP&PRIMARY ASSY (XWZ3377)

E CN253

- 1 CN601 KM200TA16
- 2 SB
- 3 AG
- 4 SR
- 5 AG
- 6 SL
- 7 AG
- 8 FR
- 9 AG
- 10 FL
- 11 AG
- 12 C
- 13 A. MUTE
- 14 ATT.
- 15 OL
- 16 DC DET.
- 17 NECK
- 18 UG

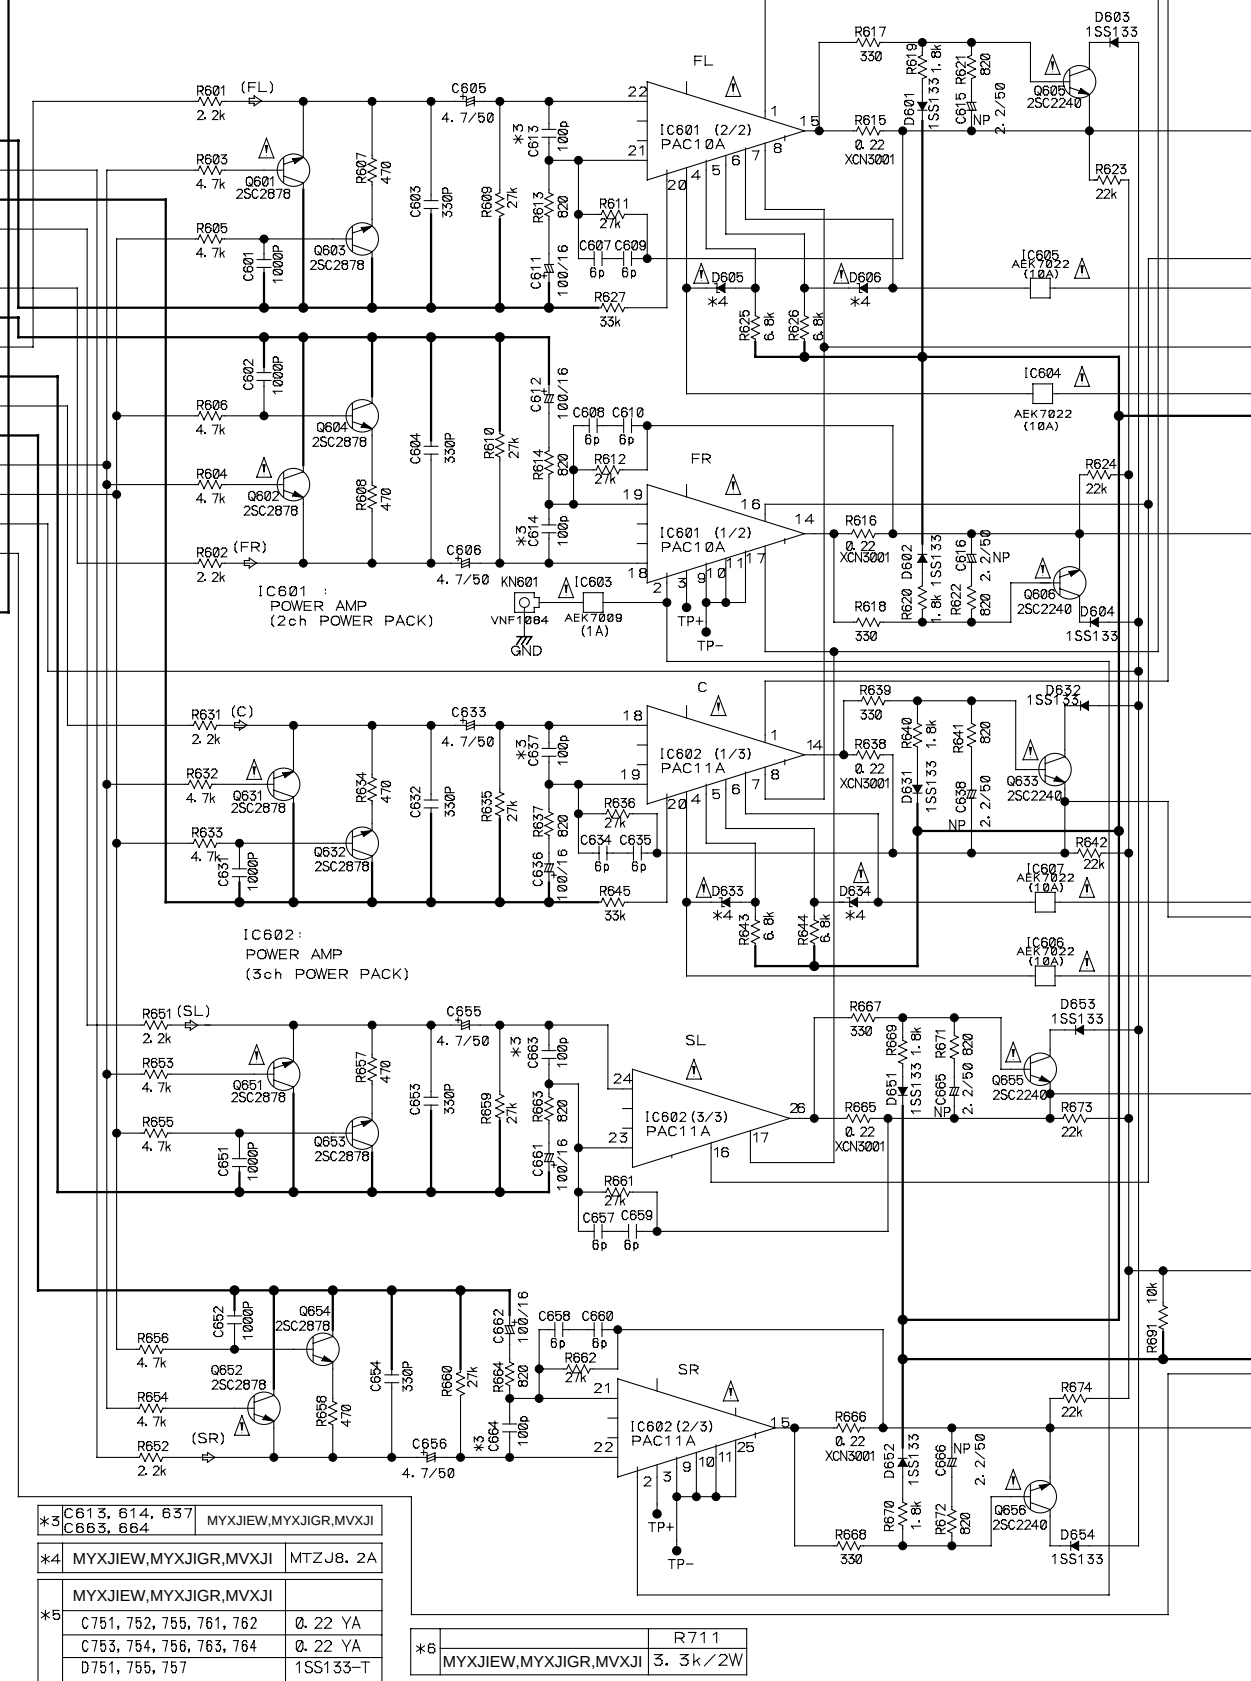

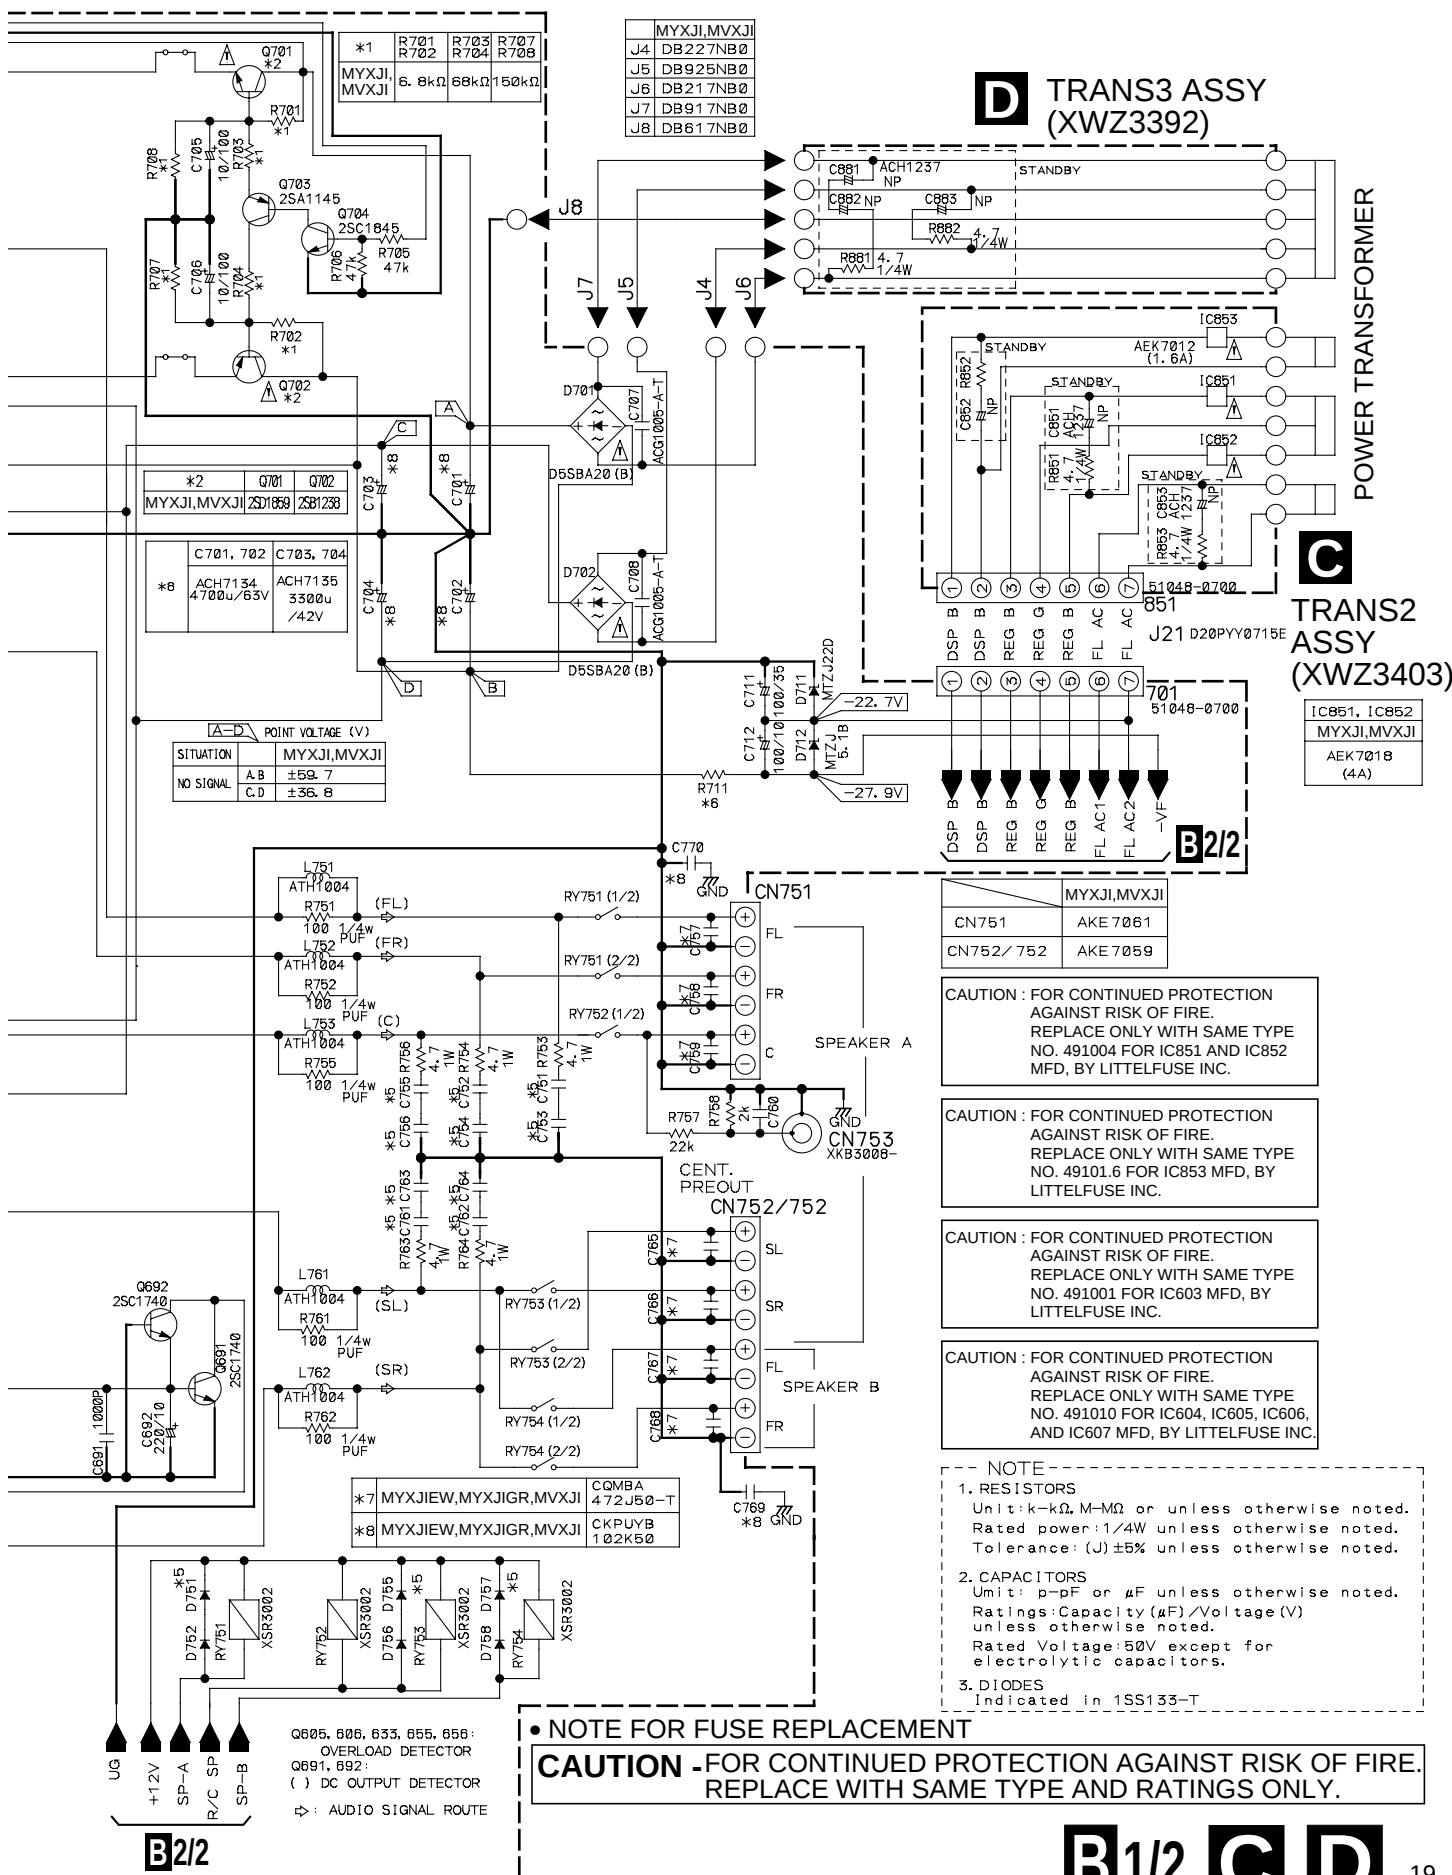


3.7 AMP&PRIMARY (2/2), REGULATOR, AMP INPUT, TRANS1, MECHA SW and TRANS4 ASSYS


A

B

C

D

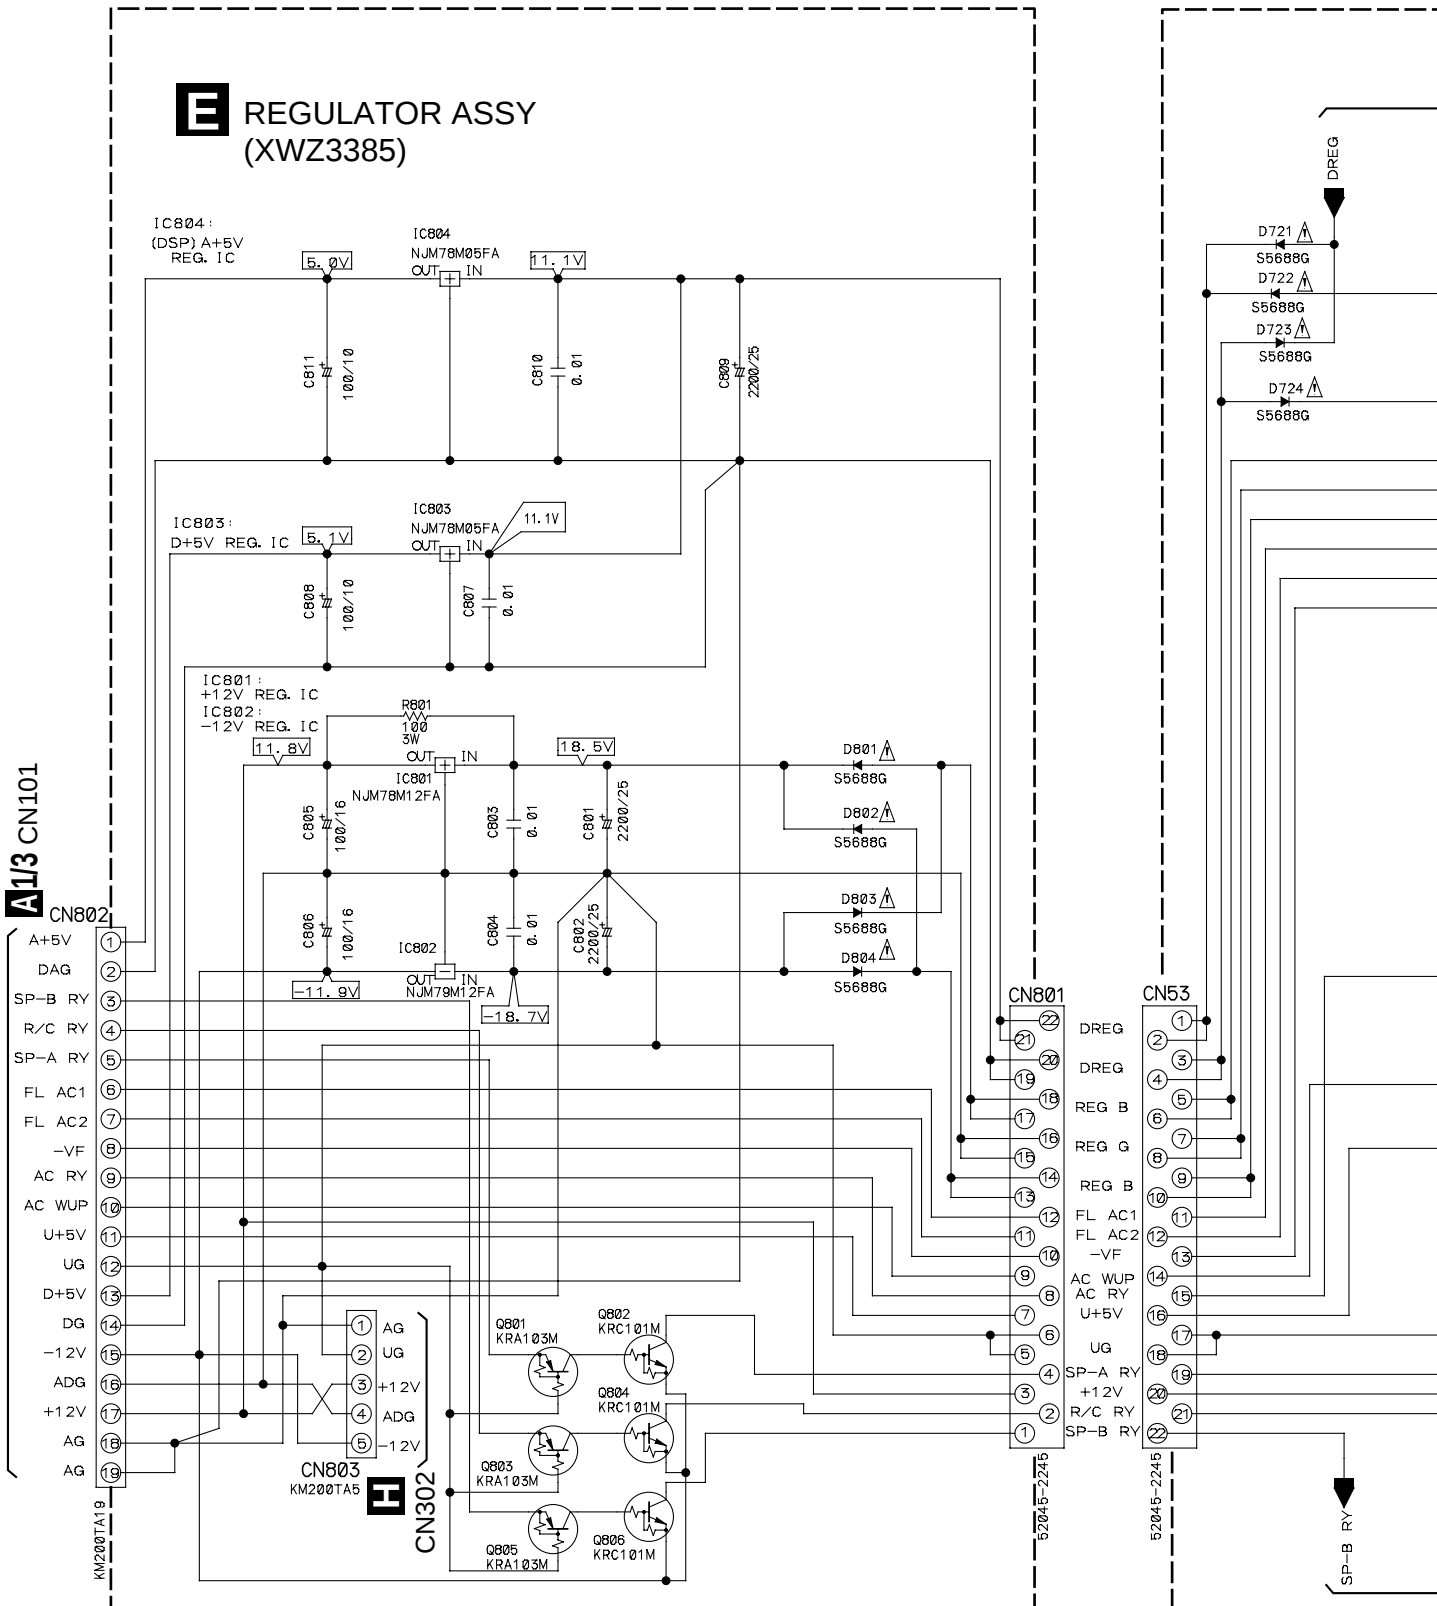

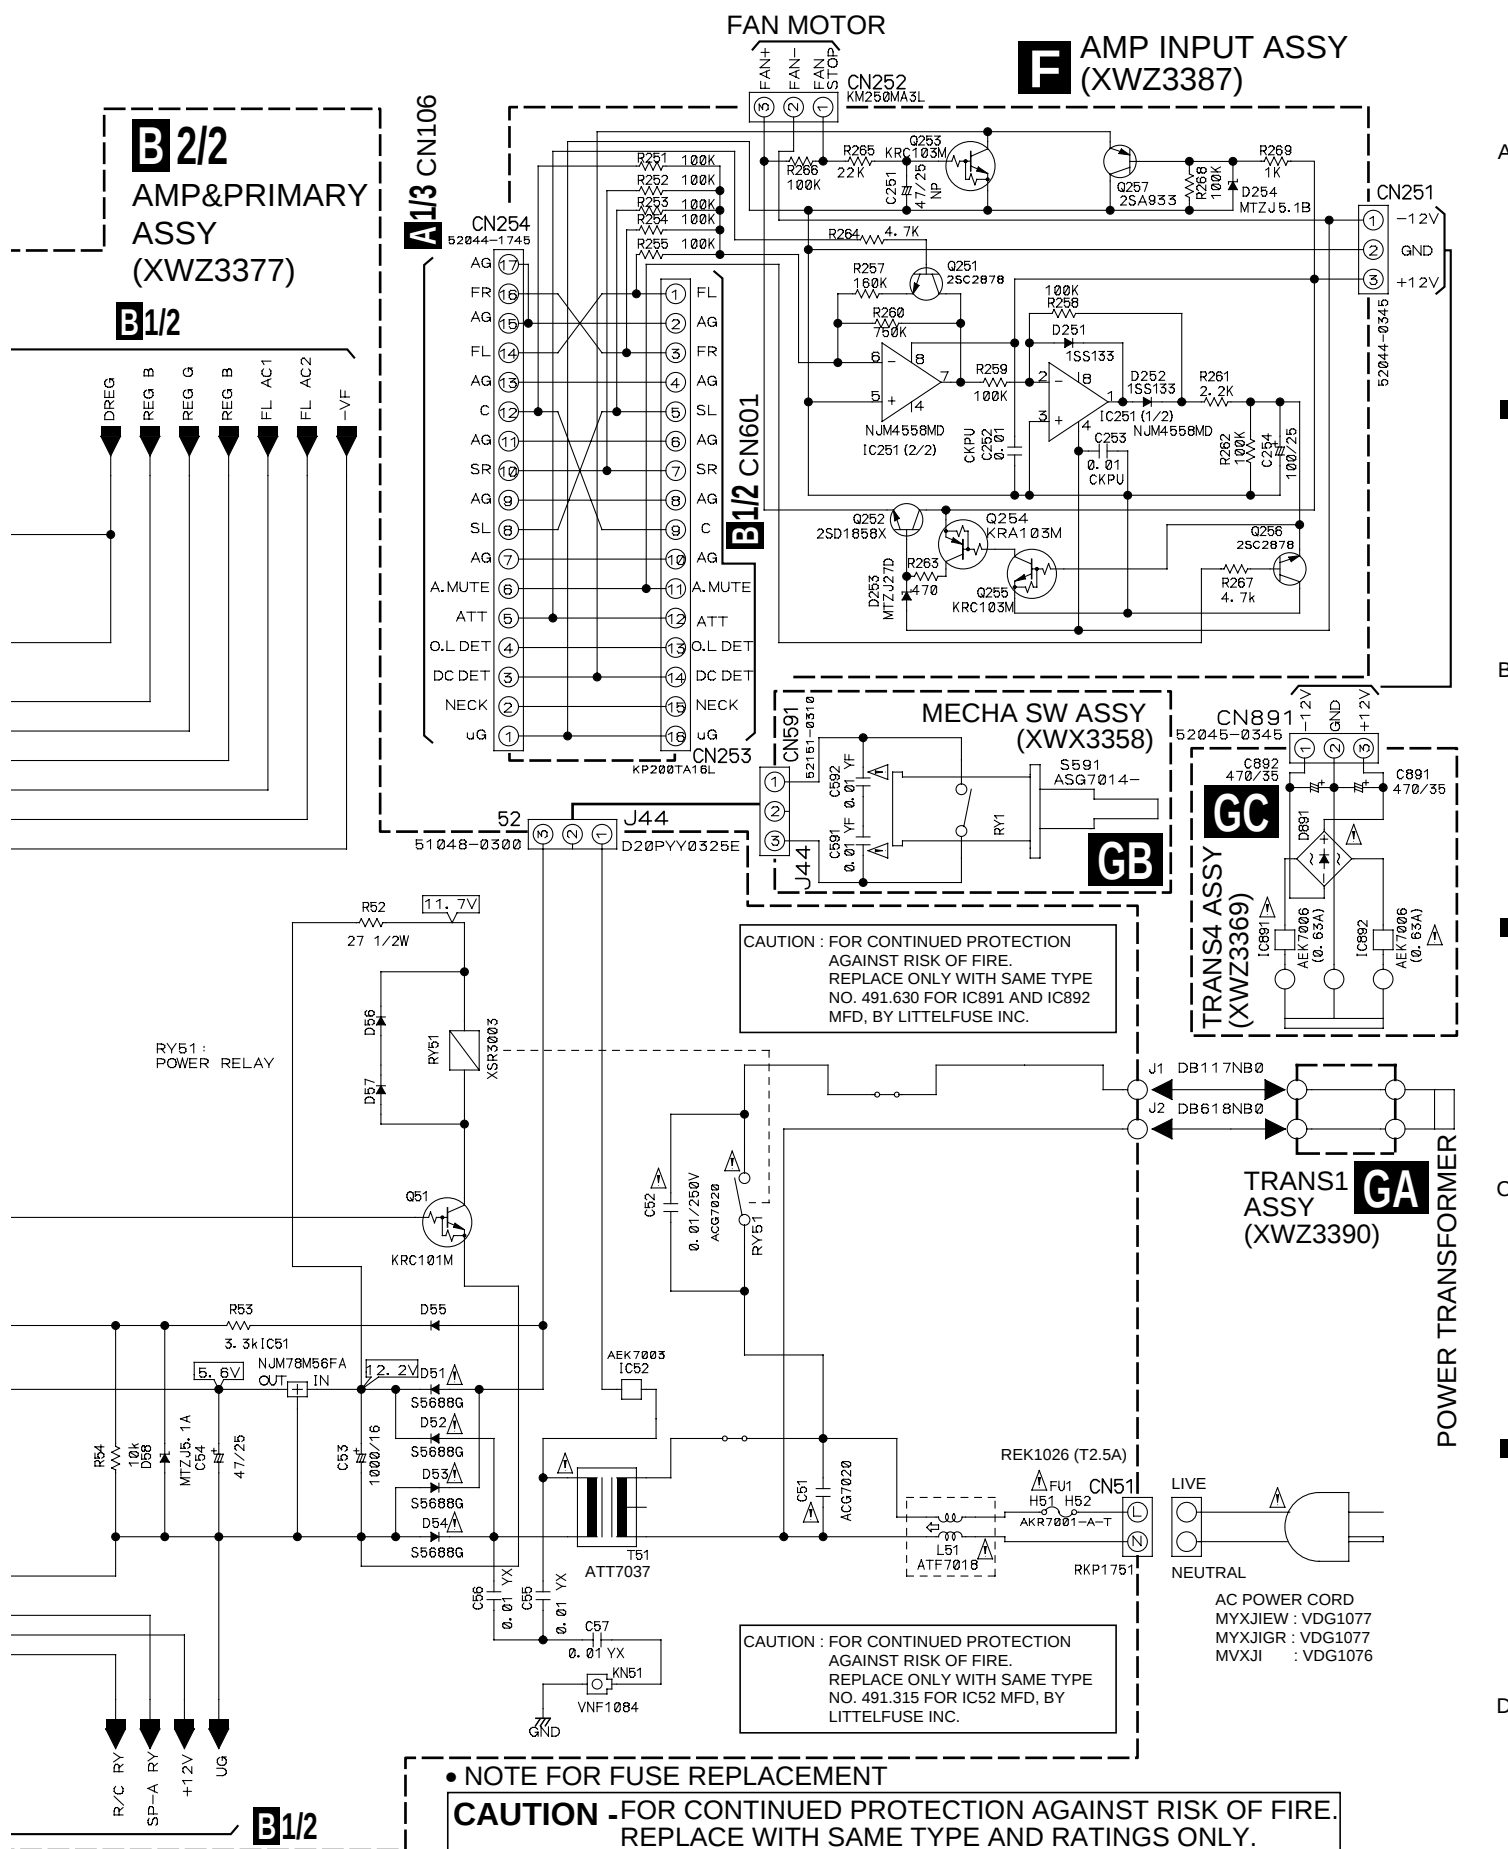

3.8 VIDEO&6CH IN, H. P. and DIGITAL IN ASSYS


VIDEO&6CH IN ASSY (XWZ3334)

A

B

C

D

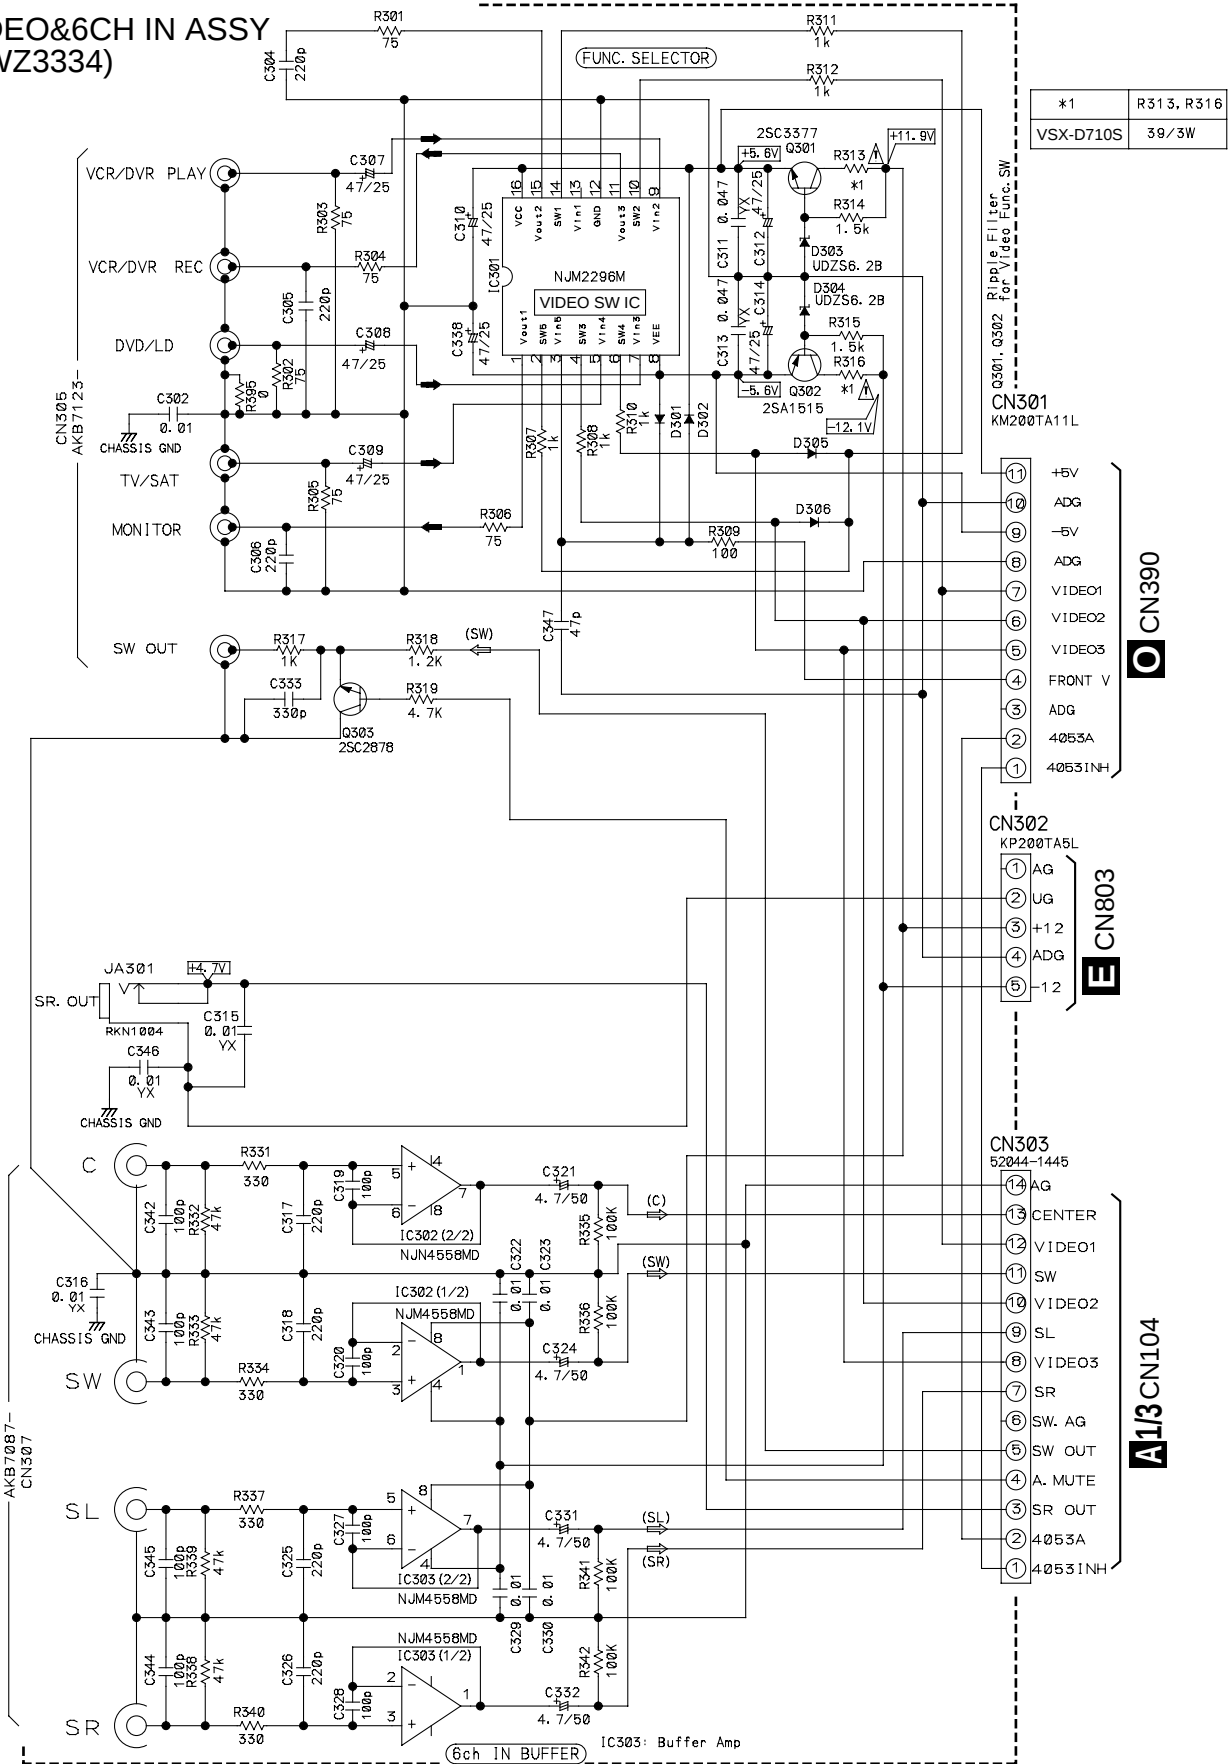

SW1	SW2	SW3	SW4	SW5	Vout1	Vout2	Vout3
1	0	(1)	0	1	Vin2	Vin2	mute
1	1	(1)	0	1	Vin3	Vin3	Vin3
1	1	0	1	1	Vin4	Vin4	Vin4
1	1	1	1	1	Vin5	Vin5	Vin5
0	0	(0)	(0)	0	mute	mute	mute

VIN 2. VCR/DVR
VIN 3. DVD/LD
VIN 4. TV/SAT
VIN 5. FRONT VIDEO

Vout1. MONITOR out
Vout2. MR out
Vout3. VCR/DVR out

7 - NOTE-

1. RESISTORS

Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J)±5% unless otherwise noted.


2. CAPACITORS

Unit: p-F or μ F unless otherwise noted.
Ratings: Capacity(μ F)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V except for electrolytic capacitors.

3. DIODES

Indicated in 1SS355-TRB

 Video Signal Flow
 Audio Signal Flow

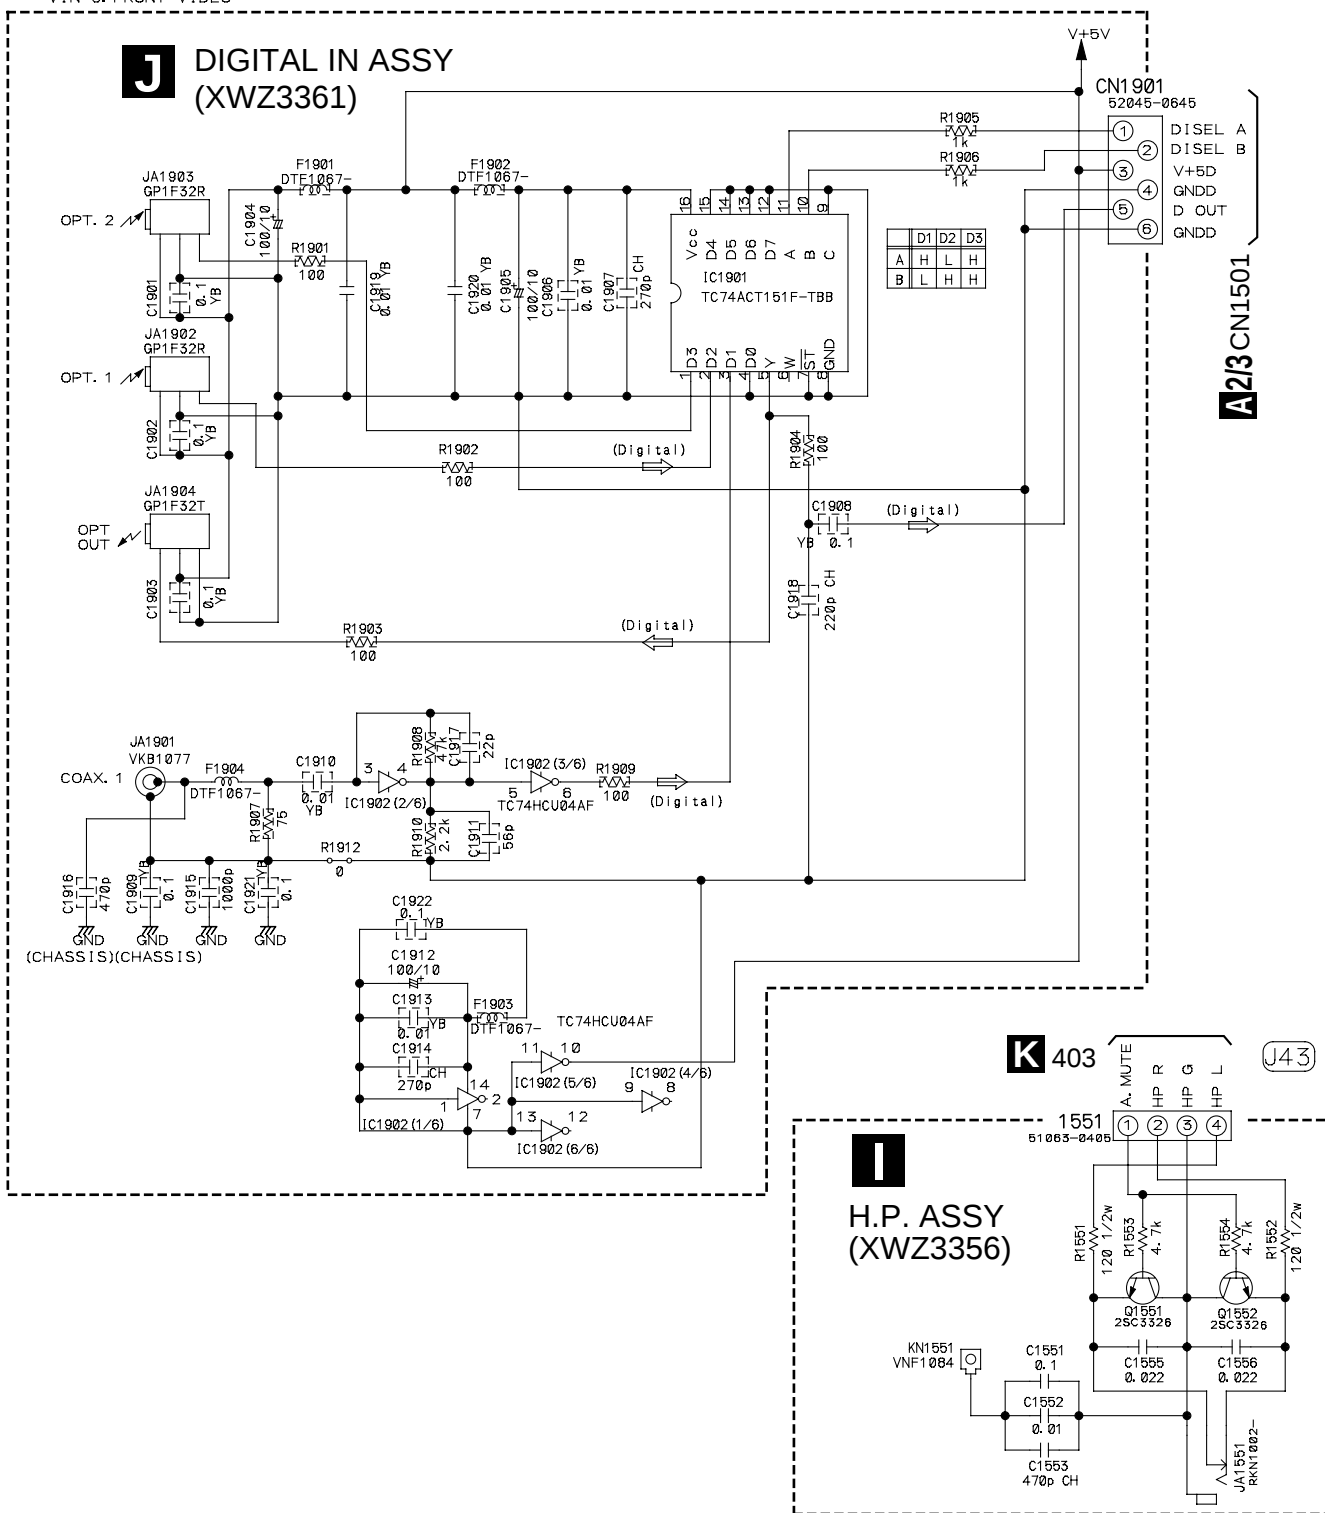


3.9 FRONT, R. ENCODER and POWER SW ASSYS


A

B

C

D

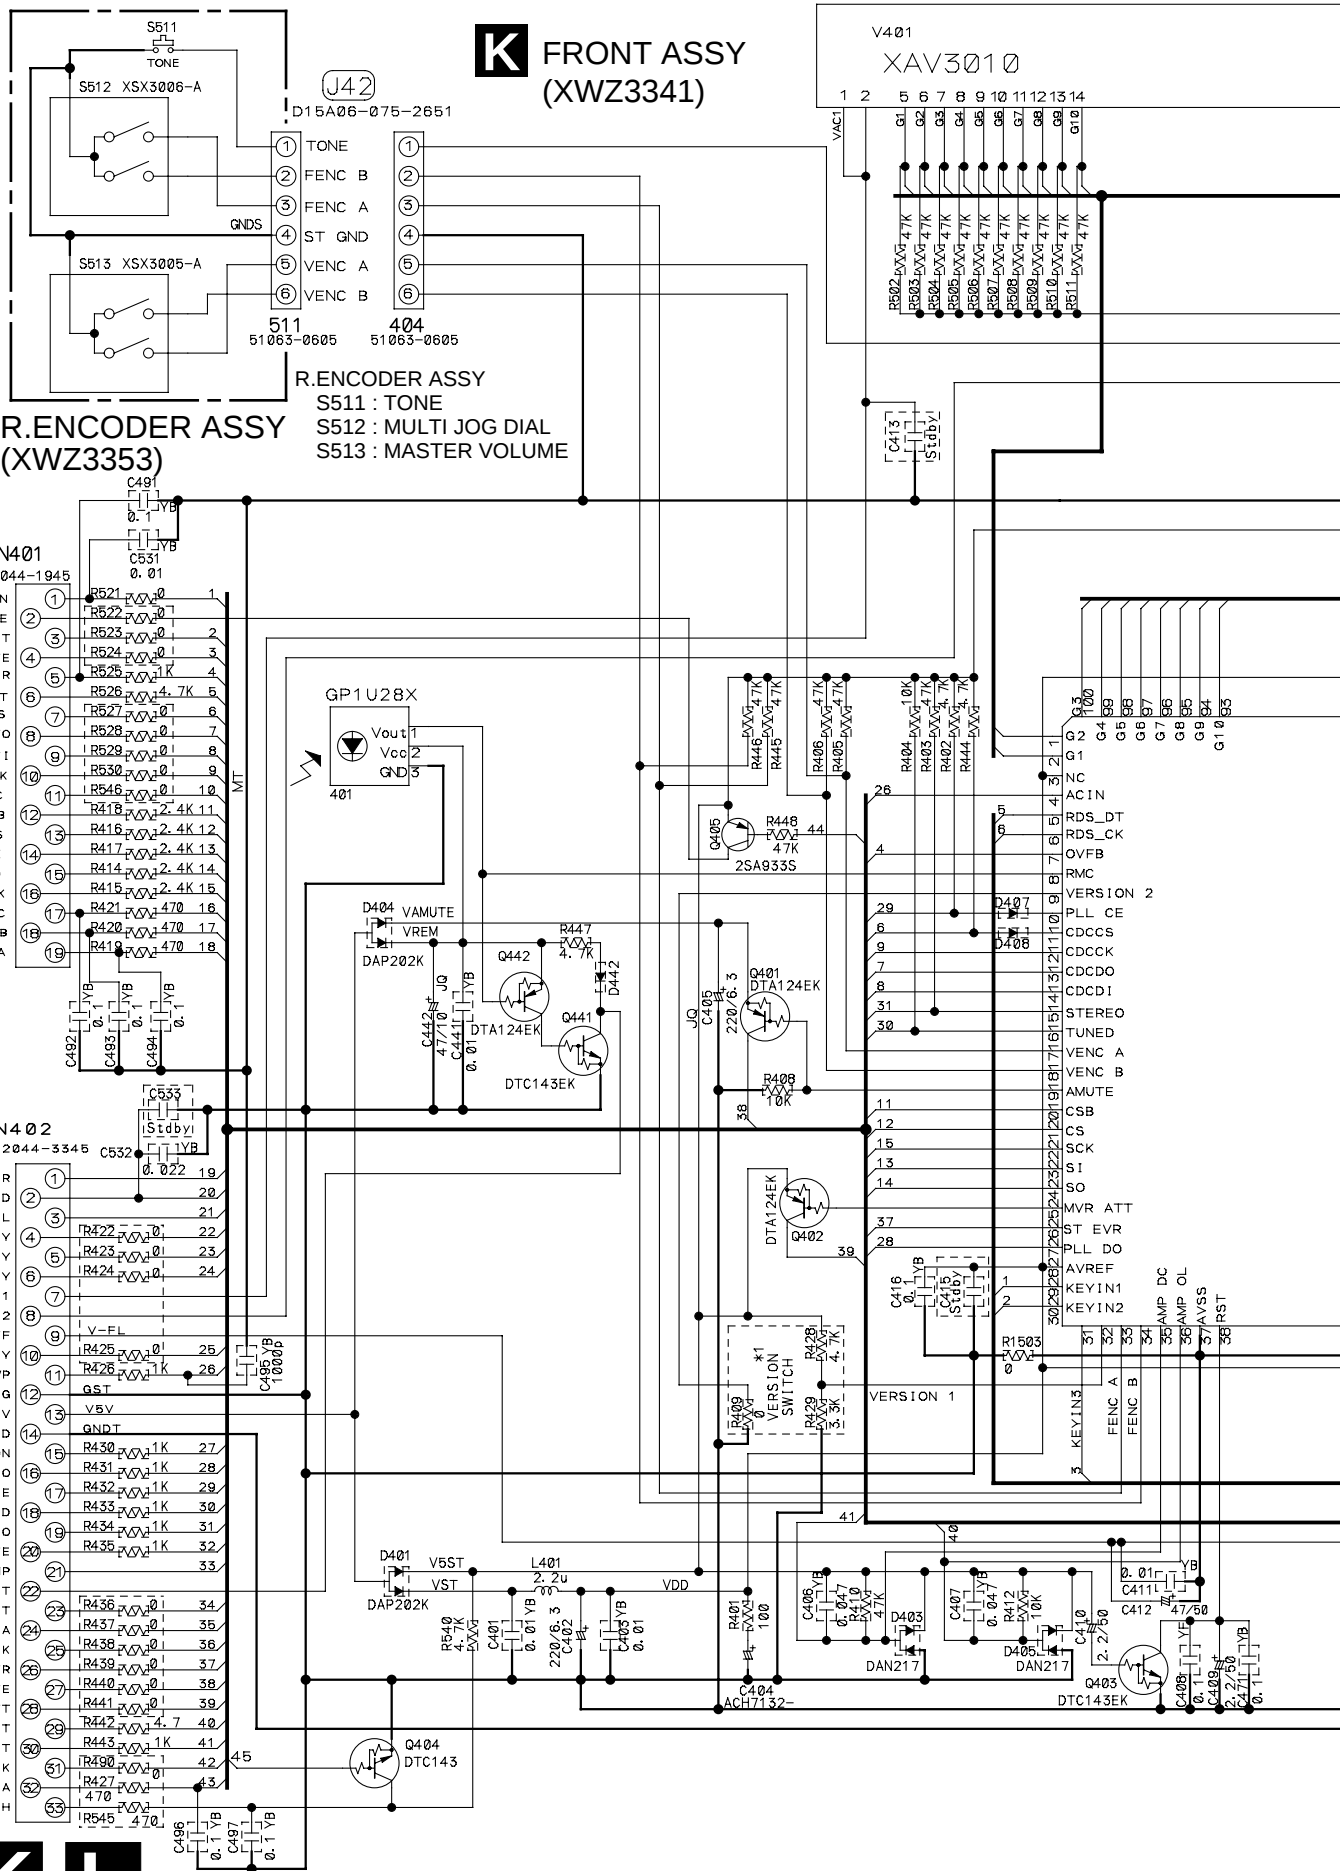

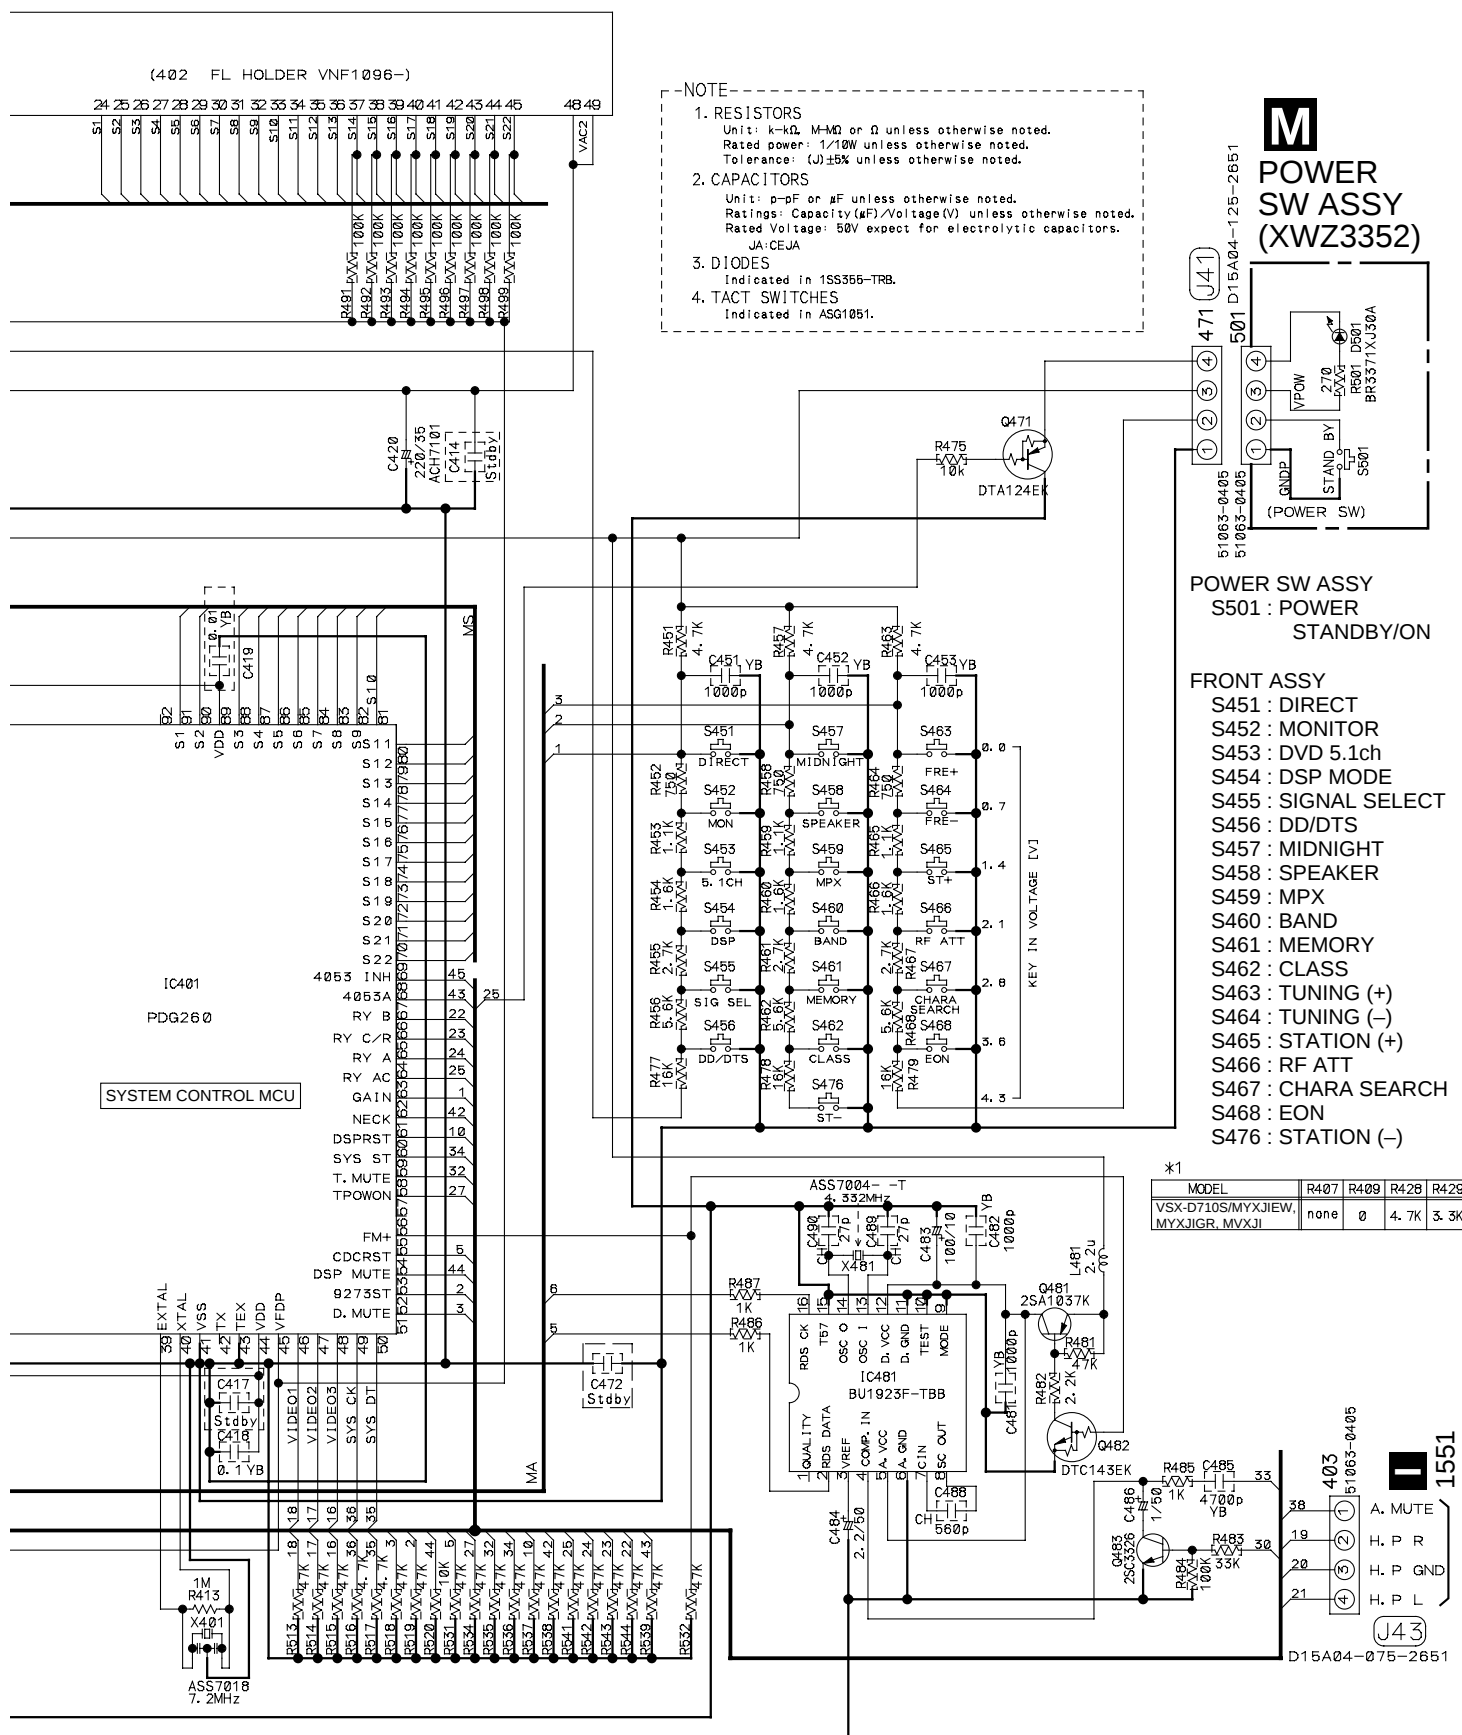

3.10 S. VIDEO, BOARD TO BOARD, FRONT VIDEO and COMPONENT ASSYS

NJM2296D control port status

SW1	SW2	SW3	SW4	SW5	Vout1	Vout2	Vout3
1	0	(1)	0	1	Vin2	Vin2	mute
1	1	(1)	0	1	Vin3	Vin3	Vin3
1	1	0	1	1	Vin4	Vin4	Vin4
1	1	1	1	1	Vin5	Vin5	Vin5
0	0	(0)	(0)	0	mute	mute	mute


VIN 2. VCR/DVR Vout1. MONITOR out
VIN 3. DVD/LD Vout2. MR out
VIN 4. TV/SAT Vout3. VCR/DVR out
VIN 5. FRONT VIDEO

Video Signal Flow
Audio Signal Flow

- NOTE
- 1. RESISTORS
Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J)±5% unless otherwise noted.
 - 2. CAPACITORS
Unit: p-pF or μF unless otherwise noted.
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.
 - 3. DIODES
Indicated in 1SS355-TR8

BOARD TO BOARD ASSY (XWZ3370)

S. VIDEO ASSY (XWZ3362)



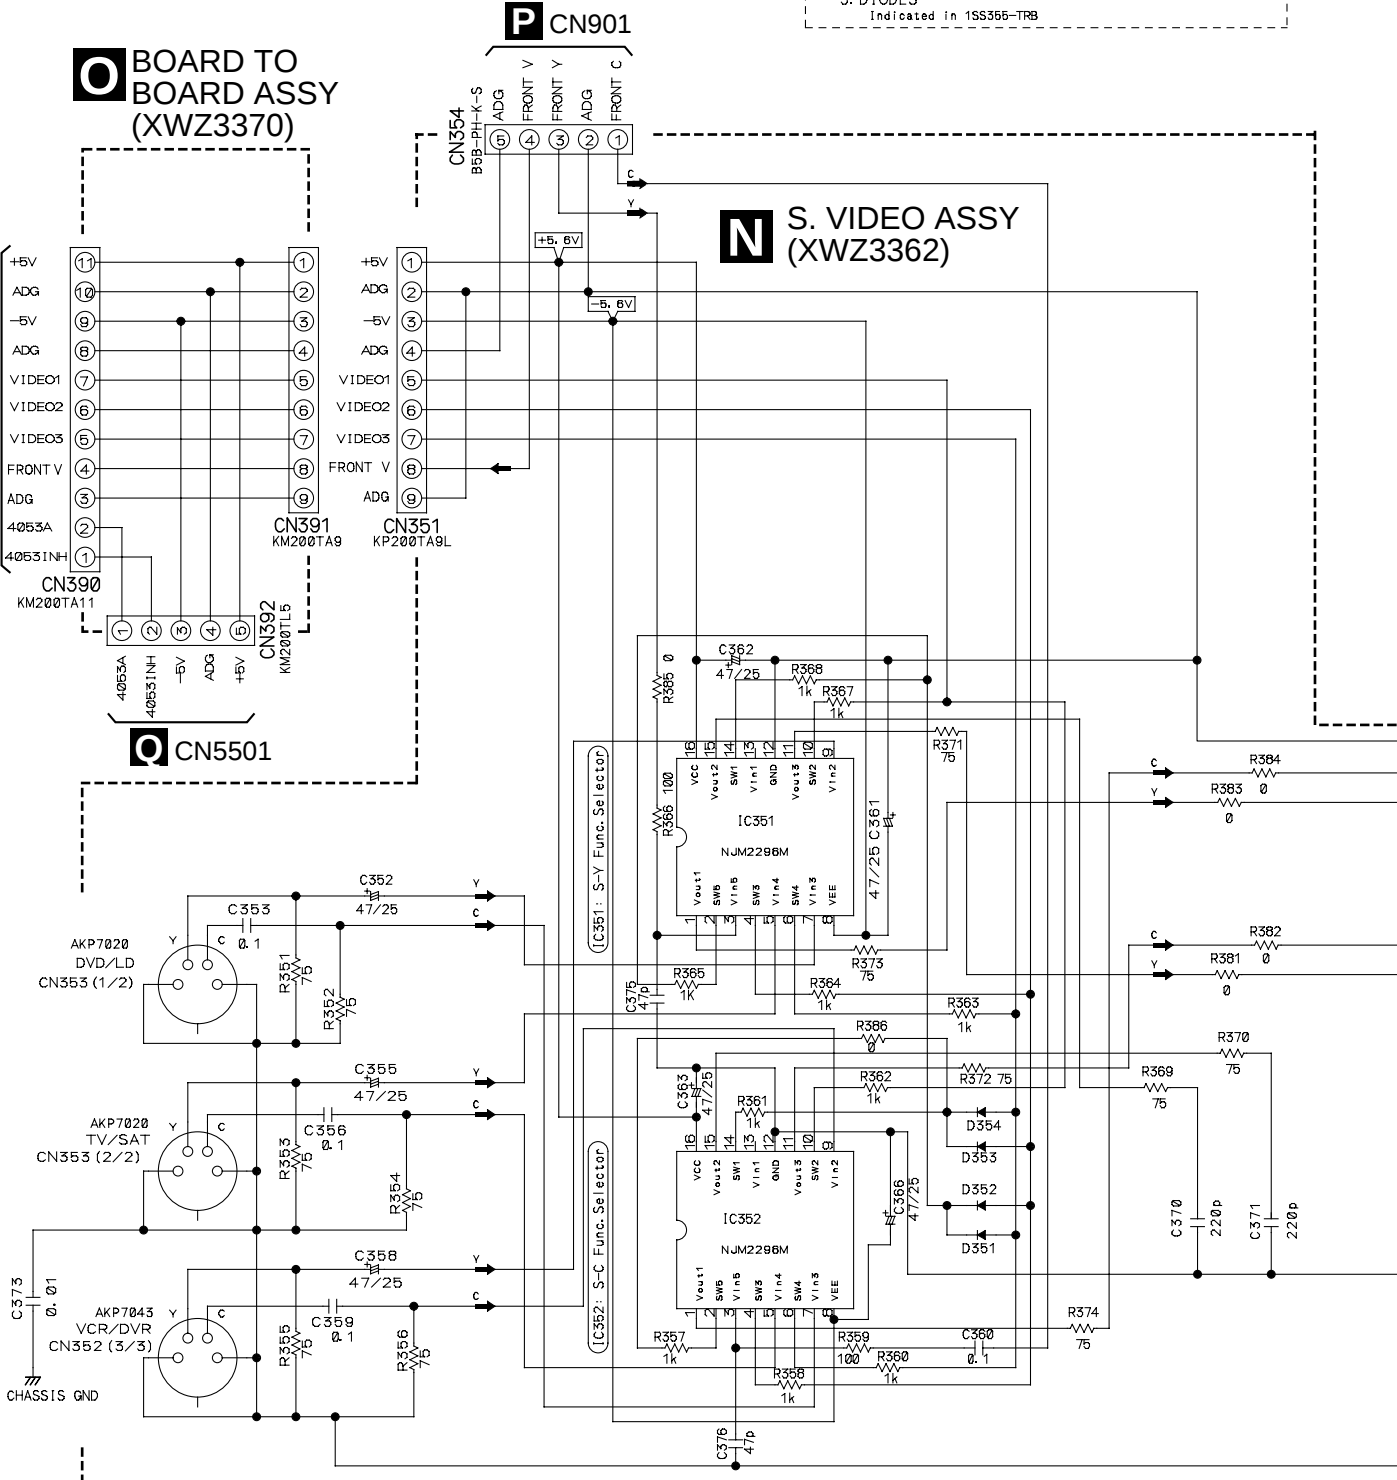





COMPONENT ASSY (XWZ3365)



CN392

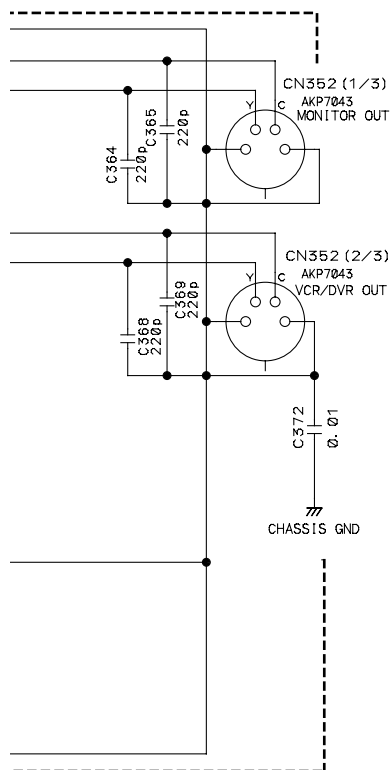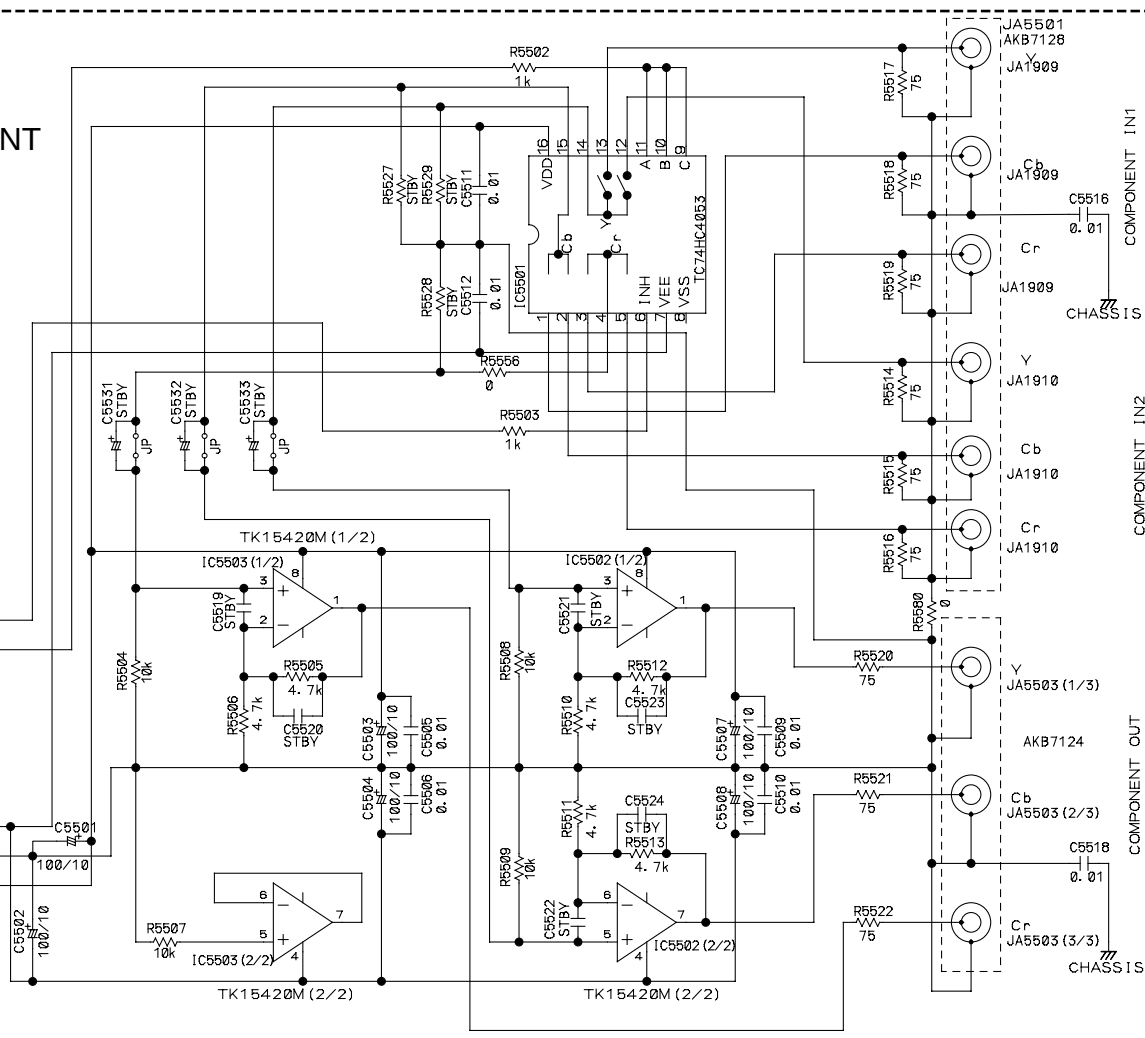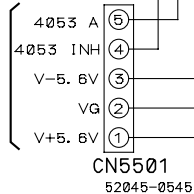

N CN354 A1/3 CN107

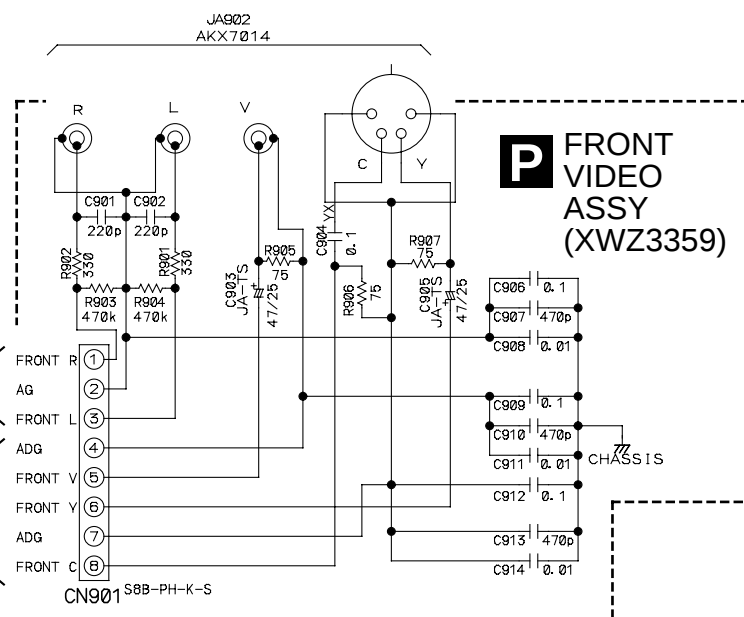

A



4


**B**

A D.D & INPUT ASSY




FM/AM TUNER UNIT **J** CN1901**SIDE A****E** CN802

A D.D & INPUT ASSY

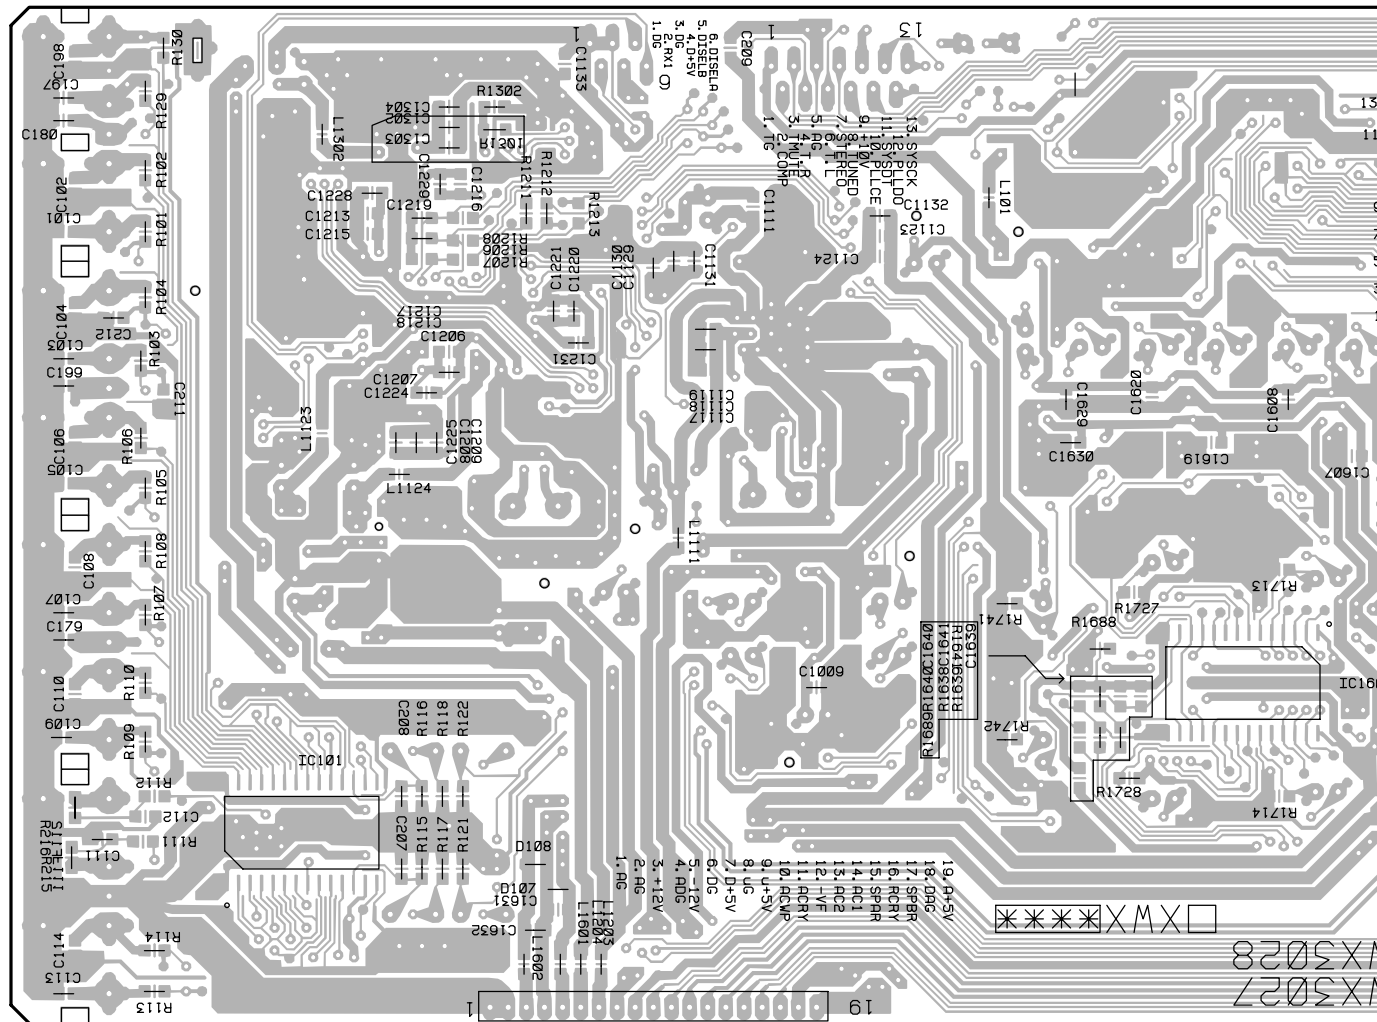

IC101

IC1801

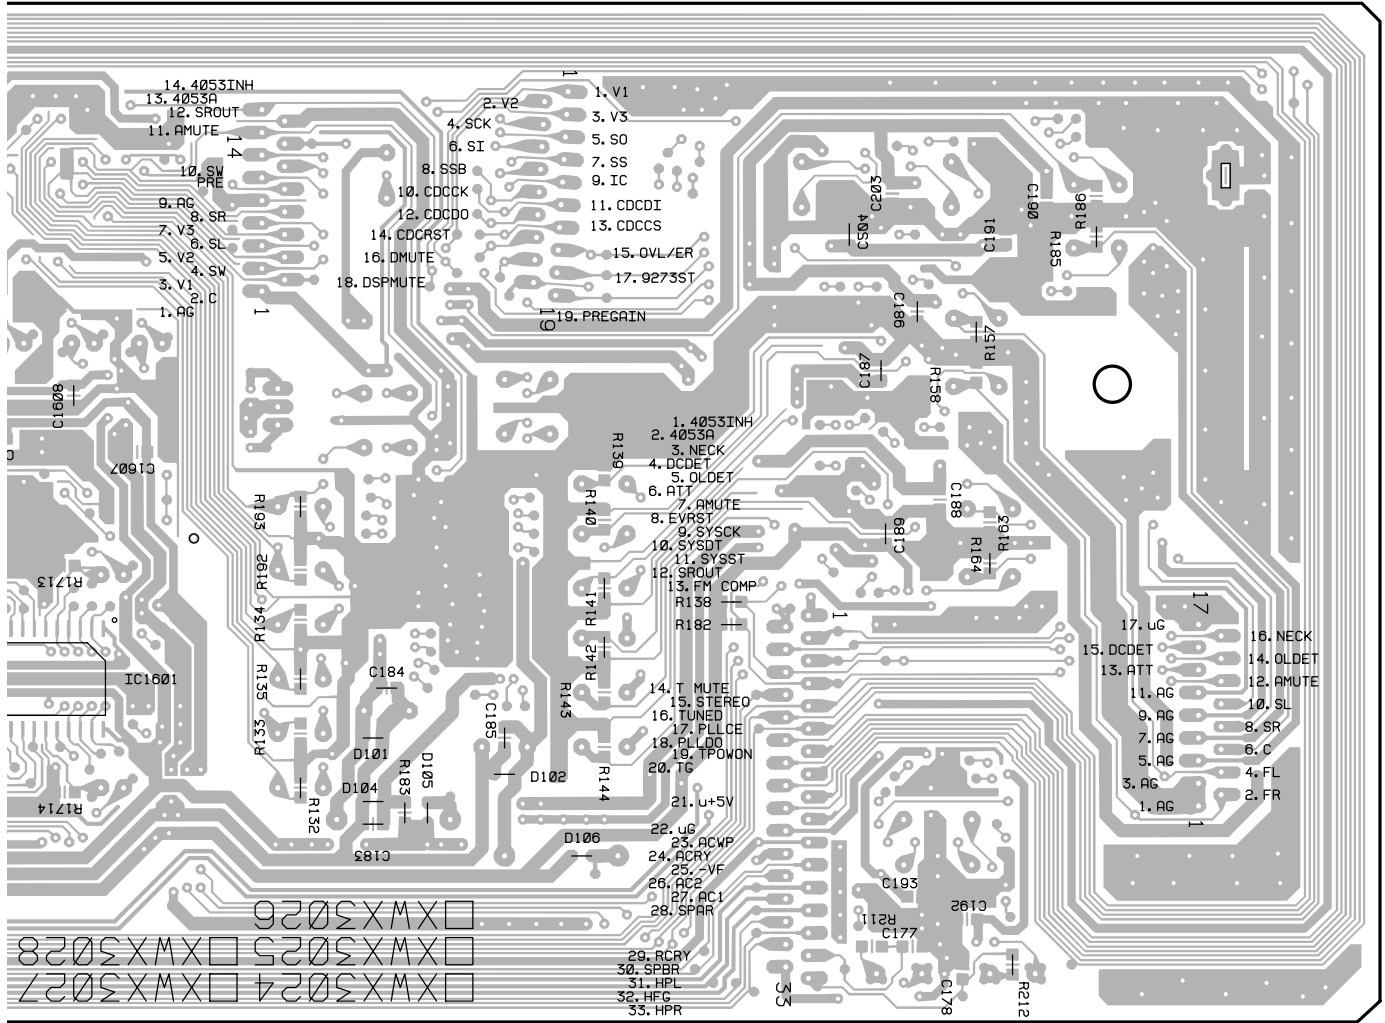


1801

(XNP3037-A)


SIDE B

4.5 H.P., FRONT, R.ENCODER and POWER SW ASSYS

K FRONT ASSY

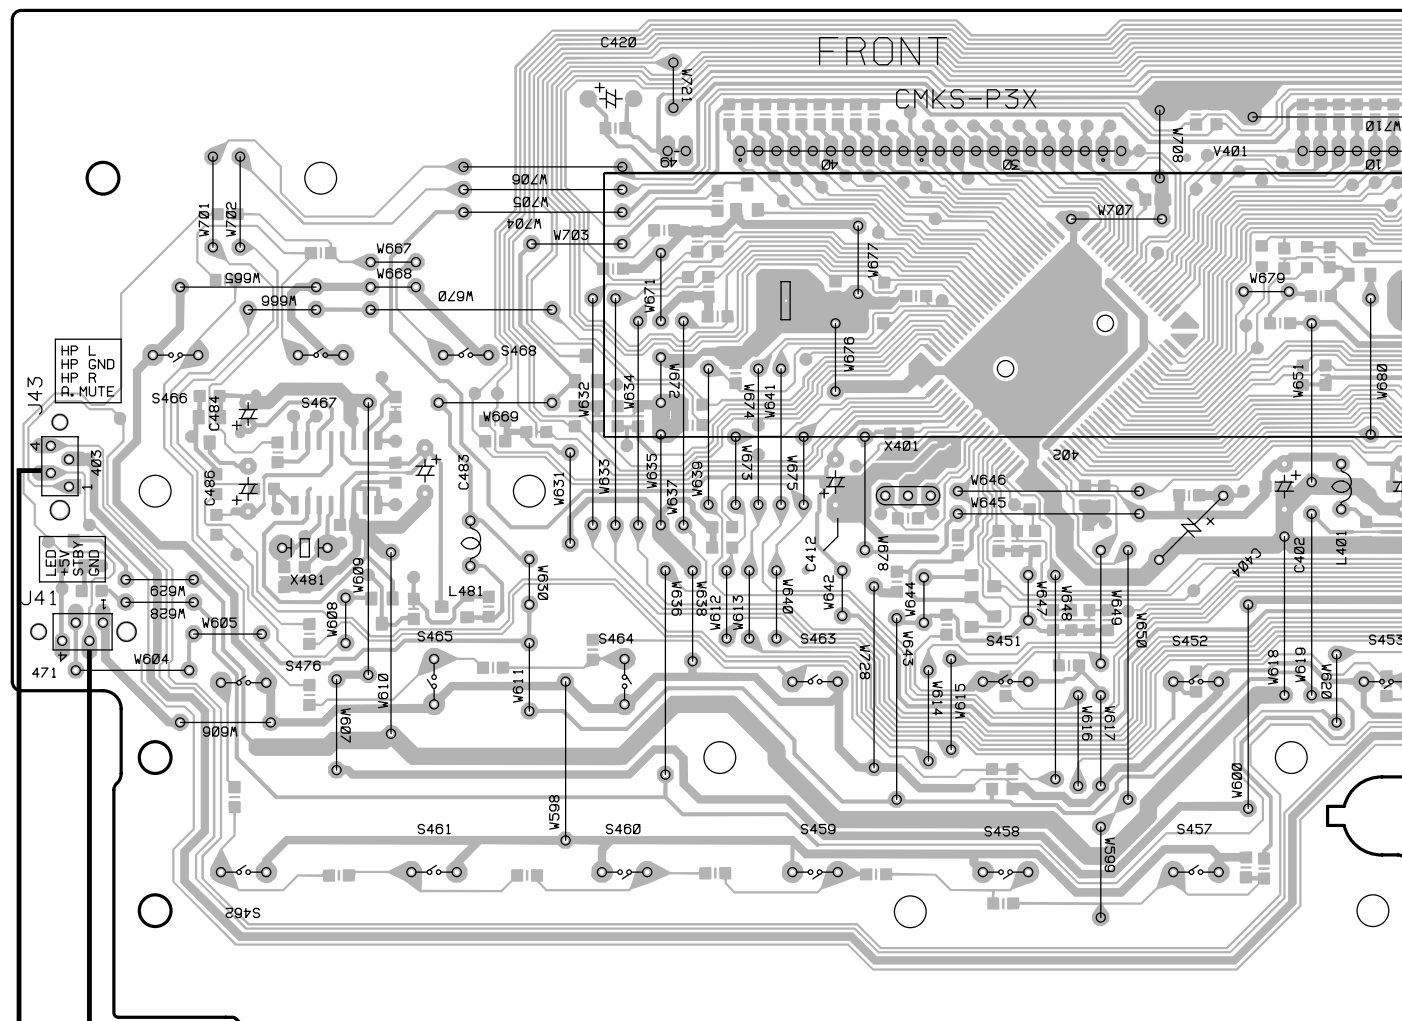

I H.P. ASSY

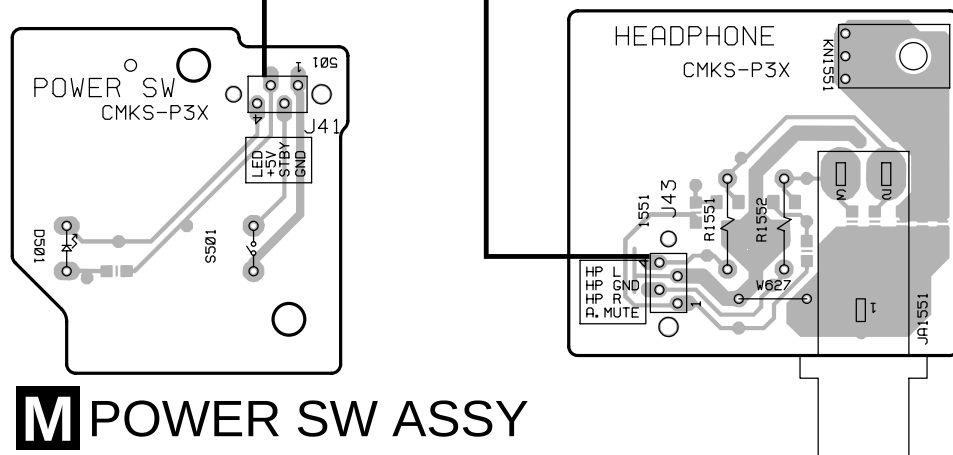

M POWER SW ASSY



A






SIDE B



D


I K M

4.7 S.VIDEO, BOARD TO BOARD and FRONT VIDEO ASSYS

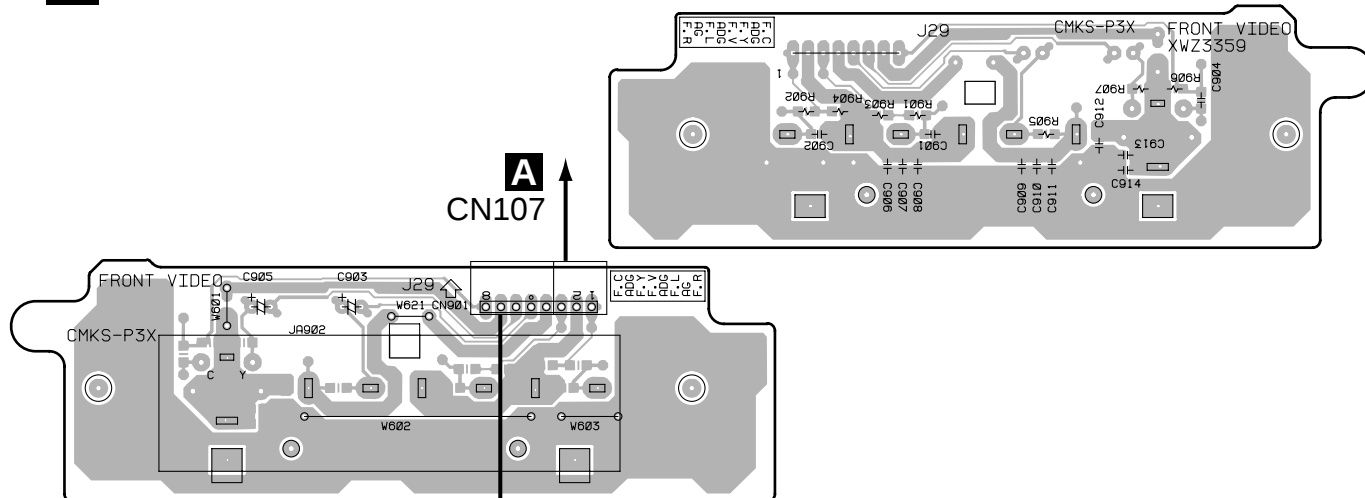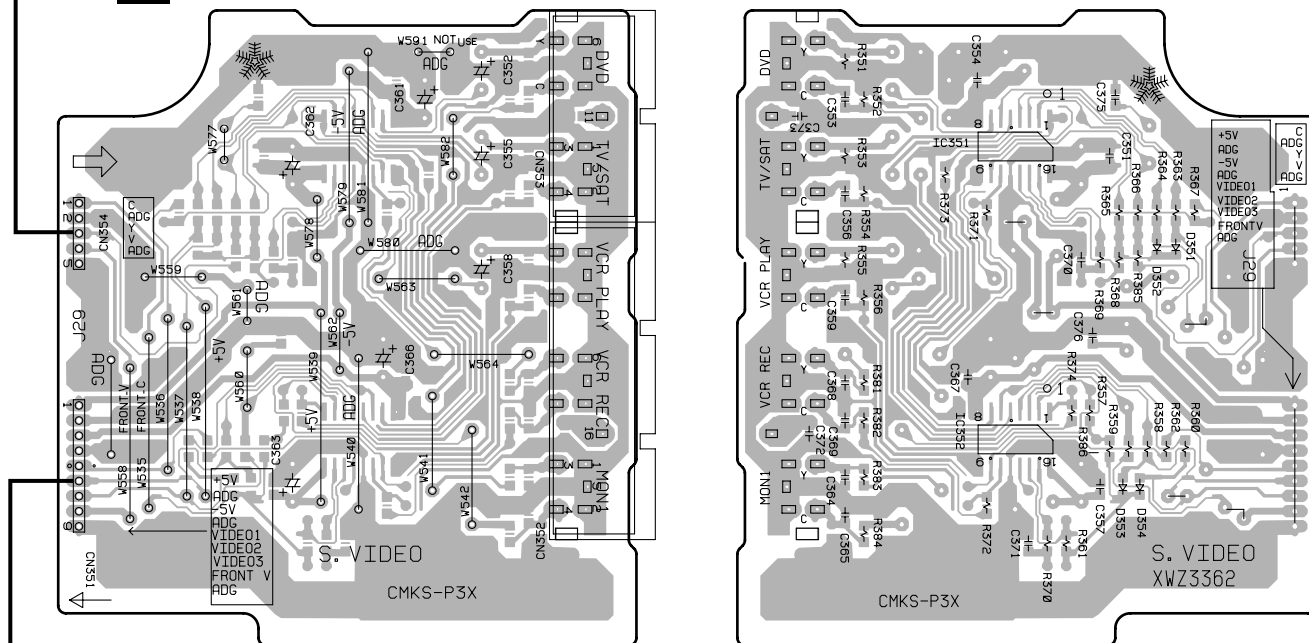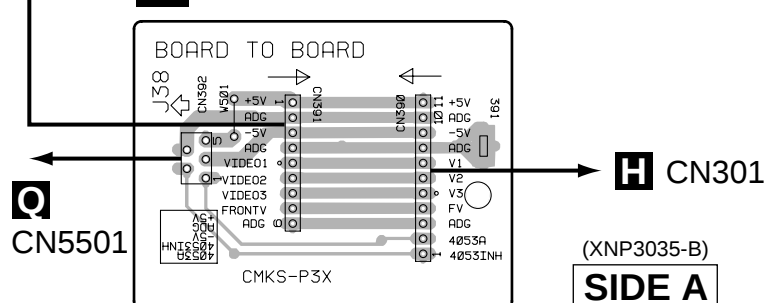
P FRONT VIDEO ASSY**N** S. VIDEO ASSY**O** BOARD TO BOARD ASSY(XNP3035-B)
SIDE B(XNP3035-B)
SIDE A

4.8 COMPONENT ASSY

Q COMPONENT ASSY

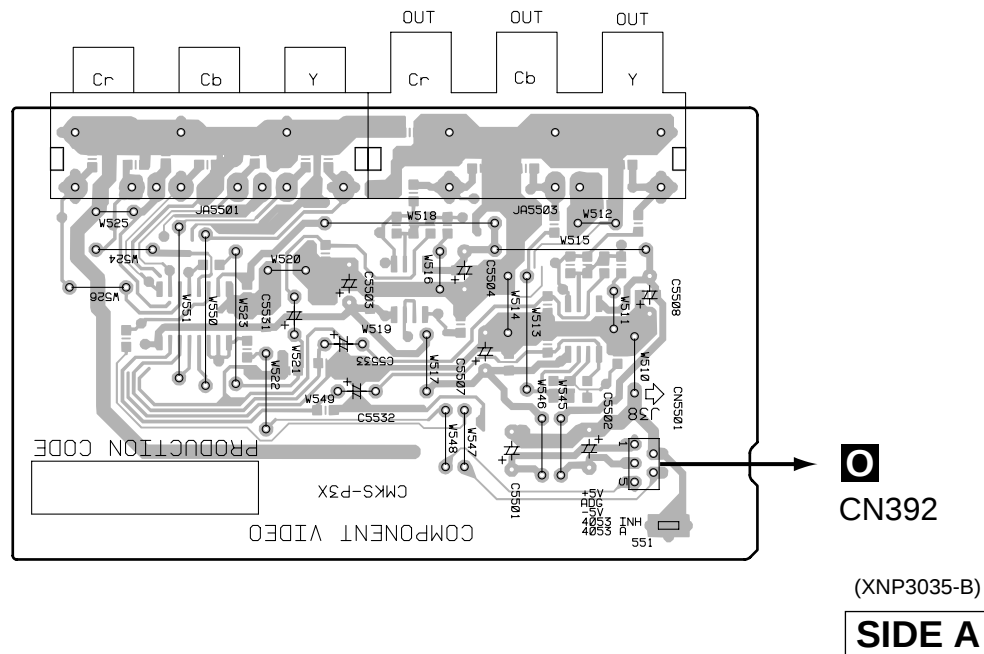

Q COMPONENT ASSY

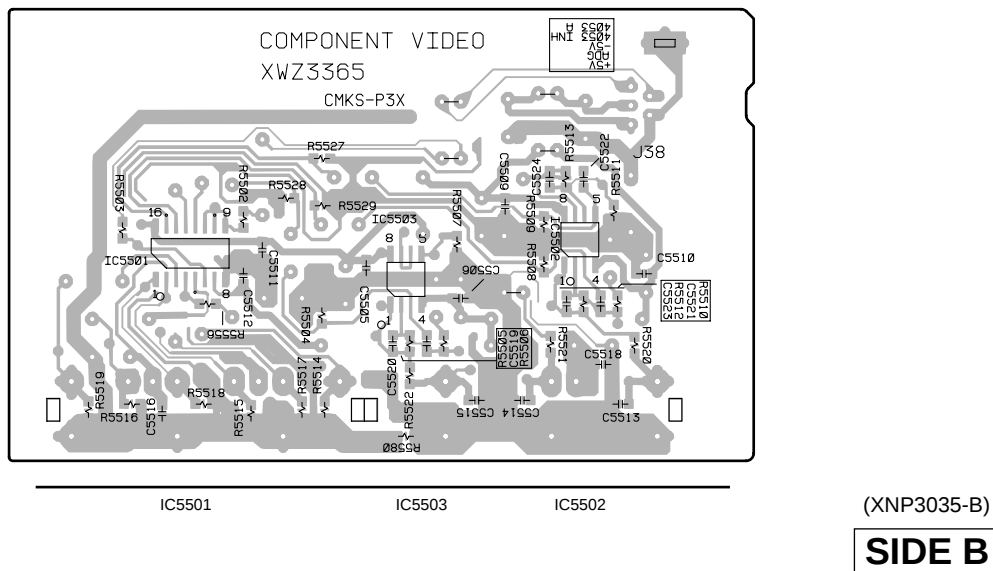

VSX-D710S

Mark	No.	Description	Part No.
	C1739, C1740 C1005, C1202 C144, C145, C147–C151, C205 C117, C118, C161, C162 C165, C166, C169	CEAT220M25 CEAT221M6R3 CEAT3R3M50 CEAT470M25 CEAT470M25	
	C155, C156 C1003, C1004, C115, C116, C1401 C1605, C1606, C1613, C1614 C1625, C1626, C170, C194, C195 C201	CEAT471M10 CEAT4R7M50 CEAT4R7M50 CEAT4R7M50 CEAT4R7M50	
	C1115 C1301 C1007, C1008 C1108, C140, C143 C1006, C1128, C1129, C1132, C1134	CEATR47M50 CEJQ101M10 CEJQNP100M10 CKSQYB224K16 CKSRYB103K50	
	C119, C120, C1205, C1206, C1208 C1211, C1214–C1216, C1220, C1222 C124, C125, C1302, C158 C1607, C1608, C1619, C1620 C1629, C1630, C1636, C1637, C1642	CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB103K50	
	C1709, C171, C1710–C1712, C172 C1723–C1726, C1737, C1738 C177–C180, C183, C186–C193 C199 C1135, C1136, C1705, C1706	CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB104K16	
	C1719, C1720, C1733, C1734 C1621 C168 C139, C142 C1615–C1618, C1627, C1703, C1704	CKSRYB104K16 CKSRYB122K50 CKSRYB152K50 CKSRYB153K50 CKSRYB222K50	
	C1717, C1718, C1731 C1107 C1701, C1702, C1715, C1716, C1729 C1732 C138, C141	CKSRYB222K50 CKSRYB223K50 CKSRYB682K50 CKSRYB682K50 CKSRYB822K50	
	C1105, C1109, C1226, C1227, C1230 C1232, C202 C1009, C1111, C1117, C1133, C1219 C1224, C1225, C1228, C1229, C1231 C1304, C1631, C1632, C209	CKSRYF104Z16 CKSRYF104Z16 CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25	
	C1628 C184, C185	CKSRYF104Z50 CKSRYF473Z50	

RESISTORS

△	R174, R175 Other Resistors	RS1LMF101J RS1/16S□□□J
---	-------------------------------	---------------------------

OTHERS

CN1501	CONNECTOR 6P	52045-0645
CN105	CONNECTOR 13P	52045-1345
CN104	CONNECTOR 14P	52045-1445
CN106	CONNECTOR 17P	52045-1745
CN103	CONNECTOR 19P	52045-1945
CN102	CONNECTOR 33P	52045-3345
JA101–JA104	PIN JACK (4P)	AKB7048
CN107	CONNECTOR POST	B3B-PH-K
CN101	19P SOCKET	KP200TA19L
101, 102	PCB BINDER	VEF1040
X1101	CRYSTAL RESONATOR (18.432MHz)	RSS1052
X1201	CRYSTAL RESONATOR (12.288MHz)	VSS1140

Mark	No.	Description	Part No.
B	AMP&PRIMARY ASSY		
	SEMICONDUCTORS		
	IC52	PROTECTOR (315mA)	AEK7003
△	IC603	PROTECTOR (1A)	AEK7009
△	IC604–IC607	PROTECTOR (10A)	AEK7022
	IC51		NJM78M56FA
△	IC601		PAC010A
△	IC602		PAC011A
	Q703		2SA1145
	Q702		2SB1238X
	Q691, Q692		2SC1740S
	Q704		2SC1845
	Q605, Q606, Q633, Q655, Q656		2SC2240
	Q601–Q604, Q631, Q632		2SC2878
	Q651–Q654		2SC2878
	Q701		2SD1859X
	Q51		KRC101M
	D56, D57, D601–D604		1SS133
	D631, D632, D651–D654		1SS133
	D751, D752, D755–D758		1SS133
△	D701, D702		D5SBA20(B)
	D711		MTZJ22D
	D58		MTZJ5.1A
	D712		MTZJ5.1B
	D605, D606, D633, D634		MTZJ8.2A
△	D51–D55, D721–D724		S5688G
	COILS AND FILTERS		
△	L51	LINE FILTER	ATF7018
	L751–L753, L761, L762	COIL	ATH1004
	SWITCHES AND RELAYS		
	RY751–RY754	RELAY	XSR3002
△	RY51	JOE LOWPOWER RELAY	XSR3003
	CAPACITORS		
△	C707, C708	(0.01μF/AC250V)	ACG1005
	C51, C52	(10000pF/AC250V)	ACG7020
	C701, C702	(4700μF/63V)	ACH7134
	C703, C704	(3300μF/42V)	ACH7135
	C613, C614, C637, C663, C664		CCCSL101J50
	C607–C610, C634, C635		CCCSL6R0D50
	C657–C660		CCCSL6R0D50
	C615, C616, C638, C665, C666		CEANP2R2M50
	C705, C706		CEAT100M2A
	C712		CEAT101M10
	C611, C612, C636, C661, C662		CEAT101M16
	C711		CEAT101M35
	C53		CEAT102M16
	C692		CEAT221M10
	C54		CEAT470M25
	C605, C606, C633, C655, C656		CEAT4R7M50
	C751–C756, C761–C764		CFTYA224J50
	C55–C57		CGCYX103M25
	C601, C602, C631, C651, C652		CKCYB102K50
	C691		CKCYB102K50
	C603, C604, C632, C653, C654		CKCYB331K50
	C769, C770		CKPUYB102K50
	C757–C759, C765–C768		CQMBA472J50

Mark	No.	Description	Part No.
------	-----	-------------	----------

RESISTORS

△	R52		RD1/2PM270J
△	R751, R752, R755, R761, R762		RD1/4PUF101J
△	R753, R754, R756, R763, R764		RS1LMF4R7J
△	R711		RS2LMF332J
△	R615, R616, R638, R665, R666 (0.22Ω/5W)		XCN3001

Other Resistors		RD1/4PU□□□J
-----------------	--	-------------

OTHERS

	52	3P CABLE HOLDER	51048-0300
	701	7P CABLE HOLDER	51048-0700
	CN53	22P CONNECTOR	52045-2245
	CN752	SPEAKER TERMINAL 8-P	AKE7059
	CN751	SPEAKER TERMINAL 6-P	AKE7061
	H51, H52	FUSE CLIP	AKR7001
△	T51	STANDBY TRANSFORMER	ATT7037
	CN601	16P PLUG	KM200TA16
	CN51	AC CODE SOCKET	RKP1751
	KN51, KN601	EARTH METAL FITTING	VNF1084
	CN753	PIN JACK 1-P	XKB3008

C TRANS2 ASSY**SEMICONDUCTORS**

△	IC853	PROTECTOR (1.6A)	AEK7012
△	IC851, IC852	PROTECTOR (4A)	AEK7018

OTHERS

	851	7P CABLE HOLDER	51048-0700
--	-----	-----------------	------------

D TRANS3 ASSY

TRANS3 ASSY has no service part.

E REGULATOR ASSY**SEMICONDUCTORS**

	IC803, IC804		NJM78M05FA
	IC801		NJM78M12FA
	IC802		NJM79M12FA
	Q801, Q803, Q805		KRA103M
	Q802, Q804, Q806		KRC101M
△	D801-D804		S5688G

CAPACITORS

	C808, C811		CEAT101M10
	C805, C806		CEAT101M16
	C809		CEAT222M16
	C801, C802		CEAT222M25
	C803, C804, C807, C810		CGCYX103M25

RESISTORS

	R801		RS3LMF101J
--	------	--	------------

OTHERS

	CN801	22P CONNECTOR	52045-2245
	CN802	19P PLUG	KM200TA19
	CN803	5P PLUG	KM200TA5

Mark	No.	Description	Part No.
------	-----	-------------	----------

F AMP INPUT ASSY**SEMICONDUCTORS**

	IC251		NJM4558D-D
	Q257		2SA933S
	Q251, Q256		2SC2878
	Q252		2SD1858X
	Q254		KRA103M
	Q253, Q255		KRC103M
	D251, D252		1SS133
	D253		MTZJ27D
	D254		MTZJ5.1B

CAPACITORS

	C251		CEANP470M25
	C254		CEAT101M25
	C252, C253		CKPUYF103Z25

RESISTORS

All Resistors		RD1/4PU□□□J
---------------	--	-------------

OTHERS

CN251	3P CONNECTOR	52044-0345
CN254	17P CONNECTOR	52044-1745
CN252	PLUG 3-P	KM250MA3L
CN253	16P SOCKET	KP200TA16L

GA TRANS1 ASSY

TRANS1 ASSY has no service part.

GB MECHA SW ASSY**SWITCHES AND RELAYS**

S591		ASG7014
------	--	---------

CAPACITORS

C591, C592		CKSQYF103Z50
------------	--	--------------

OTHERS

CN591	3PJUMPER CONNECTOR	52151-0310
-------	--------------------	------------

GC TRANS4 ASSY**SEMICONDUCTORS**

IC891, IC892	PROTECTOR (630mA)	AEK7006
D891		S1WB(A)60SD

CAPACITORS

C891, C892		CEAT471M35
------------	--	------------

OTHERS

CN891	3P CONNECTOR	52045-0345
-------	--------------	------------

VSX-D710S

Mark	No.	Description	Part No.
------	-----	-------------	----------

H VIDEO&6CH IN ASSY SEMICONDUCTORS

IC301	NJM2296M
IC302, IC303	NJM4558MD
Q302	2SA1515
Q303	2SC2878
Q301	2SC3377
D301, D302, D305, D306	1SS355
D303, D304	UDZS6.2B

CAPACITORS

C319, C320, C327, C328	CCSRCH101J50
C342-C345	CCSRCH101J50
C347	CCSRCH470J50
C307-C310, C312, C314, C338	CEAT470M25
C321, C324, C331, C332	CEAT4R7M50
C302, C315, C316, C322, C323	CKSRYB103K50
C329, C330, C346	CKSRYB103K50
C339, C340	CKSRYB104K25
C304-C306, C317, C318	CKSRYB221K50
C325, C326	CKSRYB221K50
C333	CKSRYB331K50
C311, C313	CKSRYB473K25

RESISTORS

R313, R316	RS3LMF390J
Other Resistors	RS1/16S□□□J

OTHERS

CN303	14P CONNECTOR	52044-1445
CN307	PIN JACK (4P)	AKB7087
CN305	6P PIN JACK	AKB7123
CN301	11P SOCKET	KP200TA11L
CN302	5P SOCKET	KP200TA5L
JA301	JACK	RKN1004

I H.P. ASSY SEMICONDUCTORS

Q1551, Q1552	2SC3326
--------------	---------

CAPACITORS

C1553	CCSRCH471J50
C1552	CKSRYB103K50
C1551	CKSRYB104K16
C1555, C1556	CKSRYB223K50

RESISTORS

△ R1551, R1552	RS1/2LMF121J
Other Resistors	RS1/16S□□□J

OTHERS

1551	CABLE HOLDER(4P)	51063-0405
JA1551	JACK	RKN1002
KN1551	EARTH METAL FITTING	VNF1084

Mark	No.	Description	Part No.
------	-----	-------------	----------

J DIGITAL IN ASSY SEMICONDUCTORS

IC1901	TC74ACT151F
IC1902	TC74HCU04AF

COILS AND FILTERS

F1901-F1904	CHIP BEAD	DTF1067
-------------	-----------	---------

CAPACITORS

C1917	CCSRCH220J50
C1918	CCSRCH221J50
C1907, C1914	CCSRCH271J50
C1916	CCSRCH471J50
C1911	CCSRCH560J50
C1904, C1905, C1912	CEAT101M10
C1915	CKSRYB102K50
C1906, C1910, C1913, C1919, C1920	CKSRYB103K50
C1901-C1903, C1908, C1909	CKSRYB104K25
C1921, C1922	CKSRYB104K25

RESISTORS

All Resistors	RS1/16S□□□J
---------------	-------------

OTHERS

CN1901	CONNECTOR 6P	52045-0645
JA1902, JA1903	GP1F32R	
	OPTICAL RECEIV MOD.	
JA1904	OPTICAL LINK OUT	GP1F32T
JA1901	JACK	VKB1077

K FRONT ASSY SEMICONDUCTORS

IC481	BU1923F
IC401	PDG260A
Q405, Q481	2SA1037K
Q483	2SC3326
Q401, Q402, Q442, Q471	DTA124EK
Q403, Q404, Q441, Q482	DTC143EK
D407, D408, D442	1SS355
D403, D405	DAN217
D401, D404	DAP202K

COILS AND FILTERS

L401, L481	LFEA2R2J
------------	----------

SWITCHES AND RELAYS

S451-S468, S476	ASG1051
-----------------	---------

CAPACITORS

C420 (220μF/35V)	ACH7101
C404 (0.047F/5.5V)	ACH7132
C489, C490	CCSRCH270J50
C488	CCSRCH561J50
C483	CEAT101M10
C402	CEAT221M6R3
C409, C410, C484	CEAT2R2M50
C412	CEAT470M50
C486	CEATR10M50
C405	CEJQ221M6R3

Mark	No.	Description	Part No.
	C442		CEJQ470M10
	C451–C453, C481, C482, C495		CKSRYB102K50
	C401, C403, C411, C419, C441		CKSRYB103K50
	C531		CKSRYB103K50
	C408, C416, C418, C471		CKSRYB104K16
	C491–C494, C497		CKSRYB104K16
	C496		CKSRYB104K25
	C532		CKSRYB223K25
	C485		CKSRYB472K50
	C406, C407		CKSRYB473K16

RESISTORS

All Resistors

RS1/16S□□□J

OTHERS

403, 471	CABLE HOLDER (4P)	51063-0405
404	CABLE HOLDER (6P)	51063-0605
CN401	19P CONNECTOR	52044-1945
CN402	33P CONNECTOR	52044-3345
V401	FL TUBE	XAV3010
X481	CRYSTAL RESONATOR (4.332MHz)	ASS7004
X401	CERAMIC RESONATOR (7.2MHz)	ASS7018
401	REMOTE RECEIVER UNIT	GP1U28X

L R.ENCODER ASSY**SWITCHES AND RELAYS**

S511		ASG1051
S513	ROTARY ENCODER	XSX3005
S512	ROTARY ENCODER	XSX3006

OTHERS

511	CABLE HOLDER (6P)	51063-0605
-----	-------------------	------------

M POWER SW ASSY**SEMICONDUCTORS**

D501		BR3371XJ30A
------	--	-------------

SWITCHES AND RELAYS

S501		ASG1051
------	--	---------

RESISTORS

All Resistors

RS1/16S□□□J

OTHERS

501	CABLE HOLDER (4P)	51063-0405
-----	-------------------	------------

N S. VIDEO ASSY**SEMICONDUCTORS**

IC351, IC352		NJM2296M
D351–D354		1SS355

CAPACITORS

C375, C376		CCSRCH470J50
C352, C355, C358, C361–C363		CEAT470M25
C366		CEAT470M25
C372, C373		CKSRYB103K50
C351, C353, C354, C356, C357		CKSRYB104K25

Mark	No.	Description	Part No.
	C359, C367		CKSRYB104K25
	C364, C365, C368–C371		CKSRYB221K50

RESISTORS

All Resistors

RS1/16S□□□J

OTHERS

CN353	SOCKET	AKP7020
CN352	SOCKET	AKP7043
CN354	CONNECTOR POST	B5B-PH-K
CN351	9P SOCKET	KP200TA9L

O BOARD TO BOARD ASSY**OTHERS**

CN392	CONNECTOR	52045-0545
CN390	11P PLUG	KM200TA11
CN391	9P PLUG	KM200TA9

P FRONT VIDEO ASSY**CAPACITORS**

C903, C905		CEJQ470M25
C908, C911, C914		CKSRYB103K50
C904, C906, C909, C912		CKSRYB104K25
C901, C902		CKSRYB221K50
C907, C910, C913		CKSRYB471K50

RESISTORS

All Resistors

RS1/16S□□□J

OTHERS

JA902	PIN JACK (4P)	AKX7014
CN901	CONNECTOR	S8B-PH-K-S

Q COMPONENT ASSY**SEMICONDUCTORS**

IC5501		TC74HC4053AF
IC5502, IC5503		TK15420M

CAPACITORS

C5501–C5504, C5507, C5508		CEAT101M10
C5505, C5506, C5509–C5512, C5516		CKSRYB103K50
C5518		CKSRYB103K50

RESISTORS

All Resistors

RS1/16S□□□J

OTHERS



CN5501	CONNECTOR	52045-0545
JA5503	3P RCA PINJACK	AKB7124
JA5501	6P RCA PINJACK	AKB7128

6. ADJUSTMENT

There is no information to be shown in this chapter.


7. GENERAL INFORMATION
7.1 DISASSEMBLY AND DIAGNOSIS

■ Diagnosis

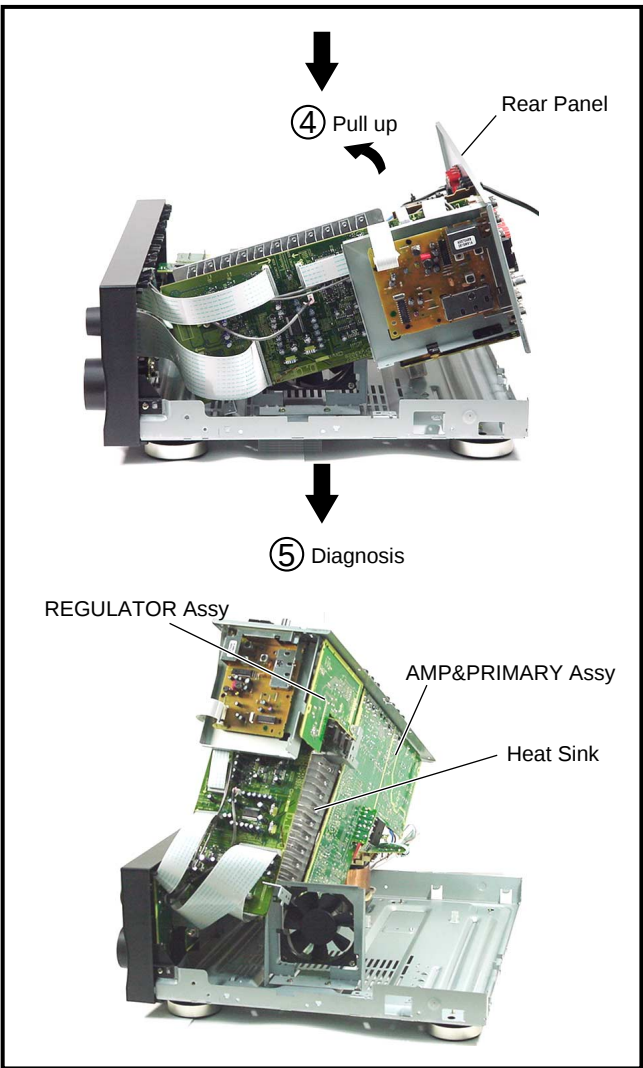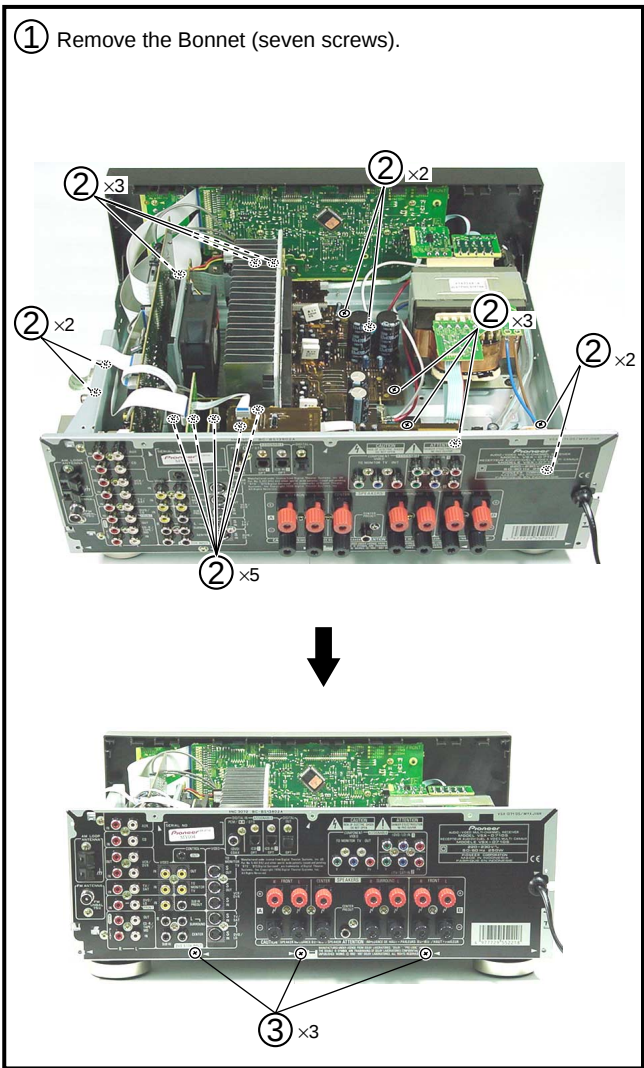



Note : The product does not operate when took off the screws of Speaker Terminal from Rear Panel.

■ PCB Location

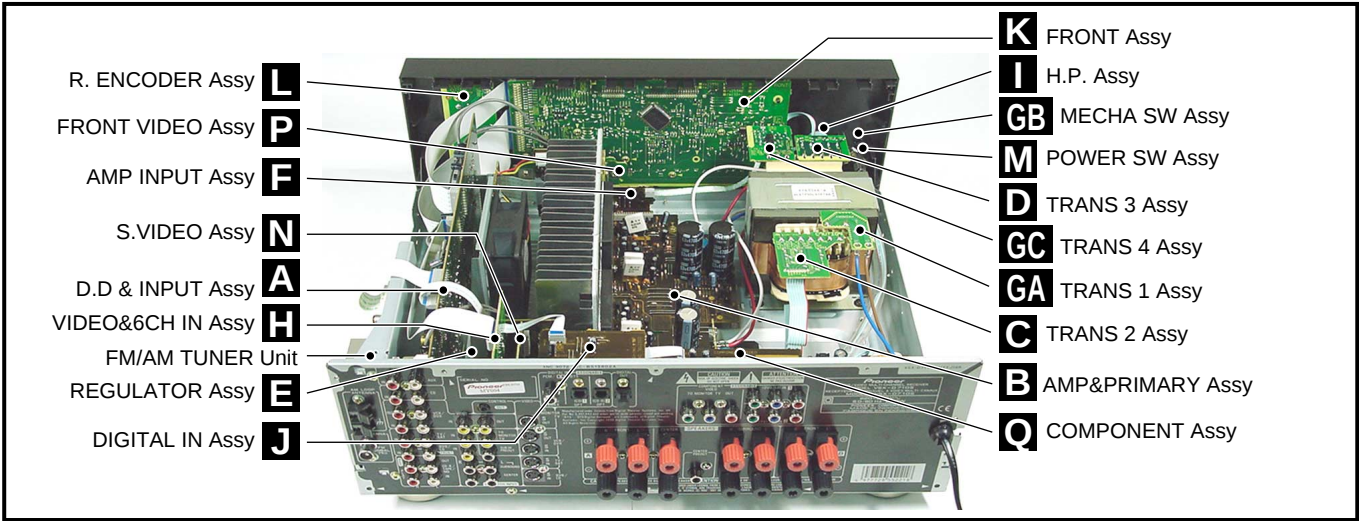

■ Diagnosis of D.D & INPUT Assy

- ① Remove FM/AM TUNER Unit and Shield R3 (five screws).

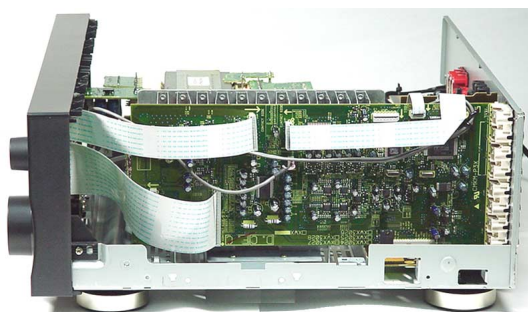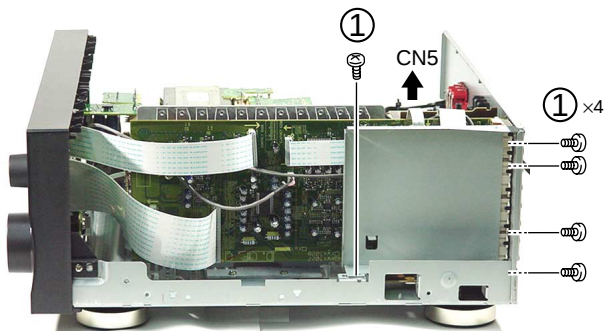

- ② Please check SIDE A of the D.D & INPUT Assy on this status.



Note : When FM/AM TUNER Unit was removed,
the product operates except FM/AM TUNER.

Please check IC101 mounted on SIDE B from SIDE A.

The Pin number points on SIDE A of IC101 are shown as follows.

A D.D & INPUT Assy

SIDE A

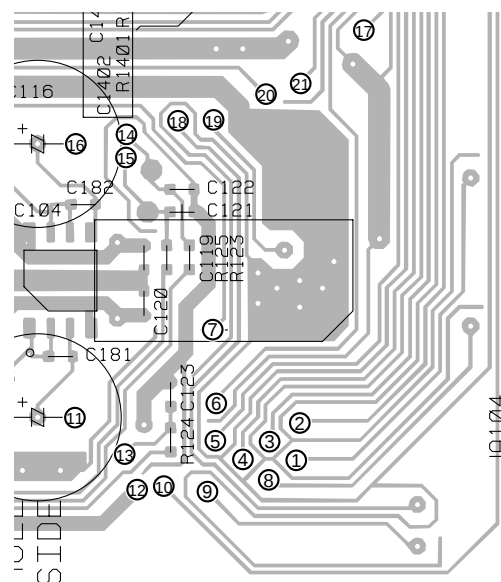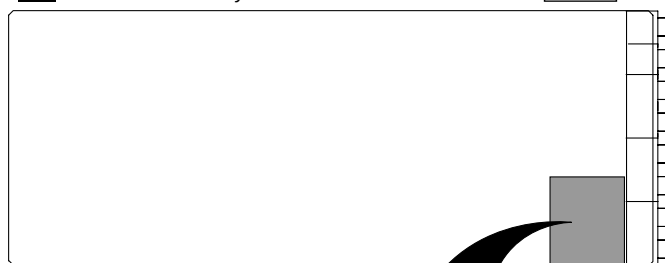


7.2 PARTS

7.2.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ PDG260A (FRONT ASSY : IC401)

- System Control MCU
- Pin Arrangement (Top View)

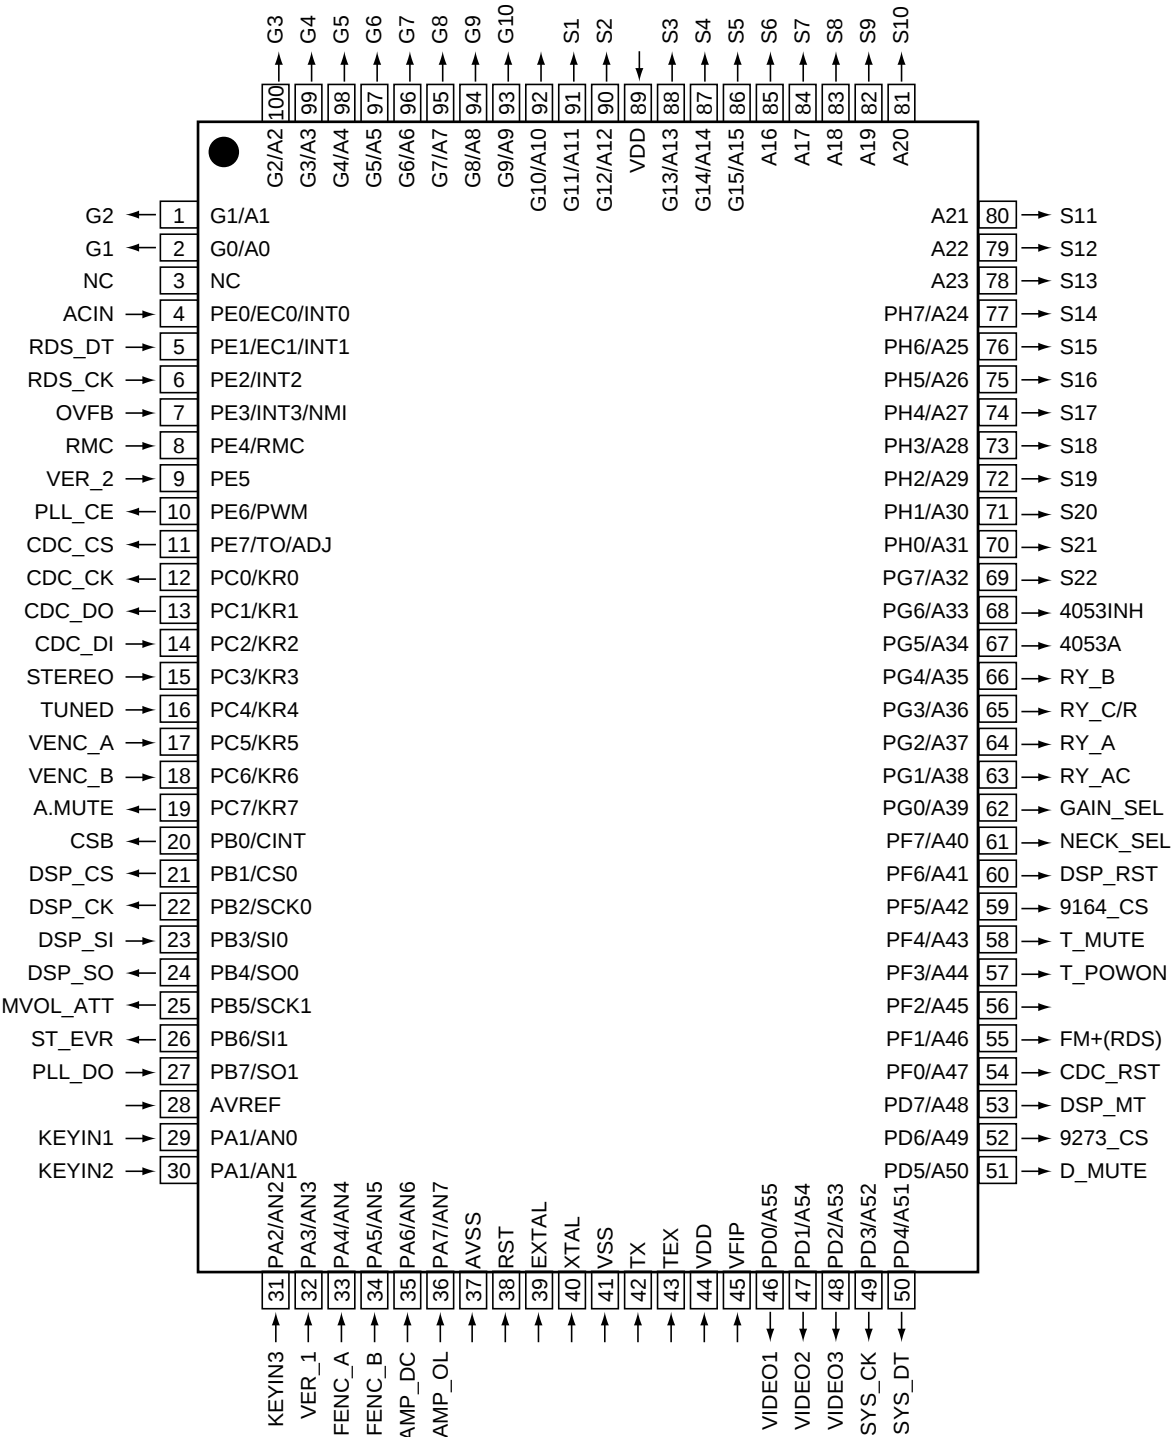

● Pin Function

No.	Pin Name	I/O	Pin Function	Active
1	G2	O	Grid output 2	H
2	G1	O	Grid output 1	H
3	NC	—	Connect to VDD	
4	ACIN	I	AC pulse input	
5	RDS_DT	I	Serial control DATA signal of RDS communication	
6	RDS_CK	I	Serial control CLOCK signal of RDS communication	
7	DIRLOCK	I	ERR/OVER input from CODEC	
8	RMC	I	Remote control signal input (no-carrier signal)	
9	VER_2	I	Destination switch 2	
10	PLL_CE	O	Chip select signal for communication with LC72131 (tuner)	H
11	CDC_CS	O	CODEC chip select	
12	CDC_CK	O	CODEC, TC9164 control clock	
13	CDC_DO	O	CODEC, TC9164 control data output	
14	CDC_DI	I	Data input from CODEC	
15	STEREO	I	Stereo/Monoral signal judgment signal	
16	TUNED	I	TUNED information	
17	ENC_A	I	EVOL Rotary encoder signal input A	
18	ENC_B	I	EVOL Rotary encoder signal input B	
19	AMUTE	O	Audio mute	L
20	CSB	O	Chip select for control of YSS912 sub DSP	L
21	DSP_CS	O	Chip select for control of YSS912 main DSP	L
22	DSP_CK	O	Clock signal for communication with YSS912	H
23	DSP_SI	I	DATA input signal for communication with YSS912	
24	DSP_SO	O	DATA output signal for communication with YSS912	H
25	MVRATT	O	ATT control of master volume (L : Less than -15dB)	H
26	ST_EVR	O	Strobe signal for communication with electric volume IC	H
27	PLL_DO	I	Data input signal for communication with LC72131 (tuner)	
28	AVref	—	Connect to VDD	
29	KEYIN1	I	Key input A/D conversion port 1	
30	KEYIN2	I	Key input A/D conversion port 2	
31	KEYIN3	I	Key input A/D conversion port 3	
32	VER_1	I	Destination switch (A/D input)	
33	FENC_A	I	FUNC Rotary encoder signal input A	
34	FENC_B	I	FUNC Rotary encoder signal input B	
35	AMP_DC	I	DC abnormality detection of protection circuit (L : Abnormality detection) *1	L
36	AMP_OL	I	Over-load detection of protection circuit (L : Abnormality detection) *2	L
37	AVSS	—	Connect to VSS	
38	RST	—	Reset	
39	EXTAL	—	Connect to the oscillator (7.2MHz)	
40	XTAL	—		
41	VSS	—	Connect to VSS	
42	TX	—	Open	
43	TEX	—	Connect to VSS	
44	VDD	—	+5V	
45	VFDP	—	-30V	
46	VIDEO1	O	NJM2296D control	H
47	VIDEO2			
48	VIDEO3			
49	SYS_DT	O	Data signal for communication with M62446, TC9163, TC9164 and PLL	H
50	SYS_CK	O	Clock signal for communication with M62446, TC9163, TC9164 and PLL	H

*1 : When DC voltage was output from amplifier, "POWER OFF" is displayed at FL display.

*2 : When the output of amplifier became overload state, "OVER LOAD" is displayed at FL display.


No.	Pin Name	I/O	Pin Function	Active
51	D_MUTE	O	Digital mute (Not used)	H
52	9273_CS	O	TC9273 Chip select	H
53	DSP_MT	O	DSP mute (ASSY mute)	H
54	CDC_RST	O	CODEC reset	H
55	FM+(RDS)	O	Tr switch ON/OFF for power supply of RDS decoder (L : AM, power OFF , H : Other)	H
56	Not used	–		
57	T_POWON	O	Tuner module ON/OFF (North America model only)	H
58	T_MUTE	O	Tuner mute	H
59	9164_CS	O	TC9163, TC9164 Chip select	
60	DSP_RST	O	YSS912 reset	
61	NECK_SEL	O	5.1ch, surround mode and A+B Stereo : H / Stereo : L	
62	GAIN_SEL	O	Gain select (5.1ch and Stereo of analog input : H)	H
63	RY_AC	O	AC relay ON/OFF	H
64	RY_A	O	Speaker A relay ON/OFF	H
65	RY_C/R	O	Rear/Center Speaker relay ON/OFF	H
66	RY_B	O	Speaker B relay ON/OFF	H
67	4053A	O	Component terminal control	H
68	4053INH	O	Component terminal control	H
69	S22	O	Segment output 22	H
70	S21		Segment output 21	
71	S20		Segment output 20	
72	S19		Segment output 19	
73	S18		Segment output 18	
74	S17		Segment output 17	
75	S16		Segment output 16	
76	S15		Segment output 15	
77	S14		Segment output 14	
78	S13		Segment output 13	
79	S12		Segment output 12	
80	S11		Segment output 11	
81	S10		Segment output 10	
82	S9		Segment output 9	
83	S8		Segment output 8	
84	S7		Segment output 7	
85	S6		Segment output 6	
86	S5		Segment output 5	
87	S4		Segment output 4	
88	S3		Segment output 3	
89	VDD	–	5V	
90	S2	O	Segment output 2	H
91	S1		Segment output 1	
92	Not used	O	Not used (Fixed Vfdp)	
93	G10	O	Grid output 10	H
94	G9		Grid output 9	
95	G8		Grid output 8	
96	G7		Grid output 7	
97	G6		Grid output 6	
98	G5		Grid output 5	
99	G4		Grid output 4	
100	G3		Grid output 3	

7.2.2 DISPLAY


■ XAV3010 (FRONT ASSY : V401)

• FL DISPLAY


• Pin Assignment

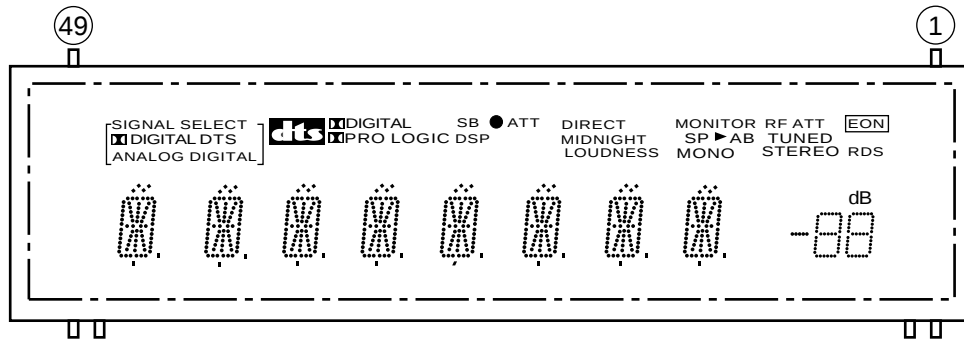

• Grid Assignment

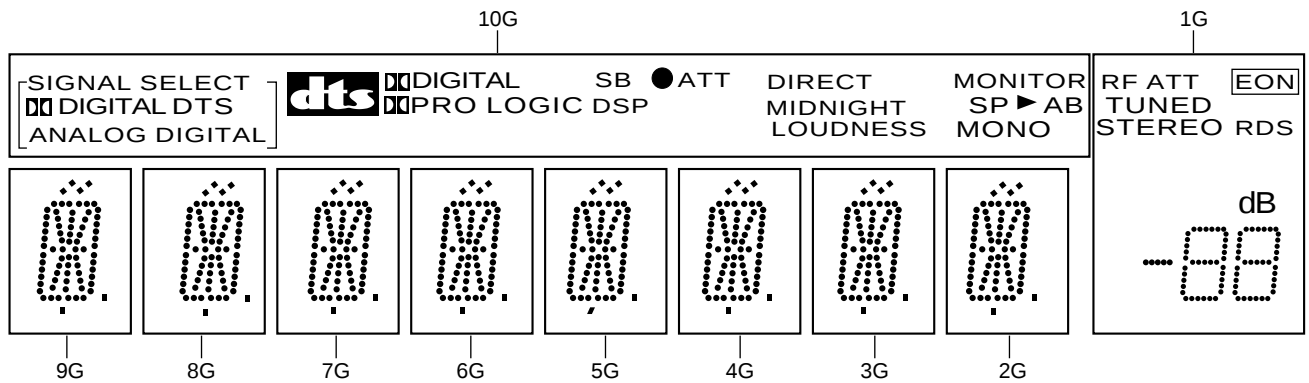

• Segment Designation

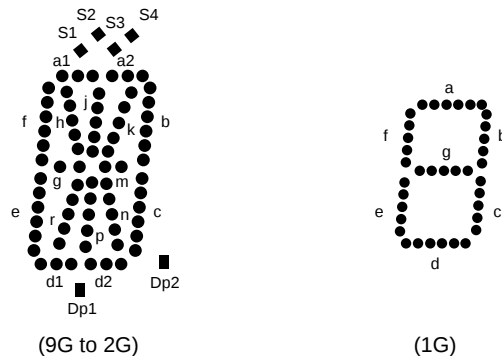

• Pin Connection

Pin No.	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25
Connection	F2	F2	NP	NP	P22	P21	P20	P19	P18	P17	P16	P15	P14	P13	P12	P11	P10	P9	P8	P7	P6	P5	P4	P3	P2
Pin No.	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
Connection	P1	NX	NX	NX	NX	NX	NX	NX	NX	NX	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G	NP	NP	F1	F1	

NOTE 1) F1, F2..... Filament
 2) NP..... No pin
 3) NX..... No extend pin
 4) DL..... Datum Line
 5) 1G to 10G..... Grid
 6) Field of vision is a minimum of 29° from the lower side.


• Anode Connection

	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	MONO	a1	a1	a1	a1	a1	a1	a1	a1	dB
P2	B	a2	a2	a2	a2	a2	a2	a2	a2	2a
P3	A	h	h	h	h	h	h	h	h	2b
P4	SP ►	j	j	j	j	j	j	j	j	2f
P5	MONITOR	k	k	k	k	k	k	k	k	2g
P6	LOUDNESS	b	b	b	b	b	b	b	b	2c
P7	MIDNIGHT	f	f	f	f	f	f	f	f	2e
P8	DIRECT	m	m	m	m	m	m	m	m	2d
P9	DNR	g	g	g	g	g	g	g	g	1a
P10	ATT	c	c	c	c	c	c	c	c	1b
P11	●	e	e	e	e	e	e	e	e	1f
P12	DSP	r	r	r	r	r	r	r	r	1g
P13	SB	p	p	p	p	p	p	p	p	1c
P14	PRO LOGIC	n	n	n	n	n	n	n	n	1e
P15	DIGITAL	d1	d1	d1	d1	d1	d1	d1	d1	1d
P16	CS	d2	d2	d2	d2	d2	d2	d2	d2	
P17	ANALOG	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	RDS
P18	DIGITAL	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	RF ATT
P19	[]	S1	S1	S1	S1	S1	S1	S1	S1	EON
P20	DTS	S4	S4	S4	S4	S4	S4	S4	S4	
P21	DIGITAL	S2	S2	S2	S2	S2	S2	S2	S2	TUNED
P22	SIGNAL SELECT	S3	S3	S3	S3	S3	S3	S3	S3	STEREO

8. PANEL FACILITIES AND SPECIFICATIONS

8.1 PANEL FACILITIES

Front Panel

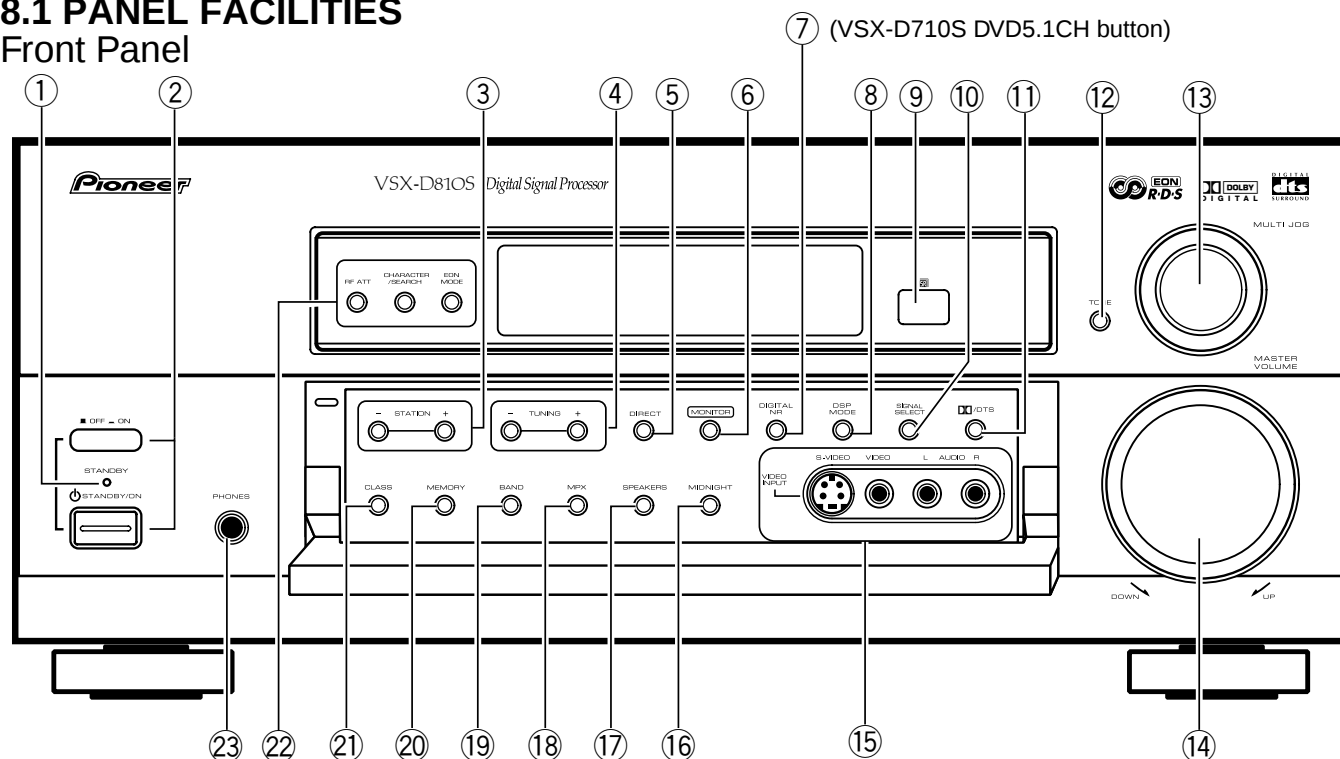

① STANDBY indicator

Lights when the receiver is in standby mode (note that the receiver consumes a small amount of power (1W) in standby mode).

② ■ OFF/ ■ ON (Main power) button

If the button is OFF (■), the power of the receiver is shut off and the **STANDBY/ON** button on the receiver or the **RECEIVER** button on the remote control do not function. Pressing the button again will turn the receiver ON (■) and the receiver enters the standby mode. In the standby mode, you can turn on the receiver using **STANDBY/ON** button on the receiver or the **RECEIVER** button on the remote control.

○ STANDBY/ON button

Switches the receiver between on and standby (note that the receiver consumes a small amount of power (1W) in standby mode).

③ STATION (+/-) buttons

Selects station memories when using the tuner.

④ TUNING (+/-) buttons

Selects the frequency when using the tuner.

⑤ DIRECT button

Use to switch DIRECT playback on or off. This mode bypasses the tone controls, channel levels, DD/DTS and DSP modes for the most accurate reproduction of a program source.

⑥ MONITOR button

Press to switch tape monitoring on/off.

⑦ DVD5.1CH button (VSX-D710S)

On the VSX-D710S this button switches between DVD5.1Ch input and regular DVD input.

⑧ DSP MODE button

Use to switch between the various DSP modes available (**HALL1, HALL 2, JAZZ, DANCE, THEATER1, THEATER 2**) and **DSP off**. Use this button to create different surround sound effects from any stereo source.

⑨ Remote sensor

Receives the signals from the remote control.

⑩ SIGNAL SELECT button

Use to select an analog or digital signal.

⑪ DD/DTS button

Use to switch between the various DD/DTS surround modes.

⑫ TONE button

This button allows you to activate the BASS & TREBLE controls. To adjust the BASS and/or TREBLE use the MULTI JOG dial. Tone can only be used in 2 channel stereo sound mode. The tone controls have no effect on the B speaker system.

⑬ MULTI JOG dial

You can use this dial for two purposes. Firstly, in normal mode turn it to select a source component. Secondly, use it to adjust the BASS and/or TREBLE levels when the TONE button has been activated (as explained above).

⑭ MASTER VOLUME

Use to set the overall listening volume.

⑮ VIDEO INPUT jacks

Connect a video camera, video game system, etc. to the VIDEO INPUT jacks.

⑯ MIDNIGHT button

Use when listening to movie soundtracks at low volume. This feature will enable you to hear quiet sounds and not get jolted by loud or sudden sound effects.

17 **SPEAKERS button**

Use to switch the speaker system **A** → **B** → **A+B** → off.
In **B** and **A+B** speaker modes you hear only 2 channel stereo sound.

18 **MPX button**

If there is interference or noise during a FM radio broadcast, or the radio reception is weak, press the **MPX** button to switch the receiver into mono reception mode. This should improve the sound quality and allow you to enjoy the broadcast.

19 **BAND button**

Press to select the AM or FM band.

20 **MEMORY button**

Press to memorize a station for recall using the **STATION** (+/-) buttons.

21 **CLASS button**

Switches between the three banks (classes) of station memories.

22 **RF ATT button**

Use to lower the input level of a radio signal that is too powerful or contains interference thus causing the receiver to distort

CHARACTER/SEARCH button

Use to search for different program types in RDS mode. It is also used to input station names.


EON MODE button

Use to search for different programs that are transmitting traffic or news information (this search method is called EON).


23 **PHONES jack**

Use to connect headphones but this does not switch the speakers off.

Rear Panel

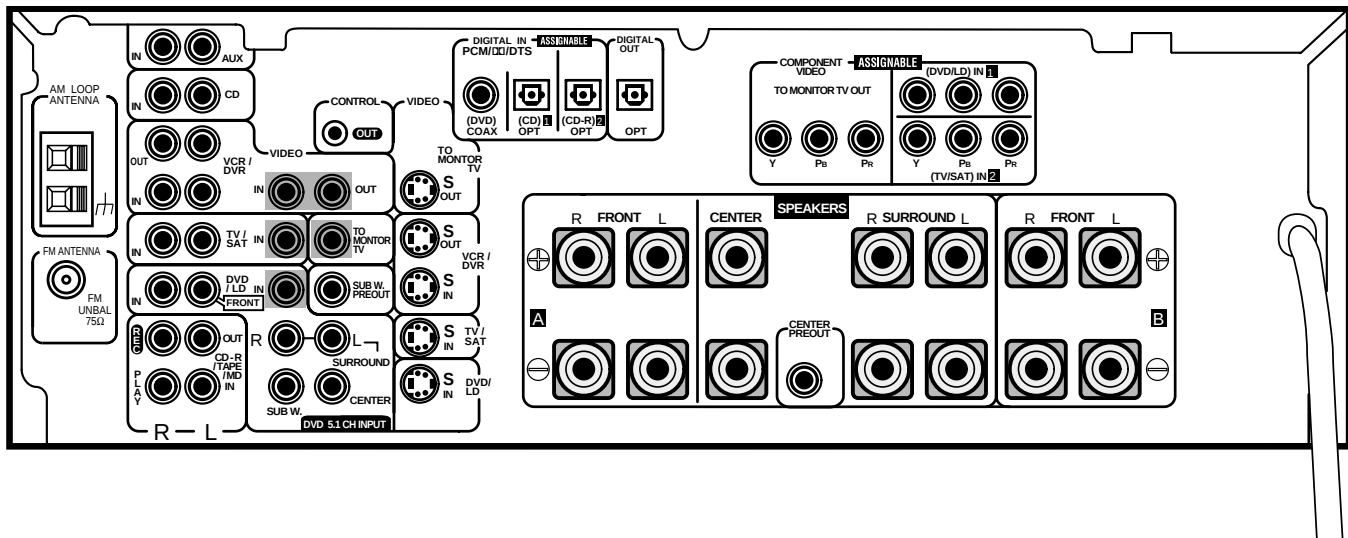

Display

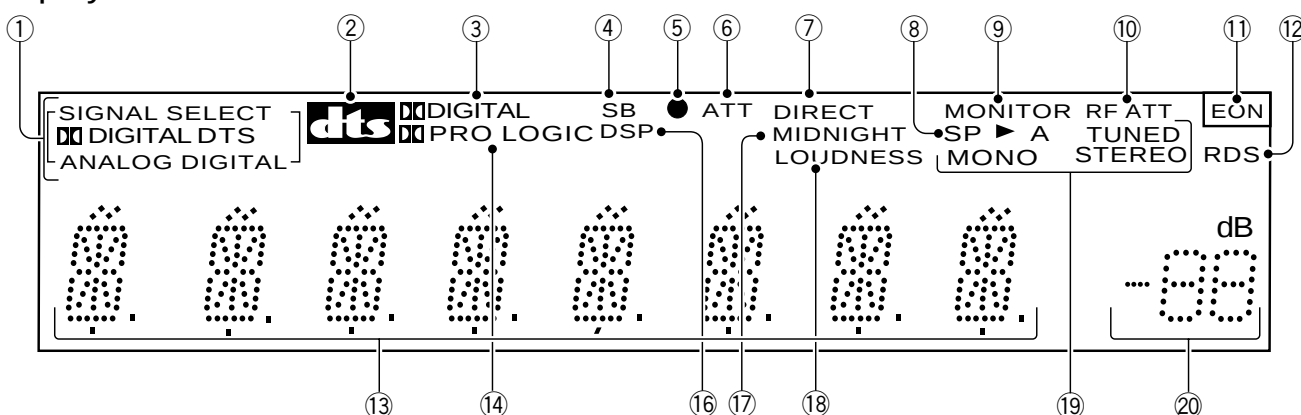

① SIGNAL SELECT indicators

Light to indicate the type of input signal assigned for the current component (see "Front Panel", ⑩ SIGNAL SELECT).

DIGITAL : Lights when a Dolby Digital signal is played.

DTS : Lights when a source with DTS audio signals is played.

ANALOG : Lights when an analog signal is selected.

DIGITAL : Lights when a digital audio signal is selected.

[] : Lights when the AUTO setting is selected. (Not used for VSX-D710S)

② DTS indicator

Lights when DTS mode is being used.

③ DIGITAL indicator

When the **DOLBY**/DTS mode of the receiver is on, this lights to indicate playback of a Dolby Digital signal. However, **PRO LOGIC** lights during two channel playback of Dolby Digital.

④ Surround Back indicator (Not used for VSX-D710S)

Lights when most Surround Back channel flag encoded (6.1channel) software is playing. (With some Surround Back channel software the surround back indicator won't light because there is no flag encoded in the software.) If you play DTS 5.1/6.1 channel software surround sound will be heard whether it is encoded with a surround back channel flag or not.

⑤ OVERLOAD indicator

This lights when an analog signal is too high (the **SIGNAL SELECT** would have to be on **ANALOG**). It indicates the sound is distorting and the input signal should be reduced.

⑥ ATT indicator

Lights when ATT is used to attenuate (reduce) the level of the input signal (can only be used in **ANALOG** mode).

⑦ DIRECT indicator

Lights when source **DIRECT** is in use. This function bypasses all tone, balance, DSP and Dolby Surround effects.

⑧ SPEAKER indicator

Shows if the speaker system is on or not. **SP ► A** means that speakers are switched on. **SP ►** means that speakers are switched off.

⑨ MONITOR indicator

Lights when **MONITOR** is selected. Used to hear a recording as it's being made.

⑩ RF ATT indicator

Lights when the **RF ATT** is on.

⑪ EON indicator

The box around **EON** indicator lights to inform you that the currently tuned station carries the EON data service. When the EON mode is set, the **EON** indicator light's, but during actual reception of an EON broadcast the **EON** indicator will flash. An empty box in the **EON** indicator spot means it is possible to pick up an EON broadcast but the receiver has not been set to do so (this will only appear when RDS is switched on).

⑫ RDS indicator

Lights when an RDS broadcast is received.

⑬ CHARACTER display

Shows the radio frequency or function (DVD/LD, CD, etc.) receiver is using .

⑭ PRO LOGIC indicator

When the **DOLBY**/DTS mode of the receiver is on, this lights to indicate playback of a two channel source.

⑮ DSP indicator

Lights when any "Advanced Theater" or "DSP" mode is selected.

⑯ MIDNIGHT indicator

Lights when MIDNIGHT listening mode is in use.

⑰ LOUDNESS indicator

Lights when the **LOUDNESS** is on. Use to boost the bass and treble at low volume.

⑱ TUNER indicators

MONO:

Lights when the mono mode is set using the **MPX** button.

TUNED:

Lights when a broadcast is being received.


STEREO:

Lights when a stereo FM broadcast is being received in auto stereo mode.

⑳ MASTER VOLUME LEVEL

Shows the overall volume level. Volume level is maintained even when the power is off. **---dB** indicates the minimum level, and **0dB** indicates the maximum level.

Remote Control

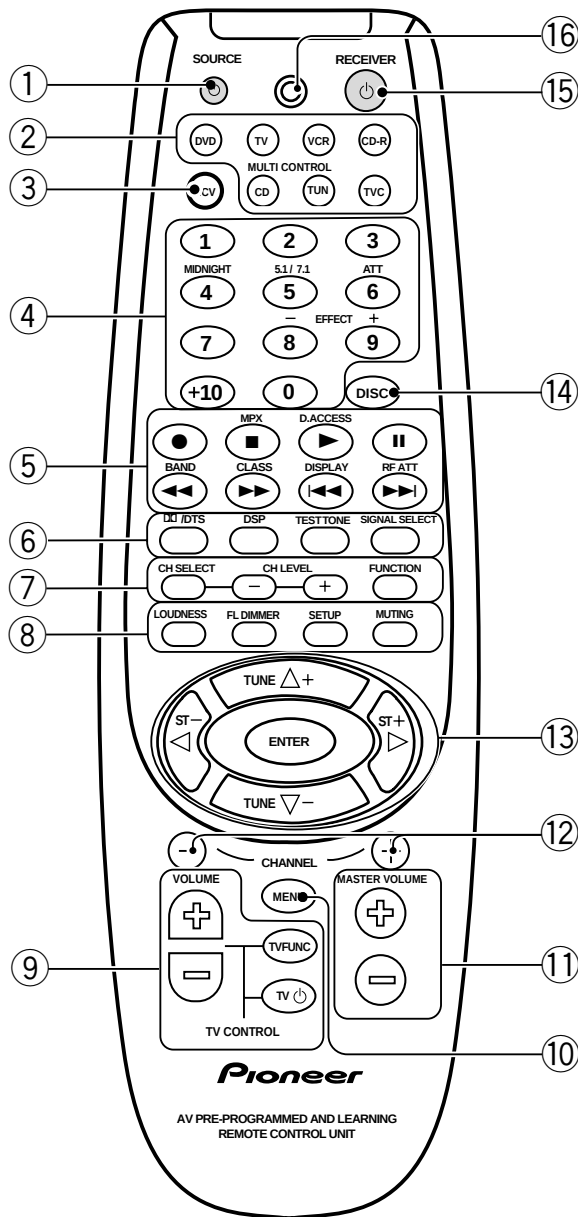

① SOURCE button

Use to turn on/off other components connected to the receiver.

② MULTI CONTROL buttons

Use to put the receiver/remote control in the stated mode.

For other equipment controls, see "Controlling the Rest of Your System".

③ RCV button

Use this button when setting up the surround sound for the receiver. Also press it if you want to use special features attached to some of the number buttons, for example MIDNIGHT, 5.1/7.1, EFFECT +/- or ATT.

④ NUMBER/MODE buttons

Use the number buttons to select the radio frequency in tuner DIRECT ACCESS mode or the tracks in CD, DVD mode etc.

Also, buttons marked with the following names have special functions. If you try to use one of these functions but the display flashes it means that function cannot be used in the current mode (for example DSP modes cannot be used when 5.1 Ch setting is on).

MIDNIGHT button

Use to put receiver in **MIDNIGHT** mode. To use first press the **RCV** button then operate this button.

5.1/7.1 button

(VSX-D710S is 5.1 Ch)

When the DVD/LD or DVD 5.1/7.1 Ch function is selected each press switches the DVD/LD input between DVD/LD and DVD 5.1/7.1 Ch. To use first press the **RCV** button then operate this button.

ATT button

When the overload indicator lights use this button to attenuate (lower) the level of an analog input signal and prevent distortion. To use first press the **RCV** button then operate this button.

EFFECT +/- buttons

Use to add or subtract the amount of effect in different DSP sound modes (except 6 Ch Stereo) or advanced listening modes.

To use first press the **RCV** button then operate these buttons.

⑤ THE FOLLOWING BUTTONS ARE BOTH CONTROLS FOR OTHER COMPONENTS (LIKE A DVD PLAYER) AND DEDICATED TUNER CONTROLS. THE TUNER CONTROLS ARE EXPLAINED HERE. YOU CAN USE THEM AFTER YOU HAVE PUSHED THE TUNER MULTI CONTROL BUTTON.

BAND button

Use to switch between the AM and FM band when in TUNER mode.

CLASS button

Use to switch between the three banks (classes) of station memories.

MPX button

Use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to MONO will improve the sound quality.

D. ACCESS button

Use to directly access a radio station by pressing the number of the station you want.

DISPLAY button

Use to display the RDS information.

RF ATT button

Use to lower the input level of a radio signal that is too powerful or contain interference thus causing the receiver to distort.

⑥ **DD /DTS button**

Use to put the receiver in DOLBY DIGITAL, DOLBY SURROUND and DTS modes. To use first press the **RCV** button then operate this button.

DSP button

Use to put receiver in one of the DSP modes. To use first press the **RCV** button then operate this button.

TEST TONE button

Use to sound the TEST TONE when setting up the surround sound of the receiver (the **DD /DTS** mode must be on). To use first press the **RCV** button then operate this button.

SIGNAL SELECT

Use to select the proper signal (analog, digital) for the source you are inputting.

⑦ **CH SELECT button**

Use to select a speaker when setting up the surround sound of the receiver.

CH LEVEL +/-

Use to set up the levels of the surround sound of the receiver.

FUNCTION button

Use to select the playback or recording source. This button lets you cycle through the different functions of the receiver in the following order: CD, TUNER, AUX, CDR/TAPE, VCR/DVR, DVD/LD, VIDEO, and TV/SAT.

⑧ **LOUDNESS button**

Use to switch on the loudness. This feature is useful for getting good bass and treble sounds listening at low volumes.

FL DIMMER button

Use this button to make the fluorescent display (FL) dimmer or brighter. There are three brightness settings as well as an off setting.

SETUP button

Use this button when setting up the remote control to control other components.

MUTING button

Use to mute the sound or restore the sound if it has been muted.

⑨ **THE FOLLOWING BUTTONS ARE DEDICATED TV CONTROL BUTTONS. THEY ARE ONLY USED FOR CONTROLLING YOUR TV.****TV FUNC button**

Use to select the TV function.

TV button

Use to turn on/off the power of the TV.

TV VOLUME +/- buttons

Use to adjust the volume on your TV.

⑩ **MENU button**

Use to access different menus associated with your DVD player. To use first press the **DVD** button then operate this button.

⑪ **MASTER VOLUME +/- buttons**

Use to set the overall listening volume.

⑫ **CHANNEL +/- buttons**

Use to skip tracks backward or forward on CDs, DVDs, etc and change channels on the VCR, DVR, etc.

⑬ ** (TUNE/ST +/-) & ENTER buttons**

Use these arrow buttons when setting up your surround sound system. These buttons are also used to control DVD menus/options and for deck 1 of a double cassette deck player. The TUNE/ST +/- buttons can be used to find radio frequencies and preset stations, respectively.

⑭ **DISC button**

Use to select a disc and a multi-CD player. To use first press the **CD** button then operate this button.

⑮ **RECEIVER (POWER) button**

This switches between STANDBY mode and power ON for this receiver.

⑯ **LED DISPLAY**

This display flashes when a command is sent from the remote control to the receiver. It also flashes at other times, for example when teaching the receiver preset codes, with specific meanings.

8.2 SPECIFICATIONS

Amplifier Section

Continuous Power Output (STEREO MODE)

FRONT 100 W + 100 W (DIN 1 kHz, THD 1 %, 8 Ω)

Continuous Power Output (SURROUND MODE)

FRONT 100 W/ch (1 kHz, THD 1 %, 8 Ω)

CENTER 100 W (1 kHz, THD 1 %, 8 Ω)

SURROUND 100 W/ch (1 kHz, THD 1 %, 8 Ω)

- Above specifications are applicable when the power supply is 230V.

Input (Sensitivity/Impedance)

CD, AUX, VCR/DVR, CD-R/TAPE/MD, DVD/LD,

TV/SAT, VIDEO 200 mV/47 k Ω

Frequency Response

CD, AUX, VCR/DVR, CD-R/TAPE/MD, DVD/LD,

TV/SAT, VIDEO 5 Hz to 100,000 Hz ± 0.5 dB

Output (Level/Impedance)

VCR/DVR OUT, CD-R/TAPE/MD REC 200 mV/2.2 k Ω

Tone Control

BASS ± 6 dB (100 Hz)

TREBLE ± 6 dB (10 kHz)

LOUDNESS +9 dB (100 Hz/10 kHz)

Signal-to-Noise Ratio

[DIN (Continuous rated power output/50 mW)]

CD, AUX, VCR/DVR, CD-R/TAPE/MD, DVD/LD,

TV/SAT, VIDEO 88 dB/64 dB

VIDEO Section

Input (Sensitivity/Impedance)

VCR/DVR, DVD/LD, TV/SAT 1 Vp-p/75 Ω

Output (Level/Impedance)

VCR/DVR, TO MONITOR TV OUT 1 Vp-p/75 Ω

Frequency Response

VCR/DVR, DVD/LD, TV/SAT $\rightarrow$ MONITOR

..... 5 Hz to 7 MHz ± 0.5 dB

Signal-to-Noise Ratio 55 dB

COMPONENT VIDEO Section

Input (Sensitivity/Impedance)

DVD/LD, TV/SAT 1 Vp-p/75 Ω

Output (Level/Impedance)

TO MONITOR TV OUT 1 Vp-p/75 Ω

FM Tuner Section

Frequency Range 87.5 MHz to 108 MHz

Usable Sensitivity Mono: 13.2 dBf, IHF (1.3 μ V/ 75 Ω)

50 dB Quieting Sensitivity Mono: 20.2 dB

Stereo: 38.6 dBf

Signal-to-Noise Ratio Mono: 73 dB (at 85 dBf)

Stereo: 70 dB (at 85 dBf)

Signal-to-Noise Ratio (DIN) Mono: 62 dB

Stereo: 58 dB

Distortion Stereo: 0.5 % (1 kHz)

Alternate Channel Selectivity 60 dB (400 kHz)

Stereo Separation 40 dB (1 kHz)

Frequency Response 30 Hz to 15 kHz (± 1 dB)

Antenna Input (DIN) 75 Ω unbalanced

AM Tuner Section

Frequency Range 531 kHz to 1,602 kHz

Sensitivity (IHF, Loop antenna) 350 μ V/m

Selectivity 30 dB

Signal-to-Noise Ratio 50 dB

Antenna Loop antenna

Miscellaneous

Power Requirements

UK model AC 230 V, 50/60 Hz

European model AC 220 – 230 V, 50/60 Hz

Power Consumption

VSX-D710S 250 W

In Standby 1 W

Dimensions 420 (W) x 158 (H) x 401 (D) mm

Weight (without package)

VSX-D710S 9.5 kg

Furnished Parts

AM loop antenna 1

FM wire antenna 1

Dry cell batteries (AA size IEC R6P) 2

Remote control 1

Operating instructions 1


NOTE:

- Specifications and the design are subject to possible modifications without notice, due to improvements.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

"DTS", "ES" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. Manufactured under license from Digital Theater Systems, Inc.


Accessories

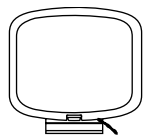


AM loop antenna
(ATB7009)



FM wire antenna
(ADH7005)



AA size IEC R6P
Dry cell batteries (x2)



Remote control unit
(XXD3029)

Service Manual

Pioneer

ORDER NO.
RRV2447

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D710S VSX-D710S-G

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model		Power Requirement	The voltage can be converted by the following method.
	VSX-D710S	VSX-D710S-G		
SDPWXJI	○	—	AC110V/120-127V/220V/240V	With the voltage selector
BXJI	—	○	AC110V/120-127V/220V/240V	With the voltage selector
HLXJI	—	○	AC220-230V	AC240V, *

* : Alter the wiring of the Power-supply block at the primary winding of Power-transformer referring to the "Line Voltage Selection" described in this Manual.

● This service manual should be used together with the following manual(s):

Model No.	Order No.	Remarks
VSX-D710S/MYXJIEW	RRV2432	

CONTENTS

1. CONTRAST OF MISCELLANEOUS PARTS 2
2. SCHEMATIC DIAGRAM 6
3. PCB CONNECTION DIAGRAM 9

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2001

T – ZKZ APR. 2001 Printed in Japan

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to $\blacktriangledown$ mark on product are used for disassembly.

● Reference Nos. indicate the pages and Nos. in the service manual for the base model.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 $\rightarrow$ $56 \times 10^1 \rightarrow$ 561 RD1/4PU561J

47k $\rightarrow$ $47 \times 10^3 \rightarrow$ 473 RD1/4PU473J

0.5 $\rightarrow$ R50 RN2H50K

1 $\rightarrow$ 1R0 RS1P1R0K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k $\rightarrow$ $562 \times 10^1 \rightarrow$ 5621 RN1/4PC5621F

■ CONTRAST TABLE

VSX-D710S/SDPWXJI, VSX-D710S-G/BXJI, HLXJI and VSX-D710S/MYXJIEW are constructed the same except for the following :

Ref. No.	Mark	Symbol and Description	Part No.				Remarks
			VSX-D710S /MYXJIEW	VSX-D710S /SDPWXJI	VSX-D710S-G /BXJI	VSX-D710S-G /HLXJI	
P5- 1		PCB ASSEMBLIES D.D & INPUT ASSY	XWX3027	XWX3026	XWX3026	XWX3026	No. 1
P5- 2	NSP	AMP&PS ASSY	XWK3020	XWK3021	XWK3021	XWK3020	
P5-12	NSP	└ AMP&PRIMARY ASSY	XWZ3377	XWZ3378	XWZ3378	XWZ3377	
		└ TRANS 1ASSY	XWZ3390	Not used	Not used	XWZ3390	
		└ VOLTAGE SELECT SW ASSY	Not used	XWZ3393	XWZ3393	Not used	
P6- 1	NSP	COMPLEX ASSY └ FRONT ASSY	XWK3006 XWZ3341	XWK3007 XWZ3342	XWK3007 XWZ3342	XWK3008 XWZ3343	
P3- 1	NSP	PACKING SECTION FM Wire Antenna	ADH7005	ADH7004	ADH7004	ADH7004	Accessories
P3- 2		Warranty Card	ARY7022	Not used	Not used	Not used	
P3- 5		Operating Instructions (English)	XRB3005	Not used	Not used	Not used	
P3- 6		Operating Instructions (German)	XRC3031	Not used	Not used	Not used	
P3- 7		Remote Control Unit	XXD3029	XXD3028	XXD3028	XXD3028	
P3-13		Packing Case	XHD3151	XHD3156	XHD3158	XHD3157	
P3-14		Operating Instructions (Dutch/Spanish/Portuguese)	XRC3032	Not used	Not used	Not used	
P3-15		Operating Instructions (French/Italian/Swedish)	XRC3033	Not used	Not used	Not used	
		Operating Instructions (English/Chinese/Spanish)	Not used	XRE3038	XRE3038	XRE3038	
		Caution 220V Label	Not used	ARR1003	ARR1003	Not used	
	$\triangle$	AC Plug Adapter	Not used	Not used	AKX7011	Not used	
P5-11	$\triangle$	EXTERIOR SECTION FM/AM TUNER Unit	AXX7048	AXX7047	AXX7047	AXX7047	
P5-15		Power Transformer (AC220-230V)	XTS3046	Not used	Not used	XTS3046	
P5-15		Power Transformer (AC110V/120-127V/220V/240V)	Not used	XTS3048	XTS3048	Not used	
P5-16		Fuse (FU1 : T2.5A/250V)	REK1026	Not used	Not used	REK1026	
P5-16		Fuse (FU1 : T6.3A/250V)	Not used	REK1030	REK1030	Not used	
P5-19	$\triangle$	Strain Relief/Cord Bush	CM-22B	AEC7317	AEC7317	CM-22B	
P5-20		AC Power Cord	VDG1077	XDG3010	XDG3010	VDG1077	
P5-37		Insulator (Front side)	PNW2766	Not used	PNW2766	PNW2766	
P5-37		Insulator/Foot Assy (Rear side)	PNW2766	REC1263	REC1263	REC1263	


Ref. No.	Mark	Symbol and Description	Part No.				Remarks
			VSX-D710S /MYXJIEW	VSX-D710S /SDPWXJI	VSX-D710S-G /BXJI	VSX-D710S-G /HLXJI	
P5-39 P5-40	NSP	Rear Panel	XNC3072	XNC3085	XNC3085	XNC3086	
		Bonnet Case	XZN3112	XZN3111	XZN3114	XZN3114	
		Screw (Both sides of Bonnet Case)	FBT40P080FZK	FBT40P080FZK	FBT40P080FNI	FBT40P080FNI	No. 2
		Fuse (FU2, FU3 : T2.5A/250V)	Not used	REK1026	REK1026	Not used	No. 3
	NSP	Fuse Card	Not used	XAX3218	XAX3218	Not used	
		Voltage Selector	Not used	AKX-507	AKX-507	Not used	No. 4
	NSP	Rubber Sheet	Not used	AEB1111	Not used	Not used	No. 5
		FRONT PANEL SECTION					
P6- 9	NSP	Name Plate	PAM1776	PAM1776	PAM1779	PAM1779	
P6-11		Select Knob	XAB3008	XAB3008	XAB3009	XAB3009	
P6-12		Volume Knob	XAB3011	XAB3011	XAB3012	XAB3012	
P6-13		Power Button	XAD3062	XAD3062	XAD3063	XAD3063	
P6-14		Power Button M	AAD7442	AAD7442	AAD7491	AAD7491	
P6-15	NSP	Jog Button	XAD3065	XAD3065	XAD3066	XAD3066	
P6-16		Door Button	XAD3070	XAD3070	XAD3071	XAD3071	
P6-17		RDS Button	XAD3072	Not used	Not used	Not used	
P6-18		Display Panel	XAK3171	XAK3172	XAK3186	XAK3186	
P6-19		Button Cover	XAK3178	XAK3178	XAK3179	XAK3179	
P6-20	NSP	Cushion	XED3001	XED3001	XED3002	XED3002	
P6-21		Front Panel	XMB3036	XMB3039	XMB3040	XMB3040	
P6-26		Door Assy	XXG3068	XXG3068	XXG3075	XXG3075	
P6-27		Door	XAK3173	XAK3173	XAK3174	XAK3174	
P6-28		Door Cover	XAK3175	XAK3175	XAK3176	XAK3176	
P6-29	NSP	Screw	XBA3001	XBA3001	XBA3002	XBA3002	

Notes : ●The numbers in the remarks column correspond to the numbers on the “ EXPLODED VIEWS ”.

- For PCB ASSEMBLIES, Refer to “CONTRAST OF PCB ASSEMBLIES”, “PCB PARTS LIST”, “2. SCHEMATIC DIAGRAM” and “3. PCB CONNECTION DIAGRAM”.

■ EXPLODED VIEWS

● EXTERIOR SECTION

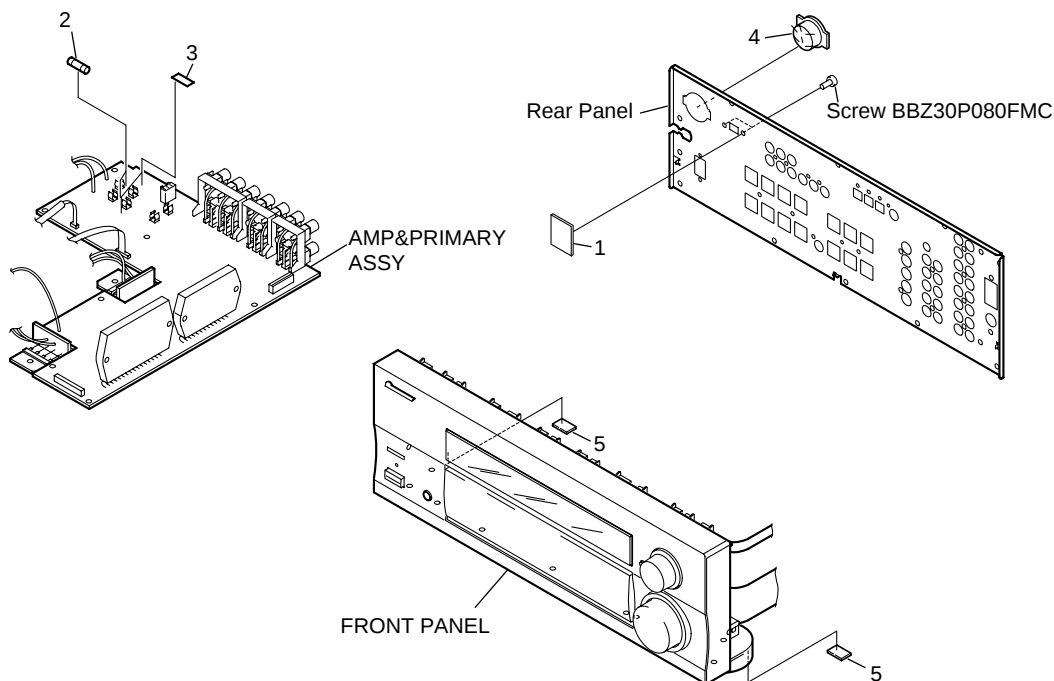

VSX-D710S, VSX-D710S-G

■ CONTRAST OF PCB ASSEMBLIES

AF D.D & INPUT ASSY

XWX3026 and XWX3027 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		XWX3027	XWX3026	
	Q102 Q103 Q104 L111, L112 C158 C211, C212 R119 R149 R150 R151 R215, R216	2SC2412K Not used Not used QTL1013 CKSRYB103K50 CCSRCH220J50 RS1/16S0R0J RS1/16S101J RS1/16S221J RS1/16S472J Not used	Not used DTA143EK DTC124EK Not used Not used Not used Not used Not used Not used Not used RS1/10S0R0J	

BF AMP&PRIMARY ASSY

XWZ3378 and XWZ3377 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		XWZ3377	XWZ3378	
△	T51 STANDBY TRANSFORMER C613, C614, C637, C663, C664 C701, C702 (4700μF/63V) C701, C702 (4700μF/71V) C757-C759, C765-C768 C769, C770 R703, R704 R707, R708 H53-H56 FUSE CLIP J11 JUMPER WIRED J12 JUMPER WIRED J13 JUMPER WIRED	ATT7037 CCCSL101J50 ACH7134 Not used CQMBA472J50 CKPUYB102K50 RD1/4PU683J RD1/4PU154J Not used Not used Not used Not used	ATT7038 Not used Not used ACH7137 Not used Not used RD1/4PU623J RD1/4PU184J AKR7001 DB215NB0 DB815NB0 DB015NB0	

KF FRONT ASSY

XWZ3342, XWZ3343 and XWZ3341 are constructed the same except for the following :

Mark	Symbol and Description	Part No.			Remarks
		XWZ3341	XWZ3342	XWZ3343	
	IC481	BU1923F	Not used	Not used	
	Q481	2SA1037K	Not used	Not used	
	Q482	DTC143EK	Not used	Not used	
	Q483	2SC3326	Not used	Not used	
	L481	LFEA2R2J	Not used	Not used	
	S466-S468	ASG1051	Not used	Not used	
	C481, C482	CKSQYB102K50	Not used	Not used	
	C483	CEAT101M10	Not used	Not used	
	C484	CEAT2R2M50	Not used	Not used	
	C485	CKSQYB472K50	Not used	Not used	
	C486	CEATR10M50	Not used	Not used	
	C488	CCSRCH561J50	Not used	Not used	
	C489, C490	CCSRCH270J50	Not used	Not used	
	R429	RS1/16S332J	RS1/16S751J	RS1/16S182J	
	R481	RS1/16S473J	Not used	Not used	
	R482	RS1/16S222J	Not used	Not used	
	R483	RS1/16S333J	Not used	Not used	
	R484	RS1/16S104J	Not used	Not used	
	R485-R487	RS1/16S102J	Not used	Not used	
	R1501, R1502	Not used	RS1/16S0R0J	RS1/16S0R0J	
	X481 CRYSTAL RESONATOR (4.332MHz)	ASS7004	Not used	Not used	

PCB PARTS LIST

Mark No. Description Part No.


RF VOLTAGE SELECT SW ASSY**SWITCHES**

△ S51 VOLTAGE SELECTOR AKX1033

2.2 AMP&PRIMARY (2/2) and VOLTAGE SELECT SW ASSYS

B 2/2F AMP&PRIMARY ASSY

(SDPWXJI, BXJI TYPE : XWZ3378)

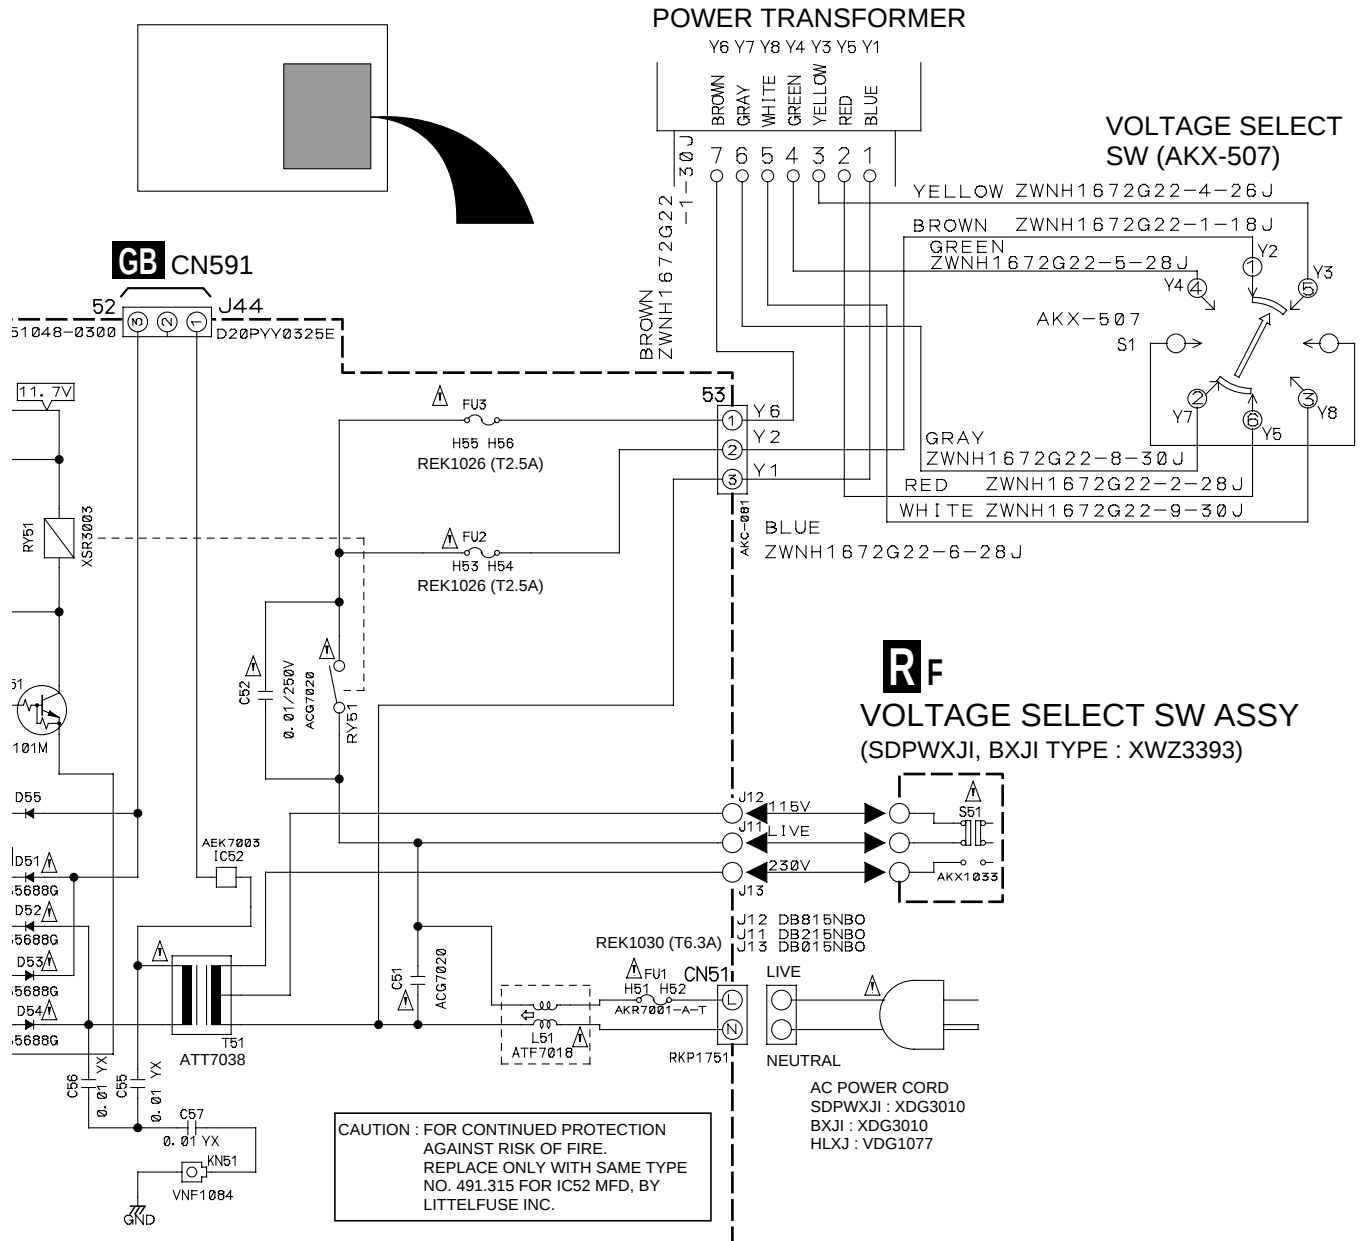

• NOTE FOR FUSE REPLACEMENT


CAUTION -FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE WITH SAME TYPE AND RATINGS ONLY.

2.3 FRONT ASSY

K_F

FRONT ASSY


(SDPWXJI, BXJI : XWZ3342)
(HLXJI : XWZ3343)

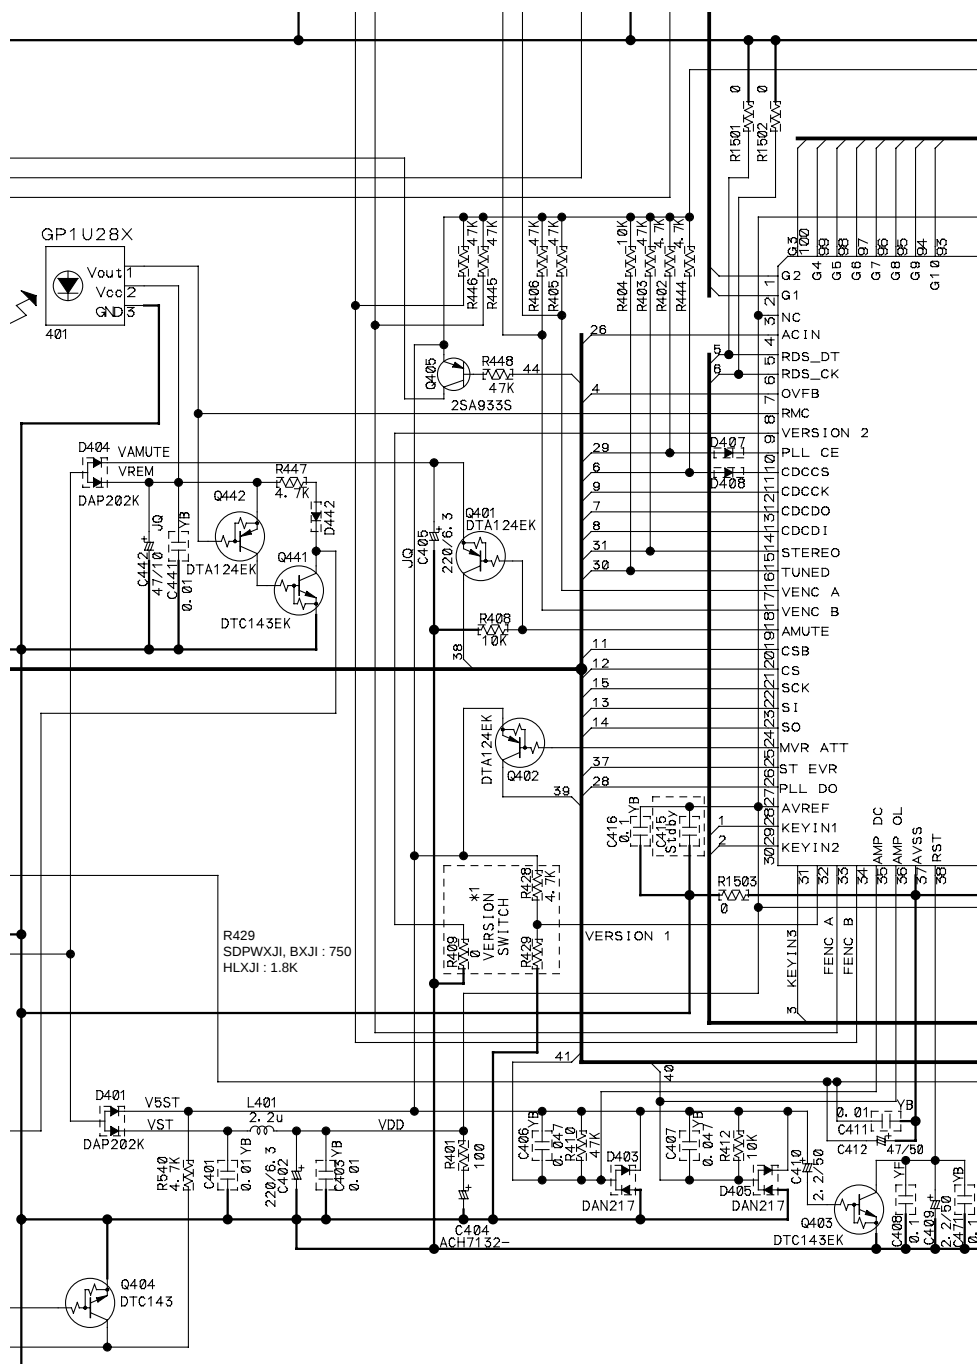

3. PCB CONNECTION DIAGRAM

3.1 VOLTAGE SELECT SW and TRANS1 ASSYS

R_F VOLTAGE
SELECT SW ASSY
(SDPWXJI AND
BXJI TYPES ONLY)

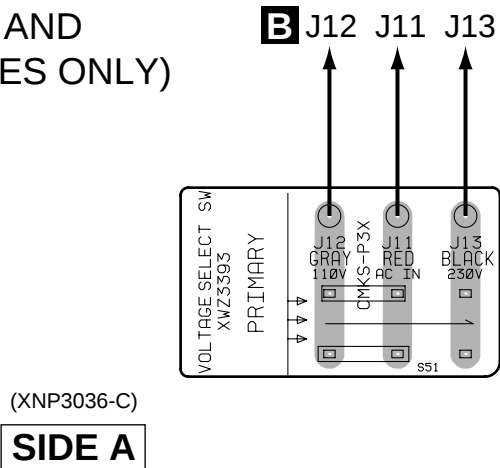

● Line Voltage Selection

Line Voltage can be changed by the following modification:

1. Disconnect the AC power cord.
2. Remove the cover.
3. Change the connection wire from TRANS 1 ASSY to AMP&PRIMARY ASSY (Terminal No. J1) as follows.

Voltage	Terminal No.
220-230V	J1 of TRANS 1 ASSY
240V	240V terminal of power transformer

4. Stick a line voltage label on the rear panel.

Description	Part No.
220V label	AAX-193
240V label	AAX-192

GA TRANS1 ASSY
(HLXJI TYPE ONLY)

