

Service Manual

DIRECT DRIVE
Automatic Turntable System

Turntable System

SL-DD33



Color

(S) Silver Type
(K) Black Type

Note:
Only models for U.S.A. and Canada are not provided with cartridge.

T4P is the standard mark for plug-in-connector system. Products carrying this mark are interchangeable and compatible with each other.

Color	Areas
(S) (K)	[M] U.S.A.
(S) (K)	[MC] ... Canada.
(S) (K)	[E] Switzerland and Scandinavia.
(S) (K)	[EK] United Kingdom.
(S) (K)	[XL] Australia.
(S) (K)	[EG] ... F.R. Germany.
(S) (K)	[EB] Belgium.
(S) (K)	[EH] Holland.
(S) (K)	[EF] France.
(S) (K)	[Ei] Italy.
(S) (K)	[EC] Czechoslovakia.
(S) (K)	[XA] Asia, Latin America, Middle Near East, Africa and Oceania.

SPECIFICATIONS

■ TURNTABLE SECTION

Type: Automatic turntable
Features: Auto-start
Auto-return
Auto-stop
Repeat play
Manual play
Drive method: Direct drive
Motor: Brushless-DC motor
Drive control method: FG method phase locked control
Turntable platter: Aluminum die-cast
Diameter 31.2 cm (12-9/32")
Turntable speeds: 33-1/3 rpm and 45 rpm
Wow and flutter: 0.012% WRMS*
0.025% WRMS (JIS C5521)
±0.035% Weighted zero to peak
(IEC 98A weighted)
-78 dB DIN-B
(IEC 98A weighted)
-56 dB DIN-A
(IEC 98A unweighted)
Rumble:

■ TONEARM SECTION

Type: Static-balanced straight tonearm
Plug-in-connector cartridge system
Overhang: 15 mm (19/32")
Effective length: 230 mm (9-1/16")
Tracking error angle: Within 0°32' at inner groove of 30 cm (12") record
Within 2°32' at outer groove of 30 cm (12") record
Effective mass: 13.5 g (including cartridge)
Stylus pressure: 1.25 g (Fixed)
Applicable cartridge weight: 6 g
Phono cable capacitance: 90 pF

Note:
*This rating refers to turntable assembly alone, excluding effects of record, cartridge or tonearm, but including platter. Measured by obtaining signal from built-in frequency generator of motor assembly.

Technics

Matsushita Services Company
50 Meadowland Parkway,
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico, Inc.
Ave. 65 De Infanteria, KM 9.7
Victoria Industrial Park
Carolina, Puerto Rico 00630

Panasonic Hawaii, Inc.
91-238, Kauh St. Ewa Beach
P.O. Box 774
Honolulu, Hawaii 96808-0774

Matsushita Electric
of Canada Limited
5770 Ambler Drive, Mississauga,
Ontario, L4W 2T3

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

SL-DD33

■ CARTRIDGE SECTION (Except for U.S.A. and Canada)

Type:	Moving magnet stereo cartridge
Magnet circuit:	All-laminated core
Frequency response:	10 Hz~35 kHz
Output voltage:	2.5 mV at 1 kHz, 5 cm/s. zero to peak lateral velocity (7 mV at 1 kHz, 10 cm/s. zero to peak, 45° velocity [DIN 45 500])
Channel separation:	22 dB at 1 kHz
Channel balance:	Within 2 dB at 1 kHz
Recommended load impedance:	47 kΩ~100 kΩ
Compliance (dynamic):	12×10^{-6} cm/dyne at 100 Hz
Stylus pressure range:	1.25 ± 0.25 g
Weight:	6 g (cartridge only)
Replacment stylus:	EPS-30CS

■ GENERAL

Power supply:

For U.S.A. and Canada:
AC 120V, 60 Hz
For United Kingdom and Australia:
AC 240V, 50 Hz
For Continental Europe:
AC 220V, 50 Hz
For Others:
AC 110~127/220~240V, 50/60 Hz

Power consumption:

5 W

Dimensions (W×H×D):

430×100×375 mm
(16-15/16"×3-15/16"×14-3/4")
When dust cover is open:
430×370×410 mm
(16-15/16"×14-5/32"×16-1/8")
4.5 kg (9.9 lb.)

Weight:

Specifications are subject to change without notice for further improvement.
Weight and dimensions shown are approximate.

■ CONTENTS

	Page
SAFETY PRECAUTION	2
LOCATION OF CONTROLS	3
DISASSEMBLY INSTRUCTIONS	3 ~ 5
CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM	6
SCHEMATIC DIAGRAM	7, 8

	Page
BLOCK DIAGRAM	9
MEASUREMENTS AND ADJUSTMENT	10
EXPLODED VIEW	11 ~ 13
REPLACEMENT PARTS LIST	14, 15
PACKING	16

■ SAFETY PRECAUTION


(This "safety precaution" is applied only in U.S.A.)

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.

● INSULATION RESISTANCE TEST


1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
2. Turn on the power switch.
3. Measure the resistance value with ohmmeter between the jumpered AC plug and each exposed metal cabinet part, such as screwheads, antenna, control shafts, handle brackets, etc. Equipment with antenna terminals should read between $3M\Omega$ and $5.2M\Omega$ to all exposed parts. (Fig. A) Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig. B)

Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

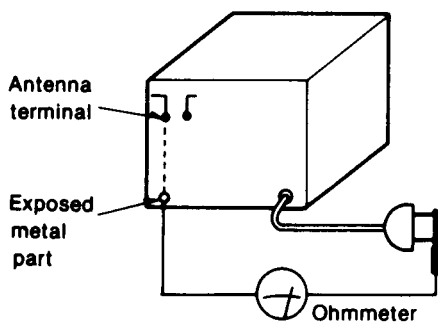

(Fig. A)

Resistance = $3M\Omega$ — $5.2M\Omega$

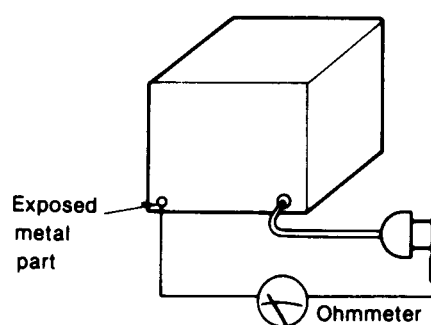


(Fig. B)

Resistance = Approx ∞

4. If the measurement is outside the specified limits, there is a possibility of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer.





■ LOCATION OF CONTROLS

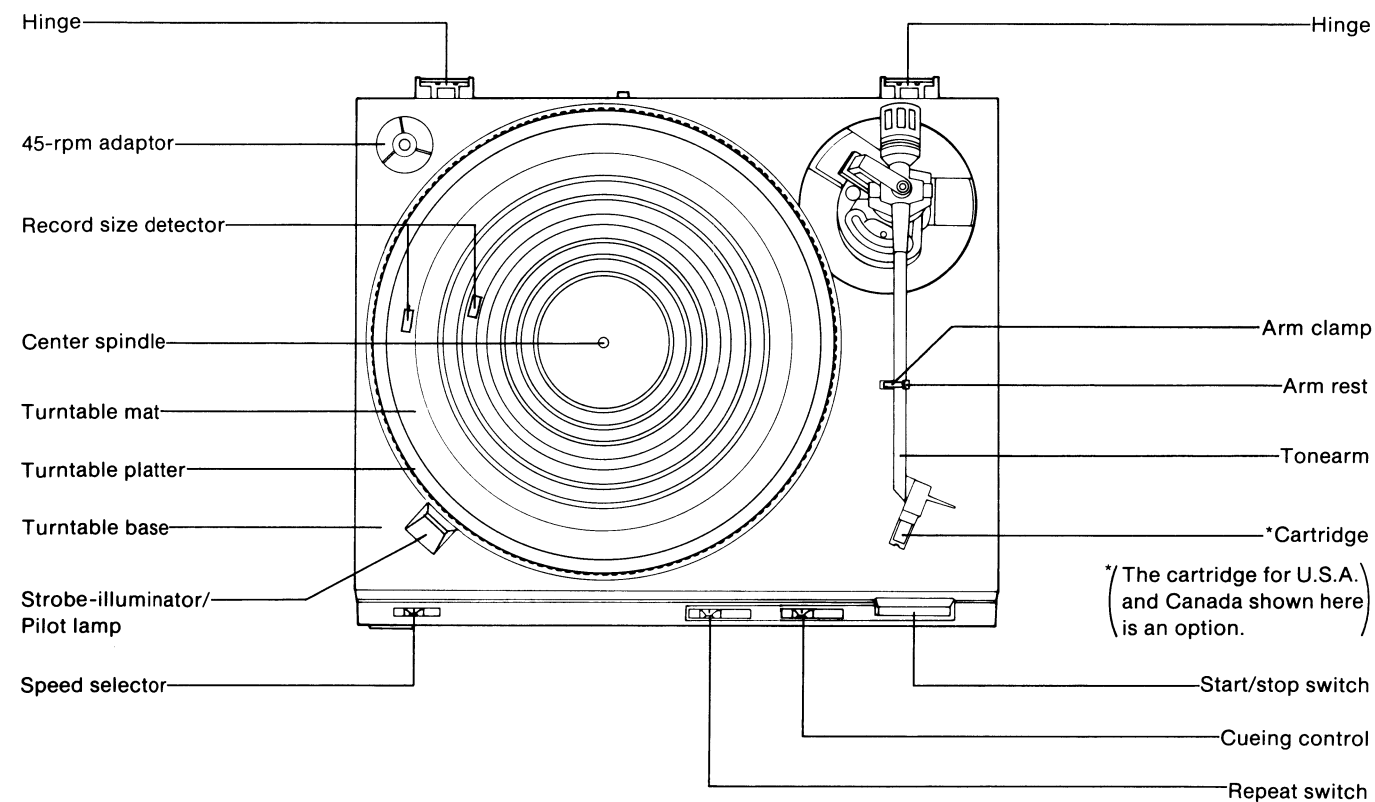


■ DISASSEMBLY INSTRUCTIONS

Ref. No. 1	How to remove the cartridge	Ref. No. 3	How to remove the turntable platter
Procedure 1	1. Remove the setscrew ❶. 2. Pull out the cartridge, taking care that your hand does not touch the stylus tip.	Procedure 3	1. Open the dust cover and remove the turntable mat. 2. Lift up the turntable platter.
Ref. No. 2	How to remove the stylus		
Procedure 2	• Pull out the stylus, taking care not to touch the stylus tip.		


Ref. No. 4	How to remove the bottom board	Ref. No. 6	How to remove the start/stop switch knob
Procedure 3 ▶ 4	1. Turn over the unit on a soft cloth. 2. Remove the 5 setscrews (❶ ~ ❺).	Procedure 3 ▶ 4 ▶ 6	1. Remove the setscrew ❶. 2. Remove the holder (with knob) in the direction of the arrows (A, B). 3. Release the 2 claws.
			Note: When attaching the start/stop knob, do not forget to attach the spring.
Ref. No. 5	How to remove the cueing knob	Ref. No. 7	How to remove the automatic mechanism plate
Procedure 3 ▶ 4 ▶ 5	• Remove the setscrew ❶.	Procedure 3 ▶ 4 ▶ 7	1. Remove the stop rod, cueing lever rod and repeat rod. 2. Remove the 10 screws (❶ ~ ❿). 3. Remove the 2 shield plates. 4. Lift up the automatic mechanism plate. Note: When fitting the automatic mechanism plate, check the following point. • Turn the main gear until it comes to the no gear part.

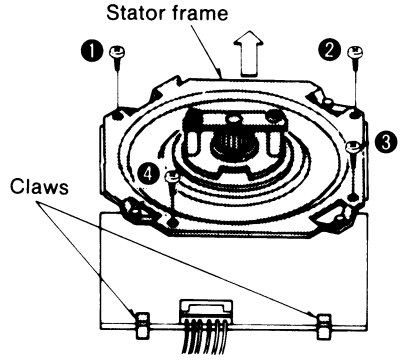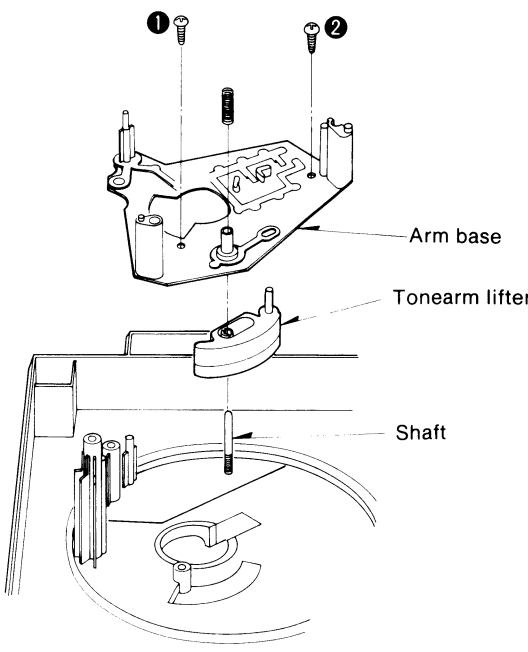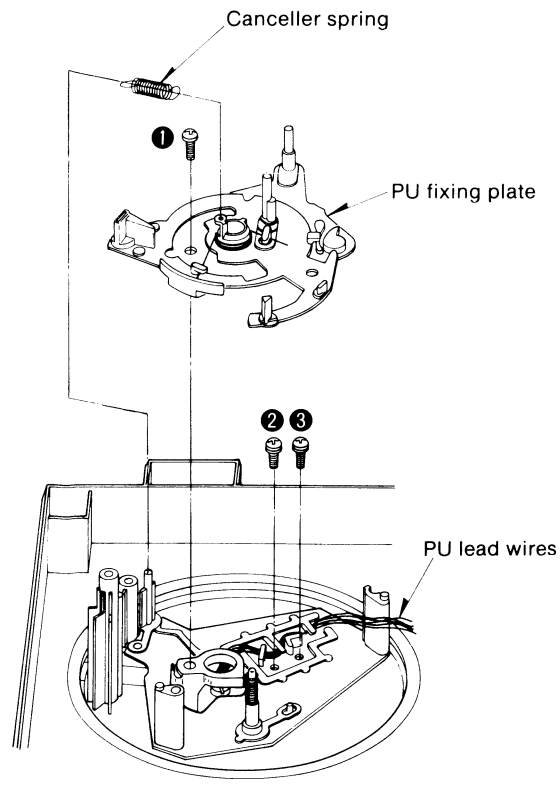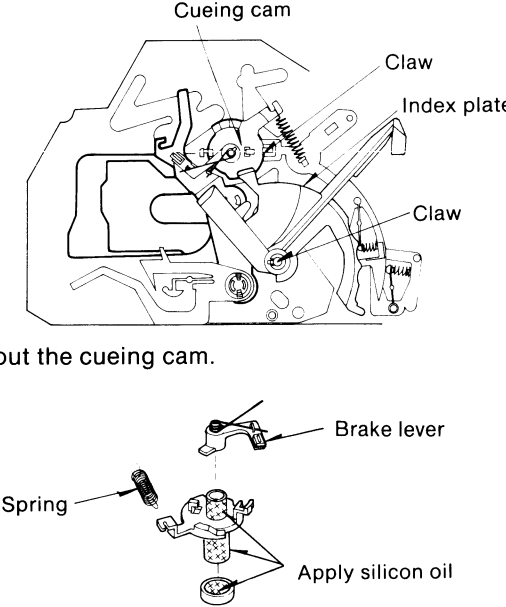Ref. No. 6	How to remove the stator frame	Ref. No. 8	How to remove the armbase and lifter
Procedure 1♦2♦5♦6	1. Remove the 4 setscrews (❶ ~ ❷). 2. Remove the stator frame from the 2 claws in the direction of the arrow.	Procedure 1♦2♦5♦7♦8	1. Remove the 2 setscrews (❶, ❷). Then the arm base can be removed. 2. To remove the tonearm lifter, remove the spring and the shaft.
			
Ref. No. 7	How to remove the tonearm	Ref. No. 9	How to remove the cueing cam
Procedure 1♦2♦5♦7	1. Remove the PU fixing plate setscrew ❶ and the canceller spring. 2. Unsolder the 5 PU lead wires from the phono terminal. 3. To remove the tonearm, remove the 2 setscrews (❷, ❸). * PU lead wiring method. White L channel (+) terminal Blue L channel (-) terminal Red R channel (+) terminal Green R channel (-) terminal Black Ground terminal	Procedure 1♦2♦5♦7♦9	1. Release the claw and remove the index plate. 2. Remove the spring. 3. Release the claw. 4. Pull out the cueing cam.
			
			Note: If the cueing time of the tonearm becomes too short, or if the cueing cam is replaced, apply silicon oil (Part No. SZZOL11) according to the following procedure. 1. Remove the cueing cam and brake lever. 2. Apply silicon oil to the cueing cam and oil tank.

■ CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM

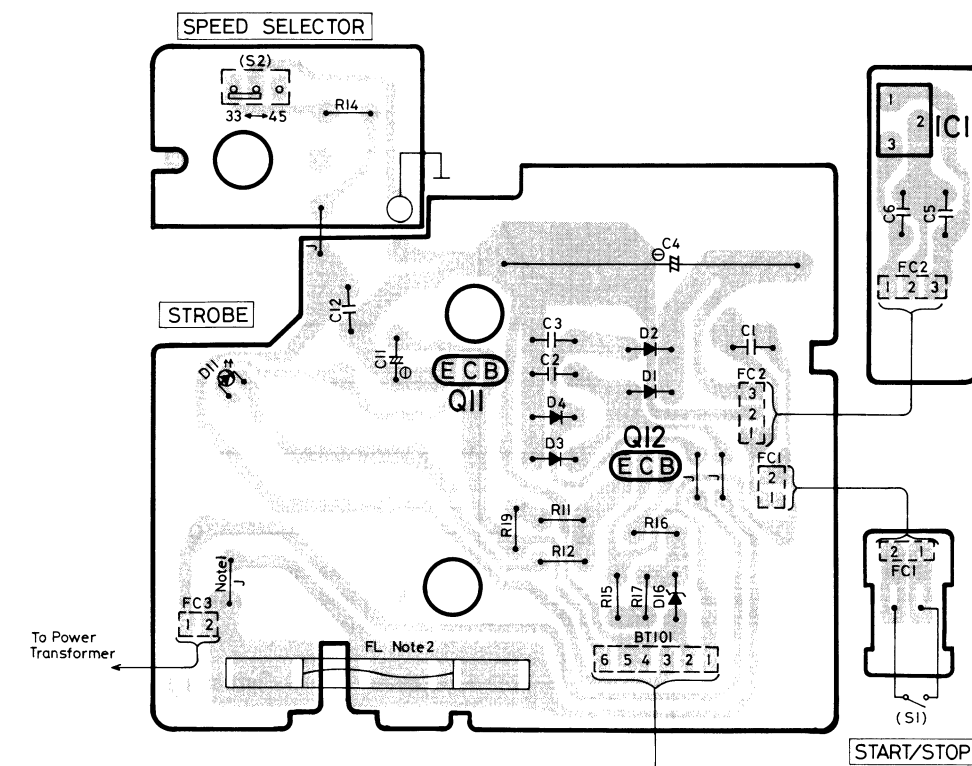


- Notes:**
1. This jumper wire is only for the product for the U.S.A.
 2. This fuse (F1) is for the product for areas other than the U.S.A.
- F1: Product for Canada:
250V, 800mA
Product for other areas:
250V, T500mA

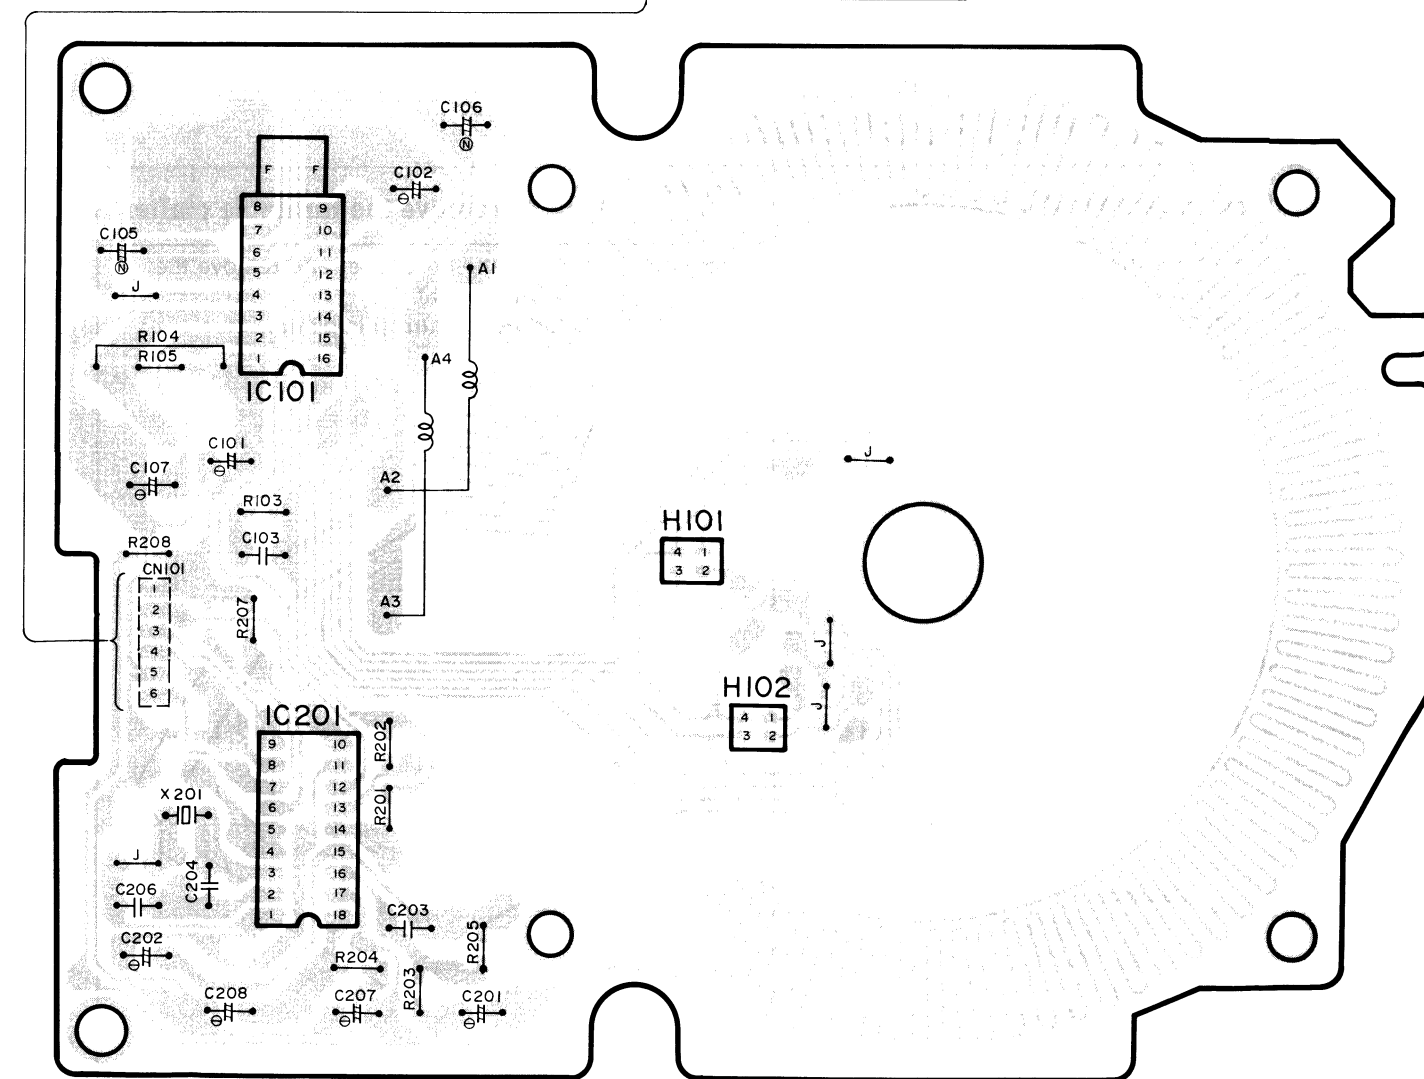

■ SCHEMATIC DIAGRAM

• Power Source Circuit For [XA] Area

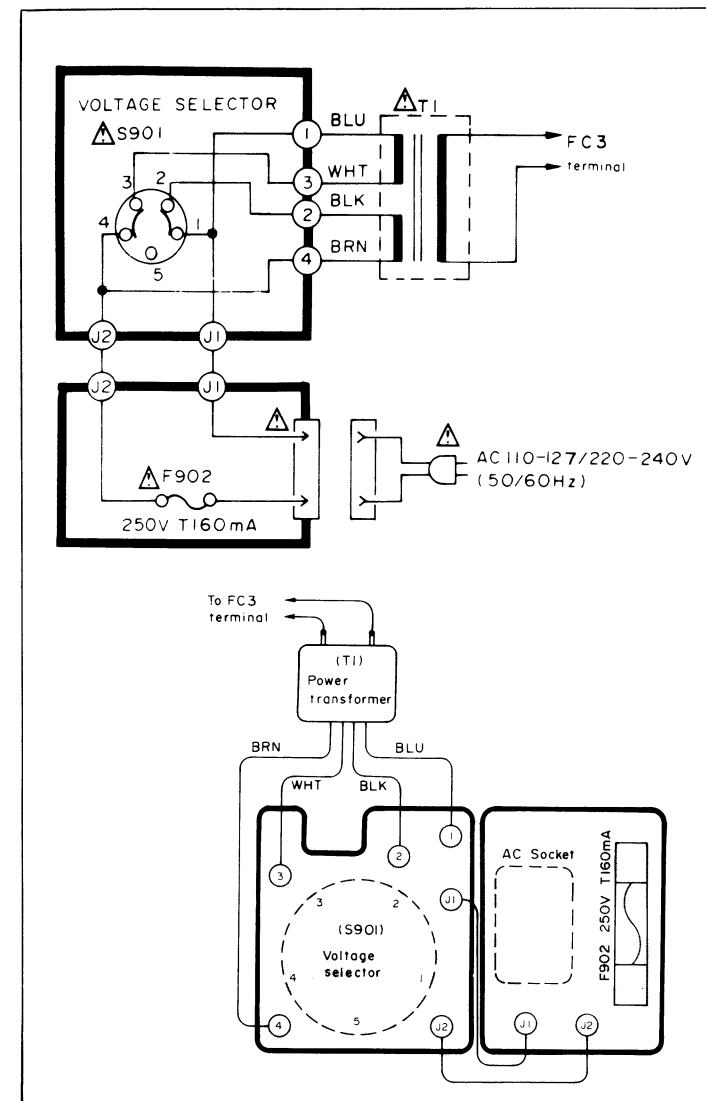

- Notes:**
1. **S1** : START/STOP (power) switch in "on" position.
 2. **S2** : Speed selector switch in "33" position.
 3. **S901** : Voltage selector switch. (For [XA] area only.)
 4. The voltage value, and waveforms are the reference voltage values of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis when the unit is in play.
 5. Important safety notice:
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
 6. This schematic diagram may be modified at any time with development of new technology.



★ Caution!

- IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair.
- ★ Cover the parts boxes made of plastics with aluminum foil.
 - ★ Ground the soldering iron.
 - ★ Put a conductive mat on the work table.
 - ★ Do not touch the legs of IC or LSI with the fingers directly.

Note:

Product for the U.S.A.:
This part is for shorting.
Product for Canada:
F1: 250V, 800mA
Product for other areas:
F1: 250V, T500mA

For U.S.A. and Canada:
AC 120V, 60 Hz
For United Kingdom and Australia:
AC 240V, 50 Hz
For Continental Europe:
AC 220V, 50 Hz

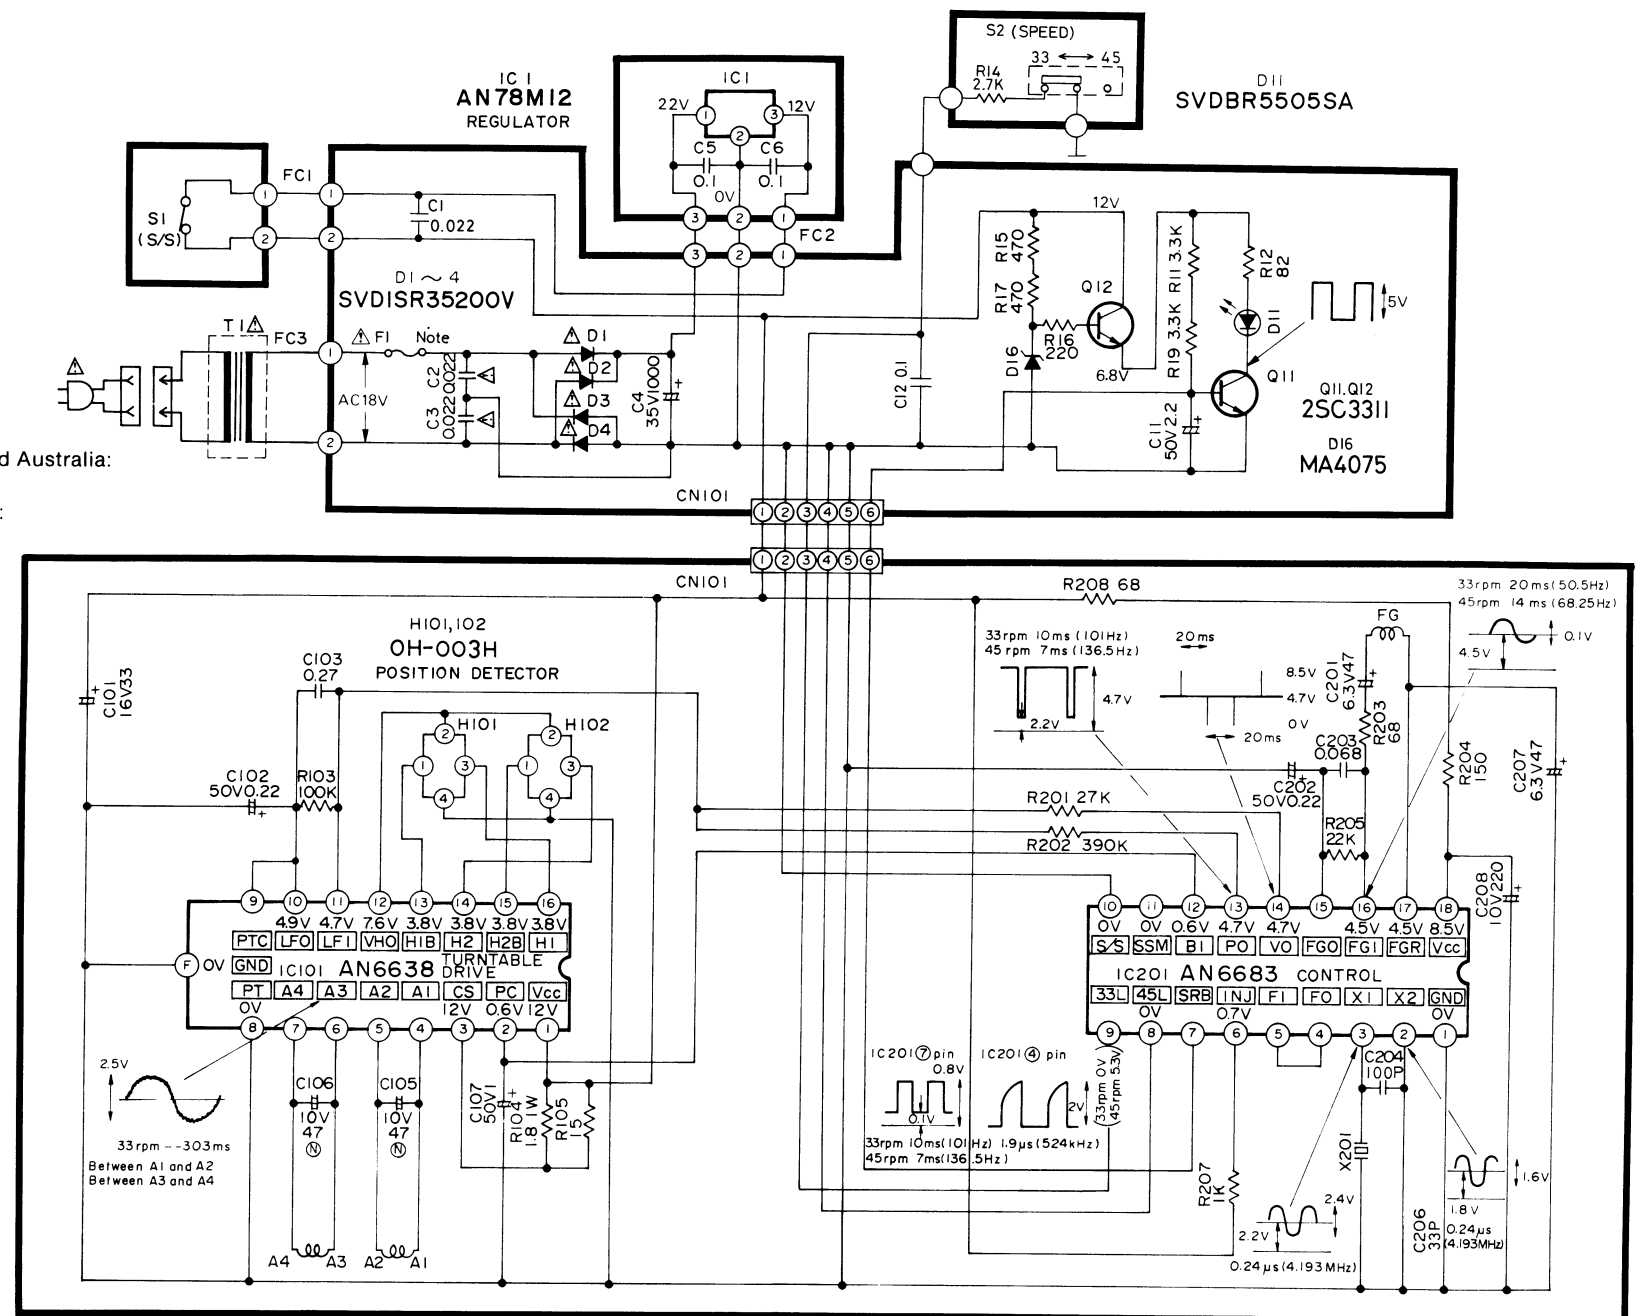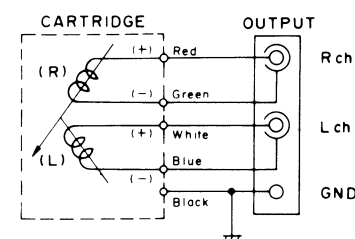

• Product for MC only


FUSE REPLACEMENT

Δ symbol located near the fuse indicates fast-operating type. For continued protection against fire hazard, replace with same type fuse. Refer to the symbol for fuse rating.


FUSIBLE REMPLACEMENT

Δ Le symbole qui se trouve près du fusible signifie un fusible à action rapide. Pour une protection continue contre les risques d'incendie, n'utiliser que des fusibles du même type. Se rapporter au symbole pour la valeur des fusibles.

• Terminal guide of IC's, transistor and diodes.

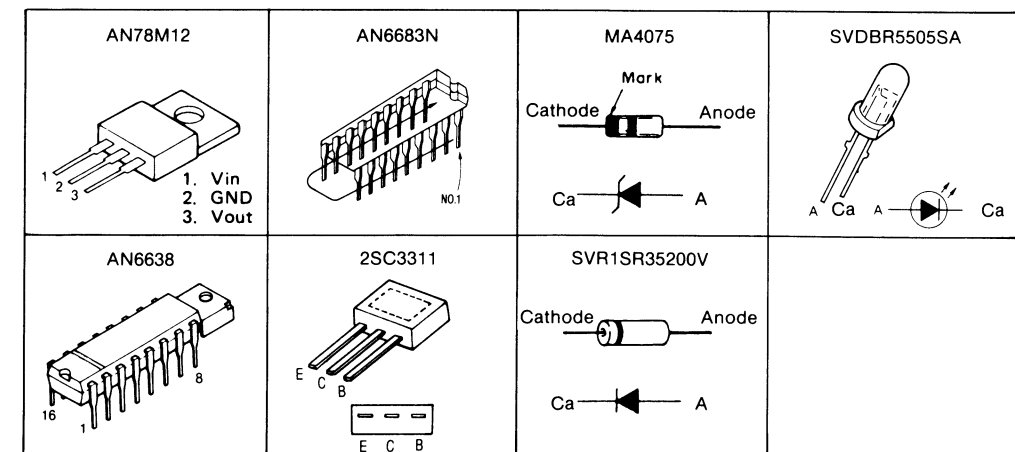

■ BLOCK DIAGRAM

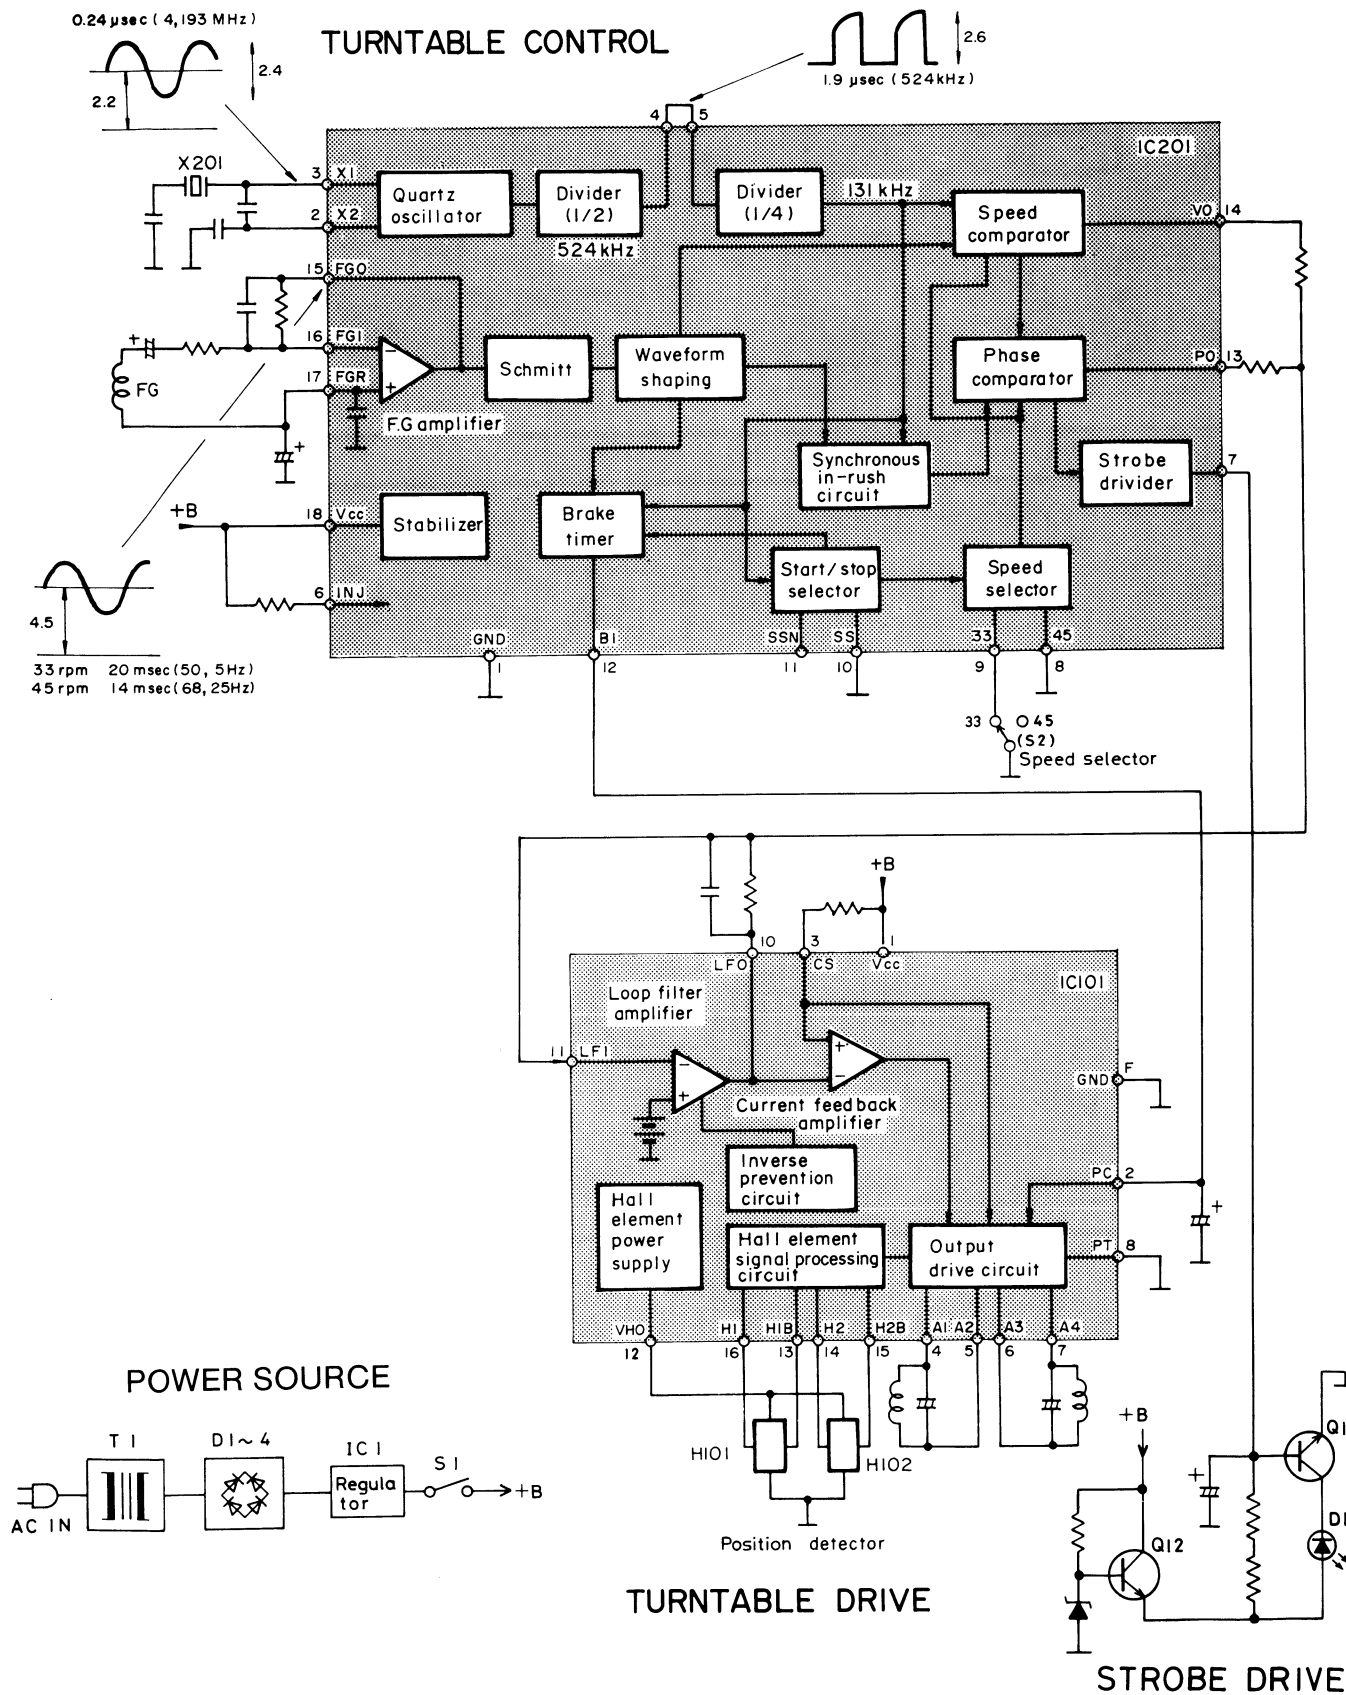

■ MEASUREMENTS AND ADJUSTMENT

ARM-LIFT HEIGHT


The arm-lift height (distance between the stylus tip and the record surface when the cueing control is at the "▼" position) has been adjusted at the factory to approximately 5 to 7 mm (3/16" ~ 9/32"). If the clearance is too narrow or too wide, turn the adjustment screw clockwise or counterclockwise.

Clockwise rotation

— distance between the record and stylus tip is decreased.

Counterclockwise rotation

— distance between the record and stylus tip is increased.

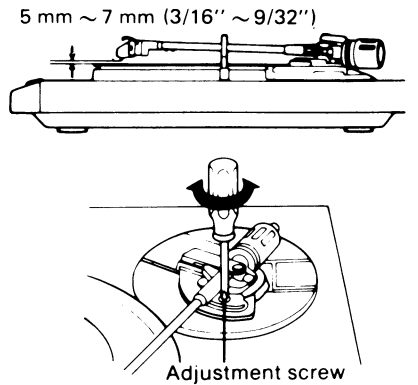

AUTOMATIC START POSITION

If the stylus does not land in the lead-in groove, adjust as follows.

1. Clamp the tonearm to the arm rest.
2. Remove the rubber cap.
3. Turn the screw with a screwdriver, clockwise or counterclockwise as necessary.


If the stylus tip sets down too far in the recorded groove,

—turn **counterclockwise**.

If the stylus tip sets down outside of the record,

—turn **clockwise**.

Adjust so the stylus tip lands 1—2 mm in from the edge of the record.

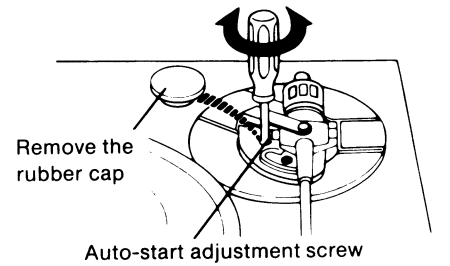

AUTOMATIC RETURN POSITION

(Remove the plate.)


Make this adjustment if the tonearm doesn't return automatically to the arm rest, or if it returns before the tune ends.

If the tonearm tends to return to the arm rest before the play has finished.


— turn **counterclockwise**.


If the tonearm fails to return after the final groove.

— turn **clockwise**.

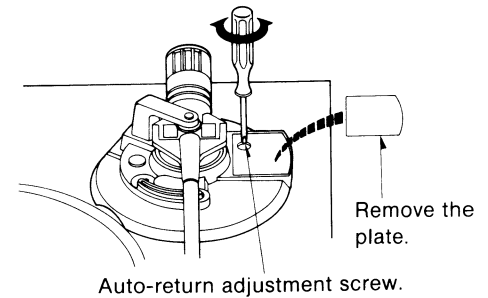


■ EXPLODED VIEW

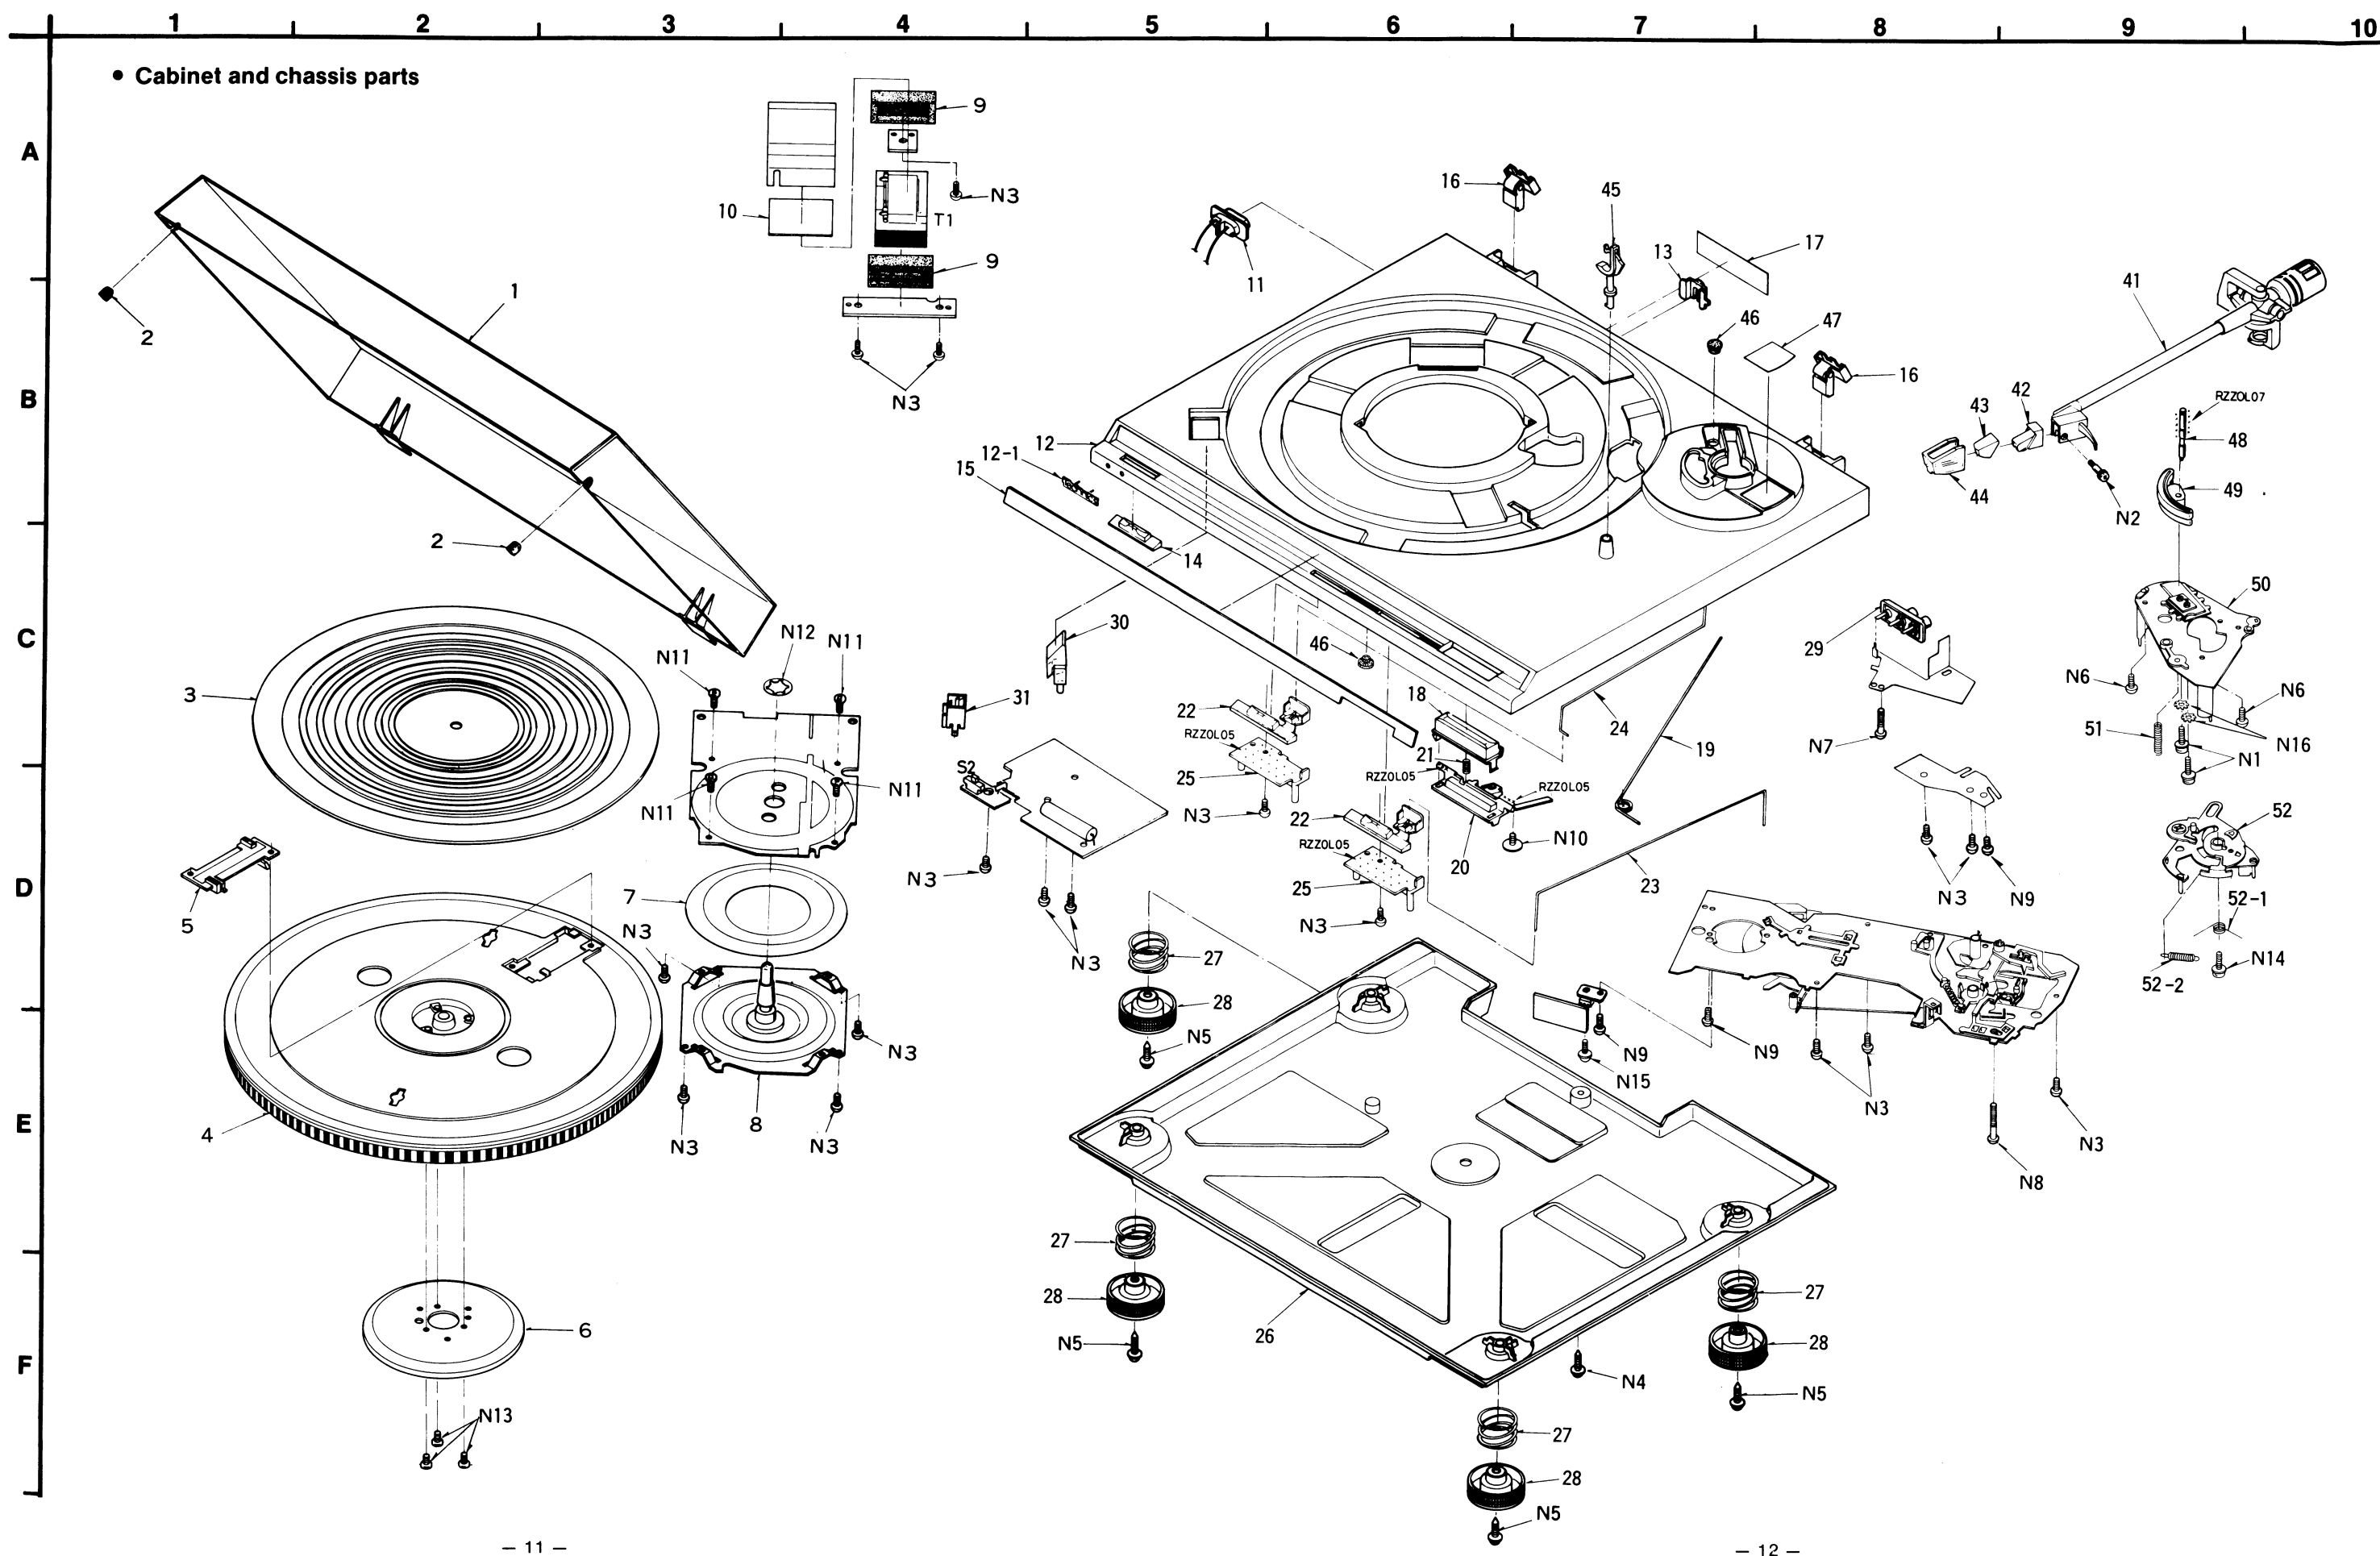

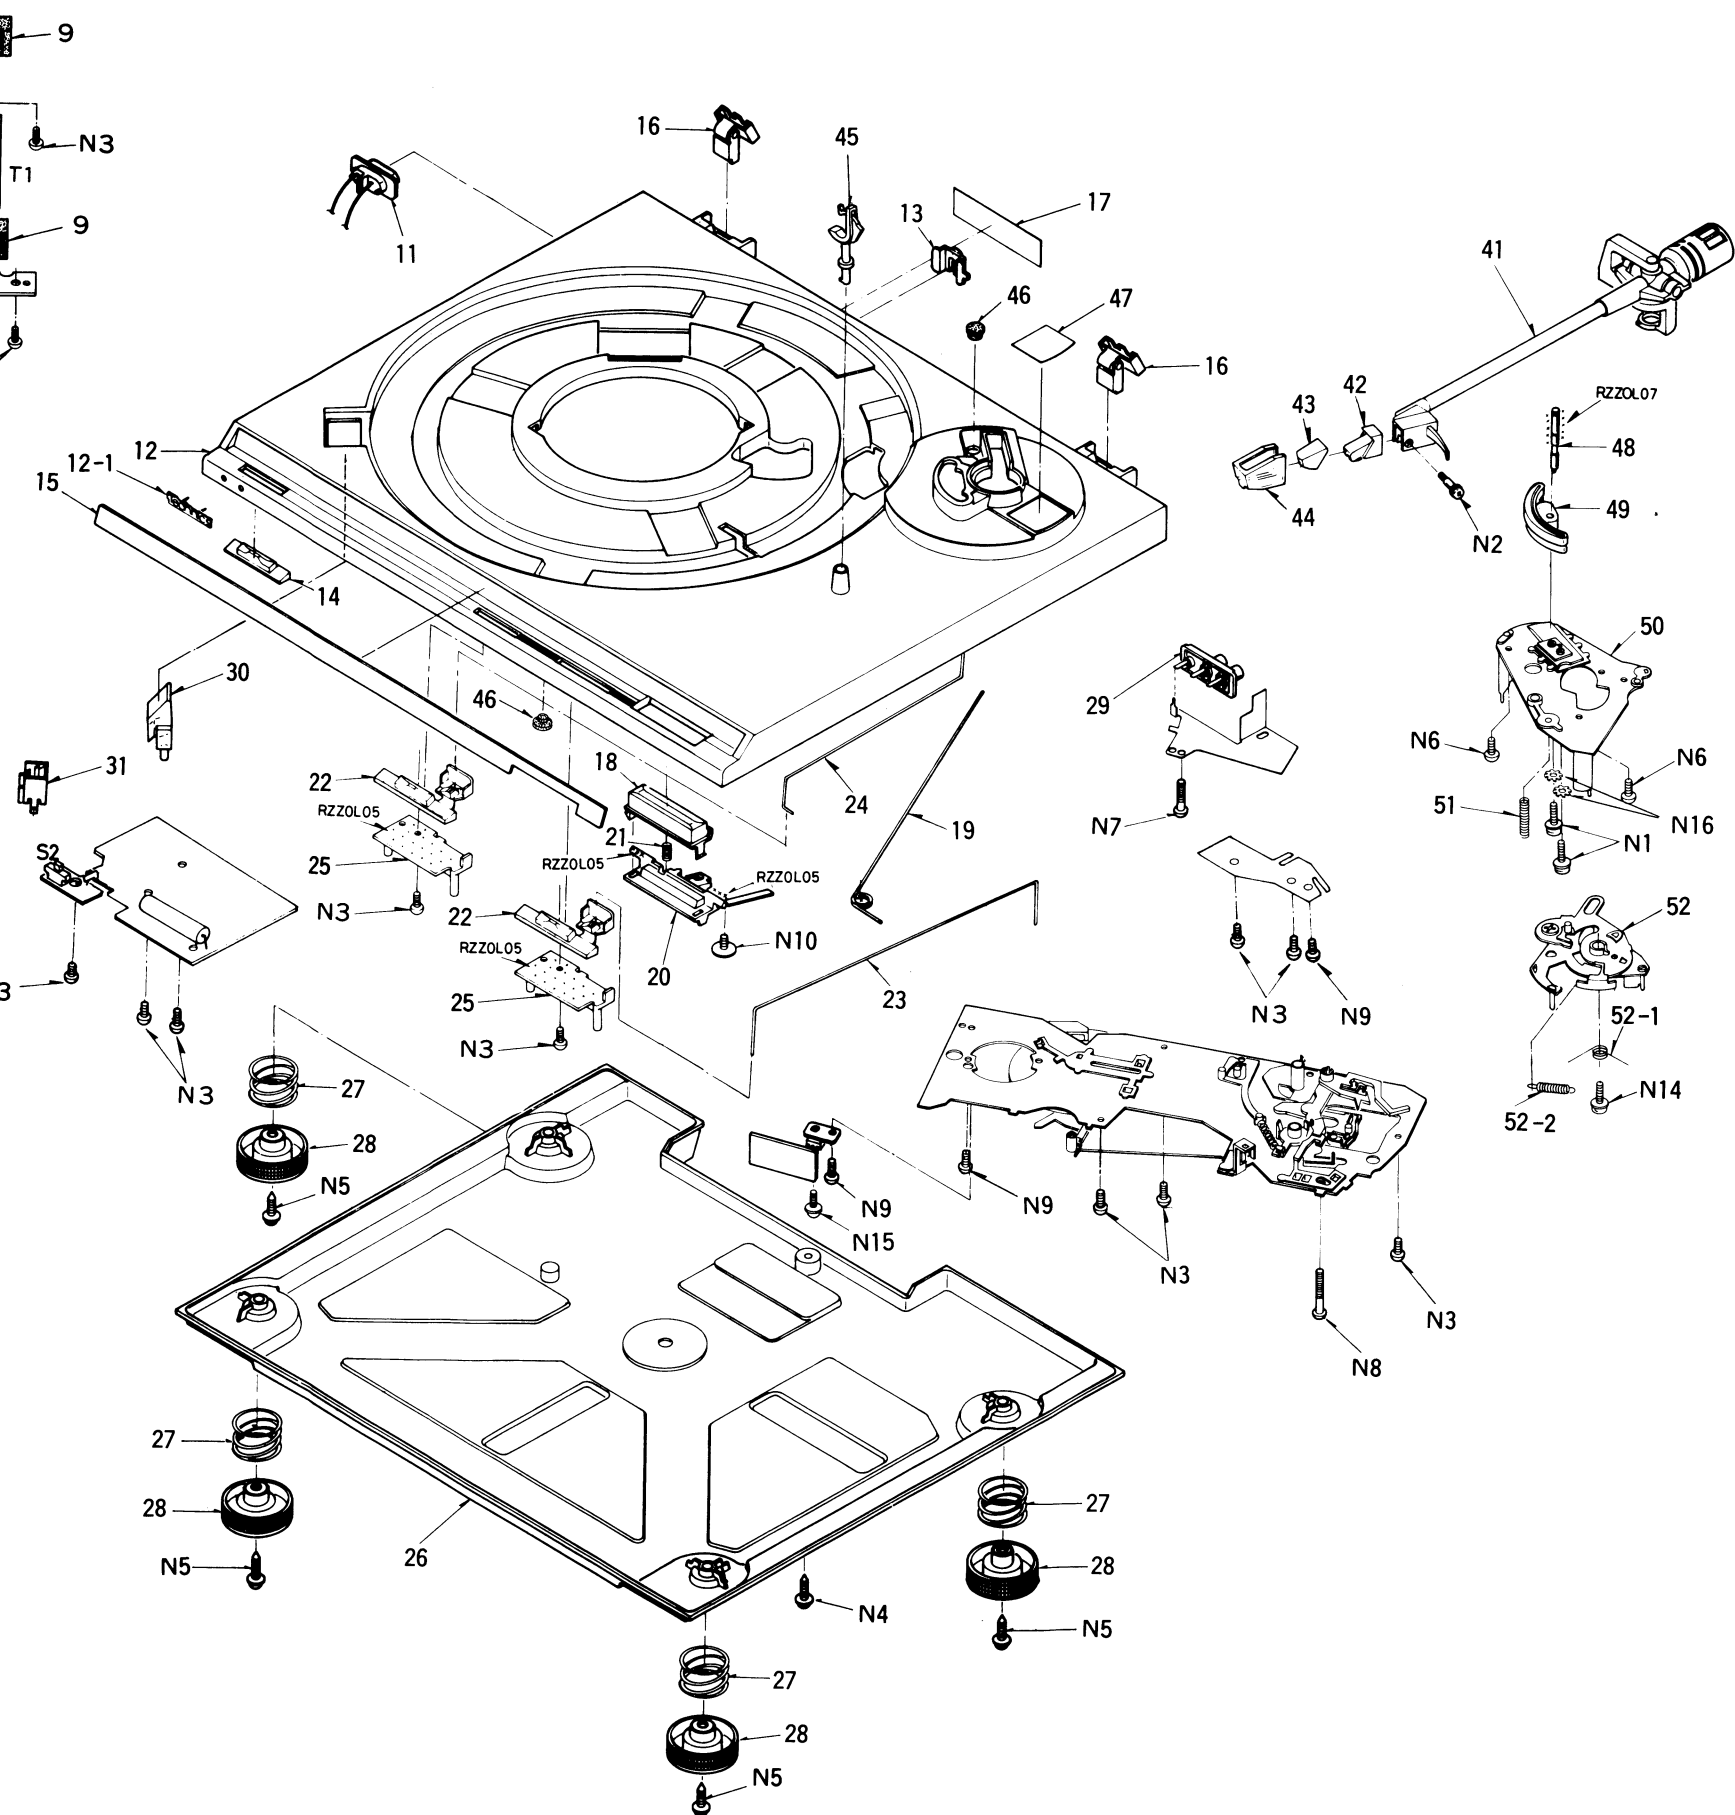

• Mechanism parts

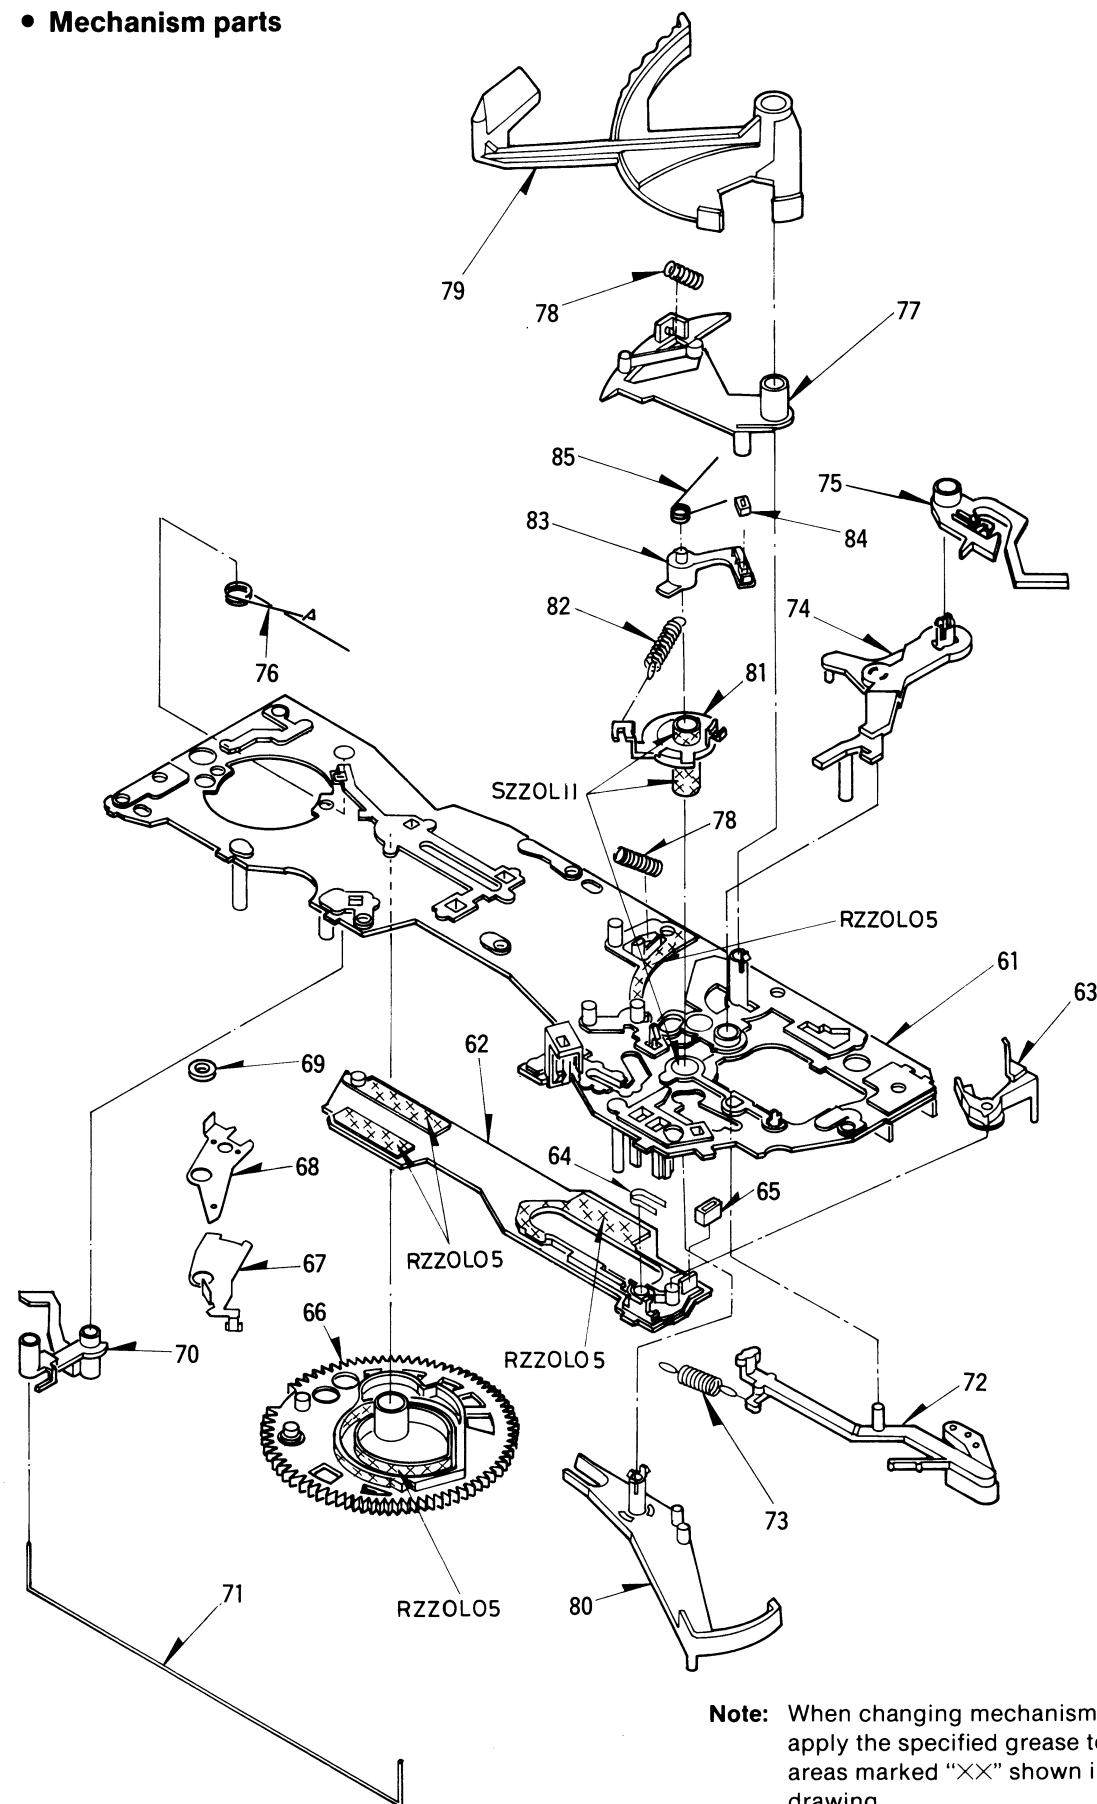

Note: When changing mechanism parts, apply the specified grease to the areas marked "X" shown in the drawing.

REPLACEMENT PARTS LIST

- Notes:**
- Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
 - Important safety notice:
Components identified by Δ mark have special characteristics important for safety.
When replacing any of these components, use only manufacturer's specified parts.
 - $\odot$ -marked parts are used for black type only, while $\circ$ -marked parts are used for silver type only.
 - Parts other than $\odot$ - and $\circ$ -marked are used for both black and silver types.
 - Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.
 - The "S" mark is service standard parts and may differ from production parts.
 - The parenthesized numbers in the column of description stand for the quantity per set.

Color	Areas
(S) (K)	[M] U.S.A.
(S) (K)	[MC] ... Canada.
(S) (K)	[E] Switzerland and Scandinavia.
(S) (K)	[EK] United Kingdom.
(S) (K)	[XL] Australia.
(S) (K)	[EG] ... F.R. Germany.
(S) (K)	[EB] Belgium.
(S) (K)	[EH] Holland.
(S) (K)	[EF] France.
(S) (K)	[Ei] Italy.
(S) (K)	[EC] Czechoslovakia.
(S) (K)	[XA] Asia, Latin America, Middle Near East, Africa and Oceania.

Ref. No.	Part. No.	Description
INTEGRATED CIRCUITS		
IC1	AN78M12	Regulator
IC101	AN6638	Turntable Drive
IC201	AN6683N	Turntable Control
TRANSISTORS		
Q11, 12	2SC3311	Strobe Drive
DIODES		
D1~4	Δ SVD1SR35200V	Rectifier
D11	SVDBR5505SA	Strobe, LED
D16	MA4075	Zener, 7.5V
RESISTORS		
R11	ERDS2TJ332	Carbon, 1/4W, 3.3k Ω , $\pm 5\%$
R12	ERDS2TJ820	Carbon, 1/4W, 82 Ω , $\pm 5\%$
R14	ERDS2TJ272	Carbon, 1/4W, 2.7k Ω , $\pm 5\%$
R15	ERDS2TJ471	Carbon, 1/4W, 470 Ω , $\pm 5\%$
R16	ERDS2TJ221	Carbon, 1/4W, 220 Ω , $\pm 5\%$
R17	ERDS2TJ471	Carbon, 1/4W, 470 Ω , $\pm 5\%$
R19	ERDS2TJ332	Carbon, 1/4W, 3.3k Ω , $\pm 5\%$
R103	ERDS2TJ104	Carbon, 1/4W, 100k Ω , $\pm 5\%$
R104	ERX1ANJU1R8	Metal Film, 1W, 1.8 Ω , $\pm 5\%$
R105	ERDS2TJ150	Carbon, 1/4W, 15 Ω , $\pm 5\%$
R201	ERDS2TJ273	Carbon, 1/4W, 27k Ω , $\pm 5\%$
R202	ERDS2TJ394	Carbon, 1/4W, 390k Ω , $\pm 5\%$
R203	ERDS2TJ680	Carbon, 1/4W, 68 Ω , $\pm 5\%$
R204	ERDS2TJ151	Carbon, 1/4W, 150 Ω , $\pm 5\%$
R205	ERDS2TJ223	Carbon, 1/4W, 22k Ω , $\pm 5\%$
R207	ERDS2TJ102	Carbon, 1/4W, 1 k Ω , $\pm 5\%$
R208	ERDS2TJ680	Carbon, 1/4W, 68 Ω , $\pm 5\%$

Ref. No.	Part. No.	Description
CAPACITORS		
C1	ECQG1223KZ	Polyester, 100V, 0.022 μ F, $\pm 10\%$
C2, 3	Δ ECKR1H223ZF	Ceramic, 50V, 0.022 μ F, $\pm 20\%$
C4	ECEB1VU102	Electrolytic, 35V, 1000 μ F
C5, 6	ECFR1H104ZF	Ceramic, 50V, 0.1 μ F, $\pm 20\%$
C11	ECEA1HU2R2B	Electrolytic, 50V, 2.2 μ F
C12	ECFR1H104ZF	Ceramic, 50V, 0.1 μ F, $\pm 20\%$
C101	ECEA1CU330B	Electrolytic, 16V, 33 μ F
C102	ECEA1HUR22B	Electrolytic, 50V, 0.22 μ F
C103	ECQV05274JZ	Polyester, 50V, 0.27 μ F, $\pm 5\%$
C105, 106	ECEA1AN470S	Non Polar Electrolytic, 10V, 47 μ F
C107	ECEA1HU010B	Electrolytic, 50V, 1 μ F
C201	ECEA0JU470B	Electrolytic, 6.3V, 47 μ F
C202	ECEA1HUR22B	Electrolytic, 50V, 0.22 μ F
C203	ECQM1H683KV	Polyester, 50V, 0.068 μ F, $\pm 10\%$
C204	ECCR1H101JC	Ceramic, 50V, 100PF, $\pm 5\%$
C206	ECCR1H330JC	Ceramic, 50V, 33PF, $\pm 5\%$
C207	ECEA0JU470B	Electrolytic, 6.3V, 47 μ F
C208	ECEA1AU221B	Electrolytic, 10V, 220 μ F
POWER TRANSFORMER		
T1 [M]	Δ SLT48DTL3A	Power Source
T1 [MC]	Δ SLT48DT11C	Power Source
T1	Δ SLT48DTE13E	Power Source
[EK, XL]		
T1 [XA]	Δ SLT57DT7E	Power Source
T1 [other]	Δ SLT48DT10E	Power Source
SWITCHES		
S1	SSPB4	Start/stop
S2	SFDSHSW0834	Speed Selector
S901	Δ SFDSHXW225-3	Voltage Selector
[XA] only		




Ref. No.	Part. No.	Description
FUSES		
F1 [MC]	Δ XBA2F08NU100	250V, 800mA
F1	Δ XBA2C05NTB0	250V, T500mA
[except [M, MC]]		
F902	Δ XBA2C016TB0	250V, T160mA
[XA] only		
HALL ELEMENTS		
H101, 102	OH-003	Turntable Position Detector
OSCILLATOR		
X201	SVFCSA419MGF	4.19MHz
CABINET AND CHASSIS PARTS		
1	SFADZ15R01	Dust Cover (1)
2	SFGZD04N01	Rubber Cushion, Dust Cover (2)
3	SHOB5	Turntable Mat (1)
4	SDOB4	Turntable Platter (1)
5	SHRB15E	Record Size Detector (1)
6	SFTMC07-01E	Magnet (1)
7	SFMGQ34N01	Cover, Stator Coil (1)
8	SFMZQ63M53A	Stator Frame Ass'y (1)
9 [XA]	SFGCC05X01	Rubber Cushion, Power Transformer (2)
9 [other]	SFGCC05N02	Rubber Cushion, Power Transformer (2)
10	SFGZC05N03	Rubber Cushion, Power Transformer (1)
11	Δ SJSB4	AC Socket (1)
12	$\circ$ SKMLDD33-SM	Cabinet With Badge (1)
12	$\odot$ SKMLDD33-KM	Cabinet With Badge (1)
12-1	$\circ$ SGB628	Badge (1)
12-1	$\odot$ SGB628-1	Badge (1)

Ref. No.	Part. No.	Description
13	$\circ$ SKMB410-0S	Cover (1)
[except [XA]]		
13	$\odot$ SKMB410-0K	Cover (1)
[except [XA]]		
14	$\circ$ SFKTBD2N03	Knob, Speed Selector (1)
14	$\odot$ SBCB70-0C	Knob, Speed Selector (1)
15	SGXB130-00B	Ornament Plate (1)
16	SFATZ15R01A	Hinge (2)
17 [M]	SGTB60	Name Plate (1)
17 [MC]	SGTB61	Name Plate (1)
17 [E, EC]	SGTB62	Name Plate (1)
17 [EK]	SGTB65	Name Plate (1)
17 [XL]	SGTB97	Name Plate (1)
17 [EG]	SGTB63	Name Plate (1)
17 [XA]	SGTB68	Name Plate (1)
17 [other]	SGTB64	Name Plate (1)
18	$\circ$ SBCB110-0S	Button, Start/Stop (1)
18	$\odot$ SBCB110-0C	Button, Start/Stop (1)
19	STZB12	Rod, Start/Stop (1)
20	SFUMB2N01	Base, Start/Stop (1)
21	SFQHZ15R01	Spring, Start/Stop Button (1)
22	$\circ$ SBCB61-0S	Knob, Cueing and Repeat (2)
22	$\odot$ SBCB60-0C	Knob, Cueing and Repeat (2)
23	STZB3	Rod, Cueing (1)
24	STZB9	Rod, Repeat (1)
25	$\circ$ SKMB400-0S	Bracket, Cueing and Repeat Knob (2)
25	$\odot$ SKMB400-0K	Bracket, Cueing and Repeat Knob (2)
26	SKUB3-1	Bottom Cover (1)
27	SFQCQD3N01	Spring, Insulator (4)
28	SKLB2	Insulator (4)
29	SFDJBD2N03	Jack, Output (1)
30	SFUMB2N07	Strobe (1)
31	SFUMB2N06	Holder, LED (1)
TONEARM PARTS		
41	SFPAMDD201A	Tonearm Ass'y (1)
42	EPC-P30S	*Cartridge (1)
[except [M, MC]]		
43	EPS-30CS	*Stylus (1)
[except [M, MC]]		
44	SFCNC03301	Cover, Stylus (1)
[except [M, MC]]		
45	SFKUMA1N01E	Tonearm Rest (1)

Ref. No.	Part. No.	Description
46	$\circ$ SFGK170-01	Cap (2)
46	$\odot$ SFGK171F01	Cap (2)
47	SGXB230	Plate, Cancellor (1)
48	SFXJBD2N51	Shaft, Tonearm Lifter (1)
49	SFUMB2N51	Tonearm Lifter (1)
50	SHRB20E	Arm Base (1)
51	SUSB1	Spring, Tonearm Lifter (1)
52	SUKB7E	Plate, Pick-up Fixing (1)
52-1	SUSB19	Spring (1)
52-2	SFQHB63M57	Spring (1)
MECHANISM PARTS		
61	SUKB9	Mechanism Plate (1)
62	SUKB14	Plate, Drive (1)
63	SFUMB63M51	Plate, Motive (1)
64	SUSB36	Spring (1)
65	SFGZB63M51	Rubber, Return (1)
66	SDGB5	Main Gear (1)
67	SFURZ15R51	Rink (A), Main Gear (1)
68	SUWB17	Rink (B), Main Gear (1)
69	SFUMZ15R56	Holder, Rink (1)
70	SUWB8	Lever, Actuating (1)
71	STZB10	Rod, Actuating (1)
72	SHRB21	Lever, Cut (1)
73	SUSB21	Spring, Cut Lever (1)
74	SHRB22	Lever, Switch (A) (1)
75	SHRB23	Lever, Switch (B) (1)
76	SUSB27	Spring, Gear Setting (1)
77	SHRB24	Sub Plate, Index (1)
78	SUSB28	Spring (2)
79	SHRB25	Plate, Index (1)
80	SHRB26	Lever, Repeat (1)
81	SDGB4	Cam, Cueing (1)
82	SUSB26	Spring, Cueing (1)
83	SHRB46	Lever, Brake (1)
84	SHGB13	Felt, Brake Lever (1)
85	SUSB25	Spring, Brake (1)
SCREWS AND WASHERS		
N1	SNSB1	Screw (2)
N2	SFPEV0Q601	Screw, Cartridge (1)
N3	XTV3+10G	Screw, $\odot 3 \times 10$ (17)
N4	XTW3+14QFYR	Screw, $\odot 3 \times 14$ (1)
N5	SNSB4	Screw (4)
N6	XTV3+8G	Screw, $\odot 3 \times 8$ (2)
N7	XTV3+20J	Screw, $\odot 3 \times 20$ (1)
N8	XTV3+30J	Screw, $\odot 3 \times 30$ (1)
N9	XTV3+8J	Screw, $\odot 3 \times 8$ (3)
N10	SFXGQ06N01	Screw (1)
N11	XTV3+6J	Screw, $\odot 3 \times 6$ (4)
N12	SFXWC06N02	Washer (1)
N13	XTN3+6J	Screw, $\odot 3 \times 6$ (3)
N14	SFXGQ34N02	Screw (1)
N15	XYN3+C5S	Screw, $\odot 3 \times 5$ (1)
N16	XWC3B	Washer (2)

Ref. No.	Part. No.	Description
ACCESSORIES		
A1 [M]	SQX53808	Instruction Book (1)
A1 [MC]	SQX53812	Instruction Book (1)
A1 [EK]	SQX53812	Instruction Book (1)
A1	SQX53810	Instruction Book (1)
[XL, XA]		
A1 [EG]	SQX53814	Instruction Book (1)
A1 [EF]	SQX53813	Instruction Book (1)
A1 [Ei]	SQX53815	Instruction Book (1)
A1 [other]	SQX53815-SE	Instruction Book (1)
A2	SFDHBD2N01	Output Cord (1)
A3	SFDLJ11N01E	Ground Wire (1)
A4	SFWE212-01	45 Adaptor (1)
A5	Δ SJA170	AC Cord (1)
[M, MC]		
A5 [EK]	Δ SFDAC05G02	AC Cord (1)
A5 [XL]	Δ SJA163	AC Cord (1)
A5 [XA]	Δ SJA168-1	AC Cord (1)
A5 [other]	Δ SFDAC05E02	AC Cord (1)
A6	Δ SJP9215	Adaptor (1)
[XA] only		
PACKING PARTS		
P1	$\circ$ SPGB29	Carton Box (1)
[MC, EF]		
P1	$\circ$ SPGB28	Carton Box (1)
[other]		
P1	$\odot$ SPGB31	Carton Box (1)
[MC, EF]		
P1	$\odot$ SPGB30	Carton Box (1)
[other]		
P2	SFHHBD3N01	Pad, Left (1)
P3	SFHHBD3N02	Pad, Right (1)
P4	SPEB3	Clamper, Turntable Platter (2)
P5	SFHZB63M01	Clamper, Tonearm (1)
P6	SPPB1	Polyethylene Bag, Dust Cover (1)
P7	SFYH60X60	Polyethylene Bag, Unit (1)
P8	SFYF32A35	Polyethylene Bag, Turntable Mat (1)
P9	SPSB10	Pad, Turntable Mat (1)
P10	SFHZBD2N01	Pad, Tonearm Weight (1)

PACKING

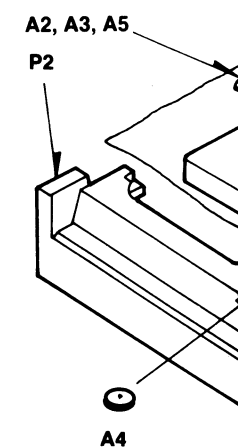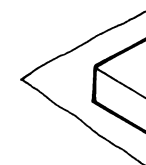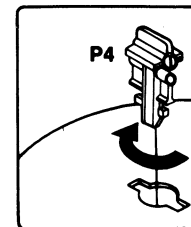

and
l.
dom.

ny.

akia.

ddle
frica
a.

Description

250V, 800mA
250V, T500mA

250V, T160mA

Turntable Position
Detector

4.19MHz

ARTS

- Dust Cover (1)
Rubber Cushion,
Dust Cover (2)
Turntable Mat (1)
Turntable Platter (1)
Record Size Detector
Magnet (1)
Cover, Stator Coil (1)
Stator Frame Ass'y (1)

Rubber Cushion,
Power Transformer (2)
Rubber Cushion,
Power Transformer (2)

Rubber Cushion,
Power Transformer (1)
AC Socket (1)

Cabinet With Badge (1)
Cabinet With Badge (1)

Badge (1)
Badge (1)

Ref. No.	Part. No.	Description	
13	○ SKMB410-0S	Cover	(1)
[except XA]			
13	⊗ SKMB410-0K	Cover	(1)
[except XA]			
14	○ SFTBD2N03	Knob, Speed Selector	(1)
14	⊗ SBCB70-0C	Knob, Speed Selector	(1)
15	SGXB130-00B	Ornament Plate	(1)
16	SFATZ15R01A	Hinge	(2)
17 [M]	SGTB60	Name Plate	(1)
17 [MC]	SGTB61	Name Plate	(1)
17 [E, EC]	SGTB62	Name Plate	(1)
17 [EK]	SGTB65	Name Plate	(1)
17 [XL]	SGTB97	Name Plate	(1)
17 [EG]	SGTB63	Name Plate	(1)
17 [XA]	SGTB68	Name Plate	(1)
17 [other]	SGTB64	Name Plate	(1)
18	○ SBCB110-0S	Button, Start/Stop	(1)
18	⊗ SBCB110-0C	Button, Start/Stop	(1)
19	STZB12	Rod, Start/Stop	(1)
20	SFUMBD2N01	Base, Start/Stop	(1)
21	SFQHZ15R01	Spring, Start/Stop Button	(1)
22	○ SBCB61-0S	Knob, Cueing and Repeat	(2)
22	⊗ SBCB60-0C	Knob, Cueing and Repeat	(2)
23	STZB3	Rod, Cueing	(1)
24	STZB9	Rod, Repeat	(1)
25	○ SKMB400-0S	Bracket, Cueing and Repeat Knob	(2)
25	⊗ SKMB400-0K	Bracket, Cueing and Repeat Knob	(2)
26	SKUB3-1	Bottom Cover	(1)
27	SFQCQD3N01	Spring, Insulator	(4)
28	SKLB2	Insulator	(4)
29	SFDJBD2N03	Jack, Output	(1)
30	SFUMBD2N07	Strobe	(1)
31	SFUMBD2N06	Holder, LED	(1)

TONEARM PARTS

41	SFPAMDD201A	Tonearm Ass'y	(1)
42	EPC-P30S	★Cartridge	(1)
[except M, MC]			
43	EPS-30CS	★Stylus	(1)
[except M, MC]			
44	SFCNC03301	Cover, Stylus	(1)
[except M, MC]			
45	SFKUMA1N01E	Tonearm Rest	(1)

Ref. No.	Part. No.	Description	
46	○ SFGK170-01	Cap	(2)
46	⊗ SFGK171F01	Cap	(2)
47	SGXB230	Plate, Cancellor	(1)
48	SFXJBD2N51	Shaft, Tonearm Lifter	(1)
49	SFUMBD2N51	Tonearm Lifter	(1)
50	SHRB20E	Arm Base	(1)
51	SUSB1	Spring, Tonearm Lifter	(1)
52	SUKB7E	Plate, Pick-up Fixing	(1)
52-1	SUSB19	Spring	(1)
52-2	SFQHB63M57	Spring	(1)

MECHANISM PARTS





61	SUKB9	Mechanism Plate	(1)
62	SUKB14	Plate, Drive	(1)
63	SFUMB63M51	Plate, Motive	(1)
64	SUSB36	Spring	(1)
65	SFGZB63M51	Rubber, Return	(1)
66	SDGB5	Main Gear	(1)
67	SFURZ15R51	Rink (A), Main Gear	(1)
68	SUWB17	Rink (B), Main Gear	(1)
69	SFUMZ15R56	Holder, Rink	(1)
70	SUWB8	Lever, Actuating	(1)
71	STZB10	Rod, Actuating	(1)
72	SHRB21	Lever, Cut	(1)
73	SUSB21	Spring, Cut Lever	(1)
74	SHRB22	Lever, Switch (A)	(1)
75	SHRB23	Lever, Switch (B)	(1)
76	SUSB27	Spring, Gear Setting	(1)
77	SHRB24	Sub Plate, Index	(1)
78	SUSB28	Spring	(2)
79	SHRB25	Plate, Index	(1)
80	SHRB26	Lever, Repeat	(1)
81	SDGB4	Cam, Cueing	(1)
82	SUSB26	Spring, Cueing	(1)
83	SHRB46	Lever, Brake	(1)
84	SHGB13	Felt, Brake Lever	(1)
85	SUSB25	Spring, Brake	(1)

SCREWS AND WASHERS


N1	SNSB1	Screw	(2)
N2	SFPEV0Q601	Screw, Cartridge	(1)
N3	XTV3+10G	Screw, ⊕3×10	(17)
N4	XTW3+14QFYR	Screw, ⊕3×14	(1)
N5	SNSB4	Screw	(4)
N6	XTV3+8G	Screw, ⊕3×8	(2)
N7	XTV3+20J	Screw, ⊕3×20	(1)
N8	XTV3+30J	Screw, ⊕3×30	(1)
N9	XTV3+8J	Screw, ⊕3×8	(3)
N10	SFXGQ06N01	Screw	(1)
N11	XTV3+6J	Screw, ⊕3×6	(4)
N12	SFXWC06N02	Washer	(1)
N13	XTN3+6J	Screw, ⊕3×6	(3)
N14	SFXGQ34N02	Screw	(1)
N15	XYN3+C5S	Screw, ⊕3×5	(1)
N16	XWC3B	Washer	(2)

Ref. No.	Part. No.	Description	
ACCESSORIES			
A1 [M]	SQX53808	Instruction Book	(1)
A1 [MC]	SQXLD33-SMC	Instruction Book	(1)
A1 [EK]	SQX53812	Instruction Book	(1)
A1	SQX53810	Instruction Book	(1)
[XL, XA]			
A1 [EG]	SQX53814	Instruction Book	(1)
A1 [EF]	SQX53813	Instruction Book	(1)
A1 [Ei]	SQX53815	Instruction Book	(1)
A1 [other]	SQXLD33-SE	Instruction Book	(1)
A2	SFDHBD2N01	Output Cord	(1)
A3	SFDLJ11N01E	Ground Wire	(1)
A4	SFWE212-01	45 Adaptor	(1)
A5	△SJA170	AC Cord	(1)
[M, MC]			
A5 [EK]	△SFDAC05G02	AC Cord	(1)
A5 [XL]	△SJA163	AC Cord	(1)
A5 [XA]	△SJA168-1	AC Cord	(1)
A5 [other]	△SFDAC05E02	AC Cord	(1)
A6	△SJP9215	Adaptor	(1)
[XA] only			
PACKING PARTS			
P1	○ SPGB29	Carton Box	(1)
[MC, EF]			
P1	○ SPGB28	Carton Box	(1)
[other]			
P1	⊗ SPGB31	Carton Box	(1)
[MC, EF]			
P1	⊗ SPGB30	Carton Box	(1)
[other]			
P2	SFHHBD3N01	Pad, Left	(1)
P3	SFHHBD3N02	Pad, Right	(1)
P4	SPEB3	Clamper, Turntable Platter	(2)
P5	SFHZB63M01	Clamper, Tonearm	(1)
P6	SPPB1	Polyethylene Bag, Dust Cover	(1)
P7	SFYH60X60	Polyethylene Bag, Unit	(1)
P8	SFYF32A35	Polyethylene Bag, Turntable Mat	(1)
P9	SPSB10	Pad, Turntable Mat	(1)
P10	SFHZBD2N01	Pad, Tonearm Weight	(1)


PACKING

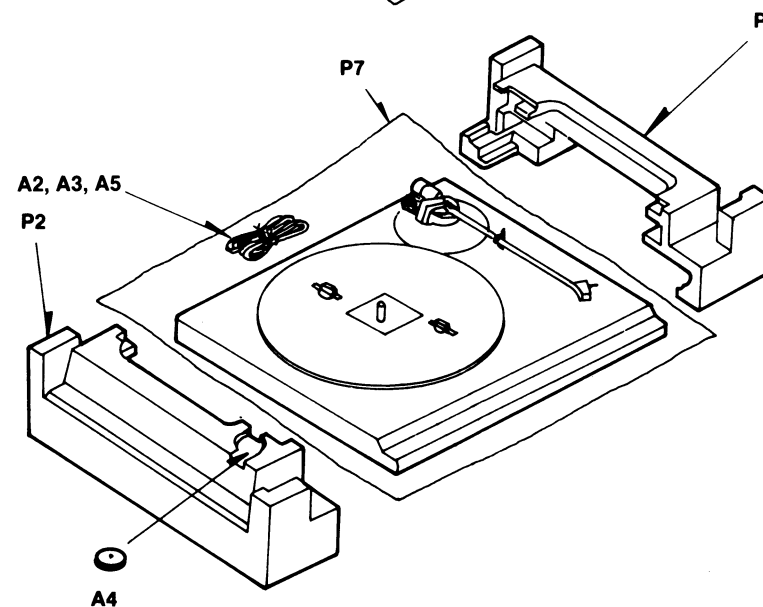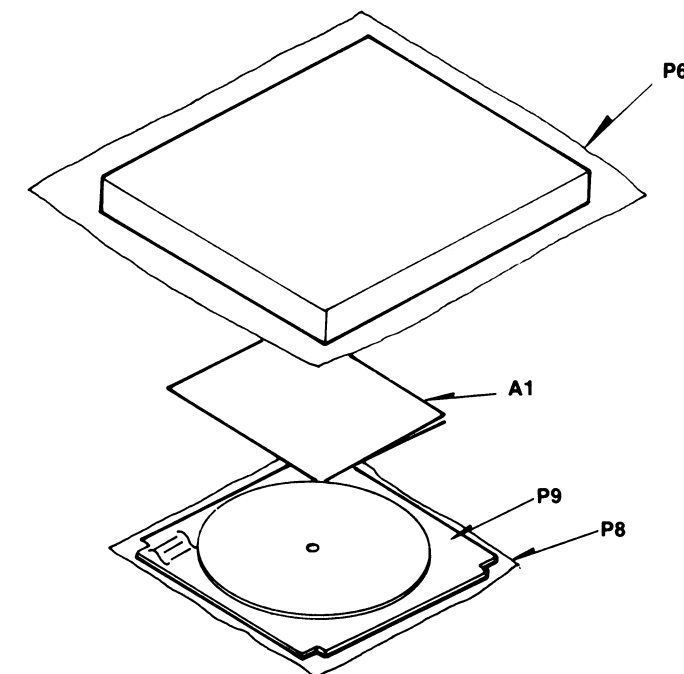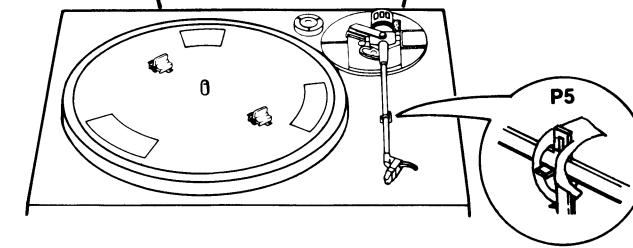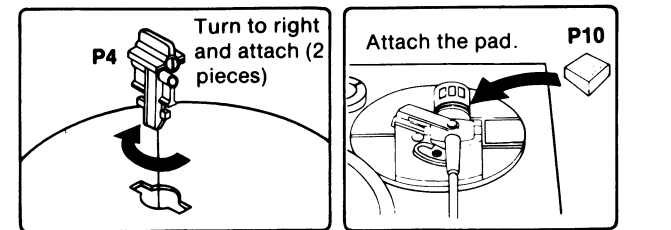

1. Place the unit (with cushions attached) as illustrated.
2. Fold the flaps according to the line marks.
3. Seal the top with adhesive tape.
 - Use gum tape or adhesive cloth tape of 50mm wide at least.
4. For the edges, first fold the flap "a" and then flap "b", and staple. Remember to staple only flap "b". (Use 15 or 16mm staple.)

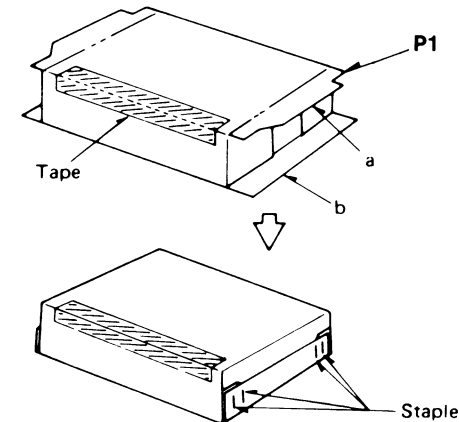

- Stapling positions are shown below.

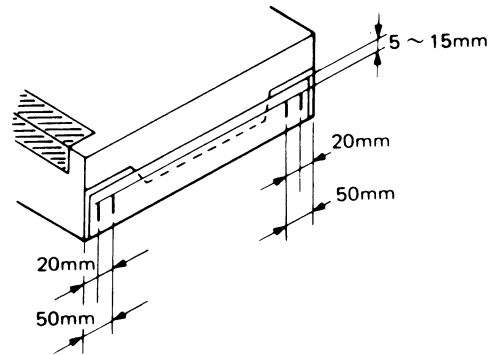

Service Manual

DIRECT DRIVE
Automatic Turntable System

Turntable System

SL-DD33

Color

(S) Silver Type
(K) Black Type

Color	Areas
(S) (K)	[PA] ... Far East PX.
(S) (K)	[PE] ... European Military.
(S) (K)	[PC] ... European Audio Club.

Please use this manual together with the service manual for Model No. SL-DD33, Order No. HAD8605505C0.

CHANGES

■ CHANGES IN REPLACEMENT PARTS LIST

Note: • Mentioned in this parts list are only those parts different from Model SL-DD33 for destination [XA] area; all other parts are same as for SL-DD33 for destination [XA] area.

Ref. No.	Change of Part No.		Part Name & Description	Per Set (Pcs.)	Remarks
	[XA]	[PA, PE, PC]			
CABINET AND CHASSIS PARTS					
17	SGTB68	SGTB66	Name Plate	1	Change
TONEARM PARTS					
42	EPC-P30S	EPC-P30AK	★ Cartridge	1	Change
43	EPS-30CS	EPS-30ES	★ Stylus	1	Change
ACCESSORIES					
A1	SQX53810	SQXLDD33-SPA	Instruction Book	1	Change

Technics

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

Panasonic Tokyo Office
Matsushita Electric Trading Co., Ltd.
6th Floor, World Trade Center Bldg.,
No. 4-1, Hamamatsu-cho 2-Chome, Minato-ku,
Tokyo 105, Japan

Printed in Japan
860700850 © HS

SL-DD33